

عربي  
ENGLISH



ENGLISH  
عربي

دليل مستخدم  
LG-C305

USER GUIDE  
LG-C305



CE0168 ①

[www.lg.com](http://www.lg.com)

P/NO : MMBB0392928 (1.0)



CE0168 ①

[www.lg.com](http://www.lg.com)

P/NO : MMBB0392928 (1.0)

Bluetooth QD ID B016739

## دليل مستخدم LG-C305 - العربية

سيساعدك هذا الدليل على إدراك كيفية استخدام هاتفك المحمول الجديد. سيوفر لك شرحاً مفيداً للميزات الموجودة على هاتفك.


قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.



## إرشادات لاستخدام آمن وفعال

- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كغ وهو حد مقسّم على نحو متناسب إلى 10 غرامات من النسيج العضوي.
- تبلغ أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASY4 للاستخدام على الأذن 1.20 واط/كيلوجرام (10 جرام). وعند الحمل على الجسد تبلغ 0.663 واط/كيلوجرام (10 جرام).
- معلومات بيانات SAR للمقيمين في بلدان/مناطق تتبنى حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE). وهو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.

### العناية بالمنتج وصيانتته

 تحذير: استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

### التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول LG-C305 هذا بحيث يفي بمتطلبات السلامة السارية المتعلقة بالتعرّض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمّن هوامش سلامة مصمّمة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

• تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.

• وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG. فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.

- لا تقوم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

## تشغيل فعال للهاتف

### الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك، تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.

## إرشادات لاستخدام آمن وفعال

### تجنّب إلحاق الضرر بسمّك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمّك. ونوصي بالتالي بالأا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

### مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتبع الأنظمة أو القوانين.

### مناطق تتسم أجواؤها بالقابلية

#### للانفجار

• لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.  
• لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.  
• لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

### في الطائرة

• باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.  
• أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.

• قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

### السلامة على الطرقات

تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.  
• لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.  
• عليك دوماً تركيز كامل الانتباه على القيادة.  
• استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.  
• توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.  
• قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.  
• عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.  
• إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فنأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

• لا تستعمله في الطائرة من دون الحصول على إذن من قبل الطاقم.

## الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

## مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافةً. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

## معلومات حول البطارية والعناية بها

• لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى. ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.

• استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.

• لا تعمل على تفكيك البطارية أو تعريضها لحادث تماس.

• حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

• استبدل البطارية عندما يصبح أداءها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.

• أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.

• لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة. مثل الحمام.

• لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.

• هناك خطر انفجار. إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.

• تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلّص منها كمهملات منزلية.

• إذا كنت بحاجة إلى استبدال البطارية. خذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للحصول على المساعدة.

• قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.

• تعتمد فترة عمل البطارية الفعلية على تكوين الشبكة واعدادات المنتج والنقوش المستخدمة والبطارية و الظروف البيئية.

## التعرّف على هاتفك



### المفاتيح الجانبية

- في وضع الانتظار: يتيح لك هذا الخيار التحكم بمستوى صوت الرنين.
- أثناء المكالمات: ضبط مستوى صوت سماعة الأذن
- أثناء تشغيل موسيقى MP3: ضبط مستوى الصوت



### الشاحن/موصل كبل USB


تلميح: يرجى التأكد من تشغيل الهاتف، ومن إدخال بطاقة الذاكرة وأن الهاتف في وضع الخمول قبل توصيل كبل USB ذي التخزين الكبير السعة.



### سماعة الرأس



### عدسة الكاميرا

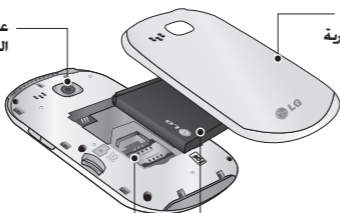

### غطاء البطارية

### حامل بطاقة SIM

### حزمة البطارية

# تثبيت بطاقة SIM و البطارية

## 1 نزع غطاء البطارية

اضغط على مزلاج تحرير غطاء البطارية.



## 2 إخراج البطارية

أرفع الحافة السفلى للبطاقة وقم بإخراجها بتأنٍ من حجرتها.



⚠ تحذيرة: لا تقم باستبدال بطاقة SIM أو إزالتها أثناء استخدام الهاتف أو عندما يكون قيد التشغيل فذلك قد يؤدي إلى فقدان البيانات أو إلحاق الضرر ببطاقة SIM.



## 4 تركيب البطارية

قم أولاً بإدراج الجهة العليا للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة موصلات البطارية مع الأطراف الموجودة على الهاتف. اضغط على جهة البطارية السفلى إلى الأسفل حتى تستقر في مكانها.



⚠ تحذيرة: لا تخرج البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

## 3 تثبيت بطاقة SIM


أدخل بطاقة SIM داخل حامل بطاقة SIM. تأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإخراج بطاقة SIM، اسحبها بلطف في الاتجاه العكسي.

## 5 إعادة غطاء البطارية إلى مكانه



## 6 شحن الهاتف

اسحب لفتح غطاء مقبس الشاحن الموجود في جانب الهاتف LG-C305. أدخل الشاحن وقم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف LG-C305 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

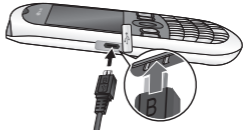


## بطاقة الذاكرة

### تركيب بطاقة ذاكرة

يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة.

**ملاحظة:** بطاقة الذاكرة هي ملحق اختياري.

حرك بطاقة الذاكرة إلى داخل الفتحة. حتى تستقر في مكانها. تأكد من كون ناحية الموصلات الذهبية موجهة نحو الأسفل.

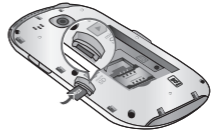

### إخراج بطاقة ذاكرة

قم بإخراج بطاقة الذاكرة بعناية وذلك بدفعها بلطف إلى الهاتف وتحريرها بسرعة.

### تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم تكن بطاقة الذاكرة مهيأة، فعليك تهيئتها قبل أن تبدأ باستخدامها.

- 1 في الشاشة الرئيسية اضغط على القائمة ثم حدد إعدادات.
- 2 اختر الجهاز ومعلومات الذاكرة. ثم حدد الذاكرة الخارجية.
- 3 اضغط على تهيئة. وأدخل كلمة المرور التي تم تعيينها إلى 0000 كضبط افتراضي. ستتم تهيئة بطاقة الذاكرة وتصبح جاهزة للاستخدام.
- 4 لعرض الحافظات الجديدة التي تمت تهيئتها على هاتف LG-C305 اضغط على القائمة وحدد أشياءي. اختر بطاقة الذاكرة الخاصة بي.

**⚠ تحذير:** عندما تقوم بتهيئة بطاقة الذاكرة الخاصة بك، سيتم مسح كل محتواها. إذا لم تكن ترغب في فقدان البيانات الموجودة على بطاقة الذاكرة، فعليك إجراء نسخة احتياطية عنها أولاً.

## الشاشة الرئيسية الخاصة بك

الوصف	الرمز
الجدولة	
رسالة جديدة	
رسالة صوتية جديدة	
بريد إلكتروني جديد	
النمط عادي قيد الاستخدام	
النمط صامت قيد الاستخدام	
النمط خارجي قيد الاستخدام	
النمط سماعة الرأس قيد الاستخدام	
فترة العمل المتبقية للبطارية	
البطارية فارغة	
الذاكرة الخارجية	
راديو FM	
تشغيل الموسيقى MP3	

### شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية، وكذلك إعلامك ما إذا كان بلوتوث نشطاً.

يشير الجدول أدناه إلى معنى الرموز التي يربح أن تراها في شريط الحالة.

الوصف	الرمز
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
GPRS متوفر	
EDGE متوفر	
وضع الرحلات الجوية منشط	
المكالمات محوطة	
خدمة التجوال	
بلوتوث منشط	
خدمة WAP متصلة	
تم تعيين منبه	

## اتصال

### إجراء مكالمة

اضغط على  أو حدد رفض لرفض مكالمة واردة.

**ملاحظة:** في المكالمة عندما يتم تنشيط مكبر الصوت، يعرض رمز مكبر الصوت مع علامة الجمع باللون الأحمر، وعندما يتم إلغاء تنشيط مكبر الصوت يعرض رمز مكبر الصوت من دون علامة الجمع باللون الأحمر.

1 تأكد من أن هاتفك قيد التشغيل.

2 يمكنك استخدام لوحة المفاتيح. لحذف رقم اضغط على السهم الخلفي.

3 اضغط على  لبدء المكالمة.

4 لإنهاء المكالمة، اضغط على .

**تلميح!** لإدخال + عند إجراء مكالمة دولية، اضغط باستمرار 0.


### الاتصال السريع

يمكنك تعيين رقم اتصال سريع لجهة اتصال تتصل بها بشكل متكرر.

1 اضغط على القائمة لفتح القائمة الرئيسية. حدد دليل الهاتف. ثم حدد الخيار والاتصالات السريعة.

2 تم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1 ولا يمكنك تغيير ذلك. حدد أي رقم آخر سواء باستخدام مفاتيح التنقل وتحديد تعيين أو بضغط مفتاح الرقم الفعلي وتحديد تعيين.

3 يفتح دليل الهاتف. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم باستخدام مفاتيح التنقل. ثم اضغط على تحديد.

لطلب رقم اتصال سريع، اضغط باستمرار على الرقم المعين حتى ظهور اسم جهة الاتصال على الشاشة، سوف تبدأ المكالمة تلقائياً ولا حاجة إلى الضغط على .

### إجراء مكالمة من جهات الاتصال


من السهل الاتصال بأي شخص قمت بتخزين رقمه في دليل الهاتف.

1 اضغط على القائمة لفتح القائمة الرئيسية. حدد دليل الهاتف.

2 باستخدام لوحة المفاتيح، قم بإدخال الحرف الأول من جهة الاتصال التي ترغب في الاتصال بها وقم بالتمرير إلى دليل الهاتف.

3 اضغط على  لبدء المكالمة.

### الرد على مكالمة ورفضها

عندما يرن الهاتف، اضغط على قبول أو اضغط على  للرد على المكالمة.

أثناء رنين الهاتف يمكنك الضغط على صامت لكتم صوت الرنين. يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير نمط الهاتف إلى صامت أثناء حضور اجتماع.

## عرض سجلات المكالمات

اضغط على القائمة وحدد السجلات.

### كل السجلات - عرض قائمة كاملة

تتضمّن كل المكالمات الصادرة والمكالمات المستلمة والمكالمات التي لم يرد عليها بالإضافة إلى الرسائل المرسلة والمستلمة.

**المكالمات فقط** - عرض قائمة بكل الأرقام التي طلبتها واستلمتها ولم ترد عليها.

**الرسائل فقط** - عرض قائمة بكل الأرقام التي قمت بإرسال الرسائل إليها أو استلامها منها.

**سجلات لم يرد عليها** - عرض قائمة بأي مكالمات لم ترد عليها.

**السجلات الصادرة** - عرض قائمة بكل الأرقام التي طلبتها.

**السجلات الواردة** - عرض قائمة بكل الأرقام التي استلمتها.

**تلميح!** في أي سجل مكالمات حدد

الخيارات ثم حذف لحذف العناصر المحددة.

## استخدام تحويل المكالمات

**1** اضغط على القائمة وحدد الإعدادات ثم المكالمات.

**2** حدد تحويل المكالمات.

**3** اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات. عندما يكون الخط مشغولاً.

أو عند عدم الرد أو عندما لا يكون الوصول إليك ممكناً.

**4** اختر التنشيط وحدد ما إذا كنت تريد أن يتم التحويل إلى بريدك الصوتي. أو رقم آخر أو الأرقام الأخيرة المحولة.

**5** أدخل رقم التحويل أو حدد بحث للاستعراض بحثاً عن رقم التحويل.

**ملاحظة:** يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

**تلميح!** لايقاف تشغيل تحويل كل المكالمات. اختر تحويل المكالمات من قائمة الاتصال ثم حدد الخيارات وإلغاء تنشيط الكل.

## استخدام حظر المكالمات

**1** اضغط على القائمة. وحدد الإعدادات ثم المكالمات.

**2** حدد حظر المكالمات.

**3** اختر أحد الخيارات أو كلها:

كل المكالمات الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة

باستثناء المحلية

المكالمات الواردة

الواردة عند السفر

**4** أدخل كلمة مرور حظر المكالمات. تحقق من توفر الخدمة مع مشغّل الشبكة.

المكالمات أو المكالمات الواردة من مجموعات أو جهات اتصال معينة. أو من أرقام غير مسجلة (الأرقام غير المضمّنة في قائمة جهات الاتصال) أو كل الاتصالات بدون معرف متصل.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم. (يعتمد هذا الأمر على موفر الشبكة.)

معاودة الاتصال التلقائي - يتيح لك هذا الخيار تعيين وظيفة معاودة الاتصال التلقائي عند فشل محاولة الاتصال. مذكر الدقائق - يحدد ما إذا تود إطلاق نغمة كل فترة دقيقة 1 أثناء إجراء مكالمة.

وضع الرد بلوتوث - اختر كيفية الرد على مكالمة عند استخدام سماعة رأس بلوتوث. حدد لا يدوي أو الهاتف.

حفظ رقم جديد - بتحديد هذا الخيار سيتم حفظ الأرقام غير الموجودة في جهات الاتصال على هاتفك عند إنهاء المكالمة.

كلفة المكالمات - عرض الكلفة التي تم تطبيقها على مكالماتك الأخيرة أو كل المكالمات. هذه الخدمة تعتمد على الشبكة. وبعض مشغلي الشبكات ليس باستطاعتهم دعم هذه الخدمة.

**تلميح!** حدد أرقام الاتصال المحددة من القائمة جاري الاتصال لتشغيل وجميع قائمة بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من المشغل. عند التشغيل. وحدها الأرقام المضمّنة في قائمة أرقام الاتصال المحدد هي التي يمكن طلبها من هاتفك.

## تغيير إعدادات المكالمات

1 اضغط على القائمة. وحدد الإعدادات ثم المكالمة.

2 من هنا يمكنك تحرير إعدادات الخيارات التالية:

تحويل المكالمات - اختر ما إذا كنت تريد تحويل كل مكالماتك.

حظر المكالمات - حدد المكالمات التي ترغب في حظرها.

وضع مكالمة قيد الانتظار - لكي يتم تنبيهك عند وجود مكالمة قيد الانتظار. رقم اتصال محدد - اختر قائمة بالأرقام التي يمكن طلبها من هاتفك.

رسالة اعتذار - قبل رفض مكالمة واردة. يمكنك استخدام "رسائل اعتذار" لإرسال رسالة تفسر فيها سبب عدم استلام المكالمة الواردة.

إعدادات رفض المكالمة - حدد إيقاف التشغيل أو التشغيل واختار رفض كل

# الكاميرا

## التقاط صورة سريعة

1 اضغط على القائمة وحدد الكاميرا

والكاميرا.

2 عندما تركز الكاميرا على موضوع الصورة.

حدد رمز الالتقاط في وسط الشاشة

السفلي واضغط على موافق لالتقاط

صورة.

## بعد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة. يظهر

اسم الصورة في اعلى الشاشة مع خمسة

رموز في الجانب السفلي.

الألبوم - عرض الصور وملفات الفيديو التي

قمت بالتقاطها في ألبومك.

إرسال - إرسال الصورة كرسالة. أو بريد

إلكتروني أو عبر بلوتوث.

جديدة - التقاط صورة أخرى على الفور.

ضبط كد - استخدام الصورة كخلفية

أو كصورة جهة اتصال أو في صورة بدء

التشغيل أو صورة إيقاف التشغيل.

حذف - حذف الصورة التي قمت بالتقاطها.

يظهر محدد المنظر من جديد.

# كاميرا الفيديو

## التقاط فيديو سريع

- 1 اضغط على القائمة وحدد الكاميرا واختر كاميرا الفيديو. سيظهر محدد المنظر في كاميرا الفيديو على الشاشة.
- 2 قم بتركيز الكاميرا لتسجيل المشاهد التي تريد.
- 3 حدد رمز التسجيل في وسط الشاشة السفلي واضغط على موافق لالتقاط فيديو. يظهر تسجيل في أسفل محدد المنظر. اضغط  مجدداً لإيقاف التسجيل.

## بعد الانتهاء من التقاط الفيديو

- ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط.
- بعد تسجيل مقطع فيديو. يمكنك التحقق من القائمة كما يلي:
- الألبوم - عرض الصور وملفات الفيديو التي قمت بالتقاطها في ألبومك.
  - تشغيل - تشغيل الملف.
  - جديد - اضغط لالتقاط فيديو آخر على الفور.
  - إرسال - إرسال الفيديو كرسالة أو بريد إلكتروني أو عبر بلوتوث.
  - حذف - حذف الفيديو الذي قمت بالتقاطه. يظهر محدد المنظر من جديد.

# Wi-Fi

يتيح لك مدير التشغيل اللاسلكي إدارة اتصالات إنترنت عبر Wi-Fi (شبكة LAN اللاسلكية) على جهازك.

يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً. Wi-Fi أسرع وذات نطاق أوسع من تقنية بلوتوث اللاسلكية، وبالتالي يمكن استخدامه لإرسال رسائل بريد إلكتروني سريعاً ولاستعراض إنترنت.

ملاحظة: LG-C305 يدعم WEP، تشفير WPA-PSK/2، وليس EAP، أو تشفير WPS. إذا قام موفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملء المفتاح في الإطار المنبثق.

إذا لم يتم تعيين التشفير، فلن يظهر الإطار المنبثق هذا، يمكنك الحصول على المفتاح من موفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

## الموسيقى

### مشغل MP3

الأنواع - يتيح لك رؤية كل المسارات التي تم فرزها بحسب النوع.

تبديل كل الاغاني - يتيح لك تشغيل كل الأغاني في ترتيب عشوائي.

يكون مشغل الموسيقى مضمناً في الهاتف LG-C305 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك.

#### ملاحظة:

- قبل استخدام مشغل الموسيقى، ستحتاج إلى نقل ملف الموسيقى إلى الهاتف.
- يعتمد مشغل الموسيقى أنواع الترميز التالية: MP3، WMA و AAC. لا يعتمد مشغل الموسيقى بالضرورة كل ميزات تنسيقات الملف وتغييراتها.

#### نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة. لنقل الموسيقى باستخدام بلوتوث:

1 تأكد من تشغيل بلوتوث على الجهازين ومن كونهما مرتبطين بالنسبة إلى بعضهما البعض.

2 حدّد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.

3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.

4 يجب أن يظهر الملف في كل الأغاني.

للوصول إلى مشغل الموسيقى، اضغط على القائمة وحدد الموسيقى ومشغل MP3.

من هنا يمكنك الوصول إلى:

تم تشغيلها مؤخراً - عرض كل الأغاني التي قمت بتشغيلها مؤخراً.

كل الأغاني - يحتوي على كل الأغاني المتوفرة في هاتفك.

قوائم التشغيل خاصتي - تحتوي على قوائم التشغيل كلها التي أنشأتها.

الفنانون - يتيح لك رؤية كل المسارات التي تم فرزها بحسب أسماء الفنانين.

الألبومات - يتيح لك رؤية كل المسارات التي تم فرزها بحسب الألبوم.

#### تشغيل أغنية

1 اضغط على القائمة وحدد الموسيقى. ثم اختر مشغل MP3.

2 اختر كل الأغاني ثم حدد الأغنية التي تريد تشغيلها. تحديد .

3 حدد  لإيقاف الأغنية مؤقتاً.

4 حدد  للانتقال إلى الأغنية التالية.

5 حدد  للانتقال إلى الأغنية السابقة.

6 حدد الرجوع لإيقاف الموسيقى والعودة إلى قائمة كل الأغاني.

**التمثيل المرئي** - حدد تأثيراً مرئياً.  
**معلومات الملف** - يمكنك عرض معلومات تتعلق بملف الموسيقى الذي تستمع إليه.  
**إضافة إلى قائمة التشغيل** - إضافة المسار الحالي إلى قائمة التشغيل.

**إرسال عبر** - إرسال الأغنية كرسالة أو بريد إلكتروني أو عبر بلوتوث.

**ضبط ك** - استخدم الأغنية ك نغمة رنين، نغمة رسالة، بدء التشغيل أو إيقاف التشغيل.

**تلويح!** لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى. استخدم مفاتيح مستوى الصوت على الجانب الأيمن من الهاتف.

**ملاحظة:** يمكن أن تكون حقوق النشر للملفات الموسيقي محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر، قبل تنزيل أو نسخ الملف. يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

## استخدام خيارات أثناء تشغيل الموسيقى

حدد الخيارات واختر من:

**تصغير** - إخفاء شاشة مشغّل الموسيقى بحيث يمكنك الاستمرار في استخدام الهاتف بشكل عادي أثناء تشغيل الموسيقى.  
**إعادة** - يمكن الاستماع إلى الموسيقى إعادة.  
**عشوائي** - يشغّل المسارات بترتيب عشوائي.  
**المعادل** - يمكنك عرض المعادل على الشاشة.

## البريد الإلكتروني

### إرسال بريد إلكتروني باستخدام

#### حسابك الجديد

لإرسال/استلام رسالة بريد إلكتروني. عليك إعداد حساب بريد إلكتروني.

#### 1 اضغط على القائمة. حدد البريد

الإلكتروني واختر الحساب الذي تريد استخدامه.

#### 2 اختر كتابة بريد إلكتروني فيفتح بريد

الالكتروني جديد.

#### 3 اكتب موضوعاً في الحقل المخصص ثم

اضغط على موافق.

#### 4 أدخل رسالتك باستخدام لوحة المفاتيح.

### استرداد بريدك الإلكتروني

#### 1 اضغط على القائمة وحدد البريد

الإلكتروني.

#### 2 حدد الحساب الذي تريد استخدامه.

#### 3 حدد صندوق الوارد.

#### 4 اختر التحديث فيتصل هاتفك بحساب

البريد الإلكتروني ويسترد رسائلك الجديدة.

### حافظات الرسائل

اضغط على القائمة وحدد البريد الإلكتروني.

يجب أن تفسر بنية الحافظة المستخدمة في الهاتف LG-C305 نفسها بنفسها.

#### كتابة بريد إلكتروني - إنشاء رسالة جديدة

خاصة بك.

#### صندوق الوارد - توضع كل رسائل البريد

الإلكتروني التي تستلمها في صندوق الوارد.

من هنا يمكنك الرد. الأرسال والكثير غير ذلك.

#### المسودات - إذا لم يكن لديك الوقت الكافي

للانتهاء من كتابة رسالة بريد إلكتروني.

فيمكنك أن تحفظ هنا ما كتبته حتى الآن.

#### المرسلة - توضع نسخ لكل رسائل البريد

الإلكتروني التي ترسلها في حافظة العناصر

المرسلة.

#### صندوق الصادر - عبارة عن حافظة تخزين

مؤقت لرسائل البريد الإلكتروني فيما يكون

إرسالها جارياً أو يتم تخزين الرسائل التي

فشلت عملية إرسالها هنا.

#### المهملات - توضع كل رسائل البريد

الالكتروني التي تزيلها في المهملات.

## تغيير اعدادات البريد الإلكتروني

1 اضغط على القائمة. واختر البريد الإلكتروني.

2 حدد الحساب الذي تريد استخدامه.

3 حدد اعدادات ويمكنك بعد ذلك تكييف الضوابط التالية:

حسابات البريد الإلكتروني - يمكنك إعداد حساب بريد إلكتروني.

السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل "تأكيد القراءة".

طلب الرد على البريد الإلكتروني - اختر ما إذا كان يجب طلب رسائل تأكيد القراءة.

الفواصل الزمني للاسترداد - اختر مدى إعادة قيام LG-C305 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

إظهار عدد الرسائل - اختر عدد رسائل البريد الإلكتروني التي تود إظهارها في آن واحد.

تضمين الرسالة في الارسال والرد - اختر تضمين الرسالة الأصلية في ردك أو عدم تضمينها.

تضمين مرفقات - اختر تضمين المرفق الأصلي أو عدم تضمينه.

## استرداد تلقائي أثناء التجوال -

اختر ما إذا كنت ترغب في استرداد رسائلك تلقائياً أثناء نواجذك في الخارج أو عدم استردادها.

إعلام بورود بريد إلكتروني جديد - اختر ما إذا كان يجب أو لا يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - قم بإنشاء توقيع على البريد الإلكتروني وشغل هذه الميزة.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

الحجم الأقصى للبريد الإلكتروني - اختر حجم رسائل البريد الإلكتروني التي تود استردادها في آن واحد.

حجم البريد المرسل - اختر حجم رسائل البريد الإلكتروني التي تود إرسالها في آن واحد.

# راديو FM

## استخدام راديو FM

تتوفر في جهاز LG-C305 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة والاستماع إليها أثناء التنقل.

## الاستماع إلى الراديو

1 اضغط على القائمة وحدد الموسيقى. ثم

اختر راديو FM.

2 حدد رقم القناة للمحطة التي تريد الاستماع إليها.

## البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. للضبط تلقائياً:

1 اضغط على القائمة وحدد الموسيقى.

2 حدد راديو FM ثم الخيارات.

3 حدد بحث تلقائياً. تظهر رسالة تأكيد. حدد نعم، فيتم العثور على المحطات تلقائياً وتخصيصها إلى قناة في هاتفك.

**ملاحظة:** إذا كنت في منطقة ذات

استقبال راديو رديء، فقد تجد صعوبة في الاستماع إلى الراديو.

ستحتاج إلى إدخال سماعات الرأس لكي تتمكن من الاستماع إلى الراديو. قم بإدخال سماعات الرأس في المقبس المخصص لها.

**ملاحظة:** يمكنك أيضاً ضبط إحدى

المحطات يدوياً باستخدام **■** و **■** الذي يظهر في وسط الشاشة. إذا ضغطت باستمرار على **■** و **■**، فسيتم العثور على المحطات تلقائياً.

**ملاحظة:** يدعم الهاتف LG-C305 FM

لاسلكي. لا يحتاج المستخدم إلى إدخال سماعة الأذن للاستماع إلى راديو FM في ظل الظروف العادية. في المناطق حيث تكون إشارة راديو FM ضعيفة، يمكن أن تتراجع الحساسية حسب وضع اللاسلكي والهوائي. لذلك يُنصح بإدراج سماعة الأذن للحصول على جودة فضلى ومُحسَّنة لـ FM.

# المتصفح

## الوصول إلى ويب

يمكنك تشغيل المتصفح WAP والوصول إلى الصفحة الرئيسية للنمط الذي تم تنشيطه على إعدادات المتصفح. يمكنك أيضاً الدخول يدوياً إلى عنوان محدد مواقع المعلومات URL والوصول إلى صفحة WAP المقترنة.

**1** اضغط على القائمة وحدد المتصفح.

**2** للانتقال مباشرةً إلى صفحة المتصفح

الرئيسية، حدّد الصفحة الرئيسية.

كطريقة بديلة، حدد إدخال العنوان واكتب

عنوان URL. يتبعه الاتصال.

**ملاحظة:** يتم فرض رسم إضافي عند الاتصال بهذه الخدمات وتنزيل المحتوى. اتصل بموفر الشبكة للتحقق من رسوم البيانات.

## الرسائل

### الرسائل

يتضمّن الهاتف LG-C305 وظائف متعلّقة برسائل SMS (خدمة الرسالة القصيرة). ورسائل MMS (خدمة رسالة الوسائط المتعدّدة). وكذلك رسائل خدمة الشبكة. لاستخدام هذه الوظائف، اضغط على القائمة وحدد الرسائل.

### إرسال رسالة

- 1 اضغط على القائمة. حدد الرسائل واختر كتابة رسالة.
- 2 افتح محرر رسائل جديدة. يجمع محرر الرسائل SMS وMMS في وضع بديهي واحد يسهل التبديل بينها. الضبط الافتراضي لمحرر الرسائل هو وضع SMS. أدخل رسالتك باستخدام لوحة المفاتيح.
- 3 راجع إدخال النص في الجانب الأيمن لمزيد من المعلومات حول كيفية إدخال نص.
- 4 حدد الخيارات واختر إدراج لإضافة صورة أو فيديو أو صوت أو نموذج أو رمز تعبيري أو اسم ورقم أو شريحة جديدة أو موضوع أو المزيد (بطاقة عمل/جدول/مذكرة/ مهمة/بطاقة العمل الخاصة بي).
- 5 اختر إرسال إلى.
- 6 اختر جهة اتصال من قائمة جهات الاتصال أو أدخل رقم هاتف.
- 7 حدد إرسال.



تحذير: تمت إضافة صورة، صوت، فيديو، شريحة جديدة، موضوع، بطاقة عمل، جدول أو بطاقة العمل الخاصة بي إلى معدّل الرسالة. سيتم تحويلها تلقائياً إلى وضع MMS وسيفرض رسم عليك وفقاً لذلك.

### إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف. فتخزين الأسماء في جهات الاتصال مثلاً. وكتابة رسالة. وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب إدخال النص. تتوفر أساليب إدخال النص التالية على الهاتف: وضع ABC ووضع 123.

**ملاحظة:** قد تتيح بعض الحقول وضع إدخال واحد فقط (مثل رقم الهاتف في حقول جهات الاتصال).

### وضع الرسائل الفورية (IM) باستخدام لوحة المفاتيح

إذا رغبت في إدخال نص، مثلاً عند كتابة رسالة، تتغير لوحة المفاتيح بصورة افتراضية إلى وضع ABC. إذا كنت تدخل رقماً أثناء إجراء مكالمة مثلاً، فستنتقل مفاتيح أرقام لوحة المفاتيح افتراضياً إلى الأرقام.

## حافظات الرسائل

اضغط على القائمة وحدد الرسائل.

إن بنية الحافظة المستخدمة في الهاتف

LG-C305 تفسر نفسها بنفسها.

كتابة رسالة - إنشاء رسالة جديدة خاصة بك.

صندوق الوارد - توضع في صندوق الوارد كل

الرسائل التي تتلقاها. من هنا يمكنك الرد.

والارسال والكثير غير ذلك.

عرض المحادثات - يمكنك عرض الرسائل

الخاصة بكل رقم.

المسودات - إذا لم يكن لديك الوقت الكافي

للانتهاء من كتابة رسالة، فيمكنك أن تحفظ

هنا ما كتبته حتى الآن.

صندوق الصادر - عبارة عن حافظة لتخزين

الرسائل مؤقتاً فيما يكون إرسالها جارياً.

المرسلة - توضع نسخ لكل الرسائل التي

ترسلها في حافظة العناصر المرسلة.

الرسالة الفورية - يتيح لك إرسال رسالة

فورية واستلامها في أي وقت.

حافظاتي - يمكنك نقل رسائل من صندوق

الوارد أو المرسلة إلى حافظاتي. يمكنك

أيضاً نقل هذه الرسائل الخاصة بحافظاتي

إلى صندوق الرسائل الأصلي.

النماذج - لائحة برسائل مكتوبة مسبقاً.

مفيدة لإجراء رد سريع.

## إدارة الرسائل

1 اضغط على القائمة. حدد الرسائل واختر

صندوق الوارد.

2 حدد الخيارات ثم اختر:

الرد - إرسال رد إلى الرسالة المحددة.

الارسال - إرسال الرسالة المحددة إلى

شخص آخر.

كتابة رسالة - اكتب رسالة جديدة أو بريد

إلكتروني جديد بغض النظر عن الجهة

التي أرسلت إليك الرسالة.

المكالمة - الاتصال بالشخص الذي أرسل

إليك الرسالة.

حفظ رقم - حفظ رقم الرسالة.

حذف - حذف الرسالة المحددة.

نسخ ونقل - اختر نسخ الرسالة

المحددة أو نقلها إلى بطاقة SIM أو

الهاتف وخاصةً نقل الرسالة المحددة إلى

حافظاتي.

وضع الاختيار - تحديد رسالة أو الكل.

البحث - يمكنك العثور على الرسائل عبر

الكلمة الأساسية أو المرسل.

عامل التصفية - يعرض الرسائل وفقاً

لأنواع الرسالة التي ترغب بها.

حذف الكل - حذف الرسائل كلها.

معلومات الرسالة - يمكنك التحقق من

معلومات الرسالة وفقاً للنوع والموضوع

ومصدر الإرسال وتاريخ الإرسال.

## الرسائل

أنواع الرسائل - تحويل النص إلى صوت، أو فاكس، أو 400.X أو بريد إلكتروني.

تشفير الحروف - اختر طريقة ترميز الحروف، ويؤثر هذا الأمر على حجم رسالتك وبالتالي على تكاليف البيانات.

إرسال النص الطويل ك- اختر ما إذا كنت ترغب في إرسال رسالتك ك-SMS أو MMS عندما تقوم بإدخال نص يتجاوز طوله طول صفحتين في حقل الرسالة.

### تغيير اعدادات رسائل الوسائط

#### المتعددة

اضغط على القائمة، وحدد الرسائل، ثم اختر الضوابط ورسالة وسائط متعددة، يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر تنزيل رسائل الوسائط المتعددة تلقائياً أو يدوياً وهذا يتوقف على ما إذا كنت موجوداً في المنزل أو متجولاً.

تقرير الاستلام - اختر طلب تقرير الاستلام أو السماح به.

تقرير الرد - اختر طلب تقرير الرد أو السماح بها.

الأولوية - اختر مستوى أولوية رسالة الوسائط المتعددة.

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.

مدة الشريحة - اختيار مدة ظهور الشرائح على الشاشة.

إذا شاهدت الرسالة لا توجد مساحة لرسالة SIM فهذا يعني أنه عليك حذف بعض الرسائل من صندوق الوارد لتوفير مساحة.

إذا شاهدت الرسالة لا توجد مساحة كافية للرسائل فيمكنك حذف إما الرسائل أو الملفات المحفوظة لتوفير مساحة.

**تلميح!** أثناء عرض الرسالة المستلمة، اضغط على الخيارات وحدد رد نموذج، ويعتبر هذا الأمر مفيداً إذا رغبت في رد الرسالة خلال اجتماع.

**تلميح!** عند رؤية الرسالة، اضغط على الخيارات وحدد استخراج، يمكنك استخراج معلومات مثل رقم، عنوان بريد إلكتروني أو عنوان ويب من الرسالة المحددة.

### تغيير اعدادات الرسائل النصية

اضغط على القائمة، حدد الرسائل، ثم اختر الضوابط و الرسالة النصية، يمكنك إدخال تغييرات على:

رقم مركز الرسائل - أدخل تفاصيل مركز الرسائل.

تقرير الاستلام - اختر تلقي تأكيد باستلام رسالتك.

مدة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

حفظ الرسالة المرسلّة - يمكنك اختيار حفظ الرسالة التي أرسلتها.

عداد الرسائل - يمكنك التحقق من عدد الرسائل التي أرسلتها خلال فترة معيّنة. خدمة المعلومات - اختر حالة الاستلام والقنوات واللغة لرسائل المعلومات.

وضع الإنشاء - يتيح لك تحديد نوع المحتويات المعتمدة من قبل MMS. وقت الاستلام - يقوم بتكوين وقت تسليم الرسالة إلى المستلم. سيقوم مركز رسائل الوسائط المتعدّدة بتسليم الرسالة بعد مرور وقت التسليم.

مركز رسائل الوسائط المتعدّدة - يتيح لك تكوين معلومات الشبكة مثل مركز خدمة الوسائط المتعدّدة ونمط انترنت لإرسال رسالة وسائط متعدّدة.

### تغيير الضوابط الأخرى

اضغط على القائمة. حدد الرسائل واختر اعدادات ثم:

الرسالة النصية - يمكنك تكوين خيارات تتعلّق بالرسالة النصية.

رسالة الوسائط المتعدّدة - يمكنك تكوين خيارات تتعلّق برسالة وسائط متعدّدة.

البريد الصوتي - إضافة خدمة بريد صوتي جديدة. اتصل بمشغّل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - اختر استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق بهم.

## دليل الهاتف

أو لاستخدام طريقة أسرع بعض الشيء...

- 1 أدخل الرقم الذي ترغب بتخزينه واضغط على الخيارات.
- 2 اختر حفظ رقم. واختر إما جهة اتصال جديدة أو تحديث جهة اتصال.
- 3 أدخل المعلومات ذات الصلة وحدد تم.

### خيارات جهات الاتصال

هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال. إليك الطريقة التي تتيح لك الوصول إلى قائمة الخيارات واستخدامها.

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 حدد الخيارات لفتح قائمة الخيارات. من هنا يمكنك:

الرسالة - إرسال رسالة إلى جهة الاتصال.  
المكالمة - إجراء مكالمة صوتية مباشرة لجهة اتصال تختارها.

تحرير - تغيير أي من تفاصيل خاصة بجهة الاتصال.

حذف - حذف جهة الاتصال. حدد نعم إذا كنت متأكدًا.

جهة اتصال جديدة - إضافة جهة اتصال جديدة.

### البحث عن جهة اتصال

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 باستخدام لوحة المفاتيح. أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها.
- 3 للتمرير عبر جهات الاتصال وأرقامها المختلفة. استخدم مفاتيح التنقل.

أو، باستخدام الطريقة الأسرع بعض الشيء...

- 1 أدخل الرقم الذي ترغب في البحث عنه على الشاشة الرئيسية وحدد خيارات.
- 2 اختر البحث عن جهات اتصال في قائمة الخيارات.

### إضافة جهة اتصال جديدة

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 اضغط على الخيار وحدد جهة اتصال جديدة.
- 3 اختر ما إذا كنت تريد تخزين جهة الاتصال الجديدة على هاتفك أو بطاقة SIM.
- 4 أدخل المعلومات التي تريدها في الحقول المتوفرة وحدد تم.

**موقع التخزين** - اختر ما إذا كنت تريد إجراء عملية النقل أو النسخ إلى الهاتف أو بطاقة SIM (يتوقف هذا على الموقع الأصلي حيث قمت بحفظ جهة الاتصال).

**إرسال جهة الاتصال** - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر الإرسال كرسالة نصية أو رسالة MMS أو بريد إلكتروني أو عبر بلوتوث.

**وضع الاختيار** - اختر ما إذا كنت ترغب في تحديد أو إلغاء تحديد جهة اتصال.

**ترتيب بحسب** - فرز جهة اتصال بحسب ABC ↑ أو ABC ↓.

**الاتصالات السريعة** - يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

## إنشاء مجموعة

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 حدد المجموعات واختر الخيارات.
- 3 حدد مجموعة جديدة.
- 4 أدخل اسماً للمجموعة الجديدة.
- 5 اضغط على تم.

**ملاحظة:** إذا قمت بحذف مجموعة. فلن تفقد جهات الاتصال التي كان قد تم تعيينها إلى تلك المجموعة. بل ستبقى موجودة في جهات الاتصال لديك.

**تلميح!** يمكنك تحرير مجموعة موجودة عبر تحديدها وتحديد الخيارات. اختر تعيين الأعضاء إلى المجموعة من جهات الاتصال المتوفرة لديك. وحدد تحرير المجموعة أو حذف المجموعة.

## تغيير الأعدادات جهات الاتصال

- 1 اضغط على القائمة وحدد دليل الهاتف.
- 2 حدد الخيار واختر الضوابط. من هنا يمكنك تنظيم الضوابط التالية:  
عرض الاسم - كما يمكنك أن تختار إظهار الاسم الأول أولاً أو الاسم الأخير أولاً أو الاسم الأخير الاسم الأول.  
العرض والتخزين الرئيسي - اختر ما إذا كنت تريد تخزين جهات الاتصال على بطاقة SIM أو الهاتف. واختر أيضاً ما إذا كنت ترغب في عرض جهات الاتصال المحفوظة في الهاتف وUSIM، أو في الهاتف فقط أو في USIM فقط.  
نسخ الكل - نسخ جهات الاتصال من بطاقة SIM إلى الهاتف أو من الهاتف إلى بطاقة SIM.

## دليل الهاتف

**نقل الكل** - يعمل هذا الأمر بالطريقة نفسها التي يعمل فيها نسخ الكل. غير أن جهة الاتصال ستُحفظ فقط في الموقع الذي تم نقلها إليه. إذا نقلت جهة اتصال من بطاقة SIM إلى الهاتف فسيتم حذفها من ذاكرة بطاقة SIM.

**تصدير جهات الاتصال** - يمكنك حفظ بيانات دليل الهاتف كافةً الموجودة في الهاتف في بطاقة ذاكرة خارجية على شكل vcard.

**استيراد جهات الاتصال** - يمكنك استعادة بيانات دليل الهاتف كافةً الموجودة في بطاقة ذاكرة خارجية إلى ذاكرة الهاتف على شكل vcard.

**إرسال كل جهات الاتصال عبر بلوتوث** - يرسل هذا الأمر معلومات كافة جهات الاتصال إلى هاتف آخر عبر بلوتوث.

## المزيد

### ضبط المنبه

1 اضغط على القائمة وحدد المزيد. ثم اختر ساعة المنبه.

2 اضغط على الخيارات وحدد منبه جديد.

3 قم بالتمرير إلى الأسفل وأدخل الوقت الذي تريد أن يبدأ فيه المنبه بالرنين.

4 اختر نوع التكرار للإشارة إلى ما إذا كنت ترغب في أن يرن المنبه لا إعادة أو يومياً أو الاثنين-الجمعة أو الاثنين-السبت أو حدد الأيام.

5 قم بالتمرير إلى الأسفل وحدد خيارات المنبه إلى الصوت دائماً، أو الاهتزاز دائماً، أو الصوت والاهتزاز دائماً أو كما في النمط.

6 قم بالتمرير إلى الأسفل لاختيار نغمة المنبه. اضغط على  واختر صوتاً من أشيائي.

7 قم بالتمرير إلى الأسفل واختر اسماً للمنبه أو احتفظ بالاسم المقترح.

8 يمكنك أخيراً تعيين فترة انتظار من 5، 10، 20، 30 دقيقة، 1 ساعة أو إيقاف تشغيل.

9 حدد تم.

### إضافة حدث إلى التقويم

1 اضغط على القائمة وحدد المزيد والمنسق. ثم اختر التقويم.

2 حدّد التاريخ الذي تريد إضافة حدث إليه.

يمكنك اختيار تاريخ سواء بالتمرير إليه باستخدام مفاتيح التنقل أو بتحديد الخيارات والذهاب إلى تاريخ لإدخال تاريخ.

3 حدد الخيارات ثم جدول جديد وقم بالتمرير للأسفل لإدخال الوقت الذي تريد أن يبدأ عنده الحدث. قم بالتمرير إلى الأسفل وأدخل وقت انتهاء الحدث.

4 أدخل موضوع للحدث. استخدم لوحة المفاتيح لكتابة الأحرف والأرقام.

5 قم بالتمرير إلى الأسفل مرة أخرى واختر ما إذا كنت ترغب في تعيين تسمية للحدث. قم بالتمرير يساراً أو يميناً لمشاهدة الخيارات المتوفرة. يمكنك تعيين المنبه بحيث يرن في الوقت الذي يبدأ فيه الحدث أو في فترة وقت محددة قبل بدء الحدث بهدف تذكيرك باقتراب الحدث.

6 مرر للأسفل مرة أخرى لتحديد ما إذا كان الحدث يظهر بشكل غير مكرّر أو مكرّر يومياً أو أسبوعياً أو شهرياً أو سنوياً.

إذا كان الحدث عبارة عن حدث متكرر فيمكنك أيضاً التمرير إلى الأسفل لإدخال تاريخ انتهاء الصلاحية لتحديد تاريخ تتوقف فيه الأحداث بشكل تام.

7 حدد تم فيتم حفظ الحدث في التقويم. يضع مؤشر مربع الشكل علامة على الأيام التي تم حفظ أحداث فيها.

### مسجّل الصوت

#### استخدام مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات الصوت أو أصوات أخرى.

#### تسجيل مذكرة صوتية

1 اضغط على القائمة وحدد المزيد. ثم اختر مسجّل الصوت.

2 اضغط على موافق لبدء التسجيل.

3 اختر إيقاف لإنهاء التسجيل.

4 اضغط على خيارات وحدد تشغيل للاستماع إلى التسجيل.

ملاحظة: يمكنك الاستماع إلى كل التسجيلات الصوتية التي قمت بحفظها بتحديد الخيارات والذهاب إلى الألبوم.

### إرسال تسجيل صوتي

1 حين تنتهي من التسجيل. حدد الخيارات.

2 حدد إرسال واختر من MMS أو بريد

إلكتروني أو بلوتوث. إذا اخترت MMS أو بريد إلكتروني. فستتم إضافة التسجيل

إلى الرسالة ويمكنك كتابة الرسالة

وإرسالها بشكل عادي. إذا اخترت بلوتوث.

فستتم مطالبتك بتشغيل بلوتوث.

### استخدام الحاسبة

1 اضغط على القائمة وحدد المزيد. ثم اختر الحاسبة.

### إضافة عنصر إلى قائمة المهام

1 اضغط على القائمة وحدد المزيد ثم اختر المنسّق.

2 حدد المهام ثم مهمة جديدة.

3 عيّن تاريخ عنصر المهمة. وأضف الملاحظات. واختر المنبّه وحدد مستوى للأولوية: عالية أو متوسطة أو منخفضة.

4 احفظ عنصر قائمة المهام بتحديد تم.

تلميح! يمكنك تحرير عنصر وذلك بتحديد. بالضغط على الخيارات وتحرير. أكد على التعديلات التي قمت بها وذلك بتحديد تم.

### إضافة مذكرة

1 اضغط على القائمة وحدد المزيد والمنسّق. ثم المذكرة.

2 حدد مذكرة جديدة واكتب المذكرة.

3 حدد حفظ.

4 تظهر مذكرتك على الشاشة.

تلميح! يمكنك إقفال المذكرة. اضغط على الخيار وحدد إقفال بحيث تحمي المذكرة السريّة خصوصيتك.

### محدد التاريخ

محدد التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة.

2 اختر ما إذا كنت ترغب في تحويل وحدات العملة أو المساحة أو الطول أو الوزن أو درجة الحرارة أو مستوى الصوت أو السرعة.

3 قم بالتمرير إلى اليسار وإلى اليمين لتحديد وحدة. ثم قم بالتمرير إلى الأسفل وأدخل كمية الوحدة.

4 قم بالتمرير إلى الأسفل إلى خانة تحويل الوحدة واختر قيام الوحدة التي تريد التحويل إليها. يظهر التحويل تلقائياً في السطر أدناه.

ملاحظة: لتحويل العملة، ختاج إلى تعيين المعدل وفقاً لمعدل الصرف الحالي أولاً.

### إضافة مدينة إلى ساعتك العالمية

1 اضغط على القائمة وحدد المزيد. ثم اختر الساعة العالمية.

2 لمعرفة وقت مدينة معينة، اضغط على الخيارات وحدد مدينة جديدة.

3 انقل مدينة بواسطة مفاتيح التنقل وحدد مدينة على الخريطة.

حدد الخيارات واختر عرض قائمة المدن. ثم يمكنك أيضاً تحديد القائمة أو إدخال الحرف الأول من اسم المدينة في حقل البحث.

4 اضغط فوق تحديد.

2 اضغط على المفاتيح الرقمية لإدخال الأرقام.

3 بالنسبة إلى الحسابات البسيطة، حدد الوظيفة التي نحتاج إليها (+، -، \*، و ÷). باستخدام مفاتيح التنقل يليها =.

4 بالنسبة إلى الحسابات الأكثر تعقيداً، حدد الخيارات لاختيار أمر.

5 حدد  لمسح الشاشة وبدء عملية حسابية جديدة.

### استخدام ساعة الإيقاف

1 اضغط على القائمة وحدد المزيد. ثم اختر ساعة الإيقاف.

2 حدد بدء لبدء تشغيل المؤقت.

3 اختر الدورة إذا أردت تسجيل وقت الدورة. يمكن حفظ لغاية 99 وقت دورة كحد أقصى.

4 حدد إيقاف لإيقاف تشغيل المؤقت.

5 اختر استئناف لإعادة تشغيل ساعة الإيقاف في الوقت الذي توقفت فيه أو حدد إعادة التعيين لإعادة ضبط التوقيت من جديد.

### تحويل وحدة

1 اضغط على القائمة وحدد المزيد. ثم اختر محول الوحدات.

## الضوابط

### تغيير اوضاع

اعدادات التخزين الاساسي - إذا قمت بإدراج ذاكرة خارجية في الهاتف، فيمكنك أيضاً أن تحديد اعدادات التخزين الاساسي ثم اختيار الموقع الافتراضي الذي تفضل حفظ العناصر فيه.

معلومات الجهاز - عرض معلومات LG-C305 التقنية.

- 1 اضغط على القائمة وحدد الاعدادات.
- 2 حدد اوضاع ثم اختر النمط الذي تريد تعديله.
- 3 حدد الخيارات واختر تخصيص.
- 4 يمكنك تغيير كل خيارات نغمات الرنين ومستوى الصوت، والتنبيه من هنا.

### تغيير التاريخ والوقت

- 1 اضغط على القائمة وحدد الاعدادات.
- 2 حدد الجهاز واختر التاريخ والوقت واختر من القائمة أدناه:

اعدادات التاريخ والوقت - حدد تشغيل التحديث التلقائي، فيقوم الهاتف بتحديث التاريخ والوقت تلقائياً.

تنسيق التاريخ - يمكنك إدخال التاريخ الحالي. يمكنك تعيين تنسيق التاريخ (DD/MM/YYYY, MM/DD/YYYY, YYYY/MM.DD) (اليوم/الشهر/السنة. الشهر/اليوم/السنة. السنة/الشهر.اليوم).

فاصل التاريخ - يمكنك إدخال التاريخ الحالي. يمكنك تعيين فاصل التاريخ (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY) (اليوم/الشهر/السنة. اليوم. الشهر. السنة. اليوم-الشهر-السنة).

تنسيق الوقت - يمكنك تعيين تنسيق التاريخ إلى 12 ساعة أو 24 ساعة.

### استخدام وضع الرحلات الجوية

لتنشغيل وضع الرحلات الجوية، اضغط على القائمة ثم حدد الاعدادات واوضاع. حدد وضع الرحلات الجوية للتنشيط. لن يسمح لك وضع الرحلات الجوية بإجراء مكالمات أو الاتصال بالإنترنت أو إرسال الرسائل.

### تغيير اعدادات الجهاز

- 1 اضغط على القائمة وحدد الاعدادات.
  - 2 حدد اعدادات الجهاز واختر من القائمة أدناه.
- توفير الطاقة - اختر تشغيل أو إيقاف تشغيل اعدادات توفير الطاقة في الشركة المصنعة.
- اللغات - غير لغة شاشة الهاتف LG-C305's.
- قفل المفاتيح التلقائي - قم بإقفال لوحة المفاتيح تلقائياً في شاشة وضع الانتظار.

## تغيير اعدادات الحماية

قم بتغيير اعدادات الحماية لحماية الهاتف LG-C305 والمعلومات الهامة التي يحتوي عليها.

1 اضغط على القائمة وحدد الاعدادات. ثم اختر الجهاز.

2 حدد الحماية واختر من القائمة أدناه:

طلب رمز PIN - اختر رمز PIN الذي يجب إدخاله عند تشغيل هاتفك.

إقفال الجهاز - اختر رمز حماية لإقفال هاتفك مطلقاً أو عند بدء تشغيل الجهاز أو عند تغيير بطاقة SIM أو على الفور.

إقفال التطبيق - يمكنك إقفال المحتويات التي تريد إخفاءها. دليل الهاتف. الرسائل. البريد الإلكتروني. إلخ.)  
تغيير الرموز - قم بتغيير رمز PIN (سيظهر عنصر القائمة هذا إذا تم تعيين طلب رمز PIN إلى تشغيل). رمز PIN2 ورمز الحماية.

### ملاحظة: رمز الحماية

يحمي رمز الحماية الهاتف من الاستخدام غير المصرح به. تم تعيين رمز الحماية الافتراضي إلى "0000" ورمز الحماية مطلوب لحذف كافة إدخلات الهاتف وتنشيط قائمة إعادة تعيين الضوابط. كما أن رمز الحماية مطلوب لتمكين وظيفة قفل الهاتف أو تعطيلها لمنع الاستخدام غير المصرح به للهاتف. ويمكن تحرير الضبط الافتراضي لرمز الحماية من الحماية < تغيير الرموز.

### عرض حالة الذاكرة

تتوفر في LG-C305 ثلاثة أنواع من الذاكرة: الهاتف. وبطاقة SIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد كمية الذاكرة المستخدمة وكمية المساحة المتوفرة.

اضغط على القائمة وحدد الاعدادات والجهاز ثم اختر معلومات الذاكرة وستشاهد حينئذ حالة الذاكرات الحالية في الهاتف LG-C305.

## الضوابط

رسالة الترحيب - بعد تحديد تشغيل.  
يمكنك كتابة رسالة ترحيب. متى تقوم  
بتشغيل الهاتف تظهر الرسالة على  
الشاشة.

الشاشات الأخرى - اختر سمة الشاشة  
الرئيسية أو بدء تشغيل/إيقاف تشغيل  
الشاشة.

### خدمات الشبكة الاجتماعية (SNS)

إن هاتف LG-C305 مزود بـ SNS للاستمتاع  
بالشبكة الاجتماعية وإدارتها.

ملاحظة: قد تفرض تكاليف إضافية  
عند الاتصال بخدمات على إنترنت  
وإستخدامها. للحصول على تفاصيل  
تتعلق بالرسوم المفروض على البيانات.  
اتصل بموفر الشبكة.

### تحديث برنامج الهاتف

تحديث برنامج الهاتف المحمول LG  
من إنترنت

للحصول على مزيد من المعلومات حول  
استخدام هذه الوظيفة. يرجى زيارة الموقع  
[http:// update.lgmobile.com](http://update.lgmobile.com) or  
[http://www.lg.com/common/  
.index.jsp](http://www.lg.com/common/index.jsp) select country

تسمح لك هذه الميزة بتحديث أحدث إصدار  
لبرنامج الهاتف الثابتة بسهولة من إنترنت من  
دون الحاجة إلى زيارة مركز الخدمة.

### إعادة تعيين الهاتف

استخدم إعادة تعيين الجهاز في  
قائمة الضوابط لإعادة تعيين كل الضوابط  
وفق تعريفاتها المحددة من قبل الشركة  
المصنعة. ومن أجل تنشيط هذه الوظيفة  
تحتاج إلى رمز الحماية.

### تغيير إعدادات الشاشة

1 اضغط على القائمة وحدد الإعدادات.

2 حدد عرض واختر من ضمن:

الشاشة الرئيسية - اضبط عناصر  
الخلفية والشاشة.

سمة القائمة - قم بتغيير مظهر  
الشاشة بأكمله بشكل سريع.

نمط القائمة - قم بتغيير عرض القائمة  
من نمط القائمة أو نمط الشبكة.

الخط - قم بضبط حجم الخط.

الإضاءة الخلفية - اختر الفترة التي تبقى  
خلالها الإضاءة الخلفية قيد التشغيل.  
يمكنك أيضاً استخدام مفاتيح التنقل  
لضبط سطوع الشاشة الرئيسية.

تلميح! بقدر ما تطول الفترة التي تكون  
خلالها الإضاءة الخلفية قيد التشغيل.  
بقدر ما يتم استخدام طاقة البطارية  
وقد تحتاج إلى شحن هاتفك بشكل  
متكرر أكثر.

بما أن تحديث برنامج الهاتف المحمول الثابت يتطلب انتباه المستخدم الكامل لمدة عملية التحديث. يرجى التحقق من كل التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل بيانات USB أو البطارية أثناء الترقية قد يتسبب بإلحاق ضرر بالغ بهاتفك المحمول.

## إمكانية التوصيل

### تغيير اعدادات إمكانية الاتصال

#### وضع اتصال USB

تم مسبقاً إعداد اعدادات إمكانية الاتصال بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. إذا أردت تغيير أي ضابط من الضوابط استخدم هذه القائمة. اضغط على القائمة وحدد الاعدادات ومن ثم اختر التوصيل. خياراتك هي:

بلوتوث - قم بإعداد LG-C305 استخدام

بلوتوث. يمكنك تكيف إمكانية رؤيتك

بالنسبة إلى الأجهزة الأخرى أو البحث عبر الأجهزة التي اقترن هاتفك بها.

وضع اتصال USB - يمكنك تحديد وضع

اتصال USB في الهاتف لاستخدامات

متعددة.

### تغيير اعدادات بلوتوث

1 اضغط على القائمة وحدد الاعدادات والتوصيل.

2 اختر بلوتوث ثم الضوابط.

أدخل تغييراتك على:

إمكانية رؤية جهازي - قم بتعيين الهاتف إلى مرئي أو مرئي لـ 1 دقيقة بحيث تستطيع الأجهزة الأخرى كشف هاتفك خلال بحثها عن جهاز بلوتوث. إذا ما قمت بتحديد مخفي. فلن تتمكن الأجهزة الأخرى من كشف هاتفك خلال بحثها عن جهاز بلوتوث.

اسم جهازي - يمكنك تسمية أو إعادة تسمية هاتفك كما تريده أن يظهر على الأجهزة الأخرى. سيظهر اسم هاتفك على الأجهزة الأخرى فقط عندما تكون إمكانية رؤية جهازي معيّنة إلى مرئي.

الخدمات المعتمدة - يمكنك عرض

قائمة الأجهزة مثل سماعات الرأس

ومجموعات أدوات الأجهزة التي تغني

عن استخدام اليدين والتي يعتمدها هذا

الهاتف الممكن لاستخدام بلوتوث.

عنواني - تحقق من عنوان بلوتوث هنا.

### ملاحظة:

1. قم بإقران LG-C305 مع أي جهاز يدعم إصدار BT أحدث من 2.0، ولن تتم مطابقتك برمز مرور، إذ يتم توليده تلقائياً.
2. قم بإقران LG-C305 مع أي جهاز يدعم إصدارات BT أقدم بشأن الإصدار 1.2 وغيره. وستتم مطابقتك برمز مرور.

**ملاحظة:** لتعزيز الحماية، ننصح بتعيين إمكانية الرؤية إلى مخفي، ما إن يتم التكوين أو الإقران بجهاز. للاتصالات الواردة، بغض النظر عن ما إذا تم إقران الجهاز أم لا مع هاتفك، يمكنك اختيار قبول أو رفض الاتصال.

### الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف LG-C305 بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور، وهذا يعني أن الاقتران أصبح آمناً أكثر.

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير إمكانية الرؤية في قائمة إعدادات بلوتوث من خلال تحديد إمكانية رؤية جهازي ثم مرئي.

2 من بلوتوث، اختر تنشيط بلوتوث وحدد البحث عن جهاز جديد.

3 سيبحث الهاتف LG-C305 عن الأجهزة، عند اكتمال عملية البحث، يظهر الخيار إضافة وتحديث على الشاشة.

4 اختر الجهاز الذي تريد إجراء الاقتران به، وحدد إضافة وأدخل رمز المرور ثم اختر موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر، حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

### استخدام سماعة رأس بلوتوث

1 تحقق من كون بلوتوث في وضع تنشيط بلوتوث ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 سيتصل جهاز LG-C305 تلقائياً بسماعة رأس بلوتوث والتبديل إلى وضع سماعة الرأس.

### إرسال الملفات واستلامها باستخدام بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال

بسماعات رأس بلوتوث لإجراء مكالمات وتلقيها. قبل أن تتمكن من بدء المشاركة في الملفات باستخدام بلوتوث، ستحتاج إلى إجراء اقتران لهاتفك بجهاز بلوتوث آخر.

**تلميح!** راقب شريط التقدم لكي تتأكد من إرسال الملف.

**تلميح!** إن علامة الكلمة بلوتوث<sup>®</sup> وشعاراتها مملوكة من قبل بلوتوث SIG, Inc. وأي استخدام لمثل هذه العلامات من قبل LG Electronics يتم بموجب ترخيص. أما العلامات التجارية والأسماء التجارية الأخرى فهي تعود إلى مالكيها.

## مزامنة الهاتف مع الكمبيوتر

يمكنك مزامنة الهاتف

مع الكمبيوتر للتأكد من تطابق كل التفاصيل والتواريخ الهامة. ولكن أيضاً لإجراء نسخة احتياطية تساعدك على الاطمئنان.

## إجراء نسخ احتياطي لمعلومات

الهاتف واستعادتها

- 1 توصيل كبل USB بهاتفك والكمبيوتر.
- 2 حدد **PC suite** من قائمة الإطارات المنبثقة في الهاتف.
- 3 انقر فوق الرمز نسخ احتياطي وحدد النسخ الاحتياطي أو الاستعادة.
- 4 حدد المحتويات التي ترغب في إجراء نسخ احتياطي لها أو استعادتها. حدّد

للحصول على معلومات حول اقتران الأجهزة. انظر الاقتران بجهاز بلوتوث آخر.

## لتشغيل بلوتوث:

- 1 اضغط على القائمة وحدد الإعدادات. اختر إمكانية الاتصال ثم حدد بلوتوث.
- 2 حدد تنشيط بلوتوث.
- 3 حدد إلغاء تنشيط بلوتوث لإيقاف تشغيل بلوتوث.

## لإرسال ملف:

- 1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقي.
- 2 حدد الخيارات واختر إرسال عبر بلوتوث.
- 3 حدد نعم لتشغيل بلوتوث إذا لم يكن قد تم تنشيطه بعد.
- 4 سيبحث الهاتف LG-C305 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.
- 5 اختر الجهاز الذي تريد إرسال الملف إليه وحدد موافق.

## لاستلام ملف:

- 1 لاستلام ملفات. يجب أن يكون بلوتوث في وضع تنشيط بلوتوث وومرئياً.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.

## الضوابط

الموقع حيث تريد إجراء نسخ احتياطي للمعلومات أو استعادة المعلومات منه. انقر فوق موافق.

**5** سيتم إجراء نسخ احتياطي للمعلومات.

عرض ملفات الهاتف على الكمبيوتر

**1** توصيل كبل USB بهاتفك والكمبيوتر.

**2** حدد **PC suite** من قائمة الإطارات

المنبثقة في الهاتف.

**3** بعد البحث عن الهاتف سيتم الاتصال

تلقائياً.

**تلميح!** يساعدك عرض محتويات الهاتف

على الكمبيوتر على ترتيب الملفات.

وتنظيم المستندات وإزالة المحتويات التي لم

نعد بحاجة إليها.

## الملحقات

هناك مجموعة متنوعة من الملحقات المتوفرة لهاتفك المحمول. تجدها بالتفصيل أدناه.



البطارية

الشاحن



دليل المستخدم

كبل البيانات



سماعة رأس  
استيريو



مضغوط

### ملاحظة

- استخدم دائماً ملحقات LG الأصلية.
- فقد يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى. يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

# بيانات تقنية

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ). +45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-C305

Trade Name

LG

CE0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.3.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

22. 07. 2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

## استكشاف الأخطاء وإصلاحها

يسرد هذا الفصل بعض المشاكل التي قد تصادفها أثناء استخدام الهاتف. بعض المشاكل تتطلب منك الاتصال بموفر الخدمة. ولكن معظمها يكون سهلاً ويمكنك تصحيحه بنفسك.

الرسالة	الأسباب المحتملة	الحلول المحتملة
خطأ SIM	لا يوجد بطاقة SIM في الهاتف أو ربما قمت بإدخالها بشكل غير صحيح.	تأكد من إدخال بطاقة SIM بالطريقة الصحيحة.
لا يوجد اتصال بالشبكة	الإشارة ضعيفة خارج شبكة GSM	توجّه نحو نافذة أو نحو مكان مفتوح. تحقق من خريطة التغطية التي يزودك بها موفر الخدمة.
الرموز غير متطابقة	لتغيير رمز حماية. عليك تأكيد الرمز الجديد بإدخاله مرة أخرى.	اتصل بموفر الخدمة.
يتعدّر ضبط الوظيفة	غير معتمد من قبل موفر الخدمة أو التسجيل مطلوب.	اتصل بموفر الخدمة.
المكالمات غير متوفرة	خطأ في الطلب تم إدخال بطاقة SIM جديدة تم بلوغ الحد الخاص برسوم المكالمات	شبكة جديدة غير مصرّح لها. تحقق من القيود الجديدة. اتصل بموفر الخدمة أو أعد إعداد الحد بواسطة PIN 2.

## استكشاف الأخطاء وإصلاحها

الرسالة	الأسباب المحتملة	الحلول المحتملة
يتعذر تشغيل الهاتف	لم يتم الضغط على مفتاح التشغيل / إيقاف التشغيل لفترة كافية	اضغط مفتاح التشغيل / إيقاف التشغيل / لثانيتين على الأقل.
	البطارية فارغة	اترك الشاحن متصلاً لفترة أطول.
	ملاسمات البطارية متسخة	قم بتنظيف ملاسمات البطارية.
	البطارية فارغة بالكامل	اشحن البطارية.
	درجة الحرارة خارج النطاق	تأكد من أن درجة الحرارة المحيطة جيدة، وانتظر قليلاً، ثم حاول الشحن مرة أخرى.
خطأ في الشحن	مشكلة في الاتصال	تحقق من وحدة التزويد بالطاقة والاتصال بالهاتف. تحقق من ملاسمات البطارية. وقم بتنظيفها إذا اقتضى الأمر.
	لا جهد رئيسي	قم بالتوصيل بمقبس آخر أو تحقق من الجهد.
	الشاحن به خلل	إذا لم يسخن الشاحن، فقم باستبداله.
	الشاحن غير مناسب	استخدم ملحقات LG الأصلية فقط.
	خلل في البطارية	استبدل البطارية.
الهاتف ينقطع عن الشبكة	الإشارة ضعيفة جداً	إعادة الاتصال بموفر خدمة آخر تتم تلقائياً.
الرقم غير مسموح به	وظيفة رقم الاتصال المحدد قيد التشغيل.	تحقق من الإعدادات.

# LG-C305 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.



# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.


## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information  
This mobile phone model LG-C305 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.20 W/Kg (10g) and when worn on the body is 0.663 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

## Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear.

We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.






# Getting to Know Your Phone

**Earpiece**

**Send key**

- Dials a phone number and answers a call.
- **In standby mode:** Shows the history of calls.

**Alpha numeric keys**

- **In standby mode:** Input numbers to dial **Hold down**
  -  - International calls
  -  - Connect voice mail centre
  -  to  - Speed dials
  -  - Hold the key down to enable/disable Silent mode
- **In editing mode:** Enter numbers & characters

**Message Key**

- Long press on idle screen lock the keypad.
- Long press on lock screen, will unlock the keypad.
- Short press on idle screen opens Write message screen.

**Soft keys (Left soft key / Right soft key)**

- These keys perform the function indicated in the bottom of the display.

**Main LCD**

**End key**

- Switch on/off (hold down)
- End or reject a call.

**Confirm key / OK key**

- Selects menu options and confirms actions.



**Navigation key**

**In standby mode:**






**Briefly:** Mp3 player

**Briefly:** Camera

**Briefly:**

When Toolbar is enabled, will scroll through items. (Menu>Settings>Display>Homescreen>Display items)

- **In menu:** Scroll through menu items.

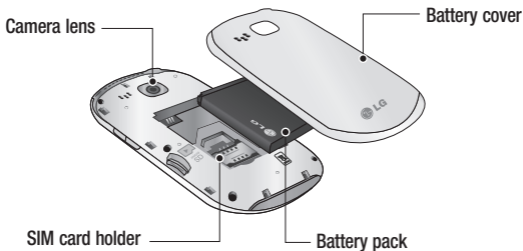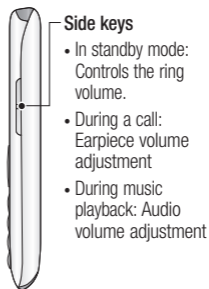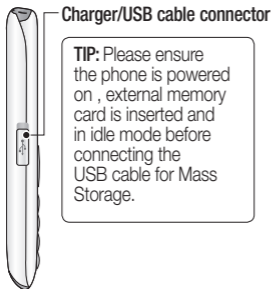

# Installing the SIM and battery

## 1 Remove the battery cover

Press the battery cover as shown in picture.



## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.



**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

**⚠ WARNING:** Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.



## 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.




## 5 Replace the battery cover



## 6 Charging your phone

Pull open the cover of the charger socket on the left side of your LG-C305. Insert the charger and plug into a mains electricity socket. Your LG-C305 will need to be charged until a message reading "Battery full" appears on screen.

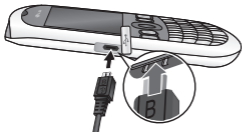


# Memory card

## Installing a memory card

You can expand the memory available on your phone using a memory card.

**Note:** A memory card is an optional accessory.

Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.

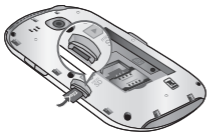

## Removing a memory card

Carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

## Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device** and **Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C305 press **Menu** and select **My stuff**. Choose **My memory card**.












**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.









# Your home screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.



The table below explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected

Icon	Description
	An alarm is set
	Schedule
	New message
	New voice message
	New Email
	Normal profile in use
	Silent profile in use
	Outdoor profile in use
	Headset in use
	Remaining battery life
	Battery empty
	External memory
	FM radio
	MP3 music playing

# Calling


## Making a call

- 1 Make sure your phone is on.
- 2 To delete a digit press the back arrow.
- 3 Press  to begin the call.
- 4 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **contact**.
- 3 Press  to begin the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.


Press  or select **Reject** in order to reject an incoming call.

**Note:** In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** to open the main menu. Select **Phonebook**, then select **Option** and **Speed dials**.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Set** or by pressing the numeric keys.
- 3 Your **Phonebook** will open. Select the contact you'd like to assign to that number using the navigation keys then Press **Select**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press .

## Viewing your Call logs

Press **Menu** and select **Logs**.

**All logs** - View a complete list of all your dialled, received and missed calls and also send and received messages.

**Calls Only** - View a list of all the numbers you have called or received calls and missed calls.

**Messages Only** - View a list of all the numbers you have sent or received messages.

**Missed logs** - View a list of any calls you have missed.

**Outgoing logs** - View a list of all the numbers you have called.

**Incoming logs** - View a list of all the numbers that have received.

**TIP!** From any call log select **Options** and then **Delete** to delete selected items.

## Call settings

- 1 Press **Menu** and select **Settings** and **Call**.
- 2 From here you can amend the settings for:

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select which calls you would like to be barred.

**Call waiting** - Be alerted when you have a call waiting.

**Fixed dial numbers** - Choose a list of numbers that can be called from your phone.

**Excuse messages** - Before you reject an incoming call, you can use "Excuse messages" to send a message to explain why you do not receive an incoming call.

**Call reject settings** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

**Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

# Calling

**Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

**Minute minder** - Determines whether to sound a tone every 1 minute when you are in the call.

**Bluetooth answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **Handset**.

**Save new number** - Selecting this option will save numbers that are not already in your contacts upon ending the call.

**Call costs** - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

## Using call divert

- 1 Press **Menu** and select **Settings** and **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer and when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voice mail, to other number or to recent diverted numbers.

- 5 Enter your divert number or select **Search** to browse for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose Call divert from calling menu then select Options then select Deactivate all.

## Using call barring

- 1 Press **Menu** and select **Settings** and **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the options:
  - All outgoing calls**
  - Outgoing international**
  - Outgoing international calls except home country**
  - Incoming calls**
  - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from the **calling menu** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

# Camera

## Taking a quick photo

- 1 Press **Menu** and select **Camera**.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-center of the screen and press **OK** to take a photo.

## After taking a photo

Your captured photo will appear on the screen. The image name is shown on the top of the screen with five icons on the bottom side.

**Album** - View the pictures and videos you have taken in your Album.

**Send** - Send the photo via **MMS**, **Email** or **Bluetooth**.

**New** - Take another photo straight away.

**Set as** - Use the image as Wallpaper, as a **Contact** image, or in your Start up image or Shut down image.

**Delete** - Delete the photo you have just taken. The viewfinder will reappear.

# Video Camera

## Shooting a quick video

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Select the Rec. icon on the bottom-center of the screen and press **OK** to take a video. Rec will appear at the bottom of the viewfinder. Press **OK** again to stop recording.

## After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

**Album** - View the pictures and videos you have taken in your Album.

**Play** - Play the file.

**New** - Press to shoot another video straight away.

**Send** - Send the video via **MMS**, **Email** or **Bluetooth**.

**Delete** - Delete the video you have just made. The viewfinder will reappear.

# Wi-Fi

## Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The LG-C305 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

# Music

## MP3 Player

Your LG-C305 has a built-in music player so you can play all your favourite music.

### Note:

- Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

To access the music player, press **Menu** and select **Music** and select **MP3 player**. From here you can access:

**Recently played** - View all of the songs you have played recently.

**All songs** - Contains all of the songs you have on your phone.

**My Playlists** - Contains all playlists you have created.

**Artists** - Allows you to view all tracks sorted by artist.

**Albums** - Allows you to view all tracks sorted by album.

**Genres** - Allows you to view all tracks sorted by genre.

**Shuffle all songs** - Allows you to play all of the songs in random order.




## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or sync cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

## Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.

# Music

- 5 Select **⏮** to skip to the previous song.
- 6 Select **Back** to stop the music and return to the **All songs** menu.

**TIP!** To change the volume while listening to music, use the volume keys on the right hand side of your phone.

**Note:** The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

## Using options while playing music

Select **Options** and choose from:  
**Minimize** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**Repeat** - Repeat playback of the song or playlist.

**Shuffle** - Play your tracks in a random order.

**Equalizer** - You can view **Equalizer** on the screen.

**Visualization** - Select a visual effect.

**File info.** - You can view information about the music file you are listening to.

**Add to playlist** - Adds the current track to a playlist.

**Send** - Send the song via **MMS**, **Email** or **Bluetooth**.

**Set as** - Use the song as **Ringtone**, **Message tone**, **Start-up** or **Shut down**.

# E-Mail

## Sending email

To send/receive an email, you should set up an email account.

- 1 Press **Menu**, select **E-Mail** and choose the account you want to use.
- 2 Choose **Write e-mail** and a new email window will open.
- 3 Enter the recipient email address then press down Navigation key to scroll through to Subject and message field.

## Retrieving your email

- 1 Press **Menu** and select **E-mail**.
- 2 Select the account you want to use.
- 3 Select **Inbox**.
- 4 Choose **Refresh** and the phone will connect to your email account and retrieve your new messages.

## Mail folders

Press **Menu**, select **E-mail** and choose the account you want to use.

**Write e-mail** - Create your new message.

**Inbox** - All the e-mails you receive are placed into your **Inbox**. From here you can reply, forward and more.

**Drafts** - If you don't have time to finish writing a e-mail, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder while e-mail are being sent or stores the messages that failed to send.

**Sent** - Copies of all the e-mail you send are kept in your Sent folder.

# E-Mail

## Changing your email settings

- 1 Press **Menu**, choose **E-mail**.
- 2 Select the account you want to change.
- 3 Select **Options**>**E-mail settings** to change the following settings

**E-mail accounts** - You can set up an email account.

**Allow reply e-mail** - Choose to allow the sending of 'read confirmation' messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your LG-C305 checks for new email messages.

**Show amount** - Choose the number of emails to be shown at any one time.

**Include message in Fwd & Reply** - Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

### **Auto retrieval in roaming** -

Choose whether or not to automatically retrieve your messages when abroad.

### **New e-mail notification** -

Choose whether or not to be alerted of new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

### **Maximum size for receiving** -

Choose the maximum email size to be retrieve.

**Mail sending size** - Choose the maximum email size that can be sent.

# FM Radio

## Using the FM radio

Your LG-C305 has **FM radio** feature so you can tune into your favorite stations and listen on the move.

## Listening to the radio

- 1 Press **Menu**, select **Music** and choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

## Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning

To auto tune:

- 1 Press **Menu** and select **Music**.
- 2 Select **FM radio** choose **Options**.
- 3 Select **Auto-scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

**Note:** If you are in an area with bad radio reception, you may have difficulty listening to the radio.

You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket.

**Note:** You can also manually tune into a station by using **▲** and **▼**. If you press and hold, **▲** or **▼**, the stations will be automatically found.

**Note:** LG-C305 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the earmic for better and enhanced FM quality.

# Web

## Accessing the web

You can launch the WAP browser and access the homepage of the activated web profile. You can also manually enter a URL address and access the associated WAP page.

- 1 Press **Menu** and select **Browser**.
- 2 To go straight to the home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by Open.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

# Messaging

## Messaging

Your LG-C305 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu** and select **Messaging**.

## Sending a message

- 1 Choose **Write message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- 4 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Template, Emoticon, Name & Number, New slide, Subject** or **More (Business card/Schedule/Memo/Task/My business card)**.
- 5 Choose **Send to**.
- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select **Send**.



**WARNING:** When Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message. The message will be automatically converted to MMS mode and you will be charged accordingly.

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **Abc** mode, and **123** mode.

**Note:** Some fields may allow only one input mode (e.g. telephone number in contact fields).

# Messaging

## Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to **Abc** mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers.

## Message folders

Press **Menu** and select **Messaging**.

**Write message** - Create your new message.

**Inbox** - All the messages you receive are placed in your **Inbox**. From here you can reply, forward and more.

**Conversation view** - You can view the messages by each number.

**Drafts** - If you don't have time to finish writing a message, you can save what you have written so far in here.

**Outbox** - This is a temporary storage folder used while messages are being sent.

**Sent** - Copies of all the messages you send are kept in your **Sent** folder.

**IM** - Allows you to sign-in to Windows Live Messenger.

**My folders** - You can move messages of **Inbox** or **Sent** into **My folders**. Also you can move those messages of **My folders** into the original message box.

**Templates** - A list of pre written useful messages, use for a quick reply.

## Managing your messages

- 1 Press **Menu**, select **Messaging** and choose **Inbox**.
- 2 Select **Options** and then choose to:
  - Reply** - Send a reply to the selected message.
  - Forward** - Send the selected message on to another person.
  - Write message** - Write a new message or email.
  - Call** - Call the person who sent you the message.
  - Save number** - Save the sender's phone number.
  - Delete** - Delete the selected message.
  - Copy to USIM card** - copy selected message to SIM card.
  - Move to** - move selected message to **SIM** card or **My folders**.

**Selection mode** - Select one or more messages.

**Search** - you can find messages by **Keyword** or **Sender**.

**Filter** - Filters display messages by type.

**Delete all** - Delete all messages.

**Message info** - You can check detail information about the message.

If you see the message **No space for SIM message**, you should delete some messages from your SIM to create space.

If you see the message **No space for messages**, you can delete either messages or saved files to create more space.

**TIP!** While viewing the received message, press **Options** and select **Template reply**. This is useful if you need to reply the message during a meeting.

**TIP!** While you see the message, press **Options** and select **Extract**. You can extract the information such as a number, email address or web address from the selected message.

## Changing your text message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Voice**, **Fax**, **X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

**Send long text as** - Choose whether to send your message as **Multiple SMS** or **MMS** when you enter a text longer than 2 pages in the message field.

## Changing your multimedia message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

# Messaging

**Retrieval mode** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Delivery report** - Choose to request or allow a delivery report.

**Read reply** - Choose to request or allow a read reply.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Allows you to select the contents type supported by MMS.

**Delivery time** - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

**Multi msg centre** - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

## Changing your messaging settings

Press **Menu**, select **Messaging**, and choose **Settings** then:

**Text message** - You can configure text message related options.

**Multimedia message** - You can configure multimedia message related options.

**Voicemail** - Add a new voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Save sent message** - You can select to save message you sent.

**Message counter** - You can check the amount of messages you have sent.

**Info. service** - Choose the reception status, channels and language of your info messages.

# Phonebook

## Searching for contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Enter the name or number to search.
- 3 Use the navigation keys to scroll through the contact list.

## Adding new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Press **Option** and select **New contact**.
- 3 In the Save to field, choose whether to store your new contact on your **Handset** or **SIM** card.
- 4 Enter the relevant information and select **Done**.

Another method:

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **New contact** to add a new contact.
- 3 Enter the relevant information and select **Done**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu.

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Options** to open the list of options. From here you can:
  - Message** - Send a message to the contact.
  - Call** - Directly make voice call to a contact.
  - Edit** - Change any of the contact's details.
  - Delete** - Delete the contact. Select Yes only if you are sure.
  - New contact** - Add a new contact.
  - Storage location** - Choose to move or copy to the phone or SIM card (depending on where you originally saved the contact).
  - Send contact** - Send the contact's details to another person as a business card. Choose to send via **Text message, MMS, E-mail** or **Bluetooth**.
  - Selection Mode** - Select one or more contacts.
  - Sort by** - Sort a contact by **ABC↓** or **ABC↑**.
  - Speed dials** - You can assign a frequently-called contact to a speed dial number.

# Phonebook

## Creating a group

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **New group**.
- 4 Enter a name for your new group.
- 5 Press **Done**.

**Note:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and selecting **Options**. Choose to **Add member** to the group from your contacts, select **Edit group** or **Delete** the group.

## Changing your contact settings

- 1 Press **Menu** and select **Phonebook**.
- 2 Select **Option** and choose **Settings**. From here you can adjust the following settings:

**Display name** - You can select to show the **First name first** or **Last name first** or **Last name, First name**.

**Main store and view** - Choose whether to store contacts on your **SIM** or **Handset**. You can also choose to view contacts saved on either **Handset only**, **USIM only**, or **Both handset & USIM**.

**Copy all** - Copy all your contacts to either your SIM card or Handset.

**Move all** - This works in the same way as **Copy all**, but the contact will only be saved to the location you've moved it to. If you move a contact from the SIM card to the handset it will be deleted from the SIM card memory.


**Export contacts** - You can save all handset phonebook data to a vcard file (\*.vcf) on an external memory card.

**Import contacts** - You can restore phonebook data from a vcard file to your handset.

**Send all contacts via Bluetooth** - Send all contacts information to another handset by Bluetooth.

# More

## Setting your alarm

- 1 Press **Menu** and select **More**, then choose **Alarm clock**.
- 2 Press **Options** and select **New alarm**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Not repeated, Daily, Mon - Fri, Mon - Sat, Select days**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound, Always vibrate, Always sound and vibrate** or **As in profile**.
- 6 Scroll down to choose the alarm sounds. Press  and choose a sound from the My stuff.
- 7 You can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 8 Scroll down and enter a name for the alarm or keep the suggested name.
- 9 Select **Done**.

## Adding an event to your calendar

- 1 Press **Menu** and select **More** and select **Organiser**, then choose **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Options** then select **New schedule** and select the Type of schedule; Appointment, Anniversary, or Birthday.
- 4 Scroll down and enter a **Subject** for the event.
- 5 Scroll down and enter the start and end time of the event.
- 6 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go on at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.

## More

- 7 Scroll down once more to select whether the event is **Not repeat** or repeated at **Daily**, **Weekly**, **Monthly** or **Annually** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 8 Select **Done** your event will be saved in the calendar. A square cursor will mark the days of any saved events.

### Adding an item to your task list

- 1 Press **Menu** and select **More** and choose **Organiser**.
- 2 Select **Tasks** and select **New task**.
3. Enter the title of this task in the **Subject**.
- 4 Set the date and time for the task item, choose alarm and select a priority level: **High**, **Normal** or **Low**.
- 5 Save your to do list item by selecting **Done**.

**TIP!** You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Done**.

### Adding a memo

- 1 Press **Menu** and select **More** and select **Organiser**, then **Memo**.
- 2 Select **New memo** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on the screen.

**TIP!** You can lock the memo. Press **Option** and select **Lock** for the private memo to protect privacy.

### Date finder

Date finder (press **Menu**>**More**>**Organiser**>**Date finder**) is a handy tool to help you calculate what the date will be once a certain number of days have passed.

### Voice recorder

#### Using the Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

#### Recording your voice memo

- 1 Press **Menu** and select **More**, then choose **Voice recorder**.
- 2 Press **OK** to begin recording.

- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.


**Note:** You can listen to all of the voice recordings you have saved by selecting **Options >Album**.

## Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **MMS**, **E-mail** or **Bluetooth**. If you choose **MMS** or **E-mail**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

## Using your calculator

- 1 Press **Menu** and select **More**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.

- 4 For more complex calculations, select **Options** to choose a command.
- 5 Press Right Softkey  to clear the screen and start a new calculation.

## Using the stopwatch

- 1 Press **Menu** and select **More**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 99 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

## Converting a unit

- 1 Press **Menu** and select **More**, then choose **Unit converter**.
- 2 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.

## More

- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

**Note:** For **Currency** conversion, you need to set **Rate** according to current exchange rate first.

## Adding a city to your World clock

- 1 Press **Menu** and select **More**, then choose **World clock**.
- 2 To find out the time of specific city, press **Options** and select **New city**.
- 3 Use the navigator keys to select a city on the map, or press **Options** then Search or **View city list** to find the desired city.
- 4 Press **Select**.

# Settings

## Changing your profiles

- 1 Press **Menu** and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Personalise**.
- 4 You can change all of the tones, its volumes and alert options from here.

## Using flight mode

To turn on flight mode, press **Menu** and then select **Settings** and **Profiles**. Select **Flight mode** to activate. Flight mode will not allow you to make calls, connect to the internet or send message.

## Changing your Device settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** settings and choose from the list below.
  - Power save** - Choose to switch the factory set power saving settings On or Off.
  - Languages** - Change the display language of your LG-C305's.
  - Auto key lock** - Enable or disable automatic keypad lock.

**Primary storage settings** - Select the default storage location for your phone. Internal memory (handset memory) or External memory (microSD card). Your phone will store data to its default storage location.

**Device info** - View the technical information for your LG-C305.

## Changing the date & time

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** and choose **Date and Time** and choose from the list below:

**Date and time settings** - Select Auto update On, and the phone will automatically update the date and time.

**Date format** - You can enter the current date. You can set the date format (DD/MM/YYYY, MM/DD/YYYY, YYYY/MM.DD).

**Date separator** - You can set the date separator (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY).

**Time format** - You can set the date format **12 hours** or **24 hours**.

# Settings

## Changing your security settings

Change your security settings to keep your LG-C305 and the important information it holds protected.

- 1 Press **Menu** and select **Settings** and choose **Device**.
- 2 Select **Security** and choose from the list below:

**PIN code request** - Enable or disable PIN code request when phone power on.

**Device lock** - Request device PIN code; At device start up, When SIM card is changed, or Immediately.

**Application lock** - Selected applications can be locked requiring correct PIN entry to open.

**Change codes** - Change your PIN code (This menu item will appear if PIN code request is set to On), PIN2 code, Security code.

### Note: Security code

The security code protects from unauthorized use of your phone. The default security code is set to '0000'. The security code default setting can be modified from **Security > Change codes**.

## Viewing memory status

Your LG-C305 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**, select **Device** and choose **Memory info** You will then see the current status of the memories in your LG-C305.

## Resetting your phone

Menu>Settings>Device>Reset device will allow you to clear either the phone **Settings** only or Data & settings.

**CAUTION:** Make sure to backup your personal information before resetting device.

## Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

**Homescreen** - Adjust the Wallpaper and Display items.

**Menu theme** - Quickly change the whole look of your screen.

**Menu style** - Change the menu view from List style or Grid style.

**Font** - Adjust the font size.

**Backlight** - Adjust screen brightness and how long the backlight remains on when idle.

**TIP!** The longer the backlight is on, the more battery power is used and you may need to charge your phone more often.

**Greeting message** - Configure the greeting message, which will appear whenever you start-up the phone.

**Other screens** - Choose an image for your start-up/shut down screen.

## Social network services (SNS)

Your LG-C305 has SNS that lets you enjoy and manage your social network.

**NOTE:** An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country.

# Settings

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

## Connectivity

### Changing your connectivity settings

#### USB connection mode

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings. Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

**Bluetooth** - Configure your LG-C305 for Bluetooth use.

**USB connection mode** - Configure USB connection mode for Mass storage, PC Suite, or Always ask.

### Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Set **Visible** or **Visible for 1 min** so that other devices can detect your phone when they are searching for a Bluetooth device. **Hidden**, other devices will not be able to detect your phone.

**My device name** - You can rename your phone. Your phone's name will be shown on other devices only when **My device visibility** is set to **Visible** or **Visible for 1 min**.

**Supported services** - You can view the list of devices supported by Bluetooth enabled phone.

**My address** - Check your Bluetooth address here.

**Note:** To improve security, we recommend that once you have configured or paired with a device, **Visibility** be set to **Hidden**. For incoming connections, regardless of whether or not the other device has been paired with your phone, you can choose to accept or reject the connection.

## Pairing with another Bluetooth device

By pairing your LG-C305 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 To enable your Bluetooth and make it visible for other Bluetooth devices, press Menu key then select Settings>Connectivity>Bluetooth>Activate Bluetooth then Settings>My device visibility>visible.
- 2 From **Bluetooth**, select **Search new device**.
- 3 Your LG-C305 will search for any Bluetooth devices in range.

- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check that your **Bluetooth** is active and **visible**
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your LG-C305 will automatically connect to your Bluetooth headset and switch to headset profile.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls. Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For

# Settings

information on pairing devices, see **Pairing with another Bluetooth device**.

## To switch Bluetooth on:

- 1 Press **Menu** and select **Settings**. Choose **Connectivity** then select **Bluetooth**.
- 2 Select **Activate Bluetooth**.
- 3 Select **Deactivate Bluetooth** to switch Bluetooth off.

## To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your LG-C305 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **OK**.

## To receive a file:

- 1 To receive files, your Bluetooth must be both **active** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

**TIP!** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

## Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

## Backing up and restoring your phone's information

Backing up your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.

- 3 Click on the Backup icon, and select **Backup** or **Restore**.
- 4 Mark the contents you would like to back up. Select the location you would like to backup information to Click OK.
- 5 Your information will be backed up.

## Backing up and restoring your phone's information

### Backing up your phone's information:

- 1 Connect the USB cable to your phone and PC.
- 2 Select PC Suite from the popup menu on your phone.
- 3 From PC suite, click the Backup icon and select Restore then OK
- 4 Browse for a backed up file to restore from or select from list provided then click OK
- 5 Your information will be restored to your phone.

**NOTE:** Install PC Suite using CD provided and follow the Installation Guide.

## Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 After searching the phone it will be connected automatically.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

# Accessories

Various accessories are available for your mobile phone. These are detailed below.

## Charger



## Battery



## Data cable



## User Guide



## CD



## Stereo headset



### NOTE

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further enquiries.

# Technical Data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-C305

Trade Name

LG

CE0168①

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

22.07.2010

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

  
Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key for at least two seconds. Keep charger attached for a longer time. Clean the contacts.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Solutions</b>
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.













