

عربي
ENGLISH



ENGLISH
عربي

دليل مستخدم

GD880

User Guide

GD880

CE0168



www.lg.com

P/N : MMBB0374266 (1.0)

CE0168



www.lg.com

P/N : MMBB0374266 (1.0)

Bluetooth QD ID B016192



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

دليل مستخدم GD880

المحت

إرشاد

التعر

نظرة

تثبيت

شحن

بطاقات

استخد

نلم

التا

الشان

بكا

الق

المف

الكال

إجر

إجر

الره

خ

الات

إجر

عره

اسد

اسد

اسد

تهانينا لشراءك هاتف GD880 المتقدم والصغير من LG،
والمصمّم للعمل مع التكنولوجيا الرقمية الأحدث لاتصالات
الهواتف المحمولة.

المحتويات

21.....	تغيير ضبط المكالمات العام.....	7.....	إرشادات لاستخدام آمن وفعال.....
22.....	تغيير اعدادات مكالمة الفيديو.....	10.....	التعرّف على الهاتف الخاص بك.....
22.....	كلفة المكالمات.....	11.....	نظرة على الهاتف وهو مفتوح.....
22.....	مدة المكالمة.....	12.....	تثبيت بطاقة SIM و البطارية.....
22.....	حجم البيانات.....	13.....	شحن الهاتف.....
23.....	الاسماء.....	14.....	بطاقة الذاكرة.....
23.....	البحث عن جهة اتصال.....	15.....	استخدام شاشة اللمس.....
23.....	اضافة اسم جديد.....	15.....	تلميحات شاشة اللمس.....
23.....	إنشاء مجموعة.....	15.....	التحكم بشاشة اللمس.....
24.....	تغيير اعدادات الاسماء.....	16.....	الشاشة الرئيسية الخاصة بك.....
24.....	عرض المعلومات.....		يمكنك إضافة قوائم مفضلة إلى القائمة الرئيسية.....
25.....	استيراد أصدقاء من الشبكات الاجتماعية.....	16.....	المفاتيح السريعة.....
26.....	المراسلة.....	17.....	المكالمات.....
26.....	الرسائل.....	18.....	إجراء مكالمة.....
26.....	إرسال رسالة.....	18.....	إجراء مكالمة من جهات الاتصال.....
26.....	إدخال النص.....	18.....	الرد على مكالمة ورفضها.....
26.....	وضع T9.....	19.....	خيارات أثناء المكالمة.....
26.....	استخدام النماذج.....	20.....	الاتصال السريع.....
26.....	استخدام الرموز التعبيرية.....	20.....	إجراء مكالمة ثانية.....
26.....	استخدام التوافيق.....	20.....	عرض سجلات المكالمات.....
27.....	تغيير اعدادات الرسائل النصية.....	20.....	استخدام تحويل المكالمات.....
27.....	تغيير اعدادات رسائل الوسائط المتعددة.....	21.....	استخدام حظر المكالمات.....
27.....	تغيير الاعدادات الأخرى.....	21.....	استخدام رسالة اعتذار.....
28.....	إعداد البريد الإلكتروني.....		
	حساب بريد Microsoft Exchange الإلكتروني.....		

المحتويات

خو	أصوات.....	38	استرداد رسائل البريد الإلكتروني.....	28
إض	استخدام صوت.....	39	إرسال بريد إلكتروني باستخدام	
اسد	ملفات الفيديو.....	39	حسابك الجديد.....	28
مزا	مشاهدة فيديو.....	39	تغيير إعدادات البريد الإلكتروني.....	29
مزامنة	إرسال فيديو كليب.....	39	الكاميرا.....	30
تثبي	محتويات الفلاش.....	39	التعرّف على محدّد النظر.....	30
تود	المستندات.....	39	التقاط صورة سريعة.....	31
نسد	المحتويات الأخرى.....	39	بعد التقاط الصورة.....	31
واس	الألعاب.....	39	استخدام الإعدادات المتقدمة.....	32
عره	لعب لعبة.....	39	كاميرا الفيديو.....	33
مزا	نقل ملف إلى هاتفك.....	40	التعرّف على محدّد النظر.....	33
مزا	الموسيقى.....	40	إنشاء فيديو سريع.....	34
اسد	نقل الموسيقى إلى الهاتف.....	41	بعد إنشاء الفيديو.....	34
er	تشغيل أغنية.....	41	استخدام الإعدادات المتقدمة.....	35
OSP	راديو FM.....	41	الصور و مقاطع الفيديو.....	36
تثبي	المنسق.....	42	عرض الصور وملفات الفيديو.....	36
البس	SNS.....	42	التقاط صورة من فيديو.....	36
تود	Facebook.....	42	مشاهدة الصور كعرض شرائح.....	36
فص	Twitter.....	42	تعيين صورة كخلفية الشاشة.....	36
التا	الإعدادات.....	42	خبر الصور.....	36
نقل	إضافة حدث إلى التقويم.....	42	الوسائط المتعددة.....	38
تعد	إضافة عنصر إلى قائمة المهام.....	42	الصور.....	38
اسد	إضافة مذكرة.....	42	إرسال صورة.....	38
	ضبط المنبه.....	43	استخدام صورة.....	38
	تسجيل ملف صوتي أو صوت.....	43	طباعة صورة.....	38
	استخدام الحاسبة.....	43	نقل صورة أو نسخها.....	38

50.....	ويب
50.....	الوصول إلى ويب
50.....	إضافة الإشارات المرجعية والوصول إليها
50.....	استخدام قارئ RSS
51.....	حفظ صفحة
51.....	الوصول إلى صفحة محفوظة
51.....	عرض محفوظات الهاتف المحمول
51.....	استخدام الهاتف كمودم
52.....	الاعدادات
52.....	تخصيص الأنماط
52.....	تغيير اعدادات العرض
52.....	تغيير اعدادات الجهاز
53.....	تغيير اعدادات اللمس
53.....	تغيير اعدادات إمكانية الاتصال
54.....	استخدام إدارة الذاكرة
55.....	إرسال الملفات واستلامها باستخدام بلوتوث
55.....	تغيير اعدادات بلوتوث
56.....	الافتتان بجهاز بلوتوث آخر
56.....	استخدام سماعة رأس بلوتوث
56.....	Wi-Fi
57.....	تحديث البرنامج
58.....	الملحقات
59.....	البيانات التقنية

43.....	خوئل وحدة
44.....	إضافة مدينة إلى ساعتك العالية
44.....	استخدام ساعة الإيقاف
44.....	مزامنة LG Air Sync
45.....	مزامنة الكمبيوتر الشخصي
45.....	تثبيت LG PC Suite على الكمبيوتر
45.....	توصيل الهاتف والكمبيوتر
45.....	نسخ احتياطي للمعلومات على الهاتف واستعادتها
45.....	عرض ملفات الهاتف على الكمبيوتر
46.....	مزامنة جهات الاتصال
46.....	مزامنة الرسائل
46.....	استخدام الهاتف كجهاز تزامن الموسيقى
46.....	DivX Converter
48.....	OSP (على شاشة الهاتف)
48.....	تثبيت OSP على الكمبيوتر
48.....	البدء بتشغيل OSP
48.....	توصيل الهاتف والكمبيوتر
48.....	فصل الهاتف عن الكمبيوتر
49.....	التحكم بالهاتف
49.....	نقل ملف بين هاتفك والكمبيوتر
49.....	تعديل ملف على هاتفك
49.....	استخدام إعلام OSP

38.....
39.....
39.....
39.....
39.....
39.....
39.....
39.....
39.....
39.....
40.....
40.....
41.....
41.....
41.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
42.....
43.....
43.....
43.....

إرشادات لاستخدام آمن و فعال

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتنصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول GD880 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. وتستخدم هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

• تستخدم إرشادات التعرض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتنصاص المحدد. أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.

• وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هواتف LG. فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.

• حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كجم وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج.

• قيمة SAR الأكثر ارتفاعاً لطراز الهاتف هذا والتي تم اختبارها من قبل DASy4 للاستخدام في الأذن هي 1.23 واط/كجم (10 جرام) وعند حمله على الجسم تكون هذه القيمة 1.10 واط/كجم (10 جرام).

• معلومات بيانات SAR للمقيمين في بلدان/ مناطق تبين حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كجم متوسط لكل جرام واحد (1) من النسيج.

العناية بالمنتج وصيانتة



تحذير

استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

• لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.

• ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون والرايو. وأجهزة الكمبيوتر الشخصي.

• يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.

• تجنب إسقاط الوحدة.

• لا تعرض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.

• أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالب بذلك، على سبيل المثال. لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

- الهاتف على أجهزة إعداد النبض، مثلاً في الجيب على مستوى المصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة، فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك، هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنته جار، فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبينزين أو التينر أو الكحول).
- لا تفصح الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الرائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر، لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

تشغيل فعال للهاتف

الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، ما قد يؤثر على أدائها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك، تجنّب وضع

إرشادات لاستخدام آمن و فعال

تجنّب إلحاق الضرر بسمّك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمّك، ونوصي بالتالي بالأا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك، كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية، في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته، توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قبل موفر خدمة معتمد.

مناطق التفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتبع الأنظمة أو القوانين.

مناطق تتسم أجواؤها بالقابلية

للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكهيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافّة، وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها، وبخلاف أنظمة البطاريات الأخرى ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط، فشواحن LG مصمّمة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.

- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلّص منها كمخلفات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، وإعدادات المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.

التعرّف على الهاتف الخاص بك

- مفتاح الطاقة / الإقفال
- اضغط طويلاً للتشغيل/إيقاف التشغيل.
- اضغط لبرهة قصيرة لتشغيل/إيقاف تشغيل الشاشة.

لشاحن. موصل الكبل



عدسة الكاميرا الداخلية

فتحة بطاقة
microSD



مفتاح الكاميرا
• اضغط لاستخدام
الكاميرا.


المفاتيح الجانبية

- عندما تكون الشاشة في وضع الشاشة الرئيسية:
- مستوى صوت نغمة الرنين ونغمة اللمس.
- أثناء مكالمة: مستوى صوت سماعة الأذن.



⚠ تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.


نظرة على الهاتف وهو مفتوح

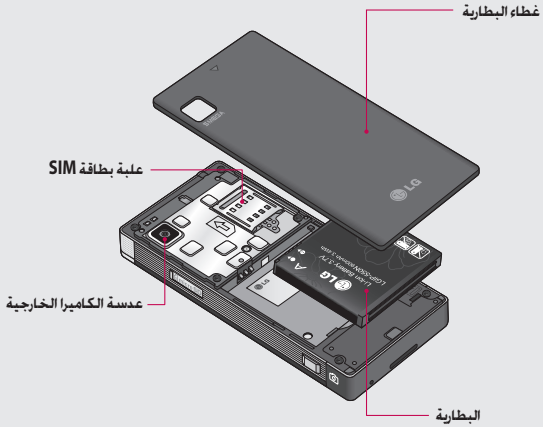

تثبيت بطاقة SIM و البطارية


1 نزع غطاء البطارية

حرك غطاء البطارية نحو أسفل الهاتف وبعيداً عنه.

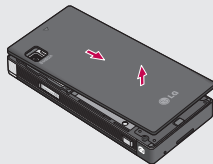

2 تثبيت بطاقة SIM


قم بتمرير بطاقة SIM إلى داخل حاملها وتأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. احرص على إزالة البطارية من الهاتف قبل تثبيت بطاقة SIM. لإخراج بطاقة SIM، اسحبها بلطف.

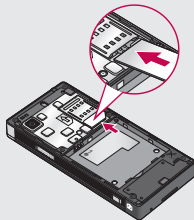


⚠️ تحذير: لا تخرج البطارية عندما يكون الهاتف قيد التشغيل. إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.

3 تركيب البطارية

قم أولاً بإدخال الجانب الأيمن للبطارية في الحافة العليا لحجرة البطارية. تأكد من محاذاة ملامسات البطارية مع أطراف توصيل الهاتف. اضغط جانب البطارية الأيسر إلى الأسفل حتى تستقر في مكانها.

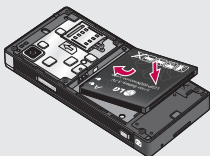

شحن الهاتف

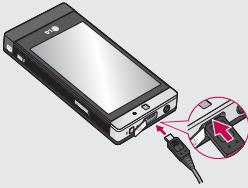

قم بتوصيل مهبايئ السفر (الشاحن) وكبل USB المضمن. قم بتوصيل كبل USB في الهاتف وفي المقبس الكهربائي. يجب أن يتم شحن الهاتف GD880 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

ملاحظة: يجب شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية. تجاهل رسالة "البطارية الممتلئة" الأولى واترك الهاتف في الشحن ليلاً.

بطاقة الذاكرة

تركيب بطاقة ذاكرة


يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة MicroSD.



ملاحظة: بطاقة الذاكرة هي ملحق اختياري.

- 1 حرك غطاء الفتحة نحو الأسفل.
 - 2 ضع بطاقة microSD في الفتحة، تأكد من كون ناحية الموصّلات الذهبية موجهة نحو الأسفل.
 - 3 حرك غطاء الفتحة نحو الأعلى.
- يعتمد الهاتف GD880 بطاقة ذاكرة تصل سعتها إلى 16 غيغابايت.

تنسيق بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهيأة أصلاً. إذا لم تكن بطاقة الذاكرة مهيأة فعلياً عليك تهيئتها قبل أن تبدأ باستخدامها.

- 1 في الشاشة الرئيسية حدد . ثم اعدادات الهاتف.
- 2 المس معلومات الذاكرة وقم بالتمرير إلى الأسفل لاختيار الذاكرة الخارجية.
- 3 المس تهيئة ثم أكد خيارك.
- 4 أدخل كلمة المرور إذا كان قد تم تعيين واحدة. سنتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

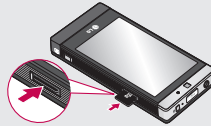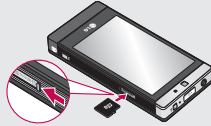

استخدام شاشة اللمس

تلميحات شاشة اللمس

- لتحديد عنصر، الممس وسط الرمز.
- لا حاجة إلى الضغط بقوة، فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك للتمس الخيار المطلوب.
- احترس من عدم لمس أي مفاتيح أخرى.
- عندما لا يكون الهاتف GD880 قيد الاستخدام، يعود إلى شاشة القفل.

التحكم بشاشة اللمس

تتغير مفاتيح التحكم في شاشة لمس الهاتف GD880 بسرعة، وهذا يتوقف على المهمة التي تقوم بها.

فتح التطبيقات

لفتح أي تطبيق، الممس الرمز:

التمرير

قم بالسحب من جهة إلى جهة للتمرير، على بعض الشاشات، كقائمة محفوظات المكالمات، يمكنك أيضاً التمرير لأعلى أو لأسفل.



الشاشة الرئيسية الخاصة بك

3 حين تلمس إضافة، يمكنك الاختيار بين عنصر واجهة الاستخدام أو الإشارات المرجعية أو الاختصار (إذا لم ترغب في الإضافة. المس إلغاء).

4 اختر قائمة تريد إضافتها من خلال لمس علامة النجمة في الجانب الأيمن من القائمة. ستظهر القائمة على الشاشة عندما تعود إلى الشاشة السابقة.

5 لدى انتهائك. المس موافق.



من هنا يمكنك الوصول إلى كل خيارات القوائم وإجراء مكالمة سريعة وعرض حالة الهاتف. بالإضافة إلى عدة أمور أخرى.

يمكنك إضافة قوائم مفضلة إلى

القائمة الرئيسية

1 المس على الشاشة الرئيسية.

2 إذا رغبت في إزالة قائمة مفضلة. المس


في الجانب العلوي الأيمن من الرمز. إذا رغبت في إضافة قوائم مفضلة إلى القائمة الرئيسية. المس إضافة في الجانب السفلي الأيمن من الشاشة.




الشاشة الرئيسية الخاصة بك


المفاتيح السريعة

توفر المفاتيح السريعة الموجودة على الشاشة الرئيسية وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

 الممس لمس لفتح جهات الاتصال. للبحث عن الرقم الذي تود الاتصال به، أدخل اسم جهة الاتصال في حقل البحث في أعلى الشاشة باستخدام لوح اللمس. يمكنك إنشاء جهات اتصال جديدة وتعديل جهات اتصال موجودة، إلخ.

 الممس لإحضار لوحة الطلب بواسطة اللمس لإجراء مكالمة.

 الممس لفتح القائمة العلوية الكاملة

 الممس للوصول إلى قائمة المراسلة. من هنا يمكنك إنشاء رسالة SMS أو MMS جديدة أو عرض حافظة الرسائل.

المكالمات

إجراء مكالمة

- 1 المس في الشاشة الرئيسية لفتح لوحة المفاتيح.
- 2 أدخل الرقم باستخدام لوحة المفاتيح.
- 3 المس لإبدء المكالمة. ولكن إذا أردت بدء مكالمة فيديو المس ثم حدد إجراء مكالمة فيديو.
- 4 لإنهاء المكالمة، اضغط لإنهاء مكالمة في أسفل الشاشة.

تلميح! لإدخال + لإجراء مكالمة دولية، اضغط باستمرار **[0+]**.

تلميح! اضغط على مفتاح الطاقة لإيقاف شاشة اللمس ومنع إجراء مكالمات عن طريق الخطأ.

إجراء مكالمة من جهات الاتصال

- 1 على الشاشة الرئيسية المس لفتح جهات الاتصال.
- 2 اضغط مربع حقل البحث في أعلى الشاشة واستخدم لوحة المفاتيح لإدخال الأحرف القليلة الأولى من جهة الاتصال التي ترغب في الاتصال بها.
- 3 في القائمة التي تمت تصفيتها، المس رمز المكالمة إلى جانب جهة الاتصال التي تريد الاتصال بها. تستخدم المكالمة الرقم الافتراضي إذا كان هناك أكثر من رقم لجهة الاتصال هذه.
- 4 أو يمكنك لمس اسم جهة الاتصال وتحديد الرقم الذي تريد استخدامه إذا توفر لديك أكثر من رقم لجهة الاتصال هذه.


الرد على مكالمة ورفضها

عند رنين الهاتف، المس رد للرد على المكالمة. لكنهم الرنين، المس صامت. يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير نمط الهاتف إلى صامت أثناء حضور اجتماع. المس رفض لرفض مكالمة واردة.

خيار

تلميح
إصدار

خيارات أثناء المكالمه

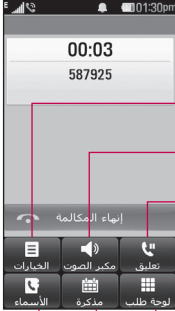

الخيارات - المس لإحضار قائمة بالمزيد من خيارات أثناء المكالمه.

مكبر الصوت - المس لبدء تشغيل مكبر صوت الهاتف.

انتظار - المس لوضع المكالمه قيد الانتظار.

المس لوحة طلب لفتح لوحة مفاتيح رقمية لإجراء مكالمه ثانية، تسمح لك هذه الوظيفة أيضاً بالتنقل عبر القوائم مع خيارات مرقمة عند طلب خدمات هاتف مؤتمتة مثل مراكز الاتصال.

المس مذكرة لإضافة مذكرة أثناء مكالمه.


المس للأسماء للبحث في جهات الاتصال أثناء مكالمه.

تلميح! للتمرير عبر قائمة خيارات أو قائمة جهات اتصال. المس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة، فتنحرك القائمة نحو الأعلى وتحصل على المزيد من العناصر المرئية.

المكالمات

الاتصال السريع

يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 حدد دليل الهاتف والمس  وحدد الاتصالات السريعة.

2 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1. ولا يمكنك تغييره. المس أي رقم آخر لتعيينه كجهة اتصال سريع.


3 افتح جهة الاتصال. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم هاتفها مرة واحدة. للبحث عن جهة اتصال اضغط مربع حقل البحث وأدخل الحرف الأول من اسم جهة الاتصال.


إجراء مكالمة ثانية

1 خلال المكالمة الأولية، المس لوحة طلب الرقم الذي تريد الاتصال به.

2 المس مكالمة صوتية لتوصيل المكالمة.

3 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إقفال المكالمة الأولية ويوضع المتصل في حالة الانتظار.

4 للتغيير بين المكالمات، المس  أو اضغط على رقم المكالمة قيد الانتظار.

5 لإنهاء إحدى المكالمتين أو كلاهما، اضغط  وحدد إنهاؤه.

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجريها.

عرض سجلات المكالمات

المس السجلات في القائمة الرئيسية.

تلميح! المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة. ووقتها ومدتها.

استخدام تحويل المكالمات

1 المس اعدادات المكالمة في القائمة الرئيسية.

2 المس تحويل المكالمات.

3 اختر بين المكالمات الصوتية و مكالمات الفيديو. يمكنك اختيار تحويل كل المكالمات. أو المكالمات عندما يكون الخط مشغولاً. أو عند عدم الرد. أو عندما لا يكون الوصول إليك ممكناً.

4 المس تنشيط.

5 اختر إلى مركز البريد الصوتي أو إلى رقم آخر لإدخال رقم التحويل الجديد.

6 المس موافق عندما تنتهي من إدخال الرقم. ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

تلميح! لإيقاف تشغيل كل عمليات تحويل المكالمات، حدّد إلغاء تنشيط الكل من قائمة تحويل المكالمات.

استخدام حظر المكالمات

- 1 المس اعدادات المكالمة في القائمة الرئيسية.
- 2 المس حظر المكالمات.
- 3 اختر المكالمات الصوتية أو مكالمات الفيديو. يمكنك إيقاف تشغيل حظر كل المكالمات من خلال لمس إلغاء تنشيط الكل من قائمة حظر المكالمات.
- 4 اختر أحد الخيارات الخمسة:
كل المكالمات الصادرة
المكالمات الدولية الصادرة
المكالمات الدولية الصادرة باستثناء المحلية
كل الواردة
الواردة عند السفر.
المس تنشيط.
- 5 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

تلميح! حدّد القائمة الأساسية لـ أرقام الاتصال الثابتة لتشغيل وجميع قائمة بالأرقام التي يمكن الاتصال بها من هاتفك.

استخدام رسالة اعتذار

قبل رفض مكالمة واردة. يمكنك استخدام "رسائل اعتذار" لإرسال رسالة تفسر فيها سبب عدم استلام المكالمة الواردة.

تغيير ضبط المكالمات العام

- 1 المس اعدادات المكالمة في القائمة الرئيسية.
- 2 المس اعدادات عامة. من هنا يمكنك تعديل اعدادات الخيارات التالية:
رفض مكالمة - مر المفتاح إلى اليسار لتحديد قائمة الرفض. يمكنك لمس مربع النص لاختيار كل المكالمات. أو جهات اتصال معينة أو مجموعات. أو أرقام غير مسجلة (الأرقام غير الموجودة في جهات الاتصال). أو بدون معرف المتصل. المس  لتغيير إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.
إظهار أحداث SNS - اختر ما إذا كنت ترغب في عرض أحداث SNS.
معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار
للتشغيل أو إلى اليمين لـ إيقاف التشغيل.
منبه الدقائق - مرر المفتاح إلى اليسار لبدء التشغيل لسماع نغمة كل دقيقة خلال فترة المكالمة.

المكالمات

وضع الرد بلوتوث - حدد لا يدوي لتتمكن من الرد على مكالمة باستخدام سماعة رأسبلوتوث أو حدد سماعة هاتف للرد على مكالمة بالضغط على مفتاح موجود على سماعة الهاتف.

حفظ رقم جديد - اختر تشغيل أو إيقاف تشغيل وظيفة حفظ رقم جديد. مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين لإيقاف التشغيل.

نقاء الصوت - اختر تشغيل أو إيقاف تشغيل وظيفة نقاء الصوت. مرر المفتاح إلى اليسار لبدء التشغيل أو إلى اليمين لإيقاف التشغيل.

تغيير اعدادات مكالمة الفيديو

- 1 المس اعدادات المكالمات.
 - 2 المس اعدادات مكالمة الفيديو.
- من هنا يمكنك تعديل اعدادات الخيارات التالية:
- استخدام صورة خاصة - اختر ما إذا كنت ترغب في استخدام صورة خاصة لمكالمات الفيديو.
 - صورة خاصة - اختر صورة لمكالمات الفيديو.
 - المرأة - اختر ما إذا كنت ترغب في استخدام مرآة.

كلفة المكالمات

عرض الرسوم المطبقة على الأرقام التي طلبتها (هذه الخدمة تعتمد على الشبكة. فبعض مشغلي الشبكات غير قادرين على دعمها).


مدة المكالمة

عرض مدة كافة المكالمات الصادرة أو المستلمة أو كلاهما.



حجم البيانات

عرض كمية البيانات التي استلمتها أو أرسلتها بالكيلوبايت.

الاسماء

- 6 قم بتعيين جهة الاتصال إلى مجموعة أو أكثر. يمكنك تعيين حتى ثلاث مجموعات لجهة اتصال واحدة. اختر من ضمن بلا مجموعة العائلة، الزملاء، المدرسة و الأشخاص المهمون جداً.
- 7 كما يمكنك أيضاً إضافة نغمة رنين، واهتزاز، وصفحة رئيسية، وعنوان منزل، واسم شركة، ومهنة، وعنوان شركة، وعيد ميلاد، وذكرى ومذكرة.
- 8 المس  لحفظ جهة الاتصال.



إنشاء مجموعة

- 1 المس دليل الهاتف، المس السهم للأسفل إلى جانب جهات الاتصال وحدد مجموعات.
- 2 المس مجموعة جديدة أو المس  وحدد مجموعة جديدة.
- 3 أدخل اسماً للمجموعة الجديدة في حقل اسم المجموعة. يمكنك أيضاً أن تحدّد نغمة رنين خاصة بالمجموعة.
- 4 المس .

ملاحظة: إذا قمت بحذف مجموعة، فلن تفقد جهات الاتصال التي تم تعيينها إلى تلك المجموعة، إذ ستبقى موجودة في دليل الهاتف.

البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

- 1 المس  على الشاشة الرئيسية ثم المس دليل الهاتف أو المس  على الشاشة الرئيسية.
- 2 تظهر قائمة بجهات الاتصال. عندما نكتب الحرف الأول من اسم جهة الاتصال، تنتقل اللوحة إلى منطقة الجهات التي تبدأ بهذا الحرف في القائمة.

تلميح! يتم عرض لوحة المفاتيح الأبجدية حالما تقوم بضغط حقل الاسم.


إضافة اسم جديد

- 1 المس دليل الهاتف والمس اسم جديد.
- 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في الهاتف أو SIM.
- 3 أدخل الاسم الأول والأخير.
- 4 يمكنك أن تدخل حتى خمسة أرقام مختلفة لجهة اتصال واحدة، يتم مسبقاً تعيين كل إدخال إلى الهاتف المحمول، المنزل، المكتب، جهاز الاستدعاء و الفاكس.
- 5 أضف عنوان بريد إلكتروني.

الاسماء

تغيير اعدادات الاسماء

يمكنك تغيير اعدادات الاسم بحيث تتناسب مع تفضيلاتك الخاصة.

1 المس دليل الهاتف والمس . وقم بالتمرير إلى أسفل وحدد اعدادات الاسم.

2 من هنا يمكنك ضبط الاعدادات التالية:

إظهار لوحة المفاتيح - اختر عرض لوحة المفاتيح.

اسم العرض - اختر ترتيب عرض الاسم.

مزامنة جهات الاتصال - الاتصال بال خادم لمزامنة جهات الاتصال.

نسخ الكل - نسخ جهات الاتصال من الهاتف إلى بطاقة SIM أو من بطاقة SIM إلى الهاتف.

يمكنك اختيار نسخ كل جهة على حدة أو نسخ كل الجهات دفعة واحدة.

نقل الكل - يعمل هذا الأمر بالطريقة نفسها التي يعمل بها النسخ. غير أن جهات الاتصال

ستحفظ فقط في الموقع الذي تم نقلها إليه.

استعادة جهات الاتصال - استعادة جهات

الاتصال إلى بطاقة الذاكرة.

مسح جهات الاتصال - قم بحذف كل جهات الاتصال المتوفرة لديك. اختر من ضمن الهاتف وبطاقة SIM والمس نعم إذا كنت تريد بالتأكيد حذف جهات الاتصال.

معلومات الذاكرة - عرض معلومات حول الذاكرة المتوفرة في ما يتعلق بالهاتف و USIM وبريد USIM الإلكتروني.

إرسال كل جهات الاتصال عبر بلوتوث - أرسل كل جهات الاتصال إلى جهاز آخر باستخدام بلوتوث. سنتم مطالبتك ببدء تشغيل بلوتوث إذا قمت بتحديد هذا الخيار.

نسخ احتياطي لجهات الاتصال - إجراء نسخ احتياطي لبطاقة الذاكرة.

عرض المعلومات

1 المس دليل الهاتف والمس . وقم بالتمرير إلى أسفل وحدد معلومات.

من هنا يمكنك عرض أرقام الاتصال بالخدمة

أرقامك الخاصة. ومعلومات الذاكرة (إظهار

المساحة الفارغة في الذاكرة) ووضعك الشخصي.

تلميح! لإضافة بطاقة العمل الخاصة بك.

حدد وضعك الشخصي وأدخل التفاصيل كما

تقوم عادة بالنسبة لأي جهة اتصال. المس

للانتهاء .

استيراد أصدقاء من الشبكات الاجتماعية

يمكنك إضافة صديقك كجهة اتصال من الشبكة الاجتماعية (Facebook أو Twitter) إلى هاتفك باستخدام هذه القائمة.

- 1 المس دلييل الهاتفف. ثم المس  وحدد استيراد أصدقاء من.
- 2 حدد Facebook أو Twitter.
- 3 أدخل البريد الإلكتروني وكلمة المرور ثم انقر فوق موافق.
- 4 حدد جهة الاتصال التي تريد إضافتها.
- 5 تحديد .

المراسلة

الرسائل




يجمع الهاتف GD880 ميزات إرسال رسائل SMS وMMS في قائمة واحدة بديهية وسهلة الاستخدام.

إرسال رسالة

- 1 المس  على الشاشة الرئيسية والمس الرسائل أو المس  على الشاشة الرئيسية.
- 2 المس كتابة رسالة،  وحدد إدراج لإضافة صورة أو فيديو أو صوت أو رمز تعبيرى إلخ.
- 3 المس إلى لإدخال رقم المستلم أو فتح جهات الاتصال أو المفضلة. يمكنك إضافة جهات اتصال جديدة. حالما تنتهي المس صندوق الرسائل أذناه لبدء إنشاء رسالة نصية.
- 4 بعد إدخال النص. يمكنك إرسال الرسالة بلمس إرسال SMS/إرسال MMS في أعلى الرسالة.

 **تحذير:** إذا تمت إضافة صورة، أو فيديو أو صوت إلى رسالة SMS فسيتم تحويلها تلقائياً إلى MMS وسيُفرض رسم عليك وفقاً لذلك.

إدخال النص

- المس  لتفعيل وضع T9.
- المس  للاختيار لغة الكتابة.
- المس  للتبديل بين الأرقام والرموز وإدخال النص.

تتمكن مفاتيح الوظائف من التبديل بين إدخال الأحرف الكبيرة والأحرف الصغيرة أو كتابة رسالة في ملء الشاشة على لوحة المفاتيح. إلخ.

وضع T9

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي لمستها. يقوم بتوقع الكلمة التي تقوم بإدخالها ويقترح كلمات بديلة.

استخدام النماذج

قم بإنشاء نماذج لرسائل SMS وMMS التي ترسلها بشكل متكرر. هناك بعض النماذج الموجودة مسبقاً على الهاتف. والتي يمكنك تعديلها.

استخدام الرموز التعبيرية

يمكنك إضفاء الحيوية على رسائلك من خلال استخدام الرموز التعبيرية. تجد على هاتفك بعض الرموز التعبيرية الشائعة الاستخدام.

يمكنك إضافة رمز تعبيرى جديد عبر لمس رمز تعبيرى جديد.

استخدام التواقيع

قم بإنشاء توقيعات لرسائل SMS وMMS التي ترسلها غالباً. عند كتابة توقيع جديد. يمكنك إدخال توقيع من إدخال <إدخال> المزيد في قائمة الخيارات.

تغيير اعدادات الرسائل النصية

المس الرسائل والمس [⋮] وحدد الاعدادات. حدّد رسالة نصية. يمكنك إدخال تغييرات على:

مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقرير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسائلك.

فترة الصلاحية - اختر فترة تخزين رسائلك في مركز الرسائل.

أنواع الرسائل - حوّل نصك إلى نص أو صوت أو فاكس X.400 أو بريد إلكتروني.

تشفير الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسائلك وبالتالي على رسوم البيانات.

إرسال النص الطويل ك- اختر إرسال النص الطويل كرسائل SMS متعددة أو كرسالة MMS.

تغيير اعدادات رسائل الوسائط المتعددة

المس المراسلة. المس [⋮] وحدد الاعدادات. ثم حدد رسالة وسائط متعددة. يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر بين الشبكة المحلية أو شبكة النجوال. إذا اخترت يدوي، فستتلقى إعلام برسائل MMS فقط ويمكنك حينئذٍ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

تقرير الاستلام - اختر السماح بتقرير الاستلام و/أو طلبه.

قراءة الرد - اختر طلب قراءة الرد أو السماح بها.

الأولوية - اختر مستوى أولوية رسالة MMS (أولوية منخفضة، الأولوية العادية، أولوية عالية).

مدة الصلاحية - اختر فترة حفظ رسالتك في مركز الرسائل.

مدة الشريحة - اختر المدة التي تظهر خلالها الشرائح على الشاشة.

وضع الإنشاء - اختر وضع الرسالة (مقيد، تحذير، مجاني).

وقت الاستلام - اختيار المدة قبل تسليم كل رسالة.

مركز رسائل وسائط متعددة - اختر مركزاً من ضمن القائمة أو أضف مركز رسالة جديد.

تغيير الاعدادات الأخرى

المس المراسلة. المس [⋮] وحدد الاعدادات.

بريد فيديو/بريد صوتي - المس وضع جديد جديد لإضافة خدمة بريد فيديو/بريد صوتي جديدة. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - اختيار استلام أو حظر رسائل الخدمة. كما يمكنك تعيين حماية الرسالة وذلك بإنشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق بهم في خيار أمان الخدمة.

حفظ الرسالة المرسلة - اختر ما إذا كنت ترغب في حفظ الرسائل المرسلة.


خدمة المعلومات - اختر ما إذا كنت تريد تشغيل/ إيقاف تشغيل البث الخلوي وحدد القنوات واللغات. التواقيع - إنشاء أو تعديل أو حذف تواقيع.

المراسلة

إعداد البريد الإلكتروني

المس  على الشاشة الرئيسية، ومرر إلى الجانب الأيمن ثم المس بريد إلكتروني.

في حال عدم تعيين حساب بريد إلكتروني، المس **Microsoft Exchange**، إلخ.

في حال تم تعيين حساب البريد الإلكتروني في الهاتف ورغبت في إضافة حساب بريد إلكتروني جديد، المس  وحدد حساب بريد إلكتروني جديد.

عنوان البريد الإلكتروني - أدخل عنوان البريد الإلكتروني.

كلمة المرور - أدخل كلمة مرور الحساب.

نوع صندوق البريد - أدخل نوع صندوق البريد: IMAP4 أو POP3 أو PUSH. تعتمد هذه الأنواع على موفر الخدمة.

اسم المستخدم - أدخل اسم مستخدم الحساب.
الخادم الوارد - أدخل عنوان خادم البريد الإلكتروني الوارد.

الخادم الصادر - أدخل عنوان خادم البريد الإلكتروني الصادر.

مصادقة SMTP - اختر إعدادات الحماية لخادم البريد الصادر.

اسم الحساب - كيفية ظهور الحساب في قائمة الحسابات في مجلد البريد الإلكتروني.

حاليا يتم إعداد الحساب، سيظهر في قائمة الحسابات في حافظة البريد الإلكتروني.

حساب بريد Microsoft Exchange

الإلكتروني

عنوان البريد الإلكتروني - أدخل عنوان حساب البريد الإلكتروني.

عنوان الخادم - أدخل عنوان خادم البريد الإلكتروني.

المجال - أدخل مجال الحساب.

اسم المستخدم - أدخل اسم مستخدم الحساب.

كلمة المرور - أدخل كلمة مرور الحساب.

عناصر المزامنة - اختر ما إذا كنت ترغب في

استخدام عناصر المزامنة (جهات الاتصال،

والجداول، والمهام).

استرداد رسائل البريد الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني جديدة في حسابك تلقائياً أو يدوياً. للتحقق يدوياً:

1 المس البريد الإلكتروني.

2 المس الحساب الذي تريد استخدامه.

3 اختر استرداد جديد.

إرسال بريد إلكتروني باستخدام


حسابك الجديد

1 المس كتابة بريد إلكتروني فيفتح بريد إلكتروني جديد.

2 أكمل الرسالة.

3 المس إرسال بريد إلكتروني فيتم إرسال البريد الإلكتروني.

تغيير اعدادات البريد الإلكتروني

- 1 المس بريد إلكتروني في علامة التبويب اتصالات.
- 2 المس  وحدد اعدادات البريد الإلكتروني. فيمكنك تغيير الاعدادات التالية:
 - حساب البريد الإلكتروني - حدد حساب بريد إلكتروني
 - السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل تأكيد القراءة.
 - طلب الرد على البريد الإلكتروني - اختر ما إذا كان يجب طلب رسائل تأكيد القراءة.
 - تضمين الرسالة الأصلية - اختر تضمين الرسالة الأصلية في ردك.
 - تضمين المرفق - اختر تضمين المرفق الأصلي في أي رد.
 - استرداد تلقائي أثناء... - اختر استرداد الرسائل تلقائياً أثناء تواجدك في الخارج (التجوال).
 - إعلام ببريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.
 - التوقيع - إنشاء توقيع بريد إلكتروني.
 - الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.
 - الحجم الأقصى للاستلام - حدد الحجم الأقصى للاستلام: 100 كيلو بايت، 200 كيلو بايت، 300 كيلو بايت، 500 كيلو بايت، 1 ميغا بايت، 2 ميغا بايت، 2.2 ميغا بايت.

الكاميرا

التعرّف على محدّد المنظر

التكبير/التصغير - التكبير أو التصغير. كما يمكنك تكبير الصورة وتصغيرها عبر الضغط على المفاتيح الجانبية الموجودة في الهاتف.

التعرّض - فتظهر الصورة ذات التباين المنخفض ضبابية، بينما تظهر الصورة ذات التباين العالي أكثر دقةً ووضوحاً.



رجوع

وضع الكاميرا

وضع الفيديو - مرر لأسفل هذا الرمز لتبديل وضع الفيديو.

الاستوديو - يمكنك هذا الخيار من الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا، ما عليك سوى اللمس وسيظهر الاستوديو على الشاشة.

الاعدادات - اللمس هذا الرمز لفتح قائمة الاعدادات. انظر استخدام الاعدادات المتقدمة.

الماكرو - قم بتشغيله لالتقاط لقطات قريبة.

التقنا

1

2

تلو

الف
الأ
مح

بعد

تظهر
اسم
الجانب

الإلكت

ملاحظ

رسائل

الخلف

التنش

أو لمتك

مختل

التقاط صورة سريعة

- 1 اضغط على المفتاح الموجود في الجانب الأيمن من الهاتف.
- 2 عندما تركز الكاميرا على موضوع الصورة. المس في وسط الشاشة الأيمن لالتقاط صورة. يمكنك أيضاً الضغط على مفتاح الكاميرا الموجود على جانب الهاتف.

المس للعودة إلى محدد المنظر.

المس لحذف الصورة.

المس لالتقاط صورة أخرى على الفور. المس لالتقاط صورة أخرى على الفور.

المس لعرض استوديو الصور المحفوظة.



تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدد المنظر.

بعد التقاط الصورة

تظهر الصورة الملتقطة على الشاشة. يظهر اسم الصورة في أسفل الشاشة مع أربعة رموز في الجانب الأيمن.

المس لإرسال الصورة كرسالة، البريد الإلكتروني، بلوتوث.

ملاحظة: قد يتم فرض رسم إضافي لدى تنزيل رسائل MMS عند التجوال.

المس لاستخدام الصورة كشاشة خلفية، إقبال الشاشة أو جهة الاتصال أو لبدء التشغيل أو إيقاف التشغيل أو لمكالمة صادرة أو لمكالمة واردة.

المس لتعديل الصورة باستخدام أدوات مختلفة.

الكاميرا

استخدام الإعدادات المتقدمة

من محدّد المنظر. المس  لفتح كل خيارات الإعدادات المتقدمة.

الحجم - قم بتغيير حجم الصورة لتوفير مساحة على الذاكرة أو التقاط صورة تم تعيينها مسبقاً إلى حجم جهة الاتصال الصحيح. حدد قيمة يكسل من ضمن الخيارات الرقمية الستة: **5M(2560x1920)**, **3M(2048x1536)**, **1M(1280x960)**, **2M(1600x1200)**, **الخلفية VGA(640x480)**, **QVGA(320x240)**.

وضع المشهد - تعيين الكاميرا بحيث تناسب مع بيئة الاستخدام. اختر من ضمن **تلقائي** أو **ليلي** أو **أفقي** أو **عمودي** أو **رياضة**.

ISO - يحدّد تصنيف ISO حساسية جهاز استشعار الضوء في الكاميرا. بقدر ما تكون قيمة ISO عالية، بقدر ما تكون الكاميرا حساسة. يعتبر هذا الأمر مفيداً في الحالات الداكنة عندما لا يكون استخدام الفلاش ممكناً. اختر قيمة ISO من بين **تلقائي** أو **ISO 800** أو **ISO 400** أو **ISO 200** أو **ISO 100**.

توازن اللون الأبيض - اختر من ضمن **تلقائي** أو **متوهج** أو **فلوريسنت** أو **شمس** أو **غائم**.

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. هناك ستة خيارات لدرجة اللون: **إيقاف**، **بني داكن**، **وأحادي اللون**، **وسالب**، **وتشمس**، **وأزرق**.

التركيز - حدد طريقة تركيز الكاميرا. اختر من ضمن **تركيز تلقائي** أو **تركيز يدوي** أو **تنعج الوجه**.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير قبل أن تلتقط الكاميرا الصورة وبعد ضغط زر الالتقاط. اختر من ضمن **إيقاف التشغيل** أو **3 ثوانٍ** أو **5 ثوانٍ** أو **10 ثوانٍ**.

وضع اللقطة - اختر وضع اللقطة من ضمن 9 خيارات.

الجودة - اختر من ضمن **دقيق جداً**، **ودقيق** و**عادي**. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر.

إظهار الصورة الملتقطة - اختر عرض الصورة مع خيارات بعد التقاط صورة.

صوت الغالق - حدّد خياراً من ضمن خيارات صوت الغالق الثلاثة.

شاشة الشبكة - اختر من ضمن **إيقاف تشغيل**، أو **تقاطع بسيط** أو **ثلاثية الأقسام**.

تحديد المعالم - اختر ما إذا كنت تريد تشغيل معلومات EXIF للصورة لكتابة معلومات GPS.

إعادة تعيين الإعدادات - استعادة كل إعدادات الكاميرا.

الذاكرة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

تبديل الكاميرا - اختر ما إذا كنت ترغب في استخدام الكاميرا الداخلية أو الكاميرا الخارجية.

كاميرا الفيديو التعرّف على محدّد المنظر



كاميرا الفيديو

إنشاء فيديو سريع

1 اضغط على مفتاح الكاميرا الموجود في الجانب الأيمن من الهاتف.

تلميح! للتبديل إلى وضع الكاميرا أو وضع الفيديو. ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدد المنظر.

2 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.

3 اضغط مفتاح الكاميرا مرة واحدة لبدء التسجيل. أو المس النقطة الحمراء على الشاشة.

4 تظهر كلمة **REC** لتسجيل في أسفل محدد المنظر مع مؤقت في الأسفل يظهر طول الفيديو.

5 لإيقاف الفيديو مؤقتاً المس **||** وللاستئناف حدد **●**.

6 المس **■** على الشاشة أو اضغط مفتاح الكاميرا على الهاتف لإيقاف التسجيل.

بعد إنشاء الفيديو

ستظهر على الشاشة صورة ثابتة تمثل الفيديو الملتقط. سيظهر اسم الفيديو في أسفل الشاشة.

المس لإرسال الفيديو كرسالة أو بريد إلكتروني أو بواسطة بلوتوث.

المس لاستخدام الفيديو كملف

صوت أو نغمة فيديو

المس لتفعيل الفيديو.

المس للعودة إلى محدد المنظر.

المس لحذف الفيديو الذي قمت بالتقاطه

لتوكّ وأكد بلمس **نعم**. يظهر محدد المنظر من جديد.

المس **●** لالتقاط فيديو آخر على الفور.

المس لعرض استوديو الصور وملفات الفيديو المحفوظة.



استخدام الاعدادات المتقدمة

من محدّد المنظر، المس  لفتح كل خيارات الاعدادات المتقدمة.

يرجى الرجوع إلى الاعدادات المتقدمة للكاميرا.

حجم الفيديو - حدد حجم الفيديو:

**(QVGA(320x240, (VGA(640x480
(176X144)QCIF.**

وضع التسجيل - قم بتعيين حد لمدة الفيديو :
عادي MMS.

الصوت - اختر كتم الصوت (لتسجيل فيديو من دون صوت) أو إلغاء الكتم لتضمين الصوت.

عرض الفيديو المسجّل - اختر عرض الفيديو مع الخيارات بعد التقاطه.

الصور و مقاطع الفيديو

عرض الصور وملفات الفيديو

- 1 قم بالتمرير والمس الاستوديو في القائمة الأساسية أو المس  على شاشة المعاينة الخاصة بالكاميرا.
- 2 يظهر الاستوديو على الشاشة.
- 3 المس الفيديو أو الصورة لفتحهما كلياً.

نلميح! انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.



التقاط صورة من فيديو

- 1 حدّد الفيديو الذي تريد التقاط صورة منه.
- 2 المس وسط الشاشة لإحضار خيارات التشغيل. ومن ثم المس  لإيقاف تشغيل الفيديو مؤقتاً على الإطار الذي تريد تحويله إلى صورة والمس الناحية اليسرى العليا من الشاشة لفتح قائمة .
- 3 المس  من الناحية اليسرى العليا وحدد التقاط.
- 4 تظهر الصورة على الشاشة مع الاسم المعين لها.
- 5 المس  من الناحية اليمنى العليا للعودة إلى الفيديو.
- 6 تحفظ الصورة في حافظة اليوم الوسائط وتظهر في الاستوديو.


⚠ تحذير: قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

مشاهدة الصور كعرض شرائح





يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض ملفات الفيديو كعرض شرائح.

- 1 المس  في الاستوديو. ثم قم بالتمرير وحدد عرض الشرائح.
- 2 يبدأ عرض الشرائح.
- 3 يمكنك فتح قوائم مثل المدة والانتقال. إلخ عبر اللمس  أثناء تشغيل عرض الشرائح.

تعيين صورة كخلفية الشاشة


- 1 المس الاستوديو في القائمة الأساسية.
- 2 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحها.
- 3 المس  لفتح القائمة.
- 4 المس ضبط كـ ومن ثم صورة الشاشة الرئيسية.


تحرير الصور

- 1 اختر الصورة التي تود تعديلها من قائمة الاستوديو. المس  من الناحية اليسرى العليا لفتح القائمة وحدد تحرير.
- 2 المس الرموز تحرير صورتك:
 -  حدد الناحية.
 -  حدد الأداة:
 -  ارسم شيئاً على الشكل الحر لصورتك. حدّد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.

T إضافة نصوص إلى صورة معينة.


بإمكانك اختيار مربع النص وألوان المربع والنص.


 قم بتزيين صورتك بواسطة الطوابيع.


 مسح الرسومات التي أجريتها على الصورة. يمكنك اختيار حجم الممحاة التي تستخدمها.


 المس لفتح المزيد من خيارات التأثير بما فيها الاستدارة.


 المس لإضافة تأثيرات إلى الصورة.

 يساعدك هذا الخيار على ضبط صورة التقطتها باستخدام السطوح والتباين.

 المس للعودة إلى الاستويديو.

 قم بحفظ التغييرات التي أجريتها على الهاتف. بإمكانك حفظ الصورة المعدلة باسم آخر.

 امسح التعديل الذي أجريته على الصورة.

 حدّد لإرسال الصور المعدلة كـ رسالة أو بريد إلكتروني أو عبر بلوتوث.



الوسائط المتعددة

يمكنك حفظ جميع ملفات وسائط متعددة على ذاكرة الهاتف للتمتع بنفاذ سهل إلى الصور والأصوات والفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يساعد استخدام بطاقة ذاكرة على تحرير مساحة على ذاكرة الهاتف. يمكنك العثور على هذه الملفات في قائمة **أشياءي** في القائمة الرئيسية.

الصور


تحتوي الصور على قائمة بالصور بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

إرسال صورة


- 1 **المس**  من الشاشة الرئيسية. **المس** **أشياءي** وحدد الصور. حدد الصور التي تريد **المس** .
- 2 **المس** إرسال عبر واختر من ضمن الرسالة. أو البريد الإلكتروني. أو بلوتوث.

استخدام صورة

بإمكانك اختيار صور لاستخدامها كخلفية لشاشة الإقفال وللتعرف على المتصلين.

- 1 **المس** **أشياءي** في القائمة الرئيسية وحدد الصور. حدد الصور التي تريد **المس** .
- 2 **المس** ضبط كـ واختر من: صورة الشاشة الرئيسية، صورة شاشة الإقفال. صورة بدء التشغيل. صورة إيقاف التشغيل، صورة المكالمات الصادرة، صورة المكالمات الواردة


طباعة صورة

- 1 **المس** **أشياءي** وحدد صورة. حدد الصور التي تريد **المس** .
- 2 **المس** طباعة ثم اختر من بين **PictBridge** و **بلوتوث**.

نميج! يمكنك الطباعة عبر بلوتوث أو عبر الاتصال بطابعة **PictBridge** متوافقة.

نقل صورة أو نسخها

يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة. ويمكنك القيام بذلك لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لحفظ الصور.

- 1 **المس** **أشياءي** في علامة التبويب ترفيه. حدد **صور** **المس** .
- 2 حدد **نقل** أو **نسخ**.
- 3 يمكنك تحديد/إلغاء تحديد الصور بواسطة الضغط عليها بالتمنيع. حدد الصورة التي تريد أن تنقلها أو تنسخها **المس** **نسخ/نقل**.

أصوات

تحتوي الأصوات على لائحة أصوات بما فيها تلك التي تم تنزيلها والافتراضية والتسجيلات الصوتية. ومن هنا يمكنك إدارة الأصوات. أو إرسالها أو تعيينها كمنغمت زنين.

المستندات

يمكنك عرض كل ملفات المستندات. من قائمة المستندات، من هنا يمكنك عرض ملفات Excel و PowerPoint و Word و Text و PDF.

المحتويات الأخرى

تحتوي المحتويات الأخرى على قائمة ملفات غير صور أو أصوات أو مقاطع فيديو أو مستندات أو ألعاب أو تطبيقات.

الألعاب

يمكنك تثبيت ألعاب جديدة للاستمتاع بها في وقت فراغك.

كما يمكنك الوصول إليها عبر قائمة الألعاب والتطبيقات في القائمة الرئيسية.

لعبة

1 المس الألعاب والتطبيقات في علامة التبويب الترفيه.

2 اختر لعبة لتشغيلها.

استخدام صوت

1 المس أيقونتي في علامة التبويب القائمة الرئيسية وحدد أصوات.

2 حدد ملف الصوت الذي تريده. يبدأ التشغيل.

ملفات الفيديو

تعرض ملفات الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.


مشاهدة فيديو

1 المس أيقونتي في القائمة الرئيسية وحدد ملفات الفيديو.

2 حدد فيديو ليتم تشغيله.

إرسال فيديو كليب

1 حدّد فيديو.

2 المس  ومن ثم المس إرسال عبر. اختر من بين الرسالة أو البريد الإلكتروني أو بلوتوث.

محتويات الفلاش

تحتوي حافظة محتويات الفلاش على كل ملفات SVG و SWF التي تم تنزيلها.

1 المس أيقونتي في القائمة الرئيسية وحدد محتويات فلاش.

2 حدد الملف الذي تريد عرضه.

الوسائط المتعددة

نقل ملف إلى هاتفك

تعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كبل المزامنة.

للنقل باستخدام بلوتوث:

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرئيين لبعضهما بعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.
- 4 يجب أن يظهر الملف في حافظة صورك إذا كان ملف صور وحافظة الصوت إذا كان ملف موسيقى.

الموسيقى

يكون مشغل الموسيقى مضمناً في الهاتف LG GD880 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك، للوصول إلى مشغل الموسيقى المس الموسيقى، من هنا يمكنك الوصول إلى عدد من الحافظات الموجودة في أعلى الشاشة:

ملاحظة: يمكن أن تكون حقوق النشر للمفاتيح

الموسيقى محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية. قد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. قبل تحميل أو نسخ الملف. يرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

كل المسارات - يحتوي على كل الأغاني الموجودة على هاتفك باستثناء الموسيقى الافتراضية التي تم تحميلها مسبقاً.

المفضلة - يحتوي على كل الأغاني التي قمت بحفظها كمفضلة.

الفنانون - الاستعراض عبر مجموعتك الموسيقية بحسب الفنان.

الألبومات - الاستعراض عبر مجموعتك الموسيقية بحسب الألبوم.

الأنواع - الاستعراض عبر مجموعتك الموسيقية بحسب النوع.

قائمة التشغيل - يحتوي على كل قوائم التشغيل التي أنشأتها.

نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة.

يمكن أيضاً استخدام LG PC Suite. لنقل باستخدام بلوتوث:

- 1 تأكد من إيقاف تشغيل بلوتوث في الجهازين ومن كونهما مرتبين لبعضهما البعض.
- 2 حدّد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.
- 3 عندما يصبح الملف جاهزاً للإرسال، يجب أن تقبله على هاتفك بالضغط على نعم.
- 4 يجب أن يظهر الملف في الموسيقى < كل المسارات.

تشغيل أغنية

- 1 المس الموسيقى.
- 2 حدد الأغنية التي تريد تشغيلها. تظهر رسالة التأكيد في وضع الصامت.
- 3 المس  لإيقاف الأغنية مؤقتاً.
- 4 المس  للتجاوز إلى الأغنية التالية.
- 5 المس  للعودة إلى الأغنية السابقة.
- 6 المس  للعودة إلى قائمة الموسيقى، يمكن للمس أكثر من مرة واحدة للعودة إلى القائمة.

راديو FM

تتوفر في طراز الهاتف LG GD880 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.

- 1 قم بالتمرير والمس راديو FM في القائمة الرئيسية.
 - 2 اضبط المحطة أو مستوى الصوت بحسب رغبتك.
- ملاحظة:** ستحتاج إلى توصيل سماعات الرأس بالهاتف للاستماع إلى الراديو. أدخلها في المأخذ المخصص لها إلى جانب ذلك المخصص لموصل الشاحن.

المنسّق

SNS

تركز خدمات الشبكة الاجتماعية على بناء شبكة وعلاقات اجتماعية بين الأشخاص الذين يشاركون الاهتمامات و/أو النشاطات.


Facebook

Facebook هو موقع إلكتروني مخصص للتشبيك الاجتماعي.

1 المس  من الشاشة الرئيسية ومن ثم المس Facebook.

Twitter

يوفر Twitter خدمات مجانية للتشبيك الاجتماعي ونشر المدونات.

1 المس  من الشاشة الرئيسية ومن ثم المس Twitter.

الاعدادات


1 المس  من الشاشة الرئيسية ومن ثم المس اعدادات SNS.

2 تشغيل التشبيك الاجتماعي. إذا كنت تملك حساباً مرتبطاً بالتشبيك الاجتماعي. يتم عرض الحساب. المس الحساب. ثم المس **تسجيل الدخول** لإضافة صديقك كجهة اتصال إلى الهاتف.




3 إذا لم يكن لديك حساب. المس حساب جديد. ثم قم بإنشاء حساب جديد.

ملاحظة: سيتم فرض رسم إضافي عليك عند الاتصال بهذه الخدمة. للحصول على تفاصيل تتعلق بالرسم على البيانات. اتصل بموفر الشبكة.



إضافة حدث إلى التقويم

- 1 المس  على الشاشة الرئيسية ثم المس منظم المواعيد.
- 2 حدّد التاريخ الذي تريد إضافة حدث إليه.
- 3 المس  والمس جديد أو المس ببساطة جدول جديد في أسفل الشاشة.



إضافة عنصر إلى قائمة المهام

- 1 المس  على الشاشة الرئيسية ثم المس المهام في القائمة الرئيسية.
- 2 المس  والمس مهمة جديدة أو المس ببساطة مهمة جديدة في أعلى الشاشة.
- 3 عين تاريخ المهمة. وأضف ملاحظات وحدد مستوى الأولوية: عالية أو متوسطة أو منخفضة.
- 4 قم بحفظ المهمة عبر لمس .

إضافة مذكرة

- 1 المس  على الشاشة الرئيسية ثم المس مذكرة في القائمة الرئيسية.
- 2 المس  ثم مذكرة جديدة. أو المس ببساطة مذكرة جديدة في أعلى الشاشة.
- 3 اكتب مذكرة ثم المس **حفظ**.
- 4 ستظهر المذكرة على الشاشة في تطبيق المذكرة.

ضبط المنبه



- 1 المس  على الشاشة الرئيسية ثم المس تنبيهات . منبه عنصر واجهة الاستخدام يجب أن يظهر في القائمة كافتراضي ولا يمكنك حذفه.
- 2 المس  ثم تنبيه جديد. أو المس ببساطة تنبيه جديد في أعلى الشاشة. ملاحظة: يمكنك إعداد 11 تنبيهاً بما في ذلك منبه عنصر واجهة الاستخدام.

تلميح! قم بتمرير مفتاح المنبه إلى اليسار لتعيينه.


تسجيل ملف صوتي أو صوت

- 1 المس  على الشاشة الرئيسية ثم المس مسجل الصوت في القائمة الرئيسية.
- 2 اختر الموقع الذي تريد حفظ التسجيل فيه: داخلي أو خارجي.
- 3 اختر وضع تسجيل: عادي أو MMS.
- 4 المس  لبدء التسجيل.
- 5 المس  لإيقاف التسجيل مؤقتاً.
- 6 المس  لإنهاء التسجيل.
- 7 المس  للاستماع إلى تسجيلك.
- 8 المس  لضبط مستوى الصوت.

استخدام الحاسبة


- 1 المس  على الشاشة الرئيسية ثم المس أدوات أخرى في القائمة الرئيسية.
- 2 حدّد الحاسبة.
- 3 المس المفاتيح الرقمية باستخدام لوحة المفاتيح لإدخال الأرقام.
- 4 بالنسبة إلى العمليات الحسابية البسيطة. المس الوظيفة المطلوبة (+, -, ×, ÷). يتبعها =.
- 5 بالنسبة إلى العمليات الحسابية الأكثر تعقيداً. المس  واختر من ضمن sin أو cos أو tan أو ln أو exp أو sqrt أو deg أو rad أو الخ.

تحويل وحدة


- 1 المس  على الشاشة الرئيسية ثم المس أدوات أخرى في القائمة الرئيسية.
- 2 حدّد محول الوحدة.
- 3 في أعلى الشاشة. اختر ما إذا كنت ترغب في تحويل وحدات العملة أو المساحة أو الطول أو الوزن أو درجة الحرارة أو مستوى الصوت أو السرعة.
- 4 يمكنك تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.
- 5 تظهر القيمة المناسبة على الشاشة.

المنسق

إضافة مدينة إلى ساعتك العالمية

- 1 المس  على الشاشة الرئيسية ثم المس أدوات أخرى في القائمة الرئيسية.
- 2 حدّد الساعة العالمية.
- 3 المس  ثم مدينة جديدة. أو المس ببساطة مدينة جديدة في أعلى الشاشة.

استخدام ساعة الإيقاف

- 1 المس  على الشاشة الرئيسية ثم المس أدوات أخرى في القائمة الرئيسية.
- 2 حدّد ساعة الإيقاف.
- 3 المس بدء في أسفل الشاشة لبدء تشغيل المؤقت.
- 4 المس الدورة إذا أردت تسجيل وقت الدورة.
- 5 المس إيقاف لإيقاف تشغيل المؤقت.

مزمنة LG Air Sync


باستخدام هذه القائمة، يمكنك مزمنة بيانات PIM أو محتويات أخرى في الهاتف مع حساب تزامن LG Air Sync.

- 1 المس تزامن LG Air Sync في القائمة الرئيسية.
- 2 إذا لم يكن لديك حساب تزامن LG Air Sync، يرجى زيارة الموقع www.lgairsync.com لإنشاء حسابك. إذا كان لديك حساب، أدخل المعرف وكلمة المرور.
- 3 إذا أردت مزمنة بيانات PIM، المس مزمنة PIM. إذا أردت مزمنة المحتويات، المس رابط المزمنة الثلاثية من LG.
- 4 في حالة مزمنة PIM، حدد العناصر التي تريد مزمنتها ثم المس المزمنة الآن.
- 5 في حالة رابط المزمنة الثلاثية من LG، حدد العناصر التي تريد مزمنتها ثم المس المزمنة الآن.

مزامنة الكمبيوتر الشخصي

يمكنك مزامنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لملفاتك للاطمئنان.

تثبيت LG PC Suite على الكمبيوتر

1 على الشاشة الرئيسية، المس  والمس إمكانية الاتصال.

2 حدّد وضع اتصال USB والمس PC Suite.

3 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر بضع دقائق، ستعرض رسالة دليل التثبيت.

4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج منيّت LG PC Suite.

5 عند اكتمال عملية التثبيت، يظهر رمز LG PC Suite على سطح المكتب.

توصيل الهاتف والكمبيوتر

1 على الشاشة الرئيسية، المس  والمس إمكانية الاتصال.

2 حدّد وضع اتصال USB.

3 المس PC Suite.

4 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB وانتظر بضع دقائق، يعمل PC Suite بشكل تلقائي.

نسخ احتياطي للمعلومات على الهاتف

واستعادتها

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق الرمز نسخ احتياطي، وحدد نسخ احتياطي أو استعادة.

3 حدّد المحتوى الذي ترغب في إجراء نسخ احتياطي له أو استعادته، حدد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات، أو استعادة المعلومات منه، انقر فوق الرمز البدء.

4 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

عرض ملفات الهاتف على الكمبيوتر

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق رمز إدارة الصور، ملفات الفيديو أو موسيقى.

3 تظهر على الشاشة في حافظه هاتف LG كل الصور وملفات الصوت، والفيديو التي حفظتها في الهاتف.

تلميح! يساعدك عرض محتويات الهاتف على الكمبيوتر على إدارة الملفات التي لم تعد بحاجة إليها.

مزامنة الكمبيوتر الشخصي

مزامنة جهات الاتصال

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز جهات الاتصال.
- 3 انقر فوق زر مزامنة جهات الاتصال فيقوم الكمبيوتر الآن باستيراد وعرض كل جهات الاتصال المحفوظة في الهاتف.

DivX Converter

سيقوم DivX بتحويل ملفات الوسائط الموجودة على جهاز الكمبيوتر إلى تنسيق يسمح لك بتحميلها وعرضها على هاتفك. عند التثبيت، حدد **DivX** من Program Files على الكمبيوتر. ثم **DivX converter** يتبعه Converter.

استخدم الأسهم في التطبيق لتغيير تنسيق التحويل إلى Mobile. إذا نقرت فوق خانة التطبيق بزر الماوس الأيمن وحددت تفضيلات، فيمكنك تغيير الموقع الذي تم حفظ الملفات المحولة فيه. قم بسحب الملفات وإفلاتها في التطبيق لإجراء تحليل أولي. ثم حدد تحويل كي تبدأ العملية. عندما تنتهي العملية يظهر إطار منبثق للإعلامك باكتمال عملية التحويل.


مزامنة الرسائل

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الهاتف في الحافظات على الشاشة.

استخدام الهاتف كجهاز تزامن

الموسيقى

يمكنك أن تستخدم هاتفك كجهاز تزامن الموسيقى لمزامنة ملفات الموسيقى فقط. يمكنك تنفيذ مزامنة الموسيقى باستخدام Windows Media Player 10/11 وهو يعتمد ذاكرة الهاتف وبطاقة ذاكرة خارجية.

- 1 افصل الهاتف عن الكمبيوتر.
- 2 على الشاشة الرئيسية، المس  والمس إمكانية الاتصال.

حول فيديو DivX® : DivX عبارة عن
تهيئة فيديو رقمية أنشأتها شركة DivX, Inc.
هذا جهاز رسمي من DivX مسموح به وهو
يشغل فيديو DivX. يرجى زيارة الموقع
www.divx.com للحصول على مزيد من
المعلومات وعلى أدوات البرامج لتحويل ملفاتك
إلى ملفات فيديو بتنسيق DivX.
حول DivX فيديو عند الطلب: يجب تسجيل
جهاز DivX® المسموح به هذا مع DivX
ليتمكن من تشغيل محتويات DivX فيديو
عند الطلب (VOD). لإنشاء رمز التسجيل،
حدد موقع قسم DivX VOD في قائمة إعداد
الجهاز. انتقل إلى موقع vod.divx.com
بواسطة هذا الرمز لإكمال عملية التسجيل
واعرف المزيد عن DivX VOD.

Pat. 7,295,673


OSP (على شاشة الهاتف)

يمكنك باستخدام ميزة OSP رؤية شاشة الهاتف من جهاز الكمبيوتر. يمكنك التحكم بهاتفك من شاشة الكمبيوتر تماماً كما لو أنك تستخدم الهاتف.

تثبيت OSP على الكمبيوتر

يتم تثبيت OSP تلقائياً لدى تثبيت LG PC Suite على الكمبيوتر

البدء بتشغيل OSP

انقر فوق  على الكمبيوتر أو بدء < برنامج > فوق LG OSP

توصيل الهاتف والكمبيوتر

عبر كبل USB

- 1 انقر فوق "معالج التوصيل".
- 2 حدد "توصيل الكبل". ثم انقر فوق التالي.
- 3 قم بتوصيل الهاتف والكمبيوتر عبر كبل USB.
- 4 حدد التالي.
- 5 أدخل كلمة مرور هاتفك في الكمبيوتر (القيمة الافتراضية هي "0000")

عبر بلوتوث

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرتباً بالنسبة إلى الكمبيوتر والهاتف.
- 2 حدد اتصال بلوتوث ثم انقر فوق التالي
- 3 حدد هاتفك من ضمن الهواتف الموجودة. ثم

انقر فوق التالي

4 أدخل رمز PIN في الكمبيوتر. ثم انقر فوق التالي.

5 انقر فوق "نعم" في رسالة التأكيد.

6 أدخل رمز PIN في الهاتف. ثم انقر فوق موافق.

7 أدخل كلمة مرور هاتفك في الكمبيوتر. ثم انقر فوق موافق.

فصل الهاتف عن الكمبيوتر

إذا كنت ترغب في فصل الهاتف عن الكمبيوتر، انقر فوق 



التحكم بالهاتف

يمكنك التحكم بالهاتف باستخدام OSP. إذا قمت بالنقر بالماوس فوق قائمة في شاشة OSP الرئيسية، فسيتم تشغيل القائمة في هاتفك كما لو أنك حددت القائمة على هاتفك.

مثلاً، إذا أردت إرسال رسالة باستخدام OSP، فانقر فوق المراسلة في علامة التبويب اتصال في قائمة OSP الرئيسية، ثم انقر فوق كتابة رسالة.

يمكنك إدخال أحرف عبر النقر بالماوس أو باستخدام لوحة مفاتيح الكمبيوتر.

إذا أردت استخدام الماوس لإدخال أحرف، فانقر فوق الأحرف التي تريد إدخالها.

إذا أردت استخدام لوحة المفاتيح، فاكتب الأحرف على لوحة المفاتيح.

انقر فوق إرسال SMS حالما تنتهي من كتابة الرسالة.

نقل ملف بين هاتفك والكمبيوتر

نقل ملف من الكمبيوتر إلى الهاتف

1 حدد الملف الذي تود نقله من الكمبيوتر، ثم قم بسحب الملف وإفلاته في شاشة OSP.

نقل ملف من الهاتف إلى الكمبيوتر

1 حدد الملف الذي تود نقله من ألبوم الوسائط في علامة التبويب ترفيه في شاشة OSP. ثم انقر فوق زر الماوس الأيمن وحدد حفظ في الكمبيوتر.

تعديل ملف على هاتفك

1 حدد الملف الذي تود تعديله من ألبوم الوسائط في علامة التبويب ترفيه في شاشة OSP. ثم انقر فوق زر الماوس الأيمن وحدد تعديل

2 يمكنك تعديل الملف باستخدام التطبيقات المقترنة.

3 عندما تنتهي من تعديل الملف، فسيتم إرساله مجدداً إلى هاتفك.

استخدام إعلام

توفر ميزة OSP رسائل منبثقة مع معلومات حول مختلف الأحداث في هاتفك: المنبه والرسالة والمكالمة الواردة وغيرها.

1 حدد  في شاشة OSP

2 حدد "التنبيه بواسطة رسالة منبثقة" ملاحظة: عندما تستخدم ميزة OSP، قد تكون استجابة هاتفك بطيئة.

ويب

الوصول إلى ويب


- 1 المس المستعرض في القائمة الرئيسية.
- 2 للانتقال مباشرةً إلى الصفحة الرئيسية للمستعرض. حدد المتصفح. أو حدد إدخال URL واكتب URL يتبعه موافق في الجانب العلوي الأعلى من الشاشة.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. يرجى مراجعة موفر خدمة الشبكة للحصول على تفاصيل حول رسوم البيانات.

إضافة الإشارات المرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة علامات وحفظ صفحات ويب.

- 1 المس المستعرض في القائمة الرئيسية.
- 2 حدّد علامات . تظهر قائمة بالإشارات المرجعية على الشاشة.
- 3 لإضافة إشارة مرجعية جديدة: المس إشارة مرجعية جديدة. أدخل اسماً للإشارة المرجعية. يتبعه URL في مربع الحقل المناسب.

4 المس  في الزاوية اليسرى العليا من الشاشة. تظهر إشاراتك المرجعية الآن في قائمة الإشارات المرجعية.

5 للوصول إلى الإشارة المرجعية ما عليك إلا لمس رمز اتصال إلى جانب الإشارة المرجعية أو المس عنوان الإشارة المرجعية ثم المس انتقال. سيتم توصيلك بالإشارة المرجعية.

استخدام قارئ RSS

إنّ RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية ويب يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخال المدونات أو عناوين الأخبار أو البث الصوتي على ويب podcasts. ويحتوي مستند RSS والذي يسمى تغذية أو تغذية ويب أو قناة على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل. وبفضل تغذية RSS سيتمكن الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بشكل تلقائي. هذه الطريقة أسهل من التحقق من تلك المواقع يدوياً. وباستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ أو بالنقر فوق رمز RSS في مستعرض يبدأ عملية الاشتراك. ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثاً عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

حفظ صفحة

- 4 اختر مودم **USB** لمحمول **LG** وحدد موافق. يظهر الآن على الشاشة.
- 5 اكتب نمطاً يستطيع الاتصال بإنترنت وقم بحفظ القيم.
- 6 سيظهر النمط الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق **اتصال**. سيتصل الكمبيوتر من خلال **GD880**.

استخدام بلوتوث:

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً بالنسبة إلى الكمبيوتر والهاتف **GD880**.
- 2 قم بإقران الكمبيوتر و **GD880** بحيث يكون رمز المرور مطلوباً للاتصال.
- 3 استخدم **معالج الاتصال** على **LG PC Suite** لإنشاء اتصال بلوتوث نشط.

- 4 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق زر جديد.
- 5 اختر مودم **USB** لمحمول **LG** وحدد موافق. يظهر الآن على الشاشة.
- 6 اكتب نمطاً يستطيع الاتصال بإنترنت وقم بحفظ القيم.
- 7 سيظهر النمط الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق **اتصال**. سيتصل الكمبيوتر من خلال **GD880**.

1 انتقل إلى صفحة ويب المطلوبة كما جاء وصفه أعلاه.

- 2 المس  وحدد حفظ هذه الصفحة.
- 3 أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.
- 4 المس حفظ.

الوصول إلى صفحة محفوظة

المس المتصفح وحدد الصفحات المحفوظة. يمكنك عرض الصفحات المحفوظة هنا.

عرض محفوظات الهاتف المحمول

المس المستعرض وحدد محفوظات الهاتف المحمول.

استخدام الهاتف كمودم

بإمكان الهاتف **GD880** المضاعفة كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك. ويمكنك استخدام إما كبل **USB** أو بلوتوث.

استخدام كبل **USB**:

- 1 تأكد من تثبيت **LG PC Suite** على الكمبيوتر.
- 2 قم بتوصيل الجهاز **GD880** والكمبيوتر باستخدام كبل **USB** وابدأ بتشغيل البرنامج **LG PC Suite**.
- 3 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق زر جديد وحدد مودم.

الاعدادات

تخصيص الأنماط


يمكنك تخصيص اعدادات النمط باستخدام قائمة الاعدادات.

1 المس  على الشاشة الرئيسية ثم المس الازواضع.

2 اختر النمط الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما فيها اعدادات نغمة رنين، مستوى الصوت و نغمة رنين الرسالة وغيرها.


تغيير اعدادات العرض

المس  على الشاشة الرئيسية ثم المس اعدادات الشاشة. اختر ضبط الشاشة الذي تريد تعديله.

ملاحظة: بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية، قد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

تغيير اعدادات الجهاز

تمتّع بحرية تكيف عمل GD880 مع أسلوبك الخاص.

المس  على الشاشة الرئيسية والمس اعدادات الهاتف ثم اختر من ضمن القائمة أدناه.

الاعدادات

التاريخ والوقت - اضبط ضبط التاريخ والوقت أو اختر تحديث الوقت تلقائياً أو استخدام خيار التوقيت الصيفي.

توفير الطاقة - مرر المفتاح إلى الجانب الأيسر لتعيين اعدادات توفير الطاقة إلى وضع تشغيل/ إيقاف التشغيل أو الليل فقط.

اللغات - غير لغة شاشة الهاتف GD880.

القفل الذاتي - إقفال لوحة المفاتيح تلقائياً في الشاشة الرئيسية، يمكنك اختيار وقت القفل الذاتي.

الحماية - اضبط اعدادات الحماية، وهذا يشمل رموز PIN وقفل الهاتف.

معلومات الذاكرة - انظر استخدام إدارة الذاكرة للحصول على مزيد من المعلومات.

اعدادات التخزين الأساسي - اختر الموقع الذي تفضل حفظ العناصر فيه بين ذاكرة الهاتف والذاكرة الخارجية.

اعادة ضبط الاعدادات - يسمح هذا الخيار باستعادة كل الاعدادات إلى الافتراضية.

معلومات الجهاز - يظهر معلومات الجهاز، يمكنك ترقية البرنامج عبر ويب باستخدام هذه القائمة.

القوائم المفضّلة - يمكنك إضافة شبكة مفضّلة للاتصال بها. إذا كانت الشبكة تجري بحثاً تلقائياً، اختر من قائمة الشبكات. إذا لم تكن هذه الحالة، يمكنك إضافة شبكة جديدة يدوياً.

أوضاع إنترنت - تظهر هذه القائمة أنماط إنترنت. لا يمكنك حذف تكوينات بلدك الافتراضية أو تعديلها. ولكن يمكنك إضافة نمط جديد باستخدام هذه القائمة.

نقاط الوصول - قام مشغّل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

النسخ الاحتياطي - يمكنك إرسال معلومات إلى خادم المشغّل أو استلام معلومات من خادم مشغّل.

ملاحظة: إن هذه الخدمة غير متوفرة في جميع البلدان. يرجى الاتصال بموفر الخدمة لمزيد من المعلومات.

الشبكة المحلية - يمكنك اختيار محتويات ومشاركتها من خلال الشبكة المحلية. احرص على عدم الكشف عن المعلومات الشخصية.

نوع **GPS** - حدد نوع **GPS**: **GPS** مدعم، مستقل.

تسجيل DivX VOD - تستخدم هذه القائمة لإنشاء رمز تسجيل DivX VOD. يرجى زيارة <http://vod.divx.com> للتسجيل والحصول على الدعم التقني.


دليل الجهاز - إظهار كيفية استخدام كل وظيفة (الشاشة الرئيسية، وتنزيل عنصر واجهة الاستخدام، والمؤشر، والقائمة، وجهات الاتصال، SNS، والمتصفح، وإفغال حركة الشاشة).

تغيير اعدادات اللمس

يمكنك تنشيط الصوت أو الاهتزاز لنغمة اللمس.

تغيير اعدادات إمكانية الاتصال

تم مسبقاً إعداد اعدادات إمكانية الاتصال بواسطة مشغّل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الاعدادات، استخدم هذه القائمة:

المس  على الشاشة الرئيسية ثم المس التوصيل.

تحديد الشبكة

تحديد الشبكة - إذا قمت بالتعيين إلى تلقائياً فسيبحث GD880 تلقائياً عن الشبكة ويسجّل الهاتف على الشبكة، ننصح بهذا الأمر للحصول على خدمة وجود أفضل.

إذا قمت بالتعيين إلى يدوي، فستظهر كل الشبكات المتوفرة حالياً ويمكنك تحديد واحدة منها للتسجيل.

وضع الشبكة - يمكنك تعيين نوع الشبكة التي تريد البحث عنها عندما يتم البحث عن الشبكات في قائمة تحديد الشبكة.

الاعدادات

وضع اتصال **USB** - اختر خدمة البيانات من الخيارات وقم بمزامنة هاتف GD880 باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. انظر مزامنة الكمبيوتر الشخصي للحصول على مزيد من المعلومات حول المزامنة. إذا استخدمت مزامنة الموسيقى مع Windows Media Player، حدد مزامنة الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة فقط لمحتويات الموسيقى.

اتصال حزم البيانات - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

اعدادات المتصفح - قم بتعيين القيم ذات صلة بالمستعرض (الأنماط أو اعدادات المظهر أو ذاكرة التخزين المؤقت/ملفات تعريف الارتباط أو الحماية أو إعادة تعيين الاعدادات).

اعدادات التدفق - لقد قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً، ولكن يمكنك إضافة نمط جديد باستخدام هذه القائمة.

اعدادات **Java** - تتيح لك تعيين الأنماط للاتصالات التي تقوم بها برامج Java ولعرض شهادتك.

بيانات التجوال - يتيح لك إدارة استقبال بيانات الوسائط المتعددة/عنصر واجهة الاستخدام/البريد الإلكتروني/PIM/رابط المزامنة الثلاثية في منطقة التجوال.

يمكنك حظر خدمة تطبيقات البيانات باستخدام وظيفة تجوال البيانات لعدم دفع رسوم تطبيق البيانات في منطقة التجوال.

تم إيقاف تشغيل الاعدادات الافتراضية وسيتم حظر استخدام تطبيق البيانات، عند تنشيط وظيفة تجوال البيانات. يمكنك تنزيل البيانات أو مزامنتها.

استخدام إدارة الذاكرة

تتوفر في GD880 ثلاثة أنواع من الذاكرة: الهاتف، وبطاقة **USIM** وبطاقة ذاكرة خارجية.

ويمكنك استخدام إدارة الذاكرة لتحديد طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة.

المس اعدادات الجهاز: ثم معلومات الذاكرة.

الذاكرة العامة الداخلية - عرض الذاكرة المتوفرة في الذاكرة العامة الداخلية.

ذاكرة الوسائط المتعددة الداخلية - عرض الذاكرة المتوفرة في ذاكرة الوسائط المتعددة الداخلية.

الذاكرة المحجوزة الداخلية - عرض الذاكرة المتوفرة في الهاتف لرسائل **SMS**، وجهات الاتصال، والتقويم، وقائمة المهام، والمذكرة، والمنبه، ومحفوظات المكالمات، والإشارات المرجعية وعناصر متفرقة.

ذاكرة بطاقة **USIM** - عرض الذاكرة المتوفرة في بطاقة **SIM**.

الذاكرة الخارجية - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

تغيير اعدادات بلوتوث

المس بلوتوث وحدد .

أدخل تغييراتك على:

معلومات جهازي - عرض معلومات جهازي في ما يتعلق بـ بلوتوث.

إمكانية رؤية جهازي - اختر أن يكون الجهاز مرئياً، أو مخفياً أو مرئياً لـ 1 دقيقة.

اسم جهازي - عرض اسم جهازك.

عنوان بلوتوث الخاص بي - عرض عنوان بلوتوث.

الخدمات المعتمدة - اختر الطريقة التي تريد استخدامها لاستخدام بلوتوث مع مختلف الخدمات.

تشغيل/إيقاف تشغيل وضع SIM عن بُعد - تشغيل أو إيقاف تشغيل.

إرسال الملفات واستلامها باستخدام

بلوتوث

لإرسال ملف:

1 افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقي.

2 اختر إرسال.

اختر بلوتوث.

3 إذا قمت مسبقاً بإقران جهاز بلوتوث، فلن يقوم GD880 بالبحث تلقائياً عن أجهزة بلوتوث أخرى. وإلا فسيبحث الهاتف GD880 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

4 اختر الجهاز الذي تريد إرسال الملف إليه.

5 سيتم إرسال ملفك.

تلميح! خقق من شريط التقدم للتأكد من إرسال الملف.

لاستلام ملف:

1 لتلقي ملفات. يجب أن يكون بلوتوث في وضع التشغيل ومرئياً. راجع تغيير اعدادات الـ بلوتوث أدناه للحصول على مزيد من المعلومات.


2 تظهر رسالة تطلبك بقبول الملف من المرسل. المس نعم لاستلام الملف.

3 ستشاهد الموقع الذي تم حفظ الملف فيه. لملفات الصور يمكنك اختيار عرض الملف أو الانتقال إلى ألبوماتي. يتم عادةً حفظ الملفات في الحافظة المناسبة في ألبوماتي.

الاعدادات

الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف GD880 بجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور.

1 تأكد من كَون بلوتوث في وضع التشغيل ومن كونه مرئياً، يمكنك تغيير إمكانية رؤيتك بلمس .

2 المس جهاز جديد.

3 يبحث الهاتف GD880 عن الأجهزة، عند اكتمال البحث، يظهر رمز تحديث في الجنب العلوي الأيسر من الشاشة.

4 اختر الجهاز الذي تريد الاقتران به وانقر فوق نعم في رسالة التأكيد. قد تحتاج إلى إدخال رمز المرور إذا لم يتطابق مفتاح المرور مع الجهاز الذي تحاول الإقتران به.

5 المس الطلب دائماً أو السماح دائماً، فيتم إقتران الجهاز.

استخدام سماعة رأس بلوتوث

1 تأكد من كَون بلوتوث في وضع التشغيل ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.

3 المس الطلب دائماً أو السماح دائماً، يقوم الهاتف GD880 بالتبديل تلقائياً إلى نمط سماعة الرأس.

Wi-Fi

يتيح لك مدير التشغيل اللاسلكي إدارة اتصالات إنترنت عبر Wi-Fi (شبكة LAN اللاسلكية) على جهازك.

يتيح للهاتف الاتصال بالشبكات اللاسلكية المحلية، أو الوصول إلى إنترنت لاسلكياً.

Wi-Fi أسرع وذات نطاق أوسع من تقنية بلوتوث

اللاسلكية، وبالتالي يمكن استخدامه لإرسال رسائل بريد إلكتروني سريعاً ولاستعراض إنترنت.

ملاحظة: GD880 يدعم WEP، تشفير WPA-PSK/2، وEAP، وليس PSK/2. إذا قام موفر خدمة Wi-Fi أو مسؤول الشبكة بتعيين التشفير لحماية الشبكة، فعليك ملء المفتاح في الإطار المنبثق.

إذا لم يتم تعيين التشفير فلن يظهر الإطار المنبثق هذا، يمكنك الحصول على المفتاح من موفر خدمة Wi-Fi لديك أو من مسؤول الشبكة.

تحدد

برنامج

لمزيد

واستخدام

com

تتيح ل

الأخير

الحاج

برنامج

المسد

التحفة

في كل

أن إزال

التحد

المحد

مسؤول

ننصح

تحديث البرنامج

برنامج تحديث برنامج الهاتف المحمول من LG

لمزيد من المعلومات حول تثبيت هذا البرنامج واستخدامه، يرجى زيارة موقع

<http://www.lgmobile.com>

تتيح لك هذه الميزة تحديث برنامجك إلى الإصدار الأخير بسرعة وبشكل مريح على إنترنت من دون الحاجة إلى زيارة مركز الخدمة الخاص بنا. بما أن برنامج ترقية برنامج الهاتف المحمول يتطلب انتباه المستخدم الكامل لمدة عملية الترقية، يرجى التحقق من التعليمات والملاحظات التي تظهر في كل خطوة قبل المتابعة. تجدر الملاحظة إلى أن إزالة كبل اتصال بيانات USB أو البطاريات أثناء التحديث قد يتسبب بالحاق ضرر بالغ بهاتفك المحمول. وبما أن جهة التصنيع لا تتحمل أي مسؤولية تجاه خسارة بيانات أثناء عملية الترقية، ننصحك بتدوين أي معلومات مهمة لتوخي الأمان.

الملحقات

تم تزويدك بهذه الملحقات مع الهاتف GD880.



كبل البيانات



الشاحن



البطارية



سماعة
رأس
ستيريو

ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

البيانات التقنية

عام

اسم المنتج: GD880

النظام: GSM 850 / E-GSM 900

DCS 1800 / PCS 1900 / WCDMA

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ).

+45 درجة مئوية (شحن)

الحد الأدنى: 10° - درجة مئوية

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD880

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name Issued Date

Seung Hyoun, Ji / Director 09.Feb. 2010


Signature of representative



Some of the contents in this manual may differ from your phone depending on the phone software or your service provider.



GD880 User Guide

Congratulations on your purchase of the advanced and compact GD880 phone by LG, designed to operate with the latest digital mobile communication technology.

Co

Guid

Gett

Open

Insta

Cha

Men

Usin

To

Co

You

Yo

ma

Qu

Call

Ma

Ma

Ar

In-

Sp

Ma

Vi

Us

Us

Us

Contents

Guidelines for safe and efficient use.....	7	Changing the common call setting.....	23
Getting to know your phone	12	Changing the Video call settings ...	24
Open view.....	13	Call costs	24
Installing the SIM and battery	14	Call durations	24
Charging your phone.....	15	Data volume	24
Memory card.....	16	Contacts.....	25
Using your touch screen.....	17	Searching for a contact.....	25
Touch screen tips	17	Adding a new contact.....	25
Control the touch screen	17	Creating a group	25
Your home screen	18	Changing your contact settings.....	26
You can add favourite menus to the main menu	18	Viewing information.....	26
Quick keys.....	19	Importing friends from Social network	27
Calls	20	Messaging.....	28
Making a call.....	20	Messaging	28
Making a call from your contacts...	20	Sending a message	28
Answering and rejecting a call.....	20	Entering text.....	28
In-call options	21	T9 mode	28
Speed dialling	22	Using templates	28
Making a second call	22	Using emoticons	28
Viewing your call logs	22	Using signatures.....	29
Using call divert.....	22	Changing your text message settings	29
Using call barring.....	23		
Using Excuse message.....	23		

Contents

Changing your multimedia message settings.....	29
Changing your other settings	30
Setting up your e-mail.....	30
Microsoft Exchange e-mail account.....	31
Retrieving your e-mails.....	31
Sending an e-mail using your new account.....	31
Changing your e-mail settings.....	31
Camera	33
Getting to know the viewfinder	33
Taking a quick photo.....	34
After taking a photo.....	34
Using the advanced settings.....	35
Video camera	37
Getting to know the viewfinder	37
Making a quick video	38
After making a video	38
Using the advanced settings.....	39
Your photos and videos	40
Viewing your photos and videos ...	40
Capturing an image from a video..	40
Viewing your photos as a slide show	40
Setting a photo as wallpaper.....	40
Editing your photos	41
Multimedia.....	42
Pictures.....	42
Sending a photo.....	42
Using an image.....	42
Printing an image	42
Moving or copying an image	42
Sounds.....	43
Using a sound	43
Videos	43
Watching a video	43
Sending a video clip	43
Flash contents	43
Documents.....	43
Other content.....	43
Games	44
Playing a game	44
Transferring a file to your phone....	44
Music.....	44
Transferring music to your phone .	45
Playing a song.....	45
FM Radio	45

... 40	Organiser	46	Synchronising your messages	51
... 41	SNS	46	Using your phone as a Music Sync device	51
... 42	Facebook.....	46	DivX Converter.....	51
... 42	Twitter.....	46	OSP (On Screen Phone).....	53
... 42	Settings.....	46	Installing OSP on your computer... 53	
... 42	Adding an event to your calendar. 46		Starting OSP.....	53
... 42	Adding an item to your to do list... 46		Connecting your phone and PC.... 53	
... 42	Adding a memo.....	47	Disconnecting your phone from your PC	53
... 43	Setting your alarm.....	47	Controlling your phone.....	54
... 43	Recording a sound or voice.....	47	Transferring file between your phone and PC.....	54
... 43	Using your calculator.....	47	Editing file of your phone	54
... 43	Converting a unit	48	Using OSP Notification.....	54
... 43	Adding a city to your World clock.. 48		The web	55
... 43	Using the stopwatch	48	Accessing the web.....	55
... 43	LG Air Sync.....	48	Adding and accessing your bookmarks	55
... 43	PC Sync.....	50	Using RSS reader	55
... 44	Installing LG PC Suite on your computer	50	Saving a page	56
... 44	Connecting your phone and PC.... 50		Accessing a saved page	56
... 44	Backing up and restoring the information on your phone	50	Viewing your Mobile history.....	56
e. 45	Viewing phone files on your PC.....	50	Using your phone as a modem.....	56
... 45	Synchronising your contacts	51		

Contents

Settings	58
Personalising your profiles	58
Changing your Display settings	58
Changing your Device settings	58
Changing your touch settings	59
Changing your Connectivity settings	59
Using memory manager	61
Sending and receiving your files using Bluetooth	61
Changing your Bluetooth settings	62
Pairing with another Bluetooth device	62
Using a Bluetooth headset	62
Wi-Fi	63
Software Upgrade	63
Accessories	64
Technical data	65

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.23 W/kg (10 g) and when worn on the body is 1.10 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

Guidelines for safe and efficient use

- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

• Sor
dist
• Mir
rad

Roa

Chec
the u
wher

• Do
driv

• Giv

• Use

• Pul

ma

cor

• RF

elec

suc

equ

• Wh

wit

wit

equ

to f

imp

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls



Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.


- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

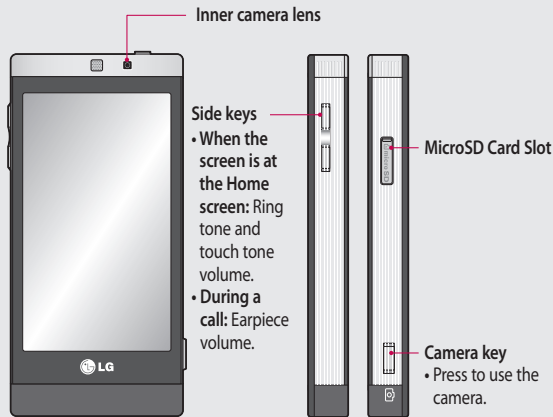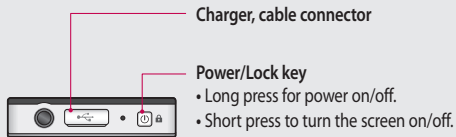

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

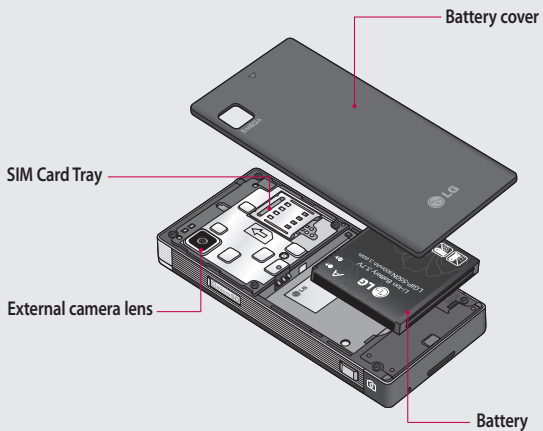

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and pull it away.



2 Install the SIM card

Slide the SIM card into the SIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it out gently.

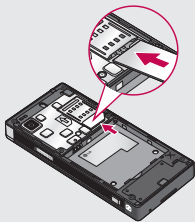


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the battery

Insert the right side of the battery into the top edge of the battery compartment first.


Ensure that the battery contacts align with the phone's terminals. Press the left side of the battery down until it clicks into place.

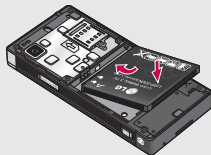

Charging your phone

Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable to the phone and plug it into a power socket. Your GD880 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery life. Disregard the first "Battery full" message and keep the phone on charge overnight.

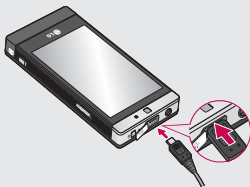

Memory card


Installing a memory card

You can expand your phone's memory by using a microSD memory card.

NOTE: A memory card is an optional accessory.


- 1 Slide the slot cover down.
- 2 Put the microSD card into the slot. Make sure the gold contact area is facing down.
- 3 Slide the slot cover up.

The GD880 will support up to an 16GB memory card.

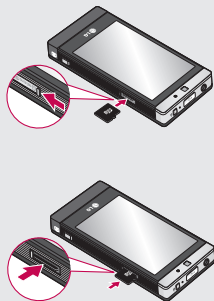

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can use it.

- 1 From the Home screen select , then **Device settings**.
- 2 Touch **Memory info** and scroll down to choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD880 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GD880 touch screen change dynamically depending on the task.

Opening Applications

To open any application, simply touch its icon.

Scrolling



Drag from side to side to scroll.

On some screens, such as the call history list, you can also scroll up or down.

Your home screen

From here you can access all the menu options, make a quick call, view the status of your phone and much more.

You can add favourite menus to the main menu

- 1 Touch  from the home screen.
- 2 If you want to remove a favourite menu, touch  on the upper right of the icon. If you want to add favourite menus to the main menu, touch **Add** on the bottom right of the screen.



- 3 Once you touch **Add**, you can choose between **Widget**, **Bookmarks** or **Shortcut** (If you do not want to add, touch **Cancel**).
- 4 Select a menu you want to add by touching the Star mark on the right side of the menu. The menu will appear on the screen when you return to the previous screen.
- 5 When you are finished, touch **OK**.



Your home screen

Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact into the Search field at the top of the screen using the touchpad. You can also create new contacts, edit existing ones, etc.






Touch to access the **Messaging** menu. From here you can create a new SMS or MMS or view your message folder.




Touch to open the full **Top menu**

Calls


Making a call

- 1 Touch  from the home screen to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call, but if you want to initiate a Video call, touch  then select **Make video call**.
- 4 To end the call, press End call on the bottom of the screen.

TIP! To enter + for making an international call, press and hold .

TIP! Press the power key to lock the touchscreen to prevent making calls by mistake.

Making a call from your contacts


- 1 From the home screen touch  to open your **Contacts**.
- 2 Tap the Search field box on the top of the screen and use the keypad to enter the first few letters of the contact you want to call.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, touch **Answer** to answer the call.

To mute the ringing, touch **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.


In-call options

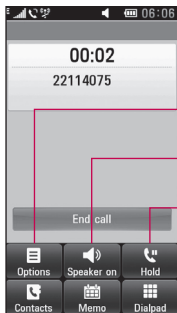



Options - Touch  to bring up a list of further in-call options.

Speaker - Touch  to turn the speaker phone on.

Hold - Touch  to put a call on hold.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

Touch  to add memo during a call.


Touch  to search your contacts during a call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.


Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Phonebook** and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 3 Your **Contact** will open. Select the contact you want to assign to that number by touching the contact's phone number once. To find a contact, tap the **Search** field box and enter the first letter of the contact's name.

Making a second call

- 1 During your initial call, touch **Dialpad** and type the number you want to call.
- 2 Touch **Voice call** to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.

- 5 To end one or both calls, press **+** and select **End**.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Logs** in the **Main** menu.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch **Call settings** in the **Main** menu.
- 2 Touch **Call divert**.
- 3 Choose between **Voice calls** and **Video calls**. You can choose to divert all calls, calls when the line is busy, when there is no answer or when you cannot be reached.
- 4 Touch **Activate**.
- 5 Choose **To voicemail centre** or **To other number** to enter the new divert number.
- 6 Touch **OK** when you have finished entering the number.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring


- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Call barring**.
- 3 Choose **Voice calls** or **Video calls**. You can turn off all call barring by touching **Deactivate all** from the **Call barring** menu.
- 4 Choose any of the five options:
 - All outgoing calls**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**Touch **Activate**.
- 5 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers Main menu** to turn on and compile a list of numbers that can be called from your phone.

Using Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

Changing the common call setting

- 1 Touch **Call settings** in the **Main menu**.
- 2 Touch **Common settings**. From here you can adjust the settings for:
 - Call reject** - Slide the switch to the left to highlight the **Reject list**. You can touch the text box to choose all calls, calls from specific contacts or groups, calls from unregistered numbers (those not in your contacts) or calls with no caller ID. Touch  to change the setting.

Calls

Send my number - Choose whether your number will be displayed when you call someone.

Show SNS events - Choose whether SNS events will be displayed or not.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset or select **Handset** to answer a call by pressing a key on the handset.

Save new number - Choose whether the **Save new number** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Voice clarity - Choose whether the **Voice clarity** function is **ON** or not. Slide the switch left for **ON** or right for **OFF**.

Changing the Video call settings

1 Touch **Call settings**.

2 Touch **Video call settings**.

From here you can adjust the settings for:

Use private image - Choose whether to use a private image for video calls.

Private image - Choose an image for video calls.

Mirror - Choose whether to use Mirror.

Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

Call durations

View the duration of all your dialled or received calls or both.



Data volume

View the amount in kilobytes of all received or sent data or both.

Contacts

Searching for a contact


There are two ways to search for a contact:

- 1 Touch  from the home screen and then touch **Phonebook** or touch  from the home screen.
- 2 You see a list of contacts. Typing the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.



TIP! The alphabetical keypad is displayed once you tap the Name field.

Adding a new contact

- 1 Touch **Phonebook** and touch **New**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to 5 different numbers per contact. Each entry is preset for **Mobile**, **Home**, **Office**, **Pager**, and **Fax**.
- 5 Add an email address.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Colleagues**, **School** and **VIP**.
- 7 You can also add a **Ringtone**, **Vibration**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Birthday**, **Anniversary** and **Memo**.
- 8 Touch  to save the contact.

Creating a group


- 1 Touch **Phonebook**. Touch the down arrow beside **Contacts** and then select **Groups**.
- 2 Touch **New group** or touch  and select **New group**.
- 3 Enter a name for your new group in **Group name** field. You can also assign a ringtone to the group.
- 4 Touch .

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your **Phonebook**.

Contacts

Changing your contact settings

You can adapt your contact settings to suit your own preferences.

- 1 Touch **Phonebook**, touch , scroll down and select **Contact settings**.

- 2 From here, you can adjust the following settings:

Show keypad - Choose whether the Keypad is displayed.

Display name - Choose the display order of the name.

Synchronise contact - Connect to your server to synchronise your contacts.

Copy all - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time or all at once.

Move all - This works the same way as Copy, but the contacts will only be saved to the location you've moved them to.

Restore contacts - Restore contacts to the Memory Card.


Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to erase your contacts.

Memory info - View information about available memory regarding **Handset**, **USIM** and **USIM e-mail**.


Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Backup contacts to the Memory Card.

Viewing information

- 1 Touch **Phonebook**, touch , scroll down and select **Information**.



From here you can view your **Service dial numbers**, your **Own numbers**, your **Memory info** (showing your memory usage) and **My profile**.

TIP! To add your own business card, select **My profile** and enter your details as you would for any contact. Touch  to finish.

Importing friends from social networks

You can add your friend contact from your social network (Twitter or Facebook) to your phone using this menu.

Note: SNS must be enabled prior to importing contacts.




- 1 Touch **Phonebook**, then touch  and select **Import friends from**.
- 2 Select **Twitter** or **Facebook**.
- 3 Enter your E-mail and Password and click **OK**.
- 4 Select the contact you want to add.
- 5 Select  **Save**.


Messaging

Messaging

Your GD880 combines SMS and MMS into one intuitive and easy-to-use menu.


Sending a message


- 1 Touch  from the home screen and then touch **Messaging** or touch  from the home screen.
- 2 Touch **Write message**,  and select **Insert** to add an image, video, sound, emoticon, etc.
- 3 Touch **To** to enter the recipient's number or open your contacts or favourites. You can add multiple contacts. When you are finished, touch the message box below to start composing the message text.
- 4 After entering the text, you can send the message by touching **Send SMS/Send MMS** at the top of the message.

 **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

Touch  to turn on T9 mode.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Function keys enable you to change between capital and lowercase input or write a message in a full screen on the keypad, etc.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

Using emoticons


Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

You can add a new emoticon by touching **New emoticon**.

Using signatures

Create signatures for the SMS and MMS messages you send most often. When writing a new signature, you can enter Signature from Insert->More in option menu.

Changing your text message settings

Touch **Messaging**, touch  and select **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages were delivered.


Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore the data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or **MMS**.

Changing your multimedia message settings

Touch **Messaging**. Touch  and select **Settings**, then select **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual**, you will receive only notifications of MMS and you can decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS (**Low priority**, **Normal priority**, **High priority**).

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.


Creation mode - Choose your message mode (**Restricted**, **Warning**, **Free**).

Messaging

Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging**. Touch  and select **Settings**.

Videomail/Voicemail - Touch **New profile** to add a new Videomail/Voicemail service. Contact your network operator for more information about the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating lists of trusted and non-trusted senders in the **Service security** option.

Save sent message - Choose whether to save sent messages.


Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Signatures - Create, edit or delete **Signatures**.

Setting up your e-mail

Touch  from the home screen, scroll to the right and then touch **E-mail**.

If the email account is not set up, touch **Microsoft Exchange**, etc.

If the email account is set up in your phone and you want to add a new email account, touch  and select **New e-mail account**.

E-mail address - Enter the email address.

Password - Enter the account password

Mailbox type - Enter the mailbox type: **IMAP4**, **POP3** or **PUSH**. These types depend on the service provider.

User name - Enter the account user name.

Incoming server - Enter the incoming email server address.

Outgoing server - Enter the outgoing email server address.

SMTP authentication - Choose security settings for the outgoing mail server.

Account name - How the account will appear in the list of accounts in your E-mail folder.

Once the account is set up, it will appear in the accounts list in your Email folder.

Microsoft Exchange e-mail account

E-mail address - Enter the account email address.

Server address - Enter the email server address.

Domain - Enter the account domain.

User name - Enter the account user name.

Password - Enter the account password.

Sync items - Choose whether to use Sync items (**Contacts, Schedules, Tasks**).

Retrieving your e-mails

You can automatically or manually check your account for new emails. To check manually:


- 1 Touch **E-mail**.
- 2 Touch the account you want to use.

- 3 Choose **Retrieve new**.

Sending an e-mail using your new account

- 1 Touch **Write e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send e-mail** and your email will be sent.

Changing your e-mail settings

- 1 Touch **E-mail** in the **Communications** tab.
- 2 Touch  and select **E-mail settings**, then you can change the following settings:

E-mail account - Select an email account

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Include original message - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Messaging

Auto retrieval while... - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Create an email signature.

Priority - Choose the priority level of your email messages.

Maximum receive size - Select the maximum receive size: **100KB, 200KB, 300KB, 500KB, 1MB, 2MB, 2.2MB.**

Camera

Getting to know the viewfinder

Zoom - zoom in or zoom out. You can also zoom in or out by pressing the Side keys of the phone.

Exposure - A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.



Back

Camera mode

Video mode - Slide down this icon to switch to video mode.



Gallery - This enables you to access your saved photos from within the camera mode. Simply touch and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Macro - Switch on take a close up shot

Camera


Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera is focused on your subject, touch the  on the right-centre of the screen to take a photo. You can also press the Camera key on the side of the phone firmly.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo


Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with four icons on the right side.

 Touch to send the photo as a **Message, E-mail, Bluetooth.**


NOTE: Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as **Wallpaper, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call** screens.

 Touch to edit the image using various tools.

 Touch to return to the viewfinder.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the seven numerical options: **5M(2560x1920)**, **3M(2048x1536)**, **2M(1600x1200)**, **1M(1280x960)**, **Homescreen**, **VGA(640x480)**, **QVGA(320x240)**.

Scene mode - Set the camera to adjust to the environment. Choose from **Auto**, **Night**, **Landscape**, **Portrait** or **Sport**.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can't use the flash. Select the ISO value from **Auto**, **ISO 800**, **ISO 400**, **ISO 200** or **ISO 100**.

White balance - Choose from **Auto**, **Incandescent**, **Fluorescent**, **Sunny** or **Cloudy**.

Colour Effect - Choose a colour tone to apply to the photo you're taking.

There are six colour tone options: **Off**, **Sepia**, **Monochrome**, **Negative**, **Solarize** and **Blue**.

Focus - Select the way the camera will focus. Choose from **Auto focus**, **Manual focus** or **Face tracking**.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**.

Shot mode - Choose the shot mode from 9 options.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be, but the file size will increase.

Show captured image - Choose to view the picture with options after taking a photo.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Geo-Tagging - Choose whether to switch on the EXIF information for the photo to write GPS information.

Camera


Reset settings - Restore all camera settings.

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Swap cam - Choose whether to use the inner camera or the outer camera.

Video camera

Getting to know the viewfinder

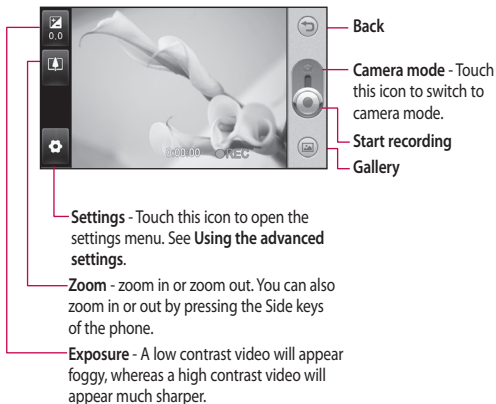





Video camera

Making a quick video

- 1 Press the camera key on the right side of the phone.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens toward the subject of the video.
- 3 Press the camera key on the phone once to start recording. Or touch the red dot  on the screen.
- 4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the camera key on the phone again to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen



Touch to send the video as a **Message or E-mail** or by **Bluetooth**.



Touch to use the video as a voice or video ringtone




Touch to play the video.




Touch to return to the viewfinder.




Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Touch  to shoot another video right away.

 Touch to view a gallery of saved videos and images.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Refer to the advanced settings for the Camera.

Video size - Select Video size: VGA(640x480), QVGA(320x240), QCIF(176X144).

Recording mode - Set a duration limit for your video: **Normal**, **MMS**.


Audio - Choose whether to mute (record a video without sound) or to unmute to include the sound.

Show recorded video - Choose to view the video with options after taking a video.







Your photos and videos

Viewing your photos and videos


- 1 Scroll and touch **Gallery** in the **Main menu** or touch  on your camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video



- 1 Select the video you would like to capture an image from.
- 2 Touch the centre of the screen to bring up the play options, then touch  to pause the video on the frame you'd like to convert to an image and touch the upper left of the screen to open the .
- 3 Touch  on the upper left of the screen and select **Capture**.
- 4 The image will appear on the screen, with its image name.
- 5 Touch  on the upper right of the screen to return to the video.

- 6 The image will be saved in your **Media album** folder and appear in the gallery.


 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.

- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.
- 3 You can open menus such as **Duration**, **Transition**, etc. by tapping  during the slide show.

Setting a photo as wallpaper

- 1 Touch **Gallery** in the **Main menu**.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch  to open the menu.
- 4 Touch **Set as**, then **Home screen image**.

Editing your photos

1 From the Gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select **Edit**.

2 Touch the icons to alter your photo:



Select area.



Select a tool:



Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.



Adding texts to a picture. You can choose the text box and the colours of the box and text.



Decorate your photo with stamps.



Erase the drawings you made on the picture. You can choose the size of eraser to use.



Touch to open further effect options including **Rotate**.



Touch to apply the effect options to a photo.



This helps to adjust a picture taken using Brightness or Contrast.



Touch to return to the gallery.



Save the changes you made to your phone. You can save the edited photo with another name.



Erase the editing you did on the photo.



Select to send the edited pictures as **Message, E-mail or Bluetooth**.





Multimedia

You can store any multimedia files on your phone's memory to have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card frees space in your phone's memory. You can find these files in the **My stuff** menu in the **Main** menu.

Pictures


Images contains a list of pictures including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo

- 1 Touch  from the home screen, touch **My stuff** and select **Images**. Select the picture you want and touch .
- 2 Touch **Send Via** and choose **Message, E-mail, Bluetooth**.

Using an image

You can choose images to use as wallpaper, for the lock screen and to identify callers.

- 1 Touch **My stuff** in the **Main** menu and select **Images**. Select the picture you want and touch .
- 2 Touch **Set as** and choose from: **Homescreen image, Lockscreen image, Contact image, Start up image, Shutdown image, Outgoing call image, Incoming call image**


Printing an image

- 1 Touch **My stuff** and select **Image**. Select the picture you want and touch .
- 2 Touch **Print** then choose between **PictBridge** and **Bluetooth**.

TIP! You can print via Bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to free some space in one of the memory banks or to preserve your images.

- 1 Touch **My stuff** in the **Entertainment** tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark an image by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

Sounds contains a list of sounds including downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as ringtones.

Using a sound

- 1 Touch **My stuff** in the **Main menu** and select **Sounds**.
- 2 Select a sound you want. It will begin to play.


Videos

Videos shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the **Main menu** and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  and then touch **Send via**. Choose from **Message**, **E-mail** or **Bluetooth**.

Flash contents

The **Flash contents** folder contains all downloaded SWF and SVG files.

- 1 Touch **My stuff** in the **Main menu** and select **Flash contents**.
- 2 Select the file you want to view.

Documents

From the **Documents** menu, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Other content

Other content contains a list of files that are not pictures, sounds, videos, documents, games or applications.

Multimedia

Games

You can install new games on your phone to enjoy when you have spare time.

You can also access this using the **Games & Apps** menu in the **Main** menu.

Playing a game

- 1 Touch **Games & Apps** in the **Entertainment** tab.
- 2 Choose a game to launch.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in your **Image** folder if it is an image file and in the **Sound** folder if it is a music file.

Music

Your LG GD880 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music**. From here, you can access a number of folders located at the top of the screen:

NOTE: The copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

All tracks - Contains all the songs you have on your phone except the preloaded default music.

Favourite - Contains the songs you saved as Favourites.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlist - Contains all the playlists you have created.

Transferring music to your phone

The easiest way to transfer music to your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent, you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music**.
- 2 Select the song you want to play. The confirmation message appears when in **Silent** mode.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

FM Radio

Your LG GD880 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

- 1 Scroll and touch **FM radio** in the **Main menu**.
- 2 Tune in to a station or adjust the volume if desired.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket next to the charger connector.

Organiser

SNS

A social network service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.

Facebook

Facebook is a social networking website.


- 1 Touch  from the home screen and then touch **Facebook**.

Twitter

Twitter is a free social networking and micro-blogging service.

- 1 Touch  from the home screen and then touch **Twitter**.



Settings

- 1 Touch  from the home screen and then touch **SNS settings**.
- 2 Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch **Import friends** to add your friend contact to your phone.



- 3 If you have no account, touch **New account**, then create your account.


NOTE: You will incur an extra cost by connecting to this service. Check the data charges with your network provider.

Adding an event to your calendar




- 1 Touch  from the home screen and then touch **Organiser**.
- 2 Select the date you would like to add an event to.
- 3 Touch  and touch **New schedule** or simply touch **New schedule** at the bottom of the screen.

Adding an item to your to do list



- 1 Touch  from the home screen and then touch **Tasks** in the **Main menu**.
- 2 Touch  and touch **New task** or simply touch **New task** at the top of the screen.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Normal** or **Low**.

- 4 Save your task by touching .

Adding a memo

- 1 Touch  from the home screen and then touch **Memo** in the **Main menu**.
- 2 Touch  and then **New memo**. Or simply touch **New memo** at the top of the screen.
- 3 Type your memo and then touch  **Save**.
- 4 Your memo will then appear on the screen in the memo application.






Setting your alarm

- 1 Touch  from the home screen and then touch **Alarms**. **Widget alarm** should appear in the list as the default and you cannot delete it.
- 2 Touch  and then **New alarm**. Or simply touch **New alarm** at the top of the screen.


NOTE: You can set up to 11 alarms including **Widget alarm**.

TIP! Slide the alarm switch left to set it.


Recording a sound or voice

- 1 Touch  from the home screen and then touch **Voice recorder** in the **Main menu**.
- 2 Choose where to save the recording: **Internal** or **External**.
- 3 Choose a recording mode: **Normal** or **MMS**.
- 4 Touch  to begin recording.
- 5 Touch  to pause recording.
- 6 Touch  to end recording.
- 7 Touch  to listen to your recording.
- 8 Touch  to adjust the volume.


Using your calculator

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.



Organiser

- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg**, **rad** etc.


Converting a unit

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Unit converter**.
- 3 At the top of the screen, choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Adding a city to your World clock

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **World clock**.
- 3 Touch  and then **New city**. Or simply touch **New city** at the top of the screen.

Using the stopwatch

- 1 Touch  from the home screen and then touch **Other tools** in the **Main menu**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** at the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.

LG Air Sync

Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.


- 1 Touch LG Air Sync in the **Main menu**.
- 2 If you have no LG Air Sync account, please visit www.lgairsync.com to create your account. If you have an account, key in your ID and Password.
- 3 If you want to synchronise your PIM data, touch PIM Sync. If you want to synchronise your contents, touch Link Air.

- 4 In case of PIM Sync, select the items you want to synchronise, then touch Sync now.
- 5 In case of Link Air, select the items you want to synchronise, then touch Sync now.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the home screen, touch  and touch **Connectivity**.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait a few moments. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as described above.
- 2 Click on the **Backup** icon and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to or restore information from. Click the **Start** icon.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as described above.
- 2 Click on the Manage Photos, Videos or music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP
ph
arr

Syn

- 1 C
- 2 C
- 3 C
w
c
- 4 C
Y
w
c
R
S

Syn

- 1 C
- 2 C
- 3 A
d

TIP! Viewing the contents of your phone on your PC helps you to arrange files you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click Sync Contacts button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select the target where you want to save your contacts.


Right-click your contacts and then **Select All**.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the home screen, touch  and touch **Connectivity**.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

DivX Converter

DivX will convert media files on your PC to a format that lets you upload them and view them on your phone. Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter. Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the

PC Sync

location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

OSP (On Screen Phone)

Using the OSP feature, you can see your phone screen from your PC. You can control your phone from the PC Monitor just as you would on the phone.

Installing OSP on your computer

When you install LG PC Suite on your computer, OSP is installed automatically

Starting OSP

Click  on your computer or start> program> LG OSP

Connecting your phone and PC

By USB cable

- 1 Click 'Connection Wizard'.
- 2 Select 'Cable connection', then click Next.
- 3 Connect the handset and PC via USB cable.
- 4 Select Next.
- 5 Enter your phone password into the PC (default value is "0000")

By Bluetooth

- 1 Ensure that Bluetooth is switched On and Visible for both your PC and your phone.

- 2 Select Bluetooth connection, then click Next
- 3 Select your phone among the searched phones, then click Next
- 4 Enter the PIN code into the PC, then click Next.
- 5 Click 'Yes' in the confirmation message.
- 6 Enter the PIN code into your phone, then click OK.
- 7 Enter your phone password into the PC, then click OK.

Disconnecting your phone from your PC

If you want to disconnect your phone from your PC, click 



OSP (On Screen Phone)

Controlling your phone

You can control your phone using OSP. If you mouse-click a menu in the OSP main screen, the menu runs in your phone as if you had selected the menu on your phone.

For example, if you want to send a message using OSP, click Messaging in the Communication tab of the OSP main menu, then click Write message.

You can enter characters by mouse-clicking or using your PC keyboard.

If you want to use the mouse to key in characters, click the characters you want to enter.

If you want to use the keyboard, type in the characters on your keyboard.

Click Send SMS when you have finished writing the message.

Transferring a file between your phone and PC

Transfer a file from PC to Phone

- 1 Select the file you want to transfer from your PC, then drag and drop the file to the OSP Screen.

Transfer a file from Phone to PC

- 1 Select the file you want to transfer from **Media album** in the **Entertainment** tab of the OSP screen, then click the right mouse button and select **Save to PC**.

Editing a file on your phone

- 1 Select the file you want to edit from the Media album in the **Entertainment** tab of the OSP screen, then click the right mouse button and select **Edit**
- 2 You can edit the file using associated applications.
- 3 When you finish editing your file, it will be transmitted back to your phone.

Using OSP Notification

The OSP feature gives you Popup messages with information about your phone events: **Alarm, Message, Incoming Call**, etc.

- 1 Select  in the OSP Screen
- 2 Select **"Alerts me with Popup"**

NOTE: When you use the OSP feature, your phone's reaction may be slow.

The web

Accessing the web


- 1 Touch **Browser** in the **Main menu**.
- 2 To go straight to the browser homepage, select **Browser**. Or select **Enter URL** and type in the URL, followed by **OK** in the upper left of the screen.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check with your network provider for data charges.

Adding and accessing your bookmarks

For easy and fast access to your favourite web sites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the **Main menu**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **New bookmark**. Enter a name for your bookmark, followed by the URL in the corresponding field box.


- 4 Touch  on the upper left of the screen. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark, simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Go**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

The web

Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page

Touch **Browser** and select **Saved pages**. You can view the saved pages here.

Viewing your Mobile history

Touch **Browser** and select **Mobile history**.

Using your phone as a modem

Your GD880 can double as a modem for your PC, giving you email and internet access even when you can't connect by wire. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure that you have the LG PC Suite installed on your PC.
- 2 Connect your GD880 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write a profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD880.

Using Bluetooth:


- 1 Ensure that Bluetooth is switched **On** and **Visible** for both your PC and GD880.
- 2 Pair your PC and GD880 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New button**.

- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write a profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GD880.

Settings

Personalising your profiles

You can Personalise each profile setting using the settings menu.

- 1 Touch  from the home screen and then touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone, Volume, Message tone** settings and more.


Changing your Display settings

Touch  from the home screen and then touch **Display settings**. Choose the screen setting you want to edit.

NOTE: The longer the backlight is on, the more battery power is used. This may result in your needing to charge your phone more often.

Changing your Device settings

Enjoy the freedom of adapting the operation of your GD880 to your own style.

Touch  from the home screen, touch **Device settings** and then choose from the list below.

Settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Slide the switch left to set the power saving settings on/off or Night only.

Languages - Change the language of your GD880's display.

Auto lock - Lock the keypad automatically in the home screen. You can choose the time for the auto lock.

Security - Adjust your security settings including PIN codes and handset lock.

Memory info - See **Using memory manager** for more information.

Primary storage settings - Choose the location you prefer items to be saved between Handset memory and External memory.

Reset settings - Restores all settings to their factory defaults.

Device information - Shows the device information. You can upgrade your software via the Web using this menu.


Device guide - show how to use each functions (Homescreen, Widget download, Indicator, Menu, Contacts, SNS, Browser, Lock screen gesture)

Changing your touch settings

You can activate sound or vibration for your touch tone.

Changing your Connectivity settings

Your Connectivity settings have already been set up by your network operator so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch  from the home screen and then touch **Connectivity**.

Network selection

Select network - If you select **Automatic**, the GD880 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Network mode - You can set a type of network to search for when networks are searched in the **Select network** menu.

Preferred lists - You can add a preferred network to connect to. If the network is searched automatically, simply choose one from the network list. If not, you can add a new network manually.

Internet profiles - This menu shows the **Internet profiles**. You cannot delete or edit the default configurations for your country. However, you can add a new profile using this menu.

Settings

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Back-up -You can send your information to an operator server or receive information s from an operator server.

NOTE: This service is not available in all countries. Please contact your service provider for further information.

Home network -You can choose and share contents by **Home network**. Be careful about disclosing personal information.

GPS type - Select GPS type: **Assisted GPS, Stand alone.**

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

USB connection mode - Choose a data service from the options and synchronise your GD880 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use **Music sync** with Windows Media

Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Packet data conn. - Choose when your device should be connected to the network for packet data.

Browser settings - Set the values related to the browser (**Profiles, Appearance settings, Cache/Cookies, Security, Reset settings**).

Streaming settings - Your network operator has already saved this information. You can add a new profile using this menu.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Data roaming - offers you to manage data reception of Multimedia/Widget/Email/PIM/Link Air in roaming area.

Using Data roaming function, you can block data application service to not pay data application fee in roaming area.

The default settings is off and the use of data application will be blocked out. When you activate Data roaming function, you can download or synchronize data.

Using memory manager

Your GD880 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is being used and how much space is available.

Touch **Device settings**, then **Memory info**.

Internal common memory - View the memory available on internal common memory.

Internal multimedia memory - View the memory available on internal multimedia memory.

Internal reserved memory - View the memory available on your handset for **SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items**.

USIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD880 will not automatically search for other **Bluetooth** devices. If not, your GD880 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sending.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender.

Settings

Touch **Yes** to receive the file.

- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Go to My stuff**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings

Touch **Bluetooth** and select .

Make your changes to:

My device information - View your device information regarding Bluetooth.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - View your device name.


My Bluetooth address - View your Bluetooth address.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode on/off - Turn on or off.

Pairing with another Bluetooth device

By pairing your GD880 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility by touching .
- 2 Touch **New device**.
- 3 Your GD880 will search for devices. When the search is completed, the **Refresh** icon will appear on the upper left side of the screen.
- 4 Choose the device you want to pair with and click 'Yes' in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.
- 5 Touch **Always ask** or **Always allow**, then the device is paired.

Using a Bluetooth headset

- 1 Check that your Bluetooth is **ON** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

3 Touch Always ask or Always allow.

Your GD880 will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GD880 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with the GD880.


Charger



Data cable
and CD



Battery



Stereo
headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name: GD880

System: GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900 / WCDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD880

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.3.2, EN 301 489-19 V1.2.1, EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

09.Feb. 2010

Signature of representative

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. On the left side, there is a vertical margin line. The paper is framed by a thin black border. There are four small black L-shaped marks at the corners of the page, likely for alignment or scanning purposes.

This image shows a blank sheet of white paper with horizontal dashed lines for writing. The lines are evenly spaced and run across the width of the page. There are four corner crop marks: a vertical line at the top-left, a horizontal line at the top-right, a horizontal line at the bottom-left, and a vertical line at the bottom-right. The rest of the page is empty.