



Life's Good...
when it's green

فارسی
ENGLISH

راهنمای کاربر GD510

Life's Good...
when it's green

ENGLISH
فارسی



GD510 راهنمای کاربر

GD510 User Guide



Green features
of this manual



35% این دفترچه از کاغذ بازیافتی تهیه و با جوهر سویا چاپ شده است

CE0168

P/N : MMBB0356784 (1.0)

www.lgmobile.com

LG ELECTRONICS INC.



Green features
of this manual



This manual is used 35% of recycled paper and printed with soy inks.

CE0168

www.lgmobile.com

P/N : MMBB0356784 (1.0)

Bluetooth QD ID B015736



برخی از محتویات این دفترچه راهنما ممکن است بسته به نرم افزار تلفن یا شبکه مخابراتی شما، با این تلفن متفاوت باشد.

GD510 راهنمای کاربر

حسب انتخاب و خرید گوشی پیشرفته و کم حجم GD510
را به شما تبریک می گوئیم. این گوشی از جدیدترین
محصولات شرکت LG است که مطابق با آخرین فن آوری
ارتباطات سیار دیجیتال طراحی شده است.

فهرست مطالب

22.....	مخاطبین.....	6.....	آشنایی با تلفن همراه.....
22.....	جستجوی مخاطب.....	7.....	مشخصه باز.....
22.....	افزودن مخاطب جدید.....	8.....	نصب سیم کارت و باتری.....
22.....	ایجاد یک گروه.....	9.....	تلفن را شارژ کنید.....
23.....	تغییر تنظیمات مخاطب.....	10.....	کارت حافظه.....
23.....	مشاهده اطلاعات.....	11.....	نقشه منو.....
24.....	پیام رسانی.....	12.....	استفاده از صفحه لمسی.....
24.....	ارسال پیام.....	12.....	نکاتی درباره صفحه لمسی.....
24.....	وارد کردن متن.....	12.....	کنترل صفحه لمسی.....
24.....	حالت T9.....	13.....	صفحه اصلی تلفن.....
25.....	تشخیص دست خط.....	14.....	کلیدهای سریع.....
25.....	تنظیم ایمیل.....	15.....	نوار وضعیت.....
25.....	بازنمایی ایمیل ها.....	16.....	ATMT.....
25.....	ارسال ایمیل با استفاده از اشتراک جدید.....	17.....	تماس ها.....
25.....	تغییر تنظیمات ایمیل.....	17.....	برقراری تماس.....
26.....	پوشه های پیام.....	17.....	برقراری تماس با استفاده از فهرست
26.....	تغییر تنظیمات پیام متنی.....	17.....	مخاطبین.....
27.....	تغییر تنظیمات پیام چندرسانه ای.....	17.....	پاسخ دادن به تماس یا رد آن.....
27.....	تغییر سایر تنظیمات.....	18.....	گزینه های حین تماس.....
28.....	دوربین.....	19.....	شماره گیری سریع.....
28.....	آشنایی با نمایاب.....	19.....	برقراری تماس دوم.....
29.....	گرفتن عکس فوری.....	19.....	مشاهده آمارهای تماس.....
29.....	بعد از گرفتن عکس.....	20.....	استفاده از انتقال تماس.....
30.....	استفاده از تنظیمات پیشرفته.....	20.....	استفاده از محدودیت تماس.....
		21.....	تغییر تنظیمات عادی تماس.....

فهرست مطالب

39.....	انجام دادن بازی.....	31.....	دوربین فیلمبرداری.....
39.....	اسناد.....	31.....	آشنایی با نمایاب.....
39.....	انتقال فایل به گوشی.....	32.....	فیلمبرداری فوری.....
39.....	موارد دیگر.....	32.....	بعد از فیلمبرداری.....
39.....	استودیو فیلم.....	33.....	استفاده از تنظیمات پیشرفته.....
39.....	ایجاد فیلم.....	34.....	عکس ها و فیلم های شما.....
40.....	موسیقی.....	34.....	مشاهده عکس ها و فیلم ها.....
40.....	انتقال موسیقی به گوشی.....	34.....	گرفتن عکس از یک فیلم.....
40.....	پخش آهنگ.....	34.....	مشاهده عکس ها به صورت نمایش اسلاید.....
41.....	ایجاد لیست پخش.....	35.....	تنظیم عکس به صورت تصویر زمینه.....
41.....	رادیو FM.....	35.....	وبرایش عکس ها.....
41.....	جستجوی ایستگاه ها.....	36.....	افزودن جلوه به عکس.....
41.....	بازنشانی کانال ها.....	37.....	چند رسانه ای.....
42.....	سازمان دهنده.....	37.....	عکس ها.....
42.....	افزودن یک رویداد به تقویم.....	37.....	ارسال عکس.....
42.....	افزودن یک مورد به لیست کارها.....	37.....	استفاده از تصویر.....
42.....	استفاده از تاریخ یاب.....	37.....	چاپ تصویر.....
43.....	افزودن یادداشت.....	38.....	انتقال یا کپی تصویر.....
43.....	تنظیم زنگ هشدار.....	38.....	صداها.....
43.....	افزودن یادداشت با استفاده از تابلوی نقاشی.....	38.....	استفاده از صدا.....
44.....	ضبط صوت.....	38.....	فیلم ها.....
44.....	ضبط یک صدا یا صوت.....	38.....	تماشای فیلم.....
44.....	استفاده از ماشین حساب.....	38.....	ارسال کلیپ تصویری.....
44.....	تبدیل واحد.....	38.....	بازی ها و برنامه ها.....
45.....	افزودن یک شهر به ساعت جهانی.....		

51.....	تنظیمات	45.....	استفاده از زمان سنج
51.....	شخصی سازی مشخصه ها	45.....	آشنایی با درخت زیستی
51.....	تغییر تنظیمات صفحه	45.....	آشنایی با محاسبه گر زیستی
51.....	تغییر تنظیمات تلفن	46.....	همگام سازی رایانه
52.....	تغییر تنظیمات اتصال	46.....	نصب LG PC Suite در رایانه
53.....	استفاده از مدیر حافظه	46.....	اتصال گوشی و رایانه شخصی
53.....	ارسال و دریافت فایل ها از طریق بلوتوث	46.....	تهیه پشتیبان و بازیابی اطلاعات گوشی
54.....	تغییر تنظیمات بلوتوث	46.....	مشاهده فایل های گوشی در رایانه شخصی
54.....	ارتباط با دستگاه بلوتوث دیگر	47.....	همگام سازی مخاطبین
55.....	استفاده از هدست بلوتوث	47.....	همگام سازی پیام ها
55.....	ارتقای نرم افزار	47.....	استفاده از تلفن به عنوان دستگاه همگام سازی موسیقی
56.....	لوازم جانبی	47.....	وب
57.....	اطلاعات فنی	48.....	دسترسی به شبکه
58.....	دستورالعمل های استفاده ایمن و موثر	48.....	افزودن و دسترسی به محل یاب ها
		48.....	استفاده از RSS خوان
		49.....	ذخیره صفحه
		49.....	دسترسی به صفحه ذخیره شده
		49.....	مشاهده تاریخچه مرورگر
		49.....	تغییر تنظیمات مرورگر وب
		49.....	استفاده از گوشی به عنوان مودم

آشنایی با تلفن همراه



کلید هوشمند

- تماسی را می پذیرد و به تماسی پایان می دهد.
- مستقیماً به صفحه اصلی می رود.



کلید نیرو/قفل

- فشار طولانی برای خاموش/روشن کردن تلفن.
- فشار مختصر برای خاموش/روشن کردن صفحه نمایش.

کلیدهای جانبی

- وقتی صفحه نمایش در صفحه اصلی است؛ میزان صدای آهنگ زنگ و آهنگ کلید.
- در حین تماس؛ میزان صدای گوشی.



محل اتصال شارژر، سیم و هندزفری




کلید دوربین/وظایف چندگانه

- فشار طولانی برای استفاده از دوربین.
- فشار مختصر برای استفاده از وظایف چندگانه.

⚠ هشدار: قرار دادن یک جسم سنگین روی گوشی یا نشستن روی آن در حالی که در جیب شما است ممکن است باعث آسیب به صفحه LCD گوشی و عملکرد صفحه لمسی آن شود.

مشخصه باز

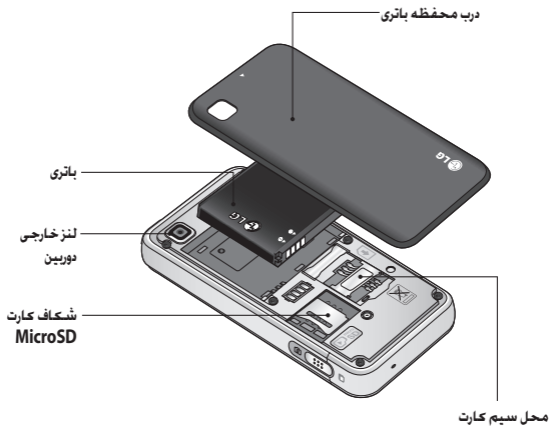

نصب سیم کارت و باتری


1 درب محفظه باتری را بردارید

روکش باتری را به سمت پایین تلفن بکشید و آن را بردارید.



2 سیم کارت را وارد کنید

سیم کارت را در جایگاه سیم کارت وارد کنید. دقت کنید سطح تماس طلایی کارت رو به پایین باشد. لطفاً قبل از نصب سیم کارت، باتری را خارج کنید. برای خارج کردن سیم کارت، به آرامی آن را به طرف بیرون بکشید.

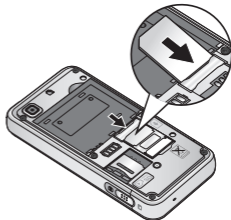


⚠ هشدار: از ناخن خود برای خارج کردن باتری استفاده نکنید.

⚠ هشدار: وقتی گوشی روشن است باتری را خارج نکنید. این کار باعث آسیب به تلفن می شود.

3 باتری را نصب کنید

ابتدا لبه چپ باتری را در قسمت بالایی محفظه باتری وارد کنید. دقت کنید سطوح تماس باتری روی پایه های تلفن قرار گرفته باشد. سمت راست باتری را فشار دهید تا با صدای کلیک جا بیفتد.

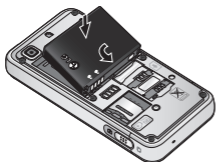

تلفن را شارژ کنید

روکش سوکت شارژر را از کنار تلفن GD510 بردارید. آداپتور مسافرتی (شارژر) و کابل USB ارائه شده را متصل کنید. کابل USB را به تلفن متصل کرده و به پریز بزنید. شارژ گوشی GD510 باید ادامه یابد تا وقتی که پیام "باتری پر است" روی صفحه نمایش ظاهر شود.

توجه: برای افزایش طول عمر باتری، لازم است قبل از شروع استفاده از تلفن، باتری کاملاً شارژ شود. اولین باری که تلفن را شارژ می کنید، پیام "باتری پر است" را نادیده بگیرید و بگذارید تلفن در طول شب به شارژ شدن ادامه دهد.



پوشش باتری خورشیدی به صورت جداگانه فروخته می‌شود. برای خرید این وسیله به مغازه ای که از آن گوشی را خریداری کرده اید مراجعه نمایید.

www.lgmobile.com

* ممکن است این وسیله در کلیه مغازه ها موجود نباشد.

کارت حافظه

نصب کارت حافظه



حافظه موجود در تلفن را با استفاده از کارت حافظه MicroSD افزایش دهید.

توجه: کارت حافظه یک وسیله جانبی اختیاری است.

1 روکش باتری را بردارید.

2 شکاف کارت microSD را فشار دهید تا قفل باز شود.

3 شکاف را باز کنید.

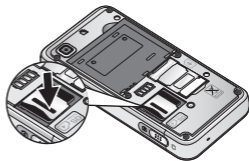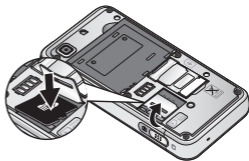

4 کارت microSD را در محل کارت قرار دهید. دقت کنید که سطح تماس طلایی رنگ رو به پایین قرار گرفته باشد.

5 شکاف را ببندید و فشار دهید تا قفل شود.

6 روکش را در جای خود قرار دهید.

فرمت کردن کارت حافظه

معمولاً کارت حافظه از قبل فرمت شده است. اگر فرمت نشده است، باید قبل از شروع به استفاده آن را فرمت کنید.

1 از صفحه اصلی.  را انتخاب کرده و سپس در زبانه تنظیمات، به تنظیمات تلفن بروید.

2 اطلاعات حافظه را لمس کرده و سپس حافظه خارجی را انتخاب کنید.

3 فرمت را لمس کرده و سپس انتخاب خود را تأیید کنید.

4 رمز ورود را در صورت تنظیم شدن، وارد کنید. سپس کارت حافظه فرمت شده و برای استفاده آماده می شود.

توجه: اگر در کارت حافظه اطلاعاتی وجود داشته باشد، بعد از فرمت کردن ساختار پوشه تغییر می کند چون همه فایل ها حذف خواهند شد.

نقشه منو

☰ را از صفحه اصلی فشار دهید تا منوی اصلی باز شود. از اینجا می توانید به منوهای دیگر با حرکت در بین نمادها دسترسی داشته باشید:
ارتباط، سرگرمی، برنامه ها و تنظیمات.

سرگرمی

- دوربین 
- گالری 
- موضوعات من 
- موسیقی 
- بازی ها و برنامه ها 
- رادیو FM 
- دوربین فیلمبرداری 
- استودیو فیلم 

ارتباط

- مخاطبین 
- تاریخچه اخیر 
- پیام رسانی 
- ایمیل 
- شماره گیری 
- جستجوی مخاطب 
- شماره گیری سریع 
- پیام جدید 

تنظیمات

- مشخصه ها 
- تنظیمات صفحه نمایش 
- تنظیمات تلفن 
- تنظیمات تماس 
- بلوتوث 
- تنظیمات لمسی 
- اتصال 
- تنظیمات پیام 

برنامه ها

- مرورگر 
- جستجوی Google 
- زنگ های هشدار 
- سازمان دهنده 
- یادداشت 
- ضبط صوت 
- ابزارها 
- نابگوی نقاشی 

استفاده از صفحه لمسی

پیمایش

برای پیمایش، انگشت خود را از یک سمت به سمت دیگر بکشید.
در برخی از صفحات نمایشی مانند لیست تاریخچه تماس ها می توانید به بالا یا پایین حرکت کنید.



نکاتی درباره صفحه لمسی

- برای انتخاب یک مورد، وسط نماد را لمس کنید.
- زیاد فشار ندهید. صفحه لمسی به اندازه کافی حساس است. به آرامی فشار دهید.
- برای انتخاب گزینه های مورد نظر، از نوک انگشت خود استفاده کنید. دقت کنید گزینه های اطراف را لمس نکنید.
- هر زمان که از GD510 استفاده نمی شود، به صفحه قفل برمی گردد.



کنترل صفحه لمسی

کنترل های موجود در صفحه لمسی GD510 بسته به کاری که انجام می دهید تغییر می کنند.
باز کردن برنامه ها
برای باز کردن هر برنامه، کافی است نماد آن را فشار دهید.



صفحه اصلی تلفن

در همه انواع حالت صفحه اصلی، می توانید فوراً آن چه را می خواهید روی صفحه بکشید و کلیک کنید.

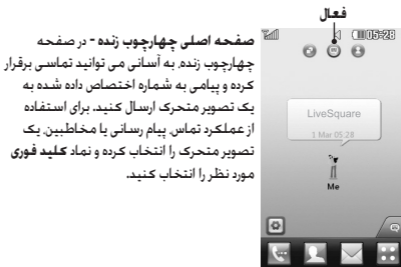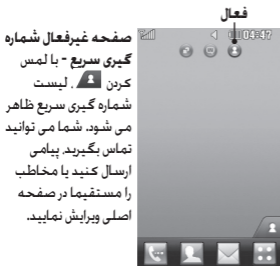

نکته! رابط کاربر بر پایه سه نوع صفحه اصلی می باشد. برای رفتن به صفحات اصلی مختلف، کافی است صفحه را از راست به چپ یا از چپ به راست به سرعت پاک کنید.

صفحه اصلی تلفن

کلیدهای سریع

کلیدهای سریع در صفحه اصلی، دسترسی آسان و تک لمسی به عملکردهایی که بیش از همه استفاده می شوند را فراهم می کنند.



لمس کنید تا مخاطبین باز شود. برای جستجوی شماره مورد نظر جهت برقراری تماس، نام مخاطب را با استفاده از صفحه لمسی وارد کنید. همچنین می توانید مخاطبین جدیدی ایجاد و یا مخاطبین موجود را ویرایش کنید.



فشار دهید تا صفحه ی شماره گیری بیرون آمده و بتوانید تماس برقرار کنید.



لمس کنید تا منوی اصلی به طور کامل باز شود. این منو به گروه تقسیم شده است.



برای دسترسی به منوی پیام رسانی، لمس کنید. از اینجا می توانید یک SMS یا MMS جدید ایجاد کنید. یا پوشه پیام را مشاهده نمایید.

نوار وضعیت

در نوار وضعیت نمادهای تصویری مختلفی مانند نمادهای قدرت سیگنال، پیام های جدید و شارژ باتری و همچنین نمادهایی که فعال یا غیرفعال بودن بلوتوث یا GPRS را نشان می دهد وجود دارد. در جدول زیر مفهوم نمادهایی که احتمالاً در نوار وضعیت می بینید آورده شده است.


نماد	شرح
	یک زنگ هشدار تنظیم شده است
	مشخصه سفارشی در حال استفاده است (شماره در نماد متفاوت است)
	مشخصه عادی در حال استفاده است
	مشخصه صدای بلند مورد استفاده است
	مشخصه بیصدا در حال استفاده است
	هدست در حال استفاده است
	تماس ها انتقال می یابد
	EDGE در حال استفاده است
	رومینگ
	حالت پرواز روشن است..
	بلوتوث فعال است
	پخش موسیقی پس زمینه
	مکث موسیقی پس زمینه
	کارت حافظه برای استفاده فعال است


نماد	شرح
	وظایف چندگانه
	قدرت سیگنال شبکه (تعداد نوارها متفاوت خواهد بود)
	هیچ سیگنال شبکه ای وجود ندارد
	عمر باقی مانده باتری
	باتری خالی است
	درپوش باتری خورشیدی متصل است (خورشید خاکستری)
	شارژ باتری خورشیدی در حال استفاده است (خورشید نارنجی)
	پیام متنی جدید
	پیام صوتی جدید
	صندوق دریافت پیام پر است
	ارسال پیام انجام نشد
	ارسال پیام چندرسانه ای انجام نشد

تغییر وضعیت از طریق نوار وضعیت

وسط نوار وضعیت را برای باز کردن خلاصه وضعیت لمس کنید. در این صفحه اطلاعاتی مانند زمان فعلی، شبکه، شناسه خدمات، باتری، حافظه گوشی، حافظه خارجی، مشخصه MP3S و بلوتوث نمایش داده می شود. در اینجا می توانید نوع مشخصه را تنظیم کرده، MP3 را پخش/مکث کنید و بلوتوث را فعال/غیرفعال نمایید.

استفاده از عملکرد وظایف چندگانه

کلید وظایف چندگانه  را فشار دهید تا منوی وظایف چندگانه باز شود. از اینجا می توانید همه برنامه های در حال اجرا را مشاهده و با یک لمس به آنها دسترسی پیدا کنید.

هنگامی که برنامه ای در پس زمینه اجرا می شود (مثلاً بازی یا رادیو)  در نوار وضعیت ظاهر خواهد شد.

سیستم ردیابی ضد سرقت موبایل [ATMT]

- 1 با استفاده از عملکرد ATMT می توانید یک سیستم ردیابی تنظیم کنید که در صورت مفقود شدن یا گم کردن تلفن، آن را بیابید.
- 2 وقتی شخص غیرمجازی از تلفن شما استفاده کند، یک SMS در تلفن شما ایجاد شده و به شماره تلفن پیش فرض ارائه شده ارسال می گردد.
- 3 می توانید عملکرد ATMT را با مراحل زیر تنظیم کنید:

- زمانه تنظیمات را از منوی اصلی بیابید و سپس تنظیمات تلفن و در آخر امنیت را انتخاب کنید.
- سیستم ردیابی ضد سرقت موبایل را انتخاب کنید
- ATMT را تنظیم کرده و روشن را انتخاب کنید
- کد پیش فرض ATMT را وارد کنید

توجه:

- اگر می خواهید از تلفن خود باسیم کارت دیگری استفاده کنید، مطمئن شوید که ATMT خاموش است.
- توصیه می شود که شماره های از پیش تعیین شده ATMT را به همراه کد کشور وارد کنید (مثلاً برای هندوستان، ابتدا کد +91 و سپس شماره تلفن را وارد نمایید)
- کد ATMT پیش فرض "000000" است.

تماس ها

برقراری تماس



- 1 برای باز کردن صفحه کلید،  را لمس کنید.
- 2 شماره تلفن را با استفاده از صفحه کلید وارد کنید.
- 3 برای شروع تماس،  را فشار دهید.
- 4 برای پایان دادن به تماس، کلید هوشمند را فشار دهید.

نکته! برای وارد کردن + جهت برقراری تماس بین المللی، را فشار داده و نگه دارید.



نکته! کلید روشن/خاموش را فشار دهید تا صفحه لمسی قفل شده و از شماره گیری اتفاقی جلوگیری شود.

برقراری تماس با استفاده از فهرست

مخاطبین

- 1 از صفحه اصلی  را فشار دهید تا مخاطبین باز شود.
- 2 روی کادر زمینه نام در بالای صفحه نمایش ضربه بزنید و با صفحه کلید، حروف اولیه مخاطب مورد نظر برای تماس را وارد کنید.
- 3 از لیست فیلتر شده، نماد تماس در کنار مخاطب مورد نظر را لمس کنید. اگر بیشتر از یک شماره برای مخاطب وجود داشته باشد، این تماس از شماره پیش فرض استفاده می کند.
- 4 یا می توانید نام مخاطب را لمس کرده و اگر بیشتر از یک شماره برای مخاطب وجود داشته باشد، شماره مورد نظر را انتخاب کنید. همچنین می توانید برای شروع تماس با شماره پیش فرض،  را لمس کنید.

پاسخ دادن به تماس یا رد آن

- وقتی تلفن زنگ می زند، کلید هوشمند را فشار داده و به تماس پاسخ دهید.
- برای بی صدا کردن زنگ، صفحه کشویی را ببندید. با این کار اگر تلفن قفل باشد، قفل آن باز می شود. سپس روی  ضربه بزنید. با این کار اگر هنگام جلسه فراموش کنید مشخصه خود را به بیصدا تغییر دهید، زنگ از قبل بی صدا شده است. برای رد تماس ورودی،  را لمس کنید.

تماس ها

گزینه های حین تماس

گزینه ها - + را لمس کنید تا لیستی از گزینه های حین تماس ظاهر شود.

بلندگو - برای روشن کردن بلندگوی تلفن. **☒** را فشار دهید.

بی صدا - **🔇** را فشار دهید تا میکروفن خاموش شود و شخصی که با او صحبت می کنید نتواند صدای شما را بشنود.

انتظار - **📞** را فشار دهید تا تماس در حالت انتظار قرار گیرد.

📞 را لمس کنید. این عملکرد به شما امکان می دهد وقتی خدمات تلفنی خودکار مانند مراکز تماس را شماره گیری می کنید، با گزینه های عددی در بین منوها حرکت نمایید.

برای افزودن شخص دیگر به تماس، **+📞** را لمس کنید.

برای باز کردن صفحه کلید عددی برای برقراری تماس دوم، برای جستجوی مخاطبین در حین تماس، **📞** را لمس کنید.

نکته! برای حرکت در لیست گزینه ها یا لیست مخاطبین، آخرین گزینه قابل رویت در صفحه نمایش را فشار داده و انگشت خود را به بالای صفحه نمایش بکشید. لیست به بالا حرکت کرده و گزینه های بیشتری قابل مشاهده خواهند بود.

شماره گیری سریع

می توانید به مخاطبی که مکرراً با او تماس می گیرید یک شماره با شماره گیری سریع اختصاص دهید.

1 مخاطبین را در زبانه ارتباط انتخاب کرده و سپس شماره های سریع را انتخاب کنید.

2 بست صوتی شما از قبل روی شماره 1 در شماره گیری سریع تنظیم شده است. نمی توانید آن را تغییر دهید. هر شماره دیگری به غیر از 1 را برای اختصاص دادن به مخاطب برای شماره گیری سریع لمس کنید.

3 مخاطبین باز می شوند. مخاطبی که می خواهید شماره را به او اختصاص دهید را انتخاب کنید. برای این کار شماره تلفن او را یک بار در صفحه نمایش لمس کنید. برای یافتن مخاطب روی کادر نام ضربه بزنید و حرف اول نام مخاطب مورد نظر را وارد نمایید.


برقراری تماس دوم

1 در طول تماس اولیه،  را لمس کرده و شماره مورد نظر را برای تماس لمس کنید.

2 برای برقراری تماس،  را فشار دهید.

3 هر دو تماس روی صفحه تماس ظاهر خواهد شد. تماس اول شما قفل شده و تماس گیرنده در حالت انتظار قرار می گیرد.

4 برای تعویض تماس ها،  را لمس کنید یا شماره ی تماس نگهداشته شده را فشار دهید.

5 برای پایان دادن یکی از تماس ها یا هر دوی آنها، کلید  را فشار دهید و پایان و سپس همه نگره داشتن یا فعال را انتخاب کنید.

نکته! برای مشاهده زمان، تاریخ و مدت تماس، می توانید هریک از ورودی های آمار تماس را لمس کنید.

توجه: هر تماسی که می گیرید هزینه ای در بر خواهد داشت.

مشاهده آمارهای تماس

در زبانه ارتباط، تاریخچه اخیر را لمس کنید.

نکته! برای مشاهده زمان، تاریخ و مدت تماس، می توانید هریک از ورودی های آمار تماس را لمس کنید.

تماس ها

استفاده از انتقال تماس

- 1 در زبانه تنظیمات، تنظیمات تماس را انتخاب کنید.
 - 2 انتقال تماس را لمس کنید.
 - 3 انتخاب کنید هنگامی که خط مشغول است، به تماس پاسخ داده نشود یا وقتی تماس با شما ممکن نیست، همه تماس های صوتی منتقل شوند.
 - 4 شماره مورد نظر را برای انتقال تماس به آن وارد کنید.
 - 5 درخواست را لمس کنید تا فعال شود.
- توجه:** انتقال تماس ها هزینه در بر دارد، لطفاً برای جزئیات بیشتر با ارائه دهنده شبکه خود تماس بگیرید.

نکته! برای خاموش کردن انتقال همه تماس ها، گزینه غیر فعال کردن همه را از منوی انتقال تماس انتخاب کنید.

استفاده از محدودیت تماس

- 1 در زبانه تنظیمات، تنظیمات تماس را لمس کنید.
- 2 محدودیت تماس را لمس کنید.
- 3 هریک از شش گزینه زیر با همه آنها را انتخاب کنید:
همه تماس های خروجی
بین المللی خروجی
تماس های بین المللی به جز کشور خود
همه تماس های ورودی
تماس ورودی در خارج
غیرفعال کردن همه
- 4 رمز ورود محدودیت تماس را وارد کنید، جهت اطلاع از این خدمات، با اپراتور خود تماس بگیرید.

نکته! گزینه شماره گیری ثابت را از منوی تنظیمات تماس انتخاب کنید تا فهرستی از شماره هایی که می توان از گوشی شما با آنها تماس گرفت جمع آوری گردد، برای این کار به کد پین 2 از اپراتور نیاز دارید، از گوشی شما فقط می توان با شماره های مندرج در فهرست شماره گیری ثابت تماس گرفت.

تغییر تنظیمات عادی تماس

1 در زبانه تنظیمات، تنظیمات تماس را لمس کنید.

2 به تنظیمات عادی رفته و آن را لمس کنید. در اینجا می‌توانید تنظیمات زیر را انجام دهید:
رد تماس - کلید را به سمت روشن فشار دهید تا لیست تماس‌های رد شده برجسته شود. می‌توانید کادر متن را لمس کنید و از همه تماس‌ها، مخاطبین یا گروه‌های ویژه، یا شماره‌های ثبت نشده (شماره‌هایی که در مخاطبین شما نیست). یا بدون شناسه تماس گیرنده انتخاب کنید. برای تغییر تنظیمات، ذخیره را لمس کنید.

ارسال شماره من - انتخاب کنید که آیا هنگام تماس با مخاطب مورد نظر شماره شما نمایش داده شود یا خیر.

شماره‌گیری خودکار - کلید را به چپ فشار دهید و

به روشن بروید یا به راست فشار دهید تا به خاموش بروید.

حالت پاسخگویی - انتخاب کنید که چگونه به تلفن پاسخ داده شود: فشار دادن کلید ارسال یا فشار دادن هر کلید.

یادآور دقیقه - کلید را به چپ فشار دهید تا این ویژگی روشن شود و در حین تماس بعد از هر دقیقه یک بوق یادآور دقیقه بشنوید.

حالت پاسخگویی با بلوتوث - گزینه هندزفری را انتخاب کنید و با استفاده از یک هدست بلوتوث به تماس پاسخ دهید یا گوشه‌ی را انتخاب کرده و یک کلید روی گوشه‌ی را فشار دهید و به تماسی پاسخ دهید.
ذخیره شماره جدید - برای ذخیره شماره جدید، بله را انتخاب کنید.

مخاطبین

جستجوی مخاطب

دو روش برای جستجوی مخاطب وجود دارد:

1 در زبانه ارتباط، مخاطبین را لمس کنید.

2 جستجو را لمس کنید.

3 می توانید لیستی از مخاطبین را مشاهده کنید. با تاپ اولین حرف نام مخاطب در قسمت نام، به منوی حرفی عددی لیست می روید.

نکته! وقتی روی قسمت نام ضربه می زنید، صفحه کلید حروف الفبا ظاهر می شود.

6 مخاطب را به یک یا چند گروه اختصاص دهید. می توانید تا سه گروه برای هر مخاطب مشخص کنید. از بین بدون گروه، خانواده، دوستان، همکاران، مدرسه یا اشخاص مهم انتخاب کنید.

7 همچنین می توانید یک آهنگ زنگ، روز تولد، سالگرد، صفحه اصلی، آدرس منزل، نام شرکت، عنوان کار، آدرس شرکت، یادداشت و Livecon اضافه کنید.

8 برای ذخیره مخاطب، ذخیره را لمس کنید.

ایجاد یک گروه

1 در زبانه ارتباط، مخاطبین را لمس کنید. و گروه ها را لمس کنید.

2 افزودن گروه یا  را لمس کنید و افزودن گروه را انتخاب کنید.

3 یک نام برای گروه جدید خود وارد کنید. همچنین می توانید یک آهنگ زنگ به گروه اختصاص دهید.

4 ذخیره را لمس کنید.

توجه: اگر گروهی را حذف کنید، مخاطبینی که به آن گروه اختصاص دارند حذف نمی شوند، و در مخاطبین باقی می مانند.

افزودن مخاطب جدید

1 مخاطبین را در زبانه ارتباط انتخاب کرده و سپس افزودن مخاطب را انتخاب کنید.

2 انتخاب کنید که مخاطب در گوشی یا سیم ذخیره شود.

3 نام و نام خانوادگی را وارد کنید.

4 می توانید تا پنج شماره مختلف را برای هر مخاطب وارد کنید. هر ورودی دارای یک نوع از پیش تنظیم شده است. موبایل، خانه، دفتر کار پی جو و نهایر.

5 یک آدرس ایمیل وارد کنید. می توانید تا دو آدرس ایمیل مختلف برای هر مخاطب وارد کنید.

تغییر تنظیمات مخاطب

تنظیمات مخاطب را طوری انجام دهید که مخاطبین طبق موارد برگزیده شما باشد.

1 مخاطبین را در زبانه ارتباط لمس کرده و سپس تنظیمات را لمس کنید.

2 از اینجا می توانید تنظیمات زیر را انجام دهید:

تنظیمات لیست مخاطبین - محل

مخاطبین. نام نمایشی و کلید فرمان فوری را تنظیم کنید.

کپی کردن - مخاطبین خود را از گوشی به سیم یا از سیم به گوشی کپی کنید. می توانید هر بار یک مورد یا همه موارد را با هم انتخاب کنید.

انتقال - این گزینه نیز مانند کپی کردن عمل می کند. اما مخاطب فقط در محلی که آن را انتقال داده اید ذخیره می شود.

ارسال همه مخاطبین بوسیله بلوتوث - همه مخاطبین را بوسیله بلوتوث به دستگاه دیگر انتقال دهید. اگر این گزینه را انتخاب کنید. از شما خواسته می شود بلوتوث را روشن کنید.

تهیه پشتیبان از مخاطبین - به تهیه پشتیبان و بازیابی اطلاعات در تلفن مراجعه کنید.

بازیابی مخاطبین - به تهیه پشتیبان و بازیابی اطلاعات در تلفن مراجعه کنید.

پاک کردن مخاطبین - همه مخاطبین را حذف می کند. از بین گوشی و سیم یکی را انتخاب کرده و اگر مطمئنید که می خواهید مخاطبین را پاک کنید. بله را لمس کنید.

مشاهده اطلاعات

1 مخاطبین را در زبانه ارتباط لمس کرده و سپس اطلاعات را لمس کنید.

2 از اینجا می توانید شماره های خدمات. شماره شخصی اطلاعات حافظه (نمایش قسمت استفاده شده حافظه) و کارت ویزیت من را مشاهده کنید.

نکته! برای افزودن کارت ویزیت شخصی خود. کارت ویزیت من را انتخاب کرده و همه جزئیات خود را همانطور که برای مخاطبین دیگر وارد می کنید. وارد نمایید. در پایان. ذخیره را لمس کنید.

پیام رسانی

پیام رسانی

گوشی مدل GD510 ترکیبی از SMS و MMS را در یک منوی ساده و قابل فهم گنجانده است.

ارسال پیام

1 در زبانه ارتباط، پیام رسانی را لمس کنید، و برای شروع نوشتن پیام جدید، پیام جدید را لمس کنید.

2 برای افزودن تصویر، فیلم، صدا، الگو و غیره، وارد کردن را لمس کنید.


3 گیرنده را در پایین صفحه نمایش لمس کرده و گیرندگان را وارد کنید، سپس شماره را وارد کنید یا برای انتخاب یک مخاطب، را لمس کنید. حتی می توانید چند مخاطب اضافه کنید.


4 وقتی آماده شد، ارسال را لمس کنید.

وارد کردن متن


پنج روش برای وارد کردن متن وجود دارد:

صفحه کلید کوچک، صفحه کلید، صفحه دست خط، کادر دست خط، کادر دوتایی دست خط.

می توانید روش وارد کردن متن را با ضربه روی  و روش ورودی انتخاب کنید.

 T9 را برای روشن کردن حالت T9 لمس کنید. این نماد فقط وقتی نمایش داده می شود که صفحه کلید کوچک را به عنوان روش ورودی انتخاب نمایید.

 را برای انتخاب زبان نوشتن لمس کنید.

برای تعویض بین حالت اعداد، علامت ها و ورودی متن،  را لمس کنید.

برای تعویض بین حالت حروف بزرگ و کوچک، از کلید انتقال استفاده کنید.

حالت T9

حالت T9 از یک فرهنگ لغات داخلی برای تشخیص لغات نوشته شده و براساس توالی کلیدهای لمس شده استفاده می کند. این حالت لغتی را که وارد می کنید پیش بینی کرده و لغاتی را پیشنهاد می کند.

 هشدار: اگر تصویر، فیلم یا صدایی به SMS افزوده شود، SMS به طور خودکار تبدیل به MMS شده و هزینه ارسال MMS از شما دریافت می شود.


تشخیص دست خط

در حالت دست خط، به سادگی روی صفحه نمایش می نویسید و گوشی GD510 دست خط شما را به پیام تبدیل می کند. صفحه دست خط یا کادر دست خط را بر طبق مشخصه برگزیده خود انتخاب کنید.

تنظیم ایمیل

در زمانه ارتباط، ایمیل را لمس کنید.

اگر اشتراک ایمیل تنظیم نشده است، برنامه جادویی تنظیم ایمیل را راه اندازی کنید و به نصب پایان دهید.

می توانید تنظیمات را با انتخاب  بررسی و ویرایش کنید. همچنین قادر خواهید بود تنظیمات دیگری که با ایجاد اشتراک به طور خودکار تنظیم شده اند را بررسی کنید.

بازبازی ایمیل ها

می توانید به طور خودکار یا دستی ایمیل های جدید خود را بررسی کنید. برای بررسی دستی:

1 در زمانه ارتباط، ایمیل را لمس کنید.

2 اشتراک مورد نظر را برای استفاده لمس کنید.

ارسال ایمیل با استفاده از اشتراک

جدید


1 ایمیل جدید را لمس کنید. یک ایمیل جدید باز می شود.

2 پیام را کامل کنید.

3 برای ارسال ایمیل، ارسال را لمس کنید.

تغییر تنظیمات ایمیل

1 در زمانه ارتباط، ایمیل را لمس کنید.

2  را لمس کرده و تنظیمات ایمیل را انتخاب کنید. سپس می توانید تنظیمات زیر را انجام دهید:

اشتراک های ایمیل

ایمیل برگزیده

پاسخ به ایمیل مجاز - این گزینه را انتخاب کنید تا پیام های تأیید خوانده شدن ارسال شود.

درخواست پاسخ ایمیل - این گزینه را

انتخاب کنید تا پیام های تأیید خوانده شدن درخواست گردد.

فاصله زمانی بازبازی - انتخاب کنید که

گوشی GD510 شما هر چند وقت یک بار ایمیل های جدید را بررسی کند.

تعداد پیام برای بازبازی - تعداد ایمیل هایی که

هر بار بازبازی شوند را انتخاب کنید.

پیام رسانی

صندوق ارسال - زمانی که پیام ها در حال ارسال هستند. این صندوق به عنوان یک پوشه ذخیره موقت عمل می کند.

موارد ارسال شده - کلیه پیام های ارسال شما در این پوشه قرار می گیرد.

پوشه های من - پوشه هایی برای ذخیره پیام های خود ایجاد کنید.

تغییر تنظیمات پیام متنی

پیام رسانی را در زمانه ارتباط لمس کرده و سپس تنظیمات را لمس کنید. گزینه پیام متنی را انتخاب کنید. می توانید تغییراتی را در خصوص موارد زیر انجام دهید:

مرکز پیام متنی - جزئیات مرکز پیام را وارد کنید.

گزارش تحویل - کلید را به سمت چپ فشار دهید تا پیام تأیید تحویل پیام ها را دریافت کنید.

مدت اعتبار - انتخاب کنید که پیام های شما تا چه مدت در مرکز پیام ذخیره بمانند.

انواع پیام - متن خود را به پیام متنی صوتی. نمایی X.400 یا ایمیل تبدیل کنید.

رمزگذاری نویسه ها - نحوه رمزگذاری نویسه ها را انتخاب کنید. با این کار اندازه پیام فشرده شده و در نتیجه هزینه انتقال داده ها نیز کاهش می یابد.

ارسال پیام بلند به صورت - برای ارسال پیام بلند به صورت چند SMS یا به صورت یک MMS این گزینه را انتخاب کنید.

متن اصلی در پیام انتقال و پاسخ - انتخاب کنید تا پیام اصلی نیز در پاسخ شما گنجانده شود.

شامل پیوست - انتخاب کنید تا پیوست اصلی در هر پاسخی گنجانده شود.

بازنمایی خودکار هنگام رومینگ - انتخاب کنید وقتی خارج از کشور هستید (رومینگ). ایمیل

های شما به طور خودکار بازنمایی شود.

اعلام ایمیل جدید - انتخاب کنید که آیا دریافت ایمیل های جدید اعلام شود یا خیر.

امضا - این ویژگی را روشن کرده و یک امضای ایمیل ایجاد کنید.

اولویت - اولویت پیام های ایمیل خود را انتخاب کنید.

اندازه ارسال ایمیل - اندازه حداکثر ارسال ایمیل را تنظیم کنید.

ایمیل شماره - تاریخ مورد نظر را وارد کنید. می توانید ایمیل هایی را که در آن مدت ارسال کرده اید. بررسی نمایید.

پوشه های پیام

پنج پوشه در منوی پیام رسانی وجود دارد.

صندوق دریافت - همه پیام هایی که دریافت می کنید در صندوق دریافت شما قرار می گیرد.

پیش نویس ها - اگر وقت کافی برای نوشتن پیام ندارید. آنچه نوشته اید را می توانید در این پوشه ذخیره کنید.

تغییر تنظیمات پیام چندرسانه ای

در زمانه ارتباط. پیام رسانی را لمس کنید. حرکت کنید و تنظیمات و پیام چندرسانه ای را انتخاب نمایید. می توانید تغییراتی را در خصوص موارد زیر انجام دهید:

حالت بازیابی - شبکه خانگی یا شبکه رومینگ را انتخاب کنید. بنابراین اگر گزینه دستی را انتخاب کنید. فقط اعلان های مربوط به MMS را دریافت خواهید کرد و سپس می توانید تصمیم بگیرید که آیا آنها را به طور کامل بارگیری کنید یا خیر.

گزارش تحویل - انتخاب کنید گزارش تحویل درخواست شود و/یا به آن اجازه دریافت داده شود.

پاسخ خواندن - انتخاب کنید که پاسخ خواندن درخواست شود و/یا به آن اجازه دریافت داده شود.

اولویت - اولویت پیام های MMS خود را انتخاب کنید.

مدت اعتبار - انتخاب کنید که پیام شما چه مدت در مرکز پیام باقی بماند.

مدت زمان اسلاید - انتخاب کنید که اسلایدهای شما چه مدت روی صفحه بماند.

حالت ایجاد - حالت پیام خود را انتخاب کنید.

زمان تحویل - انتخاب کنید چه مدت قبل هر پیام ارسال شده است.

مرکز پیام چندرسانه ای - یک مرکز از لیست انتخاب کنید یا یک مرکز پیام جدید اضافه نمایید.

تغییر سایر تنظیمات

در زمانه ارتباط. پیام رسانی را لمس کنید. و تنظیمات را لمس کنید.

پست صوتی - برای افزودن خدمات پست صوتی.

را لمس کنید. برای کسب اطلاعات بیشتر

راجع به خدماتی که ارائه می شود با اپراتور شبکه تماس بگیرید.

پیام خدمات - برای دریافت یا مسدود کردن پیام های خدماتی این گزینه را انتخاب کنید. همچنین می توانید امنیت پیام خود را با ایجاد فهرست ارسال کننده های قابل اطمینان و غیرقابل اطمینان در گزینه امنیت خدمات تنظیم کنید.

شمارشگر پیام - انتخاب کنید که مدت زمان برای شمارش پیام ها تنظیم شود.

خدمات اطلاعات - انتخاب کنید پخش سلولی روشن یا خاموش باشد و کانال ها و زبان های خود را انتخاب کنید.

نوردهی - تصویری که وضوح آن کم باشد. ممکن است مه آلود و مبهم به نظر برسد. حال آنکه تصویری که دارای وضوح بالا است به مراتب واضح تر به نظر خواهد رسید.

بزرگنمایی - تصویر را بزرگ یا کوچک کنید. این عملکرد بسته به اندازه عکس گرفته شده فعال می شود.

برگشت

گرفتن عکس

حالت فیلم - برای رفتن به حالت فیلم این نماد را بزنید.

گالری - این منو به شما امکان می دهد به عکس های ذخیره شده خود از حالت دوربین دسترسی داشته باشید. کافی است آن را لمس کنید تا گالری در صفحه نمایش ظاهر شود.

تنظیمات - برای باز کردن منوی تنظیمات. این نماد را فشار دهید. به استفاده از تنظیمات پیشرفته مراجعه کنید.


حالت مشاهده - از بین گزینه های تصویر کامل یا تمام صفحه یکی را انتخاب کنید.



عکسبرداری متوالی - با این گزینه می توانید به طور خودکار 3/6/9 عکس متوالی بگیرید.



نکته! می توانید با ضربه زدن روی صفحه نمایش. گزینه ها را مشاهده کنید. این گزینه ها بعد از چند ثانیه خاموش می شوند.

گرفتن عکس فوری


1 کلید  در سمت راست گوشی را فشار دهید.


2 وقتی دوربین روی سوژه فوکوس کرد.  را در مرکز سمت راست صفحه لمس کنید تا عکس گرفته شود. همچنین می توانید کلید  را در کنار گوشی محکم فشار دهید.


نکته! برای تغییر وضعیت بین حالت دوربین یا حالت فیلم، نماد دوربین یا فیلم در مرکز سمت راست نمایاب را به بالا/پایین بلغزانید.

بعد از گرفتن عکس

عکس گرفته شده روی صفحه ظاهر خواهد شد. نام تصویر در حاشیه پایین صفحه ظاهر می شود.

 لمس کنید تا عکس به صورت یک پیام ایمیل یا بلوتوث ارسال شود.

 لمس کنید تا تصویر صفحه اصلی تنظیم شود.

 فشار دهید و عکس را ویرایش کنید.


 این کلید را فشار دهید تا عکس گرفته شده

حذف شود. و برای تأیید بله را لمس کنید. پیام "حذف شد" ظاهر می شود.

 لمس کرده و به گالری وارد شوید.



استفاده از تنظیمات پیشرفته

از نمایاب.  را فشار دهید تا همه گزینه های تنظیمات پیشرفته باز شود.

اندازه - برای صرفه جویی در فضای حافظه و یا گرفتن عکسی که متناسب با اندازه از پیش تنظیم شده لازم برای مخاطب باشد. اندازه عکس را تغییر دهید. مقدار پیکسل را از شش گزینه عددی زیر انتخاب کنید: 2M (2048x1536), 3M (1600x1200), 1M (1280x960), VGA (640x480), WQVGA). صفحه اصلی (QVGA (320x240).

جلوه رنگ - یک طرح رنگ انتخاب کنید تا برای عکسی که می گیرید اعمال شود. پنج گزینه طرح رنگ وجود دارد: خاموش، سیاه و سفید، نگاتیو یا قرمز قهوه ای.

تعادل سفیدی - از بین گزینه های خودکار، آفتابی، فلئورسنت یا ابری یکی را انتخاب کنید.

حالت شب - برای گرفتن عکس در تاریکی مناسب است.

تایمر خودکار - تایمر خودکار به شما امکان می دهد بین قبل از گرفتن عکس توسط دوربین و بعد از فشار دادن دکمه وقفه ای وجود داشته باشد. از بین گزینه های 3 ثانیه، 5 ثانیه یا 10 ثانیه یکی را انتخاب کنید. این قابلیت برای عکس های گروهی که خود شما هم مایل به حضور در آنها می باشید بسیار مناسب است.

کیفیت - از بین گزینه های خیلی خوب، خوب و عادی یکی را انتخاب کنید. هر چه کیفیت بهتر باشد. وضوح عکس بیشتر است اما به نسبت. اندازه فایل نیز افزایش پیدا می کند. در نتیجه عکس های کمتری را می توانید در حافظه ذخیره کنید.

حافظه - انتخاب کنید که عکس های شما در حافظه گوشی ذخیره شود یا حافظه خارجی.

نمایش عکس گرفته شده - انتخاب کنید که عکس بعد از گرفته شدن همراه با گزینه ها نمایش داده شود.

مخفی کردن نمادها - نمادهای تنظیم دوربین را انتخاب کنید که به صورت دستی یا خودکار مخفی شوند.

صدای شاتر سه نوع صدای شاتر موجود است.

صفحه شبکه ای - از بین خاموش، ساده یا سه بخشی انتخاب کنید.

بازنشانی تنظیمات - همه تنظیمات دوربین را بازنشانی کنید.

دوربین فیلمبرداری

آشنایی با نمایاب



نکته! می توانید کلیه گزینه های میانبر را برای داشتن صفحه نمایاب واضح تر ببینید. کافی است مرکز نمایاب را یک بار لمس کنید. برای بازگرداندن گزینه ها. یک بار دیگر صفحه نمایش را لمس کنید.

دوربین فیلمبرداری

فیلمبرداری فوری

1 کلید دوربین را در کنار سمت راست گوشی چند ثانیه فشار دهید.



نکته! برای تغییر وضعیت بین حالت دوربین یا حالت فیلم، نماد دوربین یا فیلم در مرکز سمت راست نمایاب را به بالا/پایین بلغزانید.

2 در حالی که گوشی را به صورت افقی نگه داشته‌اید. عدسی دوربین را به سمت سوژه مورد نظر بگیرید.

3 کلید دوربین روی تلفن را  یک بار فشار دهید تا ضبط شروع شود. یا نقطه قرمز  را لمس کنید.

4 ضبط در پایین نمایاب ظاهر می‌شود. یک تایمر نیز در پایین صفحه نشان داده می‌شود که نشانگر طول فیلم است.

5 برای مکث فیلمبرداری.  را فشار داده و برای از سرگیری آن.  را انتخاب کنید.


6  را روی صفحه لمس کنید یا  را برای بار دوم فشار دهید تا ضبط متوقف شود.


بعد از فیلمبرداری


یک تصویر ثابت که نشان دهنده فیلم گرفته شده است روی صفحه ظاهر می‌شود. نام فیلم در حاشیه پایین صفحه به همراه هفت نماد در قسمت پایین سمت راست و چپ ظاهر می‌شود. لمس کنید تا فیلم پخش شود.

 لمس کنید تا فیلم به صورت یک پیام یا ایمیل یا با بلوتوث یا YouTube ارسال شود.

 لمس کرده و فیلم را ویرایش کنید.

 لمس کرده و فیلمی که به تازگی گرفته‌اید را حذف کنید و آن را با لمس **بله** تایید کنید. نمایاب مجدداً ظاهر خواهد شد.

 را لمس کنید تا با فاصله فیلم دیگری گرفته شود.

 لمس کرده و یک گالری از فیلم‌ها و عکس‌های ذخیره شده را مشاهده کنید.



استفاده از تنظیمات پیشرفته

از نمایاب، تنظیمات را فشار دهید تا همه گزینه های تنظیمات پیشرفته باز شود.

جلوه رنگ - یک طرح رنگ انتخاب کنید تا در فیلم جدید اعمال شود. خاموش، سیاه و سفید، نگاتیو، قرمز قهوه ای.

تعادل سفیدی - تعادل سفیدی باعث می شود که اشیاء سفید رنگ در فیلم ها طبیعی به نظر برسند. برای آنکه دوربین بتواند تعادل سفیدی را به درستی تنظیم کند، شاید لازم باشد که شرایط نور را تعیین کنید. از بین گزینه های خودکار التهایبی، آفتابی، فلئورسنت یا ابری یکی را انتخاب کنید.

کیفیت - از بین گزینه های خیلی خوب، خوب و عادی یکی را انتخاب کنید. هر چه کیفیت بهتر باشد، وضوح فیلم بیشتر است اما به نسبت، اندازه فایل نیز افزایش پیدا می کند. در نتیجه فیلم های کمتری را می توانید در حافظه تلفن ذخیره کنید.

مدت زمان - مدت زمان خاصی را برای فیلم خود تعیین کنید. انتخاب کنید فیلم به صورت یک MMS ارسال شود یا خیر.

نکته! اگر مدت زمان MMS را انتخاب می کنید، سعی کنید کیفیت پایین تری را انتخاب کنید تا بتوانید فیلم طولانی تری بگیرید.

حافظه - انتخاب کنید که فیلم های شما در حافظه گوشی یا در حافظه خارجی ذخیره شود.

فیلم - انتخاب کنید فیلم با صدا ضبط شود یا خیر.

مخفی کردن نمادها - نمادهای تنظیم دوربین را انتخاب کنید که به صورت دستی یا خودکار مخفی شوند.

بازنشانی تنظیمات - همه ی تنظیمات دوربین فیلمبرداری را بازنشانی کنید.

عکس ها و فیلم های شما

مشاهده عکس ها و فیلم ها

1 در زبانه سرگرمی، گالری را لمس کنید. یا در صفحه پیش نمایش دوربین،  را لمس کنید. می توانید عکس ها و فیلم های خود را بررسی کنید.

2 گالری روی صفحه ظاهر می شود.



3 فیلم یا عکس را لمس کنید تا به طور کامل باز شود.

4 برای پخش فیلم،  را لمس کنید. برای توقف موقت پخش،  را فشار دهید.

نکته! به راست یا چپ حرکت کرده و عکس ها یا فیلم ها را مشاهده کنید.

گرفتن عکس از یک فیلم

1 فیلمی که می خواهید از آن عکس بگیرید را انتخاب کنید.


2 برای متوقف کردن فیلم داخل کادری که مایل به تبدیل آن به عکس هستید،  و سپس سمت راست صفحه را فشار دهید تا منوی  باز شود.

3 از منوی گزینه ها،  را انتخاب کنید.

4 تصویر با نام نمایشی خود، در صفحه ظاهر می شود.

5  را برای بازگشت به گالری لمس کنید.


6 تصویر در پوشه موضوعات من ذخیره شده و در گالری ظاهر می گردد.

 هشدار: چنانچه فایل چندرسانه ای در گوشی ضبط نشده باشد، ممکن است برخی از عملکردها به درستی کار نکنند.


مشاهده عکس ها به صورت نمایش


اسلاید


حالت نمایش اسلاید کلیه عکس های موجود در گالری را یکی یکی و به صورت اسلاید پخش می کند. فیلم ها را نمی توان به صورت اسلاید مشاهده کرد.


1  را در گالری لمس کرده و سپس حرکت کنید و نمایش اسلاید را انتخاب نمایید.


2 پخش اسلایدی آغاز خواهد شد.

در حین نمایش اسلاید، گزینه های زیر موجود است: برای بازگشت،  را لمس کنید.



 لمس کنید تا نمایش اسلاید روی یک عکس خاص مکت کند.

 لمس کنید تا نمایش اسلاید از سرگرفته شود.





 فشار دهید تا به طور تصادفی نمایش داده شود.

 لمس کنید تا سرعت نمایش اسلاید افزایش یا کاهش یابد.


تنظیم عکس به صورت تصویر زمینه



- 1 در زبانه سرگرمی، گالری را لمس کنید.
- 2 عکسی که مایل هستید به عنوان تصویر زمینه استفاده شود را لمس کنید.
- 3 صفحه نمایش را لمس کنید تا منو باز شود.
- 4  را لمس کنید.
- 5 اکنون می توانید اندازه عکس را با  تغییر دهید.
- 6 بعد از آنکه انتخاب خود را انجام دادید، تنظیم را لمس کنید.
- 7 از بین گزینه های زیر انتخاب کنید: همه، ویجت، شماره گیری سریع.



ویرایش عکس ها

- 1 عکس مورد نظر را برای ویرایش باز کرده و برای نمایش گزینه های آن،  را فشار دهید.
- 2 باری، تغییر عکس خود، نمادها را لمس کنید:  انگشت خود را در عرض صفحه نمایش بکشید تا ناحیه مورد نظر انتخاب شود.  شکلی را روی عکس دست ساخت خود ترسیم کنید. ضخامت خط را از چهار گزینه موجود و رنگی که مایلید استفاده کنید، انتخاب نمایید.  نوشته ای را به عکس اضافه کنید.

عکس خود را با نمبر ترتیب کنید. از بین مهرها و رنگ های مختلف انتخاب کرده و عکس مورد نظر را برای قرار دادن آن ها فشار دهید.

 هر چه را ترسیم کرده اید پاک کنید. همچنین می توانید اندازه پاک کن را تنظیم کنید.

 برای بازگشت به گالری لمس کنید.  تغییراتی که روی عکس ها اعمال کرده اید را ذخیره نمایید. انتخاب کنید که تغییرات روی فایل اصلی اعمال شود یا به عنوان فایل جدید ذخیره گردد. اگر گزینه فایل جدید را انتخاب می کنید، باید یک نام فایل وارد نمایید.

 آخرین جلوه یا ویرایشی که روی عکس انجام داده اید را باطل کنید.  لمس کنید تا گزینه های فیلتر باز شود. می توانید عکس انتخابی را تنظیم کنید.



عکس ها و فیلم های شما

افزودن جلوه به عکس

1 از صفحه ویرایش،  را لمس کنید.

2 می توانید هریک از گزینه های زیر را روی عکس اعمال کنید:

زیبا کردن صورت - به طور خودکار چهره ای را در یک تصویر شناسایی کرده و آن را واضح و روشن می کند.

جلوه تونلی - جلوه عکس فوری دوربین.

نگاتیو رنگ - جلوه نگاتیو رنگ.

سیاه و سفید - جلوه رنگ سیاه و سفید.

قرمز قهوه ای - جلوه قرمز قهوه ای.

مات - جلوه مات.

واضح کردن - مارکر را در امتداد نوار جابجا

کنید تا کانون عکس واضح شود. نماد OK را

انتخاب کنید تا تغییرات اعمال شود یا 

را انتخاب کنید تا لغو گردد.

شظرنجی مات - برای شظرنجی کردن مات

عکس. این گزینه را فشار دهید.

رنگ روغن - جلوه رنگ روغن به عکس می دهد.

نقاشی - با اعمال این جلوه. عکس مانند

نقاشی به نظر می رسد.

برجسته - یک جلوه برجسته به عکس

می دهد.

آفتابی - جلوه قرار گرفتن در معرض نور را

تغییر دهید.

واضح - جلوه زنده و شفاف به عکس می دهد.

نور ماه - نور را تغییر دهید تا شبیه به نور

ماه شود.

قدیمی - یک جلوه قدیمی به عکس می دهد.

نورانی - جلوه اشعه نورانی به عکس می دهد.

کارتونی - جلوه کارتونی به عکس می دهد.

رنگ آب - یک جلوه مانند رنگ آب به عکس

می دهد.

3 برای لغو جلوه ی اعمال شده. برگشت 

را انتخاب کنید.

چند رسانه ای

می توانید هر نوع فایل چند رسانه ای را در حافظه گوشی ذخیره کنید تا به تصاویر، صداها، فیلم ها و بازی های خود دسترسی آسان و سریع داشته باشید. همچنین می توانید فایل های خود را روی یک کارت حافظه ذخیره کنید. استفاده از کارت حافظه به شما امکان می دهد حافظه تلفن خود را خالی کنید. شما می توانید این فایل ها را در منوی موضوعات من در زبانه سرگرمی ببابید.

عکس ها

تصاویر حاوی فهرستی از تصاویر اعم از تصاویر پیش فرض که از قبل روی گوشی بارگیری شده است و نیز تصاویری که خودتان بارگیری کرده یا با دوربین گرفته اید می باشد.


ارسال عکس

1 موضوعات من را در زبانه سرگرمی لمس کرده و تصاویر را انتخاب کنید. عکس مورد نظر را انتخاب کنید.

2 ارسال را لمس کرده و از بین گزینه های پیام چندرسانه ای، ایمیل، بلوتوث و تهیه کننده ویلاگ انتخاب کنید.

استفاده از تصویر

می توانید از تصاویر به عنوان تصویر زمینه، صفحه قفل و حتی برای شناسایی تماس گیرنده استفاده کنید.

1 موضوعات من را در زبانه سرگرمی لمس کرده و تصاویر را انتخاب کنید. عکس مورد نظر را انتخاب کنید. و  را لمس کنید.

2 استفاده به عنوان را لمس کرده و از بین گزینه های زیر انتخاب کنید:

تصویر صفحه اصلی - تصویر زمینه ای را برای صفحه اصلی تنظیم کنید.


تصویر صفحه قفل - تصویر زمینه ای را برای صفحه قفل تنظیم کنید.

تصویر مخاطبین - تصویری را به فرد خاصی که در فهرست مخاطبین شما وجود دارد اختصاص دهید. تا زمانی که وی یا شما تماس می گیرد. تصویر نشان داده شود.

تصویر صفحه شروع - تصویری را برای زمانیکه تلفن روشن می شود تعیین کنید.

تصویر صفحه خاموش - تصویری را برای زمانیکه تلفن خاموش می شود تعیین کنید.

چاپ تصویر

1 موضوعات من را در زبانه سرگرمی لمس کرده و تصاویر را انتخاب کنید. عکس مورد نظر را انتخاب کنید. و  را لمس کنید.


2 چاپ را فشار داده و سپس از بین بلوتوث و **PictBridge** انتخاب کنید.

نکته! می توانید از طریق بلوتوث یا با اتصال به یک چاپگر سازگار PictBridge چاپ کنید.

چند رسانه ای

انتقال یا کپی تصویر

می توانید تصویر را بین حافظه داخلی و حافظه خارجی جابجا یا کپی کنید. این کار را برای خالی کردن حافظه یا مراقبت از تصاویر از گم شدن انجام دهید.

1 موضوعات من را در زبانه سرگرمی لمس کرده، تصاویر را انتخاب کنید و سپس  را لمس نمایید.

2 انتقال یا کپی را انتخاب کنید.

3 می توانید تصاویر را با ضربه زدن روی آن ها، علامت دار یا بی علامت کنید. تصویری که می خواهید انتقال دهید یا کپی کنید را علامت زده و **کپی/انتقال را لمس کنید.**

صداها

صداها حاوی فهرستی از صداها شامل صداهای بارگبری شده، صداهای پیش فرض و صداهای ضبط شده می باشند. در اینجا می توانید صداها را مدیریت و ارسال کنید و یا آنها را به عنوان آهنگ زنگ تنظیم نمایید.

استفاده از صدا

1 موضوعات من را در زبانه سرگرمی لمس کرده و صداها را انتخاب کنید.

2 صدای مورد نظر را انتخاب کنید. یک پیام نباید ظاهر می شود.

3 بله را لمس کنید، پخش شروع می شود.

4  را فشار داده و استفاده به عنوان را انتخاب کنید.

5 از بین گزینه های آهنگ زنگ، آهنگ پیام، شروع یا خاموش شدن انتخاب کنید.

فیلم ها

پوشه فیلم ها حاوی فیلم های بارگبری شده و نیز فیلم هایی است که در تلفن گرفته و ذخیره کرده اید.

تماشای فیلم

1 در زبانه سرگرمی، موضوعات من را لمس کرده و فیلم ها را انتخاب کنید.

2 فیلمی را برای پخش انتخاب کنید.

ارسال کلیپ تصویری

1 فیلمی را انتخاب کنید.

2  و سپس ارسال را لمس کرده و پیام، ایمیل، بلوتوث و YouTube را انتخاب کنید.

بازی ها و برنامه ها

می توانید بازی ها و برنامه های جدیدی را بارگبری کرده و روی گوشی خود ذخیره نمایید و با استفاده از آنها اوقات فراغت خود را پر کنید.

همچنین با استفاده از منوی بازی ها و برنامه ها در زبانه سرگرمی، می توانید به این برنامه ها دسترسی داشته باشید.

انجام دادن بازی

- 1 در زمانه سرگرمی، بازی ها و برنامه ها را لمس کنید.
- 2 بازی ها را انتخاب کنید و سپس یک بازی برای اجرا انتخاب نمایید.

اسناد

از منوی اسناد در موضوعات من، می توانید همه فایل های موجود را مشاهده کنید، از اینجا می توانید فایل های Excel, Powerpoint, Word، متن و pdf را مشاهده نمایید.

انتقال فایل به گوشی

بلوتوث احتمالاً آسان ترین راه برای انتقال فایل از رایانه به تلفن شما است، همچنین می توانید از LG PC Suite با کابل همگام سازی استفاده کنید.

برای انتقال فایل از طریق بلوتوث:

- 1 بررسی کنید که بلوتوث گوشی و رایانه روشن و قابل رؤیت باشد.
- 2 از رایانه خود برای ارسال فایل از طریق بلوتوث استفاده کنید.
- 3 وقتی فایل ارسال می شود باید آن را در تلفن خود پذیرفته و بله را لمس کنید.
- 4 فایل باید به صورت پیش فرض در پوشه من دومین زمانه در موضوعات من ظاهر شود. اگر پوشه پر است می توانید از فایل چشم پوشی کنید.


موارد دیگر

پوشه موارد دیگر حاوی فهرستی از فایل هایی است که عکس، صدا، فیلم، اسناد، بازی ها یا برنامه ها نیستند.

استودیو فیلم

می توانید یک موزیک ویدئو ایجاد کنید.

ایجاد فیلم

- 1 در زمانه سرگرمی، به استودیو فیلم رفته و آن را لمس کنید.
- 2  را برای اضافه کردن تصویر لمس کنید. تصاویر مورد نظر را ضربه بزنید، سپس وارد کردن را انتخاب کنید.
- 3 زمانه سبک را برای انتخاب یک سبک Muvee لمس کنید. سبک پیش فرض قهوه ای کلاسیک است.
- 4 برای تغییر صدا، صدای پیش فرض را فشار دهید.
- 5 برای مشاهده آنچه ایجاد کرده اید،  را لمس کنید.
- 6 برای ایجاد یک ترتیب،  و سپس ترتیب پخش را لمس کنید، می توانید پخش را به صورت تصادفی یا به ترتیب انجام دهید.
- 7  کلید و سپس محل ذخیره را فشار دهید تا فیلم ذخیره شود.

چند رسانه ای

موسیقی

آهنگ های تصادفی - به آهنگ ها به صورت تصادفی و در هم گوش دهید.

انتقال موسیقی به گوشی

ساده ترین راه برای انتقال موسیقی به گوشی، استفاده از بلوتوث یا کابل همگام سازی است. همچنین می توانید از LG PC Suite استفاده کنید. برای انتقال فایل از طریق بلوتوث:

- 1 بررسی کنید که بلوتوث هر دو دستگاه روشن بوده و برای یکدیگر قابل رویت باشند.
- 2 بعد از انتخاب فایل موسیقی مورد نظر، گزینه ارسال آن از طریق بلوتوث را انتخاب کنید.
- 3 وقتی فایل برای ارسال آماده است، آن را با فشار دادن **بله** در تلفن خود بپذیرید.
- 4 فایل باید در موسیقی < همه آهنگ ها ظاهر شود.

پخش آهنگ

- 1 در زبانه سرگرمی، موسیقی را لمس کنید.
- 2 یکی از پوشه ها و ترانه مورد نظر برای پخش را انتخاب کنید.
- 3 برای متوقف کردن ترانه، **II** را لمس کنید.
- 4 برای رفتن به ترانه بعد، **▶▶** را لمس کنید.
- 5 برای رفتن به ترانه قبل، **◀◀** را لمس کنید.
- 6  را برای بازگشت به منوی موسیقی فشار دهید. می توانید برای بازگشت به منو بیشتر از یک بار لمس کنید.

گوشی LG GD510 یک پخش کننده موسیقی داخلی دارد که می تواند کلیه آهنگ های دلخواه شما را پخش کند. برای دسترسی به پخش کننده موسیقی، موسیقی را در زبانه سرگرمی لمس کنید. از اینجا می توانید به تعدادی از پوشه ها دسترسی پیدا کنید:

اخیرا پخش شده - ترانه هایی که اخیرا پخش کرده اید را پخش می کند.

توجه: حق کپی فایل های موسیقی ممکن است تحت حفاظت قوانین ملی و بین المللی قرار داشته باشد. ممکن است برای تکثیر یا کپی موسیقی، نیاز به اخذ اجازه یا مجوز باشد. در برخی از کشورها، طبق قوانین ملی کشور تکثیر و کپی مطالبی که تحت حفاظت حق کپی قرار دارد ممنوع است. قبل از بارگیری یا کپی کردن فایل ها، لطفاً قوانین ملی کشور مربوطه در خصوص استفاده از این موارد را بررسی کنید.

همه آهنگ ها - شامل همه آهنگ های تلفن به جز موسیقی پیش فرض از قبل بارگذاری شده می باشد.

هنرمندان - در مجموعه موسیقی خود بر اساس هنرمند جستجو کنید.

آلبوم ها - در مجموعه موسیقی خود بر اساس آلبوم جستجو کنید.

سبک ها - در مجموعه موسیقی خود بر اساس سبک موسیقی جستجو کنید.

لیست های پخش - حاوی کلیه لیست های پختنی که ایجاد کرده اید می باشد.

ایجاد لیست پخش

با انتخاب آهنگ هایی از پوشه لیست های پخش، لیست های پخش مخصوص به خود ایجاد کنید.


1 در زبانه سرگرمی، موسیقی را لمس کنید.

2 لیست های پخش و سپس افزودن به لیست پخش جدید را فشار داده و نام لیست پخش را وارد نمایید و ذخیره را لمس کنید.





3 پوشه همه آهنگ ها، کلیه ترانه های موجود در تلفن را نمایش خواهد داد. همه ترانه هایی که مایل به افزودن آنها به لیست پخش خود هستید را فشار دهید. یک علامت تیک در کنار آنها ظاهر می شود.

4 گزینه انجام شد را لمس کنید.


برای تنظیم خودکار:

1 در زبانه سرگرمی، به رادیو FM رفته و آن را لمس کنید و سپس  را فشار دهید.

2 اسکن خودکار را لمس کنید. یک پیام تایید ظاهر می شود. بله را انتخاب کنید. ایستگاه ها به طور خودکار یافت شده و به یک کانال در تلفن اختصاص داده می شوند.

توجه: شما می توانید به صورت دستی نیز در یک ایستگاه و با استفاده از  و  نمایش داده شده در مرکز صفحه نمایش وارد شوید. اگر  و  را فشار داده و نگه دارید. ایستگاه ها به طور خودکار یافت می شوند.

بازنشانی کانال ها

1 در زبانه سرگرمی، به رادیو FM رفته و آن را لمس کنید و سپس  را فشار دهید.

2 برای بازنشانی کانال فعلی، گزینه بازنشانی کانال و برای بازنشانی همه کانال ها، گزینه بازنشانی همه کانال ها را انتخاب کنید. همه کانال ها به فرکانس 87.5 مگاهرتز اولیه بر می گردند.

رادیو FM

گوشی LG GD510 شما دارای یک رادیو FM است که می توانید از طریق آن به برنامه های رادیویی دلخواه خود گوش کنید.

توجه: برای گوش دادن به رادیو، باید هدفون ها را به تلفن وصل کنید. هدست را به فیش مربوطه وصل کنید. (این همان فیشی است که شما شارژر گوشی را به آن وصل می کنید).

جستجوی ایستگاه

می توانید با جستجوی ایستگاه های رادیویی یا به صورت دستی و یا به صورت خودکار، ایستگاه رادیویی دلخواه خود را تنظیم کنید. این ایستگاه ها در کانال هایی با شماره مشخص ذخیره خواهند شد. بنابراین نیازی نیست که هر بار که می خواهید به آنها گوش دهید، جستجو را تکرار کنید. باید ابتدا هدست را به تلفن وصل کنید تا به عنوان آنتن عمل کند.

سازمان دهنده

افزودن یک رویداد به تقویم

افزودن یک مورد به لیست کارها

- 1 سازمان دهنده را در زبانه برنامه ها لمس کرده و
- 2 کارها و افزودن کار را انتخاب کنید.
- 3 تاریخی که می خواهید رویدادی به آن اضافه شود را انتخاب کنید.
- 4 و سپس افزودن رویداد را لمس کنید.
- 5 مقوله را انتخاب کرده و سپس از قرار ملاقات، سالگرد یا روز تولد انتخاب کنید.
- 6 موضوع را وارد کنید.


- 1 تاریخ و زمان شروع رویداد مورد نظر را بررسی و وارد کنید. برای ملاقات ها و سالروزها زمان پایان رویداد را هم در دو کار زمان و تاریخ در پایین وارد کنید. اگر قرار ملاقات وجود دارد، محل آن را وارد کنید.
- 2 هشدار و تکرار را تنظیم کنید.
- 3 ذخیره را انتخاب کنید تا رویداد مورد نظر در تقویم ذخیره شود. یک مکان مشخصه مربع شکل همه روزهایی که رویدادی به آنها افزوده شده است را مشخص می کند و با شروع آن رویداد، صدای زنگی شنیده می شود. بدین ترتیب منظم و برنامه ریزی شده همه رویدادها به شما اعلام می شود.

استفاده از تاریخ یاب

تاریخ یاب ابزار بسیار مفیدی است که در محاسبه تاریخ ها به شما کمک می کند. به عنوان مثال، 60 روز پس از تاریخ 10.10.07 برابر خواهد بود با 09.12.2007.

- 1 سازمان دهنده را در زبانه برنامه ها لمس کنید.
- 2 تاریخ یاب را انتخاب کنید.
- 3 تاریخ مورد نیاز را در زبانه از تنظیم کنید.
- 4 تعداد روزها را در زبانه بعد از تنظیم کنید.
- 5 تاریخ مقصد در زیر نشان داده می شود.

افزودن یادداشت


- 6 زنگ هشدار را انتخاب کرده و یک صدا از پوشه انتخاب نمایید. برای گوش دادن به صداها، صدای مورد نظر و سپس  را لمس کنید.
- 7 یادداشتی را برای هشدار در کادر یادداشت اضافه کنید.
- 8 و در آخر می توانید فواصل زمانی که زنگ به صدا در بیاید را روی 5, 10, 20, 30 دقیقه 1 ساعت یا خاموش تنظیم کنید.

- 9 بعد از تنظیم زنگ هشدار، ذخیره را لمس کنید. توجه: می توانید تا 5 زنگ هشدار از جمله هشدار ویجت تنظیم کنید.

نکته! سوییچ را به طرف روشن/خاموش بلغزانید و به زنگ هشدار بروید و آن را تنظیم کنید.

افزودن یادداشت با استفاده از تابلوی

نقاشی

- 1 در زبانه برنامه ها، به تابلوی نقاشی رفته و آن را لمس کنید.
- 2 افزودن نقاشی را لمس کنید.
- 3 یادداشت خود را در صفحه نمایش لمسی کشیده و  را فشار دهید.
- 4 بله را لمس کنید. سپس یادداشت شما در صفحه و در برنامه تابلوی نقاشی ظاهر می شود.

- 1 یادداشت را در زبانه برنامه ها لمس کنید.

- 2 افزودن یادداشت را انتخاب کنید.

- 3 یادداشت را تایپ کرده و سپس ذخیره را لمس کنید.

- 4 یادداشت در صفحه و در برنامه یادداشت ظاهر می شود.

تنظیم زنگ هشدار

- 1 هشدارها را در زبانه برنامه ها لمس کنید. هشدار ویجت باید در این لیست به عنوان پیش فرض ظاهر شود که نمی توانید آن را حذف کنید.

- 2 افزودن هشدار را لمس کنید.

- 3 زمان مورد نظر برای به صدادرآمدن زنگ هشدار را در کادر زمان تنظیم کنید.

- 4 انتخاب کنید زنگ هشدار شما چگونه در کادر تکرار تکرار شود: بدون تکرار، روزانه، دوشنبه - جمعه، دوشنبه - شنبه، شنبه - یکشنبه، به جز روز تعطیل یا انتخاب روز هفته.

- سپس این نمادها روز هفته ای را که انتخاب کرده اید نشان می دهند.

- 5 نوع زنگ هشدار را انتخاب کرده و نوع زنگ مورد نظر را انتخاب کنید.

سازمان دهنده

ضبط صوت

از ضبط صوت برای ضبط یادداشت های صوتی یا فایل های صوتی دیگر استفاده کنید.


ضبط صوت را در زبانه برنامه ها لمس کرده و برای تغییر تنظیمات، و سپس تنظیمات را انتخاب کنید.

مدت زمان - مدت زمان ضبط را تعیین کنید. از بین گزینه های بدون محدودیت، اندازه پیام MMS یا 1 دقیقه انتخاب کنید.

کیفیت - کیفیت صدا را انتخاب کنید. از بین گزینه های خیلی خوب، خوب یا عادی انتخاب کنید.


حافظه مورد استفاده - انتخاب کنید فایل های صوتی در کجا ذخیره شوند. از بین حافظه خارجی و حافظه گوشی انتخاب کنید.

ضبط یک صدا یا صوت

1  را لمس کنید تا ضبط آغاز شود.

2  را لمس کنید تا ضبط موقتا متوقف شود.

3  را برای پایان ضبط لمس کنید.

4  را برای گوش دادن به صداهای ضبط شده لمس کنید.

استفاده از ماشین حساب

1 ابزارها را در زبانه برنامه ها لمس کنید.

2 ماشین حساب را انتخاب کنید.

3 کلیدهای عددی را با استفاده از صفحه کلید لمس کرده و اعداد را وارد کنید.

4 برای محاسبات ساده، عملکرد مورد نظر (+, -, ×, ÷) و سپس = را فشار دهید.

5 برای محاسبات پیچیده تر،  را فشار داده و از بین **sin, cos, tan, log, ln, exp, sqrt** یا **deg** یا **rad** انتخاب کنید.

تبدیل واحد

1 ابزارها را در زبانه برنامه ها لمس کنید.

2 مبدل واحد را انتخاب کنید.



3 واحد مورد نظر شامل واحد پول، سطح.

طول، وزن، دما، حجم یا سرعت را برای تبدیل انتخاب کنید.

4 اکنون می توانید واحد را انتخاب و مقدار مورد نظر را برای تبدیل وارد نمایید و سپس واحد تبدیل را انتخاب نمایید.

5 مقدار متناظر روی صفحه ظاهر خواهد شد.

افزودن یک شهر به ساعت جهانی

- 1 ابزارها را در زبانه برنامه ها لمس کنید.
- 2 ساعت جهانی را انتخاب کنید.
- 3  و سپس افزودن شهر را فشار دهید.
- 4 در جهان حرکت کرده، منطقه مورد نظر را لمس کنید و شهر را در نقشه انتخاب نمایید.
- 5 یا  را لمس کرده و نام شهر مورد نظر را در کادر جستجو تایپ کنید.

استفاده از زمان سنج

- 1 ابزارها را در زبانه برنامه ها لمس کنید.
- 2 زمان سنج را انتخاب کنید.
- 3 شروع را در پایین صفحه نمایش لمس کنید تا تایمر شروع شود.
- 4 اگر می خواهید یک دور را ثبت کنید، دور را انتخاب نمایید.
- 5 برای متوقف کردن تایمر، توقف را انتخاب کنید.
- 6 برای شروع مجدد زمان سنج از زمان توقف آن، از سرگیری را فشار دهید و برای شروع زمان از ابتدا، بازنشانی را انتخاب کنید.

آشنایی با درخت زیستی

درخت های زیستی با شارژ باتری خورشیدی تجمع می یابند. هر درخت نمایشگر خروجی کرین کاهش یافته است. شما می توانید درخت بیشتری را با استفاده از انرژی خورشید ایجاد کنید.

آشنایی با محاسبه گر زیستی

می توانید کل مقدار خروجی کرین کاهش یافته را با شارژ کردن باتری خورشیدی محاسبه کنید.

نکته! اگر باتری خورشیدی به GD510

متصل باشد، درخت زیستی و محاسبه گر زیستی در منوی ابزارها در زبانه برنامه ها نمایش داده می شوند.


همگام سازی رایانه

می توانید گوشی را با رایانه همگام سازی کنید تا مطمئن شوید که همه اطلاعات و تاریخ های مهم تلفن با رایانه یکسان است. به علاوه، می توانید از داده های تلفن، پشتیبان تهیه کنید.

نصب LG PC Suite در رایانه

- از صفحه اصلی،  را انتخاب کرده و سپس در زبانه تنظیمات، اتصال را انتخاب کنید.
- حالت اتصال USB را انتخاب کرده و PC Suite را لمس کنید.
- با کابل USB گوشی را به رایانه وصل کرده و کمی صبر کنید. پیام راهنمای نصب نمایش داده می شود.
- مراحل نصب را برای تکمیل LG PC Suite Installer wizard (برنامه جادویی نصب کننده LG PC Suite) دنبال کنید.
- وقتی نصب کامل شد، نماد LG PC Suite در دسک تاپ ظاهر می شود.

اتصال گوشی و رایانه شخصی

- از صفحه اصلی،  را انتخاب کرده و سپس در زبانه تنظیمات، اتصال را انتخاب کنید.
- حالت اتصال USB را انتخاب کنید.
- PC Suite را لمس کنید.
- با کابل USB گوشی را به رایانه وصل کرده و کمی صبر کنید. PC Suite به طور خودکار اجرا می شود.

تهیه پشتیبان و بازیابی اطلاعات گوشی

- گوشی را به نحوی که در بالا شرح داده است به رایانه شخصی خود وصل کنید.
- روی نماد Backup (پشتیبانی) کلیک و یکی از گزینه های Backup (پشتیبانی) یا Restore (بازیابی) را انتخاب کنید.
- محتویات مورد نظر را برای تهیه پشتیبان یا بازیابی علامت بزنید. محلی که می خواهید اطلاعات را از آن بازیابی یا در آن پشتیبانی کنید را انتخاب نمایید. روی نماد Start (شروع) کلیک کنید.
- از اطلاعات شما پشتیبان تهیه شده یا بازیابی می شوند.

مشاهده فایل های گوشی در رایانه شخصی

- گوشی را به نحوی که قبلاً شرح داده شد به رایانه شخصی خود وصل کنید.
- روی نماد Manage Files (مدیریت فایل ها) کلیک کنید.
- کلیه اسناد، محتویات فلاش، تصاویر، صداها، و فیلم هایی که شما روی گوشی ذخیره کرده اید در سمت راست صفحه نمایش داده خواهد شد.

نکته! مشاهده محتویات تلفن در رایانه به شما امکان می دهد که فایل ها را مرتب کرده، اسناد را سازماندهی و محتویات اضافی که دیگر نیازی به آن ها ندارید را حذف کنید.

همگام سازی مخاطبین

- 1 تلفن را به رایانه متصل کنید.
- 2 روی نماد **Manage Contacts** (مدیریت مخاطبین) کلیک کنید.
- 3 به این ترتیب رایانه کلیه محتویات ذخیره شده روی سیم و گوشی را از گوشی وارد کرده و نمایش می دهد.
- 4 روی **File** (فایل) و سپس **Save** (ذخیره) کلیک کنید. اکنون می توانید محل ذخیره مخاطبین را انتخاب کنید.

توجه: برای تهیه پشتیبان از مخاطبین ذخیره شده روی سیم کارت، روی پوشه سیم کارت که در سمت چپ صفحه رایانه قرار دارد کلیک کنید.

روی مخاطبین راست کلیک کرده و **Select All** (انتخاب همه) را انتخاب کنید.

همین قسمت را کلیک راست کرده و **Copy to Phone Memory** (کپی کردن در حافظه تلفن) را انتخاب کنید. حال، روی پوشه **Handset** (گوشی) که در سمت چپ صفحه قرار گرفته است کلیک کنید تا کل شماره های شما نشان داده شود.

همگام سازی پیام ها

- 1 تلفن را به رایانه متصل کنید.
- 2 روی نماد **Messages** (پیام ها) کلیک کنید.
- 3 کلیه پیام های گوشی در قالب پوشه هایی بر روی صفحه ظاهر خواهد شد.
- 4 روی عنوان ستون ها کلیک کنید تا پیام های مرتب شده بر اساس ارسال کننده، مخاطبین و داده های دریافتی دوباره مرتب شوند.

استفاده از تلفن به عنوان دستگاه

همگام سازی موسیقی

می توانید از تلفن خود به عنوان دستگاه همگام سازی موسیقی فقط برای همگام سازی فایل های موسیقی استفاده کنید.

همگام سازی موسیقی را می توان با استفاده از **Windows Media Player 10/11** انجام داد که هم از حافظه گوشی و هم کارت حافظه خارجی پشتیبانی می کند.

- 1 اتصال گوشی را با رایانه قطع کنید.
- 2 از صفحه اصلی،  را انتخاب کرده و سپس در زبانه تنظیمات، اتصال را انتخاب کنید.
- 3 حالت اتصال **USB** را انتخاب کنید.
- 4 همگام سازی موسیقی را لمس کنید.
- 5 تلفن را به رایانه متصل کنید. تلفن شما عبارت متصل شد را نشان می دهد.

دست‌رسی به شبکه

1 **مرورگر** را در زبانه برنامه‌ها لمس کنید.

2 برای دسترسی مستقیم به صفحه اصلی مرورگر، اصلی را انتخاب کنید. یا وارد کردن آدرس را انتخاب کرده و URL مورد نظر را تایپ کنید و سپس مخاطبین را انتخاب نمایید.

توجه: اتصال به این خدمات و بارگیری، هزینه اضافی در بر خواهد داشت. درباره هزینه‌های انتقال داده با ارائه دهنده شبکه خود تماس بگیرید.

افزودن و دسترسی به محل یاب‌ها

برای دسترسی آسان و سریع به وب سایت‌های دلخواه، می‌توانید محل یاب‌هایی اضافه کرده و صفحات را ذخیره کنید.

1 **مرورگر** را در زبانه برنامه‌ها لمس کنید.

2 **محل یاب‌ها** را انتخاب کنید. فهرستی از محل یاب‌های شما روی صفحه ظاهر خواهد شد.

3 برای افزودن یک محل یاب جدید، **افزودن محل یاب** را لمس کنید. یک نام برای محل یاب خود انتخاب کرده و به دنبال آن URL را در کادر مربوطه وارد کنید.

4 **ذخیره** را لمس کنید. به این ترتیب، محل یاب شما در فهرست محل یاب‌ها ظاهر خواهد شد.


5 برای دسترسی به محل یاب کافی است نهاد اتصال را در کنار محل یاب لمس کنید یا عنوان محل یاب و سپس اتصال را لمس کنید. به این ترتیب، به محل یاب مورد نظر وصل خواهید شد.

استفاده از RSS خوان

RSS (سندیکای ساده) از قالب‌های سرویس خبری وب است که برای انتشار محتویات به روزشده مانند ورودی‌های وبلاگ، سرعنوان‌های اخبار یا پادکست‌ها استفاده می‌شود. یک سند RSS که سرویس خبری، سرویس خبری وب یا کانال نامیده می‌شود. حاوی خلاصه‌ای از محتویات وب سایت مربوطه یا متن کامل آن‌ها می‌باشد. RSS به افراد امکان می‌دهد به‌طور خودکار با وب سایت‌های مورد علاقه خود در ارتباط باشند. این کار بسیار آسان‌تر از بررسی آن‌ها به صورت دستی است.

کاربر با وارد کردن پیوند سرویس خبری در RSS خوان یا با کلیک روی نماد RSS در مرورگری که فرایند اشتراک را شروع می‌کند مشترک می‌شود. RSS خوان سرویس‌های خبری مشترک را مرتباً برای محتوای جدید بررسی کرده و همه موارد به روز یافت شده را بارگیری می‌کند.

ذخیره صفحه

- 1 به شیوه ای که در بالا شرح داده شد به صفحه وب مورد نظر خود دسترسی پیدا کنید.
- 2 کلید  را لمس و سپس گزینه ذخیره این صفحه را انتخاب کنید.
- 3 نامی را برای صفحه وب وارد کنید تا بتوانید به راحتی آن را تشخیص دهید.
- 4 ذخیره را لمس کنید.

دسترسی به صفحه ذخیره شده

مرورگر را در زبانه برنامه ها لمس کنید. و صفحات ذخیره شده را انتخاب کنید. می توانید صفحات ذخیره شده را در اینجا مشاهده کنید.

مشاهده تاریخچه مرورگر

مرورگر را در زبانه برنامه ها لمس کنید. و تاریخچه را انتخاب کنید.

تغییر تنظیمات مرورگر وب

مرورگر را در زبانه برنامه ها لمس کنید. و تنظیمات را انتخاب کنید.

انتخاب کنید که مشخصه ها. تنظیمات ظاهری. حافظه پنهان. کوکی ها. یا تنظیمات امنیتی. ویرایش شود.

استفاده از گوشی به عنوان مودم

گوشی GD510 می تواند به عنوان مودم برای رایانه نیز عمل کند. یعنی اینکه زمانی که نمی توانید از طریق تلفن ثابت به اینترنت وصل شوید. باز هم می توانید به ایمیل و اینترنت دسترسی داشته باشید. می توانید از کابل USB یا بلوتوث استفاده کنید.

استفاده از کابل USB:

- 1 بررسی کنید LG PC Suite در رایانه نصب شده باشد.
- 2 گوشی GD510 و رایانه را همانطور که قبلا گفته شد با استفاده از کابل USB به هم وصل کنید و نرم افزار LG PC Suite را اجرا کنید.
- 3 روی InternetKit (کیت اینترنت) در رایانه کلیک کنید. دکمه New (جدید) را کلیک کرده و Modem (مودم) را انتخاب کنید.
- 4 گزینه LG Mobile USB Modem (مودم LG Mobile USB) و سپس OK (تایید) را انتخاب کنید. حال روی صفحه ظاهر خواهد شد.
- 5 مشخصه ای که می تواند به اینترنت متصل شود را وارد کرده و مقادیر را ذخیره کنید.
- 6 مشخصه ای که ایجاد می کنید در صفحه رایانه ظاهر می شود. آن را انتخاب کرده و روی Connect (اتصال) کلیک کنید. رایانه شما از طریق GD510 متصل می شود. توجه: برای اطلاعات بیشتر درباره همگام سازی با استفاده از LG PC Suite.

استفاده از بلوتوث:

- 1** بررسی کنید بلوتوث روشن بوده و هم برای رایانه و هم برای گوشی GD510 قابل رویت باشد.
 - 2** رایانه و گوشی GD510 خود را به گونه ای به یکدیگر وصل کنید که برای برقراری اتصال به کد ورود نیاز باشد.
 - 3** با استفاده از **Connection wizard** (برنامه جادویی اتصال) در **LG PC Suite** یک اتصال فعال بلوتوث ایجاد کنید.
 - 4** **Internet Kit** (کیت اینترنت) را در رایانه کلیک کنید. سپس دکمه **New** (جدید) را کلیک کنید.
 - 5** گزینه **LG Mobile USB Modem** (مودم **LG Mobile USB**) و سپس **OK** (تأیید) را انتخاب کنید. حال روی صفحه ظاهر خواهد شد.
 - 6** مشخصه ای که می تواند به اینترنت متصل شود را وارد کرده و مقادیر را ذخیره کنید.
 - 7** مشخصه ای که ایجاد می کنید در صفحه رایانه ظاهر می شود. آن را انتخاب کرده و **اتصال** را کلیک کنید.
- رایانه شما از طریق GD510 متصل می شود.

تنظیمات

شخصی سازی مشخصه ها

می توانید به راحتی مشخصه خود را در صفحه اصلی تلفن تغییر دهید.

می توانید هر تنظیم مشخصه را با استفاده از منوی تنظیمات شخصی سازی کنید.

- 1 در زبانه تنظیمات مشخصه ها را لمس کنید.
- 2 مشخصه ای که می خواهید ویرایش کنید را انتخاب نمایید.

- 3 اکنون می توانید کلیه صداها و گزینه های هشدار موجود در لیست را از جمله تنظیمات آهنگ زنگ و میزان صدا، آهنگ پیام و بسیاری موارد دیگر، تغییر دهید.

تغییر تنظیمات صفحه

در زبانه تنظیمات، تنظیمات صفحه نمایش را لمس کنید.

تنظیمات صفحه نمایش

تصویر زمینه - مضمونی را برای صفحه اصلی یا صفحه قفل انتخاب کنید.

چهارچوب زنده - راهنمای چهارچوب زنده را برای بررسی عملکردهای آن لمس کنید.

مضمون گوشی - مضمون منوها را انتخاب کنید. همچنین می توانید اندازه و سبک قلم را تنظیم کنید.

منوی اصلی - سبک منوی اصلی را انتخاب کنید. گزینه های زیگزاگ یا پیمایش را انتخاب کنید.

شماره گیری - رنگ شماره را تنظیم کنید.

توجه: هر چه نور زمینه بیشتر روشن باشد، نیروی باتری بیشتری استفاده می شود. این ممکن است باعث نیاز به شارژ کردن تلفن در تعداد دفعات بیشتر شود.

روشنایی - روشنایی صفحه را تنظیم کنید. پیام خوش آمد - روشن یا خاموش را انتخاب کرده و پیام احوال پرسی را در قسمت متنی وارد کنید.

شروع/خاموش شدن - مضمون صفحه شروع/خاموش شدن را انتخاب کنید.

تغییر تنظیمات تلفن

از آزادی عملی که گوشی GD510 برای شما فراهم کرده و مطابق با اولویت های شما عمل می کند، لذت ببرید.

در زبانه تنظیمات، تنظیمات تلفن را انتخاب کرده و سپس از لیست زیر انتخاب کنید.

تنظیمات تلفن

تاریخ و زمان - تنظیمات تاریخ و زمان را تنظیم کنید یا انتخاب کنید زمان به طور خودکار به روز شود یا از گزینه ساعت تابستانه استفاده کنید.

ذخیره نیرو - انتخاب کنید که تنظیمات ذخیره نیروی پیش فرض کارخانه روشن/خاموش یا فقط شب باشد.

زمان - زبان صفحه نمایش GD510 خود را تغییر دهید.

تنظیمات

تنظیمات شبکه

انتخاب شبکه - اگر روی خودکار تنظیم کنید، GD510 به طور خودکار شبکه را جستجو کرده و گوشی را در شبکه ثبت می کند. این تنظیم برای خدمات و کیفیت بهتر توصیه می شود.

اگر دستی را انتخاب کنید، همه شبکه های موجود نمایش داده شده و می توانید یکی از آن ها را برای ثبت نام انتخاب کنید.

لیست های برگزیده - می توانید یک شبکه برگزیده را برای اتصال اضافه کنید. اگر شبکه به طور خودکار جستجو می کند، کافی است یکی از شبکه ها را از لیست شبکه انتخاب کنید. در غیر این صورت، یک شبکه جدید به صورت دستی اضافه نمایید.

مشخصه های اینترنتی - این منو مشخصه های اینترنتی را نشان می دهد. با این وجود بسته به کشور خود، نمی توانید پیکربندی های پیش فرض را حذف یا ویرایش کنید.

نقاط دستیابی - اپراتور شبکه شما از قبل این اطلاعات را ذخیره کرده است. می توانید با استفاده از این منو، نقاط دستیابی جدیدی را اضافه کنید.

اتصال داده های بسته ای - انتخاب کنید چه موقع دستگاه شما برای داده های بسته ای، به شبکه متصل شود.

حرکت بیصدا - GD510 را طوری تنظیم

کنید که وقتی زنگ می زند با واژگون کردن آن صدا قطع شود یا به تعویق بیفتد.

قفل کلید خودکار - صفحه کلید را به طور خودکار در صفحه اصلی قفل کنید.

امنیت - تنظیمات امنیتی خود را شامل کدهای پین و قفل گوشی، تنظیم کنید.

مدیر حافظه - برای اطلاعات بیشتر به استفاده از مدیر حافظه مراجعه کنید.

بازنشانی تنظیمات - همه تنظیمات را به حالت پیش فرض کارخانه بازنشانی کنید.

اطلاعات - برای مشاهده اطلاعات فنی GD510، راهنما را انتخاب کنید. شما می توانید نرم افزار را با استفاده از اطلاعات گوشی ارتقا دهید.

تغییر تنظیمات اتصال

تنظیمات اتصال گوشی از قبل توسط اپراتور شبکه شما انجام گرفته است بنابراین می توانید از گوشی جدید خود از همان ابتدا لذت ببرید. برای تغییر هر یک از تنظیمات، از این منو استفاده کنید. در زبانه تنظیمات، اتصال را لمس کنید.

حالت اتصال USB - خدمات داده ای را انتخاب کرده و گوشی GD510 خود را با استفاده از نرم افزار LG PC Suite همگام سازی کنید و فایل ها را از تلفن به رایانه کپی نمایید. برای اطلاعات بیشتر درباره همگام سازی، به همگام سازی رایانه مراجعه کنید.

اگر از همگام سازی موسیقی همراه با Windows Media Player استفاده می کنید، همگام سازی موسیقی را در این منو انتخاب کنید. همگام سازی موسیقی فقط برای محتوای موسیقی موجود است.

استفاده از مدیر حافظه

GD510 سه حافظه موجود دارد: تلفن، سیم کارت و کارت حافظه خارجی.

می توانید از مدیر حافظه برای تعیین نحوه استفاده از هر یک از حافظه ها و نیز آگاهی از فضای خالی موجود آن ها استفاده کنید.

در زبانه تنظیمات، تنظیمات تلفن و سپس اطلاعات حافظه را لمس کنید.

حافظه معمولی گوشی - حافظه موجود در GD510 برای تصاویر، صداها، فیلم ها، MMS، ایمیل، برنامه های Java و سایر موارد بررسی کنید.

حافظه ذخیره شده گوشی - حافظه موجود در گوشی را برای SMS، مخاطبین، تقویم، لیست کارها، یادداشت، هشدار، تاریخچه تماس، محل بایگ و موارد مختلف دیگر بررسی کنید.

حافظه سیم - حافظه موجود در سیم کارت را بررسی کنید.

حافظه خارجی - حافظه موجود در کارت حافظه خارجی را بررسی کنید (ممکن است لازم باشد این کارت حافظه را جداگانه خریداری کنید).

تنظیمات محل ذخیره اولیه - محلی را که ترجیح می دهید این موارد در آن ذخیره شود، شامل حافظه گوشی و حافظه خارجی انتخاب کنید.

ارسال و دریافت فایل ها از طریق بلوتوث

برای ارسال فایل:

1 فایلی که می خواهید ارسال نمایید را باز کنید. معمولاً این فایل عکس، فیلم یا موسیقی است.

2 ارسال را انتخاب کنید.

گزینه بلوتوث را انتخاب کنید.

3 اگر قبلاً دستگاه بلوتوث را مرتبط کرده اید، GD510 دیگر به طور خودکار دستگاه های

بلوتوث دیگر را جستجو نمی کند. در غیر اینصورت، GD510 به طور خودکار دستگاه های دیگری که بلوتوث آن ها فعال است و در همان محدوده قرار دارد را جستجو می کند.

4 دستگاه مورد نظر را برای ارسال فایل به آن انتخاب کنید.

5 فایل ارسال خواهد شد.


نکته! برای اطمینان از اینکه فایل ارسال می شود، نوار پیشرفته را بررسی کنید.

تنظیمات

برای دریافت فایل:

- 1 برای دریافت فایل ها، بلوتوث باید هم روشن و هم قابل رویت باشد. برای اطلاعات بیشتر به تغییر تنظیمات بلوتوث در زیر مراجعه کنید.
- 2 پیامی ظاهر می شود و از شما می خواهد که فایل را از ارسال کننده دریافت کنید. برای دریافت فایل، پله را انتخاب کنید.
- 3 محل ذخیره فایل را خواهید دید. برای فایل های تصویری، می توانید مشاهده فایل یا استفاده به عنوان تصویر زمینه را انتخاب کنید. فایل ها معمولاً در پوشه مربوطه واقع در موضوعات من ذخیره می شوند.

تغییر تنظیمات بلوتوث:

در زبانه تنظیمات، بلوتوث را لمس کنید.  و سپس تنظیمات را انتخاب کنید.

تغییراتی را در خصوص موارد زیر انجام دهید:

قابل رویت بودن دستگاه من - انتخاب کنید دستگاه شما قابل رویت، مخفی یا قابل رویت برای 1 دقیقه باشد.

نام دستگاه من - نامی را برای گوشی GD510 وارد کنید.

خدمات پشتیبانی شده - نحوه استفاده از بلوتوث در رابطه با خدمات مختلف را انتخاب کنید.

حالت سیم راه دور - روشن یا خاموش را انتخاب کنید.

آدرس من - آدرس بلوتوث خود را مشاهده کنید.

ارتباط با دستگاه بلوتوث دیگر

با ارتباط گوشی GD510 با یک دستگاه دیگر، می توانید یک اتصال حفاظت شده دارای رمز ورود ایجاد کنید.

1 بررسی کنید که بلوتوث روشن بوده و قابل رویت باشد. شما می توانید قابل رویت بودن دستگاه خود را در منوی تنظیمات تغییر دهید.

2 جستجو را لمس کنید.

3 گوشی GD510 دستگاه ها را جستجو می کند. پس از جستجو، نوسازی در صفحه ظاهر می شود.

4 دستگاهی که می خواهید گوشی را با آن مرتبط سازی کنید را انتخاب و کد ورود را وارد کنید. سپس تأیید را لمس کنید.

5 تلفن شما به دستگاه دیگر متصل می شود که برای آن باید کد ورود را وارد نمایید.

6 اکنون اتصال بلوتوث حفاظت شده با کد ورود آماده است.

استفاده از هدست بلوتوث

- 1 بررسی کنید که بلوتوث گوشی روشن بوده و قابل رویت باشد.
- 2 نحوه قرار دادن گوشی در حالت ارتباط را دنبال کرده و دستگاه ها را مرتبط کنید.
- 3 گزینه های قبل از اتصال سؤال شود یا همیشه وصل شود را لمس کرده و برای اتصال بله را لمس کنید. گوشی GD510 به طور خودکار به مشخصه هدست تغییر وضعیت خواهد داد.

ارتقای نرم افزار

برنامه ارتقای نرم افزار تلفن LG Mobile


برای اطلاعات بیشتر راجع به نصب و استفاده از این برنامه، لطفاً از <http://update.lgmobile.com> بازدید کنید. این برنامه به شما امکان می دهد نرم افزار خود را سریع و راحت از طریق اینترنت به جدیدترین نسخه ارتقا داده بدون اینکه نیازی به مرکز خدمات ما داشته باشید. از آنجاکه برنامه ارتقای نرم افزار موبایل به توجه کامل کاربر جهت روند ارتقا نیاز دارد، لطفاً قبل از هر کار، کلیه دستورالعمل ها و نکاتی که در هر مرحله ظاهر می شود را به دقت بررسی و اجرا کنید. لطفاً توجه داشته باشید که خارج کردن کابل ارتباطی داده های USB یا باتری ها در طول ارتقا ممکن است باعث آسیب شدید به تلفن موبایل شما شود. با توجه به این که سازنده این برنامه، هیچ مسئولیتی در قبال از دست دادن اطلاعات تلفن در حین عملیات ارتقا نمی پذیرد. توصیه می کنیم به منظور امنیت بیشتر، کلیه اطلاعات مهم را پیشاپیش بررسی کرده و یادداشت نمایید.

لوازم جانبی

این لوازم جانبی به همراه GD510 ارائه شده اند.



کابل داده ها



شارژر



سی دی



باتری



کیف کوچک



هدست
استریو

توجه:

- همیشه فقط از لوازم جانبی اصل LG استفاده کنید.
- عدم رعایت این اصل مهم ممکن است ضمانت نامه را از درجه اعتبار ساقط کند.
- لوازم جانبی ممکن است در نواحی مختلف متفاوت باشد؛ برای کسب اطلاعات بیشتر، لطفاً به شرکت یا نمایندگی خدمات ما در محل خود مراجعه کنید.

اطلاعات فنی

دماهای محیط

حداکثر: +55 درجه سانتی گراد (دشارژ).

+45 درجه سانتی گراد (شارژ)

حداقل: -10 درجه سانتی گراد

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tdl : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02. Sep. 2009

Signature of representative

دستورالعمل های استفاده ایمن و موثر

• میزان SAR توصیه شده توسط کمیسیون بین المللی محافظت در برابر تشعشعات غیر یونیزه (ICNIRP). برابر 2 وات بر کیلوگرم به طور متوسط در 10 گرم بافت بدن است.

• بالاترین مقدار SAR اندازه گیری شده توسط DASY4 برای این دستگاه هنگام استفاده کنار گوش 1.29 وات بر کیلوگرم (10 گرم) است و برای استفاده روی بدن 1.08 وات بر کیلوگرم (10 گرم) می باشد.

• اطلاعات داده ای SAR برای ساکنین کشورها/نواحی که میزان SAR توصیه شده توسط مؤسسه مهندسی برق و الکترونیک (IEEE) را پذیرفته اند. 1.6 وات بر کیلوگرم در 1 گرم بافت بدن است.

مراقبت و نگهداری از دستگاه



هشدار

فقط از باتری ها، شارژرها و تجهیزات جانبی که برای استفاده با این مدل خاص توصیه شده اند استفاده کنید. استفاده از سایر انواع تجهیزات، به غیر از انواع توصیه شده، ممکن است باعث باطل شدن ضمانت نامه شده و خطر آفرین باشد.

- از باز کردن این دستگاه اکیداً خودداری کنید. چنانچه گوشی نیاز به تعمیر داشته باشد، فقط به تکنسین های مجاز مراجعه کنید.
- گوشی را دور از وسایل برقی مانند تلویزیون، رادیو، و رایانه قرار دهید.

لطفاً دستورالعمل های زیر را به دقت مطالعه کنید. عدم رعایت این دستورالعمل ها ممکن است ضررهایی در پی داشته یا موجب نقض قوانین گردد.

قرار گرفتن در معرض انرژی فرکانس

رادیویی

اطلاعات مربوط به قرار گرفتن در معرض امواج رادیویی و میزان جذب ویژه (SAR). این گوشی تلفن همراه مدل GD510 به گونه ای طراحی شده است که تابع مقررات و شرایط لازم مربوط به قرار گرفتن در معرض امواج رادیویی باشد. این شرایط لازم مبتنی بر دستورالعمل های علمی است از جمله استفاده از لبه های ایمنی که به گونه ای طراحی شده اند که ایمنی کلیه افراد، صرفنظر از سن و وضع سلامتی آنها، را تضمین می کند.

• دستورالعمل های مربوط به قرار گرفتن در معرض امواج رادیویی از یک واحد اندازه گیری مخصوص تحت عنوان "ضریب جذب ویژه" یا SAR، استفاده می کنند. تست های SAR با استفاده از روش های استاندارد، و در حالی که گوشی در بالاترین میزان نیروی تولید شده در کلیه باندهای فرکانس قرار داشته، انجام گرفته است.

• اگرچه ممکن است تفاوت هایی بین سطوح SAR در مدل های مختلف گوشی های LG وجود داشته باشد، اما همه مدل ها به گونه ای طراحی شده اند که دستورالعمل های مربوط به قرار گرفتن در معرض امواج رادیویی در آنها رعایت شده باشد.

- دستگاه باید دور از منابع حرارتی مانند بخاری، اجاق و امثال آن نگه داری شود.
- مراقب باشید گوشی نیافتد.
- گوشی را در معرض لرزش یا تکان های شدید قرار ندهید.
- در مکان هایی که قوانین ویژه ای ایجاب می کند که تلفن همراه خود را خاموش نگه دارید. حتماً گوشی را خاموش کنید. مثلاً از کاربرد تلفن همراه در بیمارستان خودداری کنید. وگرنه ممکن است روی تجهیزات پزشکی حساس تأثیر بگذارد.
- هنگامی که باتری شارژ می شود، گوشی را در دست نگه ندارید. این کار می تواند باعث برق گرفتگی شده و شدیداً به تلفن آسیب برساند.
- از شارژ کردن گوشی در کنار مواد قابل اشتعال پرهیز کنید. زیرا ممکن است گوشی داغ شده و باعث آتش سوزی شود.
- از پارچه خشک برای تمیز کردن سطوح خارجی دستگاه استفاده کنید (از محلولهای پاک کننده مانند بنزین، تینر یا الکل استفاده نکنید).
- گوشی را هنگام شارژ روی اثاثیه نرم قرار ندهید.
- گوشی باید هنگام شارژ از تهویه کافی برخوردار باشد.
- از قرار دادن گوشی در معرض دود یا گرد و غبار غلیظ خودداری کنید.
- گوشی را درمجاورت کارت های اعتباری یا بلیط های حمل و نقل قرار ندهید. این کار ممکن است روی اطلاعات موجود در نوارهای مغناطیسی تأثیر بگذارد.

- با وسایل نوک تیز روی صفحه تلفن ضربه نزنید. این کار به تلفن آسیب می رساند.
- از قرار دادن گوشی در معرض مایعات یا رطوبت خودداری کنید.
- از لوازم جانبی مانند هدفون با احتیاط استفاده کنید. بی دلیل به آنتن تلفن دست نزنید.

استفاده بهینه از گوشی

ابزارهای الکترونیک

- همه تلفن های همراه ممکن است دچار تداخل هایی شوند که می تواند بر عملکرد آنها تأثیر بگذارد.
- بدون اجازه از مسئولین مربوطه، از تلفن همراه در مجاورت تجهیزات پزشکی استفاده نکنید. از قرار دادن تلفن همراه روی دستگاه تنظیم ضربان قلب مثلاً در جیب جلوی پیراهن، خودداری کنید.
- برخی از وسایل کمک شنوایی ممکن است در اثر مجاورت با تلفن های همراه دچار اختلال گردند.
- تداخل جزئی ممکن است روی تلویزیون، رادیو، رایانه ها و غیره تأثیر بگذارد.

ایمنی جاده

- هنگام رانندگی قوانین و مقررات مربوط به استفاده از تلفن همراه در نواحی مختلف را رعایت کنید.
- از به کار بردن گوشی های دستی در حین رانندگی خودداری کنید.
- همه حواس خود را به رانندگی بدهید.
- در صورت امکان، از یک کیت هندزفری استفاده کنید.

دستورالعمل های استفاده ایمن و موثر

قطعات شیشه ای

تعدادی از قطعات تلفن همراه از جنس شیشه می باشند. با افتادن تلفن همراه روی سطوح سخت یا وارد آمدن ضربه محکم به آن ممکن است قطعات شیشه ای بشکنند. اگر قطعات شیشه ای شکست به آن دست نزنید و سعی نکنید آن را خارج کنید. در این حالت از موبایل استفاده نکنید تا قطعات شکسته شده توسط مرکز خدماتی مجاز موبایل برای شما تعویض شود.

ناحیه انفجار

از کاربرد تلفن همراه در محل هایی که عملیات انفجار در حال انجام است خودداری کنید. محدودیت ها را رعایت کرده و از کلیه قوانین و مقررات پیروی کنید.

محیط هایی که احتمال انفجار در آنها

وجود دارد

- از به کار بردن تلفن همراه در محل های سوخت گیری خودداری کنید.
- از دستگاه در مجاورت مواد سوختی یا شیمیایی استفاده نکنید.
- از حمل یا انبار کردن گازها یا مایعات قابل اشتعال یا مواد منفجره در قسمتی از وسیله نقلیه که گوشی تلفن همراه یا لوازم جانبی آن قرار دارد خودداری کنید.

• چنانچه شرایط رانندگی ایجاب کند. قبل از تماس گرفتن یا پاسخ دادن به یک تماس در محل امنی پارک کنید.

• انرژی فرکانس رادیویی ممکن است بر برخی از سیستم های الکترونیک وسیله نقلیه شما مانند استریوهای خودرو و تجهیزات ایمنی آن تأثیر بگذارد.

• در صورتی که خودرو شما مجهز به کیسه هوا است. با تجهیزات نصب شده یا بی سیم قابل حمل. ممانعی بر سر راه آن قرار ندهید. زیرا ممکن است به دلیل عمل نکردن و یا عملکرد نادرست. آسیب های جدی ایجاد کند.

• اگر هنگام حرکت به موسیقی گوش می دهید. دقت کنید که صدا زیاد بلند نباشد تا بتوانید متوجه محیط اطراف خود نیز باشید. این نکته در کنار جاده ها و خیابان ها بسیار ضروری است.

صدا را آن قدر زیاد نکنید که به شنوایی

شما آسیب وارد کند.

اگر برای مدتی طولانی در معرض صدای بلند قرار بگیرید. ممکن است شنوایی شما آسیب بیند. بنابراین توصیه می کنیم از روشن یا خاموش کردن گوشی در کنار گوش خود اجتناب کنید. همچنین توصیه می کنیم میزان صدای موسیقی و نیز تماس ها به در یک سطح مناسب و منطقی تنظیم شود.

در هواپیما

دستگاه های بی سیم می توانند اختلالاتی را در سیستم های هواپیما ایجاد کنند.

- قبل از سوار شدن به هواپیما، تلفن همراه خود را خاموش کنید.
- هنگامی که هواپیما روی زمین است بدون کسب اجازه از کادر پرواز تلفن را روشن نکنید.

کودکان

تلفن را در مکانی امن دور از دسترس کودکان خردسال قرار دهید. در تلفن قطعات کوچکی وجود دارد که در صورت جدا شدن ممکن است توسط کودکان بلعیده شده و باعث خفگی شود.

تماس های اضطراری

ممکن است امکان برقراری تماس های اضطراری در همه شبکه های تلفن همراه موجود نباشد. بنابراین، هرگز نباید در خصوص تماس های اضطراری فقط به تلفن همراه خود اتکا کنید. برای اطلاعات بیشتر با شبکه مخابراتی خود تماس بگیرید.

اطلاعات باتری و مراقبت از آن

- لازم نیست شارژ باتری کاملاً خالی شود تا آن را مجدداً شارژ کنید. برخلاف سایر سیستم های باتری، هیچ تأثیر حافظه ای وجود ندارد که بتواند به عملکرد باتری صدمه وارد کند.
- فقط از باتری ها و شارژرهای LG استفاده کنید. شارژرهای LG به گونه ای طراحی شده اند که عمر باتری را به حداکثر برسانند.

• از باز کردن یا ایجاد مدار اتصال کوتاه در باتری خودداری کنید.

• سطوح اتصال فلزی باتری را تمیز نگه دارید.

• زمانی که دیگر باتری عملکرد مطلوبی ندارد، آن را تعویض کنید. باتری را می توان صدها بار شارژ کرد تا زمانی که نیاز به تعویض داشته باشد.

• اگر باتری برای مدت زیادی مورد استفاده قرار نگرفته باشد، آن را مجدداً شارژ کنید تا عمر مفید آن افزایش یابد.

• از قرار دادن باتری در معرض نور مستقیم خورشید و یا استفاده از آن در محیط های بسیار مرطوب مانند حمام و امثال آن خودداری کنید.

• باتری را در مکان های بسیار گرم یا سرد رها نکنید. این کار ممکن است بر عملکرد باتری تأثیر نامطلوب داشته باشد.

• تعویض باتری گوشی با باتری نامناسب می تواند خطر انفجار گوشی را در پی داشته باشد.

• باتری های مستعمل را طبق دستورالعمل های ارائه شده توسط کارخانه سازنده دور بیندازید. لطفاً در صورت امکان آنها را بازیافت نمایید. آنها را همراه با زباله های خانگی دور نیندازید.

• اگر لازم است باتری را تعویض کنید، برای کمک آن را به نزدیکترین مرکز فروش یا مرکز خدمات مجاز LG Electronics ببرید.

• همیشه بعد از شارژ شدن کامل تلفن، به منظور صرفه جویی در مصرف نیروی شارژر، آن را از پریز بکشید.

• طول عمر واقعی باتری به پیکربندی شبکه، تنظیمات محصول، الگوهای استفاده، باتری و شرایط محیطی دارد.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GD510 User Guide

Congratulations on your purchase of the advanced and compact GD510 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Getting to know your phone	6	Contacts.....	23
Open view	7	Searching for a contact.....	23
Installing the SIM and battery	8	Adding a new contact.....	23
Charging your phone.....	9	Creating a group	23
Memory card.....	10	Changing your contact settings.....	24
Menu map.....	11	Viewing information.....	24
Using your touch screen.....	12	Messaging.....	25
Touch screen tips	12	Sending a message	25
Control the touch screen	12	Entering text.....	25
Your home screen	13	T9 mode	25
The quick keys.....	14	Handwriting recognition	26
The status bar.....	15	Setting up your email.....	26
ATMT	17	Retrieving your emails	26
Anti-theft mobile tracker[ATMT]	17	Sending an email using your new account.....	26
Calls	18	Changing your email settings	26
Making a call.....	18	Message folders.....	27
Making a call from your contacts... ..	18	Changing your text message settings.....	27
Answering and rejecting a call.....	18	Changing your multimedia message settings.....	28
In-call options	19	Changing your other settings	28
Speed dialling	20	Camera	29
Making a second call	20	Getting to know the viewfinder	29
Viewing your call logs	20	Taking a quick photo	30
Using call divert.....	21	After taking a photo.....	30
Using call barring.....	21	Using the advanced settings	31
Changing the common call setting.....	22		

Contents

Video camera	32	Documents	40
Getting to know the viewfinder	32	Transferring a file to your phone....	40
Making a quick video	33	Others	40
After making a video	33	MuVee studio	40
Using the advanced settings.....	34	Creating a movie.....	40
Your photos and videos	35	Music	41
Viewing your photos and videos ...	35	Transferring music onto your	
Capturing an image from a video..	35	phone.....	41
Viewing your photos as a slide		Playing a song.....	41
show	35	Creating a playlist	42
Setting a photo as wallpaper.....	36	FM Radio	42
Editing your photos	36	Searching for stations	42
Adding an effect to a photo.....	37	Resetting channels.....	42
Multimedia.....	38	Organiser	43
Pictures	38	Adding an event to your calendar.	43
Sending a photo.....	38	Adding an item to your to do list...	43
Using an image.....	38	Using date finder	43
Printing an image	38	Adding a memo.....	44
Moving or copying an image	39	Setting your alarm.....	44
Sounds.....	39	Adding a memo with the drawing	
Using a sound	39	panel	44
Videos	39	Voice recorder	45
Watching a video	39	Recording a sound or voice	45
Sending a video clip	39	Using your calculator	45
Games & Apps	39	Converting a unit	45
Playing a game	40	Adding a city to your World clock..	46
		Using the stopwatch	46

Getting to know the Eco tree	46	Settings.....	52
Getting to know the Eco calculator	46	Personalising your profiles	52
PC Sync.....	47	Changing your screen settings	52
Installing LG PC Suite on your computer	47	Changing your phone settings	52
Connecting your phone and PC.....	47	Changing your connectivity settings.....	53
Backing up and restoring the information on your phone	47	Using memory manager	54
Viewing phone files on your PC.....	47	Sending and receiving your files using Bluetooth.....	54
Synchronising your contacts	48	Changing your Bluetooth settings:.....	55
Synchronising your messages	48	Pairing with another Bluetooth device.....	55
Using your phone as a Music Sync device	48	Using a Bluetooth headset.....	56
The web	49	Software Upgrade	56
Accessing the web	49	Accessories	57
Adding and accessing your bookmarks	49	Technical data.....	58
Using RSS reader	49	Guidelines for safe and efficient use..	59
Saving a page	50		
Accessing a saved page	50		
Viewing your browser history	50		
Changing the web browser settings.....	50		
Using your phone as a modem.....	50		

Getting to know your phone




Smart key

- Accepts and ends a call.
- Goes to home screen directly.



Power/Lock key


- Long press for power on/off.
- Short press to turn on/off the screen.

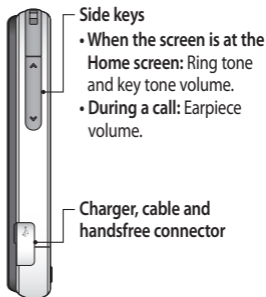

Side keys

- When the screen is at the Home screen: Ring tone and key tone volume.
- During a call: Earpiece volume.

Charger, cable and handsfree connector

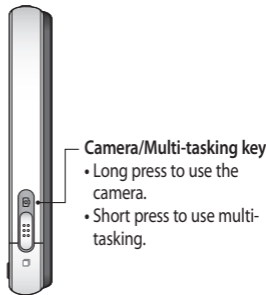


Camera/Multi-tasking key

- Long press to use the camera.
- Short press to use multi-tasking.

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Open view

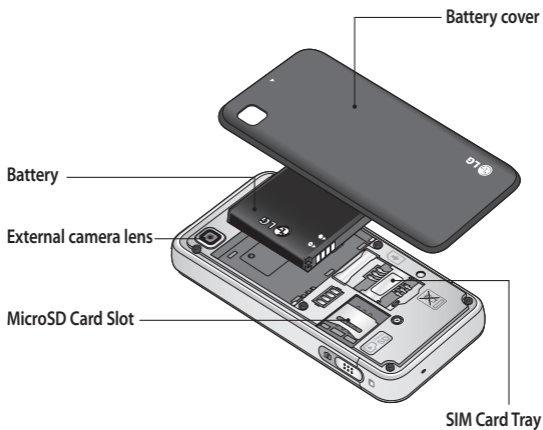

Installing the SIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.




⚠ WARNING: Do not use your fingernail to remove the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Install the SIM card


Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

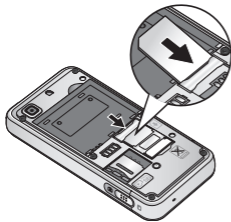

3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.

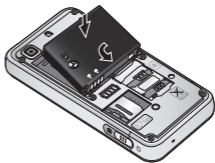

Charging your phone

Remove the charger socket cover on the side of your GD510. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GD510 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Solar cell battery cover is available and sold separately. Please contact the shop where you purchased the phone.

www.lgmobile.com

* It may not be available in all shops based upon availability.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Remove the battery cover.
- 2 Push the microSD card slot to release lock.
- 3 Flip up the slot.

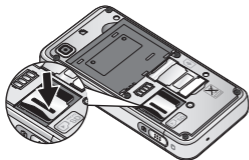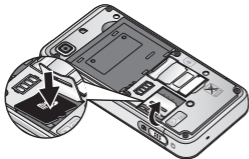


- 4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.

- 5 Flip down then push the slot to lock.
- 6 Replace the cover.


Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.









NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Menu map









Touch  in the Home screen to open a **Top menu**. From here you can access further menus by scrolling through the icons:

COMMUNICATION, ENTERTAINMENT, UTILITIES and SETTINGS.









COMMUNICATION

-  Contacts
-  Recent history
-  Messaging
-  E-mail
-  Dialling
-  Contact search
-  Speed dials
-  New message









ENTERTAINMENT

-  Camera
-  Gallery
-  My stuff
-  Music
-  Games & Apps
-  FM radio
-  Video camera
-  Muvvee studio

UTILITIES

-  Browser
-  Google search
-  Alarms
-  Organiser
-  Memo
-  Voice recorder
-  Tools
-  Drawing panel

SETTINGS

-  Profiles
-  Screen settings
-  Phone settings
-  Call settings
-  Bluetooth
-  Touch settings
-  Connectivity
-  Message settings

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD510 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the GD510 touch screen change dynamically depending on the task you are carrying out.



Opening Applications

To open any application, simply touch its icon.

Scrolling


Drag from side to side to scroll.

On some screens, such as the Recent History list, you can also scroll up or down.

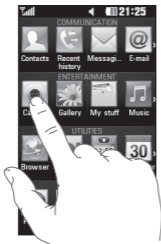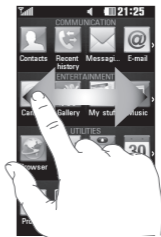

Your home screen

You can drag and click what you need right away in all home screen types.

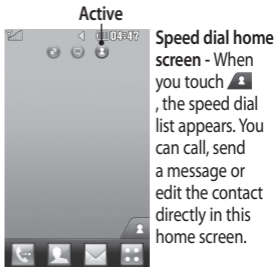

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

Your home screen

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.





























Touch to open the full **Top menu** which is divided into four categories.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	Solar cell cover is attached (Gray Sun)
	Solar cell charging is in use (Orange Sun)
	New text message
	New voice message
	Message inbox is full
	Message sending failed


Icon	Description
	Multimedia message sending failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use


Your home screen

Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.

Using the Multi-tasking function

Press the multi-tasking hard key  to open the Multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

ATMT

Anti-theft mobile tracker[ATMT]



- 1 The ATMT function provides you with the ability to have a tracking system in place for your phone incase you lose or misplace it.
- 2 When an unauthorized person uses your phone, a SMS is triggered from your phone and the message is sent to your pre-defined phone number.
- 3 You can set the ATMT function by the following steps:
 - Find **SETTINGS** tab from the main menu, then select **Phone settings**, and then select **Security**.
 - Select **Anti-theft mobile tracker**
 - Set ATMT and select ON
 - Enter default ATMT code


NOTE:

- In case you want to use your phone with some other SIM card, make sure to set the ATMT OFF.
- It is recommended to enter the Number for ATMT with the country code(e.g. for INDIA +91 followed by phone number)
- Default ATMT code is "000000".

Calls



Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the Smart key.

TIP! To enter + for making an international call, press and hold .


TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts


- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call


When your phone rings, touch the Smart key to answer the call.


To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.

In-call options

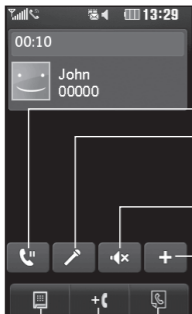



Hold - Touch  to put a call on hold.


Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn the speaker phone on.

Options - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.





Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch **Recent history** in the **COMMUNICATION** tab.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
 - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Contacts

Searching for a contact

There are two ways to search for a contact:

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field will jump the menu to that alphabetical area of the list.


TIP! The alphabetical keypad is displayed once you tap the **Name** field.

Adding a new contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager** and **Fax**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

Contacts

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Settings**.
- 2 From here, you can adjust the following settings:

Contact list settings - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.

Copy - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to.

Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Performs a backup your contacts on to the external memory. This option requires external memory.

Restore contacts - Restores your contacts from the external memory. This option requires external memory.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My business card**.

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.


Messaging

Messaging

Your GD510 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message


- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


Entering text


There are five ways to enter text:

Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Messaging


Handwriting recognition

In Handwriting mode you simply write on the screen and your GD510 will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

Setting up your email

Touch **E-mail** in the COMMUNICATION tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch the account you want to use .

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts Preferred e-mail

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GD510 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply

- Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Switch this feature **ON** and create an email signature.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Messaging

Send long text as - Choose to send long messages as **Multiple SMS** or as an MMS.

Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**.

If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.


Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.


Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Camera

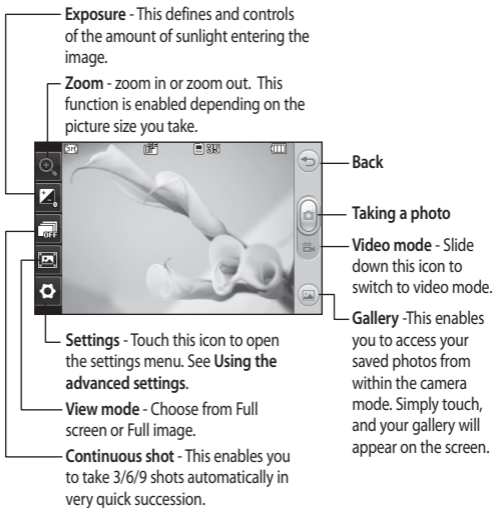


Getting to know the viewfinder



TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Camera






Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen image.
-  Touch to edit the photo.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to move to your gallery.



Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the six numerical options: **3M (2048x1536)**, **2M (1600x1200)**, **1M (1280x960)**, **VGA (640x480)**, **Home screen (WQVGA)**, **QVGA (320x240)**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

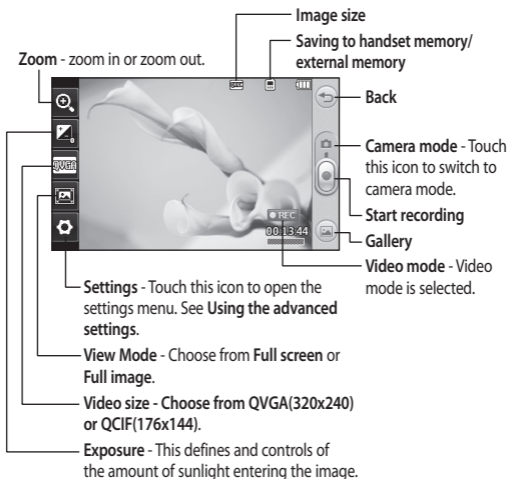







TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Making a quick video







- 1 Press the camera key on the right side of the phone for a few seconds.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides.

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth** or **YouTube**.
-  Touch to edit the video.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
- Touch  to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.

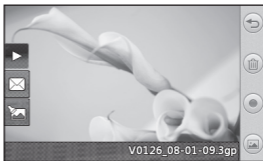

Video camera

Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Colour Effect - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

Quality - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Memory - Choose whether to save your videos to the Handset memory or to the External memory.




Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.





Your photos and videos

Viewing your photos and videos


- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video


- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.
- 5 Touch  to return to the video.

- 6 The image will be saved in your **My stuff** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.

There are options within slideshows:

Touch  to go back.



 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.


 Touch to increase or decrease the speed of the slideshow.


Your photos and videos


Setting a photo as wallpaper


- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.


Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:

 Move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.


 Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



Adding an effect to a photo

1 From the editing screen, touch



2 Choose to apply any of the options to the photo:

Face beautify - Automatically detect a face in the image and brighten it up.


Tunnel effect - Lomo camera effect.

Colour negative - Colour negative effect.

Black and white - Black and white colour effect.

Sepia - Give a Sepia effect.

Blur - Give a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Give an Oil painting effect.

Sketch - Apply an effect that makes the picture look like a sketch.

Emboss - Give an Emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - Give an effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - Give an old-looking effect.

Glow - Give a light beam effect.

Cartoon - Give a cartoon effect.

Water color - Give a watercolour effect.

3 To undo an effect simply touch

Undo  .

Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

Pictures


Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo


- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message**, **Email**, **Bluetooth** and **Blogger**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.
 - Shut down image** - Set an image to appear when you switch the phone off.


Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want and a confirmation message appears.
- 3 Touch **Yes**. It will begin to play.

- 4 Touch  and select **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.


Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  then **Send** and choose from **Message**, **Email**, **Bluetooth** and **YouTube**.

Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time.

You can also access this using the menu **Games & Apps** in the ENTERTAINMENT tab.

Multimedia

Playing a game

- 1 Touch **Games & Apps** in the ENTERTAINMENT tab.
- 2 Select **Games**, then choose a game to launch.

Documents

From the **Documents** menu in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in **My folder** as a default, the second tab in **My stuff**. You may overlook the file if the folder is full.





Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

Muvee studio

You can create a music video.

Creating a movie

- 1 Scroll and touch **Muvee studio** in the ENTERTAINMENT tab.
- 2 Touch  to add an image. Tap the checkbox for the images you want to include, then select **Insert**.
- 3 Touch the style tab to choose a Muvee style. The default style is **Classic Sepia**.
- 4 Touch **Default sound** to change the sound.
- 5 Touch  to see what you've created.
- 6 Touch  then **Play order** to create an order. You can make it random or sequential.
- 7 Touch  then **Save Location** to choose where to save the movie.

Music

Your LG GD510 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.



Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.



You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.

Multimedia

- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

FM Radio

Your LG GD510 has an FM radio feature so you can tune into your favourite stations to listen on the move.


NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that





42 you plug your charger into).

Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


NOTE: You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your to do list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.


- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Organiser

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

Setting your alarm


- 1 Touch **Alarms** in the UTILITIES tab.
Widget alarm should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box:
Not repeated, Daily, Mon ~ Fri, Mon ~ Sat, Sat ~ Sun, Sat~Wed, Sat~Thu, Sun~Thu, Except holiday or **Choose weekday**.
The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.


TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding a memo with the drawing panel

- 1 Scroll and touch **Drawing Panel** in the UTILITIES tab .
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Drawing Panel** application.

Voice recorder

Use your voice recorder to record voice memos or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration – Set the recording duration. Choose from **No limit**, **MMS msg. size** or **1 min.**


Quality – Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use – Select where to save the audio files. Choose between **External memory** and **Handset memory**.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

Using your calculator



- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Organiser

Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **Add city**.
- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.

Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Getting to know the Eco tree

Eco trees are accumulated by charging solar cell. Each tree represents the decreased carbon emissions. You can plant more trees by using more solar energy.

Getting to know the Eco calculator


You can count the total amount of decreasing carbon emissions by charging the solar cell.

TIP! If solar cell is attached to the GD510, Eco tree and Eco calculator are displayed under Tools menu in the UTILITIES tab.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click to start a backup or began to recover.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Manage Files** icon.
- 3 All the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the right side of the screen.

PC Sync

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Manage Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your SIM card and handset.
- 4 Click on **File** and select **Save**. You can now select the target and where you want to save your contacts to.

NOTE: To backup contacts saved to your SIM card, click on the SIM card folder on the left side of your PC screen.

Right-click your contacts and then **Select All**.


Right-click at the same position and select **Copy to Phone Memory**. Now click on the handset folder on the left side of the screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Click the title of the columns to rearrange messages sorted by **Sender, Contents and Received date**.

Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the Home screen select , then select **Connectivity** on the **SETTINGS** tab.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

The web

Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.


- 5 To access the bookmark simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

The web

Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page

Touch **Browser** in the UTILITIES tab. And select **Saved pages**. You can view the saved pages here.

Viewing your browser history

Touch **Browser** in the UTILITIES tab. And select **History**.

Changing the web browser settings

Touch **Browser** in the UTILITIES tab. And select **Settings**.

You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings.

Using your phone as a modem

Your GD510 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GD510 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **New** button and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD510.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GD510.
- 2 Pair your PC and GD510 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GD510.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the SETTINGS tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in SETTINGS tab.

Screen settings

Wallpaper - Choose the theme for your home screen or lock screen.

Livesquare - Touch **Livesquare guide** to check its functions.

Top menu - Choose the style of the top menu, choose either **Zigzag** or **Scrolling**.

Handset theme - Choose the theme for menus. You can also adjust the font size and style.

Dialling - Adjust the number colour.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your GD510 works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Languages - Change the language of your GD510's display.

Motion silent - Make the GD510 go into the mute or snooze settings by flipping it over when it is ringing.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Information - Select **Help** to view the technical information for your GD510. And you can upgrade software with **Handset information**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch **Connectivity** in the **SETTINGS** tab.

Network settings

Select network - If you select **Automatic**, the GD510 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a Data service from the options and synchronise your GD510 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

Settings

Using memory manager

Your GD510 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GD510 for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD510 will not automatically search for other **Bluetooth** devices. If not, your GD510 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.


TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GD510.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GD510 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GD510 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Settings

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GD510 will automatically switch to Headset profile.

communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data

Accessories

These accessories are supplied with the GD510.

Charger



Data cable



Battery



CD



Stereo headset



Pouch



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, Fax : +31-36-547-8794
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02, Sep, 2009


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD510 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on

Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.29 W/kg (10 g) and when worn on the body is 1.08 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

Guidelines for safe and efficient use

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.

Guidelines for safe and efficient use

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable

performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

