



GD350

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

CE 0168
www.lg.com

P/N : MMBB0366920 (1.0) W

GD350

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



CE 0168
www.lg.com

P/N : MMBB0366920 (1.0) W

Bluetooth QD ID B016112


GD350 User Guide — English



This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone

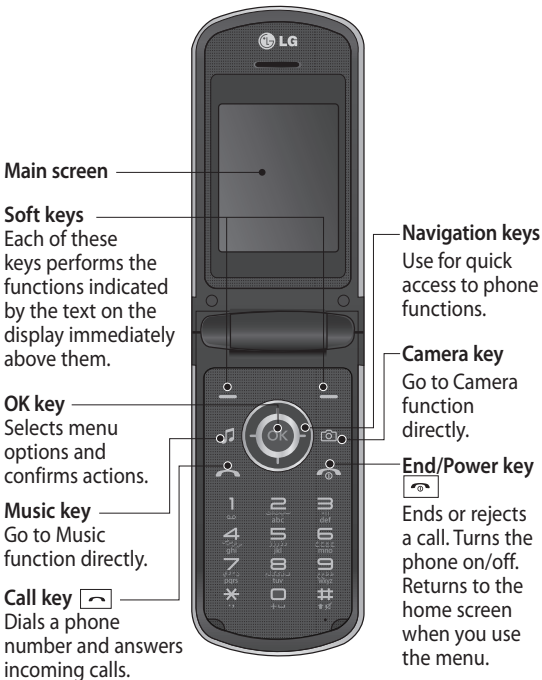

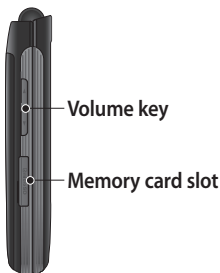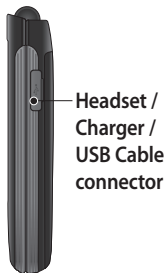

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut.

To remove the memory card, gently push it as shown in the diagram.



Note: A memory card is an optional accessory.

Formatting the memory card

From your home screen, press **Menu** and select **Settings**. Choose **Memory Info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The SIM card can be easily damaged by scratches or bending, so be careful when

handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu map

1. Messaging

- 1.1 Create message
- 1.2 Inbox
- 1.3 My mailbox
- 1.4 Drafts
- 1.5 Outbox
- 1.6 Sent items
- 1.7 Saved items
- 1.8 Emoticons
- 1.9 Message settings

2. Contacts

- 2.1 Names
- 2.2 Settings
- 2.3 Groups
- 2.4 Speed dials
- 2.5 Service dial numbers
- 2.6 Own number
- 2.7 My business card

3. Call log

- 3.1 Call log
- 3.2 Missed calls
- 3.3 Received calls
- 3.4 Dialed numbers
- 3.5 Call duration
- 3.6 Packet data counter
- 3.7 Call costs

4. Settings

- 4.1 Profiles
- 4.2 Display
- 4.3 Date and time
- 4.4 Connectivity
- 4.5 Call
- 4.6 Phone
- 4.7 Network
- 4.8 Internet profiles
- 4.9 Access points
- 4.10 Packet data conn.

4.11 Security

- 4.12 Memory info.
- 4.13 Restore factory settings

5. Gallery

- 5.1 My memory card
- 5.2 My images
- 5.3 My sounds
- 5.4 My videos
- 5.5 My games & apps
- 5.6 Others

Menu map

6. Media

- 6.1 Camera
- 6.2 Video
- 6.3 Music
- 6.4 FM radio
- 6.5 Voice recorder
- 6.6 Ringtone creator

7. Organiser

- 7.1 Alarm clock
- 7.2 Calendar
- 7.3 To-do list
- 7.4 Notes
- 7.5 Secret notes
- 7.6 Cash Book
- 7.7 BMI Calculator
- 7.8 Calculator
- 7.9 Stopwatch
- 7.10 Date finder
- 7.11 Converter
- 7.12 World time
- 7.13 Go to
- 7.14 SIM Services
- 7.15 Settings

8. Applications



- 8.1 My games & apps
- 8.2 Settings

9. Web

- 9.1 Home
- 9.2 Bookmarks
- 9.3 Last web address
- 9.4 Settings
- 9.5 Go to address
- 9.6 Saved pages

Calls


Making a call

- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .


TIP! To enter + when making an international call, press and hold **0**.

TIP! To control the volume during a call, press volume key.


Making a call from your contacts

- 1 Select **Names** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, "O".
- 3 Select **Make call** from **Options** or press  to initiate the call.


Answering and rejecting a call


When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and you can not change it.

Viewing your call logs

Press **Menu** and select **Call log**, then choose **Call log**.

You can check the call record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

Call divert - Choose whether to divert your calls.

Call barring - Select when you would like calls to be barred.

Fixed dial numbers - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Call waiting - Be alerted when you have a call waiting. (Depends on your network provider.)

Call reject - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

Send my number - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

Auto redial - Allows you to set the auto redial function when a call attempt has failed.

Answer mode - Allows you to set the answering method. You can choose from **Press send key**, **Open flip** or **Press any key**.

Free Call Time Tracker - Choose whether to show your free call time or not.

Minute minder - Determines whether to sound a tone when you are on the phone as per the set time.

BT answer mode - Choose how to answer a call when using a Bluetooth headset. Set **Hands-free** or **Handset**.

Save new number - Choose **Yes** or **No**.

Contacts


Searching for a contact

- 1 Select **Names** from the home screen.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Names**. Press **Options** and **Add new contact**.
- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter the number and select **Options** then choose **Save**.

Note: If you add more information, press **Options** and choose **Add detail** then select options you want.

Note: When you are storing a contact's e-mail address, press  key and select a symbol @ then **OK**.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family, Friends, Colleague, School** and **VIP** already set up on the phone.

Messaging

Your GD350 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), e-mail as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts. You can even add multiple contacts by selecting **Add recipient**.

Note: Message can be sent to a group also. Edit the message then press send and select contact group and select the group you want.

- 5 Enter your message.
- 6 Select **Options** and choose **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Schedule**, **Business card**, **Note**, **Text field**, **To do**, or a **Text template**.
- 7 Press **Send**.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Message settings > Text message**, and choose **Send long text as**.

WARNING: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

Using the T9 Mode

- 1 When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.
 - If the word is still incorrect after typing completely, press the key once or more to cycle through the other word options.
 - If the desired word is missing from the word choices list, add it by using the Abc mode.
- 2 Enter the whole word before editing or deleting any keystrokes.
 - To delete letters, press the CLR.
 - Complete each word with a space by pressing the key.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Setting up your e-mail

You can stay in touch on the move using e-mail on your GD350. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.

- 3 Press **Add** and follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** and your e-mail will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your GD350 is fairly self explanatory.

Create message - Allows you to create new message.

Inbox - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

My mailbox - All your e-mails you receive are placed into **My mailbox**.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Sent items - Copies of all the messages you send are kept into your **Sent items**.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Message settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Camera

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press **OK** key to take a photo.

Video camera

Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press **OK** key to start recording.
- 4 REC will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your GD350 has a built-in music player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select **||** to pause the song.
- 4 Select **▶▶** to skip to the next song.
- 5 Select **◀◀** to skip to the previous song.
- 6 Select **Back** to stop the music and return to the music player menu.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law

prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your GD350 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Yes**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording the Radio

- 1 Press **OK** key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press **OK** key. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press **OK** key to begin recording.
- 3 Choose **OK** key to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

Ringtone creator

Creating your ringtone

- 1 Press **Menu** and select **Media**, then choose **Ringtone creator**.
- 2 Select the music what you would like to use in music lists, and then select **OK** key.

- 3 Select **Cut** when you want to start recoding music to use as a Ringtone while playing music.
- 4 Select **Stop** to stop.
- 5 Select **Save** and choose from **Original file** or **New file**. Then select **Save**.

Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Applications

Your GD350 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Applications**. Choose **My games & apps**.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Organiser

Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes (Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Using cash book (Menu > Organiser > Cash Book)

Cash book is a simple accounting book that is used to record basic information about cash receipts and payments. It provides you an easy way of keeping up with how much money is coming in and what bills are getting paid.

Calculating your BMI (Menu > Organiser > BMI Calculator)

BMI (Body Mass Index) is a measure of body fat based on height and weight.

To calculate your BMI, press **Edit** and choose gender, enter your weight and height. Then select **Done**.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Using the stopwatch (Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Date finder (Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Converting a unit (Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Go to (Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services (Menu > Organiser > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Web

Accessing the wap browser

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

1 Press **Menu** and select **Web**.

2 To access the wap browser homepage directly, select **Home**. Alternately, select **Go to** address and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date and time)

You can set functions relating to the date and time.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

Bluetooth - Set up your GD350 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

USB connection mode - You can select the USB connection mode on your phone for several uses.

- **Mass storage:** Select this and connect the handset to your computer and drag and drop files to the GD350 removable device folder.
- **PC Suite:** Select this and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

Note: To use the USB mass storage function, you will need to insert an external memory card in your phone.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** and select **Settings**.
Make your changes to:

My phone's visibility

- Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.

My phone's name - Enter a name for your LG GD350.

Supported services - Shows what it supports.

My address - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My phone's visibility**, then **Visible**.
- 2 Select **Active device** from the **Bluetooth** menu.
- 3 Your GD350 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.

- 4 Choose the device you want to pair with, then handset create passcode by default everytime you connect.
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

Installing LG PC Suite on your computer

- 1 Go to www.lgmobile.com and choose your region first and then your country.
- 2 Choose Products menu, select Manual & Software and click Go to Manual & S/W download section to download.
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.

- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Changing your other settings

Network - Select network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Internet profile - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

Access points - This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

Packet data conn. - If you select "When available", your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Changing your phone settings (Menu > Settings > Phone)

Enjoy the freedom of adapting how your GD350 works for your own style.

My Navi Key - You can change the shortcuts of 4 navigation keys.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Power save - Choose to switch the power save settings **Auto**, **Always on** or **Off**. If you set **Always on**, you can save the battery power.

Information - View the technical information for your GD350.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GD350 and the important information it holds protected.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Handset lock - Choose to lock your handset.

Lock if SIM is changed - If you activate this option, your phone will request a security code when you change your SIM card.

Anti-theft mobile tracker

- When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the Sending number list with name, primary number and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

Change codes - Change your **PIN code** (This menu item will appear if PIN code request is set to On), **PIN2 code**, **Security code** or **Anti-theft code**.

Application lock - Choose the menu to lock from the list.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Guidelines for Safe and Efficient Use

Exposure to Radio Frequency Energy

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This GD350 mobile phone model has been designed to comply with the applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. SAR tests are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels for various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this phone model tested by DAS4 for use close to the ear is 0.955 W/kg (10 g), and when worn on the body is 0.686 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

Guidelines for Safe and Efficient Use (Continued)

Product Care and Maintenance



WARNING: Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient Phone Operation

Electronic Devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might experience disturbance due to mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road Safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

Guidelines for Safe and Efficient Use (Continued)

- Do not use a hand-held phone while driving.
- Give your full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, do not obstruct it with installed or portable wireless equipment. This may cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting Area

Do not use the phone where blasting is in progress.

Observe restrictions, and follow the rules and regulations.

Potentially Explosive Atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In Aircraft

Wireless devices can cause interference to aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

Emergency Calls

Emergency calls may not be available under all mobile networks. You should therefore never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for Safe and Efficient Use (Continued)

Battery Information and Care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of batteries in the household waste.

- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Bluetooth QD ID B016112

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Issued Date


Seung Hyoun, Ji / Director

12. Nov. 2009

Signature of representative


















Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD350

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31-36-547-8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

12. Nov. 2009

Signature of representative

- استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة.
- يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، وإعدادات المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ)

+45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية

Bluetooth QD ID B016112

إرشادات لاستخدام آمن وفعال (تتمة)

مناطق التفجير

الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال.
فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع القوانين والأنظمة.

مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. راجع موثر الخدمة المحلي لديك لمزيد من المعلومات.

معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها.
- وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله في الطائرة من دون الحصول على إذن من قبل الطاقم.

تشغيل فَعَال للهاتف

الأجهزة الإلكترونية

- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض، أي الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون، والراديو، والكمبيوتر الشخصي.

السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.

- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

تجنّب إلحاق الضرر بسمعك

- قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك. كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.


إرشادات لاستخدام آمن وفعال (تنمة)

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- قد تتضمن الإصلاحات المشمولة بالضمان، وفقاً لـ LG ، لوحات أو قطع الغيار سواء أكانت جديدة أو مجددة على أن تتميز بوظائف موازية لوظائف الأجزاء التي تم استبدالها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك.
- على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو
- إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

إرشادات لاستخدام آمن وفعال

- حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كغ وهو حد مقسم على نحو متناسب إلى 10 غرامات من النسيج.
- أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASY4 للاستخدام على الأذن تعادل 0.955 واط/كيلوجرام (10 غرام) وعند الحمل على الجسد تكون 0.686 واط/كيلوجرام (10 غرام).
- معلومات بيانات SAR للمقيمين في بلدان/مناطق تتبنى حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل غرام واحد (1) من النسيج.

العناية بالمنتج وصيانتة

 **تحذير:** استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول، وقد يكون خطيراً.

التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR)

لقد تم تصميم طراز الهاتف المحمول GD350 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. تستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل المستخدمين، من دون أخذ العمر والصحة بالاعتبار.

- تستخدم إرشادات التباين للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.

- وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تفي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.

إعادة ضبط اعدادات الهاتف (القائمة < الإعدادات < استعادة ضبط المصنع)

استخدم استعادة ضبط المصنع لإعادة تعيين كل الإعدادات وفق تعريفاتها المحددة من قبل الشركة المصنعة. ومن أجل تنشيط هذه الوظيفة تحتاج إلى رمز الحماية. تم تعيين رمز الحماية الافتراضي إلى "0000".

تغيير الرموز - قم بتغيير رمز PIN (يظهر عنصر القائمة هذا إذا تم تشغيل طلب رمز PIN)، أو رمز PIN2، أو رمز الحماية أو رمز مكافحة السرقة.

عرض حالة الذاكرة (القائمة < الإعدادات < معلومات الذاكرة)

يمكنك استخدام إدارة الذاكرة لتحديد كيفية استخدام الذاكرة وكمية المساحة المتوفرة: عادية، ومحجوزة، وبطاقة SIM وذاكرة خارجية. كما يمكنك أيضاً تعيين التخزين الأساسي عند إدخال بطاقة الذاكرة.

تغيير إعدادات الهاتف

(القائمة < الإعدادات < الهاتف)

تتمتع بحرية تكييف كيفية عمل GD350 مع أسلوبك الخاص.

مفتاح التنقل الخاص بي - يمكنك تغيير اختصارات 4 مفاتيح تنقل.

اللغة - يمكنك تغيير لغة النصوص التي تظهر على شاشة الهاتف. وسيؤثر هذا التغيير أيضاً على وضع إدخال اللغة.

توفير التشغيل - اختر أحد إعدادات

توفير التشغيل التالية: **تلقائي**، أو **تشغيل دائم** أو **إيقاف التشغيل**. إذا قمت بتعيين

تشغيل دائم، فيمكنك توفير التشغيل.

المعلومات - عرض معلومات GD350 الفنية.

تغيير إعدادات الحماية

(القائمة < الإعدادات < الحماية)

قم بتغيير إعدادات الحماية لحماية الهاتف GD350 والمعلومات الهامة التي يحتوي عليها.

طلب رمز PIN - اختر رمز PIN الذي يجب طلبه عند تشغيل هاتفك.

قفل الهاتف - اختر إقفال الهاتف.

قفل في حال تغيير SIM - إذا قمت

بتنشيط هذا الخيار، فسيطالب الهاتف

برمز حماية عندما تقوم بتغيير بطاقة SIM.

جهاز التتبع الخاص بمكافحة سرقة

المحمول - عند سرقة الهاتف، يرسل

الهاتف رسالة نصية (SMS) إلى

الأرقام المحددة من قبل المالك الحقيقي.

لتنشيط ميزة **ATMT**، يتوجب عليك

تعيين تشغيل **ATMT** وتكوين قائمة

أرقام الإرسال عبر إدخال الاسم

ورقم الهاتف الأساسي ورقم الهاتف

الثانوي. رمز **ATMT** الافتراضي هو "0000".

ستحتوي رسالة **ATMT** على معلومات

حول الهاتف المسروق **IMEI**، وموقعه

(تم التقاطه بفضل رسالة بث خلوي)

ورقم هاتف الشخص الذي يستخدم

الهاتف.

تغيير الإعدادات الأخرى

الشبكة - حدد إعدادات وضع الشبكة باستخدام هذه القائمة. كما يمكنك إضافة الشبكة المفضلة التي تريد الاتصال بها إلى القوائم المفضلة.

وضع إنترنت - تظهر هذه القائمة أوضاع إنترنت. يمكنك إنشاء أوضاع جديدة، أو حذفها أو تعديلها باستخدام قائمة الخيارات. ولكن، لا يمكنك حذف التكوينات الافتراضية أو تعديلها.

نقاط الوصول - تظهر هذه القائمة لائحة نقاط الوصول. يمكنك إنشاء أوضاع جديدة، أو حذفها أو تعديلها باستخدام قائمة الخيارات. ولكن، لا يمكنك حذف التكوينات الافتراضية أو تعديلها.

اتصال حزم البيانات - إذا قمت بتحديد "عند التوافر"، فسيتم تسجيل الهاتف تلقائياً في شبكة GPRS لدى تشغيله. إذا قمت بتحديد "عند الحاجة"، فسينشأ اتصال بشبكة GPRS لمدة الاتصال بخدمة وab أو بالتطبيق.

4 اختر الجهاز الذي تريد الاقتران به، وسيقوم الجهاز بإنشاء رمز مرور بشكل افتراضي في كل مرة تتصل فيها.

5 سيتصل هاتفك حينئذٍ بالجهاز الأخر.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

تثبيت LG PC Suite على الكمبيوتر

1 انتقل إلى www.lgmobile.com واختر منطقتك أولاً ومن ثم بلدك.

2 اختر قائمة المنتجات، وحدد يدوي وبرنامج، وانقر فوق انتقل إلى يدوي ومقطع تنزيل البرنامج.

3 حدد اللغة التي تريد أن يتم تشغيل المثبت بواسطتها وانقر فوق موافق.

4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

5 عند اكتمال عملية التثبيت، يظهر رمز LG PC Suite على سطح المكتب.

• وسيلة تخزين ذات سعة كبيرة:

حدد هذا الخيار وقم بتوصيل الهاتف بالكمبيوتر واسحب الملفات وأسقطها في حافظة الجهاز القابل للإزالة لهاتف GD350.

• PC Suite: حدد هذا الخيار وقم

بتوصيل الهاتف بالكمبيوتر في وضع مزامنة الكمبيوتر الشخصي.

• الطلب دائما: يمنح تحديد هذا الخيار

الفرصة لتحديد الوضع، عندما يكون الهاتف موصولاً بالكمبيوتر، في كل مرة.

ملاحظة: لاستخدام وظيفة جهاز USB

ذات التخزين الكبير السعة، ستحتاج إلى إدراج بطاقة ذاكرة خارجية في الهاتف.

تغيير إعدادات بلوتوث

1 اضغط القائمة وحدد الإعدادات، ثم اختر التوصيل.

2 اختر بلوتوث وحدد الإعدادات. أدخل تغييراتك على:

إمكانية رؤية هاتفي - اختر أن يكون جهازك مرئياً، أو مخفياً أو مرئياً لدقيقة واحدة بالنسبة إلى الآخرين.

اسم هاتفي - أدخل اسماً لجهاز LG GD350.

الخدمات المعتمدة - عرض الخيارات المعتمدة.

عنواني - عرض عنوان بلوتوث.

الاقتران بجهاز بلوتوث آخر

1 تأكد من كون بلوتوث في وضع

التشغيل ومن كونه مرئياً. يمكنك

تغيير إمكانية رؤيتك في قائمة

إعدادات بلوتوث، عبر تحديد إمكانية رؤية هاتفي، ثم مرئي.

2 حدد جهاز نشط من القائمة بلوتوث.

3 يبحث الهاتف GD350 عن

الأجهزة. عند اكتمال عملية البحث،

يظهر الخيار إضافة وتحديث على الشاشة.

الإعدادات

تخصيص الأوضاع

(القائمة < الإعدادات < الأوضاع)

يمكنك تخصيص كل ضبط من إعدادات الوضع. اختر الوضع الذي تريده، ثم حدد الخيارات واختر تعديل.

استخدام وضع الرحلات الجوية

(القائمة < الإعدادات < الأوضاع <

وضع الرحلات الجوية)

استخدم هذه الوظيفة لبدء تشغيل وضع الرحلات الجوية. لن يكون باستطاعتك إجراء مكالمات، أو الاتصال بالإنترنت، أو إرسال رسائل عندما يكون وضع الرحلات الجوية قيد التشغيل.

تغيير إعدادات الشاشة

(القائمة < الإعدادات < الشاشة)

يمكنك تغيير إعدادات شاشة الهاتف.

تغيير التاريخ والوقت

(القائمة < الإعدادات < التاريخ

والوقت)

يمكنك تعيين الوظائف المتعلقة بالتاريخ والوقت.

تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات التوصيل بواسطة مشغل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد منذ لحظة تشغيله. إذا أردت تغيير أي ضابط من الإعدادات استخدم هذه القائمة. يمكنك تكوين ضبط الشبكة وأوضاع الوصول إلى البيانات في هذه القائمة. اضغط القائمة وحدد الإعدادات، ثم اختر التوصيل. خيارك هي:

بلوتوث - قم بإعداد GD350 لاستخدام

بلوتوث. يمكنك تكييف إمكانية رؤيتك بالنسبة إلى الأجهزة الأخرى أو البحث عبر الأجهزة التي اقترن هاتفك بها.

وضع اتصال USB - يمكنك تحديد

وضع اتصال USB في الهاتف

لاستخدامات متعددة.

تحويل وحدة

(القائمة < منظم المواعيد < المحوّل)
يسمح لك هذا الخيار بتحويل أي قياسات إلى الوحدة التي تريدها.

إضافة مدينة إلى ساعتك العالمية
(القائمة < منظم المواعيد < الساعة العالمية)

يمكنك إضافة مدينة مطلوبة إلى قائمة الساعة العالمية. ويمكنك أيضا التحقق من الوقت الحالي في المدن الرئيسية حول العالم.

الانتقال إلى

(القائمة < منظم المواعيد < الانتقال إلى)
يساعدك على الانتقال إلى القائمة التي تبحث عنها. يمكنك تعيين العنصر ك الانتقال إلى.

خدمات SIM

(القائمة < منظم المواعيد < خدمات SIM)
هذه الميزة تعتمد على SIM وخدمات الشبكة.

إذا كانت بطاقة SIM تعتمد خدمات SAT (أي مجموعة أدوات تطبيق SIM)، فستكون هذه القائمة اسم الخدمة الخاصة بالمشغل المخزنة على بطاقة SIM.

الويب

الوصول إلى متصفح واب

يمكنك تشغيل متصفح واب والوصول إلى الصفحة الرئيسية للضببط الذي تم تنشيطه على متصفح ويب. يمكنك أيضا الدخول يدويا إلى عنوان محدد مواقع المعلومات URL والوصول إلى صفحة واب المقترنة.

1 اضغط على القائمة وحدد الويب.

2 للوصول مباشرة إلى صفحة متصفح واب الرئيسية، حدد الصفحة

الرئيسية. كطريقة بديلة، حدد الانتقال إلى العنوان واكتب عنوان URL المطلوب.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

استخدام الصندوق النقدي

(القائمة < منظم المواعيد < الصندوق
النقدي)

إن الصندوق النقدي عبارة عن صندوق محاسبة بسيط يُستخدم لتسجيل المعلومات الأساسية المتعلقة بالإيصالات النقدية وعمليات الدفع. وهو وسيلة سهلة لتبقيك على اطلاع على كمية المال التي تستلمها وقيمة الفواتير التي يتم دفعها.

احتساب مؤشر كتلة الجسم (BMI)
(القائمة < منظم المواعيد < حاسبة
BMI)

إن مؤشر كتلة الجسم (BMI) هو قياس لكمية الدهون في الجسم بالنسبة إلى الطول والوزن.

لاحتساب قيمة BMI، اضغط تعديل واختر الجنس، ثم أدخل وزنك وطولك. ثم حدد تم.

استخدام الحاسبة

(القائمة < منظم المواعيد < الحاسبة)

تقوم الحاسبة بتطبيق وظائف الحاسبة البسيطة مثل الجمع، والطرح، والضرب والقسمة، إضافة إلى التطبيقات العلمية أيضا.

استخدام ساعة الإيقاف

(القائمة < منظم المواعيد < ساعة
الإيقاف)

يتيح لك هذا الخيار استخدام وظيفة ساعة الإيقاف.

الباحث عن التاريخ

(القائمة < منظم المواعيد < الباحث
عن التاريخ)

الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة.

التطبيقات

يكون الهاتف GD350 محملاً مسبقاً بألعاب تهدف إلى تسليتك في أوقات الفراغ. إذا اخترت تنزيل أية ألعاب أو تطبيقات إضافية، فسيتم حفظها في هذه الحافظة. اضغط القائمة وحدد التطبيقات. اختر الألعاب والتطبيقات الخاصة بي. ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

منظم المواعيد

ضبط المنبه

(القائمة < منظم المواعيد < ساعة

المنبه)

يمكنك إعداد ما يصل إلى 5 ساعات تنبيه بحيث ترنّ في وقت محدد.

استخدام التقويم

(القائمة < منظم المواعيد < التقويم)

عند دخولك إلى هذه القائمة، يظهر تقويم. تجد مؤشر مربع موضوع على التاريخ الحالي. يمكنك نقل المؤشر إلى تاريخ آخر باستخدام مفاتيح التنقل.

إضافة عنصر إلى قائمة المهام (القائمة

< منظم المواعيد < قائمة المهام)

يمكنك عرض وتعديل وإضافة مهام تريد تنفيذها.

إضافة ملاحظة

(القائمة < منظم المواعيد <

الملاحظات)

يمكنك تسجيل ملاحظتك الخاصة هنا.

الملاحظات السرية

(القائمة < منظم المواعيد <

الملاحظات السرية)

يمكنك كتابة مذكّرة سرّية لحماية خصوصيتك. قم بإدخال رمز الحماية لاستخدام هذه القائمة.

منشئ نغمة الرنين

إنشاء نغمة الرنين

1 اضغط القائمة وحدد الوسائط المتعددة، ثم اختر منشئ نغمة الرنين.

2 حدد الموسيقى التي تود استخدامها في قوائم الموسيقى، ثم حدد (OK).

3 حدد قص حين تود البدء بتسجيل الموسيقى لاستخدامها كنغمة رنين أثناء تشغيل الموسيقى.

4 حدد إيقاف للإيقاف.

5 حدد حفظ واختر من ضمن الملف الأصلي أو ملف جديد. ثم حدد حفظ.

الاستوديو

يمكنك تخزين أي ملفات وسائط في ذاكرة الهاتف بحيث يتوفر لديك وصول سهل إلى كل الصور، والأصوات، وملفات الفيديو، وأخرى والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف. سيتم حفظ كل ملفات الوسائط المتعددة في الاستوديو. اضغط على قائمة ثم حدد الاستوديو لفتح قائمة بالحافظات.

تسجيل من الراديو

1 اضغط (OK) أثناء الاستماع إلى الراديو.

2 يظهر وقت التسجيل على هاتفك. إذا أردت إيقاف التسجيل، فاضغط (OK). إذا اكتملت عملية التسجيل، فسيتم حفظ المحتويات المسجلة في الاستوديو كملف mp3.

مسجل الصوت

استخدم مسجل الصوت لتسجيل مذكرات صوتية أو أصوات أخرى.

تسجيل مذكرة صوتية

1 اضغط القائمة وحدد الوسائط المتعددة، ثم اختر مسجل الصوت.

2 اضغط (OK) لبدء التسجيل.

3 اختر (OK) لإنهاء التسجيل.

4 اضغط الخيارات وحدد تشغيل للاستماع إلى التسجيل.

الموسيقى

يكون مشغل الموسيقى مضمناً في الهاتف GD350 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك.

تشغيل أغنية

1 اضغط على القائمة وحدد الوسائط

المتعددة، ثم اختر الموسيقى.

2 اختر كل المسارات ثم حدد الأغنية

التي تريد تشغيلها.

3 حدد **||** لإيقاف الأغنية مؤقتاً.

4 حدد **▶▶** للانتقال إلى الأغنية التالية.

5 حدد **◀◀** للانتقال إلى الأغنية

السابقة.

6 حدد رجوع لإيقاف الموسيقى والعودة

إلى قائمة مشغل الموسيقى.

ملاحظة: إن الموسيقى محمية بموجب

حقوق النشر في المعاهدات الدولية

وقوانين حقوق النشر المحلية. قد يكون من

الضروري الحصول على إذن أو ترخيص

لإعادة إنتاج الموسيقى أو نسخها. يمنع

القانون الوطني في بعض البلدان النسخ

الخاص للمواد المحمية بحقوق النشر.

يرجى التحقق من القانون الوطني للبلد

المعني والمتعلق باستخدام مثل هذه المواد.

راديو FM

تتوفر في جهاز GD350 ميزة راديو

FM بحيث يمكنك ضبط محطاتك

المفضلة والاستماع إليها أثناء التنقل.

ملاحظة: ستحتاج إلى إدخال سماعات

الرأس لكي تتمكن من الاستماع إلى

الراديو. أدخل القابس بموصل سماعة

الرأس لكي تتمكن من الاستماع إلى الراديو

والمحافظة على استقبال جيد للراديو.

البحث عن محطات

1 اضغط على القائمة وحدد الوسائط

المتعددة، ثم اختر راديو FM.

2 حدد الخيار واختر بحث تلقائي، ثم

حدد نعم. ويمكنك أيضاً استخدام

مفتاحي التنقل لليسار ولليمين بحثاً

عن محطات.

الاستماع إلى الراديو

1 اضغط على القائمة وحدد الوسائط

المتعددة، ثم اختر راديو FM.

2 حدد رقم القناة للمحطة التي تريد

الاستماع إليها.

تلميح! يمكنك الاستماع إلى الراديو عبر

مكبر الصوت المضمن. اضغط الخيارات،

وحدد الاستماع عبر مكبر الصوت.

العناصر المحفوظة - يمكنك الوصول إلى الرسائل المحفوظة، والنماذج النصية ونماذج الوسائط المتعددة.

لرموز التعبيرية - قائمة برموز تعبيرية مفيدة، مكتوبة مسبقاً لإجراء رد سريع. يمكنك إضافة رموز تعبيرية وتعديلها وحذفها. يمكنك إدراج الرمز التعبيري الذي تفضله عند كتابة رسالة.

إعدادات الرسائل - تكون إعدادات الرسائل معرّفة مسبقاً بحيث يمكنك إرسال رسائل على الفور. إذا رغبت في تغيير الإعدادات، فيمكنك القيام بذلك باستخدام خيارات الإعدادات.

الكاميرا

باستخدام وحدة الكاميرا المضمّنة في الهاتف، يمكنك التقاط صور لأشخاص. بالإضافة إلى ذلك، يمكنك إرسال الصور إلى الآخرين واختيار صور لاستخدامها كخلفية للشاشة.

التقاط صورة سريعة

1 اضغط القائمة ثم حدد الوسائط المتعددة. حدد كاميرا لفتح محدد المنظر.

2 مع الإمساك بالهاتف، صوّب العدسة باتجاه موضوع الصورة.

3 اضغط (OK) لالتقاط صورة.

كاميرا الفيديو

التقاط فيديو سريع

1 اضغط القائمة وحدد الوسائط المتعددة، ثم اختر الفيديو.

2 أشّر عدسة الكاميرا نحو موضوع الفيديو.

3 اضغط (OK) لبدء التسجيل.

4 يظهر Rec في محدد المنظر وسيعرض المؤقت طول الفيديو.

5 حدد إيقاف لإيقاف التسجيل.

3 اضغط إضافة واتبع إرشادات الإطارات المنبثقة وأدخل المعلومات المطلوبة.

إرسال بريد إلكتروني باستخدام حسابك الجديد

لإرسال/استلام بريد إلكتروني، عليك إعداد حساب بريد إلكتروني.

1 حدد القائمة، ثم حدد الرسائل واختر إنشاء رسالة جديدة.

2 اختر البريد الإلكتروني، افتح بريد إلكتروني جديد.

3 أدخل عنوان المستلم واكتب موضوع.

4 قم بإدخال رسالتك.

5 اضغط الخيارات، وحدد إدراج إضافة صورة، أو مقطع فيديو، أو مقطع صوتي، أو بطاقة عمل، أو جدول أو ملاحظة.

6 اضغط إرسال فيتم إرسال البريد الإلكتروني.

حافظات الرسائل

اضغط على القائمة، وحدد الرسائل. إن بنية الحافظة المستخدمة في الهاتف GD350 تفسر نفسها بنفسها بطريقة معقولة.

إنشاء رسالة - يسمح لك بإنشاء رسائل جديدة.

صندوق الوارد - توضع كل الرسائل التي تستلمها في صندوق الوارد. من هنا يمكنك الرد، وإعادة التوجيه والكثير غير ذلك.

صندوق البريد - توضع كل رسائل البريد الإلكتروني التي تستلمها في صندوق البريد.

المسودات - إذا لم يكن لديك الوقت الكافي لانتهاء من كتابة رسالة، فيمكنك أن تحفظ هنا ما كتبته حتى الآن.

صندوق الصادر - عبارة عن حافظة تخزين مؤقت للرسائل فيما يكون إرسالها جارياً.

العناصر المرسله - توضع نسخ لكل الرسائل التي ترسلها في العناصر المرسله.

استخدام وضع T9

1 عندما تكون في وضع إدخال النص التنبؤي T9، ابدأ بإدخال كلمة عبر ضغط المفاتيح 2 إلى 9. اضغط على مفتاح واحد لكل حرف.

- إذا بقيت الكلمة غير صحيحة بعد كتابتها بالكامل، فاضغط مفتاح * مرة واحدة أو أكثر للتنقل عبر خيارات الكلمات الأخرى.

- إذا كانت الكلمة المطلوبة غير موجودة في قائمة خيارات الكلمات، فقم بإضافتها مستخدماً وضع ABC.

2 أدخل الكلمة بأكملها قبل تعديل أو حذف أي ضغطات مفاتيح.

- لحذف الأحرف، اضغط مسح.
- أكمل كل كلمة بمسافة، وذلك بضغط المفتاح 0.

وضع Abc

يتيح لك هذا الوضع إدخال الأحرف بالضغط على المفتاح المعنون بواسطة الحرف المطلوب، مرة واحدة أو مرتين أو ثلاث مرات أو أربع مرات حتى يظهر الحرف.

وضع 123

اكتب الأرقام وذلك باستخدام ضغطة واحدة لكل رقم. يمكنك أيضاً إضافة أرقام مع البقاء في أوضاع الأحرف بالضغط باستمرار على المفتاح المطلوب.

إعداد البريد الإلكتروني

يمكنك البقاء على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف GD350. فعملية إعداد حساب بريد إلكتروني POP3 أو IMAP4 تعتبر عملية بسيطة وسهلة.

1 اضغط على القائمة، وحدد الرسائل، ثم اختر إعدادات الرسائل.

2 حدد البريد الإلكتروني ثم حسابات البريد الإلكتروني.

6 حدد الخيارات واختر إدراج لإضافة صورة، أو مقطع فيديو، أو مقطع صوتي، أو جدول، أو بطاقة عمل، أو ملاحظة، أو حقل النص، أو مهام أو نموذج النص.
7 اضغط إرسال.

تلميح! يمكنك تحديد نوع الرسالة كـ SMS أو MMS عندما تقوم بإدخال نص يتجاوز طوله طول صفحة واحدة في حقل الرسالة. إذا أردت تغيير نوع الرسالة التي تود إرسالها، فاضغط القائمة < الرسائل < إعدادات الرسائل < الرسالة النصية، ثم اختر إرسال النص الطويل كـ.

تحذير: إذا تمت إضافة صورة، أو مقطع فيديو، أو مقطع صوتي، أو جدول، أو بطاقة عمل، أو حقل النص أو موضوع إلى محرر الرسائل، فسيتم تلقائياً تحويل العناصر المضافة إلى وضع MMS وسيتم فرض رسم عليك مقابل ذلك.

إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف. تتوفر أساليب إدخال النص التالية على الهاتف: وضع T9، ووضع Abc ووضع 123.

ملاحظة: قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول دفتر العناوين).

وضع T9

يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسلات المفاتيح التي تضغط عليها. ما عليك إلا ضغط مفتاح الرقم المقترن بالحرف الذي تريد إدخاله، وسيتعرف القاموس على الكلمة فور إدخال كل الأحرف.

إرسال رسالة

- 1 اضغط على القائمة، وحدد الرسائل ثم اختر إنشاء رسالة جديدة.
 - 2 اختر الرسالة لإرسال رسالة نصية (SMS) أو MMS.
 - 3 يفتح محرر رسائل جديدة. يجمع محرر الرسائل رسالة نصية ورسائل الوسائط المتعددة ضمن واجهة بديهية واحدة سهلة الاستخدام للتبديل بين المحرر. الضبط الافتراضي لمحرر الرسائل هو رسالة نصية.
 - 4 أدخل رقم الهاتف أو اضغط الخيارات وحدد إرسال لإضافة جهة اتصال من قائمة الأسماء لديك. ويمكنك حتى إضافة عدة جهات اتصال عبر تحديد إضافة مستلم.
- ملاحظة:** يمكن أيضاً إرسال رسالة إلى مجموعة. قم بتعديل الرسالة واضغط إرسال، ثم حدد مجموعة جهات اتصال وحدد المجموعة التي تريدها.
- 5 قم بإدخال رسالتك.

ملاحظة: إذا قمت بإضافة المزيد من المعلومات، فاضغط الخيارات واختر إضافة تفصيل، ثم حدد الخيارات التي تريدها.

ملاحظة: عند قيامك بتخزين عنوان بريد إلكتروني لجهة اتصال، اضغط * وحدد رمزاً @ ثم اضغط موافق.

إضافة جهة اتصال إلى مجموعة
يمكنك حفظ الأسماء ضمن مجموعات، بوضع زملائك في العمل وأفراد عائلتك ضمن مجموعات مختلفة مثلاً. هناك عدد من المجموعات تكون معدة مسبقاً على الهاتف مثل العائلة، والأصدقاء، والزملاء، والمدرسة والهامة.

الرسائل

يتضمن الهاتف GD350 وظائف متعلقة بـ SMS (خدمة الرسائل القصيرة)، وبـ MMS (خدمة رسائل الوسائط المتعددة)، والبريد الإلكتروني وكذلك رسائل خدمة الشبكة.

الأسماء

البحث عن جهة اتصال

- 1 حدد الأسماء من الشاشة الرئيسية.
- 2 باستخدام لوحة المفاتيح، أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها.
- 3 للتمرير عبر الأسماء وأرقامها المختلفة، استخدم مفاتيح التنقل.

إضافة جهة اتصال جديدة

- 1 اضغط القائمة وحدد الأسماء، ثم اختر الأسماء. اضغط الخيارات ومن ثم إضافة جهة اتصال جديدة.
- 2 أدخل الاسم الأول والأخير لجهة الاتصال الجديدة. من غير الضروري إدخال الاسمين، ولكن يجب عليك إدخال أحدهما.
- 3 أدخل الرقم وحدد الخيارات، ثم اختر حفظ.

معاودة الاتصال التلقائي - يتيح لك هذا

الخيار تعيين وظيفة معاودة الاتصال التلقائي عند فشل محاولة الاتصال.

وضع الرد - يتيح لك تعيين أسلوب الردّ على المكالمات. يمكنك أن تختار ما بين ضغط مفتاح الإرسال، أو فتح الغطاء أو ضغط أي مفتاح.

متعقب وقت المكالمات المجانية - اختر ما إذا أردت عرض وقت المكالمات المجانية أم لا.

منبه الدقائق - يحدد ما إذا كنت تود إطلاق نغمة أثناء إجراء مكالمة وفقاً للوقت المحدد.

وضع الرد بلوتوث - اختر كيفية الرد على مكالمة عند استخدام سماعة رأس بلوتوث. تعيين لايدوي أو الهاتف.

حفظ الرقم الجديد - اختر نعم أو لا.

عرض سجلات المكالمات

اضغط القائمة وحدد سجلات المكالمات، ثم اختر سجلات المكالمات.

يمكنك التدقيق في سجلات المكالمات التي لم يرد عليها، والمكالمات المستلمة والمكالمات الصادرة فقط إذا كانت الشبكة تعتمد تعريف خط المتصل (CLI) ضمن منطقة الخدمة.

تغيير إعدادات المكالمات

بإمكانك تعيين قائمة متعلقة بمكالمة. اضغط على القائمة، وحدد الإعدادات واختر الاتصال.

تحويل المكالمات - اختر ما إذا كنت تريد تحويل كل مكالماتك.

حظر المكالمات - حدد متى ترغب في حظر المكالمات.

أرقام الاتصال الثابتة - اختر قائمة

بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من المشغل. وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

انتظار مكالمات - لكي يتم تنبيهك عند وجود مكالمات قيد الانتظار. (يعتمد هذا الأمر على موفر الشبكة).

رفض المكالمات - حدد إيقاف التشغيل أو التشغيل، واختر رفض كل المكالمات أو المكالمات الواردة من مجموعات أو جهات اتصال معينة، أو من أرقام غير مسجلة (الأرقام غير المضمنة في قائمة الأسماء) أو كل الاتصالات بدون معرف متصل.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم. (يعتمد هذا الأمر على موفر الشبكة).


المكالمات

إجراء مكالمة

1 أدخل الرقم باستخدام لوحة المفاتيح.

لحذف رقم اضغط على مسح.

2 اضغط على  لبدء المكالمة.

3 لإنهاء المكالمة، اضغط على .

تلميح! لإدخال + عند إجراء مكالمة دولية، اضغط باستمرار على 0.

تلميح! للتحكم بمستوى الصوت أثناء

مكالمة، اضغط مفتاح مستوى الصوت.


إجراء مكالمة من الأسماء

1 حدد الأسماء من الشاشة الرئيسية.


2 باستخدام لوحة المفاتيح، أدخل

الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها.

3 حدد إجراء مكالمة من الخيارات أو

اضغط على  لبدء المكالمة.

الرد على مكالمة ورفضها

عند رنين الهاتف، اضغط على  للرد على المكالمة.


لكتم صوت الهاتف أثناء الرنين، ما

عليك سوي تحديد صامت. يُعتبر هذا

الأمر مفيداً إذا كنت قد نسيت تغيير

وضع الهاتف إلى صامت أثناء حضور

اجتماع.

اضغط على  أو حدد رفض لرفض

المكالمة الواردة.

استخدام مكبر الصوت

أثناء المكالمة، يمكنك تنشيط مكبر

الصوت عبر ضغط  كما يمكنك

استخدام الهاتف في الوضع اللايديوي.

أما إذا كان مكبر الصوت نشطاً، فاضغط

 مجدداً لاستئناف وضع المحادثات

الهاتفية العادية.

الاتصال السريع

اضغط القائمة وحدد الأسماء، ثم اختر

الاتصالات السريعة.

يمكنك تعيين رقم اتصال سريع لجهة

اتصال تتصل بها بشكل متكرر.

تم مسبقاً تعيين بريدك الصوتي إلى

رقم الاتصال السريع 1 ولا يمكنك

تغيير ذلك.

خريطة القوائم

8. التطبيقات	7. منظم المواعيد	5. الاستوديو
8.1 ألعاب وتطبيقات	7.1 المنبه	5.1 بطاقة الذاكرة
8.2 الإعدادات	7.2 التقويم	5.2 الصور
	7.3 قائمة المهام	5.3 أصواتي
9. ويب	7.4 ملاحظات	5.4 الفيديو
9.1 الصفحة الرئيسية	7.5 الملاحظات السرية	5.5 ألعاب وتطبيقات
9.2 العلامات	7.6 دفتر النقدية	5.6 أخرى
9.3 آخر عنوان ويب	7.7 حاسبة مؤشر كتلة الجسم	6. الوسائط المتعددة
9.4 الإعدادات	7.8 الحاسبة	6.1 الكاميرا
9.5 الانتقال إلى عنوان	7.9 ساعة إيقاف	6.2 الفيديو
9.6 الصفحات المحفوظة	7.10 محدد التاريخ	6.3 موسيقى
	7.11 محول	6.4 راديو FM
	7.12 التوقيت العالمي	6.5 مسجل الصوت
	7.13 ذهاب إلى	6.6 منشئ نغمة الرنين
	7.14 خدمات SIM	
	7.15 الإعدادات	

خريطة القوائم

1. الرسائل	3. سجل المكالمات	4. الإعدادات
1.1 إنشاء رسالة	3.1 سجل المكالمات	4.1 الأوضاع
1.2 صندوق الوارد	3.2 مكالمات لم يرد عليها	4.2 عرض
1.3 صندوق البريد	3.3 المكالمات المستلمة	4.3 التاريخ والوقت
1.4 المسودات	3.4 المكالمات الصادرة	4.4 التوصيل
1.5 صندوق الصادر	3.5 مدة المكالمات	4.5 المكالمات
1.6 المرسلة	3.6 عداد البيانات	4.6 الهاتف
1.7 العناصر المحفوظة	3.7 تكاليف المكالمات	4.7 الشبكة
1.8 رموز تعبيرية		4.8 أوضاع الإنترنت
1.9 إعدادات الرسائل		4.9 نقاط الوصول
		4.10 اتصال حزم البيانات
2. الاسماء		4.11 الحماية
2.1 الأسماء		4.12 معلومات الذاكرة
2.2 الإعدادات		4.13 استعادة ضبط المصنع
2.3 المجموعات		
2.4 الاتصال السريع		
2.5 أرقام الاتصال بالخدمة		
2.6 رقمي		
2.7 بطاقة العمل		

تثبيت بطاقة SIM وشحن البطارية

تثبيت بطاقة SIM

عندما تشترك بشبكة الهاتف الخليوي، يتم تزويدك ببطاقة SIM مصحوبة بتفاصيل حول اشتراكك، مثل رمز PIN وأي خدمات اختيارية متوفرة وغير ذلك.

هام!

يمكن بسهولة إلحاق ضرر ببطاقة SIM عن طريق الخدش أو التثبي، لذا كن حذراً عند التعامل معها أو عند إدخالها أو إخراجها. يجب إبقاء كل بطاقات SIM بعيداً عن متناول الأطفال.

الأشكال التوضيحية

- 1 فتح غطاء البطارية
- 2 إخراج البطارية
- 3 إدخال بطاقة SIM
- 4 إدخال البطارية
- 5 إغلاق غطاء البطارية
- 6 شحن البطارية



تحذير: لا تقم بإخراج البطارية عندما يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.



تهيئة بطاقة الذاكرة

في الشاشة الرئيسية اضغط القائمة ثم حدد الإعدادات.

اختر معلومات الذاكرة، وحدد الذاكرة الخارجية ثم اضغط التهيئة وأدخل رمز الحماية.

تحذير: عندما تقوم بتنسيق بطاقة الذاكرة، سيتم مسح كل محتواها. إذا لم تكن ترغب في فقدان البيانات الموجودة على بطاقة الذاكرة، فعليك إجراء نسخة احتياطية عنها أولاً.

تركيب بطاقة الذاكرة

ارفع غطاء بطاقة الذاكرة وقم بإدراج بطاقة الذاكرة الخارجية micro SD، واحرص على توجيه الملامسات الذهبية نحو الأسفل. أغلق غطاء بطاقة الذاكرة حتى يستقر في مكانه.

لإزالة بطاقة الذاكرة، ادفعها بلطف كما هو مبين في الرسم التخطيطي.



ملاحظة: بطاقة الذاكرة عبارة عن ملحق اختياري.

التعرّف على الهاتف الخاص بك



دليل المستخدم لـ GD350 - عربي

سيساعدك هذا الدليل على إدراك كيفية استخدام هاتفك المحمول الجديد. سيوفر لك شرحاً مفيداً للميزات الموجودة على هاتفك.

قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

