



KS360 ฟิลิปปินส์

LG ELECTRONICS INC.

KS360

ไทย
ENGLISH

P/N : MMBB0316601 (1.1) H

CE 0168

www.lgmobile.com

Bluetooth QD ID B014200



ข้อมูลบางอย่างในคู่มือเล่มนี้
อาจแตกต่างจากโทรศัพท์ ของคุณ
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์
หรือผู้ให้บริการของคุณ



KS360 คู่มือการใช้ | ไทย

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น KS360 ของ LG ที่ทันสมัยมีขนาดกะทัดรัด ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

สารบัญ

01 ตั้งค่า

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.. 7

ภาพแสดงตัวเครื่องเมื่อเปิดสไลด์ 8

การใส่ซิมและแบตเตอรี่..... 10

การคัดหน่วยความจำ 13

การใส่การ์ดหน่วยความจำ 13

การถอดการ์ดหน่วยความจำ..... 13

การฟอร์แมตการ์ดหน่วยความจำ..... 13

แผนผังเมนู..... 14

02 หน้าจอสแตนด์บาย

หน้าจอสแตนด์บาย..... 15

แถบสถานะ..... 15

03 การทำงานพื้นฐาน

การโทร 16

การโทรออก..... 16

การโทรออกโดยใช้รายชื่อ..... 16

การรับสายและการปฏิเสธสาย

เรียกเข้า..... 16

การปรับระดับเสียงสนทนา..... 17

โทรด่วน..... 17

การดูบันทึกการโทร 17

การใช้การโอนสาย 18

การใช้การจำกัดการโทร..... 18

การเปลี่ยนแปลงการตั้งค่า การโทร . 19

รายชื่อ..... 20

การค้นหารายชื่อ 20

การเพิ่มรายชื่อใหม่..... 20

ตัวเลือกต่างๆ ของรายชื่อ..... 20

การเพิ่มรายชื่อให้กับกลุ่ม..... 21

การเปลี่ยนชื่อกลุ่ม..... 21

การเพิ่มรูปภาพให้กับรายชื่อ 21

การคัดลอกรายชื่อไปยังซิม 22

การลบรายชื่อทั้งหมด..... 22

การดูข้อมูล..... 22

ข้อความ..... 23

ข้อความ..... 23

การส่งข้อความ 23

การป้อนข้อความ..... 24

โหมดป้อนข้อความโดยใช้ปุ่มกด..... 24

ตารางตัวอักษรไทย 24

การตั้งค่าอีเมล..... 26

การส่งอีเมล..... 26

ไฟล์เดออร์ข้อความ 26

การจัดการข้อความ 27

การใช้ข้อความอัตโนมัติ 27

การเปลี่ยนการตั้งค่าข้อความ ตัวอักษร. 28

การเปลี่ยนการตั้งค่าข้อความ

มัลติมีเดีย..... 29

การเปลี่ยนการตั้งค่าอีเมล 29

การเปลี่ยนการตั้งค่าอื่นๆ..... 30

04 เริ่มต้นงานสร้างสรรค์

มัลติมีเดีย.....	31
การถ่ายภาพด้วย.....	31
ก่อนจะถ่ายภาพ.....	31
หลังจากที่ถ่ายภาพแล้ว.....	32
การใช้การตั้งค่าด้วย.....	32
การเปลี่ยนขนาดภาพ.....	33
การดูภาพถ่ายที่บันทึกไว้.....	33
การตั้งค่าภาพถ่ายเป็นภาพพื้น หลัง หรือ ID ภาพ.....	33
การถ่ายวิดีโอด้วย.....	33
หลังจากที่ถ่ายวิดีโอแล้ว.....	34
ทำความเข้าใจกับช่องมองภาพ.....	34
การใช้การตั้งค่าด้วย.....	34
การดูวิดีโอที่บันทึกไว้.....	35
การปรับระดับเสียงขณะดูวิดีโอ.....	35
เครื่องเล่น MP3.....	35
การโอนเพลงไปยังโทรศัพท์.....	35
การเล่นเพลง.....	36
การใช้ตัวเลือกขณะเล่นเพลง.....	36
การสร้างรายการเพลง.....	36
การเล่นรายการเพลง.....	37
การแก้ไขรายการเพลง.....	37
การลบรายการเพลง.....	37
การใช้วิทยุ FM.....	38
การค้นหาสถานี.....	38
การรีเซ็ตสถานี.....	39
การฟังวิทยุ.....	39

การใช้เครื่องบันทึกเสียง.....	39
การบันทึกเสียงเตือนของคุณ.....	39
การส่งการบันทึกเสียง.....	39
เพิ่มข้อมูล.....	40
ภาพ.....	40
เมนูตัวเลือกสำหรับภาพ.....	40
การส่งภาพถ่าย.....	41
การจัดการรูปภาพ.....	41
การลบรูปภาพ.....	41
การลบหลายภาพ.....	41
การสร้างภาพสไลด์.....	42
เสียง.....	42
การใช้เสียง.....	42
วิดีโอ.....	42
การดูวิดีโอ.....	42
การใช้ตัวเลือกขณะหยุดวิดีโอ ชั่วคราว.....	43
การส่งวิดีโอคลิป.....	43
การใช้เมนูตัวเลือกของวิดีโอ.....	43
เอกสาร.....	44
การดูเอกสาร.....	44
อื่นๆ.....	44
หน่วยความจำนอก.....	44
เกมส์&แอปฯ.....	45
เกมส์&แอปฯ.....	45
การเล่นเกมส์.....	45
การดูแอปพลิเคชัน.....	45
การเปลี่ยนแปลงโปรไฟล์ เครือข่าย.....	45

สารบัญ

05 เริ่มต้นการจัดการ

ออกแบบในเซอร์&เครื่องมือ.....	46
การเพิ่มเหตุการณ์ลงในปฏิทิน.....	46
การแก้ไขเหตุการณ์ในปฏิทิน.....	46
การแบ่งปันเหตุการณ์ในปฏิทิน.....	47
การเพิ่มบันทึก.....	47
การตั้งเวลาปลุก.....	47
การใช้เครื่องคิดเลข.....	48
การใช้นาฬิกาจับเวลา.....	48
การแปลงหน่วย.....	48
การเลือกเมืองลงในเวลาทั่วโลก.....	48
บริการซิม.....	49

06 เบร่าวเซอร์

เบร่าวเซอร์.....	50
การเข้าใช้เว็บไซต์.....	50
เฟลิดเฟลลินกับ Yahoo!.....	50
การเพิ่มและการใช้บุคคมาเรค.....	50
การเข้าใช้เพจที่บันทึกไว้.....	51
การดูประวัติข้อมูลเบร่าวเซอร์.....	51
การเปลี่ยนการตั้งค่าเว็บเบร่าวเซอร์.....	51

07 ตั้งค่า

การตั้งค่า.....	52
การเปลี่ยนรูปแบบเสียงของคุณ.....	52
การปรับแต่งรูปแบบเสียงของคุณ.....	52
การเปลี่ยนวันที่และเวลา.....	52
การเปลี่ยนภาษา.....	52

การเปลี่ยนการตั้งค่าการ แสดงผล.....	52
การเปลี่ยนการตั้งค่าความ ปลอดภัย.....	53
การใช้โหมด Flight.....	54
การใช้ประหยัดพลังงาน.....	54
การรีเซตโทรศัพท์ของคุณ.....	54
การดูสถานะหน่วยความจำ.....	54
การเปลี่ยนการตั้งค่าบลูทูธ.....	54
การเปลี่ยนการตั้งค่าการ เชื่อมต่อ... ..	54
การจับคู่กับอุปกรณ์บลูทูธอื่น.....	55
การใช้ชุดหูฟังบลูทูธ.....	56
การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล.....	56
การโอนไฟล์ไปที่โทรศัพท์.....	57
การส่งและการรับไฟล์โดยใช้ บลูทูธ.....	57

08 อุปกรณ์เสริม

อุปกรณ์เสริม.....	59
บริการของเครือข่าย.....	60
ข้อมูลทางเทคนิค.....	60
ทั่วไป.....	60
อุณหภูมิตัวต่อตัว.....	60

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่าง มีประสิทธิภาพ.....	62
---	----

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ปุ่มปรับระดับเสียง

- ในโหมดสแตนด์บาย: ความคุมระดับเสียงเรียกเข้า
- ระหว่างการใช้สาย: ความคุมระดับเสียงสนทนา



ภาพแสดงตัวเครื่องเมื่อเปิดสไลด์






การใส่ซิมและแบตเตอรี่


1 ถอดฝาปิดแบตเตอรี่

กดตัวปลดล็อกฝาปิดแบตเตอรี่ แล้ว
ถอดฝาแบตเตอรี่ออก

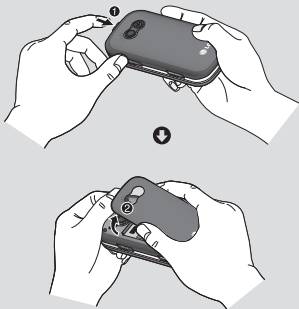

2 ถอดแบตเตอรี่ออก

งัดด้านล่างของแบตเตอรี่และถอด
แบตเตอรี่ออกจากช่องใส่แบตเตอรี่
อย่างระมัดระวัง

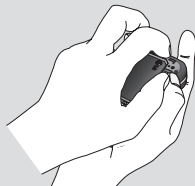

⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้



3 ใส่ซิมการ์ด

แล้วเลื่อนซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลงในการถอดซิมการ์ด ให้ดันออกจากช่องจากทางด้านบน

⚠ คำเตือน: อย่าใส่ซิมการ์ดในขณะที่แป้นพิมพ์เปิดอยู่เพราะอาจทำให้โทรศัพท์และซิมการ์ดของคุณเสียหายได้

4 ใส่แบตเตอรี่


ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่

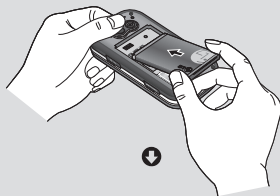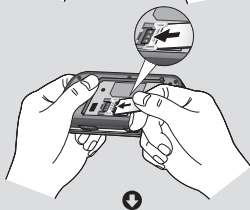

การใส่ซิมและแบตเตอรี่

5 ใส่ฝาปิดแบตเตอรี่กลับคืน

ใส่ด้านล่างของฝาปิดแบตเตอรี่ และดันลงให้แน่นเข้าที่

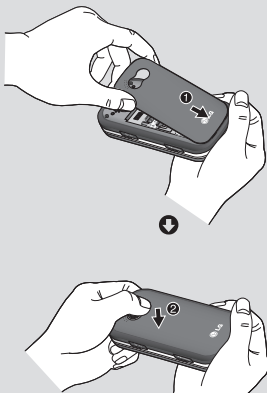

6 การชาร์จโทรศัพท์

ตั้งเพื่อเปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์ KS360. และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ KS360 จนกว่าจะปรากฏข้อความว่าแบตเตอรี่เต็ม บนหน้าจอ

คำเตือน: อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศ




การัดหน่วยความจำ

การใส่การัดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยใช้การัดหน่วยความจำ

เคล็ดลับ! การัดหน่วยความจำเป็นอุปกรณ์เสริม

เปิดช่องเสียบการัดหน่วยความจำ เลื่อนการัดหน่วยความจำเข้าไปในฝาปิดช่องเสียบให้แน่นเข้าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

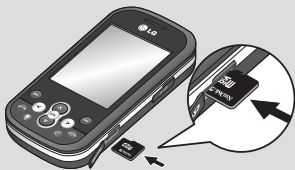

การถอดการัดหน่วยความจำ

เปิดฝาปิดและถอดการัดหน่วยความจำออกอย่างระวังโดยการดันเบาๆ เข้าไปในโทรศัพท์ และปล่อยให้คลายตัวอย่างรวดเร็วดังภาพที่แสดง:



การฟอร์แมตการัดหน่วยความจำ

หากการัดหน่วยความจำของคุณยังไม่ได้ฟอร์แมต คุณจะต้องฟอร์แมตการัดก่อนจึงจะสามารถเริ่มใช้งานได้

- 1 จากหน้าจอสแตนด์บาย กด **OK** และเลือก **ตั้งค่า** จากนั้นเลือก **ตั้งค่าโทรศัพท์**
- 2 เลือก **สถานะความจำ** แล้วเลือก **หน่วยความจำภายนอก**

⚠ คำเตือน: เมื่อคุณฟอร์แมตการัดหน่วยความจำ ข้อมูลทั้งหมดจะถูกลบออก หากคุณไม่ต้องการให้ข้อมูลในการัดหน่วยความจำหายไป ให้สำรองข้อมูลไว้ก่อน

แผนผังเมนู



เกมส์&แอปฯ

- 1 เกมส์
- 2 แอปพลิเคชัน
- 3 โปรไฟล์เครือข่าย



ข้อมูลการโทร

- 1 ทุกสาย
- 2 สายไม่ได้รับ
- 3 สายโทรออก
- 4 สายที่ได้รับ
- 5 เวลาโทร
- 6 ค่าโทร
- 7 รายละเอียดข้อมูล



รายชื่อ

- 1 ค้นหา
- 2 รายชื่อใหม่
- 3 โทรด่วน
- 4 กลุ่ม
- 5 ตัดออกทั้งหมด
- 6 ลบทั้งหมด
- 7 ตั้งค่า
- 8 ข้อมูล



มัลติมีเดีย

- 1 เครื่องเล่น
- MP3
- 2 กล้องถ่ายรูป
- 3 กล้องวิดีโอ
- 4 วิทยุ FM
- 5 เครื่องบันทึกเสียง



ข้อความ

- 1 ข้อความใหม่
- 2 ถัดเข้า
- 3 อีเมลบล็อกซ์
- 4 ร่าง
- 5 ถัดออก
- 6 ส่ง
- 7 ฟังข้อความเสียง
- 8 บริการข้อมูล
- 9 ข้อความอัตโนมัติ
- 0 ตั้งค่า



แฟ้มข้อมูล

- 1 ภาพ
- 2 เสียง
- 3 วิดีโอ
- 4 เอกสาร
- 5 อื่นๆ
- 6 หน่วยงานจำหน่าย



รูปแบบเสียง

- 1 ทั่วไป
- 2 เสียง
- 3 เฉพาะสัน
- 4 นอกอาคาร
- 5 ชุดหูฟัง



อวแกในเซอร์

- 1 ปฏิทิน
- 2 บันทึก



เครื่องมือ

- 1 นาฬิกาปลุก
- 2 เครื่องคิดเลข
- 3 นาฬิกาจับเวลา
- 4 ตัวแปลงหน่วย
- 5 เวลาทั่วโลก
- 6 บริการซิม



เบราว์เซอร์

- 1 โยม
- 2 Yahoo!
- 3 มัคมาร์ค
- 4 ป๊อปแอดเดรส
- 5 ประวัติ
- 6 บันทึกเพจ
- 7 ตั้งค่า
- 8 ข้อมูล



การเชื่อมต่อ

- 1 บลูทูธ
- 2 เครือข่าย
- 3 การเชื่อมต่อ USB



ตั้งค่า

- 1 วันที่ & เวลา
- 2 ภาษา
- 3 หน้าจอ
- 4 ปุ่มลัด
- 5 การโทร
- 6 ระบบป้องกัน
- 7 โหมด Flight
- 8 ประหยัดพลังงาน
- 9 รีเซ็ต
- 0 สถานะความจำ

หน้าจอสแตนด์บาย

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธอยู่หรือไม่





ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย
	บริการโรมมิ่ง
	เปิดใช้บลูทูธ
	มีการเชื่อมต่อบริการ WAP
	มีการตั้งปลุก
	ข้อความใหม่

ไอคอน	คำอธิบาย
	ข้อความเสียงใหม่
	ใช้รูปแบบทั่วไปอยู่
	ใช้รูปแบบเงียบอยู่
	ใช้รูปแบบสั้นอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบชุดหูฟังอยู่
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด


การโทร

การโทรออก

- 1 ตรวจสอบให้แน่ใจว่าโทรศัพท์ของคุณเปิดอยู่
- 2 วิธีการที่รวดเร็วที่สุดในการโทรออกคือเปิดใช้โหมดสัมผัสโดยกด  หากคุณกดปุ่มนี้ คุณสามารถแตะที่หน้าจอเพื่อป้อนหมายเลขโทรศัพท์ที่ต้องการโทร หรือคุณสามารถใช้ปุ่มกดหลังจากเปิดสไลด์ได้ หากต้องการลบที่ละหมายเลข กด  หรือลูกศรย้อนกลับ
- 3 แตะที่  เพื่อเริ่มการโทรออก
- 4 หากต้องการวางสาย กด  หรือเลื่อนปิดปุ่มกด

เคล็ดลับ! ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม **0** ค้างไว้


การโทรออกโดยใช้รายชื่อ


- 1 เลือก รายชื่อ ในเมนูและเลือก ค้นหา
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรหาด้วยปุ่มกด และเลื่อนไปที่รายชื่อชิ้น
- 3 แตะที่  เพื่อเริ่มการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้แตะที่ ยอมรับ หรือแตะ  เพื่อรับสาย

ขณะโทรศัพท์ของคุณมีเสียงเรียกเข้า ให้เลือก **เงียบ** เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่ดี หากคุณลืมเปลี่ยนรูปแบบเป็น **เงียบ** เมื่ออยู่ในห้องประชุม

เลื่อน  ไปทางด้านล่างของโทรศัพท์ หรือแตะที่ **ปฏิเสธ** เพื่อปฏิเสธสายที่เรียกเข้า

เคล็ดลับ! คุณสามารถเปลี่ยนการตั้งค่าบนโทรศัพท์เพื่อรับสายในวิธีที่แตกต่างกัน แตะที่  เลือก **ตั้งค่า** แล้วเลือก **การโทร** เลือก **โหมดตอบรับ** และเลือกจาก **เปิดสไลด์**, **ปุ่มใดๆ** หรือ **ปุ่มรับสายเท่านั้น**


การปรับระดับเสียงสนทนา

หากต้องการปรับระดับเสียงระหว่างการ
ใช้สาย ให้อดปุ่มปรับระดับเสียงที่ด้าน
ซ้ายมือของโทรศัพท์

โทรด่วน

คุณสามารถกำหนดหมายเลขโทรด่วนให้
กับรายชื่อที่คุณโทรหาบ่อยๆ ได้

- 1 กด **เมนู** และเลือก รายชื่อ
จากนั้นเลือก โทรด่วน
- 2 ข้อความเสียงของคุณได้รับการกำหนด
ให้อยู่ที่หมายเลขโทรด่วน 1 ซึ่งคุณ
ไม่สามารถเปลี่ยนแปลงได้ เลือกหมายเลข
อื่นโดยใช้ปุ่มนารีเกดและเลือก
กำหนด หรือโดยการกดปุ่มตัวเลข
- 3 สมุดแอดเดรสจะเปิดขึ้น เลือกรายชื่อ
ที่คุณต้องการกำหนดให้กับหมายเลข
นั้นโดยใช้ปุ่มนารีเกด แล้วเลือก **ตกลง**

ในการโทรออกหมายเลขโทรด่วน
ให้กดหมายเลขที่กำหนดค้างไว้จน
กว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ
เครื่องจะทำการโทรออกโดยอัตโนมัติ
โดยไม่ต้องแตะที่ 

การดูบันทึกการโทร

แตะที่ **เมนู** หรือ  เลือก
ข้อมูลการโทร เลือกเพื่อดู:

ทุกสาย - ดูรายการที่คุณโทรออก, ได้รับ
และไม่ได้รับทั้งหมด

สายไม่ได้รับ - ดูรายการสายที่คุณไม่
ได้รับ

สายโทรออก - ดูรายการหมายเลขที่คุณ
โทรออกทั้งหมด

สายที่ได้รับ - ดูรายการหมายเลขที่โทร
เข้ามาหาคุณทั้งหมด

เวลาโทร - ดูรายละเอียดของระยะเวลาที่
คุณใช้ในการโทร ทั้งรับเข้าและโทรออก

ค่าโทร - ดูค่าโทรที่เรียกเก็บจากการโทร
ครั้งล่าสุดหรือการโทรทั้งหมดของคุณ
บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการ
บางรายอาจไม่ให้การสนับสนุนบริการนี้

รายละเอียดข้อมูล - ดูจำนวนข้อมูลที่
คุณได้รับและส่งทั้งหมดเป็นไบต์

เคล็ดลับ! เลือก ตัวเลือก
จากข้อมูลการโทร และเลือก **ลบ**
เพื่อลบรายการที่เลือก

เคล็ดลับ! จากบันทึกการโทร เลือก
ตัวเลือก และเลือก **ลบ** เพื่อลบรายการที่
บันทึกไว้ที่เลือก หรือรายการที่บันทึก
ไว้ทั้งหมด

การโทร

การใช้การโอนสาย

- 1 แตะที่ **เมนู** หรือ เลือก **ตั้งค่า** แล้วเลือก **การโทร**
- 2 เลือก **การโอนสาย**
- 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อก็ไม่ได้
- 4 เลือก **เปิดใช้** และเลือกว่าจะโอนสายไปยังข้อความเสียง หมายเลขอื่น หรือหมายเลขที่ชื่นชอบของคุณ
- 5 ป้อนหมายเลขการโอนของคุณ หรือเลือก **ค้นหา** เพื่อเบรลล์ **รายชื่อ** เพื่อกำหนดเป็นหมายเลขการโอน

หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม


เคล็ดลับ! ในการปิดการโอนสายทั้งหมด ให้เลือก **ยกเลิกทั้งหมด** จากเมนู **การโอนสาย**

การใช้การจำกัดการโทร

- 1 แตะที่ **เมนู** หรือ เลือก **ตั้งค่า** แล้วเลือก **การโทร**
- 2 เลือก **ป้องกันการโทร**
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้งเจ็ดตัวเลือกนี้:
โทรออกทั้งหมด
สายโทรออกต่างประเทศ
ต่างประเทศ ยกเว้นในประเทศ
สายเรียกเข้าทั้งหมด
สายเข้าเมื่ออยู่ต่างประเทศ
ยกเลิกป้องกันการโทรทั้งหมด
เปลี่ยนรหัสผ่าน
- 4 เลือก **เปิดใช้** และป้อนรหัสป้องกัน โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก **กำหนดเบอร์โทรออก** จากเมนู **การโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การเปลี่ยนแปลงการตั้งค่า การโทร

- 1 แตะที่ **เมนู** หรือ  เลือก **ตั้งค่า**
แล้วเลือก **การโทร**
- 2 จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:

การโอนสาย - เลือกว่าจะโอนสาย
ของคุณหรือไม่

ป้องกันการโทร - เลือกเวลาที่คุณ
ต้องการให้ป้องกันการโทร

กำหนดเบอร์โทรออก - เลือกหมายเลข
ที่สามารถโทรออกจากโทรศัพท์
ของคุณได้

โหมกดตอบรับ - เลือกว่าจะรับสาย
โดยใช้ปุ่มรับสายเท่านั้น, ปุ่มใดๆ
หรือโดยการเลื่อนเปิดเครื่อง

ส่งหมายเลขตัวเอง - เลือกว่าจะ
แสดงหมายเลขของคุณเมื่อคุณโทร
ออกหรือไม่

สายเรียกซ้อน - แจ้งเตือนให้ทราบ
เมื่อมีสายเรียกซ้อน

เดือนทุกนาที - เลือก **เปิด** เพื่อฟัง
เสียงเดือนทุกนาทีในระหว่างที่ใช้สาย

โทรซ้ำอัตโนมัติ - เลือกว่าโทรศัพท์
จะลองหมุนทวนหมายเลขนั้นอีกครั้ง
ในกรณีที่ไม่สามารถต่อสายนั้นได้

ส่งโทร DTMF - คุณสามารถส่งโทร
DTMF (dual tone multi-frequency)
ของหมายเลขบนหน้าจอระหว่างการ
ใช้สายได้ ตัวเลือกนี้จะช่วยในการ
ป้อนรหัสผ่านหรือหมายเลขแอดเคาท์
เมื่อคุณโทรไปยังระบบอัตโนมัติ เช่น
บริการธนาคาร

รายชื่อ

การค้นหารายชื่อ

- 1 เลือก รายชื่อ จากเมนูหลัก และเลือก ค้นหา
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกดหรือปุ่มสัมผัส
- 3 หากต้องการเลื่อนดูรายชื่อและหมายเลขที่ต่างกัน ให้ใช้ลูกศรบนทัชแพด

การเพิ่มรายชื่อใหม่

- 1 แตะที่ **รายชื่อ** แล้วเลือก **รายชื่อใหม่**
- 2 เลือกว่าจะจัดเก็บรายชื่อติดต่อใหม่ของคุณบนโทรศัพท์หรือซิมการ์ด
- 3 ป้อนข้อมูลทั้งหมดที่คุณมีในฟิลด์ที่ให้มา แล้วเลือก **บันทึก**

หรือ ใช้วิธีที่เร็วขึ้นโดย...

- 1 ป้อนหมายเลขที่คุณต้องการจัดเก็บ และกด **ตัวเลือก**
- 2 เลือก **บันทึก** หรือ **เพิ่มในรายชื่อที่มีอยู่**
- 3 ป้อนข้อมูลที่เกี่ยวข้องตามด้านบนและ แตะที่ **บันทึก**

ตัวเลือกต่างๆ ของรายชื่อ

ในเมนูนี้ คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขั้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือก:

- 1 เบ็ดรายชื่อที่คุณต้องการใช้ โปรดดูที่ **การค้นหารายชื่อ** ที่ด้านบน
- 2 แตะที่ **ตัวเลือก** เพื่อเปิดรายการตัวเลือก

จากขั้นตอนนี้ คุณจะสามารถ:

แก้ไข - เปลี่ยนแปลงรายละเอียดของรายชื่อติดต่อ

ข้อความใหม่ - ส่งข้อความไปยังรายชื่อติดต่อ หากรายชื่อติดต่อกับอีเมล แอดเดรส ให้เลือกว่าคุณจะส่ง **ข้อความ** หรือ **อีเมล**

ส่งทาง - ส่งรายละเอียดของรายชื่อติดต่อไปยังบุคคลอื่นในรูปแบบนามบัตร เลือกเพื่อส่งเป็น **ข้อความตัวอักษร**, **ข้อความมัลติมีเดีย**, **ทางบลูทูธ** หรือ **โดยอีเมล**

ลบ - ลบรายชื่อ และที่ **ใช้** เมื่อคุณแน่ใจ

รายชื่อใหม่ - เพิ่มรายชื่อใหม่

ลบมัลติ - เลือกหลายรายชื่อเพื่อลบ

คัดลอกไปยังซิม/โทรศัพท์

- เลือกย้ายหรือคัดลอกไปยังซิมการ์ดหรือตัวเครื่อง (ขึ้นอยู่กับตำแหน่งที่คุณบันทึกรายชื่อตั้งแต่เริ่มแรก)

การเพิ่มรายชื่อให้กับกลุ่ม

คุณสามารถบันทึกรายชื่อต่างๆ ไว้ในกลุ่ม เช่น แยกกลุ่มเพื่อนร่วมงานและครอบครัวออกจากกัน มีกลุ่มที่ได้รับการตั้งค่าไว้ในเครื่องอยู่แล้วจำนวนหนึ่ง ได้แก่ ครอบครัว, เพื่อน, เพื่อนร่วมงาน, วีไอพี, กลุ่ม 1, กลุ่ม 2 และ ไม่มีกลุ่ม

- 1 แตะที่ **รายชื่อ** แล้วเลือก **กลุ่ม**
- 2 เลื่อนไปยังกลุ่มที่คุณต้องการเพิ่มรายชื่อลงไป แล้วแตะที่ **ดู** แล้วเลือก **เพิ่ม**
- 3 รายชื่อของคุณจะเปิดขึ้น เลื่อนไปยังรายชื่อใดๆ ที่คุณต้องการเพิ่มลงในกลุ่ม แล้วแตะที่ , จากนั้นเลือก **เสร็จ**
- 4 แตะที่ **ใช่** เมื่อคุณแน่ใจ

เคล็ดลับ! คุณสามารถกำหนดเสียงเรียกเข้าหรือไอคอนให้กับกลุ่มได้ เลือกกลุ่มที่คุณต้องการกำหนดเสียงเรียกเข้าหรือไอคอน และเลือก **ตัวเลือก** แล้วเลือกรายการที่คุณต้องการ

การเปลี่ยนชื่อกลุ่ม

คุณสามารถเปลี่ยนชื่อกลุ่มต่างๆ เพื่อให้เหมาะกับไลฟ์สไตล์ของคุณได้

- 1 แตะที่ **รายชื่อ** แล้วเลือก **กลุ่ม**
- 2 เลือกกลุ่มที่คุณต้องการแก้ไขชื่อ
- 3 เลือก **ตัวเลือก** เลือก **แก้ไข** และป้อนชื่อกลุ่มใหม่
- 4 เลือก **บันทึก**

หมายเหตุ: คุณสามารถกำหนดรายชื่อเป็นกลุ่ม หรือเพิ่มรูปภาพได้เฉพาะกับรายชื่อที่บันทึกลงในหน่วยความจำโทรศัพท์ (ไม่ใช่ซิม)

การเพิ่มรูปภาพให้กับรายชื่อ

คุณสามารถเปลี่ยนลักษณะที่ปรากฏของรายชื่อของคุณในสมุดโทรศัพท์เพื่อให้มีรูปภาพได้

- 1 แตะที่ **รายชื่อ** แล้วเลือก **ตั้งค่า**
- 2 เลือก **ดูตัวเลือก** แล้วเลือก **พร้อมภาพ**
- 3 จากนั้นกลับไปที่สมุดโทรศัพท์และเลือกรายชื่อที่คุณต้องการเพิ่มรูปภาพ
- 4 เลือก **ตัวเลือก** แล้วเลือก **แก้ไข**

รายชื่อ

5 เลื่อนลงไปทีส่วน **รูปภาพ** เลือก **ตัวเลือก** แล้วเลือก **ภาพ** หรือ **ภาพใหม่** หากคุณเลือก **ภาพ** คุณสามารถเลือกภาพที่บันทึกไว้ในหน่วยความจำโทรศัพท์ของคุณได้ หากคุณเลือก **ภาพใหม่** ช่องมองภาพของกล้องถ่ายรูปจะเปิดขึ้นเพื่อให้คุณถ่ายรูปบุคคลในรายชื่อของคุณถ่ายรูปแล้วกดตั้งค่า

6 เลือก **บันทึก**

การคัดลอกรายชื่อไปยังซิม

คุณสามารถเลือกคัดลอกรายชื่อจากซิมไปยังเครื่องโทรศัพท์ หรือจากเครื่องโทรศัพท์ไปยังซิมของคุณได้

- 1 แตะที่ **รายชื่อ** แล้วเลือก **คัดลอกทั้งหมด**
- 2 เลือกเพื่อคัดลอกรายชื่อจาก **ซิมไปเครื่อง** หรือ **เครื่องไปซิม**
- 3 เลือกว่าจะเก็บรายชื่อต้นฉบับไว้หรือลบทิ้ง
- 4 แตะที่ **ใช่** เมื่อคุณแน่ใจ

การลบรายชื่อทั้งหมด

- 1 แตะที่ **รายชื่อ** แล้วเลือก **ลบทั้งหมด**
- 2 เลือกเพื่อลบรายชื่อจาก **ซิม** หรือ **โทรศัพท์**
- 3 เลือก **ใช่** เมื่อคุณแน่ใจ
- 4 แตะป้อนรหัสผ่าน ซึ่งได้รับการตั้งค่าเริ่มต้นเป็น 0000 การลบของคุณจะได้รับบริการฟอรัมตเลือกตกลง


การดูข้อมูล

แตะที่ **รายชื่อ** แล้วเลือก **ข้อมูล** จากขั้นตอนนี้ คุณสามารถดู **เบอร์บริการ**, **เบอร์ส่วนตัว** และ **นามบัตร** ของคุณได้



เคล็ดลับ! หากคุณยังไม่ได้สร้างนามบัตรหน้าจอ **นามบัตร** จะมีตัวเลือกในการสร้างให้กับคุณ เลือก **สร้าง** และป้อนรายละเอียดที่คุณต้องการสำหรับรายชื่อใดๆ เลือก **บันทึก**

ข้อความ

ข้อความ

โทรศัพท์ KS360 ของคุณประกอบด้วยฟังก์ชันที่เกี่ยวกับ SMS (Short Message Service), MMS (Multimedia Message Service), อีเมล รวมทั้งข้อความบริการของเครือข่าย เพียงแตะที่  แล้วเลือก **ข้อความ**

การส่งข้อความ


- 1 แตะที่ **เมนู** หรือ  เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่** หรือวิธีลัดคือกด  บนปุ่มกดเมื่อสไลด์เปิดอยู่
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS (หากคุณต้องการส่ง **อีเมล** โปรดดูที่หน้า 24 หรือหากคุณต้องการส่งข้อมูลโดยใช้ **บลูทูธ** โปรดดูที่หน้า 56)
- 3 เอดีเตอร์ข้อความใหม่จะเปิดขึ้น เอดีเตอร์ข้อความจะรวม SMS และ MMS เข้าด้วยกันเพื่อให้ใช้งานและสลับระหว่างโหมด SMS และโหมด MMS ได้อย่างง่ายดาย โหมดเริ่มต้นของเอดีเตอร์ข้อความ คือโหมด SMS
- 4 ป้อนข้อความของคุณโดยใช้ปุ่มกด โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับวิธีป้อนข้อความที่หน้า 24

5 แตะที่ **ตัวเลือก** แล้วเลือก **แทรก** เพื่อแทรกภาพ, เสียง, วิดีโอ, สัญลักษณ์, ข้อความอัตโนมัติ, อีโมติคอน, ชื่อ & เบอร์, สไลด์ใหม่, หัวเรื่อง หรืออื่นๆ (รายชื่อ/นามบัตร/นัดหมาย)

6 เลือก **ส่งไปที่**

7 ป้อนหมายเลขโทรศัพท์หรือแตะที่ **ตัวเลือก** และเลือก **รายชื่อ** เพื่อเปิดรายชื่อติดต่อ คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้

8 แตะที่ **ส่ง**

 **คำเตือน:** หากมีการแทรก ภาพ, เสียง, วิดีโอ, สไลด์ใหม่ หรือ หัวเรื่องลงในเอดีเตอร์ข้อความ การส่งข้อความจะถูกแปลงเป็นโหมด MMS และคุณจะถูกเรียกเก็บค่าบริการในอัตราดังกล่าว


ข้อความ

การป้อนข้อความ


คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการสร้างตารางนัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้

ระบบการป้อนตัวอักษรด้วยตนเอง และโหมด 123

หมายเหตุ: ฟิลด์บางฟิลด์อาจใช้โหมดป้อนข้อความได้โหมดเดียว (เช่น หมายเลขโทรศัพท์ในฟิลด์สมุดแอดเดรส)


หากต้องการป้อนสัญลักษณ์ลงในฟิลด์การป้อนข้อความ ให้กดปุ่ม  แล้วเลือกสัญลักษณ์ จากนั้นเลือก ตกลงเลื่อนโดยใช้ปุ่มนavigาเกิดเพื่อแสดงตัวเลือกสัญลักษณ์เพิ่มเติม

เมื่อสิ้นสุดการป้อนค่าหนึ่งค่า ให้เว้นวรรคโดยกด 

หากต้องการลบตัวอักษร ให้แตะที่ปุ่ม 

โหมดป้อนข้อความโดยใช้ปุ่มกด

เมื่อคุณต้องป้อนข้อความ ตัวอย่างเช่น เมื่อเขียนข้อความ ปุ่มกดจะเปลี่ยนเป็นโหมด ABC หากคุณกำลังป้อนตัวเลข ตัวอย่างเช่น เมื่อโทรออก ปุ่มตัวเลขของปุ่มกดจะเปลี่ยนเป็นตัวเลข

ในโหมด ABC คุณสามารถป้อนตัวเลขได้โดยกด  ก่อนแล้วกดตัวเลขที่คุณต้องการ

ตารางตัวอักษรไทย

ปุ่ม	อักษร	Fn	กดแบบมัลติ
Q	๑	๑	
W	๒	1	ใ ท
E	๓	2	ธ
R	พ	3	ภ ถ
T	๔	*	ุ ู
Y	๕	ณ	
U	๖	๗	๘ ๙
I	๗	๘	๙ จ

ปุ่ม	อักษร	Fn	กดแบบมัลติ
O	น	^	ข ช ฐ
P	ย	ค	บ ล
A	ฟ	4	
S	ห	5	ข
D	ก	6	ค ฎ
F	ด	0	โ
G	เ	ฅ	
H	ั	๙	
J	'	๒	*
K	า	<	
L	ส	>	ว ง ช ศ
Z	พ	7	จ
X	ป	8	ฮ
C	แ	9	
V	อ	#	ั
B	ิ	ฅ	

ปุ่ม	อักษร	Fn	กดแบบมัลติ
N	ั	พี	
M	ท	V	ม ฟ ฤ

หมายเหตุ :

อักษร - คือกดปุ่มครั้งเดียวแล้ว
จะปรากฏอักขรนั้นออกมา

Fn - คือกดปุ่ม Fn (ด้ายซ้ายมือ) แล้ว
กดปุ่มใดๆเพื่อเลือกใช้อักขรตามต้องการ
เช่น "ฅ" ให้กด Fn + Y

กดแบบมัลติ - คือกดปุ่มค้างไว้เพื่อ
เลือกใช้ตัวอักษรอื่นๆที่อยู่มในปุ่มเดียวกัน
ตัวอย่างเช่น ต้องการใช้งาน
"ง" คุณต้องกดปุ่ม "L"
ค้างไว้จนกว่าอักษร "ว" ปรากฏพร้อมกัน
แถบสีแล้วท่านจึงกด เพื่อเลือกใช้ตัว
อักษรในกลุ่มแบบมัลติ

ข้อความ

การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ KS360 ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอดเดสส์แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

- 1 แตะที่ **เมนู** หรือ เลือก **ข้อความ** แล้วเลือก **ตั้งค่า**
- 2 เลือก **อีเมล** แล้วเลือก **อีเมลแอดเดสส์**
- 3 แตะที่ **สร้าง**
- 4 คุณเลือกจาก Yahoo, Gmail, MSN หรือ อื่นๆ

การส่งอีเมล

หากต้องการส่ง/รับอีเมล คุณควรตั้งค่าอีเมลแอดเดสส์ (โปรดดูที่ด้านบน)

- 1 แตะที่ เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่**
- 2 เลือก **อีเมล** และอีเมลใหม่จะเปิดขึ้น
- 3 เขียนหัวเรื่อง แล้วแตะที่ **ตกลง**
- 4 ป้อนข้อความของคุณโดยใช้ปุ่มกด
- 5 แตะที่ **ตัวเลือก** แล้วเลือกสิ่งที่แนบที่จะเพิ่ม: **ภาพ, เสียง, วิดีโอ, เอกสาร, รายชื่อ, นามบัตร** และ **นัดหมาย**

- 6 แตะที่ **ส่ง** แล้วป้อนแอตเดรสของผู้รับหรือแตะที่ **ตัวเลือก** แล้วเลือก **รายชื่อ** เพื่อเปิดรายชื่อของคุณ

- 7 แตะที่ **ส่ง** แล้วอีเมลจะถูกส่งออกไป

โฟลเดอร์ข้อความ

แตะที่ **เมนู** หรือ เลือก **ข้อความ** คุณจะรับรู้ ถึงโครงสร้างโฟลเดอร์ที่ใช้ในโทรศัพท์ KS360 ได้ เนื่องจากโฟลเดอร์ต่างๆ มีโครงสร้างที่เข้าใจง่าย

ถาดเข้า - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถาดเข้า จากที่นี่คุณสามารถตอบกลับ, ส่งต่อ และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดที่ด้านล่างนี้

เมลบ็อกซ์ - มีข้อความอีเมลของคุณทั้งหมด เลือกแอดเดสส์ที่คุณต้องการใช้แล้วแตะที่ **เรียกดู** โทรศัพท์ KS360 ของคุณจะเชื่อมต่อกับอีเมลแอดเดสส์และดึงข้อมูลข้อความใหม่ให้คุณ

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่เขียนไว้ที่นี่ได้

ถาดออก - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

ส่ง - ข้อความทั้งหมดที่ส่งออกไปจะอยู่ในโฟลเดอร์ส่ง

ฟังข้อความเสียง - คุณสามารถเข้าไปยังศูนย์ฝากข้อความเสียงของคุณได้ (หากเครือข่ายของคุณให้บริการ) เมื่อคุณได้รับข้อความเสียงข้อความใหม่ สัญลักษณ์ จะปรากฏขึ้นบนหน้าจอ สแตนด์บาย

บริการข้อมูล - บริการข้อมูลและอัปเดตทั้งหมดที่ได้รับจากผู้ให้บริการ

ข้อความอัตโนมัติ - รายการข้อความที่เป็นประโยชน์ ที่ได้เขียนไว้แล้วสำหรับการตอบกลับแบบรวดเร็ว

การจัดการข้อความ

คุณสามารถใช้ **แตะเข้า** ในการจัดการข้อความของคุณได้

1 **แตะที่ เมนู** หรือ  เลือก **ข้อความ** แล้วเลือก **แตะเข้า**

2 **เลือก ตัวเลือก** แล้วเลือก:

ลบ - ลบข้อความที่เลือก

ตอบ - ส่งข้อความตอบกลับไปยังข้อความที่เลือก

ส่งต่อ - ส่งข้อความที่เลือกไปยังบุคคลอื่น

โทรกลับ - โทรออกไปยังบุคคลที่ส่งข้อความ

SMS Chat/แบบทั่วไป - เลือกวิธีการแสดงข้อความในแถบเข้าของคุณ

ข้อมูล - ดูรายละเอียดของข้อความ ตัวอย่างเช่น เวลาที่ส่ง

คัดลอก/ย้าย - คุณสามารถเลือกที่จะคัดลอกหรือย้ายข้อความที่เลือกไปยัง信箱หรือโทรศัพท์ได้

ลบมัลติ - ลบข้อความต่างๆ ที่เลือกไว้

ลบที่อ่านทั้งหมด - ข้อความที่เปิดแล้วทั้งหมดจะถูกลบ

ลบทั้งหมด - คุณสามารถเลือกที่จะลบข้อความทั้งหมดหรือลบเฉพาะข้อความตัวอักษรก็ได้

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความใน信箱** ปรากฏขึ้น คุณควรลบข้อความบางข้อความในแถบเข้าออก

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ** คุณสามารถลบข้อความหรือไฟล์ที่บันทึกออกได้ เพื่อสร้างพื้นที่

การใช้ข้อความอัตโนมัติ


คุณสามารถสร้างข้อความอัตโนมัติสำหรับ **ข้อความตัวอักษร** และ **ข้อความมัลติมีเดีย** ที่คุณส่งบ่อยๆ ได้ มีข้อความอัตโนมัติอยู่ในโทรศัพท์ของคุณอยู่แล้ว ซึ่งคุณสามารถแก้ไขได้หากต้องการ

1 **แตะที่ เมนู** หรือ  เลือก **ข้อความ** แล้วเลือก **ข้อความอัตโนมัติ**

ข้อความ

- เลือก **ข้อความตัวอักษร** หรือ **มีลดีมีเดีย** จากนั้น คุณสามารถเลือก **ตัวเลือก** และเลือก **แก้ไข** เพื่อเปลี่ยนแปลงข้อความอัตโนมัติ ที่มีอยู่ หรือเลือก **ตัวเลือก** เพื่อเพิ่มข้อความอัตโนมัติใหม่ หรือเพื่อลบข้อความอัตโนมัติ
- ในการส่งข้อความอัตโนมัติ ให้เลือกข้อความอัตโนมัติที่คุณต้องการส่งเลือก **ตัวเลือก** และเลือก **ส่งทาง**
- เลือกวิธีที่คุณต้องการส่งข้อความอัตโนมัติ โดยส่งเป็น **ข้อความ**, **ข้อความบลูทูธ** หรือ **อีเมล**
- เลือกรายชื่อแล้วแตะที่ **ส่ง**

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KS360 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า คุณสามารถทำได้โดยใช้ตัวเลือก **ตั้งค่า** แตะที่ **เมนู** หรือ  เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

ชนิดข้อความ -

แปลงข้อความตัวอักษรเป็น เสียง, แฟกซ์, เพจจิ้ง, X.400, อีเมล หรือ ERMES

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

รายงานผลการส่ง - เลือกเพื่อรับการยืนยันว่าข้อความได้ส่งออกไปแล้ว

ค่าบริการตอบกลับ - เลือกเพื่อให้คิดค่าใช้จ่ายกับคุณสำหรับการตอบกลับข้อความของผู้รับ

เบอร์ศูนย์ข้อความ - ป้อนรายละเอียดของศูนย์รับฝากข้อความ

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

ส่งข้อความแบบยาวเป็น - เลือกว่าจะส่งข้อความของคุณเป็น SMS หรือ MMS เมื่อคุณป้อนข้อความที่มีความยาวเกินกว่า 2 หน้าในฟิลด์ข้อความ

ตั้งค่า Bearer - เลือกว่าจะส่งข้อความของคุณทาง GSM หรือ GPRS

การเปลี่ยนการตั้งค่าข้อความ มัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ KS360 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที

หากคุณต้องการเปลี่ยนแปลงการตั้งค่า คุณสามารถทำได้โดยใช้ตัวเลือก **ตั้งค่า**

แตะที่ เมนู หรือ  **เลือก** **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความมัลติมีเดีย**

คุณสามารถเปลี่ยนแปลง:

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความมัลติมีเดีย

ช่วงที่มีผลใช้ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

รายงานผลการส่ง - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานผลการส่ง

รายงานการอ่าน - เลือกเพื่อให้มีและ/หรือส่งรายงานการอ่าน

ดาวนโหลดอัตโนมัติ - เลือกเพื่อดาวนโหลดข้อความมัลติมีเดียโดยอัตโนมัติหรือด้วยตัวเอง ขึ้นอยู่กับว่าคุณใช้เครือข่ายหลักหรือโรมมิ่ง

โปรไฟล์เครือข่าย - เลือกโปรไฟล์เครือข่ายของผู้ให้บริการรายใดรายหนึ่งสำหรับการส่งข้อความมัลติมีเดีย

ประเภทข้อความที่อนุญาต - เลือกประเภทข้อความมัลติมีเดียที่จะอนุญาต

การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นค่าที่คุณกำหนดเองได้

1 **แตะที่ เมนู** หรือ  **เลือก** **ข้อความ** แล้วเลือก **ตั้งค่า**

2 **เลือก อีเมล** ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

อีเมลแอดเดสส์ - คุณสามารถตั้งค่าอีเมลแอดเดสส์

จุดเชื่อมต่อ - คุณสามารถตั้งค่าจุดเชื่อมต่อของอีเมลได้

รอบเวลาการเรียกดู - เลือกความถี่ที่จะให้โทรศัพท์ KS360 ตรวจสอบข้อความอีเมลใหม่

ลายเซ็น - สร้างลายเซ็นในอีเมลและเปิดคุณสมบัตินี้

ข้อความ

การเปลี่ยนการตั้งค่าอื่นๆ

แตะที่ **เมนู** หรือ  เลือก **ข้อความ**
เลือก **ตั้งค่า** จากนั้นเลือก:

ศูนย์ข้อความเสียง - หมายเลขข้อความเสียงของคุณจัดเก็บไว้ที่นี่ ติดต่อที่ผู้ให้บริการระบบเครือข่ายของคุณสำหรับข้อมูลเพิ่มเติมเกี่ยวกับบริการที่มีให้


ข้อความบริการ - เปลี่ยนการตั้งค่าข้อความบริการ


บริการข้อมูล - เลือกสถานะการรับการเตือน และภาษาของบริการข้อมูล

บันทึกข้อความอักษร - เลือกว่าจะบันทึกข้อความตัวอักษรของคุณในหน่วยความจำโทรศัพท์หรือในหน่วยความจำภายนอก

มัลติมีเดีย


การถ่ายภาพด้วย


- 1 กดปุ่มกล้องที่ด้านซ้ายมือของเครื่อง โทรศัพท์ค้างไว้ ช่องมองภาพของ กล้องถ่ายรูปจะปรากฏขึ้นบนหน้าจอ
- 2 ให้อือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่จะถ่าย
- 4 กด  หรือกดปุ่มกล้องถ่ายรูปลงจนสุดเพื่อถ่ายรูป


หมายเหตุ: คุณยังสามารถเข้าใช้เมนูกล้องถ่ายรูปได้จากหน้าจอสแตนด์บาย กด  และเลือก กล้องถ่ายรูป เลือก กล้องถ่ายรูป เพื่อเปิดช่องมองภาพ


ก่อนจะถ่ายภาพ


กด  เพื่อเข้าใช้ตัวเลือกเหล่านี้:

 **เวลาหน่วง** - ตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดปุ่มถ่ายภาพแล้วได้ ให้เลือกจาก 3 วินาที, 5 วินาที หรือ 10 วินาที ซึ่งเหมาะสำหรับการถ่ายภาพกลุ่มที่คุณต้องการเป็นส่วนหนึ่งในกลุ่มด้วย

 **มัลติช็อต** - สามารถเลือกจำนวนช็อตในการถ่ายได้สูงสุดถึง 9 ช็อตเหมาะสำหรับถ่ายภาพเคลื่อนไหว

 **สมดุลแสง** - สมดุลแสงจะช่วยให้คุณมั่นใจได้ว่าสีขาวที่ปรากฏในภาพจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือจาก โหมดอัตโนมัติ, แสงแดด, หลอดไฟ, มืดครึ้ม, ฟลูออเรสเซนต์ หรือกลางคืน

 **เอฟเฟกต์สี** - มีโทนสีให้เลือก 4 แบบ: **ปิด** (ปกติ/สี), **ซีเปีย**, **โมโน** (ขาวดำ) หรือ **เนกาทีฟ**

 **EV** - ค่าการรับแสง - ความเข้มเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืดในภาพ ภาพที่มีระดับความเข้มต่ำจะมีลักษณะมืด ในขณะที่ภาพที่มีความเข้มสูงจะมีลักษณะที่คมชัดกว่า เลือกที่ลูกศร < และ > แล้วเลือกตัวบ่งชี้ความเข้มตามแถบไปทางด้าน - เพื่อให้ได้ภาพที่มีความเข้มลดลงและมืดมากขึ้น หรือไปทางด้าน + เพื่อให้ได้ภาพที่มีความเข้มสูงขึ้นและคมชัดยิ่งขึ้น

มัลติมีเดีย

หลังจากที่ถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ
ชื่อภาพจะแสดงอยู่ที่ด้านล่างของหน้าจอ
และคุณ将会เห็นตัวเลือกหกดแสดงอยู่ที่
ด้านซ้ายของหน้าจอ

ดกลอง - และเพื่อถ่ายอีกภาพหนึ่งทันที
โดยที่ภาพปัจจุบันของคุณจะได้รับการ
บันทึกไว้



ภาพใหม่ - และเพื่อถ่ายอีกภาพ
หนึ่งทันที โดยที่ภาพปัจจุบันของคุณจะ
ได้รับการบันทึกไว้



ตั้งเป็น - และเพื่อเปิดเมนูย่อยเพื่อ
ตั้งคาภาพของคุณเป็น **พื้นหลัง** หรือ **ID**
ภาพ



ส่งทาง - และเพื่อส่งรูปภาพ
เป็น **ข้อความมัลติมีเดีย** หรือ **อีเมล**
โปรดดูที่หน้า 23 สำหรับการส่งข้อความ



อัลบั้ม - และเพื่อดูรูปภาพอื่นๆ
ในอัลบั้มของคุณ โดยที่ภาพปัจจุบันของ
คุณจะได้รับการบันทึกไว้ โปรดดูหน้า 33
สำหรับการดูภาพถ่ายที่บันทึกไว้

ลบ - และเพื่อลบรูปภาพที่คุณเพิ่งถ่าย
และยืนยันโดยการแตะที่ **ใช่**
ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

การใช้การตั้งค่าด่วน

เลือก **ตัวเลือก** เพื่อเข้าใช้ตัวเลือกการตั้ง
ค่าด่วน ซึ่งจะประกอบด้วยตัวเลือกหลากหลาย
สำหรับการถ่ายรูป

กล้องวิดีโอ - เปลี่ยนจากโหมดกล้อง
ถ่ายรูปเป็นโหมดกล้องวิดีโอ

หน้าจอ - เลือกโหมด **มาตรฐาน** หรือ
เต็มจอ

ความละเอียด - โปรดดูที่
การเปลี่ยนขนาดภาพ ในหน้า 33

คุณภาพ - เลือกระหว่าง **ปกติ**, **ละเอียด**
และ **ละเอียดมาก** คุณภาพที่ละเอียด
มากขึ้นเท่าใด ความคมชัดของภาพถ่าย
ก็มากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตาม
ไปด้วย ซึ่งหมายความว่า คุณจะ
สามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อย
ลง

หน้าจอกริด - คุณสามารถตั้งค่าเส้นแนว
บนหน้าจอช่องมองภาพของคุณได้ เลือก
ปิด, **อย่างง่าย** หรือ **สามส่วน**

บันทึกใน - เลือกว่าจะบันทึกรูปภาพของ
คุณไว้ในหน่วยความจำโทรศัพท์หรือใน
หน่วยความจำภายนอก


รีเซ็ตการตั้งค่า - เลือก **ใช่** เพื่อรีเซ็ต
โทรศัพท์ของคุณไปเป็นการตั้งค่าดั้งเดิม
ของกล้อง

การเปลี่ยนขนาดภาพ

คุณสามารถเปลี่ยนขนาดของรูปภาพเพื่อประหยัดพื้นที่หน่วยความจำ จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือการใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์ให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 **แตะที่ ตัวเลือก แล้วเลือก ความละเอียด** จากแถบเครื่องมือ
- 2 **เลือกค่าพิกเซล** จาก 4 ตัวเลือกดังนี้ (320X240, 640X480, 1280X960, 1600X1200)
- 3 **เลือกตัวเลือกขนาดที่คุณต้องการใช้ และแตะที่ ตกลง** เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก

การดูภาพถ่ายที่บันทึกไว้

- 1 **คุณสามารถเข้าดูภาพถ่ายที่บันทึกไว้ได้จากภายในโหมดกล้อง** ถ่ายรูปและจากหน้าจอสแตนด์บาย จากช่องมองภาพ เพียงกด อัลบั้ม จากหน้าจอสแตนด์บาย คุณควรกดเมนู หรือ  จากนั้นเลือก แฟ้มข้อมูล และ ภาพ
- 2 **คลังภาพของคุณจะปรากฏบนหน้าจอ**
- 3 **ใช้ลูกศรเพื่อเลือกรูปภาพที่คุณต้องการดู และแตะที่ ดู** เพื่อขยายภาพ

การตั้งค่าภาพถ่ายเป็นภาพพื้นหลัง หรือ ID ภาพ


จากคลังภาพของคุณ ใช้ลูกศรบนทัชแพดเพื่อเลือกภาพ และแตะที่ **ตั้งเป็น** เพื่อใช้ภาพที่เลือกเป็น **พื้นหลัง** หรือ **ID ภาพ** สำหรับรายชื่อของคุณหนึ่งรายชื่อ เมื่อคุณตั้งค่ารูปภาพเป็น ID ภาพ คุณสามารถเลือกส่วนของภาพที่จะใช้ได้

หมายเหตุ: สามารถเพิ่ม ID ภาพลงในรายชื่อที่บันทึกอยู่ในเครื่องเท่านั้น ไม่ใช้ในซิม

การถ่ายวิดีโอด้วย

- 1 **กดปุ่มกล้องที่ด้านซ้ายมือของเครื่อง** โทรศัพท์อย่างรวดเร็ว
- 2 **เลือก กล้องวิดีโอ**
- 3 **หันเลนส์ไปทางวัตถุที่ต้องการถ่าย**
- 4 **กดปุ่มกล้องถ่ายรูปที่ด้านซ้ายมือของตัวเครื่อง** เพื่อเริ่มต้นการบันทึก
- 5 **REC** จะปรากฏขึ้นในมุมขวาด้านล่างของช่องมองภาพ และตัวตั้งเวลาจะแสดงระยะเวลาของวิดีโอของคุณ
- 6 **ในการหยุดบันทึกภาพวิดีโอชั่วคราว** ให้แตะที่ **พัก** และเริ่มบันทึกต่อโดยเลือก **ต่อ**
- 7 **แตะที่ หยุด** เพื่อหยุดการบันทึก


มัลติมีเดีย


หมายเหตุ: คุณยังสามารถเข้าใช้ กล้องวิดีโอ ได้จากหน้าจอสดแบบฉาย กด  และเลือก กล้องถ่ายรูป เลื่อนลงไปแล้วเลือก กล้องวิดีโอ เพื่อเปิดช่องมองภาพ

หลังจากที่ถ่ายวิดีโอแล้ว

ชื่อวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ และตัวเลือกหกดตัวเลือกจะแสดงขึ้นที่ด้านซ้ายของหน้าจอ


ตกลง - แตะเพื่อบันทึกวิดีโอเรื่องอื่นทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 **วิดีโอใหม่** - แตะเพื่อบันทึกวิดีโอใหม่ทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 **เล่น** - แตะเพื่อเล่นวิดีโอที่คุณเพิ่งบันทึก

 **ส่งทาง** - แตะเพื่อส่งวิดีโอเป็นข้อความมัลติมีเดีย หรือ

อีเมล โปรดดูหน้าที่ 23 สำหรับการส่งข้อความ

 **อัลบั้ม** - แตะเพื่อดูวิดีโอคลิปอื่นๆในอัลบั้มของคุณ โดยที่วิดีโอคลิปปัจจุบันของคุณจะได้รับการบันทึกไว้ โปรดดูหน้าที่ 35 สำหรับการดูวิดีโอที่บันทึกไว้

ลบ - แตะเพื่อลบวิดีโอที่คุณเพิ่งบันทึก และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

ทำความเข้าใจกับช่องมองภาพ

หมายเหตุ: คุณสามารถปรับการซูมโดยใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายของโทรศัพท์

การใช้การตั้งค่าด่วน

เลือก **ตัวเลือก** เพื่อเข้าใช้ตัวเลือกการตั้งค่าด่วน ซึ่งจะมีตัวเลือกหลากหลายสำหรับการบันทึกวิดีโอ

กล้องถ่ายรูป - เปลี่ยนจากโหมดกล้องวิดีโอเป็นโหมดกล้องถ่ายภาพนิ่ง

หน้าจอ - เลือกโหมด มาตรฐาน หรือ เต็มจอ

ความละเอียด - หากคุณต้องการเก็บวิดีโอลงในโทรศัพท์ของคุณให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อทำให้ไฟล์มีขนาดเล็กลงได้ เลือกตัวเลือก **320 x 240** หรือ **176 x 144** สำหรับวิดีโอของคุณ

คุณภาพ - ละเอียดมาก/ ละเอียด/ ปกติ

บันทึกใน - เลือกว่าจะบันทึกวิดีโอคลิปของคุณไว้ในหน่วยความจำโทรศัพท์หรือในหน่วยความจำภายนอก

รีเซตการตั้งค่า - เลือก **ใช่** เพื่อรีเซ็ต
โทรศัพท์ของคุณไปเป็นการตั้งค่าตั้ง
เดิมของวิดีโอ

การดูวิดีโอที่บันทึกไว้

- 1 คุณสามารถเข้าดูวิดีโอที่บันทึก
ไว้ได้จากภายในโหมดกล้องวิดีโอ
หรือจากหน้าจอแสดงต้นฉบับ
จากช่องมองภาพ ให้เลือก อัลบั้ม
จากหน้าจอแสดงต้นฉบับ คุณควรรกด
เมนู หรือ **OK** จากนั้นเลือก แฟ้มข้อมูล
และ วิดีโอ
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 ใช้ปุ่มนาวิเกตเพื่อเลือกวิดีโอที่คุณต้อง
การดู และกด **OK** เพื่อดู

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น
ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือ
ของเครื่องโทรศัพท์ ระดับเสียงจะแสดง
อยู่ที่ด้านล่างวิดีโอทางด้านซ้ายมือ

เครื่องเล่น MP3

LG KS360 มีเครื่องเล่น MP3 ภายในตัว
ที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบ
ทั้งหมดได้

ในการเข้าใช้งานเครื่องเล่น MP3
ให้กด เมนู และเลือก **OK** มัลติมีเดีย
และ เครื่องเล่น MP3 จากขั้นตอนนี้
คุณสามารถเข้าใช้งาน:

ทุกเพลง - ประกอบด้วยเพลงทั้งหมดที่
มีในโทรศัพท์

รายการเพลงส่วนตัว - ประกอบด้วย
รายการเพลงที่คุณสร้างไว้ รวมถึง
รายการ OTL, เพลงล่าสุด และ
เพลงที่ชอบ

ตั้งค่า - ปรับการตั้งค่าเพลง







การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์
เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ
หรือสายสำหรับซิงโครไนซ์ ในการโอน
ไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้
เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือก
เพื่อส่งทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์
บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์ควรปรากฏอยู่ใน **ทุกเพลง**

มัลติมีเดีย

การเล่นเพลง

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **มัลติมีเดีย** แล้วเลือก **เครื่องเล่น MP3**
- 2 เลือกเพลงที่คุณต้องการเล่น แตะที่ 
- 3 เลื่อน  เพื่อหยุดเล่นเพลงชั่วคราว
- 4 เลื่อน  เพื่อข้ามไปยังเพลงถัดไป
- 5 เลื่อน  เพื่อข้ามไปยังเพลงก่อนหน้า
- 6 เลื่อน  เพื่อหยุดเล่นเพลง และกลับไปเมนูเพลง

เคล็ดลับ! ในการเปลี่ยนระดับเสียงขณะฟังเพลง ให้ใช้ปุ่มระดับเสียงที่ด้านซ้ายของโทรศัพท์ หรือปุ่มนาฬิกาเข็มนาฬิกาและลง

การใช้ตัวเลือกขณะเล่นเพลง

เลือก **ตัวเลือก** และเลือก:

เล่นแบ็คกราวนด์ - ขอนหน้าจอเครื่องเล่นเพลง เพื่อให้คุณสามารถใช้งานโทรศัพท์ต่อไปได้ตามปกติขณะเล่นเพลง

ดูรายการเพลง - ดูรายการเพลงที่คุณกำลังฟังอยู่

ค้นหา - ค้นหาแทร็คจากรายการเพลงในโทรศัพท์

เพิ่มในรายการเพลง- เพิ่มเพลงปัจจุบันลงในรายการเพลง

ตั้งเป็นเสียงเรียกเข้า - ตั้งเพลงปัจจุบันเป็นเสียงเรียกเข้า

ข้อมูล - คุณสามารถดูข้อมูลเกี่ยวกับไฟล์เพลงที่คุณกำลังฟังได้



ตั้งค่า - เปลี่ยน **อีควอไลเซอร์** หรือ **โหมดการเล่น** หรือ **ตั้งการสลับเปลี่ยน** เพื่อปรับค่าการเล่นเพลง

การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโฟลเดอร์ทุกเพลง


- 1 แตะที่  แล้วเลือก **มัลติมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 กด **สร้าง** ป้อนชื่อรายการเพลง และกด **บันทึก**
- 4 โฟลเดอร์ รายการเพลงใหม่จะปรากฏขึ้น เลือกเพลงทั้งหมดที่คุณต้องการรวมในรายการเพลงโดยเลื่อนไปที่เพลง และเลือก 
- 5 แตะที่ **บันทึก** เพื่อจัดเก็บรายการเพลง

การเล่นรายการเพลง

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **มีลติมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 เลือกรายการเพลงที่คุณต้องการเล่น แล้วแตะที่ **ดู** และเลือก 

การแก้ไขรายการเพลง

ในบางครั้ง คุณอาจต้องการเพิ่มเพลงหรือลบเพลงออกจากรายการเพลง หากคุณต้องการจัดเรียงรายการเพลงของคุณ คุณสามารถแก้ไขได้โดยใช้เมนู **ตัวเลือก**

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **มีลติมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 เลื่อนไปที่รายการเพลงที่คุณต้องการแก้ไข แล้วแตะที่ **ดู** แล้วเลือก **ตัวเลือก** เลือก:
 - เล่น** - คุณสามารถเล่นเพลงที่เลือกได้
 - เพิ่ม** - คุณสามารถเพิ่มเพลงลงในรายการเพลงโดยใช้ตัวเลือกนี้

ลบ - ลบเพลงออกจากรายการเพลง
เลือก **ใช่** เพื่อยืนยัน


เลื่อนขึ้น/ลงในรายการเพลง

ลบบัลลิตี - เลือกและลบเพลงออกจากรายการเพลง

ลบทั้งหมด - ลบเพลงทั้งหมดออกจากรายการเพลง

ข้อมูล - ดูข้อมูลรายการเพลง

การลบรายการเพลง

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **มีลติมีเดีย**
- 2 เลือก **เครื่องเล่น MP3** แล้วเลือก **รายการเพลงส่วนตัว**
- 3 เลื่อนไปที่รายการเพลงที่คุณต้องการลบ แล้วแตะที่ **ตัวเลือก**
- 4 เลือก **ลบทั้งหมด** แล้วเลือก **ใช่** เพื่อยืนยัน

มัลติมีเดีย

หมายเหตุ:

ผลลัพธ์ของระบบจัดการสิทธิ์ดิจิทัล (DRM) มีเดียบางรายการที่คุณดาวน์โหลดจากอินเทอร์เน็ตหรือได้รับจาก MMS อาจมีเมนู "ส่งข้อสิทธิ์" เพื่อเข้าใช้มีเดียเหล่านั้น คุณสามารถครอบครองคีย์ที่จะส่งข้อสิทธิ์จากเว็บไซต์ที่เป็นเจ้าของสิทธิ์ในเนื้อหานั้น

เพลงได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำ หรือคัดลอกเพลงในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ เมื่อเล่นเพลง MP3 ด้วยเครื่องเล่น MP3 คุณสามารถใช้โหมด BGM ได้หากคุณกดปุ่ม MP3 ครึ่งหนึ่งในโหมด BGM คุณสามารถเล่นเพลง MP3 ขณะที่ใช้งานฟังก์ชันอื่นๆ อยู่ได้ คุณสามารถหยุด BGM บนหน้าจอเครื่องเล่น MP3 ได้

การใช้วิทยุ FM

LG KS360 มีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบชุดหูฟังเพื่อรับฟังวิทยุ เสียบปลั๊กเข้ากับช่องเสียบที่ตัวเครื่อง (เป็นช่องเสียบเดียวกับที่ใช้สำหรับชาร์จ)


การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณสามารถบันทึกได้สูงสุด 12 ช่องสถานีในโทรศัพท์ของคุณ

ในการปรับตั้งอัตโนมัติ:


- 1.แตะที่ **เมนู** หรือ  แล้วเลือก **มัลติมีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2.เลือก **ตัวเลือก** เลือก **สแกนอัตโนมัติ** แล้วเลือก **ใช่**
- 3.แต่ละครั้งที่พบสถานี โทรศัพท์ KS360 จะถามคุณว่าคุณต้องการบันทึกหรือไม่ เลือก **ใช่**
หากคุณต้องการจัดเก็บช่องและ **ไม่** หากคุณไม่ต้องการ สถานีที่คุณเลือกบันทึกจะถูกกำหนดไว้ในหมายเลขของสถานีในโทรศัพท์ โดยอัตโนมัติ

ในการปรับตั้งด้วยตนเอง:


- 1 **แตะที่ เมนู หรือ  แล้วเลือก มัลติมีเดีย จากนั้นเลือก วิทยุ FM**
- 2 **เลือกหมายเลขช่องสถานีที่ต้องการบันทึกสถานีไว้ และเลือก แก๊ซ**
- 3 **หากต้องการป้อนสถานี คุณสามารถใช้ลูกศรบนทัชแพดในการค้นหา หรือคุณสามารถป้อนความถี่โดยใช้ปุ่ม กด จากนั้นเลือก บันทึก**

หมายเหตุ: คุณยังสามารถแก๊ซสถานีที่คุณบันทึกไว้แล้วในหมายเลขช่องได้

การรีเซ็ตสถานี

- 1 **แตะที่ เมนู หรือ  แล้วเลือก มัลติมีเดีย จากนั้นเลือก วิทยุ FM**
- 2 **เลือก ตัวเลือก แล้วเลือก รีเซ็ตช่อง เลือก ใช่ เพื่อยืนยันการรีเซ็ต ช่องสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz**

การฟังวิทยุ




- 1 **แตะที่ เมนู หรือ  แล้วเลือก มัลติมีเดีย จากนั้นเลือก วิทยุ FM**
- 2 **เลือกหมายเลขช่องของสถานีที่คุณต้องการฟัง**

หมายเหตุ: คุณสามารถฟังวิทยุผ่านทางลำโพงในตัวเครื่องได้ กด ตัวเลือก เลือก ฟังผ่าน และเลือก ลำโพง

การใช้เครื่องบันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียงเดือนความจำหรือเสียงอื่นๆ

การบันทึกเสียงเดือนของคุณ

- 1 **แตะที่ เมนู หรือ  แล้วเลือก มัลติมีเดีย จากนั้นเลือก เครื่องบันทึกเสียง**
- 2 **แตะที่  เพื่อเริ่มบันทึก**
- 3 **เลือก พัก เพื่อหยุดการบันทึกชั่วคราว**
- 4 **เลือก บันทึก เพื่อสิ้นสุดการบันทึกเสียง**
- 5 **เลือก  เพื่อฟังการบันทึก**

หมายเหตุ: คุณสามารถฟังการบันทึกเสียงทั้งหมดที่คุณบันทึกไว้ได้โดยการเลือก อัลบั้ม

การส่งการบันทึกเสียง

- 1 **เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้เลือก ตัวเลือก**
- 2 **เลือก ส่งทาง แล้วเลือกจาก ข้อความมัลติมีเดีย, บลูทูธ หรือ อีเมล หากคุณเลือก ข้อความ หรือ อีเมล รายการที่บันทึกจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ**

เพิ่มข้อมูล

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

ไฟล์มัลติมีเดียของคุณทั้งหมดจะบันทึกอยู่ใน **เพิ่มข้อมูล** และที่ **เมนู** หรือ **OK** แล้วเลือก **เพิ่มข้อมูล** เพื่อเปิดรายการโฟลเดอร์

ภาพ

ภาพ ประกอบด้วยโฟลเดอร์ของภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า, ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

เมนูตัวเลือกสำหรับภาพ

ตัวเลือกที่มีอยู่ใน **ภาพ** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก **ตัวเลือกทั้งหมด** จะใช้ได้กับรูปภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ สำหรับภาพเริ่มต้นจะใช้ได้เฉพาะตัวเลือก **ดู**, **ตั้งเป็น**, **ข้อมูลไฟล์**, **ภาพสไลด์**, **เรียงลำดับตาม** และ **แบบรายการ**

ในโฟลเดอร์ **ภาพ** ให้เลือก **ตัวเลือก** เพื่อแสดงรายการตัวเลือก

ลบ - ลบภาพที่เลือก

ตั้งเป็น - ตั้งค่าภาพที่เลือกเป็น **พื้นหลัง** หรือตั้งเป็น **ID ภาพ** ได้

ส่งทาง - ส่งภาพที่เลือกให้กับเพื่อนผ่านทาง **ข้อความมัลติมีเดีย**, **บลูทูธ** หรือ **อีเมล**

หมายเหตุ: อาจจำเป็นต้องลดขนาดภาพก่อนที่จะสามารถส่งทาง MMS ได้

ไฟล์ - แก่ภาพ, แก่ชื่อ, สร้างแอนิเมชันหรือดูข้อมูล (ชื่อ, ขนาด, วันที่, เวลา, ความละเอียด, ประเภท และ ลิขสิทธิ์) ของภาพที่เลือก หากคุณติดตั้งการ์ดหน่วยความจำภายนอกไว้ จะมีตัวเลือกเพิ่มเติมปรากฏขึ้นสองรายการ คือ ย้ายไปที่หน่วยความจำภายนอก และ คัดลอกไปยังหน่วยความจำภายนอก

พิมพ์ผ่าน - พิมพ์ไฟล์ภาพผ่าน บลูทูธ หรือ Pictbridge

ภาพสไลด์ - ดูภาพสไลด์ของภาพโปรดดูการสร้างภาพ สไลด์ในหน้า 42

โฟลเดอร์ใหม่ - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์ภาพหลัก


หลายรายการ - เลือกภาพมากกว่าหนึ่งภาพเพื่อลบ

ลบทั้งหมด - ลบภาพทั้งหมดในโฟลเดอร์ภาพของคุณ


เรียงลำดับตาม - เรียงภาพของคุณตามวันที่, ประเภท หรือ ชื่อ

แบบรายการ - เปลี่ยนวิธีการดูภาพถ่ายของคุณ


การส่งภาพถ่าย

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **ภาพ**
- 3 เลือกรูปภาพ และเลือก **ตัวเลือก**
- 4 เลือก **ส่งทาง** แล้วเลือก **ข้อความมัลติมีเดีย, บลูทูธ** หรือ **อีเมล**
- 5 หากคุณเลือก **ข้อความมัลติมีเดีย** หรือ **อีเมล** ภาพถ่ายจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป


การจัดการรูปภาพ

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **ภาพ**
- 3 เลือก **ตัวเลือก** แล้วเลือก **เรียงลำดับตาม**
- 4 เลือกจาก **วันที่, ประเภท** หรือ **ชื่อ**

การลบรูปภาพ

- 1 แตะที่  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **ภาพ**
- 3 เลือกภาพและเลือก **ตัวเลือก**
- 4 เลือก **ลบ** และยืนยันโดยการกด **ใช่**

การลบหลายภาพ


- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **ภาพ**
- 3 เลือก **ตัวเลือก** และเลือก **หลายรายการ** และ **ลบ**
- 4 จะมีช่องปรากฏขึ้นที่ด้านข้างภาพแต่ละภาพ เลือก เพื่อเลือกแต่ละภาพในการยกเลิกการเลือกภาพ ให้เลือก อีกครั้ง เพื่อลบเครื่องหมายออกจากช่อง หรือคุณสามารถเลือก **ตัวเลือก** แล้วเลือก **เลือกทั้งหมด** หรือ **ไม่เลือกทั้งหมด**

เพิ่มข้อมูล

- 5 เมื่อคุณทำเครื่องหมายที่ช่องต่างๆ ตามต้องการแล้ว ให้เลือก **ลบ** และยืนยันว่าคุณต้องการลบภาพที่เลือกไว้ทั้งหมด

การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ หรือดูภาพที่มีอย่างรวดเร็ว คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ



- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **ภาพ**
- 3 เลือกภาพถ่ายที่คุณต้องการเริ่มเล่นภาพสไลด์ และแตะที่ **ตัวเลือก**
- 4 เลือก **ภาพสไลด์** จากนั้นภาพสไลด์จะเริ่มต้น
- 5 แตะที่ **พัก** เพื่อหยุดภาพสไลด์ชั่วคราว และ **ออก** เพื่อสิ้นสุดการแสดงผลภาพสไลด์และกลับไปโฟลเดอร์ **ภาพ**

ระหว่างภาพสไลด์ กด **ตัวเลือก** เพื่อเลือกกระหว่าง ภาพเต็ม และ เต็มหน้าจอ เลือก **ทิวทัศน์** เพื่อเปลี่ยนแนวตำแหน่งของภาพ

เสียง

โพลเดอร์ เสียง ประกอบด้วย เสียงเริ่มต้น, การบันทึกเสียงของคุณ และไฟล์เสียงที่คุณดาวน์โหลด


การใช้เสียง

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลื่อนไปที่ภาพและเลือก **เสียง**
- 3 เลือก **เสียงเริ่มต้น** หรือเลือกจากรายการไฟล์บันทึกเสียง
- 4 เลือกเสียง แล้วกด  เพื่อฟัง
- 5 แตะที่ **ตัวเลือก** เลือก **ตั้งเป็น** แล้วเลือก **เสียงเรียกเข้า** และ **ID เสียงเรียกเข้า เสียงข้อความ**

วิดีโอ

โพลเดอร์ วิดีโอ จะแสดงรายการวิดีโอที่ดาวน์โหลด และวิดีโอที่ได้บันทึกไว้ในโทรศัพท์

การดูวิดีโอ

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลื่อนไปที่และเลือก **วิดีโอ**
- 3 เลือกวิดีโอ แล้วแตะที่ 

การใช้ตัวเลือกขณะหยุดวิดีโอชั่วคราว


ด้วยการเลือก **ตัวเลือก** วิดีโอที่คุณกำลังเล่นจะอยู่ในโหมดพักและคุณสามารถเลือกจาก:

ลบ - ลบวิดีโอ

ส่งทาง - ส่งวิดีโอให้กับเพื่อนผ่านทาง **ข้อความ** มัลติมีเดีย, **บลูทูธ** หรือ **อีเมล**

ข้อมูล - ดูชื่อ ขนาด วันที่ เวลา ประเภท และรายละเอียดลิขสิทธิ์ของไฟล์ที่เลือก

การส่งวิดีโอคลิก

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลื่อนไปที่และเลือก **วิดีโอ**
- 3 เลือกวิดีโอคลิกที่คุณต้องการและแตะที่ **ตัวเลือก**
- 4 แตะที่ **ส่งทาง** แล้วเลือก **ข้อความ** มัลติมีเดีย, **บลูทูธ** หรือ **อีเมล**
- 5 หากคุณเลือก **ข้อความ** หรือ **อีเมล** วิดีโอคลิกจะแนบไปกับข้อความและคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

หมายเหตุ: อาจจำเป็นต้องลดขนาดวิดีโอก่อนจึงจะสามารถส่งทาง MMS ได้ วิดีโอบางเรื่องอาจมีขนาดใหญ่จนไม่สามารถส่งทาง MMS ได้

การใช้เมนูตัวเลือกของวิดีโอ

ในโพลเดอร์ วิดีโอ

ให้เลื่อนแถบไปที่วิดีโอ และกด **ตัวเลือก** เพื่อแสดงรายการตัวเลือกต่อไปนี้

ลบ - ลบวิดีโอที่เลือก

ส่งทาง - ส่งวิดีโอที่เลือกให้กับเพื่อนผ่านทาง **ข้อความ** มัลติมีเดีย, **อีเมล** หรือ **บลูทูธ**

ไฟล์ - แก่ชื่อวิดีโอ, ย้ายไปยังโพลเดอร์อื่น หรือดูข้อมูล (ชื่อ, ขนาด, วันที่, ความละเอียด, ประเภท และลิขสิทธิ์) หากคุณติดตั้งการดหน่วยความจำภายนอกไว้ จะมีตัวเลือกเพิ่มเติมปรากฏขึ้นสองรายการ คือ **ย้ายไปที่หน่วยความจำภายนอก** และ **คัดลอกไปยังหน่วยความจำภายนอก**

โพลเดอร์ใหม่ - สร้างโพลเดอร์ใหม่ภายในโพลเดอร์วิดีโอหลัก

ลบมัลติ- เลือกวิดีโอคลิกมากกว่าหนึ่งรายการก่อนแตะที่ **ลบ**

ลบทั้งหมด - ลบคลิกทั้งหมดในโพลเดอร์ วิดีโอของคุณ

เพิ่มข้อมูล

ส่งทาง - ส่งวิดีโอที่เลือกให้กับเพื่อนผ่านทาง ข้อความมัลติมีเดีย, อีเมล หรือ บลูทูธ

เล่นรายการต่อไปอัตโนมัติ - ให้คุณตั้งค่าโหมดการเล่นได้ดังนี้: ปิด, ซ้ำครั้งเดียว และ ซ้ำทั้งหมด


- **ปิด:** เล่นไฟล์ที่เลือก
- **ซ้ำครั้งเดียว:** เล่นไฟล์ทั้งหมดในรายการเพียงรอบเดียว
- **ซ้ำทั้งหมด:** เล่นไฟล์ทั้งหมดในรายการอย่างต่อเนื่องซ้ำๆ

รายการ / ภาพขนาดย่อ - เปลี่ยนวิธีการแสดงภาพวิดีโอของคุณ

เอกสาร

จากเมนู เอกสาร

การดูเอกสาร

- 1 ดแตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล**
- 2 เลือก **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **ดู**

อื่นๆ

โพลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ, เสียง หรือวิดีโอ ซึ่งมีวิธีใช้เดียวกับโพลเดอร์ **เอกสาร**

คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโพลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโพลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้

หน่วยความจำนอก

หากคุณใส่การ์ดหน่วยความจำ หน้าจอจะแสดงเป็นโพลเดอร์ใน **เพิ่มข้อมูล** โพลเดอร์หน่วยความจำภายนอกจะถูกแบ่งเพิ่มเติมเป็น 5 โพลเดอร์: ภาพ, เสียง, วิดีโอ, เอกสาร และอื่นๆ แต่ละโพลเดอร์จะมีไฟล์ทั้งหมดของประเภทนั้นๆ ซึ่งบันทึกในการ์ดหน่วยความจำ แทนการบันทึกในเครื่อง

เกมส์&แอปฯ

เกมส์&แอปฯ

โทรศัพท์ KS360 มีมาให้พร้อมทั้งเกมส์เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในโฟลเดอร์นี้


การเล่นเกมส์

- 1 ดแตะที่ **เมนู** หรือ  แล้วเลือก **เกมส์&แอปฯ** และ **เกมส์**
- 2 คุณสามารถดาวน์โหลดเกมส์จาก **ไซด์** และสนุกสนานไปกับเกมส์ได้

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้ โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ


การดูแอปพลิเคชัน

คุณสามารถจัดการแอปพลิเคชัน Java ที่ติดตั้งในโทรศัพท์ของคุณได้โดยใช้ **เมนู แอปพลิเคชัน** และคุณยังสามารถลบแอปพลิเคชันที่ดาวน์โหลดมาได้

- 1 ดแตะที่ **เมนู** หรือ  แล้วเลือก **เกมส์&แอปฯ** และ **แอปพลิเคชัน**
- 2 ดูและจัดการแอปพลิเคชันใดๆ ที่คุณมี


การเปลี่ยนแปลงโปรไฟล์เครือข่าย

หากต้องการดาวน์โหลดเกม คุณสามารถตั้งค่าให้เชื่อมต่อกับเครือข่ายโดยใช้ **โปรไฟล์เครือข่าย** ได้

- 1 ดแตะที่ **เมนู** หรือ  แล้วเลือก **เกมส์&แอปฯ** และ **โปรไฟล์เครือข่าย**
- 2 คุณสามารถเพิ่มและแก้ไขโปรไฟล์เครือข่ายใหม่ได้

ออกแกในเซอร์&เครื่องมือ

การเพิ่มเหตุการณ์ลงในปฏิทิน

1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **ออกแกในเซอร์** จากนั้นเลือก **ปฏิทิน**

2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์ คุณสามารถเลือกวันที่โดยการเลื่อนไปยังวันที่โดยใช้ลูกศรบนทัชแพด หรือโดยการเลือก **ตัวเลือก** และป้อนวันที่ด้วยตนเอง

3 เลือก ตารางใหม่ และเลื่อนลงไปที่ป้อนเวลาที่คุณต้องการให้เริ่มเหตุการณ์ของคุณเลื่อนลงและป้อนเวลาสิ้นสุดของเหตุการณ์ของคุณ

4 เลื่อนลงอีกครั้งและเลือกว่าคุณต้องการตั้ง **เตือน** ให้กับเหตุการณ์ของคุณหรือไม่ เลื่อนไปทางซ้ายหรือขวาเพื่อดูตัวเลือกต่างๆ ที่มีอยู่ คุณสามารถตั้งให้ส่งเสียงเตือนเมื่อถึงเวลาเริ่มเหตุการณ์หรือตั้งระยะเวลาก่อนที่จะเกิดเหตุการณ์จะเริ่มขึ้นเพื่อนเตือนให้ทราบถึงเหตุการณ์ที่กำลังจะเริ่มขึ้น

5 เลื่อนลงและป้อนชื่อ **เรื่อง** ให้กับเหตุการณ์ โดยใช้ปุ่มกดในกรพิมพ์ตัวอักษรและตัวเลข

6 เลื่อนลงอีกครั้งเพื่อกำหนดว่าเป็นเหตุการณ์ที่เกิดขึ้นเพียงครั้งเดียวหรือเกิดขึ้นซ้ำ **ทีเดียว, ทุกวัน, ทุกสัปดาห์, ทุกเดือน** หรือ **รายปี** หากเป็นเหตุการณ์ที่เกิดขึ้นซ้ำคุณสามารถเลื่อนลงเพื่อป้อน **วันที่หมดอายุ** เพื่อสิ้นสุดเหตุการณ์ได้

7 เลือก **บันทึก** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเคอร์เซอร์สีเหลี่ยมกำกับอยู่

การแก้ไขเหตุการณ์ในปฏิทิน


1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **ออกแกในเซอร์** จากนั้นเลือก **ปฏิทิน**

2 เลือก **ตัวเลือก** และเลือก **นัดหมายทั้งหมด** เพื่อดูรายการเหตุการณ์ทั้งหมดของคุณ เลื่อนไปที่เหตุการณ์ที่คุณต้องการแก้ไขและเลือก **ดู** หรือเลือกวันที่เกิดเหตุการณ์ในปฏิทิน และเลือก **ด**


3 เลือก **แก้ไข** และเลื่อนไปที่รายละเอียดเหตุการณ์ที่คุณต้องการเปลี่ยนแปลงทำการเปลี่ยนแปลงและแตะที่ **บันทึก** เพื่อจัดเก็บเหตุการณ์ที่แก้ไข นั้น

หมายเหตุ: คุณสามารถลบเหตุการณ์ ออกจากปฏิทินของคุณโดยการเลือก เพื่อดู เหตุการณ์ แล้วแตะที่ **ตัวเลือก** และ **ลบ**

การแบ่งปันเหตุการณ์ในปฏิทิน


- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **ออกแกในเซอร์** จากนั้นเลือก **ปฏิทิน**
- 2 เลือกเหตุการณ์ที่คุณต้องการแบ่งปัน และเลือก **ตัวเลือก**
- 3 เลือก **ส่งทาง** และเลือก **ข้อความตัวอักษร**, **ข้อความมัลติมีเดีย**, **บลูทูธ** หรือ **อีเมล**

การเพิ่มบันทึก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **ออกแกในเซอร์** จากนั้นเลือก **บันทึก**
- 2 เลือก **สร้าง** และพิมพ์บันทึกของคุณ
- 3 เลือก **ตัวเลือก** แล้วเลือก **บันทึก**
- 4 บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ เมื่อคุณเปิดแอปพลิเคชัน บันทึก ในครั้งถัดไป

เคล็ดลับ! คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ เลือกบันทึกที่คุณต้องการแก้ไข แตะที่ **ตัวเลือก** แล้วเลือก **แก้ไข**


การตั้งเวลาปลุก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เครื่องมือ** จากนั้นเลือก **นาฬิกาปลุก**
- 2 เลือก **สร้าง**
- 3 เลื่อนลงและป้อนเวลาที่คุณต้องการให้ส่งเสียงปลุก
- 4 เลือกประเภทการปลุกซ้ำเพื่อระบุว่าคุณต้องการจะให้นาฬิกาปลุกดังที่เดียว, ทุกวัน, จ. - ศ., จ. - ส., ส. - อา. หรือ เลือกวันทำงาน
- 5 เลื่อนลงและเลือกว่าคุณต้องการให้ปลุกโดยใช้ค่าตามรูปแบบเสียง, แบบเสียง หรือ แบบสั้น
- 6 เลื่อนลงเพื่อเลือกเสียงปลุก เลือกเสียง เพื่อเลือกเสียงใหม่
- 7 เลื่อนลงและป้อนชื่อการปลุกหรือใช้ชื่อที่แนะนำ
- 8 แตะที่ **บันทึก**


หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ

ออกแกในเซอร์&เครื่องมือ


การใช้เครื่องคิดเลข

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เครื่องมือ** จากนั้นเลือก **เครื่องคิดเลข**
- 2 กดที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณแบบซับซ้อน ให้เลือก **ฟังก์ชัน** เพื่อเลือกคำสั่ง
- 5 เลือก **ลบ** เพื่อลบหน้าจอเพื่อเริ่มการคำนวณใหม่


การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เครื่องมือ** จากนั้นเลือก **นาฬิกาจับเวลา**
- 2 เลือก **เริ่ม** เพื่อเริ่มต้นตัวตั้งเวลา
- 3 เลือก **รอบ** หากคุณต้องการบันทึกรอบเวลา โดยสามารถบันทึกกรอบเวลาได้สูงสุด 20 รอบ
- 4 เลือก **หยุด** เพื่อหยุดตัวตั้งเวลา
- 5 เลือก **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ ต่อจากเวลาที่คุณหยุดไว้ หรือเลือก **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง

การแปลงหน่วย

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เครื่องมือ** จากนั้นเลือก **ตัวแปลงหน่วย**
- 2 เลือกว่าคุณจะทำแปลง สกุลเงิน พื้นที่ ความยาว น้ำหนัก อุณหภูมิ ปริมาตร หรือ ความเร็ว
- 3 เลื่อนขึ้นเพื่อเลือกจากหน่วยวัดที่คุณต้องการป้อน เลื่อนไปทางซ้ายหรือขวาเพื่อเลือกหน่วย จากนั้นเลื่อนลงและป้อนจำนวนหน่วย
- 4 เลื่อนลงไปที่บอกรหัสตัวแปลงหน่วย และเลือกหน่วยวัดที่คุณต้องการแปลงไปเป็น การแปลงค่าจะแสดงอยู่ที่ด้านล่างโดยอัตโนมัติ

การเลือกเมืองลงในเวลาทั่วโลก

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เครื่องมือ** จากนั้นเลือก **เวลาทั่วโลก**
- 2 เลื่อนขึ้น, ลง, ซ้าย หรือขวา เพื่อเลื่อนไปยังส่วนต่างๆ ของโลกและเลือกทวีป
- 3 เลือก **ซูมเข้า** เพื่อซูมลงไปในพื้นที่ และเลือกจากเมืองต่างๆที่อยู่ในพื้นที่นั้น
- 4 กด **ตั้งค่า**

บริการซิม


คุณสมบัตินี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของเครือข่าย

หากซิมการ์ดสนับสนุน SAT (เช่น SIM Application Toolkit) เมนูนี้จะเป็นชื่อบริการของผู้ให้บริการซึ่งจัดเก็บไว้ในซิมการ์ด

เบราว์เซอร์

เพียงใช้เบราว์เซอร์และปลายนิ้วสัมผัส คุณก็จะสามารถหันต่อข่าวสารและพยากรณ์อากาศได้ตลอดจนข้อมูลเกี่ยวกับ กีฬาหรือการจราจรได้ทุกเมื่อที่คุณต้องการ นอกจากนี้ เบราว์เซอร์ยังช่วยให้คุณสามารถดาวน์โหลด เพลง เสียงเรียกเข้า ภาพพื้นหลัง และเกมส์ใหม่ล่าสุดได้

การเข้าใช้เว็บไซต์

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เบราว์เซอร์** หรือกดปุ่มเลือกขวาเพื่อเข้าใช้เบราว์เซอร์โดยตรง
- 2 ในการเข้าถึงโฮมเพจของเบราว์เซอร์โดยตรง ให้เลือก **โฮม** หรือเลือก **ป้อนแอดเดรส** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **โหลด**


หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าบริการจ่ายกับผู้ให้บริการเครือข่ายของคุณ

ผลิตเพลนกับ Yahoo!


คุณสามารถเซิร์ฟเว็บได้รวดเร็วและง่ายดายโดยเลือกเมนูนี้

การเพิ่มและการใช้บุ๊กมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้


- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เบราว์เซอร์**
- 2 เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก **ตัวเลือก** และเลือก **บุ๊กมาร์คใหม่** ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL
- 4 แตะที่ **บันทึก** บูคมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงเลื่อนไปที่บุ๊กมาร์คที่ต้องการ แล้วแตะที่ **โหลด** เครื่องจะเชื่อมต่อเข้ากับเพจที่คูณบุ๊กมาร์คไว้

การเข้าใช้เพจที่บันทึกไว้


- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เบราว์เซอร์**
- 2 เลือก **บันทึกเพจ**
- 3 เลือกเพจที่ต้องการ แล้วแตะที่ **โหลด**

เคล็ดลับ! เมนูนี้ยังช่วยให้คุณลบเพจที่บันทึกไว้ได้

การดูประวัติข้อมูลเบราว์เซอร์

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เบราว์เซอร์**
- 2 เลือก **ประวัติ** แล้วเลือก **ตกลง**
- 3 รายชื่อเว็บเพจที่คุณเข้าใช้ล่าสุดจะปรากฏขึ้น ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ **โหลด**

การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์


- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **เบราว์เซอร์**
- 2 เลือก **ตั้งค่า**
- 3 คุณสามารถเลือกวิธีที่จะให้โทรศัพท์มือถือจัดการ, แสดง และใช้ข้อมูลเมื่อเบราว์เซอร์อินเทอร์เน็ต คุณสามารถแก้ไขการตั้งค่าภายใน โพรไฟล์เครือข่าย, โหมดตั้งค่า, แคมช, คุกกี้, ใบบรับรองการป้องกัน, แสดงภาพ, Java script และ ตำแหน่งที่จัดเก็บ
- 4 เมื่อคุณเปลี่ยนแปลงการตั้งค่าของคุณ ให้เลือก **ตกลง**

การตั้งค่า

ภายในโพลเดอรันี้ คุณจะสามารปรับการตั้งค่าเพื่อให้โทรศัพท์ KS360 ตอบสนองการทำงานในแบบของคุณได้


หมายเหตุ: โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 19

การเปลี่ยนรูปแบบเสียงของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงจากหน้าจอสแตนด์บายของคุณได้อย่างรวดเร็ว เพียงแค่กด  โดยใช้ปุ่มนาวิเกด และเลือกรูปแบบที่ต้องการเปิดใช้ เลือกทั่วไป, เงียบ, เฉพาะสั้น, นอกอาคาร และ ชุดหูฟัง


การปรับแต่งรูปแบบเสียงของคุณ

คุณสามารถปรับแต่งการตั้งค่ารูปแบบได้

- 1 กด **เมนู** หรือ  และเลือก **ตั้งค่า** และ **รูปแบบเสียง**
- 2 เลือกรูปแบบที่คุณต้องการ แล้วเลือก **ปรับแต่ง**
- 3 สำหรับรูปแบบ **เงียบ** และ **สั้นอย่างเดีย** คุณสามารถปรับการสั่นได้ สำหรับรูปแบบอื่นๆ คุณสามารถเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้

การเปลี่ยนวันที่และเวลา

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

- 1 กดที่ **เมนู** หรือ  แล้วเลือก **ตั้งค่า**
- 2 เลือก **วันที่ & เวลา** แล้วเลือกจากรายการด้านล่าง:

ตั้งวันที่ - คุณสามารถป้อนวันที่ปัจจุบัน

รูปแบบวันที่ - คุณสามารถตั้งค่ารูปแบบวันที่ (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

ตั้งเวลา - คุณสามารถป้อนเวลาปัจจุบัน

รูปแบบเวลา - คุณสามารถตั้งค่ารูปแบบเวลาให้เป็นแบบ 24 ชม. หรือ 12 ชม

อัปเดตอัตโนมัติ - เลือก **เปิด**

โทรศัพท์ จะอัปเดตวันที่และเวลาโดยอัตโนมัติ

การเปลี่ยนภาษา

เลือก ภาษา เพื่อเปลี่ยนภาษาสำหรับข้อความในโทรศัพท์ การเปลี่ยนแปลงใดๆ จะเปลี่ยนแปลงโหมดป้อนภาษาด้วย

การเปลี่ยนการตั้งค่าการแสดงผล

- 1 กดที่ **เมนู** หรือ  แล้วเลือก **ตั้งค่า**
- 2 เลือก **หน้าจอ** แล้วเลือก:

พื้นหลัง - เลือกภาพพื้นหลังที่จะให้
ปรากฏบนหน้าจอของคุณ

นาฬิกา - เลือกเพื่อแสดงเวลาและวันที่
บนหน้าจอสแตนด์บาย

เวลาไฟหน้าจอ - เลือกระยะเวลาการทำงาน
ของแบ็คไลท์

เคล็ดลับ! การเปิดแบ็คไลท์เป็นเวลานานจะ
ทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากยิ่งขึ้น
และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณ
บ่อยยิ่งขึ้นด้วย

ความสว่าง - ใช้ปุ่มนาฬิกาเพื่อ
ปรับความสว่าง เลือกจาก 40%, 60%,
80% หรือ 100% และเลือก ตกลง
เพื่อบันทึกการเปลี่ยนแปลง

ขีดคั่นหน้าจอหลัก - เลือก เปิด
เพื่อแสดงขีดคั่นของ 4 เมนูเป็นรูปภาพ
กลางหน้าจอสแตนด์บาย

ขนาดตัวอักษร - เปลี่ยนขนาดตัว
อักษรของสิ่งต่อไปนี้: เมนู, การโทร และ
ข้อความ

ธีม - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณ
ได้อย่างรวดเร็ว

รูปแบบเมนู - เปลี่ยนมุมมองเมนูจาก
มุมมองกริด เป็น มุมมองรายการ
หรือสลับกัน


แบบตัวอักษร - ปรับประเภทตัวอักษร

แบบตัวเลขโทร - ปรับรูปแบบตัว
อักษรสำหรับเวลาที่คุณกดหมายเลข
โทรศัพท์โทรออก

ข้อความสแตนด์บาย - เลือกเพื่อเพิ่ม
ข้อความลงในหน้าจอสแตนด์บายของคุณ

การเปลี่ยนการตั้งค่าความปลอดภัย

เปลี่ยนการตั้งค่าความปลอดภัย
ของคุณเพื่อป้องกันโทรศัพท์ KS360
และข้อมูลที่สำคัญของคุณ

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **ตั้งค่า**
- 2 เลือก **ระบบป้องกัน** แล้วเลือกจาก
รายการดังนี้:

คำขอรหัส PIN - เลือกรหัส PIN
ที่เครื่องจะขอให้คุณป้อนรหัสเมื่อคุณ
เปิดเครื่อง

ล็อคปุ่มอัตโนมัติ - เลือกระยะเวลา
ที่จะล็อคปุ่มกดเมื่อไม่ได้ใช้โทรศัพท์

ล็อคเครื่อง - เลือกรหัสความปลอดภัย
เพื่อล็อคโทรศัพท์ของคุณ
**เมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือ
ทันที**

เปลี่ยนรหัส - เปลี่ยน รหัสป้องกัน,
รหัส PIN1 หรือ รหัส PIN2

การตั้งค่า

การใช้โหมด Flight

ใช้ฟังก์ชันนี้เพื่อ **เปิด** หรือ **ปิด** โหมด Flight คุณจะไม่สามารถโทรออก, เชื่อมต่ออินเทอร์เน็ต, ส่งข้อความหรือใช้บลูทูธได้เมื่อ **โหมด Flight** **เปิด** อยู่

การใช้ประหยัดพลังงาน

เลือกเพื่อเปิดหรือปิดการตั้งค่าประหยัดพลังงาน


การรีเซ็ตโทรศัพท์ของคุณ

ใช้ **รีเซ็ต** เพื่อรีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน คุณต้องใส่รหัสป้องกันเพื่อใช้งานฟังก์ชัน

การดูสถานะหน่วยความจำ


KS360 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, ซิมการ์ด และหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วยความจำในการกำหนดว่าในแต่ละหน่วยความจำใช้ หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

แตะที่ **เมนู** หรือ  แล้วเลือก **ตั้งค่า** เลือก **สถานะหน่วยความจำ** แล้วคุณจะเห็นสถานะปัจจุบันของหน่วย ความจำ (ปกติ, จองแล้ว, ซิมการ์ด และหน่วยความจำภายนอก) ใน KS360 ของคุณ

เคล็ดลับ! โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ **การใส่การ์ดหน่วยความจำ** ที่หน้า 13

การเปลี่ยนการตั้งค่าบลูทูธ

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **การเชื่อมต่อ** จากนั้นเลือก **บลูทูธ**
- 2 เลือก **การตั้งค่าบลูทูธ** ที่การเปลี่ยนแปลง:

การมองเห็นเครื่องฉัน - เลือกว่าจะ **แสดง** หรือ **ซ่อน** อุปกรณ์ของคุณต่อผู้อื่น

ชื่อของฉัน - ป้อนชื่อโทรศัพท์ KS360 ของคุณ

แอตเดรสส่วนตัว - ดูแอตเดรสบลูทูธ

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเพลิดเพลินกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้

แตะที่ **เมนู** หรือ  แล้วเลือก **การเชื่อมต่อ** ตัวเลือกของคุณได้แก่:

บลูทูธ - ตั้งค่าโทรศัพท์ KS360 ของคุณให้ใช้บลูทูธ คุณสามารถปรับการมองเห็นของคุณที่มีต่ออุปกรณ์อื่นหรือค้นหาอุปกรณ์ที่โทรศัพท์ของคุณจับคู่ด้วย

ซิงค์บริการ - ตั้งค่า KS360 สำหรับซิงค์บริการ

เครือข่าย - โทรศัพท์ KS360 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้เมนูนี้ คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

การเชื่อมต่อ USB - เลือก เชื่อมต่อข้อมูล และซิงโครไนซ์ KS360 โดยใช่ซอฟต์แวร์ LG PC Suite เพื่อคัดลอกไฟล์จากโทรศัพท์ หากคุณมีการลดหน่วยความจำเสียอยู่ ให้เลือกที่เก็บข้อมูล เพื่อใช้โทรศัพท์ของคุณในรูปแบบเดียวกับที่คุณใช้อุปกรณ์หน่วยความจำ USB เชื่อมต่อเครื่องคอมพิวเตอร์ของคุณ และลากแล้ววางไฟล์ไปที่โฟลเดอร์ของอุปกรณ์ที่ถอดออกได้ของโทรศัพท์ KS360

การจับคู่กับอุปกรณ์บลูทูธอื่น

โดยการจับคู่โทรศัพท์ KS360 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการมองเห็นใน **เมนูการตั้งค่าบลูทูธ** โดยการเลือก **การมองเห็นเครื่องของฉัน** จากนั้นเลือก **แสดง**
- 2 เลือก **รายการอุปกรณ์** จากเมนูบลูทูธและเลือก **สร้าง**
- 3 โทรศัพท์ KS360 จะค้นหาอุปกรณ์ เมื่อการค้นหาเสร็จสมบูรณ์ **จับคู่** และ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย เลือก **จับคู่** และป้อนรหัสผ่าน จากนั้นเลือก **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว


การตั้งค่า

การใช้ชุดหูฟังบลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 KS360 จะเชื่อมต่อกับชุดหูฟังบลูทูธ และเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ KS360 สามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ เหมือนกับอุปกรณ์หน่วยความจำ USB ซึ่งเป็นวิธีการที่ดีที่สุดในการย้ายไฟล์จากคอมพิวเตอร์ของคุณไปยัง โทรศัพท์ หากคุณใส่การ์ดหน่วยความจำ อยู่ เมื่อเชื่อมต่อเป็น **ที่เก็บข้อมูล** จะแสดงเป็นสองไดรฟ์บนคอมพิวเตอร์ของคุณ หน่วยความจำในตัวเครื่องและหน่วยความจำภายนอก

- 1 **แตะที่ เมนู** หรือ  เลือก **การเชื่อมต่อ**
- 2 เลือก **การเชื่อมต่อ USB**
- 3 เลื่อนไปที่ **ที่เก็บข้อมูล** และเลือก **ตกลง**

- 4 เสียบปลายด้านที่เล็กกว่าของสายเคเบิล USB เข้าไปในช่องเสียบสายเคเบิล USB ที่ขอบของโทรศัพท์ KS360 เสียบปลายด้านที่ใหญ่กว่าเข้าไปใน พอร์ต USB ของคอมพิวเตอร์
- 5 โฟลเดอร์ดีสก์แบบถอดออกได้จะเปิดขึ้นโดยอัตโนมัติบนคอมพิวเตอร์ของคุณ 2 ไดรฟ์หากคุณมีการ์ดหน่วยความจำเสียบบอยู่ ซึ่งจะแสดงโฟลเดอร์ทั้งหมดในโทรศัพท์หรือการ์ดหน่วยความจำของคุณ
- 6 ลากแล้ววางภาพ, วิดีโอ, เพลง หรือเอกสาร ลงในโฟลเดอร์ที่ถูกต้อง
- 7 ปลดการเชื่อมต่อโทรศัพท์ของคุณอย่างปลอดภัย โดยการคลิกที่ไอคอน **Safely remove hardware (เอาฮาร์ดแวร์ออกอย่างปลอดภัย)** ในแถบเครื่องมือของเดสก์ทอป
- 8 จากนั้นเมื่อคุณต้องการเข้าใช้ไฟล์ ตัวอย่างเช่น ภาพ ให้แตะที่ **เมนู** หรือ  แล้วเลือก **เพิ่มข้อมูล** ตามด้วย **หน่วยความจำภายนอก** จากนั้นเลือก **ภาพ** ภาพทั้งหมดที่คุณเพิ่งถ่ายโอนจะอยู่ในไฟล์นี้

การโอนไฟล์ไปที่โทรศัพท์

คุณยังสามารถถ่ายโอนไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์โดยใช้บลูทูธได้

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมขึ้นอยู่กับประเภทของไฟล์ ตัวอย่างเช่น ภาพถ่ายจะถูกบันทึกในโฟลเดอร์ **ภาพ** และเพลงจะถูกบันทึกในโฟลเดอร์ **เสียง** หากโทรศัพท์ของคุณไม่สามารถระบุประเภทไฟล์ได้ ไฟล์จะถูกบันทึกในโฟลเดอร์ **อื่นๆ**


หมายเหตุ: ไฟล์ที่ส่งโดยใช้บลูทูธจะถูกบันทึกไว้ในหน่วยความจำของโทรศัพท์

การส่งและการรับไฟล์โดยใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดีโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

ก่อนที่จะคุณสามารถเริ่มต้นการการแบ่งปันไฟล์ด้วยบลูทูธ คุณต้องจับคู่อุปกรณ์ของคุณเข้ากับอุปกรณ์บลูทูธอื่นก่อน สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการจับคู่อุปกรณ์ โปรดดูที่ **การจับคู่กับอุปกรณ์บลูทูธอื่น** ที่หน้า 55

ในการเปิดบลูทูธ:

- 1 แตะที่ **เมนู** หรือ  แล้วเลือก **การเชื่อมต่อ** จากนั้นเลือก **บลูทูธ**
- 2 เลือก **เปิด/ปิดบลูทูธ** และเลือก **เปิด**
- 3 เลือก **ปิด** เพื่อปิดบลูทูธ

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก **ตัวเลือก** และเลือก **ส่งทาง** จากนั้นเลือก **บลูทูธ**
- 3 เลือก **ใช่** เพื่อเปิดบลูทูธหากยังไม่ได้เปิดใช้งาน
- 4 โทรศัพท์ KS360 จะค้นหาอุปกรณ์ที่ใช้บลูทูธอื่นๆ ภายในรัศมีนั้นโดยอัตโนมัติ
- 5 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วเลือก **ส่ง**

การตั้งค่า

ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด และ มองเห็นได้**
โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยน การตั้งค่าบลูทูธ** ที่หน้า 54
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง เลือก **ใช่** เพื่อรับไฟล์

เคล็ดลับ! คอยเฝ้าดูแถบแสดงความคิดเห็น เพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

หมายเหตุ

เครื่องหมาย Bluetooth® และโลโก้ต่างๆ เป็นสมบัติของ Bluetooth SIG, Inc. และการใช้เครื่องหมายเหล่านั้นโดย LG Electronics อยู่ภายใต้การอนุญาต เครื่องหมายการค้าและชื่อทางการค้าอื่นๆ เป็นสมบัติของเจ้าของเครื่องหมายการค้า และชื่อทางการค้านั้นๆ

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KS360 ของคุณ คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่



ชุดหูฟังสเตอริโอ



แบตเตอรี่
มาตรฐาน



คู่มือการใช้

เรียนรู้เพิ่มเติมเกี่ยวกับโทรศัพท์
KS360 ของคุณ

หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900 และ DCS 1800, PCS 1900 คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้คุณต้องสมัคร ขอรับบริการผ่านทางผู้ให้บริการ และขอ คำแนะนำในการใช้จากผู้ให้บริการด้วย

ศูนย์บริการ LG โดย บริษัท แอจจี อีเลคทรอนิกส์ (ประเทศไทย)

จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
เลขที่ 72/127
ถ. สมเด็จพระเจ้าตากสิน
แขวงบुकคโโล เขตธนบุรี
กรุงเทพฯ 10600
วันและเวลาทำการ : จันทร์ - ศุกร์
08:00 - 17:00น.
Call center : 0-2878-5757

ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์ : KS360
ระบบ : GSM 900 / DCS 1800 /
PCS 1900

อุณหภูมิแวดล้อม

สูงสุด : +55°C (คายประจุ)
+45°C (ขณะชาร์จ)
ต่ำสุด : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. JUN. 2008


Signature of representative

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบาย อยู่ในคู่มือเล่มนี้

การรับพลังงานคลื่นความถี่วิทยุ ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น KS360 นี้ ได้รับการออกแบบตรงตามข้อกำหนด เรื่องความปลอดภัยในการใช้งานอัน เกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทาง วิทยาศาสตร์ที่รวมถึงการกำหนดค่า เพื่อไว้ หังนี้เพื่อความปลอดภัยของ ทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงาน คลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้ วิธีการที่ได้มาตรฐาน โดยให้เครื่อง โท ร์ศัพท์ส่งสัญญาณที่แรงที่สุดและ มีการ รับรองขนาดสัญญาณแล้ว โดยการส่ง สัญญาณดังกล่าวได้กระทำ ในทุกย่าน ความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในขอบ กำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ย ตามเนื้อเยื่อหนัก (10) กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์ รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.489 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.949 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ใน ประเทศ/ พื้นที่ที่ยอมรับข้อกำหนด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อหนึ่ง (1) กรัม (ตัวอย่างเช่น สหรัฐอเมริกา แคนาดา ออสเตรเลีย และไต้หวัน)

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และ อุปกรณ์เสริมที่ผ่านการรับรอง ให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การ รับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์มือถือ วิทยุ หรือเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- และไม่ควรวางเครื่องโทรศัพท์ไว้ในเตาอบไมโครเวฟ เพราะอาจทำให้แบตเตอรี่ระเบิดได้
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสิ้นสະเทือนหรือการกระแทก

- ปิดโทรศัพท์ในที่ต้องห้ามทุกครั้งเช่น ในโรงพยาบาล เพราะอาจมีผลต่ออุปกรณ์ทางการแพทย์ได้
- ไม่ควรถือโทรศัพท์ขณะที่มีมือเปียก ขณะกำลังชาร์จไฟ เพราะอาจเกิดไฟดูด หรือทำให้อุปกรณ์เสียหายได้
- ไม่ควรชาร์จโทรศัพท์ในบริเวณที่ติดไฟง่าย ควรชาร์จในที่ที่มีการระบายอากาศที่ดี.
- ห้ามใช้สารเคมีที่มีฤทธิ์รุนแรง (เช่น แอลกอฮอล์, เบนซิน, ทินเนอร์ เป็นต้น) หรือสารซักฟอกทำความสะอาดเครื่องโทรศัพท์ เพราะอาจทำให้เกิดเพลิงไหม้ได้
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝนหรือครันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิต หรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้อุปกรณ์เสริม เช่น หูฟังและชุดหูฟังด้วยความระมัดระวัง ตรวจสอบให้แน่ใจว่าเก็บสายเคเบิลอย่างปลอดภัยแล้วและอย่าแตะเสาอากาศโดยไม่จำเป็น
- โปรดถอดสายเคเบิลขั้วมุกก่อนเปิดเครื่อง

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ (เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น)
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์หรืออุปกรณ์เพื่อความปลอดภัย
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมเพราะอาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะอยู่ข้างนอกโปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่อกำลังจะข้ามถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

กระจก

วัสดุบางส่วนของเครื่องทำจากกระจกตั้งนั้นอาจเกิดความเสียหายได้ถ้ากระทบกับ พื้นหรือ วัสดุอื่นที่แข็ง ,หากเกิดการแตกของกระจกควรระมัดระวังในการสัมผัส ควรนำไปเปลี่ยนที่ศูนย์บริการโดยทันที

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นโดยไม่ได้รับการอนุญาตจากพนักงาน ประจำเครื่องเสียก่อน

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์เคลื่อนที่ของคุณเพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ต่ำลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่

- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่ ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจต่ำลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ

- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่ชาร์จเต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเฉลี่ย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่และสภาพแวดล้อม

ตารางคีย์บอร์ด (อังกฤษ)

Q	W	E	R	T	Y	U	I	O	P
A	S	D	F	G	H	J	K	L	
Z	X	C	V			B	N	M	

ตารางคีย์บอร์ด (อักษรไทยหลัก)

ก	ไ	ำ	พ	ะ	ั	ี	ร	น	ย
ฟ	ห	ภ	ด	เ	็	ุ	า	ส	
ผ	ป	แ	อ			อ	ั	ท	

ตารางคีย์บอร์ด (อักขรไทย Fn)

๑	1	2	3	*	ณ	๑	ญ	^	ค
4	5	6	0	ณ	๙	ษ	<	>	
7	8	9	#			ฒ	พ์	v	

ตารางคีย์บอร์ด (อักขรไทยมัลติ)

	ใ ท	ธ	ภ ถ	ุ ฏ		๙ ๙	ด จ	ขช ฐ	บ ล
ฤ	ช	ค ฌ	โ			๙		วง ชต	
จ	ฮ		๙					มฝ ภ	



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



KS360 User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact KS360 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

01 SET UP	
Getting to know your phone	7
Open view	8
Installing the SIM and battery	10
Memory card	13
Installing a memory card	13
Removing a memory card	13
Formatting a memory card	13
Menu map	14
02 YOUR STANDBY SCREEN	
Your standby screen	15
The status bar	15
03 THE BASICS	
Calls	16
Making a call	16
Making a call from your contacts	16
Answering and rejecting a call	16
Adjusting the call volume	17
Speed dialling	17
Viewing your call logs	17
Using call divert	18
Using call barring	18
Changing the call settings	19
Contacts	20
Searching for a contact	20
Adding a new contact	20
Contact options	20
Adding a contact to a group	21
Renaming a group	21
Adding a picture to a contact	21
Copying your contacts to your SIM	22
Deleting all your contacts	22
Viewing information	22
Messaging	23
Messaging	23
Sending a message	23
Entering text	24
Text input mode using the keypad	24
Setting up your email	24
Sending an email using your new account	24
Message folders	25
Managing your messages	25
Using templates	26
Changing your text message settings	27
Changing your multimedia message settings	27
Changing your email settings	28
Changing your other settings	28

04 GET CREATIVE

Multimedia	29
Taking a quick photo	29
Before you've taken your photo	29
After you've taken your photo	30
Using the quick settings	30
Changing the image size	31
Viewing your saved photos	31
Setting a photo as Wallpaper or Picture ID ..	31
Shooting a quick video	32
After you've shot your video	32
Getting to know the viewfinder	33
Using the quick settings	33
Watching your saved videos	33
Adjusting the volume when viewing a video	33
MP3 player	34
Transferring music onto your phone	34
Playing a song	34
Using options while playing music	34
Creating a playlist	35
Playing a playlist	35
Editing a playlist	35
Deleting a playlist	36
Using the FM radio	37
Searching for stations	37
Resetting channels	37
Listening to the radio	37
Using the voice recorder	38
Recording your voice memo	38
Sending a voice recording	38
My stuff	39
Images	39
Images options menu	39
Sending a photo	40
Organising your images	40
Deleting an image	40
Deleting multiple images	40
Creating a slide show	41
Sounds	41
Using a sound	41
Videos	41
Watching a video	41
Using options while video is paused	42
Sending a video clip	42
Video options menu	42
Documents	43
Viewing a document	43
Others	43
External memory	43
Games and Applications	44
Games and Applications	44
Playing a game	44
Viewing applications	44
Changing the network profile	44

Contents

05 GET ORGANISED

Organiser & Tools.....	45
Adding an event to your calendar.....	45
Editing a calendar event.....	45
Sharing a calendar event.....	46
Adding a memo.....	46
Setting your alarm.....	46
Using your calculator.....	47
Using the stopwatch.....	47
Converting a unit.....	47
Adding a city to your world clock.....	47
SIM services.....	48

06 BROWSER

Browser.....	49
Accessing the web.....	49
Enjoying Yahoo!.....	49
Adding and accessing your bookmarks ...	49
Accessing a saved page.....	50
Viewing your browser history.....	50
Changing the web browser settings.....	50

07 SETTINGS

Settings.....	51
Changing your profiles.....	51
Personalising your profiles.....	51
Changing your date & time.....	51
Changing the language.....	51
Changing your display settings.....	52
Changing your security settings.....	52
Using flight mode.....	53
Using power save.....	53
Resetting your phone.....	53
Viewing memory status.....	53
Changing your Bluetooth settings.....	53
Changing your connectivity settings.....	53
Pairing with another Bluetooth device.....	54
Using a Bluetooth headset.....	54
Using your phone as a mass storage device..	55
Transferring a file to your phone.....	55
Sending and receiving your files using Bluetooth.....	56

08 ACCESSORIES

Accessories.....	57
Network service.....	58
Technical data.....	58
General.....	58
Ambient Temperatures.....	58

Guidelines for safe and efficient use.....	60
---	-----------

Getting to know your phone



Open view

Left soft key/ Right soft key

Performs the function indicated at the bottom of the display.

Left soft key: Go to the main menu directly.

Right soft key: Go to the Contacts directly.

Fn key

Change from text mode to symbol/numeric mode and lock keypad.

Symbol key

Enters symbolic character.

Change the text mode

(Capital/ Small)

Alpha numeric keys

Space Key

Use to enter space while editing.

Enter key

OK key


Selects menu options and confirms actions.

Message key

Clear key

- Clears a character with each press. Hold the key down to clear all input.
- Use this key to go back to a previous screen.




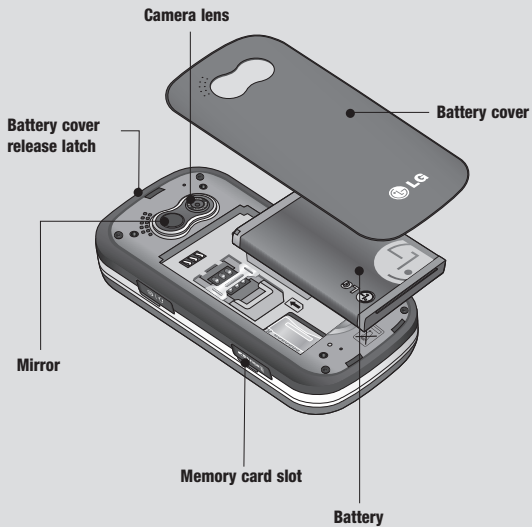

Installing the SIM and battery


1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.

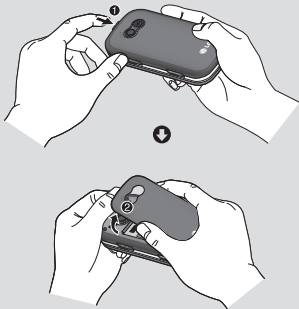

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

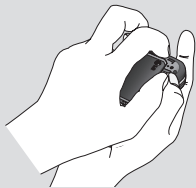

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.



3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold color contact area on the card is facing downwards. To remove the SIM card, push it out of the holder from the top.

⚠ WARNING: Do not insert the SIM card when the keyboard is open, as this may damage your phone and SIM card.

4 Install the battery


Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

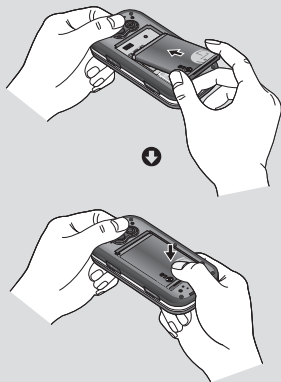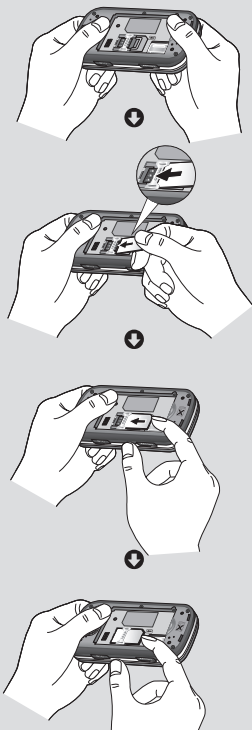

Installing the SIM and battery

5 Replace the battery cover

Insert the bottom of the battery cover and push down until it clicks into place.

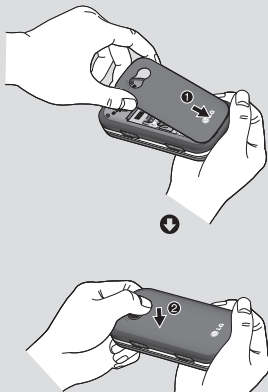

6 Charging your phone

Pull open the cover of the charger socket on the side of your KS360. Insert the charger and plug into a mains electricity socket. Your KS360 will need to be charged until a message reading Battery Full appears on screen.

WARNING: Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.



Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card.

TIP! A memory card is an optional accessory.

Open the memory card slot. Slide the memory card into the slot cover, until it clicks into place. Make sure that the gold contact area is facing downwards.



Removing a memory card

Open the cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it, as shown in the following diagram:



Formatting a memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **OK** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Menu map



Games & Apps

- 1 Games
- 2 Applications
- 3 Network profile



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Organiser

- 1 Calendar
- 2 Memo



Tools

- 1 Alarm clock
 - 2 Calculator
 - 3 Stopwatch
 - 4 Unit converter
 - 5 World clock
 - 6 SIM services*
- *This feature depends on SIM and the network services. If your operator supports SIM Tool Kit then this menu will appear.



Browser

- 1 Home
- 2 Yahoo!
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection



Settings








- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status








Your standby screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.





Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set
	New message

Icon	Description
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty


Calls

Making a call


- 1 Make sure your phone is on.
- 2 The fastest way to make a call is to activate touch mode by pressing . If you press this key, you can touch the screen to enter the phone number to call. Or, you can use the keypad after opening the slide. To delete a digit press  or the back arrow.
- 3 Press  to initiate the call.
- 4 To end the call, press  or slide the keypad closed.

TIP! To enter + when making an international call, touch and hold **0**.

Making a call from your contacts


- 1 Select **Contacts** in the menu and choose Search.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, then select Silent to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press , select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Accept key only**.


Adjusting the call volume

To adjust the volume during a call, press the volume key on the left hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** and choose **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation keys, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Menu** or , select **Call history**. Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; received and dialled.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.


Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select **Options** and choose **Delete** to delete selected items.

TIP! Using the navigation keys, highlight any single call entry to view the date and time of the call.

Calls

Using call divert

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the call settings

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Answer mode - Choose whether to answer the phone using only the accept key, any key or by sliding your handset open.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone every minute during a call.

Auto redial - Choose that the phone will automatically try to redial in the case of failure to connect a call.

Send DTMF tones - You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call. This option is helpful for entering a password or account number when you call an automated system, like a banking service.

Contacts

Searching for a contact

- 1 Select **Contacts** from the main menu and choose **Search**.
- 2 Using the keypad or touchpad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

Delete - Delete the contact. Select **Yes** if you are sure.


New contact - Add a new contact.

Multi delete - Mark multiple contacts to delete.

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group 1**, **Group 2** and **No group** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to, select **Options** and choose the item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select the group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.

Contacts

- 5 Scroll down to the **Photo** section. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact. Take the picture then press set.
- 6 Select **Save**.

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.
- 4 Enter the password, which is set to 0000 as default, and select **OK**.

Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own number** and your **Business card**.

TIP! If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.



Messaging

Messaging

Your KS360 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) Email, Bluetooth message, as well as the network's service messages.

Simply press  and select **Messaging**.

Sending a message

- 1 Press **Menu** or , select **Messaging** and choose **New message**. Or, a quicker way is to press  on the keypad when the slide is open.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See page 24 for more information on how to enter text.

- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/ My business card/Schedule)**.
- 6 Choose **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.




WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.


Messaging

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).


To input a symbol in the text entry field, press the  key and select a symbol, then select **OK**. Scroll using the navigation keys to show more symbol options.

Complete each word with a space by pressing .

To delete a character, press  key.


Text input mode using the keypad

When you are required to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making call, the keypad number keys will default to numbers.

In Abc mode you can enter numbers by first pressing  and then the number you require.


Setting up your email

You can stay in touch on the move using email on your KS360. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu** or , select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.


Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press , select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then press **OK**.
- 4 Enter your message using the keypad.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card, Schedule** or **Others**.

- 6 Press **Send** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

Message folders

Press **Menu** or , select **Messaging**. The folder structure used on your KS360 is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

Email box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KS360 will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Listen to voicemail - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

Info messages - All info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu** or , select **Messaging** and choose **Inbox**.

- 2 Select **Options** and then choose to:

Delete - Delete the selected message.

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Return call - Call the person who sent you the message.

Threaded view/General view - Choose the way messages are displayed in your inbox.

Messaging

Information - View the details of a message, for example, the time it was sent.

Copy/Move - Choose to copy or move the selected message to the SIM card or phone.

Multi delete - Delete selected messages.

Delete all read - All opened messages will be deleted.


Delete all - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox which are stored in SIM Card.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

Using templates


You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu** or , select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template, as a **Message, Bluetooth message** or **Email**.
- 5 Choose a contact and select **Send**.

Changing your text message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu** or , select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message type - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu** or , select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Slide duration - Choose how long your slides appear on screen.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or send a read report.

Messaging


Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select an operator specific network profile for sending multimedia messages.

Permitted message type - Select which type of multimedia messages to allow.

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **Menu** or , select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:


Email account - You can set up an email account.

Access point - You can set the email access point.

Retrieve interval - Choose how often your KS360 checks for new email messages.

Signature - Create an email signature and switch this feature on.

Changing your other settings

Press **Menu** or , select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.


Push message - Change your service message settings.


Info message - Choose the reception status, alerts and language of your info messages.

Save text message - Choose whether to save your text messages to the phone memory or to the external memory.

Multimedia


Taking a quick photo


- 1 Hold the camera key down on the left side of the handset. The camera viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press  or press the camera key all the way down to take a photo.


Note: You can also access the camera menu from the standby screen. Press  and select **Multimedia**. Select **Camera** to open the viewfinder.


Before you've taken your photo


Press  to access these options:

 **Self timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

 **Multi shot** - This enables you to take up to 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

 **Colour effect** - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **EV** - Exposure values, represented by numbers with a plus or minus. When the main subject is darker than the background, increase exposure value. If the subject is much lighter than the background, decrease exposure value.

Multimedia

After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the left side of the screen.

OK - Select to take another photo straightaway. Your current photo will be saved.



New image - Take another photo straightaway. Your current photo will be saved.



Set as - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



Send via - Select to send the photo as a **Multimedia message** or **Email, Bluetooth**. See page 23 for **Sending a message**.



Album - Select to look at the other photos in your album. Your current photo will be saved. See page 31 for **Viewing your saved photos**.

Delete - Delete the photo you have just taken and confirm by selecting **Yes**. The viewfinder will reappear.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

Video camera - Convert from camera mode to video camera mode.

Display - Choose Standard or Clean mode.

Resolution - See **Changing the image size** on page 31.

Quality - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper a photo will be. The file size will increase as a result, which means you will be able to store fewer photos in your memory.

Shutter tone - Select one of the three shutter sounds.

Save to - Choose whether to save your photos to the phone memory or to the external memory.


Reset settings - Choose **Yes** to reset your phone to the original camera settings.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the four numerical options (320x240, 640x480, 1280x960, 1600x1200).
- 3 Press **OK** to implement your changes.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply press **Album**. From the standby screen you should press **Menu** or  , then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

Setting a photo as Wallpaper or Picture ID


From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts. When you set the photo as Picture ID you can choose which part of the photo to use.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Multimedia

Shooting a quick video


- 1 Quickly press the camera key on the left side of the handset.
- 2 Choose **Video camera**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the left side of the handset to start recording.
- 5 **REC** will appear in the bottom right corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


Note: You can also access the **Video camera** from the standby screen. Press  and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.


After you've shot your video


The name of the video runs along the bottom of the screen and six options will be displayed on the left side of the screen.

OK - Select to record another video straight away. Your current video will be saved.

 **New video** - Select to shoot another video straight away. Your current video will be saved.

 **Play** - Select to play the video you have just recorded.

 **Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 23 for **Sending a message**.

 **Video album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 33 for **Watching your saved videos**.

Delete - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

Getting to know the viewfinder

Note: You can adjust the zoom using the volume keys on the left side of the phone.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

Camera - Convert from video camera mode to still camera mode.

Display - Choose Standard or Clean mode.



Resolution - If you want to fit more videos on your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 176x144, 320x240.

Quality - Super fine/ Fine/ Normal.

Save to - Choose whether to save your video clip to the phone memory or to an external memory.

Reset settings - Choose **Yes** to reset your phone to the original video camera settings.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder select **Album**. From the standby screen you should press **Menu** or , then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press  to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the left side of the handset. The volume level is shown below the video, on the left hand side.

Multimedia

MP3 player

Your LG KS360 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press **Menu** or  and select **Multimedia** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.







Settings - Adjust your music settings.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Menu** or  and select **Multimedia**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use the volume keys on the left side of your phone, or the up and down navigation keys.

Using options while playing music

Select **Options** and choose from:

Minimise - Hide the music player screen so that you can continue using your phone as normal while music is playing.

View playlist - Look at the playlist you are currently listening to.

Search - Search for a track from the list of songs on your phone.

Add to playlist - Adds the current track to a playlist.



Set as - Set the current track as your **Ringtone** or **Message tone**.

Information - You can view information about the music file you are listening to.



Settings - Change the Shuffle, Play mode or Equalizer settings.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **New**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.


Playing a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select .

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

Play - You can play the selected music.

Add to Playlist - You can add songs to the playlist using this option.

Multimedia


Remove - Remove a song from the playlist. Select **Yes** to confirm.

Multi delete - Select and delete songs from the playlist.

Remove all - Remove all of the songs from the playlist.

Information - Select to view information.

Deleting a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Using the FM radio


Your LG KS360 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).


Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KS360 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.


To manually tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.


Note: You can also edit the stations you have saved in a channel number.

TIP! To improve the reception extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.




Note: You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

Multimedia

Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** or  and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

Note: You can listen to all of the voice recordings you have saved by selecting **Album**.


Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

My stuff

You can store any multimedia files in your phone memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone memory.

All your multimedia files will be saved in **My stuff**. Press **Menu** or  then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **View style** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

Note: The image may need to be resized before it can be sent by MMS.

File - **Edit image**, **Rename**, **Make animation** or view the **Information** (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via - Print an image file via **Bluetooth** or **Pictbridge**.

Slide show - Watch a slide show of your images. See **Creating a slide show** on page 41 for more information.

New folder - Create a new folder within the main Images folder.

Mark/Unmark - Select more than one image to delete or **Copy** or **Move**.


Delete all - Delete all the photos in your Images folder.

My stuff


Sort by - Arrange your images by **Date**, **Type** or **Name**.

View style - Change the way you view your photos.


Sending a photo

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.




Organising your images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image


- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete** and confirm by pressing **Yes**.

Deleting multiple images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select  to mark each image. To unmark an image, select  again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Done** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.



- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

During the slide show, press **Options** to choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Sounds

The **Sounds** folder contains the **Default** sounds, your **Voice recordings** and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.



Using a sound

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press  to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press .

My stuff

Using options while video is paused


By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

Information - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

Sending a video clip

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Multimedia Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

Video options menu

In the **Videos** folder highlight a video and press **Options** to bring up the following list of options.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

File - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright).

If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

New folder - Create a new folder within the main Videos folder.

Mark/Unmark - Select more than one video clip before selecting **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type** or **Name**.

Auto next play - Allows to set the play mode: **Off, Repeat once** and **Repeat all**.


- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

List view / Thumbnail view - Change the way you view your videos.

Documents

From the **Documents** menu.

Viewing a document

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

External memory


If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images, Sounds, Videos, Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Games and Applications

Games and Applications

Your KS360 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.


Playing a game

- 1 Press **Menu** or  and select **Games & Apps** and then **Games**.
- 2 You can download games from site, and then enjoy it.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.


Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** or  and select **Games & Apps** and then **Applications**.
- 2 View and manage any applications you have.


Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** or  and select **Games & Apps** and then **Network profile**.
- 2 You can add and edit a new network profile.


Organiser & Tools

Adding an event to your calendar

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New schedule** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.

- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.


Editing a calendar event

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.


Note: You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

Organiser & Tools

Sharing a calendar event


- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

Adding a memo

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Options** then **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.


TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Setting your alarm


- 1 From the standby screen press **Menu** or , and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

Note: You can set up to 5 alarms.


Using your calculator

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.


Using the stopwatch

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

Converting a unit

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Adding a city to your world clock

- 1 From the standby screen press **Menu** or , and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **Set**.

Organiser & Tools

SIM services


This feature depends on SIM and the network services.

If the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 Press **Menu** or  and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Or select **Enter address** and type in your desired URL, followed by **Connect**.


Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Enjoying Yahoo!

You can surf the web quickly and easily by selecting this menu.


Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.


Browser

Accessing a saved page


- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

Changing the web browser settings

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles, Rendering mode, Cache, Cookies, Security certificates, Show image, JavaScript, Storage location**.
- 4 Once you have changed your settings, select **OK**.

Settings

Within this folder you can adapt your settings to make your KS360 personal to you.


Note: For information on call settings see page 19.

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  using the navigation keys then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.


Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** or  and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list.

Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Set date - You can enter the current date.

Date format - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

Set time - You can enter the current time.

Time format - You can set the time format to either 24 hours or 12 hours.


Auto update - Select **On**, the phone will automatically update the date and time.

Changing the language

Select **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

Settings

Changing your display settings

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Display** and choose from:

Wallpaper - Choose a wallpaper to appear on your screen display.

Clocks - Choose to have the time and date visible on your standby screen. Choose from

No date & time or **Normal**.

Backlight timer - Choose how long the backlight remains on for.

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

Home screen shortcut - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

Font size - Change the font size of the following : **Menu**, **Dialling** and **Messaging**.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **Grid view** to **List view**.

Main font style - Adjust the font type.


Dialling font style - Adjust the font style for when you are dialling a phone number.

Standby text - Choose to add a message to your standby screen.

Network Name - Choose On or Off.

Changing your security settings

Change your security settings to keep your KS360 and the important information it holds protected.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Auto key lock - Choose how long before the keypad locks when the phone is not in use.

Phone lock - Choose a security code to lock your phone **When power on**, **When SIM changed** or **Immediately**.

Anti-theft mobile tracker - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you loose or misplace it.

The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number.

Change codes - Change your **Security code**, **PIN1 code**, **PIN2 code** or **ATMT code**.

Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages when **Flight mode** is switched **On**.

Using power save

Choose to switch the power saving settings **On** or **Off**.


Resetting your phone

Use **Reset** in **Phone settings** to reset all the settings to the factory definitions. You need the security code to activate this function.

Viewing memory status


Your KS360 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** or  and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KS360.

TIP! See page 13 for information on **inserting a memory card**.

Changing your Bluetooth settings

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:


My visibility - Choose whether to **Show** or **Hide** your device to others.

My name - Enter a name for your KS360.

My address - View your Bluetooth address.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** or  and select **Connectivity**. Your options are:

Settings

Bluetooth - Set up your KS360 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Network - Your KS360 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

USB connection - Choose **Data service** and synchronise your KS360 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select

Mass storage to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KS360 removable device folder.

Pairing with another Bluetooth device

By pairing your KS360 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KS360 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.


Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KS360 will then automatically connect to your Bluetooth headset and switch to headset profile.

Using your phone as a mass storage device

Your KS360 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

- 1 Press **Menu** or  select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KS360. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

- 8 When you want to then access a file, for example an image, press **Menu** or , then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.


Settings

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 54.

To switch Bluetooth on:

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KS360 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 53 for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Accessories

These accessories were supplied with your KS360.

Charger



Stereo headset



Battery



User Guide

Learn more about your KS360.

Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KS360

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. JUN. 2008


Signature of representative

Guidelines for safe and efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KS360 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.489 W/kg (10g) and when worn on the body is 0.949 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - Keep away from electrical appliances such as TVs, radios, and personal computers.
 - The unit should be kept away from heat sources such as radiators or cookers.
 - Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient Use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Guidelines for safe and efficient Use

- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ศูนย์บริการข้อมูล

Customer Information Center 0-2878-5757 or

1-800-

LG L G L G
5 4 5 4 5 4

โทรฟรี

www.lge.co.th

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd
75/81 Richmond Bldg, 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110
Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250

 **LG Electronics (Thailand)**

 บริการธุรกิจตอบรับ

ใบอนุญาตเลขที่ ปณ.ค)/2117 ปณจ. พระโขนง
ถ้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน
แขวงบุคคลโล เขตธนบุรี
กรุงเทพ 10600

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น
(This warranty is valid only in Thailand)

- 1) บักรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ หรือมีการรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง ฝิดวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่นๆที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการตากสิน (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบุคคโล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า

MEMO

A series of horizontal dotted lines for writing.

MEMO

A series of horizontal dotted lines for writing.

