



ไ ท ย  
ENGLISH

คู่มือการใช้  
**GX500**



CE 0168 !

P/NO : MMBB0371111 (1.0) W

[www.lg.com](http://www.lg.com)

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดสีกลอนนำเขาสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านประกันสินค้าอย่างเป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถรับประกันได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบข่ายจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

## Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message "Your handset is a genuine LG product". The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B016312



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจ  
แตกต่างจากโทรศัพท์ของคุณ  
ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์  
หรือผู้ให้บริการของคุณ



## คู่มือการใช้ GX500

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์  
เคลื่อนที่รุ่น GX500 ของ LG ซึ่งทันสมัย  
และมีขนาดกะทัดรัดออกแบบให้ทำงาน  
ด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อน  
ที่แบบดิจิทัลใหม่ล่าสุด

# สารบัญ

|   |   |
|---|---|
| คำแนะนำเพื่อความปลอดภัย<br>และการใช้งานอย่างมีประสิทธิภาพ ..... | 6 |
|---|---|

|   |    |
|---|----|
| เริ่มทำความรู้จักกับโทรศัพท์<br>ของคุณ..... | 10 |
|---|----|

|   |    |
|---|----|
| ภาพแสดงตัวเครื่องเมื่อเปิดฝา<br>ครอบ..... | 12 |
|---|----|

|                            |    |
|----------------------------|----|
| การใส่ซิมและแบตเตอรี่..... | 13 |
|----------------------------|----|

|                            |    |
|----------------------------|----|
| การตั้งค่าหน่วยความจำ..... | 15 |
|----------------------------|----|

|                 |    |
|-----------------|----|
| แผนผังเมนู..... | 16 |
|-----------------|----|

|                        |    |
|------------------------|----|
| หน้าจอแสดงแถบข่าว..... | 17 |
|------------------------|----|

|                                |    |
|--------------------------------|----|
| เคล็ดลับสำหรับหน้าจอสัมผัส ... | 17 |
|--------------------------------|----|

|               |    |
|---------------|----|
| ปุ่มดวน ..... | 18 |
|---------------|----|

|                                    |    |
|------------------------------------|----|
| การเปลี่ยนสถานะจากแถบส<br>ลัด..... | 20 |
|------------------------------------|----|

|  |    |
|--|----|
| การใช้ฟังก์ชันการทำงานหลาย<br>อย่าง..... | 20 |
|--|----|

|              |    |
|--------------|----|
| การโทร ..... | 21 |
|--------------|----|

|                 |    |
|-----------------|----|
| การโทรออก ..... | 21 |
|-----------------|----|

|                              |    |
|------------------------------|----|
| การโทรออกโดยใช้รายชื่อ ..... | 21 |
|------------------------------|----|

|   |    |
|---|----|
| การรับสายและการปฏิเสธสา<br>ยเรียกเขา..... | 21 |
|---|----|

|              |    |
|--------------|----|
| โทรดวน ..... | 21 |
|--------------|----|

|                      |    |
|----------------------|----|
| การใช้สายที่สอง..... | 22 |
|----------------------|----|

|                         |    |
|-------------------------|----|
| การดูบันทึกการโทร ..... | 22 |
|-------------------------|----|

|                      |    |
|----------------------|----|
| การใช้การโอนสาย..... | 23 |
|----------------------|----|

|                             |    |
|-----------------------------|----|
| การใช้การป้องกันการโทร..... | 23 |
|-----------------------------|----|

|   |    |
|---|----|
| การเปลี่ยนการตั้งค่าการโทร<br>ทั่วไป..... | 24 |
|---|----|

|              |    |
|--------------|----|
| รายชื่อ..... | 25 |
|--------------|----|

|                      |    |
|----------------------|----|
| การค้นหารายชื่อ..... | 25 |
|----------------------|----|

|                          |    |
|--------------------------|----|
| การเพิ่มรายชื่อใหม่..... | 25 |
|--------------------------|----|

|                     |    |
|---------------------|----|
| การสร้างกลุ่ม ..... | 26 |
|---------------------|----|

|   |    |
|---|----|
| การเปลี่ยนการตั้งค่าของรา<br>ยชื่อ..... | 26 |
|---|----|

|                  |    |
|------------------|----|
| การดูข้อมูล..... | 28 |
|------------------|----|

|              |    |
|--------------|----|
| ข้อความ..... | 29 |
|--------------|----|

|               |    |
|---------------|----|
| ข้อความ ..... | 29 |
|---------------|----|

|                     |    |
|---------------------|----|
| การส่งข้อความ ..... | 29 |
|---------------------|----|

|                      |    |
|----------------------|----|
| การป้อนข้อความ ..... | 30 |
|----------------------|----|

|                         |    |
|-------------------------|----|
| ระบบช่วยสะกดคำ T9 ..... | 30 |
|-------------------------|----|

|                                |    |
|--------------------------------|----|
| การป้อนตัวอักษรด้วยตนเอง ..... | 30 |
|--------------------------------|----|

|                 |    |
|-----------------|----|
| แป้นพิมพ์ ..... | 31 |
|-----------------|----|

|                    |    |
|--------------------|----|
| การจดจำลายมือ..... | 31 |
|--------------------|----|

|                       |    |
|-----------------------|----|
| การตั้งค่าอีเมล ..... | 31 |
|-----------------------|----|

|                        |    |
|------------------------|----|
| การดึงข้อมูลอีเมล..... | 32 |
|------------------------|----|

|                                 |    |
|---------------------------------|----|
| การเปลี่ยนการตั้งค่าอีเมล ..... | 32 |
|---------------------------------|----|

|                     |    |
|---------------------|----|
| โพลเดอข้อความ ..... | 33 |
|---------------------|----|

|  |    |
|--|----|
| การเปลี่ยนการตั้งค่าข้อความตัว<br>อักษร..... | 34 |
|--|----|

|  |    |
|--|----|
| การเปลี่ยนการตั้งค่าข้อความมัล<br>ติมีเดีย ..... | 34 |
|--|----|

# สารบัญ

|                                   |           |                                  |           |
|-----------------------------------|-----------|----------------------------------|-----------|
| การเปลี่ยนการตั้งค่าอื่นๆ.....    | 35        | การส่งวิดีโอคลิบ.....            | 44        |
| <b>กล้องถ่ายรูป.....</b>          | <b>36</b> | เกมส์และแอปพลิเคชัน .....        | 44        |
| การถ่ายภาพด้วย .....              | 36        | การติดตั้งเกมส์/แอปพลิเคชัน      |           |
| หลังจากที่ถ่ายภาพแล้ว .....       | 36        | ผ่านการจัดตั้งภายในเครื่อง ..... | 44        |
| การใช้การตั้งค่าขั้นสูง .....     | 37        | การเล่นเกมส์ .....               | 44        |
| การดูรูปภาพที่บันทึกไว้ .....     | 37        | เอกสาร.....                      | 45        |
| <b>กล้องวิดีโอ .....</b>          | <b>38</b> | การโอนไฟล์ไปที่โทรศัพท์.....     | 45        |
| การถ่ายวิดีโอด้วย .....           | 38        | การดูไฟล์.....                   | 45        |
| หลังจากที่ถ่ายวิดีโอแล้ว.....     | 38        | อื่นๆ .....                      | 45        |
| การปรับการรับแสง .....            | 38        | เพลง.....                        | 46        |
| การใช้การตั้งค่าขั้นสูง .....     | 39        | การโอนเพลงไปยังโทรศัพท์ ....     | 46        |
| การดูวิดีโอที่บันทึกไว้ .....     | 39        | การเล่นเพลง .....                | 47        |
| <b>รูปภาพและวิดีโอ .....</b>      | <b>40</b> | การสร้างรายการเพลง .....         | 47        |
| การดูรูปภาพและวิดีโอ .....        | 40        | การใช้วิทยุ .....                | 47        |
| การใช้การซูมขณะดูรูปภาพ .....     | 40        | การคนหาสถานี .....               | 48        |
| การปรับระดับเสียงขณะดูวิดีโอ..    | 40        | การรีเซ็ตสถานี .....             | 48        |
| การตั้งค่ารูปภาพเป็นพื้นหลัง .... | 40        | <b>สมุดบันทึก .....</b>          | <b>49</b> |
| การแก้ไขรูปภาพ.....               | 41        | การบันทึกเสียงหรือเสียงพูด ..... | 49        |
| <b>อัลบั้มเดี่ยว.....</b>         | <b>42</b> | การใช้เครื่องคิดเลข.....         | 49        |
| รูปภาพ .....                      | 42        | การแปลงหน่วย .....               | 49        |
| การส่งรูปภาพ.....                 | 42        | การใส่ชื่อเมืองลงในเวลาทั่ว      |           |
| การพิมพ์ภาพ .....                 | 42        | โลก .....                        | 49        |
| การย้ายหรือคัดลอกรูปภาพ .....     | 43        | การใช้นาฬิกาจับเวลา .....        | 50        |
| เสียง .....                       | 43        | <b>PC Suite .....</b>            | <b>51</b> |
| วิดีโอ .....                      | 43        | การติดตั้ง LG PC Suite           |           |
| การดูวิดีโอ .....                 | 43        | ลงในคอมพิวเตอร์ .....            | 51        |
|                                   |           | การเชื่อมต่อโทรศัพท์เข้ากับค     |           |
|                                   |           | อมพิวเตอร์ .....                 | 51        |

|  |           |                                       |           |
|--|-----------|---------------------------------------|-----------|
| การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์..... | 52        | การเปลี่ยนการตั้งค่าการเชื่อมต่อ..... | 61        |
| การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์.....              | 52        | การตั้งค่าเครือข่าย .....             | 61        |
| การซิงโครไนซ์รายชื่อ.....                          | 52        | การตั้งค่าการเชื่อมต่อ .....          | 62        |
| การซิงโครไนซ์ข้อความ .....                         | 52        | การใช้ตัวจัดการหน่วยความจำ ..         | 62        |
| Music Sync.....                                    | 53        | การส่งและการรับไฟล์โดยใช้บลูทูธ ..... | 63        |
| การโอนเพลงโดยใช้ Windows Media Player .....        | 53        | การจับคู่กับอุปกรณ์บลูทูธอื่น .....   | 64        |
| ตัวแปลง DivX.....                                  | 54        | การใช้ชุดหูฟังบลูทูธ.....             | 65        |
| <b>เว็บไซต์ .....</b>                              | <b>55</b> | Wi-Fi .....                           | 65        |
| เบราว์เซอร์.....                                   | 55        | การอัปเดตซอฟต์แวร์.....               | 66        |
| การเข้าใช้เว็บไซต์.....                            | 55        | <b>อุปกรณ์เสริม .....</b>             | <b>67</b> |
| การเพิ่มและการใช้บุ๊คมาร์ค .....                   | 55        | <b>บริการเครือข่าย .....</b>          | <b>68</b> |
| การใช้ RSS reader .....                            | 56        | <b>ข้อมูลทางเทคนิค .....</b>          | <b>68</b> |
| การบันทึกเพจ .....                                 | 56        | <b>การแก้ปัญหา.....</b>               | <b>70</b> |
| การเข้าใช้เพจที่บันทึกไว้ .....                    | 56        |                                       |           |
| การดูประวัติข้อมูลเบราว์เซอร์ .....                | 57        |                                       |           |
| การเปลี่ยนการตั้งค่าเว็บเบราว์เซอร์ .....          | 57        |                                       |           |
| การใช้โทรศัพท์เป็นโมเด็ม .....                     | 57        |                                       |           |
| <b>ตั้งค่า.....</b>                                | <b>59</b> |                                       |           |
| การใช้เมนูซึ่มการดู.....                           | 59        |                                       |           |
| การปรับแต่งรูปแบบเสียงขอ<br>งคุณ .....             | 59        |                                       |           |
| การเปลี่ยนการตั้งค่าหน้าจอ.....                    | 59        |                                       |           |
| การเปลี่ยนการตั้งค่าโทรศัพท์ ...                   | 60        |                                       |           |

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

## การรับพลังงานคลื่น

### ความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น GX500 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุในหน่วยวัตต์ที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรบกวนขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แนวระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation

Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.45 วัตต์/กก. (10g) และเมื่อพกพาไว้กับตัวคือ 0.841 วัตต์/กก. (10g)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อกำหนด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

## การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

**⚠ คำเตือน:** ใช้แบตเตอรี่อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่น ๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม การซ่อมแซมภายใต้การรับประกันเป็นการตัดสิ้นใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ

- โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
  - ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
  - ไม่ควรทำโทรศัพท์ตก
  - ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีการสั่นสะเทือนหรือการกระแทก
  - ปิดเครื่องโทรศัพท์ในบริเวณที่มีขอมัจฉับพิเศษอาจไหม้ตัวอย่างเช่น หมายโทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
  - ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
  - ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
  - ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
  - อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
  - ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี

- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแก๊สแอมโมเนีย เพราะอาจทำความเสียหายต่อขอมูลในแก๊สแอมโมเนียได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

### การทำงานอย่างมีประสิทธิภาพของโทรศัพท์อุปกรณ์อิเล็กทรอนิกส์

- โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ
- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
  - โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
  - ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำทำให้ใช้ชุดอุปกรณ์เสริมได้
- ขับเขาข้างทาง แลวจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหวางมีการระเบิดต่างๆ ให้ปฏิบัติตามขอหามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่นในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้องอาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับ การกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

## ปุ่มวางสาย/เปิดปิดเครื่อง

วางสายหรือปฏิเสธสาย  
เรียกเข้า เปิด/ปิดโทรศัพท์  
กดหนึ่งครั้งเพื่อกลับสู่หน้า  
จอสแตนด์บาย

## ปุ่มนำลิตาสกิ้ง

## ปุ่มโทรออก/รับสาย

เพื่อโทรออกและรับสาย  
เรียกเข้า



**⚠ คำเตือน:** การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์ หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋ากางเกงอาจทำให้จอ LCD ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้



ช่องเสียบอุปกรณ์ชาร์จ,  
สายเคเบิล,  
แอสนด์ฟรี

**เคล็ดลับ:**  
ในการเชื่อมต่อสาย  
USB ให้รอจนโทร  
ตัดทเปิดเครื่องและ  
ลงทะเบียนกับเครือ  
ข่ายแล้ว

ปุ่มล็อค/ปลดล็อค

ปุ่มถ่ายภาพ




ปุ่มด้านข้าง

- เมื่อนำจอไม่ใช้งาน:  
ระดับเสียงปุ่มกด
- ระหว่างการใช้สาย:  
ระดับเสียงลำโพง
- ขณะเล่นแทร็ค  
**BGM**  
- กดแล้วปล่อย:  
ควบคุมระดับ  
เสียง

ช่องเสียบการ์ด  
หน่วยความจำ  
**Micro SD**

# ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ

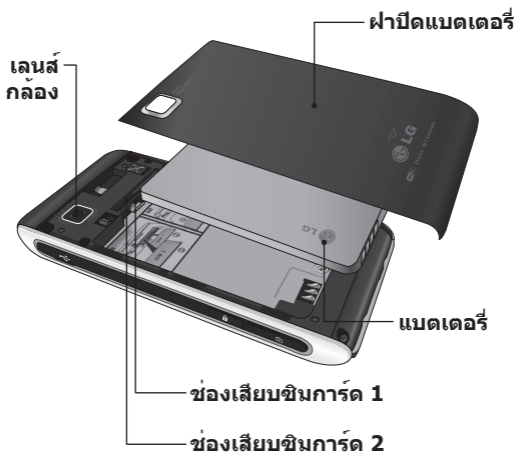

# การใส่ซิมและแบตเตอรี่

## 1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่ไปทางด้านล่างของโทรศัพท์ และถอดฝาปิดแบตเตอรี่ออก



## 2 ถอดแบตเตอรี่

ยกแบตเตอรี่ขึ้นจากช่องใส่แบตเตอรี่โดยใช้รอยตัดที่ด้านบน



**⚠ คำเตือน:** อย่าใช้เล็บในการถอดแบตเตอรี่ออก


**⚠ คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์ที่อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

## 3 ติดตั้งซิมการ์ด

สไลด์ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด ตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองบนการ์ดคว่ำลง ในการถอดซิมการ์ดให้ค่อยๆ ดึงการ์ดออกมาในทิศทางตรงข้ามกับตอนใส่



**⚠ คำเตือน**



ตรวจสอบให้แน่ใจว่าซิมการ์ดของคุณมีรอยตัดที่เรียบก่อนที่จะใส่เข้าไปในช่อง

# การใส่ซิมและแบตเตอรี่

## 4 ติดตั้งแบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านล่างของแบตเตอรี่ลงไปที่ด้านล่างของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านบนของแบตเตอรี่ให้แน่นเข้าที่



## 5 การชาร์จโทรศัพท์

ยกและหมุนฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์ GX500เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ GX500 จนกว่าจะปรากฏข้อความว่า "แบตเตอรี่เต็มแล้ว" บนหน้าจอ




# การลดหน่วยความจำ

## การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยการใช้การ์ดหน่วยความจำ MicroSD



**หมายเหตุ:** การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

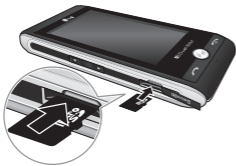- 1 เปิดฝาปิดช่องเสียบการ์ดหน่วยความจำที่ขอบด้านขวามือของโทรศัพท์
- 2 เลื่อนการ์ดหน่วยความจำเข้าไปในช่องเสียบให้แน่นเข้าที่
- 3 ใส่ฝาปิดกลับคืน




## การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้วหากการดยังไม่ได้ฟอร์แมต คุณต้องทำการฟอร์แมตก่อนจึงจะสามารถเริ่มใช้งานได้

- 1 จากหน้าจอแสดงตัวเลือก ให้เลือก  แล้วแตะที่  และเลือก **ตั้งค่าโทรศัพท์**
- 2 แตะ **ข้อมูลความจำ** แล้วเลือก **ความจำการ์ด**
- 3 แตะที่ **ฟอร์แมต** แล้วยืนยันการเลือกของคุณ
- 4 ใส่รหัสผ่าน  
หากมีการกำหนดไว้ และการดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

**หมายเหตุ:** หากการ์ดหน่วยความจำของคุณมีข้อมูลอยู่ภายในแล้ว ข้อมูลต่างๆ จะถูกกำหนดให้อยู่ในไฟล์เดอร์ตที่ถูกดองโดยอัตโนมัติ ตัวอย่างเช่น วิดีโอจะเก็บไว้ในไฟล์เดอร์ตวีโอส่วนตัว

# แผนผังเมนู

แตะที่  ในหน้าจอสแตนด์บายเพื่อเปิด **เมนูหลัก** จากขั้นตอนนี้ คุณสามารถเข้าใช้เมนูต่างๆ ได้ดังนี้: **การติดต่อ, ความบันเทิง, ยูทิลิตี้ และ ตั้งค่า**

## การติดต่อ

รายชื่อ  
ข้อมูลโทร  
ข้อความ  
อีเมล  
โทรออก  
SNS  
โทรด่วน  
เขียนข้อความ

## ความบันเทิง

กล่อง  
คลังภาพ  
เพลง  
แฟ้มข้อมูล  
เกมส์&แอปฯ  
Pocket Apps  
วิทยุ FM  
กล่องวีดีโอ

## ยูทิลิตี้

เบร่าเซอร์  
Google  
ตั้งปลุก  
สมุดบันทึก  
บันทึก  
บันทึกเสียง  
เครื่องมือ  
การวาด

## ตั้งค่า

ตั้งค่าซิมคู่  
โปรไฟล์  
ตั้งค่าหน้าจอ  
ตั้งค่าโทรศัพท์  
ตั้งค่าการโทร  
บลูทูธ  
การเชื่อมต่อ  
Wi-Fi

# หน้าจอสแตนด์บาย

จากหน้าจอสแตนด์บาย คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ, โทรออกแบบด่วน และดูสถานะของโทรศัพท์ และอื่นๆ ได้อีกมากมาย



## เคล็ดลับสำหรับหน้าจอสัมผัส

หน้าจอหลักยังเป็นที่ที่ดีเยี่ยมที่จะช่วยฝึกให้คุณเคยชินกับหน้าจอสัมผัสได้

ในการเลือกรายการ ให้แตะที่ไอคอนอย่างถูกต้อง โทรศัพท์ GX500 จะสั่นเล็กน้อย

เมื่อคุณแตะที่ตัวเลือกใดๆ ในการเลื่อนดูรายการต่างๆ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้น ทำให้มองเห็นรายการอื่นๆ ได้

- คุณไม่จำเป็นต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน


- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนตัวเลือกอื่นๆ รอบข้าง
  - เมื่อไฟหน้าจอดับลง ให้กดปุ่มปลดล็อค/ล็อคที่ด้านขวามือเพื่อกลับไปยังหน้าจอหลัก
  - ห้ามปิดคลุมโทรศัพท์ด้วยซองหรือปลอก หน้าจอสัมผัสจะไม่ทำงาน หากมีวัตถุใดๆ ปิดคลุมอยู่
  - หน้าจอเมื่อไม่ได้ใช้งานมี 2 ประเภท. ลากนิ้วไปทางซ้ายหรือทางขวาเพื่อเปลี่ยนประเภทหน้าจอเมื่อไม่ได้ใช้งานในหน้าจอสแตนด์บาย
- 1** ไม่ใช้งาน Widget - เมื่อคุณแตะที่  พาเนล Widget สำหรับโทรศัพท์มือถือก็จะปรากฏขึ้น
  - 2** ไม่ใช้งานโทรด่วน - เมื่อคุณแตะที่  รายการโทรด่วนจะปรากฏขึ้น คุณสามารถลากและคลิกสิ่งที่คุณต้องการได้ในหน้าจอเมื่อไม่ได้ใช้งานทั้ง 2 ประเภท

# หน้าจอสแตนด์บาย

## ปุ่มด่วน

ปุ่มด่วนจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับใช้โทรออก ป้อนหมายเลขเหมือนกันกับการใช้ปุ่มกดทั่วไป แล้วแตะที่ โทร หรือกดปุ่ม 



แตะเพื่อเปิดสมุดโทรศัพท์ ในการค้นหาหมายเลขที่คุณต้องการ โทรหาเพื่อนชื่อที่ด้านบนของหน้าจอโดยใช้ปุ่มสัมผัส คุณยังสามารถสร้างรายชื่อใหม่และแก้ไขรายชื่อที่มีอยู่ได้



แตะเพื่อเข้าใช้เมนูข้อความ คุณสามารถสร้าง SMS หรือ MMS ใหม่ หรือดูข้อความในโฟลเดอร์ได้


















แตะเพื่อเปิดเมนูบนสุดแบบเต็ม โดยจะแบ่งเป็นเมนูย่อยแนวตั้ง 4 เมนู แตะที่แท็บของเมนูย่อยแต่ละเมนูเพื่อดูตัวเลือกต่างๆ

## แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีใช้งานบลูทูธหรือ GPRS อยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

| ไอคอน   | รายละเอียด                               |
|---|--|
|    | มัลติทาสกิ้ง                             |
|    | ระดับของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป) |
|    | ไม่มีสัญญาณเครือข่าย                     |
|   | พลังงานแบตเตอรี่ที่เหลืออยู่             |
|  | แบตเตอรี่หมด                             |
|  | ข้อความตัวอักษรใหม่                      |
|  | ข้อความเสียงใหม่                         |

| ไอคอน   | รายละเอียด                      |
|---|---------------------------------|
|    | ข้อความในถาดเข้าเต็ม            |
|    | การส่งข้อความล้มเหลว            |
|    | การส่งข้อความมัลติมีเดียล้มเหลว |
|    | ตั้งปลุกแล้ว                    |
|    | ใช้โปรไฟล์เสียงที่ปรับแต่งเอง   |
|    | ใช้โปรไฟล์ปกติอยู่              |
|    | ใช้โปรไฟล์นอกอาคารอยู่          |
|    | ใช้โปรไฟล์เงียบอยู่             |
|    | ใช้โปรไฟล์ชุดหูฟังอยู่          |
|    | โอนสายเรียกเข้า                 |
|  | ใช้ EDGE อยู่                   |
|  | โรมมิ่ง                         |
|  | เปิดใช้โหมด Flight              |
|  | ใช้งานบลูทูธ                    |
|  | เล่น BGM                        |

# หน้าจอสแตนด์บาย

| ไอคอน   | รายละเอียด                     |
|---|--------------------------------|
|  | หยุด BGM ชั่วคราว              |
|  | การ์ดหน่วยความจำ<br>เปิดใช้งาน |
|  | Wi-Fi                          |

## การเปลี่ยนสถานะจาก แถบสถานะ

แตะที่แถบสถานะเพื่อเปิด  
สรุปสถานะ

โดยจะแสดงเวลาปัจจุบัน,  
เครือข่าย, SVC

ID, แบตเตอรี่,  
หน่วยความจำเครื่อง,


หน่วยความจำภายนอก,  
รูปแบบเสียง, MP3


และสถานะบลูทูธ คุณสามารถ

กำหนดประเภทรูปแบบเสียง  
เล่น/หยุดชั่วคราว MP3 และ

เปิด/ปิดการทำงานบลูทูธ




## การใช้ฟังก์ชันการ ทำงานหลายอย่าง


กดปุ่มมัลติทาสกิ้ง  เพื่อ  
เปิดเมนูมัลติทาสกิ้ง จากเมนูนี้  
คุณสามารถดูแอปพลิเคชันทั้ง  
หมดที่รันอยู่ และเข้าใช้งานได้  
ด้วยการกดปุ่มเดียว

เมื่อคุณกำลังรันแอปพลิเคชัน  
ไว้ที่พื้นหลัง (เช่น เกมส์  
หรือวิทยุ FM) ไอคอน  จะ  
ปรากฏขึ้นในแถบสถานะ


# การโทร

## การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดเพื่อลบตัวเลขให้แตะที่ปุ่มลบ
- 3 กดปุ่ม  หรือแตะที่โทรเพื่อเริ่มการโทรออก
- 4 ในการวางสาย ให้กดปุ่ม 



**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ กดปุ่ม  ค้างไว้


## การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่  เพื่อเปิดสมุดแอดเดรส
- 2 ป้อนตัวอักษร 2-3 ตัวแรกของรายชื่อที่คุณต้องการโทรหา
- 3 จากรายการที่ฟลิตเตอร์นี้ ให้แตะที่รายชื่อที่ต้องการโทรหา แล้วเลือกหมายเลขที่จะใช้ หากมีการบันทึกไว้มากกว่าหนึ่งหมายเลข

## 4 แตะ

## การรับสายและการปฏิเสธสายเรียกเข้า



เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  หรือแตะที่  เพื่อรับสาย

แตะที่  เพื่อปิดเสียงกริ่ง วิธีนี้เป็นวิธีที่ดี หากคุณสัมผัสเปลี่ยนรูปแบบเป็น เงียบ เมื่ออยู่ในห้องประชุม

กดปุ่ม  หรือแตะที่  เพื่อปฏิเสธสายเรียกเข้า

## โทรด่วน




คุณสามารถกำหนดรายชื่อที่โทรออกบ่อยเป็นหมายเลขโทรด่วนได้


- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิดรายชื่อ
- 2 แตะที่  แล้วเลือก โทรด่วน
- 3 ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะเปลี่ยนไม่ได้ แตะที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน

# การโทร

- 4 สมุดที่อยู่จะเปิดขึ้น เลือก รายชื่อที่คุณต้องการกำหนด ให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้งในการค้นหารายชื่อ ให้แตะที่กล่องฟิลด์ค้นหา และป้อนตัวอักษรแรกของชื่อที่ต้องการ

## การใช้สายที่สอง


- 1 ในระหว่างการโทรสายแรก ให้แตะที่  แล้วเลือกหมายเลขที่คุณต้องการโทรออก
- 2 หมุนหมายเลขโทรออกหรือค้นหารายชื่อ
- 3 กด  เพื่อต่อสาย
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและปักสายคู่สนทนา
- 5 ในการสลับสาย ให้แตะที่  และเลือก สลับสาย หรือกดหมายเลขที่ปักสายไว้

- 6 ในการวางสายใดสายหนึ่ง หรือวางสายทั้งสองสาย ให้กด  และเลือก วางสาย แล้วตามด้วย ทั้งหมด, ปัก หรือ ใช้งาน

**เคล็ดลับ!** คุณสามารถรวมสายเข้าด้วยกันได้โดยการเลือก ยอมรับ จากนั้นเลือก รวม ควรตรวจสอบว่าผู้ให้บริการเครือข่ายสนับสนุนการประชุมสายนี้

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

## การดูบันทึกการโทร

แตะที่  และเลือก การติดต่อ และแตะที่ ข้อมูลการโทรล่าสุด เลือกเพื่อดู:


**ทุกสาย -**  
ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

**สายโทรออก -**  
ดูรายการหมายเลขที่คุณโทรออกทั้งหมด




## สายที่ได้รับ -

ดูรายการหมายเลข  
ที่โทรเข้ามาหาคุณทั้งหมด

สายไม่ได้รับ - ดูรายการสาย  
ที่คุณไม่ได้รับทั้งหมด

**เคล็ดลับ!** จากบันทึกการโทร  
ให้แตะที่  และ  
ลบทั้งหมด เพื่อลบรายการที่  
บันทึกไว้ทั้งหมด




## การใช้การโอนสาย

- 1 แตะที่  เลือก   
และเลือก 
- 2 แตะที่ การโอนสาย
- 3 เลือกว่าจะโอนทุกสาย,  
โอนเมื่อสายไม่ว่าง,  
โอนเมื่อไม่รับสาย  
หรือโอนเมื่อติดต่อไม่ได้
- 4 ป้อนหมายเลขที่คุณต้องการ  
ให้โอนสายไป
- 5 แตะที่ คำขอ  
เพื่อเปิดใช้งาน

**หมายเหตุ:** คุณต้องเสียค่า  
ใช้จ่ายในการโอนสายด้วย  
โปรดติดต่อผู้ให้บริการเครือข่าย  
ของคุณสำหรับรายละเอียดเพิ่มเติม

**เคล็ดลับ!** ในการปิดการโอน  
สายทั้งหมด ให้เลือก เลิก  
ใช้ทั้งหมด จากเมนู การ  
โอนสาย




## การใช้การป้องกันการโทร

- 1 แตะที่  เลือก  และ  
เลือก 
- 2 แตะที่ ป้องกันการโทร
- 3 เลือกตัวเลือกใดตัวเลือก  
หนึ่ง หรือเลือกทั้ง 6 ตัว  
เลือกนี้:  
โทรออกทั้งหมด  
โทรออกต่างประเทศ  
สายโทรออกต่างประเทศ  
ยกเว้นประเทศแม่  
สายเรียกเข้าทั้งหมด  
สายเข้าเมื่ออยู่ต่าง  
ประเทศ  
เลิกใช้ทั้งหมด
- 4 ป้อนรหัสผ่านสำหรับจำกัด  
การโทร โปรดตรวจสอบกับ  
ผู้ให้บริการระบบเครือข่าย  
ของคุณเกี่ยวกับบริการนี้

# การโทร

**เคล็ดลับ!** เลือกกำหนดเบอร์โทรออก เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

## การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 แตะที่  เลือก  และเลือก 
- 2 แตะที่ **ตั้งค่าทั่วไป** จากหน้าจอนี้ คุณสามารถแก้ไขการตั้งค่าของ:
  - ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปที่ **เปิด** เพื่อเลื่อนแถบไปที่ ปฏิเสธรายการ คุณสามารถแตะที่กล่องข้อความเพื่อเลือกจากทุกสายรายชื่อ หรือกลุ่มที่ระบุไว้ หรือจากหมายเลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อของคุณ)
  - แตะที่ **บันทึก** เพื่อเปลี่ยนการตั้งค่า

**ส่งหมายเลขตัวเอง** - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

**โทรซ้ำอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

**โหมดตอบรับ** - เลือกว่าจะรับสายโดยใช้ปุ่มรับสายหรือปุ่มใดๆ

**เตือนทุกนาที** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย

**โหมดตอบรับ BT** - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธ หรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

**บันทึกหมายเลขใหม่** - เลือก **ใช่** เพื่อบันทึกหมายเลขใหม่

# รายชื่อ

## การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้

2 วิธี:

### จากหน้าจอสแตนด์บาย

1 จากหน้าจอสแตนด์บาย

ให้แตะที่ 

เพื่อเปิดสมุดแอดเดรส

เลือกรายชื่อจากรายการ  
ที่คุณต้องการโทร

2 แตะที่  หรือกดปุ่ม 

เพื่อเริ่มการโทรออก

### จากเมนูหลัก

1 แตะที่  เลือก 

2 แตะที่ **รายชื่อ** แล้วแตะ  
ค้นหา

3 คุณจะเห็นรายชื่อ

การพิมพ์ตัวอักษรแรกของ

ชื่อจะทำให้เมนูข้ามไปที่

พื้นที่ของรายชื่อตาม

ตัวอักษรนั้น

**เคล็ดลับ!** ปุ่มกดตัวอักษรจะ  
ปรากฏขึ้นเมื่อคุณแตะที่  
สี่เหลี่ยมวาง

## การเพิ่มรายชื่อใหม่

1 จากหน้าจอสแตนด์บาย

ให้แตะที่  และแตะที่

**เพิ่มรายชื่อ**

2 เลือกว่าจะบันทึกรายชื่อไป

ยังตัวเครื่อง หรือซิม

(ซิม 1/ซิม 2)

3 ป้อนชื่อและนามสกุลของ

รายชื่อติดต่อใหม่ คุณไม่จำ

เป็นต้องป้อนทั้งสองรายการ

แต่คุณต้องป้อนรายการใด

รายการหนึ่ง

4 คุณสามารถป้อนหมายเลข

ที่แตกต่างกันได้สูงสุด 5

หมายเลขต่อหนึ่งรายชื่อ

แต่ละรายการจะมีประเภท

ที่ตั้งล่วงหน้า **เบอร์มือถือ,**

**โฮม, ออฟฟิศ,**

**เบอร์เพจเจอร์,**

**แฟกซ์ และ ทั่วไป**

เมื่อคุณป้อนเสร็จแล้ว

ให้แตะที่ **ปิด**

5 เพิ่มอีเมลแอดเดรส

# รายชื่อ

6 กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า เลือกจาก **ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ วิไอพี**

7 คุณสามารถเพิ่มเสียงเรียกเข้า, วันเกิด, วันครบรอบ, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท และ บันทึก

8 แตะที่ **บันทึก** เพื่อบันทึกรายชื่อ

## การสร้างกลุ่ม

1 แตะ 

2 แตะที่ **รายชื่อ** แล้วเลือก **กลุ่ม**

3 แตะ 

4 เลือก **เพิ่มกลุ่ม**

5 ป้อนชื่อสำหรับกลุ่มใหม่ของ คุณ คุณสามารถกำหนดเสียงเรียกเข้าให้กับกลุ่มได้

6 แตะที่ **บันทึก**

**หมายเหตุ:** หากคุณลบกลุ่มรายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในสมุดแอดเดรส

## การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับสมุดแอดเดรสในแบบที่คุณต้องการได้

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

1 จากหน้าจอแสดงแถบย่อให้แตะที่ 

2 แตะที่ **รายชื่อ** แล้วแตะที่ **ตั้งค่า**

**3** จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:  
**ตั้งค่ารายชื่อ** - เลือกว่าจะดูรายชื่อที่บันทึกไว้ทั้งในตัวเครื่อง และซิม 1 และซิม 2 หรือตัวเครื่อง, ซิม 1 และซิม 2

นอกจากนี้ คุณยังสามารถเลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อขึ้นก่อนก็ได้  
**คัดลอก** - คัดลอกรายชื่อระหว่างซิมการ์ด (ซิม 1 หรือซิม 2) กับโทรศัพท์ เลือกว่าจะคัดลอกที่ละรายการ หรือทั้งหมดในครั้งเดียว หากคุณเลือกดำเนินการที่ละรายการ คุณจะต้องเลือกรายชื่อที่จะคัดลอกที่ละรายชื่อ

**ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับ คัดลอก แต่จะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้น ดังนั้น หากคุณย้ายรายชื่อจากซิมไปยังตัวเครื่อง รายชื่อนั้นจะถูกลบออกจากหน่วยความจำซิม

**ส่งทุกรายชื่อผ่านบลูทูธ** - ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช้บลูทูธ เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธหากคุณเลือกตัวเลือกนี้


**สำรองข้อมูลรายชื่อ** - โปรดดูที่ การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ ในส่วน PC ซิงค์

**สำรองข้อมูลรายชื่อ** - โปรดดูที่ การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์ ในส่วน PC ซิงค์  
**ลบรายชื่อ** -

ลบรายชื่อของคุณทั้งหมดและที่ **ใช่** หากคุณต้องการล้างสมุดที่อยู่ของคุณ

# รายชื่อ

## การดูข้อมูล

- 1 จากหน้าจอสแตนด์บาย ให้แตะที่ 
- 2 แตะที่ **รายชื่อ** แล้วแตะที่ **ข้อมูล**
- 3 จากขั้นตอนนี้ คุณจะสามารดู **เบอร์บริการ, เบอร์ส่วนตัว** และ **ข้อมูลความจำ** (จำนวนพื้นที่หน่วยความจำที่เหลืออยู่) และ **นามบัตร** ของคุณได้





**เคล็ดลับ!** หากคุณยังไม่ได้เพิ่มนามบัตรของคุณเอง เลือก **นามบัตร** แล้วป้อนรายละเอียดทั้งหมดที่คุณต้องการส่งให้รายชื่อ แตะที่ **บันทึก** เพื่อดำเนินการให้เสร็จสิ้น

# ข้อความ



## ข้อความ

โทรศัพท์ GX500  
ของคุณได้ผสมผสาน  
SMS, MMS  
และอีเมลไว้ในเครื่องเดียว  
และเมนูที่ใช้ง่าย

คุณสามารถเข้าสู่ศูนย์  
ข้อความได้ 2 วิธี ดังนี้:


- 1 แตะที่  จากหน้าจอสแตนด์บาย
- 2 แตะที่  จากหน้าจอสแตนด์บาย แล้วเลือก  และเลือก 

## การส่งข้อความ


- 1 แตะที่ **ข้อความใหม่** เพื่อเปิดข้อความว่าง
- 2 จากขั้นตอนนี้ คุณสามารถส่ง SMS หรือ MMS ได้ ในการส่งอีเมล ให้แตะที่  จากหน้าจอสแตนด์บาย แล้วเลือก  และ **อีเมล**
- 3 แตะที่ **แทรก** เพื่อเพิ่มภาพ, วิดีโอ, เสียง หรือข้อความอัตโนมัติ

4 แตะที่ **ถึง** ที่ด้านบนสุดของ หน้าจอเพื่อป้อนหมายเลข โทรศัพท์ของผู้รับ หรือแตะไอคอนการค้นหา เพื่อเปิดสมุดแอดเดรส คุณสามารถเพิ่มรายชื่อ หลายรายการได้ แตะที่ **ส่ง** เมื่อพร้อม

**หมายเหตุ:** คุณสามารถส่ง SMS ไปยังผู้ใช้หลายคนได้ใน ครั้งเดียว คลิกที่ไอคอน คนหารายชื่อ และเลือกหลาย รายการจากตัวเลือกที่ผู้ใช้ สามารถเลือก/ไม่เลือกรายชื่อ ในการส่งข้อความ ในการส่ง SMS ไปยังกลุ่มของรายชื่อ ให้คลิกที่ไอคอนคนหารายชื่อ และเลือกคนหาตามกลุ่ม เมื่อเขียน SMS เสร็จแล้ว

 **คำเตือน:** การส่งข้อความให้กับผู้รับจะคิดค่าใช้จ่ายที่ 1 หน้าข้อความ ตัวอักษรต่อผู้รับหนึ่งราย


# ข้อความ

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น


## การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 5 วิธีดังนี้:


ปุ่มกด, คีย์บอร์ด, เขียนมือ-สกรีน, เขียนมือ-บ็อกซ์, เขียนมือ-ดัมเบิลบ็อกซ์


คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และวิธีป้อนข้อมูล

แตะที่หน้าจอหนึ่งครั้ง แป้นพิมพ์จะปรากฏขึ้น

 **แตะเพื่อเปิดระบบป้อนข้อความแบบช่วยสะกดคำ T9**

 **คุณสามารถเลือกภาษาที่ใช้เขียนได้**

 **แตะเพื่อเปลี่ยนปุ่มกดตัวเลข, สัญลักษณ์ และข้อความ**

ใช้  เพื่อเลื่อนดูประเภทแป้นพิมพ์แบบต่างๆ ในโหมดป้อนข้อความแต่ละโหมด (ตัวอย่างเช่น ตัวพิมพ์ใหญ่หรือตัวพิมพ์เล็ก)

## ระบบช่วยสะกดคำ T9

โหมด T9 จะใช้พจนานุกรมภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะคาดคะเนได้ถึงคำศัพท์ที่คุณต้องการใช้ ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6, 6, 3 เพื่อเขียนคำว่า 'telephone'

## การป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วยตนเอง คุณต้องแตะที่ปุ่มซ้ำๆ เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'hello' ให้แตะ 4 สองครั้ง, 3 สองครั้ง, 5 สามครั้ง, 5 สามครั้ง อีกครั้งหนึ่ง แล้ว 6 สามครั้ง

## แป้นพิมพ์

ในโหมดคีย์บอร์ด หน้าจอจะพลิกด้านเป็นแนวนอน และแป้นพิมพ์แบบเต็มจะปรากฏขึ้นบนหน้าจอ

เพียงแตะที่ตัวอักษรต่างๆ เพื่อเขียนข้อความ แลวกด:

 เพื่อเปลี่ยนเป็นตัวพิมพ์ใหญ่

## การจดจำลายมือ




ในโหมด การจดจำลายมือ คุณจะเขียนบนหน้าจอและ GX500 ของคุณจะแปลงลายมือของคุณเป็นข้อความเลือก **เขียนมือ-สกรีน** หรือ **เขียนมือ-ดับเบิลบ็อกซ์** ขึ้นอยู่กับมุมมองที่คุณต้องการ

**เคล็ดลับ!** การใช้สไตลัสในโหมดนี้จะทำให้คุณทำงานได้ง่ายขึ้น โปรดคอยๆแตะสไตลัสที่หน้าจอเพื่อป้องกันหน้าจอเสียหาย

การจดจำลายมือจะแปลงการเคลื่อนไหวของสไตลัสเป็นตัวอักษร, ตัวเลขหรืออักขระอื่นๆ และจะแสดงอักขระเหล่านี้เป็นข้อความ คุณสามารถใช้การจดจำลายมือได้เมื่อป้อนข้อความเท่านั้น

## การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ GX500 ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอคเคาท์แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย





- 1 แตะที่  แล้วแตะที่ 
- 2 เลือก 
- แล้วเลื่อนเมนูไปที่ **ตั้งค่า**
- 3 แตะที่ **อีเมล** แล้วเลือก **แอคเคาท์อีเมล**
- 4 แตะที่ **เพิ่มแอคเคาท์**
- 5 **วิซาร์ดตั้งค่า** จะช่วยคุณตั้งค่าอีเมล

# ข้อความ

- 6** คุณสามารถตรวจสอบและแก้ไขการตั้งค่าได้โดยเลือก แอคเคาท์ในรายการ นอกจากนี้ คุณยังสามารถตรวจสอบการตั้งค่าเพิ่มเติมซึ่งมีข้อมูล โดยอัตโนมัติเมื่อคุณสร้างแอคเคาท์
- 7** คุณสามารถเปลี่ยนอีเมลแอคเคาท์ดีฟอลต์ได้โดยแตะที่ **เปิดใช้**



## การตั้งข้อมูลอีเมล

คุณสามารถตรวจสอบอีเมลใหม่ในแอคเคาท์ของคุณแบบอัตโนมัติหรือด้วยตนเองได้ในการตรวจสอบด้วยตนเอง:

- 1** แตะที่  แล้วเลือก  และ 
- 2** แตะที่ **เมลบอกซ์**
- 3** แตะที่แอคเคาท์ที่คุณต้องการใช้ แล้วเลือก 
- 4** เลือก **เรียกดู** และโทรศัพท์ GX500 จะเชื่อมต่ออีเมลแอคเคาท์ และดึงข้อมูลข้อความใหม่ของคุณ

## การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลให้เป็นในแบบที่คุณต้องการได้

- 1** แตะที่  แล้วเลือก 
- 2** แตะที่ **ตั้งค่า** และ **อีเมล** ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:
  - ตอบกลับอีเมลได้** - เลือกเพื่อให้ส่งข้อความ 'ยืนยันการอ่าน'
  - ร้องขอการตอบกลับอีเมล** - เลือกว่าต้องการข้อความยืนยันการอ่านหรือไม่
  - รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ GX500 ตรวจสอบข้อความอีเมลใหม่
  - จำนวนที่รับ** - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง
  - รวมข้อความ** - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

**รวมสิ่งที่แนบ** - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

**เรียกอัตโนมัติในการโรมมิ่ง** - เลือกว่าจะดึงข้อความโดยอัตโนมัติหรือไม่

**แจ้งเตือนอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

**ลายเซ็น** - สร้างลายเซ็นสำหรับอีเมล และเปิดคุณสมบัตินี้

**ระดับความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล

## **โฟลเดอร์ข้อความ**

คุณจะได้รับถึงโครงสร้างโฟลเดอร์ที่ใหม่ในโทรศัพท์ GX500 ได้ เนื่องจากโฟลเดอร์ต่างๆ มีโครงสร้างที่เข้าใจง่าย

**ข้อความใหม่** - เปิดข้อความเปล่าใหม่

**ถัดเข้า** - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถัดเข้าจากเมนูนี้คุณสามารถดูลบ และดำเนินการอื่นๆ ได้โปรดดูรายละเอียดเพิ่มเติมที่ **การจัดการข้อความ** ด้านล่างนี้

**ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

**ถัดออก** - โฟลเดอร์นี้เป็นโฟลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

**รายการที่ส่ง** - ข้อความที่คุณส่งจะอยู่ในโฟลเดอร์นี้

**โฟลเดอร์ส่วนตัว** - สร้างโฟลเดอร์เพื่อจัดเก็บข้อความ

**ข้อความอัตโนมัติ** - ใช้รายการข้อความตัวอักษรและมัลติมีเดียอัตโนมัติที่ใช้กันทั่วไป

**อีโมติคอน** - เพิ่มและแทรกอีโมติคอนสำหรับข้อความของคุณ

**ตั้งค่า** - เปลี่ยนแปลงการตั้งค่าของข้อความตัวอักษรและมัลติมีเดีย

# ข้อความ

## การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ GX500 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในแบบที่คุณต้องการ

**เคล็ดลับ!** ในการเลื่อนดูรายการตัวเลือก ให้แตะที่รายการสุดท้ายที่มองเห็นแล้วใช้นิ้วเลื่อนหน้าจอขึ้นรายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้

แตะที่  แล้วเลือก

ตั้งค่า ใน  เลือก

### ข้อความตัวอักษร

คุณสามารถเปลี่ยนแปลง:

**ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

**อายุข้อความ** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ




**ประเภทข้อความ** - แปลงข้อความเป็น **ข้อความ, เสียง, แฟกซ์, X.400** หรือ **อีเมล**

**การเข้ารหัสตัวอักษร** - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

**การส่งข้อความยาว** - เลือกเพื่อส่งข้อความยาวเป็นหลาย SMS หรือเป็น MMS

## การเปลี่ยนการตั้งค่าข้อความนัดมีเดีย


การตั้งค่าข้อความของโทรศัพท์ GX500 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนแปลงการตั้งค่านี้ได้ในแบบที่คุณต้องการ

แตะที่  เลือก  และ   
เลือก **ตั้งค่า** และ  
**ข้อความนัดคืนเดียว**  
คุณสามารถเปลี่ยนแปลง:  
**โหมดการเรียกข้อมูล** -  
เลือก **โสม** หรือ  
**เครือข่ายโรมมิ่ง**  
หากคุณเลือก กำหนดเอง  
คุณจะได้รับเฉพาะ  
ข้อความแจ้ง MMS และคุณ  
สามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่  
**รายงานผลการส่ง** -  
เลือกเพื่อให้ส่งและ/  
หรือต้องการรายงานผลการส่ง  
**รายงานการอ่าน** -  
เลือกเพื่อให้ส่งและ/  
หรือต้องการรายงานการอ่าน  
**ระดับความสำคัญ** -  
เลือกระดับความสำคัญของ  
MMS  
**อายุข้อความ** - เลือกระยะเวลา  
เวลาที่จัดเก็บข้อความไว้ใน  
ศูนย์ข้อความ  
**ระยะเวลาสไลด์** - เลือก  
ระยะเวลาที่จะให้สไลด์ปรากฏ  
บนหน้าจอ

**โหมดการสร้าง** -  
เลือกโหมดข้อความ  
**เวลาส่ง** - เลือกระยะเวลาก่อน  
ส่งแต่ละข้อความ  
**ศูนย์ MMS** - ป้อนราย  
ละเอียดของศูนย์ข้อความ  
**การเปลี่ยนการตั้งค่า  
อื่นๆ**  
แตะที่  แล้วเลือก **ตั้งค่า**  
ใน  และ:  
**ข้อความเสียง** - แตะที่   
เพื่อเพิ่มบริการข้อความเสียง  
ใหม่ ติดตามที่ผู้ให้บริการระบบ  
เครือข่ายของคุณสำหรับขอ  
มูลเพิ่มเติมเกี่ยวกับบริการที่  
มีให้  
**ข้อความบริการ** - เลือกเพื่อ  
รับหรือบล็อกข้อความบริการ  
คุณยังสามารถกำหนดความ  
ปลอดภัยของข้อความได้โดย  
การสร้างรายการผู้ส่งที่เชื่อถือ  
ได้และเชื่อถือไม่ได้  
**บริการข้อมูล** - เลือกสถานะ  
การรับ, ภาษา  
และการตั้งค่าอื่นๆ

# กล้องถ่ายรูป

## การถ่ายภาพด่วน

- 1 กดปุ่มฮอตคีย์กล้องถ่ายรูปที่ด้านขวาของโทรศัพท์สั้นๆ
- 2 ช่องมองภาพจะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ในแนวนอนและหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 4 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่จะถ่ายในหน้าจอตัวอย่าง
- 5 เมื่อกำลังจับโฟกัสที่วัตถุแล้ว ให้กด  ที่ด้านข้างของโทรศัพท์หรือกดกล้องสีเหลี่ยมสีแดงที่มุมขวากลางของหน้าจอเพื่อถ่ายภาพ

หลังจากที่ถ่ายภาพแล้ว ภาพที่ถ่ายจะปรากฏบนหน้าจอ



แตะเพื่อส่งรูปภาพเป็นข้อความ, อีเมล หรือบลูทูธ โปรดดูที่ การส่งข้อความ และ การส่งและการรับไฟล์โดยใช้บลูทูธ

หมายเหตุ: การดาวน์โหลด MMS ขณะอยู่ในเครือข่ายโรมมิ่งอาจมีค่าใช้จ่ายเพิ่มเติม



แตะเพื่อแก้ไขชื่อของภาพที่เลือก



แตะเพื่อใช้ภาพนี้เป็นพื้นหลัง



แตะเพื่อแก้ไขภาพโดยใช้เครื่องมือต่างๆ



แตะเพื่อกลับไปเมนูก่อนหน้า



แตะเพื่อลบภาพ




แตะเพื่อถ่ายภาพอื่นทันที



แตะเพื่อดูคลังภาพที่บันทึกไว้

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย

**ความสมดุลแสง** -

เลือกระหว่าง อัตโนมัติ, หลอดไฟ, แสงอาทิตย์, ฟลูออเรสเซนต์ หรือ มืดครึ้ม

**ตั้งเวลาถ่ายภาพ** - ตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดปุ่มถ่ายภาพก่อนที่จะถ่ายภาพได้ ให้เลือกจาก **ปิด**, **3 วินาที**, **5 วินาที** หรือ

**10 วินาที** ซึ่งเหมาะสำหรับการถ่ายภาพกลุ่มที่คุณต้องการเป็นส่วนหนึ่งในกลุ่มด้วย

**ซ่อนไอคอน** - เลือกซ่อนไอคอนตั้งค่ากล้องถ่ายรูปด้วยตนเองหรืออัตโนมัติ


**คุณภาพ** - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่าคุณสามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

**เสียงชัตเตอร์** - เลือกเสียงชัตเตอร์เสียงใดเสียงหนึ่งจากสามเสียง

**หน้าจอกрид** - เลือกจาก **ปิด**, **4 ส่วน** หรือ **9 ส่วน**





**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายรูปทั้งหมด

## การดูรูปภาพที่บันทึกไว้

**1** คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูปได้ เพียงแตะที่  และคลังภาพของคุณจะปรากฏบนหน้าจอ









# กล้องวิดีโอ

## การถ่ายวิดีโอด้วย

- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 หรือแตะที่  ในช่องมองภาพในโหมดกล้องถ่ายรูปเพื่อสลับเป็นโหมดวิดีโอ
- 3 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 4 ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
- 5 กดปุ่มถ่ายภาพหนึ่งครั้งเพื่อเริ่มการบันทึก
- 6 **Rec** จะปรากฏขึ้นที่ด้านบนของช่องมองภาพ และตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 7 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  และเริ่มบันทึกต่อโดยเลือก 
- 8 แตะที่  บนหน้าจอ หรือกดปุ่มถ่ายภาพซ้ำอีกครั้งเพื่อหยุดการบันทึก

หลังจากที่ถ่ายวิดีโอแล้ว ภาพหนึ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของ

วิดีโอจะวิ่งไปตามด้านล่างของหน้าจอ พร้อมกับมีไอคอน 8 ไอคอนเรียงอยู่ทางด้านขวามือ

-  แตะเพื่อเล่นวิดีโอ
-  แตะเพื่อส่งวิดีโอเป็นข้อความหรืออีเมลหรือทางบลูทูธ
-  แตะเพื่อแก้ไขวิดีโอ
-  แตะเพื่อแก้ไขชื่อของภาพที่เลือก
-  แตะเพื่อกลับไปเมนูก่อนหน้า
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้
-  แตะเพื่อดูรูปภาพที่บันทึกไว้และคลังภาพวิดีโอ


## การปรับการรับแสง

การรับแสงเป็นตัวกำหนดความแตกต่างระหว่างแสงและความมืด (ความเข้ม) ในวิดีโอ

1 แตะ 

2 เลื่อนตัวบ่งชี้การรับแสงตามแถบ ช่ายเพื่อให้ได้วิดีโอที่มีการรับแสงลดลงและมีวามมากขึ้น หรือขวาเพื่อให้ได้วิดีโอที่มีการรับแสงสูงขึ้น และคมชัดยิ่งขึ้น

### การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะที่  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับวิดีโอที่คุณกำลังถ่าย

**ความสมดุลแสง** - ความสมดุลแสงจะช่วยให้คุณมั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยสมจริงเพื่อใหกลองของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน

**คุณภาพ** - เลือกระหว่างละเอียดมาก, ละเอียด และปกติ

**ตั้งเวลา** - ตั้งระยะเวลาจำกัดสำหรับวิดีโอ

**เคล็ดลับ!** หากคุณเลือกระยะเวลาแบบ MMS ลองเลือกคุณภาพของภาพที่ต่ำลง เพื่อการถ่ายภาพวิดีโอที่ยาวนานขึ้น

### หน่วยความจำ -

เลือกที่จะบันทึกวิดีโอที่ความจำเครื่อง หรือที่หน่วยความจำการ์ด

**เสียง** - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

### การดูวิดีโอที่บันทึกไว้

1 ในช่องมองภาพ แตะที่ 


2 คลังภาพของคุณจะปรากฏบนหน้าจอ

3 แตะที่วิดีโอที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพ


4 แตะที่วิดีโออีกครั้งเพื่อเปิดทั้งไฟล์

# รูปภาพและวิดีโอ

## การดูรูปภาพและวิดีโอ

- 1 แตะที่  บนหน้าจอเพื่อดูตัวอย่างในกล้องถ่ายรูป
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์

**เคล็ดลับ!** ลากนิ้วไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น

**เคล็ดลับ!** ในการลบภาพถ่ายหรือวิดีโอ ให้เปิดไฟล์นั้นๆ แล้วเลือก  แตะที่ **ใช่** เพื่อยืนยัน

## การใช้การซูมขณะดูรูปภาพ

เมื่อดูรูปภาพ คุณสามารถซูมเข้าและซูมออกได้

## การปรับระดับเสียงขณะดูวิดีโอ


ในการปรับระดับเสียงของวิดีโอขณะที่กำลังเล่น ให้แตะที่แถบระดับเสียงที่ด้านล่างของหน้าจอหลังจากกดสัญลักษณ์ลำโพง หรือใช้ปุ่มระดับเสียงที่ด้านข้างของโทรศัพท์

## การตั้งค่ารูปภาพเป็นพื้นหลัง


- 1 แตะที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลังเพื่อเปิด
- 2 แตะที่หน้าจอเพื่อเปิดเมนูตัวเลือก
- 3 แตะที่เมนูหน้าจอหลัก
- 4 คุณสามารถซูมเข้าและออกและย้ายส่วนที่ครอบของรูปภาพได้โดยใช้ภาพขนาดย่อที่ด้านล่างของหน้าจอ


## การแก้ไขรูปภาพ


คุณสามารถใช้คุณสมบัติที่ยืดหยุ่นมากมายในการเปลี่ยนแปลงรูปภาพ เพิ่มหรือทำให้รูปภาพมีชีวิตชีวขึ้น


**1** เปิดรูปภาพที่คุณต้องการแก้ไขและแตะที่  เพื่อแสดงตัวเลือก


**2** แตะที่ไอคอนเพื่อปรับรูปภาพของคุณ:


 **ครอป**รูปภาพของคุณ เลือกพื้นที่การครอปภาพแบบสี่เหลี่ยมหรือวงกลม แล้วเลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่


 **วาด**ลายเส้นบนรูปภาพของคุณได้อย่างอิสระ เลือกความหนาของเส้นจาก 4 ตัวเลือก จากนั้นเลือกสีที่คุณต้องการใช้

 **T** การเพิ่มตัวหนังสือลงบนรูปภาพ โปรดดูที่ **การเพิ่มข้อความลงในรูปภาพ**


 **ดัด**แต่งรูปภาพของคุณด้วยสแตมป์ เลือกจากสแตมป์ต่างๆ แล้วแตะบริเวณที่คุณต้องการวาง


 **ลบ**การแก้ไขที่คุณทำไว้ในรูปภาพ คุณสามารถเลือกขนาดของยางลบที่คุณจะใช้ได้


 **แตะ**เพื่อกลับไปที่คุณภาพ

 **บันทึก**การเปลี่ยนแปลงที่คุณทำกับรูปภาพ เลือกเพื่อบันทึกการเปลี่ยนแปลงเป็น **อัปเดตที่มี** หรือ **ไฟล์ใหม่** หากคุณเลือก **ไฟล์ใหม่** ให้ป้อนชื่อไฟล์

 **ลบ**การแก้ไขที่คุณทำไว้ในรูปภาพ




 **แตะ**เพื่อเปิดตัวเลือกเอฟเฟกต์เพิ่มเติม ได้แก่ **หมุน** นอกจากนี้ ยังมีตัวเลือกการแก้ไขขั้นสูงเพิ่มเติมอีก โปรดดูที่ **การเน้นสี** และ **การสลับสีในรูปภาพ**

 **แตะ**เพื่อใช้ตัวเลือกเอฟเฟกต์กับรูปภาพ

 **ซึ่ง**ช่วยปรับการถ่ายภาพโดยใช้สี ความสว่าง และอื่นๆ โดยอัตโนมัติ


# มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์




ในการเข้าใช้งานเมนูมัลติมีเดีย ให้แตะที่  แล้วเลือก  แตะที่  เพื่อเปิดรายการไฟล์เดอ์ที่จัดเก็บไฟล์มัลติมีเดียทั้งหมด

## รูปภาพ

ภาพส่วนตัว ประกอบด้วย รายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

แตะที่  เพื่อเปลี่ยนมุมมองจากมุมมองภาพขนาดย่อเป็นมุมมองรายการ

## การส่งรูปภาพ

- 1 แตะที่  และ 
- 2 แตะที่  แล้วเลือกภาพส่วนตัว
- 3 แตะที่ **ส่ง** และเลือกจาก **ข้อความ**, **อีเมล** หรือ **บลูทูธ**
- 4 หากคุณเลือก **ข้อความ** หรือ **อีเมล** รูปภาพจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** บลูทูธจะเปิดอัตโนมัติ และโทรศัพท์จะค้นหาอุปกรณ์เพื่อส่งรูปภาพ





## การพิมพ์ภาพ

- 1 แตะที่  และ 
- 2 แตะที่  และภาพส่วนตัว
- 3 เลือกภาพแล้วแตะที่ 
- 4 แตะที่ **พิมพ์** แล้วเลือกกระหว่าง **บลูทูธ** และ **PictBridge**

**เคล็ดลับ!** คุณสามารถพิมพ์  
ผ่านบลูทูธ หรือโดยเชื่อม  
ต่อกับเครื่องพิมพ์ที่ใช้ร่วมกับ  
PictBridge ได้

## การย้ายหรือคัดลอก รูปภาพ

คุณสามารถย้ายหรือคัดลอก  
รูปภาพระหว่างหน่วยความจำ  
ของโทรศัพท์กับการ์ดหน่วย  
ความจำได้ เพื่อเป็นการเพิ่ม  
พื้นที่หน่วยความจำในหน่วย  
ความจำใดหน่วยความจำหนึ่ง  
หรือเพื่อป้องกันภาพไม่  
ใหญ่สูญหาย

- 1 แตะที่  และ 
- 2 แตะที่  และ ภาพส่วน  
ตัว
- 3 แตะที่  และเลือก ย้าย  
หรือ คัดลอก
- 4 คุณสามารถเลือก/ไม่เลือก  
ภาพได้โดยแตะที่ภาพ  
เลือกภาพที่คุณต้องการย้าย  
หรือคัดลอกและแตะที่ คัด  
ลอก/ย้าย



## เสียง

โพลเดอร์ เสียงส่วน  
ตัว ประกอบด้วยเสียงที่  
ดาวน์โหลด, เสียงเริ่มต้น  
และ เสียงบันทึก จากชั้น  
ตอนนี้ คุณสามารถจัดการ ส่ง  
หรือกำหนดเสียงเป็นเสียง  
เรียกเข้าได้

## วิดีโอ


โพลเดอร์ วิดีโอส่วนตัว  
จะแสดงรายการวิดีโอที่  
ดาวน์โหลด และวิดีโอที่ได้  
บันทึกไว้ในโทรศัพท์

## การดูวิดีโอ

- 1 แตะที่  และ 
- 2 แตะที่  และ วิดีโอส่วน  
ตัว
- 3 เลือกวิดีโอเพื่อเล่น

# บัลติมี่เดีย




## การส่งวิดีโอคลิป

- 1 เลือกวิดีโอ แล้วแตะที่ 
- 2 แตะที่ ส่ง แล้วเลือกจากข้อความ, อีเมล หรือบลูทูธ
- 3 หากคุณเลือกข้อความหรืออีเมล วิดีโอคลิปจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือกบลูทูธ บลูทูธจะเปิดอัตโนมัติ และโทรศัพท์จะค้นหาอุปกรณ์เพื่อส่งวิดีโอ




## เกมส์และแอปพลิเคชัน

คุณสามารถติดตั้งเกมส์และแอปพลิเคชันใหม่ในโทรศัพท์ได้ เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง

## การติดตั้งเกมส์/แอปพลิเคชันผ่านการติดตั้งภายในเครื่อง

- 1 แตะที่  และ 
  - 2 แตะที่  และ อื่นๆ หรือการดูความจำหากคุณใส่หน่วยความจำภายนอก
  - 3 เลือกไฟล์ (\*.jad หรือ \*.jar) ที่คุณต้องการติดตั้ง และกดคำสั่ง ติดตั้ง แอปพลิเคชันจะถูกติดตั้ง
- หมายเหตุ: ไฟล์ jad ควรมีไฟล์ jar อยู่ภายใน

## การเล่นเกมส์

- 1 แตะที่  และ 
- 2 แตะที่  และ เกมส์ & แอปฯ
- 3 เปิดโพลเดอร์เกมส์ และเลือกและแตะที่เกมส์เพื่อเริ่ม

## เอกสาร

จากเมนู เอกสาร คุณสามารถดูไฟล์เอกสารทั้งหมดได้ จากขั้นตอนนี้ คุณจะสามารถดูไฟล์ Excel, Powerpoint, Word, ข้อความ และ PDF ได้




## การโอนไฟล์ไปที่โทรศัพท์

บลูทูธ คือวิธีการที่ง่ายที่สุดใน การโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงโครไนซ์ของคุณ

ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์ โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏอยู่ใน โฟลเดอร์ เอกสาร หรือ **อื่นๆ**

## การดูไฟล์

- 1 แตะที่  และ 
- 2 แตะที่  และ **เอกสาร**
- 3 เลือกเอกสาร และแตะที่ **ดูอื่นๆ**




โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียวกับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้ในการย้ายไฟล์จาก **อื่นๆ** ไปที่ **เอกสาร**:

- 1 แตะที่  และ 
- 2 แตะที่  และ **อื่นๆ**
- 3 เลือกไฟล์ แล้วแตะที่ 

# บัลติมิดีเดีย

**4** แตะที่ **ย้าย** เลือกโฟลเดอร์ปลายทางจากรายการโดยแตะที่ไอคอนลูกศร หน้าจอจะแสดง **ย้าย** เมื่อการถ่ายโอนเสร็จสมบูรณ์

## เพลง

โทรศัพท์ LG GX500 ของคุณมีเครื่องเล่นเพลงในตัว เพื่อให้คุณเล่นเพลงที่ชื่นชอบทั้งหมด ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่  และ  และ 

จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโฟลเดอร์ต่างๆ ดังนี้:

**เล่นล่าสุด** - ดูเพลงที่เล่นล่าสุดทั้งหมด

**ทุกแทร็ค** - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

**ศิลปิน** - เบลาสต์ดูรายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - เบลาสต์ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบลาสต์ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - เล่นแทร็คแบบสุ่มลำดับ








## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์ คุณยังสามารถใช้ LG PC Suite ได้

ในการโอนไฟล์โดยใช้บลูทูธ:




- 1** ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2** เลือกไฟล์เพลงบนอุปกรณ์แล้วเลือกเพื่อส่งทางบลูทูธ
- 3** เมื่อไฟล์พร้อมที่จะส่งแล้ว คุณยอมรับไฟล์ที่โทรศัพท์โดยแตะที่ **ใช่**
- 4** ไฟล์จะปรากฏขึ้นใน **เพลง > ทุกแทร็ค**

## การเล่นเพลง

- 1 แตะที่  และ 
- 2 แตะที่  และแตะที่ **ทุกแทร็ค**
- 3 เลือกเพลงที่คุณต้องการเล่น
- 4 แตะที่  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 แตะที่  เพื่อข้ามไปยังเพลงถัดไป
- 6 แตะที่  เพื่อข้ามไปยังเพลงก่อนหน้า
- 7 แตะที่  เพื่อกลับไปเมนูเพลง

## การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอร์ **ทุกแทร็ค**

- 1 แตะที่  และ 
- 2 แตะที่  และแตะที่ **ทุกแทร็ค**
- 3 แตะที่ **เพิ่มรายการเพลงใหม่** ป้อนชื่อรายการเพลง และแตะที่ **บันทึก**

4 โพลเดอร์ **ทุกแทร็ค** จะแสดงเพลงทั้งหมดในโทรศัพท์ แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลงเหล่านั้น

5 แตะที่ **บันทึก**

## การใช้วิทยุ

โทรศัพท์ LG GX500 มีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

**หมายเหตุ:** คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง (ช่องเสียบเดียวกับช่องเสียบอุปกรณ์ชาร์จ)

# บัลติมี่เดีย

## การค้นหาสถานี




คุณสามารถตั้งสถานีวิทยุไว้ในโทรศัพท์ได้ โดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก

คุณสามารถบันทึกได้สูงสุด 48 ช่องสถานีในโทรศัพท์ของคุณ คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อนเนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศ

## ในการปรับตั้งอัตโนมัติ:






- 1 แตะที่  และ 
- 2 แตะที่ วิทยุ FM และ 
- 3 แตะที่ สแกนอัตโนมัติ จากนั้น จะเครื่องค้นหาสถานีโดยอัตโนมัติ และกำหนดไว้ที่ช่องสถานีในโทรศัพท์

## การรีเซ็ตสถานี




- 1 แตะที่  และ 
- 2 แตะที่ วิทยุ FM แล้วเลือก 
- 3 เลือก รีเซ็ต เพื่อรีเซ็ตช่องสถานีปัจจุบัน หรือเลือก รีเซ็ตทั้งหมด เพื่อรีเซ็ตช่องสถานีทั้งหมด ช่องสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5 Mhz

# สมุดบันทึก



## การบันทึกเสียงหรือเสียงพูด

- 1 แตะที่  แล้วแตะที่ 
- 2 แตะที่ **บันทึกเสียง**
- 3 แตะที่  เพื่อเริ่มต้นการบันทึก
- 4 แตะที่  เพื่อสิ้นสุดการบันทึก
- 5 แตะที่  เพื่อฟังรายการที่บันทึก




## การใช้เครื่องคิดเลข

- 1 จากหน้าจอแสดงตัวเลข ให้เลือก  แล้วแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **เครื่องคิดเลข**
- 3 แตะที่ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 4 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อน ให้แตะที่  แล้วเลือกระหว่าง **sin, cos, tan, log, ln, exp, sqrt, deg** หรือ **rad** และอื่นๆ

## การแปลงหน่วย



- 1 จากหน้าจอแสดงตัวเลข ให้เลือก  แล้วแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **ตัวแปลงหน่วย**
- 3 เลือกว่าคุณจะแปลง **สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร** หรือ **ความเร็ว**
- 4 จากนั้น คุณสามารถเลือกหน่วย และป้อนค่าที่คุณต้องการแปลง แล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น

## การใส่ชื่อเมืองลงในเวลาทั่วโลก

- 1 จากหน้าจอแสดงตัวเลข ให้เลือก  แล้วแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **เวลาโลก**
- 3 แตะที่  แล้วตามด้วย **เมืองใหม่** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการ และชื่อนั้นจะปรากฏที่ด้านบนของหน้าจอ

# สมุดบันทึก


## การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอแสดงหน้าต่างให้เลือก  แล้วแตะที่  และเลือก **เครื่องมือ**
- 2 เลือก **นาฬิกาจับเวลา**
- 3 แตะที่ **เริ่ม** เพื่อเริ่มต้นตัวจับเวลา
- 4 แตะที่ **รอบ** หากคุณต้องการบันทึกรอบเวลา
- 5 แตะที่ **หยุด** เพื่อหยุดตัวจับเวลา
- 6 แตะที่ **ต่อ** เพื่อเริ่มนาฬิกาจับเวลาใหม่ต่อจากเวลาที่คุณหยุดไว้ **รีเซ็ต** เพื่อเริ่มต้นเวลาใหม่อีกครั้ง

# PC Suite

คุณสามารถซิงโครไนซ์คอมพิวเตอร์ กับโทรศัพท์ของคุณได้ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกันรวม ทั้งยังเป็นการสำรองข้อมูลที่ช่วยให้ คุณสบายใจได้

## การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้แตะที่  แล้วคลิก **เชื่อมต่อ**
- 2 เลือก **การต่อ USB** และคลิก **PC Suite**
- 3 เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ผ่านทางสายเคเบิล USB แล้วรอสักครู่
- 4 ข้อความคำแนะนำการติดตั้งจะ ปรากฏขึ้นบนหน้าจอคอมพิวเตอร์

### ข้อควรระวัง!

หากข้อความคำแนะนำการติดตั้งไม่แสดงขึ้นบนคอมพิวเตอร์ โปรดตรวจสอบการตั้งค่า CD-ROM บน Windows

5 ใส่ CD-ROM ที่ให้มาด้วย หรือคลิกลิงก์ดาวน์โหลด เพื่อดาวน์โหลดโปรแกรม LG PC Suite โดยตรงจากอินเทอร์เน็ต

6 คลิก LG PC Suite Installer ซึ่งจะปรากฏที่หน้าจอของคุณ

## การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เลือกโหมด PC Suite ในเมนูการเชื่อมต่อ จากนั้นเชื่อมต่อสายเคเบิล USB ของโทรศัพท์เข้ากับคอมพิวเตอร์
- 2 LG PC Suite จะเปิดการใช้งานบนคอมพิวเตอร์ของคุณโดยอัตโนมัติ
- 3 โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

# PC Suite

## การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **สำรอง** แล้วเลือก **สำรอง** หรือ **เรียกคืน**
- 3 เลือกว่าจะสำรองข้อมูล **ข้อมูลเนื้อหา** และ/หรือ **สมุดโทรศัพท์/กำหนดการ/สิ่งที่ต้องทำ/ข้อมูลบันทึก** เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือตำแหน่งที่ต้องการเรียกข้อมูลคืน คลิก **ตกลง**
- 4 ระบบจะสำรองข้อมูลของคุณ

## การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **จัดการ** ภาพถ่าย, วิดีโอ หรือเพลง

- 3 ภาพ, ไฟล์เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ โทรศัพท์ LG

**เคล็ดลับ!** การดูเนื้อหาในโทรศัพท์บนคอมพิวเตอร์ช่วยให้คุณสามารถไฟล์ต่างๆ ที่คุณไม่ต้องการใช้แล้วได้

## การซิงโครไนซ์รายชื่อ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน **ผู้ติดต่อ**
- 3 คลิกที่ปุ่ม **ซิงค์ผู้ติดต่อ** คอมพิวเตอร์จะอัปเดตและแสดงรายชื่อที่บันทึกไว้ในโทรศัพท์
- 4 คลิก **เมนู** และเลือก **เอ็กซ์พอร์ต** ขณะนี้ คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

## การซิงโครไนซ์ข้อความ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอนข้อความ


**3** ข้อความทั้งหมดในโทรศัพท์  
ที่จะปรากฏขึ้นในโฟลเดอร์  
บนหน้าจอ

**4** ใช้แถบเครื่องมือด้านบนสุด  
ของหน้าจอเพื่อแก้ไขและ  
จัดเรียงข้อความ

## Music Sync

เมนูนี้ช่วยให้คุณเพิ่มเพลงลงในโทรศัพท์ GX500 ก่อนที่คุณจะเริ่มถ่ายโอนเพลงจากคอมพิวเตอร์ไปยังโทรศัพท์ ให้ตรวจสอบว่าคอมพิวเตอร์มีการติดตั้งและอุปกรณ์เสริมต่อไปนี้:

- Microsoft Windows XP หรือ Vista
- Windows Media Player 10 หรือสูงกว่า
- สายเคเบิลข้อมูล USB
- การ์ด microSD (หากคุณต้องการใช้หน่วยความจำภายนอกเป็นที่เก็บเพลง)


 **คำเตือน:** ห้ามตัดการเชื่อมต่อกับโทรศัพท์ในขณะที่โอนไฟล์

## การโอนเพลงโดยใช้ Windows Media Player

- 1** จากหน้าจอหลัก ให้เลือก  จากนั้นเลื่อนไปที่ **เชื่อมต่อ** ในแท็บ **ตั้งค่า**
- 2** เลือก **โหมดการเชื่อมต่อ USB** แล้วเลือก **Music sync**
- 3** เชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 4** เมื่อคุณเชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ ตัวเครื่องจะแสดงข้อความ: "Music Sync" แล้วตามด้วย **เชื่อมต่อ**
- 5** คอมพิวเตอร์จะแสดงข้อความให้คุณเริ่มต้นซอฟต์แวร์จัดการเพลงที่คุณต้องการ
- 6** เลือก Window Media Player
- 7** ไปที่แท็บ **การซิงค์** จากนั้นลากแล้ววางเพลงที่คุณต้องการโอนเพื่อโอนไปยังตัวเครื่องของคุณในหน้าต่าง **รายการซิงค์**

# PC Suite

8 คลิกปุ่ม **เริ่มซิงค์** ซึ่งเป็นการเริ่มขั้นตอนการโอนเพลง

 **คำเตือน:** ห้ามตัดการเชื่อมต่อ กับโทรศัพท์ในขณะที่โอนไฟล์

## ตัวแปลง DivX

ติดตั้งตัวแปลง DivX ซึ่งมีใหม่ใน CD-ROM แผ่นเดียวกับซอฟต์แวร์ PC Suite DivX จะแปลงไฟล์มีเดียบนคอมพิวเตอร์ของคุณให้อยู่ในรูปแบบไฟล์ที่คุณสามารถอัปโหลดและเข้าดูได้จากโทรศัพท์ของคุณ เมื่อติดตั้งแล้ว ให้เลือก **DivX** จาก แฟ้มโปรแกรม บนคอมพิวเตอร์ และ **ตัวแปลง DivX** แล้วตามด้วย ตัวแปลงใช้ลูกศรในแอปพลิเคชันเพื่อเปลี่ยนรูปแบบการแปลงเป็นมือถือ หากคุณคลิกขวาที่ช่องแอปพลิเคชัน แล้วเลือก **การตั้งค่า** คุณจะสามารเปลี่ยนตำแหน่งที่บันทึกไฟล์ที่แปลงแล้วได้

ลากแล้ววางไฟล์ลงในแอปพลิเคชันเพื่อการวิเคราะห์เริ่มต้น จากนั้นเลือก **แปลง** เพื่อเริ่มกระบวนการเมื่อกระบวนการเสร็จสมบูรณ์ บออปชั่น Conversion complete จะปรากฏขึ้น

เกี่ยวกับ DIVX VIDEO: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, Inc. อุปกรณ์นี้เป็นอุปกรณ์ DivX Certified อย่างเป็นทางการซึ่งสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ [www.divx.com](http://www.divx.com) เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องการลงทะเบียนเพื่อที่จะสามารถเล่นเนื้อหา DivX Video-on-Demand (VOD) ได้ ในการสร้างรหัสการลงทะเบียน ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ไปที่ [vod.divx.com](http://vod.divx.com) โดยใช้รหัสนี้เพื่อทำการลงทะเบียน และเรียนรู้เพิ่มเติมอื่นๆ เกี่ยวกับ DivX VOD




**Pat. 7,295,673**

# เว็บไซต์

## เบราวเซอร์

**เบราวเซอร์** ช่วยให้คุณสามารถเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร





## การเข้าใช้เว็บไซต์

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 ในการเข้าถึงโฮมเพจของเบราวเซอร์โดยตรง ให้เลือก **โฮม** หรือเลือก **ไปยัง URL** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **เชื่อมต่อ**

**หมายเหตุ:** ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

## การเพิ่มและการใช้บุ๊กมาร์ค

เพื่อการเข้าถึงเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊กมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก **บุ๊กมาร์ค** รายการบุ๊กมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ
- 3 ในการเพิ่มบุ๊กมาร์คใหม่ ให้เลือก  แล้วแตะที่ **เพิ่มบุ๊กมาร์ค** ป้อนชื่อสำหรับบุ๊กมาร์ค แล้วตามด้วยป้อน URL
- 4 แตะที่ **บันทึก** บุ๊กมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊กมาร์ค
- 5 ในการเข้าใช้งานบุ๊กมาร์ค เพียงแตะที่บุ๊กมาร์ค แล้วแตะที่ **เชื่อมต่อ** เครื่องจะเชื่อมต่อเข้ากับบุ๊กมาร์คของคุณ

# เว็บไซต์


## การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่กรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปรเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้อง

RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบด้วยระบบอัตโนมัติที่สะดวกกว่า




การเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

## การบันทึกเพจ




- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 แตะที่  แล้วเลือก **บันทึกเพจนี้**
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 แตะที่ **บันทึก**

**เคล็ดลับ!** เมนูนี้จะช่วยให้คุณสามารถแก้ไขชื่อของเพจที่คุณบันทึกไว้ ป้องกันหรือไม่ป้องกันบันทึกเดือนความจำบนหน้าจอ รวมถึงลบเพจที่บันทึกไว้ได้




## การเข้าใช้เพจที่บันทึกไว้

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วแตะที่  และเลือก 
- 2 เลือก **เพจที่บันทึก**
- 3 เลือกเพจที่ต้องการ และเพจนั้นจะเปิดขึ้น

## การดูประวัติข้อมูล เบราเซอร์

- 1 จากหน้าจอแสดงแถบนำ  
ให้เลือก  แล้วแตะที่  
 และเลือก  เลือก  
ประวัติ
- 2 รายชื่อเว็บเพจที่คุณเข้าใช้  
ล่าสุดจะปรากฏขึ้น ในการ  
เข้าใช้เพจใดเพจหนึ่ง  
เพียงเลือกเพจที่ต้องการ

## การเปลี่ยนการตั้งค่า เว็บเบราเซอร์

- 1 จากหน้าจอแสดงแถบนำ ให้  
เลือก  แล้วแตะที่   
และเลือก  เลือก **ตั้งค่า**
- 2 คุณสามารถเลือกแก้ไข  
ไปรษณีย์, การตั้งค่าลักษณะ,  
แคช, คุกกี้, ระบบป้องกัน

## การใช้โทรศัพท์เป็น โมเด็ม

โทรศัพท์ GX500 ของคุณ  
สามารถใช้เป็นโมเด็มสำหรับ  
คอมพิวเตอร์ได้ ช่วยให้  
คุณสามารถใช้งานอินเทอร์เน็ต  
และส่งอีเมลได้ แม้ว่า  
คุณจะไม่มีการเชื่อมต่อด้วยสาย  
โดยคุณสามารถใช้สาย USB  
หรือบลูทูธก็ได้

## การใช้สายเคเบิล USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณ  
ได้ติดตั้ง LG PC Suite บน  
เครื่องคอมพิวเตอร์ของคุณ  
แล้ว
- 2 เชื่อมต่อ GX500 เข้า  
กับคอมพิวเตอร์ของคุณ  
ด้วยสาย USB แล้วเริ่ม  
ซอฟต์แวร์ LG PC Suite
- 3 คลิก **Internet Kit** บน  
เครื่องคอมพิวเตอร์ แล้ว  
คลิกปุ่ม **New** และเลือก  
**Modem**

# เว็บไซต์

**4** เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ

**5** เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ตและบันทึกค่า

**6** โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก **Connect** คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GX500 ของคุณ

## การใช้บลูทูธ:

**1** ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** ทั้งคอมพิวเตอร์และโทรศัพท์ GX500

**2** จับคู่เครื่องคอมพิวเตอร์ของคุณและโทรศัพท์ GX500 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ

**3** ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ

**4** คลิก **Internet Kit** บนเครื่องคอมพิวเตอร์ จากนั้นคลิกปุ่ม **New**

**5** เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ




**6** เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับอินเทอร์เน็ตและบันทึกค่า

**7** โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นในหน้าจอคอมพิวเตอร์ เลือกและคลิก **Connect** คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GX500 ของคุณ

# ตั้งค่า

ภายในโฟลเดอร์นี้ คุณจะ  
สามารถปรับการตั้งค่าเพื่อให้  
โทรศัพท์ GX500 ตอบสนอง  
การทำงานในแบบของคุณได้



## การใช้เมนูซิมการ์ด

ในเลือกหรือเปลี่ยนซิมการ์ด  
ให้กด  และแตะที่  แล้ว  
เลือก 




คัดลอกรายชื่อจากซิม  
1, ซิม 2 ไปยังตัวเครื่อง  
หรือจากตัวเครื่องไปยังซิม  
1, ซิม 2 หรือซิม 1 ไปซิม 2  
หรือซิม 2 ไปซิม 1

## การปรับแต่งรูปแบบ เสียงของคุณ

คุณสามารถเปลี่ยนรูปแบบบน  
หน้าจอแสดงแถบของคุณได้  
อย่างรวดเร็ว เพียงแตะที่แถบ  
สรุปลักษณะทางด้านบน  
แล้วแตะที่แท็บรูปแบบเสียง  
คุณสามารถใช้เมนูการตั้งค่าใน  
การปรับแต่งการตั้งค่ารูปแบบ  
แต่ละรายการได้

- 1 กด  แล้วเลือก 
- 2 แตะที่ **รูปแบบเสียง** แล้ว  
เลือกรูปแบบเสียงที่คุณต้อง  
การแก้ไข
- 3 จากนั้น คุณสามารถ  
เปลี่ยนตัวเลือกเสียง และ  
การเตือนทั้งหมดที่มีอยู่ใน  
รายการได้

## การเปลี่ยนการตั้งค่า หน้าจอ

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือกจาก:  
พื้นหลัง - เลือกธีมสำหรับ  
หน้าจอแสดงแถบ  
เมนูบนสุด -  
เลือกสไตล์ของเมนูบนสุด  
โทรออก - ปรับขนาด  
ตัวเลขและสี  
แบบอักษร - ปรับขนาด  
แบบอักษร  
หมายเหตุ: การเปิดแบ็ค  
ไลท์เป็นเวลานานจะทำให้  
สิ้นเปลืองพลังงานแบตเตอรี่  
เดือร่มากยิ่งขึ้น และคุณอาจ  
จำเป็นต้องชาร์จโทรศัพท์  
ของคุณบ่อยยิ่งขึ้นด้วย

# ตั้งค่า

**ความสว่าง** -  
ปรับความสว่างของหน้าจอ  
**ข้อความต้อนรับ**  
- เลือกเปิดหรือปิด  
และป้อนข้อความต้อนรับ  
**เปิดเครื่อง/ปิดเครื่อง** -  
เลือกภาพสำหรับหน้าจอ  
การเปิดเครื่อง/การปิดเครื่อง

**3** แตะที่ **บันทึก** เพื่อบันทึก  
การตั้งค่า

## การเปลี่ยนการตั้งค่า โทรศัพท์

เพลิดเพลินกับอิสระในการ  
ปรับการทำงานของโทรศัพท์  
GX500 ในแบบที่คุณต้องการ  
ได้

**เคล็ดลับ!** ในการเลื่อนดู  
รายการตัวเลือก ให้แตะที่  
รายการสุดท้ายที่มองเห็น  
แล้วใช้นิ้วเลื่อนหน้าจอขึ้น  
รายการต่างๆ จะเลื่อนขึ้น  
ทำให้มองเห็นรายการอื่นๆ ได้

- 1 แตะที่  แล้วเลือก 
- 2 แตะที่  แล้วเลือกจากรายการทางด้านล่าง

**วันที่ & เวลา** - ปรับการ  
ตั้งค่าวันที่และเวลาของคุณ  
หรือเลือกให้ เครื่องอัปเดต  
เวลาอัตโนมัติเมื่อคุณเดิน  
ทางหรือสำหรับการปรับ  
เวลาตามฤดูกาล

**ประหยัดพลังงาน** -  
เลือกเพื่อ **เปิด** หรือ **ปิด**  
การตั้งค่าประหยัดพลังงาน  
ที่ตั้งมาจากโรงงาน

**ภาษา** - เปลี่ยนภาษา  
บนจอแสดงผลโทรศัพท์  
GX500 ของคุณ

**ล็อคปุ่มอัตโนมัติ** - ล็อค  
ปุ่มกดอัตโนมัติในหน้าจอ  
สแตนด์บาย

**ระบบป้องกัน** -  
ปรับการตั้งค่าระบบป้องกัน  
รวมทั้งรหัส PIN,  
ล็อคเครื่อง, เปลี่ยนรหัส  
และการแจจเครื่องหาย

**ข้อมูลความจำ** - คุณ  
สามารถใช้ตัวจัดการหน่วย  
ความจำเพื่อดูการใช้หน่วย  
ความจำ

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน

**ข้อมูล** - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ GX500

### เคล็ดลับ! แจ้งเครื่องหาย (ATMT)

- แตะที่ **ระบบป้องกัน และ ATMT** เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้โดยเจ้าของที่แท้จริง ผู้ใช้ต้องกำหนดค่าการตั้งค่า ATMT โดยมีชื่อเจ้าของ, หมายเลขอื่น (1), หมายเลขอื่น (2) ฯลฯ รหัส ATMT เริ่มต้นคือ "000000"
- ATMT SMS จะมีข้อความเกี่ยวกับ IMEI ของโทรศัพท์ที่ถูกขโมย ตำแหน่งปัจจุบัน และหมายเลขของบุคคลที่กำลังใช้เครื่องดังกล่าว

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่าจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสามารถเปลี่ยนแปลงกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้

แตะที่  และ   
เลือก 

## การตั้งค่าเครือข่าย

**เลือกเครือข่าย** -

หากคุณกำหนดเป็น **อัตโนมัติ** โทรศัพท์ GX500 จะค้นหาเครือข่ายและลงทะเบียนเครื่องในเครือข่ายโดยอัตโนมัติ ขอแนะนำให้เลือกเพื่อใช้บริการและคุณภาพที่ดีที่สุด  
ถ้าคุณเลือก **กำหนดเอง** เครือข่ายทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น และคุณสามารถเลือกลงทะเบียนในเครือข่ายใดเครือข่ายหนึ่งได้  
หากไม่สามารถลงทะเบียนในเครือข่ายได้ รายชื่อเครือข่าย

# ตั้งค่า

จะปรากฏขึ้นอีกครั้ง คุณ  
สามารถเลือกลงทะเบียนใน  
เครือข่ายอื่นได้อีก

**หมายเหตุ:** เมื่อโทรศัพท์ของคุณ  
คุณไม่มีเครือข่ายในโหมด  
กำหนดเอง ขอความป้อปอัป  
ให้เลือกเครือข่ายที่มีอยู่จะ  
ปรากฏขึ้นในหน้าจอเมื่อไม่  
ได้ใช้งาน

**รายการที่ต้องการ** - ถ้าเครือข่าย  
ทำการค้นหาโดยอัตโนมัติ  
คุณสามารถเพิ่มเครือข่ายที่  
ต้องการเชื่อมต่อได้

## การตั้งค่าการเชื่อมต่อ

**โปรไฟล์อินเทอร์เน็ต** - เมนู  
นี้แสดงโปรไฟล์อินเทอร์เน็ต  
คุณสามารถสร้างโปรไฟล์ใหม่  
ลบหรือแก้ไขโปรไฟล์โดยใช้  
เมนูตัวเลือก อย่างไรก็ตาม  
คุณไม่สามารถลบหรือแก้ไข  
การกำหนดค่าเริ่มต้นที่ขึ้นอยู่กับ  
แต่ละประเทศ

**จุดเชื่อมต่อ** - ผู้ให้บริการ  
ระบบไต่บันทึกขอมูลนี้แล้ว  
คุณสามารถเพิ่มจุดเชื่อมต่อ  
ใหม่โดยใช้เมนูนี้ได้

**การเชื่อมต่อข้อมูลแพ็ค  
เก็ต** - เลือกว่าจะให้โทรศัพท์  
ของคุณเชื่อมต่อกับเครือข่าย  
ข้อมูลแพ็คเก็ตเมื่อใด

**โหมดการเชื่อมต่อ USB** -  
เลือก บริการข้อมูล และซิง  
โครไนซ์โทรศัพท์ GX500  
โดยใช้ซอฟต์แวร์ LG PC  
Suite เพื่อคัดลอกไฟล์จาก  
โทรศัพท์ ถ้าคุณใช้ ซิงค์เพลง  
กับ Windows Media Player  
ให้เลือก ซิงค์เพลง ในเมนูนี้  
ซิงค์เพลงใช้ได้เฉพาะ  
กับข้อมูลเพลงเท่านั้น

## การใช้ตัวจัดการหน่วย ความจำ

โทรศัพท์ GX500 มีหน่วย  
ความจำให้เลือกสามแบบ:  
โทรศัพท์, ซิมการ์ด และการ์ด  
หน่วยความจำภายนอก (คุณ  
อาจต้องซื้อการ์ดหน่วยความ  
จำแยกต่างหาก)

คุณสามารถใช้ตัวจัดการหน่วย  
ความจำในการกำหนดว่าใน  
แต่ละหน่วยความจำใช้หน่วย  
ความจำไปเท่าใด และดูว่ามี  
พื้นที่ว่างเหลือเท่าใด

แตะที่  แล้วตามด้วย

 เลือก  และ

**ข้อมูลความจำ**

**ความจำเครื่อง** - ดูหน่วยความจำที่มีในโทรศัพท์ GX500 สำหรับรูปภาพ, เสียง, วิดีโอ, แฟลช, MMS, อีเมล, แอปพลิเคชัน Java และอื่นๆ

**ความจำสำรอง** - ดูหน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, สิ่งที่ต้องทำ, บันทึกลับ, เตือน, ข้อมูลการโทร, บุคมาเรค และรายการเบ็ดเตล็ดอื่นๆ

**ความจำซิม (ซิม 1/ซิม 2)** - ดูหน่วยความจำที่มีในซิมการ์ด

**ความจำการ์ด** - ดูหน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

**ตั้งค่าที่เก็บหลัก** - เลือกตำแหน่งในการบันทึกรายการที่ต้องการ

## การส่งและการรับไฟล์โดยใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดีโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก **ส่ง**  
เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์บลูทูธแล้ว โทรศัพท์ GX500 จะไม่ค้นหาอุปกรณ์บลูทูธอื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ GX500 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วแตะที่ **เลือก**
- 5 ไฟล์ของคุณจะถูกส่งออกไป

# ตั้งค่า

**เคล็ดลับ!** คอยเฝ้าดูแถบ  
แสดงความคืบหน้าเพื่อให้แน่ใจ  
ว่าไฟล์ของคุณถูกส่งแล้ว

## ในการรับไฟล์:

### 1 ในการรับไฟล์

คุณต้องตั้งค่าบลูทูธเป็น  
**เปิด** และ **มองเห็นได้**  
โปรดดูข้อมูลเพิ่มเติมที่การ  
เปลี่ยนการตั้งค่าบลูทูธทาง  
ด้านขวา

### 2 เครื่องจะแสดงข้อความ ให้คุณยอมรับไฟล์จากผู้ส่ง และที่ **ใช่** เพื่อรับไฟล์

### 3 คุณจะเห็นว่าไฟล์ได้ รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อ ดู ไฟล์หรือ **ใช่** เป็นภาพพื้นหลัง ได้ โดยทั่วไป ไฟล์จะถูกบันทึก ในโฟลเดอร์ที่เหมาะสมใน อัลบั้มมีเดีย

## การเปลี่ยนการตั้งค่าบลูทูธ:

1 แตะที่  และเลือก 

2 เลือก  แล้วแตะที่   
และเลือก **ตั้งค่า**

ทำการเปลี่ยนแปลง:

**การมองเห็นเครื่อง** -  
เลือกที่จะ **มองเห็นได้**  
หรือ **ซ่อน** หรือ **แสดง 1**  
**นาที**

**ชื่อเครื่องของฉัน** -  
ป้อนชื่อโทรศัพท์ GX500  
ของคุณ

**บริการที่รองรับ** - เลือกวิธี  
ใช้บลูทูธที่เกี่ยวข้องกับ  
บริการต่างๆ

**แอดเดรสส่วนตัว** -  
แสดงแอดเดรสบลูทูธ

## การจับคู่กับอุปกรณ์บลู ทูธอื่น

ในการจับคู่โทรศัพท์ GX500  
กับอุปกรณ์อื่น คุณสามารถ  
กำหนดรหัสผ่านเพื่อป้องกันการ  
เชื่อมต่อได้ ซึ่งหมายความว่า  
อุปกรณ์ที่จับคู่ด้วยก็จะ  
ปลอดภัยมากขึ้น

1 ตรวจสอบว่าได้ตั้งค่าบลูทูธ  
เป็น **เปิด** และ **มองเห็นได้**  
คุณสามารถเปลี่ยนการตั้งค่า  
การมองเห็นได้ใน  
เมนู **ตั้งค่า**

**2** แตะที่ **ค้นหา**

**3** โทรศัพท์ GX500 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์รีเฟรชจะปรากฏขึ้นบนหน้าจอ

**4** เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่านจากนั้นให้แตะที่ **ตกลง**

**5** โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณควรป้อนรหัสผ่านเดียวกัน

**6** การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

### **การใช้ชุดหูฟังบลูทูธ**

**1** ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้**

**2** ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ

**3** แตะที่ **ถามก่อนทำการเชื่อมต่อ** หรือ **ให้เชื่อมต่อเสมอ** และแตะที่ **ใช่** เพื่อเชื่อมต่อทันที โทรศัพท์ GX500 จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

### **Wi-Fi**

ตัวจัดการไร้สายช่วยให้คุณจัดการการเชื่อมต่ออินเทอร์เน็ตผ่านทาง Wi-Fi (Wireless LAN) ในเครื่องของคุณ

โดยให้โทรศัพท์เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเขาใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและรัศมีครอบคลุมกว้างกว่าเทคโนโลยีไร้สายของบลูทูธ และสามารถใช้อีเมลและการเบร่าส์อินเทอร์เน็ตอย่างรวดเร็ว

# ตั้งค่า

**หมายเหตุ:** โทรศัพท์ GX500 สนับสนุนการเข้ารหัส WEP และ WPA-PSK/2 แต่ไม่สนับสนุนการเข้ารหัส EAP หรือ WPS หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป๊อปอัพ หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัพนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

## การอัปเดตซอฟต์แวร์

### โปรแกรมอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้งและการใช้โปรแกรมนี้ โปรดไปที่

<http://www.lgmobile.com>


คุณสมบัตินี้ให้คุณอัปเดตซอฟต์แวร์ของคุณเป็นเวอร์ชันล่าสุดได้อย่างรวดเร็วและสะดวกบนอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการของเรา

โปรแกรมอัปเดตซอฟต์แวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการระหว่างกระบวนการอัปเดต โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายการสื่อสารข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์ชำรุดเสียหายได้ ผู้ผลิตจะไม่รับผิดชอบต่อการสูญเสียข้อมูลระหว่างการอัปเดต คุณควรจดข้อมูลสำคัญเก็บไว้ก่อน

# อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ GX500

อุปกรณ์  
ชาร์จ



สายเคเบิล  
ข้อมูลและซีดี



แบตเตอรี่



คู่มือการใช้



ชุดหูฟัง  
สเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มิมีข้อสอบถามเพิ่มเติม

**⚠ คำเตือน:** เมื่อติดฟิล์มป้องกันบนหน้าจอสัมผัส ความไวต่อการสัมผัสอาจลดลง

## บริการเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 850, E-GSM 900, DCS 1800 และ PCS 1900

คุณสมบัติต่างๆ

ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

## ข้อมูลทางเทคนิค

ทั่วไป

ชื่อผลิตภัณฑ์: GX500

ระบบ: GSM 850 /  
E-GSM 900  
DCS 1800 /  
PCS 1900

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)  
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

**ศูนย์บริการ LG**  
**โดย บริษัท แอลจี**  
**อิเล็กทรอนิกส์**  
**(ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน  
เลขที่ 72/127 ถ.

สมเด็จพระเจ้าตากสิน  
แขวงบคโคล เขตธนบุรี  
กรุงเทพฯ 10600

วันและเวลาทำการ :  
จันทร์-อาทิตย์,  
07:00 - 19:00น.

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2  
EN 301 511 V9.0.2  
EN 50360:2001 EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

12. Feb. 2010

  
Signature of representative

# การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่คุณสามารถแก้ไขปัญหาที่คุณพบบางอย่างได้เองอย่างง่ายดาย

| ข้อความ                         | สาเหตุที่เป็นไปได้   | วิธีการแก้ไขที่เป็นไปได้   |
|---------------------------------|--|--|
| ข้อผิดพลาดของซิมการ์ด           | ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือคุณอาจใส่ซิมการ์ดไม่ถูกต้อง  | ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง  |
| ไม่ได้เชื่อมต่อกับระบบเครือข่าย | สัญญาณอ่อนอยู่นอกพื้นที่บริการของระบบเครือข่าย GSM   | ย้ายไปบริเวณที่ใกล้หน้าต่างหรือที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ  |
| รหัสไม่ตรงกัน                   | เมื่อคุณต้องการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสนั้นอีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน | ติดต่อผู้ให้บริการ   |
| ตั้งค่าฟังก์ชันไม่ได้           | ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน   | ติดต่อผู้ให้บริการ   |
| ไม่สามารถโทรออกได้              | ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดอันใหม่ ถึงขีดจำกัดการโทรของคุณแล้ว                                   | ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN 2 |

| ข้อความ                       | สาเหตุที่เป็นไปได้  | วิธีการแก้ไขที่เป็นไปได้  |
|-------------------------------|---|---|
| เปิดเครื่องโทรศัพทไม่ได้      | กดปุ่มเปิด/ปิดเครื่องเบาเกินไป<br>แบตเตอรี่หมด<br>ซั้วสัมผัสแบตเตอรี่สกปรก  | กดปุ่มเปิด/ปิดเป็นเวลาวางน้ยสองวินาที<br>ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์แสดงการชาร์จบนหน้าจอ<br>ทำความสะอาดซั้วสัมผัส   |
| ข้อผิดพลาดเกี่ยวกับการชาร์จ   | แบตเตอรี่หมดโดยสิ้นเชิง<br>อุณหภูมิสูงหรือต่ำเกินไป<br>มีปัญหาคือซั้วสัมผัส<br>ไม่มีกระแสไฟฟ้า<br>อุปกรณ์ชาร์จชำรุด<br>อุปกรณ์ชาร์จไม่ถูกต้อง<br>แบตเตอรี่ชำรุด | ชาร์จแบตเตอรี่<br>ตรวจสอบให้แน่ใจว่าอยู่ในอุณหภูมิแวดล้อมที่เหมาะสม รอสักครู่จากนั้นชาร์จแบตเตอรี่อีกครั้ง<br>ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท ตรวจสอบซั้วสัมผัสแบตเตอรี่<br>ทำความสะอาดหากจำเป็น<br>เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือตรวจสอบกระแสไฟฟ้า<br>หากอุปกรณ์ชาร์จไม่ทำงานให้เปลี่ยนอุปกรณ์ชาร์จใหม่<br>ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น<br>เปลี่ยนแบตเตอรี่ |
| สัญญาณเครือข่ายขาดหายไป       | สัญญาณอ่อนเกินไป  | การเชื่อมต่อกับผู้ให้บริการอื่นเป็นไปได้โดยอัตโนมัติ  |
| หมายเลขโทรศัพทใช้โทรออกไม่ได้ | กำลังใช้งานฟังก์ชันก่าหนดหมายเลขโทรออก  | ตรวจสอบการตั้งค่า   |





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# GX500 User Guide

Congratulations on your purchase of the advanced and compact GX500 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

|  |           |
|--|-----------|
| <b>Guidelines for safe and efficient use</b> ..... | <b>6</b>  |
| <b>Getting to know your phone</b> .....            | <b>10</b> |
| <b>Open view</b> .....                             | <b>12</b> |
| <b>Installing the SIM and battery</b> ....         | <b>13</b> |
| <b>Memory card</b> .....                           | <b>15</b> |
| <b>Menu map</b> .....                              | <b>16</b> |
| <b>Your standby screen</b> .....                   | <b>17</b> |
| Touch screen tips .....                            | 17        |
| The quick keys .....                               | 18        |
| Changing your Status from the status bar .....     | 20        |
| Using the Multitasking function..                  | 20        |
| <b>Calls</b> .....                                 | <b>21</b> |
| Making a call.....                                 | 21        |
| Making a call from your contacts.....              | 21        |
| Answering and rejecting a call...                  | 21        |
| Speed dialling .....                               | 21        |
| Making a second call .....                         | 22        |
| Viewing your call logs.....                        | 22        |
| Using call divert.....                             | 23        |
| Using call barring.....                            | 23        |
| Changing the common call setting .....             | 24        |
| <b>Contacts</b> .....                              | <b>25</b> |
| Searching for a contact .....                      | 25        |
| Adding a new contact .....                         | 25        |
| Creating a group.....                              | 26        |
| Changing your contact settings..                   | 26        |
| Viewing information .....                          | 27        |
| <b>Messaging</b> .....                             | <b>28</b> |
| Messaging .....                                    | 28        |
| Sending a message .....                            | 28        |
| Entering text.....                                 | 29        |
| T9 predictive .....                                | 29        |
| Abc manual.....                                    | 29        |
| Keyboard.....                                      | 30        |
| Handwriting recognition.....                       | 30        |
| Setting up your email .....                        | 30        |
| Retrieving your email .....                        | 31        |
| Changing your email settings....                   | 31        |
| Message folders .....                              | 32        |
| Changing your text message settings.....           | 32        |
| Changing your multimedia message settings .....    | 33        |
| Changing your other settings....                   | 34        |
| <b>Camera</b> .....                                | <b>35</b> |
| Taking a quick photo .....                         | 35        |
| After you've taken your photo ....                 | 35        |
| Using the advanced settings.....                   | 35        |
| Viewing your saved photos .....                    | 36        |

# Contents

|  |           |
|--|-----------|
| <b>Video camera</b> .....                            | <b>37</b> |
| Shooting a quick video .....                         | 37        |
| After you've shot your video .....                   | 37        |
| Adjusting the Exposure.....                          | 38        |
| Using the advanced settings .....                    | 38        |
| Watching your saved videos .....                     | 39        |
| <b>Your photos and videos</b> .....                  | <b>40</b> |
| Viewing your photos and videos .....                 | 40        |
| Using zoom when viewing a photo .....                | 40        |
| Adjusting the volume when viewing a video .....      | 40        |
| Setting a photo as wallpaper .....                   | 40        |
| Editing your photos .....                            | 41        |
| <b>Multimedia</b> .....                              | <b>42</b> |
| Pictures .....                                       | 42        |
| Sending a photo .....                                | 42        |
| Printing an image .....                              | 42        |
| Moving or copying an image.....                      | 43        |
| Sounds .....   | 43        |
| Videos .....   | 43        |
| Watching a video .....                               | 43        |
| Sending a video clip.....                            | 43        |
| Games and Applications .....                         | 44        |
| Installing a game/application via local install..... | 44        |
| Playing a game.....                                  | 44        |
| Documents.....                                       | 44        |
| Transferring a file to your phone .....              | 44        |
| Viewing a file.....                                  | 45        |
| Others.....  | 45        |
| Music .....  | 46        |
| Transferring music onto your phone .....             | 46        |
| Playing a song.....                                  | 47        |
| Creating a playlist .....                            | 47        |
| Using the radio .....                                | 47        |
| Searching for stations .....                         | 48        |
| Resetting channels .....                             | 48        |
| <b>Utilities</b> .....                               | <b>49</b> |
| Recording a sound or voice .....                     | 49        |
| Using your calculator.....                           | 49        |
| Converting a unit .....                              | 49        |
| Adding a city to your world time.....                | 49        |
| Using the stopwatch .....                            | 50        |
| Adding an item to your calendar.....                 | 50        |
| Adding an item to your task list..                   | 51        |
| Date finder .....                                    | 51        |
| Settings .....                                       | 51        |
| <b>PC Suite</b> .....                                | <b>52</b> |
| Installing the LG PC Suite on your computer .....    | 52        |
| Connecting your phone and PC..                       | 52        |

|   |           |
|---|-----------|
| Backing up and restoring your phone's information ..... | 53        |
| Viewing phone files on your PC.....                     | 53        |
| Synchronising your contacts .....                       | 54        |
| Synchronising the messages .....                        | 54        |
| Music Sync .....  | 54        |
| Transferring music using Windows Media Player .....     | 55        |
| DivX Converter.....                                     | 55        |
| <b>The web.....</b>                                     | <b>57</b> |
| Browser .....   | 57        |
| Opera Mini .....  | 57        |
| Accessing the web.....                                  | 57        |
| Adding and accessing your bookmarks .....               | 58        |
| Using RSS reader.....                                   | 58        |
| Saving a page .....                                     | 59        |
| Accessing a saved page.....                             | 59        |
| Viewing your browser history .....                      | 59        |
| Changing the web browser settings.....                  | 59        |
| Using your phone as a modem ..                          | 60        |
| <b>Settings .....</b>                                   | <b>61</b> |
| Using Dual SIM-card menu.....                           | 61        |
| Personalising your profiles.....                        | 61        |
| Changing your screen settings..                         | 61        |
| Changing your phone settings ..                         | 62        |
| Changing your connectivity settings.....                | 63        |
| Network settings .....                                  | 63        |
| Connectivity Settings.....                              | 64        |
| Using memory manager .....                              | 64        |
| Sending and receiving your files using Bluetooth.....   | 65        |
| Pairing with another Bluetooth device.....              | 66        |
| Using a Bluetooth headset.....                          | 66        |
| Wi-Fi.....  | 67        |
| Software Upgrade .....                                  | 67        |
| <b>Accessories .....</b>                                | <b>68</b> |
| <b>Network service.....</b>                             | <b>69</b> |
| <b>Technical data.....</b>                              | <b>69</b> |
| <b>Trouble Shooting.....</b>                            | <b>71</b> |

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy


Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model GX500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.45 W/kg (10g) and when worn on the body is 0.841 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

# Guidelines for safe and efficient use

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to know your phone

## End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to the standby screen.



## Multitasking key

## Call key


Dials a phone number and answers incoming calls.



**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

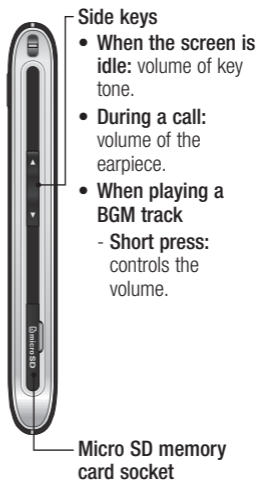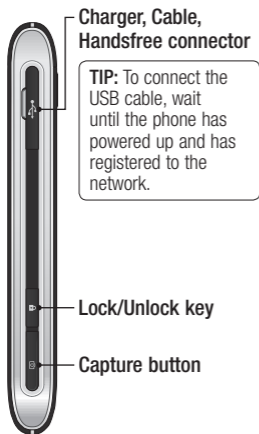

## Open view

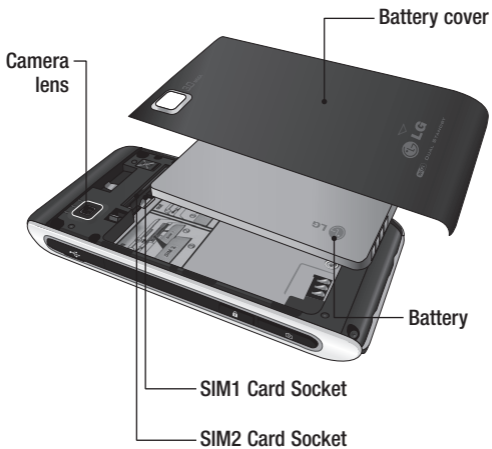

# Installing the SIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



## 2 Remove the battery

Using the cut-out at the top and lift it from the battery compartment.



**WARNING:** Do not use your fingernail when removing the battery.


**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



**WARNING**



Make sure that your SIM card has a neat and clean cut before you insert it into the holder.

# Installing the SIM and battery

## 4 Install the battery

Insert the bottom of the battery first into the bottom edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the top of the battery until it clicks into place.



## 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

## 6 Charging your phone

Lift and twist the charger socket cover on the side of your GX500. Insert the charger and plug it into a mains electricity socket. Your GX500 needs to be charged until "Battery full" appears on screen.




# Memory card

## Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.


**NOTE:** A memory card is an optional accessory.

- 1 Open the memory card slot cover on the right hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place.
- 3 Replace the cover.

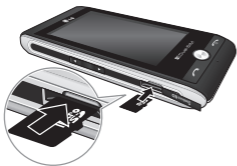

## Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the standby screen select , then scroll through **SETTINGS** Tab and choose **Phone settings**.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will then be formatted and ready to use.

**NOTE:** If your memory card has an existing content. It will automatically be filled in the correct folder; for example, videos will be stored in the My Videos folder.

# Menu map

Touch  in the standby screen to open the **Top menu**. From here you can access further menus: **COMMUNICATION**, **ENTERTAINMENT**, **UTILITIES** and **SETTINGS**.

## COMMUNICATION

- Contacts
- Recent history
- Messaging
- E-mail
- Dialling
- Social networking
- Speed dials
- New message

## ENTERTAINMENT

- Camera
- Gallery
- Music
- My stuff
- Games & Apps
- Pocket Apps
- FM radio
- Video camera

## UTILITIES

- Browser
- Google
- Alarms
- Organiser
- Memo
- Voice recorder
- Tools
- Drawing Panel

## SETTINGS

- Dual SIM settings
- Profiles
- Screen settings
- Phone settings
- Call settings
- Bluetooth
- Connectivity
- Wi-Fi

# Your standby screen

From your standby screen you can access all the menu options, make a quick call and view the status of your phone as well as many other things.



## Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your GX500 will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light, yet firm, touch.


- Use the tip of your finger to touch the option you want. Be careful not to touch any other options around it.
- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.
- Don't use any case or cover on the phone. The touchscreen won't work with any material covering it.
- There are two types of idle screen. Flick left or right to change your idle screen types on the standby screen.
  - 1 Widget idle - When you touch , the mobile widget panel appears.
  - 2 Speed dial idle - When you touch , the speed dial list appears. You can drag and click what you need right away in both idle types.

# Your standby screen

## The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.



Touch to open your address book. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS or MMS, or view your message folder.




























Touch to open the full Top menu which is divided into four vertical sub-menus. Touch each sub-menu's tab to view further options.

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

| Icon  | Description  |
|---|--|
|    | Multitasking                                       |
|     | Network signal strength (number of bars will vary) |
|     | No network signal                                  |
|    | Remaining battery life                             |
|    | Battery empty                                      |
|   | New text message                                   |
|  | New voice message                                  |
|  | Message inbox is full                              |
|  | Message sending failed                             |
|  | Multimedia message sending failed                  |


| Icon  | Description                    |
|---|--------------------------------|
|    | An alarm is set                |
|    | Customised Profile in use      |
|    | Normal profile in use          |
|    | Outdoor profile in use         |
|    | Silent profile in use          |
|    | Headset profile in use         |
|    | Calls are diverted             |
|    | EDGE in use                    |
|    | Roaming                        |
|    | Flight mode is on              |
|    | Bluetooth is active            |
|    | BGM play                       |
|    | BGM pause                      |
|  | Memory card is enabled for use |
|  | Wi-Fi                          |


# Your standby screen

## Changing your Status from the status bar

Touch the status bar to open the Status Summary. It shows the current Time, Network, Battery, Handset memory, External Memory, Profile, MP3, SIM property set (SIM1 / SIM2), Wi-Fi and Bluetooth status. Here you can set Profile type, play/pause MP3 and activate/deactivate Bluetooth.




## Using the Multitasking function


Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.



# Calls

## Making a call



- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  hard key or touch **Call** to initiate the call.
- 4 To end the call press the  hard key.


**TIP!** To enter + for making an international call, press and hold .

## Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter the first few letters of the contact you would like to call at the top of the screen using the touchpad.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch .

## Answering and rejecting a call



When your phone rings press the  hard key or touch  to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key or touch  to reject an incoming call.

## Speed dialling





You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it with a speed dial contact.

# Calls

- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the Name field box and enter the first letter of the name of the contact required.


## Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

**TIP!** You can combine your calls by selecting **Join calls**. Check that your network provider supports conference calling.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs


Touch  and choose **Recent history** in the COMMUNICATION tab. Choose to view:

**All** - View a complete list of all dialled, received and missed calls.


**Dialled** - View a list of all the numbers you have called.

**Received** - View a list of all the numbers that have called you.

**Missed** - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.


## Using call divert

- 1 Touch  and choose **Call settings** in the SETTINGS tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch  and choose **Call settings** in the SETTINGS tab.
- 2 Touch **Call barring**.

- 3 Choose any or all of the six options:

**All outgoing**

**Outgoing international**

**Outgoing international calls except home country**

**All incoming**

**Incoming when abroad**


**Deactivate all**

- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial numbers** from the **Call settings** option to turn on and compile numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

# Calls

## Changing the common call setting

1 Touch  and choose **Call settings** in the SETTINGS tab.

2 Touch **Common setting**.  
From here you can amend the settings for:

**Call reject** - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.

**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.




**Save new number** - Select **Yes** to save a new number.

# Contacts


## Searching for a contact

There are two ways to search for a contact:

### From the standby screen


- 1 From the standby screen touch  to open the address book. Select the contact from the list that you want to make a call.
- 2 Touch  or press the  hard key to initiate the call.

### From the main menu

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

**TIP!** The alphabetical keypad is displayed once you tap the Name field.



## Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your Handset or SIM (SIM 1/SIM 2).
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile, Home, Office, Pager,** and **Fax**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.

# Contacts

- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

## Creating a group


- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Groups**.
- 3 Touch .
- 4 Select **Add group**.
- 5 Enter a name for your new group. You can also assign a ringtone to the group.
- 6 Touch **Save**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

## Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Settings**.
- 3 From here you can adjust the following settings:  
**Contact list settings** - Choose to adjust the **Name display** and **Quick command key** settings.

**Copy** - Copy your contacts between your SIM cards(SIM1 or SIM2) and your handset. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the SIM to the handset it will be deleted from the SIM memory.


**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - Performs and backup your contacts on to the external memory. This option requires external memory.

**Restore contacts** - Restores your contacts from the external memory. This option requires external memory.

**Clear contacts** - Delete all your contacts. Choose between Handset and SIM and touch Yes if you are sure you want to wipe your contacts.

## Viewing information

- 1 Touch  and choose **Contacts** in the COMMUNICATION tab.
- 2 Touch **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.



**TIP!** If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

# Messaging

## Messaging

Your GX500 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:


- 1 Touch  from the standby screen.
- 2 Touch  and choose **Messaging** in the COMMUNICATION tab.


## Sending a message

- 1 Touch **New message**, then select Message to open a blank message field box.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen. Then select Communication tab and **E-mail**.
- 3 Touch **Insert**, to add an image, video, sound or template.

- 4 Touch **To** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send** when ready.

**NOTE:** You can send SMS to many users at a time. Click on contact search icon and Select multiple from Options where in user can mark/unmark contacts for sending message. To send the SMS to a particular group of contacts click on contacts search icon and select search by Group after composing the SMS.

 **WARNING:** You will be charged per 1 page text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to SMS it will be automatically converted to MMS and you will be charged accordingly.


## Entering text


There are five ways to enter text:


**Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.**


You can choose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.

 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

## T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.


## Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

# Messaging

## Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen. Simply touch each letter to write your message and press:

 to switch to upper case.

## Handwriting recognition


In Handwriting mode you simply write on the screen and your GX500 will convert your handwriting into your message. Select **Handwriting-Screen**, **Handwriting-Box** or **Handwriting-Double Box** depending on your preferred view.

**TIP!** You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other characters, and displays these characters as text. Handwriting recognition is only active where text can be entered.

## Setting up your email



You can stay in touch on the move using email on your GX500. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  and choose **Messaging** in the **COMMUNICATION** tab.
- 2 Touch **Settings**.
- 3 Touch **E-mail** and choose **E-mail accounts**.
- 4 Touch **Add account**.
- 5 Setup Wizard will help you set up your email settings.
- 6 You can check and edit settings by selecting the account in the list. You can also check the additional settings that were filled in automatically when you created the account.
- 7 You can change your default email account by touching **Activate**.

## Retrieving your email

You can automatically or manually check your account for new emails.

To check manually:

- 1 Touch  and choose **Messaging** in the COMMUNICATION tab.
- 2 Touch **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose Folder synchronisation and your GX500 will connect to your email account and retrieve your new messages.

## Changing your email settings

You can change your email settings according to your own preferences.

- 1 Touch  and choose **Messaging** in the COMMUNICATION tab.

- 2 Touch **Settings** and **E-mail** and then you can adapt the following settings:

**Allow reply e-mail** - Choose to allow the sending of 'read, confirmation' messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GX500 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd. & Reply** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto Retrieval in roaming** - Choose whether to retrieve your messages automatically or not.

**New email notification** - Choose whether to be alerted to new emails.

# Messaging

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

You'll recognise the folder structure used on your GX500, which is fairly self-explanatory.

**New message** - Open a new blank message.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and do more. (See **Managing your messages** below for details.)

**Mailbox** - All the mails you receive are placed into your Mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - Messages you send are placed in this folder.

**My Folders** - Create folders to store your messages.

**Templates** - Use a list of commonly used text and multimedia message templates.


**Emoticons** - Add and insert emoticons for your messages.

**Settings** - Change the settings for your text and multimedia messages.

## Changing your text message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your message into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as Multiple SMS or as MMS.

## Changing your multimedia message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch , select .

Choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home network** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request delivery reports.

**Read reply** - Choose to allow and/or request reply reports.

# Messaging

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your messages are stored at the message centre.


**Slide duration** - Choose how long your slides appear on screen by default.


**Creation mode** - Choose mode to create multimedia messages restrictive, warning, free.

**Delivery time** - Choose how long before messages are delivered.

**Multi msg centre** - Enter the details of your message centre.

## Changing your other settings

Touch  and choose **Settings** then:


**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

**Info. service** - Choose your reception status, language and other settings.


# Camera

## Taking a quick photo



- 1 Long press the camera hot key on the right side of the phone.
- 2 The view finder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 Press the  on the side of the phone firmly to take the photo.

## After you've taken your photo


Your captured photo will appear on screen.

-  Touch to send the photo as a **Message**, **E-mail** or **Bluetooth**. See Sending a message and Sending and receiving your files using Bluetooth.

**NOTE:** Additional cost may occur when MMS are downloaded when roaming.

-  Touch to edit the name of the selected picture.
-  Touch to use the image as wallpaper.
-  Touch to edit the image using various tools.
-  Touch to return to the previous menu.
-  Touch to delete the image.
-  Touch to take another photo immediately.
-  Touch to view a gallery of your saved photos.

## Using the advanced settings

From the view finder touch  to open all the advanced settings options.

**Colour effect** - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

**White balance** - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

# Camera

**Night mode** - Useful in dark places.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be a part of.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**View Mode** - To select the size for preview image.

**Select storage** - Defines the location where the pictures are stored.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.


**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.

**Noise reduction** - This function could reduce noise and refine a picture after taken.








**Reset settings** - Reset all the camera settings.

## Viewing your saved photos

- 1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

# Video camera









## Shooting a quick video

- 1 Press and hold the camera key  on the right side of the phone.
- 2 Alternatively, drag down  in the viewfinder in camera mode to switch to video mode.
- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the camera key  once to start recording.
- 6 **Rec** will appear at the bottom of viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the camera key  a second time to stop recording.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

## After you've shot your video


A still image representing your captured video will appear on screen. The name of the video is displayed at the bottom of the screen together with **eight** icons down the right side.

-  Touch to play the video.
-  Touch to send the video as a **Message or E-mail** or by **Bluetooth**.
-  Touch to edit the video.
-  Touch to edit the name of the selected video.
-  Touch to return to the previous menu.
-  Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view the saved videos and pictures gallery.


# Video camera

## Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an video.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier video, or right for a higher contrast, sharper video.

## Using the advanced settings

From the view finder touch  to open all the advanced settings options.

**Colour effect** - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

**Quality** - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Set time** - Set a duration limit for your video.

**TIP!** If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.



**Select storage** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

**Voice** - Choose Mute to record a video without sound.

**Hide Icons** - Choose the camera settings icons to be hidden manually or automatically.


**Reset settings** - Reset all the video camera settings.

## Watching your saved videos


- 1 In the view finder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch  on the video.

# Your photos and videos

## Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.


## Using zoom when viewing a photo

When viewing photos, you can zoom in and out.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen. Top after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

## Setting a photo as wallpaper


- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch .
- 4 You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.
- 5 When you are happy with the picture touch **Set**.
- 6 Choose from the options what you want to change:  
**All, Widget, Speed dial.**


## Editing your photos


You can do lots of great things to your photos to change them, add to them or liven them up.


1 Open the photo you want to edit and touch  to show the options.


2 Touch the icons to alter your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.


 Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.


 Adding writing on a picture. See **Adding text to a photo**.


 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.


 Erase the editing you have done to the picture. You can choose the size of eraser you use.


 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.


 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo**.

 Touch to open the Filter options.

 This helps to adjust a picture taken using automatic colour, brightness etc.

# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **My stuff** to open a list of folders storing all of your multimedia files.

## Pictures



**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from thumbnail view to list view.

## Sending a photo



- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Touch **Send** and choose from **Message**, **E-mail** or **Bluetooth**.
- 4 If you choose **Message** or **E-mail**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth will be turned on automatically and your phone will search for a device to send the picture.

## Printing an image

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Select an image and touch .
- 4 Touch **Print via Bluetooth**.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.


## Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

## Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **My videos**.
- 3 Select a video to play.

## Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **E-mail** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth turns on automatically and your phone will search for a device to send the video.

# Multimedia

## Games and Applications


You can install new games and applications to your phone to keep you amused when you have time to spare.

### Installing a game/ application via local install

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Others** or My memory card if external memory is inserted.
- 3 Select the file (\*.jad or \*.jar) to install. An application will be installed.

**NOTE:** The jad should contain its own jar.

## Playing a game

- 1 Touch  and choose **Games & Apps** in the ENTERTAINMENT tab.
- 2 Touch **Games**.
- 3 Select a game to launch.

## Documents

From the **Documents** menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and PDF files.


## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.



### Viewing a file

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Documents**.
- 3 Select a document and touch to View.

### Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.


To move a file from **Others** to **Documents**:

- 1 Touch  and choose **My stuff** in the ENTERTAINMENT tab.
- 2 Touch **Others**.
- 3 Touch  and select **Move** then choose a file.
- 4 Touch **Move**, choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.

# Multimedia

## Music

Your LG GX500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch .

Scroll through Entertainment to . From here you can access a number of folders:

**Recently played** - View all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:


- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch  and choose **Music** in the ENTERTAINMENT tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  and choose **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.

- 4 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick box will show next to the track names.
- 5 Touch **Done**.

## Using the radio

Your LG GX500 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

# Multimedia

## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 48 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

### To auto tune:





- 1 Touch  and choose **FM radio** in the ENTERTAINMENT tab.
- 2 Touch .
- 3 Touch **Auto scan**. Then the stations will be automatically found and allocated to a channel in your phone.

## Resetting channels



- 1 Touch  and choose **FM radio** in the ENTERTAINMENT tab.
- 2 Touch .
- 3 Choose **Reset Channel** to reset the current channel or choose **Reset all Channels** to reset all of the channels. Each channel will return to the starting 87.5 MHz frequency.

# Utilities


## Recording a sound or voice

- 1 Touch  and choose **Voice recorder** in the UTILITIES tab.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

## Using your calculator

- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, deg** or **rad** etc.

## Converting a unit


- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.

## Adding a city to your world time

- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **World clock**.
- 3 Touch the , followed by **New city**. Start typing the name of the city you require and it will show at the top of the screen.

# Utilities

## Using the stopwatch


- 1 Touch  and choose **Tools** in the UTILITIES tab.
- 2 Touch **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Adding an item to your calendar

- 1 Touch  and choose **Organiser** in the UTILITIES tab.
- 2 Touch **Calendar** then touch **Add event**.
- 3 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.

- 4 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 5 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.
- 6 Set **Alarm** and **Repeat**.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

## Adding an item to your task list

- 1 Touch  and choose **Organiser** in the UTILITIES tab.
- 2 Touch **Tasks** then touch **Add task**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.

## Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## Settings

**Calendar settings** - You can set the configurations to view the calendar.

**Send all organiser data via Bluetooth** - You can send all the data in your calendar and/or Tasks from your phone to other phones by using Bluetooth.

**Memory info.** - You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.


**Clear all** - You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

# PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

**TIP!** You will need to install the application PC Suite provided on the CD-ROM or available for download from [www.lgmobile.com](http://www.lgmobile.com) PRODUCTS > Manual & Software > Go to Manual & S/W Download Section.


## Installing the LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed on the computer screen.

**Caution!** If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

- 5 Insert the supplied CD-ROM or the click the Download button to directly download the LG PC Suite program from the internet.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

## Connecting your phone and PC

- 1 From the home screen press  and select **Connectivity** on the SETTINGS tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.
- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contacts/Calender/ToDo/Memo/photo/video**. Select the location you want to back up the information to, or restore it from. Click **OK** button then Back up or Restore Button respectively then press Finish button.
- 4 Your information will be backed up.

## Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the Manage Photos, Videos or Music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to manage files you no longer need.

# PC Suite

## Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button.  
Welcome to LG Air Sync Service will be displayed > Press Start Button > Select Contacts Sub options (Include outlook contacts or call logs are transferred from the phone during sync > Press Next > Do you want to proceed pop up > next > Select Contacts > Press Sync Now).

## Synchronising the messages


- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All your phone messages will be displayed in folders on the screen.

- 4 Use the toolbar at the top of the screen to edit and rearrange messages.


## Music Sync


This menu lets you add music to your GX500. Before you start transferring music from your PC to your phone, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB data cable
- microSD card (If you wish to use external memory as the music storage.)

 **WARNING:** Do not disconnect your phone during the transfer.

## Transferring music using Windows Media Player

- 1 From the home screen select , then scroll through **Connectivity** in the **Settings** tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: "Music Sync" followed by Connected.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** panel.
- 8 Click on the **Start Sync** button. This starts the transfer process.

 **WARNING:** Do not disconnect your phone during the transfer.

## DivX Converter

Install the DivX converter, which is supplied on the same CD-ROM as the PC Suite software. DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

**NOTE:** GX500 doesn't support Divx file format.

## PC Suite

*ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.*

*ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.*

**Pat. 7,295,673**

# The web

## Browser


**Browser** gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

## Opera Mini

GX500 supports Opera Mini 5 browser which is a Java application that can be accessed from the Browser menu or from the Games&Apps menu in your phone. Some of the salient features of this browser are Multiple Windows, Security, Touch zooming, Book Marks, History, Saved Pages, Speed Dial.

**NOTE:** To browse using Opera Mini 5, Data Connection is required.

## Accessing the web


- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

# The web

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add bookmark**. Enter a Title for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch Connect. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text.


RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page


- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.


## Accessing a saved page

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

## Viewing your browser history

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **History**. A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page.

## Changing the web browser settings

- 1 Touch  and choose **Browser** in the UTILITIES tab.
- 2 Select **Settings**.
- 3 You can choose to edit **Profiles, Appearance settings, Cache, Cookies, Security**.

# The web

## Using your phone as a modem

Your GX500 can be used as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GX500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GX500.

### Using Bluetooth:



By pairing your GX500 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the Settings menu.
- 2 Touch Search.
- 3 Your GX500 will search for devices. When the search is completed, Refresh will appear on screen.
- 4 Choose the device you want to pair with and select **OK**.
- 5 Your phone will then connect to the other device, on which a new default passcode will be create to this connection.
- 6 Your passcode protected Bluetooth connection is now ready.

# Settings

Within this folder you can adapt your settings to make your GX500 personal to you.


## Using Dual SIM-card menu

To select or change the SIM-card, press  and then scroll through SETTINGS Tab, then select .



## Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list.

## Changing your screen settings

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch  and then choose from:

**Wallpaper** - Choose the theme for your standby screen.

**Top Menu** - Choose the style of the top menu.

**Lock screen** - Choose the style of the lock screen.

**Dialling** - Adjust the number size.

**Font** - Adjust the font size.

**Brightness** - Adjust the screen brightness.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Greeting message** - Choose on or off and fill in the greeting message.

**Start-up/Shut down** - Choose the image for your start-up/shut down screen.



# Settings

- 3 Touch **Save** to save your settings.

## Changing your phone settings

Enjoy the freedom of adapting how your GX500 works to your own style.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up/right the screen. The list will move up/right so more items are visible.

- 1 Press  and then scroll through **SETTINGS** Tab.
- 2 Touch  then choose from the list below.

**Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

**Power save** - Choose to switch the factory set power saving settings **Off, Night only, Always on.**

**Touch settings** - Change the touchpad value settings.

**Languages** - Change the language of your GX500's display.

**Motion silent** - Make the GX500 go into the mute or snooze settings by flipping it over when it is ringing.

**Auto key lock** - Lock the keypad automatically in standby screen.

**Security** - Adjust your security settings, including PIN code request, handset lock, change codes and Anti theft Mobile tracker.

**Memory info** - You can use memory manager to determine how each memory is used.

**Reset settings** - Reset all the settings to their factory definitions.


**Information** - View the technical information for your GX500.

### **TIP! Anti-theft Mobile tracker (ATMT)**

- Touch **Security** and **ATMT**. When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with Owner Name, Alternate no (1), Alternate no (2) etc. Default ATMT code is "000000"
- ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

## **Changing your connectivity settings**

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

Touch  and choose **Connectivity** in the SETTINGS tab.

## **Network settings**

**Select Network** - If you set to **Automatic**, GX500 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you set to **Manual** all the currently available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are displayed again and you can select any other one for registration.

**NOTE:** When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

**Preferred lists** - If the network is searching automatically, you can add a preferred network to be connected to.

# Settings

## Connectivity Settings

**Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them however, you cannot delete or edit default configurations depending on country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.

**USB connection mode** - Choose Data service and synchronise your GX500 using the LG PC Suite software to copy files from your phone. If you use **Music sync** with Windows Media Player, select **Music sync** in this menu.


**Music sync** is only available for music content.

**Java settings** - Allows you to set profiles for connections made by Java programs and to view certificates.

## Using memory manager

Your GX500 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  and choose **Phone settings** in the SETTINGS tab then **Memory info**.

**Handset common memory** - View the memory available on your GX500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for Text msg, Contacts, Calendar, Tasks, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM(SIM1/SIM2) memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose the location you prefer items to be saved to between Handset and External memory.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.

- 3 If you have already paired the Bluetooth device, your GX500 will not automatically search for other Bluetooth devices. If not, your GX500 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.



**TIP!** Keep an eye on the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your Media Album.

# Settings

## Changing your bluetooth settings:

- 1 Touch  and choose **Bluetooth** in the SETTINGS tab.
- 2 Touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GX500.

**Supported services** - Choose how to use Bluetooth in association with different services.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GX500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GX500 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.

- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GX500 will automatically switch to Headset profile.

## Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

**NOTE:** The GX500 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program


For more information on installing and using this program, please visit <http://update.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

# Accessories

These accessories are supplied with GX500.

## Charger



## Data cable and CD



## Battery



## User Guide



## Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

**⚠ WARNING:** When the protection film is attached on the touch window, touch sensitivity might decrease.

## Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800 and PCS 1900 network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

**Product name:** GX500

**System:** GSM 850 / E-GSM 900  
/ DCS 1800 / PCS 1900

### Ambient Temperatures

**Max:** +55°C (discharging),  
+45°C (charging)

**Min:** -10°C

## LG Service Center

by LG Electronics (Thailand) Co. Ltd.  
72/127 Somdetprachaw Taksin Rd.,  
Bookalo, Thonburi, Bangkok 10600

Working day :

Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2  
EN 301 511 V9.0.2  
EN 50360:2001 EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

12. Feb. 2010

  
Signature of representative

# Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

| <b>Message</b>               | <b>Possible causes</b>   | <b>Possible Corrective measures</b>   |
|------------------------------|--|---|
| SIM error                    | There is no SIM card in the phone or you may have inserted it incorrectly.   | Make sure that the SIM card is correctly inserted.  |
| No connection to the network | Signal weak<br>Outside GSM network   | Move higher to a window or open space. Check service provider coverage map.                                 |
| Codes do not match           | When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match. | Contact your Service Provider.  |
| Function cannot be set       | Not supported by Service Provider or registration required   | Contact your Service Provider.  |
| Calls not available          | Dialling error<br>New SIM card inserted<br>Charge limit reached  | New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2. |

# Trouble Shooting

| Message                     | Possible causes                       | Possible Corrective measures   |
|-----------------------------|---------------------------------------|--|
| Phone cannot be switched on | On/Off key pressed too briefly        | Press On/Off key for at least two seconds.   |
|                             | Battery empty                         | Charge battery. Check charging indicator in the display.   |
|                             | Battery contacts dirty                | Clean contacts.  |
| Charging error              | Battery totally empty                 | Charge battery.  |
|                             | Temperature out of range              | Make sure the ambient temperature is right, wait for a while, and then charge again.                 |
|                             | Contact problem                       | Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. |
|                             | No mains voltage                      | Plug in to a different socket or check voltage.  |
|                             | Charger defective                     | If the charger does not warm up, replace it.   |
| Phone loses network         | Wrong charger                         | Only use original LG accessories.  |
|                             | Battery defective                     | Replace battery.   |
|                             | Signal too weak                       | Reconnection to another service provider is automatic.   |
| Number not permitted        | The Fixed dial number function is on. | Check settings.  |



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : \_\_\_\_\_ บัตรรับประกันเลขที่ : \_\_\_\_\_  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): \_\_\_\_\_ เลขเครื่อง : \_\_\_\_\_  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : \_\_\_\_\_  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : \_\_\_\_\_  
(อังกฤษ) : \_\_\_\_\_

วัน เดือน ปี เกิด : \_\_\_\_\_ เพศ : \_\_\_\_\_  
(Date of Birth) (Gender)

ที่อยู่ : \_\_\_\_\_  
(Address)

อาชีพ : \_\_\_\_\_ โทรศัพท์ : \_\_\_\_\_ E-mail : \_\_\_\_\_  
(Occupation) (Telephone No.)

ชื่อจากร้าน : \_\_\_\_\_  
(Dealer's Name)

**ศูนย์บริการข้อมูล**

Customer Information Center 0-2878-5757 or

1-800- **L G L G L G** โทรฟรี  
5 4 5 4 5 4

[www.lge.co.th](http://www.lge.co.th)

**บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**  
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน  
คลองเตย กรุงเทพฯ 10110  
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

**LG Electronic (Thailand) CO., Ltd**  
75/81 Richmond Bldg, 22<sup>nd</sup> FL, Sukumvit 26,  
Klongton, Klongtoey Bangkok 10110  
Customer Information Center  
Tel. 0-2878-5757 Fax. 0-2466-0250



ใบอนุญาตเลขที่ ปน.(ศ)/2117 ปณจ. พระโขนง  
ค้าฝากส่งในประเทศไม่ต้องพนักตราไปรษณียากร



## บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน  
แขวงบุนดอโล เขตธนบุรี  
กรุงเทพ 10600

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น  
(This warranty is valid only in Thailand)

- |   |   |
|---|---|
| 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ได้ข้อความสมบูรณ์เท่านั้น  | 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.  |
| 2) ภายในระยะเวลาการรับประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้แก่จากการใช้เครื่องผิดวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย | 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts. |

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- |  |  |
|--|--|
| 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับแต่งตั้ง   | 1) If repair are not undertaken by LG Service Center or Authorize Service Center.                      |
| 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย   | 2) Damage to accessory due to misuse.  |
| 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้ | 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control. |

ศูนย์บริการลูกค้า ( สำนักงานใหญ่ ) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบुकโกล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : \_\_\_\_\_ บัตรรับประกันเลขที่ : \_\_\_\_\_  
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน  
นับจากวันที่ซื้อ  
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): \_\_\_\_\_ เลขเครื่อง : \_\_\_\_\_  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : \_\_\_\_\_  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : \_\_\_\_\_  
(อังกฤษ) : \_\_\_\_\_

วัน เดือน ปี เกิด : \_\_\_\_\_ เพศ : \_\_\_\_\_  
(Date of Birth) (Gender)

ที่อยู่ : \_\_\_\_\_  
(Address)

อาชีพ : \_\_\_\_\_ โทรศัพท์ : \_\_\_\_\_ E-mail : \_\_\_\_\_  
(Occupation) (Telephone No.)

ชื่อจากร้าน : \_\_\_\_\_  
(Dealer's Name)

ที่อยู่ร้าน : \_\_\_\_\_  
(Dealer's Address)

ประทับตราร้านค้า







