

# C 1150 | คู่มือการใช้ |

**LG Electronics Inc.**

<http://www.lge.com>

P/N : MMBB0181206(1.1) 

| C 1150 | คู่มือการใช้



| TÜRKÇE  
ENGLISH



# | C 1150 | คู่มือการใช้

โปรดอ่านคู่มือนี้โดยละเอียดก่อนเริ่มใช้เครื่อง โทรศัพท์  
ของคุณ และเก็บรักษาคู่มือนี้ เพื่อใช้อ้างอิงภายหลัง

**CE 0168**

## | C1150 | คู่มือการใช้

โปรดอ่านคู่มือนี้โดยละเอียดก่อนเริ่มใช้  
เครื่องโทรศัพท์ของคุณ และเก็บรักษา  
คู่มือนี้เพื่อใช้อ้างอิงภายหลัง



# สารบัญ

<b>บทนำ</b>	<b>5</b>	<b>ฟังก์ชันทั่วไป</b>	<b>19</b>
<b>คำแนะนำเพื่อความปลอดภัยและ การใช้งานอย่างมีประสิทธิภาพ</b>	<b>6</b>	การโทรออกและการรับสาย	19
<b>C1150 คุณสมบัติ</b>	<b>11</b>	โหมดยืดเสียงและเปิดสั่น (แบบรวดเร็ว)	20
ส่วนประกอบของโทรศัพท์	11	ระดับการรับสัญญาณ	20
ภาพแสดงตัวเครื่องเมื่อเปิดฝาพับ	11	การป้อนข้อความ	20
ภาพแสดงตัวเครื่องด้านหลัง	12	เมนูระหว่างการใช้สาย	24
คำอธิบายปุ่มต่างๆ	13	การสนทนาหรือประชุมหลายสาย	25
ข้อมูลบนหน้าจอ	15	รหัสการเข้าใช้เครื่อง	28
ไอคอนบนหน้าจอ	15	<b>การเลือกฟังก์ชันและตัวเลือกต่างๆ</b>	<b>29</b>
<b>การเริ่มใช้งาน</b>	<b>16</b>	<b>แผนผังเมนู</b>	<b>30</b>
การใส่ซิมการ์ดและแบตเตอรี่	16	<b>ข้อความ</b>	<b>32</b>
การใส่ซิมการ์ด	16	เขียนข้อความสั้น	32
การถอดซิมการ์ด	16	เขียนข้อความมัลติมีเดีย	33
การใส่แบตเตอรี่	17	กล่องข้อความเข้า	35
การชาร์จแบตเตอรี่	17	กล่องข้อความออก	36
การถอดเครื่องชาร์จแบตเตอรี่	18	ข้อความร่าง	37
		ฟังก์ข้อความเสียง	38

บริการข้อมูล	38
ข้อความอัตโนมัติ	39
การตั้งค่า	40

## ข้อมูลการโทร 43

สายที่ไม่ได้รับ	43
สายที่ได้รับ	43
สายที่โทรออก	43
เลือกลบรายการโทร	44
ค่าใช้จ่ายการโทร	44
ข้อมูล GPRS	45

## รูปแบบเสียง 46

การเปลี่ยนรูปแบบ	46
การปรับแต่งรูปแบบ – กำหนดเอง	46
การปรับแต่งรูปแบบ – เปลี่ยนชื่อ	47

## การตั้งค่า 48

วันที่และเวลา	48
ตั้งค่าโทรศัพท์	48
ตั้งค่าการโทร	49
ตั้งค่าระบบป้องกัน	52
ตั้งค่าเครือข่าย	54
การตั้งค่า GPRS	55
ใช้ค่าจากโรงงาน	55

## บันทึกส่วนตัว 56

นาฬิกาปลุก	56
นัดหมาย	56
สมุดโทรศัพท์	57

<b>เกมส์และเครื่องมือ</b>	<b>62</b>	<b>เมนูในการเบร่าส</b>	<b>70</b>
เมนูโปรด	62	<b>แอปพลิเคชัน</b>	<b>71</b>
เกมส์	62	แอปพลิเคชัน	71
เครื่องคิดเลข	62	ดาวน์โหลด	71
แฟ้มดาวน์โหลด	63	โพรไฟล์	71
การแปลงหน่วย	64	<b>อุปกรณ์เสริม</b>	<b>73</b>
โซนเวลาโลก	64	<b>ข้อมูลทางเทคนิค</b>	<b>74</b>
บันทึกเสียง	64		
แสดงรายการ	65		
<b>อินเทอร์เน็ต</b>	<b>66</b>		
โฮม	66		
มัลมาร์ค	66		
โพรไฟล์	66		
ไปยัง URL	68		
ตั้งค่า Cache	68		
การตั้งค่า Cookies	68		
รับรองความปลอดภัย	69		
รีเซ็ตโพรไฟล์	69		
เวอร์ชันของเบร่าสเซอร์	69		

ขอแสดงความยินดี ที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่นC1150ที่ทันสมัยมีขนาดกะทัดรัดออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิตอลใหม่ล่าสุด



คู่มือการใช้เล่มนี้ประกอบด้วยข้อมูลที่สำคัญในการใช้งานและการทำงานของโทรศัพท์เครื่องนี้ จึงควรอ่านเนื้อหาทั้งหมดด้วยความละเอียดเพื่อผลการใช้งานที่เต็มประสิทธิภาพ และเป็นการป้องกันความเสียหายหรือใช้งานผิดต่อตัวเครื่องได้การรับประกันของโทรศัพท์จะสิ้นสุดลงทันทีหากมีการเปลี่ยนแปลงหรือตัดแปลงและแก้ไข เครื่องนอกเหนือจากที่ระบุอย่างชัดเจนในคู่มือนี้ว่าสามารถกระทำได้

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

อ่านคำแนะนำง่ายๆ เหล่านี้ การฝ่าฝืนกฎเกณฑ์ที่กำหนดอาจเป็นอันตรายหรือผิดกฎหมาย ขอ มูลโดยละเอียดเพิ่มเติมได้อธิบายอยู่ในคู่มือเล่มนี้

## การรับพลังงานคลื่นความถี่วิทยุ

### ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น C1150 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเผื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

▶ ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุในหน่วยวัตต์ที่เรียกว่า SAR การทดสอบ SAR ได้กระทำด้วย การใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องรับ โทรศัพท์สองสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้

- ▶ แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดของการรับพลังงานคลื่นความถี่วิทยุ
- ▶ ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก โดย เฉพาะตามเนื้อเยื่อหนักสิบ (10) กรัม
- ▶ ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.676 วัตต์/กก (10 กรัม)
- ▶ ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กกโดยเฉลี่ยต่อเนื้อเยื่อหนึ่ง (1) กรัม

## การดูแลและการบำรุงรักษาเครื่อง โทรศัพท์

คำเตือน! ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และ อุปกรณ์เสริมที่ผ่านการรับรอง ให้ใช้กับโทรศัพท์รุ่นนี้ เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าว อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- ▶ อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ (ควรรักษาให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้าเช่น โทรศัพท์น วิทยุ หรือเครื่องคอมพิวเตอร์
- ▶ ควรวางโทรศัพท์ไว้ห่างจากแหล่งกำเนิดความร้อน เช่น เครื่องทำความร้อนหรือเตาประกอบอาหาร
- ▶ ไม่ควรทำโทรศัพท์ตกพื้น
- ▶ ไม่ควรวางโทรศัพท์ไว้ในที่ที่มีสารสัมผัสสะท้อนหรือการกระแทก
- ▶ สารเคลือบบนตัวเครื่องโทรศัพท์อาจหลุดลอกได้ หากหมุดด้วยวัสดุหรือสิ่งที่ไม่จากไวนิล
- ▶ ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่อง

โทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)

- ▶ ไม่ควรวางเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- ▶ อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็กเพราะอาจทำให้ความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- ▶ อย่าเคาะหน้าจอกด้วยวัตถุมีคมเพราะอาจทำให้ความเสียหายแก่โทรศัพท์ได้
- ▶ วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ▶ ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าตะตะตองเสออากาศโดยไม่จำเป็น

## การเปลี่ยนฟิวส์

ให้เปลี่ยนฟิวส์ที่ขาดด้วยฟิวส์ประเภทและขนาดเดียวกันเท่านั้นห้ามใช้ฟิวส์ที่ขนาดใหญ่กว่าโดยเด็ดขาด

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

โปรดทำตามคำแนะนำดังต่อไปนี้ ทั้งนี้เพื่อประสิทธิภาพการทำงานสูงสุดด้วยการใช้พลังงานน้อยที่สุด

- ▶ ถูโทรศัพท์เมื่อคุณพูดสายกับผู้อื่นพูดตรงไม่โครโฟนปรับมุมเสาอากาศให้อยู่ในแนวตั้งและให้พื้นหัวไหล่ของคุณหากเสาอากาศสามารถยืด/หดได้ ให้ดึงยืดออกจนสุดในขณะที่โทร
- ▶ หากโทรศัพท์ของคุณมีระบบอินฟราเรด ห้ามส่องรังสีอินฟราเรดเข้าตา

## อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ▶ ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใสในกระเป๋าเสื้อ เป็นต้น
- ▶ โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ▶ ดังนั้น โทรศัพท์น วิทย์ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ▶ ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- ▶ มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่

- ▶ หากสามารถทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ▶ ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสายหากสภาพการขับขี่ให้จำเป็นต้องดำเนินการดังกล่าว
- ▶ พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถยนต์ของคุณ เช่นวิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- ▶ หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมเพราะอาจทำให้คุณได้รับบาดเจ็บ รุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัดและทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ▶ ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิงห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

- ▶ ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟ ฟังยหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ▶ ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- ▶ อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นโดยไม่ได้รับการอนุญาตจากพนักงานประจำเครื่องเสียก่อน

## เด็ก

เก็บโทรศัพท์ในพื้นที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บขึ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## โทรจุกเงิน

การโทรจุกเงินอาจไม่สามารถใช้กับเครื่องช่วยเซลล์ลูลาร์ทั้งหมดได้จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรจุกเงินให้ตรวจสอบกับคู่มือบริการในพื้นที่ของคุณ


## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- ▶ คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มีผลต่อหน่วยความจำประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ▶ ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- ▶ อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- ▶ รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- ▶ เปลี่ยนแบตเตอรี่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงอย่างมากจนไม่อาจใช้ต่อไปได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้ง จนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่

- ▶ ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- ▶ อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูงเช่น ในห้องน้ำ
- ▶ อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง


# C1150 คุณสมบัติ

## ส่วนประกอบของโทรศัพท์ ภาพแสดงตัวเครื่องเมื่อเปิดฝาพับ

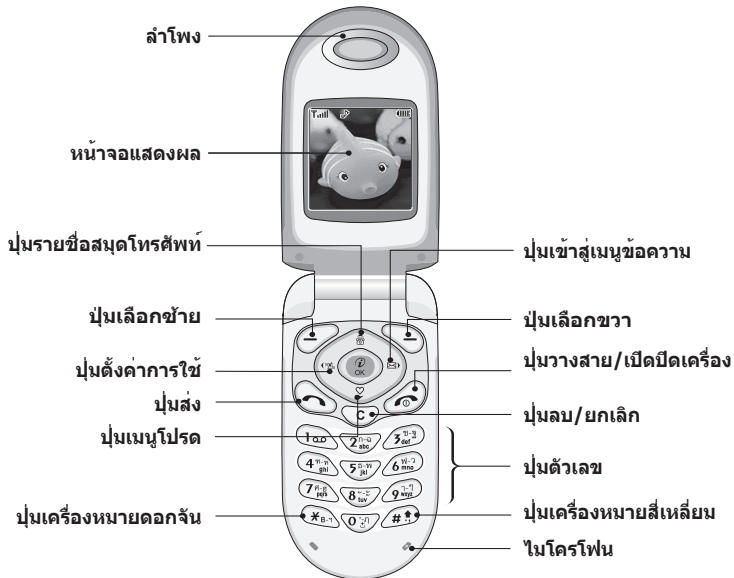

# C1150 คุณสมบัตื



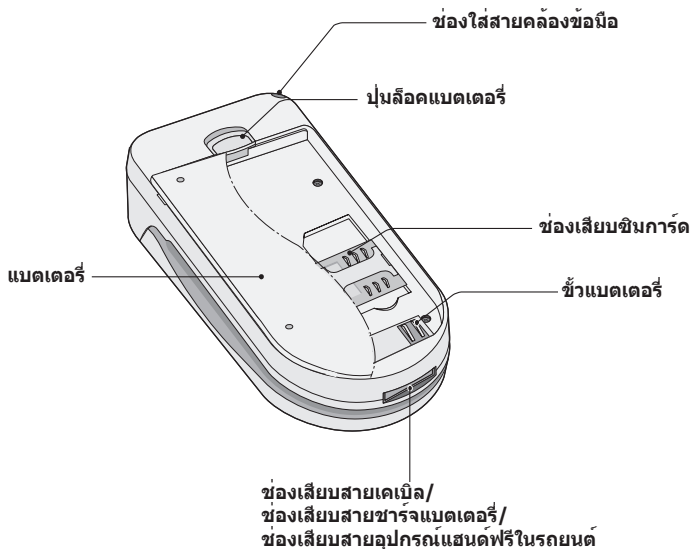



## ภาพแสดงตัวเครื่องด้านหลัง












## คำอธิบายปุ่มต่างๆ

ตารางนี้อธิบายถึงสัญลักษณ์หรือไอคอนต่างๆ ที่ปรากฏขึ้นบนหน้าจอของโทรศัพท์

## คำอธิบายแป้นกด

ปุ่ม	คำอธิบาย
	<b>ปุ่มเลือกซ้าย/ปุ่มเลือกขวา</b> แต่ละปุ่มจะมีหน้าที่การทำงานตามข้อความที่ปรากฏอยู่เหนือปุ่มนั้นๆ
	<b>ปุ่มนารีเกต</b> ใช้เพื่อเลื่อนดูเมนูต่างๆ และเลื่อนเคอร์เซอร์ รวมทั้งใช้ปุ่มนี้เพื่อเข้าใช้ฟังก์ชันต่างๆ ต่อไปนี้แบบด่วน <ul style="list-style-type: none"> <li>• ปุ่มนารีเกตขึ้น (  ): ปุ่มขีดคั่นเพื่อค้นหาลงสุดโทรศัพท์</li> <li>• ปุ่มนารีเกตลง (  ): ปุ่มขีดคั่นเพื่อเข้าสู่เมนู เมนูโปรด</li> <li>• ปุ่มนารีเกตซ้าย (  ): ปุ่มขีดคั่นเพื่อเข้าสู่เมนู โฟร์ไฟล์</li> <li>• ปุ่มนารีเกตขวา (  ): ปุ่มขีดคั่นเข้าสู่ข้อความในถาดเข้า</li> </ul>

ปุ่ม	คำอธิบาย
	<b>ปุ่มส่ง</b> ใช้ในการโทรออกด้วยการกดหมายเลขโทรศัพท์และในการรับสายหากคุณกดปุ่มนี้โดยไม่ป้อนหมายเลขโทรศัพท์ เครื่องจะแสดงหมายเลขที่โทรออก, รับสาย และไม่ได้รับสายล่าสุด
  	<b>ปุ่มตัวเลข</b> ใช้ปุ่มเหล่านี้ในการหมุนหมายเลขเมื่ออยู่ในโหมดสแตนด์บาย และป้อนหมายเลขหรือตัวอักษรเมื่ออยู่ในโหมดแก้ไข เมื่อกดปุ่มต่างๆ ดังนี้ค้างไว้จะเป็นการ: <ul style="list-style-type: none"> <li>• โทรไปที่ศูนย์ฝากข้อความเสียงด้วยการกดปุ่ม </li> <li>• โทรทางไกลต่างประเทศด้วยการกดปุ่ม </li> <li>• โทรออกด้วยการใช้โทรด่วน โดยการกดปุ่ม  ถึงปุ่ม </li> </ul>
	<b>ปุ่มวางสาย/เปิดปิดเครื่อง</b> ใช้ในการวางสายหรือปฏิเสธสายเรียกเข้า และยังใช้เป็นปุ่มเปิดปิดเครื่องด้วยการกดปุ่มนี้ค้างไว้ 2-3 วินาที

# C1150 คุณสมบัตินี้

---

## ปุ่ม คำอธิบาย

---

c

### ปุ่มลบ

กดปุ่มนี้หนึ่งครั้งเพื่อลบหนึ่งตัวอักษร การกดปุ่มนี้ค้างไว้จะลบข้อความทั้งหมด และคุณยังสามารถใช้ปุ่มนี้เพื่อกลับไปยังหน้าจอก่อนหน้า นอกจากนี้ คุณยังสามารถดูรายการบันทึกเสียงเตือนความจำได้เมื่อกดปุ่มนี้สักครู่ขณะที่อยู่ในโหมดสแตนด์บาย

---

## ปุ่มด้านข้าง

---

## ปุ่ม คำอธิบาย

---

a

b

### ปุ่มขึ้น/ลงด้านข้าง



ในขณะที่ฝาพับเปิดอยู่ จะใช้ในการตั้งระดับเสียงของปุ่มกดเมื่ออยู่ในโหมดสแตนด์บาย และระดับเสียงลำโพงในขณะที่ใช้สาย ในขณะที่ฝาพับปิดอยู่กดปุ่มขึ้น/ลงด้านข้างหนึ่งครั้งเพื่อเปิดแสงไฟและกดอีกครั้งเพื่อดูวันที่ปัจจุบันในขณะที่อยู่ในโหมดสแตนด์บาย

---

## ข้อมูลบนหน้าจอ

ตารางนี้อธิบายถึงสัญลักษณ์หรือไอคอนต่างๆ ที่ปรากฏขึ้นบนหน้าจอของโทรศัพท์

### ไอคอนบนหน้าจอ

ไอคอน/สัญลักษณ์	คำอธิบาย
	แสดงความแรงของสัญญาณเครือข่าย
	เชื่อมต่อสายอยู่
	คุณสามารถใช้บริการ GPRS ได้
	แสดงว่าคุณกำลังใช้บริการข้ามเครือข่าย (โรมมิ่ง) อยู่
	กำลังใช้สาย 1 หรือสาย 2 ในการโทรออก ในกรณีที่คุณสมัครใช้บริการสองหมายเลข
	ตั้งและใช้นาฬิกาปลุกอยู่
	แสดงสถานะของแบตเตอรี่
	คุณได้รับข้อความแบบตัวอักษร
	คุณได้รับข้อความแบบเสียง

ไอคอน/สัญลักษณ์	คำอธิบาย
	คุณได้รับข้อความ Push
	คุณสามารถดูตารางนัดหมายได้
	ปิดสัญญาณเสียงทั้งหมด
	เปิดใช้รูปแบบสถานที่ทั่วไป
	เปิดใช้รูปแบบสถานที่อีกที
	เปิดใช้รูปแบบสถานที่เจียบ
	เปิดใช้รูปแบบเมื่อใช้ชุดหูฟัง
	เปิดใช้รูปแบบในรถยนต์
	คุณสามารถโอนสายได้

# การเริ่มใช้งาน

## การใส่ซิมการ์ดและแบตเตอรี่

### 1. การใส่ซิมการ์ด

หาตำแหน่งของช่องเสียบซิมการ์ดที่อยู่ด้านหลังของเครื่องโทรศัพท์ติดตั้งซิมการ์ดโดยทำตามขั้นตอนดังต่อไปนี้

1. ถอดแบตเตอรี่ออกหากมีแบตเตอรี่อยู่ในเครื่อง
2. สอดซิมการ์ดลงในช่องเสียบโดยให้การ์ดอยู่ด้านล่างที่ยึดซิมการ์ดสีน้ำตาล และคว่ำด้านที่เป็นขั้วสีทองลง โดยใหม่มัดต่อยูทางด้านขวา



### 2. การถอดซิมการ์ด

ถอดซิมการ์ดโดยทำตามขั้นตอนดังต่อไปนี้

1. ถอดแบตเตอรี่ออกหากมีแบตเตอรี่อยู่ในเครื่อง
2. นำซิมการ์ดออกจากช่องเสียบ




### ข้อสังเกต


- ▶ การถอดแบตเตอรี่ออกจากเครื่องโดยที่ยังเปิดเครื่องอยู่ อาจทำให้เครื่องเกิดความเสียหายได้
- ▶ ขั้วโลหะของซิมการ์ดเสียหายได้โดยง่ายหากถูกขูดขีด โปรดใช้ความระมัดระวังเป็นพิเศษในการหยิบจับและใส่ซิมการ์ด ให้ปฏิบัติตามคำแนะนำที่แนบมากับซิมการ์ด

### 3. การใส่แบตเตอรี่

1. วางแบตเตอรี่โดยให้ขั้วแบตเตอรี่ที่อยู่ด้านล่างสอดเข้ากับรอยยึด

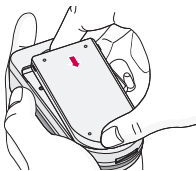


2. แล้วกดส่วนครึ่งบนของแบตเตอรี่ลงในช่อง

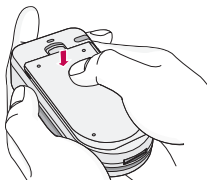


### 4. การชาร์จแบตเตอรี่

ในการเชื่อมต่ออะแดปเตอร์สำหรับชาร์จแบตเตอรี่เข้ากับเครื่องโทรศัพท์คุณต้องใส่แบตเตอรี่ในเครื่องก่อน

1. หันด้านที่มีลูกศรบนตัวปลั๊กขึ้นข้างบนตามที่แสดงในรูปแล้วเสียบปลั๊กอะแดปเตอร์สำหรับชาร์จแบตเตอรี่เข้าในช่องเสียบทางด้านล่างของเครื่องให้สุดจนได้ยินเสียงคลิก

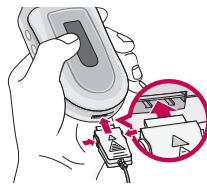

2. เสียบปลายสายอีกด้านหนึ่งของอะแดปเตอร์เข้ากับเต้าเสียบ ควรใช้เฉพาะเครื่องชาร์จที่ใหม่มาในกล่องบรรจุเครื่องโทรศัพท์เท่านั้น

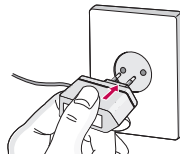

## คำเตือน

- ▶ อย่าใช้แรงผืนในการเสียบสายเพราะอาจทำความเสียหายแก่โทรศัพท์และ/หรืออะแดปเตอร์สำหรับชาร์จแบตเตอรี่

## หมายเหตุ

- ▶ หลังจากเสียบสายอะแดปเตอร์แล้วข้อความ "Charging" (กำลังชาร์จ) จะปรากฏขึ้นบนหน้าจอ หากไม่มีประจุแบตเตอรี่หลงเหลืออยู่เลย สัญลักษณ์ดังกล่าวจะปรากฏขึ้นบนหน้าจอหลังจากผ่านไปประมาณ 2-3 นาที

## 5. การถอดเครื่องชาร์จแบตเตอรี่

ถอดสายอะแดปเตอร์ออกจากโทรศัพท์โดยกดปุ่มด้านข้างทั้งสองข้างตามที่แสดงในรูป



## หมายเหตุ




- ▶ ตรวจสอบว่าได้ชาร์จแบตเตอรี่จนเต็มแล้วก่อนนำโทรศัพท์ไปใช้งาน
- ▶ ห้ามถอดแบตเตอรี่หรือขิมการ์ดออกในขณะที่กำลังชาร์จแบตเตอรี่
- ▶ ชีตเล็กๆ ที่ขยับไปมาของไอคอนแบตเตอรี่จะหยุดนิ่งเมื่อการชาร์จเสร็จสมบูรณ์

## หมายเหตุ



- ▶ ในกรณีที่ไม่ได้ชาร์จแบตเตอรี่อย่างถูกต้อง โปรดปิดและเปิดโทรศัพท์โดยใช้ปุ่มเปิด/ปิด จากนั้นชาร์จแบตเตอรี่ใหม่อีกครั้ง หรือลองถอดแบตเตอรี่ออกและใส่กลับเข้าไป แล้วชาร์จใหม่อีกครั้ง

## การโทรออกและการรับสาย




### การโทรออก

1. กดหมายเลขโทรศัพท์รวมทั้งรหัสพื้นที่ หากต้องการลบหมายเลข ให้กดปุ่ม 
2. กดปุ่ม  เพื่อโทรออก
3. กดปุ่ม  เพื่อวางสาย


### การโทรออกต่างประเทศ

1. กดปุ่ม  ค้างไว้เพื่อเรียกรหัสการโทรออกต่างประเทศขึ้นที่หน้าจอ เครื่องหมาย “+” จะใช้แทนรหัสการโทรออกทางไกลต่างประเทศ
2. ป้อนรหัสประเทศ รหัสพื้นที่ และหมายเลขโทรศัพท์
3. กดปุ่ม 

## การโทรออกด้วยการใช้สมุดโทรศัพท์

1. กดปุ่ม  [รายชื่อ] ในขณะที่อยู่ในโหมดสแตนด์บาย
2. เมื่อหน้าจอแสดงเมนู ให้เลือก ค้นหา โดยกดปุ่ม 
3. เมื่อค้นหาจนพบชื่อหรือหมายเลขโทรศัพท์ที่ต้องการแล้ว ให้กดปุ่ม  เพื่อโทรออก

## การปรับระดับเสียง

หากคุณต้องการปรับระดับเสียงของหูฟังในระหว่างการสนทนา ให้ใช้ปุ่มด้านข้าง (  ) กดปุ่มขึ้นด้านข้างเพื่อเพิ่มระดับเสียงและปุ่มลงด้านข้างเพื่อลดระดับเสียง

### หมายเหตุ

- ▶ ในโหมดสแตนด์บาย การกดปุ่มด้านข้างจะปรับระดับความดังของ เสียงปุ่มกด

## การรับสาย


เมื่อมีสายเรียกเข้าเสียงโทรศัพท์จะดังขึ้น หากเครื่องสามารถระบุผู้โทรเข้าได้ หมายเลข

# ฟังก์ชันทั่วไป

โทรศัพท์ (หรือชื่อและภาพ หากจัดเก็บไว้ในสมุดโทรศัพท์) จะໄ໊ຍที่หน้าจอ

1. เมื่อต้องการรับสายเรียกเข้า ให้เปิดฝาพับของโทรศัพท์ (เมื่อมีการตั้งค่าเปิดฝาพับเป็นโหมดรับสาย โปรดดูในหน้า 50 (เมนู 4.3.2).)

## หมายเหตุ

- ▶ หากกำหนดโหมดการรับสายไว้เป็น "รับสายได้ทุกปุ่ม" (โปรดดูหน้า50) การกดปุ่มใดๆจะรับสายเรียกเข้าทันที ยกเว้นปุ่ม  หรือปุ่มเลือกขว
- ▶ ในการปฏิเสธไม่รับสายเรียกเข้า ให้กดปุ่มด้านข้างของโทรศัพท์ค้างไว้โดยไม่ต้องเปิดฝาพับของโทรศัพท์
- ▶ คุณสามารถรับสายเรียกเข้าได้ขณะที่ใช้คุณสมบัตินัดหมายในสมุดโทรศัพท์ หรือใช้คุณสมบัตินั้นอื่น ๆ


2. ในการวางสาย ให้ปิดฝาพับ หรือกดปุ่ม 

## โหมดปิดเสียงและเปิดสั่น (แบบรวดเร็ว)

คุณสามารถเรียกใช้โหมดปิดเสียงและเปิด

สั่นได้โดยกดปุ่ม  ค้างไว้หลังจากเปิดโทรศัพท์

## ความแรงของสัญญาณ

คุณสามารถตรวจสอบความแรงของสัญญาณได้โดยดูสัญลักษณ์แสดงระดับสัญญาณ (  ) บนหน้าจอ LCD ของโทรศัพท์ ความแรงของสัญญาณอาจไม่สม่ำเสมอ โดยเฉพาะอย่างยิ่ง เมื่อคุณอยู่ในอาคาร หากระดับสัญญาณอ่อน ให้คุณโทรใกล้กับหน้าต่าง เพราะตำแหน่งนั้นมักมีระดับสัญญาณแรงกว่าจุดอื่นๆ

## การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ การจัดเก็บชื่อในสมุดโทรศัพท์ การเขียนข้อความ การสร้างข้อความทักทายส่วนตัว หรือการทำตารางนัดหมายในปฏิทิน ล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้


## โหมด T9

โหมดนี้คุณสามารถป้อนคำได้โดยการกดปุ่มเพียงครั้งเดียวต่อหนึ่งตัวอักษรแม้ว่าแต่ละปุ่มบนแผงปุ่มกดนั้นจะมีตัวอักษรมากกว่าหนึ่งตัวก็ตาม โหมด T9 จะเปรียบเทียบการกดปุ่มของคุณโดยอัตโนมัติกับพจนานุกรมภายในเครื่องเพื่อพิจารณาหาคำที่ต้องตั้งนั้นคุณจึงกดปุ่มน้อยกว่าการป้อนคำโดยใช้โหมด ABC ตามปกติบางครั้งการป้อนคำด้วยวิธีนี้เรียกในอีกชื่อหนึ่งว่าระบบช่วยสะกดคำ


## โหมด ABC

โหมดนี้ให้คุณป้อนตัวอักษรโดยการกดปุ่มที่มีตัวอักษรที่ต้องการหนึ่งครั้ง สองครั้ง สามครั้ง หรือมากกว่านั้น จนกระทั่งตัวอักษรที่ต้องการปรากฏขึ้น


## โหมด 123 (โหมดตัวเลข)

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลขหนึ่งตัว หากต้องการเปลี่ยนเป็นโหมด 123 ในฟิลด์สำหรับการป้อนตัวอักษร ให้กดปุ่ม  จนกว่าหน้าจอจะแสดง โหมด 123

## การเปลี่ยนโหมดป้อนข้อความ

1. เมื่อคุณอยู่ในฟิลด์ที่ยอมให้ป้อนตัวอักษรได้ สัญลักษณ์แสดงโหมดป้อนข้อความจะปรากฏขึ้นที่มุมขวาล่างของหน้าจอ LCD
2. เปลี่ยนโหมดป้อนข้อความโดยการกดปุ่ม  คุณสามารถตรวจสอบโหมดป้อนข้อความ ปัจจุบันได้ในมุมขวาล่างของหน้าจอ LCD

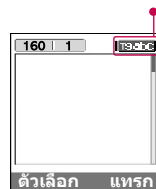

โหมดป้อนข้อความ











### ► วิธีการใช้โหมด T9

โหมดการป้อนข้อความโดยใช้ระบบช่วยสะกดคำ T9 ช่วยให้คุณสามารถป้อนคำต่างๆ ได้อย่างง่ายดายด้วยการกดปุ่มน้อยครั้งที่สุดเมื่อคุณกดปุ่มแต่ละครั้ง โทรศัพท์จะเริ่ม แสดงตัวอักษรที่คิดว่าคุณกำลังพิมพ์โดยอ้างอิงตามพจนานุกรมในเครื่อง และคุณยังสามารถเพิ่มคำใหม่ในพจนานุกรมได้เมื่อมีการเพิ่มคำใหม่ระบบช่วยสะกดคำจะเปลี่ยนแปลงคำที่ป้อนให้ได้ใกล้เคียงกับคำจากพจนานุกรมมากที่สุด

# ฟังก์ชันทั่วไป



1. เมื่อคุณอยู่ในระบบป้อนข้อความแบบช่วยสะกดคำ T9 ให้เริ่มป้อนคำโดยการกดปุ่ม  ถึง  โดยกดปุ่มหนึ่งครั้งต่อหนึ่งตัวอักษร

- ▶ คำจะเปลี่ยนแปลงเมื่อพิมพ์แต่ละตัวอักษร คุณไม่ต้องสนใจคำที่ปรากฏบนหน้าจอจนกว่าคุณจะพิมพ์คำนั้นเสร็จ
- ▶ หากพิมพ์จนเสร็จแล้ว แต่คำนั้นปรากฏไม่ถูกต้อง ให้กดปุ่มนาฬิกาตกลงหนึ่งครั้งหรือมากกว่าเพื่อเลื่อนดูรายการคำที่มีให้เลือก


**ตัวอย่างเช่น:** กดปุ่ม     เพื่อพิมพ์ Good  
กดปุ่ม     [ปุ่มนาฬิกาตกลง] เพื่อพิมพ์ Home

- ▶ หากไม่มีคำที่ต้องการในรายการคำที่มีให้เลือก ให้เพิ่มคำนั้นโดยใช้โหมด ABC
- ▶ คุณสามารถเลือกภาษาของโหมด T9 ได้ ให้กดปุ่มเลือกซ้าย [ตัวเลือก] แล้วเลือก **ภาษา T9** เลือกภาษาที่ต้องการของโหมด T9 นอกจากนี้คุณยังสามารถปิดโหมด T9 ได้โดยการเลือกปิด T9 คำที่ตั้งมาจากโรง

งานของเครื่องคือ ใช้โหมด T9




2. ป้อนคำทั้งคำ ก่อนที่จะแก้ไขหรือลบตัวอักษรตัวใดตัวหนึ่ง
3. เมื่อสิ้นสุดการป้อนคำหนึ่งคำ ให้เว้นวรรคโดยกดปุ่ม  เมื่อต้องการลบตัวอักษรให้กดปุ่ม  หากต้องการลบคำนั้นทั้งหมดให้กดปุ่ม

## หมายเหตุ

- ▶ ในการออกจากโหมดการป้อนข้อความโดยไม่บันทึกข้อความที่ป้อนนั้น ให้กดปุ่ม  เครื่องจะกลับสู่โหมดสแตนด์บาย

## ▶ วิธีการใช้โหมด ABC

ใช้ปุ่ม  ถึง  เพื่อป้อนข้อความ

1. กดปุ่มที่มีตัวอักษรที่คุณต้องการ:
  - ▶ หนึ่งครั้งสำหรับตัวอักษรตัวแรก
  - ▶ สองครั้งสำหรับตัวอักษรตัวที่สอง
  - ▶ และทำเช่นนี้ไปเรื่อยๆ
2. เมื่อต้องการเว้นวรรคให้กดปุ่ม  หนึ่งครั้ง เมื่อต้องการลบตัวอักษรให้กดปุ่ม  และหากต้องการลบคำที่ปรากฏขึ้นทั้งหมด ให้กดปุ่ม  ค้างไว้

### หมายเหตุ

- ▶ โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับตัวอักษรขณะที่ใช้ได้โดยใช้ปุ่มตัวอักษรและตัวเลขจากตารางด้านล่างนี้

ปุ่ม	ตัวอักษรตามลำดับที่แสดง	
	อักษรตัวใหญ่	อักษรตัวเล็ก
1 <sup>no</sup>	_ . , - ( ) ; ; !	_ . , - ( ) ; ; !
2 <sup>no</sup>	<b>A B C 2</b>	a b c ก ข ค ง จ ฉ
3 <sup>no</sup>	<b>D E F 3</b>	d e f ข ฃ ฉ ฎ ฏ ฐ
4 <sup>no</sup>	<b>G H I 4</b>	g h I ท ฉ ณ ด ด ถ ท
5 <sup>no</sup>	<b>J K L 5</b>	j k l ฃ น บ ป ผ ฝ พ
6 <sup>no</sup>	<b>M N O 6</b>	m n o ฟ ภ ฃ ร ล ว
7 <sup>no</sup>	<b>P Q R S 7</b>	p q r s ศ ช ส ห ฟ ้อ ฮ
8 <sup>no</sup>	<b>T U V 8</b>	t u v ั ิ ึ ื ุ ู ุ ุ ะ
9 <sup>no</sup>	<b>W X Y Z 9</b>	w x y z ำ แ ใ ใ ใ ใ
0 <sup>no</sup>	<b>[เว้นวรรค] 0</b>	' ' ' ' ' ' ฤ ฤ

### ▶ วิธีการใช้โหมด 123 (ตัวเลข)

โหมด 123 ช่วยให้คุณสามารถ ป้อนตัวเลขลงในข้อความแบบตัวอักษรได้(เช่นการป้อนหมายเลขโทรศัพท์)



กดปุ่มตัวเลขที่ต้องการ ก่อนที่จะเปลี่ยนเป็นโหมดป้อนข้อความที่เหมาะสมด้วยตนเอง

## เมนูระหว่างการใช้สาย


เมนูที่ปรากฏบนหน้าจอโทรศัพท์ระหว่างการใช้สายจะตรงไปจากเมนูหลักที่ตั้งมาจากโรงงาน ซึ่งเขาใช้จากหน้าจอขณะที่เปิดเครื่องรับสาย โดยมีตัวเลือกต่างๆ ตามที่อธิบายดังต่อไปนี้


## ระหว่างการใช้สาย

### การพักสาย



ในขณะที่โทรออกหรือรับสายให้กดปุ่ม  [ส่ง] เพื่อพักสายนั้นไว้ ขณะที่สายถูกพัก ให้กดปุ่ม  [ส่ง] เพื่อกลับมาใช้สายนั้นอีกครั้ง


### การใช้สายที่สอง

คุณสามารถเรียกหมายเลขโทรศัพท์จากสมุดโทรศัพท์เพื่อโทรออกสายที่สองได้ ให้กดปุ่ม  [รายชื่อ] แล้วเลือก **คนหา**


ในการจัดเก็บหมายเลขโทรศัพท์ที่โทรออกลงในสมุดโทรศัพท์ระหว่างการใช้สาย ให้กดปุ่ม  [รายชื่อ] แล้วเลือก **เพิ่มใหม่**

## การสลับระหว่างสองสาย

ในการสลับระหว่างสองสายให้กด  [ตัวเลือก] แล้วเลือก **สลับสาย** หรือเพียงกดปุ่ม  [ส่ง]

คุณสามารถเลือกใช้สายใดสายหนึ่งจากสองสายโดยกดปุ่มลูกศรขึ้น/ลง หากคุณต้องการวางสายใดสายหนึ่ง ให้กลับไปสายซึ่งคุณต้องการวาง แล้วกดปุ่ม  [กลับ] ขณะอยู่ที่สายที่คุณต้องการวาง


## การรับสายเรียกเข้า

ในการรับสายเรียกเข้า เมื่อมีเสียงเรียกเข้าดังขึ้นที่เครื่อง คุณเพียงแคกดปุ่ม  [ส่ง]

โทรศัพท์ยังสามารถเตือนให้คุณทราบว่ามีสายเรียกเข้าอีกสายหนึ่งในระหว่างที่คุณสนทนากับอีกสาย โดยจะมีสัญญาณดังขึ้นในหูโทรศัพท์ และหน้าจอจะแสดงให้เห็นว่ามีสายที่สองกำลังรออยู่ คุณสมบัตินี้เรียกว่าคุณสมบัตินี้เรียกชื่อนี้จะใช้งานได้เฉพาะกรณีที่ใช้ระบบเครือข่ายของคุณสนับสนุนเท่านั้น สำหรับรายละเอียดในการเรียกใช้และการยกเลิกการใช้คุณสมบัตินี้ ในหตุที่สายเรียกชอน [เมนู 4-3-4]



หากเปิดใช้ สายเรียกชอน คุณสามารถพักสาย

ที่หนึ่งและรับสายที่สองได้โดยกดปุ่ม  [ส่ง] หรือโดยการเลือก  [ตอบกลับ] แล้วเลือก **พักสาย และ รับสาย**



คุณสามารถวางสายที่กำลังสนทนาอยู่และรับสายที่รออยู่โดยเลือก  [เมนู] แล้วเลือก **วางสาย และ รับสาย**

## การปฏิเสธสายเรียกเข้า

ในขณะที่ไม่ได้รับสายคุณสามารถปฏิเสธการรับสายเรียกเข้าโดยกดปุ่ม  [กลับ] หรือปุ่ม  ค้างไว้หากฝาพับปิดอยู่


แต่หากคุณใช้สายอยู่ คุณสามารถปฏิเสธสายเรียกเข้าได้โดยกดปุ่ม  [เมนู] และเลือก **หลายสาย/วางสาย** หรือกดปุ่ม  [กลับ]

## การปิดไมโครโฟน


คุณสามารถปิดไมโครโฟนระหว่างใช้สายโดยการกดปุ่ม  [ตัวเลือก] แล้วเลือก **ปิดเสียง** คุณสามารถเปิดเสียงของเครื่องโทรศัพท์ โดยกดปุ่ม  [เปิดเสียง]

เมื่อปิดเสียงไมโครโฟน ผู้ที่โทรเข้ามาจะไม่ได้ยินเสียงคุณแต่คุณยังคงได้ยินเสียงบุคคลนั้นได้

## การเปิดใช้สัญญาณเสียง DTMF ระหว่างใช้สาย

ในการเปิดใช้สัญญาณเสียง DTMF ระหว่างใช้สาย เพื่อให้โทรศัพท์ของคุณใช้สวิตช์บอร์ดอัตโนมัติให้เลือกปุ่ม  [ตัวเลือก] แล้วเลือก **DTMF On** คุณสามารถปิดการใช้สัญญาณเสียง DTMF ได้ด้วยวิธีการเดียวกัน

## การเรียกใช้เมนูหลัก ข้อความ และ SIM Tool kit

คุณสามารถเข้าสู่ตัวเลือกเมนูหลักข้อความและ SIM Tool kit ได้จากเมนูระหว่างการใช้อยู่โดยเลือกปุ่ม  [ตัวเลือก] เมนู SIM Tool kit จะปรากฏเมื่อซิมการ์ดในเครื่องสามารถใช้บริการ SIM Tool kit ได้เท่านั้น



## การสนทนาหรือประชุมหลายสาย

บริการสนทนาหลายสายหรือการประชุมหลายสายช่วยให้คุณสนทนากับบุคคลหลายคนในเวลาเดียวกัน หากผู้ให้บริการเครือข่ายของคุณสามารถรองรับบริการดังกล่าว


# ฟังก์ชันทั่วไป

การสนทนาหลายสายสามารถทำได้เฉพาะในกรณีที่ผู้ใช้สายหนึ่งอยู่และพักอีกสายไว้โดยรับสายทั้งสองแล้ว เมื่อกำหนดให้มีการสนทนาหลายสายแล้ว ผู้จัดให้มีการสนทนาหลายสายอาจเพิ่ม วางสายหรือแยกสาย(กล่าวคือสายนั้นจะถูกตัดออกจากการสนทนาหลายสายแต่ยังคงอยู่ในสายของคุณ) ตามความต้องการได้จำนวนสายสูงสุดในการสนทนาแบบหลายสายคือ 5 สายเมื่อเริ่มการประชุมหลายสายคุณจะเป็นผู้ควบคุมสายสนทนาเหล่านั้นและมีเพียงคุณเท่านั้นที่สามารถเพิ่มสายเข้ามาในการสนทนาได้


## การใช้สายที่สอง

คุณสามารถใช้สายที่สองขณะกำลังอยู่ในอีกสายหนึ่งได้ โดยการป้อนหมายเลขโทรศัพท์หมายเลขที่สองและกดปุ่ม  [ส่ง] เมื่อคุณต่อสายที่สองได้แล้วสายแรกจะถูกพักโดยอัตโนมัติคุณสามารถสลับระหว่างสายทั้งสองได้ โดยเลือกปุ่ม  [ตัวเลือก] แล้วเลือก สลับสาย

## การจัดการสนทนาหลายสาย

คุณสามารถเชื่อมต่อสายที่พักไว้เข้ากับสายที่ใช้อยู่ปัจจุบันเพื่อจัดการสนทนาหลายสายได้โดยเลือกปุ่ม  [ตัวเลือก] แล้วเลือก **หลายสาย / พักสายทุกสาย**


## การพักสายที่อยู่ในการสนทนาหลายสาย

ในการพักสายที่อยู่ในการสนทนาหลายสาย ให้เลือกปุ่ม  [ตัวเลือก] แล้วเลือก **หลายสาย / รวมทุกสาย**

## การใช้สายที่พักไว้จากการสนทนาหลายสาย

ในการนำสายที่พักไว้กลับมาสู่การสนทนาหลายสายอีกครั้ง ให้กดปุ่ม  [ตัวเลือก] แล้วเลือก **หลายสาย/รวมทุกสาย**

## การเพิ่มสายเข้าสู่การสนทนาหลายสาย


ในการเชื่อมต่อสายที่สนทนาอยู่ในขณะนั้นเข้ากับการสนทนาหลายสายที่พักไว้ให้เลือกปุ่ม 

[ตัวเลือก] แล้วยเลือก หลายสาย/รวมทุก สาย


## การแสดงสายผู้สนทนาที่อยู่ในการสนทนาหลายสาย

ในการเลื่อนดูหมายเลขของผู้โทรเข้าที่จัดการสนทนาหลายสายบนหน้าจอโทรศัพท์ ใหญ่ดปุ่ม  และ 




## การพักสายของบุคคลหนึ่งที่อยู่ในการสนทนาหลายสาย

ในการพักสายของผู้โทรเข้าสายใดสายหนึ่ง (ที่มีหมายเลขปรากฏอยู่บนหน้าจอ) ในการสนทนาหลายสาย ให้เลือกปุ่ม  [ตัวเลือก] แล้วยเลือกหลายสาย/แยก

## การพูดคุยส่วนตัวในการสนทนาหลายสาย

ในการสนทนาเป็นการส่วนตัวกับสายใดสายหนึ่งที่อยู่ในกลุ่มการสนทนาหลายสาย ให้แสดงหมายเลขของสายที่ต้องการบนหน้าจอจากนั้นเลือกปุ่ม  [ตัวเลือก] และหลายสาย/ส่วนตัว เพื่อพักสายที่เหลือทั้งหมด

## การวางสายสนทนาหลายสาย

คุณสามารถวางสายของผู้โทรเข้าที่อยู่ในการสนทนาหลายสายที่ปรากฏอยู่ในขณะนี้โดยกดปุ่ม  [กลับ] ในการจบการสนทนาหลายสาย ใหญ่ดปุ่ม  [ตัวเลือก] แล้วยเลือก หลายสาย/สิ้นสุดการสนทนาหลายสาย การกดปุ่ม  [ตัวเลือก] แล้วยเลือก หลายสาย/สิ้นสุดการสนทนาหลายสายจะเป็นการวางสายที่สนทนาอยู่และสายที่พักไว้ทั้งหมด

## รหัสการเข้าใช้เครื่อง

คุณสามารถใช้รหัสการเข้าใช้เครื่องที่อธิบายในหัวข้อนี้เพื่อป้องกันไม่ให้มีการใช้เครื่องของคุณโดยไม่ได้รับอนุญาตรหัสการเข้าใช้เครื่อง (นอกจากรหัส PUK และ PUK2) สามารถเปลี่ยนแปลงได้โดยใช้ [เมนู 4-4-5]

## รหัส PIN (4 ถึง 8 หลัก)

รหัส PIN (Personal Identification Number) จะป้องกันการใช้ซิมการ์ดของคุณ โดยไม่ได้รับอนุญาตรหัส PIN จะให้มาพร้อมกับซิมการ์ดเมื่อตั้งค่า **รหัส PIN** ใหม่ว่า **ตกลง** คุณจะต้องป้อนรหัส PIN ทุกครั้งที่เปิดเครื่องในทางตรงกันข้ามเมื่อตั้งค่า **รหัส PIN** อยู่ที่ **ปิด** เครื่องจะเชื่อมต่อกับเครือข่ายทันทีโดยไม่ถามรหัส PIN

## รหัส PIN2 (4 ถึง 8 หลัก)

รหัส PIN2 ซึ่งให้มาพร้อมกับซิมการ์ดบางรุ่นใช้สำหรับการเข้าใช้ฟังก์ชันบางอย่าง เช่น การตั้งค่า ค่าใช้โทรศัพท์ การกำหนดหมายเลขโทรออก ฟังก์ชันเหล่านี้สามารถใช้งานได้เมื่อซิมการ์ดของคุณสนับสนุนเท่านั้น

## รหัส PUK (4 ถึง 8 หลัก)

รหัส PUK (PIN Unlocking Key) ใช้ในการเปลี่ยนแปลงรหัส PIN ที่ถูกล็อค รหัส PUK จะมีให้พร้อมกับซิมการ์ด หากไม่มี โปรดติดต่อผู้ให้บริการระบบของคุณเพื่อขอรหัสดังกล่าวหากคุณทำรหัสดังกล่าวหาย ให้ติดต่อผู้ให้บริการระบบ

## รหัส PUK2 (4 ถึง 8 หลัก)

รหัส PUK2 ซึ่งมาพร้อมกับซิมการ์ดบางรุ่นใช้ในการเปลี่ยนแปลงรหัส PIN2 ที่ถูกล็อค หากคุณทำรหัสดังกล่าวหาย ให้ติดต่อผู้ให้บริการระบบ


## รหัสรักษาความปลอดภัย (4 ถึง 8 หลัก)

รหัสรักษาความปลอดภัย (Security code) จะป้องกันไม่ให้มีการใช้โทรศัพท์ของคุณ โดยไม่ได้รับอนุญาตโดยทั่วไปจะให้มาพร้อมกับเครื่องโทรศัพท์รหัสนี้ใช้สำหรับลบรายการต่าง ๆ ทั้งหมดในเครื่องและใช้รหัสนี้เพื่อใช้งานเมนู "ใช้ ค" จากโรงงาน "รหัสที่กำหนดมาคือ "0000"

# การเลือกฟังก์ชันและตัวเลือกต่างๆ

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณปรับแต่งโทรศัพท์ได้ โดยฟังก์ชันดังกล่าว มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้โดยผ่านทางปุ่มเลือกสองปุ่ม (☺) และ (☹) เมนูและเมนูย่อยแต่ละเมนูช่วยให้คุณดูและเปลี่ยนแปลงการตั้งค่าของฟังก์ชันเฉพาะได้

ปุ่มเลือกอาจทำงานแตกต่างกันไปตามการใช้งานในขณะนั้น คุณสามารถดูการทำงานในขณะนั้นของปุ่มเลือกได้จากข้อความที่ปรากฏในบรรทัดล่างสุดของหน้าจอและอยู่เหนือปุ่มเลือกแต่ละปุ่ม

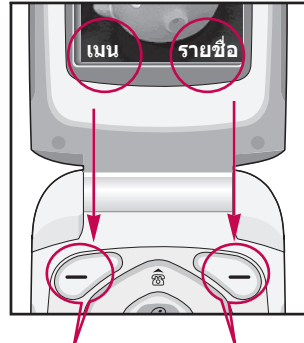

กดปุ่มเลือกซ้ายเพื่อ  
เข้าใช้เมนูที่มีให้เลือก

กดปุ่มเลือกขวาเพื่อ  
เรียกใช้การดำเนินการ  
ที่เกี่ยวข้อง

# แผนผังเมนู

1. ข้อความ
1.1 เขียนข้อความสั้น
1.2 เขียนข้อความมัลติมีเดีย
1.3 กลองข้อความเข้า
1.4 กลองข้อความออก
1.5 ข้อความร่าง
1.6 ฟังข้อความเสียง
1.7 บริการข้อมูล
1.8 ข้อความอัตโนมัติ
1.9 การตั้งค่า

2. ข้อมูลการโทร
2.1 เบอร์ที่ไม่ได้รับ
2.2 เบอร์ที่ได้รับ
2.3 เบอร์ที่โทรออก
2.4 ลบเบอร์ในรายการ
2.5 เวลาและค่าโทร
2.6 ข้อมูล GPRS
3. รูปแบบเสียง
3.1 สั้นอย่างเดียว
3.2 เจียบ
3.3 ปกติ
3.4 เสียงดัง
3.5 ซุดหูฟัง
3.6 รถยนต์

4. การตั้งค่า
4.1 วันที่และเวลา
4.2 ตั้งค่าโทรศัพท์
4.3 ตั้งค่าการโทร
4.4 ตั้งค่าระบบป้องกัน
4.5 ตั้งค่าเครือข่าย
4.6 การตั้งค่า GPRS
4.7 ใช้ค่าจากโรงงาน

<b>5. บันทึกส่วนตัว</b>
5.1 นาฬิกาปลุก
5.2 นัดหมาย
5.3 สมุดโทรศัพท์
<b>6. เกมส์และเครื่องมือ</b>
6.1 เมนูโปรด
6.2 เกมส์
6.3 เครื่องคิดเลข
6.4 แฟ้มดาวนโหลด
6.5 การแปลงหน่วย
6.6 โชนเวลาโลก
6.7 บันทึกเสียง
6.8 แสดงรายการ

<b>7. อินเทอร์เน็ต</b>
7.1 โสม
7.2 บัญมาร์ค
7.3 โพรไฟล์
7.4 ไปยัง URL
7.5 ตั้งค่า Cache
7.6 การตั้งค่า Cookies
7.7 รับรองความปลอดภัย
7.8 รีเซตโพรไฟล์
7.9 เวอร์ชันของเบร่าส์ เซอร์
<b>8. แอปพลิเคชัน</b>
8.1 แอปพลิเคชัน
8.2 ดาวนโหลด
8.3 โพรไฟล์

<b>9. บริการซิมการ์ด</b>
เมนูนี้ขึ้นอยู่กับซิมการ์ด และ การให้บริการของ เครือข่าย

# ข้อความ



เมนูนี้ประกอบด้วยฟังก์ชันที่เกี่ยวกับ SMS (บริการเขียนข้อความสั้น), MMS (บริการข้อความมัลติมีเดีย)

, ข้อความเสียงรวมทั้งข้อความบริการของเครือข่าย

## เขียนข้อความสั้น

เมนู 1.1



คุณสามารถเขียนและแก้ไขข้อความแบบตัวอักษรและตรวจสอบจำนวนหน้าของข้อความได้โดย:

1. เข้าสู่เมนู ข้อความด้วยการกดปุ่ม  [เลือก]
2. หากคุณต้องการพิมพ์ข้อความใหม่ ให้เลือก **เขียนข้อความสั้น**
3. เพื่อให้การพิมพ์ข้อความง่ายขึ้นให้ใช้คุณสมบัติ T9 โปรดดูรายละเอียดในหน้า 21-23(การป้อนข้อความ)
4. กดปุ่ม [แทรก] เพื่อแทรกรายการต่างๆลงในข้อความ
5. ในกรณีที่ต้องการตั้งค่าตัวเลือกให้ข้อความหรือสิ้นสุดการพิมพ์ ให้กดปุ่ม  [ตัวเลือก]

## หมายเหตุ

- ▶ โทรศัพท์บางรุ่นที่รองรับ EMS รหัส 5 สามารถส่งภาพถ่าย สี, เสียง, รูปแบบ ข้อความต่างๆได้ ผู้รับข้อความอาจไม่สามารถรับภาพเสียงหรือรูปแบบข้อความที่คุณส่งได้อย่างสมบูรณ์หากโทรศัพท์ของผู้รับไม่สนับสนุนระบบ

## ตัวเลือก

- ▶ **ส่ง:** ใช้ข้อความแบบตัวอักษร
  1. ป้อนหมายเลขโทรศัพท์ของผู้รับ
  2. กดปุ่ม  เพื่อเพิ่มหมายเลขผู้รับ
  3. คุณสามารถเพิ่มหมายเลขในสมุดโทรศัพท์
  4. กดปุ่ม  เมื่อป้อนหมายเลขเสร็จแล้ว
- ▶ **บันทึก:** บันทึกข้อความในร่าง
- ▶ **ตัวอักษร:** คุณสามารถเลือกขนาดและรูปแบบของตัวอักษร
- ▶ **สี:** คุณสามารถเลือก สี สำหรับสีของฉากหน้าและพื้นหลัง
- ▶ **การปรับแนว:** ใช้สำหรับจัดข้อความให้ชิดด้านขวา (**Right**), กึ่งกลาง (**Centre**)หรือซ้าย (**Left**)

- ▶ **เพิ่มคำศัพท์ T9:** คุณสามารถใช้เพื่อเพิ่มคำต่าง ๆ ตามต้องการจะมีการแสดงเมนูนี้เฉพาะกรณีที่โหมดการแก้ไขเป็นชนิด **Predictive (T9A/T9abc/T9ABC)** เท่านั้น
- ▶ **ภาษา T9:** เลือกภาษาสำหรับโหมดป้อนข้อความ T9 คุณสามารถเลือกใช้โหมดป้อนข้อความ T9 โดยเลือก "ไม่ใช่ T9"
- ▶ **ออก:** หากคุณกด **ออก** ในขณะที่กำลังพิมพ์ข้อความอยู่จะเป็นการสิ้นสุดการพิมพ์ข้อความและกลับสู่เมนู ข้อความโดยเครื่องจะไม่นับที่กข้อความที่เพิ่งพิมพ์นั้น

## แทรก


- ▶ **สัญลักษณ์:** สำหรับเพิ่มอักขรพิเศษลงในข้อความ
- ▶ **รูปภาพ:** คุณสามารถแทรกกราฟิกที่กำหนดไว้หรือกราฟิกใน My pictures ที่สามารถเข้ากับข้อความตัวอักษรได้
- ▶ **เสียง:** สำหรับแทรกเสียงที่สามารถนำมาใช้กับการส่งข้อความได้
- ▶ **ข้อความอัตโนมัติ:** คุณสามารถใช้ข้อความสำเร็จรูปจากข้อความอัตโนมัติ ซึ่งเก็บในครั

## องโทรศัพท์ได้

- ▶ **สมุดโทรศัพท์:** สำหรับเพิ่มหมายเลขโทรศัพท์ หรือที่อยู่อีเมลจาก **สมุดโทรศัพท์**
- ▶ **แบบนามบัตร:** สำหรับเพิ่มข้อมูลติดต่อของคุณลงในข้อความ

## เขียนข้อความมัลติมีเดีย เมนู 1.2

คุณสามารถใช้เมนูนี้เพื่อเขียนหรือแก้ไขข้อความมัลติมีเดียหรือใช้ตรวจสอบขนาดข้อความใด

1. เข้าสู่เมนู **ข้อความ** ด้วยการกดปุ่ม  [เลือก]
2. หากคุณต้องการพิมพ์ข้อความใหม่ ให้เลือก **เขียนข้อความมัลติมีเดีย**
3. คุณสามารถพิมพ์ข้อความขึ้นใหม่หรือเลือกข้อความมัลติมีเดียสำเร็จรูปขึ้นมาหนึ่งข้อความจากที่สร้างไว้แล้ว
4. กดเลือก **แทรก** เพื่อเพิ่ม **สัญลักษณ์, ภาย, รูปภาพ, เสียง, ข้อความอัตโนมัติ, สมุดโทรศัพท์** หรือ **แบบนามบัตร**

# ข้อความ

## ตัวเลือก

- ▶ **ส่ง:** คุณสามารถส่งข้อความมัลติมีเดียถึงผู้รับหลายคนได้รวมทั้งสามารถจัดลำดับความสำคัญให้กับข้อความแล้วกำหนดให้ส่งภายหลังได้
- ▶ **แสดงตัวอย่าง:** คุณสามารถตรวจดูข้อความมัลติมีเดียที่คุณพิมพ์ได้
- ▶ **บันทึก:** คุณสามารถบันทึกข้อความมัลติมีเดียลงใน ข้อความร่าง หรือนำบันทึกเป็นข้อความสำเร็จรูปก็ได้
- ▶ **เพิ่มสไลด์:** คุณสามารถเพิ่มสไลด์ให้อยู่หน้าหรือหลังสไลด์ที่มีอยู่ปัจจุบันได้
- ▶ **ย้ายสไลด์:** ใช้สำหรับเลื่อนดูสไลด์ก่อนหน้าหรือสไลด์ถัดไป
- ▶ **ลบสไลด์:** ใช้สำหรับลบสไลด์ปัจจุบัน
- ▶ **ตั้งรูปแบบสไลด์**
  - **ตั้งเวลา:** คุณสามารถกำหนดช่วงเวลาแสดงสไลด์, ข้อความ, ภาพ และเสียงได้
  - **สลับระหว่างข้อความและภาพ:** คุณสามารถสลับตำแหน่งของภาพและตัวอักษรในข้อความได้
- ▶ **ลบข้อความมัลติมีเดีย:** ใช้ลบภาพและเสียงในสไลด์ เครื่องจะแสดงตัวเลือกนี้เฉพาะกรณีที่มีภาพหรือเสียงอยู่เท่านั้น
- ▶ **เพิ่มคำศัพท์ T9:** คุณสามารถใช้เพื่อเพิ่มคำต่าง ๆ ตามต้องการจะมีการแสดงเมนูนี้เฉพาะกรณีที่โหมดการแก้ไขเป็นชนิด **Predictive (T9Abc/T9abc/T9ABC)** เท่านั้น
- ▶ **ภาษา T9:** เลือกภาษาสำหรับโหมดป้อนข้อความ T9
- ▶ **ออก:** คุณสามารถใช้กลับสู่เมนู ข้อความได้

## หมายเหตุ

- ▶ หากคุณเลือกภาพ (15K) สำหรับเขียนลงในข้อความมัลติมีเดีย เครื่องจะใช้เวลาในการโหลดภาพนั้นอย่างน้อย 15 วินาที และคุณจะไม่สามารถใช้งานปุ่มใดๆ ได้ ในระหว่างการโหลด คุณสามารถพิมพ์ข้อความมัลติมีเดียได้หลังจาก 15 วินาทีผ่านไป






## กล่องข้อความเข้า

เมนู 1.3

เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้า โดยข้อความเหล่านี้จะถูกจัดเก็บใน กล่องข้อความเข้า

ในกล่องข้อความเข้าคุณสามารถทราบประเภทของข้อความแต่ละข้อความได้โดยดูจากไอคอนโปรตุเกสรายละเอียด ได้ที่หัวข้อความหมายของไอคอน

### ► ความหมายของไอคอน

ไอคอน	คำอธิบาย
	ข้อความมัลติมีเดีย
	ข้อความสั้น
	ข้อความซิมการ์ด
	อ่าน
	ข้อความมัลติมีเดียชนิดแจ้งเตือน

หากเครื่องแสดงข้อความ "ข้อความในซิมการ์ดเต็ม" คุณต้องลบเฉพาะข้อความซิมการ์ดออกจากกล่องข้อความเข้าหากเครื่องแสดงข้อความ "ข้อความเต็ม" คุณสามารถทำให้พื้นที่จัดเก็บแต่ละส่วนว่างได้ด้วยการลบข้อความ, ภาพหรือ

เสียง และ แอปพลิเคชันต่างๆ

### หมายเหตุ

- ข้อความในซิมการ์ด: ข้อความซิมการ์ด (ข้อความซิมการ์ด) หมายถึง ข้อความที่จัดเก็บอยู่ในซิมการ์ดโดยเฉพาะ

สำหรับข้อความมัลติมีเดียชนิดแจ้งเตือนนั้นคุณจะต้องรอสักครู่เพื่อให้เครื่องดาวน์โหลดและดำเนินการกับข้อความเสียก่อนโปรดดูรายละเอียดการตั้งค่าแจ้งเตือนได้ที่ [เมนู 1-9-2]

ในการอ่านข้อความให้เลือกข้อความนั้นโดยการกดปุ่ม 

- **แสดงข้อความ:** สำหรับดูข้อความที่เลือกไว้
- **ตอบกลับ:** คุณสามารถตอบกลับผู้ส่งข้อความ
- **ส่งต่อ:** คุณสามารถส่งต่อข้อความที่เลือกนั้นให้บุคคลอื่นได้
- **โทรกลับ:** คุณสามารถโทรกลับผู้ส่งข้อความได้
- **ลบ:** คุณสามารถลบข้อความนั้นได้
- **จัดเก็บข้อมูล:** คุณสามารถดึงภาพ เสียงและข้อความออกมาได้โดยข้อมูลเหล่านั้นจะถูกบันทึกใน แฟ้มดาวน์โหลด และ สมุดโทรศัพท์

- ▶ **แสดงข้อมูล:** คุณสามารถดูข้อมูลของข้อความที่ได้รับ เช่น ที่อยู่ของผู้ส่ง, หัวข้อ(เฉพาะข้อความมัลติมีเดีย), วันที่และเวลาส่งข้อความ, ประเภทข้อความ, ขนาดข้อความ
- ▶ **เล่นใหม่ (ใช้กับข้อความมัลติมีเดียเท่านั้น):** คุณสามารถเล่นข้อความมัลติมีเดียซ้ำได้

## กล่องข้อความออก


เมนู 1.4

คุณสามารถดูรายการและเนื้อหาของข้อความที่ส่งไปแล้วได้ในเมนูนี้ รวมทั้งตรวจสอบ ได้ว่าส่งได้สำเร็จหรือไม่

ไอคอน	คำอธิบาย
	MMS ที่ส่งแล้ว
	MMS ที่ยังไม่ส่ง
	MMS ที่ยืนยันการส่งแล้ว
	SMS ที่ส่งแล้ว
	SMS ที่ยังไม่ส่ง
	SMS ที่ยืนยันการส่งแล้ว

ในแต่ละข้อความ ตัวเลือกต่อไปนี้ใช้ได้โดยการกดปุ่มเลือกซ้าย[ตัวเลือก]

 **ข้อความที่การรับส่งได้เสร็จสิ้นแล้ว** จะมีตัวเลือกที่ใช้งานได้ดังนี้

- ▶ **ดู:** คุณสามารถดูข้อความที่เลือกได้
- ▶ **ส่งต่อ:** คุณสามารถส่งต่อข้อความที่เลือกไปยังผู้รับอื่น
- ▶ **ลบ:** ลบข้อความที่เลือกออกจากกล่องข้อความออก
- ▶ **ดูข้อมูล:** คุณสามารถดูข้อมูลของข้อความที่เลือก เช่น หัวเรื่อง (เฉพาะข้อความมัลติมีเดีย), วันที่ และ เวลาที่คุณส่ง, ประเภท และ ขนาดของข้อความ, ลำดับความสำคัญ (เฉพาะข้อความมัลติมีเดีย) และผู้รับ
- ▶ **ลบทั้งหมด:** ลบข้อความทั้งหมดในแฟ้มกล่องข้อความออก
-  **ข้อความที่อยู่ในกระบวนการรับส่งจะมีตัวเลือกดังต่อไปนี้**
  - ▶ **ดู:** คุณสามารถดูข้อความที่เลือกได้
  - ▶ **ส่ง:** เลือกตัวเลือกนี้เพื่อส่งอีกครั้ง

- ▶ **ยกเลิก:** ยกเลิกการรับส่งข้อความ
- ▶ **ลบ:** ยกเลิกการรับส่งข้อความและลบข้อความ
- ▶ **ดูข้อมูล:** คุณสามารถดูข้อมูลของข้อความที่เลือก เช่น หัวเรื่อง(เฉพาะข้อความมัลติมีเดีย),วันที่ และ เวลาที่คุณส่ง,ประเภทและขนาดของข้อความ, ลำดับความสำคัญ(เฉพาะข้อความมัลติมีเดีย)และผู้รับ
- ▶ **ส่งทั้งหมด:** ส่งข้อความทั้งหมดที่ยังอยู่ในกระบวนการรับส่งข้อความอีก ครั้ง
- ▶ **ยกเลิก:** ยกเลิกการรับส่งข้อความทั้งหมด
- ▶ **ลบทั้งหมด:** ยกเลิกการรับส่งข้อความทั้งหมดและลบทุกข้อความ

## ข้อความร่าง

เมนู 1.5

คุณสามารถดูข้อความที่บันทึกไว้เป็นฉบับร่างได้ ข้อความร่างจะแสดงไว้พร้อมวันที่และเวลาที่บันทึกข้อความร่างนั้น ให้เลื่อนดูรายการด้วยการใช้ปุ่มนาฬิกาเกิดขึ้นลง

ไอคอน	คำอธิบาย
	ข้อความมัลติมีเดีย
	ข้อความ SMS

ในข้อความร่างแต่ละข้อความ จะมีตัวเลือกดังต่อไปนี้ กดปุ่ม  [ตัวเลือก]

- ▶ **แสดงข้อความ:** สำหรับดูข้อความที่เลือกไว้
- ▶ **แก้ไข:** สำหรับแก้ไขข้อความที่เลือกไว้
- ▶ **ส่ง:** เลือกตัวเลือกนี้เพื่อส่งข้อความที่เลือก
- ▶ **ลบ:** สำหรับลบข้อความที่เลือกไว้ออกจากโพลเดอร์ของข้อความร่าง

# ข้อความ

ข้อความ

- ▶ **แสดงข้อมูล:** คุณสามารถดูข้อมูลของข้อความที่เลือกเช่นหัวข้อเรื่อง( เฉพาะข้อความมัลติมีเดีย), วันที่และเวลาที่บันทึก, ประเภทและ ขนาดของข้อความ, ลำดับความสำคัญ (เฉพาะข้อความมัลติมีเดีย)
- ▶ **ลบทั้งหมด:** ลบข้อความทั้งหมดออกจากโฟลเดอร์ของข้อความร่าง

## ฟังข้อความเสียง

เมนู 1.6

เมนูนี้ช่วยให้คุณเข้าใช้ระบบฝากข้อความเสียงของคุณได้สะดวกรวดเร็ว (หากระบบเครือข่ายของคุณมีบริการนี้) ก่อนใช้คุณสมบัตินี้คุณต้องป้อนหมายเลขของเซิร์ฟเวอร์ข้อความเสียงที่คุณได้รับจากผู้ให้บริการระบบเมื่อคุณได้รับข้อความเสียงข้อความใหม่สัญลักษณ์ ☎ จะปรากฏขึ้นบนหน้าจอโปรดตรวจสอบรายละเอียดการให้บริการกับผู้ให้บริการของคุณ เพื่อตั้งค่าเครื่องโทรศัพท์ให้เหมาะสม

## บริการข้อมูล

เมนู 1.7

ข้อความบริการข้อมูล คือข้อความชนิดตัวอักษรที่เครือข่ายส่งไปยังระบบ GSM ข้อความนี้ให้ข้อมูลทั่วไปเกี่ยวกับรายงานสภาพอากาศ รายงานสภาพการจราจร บริการแท็กซี่ การแพทย์ และราคาหุ้น แต่ละประเภทของข้อมูลจะมีหมายเลขกำกับอยู่ด้วยคุณจึงสามารถติดต่อผู้ให้บริการได้หากคุณป้อนหมายเลขนั้นๆสำหรับขอข้อมูลเมื่อคุณได้รับข้อความบริการข้อมูล คุณจะเห็นข้อความแสดงที่หน้าจอเพื่อแจ้งให้ทราบว่า คุณได้รับข้อความหนึ่ง หรือเครื่องอาจแสดงข้อความนั้นที่หน้าจอโดยตรง ในการอ่านข้อความนั้นอีกครั้งหรือในกรณีที่เครื่องไม่อยู่ในโหมดสแตนด์บายให้ทำตามขั้นตอนดังต่อไปนี้


## อ่าน

(เมนู 1.7.1)

เมื่อคุณได้รับข้อความบริการข้อมูล แล้วเลือก อ่าน เพื่ออ่านข้อความ เครื่องจะแสดงข้อความดังกล่าวที่หน้าจอ คุณสามารถอ่านข้อความอื่นๆ ได้ด้วยการเลื่อนดโดยใช้นิ้ว (← หรือ →) หรือ ☞ [ต่อไป]

## หัวข้อ

(เมนู 1.7.2)

- ▶ **เพิ่ม:** คุณสามารถเพิ่มหมายเลขของข้อความบริการขอมูลลงในหน่วยความจำของโทรศัพท์พร้อมทั้งซ็อยอได้
- ▶ **แสดงรายการ:** คุณสามารถดูหมายเลขของข้อความบริการขอมูลที่คุณเพิ่มเข้าไปไดหากคุณกดปุ่ม  [ตัวเลือก]
- ▶ **รายการที่ใช้งาน:** คุณสามารถเลือกหมายเลขข้อความบริการขอมูลในรายการที่ใช้งานได้หากคุณใช้หมายเลขบริการขอมูลหนึ่ง คุณจะได้รับข้อความที่ส่งจากหมายเลขดังกล่าว

## ข้อความอัตโนมัติ

เมนู 1.8

หลังจากสร้างแบบข้อความแล้ว (ข้อความ, มัลติมีเดีย, ลายเซ็น) คุณสามารถใช้ได้ โดยการเลือก แบบข้อความนั้นเมื่อคุณส่งข้อความ

## แบบข้อความ

(เมนู 1.8.1)

แบบข้อความที่กำหนดไว้ล่วงหน้ามีดังต่อไปนี้

- **กรุณาโทรกลับฉันด้วย**

- **ฉันไปสาย จะไปถึงเวลา...**

- **ตอนนี้คุณอยู่ที่ไหน ?**

- **ฉันกำลังเดินทาง**

- **ด่วนมาก กรุณาติดต่อกลับ**

- **ฉันรักคุณ**

ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้

- ▶ **ดู:** เลือกตัวเลือกนี้เพื่อดูแบบข้อความที่เลือก

- ▶ **แก้ไข:** เพื่อแก้ไขแบบข้อความที่เลือกไว้

- ▶ **เขียนข้อความ**

- **เขียนข้อความตัวอักษร:** ใช้ตัวเลือกนี้เพื่อส่งข้อความตามแบบข้อความที่เลือกโดยใช้ SMS

- **เขียนข้อความมัลติมีเดีย:** ใช้ตัวเลือกนี้เพื่อส่งข้อความในข้อความอัตโนมัติที่เลือกโดยใช้ MMS

- ▶ **เพิ่มใหม่:** ใช้ตัวเลือกนี้เพื่อสร้างข้อความอัตโนมัติใหม่

## ข้อความ

- ▶ **ลบ:** ลบแบบข้อความที่เลือกออกจากรายการแบบข้อความตัวอักษร
- ▶ **ลบทั้งหมด:** ลบข้อความทั้งหมด

### แบบข้อความมัลติมีเดีย (เมนู 1.8.2)

คุณสามารถจัดทำแบบข้อความมัลติมีเดียหลังกดปุ่มเลือกซ้าย[เพิ่มใหม่]และแบบข้อความมัลติมีเดียที่คุณบันทึกไว้เป็นแบบข้อความ ขณะที่จัดทำข้อความมัลติมีเดียใน เขียนข้อความมัลติมีเดีย (โปรดดูหน้า 33)

- ▶ **ดู:** คุณสามารถดูแบบข้อความมัลติมีเดีย
- ▶ **แก้ไข:** คุณสามารถแก้ไขแบบข้อความมัลติมีเดีย
- ▶ **เพิ่มใหม่:** ให้คุณเพิ่มแบบข้อความมัลติมีเดียใหม่ได้
- ▶ **เขียนข้อความ:** คุณสามารถเขียนข้อความมัลติมีเดียโดยใช้แบบข้อความมัลติมีเดีย
- ▶ **ลบ:** ลบข้อความตามแบบข้อความที่เลือกจากรายการแบบข้อความมัลติมีเดีย
- ▶ **ลบทั้งหมด:** ลบรายการข้อความมัลติมีเดีย

## นามบัตร

(เมนู 1.8.3)

1. กดปุ่มเลือกซ้าย [แก้ไข].
2. หลังจากป้อนชื่อแล้วกดปุ่มเลือกซ้าย[ตกลง]
3. ป้อนหมายเลขโทรศัพท์เคลื่อนที่ หมายเลขโทรศัพท์ที่บ้าน หมายเลขโทรศัพท์ที่ทำงาน หมายเลขแฟกซ์ และที่อยู่อีเมล
4. กดปุ่มเลือกซ้าย [บันทึก].

หลังจากสร้างแบบลายเซ็นคุณสามารถเข้าใช้เมนูต่อไปนี้ได้โดยการกดปุ่มเลือกซ้าย [ตัวเลือก]

- ▶ **แก้ไข:** ใช้เพื่อแก้ไขนามบัตร
- ▶ **เขียนข้อความ:** คุณสามารถส่งนามบัตรผ่านทาง SMS, MMS หรือ บูลทูธ
- ▶ **ลบ:** ใช้เพื่อลบนามบัตร

## การตั้งค่า

เมนู 1.9

### เขียนข้อความ

(เมนู 1.9.1)

- ▶ **รูปแบบข้อความ:** ตัวอักษร, เสียง, แฟกซ์, Natl, paging, X400,

## อีเมล, ERMES

โดยปกติ ประเภทข้อความที่ใช้งานจะตั้งค่าเป็นตัวอักษร แต่คุณสามารถเปลี่ยนข้อความให้เป็นรูปแบบอื่นได้ โปรดติดต่อผู้ให้บริการระบบของคุณเกี่ยวกับการให้บริการฟังก์ชันดังกล่าว

- ▶ **อายุข้อความ:** บริการของเครือข่ายนี้ให้คุณกำหนดระยะเวลาที่คุณต้องการให้เก็บข้อความต่างๆ ไว้ในศูนย์รับฝากข้อความ
- ▶ **รายงานสถานะ:** หากคุณตั้งค่าที่ ตกลง คุณจะสามารถตรวจสอบว่าข้อความส่งถึงผู้รับหรือไม่
- ▶ **ชำระค่าตอบกลับให้ปลายทาง:** เมื่อมีการส่งข้อความ ผู้รับสามารถตอบกลับและให้คิดค่าใช้จ่ายในการตอบกลับลงในใบแจ้งหนี้ค่าโทรศัพท์ของคุณได้
- ▶ **ศูนย์ SMS:** หากต้องการส่งข้อความแบบตัวอักษร คุณสามารถใช้เมนูนี้หาที่อยู่ของศูนย์ SMS ได้

## เขียนข้อความมัลติมีเดีย (เมนู 1.9.2)

- ▶ **ลำดับความสำคัญ:** คุณสามารถส่งข้อความหลังจากกำหนดลำดับความสำคัญของข้อความซึ่ง

ประกอบด้วย ต่ำ, ปกติ, สูง

- ▶ **อายุข้อความ:** บริการของเครือข่ายนี้ให้คุณกำหนดระยะเวลาที่คุณต้องการให้เก็บข้อความต่างๆ ไว้ในศูนย์รับฝากข้อความ
- ▶ **รายงานสถานะ:** หากคุณตั้งค่าที่ ตกลง คุณจะสามารถตรวจสอบว่าข้อความส่งถึงผู้รับหรือไม่
- ▶ **ดาวนโหลดอัตโนมัติ**

**เปิด:** ดาวนโหลดข้อความโดยอัตโนมัติเมื่อรับข้อความ

**ปิด:** ต้องได้รับคำยืนยันจากคุณก่อนว่าคุณต้องการดาวนโหลดข้อความ

**เฉพาะเครือข่ายในพื้นที่:** หากคุณเลือกตัวเล็อกนี้ข้อความจะถูกดาวนโหลดอัตโนมัติเมื่อได้รับในพื้นที่บริการเครือข่ายของคุณ หากอยู่นอกพื้นที่บริการเครือข่ายของคุณ คุณต้องยืนยันว่าต้องการดาวนโหลดข้อความหรือไม่

- ▶ **การตั้งค่าเครือข่าย:** ในการดาวนโหลด MMS จากเซิร์ฟเวอร์ คุณต้องตั้งค่าการเชื่อมต่อขอข้อมูล CSD หรือ GPRS เสียก่อนหากคุณเลือกเซิร์ฟเวอร์ข้อความมัลติมีเดีย คุณสามารถตั้งค่า URL ของเซิร์ฟเวอร์ข้อความมัลติมีเดียได้คุณสามารถตั้งค่าการใช้ได้ถึง 5 คาสำหรับเชื่อมต่อเพื่อใช้บริการ

# ข้อความ

ข้อความ

## ▶ ชนิดข้อความที่ใช้

- ส่วนตัว: ข้อความส่วนบุคคล
- ข้อความโฆษณา: ข้อความโฆษณา
- ข้อมูล: ข้อมูลที่จำเป็น

## ศูนย์ข้อความเสียง

(เมนู 1.9.3)

คุณสามารถรับข้อความเสียงได้หากว่าผู้ให้บริการระบบเครือข่ายของคุณให้บริการดังกล่าวเมื่อมีข้อความ ข้อความเสียงใหม่มาถึงคุณเครื่องจะแสดงสัญลักษณ์บนหน้าจอโปรดตรวจสอบรายละเอียดการให้บริการ กับผู้ให้บริการระบบเครือข่ายของคุณเพื่อทำการตั้งค่าเครื่องโทรศัพท์ให้เหมาะสมกับการใช้งาน

1. กดปุ่ม  ค้างไว้ในขณะที่เครื่องอยู่ในโหมดสแตนด์บาย

2. คุณสามารถดูรายการเมนูย่อยต่อไปนี้ได้

- ▶ โสม: คุณสามารถฟังเสียง ข้อความเสียงได้โดยเลือก โสม
- ▶ การโรมมิ่ง: แม้ขณะเดินทางไปยังต่างประเทศ คุณยังสามารถฟังข้อความเสียงได้หากระบบเครือข่ายของคุณมีการให้บริการโรมมิ่ง

## บริการข้อมูล

(เมนู 1.9.4)

(ขึ้นอยู่กับเครือข่ายและการสมัครขอรับบริการ)

### ▶ ได้รับ

- **ตกลง:** หากคุณเลือกเมนูนี้ โทรศัพท์ของคุณจะได้รับข้อความบริการข้อมูล
- **ไม่ตกลง:** หากคุณเลือกเมนูนี้ โทรศัพท์ของคุณจะไม่สามารถรับข้อความบริการข้อมูลได้อีก

### ▶ การแจ้งเตือน

- **ตกลง:** โทรศัพท์ของคุณจะมีเสียงเตือนเมื่อคุณได้รับหมายเลขข้อความบริการข้อมูล
- **ไม่ตกลง:** โทรศัพท์ของคุณจะไม่มีเสียงเตือนแม้คุณจะได้รับข้อความบริการข้อมูลก็ตาม

### ▶ ภาษา

- คุณสามารถเลือกภาษาที่ต้องการด้วยการกดปุ่ม [ตกลง/ปิด] จากนั้นข้อความบริการข้อมูลจะแสดงในภาษาที่คุณได้เลือกไว้

## ใส่ข้อความ

(เมนู 1.9.5)

คุณสามารถตั้งค่าตัวเลือกว่าจะรับข้อความหรือไม่

# ข้อมูลการโทร

คุณสามารถบันทึกของสายที่ไม่ได้รับ สายที่รับและสายโทรออกได้ หากว่าเครือข่ายสนับสนุนการแสดงหมายเลขโทรเข้า (Calling Line Identification: CLI) ในพื้นที่ให้บริการ

ชื่อและหมายเลข (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และเวลาที่มีการโทรนั้นและคุณยังสามารถดูเวลาที่ใช้สายได้ด้วย

## เบอร์ที่ไม่ได้รับ

เมนู 2.1

ตัวเลือกนี้ช่วยให้คุณดูหมายเลขที่ไม่ได้รับสาย 10 รายการล่าสุดได้ และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออก หรือบันทึกไว้ในรายชื่อ
- ▶ ป้อนชื่อใหม่สำหรับหมายเลขและบันทึกไว้ในรายชื่อ
- ▶ ส่งข้อความไปยังหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

### หมายเหตุ

- ▶ คุณสามารถลบข้อมูลของสายที่โทรทั้งหมดออกจากรายการโดยใช้เมนู ลบรายการโทร (เมนู 2.4)

## เบอร์ที่ได้รับ

เมนู 2.2

ตัวเลือกนี้ช่วยให้คุณดูหมายเลขเรียกเข้า 10 รายการล่าสุดได้ และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออกหรือบันทึกไว้ในรายชื่อ
- ▶ ป้อนชื่อใหม่สำหรับหมายเลข และบันทึกไว้ในรายชื่อ
- ▶ ส่งข้อความไปยังหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

## เบอร์ที่โทรออก

เมนู 2.3

ตัวเลือกนี้ช่วยให้คุณดูสายที่โทรออก (ที่โทรออกหรือพยายามโทรออก) 20สายล่าสุดได้และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออก หรือบันทึกไว้ในรายชื่อ
- ▶ ป้อนชื่อใหม่สำหรับหมายเลข และบันทึกไว้ในรายชื่อ
- ▶ ส่งข้อความไปยังหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

# ข้อมูลการโทร

## ลบเบอร์ในรายการ

เมนู 2.4

ใช้เมนูนี้เพื่อลบรายการสายที่ไม่ได้รับรายการสายที่ได้รับหรือรายการสายที่โทรออกและคุณสามารถลบรายการโทรทั้งหมดในขณะนั้นได้โดยเลือกทุกสาย

## เวลาและค่าโทร

เมนู 2.5

### เวลาที่โทร

(เมนู 2.5.1)

ช่วยให้คุณสามารถดูระยะเวลาของสายที่โทรเข้าและโทรออกได้ คุณสามารถรีเซ็ตตัวนับเวลาการโทร โดยการเลือกรีเซ็ตทั้งหมดในการป้องกันการรีเซ็ตโดยไม่ตั้งใจโทรศัพท์จะขอให้คุณยืนยันการดำเนินการ การนี้อีกครั้ง

- ▶ **โทรครั้งล่าสุด:** ระยะเวลาของการโทรครั้งล่าสุด
- ▶ **ทุกสาย:** ระยะเวลารวมของการโทรออกและสายเรียกเข้าทั้งหมด นับตั้งแต่รีเซ็ตเวลาครั้งล่าสุด
- ▶ **เบอร์ที่ได้รับ:** ระยะเวลาของการโทรเข้า
- ▶ **เบอร์ที่โทรออก:** ระยะเวลาของการโทรออก
- ▶ **รีเซ็ตทั้งหมด:** รีเซ็ตตัวนับเวลาการโทร

## แสดงค่าโทร

(เมนู 2.5.2)

ช่วยให้คุณสามารถตรวจสอบค่าโทรครั้งสุดท้าย ค่าโทรทั้งหมด ค่าที่เหลือ และรีเซ็ตค่าโทรได้ คุณต้องใส่รหัส PIN2 ในการรีเซ็ตค่าใช้จ่ายในการโทร

## การตั้งค่าการโทร

(เมนู 2.5.3)

(ขึ้นอยู่กับซิมการ์ด)

- ▶ **แสดงอัตราค่าบริการ:** คุณสามารถตั้งค่าประเภทสกุลเงินและราคาต่อหน่วยได้ โปรดติดต่อผู้ให้บริการระบบของคุณเพื่อขอทราบค่าใช้จ่ายต่อหน่วย คุณต้องใส่รหัส PIN2 ในการเลือกสกุลเงินหรือหน่วยในเมนูนี้
- ▶ **ตั้งค่าเครดิต:** บริการเครือข่ายนี้ให้คุณจำกัดค่าโทรของคุณด้วยจำนวนหน่วยการโทรที่เลือกไว้หากคุณเลือก **อาน** เครื่องจะแสดงจำนวนหน่วยการโทรที่เหลืออยู่หากคุณเลือก **เปลี่ยน** คุณจะสามารเปลี่ยนจำนวนหน่วยของการจำกัดการโทรของคุณได้
- ▶ **แสดงอัตราเงิน:** บริการเครือข่ายนี้ให้คุณดูค่าโทรครั้งล่าสุดของคุณได้โดยอัตโนมัติ หากตั้งค่าที่ **ตกลง** คุณสามารถดูค่าโทรครั้งล่าสุดได้เมื่อวางสาย

## ข้อมูล GPRS

เมนู 2.6

คุณสามารถตรวจสอบจำนวนข้อมูลที่โอนถ่ายผ่านทางเครือข่ายด้วยระบบ GPRS และยังสามารถดูระยะเวลาทั้งหมดที่คุณออนไลน์ได้

## เวลาที่โทร

(เมนู 2.6.1)

คุณสามารถตรวจสอบระยะเวลาการโทรของการโทรครั้งล่าสุด (Last call) และการโทรทั้งหมด (All calls) และยังสามารถรีเซ็ตเครื่องจับเวลาการโทรได้ใหม่อีกด้วย

## ขนาดข้อมูล

(เมนู 2.6.2)

คุณสามารถตรวจสอบข้อมูลในเมนู ส่งแล้ว, รับแล้ว, ทั้งหมด, รีเซ็ตทั้งหมด

# รูปแบบเสียง

ในรูปแบบเสียง คุณสามารถปรับเปลี่ยนและปรับแต่งเสียงสัญญาณของโทรศัพท์ให้เหมาะสมกับเหตุการณ์ สภาพแวดล้อมหรือกลุ่มผู้โทรที่แตกต่างกันได้ **รูปแบบที่ตั้งไว้ล่วงหน้ามี 6 รูปแบบ คือ สั้น เตือนอย่างเดียว, สถานที่เงียบ, สถานที่ทั่วไป, สถานที่อีกที, เมื่อใช้ชุดหูฟัง และรถยนต์** โดยคุณสามารถปรับแต่งรูปแบบแต่ละรูปแบบได้

กดปุ่มเลือกซ้าย [เมนู] และเลือก โฟรไฟล์ โดยปุ่มบนาวีเกิดซ้าย/ขวา

## การเปลี่ยนรูปแบบ

เมน 3.X.1

1. รายการรูปแบบจะปรากฏขึ้น
2. ในรายการรูปแบบ ให้เลื่อนไปยังรูปแบบที่คุณต้องการใช้ และกดปุ่มเลือกซ้าย [เลือก] หรือปุ่ม ดกลง
3. จากนั้น เลือก เปิดทำงาน

### หมายเหตุ

- ▶ เมื่อต่อชุดหูฟังเข้ากับโทรศัพท์ รูปแบบชุดหูฟังจะได้รับการเปิดใช้โดยอัตโนมัติ

## การปรับแต่งรูปแบบ – กำหนดเอง

เมน 3.X.2

คุณสามารถปรับแต่งรูปแบบได้ ยกเว้นรูปแบบสั้น เตือนอย่างเดียวให้เลื่อนไปยังรูปแบบที่ต้องการ ในรายการรูปแบบ หลังจากกดปุ่มเลือกซ้ายหรือปุ่ม ดกลง ให้เลือก กำหนดเอง ตัวเลือกการตั้งค่ารูปแบบจะเปิดขึ้น ตั้งค่าตัวเลือกตามต้องการ

- ▶ **รูปแบบเตือนเมื่อมีสายเข้า:** ตั้งชนิดการเตือนเมื่อมีสายเรียกเข้า
- ▶ **เสียงกริ่งต่างๆ:** เลือกเสียงเรียกเข้าที่ต้องการจากรายการ
- ▶ **ระดับเสียงกริ่ง:** ตั้งระดับเสียงของเสียงเรียกเข้า
- ▶ **รูปแบบเตือนเมื่อข้อความเข้า:** ตั้งประเภทการเตือนสำหรับการรับข้อความ
- ▶ **รายการเสียงกริ่ง กรณีข้อความเข้า:** เลือกเสียงเตือนสำหรับการรับข้อความ
- ▶ **ระดับเสียงปุ่มกด:** ตั้งระดับเสียงของเสียงปุ่มกด
- ▶ **รายการเสียงปุ่มกด:** เลือกเสียงปุ่มกดที่ต้องการ

- ▶ **เสียงโทนเปิดฝาพับ:** ตั้งชนิดของเสียงเมื่อเปิดฝาพับเพื่อให้เหมาะสมกับสภาพแวดล้อม
- ▶ **ระดับเสียง เอฟเฟกต์:** ตั้งระดับเสียงของเสียงเอฟเฟกต์
- ▶ **ระดับเสียงเปิด/ ปิดเครื่อง:** ตั้งระดับเสียงที่ต้องการของเสียงขณะเปิดหรือปิดเครื่อง
- ▶ **รับสายอัตโนมัติ:** คุณสามารถใช้ฟังก์ชันนี้ได้เฉพาะเมื่อต่อชุดหูฟังเข้ากับโทรศัพท์แล้วเท่านั้น
  - **ปิด:** โทรศัพท์จะไม่ใช้การรับสายอัตโนมัติ.
  - **หลังจาก 5 วินาที:** เครื่องจะรับสายโดยอัตโนมัติหลังจากตั้ง 5 วินาที
  - **หลังจาก 10 วินาที:** เครื่องจะรับสายโดยอัตโนมัติหลังจากตั้ง 10 วินาที

## การปรับแต่งรูปแบบ – เปลี่ยนชื่อ

เมน 3.X.3

คุณสามารถเปลี่ยนชื่อรูปแบบ และกำหนดชื่ออื่นได้ตามต้องการ

### หมายเหตุ

- ▶ **คุณจะไม่เปลี่ยนชื่อรูปแบบ ส่วนเดือนอย่างเดียว, เมื่อใช้ชุดหูฟัง และ รถยนต์ ไม่ได**
1. เมื่อต้องการเปลี่ยนชื่อของรูปแบบ ให้เลื่อนไปยังรูปแบบในรายการรูปแบบ และเมื่อกดปุ่ม ดกลง หรือปุ่มเลือกซ้ายแล้ว ให้เลือก เปลี่ยนชื่อ
  2. ป้อนชื่อที่ต้องการและกดปุ่ม ดกลง หรือ ปุ่มเลือกซ้าย [ดกลง]

# การตั้งค่า

คุณสามารถตั้งค่าเมนูดังต่อไปนี้ ตามความสะดวกและความชอบของคุณเอง

## วันที่และเวลา

(เมนู 4.1)

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

## ตั้งวันที่

(เมนู 4.1.1)

คุณสามารถป้อนวันที่ปัจจุบันได้

## รูปแบบวันที่

(เมนู 4.1.2)

คุณสามารถตั้งรูปแบบวันที่ เช่น DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD (D: วันที่ / M: เดือน / Y: ปี)

## ตั้งเวลา

(เมนู 4.1.3)

คุณสามารถป้อนเวลาปัจจุบันได้

## รูปแบบเวลา

(เมนู 4.1.4)

คุณสามารถเลือกรูปแบบเวลาเป็น 12 ชั่วโมง

หรือ 24 ชั่วโมง

## ตั้งค่าโทรศัพท์

(เมนู 4.2)

คุณสามารถตั้งค่าฟังก์ชันต่างๆ ที่เกี่ยวข้องกับโทรศัพท์

## วอลล์เปเปอร์

(เมนู 4.2.1)

คุณสามารถเลือกภาพพื้นหลังในโหมดสแตนด์บาย

- **รูปภาพเริ่มต้น:** คุณสามารถเลือกภาพหรือภาพเคลื่อนไหวสำหรับเป็นวอลล์เปเปอร์ได้ โดยการกดปุ่ม (← หรือปุ่ม →)
- **รูปภาพของฉัน:** คุณสามารถเลือกภาพหรือภาพเคลื่อนไหวสำหรับเป็นวอลล์เปเปอร์

## ข้อความทักทาย

(เมนู 4.2.2)

หากคุณเลือก **ตกลง** คุณสามารถแก้ไขข้อความที่แสดงในโหมดสแตนด์บายได้

## ภาษา (เมนู 4.2.3)

คุณสามารถเปลี่ยนภาษาของข้อความที่ใช่แสดงบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมด ภาษา ด้วย

## แสงไฟ (เมนู 4.2.4)

คุณสามารถตั้งระยะเวลาการเปิดไฟหน้าจอลงในได

## ปรับความเข้มหน้าจอ (เมนู 4.2.5)

คุณสามารถตั้งค่าความสว่างของหน้าจอ LCD ได้ด้วยการกดปุ่ม ( $\llcorner$ ,  $\triangleright$ ).

## หน้าต่างแสดงสถานะ (เมนู 4.2.6)

คุณสามารถตรวจสอบสถานะปัจจุบันของเมนู ที่เลือกได้ก่อนที่จะเปิดเมนูนั้น สถานะดังกล่าวจะแสดงที่ด้านล่างของหน้าจอ

## สีของเมนู (เมนู 4.2.7)

คุณสามารถเลือกสีของเมนูซึ่งมีอยู่หลากหลาย

สีได้ตามต้องการ

## ไฟแสดงสัญญาณ (เมนู 4.2.8)

เมื่อตั้งค่าไฟ LED ที่ เปิด ไฟดังกล่าวจะกะพริบเมื่อใช้บริการนั้นได้

## ชื่อเครือข่าย (เมนู 4.2.9)

หากคุณเลือกเป็นเปิดใช้ คุณจะเห็นชื่อผู้ให้บริการเครือข่ายปรากฏบนจอในขณะที่เครื่องอยู่ในโหมดสแตนด์บาย

## ตั้งค่าการโทร (เมนู 4.3)

คุณสามารถตั้งเมนูที่เกี่ยวข้องกับการโทรด้วยการกดปุ่ม  $\odot$  [เลือก] ในเมนูการตั้งค่า

## การโอนสาย (เมนู 4.3.1)

บริการ การโอนสาย ให้คุณโอนสายเรียกเข้าทั้งจากสายโทรศัพท์, แฟกซ์หรือสายที่โทรเขาเพื่อส่งขอมูลไปยังหมายเลขอื่นใด โปรดติดต่อผู้ให้บริการระบบของคุณเพื่อขอทราบรายละเอียด

# การตั้งค่า

- ▶ **สายสนทนาทั้งหมด:** โอนสายเรียกเข้าทุกสาย
- ▶ **เมื่อสายไม่ว่าง:** โอนสายเมื่อคุณใช้โทรศัพท์ทอยู่
- ▶ **เมื่อไม่รับสาย:** โอนสายที่คุณไม่ได้รับ
- ▶ **เมื่อติดต่อไม่ได้:** โอนสายเมื่อปิดเครื่องหรืออยู่นอกพื้นที่การให้บริการ
- ▶ **สายข้อมูลทั้งหมด:** โอนสายโทรเข้าเพื่อส่งข้อมูลทุกสายไปยังหมายเลขที่มีการเชื่อมต่อกับเครื่องคอมพิวเตอร์
- ▶ **สายแฟกซ์ทั้งหมด:** โอนสายแฟกซ์ทุกสายไปยังหมายเลขที่มีการเชื่อมต่อกับเครื่องแฟกซ์
- ▶ **ยกเลิกการโอนสายทั้งหมด:** ยกเลิกบริการโอนสายทั้งหมดนี้

## เมนูย่อย

เมนู การโอนสาย มีเมนูย่อยดังต่อไปนี้



- ▶ **เปิดใช้งาน:** เพื่อใช้งานบริการที่เกี่ยวข้อง
  - **ฝากข้อความเสียง:** โอนสายไปที่ศูนย์รับฝากข้อความฟังกันนี้ไม่มีในเมนูสายข้อมูลทั้งหมด และ สายแฟกซ์ทั้งหมด
  - **หมายเลขอื่นๆ:** สำหรับบ่อนหมายเลขที่ใช้

ในการโอนสาย

- **ส่วนตัว;** ใช้สำหรับเลือกหมายเลขที่ใช้โอนสายไปลาสต์ 5 หมายเลข
- ▶ **ยกเลิก:** เลิกใช้งานบริการที่เกี่ยวข้อง
- ▶ **แสดงสถานะ:** ตรวจสอบสถานะของบริการที่เกี่ยวข้อง

## รูปแบบการรับสาย

(เมนู 4.3.2)

- ▶ **เปิดฝาพับ:** หากเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการเปิดฝาพับเท่านั้น
- ▶ **รับสายได้ทุกปุ่ม:** หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่มใดก็ได้โดยก เว้นปุ่ม  [วางสาย]
- ▶ **ปุ่มส่งอย่างเดียว:** หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่ม  [โทรออก] เท่านั้น

## ส่งหมายเลขตัวเอง (เมนู 4.3.3)

(ขึ้นอยู่กับเครือข่ายและการสมัครรับบริการ)

- ▶ **ตกลง:** คุณสามารถส่งหมายเลขโทรศัพท์ของคุณไปยังผู้รับ โดยหมายเลขของคุณจะแสดงที่เครื่องโทรศัพท์ของผู้รับสาย
- ▶ **ยกเลิก:** จะไม่มีการแสดงหมายเลขโทรศัพท์ของคุณ
- ▶ **ตั้งค่าโดยเครือข่าย:** หากเลือกตัวเลือกนี้การที่คุณจะสามารถส่งหมายเลขโทรศัพท์ของคุณได้หรือไม่ขึ้นอยู่กับบริการของสายโทรศัพท์ 2 สายที่ให้บริการอยู่ เช่น สาย 1 หรือสาย 2

## สายเรียกซ้อน (เมนู 4.3.4)

(ขึ้นอยู่กับเครือข่าย)

ระบบเครือข่ายจะแจ้งให้คุณทราบว่า มีสายเรียกเข้าสายใหม่ ขณะที่คุณกำลังใช้สายสนทนาอยู่ เลือก เปิดใช้งาน เพื่อขอให้ระบบเครือข่ายเปิดใช้งานบริการสายเรียกซ้อน เลือกยกเลิกเพื่อขอให้ระบบเครือข่าย ยกเลิกการใช้งานบริการสายเรียกซ้อน หรือเลือก ตรวจสอบสถานะเพื่อตรวจสอบว่ามีการใช้งานฟังก์ชันหรือไม่

## เตือนทุกนาที (เมนู 4.3.5)

หากเลือกตกลงคุณสามารถตรวจสอบระยะเวลาการโทรด้วยเสียงเตือนที่ตั้งทุก 1 นาทีในระหว่างการโทร

## โทรซ้ำอัตโนมัติ (เมนู 4.3.6)

- ▶ **เปิด:** เมื่อใช้งานฟังก์ชันนี้ เครื่องจะพยายามหมุนวนหมายเลขที่โทรไม่ติดโดยอัตโนมัติ
- ▶ **ปิด:** เครื่องจะไม่หมุนวนหมายเลขซ้ำเมื่อไม่สามารถต่อสายนั้นได้ในครั้งแรก

## กลุ่มคนสนิท (เมนู 4.3.7)

(ขึ้นอยู่กับเครือข่าย)

จำกัดการโทรออกเฉพาะหมายเลขที่อยู่ในกลุ่มผู้ใช้งานกลุ่มเท่านั้นหากคุณใส่ฟังก์ชันนี้สายโทรออกทุกสายจะต้องอยู่ในดัชนีกลุ่มใดกลุ่มหนึ่ง หากมีการระบุดัชนีกลุ่ม ระบบจะใส่ดัชนีกลุ่มนั้นกับสายโทรออกทั้งหมด หากไม่มีการระบุดัชนีกลุ่ม เครือข่ายจะใส่ดัชนีตามที่ตั้งค่าไว้ (ค่าดัชนีเฉพาะที่เก็บไว้ในเครือข่าย)

- ▶ **ค่าที่ตั้งไว้:** ใช้กลุ่มที่ได้กำหนดไว้แล้วซึ่งได้

# การตั้งค่า

- ตกลงไว้กับผู้ให้บริการเครือข่าย
- ▶ **ตั้งค่า:** ใช้ตั้งค่าดัชนี CUG ที่เลือกไว้
- ▶ **แก้ไข:** ใช้แก้ไขชื่อ CUG และดัชนี CUG
- ▶ **ลบ:** ใช้ลบ CUG ที่เลือกไว้
- ▶ **ลบทั้งหมด:** ใช้ลบ CUG ทั้งหมด


## ตั้งค่าระบบป้องกัน

เมนู 4.4

### ใส่รหัส PIN

(เมนู 4.4.1)

ในเมนูนี้ คุณสามารถตั้งค่าโทรศัพท์ให้ถามรหัส PIN ของซิมการ์ดของคุณเมื่อเปิดใช้เครื่องโทรศัพท์ หากเปิดใช้งานฟังก์ชันนี้แล้ว เครื่องจะขอให้คุณป้อนรหัส PIN

1. เลือกให้ป้อนรหัส PIN ในเมนูตั้งค่าการรักษาความปลอดภัย แล้วกดปุ่ม  [เลือก]
2. ตั้งค่า **ตกลง/ปิด**
3. หากคุณต้องการเปลี่ยนแปลง การตั้งค่าดังกล่าวคุณต้องป้อนรหัส PIN เมื่อคุณเปิดเครื่อง
4. หากคุณป้อนรหัส PIN ผิดเกิน 3 ครั้ง เครื่องจะล็อก หาก PIN ถูกล็อกแล้ว คุณจะต้องใช้

รหัส PUK ปลดล็อก

5. โดยคุณสามารถป้อนรหัส PUK ได้ถึง 10 ครั้ง หากคุณป้อนรหัส PUK ผิดเกิน 10 ครั้ง คุณจะไม่สามารถปลดล็อกเครื่องโทรศัพท์ของคุณได้และต้องติดต่อผู้ให้บริการของคุณเพื่อแก้ไขปัญหาดังกล่าว

## ล็อกเครื่อง

(เมนู 4.4.2)

คุณสามารถใช้รหัสรักษาความปลอดภัย เพื่อป้องกันการใช้โทรศัพท์ของคุณ โดยไม่ได้รับอนุญาตเมื่อคุณเปิดเครื่องคุณจะต้องป้อนรหัสรักษาความปลอดภัยหากคุณได้ตั้งค่าการล็อกเครื่องที่ตกลงหากคุณตั้งค่าการล็อกเครื่องที่ **อัตโนมัติ** เครื่องจะให้คุณป้อนรหัสรักษาความปลอดภัยเฉพาะเมื่อคุณเปลี่ยนซิมการ์ดเท่านั้น

## ป้องกันการโทร

(เมนู 4.4.3)

บริการป้องกันการโทร จะป้องกันไม่ให้เครื่องโทรศัพท์ของคุณโทรออก หรือ รับสายบางประเภทได้ ฟังก์ชันนี้ต้องใช้รหัสการจำกัดการโทร คุณสามารถดูรายการเมนูย่อยต่อไปนี้ได้

- ▶ **สายออกทั้งหมด**

- บริการจำกัดการโทรของสายโทรออกทั้งหมด
- ▶ **ไม่ให้โทรออกต่างประเทศ**  
บริการจำกัดการโทรของสายโทรออกต่างประเทศทั้งหมด
  - ▶ **โทรออกได้เฉพาะต่างประเทศ**  
บริการจำกัดการโทรของสายโทรออกต่างประเทศทั้งหมด ยกเว้นเครือข่ายในประเทศของตน
  - ▶ **ไม่รับสายทั้งหมด**  
บริการจำกัดการโทรของสายโทรเข้าทั้งหมด
  - ▶ **ไม่รับสายเมื่ออยู่ต่างประเทศ**  
บริการจำกัดการโทรของสายโทรเข้าทั้งหมด เมื่อใช้การโรมมิ่ง
  - ▶ **ยกเลิกทั้งหมด**  
คุณสามารถยกเลิกบริการจำกัดการโทรทั้งหมดได้
  - ▶ **เปลี่ยนรหัสผ่าน**  
คุณสามารถเปลี่ยนรหัสผ่านสำหรับบริการจำกัดการโทรได้

เมนูป้องกันการโทร แต่ละเมนูจะมีเมนูย่อย ดังนี้:

- **เปิดทำงาน**  
คุณสามารถขอให้เครือข่ายตั้งค่าการจำกัดการโทรได้
- **ยกเลิก**  
ยกเลิกการตั้งค่าการจำกัดการโทร
- **แสดงสถานะ**  
ดูสถานะของเครื่องว่ามีการจำกัดการโทรหรือไม่

## เบอร์โทรที่กำหนด (ขึ้นอยู่กับซิม)

(เมนู 4.4.4)


คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้ หมายเลขเหล่านั้นจะได้รับการป้องกันไว้ด้วยรหัส PIN2

- ▶ **เปิดทำงาน:** คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้
- ▶ **ยกเลิก:** ยกเลิกการใช้ฟังก์ชันการจำกัดหมายเลขโทรออก
- ▶ **รายการหมายเลข:** คุณสามารถดูสถานะของเครื่องว่ามี การจำกัดการโทรหรือไม่

## เปลี่ยนรหัส

(เมนู 4.4.5)

PIN ย่อมาจาก Personal Identification Number เป็นรหัสที่ใช้ในการป้องกันการใช้โทรศัพท์โดยไม่ได้รับอนุญาต คุณสามารถเปลี่ยนรหัสผ่านต่อไปนี้ได้: รหัส PIN2, รหัสรักษาความปลอดภัย

1. หากคุณต้องการเปลี่ยนรหัสรักษาความปลอดภัย / รหัส PIN / PIN2 ใหม่อันรหัสเดิมที่ใหญ่ของคุณ แลกดปุ่ม  [ตกลง]
2. ป้อนรหัสรักษาความปลอดภัย รหัส PIN/ PIN2 ใหม่ และตรวจสอบความถูกต้อง

## ตั้งค่าเครือข่าย

Menu 4.5

คุณสามารถเลือกเครือข่ายที่คุณต้องการลงทะเบียนได้โดยอัตโนมัติ หรือด้วยตนเอง โดยทั่วไปการเลือกเครือข่ายจะตั้งค่าที่ **อัตโนมัติ**

## อัตโนมัติ

(Menu 4.5.1)

หากคุณเลือกโหมด อัตโนมัติ เครื่องจะค้นหาและเลือกเครือข่ายให้คุณโดยอัตโนมัติเมื่อเลือก "อัตโนมัติ" แล้ว เครื่องจะตั้งค่าที่ "อัตโนมัติ" อยุธยาเช่นเดิมแม้ว่าจะมีการปิดและเปิดเครื่องก็ตาม

## เลือกเอง

(เมนู 4.5.2)

เครื่องโทรศัพท์จะหาสัญญาณเครือข่าย ที่มีอยู่ และแสดงรายการนั้น จากนั้นคุณสามารถเลือกเครือข่ายที่คุณต้องการใช้ หากเครือข่ายนี้มีข้อตกลงเรื่องค่าธรรมเนียมกับผู้ใช้บริการระบบเครือข่ายในพื้นที่ของคุณ และ เครื่องจะให้คุณเลือกเครือข่ายอื่นได้ในกรณีที่เครื่องไม่สามารถเชื่อมต่อกับเครือข่ายที่เลือกได้

## เครือข่ายที่ชอบ

(เมนู 4.5.3)

คุณสามารถตั้งค่ารายการเครือข่ายที่คุณต้องการให้โทรศัพท์เชื่อมต่อเป็นอันดับแรก ก่อนที่จะพยายามเชื่อมกับเครือข่ายอื่น ๆ รายการนี้เป็น รายการเครือข่ายซึ่งเป็นที่รู้จักและมีการกำหนดไว้ล่วงหน้าแล้วในเครื่องโทรศัพท์

## การตั้งค่า GPRS

เมนู 4.6

คุณสามารถตั้งค่าการใช้บริการ GPRS ได้อย่างหลากหลาย ขึ้นอยู่กับสภาพการใช้งานต่างๆ

## เมื่อเปิดเครื่อง

(เมนู 4.6.1)

หากเลือกเมนูนี้ โทรศัพท์จะลงทะเบียนกับเครือข่าย GPRS โดยอัตโนมัติเมื่อคุณเปิดเครื่อง การใช้โปรแกรม PC Dial-up หรือ WAP จะเป็นการสร้างการเชื่อมต่อระหว่างโทรศัพท์กับเครือข่าย ทำให้สามารถส่งถ่ายข้อมูลได้ เมื่อคุณเปิดโปรแกรมนั้น การเชื่อมต่อ GPRS จะสิ้นสุดลงแต่การลงทะเบียนกับเครือข่ายยังคงมีผลอยู่

## เมื่อต้องการ

(เมนู 4.6.2)

เมื่อเลือกเมนูนี้ การเชื่อมต่อ GPRS เกิดขึ้นเมื่อคุณทำการเชื่อมต่อกับบริการ WAP และสิ้นสุดลงเมื่อคุณสิ้นสุดการเชื่อมต่อ WAP

## ใช้ค่าจากโรงงาน

เมนู 4.7



คุณสามารถกลับไปเริ่มใช้ค่าทั้งหมดที่ตั้งมาจากโรงงานได้ คุณต้องรีสตาร์ทความปลอดภัยเพื่อใช้งานฟังก์ชันนี้

# บันทึกส่วนตัว

## นาฬิกาปลุก

เมนู 5.1





คุณสามารถตั้งนาฬิกาปลุกได้ 5 เวลาตามเวลาที่กำหนดได้

1. เลือก **ตกลง** แล้วตั้งเวลาปลุกตามที่ต้องการ
2. เลือกช่วงเวลาที่ต้องการให้ปลุกซ้ำ: **ครั้งเดียว, วันจันทร์-วันศุกร์, วันจันทร์-วันเสาร์, ทุกวัน**
3. เลือกชนิดของเสียงปลุกที่ต้องการแล้วกดปุ่ม  [ตกลง]
4. กำหนดชื่อให้กับเวลาปลุกแล้วกดปุ่ม  [ตกลง]


## นัดหมาย

เมนู 5.2

เมื่อคุณเข้าสู่เมนูนี้ปฏิทินจะปรากฏขึ้นเคอร์เซอร์รูปสี่เหลี่ยมจะอยู่ที่วันที่ปัจจุบันคุณสามารถเลื่อนเคอร์เซอร์ไปยังวันที่อื่นได้โดยใช้ปุ่มนาฬิกาในปฏิทิน คุณสามารถใช้ปุ่มต่อไปนี้ได้

เมื่อกดปุ่ม		ย้อนกลับไปยังปีก่อนหน้า
		ไปที่ปีถัดไป
		ย้อนกลับไปยังเดือนก่อน
		หน้า ไปยังเดือนถัดไป

คุณสามารถป้อนกำหนดการหรือบันทึกในปฏิทินและบันทึก โดยกดปุ่มเลือกซ้าย [ตัวเลือก]

- ▶ **เพิ่มใหม่:** เลือกตัวเลือกนี้เพื่อป้อนนัดหมายหรือบันทึกใหม่ หลังจากป้อนข้อมูลนัดหมายในวันที่นั้นแล้วเครื่องจะแสดงวันที่นั้นเป็นสีอื่น และสัญลักษณ์  จะปรากฏขึ้นที่มุมขวาของหน้าจอ ฟังก์ชันนี้ช่วยเตือนความจำเกี่ยวกับนัดหมายของคุณ โดยโทรศัพท์จะส่งเสียงปลุกหากคุณตั้งค่าให้โทรศัพท์ปลุก
- ▶ **ด:** แสดงบันทึกการนัดหมายหรือบันทึกสำหรับวันที่เลือก กดปุ่มเลือกซ้าย [ตัวเลือก] เพื่อแก้ไขหรือลบบันทึกที่คุณเลือกไว้
- ▶ **ดูทั้งหมด:** แสดงบันทึกทั้งหมดที่ป้อนไว้ในโทรศัพท์โปรดใช้ปุ่มนาฬิกาเกิดขึ้น/ลงเพื่อเลือกดูรายการบันทึก

- ▶ **ลบข้อมูลเดิม:** เลือกตัวเลือกนี้เพื่อลบบันทึกการนัดหมายที่หมดอายุซึ่งมีการแจ้งเตือนแล้ว โดยเครื่องจะให้คุณยืนยันก่อนดำเนินการนี้
- ▶ **ลบทั้งหมด:** เลือกตัวเลือกนี้เพื่อลบบันทึกการนัดหมายและบันทึกเตือนความจำทั้งหมดโดย เครื่องจะให้คุณยืนยันก่อนดำเนินการนี้



## สมุดโทรศัพท์

เมน 5.3


### ค้นหา


(การโทรออกโดยใช้สมุดโทรศัพท์)

(เมน 5.3.1)

1. กดปุ่ม  [รายชื่อ] ในขณะที่อยู่ในโหมดสแตนด์บาย
2. เลือก ค้นหา โดยกดปุ่ม  [เลือก]
3. ป้อนชื่อของเจ้าของหมายเลขหรือที่อยู่อีเมลที่ต้องการค้นหา หรือเลือก 'รายการ' เพื่อดูสมุดโทรศัพท์
4. การค้นหาด่วนสามารถทำได้ด้วยการป้อนอักษรตัวแรกของชื่อ หรือ ตัวเลขแรกที่คุณต้องการค้นหา
5. หากต้องการแก้ไข ลบ คัดลอกรายการ หรือ

เพิ่มเสียงเข้าไปในรายการ ให้เลือก

 [ตัวเลือก] จะมีเมนูดังต่อไปนี้ปรากฏขึ้น






- ▶ **แก้ไข:** คุณสามารถทำการแก้ไขชื่อ หมายเลขโทรศัพท์ อีเมลและแฟกซ์ ด้วยการกดปุ่ม  [ตกลง]
- ▶ **เขียนข้อความ:** หลังจากพบหมายเลขที่คุณต้องการแล้ว คุณสามารถส่งข้อความไปยังหมายเลขที่เลือกนั้นได้
- ▶ **คัดลอก:** คุณสามารถคัดลอกรายการจากซิมการ์ดไปยังเครื่องหรือจากเครื่องไปยังซิมการ์ด
- ▶ **หมายเลขหลัก:** คุณสามารถเลือกหมายเลขใดหมายเลขหนึ่งจากหมายเลขโทรศัพท์เคลื่อนที่, บ้าน, ที่ทำงาน ซึ่งเป็นหมายเลขที่คุณใช้อยู่เสมอ หากคุณตั้งค่านี้ หมายเลขหลักนี้จะปรากฏขึ้นก่อน
- ▶ **ลบ:** คุณสามารถลบรายการได้

# บันทึกส่วนตัว

## เพิ่ม

(เมน 5.3.2)

คุณสามารถเพิ่มรายการชื่อลงในสมุดโทรศัพท์ด้วยการใช้ฟังก์ชันนี้หน่วยความจำของตัวเครื่องจะสามารถบันทึกได้ 200 รายชื่อ ส่วนความจำของหน่วยความจำของซิมการ์ดขึ้นอยู่กับผู้ให้บริการ ระบบเซลล์ลาร์คุณยังสามารถบันทึกตัวอักษรได้ 20 ตัวในแต่ละชื่อลงในหน่วยความจำของโทรศัพท์ และบันทึกตัวอักษรต่างๆ ลงในซิมการ์ดได้ด้วย จำนวนตัวอักษรที่สามารถบันทึกลงในซิมการ์ดขึ้นอยู่กับคุณสมบัติของซิมการ์ด

1. เริ่มต้นที่การเปิดสมุดโทรศัพท์ด้วยการกดปุ่ม  [รายชื่อ] เมื่อเครื่องอยู่ในโหมดสแตนด์บาย
2. เลื่อนแถบสีไปที่ เพิ่มแล้วกดปุ่ม  [เลือก]
3. เลือกชนิดหน่วยความจำที่ต้องการใช้บันทึก: **ซิมการ์ด** หรือ **เครื่องโทรศัพท์** หากตั้งค่าที่ เครื่องโทรศัพท์ คุณต้องการเลือกวางต่อการให้หมายเลขใดเป็นหมายเลขหลัก
  - a. กดปุ่ม  [ตกลง] เพื่อป้อนชื่อ
  - b. กดปุ่ม  [ตกลง] , [แล้วป้อนหมายเลขโทรศัพท์]
  - c. กดปุ่ม  [ตกลง]

d. คุณสามารถตั้งกลุ่มของรายการนั้นได้ด้วยการกดปุ่ม ( / ):




e. คุณสามารถกำหนดตัวอักษรและรูปภาพให้กับรายการได้ด้วยการกดปุ่ม



## กลุ่มคนสนิท

(เมน 5.3.3)



คุณสามารถกำหนดจำนวนสมาชิกได้ 20 ชื่อใน 1 กลุ่ม และสามารถกำหนดได้ทั้งหมด 7 กลุ่ม



1. กดปุ่ม  [รายชื่อ] ในขณะที่อยู่ในโหมดสแตนด์บาย
2. เลื่อนแถบสีไปที่รายการ กลุ่มคนสนิท แล้วกดปุ่ม  [เลือก] เครื่องจะแสดงกลุ่มทุกกลุ่มที่หาเจอ
3. เลือกชื่อกลุ่มที่ต้องการใช้ด้วยการกดปุ่ม  [เลือก]
  - ▶ **รายชื่อสมาชิก:** แสดงสมาชิกของกลุ่มที่คุณเลือก
  - ▶ **เสียงกริ่งของกลุ่ม:** ใช้ในการระบุเสียงเรียก เขาสำหรับสายเรียกเขาของแต่ละกลุ่ม
  - ▶ **ไอคอนของกลุ่ม:** ให้คุณเลือกไอคอนประจำกลุ่มได้

- ▶ **เพิ่มสมาชิก:** สำหรับใช้เพิ่มสมาชิกของกลุ่ม จำนวนสมาชิกของแต่ละกลุ่มจะต้องไม่เกิน 20 คน
- ▶ **ย้ายสมาชิก:** คุณสามารถลบสมาชิกออกจากรายชื่อสมาชิกของกลุ่มใดแต่ชื่อและหมายเลขตั้งกลาวยังคงอยู่ในสมุดโทรศัพท์
- ▶ **เปลี่ยนชื่อ:** คุณสามารถเปลี่ยนชื่อกลุ่มได้

## โทรด่วน

(เมนู 5.3.4)





คุณสามารถกำหนดปุ่มใดปุ่มหนึ่งของปุ่ม  ถึง  ให้กับชื่อหนึ่งในรายชื่อ Name โดยคุณสามารถโทรออกได้โดยตรงด้วยการกดปุ่มนั้นนาน 2-3 วินาที


1. เริ่มต้นที่การเปิดสมุดโทรศัพท์ด้วยการกดปุ่ม  [ชื่อ] เมื่อเครื่องอยู่ในโหมด สแตนด์บาย
2. เลื่อนแถบสีไปที่ **โทรด่วน** แล้วกดปุ่ม  [เลือก]
3. หากต้องการเพิ่ม โทรด่วน ให้เลือก (ว่าง) จากนั้นคุณสามารถค้นหาชื่อในสมุดโทรศัพท์ได้
4. เลือกชื่อที่ต้องการกำหนดให้ใช้โทรด่วนแล้วเลือก **เปลี่ยน** หรือ **ลบ** เพื่อแก้ไขชื่อ

- ▶ **เปลี่ยน:** คุณสามารถกำหนดหมายเลขโทรศัพท์ใหม่ให้กับปุ่มนั้น
- ▶ **ลบ:** สำหรับลบหมายเลขที่กำหนดไว้จากปุ่มนั้น

## ตั้งค่า

(เมนู 5.3.5)



1. กดปุ่ม  [รายชื่อ] ในโหมดสแตนด์บาย
2. เลื่อนแถบสีมาที่ **ตั้งค่า** แล้วกดปุ่ม  [เลือก]
- ▶ **ตั้งค่าหน่วยความจำ**  
เลื่อนแถบสีมาที่ **ตั้งค่าหน่วยความจำ** แล้วกดปุ่ม  [เลือก]
  - หากคุณเลือกสามารถเลือกได้เมื่อทำการเพิ่มชื่อเครื่องจะถามว่าจะให้บันทึกในหน่วยความจำได้
  - หากคุณเลือก ซิมการ์ด หรือ เครื่องโทรศัพท์ เครื่องจะจัดเก็บรายการตั้งกลาวลงในซิมการ์ดหรือโทรศัพท์
- ▶ **ค้นหาโดย**  
เลื่อนแถบสีมาที่ **ค้นหาโดย** แล้วกดปุ่ม  [เลือก]

- หากคุณเลือก สามารถเลือกได้ เครื่องจะถามว่าจะให้คนหาด้วยวิธีใด
- หากคุณเลือก ชื่อ หรือ หมายเลข เครื่องจะคนหารายการตามชื่อ หรือ ตามหมายเลข
- ▶ แสดงค่าที่เลือก  
เลื่อนแถบสีมาที่ แสดงค่าที่เลือก แล้วกดปุ่ม  [เลือก]
- **ชื่อเท่านั้น:** เมื่อคุณค้นหารายชื่อในสมุดโทรศัพท์ รายการจะแสดงเฉพาะชื่อเท่านั้น
- **พร้อมรูปถ่าย:** เมื่อคุณค้นหารายชื่อในสมุดโทรศัพท์รายการจะแสดงชื่อ และภาพที่สอดคล้องกัน
- **ชื่อและเบอร์:** เมื่อคุณค้นหารายชื่อในสมุดโทรศัพท์ รายการจะแสดงชื่อและหมายเลข

## คัดลอกทั้งหมด


(เมนู 5.3.6)

คุณสามารถบันทึก/ย้ายรายการจากหน่วยความจำของซิมการ์ดไปยังหน่วยความจำของเครื่อง และสลับกันได้อีกด้วย

1. เริ่มจากเปิดสมุดโทรศัพท์ด้วยการกดปุ่ม  [รายชื่อ] เมื่อเครื่องอยู่ในโหมด สแตนด์บาย
2. เลื่อนแถบมาที่ **คัดลอกทั้งหมด** แล้วกดปุ่ม  [เลือก] เพื่อเข้าสู่เมนูนี้
  - ▶ ซิมการ์ดไปเครื่อง: คุณสามารถคัดลอกรายการจากซิมการ์ดไปยังหน่วยความจำของตัวเครื่อง
  - ▶ เครื่องไปซิมการ์ด: คุณสามารถคัดลอกรายการจากหน่วยความจำของตัวเครื่องไปยังซิมการ์ดได้
3. คุณจะเห็นเมนูย่อยดังต่อไปนี้
  - ▶ เก็บทั้งหมด: เมื่อทำการคัดลอกเครื่องจะเก็บหมายเลขเดิมไว้
  - ▶ ลบต้นฉบับ: เมื่อทำการบันทึก เครื่องจะลบหมายเลขเดิมทิ้ง

## ลบทั้งหมด

(เมนู 5.3.7)






คุณสามารถลบรายการทั้งหมดในซิมการ์ด และ / หรือในโทรศัพท์ ฟังก์ชันนี้ต้องใช้รหัสรักษาความปลอดภัย กดปุ่ม  เพื่อกลับสู่โหมดสแตนด์บาย

## ข้อมูล

(เมนู 5.3.8)

### ▶ เบอ์บริการ

ใช้ฟังก์ชันนี้เพื่อเข้าดูรายการบริการที่ผู้ให้บริการระบบของคุณให้บริการ (หากซิมการ์ดสนับสนุน)

1. เริ่มจากเปิดสมุดโทรศัพท์ด้วยการกดปุ่ม  [รายชื่อ] เมื่อเครื่องอยู่ในโหมดสแตนด์บาย แล้วเลือก **ข้อมูล**
2. เลื่อนแถบมาที่ **เบอ์บริการ** แล้วกดปุ่ม  [เลือก] เพื่อเข้าสู่เมนู
3. ชื่อบริการที่มีอยู่จะปรากฏขึ้น
4. ใช้ปุ่ม  และปุ่ม  เพื่อเลือกบริการที่ต้องการ กดปุ่ม  [โทรออก]

### ▶ สถานะหน่วยความจำ

คุณสามารถใช้คุณสมบัตินี้ในการตรวจสอบหน่วยความจำที่เหลือจะที่ถูกใช้ไปในสมุดโทรศัพท์ของคุณ

### ▶ หมายเลขเครื่อง (ขึ้นอยู่กับซิมการ์ด)

คุณสามารถตรวจสอบหมายเลขโทรศัพท์ของคุณในซิมการ์ดได้

# เกมส์และเครื่องมือ

## เมนูโปรด

เมน 6.1

คุณสามารถกำหนดรายการที่ใช้บ่อยไว้ในเมนูโปรดได้ โดยใช้ปุ่ม ฮอตคีย์ (👉).

เพื่อเชื่อมต่อเข้าเมนูนี้โดยตรงหากคุณต้องการบันทึกเมนูที่ใช้บ่อยลงในเมนูโปรด ให้เลือก <รายการว่าง> ในรายการในกรณีที่เมนูนั้นอยู่แล้ว จะปรากฏเลือกดังต่อไปนี้

- ▶ **เลือก:** เป็นการใช้เมนูที่บันทึกไว้แล้ว
- ▶ **เปลี่ยน:** เปลี่ยนเมนู
- ▶ **ลบ:** ลบเมนูที่ได้บันทึกไว้
- ▶ **ลบทั้งหมด:** ลบเมนูทั้งหมดที่บันทึกอยู่ในเมนูโปรด
- ▶ **ข้อมูล:** ดูข้อมูลของเมนูที่บันทึกไว้

## เกมส์

เมน 6.2

โทรศัพท์ของคุณมีเกมส์ต่าง ๆ ให้คุณเลือกเล่นได้

### หมายเหตุ

- ▶ ปุ่มควบคุมจะแตกต่างกัน ขึ้นอยู่กับเกมส์ที่เล่นอย่างไรก็ตาม ในแต่ละเกมส์จะมีคำแนะนำเพื่ออธิบายปุ่มควบคุมหลักต่างๆ ให้ทราบ ปุ่มอื่นๆ มีดังต่อไปนี้

### ฟังก์ชันปุ่มทั่วไป

👈 : ย้อนกลับ

👉 : หยุดชั่วคราวหรือเล่นเกมต่อ

## เครื่องคิดเลข

เมน 6.3

เครื่องคิดเลขจะดำเนินการคำนวณขั้นต้น คือ **บวก, ลบ, คูณ และหาร**

1. ป้อนตัวเลขแรกโดยใช้ปุ่มตัวเลข
2. กดปุ่มนาวิเกตที่ต้องการเพื่อเลือกฟังก์ชันการคำนวณ

### หมายเหตุ

- ▶ เมื่อต้องการลบตัวเลขที่ป้อนผิดหรือลบค่าทั้งหมดให้ใช้ปุ่ม 🗑️

- ▶ เมื่อต้องการใส่จุดทศนิยม ให้กดปุ่ม 
- ▶ เมื่อต้องการใส่เครื่องหมายลบ ให้กดปุ่ม 

3. เมื่อต้องการคำนวณผลลัพธ์ ให้กดปุ่มเลือก  
ซ้าย [ผลลัพธ์] หรือปุ่ม ตกลง
4. เมื่อคำนวณเสร็จแล้ว ให้กดปุ่มเลือกซ้าย  
[รีเซ็ต] เพื่อกลับไปยังสถานะเริ่มต้น

## แฟ้มดาว์นโหลด

เมน 6.4

ให้คุณดูภาพและเสียงที่ดาว์นโหลด และกำหนดเป็นวอลเปเปอร์หรือเสียงเรียกเข้าได้ โดยสามารถดู, ฟัง, ลบหรือตั้งชื่อใหม่ให้กับข้อมูลที่ดาว์นโหลดได้

## รูปภาพ

(เมน 6.4.1)

## เสียง

(เมน 6.4.2)

## เมนูหลักแต่ละเมนูมีเมนูย่อยดังต่อไปนี้







- ▶ **แก้ไขชื่อ:** สำหรับแก้ไขชื่อของแต่ละข้อมูลที่ดาว์นโหลด
- ▶ **เขียนข้อความ/ข้อความมัลติมีเดีย:** คุณสามารถเขียนข้อความสั้น/ข้อความมัลติมีเดีย (ใช้ได้หรือไม่ขึ้นอยู่กับประเภทของสื่อ) โดยแนบภาพหรือเสียงเข้ากับข้อความได้ด้วย
- ▶ **ตั้งเป็นเสียงโทน / ตั้งเป็นวอลล์เปเปอร์:** คุณสามารถกำหนดให้ใช้เสียง หรือ ภาพที่ดาว์นโหลดเป็นวอลล์เปเปอร์หรือเสียงเรียกเข้าได้
- ▶ **ลบ:** สำหรับลบเนื้อหาแต่ละรายการที่ดาว์นโหลดได้
- ▶ **ลบทั้งหมด:** คุณสามารถลบเนื้อหาทั้งหมดที่ดาว์นโหลดได้

# เกมส์และเครื่องมือ

## การแปลงหน่วย

เมน 6.5




ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ โดยมีประเภทหน่วยวัด 4 แบบที่สามารถแปลงหน่วยได้ ดังนี้ ความยาว, พื้นที่, น้ำหนัก และ ระดับ

1. คุณสามารถเลือกประเภทใดประเภทหนึ่งจากทั้งสี่ประเภทนั้น โดยการกดปุ่ม  [หน่วย]
2. เลือกค่ามาตรฐานโดยใช้ปุ่ม  .
3. เลือกหน่วยที่คุณต้องการแปลงค่าโดยการกดปุ่ม  และ .
4. คุณสามารถตรวจสอบค่าที่ถูกแปลงสำหรับหน่วยที่คุณต้องการ นอกจากนี้ คุณสามารถป้อนเลขทศนิยมโดยการกดปุ่ม .

## โซนเวลาโลก

เมน 6.6

คุณสามารถดูเวลาของเมืองสำคัญ ได้ทั่วโลก

1. เลือกเมืองที่อยู่ในช่วงเวลานั้นโดยการกดปุ่ม  .
2. คุณสามารถตั้งเวลาปัจจุบันให้เป็นเวลาของเมืองที่คุณเลือกใดโดยการกดปุ่ม  [ตั้งค่า]




## บันทึกเสียง

เมน 6.7

คุณสมบัตินี้บันทึกเสียงเดือนความจำช่วยให้คุณสามารถบันทึกข้อความได้ถึง 10 ข้อความ โดยมีความยาวข้อความละไม่เกิน 20 วินาที

## บันทึก

(เมน 6.7.1)

1. คุณสามารถบันทึกเสียงเดือนความจำได้ด้วยเมนู บันทึกเสียงหรือด้วยการกดปุ่ม  ค้างไว้ในโหมดสแตนด์บาย
2. เมื่อเริ่มต้นบันทึกเสียงแล้วจะปรากฏข้อความกำลังบันทึก และจำนวนเวลาที่เหลือบนหน้าจอ
3. หากต้องการสิ้นสุดการบันทึก ให้กดปุ่ม  [บันทึก]
4. ป้อนชื่อของบันทึกนั้นแล้วกดปุ่ม  [ตกลง]

## บันทึก

(เมน 6.7.2)

โทรศัพท์แสดงรายการเสียงที่บันทึกไว้ โดยเริ่มจากเสียงที่บันทึกครั้งล่าสุดคุณสามารถเล่นหรือลบเสียงที่บันทึกหรือส่งเสียงที่บันทึกนั้นโดยใช้ MMS โดยกดปุ่มเลือกซ้าย [ตัวเลือก] และคุณ

ยังสามารถลบเสียงที่บันทึกทั้งหมดได้

## แสดงรายการ

เมนู 6.8

คุณสามารถตรวจสอบพื้นที่ว่างและการใช้หน่วยความจำของพื้นที่จัดเก็บแต่ละส่วน คุณสามารถเข้าไปในเมนูของหน่วยความจำแต่ละส่วน โดยการกดปุ่มเลือกซ้าย [ไปที่]

# อินเทอร์เน็ท

โทรศัพท์ของคุณสนับสนุนบริการอินเทอร์เน็ท โดยการใช้ Wireless Application Protocol (WAP) คุณสามารถเข้าใช้บริการที่ใช้กับเครือข่ายของคุณได้เมนูบริการจะให้คุณได้รับข้อมูลเกี่ยวกับข่าวสาร, รายงานสภาพอากาศ และตารางเที่ยวบิน


## โฮม

เมนู 7.1

ใช้สำหรับเชื่อมต่อกับโฮมเพจ โฮมเพจอาจเป็นไซต์ที่ใคร่จะดูในรูปแบบที่มีการใช้งาน ซึ่งอาจกำหนดไว้โดยผู้ให้บริการระบบ หากคุณไม่ได้กำหนดไว้ในรูปแบบที่มีการใช้งาน

## บุ้คมาร์ค


เมนู 7.2

กดปุ่ม  [เลือก] เพื่อเข้าใช้ตัวเลือกที่มีอยู่ หรือกดปุ่ม  [ยกเลิก] เพื่อออกจากเมนู

- ▶ **เชื่อมต่อ:** เชื่อมต่อไปยังบุ้คมาร์คที่เลือก
- ▶ **เพิ่ม:** เพิ่มบุ้คมาร์คใหม่ด้วยตนเอง
- ▶ **แก้ไข:** แก้ไขชื่อและที่อยู่ของบุ้คมาร์คที่เลือก
- ▶ **ลบภาพ:** ลบบุ้คมาร์คที่เลือกออกจากรายการบุ้คมาร์ค

## โพรไฟล์

เมนู 7.3

คุณสามารถสร้างรูปแบบได้ถึง 10 รูปแบบ และเลือกเปิดใช้งานได้รูปแบบเดียวเท่านั้น ให้เลื่อนไปที่รูปแบบที่ต้องการ แล้วกดปุ่ม  เพื่อเข้าสู่ตัวเลือกที่มีเลือก

- ▶ **เปิดใช้งาน:** คุณสามารถใช้รูปแบบตามที่ต้องการ
- ▶ **การตั้งค่า:** แก้ไขและเปลี่ยนแปลงการตั้งค่า WAP ของรูปแบบที่เลือก
  - โฮมเพจ: ในตัวเลือกนี้ จะให้คุณป้อนแอดเดรส(URL)ของไซต์ที่คุณจะใช้เป็นโฮมเพจ คุณไม่จำเป็นต้องพิมพ์ "http://" ใว้หน้า URL แต่ละชื่อ เพราะ เบราเซอร์ WAP จะใส่ให้เองโดยอัตโนมัติ
  - เครือข่าย: สำหรับกำหนดชนิดของบริการส่งข้อมูลข้อมูล GPRS
  - **การตั้งค่าข้อมูล:** ปรากฏขึ้นเมื่อคุณเลือกการตั้งค่าข้อมูลเป็นเครือข่าย/บริการ

**IP แอดเดรส:** บัณฑิต IP แอดเดรสของเกตเวย์ WAP ที่คุณเขาใช้

**หมายเลขโทรศัพท์:** บัณฑิตหมายเลขโทรศัพท์สำหรับเชื่อมต่อไปยังเกตเวย์ WAP ของคุณ

**รหัสผู้ใช้:** ค่าเฉพาะที่แสดงถึงตัวผู้ใช้สำหรับเซิร์ฟเวอร์การติดต่อของคุณ(ทั้งนี้มิใช่เกตเวย์ WAP)

**รหัสผ่าน:** รหัสผ่านที่ต้องป้อนให้กับเซิร์ฟเวอร์การติดต่อของคุณ (ทั้งนี้ มิใช่เกตเวย์ WAP) เพื่อระบุถึงตัวคุณ

**ชนิดการโทร:** เลือกประเภทการโทรเพื่อส่งข้อมูล: Analogue หรือ Digital (ISDN)

**อัตราการโทร:** อัตราความเร็วในการเชื่อมต่อข้อมูล คือ 9600 หรือ 14400

**เวลาเชื่อมต่อ:** สำหรับบัณฑิตระยะเวลาที่กำหนดให้ออกจากการเชื่อมต่อโดยเมื่อบัณฑิตแล้วบริการนาวิเกตของWAPจะหยุดลงเมื่อไม่มีการรับหรือส่งข้อมูลในเวลาที่กำหนด

**- การตั้งค่า GPRS**

ปรากฏขึ้นเมื่อคุณเลือก GPRS เป็นบริการเสริม

**IP แอดเดรส:** บัณฑิต IP แอดเดรสของเกตเวย์ WAP ที่คุณเขาใช้

**APN:** บัณฑิต APN ของ GPRS

**รหัสผู้ใช้:** เป็นตัวระบุผู้ใช้สำหรับเซิร์ฟเวอร์ APN

**รหัสผ่าน :** รหัสผ่านที่คุณต้องป้อนให้กับเซิร์ฟเวอร์ APN

**- แสดงรูปภาพ**

คุณสามารถเลือกให้แสดงรูปภาพบน WAP หรือไม่ก็ได้

**- ชนิดการเชื่อมต่อ**

ตัวเลือกสำหรับประเภทการเชื่อมต่อ ได้แก่ แบบชั่วคราว หรือ แบบต่อเนื่อง ซึ่งขึ้นอยู่กับเกตเวย์ที่คุณใช้

**แบบต่อเนื่อง**

ระบบการส่งข้อมูลที่มีความคงที่อย่างต่อเนื่อง แต่สร้างการติดต่อสื่อสารกับเครือข่ายมากขึ้น

**แบบชั่วคราว**

บริการที่ยังไม่ได้รับการยืนยัน (ไม่ได้เชื่อมต่อ)

**- การตั้งค่าพร็อกซี**

IP แอดเดรส: บัณฑิต IP แอดเดรสของพร็อกซี

พอร์ต: บ่อนหมายเลขพอร์ตของพร็อกซี

- การตั้งค่า DNS

บ่อน DNS หลักและ DNS รองหากผู้ให้บริการ  
เครือข่ายรองขอ

- การตั้งระบบป้องกัน

คุณสามารถตั้งค่าตัวเลือกนี้เป็น ตกลง หรือ  
ยกเลิก ขึ้นอยู่กับพอร์ตเกตเวย์ที่ใช้

- ▶ เปลี่ยนชื่อ: แก้ไขชื่อรูปแบบ (โพรไฟล์)
- ▶ ลบ: ลบชื่อรูปแบบ
- ▶ เพิ่ม: คุณสามารถเพิ่มรูปแบบใหม่ได้ด้วยตนเอง

## ไปยัง URL

เมน 7.4

เชื่อมต่อไปยังไซต์ที่คุณต้องการได้โดยตรงโดย  
คุณต้องป้อน URL ที่ต้องการ

## ตั้งค่า Cache

เมน 7.5

คุณสามารถลบข้อมูลในหน่วยความจำแคชหรือ  
เปลี่ยนโหมดของแคชก็ได้

## เคลียร์ cache

เมน 7.5.1

เพื่อลบข้อมูลของหน่วยความจำแคช

## ตรวจสอบ cache

เมน 7.5.2

สำหรับกำหนดตัวเลือกว่าจะตรวจสอบหน่วย  
ความจำแคชหรือไม่

## การตั้งค่า Cookies

เมน 7.6

ข้อมูลหรือบริการที่คุณเข้าใช้จะถูกบันทึกไว้ใน  
หน่วยความจำแคชของโทรศัพท์

## ลบ Cookies

เมน 7.6.1

ลบข้อมูลทั้งหมดที่บันทึกไว้ในคุกกี้

## ตรวจสอบ Cookies

เมน 7.6.2

ตรวจสอบว่ามีการใช้คุกกี้หรือไม่

## รับรองความปลอดภัย

Menu 7.7

รายการใบรับรองที่ใช้ได้จะปรากฏขึ้น

## รีเซ็ตไฟล์

Menu 7.8

คุณสามารถรีเซ็ตรูปแบบเพื่อกลับไปยังค่าเริ่มต้นได้

## เวอร์ชันของเบราส์เซอร์

Menu 7.9

แสดงเวอร์ชันของเบราส์เซอร์ WAP

# เมนูในการเบร่าส์

หากคุณออนไลน์อยู่ คุณสามารถดูรายการเมนูเหล่านี้ได้

▶ โฮม

โปรดดูที่ [เมนู 7-1]

▶ รีโหลด

โหลดหน้าปัจจุบันอีกครั้ง

▶ มัคมาร์ค

โปรดดูที่ [เมนู 7-2]

▶ บันทึกลงมัคมาร์ค

คุณสามารถบันทึกไซต์หนึ่งๆ เป็นมัคมาร์คได้

▶ ไปที่ URL

คุณสามารถไปยังไซต์ที่คุณต้องการ ในเมนูนี้ คุณยังสามารถแก้ไขที่อยู่ของไซต์ได้

▶ ลบ cache

เพื่อลบข้อมูลของหน่วยความจำแคช

▶ บันทึกภาพ

คุณสามารถบันทึกภาพที่ได้จาก WAP

# แอปพลิเคชัน

## แอปพลิเคชัน

เมนู 8.1

### ตัวเลือก

เลือกแถบสีไปที่แอปพลิเคชันแล้วเลือกตัวเลือก

1. New: คุณสามารถสร้างแฟ้มใหม่
2. Move: คุณสามารถเลือกแฟ้มที่คุณต้องการ
3. ข้อมูล Java MIDP: แสดงข้อมูล Java MIDP
4. ข้อมูล MIDlet: แสดงข้อมูลเกี่ยวกับ MIDlet ที่เลือก
5. ลบ MIDlet: ลบ MIDlet ที่เลือก
6. อัปเดต: เข้าใช้เซิร์ฟเวอร์และทำการอัปเดต MIDlet ที่เลือก
7. ตัวเลือก: โปรแกรม Java บางโปรแกรมอาจต้องการมีการเชื่อมต่อ เพื่อรับส่งข้อมูล ให้เลือกตัวเลือกนี้เพื่อกำหนดตัวเลือก การเชื่อมต่อ
  - ทุกครั้ง: การเชื่อมต่อเกิดขึ้นทันทีโดยไม่มี การแจ้งให้ทราบ
  - Prompt: เครื่องจะสอบถามคุณก่อนที่จะไป โปรแกรมจะทำการเชื่อมต่อ
  - ไม่ยืนยัน: ห้ามการเชื่อมต่อ

8. ตั้งชื่อใหม่: คุณสามารถตั้งชื่อโปรแกรมใหม่

9. ออก: ออกจากโปรแกรม

## ดาวน์โหลด

เมนู 8.2

คุณสามารถแก้ไขและกำหนดแอดเดรสของ MIKlet เซิร์ฟเวอร์ ดาวน์โหลด MIDlet ด้วยการ ใช้เบราว์เซอร์ WAP และบันทึกไว้ในเครื่อง คุณยังสามารถดูรายการ MIDlet ที่เก็บอยู่ที่หน้าจอ แอปพลิเคชัน

## โปรแกรม

เมนู 8.3

โปรแกรม Java บางโปรแกรมอาจต้องใช้การ เชื่อมต่อกับเครือข่ายเพื่อให้สามารถทำงานได้ ตัวอย่างเช่นเกมสที่มีผู้เล่นหลายคนคุณสามารถ ตั้งค่าการใช้ได้ถึง 5 ค่าและเปิดใช้ค่าใดค่าหนึ่ง ซึ่งคล้ายคลึงกับการตั้งค่าการใช้ WAP โปรดดู ที่หัวข้อการตั้งค่าการใช้ WAP เมื่อคุณทำการ ตั้งค่านี้

# แอปพลิเคชัน



JAVA tm เป็นเครื่องหมายการค้า  
ของ Sun Microsystems, Inc.

# อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการใช้งานที่สนใจของคุณ

## แบตเตอรี่มาตรฐาน



## แฮนด์ฟรีแบบพกพา

สำหรับเชื่อมต่อกับโทรศัพท์เพื่อใช้งานแฮนด์ฟรี




## อะแดปเตอร์สำหรับชาร์จแบตเตอรี่

สำหรับชาร์จแบตเตอรี่เมื่ออยู่ในระหว่างการเดินทาง



## สายเคเบิลข้อมูล/ซิงค์

สำหรับใช้เชื่อมต่อเพื่อการแลกเปลี่ยนข้อมูลระหว่างเครื่องคอมพิวเตอร์กับโทรศัพท์ของคุณ



## หมายเหตุ

- ▶ ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- ▶ การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- ▶ อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

# ข้อมูลทางเทคนิค

## ข้อมูลทั่วไป

ชื่อผลิตภัณฑ์ : C1150

ระบบ : GSM 900 / DCS 1800

## อุณหภูมิแวดล้อม

สูงสุด : +55°C

ต่ำสุด : -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers  
20, Yeouido-dong, Yeongdeungpo-gu,  
Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 Dual - Band Terminal Equipment

Model Name

C1150

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.5.1, 301 489-7 V1.2.1

EN 60950-1 : 2001

EN 50360 : 2001, EN 50361 : 2001

3GPP TS 51.010-1.

Selection according to GCF-CC 3.18.0 including requirements of EN 301 511, v9.0.2

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog. Kim / Director 05.Aug.2005

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim@ lge.com

Signature of representative

# | C1150 | USER GUIDE

Please read this manual carefully  
before operating your mobile phone.  
Retain it for future reference.



# Table of Contents

<b>Introduction</b>	<b>5</b>	<b>General functions</b>	<b>18</b>
<b>Guidelines for safe and efficient use</b>	<b>6</b>	<b>Making and answering calls</b>	<b>18</b>
<b>C1150 Features</b>	<b>10</b>	Manner mode (Quick)	19
<b>Parts of the phone</b>	<b>10</b>	Signal strength	19
Open view	10	Entering text	19
Rear view	11	In-call menu	22
<b>Key description</b>	<b>12</b>	Multiparty or conference calls	23
<b>Display information</b>	<b>14</b>	Access codes	26
On-Screen icons	14	<b>Selecting functions and options</b>	<b>27</b>
<b>Getting started</b>	<b>15</b>	<b>Menu tree</b>	<b>28</b>
<b>Installing the SIM card and the battery</b>	<b>15</b>	<b>Messages</b>	<b>30</b>
Inserting the SIM card	15	Write text message	30
Removing the SIM card	15	Write multimedia message	31
Installing the battery	16	Inbox	32
Charging the battery	16	Outbox	33
Disconnecting the charger	17	Drafts	34
		Listen to voice mail	35
		Info message	35
		Templates	36
		Settings	37

<b>Call register</b>	<b>41</b>	<b>Organiser</b>	<b>54</b>
Missed calls	41	Alarm clock	54
Received calls	41	Scheduler	54
Dialled calls	41	Phonebook	55
Delete recent calls	42		
Call charges	42	<b>Fun &amp; Tools</b>	<b>59</b>
GPRS information	43	Favorites	59
		Games	59
<b>Profiles</b>	<b>44</b>	Calculator	59
Changing the profile	44	My folder	60
Customising profiles - Personalise	44	Unit converter	60
Customising profiles - Rename	45	World time	60
		Voice recorder	61
<b>Settings</b>	<b>46</b>	Memory status	61
Date & Time	46		
Phone settings	46		
Call settings	47		
Security settings	50		
Network settings	52		
GPRS setting	52		
Reset settings	53		

<b>Internet</b>	<b>62</b>
Home	62
Bookmarks	62
Profiles	62
Go to URL	64
Cache settings	64
Cookies settings	64
Security certification	64
Reset profiles	64
Browser version	64
<b>On browsing menu</b>	<b>65</b>
<b>Java</b>	<b>66</b>
Applications	66
Download	66
Profiles	66
<b>Accessories</b>	<b>67</b>
<b>Technical data</b>	<b>68</b>

# Introduction

Congratulations on your purchase of the advanced and compact C1150 cellular phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

# Guidelines for safe and efficient use

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model C1150 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.676 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

## Product care and maintenance

*Warning! Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.*

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliance such as a TV, radio or personal computer.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.

- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

## Fuse replacement

Always replace a blown fuse with a fuse of the same type and size. Never use a fuse of a higher rating.

## Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- ▶ Hold the phone as you speak to any other telephone.
- ▶ If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

## Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

**Check the laws and regulations on the use of mobile phones in the areas when you drive.**

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

**Wireless devices can cause interference in aircraft.**

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

## Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care


- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.

- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.


# C1150 Features

## Parts of the phone

### Open view

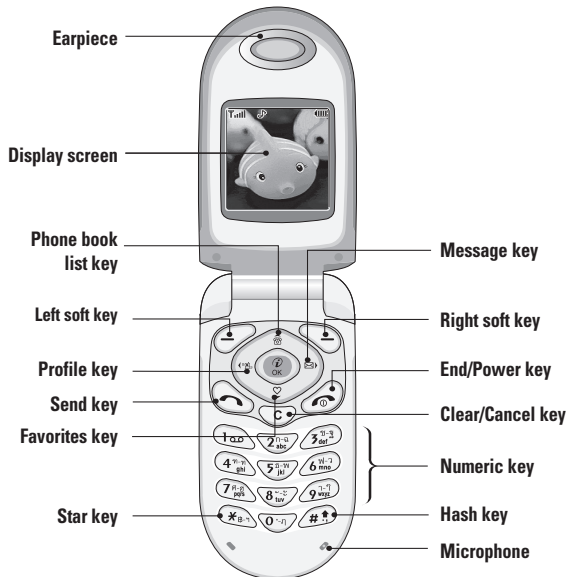



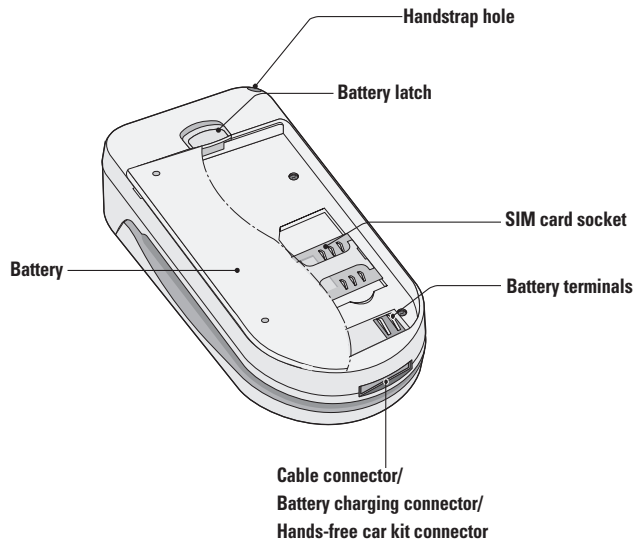



## Rear view


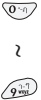







## Key description


The following shows key components of the phone.

### Keypad description

Key	Description
	<p><b>Left soft key / Right soft key</b></p> <p>Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p><b>Navigation keys</b></p> <p>Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions.</p> <ul style="list-style-type: none"> <li>Up navigation key (): A shortcut key to search the phonebook.</li> <li>Down navigation key (): A shortcut key to the Favorites menu.</li> <li>Left navigation key (): A shortcut key to the Profile menu.</li> <li>Right navigation key (): A shortcut key to the message inbox.</li> </ul>

Key	Description
	<p><b>Send Key</b></p> <p>You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed numbers.</p>
	<p><b>Numeric keys</b></p> <p>These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode.</p> <p>When you press these keys for a long time.</p> <ul style="list-style-type: none"> <li>Used to call your voicemail box by .</li> <li>Used to call for international call by .</li> <li>Used to call Speed dials by from  to .</li> </ul>
	<p><b>END/PWR key</b></p> <p>Used to end or reject a call. This key is also used as Power Key by pressing this key for a few seconds.</p>


---

Key	Description
	<b>Clear key</b> Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen. In addition, you can view voice memo list when you press this key shortly in a standby mode.

---

## Side keys

---











Key	Description
	<b>Up/Down side keys</b> When you open the flip, you can control the volume of key tone in the standby mode and the volume during a call.









---

## Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

### On-Screen icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – if you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received a push message.

Icon/Indicator	Description
	You can view your schedule.
	All audible signals are turned off.
	General profile is activated.
	Loud profile is activated.
	Silent profile is activated.
	Headset profile is activated.
	Car profile is activated.
	You can divert a call.

## Installing the SIM card and the battery

### 1. Inserting the SIM card

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down.



### 2. Removing the SIM card

Follow the steps below to Remove the SIM card.

1. Remove the battery if attached.
2. Take out the SIM card from the slot.




### Notice

- ▶ Removing the battery from the phone whilst it is switched on may cause it to malfunction.
- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.

# Getting started

## 3. Installing the battery

1. Position the lugs on the bottom of the battery into the retaining holder.

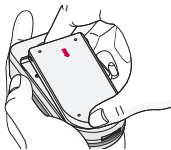


2. Then push the half of the battery into position.




## 4. Charging the battery

To connect the travel adapter to the phone, you must have installed the battery.

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.

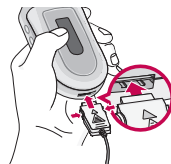

2. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.

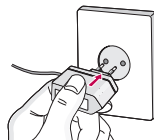

## Warning

- ▶ Do not force the connector as this may damage the phone and/or the travel adapter.

## Note

- ▶ “Charging” is displayed on the screen after connecting the travel adapter. If the battery is totally discharged, it may take a few minutes before this appears.

## 5. Disconnecting the charger

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.



## Note

- ▶ Ensure the battery is fully charged before using the phone.
- ▶ Do not remove your battery or the SIM card while charging.
- ▶ The moving bars of battery icon will stop when charging is completed.




## Note

- ▶ In case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. Or try recharging the battery after detaching and reattaching the battery.



# General functions

## Making and answering calls



### Making a call


1. Key in phone number including the area code.  
If you want to delete number, press .
2. Press  to call the number.
3. Press  to end the call.

### International calls


1. Press and hold the  key for the international prefix. “+” character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

### Making a call using the phonebook

1. In standby mode, press  [Names].
2. When the menu is displayed, select Search by pressing .

3. If you find out the desired item through searching by name or a number, press  to call.

### Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

#### Note


- ▶ In standby mode, pressing the side keys adjusts the key tone volume.


### Answering a call

When you receive a call, the phone rings. If the caller can be identified, the caller's phone number (or name if saved in the phonebook) is displayed.


1. To answer an incoming call, open the phone.  
(When Flip open has been set as the answer mode. See page 48 (Menu 4.3.2).)

#### Note


- ▶ If Press any key has been set as the answer mode (see page 48), any key press will answer a call except for the  or the right soft key.

- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.
  - ▶ You can answer a call while using the phonebook or other menu features.
2. To end the call, close the phone or press the  key.

## Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

## Signal strength

You can check the strength of your signal by the signal indicator (  ) on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

## Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the

phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.


### T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

### ABC Mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.


### 123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

# General functions

## Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.

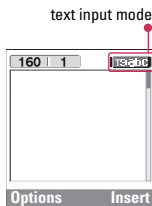




2. Change the text input mode by pressing . You can check the current text input mode in the upper right corner of the LCD screen.

### ► Using the T9 mode


The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.
  - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
  - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

**Example:** Press to type **Good**.  
Press [down navigation key] to type **Home**.
  - If the desired word is missing from the word choice list, add it using the ABC mode.
  - You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.




3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down  to erase entire words.

### Note

- ▶ To exit from the text input mode without saving your input, press . The phone goes back to standby mode.











### ▶ Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
  - ▶ Once for the first letter
  - ▶ Twice for the second letter.
  - ▶ And so on.
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

### Note

- ▶ Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	A B C 2 Ä Å Á Â Ã Ä Å Æ Ç	a b c 2 ä å á â ã ä å æ ç
	D E F 3 È É Ê Ë	d e f 3 è é ê ë
	G H I 4 Ì Í Î Ï	g h i 4 ì í î ï
	J K L 5	j k l 5
	M N O 6 Ñ Ò Ó Ô Õ Ö Ø	m n o 6 ñ ò ó ô õ ö ø
	P Q R S 7 ß Š	p q r s 7 ß š
	T U V 8 Û Ü Ú Û	t u v 8 ù ú û ü
	W X Y Z 9	w x y z 9
	Space 0	Space 0

### ▶ Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).



Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## In-call menu

The menu displayed on the handset screen during a call is different to the default main menu reached from the idle screen, and the options are described here.



## During a call

### Putting a call on hold



When a call is made or answered, press the  [Send] to place it on hold. When a call is held, press the  [Send] to make it active.


### Making a second call

You can get a dial number from phonebook to make a second call.


Press  [Names] then select **Search**. To save the dial number into phonebook during call, press  [Names] then select **Add new**.

### Swapping between two calls



To switch between two calls, select  [Options], then select **Swap** or just press  [Send] key.


You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press  [End] key when the call you want to end is focused.

### Answering an incoming call



To answer an incoming call when the handset is ringing, simply press the  [Send] key.



The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting (Menu 4.3.4).

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing  [Send] or by selecting  [Answer], then **Hold & Answer**.



You can end the current call and answer the waiting call by selecting  [Menu], then **End & Answer**.

## Rejecting an incoming call

When not in a call you can reject an incoming call without answering it by simply pressing the  [End] or  for a long time when the flip is closed.


When in a call you can reject an incoming call by pressing the  [Menu] key and selecting **Multiparty / Reject** or by pressing  [End] key.

## Muting the microphone


You can mute the microphone during a call by pressing the  [Options] key then selecting **Mute**. The handset can be unmuted by pressing the  [Unmute].

When the handset is muted, the caller cannot hear you, but you can still hear them.

## Switching DTMF tones on during a call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select  [Options], then **DTMF On**. DTMF tones can be turned off the same way.

## Calling up messages and SIM tool kit main menu

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting  [Options]. SIM Tool kit menu is shown only when SIM in the handset supports SIM Tool kit service.



## Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.


A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call.

The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.

### Making a second call

You can make a second call while you are already in a call. To do this, enter the second number and press  [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting  [Options] then **Swap**.

### Setting up a multiparty call

You can connect a call on hold to the currently active call to form a multiparty call by selecting  [Options] then **Multiparty / Join all**.


### Putting the multiparty call on hold

To put a multiparty call on hold, select  [Options] then **Multiparty / Hold all**.



### Activate the multiparty call on hold

To make a multiparty call on hold active, select  [Options] then **Multiparty / Join all**.


### Adding calls to the multiparty call

To join an active call to the held multiparty call, select  [Options] then **Multiparty / Join all**.


### Displaying callers in a multiparty call

To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.



### Putting a member of a multiparty call on hold


To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select  [Options] then **Multiparty / Exclude**.

### A private call in a multiparty call

To have a private call with one caller of a multiparty call, display the number of the caller you wish to talk to on the screen, then select  [Options] and **Multiparty / Private** to put all the other callers on hold.

## Ending a multiparty call

The currently displayed caller of a multiparty call can be disconnected by pressing the  [End] key. To end a multiparty call, press  [Options] then select **Multiparty / End** multiparty.

Selecting  [Options] then **Multiparty / End all**, will end all the active and on-hold calls.

## General functions

### Access codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using (Menu 4.4.5).

### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code** is set **On**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code** is set **Off**, your phone connects to the network directly without the request PIN code.

### PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

### PUK code (4 to 8 digits)

The PUK (PIN Unlocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

### PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.


### Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate "Reset settings" menu. The default number is "0000".

# Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked (☞) and (☛). Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

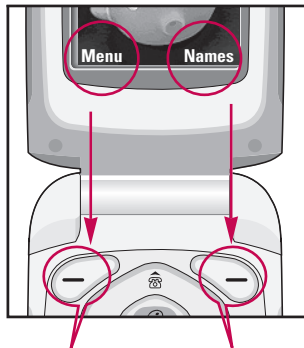

Press the left soft key to access the available menu.

Press the right soft key to activate the corresponding action.

# Menu tree

## 1. Messages

- 1.1 Write text message
- 1.2 Write multimedia message
- 1.3 Inbox
- 1.4 Outbox
- 1.5 Drafts
- 1.6 Listen to voice mail
- 1.7 Info message
- 1.8 Templates
- 1.9 Settings

## 2. Call register

- 2.1 Missed calls
- 2.2 Received calls
- 2.3 Dialed calls
- 2.4 Delete recent calls
- 2.5 Call charges
- 2.6 GPRS information

## 3. Profiles

- 3.1 Vibrate only
- 3.2 Quiet
- 3.3 General
- 3.4 Loud
- 3.5 Headset
- 3.6 Car

## 4. Settings

- 4.1 Date & Time
- 4.2 Phone settings
- 4.3 Call settings
- 4.4 Security settings
- 4.5 Network settings
- 4.6 GPRS setting
- 4.7 Reset settings

## 5. Organiser

- 5.1 Alarm clock
- 5.2 Scheduler
- 5.3 Phonebook

## 6. Fun & Tools

- 6.1 Favorites
- 6.2 Games
- 6.3 Calculator
- 6.4 My folder
- 6.5 Unit converter
- 6.6 World time
- 6.7 Voice recorder
- 6.8 Memory status

## 7. Internet

- 7.1 Home
- 7.2 Bookmarks
- 7.3 Profiles
- 7.4 Go to URL
- 7.5 Cache settings
- 7.6 Cookies settings
- 7.7 Security certification
- 7.8 Reset profiles
- 7.9 Browser version

## 8. Java

- 8.1 Applications
- 8.2 Download
- 8.3 Profiles

## 9. SIM Service

This menu depends on SIM and the network services.



# Messages

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

## Write text message

Menu 1.1



You can write and edit text message, checking the number of message pages.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write text message**.
3. To make text input easier, use T9. For details, refer to page 19 through 21 (Entering text).
4. Press [Insert] to attach the followings.
5. If you want to set option for your text, or to finish your writing, press  [Options].

### Note

- ▶ *The phone which supports EMS release 5 is available to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.*

## Options


- ▶ **Send:** Sends text messages.
  1. Enter numbers of recipient.
  2. Press  key to add more recipients.
  3. You can add phone numbers in the phonebook.
  4. Press  after entering numbers.
- ▶ **Save:** Stores messages in Drafts.
- ▶ **Font:** You can select **Size** and **Style** of fonts.
- ▶ **Colour:** You can select **Colour** of foreground and background.
- ▶ **Alignment:** You can make the message contents aligned **Left**, **Centre** or **Right**.
- ▶ **Add T9 dictionary:** You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** If you press **Exit** while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.

## Insert

- ▶ **Symbol:** You can add special characters.
- ▶ **Picture:** You can insert the **Default** graphics or graphics in **My pictures** that are available for text messages.
- ▶ **Sound:** You can insert sounds that are available for text messages.
- ▶ **Text templates:** You can use **Text templates** already set in the phone.
- ▶ **Phonebook:** You can add phone numbers or e-mail addresses in **Phonebook**.
- ▶ **Signature:** You can add your signature to the message.

## Write multimedia message Menu 1.2

You can write and edit multimedia messages, checking message size.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write multimedia message**.

3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add **Symbol, Picture, Sound, Text templates, Phonebook or Signature**.

## Options

- ▶ **Send:** You can send multimedia messages to multiple recipients, priorities your message, and make it sent later as well.
- ▶ **Preview:** You can preview multimedia messages you wrote.
- ▶ **Save:** You can save multimedia messages In drafts or as template.
- ▶ **Add slide:** You can add a slide before or after current slide.
- ▶ **Move to slide:** You can move to previous or next slide.
- ▶ **Delete slide:** You can delete the current slide.
- ▶ **Set slide format**
  - **Set timer:** You can set timer for slide, text, picture and sound.

# Messages

- Swap text and picture: You can switch the position of picture and text of the message.

- ▶ **Remove media:** You can remove pictures or sounds in the slide. This option can be shown only when any media exists.
- ▶ **Add T9 dictionary:** You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.
- ▶ **T9 languages:** Select the language for T9 input mode.
- ▶ **Exit:** You can back to the Message menu.

## Note

- ▶ *If you select the picture (15K) on writing multimedia message, loading duration will take around 15 seconds at least. Furthermore, you can't activate any key during loading time. After 15 seconds, it is available to write multimedia message.*






## Inbox

Menu 1.3

You will be alerted when you have received messages. They will be stored in Inbox.

In Inbox, you can identify each message by icons. For detail, see the icon directive.

### ▶ Icon directive


Icon	Description
	Multimedia message
	Short message
	SIM message
	Read
	Notified multimedia message

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

## Note

- ▶ **SIM message:** SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message. For notification setting, see (Menu 1.9.2) for detail.

To read a message, select one of the messages by pressing .







- ▶ **View:** You can view the selected message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Delete:** You can delete the current message.
- ▶ **Extract:** You can extract picture, sound and text. They will be saved in My folder or Phonebook.
- ▶ **View information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Reply (applicable to Multimedia message only):** You can replay multimedia messages.
- ▶ **Receive (In the case of notification message):** If Multimedia message is set to Auto download off,

you can get only Notification. To receive a message, you need to select [Receive].


## Outbox

Menu 1.4

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.


Icon	Description
	MMS sent
	MMS unsent
	MMS delivery confirmed
	SMS sent
	SMS unsent
	SMS delivery confirmed

In each message, the following options are available by pressing the left soft key [Options].

 **The messages of which transmission was completed has the following options.**

- ▶ **View:** You can view the selected message.
- ▶ **Forward:** You can forward the selected message to other recipients.

- ▶ **Delete:** Deletes the selected message from outbox.
- ▶ **View Information:** You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.
- ▶ **Delete all:** Deletes all the messages in the outbox folder.

 **The messages of which transmission is in progress has the following options.**



- ▶ **View:** You can view the selected message.
- ▶ **Send:** Select this to send it again.
- ▶ **Cancel:** Cancels transmitting of the message.
- ▶ **Delete:** Cancels transmitting the message and deletes the message.
- ▶ **View Information:** You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.
- ▶ **Send all:** Sends all the messages of which transmission is in progress again.


- ▶ **Cancel:** Cancels all the message transmission.
- ▶ **Delete all:** Cancels all the message transmission and deletes all of them.

## Drafts

Menu 1.5

You can view the messages saved as a draft. The draft messages are listed with the date and time when they were saved. Scroll through the list using up/down navigation keys.

Icon	Description
	Multimedia message
	Text message

Each draft has the following options. Press  [Options].


- ▶ **View:** You can view the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Send:** Select this to send the selected message.
- ▶ **Delete:** Deletes the selected message from the drafts folder.

- ▶ **View information:** You can view the information of selected message: subject (only for multimedia message), the date and time when saved, message type and size, the priority (only for multimedia message).
- ▶ **Delete all:** Deletes all the messages from drafts folder.

## Listen to voice mail

Menu 1.6

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

When new voice message is received, the  symbol will be displayed on the screen. Please check with your service operator for details of their service in order to configure the handset correctly.

## Info message




Menu 1.7

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of

information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;


## Read

(Menu 1.7.1)

When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling (, ) or  [Next].

## Topics

(Menu 1.7.2)

- ▶ **Add new:** You can add Info service message numbers in the Phone memory with its nickname.
- ▶ **View list:** You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.

- ▶ **Active list:** You can select Info service message numbers in the active list.  
If you activate an info service number, you can receive messages sent from the number.

## Templates

Menu 1.8

After creating some templates (text, multimedia, signature), you can use them by just selecting them when you send messages.

## Text templates

(Menu 1.8.1)

The followings are pre-defined text templates.

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I'm on the way.**
- **Top urgent. Please contact.**
- **I love you.**

The following options are available.

- ▶ **View:** Select this to view the selected template.
- ▶ **Edit:** Use this to edit the selected template.
- ▶ **Write messages**
  - **Write text message:** Use this to send the selected template message by SMS.
  - **Write multimedia message:** Use this to send the selected template message by MMS.
- ▶ **Add new:** Use this to create a new template.
- ▶ **Delete:** Deletes the selected template from the text template list.
- ▶ **Delete all:** Deletes all templates.

## Multimedia templates

(Menu 1.8.2)

You can create a multimedia template after pressing the left soft key [Add new]. And the multimedia templates you saved as a template while creating a multimedia message in the **Write multimedia message** (See page 31).

- ▶ **View:** You can view the multimedia template.
- ▶ **Edit:** You can edit the multimedia template.

- ▶ **Add new:** Allows you to add a new multimedia template.
- ▶ **Write messages:** You can write a multimedia message with the multimedia template.
- ▶ **Delete:** Deletes the selected template message from the multimedia template list.
- ▶ **Delete all:** Clears the multimedia template list.

## Signature

(Menu 1.8.3)

1. Press the left soft key [Edit].
2. After keying in the name, press the left soft key [OK].
3. Key in the mobile phone number, home number, office number, fax number, and E-mail address.
4. Press the left soft key [Save].

After creating the signature template, you can access the following menus by pressing the left soft key [Options].

- ▶ **Edit:** Use this to edit the signature.
- ▶ **Write messages:** You can send your business card via SMS, MMS or Bluetooth.

- ▶ **Delete:** Use this to delete the signature.

## Settings

Menu 1.9

### Text message

(Menu 1.9.1)

- ▶ **Message types:**

Text, Voice, Fax, Natl. paging, X.400, Email, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.
- ▶ **Reply via same service centre:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- ▶ **SMS centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.

## Multimedia message (Menu 1.9.2)

- ▶ **Priority:** You can send the message after setting the level of priority: Low, Normal and High.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.
- ▶ **Auto download**
  - On:** The messages are downloaded automatically on receipt.
  - Off:** Requires you to confirm you want to download the message.
  - Home network only:** If you select this, messages are downloaded automatically on receipt in your home network area. And outside your home service area, it requires you to confirm you to download the message.

- ▶ **Network settings:** In order to download MMS from the server, you need to set up a CSD or GPRS data connection. If you select multimedia message server, you can set URL for multimedia message server. You can set over 5 profiles to connect service.

- **Homepage:** This menu allows to connect MMS centre (MMSC).

- **Bearer**
  - Data
  - GPRS

- **Data settings:** Shown if you select Data as the Bearer.

### IP address

**Dial number:** Enter the telephone number to dial to access your WAP gateway.

### User ID

### Password

**Call type:** Select the type of data call, Analogue or Digital (ISDN).

**Call speed:** The speed of your data connection 9600 or 14400.

**Linger time:** You need to enter the time-out period. After that, the WAP navigation service will be unavailable if any data is not input or transferred.

- **GPRS settings:** Shown if you select GPRS as the Bearer.

IP address

APN: Insert APN (Access Point Name) of GPRS.

User ID

Password

- **Connection type:** The options for connection type are Temporary or Continuous.
- **Secure settings:** Depending on the chosen gateway port, you can select this option On or Off.


#### ▶ Permitted types

- **Personal:** Personal message.
- **Advertisements:** Commercial message.
- **Information:** Necessary information.

## Voice mail centre

(Menu 1.9.3)

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

- ▶ **Home:** You can listen to voice mails by selecting Home.
- ▶ **Roaming:** Even when you are in abroad, you can listen to voice mails if roaming service is supported.

## Info service

(Dependent to network and subscription) (Menu 1.9.4)

#### ▶ Receive

- **Yes:** If you select this menu, your phone will receive Info service messages.
- **No:** If you select this menu, your phone will not receive Info service messages any more.

# Messages

## ▶ Alert

- **Yes:** Your phone will beep when you have received Info service message numbers.
- **No:** Your phone will not beep even though you have received info service messages.

## ▶ Languages

- You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

## Push messages

(Menu 1.9.5)

You can set the option whether you will receive the message or not.

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

## Missed calls

Menu 2.1

This option lets you view the last 10 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

### Note

- ▶ *You can delete all the call records from the list using the Delete recent calls menu (Menu 2.4).*

## Received calls

Menu 2.2

This option lets you view the last 10 incoming calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

You can delete all the call records from the list using the Delete recent calls menu [Menu-2-4].

## Dialed calls

Menu 2.3

This option lets you view the last 20 outgoing calls (called or attempted).

You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.

# Call register

- ▶ Send a message to this number.
- ▶ Delete the call from the list.

## Note

- ▶ You can delete all the call records from the list using the *Delete recent calls menu (Menu 2.4)*.

## Delete recent calls

Menu 2.4

Use this to clear up the missed call list, received call list, or dialled call list. You can also clear up all call lists at a time by selecting **All calls**.

## Call charges

Menu 2.5

## Call duration

(Menu 2.5.1)

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timer by selecting **Reset all**. To prevent accidental reset, the phone asks you to confirm the action.

- ▶ **Last call**: Length of the last call.
- ▶ **All calls**: Total length of all calls made and incoming calls since the timer was last reset.

- ▶ **Received calls**: Length of the incoming calls.
- ▶ **Dialled calls**: Length of the outgoing calls.
- ▶ **Reset all**: Resets the call timer.

## Call costs

(Menu 2.5.2)

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to enter the PIN2 code.

## Settings

(Menu 2.5.3)

### (SIM Dependent)

- ▶ **Set tariff**: You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Set credit**: This network allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your change limit.

- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the cost of the last call when the call is released.

## GPRS information Menu 2.6

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

## Call duration (Menu 2.6.1)

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

## Data volumes (Menu 2.6.2)

You can check the **Sent**, **Received** or **All** data volumes and **Reset all**.

# Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are six preset profiles: **Vibrate only**, **Quiet**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised.

Press the left soft key **[Menu]** and select **Profiles** using left/right navigation keys.

## Changing the profile

Menu 3.X.1

1. A list of profiles is displayed.
2. In the **Profiles** list, scroll to the profile you want to activate and press the left soft key **[Select]** or **OK** key.
3. Then, select **Activate**.

### Note

- ▶ *When a headset is connected to the phone, Headset profile is automatically activated.*

## Customising profiles – Personalise

Menu 3.X.2

You can customise profiles except Vibrate only. Scroll to the desired profile in the Profile list. After pressing the left soft key or the OK key, select **Personalise**. The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ring tone.
- ▶ **Message alert type:** Set the alert type for message receipt.
- ▶ **Message tone:** Select the alert tone for message receipt.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Flip tone:** Allows to set the flip tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.

- ▶ **Power on/off volume:** Set the volume of the ring tone when switching the phone on/off.
- ▶ **Auto answer:** This function will be activated only when your phone is connected to the headset.
  - **Off:** The phone will not answer automatically.
  - **After 5 secs:** After 5 seconds, the phone will answer automatically.
  - **After 10 secs:** After 10 seconds, the phone will answer automatically.

2. Key in the desired name and press the OK key or the left soft key [OK].

## Customising profiles – Rename

Menu 3.X.3

You can rename a profile and give it any name you want.

### Note

- ▶ *Vibrate only, Headset and Car profiles cannot be renamed.*

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the left soft key or the OK key, select **Rename**.

# Settings

You can set the following menus for your convenience and preferences.

## Date & Time

Menu 4.1

You can set functions relating to the date and time.

### Set date

(Menu 4.1.1)

You can enter the current date.

### Date format

(Menu 4.1.2)

You can set the Date format such as **DD/MM/YYYY**, **MM/DD/YYYY**, **YYYY/MM/DD**.  
(D: Day / M: Month / Y: Year)

### Set time

(Menu 4.1.3)

You can enter the current time.

### Time format

(Menu 4.1.4)

Your can set the time format between 24-hour and 12- hour.

## Phone settings



Menu 4.2

You can set functions relating to the phone.

## Wallpaper

(Menu 4.2.1)

You can select the background pictures in standby mode.

- **Default:** You can select a picture or an animation of wallpaper by pressing (  or  ).
- **My folder:** You can select a picture or an animation as wallpaper.

## Greeting note

(Menu 4.2.2)

If you select **On**, you can edit the text which is displayed in standby mode.

## Language


(Menu 4.2.3)

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

## Backlight (Menu 4.2.4)

You can set the light-up duration of the internal display.

## LCD contrast (Menu 4.2.5)

You can set the brightness of LCD by pressing .

## Information window (Menu 4.2.6)

You can preview the current state of the selected menu before open the menu. The state is shown at bottom of the display.

## Menu colour (Menu 4.2.7)

You can select the preferred menu colour among various combination.


## LED indicator (Menu 4.2.8)

When the LED indicator is set to On, it flashes when the service is available.

## Network name (Menu 4.2.9)

If you select on, you can see the network service provider name which is displayed in standby mode.

## Call settings Menu 4.3

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

## Call divert (Menu 4.3.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- ▶ **All voice calls:** Diverts voice calls unconditionally.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.
- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection unconditionally.

- ▶ **All fax calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel all:** Cancels all call divert service.



## The submenus

Call divert menus have the submenus shown below.

- ▶ **Activate:** Activate the corresponding service.
  - **To voice mail centre:** Forwards to message centre. This function is not shown at All data calls and All fax calls menus.
  - **To other number:** Inputs the number for diverting.
  - **To favourite number:** You can check recent 5 diverted numbers.
- ▶ **Cancel:** Deactivate the corresponding service.
- ▶ **View status:** View the status of the corresponding service.

## Answer mode

(Menu 4.3.2)

- ▶ **Flip open**  
If you select this menu, you can receive an incoming call when only opening flip.
- ▶ **Press any key**  
If you select this menu, you can receive a call by pressing any key except  [End] key.
- ▶ **Send only**  
If you select this menu, you can receive a call by only pressing  [Send] key.

## Send my number

(Menu 4.3.3)

### (network and subscription dependent)

- ▶ **On**  
You can send your phone number to another party. Your phone number will be shown on the receiver's phone.
- ▶ **Off**  
Your phone number will not be shown.

▶ **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

**Call waiting (network dependent)** (Menu 4.3.4)

The network will notify you of a new incoming call while you have a call in progress. Select Activate to request the network to activate call waiting, Cancel to request the network to deactivate call waiting, or View status, to check if the function is active or not.

**Minute minder** (Menu 4.3.5)

If you select On, you can check the call duration by deep sound every minute during a call.

**Auto redial** (Menu 4.3.6)

▶ **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

▶ **Off**

Your phone will not make any attempts to redial when the original call has not connected.

**Closed user group (network dependent)** (Menu 4.3.7)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

- ▶ **Default** : Activate the default group agreed on with the network operator.
- ▶ **Set** : Setting the selected CUG Index.
- ▶ **Edit** : Editing the CUG name and CUG Index.
- ▶ **Delete** : Deleting the selected CUG.
- ▶ **Delete all** : Deleting All CUG.


## Security settings

MENU 4.4

### PIN code request

(Menu 4.4.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [Select].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

## Phone lock

(Menu 4.4.2)

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.

## Call barring

(Menu 4.4.3)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- ▶ **All outgoing**  
The barring service for all outgoing calls.
- ▶ **Outgoing international**  
The barring service for all outgoing international calls.
- ▶ **Outgoing international except home country**  
The barring service for all international outgoing calls except home network.

▶ **All incoming**

The barring service for all incoming calls

▶ **Incoming when abroad**

The barring service for all incoming calls when roaming

▶ **Cancel all**

You can cancel all barring services.

▶ **Change password**

You can change the password for Call Barring Service.

Each call barring menu has following submenus:

• **Activate**

Allows to request the network to set call restriction on.

• **Cancel**

Sets the selected call restriction off.

• **View status**

You can view the status whether the calls are barred or not.

## Fixed dial number (SIM dependent)

(Menu 4.4.4)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

▶ **Activate**

You can restrict your outgoing calls to selected phone numbers.

▶ **Cancel**

You can cancel fixed dialling function.

▶ **Number list**


You can view the number list saved as Fixed dial number.

## Change codes

(Menu 4.4.5)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **PIN code**, **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN2 code and verify them.

## Network settings

Menu 4.5

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.

### Automatic

(Menu 4.5.1)

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

### Manual

(Menu 4.5.2)

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator.

The phone lets you select another network if the phone fails to access the selected network.

## Preferred

(Menu 4.5.3)

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone’s predefined list of known networks.

## GPRS setting

Menu 4.6

You can set GPRS service depending on various situation.

## Power on

(Menu 4.6.1)

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

## When needed

(Menu 4.6.2)

If you select this menu, the GPRS connection is established when you connect a WAP service and closed when you end the WAP connection.

## Reset settings

Menu 4.7



You can initialize all factory defaults. You need Security code to activate this function.

# Organiser

## Alarm clock

Menu 5.1





You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon~Fri, Mon~Sat, Everyday.**
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].


## Scheduler

Menu 5.2

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using navigation keys. On the calendar, you can use the following keys.

Each press of		skips back a year.
		skips forward a year.
		skips back a month.
		skips forward a month.

You can enter a schedule or memo in the scheduler by pressing the left soft key [Options].

- ▶ **Add new:** Select this to enter a new schedule or memo. After a schedule note is entered on a date, the date is shown in a different colour and  appears on the right bottom of the screen. This function reminds you of your schedule. And the phone will sound an alarm tone if you set the phone to do so.
- ▶ **View:** Shows the schedule note or memo for the chosen day. Press the left soft key [Options] to edit or delete the note you selected.
- ▶ **View all:** Shows all the notes that are entered in the phone. Use the up/down navigation keys to browse through the note lists.
- ▶ **Delete past:** Select this to delete the expired schedule notes that have already been notified. You are asked to confirm this action.
- ▶ **Delete all:** Select this to delete all the schedule notes and memos. You are asked to confirm this action.




## Phonebook


Menu 5.3

### Search

(Menu 5.3.1)

(Calling from phonebook)

1. In standby mode, press  [Names].
2. **Search** by pressing  [Select].
3. Enter the name whose phone numbers or e-mail address you want to search or Select 'List' to view phonebook.
4. Instant searching is available by inputting the initial letter of the name or number you want to search.
5. If you want to edit, delete, copy an entry, or to add the voice to one, select  [Options]. The following menu will be displayed.

- ▶ **Edit:** You can edit the name, number, E-mail and fax by pressing  [OK].
- ▶ **Write message:** After you have found the number you want, you can send a message to the selected number.

▶ **Copy:** You can copy an entry from SIM to phone or from phone to SIM.

▶ **Main number:** You can select the one out of mobile, home, office that you often use. The main number will be displayed first, if you set this.



▶ **Delete:** You can delete an entry.








### Add new

(Menu 5.3.2)

You can add phonebook entry by using this function. Phone memory capacity is 200 entries. SIM card memory capacity depends on the cellular service provider.

You can also save 20 characters of name in The Phone memory, and save characters in the SIM card. The number of character is SIM dependent feature.




1. Open the phonebook first by pressing  [Names] in standby mode.
2. Scroll to highlight **Add new**, and press  [Select].
3. Select the memory you want to save: **SIM** or **Phone**. If you set to Phone, you need to select which number you want as Main number.

- Press  [OK] to input a name.
- Press  [OK], then you can input a number.
- Press  [OK].
- You can set a group for the entry by pressing :
- You can set a character and a picture for the entry by pressing , , .

## Caller groups

(Menu 5.3.3)



You can list up to 20 members per one group. There are 7 groups you can make lists to.



- In standby mode, press  [Names].
  - Scroll to Caller groups item then press  [Select], and every Group list will be displayed.
  - Select Group name you want by pressing  [Select].
- ▶ **Member list:** Shows the group members you have selected.
  - ▶ **Group ring tone:** Allows you to specify ring tone for the group members' call.

- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Add member:** You can add group members. Each group member shouldn't be exceeded 20.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number still remain in phonebook.
- ▶ **Rename:** You can change a group name.

## Speed dial

(Menu 5.3.4)





You can assign any of the keys,  to  with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

- Open the phonebook first by pressing  [Names] in standby mode.
  - Scroll to **Speed dial**, then press  [Select].
  - If you want to add Speed dial, select **(Empty)**. Then, you can search the name in phonebook.
  - Select allocated a name by speed dial, and choose **Change** or **Delete** to edit the name.
- ▶ **Change:** You can allocate a new phone number to the dial key.


- ▶ **Delete:** You can remove the allocated phone number from the dial key.

## Settings

(Menu 5.3.5)

1. Press  [Names] in standby mode.
2. Scroll to Settings, then press  [Select].
  - ▶ **Set memory**  
Scroll to highlight Set memory, then press  [Select].
    - If you select Variable, when adding entry, the phone will ask where to store.
    - If you select SIM or Phone, the phone will store an entry to SIM or phone.
  - ▶ **Search by**  
Scroll to highlight Search by, then press  [Select].
    - If you select Variable, the phone will ask how to search.
    - If you select Name or Number, the phone will search an entry by Name or Number.

## ▶ View options



Scroll to highlight View options, then press  [Select].

- **Name only:** When you search the phonebook, the list displays only names.
- **With pictures:** When you search the phonebook, the list displays names and corresponding pictures.
- **Name & number:** When you search the phonebook, the list displays names and number.

## Copy all

(Menu 5.3.6)


You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing  [Names] in standby mode.
2. Scroll to **Copy all**, then press  [Select] to enter this menu.
  - ▶ **SIM to Phone:** You can copy the entry from SIM Card to Phone memory.

- ▶ **Phone to SIM:** You can copy the entry from Phone memory to SIM Card.
- 3. You can see the following submenus.
  - ▶ **Keep original:** When copying, Original Dial Number is kept.
  - ▶ **Delete original:** When copying, Original Dial Number will be erased.

## Delete all

(Menu 5.3.7)


You can delete all entries in the SIM and/or the phone. This function requires the security code. Press  to return to standby mode.


## Information

(Menu 5.3.8)




### ▶ Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing  [Names] in standby mode and select **Information**.

2. Scroll to **Service dial number**, then press  [Select] to enter.

3. The names of the available services will be shown.

4. Use  and  to select a service. Press  [Send].

### ▶ Memory status


This feature allows you to see how many free and in-use are in your phonebook.

### ▶ Own number (SIM dependent)

You can check your own number in SIM card.

## Favorites

Menu 6.1

You can set up to 9 menus which you have used often in Favorites. You can connect this menu directly by pressing the hot key ()

If you want to register the menu in favorites, select <Empty> on a list. If the menu is already registered, the options are displayed as follows:

- ▶ **Select:** Activate the registered menu.
- ▶ **Change:** Change the menu.
- ▶ **Delete:** Delete the registered menu.
- ▶ **Delete all:** Delete all menus which are registered in Favorites.
- ▶ **Information:** View the information of registered menu.

## Games


Menu 6.2

The phone offers you the games to play with.

### Note

- ▶ *The control keys are different depending on a game. However, each one has an introduction to explain the main control keys. The rest ones are as follows.*

## Common Key Function

 : Back : Pause or resume a game




## Calculator

Menu 6.3

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.

### Note

- ▶ To erase any mistake or clear the display, use the  key.
  - ▶ To include a decimal point, press the  key.
  - ▶ To include a minus sign, press the  key.
3. To calculate the result, press the left soft key [Result] or OK key.
  4. After calculation, press the left soft key [Reset] to return to the initial state.

## My folder

Menu 6.4

Enables you to view the downloaded pictures and sounds. They can be set as Wallpaper or Ring tone. You can view, listen, delete or rename downloaded data.

## Pictures

(Menu 6.4.1)

## Sound

(Menu 6.4.2)







## The Submenus for each main one

- ▶ **Rename:** You can edit the title for each download contents.
- ▶ **Write text/multimedia message:** You can write Text message / Multimedia message (available depending on type of Media) with pictures or sounds.
- ▶ **Set as Wallpaper / Set as ring tone:** You can set downloaded sounds or pictures as wallpaper or Ring tone.
- ▶ **Delete:** You can delete each downloaded content.
- ▶ **Delete all:** You can delete all downloaded content.

## Unit converter

Menu 6.5




This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length, Area, Weight, and Volume.**

1. You can select one of four unit types by pressing  [Unit] key.
2. Select the standard value by using  .
3. Select the unit you want to convert by pressing  and .
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing .

## World time

Menu 6.6

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing   key.
2. You can set the current time to the city time you select by pressing  [Set].




## Voice recorder

Menu 6.7

The voice memo feature lets you record up to 10 voice messages and each memo is up to 20 Seconds.

### Record

(Menu 6.7.1)

1. You can record a voice memo in Voice recorder menu or by holding down  in the standby mode.
2. Once recording is started, the message 'Recording...' and the remaining time is displayed.
3. If you want to finish recording, press  [Save].
4. Key in Voice memo title, and press  [OK].

### View list

(Menu 6.7.2)

The phone shows the voice memo list, starting with the most recent memo. You can play or delete the recorded memo, or send it via MMS by pressing the left soft key [Options]. You can also delete all the voice memos.

## Memory status

Menu 6.8

You can check free space and the memory usage of each repository. You can go to each repository menu by pressing the left soft key [Goto].

# Internet

The phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather reports, and flight times.



## Home

Menu 7.1

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by Service Provider if you don't make in activated profile.

## Bookmarks


Menu 7.2

Press  [Select] to access available options, or press  [Back] to exit.

- ▶ **Connect:** Connect to the selected bookmark.
- ▶ **Add new:** Add a new bookmark manually.
- ▶ **Edit:** Edit the title and the address of the selected bookmark.
- ▶ **Delete:** Delete the selected bookmark from the bookmark list.
- ▶ **Delete all:** Delete all the selected bookmark from the bookmark list.

## Profiles

Menu 7.3

You can make up to 10 profiles and activate only one out of them. Scroll to the desired profile and press  to access available options.

- ▶ **Activate:** You can activate the profile you want.
- ▶ **Settings:** You can edit and change WAP settings of the selected profile.

**-Homepage:** This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type "http://" at the front of each URL as the WAP Browser will automatically add it.

**-Bearer:**

You can set the bearer data service.

- Data
- GPRS

**-Data settings :**

Appears only if you select Data settings as the Bearer.

**IP address :** Enter the IP address of the WAP gateway you want.

**Dial number** : Enter the telephone number to dial to access your WAP gateway.

**User ID** : The users identity for your dial-up server (and NOT the WAP gateway).

**Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.

**Call type** : Select the type of data call: Analogue or Digital (ISDN).

**Call speed** : The speed of your data connection; 9600 or 14400.

**Linger time** : You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

#### - GPRS settings

Shown if you select GPRS as the Bearer.

**IP address** : Input the IP address of the WAP gateway you access.

**APN** : Input the APN of the GPRS.

**User ID** : The users identify for your APN server.

**Password** : The password required by your APN server.

#### - Display image

You can select whether images on WAP cards are displayed or not.

#### - Connection type

The options for connection type are Temporary or Continuous and depend on the gateway you are using.

##### Continuous

A confirmed delivery mechanism but generates more network traffic.

##### Temporary

A non-confirmed (connectionless) service.

##### HTTP

Connecting Clients to Server directly in HTTP

#### - Proxy settings

**IP address**: Input the IP address of the proxy.

**Port**: Input the port number of the proxy.

#### - DNS settings

Insert the primary and secondary DNS if required by the network operator.

## - Secure settings

According to the used gateway port, you can choose this option as **On** or **Off**.

- ▶ **Rename:** Edit the Profile Name.
- ▶ **Delete:** Delete the Profile.
- ▶ **Add new:** You can add a new profile manually.

## Go to URL

Menu 7.4

You can directly connect to the site you want. You need to enter a specific URL.

## Cache settings

Menu 7.5

You can remove the contents of Cache memory or change the Cache mode.

## Clear cache

(Menu 7.5.1)

The contents of Cache memory will be removed.

## Check cache

(Menu 7.5.2)

You can set the option whether you will check the cache memory or not.

## Cookies settings

Menu 7.6

The information or services you have accessed are saved in the cache memory of the phone.

## Clear cookies

(Menu 7.6.1)

Removes all context saved in cookie.

## Check cookies

(Menu 7.6.2)

Check whether a cookie is used or not.

## Security certification

Menu 7.7

A list of the available certificates is shown.

## Reset profiles

Menu 7.8

You can reset profiles to return to original settings.

## Browser version

Menu 7.9

The WAP Browser version is displayed.

If you are on line, you can view the following menus.

▶ **Home**

Refer to (Menu 7.1).

▶ **Reload**

Reloads the current page.

▶ **Bookmarks**

See (Menu 7.2).

▶ **Save as bookmark**

You can save a site as bookmark.

▶ **Go to URL**

You can move to the site you want. In this menu, you can also edit the site address.

▶ **Clear cache**

The contents of cache memory will be removed.

▶ **Save Images**

You can save the image which is provided by the WAP.

## Applications

Menu 8.1

### Options

Scroll to an application and select Options.

1. **New:** You can create new folder.
2. **Move:** You can select a folder which you want.
3. **About:** Shows Java MIDP information.
4. **Info:** Displays information about the selected MIDlet.
5. **Remove:** Deletes the selected MIDlet.
6. **Update:** Accesses the server and updates the selected MIDlet.
7. **Options:** Some Java applications may require a data connection to be made. Select this to set the connecting options.
  - **Always:** The connection is created immediately without a notification.
  - **Prompt:** You will be asked before the application makes the connection.
  - **Never:** No connection is allowed.
8. **Rename:** You can rename the application.

9. **Exit:** Exits from Applications.

## Download

Menu 8.2

You can edit and set MIDlet server address. Download MIDlets using WAP Browser and store them in the phone. You can also view the list of MIDlets stored on the Applications screen.

## Profiles

Menu 8.3

Some Java applications may require a network connection to operate, for example, multiplayer games. You can set up to 5 profiles and activate the desired one. This is similar to wap profile setting. Refer to wap profiles when you set this.



JAVA™ is a trademark of Sun Microsystems, Inc.

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

---


## Standard Battery



---

## Portable Handsfree

This connects to your phone, allowing handsfree operation.



---

## Travel Adapter


This charger allows you to charge the battery while away from home or your office.



---

## Data cable/CD

You can connect your phone to PC to exchange the data between them.



## Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

# Technical data

## General

Product name : C1150

System : GSM 900 / DCS 1800

## Ambient temperatures

Max : +55°C

Min : -10°C

# Declaration of Conformity LG Electronics

## Suppliers Details

Name  
LG Electronics Inc

Address  
LG Electronics Inc, LG Twin Towers  
20, Yeouido-dong, Yeongdeungpo-gu,  
Seoul, Korea 156-721

## Product Details

Product Name  
E-GSM 900 / DCS 1800 Dual - Band Terminal Equipment

Model Name  
C1150  
Trade Name  
LG

# C E 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.5.1, 301 489-7 V1.2.1  
EN 60950-1 : 2001  
EN 50360 : 2001, EN 50361 : 2001  
3GPP TS 51.010-1,

Selection according to GCF-CC 3.18.0 including requirements of EN 301 511, v9.0.2

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name  
Jin Seog, Kim / Director

Issued Date  
05-Aug.2005

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 -36-547 - 6940, e-mail : seokim@lge.com

  
Signature of representative





A series of horizontal lines for writing, with a dark gray bar at the top right.