

ไทย
ENGLISH



KG800 | คู่มือการใช้



chocolate

KG800

ข้อมูลบางอย่างในคู่มือเล่มนี้ อาจแตกต่างจากโทรศัพท์ ของคุณขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการ ของคุณ



LG Electronics Inc



P/N : MMBB0207015(1.2) W

www.lge.com

คู่มือการใช้ | KG800 |

- ๓ - ไทย



สารบัญ

วิธีใช้ไม่สัมผัส 5

บทนำ 7

เพื่อความปลอดภัย 8

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ 9

คุณสมบัติของ KG800 14

ขณะเปิดเครื่อง

ข้อมูลบนหน้าจอ 18

ไอคอนบนหน้าจอ

การติดตั้ง 20

การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

การถอดเครื่องชาร์จแบตเตอรี่ 21

การถอดเครื่องชาร์จแบตเตอรี่ 22

ฟังก์ชันทั่วไป 23

การโทรออกและการรับสาย

การโอนข้อความ 25

โหมดสัญญาณ 26

รายชื่อ 28

การเลือกฟังก์ชันและตัวเลือกต่างๆ 29

เมนูระหว่างการใช้สาย 30

ระหว่างการใช้สาย

การสนทนาหรือประชุมหลายสาย 31

แผนผังเมนู 33

รูปแบบเสียง 35

เปิดทำงาน
เปลี่ยนแปลง
แก้ไขชื่อ 36

ข้อมูลการโทร 37

เบอร์ที่ไม่ได้รับ

เบอร์ที่ได้รับ

เบอร์ที่โทรออก

รายการโทรทั้งหมด 38

ลบเบอร์ในรายการ

เวลาและค่าโทร

เวลาที่โทร

แสดงค่าโทร

การตั้งค่า

ข้อมูล GPRS 39

เวลาที่โทร

ขนาดข้อมูล

เครื่องมือ 40

เมนูโปรด

นาฬิกาปลุก

เครื่องคิดเลข

การแปลงหน่วย 41

เวลาโลก

SIM-เมนู 42

สมุดบันทึก 43**รายชื่อ**

| | |
|-----------------|----|
| คนหารายชื่อ | |
| เพิ่มชื่อ | |
| กลุ่มผู้โทรเข้า | 44 |
| โทรด่วน | 45 |
| หมายเลขเครื่อง | |
| นามบัตร | |
| การตั้งค่า | |

ปฏิทิน 47

| | |
|----------------------|----|
| เพิ่มใหม่ | |
| ดูตารางนัดหมายทุกวัน | 48 |
| ลบกำหนดการล่าสุด | |
| ลบทั้งหมด | |
| ไปที่วันที่ | |
| ตั้งเสียงเตือน | |

บันทึก**ข้อความ 49****เขียนข้อความใหม่**

| | |
|-------------------------|----|
| เขียนข้อความตัวอักษร | |
| เขียนข้อความมัลติมีเดีย | 51 |
| กล่องข้อความเข้า | 53 |
| ร่าง | 54 |
| กล่องข้อความออก | 55 |
| ฟังข้อความเสียง | |
| บริการ ข้อมูล | 56 |

อ่าน

เรื่อง

ข้อความอัตโนมัติ 57

| | |
|------------------------|----|
| ข้อความอัตโนมัติ | |
| รูปแบบมัลติมีเดีย | |
| การตั้งค่า | |
| ข้อความตัวอักษร | |
| ข้อความมัลติมีเดีย | 58 |
| เบอร์ศูนย์ข้อความเสียง | |
| บริการข้อมูล | 59 |
| Push ข้อความ | |

มัลติมีเดีย 60**กล้องถ่ายรูป**

| | |
|--------------------|----|
| กล้องวิดีโอ | 61 |
| เครื่องบันทึกเสียง | 62 |
| บันทึก | |
| ดูรายการ | |
| MP3 | |
| อัลบั้มภาพ | 65 |
| อัลบั้มวิดีโอ | |
| การตั้งค่า | 66 |

กล้องถ่ายรูป

กล้องวิดีโอ

เบราว์เซอร์ 67**โชม 68****ผู้สมัคร****ไปยัง URL****การตั้งค่า**

| | |
|------------------|----|
| โพรไฟล์ | |
| แคช | 70 |
| คุกกี้ | |
| ลบแคช | |
| ลบ คุกกี้ | |
| รักษาความปลอดภัย | |

สารบัญ

แฟ้มส่วนตัว 71

เกมส์ & อื่นๆ

เกมส์ & อื่นๆ

รูปแบบเสียง

วิดีโอ 75

รูปถ่าย 76

มิวสิค

ข้อความ 77

ภาพ

เสียง

อื่นๆ 78

การตั้งค่า 79

วันที่และเวลา

ตั้งวันที่

ตั้งเวลา

จอแสดงผล

รูปภาพพื้นหลัง

สีเมนู

ข้อความสแตนด์บาย

ไฟหน้าจอ 80

ความสว่าง

ชื่อเครือข่าย

เมนูหน้าจอ

แบบสีตัวเลข

การประหยัดพลังงาน

ภาษาเมนู

การเชื่อมต่อ

บลูทูธ

โมเด็ม 82

เครือข่าย 83

ตั้งค่า GPRS

การโทร 84

การโอนสาย

รูปแบบการรับสาย 85

ส่งหมายเลขตัวเอง

สายเรียกซ้อน

เดือนทุกนาที 86

โทรซ้ำอัตโนมัติ

รักษาความปลอดภัย

ใส่รหัส PIN

ล็อคเครื่อง 87

ป้องกันการโทร

เบอร์โทรที่กำหนด 88

เปลี่ยนรหัส

ล็อคปุ่มสัมผัส

สถานะหน่วยความจำ 89

ใช้ค่าจากโรงงาน

อุปกรณ์เสริม 90

ข้อมูลทางเทคนิค 91

วิธีใช้ปุ่มสัมผัส

- ▶ ปุ่มที่ฝาหลังของเครื่องรุ่นนี้คือปุ่มสัมผัส
- ▶ โปรดอ่าน "ข้อควรระวังสำหรับปุ่มสัมผัส" ก่อนการใช้ปุ่มสัมผัส

ข้อควรระวังสำหรับปุ่มสัมผัส

1. มือของคุณต้องสะอาดและไม่เปียกน้ำ
 - ขจัดความชื้นบนมือคุณหรือที่ปุ่มสัมผัสในสถานะที่มีความชื้น



2. คุณไม่จำเป็นต้องกดปุ่มสัมผัสแรงเกินไปในการทำงานตามปกติ
อย่าให้เครื่องถูกกระแทก เช่น เซอร์ของปุ่มสัมผัสอาจเสียหายได้
3. ใช้ปลายนิ้ว ของคุณในการกดที่ปุ่มสัมผัสที่ต้องการ ไม่ควรสัมผัสปุ่มที่เป็นของฟังก์ชันอื่น
4. เมื่อไฟหน้าจอและไฟปุ่มสัมผัสดับลง การกดปุ่มสัมผัสจะไม่ทำให้ไฟหน้าจอตีโต ให้กดปุ่มสลับ End แล้วไฟหน้าจอจะสว่างอีกครั้ง (ปุ่มสัมผัสจะไม่ทำงานเมื่อไฟปุ่มสัมผัสดับลง)
5. หากปิดฝาหลังโดยอยู่ และ ฟังก์ชันป้องกัน การสัมผัสทำงาน ในระหว่างการโทร ฟังก์ชัน ล็อคปุ่มสัมผัส จะเปิดใช้โดยอัตโนมัติ (โปรดดูรายละเอียดที่ 'สถานะปุ่มสัมผัสเมื่อใช้โทรศัพท์')
6. ปุ่มสัมผัสอาจทำงานผิดพลาด ถ้าหากมีหน้าจอกโทรศัพท์หรือแผ่นพลาสติก ติดที่ปุ่มสัมผัสนอกจากนี้ ปุ่มสัมผัสอาจทำงานผิดพลาดหากคุณสวมถุงมือไว้ในขณะกดปุ่ม

วิธีใช้ปุ่มสัมผัส

7. หลีกเลี่ยงไม่ให้วัสดุที่ทำจากโลหะ หรือ เป็นสื่อนำไฟฟ้าและที่พื้นผิวของปุ่มสัมผัส เพราะอาจเกิดความเสียหายได้

สถานะปุ่มสัมผัสเมื่อใช้โทรศัพท์

เมื่อปิดฝาโลดแล้วฟังก์ชันป้องกันการสัมผัสจะเปิดใช้โดยอัตโนมัติเพื่อป้องกันการทำงานที่ไม่เหมาะสมขณะที่ใช้โทรศัพท์หรือระหว่างการใช้สาย (ในกรณีนี้ ปุ่มสัมผัสจะไม่ทำงานแม้จะมีการกดปุ่มก็ตาม)

1. เมื่อปิดฝาโลด

- เมื่อปิดฝาโลด ฟังก์ชันป้องกันการสัมผัสจะทำงานโดยอัตโนมัติ (การเปิดฝาโลดจะทำให้เลิกใช้ฟังก์ชันนี้โดยอัตโนมัติ)
- ในการเลิกใช้ฟังก์ชันป้องกันการสัมผัส เมื่อปิดฝาโลด กดปุ่มระดับเสียงสองครั้ง
- หลังจากเลิกใช้ฟังก์ชันป้องกันการสัมผัส หากไม่มีการใช้ปุ่มใดๆ ในช่วงระยะเวลาหนึ่ง (5 วินาที) ฟังก์ชันป้องกันการสัมผัสจะทำงานอีกครั้ง

2. ในระหว่างการใช้สาย

- ในระหว่างการใช้สาย ไม่ว่าจะเปิดหรือปิดฝาโลดก็ตาม ฟังก์ชันป้องกันการสัมผัสจะทำงานโดยอัตโนมัติ
- ในการเลิกใช้ฟังก์ชันป้องกันการสัมผัส กดปุ่ม MP3 หรือปุ่มตัวเลข, ปุ่ม **#*#** หรือปุ่ม ***#***
- หลังจากเลิกใช้การล็อคปุ่มสัมผัส หากไม่มีการกดปุ่มใดๆ ในช่วงระยะเวลาหนึ่ง (5 วินาที) ฟังก์ชันป้องกันการสัมผัสจะทำงานอีกครั้ง

หมายเหตุ

- ▶ เพื่อความสะดวกของผู้ใช้ ภาพปุ่มสัมผัสพร้อมฟังก์ชันของแต่ละปุ่มจะปรากฏบนหน้าจอหลักเมื่อคุณเชื่อมต่อเครื่อง

ขอแสดงความยินดีที่คุณเลือกซื้อโทรศัพท์เคลื่อนที่รุ่นKG800 ที่ทันสมัยมีขนาดกะทัดรัด ออกแบบให้ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด



คู่มือการใช้เล่มนี้ ประกอบด้วยข้อมูลสำคัญในการใช้และการทำงานของโทรศัพท์เครื่องนี้จึงควรอ่านเนื้อหาทั้งหมดด้วยความละเอียด เพื่อผลการใช้งานที่ เต็มประสิทธิภาพและเพื่อเป็นการป้องกันความเสียหาย หรือ ใช้งานผิดต่อตัวเครื่องได้ การรับประกันของโทรศัพท์จะสิ้นสุดลงทันที หากมีการเปลี่ยนแปลงหรือตัดแปลงแก้ไขเครื่อง นอกเหนือจากที่ระบุอย่างชัดเจนในคู่มือนี้เราสามารถกระทำได้

การใช้ของใส่โทรศัพท์ แบบที่มีตัวล็อคแม่เหล็กกับโทรศัพท์แบบพลาสติก อาจก่อให้เกิดปัญหาเช่น การปิดเครื่องเอง และการขาดการติดต่อกับเครือข่าย

เพื่อความปลอดภัย

อ่านคำแนะนำต่างๆ เหล่านี้ การฝ่าฝืนกฎเกณฑ์กำหนดอาจเป็นอันตราย หรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบายอยู่ในคู่มือเล่มนี้

คำเตือน!

- ควรปิดโทรศัพท์เคลื่อนที่ทุกครั้งที่อยู่บนเครื่องบิน
- ห้ามถือโทรศัพท์ในขณะที่ขับรถ
- ไม่ควรใช้เครื่องใกล้สถานีบริการน้ำมัน คลังน้ำมัน โรงงานเคมี หรือบริเวณที่มีการปฏิบัติงานที่เกี่ยวข้องกับการระเบิด
- เพื่อความปลอดภัยของคุณโปรดใช้ แต่แบตเตอรี่ และแท่นชาร์จของแท้ ที่กำหนดให้เท่านั้น
- ห้ามสัมผัสโทรศัพท์ด้วยไฟฟ้าขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดหรือทำให้โทรศัพท์ชำรุดเสียหายได้
- เก็บโทรศัพท์ในที่ปลอดภัย และห่างจากมือเด็ก รวมทั้ง เก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

ข้อควรระวัง!

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาลเนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- การโทรฉุกเฉินอาจไม่สามารถใช้ได้กับเครือข่าย เซลลูลาร์ทุกเครือข่ายจึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน
- เพื่อหลีกเลี่ยงความเสียหายที่อาจเกิดขึ้นโปรดใช้แต่อุปกรณ์เสริมที่เป็นของแท้เท่านั้น
- โปรดอ่านคู่มือนี้โดยละเอียดก่อนเริ่มใช้เครื่องโทรศัพท์ของคุณและเก็บรักษาคู่มือนี้เพื่อใช้อ้างอิงภายหลังดังนั้นโทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับสัญญาณ รบกวนบ้างเล็กน้อย ไม่ควรถือ โทรศัพท์ขณะขับรถ
- ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมายกำหนด
- ห้ามถอดแยกเครื่องโทรศัพท์ หรือแบตเตอรี่

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตราย หรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมได้อธิบายอยู่ในคู่มือ เล่มนี้

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น KG800 นี้ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งาน อัน เกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุข้อกำหนดนี้ ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเผื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้น กับอายุและสุขภาพ

- ▶ ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้ กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุด และมีการรับรองขนาดสัญญาณ แล้ว โดยการส่งสัญญาณดังกล่าว ได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- ▶ แม้ระดับ SAR ของโทรศัพท์ LG แต่ละรุ่น จะแตกต่างกันบ้างแต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ▶ ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non- Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก โดยเฉพาะ ตามเนื้อเยื่อหนักสิบ (10) กรัม
- ▶ ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการ ทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.596 วัตต์/กก (10 กรัม)

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน!

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้ เท่านั้นการใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรอง ดังกล่าวอาจทำให้การรับรอง หรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- ▶ อย่าถอดแยกชิ้นส่วนของโทรศัพท์ (ควรนำไปให้ช่างเทคนิคผู้มี ความรู้เมื่อจำเป็นต่อมมีการตรวจสอบ)
- ▶ ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์ วิทยุ หรือ เครื่องคอมพิวเตอร์
- ▶ ควรวางโทรศัพท์ไว้ห่างจากแหล่งกำเนิดความร้อน เช่น เครื่องทำความร้อน หรือเตาประกอบอาหาร
- ▶ ไม่ควรวางโทรศัพท์ของคุณไว้ในเดาไมโคเวฟเพราะอาจทำให้แบตเตอรี่ระเบิดได้
- ▶ ไม่ควรทำโทรศัพท์ตกพื้น

- ▶ ไม่ควรวางโทรศัพท์ไว้ในที่ ที่มีการสั่นสะเทือนหรือการกระแทก
- ▶ สารเคลือบบนตัวเครื่องโทรศัพท์อาจหลุดลอกได้ หากหุ้มด้วยวัสดุหรือ สิ่งที่ทำจากไวนิล
- ▶ ห้ามใช้สารเคมีที่มีฤทธิ์รุนแรง (เช่น แอลกอฮอล์ เบนซิน ทินเนอร์ เป็นต้น) หรือ สารซักฟอกทำความสะอาดเครื่องโทรศัพท์ เพราะอาจทำให้เกิดเพลิงไหม้ได้
- ▶ ไม่ควรวางโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- ▶ อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสาร ที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- ▶ อย่าเคาะหนักอวดด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- ▶ วางโทรศัพท์ให้ห่างจากของเหลวหรือความร้อน
- ▶ การใช้อุปกรณ์เสริม ประเภทหูฟัง ควรใช้อย่างระมัดระวัง ตรวจสอบให้แน่ใจว่าสายไม่พันงอ และไม่ควรสัมผัสสายอากาศโดยไม่จำเป็น

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการ ทำงานของ อุปกรณ์ต่างๆ

- ▶ ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์ โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น sturbed by mobile phones.
- ▶ โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดคลื่นรบกวนกับเครื่องช่วยฟังได้

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่อง การใช้โทรศัพท์เคลื่อนที่ในขณะที่ขับขี่ยานพาหนะ

- ▶ ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- ▶ มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ▶ หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ▶ ขับเข้าข้างทางแล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการการขับขี่ทำให้จำเป็นต้องดำเนินการ ดังกล่าว
- ▶ พลังงานคลื่นความถี่วิทยุ อาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความ ปลอดภัย เป็นต้น
- ▶ ขณะขับขีรถยนต์ โปรดอย่าวางโทรศัพท์หรือติดตั้ง ชุดอุปกรณ์แฮนด์ฟรีใกล้กับถุงลมนิรภัยเพราะ หาก ติดตั้งอุปกรณ์ไร้สายไม่ถูกต้อง และถุงลมนิรภัยทำงาน อาจทำให้คุณได้รับบาดเจ็บสาหัสได้

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ถ้าคุณกำลังฟังเพลงขณะอยู่สถานะที่มีคนพลุกพล่าน กรุณาลดระดับเสียงเพลงลงเพื่อให้ได้ยินเสียงรอบข้าง โดยเฉพาะขณะที่คุณเดินข้ามถนน

หลีกเลี่ยงอันตรายที่อาจเกิดขึ้นกับการได้ยินของคุณ

อันตรายอาจเกิดขึ้นกับการได้ยินของคุณ หากคุณได้ยินเสียงดังเวลานาน ไม่ควรเปิดหรือปิดเครื่องขณะอยู่ใกล้หูคุณ และควรปรับระดับเสียงเพลงให้อยู่ในระดับที่เหมาะสม

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่าง ๆ ให้ปฏิบัติตามข้อ ห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ▶ ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิง หรือ สารเคมี
- ▶ ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลว ที่ติดไฟง่าย หรือระเบิดได้ในห้อง โดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ▶ ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่อง บิน
- ▶ อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นที่ โดยไม่ได้รับอนุญาตจากพนักงานประจำเครื่องเสียก่อน

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็กรวมทั้ง เก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายเซลลูลาร์ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- ▶ คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมด ก่อนเริ่มการชาร์จแบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากแบตเตอรี่แบบ Li-Ion ไม่มีผลต่อหน่วย ความจำประสิทธิภาพของแบตเตอรี่จึงไม่ต่อขลง
- ▶ ใช้เฉพาะแบตเตอรี่ และ ที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด

- ▶ อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- ▶ รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- ▶ เปลี่ยนแบตเตอรี่ทันที เมื่อประสิทธิภาพการใช้งาน ลดต่ำลงอย่างมากจนไม่อาจใช้ได้ต่อได้ แบตเตอรี่นี้ สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ▶ ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- ▶ อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- ▶ อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง

คุณสมบัติของ KG800

ส่วนประกอบของโทรศัพท์

ขณะเปิดเครื่อง

ปุ่มนำเกิด

- ▶ ในโหมดสแตนด์บาย:
 - ▲ กดแล้วปล่อย: รายการเมนูโปรด
 - ▼ กดแล้วปล่อย: รายชื่อ
 - ◀ กดแล้วปล่อย: รูปแบบเสียง
 - กดค้างไว้: ใช้งาน/ปิดการใช้งานโหมดสั่น
 - ▶ กดแล้วปล่อย: รายการรายการข้อความ
- ▶ ในเมนู: เลื่อนรายการขึ้นและลง

ลำโพง



หน้าจอ LCD หลัก

- ▶ ส่วนบน: ไอคอนแสดงความแรงของสัญญาณระดับแบตเตอรี่และฟังก์ชันอื่นๆ
- ▶ ส่วนล่าง: แสดงรายการของปุ่มเลือก

ปุ่มตัวเลขและตัวอักษร

- ▶ ในโหมดสแตนด์บาย: สำหรับป้อนหมายเลขเพื่อโทรออก กดปุ่มดังต่อไปนี้ค้างไว้
 - 0* - โทรออกต่างประเทศ
 - 1* - ศูนย์ฝากข้อความเสียง
 - 2* ถึง 9* - โทรด่วน
- ▶ ในโหมดแก้ไข: ป้อนตัวเลขและตัวอักษร



คุณสมบัติของ KG800

คุณสมบัติของ KG800

มุมมองด้านซ้าย



ปุ่มด้านซ้าย

- ▶ ในโหมดสแตนด์บาย (เลื่อนสไลด์ขึ้น): ใช้ปรับระดับเสียงของปุ่มกด
- ▶ ในโหมดสแตนด์บาย (เปิดสไลด์): กดครั้งเดียว ไฟ LCD หลักจะติด กดสองครั้ง เปิดใช้งานปุ่มเข้าเมนูระบบสัมผัสด้านหน้า
- ▶ ในเมนู: เลื่อนรายการขึ้นและลง
- ▶ ระหว่างการใช้สาย: ปรับระดับเสียงลำโพง

มุมมองด้านขวา




ปุ่มวางสาย

- ▶ เปิด/ปิดเครื่อง (กดค้างไว้)
- ▶ วางสายหรือปฏิเสธสายเรียกเข้า

ปุ่มสล็อตคีย์มัลติมีเดีย (MP3, กลองถ่ายรูป, ภายวีดีโอ)

- ▶ เปิดใช้เมนูเครื่องเล่น MP3 (กดครั้งหนึ่ง) เข้าเมนูมัลติมีเดีย (กดค้าง) เข้า MP3 โดยตรง

หมายเหตุ

- ▶ ในการป้องกันความไวต่อการไต่ยีนขณะเปิดฝาเลื่อน ให้ตั้งระดับเสียงสูงสุดเป็น 3.
- ▶ ในโหมดสแตนด์บาย : กดปุ่ม  ค้างไว้ เพื่อเปลี่ยนโหมดสั้นอย่างเดียว

ภาพแสดงตัวเครื่องด้านหลัง



หมายเหตุ

- ▶ โปรดตรวจสอบว่าเปิดโทรศัพท์แล้วและอยู่ในโหมดเปิดเครื่องรอสาย ก่อนเชื่อมต่อกับสายเคเบิล USB

คุณสมบัติของ KG800

คุณสมบัติของ KG800

ข้อมูลบนหน้าจอ



| พื้นที่ | คำอธิบาย |
|---------------|---|
| บรรทัดแรก | แสดงไอคอนต่างๆ |
| บรรทัดกลาง | แสดงข้อความ, คำแนะนำ และข้อมูล ที่คุณป้อน เช่น หมายเลขที่จะโทรออก |
| บรรทัดสุดท้าย | แสดงฟังก์ชันที่กำหนดให้กับปุ่มเลือกสองปุ่มในปัจจุบัน |






หน้าจอจะแสดงไอคอนต่างๆ ตามที่แสดงในตารางดังต่อไปนี้

ไอคอนบนหน้าจอ

| ไอคอน/สัญลักษณ์ | คำอธิบาย |
|-----------------|--|
| | แสดงความแรงของสัญญาณเครือข่าย |
| | เชื่อมต่อสายอยู่ |
| | คุณสามารถใช้บริการ GPRS ได้ |
| | แสดงว่าคุณกำลังใช้บริการข้ามเครือข่าย (โรมมิ่ง) อยู่ |
| | ตั้งและใช้นาฬิกาปลุกอยู่ |
| | แสดงสถานะของแบตเตอรี่ |
| | คุณได้รับข้อความแบบตัวอักษร |
| | คุณได้รับข้อความแบบเสียง |

หมายเหตุ

- ▶ คุณภาพของเสียงสนทนา อาจเปลี่ยนแปลงตามพื้นที่ให้บริการ และระบบ เครือข่าย เมื่อระดับความแรงของสัญญาณต่ำกว่า 2 ซีดเสียงสนทนาอาจขาด หาย ไม่ได้ยิน และมีสัญญาณรบกวน โปรดดูแถบแสดงสถานะ ของระบบ เครือข่ายเพื่อตรวจสอบว่าคุณจะใช้สาย โทรได้หรือไม่เมื่อแถบแสดงสถานะ ไม่ปรากฏขึ้นแสดงว่าคุณอยู่นอกพื้นที่ ให้บริการ ในกรณีดังกล่าวนี้ คุณจะเข้า ใช้บริการ ได้ๆของระบบเครือข่ายไม่ได้ (โทร. รับส่งข้อความ และอื่นๆ)

| ไอคอน/สัญลักษณ์ | คำอธิบาย |
|---|----------------------------------|
|  | เมนูสั้นอย่างเดียว ในรูปแบบเสียง |
|  | เมนูปกติ ในรูปแบบเสียง |
|  | เมนูเสียงดัง ในรูปแบบเสียง |
|  | เมนูเงียบ ในรูปแบบเสียง |
|  | เมนูชุดหูฟัง ในรูปแบบเสียง |
|  | คุณสามารถโอนสายได้ |
|  | แสดงว่าโทรศัพท์กำลังเข้าใช้ WAP |
|  | แสดงว่าคุณกำลังใช้ GPRS |
|  | คุณได้เปิดใช้งานบลูทูธ |


การติดตั้ง

การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

ตรวจสอบให้แน่ใจว่าได้ปิดเครื่องแล้วก่อนที่จะถอด แบตเตอรี่ออก

1. ถอดแบตเตอรี่ออก

กดปุ่มคลายลอคแบตเตอรี่ค้างไว้และเลื่อนแบตเตอรี่ออก

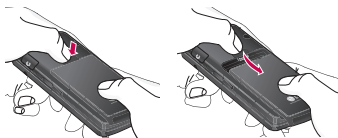

2. ใส่ซิมการ์ด

ใส่ซิมการ์ดในช่องเสียบซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่า ใส่ซิมการ์ดอย่างถูกต้องและหนา สัมผัสสีทองของการ์ดคว่ำลงเมื่อตอง การถอดซิมการ์ดออก ให้กดลงเบาๆ และดึงออกใน ทิศทางตรงข้ามกับตอนใส่



การใส่ซิมการ์ด




การถอดซิมการ์ด

หมายเหตุ

- ▶ ขั้วโลหะของซิมการ์ดเสียหายได้โดยง่ายหากถูกขูดขีด ดังนั้นโปรดระวังเมื่อคุณจับซิมการ์ดให้ปฏิบัติตามคำแนะนำที่แนบมากับซิมการ์ด

3. ใส่แบตเตอรี่

เลื่อนแบตเตอรี่ขึ้นจนกระทั่งล็อกเข้าที่

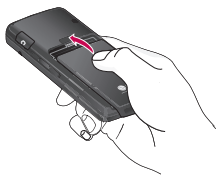

การถอดเครื่องชาร์จแบตเตอรี่

ถอดสายอะแดปเตอร์ออกจากโทรศัพท์โดยกดปุ่ม ด้านข้างทั้งสองข้างตามที่แสดงในรูป



1. ตรวจสอบให้แน่ใจว่าชาร์จแบตเตอรี่ไว้จนเต็มก่อนเริ่มใช้โทรศัพท์เป็นครั้งแรก
2. หันด้านที่มีลูกศรบนตัวปลั๊กขึ้นข้างบนตามที่แสดงในรูปแล้วเสียบปลั๊กอะแดปเตอร์สำหรับชาร์จแบตเตอรี่เข้าช่องเสียบทางด้านล่างของ เครื่องให้สุด จนได้ยินเสียงคลิก
3. เสียบปลายสายอีกด้านหนึ่งของอะแดปเตอร์เข้ากับเต้าเสียบ ควรใช้เฉพาะเครื่องชาร์จที่ใหม่ในกล่องเท่านั้น
4. ชิดเหล็กที่ขยับไปมาของไอคอนแบตเตอรี่จะหยุดนิ่ง เมื่อการชาร์จเสร็จสมบูรณ์

การติดตั้ง

ข้อควรระวัง!

- อย่าใช้แรงฝืนในการเสียบสายเพราะอาจทำความเสียหาย แก่โทรศัพท์และอะแดปเตอร์สำหรับชาร์จแบตเตอรี่
- หากคุณใช้เครื่องชาร์จนอกประเทศของคุณให้ใช้ปลั๊กอะแดปเตอร์เพื่อการเชื่อมต่อได้
- ห้ามถอดแบตเตอรี่หรือขิมการ์ดออกในขณะที่กำลังชาร์จ แบตเตอรี่

คำเตือน!

- ถอดปลั๊กไฟและเครื่องชาร์จแบตเตอรี่ออกจากเด้าเสียบขณะที่เกิดพายุฝนฟ้าคะนองเพื่อป้องกันไม่ให้ถูกไฟฟ้าดูดหรือเกิดเพลิงไหม้
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันสัตว์ ตะปู สัมผัสกับแบตเตอรี่เพราะอาจทำให้เกิด เพลิงไหม้ได้




การถอดเครื่องชาร์จ แบตเตอรี่

ถอดอะแดปเตอร์แบบพกพาออกจากโทรศัพท์ ดังภาพที่แสดง





การโทรออกและการรับสาย



การโทรออก

1. ตรวจสอบให้แน่ใจว่าโทรศัพท์ของคุณเปิดอยู่
2. ป้อนหมายเลขโทรศัพท์ รวมทั้งรหัสพื้นที่
▶ กดปุ่ม  ค้างไว้เพื่อลบตัวเลขทั้งหมด
3. กดปุ่ม  เพื่อโทรออก
4. เมื่อต้องการวางสาย ให้กดปุ่มวางสาย  หรือปุ่มเลิกขวา

การโทรจากรายการโทรที่เคยใช้

1. ในโหมดสแตนด์บาย ให้กดปุ่มส่ง  หมายเลขสายเรียกเข้าล่าสุด หมายเลข โทรออกล่าสุด และหมายเลขที่ไม่ได้รับล่าสุดจะ ปรากฏขึ้น
2. เลือกหมายเลขที่ต้องการ โดยใช้ปุ่มนำขึ้น/ลง
3. กดปุ่ม  เพื่อโทรออก


การโทรออกต่างประเทศ

1. กดปุ่ม  ค้างไว้เพื่อเรียกรหัสนำหน้าการโทรออกต่างประเทศให้ปรากฏบนหน้าจอ เครื่องหมาย '+' สามารถใช้แทนรหัสการโทร ออกต่างประเทศได้
2. ป้อนรหัสประเทศ รหัสพื้นที่และหมายเลขโทรศัพท์
3. กดปุ่ม 

การวางสาย

เมื่อคุณสิ้นสุดการสนทนาแล้ว ให้กดปุ่ม 

การโทรออกโดยใช้สมุดโทรศัพท์

คุณสามารถบันทึกชื่อและหมายเลขโทรศัพท์ที่ใช้เป็นประจำไว้ในรายชื่อ โดยคุณสามารถบันทึกไว้ในซิมการ์ด และ / หรือหน่วยความจำโทรศัพท์ คุณสามารถโทรออก โดยค้นหารายชื่อที่ต้องการในสมุดโทรศัพท์และกดปุ่ม 

ฟังก์ชันทั่วไป

การปรับระดับเสียง

หากคุณต้องการปรับระดับเสียงของหูฟัง ในระหว่างการสนทนาให้ใช้ปุ่มด้านข้าง กดปุ่มขึ้นด้านข้างเพื่อเพิ่มระดับเสียง และปุ่มลงด้านข้างเพื่อลดระดับเสียง

หมายเหตุ

- ▶ ในโหมดสแตนด์บายเมื่อเปิดโทรศัพท์อยู่ การกดปุ่มด้านข้างจะเป็นการปรับระดับเสียงปุ่มกด

การรับสาย

เมื่อมีสายเรียกเข้าเสียงโทรศัพท์ จะดังขึ้น และไอคอนโทรศัพท์จะกระพริบอยู่บนหน้าจอ หากเครื่องสามารถระบุผู้โทรเข้าได้ หมายเลขโทรศัพท์ (หรือชื่อหากจัดเก็บไว้ในสมุดโทรศัพท์) ของผู้โทรเข้าจะปรากฏขึ้น

1. เมื่อต้องการรับสายเรียกเข้า ให้เปิดฝาพับของโทรศัพท์ (เมื่อตั้งค่า เปิดฝาพับเป็นโหมดรับสาย (เมนู 9.6.2))

หมายเหตุ

- ▶ หากกำหนดโหมดการรับสายไว้เป็นรับสายได้ ทุกปุ่ม การกดปุ่มใดๆ จะรับสายเรียกเข้าทันที ยกเว้นปุ่ม หรือปุ่มเลือกขวา

- ▶ ในการปฏิเสธไม่รับสายเรียกเข้า ให้กดปุ่มด้านข้างที่ด้านซ้ายของโทรศัพท์ค้างไว้
 - ▶ คุณสามารถรับสายในขณะที่ใช้สมุดโทรศัพท์ หรือคุณสมบัติเมนูอื่นได้
2. ในการวางสาย ให้ปิดฝาพับ หรือกดปุ่ม

โหมดปิดเสียง/เปิดสั่น (แบบรวดเร็ว)

คุณสามารถเรียกใช้โหมดปิดเสียงและเปิดสั่นได้โดย กดปุ่ม  ค้างไว้ หลังจากเปิดโทรศัพท์

ความแรงของสัญญาณ

คุณสามารถตรวจสอบความแรงของสัญญาณได้ โดยดูสัญลักษณ์แสดงระดับสัญญาณ (📶) บนหน้าจอ LCD ของโทรศัพท์ ความแรงของสัญญาณอาจไม่สม่ำเสมอ โดยเฉพาะอย่างยิ่ง เมื่อคุณอยู่ในอาคารหาระดับสัญญาณอ่อน ให้คุณโทรใกล้กับหน้าต่างเพราะ ตำแหน่งนั้นมีระดับสัญญาณแรงกว่าจุดอื่นๆ

การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกด ของโทรศัพท์ ตัวอย่างเช่น การจัดเก็บชื่อในสมุดโทรศัพท์ การเขียนข้อความ การสร้างคำต้อนรับส่วนตัว

ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้

โหมด T9

โหมดนี้ให้คุณป้อนคำได้ โดยการกดเพียงครั้งเดียว ต่อหนึ่งตัวอักษร แม้ว่าแต่ละปุ่มบนแผงปุ่มกดนั้น จะมีตัวอักษรมากกว่าหนึ่งตัวอักษรก็ตาม โหมด T9 จะเปรียบเทียบการกดปุ่มของคุณ โดยอัตโนมัติกับพจนานุกรมทางภาษาภายในเครื่อง เพื่อพิจารณาหาคำที่ถูกต้อง ดังนั้น คุณจึงกดปุ่มน้อยกว่าการป้อนคำโดยใช้โหมด ABC ตามปกติบางครั้งการป้อนคำด้วยวิธีนี้เรียกใน อีกชื่อหนึ่งว่าระบบช่วยสะกดคำ

โหมด ABC

โหมดนี้ให้คุณป้อนตัวอักษรโดยการกดปุ่มที่มีตัวอักษรที่ต้องการหนึ่งครั้ง สองครั้ง สามครั้ง หรือสี่ครั้งจนกระทั่งตัวอักษรที่ต้องการปรากฏขึ้น

ฟังก์ชันทั่วไป

โหมด 123 (โหมดตัวเลข)

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลข หนึ่งตัว หากต้องการเปลี่ยนเป็นโหมด 123 ในฟิลด์ สำหรับการป้อนตัวอักษรให้กดปุ่ม **#** จนกว่าหน้าจอจะแสดงโหมด 123

โหมดสัญลักษณ์

1. เมื่อคุณอยู่ในฟิลด์ที่ยอมให้ป้อนตัวอักษรได้สัญลักษณ์แสดงโหมดป้อนข้อความจะปรากฏสูงขึ้นที่มุมขวาล่างของหน้าจอ LCD

โหมดป้อนข้อความ



2. เปลี่ยนโหมดป้อนข้อความ โดยการกดปุ่ม คุณสามารถตรวจสอบโหมดป้อน ข้อความปัจจุบันได้ในมุมขวาล่างของ หน้าจอ LCD

วิธีการใช้โหมด T9

โหมดป้อนข้อความโดยใช้ระบบช่วยสะกดคำ T9 ช่วยให้คุณสามารถป้อนคำต่าง ๆ ได้อย่างง่ายดายด้วยจำนวนการกดปุ่มน้อยครั้งที่สุด เมื่อคุณกดปุ่มแต่ละครั้ง โทศัพท์จะเริ่ม แสดงตัวอักษรที่คิดว่า คุณกำลังพิมพ์ โดย อ้างอิงตามพจนานุกรมในเครื่องเมื่อมีการเพิ่มตัวอักษรใหม่ คำจะเปลี่ยนแปลงตามตัวเลือกที่ใกล้เคียงที่สุดจากพจนานุกรม คุณสามารถเปิด หรือ ปิดโหมด T9 และเปลี่ยนภาษาของโหมด T9 โดยการกดปุ่ม ***#** คำงไว้

1. เมื่อคุณอยู่ในโหมดป้อนข้อความโดยใช้ระบบช่วย สะกดคำ T9 ให้เริ่มต้นป้อนคำโดยกดปุ่ม **2** ถึง **9** โดยการกดหนึ่งปุ่มต่อหนึ่งตัวอักษร
- ▶ คำจะเปลี่ยนแปลงตามตัวอักษรที่พิมพ์คุณไม่ต้องสนใจคำที่ปรากฏบนหน้าจอจนกว่าคุณจะมีพิกัดที่แน่นอนเสร็จ

- ▶ หากพิมพ์จนเสร็จแล้ว แต่ค่านั้นปรากฏไม่ถูกต้อง ให้กดปุ่มนารีเกิดลงหนึ่งครั้ง หรือมากกว่า เพื่อเลื่อนดูรายการค่าที่มีให้เลือก

ตัวอย่าง: กดปุ่ม **4** **6** **6** **3**
เพื่อพิมพ์ **Good**

กดปุ่ม **4** **6** **6** **3**
[ปุ่มนารีเกิดลง] เพื่อพิมพ์
Home

- ▶ หากไม่มีค่าที่ต้องการในรายการค่าที่มีให้เลือก ให้เพิ่มค่านั้นโดยใช้โหมด ABC
 - ▶ คุณสามารถเลือกภาษาของโหมด T9 ได้ ให้กดปุ่มเลือกซ้าย [ตัวเลือก] แล้วเลือกภาษา T9 เลือกภาษาที่ต้องการของโหมด T9 นอกจากนี้ คุณยังสามารถปิดโหมด T9 ได้ โดยการเลือก ปิด T9 ค่าที่ตั้งมาจากโรงงานของเครื่องคือ ใช้โหมด T9
2. ป้อนค่าทั้งค่า ก่อนที่จะแก้ไขหรือลบตัวอักษรตัวใดตัวหนึ่ง
 3. เมื่อสิ้นสุดการป้อนค่าหนึ่งค่า ให้เว้นวรรค โดยกดปุ่ม **0** เมื่อต้องการ ลบตัวอักษรให้กดปุ่ม **=** หากต้องการลบค่านั้นทั้งหมด ให้กดปุ่ม **=**

หมายเหตุ

- ▶ ในการออกจากโหมดป้อนข้อความ โดยไม่บันทึกข้อความที่ป้อนนั้น ให้กดปุ่ม **=** เครื่องจะ กลับไปยังหน้าจอรอรับสาย

วิธีการใช้โหมด ABC

ใช้ปุ่ม **2** ถึง **9** เพื่อป้อนข้อความ

1. กดปุ่มที่มีตัวอักษรที่คุณต้องการ
 - ▶ หนึ่งครั้งสำหรับตัวอักษรตัวแรก
 - ▶ สองครั้งสำหรับตัวอักษรตัวที่สอง
 - ▶ และอื่นๆ
2. เมื่อต้องการเว้นวรรค ให้กดปุ่ม **0** หนึ่งครั้ง เมื่อต้องการลบตัวอักษร ให้กดปุ่ม **=** และหากต้องการลบค่าที่ปรากฏขึ้นทั้งหมด ให้กดปุ่ม **=** ดังไว้

หมายเหตุ

- ▶ โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับตัวอักษรที่ใช้ได้ โดยใช้ปุ่มจากตารางด้านล่างนี้

ฟังก์ชันทั่วไป

| ปุ่ม | ตัวอักษรตามลำดับที่แสดง | |
|------|-------------------------|--------------|
| | ตัวพิมพ์ใหญ่ | ตัวพิมพ์เล็ก |
| 1 | .,/?!-:'" 1 | .,/?!-:'" 1 |
| 2 | ABC2 | abc2 |
| 3 | DEF3 | def3 |
| 4 | GHI4 | ghi4 |
| 5 | JKL5 | jkl5 |
| 6 | MNO6 | mno6 |
| 7 | PQRS7 | pqrs7 |
| 8 | TUV8 | tuv8 |
| 9 | WXYZ9 | wxyz9 |
| 0 | '"~`" ฤ ก 0 | '"~`" ฤ ก 0 |

วิธีการใช้โหมด 123 (ตัวเลข)

โหมด 123 ช่วยให้คุณสามารถป้อนตัวเลขในข้อความ แบบตัวอักษรได้ (เช่น การป้อนหมายเลขโทรศัพท์)

กดปุ่มตัวเลขที่ต้องการ ก่อนที่จะเปลี่ยนเป็นโหมดป้อนข้อความที่เหมาะสมด้วยตนเองคุณสามารถสลับระหว่าง ตัวอักษรและตัวเลขได้อย่างรวดเร็วโดยการกดปุ่ม ค้างไว้

วิธีการใช้โหมดสัญลักษณ์

โหมดสัญลักษณ์ช่วยให้คุณป้อนสัญลักษณ์หรือตัวอักษรพิเศษต่างๆ ในการป้อนสัญลักษณ์ให้กด ปุ่ม ใช้ปุ่มนาฬิกาเพื่อเลือกสัญลักษณ์ที่ต้องการ และกดปุ่ม [ตกลง]

รายชื่อ

คุณสามารถจัดเก็บหมายเลขโทรศัพท์และชื่อในหน่วยความจำของซิมการ์ดได้ และยังสามารถจัดเก็บชื่อและหมายเลขได้สูงถึง 1000 รายชื่อในหน่วยความจำของโทรศัพท์
คุณเรียกใช้ซิมการ์ดและโทรศัพท์ได้ด้วยวิธีการเดียว กันในเมนู รายชื่อ

การเลือกฟังก์ชันและตัวเลือกต่างๆ

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณสามารถปรับแต่งโทรศัพท์ได้โดยฟังก์ชันดังกล่าวนี้มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้ โดยผ่านทางปุ่ม เลือกสองปุ่ม **☰** และ **☱** เมนูและเมนูย่อยแต่ละเมนูช่วยให้คุณดูและเปลี่ยนแปลงการตั้งค่าของฟังก์ชันแต่ละฟังก์ชันได้

ปุ่มตัวเลือกอาจทำงานแตกต่างกันไปตามการใช้งาน ในขณะนั้นคุณสามารถดูการทำงานในขณะนั้นของปุ่ม เลือกได้จากข้อความที่ปรากฏในบรรทัดล่างสุดของ หน้าจอและอยู่เหนือปุ่มเลือกแต่ละปุ่ม



กดปุ่มเลือกซ้ายเพื่อ
เข้าใช้เมนูที่มีให้
เลือก

กดปุ่มเลือกขวาเพื่อ
เข้าใช้รายชื่อที่มีให้
เลือก

เมนูระหว่างการใช้สาย

โทรศัพท์ของคุณมีฟังก์ชันควบคุมมากมายให้คุณเลือกใช้ระหว่างการใช้สาย ในการเข้าใช้ฟังก์ชันดังกล่าวนี้ให้กดปุ่มเลือกซ้าย [ตัวเลือก]

ระหว่างการใช้สาย

เมนูที่ปรากฏบนหน้าจอโทรศัพท์ระหว่างการใช้สายจะ ต่างไปจากเมนูหลักที่ตั้งมาจากโรงงาน ซึ่งเข้าใช้จากหน้าจอขณะที่เปิดเครื่องรอรับสายโดยมีตัวเลือกต่างๆ ตามที่อธิบายดังต่อไปนี้


การใช้สายที่สอง


คุณสามารถเรียกใช้หมายเลขที่คุณต้องการโทรจากสมุดโทรศัพท์ เพื่อโทรออกสายที่สองได้ โดยกดปุ่มเลือกขวาแล้วเลือก **ค้นหา** ในการจัดเก็บหมายเลขที่โทรออกลงในสมุดโทรศัพท์ในระหว่างการสนทนาให้กดปุ่มเลือกขวาแล้วเลือก

การสลับระหว่างสองสาย

ในการสลับระหว่างสองสาย ให้กดปุ่มหรือปุ่มเลือกซ้าย และเลือก **สลับสาย**

การรับสายเรียกเข้า

ในการรับสายเรียกเข้าเมื่อมีเสียงเรียกเข้า ดังขึ้นที่เครื่องคุณเพียงแคกดปุ่ม  [ส่ง] โทรศัพท์ยังสามารถเตือนให้คุณทราบว่ามีสายเรียกเข้าอีกสายหนึ่งในระหว่างที่คุณสนทนากับอีกสาย โดยจะมีเสียงสัญญาณดังขึ้นในหูโทรศัพท์และหน้าจอก็จะแสดงให้เห็นว่ามีสายที่สองกำลังรออยู่ คุณสมบัตินี้เรียกว่า คุณสมบัตินี้เรียกสายเรียกซ้อน ซึ่งจะใช้งานได้เฉพาะกรณีทีระบบเครือข่ายของคุณสนับสนุน เท่านั้น สำหรับรายละเอียดในการเรียก ใช้และการยกเลิกการใช้ คุณสมบัตินี้ ให้ดูที่สายเรียกซ้อน (เมนู 9.6.4)

หากมีการใช้งานสายเรียกซ้อนคุณสามารถพักสายที่หนึ่ง และรับสายที่สองได้โดยกดปุ่ม  หรือโดยเลือกปุ่มเลือกซ้ายแล้วเลือกพักสาย & รับสาย คุณสามารถวางสายที่ใช้อยู่ และรับสายที่กำลังรออยู่ โดยเลือกปุ่มเลือกซ้าย ตามด้วย **วางสาย & รับสาย**

การปฏิเสธสายเรียกเข้า

คุณสามารถปฏิเสธสายเรียกเข้าได้ โดยไม่ต้องรับสายนั้นเพียงแคกดปุ่ม **๕** ในระหว่างการใช้น้ำสายคุณสามารถปฏิเสธสายเรียกเข้าได้โดยกดปุ่มเลือกซ้าย [เมนู] และเลือก หรือโดยกดปุ่ม **๕**

การปิดไมโครโฟน

คุณสามารถปิดเสียงไมโครโฟนระหว่างใช้น้ำสายโดยการ กดปุ่ม [เมนู] แล้วเลือก **ปิดไมค์** หรือคุณอาจเลือกไม ปิดเสียงของเครื่องโดยเลือก **เปิดไมค์** เมื่อปิดเสียงไมโครโฟน ผู้ที่โทรเข้ามาจะไม่ได้ยินเสียงคุณ แต่คุณยังคงได้ยินเสียงบุคคลนั้นได้

การเปิดใช้สัญญาณเสียง DTMF ระหว่างใช้น้ำสาย

ในการเปิดใช้สัญญาณเสียง DTMF ระหว่างใช้น้ำสาย ให้กดปุ่มเลือกซ้าย แล้วเลือก **เปิดใช้งาน DTMF** คุณสามารถปิดการใช้สัญญาณเสียง DTMF ได้ด้วย วิธีการเดียวกัน สัญญาณเสียง DTMF ช่วยให้เครื่องโทรศัพท์ของคุณใช้สวิตช์บอร์ดอัตโนมัติได้

การสนทนาหรือประชุมหลายสาย

บริการสนทนาหลายสาย หรือ การประชุมหลายสายช่วยให้คุณสนทนากับบุคคลหลายคนได้ในเวลาเดียวกัน หากผู้ให้บริการเครือข่ายของคุณ สามารถรองรับบริการดังกล่าว การสนทนาหลายสายสามารถทำได้เฉพาะในกรณีที่คุณใช้น้ำสายหนึ่งอยู่และพักอีกสายไว้ โดยรับสายทั้งสองแล้ว เมื่อกำหนดให้มีการสนทนาหลายสายแล้ว ผู้จัดให้มีการสนทนาหลายสายอาจ เพิ่มสาย, วางสาย หรือแยกสาย (กล่าวคือสายนั้นจะถูกตัดออกจากการสนทนาหลายสาย แต่ยังคงอยู่ในสายของคุณ) ตามความต้องการได้ ตัวเลือกเหล่านี้มีให้เลือกใช้ในเมนูระหว่างการใช้น้ำสาย จำนวนสายสูงสุดในการสนทนาแบบหลายสายคือ 5 สาย เมื่อเริ่มการประชุมหลายสายคุณ จะเป็นผู้ควบคุมสายสนทนาเหล่านั้นและมีเพียงคุณเท่านั้น ที่สามารถเพิ่มสายเข้ามาในการสนทนาได้

การใช้น้ำสายที่สอง

คุณสามารถใช้น้ำสายที่สองได้ขณะกำลังใช้น้ำสายสนทนาอยู่โดยป้อนหมายเลขที่สองแล้วกดปุ่ม **๕** เมื่อโทร ติดต่อสายที่สองได้แล้ว

เมเนจรหว่างการใช้สาย

สายแรกจะถูกพักสาย โดยอัตโนมัติ คุณ
สามารถสลับสายได้โดยกดปุ่มเลือกซ้าย
แล้วเลือก **สลับสาย**

การจัดการประชุมหลายสาย

พักสายหนึ่งสาย และขณะที่ใช้สายหนึ่งอยู่
ให้กดปุ่ม เลือกซ้าย แล้วเลือก **ประชุมสาย/
ประชุมสายทั้งหมด**

การพักสายที่กำลังประชุม

กดปุ่มเลือกซ้าย แล้วเลือก **ประชุมสาย/
พักสาย ทั้งหมด**

การเรียกใช้การประชุมหลายสาย ที่พักไว้

กดปุ่มเลือกซ้าย แล้วเลือก **ประชุมสาย/
ประชุม สายทั้งหมด**

การเพิ่มสายในการประชุมหลายสาย

เมื่อต้องการเพิ่มสายในการประชุมสายที่มีอยู่
ให้กด ปุ่มเลือกซ้าย แล้วเลือก **ประชุมสาย/
ประชุมสาย ทั้งหมด**

การแสดงผู้โทรในการประชุมสาย

เมื่อต้องการเลื่อนดูหมายเลขของบุคคลที่
เข้าร่วมประชุมสายในหน้าจอของเครื่องให้
ใช้ปุ่มนารีเกิดขึ้น/ลง

การสนทนาส่วนตัวระหว่างการประ ชุมสาย

เมื่อต้องการสนทนาเป็นการส่วนตัวกับผู้
เข้าร่วมประ ชุมสายให้หน้าจอแสดงหมายเลข
ของบุคคลที่คุณต้อง การสนทนาด้วย
แล้วกดปุ่มเลือกซ้าย เลือก **ประชุม สาย/
ส่วนตัว** เพื่อพักสายของบุคคลอื่น ๆ

การวางสายการประชุมหลายสาย

คุณสามารถวางสายของผู้โทรเข้าที่ปรากฏ
อยู่ใน ขณะนี้จากการประชุมหลายสายได้
โดยกดปุ่ม **๑** ในการสิ้นสุดการประชุมสาย
กดปุ่มเลือกซ้ายและเลือก **ประ ชุมสาย/
วางสายทั้งหมด** หลังกดปุ่มเลือกซ้าย
การเลือก **ประชุมสาย/วางสายทั้งหมด**
จะเป็นการวางสายที่ใช้อยู่และสายที่พักไว้
ทั้งหมด

แผนผังเมนู

ภาพประกอบต่อไปนี้แสดงโครงสร้างของเมนูที่มีและแสดงถึง :

▶ ตัวเลขที่กำหนดไว้สำหรับตัวเลือกของแต่ละเมนู

| |
|-------------------------|
| 1. รูปแบบเสียง |
| 1.X.1 เว็ททำงาน |
| 1.X.2 เปลี่ยนแปลง |
| 1.X.3 แกะไขข้อ |
| 2. ข้อมูลการโทร |
| 2.1 เบอร์ที่ไม่ได้รับ |
| 2.2 เบอร์ที่ได้รับ |
| 2.3 เบอร์ที่โทรออก |
| 2.4 รายการโทรที่ทั้งหมด |
| 2.5 ลบเบอร์ในรายการ |
| 2.6 เวลาและค่าโทร |
| 2.7 ข้อมูล GPRS |

| |
|----------------------|
| 3. เครื่องมือ |
| 3.1 เมนูโปรด |
| 3.2 นาฬิกาปลุก |
| 3.3 เครื่องคิดเลข |
| 3.4 การแปลงหน่วย |
| 3.5 เวลาโลก |
| 3.6 SIM-เมนู |
| 4. สมุดบันทึก |
| 4.1 รายชื่อ |
| 4.2 ปฏิทิน |
| 4.3 บันทึก |

| |
|----------------------|
| 5. ข้อความ |
| 5.1 เขียนข้อความใหม่ |
| 5.2 กล่องข้อความเข้า |
| 5.3 ร่าง |
| 5.4 กล่องข้อความออก |
| 5.5 ฟังข้อความเสียง |
| 5.6 บริการข้อมูล |
| 5.7 ข้อความอัตโนมัติ |
| 5.8 การตั้งค่า |

แผนผังเมนู

6. นัลดีมีเดีย

- 6.1 กล้องถ่ายรูป
- 6.2 กล้องวิดีโอ
- 6.3 เครื่องบันทึกเสียง
- 6.4 MP3
- 6.5 อัลบั้มภาพ
- 6.6 อัลบั้มวิดีโอ
- 6.7 การตั้งค่า

7. เมราว์เซอร์

- 7.1 โชม
- 7.2 บัคมาร์ค
- 7.3 ไปยัง URL
- 7.4 การตั้งค่า

8. แฟ้มส่วนตัว

- 8.1 เกมส์ & อื่นๆ
- 8.2 วิดีโอ
- 8.3 รูปภาพ
- 8.4 มิวสิค
- 8.5 ข้อความ
- 8.6 ภาพ
- 8.7 เสียง
- 8.8 อื่นๆ


9. การตั้งค่า

- 9.1 ธีมที่และฉาก
- 9.2 จอแสดงผล
- 9.3 การประหยัดพลังงาน
- 9.4 ภาษาเมนู
- 9.5 การเชื่อมต่อ
- 9.6 การโทร
- 9.7 รักษาความปลอดภัย
- 9.8 สถานะหน่วยความจำ
- 9.9 ใช้จ่ายจากโรงงาน

รูปแบบเสียง

ในรูปแบบเสียง คุณสามารถปรับเปลี่ยน และปรับแต่งเสียงสัญญาณของโทรศัพท์คุณให้เหมาะสม สัมกับเหตุการณ์สภาพแวดล้อม หรือกลุ่มผู้โทรที่แตกต่างกันได้รูปแบบที่ตั้งไว้ล่วงหน้า มี 5 รูปแบบด้วยกัน คือ: General, Silent, Vibrate only, Loud และ Headset โดยคุณสามารถปรับแต่งรูปแบบแต่ละรูปแบบได้ กดปุ่มเลือกซ้าย [เมนู v และเลือกรูปแบบเสียง โดยใช้ปุ่มนาวีเกชัน/ลง

เปิดทำงาน (เมนู 1.X.1)

1. รายการรูปแบบจะปรากฏขึ้น
2. ในรายการรูปแบบ ให้เลื่อนไปยังรูปแบบที่คุณต้องการใช้ และกดปุ่มเลือกซ้าย  ปุ่ม ตกลง
3. จากนั้น เลือก **เปิดทำงาน**

เปลี่ยนแปลง (เมนู 1.X.2)

ให้เลื่อนไปยังรูปแบบที่ต้องการในรายการรูปแบบ หลังจากกดปุ่มเลือกซ้าย หรือปุ่มตกลง ให้เลือก เปลี่ยนแปลง ตัวเลือกการตั้งค่ารูปแบบจะเปิดขึ้น

- ▶ **แบบเตือนสายเข้า:** ตั้งชนิดการเตือนเมื่อมีสาย เรียกเข้า

- ▶ **แบบเสียงเรียกเข้า:** เลือกเสียงเรียกเข้าที่ต้องการ จากรายการ
- ▶ **ระดับเสียงเรียกเข้า:** ตั้งระดับเสียงของเสียงเรียกเข้า
- ▶ **แบบเตือนข้อความ:** ตั้งชนิดการเตือนให้กับข้อความ
- ▶ **แบบเสียงข้อความ:** เลือกเสียงเตือนให้กับข้อความ
- ▶ **แบบเสียงปุ่มกด:** เลือกแบบเสียงของปุ่มกดที่ต้องการ
- ▶ **ระดับเสียงปุ่มกด:** ตั้งระดับเสียงของเสียงปุ่มกด
- ▶ **เสียงสไลด์:** ให้คุณตั้งค่าเสียงของฟาส์ไลด์
- ▶ **ระดับเสียงเอฟเฟคท์:** ตั้งระดับเสียงของเสียงเอฟเฟคท์
- ▶ **ระดับเสียงเปิด/ปิดเครื่อง:** ตั้งระดับเสียงของเสียง เรียกเข้าเมื่อเปิด/ปิดเครื่อง



รูปแบบเสียง

แก้ไขชื่อ (เมนู I.X.3)

คุณสามารถเปลี่ยนชื่อรูปแบบ และ กำหนดชื่ออื่นได้ตามต้องการ

หมายเหตุ

- ▶ คุณไม่สามารถเปลี่ยนชื่อรูปแบบสั้น ously เดียว, เจียบ และ ชุดหูฟัง

1. ในการเปลี่ยนชื่อรูปแบบ ให้เลื่อนไปยัง รูปแบบในรายการรูปแบบ และ หลังจาก กดปุ่มเลือกซ้าย  หรือปุ่ม OK ให้เลือก แก้ไขชื่อ
2. ป้อนชื่อที่ต้องการและกดปุ่ม OK หรือปุ่ม เลือกซ้าย  [ตกลง]

ข้อมูลการโทร

คุณสามารถดูบันทึกของ สายที่ไม่ได้รับสายที่รับ และสายโทรออกได้ หากว่าเครือข่ายสนับสนุนการ แสดงหมายเลขโทรเข้า (Calling Line Identification: CLI) ในพื้นที่ให้บริการ

ชื่อและหมายเลข (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และเวลาที่มีการโทรนั้น และคุณยังสามารถดูเวลาที่ใช้สายได้ด้วย

เบอร์ที่ไม่ได้รับ

เมนู 2.1

ตัวเลือกนี้ช่วยให้คุณดูหมายเลขที่ไม่ได้รับสาย 10รายการล่าสุดได้ และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออกหรือบันทึกไว้ใน สมุดโทรศัพท์
- ▶ ป้อนชื่อใหม่สำหรับหมายเลขและบันทึกไว้ในสมุดโทรศัพท์
- ▶ ส่งข้อความให้กับหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

เบอร์ที่ได้รับ

เมนู 2.2

ตัวเลือกนี้ช่วยให้คุณดูหมายเลขเรียกเข้า 10รายการล่าสุดได้ และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออกหรือบันทึกไว้ใน สมุดโทรศัพท์
- ▶ ป้อนชื่อใหม่สำหรับหมายเลข และบันทึกไว้ในสมุดโทรศัพท์
- ▶ ส่งข้อความให้กับหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

เบอร์ที่โทรออก

เมนู 2.3

ตัวเลือกนี้ช่วยให้คุณดูสายที่โทรออก (ที่โทรออก หรือพยายามโทรออก) 20 สายล่าสุดได้ และคุณยังสามารถ:

- ▶ ดูหมายเลข (ถ้ามี) และโทรออกหรือบันทึกไว้ใน สมุดโทรศัพท์
- ▶ ป้อนชื่อใหม่สำหรับหมายเลข และบันทึกไว้ในสมุดโทรศัพท์
- ▶ ส่งข้อความให้กับหมายเลขนี้
- ▶ ลบสายนั้นออกจากรายการ

ข้อมูลการโทร

รายการโทรทั้งหมด เมนู 2.4

คุณสามารถดูรายการสายโทรเข้า หรือสายโทรออกทั้งหมดได้

ลบเบอร์ในรายการ เมนู 2.5


ช่วยให้คุณลบรายการ เบอร์ที่ไม่ได้รับและเบอร์ที่ได้รับได้คุณสามารถลบรายการเบอร์ที่โทรออก และ รายการโทรทั้งหมดได้ในครั้งเดียว

เวลาและค่าโทร เมนู 2.6

เวลาที่โทร (เมนู 2.6.1)

ช่วยให้คุณสามารถดูระยะเวลาของสายที่โทรเข้าและโทรออกได้ และยังสามารถรีเซ็ตเวลาการโทรได้อีกด้วย โดยมีตัวจับเวลาดังต่อไปนี้:

- ▶ **เวลาโทรครั้งล่าสุด:** ระยะเวลาของการโทรครั้งล่าสุด

- ▶ **รายการโทรทั้งหมด:** ระยะเวลารวมของการ โทรออกและสายเรียกเข้าจะสามารถนับจากการรีเซ็ตตัวจับเวลาครั้งล่าสุด
- ▶ **เบอร์ที่ได้รับ:** ระยะเวลาของสายเรียกเข้า
- ▶ **เบอร์ที่โทรออก:** ระยะเวลาของสายโทรออก
- ▶ **ลบทั้งหมด:** ช่วยให้คุณรีเซ็ตระยะเวลาการโทรทั้งหมดได้โดยกดปุ่มเลือกซ้าย  [ซ้าย]

แสดงค่าโทร (เมนู 2.6.2)

ช่วยให้คุณสามารถตรวจสอบค่าโทรครั้งล่าสุด ค่าโทรทั้งหมด ค่าที่เหลือและรีเซ็ตค่าโทรได้ คุณต้องใส่รหัส PIN2 ในการรีเซ็ตค่าใช้จ่ายในการโทร

การตั้งค่า (เมนู 2.6.3)

(ขึ้นอยู่กับซิมการ์ด)

- ▶ **ตั้งอัตราค่าบริการ:** คุณสามารถตั้งค่าประเภทสกุลเงิน และราคาต่อ หน่วยได้ โปรดติดต่อ ผู้ให้บริการระบบของคุณเพื่อขอทราบค่าใช้จ่ายต่อหน่วย

คุณต้องใช้รหัส PIN2 ในการ เลือกสกุลเงินหรือหน่วยในเมนู

- ▶ **ตั้งค่าเครดิต:** บริการเครือข่ายนี้ ให้คุณจำกัดค่าโทรของคุณด้วยจำนวนหน่วยการโทร ที่เลือกไว้หากคุณเลือกเช็คเครดิตที่เหลือเครื่องจะแสดงจำนวนหน่วยการโทรที่เหลืออยู่ หากคุณเลือกเปลี่ยนคุณจะสามารถเปลี่ยนจำนวนหน่วยของการจำกัดการโทรของคุณได้
- ▶ **แสดงอัตรานาที:** บริการเครือข่ายนี้ให้คุณดู ค่าโทรครั้งล่าสุดของคุณได้โดยอัตโนมัติ หากตั้งค่าที่ เปิด คุณสามารถดูค่าโทรครั้งล่าสุดได้ เมื่อวางสาย

ข้อมูล GPRS เมนู 2.7

คุณสามารถตรวจสอบจำนวนข้อมูลที่โอนถ่าย ผ่านทางเครือข่ายด้วยระบบ GPRS และยังสามารถดูระยะเวลาทั้งหมดที่คุณออนไลน์ได้

เวลาที่โทร (เมนู 2.7.1)

คุณสามารถตรวจสอบระยะเวลาการโทรของการโทรครั้งล่าสุด และการโทรทุกสายและยังสามารถรีเซ็ตเครื่องจับเวลาการโทรได้ใหม่อีกด้วย

ขนาดข้อมูล (เมนู 2.7.2)

คุณสามารถตรวจสอบข้อมูลในเมนู ส่งแล้ว, รับแล้ว, ทั้งหมด, ลบทั้งหมด

เครื่องมือ

เมนูโปรด

เมนู 3.1

ตัวเลือกนี้ช่วยให้คุณเพิ่ม เมนูโปรด ลงในรายการที่มีให้ เมื่อคุณสร้างเมนูส่วนตัวของคุณแล้วคุณสามารถเข้าสู่ฟังก์ชันที่ต้องการได้อย่างรวดเร็วในหน้าจอว่างโดยการกดปุ่มเลื่อนขึ้น

หมายเหตุ



- ▶ เมนู SMS, MMS, เกมส์ & อื่นๆ, การเชื่อมต่อ, นาฬิกาปลุก, MP3 และกล้องถ่ายรูป มีให้ไว้ในรายการที่ชื่นชอบของคุณแล้ว

นาฬิกาปลุก

เมนู 3.2

คุณสามารถตั้งนาฬิกาปลุกได้ 5 เวลาตามเวลาที่กำหนดไว้





1. เลือก เปิด แล้วตั้งเวลาปลุกตามที่ต้องการ
2. เลือกช่วงเวลาที่ต้องการให้ปลุกซ้ำ: **ครั้งเดียว, จันทร์-ศุกร์, จันทร์~เสาร์, ทุกวัน**

3. เลือกชนิดของเสียงปลุกที่ต้องการแล้วกดปุ่ม  [ตกลง]
4. กำหนดชื่อให้กับเวลาปลุกแล้วกดปุ่ม  [ตกลง]

เครื่องคิดเลข

เมนู 3.3






เมนูนี้มีฟังก์ชันการคำนวณแบบมาตรฐาน ได้แก่ +, -, x, ÷ : บวก, ลบ, คูณ และหาร นอกจากนี้ คุณสามารถใช้ฟังก์ชันเครื่องคิดเลขได้หลากหลาย เช่น **+/-, sin, cos, tan, log, IN, exp, sqrt.**

1. ป้อนตัวเลขโดยการกดปุ่มตัวเลข
2. ใช้ปุ่มนารีเคตเพื่อเลือกเครื่องหมายการคำนวณ
3. แล้วป้อนตัวเลข
4. กดปุ่ม  เพื่อดูผลลัพธ์
5. ในการป้อนเลขทศนิยม กดปุ่ม  หากคุณกดปุ่ม  คุณสามารถป้อน ()
6. เมื่อต้องการออกจาก เครื่องคิดเลข ให้กดปุ่ม  [กลับ]

การแปลงหน่วย

เมนู 3.4

ใช้แปลงหน่วยวัดให้เป็นหน่วย ที่คุณต้องการ โดยมีประเภทหน่วยวัด 9 แบบที่สามารถแปลงหน่วยได้ดังนี้: **สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร, ความเร็ว, รongเทา และ เลือผา**

1. คุณสามารถเลือกประเภทใดประเภทหนึ่งจากทั้ง 4 ประเภทนั้น โดยการกดปุ่ม  [หน่วย]
2. เลือกหน่วยที่คุณต้องการแปลงค่าโดยการกดปุ่ม  และ  คุณไม่สามารถป้อนสัญลักษณ์ "-" ในตัวแปลงหน่วยได้
3. เลือกค่ามาตรฐานโดยใช้ปุ่ม ,  .

เวลาโลก

เมนู 3.5

คุณสามารถตรวจสอบเวลาปัจจุบันของ Greenwich Mean Time (GMT) และ เวลาของเมืองใหญ่ทั่วโลกได้ โดยใช้ปุ่มนาฬิกา ข้าย/ขวา

หน้าจจะแสดงชื่อเมือง วันที่และเวลาปัจจุบัน

เมื่อต้องการเลือกเขตเวลาของเมืองที่คุณอยู่ให้ดำเนินการดังนี้

1. เลือกเมืองที่ต้องการตามเขตเวลาของคุณ โดยกดปุ่มนาฬิกาข้าย/ขวา วันที่และเวลาในท้องถิ่นจะปรากฏขึ้น
2. หากคุณต้องการเปลี่ยนเวลาที่แสดงในโหมด สแตนด์บายเป็นเวลาที่คุณเลือก ให้กดปุ่ม เลือกข้าย และเลือก Set

SIM-เมนู

เมนู 3.6

เมนูนี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของ
เครือข่าย


หมายเหตุ

- ▶ ในกรณีที่ซิมการ์ดสนับสนุนบริการ SAT (เช่น SIM Application Toolkit) เมนูนี้จะเป็นชื่อบริการของผู้ให้บริการซึ่งจัดเก็บไว้ในซิมการ์ด
- ▶ ในกรณีที่ซิมการ์ดไม่สนับสนุนบริการ SAT เมนูนี้จะเป็น โปรไฟล์

รายชื่อ


เมนู 4.1

ค้นหารายชื่อ (เมนู 4.1.1)

1. เลือกค้นหา โดยการกดปุ่มเลือกด้านขวา  [รายชื่อ] หรือ [ตกลง]
2. ป้อนชื่อที่คุณต้องการค้นหา

หมายเหตุ

- ▶ การค้นหาตัวส่วนสามารถทำได้ด้วยการป้อนอักขระตัวแรกของชื่อ หรือตัวเลขแรกที่คุณต้องการค้นหา

3. หากคุณต้องการแก้ไข ลบ หรือคัดลอกรายการใดๆ เลือกปุ่มเลือกด้านซ้าย  [ตัวเลือก] เมนูต่อไปนี้จะปรากฏขึ้น

- ▶ **แก้ไข:** คุณสามารถแก้ไขชื่อ, หมายเลข, กลุ่ม, ตัวอักษร และรูปภาพได้โดยใช้ปุ่มนาฬิกา
- ▶ **เขียนข้อความ:** สังเกตว่าคุณพบหมายเลยที่คุณต้องการแล้วคุณสามารถส่งข้อความแบบตัวอักษร / ข้อความมัลติมีเดีย ไปยังหมายเลขที่เลือกได้
- ▶ **ส่งทางบลูทูธ :** คุณสามารถส่งข้อมูลสมุดโทรศัพท์ไปยังเครื่องที่ใช้งานบลูทูธได้

- ▶ **คัดลอกไปยังเครื่อง:** คุณสามารถคัดลอกรายการจากซิมการ์ดไปยังเครื่อง หรือจากเครื่องไปยังซิมการ์ด
- ▶ **กำหนดโทรด่วน:** คุณสามารถกำหนดรายชื่อใดๆ เป็นการโทรด่วนได้
- ▶ **ดูกลุ่มผู้โทร:** โปรดดูรายละเอียดเพิ่มเติมที่ (เมนู 4.1.3)
- ▶ **ลบ:** คุณสามารถลบรายการได้

หมายเหตุ

- ▶ ในการใช้คุณสมบัติ Photo Caller ID รายชื่อนั้นต้องอยู่ในสมุดโทรศัพท์และภาพถ่ายต้องมีความละเอียด 72x72 สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการเพิ่มภาพให้กับรายชื่อ โปรดดูที่หัวข้อกล้องถ่ายรูป

เพิ่มชื่อ (เมนู 4.1.2)








คุณสามารถเพิ่มรายชื่อในสมุดโทรศัพท์ได้โดยใช้ฟังก์ชันนี้ หน่วยความจำของตัวเครื่องสามารถบันทึกได้ 1000 รายชื่อส่วนความจุของหน่วยความจำของซิมการ์ดขึ้นอยู่กับผู้ให้บริการระบบโทรศัพท์คุณยังสามารถบันทึกตัวอักษรได้ 40 ตัว ในแต่ละชื่อลงในหน่วยความจำของโทรศัพท์และบันทึกตัวอักษร

สมุดบันทึก

สรต่างๆ ลงใน ซิมการ์ดได้ด้วย จำนวนตัวอักษรในซิมการ์ดขึ้นอยู่กับแต่ละคุณสมบัต

หมายเหตุ

- ▶ ความยาวสูงสุดของชื่อและหมายเลขที่จัดเก็บได้นั้นขึ้นอยู่กับชนิดของซิมการ์ด

1. เลือก **เพิ่มชื่อ** โดยกดปุ่มเลือกซ้าย  [ตกลง] หรือ [ตกลง]
2. เลือกชนิดหน่วยความจำที่ต้องการใช้บันทึก: ซิมการ์ด หรือ เครื่องโทรศัพท์ หากตั้งค่าที่เครื่องโทรศัพท์ คุณต้องเลือกว่าต้องการ ให้หมายเลขใดเป็นหมายเลขหลัก
 - a. กดปุ่ม  [ตกลง] เพื่อป้อนชื่อ
 - b. กดปุ่ม  [ตกลง] แล้วป้อนหมายเลขโทรศัพท์
 - c. คุณสามารถตั้งกลุ่มของรายการนั้นได้ด้วยการกดปุ่ม  , 
 - d. คุณสามารถกำหนดภาพที่ใช้ในการป้อนได้โดยกดปุ่ม  , 

กลุ่มผู้โทรเข้า (มพ 4.1.3)

คุณสามารถกำหนดจำนวนสมาชิกได้ 20 ชื่อใน 1 กลุ่ม และสามารถกำหนดได้ทั้งหมด 7 กลุ่ม

- ▶ รายชื่อสมาชิกแสดงสมาชิกของกลุ่มที่คุณเลือก
- ▶ **กลุ่มเสียงเรียกเข้า:** ใช้ในการระบุเสียงเรียก เข้าสำหรับสายเรียกเข้าของแต่ละกลุ่ม
- ▶ **รูปไอคอนกลุ่ม:** ให้คุณเลือกไอคอนประจำ กลุ่มได้
- ▶ **เพิ่มสมาชิก:** สำหรับใช้เพิ่มสมาชิกของกลุ่ม จำนวนสมาชิกของแต่ละกลุ่มจะต้องไม่เกิน 20 คน
- ▶ **ลบสมาชิก:** คุณสามารถลบสมาชิกออกจากรายชื่อสมาชิกของกลุ่มได้แต่ ชื่อและหมายเลขดังกล่าวยังคงอยู่ในสมุดโทรศัพท์
- ▶ **แก้ไขชื่อ:** คุณสามารถเปลี่ยนชื่อกลุ่มได้
- ▶ **ลบทั้งหมด:** ใช้ลบสมาชิกทั้งหมดในกลุ่ม

โทรถ่วง (เมนู 4.1.4)

กำหนดรายชื่อให้กับปุ่มใดๆ ตั้งแต่ **2๘** ถึง **๑๓** คุณสามารถติดต่อบุคคลนั้น โดยการกดปุ่มตัวเลขตามที่กำหนดไว้

1. เริ่มต้นที่การเปิดสมุดโทรศัพท์ด้วยการกดปุ่ม **☰** [ชื่อ] เมื่อเครื่องอยู่ในโหมดสแตนด์บาย
2. เลื่อนแถบสีไปที่ โทรถ่วง แล้วกดปุ่ม **☑** [ตกลง]
3. หากต้องการเพิ่ม โทรถ่วงให้เลือก <ว่างเปล่า> จากนั้น คุณจะสามารถค้นหาชื่อในสมุดโทรศัพท์ได้
4. หลังจากกำหนดหมายเลขใดๆ ให้เป็นการโทรถ่วงคุณสามารถเปลี่ยน และลบรายการนั้นได้ และยังสามารถโทรออกหรือส่งข้อความไปยังหมายเลขนี้ได้เช่นกัน

หมายเลขเครื่อง (ขึ้นอยู่กับซิมการ์ด) (เมนู 4.1.5)

คุณสามารถบันทึก และตรวจสอบหมายเลขส่วนตัวของคุณในซิมการ์ดได้

นามบัตร (เมนู 4.1.6)

ตัวเลือกนี้ใช้ เพื่อสร้างนามบัตรส่วนตัวที่มีข้อมูลชื่อและหมายเลขโทรศัพท์เคลื่อนที่ในการสร้างนามบัตรใหม่ ให้กดปุ่มเลือกซ้าย **☰** [ตกลง] และป้อนข้อมูลลงในฟิลด์

การตั้งค่า (เมนู 4.1.7)

1. กดปุ่ม **☰** [รายชื่อ] ในโหมดสแตนด์บาย
2. เลื่อนแถบมาที่ การตั้งค่า แล้วกดปุ่ม **☑** [ตกลง]

▶ หน่วยความจำเริ่มต้น

เลื่อนแถบสีมาที่ หน่วยความจำเริ่มต้น แล้วกดปุ่มเลือกซ้าย **☑** [ตกลง]

- หากคุณเลือก **ถามเสมอ** เมื่อเพิ่มชื่อเครื่องจะ ถามว่าจะให้บันทึกในหน่วยความจำได้
- หากคุณเลือก **ซิม** หรือ **โทรศัพท์** เครื่องจะจัดเก็บรายการดังกล่าวในซิมการ์ดหรือโทรศัพท์

สมุดบันทึก



▶ เลือกการแสดงผล

เลือกแถบสีที่ **เลือกการแสดงผล** แล้วกดปุ่ม  [ตกลง]

- **แสดงเฉพาะชื่อ:** ตั้งค่ารายชื่อในสมุดโทรศัพท์ให้แสดง เฉพาะชื่อนั้น
- **ชื่อและเบอร์:** ตั้งค่ารายชื่อในสมุดโทรศัพท์ให้แสดงชื่อและหมายเลข
- **แสดงพร้อมภาพ:** ตั้งค่ารายชื่อในสมุดโทรศัพท์ให้มีทั้งข้อมูลที่เป็นตัวอักษรและภาพ

▶ คัดลอก/ลบทั้งหมด

คุณสามารถบันทึก/ย้ายรายการจากหน่วยความจำของซิมการ์ดไปยังหน่วยความจำของเครื่อง และสลับกันได้อีกด้วย





1. เริ่มจากเปิดสมุดโทรศัพท์ด้วยการกด ปุ่ม  [รายชื่อ] เมื่อเครื่องอยู่ในโหมดสแตนด์บาย
2. เลือกแถบมาที่ **คัดลอก/ลบทั้งหมด** แล้วกดปุ่มเลือกซ้าย  [เลือก] เพื่อเข้าสู่เมนูนี้
 - **ซิมไปยังเครื่อง:** คุณสามารถคัดลอกรายการจากซิมการ์ดไปยัง หน่วยความจำของตัวเครื่อง

- **เครื่องไปยังซิม:** คุณสามารถคัดลอกรายการจากหน่วยความจำของตัวเครื่องไปยังซิมการ์ดได้

▶ **หน่วยความจำที่ใช้:** คุณสมบัตินี้ให้คุณตรวจดูจำนวนหน่วยความจำที่ใช้และที่ว่างอยู่ในสมุดโทรศัพท์ของคุณ

▶ ลบรายชื่อ

คุณสามารถลบรายการทั้งหมดในซิม และในโทรศัพท์ ฟังก์ชันนี้ต้องใช้รหัสรักษาความปลอดภัย

1. เลือกแถบสีที่ **ลบรายการ** แล้วกดปุ่มเลือกซ้าย  [ตกลง]
2. ไฮไลต์ที่หน่วยความจำซึ่งคุณต้องการลบและกดปุ่มเลือกซ้าย  [ตกลง]
3. ป้อนรหัสรักษาความปลอดภัยแล้วกดปุ่ม  [ตกลง] หรือ  [ยกเลิก]

▶ เบอร์บริการ

ให้ฟังก์ชันนี้เพื่อเข้าดูรายการบริการที่ผู้ให้บริการ ระบบของคุณให้บริการ (หากซิมการ์ดสนับสนุน)

ปฏิทิน

เมนู 4.2

เมื่อคุณเข้าสู่เมนูนี้ เครื่องจะแสดงปฏิทินเดือนและปีจะปรากฏที่ด้านบนสุดของหน้าจอเมื่อใดก็ตามที่คุณเปลี่ยนวันที่ในเมนูการตั้งค่าปฏิทินจะอัปเดตอัตโนมัติ วันที่ปัจจุบันจะถูกไฮไลต์ด้วยสีเขียว และกำหนดการหรือบันทึกเดือนความจำ จะแสดงด้วยเครื่องหมายสามเหลี่ยมสีแดงที่มุมบนซ้ายของเครื่องหมายสี่เหลี่ยมที่สอดคล้องกัน เสียงเตือนสามารถตั้งไว้สำหรับบันทึกเดือนความจำและการเตือน

การเปลี่ยนวัน เดือน และปี ให้ทำดังนี้

| ปุ่ม | คำอธิบาย | ปุ่ม | คำอธิบาย |
|------|----------|------|------------|
| | ทุกปี | | ทุกสัปดาห์ |
| | ทุกเดือน | | ทุกวัน |





ในโหมดปฏิทิน กดปุ่มเลือกซ้าย [ตัวเลือก] เพื่อเข้าสู่ตัวเลือก:

เพิ่มใหม่ (เมนู 4.2.1)

ช่วยให้คุณเพิ่มตารางนัดหมาย และบันทึกใหม่ให้กับวันที่เลือกได้ โดยคุณสามารถบันทึกได้ถึง 20 รายการป้อนหัวเรื่องแล้วกดปุ่มเลือก ซ้าย [ตกลง] ให้คุณป้อนข้อมูลที่เหมาะสมในหัวข้อ เวลา, เดือนเช้าและเดือน

สมุดบันทึก

ดูตารางนัดหมายทุกวัน (เมนู 4.2.2)

ดูตารางนัดหมาย และบันทึกทั้งหมดของวันที่ เลือกใหม่ ,  เพื่อเบร่าส์ไปที่รายการ บันทึกต่าง ๆ หากคุณตั้งค่าให้เครื่อง แจ้งเตือนสำหรับบันทึกนั้น ๆ ไอคอนแจ้งเตือนจะปรากฏขึ้นหากต้องการดูรายละเอียดของบันทึก ใหญ่ดปุ่มเลือก ซ้าย  [ตกลง] กดปุ่มเลือกซ้าย  [ตัวเลือก] เพื่อลบ, แก้ไขบันทึกที่คุณเลือก

ลบกำหนดการล่าสุด (เมนู 4.2.3)

คุณสามารถลบกำหนดการที่ได้แจ้งเตือนคุณแล้วออกได้

ลบทั้งหมด (เมนู 4.2.4)

คุณสามารถลบบันทึกทั้งหมด

ไปที่วันที่ (เมนู 4.2.5)




คุณสามารถไปยังวันที่ที่เลือกไว้ได้โดยตรง

ตั้งเสียงเตือน (เมนู 4.2.6)


คุณสามารถตั้งเสียงเตือนของแต่ละวันที่เลือกไว้

บันทึก

เมนู 4.3

1. เลือกบันทึกโดยการกดปุ่มเลือกซ้าย  [ตกลง]
2. หากไม่มีบันทึก สามารถเพิ่มใหม่ได้โดยการกดปุ่มเลือกซ้าย  [เขียน].
3. ป้อนบันทึกเตือนความจำ แล้วกดปุ่ม  [ตกลง]

หมายเหตุ


- ▶ หากคุณต้องการเปลี่ยนโหมดป้อนข้อความ ใหญ่ดปุ่ม  ตามลำดับ

เขียนข้อความใหม่ เมนู 5.1


เมนูนี้ประกอบด้วยฟังก์ชันที่เกี่ยวกับ SMS (บริการ เขียนข้อความสั้น), MMS (บริการข้อความมัลติมีเดีย) , อีเมล, ข้อความเสียง รวมทั้งข้อความ บริการของเครือข่าย

เขียนข้อความตัวอักษร (เมนู 5.1.1)

คุณสามารถเขียนและแก้ไขข้อความแบบตัวอักษร และตรวจสอบจำนวน หน้าของข้อความได้โดย:



1. เข้าสู่เมนูข้อความใหม่โดยกดปุ่มเลือกซ้าย  [ตกลง]
2. หากคุณต้องการพิมพ์ข้อความใหม่ ให้เลือก **เขียนข้อความตัวอักษร**
3. เพื่อให้การพิมพ์ข้อความง่ายขึ้น ให้ใช้คุณสมบัติ T9
4. กดปุ่ม [แนบไฟล์] เพื่อแทรกรายการต่างลงในข้อความ

แนบไฟล์

- ▶ **ภาพ:** คุณสามารถแทรกกราฟิกที่กำหนดไว้ หรือกราฟิกในรูปภาพของฉันทที่สามารถใช้ กับข้อความสั้นได้
 - ▶ **เสียง:** สำหรับแทรกเสียงที่สามารถนำมาใช้กับการส่ง ข้อความได้
 - ▶ **ข้อความอัตโนมัติ:** คุณสามารถใช้ข้อความสำเร็จรูปจาก ข้อความอัตโนมัติซึ่งเก็บในเครื่องโทรศัพท์ได้
 - ▶ **รายชื่อ:** คุณสามารถเพิ่มหมายเลขโทรศัพท์ หรืออีเมลแอดเดรสในสมุดที่อยู่ได้
 - ▶ **สัญลักษณ์:** สำหรับเพิ่มสัญลักษณ์พิเศษลงในข้อความ
 - ▶ **นามบัตรส่วนตัว:** คุณสามารถใส่นามบัตรส่วนตัว ในข้อความได้
5. หลังจากคุณป้อนข้อความเสร็จแล้ว เลือกตัวเลือกที่ต้องการ โดยกดปุ่ม เลือกซ้าย  [ตัวเลือก]

ข้อความ

ตัวเลือก

- ▶ **ส่ง:** ใช้ส่งข้อความแบบตัวอักษร
- 1. ป้อนหมายเลขโทรศัพท์ของผู้รับ
- 2. กดปุ่ม  เพื่อไม่ชื่อผู้รับ
- 3. คุณสามารถเพิ่มหมายเลขโทรศัพท์ในสมุดที่อยู่ได้
- 4. เมื่อป้อนหมายเลขแล้ว กดปุ่มเลือกซ้าย  เพื่อส่งข้อความ ข้อความทั้งหมดจะถูกจัดเก็บในกล่องข้อความออกโดยอัตโนมัติ แม้ว่าจะส่งข้อความนั้นไม่สำเร็จก็ตาม
- ▶ **บันทึกการร่าง:** เก็บข้อความในร่าง
- ▶ **ตัวอักษร&แนว:** คุณสามารถเลือกขนาดและรูปแบบของตัวอักษร และแนวการจัดวางข้อความ
- ▶ **สี:** คุณยังสามารถตั้ง สี ของข้อความ (ด้านหน้า) และพื้นหลังได้เช่นกัน
- ▶ **เพิ่มพจนานุกรม T9 :** คุณสามารถใช้เพื่อเพิ่มคำต่างๆ ตามต้อง การจะมีการแสดงเมนูนี้เฉพาะกรณีที่ใช้โหมดการแก้ไขเป็นชนิด Predictive (T9Abc/T9abc/T9ABC) เท่านั้น


- ▶ **ภาษา T9:** เลือกภาษาสำหรับโหมดป้อนข้อความ T9 ที่ต้องการ คุณยังสามารถเลือกใช้ โหมดป้อนข้อความ T9 โดยเลือก 'ไม่ใช่ T9'
- ▶ **ออก:** หากคุณกดออก ขณะเขียนข้อความ คุณจะกลับไปยังเมนูข้อความ ข้อความที่เขียนไว้จะไม่ได้รับการบันทึก

หมายเหตุ

- ▶ โทรศัพท์รุ่นนี้รองรับ EMS รีลีส 5 คุณสามารถส่งภาพสี, เสียง, รูปแบบข้อความต่างๆ ฯลฯ หากโทรศัพท์ของอีกฝ่ายหนึ่งไม่รองรับตัวเลือกดังกล่าว ภาพ เสียง หรือ ข้อความที่ส่งไปอาจแสดงที่เครื่องของบุคคลนั้นไม่ถูกต้อง

เขียนข้อความมัลติมีเดีย (เมนู 5.1.2)

ข้อความมัลติมีเดีย จะประกอบด้วยข้อความ ภาพ และ/หรือคลิปเสียงคุณสมบัตินี้สามารถ ใช้ ได้ ในกรณีที่ผู้ให้บริการเครือข่ายหรือผู้ให้บริการ รองรับเท่านั้น โทรศัพท์ที่คุณสมบัติ อีเมลและ ข้อความมัลติมีเดียที่ใช้งานร่วมกัน ได้ เท่านั้นจึงจะรับและส่งข้อความมัลติมีเดีย ได้ หรือคุณสมบัติอีเมล สามารถรับและส่งข้อความมัลติมีเดียได้

1. เข้าสู่เมนูข้อความใหม่โดยกดปุ่มเลือกซ้ำ  [ตกลง]
2. หากคุณต้องการพิมพ์ข้อความใหม่ ให้เลือกเขียนข้อความมัลติมีเดีย
3. คุณสามารถพิมพ์ข้อความขึ้นใหม่หรือเลือก ข้อความมัลติมีเดียสำเร็จรูปขึ้นมาหนึ่งข้อความจาก ที่สร้างไว้แล้ว
4. กด Insert เพื่อเพิ่มภาพ เสียง รายชื่อสัญลักษณ์ ภาพถ่ายใหม่ เสียงใหม่ เทมเพลตข้อความ นามบัตรส่วนตัว

ขนาดไฟล์สูงสุดที่ใช้ได้ ซึ่งสามารถใส่ในข้อความ MMS ได้คือขนาด 100 Kb

ตัวเลือก

- ▶ **ส่ง:** คุณสามารถส่งข้อความมัลติมีเดียไปยังผู้รับหลายคน รวมทั้งบันทึกไว้เพื่อส่งในภายหลัง

หมายเหตุ

- ▶ ข้อความทั้งหมดจะถูกจัดเก็บในกล่องข้อความออกโดยอัตโนมัติแม้ว่าจะส่งข้อความนั้นไม่สำเร็จก็ตาม
- ▶ **นำเสนอ:** คุณสามารถดูข้อความมัลติมีเดียตัวอย่างที่คุณสร้างขึ้นได้
- ▶ **บันทึก:** คุณสามารถบันทึกข้อความมัลติมีเดียลงใน กล่องข้อความออก หรือบันทึกเป็นข้อความสำเร็จ รูปก็ได้
- ▶ **แก้ไขหัวข้อ:** ให้คุณแก้ไขข้อความมัลติมีเดียที่คุณเลือกไว้
- ▶ **เพิ่มสไลด์:** คุณสามารถเพิ่มสไลด์ให้อยู่หน้า หรือหลังสไลด์ที่มีอยู่ ปัจจุบันได้
- ▶ **ย้ายสไลด์:** ใช้สำหรับเลื่อนดูสไลด์ก่อนหน้า หรือ สไลด์ถัดไป
- ▶ **ลบสไลด์:** คุณสามารถลบโฟลเดอร์ปัจจุบัน ได้

ข้อความ

- ▶ **ตั้งรูปแบบสไลด์**
 - ตั้งเวลา: คุณสามารถกำหนดช่วงเวลาแสดงสไลด์, ข้อความ, ภาพ, และเสียงได้
 - **สลับระหว่างข้อความและภาพ:** คุณสามารถสลับตำแหน่งของภาพและตัวอักษรในข้อความได้
- ▶ **ลบบีเดีย:** คุณสามารถลบภาพหรือเสียงในสไลด์ได้ ตัวเลือกนี้จะปรากฏเมื่อมีการเพิ่มไฟล์มีเดียเท่านั้น
- ▶ **เพิ่มพจนานุกรม T9:** คุณสามารถใช้เพื่อเพิ่มคำต่างๆ ตามต้องการ เมนูนี้จะปรากฏเฉพาะในกรณีที่ตั้งโหมดแก้ไขไว้ที่ T9ABC/ T9Abc/T9abc
- ▶ **T9 ภาษา:** เลือกภาษาสำหรับโหมดป้อนข้อความ T9 คุณสามารถเลือกใช้โหมดป้อนข้อความ T9 โดย เลือก 'ไม่ใช่ T9'
- ▶ **ออก:** จะกลับสู่เมนูข้อความ

หมายเหตุ








- ▶ ในขณะที่คุณสร้างข้อความมีลติมีเดีย หากคุณอัปโหลดภาพ (50K) คุณอาจพบว่า ขณะที่อัปโหลดภาพนั้น คุณจะดำเนินการอื่นๆ ไม่ได้ จนกว่าจะโหลดเสร็จ

กล่องข้อความเข้า เมนู 5.2

เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้าโดยข้อความเหล่านี้จะถูกจัดเก็บในกล่องข้อความเข้า

ในกล่องข้อความเข้า คุณสามารถทราบประเภทของข้อความแต่ละข้อความได้ โดยดูจากไอคอน โปรดดูรายละเอียดได้ที่หัวข้อความหมายของ ไอคอน

ไอคอน ความหมายของไอคอน

| | |
|---|---------------------------------|
|  | ข้อความมัลติมีเดีย |
|  | ข้อความสั้น |
|  | ข้อความซิมการ์ด |
|  | ข้อความมัลติมีเดียที่อ่านแล้ว |
|  | ข้อความแบบตัวอักษรที่อ่านแล้ว |
|  | ข้อความของ WAP |
|  | ข้อความมัลติมีเดียชนิดแจ้งเตือน |

หากเครื่องแสดงข้อความ 'ข้อความในซิมการ์ดเต็ม' คุณต้องลบเฉพาะข้อความ ซิมการ์ด ออกจาก กล่องข้อความเข้า หากเครื่องแสดงข้อความ 'ข้อความเต็ม' คุณสามารถทำให้พื้นที่จัดเก็บแต่ละส่วนว่างได้ด้วยการลบข้อความ, ภาพหรือเสียง และแอปพลิเคชันต่างๆ

* ข้อความในซิมการ์ด

ข้อความในซิมการ์ด หมายถึง ข้อความที่จัดเก็บ อยู่ในซิมการ์ดโดยเฉพาะ เมื่อคุณได้รับแจ้งว่าคุณได้รับข้อความมัลติมีเดีย คุณต้องรอให้ดาวน์โหลดข้อความนั้นเสร็จก่อนจึงจะดูข้อความได้

ในการอ่านข้อความ เลือกข้อความ โดยกดปุ่มเลือกซ้าย  [ตัวเลือก]

- ▶ **แสดง:** คุณสามารถดูข้อความที่ได้รับได้
- ▶ **ตอบกลับ:** คุณสามารถตอบกลับผู้ส่งข้อความได้
- ▶ **ส่งต่อ:** คุณสามารถส่งต่อข้อความที่เลือกนั้นให้บุคคลอื่นได้
- ▶ **ลบ:** คุณสามารถลบข้อความนั้นได้

ข้อความ

- ▶ **โทรกลับ:** คุณสามารถโทรกลับผู้ส่งข้อความได้
- ▶ **ข้อมูล:** คุณสามารถดูข้อมูลเกี่ยวกับข้อความที่ได้รับ เช่น ที่อยู่ของผู้ส่ง, หัวเรื่อง (เฉพาะข้อความมัลติมีเดียเท่านั้น), วันที่และเวลาของข้อความ, ประเภทข้อความ และขนาดข้อความ
- ▶ **ลบทั้งหมด:** คุณสามารถลบข้อความทั้งหมดได้

ร่าง

เมนู 5.3

การใช้เมนูนี้ช่วยให้คุณกำหนดข้อความมัลติมีเดียได้ล่วงหน้าสูงสุด 5 ข้อความซึ่งเป็นข้อความที่คุณใช้บ่อยโดยเมนูนี้จะแสดงรายการข้อความมัลติมีเดียที่คุณกำหนดไว้ล่วงหน้าตัวเลือกที่คุณเลือกใช้ได้มีดังนี้

- ▶ **แสดง:** คุณสามารถดูข้อความมัลติมีเดียต่างๆ
- ▶ **แก้ไข:** ให้คุณแก้ไขข้อความที่เลือก
- ▶ **ลบ:** ลบข้อความที่คุณเลือก
- ▶ **ข้อมูล:** เพื่อดูข้อมูลของข้อความนั้น
- ▶ **ลบทั้งหมด:** ลบข้อความทั้งหมดในสไลด์

กล่องข้อความออก เมนู 5.4



เมนูนี้ให้คุณดูข้อความซึ่งคุณได้ส่ง ข้อความที่กำลังส่งในปัจจุบัน หรือข้อความที่เกิดข้อผิดพลาดในการส่งในครั้งที่แล้ว

ไอคอน ความหมายของไอคอน

| | |
|---|-------------------------|
|  | MMS ที่ยังไม่ส่ง |
|  | MMS ที่ส่งแล้ว |
|  | MMS ที่ยืนยันการส่งแล้ว |
|  | SMS ที่ยังไม่ส่ง |
|  | SMS ที่ส่งแล้ว |
|  | SMS ที่ยืนยันการส่งแล้ว |

- ▶ **แสดง:** คุณสามารถเรียกดูข้อความได้
- ▶ **ส่งต่อ:** คุณสามารถส่งต่อข้อความที่เลือกนั้นใหม่บุคคลอื่นได้
- ▶ **ลบ:** คุณสามารถลบข้อความได้
- ▶ **ข้อมูล:** คุณสามารถตรวจสอบข้อมูลในแต่ละข้อความได้
- ▶ **ลบทั้งหมด:** คุณสามารถลบข้อความทั้งหมดในกล่องข้อความออก

ฟังข้อความเสียง เมนู 5.5

เมื่อมีการเลือกเมนูนี้ คุณเพียงแค่กดปุ่มเลือกซ้าย  [ตกลง] เพื่อฟังข้อความเสียง และคุณยังโทรเช็คข้อความเสียงได้โดยกดปุ่ม  ค้างไว้ เมื่ออยู่ในโหมดสแตนด์บาย

หมายเหตุ

- ▶ เมื่อคุณได้รับข้อความเสียงโทรศัพท์ ของคุณจะแสดงไอคอนและแจ้งเตือน ให้คุณทราบโปรดสอบถามข้อมูลของ บริการนี้ จากผู้ให้บริการระบบของคุณ เพื่อให้คุณตั้งค่าเครื่องได้อย่างถูกต้อง

ข้อความ


บริการข้อมูล เมนู 5.6 (ขึ้นอยู่กับเครือข่ายและการ สมัคร ขอรับบริการ)

ข้อความบริการข้อมูลคือ ข้อความชนิดตัวอักษรที่เครือข่ายส่งไปยังเครื่องของคุณ โดยให้ข้อมูลทั่วไปเกี่ยวกับรายงานสภาพอากาศรายงานสภาพการจราจร บริการแท็กซี่ การแพทย์ และราคาหุ้น เมื่อคุณได้รับข้อความบริการคุณ จะเห็นข้อความป๊อปอัพ หรือมีข้อความบริการนั้นปรากฏขึ้น ในการดูข้อความอีกครั้ง ให้ทำตามขั้นตอนด้านล่าง

อ่าน (เมนู 5.6.1)

1. เมื่อคุณได้รับข้อความบริการข้อมูล แล้วเลือกอ่านเพื่ออ่านข้อความเครื่องจะแสดงข้อความดังกล่าวที่หน้าจอคุณสามารถอ่านข้อความอื่นๆได้ด้วยการ เลื่อนดูโดยใช้ปุ่ม  ,  หรือ  [ตกลง]
2. เครื่องจะแสดงข้อความปัจจุบันจนกว่าข้อความอีกข้อความหนึ่งจะปรากฏขึ้น

เรื่อง (เมนู 5.6.2) (ขึ้นอยู่กับเครือข่ายและการสมัครรับ บริการ)

- ▶ **เพิ่มชื่อ:** คุณสามารถเพิ่มหมายเลขของข้อความ บริการข้อมูลลงในหน่วยความจำของโทรศัพท์ พร้อมทั้งชื่อย่อได้
- ▶ **รายการที่แสดง:** คุณสามารถดูหมายเลขของข้อความ  บริการข้อมูลที่คุณเพิ่มเข้าไปได้หากคุณกดปุ่ม [ตัวเลือก] คุณจะ สามารถแก้ไขและลบชนิดข้อความบริการข้อมูล ที่คุณเพิ่มเข้าไปได้
- ▶ **รายการที่ใช้งาน:** คุณสามารถเลือกหมายเลขข้อความบริการข้อมูลใน รายการที่ใช้งานได้ หากคุณใช้หมายเลขบริการข้อมูลหนึ่งคุณจะได้รับข้อความที่ส่งจากหมายเลข ดังกล่าว

ข้อความอัตโนมัติ

เมนู 5.7

ข้อความอัตโนมัติ (เมนู 5.7.1)

คุณมีแบบข้อความ 6 แบบตามที่แสดงด้านล่าง

- กรรณาโทรกลับฉันด้วย
- ฉันไปสาย จะไปถึงเวลา
- ตอนนี้คุณอยู่ที่ไหน?
- ฉันกำลังเดินทาง
- ตัวนมาก กรรณาติดต่อกลับ
- ฉันรักคุณ

รูปแบบข้อความอัตโนมัติ (เมนู 5.7.2)

หลังจากที่คุณบันทึกเทมเพลตใหม่ คุณสามารถใช้ตัวเลือกต่อไปนี้ได้

- ▶ **แสดง:** คุณสามารถดูข้อความข้อความอัตโนมัติต่างๆ
- ▶ **ลบ:** สำหรับลบข้อความข้อความอัตโนมัติแบบสำเร็จรูป
- ▶ **เพิ่มชื่อ:** ให้คุณเพิ่มข้อความข้อความอัตโนมัติแบบสำเร็จรูปข้อความใหม่ได้

- ▶ **เขียนข้อความ:** คุณสามารถเขียนและส่งข้อความข้อความอัตโนมัติ
- ▶ **แก้ไข:** สำหรับแก้ไขข้อความข้อความอัตโนมัติแบบสำเร็จรูป
- ▶ **ลบทั้งหมด:** ช่วยให้คุณสามารถลบข้อความข้อความอัตโนมัติทั้งหมดได้

การตั้งค่า

เมนู 5.8

ข้อความตัวอักษร (เมนู 5.8.1)

ชนิดข้อความ

ข้อความตัวอักษร, แบบเสียง, แฟกซ์, เเพจใน ประเทศ, X400, อีเมล,ERMES

โดยปกติ ประเภทข้อความที่ใช้งานจะตั้งค่าเป็น ข้อความตัวอักษรแต่คุณสามารถเปลี่ยนข้อความให้เป็นรูปแบบอื่นได้ โปรดติดต่อผู้ให้บริการระบบของคุณเกี่ยวกับการให้บริการฟังก์ชันดังกล่าว

- ▶ **อายุข้อความ:**บริการของเครือข่ายนี้ให้คุณกำหนดระยะเวลาที่คุณต้องการให้เก็บข้อความ ความต่าง ๆ ไว้ในศูนย์รับฝากข้อความ

ข้อความ

- ▶ **รายงานผลการส่ง:** หากคุณตั้งค่าที่ตกลง คุณจะสามารถตรวจสอบว่าข้อความส่งถึงผู้รับหรือไม่
- ▶ **ตอบกลับ:** เมื่อมีการส่งข้อความ ผู้รับสามารถตอบกลับและให้คิดค่าใช้จ่ายในการตอบกลับลงในใบแจ้งหนี้ค่าโทรศัพท์ของคุณได้
- ▶ **ศูนย์บริการข้อความ:** หากต้องการส่งข้อความแบบตัวอักษร คุณสามารถใช้เมนูนี้หาที่อยู่ของศูนย์ SMS ได้

ข้อความมัลติมีเดีย (เมนู 5.8.2)

- ▶ **ลำดับความสำคัญ:** คุณสามารถกำหนดลำดับความสำคัญของข้อความที่คุณเลือกได้
- ▶ **อายุข้อความ:** บริการของเครือข่ายนี้ให้คุณ กำหนดระยะเวลาที่คุณต้องสามารถให้เก็บ ข้อความต่างๆไว้ในศูนย์รับฝากข้อความ
- ▶ **หัวข้อ:** คุณสามารถบ่อนหัวข้อของข้อความมัลติมีเดียได้เมื่อเปิดเมนูนี้
- ▶ **รายงานผลการส่ง:** หากคุณตั้งค่าที่ตกลง คุณจะสามารถ ตรวจสอบว่าข้อความส่งถึงผู้รับหรือไม่
- ▶ **เรียกข้อมูลอัตโนมัติ:** หากตั้งค่าที่เปิด คุณจะสามารถรับข้อความมัลติมีเดียใ

ด้โดย อัตโนมัติ หากตั้งค่าที่ปิด คุณจะได้รับเพียง ข้อความแจ้งเตือนในกล่องข้อความเข้ามาจาก นั้นคุณสามารถตรวจสอบการแจ้งเตือนนี้ได้ หากคุณเลือกเฉพาะเครือข่ายในพื้นที่คุณจะได้รับข้อความแบบมัลติมีเดียจากเครือข่าย ในพื้นที่

- ▶ **ตั้งค่าเครือข่าย:** หากคุณเลือกเซิร์ฟเวอร์ข้อความมัลติมีเดียคุณสามารถตั้งค่า URL ของเซิร์ฟเวอร์ข้อความมัลติมีเดียได้
- ▶ **ประเภทที่ใช้ได้**

ส่วนตัว: ข้อความส่วนบุคคล

ข้อความโฆษณา: ข้อความโฆษณา

ข้อมูล: ข้อมูลที่จำเป็น

เบอร์ศูนย์ข้อความเสียง (เมนู 5.8.3)

คุณสามารถรับข้อความเสียงได้ หากว่าผู้ให้บริการระบบเครือข่ายของคุณ ให้บริการดังกล่าวเมื่อมีข้อความเสียงใหม่มาถึงคุณเครื่องจะแสดงสัญลักษณ์บนหน้าจอโปรดตรวจสอบรายละเอียดการให้บริการกับผู้ให้บริการระบบเครือข่ายของคุณเพื่อทำการตั้งค่าเครื่องโทรศัพท์ให้เหมาะสมกับการใช้งาน

- ▶ **เครือข่ายหลัก:** คุณสามารถฟังเสียงข้อความ เสียงได้โดยการเลือกเครือข่ายหลัก

- ▶ **โรมมิ่ง:** แม้ขณะเดินทางไปยังต่างประเทศ คุณยังสามารถฟังข้อความเสียงได้หากระบบเครือข่ายของคุณมีการให้บริการโรมมิ่ง

บริการข้อมูล (เมนู 5.8.4)

▶ รับข้อมูลข่าวสาร

ตกลง: หากคุณเลือกเมนูนี้ โทรศัพท์ของคุณจะได้รับข้อความบริการข้อมูล

ยกเลิก: หากคุณเลือกเมนูนี้ โทรศัพท์ของคุณจะไม่สามารถรับข้อความบริการข้อมูลได้อีก

▶ แจ้งเตือน

ตกลง: โทรศัพท์ของคุณจะมีเสียงเตือนเมื่อคุณได้รับหมายเลขข้อความ บริการข้อมูล

ยกเลิก: โทรศัพท์ของคุณจะไม่มีเสียงเตือนแม้คุณจะได้รับข้อความบริการข้อมูลก็ตาม

▶ ภาษา

คุณสามารถเลือกภาษาที่ต้องการด้วยการกดปุ่ม [เปิด/ปิด] จากนั้น ข้อความบริการข้อมูลจะแสดง ในภาษาที่คุณได้เลือกไว้

Push ข้อความ (เมนู 5.8.5)

คุณสามารถตั้งค่าเพื่อยืนยันว่าคุณได้อ่านข้อความแล้วหรือไม่

หมายเหตุ

- ▶ ห้ามเปลี่ยนชื่อโพลเดอรัทโฟลด์ มิฉะนั้นอาจมีการทำงานผิดพลาด

มัลติมีเดีย

กล้องถ่ายรูป

เมนู 6.1

แอปพลิเคชันนี้ช่วยในการถ่ายภาพนิ่งสามารถถ่ายภาพ ในขนาดที่คุณต้องการ และใช้เป็นภาพถ่ายของรายชื่อ หน้าจอหลักและอื่นๆ เมื่อถ่ายภาพแล้วคุณสามารถส่ง ภาพนั้นทางข้อความมัลติมีเดียหรืออีเมลได้



กดปุ่มเลือกซ้าย  เพื่อแสดงรายการเมนูป๊อปอัปต่อไปนี้

- ▶ **ความสว่าง:** เพื่อกำหนดความสว่าง
- ▶ **ขนาด:** เพื่อกำหนดขนาดภาพ
- ▶ **ตัวตั้งเวลา:** เพื่อกำหนดช่วงเวลาดีเลย์
- ▶ **คุณภาพ:** เพื่อกำหนดคุณภาพของภาพ
- ▶ **ความสมดุลแสง:** เพื่อให้คุณเปลี่ยนการตั้งค่านี้ ตามสภาพแวดล้อม
- ▶ **อัลบั้ม:** แสดงภาพที่ถ่ายไว้
- ▶ **ออก:** เพื่อออกจากเมนูกล้อง
- ▶ **โหมด:** เพื่อเลือกว่าคุณต้องการถ่ายเพียงภาพ เดียวหรือแบบมัลติช็อต
- ▶ **เอฟเฟกต์:** เพื่อกำหนดเอฟเฟกต์พิเศษให้กับ ภาพถ่าย
- ▶ **แฟลช:** เพื่อกำหนดเกี่ยวกับการใช้แฟลช
- ▶ **ซุม:** เพื่อกำหนดระยะซุม

หมายเหตุ


- ▶ เฟรมช็อตจะใช้ได้เฉพาะกับความละเอียดพิกเซล 176 x 220
- ▶ มัลติช็อตจะใช้ได้เฉพาะกับความละเอียดพิกเซล 320 x 240 หรือ 640 x 480
- ▶ ในการใช้คุณสมบัติ Photo Caller ID คุณต้องถ่ายภาพที่คุณต้องการใช้กับรายชื่อนั้นด้วยความละเอียด 72x72
- ▶ เมื่อถ่ายภาพและบันทึกภาพนั้นไว้แล้วไปที่ รายชื่อและเลือกรายชื่อที่คุณต้องการใช้กับภาพนั้น หรือเลือกเพิ่มใหม่ เพื่อสร้างรายชื่อใหม่ (โปรดทราบว่า จะ แบนภาพถ่ายได้กับรายชื่อที่เก็บไว้ใน หน่วยความจำโทรศัพท์ที่ได้เท่านั้นและ รายชื่อนั้นต้องไม่อยู่ในซิม)
- ▶ เลือก แก้วไข เว้นแต่ในกรณีที่คุณต้องการ แก้วไขชื่อ กด ตกลง และไขปุ่มนารีเกดเพื่อไฮไลต์แท็บภาพ

หมายเหตุ

- ▶ ใช้ปุ่ม   เพื่อเลื่อนไปที่ภาพต่างๆ (โปรดทราบว่าในรายการจะแสดงเฉพาะภาพที่มีความละเอียด 72x72 เท่านั้น)
- ▶ เมื่อคุณเลือกภาพที่ต้องการใช้แล้ว กดปุ่มเลือกซ้ายเพื่อบันทึกภาพไว้ในรูปแบบรายชื่อ
- ▶ ภาพจะปรากฏขึ้นเมื่อบุคคลนั้นโทรหาคุณ (หากหมายเลขโทรศัพท์ของรายชื่ออื่นไม่ได้ตั้งไว้เป็นซ่อนรายชื่อ)

กล้องวิดีโอ

เมนู 6.2

แอปพลิเคชันนี้ช่วยให้คุณบันทึกวิดีโอคลิปได้สามารถเล่น และดูไฟล์วิดีโอที่บันทึกไว้ขณะที่ใช้ฟังก์ชันนี้ เมื่อบันทึกแล้ว คุณสามารถส่งวิดีโอคลิปผ่านทางข้อความ มัลติมีเดียหรืออีเมล กดปุ่มเลือกซ้าย  เพื่อ แสดงรายการเมนูข้อถัดไปนี้

- ▶ **ความสว่าง:** เพื่อกำหนดความสว่าง
- ▶ **ขนาด:** เพื่อกำหนดขนาดภาพ
- ▶ **ตัวตั้งเวลา:** เพื่อกำหนดช่วงเวลาติลเลย
- ▶ **คุณภาพ:** เพื่อกำหนดคุณภาพของวิดีโอคลิป
- ▶ **ความสมดุลแสง:** เพื่อให้คุณเปลี่ยนการตั้งค่านี ตามสภาพแวดล้อม
- ▶ **เวลาบันทึก:** เพื่อกำหนดเวลาบันทึก
- ▶ **ออก:** เพื่อออกจากกล้องบันทึกวิดีโอ
- ▶ **เอฟเฟกต์:** เพื่อกำหนดเอฟเฟกต์พิเศษให้กับวิดีโอคลิป
- ▶ **แฟลช:** เพื่อกำหนดเกี่ยวกับการใช้แฟลช
- ▶ **ซุม:** เพื่อกำหนดระยะซูม

มัลติมีเดีย



เครื่องบันทึกเสียง

เมนู 6.3

ด้วยคุณสมบัติบันทึกข้อความเสียง คุณสามารถบันทึกข้อความเสียงได้สูงสุด 20 ข้อความและแต่ละข้อความมีความยาวได้สูงสุด 20 วินาที

บันทึก (เมนู 6.3.1)

คุณสามารถบันทึกเสียงในเมนูการบันทึกเสียงได้

1. เมื่อเริ่มต้นบันทึกเสียงแล้วจะปรากฏข้อความ กำลังบันทึกและจำนวนเวลาที่เหลือบนหน้าจอ
2. หากคุณต้องการสิ้นสุดการบันทึกกดปุ่มเลือกซ้าย  [บันทึก]
3. ป้อนชื่อของเสียงบันทึก กดปุ่มเลือกซ้าย  [OK]

ดูรายการ (เมนู 6.3.2)

รายการข้อความเสียงจะปรากฏขึ้น คุณสามารถเปิดฟังและลบเสียงที่บันทึกไว้ได้เมนู [ตัวเลือก] ต่อไปนี้จะมีให้เลือกใช้

MP3

เมนู 6.4

KG800 มีเครื่องเล่นMP3 ในตัวคุณจึงสามารถ เพลิดเพลินกับการฟังเพลงจากไฟล์ MP3 ในหน่วยความจำโทรศัพท์ของคุณ โดยใช้ หูฟังที่ใช้งานร่วมกันได้หรือฟังผ่านลำโพงในตัว

หมายเหตุ

- ▶ ในบางกรณีสัญญาณเสียงอาจไม่ชัดเจน โดยเฉพาะเมื่อเปิดเสียงดัง ๆ และมีเสียงรบกวนเนื่องจากลำโพงมีขนาดเล็ก ดังนั้นคุณควรใช้หูฟังสเตอริโอเพื่อรับฟังเพลงด้วยระบบเสียงที่สมบูรณ์แบบ

โปรแกรมเล่นเพลงจะสนับสนุน:

- MPEG-1 Layer III, MPEG-2 Layer III, MPEG- 2.5 Layer III ความถี่การสุ่มสัญญาณตั้งแต่ 8KHz ถึง 48KHz อัตราบิตสูงสุด 320Kbps, สเตอริโอ
- AAC: รูปแบบ ADIF, ADTS formats (ความถี่ การสุ่มสัญญาณตั้งแต่ 8KHz ถึง 48KHz)

- **AAC+**: V1 : (อัตราบิต 16~128Kbps)
V2 : (อัตราบิต 16~48Kbps)
(ความถี่การสุ่มสัญญาณตั้งแต่ 8KHz ถึง 48KHz)
- **MP4 , M4A**: ความถี่การสุ่มสัญญาณ ตั้งแต่ 8KHz ถึง 48KHz, อัตราบิตสูงถึง 320Kbps, สเตอริโอ
- **WMA**: ความถี่การสุ่มสัญญาณตั้งแต่ 8KHz ถึง 48KHz, อัตราบิตสูงถึง 320Kbps, สเตอริโอ

หมายเหตุ

- ▶ KG800 ไม่สนับสนุนอัตราการแปรผันที่ต่างกันของไฟล์ MP3 และ AAC ดังนั้น คุณจะไม่สามารถเปลี่ยนไฟล์จากรูปแบบ VBR MP3 เป็น AAC ได้

คุณสามารถถ่ายโอนไฟล์ MP3 จากพีซีที่ใช้ร่วมกันได้ไปยังหน่วยความจำในโทรศัพท์ของคุณ โดยใช้ที่เก็บข้อมูล เมื่อคุณเชื่อมต่อโทรศัพท์กับพีซีโดยใช้สายเคเบิล USB (ที่ให้ไว้ในกล่อง) จะปรากฏเป็นดิสก์ที่ถอดออกได้ในระบบ Windows Explorer หากคุณใช้ Win98 SE คุณต้องติดตั้งไดรเวอร์ของสื่อจัดเก็บข้อมูลในแผ่นซีดีรอมสำหรับ Windows 98

หมายเหตุ

- ▶ KG800 ไม่สนับสนุนอัตราการแปรผันที่ต่างกันของไฟล์ MP3 และ AAC ดังนั้น คุณจะไม่สามารถเปลี่ยนไฟล์จากรูปแบบ VBR MP3 เป็น AAC ได้

เมนูนี้ให้คุณดูรายการทั้งหมด คุณสามารถขยายแทร็คโดยการกดปุ่มนารีเกต นอกจากนี้ เมื่อคุณเลือกแทร็คไว้ คุณสามารถลบไฟล์หรือดูข้อมูลไฟล์นั้นผ่านเมนูตัวเลือก

1. **ไปที่เครื่องเล่น MP3:** ไปที่เครื่องเล่น MP3

กดปุ่มเลือกซ้าย  [ตัวเลือก] เพื่อเข้าสู่เมนูต่อไป

- ▶ **แสดงรายการเพลง:** คุณสามารถดูรายการเพลงในขณะที่ฟังเพลงได้
- ▶ **โหมดการเล่นซ้ำ:** เครื่องจะเล่นเพลงปัจจุบันซ้ำในส่วนเนื้อเพลงพิเศษเมื่อคุณเลือกเมนูนี้เป็น เปิด
- ▶ **ตั้งค่าเป็นเสียงเรียกเข้า:** เมนูนี้ช่วยให้คุณ ตั้งไฟล์ MP3 เป็นเสียงเรียกเข้าได้ คุณยังสามารถตั้งเป็นเสียงเรียกเข้าในโปรไฟล์ได้ เช่นกัน

มัลติมีเดีย

▶ การตั้งค่า

- อีควอไลเซอร์

เมนูนี้ช่วยให้คุณปรับแนวดนตรี ของการฟังเพลง ได้หลากหลายโทรศัพท์รุ่นนี้มีเมนูที่กำหนดไว้ล่วงหน้า 4 รูปแบบ เมื่อคุณเข้าสู่เมนูนี้คุณสามารถดูค่าอีควอไลเซอร์ปัจจุบันได้

- โหมดการเล่น

เมนูนี้ให้คุณตั้งโหมดการเล่นได้

- ตั้งการสลับเปลี่ยน

คุณสามารถฟังเพลง MP3 โดยให้เครื่องสลับเล่นเพลง

- คุณสามารถเลือกเมนูขวลเอฟเฟกต์

ได้: เรนโบว์, พื้นฐานและสีฟ้าเมนูนี้ให้คุณเปลี่ยนแบ็คกราวด์ของหน้า จอ LCD หลักและหน้าจอ LCD รอง เมื่อเล่นไฟล์ MP3

2. ลบ: ลบไฟล์ที่เลือก

3.ดูรายละเอียด: ดูข้อมูลไฟล์ที่เลือกไว้

4.ลบทั้งหมด: ลบไฟล์ทั้งหมด

หมายเหตุ

- ▶ เพลงได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือ คัดลอกเพลงในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

อัลบั้มภาพ

เมนู 6.5

คุณสามารถดูและส่งภาพได้ นอกจากนี้คุณยังสามารถกำหนดภาพเป็นภาพพื้นหลังได้

- ▶ **แสดงภาพแบบรวม:** คุณสามารถดูภาพขนาดเล็กในหน้าจอ ได้สูงสุด 9 ภาพ
- ▶ **ส่งทางบลูทูธ:** คุณสามารถส่งภาพโดยใช้บลูทูธ
- ▶ **เขียนข้อความมัลติมีเดีย:** คุณสามารถเขียนและแก้ไขข้อความมัลติมีเดีย และตรวจสอบขนาดข้อความ
- ▶ **ตั้งค่าเป็นภาพพื้นหลัง:** คุณสามารถกำหนดภาพเป็นวอลล์เปเปอร์ได้
- ▶ **แสดงภาพแบบสไลด์:** คุณสามารถดูภาพในแบบ ภาพสไลด์ได้
- ▶ **ลบ:** สำหรับลบภาพ
- ▶ **แก้ไขชื่อ:** ใช้สำหรับแก้ไขภาพ
- ▶ **ข้อมูล:** แสดงข้อมูลเกี่ยวกับภาพที่บันทึกไว้

หมายเหตุ

- ▶ อัลบั้มภาพถ่ายจะแสดงเฉพาะภาพที่ถ่ายด้วยกล้องในเครื่องโทรศัพท์เท่านั้น

อัลบั้มวิดีโอ

เมนู 6.6

คุณสามารถดูภาพวิดีโอที่จัดเก็บอยู่ในหน่วยความจำได้

- ▶ **เล่น:** คุณสามารถเล่นไฟล์วิดีโอได้โดยกดปุ่ม OK หรือเลือกเมนูเล่นจากเมนูตัวเลือก หากต้องการเล่นไฟล์วิดีโอที่บันทึกไว้ ด้วยความละเอียด 208x160 คุณควรหมุนและบิดฝาพับ
- ▶ **ส่งทางบลูทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์อื่น ผ่านทางบลูทูธ
- ▶ **คัดลอก/ย้ายไปที่หน่วยความจำภายนอก:** คัดลอก / ย้ายไฟล์ที่เลือกไปยังฟลashed เดียวกันที่มัลติมีเดีย

มัลติมีเดีย

- ▶ **แก้ไข:** เปลี่ยนชื่อไฟล์ของไฟล์ที่เลือก ความยาวสูงสุดคือ 90 ตัวอักษรคุณไม่สามารถใช้สัญลักษณ์ต่างๆ เช่น / < > # @ * และ อื่นๆ ในชื่อไฟล์รวมทั้งจะเปลี่ยนนามสกุล ของไฟล์ไม่ได้
- ▶ **ลบ:** ลบไฟล์
- ▶ **ลบทั้งหมด:** ลบไฟล์ทั้งหมดในรายการ
- ▶ **ข้อมูล:** แสดงข้อมูลไฟล์

การตั้งค่า

เมนู 6.7

กล้องถ่ายรูป (เมนู 6.7.1)

เมนูนี้ให้คุณดูรายการเพลงทั้งหมดคุณสามารถย้าย แทร็คโดยการ


- ▶ **บันทึกอัตโนมัติ:** หากคุณตั้งคุณสมบัตินี้เป็น เปิด ภาพจะได้รับการบันทึกไว้อัตโนมัติโดยไม่แสดงแถบเมนูเพื่อบันทึก
- ▶ **เสียงชัดเดือร์:** คุณสามารถลบภาพถ่ายทั้งหมด ซึ่งได้รับการบันทึกไว้ในหน่วยความจำ ได้

กล้องวิดีโอ (เมนู 6.7.2)

- ▶ **ลบวิดีโอทั้งหมด:** ให้คุณลบวิดีโอทั้งหมดซึ่งบันทึกไว้ในหน่วยความจำ

เบราว์เซอร์

คุณสามารถเข้าใช้บริการ WAP (Wireless Application Protocol) ต่างๆ เช่น ข้อมูลการเงิน, ข่าว, รายงานการพยากรณ์อากาศ และข้อมูลเกี่ยวกับ ตารางการบิน ข้อมูลเหล่านี้ได้รับการออกแบบมาเพื่อใช้กับโทรศัพท์ เคลื่อนที่โดยเฉพาะและดูแลโดยผู้ให้บริการ WAP




โปรดตรวจสอบการให้บริการ WAP ค่าใช้จ่าย และค่าธรรมเนียมต่าง ๆ กับผู้ให้บริการเครือข่ายและ/หรือผู้ให้บริการที่เป็นเจ้าของบริการที่คุณ ต้องการใช้ ผู้ให้บริการยังสามารถให้คำแนะนำเกี่ยวกับการ ใช้บริการเหล่านั้นด้วย เมื่อเชื่อมต่อแล้ว โสมเพจจะปรากฏขึ้น โดยเนื้อหาในโสมเพจขึ้นกับผู้ให้บริการ คุณสามารถ เข้าใช้เพจของเว็บไซต์ใดๆ ก็ได้ โดย ป้อนแอดเดรส URL ของ เว็บไซต์ๆ เมื่อต้องการออกจากเบราว์เซอร์ ให้กดปุ่ม  โทรศัพท์ จะกลับสู่โหมดสแตนด์บาย

การนำวิเคดด้วยเบราว์เซอร์ WAP

คุณสามารถท่องอินเทอร์เน็ตโดยใช้ปุ่มต่างๆ ของโทรศัพท์หรือใช้เมนู เบราว์เซอร์ WAP

การใช้ปุ่มต่างๆ ของโทรศัพท์

ขณะท่องอินเทอร์เน็ตฟังก์ชันปุ่มต่าง ๆ ของโทรศัพท์จะแตกต่างกันไปจากโหมดการทำงานตามปกติของโทรศัพท์

| ปุ่ม | คำอธิบาย |
|---|------------------------------------|
|  | เลื่อนดูข้อมูลแต่ละบรรทัด |
|  | กลับไปยังเพจก่อนหน้า |
|  | เลือกตัวเลือกและยืนยันการดำเนินการ |

การใช้เมนูเบราว์เซอร์ WAP

คุณเลือกใช้ตัวเลือกต่างๆ ของเมนูได้ขณะท่องเว็บไซต์สำหรับอุปกรณ์ เคลื่อนที่

หมายเหตุ

- ▶ เมนูเบราว์เซอร์ WAP อาจแตกต่างกันขึ้นกับ เวอร์ชันเบรา เซอร์ของคุณ

เบราว์เซอร์

โฮม

เมนู 7.1


ใช้สำหรับเชื่อมต่อกับโฮมเพจ โฮมเพจอาจเป็นไซต์ที่ได้รับอนุญาตในรูปแบบที่มีการใช้งานซึ่งอาจกำหนดไว้โดยผู้ให้บริการระบบ หากคุณไม่ได้กำหนดไว้ในรูปแบบที่มีการใช้งาน

บุ๊คมาร์ค

เมนู 7.2

เมนูนี้ช่วยให้คุณจัดเก็บ URL ของเว็บเพจที่คุณชื่นชอบ เพื่อให้เข้าใช้ได้ง่ายขึ้นในครั้งต่อไป

การสร้างบุ๊คมาร์ค

1. กดปุ่มเลือกซ้าย  [ตัวเลือก]
2. เลือกเพิ่มใหม่ และกดปุ่ม OK
3. หลังจากป้อน URL และชื่อที่ต้องการแล้ว ให้กดปุ่ม OK

หลังจากเลือกบุ๊คมาร์คที่ต้องการแล้วคุณสามารถเลือกตัวเลือกต่อไปนี้ได้

- ▶ **เชื่อมต่อ:** เชื่อมต่อไปยังบุ๊คมาร์คที่เลือก
- ▶ **เพิ่มใหม่:** เลือกตัวเลือกนี้เพื่อสร้างบุ๊คมาร์คใหม่
- ▶ **แก้ไข:** คุณสามารถแก้ไข URL และ/หรือชื่อของบุ๊คมาร์คที่เลือกได้

- ▶ **ลบ:** ลบบุ๊คมาร์คที่เลือก
- ▶ **ลบทั้งหมด:** ลบบุ๊คมาร์คทั้งหมด

ไปยัง URL

เมนู 7.3

คุณสามารถเชื่อมต่อไปยังเว็บไซต์ที่คุณต้องการได้ โดยตรง หลังจากป้อน URL ที่ต้องการแล้ว ให้กดปุ่มตกลง

การตั้งค่า

เมนู 7.4

คุณสามารถตั้งโปรไฟล์แคช คุกกี้ และความปลอดภัยที่สัมพันธ์กับบริการอินเทอร์เน็ต

โทรไฟล์ (เมนู 7.4.1)

โทรไฟล์คือข้อมูลเครือข่ายที่ใช้เพื่อเชื่อมต่ออินเทอร์เน็ต

ในหน่วยความจำของโทรศัพท์ มีรูปแบบที่เป็นค่าเริ่มต้นของผู้ให้บริการระบบบางรายแล้วจะไม่สามารถเปลี่ยนชื่อรูปแบบที่เป็นค่าเริ่มต้นได้

โทรไฟล์แต่ละแบบมีเมนูย่อยดังต่อไปนี้

- ▶ **เปิดทำงาน:** ใช้งานโพรไฟล์ที่เลือก
 - ▶ **การตั้งค่า:** ใช้เมนูย่อยนี้เพื่อแก้ไขและเปลี่ยนแปลงค่าการตั้งค่า WAP ให้กับโพรไฟล์ที่เลือก
 - **โฮมเพจ:** ในตัวเลือกนี้จะให้คุณป้อนแอดเดรส (URL) ของไซต์ที่คุณจะใช้เป็น โฮมเพจ คุณไม่จำเป็นต้องพิมพ์ "http://" ไว้หน้า URL แต่ละชื่อเพราะเบราว์เซอร์ WAP จะใส่ให้เองโดยอัตโนมัติ
 - **เครือข่าย:** สำหรับกำหนดชนิดของบริการส่งข้อมูล
 - 1 ข้อมูล
 - 2 GPRS
 - **การตั้งค่าข้อมูล:** ปรากฏขึ้นเมื่อคุณเลือก การตั้งค่าข้อมูล เป็น เครือข่าย/บริการ
- หมายเลขโทร:** ป้อนหมายเลขโทรศัพท์สำหรับเชื่อมต่อไปยังเกตเวย์ WAP ของคุณ

รหัสผู้ใช้: ค่าเฉพาะที่แสดงถึงตัวผู้ใช้สำหรับเซิร์ฟเวอร์การติดต่อของคุณ (ทั้งนี้มิใช่เกตเวย์ WAP)

รหัสผ่าน: รหัสผ่านที่ต้องป้อนให้กับเซิร์ฟเวอร์การติดต่อของคุณ (ทั้งนี้ มิใช่เกตเวย์ WAP) เพื่อระบุถึงตัวคุณ

ชนิดการโทร:

เลือกประเภทของสายข้อมูล: Analogue หรือ Digital (ISDN)

หน่วงเวลา: สำหรับป้อนระยะเวลาที่กำหนดให้ออกจากการเชื่อมต่อ โดยเมื่อป้อนค่านี้แล้วบริการการนำเกตของ WAP จะหยุดลง เมื่อไม่มีการรับหรือส่งข้อมูลในเวลา ที่กำหนด

- **การตั้งค่า GPRS:** การตั้งค่าบริการนี้ทำได้เฉพาะ เมื่อมีการเลือกวิธีการรับส่งข้อมูล แบบ GPRS

APN: ป้อน APN ของ GPRS

รหัสผู้ใช้: เป็นตัวระบุผู้ใช้สำหรับเซิร์ฟเวอร์ APN

รหัสผ่าน: รหัสผ่านที่คุณต้องป้อนให้กับเซิร์ฟเวอร์ APN

เบราว์เซอร์

- ตั้งค่าพร็อกซี

พร็อกซี: เปิดใช้งานหรือยกเลิกพร็อกซี

IP แอดเดรส: ป้อน IPแอดเดรสของพร็อกซีเซิร์ฟเวอร์ที่คุณเข้าใช้งาน

พอร์ต: ป้อนพร็อกซีพอร์ต

- ตั้งค่า DNS

เซิร์ฟเวอร์หลัก: ป้อนIP แอดเดรสของเซิร์ฟเวอร์ DNS หลักที่คุณเข้าใช้งาน

เซิร์ฟเวอร์รอง: ป้อนIP แอดเดรสของเซิร์ฟเวอร์ DNS รองที่คุณเข้าใช้งาน

- ▶ **แก้ไขชื่อ:** คุณสามารถเปลี่ยนชื่อโพรไฟล์ได้
- ▶ **เพิ่มใหม่:** คุณสามารถเพิ่มโพรไฟล์ใหม่ได้
- ▶ **ลบ:** ลบรูปแบบที่เลือกจากรายการ

แคช (เมนู 7.4.2)

ข้อมูลหรือบริการที่คุณเข้าใช้จะถูกบันทึกไว้ในหน่วยความจำแคชของโทรศัพท์

คุกกี้ (เมนู 7.4.3)

ข้อมูลหรือบริการที่คุณเข้าใช้จะถูกบันทึกไว้ในหน่วยความจำแคชของโทรศัพท์

ลบแคช (เมนู 7.4.4)

ลบข้อมูลทั้งหมดที่บันทึกไว้ในแคช

หมายเหตุ

- ▶ แคชเป็นหน่วยความจำบัฟเฟอร์ซึ่งใช้บันทึกข้อมูลไว้ชั่วคราว

ลบคุกกี้ (เมนู 7.4.5)

ลบข้อมูลทั้งหมดที่บันทึกไว้ในคุกกี้

รักษาความปลอดภัย (เมนู 7.4.6)


รายการในรับรองที่ใช้ได้จะปรากฏขึ้น

- ▶ **ผู้มีสิทธิ์:** คุณสามารถดูรายการในรับรองสิทธิ์ที่บันทึกไว้ในโทรศัพท์ของคุณได้
- ▶ **ส่วนตัว:** คุณสามารถดูรายการในรับรองส่วนบุคคลที่บันทึกไว้ในโทรศัพท์ของคุณได้

เกมส์ & อื่นๆ

เมนู 8.1

เกมส์ & อื่นๆ (เมนู 8.1.1)

- ▶ **เกมส์เริ่มต้น:** ในเมนูนี้คุณสามารถจัดการติดตั้งแอปพลิเคชันต่างๆ ลงในเครื่องของคุณ ได้ คุณสามารถเล่น และลบแอปพลิเคชันที่ดาวน์โหลดมาได้ หรือตั้งค่าการเชื่อมต่อไป สู่สิ่งที่คุณดาวน์โหลดในโทรศัพท์มือถือ ดาวน์ดาวน์ขายมือ  [ตกลง] เพื่อเข้าสู่การเลือก โพรโตคอลหรือเริ่มต้นใช้งานแอปพลิเคชัน

หลังจากเลือกไฟล์เดออร์ ให้กด [ตัวเลือก] แล้วเมนูย่อยที่มีให้เลือกจะปรากฏขึ้น

- ▶ **เปิด:** คุณสามารถดูเกมส์ที่จัดเก็บได้
- ▶ **โพลเดออร์ใหม่:** สร้างสไลด์ใหม่

รูปแบบเสียง (เมนู 8.1.2)

รูปแบบคือข้อมูลเครือข่ายที่ใช้เพื่อเชื่อมต่ออินเตอร์เน็ต หากต้องการดูรายละเอียดของรูปแบบ โพรโตคอลที่ (เมนู 7.4.1) .

JavaTM เป็นเทคโนโลยีที่พัฒนาขึ้นโดย Sun Microsystems และด้วยวิธีการเดียวกับที่คุณดาวน์โหลด Java Applet โดยใช้เบราว์เซอร์ Netscape หรือ MS Internet Explorer มาตราฐาน คุณสามารถดาวน์โหลด Java MIDlet ได้ โดยใช้โทรศัพท์ที่ใช้งาน WAP โปรแกรมที่ใช้ JAVA ทั้งหมด เช่นเกมส์ Java จะดาวน์โหลดและใช้บนโทรศัพท์ได้ หรือไม่นั้น ขึ้นอยู่กับผู้ให้บริการด้วย เมื่อดาวน์โหลดแล้วคุณสามารถดูโปรแกรม Java ได้ในเมนู Applications ซึ่งคุณสามารถเลือกใช้งานหรือลบโปรแกรมดังกล่าว ได้ไฟล์ของ โปรแกรม Java ที่จัดเก็บ ในเครื่องโทรศัพท์จะอยู่ในรูปแบบ .JAD และ .JAR

แฟ้มส่วนตัว

หมายเหตุ

- ▶ ไฟล์ JAR เป็นรูปแบบที่บีบอัดข้อมูลของโปรแกรม Java และไฟล์ JAD เป็นไฟล์คำอธิบายที่มีข้อมูลโดยละเอียดทั้งหมดก่อนที่จะดาวน์โหลดจากระบบเครือข่าย คุณสามารถดู คำอธิบายไฟล์โดยละเอียดทั้งหมดได้จากไฟล์ JAD
- ▶ แม้จะใช้ภาษามาตรฐาน (J2ME) แต่แอปพลิเคชัน Java บางตัวจะไม่สามารถใช้งานกับโทรศัพท์ที่มีวงจำหน่ายบางรุ่นได้เนื่องจากอาจมีการใช้ไลบรารีเฉพาะสำหรับรุ่นโทรศัพท์นั้นซอฟต์แวร์อาจถูกล็อคหรือเปิดขึ้นเองเมื่อมีการดาวน์โหลดแอปพลิเคชัน Java ซึ่งไม่ได้พัฒนาขึ้น โดยเฉพาะสำหรับโทรศัพท์ที่อ้างถึงในคู่มือนี้ ซึ่งคุณอาจต้อง "รีสตาร์ท" โทรศัพท์เราต้องการชี้แจงถึงสาเหตุ ของปัญหาเหล่านี้ ซึ่งเกิดขึ้นจากแอปพลิเคชันที่ใช้ร่วมกันไม่ได้ และไม่ใช้ขอบกพร่องของผลิตภัณฑ์

หมายเหตุ

- ▶ เฉพาะโปรแกรมที่ใช้ J2ME (Java 2 Micro Edition) เท่านั้นจึงจะรันบนโทรศัพท์ได้ โปรแกรมที่ใช้ J2SE (Java 2 Standard Edition) จะทำงานได้เฉพาะบนเครื่อง PC เท่านั้น

New Fantastic LG ในโทรศัพท์รุ่น KG800 มีฟังก์ชัน Mass Storage ให้คุณเลือกใช้ หากคุณเชื่อมต่อสายเคเบิล USB คุณสามารถใช้โทรศัพท์เป็น Removable ดิสก์

คุณสามารถดาวน์โหลดไฟล์ MP3 และภาพถ่าย ภาพวิดีโอ ไฟล์ txt ฯลฯ ฟังก์ชันนี้ช่วยให้คุณเข้าพีซีจากเครื่องโทรศัพท์ได้รวดเร็วขึ้น โดยการเชื่อมต่อสายเคเบิล USB ฟังก์ชันนี้ไม่จำเป็นต้องติดตั้งซอฟต์แวร์เพิ่มเติม

1. ขณะที่โทรศัพท์อยู่ในหน้าจอสแตนด์บาย ให้เชื่อมต่อโทรศัพท์เข้ากับพีซี โดยใช้สายเคเบิล USB ที่ให้มา พีซีจะรับรู้การเชื่อมต่อกับเครื่องภายในไม่กี่วินาที
2. โทรศัพท์จะแสดงข้อความ « USB » บนหน้าจอ
3. เครื่องพีซีจะกำหนดให้โทรศัพท์เป็นไดรฟ์ « Removable disk » ใน My Computer เครื่องพีซีจะกำหนดให้ KG800 เป็นไดรฟ์มาตรฐาน เพื่อให้คุณถ่ายโอนไฟล์จากหน่วยความจำของโทรศัพท์ได้

คุณยังสามารถลากและวางหรือคัดลอกและวางไฟล์ในระบบ Windows เพื่อถ่ายโอนข้อมูล

4. ดับเบิลคลิกที่ « Removable disk » และเปิดขึ้น โฟลเดอร์ที่ชื่อ My media จะปรากฏขึ้น ในโฟลเดอร์นั้นจะประกอบด้วยโฟลเดอร์อีก 5 โฟลเดอร์ อย่ายกเลิกการเชื่อมต่อกับโทรศัพท์ในขณะที่กำลังถ่ายโอนไฟล์ หากมีการยกเลิก อาจส่งผลให้หน่วยความจำและไฟล์เสียหายได้
5. เมื่อคุณต้องการยกเลิกการเชื่อมต่อโทรศัพท์กับเครื่องพีซี ให้คลิกเลือกใน Windows สำหรับยกเลิกฮาร์ดแวร์นั้นอย่างปลอดภัย จากนั้นให้ถอดสายเคเบิล USB ออกจากเครื่องโทรศัพท์
 - ▶ หากคุณรับสายในขณะที่อยู่ในโหมด Mass storage สายนั้นจะถูกตัด หลังจากที่โทรศัพท์ถูกยกเลิกการเชื่อมต่อแล้ว KG800 จะแสดงข้อมูลของสายที่ไม่ได้รับ

แฟ้มส่วนตัว

My Media

ในโฟลเดอร์ My media จะประกอบด้วย 5 โฟลเดอร์ ดังนี้ ดนตรี, อื่นๆ, ภาพถ่าย, ข้อความตัวอักษร และ วิดีโอ ห้ามเปลี่ยนชื่อของโฟลเดอร์เหล่านี้ การกระทำดังกล่าวจะส่งผลให้เครื่องไม่พบข้อมูลที่จัดเก็บไว้ในนั้น

ดนตรี

- ▶ คุณสามารถจัดเก็บไฟล์เพลงในโฟลเดอร์นี้ได้
- ▶ รูปแบบที่สนับสนุน ได้แก่ MP3, AAC, AAC+, AAC++, WMA, MP4 (audio) และ Wav
- ▶ ไฟล์ในโฟลเดอร์นี้สามารถเล่นได้โดยใช้เครื่องเล่น MP3 และคุณสมบัติรายการเพลงในโทรศัพท์
- ▶ หากคุณดาวน์โหลดไฟล์ MP3 ไว้ในโฟลเดอร์อื่น โทรศัพท์อาจไม่สามารถหาตำแหน่งและเล่นไฟล์นั้นได้
- ▶ อย่าสร้างโฟลเดอร์ย่อยไว้ที่นี่ เนื่องจาก เครื่องจะไม่พบไฟล์ MP3 ที่อยู่ในโฟลเดอร์นั้นและไม่สามารถเล่นด้วยเครื่องเล่นเพลงได้

- ▶ ในการตั้งไฟล์ MP3 เป็นเสียงเรียกเข้า ให้ทำตามขั้น ตอนต่อไป:
ตัวเลือก >ไปที่เครื่องเล่น MP3 >ตัวเลือก >ตั้งเป็นเสียงเรียกเข้า

อื่นๆ

- ▶ คุณสามารถจัดเก็บไฟล์ประเภทใดก็ได้ไว้ที่นี่ โดยทั่วไปโฟลเดอร์นี้จะใช้สำหรับการถ่ายโอนไฟล์ จากพีซี เครื่องหนึ่งไปอีกรุ่นหนึ่ง
- ▶ เครื่องจะสามารถแสดงภาพ JPG (สูงสุด 460K), GIF (สูงสุด 100K)
- ▶ คุณสามารถตั้งไฟล์ภาพเป็นภาพพื้นหลังได้ หากไฟล์นั้นมีขนาดไม่เกิน 30k สำหรับรูปแบบอื่นๆ โปรดใช้โปรแกรม PC Sync

ภาพถ่าย

- ▶ โฟลเดอร์นี้จะได้รับการสำรองไว้สำหรับภาพที่ถ่ายด้วยกล้องดิจิทัลของโทรศัพท์

- ▶ แม้ว่าจะอัปโหลดภาพจากที่ขึ้นมาไว้ที่โฟลเดอร์นี้ได้ แต่ข้อมูลเหล่านั้นจะไม่มีใน อัลบั้มภาพหรือโฟลเดอร์ My photos ของโทรศัพท์ ดังนั้นเราขอแนะนำว่าไม่ควรอัปโหลดภาพมาไว้ที่โฟลเดอร์นี้

ข้อความ

- ▶ โฟลเดอร์นี้รองรับไฟล์ .txt หากคุณวางไฟล์ .txt ไว้ที่นี่ เครื่องจะไม่แสดงไฟล์เหล่านั้น

วิดีโอ

- ▶ คุณสามารถดาวน์โหลดวิดีโอที่ถ่ายด้วย กล้องดิจิทัลในโทรศัพท์ไปยังพีซี และอัปโหลดภาพวิดีโอใหม่ไปที่โทรศัพท์ได้
- ▶ โฟลเดอร์นี้รองรับรูปแบบไฟล์ 3GP
- ▶ คุณสามารถอัปโหลดไฟล์ขนาดต่างๆ ได้จนกว่าหน่วยความจำจะเต็ม
- ▶ ไฟล์ที่เก็บไว้ในโฟลเดอร์นี้สามารถแก้ไขได้ โดยทำตามขั้นตอนต่อไปนี้ที่เครื่อง: เมนู>อัลบั้มเดี่ยว>วิดีโอส่วนตัว

วิดีโอ

เมนู 8.2

แสดงรายชื่อไฟล์ 3GP และ MP4

- ▶ **เล่น:** คุณสามารถเล่นไฟล์วิดีโอโดยกดปุ่มตกลง หรือเลือกเล่นจากเมนูตัวเลือก
- ▶ **ส่งผ่านบลูทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์ ชนิต อื่นผ่านทาง บลูทูธ
- ▶ **เปลี่ยนชื่อ:** เปลี่ยนชื่อไฟล์ของไฟล์ที่เลือก ความ ยาวสูงสุดคือ 200 ตัวอักษร และคุณ จะเปลี่ยนแปลงนามสกุลไฟล์ไม่ได้

คำเตือน

- ▶ คุณไม่สามารถใช้ตัวอักษรต่อไปนี้ \ / : * ? " < > |
- ▶ **ลบ:** ลบไฟล์
- ▶ **ลบทั้งหมด:** ลบไฟล์ทั้งหมดในรายการ
- ▶ **ข้อมูล:** แสดงข้อมูลไฟล์

แฟ้มส่วนตัว

รูปถ่าย

เมนู 8.3

แสดงรายชื่อไฟล์ JPG

- ▶ **ดู:** คุณสามารถดูไฟล์ JPG ได้โดยกดปุ่ม OK หรือ เลือกเมนู ดู จากเมนูตัวเลือก

หมายเหตุ

- ▶ ขนาดสูงสุดของไฟล์ JPG ที่คุณสามารถดูได้คือ 460 Kbytes
- ▶ **ส่งผ่านข้อความมัลติมีเดีย:** คุณสามารถเขียนและส่งข้อความมัลติมีเดียได้
- ▶ **ส่งผ่านบลูทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์อื่นผ่านทางบลูทูธ

หมายเหตุ

- ▶ ในการตั้งค่าไฟล์ .JPG (.JPEG) จากไฟล์เดือรภาพถ่ายให้เป็นภาพพื้นหลัง ให้ไปที่ เมนู-มัลติมีเดีย-อัลบั้มภาพถ่าย จากนั้นเลือก ตั้งค่า เป็นภาพพื้นหลัง ในเมนูตัวเลือก

- ▶ **เปลี่ยนชื่อ:** เปลี่ยนชื่อไฟล์ของไฟล์ที่เลือก ความยาวสูงสุดคือ 200 ตัวอักษร และคุณ จะ เปลี่ยนแปลงนามสกุลไฟล์ไม่ได้
- ▶ **ลบ:** ลบไฟล์
- ▶ **ลบทั้งหมด:** ลบไฟล์ทั้งหมดในรายการ
- ▶ **ข้อมูล:** แสดงข้อมูลไฟล์

มิวสิก

เมนู 8.4

แสดงรายชื่อไฟล์ MP3, MP4, AAC, M4A และ WMA

- ▶ **เล่น:** คุณสามารถเล่นไฟล์ MP3 ได้ โดยกด ปุ่ม OK หรือเลือกเมนู เล่น จากเมนูตัวเลือก
- ▶ **ส่งผ่านบลูทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์อื่นผ่านทางบลูทูธ
- ▶ **เปลี่ยนชื่อ:** เปลี่ยนชื่อไฟล์ของไฟล์ที่เลือก ความยาวสูงสุดคือ 100 ตัวอักษรและคุณ จะเปลี่ยนแปลงนามสกุลไฟล์ไม่ได้
- ▶ **ลบ:** ลบไฟล์
- ▶ **ลบทั้งหมด:** ลบไฟล์ทั้งหมดในรายการ
- ▶ **ข้อมูล:** แสดงข้อมูลไฟล์

ข้อความ

เมนู 8.5

แสดงรายชื่อไฟล์ TXT


- ▶ **ดู:** คุณสามารถดูไฟล์ TXT ได้ โดยกดปุ่ม OK หรือเลือกเมนู ดู จากเมนูตัวเลือก

หมายเหตุ

- ▶ **ขนาดสูงสุดของไฟล์ TXT** ที่คุณสามารถดูได้คือ 460 Kbytes
- ▶ **ส่งผ่านมุลทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์อื่นผ่านทางมุลทูธ
- ▶ **เปลี่ยนชื่อ:** เปลี่ยนชื่อไฟล์ของไฟล์ที่เลือก ความยาวสูงสุดคือ 100 ตัวอักษร และคุณจะสามารถเปลี่ยนนามสกุลไฟล์ไม่ได้
- ▶ **ลบ:** ลบไฟล์
- ▶ **ลบทั้งหมด:** ลบไฟล์ทั้งหมดในรายการ
- ▶ **ข้อมูล:** แสดงข้อมูลไฟล์

ภาพ

เมนู 8.6

หลังจากเลือกภาพแล้ว ให้กดปุ่มซ้าย  [ดู] จาก นั้นคุณสามารถเลือกตัวเลือกต่อไปนี้:

- ▶ **ตั้งค่าเป็นภาพพื้นหลัง:** คุณสามารถกำหนด ภาพที่เลือกในขณะนั้น เป็นภาพพื้นหลังได้
- ▶ **เขียนข้อความ:** ภาพที่ดาวน์โหลดจากเครือข่าย จะไม่สามารถส่งด้วยบริการมัลติมีเดีย หรืออีเมลได้ ขนาดสูงสุดของข้อความ MMS คือ 100kb และข้อความอีเมลเท่ากับ 300 kb
- ▶ **ส่งผ่านมุลทูธ:** คุณสามารถส่งเสียงที่ดาวน์โหลด มาจากเครือข่ายได้โดยใช่มุลทูธ

เสียง

เมนู 8.7

- ▶ **ตั้งค่าเป็นเสียงเรียกเข้า:** เสียงที่เลือกไว้ใน ปัจจุบันสามารถตั้งเป็นเสียงเรียกเข้าได้

แฟ้มส่วนตัว

- ▶ **เขียนข้อความ:**คุณสามารถส่งเสียงที่ดาวน์โหลดมาจากเครือข่ายได้ โดยใช้บริการSMS ,MMS หรืออีเมลล์ขนาดสูงสุด ของข้อความ MMS คือ 100 kb และสำหรับข้อความ อีเมลล์ คือ 300 kb
- ▶ **ส่งผ่านบลูทูธ:** เสียงที่ดาวน์โหลดจากเครือข่าย สามารถส่งผ่านบริการบลูทูธได้

อื่นๆ

เมนู 8.8

คุณสามารถจัดเก็บไฟล์ประเภทใดก็ได้ไว้ที่นี่ โดยทั่วไปโฟลเดอร์นี้จะใช้สำหรับการถ่ายโอนไฟล์จากพีซีเครื่องหนึ่งไปอีกเครื่องหนึ่ง

- ▶ **ดู:** คุณสามารถดูไฟล์รูปแบบต่อไปนี้ได้: JPG, GIF, WBMP, PNG และ TXT เครื่องจะ สามารถแสดงภาพ JPG (สูงสุด 460K), GIF (สูงสุด 100K)
- ▶ **ส่งผ่านบลูทูธ:** ส่งไฟล์ที่เลือกไปยังอุปกรณ์อื่นผ่านทางบลูทูธ

วันที่และเวลา

เมนู 9.1

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

ตั้งวันที่ (เมนู 9.1.1)

- **ตั้งวันที่**
คุณสามารถป้อนวันที่ปัจจุบันได้
- **รูปแบบวันที่**
คุณสามารถตั้งรูปแบบวันที่ เช่น วว/ดด/ปปปป, ดด/วว/ปปปป, ปปป/ดด/วว (ว: วันที่ / ด: เดือน / ป: ปี)

ตั้งเวลา (เมนู 9.1.2)

- **ตั้งเวลา**
คุณสามารถป้อนเวลาปัจจุบันได้
- **รูปแบบเวลา**
คุณสามารถเลือกรูปแบบเวลาเป็น 12 ชั่วโมง หรือ 24 ชั่วโมง

จอแสดงผล

เมนู 9.2

รูปภาพพื้นหลัง (เมนู 9.2.1)

- ▶ **ดีฟอลต์**
คุณสามารถเลือกภาพหรือภาพเคลื่อนไหวสำหรับใช้เป็นภาพพื้นหลังได้โดยการกดปุ่ม ◀ หรือ ▶.
- ▶ **โฟลเดอร์ของฉัน**
คุณสามารถเลือกภาพหรือภาพเคลื่อนไหวสำหรับใช้เป็นภาพพื้นหลัง

สีเมนู (เมนู 9.2.2)

โทรศัพท์ของคุณมีแบบหน้าจอสีให้เลือก 4 แบบ ให้ตั้งค่าแบบหน้าจอสีโดยเลื่อนและกดปุ่มเลือกซ้าย  [ตกลง]

ข้อความสแตนด์บาย (เมนู 9.2.3)

หากคุณเลือกเปิดคุณสามารถแก้ไขข้อความที่แสดงในโหมดสแตนด์บายได้

การตั้งค่า

ไฟหน้าจอ (เมนู 9.2.4)

คุณสามารถตั้งระยะเวลาการเปิดไฟหน้าจอภายในได้

ความสว่าง (เมนู 9.2.5)

ความสว่างของหน้าจอสามารถปรับได้ตั้งแต่ 40% ถึง 100%

ชื่อเครือข่าย (เมนู 9.2.6)

หากเปิดใช้ฟังก์ชันนี้ หน้าจอ LCD หลักจะแสดงชื่อ เครือข่าย

เมนูหน้าจอ (เมนู 9.2.7)

หากเลือกใช้เมนูนี้ เครื่องจะแสดงฟังก์ชันของปุ่มนารีเกด 4 ปุ่ม และปุ่มเมนู เป็นรูปภาพที่กลางหน้าจอ

แบบสีตัวเลข (เมนู 9.2.8)

คุณสามารถตั้งสีสำหรับหมายเลขที่แสดงเมื่อกดปุ่มตัวเลขในโหมดรอรับสายสำหรับการโทรติดต่อได้

การประหยัดพลังงาน

เมนู 9.3

ฟังก์ชันนี้จะประหยัดพลังงานแบตเตอรี่ โดยการเพิ่มความสว่างของหน้าจอพื้นหลังสูงสุด 40%

ภาษา

เมนู 9.4

คุณสามารถเปลี่ยนภาษาของข้อความที่ใช้แสดงบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดภาษาด้วย

การเชื่อมต่อ

เมนู 9.5

บลูทูธ (เมนู 9.5.1)

ฟังก์ชันบลูทูธ จะช่วยให้โทรศัพท์เคลื่อนที่ที่ ใช้งานร่วมกันได้ อุปกรณ์ต่อพ่วงต่าง ๆ และ คอมพิวเตอร์ที่อยู่ในบริเวณใกล้เคียงสื่อสารกัน ได้โดยตรงโดยไม่ต้องต่อสายใด ๆ โทรศัพท์เครื่องนี้สนับสนุนการเชื่อมต่อบลูทูธในตัวเครื่อง ซึ่ง ทำให้สามารถเชื่อมต่อกับชุด

หูฟัง, บลูทูธ, แอปพลิเคชัน คอมพิวเตอร์ที่ใช้ทำงานร่วมกันได้ และ อื่นๆ

หมายเหตุ

- ▶ หากคุณใช้ PC sync ผ่านทางบลูทูธ คุณ สามารถแลกเปลี่ยนข้อมูลได้ภายในสมุด โทรศัพท์เท่านั้น
- ▶ เมื่อคุณได้รับข้อมูลจากอุปกรณ์บลูทูธอื่นๆ เครื่องจะขอให้คุณยืนยันหลังการยืนยันการโอนไฟล์นั้นจะได้รับการคัดลอก ลงในโทรศัพท์ของคุณ
- ▶ โทรศัพท์จะจัดเก็บไฟล์ไว้ในโฟลเดอร์ต่อไปนี้ ขึ้นอยู่กับประเภทไฟล์
 - **MP3(.mp3,mp4,aac,m4a, wma)** : โฟลเดอร์เพลง
 - **วิดีโอ (.3GP, MP4)**: โฟลเดอร์วิดีโอ
 - **รายชื่อของสมุดโทรศัพท์ (.VCF)**: สมุดโทรศัพท์
 - **ข้อความ(.txt)**: โฟลเดอร์ข้อความ
 - **ไฟล์อื่นๆ(*.*)**: โฟลเดอร์ที่จัดเก็บไฟล์
- ▶ โดยปกติเครื่องจะทำงานด้วยไดรเวอร์ WIDCOMM (เวอร์ชัน 1.4.3.4) หรือไดรเวอร์ WIDCOMM (เวอร์ชัน 1.4.2.10) และไมรองรับ LG Content Bank สำหรับ บลูทูธ

ตั้งค่าบลูทูธ

ใช้สำหรับเปิดใช้งานหรือเลิกใช้ฟังก์ชันบลูทูธ

อุปกรณ์ที่จับคู่/อุปกรณ์แอสต์ฟรี

คุณสามารถดูอุปกรณ์ทั้งหมดซึ่ง KG800จับคู่อยู่ หากคุณเข้าสู่อุปกรณ์ที่จับคู่ไว้ หรืออุปกรณ์แอสต์ฟรี คุณจะพบตัวเลือกต่างๆต่อไปนี้ ในเมนูเหล่านั้น

- ▶ **เชื่อมต่อ**: ให้คุณเชื่อมต่ออุปกรณ์บลูทูธที่จับคู่ไว้
- ▶ **เพิ่มใหม่**: ให้คุณค้นหาอุปกรณ์บลูทูธใหม่ และ เพิ่มไว้ในรายชื่ออุปกรณ์ที่จับคู่ไว้ของ โทรศัพท์คุณเมื่อคุณเลือกเพิ่มใหม่ โทรศัพท์ ของคุณจะเริ่มค้นหาอุปกรณ์บลูทูธ ภายใน รัศมีนั้น ทันทีที่อุปกรณ์ที่คุณต้องการจับคู่ ปรากฏขึ้นในรายการกดปุ่มเลือกขวา [หยุด]

เลื่อนไปที่อุปกรณ์ที่ต้องการและกดปุ่มเลือก ซ้าย[จับคู่] เครื่องจะขอให้คุณป้อนรหัสผ่าน รหัสผ่านคือรหัสใดๆที่คุณต้องการใช้(ทั้งสอง อุปกรณ์ต้องใช้รหัสผ่านเดียวกัน) หรือรหัส ที่ กำหนดไว้ล่วงหน้าของผู้ผลิตอุปกรณ์ที่คุณ พยายามจับคู่ด้วย โปรดดูในคู่มือผู้ใช้เครื่องที่คุณเริ่มจับคู่ด้วย เพื่อความีรหัสผ่านที่กำหนดไว้ล่วงหน้าแล้วหรือไม่

การตั้งค่า

- ▶ **ตั้งชื่อ:** ให้คุณเปลี่ยนชื่ออุปกรณ์บลูทูธที่จับคู่ และลักษณะการแสดงผลที่เครื่องโทรศัพท์
- ▶ **อนุญาต:** ใช้ในการตั้งค่าการเชื่อมต่อที่ได้รับอนุญาต ระหว่างอุปกรณ์บลูทูธสองเครื่อง เช่น หากคุณใช้ชุดหูฟังบลูทูธ กับโทรศัพท์ของคุณการตั้งค่าการเชื่อมต่อเป็น ได้รับสิทธิ์ หมายความว่า ชุดหูฟังจะเชื่อมต่อกับเครื่องโดยอัตโนมัติในทุกครั้งที่เปิดใช้ชุดหูฟัง
- ▶ **บริการทั้งหมด:** ใช้เพื่อดูข้อมูลบริการทั้งหมดที่อุปกรณ์บลูทูธสนับสนุน
- ▶ **ลบ:** ใช้ในการลบอุปกรณ์ บลูทูธที่ต้องการ
- ▶ **ลบทั้งหมด:** ให้คุณลบอุปกรณ์บลูทูธที่จับคู่ไว้ทั้งหมด

การตั้งค่า

คุณสามารถบันทึกอุปกรณ์ใหม่ที่ใช้งานร่วมกับบลูทูธ ได้ หากคุณสามารถเพิ่มอุปกรณ์นั้นไว้แล้ว คุณสามารถค้นหาอุปกรณ์นั้นได้ทันทีหลังจากป้อนรหัสผ่าน

- ▶ **ตั้งค่าการแสดง**
ตัวเลือกนี้ให้คุณตั้งค่าได้ว่า จะให้อุปกรณ์บลูทูธอื่นๆ เห็นเครื่องของคุณหรือไม่
- ▶ **ชื่อเครื่อง**
ใช้ในการตั้งชื่ออุปกรณ์บลูทูธ ชื่อที่กำหนดมาจากโรงงานคือ LG KG800

บริการที่สนับสนุน

แสดงรายชื่อบริการบลูทูธที่เครื่องรองรับ

- ▶ **หูฟัง**
- ▶ **ชุดเสนต์ฟรี**
- ▶ **การถ่ายโอนไฟล์**
- ▶ **การพิมพ์ภาพ**
- ▶ **การเชื่อมต่อแบบ Dial-up**
- ▶ **การถ่ายโอนนามบัตร**
- ▶ **การเบรตส์อุปกรณ์อื่นๆ**
- ▶ **โปรไฟล์ซีเรียลพอร์ต**

โมเด็ม (เมนู 9.5.2)

คุณสามารถเข้าใช้บริการเครือข่ายผ่านโมเด็ม หากคุณต้องการใช้ PCsync, Contents banks, Internet Cube, คุณต้อง เข้าสู่มenuและเปิดใช้โมเด็ม จากนั้นเสียบสายเคเบิล USB

เครือข่าย (เมนู 9.5.3)

คุณสามารถเลือกเครือข่ายที่คุณต้องการลงทะเบียนได้โดยอัตโนมัติหรือด้วยตนเองโดยทั่วไป การเลือกเครือข่ายจะตั้งค่าที่อัตโนมัติ

อัตโนมัติ

คุณสามารถเลือกประเภทเครือข่ายได้

▶ อัตโนมัติ

หากคุณเลือกโหมดอัตโนมัติเครื่องจะค้นหาและเลือกเครือข่ายให้คุณ โดยอัตโนมัติเมื่อเลือก "อัตโนมัติ" แล้วเครื่องจะตั้งค่าที่ "อัตโนมัติ" อยู่เช่นเดิมแม้ว่าจะมีการปิดและเปิดเครื่องก็ตาม

▶ เลือกเอง

เครื่องโทรศัพท์จะหาสัญญาณเครือข่ายที่มีอยู่และแสดงรายการนั้นจากนั้นคุณสามารถเลือกเครือข่ายที่คุณต้องการใช้หากเครือข่ายนี้มีข้อตกลงเรื่องการโรมมิ่งกับผู้ให้บริการระบบเครือข่ายในพื้นที่ของคุณ และเครื่องจะให้คุณเลือกเครือข่ายอื่นได้ในกรณีที่เครื่องไม่สามารถเชื่อมต่อกับเครือข่ายที่เลือกได้

▶ เครือข่ายที่ชอบ

คุณสามารถตั้งค่ารายการเครือข่ายที่คุณต้องการให้ โทรศัพท์เชื่อมต่อเป็น อันดับแรก

ก่อนที่จะพยายามเชื่อมต่อกับเครือข่ายอื่นๆ รายการนี้เป็นรายการเครือข่ายซึ่งเป็นที่รู้จักและมีการกำหนดไว้ล่วงหน้าแล้วในเครื่องโทรศัพท์

เลือกเอง

▶ EGSM/DCS

คุณสามารถเลือกใช้บริการ EGSM/DCS ได้ โดยขึ้นอยู่กับสภาพการใช้งานของเครือข่าย นั้น

▶ PCS เท่านั้น: คุณสามารถเลือกใช้ PCS ได้เท่านั้น โดยขึ้นอยู่กับสภาพการใช้งานของเครือข่ายนั้น

ตั้งค่า GPRS (เมนู 9.5.4)

คุณสามารถตั้งค่าการให้บริการ GPRS ได้อย่างหลากหลาย

เปิดให้บริการ

ขึ้นอยู่กับสภาพการใช้งานต่างๆ หากเลือกเมนูนี้ โทรศัพท์จะลงทะเบียนกับเครือข่าย GPRS โดยอัตโนมัติเมื่อคุณเปิดเครื่อง การเปิดใช้โปรแกรม PC Dial-up หรือ WAPจะเป็นการสร้างการเชื่อมต่อระหว่างโทรศัพท์กับเครือข่ายทำให้สามารถส่งถ่ายข้อมูลได้

การตั้งค่า

เมื่อคุณเปิดโปรแกรมนี้ การเชื่อมต่อ GPRS จะสิ้นสุดลงแต่การลงทะเบียนกับเครือข่ายยังคงมีผลอยู่

เมื่อต้องการ

เมื่อเลือกเมนูนี้ การเชื่อมต่อGPRSเกิดขึ้นเมื่อคุณทำการ เชื่อมต่อกับบริการ WAP และสิ้นสุดลงเมื่อคุณสิ้นสุด การเชื่อมต่อ WAP

การโทร

เมนู 9.6

การโอนสาย (เมนู 9.6.1)

บริการ การโอนสาย ให้คุณโอนสายเรียกเข้า ทั้งจาก สายโทรศัพท์, แฟกซ์หรือสายที่โทรเข้าเพื่อส่งข้อมูลไปยัง หมายเลขอื่นได้โปรดติดต่อผู้ให้บริการ ระบบของคุณเพื่อ

- ▶ **สายสนทนาทั้งหมด**
โอนสายเรียกเข้าทุกสาย
- ▶ **เมื่อสายไม่ว่าง**
โอนสายเมื่อคุณใช้โทรศัพท์อยู่
- ▶ **เมื่อไม่รับสาย**
โอนสายที่คุณไม่ได้รับ
- ▶ **เมื่อติดต่อไม่ได้**
โอนสายเมื่อเปิดเครื่องหรืออยู่นอกพื้นที่ให้บริการ
- ▶ **สายข้อมูลทั้งหมด**
โอนสายโทรเข้าเพื่อส่งข้อมูลทุกสายไปยังหมายเลขที่การเชื่อมต่อกับ เครื่องคอมพิวเตอร์
- ▶ **สายแฟกซ์ทั้งหมด**
โอนสายแฟกซ์ทุกสายไปยังหมายเลขที่มีการเชื่อมต่อกับ เครื่องแฟกซ์
- ▶ **ยกเลิกทั้งหมด**
ยกเลิกบริการโอนสายทั้งหมด

เมนูย่อย

เมนูการโอนสายมีเมนูย่อยต่างๆ ดังที่แสดงด้านล่าง

- **เปิดใช้งาน**
เปิดใช้งานบริการที่เกี่ยวข้อง

ไปยังศูนย์ข้อความเสียง



โอนสายไปที่ศูนย์รับฝากข้อความ ฟังก์ชันนี้ไม่มีในเมนู สายขอมูลทั้งหมด และ สายแพกซ์ทั้งหมด

ไปยังหมายเลขอื่น

สำหรับป้อนหมายเลขที่ใช้ในการโอนสาย

- ยกเลิก
เลิกใช้งานบริการที่เกี่ยวข้อง
- ดูสถานะ
ตรวจสอบสถานะของบริการที่เกี่ยวข้อง

รูปแบบการรับสาย (เมนู 9.6.2)

- ▶ **เลื่อนสไลด์ขึ้น**
หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าเมื่อคุณเปิดสไลด์
- ▶ **ปุ่มใดก็ได้**
หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่มใดก็ได้ ยกเว้นปุ่ม  [วางสาย]
- ▶ **ปุ่มรับสายเท่านั้น**
หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่ม  [ส่ง] เท่านั้น

ส่งหมายเลขตัวเอง (เมนู 9.6.3)

(ขึ้นอยู่กับเครือข่ายและการสมัครรับบริการ)

- ▶ **ตั้งค่าตามเครือข่าย**
หากเลือกตัวเลือกนี้ การที่คุณจะสามารถส่งหมายเลขโทรศัพท์ของคุณได้หรือไม่ขึ้นอยู่กับบริการของสายโทรศัพท์ 2 สายที่ให้บริการอยู่ เช่น สาย 1 หรือสาย 2
- ▶ **เปิด**
คุณสามารถส่งหมายเลขโทรศัพท์ของคุณไปยังผู้รับโดยหมายเลขของคุณจะแสดงที่เครื่องโทรศัพท์ของผู้รับสาย
- ▶ **ปิด**
จะไม่มีการแสดงหมายเลขโทรศัพท์ของคุณ

สายเรียกซ้อน (เมนู 9.6.4)

(ขึ้นอยู่กับเครือข่าย)

- ▶ **เปิดทำงาน**
หากคุณเลือกเปิดใช้งาน คุณสามารถรับสาย (เรียกเข้า) ซ้อนได้

การตั้งค่า

- ▶ **ยกเลิก**
หากคุณเลือกยกเลิก
คุณ将无法ทราบ ได้ว่ามีสาย
(เรียกเข้า) ข้อที่ กำลังรออยู่
- ▶ **สถานะการโทร**
แสดงสถานะของการใช้สายเรียกซ้อน

เตือนทุกนาที (เมนู 9.6.5)

หากเลือก เปิด คุณสามารถตรวจสอบระยะเวลาการ โทรด้วยเสียงเตือนที่ตั้งทุก 1 นาทีในระหว่างการโทร


โทรเข้าอัตโนมัติ (เมนู 9.6.6)

- ▶ **เปิด**
เมื่อใช้งานฟังก์ชันนี้เครื่องจะพยายามหมุนวนหมายเลขที่โทรไม่ติดโดยอัตโนมัติ
- ▶ **ปิด**
เครื่องจะไม่หมุนวนหมายเลขซ้ำเมื่อไม่สามารถ ต่อสายนั้นได้ในครั้งแรก

รักษาความปลอดภัย เมนู 9.7

ใส่รหัส PIN (เมนู 9.7.1)

ในเมนูนี้ คุณสามารถตั้งค่าโทรศัพท์ให้ถามรหัส PIN ของซิมการ์ดของคุณเมื่อเปิดใช้เครื่องโทรศัพท์หากเปิดใช้งานฟังก์ชันนี้แล้วเครื่องจะขอให้คุณ ป้อนรหัส PIN

1. เลือกให้ป้อนรหัส PIN
ในเมนูตั้งระบบป้องกัน แล้วกดปุ่ม  [ตกลง]
2. ตั้งค่า **เปิด/ปิด**
3. หากคุณต้องการเปลี่ยนแปลงการตั้งค่าดังกล่าว คุณต้องป้อนรหัส PIN เมื่อคุณเปิดเครื่อง
4. หากคุณป้อนรหัส PIN ผิดเกิน 3 ครั้งเครื่องจะล็อก หาก PIN ถูกล็อกแล้ว คุณจะต้องใช้รหัส PUK ปลดล็อก
5. โดยคุณสามารถป้อนรหัส PUK ได้ถึง 10 ครั้ง หากคุณป้อนรหัส PUK ผิดเกิน 10 ครั้ง คุณจะไม่สามารถปลดล็อกเครื่องโทรศัพท์ของคุณได้และต้องติดต่อผู้ให้บริการของคุณเพื่อแก้ปัญหาดังกล่าว

ล็อคเครื่อง (เมนู 9.7.2)

คุณสามารถใช้รหัสรักษาความปลอดภัย เพื่อป้องกันการใช้โทรศัพท์ของคุณ โดยไม่ได้รับอนุญาตเมื่อคุณเปิดเครื่องคุณจะต้องป้อนรหัสรักษาความปลอดภัย หากคุณได้ตั้งค่าการล็อคเครื่องที่ **เมื่อเปิดเครื่อง**

หากคุณตั้งค่าการล็อคเครื่องที่ **เมื่อเปลี่ยนซิม** โทรศัพท์ของคุณ จะขอทราบรหัสรักษาความปลอดภัย เมื่อคุณเปลี่ยนซิมการ์ดเท่านั้น

ป้องกันการโทร (เมนู 9.7.3)

คุณสามารถใช้รหัสป้องกัน เพื่อป้องกันการใช้โทรศัพท์ของคุณโดยไม่ได้รับอนุญาตเมื่อคุณเปิดเครื่องคุณจะต้องป้อนรหัสป้องกันหากคุณได้ตั้งค่าการล็อคเครื่องที่เปิด หากคุณตั้งค่าการล็อคเครื่อง ฮัดโนมีตี เครื่องจะให้คุณป้อนรหัสรักษาความปลอดภัย เฉพาะเมื่อคุณเปลี่ยน ซิมการ์ดเท่านั้น

- ▶ **การโทรออกทั้งหมด**
บริการจำกัดการโทรของสายโทรออกทั้งหมด
- ▶ **โทรออกต่างประเทศ**
บริการจำกัดการโทรของสายโทรออกต่างประเทศทั้งหมด

- ▶ **โทรออกต่างประเทศแบบข้ามเครือข่าย**
บริการจำกัดการโทรของสายโทรออกต่างประเทศทั้งหมด ยกเว้นเครือข่ายในประเทศ ของตน
- ▶ **สายเข้าทั้งหมด**
บริการจำกัดการโทรของสายโทรเข้าทั้งหมด
- ▶ **ไม่รับเมื่ออยู่ต่างประเทศ**
บริการจำกัดการโทรของสายโทรเข้าทั้งหมดเมื่อ ใช้การโรมมิ่ง
- ▶ **ยกเลิกทั้งหมด**
คุณสามารถยกเลิกบริการจำกัดการโทรทั้งหมดได้
- ▶ **เปลี่ยนรหัสผ่าน**
คุณสามารถเปลี่ยนรหัสผ่านสำหรับบริการจำกัดการ โทรได้

เมนูย่อย

- **เปิดทำงาน**
คุณสามารถขอให้เครือข่ายตั้งค่าการจำกัดการโทรได้

การตั้งค่า

- **ยกเลิก**
ยกเลิกการตั้งค่าการจำกัดการโทร
- **ตรวจสอบสถานะ**
ดูสถานะของเครื่องว่ามีการจำกัดการโทรหรือไม่


เบอร์โทรที่กำหนด (เมนู 9.7.4) (ขึ้นอยู่กับชม)

คุณสามารถจำกัดการโทรออก ไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้ หมายเลขเหล่านั้นจะได้รับการป้องกันด้วยรหัส PIN2 หมายเลขที่คุณต้องการให้ใช้ได้ เมื่อเปิดใช้บริการนี้จะต้องเพิ่มไว้ในรายชื่อ หลังจากเปิดใช้การจำกัดหมายเลขโทรออก

- ▶ **ใช้**
คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้
- ▶ **เลิกใช้**
ยกเลิกการใช้ฟังก์ชันการจำกัดหมายเลขโทรออก
- ▶ **รายการหมายเลข**
คุณสามารถดูรายการหมายเลขโทรศัพท์ที่จัดเก็บไว้ในเมนู เบอร์โทรที่กำหนด

เปลี่ยนรหัส (เมนู 9.7.5)

PIN ย่อมาจาก Personal Identification Number เป็นรหัสที่ใช้ในการป้องกันการใช้โทรศัพท์โดยไม่ได้รับอนุญาต คุณสามารถเปลี่ยนรหัสผ่านต่อ ไปนี้ได้: **รหัสป้องกัน**, **รหัส PIN**, **รหัส PIN2**

1. หากคุณต้องการเปลี่ยนรหัสรักษาความปลอดภัย/รหัส PIN/PIN2 ให้ป้อนรหัสเดิมที่ใหม่ของคุณ แล้วกดปุ่ม  [ตกลง]
2. ป้อนรหัสรักษาความปลอดภัย รหัส PIN/PIN2 ใหม่ และตรวจสอบความถูกต้อง

ล็อคปุ่มสัมผัส (เมนู 9.7.6)

ให้คุณตั้งค่าการเปิด/ปิดการใช้ทัชแพดเมื่อปิดฝาใส่ไลต์

เปิด: คุณจะไม่สามารถใช้ทัชแพดเมื่อปิดฝาใส่ไลต์ (คุณสามารถใช้ทัชแพดได้เมื่อเปิดฝาใส่ไลต์ไว้เท่านั้น)

ปิด: คุณจะเปิดใช้ทัชแพดได้โดยใช้ปุ่มปรับระดับเสียง แม้ว่าฝาใส่ไลต์จะปิดอยู่ก็ตาม

สถานะหน่วยความจำ

เมนู 9.8

คุณสามารถตรวจสอบพื้นที่ว่าง และการใช้หน่วยความจำของพื้นที่จัดเก็บ, หน่วยความจำภายใน, หน่วยความจำมัลติมีเดียและหน่วยความจำภายนอกแต่ละส่วนโดยเข้าไปในเมนูของพื้นที่จัดเก็บแต่ละ ส่วน

ใช้ค่าจากโรงงาน

เมนู 9.9

คุณสามารถกลับไปเริ่มใช้ค่าทั้งหมดที่ตั้งมาจากโรงงานได้ คุณต้องใช้รหัส ป้องกันเพื่อใช้งานฟังก์ชันนี้

- ▶ **เรียกคืนค่าเริ่มต้น:** ให้คุณเรียกคืนการตั้งค่าเริ่มต้นของโทรศัพท์
- ▶ **ลบหน่วยความจำมัลติมีเดีย:** ให้คุณฟอร์แมตหน่วยความจำมัลติมีเดียและสร้างไดเรกทอรีที่เป็นค่าเริ่มต้น

อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์ เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อะแดปเตอร์สำหรับชาร์จแบตเตอรี่

สำหรับชาร์จแบตเตอรี่เมื่ออยู่ระหว่างการเดินทาง



แบตเตอรี่มาตรฐาน



สายเคเบิลข้อมูล/ซีดี โปรแกรม PC sync

สำหรับใช้เชื่อมต่อเพื่อการแลกเปลี่ยนข้อมูล ระหว่างเครื่องคอมพิวเตอร์กับโทรศัพท์ของคุณ



แฮนด์ฟรีพร้อมไมโครโฟนและตัวควบคุมโปรแกรมเล่นเพลง

ชุดหูฟังสเตอริโอตัวควบคุม: ปุ่มรับสายและวางสาย, ตัวควบคุมโปรแกรมเล่นเพลง, ระดับเสียง, ปุ่มพักสาย และไมโครโฟน

หลังจากเชื่อมต่อชุดหูฟังและตัวควบคุมให้เสียบปลายสายของตัวควบคุมเข้ากับช่องเสียบ ชุดหูฟังทางด้านขวาของโทรศัพท์



หมายเหตุ

- ▶ การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การ
- ▶ การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่อง โทรศัพท์สิ้นสุดลง
- ▶ อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเรา หากต้องการสอบถามข้อมูลเพิ่มเติม

ข้อมูลทางเทคนิค

ข้อมูลทั่วไป

ชื่อผลิตภัณฑ์: KG800

ระบบ : GSM 900 / DCS 1800 / PCS 1900

อุณหภูมิ

สูงสุด: +55°C

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงนุดโคล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - ศุกร์, เสาร์ที่ 2 และ 4 ของเดือน 08:00 - 17:00น.

Call center : 0-2878-5757

ศูนย์บริการ Easy Fix โดย บริษัท IEC จำกัด (มหาชน)

ศูนย์ซ่อมสำนักงานใหญ่ IEC Complex

เลขที่ 390 ถนน รามคำแหง แขวง หัวหมาก เขต บางกะปิ กรุงเทพฯ 10240

วันและเวลาทำการ : จันทร์ - ศุกร์ 08:00 - 19:00น. โทร 0-2729-9400

Call center : 0-2729-9400

ศูนย์บริการ LOXLEY โดย บริษัท LOXLEY จำกัด (มหาชน)

ศูนย์ซ่อมสำนักงานใหญ่บางเขน

เลขที่ 2 ซ. พหลโยธิน 19 (เขมไชย) แขวง ลาดยาว เขต จตุจักร กรุงเทพฯ 10900

วันและเวลาทำการ : จันทร์-ศุกร์ 08.00 - 17.00น. โทร 0-2515-8383

Call center : 0-2248-3131

ศูนย์บริการ Advanced บริษัท ดิจิตอล โฟน จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ อาคาร ESV

เลขที่ 1 ชั้น G ถ.พหลโยธิน แขวง สามเสนใน เขต พญาไท กรุงเทพฯ 10400

วันและเวลาทำการ : จันทร์-ศุกร์ 08.30 - 17.30น. โทร 0-2687-8731-2

Call center : 1175 กด 8

* เฉพาะสต็อกเกอร์รุ่นประกันที่ เป็น mfa เท่านั้น

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeoukdo-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KG800/KG808/MG800C

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V1.8.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
3GPP TS 51.010-1, EN 301 611 V9.0.2

Supplementary Information

The conformity to above standards is verified by BAST.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, KIm / Director

27.Feb. 2006

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

| KG800 | User Guide

- English



Table of Contents

| | | | | | |
|---|----|---------------------------------|----|---------------------|----|
| How to Use Touch Button | 5 | General functions | 23 | Call register | 37 |
| Introduction | 7 | Making and answering calls | | Missed calls | |
| For Your Safety | 8 | Entering text | 25 | Received calls | |
| Guidelines for safe and efficient use | 9 | Changing the text input mode | | Dialled calls | |
| KG800 features | 14 | Contacts | 28 | All calls | 38 |
| Parts of the phone | | Selecting Functions and Options | 29 | Delete recent calls | |
| Display information | 18 | In-Call Menu | 30 | Call charges | |
| On-Screen Icons | | During a call | | Call duration | |
| Installation | 20 | Multiparty or conference calls | 31 | Call costs | |
| Installing the SIM card and the handset battery | | Menu Tree | 33 | Settings | |
| Charging the battery | 21 | Profiles | 35 | GPRS information | 39 |
| Disconnecting the charger | 22 | Activate | | Call duration | |
| | | Personalise | | Data volume | |
| | | Rename | 36 | Tools | 40 |
| | | | | Favourites | |
| | | | | Alarm clock | |
| | | | | Calculator | |
| | | | | Unit converter | 41 |
| | | | | World time | |
| | | | | SIM-Menu | |

| | | | | | |
|----------------------|-----------|-----------------------------|-----------|-----------------------|-----------|
| Organiser | 42 | Messages | 48 | Multimedia | 58 |
| Contacts | | New message | | Camera | |
| Search contacts | | Write text message | | Video camera | 59 |
| Add new | | Write multimedia message | 49 | Voice recorder | |
| Caller groups | 43 | Inbox | 51 | Record | |
| Speed dial | 44 | Drafts | 52 | View list | 60 |
| Own number | | Outbox | | MP3 | |
| My business card | | Listen to voice mail | 55 | Photo album | 62 |
| Settings | | Info message | | Video album | 63 |
| Calendar | 46 | Read | | Settings | |
| Add new | | Topics | 54 | Camera | |
| View daily schedules | | Templates | | Video camera | |
| Delete past | | Text templates | | | |
| Delete all | | Multimedia templates | | | |
| Go to date | 47 | Settings | 55 | | |
| Set alarm tone | | Text message | | | |
| Memo | | Multimedia message | | | |
| | | Voice mailbox number | 57 | | |
| | | Info message | 58 | | |
| | | Push message | | | |

Table of Contents


| | | | | | |
|-------------------------|-----------|------------------------|-----------|-----------------------|-----------|
| Browser | 64 | Settings | 76 | Call waiting | 83 |
| Home | 65 | Date & time | | Minute minder | |
| Bookmarks | | Date | | Auto redial | |
| Go to URL | | Time | | Security | |
| Settings | | Display | | PIN code request | |
| Profiles | | Wallpaper | | Handset lock | 84 |
| Cache | 67 | Menu colour | | Call barring | |
| Cookie | | Standby text | | Fixed dial number | 85 |
| Clear cache | | Backlight | 77 | Change codes | |
| Clear cookie | | Brightness | | Touchpad lock | |
| Security | | Network name | | Memory status | 86 |
| | | Home screen shortcut | | Reset settings | |
| My stuff | 68 | Dial font colour | | | |
| Games & apps | | Power saving | | Accessories | 87 |
| Games & apps | | Language | | Technical Data | 88 |
| Profiles | | Connectivity | | | |
| Videos | 72 | Bluetooth | | | |
| Photos | | Modem | 80 | | |
| Music | 73 | Network | | | |
| Text | | GPRS attach | 81 | | |
| Images | 74 | Calling | | | |
| Sounds | | Call divert | | | |
| Others | 75 | Answer mode | 82 | | |
| | | Send my number | | | |

How to Use Touch Button

- ▶ This product's buttons on the slide are touch buttons.
- ▶ Be sure to read "Cautions for Touch Buttons" before using touch buttons.

Cautions for Touch Buttons

1. Make sure your hands are clean and dry.
 - Remove all moisture from the surface of your hands or the touch buttons in a humid environment.

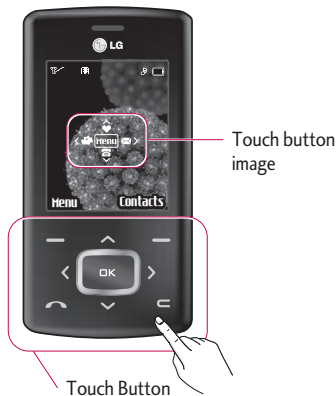

2. You do not need to press hard on the touch buttons to make it work normally.
 - Keep product from severe impact, as sensors of the touch buttons may be damaged.
3. Use the **tip** of your finger to press exactly on the touch button you want, being careful not to touch the buttons for other functions.
4. When both the home screen and touch button lights are off, pressing a touch button will not turn on the home screen light. Press the End button and the home screen light will turn back on (touch buttons do not work when the touch button lights are off).
5. If the slide is closed and the **Touch Protection** function is on, during calls the **Touch button Lock** function is automatically enabled. (For details, see 'Touch Button Status When Using Mobile Phone'.)

How to Use Touch Button

6. Touch buttons may not work normally if a mobile phone case or plastic is covering the touch buttons. Also, touch buttons may not work normally if you are using it wearing a glove.
7. Keep metal and other conductive material away from the surface of touch buttons, as contact with them may result in error.

Touch Button Status When Using Mobile Phone



When the slide is closed, to prevent indiscreet action of the touch buttons whilst using the phone or during calls, the **Touch Protection** function is automatically enabled. (In this case, the touch buttons will not work even if they are pressed)

1. When slide is closed

- When the slide is closed, Touch Protection function is automatically enabled. (Opening the slide will automatically disable it.)

- To disable Touch Protection when slide is closed, press volume button twice.
- After disabling Touch Protection, if there is no button action for a certain duration (5 seconds), Touch Protection function is enabled again.

2. During calls


- During calls, regardless of slide status, Touch Protection function is automatically enabled.
- To disable Touch Protection, press the MP3 button or number button,  button, or  button.
- After disabling Touch button Lock, if there is no button action for a certain duration (5 seconds), the Touch Protection function is enable again.

Note

- ▶ For user convenience, touch button image with functions of each touch button is shown on the home screen when purchasing products.

Introduction

Congratulations on your purchase of the advanced and compact KG800 cellular phone, designed to operate with the latest digital mobile communication technology.

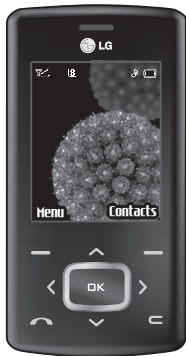

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Use of phone cases with magnetic locks with slide type phones has caused problems such as loss of network signal and phones powering off.

For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*

Guidelines for safe and efficient use

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KG800 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.596 W/kg (10g).
- ▶ SAR data information for residents in countries/ regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

Guidelines for safe and efficient use

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios and personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with sharp objects as, it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Only authorised personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorised Service Centre to replace the damaged antenna.
- ▶ The label on the phone contains important information for customer support purposes. Do not remove it.

- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- ▶ Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- ▶ Do not hold the antenna when the phone is in use.
If you hold it, it can affect call quality, it also may cause the phone to operate as a higher power level than needed and shorten talk and standby times.
- ▶ If your mobile phone supports infrared, never direct the infrared ray at anyone's eyes.

Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, (i.e. in your breast pocket).
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.
- ▶ Do not bend, scratch, or expose to static electricity.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.

Guidelines for safe and efficient use

- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Network service

- ▶ Some services and functions described in this user's guide are dependent on network or subscription. Therefore, all menus may not be available in your phone. Please consult your network operator for more information about your subscription.


Avoid damage to your hearing

- ▶ Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

KG800 features

Parts of the phone

Open view



The diagram shows the LG KG800 phone in its open view. The top part is the main LCD screen, which displays a circular graphic with 'Menu' and 'Contacts' labels. Above the screen is an earpiece. Below the screen is a navigation pad with an 'OK' button in the center and four directional arrows. At the bottom is a numeric keypad with 12 keys, including function keys like * and #. Red lines connect text labels to specific parts of the phone: 'Earpiece' to the top speaker, 'Main LCD' to the screen, 'Navigation keys' to the central pad, and 'Alpha numeric keys' to the keypad.

Earpiece

Navigation keys

- ▶ **In standby mode:**
 - ▶ **Briefly:** List of Favourites
 - ▶ **Briefly:** List of Contacts
 - ▶ **Briefly:** List of Profiles
(Hold down: Activate/Deactivate Vibrate mode)
 - ▶ **Briefly:** List of Messages
- ▶ **In menu:** scroll up & down

Main LCD

- ▶ **Top:** Icons showing signal strength, battery level and various other functions.
- ▶ **Bottom:** Soft key indications

Alpha numeric keys

- ▶ **In standby mode:** Input numbers to dial. Hold down
 - ▶ **0** - International calls
 - ▶ **1** - Dial Voice mail centre.
 - ▶ **2** to **9** - Speed dials
- ▶ **In editing mode:** Enter numbers & characters



Left soft key/ Right soft key

These keys perform the function indicated in the bottom of the display.

Confirm key

Selects menu options and confirms actions.

Clear key

Deletes a character with each press.
Hold the key down to clear all input.
Use this key to go back to a previous screen.

Send key

- ▶ Dial a phone number and answer a call.
- ▶ **In standby mode:** shows a history of calls made, received, and missed.

KG800 features

Left side view



Side keys

- ▶ **In standby mode (opened):**
Volume of key tone
- ▶ **In standby mode (closed):**
Short press - The main LCD light on.
Long press - Only display a wallpaper.
- ▶ **In menu:** scroll up & down
- ▶ **During a call:** volume of the earpiece

Note

- ▶ To protect the sense of hearing while Slide open, maximum volume level is 3.
- ▶ **In standby mode:** Long press ***#*** - Switches to Manner(General) mode.

Right side view




End key

- ▶ **Switch on/off**
(hold down)
- ▶ **End or reject a call.**

Camera/MP3 and Multimedia hot key

- ▶ Activates the MP3 player (long press) and Multimedia menu (short press) directly.

Rear view

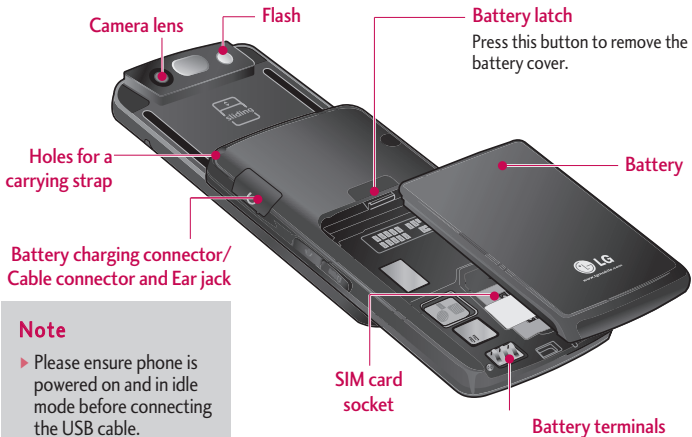


Note

- ▶ Please ensure phone is powered on and in idle mode before connecting the USB cable.

KG800 features

Display Information

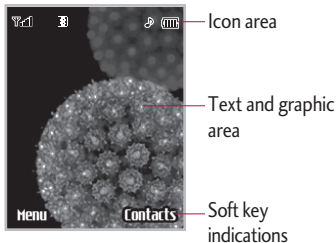

| Area | Description |
|--------------|---|
| First line | Displays various icons. |
| Middle lines | Display messages, instructions and any information that you enter, such as number to be dialed. |
| Last line | Shows the functions currently assigned to the two soft keys. |










The screen displays several icons. These are described below.

On-Screen Icons

| Icon/Indicator | Description |
|----------------|---|
| | Tells you the strength of the network signal. |
| | Call is connected. |
| | You can use GPRS service. |
| | Shows that you are using a roaming service. |
| | The alarm has been set and is on. |
| | Tells you the status of the battery. |
| | You have received a text message. |
| | You have received a voice message. |

Note

- ▶ The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

| Icon/Indicator | Description |
|---|--|
|  | Vibrate only menu in profile. |
|  | General menu in profile. |
|  | Loud menu in profile. |
|  | Silent menu in profile. |
|  | Headset menu in profile. |
|  | You can divert a call. |
|  | Indicates that the phone is accessing the WAP. |
|  | Indicates that you are using GPRS. |
|  | You have activated Bluetooth menu. |


Installation

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Press and hold down the battery release button and slide the battery down.

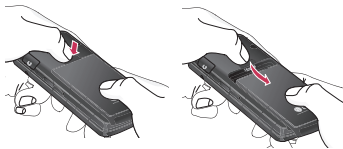

2. Install the SIM card.

Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card To remove the SIM card

Note

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

3. Install the battery.

Slide the battery upwards until it snaps back into place.



Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

Installation

CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the SIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery.
There is a risk of this causing a fire.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the charger




Disconnect the travel adapter from the phone as shown in the diagram below.





General Functions

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ Press and hold the clear key  to erase the entire number.
3. Press the send key  to call the number.
4. To end the call, press the end key .


Making a call from the call history list

1. In standby mode, press the send key , and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.


Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.

Ending a Call


When you have finished your call, press the end  key.

Making a call from the phonebook

You can save the names and phone numbers dialed regularly in Contacts. You can save them to the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the phonebook and pressing the  key.

General Functions

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys . Press the up side key to increase and down side key to decrease the volume.

Note



- ▶ In standby mode with the phone open, pressing the side keys adjusts the key tone volume.

Answering a call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the phonebook) is displayed.

1. To answer an incoming call, open the phone. (When Slide open has been set as the answer mode. (Menu 9.6.2).)


Note

- ▶ If Press any key has been set as the answer mode any key press will answer a call except for the  or the right soft key.
- ▶ You can answer a call while using the address book or other menu features.
 2. To end the call, close the phone or press the  key.

Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting. The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)


Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.

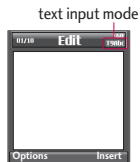




General Functions

2. Change the text input mode by pressing . You can check the current text input mode in the top right corner of the LCD screen.

Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.




You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary. You can turn the T9 mode on or off, and change the T9 language by holding down the () key.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.


- ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example: Press     to type **Good**.

Press    
[down navigation key] to type **Home**.




- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.
 - ▶ You can select the language of the T9 mode. Press the left soft key [Option], then select T9 languages. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting T9 off. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down  to erase entire words.

Note

- ▶ To exit from the text input mode without saving your input, press . The phone goes back to standby mode.











Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - ▶ Once for the first letter.
 - ▶ Twice for the second letter.
 - ▶ And so on.
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

Note


- ▶ Refer to the table below for more information on the characters available using the alphanumeric keys.

| Key | Characters in the order display | |
|---|---------------------------------|-------------|
| | Upper Case | Lower Case |
|  | .,/?!-:!"'1 | .,/?!-:!"'1 |
|  | A B C 2 | a b c 2 |
|  | D E F 3 | d e f 3 |
|  | G H I 4 | g h i 4 |
|  | J K L 5 | j k l 5 |
|  | M N O 6 | m n o 6 |
|  | P Q R S 7 | p q r s 7 |
|  | T U V 8 | t u v 8 |
|  | W X Y Z 9 | w x y z 9 |
|  | Space 0 | Space 0 |

General Functions


Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode. You can quickly switch from letters to numbers by pressing and holding down the () key.

Using the Symbol Mode

Using the Symbol Mode The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation keys to scroll through the symbols and press the corresponding key and then press the [OK] key.



Contacts

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 1 000 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the Contacts menu.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in the menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The role of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key to access the available menu.

Press the right soft key to access the available Contacts.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, initially press the MP3 key to unlock the touch screen and then press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key selecting **Contacts**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.

Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.


Answering an incoming call


To answer an incoming call when the handset is ringing, slide open the phone then press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** (Menu 9.6.4)

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing or by selecting the left soft key, then Hold & Answer. You can end the current call and answer the waiting call by selecting the Right soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the Right soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Options] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

Switching DTMF tones on during a call


To turn DTMF tones on during a call, press the left soft key, and then select DTMF on. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call

on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

In-call menu

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**.

After pressing the left soft key, selecting all will end all the active and onhold calls.

Menu Tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.

| | | |
|-------------------------|---------------------|--------------------------|
| 1. Profiles | 3. Tools | 5. Messages |
| 1.X.1 Activate | 3.1 Favourites | 5.1 New message |
| 1.X.2 Personalise | 3.2 Alarm clock | 5.2 Inbox |
| 1.X.3 Rename | 3.3 Calculator | 5.3 Drafts |
| | 3.4 Unit converter | 5.4 Outbox |
| | 3.5 World time | 5.5 Listen to voice mail |
| | 3.6 SIM-Menu | 5.6 Info message |
| | | 5.7 Templates |
| 2. Call register | 4. Organiser | 5.8 Settings |
| 2.1 Missed calls | 4.1 Contacts | |
| 2.2 Received calls | 4.2 Calendar | |
| 2.3 Dialed calls | 4.3 Memo | |
| 2.4 All calls | | |
| 2.5 Delete recent calls | | |
| 2.6 Call charges | | |
| 2.7 GPRS information | | |

Menu Tree

6. Multimedia

- 6.1 Camera
- 6.2 Video camera
- 6.3 Voice recorder
- 6.4 MP3
- 6.5 Photo album
- 6.6 Video album
- 6.7 Settings

7. Browser

- 7.1 Home
- 7.2 Bookmarks
- 7.3 Go to URL
- 7.4 Settings

8. My stuff

- 8.1 Games & apps
- 8.2 Videos
- 8.3 Photos
- 8.4 Music
- 8.5 Text
- 8.6 Images
- 8.7 Sounds
- 8.8 Others

9. Settings


- 9.1 Date & time
- 9.2 Display
- 9.3 Power saving
- 9.4 Language
- 9.5 Connectivity
- 9.6 Calling
- 9.7 Security
- 9.8 Memory status
- 9.9 Reset settings

Profiles


In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Loud** and **Headset**. Each profile can be personalised. Press the left soft key [Menu] and select **Profiles** using up/down navigation keys.

Activate (Menu 1.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key  OK key.
3. Then, select Activate.

Personalise (Menu 1.X.2)

Scroll to the desired profile in the Profile list. After pressing the left soft key  or the OK key, select **Personalise**. The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.

- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tone:** Allows you to set the slide tone.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.



Rename (Menu 1.X.3)

You can rename a profile and give it any name you choose to.

Profiles

Note

- ▶ **Vibrate only, Silent** and **Headset** profiles cannot be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the left soft key  or the OK key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key  [OK].

Call register

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

Missed calls

Menu 2.1

This option lets you view the last 10 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the Address Book
- ▶ Enter a new name for the number and save both in the Address Book
- ▶ Send a message to this number
- ▶ Delete the call from the list

Received calls

Menu 2.2

This option lets you view the last 10 incoming calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message to this number
- ▶ Delete the call from the list

Dialled calls

Menu 2.3

This option lets you view the last 20 outgoing calls (called or attempted).

You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message to this number
- ▶ Delete the call from the list

Call register

All calls

Menu 2.4

You can view all lists of outgoing or incoming calls.

Delete recent calls

Menu 2.5

Allows you to delete Missed calls and Received calls lists. You can delete Dialed calls and All calls lists at one time.

Call charges


Menu 2.6

Call duration (Menu 2.6.1)

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.

- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialed calls:** Length of the outgoing calls.
- ▶ **Reset all:** Allows you to reset the timers of all calls by pressing the left soft key  [Yes].

Call costs (Menu 2.6.2)

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to know your PIN2 code.

Settings (Menu 2.6.3) (SIM Dependent)

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

- ▶ **Auto display:** This network service allows you to automatically see the cost of your last calls. If set to **On**, you can see the last cost when the call is released.

GPRS information Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

Call duration (Menu 2.7.1)

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

Data volume (Menu 2.7.2)

You can check The **Sent**, **Received** or **All** data volumes and **Reset all**.

Tools

Favourites

Menu 3.1

This option allows you to add your own favourites to the list already provided. Once you create your own menu, you can access the desired function quickly in the idle screen by pressing the up navigation key.


Note


- ▶ The menu of SMS, MMS, Games & apps, Connectivity, Alarm clock, MP3 and Camera is already provided in your own favourites.

Alarm clock

Menu 3.2

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period: **Once**, **Mon.-Fri**, **Mon..Sat**, **Everyday**.
3. Select the alarm tone you want and press  [OK].





4. Edit the alarm name and press  [OK].

Calculator

Menu 3.3

This contains the standard functions such as +, -, x, ÷ : **Addition, Subtraction, Multiplication, and Division.**

Furthermore, you can use the various function of calculator such as +/-, **sin, cos, tan, log, IN, exp, sqrt.**






1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  key to view the result.
5. To input the decimal number, press  key. If you press  key, you can enter ().
6. To end **Calculator**, press the right soft key  [Back].

Unit converter

Menu 3.4

This converts any measurement into a unit you want. There are 9 types that can be converted into units:

Currency, Area, Length, Weight, Temperature, Volume, Velocity, Shoes and Clothes.

1. You can select one of nine unit types by pressing  [OK] key.
2. Select the unit you want to convert by pressing  and . It's impossible to input "-" symbol in unit converter.
3. Select the standard value by using  , .

World time

Menu 3.5

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key and select **Set**.

SIM-Menu

MENU 3.6

This menu depends on SIM and the network services.

Note


- ▶ In case the SIM card support SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.
- ▶ In case the SIM card does not support SAT services, this menu will be Profiles.

Organiser

Contacts


Menu 4.1

Search contacts (Menu 4.1.1)

1. Select **Search** by pressing the right soft key  [Contacts] or [OK].
2. Enter the name that you want to search.

Note

- ▶ Instant searching is available by inputting the initial letter of the name or number you want to search.

3. If you want to edit, delete or copy an entry, select the left soft key  [Options]. The following menu will be displayed.
 - ▶ **Edit:** You can edit the name, number, group, character and picture by using the navigation key.
 - ▶ **Write messages:** After you have found the number you want, you can send a text/multimedia message to the selected number.

- ▶ **Send via Bluetooth:** You can send the data of phone book to devices which is compatible with Bluetooth through Bluetooth.
- ▶ **Copy to handset:** You can copy an entry from SIM to phone or from phone to SIM.
- ▶ **Assign speed dial:** You can assign the entry as a speed dial.
- ▶ **View caller groups:** For further details see (Menu 4.1.3).
- ▶ **Delete:** You can delete an entry.

Note

- ▶ To use the Photo Caller ID feature, contacts must exist within the Phone Book and photos must be taken in 72x72 resolution. For more information about associating a photo to a contact please refer to the Camera section.








Add new (Menu 4.1.2)

You can add a phonebook entry by using this function. Phone memory capacity is 1000

entries. SIM card memory capacity depends on the mobile service provider. You can also save 40 characters of name in The Phone memory, and save characters in the SIM card. The number of characters is a SIM dependent feature.

Note

- ▶ Maximum stored name and number length depends on SIM-card type.



1. Select **Add new** by pressing the left soft key  [OK] or [OK].
2. Select the memory you want to save: **SIM** or **Phone**. If you set to Phone, you need to select which number you want as a main number.
 - a. Press  [OK] to input a name.
 - b. Press  [Save], then you can input a number.
 - c. You can set a group for the entry by pressing , .
 - d. You can set a picture for the entry by pressing , .

Caller groups (Menu 4.1.3)



You can add up to 20 members per group, with up to a maximum of 7 groups in total.

- ▶ **Member list:** Shows the group members you have selected.
- ▶ **Group ring tone:** Allows you to specify ring tone for the group members' call.
- ▶ **Group icon:** Allows you to select the icon dependent on Group.
- ▶ **Add member:** You can add group members. Each group should not exceed 20 members.
- ▶ **Remove member:** You can remove the member from the Group member list. But the name and the number will remain in the phonebook.
- ▶ **Rename:** You can change a group name.
- ▶ **Remove all:** Allows you to delete all the members in the group.

Speed dial (Menu 4.1.4)

Assign contacts to any of the keys  to .


You can then call that contact by pressing the corresponding number key.

1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to **Speed dial**, then press the left soft key  [OK].
3. If you want to add speed dial, select (**empty**). Then, you can search the name in phonebook.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message to this number.





Own number (Menu 4.1.5) (Sim dependent)

You can save and check your own number in SIM card.

My business card (Menu 4.1.6)

This option allows you to create your own business card featuring Name and a mobile phone number. To create a new business card, press the left soft key  [Add] and enter the information into the fields.



Settings (Menu 4.1.7)

1. Press the right soft  [Contacts] in standby mode.
 2. Scroll to **Settings**, then press the left soft key  [OK].
- ▶ **Default memory**
Scroll to highlight **Default memory**, and then press the left soft key  [OK].
 - If you select **Always ask**, when adding an entry, the phone will ask where to store it.
 - If you select **SIM** or **Handset**, the phone will store an entry to the SIM or phone.
 - ▶ **View options**
Scroll to highlight **View options**, and then press the left soft key  [OK].

- **Name only:** Set the phonebook list by displaying the name only.
- **Name & number:** Set the phonebook list by displaying the name and number.
- **With pictures:** Set the phonebook list with the information and picture of contact.

▶ **Copy/Move all**





You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to **Copy/Move all**, and then press the left soft key  [OK] to enter this menu.
 - **SIM to Handset:** You can copy/move the entries from SIM Card to Phone memory.
 - **Handset to SIM:** You can copy/move the entries from Phone memory to SIM Card.

- ▶ **Memory in use:** This feature allows you to see how many entries are in use, or free in your phonebook.

▶ **Clear contacts**

You can delete all the entries in the SIM and Phone. This function requires the Security code.

1. Scroll to highlight Clear contacts, and then press the left soft key  [OK].
2. Highlight the memory you wish to erase, and then press the left soft key  [OK].
3. Enter the security code and press the left soft key  [OK] or the right soft key  [Back].

▶ **Service dial number**

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).









Organiser


Calendar

Menu 4.2


When you enter this menu a calendar will be displayed. The month and year are shown at the top of the screen. Whenever you change the date under the Settings menu, the calendar will update automatically. The current date will be highlighted in green and any schedule or memos will be indicated with a red triangle at the top left hand corner of the corresponding square. An audible alarm can be set for memo's and reminders.

To change the day, month and year.



| Key | Description | Key | Description |
|---|-------------|---|-------------|
|   | Yearly |   | Weekly |
|   | Monthly |   | Daily |



In calendar mode, press the left soft key  [Options] as follows;

Add new (Menu 4.2.1)

Allows you to add a new schedule and memo for the chosen day. You can store up to 20 notes. Input the subject and then press left soft key  [OK]. You enter the appropriate information in the following section; **Time**, **Repeat** and **Alarm**.

View daily schedules (Menu 4.2.2)

View all schedules and memo for the chosen day. Use   to browse through the note lists. If you set the alarm for a note, the alarm icon is displayed.

If you want to view the note in detail, press the left soft key  [OK]. Press the left soft key  [Options] to delete or edit the note you have selected.

Delete past (Menu 4.2.3)

You can delete the past schedule that you have already been notified of.

Delete all (Menu 4.2.4)

You can delete all the notes.

Go to date (Menu 4.2.5)




You can go the chosen date directly.

Set alarm tone (Menu 4.2.6)


You can set the alarm tone of each chosen date.

Memo

Menu 4.3

1. Select the **Memo** by pressing the left soft key  [OK].
2. If the entry is empty, press the left soft key  [Write].
3. Input the memo and then press the left soft key  [OK].

Note

- ▶ If you want to change the text input mode, press the  in order.

Messages


New message

Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.


Write text message (Menu 5.1.1)

You can write and edit text message, checking the number of message pages.


1. Enter the **New messages** menu by pressing the left soft key  [OK].
2. If you want to write a new message, select **Write text message**.
3. To make text input easier, use T9.
4. Press [Insert] to attach the following:

Insert

- ▶ **Images:** You can insert the Default graphics or graphics in My pictures that are available for short messages.
- ▶ **Sounds:** You can insert sounds that are available for short messages.
- ▶ **Text templates:** You can use Text templates already set in the phone.

- ▶ **Contacts:** You can add phone numbers or e-mail addresses in the address book.
 - ▶ **Symbol:** You can add special characters.
 - ▶ **My business card:** You can add your Business card to the message.
5. After you complete the message, to select the required option, press the left soft key  [Options].

Options

- ▶ **Send:** Sends text messages.
 1. Enter numbers of recipient.
 2. Press  key to add more recipients.
 3. You can add phone numbers in the address book.
 4. Once the numbers have been entered, press the left soft key  to send the message. All messages will automatically be saved in the outbox folder, even after a sending failure.
- ▶ **Save to drafts:** Stores messages in the Drafts folder.
- ▶ **Font & Alignment:** You can select the **Size** and **Style** of font, and the **Alignment** of text.

- ▶ **Colour:** You can also set the **Colour** of the text (foreground) and the background.
- ▶ **Add T9 dictionary:** You can add your own words. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
- ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** If you press Exit whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.


Note

- ▶ This phone supports EMS release 5, so is available to send colour pictures, sounds, text styles, etc.. If the other parties handsets do not support such options, the pictures, sounds or texts sent may not be displayed correctly on their phones.

Write multimedia message

(Menu 5.1.2)

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

1. Enter the **New message** menu by pressing the left soft key  [OK].
2. If you want to write a new message, select **Write multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add Image, Sound, Contacts, Symbol, New photo, New sound, Text templates, My business card.

Maximum available file size, that can be inserted to MMS-message, is 1 00 kb.

Messages

Options

- ▶ **Send:** You can send multimedia messages to multiple recipients, as well as save it to send at a later time.

Note

- ▶ All messages will be automatically saved in the outbox folder, even after a sending failure.

- ▶ **Preview:** You can preview multimedia messages you have created.
- ▶ **Save:** You can save multimedia messages **To drafts** or **As template**.
- ▶ **Edit subject:** Allows you to modify the multimedia message you have chosen.
- ▶ **Add slide:** You can add a slide before or after current slide.
- ▶ **Move to slide:** You can move to the previous or the next slide.
- ▶ **Delete slide:** You can delete current folders.

▶ Set slide format

- **Set timer:** You can set a timer for slide, text, picture and sound.
- **Swap text and picture:** You can switch the position of picture and text of the message.
- ▶ **Remove media:** You can remove a picture or sound in the slide. This option can be shown only when any media file has been added.
- ▶ **Add T9 dictionary:** You can add your own words. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
- ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** Will take you back to the Message menu.








Note

- ▶ When creating a multimedia message, if you upload a picture (50K) you may find that whilst the picture is loading you will not be able to carry out any other actions until the picture has completed loading.

Inbox

Menu 5.2

You will be alerted when you have received a message. They will be stored in the Inbox. In the Inbox, you can identify each message by icons. For detail, see the icon directive.


| Icon | Icon directive |
|--|-----------------------------|
|  | Multimedia message |
|  | Short message |
|  | SIM message |
|  | Read multimedia message |
|  | Read text message |
|  | Push message |
|  | Notified multimedia message |

If the phone shows 'No space for SIM message', you only have to delete the SIM messages from the Inbox. If the phone displays 'No space for message', you will then need to delete messages, media or applications to free up space.

*** SIM message**

SIM message means that the message is exceptionally stored in the SIM card. You can move this message to the phone.

When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it.

To read a message, select one of the messages by pressing the left soft key  [Options].

- ▶ **View:** You can view the received messages.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Delete:** You can delete the current message.
- ▶ **Return call:** You can call back the sender.

Messages

- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Delete all:** You can delete all messages.

Drafts

Menu 5.3

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.







The following options are available.

- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Allows you to modify the chosen message.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** To view the information of the message.
- ▶ **Delete all:** Deletes all of the messages in the slide.

Outbox



Menu 5.4

This menu allows you to view the messages which you have sent, those that are currently sending or messages that have failed sending previously.

| Icon | Icon directive |
|---|------------------------|
|  | MMS Unsent |
|  | MMS sent |
|  | MMS delivery confirmed |
|  | SMS unsent |
|  | SMS sent |
|  | SMS delivery confirmed |

- ▶ **View:** You can view the message.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Delete:** You can delete the message.
- ▶ **Information:** You can check the information of each message.
- ▶ **Delete all:** You can delete all the messages in the outbox.

Listen to voice mail Menu 5.5

Once this menu has been selected, simply press the left soft key  [OK] to listen to voice mail. You can also hold down the  key in standby mode to listen to voice mail.




Note

- ▶ When you receive a voice mail, your phone will display an icon and you will hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.


Info message Menu 5.6 (Dependent to network and subscription)

Info service messages are text messages delivered by the network to your handset. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. When you receive an info service message, you will see a popup message show you that or the info service message is directly displayed. To view the message again follow the sequence shown below;

Read (Menu 5.6.1)

1. When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling ,  or  [OK].
2. The message will be shown until another message is selected.

Topics (Menu 5.6.2) (Dependent to network and subscription)

- ▶ **Add new:** You can add Info service message numbers in the Phone memory with its nickname.
- ▶ **View list:** You can see Info service message numbers which you have added. If you press  [Options], you can edit and delete info message categories which you have added.
- ▶ **Active list:** You can select info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates

Menu 5.7

Text templates (Menu 5.7.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I am on the way.**
- **Top urgent. Please contact.**
- **I love you.**

Multimedia templates (Menu 5.7.2)

After you have saved a new template, you can use the following options.

- ▶ **View:** You can see multimedia templates.
- ▶ **Delete:** You can delete multimedia templates.
- ▶ **Add new:** Allows you to add new multimedia templates.
- ▶ **Write messages:** You can write and send multimedia messages.

- ▶ **Edit:** You can edit multimedia templates.
- ▶ **Delete all:** Allows you to delete all multimedia messages.

Settings

Menu 5.8

Text message (Menu 5.8.1)

▶ **Message types:**

Text, Voice, Fax, Natl. paging, X.400, Email, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to **Yes**, you can check whether your message is sent successfully.

- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **SMS centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.

Multimedia message (Menu 5.8.2)

- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Subject:** You can enter multimedia messages subject when this menu is on.
- ▶ **Delivery report:** If it is set to **Yes** in this menu, you can check whether your message is sent successfully.

Messages

- ▶ **Auto retrieve:** If you select **On**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification. If you select **Home network only**, you receive multimedia messages depends on Homenetwork.
- ▶ **Network settings:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message types**
 - Personal:** Personal message.
 - Advertisements:** Commercial message.
 - Information:** Necessary information.

Voice mailbox number (Menu 5.8.3)

You can receive voicemail if your network service provider supports this feature. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

- ▶ **Home:** You can listen to voice mails by selecting Home.
- ▶ **Roaming:** Even when you are abroad, you can listen to voice mails if a roaming service is supported.

Info message (Menu 5.8.4)

▶ Receive

Yes: If you select this menu, your phone will receive Info service messages.

No: If you select this menu, your phone will not receive Info service messages any more.

▶ Alert

Yes: Your phone will beep when you have received Info service message numbers.

No: Your phone will not beep even though you have received info service messages.

▶ Languages

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

Push message (Menu 5.8.5)

You can set the option whether you will receive the message or not.

Multimedia

Camera

Menu 6.1

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via Multimedia msg.

Press the left soft key  to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.
- ▶ **Quality:** Determines the quality of an image.
- ▶ **White Balance :** Allows you to change the settings according to the environment.
- ▶ **Album:** Shows the still images taken.
- ▶ **Exit:** To exit the Camera.
- ▶ **Mode:** Determines whether to take a single , multishot or frame shot photo.
- ▶ **Effect:** Determines the special effect to the picture.

- ▶ **Flash:** Determines the flash operation.
- ▶ **Zoom:** Determines the zoom rate.

Note

- ▶ Frame shots are only available with the pixel resolution set to 176 x 220.
- ▶ Multi shots are only available when the pixel resolution is set to 320 x 240 or 640 x 480.
- ▶ To use the Photo Caller ID feature, you must take photos you wish to associate with your contacts in 72x72 resolution.
- ▶ Once the photo has been taken and saved, go to **Contacts** and select the contact you wish to associate the photo to or select **Add new** to create a new contact (please note that a photo can only be associated with a contact stored in the phone's memory and not on the SIM).
- ▶ Select **Edit**. Unless you wish to edit the name, press OK and then use the navigation keys to highlight the picture tab.

Note

- ▶ Use the ◀, ▶ keys to scroll through the photos (please note that only pictures taken in 72 × 72 resolution will be listed here).
- ▶ Once you have selected the photo you wish to use press the left soft key to save this in the contacts profile.
- ▶ The photo will be shown when this particular contact calls you (as long as the contact does not have their telephone number set to hidden).

Video camera

Menu 6.2

This application enables you to record a video clip. You can play and watch a saved video file while using this function.

Press the left soft key  to display the following popup menu items.

- ▶ **Brightness:** Determines the brightness.
- ▶ **Size:** Determines the size of an image.
- ▶ **Timer:** Determines the delay time.

- ▶ **Quality:** Determines the quality of a video clip.
- ▶ **White Balance :** Allows you to change the settings according to the environment.
- ▶ **Record Time:** Determines the recording time.
- ▶ **Exit:** To exit the Video camera.
- ▶ **Effect:** Determines the special effect to the video clip.
- ▶ **Flash:** Determines the flash operation.
- ▶ **Zoom:** Determines the zoom rate.

Voice recorder



Menu 6.3

With the voice memo feature you can record up to 20 voice messages and each memo can be up to 20 seconds long.

Record (Menu 6.3.1)

You can record a voice memo in the Voice recorder menu.

Multimedia

1. Once recording has started, the message Recording and the remaining time is displayed.
2. If you want to finish recording, press the left soft key  [Save].
3. Key in Voice memo title, press the left soft key  [OK].

View list (Menu 6.3.2)

The list of voice memos are displayed. You can playback and delete the recorded voice memo. The following [Options] menus are available

MP3

Menu 6.4

The KG800 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone memory using a compatible headset or via the internal loudspeaker.

Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- AAC: ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- AAC+: V1 : (Bit rate 16-128Kbps)
V2 : (Bit rate 16-48Kbps)
(Sampling frequency from 8KHz to 48KHz)
- MP4, M4A: Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.
- WMA: Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.

Note

- ▶ KG800 doesn't support the variable rate of MP3 and AAC file. Therefore, you can't change the file from VBR MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable (supplied in the same package), this will be displayed as a removable disk through Windows Explorer. If you are using Win98 SE, you will have to install the Mass storage driver for Windows 98 on CD-ROM.

Note

- ▶ You should copy MP3 to my media\Music folder. If you copy to another folder, you will not be able to view the MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

This menu allows you to view the whole play list. You can move through the tracks by pressing the navigation key. In addition, once you have selected the track, you can delete the file or view its information via the options menu.

1. **Go to MP3 player** : Move to MP3 player.

Press the left soft key  [Options] to access the following menus.

- ▶ **View play list**: You can view the play list on listening to the music.
- ▶ **Area repeat**: The special area part of the current music is repeated when you select ON of the menu.
- ▶ **Set as ring tone**: This menu allows to set the MP3 file as a ring tone. You can also set it as a ring tone in Profile.
- ▶ **Setting**
 - **Equalizer**
This menu helps you to adjust to a variety of environments when listening to music. This phone supports four preset menus. When you enter this menu, you can view current value of equalizer.

Multimedia

- Playmode

This menu allows to set the play mode.

- Set shuffle

You can listen to your MP3 music randomly.

- Visual effect

You can select the visual effect menus: Rainbow, Basic and Blue. This menu allows to change the background of main LCD and sub LCD on playing MP3 file.

2. **Delete:** Deletes the file selected.
3. **View details:** To view the information of the file you selected.
4. **Delete all:** Deletes all of the files.

Note

- ▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Photo album

Menu 6.5

You can view and send a picture. In addition, you can set the picture as a wallpaper.

- ▶ **Multi view:** You can view the maximum of 9 thumbnails in a screen.
- ▶ **Send via Bluetooth:** You can send a picture by Bluetooth.
- ▶ **Write multimedia message:** You can write and edit multimedia messages, checking message size.
- ▶ **Set as wallpaper:** You can set a picture as a wallpaper.
- ▶ **Slide show:** You can view the pictures in a slide show.
- ▶ **Delete:** You can delete a picture.
- ▶ **Edit title:** You can edit the title of picture.
- ▶ **Information:** Displays information about the saved picture.

Note

- ▶ The Photo Album will only display pictures taken by the handsets camera.

Video album

Menu 6.6

You can view videos which have been saved in the memory.

- ▶ **Play:** You can play the video file when pressing the OK key or selecting Play menu of the Options menu.
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth.
- ▶ **Rename:** Change the file name of selected file.
- ▶ **Delete:** Delete a file.
- ▶ **Delete all:** Delete all files in the list
- ▶ **Information:** Show the file information.

Settings

Menu 6.7

Camera (Menu 6.7.1)

- ▶ **Auto save:** If you set this feature to On, the images will be saved automatically without displaying the menu bar to save.
- ▶ **Delete all photos:** You can delete all the photos which have been saved in the memory.


Video camera (Menu 6.7.2)

- ▶ **Delete all videos:** Allows you to delete all the videos which have been saved in the memory.

Browser

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.




Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the () key. The phone will return to the idle menu.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

| Key | Description |
|---|--|
|  | Scrolls each line of the content area |
|  | Returns to the previous page |
|  | Selects options and confirmations and confirms actions |

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

Note

- ▶ The WAP browser menus may vary, depending on your browser version.

Home

Menu 7.1


Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks

Menu 7.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark

1. Press the left soft key  [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **Add new:** Select this to create a new bookmark.

- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **Delete:** Deletes the selected bookmark.
- ▶ **Delete all:** Deletes all the bookmarks.

Go to URL

Menu 7.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

Settings

Menu 7.4

You can set the profile, cache, cookie and security related to internet service.

Profiles (Menu 7.4.1)

A profile is the network information used to connect to the Internet. There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Browser

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.

- **Homepage:** This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type http:// at the front of each URL as the WAP Browser will automatically add it.

- **Bearer:** You can set the bearer data service. 1 Data/2 GPRS

- **Data settings:** Appears only if you select Data Settings as a Bearer/service.

Dial number: Enter the telephone number to dial to access your WAP gateway.

User ID: The users identity for your dial-up server (and NOT the WAP gateway).

Password: The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type: Select the type of data call : Analogue of Digital (ISDN).

Linger time: You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

APN: Input the APN of the GPRS.

User ID: The users identify for your APN server.

Password: The password required by your APN server.

- **Proxy settings**

Proxy: Activates or cancels proxy.

IP address: Input the IP address of the Proxy server you access.

Port number: Input the Proxy Port.

- **DNS settings**

Primary server: Input the IP address of the primary DNS server you access.

Secondary server: Input the IP address of the secondary DNS server you access.

- ▶ **Rename:** You can change the profile name.
- ▶ **Add new:** You can add a new profile.
- ▶ **Delete:** Deletes the selected profile from the list.

Cache (Menu 7.4.2)

The information or services you have accessed are saved in the cache memory of the phone.

Cookie (Menu 7.4.3)

The information or services you have accessed are saved in the cache memory of the phone.

Clear cache (Menu 7.4.4)

Removes all context saved in cache.

Note

- ▶ A cache is a buffer memory, which is used to save data temporarily.

Clear cookie (Menu 7.4.5)

Removes all context saved in cookie.

Security (Menu 7.4.6)

A list of the available certification is shown.


- ▶ **Authority:** You can see the list of authority certificates that have been stored in your phone.
- ▶ **Personal:** You can see the list of personal certificates that have been stored in your phone.

My stuff

Games & apps

Menu 8.1

Games & apps (Menu 8.1.1)

- **Default Games:** In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option. The downloaded applications are organised in folders. Press the left soft key  [OK] to open the selected slide or launch the selected midlet.

After selecting a folder, press [Options] and then sub menus available to several options are displayed.

- ▶ **Open:** You can see the stored games.
- ▶ **New folder:** Create a new slide.

Java™, is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers, Java MIDlet can be downloaded using a WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **Games & Apps** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Profiles (Menu 8.1.2)

A profile is the network information used to connect to the Internet.

If you want to see the details of a profile, please refer to Menu 7.4.1.

Note

- ▶ The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.
- ▶ While being based on a standard language (J2ME), not all Java applications are compatible with all handsets on sale insofar as specific libraries may be used for a telephone model. The software may be blocked or switch itself on when Java applications not specifically developed for the phone this manual refers to are downloaded, making it necessary to “restart” the handset. We would like to point out that these problems are caused by incompatible applications and are not a product fault.

CAUTION!

Only J2ME(Java 2 Micro Edition) based programs will run in a phone environment. The J2SE(Java 2 Standard Edition) based programs will only run in a PC environment.

New Fantastic LG There is Mass Storage function in the KG800. if you connect the USB cable, you can use the phone as a Removable Disk.

You can download MP3 files, and photos, video, txt files etc. this gives you fast access from PC to Phone, by just connecting the USB cable.

This function does not require the installation of additional software.

1. Whilst the phone is displaying the standby screen, connect the phone to the PC using the supplied USB cable. The PC should recognise the handset within a few seconds.
2. The phone will display « USB » on the screen.
3. The phone will be identified as « Removable disk » in My Computer. The PC should then treat the KG800 as a standard drive allowing you to place files to and from the handset’s memory. You can either use Window’s drag and drop or copy and paste methods to transfer content.

My stuff

4. Double click on « Removable disk » and open. A folder called My media will be displayed. Within that folder there are a further 5 folders. Do not disconnect the phone whilst a file transfer is in progress, doing so may damage the memory and corrupt the file.
5. When you want to disconnect the phone from your PC, use Windows to safely remove the hardware and then disconnect the USB cable from the handset.
 - ▶ If you receive a call whilst in mass storage mode, the call will be rejected. Once the handset is disconnected, the KG800 will display information about any calls missed.

My media

In the My media folder you will find the following 5 folders; Music, Others, Photos, Text and Videos.

Do not change the names of these folders, doing so will cause content stored in them to not be seen by the handset.

Music

- ▶ You can store music files in this folder.
- ▶ The supported formats are: MP3,AAC,AAC+,AAC++, WMA,MP4 (audio),Wav.
- ▶ The files in this folder can be played using the MP3 player and Playlist features of the phone.
- ▶ If you download an MP3 file to a different folder, it will be not be possible for the phone to locate and play the file.
- ▶ Do not create subfolders here because the MP3 files contained in that folder will not be found and, therefore, will unable to be played by the music player.
- ▶ To set an MP3 file as a ringtone then please do the following on the handset: options>Go to MP3 player>options>set as ringtone.

Others

- ▶ Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.
- ▶ The handset can preview JPG (Max 460K), GIF (Max 100K).
- ▶ You can set an image file as wallpaper as long as it does not exceed 30k in size, for other formats please use the PC Suite.

Photos

- ▶ This folder is reserved for pictures taken using the phone's digital camera.
- ▶ Even though photos can be uploaded to this folder from your PC, they will not be available on the phone's photo album or My photos folder. Therefore, we recommend that no photos are uploaded to this folder.

Text

- ▶ This folder supports .txt files. If you place non .txt files here then the handset will not display them.

Videos

- ▶ You can download videos taken with the phone's digital camera onto the PC and upload new videos onto the phone.
- ▶ This folder supports the 3GP file format.
- ▶ You can upload files of any size until the memory is full.
- ▶ Files stored in this folder can be accessed by doing the following on the handset: Menu>Multimedia>Video album.

Videos

Menu 8.2

Show the list of 3GP and MP4 files .

- ▶ **Play:** You can play the video file by pressing the OK key or selecting Play from the Option menu.
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth.
- ▶ **Rename:** change the file name of the selected file. The maximum length of characters is 200. And You can not change the extension of file.

WARNING!

*The following characters, \ / : * ? " < > | can not be used.*

- ▶ **Delete:** Delete a file.
- ▶ **Delete all:** Deletes all the files in the list
- ▶ **Information:** Shows the file information.

Photos

Menu 8.3

Shows the list of JPG files.

- ▶ **View:** You can see the JPG file by pressing the OK key or selecting View from the Option menu.

Note

- ▶ The maximum size of JPG file you can see is 460Kbytes.

- ▶ **Send via multimedia message:** You can write and send multimedia messages.
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth.

Note

- ▶ To setup .JPG (.JPEG) file from Photo slide as wallpaper, go to Menu-Multimedia-Photo album and then please select Set as wallpaper in Options menu.

- ▶ **Rename:** change the file name of selected file. The maximum length of characters is 200. And You can not change the extension of file.
- ▶ **Delete:** Delete a file.
- ▶ **Delete all:** Deletes all the files in the list
- ▶ **Information:** Shows the file information.

Music

Menu 8.4

Shows the list of MP3, MP4, AAC, M4A and WMA files.

- ▶ **Play:** You can play the MP3 file by pressing the OK key or selecting Play from the Option menu.
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth
- ▶ **Rename:** change the file name of selected file. The maximum length of characters is 100. And You can not change the extension of file.
- ▶ **Delete:** Delete a file.

- ▶ **Delete all:** Deletes all files in the list
- ▶ **Information:** Shows the file information.

Text

Menu 8.5

Show the list of TXT files.

- ▶ **View:** You can see the TXT file by pressing the OK key or selecting View from the Option menu.


Note

- ▶ The maximum size of TXT file you can see is 460Kbytes.

- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth.
- ▶ **Rename:** change the file name of selected file. The maximum length of characters is 100. And You can not change the extension of file.
- ▶ **Delete:** Delete a file.
- ▶ **Delete all:** Delete all files in the list
- ▶ **Information:** Show the file information.

Images

Menu 8.6

After selecting an image, press the left key  [View] and then you can check the options as follow:

- ▶ **Set as wallpaper:** Currently selected image can be set as a wallpaper.
- ▶ **Write messages:** The images downloaded from the network can be sent by Multimedia. Maximum message size is 100 kb for MMS message.
- ▶ **Send via Bluetooth:** The sound downloaded from network can be sent by Bluetooth.

Sounds

Menu 8.7

After selecting a sound, press the left key [Options].

You can check the options as follow:

- ▶ **Set as ringtone:** Currently selected sound can be set as a ringtone.
- ▶ **Write messages:** The sound downloaded from network can be sent by SMS or MMS. Maximum MMS message is 100 kb.
- ▶ **Send via Bluetooth:** The sound downloaded from network can be sent by Bluetooth.

Others

Menu 8.8

Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.

- ▶ **View:** You can view a file if it is one of the following types; JPG, GIF, WBMP, PNG and TXT. The handset can preview JPG (Max 460K), GIF (Max 100K).
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth

Settings

Date & time

Menu 9.1

You can set functions relating to the date and time.

Date (Menu 9.1.1)

Set date

You can enter the current date.

Date format

You can set the Date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD.
(D: Day / M: Month / Y: Year)

Time (Menu 9.1.2)

Set time

You can enter the current time.

Time format



Your can set the time format between 24-hour and 12-hour.

Display


MENU 9.2

Wallpaper (Menu 9.2.1)

You can select the background pictures in standby mode.

- ▶ **Default:** You can select a picture or an animation of wallpaper by pressing  or .
- ▶ **My folder:** You can select a picture or an animation as wallpaper.

Menu colour (Menu 9.2.2)

Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the left soft key  [OK].

Standby text (Menu 9.2.3)

If you select **On**, you can edit the text which is displayed in standby mode.

Backlight (Menu 9.2.4)

You can set the light-up duration of the display.

Brightness (Menu 9.2.5)

The screen brightness can be adjusted from 40% to 100%.

Network name (Menu 9.2.6)

If this function is activated, network name will be displayed on main LCD.

Home screen shortcut (Menu 9.2.7)

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window.

Dial font colour (Menu 9.2.8)

You can set the colour of displayed number when press the number keys in idle state for call connection.

Power saving

Menu 9.3

This function saves battery power by keeping backlight brightness to max 40%.

Language

Menu 9.4

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Connectivity

Menu 9.5

Bluetooth (Menu 9.5.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange data only within the phonebook.
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
 - **MP3 (.mp3, mp4, aac, m4a, wma):** Music folder.
 - **Video (.3GP, MP4):** video folder.
 - **Phonebook contacts (.VCF):** Phonebook.
 - **Text (.txt):** Text folder.
 - **Other files (*.*):** File storage folder.
- ▶ The handset normally operates with WIDCOMM driver(version 1.4.3.4) or WIDCOMM driver(version 1.4.2.10). And it does not support the LG Contents Bank with Bluetooth.

Set Bluetooth

You can activate or cancel the Bluetooth function.

Paired devices/Handsfree devices

You can view all devices which your KG800 is already paired to.

If you have entered Paired devices or Handsfree devices, you will see the following options in both those menus.

- ▶ **Connect/Disconnect:** Allows you to connect to your paired Bluetooth devices.
- ▶ **Add new:** Allows you to search for new Bluetooth devices and add them to your phone's list of paired devices. When you select **Add new** your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the right soft key [Stop]. Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode. The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the

manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

- ▶ **Assign name:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- ▶ **Set as authorised/Set as unauthorised:** Allows you to set an authorised connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as authorised will mean the headset will automatically connect to the handset each time the headset is powered on.
- ▶ **All services:** Allows you to view all services which are supported by a Bluetooth device.
- ▶ **Delete:** Allows you to delete a paired Bluetooth device.

- ▶ **Delete all:** Allows you to delete all paired Bluetooth devices.

Settings

▶ My handset's visibility

This indicates whether or not your handset will be visible to other Bluetooth devices.

▶ My handset's name

You can set the name of your Bluetooth device. The default name is LG KG800.

Supported services

Displays a list of Bluetooth services the handset supports.

- ▶ Headset
- ▶ Handsfree kit
- ▶ File transfer
- ▶ Image printing
- ▶ Dial-up networking
- ▶ Business card transfer
- ▶ Browsing other device
- ▶ Serial Port Profile

Settings

Modem (Menu 9.5.2)

You can access the network services through the Modem. If you want to use the LG PC Sync, Contents bank or Internet Cube, you should access the menu and activate the modem and then plug in the USB cable.

Network (Menu 9.5.3)

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to

Automatic.

Network selection

You can select a network type.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected "Automatic", the phone will be set to "Automatic" even though the power is off and on.

- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

Band selection

- ▶ **EGSM/DCS:** Depending on Network situation, you can select EGSM/DCS.
- ▶ **PCS only:** Depending on Network situation, you can select PCS only.

GPRS attach (Menu 9.5.4)

You can set GPRS service depending on various situations.

Switch on

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

When needed

If you select this menu, the GPRS connection is established when you connect a WAP service and closed when you end the WAP connection.

Calling

Menu 9.6

Call divert (Menu 9.6.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

▶ All voice calls

Diverts voice calls unconditionally.

▶ If busy

Diverts voice calls when the phone is in use.

▶ If no reply

Diverts voice calls which you do not answer.

▶ If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

▶ All data calls

Diverts to a number with a PC connection unconditionally.

Settings

▶ All fax calls

Diverts to a number with a fax connection unconditionally.

▶ Cancel all

Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

• Activate

Activate the corresponding service.

To voice mail centre

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

To other number

Inputs the number for diverting.

To favourite number

You can check back to last five diverted numbers.

• Cancel

Deactivate the corresponding service.

• View status


View the status of the corresponding service.

Answer mode (Menu 9.6.2)


▶ Slide up

If you select this menu, you can receive an incoming call when you open the slide.

▶ Any key

If you select this menu, you can receive a call by pressing any key except  [End] key.

▶ Send key only

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number (Menu 9.6.3) (network and subscription dependent)

▶ Set by network

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

▶ **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

▶ **Off**

Your phone number will not be shown.

Call waiting (Menu 9.6.4) (network dependent)

▶ **Activate**

If you select Activate, you can accept a waiting (receiving) call.

▶ **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

▶ **View status**

Shows the status of Call waiting.

Minute minder (Menu 9.6.5)

If you select On, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu 9.6.6)

▶ **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

▶ **Off**

Your phone will not make any attempts to redial when the original call has not connected.


Security

Menu 9.7

PIN code request (Menu 9.7.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].
2. Set **Enable/Disable**

Settings

3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Handset lock (Menu 9.7.2)

You can use a security code to avoid unauthorised use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **When switch on**.

If you set phone lock to **When SIM changed**, your phone will request security code only when you change your SIM card.

Call barring (Menu 9.7.3)

The Call barring service prevents your phone from making or receiving certain category of

calls. This function requires the call barring password. You can view the following submenus.

▶ All outgoing calls

The barring service for all outgoing calls.

▶ Outgoing international

The barring service for all outgoing international calls.

▶ Outgoing international when roaming

The barring service for all international outgoing calls except home network.

▶ All incoming

The barring service for all incoming calls.

▶ Incoming when roaming

The barring service for all incoming calls when roaming.

▶ Cancel all

You can cancel all barring services.

▶ Change password

You can change the password for Call Barring Service.

The submenus:• **Activate**

Allows to request the network to set call restriction on.

• **Cancel**

Set the selected call restriction off.

• **View status**

View the status whether the calls are barred or not.

Fixed dial number (Menu 9.7.4) (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed dial number.

▶ **Enable**

You can restrict your outgoing calls to selected phone numbers.

▶ **Disable**


You can cancel fixed dialling function.

▶ **Number list**

You can view the number list saved as Fixed dial number.

Change codes (Menu 9.7.5)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorised person. You can change the access codes: **Security code**, **PIN code**, **PIN2 code**.

1. If you want to change the Security code/PIN1 / PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN1 /PIN2 code and verify them.

Touchpad lock (Menu 9.7.6)

Sets whether to use the touch pad when closing a slide.

On: It is impossible to activate the touch pad with slide closed. (You can use the touch pad only when slide opens.)

Off: It is possible to activate the touch pad using the Volume key even with slide closed.

Settings

Memory status

Menu 9.8

You can check free space and memory usage of each repository, Internal memory, Multimedia memory. You can go to each repository menu.

Reset settings

Menu 9.9

You can initialise all factory defaults. You will need the Security code to activate this function.

- ▶ **Restore default settings:** Allows you to restore the phone back to its default settings.
- ▶ **Clear multimedia memory:** Allows you to format the multimedia memory and create a default directory.

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Standard Battery



Data cable/CD

You can connect your phone to PC to exchange the data between them.



Hands free ear-microphone and music player controller combo



Stereo headset

Controller: Answer & End button, music player control, volume control, Hold button and microphone.

After connecting the headset and the controller, plug the end of controller into the headset jack on the right side of the phone.

Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions; please check with our regional service company or agent for further information.

Technical Data

General

Product name: KG800

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max: +55°C

Min: -10°C

"LG Service Center" by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Fri and Sat 2nd, 4th 08:00 - 17:00

Call center : 0-2878-5757

"Easy Fix Service Center" by IEC Public Co. Ltd.

390 IEC Complex, Ramkhamhank Rd., Huamark, Bangkok, Bangkok 10240

Working day : Mon-Fri 08:00 - 19:00 Tel. 0-2729-9400

Call center : 0-2729-9400

"LOXLEY Service Center" by LOXLEY Public Co. Ltd.

2 Soi Phaholyotin 19, Ladyao, Jatujak, Bangkok 10900

Working day : Mon-Fri 08:00 - 17:00 Tel. 0-2515-8383

Call center : 0-2248-3131

"Advanced Service Center" by Digital Phone Co. Ltd.

1 ESV Tower, G Fl., Phaholyotin Rd., Samsen Nai, Phayathi, Bangkok 10400

Working day : Mon-Fri 08:30 - 17:30 Tel. 0-2687-8731-2

Call center : 1175 # 8

* Only mfa void

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeoukdo-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KG800/KG808/MG800C

Trade Name

LG

CE 0168

Applicable Standards Details

RATTE Directive 1999/5/EC

EN 301 489-01 v1.5.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50380/EN 50361 : 2001
3GPP TS 51.010-1, EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BAST.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

27.Feb. 2006

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

