



GD330 使用手冊

LG Electronics Inc.

繁體中文
簡體中文
ENGLISH

GD330 使用手冊

MMBB0334331 (1.1)

CE 0168
www.lgmobile.com

Bluetooth QD ID B014734



此手冊內的部份內容可能會因手機程式之改良或不同網絡商提供的服務而有所不同,並不會另行通知。

GD330 使用手冊 - 繁體中文

目錄

安全及有效使用的指引.....	6	通訊錄.....	25
了解您的手機.....	11	搜尋通訊錄.....	25
安裝智能咭和電池.....	13	新增通訊錄.....	25
記憶咭.....	15	通訊錄選項.....	26
功能總覽.....	16	建立群組.....	27
您的備用屏幕.....	18	使用服務撥號號碼.....	27
觸控板.....	18	選擇本手機號.....	27
狀態列.....	19	建立名片.....	27
通話.....	20	變更通訊錄設定.....	28
撥打語音通話.....	20	訊息.....	29
透過通訊錄撥打電話.....	20	訊息.....	29
撥打國際電話.....	20	發送訊息.....	29
接聽來電和拒接來電.....	20	輸入文字.....	30
快速撥號.....	21	英文字典模式(T9 模式).....	30
撥打其他電話.....	21	ABC 模式.....	31
檢視通話記錄.....	22	123 模式.....	31
使用來電轉駁.....	22	設定電子郵件.....	31
使用通話限制.....	23	提取電子郵件.....	34
使用固定撥號號碼.....	23	透過新帳戶發送電子郵件.....	34
使用來電等候.....	23	訊息資料夾.....	34
變更通用設定.....	24	管理訊息.....	35
		使用常用範本.....	35
		使用情感圖示.....	36

變更文字訊息設定.....	36	多媒體.....	44
變更多媒體訊息設定.....	37	音樂.....	44
變更電子郵件設定.....	37	播放歌曲.....	44
變更其他設定.....	38	播放音樂時使用選項.....	44
相機.....	39	建立播放列表.....	45
快速拍照.....	39	編輯播放列表.....	45
拍攝照片後.....	39	刪除播放列表.....	46
使用快速設定.....	39	收聽收音機.....	46
使用進階設定.....	40	搜尋電台.....	46
調節亮度.....	40	編輯頻道.....	47
選擇拍攝模式.....	40	重設頻道.....	47
變更圖片大小.....	41	使用語音備忘錄.....	48
檢視已儲存照片.....	41	發送錄音.....	48
將相片設定為牆紙或通訊錄圖 像.....	41	我的檔案.....	49
視像攝錄機.....	42	圖像.....	49
拍攝快速影片.....	42	我的圖像選項功能表.....	49
錄製影片後.....	42	發送照片.....	50
使用快速設定.....	42	使用圖像.....	50
使用進階設定.....	43	管理圖像.....	50
觀看已儲存影片.....	43	刪除圖像.....	51
		移動或複製圖像.....	51

目錄

標記或取消標記圖像	51	記事簿.....	57
檢查記憶體狀態	52	新增事項至日曆	57
聲音	52	變更預設日曆檢視.....	57
使用聲音	52	新增項目至待辦事項	57
影片	52	發送待辦事項項目.....	58
觀看影片	52	新增備忘錄.....	58
在觀看影片時使用選項.....	53	新增保密備忘錄.....	58
發送錄像片段	53	使用日期搜尋器	58
使用影片 選項功能表	53	設定	59
我的遊戲及應用程式	54	工具.....	60
玩遊戲.....	54	新增快選功能表	60
使用遊戲選項功能表	54	設定鬧鐘	60
檢視應用程式	55	使用計算機.....	60
變更網絡設定	55	使用秒錶	60
安裝 Java 遊戲及應用程式.....	55	轉換單位	61
Flash 內容	56	新增城市至世界時間	61
其他	56		
我的記憶咭	56		

瀏覽器	62	配件	72
存取網絡	62	網絡服務	73
Google.....	62	技術資料	73
新增並存取書籤	62	疑難排解	75
儲存網頁	63		
存取已儲存的網頁.....	63		
檢視瀏覽器記錄	63		
使用 RSS 讀取裝置.....	64		
變更網頁瀏覽器設定	64		
連接	65		
使用藍芽發送和接收檔案..	65		
同其他藍芽裝置配對	66		
使用藍芽耳機	66		
將手機用作大容量儲存裝置	67		
設定	68		
變更您的情景模式.....	68		
使用飛航模式	68		
變更電話設定	68		
變更屏幕設定	69		
使用日期和時間	69		
變更安全性設定	69		
使用記憶體管理	70		
變更其他設定	71		
手機軟件更新	71		

安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

無線電波暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 GD330 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量子單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。

- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.467 W/Kg(10g)，攜帶於身上時則為 0.842W/Kg(10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

產品護理及維修

警告！

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 遠離電子裝置，如電視、無線電或個人電腦。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 切勿將手機放入微波爐中，這會導致電池爆炸。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 如在特別環境的要求下，請關閉手機。如：請勿在未得到批准下在醫療儀器附近使用您的手機。
- 請勿以潮濕的雙手對充電中的手機進行操作。
- 這可能會引致觸電或造成手機嚴重損壞。
- 請勿使用刺鼻的化學物品（如酒精、苯、稀釋劑等等）或清潔劑來清潔手機。這可能會有失火的危險。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- 開機前，請拔除數據線。

安全及有效使用的指引

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機套件，請使用免提耳機套件。
- 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。

- RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。

如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啟或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

在飛機

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。

安全及有效使用的指引

- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

了解您的手機

主屏幕

- 頂部：訊號強度、電池電量和功能狀態。
- 底部：我的檔案/功能表/通訊錄指示。

左軟鍵/右軟鍵

執行顯示屏底部所示的功能。在待機模式下，按左軟鍵打開“我的檔案”。按右軟鍵連接“通訊錄”。

多項工作鍵

開啟多項工作功能表。

發送鍵

撥打電話號碼及接聽來電。

關閉/電源鍵

結束或拒接通話。開啟 / 關閉手機。按一下可返回備用屏幕。



燈光感應器

根據周圍環境亮度自動調整屏幕亮度。

導覽觸控鍵

- 在備用模式下：
 - 快選功能表
 - 通訊錄
 - 訊息
 - 情境模式
- 功能表中：在功能表間導覽。

清除鍵

- 輸入字元時：每按一次可清除一個字元。
- 屏幕處於備用狀態時：轉至您最近聽過的音樂。如果該檔案不存在於您的手機上，屏幕上將會顯示一則通知訊息。

了解您的手機



安裝智能咭和電池


1 取下電池蓋

沿手機下方推動電池蓋，直至滑出手機。



2 取下電池

抬起電池的下方邊緣，小心將其從電池格中取出。

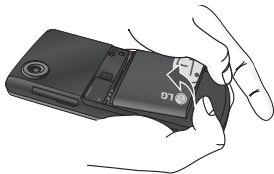


警告: 手機開機時，不要取下電池，因為這樣會損壞手機。

3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金色接觸區面向下方。要取出智能咭，請向反方向抽出。

警告: 當手機處於開啟狀態時，請勿更換或取出智能咭，否則，您可能會遺失當中的資料或將其毀壞。

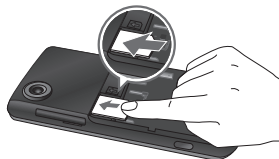

安裝智能咭和電池

4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池固定。



5 蓋上電池蓋

將電池蓋合上，直到卡緊定位。

6 手機充電

打開 GD330 側面的充電器插孔蓋。插入充電器並插入電源插座。為您的 GD330 手機充電，直至屏幕上顯示「電池電量已滿」訊息。



記憶咭

安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。

提示: 記憶咭是選購配件。

- 1 打開記憶咭蓋並插入 micro SD 咭，確保記憶咭金色接觸區面向下放。請確保金屬接觸區面向下。



格式化記憶咭

若記憶體已格式化，則即可開始使用。若記憶咭尚未格式化，則需要執行此操作。

- 1 從備用屏幕按 **OK** 選擇設定。
- 2 選擇記憶體管理，然後再選擇外置記憶體。
- 3 選擇格式化，然後確認您的選擇。
- 4 若設有定安全密碼，則輸入密碼，記憶咭將被格式化，可隨時使用。

注意: 預設安全密碼是「0000」。

提示! 要變更預設儲存目標，請從設定功能表開啟記憶體管理並選擇主要儲存裝置設定。

注意: 若記憶咭中包含內容，則其中內容會自動記錄至正確的資料夾中，例如，影片會儲存到我的影片資料夾中。

功能總覽



遊戲及應用程式

1. 我的遊戲及應用程式
2. 終極時速2
3. 設定



通話

1. 通話記錄
2. 通話時間
3. 數據用量
4. 通話費用
5. 來電轉駁
6. 通話限制
7. 固定撥號號碼
8. 來電等候
9. 通用設定



記事簿

1. 日曆
2. 待辦事項
3. 備忘錄
4. 保密備忘錄
5. 日期搜尋器
6. 設定



多媒體

1. 相機
2. 視像攝錄機
3. 音樂
4. FM 收音機
5. 語音備忘錄



訊息

1. 建立新訊息
2. 收件匣
3. 郵箱
4. 草稿
5. 寄件匣
6. 已發送項目
7. 我的資料夾
8. 常用範本
9. 情感圖示
0. 設定



我的檔案

1. 我的圖像
2. 我的聲音
3. 我的影片
4. 我的遊戲及應用功能
5. Flash 內容
6. 其他
7. 我的記憶咭
8. 內置記憶管理員



Google



通訊錄

1. 新增
2. 搜尋
3. 快速撥號
4. 群組
5. 服務撥號號碼
6. 本手機號碼
7. 我的名片
8. 設定



工具

1. 快選功能表
 2. 鬧鐘
 3. 計算機
 4. 秒錶
 5. 單位轉換器
 6. 世界時間
 7. 智能咭服務(視乎不同網絡商)
- *此功能取決於智能咭和網絡服務。



瀏覽器

1. 主頁
2. 輸入網址
3. 書簽
4. RSS 讀取裝置
5. 儲存的網頁
6. 記錄
7. 設定



連接

1. 藍芽
2. USB 連線模式



設定

1. 情景模式
2. 手機
3. 屏幕
4. 日期及時間
5. 網絡
6. 互聯網設定
7. 存取點
8. 分組數據連線
9. 安全
0. 記憶體管理
- *. 重設設定

您的備用屏幕

您可從此處存取功能表選項，快速撥打電話並更改您的情景模式及很多其他內容。

觸控板

屏幕下面的觸控板可在瀏覽手機功能表時用作左 / 右觸控板。

- 點按觸控板時無需太大力，只需要輕輕按中即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。







狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽或 GPRS 是否已啟動。下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	多項工作列表
	網絡訊號強度（列數會有變化）
	無網絡訊號
	電池已耗盡
	新文字訊息
	新電郵
	鬧鐘已設定
	正在使用標準情景模式
	正在使用靜音情景模式
	外置記憶體
	呼叫已轉接
	可使用 GPRS
	正在使用 EDGE
	漫遊
	藍芽已啟動
	通話已轉駁
	正在播放背景音樂




通話

撥打語音通話



- 1 輸入包括完整區域代碼的號碼。要刪除數字，請按下 。要刪除所有數字，請長按 。
- 2 按  可撥打電話。
- 3 按  或合上手機可結束通話。

透過通訊錄撥打電話


撥打「通訊錄」中儲存的號碼十分方便。

- 1 按  即可從備用屏幕存取通訊錄清單。
- 2 按至要撥號的聯絡人。
- 3 按  撥打語音通話。
- 4 按  可結束通話。

撥打國際電話


- 1 按住  可輸入國際撥號前碼。「+」字元加在國際地區號碼的前頭。
- 2 輸入國家代碼、區域代碼和電話號碼。
- 3 按 。

接聽來電和拒接來電

手機響鈴後，按  接聽來電。

點按「靜音」以關閉鈴聲。

如果在開會時忘記將情景模式變更為「靜音」，此功能將十分有用。


按  拒接來電。

快速撥號


您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按 **OK** 並選擇通訊錄。
- 2 選擇**快速撥號**。
- 3 您的留言信箱已經設定至快速撥號1。您無法變更。選擇新增以加入新的通訊錄於快速撥號。
- 4 通訊錄將開啟。選擇要將其指定給此號碼的通訊錄。

要撥打快速撥號號碼：

- 按已指定的號碼，然後按發送鍵  或者 **OK**。
- 按住指定的號碼，直到聯絡人電話顯示在屏幕上。

撥打其他電話

- 1 通話中，點按左觸控鍵，並選擇新建通話撥號。
- 2 撥號或搜尋通訊錄（請參閱第 20 頁的如何透過通訊錄撥打電話，了解詳情）。
- 3 按  連接通話。
- 4 兩個通話均將顯示於通話屏幕上。初始通話將會被鎖定，來電者被保留。
- 5 選擇交換，在兩方通話間切換。
- 6 要結束其中一個或兩個通話，請選擇**選項** → **結束**，然後選擇**所有通話**或**使用中通話**。

注意: 您需為撥打的每個電話付費。

通話

檢視通話記錄

從備用屏幕按 **OK** 選擇**通話**並選擇**通話記錄**。

選擇要檢視的對象：

所有通話 - 檢視所有撥出、已接和未接來電的完整清單。

未接來電 - 檢視所有未接來電的清單。

撥出通話 - 檢視所有已撥出通話的清單。

已接來電 - 檢視所有已接聽來電的清單。

提示! 從任何通話清單，點按左軟鍵並點按「全部刪除」以刪除所有已錄製的項目。

從備用屏幕按 **OK** 選擇**通話**。

您亦可選擇檢視的內容：

通話時間 - 檢視所有撥出和已接電話的通話時間。

數據用量 - 檢視所有接收和傳送數據用量（以千字節表示）。

通話費用 - 檢視套用到已撥號碼的費用（此服務視網絡而定，部份網絡商不支援此功能）。

使用來電轉駁

- 1 從備用屏幕按 **OK** 選擇**通話**。
- 2 選擇**來電轉駁**。
- 3 可選擇所有語音通話、線路繁忙時、無人接聽或無法接通時。
- 4 輸至其他號碼。
- 5 選擇「轉駁」。

注意: 轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

提示! 要關閉所有通話轉接功能，請選擇停用全部。

使用通話限制

- 1 從備用屏幕按 **OK** 選擇**通話**。
- 2 選擇**通話限制**。
- 3 選擇以下六個選項的任何一個有：
所有撥出通話
國際通話撥號
本地以外的國際撥號
所有來電
國際漫遊時來電
停用全部
- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

使用固定撥號號碼

- 1 從備用屏幕按 **OK** 選擇**通話**。
- 2 選擇**固定撥號號碼**，開啟並編譯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。啟用後，僅可撥打固定撥號清單中包含的號碼。

使用來電等候

- 1 從備用屏幕按 **OK** 選擇**通話**。
- 2 選擇來電等候啟動來電等候服務。
若啟動來電等候服務，則在通話期間有其他來電時手機亦能提醒您。耳機中響起提示音，且屏幕上將顯示正在等候的第二個來電。
您可保留第一個通話，接聽第二個來電。（此功能僅在受網絡支援時才可用。）

通話

變更通用設定

- 1 從備用屏幕按 **OK** 選擇**通話**。
- 2 選擇**通用設定**。您可從此處修改以下選項的設定：
 - 來電拒接** - 選擇開啟或關閉並選擇拒接所有通話、通訊錄、群組、無名稱記錄(不在通訊錄中的號碼)或無來電號碼。
 - 發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。
(此功能僅在受網絡支援時才可用。)
 - 自動重撥** - 選擇開啟或關閉。
 - 接聽模式** - 選擇是使用按發送鍵、開啟滑蓋或按任何鍵來接聽來電。

分鐘提示 - 選擇開啟後，您便可在通話時聽到分鐘提示音。

藍芽接聽模式 - 選擇免提，可使用藍芽耳機接聽來電或選擇手機，便可透過按手機上的按鍵來接聽來電。

儲存新號碼 - 選擇「是」儲存新號碼。


滑蓋關閉設定 - 設定是否在合上滑蓋時結束通話。

通訊錄

搜尋通訊錄

有兩種方法可搜尋通訊錄：

從備用屏幕

- 1 從備用屏幕按  開啟通訊錄。
- 2 選擇對應於要檢視通訊錄首個單詞的字母。因此，對於「Home」，請選擇 H。

或者，使用輕微更快捷的方法...

- 1 從備用屏幕輸入要搜尋的號碼並選擇**選項**。
- 2 選擇**搜尋通訊錄**。

提示! 透過通訊錄並選擇搜尋於，然後選擇「群組」。這將顯示所有群組清單。

從主功能表

- 1 從備用屏幕按 **OK** 選擇**通訊錄**。
- 2 選擇**搜尋**，並使用鍵盤輸入要查找聯絡人的名字。
- 3 通訊錄將顯示對應於輸入字母的通訊錄清單。

新增通訊錄

- 1 從備用屏幕按 **OK** 選擇**通訊錄**。
- 2 選擇**新增**。
- 3 選擇將通訊錄儲存到**手機**或**智能咭**。
- 4 輸入新聯絡人的名字和姓氏。您不必同時輸入名字和姓氏，但必須輸入其中一個。
- 5 輸入在欄位中提供的所有資訊，並選擇**完成**。

通訊錄

或者，使用輕微更快捷的方法…

- 1 從備用屏幕輸入要儲存的號碼並選擇**選項**。
- 2 選擇**儲存號碼**並選擇**新增通訊錄**或者**更新通訊錄**。
- 3 根據以上操作，輸入相關資訊，然後按完成。

通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 選擇您要使用的聯絡人。
- 2 點按左觸控鍵開啟選項清單。在此處您可以：

發送訊息 - 您可發送訊息給聯絡人。

發送名片 - 向他人發送聯絡人的詳細資料。選擇以文字訊息、多媒體訊息、電子郵件或藍芽發送。

撥打電話 - 向聯絡人撥打語音通話。

新增通訊錄 - 您可新增通訊錄。

編輯 - 變更任何通訊錄的詳細資料。

新增至群組 - 新增聯絡人至群組。(只限存於手機的通訊錄)

標記 / 取消標記 - 標記要刪除的多個通訊錄。

搜尋於 - 您可選擇群組進行搜尋操作。

儲存到智能咭/手機 - 選擇要移動或複製到智能咭還是手機（視乎起初儲存通訊錄的位置而定）。

刪除 - 刪除通訊錄。按「是」如果您肯定。

文字輸入 - 您可設定文字輸入法模式。

快速撥號 - 您可以為此聯絡人分配指定一個快速撥號號碼。


建立群組

- 1 從備用屏幕按 **OK** 選擇通訊錄。
- 2 選擇群組，並按左觸控鍵。
- 3 選擇**新增群組**。
- 4 為您的新群組輸入名稱。
- 5 點按「完成」。

注意：若要刪除某群組，指定給該群組的聯絡人將不會遺失。它們仍會保留在您的通訊錄中。

提示！ 透過顯示現有群組並按左觸控鍵，您可編輯此群組。選擇新增群組、新增成員，編輯群組或刪除群組。

使用服務撥號號碼

您可檢視由服務供應商指定的「服務撥號號碼」(SDN) 清單（如果受智能咭支援）。此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。選擇服務號碼後，按  撥打服務電話。

選擇本手機號

檢視本手機號碼可讓您顯示智能咭中的手機號碼。

建立名片

透過依次選擇**我的名片**和**新增**，您可建立自己的名片。輸入姓名、號碼、電子郵件和圖像後，您可用其作為傳送訊息時的名片。

通訊錄

變更通訊錄設定

您可以對通訊錄設定進行調整，以便通訊錄按照您的喜好運作。

- 1 從備用屏幕按 **OK** 選擇通訊錄。
- 2 選擇**設定**。您可從此處對以下設定進行調整：

通訊錄列表設定 - 選擇檢視儲存於您的手機與智能咭中的通訊錄，還是僅檢視儲存於手機或智能咭中的通訊錄。您亦可選擇名稱顯示次序，先顯示名字或姓氏，然後顯示圖片。

複製 - 在手機與智能咭之間進行複製。選擇執行此操作的方式：全部或依次序。

移動 - 這和複製一樣，但通訊錄僅會儲存於您所移動至的位置。如果您將一個通訊錄從智能咭移動至手機，它將從智能咭記憶體中刪除。

通過藍芽傳送所有通訊錄 - 透過藍芽將通訊錄資訊發送到其他手機。

備份通訊錄 - 您可將手機中的所有通訊錄數據以 VCard 形式儲存至外置記憶體。

還原通訊錄 - 您可將外置記憶體中的所有通訊錄數據以 VCard 形式還原至手機記憶體。

清除通訊錄資料 - 刪除您所有的通訊錄。

記憶體資訊 - 您可以查看手機或智能咭上還剩有多少的記憶體空間。

訊息

訊息

GD330 包含與 **SMS**（文字訊息服務）、**MMS**（多媒體訊息服務）和電子郵件的功能。

發送訊息


- 1 從備用屏幕按 **OK** 選擇訊息並選擇**建立新訊息**。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。
- 3 新訊息編輯器將開啟。訊息編輯器將文字訊息和多媒體訊息集合在同一個功能表中，可輕鬆在文字訊息模式和多媒體訊息模式之間切換。訊息編輯器的預設設定為文字訊息模式。
- 4 使用英文字典模式(T9 模式)或 Abc 模式輸入您的訊息。

警告! 當在訊息欄位中輸入的文字長度超過 1 頁時，您可選擇訊息類型為多文字訊息或多媒體訊息。

如果要變更發送的訊息類型，請參閱「變更文字訊息設定」中的「發送長文字時設為」。

- 5 點按「選項」並選擇「附加」以增加圖像、影片、聲音、符號、常用範本、情感圖示、名稱及號碼、新增投影片、標題或更多。(名片/日程表/備忘錄/待辦事項/我的名片)。
- 6 選擇**發送**。
- 7 從通訊錄選擇收件者或按號碼以輸入其他號碼。
- 8 選擇**發送**。


訊息



 **警告:** 如果已在訊息編輯器中加入了圖像、聲音、影片、新投影片、標題、名片、日程表、備忘錄、待辦事項或名片，訊息將會自動轉變為多媒體模式，而您亦需為此支付相應費用。


輸入文字


使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立事項，都需要輸入文字。手機中提供以下可用的文字輸入方式：英文字典模式(T9 模式)、ABC 模式和 123 模式。

注意: 部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。

要在文字輸入欄位中開啟英文字典模式(T9 模式)，請選擇選項，選擇輸入法模式，然後選擇英文字典模式。透過按  您可切換文字輸入模式。


您會發現文字輸入模式指示符顯示在顯示屏右上角。要在文字輸入欄位中輸入符號，請按  鍵並選擇符號，然後選擇**確定** 。

按  可在每個單字後加入空格。

要刪除某個字元，請按  鍵。

英文字典模式(T9 模式)

英文字典模式(T9 模式)使用內置字典，識別根據按按鍵順序寫入的單字。只需按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

注意:  鍵用於在 T9 模式中變更詞典的預測字。

如果您想要的詞語沒有顯示，點按串法並新增字詞至字典。然後您可使用 ABC 模式輸入單字並儲存。您的單字將會新增至字典中。

注意: 透過點按選項並選擇寫入語言，您可選擇不同語言。

ABC 模式


使用此模式時，按下標示所需字母的按鍵一次、兩次、三次或四次，直至顯示所需字母便成。

123 模式

只要按一次按鍵即可輸入一個數字。在 Abc 模式下，您亦可透過長按所需按鍵加入數字。

設定電子郵件

縱使出門在外，您亦可使用 GD330 上的電子郵件功能與其他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 在備用屏幕中，按  並選擇「訊息」，在選擇「設定」。
- 2 先選擇電子郵件，然後選擇電子郵件帳戶。
- 3 若尚未設定任何電子郵件帳戶，則可使用電子郵件設定精靈來設定一個電子郵件帳戶。

電郵地址/密碼 - 輸入電郵地址和密碼。

使用者名稱 - 輸入帳戶使用者名稱。

郵箱類型 - 選擇用於傳輸電子郵件、IMAP4 或 POP3 的互聯網協定類型。

訊息

內送伺服器 - 輸入內送 (POP3 或 IMAP4) 郵件伺服器的 IP 位址或主機名稱。

外寄伺服器 - 輸入外寄 (SMTP) 郵件伺服器的 IP 位址或主機名稱。

SMTP 驗證 - 選擇啟動外寄郵件伺服器的安全設定。

若 SMTP 驗證已開啟，則在發送電子郵件時，外寄伺服器需要使用者名稱和密碼。

SMTP 使用者名稱/SMTP 密碼 - 輸入電子郵件供應商提供的電子郵件地址和密碼。(若 SMTP 驗證已開啟)

帳戶名稱 - 輸入您希望與此帳戶關連的信箱名稱。

- 4 輸入電子郵件帳戶後，選擇 **OK** 「確定」儲存。
現在，您的帳戶經已完成設定，並會出現於電郵資料夾的帳戶清單當中。

- 5 使用選項的編輯功能表，您可編輯設定值。

標題 - 為此帳戶輸入名稱。

我的名字 - 輸入您的名字。

使用者名稱 - 輸入帳戶用戶名稱。

密碼 - 輸入帳戶密碼。

電郵地址 - 輸入帳戶電郵地址。

回覆電郵地址 - 輸入「回覆」的電郵地址。

外寄郵件伺服器 - 輸入帳戶的詳細資料。

內送郵件伺服器 - 輸入帳戶的詳細資料。

最大接收大小 - 選擇您的電郵大小限制，上限為 1MB。

郵箱類型 - 輸入郵箱類型，即 POP3 或 IMAP4。

儲存到伺服器 - 選擇是否您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本將得以儲存。

儲存已發送的郵件到 - 選擇儲存 IMAP4 電郵的位置。對於 POP3 帳戶，副本將儲存在手機上。

存取點 - 選擇您的互聯網存取點。

擷取模式 - 選擇「僅標題」或「全部」。

進階設定 - 選擇是否進階設定(以下為進階設定)。

SMTP 連接埠號碼 - 通常，此號碼為 25。

使用 SSL 發送 - 選擇是否將 SSL 用於內送伺服器。

內送郵件伺服器連接埠 - 通常，對於 POP3 帳戶，此為 110；而對於 IMAP4 帳戶則為 143。

使用 SSL 發送 - 選擇是否將 SSL 用於內送伺服器。

SMTP 驗證 - 選擇外寄郵件伺服器的安全設定。

SMTP 使用者名稱 - 請輸入電郵供應商提供的電子郵件地址。(如果「SMTP 驗證」設定為「啟用」)

SMTP 密碼 - 請輸入電郵供應商提供的電子郵件地址密碼。(如果「SMTP 驗證」設定為「啟用」)

APOP 安全登入 - 選擇是否為 POP3 帳戶啟用 APOP 安全登入。IMAP4 帳戶則始終設為關閉。

訊息

提取電子郵件

您可以自動或手動檢查您的帳戶中的新郵件。請參閱「變更電子郵件設定」，了解如何自動查收。

如要手動查收：

- 1 從備用屏幕按 **OK** 選擇**訊息**並選擇**郵箱**。
- 2 選擇要使用的帳戶。
- 3 選擇「開啟」，手機將會連接到電郵帳戶並擷取新訊息。

透過新帳戶發送電子郵件

- 1 從備用屏幕按 **OK** 選擇**訊息**並選擇**建立新訊息**。
- 2 選擇**電子郵件**，則系統會開啟一封新電郵。
- 3 使用標籤及選項，輸入收件者的地址並寫入您的訊息。使用附加，可附加圖像、影片、聲音或其他檔案類型。

- 4 選擇**發送**，您的電子郵件便會發出。

訊息資料夾

收件匣 - 您可檢視訊息。

郵箱 - 接收到的所有電郵會置於您的郵箱。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送的訊息將置於您的「已發送項目」資料夾中。

我的資料夾 - 您可將收件匣或已發送訊息中的訊息移至我的資料夾，然後將我的資料夾中的訊息移至原有訊息方塊中。

管理訊息

1 從備用屏幕按 **OK** 選擇**訊息**並選擇**收件匣**。

2 選擇**選項**，然後選擇：

回覆 - 回覆所選訊息。

轉寄 - 將所選訊息發送給他人。

撥打電話 - 向您的寄件者撥打語音通話。

刪除 - 刪除訊息。

建立新訊息 - 開啟新的空白訊息或電子郵件。

標記/取消標記 - 標記您的訊息以便進行多重刪除。

複製及移動 - 複製或移動訊息至手機、智能咭 或我的資料夾。

篩選 - 按類型來檢視訊息。這樣可將 文字訊息與多媒體訊息分開。

訊息資訊 - 參閱訊息的其他資訊，包括類型、標題、寄件者或發送時間。

看到無足夠空間儲存智能咭訊息這則訊息時，請從刪除儲存在智能咭記憶體上的部份訊息。

看到無足夠空間儲存訊息這則訊息時，您可透過刪除訊息來釋放空間。

使用常用範本

為您最常發送的文字訊息及多媒體訊息 建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

1 從備用屏幕按 **OK** 選擇**訊息**並選擇**常用範本**。

2 選擇文字範本或多媒體範本。然後，您可以以次選擇「選項」、「新增」來新增常用範本。

訊息

使用情感圖示

情感圖示令您的訊息更添生氣。您會發現手機上已存有一些常用情感圖示。

- 1 從備用屏幕按 **OK** 選擇訊息並選擇情感圖示。
- 2 選擇選項以新增、編輯、刪除或刪除全部表情圖示。

變更文字訊息設定

您的 GD330 已預先定義訊息設定，以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。

在備用屏幕中，按 **OK** 並選擇「訊息」，然後選擇「設定」，再選擇「文字訊息」。您可對以下各項進行變更：

文字訊息中心 - 為您的訊息中心輸入詳細資料。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。

有效時期 - 選擇訊息要在訊息中心保留多久。

訊息類型 - 將您的文字轉換為語音、傳真、X.400 或電子郵件。

字元編碼 - 選擇訊息中字元的編碼方式，這將影響到您的訊息大小，進而影響數據費用。

發送長文字時設為 - 當在訊息欄位中輸入的文字長度超過 1 頁時，選擇是以多個文字訊息還是多媒體訊息來發送訊息。

變更多媒體訊息設定

您的 GD330 已預先定義訊息設定以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。

在備用屏幕中，按 **OK** 並選擇「訊息」，然後選擇「設定」，再選擇「多媒體訊息」。

您可對以下各項進行變更：

接收模式 - 選擇本地或漫遊網絡。隨後若選擇手動，您只會先收到多媒體訊息通知，以便您決定是否進行完整下載。

發送報告 - 選擇是否要求或允許發送報告。

閱讀回覆 - 選擇是否要求或允許閱讀回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息要在訊息中心保留多久。

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

建立模式 - 選擇您的訊息模式。

發送時間 - 在指定時間發送您的訊息。

多媒體訊息中心 - 為您的訊息中心輸入詳細資料。

變更電子郵件設定

您可調整電郵設定，以便可按您的偏好使用電郵。

在備用屏幕中，按 **OK** 並選擇「訊息」，然後選擇「設定」，再選擇「電子郵件」，這樣便可變更以下設定：

電子郵件帳戶 - 您可設定電郵帳戶。

訊息

允許回覆電郵 - 選擇開啟或關閉允許發送「閱讀確認」訊息。

要求回覆電郵 - 選擇開啟或關閉要求接收「閱讀確認」訊息。

擷取時隔 - 選擇 GD330 查收新電郵的頻率。

擷取數量 - 選擇任何一次擷取的電子郵件數量。

轉寄及回覆時加入原始訊息 - 選擇是否包含原始訊息。

包括附件 - 選擇是否加入原始附件。

在漫遊中自動擷取 - 選擇在漫遊時是否自動擷取您的訊息。

新電子郵件通知 - 選擇是否要獲得新電郵的通知。

簽名 - 建立電郵簽名並啟用此功能。

重要性 - 選擇電郵的優先等級。

變更其他設定

在備用屏幕中，按 **OK** 並選擇「訊息」，再選擇「設定」，然後：

留言信箱 - 您的留言號碼儲存於此處。聯絡網絡商，了解他們提供服務的更多詳情。



服務訊息 - 選擇要接收還是阻止服務訊息。您亦可透過建立受信任的和不受信任的寄件者列表來設定您的訊息安全性。

資訊服務 - 選擇您的區域廣播、頻道或語言。

備份文字訊息 - 您可選擇手機記憶或外置記憶體。

相機

快速拍照

- 1 輕按相機鍵  開啟取景器。
- 2 將相機聚焦於拍攝的物件。
- 3 按相機鍵  拍照。


拍攝照片後


拍攝的照片會顯示在屏幕上。


拍攝照片後, 您可選擇以下功能表。


選項 - 您可重新命名或 編輯圖片檔。

 **影集** - 檢視影集中已拍攝的照片。

 **發送** - 以訊息、電子郵件 或藍芽方式發送相片。

 **新增** - 直接拍攝另外一張照片。當前照片將會被儲存。

 **使用方式** - 將圖像用作牆紙、通訊錄圖像或開機圖像或關機圖像中。

 **刪除** - 刪除剛剛拍攝的照片並按是確認。取景器將再次出現。

返回 - 返回到上一個功能表。

使用快速設定

在取景器中, 使用瀏覽鍵, 選擇要使用的選項。

影集 - 按以查看影集中的其他相片。

錄像 - 選擇從相機切換至視像攝錄機模式。

擷取 - 您可以拍攝照片。

亮度 - 設定相機取景器中圖像的亮度。

計時器 - 計時器讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：關閉、3 秒、5 秒或 10 秒。適宜於拍攝也要包括您在內的群組相片。

相機

使用進階設定

從取景器，選擇**設定**，然後開啟其他選項中的所有進階設定。

圖像大小 - 變更相片大小，以儲存在記憶體空間中，或拍攝預設圖片，為通訊錄更正大小。

色彩效果 - 選擇要套用到拍攝相片的色調。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。

夜間模式 - 夜間拍攝時，若選擇開啟，則拍攝效果會更好。

拍攝模式 - 可從標準或連環拍攝中選擇。

圖像質量 - 控制圖像質素。

記憶體使用裝置 - 選擇是將照片儲存至手機記憶體，還是儲存至外置記憶體。

隱藏圖示 - 設定是否自動隱藏取景器側面的圖示。

快門聲 - 從三種門聲音中選擇一種。

調節亮度

亮度定義圖像在有光和黑暗中的區別。低亮度會將圖像顯示得較模糊，而高亮度會將圖像顯示得較清晰。

- 1 選擇快速設定中的亮度。
- 2 將亮度指示符沿列向“-”按，亮度將降低，獲得的圖像較模糊，向“+”按，亮度將升高，獲得的圖像較清晰。

選擇拍攝模式

- 1 選擇設定可用的拍攝模式。
- 2 從以下選項中選擇：

標準 - 這是預設拍攝類型，照片將如快速拍照所述，以正常方式拍攝。

連環拍攝 - 此功能可讓您自動快速而連貫地拍攝多張照片。

變更圖片大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要使手機或記憶咭儲存更多的照片，請變更圖片像素，以縮小檔案大小。

- 1 選擇設定然後開啟圖像大小。
- 2 從以下數字選項: 1600X1200, 1280X960, 640X480, 320X240.
- 3 選擇要使用的大小選項，並按選擇以執行變更。設定功能表將返回上一頁，以備選擇其他設定。

檢視已儲存照片

- 1 您可從相機模式和「影集」中存取已儲存的照片。
- 2 影集將顯示於屏幕上。
- 3 再次選擇相片，以便完全開啟。





將相片設定為牆紙或通訊錄圖像

從影集，選擇圖像和使用方式，將圖像用作牆紙、通訊錄圖像、開機圖像或關機圖像。

注意: 通訊錄圖像僅能新增至 儲存至手機（而不是智能咭）的通訊錄

視像攝錄機

拍攝快速影片

- 1 輕按相機鍵開啟取景器。選擇  切換至錄像，並按  「確定」。攝影機的取景器將顯示於屏幕上。
- 2 將相機聚焦於您希望攝錄的事物上。
- 3 按一下  「確定」開始錄製。
- 4 **REC** 將出現在取景器。再按一下  「確定」停止錄製。

錄製影片後


已錄製的影片會顯示在屏幕上。


錄製影片後, 您可選擇以下功能表。


選項 - 您可重新命名短片。

 **影集** - 檢視影片影集。

 **播放** - 播放檔案。

 **新增** - 按此鍵直接錄製另外一個影片。當前影片將會被儲存。

 **發送** - 以訊息、電子郵件或藍芽方式發送影片。

 **刪除** - 刪除剛剛錄製的影片, 透過按「是」予以確定。取景器將再次出現。

返回 - 返回到上一個功能表。

使用快速設定

在取景器中, 使用瀏覽鍵, 選擇要使用的選項。

影集 - 按以查看影集中的其他影片。

相機 - 選擇以切換到相機模式。

錄製 - 您可以錄製影片。

亮度 - 亮度定義圖像在有光和黑暗中的區別。低亮度會將圖像顯示得較模糊, 而高亮度會將圖像顯示得較清晰。

使用進階設定

從取景器，選擇設定，然後開啟其他選項中的進階設定。

大小 - 變更影片大小以儲存於記憶體中。

色彩效果 - 選擇要套用到拍攝影片的效果。

白平衡 - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、白熱光、陽光、日光燈或陰天進行選擇。

質素 - 變更相片大小，以儲存在記憶體空間中。

長度 - 選擇訊息或標準。從取景器，選擇設定，然後開啟預覽選項中的進階設定。

記憶體使用裝置 - 選擇將影片儲存至手機記憶體，或是儲存至外置記憶體。

隱藏圖示 - 設定相機自動或手動隱藏取景器側邊的圖示。

語音 - 選擇靜音以錄製影片，而沒有聲音。

注意: 選擇新設定後，按「選擇」以儲存執行作出的變更。

觀看已儲存影片

- 1 您可從視像攝錄機模式或備用屏幕中存取已儲存的影片。從取景器，按影集即可。從備用屏幕，您應按 **OK**，然後選擇我的檔案和我的影片。
- 2 再次選擇影片，以便完全開啟。

多媒體

音樂

LG GD330 具有內置的音樂播放器，這樣，您可播放所有喜愛的曲目。要存取音樂播放器，請從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**音樂**。

最近播放 - 收聽最近播放過的歌曲。

全部曲目 - 包含手機上具有的所有歌曲。

播放列表 - 包含建立的任何播放列表。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按音樂專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

隨機播放曲目 - 以隨機順序聆聽音樂。

播放歌曲

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**音樂**，然後選擇**全部曲目**。
- 2 選擇要播放的音樂，然後選擇 **OK** 播放。
- 3 按下 **OK** 暫停歌曲。
- 4 按 **◀** 跳至下一首歌曲。
- 5 按 **▶** 跳至上首歌曲。

播放音樂時使用選項

選擇「選項」並從以下選項中選擇：

最小化 - 使音樂播放器屏幕消失，這樣，您可按正常方式繼續使用手機。

轉至我的音樂 - 轉到音樂功能表。

重複 - 選擇關閉、一首或全部重複以播放曲目、。

隨機播放 - 以隨機順序聆聽音樂。

均衡器 - 選擇其它預設的均衡器。

視覺效果 - 設定播放音樂時的視覺效果。

透過藍芽收聽 - 透過藍芽耳機收聽選定的歌曲（必須是能夠支援MP3 播放的藍芽耳機）。

新增至播放列表 - 將檔案新增到播放列表。

檔案資訊 - 檢視播放列表資訊。

發送 - 透過訊息、電子郵件或藍芽發送給朋友。

使用方式 - 將歌曲用作一種鈴聲、訊息提示音、開機或關機音效。

建立播放列表

透過全部曲目資料夾中選擇歌曲項目，從而建立自己的播放列表。

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**音樂**，然後選擇**播放列表**。

- 2 選擇**新增**，輸入播放列表名稱，然後按 **OK** 儲存。

- 3 全部曲目資料夾將會顯示。選擇要納入播放列表的所有歌曲；記號將顯示於對應的名稱旁。

要播放播放列表，請予以選擇，然後選擇播放。

注意: 要新增第二個播放列表，請選擇選項，然後選擇新增播放列表。

編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。要執行此操作時，您可編輯播放列表。

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**音樂**，然後選擇**播放列表**。
- 2 選擇播放列表。
- 3 選擇選項，然後選擇：

新增歌曲 - 新增更多歌曲至播放列表。標記所需歌曲並選擇完成。

多媒體

發送 - 以訊息、電子郵件或透過藍芽發送歌曲。

從列表移除 - 從播放列表中刪除歌曲。選擇是確認。

標記/取消標記 - 選擇多個檔案。

使用方式 - 您可將歌曲設定為音效。

檔案資訊 - 檢視歌曲的名稱、大小、日期、時間、類型、長度、保護和版權詳情。

記憶體管理 - 檢視記憶體狀態。

刪除播放列表

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**音樂**, 然後選擇**播放列表**。
- 2 選擇**選項**, 然後選擇**刪除**或**刪除全部**以刪除所有播放列表。

收聽收音機

LG GD330 手機具有 FM 收音機功能, 以便您可在外出時收聽喜歡的電台節目。

從備用屏幕按 **OK** 選擇**多媒體**並依次選擇**FM 收音機**。選擇要收聽電台的頻道號。

注意: 您需要插入耳機才可收聽收音機。將其插入到與充電器相同的插孔。

搜尋電台



透過手動或自動搜尋電台頻道, 從而進行調諧。這些電台頻道將儲存至特定頻道編號, 如此一來, 您就不需要重新調諧。手機中最多可儲存 50 個頻道。

自動調諧：

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇 **FM 收音機**。選擇**選項**。
- 2 選擇自動掃描，然後選擇是。找到的電台將自動分配至頻道編號。

手動調諧：

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇 **FM 收音機**。
- 2 輸入您想要儲存的電台頻率。
- 3 選擇「設定」，然後選擇要儲存的頻道。

注意：您亦可透過使用顯示在電台頻率旁邊的  和  手動調諧電台。

編輯頻道

您需要將電台移至其他頻道，以便令收聽頻率最高的電台存取起來更加容易。

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇 **FM 收音機**。選擇**選項**。
- 2 選擇**頻道列表**，然後選擇要變更的頻道。
- 3 從其他頻道中的一個頻道選擇電台，或手動調諧頻道至所需的頻道。

透過顯示，然後按選項，您可編輯每個頻道。

重新命名 - 為頻道重新命名。

取代 - 為選定的頻道設定新頻率。

重設頻道

- 1 從備用屏幕按 **OK** 選擇**多媒體**並依次選擇 **FM 收音機**。選擇**選項**。
- 2 依次選擇**頻道列表**和**選項**。

多媒體

- 3 選擇重設頻道以重設日前頻道，或選擇重設所有頻道以重設所有頻道。

提示! 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

使用語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音。

- 1 從備用屏幕按 **OK** 選擇**多媒體**。
- 2 依次選擇**語音備忘錄**和**選項**，然後從以下選項中選擇：

長度 - 設置錄製時間。可從多媒體訊息大小、30 秒、1分鐘或無限制中選擇。

質素 - 選擇聲音質素。從特細、細或標準中進行選擇。

記憶體使用裝置 - 選擇手機記憶體或外置記憶體。

轉至錄音記錄 - 開啟我的聲音中的錄音資料夾。

- 3 選擇 **OK** 開始錄製。
- 4 選擇**停止**即停止錄製。
- 5 在**選項**中選擇**播放**，收聽您的錄音內容。

發送錄音

- 1 完成錄音後，您可選擇**選項**。
- 2 選擇**發送**並從訊息、電子郵件或藍芽中進行選擇。若選擇訊息或電子郵件，則錄製會新增至訊息，且您可按正常方式進行編寫和發送。若選擇藍芽，則系統會提示您開啟藍芽。

注意: 完成錄製後，選擇選項並選擇播放、發送、檔案、刪除、使用方式（用作話音鈴聲）或轉至錄音記錄。

我的檔案

您可將多媒體檔案儲存在「我的檔案」中的手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。

您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

圖像

我的圖像包括圖片清單，其中有預載至手機的預設圖像和透過手機相機拍攝的圖像。

我的圖像選項功能表

為您準備的「我的圖像」中可用選項取決於選定的圖像類型。

所有選項都適用於圖片。

發送 - 將圖像發送給朋友。

使用方式 - 將圖像設定為特定時間顯示於手機上。

移動 - 將圖像從手機記憶體移至外置記憶體，反之亦然。

複製 - 將圖像從手機記憶體複製至外置記憶體，反之亦然。

刪除 - 刪除圖像。

標記/取消標記 - 選擇多個檔案。

編輯圖像 - 您可以編輯圖像。

以藍芽列印 - 透過藍芽列印圖像。

檔案 - 重新命名或檢視檔案資訊。

建立新資料夾 - 在我的圖片資料夾內建立新資料夾。

播放投影片 - 開始播放投影片。

排序方式 - 按特定次序排列圖像。

多格子/列表檢視 - 以多格子或列表類型檢視每個圖像。

記憶體管理 - 檢視記憶體狀態。

我的檔案

發送照片

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 選擇要發送的相片，並按選項。
- 3 選擇發送並從訊息、電子郵件或藍芽中選擇。
- 4 若選擇訊息或電子郵件，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啟藍芽，並搜尋要向其發送圖片的裝置。

使用圖像

您可以選擇圖像以用作為牆紙、通訊錄圖像、開機/關機圖像。

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 選擇**圖像**，並按選項。
- 3 按使用方式並選擇以下一項：

牆紙 - 為備用屏幕設定待機圖片。

通訊錄圖像 - 給通訊錄清單中的特定聯絡人分配一個圖像，以便在其向您致電時顯示。

開機 - 設定開機時所顯示的圖像。

關機 - 設定關機時所顯示的圖像。

管理圖像

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 依次選擇**選項**和排序方式。
- 3 從日期、類型或名稱中選擇。

刪除圖像

- 1 從備用屏幕，按 **OK** 選擇 **我的檔案** 並依次選擇 **我的圖像**。
- 2 選擇要刪除的圖像並選擇選項。
- 3 選擇 **刪除**，然後選擇 **是** 以確認。

提示！ 要快速刪除「圖像」中的檔案，請先以方形標記相片，然後按 **CE** 鍵。

移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項作業。

- 1 從備用屏幕按 **OK** 選擇 **我的檔案** 並依次選擇 **我的圖像**。
- 2 選擇 **圖像**，然後選擇 **選項**。
- 3 選擇 **移動** 或 **複製**。

標記或取消標記圖像

若要同時移動、複製、發送或刪除多個圖像，您首先要識別出它們，然後以勾號進行標記。

- 1 從備用屏幕按 **OK** 選擇 **我的檔案** 並依次選擇 **我的圖像**。
- 2 依次選擇 **選項** 和 **標記/取消標記**。
- 3 每個圖像的右下方均會出現一個方塊。如果選擇圖像，則勾號將出現在方塊中，予以標記。
- 4 如要取消標記某圖像，只要再次選擇該圖像，以便勾號從方塊中消失。
- 5 一旦標記所有適當圖像後，選擇選項之一，套用於所有圖像。

我的檔案

檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 依次選擇**選項**和**記憶體管理**。
- 3 選擇**手機記憶體**或**外置記憶體**。

注意: 若您尚未插入記憶咭，您就無法選擇外置記憶體。

聲音

我的聲音資料夾包含錄音記錄和預設聲音。您可在此處管理或將聲音設定為鈴聲。

使用聲音

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的聲音**。
- 2 選擇**預設聲音**或**錄音記錄**。
- 3 選擇某一聲音，並選擇播放開始收聽。
- 4 選擇**選項**，然後選擇使用方式。
- 5 從鈴聲、訊息提示音、開機、關機聲音中選擇。

影片

影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。


觀看影片

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的影片**。
- 2 選擇影片，然後按播放。

在觀看影片時使用選項

在暫停模式下選擇**選項**，並從以下選項進行：

橫向檢視 - 在橫向模式下檢視影片。

注意: 在檢視影片期間，您可以使用  鍵切換至「橫向檢視」或者從「橫向檢視」切換為正常檢視。

靜音/取消靜音 - 開啟/關閉聲音。

擷取 - 您可將屏幕上的暫停圖像儲存為一個圖片檔。（此選項僅當暫停影片時可用。）

重複 - 重複視像檔案。

檔案資訊 - 檢視檔案的詳細資訊。

發送 - 透過訊息、電子郵件或藍芽發送影片。

發送錄像片段

- 1 選擇一影片，然後選擇**選項**。
- 2 選擇**發送**並從訊息、電子郵件或藍芽中進行選擇。
- 3 若選擇訊息或電子郵件，則影片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啟藍芽，並搜尋要向其發送影片的裝置。

使用影片選項功能表

從我的影片資料夾中，您可以選擇以下選項之一：

發送 - 向好友發送影片。

移動 - 將錄像片段從手機記憶體移至外置記憶體，反之亦然。

複製 - 將錄像片段從手機記憶體複製至外置記憶體，反之亦然。

刪除 - 刪除影片。

標記/取消標記 - 選擇多個檔案。

我的檔案

檔案 - 重新命名檔案或檢視檔案資訊。

建立新資料夾 - 在我的影片資料夾內建立新資料夾。

排序方式 - 按特定順序排列影片。

多格子/列表檢視 - 以多格子或列表類型檢視選項功能表。

記憶體管理 - 檢視記憶體狀態。

我的遊戲及應用程式

您可以將遊戲及應用程式下載到手機上，以便使用其打發空閒時間。

從網絡下載遊戲後，您需要先將下載的遊戲到手機，然後才可玩。

玩遊戲

- 1 在備用屏幕中，按 **OK**，然後選擇「遊戲及應用程式」。
- 2 選擇「我的遊戲及應用程式」，然後選擇「遊戲」。
- 3 選擇一款遊戲，並按啟動。

使用遊戲選項功能表

在我的遊戲及應用程式資料夾中，以下選項可用：

建立新資料夾 - 在我的遊戲和應用程式功能表中建立資料夾。

排序方式 - 按日期、大小或名稱來排序遊戲及應用程式。

檔案資訊 - 顯示所選遊戲的資訊。

記憶體管理 - 檢視記憶體狀態。

檢視應用程式

使用應用程式功能表，您可管理安裝在手機上的 Java 應用功能。您亦可刪除已下載的應用功能。

- 1 在備用屏幕中，按 **OK**，然後選擇「遊戲及應用程式」。
- 2 選擇**我的遊戲及應用程式**並依次選擇**應用程式**。
- 3 檢視並管理擁有的任何應用程式。

變更網絡設定

要下載遊戲，您可設定數值，使用網絡設定，連接到網絡。

- 1 在備用屏幕中，按 **OK**，然後選擇「遊戲及應用程式」。
- 2 選擇**設定**。

- 3 在此處您可以：

網絡設定 - 您可查看設定檔和新增設定檔。

憑證列表 - 您可查看設定檔。

安裝 Java 遊戲及應用程式

如 Java 遊戲等所有基於 Java 的程式均可進行下載並執行於手機上，具體取決於服務供應商。您可使用藍芽、USB 大容量儲存或外置記憶體，將 Java 程式檔案從相容電腦傳輸到手機記憶體。Java 程式檔案的格式為 .jad 或 .jar。

若將 Java 程式檔案儲存在手機中，則在使用 Java 遊戲或應用程式前，您應先安裝檔案。

我的檔案

若要安裝 Java 遊戲及應用程式：

- 1 從備用屏幕按確定並選擇我的檔案，然後選擇其他或我的記憶咭（若已插入外置記憶體）。
- 2 選擇要安裝的檔案（*.jad 或*.jar），並按**安裝**。

注意：格式為 .jad 的檔案應包含其自身的 .jar 檔案。

- 3 安裝完後，可在遊戲或應用程式功能表中檢視 Java 程式，您還可在此功能表中執行選擇、執行或刪除操作。

提示！ Y 您亦可使用 WAP（無線應用程式協定）服務將 Java MIDlet 下載至您的手機。請注意，使用線上服務可能需要額外付費。

Flash 內容

Flash 內容資料夾中包含您所有的預設及已下載 Flash 內容。

其他

此其他資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。

我的記憶咭

若插入記憶咭，則將顯示為**我的檔案**中的**我的記憶咭**。您可以使用記憶咭，擴展手機可使用的記憶體空間。

使用此功能表，您可以方便地瀏覽手機上的內容。選擇此功能表時，您可以檢視「Flash 內容」、「圖片」、「其他」、「播放列表」、「聲音」及「影片」。

記事簿

新增事項至日曆

- 1 從備用屏幕按 **OK** 並選擇**記事簿**。選擇**日曆**。
- 2 選擇要將事件新增至的日期。
- 3 選擇「選項」，然後選擇「新增事項」。
- 4 選擇要新增約會、週年紀念或生日。
- 5 檢查日期，並輸入開始事件的時間。
- 6 對於約會和週年紀念，請在下方兩個時間和日期方塊中輸入完成事件的時間和日期。
- 7 選擇**完成**，則您的事件將儲存至日曆中。方形游標會標記已儲存事項的日期，如設鬧鐘提示，事件開始時會響鈴。

提示! 您可以在日曆中設定假期。每次選擇假日中的一日，然後選擇選項並選擇設為假期。設為假期日為紅色。設定鬧鐘時，可選擇排除設定為假日的日期。

變更預設日曆檢視

- 1 從備用屏幕按從備用屏幕按 **OK** 選擇**記事簿**並依次選擇**設定**。
- 2 選擇日曆並選擇每月檢視或每星期檢視。
- 3 按**完成**以確認選擇。

新增項目至待辦事項

- 1 從備用屏幕按 **OK** 並選擇**記事簿**。
- 2 選擇**待辦事項**並選擇**新增**。
- 3 為待辦事項項目設定日期，新增備註並選擇重要性：高、中或低。
- 4 透過選擇**完成**，儲存待辦事項清單項目。

記事簿

提示! 選擇某個項目，並按「選項」和「編輯」，可編輯此項目。選擇「完成」，確認修改。

發送待辦事項項目

- 1 從備用屏幕按 **OK** 選擇記事簿並依次選擇待辦事項。
- 2 選擇要分享的待辦事項項目，然後選擇選項。
- 3 選擇以訊息發送。您可選擇按文字訊息、多媒體訊息、電子郵件或藍芽發送。

新增備忘錄

- 1 從備用屏幕按 **OK** 選擇**記事簿**並依次選擇**備忘錄**。
- 2 如果不存在任何的備忘錄，則選擇**新增**。
- 3 輸入備忘錄，然後按**儲存**。

- 4 下次開啟備忘錄應用程式時，備忘錄將顯示在屏幕上。

提示! 您可以編輯現有備忘錄。選擇要編輯的備忘錄並選擇編輯。

新增保密備忘錄

您可編寫保密備忘錄，以保護在保密備忘錄功能表中的私密。您可輸入安全密碼以使用此功能表。

使用日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。例如，2009年2月10日後的60天是2009年04月11日。非常適合搜尋時限。

設定

日曆 - 您可以設定檢視日曆的設定。

透過藍芽傳送所有行程表和待辦事項 - 您可以使用藍芽功能，將手機中的所有日曆及/或待辦事項資料發送給其他手機。

備份日曆及待辦事項 - 您可以在插入外置記憶體時，為儲存在手機中的日曆或待辦事項建立備份檔案。

還原日程表和待辦事項 - 您可以在插入外置記憶體時，重新設定日曆或工作的備份檔案。

記憶體資訊 - 您可檢視與日曆、待辦事項、備忘錄和保密備忘錄相關的可用記憶體資料。


清除全部 - 您可以刪除日曆、待辦事項、備忘錄及保密備忘錄中的所有數據。

工具

新增快選功能表

快選功能表讓您能夠快速存取常用的功能。您可以將您最愛的功能表新增至快選功能表。



設定鬧鐘

- 1 從備用屏幕按 **OK** 選擇**工具**及**鬧鐘**。
- 2 選擇**選項**並依次選擇**新增**。
- 3 設定鬧鐘響鈴的時間。
- 4 選擇鬧鐘的響鬧日期：每天、星期一至星期五、星期一至星期六、假日除外、選擇日子或不重複。
- 5 選擇  和**編輯**，為鬧鐘選擇聲音。
- 6 為鬧鐘新增備忘錄，並在完成鍵入後。鬧鐘響鈴後，備忘錄將出現。
- 7 最後，您可將延後間隔設定為 5、10、20、30 分鐘、1 小時或關閉。

- 8 完成鬧鐘設定後，選擇**完成**。

注意: 您最多可設定 5 個鬧鐘。手機關機時，鬧鐘亦能響鈴。

使用計算機

- 1 從備用屏幕按 **OK** 選擇**工具**及**計算機**。
- 2 選擇數字鍵以輸入數字。
- 3 對於簡單的計算，請選擇所需的功能 (+, -, x, ÷)，然後按 =。
- 4 對於更複雜的計算，請選擇**選項**以選擇相應的指令。
- 5 選擇  刪除一個字元，或按住  返回屏幕，開始新計算。

使用秒錶

- 1 從備用屏幕按 **OK** 選擇**工具**及**秒錶**。
- 2 選擇**開始**開始使用秒錶。

- 3 如果要記錄圈速，請選擇以分段。
- 4 選擇**停止**結束計時器。
- 5 選擇恢復，在上次停止的時刻處重新啟動秒錶或選擇重新設定重新開始計時。

轉換單位

- 1 從備用屏幕按 **OK** 選擇**工具及單位轉換器**。
- 2 選擇要轉換匯率、面積、長度、重量、溫度、體積還是速度。
- 3 您現在可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。
- 4 對應值將顯示於屏幕上。

新增城市至世界時間

- 1 從備用屏幕按 **OK** 選擇**工具及世界時間**。
- 2 依次選擇**選項**和**新增城市**。開始鍵入所需的城市名稱，且其將顯示於屏幕的頂端。或者，選擇地圖，並從地圖選擇所選城市。
- 3 按**選擇**以確認選擇。

提示！ 如果您在國外，可透過依次選擇「選項」和「變更城市」，從「世界時間」變更您的時區。按照上述方法選擇相應的城市。

瀏覽器

使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。

另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

存取網絡

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**瀏覽器**。或者，選擇輸入網址並鍵入所需的網址，然後按**開啟**。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。

Google

要存取 Google 服務，從備用屏幕按 **OK** 並依次選擇 **Google**。

注意：在部份地區或國家，您可能無法存取 Google。具體取決於網絡服務。

新增並存取書籤

為了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**。
- 2 選擇**書籤**。書籤列表顯示在屏幕上。
- 3 要建立新資料夾，請依次選擇**選項**及建立新資料夾。為書籤資料夾輸入名稱。
- 4 要新增書籤，請選擇**選項**，然後按新增。依次輸入書籤標題和連結。
- 5 選擇**完成**。此時，書籤將顯示於書籤列表中。
- 6 要存取書籤，只需要選擇此書籤，然後選擇**開啟**。

儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇選項並選擇儲存項目- 儲存此網頁。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 選擇**儲存**。

提示! 此功能表亦讓您編輯儲存的網頁標題，保護或取消保護屏幕備忘錄並刪除儲存的網頁。

存取已儲存的網頁

- 1 從備用屏幕按 **OK**，並選擇**瀏覽器**。
- 2 選擇**儲存的網頁**。
- 3 選擇**開啟**，連接到已儲存的頁面。

檢視瀏覽器記錄

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**，然後選擇**記錄**。
- 2 最近存取的網頁標題清單會顯示。
- 3 要存取這些網頁中的一個，只要選擇所需的網頁並按**開啟**即可。

瀏覽器

使用 RSS 讀取裝置

RSS (Really Simple Syndication)是網絡收取點 格式成員之一，用於發布經常更新的內容，如 blog 內容、新聞標題或 podcasts。RSS 文件也稱為 收取點、網絡收取點 或頻道，包含來自關聯網站的內容概要或完整文字。

變更網頁瀏覽器設定

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**，然後選擇**設定**。
- 2 您可選擇編輯網絡設定、外觀設定、快取記憶、Cookies、安全或重設設定。
- 3 變更設定後，選擇 OK。

連接

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要 USB 線，且連線方便快捷。您亦可連接手機到藍芽，以接聽來電。

發送檔案：

- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇「選項」並選擇發送。選擇藍芽。
- 3 選擇是開啟藍芽。
- 4 GD330 手機將自動搜尋範圍內其他已啟動藍芽的裝置。
- 5 選擇要將檔案發送至的裝置，然後選擇發送檔案。
- 6 您的檔案將會送出。

提示! 留意進度列，確保檔案已發送。

接收檔案：

- 1 接收檔案前，藍芽必須均設定為開啟和可見。詳情請參閱以下的變更藍芽設定。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇是接收檔案。
- 3 您可查看到儲存檔案的位置且選擇檢視檔案。檔案通常儲存到我的檔案中相關資料夾。

變更藍芽設定：

- 1 在備用屏幕上按 **OK**，然後選擇**連接**。
- 2 依次選擇**藍芽**和**設定**。對以下選項作出變更：

顯示我的手機 - 選擇可見、隱藏或可見時間為1分鐘。

連接

我的裝置名稱 - 為 GD330 手機輸入名稱。

支援的服務 - 檢視 GD330 支援的設定檔。

我的位址 - 檢視您的藍芽裝置地址。

同其他藍芽裝置配對

透過將 GD330 手機同其他裝置配對起來，您可設定一個密碼保護連接。

這意味著配對會更安全。

- 1 檢視藍芽是否為開啟和可見。您可在設定功能表中變更您的可見狀態。
- 2 選擇「配對裝置」，然後按「新增」。
- 3 您的 GD330 手機將搜尋裝置。搜尋完成後，屏幕上會顯示更新和新增。

4 選擇要配對的裝置並輸入密碼，然後按新增。

5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的密碼。

6 密碼保護藍芽連線已準備就緒。

使用藍芽耳機

- 1 檢視藍芽是否為開啟和可見。
- 2 遵循隨手機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 選擇是以立即連接。GD330 手機將自動切換到耳機情景模式。

將手機用作大容量儲存裝置

您的手機可用作大型儲存裝置。


- 1 中斷電腦與手機之連接。
- 2 從備用屏幕按 **OK**。
- 3 選擇**連接**，然後選擇 **USB 連接模式**。
- 4 顯示**大容量儲存**並按**選擇**。
- 5 將手機連接到電腦。手機將被讀取：大容量儲存 "已連接" 並顯示。數據傳送期間，請勿中斷連接。

注意：當選擇大容量儲存，手機必須重新連接到電腦以啟動大型儲存裝置。


設定

變更您的情景模式


在此資料夾內，您可調整各項設定，以便讓此 GD330 可彰顯您的個性。

您可以在備用屏幕中快速變更您的情景模式。只需要按 ，然後選擇要啟用的情景模式。

使用設定功能表，您便可編輯每種情景模式設定。

- 1 從備用屏幕按 。
- 2 選擇**設定**並選擇**情景模式**，然後選擇您要編輯的情景模式。靜音情景模式只可編輯震動提示。
- 3 選擇**選項**並選擇**編輯**。
- 4 然後，您便可變更清單中的所有可用聲音和提示選項，包括鈴聲及音量、訊息提示、按鍵音設定等。

使用飛航模式


從備用屏幕按  選擇設定，然後選擇情景模式並選擇飛航模式，並按  予以啟用。

在飛航模式中，您不可撥打電話、連線到互聯網、發送訊息或使用藍芽。

注意：在飛航模式中，可透過手動選擇相應選項來打開藍芽。

變更電話設定

您可隨意變更 GD330，以便以最適合於您的方式使用。

- 1 從備用屏幕按  並選擇**設定**。
- 2 選擇**手機**並從以下清單中選擇：

觸控板震動 - 開啟或關閉觸控板震動。

語言 - 變更 GD330 的顯示語言。

電源節省 - 選擇開啟或關閉省電設定。

資訊 - 檢視 GD330 手機的技術資訊。

變更屏幕設定

- 1 從備用屏幕按 **OK** 並選擇設定。
- 2 選擇**屏幕**，然後從以下選項中選擇：

屏幕主題 - 選擇桌面、開機或關機時的畫面。

功能表式樣 - 選擇用於顯示功能表的樣式。

撥號 - 設定撥號字體顯示。

字體 - 調整字體大小。

背光燈 - 選擇背光燈的持續時間。

注意: 背景燈開啟時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

手機主題 - 快速變更屏幕的整個外觀。

問候語訊息 - 輸入手機開機時的問候訊息。

- 3 選擇**選擇**予以儲存設定。

使用日期和時間

- 1 從備用屏幕按 **OK** 並選擇設定。
- 2 選擇**日期及時間**。

調整您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。

變更安全性設定

- 1 從備用屏幕按 **OK** 並選擇設定。
- 2 選擇**安全**並從以下清單中選擇：

PIN 碼要求 - 設定手機，以便在開機時要求輸入智能咭的 PIN 碼。

設定

手機鎖 - 設定手機鎖，避免無授權使用。您將需要一個安全密碼。

更改密碼 - 變更密碼：PIN / PIN2 / 安全密碼 / 手機追蹤密碼。

提示！自動亮度控制

將自動亮度設定為開啟後，手機內置的 ALC（自動亮度控制）感應器將會自動設定 LCD 屏幕的亮度。自動亮度控制將根據周圍環境亮度來自動調整屏幕亮度。GD330 的智能亮度控制，讓您在光亮環境下也可以看到清晰的屏幕，而在黑暗環境中則讓屏幕亮度變得柔和不刺激眼睛，同時有助於節省電池電源。在預設情況下，自動亮度功能處於關閉狀態。

手機遺失追蹤 - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。要啟用手機遺失追蹤功能，您需要開啟手

機遺失追蹤，然後在手機遺失追蹤設定中設定名稱、主要號碼及次要號碼。

預設手機遺失追蹤碼是「0000」。手機遺失追蹤訊息包含這些資料：被盜手機的 IMEI、目前所在位置（以地區廣播訊息形式擷取）及目前正在使用此手機的使用者的電話號碼。

使用記憶體管理

GD330 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。

您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

從備用屏幕按 **OK** 並選擇**設定**。然後選擇**記憶體管理**。

手機共用記憶體 - 檢視 GD330 手機上可用於圖像、聲音、影片、Flash 內容、多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。

手機預留記憶體 - 查看手機上可用於文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、通話記錄、書簽和其他記憶體。

智能咭記憶體 - 查看智能咭上可用的記憶體。

外置記憶體 - 檢視可用於外置記憶咭的記憶體（您可能需要另行購買記憶咭）。

主要儲存裝置設定 - 選擇「手機記憶體」或「外置記憶體」。

變更其他設定

網絡 - 您的 GD330 會自動連線至您的首選網絡。使用此功能表可變更這些設定。

互聯網設定 - 設定設定檔，連接到互聯網。

存取點 - 您的網絡商已經為您儲存此資訊。您可以使用此功能表來新增存取點。

分組數據連線 - 設定分組數據連線。

重設設定 - 選擇此選項，可將您的手機重設為預設設定。您將被要求輸入安全密碼。

手機軟件更新

LG Mobile 網上手機軟件更新

請瀏覽 [LGmobile.com](http://www.lgmobile.com) 以取得更多資訊及使用此功能

路徑: <http://www.lgmobile.com>
選擇國家／地區手冊及軟體

閣下不需親臨我們的服務中心就可以方便地在網上更新您的手機軟件至最新版本。由於更新手機軟件期間，需要用戶專注於整個更新過程，所以懇請閣下在確定繼續每一個步驟之前，檢查任何操作指示及註釋。在更新過程期間，若移除數據傳輸線或電池，有可能會嚴重地損毀您的手機。

根據適用法例的最大容許程度，在更新過程中流失的任何資料及數據，製造商恕不負責。軟件更新有機會令個人資料刪除，為安全起見，建議您於進行更新前先將重要的資料備份。

配件

以下配件隨 GD330 手機一併提供。有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

充電器



USB 線及光碟

在 GD330 和電腦間建立連接並進行同步。



電池



使用手冊

了解更多 GD330。

免提耳機



注意

- 只可用原裝 LG 配件。不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商了解更多詳情。

網絡服務

本手冊所述之無線電話經認可可用於 GSM 850、GSM 900、DCS 1800 及 PCS 1900 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術資料

一般

產品名稱: GD330

系統: GSM 850 / GSM 900 /
DCS 1800 / PCS 1900

環境溫度

最高: +55°C (放電),
+45°C (充電)

最低: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850/ GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GD330

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

16, Dec, 2008


Signature of representative

疑難排解

本章列出了您在使用手機過程中可能會遇到的一些問題。部份問題可能需要諮詢服務供應商, 而絕大部份的問題都可自行輕鬆解決。

訊息	可能原因	可用解決方法
智能咭錯誤	手機中無智能咭, 或插入方式不正確。	請確保智能咭正確插入。
無網絡	訊號較弱 位於 GSM 網絡服務範圍外	舉高手機面向窗口或移到開闊的位置。諮詢服務供應商,瞭解服務區域地圖。
無法設定功能	服務供應商不支援此功能或功能需要註冊	聯絡服務供應商。
無法撥打電話	撥號錯誤 新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。查看新的限制條款。聯絡服務供應商或使用 PIN 2 碼重設限制。
無法開機	按開/關鍵時間太快 電池沒電 電池觸片不潔淨	按開/關鍵至少兩秒鐘。為電池充電。檢查屏幕充電指示器。清潔觸片。

疑難排解

訊息	可能原因	可用解決方法
充電錯誤	電池完全無電 不在適當溫度範圍內 接觸問題 電源無電 充電器故障 使用不當充電器 電池故障	為電池充電。 確定室溫合適,稍候再充電。 檢查電源以及與手機的連接。檢查電池觸片,必要時進行清潔。 插入到其他插座或檢查電壓。 如果充電器沒有反應,請更換充電器。 只可使用原廠 LG 配件。更換電池。
手機失去網絡連接	訊號太弱	自動重新連接到其他服務供應商。
號碼不 准許	固定撥號功能已開啟。	檢查設定。
LCD 變暗	電力不足 電池電量將耗盡時, LCD 屏幕將會變暗以減少電力消耗。	請為電池充電。



视话机软件或服务提供商而定，
本手册中的部分内容可能与您的
手机有所不同。

GD330 用户手册

内容

关于安全有效使用手机的准则	6	电话本	25
开始了解您的手机	11	搜索联系人	25
安装 SIM 卡和电池	13	从主菜单	25
存储卡	15	添加新联系人	25
安装存储卡	15	联系人选项	26
格式化存储卡	15	创建群组	27
菜单地图	16	使用服务号码	27
待机屏幕	18	本机号码	27
触式键盘	18	创建名片	27
状态栏	19	更改电话本设置	28
通话	20	信息	29
拨打语音电话	20	信息	29
从电话本拨打电话	20	发送信息	29
拨打国际电话	20	输入文本	30
接听和拒绝电话	20	英文字词典模式(T9 预测模式)	30
快速拨号	21	ABC 手动模式	31
拨打第二个电话	21	123 模式	31
查看通话记录	22	设置电子邮件	31
使用呼叫转接	22	检索电子邮件	33
使用呼叫限制	23	使用新帐户发送电子邮件	33
使用固定拨号	23	信息文件夹	34
使用呼叫等待	23	管理信息	34
更改常用通话设置	24	使用模板	35
		使用图释	35
		更改文本信息设置	35
		更改多媒体信息设置	36

更改电子邮件设置.....	36	删除播放列表.....	45
更改其它设置.....	37	收听收音机.....	45
相机.....	38	搜索电台.....	45
快速拍照.....	38	编辑频道.....	46
拍照后.....	38	重置频道.....	46
使用快速设置.....	38	使用录音机.....	47
使用高级设置.....	39	发送录音.....	47
调整亮度.....	39	我的文档.....	48
选择拍摄模式.....	39	图像.....	48
更改图像大小.....	40	“我的图像”选项菜单.....	48
查看保存的照片.....	40	发送照片.....	49
将照片设为主屏或联系人图像.....	40	使用图像.....	49
摄像机.....	41	管理图像.....	49
快速摄像.....	41	删除图像.....	50
拍摄视频后.....	41	移动或复制图像.....	50
使用快速设置.....	41	标记或删除标记图像.....	50
使用高级设置.....	42	查看内存状态.....	51
观看保存的视频.....	42	声音.....	51
多媒体.....	43	使用声音.....	51
Music.....	43	视频.....	51
播放歌曲.....	43	观看视频.....	51
播放音乐时使用选项.....	43	观看视频时使用选项.....	52
创建播放列表.....	44	发送视频剪辑.....	52
编辑播放列表.....	44	使用视频选项菜单.....	52
		我的应用程序.....	53

内容

玩游戏.....	53	浏览器.....	61
查看应用程序.....	54	访问网页.....	61
更改网络设置文件.....	54	Google.....	61
安装 Java 游戏和应用程序.....	54	添加并访问书签.....	61
Flash 内容.....	55	保存页面.....	62
其它.....	55	访问保存的网页.....	62
外部存储器.....	55	查看浏览器历史记录.....	62
管理器.....	56	使用 RSS 阅读器.....	63
将事件添加到日程表中.....	56	更改网络浏览器设置.....	63
更改默认日程表视图.....	56	连接.....	64
向任务列表添加项目.....	56	使用蓝牙发送和接收文件.....	64
更改任务项.....	57	与其它蓝牙设备配对.....	65
添加备忘录.....	57	使用蓝牙耳机.....	65
使用私人备忘录.....	57	将手机用作大容量存储器设备.....	66
使用日期计算器.....	57	66
设置.....	58	设置.....	67
工具.....	59	更改情景模式.....	67
添加快速菜单.....	59	使用飞行模式.....	67
设置闹钟.....	59	更改手机设置.....	67
使用计算器.....	59	更改屏幕设置.....	68
使用秒表.....	60	使用日期和时间.....	68
换算单位.....	60	更改安全性设置.....	68
向世界时间添加城市.....	60	使用内存管理器.....	69
		更改其它设置.....	70
		手机软件升级.....	70

配件	71
网络服务.....	72
技术参数.....	72
故障排除.....	74

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下无线电波暴露和“特定吸收率”(SAR)信息

此款 GD330 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十(10)克薄纸。

- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.467 W/kg（10克），戴在身体上时，其值为 0.842 W/kg（10 克）。

- 电气电子工程师协会 (IEEE)建议的 SAR 上限值为 1.6W/kg，平均值超过一(1)克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。

- 手机可能会对某些助听器造成干扰。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

关于安全有效使用手机的准则

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。行车安全 查阅有关在驾驶时使用手机的本地法律法规。
- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。

- 当车辆配备气囊时，不要让安装的便携式无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线装置可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于浴室之类的高湿环境中使用。

关于安全有效使用手机的准则

- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 请按制造商的说明处置用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

开始了解您的手机

主 LCD

- **顶部：**信号强度、电池电量及其它功能。
- **底部：**我的文档/菜单/电话本指示。

左软键/右软键

执行显示屏底部所示的功能。在待机模式下，按左软键打开“我的文档”单。按右软键连接“电话本”。

多任务键

打开多任务菜单。

通话键

拨打电话号码并接听来电。



自动发光控制传感器

根据周围亮度自动调整屏幕亮度。

导航键

- **在待机模式下：**

- 快速菜单
- 联系人列表
- 信息
- 情景模式

- **在菜单中：**在菜单间导航。


清除键

- **写字符时：**按一次清除一个字符。
- **屏幕待机时：**播放最近听过的音乐。如果手机中不存在该文件，屏幕上将显示通知信息。

结束/电源键

挂断或拒接来电。开机/关机。按一次返回待机屏幕。

开始了解您的手机

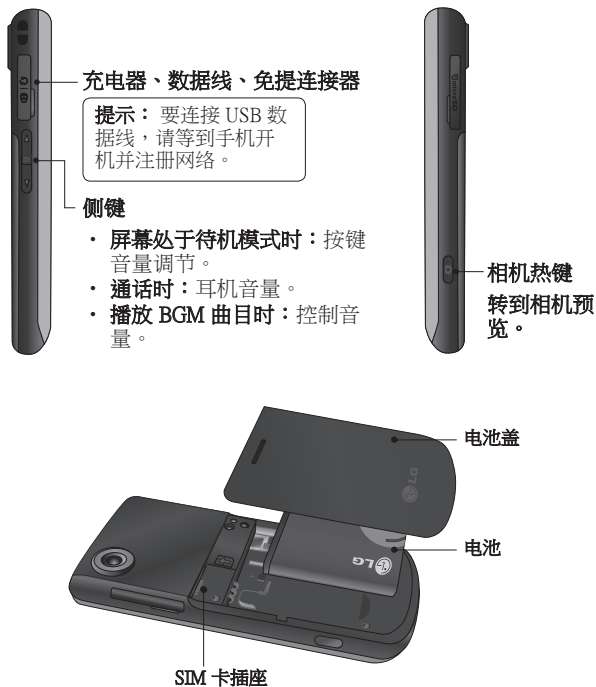

安装 SIM 卡和电池

1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。



2 取出电池

抬起电池底边，小心将电池从电池室取出。




警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿相反的方向轻推。

警告：不要在手机打开过程中替换或取出存储卡，否则，数据将丢失，存储卡会被损坏。

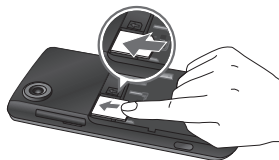

安装 SIM 卡和电池

4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。



5 像前面一样替换电池盖

将电池盖沿手机顶部滑动，直到卡入到位。

6 充电

打开 GD330 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，GD330 充电才完成。



存储卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。

提示： 存储卡是可选配件。

- 1 将存储卡滑入插槽，直到卡入到位。确保金色接触区域面朝下。



格式化存储卡

如果已格式化存储卡，您可以开始使用。如果未格式化存储卡，您需要先进行格式化。

- 1 从待机屏幕中按 **OK**，选择“设置”。
- 2 选择“内存管理器”，然后选择“外部存储器”。
- 3 选择格式，然后确认选择。
- 4 输入密码（如果已设置，密码默认为 0000。）以格式化存储卡，现在，您可以使用该存储卡了。

备注： 默认安全密码设为“0000”。

提示！ 要更改默认存储位置，请从“手机设定”菜单选择“主存储器设置”，以打开“内存管理器”。

备注： 如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将自动保存到“我的视频”文件夹中。

菜单地图



游戏和应用程序

1. 我的应用程序
2. 赛车游戏
3. 设置



呼叫

1. 通话记录
2. 通话时间
3. 数据量
4. 通话费用
5. 呼叫转接
6. 呼叫限制
7. 固定拨号
8. 呼叫等待
9. 通话设定



管理器

1. 日程表
2. 任务
3. 备忘录
4. 私人备忘录
5. 日期计算器
6. 设置



多媒体

1. 相机
2. 摄像机
3. 音乐
4. FM 收音机
5. 语音备忘录



Messaging

1. 创建新信息
2. 收件箱
3. 邮箱
4. 草稿箱
5. 发件箱
6. 已发送
7. 我的文件夹
8. 模板
9. 图释
0. 信息设置



我的文档

1. 我的图像
2. 我的声音
3. 我的视频
4. 游戏和应用程序
5. Flash 内容
6. 其它
7. 外部存储器
8. 内存浏览器



Google



Contacts

1. 新增
2. 搜索
3. 快速拨号
4. 群组
5. 服务号码
6. 本机号码
7. 我的名片
8. 设置



Tools

1. 快速菜单
 2. 闹钟
 3. 计算器
 4. 秒表
 5. 换算器
 6. 世界时间
 7. SIM 服务(视乎不同网络商)
- *此功能视 SIM 卡和网络服务而定。



浏览器

1. 主页
2. 输入地址
3. 书签
4. RSS 阅读器
5. 保存的网页
6. 历史记录
7. 设置



连接

1. 蓝牙
2. USB 连接模式



Settings

1. 情景模式
 2. 手机
 3. 显示
 4. 日期和时间
 5. 网络
 6. 互联网设置
 7. 存取点
 8. 分组数据连接
 9. 安全性
 0. 内存管理器
- *. 恢复初始设定

待机屏幕

在此，您可以访问菜单选项、快速拨打电话和更改情景模式，以及其它一些操作。

触式键盘

屏幕下的触式键盘可用作左/右软键，以在手机菜单间导航。

- 无需大力按，触式键盘非常敏感，仅需轻触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。



状态栏





状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	多任务
	网络信号强度 (指示栏数不同)
	无网络信号
	电池电量空
	新文本信息
	新电子邮件
	闹钟已设置
	正在使用“标准”情景模式
	正在使用“静音”情景模式
	外部存储器
	呼叫被转接
	GPRS 可用
	正在使用 EDGE
	正在漫游
	蓝牙已启动
	来电被拒绝
	立即播放 BGM




通话

拨打语音电话



- 1 输入电话号码，包括完整区号。
要删除一个数字，请按 。
要删除所有数字，请长按 。
- 2 按  拨打电话。
- 3 按  或关闭手机以结束通话。

从电话本拨打电话



拨打在电话本中存有号码的联系人的电话非常方便。

- 1 按  从待机屏幕进入电话本列表。
- 2 选择要拨打电话的联系人。
- 3 按  拨打语音电话。
- 4 按  结束通话。

拨打国际电话


- 1 请长按  以输入国际前缀。“+”字符可作为国际接入码前缀。
- 2 输入国家代码、地区代码和电话号码。
- 3 按 。

接听和拒绝电话



- 电话响后，按  应答来电。
按左软键静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。
- 按  拒绝来电。

快速拨号


您可以为常用联系人指定快速拨号号码。

- 1 从待机屏幕中，按 ，然后选择“电话本”。
- 2 选择“快速拨号”。
- 3 语音邮箱已设为快速拨号 1。不能对此设置进行更改。选择任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的地址簿。按要指定到该号码的联系人电话号码一次，以选择该联系人。

拨打快速拨号号码：

- 按住指定的数字，按  或按 。
- 按住指定的号码，直到屏幕上显示该联系人。

拨打第二个电话

- 1 在初始通话过程中，按“选项”，然后选择“新增呼叫”。
- 2 拨打号码或搜索电话本（有关如何从电话本拨打电话的详情，请参阅第 19 页）。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 选择切换在不同呼叫之间切换。
- 6 要结束通话，请按“选项”选择“结束”，然后选择“所有通话”或“当前通话”。

备注：您需要对每通电话付费。

通话

查看通话记录

从待机屏幕中，按 **OK** 选择“呼叫”，然后选择“通话记录”。选择以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

未接来电 - 查看您没接到的所有电话的列表。

拨出电话 - 查看所有已拨打的电话的列表。

已接来电 - 查看所有已接来电列表。

提示！ 从任意通话记录中选择选项，然后选择“全部删除”删除选定的或所有录制项。

从待机屏幕中，按 **OK** 并选择“呼叫”。

选择以下选项中的一项或所有项：

通话时间 - 查看所有拨出和接听电话的时间。

数据量 - 查看所有已接收和发送数据的字节数。

通话费用 - 查看您拨打电话所产生的费用（此服务取决于网络，某些运营商不支持此服务）。

使用呼叫转接

- 1 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 2 选择“呼叫转接”。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 输入您要转接的号码。
- 5 选择“启动”以启动。

备注： 转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！ 要关闭所有呼叫转接，请选择全部停用。

使用呼叫限制

- 1 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 2 选择“呼叫限制”。
- 3 选择以下选项中的一项：
 - 所有拨出电话
 - 国际拨出电话
 - 国际漫游时拨打电话
 - 所有来电
 - 国际漫游时来电
 - 全部停用
- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

使用固定拨号

- 1 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 2 选择“固定拨号” 打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。启动后，仅可以使用手机拨打此号码列表中的号码。

使用呼叫等待

- 1 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 2 选择“呼叫等待”。当您有等待呼叫时会收到通知。

您可以保持第一个通话，接听第二个通话。（此功能仅在您的网络支持时可用。）

通话

更改常用通话设置

- 1 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 2 选择“通话设定”。在此，您可以修改以下设置：

拒接来电 - 选择打开或关闭，选择拒接所有来电、拒接来自特定组、联系人的来电；或拒接未注册号码（不在电话本中或禁显号码）。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。（此功能仅在您的网络支持时可用。）

自动重拨 - 选择开或关。

接听模式 - 选择是使用接受键、任意键接听电话还是打开手机时接听电话。

分钟提示 - 选择打开，在通话过程中每一分钟将听到一次提示音。

蓝牙接听模式 - 选择免提可使用蓝牙耳机接听来电，或选择手机在使用蓝牙耳机时按手机任意键接听来电。

保存新号码 - 选择“是”以保存新号码。


滑盖关闭设置 - 设置关闭滑盖时是否结束通话。

电话本

搜索联系人

有两种方式可搜索联系人：

从待机屏幕


- 1 从待机屏幕中，按  并选择“电话本”。
- 2 选择与您要查看的联系人姓名的第一个字母对应的字母。因此，对于“Home”，请选择 [abc] 并按 4 [GHI] 两次。

或者，使用更快捷的方式…


- 1 使用键盘输入您要查找的联系人姓名的前几个字母，然后选择“选项”。
- 2 选择“搜索电话本”。

提示！ 通过按“选项”并选择“群组搜索”，您可以按群组搜索。此时将显示您的所有群组列表。

从主菜单

- 1 从待机屏幕中，按  并选择“电话本”。
- 2 选择“搜索”，使用键盘输入您要查找的联系人姓名的前几个字母。
- 3 地址簿将列出与您输入的字母对应的联系人列表。

添加新联系人

- 1 从待机屏幕中，按  并选择“电话本”。
- 2 选择“新增”。
- 3 选择是将联系人保存到手机还是SIM卡。
- 4 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 5 输入以上相关信息，然后选择“保存”。

电话本

或者，使用更快捷的方式…

- 1 在待机屏幕上输入要保存的号码，然后选择“选项”。
- 2 选择“保存”或“添加到现有联系人”。
- 3 输入以上相关信息，然后选择“保存”。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用选项菜单：

- 1 打开您要使用的联系人。
- 2 按“选项”打开选项列表。在此，您可以：

发送信息 - 您可发送信息给联系人。

发送名片 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为文本信息、作为多媒体信息、通过电子邮件或蓝牙。

呼叫 - 呼叫联系人。

新增 - 您可新增联系人。

编辑 - 更改联系人的任何详细信息。

新增群组 - 选择新增群组。

标记/去除标记 - 选择多个联系人。

查找方式 - 您可以选择查找方式。

保存到 SIM 卡/手机 - 选择是移动或复制到 SIM 卡还是手机（取决于联系人的初始保存位置）。

删除 - 删除联系人。如果确定，请按“是”。

文本输入 - 您可以选择文本输入方式。

快速拨号 - 您可以为此联系人指定快速拨号数字。


创建群组

- 1 从待机屏幕中，按 **OK** 并选择“电话本”。
- 2 选择“群组”，然后按选择“选项”。
- 3 选择“新增群组”。
- 4 输入新群组的名称。
- 5 点触完成。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在地址簿中。

提示！ 您可以突出显示现有群组并按左软键来编辑它。选择以通过电话本向群组添加成员，编辑群组或删除群组。

使用服务号码

您可以查看由您的服务提供商分配的服务拨号号码 (SDN) (如果 SIM 卡支持)。此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后，按  呼叫服务。

本机号码

您可以查看本机号码。

创建名片

您可以通过选择“我的名片”和“添加”来创建自己的名片。输入姓名、号码、电子邮件和图像后，您可以在发送信息时将其用作名片。

电话本

更改电话本设置

您可以调整您的电话本设置，使地址簿符合您的需要。

- 1 从待机屏幕中，按 **OK** 并选择“电话本”。
- 2 选择“设置”。在此，您可以调整以下设置：

联系人列表设置 - 选择要查看的联系人的保存位置：手机+SIM卡、仅限手机、仅限SIM卡。您还可以选择先显示联系人的姓还是名，以及是否显示联系人图片。

复制 - 将联系人从SIM卡复制到手机，或从手机复制到SIM卡。选择是逐个还是全部执行此操作。

移动 - 其操作与“复制”相同，但联系人保存在移动目标位置。如果将联系人从SIM卡移动到手机，其将从SIM存储卡中删除。

通过蓝牙发送所有联系人 -

通过蓝牙将所有联系人信息发送到其它手机。

备份电话本 - 通过名片，您可以将手机中的所有电话本数据保存到外部存储器中。

恢复电话本 - 通过名片，您可以将外部存储器中的所有电话本数据恢复到手机内存中。

清空电话本 - 删除所有联系人。

内存资料 - 您可以查看手机或SIM卡上的剩余存储空间。

信息

信息

GD330 包含与短信（短信服务）、多媒体信息（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。按菜单，然后选择信息即可。

发送信息

- 1 从待机屏幕中，按 **OK**，选择“信息”，然后选择“创建新信息”。
- 2 选择“信息”以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器是一款直观易用的工具，它将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。

提示！ 当您在信息字段中输入的文本超过 1 页时，您可以选择是将短信还是彩信作为信息类型。如果要更改要发送信息的类型，请参阅“更改文本信息设置”中的“将长文本另发送为”。

- 5 点触“选项”，选择“插入”添加图像、视频、声音、符号、模板、图释、姓名和号码、新幻灯片、主题或其它（名片/日程表/备忘录/任务/我的名片）。
- 6 按“发送”。
- 7 输入电话号码，或搜索电话本选择联系人列表。您可以添加多个联系人。
- 8 按“发送”。


信息



警告：如果在信息编辑器中添加了图像、视频、视频、新幻灯片、主题、电话簿、我的名片或日程表将自动切换到彩信模式，您将需要支付相应的费用。

输入文本


您可以使用手机键盘输入字母数字字符。例如，在电话簿中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：英文字典模式(T9预测模式)、ABC手动模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

要在文本输入字段中打开 英文字典模式，请选择选项，然后依次选择输入法模式和英文字典模式。您可以通过按  在文本输入模式间切换。您会注意到，在显示屏右上角显示文本输入模式指示符。


在文本输入模式间切换。您会注意到，在显示屏右上角显示文本输入模式指示符。，选择一个符号，然后选择确定 。

按  以空格结束每个单词。

要删除字符，请按 。

英文字典模式(T9 预测模式)

英文字典模式(T9 预测模式)使用内置字典，根据您按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

备注： 键用于更改 T9 模式下电子词典的预想词。

如果所需单词没有出现，请点击“选项”，选择“添加至 T9词典”，然后使用 ABC 手动模式输入单词。您的单词将添加到词典中。

备注：您可以通过按选项，然后选择编写语言选择不同的 T9 语言。

ABC 手动模式

在此模式中，输入字母时，按标记着所需字母的键一次、两次、三次或更多，直到显示该字母。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

设置电子邮件

使用 GD330 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件账户非常快捷。

- 1 从待机屏幕按 **OK** 并选择“信息”，然后选择“设置”。
- 2 选择“电子邮件”，然后选择“电子邮件账户”。
- 3 如果还没有设置电子邮件帐户，您可以使用电子邮件设置向导设置一个电子邮件帐户。

电子邮件地址/密码 - 输入您的电子邮件地址和密码。

用户名 - 输入帐户用户编号。

邮箱类型 - 选择用于传输电子邮件的 Internet 协议类型是 IMAP4 还是 POP3。

接收服务器端口 - 输入接收（POP3 或 IMAP4）邮件服务器的 IP 地址或主机名。

发送服务器端口 - 输入发送（SMTP）邮件服务器的 IP 地址或主机名。

SMTP 认证 - 选择以激活发送邮件服务器的安全设置。

信息

如果 SMTP 认证为开，在您发送电子邮件时，发送服务器需要用户名和密码。

SMTP 用户名/SMTP 密码 -

输入电子邮件提供商提供的电子邮件地址和密码。（如果 SMTP 认证为开）

账户名称 - 输入参考此帐户的邮箱名称。

- 4 输入以上相关信息，然后选择“保存”。

现在，已经设置了您的账户，它将显示在“电子邮件”文件夹的账户列表中。

- 5 按“选项”可以编辑帐户工作方式。

标题 - 输入此账户的名称。

我的名称 - 输入您的名称。

用户名 - 输入账户的用户名。

密码 - 输入账户密码。

电子邮件地址 - 输入账户的电子邮件地址。

电子邮件回复地址 - 输入“回复”电子邮件地址。

发送邮件服务器 - 输入账户的详细信息。

接收邮件服务器 - 输入账户的详细信息。

最大接收大小 - 选择电子邮件的大小限制，最大为 1MB。

邮箱类型 - 输入邮箱类型：POP3 或 IMAP4。

保存到服务器 - 选择是否将电子邮件保存到服务器。对于 IMAP4 账户，始终保存副本。

保存已发送邮件至 - 选择是否保存 IMAP4 电子邮件。对于 POP3 账户，副本始终保存在手机中。

接入点 - 选择 Internet 接入点。

检索模式 - 选择“仅主题”或“全部”。

自动读取 - 选择是否自动提取新电子邮件。

高级设置 - 选择是否使用高级设置。

SMTP 端口号 - 通常为 25。

使用 SSL 发出 - 对于接收服务器，是选择是否使用 SSL。

接收服务器端口 - 通常，对于 POP3 账户为 110；对于 IMAP4 账户为 143。

使用 SSL 接收 - 对于接收服务器，是选择是否使用 SSL。

SMTP 认证 - 选择发送邮件服务器的安全设置。

SMTP 用户名 - 输入电子邮件提供商提供的电子邮件地址。（如果 SMTP 认证为“开”）

SMTP 密码 - 输入电子邮件提供商提供的电子邮件密码。（如果 SMTP 认证为“开”）

APOP 安全登录 - 选择可为 POP3 账户激活 APOP 安全登录。IMAP4 账户通常设置为“关闭”。

检索电子邮件

您可以自动或手动检查账户的新电子邮件。请参阅“更改电子邮件设置”以手动查看。

手动查看：

- 1 从待机屏幕中，按 **OK** 并选择“信息”，然后选择“电子邮箱”。
- 2 选择您要使用的账户。
- 3 选择“打开”，手机将连接到您的电子邮件账户并检索新邮件。

使用新帐户发送电子邮件

- 1 从待机屏幕中，按 **OK** 并选择“信息”，然后选择“创建新信息”。
- 2 选择电子邮件，此时将打开新电子邮件。

信息

- 3 使用选项卡和选项输入收件人的地址，然后写邮件。使用插入附加图像、视频、声音或其它类型的文件。
- 4 选择发送，您的电子邮件将被发送。

信息文件夹

收件箱 - 可檢視信息。

邮箱 - 所有收到的电子邮件将放置在电子邮箱中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在“已发送”文件夹中。

我的文件夹 - 您可以在此文件夹中管理信息。

管理信息

- 1 从待机屏幕中，按 **OK** 并选择“信息”，然后选择“收件箱”。

- 2 选择“选项”，然后选择：

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

呼叫 - 向发件人拨打语音电话。

创建新信息 - 打开新的空白信息或电子邮件。

删除 - 删除信息。

创建新信息 - 打开新的空白信息或电子邮件。

标记/去除标记 - 标记信息以执行多项删除。

复制和移动 - 将信息复制或移动到手机、SIM 卡或“我的文件夹”。

过滤器 - 按类型查看信息。这可以将短信和彩信分开。

信息资料 - 查看信息的其它信息，包括发送时间、接收时间及阅读报告。

如果看到信息“无空间接收 SIM 卡信息”，您应从 SIM 卡内存中删除一些信息。

如果看到信息“无空间接收信息”，您可以删除信息以腾出空间。

使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 从待机屏幕中，按 **OK** 并选择“信息”，然后选择“模板”。
- 2 选择“文本模板”或“多媒体模板”。然后，您可以选择“选项”新增、编辑、删除或全部删除模板。

使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。

- 1 从待机屏幕中，按 **OK** 并选择“信息”，然后选择“图释”。
- 2 选择“选项”以新增、编辑、删除或全部删除图释。

更改文本信息设置

GD330 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

从待机屏幕中，按 **OK** 并选择“信息”，然后选择“信息设置”和“文本信息”。您可以更改：

文本信息中心 - 输入信息中心的详细信息。

状态报告 - 选择可接收信息已发送确认信息。

信息

有效期 - 选择信息在信息中心中的最常保存时间。

信息类型 - 将文本转换为语音、传真、X.400 或电子邮件。

字符编码 - 选择字符编码方式，这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 当您在信息字段中输入的文本超过 2 页时，请选择是以短信还是彩信方式发送信息。

更改多媒体信息设置

GD330 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

从待机屏幕中，按 **OK** 并选择“信息”，然后选择“信息设置”和“多媒体信息”。您可以更改：

检索模式 - 选择是本地还是漫游网络。如果选择手动，那么您将会收到彩信通知，随后，您可以决定是否要完整下载该信息。

状态报告 - 选择是否允许请求状态报告。

已读回执 - 选择是否允许发送已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择信息模式。

发送时间 - 在指定时间发送信息。

多媒体信息中心 - 输入信息中心的详细信息。

更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

从待机屏幕按 **OK** 并选择“信息”，然后依次选择“信息”和“电子邮件”，随后，您可以对以下设置进行调整：

电子邮件帐户 - 输入此帐户的名称。

允许回复电子邮件 - 选择是否允许发送“读取确认”邮件。

请求回复电子邮件 - 选择是否要请求“读取确认”邮件。

检索间隔 - 选择 GD330 检查新电子邮件信息的频率。

检索数量 - 选择一次要检索的电子邮件数目。

在转发和回复中包含信息 - 选择是否要包含原始信息。

包含附件 - 选择可包含原始附件。

漫游时自动检索 - 选择在漫游时是否要自动检索信息。

新电子邮件通知 - 选择在收到新电子邮件时是否需要提示。

签名 - 创建电子邮件签名并打开此功能。

优先级 - 选择电子邮件信息的优先级级别。

更改其它设置

从待机屏幕中，按 **OK** 并选择“信息”和“信息设置”，然后选择：

语音邮件 - 您可以访问语音邮箱（如果网络提供）。当收到新的语音信息时，待机屏幕上显示相应符号。



服务信息 - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全。

小区服务 - 选择接收状态、语言和其它设置。

保存文本信息 - 选择要将文本信息保存到手机内存还是外部存储卡。

相机


快速拍照


- 1 按  相机键以打开取景器。
- 2 对相机对准要拍摄的对象。
- 3 对准要拍摄的对象，按 。


拍照后


拍好的照片将显示在屏幕上。在拍摄之后，您可以设定以下选项。


选项 - 您可以将文件编辑或重名。

 **相册** - 查看“相册”中保存的您拍摄的照片。

 **发送** - 通过多媒体信息、电子邮件或蓝牙。

 **新建** - 立即拍摄其它照片。将保存您的当前照片。

 **用作** - 将图像用作墙纸、联系人图像或开机或关机屏幕。

 **删除** - 删除拍摄的照片，按是确认。此时将出现取景器。

返回 - 返回上一个菜单。

使用快速设置

这包括适用于拍照的各种选项。使用导航键，选择您要使用的选项。

相册 - 按可以查看像册中的其它照片。将保存您的当前照片。

视频 - 选择以在相机或摄像机模式间切换。

拍照 - 允许您拍照。

亮度 - 设置相机取景器中图像的对比度。

定时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从 3 秒、5 秒或 10 秒中选择。当您也想在照片中占有一席之地时，此选项很有用！

使用高级设置

从取景器中选择设置，然后打开选项中的所有高级设置。

图像大小 - 更改保存在内存中的照片大小，或预设的拍摄照片的大小，使其大小适用于电话本。

色彩效果 - 选择色调以应用于拍摄的照片。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。

夜间模式 - 在黑暗场所拍照时可以打开闪光灯。

拍摄模式 - 从“正常”或“连拍”中选择。

图像质量 - 在标准、精细和超精细之间切换。

存储位置 - 选择是将照片保存到手机内存还是外部存储器。

隐藏图标 - 设置是否自动隐藏取景器边缘的图标。

快门声音 - 从三种快门声音中选择一种。

调整亮度

对比度定义图像的深浅差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 在设置中选择亮度。
- 2 沿滚动条滑动对比度指示器，“-”对应对比度更低、更模糊的图像，“+”对应对比度更高、更清晰的图像。

选择拍摄模式

- 1 选择设置打开可用拍摄模式。
- 2 从以下选项中进行选择：

标准 - 此为默认拍摄模式，照片将以标准方式拍摄。

连拍 - 这允许您快速地连续拍摄九张照片。

相机

更改图像大小

像素越高，文件越大，同时意味着将占用更多内存。如果要在手机或存储卡中保存更多图片，请更改像素大小，使文件更小。

- 1 从工具栏中选择分辨率。
- 2 从以下选项中选择像素值：
1600X1200,1280X960,640X480,320X240, contact.
- 3 选择您要使用的尺寸选项，按选择实施您所做的更改。设置菜单将自动关闭，您可以拍照了。

查看保存的照片

- 1 您可以通过相机模式或从待机屏幕访问保存的照片。从取景器中按相册。
- 2 屏幕上将显示您的相册。
- 3 再次选择该照片，完全打开。


将照片设为主屏或联系人图像

从相册中选择一幅图像，然后选择“用作”以将图像用作墙纸、联系人图像、开机图像或关机图像。

备注：联系人图像仅可添加到手机（不是 SIM 卡）中保存的联系人中。

摄像机

快速摄像


- 1 按相机键，并选择  并按 **OK** 以打开摄像机。屏幕上将显示摄像机的取景器。
- 2 将相机对准要录制的对象。
- 3 要开始录音，请按 **OK**。
- 4 **REC** 将显示在取景器的底部。再按 **OK** 停止可以停止录制。

拍摄视频后


屏幕上将显示所拍摄视频的静态图像。


在拍摄之后，您可以设定以下选项。


选项 - 可以更改视频剪辑的名称。

 **相册** - 查看摄像册。

 **播放** - 播放文件。

 **新建** - 按可以立即拍摄另一段视频。将保存您的当前视频。

 **发送** - 通过多媒体信息、电子邮件或蓝牙。

 **删除** - 删除您刚拍摄的视频，按“是”确认删除。此时将出现取景器。

返回 - 返回上一个菜单。

使用快速设置

从取景器使用导航键并选择要使用的选项。

相册 - 按可以查看摄像册中的其它视频剪辑。

相机 - 选择以切换到照相机模式。

记录 - 将显示在取景器的底部。再按 **OK** 停止可以停止记录。

亮度 - 对比度定义图像的深浅差别。

摄像机

使用高级设置

从取景器中选择设置，然后打开选项中的高级设置。

大小 - 更改保存在存储空间中的视频大小。

色彩效果 - 选择色调效果以应用于拍摄的照片。

白平衡 - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

质量 - 在超精细、精细和标准之间选择。

时间 - 从三种快门声音中选择一种。从取景器中选择设置，然后打开预览选项中的高级设置。

存储位置 - 选择是将视频保存到手机内存还是外部存储器。

隐藏图标 - 设置相机是否自动隐藏取景器侧面的图标。

语音 - 选择“静音”，录制视频而不录制声音。

备注: 要应用所做的更改，请始终在选择新设置后按“保存”。

观看保存的视频

- 1 您可以从摄像机模式或待机屏幕访问保存的视频。从取景器中按摄像册。从待机屏幕中按 **OK**，然后选择我的文档和视频。
- 2 再次选择该视频，完全打开。

多媒体

Music

GD330 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请从主菜单中选择音乐。您可以在此访问多个文件夹：

最近播放 - 查看您最近播放的所有歌曲。

所有曲目 - 包含手机中的所有歌曲。

播放列表 - 包含您创建的任何播放列表。



艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

随机曲目 - 以随机顺序聆听音乐。

播放歌曲

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“音乐”，然后选择“所有歌曲”。
- 2 选择您要播放的歌曲，然后选择“播放”。
- 3 按 **OK** 暂停歌曲。
- 4 按  跳到下一首歌曲。
- 5 按  跳到上一首歌曲。

播放音乐时使用选项

选择“选项”，然后从下列内容中选择：

最小化 - 隐藏音乐播放器屏幕，以便您可以继续照常使用手机。

转到我的音乐 - 转到音乐菜单。

重复 - 选择以重复选定曲目、关闭重复或重复所有曲目。

随机曲目 - 以随机顺序聆听音乐。

多媒体

均衡器 - 选择不同的预设均衡器。

视觉效果 - 选择视觉效果。

通过蓝牙收听 - 使用蓝牙耳机新彙选定音乐。（蓝牙耳机应支持MP3播放）

添加到播放列表 - 将文件添加到播放列表。

文件资料 - 查看选定歌曲的信息。

发送 - 通过多媒体信息、蓝牙或电子邮件向朋友发送选定的歌曲。

用作 - 将歌曲用作以下内容之一：铃声、信息提示音、开机或关机音。

创建播放列表

您可以从所有曲目文件夹中进行选择，以创建自己的播放列表。

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“音乐”，然后选择“播放列表”。

- 2 选择“添加”，输入播放列表名称，然后按 **OK** 保存。

- 3 此时将显示“所有曲目”文件夹。选择所有要包含在播放列表中的歌曲；这些歌曲名称旁边将显示一个勾号。

要播放播放列表，请选择列表，然后选择播放。

备注: 要另外添加一个播放列表，请选择选项，然后选择添加新的播放列表。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。要执行此操作，您可以编辑播放列表。

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“音乐”。
- 2 选择“播放列表”。
- 3 选择“选项”，然后选择：

新增歌曲 - 将更多歌曲添加到播放列表。标记所需的歌曲，然后选择完成。

发送 - 以信息形式或通过蓝牙发送歌曲。

从列表中删除 - 将歌曲从播放列表中删除。选择是确认。

标记/去除标记 - 选择多个文件。

用作 - 将歌曲用作以下内容之一：铃声、信息提示音、开机或关机音。

文件资料 - 查看歌曲的名称、大小、日期、时间、类型、长度、保护和版权。

储存管理器 - 您可以查看储存管理器。

删除播放列表

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“音乐”，然后选择“播放列表”。

- 2 选择“选项”，然后选择删除或全部删除从播放列表中删除歌曲。

收听收音机

LG GD330 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

从待机屏幕中，按 **OK** 选择“多媒体”。选择“FM 收音机”，选择您要收听的电台的频道编号。

备注: 要收听收音机，您需要插入耳机。将其插入您用来插入电器的同一个插槽。

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。

自动微调：



- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“FM 收音机”，然后选择“选项”。

多媒体

- 2 选择“自动扫描”，然后选择“是”。手机将自动为找到的电台分配一个频道编号。

手动微调：

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“FM 收音机”，然后选择“选项”。
- 2 输入电台频率，然后按选择以保存。
- 3 选择“设置”，然后选择要保存的频道。

备注：您也可以使用电台频率旁显示的  和  手动微调电台。

编辑频道

您可能想要将电台移至其它频道，以便更轻松地访问最常收听的电台。

- 1 从待机屏幕中，按 **OK**，选择“多媒体”。选择“FM 收音机”，然后选择“选项”。

- 2 选择“频道列表”，然后选择您要更改的频道。
- 3 您可以从其它频道中选择一个电台；也可以手动将频道微调至您所需的频率。

您可以通过突出显示来编辑每个频道，然后按“选项”：

重命名 - 重命名频道。

替换 - 为选定频道设置新频率。

重置频道

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。选择“FM 收音机”，然后选择“选项”。
- 2 选择“频道列表”，然后选择“选项”。
- 3 选择重置频道以重置当前频道，或选择重置所有频道以重置所有频道。

提示! 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

使用录音机

使用录音机录制语音备忘录或其它声音。

- 1 从待机屏幕中，按 **OK** 选择“多媒体”。
- 2 选择“语音备忘录”，然后选择“选项”并从以下内容选择：

时长 - 设置录音时长。从“彩信大小”、“30 秒”、“1分钟”或“无限制”中选择。

质量 - 选择声音质量。从“超精细”、“精细”或“标准”中选择。

存储位置 - 查看每个存储器的当前状态。

转至录音 - 在我的声音中打开“录音”文件夹。

- 3 选择 **OK** 开始录音。
- 4 选择“停止”可以结束录音。
- 5 选择“选项”中的播放收听录音。

发送录音

- 1 完成录音后，请选择“选项”。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。如果选择信息或电子邮件，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择蓝牙，手机可能提示您打开蓝牙。

备注: 完成录音后，请选择选项并从播放、发送、文件、删除、用作（将录音用作铃声）或转到我的声音中选择。

我的文档

您可以将任意多媒体文件存储到“我的文档”的手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

图像

我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

“我的图像”选项菜单

图片中可用的选项取决于您选择的图像类型。对于图片，所有选项可用。

发送 - 向朋友发送图像。

用作 - 设为在特定时间在手机上显示的图像。

移动 - 将图像从手机内存移到存储卡，或从存储卡移到手机内存。

复制 - 将图像从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除图像。

标记/去除标记 - 选择多个文件。

编辑图像 - 您可以编辑选定的图像。

通过蓝牙打印 - 通过蓝牙打印图像文件。

文件 - 更改文件名称或查看信息。

新建文件夹 - 在“图片”文件夹中创建一个新的文件夹。

幻灯片显示 - 开始显示幻灯片。

排序方式 - 按特定顺序排列图像。

网格视图/列表视图 - 以网格或列表类型查看每张图像。

内存管理器 - 查看内存状态。

发送照片

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择要发送的照片，然后按“选项”。
- 3 选择发送并从信息、电子邮件或蓝牙中选择。
- 4 如果选择信息或电子邮件，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将图片发送到的设备。

使用图像

您可以选择图像以用作墙纸、联系人图像、开机/关机图像。

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。

- 2 选择图像，然后按“选项”。
- 3 选择用作并从以下选项中选择：

墙纸 - 设为待机屏幕的墙纸。

联系人图像 - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。

开机 - 设为开机时显示的图像。

关机 - 设为关机时显示的图像。

管理图像

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择“选项”，然后选择“排序方式”。
- 3 从日期、类型或名称中选择。

我的文档

删除图像

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择要删除的图像，然后选择“选项”。
- 3 选择删除，然后选择是确认删除。

提示! 要快速删除“我的文件”中的任意文件，请选择该文件一次，通过光标使其突出显示，然后按 **C** 硬键。选择是确认。

移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。

- 2 选择图像，然后选择“选项”。
- 3 选择移动或复制。

标记或去除标记图像

如果您要一次移动、复制、发送或删除多张图像，首先，您需要通过打勾标记识别它们。

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择“选项”，然后选择标记/去除标记。
- 3 每张图像左侧将出现一个框。如果选择了图像，框中会显示一个打勾标记以对其进行标记。
- 4 要去除标记图像，请再次选择图像以取消勾选。
- 5 标记完所有图像后，请选择选项之一以应用到所有图像。

查看内存状态

您可以查看已用存储空间和剩余存储空间。

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择“选项”，然后选择“内存管理器”。
- 3 选择手机内存或外部存储卡。

备注: 如果您没有插入存储卡，则无法选择外部存储器。

声音

我的声音文件夹包含默认声音和录音。在此，您可以管理、发送或将声音设为铃声。

使用声音

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的声音”。
- 2 选择“默认声音”或“录音”
- 3 选择一个声音，选择播放试听。
- 4 选择“选项”，然后选择“用作”。
- 5 从来电铃声、信息提示音、开机声音和关机声音中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频


- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的视频”。
- 2 选择“视频”，然后按“播放”。

我的文档

观看视频时使用选项

在暂停模式下选择“选项”并从以下选项中选择：

风景视图 - 以完整拍摄模式观看视频文件。

备注: 查看视频时，使用  键可切换到风景视图，也可从风景视图切换到普通视图。

静音/取消静音 - 打开或关闭声音。

拍照 - 您可以将暂停屏幕上的内容保存为图像文件。（此选项仅在暂停视频时可用。）

重复 - 选择“关”、“一次”或“全部”。

文件资料 - 查看名称、大小、日期、时间、类型、长度、尺寸、保护和版权等详情。

发送 - 以信息、电子邮件形式或通过蓝牙发送视频。

发送视频剪辑

- 1 选择视频，然后选择选项。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。
- 3 如果选择信息或电子邮件，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

使用视频选项菜单

从我的视频文件夹，您可以选择以下选项：

发送 - 向朋友发送视频。

移动 - 将视频剪辑从手机内存移至存储卡，或从存储卡移至手机内存。

复制 - 将视频剪辑从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除视频。

标记/去除标记 - 选择多个文件。

文件 - 编辑文件名称并查看其信息。

新建文件夹 - 在“视频”文件夹中创建一个新的文件夹。

排序方式 - 按特定顺序排列视频。

网格视图/列表视图 - 以网络或列表类型查看选项菜单。

内存管理器 - 查看内存状态。

我的应用程序

您可以将游戏和应用程序下载到手机中，在闲暇时为您带来乐趣。

如果从网络下载游戏，您需要先将下载的游戏安装在手机上后才能玩。

玩游戏

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“游戏和应用程序”。
- 2 选择“我的游戏和应用程序”，然后选择“游戏”。
- 3 选择一款游戏，然后按“启动”。从“游戏和应用程序”文件夹下使用游戏选项菜单，此时将显示以下可用选项：

新建文件夹 - 在“游戏和应用程序”菜单下创建文件夹。

排序方式 - 按日期、大小或名称对游戏和应用程序排序。

文件资料 - 显示有关选定游戏的信息。

内存管理器 - 查看内存状态。

我的文档

查看应用程序

使用应用程序菜单，您可以管理安装在手机上的 Java 应用程序。您还可以删除下载的应用程序。

- 1 从待机屏幕中，按 **OK** 选择“游戏和应用程序”。
- 2 选择“我的应用程序”，然后选择“应用程序”。
- 3 查看并管理应用程序。

更改网络设置文件

要下载游戏，您可以使用网络设定设置值以连接网络。

- 1 从待机屏幕中，按 **OK** 选择“游戏和应用程序”。
- 2 选择“设置”。
- 3 在此，您可以：

情景模式 - 您可以查看情景模式并添加新的情景模式。

证书列表 - 您可以查看使用 Java 应用程序的证书列表。

安装 Java 游戏和应用程序

视服务提供商而定，所有基于 Java 的程序（如 Java 游戏）均可以下载到手机上并运行。使用蓝牙、USB Mass Storage 或外部存储器，您可以将 Java 程序文件从兼容的计算机传输到手机内存中。Java 程序文件的格式为 .jad 或 .jar。

如果您将 Java 程序文件保存在手机中，那么您应在使用 Java 游戏或应用程序之前先安装文件。

安装 Java 游戏和应用程序：

- 1 从待机屏幕中，按 **OK**，选择“我的文档”，然后选择“其它”或“外部存储器”（如果已插入外部存储器）。
- 2 选择您要安装的文件（*.jad 或 *.jar），然后按“安装”。

备注：.jad 文件应包含自己的.jar 文件。

- 3 一旦安装之后，即可以在“游戏或应用程序”菜单中查看、选择、执行或删除 Java 程序。

提示！ 您还可以使用 WAP（无线应用协议）服务在手机中下载 Java MIDlet。请注意，使用在线服务时可能会产生额外费用。

Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 Flash 文件。

其它

其它文件夹用于存储非图片、声音、视频、游戏或应用程序文件。

外部存储器

如果购买可选的外部 microSD 存储卡，则您可以管理更多内容。

使用此菜单，您可以轻松浏览手机内容。选择此菜单后，您可以查看 Flash 内容、图片、其它、播放列表、声音和视频。

管理器

将事件添加到日程表中

- 1 从待机屏幕中，按 **OK** 并选“管理器”，然后选择“日程表”。
- 2 选择您要添加事件的日期。
- 3 选择“选项”，然后选择“新增事件”。
- 4 选择是要添加约会、周年纪念还是生日，然后选择完成。
- 5 查看日期并输入事件开始的时间。
- 6 对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。
- 7 选择“完成”，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

提示！ 您可以在日历中设置假期。一次性选择您的假期所在日期，选择选项，然后选择设置假期。假期中的每一天都将变为红色。设置闹钟时，您可以将设为假期的日期排除在外。

更改默认日程表视图

- 1 从待机屏幕中，按 **OK** “管理器”，然后选择“设置”。
- 2 选择“任务”，按“选项”，然后选择月视图或周视图。
- 3 按“确定”以确认选择。

向任务列表添加项目

- 1 从待机屏幕中，按 **OK** 并选择“管理器”。
- 2 选择“任务”，然后选择“添加”。
- 3 为任务项设置日期、添加备注或选择优先级：高、中或低。

- 4 选择“完成”以保存任务列表项。

提示！ 您可以通过选择项目对其进行编辑，按选项，然后按编辑。选择“完成”以确认您所做的修改。

更改任务项

- 1 从待机屏幕中，按 **OK** 并选择“管理器”，然后选择“任务”。
- 2 选择您要共享的任务项，然后选择“选项”。
- 3 选择发送。您可以通过文本信息、多媒体信息、电子邮件或蓝牙共享任务项。

添加备忘录

- 1 从待机屏幕中，按 **OK** 并选择“管理器”，然后选择“备忘录”。

- 2 如果没有现有备忘录，请选择“添加”。
- 3 键入备忘录，然后选择“保存”。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

提示！ 您可以编辑现有备忘录。选择您要编辑的备忘录，然后选择编辑。

使用私人备忘录

您可以撰写私人备忘录以保护自己的隐私。您可以使用此菜单输入安全密码。

使用日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。例如，02.10.2009 后的 60 天是 01.12.2009。这有助于确保不误期。

管理器

设置

日程表 - 您可以对配置进行设置以查看日历。

通过蓝牙发送所有日程表和任务 - 使用蓝牙，您可以将日历和/任务列表中的所有数据，从手机发送到其它手机。

备份日历和任务 - 当您插入外部存储器时，可以为保存在手机中的日历或任务列表创建备份文件。

恢复日历和任务 - 插入外部存储器时，您可以恢复日历或任务的备份文件。

内存资料 - 您可以查看有关日历、任务、备忘录和私人备忘录的可用内存的相关信息。


全部清除 - 您可以删除与日历、任务、备忘录和私人备忘录有关的所有数据。

工具

添加快速菜单

使用“快速菜单”，可轻松进入常用功能。您可以将喜爱的菜单添加到快速菜单列表。

设置闹钟

- 1 从待机屏幕中，按 **OK** 选择“工具”，然后选择“闹钟”。
- 2 选择“选项”并选择“新建”。
- 3 设置您希望闹钟响起的时间。
- 4 选择闹铃是否要：每天响铃、周一 - 周五、周一 - 周六、周六 - 周三、周六 - 周日、周日 - 周四、周六 - 周日、节假日除外、选择日期或不重复。
- 5 选择  和“编辑”以选择闹钟铃声。
- 6 为闹钟添加备忘录，结束内容键入后，请选择“完成”。闹钟响起时，会显示备忘录。

7 最后，您可以设置暂停间隔：5、10、20、30 分钟、1 小时或关。

8 设置闹钟后，请选择“完成”。

备注：您最多可以设置 5 个闹钟。

即使手机关机，闹钟仍将在设置的时间响起。

使用计算器

- 1 从待机屏幕中，按 **OK** 并选择“工具”，然后选择“计算器”。
- 2 选择数字键输入数字。
- 3 对于简单计算，选择您所需的函数(+, -, x, ÷)，然后选择 =。
- 4 对于更复杂的计算，请选择函数以选择一个命令。
- 5 选择 **C** 清除屏幕，以开始一个新计算。

工具

使用秒表

- 1 从待机屏幕中，按 **OK** 并选择“工具”，然后选择“秒表”。
- 2 选择“开始”启动计时器。
- 3 如果要记录时间，请选择圈（记录）。
- 4 选择“停止”结束计时器。
- 5 选择“继续”从您停止的时间重新开始秒表，或选择“重设”重新开始计时。

换算单位

- 1 从待机屏幕中，按 **OK** 并选择“工具”，然后选择“换算器”。
- 2 选择要换算的内容：币种、面积、长度、重量、温度、体积或速率。
- 3 现在，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 4 屏幕上将显示相应的值。

向世界时间添加城市

- 1 从待机屏幕中，按 **OK** 并选择“工具”，然后选择“世界时间”。
- 2 选择“选项”，然后选择“添加城市”。开始键入所需城市的名称时，屏幕顶部即显示该城市。或者，选择地图，然后从地图中选择所需城市。
- 3 按“选择”以确认选择。

提示！ 如果出国，您可以通过选择更改，然后选择更改当前城市来更改世界时间的时区。如上所述选择所需城市，然后按“选择”。

浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

访问网页

- 1 从待机屏幕中按 **OK** 并选择“浏览器”。
- 2 要直接访问浏览器主页，请选择“主页”。或者，选择“输入地址”并键入所需的 URL，然后选择“打开”。

备注： 连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

Google

您可以连接到 Google 服务。要访问 Google 服务，从待机屏幕中按 **OK** 并选择“Google”。

备注： 您可以启动网络浏览器并访问由 Google 提供的网络服务的主页。有关详细信息，请联系您的服务提供商。在某些国家/地区，您无法访问 Google。具体取决于网络服务。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕中按 **OK** 并选择“浏览器”。
- 2 选择“书签”。此时屏幕上将出现一个书签列表。
- 3 要创建新文件夹，请选择“选项”，然后选择“新建文件夹”。输入书签文件夹的名称。

浏览器

- 4 要添加一个新的书签，请选择选项并按新增。输入书签名称和 URL。
- 5 选择“完成”。现在，您添加的书签将显示在书签列表中。
- 6 要访问书签，仅需滚动到书签，然后选择“打开”即可。

保存页面

- 1 如上所述，访问所需网页。
- 2 选择“选项”，然后选择保存项目 - 保存此页面。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 选择“保存”。

提示！ 此菜单还允许您编辑已保存的页面的标题、以及删除保存的页面。

访问保存的网页

- 1 从待机屏幕中按 **OK** 并选择“浏览器”。
- 2 选择“保存的网页”。
- 3 选择“打开”以连接到保存的网页。

查看浏览器历史记录

- 1 从待机屏幕中，按 **OK** 并选择“浏览器”，然后选择“历史记录”。
- 2 此时将显示一个您最近访问过网页的标题列表。
- 3 选择“选项”，然后选择历史记录列表，以显示您最近访问过的网页标题列表。

使用 RSS 阅读器

RSS（简易供稿）是一种网络订源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订源、网络订源或频道，它包含相关网站的内容摘要或完整文本。

更改网络浏览器设置

- 1 从待机屏幕中按 **OK** 并选择“浏览器”，然后选择“设置”。
- 2 您可以选择情景模式、外观设置、缓存、Cookie、安全性或恢复初始设定。
- 3 更改设置后，请选择“确认”。

连接

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择“选项”，然后选择发送。选择蓝牙。
- 3 按“是”以打开蓝牙。
- 4 GD330 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后选择选择以发送文件。
- 6 您的文件将被发送。

提示！ 注意进度栏，确保文件已发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为开且可见。有关详细信息，请参阅下面的更改蓝牙设置。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择是以接收文件。
- 3 您可以查看文件的保存位置，可以选择查看文件。文件将根据其类型保存到相应文件夹。

更改蓝牙设置：

- 1 在待机屏幕中按 **OK** 并选择“连接”。
- 2 依次选择“蓝牙”和“设置”。进行更改：

我的设备可见性 - 选择“可见”、“可见1分钟”或“隐藏”。

我的设备名称 - 为您的 GD330 输入一个名称。

支持的服务 - 搜索 GD330 支持的配置文件。

我的地址 - 搜索蓝牙设备地址。

与其它蓝牙设备配对

要将您的 GD330 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为开且可见。您可以在设置菜单中更改可见性。
- 2 选择“配对设备”，然后按“新建”。
- 3 GD330 将搜索设备。搜索完全刷新时，屏幕上将显示添加。
- 4 选择您要与之配对的设备，输入通行码，然后按添加。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 选择是以立即连接。GD330 将自动切换到“耳机”情景模式。

连接

将手机用作大容量存储设备

本手机可用作数据存储设备。


- 1 断开手机与电脑的连接。
- 2 在待机屏幕中按 **OK**。
- 3 选择“连接”，然后选择“USB 连接模式”。
- 4 突出显示大容量存储，然后按选择。
- 5 将手机连接到电脑。此时手机将显示：正作为大容量存储连接…，随后将显示以大容量存储器模式连接。传输期间不要断开连接。

备注：要启动大容量存储，必须将手机从电脑上拔下。


设置

更改情景模式



使用此文件夹，您可以调整设置以使 GD330 更具个性化。

您可以在待机屏幕上快速更改情景模式。按  然后按您要激活的情景模式。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 在待机屏幕中按 , 并选择“设置”。
- 2 选择“情景模式”，然后选择您要编辑的情景模式。
- 3 选择“选项”，然后选择“编辑”。
- 4 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示、屏幕声音设置等。

使用飞行模式


在待机屏幕中按  打开飞行模式，然后选择“设置”-“情景模式”。选择“飞行模式”，然后按  激活。

飞行模式下，您不能拨打电话、连接到互联网、发送信息或使用蓝牙。

备注：在飞行模式下，可通过手动选择选项打开蓝牙。

更改手机设置

您可以自由调整 GD330 的设置，使其满足您的需要。

- 1 在待机屏幕中按  并选择“设置”。
- 2 选择“手机”，然后选择您所需的选项。

触式键盘振动 - 开启或关闭触式键盘振动。

语言 - 更改 GD330 的显示语言。

省电 - 选择打开或关闭省电设置。

资料 - 查看 GD330 的技术资料。

设置

更改屏幕设置

- 1 从待机屏幕中按 **OK** 并选择“设置”。
- 2 选择“显示”，然后从以下选项中选择：

屏幕主题 - 为待机屏幕或拨出电话选择主题。

菜单样式 - 选择用于显示菜单的样式。

拨号 - 设置拨号显示。

字体 - 调整字体颜色。

背景灯 - 选择背景灯持续时间。

备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

手机方案 - 快速更改屏幕整体外观。

问候语信息 - 输入打开时的问候语信息。

- 3 选择“选择”以保存设置。

使用日期和时间

- 1 从待机屏幕中按 **OK** 并选择“设置”。
- 2 选择“日期和时间”。

调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

更改安全性设置

- 1 从待机屏幕中按 **OK** 并选择“设置”。
- 2 选择“安全性”，然后从以下选项中选择：

需要 PIN 码 - 将手机设置为开机时需要请求 SIM 卡的 PIN 码。

手机锁 - 设置手机锁以避免未经授权的使用。您需要一个安全码。

更改密码 - C 更改密码：PIN / PIN2 / 安全码 / 防盗手机追踪器。

备注！安全密码

安全密码可防止他人未经允许使用您的手机。默认的安全密码设置为“0000”，删除所有电话记录及激活恢复初始设定功能表时需要安全密码。并且，开关话机锁功能以防止未经允许使用手机时，也需要安全密码。从“安全性”>“更改密码”中可以修改安全密码默认设置。

防盗手机追踪器 - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。要激活 ATMT 功能，您将需要将 ATMT 设置为开，并使用名称、主要电话和辅助号码来配置 ATMT 设置。

默认防盗追踪密码为“0000”。

ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置（根据小区广播信息获取）和所用的号码。

使用内存管理器

GD330 有三种可用存储器：手机、SIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

在待机屏幕中按 **OK**。选择“设置”，然后选择“内存管理器”。

手机公用内存 - 查看 GD330 中针对以下各项的可用内存：图像、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。

设置

手机剩余内存 - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

SIM 卡内存 - 查看 SIM 卡的可用内存。

外部存储器 - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

主存储设置 - 选择“手机内存”或“外部存储器”。

更改其它设置

网络 - GD330 将自动连接到首选网络。要更改这些设置，请使用此菜单。

互联网设置 - 设置连接到互联网的网络设定。

存取点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

分组数据连接 - 设置分组数据连接。

恢复初始设定 - 选择此选项将手机重新设置为默认配置。您必须输入安全码。

手机软件升级

LG 手机软件网上更新 更多的功能和相关信息请查阅网站：[LGmobile.com](http://lgmobile.com)

具体途径：<http://www.lgmobile.com> - 选择地区 - 选择国家 - 手册&软件

此功能能将您的手机软件升级到最新版本，网上操作更加便利，免去您拜访售后的麻烦。手机软件更新时请留意整个更新过程，确保在更新过程的每一步都仔细阅读过说明和注意事项。请注意不要在升级过程中拔掉USB接线或电池，这会严重危害您的手机。在升级过程中产生的数据丢失，厂商不负有任何责任，建议您把重要信息进行备份。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

充电器



数据线和 CD

在 GD330 和电脑间建立连接并同步。



电池用



用户指南

了解更多关于 GD330 的信息。

免提耳机



备注

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 850, GSM 900, DCS 1800 和 PCS 1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称: GD330

系统: GSM 850 / GSM 900 /
DCS 1800 / PCS 1900

外部环境

最高温度: +55°C (放电),
+45°C (充电)

最低温度: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850/ GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GD330

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Wotton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyouon, Ji / Director

Issued Date

16, Dec. 2008

European Standard Center

LG Electronics Logistics and Services B.V.

Veluwezoom 15, 1327 AE Almere, The Netherlands

Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794

e-mail : jacob@lge.com

Signature of representative

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题,您可能需要致电服务提供商,但是大部分问题,您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。 检查服务提供商覆盖图。
无法设置功能	服务提供商不支持或需要注册	请与提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短 电池电量空 电池触点脏	请按开/关键至少两秒钟。 为电池充电。检查显示屏上的充电指示灯。 清洁触点。

信息	可能原因	可行解决措施
充电错误	电池电量空 温度超出范围 触点问题 无电源电压 充电器故障 错误充电器 电池故障	为电池充电。 确保外部环境温度适当,稍等片刻,然后重新充电。 检查电源,连接到手机。 检查电池触点,如果需要,请清洁。 插入其它插口,或检查电压。 如果充电器不发热,请替换。 请仅使用正品 LG 配件。 替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。
LCD 屏幕变暗	电池电量低 电池电量不足时, LCD 屏幕将变暗,以减少耗电。	对电池进行充电。



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

GD330 User Guide

Contents

Guidelines for safe and efficient use ..	6
Getting to know your phone.....	11
Installing the SIM and battery.....	13
Memory card.....	15
Menu map	16
Your standby screen.....	18
Touch pad	18
The status bar	19
Calls.....	20
Making a voice call	20
Making a voice call from Contacts ..	20
Making international calls.....	20
Answering and rejecting a call.....	20
Speed dialling.....	21
Making a second call	21
Viewing your call logs.....	22
Using call divert	22
Using call barring.....	23
Using fixed dial number.....	23
Using call waiting.....	23
Changing the common call settings.	24
Contacts	25
Searching for a contact.....	25
Adding a new contact	25
Contact options	26
Creating a group.....	27
Using service dial numbers	27
Viewing your own number.....	27
Creating a business card.....	27
Changing your contact settings	28
Messaging.....	29
Messaging	29
Sending a message	29
Entering text.....	30
T9 predictive mode.....	30
ABC manual mode.....	31
123 mode	31
Setting up your email	31
Retrieving your email	34
Sending an email using your new account.....	34
Message folders	34
Managing your messages	35

Using templates.....	35	Video camera	43
Using emoticons.....	36	Shooting a quick video.....	43
Changing your text message settings ..	36	After you've shot your video	43
.....	36	Using the quick settings	43
Changing your multimedia message		Using the advanced settings.....	44
settings	37	Watching your saved videos	44
Changing your email settings	37	Multimedia	45
Changing your other settings.....	38	Music.....	45
Camera.....	40	Playing a song	45
Taking a quick photo.....	40	Using options while playing music ..	45
After you've taken your photo	40	Creating a playlist	46
Using the quick settings	40	Editing a playlist.....	46
Using the advanced settings.....	41	Deleting a playlist	47
Adjusting the brightness.....	41	Listening to the radio	47
Choosing a shot mode	41	Searching for stations	47
Changing the image size	42	Editing the channels.....	48
Viewing your saved photos.....	42	Resetting channels	48
Setting a photo as a wallpaper or		Using the voice recorder	49
contact image.....	42	Sending the voice recording	49

Contents

My stuff	50	Organiser	58
Images	50	Adding an event to your calendar	58
My images option menus	50	Changing your default calendar view	58
Sending a photo	51	Adding an item to your to do list	58
Using an image	51	Sharing a to do item	59
Organising your images	51	Adding a memo	59
Deleting an image.....	52	Adding a secret memo	59
Moving or copying an image	52	Using the date finder.....	59
Marking and unmarking images	52	Settings.....	60
Checking your memory status	53	Tools	61
Sounds.....	53	Adding your quick menu	61
Using a sound	53	Setting your alarm	61
Videos.....	53	Using your calculator	61
Watching a video	53	Using the stopwatch	62
Using options while watching a video..	54	Converting a unit	62
Sending a video clip.....	54	Adding a city to your world time	62
Using the video options menu.....	54	Browser	63
My games & apps.....	55	Accessing the web.....	63
Playing a game.....	55	Google	63
Viewing applications	56	Adding and accessing your bookmarks
Changing the network profile.....	56	63
Installing a Java game & application	56	Saving a page.....	64
Flash contents	57	Accessing a saved page.....	64
Others.....	57	Viewing your browser history.....	64
My memory card	57		

Using RSS reader.....	65	Accessories	73
Changing the web browser settings.	65	Network service	74
Connectivity	66	Technical data	74
Sending and receiving your files using Bluetooth.....	66	TROUBLESHOOTING	76
Pairing with another Bluetooth device..	67		
Using a Bluetooth headset.....	67		
Using your phone as a mass storage device	68		
Settings	69		
Changing your profiles	69		
Using flight mode.....	69		
Changing your phone settings	69		
Changing your screen settings	70		
Using Date & Time	70		
Changing security settings	70		
Using memory manager.....	71		
Changing your other settings.....	72		
Phone Software update.....	72		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model GD330 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.467 W/Kg (10g) and when worn on the body is 0.842 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

Guidelines for safe and efficient use

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Getting to know your phone

Main LCD

- **Top:** Signal strength, battery level and various functions.
- **Bottom:** Soft key indications.

Left soft key/ Right soft key

Performs the function indicated at the bottom of the display.

Multitasking key

Opens the multitasking menu.

Send key

Dials a phone number and answers incoming calls.

End/Power key

Ends or rejects a call. Turns the phone on/off. Press once to return to the standby screen.



ALC (Auto Luminance Control) Sensor

Automatically adjusts screen brightness according to ambient brightness.

Navigation Keys


- **In standby mode:**
 - Quick menu
 - Contacts list
 - Messaging
 - Profile

- **In menu:** Navigates between menus.

Clear key

- When you write characters:
Clears a character each time it is pressed.
- When the screen is idle:
Plays music you have listened to recently. If the file does not exist in your phone, the notice message displays on your screen.

Getting to know your phone

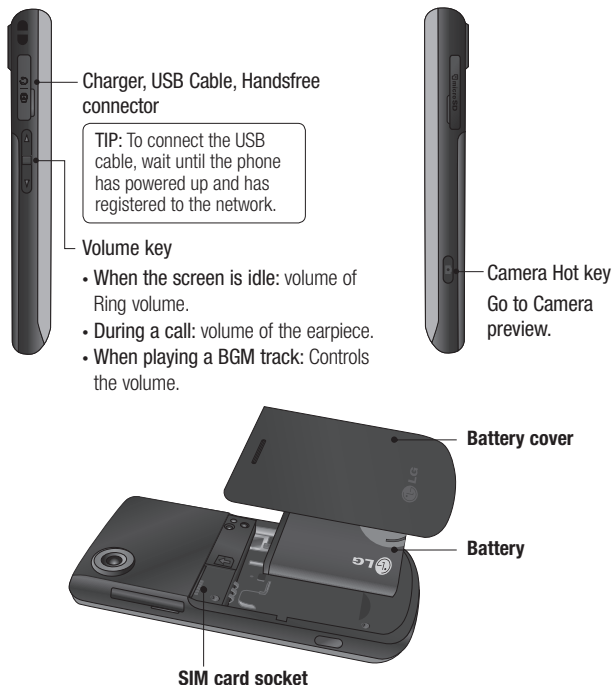

Installing the SIM and battery

1 Remove the battery cover

Press the battery cover release latch. Slide the battery cover towards the bottom of the phone and away from it.



2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.




⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold colour contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

⚠ WARNING: Do not replace or remove the SIM card while your phone is being used or turned on, or data may be lost or the SIM card might be damaged.

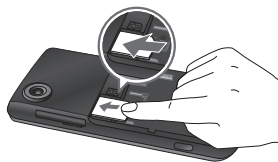

Installing the SIM and battery

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

6 Charging your phone

Pull open the cover of the charger socket on the side of your GD330. Insert the charger and plug into a main electricity socket. Your GD330 will need to be charged until a message reading "Battery full" appears on screen.



Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

TIP: A memory card is an optional accessory.

- 1 Lift the memory card cover and insert a micro SD card with the gold colour contact area facing downwards. Close the memory card cover so that it clicks shut.



Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press **OK** then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

NOTE: The default security code is set to '0000'.

TIP! To change your default storage destination, open **Memory manager** from the Settings menu and select **Primary storage setting**.

NOTE: If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the **My videos** folder.

Menu map



Games & Apps

1. My games & apps
2. Racing Time2
3. Settings



Calling

1. Call logs
2. Call durations
3. Data volume
4. Call costs
5. Call divert
6. Call barring
7. Fixed dial numbers
8. Call waiting
9. Common setting



Organiser

1. Calendar
2. To do
3. Memo
4. Secret memo
5. Date finder
6. Settings



Multimedia

1. Camera
2. Video camera
3. Music
4. FM radio
5. Voice recorder



Messaging

1. Create new message
2. Inbox
3. Mailbox
4. Drafts
5. Outbox
6. Sent items
7. My folders
8. Templates
9. Emoticons
0. Settings



My stuff

1. My images
2. My sounds
3. My videos
4. My games & apps
5. Flash contents
6. Others
7. My memory card
8. Internal memory explorer



Google



Contacts

1. Add new
2. Search
3. Speed dials
4. Groups
5. Service dial numbers
6. Own number
7. My business card
8. Settings



Tools

1. Quick menu
 2. Alarms
 3. Calculator
 4. Stopwatch
 5. Converter
 6. World time
 7. SIM service*
- *This feature depends on SIM and the network services.



Browser

1. Home
2. Enter address
3. Bookmarks
4. RSS reader
5. Saved pages
6. History
7. Settings



Connectivity

1. Bluetooth
2. USB connection mode



Settings

1. Profiles
2. Phone
3. Screen
4. Date & Time
5. Network
6. Internet profile
7. Access points
8. Packet data conn.
9. Security
0. Memory manager
- *. Reset settings

Your standby screen

From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touch pad

The touch pad below the screen can be used as left /right soft key to navigate you through your phone menus.


















- There's no need to press too hard as the touch pad is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.



The status bar





The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	BGM Music playing




Calls

Making a voice call



- 1 Enter the number including the full area code.
To delete a digit press .
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

Making a voice call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press  to access the contacts list from the standby screen.
- 2 Select the contact to make a call.
- 3 Press  to make a voice call.
- 4 Press  to finish the call.

Making international calls

- 1 Press and hold  for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering and rejecting a call


When your phone rings press the  to answer the call.

Touch **Silent** to mute the ringing. This is great if you've forgotten to change your profile to **Silent** for a meeting!



Press  to reject the incoming call.

Speed dialling



You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial
1. Select any other number to assign it to a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- Press the assigned number then press  or .
- Press and hold the assigned number until the contact appears on screen.

Making a second call

- 1 During your initial call, press , then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** then **End** followed by **All** or **Active**.

NOTE: You will be charged for each call you make.

Calls

Viewing your call logs

From the standby screen, press **OK** and select **Calling** then **Call logs**. Choose to view:

All calls - View a complete list of all of your dialled, received and missed calls.

Missed calls - View a list of all the calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that you have received.

TIP! From any calls list, touch the left soft key and select **Delete all** to delete all the recorded items.

From the standby screen, press **OK** and select **Calling**.

You can also choose to view:

Call durations - View the duration of all your dialled and received calls.

Data volume - View the amount in kilobytes of all your received and sent data.

Call costs - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

Using call divert

- 1 From the standby screen, press **OK** and then select **Calling**.
- 2 Select **Call divert**.
- 3 Choose when to divert all calls; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Divert**.

NOTE: Charges may be incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all**.

Using call barring

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Call barring**.
- 3 Choose one of the options:
 - All outgoing
 - Outgoing international
 - Outgoing international calls except home country
 - All incoming
 - Incoming when abroad
 - Deactivate all
- 4 Enter the call barring password. Please check with your network operator for this service.

Using fixed dial number

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Fixed dial numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Using call waiting

- 1 From the standby screen, press **OK** and select **Calling**.
- 2 Select **Call waiting** to activate call waiting service.
If call waiting is activated, the handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

Calls

You can put the first call on hold and answer the second call. (This feature is only available if your network supports it.)

Changing the common call settings

- 1 From the standby screen, press **OK** and then select **Calling**.
- 2 Select **Common setting**. From here you can amend the settings for:

Call reject - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

Send my number - Choose whether your number will be displayed when you call someone. (This feature is only available if your network supports it.)

Auto redial - Choose **On** or **Off**.

Answer mode - Choose whether to answer the phone by pressing the **send** key, by pressing any key, or by opening the flip.

Minute minder - Select **On** to hear a tone every minute during a call.

BT answer mode - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **handset**.

Save new number - Saves numbers you use that aren't already stored in **Contacts**.


Slide close setting - Set whether or not a call is ended upon closing the slide.

Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen


- 1 From the standby screen, press  to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press 4 (GHI) twice.

Or, using the slightly quicker method...


- 1 Enter the number you wish to search on the standby screen and select **Options**.
- 2 Choose **Search contacts** in option menu.

TIP! You can search by group by Touching **Options** and selecting **Search by**, and then selecting **Group**. This will bring up a list of all your groups.

From the main menu

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

Adding a new contact

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **SIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter all the information you have in the fields provided and select **Done**.

Contacts

Or, using the slightly quicker method...

- 1 Enter the number you wish to store on the standby screen and select **Options**.
- 2 Select **Save number** and choose **New contact** or **Update contact**.
- 3 Enter the relevant information as above and select **Done**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use.
- 2 Touch the left soft key to open the list of options.
From here you can:
 - Send message** - Send a message or an email to the contact.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia msg**, **Email** or via **Bluetooth**.

Make call - Call the contact.

Add new contact - You can add a new contact.

Edit - You can edit the contact.

Add to group - Add a contact to a group.

Mark/Unmark - Mark/unmark your contacts for multiple selection.

Search by - You can search the entry by number or group.


Save to SIM/ Handset - Choose to move or copy to the SIM card or handset (depending on where you originally saved the contact).

Delete - Delete the contact.

Text input - You can set the text input method.

Speed dials - You can assign this contact to a speed dial number


Creating a group

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Groups** and choose **Options**.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and selecting **Options**. Choose to **Add a member** to the group from your contacts, edit the group or delete the group.

Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the SIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

Viewing your own number

Select **Own number** in the Contacts menu to view your number.


Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

Contacts

Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 From the standby screen, press  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset and SIM**, **Handset only** or **SIM only**. You can also select to show the first name or last name of a contact first, and to show a contact picture.

Copy - Copy your contacts from your SIM to your handset or from your handset to your SIM. Choose to do this one by one, or all together.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the SIM to the handset it will be deleted from the SIM memory.

Send all contacts via Bluetooth - Send all contacts information to another handset by Bluetooth.

Back up contacts - You can save all the phonebook data in the handset to an external memory card by the form of vcard.

Restore contacts - You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

Clear contacts - Delete all your contacts.

Memory info. - You can check how much memory you've got left on your handset or your SIM.

Messaging

Messaging

Your GD330 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), and Email, as well as the network's service messages.

Sending a message


- 1 From the standby screen, press **OK**, select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between SMS mode and MMS mode. The default setting of the message editor is SMS mode.

- 4 Enter your message using either the T9 predictive mode or Abc manual mode.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, see **Send long text** as menu from **Changing your text message settings**.

- 5 Touch **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More** (Business card/Schedule/Memo/To do/My business card).
- 6 Press **Send**.
- 7 Search your contact list or press the number key to enter the phone number.
- 8 Press **Send**.

Messaging


 **WARNING:** If an Image, Sound, Video, New slide, Subject, Business card, Schedule Memo, To do or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text


You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text.

The following text input methods are available in the phone: T9 predictive mode, ABC/Abc/abc manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Input method** and choose **T9 mode**. With T9 on, you can switch text input mode by pressing . You will notice the text input mode indicator in the upper right corner of the display.


To input a symbol in the text entry field, press the  key and select a symbol, then select .

Complete each word with a space by pressing .

To delete a character, press .

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

NOTE: The  key is used to change predictive words of dictionary in T9 mode.

If the word you want doesn't appear, press **Options** and select **Add to dictionary**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing language**.

ABC manual mode


This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst remaining in letter modes by pressing and holding the desired key.

Setting up your email

You can stay in touch on the move using email on your GD330. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 From the standby screen, press  and select **Messaging** and then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 If no email account is set, you can set up an email account by using email set-up wizard.

Email address/Password - Enter your email address and password.

Username - Enter the account user ID.

Mailbox type - Select the internet protocol type used to transfer your email, IMAP4 or POP3.

Incoming server - Enter the IP address or host name of your incoming (POP3 or IMAP4) mail server.

Messaging

Outgoing server - Enter the IP address or host name of your outgoing (SMTP) mail server.

SMTP authentication - Choose to activate the security setting for the outgoing mail server.

If SMTP authentication is on, outgoing server requires user name and password when you send e-mail.

SMTP username/SMTP Password - Enter your email address and password from your email provider. (If SMTP authentication is on)

Account name - Enter the mailbox name by which you would like to refer to this account.

- 4 After entering the email account, select **OK** to save. Now your account is set up, it will appear in the list of accounts in your Email folder.
- 5 Using the Edit menu of Options, you can edit the setting values.

Title - Enter a name for this account.

My name - Enter your name.

Username - Enter the account username.

Password - Enter the account password.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the account details.

Incoming mail server - Enter the account details.

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point.

Retrieve mode - Select Headers only or All.

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

Outgoing uses SSL - Choose whether to use SSL for incoming server.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

Incoming use SSL - Choose whether to use SSL for incoming server.

SMTP authentication - Choose the security settings for the outgoing mail server.

SMTP Username - Enter your email address from your email provider.(If SMTP authentication is On)

SMTP Password - Enter your email address password from your email provider.(If SMTP authentication is On)

APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Messaging

Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 From the standby screen, press **OK** and select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Open** and the phone will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 From the standby screen, press **OK** and select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.
- 3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.

- 4 Select **Send** and your email will be sent.

Message folders

Inbox - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

Mailbox - All emails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder for messages that are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

My folders - You can move messages existed in Inbox or Sent messages into My folders, and then you can move those messages existed in My folders into the original message box.

Managing your messages

- 1 From the standby screen, press **OK** and select **Messaging** then **Inbox**.
- 2 Select **Options** and then choose to:

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Make call - Call the person who sent you the message.

Save number - Save sender's address to the contact.

Delete - Delete the message.

Create new message - Open a new, blank message or email.

Mark/Unmark - Mark/Unmark your messages for multiple deletion.

Copy & Move - Copy or move the message to your phone, SIM or My folders.

Filter - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, including the time it was sent.

If you see the message **No space for SIM message** you should delete some messages stored in SIM memory.

If you see the message **No space for messages** you can delete messages to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 From the standby screen, press **OK** and select **Messaging** then choose **Templates**.

Messaging

- 2 Choose **Text templates** or **Multimedia templates**. You can then select **Options to Add new templates**.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 From the standby screen, press **OK** and select **Messaging** then choose **Emoticons**.
- 2 Select **Options to Add new, Edit, Delete** or **Delete all emoticons**.

Changing your text message settings

Your GD330 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **OK** and select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Voice, Fax, X.400** or **Email**.

Character encoding - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as **Multiple SMS** or **MMS** when you enter a text longer than 1 page in the message field.

Changing your multimedia message settings

Your GD330 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **OK** and select **Messaging**, then choose **Settings**, then **Multimedia message**.

You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose your default slide duration time for composing MMS.

Creation mode - Choose your message mode.

Delivery time - Deliver your message at a specific time.

Multimedia msg centre - Enter the details for your message centre.

Changing your email settings

You can adapt your email settings so that it works according to your preferences.

Messaging

From the standby screen, press **OK** and select **Messaging** then choose **Settings**, then select **Email** and then you can adapt the following settings:

Email account - You can set up an email account.

Allow reply email - Choose to allow the sending of 'read confirmation' messages.

Request reply email - Choose whether to request 'read confirmation' messages.

Retrieve interval - Choose how often your GD330 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd & Reply - Choose whether or not to include the original message.

Include attachment - Choose whether or not to include the original attachment.

Auto Retrieval in Roaming - Choose whether or not to automatically retrieve your messages when roaming.

New email notification - Choose whether or not to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Changing your other settings

From the standby screen, press **OK** and select **Messaging**, choose **Settings** then:

Voicemail - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.



Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.

Save text message - Choose whether to save your text messages to the phone memory or to the external memory.

Camera





Taking a quick photo


- 1 Press  to open the viewfinder.
- 2 Focus the camera on what you want to take.
- 3 Press  to take a photo.

After you've taken your photo

Your captured photo will appear on the screen. After taking a picture, you can check the menu as follows:

Options - You can change the name of the image or edit the image file.

-  **Album** - View the pictures you have taken in your Album.
-  **Send** - Send the photo as MMS, Email or via Bluetooth.
-  **New** - Take another photo straight away. Your current photo will be saved.
-  **Use as** - Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 **Delete** - Delete the photo you have just taken. The viewfinder will reappear.

Back - Go back to previous menu.

Using the quick settings

From the viewfinder use the navigation key and select the options you would like to use.

Album - Choose to look at the other images in your album.

Video - Choose to switch from Camera to Video camera mode.

Capture - Allows you to take a picture.

Brightness - Set the brightness of the image in the viewfinder of the camera.

Timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for a group photo that you want to be part of too!

Using the advanced settings

From the viewfinder select **Settings**.

Image size - Change the size of the photo.

Colour effect - Choose a colour tone to apply to the photo you're taking.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Night mode - You can take better pictures at night by selecting **On**.

Shot mode - Choose from **Normal** or **Burst shot**.

Image quality - Controls the quality of image.

Memory in use - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Shutter sound - Select one of three different shutter sounds.

Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in the quick settings.
- 2 Slide the contrast indicator along the bar, towards “-” for a lower contrast, hazier image or towards “+” for a higher contrast, sharper image.

Choosing a shot mode

- 1 Select **Shot mode** in **Settings** to view the available shot modes.
- 2 Choose from the options:

Normal - This is the default shot type. The photo will be taken in the normal way.

Camera

Burst shot - This enables you to take three/six/nine shots automatically in very quick succession.

Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 Select **Image size** in **Settings**.
- 2 Select a pixel value from the numerical options: **1600X1200, 1280X960, 640X480, 320X240, contact**.
- 3 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the **Album**.
- 2 Your album will appear on the screen.
- 3 Select the photo to open it fully.


Setting a photo as a wallpaper or contact image

From your image album, select an image and **Use as** to use the image as a wallpaper, Contact image, Start up image, or Shut down image.

NOTE: Contact images can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

- 1 Move the camera mode switch to  and press **OK**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.
- 3 Press **OK** once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press **OK** again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

Options - You can change the name of the video clip.



Album - View your video album.



Play - Play the file.



New - Press to shoot another video straight away. Your current video will be saved.



Send - Send the video as MMS, as an Email or via Bluetooth.



Delete - Delete the video you have just made. The viewfinder will reappear.

Back - Go back to previous menu.

Using the quick settings

From the viewfinder use the navigation key and select the options you would like to use.

Album - Choose to look at the other videos in your album.

Camera - Choose to switch from Video camera to Camera mode.

Rec - Allows you to record a video.

Brightness - Contrast defines the difference between light and dark in an Video.

Video camera

Using the advanced settings

From the viewfinder select **Settings**.

Size - Change the size of the video.

Colour effect - Choose an effect tone to apply to the video you're making.

White Balance - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions.

Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Quality - Controls the quality of video.

Duration - Select the maximum length of the recording.

Memory in use - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

Hide icons - Hide the icons to the side of the viewfinder.

Voice - Choose **Mute** to record a video without sound.

NOTE: Always press select after selecting a new setting to implement the changes you've made.

Watching your saved videos

- 1 You can access your saved videos from within the video camera mode and from the Album. Your album will appear on screen.
- 2 Select the video to open it fully.

Multimedia

Music

Your GD330 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

Recently played - Listen to the songs you have played recently.

All tracks - Contains all of the songs you have on your phone.

Playlists - Contains any playlists you have created.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Shuffle tracks - Listen to your music in a random order.

Playing a song

- 1 From the standby screen, press **OK** and select **Multimedia**. From here select **Music** and then choose **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press **OK** to pause the song.
- 4 Press **▶** to skip to the next song.
- 5 Press **◀** to skip to the previous song.

Using options while playing music

Select **Options** and choose from:

Minimise - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Go to the music menu.

Repeat - Select to repeat the selected track, repeat off and repeat all.

Shuffle - Listen to your music in a random order.

Multimedia

Equalizer - Select different pre-defined equalizer.

Visualization - Select the visual effects.

Listen via Bluetooth - Listen to the selected music using bluetooth headset. (Bluetooth headset should support MP3 playback)

Add to playlist - Add the file to a playlist.

File info. - View brief details about the file.

Send - Send the song as a message, email, or via Bluetooth.

Use as - Use the song as one of your ringtone, message tone, start-up or shut down tone.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 From the standby screen, press **OK** and select **Multimedia** then **Music**, choose **playlist**.

- 2 Select **Add**, enter the playlist name and press **OK** to save.

- 3 The **All tracks** folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

NOTE: To add a second playlist, select **Options** then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 From the standby screen, press **OK** and select **Multimedia** then **Music**, choose **Playlists**.
- 2 Select the playlist.
- 3 Select **Options**.

Add new songs - Add more songs to the playlist. Mark the ones you want and select **Done**.

Send - Send a song as a message or via Bluetooth.

Remove from list - Remove a song from the playlist.

Mark/Unmark - Select multiple files.

Use as - Use the song as one of your ringtone, message tone, start-up or shut down tone.

File info. - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Memory manager - You can view the current status of memory.

Deleting a playlist

- 1 From the standby screen, press **OK** and select **Multimedia** then **Music**, choose **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

Listening to the radio

Your GD330 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

From the standby screen, press **OK** and select **Multimedia** then **FM radio**, enter the channel number of the station you would like to listen to.


NOTE: You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

Searching for stations


You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning.



Multimedia

To auto tune:

- 1 From the standby screen, press  and select **Multimedia** then **FM radio**, choose **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.


To manually tune:

- 1 From the standby screen, press  and select **Multimedia** then **FM radio**.
- 2 Enter the station frequency you would like to save to.
- 3 Select **Set** and then select the channel to save.

NOTE: You can also manually tune into a station by using  and  displayed next to the radio frequency.

Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.


- 1 From the standby screen, press , select **Multimedia** then **FM radio**, choose **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and pressing **Options**:

Rename - Rename the channel.

Replace - Set new frequency for the selected channel.

Resetting channels

- 1 From the standby screen, press  and select **Multimedia** then **FM radio**, choose **Options**.

- 2 Select **Channel list**, then **Options**.
- 3 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Using the voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 From the standby screen, press **OK** and select **Multimedia**.
- 2 Select **Voice recorder** then options and choose from:

Duration - Set the recording duration. Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

Quality - Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.

Memory in use - Select phone memory or external memory.

Go to Voice recordings - Open the Voice recordings folder in **My sounds**.

- 3 Select **OK** to begin recording.
- 4 Select **Stop** to end recording.
- 5 Select **Play** in the options menu to listen to your recording.

Sending the voice recording

- 1 Once you have finished recording, select options.
- 2 Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

My stuff

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

Images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures.

Send - Send the image to a friend.

Use as - Set the image to appear on your phone at certain times.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Mark/Unmark - Select multiple files.

Edit image - You can edit the selected image.

Print via Bluetooth - Print an image via Bluetooth®.

File - Change the name or view the information for the file.

Create new folder - Create a new folder within the My Image folder.

Slide show - Start a slide show.

Sort by - Sort images into a specified order.

Grid view/List view - View each image in grid or list type.

Memory manager - View the memory status.

Sending a photo

- 1 From the standby screen, press **OK** and select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.
- 3 Select **Send** and choose from **Message, Email, or Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpaper, Contacts image, start up/shut down image.

- 1 From the standby screen, press **OK** and select **My stuff** then **My Images**.

- 2 Select the image and press **Options**.
- 3 Select **Use as** and choose from:
Wallpaper - Set a wallpaper for the standby screen.
Contacts image - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.
Start-up - Set an image to appear when you switch the phone on.
Shut down - Set an image to appear when you switch the phone off.

Organising your images

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

My stuff

Deleting an image

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

TIP! To quickly delete any file in Image, highlight it with the cursor and press the **C2** key.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 From the standby screen, press **OK** and select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 From the standby screen, press **OK** and select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the right bottom of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 From the standby screen, press **OK** and select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 From the standby screen, press **OK** and select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.
- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Message tone**, **Start-up** and **Shut down**.

Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video


- 1 From the standby screen, press **OK** and select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

My stuff

Using options while watching a video

Select **Options** while watching a video and choose from:

Landscape view - View the video file in full shot.

NOTE: You can switch to landscape view & landscape view to normal view using  key, while viewing video.

Mute/Unmute - Switch the sound on/off.

Capture - You can save what is on the paused screen as an image file. (This option is only available while video is paused.)

Repeat - Select Off, One or All.

File info. - View brief details about the file.

Send - Send the video in a message, email or via Bluetooth.

Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Mark/Unmark - Select multiple files.

File - Edit the file name and view its information.

Create new folder - Create a new folder within the My videos folder.

Sort by - Sort videos into a specific order.

Grid view/List view - View the options menu by grid or list type.

Memory manager - View the memory status.

My games & apps

You can download games and applications to your phone to keep you amused when you have time to spare.

If you download a game from the network, you will need to install the downloaded game in your phone before enjoying the game.

Playing a game

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select My games & apps, and then select Games.
- 3 Select a game and press Launch. Using the games options menu From the Games and Applications folders, the following options are available:

Create new folder - Create a folder within the games and applications menu.

Sort by - Sort the games and applications by Date, Size or Name.

File info. - Show the information about selected game

Memory manager - View the memory status.

My stuff

Viewing applications

You can manage the Java applications installed in your phone by using the Applications menu. You can also delete downloaded applications.

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select My games & apps and choose Applications.
- 3 View and manage any applications you have.

Changing the network profile

To download a game, you can set the value to connect to the network using Settings.

- 1 From the standby screen, press **OK** and select Games & apps.
- 2 Select Settings.

- 3 From here you can:

Profiles - You can see profile and add new profile.


Certificates list - You can see the certification list for using Java application.

Installing a Java game & application

Depending on the service provider, all Java based programs such as Java games can be downloaded and run on your phone. You can transfer Java program files from a compatible PC to the memory in your phone using the Bluetooth, USB Mass storage or External memory. The Java program files are in .jad or .jar format.

If you save the Java program files in your phone, you should install the files before using a Java game or application first.

To install a Java game & application:

- 1 From the standby screen, press  and select My stuff, then choose Others or My memory card (if external memory is inserted).
- 2 Select the file (*.jad or *.jar) you want to install and press Install.

NOTE: The .jad file should contain its own .jar file.

- 3 Once installed, the Java program can be viewed in the Games or Applications menu where you can select, execute, or delete.

TIP! You can also download Java MIDlet in your phone by using the WAP (Wireless Application Protocol) services. Please note that additional costs may be incurred when using online services.

Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

My memory card

If you purchase an optional external microSD memory card, you can manage more content.

Using this menu, you can easily explore contents of your phone. When you select this menu, you can see Flash contents, Picture, Others, Playlists, Sound, and Videos.

Organiser

Adding an event to your calendar

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** and then choose **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

Changing your default calendar view

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.
- 3 Press **Done** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen, press **OK** and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.

TIP! You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Done**.

Sharing a to do item

- 1 From the standby screen, press **OK** and choose **Organiser** then select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

Adding a memo

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.

- 4 Your memo will appear on screen next time you open the **Memo** application.

TIP! You can edit an existing memo. Select the one you want to edit and select **Edit**.

Adding a secret memo

You can write the private memo to protect your privacy in Secret memo menu. You enter the security code to use this menu.

Using the date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 02.10.2009 will be 01.12.2009 This is great for keeping tabs on deadlines.

Organiser

Settings

Calendar - You can set the configurations to view the calendar.

Send all schedules & to do via Bluetooth - You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

Backup calendar & To do - You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

Restore calendar & To do - You can reset the backup files of calendar or tasks when you insert an external memory.

Memory info. - You can view the information of available memory regarding Calendar, To do, Memo and Secret memo.



Clear all - You can delete all data regarding Calendar, To do, Memo and Secret memo.

Tools

Adding your quick menu

The Quick menu provides easy access to your most used functions. You can add your favorite menu to the list of Quick menu.

Setting your alarm




- 1 From the standby screen, press  and choose **Tools** then select **Alarms**.
- 2 Select **Options** and press **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound daily, Mon-fri, Mon-sat, Sat-Wed, Sat-Thu, Sun-Thu, Sat-Sun, Except holiday, Choose weekday, or Not repeated
- 5 Select  and **Edit** to select a sound for your alarm.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.

- 7 Finally, you can set the snooze interval at 5, 10, 20 or 30 mins, 1 hour or off.
- 8 Once you have set your alarm, select **Done**.

NOTE: You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.

Using your calculator

- 1 From the standby screen, press  and choose **Tools** then select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** to select a command.
- 5 Select  to delete a character press and hold  to clear completely and start a new calculation.

Tools

Using the stopwatch

- 1 From the standby screen, press **OK** and choose **Tools** then select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to begin the time again.

Converting a unit

- 1 From the standby screen, press **OK** and choose **Tools** then select **Converter**.
- 2 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

Adding a city to your world time

- 1 From the standby screen, press **OK** and choose **Tools** then select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

TIP! If you are abroad, you can change your time zone from **World time** by selecting **Options**, followed by **Change time zone**. Choose your required city as above.

Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Google

To access Google services, press **OK** and select **Google**.

NOTE: You may be unable to access Google in some countries. This is dependent on network services.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.

Browser

- 4 To add a new bookmark, select **Options** and press **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

Saving a page

- 1 Access your required webpage as described above.
- 2 Select **Options**, **Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

TIP! This menu will also allow you to edit titles of saved pages and delete saved pages.

Accessing a saved page

- 1 From the standby screen, press **OK** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

Viewing your browser history

- 1 From the standby screen, press **OK** and choose **Browser**, then select **History**.
- 2 A list of web page titles you have accessed recently will be displayed.
- 3 To access one of these pages, simply select the required page and press **Open**.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

Changing the web browser settings

- 1 From the standby screen, press **OK** and choose **Browser** then select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, press **Select**.

Connectivity

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send.
- 2 Select **Options** and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your GD330 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in **My stuff**.

Changing your Bluetooth settings:

- 1 Press **OK** in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

My device visibility - Choose to be Visible, Visible for 1 min or Hidden.

My device name - Enter a name for your GD330.

Supported services - View the profile supported by GD330.

My address - View your Bluetooth device address.

Pairing with another Bluetooth device

By pairing your GD330 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices**, then press **New**.
- 3 Your GD330 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.

- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes to Connect now**. Your GD330 will automatically switch to Headset profile.

Connectivity

Using your phone as a mass storage device

Your phone can be used as a mass storage device.


- 1 Disconnect your phone from your PC.
- 2 Press **OK** in the standby screen.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC.
Your phone will read:
"Connected" with Mass storage as title.
Do not disconnect during transfer.

NOTE: After selecting mass storage your phone must be reconnected to your PC to initiate Mass Storage.


Settings

Changing your profiles



Within this folder you can adapt your settings to personalise your GD330.

You can quickly change your profile on the standby screen. Simply press  then the profile you would like to activate.

Using the settings menu you can personalise each profile setting.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume**, **Message alerts** and more.

Using flight mode


Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

NOTE: Bluetooth can be turned On in Flight mode by manually selecting the option.

Changing your phone settings

Enjoy the freedom of adapting your GD330 so that it works in a way that suits you.

- 1 From the standby screen, press  and select **Settings**.
- 2 Select **Phone** and choose from the list below.

Touchpad vibration - on and off Touchpad vibration.

Languages - Change the language of for your GD330's display.

Power save - Choose to switch the power saving settings **On** or **Off**.

Information - View the technical information for your GD330.

Settings

Changing your screen settings

1 From the standby screen, press  and select **Settings**.

2 Select **Screen** and then choose from:

Screen theme - Choose the theme for your standby screen or start-up, shut down the phone.

Menu style - Choose the style used to display menus.

Dialling - Set the display used when making a call.

Font - Adjust the font.

Backlight - Choose how long the backlight remains on for.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Handset theme - Quickly change the whole look of your screen.

Greeting message - Enter the greeting message used when the phone is switched on.

3 Choose **Select** to save your settings.

Using Date & Time

1 From the standby screen, press  and select **Settings**.

2 Select **Date & Time**.

Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

Changing security settings

1 From the standby screen, press  and select **Settings**.

2 Select **Security** then choose from:

PIN code request - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

Handset lock - Set the phone lock to avoid unauthorised use. You will need a security code.

Change codes - Change the codes: PIN / PIN2 / Security code / ATMT code.

NOTE: Security code

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the Security > Change codes.

Anti Theft Mobile Tracker - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with name, primary phone and secondary number. Default ATMT code is "0000."

ATMT SMS will contain information about the stolen phone IMEI, current location (captured as perCell Broadcast message) & number of the person who is using that handset.

Using memory manager

Your GD330 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Press **OK** in standby screen. Select **Settings** then **Memory Manager**.

Handset common memory - View the memory available on your GD330 for images, sounds, videos, flash, MMS, applications, java and others.

Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - choose Handset memory or External memory.

Settings

Changing your other settings

Network - Your GD330 connects automatically to your preferred network. To change these settings, use this menu.

Internet profiles - Set the profiles to connect to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Set the packet data connection.

Reset settings - Select this to reset your phone to its default configuration. You are requested to enter the security code.

Phone Software update

LG Mobile Phone Software upgrade on web site For more information and using this function, Please visit LGmobile.com site path: <http://www.lgmobile.com> - select country - Manual & software banner

This Feature allows you to upgrade your software to the latest version and conveniently on the internet

without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage your mobile phone.

To the extent permitted by law, the manufacturer takes no responsibility for loss of data during the upgrade process. You are advised to back up any important information in advance for safekeeping as the software upgrade could result in the deletion of personal data.

Accessories

There are various accessories for your mobile phone. These are detailed below.

Charger



Data cable and CD

Connect and synchronise your GD330 and PC.



Battery



User Guide

Learn more about your GD330.

Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Network service

The wireless phone described in this guide is approved for use on the GSM 850, GSM 900, DCS 1800 and PCS 1900 networks.

A number of features included in this guide are called Network Services.

These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name: GD330

System: GSM 850 / GSM 900 /
DCS 1800 / PCS 1900

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850/ GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GD330

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Wotton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoum, Ji / Director

Issued Date

16, Dec, 2008

European Standard Center

LG Electronics Logistics and Services B.V.

Veluwezoom 15, 1327 AE Almere, The Netherlands

Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794

e-mail : jacob@lge.com

Signature of representative

TROUBLESHOOTING

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
Charging error	<p>Battery totally empty</p> <p>Temperature out of range</p> <p>Contact problem</p> <p>No mains voltage</p> <p>Charger defective</p> <p>Wrong charger</p> <p>Battery defective</p>	<p>Charge battery. Make sure the ambient temperature is right, wait for a while, and then charge again.</p> <p>Check power supply and connection to the phone.</p> <p>Check the battery contacts, clean them if necessary.</p> <p>Plug in to a different socket or check voltage.</p> <p>If the charger does not warm up, replace it.</p> <p>Only use original LG accessories.</p> <p>Replace battery.</p>
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.
LCD Dimming	<p>Low battery</p> <p>When the battery is empty, the LCD screen will be dimming to reduce the power supply.</p>	Recharge the battery.



Warranty Card

產品保用證

Mobile Phone
手提電話

Service Commitment

服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心

Welcome to contact for detailed information

歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線	: (852) 3543 7777
E-mail Us 客戶查詢電郵	: cshelpdesk@lge.com
LG Website 瀏覽網站	: www.lg.com

Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd.保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT: Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset : 12 months
 - (ii) Charger : 6months
 - (iii) Battery : 6months
 - (iv) Hand free earphone : 3months
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (Including casing, key pad, display, antenna, and accessories, etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.

- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
- (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by re, ood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.
- (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身 : 12個月
 - (ii) 充電器 : 6個月
 - (iii) 電池 : 6個月
 - (iv) 免提耳機 : 3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。
- (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

