



ไ ท ย
ENGLISH

คู่มือการใช้
LG-P500



CE 0168 

P/N : MMBB0393946 (1.0) 

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ที่ลอกเลียนแบบจากตลาดสีกลอนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งขอความพรมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถยืนยันได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message "Your handset is a genuine LG product."

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B016768

LG-P500 คู่มือการใช้



คู่มือนี้จะช่วยคุณเริ่มต้นใช้งาน
โทรศัพท์ของคุณ

หากคุณต้องการข้อมูลเพิ่มเติม
โปรดไปที่ www.lg.com.

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางด้านสายตาใช้เครื่องรุ่นนี้เนื่องจากมีปุ่มกดบนหน้าจอแบบสัมผัส
- ลิขสิทธิ์ ©2010 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของ
- Google search, Maps, Google Mail, YouTube, Talk และ Android Market เป็นเครื่องหมายการค้าของ Google, Inc



ขอแสดงความยินดีที่คุณซื้อโทรศัพท์
เคลื่อนที่รุ่น LG-P500 ของ LG ซึ่ง
ทันสมัยและมีขนาดกะทัดรัด ออก
แบบให้ทำงานด้วยการใช้เทคโนโลยีการ
สื่อสารเคลื่อนที่แบบดิจิทัลใหม่ล่าสุด

ข้อความประกาศสำคัญ

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การจัดการแอปพลิเคชัน

1. บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
2. เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
3. แตะ **ยกเลิกการติดตั้ง** และแตะ **ตกลง** เพื่อยกเลิกการติดตั้งแอปพลิเคชันที่คุณต้องการ

2. การยืดอายุแบตเตอรี่

คุณสามารถยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้ โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณยังสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Google Mail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- บางแอปพลิเคชันที่คุณดาวน์โหลดอาจลดอายุแบตเตอรี่

ข้อความประกาศสำคัญ

การตรวจสอบระดับประจุแบตเตอรี่


1. บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะ**
2. สถานะแบตเตอรี่ (กำลังชาร์จ, กำลังคายประจุ) และระดับ (เปอร์เซ็นต์เมื่อเทียบกับชาร์จเต็ม) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและความคุ้มครองใช้แบตเตอรี่

1. บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่**
2. ด้านบนของหน้าจอจะแสดงเวลาที่ใช้แบตเตอรี่ ระยะเวลาจากการเชื่อมต่อกับแหล่งไฟฟ้าครั้งสุดท้าย หรือเชื่อมต่อกลับแหล่งไฟฟ้าหรือไม่ ระยะเวลาที่คุณใช้งานไฟฟ้าจากแบตเตอรี่ หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้ไฟฟ้าจากแบตเตอรี่จากมากไปน้อย

3. การติดตั้ง OS โอเพ่นซอร์ส โอเพ่นซอร์ส

หากคุณติดตั้ง OS โอเพ่นซอร์สในโทรศัพท์ของคุณ และไม่ใช่ OS จากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้

 **คำเตือน:** หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากผู้ผลิตโทรศัพท์ของคุณ จะไม่ได้รับความคุ้มครองตามการรับประกันอีกต่อไป

 **คำเตือน:** ในการปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้อ่านโหนดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market™ เท่านั้น หากแอปพลิเคชันติดตั้งในโทรศัพท์อย่างไม่ถูกต้อง โทรศัพท์อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณอาจต้องการยกเลิกการติดตั้งแอปพลิเคชันและข้อมูลและการตั้งค่าจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ

⚠ คำเตือน: โปรดใช้ความระมัดระวังเมื่อใช้งานล็อคแบบการจดจำแบบการปลดล็อคของคุณให้ได้เป็นเรื่องที่สำคัญมาก คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนไปแล้ว 5 ครั้ง คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ

หากคุณสร้างแอคเคาท์ Google บนโทรศัพท์ ให้แตะที่ปุ่มลืมแบบจากนั้น คุณจะต้องไขนอินด้วยแอคเคาท์ Google ของคุณเพื่อ

ปลดล็อคโทรศัพท์

หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมคุณจำเป็นต้องทำการรีเซ็ตคจากโรงงาน

หมายเหตุ: หากคุณทำการรีเซ็ตคจากโรงงาน ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำการรีเซ็ตคจากโรงงาน

1. ปิดเครื่อง
2. กดปุ่มเหล่านี้ค้างไว้เกิน 10 วินาที: ปุ่มเปิดปิดเครื่อง + ปุ่มหน้าหลัก + ปุ่มลดระดับเสียง
3. เมื่อโทรศัพท์เปิดเครื่อง ปล่อยปุ่มเหล่านี้

5. การใช้โหมดปลอดภัยและ Hard Reset

การใช้โหมดปลอดภัย

* การแก้ไขจากสถานะผิดปกติของโทรศัพท์

1. ปิดโทรศัพท์และรีบูตขณะที่โทรศัพท์กำลังเริ่มทำงาน ให้กดปุ่มเมนูค้างไว้

ข้อความประกาศสำคัญ

ระหว่างแสดงโลโก้ LG
โทรศัพท์จะ
บูตไปจนถึงหน้าจอหลัก
และแสดง "โหมดปลอดภัย"
ในมุมล่างซ้าย

- เลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน** และเลือกแอปพลิเคชัน แล้วเลือกไอคอน **ยกเลิกการติดตั้ง**
- หลังจากยกเลิกการติดตั้งแอปพลิเคชันให้ปิดและรีบูตโทรศัพท์

* **การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)**
หากไม่สามารถแก้ไขสถานะเดิมได้ ให้ใช้ **Hard Reset** เพื่อตั้งค่าเริ่มต้นของโทรศัพท์ หากผู้ใช้เปิดเครื่องในขณะที่ยังคงกดปุ่มเปิดปิดเครื่อง + ปุ่มหน้าหลัก + ปุ่มลดระดับเสียงค้างไวพร้อมกัน (10 วินาที) โทรศัพท์จะเปิดขึ้นและรีเซ็ตค่าจากโรงงานทันที หลังจาก **Hard Reset** ข้อมูลทั้งหมดและแอปพลิเคชันในโทรศัพท์จะถูกลบและไม่สามารถย้อนกลับได้

คำเตือน

หากคุณทำการ Hard Reset แอปพลิเคชันและข้อมูลของผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำการ **Hard Reset**

6. การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณสามารถเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "Hotspot" ได้ จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อให้สามารถเชื่อมต่อได้ ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และเชื่อมต่อเครือข่าย Wi-Fi

- บนหน้าจอหลัก **แตะแท็บ แอปพลิเคชัน และเลือก ตั้งค่า > ไร้สายและเครือข่าย > ตั้งค่า Wi-Fi**

2. แตะ **Wi-Fi** เพื่อเปิด และเริ่มสแกนหาเครือข่าย Wi-Fi

- รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ

3. แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายเป็นแบบเปิด คุณจะได้รับแจ้งให้ยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่าย โดยการแตะ **เชื่อมต่อ**

- หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)

4. แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

7. การใช้การ์ด microSD

รูปภาพ, ไฟล์เพลง และวิดีโอ สามารถบันทึกในหน่วยความจำภายนอกเท่านั้นก่อนการใส่ลงในตัว คุณต้องใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์ก่อน

หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถบันทึกภาพและวิดีโอที่ถ่ายได้

คำเตือน:

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้นอาจทำให้การ์ดความจำ และโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย ในการถอดการ์ดความจำอย่างปลอดภัย โปรดเลือก **หน้าจอหลัก > ตั้งค่าแอปพลิเคชัน > การ์ด SD และพื้นที่จัดเก็บของโทรศัพท์ > ยกเลิกการเชื่อมต่อการ์ด SD**

8. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากแอปฯที่เปิดจะทำงานแม้ว่าคุณจะเปิดแอปพลิเคชันอื่น โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่าง

ข้อความประกาศสำคัญ

แอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชันการหยุดและเริ่มต้นตามที่ต้องการเพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช่ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชันที่คุณใช้

1. บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
2. เลื่อนไปยังแอปพลิเคชันที่ต้องการ และแตะ **บังคับหยุด** เพื่อหยุดใช้งาน

เคล็ดลับ การกลับไปยังแอปพลิเคชันที่ใช้งานล่าสุด

- กดปุ่มหน้าหลักค้างไว้ จากนั้นหน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

9. ตัดลอก LG PC Suite จากการ์ด SD

LG PC Suite IV เป็นโปรแกรมที่ช่วยให้คุณเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สายการสื่อสารข้อมูล USB เพื่อให้คุณสามารถใช้ฟังก์ชันของโทรศัพท์มือถือบนคอมพิวเตอร์ของคุณได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก้ไข และลบข้อมูลในโทรศัพท์ได้โดยสะดวก
- ซิงโครไนซ์ข้อมูลจากคอมพิวเตอร์และโทรศัพท์ (รายชื่อ, ปฏิทิน/ข้อความ(SMS), บุคมารค, บันทึกการโทร)
- ถ่ายโอนไฟล์มัลติมีเดีย (ภาพถ่าย, วิดีโอ, เพลง) ได้สะดวกเพียงลากแล้ววางระหว่างคอมพิวเตอร์และโทรศัพท์
- ถ่ายโอนข้อความจากโทรศัพท์ไปยังคอมพิวเตอร์
- ใช้โทรศัพท์เป็นโมเด็ม
- อัปเดตซอฟต์แวร์โดยไม่มีสูญเสียข้อมูล

การตั้งค่า LG PC Suite จากการดหน่วยความจำ microSD

1. ใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์ (อาจติดตั้งไว้ในโทรศัพท์ของคุณแล้ว)
2. ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมดที่เก็บข้อมูลเท่านั้น ในโทรศัพท์ของคุณแล้ว (ในเมนูแอปพลิเคชัน ให้เลือก **ตั้งค่า > การด SD และพื้นที่จัดเก็บของโทรศัพท์** แล้วเลือกของ **ช่องที่เก็บข้อมูลเท่านั้น**)
3. เชื่อมต่อโทรศัพท์ผ่านสายข้อมูล USB กับคอมพิวเตอร์ของคุณ
4. • ในแถบสถานะ ให้ลากไอคอน USB
 - เลือก เชื่อมต่อ USB แล้ว และ เชื่อมต่อ
 - คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณ และโอนไฟล์

5. • คัดลอกไฟล์เดอร์ 'LGPCSuiteIV' ในที่เก็บข้อมูลไปยังคอมพิวเตอร์ของคุณ
 - รันไฟล์ 'LGInstaller.exe' ในคอมพิวเตอร์ และทำตามคำแนะนำ

* เมื่อทำการติดตั้ง LG PC Suite IV เสร็จเรียบร้อยแล้ว ให้เปิดการใช้โหมดที่เก็บข้อมูลเท่านั้น เพื่อเริ่มใช้งาน LG PC Suite IV

หมายเหตุ: โปรดอย่าย้ายหรือลบไฟล์โปรแกรมอื่นที่ติดตั้งในการดหน่วยความจำนี้ เนื่องจากอาจทำให้แอปพลิเคชันที่ติดตั้งไว้ล่วงหน้าในโทรศัพท์เสียหายได้

10. การเชื่อมต่อโทรศัพท์ กับคอมพิวเตอร์ผ่าน USB

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์ผ่านสาย USB กับคอมพิวเตอร์ของคุณ คุณจะต้องติดตั้งโปรแกรม LG PC Suite ในคอมพิวเตอร์ของคุณ คุณสามารถดาวน์โหลดโปรแกรมนี้ได้จากเว็บไซต์ของ

ข้อความประกาศสำคัญ

LG (www.lg.com) ไปที่ <http://www.lg.com> จากนั้นเลือกพื้นที่ประเทศและภาษาโปรดไปที่เว็บไซต์ของ LG สำหรับข้อมูลเพิ่มเติม เนื่องจาก PC suite มีอยู่ในการ์ด SD ที่อยู่ภายในกล่องโทรศัพท์ของคุณ คุณสามารถคัดลอกไปยังคอมพิวเตอร์ของคุณได้

LG-P500 ไม่สนับสนุน:

- การเชื่อมต่อคอมพิวเตอร์ผ่านบลูทูธ
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- สิ่งที่ต้องทำในปฏิทิน
- บันทึกลับ
- แอปพลิเคชัน Java

คู่มือผู้ใช้สำหรับ PC Suite IV อยู่ในเมนูวิธีใช้หลังจากติดตั้ง PC Suite IV

1. ใช้สาย USB ที่มาพร้อมกับโทรศัพท์ของคุณเพื่อเชื่อมต่อกับพอร์ต USB ที่คอมพิวเตอร์ของคุณจะได้รับการแจ้งว่าเชื่อมต่อ USB แล้ว

2. เปิดแถบการแจ้งเตือนและแตะเชื่อมต่อ USB แล้ว
3. แตะ **เชื่อมต่อ** เพื่อยืนยันว่าคุณต้องการถ่ายโอนไฟล์ระหว่างการถ่ายโอน microSD ของโทรศัพท์และคอมพิวเตอร์

เมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB คุณจะได้รับการแจ้งการถ่ายโอน microSD ของโทรศัพท์จะเชื่อมต่อเป็นไดรฟ์ในคอมพิวเตอร์ คุณสามารถคัดลอกไฟล์ระหว่างการถ่ายโอน microSD ได้

11. ปลดล็อคหน้าจอเมื่อใช้การเชื่อมต่อข้อมูล

หน้าจอจะดับลงหากไม่ได้แตะเป็นระยะเวลาหนึ่งเมื่อใช้การเชื่อมต่อข้อมูล ในการเปิดหน้าจอ LCD ให้แตะที่หน้าจอ

หมายเหตุ:

เมื่อยกเลิกการติดตั้ง PC Suite IV ไดรเวอร์ของ USB และบลูทูธจะไม่ถูกลบโดยอัตโนมัติ ดังนั้นคุณต้องยกเลิกการติดตั้งด้วยตัวเอง

เคล็ดลับ! ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้งเตือนและแตะ "ปิดที่เก็บข้อมูล USB"

ระหว่างเวลานี้ คุณจะไม่สามารถเข้าใช้การ์ด microSD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด microSD เช่น กล้อง, คลังภาพ และเพลง

ในการเลิกเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้ทำตามคำแนะนำในคอมพิวเตอร์เพื่อยกเลิกเชื่อมต่ออุปกรณ์ USB อย่างถูกต้อง เพื่อหลีกเลี่ยงการสูญเสียข้อมูลในการ์ด

1. ยกเลิกการเชื่อมต่ออุปกรณ์ USB ในคอมพิวเตอร์ของคุณอย่างปลอดภัย
2. เปิดแถบการแจ้งเตือนและแตะ **ปิดที่เก็บข้อมูล USB**
3. **แตะ ปิด**
ในกล่องโต้ตอบที่เปิดขึ้น

12. ถู้อโทรศัพท์ตั้งขึ้น

โปรดถือโทรศัพท์ตั้งขึ้นในลักษณะเดียวกับโทรศัพท์ทั่วไป ในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล โปรดหลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ เนื่องจากอาจส่งผลกระทบต่อคุณภาพของสัญญาณ

13. เมื่อนำจอค้าง

หากโทรศัพท์ไม่ตอบการป้อนข้อมูลของผู้ใช้ หรือหน้าจอค้าง: ถอดแบตเตอรี่ออก ใส่เข้าไปใหม่อีกครั้ง และเปิดโทรศัพท์ หากวิธีการนี้ไม่ได้ผล โปรดติดต่อศูนย์บริการ

14. อย่าเชื่อมต่อโทรศัพท์ของคุณขณะทำการเปิด/ปิดคอมพิวเตอร์

โปรดอย่าลืมยกเลิกการเชื่อมต่อโทรศัพท์ของคุณผ่านสายเคเบิล เนื่องจากอาจเกิดข้อผิดพลาดในคอมพิวเตอร์ของคุณได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หากต้องการเปิดโทรศัพท์ ให้กดปุ่มเปิด/ปิดเครื่องค้างไว้ 3 วินาที
หากต้องการปิดโทรศัพท์ ให้กดปุ่มเปิด/ปิดเครื่องค้างไว้ 3 วินาที
แล้วแตะที่ปิดเครื่อง

หูฟัง

ปุ่มเปิด/ปิดเครื่อง/
ปุ่มล๊อค 

- เปิดหรือปิดเครื่องโดยกดปุ่มนี้ค้างไว้
- ปิดหน้าจอและล๊อค

ช่องเซนเซอร์

ปุ่มหน้าหลัก 

- กลับไปยังหน้าจอหลัก

ปุ่มเมนู 

- ตรวจสอบว่ามีตัวเลือกอะไรบ้าง

ปุ่มย้อนกลับ 

- กลับไปยังหน้าจอหน้า

ปุ่มค้นหา 

- ค้นหาเว็บและเนื้อหาในโทรศัพท์



⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ ห้ามติดฟิล์มป้องกันบนเซนเซอร์รับสัญญาณของ LCD เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

เคล็ดลับ! การกดปุ่มเมนูในขณะที่คุณแตะแอปพลิเคชันเพื่อตรวจสอบรายการตัวเลือก

เคล็ดลับ! LG-P500 ไม่รองรับการสนทนาทางวิดีโอ

เคล็ดลับ! หาก LG-P500 เกิดข้อผิดพลาดขึ้นจากการใช้งาน หรือคุณไม่สามารถเปิดเครื่องได้ ให้ถอดแบตเตอรี่ ถัดตั้งเขาไปใหม่ และเปิดเครื่องหลังจากผ่านไป 5 วินาที

ช่องเสียบหูฟังสเตอริโอ



ปุ่มเปิด/
ปิดเครื่อง/
ปุ่มล็อค 

ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก:
ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย:
ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุม
ระดับเสียงต่อเนื่อง



ช่องเสียบอุปกรณ์ชาร์จ,
ช่องเสียบสายเคเบิล
micro USB



ไมโครโฟน

เลนส์กล้อง

ช่องเสียบ
การดหน่วย
ความจำ
Micro SD

ช่องเสียบซิมการ์ด



ฝาครอบด้านหลัง

แบตเตอรี่

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ ในการใส่ซิมการ์ดและแบตเตอรี่:

1. ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคง ใช้นิ้วหัวแม่มือของมืออีกข้าง ออกแรงกดฝาครอบด้านหลัง จากนั้นให้ใช้นิ้วชี้ยกฝาปิดแบตเตอรี่



2. ใส่ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

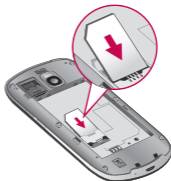

3. ใส่แบตเตอรี่ให้เข้าที่โดยให้หน้าสัมผัสสีทองในโทรศัพท์และแบตเตอรี่ตรงกัน



4. ปิดฝาครอบด้านหลัง



การชาร์จโทรศัพท์



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่

หมายเหตุ: โทรศัพท์ LG-P500 มีเสาอากาศภายใน โปรดใช้ความระมัดระวังเพื่อไม่ให้ขูดขีดหรือสร้างความเสียหายแก่บริเวณด้านหลังของโทรศัพท์ เนื่องจากจะทำให้สูญเสียประสิทธิภาพในการทำงาน

การติดตั้งการ์ดหน่วยความจำ

ในการจัดเก็บไฟล์มัลติมีเดีย เช่น ภาพที่ถ่ายโดยใช้กล้องถ่ายรูปในตัว คุณต้องใส่การ์ดหน่วยความจำในโทรศัพท์

ในการใส่การ์ดหน่วยความจำ:


หมายเหตุ: โทรศัพท์ LG-P500 รองรับการ์ดหน่วยความจำสูงสุดไม่เกิน 32 กิกะไบต์

1. ปิดโทรศัพท์ก่อนใส่หรือถอดการ์ดหน่วยความจำ
ถอดฝาครอบด้านหลัง



2. เปิดฝาปิดช่องเสียบและใส่การ์ดความจำในช่องเสียบ
โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

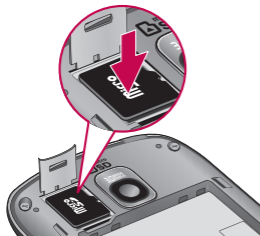

3. ปิดฝาปิดช่องเสียบ



⚠ คำเตือน!

อย่าใส่หรือถอดการ์ดความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ มิเช่นนั้น อาจทำให้การตความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการตความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ไดฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการตได้

หมายเหตุ: ไฟล์ทั้งหมดในการต จะถูกลบออกเมื่อคุณฟอร์แมตการต

หมายเหตุ: หากมีข้อมูลอยู่ในการตความจำของคุณ โครงสร้างไฟล์เดอรอาจจะแตกต่างไปจากเดิมภายหลังการฟอร์แมต

เนื่องจากไฟล์ทั้งหมดถูกลบออก **เคล็ดลับ!** หากยกเลิกการเชื่อมตอการตหน่วยความจำแล้ว คุณสามารถฟอร์แมตได้โดยมีขั้นตอนดังนี้ และ แอปพลิเคชัน >

ตั้งค่า>การต SD และพื้นที่จัดเก็บของโทรศัพท์>ฟอร์แมตการต SD

หน้าจอหลักของคุณ

เซนเซอร์รับสัญญาณ

หากมีการรับสายหรือโทรออก เซนเซอร์นี้จะปิดไฟหน้าจอ โดยอัตโนมัติ แล้วล็อคปุ่มกดแบบสัมผัส โดยการรับรู้วัตถุเมื่อโทรศัพท์ที่อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้ปุ่มกดแบบสัมผัสทำงานโดยไม่ได้ตั้งใจขณะโทรศัพท์ คุณไม่ต้องปลดล็อคโทรศัพท์เพื่อค้นหาสมุดโทรศัพท์ขณะใช้สาย

ล็อคโทรศัพท์ของคุณ

ในขณะที่คุณไม่ได้ใช้งาน LG-P500 ใ้กดปุ่มเปิดปิดเครื่องเพื่อล็อคโทรศัพท์ของคุณ ซึ่งจะช่วยป้องกันการกดปุ่มโดยไม่ได้ตั้งใจและประหยัดพลังงานแบตเตอรี่ นอกจากนี้ หากคุณไม่ใช่โทรศัพท์ชั่วคราว หน้าจอหลักหรือหน้าจออื่นที่คุณกำลังดูจะเปลี่ยนเป็นหน้าจอล็อคเพื่อประหยัดแบตเตอรี่

- หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าแบบการล็อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมด

ล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารข้อมูล)

การตั้งค่าแบบปลดล็อค:

คุณสามารถวาดแบบปลดล็อคของคุณได้โดยการเชื่อมต่อสี่จุดหรือมากกว่า

หากคุณตั้งค่าแบบไว้ หน้าจอของโทรศัพท์คุณจะถูกล็อค ในการปลดล็อคโทรศัพท์ วาดแบบตามที่คุณตั้งไว้บนหน้าจอ


ข้อควรระวัง: เมื่อคุณจะทำการตั้งค่าแบบปลดล็อค คุณจำเป็นต้องสร้างแอคเคาท์ Gmail ก่อน

ข้อควรระวัง: หากมีการวาดแบบผิดติดต่อกันมากกว่า 5 ครั้ง คุณจะไม่สามารถปลดล็อคโทรศัพท์ได้ ในกรณีนี้ ข้อมูลส่วนตัวและข้อมูลที่ดาวน์โหลดทั้งหมดจะถูกลบ




หน้าจอล็อกของคุณ


ปลดล็อกหน้าจอ

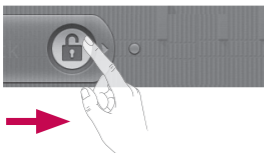เมื่อไม่มีการใช้งานโทรศัพท์ LG-P500 เครื่องจะกลับไปล็อกหน้าจอใช้นิ้วมือของคุณลากจากซ้ายไปขวาเพื่อปลดล็อกหน้าจอ



โหมดเงียบ

จากแถบการแจ้งเตือน ให้แตะ  เป็น  หรือในกรณีที่คุณไม่ได้ใช้แบบการปลดล็อก เพียงลาก  ไปทางขวา



ในการทำให้โทรศัพท์ของคุณใช้งานได้อีกดูปุ่มเมนู, หน้าหลัก, ย้อนกลับ หรือ เปิดปิดเครื่อง หน้าจอล็อกจะปรากฏ แต่ที่

ไอคอนล๊อคและลากนิ้วไปทางขวาเพื่อปลดล็อกหน้าจอล็อก หน้าจอล็อกสุดท้ายที่คุณใช้จะเปิดขึ้น

หน้าหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูนอกจากนี้ คุณสามารถปรับแต่งพาเนลด้วย Widget, ปุ่มลัด ซึ่งเป็นปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ใช้บ่อย

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ **เคล็ดลับ!** ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอล็อก ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่มในหน้าจอล็อก **เคล็ดลับ!** ในการลบไอคอนแอปพลิเคชันในหน้าจอล็อก ให้แตะค้างไว้ที่ไอคอนปุ่มลัดที่คุณต้องการลบและลากไปยัง  **เคล็ดลับ!** คุณไม่สามารถลบแอปพลิเคชันที่โหลดไว้อัตโนมัติ (คุณสามารถลบได้เพียงไอคอนบนหน้าจอเท่านั้น)

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

แตะปุ่มหน้าหลักค้างไว้ หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้

แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนสุดของหน้าจอ



แตะและเลื่อนแถบการแจ้งลงด้วยนิ้วมือ หรือ ในหน้าจอหลักแตะปุ่ม **เมนู** แล้วเลือก **การแจ้ง** ในหน้าจอนี้ คุณสามารถตรวจสอบและจัดการกับสถานะของ Wi-Fi, บลูทูธ, GPS รวมถึงการแจ้งอื่นๆ ได้

การป้องกันข้อความ

คุณสามารถป้องกันข้อความด้วยแป้นพิมพ์หน้าจอได้ แป้นพิมพ์หน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติ เมื่อคุณจำเป็นต้องป้องกันข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเองเพียงแตะที่ฟิลด์ข้อความที่คุณต้องการป้องกันข้อความ ปุ่มกด Qwerty (ปุ่มกดโทรศัพท์)

ปุ่ม Shift - แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ และสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

ปุ่ม XT9 - เปิดหรือปิดโหมด XT9

ปุ่มตั้งค่า

ปุ่มกดตัวเลขและสัญลักษณ์ - แตะเพื่อเปลี่ยนการป้องกันข้อมูลเป็นการป้องกันตัวเลขและสัญลักษณ์ ตัวพิมพ์ใหญ่

ปุ่ม Enter


ปุ่ม สำหรับลบการแป้นพิมพ์ออกจากหน้าจอ

ปุ่มลบ

หน้าจอหลักของคุณ

◀ ▶ เลื่อนย้อนกลับหรือไปข้างหน้าระหว่างตัวอักษร

เคล็ดลับ!

ในการสลับระหว่างปุ่มกด Qwerty และปุ่มกดโทรศัพท์ ให้แตะ  แล้วเลือกโครงร่างแป้นพิมพ์

การตั้งค่าแอคเคาท์ Google

ครั้งแรกที่คุณเปิดแอปพลิเคชัน Google ในโทรศัพท์ คุณจะต่อใช้งานอื่นด้วยแอคเคาท์ Google ของคุณ หากคุณไม่มีแอคเคาท์ Google เครื่องจะขอให้คุณสร้างแอคเคาท์

ข้อสำคัญ


- บางแอปพลิเคชัน เช่น ปฏิทินจะสามารถทำงานได้กับแอคเคาท์ Google แรกที่คุณเพิ่มเท่านั้น หากคุณต้องการใช้มากกว่าหนึ่งแอคเคาท์ Google ในโทรศัพท์ของคุณ โปรดตรวจสอบให้แน่ใจว่าคุณทำการใช้งานด้วยแอคเคาท์ที่คุณต้องการใช้งานกับแอปพลิเคชันนั้นๆ ก่อนการใช้งาน

เมื่อคุณทำการใช้งานอื่น รายชื่อ, ขอบความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ

การโทร

การรับสายและการปฏิเสธสายเรียกเขา

เมื่อลือคหน้าจอ


ลากไอคอน **รับสาย**  ไปทางขวา

ลากไอคอน **ปฏิเสธ**  ไปทางซ้ายเพื่อปฏิเสธสาย

เรียกเขากลับขอความช่วยเหลือจากด้านล่าง หากคุณต้องการส่งหากคุณไม่รู้จักผู้โทรจะไม่สามารถใช้งานแถบขอความช่วยเหลือได้

เมื่อไม่ได้ลือคหน้าจอ

แตะที่ไอคอน **รับสาย** 

แตะที่ไอคอน **ปฏิเสธ** 

เพื่อปฏิเสธสายเรียกเขา

ข้อความ

โทรศัพท์ LG-P500

ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเมนูที่ใช้งานง่ายเพียงเมนูเดียว

คำเตือน:

การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับวิธีการเข้ารหัสและภาษาของ SMS

คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

การเปิดหน้าจ่อีเมลและ แอคเคาท์

คุณสามารถใช้แอปพลิเคชันอีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Gmail ได้
แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange

เครือข่ายสังคม

ด้วยโทรศัพท์ของคุณ คุณสามารถผลิตเพลินกับเครือข่ายสังคมและจัดไมโครบล็อกของคุณในชุมชนออนไลน์ได้
คุณสามารถอัปเดตสถานะปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้ตามเวลาจริง

คุณสามารถเพิ่ม Facebook, Twitter ในโทรศัพท์ของคุณได้

หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

กล้องถ่ายรูป

ทำความรู้จักกับช่องมองภาพ

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบไปทาง "-" เพื่อให้ได้ภาพที่มีความสว่างน้อยลง หรือไปทาง "+" เพื่อให้ได้ภาพที่มีความสว่างมากขึ้น

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างใด



โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

การถ่ายภาพ

คลังภาพ - คุณสามารถเขาดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป เพียงแตะ และคลังภาพของคุณจะปรากฏบนหน้าจอ

ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่การใช้การตั้งค่าขั้นสูง

โฟกัส - แตะไอคอนนี้เพื่อเลือกเมนูตัวเลือก โปรดดูที่การใช้โหมดโฟกัส

โหมดภาพถ่าย - เลือกจาก **อัตโนมัติ**, **รูปคน**, **ทิวทัศน์**, **กีฬา**, **กลางคืน**, และ **พระอาทิตย์ตก**

หมายเหตุ: คุณต้องใส่การ์ดหน่วยความจำก่อนเพื่อถ่ายภาพ หากไม่ได้ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถถ่ายภาพหรือบันทึกภาพที่ถ่ายได้

เมื่อคุณถ่ายภาพแล้ว

แบ่งปัน แตะเพื่อแบ่งปันรูปภาพของคุณผ่านทาง **บลูทูธ, อีเมล, Facebook, Gmail, ข้อความ, Picasa** หรือ **Twitter**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

ตั้งเป็น แตะเพื่อใช้ภาพเป็น **ไอคอนรายชื่อ, หน้าจอล็อค** หรือ **พื้นหลัง**

แก้ไข แตะเพื่อแก้ไขชื่อของภาพที่เลือก

แอปพลิเคชันใน Google

Maps

ตรวจสอบสถานที่ปัจจุบันของคุณและสภาพการจราจร รวมทั้งรับข้อมูลทิศทางเพื่อไปยังปลายทางของคุณ โทรศัพท์ LG-P500 ต้องเชื่อมต่อกับ Wi-Fi หรือ 3G/GPRS



หมายเหตุ: Maps

ไม่ได้ให้บริการครอบคลุมทุกเมือง และทุกประเทศ

กดปุ่มเมนูเพื่อใช้ตัวเลือก:

ค้นหา  -


ป้อนสถานที่ที่คุณค้นหา


ทิศทาง  - ช่วยคุณค้นหาเส้นทางไปยังสถานที่ที่คุณป้อน และ  เพื่อป้อนข้อมูลเลือกจาก


รายชื่อ หรือจุดบนแผนที่ หรือตำแหน่งปัจจุบันของฉัน

มุมมอง  - คุณสามารถสลับมุมมองจากการจราจรเป็นดาวเทียมหรือสภาพพื้นที่ได้ และที่ Latitude จากนั้นคุณจะเห็นที่ตั้งของบุคคลในรายชื่อของคุณ

ตามแอคเคาท์ Google

ตำแหน่งของฉัน  - แสดงตำแหน่งปัจจุบันของคุณบนแผนที่

เข้าร่วม Latitude  - แบ่งปันที่ตั้งปัจจุบันของคุณกับเพื่อนๆ ที่คุณเลือก และ Google

อื่นๆ  - ล้างแผนที่ หรือค้นหารายการที่ติดตามและอื่นๆ

Market

Android Market ช่วยให้ดาวน์โหลดแอปพลิเคชันและเกมส์ที่มีประโยชน์

Google Mail

ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ Google Mail ในโทรศัพท์ของคุณจะทำการซิงโครไนซ์กับแอคเคาท์ Google Mail บนเว็บโดยอัตโนมัติ

Talk

Talk คือโปรแกรมข้อความโต้ตอบแบบทันทีซึ่งช่วยให้คุณติดต่อสื่อสารกับ

บุคคลอื่นที่ใช้
Talk เช่นกัน

ThinkFree Office

ThinkFree Office ช่วยให้
คุณสามารถอ่านเอกสาร
และมีฟังก์ชันการแก้ไขแบบ
จำกัดสำหรับ Microsoft
Word, Excel และ
PowerPoint
แต่คุณไม่สามารถแก้ไขไฟล์
PDF ได้


แต่ที่ไฟล์ค้างไว้
จากนั้นจะสามารถใช้งาน
ตัวเลือก เปิด, อัปโหลด,
แก้ไข, ย้าย, คัดลอก,
ลบ, ส่ง และคุณสมบัติ
ขึ้นอยู่กับประเภทของไฟล์


เว็บไซต์ เบราเซอร์

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

การใช้ตัวเลือก


กดปุ่ม **เมนู** เพื่อดูตัวเลือก

 **หน้าต่างใหม่** -
เปิดหน้าต่างใหม่

 **บุ๊คมาร์ค** - เพิ่ม/
แสดงบุ๊คมาร์ค
แสดงไซต์ที่เข้าชมบ่อย
สุดและประวัติ

 **หน้าต่าง** - แสดงหน้า
ต่างที่เปิดอยู่ทั้งหมด

 **รีเฟรช** -
แตะเพื่อรีเฟรชเว็บเพจ

 **ไปข้างหน้า** - ไปที่เพจ
ที่ทำการเชื่อมต่อถัดจากหน้า
ปัจจุบัน ลักษณะการทำงาน
จะตรงข้ามกับปุ่มย้อน
กลับ ซึ่งจะไปยังเพจก่อนหน้า

Wi-Fi


เปิด Wi-Fi

จากหน้าจอหลัก
เปิดแถบการแจ้งเตือนและแตะเปิด



จากเมนู เลือกตั้งค่า >
ตั้งค่าไร้สายและเครือข่าย >
Wi-Fi 

การเชื่อมต่อไปยัง Wi-Fi

เลือกเครือข่าย Wi-Fi ที่คุณต้องการเชื่อมต่อ หากคุณพบ  คุณจะต้องป้อนรหัสผ่านเพื่อทำการเชื่อมต่อเคล็ดลับ!

หากคุณอยู่นอกพื้นที่ Wi-Fi และเลือกใช้การเชื่อมต่อ 3G อาจมีค่าใช้จ่ายเพิ่มเติม

การแชร์ USB

คุณสามารถแชร์การเชื่อมต่ออินเทอร์เน็ตให้กับคอมพิวเตอร์ได้

คุณสามารถแชร์โทรศัพท์กับคอมพิวเตอร์ได้โดยใช้สายเคเบิล USB

ตั้งค่า > ตั้งค่าไร้สายและเครือข่าย > การแชร์และฮอตสปอตเคลื่อนที่ > การแชร์ USB สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการแชร์ USB ให้คลิก วิธีใช้

การแชร์ Wi-Fi

ใช้ LG-P500

ของคุณเป็นฮอตสปอต Wi-Fi หรือแบ่งปันการเชื่อมต่อข้อมูลของ LG-P500 ด้วย USB

ตั้งค่า > ตั้งค่าไร้สายและเครือข่าย > การแชร์และฮอตสปอตเคลื่อนที่ (Tethering & portable hotspot) > ฮอตสปอต Wi-Fi เคลื่อนที่ (Portable Wi-Fi hotspot) เคล็ดลับ!

หากโทรศัพท์ของคุณเข้าสู่โหมดปิดถึงแม้ว่าจะมีการเชื่อมต่อ Wi-Fi การเชื่อมต่อ Wi-Fi จะถูกปิดโดยอัตโนมัติ ในกรณีนี้ หากโทรศัพท์ของคุณสามารถเข้าใช้ 3G ได้ อาจจะทำให้การเชื่อมต่อไปยังเครือข่าย 3G โดยอัตโนมัติ และอาจมีค่าใช้จ่ายเพิ่มเติม

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์
โทรศัพท์มือถือ LG
จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่
<http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp>

→ เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดต
เฟิร์มแวร์ของโทรศัพท์เป็น
เวอร์ชันล่าสุดได้อย่างสะดวก
จากอินเทอร์เน็ตโดยไม่ต้อง
ไปที่ศูนย์บริการ

เนื่องจากการอัปเดตเฟิร์มแวร์
โทรศัพท์มือถือต้องการให้ผู้ใช้
ดำเนินการอัปเดต
อย่างระมัดระวัง

โปรดตรวจสอบคำแนะนำและ
หมายเหตุที่ปรากฏขึ้นในแต่
ละขั้นตอนก่อนดำเนินการ
ต่อไป (ติดต่อศูนย์บริการ)
(โปรดทราบว่า การถอดสาย
ข้อมูล USB หรือแบตเตอรี่
ระหว่างการอัปเดตอาจทำให้
โทรศัพท์มือถือชำรุดเสีย

หายได้

DivX Mobile **DIVX**

เกี่ยวกับ DIVX VIDEO:
DivX® เป็นฟอร์แมตวิดีโอ
ดิจิทัลที่สร้างโดย
DivX, Inc. อุปกรณ์นี้เป็น
อุปกรณ์ DivX Certified®
อย่างเป็นทางการซึ่ง
สามารถเล่นวิดีโอ DivX
ได้ สำหรับข้อมูลเพิ่มเติม
และเครื่องมือซอฟต์แวร์อื่นๆ
ที่ใช้ในการแปลงไฟล์เป็น
วิดีโอ DivX โปรดไปที่
www.divx.com

เกี่ยวกับ DIVX VIDEO-
ON-DEMAND: อุปกรณ์
DivX Certified® นี้ต้องทำ
การลงทะเบียนเพื่อที่จะ
สามารถเล่นภาพยนตร์
DivX Video-on-Demand
(VOD) ที่ซื้อได้
ในการรับรหัสการลงทะเบียน
ของคุณ ให้ไปที่ส่วน
DivX VOD
ในเมนูตั้งค่าอุปกรณ์ของคุณ
ไปที่ vod.divx.com สำหรับ
ข้อมูลเพิ่มเติมเกี่ยวกับ

วิธีการลงทะเบียน **DivX
Certified®** สำหรับเล่นวิดีโอ
DivX® ไม่เกิน 320 x 240
DivX®, DivX Certified®
และโลโก้ที่เกี่ยวข้อง
เป็นเครื่องหมายการค้าของ
DivX, Inc.
และใช้โดยได้รับอนุญาต

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบुकคโโล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ LG-P500. (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อุปกรณ์ ชาร์จ



สายเคเบิล ข้อมูล

เชื่อมต่อ
โทรศัพท์
LG-P500
ของคุณเข้ากับ
คอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทร
ศัพท์ LG-P500



ชุดหูฟัง



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ก่อนเริ่มต้นใช้งานโทรศัพท์ โปรดอ่านก่อน!

วิธีบันทึกไฟล์เพลง/ วิดีโอในโทรศัพท์

เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สาย USB

แตะและลากแถบสถานะในหน้าจอหลักลง เลือก

เชื่อมต่อ USB > เปิดที่เก็บข้อมูล USB > เปิดโฟลเดอร์เพื่อดูไฟล์

หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณ คุณต้องทำการตั้งค่าด้วยตัวเอง

สำหรับข้อมูลเพิ่มเติม โปรดดูที่ 'การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล'

การบันทึกไฟล์เพลงหรือวิดีโอจากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์

- คุณสามารถคัดลอกหรือย้ายไฟล์จากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์โดยใช้ตัวอ่านการ์ด

- หากมีไฟล์วิดีโอที่มีไฟล์

คำบรรยาย

(ไฟล์ .smi หรือ .srt ที่ใช้ชื่อเดียวกับไฟล์วิดีโอ)

ใหวางไฟล์ไว้ในโฟลเดอร์เดียวกันเพื่อให้คำบรรยายปรากฏขึ้นโดยอัตโนมัติในขณะที่เล่นไฟล์วิดีโอ

- เมื่อทำการดาวน์โหลดไฟล์เพลงหรือวิดีโอจะต้องมีลิขสิทธิ์อย่างถูกต้อง โปรดอย่าลืมว่าไฟล์ที่เสียหายหรือมีนามสกุลไฟล์ที่ไม่ถูกต้องอาจสร้างความเสียหายให้กับโทรศัพท์ได้

วิธีเล่นไฟล์เพลง/ วิดีโอในโทรศัพท์

การเล่นไฟล์เพลง

จากนั้นค้นหาไฟล์ที่ต้องการจากในรายการแล้วเลือกไฟล์เพื่อเล่น

การเล่นไฟล์วิดีโอ

จากนั้นค้นหาไฟล์ที่ต้องการจากในรายการแล้วเลือกไฟล์เพื่อเล่น

ก่อนเริ่มต้นใช้งานโทรศัพท์ โปรดอ่านก่อน!

วิธีย้ายรายชื่อจากโทรศัพท์เก่าไปยังโทรศัพท์ใหม่ในปัจจุบัน

เลือกส่งออกรายชื่อของคุณเป็นไฟล์ CSV จากโทรศัพท์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

1. ดาวน์โหลด Mobile Sync for Android จาก www.lg.com และติดตั้งในคอมพิวเตอร์ เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์มือถือ Android ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
2. เลือกไอคอน รายชื่อไปที่ **เมนู > ไฟล์ > อิมพอร์ต** และเลือกไฟล์ CSV ที่บันทึกไว้ในคอมพิวเตอร์
3. หากฟิลด์ภายในไฟล์ CSV ที่อิมพอร์ตแตกต่างจากฟิลด์ที่อยู่ใน Mobile Sync for Android คุณจำเป็นต้องแมปฟิลด์ หลังจากแมปฟิลด์ ให้คลิก ตกลง จากนั้น รายชื่อทั้งหมดจะ

ถูกเพิ่มใน Mobile Sync for Android

4. หาก Mobile Sync for Android ตรวจพบการเชื่อมต่อของโทรศัพท์ LG-P500 (โดยใช้สายเคเบิล USB) ให้คลิกที่ "ซิงค์" หรือ "ซิงค์รายชื่อ" เพื่อทำการซิงโครไนซ์รายชื่อที่บันทึกไว้ในคอมพิวเตอร์กับโทรศัพท์ของคุณ และทำการบันทึก

วิธีการส่งข้อมูลจากโทรศัพท์ของคุณผ่านบลูทูธ

การส่งข้อมูลผ่านบลูทูธ: คุณสามารถส่งข้อมูลผ่านบลูทูธได้โดยการเปิดแอปพลิเคชันที่เกี่ยวข้องของ ไม่ใช่การเปิดจากเมนูบลูทูธซึ่งไม่เหมือนกับโทรศัพท์มือถือทั่วไป

- * **การส่งรูปภาพ:** เรียกใช้แอปพลิเคชันคลังภาพและเลือก **รูปภาพ > เมนูคลิก แบ่งปัน** และเลือก

บลูทูธ > ให้ตรวจสอบว่า
บลูทูธเปิดอยู่ และเลือก
สแกนหาอุปกรณ์
> เลือกอุปกรณ์ที่คุณต้องการ
การส่งข้อมูลจากรายการ

* **เอ็กซ์พอร์ตรายชื่อ:**
เรียกใช้แอปพลิเคชันรายชื่อ
ชื่อ และที่อยู่ที่คุณต้องการ
ทำการเอ็กซ์พอร์ต กด **เมนู**
และเลือก **แบ่งปัน** >
บลูทูธ > ให้ตรวจสอบว่า
บลูทูธเปิดอยู่และเลือก
สแกนหาอุปกรณ์ > เลือก
อุปกรณ์ที่คุณต้องการส่ง
ข้อมูลจากรายการ

* **การส่งข้อมูลไปยังรายชื่อ
ที่เลือกหลายรายการ:**
เรียกใช้แอปพลิเคชัน
"รายชื่อ" ในการเลือกมาก
กว่าหนึ่งรายชื่อ กดปุ่มเมนู
และแตะที่ **เลือกหลาย
รายการ** แตะที่รายชื่อที่
คุณต้องการส่งและกดปุ่ม
เมนู และแตะ
เลือกทั้งหมด
> แตะ **แบ่งปัน** > **บลูทูธ**
> **เลือกทั้งหมด** เลือก

แบ่งปัน > **บลูทูธ** > ให้
ตรวจสอบว่าบลูทูธเปิดอยู่
และเลือก **สแกนหาอุปกรณ์**
> เลือกอุปกรณ์ที่
คุณต้องการส่งข้อมูลจาก
รายการ

* **การเชื่อมต่อกับ FTP
(เครื่องรับหรือรับเฉพาะ
เซิร์ฟเวอร์ FTP):** แตะ
"ตั้งค่า" > "ไร้สายและ
เครือข่าย" > "ตั้งค่า
บลูทูธ" จากนั้น ทำ
เครื่องหมายที่ช่อง
"ค้นหาได้" และทำการค้น
หาอุปกรณ์อื่น ค้นหา
บริการที่คุณต้องการและ
ทำการเชื่อมต่อกับเซิร์ฟ
เวอร์ FTP

เคล็ดลับ: เวอร์ชันบลูทูธ 2.1
EDR และได้รับการรับรอง
จาก Bluetooth SIG ซึ่ง
สามารถทำงานร่วมกับอุปกรณ์
อื่นๆ ที่ได้รับการรับรอง
จาก Bluetooth SIG ได้
- หากคุณต้องการค้นหา
โทรศัพท์เครื่องนี้จาก
อุปกรณ์อื่นๆ ไปที่

ก่อนเริ่มต้นใช้งานโทรศัพท์ โปรดอ่านก่อน!

"ตั้งค่า" > "ไร้สายและ
เครือข่าย" > "ตั้งค่าบลูทูธ"

จากนั้น ทำเครื่องหมายที่ช่อง
"ค้นหาได้"

เครื่องหมายที่ช่องนี้จะหายไป
หลังจากผ่านไป 120 วินาที

- รูปแบบที่รองรับได้แก่
SDAP, HFP, HSP, OPP,
PBAP (เซิร์ฟเวอร์), FTP
(เซิร์ฟเวอร์), A2DP,
AVRCP, และ DUN

LG-P500 User Guide



This guide helps you get started using your phone.

If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google search, Maps, Google Mail, YouTube, Talk and Android Market are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact LG-P500 phone by LG, designed to operate with the latest digital mobile communication technology.

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
2. When all applications appear, scroll and select the application you want to uninstall.
3. Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising Battery Life

You can extend your battery's life by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

Important notice

To check the battery charge level


1. On the home screen, touch **Applications** tab and select **Settings> About phone> Status**.
2. The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


To monitor and control what uses the battery

1. On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
2. The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market™. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using Unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.



WARNING: Precautions to take when using the Pattern Lock, It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you used all the 5 opportunities, you can attempt it after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

If you logged in Google account on the phone and failed to use correct pattern 5 times, tap the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone.

If you haven't created a Google account on the phone or you forgot it, you need to perform a factory reset.

Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.

1. Turn the power off.
2. Press and hold for over 10 seconds: Power key + Home Key + Down volume key.
3. When the power turns on, release these keys.

5. Using Safe Mode and Hard Reset

Using Safe mode

*** To recover from malfunction state of your phone**

1. Turn off your phone and reboot. While your phone is powering back on, press and hold the Menu key during LG Logo is displayed. Your phone _____

Important notice

will boot all the way to the main screen and display "safe mode" in lower left corner.

2. Select **Settings**>**Applications**>**Manage applications**, and choose the application then select an **Uninstall** icon.
3. After uninstalling the application, turn off and reboot your phone.

* Using Hard Reset (Factory Reset)

If it does not restore to the original condition, use **Hard Reset** to initialise your phone. If user turns on the phone with pressing and holding Power + Home + Down volume key at the same time (for 10 seconds), the phone will turn on and perform factory reset immediately.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.

WARNING

If you perform Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network

1. On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
2. Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
 - List of available Wi-Fi networks are displayed. Secured networks are indicated by a lock icon.
3. Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
4. The Status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first. Without inserting a memory card, you will not be able to save pictures and video you had taken.



WARNING:

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Settings> SD Card&phone storage > Unmount SD card**.

Important notice

8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use

1. On the home screen, touch **Applications** tab and select **Settings> Applications> Manage applications**.
2. Scroll to the desire application and touch **Force stop** to stop using it.

TIP Getting back to recent Apps

- Press and hold Home key, then a screen will display a listing the applications you used recently

9. Copy LG PC Suite from SD Card

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently
- Synchronise data from a PC & phone (Contacts, Calendar, Message(SMS), Bookmark, Call log)

- Transfer multimedia files (photos, videos, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without losing your data

Installing LG PC Suite from your microSD memory card

1. Insert your microSD memory card on your phone. (It may already be inserted on your phone.)
2. Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the applications menu, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

3. Connect your phone through USB data cable to your PC.
4.
 - In the status bar, drag the USB icon.
 - Choose USB Connected and Mount.
 - You can view the mass storage content on your PC and transfer the files.
5.
 - Copy the 'LGPCSuiteIV' folder on your mass storage to your PC.
 - Run 'LGInstaller.exe' file on your PC and follow the instructions.

* When LG PCSuite IV installation completed, disable **Mass storage only** mode to run LG PCSuite IV.

NOTE: Please do not remove or delete other program file installed on your memory card this may cause to damage your pre-installed application on the phone.

Important notice

10. Connecting your phone to a computer via USB

NOTE: To synchronize your phone via USB cable with your PC, you need to install the LG PC suite program on your PC. You can download this program from the LG website (www.lg.com). Go to <http://www.lg.com> and select your region, country & language. Visit LG Website for more information. As PC suite is embedded at inboxed SD card, you can simply copy it to your PC.

LG-P500 does not support:

- PC Connection via Bluetooth
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java Application

User's guide for PC Suite IV is in Help menu after install PC Suite IV.

1. Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
2. Open the Notification drawer and touch USB connected.
3. Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

Note: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

Tip! To use a microSD card on your phone again, you need to open the Notification drawer and touch "Turn off USB storage".

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

1. Safely disconnect the USB device on your computer.
2. Open the Notification drawer and touch **Turn off USB storage**.
3. Touch **Turn off** in the dialog that opens.

12. Hold Phone straight up

Please hold the mobile phone straight up as a regular phone.

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

Important notice

13. When Screen freezes

If the phone does not respond to user input or the screen freezes:


Remove the battery, insert it again and power on the phone. If it still does not work, please contact to the service center.

NOTE: Do not connect your phone When you power on/off your PC.

Getting to know your phone

To turn on the phone, press and hold Power key for 3 seconds.

To Turn off the phone, press Power key for 3 seconds and touch Power Off.

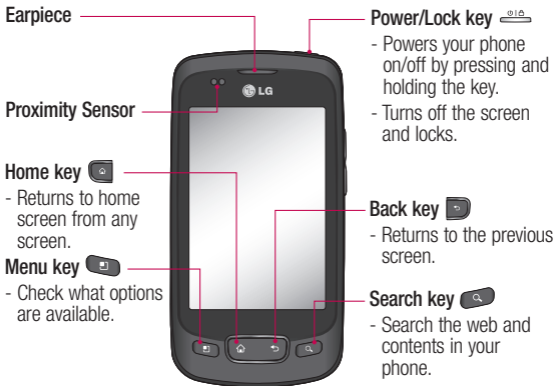

⚠ WARNING: Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities. Do not cover the protective film on the LCD's proximity sensor. This can cause the sensor to malfunction.

Tip! Press Menu key whenever you tap an application to check what options are available.

Tip! LG-P500 does not support Video call.

Tip! If LG-P500 has errors when you use it or you can not turn it on, remove battery ,install it again and turn it on after 5 seconds.

Getting to know your phone

Stereo earphone connector



Power/Lock key



Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.



Charger, micro USB cable connector




Microphone connector

Camera lens



Back cover

microSD memory card slot

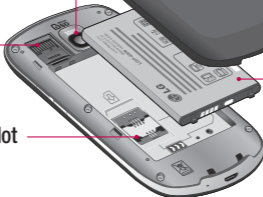

Battery

SIM card slot

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

1. To remove the back cover, Hold the phone on your hand firmly. With the other hand, firmly press your thumb on the back cover. And lift off the battery cover.



2. Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.



3. Insert the battery into place by aligning the gold contacts on the phone and the battery.



Getting to know your phone

4. Replace the back cover of the phone.



Charging your phone



NOTE: The battery must be fully charged initially to improve battery lifetime.

NOTE: The LG-P500 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

Installing the memory card


To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

To insert a memory card:

1. Turn the phone off before inserting or removing the memory card. Remove the back cover.



2. Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

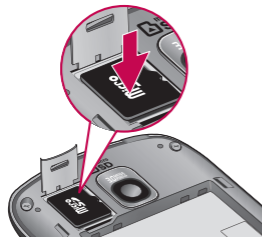

3. Close the slot protection.



WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip! If your memory card is already Unmount, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card.**

Your Home screen

Proximity sensor

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

Lock your phone

When you are not using LG-P500, Press the power key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen to conserve the battery.

- If there are any programs running when you lock your phone, they may be still running in lock mode. It is recommended to exit all

programs before entering the lock mode to avoid unnecessary charges. (e.g., phone call, web access and data communications)

Setting unlock pattern: You can draw your own unlock pattern by connecting four or more dots.

If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Caution: When you set an unlock pattern, you need to create your Google mail account first.

Caution: If there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, your personal information and downloaded data will be deleted.

Unlock screen



Whenever your LG-P500 is not in use, it will return to the lock screen. Touch the lock icon and drag your finger to the right to


unlock the screen.



Silent Mode

From Notification drawer, touch

 Or if you don't use unlock pattern, simply drag  to the left.



To wake up your phone, press **Menu**, **Home**, **Back**, **Search** or **Power** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen or the last screen you were working.


Home screen

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

Tip! To add an application icon to home screen, touch and hold an application you want to add to home screen.


Tip! To delete an application icon on the home screen, click and hold the shortcut icon you want to delete and drag to .

Getting back to a recently used applications

Touch and hold the Home key. The screen will show you a pop up with icons of applications that you've used recently.

Notification drawer

The notification drawer runs across the top of your screen.

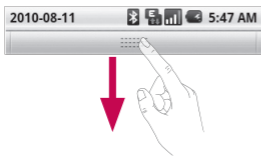

Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can

check and manage Wi-Fi, Bluetooth, GPS, 3G Connection, Silent mode status as well as other notifications.

Entering text

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Phone Keypad


 **Shift Key** - Touch once to capitalize the next letter you type. Double-tap for all caps.

 **XT9 Key** - Turn on or off XT9 Mode.



 **Setting key**


 **Number and Symbols Key** - Touch to change input to number and symbol entry. caps.

 **Enter Key**

 **Key** Remove keypad from the screen.

Delete Key

  Go forward or backward between letters.

Tip! To switch between Qwerty Keypad and Phone Keypad, Touch  and choose keypad Types.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

IMPORTANT


- Some applications, such as Calendar, work only with the Google Account. If you plan to use more than one Google Account with your phone you have option to use more than one google account, When you sign in, your contacts, Gmail

mails, Calendar events, and other information from these applications and services on the web are synchronized with your phone.

Calls


Answering and rejecting a call

When screen locked

Drag the **Answer** icon  to the right.


Drag **Decline** icon  to the left reject an incoming call. Drag Excues msg bar bottom to up if you want to send one.


When screen unlocked

Touch the **Answer** icon  .
Touch **Decline** icon  to reject an incoming call.

Messaging

Your LG-P500 combines SMS and MMS into one intuitive, easy-to-use menu.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services like Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status upload photos and view your friends' status updates real-time. You can add your Facebook, Twitter to your phone.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.



Video mode – Slide down this icon to switch to video mode.

Taking a photo

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture.

Camera

Once you've taken the photo

Share Touch to share your photo via **Bluetooth, Email, Facebook, Gmail, Messaging, Picasa** or **Twitter**.

NOTE: Additional charges may apply when MMS messages are sent or downloaded while roaming.

Set as Touch to use the image as **Contact icon** or **Wallpaper**.

Rename Touch to edit the name of the selected picture.

Google applications



Maps


Check your current location and traffic and receive directions to your destination. The LG-P500 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.


Press Menu key to use options:

Search  – Enter the place you are looking for.

Directions  – This will let you find out the route of your entered place. Touch  to input the place. Choose from Contacts or Point on Map or My current location.

Layers  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude then you will see the location of your contacts from Google Account.

My Location  – Point your current location on the map.

Join Latitude  – Share your location with friends you choose and Google.

More  – Clear map or find Starred items and more.

Market

Android Market lets you download useful applications and games.

Gmail

Depending on your synchronization settings, Gmail on your phone is automatically synchronised with your Gmail account on the web.

Talk

Talk is Google's instant messaging program. It lets you communicate with other people who also use Talk.

ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited edit functions for Microsoft Word, Excel and PowerPoint. But You can not edit PDF file.

Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

The Web

Browser

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options


Press the **Menu** key to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.


 **Windows** – Show all your open windows.


 **Refresh** – Touch to refresh the web page.

 **Forward** – Goes to the page you connected later than current page. This is opposite concept with Back key, which goes to the previous page.


Wi-Fi

Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, Choose settings > Wireless & network settings > Wi-Fi .

To connect to Wi-Fi

Choose Wi-Fi network you want to connect. If you see  , you need to enter password to connect.

TIP!

If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.

USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering

For more information regarding USB tethering, click Help.

TIP!

To use USB Tethering, you need to install PC Suite on to your PC first.

Wi-Fi Tethering

Use your LG-P500 as portable Wi-Fi hotspot or share LG-P500's data connection via usb

Settings > Wireless & network settings > Tethering & portable

hotspot > Portable Wi-Fi hotspot

TIP!

If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically.

In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a

service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 320 x 240.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757

Accessories

These Accessories are available for use with the LG-P500.
(Items described below may be optional.)

Charger



Data cable

Connect your
LG-P500 and
PC.



Battery



User Guide

Learn more
about your LG-
P500.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Before using the mobile phone, please read first!

How to save music/video files to the phone

Connect your phone to the PC using the USB cable.

Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > select OK >Open folder to view files.**

If you didn't install LG Android Platform Driver on your PC, you need set it manually.

For more information, refer to 'Transferring files using mass storage devices' .

Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.
- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same

folder to display the subtitle automatically when playing the video file.

- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

How to play music/video files in the phone

Playing music files

From home screen touch Application tab > Music. Locate the file you want to play from Artist, Albums, Songs, Playlists tabs.

Playing video files

From home screen touch Application tab > Video player. , locate the file you want in the list and select it to play.

Before using the mobile phone, please read first!

How to move the contacts from the old phone to the current phone

Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

1. Download Mobile Sync for Android at www.lg.com and install it in the PC. Run the program and connect your Android mobile phone to the PC using the USB cable.
2. Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved in the PC.
3. If the fields in the imported CSV file are different from the ones in Mobile Sync for Android, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added in Mobile Sync for Android.
4. If the connection of LG-P500 phone (using the USB cable) is detected by Mobile Sync for Android, click "Sync" or "Sync contacts" to synchronize the contacts saved in the PC to your phone and save them.

How to send data from your phone via Bluetooth

Sending data via Bluetooth:

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- * **Sending pictures:** Run the Gallery application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices > Choose the device you want to send data from the list**.

* **Exporting contacts:** Run the Contacts application. Touch the address you want to export to. Press **Menu** and Select **Share > Bluetooth > Check** If Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

* **Sending multi-selected contacts:** Run the "Contacts" application. To Select more than one contact press Menu key and touch **Multiselect** . Select the contacts you want to send or press **Menu** key and touch **Select all to select all the contacts and > Touch Share > Bluetooth > Select all.** Select **Share > Bluetooth > Check** If Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

* **Connecting to FTP (Only the FTP server is supported on this handset):** Select "Settings"

> "Wireless & networks" > "Bluetooth settings". Then, select the "Discoverable" checkbox and search for other devices by scan for devices option . Find the service you want and connect to the FTP server.

TIP: The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to "Settings" > "Wireless & networks" > "Bluetooth settings".

Then, select the "Discoverable" checkbox.

The checkbox is cleared after 120 seconds.

- Supported profiles are SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.









