



KF700 Kullanıcı Kılavuzu

LG ELECTRONICS INC.

KF700


TÜRKÇE
ENGLISH

MMBB0279336 (1.0) H

CE 0168

www.lgmobile.com

Bluetooth QD ID B013790

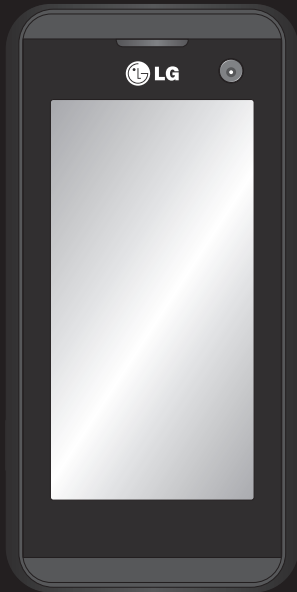

Bu kılavuzdaki bazı kısımlar telefonun veya hizmet sağlayıcınızın yazılımına baęlı olarak telefonunuzdan farklılık gösterebilir.

KF700 Kullanıcı Kılavuzu

LG tarafından piyasaya sürülen kompakt tasarımı ve gelişmiş teknolojik özellikleriyle göz dolduran, en son dijital mobil iletişim teknolojisi ile çalışmak üzere tasarlanmış KF700 model cep telefonunu satın aldığınız için teşekkür ederiz.

Kurulum	01
Bekleme ekranınız	02
Temel özellikler	03
Oluşturun	04
Düzenleyin	05
Web	06
Ayarlar	07
Aksesuarlar	08

İçerik

Kurulum

Telefonunuzu tanıyın.....	8
Açık görünüm	9
USIM kartının ve pilin takılması.....	10
Bellek kartı	12
Menü haritası.....	13

Bekleme ekranınız

Dokunmatik ekran ipuçları	14
Kısa yol tuşları	15
Durum çubuğu.....	16

Temel özellikler

Çağrılar	18
Arama veya görüntülü arama yapılması..	18
Rehberden çağrı yapılması	18
Çağrının cevaplanması ve reddedilmesi..	18
Çağrı sürecindeki seçenekler.....	19
Çağrı sesinin ayarlanması	19
Hızlı arama	20
Çağrı geçmişinin görüntülenmesi.....	20
Çağrı yönlendirmenin kullanılması.....	21
Çağrı engellemenin kullanılması.....	21
Genel çağrı ayarının değiştirilmesi.....	21
Video çağrı ayarının değiştirilmesi.....	22

Rehber.....	23
Rehberin aranması	23
Yeni kişinin eklenmesi	23
Kişi seçenekleri	24
Grup oluşturulması	24
Kişi ayarlarının değiştirilmesi	24
Bilgilerin görüntülenmesi.....	25
Mesajlar	26
Mesajlar.....	26
Mesajın gönderilmesi.....	26
Metin girilmesi.....	26
T9 modu	27
Abc modu	27
E-postanın ayarlanması.....	27
E-postanın alınması	28
Yeni hesap kullanarak e-postanın gönderilmesi	29
E-posta ayarlarının değiştirilmesi	29
Mesaj klasörleri	30
Mesajların idaresi	30
Şablonların kullanılması.....	31
İfadelerin kullanılması	31
Metin mesajı ayarlarının değiştirilmesi	31
Multimedya mesajı ayarlarının değiştirilmesi.....	32
Diğer ayarlarınızın değiştirilmesi.....	32

Oluşturun

Kamera	33
Hızlı fotoğraf çekilmesi	33
Fotoğraf çekildikten sonra	33
Vizör ekranını tanıma	34
Flaş kullanımı	35
Kontrastın ayarlanması.....	35
Gelişmiş ayarların kullanılması	35
Resim boyutunun değiştirilmesi	37
Renk tonunun seçilmesi	37
Dahili kameranın kullanılması	37
Kayıtlı fotoğraflarınızın görüntülenmesi ...	38
Fotoğraf bilgilerinin görüntülenmesi	38
Video kamera	39
Hızlı video çekimi	39
Video çekimi sonrası	39
Vizör ekranını tanıma	40
Kontrastın ayarlanması.....	41
Gelişmiş ayarların kullanılması	41
Video resim boyutunun değiştirilmesi	42
Renk tonunun seçilmesi	42
Dahili video kameranın kullanılması.....	43
Kayıtlı videoların izlenmesi	43
Çektiğiniz fotoğraflar ve videolar	44
Fotoğrafların ve videoların görüntülenmesi	44

Video izlerken ses seviyesinin ayarlanması.....	44
Videodan resim çekilmesi	44
Video veya fotoğraf bilgilerinin görüntülenmesi	44
Galeriden fotoğraf veya video gönderilmesi	45
Fotoğrafların slayt gösterisi şeklinde görüntülenmesi	45
Fotoğrafın duvar kağıdı olarak ayarlanması.....	46
Fotoğrafların düzenlenmesi.....	46
Fotoğrafa metin eklenmesi	47
Fotoğrafa efekt eklenmesi	47
Fotoğrafa renk vurgusu yapılması	48
Fotoğrafta renklerin yer değiştirmesi	48
Multimedya	49
Görüntülerim	49
Görüntülerim seçenek menüleri	49
Fotoğrafın gönderilmesi.....	50
Bir resmin kullanılması.....	50
Resimlerinizin düzenlenmesi.....	50
Resim silme	51
Resmin taşınması veya kopyalanması	51
Resimlerin işaretlenmesi	51
Slayt gösterisi oluşturulması	51

İçerik

Bellek durumunun kontrol edilmesi	52
Seslerim	52
Sesin kullanılması	52
Videolarım	53
Videoyun izlenmesi	53
Video duraklatıldığında seçeneklerin kullanılması	53
Video klibin gönderilmesi	53
Video klibin zil sesi olarak kullanılması ...	53
Video seçenekleri menüsünün kullanılması	53
Oyunlarım ve uygulamalarım	54
Oyun indirilmesi	54
Oyun oynanması	54
Oyun seçenekleri menüsünün kullanılması	54
Flash içerikleri	54
SWF dosyasının görüntülenmesi	55
SWF dosyası görüntülenirken seçeneklerin kullanılması	55
Belgeler	55
Dosyanın telefona aktarılması	55
Dosyanın görüntülenmesi	55
Diğer dosyalar	56
Şarkı çalınması	56
Parça listesinin oluşturulması	57

Parça listesinin düzenlenmesi	57
Parça listesinin silinmesi	57
İstasyonların aranması	58
Kanalların düzenlenmesi	58
Kanalların sıfırlanması	58
Radyo dinlenmesi	59

Web

Web erişimi	60
Sık kullanılan ekleme ve sık kullanılanlara erişim	60
Sayfanın kaydedilmesi	60
Kayıtlı bir sayfaya erişilmesi	60
Tarayıcı geçmişinin görüntülenmesi	61
Web tarayıcı ayarlarının değiştirilmesi	61
Telefonun modem olarak kullanılması	61

Düzenleyin

Ajanda	63
Takvime etkinlik eklenmesi	63
Varsayılan takvim görünümünün değiştirilmesi	63
Yapılacaklar listesine konu eklenmesi	63
Yapılacaklar konusunun paylaşılması	64
Tarih bulucunun kullanılması	64
Alarmin ayarlanması	64
Not eklenmesi	65

Ses kaydedicisi	65	Bluetooth kulaklık kullanılması	73
Sesin kaydedilmesi	65	Aksesuarlar	74
Ses kaydının gönderilmesi	66	Şebeke hizmeti	75
Hesap makinesi kullanılması	66	Teknik veriler	75
Dünya saatine şehir eklenmesi	66	Acil Çağrılar	76
Birim dönüştürülmesi	66	Guidelines for safe and efficient use ...	76
PC Senk	67		
LG PC Suite programının bilgisayara			
kurulması	67		
Telefonun bilgisayara bağlanması	67		
Telefon bilgilerinizin yedeklenmesi ve geri			
yüklenmesi	67		
Bilgisayarda telefon dosyalarının			
görüntülenmesi	68		
Rehberin senkronize edilmesi	68		
Mesajların senkronize edilmesi	68		
Telefonunuzun yığın depolama aygıtı olarak			
kullanılması	68		

Ayarlar

Ekran ayarlarının değiştirilmesi	70
Profillerin özelleştirilmesi	70
Telefon ayarlarının değiştirilmesi	70
Bağlantı ayarlarının değiştirilmesi	71
Hafıza yöneticisinin kullanılması	72
Bluetooth kullanarak dosyaların gönderilmesi	
ve alınması	72
Başka bir Bluetooth cihazıyla eşleştirme	73

Telefonunuzu tanıyın

Şarj cihazı, Kablo, Handsfree konektörü

İPUCU: USB kablosunu bağlamak için telefonun açılmasını ve şebekeye bağlanmasını bekleyin.

Dahili kamera lensi

Kapatma/Güç tuşu

Bir çağrıyı bitirir veya reddeder. Telefonun açıp/kapanmasını sağlar. Bekleme ekranına dönmek için bir kez basın.

Temizle tuşu


Her basıldığında bir karakteri siler. Bu tuşu bir önceki ekrana dönmek için kullanın.

Çağrı tuşu

Telefon numarasını arar ve gelen çağrıları yanıtlar.

Hızlı arama tuşu

Kilitle/ Kilit aç tuşu

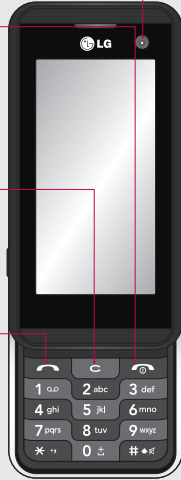

⚠ UYARI: Telefonun üzerine ağır nesnelere konulması veya cebinizde iken üzerine oturulması telefonun LCD ve dokunmatik ekran işlevlerine zarar verebilir.

Çekim tuşu

Açık görünüm

Kısayol arama

Kamera veya video modunda yakınlaştırır veya uzaklaştırır. Menüler arasında gezinmeyi sağlar.

İPUCU: Ses seviyesini müzik dinlerken, oyun oynarken ve arama sırasında ayarlayabilirsiniz.

UYARI: Manyetik nesnelere yakın temas ayar düğmesinin arızalanmasına neden olabilir.

Bellek kartı yuvası

Pil kapağı

Flash

Kamera lensi

USIM Kartı Yuvası

Pil

01

02

03

04

05

06

07

08

USIM kartının ve pilin takılması



1 Pil kapağını çıkartın

Pil kapağını telefonun altına doğru kaydırın ve telefondan ayırın.

UYARI: Pili çıkarırken tırnak ucunuzu kullanmayın.

UYARI: Telefon açıkken pili çıkarmayın, aksi halde telefon zarar görebilir.



2 Pilin çıkarılması


Pilin alt kenarını kaldırın ve pil bölümünden dikkatle çıkarın.



3 Pil kapağını yerine takın


Pil kapağını klik sesiyle yerine oturana kadar telefonun üstüne doğru kaydırın.

USIM kartının ve pilin takılması

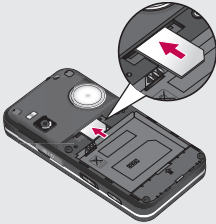


4 USIM kartını takın

USIM kartını kaydırarak USIM kart taşıyıcısına yerleştirin. Kartın üzerindeki altın temas yerlerinin aşağı doğru baktığından emin olun. USIM kartı çıkartmak için, nazikçe ters yöne doğru çekin.

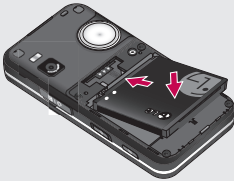

5 Pilin takılması

Önce pilin üst kısmını yuvasına yerleştirin. Pilin temas uçlarının, telefon terminalleriyle hizada olmasını sağlayın. Pilin alt kısmı yerine oturuncaya kadar bastırın.

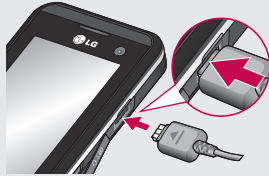

6 Telefonun şarj edilmesi

KF700'ün yan tarafında bulunan şarj soketi kapağını çekerek açın. Şarj aletini takip fişini elektrik prizine yerleştirin. KF700'ün ekranda Tam Şarjlı uyarı mesajı görüntülenene kadar şarj edilmesi gerekir.

01

02

03

04

05

06

07

08

Bellek kartı

Bellek kartının takılması

Bellek kartı kullanarak telefonunuzun kullanılabilir bellek kapasitesini artırabilirsiniz. KF700 en fazla 4GB kapasiteli bellek kartlarını desteklemektedir.

- 1 Mikro SD kart yuvasının kapağını çekerek açın.
- 2 Bellek kartını takın. Bellek kartını yerine oturana kadar alttaki yuvaya doğru kaydırın. Altın temas alanının bulunduğu kısmın yukarıya baktığından emin olun.



- 3 Mikro SD kart yuvasının kapağını kapatın.

Bellek kartının biçimlendirilmesi

Bellek kartınız daha önceden biçimlendirildiyse hemen kullanmaya başlayabilirsiniz. Değilse biçimlendirmeniz gerekir.

- 1 Bekleme ekranında öğesine dokunun ve öğesini seçin.
- 2 **Telefon ayarları** öğesini, ardından **Bellek yöneticisi** öğesini ve **Harici bellek** öğesini seçin.

- 3 **Format** öğesine dokunun ve varsayılan olarak 0000 şeklinde belirlenmiş şifreyi girin. Bellek kartınız biçimlendirilerek kullanıma hazır bir hale getirilir.
 - 4 KF700 üzerinde yeni biçimlendirilmiş klasörleri görüntülemek için öğesine dokunun ve öğesini seçin. Öğelerim seçeneğini seçin. Beş adet klasör görüntülenir: Görüntülerim, Seslerim, Videolarım, Belgeler ve Diğer dosyalar.
- Bellek kartının kullanılması ile ilgili daha detaylı bilgi edinmek için, bkz. sayfa 41.


UYARI: Bellek kartınızı formatladığınızda, içindeki tüm bilgiler silinir. Bellek kartınızdaki bilgileri kaybetmek istemiyorsanız, önce yedekleyin.

Rehberinizin aktarılması

Rehber kayıtlarını telefonunuzun SIM kartına aktarmak için:

- 1 Bekleme ekranından öğesine dokunun ve öğesini seçin.
- 2 **Rehber** öğesini seçin, **Ayarlar**'ı ve ardından **Kopyala** ya da **Taşı** seçeneklerini seçin.
- 3 **Telefondan SIM**'e öğesini seçin, ardından **Hep beraber** veya **Teker teker** öğelerinden birini seçin.
- 4 Onaylamak üzere **Tamam** öğesine dokunun.

Menü haritası

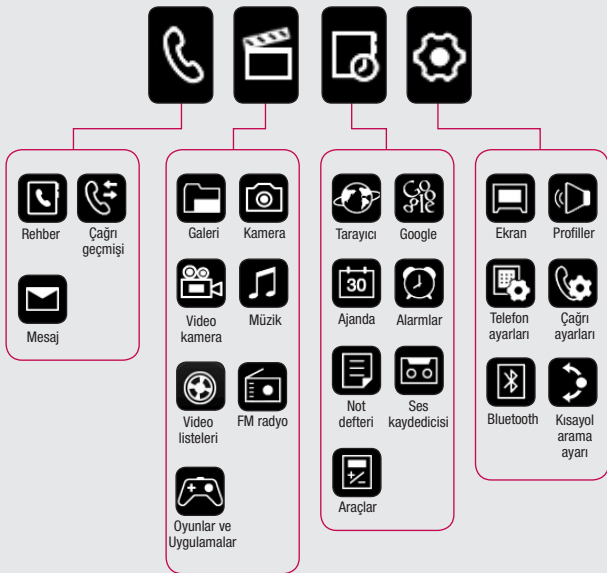

01

02

03

04

05

06

07

08

Bekleme ekranınız

KF700'ünüz kullanımda olmadığı zaman bekleme ekranınıza geri döner. Buradan menü seçeneklerine ulaşabilir, hızlı arama yapabilir, profilinizi değiştirebilir ve daha bir çok işlem yapabilirsiniz.

Dokunmatik ekran ipuçları

Bekleme ekranı aynı zamanda InteractPad'e (dokunmatik ekran) alışmak için de mükemmel bir yerdir.

Bir öğeyi seçmek için dokunmatik ekrandaki simgeye tam olarak dokununuz. KF700'ünüz bir seçeneğe dokunduğunuzu algıladığında hafifçe titrer.


- Çok sert basmaya gerek yoktur, InteractPad hafif ancak sağlam bir dokunuşu algılayabilecek kadar hassastır.
- İstedığınız seçeneğe parmağınızın ucuyla dokununuz. Etrafındaki tuşlara dokunmamaya dikkat ediniz.
- Ekran ışığı söndüğünde, bekleme ekranına geri dönmek için telefonun sağ tarafındaki kilitle/kilit aç tuşuna basınız.
- Telefonu kapak veya kılıf ile örtmeyiniz, çünkü InteractPad üzerini örten herhangi bir malzeme olduğunda çalışmaz.





▲ Dokunmatik ekran


Kısa yol tuşları

Kısa yol tuşları, en çok kullandığınız fonksiyonlara tek dokunuşta erişmek için kolaylık sağlar.

 Çağrı yapmak amacıyla dokunmatik tuş takımını açmak için dokununuz. Telefonu kaydırıp açmadan da çağrı yapabilirsiniz. Bir numara ile video çağrısı başlatmak için numarayı girdikten sonra **Video araması** sekmesine basın.

 Adres defterinizi açmak için dokununuz. Rehber alfabetik sırayla görüntülenir. Yeni bir kişi oluşturabilir, mevcut olanların üzerinde düzenlemeler yapabilirsiniz. Detaylı bilgi için sayfa 21'e bakın.

 Bir SMS mesajı oluşturmak ve göndermek için dokununuz. Detaylı bilgi için sayfa 25'e bakın.

 Dört alt-menüye bölünen ana menüyü açmak için dokununuz. Diğer seçenekleri görüntülemek için alt-menünün dikey sekmesine dokununuz.

Müşteriye tavsiye

Anten hassasiyetini artırmak için LG telefonu aşağıdaki şekilde gösterildiği şekilde tutmanızı tavsiye eder.



Lütfen arama sırasında ve Bluetooth bağlantısı kullanılırken anten bölgesini elinizle kapamayın. Bu durum, konuşma kalitesini düşürebilir.

01

02

03

04

05

06

07











08













Bekleme ekranınız

Durum çubuğu

Durum çubuğu, çeşitli simgeler kullanarak, sinyal gücü, yeni mesajlar, pil ömrü gibi konularda ve Bluetooth veya GPRS özelliğinin aktif olup olmadığı hakkında bilgiler gösterir.

Aşağıdaki tabloda, durum ekranında görebileceğiniz simgelerin anlamları açıklanmaktadır.



Simge	Tanım
	Birden fazla görev yürütülüyor (Alt menüde)
	Şebeke sinyal gücü (çubuk sayısı değişir)
	Şebeke sinyali yok
	Kalan pil ömrü
	Pil boş
	Yeni mesaj
	Yeni sesli mesaj
	Gelen kutusu dolu
	Mesaj gönderme başarısız
	Bir alarm kurulu


Simge	Tanım
	Normal profil kullanımda
	Dış mekan profili kullanımda
	Sessiz profil kullanımda
	Kulaklık profili kullanımda
	Çağrılar yönlendirildi
	GPRS mevcut
	EDGE kullanımda
	Dolaşım
	Uçuş modu seçildi
	Bluetooth etkin
	HSDPA mevcut
	3G mevcut

Durum çubuğundan durumunuzu değiştirme

Durum çubuğunda geçerli ayarlarınızı temsil eden simgeye dokunun. Durum Özeti geçerli **Zaman, Şebeke, Servis Kimliği, Pil, Telefon belleği, Harici Bellek, Profil, MP3, Uçuş Modu ve Bluetooth** durumu hakkında bilgileri görüntüler. Profil tipini **ayarlayabilir**, MP3 **oynatabilir** ve Uçuş Modu, Bluetooth özelliklerini aktifleştirebilir/devre dışı **bırakabilirsiniz**.

Birden fazla görev yürütülüyor fonksiyonunun kullanılması

Herhangi bir fonksiyon kullanıyorsanız, sol üst köşede Birden fazla görev yürütülüyor  ögesini bulabilirsiniz. Birden fazla görev yürütülüyor menüsünü açmak için  ögesine dokunun. Buradan çalıştırmakta olduğunuz tüm uygulamaları görebilir ve tek bir dokunuşla bu uygulamalara erişebilirsiniz.




Uygulamadan çıkmadan veya uygulamayı kapamadan bekleme ekranına dönmek için herhangi bir uygulamada,  ögesine dokunarak Ana Ekran seçeneğini seçin.


Durum çubuğu



Çağrılar

Arama veya görüntülü arama yapılması



- 1 Telefonu kaydırarak açın.
- 2 Tuş takımını kullanarak numarayı tuşlayın. Tuşlanan rakamı silmek için C telefon tuşuna basın.
- 3 Aramayı başlatmak için Çağrı ögesine dokunun  veya telefon tuşuna basın. Video aramayı yapmak için  ögesine dokunun.
- 4 Çağrıyı sonlandırmak için  telefon tuşuna basın.


İpucu! Yukarı kaydırmadan arama yapmak için. Tuş takımını açmak için  tuşuna dokunun. Numarayı girin ve arama'ya basın.

İpucu! Bir uluslararası çağrı yapmak için + girmek amacıyla 0 tuşunu basılı tutun.


İpucu! Kazayla çağrı yapmayı engellemek amacıyla dokunmatik ekranı kilitlemek için kilitle/kilit aç tuşuna basın.


Rehberden çağrı yapılması


- 1 Bekleme ekranından adres  defterini açmak için ögesine dokunun.
- 2 Listedeki çağrı yapmak istediğiniz kişiye dokunun ve eğer birden fazla numara kayıtlıysa aranacak numarayı seçin.
- 3 Çağrı yapmak istediğiniz kişinin isminin ilk harfini girmek üzere tuş takımını da kullanabilirsiniz.
- 4 Çağrıyı başlatmak için  Çağrı ögesine dokunun veya telefon tuşuna basın.

İpucu! Kapak kapalıyken  ögesine dokunun, tuş takımı görüntülediğinde Giriş çubuğuna basın. Tuş takımını kullanarak harfleri girebilirsiniz. Bir harf girildiğinde, listeler görüntülenebilir.


Çağrının cevaplanması ve reddedilmesi

Telefonunuz çaldığında çağrıyı cevaplamak için  telefon tuşuna basın.

Çalma sesini susturmak için  telefon tuşuna basın. Bu özellik, toplantı sırasında profilinizi Sessiz moda almayı unuttuğunuzda çok faydalıdır.

'Gelen çağrıyı reddetmek için  telefon tuşuna iki kez basın.'

Çağrı sürecindeki seçenekler

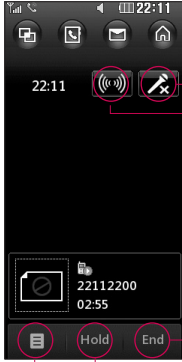

Sessiz - Konuşmakta olduğunuz kişinin sizi duymasını önlemek için mikrofona kapatmak üzere dokununuz.

Hoparlör - Hoparlörü açmak için dokununuz.

Bitir - Çağrıyı bitirmek için dokununuz.

Beklet - Çağrı yapan kişiyi beklemeye almak için dokununuz. Konuşmanıza devam etmek için **Devam** öğesine dokununuz.

Seçenekler - **Rehbere git** ve **Mesajlara git** gibi diğer çağrı sürecindeki seçeneklerin listesinden seçim yaparak mesajlarınızı veya rehberinizi kontrol etmek için kullanınız. Burada **Çağrıyı bitir** tuşuna dokunarak bir çağrıyı sonlandırabilirsiniz.

Çağrı sesinin ayarlanması

Bir çağrı sırasında sesi ayarlamak üzere ayar düğmesini saat yönünde çevirerek sesi artırabilir ya da saatin tersi yönünde çevirerek sesi azaltabilirsiniz.

İpucu! Seçenekler listesinde veya rehberinizde aşağı ve yukarı gezinmek için görünen son satıra dokununuz ve parmağınızı ekranda yukarı doğru kaydırınız. Liste yukarı kayarak diğer satırlar görünür hale gelir.

01

02

03

04

05

06



07


08


Çağrılar

Hızlı arama

Sıklıkla aradığınız bir kişiyi hızlı arama tuşlarından birine atayabilirsiniz.


- 1  öğesine dokunun ve öğesini  seçin.
- 2 Rehber öğesini seçin ve Hızlı aramalar öğesine dokunun.
- 3 Telesekreteriniz önceden hızlı arama 1'e ve 2'ye ayarlanmıştır. Bu atamalar değiştirilemez. Kişiyi hızlı araması numarası olarak başka bir numaraya dokunun.
- 4 Adres defteriniz açılır. Seçilen numarayı atamak istediğiniz kişiyi seçip telefon numarasına bir kez dokunun.

Bir hızlı arama numarasına çağrı yapmak için telefonu kaydırarak açın ve kişi ekranda görüntülenene kadar atanan numaraya basılı tutun. Çağrı otomatik olarak başlatılacaktır,  basmaya gerek yoktur.

İpucu! Kaydırarak kapayın,  öğesine basın, ardından tuş takımı görüntülenir. Atanan numaraya basılı tutabilirsiniz. Çağrı otomatik olarak başlatılacaktır.

Çağrı geçmişinin görüntülenmesi

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukan kaydırın. Liste yukan kayarak diğer satırlar görünür hale gelir.

 öğesine basıldığında tüm çağrı listeleri görüntülenir. Ekranın üst kısmında tüm aramalar/yapılan aramalar/cevapsız çağrılar seçenekleri arasında seçim yapmanıza imkan tanıyacak iki adet ok bulunur.

Tüm aramalar - Yapılan, alınan ve cevapsız çağrılarının tam listesini görüntüler.


Yapılan aramalar - Çağrı yaptığınız tüm numaraların listesini görüntüler.

Gelen aramalar - Size gelen tüm çağrı numaralarının listesini görüntüler.

Cevapsız çağrılar - Cevapsız bıraktığınız tüm çağrılarının listesini görüntüler.



Arama bilgileri - Aradığınız numaralara uygulanan ücretleri (bu servis şebekeye bağlıdır, bazı operatörler bu hizmeti veremez) ve aranan ve arayan çağrılarının arama süresini görüntüler.

Veri miktarı - Aldığınız ve gönderdiğiniz tüm veri miktarını kilobayt cinsinden görüntüler.

İpucu! Kaydedilen tüm öğeleri silmek için herhangi bir çağrı günlüğünden  öğesine ve ardından **Tümünü sil** öğesine dokunun.

İpucu! Çağrının tarihini, saatini ve süresini görüntülemek için herhangi bir çağrı geçmişini girdisine dokunun.



Çağrı yönlendirmenin kullanılması

- 1  öğesine dokunun,  öğesini ve ardından **Çağrı ayarları** seçeneğini seçin.
- 2 Çağrı yönlendirme öğesine dokunun ve **Video aramaları** veya **Sesli aramalar** öğelerinden birini seçin.
- 3 Hat meşgul olduğunda, cevap vermediğinizde veya erişilemediğinizde gelen çağrıları yönlendirmek için kullanın.
- 4 Yönlendirmek istediğiniz numarayı girin.
- 5 Etkinleştirmek için **Yönlendir**'e dokunun.

Not: Yönlendirilen çağrılar, ücretlendirilir. Detaylar için lütfen servis sağlayıcınızla konuşun.

İpucu! Tüm çağrı yönlendirmelerini kapatmak için **Çağrı yönlendirme** menüsünden **Tümünü devre dışı bırak**'ı seçin.

Çağrı engellemenin kullanılması

- 1  öğesine dokunun,  öğesini ve ardından **Çağrı ayarları** seçeneklerini seçin.
- 2 **Çağrı engelleme**'ye dokunun ve **Video aramaları**'nı ve / veya **Sesli aramalar**'i seçin.
- 3 Aşağıdaki altı seçenekten herhangi birini veya hepsini seçin:

Tüm giden aramalar

Giden uluslararası aramalar

Kendi ülkem hariç yapılan

uluslararası aramalar


Tüm gelen aramalar

Yurtdışında gelen aramalar

- 4 Çağrı engelleme şifresi girin. Bu servisi lütfen şebeke operatörünüzden kontrol edin.

İpucu! Açmak ve telefonunuzdan aranabilecek numaraların listesini oluşturmak üzere **Çağrı ayarları**'ndan **Sabit arama numaraları**'nı seçin. Operatörünüzün PIN2 koduna ihtiyaç duyarsınız. Sabit arama listesi oluşturulması durumunda, sadece listenizde bulunan numaralar telefonunuzdan aranabilir.

Genel çağrı ayarının değiştirilmesi

- 1  öğesine dokunun,  öğesini ve ardından **Çağrı ayarları** seçeneklerini seçin.
- 2 **Ortak ayarlara** dokunun. Burada ayarları aşağıdaki gibi düzeltebilirsiniz:
Çağrı reddetme - **Açık** veya **Kapalı** olarak seçin ve özel gruplar, kişiler veya kayıtlı olmayan numaralardan (rehberinizde olmayan) oluşan tüm çağrıları reddetmek için kullanın.
Numaramı gönder - Birini aradığınızda numaranızın görünüp görünmeyeceğini belirlemek için kullanın.

01

02

03

04

05

06

07

08

Çağrılar

Otomatik tekrar ara - Açık veya **Kapalı** olarak ayarlayın.

Cevap verme modu - Telefonu nasıl cevaplayacağınızı seçin: **Gönder tuşuyla**, **Kapağı açarak** veya **herhangi bir tuş ile**.

Dakika hatırlatıcı - Çağrının her dakikasında sesli bir uyarı almak için **Açık** olarak seçin.



BT cevaplama modu - Bluetooth **kulaklık** kullanarak bir çağrıya cevap vermek için **Handsfree** ögesini seçin veya Bluetooth kulaklık kullanırken bir çağrı cevaplamak üzere Telefon üzerinde herhangi bir tuşa basma seçeneğini belirleyin.

Yeni numara kaydet - Evet ya da **Hayır** seçeneklerinden birini seçin.

Kayar kapak ayarı - Aramayı sonlandır veya **Aramaya devam et** seçeneklerinden birini seçin.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

Video çağrı ayarının değiştirilmesi

- 1  ögesine dokunun,  ögesini ve ardından **Çağrı ayarları** seçeneklerini seçin.
- 2 Video arama ayarına dokunun.
- 3 Video çağrısı ayarlarını seçin. Özel resim kullan veya **Özel resim seç** seçeneklerinden birini belirleyin ve Ayna özelliğini **açın** (böylelikle kendinizi ekranda görebilirsiniz) ve bir **Resim boyutu** belirleyin.

Rehber

Rehberin aranması




Rehberde arama yapmanın iki yolu bulunmaktadır:


Bekleme ekranında

Bekleme ekranında adres defterini açmak için

 tuşuna dokunun.

Ana menüde



- 1  tuşuna dokunun,  tuşuna basın ve **Rehber**'i seçin.
- 2 Listeden çağrı yapmak istediğiniz kişiye dokunun ve eğer birden fazla numara kayıtlıysa aranacak numarayı seçin.
- 3 Çağrı yapmak istediğiniz kişinin isminin ilk harfini girmek üzere tuş takımını da kullanabilirsiniz.
- 4 Çağrıyı başlatmak için **Çağrı** ögesine dokunun veya  telefon tuşuna basın.

İpucu! Kapak kapalıyken  ögesine dokunun, tuş takımı görüntülendiğinde Giriş çubuğuna basın. Tuş takımını kullanarak harfleri girebilirsiniz. Bir harf girildiğinde, listeler görüntülenebilir.

Yeni kişinin eklenmesi

- 1  tuşuna dokunun,  tuşuna basın ve **Rehber**'i seçin.
- 2 **Yeni ekle**'ye dokunun.
- 3 Ekleyeceğiniz kişiyi kaydetmek için **Telefon** veya **SIM**'i seçin.
- 4 Yeni kişinin adını ve soyadını girin. Her ikisini de girmenize gerek yoktur, ancak en az birini girmeniz gerekir.
- 5 Numarayı girerek  tuşuna dokunun, böylece daha fazla numara girebilirsiniz. **(Mobil, Ev, Ofis, Çağrı, Faks) Tamam**'a dokunun
- 6 En fazla iki e-posta adresi ekleyin.
- 7 Kişiyi bir gruba dahil edin. **Grup yok, Aile, Arkadaşlar, İş arkadaşları, Okul** veya **VIP** seçeneklerden birini seçin.
- 8 Ayrıca **Resim, Zil sesi, Ana sayfa, Ev adresi, Şirket adı, İş pozisyonu, Şirket adresi** ve **Not** da ekleyebilirsiniz.
- 9 Kişi bilgilerini kaydetmek için **Kaydet**'e dokunun.

İpucu! Rehberinizdeki kişiler için özel gruplar oluşturabilmek üzere 24. sayfadaki **Grup oluşturulması** başlığına bakın.

İpucu!  ögesine dokunun, tuş takımı görüntülenir. Numaraya dokunun,  ögesine basın ve Numarayı kaydet'i seçin.

01

02

03

04

05

06


07

08

Rehber

Kişi seçenekleri

Bir kişiyi görüntülerken yapabileceğiniz pek çok işlem bulunmaktadır. Seçenekler menüsünü aşağıdaki şekilde erişip kullanabilirsiniz:

- 1 Kullanmak istediğiniz kişiyi seçin. 23. sayfadaki **Rehberin aranması** başlığını bakın.
- 2 Seçenekler listesini açmak için  tuşuna dokunun.

Burada aşağıdakileri yapabilirsiniz:

Düzenle - Kişinin bilgileri değiştirilir.

Mesaj gönder - Kişiyi mesaj gönderilir.

Kişinin e-posta adresi varsa e-posta veya SMS / MMS arasında seçim yapabilirsiniz. Mesaj gönderme ayrıntıları için 26. sayfaya bakın.




Kartvizit gönder - Kişinin bilgileri kartvizit olarak başka birine gönderilir. **Metin mesajı**, **Multimedya mesajı**, **E-posta** veya **Bluetooth** ile göndermek için kullanılır.

Video araması yap - Kişiyi video çağırısı yapılır.


Telefon'a kaydet - USIM karta veya telefona aktarmak veya kopyalamak için kullanılır (kişinin kayıtlı olduğu yere bağlıdır).

Sil - Kişiyi siler. Eminseniz **Evet**'e dokunun.

Grup oluşturulması

- 1 Bekleme ekranında  öğesine dokunun,  öğesine basın ve **Rehber**'i seçin.
- 2 **Gruplar**'ı seçip  tuşuna dokunun.
- 3 **Yeni grup ekle**'yi seçin.
- 4 Yeni grubunuza bir ad verin.
- 5 **Kaydet**'e dokunun.

Not: Bir grubu silerseniz bu gruba atanmış kişiler kaybolmaz. Adres defterindeki yerlerini korurlar.

İpucu! Mevcut bir grubun üzerine gelip  tuşuna dokunarak düzenleme yapabilirsiniz. Rehberinizdeki bir gruba üye eklemek için Ekle'yi seçip Grup zil sesi atayın, grubu Yeniden adlandırın veya Silin.

Kişi ayarlarının değiştirilmesi

Kişi ayarlarını, adres defterinde çalışmasını istediğiniz şekilde ayarlayabilirsiniz.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

- 1 Bekleme ekranında  öğesine dokunun,  öğesine basın, **Rehber**'i ve **Ayarlar**'ı seçin.

- 2 Burada aşağıdaki ayarları yapabilirsiniz:
Rehber ayarları - Telefon ve SIM, Sadece telefon veya Sadece SIM içindeki kişileri görüntülemek için kullanın. Kişinin önce adının veya soyadının görüntülenmesi seçebilirsiniz.

Rehberi senkronize et - Rehberinizi senkronize etmek için sunucunuza bağlıdır. 65. sayfada **Rehberin senkronize edilmesi** başlığına bakın.

Kopyala - Rehber'inizi Telefon'dan SIM'e veya SIM'den telefonunuza kopyalar. Bu işlemi teker teker veya hepsi için yapabilirsiniz. Teker teker olarak seçerseniz, her kişiyi kopyalamak için teker teker seçmeniz gerekir.

Taşı - Bu komut, **Kopyala**, komutu gibi çalışır ancak kişi sadece taşıdığınız yere kaydedilir, örneğin kişiyi SIM'den telefona taşırsanız SIM bellek kartından silinir.



Tüm kişileri Bluetooth aracılığıyla gönderme - Rehberinizde bulunan kişilerin tümü Bluetooth kullanılarak başka bir cihaz ya da bilgisayara gönderilir.

Rehberi yedekle - Bkz. **Telefon bilgilerinizin yedeklenmesi ve geri yüklenmesi**, sayfa 65.

Rehberi yeniden yükle - Bkz. **Telefon bilgilerinizin yedeklenmesi ve geri yüklenmesi**, sayfa 65.

Rehberi sil - Tüm rehberinizi siler. Adres defterinizin tamamen silinmesini istediğinizden eminseniz **Evet**'e dokunun.

Bilgilerin görüntülenmesi

- 1 Bekleme ekranında  öğesine dokunun,  öğesine basın ve **Rehber**'i seçin.
- 2 **Bilgi**'yi seçin.
- 3 Burada **Servis arama numaraları**'nı, **Kendi numaram**'ı, **Bellek bilgisi**'ni (kalan bellek miktarını) ve **Kartvizitim**'i görüntüleyebilirsiniz.

İpucu! Eğer henüz kartvizit hazırlamadysanız **Ekle**'yi seçip rehberdeki kişi için yaptığımız gibi tüm bilgilerinizi girin. Sonlandırmak için **Kaydet**'e dokunun.

01

02

03

04

05

06

07




08

Mesajlar




Mesajlar


KF700 modeli SMS, MMS ve e-posta fonksiyonlarını tek, yenilikçi ve kullanımı kolay bir menü altında bir araya getirir.

Mesaj merkezine girmek için iki yol vardır:

- 1 Bekleme ekranında  tuşuna dokununuz.
- 2 Bekleme ekranında  öğesine dokununuz, ardından  öğesine basın ve Mesaj öğesini seçin.

Mesajın gönderilmesi

- 1  öğesine dokununuz ve ardından **Yeni mesaj oluştur öğesini seçin.**
- 2 SMS veya MMS göndermek için **Mesaj**'ı seçin. Veya e-posta göndermek için **E-posta**'yı seçin. Ayrıntıları için 29. sayfaya bakınız.
- 3 Yeni SMS açılır.
- 4  öğesine ve ardından bir resim, video, ses veya sembol eklemek üzere **Ekle** öğesine dokununuz.
- 5 **Gönder**'e dokununuz.  öğesinde dokununuz ve Numarayı girin öğesini seçin. Telefon numarası girin veya rehberi açmak için **Rehber**'e dokununuz. Birden fazla kişi ekleyebilirsiniz.

 **UYARI:** SMS formatına görüntü, video veya ses eklendiğinde otomatik olarak MMS formatına dönüştürülür ve ona göre ücretlendirilir.

Metin girilmesi

Metin girmek için iki yol bulunmaktadır, bunlar şöyle sıralanabilir: T9 modu, Abc normal.

Metin giriş yöntemleri arasında geçiş yapmak için ekranın üst kısmındaki ilgili simgeye dokununuz.

T9 tahmini metin, Abc normal

- T9 tahmini metni açmak için dokununuz ve ardından T9 abc, T9 Abc, T9 ABC, 123 seçeneklerinden birini seçin.

Abc normal - Abc, abc, ABC veya 123 seçeneklerinden birini seçin

Bir boşluk girmek için **0**'a dokununuz.


Bir karakter silmek için ekranın alt kısmında bulunan **C** telefon tuşunu kullanınız.

Bir sembol girmek için  öğesine dokununuz.

Not Bu telefon mesaj alıp ve göndermede Türkçe Karakterleri desteklemektedir.

T9 Modu

T9 modu, dokunarak yazdığınız tuş dizisindeki sözcükleri tanımak için telefondaki bir sözlüğü kullanır. Yazmak istediğiniz harfe ait sayı tuşuna dokununca girilen harflerden sözcüğü tanır. Örneğin telefon yazmak için 8, 3, 5, 3, 3, 6, 6 tuşlarına basın.

İstedığınız sözcüğün görüntülenmemesi durumunda,  öğesine dokunun ve Yeni T9 sözcüğü öğesini seçin. Abc manuel modunu kullanarak sözcüğü girin, sözcük ya da isim sözlüğe eklenecektir.



Abc normal

Abc modunda tuş üzerinde kullanılabilir harf seçeneklerinden birini seçmek üzere tuşa tekrar tekrar dokunmanız gerekir. Örneğin, 'hello' yazmak için, iki kere **4** tuşuna, iki kere **3** tuşuna, üç kere **5** tuşuna, tekrar üç kere **5** tuşuna ve ardından üç kere **6** tuşuna basmanız gereklidir.

E-postanın ayarlanması

KF700 model telefonunuzdaki e-posta özelliğini kullanarak seyahat ederken bile bağlantılarınızdan kopmazsınız. Kolayca ve çabucak POP3 veya IMAP4 tabanlı bir e-posta hesabı oluşturabilirsiniz.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

- 1  tuşuna dokunduktan sonra **Ayarlar**'ı seçin.
- 2 **E-posta**'ya sonra **E-posta hesapları**'na dokunun.
- 3  öğesini açın ve ardından **Yeni ekle** öğesine basın.
- 4 Artık hesabınızın nasıl çalışacağını belirleyebilirsiniz:

Başlık - Bu hesaba bir ad verin.

Adım - Adınızı girin.

Kullanıcı Kimliği - Hesabın kullanıcı adını girin.

Şifre - Hesabın şifresini girin.

E-posta adresi - Hesabın e-posta adresini girin.

E-posta cevap adresi - Cevaplayacak e-posta adresini girin.

Giden posta sunucusu - Hesabın ayrıntılarını girin.

Gelen posta sunucusu - Hesabın ayrıntılarını girin.

01

02

03

04

05

06

07

08


Mesajlar

Maksimum alma boyutu

- E-postalarınızın boyut sınırlarını belirleyebilirsiniz, maksimum izin verilen boyut 1MB'dir. **Posta kutusu tipi** - POP3 veya IMAP4 olacak şekilde Posta kutusu tipini girin.

Sunucuya kaydet - E-postalarınızın sunucuya kaydedilmesini belirleyin. IMAP4 hesapları için her zaman kopyalar kaydedilir.

Gönd. post. kaydet: - IMAP4 e-postalarınızın kaydedileceği yeri belirleyin. POP3 hesaplarının kopyası her zaman telefona kaydedilir.

Erişim noktası - İnternet erişim noktasını belirleyin. Bir erişim noktası kaydetmek için  tuşuna basın.

Otomatik al - Yeni e-postalarınıza otomatik olarak erişilmesini belirleyin.

Gelişmiş ayarlar - Gelişmiş ayarların kullanılıp kullanılmayacakları belirlenir.

SMTP port numarası - Normal olarak değeri 25'dir.

Gelen posta portu - Normal olarak POP3 hesapları için 110 ve IMAP4 hesapları için 143 kullanılır.

SMTP kimlik doğrulaması - Giden posta sunucusu için güvenlik ayarlarını belirleyin.

SMTP Kullanıcı Adı - SMTP kullanıcı adını belirleyin.

SMTP Parolası - SMTP şifresini belirleyin.



APOP güvenli giriş - POP3 hesap için APOP güvenli girişini etkinleştirin. IMAP4 hesaplar daima kapalı olarak ayarlıdır.

Böylece hesabınız ayarlanarak E-posta klasörünüzde hesaplar listesinde görünür.



E-postanın alınması

Yeni e-posta gelip gelmediğini öğrenmek için hesabınızı otomatik olarak veya elle kontrol edebilirsiniz. Otomatik olarak kontrol etmek için 'E-posta ayarlarının değiştirilmesi' başlığına bakın.

Kendiniz kontrol etmek için:

- 1  öğesine ardından **Ayarlar'a** ve ardından **E-posta** öğesine basın.
- 2 Kullanmak istediğiniz hesaba ve ardından  öğesine dokununuz.
- 3 **Geri al** seçeneğine bastığınızda KF700 model telefonunuz e-posta hesabınıza bağlanır ve yeni mesajlarınızı alır.

Yeni hesap kullanarak e-postanın gönderilmesi


- 1  ögesine dokunun ve ardından **Yeni oluşturun** ögesini seçin.
- 2 **E-posta** seçtiğinizde yeni e-posta açılır.
- 3 Alıcının adresini girmek ve mesajınızı yazmak için sekmeleri ve  ögesini kullanın. Resim, video, ses veya diğer dosya tiplerinden eklemek için **Ekle** sekmesini kullanın.
- 4 **Gönder**'e dokunca e-postanız gönderilir.

İpucu! KF700 model telefonunuza e-posta ile Word, Excel, PowerPoint ve PDF dosyaları göndererek seyahat ederken bu belgeleri gözden geçirebilirsiniz.

E-posta ayarlarının değiştirilmesi

E-posta ayarlarınızı tercihiniz doğrultusunda belirleyebilirsiniz.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

- 1  ögesine dokunun ve ardından **Ayarlar**'ı açın.
- 2 **E-posta**'ya sonra **E-posta hesapları**'na dokunup aşağıdaki ayarları belirleyebilirsiniz:

E-posta ile yanıtlamaya izin ver

- E-posta ile yanıtlamaya izin verilmesini sağlayın.

Yeni e-postası iste - 'okundu onayı' mesajı istenmesini sağlayın.

Kontrol sıklığı - KF700 model telefonunuzun ne sıklıkla yeni e-postalarınızı kontrol edeceğini belirleyin.

Mesaja İlet ve Yanıt kısmı ekle

- Cevap verirken orijinal mesajın eklenip eklenmeyeceğini belirleyin.

Ekli içerik - Orijinal ekin dahil edilmesini belirleyin.

Dolaşımında otomatik alım-

Yurtdışındayken mesajların otomatik olarak alınıp alınmayacağını belirleyin.

Yeni E-posta Bildirimi - Yeni e-posta geldiğinde uyarmasını sağlayın.

İmza - E-posta imzası oluşturup bu özelliği etkinleştirin.

Öncelik - Mesajlarınızın öncelik derecesini belirleyin.

Mesajlar

Mesaj klasörleri

KF700 model cep telefonunuzda kullanılan klasör yapısının, kullanımının ne kadar kolay olduğunu hemen fark edeceksiniz.

Gelen kutusu - Alınan tüm mesajlar gelen kutusuna yerleştirilir. Burada cevaplamak, iletmek dahil pek çok işlem yapabilirsiniz, ayrıntılar için aşağıya bakın.

Taslaqlar - Mesajı tamamlamak için vaktiniz yoksa yaptığınız kadarını burada saklayabilirsiniz.



Giden kutusu - Burası, mesaj gönderilirken geçici olarak kullanılan bir yerdir.

Gönderilen öğeler - Göndermiş olduğunuz tüm mesajlar Gönderilen öğeler klasörünüze kaydedilir.

Mesajların idaresi

Mesajlarınızı yönetmek için Gelen kutusunu kullanabilirsiniz.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

- 1  tuşuna dokunup **Gelen kutusu**'na dokunun.
- 2  tuşuna dokunduktan sonra aşağıdakileri seçin:

Cevapla - Seçilen mesaja cevap gönderir.

İlet - Seçilen mesajı bir başka kişiye iletir.

Çağrı

Ses araması - Size mesaj gönderen kişiyi arar.

Video çağrısı - Size mesaj gönderen kişiye video çağrısı yapar.

Sil - Mesajı siler.

Yeni mesaj oluştur - Yeni, boş mesaj veya e-posta açar.

İşaretle/İşareti kaldır - Çoklu silme işlemi için birden fazla mesajı işaretler.

Filtre - mesajı türüne göre görüntüler. Bu fonksiyon, SMS'leri MMS'den ayrı gruplar.

Kopyala ve Taşı

- **Buraya Kopyala** - Mesajın bir kopyasını telefonunuza kopyalar.

- **Buraya taşı** - Mesajı telefonunuza taşır.

- **Klasörlerime taşı** - Mesajı "Klasörüm'e" taşır.



Mesaj bilgisi - Mesajın ek bilgilerini, örneğin gönderildiği zamanı görüntüler.

SIM mesaj için yer yok mesajı görüldüğünde gelen kutusundaki bazı mesajları silmeniz gerekir.

Mesajlar için yer yok mesajı görüldüğünde yer açmak için mesajları silebilirsiniz.

Şablonların kullanılması

Sıkça gönderdiğiniz SMS ve MMS mesajlarınız için şablon oluşturun. Telefonunuzda bazı şablonlar bulunmaktadır, dolayısıyla arzu ederseniz kullanabilirsiniz.

- 1  öğesine dokunun ve ardından **Şablonlar**'ı seçin.
- 2 **Metin şablonları** veya **Multimedya şablonları**'ı seçin. Multimedya  şablonlarında Yeni ekle, Multimedya mesajı yaz veya Düzenle işlevlerini veya Metin şablonlarında **Yeni ekle**, **Düzenle**, **Sil** veya **Tümünü sil** işlevlerini yerine getirmek için Seçenekler öğesine basabilirsiniz.

İfadelerin kullanılması

İfadeler kullanarak mesajlarınıza canlılık katın. Telefonunuzda güncel olarak kullanılan bazı popüler ifadeler bulunur.


- 1  tuşuna dokunup **İfadeler**'i seçin.
- 2 **Yeni ekle**, **Düzenle**, **Sil** veya **Tümünü sil** komutları için  tuşuna dokunun.

Metin mesajı ayarlarının değiştirilmesi

KF700 model telefonunuzun mesaj ayarları telefonu satın alır almaz hemen mesaj gönderebileniz için önceden ayarlanmıştır.

Ayarları değiştirmek isterseniz aşağıdaki ayrıntılı bilgilere bakın.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

 Öğesine dokunun, ardından **Ayarlar**'ı daha sonra **Metin mesajı** öğesini seçin. Aşağıdaki değişiklikleri yapabilirsiniz:

SMS merkezi - Mesaj merkeziniz için ayrıntıları belirleyin.

İletim raporu - Mesajınızın iletildiğine dair onay almak için kullanın.

Geçerlilik süresi - Mesajınızın ne kadar süreyle SMS merkezinde tutulacağını belirleyin.


Mesaj tipleri - Metninizi **Metin**, **Ses**, **Faks**, **X.400** veya **E-posta**'ya dönüştürür.

Karakter kodlaması - Karakterlerin nasıl kodlanacağını belirleyin, ancak bu mesajınızın büyüklüğünü etkiler, dolayısıyla bu fazla veri ücretlendirilir.

Uzun metni böyle gönder - Çoklu SMS veya **MMS** olarak göndermek için kullanın.

Mesajlar

Multimedya mesajı ayarlarının deęiřtirilmesi

 Öęesine dokunun, ardından **Ayarlar**'ı daha sonra **Multimedya mesajı** öęesini seçin. Ařaęıdaki deęiřiklikleri yapabilirsiniz:

Alım modu - Ana řebeke veya **Dolařım řebekesi** olarak seçin. Sonrasında **Manuel** seçerseniz sadece MMS uyarısı alırsınız ve sonrasında isterseniz tamamını indirebilirsiniz.

İletim raporu - İletim raporu almak veya talep etmek için kullanın.

Okundu raporu - Yanıtı oku mesajına izin verilmesi için kullanın.

Öncelik - MMS'nizin öncelik derecesini belirleyin.

Geçerlilik süresi - Mesajınızın ne kadar süreyle SMS merkezinde tutulacaęını belirleyin.


Slayt süresi - Slaytların ekranda görünme süresini belirleyin.

Gönderme zamanı - Mesajınızı belirledięiniz bir saatte gönderir.

MMS Merkezi - Mesaj merkezimize ait ayrıntıları girin.

Not: E-posta ayarlarınızı nasıl deęiřtireceęiniz ile ilgili detaylı bilgi edinmek için sayfa 29'a bakınız.

Diđer ayarlarınızın deęiřtirilmesi

Önce  öęesine dokunun ardından **Ayarlar**'ı seçin ve daha sonra:


Video posta/Sesli posta - Bu seçenek (LSK) telefonda bulunmaz. Video posta/Sesli posta servisi eklemek için Ekle kullanın veya řebeke operatörünüz ile temasa geçin.

Servis mesajı - Servis mesajlarını almak veya engellemek için kullanın. Gönderenleri güvenilir ve güvenilirmez olarak sınıflandırarak mesaj güvenlięinizi de ayarlayabilirsiniz.

Bilgi servisi - Alım kořullarını, dili ve diđer ayarları belirleyin.

Kamera

Hızlı fotoğraf çekilmesi

- 1 Telefonun sağ tarafında bulunan  tuşuna basın.
- 2 Ekranın ortasında bulunan beyaz vizör kutusuna odaklanabilirsiniz.
- 3 Telefonu yatay olarak tutarken, merceği fotoğrafınızın merkezine doğru çevirin.
- 4 Çekim tuşuna hafifçe basın, vizör içerisindeki odaklama karesi, netliğe göre kırmızı veya yeşil renk alacaktır.
- 5 Odaklama karesi yeşile dönünce nesne odaklanmış demektir.
- 6 Çekim tuşuna tam basın.

Fotoğraf çekildikten sonra

Çektiğiniz resim ekranda görüntülenir. Resmin adı ekranın alt kısmında beş simge ile birlikte geçer.



Hemen bir başka fotoğraf daha çekmek için dokununuz. Mevcut fotoğrafınız kaydedilir.



Albümünüzde bulunan diğer fotoğraflara bakmak için dokununuz. Mevcut fotoğrafınız kaydedilir. Kayıtlı fotoğraflarınızın görüntülenmesi **ile ilgili olarak sayfa 37'ye bakın.**



MMS, E-posta veya Bluetooth aracılığıyla fotoğraf göndermek için dokununuz. Ayrıca fotoğrafınıza Blog'a da ekleyebilirsiniz. Mesaj gönderme ile ilgili olarak sayfa 26'ya, Bluetooth kullanarak dosyaların gönderilmesi ve alınması ile ilgili olarak da sayfa 69'a bakın.



Az önce çekmiş olduğunuz fotoğrafı duvar kağıdı olarak atamak için dokununuz.



Az önce çekmiş olduğunuz fotoğrafı silmek için dokununuz ve onaylamak için **Evet** öğesine basın.

Vizör tekrar belirir.

01

02

03

04

05


06

07

08

Kamera

Vizör ekranını tanıma

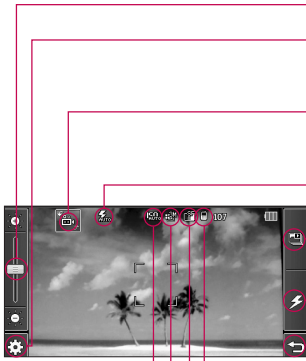

Kontrast - Bkz. **Kontrastın ayarlanması**, sayfa36.

Ayarlar - Ayarlar menüsünü açmak için bu simgeye dokununuz. Detaylı bilgi için bkz. **Gelişmiş ayarların kullanılması**, sayfa 37.

Kamera modu - Kamera modu seçilir. Video kaydedici modu veya tam tersi arasında geçiş yapabilirsiniz.

Flaş durumu

Galeri

Flaş - Bkz. **Flaş kullanımı**, sayfa35.

Geri dön - Bekleme ekranına geri dönmek için bu tuşa dokununuz.

Telefon belleğine / harici belleğe kaydedilmesi için

Resim kalitesi

Görüntü boyutu

ISO değeri

İpucu! Daha temiz bir vizör ekranı için bütün kısa yol seçeneklerini kapatabilirsiniz. Sadece vizörün merkezine dokununuz. Seçenekleri tekrar görüntülemek için ekrana tekrar dokununuz.



Flaş kullanımı

Flaş varsayılan olarak Otomatik şeklinde ayarlanmıştır ancak farklı seçenekler de mevcuttur.


- 1 Flaş alt menüsüne erişmek için vizörün orta sağından  öğesini seçin.
- 2 Dört adet flaş seçeneği bulunmaktadır:
Otomatik - Kameranız iyi bir resim çekmek için ihtiyacı olan ışığı belirleyip gerektiğinde flaşı kullanır.
Resim çekerken - Flash yalnızca resim çekmek üzere çekim düğmesine basıldığında kullanılacaktır.
Her zaman açık - Kamera flaşı her zaman kullanılır.
Daima kapalı - Kamera flaşı hiç kullanılmaz. Bu özellik pil enerjisi tasarrufu için faydalıdır.
- 3 Kullanmak istediğiniz flaş seçeneğine dokununuz.
- 4 Seçiminizi yaptıktan sonra flaş menüsü otomatik olarak kapanır ve resim çekmeye hazır hale gelir.


Kontrastın ayarlanması


Kontrast, bir resimdeki aydınlık ve karanlık farklılıklarını belirler. Düşük kontrastlı bir resim puslu görünürken yüksek kontrastlı bir resim daha net görünür. Daha düşük kontrast için


çubuk boyunca kontrast göstergesini  simgesine doğru kaydırın, daha yüksek kontrast için ise  simgesine doğru kaydırın.

Gelişmiş ayarların kullanılması

Tüm gelişmiş ayarlama seçeneklerini açmak için vizör ekranında  tuşuna dokununuz.

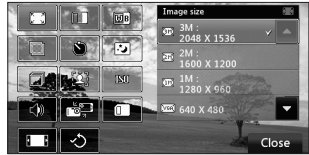

 **Resim boyutu** - Bellek kartında yerden kazanmak veya rehberdeki bir kişi için kullanmak amacıyla resmin boyutunu değiştirir. Sayfa 38'de bulunan **Resim boyutunun değiştirilmesi** başlığına bakınız.

 **Resim kalitesi** - **Çok iyi**, **İyi** ve **Normal** arasında seçim yapınız. Kalite ne kadar iyi olursa fotoğraf o kadar net olacaktır ancak sonuçta dosya boyutu artacaktır, bu da bellekte daha az fotoğraf saklayabileceğiniz anlamına gelir.

01

02

03

04


05


06

07


08

Kamera

 **Beyaz dengesi** - Beyaz dengesi resimlerinizdeki beyaz rengin daha gerçekçi olmasını sağlar. Kameranızın beyaz dengesini doğru bir şekilde ayarlaması için ışık koşullarını belirlemeniz gerekir. **Otomatik, Akkor ışık, Güneşli, Flüoresan veya Bulutlu** arasında seçim yapın.


 **Renk tonu** - Çekeceğiniz resme renk tonu uygulayın. 40. sayfada **Renk tonunun seçilmesi** başlığına bakın.

 **Otomatik-zamanlayıcı** - Otomatik-zamanlayıcı, çekim tuşuna basıldıktan sonraki gecikmeyi ayarlamayı sağlar. **3 saniye, 5 saniye veya 10 saniye** arasında seçim yapın. Grup fotoğrafına dahil olabilmek için çok uygundur.


 **Gece modu** - **Kapalı** ve **Açık** seçenekleri arasında geçiş yapmanıza imkan tanır. Gece olduğunda bu mod iyi fotoğraf çekmek için oldukça kullanışlıdır.

 **Çoklu çekim** - Kamera birkaç kere art arda çekim yapar.


 **Çerçeve çekimi** - Bir çerçeve seçebilir ve bu çerçeve ile birlikte resim çekebilirsiniz.


 **ISO** - ISO, kamera ışık sensörünün hassasiyetini belirler. Yüksek ISO değeri, kamerayı daha hassas yapar. Bu özellik, flaş kullanılmayan daha karanlık koşullarda

faydalıdır. **Otomatik, ISO 100, ISO 200, ISO 400** veya **ISO 800** değerleri arasında seçim yapın.

 **Deklanşör sesi** - Üç adet deklanşör sesinden birini seçin.

 **Kamera değiştir** - Kendi kendinizin portresini çekmek için, LG KF700'ün **dahili kamerası** ve **Dış cephe kamerası** arasında geçiş yapın. Detaylı bilgi için bkz. **Dahili kameranın kullanılması**, sayfa 39.

 **Kullanılan bellek** - Fotoğraflarınızın **Telefon belleğine** mi yoksa **Harici belleğe** mi kaydedileceğini seçer.

 **Geniş görünüm** - **Kapalı** ve **Açık** seçenekleri arasında geçiş yapın. Geniş görünüm kullanarak görüntüleyebilirsiniz.



 **Ayarları sıfırla** - Telefonunuzu orijinal kamera ayarları ile yeniden başlatmak için **Evet** seçeneğini seçin.

Not: Yeni bir ayar seçtikten sonra yaptığınız değişiklikleri uygulamak için her zaman dokununuz.

İpucu! Ayarlar menüsü, vizör ekranında ön planda yer alacağı için resim rengi veya kalitesi gibi unsurları değiştirdiğinizde ayarlar menüsü altında bu resim değişikliğini önceden görebilirsiniz. Herhangi bir değişiklik yapıp çıkmadan önce **Kaydet**'e dokunmayı unutmayın.



Resim boyutunun değiştirilmesi

Daha fazla piksel daha fazla dosya boyutu kapladığı için bu işlem, bellekte daha fazla yer kaplar. Telefonunuzda daha fazla resim tutmak amacıyla daha az dosya boyutu elde etmek için piksel sayısını değiştirebilirsiniz.

- 1 Vizörde sol alt köşede bulunan  öğesine dokunun.
- 2 Ayarlar menüsünden  seçimini yapın.
- 3 Beş adet nümerik seçenek arasından bir piksel değeri seçin (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) veya ön ayar tercih edin:

Rehber - Bu ayar, rehberdeki bir kişi için uygun boyutlu bir resim çekmek için kullanılır.



Renk tonunun seçilmesi


- 1 Vizörden sol alt köşede bulunan  öğesine dokunun.
- 2 Ayarlar menüsünden  seçimini yapın.
- 3 Beş adet renk tonu bulunur, **Normal** (renkli), **Siyah-Beyaz**, **Negatif**, **Sepya** veya **Kabartma**, **Çizim**, **Solarize**.
- 4 Kullanmak istediğiniz renk tonunu seçin.



İpucu! Renkli çekilen bir resmi siyah beyaz ya da sepyaya dönüştürebilirsiniz, ancak siyah beyaz ya da sepya olarak çekilmiş bir resmi renkliye dönüştüremezsiniz.

Dahili kameranın kullanılması

LG KF700 model telefonunuz sadece video çağrısı için değil aynı zamanda fotoğraf çekmek için de kullanabileceğiniz 640x480 çözünürlüklü dahili kamera ile donatılmıştır.




- 1 Dahili kameraya geçiş yapmak için  öğesine dokunun ve ardından  öğesini seçin.
- 2 Bir kaç saniye sonra vizör ekranında kendinizi görebilirsiniz. Resim çekmek için normal modda olduğu gibi çekim tuşuna basın.

İpucu! Dahili kamerada flaş veya ISO gibi özellikler bulunmadığı için daha az ayar vardır. Ana kamerayı kullanırken olduğu gibi resim boyutunu, resim kalitesini, beyaz dengesini ve renk tonunu  öğesine dokunarak yine değiştirebilirsiniz.

- 3 Resmi çektikten sonra ana kamerada mevcut olan tüm seçenekleri kullanabilirsiniz.
- 4 Ana kameraya dönmek için ise  öğesine ve ardından  öğesine dokunun.

Kamera


Kayıtlı fotoğraflarınızın görüntülenmesi

- 1 Kayıtlı fotoğraflara kamera modu içerisinde ve bekleme ekranından ulaşabilirsiniz. Vizörden sadece  öğesine dokunmanız yeterlidir. Bekleme ekranından  öğesine dokunun ardından sırasıyla  öğesini, **Öğelerim** seçeneğini ve ardından **Resimlerim** seçeneğini tercih edin.
- 2 Galeriniz ekranda belirir.







- 3 Görüntülemek istediğiniz resmi galerinin önüne getirmek için bir kez dokununuz.
- 4 Tam olarak açmak için fotoğrafa ikinci bir kez dokununuz.

Fotoğraf bilgilerinin görüntülenmesi

- 1 Galeri ekranının önüne getirmek için fotoğrafa dokununuz.
- 2 Fotoğrafın adı, çekildiği tarihi, boyutu (kilobayt ve piksel cinsinden) ve resim türü bilgisi (ör. jpeg) üst kısımda görüntülenir.
- 3 Detayları kapamak ve fotoğrafı görüntülemek için  öğesine dokununuz.


Video kamera


Hızlı video çekimi


- 1 Kamera modunu  konumuna alın.
- 2 Çekim tuşuna basın. Video kameranın vizör ekranı belirir.
- 3 Telefonu yatay tutup lensi filmi çekilecek nesneye doğru tutun.
- 4 Kayda başlamak için çekim düğmesine bir kez basın.
- 5 Vizörün üst kısmında **REC** ögesi görüntülenirken alt kısımda ise videonun süresini gösteren bir zamanlayıcı görüntülenir.
- 6 Videoyu duraklatmak için  ögesine dokununuz, devam etmek için ise  ögesini seçin.
- 7 Kaydı durdurmak için ekranda  ögesine dokununuz veya çekim düğmesine ikinci bir kez basın.


Video çekimi sonrası

Ekranda çekilen videonuzu gösteren durağan bir resim belirir. Resmin adı, sağ alt taraftaki üç simgeyle birlikte ekranın alt kısmından geçer.

 Hemen bir video daha çekmek için dokununuz. Çekmiş olduğunuz mevcut video kaydedilir.

 Albümünüzde bulunan diğer video kliplere bakmak için dokununuz. Çekmiş olduğunuz mevcut video klip kaydedilir. Detaylı bilgi için sayfa 39'da bulunan **Kayıtlı videoların izlenmesi** başlığına bakın.

 Az önce çekmiş olduğunuz videoyu silmek için dokununuz ve onaylamak için **Evet** ögesine basın. Vizör tekrar belirir.

 MMS, E-posta veya Bluetooth aracılığıyla fotoğraf göndermek için dokununuz. Ayrıca çekmiş olduğunuz videoyu YouTube'a da yükleyebilirsiniz. Mesaj gönderme ile ilgili olarak sayfa 26'ya, Bluetooth kullanarak dosyaların gönderilmesi ve alınması ile ilgili olarak da sayfa 73'e bakın.

01

02

03

04

05

06

07

08

Video kamera



Vizör ekranını tanıma




İpucu! Daha temiz bir vizör ekranı için bütün kısa yol seçeneklerini kapatabilirsiniz. Sadece vizörün merkezine dokununuz. Seçenekleri tekrar görüntülemek için ekrana tekrar dokununuz.

Kontrastın ayarlanması


Kontrast, bir resimdeki aydınlık ve karanlık farklılığını belirler. Düşük kontrastlı bir resim puslu görünürken yüksek kontrastlı bir resim daha net görünür.


Daha düşük kontrast ve puslu resim için kontrast göstergesini çubuk boyunca  simgesine doğru, daha yüksek kontrast ve net resim için ise  simgesine doğru kaydırın.


Gelişmiş ayarların kullanılması


Tüm gelişmiş ayarlama seçeneklerini açmak için vizör ekranında  tuşuna dokunun.





 **Görüntü boyutu** - Belleğe kaydetmek için video boyutunu değiştirin. Sayfa 44'de bulunan **Video resim boyutunun değiştirilmesi** başlığına bakın.


 **Görüntü Kalitesi - Çok iyi, İyi ve Normal** arasında seçim yapın. Kalite ne kadar iyi olursa video o kadar net olur, ancak bunun sonucunda dosya boyutu artar, yani telefon belleğinde daha az video saklayabilirsiniz.

 **Beyaz dengesi** - Beyaz dengesi videolarınızdaki tüm beyaz renklerin gerçekçi görünmesini sağlar. Kameranızın beyaz dengesini doğru bir şekilde ayarlaması için ışık koşullarını belirlemeniz gerekir. Otomatik, **Akkor ışık, Güneşli, Flüoresan** veya **Bulutlu** seçenekleri **arasından seçim yapın**.


 **Renk tonu** - Çektiğiniz videoya uygulamak için bir renk tonu seçin. Bkz. **Renk tonunun seçilmesi** sayfa 46.

 **Süre - Normal** süreyi veya **MMS** süresini seçin.

 **Gece modu** - Kapalı ve Açık seçenekleri arasında seçim yapın. Gece olduğunda bu mod iyi fotoğraf çekmek için oldukça kullanışlıdır.

 **Sessiz** - Sessiz bir video çekmek için **Sessiz** öğesini seçin.

 **Kamera değiştir** - Kendi videonuzu çekmek için LG KF700 model telefonunuzun dahili kamerasına geçiş yapın. Detaylı bilgi için bkz. **Dahili video kamerasının kullanılması**, sayfa 45.

 **Kullanılan bellek** - Videolarınızın kaydedilecekleri yer olarak **Telefon belleğini** mi yoksa **Harici belleği** mi belirleyeceğinizi seçin.

01

02

03

04


05

06

07

08



Video kamera

 **Ayarları sıfırla** - Telefonunuzu orijinal kamera ayarları ile yeniden başlatmak için Evet seçeneğini seçin.


İpucu! Ayarlar menüsü, vizör ekranında ön planda yer alacağı için resim rengi veya kalitesi gibi unsurları değiştirdiğinizde ayarlar menüsü altında bu resim değişikliğini önceden görebilirsiniz.

Video resim boyutunun değiştirilmesi

Piksel sayısı arttıkça dosya boyutu da artar bu da karşılık olarak dosyanın bellekte daha fazla yer tutacağı anlamına gelir. Telefonunuza daha fazla video sığdırmak istiyorsanız piksel sayısını değiştirerek dosya boyutunu daha küçük hale getirebilirsiniz.



- 1 Vizörden sol alt köşede bulunan  öğesine dokununuz.
- 2 Ayarlar menüsünden  seçimini yapın.
- 3 2 seçenekten birini seçerek bir piksel değeri belirleyin:

 **320x240** - Görüntü boyutudur.

 **176x144** - En küçük görüntü boyutu olup bunun sonucu olarak en küçük dosya boyutuna sahip seçenektir.

İpucu! Video formatı dönüştürme yazılımı için KF700 model cep telefonunuz ile birlikte verilen CD'ye bakın.





Renk tonunun seçilmesi


- 1 Vizörden sol alt köşede bulunan  öğesine dokununuz.
- 2 Ayarlar menüsünden  seçimini yapın.
- 3 Beş adet renk tonu bulunur, **Normal** (renkli), **Siyah-Beyaz**, **Negatif**, **Sepya**, **Çizim**, **Solarize** ya da **Kabartma**.
- 4 Seçiminizi yaptıktan sonra renk tonu menüsü otomatik olarak kapanarak videonuzu çekmeye hazır hale gelir.

İpucu! Renkli çekilen bir videoyu siyah beyaz ya da sepyaya dönüştürebilirsiniz, ancak siyah beyaz ya da sepya olarak çekilmiş bir videoyu renkliye dönüştüremezsiniz.




Dahili video kameranın kullanılması

LG KF700 model telefonunuz sadece video çağırısı için değil aynı zamanda video çekmek için de kullanabileceğiniz 320x240 çözünürlüklü dahili kamera ile donatılmıştır.

- 1 Dahili kameraya geçiş yapmak için  öğesine dokunun ve ardından  öğesini seçin.
- 2 Bir kaç saniye sonra vizör ekranında kendinizi görebilirsiniz. Resmi kaydetmeye başlamak için çekim düğmesine normal olarak basın, kaydı durdurmak için ikinci kez basın.
- 3 Videoyu çektikten sonra, ana kamerayı kullanarak çekilen video için geçerli olan tüm seçenekler sunulacaktır.
- 4 Ana kameraya dönmek için ise  öğesine ve ardından  öğesine dokunun.

İpucu! Resim boyutunu, resim kalitesini, süreyi, sessiz özelliğini, beyaz dengesini, renk tonunu ve belleği, ana kamerayı kullanırken olduğu gibi  düğmesine basarak değiştirebilirsiniz.

Kayıtlı videoların izlenmesi

- 1 Vizörden sadece  öğesine dokunmanız yeterlidir. Bekleme ekranından sırasıyla  öğesine dokunun, ardından  öğesini, **Galeri** seçeneğini ve sonra **Videolarım** öğesini seçin.
- 2 Galeriniz ekranda belirir.
- 3 İzlemek istediğiniz videoyu galerinin önüne getirmek için bir kez dokunun.
- 4 Tam olarak açmak için videoya ikinci bir kez dokunun.

01

02

03

04

05


06

07


08

Çektiğiniz fotoğraflar ve videolar

Fotoğrafların ve videoların görüntülenmesi

- 1 Vizörden sadece  öğesine dokunmanız yeterlidir.
- 2 Galeriniz ekranda belirir.
- 3 İzlemek istediğiniz videoyu veya fotoğrafı galerinin önüne getirmek için bir kez dokunun.
- 4 Tamamen açmak için ikinci kez dokunun.
- 5 Videolar otomatik olarak oynatılmaya başlar.
Oynatmayı duraklatmak için ekrana dokunarak seçenekleri görüntüleyin ve **||** tuşuna seçin.


İpucu! Ekranın alt tarafındaki **Sıralı** veya **Rasgele** öğelerine dokunarak fotoğraflarınızın ve videolarınızın görüntülenme şeklini değiştirin.

İpucu! Bir fotoğraf veya videoyu silmek için açın ve  tuşunu seçin. Onaylamak için **Evet**'e basın.

Video izlerken ses seviyesinin ayarlanması

Video oynatılırken ses seviyesini ayarlamak için, ekranın sol tarafındaki ses çubuğunun üzerindeki işaretçiyi yukarı ve aşağı kaydırın. Alternatif olarak kamera lensinin yanında bulunan ayar düğmesini de kullanabilirsiniz.

Videodan resim çekilmesi


- 1 Resim çekmek istediğiniz videoyu seçin.
- 2 Videoyu resme dönüştürmek istediğiniz karedeyken durdurmak için **||** tuşuna dokunun.
- 3 Seçenekler menüsünden **Çek** öğesini seçin ve **Tamam** öğesine dokunun.
- 4 **Kaydet**'i seçin.
- 5 Resim, atanan resim adıyla birlikte ekranda belirir.
- 6 Resme ve ardından galeriye geri dönmek üzere  öğesine dokunun.
- 7 Resim, **Öğelerim Görüntülerim** klasörüne kaydedilir ve galeride görüntülenir. Bunun görüntülenmesi için galeriden çıkmanız ve tekrar açmanız gerekir.


UYARI: Multimedya dosyası telefonda kayıtlı değilse bazı işlevler düzgün çalışmaz.

Video veya fotoğraf bilgilerinin görüntülenmesi


Videolar ve fotoğraflar galeride bir arada gruplanır. Hangilerinin fotoğraf, hangilerinin video olduklarını ayıramıyorsanız, ayrıntıları kontrol edin. Örneğin, videolar AVI veya 3GP dosya tipinde, fotoğraflar ise JPEG veya GIF dosya tipinde olabilir.

- 1 Video görüntüsünü veya fotoğrafı galeri ekranının önüne getirmek için üzerine dokunun.

İpucu! Öğelerim altında bulunan bir fotoğrafı ya da videoyu yeniden adlandırabilirsiniz. Bir fotoğraf veya video seçin ardından  öğesine dokunun ve **Yeniden adlandır** öğesini seçin. Fotoğraf veya videonuzun yeni adını girin.

- 2 Video görüntüsü veya fotoğrafın üst kısmında, adı, çekildiği tarih, boyutu (kilobayt ve piksel olarak) ve resim mi video mu olduğu (örneğinMP4/3GP veya JPEG) görüntülenir.
- 3 Detayları kapatmak ve video görüntüsünü veya fotoğrafı görüntülemek üzere  öğesine dokunun.

Galeriden fotoğraf veya video gönderilmesi


- 1 Bir foto veya videoyu iki kez dokunarak açın.
Video seçerseniz, oynatılmaya başladığında  tuşuna basın.
- 2 Seçenekler menüsünü açmak için ekranın sol tarafına dokunun.
- 3 **Gönder** seçeneğini seçin ve video ya da fotoğrafı nasıl göndermek istediğinizi seçin: **Mesaj, E-posta, Bluetooth.**

- 4 Seçilen mesaj uygulaması açılır, böylece video veya fotoğrafı gönderebilirsiniz.


Not: Fotoğraf ya da videonun MMS ile gönderilmeden önce yeniden boyutlandırılması gerekebilir. Bazı videolar MMS yoluyla gönderilemeyecek kadar büyük olabilir, bu durumda diğer gönderme seçeneklerinden birini seçin.


Fotoğrafların slayt gösterisi şeklinde görüntülenmesi

Slayt gösterisi modu galerinizde bulunan tüm fotoğrafları birer birer slayt gösterisi şeklinde görüntüler. Videolar slayt gösterisi şeklinde görüntülenemezler.

- 1 Slayt gösterisini başlatmak istediğiniz fotoğrafa iki kez dokunarak açın.
- 2 Sol tarafta bulunan  öğesini ve **Slayt gösterisi** seçeneğini seçin.
- 3 Slayt gösterisi başlar.

Slayt gösterisi içinde beş seçenek vardır:

 Fotoğrafı tam ekrana taşımak için dokunun. Sol tarafta bulunan çubuk ile slayt gösterisinin hızı artırılabilir veya azaltılabilir.

 Fotoğrafları rastgele bir sıra ile görüntülemek için buraya dokunun (ör. galerinizde görüntülendikleri kronolojik sırayla değil).

01

02

03

04

05

06

07

08


Çektığınız fotoğraflar ve videolar

▶▶ Bir sonraki fotoğrafa atlamak için dokununuz.

◀◀ Görüntülenen son fotoğrafa geri dönmek için dokununuz.

▶ / || Belirli bir fotoğraf üzerinde slayt gösterisini duraklatmak için dokununuz. Oynatmaya kaldığı yerden devam etmesi için tekrar dokununuz.

Fotoğrafın duvar kağıdı olarak ayarlanması

- 1 Duvar kağıdı olarak ayarlamak istediğiniz fotoğrafa iki kez dokunarak açın.
- 2  öğesine dokununuz ve **Kullanım şekli** öğesini, ardından **Duvar kağıdı** öğesini seçin.
- 3 Ekran portre moduna geçer. Küçük resimdeki yeşil kutuyu kaydırarak, fotoğrafın duvar kağıdı olarak ayarlamak istediğiniz kısmını seçin. Bu alan ekranda gerçek boyutta görüntülenecektir.
- 4 Seçilen bölümden memnun kaldığınızda **Ayarla** öğesine basın.



Fotoğrafların düzenlenmesi

Fotoğraflarınızı değiştirmek, onlara ekleme yapmak veya biraz renk vermek için yapabileceğiniz pek çok harika şey vardır.



- 1 Düzenlemek istediğiniz fotoğrafı açın ve seçenekleri görüntülemek üzere dokununuz.
- 2 **Düzenle** öğesini seçin. Aşağıdaki ekran görüntülenen.




- 3 Fotoğrafınızı düzenlemek için simgelere dokununuz:

 Fotoğraf taslağınızın üzerine bir şey çizin. Dört seçenek arasından çizginin kalınlığını belirleyin. Çizginin rengini değiştirmek için aşağıdaki  açıklamasına bakın (renk simgesi seçtiğiniz renge döner).

 Bkz. **Fotoğrafa metin eklenmesi** sayfa 47.

 Fotoğrafınızı damgalarla süsleyin. Mevcut damgalar arasından seçim yapın ve fotoğrafınız üzerinde bunların yerleştirilmesini istediğiniz yerlere dokununuz. Bir damganın rengini değiştirmek için aşağıya  bakınız.

 Bir damganın, çizginin ya da bir metnin rengini değiştirir. Fotoğraf üzerinde çizim yapmadan, yazı yazmadan ve damgalamadan önce rengi seçmelisiniz.

Save Yapmış olduğunuz değişiklikleri fotoğraflara kaydedin. Orijinal dosya üzerine değişiklikleri **kaydetmek** veya Yeni bir dosya olarak kaydetmek **için seçin**. Yeni dosya **seçeneğini seçtiyseniz** bir dosya adı girin.

← Fotoğrafa yaptığınız son **Efekt** ayarını veya **Daha fazla** düzenlemeyi geri alın.

✳️ Bkz. **Fotoğrafa efekt eklenmesi**, sayfa 47.

More **Döndür** ve **Ayna** dahil olmak üzere diğer efekt seçeneklerini açmak için dokununuz. Daha gelişmiş düzenleme seçenekleri de mevcuttur. Bkz. **Fotoğrafa renk vurgusu yapılması** ve **Fotoğrafta renklerin yerlerini değiştirme** sayfa 48.

↶ Galeriye dönmek için dokununuz.

Fotoğrafa metin eklenmesi


- 1 Düzenleme ekranında **T** tuşuna dokununuz.
- 2 İsteddiğiniz harfi girin.
- 3 Tuş takımını kullanarak metniniz girin ve ardından **İşlem tamam** öğesine basın.
- 4 Metni istediğiniz yere taşımak için dokunarak kaydırın.

Fotoğrafa efekt eklenmesi

- 1 Düzenleme ekranında **✳️** tuşuna dokununuz.
- 2 Fotoğrafa uygulamak üzere altı seçenekten birini seçin:
 - Yumuşat** - Fotoğrafın odağını yumuşatmak için işaretçiyi çubuk boyunca kaydırın. Değişiklikleri kaydetmek için **Tamam**'ı seçin veya **İptal et** ile iptal edin.
 - Keskinleştir** - Fotoğrafın odağını keskinleştirmek için işaretçiyi çubuk boyunca kaydırın. Değişiklikleri kaydetmek için **Tamam**'ı seçin veya **İptal et** ile iptal edin.
 - Mozaik** - Fotoğrafa bulanık mozaik efekt uygulamak için dokununuz. Normal fotoğrafa geri dönmek için **←** öğesine dokununuz.
 - Renk Efekt** - Fotoğrafın rengini **Siyah-Beyaz, Sepya, Negatif renkli, Gelişmiş RGB** veya **Kontrast** olarak değiştirin. **Kontrast**'ı seçerseniz, kontrastı artırmak veya azaltmak için işaretçiyi çubuk boyunca kaydırın.
 - Çerçeve** - Fotoğrafınıza çerçeve ekleyin. Resim boyutunun değiştirilmesine izin vermeniz istenebilir. Çerçeve tiplerini görmek için **Evet** öğesini seçin. Seçilen çerçeve fotoğrafınıza uygulanır.

Çektığınız fotoğraflar ve videolar

Yeniden boyutlandır - Boyut seçenekleri için buraya dokunun. Fotoğrafın boyutunu değiştirmek için istediğiniz boyuta dokunun.

- 3 Bir efekti geri almak için sadece  öğesine dokunmanız yeterlidir.

İpucu! Bir kerede bir tane ekleyebileceğiniz renk efekti haricinde bir fotoğrafa birden fazla efekt ekleyebilirsiniz.

Fotoğrafa renk vurgusu yapılması



- 1 Düzenleme ekranında  tuşuna dokunun.
- 2 **Renk** seçeneğini seçin.
- 3 Fotoğrafın bir bölümünü seçin. O bölgede aynı veya benzer renkte olan her şeyin etrafında bir işaret çizgisi belirir. Örneğin, birinin saçı veya kazağının rengi.
- 4 **Kaydet**'e dokunun.
- 5 Renk vurgulaması yapılacak işaretli alan haricinde fotoğraftan tüm renk çıkartılır.
- 6 İşaretçiyi yoğunluk çubuğunda yukarı aşağı kaydırarak vurgunun yoğunluğunu değiştirin.
- 7 Değişiklikleri kaydetmek için **Kaydet**'i seçin.

Fotoğrafta renklerin yer değiştirmesi

- 1 Düzenleme ekranında  tuşuna dokunun.
- 2 **Renk Değişimi**'ni seçin.
- 3 Fotoğrafın bir bölümünü seçin. O bölgede aynı veya benzer renkte olan her şeyin etrafında bir işaret çizgisi belirir. Örneğin, birinin saçı veya kazağının rengi.
- 4  tuşuna dokunun ve bir renk seçin.
- 5 **Değiştir** öğesini seçin.
- 6 Fotoğrafın renk vurgusu için seçilen kısmı seçili renge döner.
- 7 Değişiklikleri kaydetmek için **Kaydet**'i seçin.


Multimedya

Telefonunuzun belleğine tüm multimedya dosyalarını kaydedebilir, böylece tüm resimlerinize, seslerinize, videolarınıza ve oyunlarınıza kolaylıkla ulaşabilirsiniz. Dosyalarınızı bir bellek kartına da kaydedebilirsiniz. Bir bellek kartını kullanmanın avantajı telefon belleğinde boş yer açabilmektir.


Multimedya menüsüne erişmek için  öğesine ardından  öğesine dokunun. Tüm multimedya dosyalarınızın saklandığı klasörlerin listesini görüntülemek üzere **Galeri'ye** dokunun.

Görüntülerim

Görüntülerim klasöründe telefonunuza önceden yüklenmiş olan varsayılan resimler de dahil olmak üzere, sizin tarafınızdan indirilen resimler ve telefonunuzun kamerasını kullanarak çekmiş olduğunuz resimlerin listesi bulunur.

Görünümü küçük resimlerden liste görünümüne değiştirmek için  tuşuna dokunun.

Görüntülerim seçenek menüleri

Seçenekler'e erişmek için  öğesine dokunun.

Görüntülerim klasöründe kullanabileceğiniz seçenekler ne tür resim seçmiş olduğunuza göre değişiklik gösterir. Telefon kamerası ile çekmiş olduğunuz resimler için tüm seçenekler kullanılabilir. **Kullanım şekli, Bluetooth ile yazdır, Sırala ve Bellek bilgisi** seçenekleri varsayılan resimlerde gözükmemektedir.

İpucu! Seçenekler listesine ilerlemek için görünür olan son satıra dokunun ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

Gönder - Resmi bir arkadaşınıza gönderin.

Kullanım şekli - Resmi istediğiniz şekilde ayarlayabilirsiniz.

İşaretle/İşareti kaldır - Çoklu dosyaları seçin.

Taşı - Bir resmi telefon belleğinden bellek kartına, veya tersi yönde taşıyın.

Kopyala - Bir resmi telefon belleğinden bellek kartına, veya tersi yönde kopyalayın.

Sil - Bir resmi silin.

Yeniden adlandır - Bir resmi yeniden adlandırın.

Yeni klasör oluştur - **Görüntülerim** klasörü içerisinde yeni bir klasör oluşturun.

Slayt gösterisi - Bir slayt gösterisi başlatın.

Bluetooth ile yazdır - Bluetooth® aracılığıyla bir resim dosyası yazdırın.

01

02

03

04

05

06

07

08

Multimedya

Sırala - Resimleri belirli bir sıraya göre sıralayın.




Bellek bilgisi - Bellek durumunu görüntüleyin.

Fotoğrafın gönderilmesi

- 1 Önce  tuşuna, sonra  tuşuna dokununuz.
- 2 Önce **Galeri'ye** dokununuz, sonra **Görüntülerim**'i seçiniz.
- 3 Bir fotoğraf seçiniz ve  tuşuna dokununuz.
- 4 **Gönder**'e dokununuz ve **Mesajlar**, **E-posta** veya **Bluetooth** arasından seçim yapınız.
- 5 Mesajlar veya E-posta'yı seçerseniz, fotoğrafınız mesaja eklenir ve mesajı normal olarak yazıp gönderebilirsiniz. Bluetooth'u seçerseniz, Bluetooth'u açmanız istenir ve telefonunuz videoyu gönderecek bir cihaz arar.




Bir resmin kullanılması

Resimleri duvar kağıdı olarak kullanmak için, hatta arayışı tanımlamak için seçebilirsiniz.

- 1 Önce  tuşuna, sonra  tuşuna dokununuz.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim**'e dokununuz.
- 3 Bir resim seçiniz ve  düğmesine dokununuz.




- 4 Önce **Kullanım şekli**'ne dokununuz ve aşağıdakiler arasından seçim yapınız:
Duvar kağıdı - Bekleme modu ekranı için bir duvar kağıdı ayarlayınız.
Giden arama - Giden çağrılarda görüntülenecek bir resim ayarlayınız.
Açılış - Telefonu açtığınızda görüntülenecek bir resim ayarlayınız.
Kapanış - Telefonu kapattığınızda görüntülenecek bir resim ayarlayınız.
Rehber görüntüsü - Rehber listenizdeki belirli bir kişiye, bu kişi sizi aradığında görüntülenmek üzere bir resim atayınız.

Resimlerinizin düzenlenmesi

- 1 Önce  tuşuna, sonra  tuşuna dokununuz.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim**'e dokununuz.
- 3 Önce  tuşuna, sonra Sırala'ya dokununuz.
- 4 **Tarih**, **Tür** ve **İsim** arasından seçim yapınız.

Not: Resimlerinizi kategoriye göre sıralayabileceğiniz gibi elle de sıralayabilirsiniz.




Resim silme

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim'e** dokunun.
- 3 Bir resim seçin ve  düğmesine dokunun.
- 4 Onaylamak için önce **Sil'e**, sonra **Evet'e** dokunun.

İpucu! **Galeri** klasöründe bulunan herhangi bir dosyayı çabuk bir şekilde silmek üzere imleç ile vurgulanması için üzerine bir kere dokunun ve ardından **c** telefon tuşuna dokunun. Onaylamak için **Evet'e** dokunun.

Resmin taşınması veya kopyalanması

Bir resmi telefon belleği ile bellek kartı arasında taşıyabilir veya kopyalayabilirsiniz. Bu işlemi bellek bankalarından birinde yer açmak veya resimlerinizi kaybolmasını önlemek için yapabilirsiniz.

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim'e** dokunun.
- 3 Bir resim seçin ve  düğmesine dokunun.
- 4 **Taşı** veya **Kopyala'yı** seçin.

Resimlerin işaretlenmesi

Birkaç resmi bir kerede taşımak, kopyalamak veya silmek isterseniz, önce bunları onay işaretiyle belirlememiz gerekir.

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim'e** dokunun.
- 3 Önce  tuşuna, sonra **İşaretle/İşareti kaldır**'a dokunun.
- 4 Her bir resmin solunda birer kutu belirir. Resme dokunduğunuzda sol tarafında bulunan kutucukta bir onay işareti görüntülenir.
- 5 Resmin işaretini kaldırmak üzere, tekrar resme dokunun, bu şekilde resmin sol tarafında bulunan kutucuk içerisindeki işaret kalkar.
- 6 Tüm uygun kutuları işaretledikten sonra,  tuşuna dokunun ve seçeneklerden birini seçin.

Slayt gösterisi oluşturulması

Telefonunuzda bulunan tüm resimlere bakmak veya telefonunuzda nelerin kayıtlı olduğunu görmek için sizi her bir resmi teker teker açmaktan kurtaracak bir slayt gösterisi hazırlayabilirsiniz.

01

02

03

04







05

06

07

08

Multimedya

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim'e** dokunun.
- 3 Önce  tuşuna, sonra **Slayt gösterisi'ne** dokunun.
- 4 Resimler arasında geçiş yapmak için  ve  tuşlarını kullanın, veya resimlerinizi rastgele göstermesi için  tuşuna dokunun.



Bellek durumunun kontrol edilmesi

Bellek alanınızın ne kadarını kullandığınızı ve ne kadar kullanılabilir alanınız kaldığını kontrol edebilirsiniz.




- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Görüntülerim'e** dokunun.
- 3 Önce  tuşuna, sonra **Bellek bilgisi'ne** dokunun.
- 4 **Telefon belleği** veya **Harici bellek** seçeneklerinden birini seçin.

Not: Takılı bir bellek kartınız yoksa, **Bellek kartım** seçeneğini seçmeniz mümkün olmaz.

Seslerim

Seslerim klasöründe **Varsayılan sesler** ve **Ses kayıtları** bulunur. Buradan sesleri yönetebilir, gönderebilir veya zil sesi olarak ayarlayabilirsiniz.

Sesin kullanılması



- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Seslerim'e** dokunun.
- 3 **Standart sesler** veya **Ses kayıtları** seçeneklerinden birini seçin.
- 4 Bir ses seçin ve dinlemek için **Oynat'a** dokunun.
- 5  tuşuna dokunun ve Kullanım şekli'ni seçin.

- 6 **Ses zil tonu, Video zil tonu, Mesaj tonu, Açılış, Kapanış** seçenekleri arasında seçim yapın.

Videolarım

Videolarım klasörü indirilen videoların ve telefonunuzla kaydettiğiniz videoların listesini gösterir.

Videonun izlenmesi

- 1 Önce  tuşuna, sonra  tuşuna dokununuz.
- 2 Önce **Galeri'ye**, sonra **Videolarım'a** dokununuz.
- 3 Bir video seçin ve **Oynat'a** dokununuz.

İpucu! Öğelerim'deki herhangi bir dosyayı çabuk silmek için, bir kez dokunarak imleçle vurgulanmasını sağlayın ve **c** telefon tuşuna basın. Onaylamak için **Evet'e** dokununuz.

Video duraklatıldığında seçeneklerin kullanılması

Duraklat modundayken  öğesine dokununuz ve aşağıdaki seçeneklerden birini seçin:

- Yakala** - Dondurulan kareyi resim olarak çekin.
Dosya bilgisi - Ad, Boyut, Tarih, Saat, Tür, Süre, Boyut, Koruma ve Telif hakkı detayları ile ilgili bilgileri görüntüleyin.
Gönder - Video'yu bir Mesaj, E-posta veya Bluetooth aracılığıyla gönderin.


Sil - Videoyu silin.

Kullanım şekli - Videoyu zil sesi olarak kullanın.

Video klipin gönderilmesi

- 1 Bir video seçin ve  tuşuna dokununuz.
- 2 **Gönder'e** dokununuz ve **Mesajlar, E-posta** veya **Bluetooth** arasında seçim yapın.
- 3 **Mesaj** veya **E-posta** öğelerinden birini seçerseniz seçtiğiniz video klip mesaja iliştirilir, böylelikle sizde normal bir şekilde mesaj yazabilir ve gönderebilirsiniz. **Bluetooth** öğesini seçerseniz Bluetooth işlevini açmanız yönünde bir uyarı görüntülenir ve telefonunuz cihazın gönderileceği bir cihaz arayışına girer.

Video klipin zil sesi olarak kullanılması

- 1 Bir video seçin ve  tuşuna dokununuz.
- 2 Kullanım **şekli'ne** dokununuz ve **Ses zil tonu** ve **Video zil tonu** arasında seçim yapın.

Video seçenekleri menüsünün kullanılması

Videolarım klasöründe, aşağıdaki seçenekler arasında tercih yapabilirsiniz:

Kullanım şekli - Videoyu zil sesiniz olarak ayarlayın.

Gönder - Videoyu bir arkadaşınıza gönderin.

01

02

03

04

05

06

07

08

Multimedya

Taşı - Bir video klibini telefon belleğinden bellek kartına veya tersi yönde taşıyın.

Kopyala - Bir video klibini telefon belleğinden bellek kartına veya tersi yönde kopyalayın.

Sil - Bir videoyu silin.

Yeniden adlandır - Bir videoyu yeniden adlandırın.

İşaretle/İşareti kaldır - Çoklu dosyaları seçin.

Yeni klasör oluşturun - **Videolarım** klasörü içerisinde yeni bir klasör oluşturun.



Sırala - Videoları belirli bir sıraya göre sıralayın.

Bellek Bilgisi - Bellek durumunu görüntüleyin.

Oyunlarım ve uygulamalarım

Boş zamanlarınızda oyalanmanız için telefonunuza yeni oyunlar ve uygulamalar indirebilirsiniz.



Oyun indirilmesi

- 1  öğesine ve ardından  öğesine dokunun.
- 2 **Oyunlar ve Uygulamalar** öğesine ardından **Oyunlarım ve Uygulamalarım** öğesine dokunun.
- 3 **Oyun indir** öğesini seçin ve ardından **Bağlan** öğesine dokunun.
- 4 İndirilecek bir oyun bulabileceğiniz web

portalına bağlanırsınız.

İpucu! Öğelerim'deki herhangi bir dosyayı çabuk silmek için, bir kez dokunarak imleçle vurgulanmasını sağlayın ve **c** telefon tuşuna basın. Onaylamak için **Evet**'e dokunun.

Oyun oynanması

- 1  öğesine ve ardından  öğesine dokunun.
- 2 Önce **Galeri'ye**, sonra **Oyunlarım ve uygulamalarım**'a dokunun.
- 3 Bir oyun seçin ve ardından **Başlat** öğesine dokunun.

Oyun seçenekleri menüsünün kullanılması

Oyunlarım ve uygulamalarım klasöründen, aşağıdaki seçenekler kullanılabilir:



Yeni klasör oluşturun -  öğesine dokunun ve **Oyunlarım ve uygulamalarım** içinde yeni bir klasör oluşturun.

Sırala - Oyunları ve uygulamaları **Tarih**, **Boyut** veya **İsim** değerlerine göre sıralayın. **Hafıza yöneticisi** - Bellek durumunu görüntüleyin.


Flash içerikleri

Flash içerikleri klasörü tüm standart ve indirilen SWF dosyalarınızı içerir.

SWF dosyasının görüntülenmesi


- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Flash içerikleri'** ne dokunun.
- 3 Dosyayı seçin ve **Göster'**e dokunun.

SWF dosyası görüntülenirken seçeneklerin kullanılması

Tam ekran görün. - SWF'nizi tam ekran modunda görüntüleyin (bu yalnızca duraklamadan  düğmesine dokunmanız halinde görüntülenir).

Sessiz - Sesi kapatın.

Duraklat modundayken  öğesine dokunun ve aşağıdaki seçeneklerden birini seçin:

 - Oynatmayı duraklatın ya da yeniden başlatın.

Duvar kağıdı olarak kullan - Duvar kağıdını ayarlayabilirsiniz.

Dosya bilgisi - Dosyanın Adını, Boyutunu, Tarihini, Saatini, Türünü ve Korumasını görüntüleyin.

Belgeler

Belgeler menüsünden, tüm belge dosyalarınızı görüntüleyebilirsiniz. Buradan Excel, Powerpoint, Word, Metin, pdf dosyalarınız ve **Galeri'yi** görüntüleyebilirsiniz.



Dosyanın telefona aktarılması

Bluetooth muhtemelen bilgisayarınızdan telefonunuza bir dosya aktarmanın en kolay yoludur. Ayrıca bağlantı kablolu ile LG PC Suite'i kullanabilirsiniz, detaylı bilgi için bkz. sayfa 65.

Bluetooth kullanarak aktarma yapmak için:

- 1 Telefonunuzda ve bilgisayarınızda Bluetooth'un açık olduğundan ve birbirlerine görünür olduklarından emin olun.
- 2 Bilgisayarınızı dosyayı Bluetooth aracılığıyla göndermek için kullanın.
- 3 Dosya gönderildiğinde **Evet'**e dokunarak telefonunuza kabul etmeniz gerekmektedir.
- 4 Dosya **Belgeler** veya **Diğerleri** klasörünüzde görüntülenmelidir.

Dosyanın görüntülenmesi

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Belgeler'**e dokunun.
- 3 Bir belge seçin ve **Aç** öğesine basın.

01

02

03

04

05

06

07




08

Multimedya




Diğer dosyalar




Diğer dosyalar klasörü resim, ses, video, oyun ya da uygulama olmayan dosyaları saklamak için kullanılır. **Belgeler** klasörüyle aynı şekilde kullanılır. Bilgisayarınızdan telefonunuza dosya aktardığınızda, **Belgeler** klasörü yerine **Diğer dosyalar** klasöründe görüntülediklerini görebilirsiniz. Bu durumda bunları taşıyabilirsiniz.

Bir dosyayı Diğerleri'nden Belgeler'e taşımak için:


- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Galeri'ye**, sonra **Diğer dosyalar'a** dokunun.
- 3 Bir dosya seçin ve  tuşuna dokunun
- 4 Bir kez **Taşı**'ya dokunun, sonra **Taşı**'ya bir kez daha dokunun.

Şarkı çalınması

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 **Müzik** öğesine ve ardından **Tüm parçalar** öğesine dokunun.
- 3 Oynatmak istediğiniz şarkıyı seçin ve **Çal** öğesine basın.
- 4 Şarkıyı duraklatmak için  öğesine dokunun.

- 5 Bir sonraki şarkıya atlamak için  öğesine dokunun.
- 6 Bir önceki şarkıya atlamak için  öğesine dokunun.
- 7 Müziği durdurup **Müzik** menüsüne dönmek için  öğesine dokunun.

İpucu! Müzik dinlerken ses seviyesini değiştirmek için,  tuşuna dokunun.

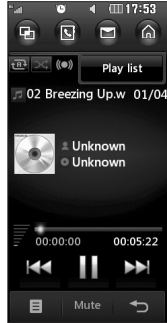


Parça listesinin oluşturulması

Tüm parçalar klasöründen şarkı seçimi yaparak kendi çalma listenizi oluşturabilirsiniz.



- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Müzik**'e, sonra **Parça listeleri**'ne dokunun.
- 3 **Ekle** öğesine dokunun, çalma listesi adını girin ve **Kaydet** öğesine dokunun.
- 4 Tüm parçalar klasörü gösterilecektir. Çalma listenize almak istediğiniz tüm şarkılara dokunun; adlarının yanında birer onay işareti belirir.
- 5 **İşlem Tamam** öğesine dokunun.

Bir çalma listesi oynatmak için seçin ve ardından **Oynat** öğesine basın.


Not: İkinci bir çalma listesi eklemek için,  öğesine ve ardından **Yeni parça listesi ekle** öğesine dokunun.

Parça listesinin düzenlenmesi

Zaman zaman bir parça listesine yeni şarkılar eklemek veya listeden şarkı silmek isteyebilirsiniz. Bu durumda, parça listesini düzenleyebilirsiniz.

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Müzik**'e, sonra **Parça listeleri**'ne dokunun.

3 Parça listesini seçin.

4  tuşuna dokunun ve aşağıdakilerden birini seçin:

Yeni şarkı ekle – Parça listesine başka şarkılar eklemek için. İstediklerinizi işaretleyin ve **Tamam**'a dokunun.

Yukarı/aşağı taşı – Parça sıralamasını değiştirmek için şarkıyı listede yukarı veya aşağı taşıyın.




Gönder – Şarkıyı bir mesaj içinde veya Bluetooth ile gönderin.

Listeden çıkart – Bir şarkıyı çalma listesinden çıkartın. Onaylamak için **Evet**'e dokunun.

İşaretle/İşareti kaldır – Çoklu dosyaları seçin.

Kullanım şekli – Şarkıyı efekt sesi olarak ayarlayabilirsiniz.

Parça listesinin silinmesi




- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **Müzik**'e, sonra **Parça listeleri**'ne dokunun.
- 3 Parça listelerinin tümünü silmek için önce  tuşuna, sonra **Sil** ya da **Tümünü sil**'e dokunun.

Multimedya



İstasyonların aranması



Telefonunuzda radyo istasyonlarını manuel ya da otomatik olarak arayarak ayarlayabilirsiniz. Bu istasyonlar belirli kanal numaralarına atanacaktır, böylece yeniden ayar yapmak durumunda kalmayacaksınız. Telefonunuzu en fazla 12 kanal kaydedebilirsiniz.

Otomatik arama için:

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **FM radyo**'ya, sonra  tuşuna dokunun.
- 3 **Otomatik Tarama** öğesine ve ardından **Evet** öğesine dokunun. Bulunan istasyonlar otomatik olarak telefonunuzda bir kanal numarasına atanır.




Manuel arama için:

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **FM radyo**'ya, sonra  tuşuna dokunun.
- 3 **Manuel ayarlama**'ya dokunun ve istasyon frekansını girin.
- 4 Önce **Tamam**'a, sonra **Kaydet**'e dokunun.
- 5 İstasyonu kaydetmek istediğiniz kanal numarasını seçin ve **Tamam**'a dokunun.





Not: Bir radyo istasyonunu radyo frekansının yanında görüntülenen  ve  tuşları ile manuel olarak da ayarlayabilirsiniz.

Kanalların düzenlenmesi



Sık dinlediğiniz istasyonlara daha çabuk ulaşabilmeniz için istasyonları başka kanallara taşıyabilirsiniz.

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **FM radyo**'ya, sonra  tuşuna dokunun.
- 3 **Kanal düzenle**'ye dokunun ve değiştirmek istediğiniz kanalı seçin.
- 4 Diğer kanallardaki istasyonlardan birini seçin, ya da kanalı manuel olarak istediğiniz frekansa ayarlayın.
- 5 **Kaydet**'e dokunun.

Kanalların sıfırlanması

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **FM radyo**'ya, sonra  tuşuna dokunun.
- 3 Önce **Kanal düzenle**'ye, sonra  tuşuna dokunun.
- 4 Mevcut kanalı değiştirmek için **Sıfırla**'yı, tüm kanalları sıfırlamak için ise **Tümünü sıfırla**'yı seçin. Tüm kanallar başlangıç noktası olan 87,5Mhz frekansına döner.

Radyo dinlenmesi

- 1 Önce  tuşuna, sonra  tuşuna dokunun.
- 2 Önce **FM radyo**'ya, sonra dinlemek istediğiniz istasyonun kanal numarasına dokunun.

İpucu! Radyo alımını iyileştirmek için, radyo anteni işlevi de gören kulaklığı açın.

01

02

03

04

05

06



07

08

Web

Parmaklarınızın ucundaki tarayıcı ile istediğinizi zaman güncel haberlere ve hava durumuna ulaşabilir, ayrıca spor ve trafik haberlerini alabilirsiniz. Bunlardan başka, tarayıcı sayesinde en yeni müzikleri, zil seslerini, duvar kağıtlarını ve oyunları indirebilirsiniz.



Web erişimi


- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Tarayıcı**'yi seçin.
- 2 Tarayıcı ana sayfasına doğrudan ulaşmak için, **Ana sayfa**'yı seçin. Bunun yerine **Adres girin**'i seçip istediğiniz URL'yi yazabilir ve **Bağlan**'ı seçebilirsiniz.

Not: Bu hizmete bağlanıp içerik indirildiğinde ek bir ücret alınır. Veri ücretlerinizi şebeke operatörünüzden kontrol edin.


Sık kullanılan ekleme ve sık kullanılanlara erişim

Favori web sitelerinize kolay ve hızlı erişebilmeniz için, sık kullanılan ekleyebilir ve web sayfalarını kaydedebilirsiniz.

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Tarayıcı**'yi seçin.




- 2 **Sık kullanılanlar**'ı seçin. Ekranda sık kullanılanlarınızın listesi belirir.
- 3 Yeni bir sık kullanılan eklemek için,  simgesini seçin ve **Yeni ekle**'ye dokunun. Sık kullanılanınız için bir ad girin ve ardından URL'yi yazın.
- 4 **Kaydet**'e dokunun.
- 5 Yer imine ulaşmak için istediğiniz sık kullanılanlara ilerleyin ve **Aç**'a dokunun. Sık kullanılanlara bağlanacaksınız.

Sayfanın kaydedilmesi


- 1 Arzu ettiğiniz web sitesine bağlanma işlemi yukarıda açıklanmıştır.
- 2  tuşuna dokunun ve **Kaydedilen sayfalar**'ı seçin.
- 3 Sayfayı kolaylıkla tanıyabilmeniz için bir ad girin.
- 4 **Kaydet**'e dokunun.

İpucu! Bu menü aynı zamanda kayıtlı sayfaların başlıklarını değiştirmenizi ve kayıtlı sayfaları silmenizi sağlar.


Kayıtlı bir sayfaya erişilmesi

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Tarayıcı**'yi seçin.
- 2 **Kaydedilen sayfalar**'ı seçin.
- 3 İsteddiğiniz sayfayı seçin ve önce  tuşuna, ardından **Aç**'a dokunun.

Tarayıcı geçmişinin görüntülenmesi

- 1 Bekleme ekranından **••** simgesini seçin, sonra  tuşuna dokunun ve Tarayıcı Aktif'i seçin. **Geçmiş'i** seçin.
- 2 Yakın zamanda girdiğiniz web sayfaları başlıklarının listesi görüntülenir. Bu sayfalardan birine erişmek için, istediğiniz sayfayı seçin ve **Bağlan'a** dokunun.

Web tarayıcı ayarlarının değiştirilmesi

- 1 Bekleme ekranından **••** simgesini seçin, sonra  tuşuna dokunun ve **Tarayıcı'yı** seçin.
Ayarlar'ı seçin.
- 2 **Profiller'i, Karakter kod çözme'yi, Ön bellek'i, Çerezler'i, Java script'i, güvenlik'i** düzenleyebilir, ya da tüm ayarları sıfırlamak için **Ayarları Sıfırla'yı** seçebilirsiniz.
- 3 Ayarlarınızı değiştirdikten sonra **Tamam'ı** seçin.

Telefonun modem olarak kullanılması

KF700'ünüz bilgisayarınız için bir modem olarak kullanılabilir ve kablolu hatlardan bağlanmadığınızda e-posta ve internete erişebilmenizi sağlar. USB kablosunu veya Bluetooth'u kullanabilirsiniz.

USB kablosunu kullanarak:

- 1 Bilgisayarınızda LG PC Suite programının yüklü olduğundan emin olun.
- 2 KF700'ünüzü ve bilgisayarınızı USB kablosu ile bağlayın ve LG PC Suite yazılımını çalıştırın.
- 3 Bilgisayarınızda **İletişim'e** tıklayın. Sonra **Ayarlar'a** tıklayarak **Modem'i** seçin.
- 4 **LG Mobile USB Modem'i** seçin ve **Tamam'a** tıklayın. Şimdi ekranda görüntülenir.
- 5 **Bağlan'a** tıkladığınızda bilgisayarınız KF700'ünüz üzerinden bağlanır.

Not: LG PC Suite kullanılarak senkronize etmeyle ilgili daha fazla bilgi için 72. sayfaya bakın.

Bluetooth kullanarak:

- 1 Bluetooth'un **Açık** olduğundan ve hem bilgisayarınız, hem de KF700 tarafından **Görünür** olduğundan emin olun.
- 2 Bilgisayarınızı ve KF700'ü bağlantı için parola gerekecek şekilde eşleştirin.
- 3 Aktif bir Bluetooth bağlantısı oluşturmak için LG PC Suite programınızda bulunan **Bağlantı sihirbazı'nı** kullanın.
- 4 Bilgisayarınızda **İletişim'e** tıklayın. Sonra **Ayarlar'a** tıklayın.
- 5 **Modem'e** tıklayın.

01

02

03

04

05

06

07

08

Web

6 Standard Modem Bluetooth link'i

seçin ve **Tamam**'ı tıklayın. Şimdi ekranda görüntülenir.

7 **Bağlan**'a tıkladığınızda bilgisayarınız KF700'ünüz üzerinden bağlanır.

Not: Bluetooth ile ilgili daha fazla bilgi için 82. sayfaya bakın.

Ajanda

Takvime etkinlik eklenmesi

- 1 Bekleme ekranından **⌚** simgesini seçin, sonra **📅** tuşuna dokunun ve **Ajanda**'yı seçin. Takvim'i seçin.
- 2 Bir etkinlik eklemek istediğiniz tarihi seçin.
- 3 Önce **☰** simgesine, sonra **Yeni etkinlik ekle**'ye dokunun.
- 4 Eklemek istediğiniz etkinliği **Randevu**, **Yıldönümü** veya **Doğum günü** olarak seçin ve **Tamam**'a dokunun.
- 5 Tarihi kontrol edin ve etkinliğinizin başlamasını istediğiniz saati girin.
- 6 Randevular ve yıldönümleri için, alttaki iki saat ve tarih kutusuna etkinliğinizin sona erdiği saati ve tarihi girin.
- 7 Etkinliğinize konu veya not eklemek isterseniz, **Konu** veya **İsim**'e dokunarak notunuzu yazın ve **Tamam**'a dokunun.
- 8 **Kaydet**'i seçin, etkinliğiniz takvime kaydedilir. Herhangi bir etkinliğin kaydedildiği günler bir kare imleç ile işaretlenir ve etkinliğinizin başlangıç zamanında zil çalarak programınızı sürdürürebilmeniz için sizi uyarr.

İpucu! Takviminizde bir tatil dönemi belirleyebilirsiniz. Tatilde olacağınız günlere birer birer dokunun, sonra **☰** tuşuna dokunarak **Tatil**'i seçin. Seçilen günler kırmızıyla işaretlenir. Alarm ayarlarken, tatil olarak belirlenen günleri hariç tutabilirsiniz.

Varsayılan takvim görünümünün değiştirilmesi

- 1 Bekleme ekranından **⌚** simgesini seçin, sonra **📅** tuşuna dokunun ve **Ajanda**'yı seçin. **Ayarlar**'ı seçin.
- 2 **Takvim ayarları**'na dokunun ve **Varsayılan görünüm**'ü veya **Haftanın başlangıç günü**'nü seçin.
- 3 Seçiminizi onaylamak için **Tamam**'a basın.

Yapılacaklar listesine konu eklenmesi

- 1 Bekleme ekranından **⌚** simgesini seçin, sonra **📅** tuşuna dokunun ve **Ajanda**'yı seçin.
- 2 **Yapılacaklar**'ı seçin ve **Ekle**'ye dokunun.
- 3 Yapılacaklar konusu için tarih belirleyin, not ekleyin ve öncelik seviyesi seçin: **Yüksek**, **Orta** ya da **Düşük**.
- 4 **Kaydet**'i seçerek yapılacaklar listenizi kaydedin.

İpucu! Bir öğeyi düzenlemek için öğeyi seçip **☰** tuşuna dokunun. Şimdi **Düzenle**'yi seçin. **Kaydet**'i seçerek düzeltmelerinizi onaylayın.

01

02

03

04

05




06

07

08

Ajanda



Yapılacaklar konusunun paylaşılması

- 1 Bekleme ekranından  tuşuna, sonra  tuşuna dokunun ve **Ajanda**'yı seçin. **Yapılacaklar**'ı seçin.
- 2 Paylaşmak istediğiniz yapılacaklar konusunu seçin, sonra  tuşuna dokunun.
- 3 **Gönder**'i seçin. Yapılacaklar konunuzu **Metin mesajı**, **Multimedya msj.**, **E-posta** ya da **Bluetooth** ile paylaşabilirsiniz.

İpucu! Takviminizi bilgisayarınızla yedekleyebilir ve senkronize edebilirsiniz. 65. sayfada **PC Senk.** konusuna bakın.

Tarih bulucunun kullanılması

Tarih bulucu, belirli sayıda gün geçtiğinde tarihin ne olacağını hesaplamanıza yardımcı olan kullanışlı bir araçtır. Örneğin, 10.10.07 tarihinden 60 gün sonrası 09.12.2007 olur. Bu, süre bitimlerini takip etmek için mükemmel bir araçtır.

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Ajanda**'yı seçin.
- 2 **Tarihe git**'i seçin.
- 3 **Başlangıç** sekmesinde istediğiniz tarihi belirleyin.

- 4 **Sonra** sekmesinde gün sayısını belirleyin.
- 5 **Hedef tarihi** altta görüntülenir.

Alarmin ayarlanması

- 1 Bekleme ekranından  tuşuna, sonra  tuşuna dokunun ve **Alarmlar**'ı seçin.
- 2  tuşunu seçin ve **Yeni ekle**'ye dokunun.
- 3 Alarmin çalmasını istediğiniz saati ayarlayın ve **Ayarla**'ya dokunun.
- 4 Alarmin çalmasını istediğiniz zamanları **Bir kere**, **Günlük**, **Pzt - Cum**, **Pzt - Cmt**, **Cmt - Çrş**, **Cmt-Prş** veya **Pzr-Prş** olarak seçin. **Tamam**'a basın.
- 5 Alarmin ses belirlemek için  tuşunu seçin. Sesleri dinlemek için önce **Ses**'e, sonra **Oynat**'a dokunun. Seçiminizi yaptıktan sonra, **Seç**'e dokunun.
- 6 Alarma not ekleyin. Notu yazmayı bitirdikten sonra **Tamam**'a dokunun. Alarm çaldığında not görüntülenecektir.
- 7 Son olarak, erteleme aralığınızı **5**, **10**, **20**, **30** dakika, **1** saat veya **kapalı** olarak ayarlayabilirsiniz. Seçiminizi onaylamak için **Tamam**'a basın.
- 8 Alarmları ayarladığınızda, **Kaydet**'e dokunun.

Not: En fazla 5 alarm ayarlayabilirsiniz.

Not eklenmesi

- 1 Bekleme ekranından **⋮** simgesini seçin, sonra **📎** tuşuna dokunun ve **Not defteri**'ni seçin.
- 2 Mevcut not defteri yoksa **Ekle**'yi seçin, not eklediyseniz önce **☰** tuşunu, ardından **Yeni ekle**'yi seçin.
- 3 Notunuzu yazın, ardından **Kaydet**'i seçin.
- 4 Notunuz, **Not defteri** uygulamasını bir sonraki açışınızda ekranda görüntülenir.

İpucu! Mevcut bir notu düzenleyebilirsiniz. Düzenlemek istediğiniz notu seçin ve **Düzenle**'ye dokunun.

Ses kaydedicisi

Sesli notları veya diğer sesleri kaydetmek için **ses kaydedicisi**'ni kullanın.

- 1 Önce **⋮** tuşuna, sonra **📎** tuşuna dokunun.
- 2 Önce **Ses kaydedicisi**'ne, sonra **☰** tuşuna dokunun ve aşağıdakiler arasında seçim yapın:

Süre – Kayıt süresini ayarlayın. **MMS mesajı boyutu**, **1 dakika** ve **Limitsiz** arasında seçim yapın.


Kalite – Ses kalitesini seçin.

Çok İyi, İyi ve Normal arasında seçim yapın.

Seslerime git – Seslerim'de bulunan Ses kayıtları klasörünü açın.

Sesin kaydedilmesi

- 1 Önce **⋮** tuşuna, sonra **📎** tuşuna dokunun.
- 2 **Ses kaydedicisi**'ne dokunun.
- 3 Kayda başlamak için **●** tuşuna dokunun.
- 4 Kaydı bitirmek için **■** tuşuna dokunun.
- 5 Kaydınızı dinlemek için **▶** tuşuna dokunun.

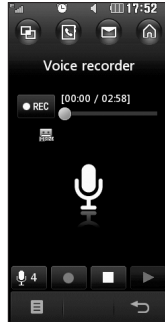

01

02

03

04

05


06


07

08




Ajanda

Ses kaydının gönderilmesi




- 1 Kaydı tamamladığınızda,  tuşuna dokunun.
- 2 **Gönder**'e dokunun ve **Mesaj, E-posta** veya **Bluetooth** arasından seçim yapın. **Mesajlar** veya **E-posta**'yı seçerseniz, kaydınız mesaja eklenir ve mesajı normal olarak yazıp gönderebilirsiniz. Bluetooth'u seçerseniz, Bluetooth'u açmanız istenir.


Not: Kaydı tamamladığınızda,  tuşuna dokunun ve **Gönder, Yeniden adlandır, Sil, Kullanım şekli** (kayıtlı zil tonunuz olarak kullanmak için) veya **Seslerime git**'i seçin.

Hesap makinesi kullanılması


- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Araçlar**'ı seçin.
- 2 **Hesap makinesi**'ni seçin.
- 3 Rakamları girmek için sayı tuşlarına dokunun.
- 4 Basit hesaplamalar için, önce istediğiniz fonksiyona (+, -, *, /), ardından = tuşuna dokunun.
- 5 Daha karmaşık hesaplamalar için,  tuşuna dokunun ve **sin, cos, tan, log, ln, exp, sqrt, deg** ya da **rad** arasından seçim yapın.

Dünya saatine şehir eklenmesi

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Araçlar**'ı seçin.
- 2 **Dünya Saati**'ni seçin.
- 3 Önce  simgesine, ardından **Şehir ekle**'ye dokunun. İsteddiğiniz şehrin adını yazmaya başlayın, ekranın üst kısmında görünecektir. Bunun yerine **Harita**'ya dokunup şehrinizi haritadan seçebilirsiniz.
- 4 Seçiminizi onaylamak için **Seç**'e dokunun.

İpucu! Yurt dışındaysanız saat diliminizi Dünya Saati'nden, önce  tuşuna, ardından **Saat dilimini değiştir**'e dokunarak değiştirebilirsiniz. İsteddiğiniz saat dilimini yukarıdaki gibi seçin ve **Seç**'e dokunun.

Birim dönüştürülmesi

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Araçlar**'ı seçin.
- 2 **Birim Dönüştürücü**'yü seçin.
- 3 Dönüştürmek istediğiniz birimi **Para birimi, Yüzey, Uzunluk, Ağırlık, Sıcaklık, Hacim** veya **Hız** olarak seçin.
- 4 Şimdi birim seçebilir ve önce dönüştürmek istediğiniz değeri, ardından dönüştürüleceği birimi girebilirsiniz.
- 5 Karşılık gelen değer ekranda görüntülenir.

PC Senk.

Tüm önemli bilgilerinizin ve tarihlerin eşleştüğünden emin olmak için, ayrıca zihninizi rahatlatmak için yedekleme olarak, telefonunuzu bilgisayarınızla senkronize edebilirsiniz.

LG PC Suite programının bilgisayara kurulması

- 1 Bekleme ekranından  simgesini seçin, sonra  tuşuna dokunun ve **Telefon ayarları**'ni seçin .
- 2 Önce **Bağlantı**'yi, sonra **USB bağlantı modu**'nu seçin.
- 3 **Veri Hizmeti**'ni seçin ve **Seç**'e dokunun.
- 4 Verilen CD'yi bilgisayarınıza takın. Ekranınızda **LG PC Suite Installer** görünür. **LG PC Suite Installer** üzerine tıklayın.
- 5 Yükleyicinin çalışmasını istediğiniz dili seçin ve **Tamam**'a tıklayın.
- 6 Ekranda verilen talimatları izleyerek **LG PC Suite Kurulum** sihirbazını tamamlayın.
- 7 Kurulum tamamlandığında, masaüstünüzde LG PC **Suite Simgesi** belirir.

Telefonun bilgisayara bağlanması

- 1 USB kablosunu telefonunuza ve bilgisayarınıza bağlayın.
- 2 Masaüstünüzdeki **LG PC Suite Simgesi**'ne çift tıklayın.
- 3 Önce **Bağlantı Sihirbazı**'na, sonra **USB**'ye tıklayın.
- 4 Önce **Sonraki**'ye, sonra bir kez daha **Sonraki**'ye, son olarak da **Son**'a tıklayın. Şimdi telefonunuz ve bilgisayarınız bağlanmıştır.

Telefon bilgilerinizin yedeklenmesi ve geri yüklenmesi

- 1 Telefonunuzu yukarıda açıklanan şekilde bilgisayarınıza bağlayın.
- 2 **Yedek** simgesine tıklayın ve **Yedekle**'yi veya **Eski haline getir**'i seçin.
- 3 Yedeklemek veya geri yüklemek istediğiniz içerikleri işaretleyin. Bilgileri yedeklemek veya kendisinden geri yüklemek istediğiniz konumu seçin. **Tamam**'i tıklayın.
- 4 Bilgileriniz yedeklenir.

01

02

03

04

05

06

07

08

PC Senk.

Bilgisayarda telefon dosyalarının görüntülenmesi

- 1 Telefonunuzu yukarıda açıklanan şekilde bilgisayarınıza bağlayın.
- 2 **İçerik** simgesine tıklayın.
- 3 Telefonunuza kaydettiğiniz tüm belgeler, Flash içerikleri, görüntüler, sesler ve videolar, ekranda LGPhone klasöründe görüntülenir.

İpucu! Telefonunuzun içeriğini bilgisayarda görüntülemeniz, dosyalarınızı sıraya koymanıza, belgelerinizi düzenlemenize ve ihtiyacınız kalmayan içeriği kaldırmanıza yardımcı olur.

Rehberin senkronize edilmesi

- 1 Telefonunuzu bilgisayarınıza bağlayın.
- 2 **Rehber** simgesine tıklayın.
- 3 Önce **Aktar**'ı, sonra **Cep telefonundan al**'ı seçin. Bilgisayarınız şimdi USIM kartınıza ve telefonunuza kayıtlı tüm kişileri alacak ve görüntüleyecektir.
- 4 **Dosya**'ya tıklayın ve **Kaydet**'i seçin. Şimdi rehberinizi kaydetmek istediğiniz yeri seçebilirsiniz.

Not: SIM kartınıza kayıtlı kişileri yedeklemek için, bilgisayar ekranınızın sol tarafında bulunan SIM kartı klasörüne tıklayın. Önce ekranın üst tarafında **Düzenle**'yi, sonra **Tümünü seç**'i tıklayın. Kişilerinizi sağ tıklayın ve **Rehbere kopyala**'yı seçin. Şimdi ekranınızın solundaki **Telefon** klasörüne tıklayın, tüm numaralarınız görüntülenir.

Mesajların senkronize edilmesi

- 1 Telefonunuzu bilgisayarınıza bağlayın.
- 2 **Mesajlar** simgesine tıklayın.
- 3 Bilgisayarınızda ve telefonunuzdaki tüm mesajlar ekranınızdaki klasörlerde görüntülenecektir.
- 4 Mesajları düzenlemek ve sıraya koymak için ekranın üst kısmındaki araç çubuğunu kullanın.

Telefonunuzun yığın depolama aygıtı olarak kullanılması

Telefonunuz sadece bellek kartı takılı olduğu zaman yığın depolama aygıtı olarak kullanılabilir.

- 1 Telefonunuzu bilgisayarınızdan ayırın.
- 2 Bekleme ekranından **••** simgesini seçin, sonra **🔌** tuşuna dokunun ve **Telefon ayarları**'nı seçin .
- 3 Önce **Bağlantı**'yı, sonra **USB bağlantı modu**'nu seçin.

- 4 **Yığın depolama**'yı seçin ve **seç**'e dokunun.
- 5 Telefonunuzu bilgisayarınıza bağlayın. Telefonunuzun ekranında önce: **Yığın Depolama Modunda bağlantıyor...** ardından **Yığın Depolama Modunda bağlandı.** Aktarım sırasında bağlantıyı kesmeyin görüntülenir.
- 6 Telefonunuzdaki tüm dosyalar otomatik olarak bilgisayarınızın sabit sürücüsüne kopyalanır.

Not: Yığın depolama işlevinin başlatılabilmesi için telefonunuzun bilgisayarınızla olan bağlantısı kesilmelidir.

Not: Yığın Depolama sadece bellek kartınıza kayıtlı içeriği yedekler, telefon belleğine kaydedilenleri yedeklemez. Telefon belleğinin içeriğini (örneğin rehberi) aktarmak için PC Senk kullanarak senkronize etmeniz gerekir.

01

02

03

04

05

06

07



08

Ayarlar

Bu klasörün içinde, KF700'ünüzü kişiselleştirmek için ayarlarınızı adapte edebilirsiniz.

Not: Çağrı ayarları ile ilgili bilgi için 22. sayfaya bakın.

Ekran ayarlarının değiştirilmesi

- 1 Önce  tuşuna dokunun, sonra  simgesini seçin.
- 2 Önce **Ekran'**a dokunun, sonra aşağıdakiler arasından seçim yapın:

Ekran teması - Ana ekranınız, giden arama, Başlat ve Kapat için tema seçin.

Saat ve takvim - Ekrandaki farklı yöntemler arasından seçim yapabilirsiniz.

Arka plan ışığı - Arka plan ışığının ne kadar süreyle yanacağını seçin.

Parlaklık - Ekranın parlaklığını ayarlayın.

Not: Arka plan ışığı ne kadar uzun süre yanarsa, o kadar çok pil tüketimi olur ve telefonunuzu daha sık şarj etmek zorunda kalırsınız.

Telefon teması - Ekranınızın tüm görünümünü çabucak değiştirin.




Font - Font rengini ayarlayın.

- 3 Ayarlarınızı kaydetmek için **Kaydet'**e dokunun.

Profillerin özelleştirilmesi

Profilinizi bekleme ekranında hızla değiştirebilirsiniz. Sağ üst köşedeki şu anda aktif olan profil simgesine dokununuz.



Ayarlar menüsüyle tüm profil ayarlarını kişiselleştirebilirsiniz.

- 1 Önce  tuşuna dokununuz, sonra  simgesini seçin.
- 2 **Profiller'**e dokununuz ve düzenlemek istediğiniz profili seçin.
- 3  tuşuna dokununuz ve **Düzenle'**yi seçin.
- 4 Listede mevcut olan tüm sesleri ve alarm seçeneklerini değiştirebilirsiniz, bunlara **Zil sesi** ve **Ses seviyesi**, **Mesaj uyarıları**, **Ekran sesi** ayarları ve diğerleri de dahildir.

Telefon ayarlarının değiştirilmesi

KF700'ünüzü size en uygun çalışacak şekilde adapte etmenin keyfini çıkarın.

İpucu! Seçenekler listesinde ilerlemek için görünür olan son satıra dokununuz ve parmağınızı ekranda yukarı kaydırın. Liste yukarı kayarak diğer satırlar görünür hale gelir.

- 1 Önce  tuşuna dokununuz, sonra  simgesini seçin.
- 2 Önce **Telefon ayarları'**nı seçin, sonra aşağıdaki listeden seçim yapın.

Tarih ve saat - Tarih ve saat ayarlarınızı yapın, ya da seyahat ettiğinizde veya yaz saati uygulamasında saati otomatik güncellemeyi seçin.

Güç tasarrufu - Fabrika varsayılan güç tasarrufu ayarlarını **Açmak** veya **Kapamak** için bunu seçin.

Dil - KF700'ünüzün ekran dilini değiştirin.

Otomatik tuş kilidi - Bu işlevi etkinleştirirseniz tuş takımı, bekleme modunda tuşlar ile bir işlem yapılması gerekmeden otomatik olarak kilitlenecektir.

Güvenlik - PIN kodları, telefon kilidi, otomatik tuş kilidi ve hırsızlık önleme izleyicisi dahil olmak üzere, güvenlik ayarlarınızı yapın.

Bağlantı - Ayrıntılı bilgi için sonraki sayfada bulunan **Bağlantı ayarlarının değiştirilmesi** konusuna bakın.

Dokunmatik ekran etkisi - Dokunmatik ekranın ayarlarını değiştirin.

Hafıza yöneticisi - Ayrıntılı bilgi için 82. sayfada **Hafıza yöneticisinin kullanılması** konusuna bakın.



Dokunmatik kalibrasyonu - Kullanım kolaylığı için ekranınızı sıfırlayın.

Ayarları sıfırla - Tüm ayarları fabrika tanımlarına sıfırlayın.

Telefon bilgisi - KF700'ünüzün teknik bilgilerinizi görüntüleyin.

Bağlantı ayarlarının değiştirilmesi

Bağlantı ayarlarınız şebeke operatörünüz tarafından yapılmıştır, böylece telefonunuzun keyfini ilk andan itibaren sürebilirsiniz. Herhangi bir ayarı değiştirmek isterseniz bu menüyü kullanın.

Önce  tuşuna, sonra  tuşuna dokununuz. **Telefon ayarları**'na dokununuz ve **Bağlantı**'yı seçin.

Şebeke ayarları - KF700'ünüz tercih ettiğiniz şebekeye otomatik bağlanır. Bu ayarları değiştirmek için bu menüyü kullanın.

İnternet profilleri - İnternet profillerini ayarlayabilir ve görüntüleyebilirsiniz.

Erişim noktaları - Şebeke operatörünüz bu bilgiyi zaten kaydetmiştir. Bu menüyü kullanarak yeni erişim noktaları ekleyebilirsiniz.

USB bağlantı modu - **Veri hizmeti**'ni seçin ve KF700'ünüzü LG PC Suite yazılımıyla telefonunuzdan dosyaları kopyalayarak senkronize edin. Senkronizasyon ile ilgili daha fazla bilgi için 72. sayfaya bakın.

Senkronizasyon servisi - Senkronizasyon ile ilgili daha fazla bilgi için 72. sayfaya bakın.

Duraksız iletim ayarları - Şebeke operatörünüz bu bilgiyi zaten kaydetmiştir. Değişiklik yapmak isterseniz düzenleyebilirsiniz.

01

02

03

04

05

06

07

08

Ayarlar

Hafıza yöneticisinin kullanılması

KF700'ünüzün üç farklı belleği mevcuttur: telefon, USIM Kartı ve harici bellek kartı (bellek kartını ayrıca satın almanız gerekebilir).

Bellek yöneticisini kullanarak her belleğin nasıl kullanılacağını belirleyebilir ve bellekte ne kadar yer olduğuna görebilirsiniz.

Önce **••**, ardından **🔗** tuşlarına dokunun. Önce **Telefon ayarları**'ni, sonra **Hafıza yöneticisi**'ni seçin.

Telefon ortak hafızası - KF700'ünüzde Resimler, Sesler, Video, Flash, MMS, E-posta, Java uygulamaları ve diğerleri için kullanılabilir bellek kapasitesini görüntüleyin.

Telefona ayrılan hafıza - Telefonunuzda Metin mesajı, Rehber, Takvim, Yapılacaklar listesi, Not defteri, Alarm, Çağrı geçmişi, Sık kullanılanlar ve Çeşitli öğeler için kullanılabilir bellek kapasitesini görüntüleyin.

SIM belleği - SIM kartınızda kullanılabilir bellek kapasitesini görüntüleyin.

Harici bellek - Harici bellek kartınızda kullanılabilir bellek kapasitesini görüntüleyin (bellek kartını ayrıca satın almanız gerekebilir).

Birincil depolama ayarı - Öğelerinizi kaydedilmesini tercih ettiğiniz konumu seçin.

İpucu! Bellek kartı takılması ile ilgili ayrıntılı bilgi için 12. sayfaya bakın.

Bluetooth kullanarak dosyaların gönderilmesi ve alınması

Bluetooth, kablo gerektirmediği ve bağlantı hızlı ve kolay olduğu için, mükemmel bir dosya gönderme ve alma yöntemidir. Ayrıca telefon görüşmesi yapmak için Bluetooth kulaklık da bağlayabilirsiniz.

Dosya göndermek için:

- 1 Göndermek istediğiniz dosyayı açın, bu genellikle bir fotoğraf, video veya müzik dosyası olacaktır.
- 2 **📁** tuşuna dokunun ve **Gönder**'i seçin. **Bluetooth**'u seçin.
- 3 Bluetooth'u açmak için **Evet**'e dokunun.
- 4 KF700'ünüz menzil içindeki diğer Bluetooth etkin cihazları otomatik olarak arayacaktır.
- 5 Dosyayı göndermek istediğiniz cihazı seçin ve **Seç**'e dokunun.
- 6 Dosyanız gönderilecektir.

İpucu! Dosyanızın gönderildiğinden emin olmak için gözünüzü ilerleme çubuğunda olsun.

Dosya almak için:

- 1 Dosya almak için Bluetooth'unuz **Açık** ve **Görünür** olmalıdır. Ayrıntılı bilgi için aşağıda **Bluetooth ayarlarının değiştirilmesi** konusuna bakın.

- 2 Bir mesaj, gönderenden dosyayı kabul edip etmediğinizi soracaktır. Dosyayı almak için **Evet**'e basın.
- 3 Dosyanın nereye kaydedildiğini göreceksiniz ve dosyayı **Görüntülemeyi** veya **Duvar kağıdı olarak kullanmayı** seçebilirsiniz. Dosyalar genellikle Galeri içinde ilgili klasöre kaydedilir.

Bluetooth ayarlarının değiştirilmesi:

- 1  tuşuna dokunun.
- 2 Önce **Bluetooth**'u, sonra **Ayarlar**'ı seçin. Aşağıda belirtilen değişiklikleri yapın: **Cihazımın görünürlüğü - Görünür** veya **Gizli** olarak seçin. **Cihazımın adı** - KF700'ünüz için bir isim girin. **Dest. Serv.** - Bluetooth'un farklı servislerle ilişkili olarak nasıl kullanılacağını seçin. 78. sayfada **Telefonun modem olarak kullanılması** veya 84. sayfada **Bluetooth kulaklık kullanılması** konusuna bakın. **Adresim** - Bluetooth adresinizi kontrol edin.

Başka bir Bluetooth cihazıyla eşleştirme

KF700'ünüzü başka bir cihazla eşleştirerek, parola korumalı bir bağlantı kurabilirsiniz. Bu, eşleştirmenin daha güvenli olduğu anlamına gelir.

- 1 Bluetooth'unuzun **Açık ve Görünür** olduğunu kontrol edin. Görünürlük durumunuzu **Ayarlar** menüsünden değiştirebilirsiniz.
- 2 Önce **Eşleşmiş cihazlar**'a, sonra **Yeni**'ye dokunun.
- 3 KF700'ünüz cihaz arayacaktır. Arama tamamlandığında ekranda **Yenile** ve **Ekle** belirir.
- 4 Eşleştirmek istediğiniz cihazı seçin, parolayı girin ve **Tamam**'a dokunun.
- 5 Telefonunuz diğer cihaza bağlanacaktır, bu cihazda da aynı parolayı girmeniz gerekir.
- 6 Parola korumalı Bluetooth bağlantınız şimdi hazırdır.

Bluetooth kulaklık kullanılması

- 1 Bluetooth'unuzun **Açık** olduğunu kontrol edin.
- 2 Kulaklığınızı eşleştirme moduna almak için kulaklıkla birlikte verilen talimatları uygulayın ve cihazlarınızı eşleştirin.
- 3 **Şimdi bağlanmak** için **Evet**'e dokunun.

İpucu! Bluetooth kulaklığınız bağlı iken çağrıları nasıl cevaplayacağınızı kontrol edebilmek için, **BT cevap modu** ile ilgili ayrıntılı bilgi için 22. sayfaya bakın.

01

02

03

04

05

06

07

08

Aksesuarlar

Bu aksesuarlar KF700 ile birlikte verilir.

Şarj cihazı



Veri kablosu ve CD

KF700'ünüzü bilgisayara bağlayın ve senkronize edin.



Pil



Kullanıcı Kılavuzu

KF700'ünüz hakkında ayrıntılı bilgi edinin.



Stereo kulaklık



Not

- Her zaman için orijinal LG aksesuarlarını kullanın.
- Aksi halde garantiniz geçersiz olabilir.
- Aksesuarlar bölgelere göre farklılık gösterebilir; daha fazla bilgi için lütfen bölgesel servis şirketimiz ya da şubemizle görüşün.

Şebeke hizmeti

Bu kılavuzda tanıtılan kablosuz telefon, GSM 900, DCS1800, PCS 1900 ve W-CDMA şebekelerinde kullanım için onaylanmıştır.

Bu kılavuzdaki birkaç özellik, Şebeke Hizmetleri olarak adlandırılır. Bunlar, kablosuz hizmet sağlayıcınızdan alabileceğiniz özel hizmetlerdir. Bu Şebeke Hizmetlerinden yararlanmadan önce, bunlara hizmet sağlayıcınız aracılığıyla abone olmanız ve kullanımları hakkında bilgi almanız gerekir.

Teknik veriler

Genel

Ürünün adı : KF700

Sistem : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ortam Sıcaklıkları

Maks : +55°C (deşarj), +45°C (şarj)

Min : -10°C

01

02

03

04

05

06

07

08

Acil Çağrılar

Önemli:

Bu telefon da tüm kablosuz telefonlar gibi radyo sinyallerini, kablosuz ve sabit hat şebekelerini ve kullanıcının programladığı özellikleri kullanarak çalışmaktadır.

Bu nedenle tüm koşullarda bağlantı garanti edilemez. Bu sebepten ötürü önemli irtibatlarda hiçbir kablosuz telefona asla tamamiyle güvenmemelisiniz (ör. sağlık konusunda aciliyeti olan konular) Acil aramalar tüm kablosuz telefon şebekelerinden, belirli şebeke hizmetlerinden ve/veya kullanımda olan telefon özelliklerinden yapılamayabilir. Yerel hizmet sağlayıcınızla görüşün.

Not: Bu cihazın yazılımı Türkiye'de kullanılmak üzere özel olarak tasarlanmıştır.

"Aşağıda bulunan uyumluluk beyanına <<http://tr.lgmobile.com>> adresinden ulaşabilirsiniz."

Uyumluluk Bildirisi



Üretici Bilgileri

Adı

LG Electronics Inc

Adres

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Ürün Detayları

Ürün adı

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model adı

KF700

Marka adı

LG

CE 0168

Uygun olunan standartlar

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1

ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1

ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2

ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,

ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001

EN 60950-1 : 2001

Ek bilgiler

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body identification Number : 0168

Açıklama

Adı geçen ürünün yukarıda bahsedilen standartlara tam olarak uygun olduğunu garanti eder ve tüm sorumluluğunu bize ait olduğunu temin ederiz.

İsim

Yayın Tarihi

Seung Hyoun, Ji / Director 22.Feb. 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Yetkili kişi imzası

Güvenli ve verimli kullanım talimatları

Lütfen bu basit kuralları okuyun. Kuralların çiğnenmesi tehlikeli ve yasa dışı olabilir. Bu kılavuzda daha ayrıntılı bilgiler verilmektedir.

Radyo frekansı enerjisine maruz kalma

Radya dalgasına maruz kalma ve Özel Emilim Hızı (SAR – Specific Absorption Rate) bilgileri

KF700 modeli mobil telefon, radyo dalgalarına maruz kalmayla ilgili güvenlik gereksinimlerine uyumlu olacak şekilde tasarlanmıştır.

Bu gereksinim, yaşa ve sağlık durumuna bağlı olmaksızın tüm kişilerin güvenliğini garanti altına almak için tasarlanmış güvenlik sınırlarını içeren bilimsel kuralları temel almaktadır.

- Radyo dalgalarına maruz kalma kurallarında, Özel Emilim Hızı ya da SAR olarak bilinen bir ölçüm birimi kullanılmaktadır. SAR testleri, telefonun kullanılan tüm frekans bantlarında onaylı en yüksek güç seviyesinde iletim yaptığı standart bir yöntem kullanılarak gerçekleştirilmektedir.

- Çeşitli LG telefonu modellerinin SAR seviyeleri arasında farklılıklar olmasına karşın, tüm modeller radyo dalgalarına maruz kalmayla ilgili kuralların gereklerini yerine getirecek şekilde tasarlanmıştır.
- Uluslararası İyonize Olmayan Radyasyon Koruması Komisyonu (ICNIRP), önerilen SAR sınırını on (10) gram doku üzerinde 2W/kg olarak belirlemiştir.
- Bu model telefon için kulakta kullanılmak üzere DASY4 tarafından test edilmiş en yüksek SAR değeri 0.36 W/Kg (10g).
- Elektrik ve Elektronik Mühendisleri Enstitüsü (IEEE) tarafından bir (1) gram doku üzerinde ortalama 1.18 W/Kg olarak belirlenmiş tavsiye edilen SAR limitlerini benimseyen ülkelerde/ bölgelerde yaşayanlar için (örneğin ABD, Kanada, Avustralya ve Tayvan) SAR verileri.

Ürüne özen ve bakım

UYARI Yalnızca bu telefon modelinde kullanılması onaylanmış pilleri, şarj aletlerini ve aksesuarları kullanın. Diğer türlerde ürünlerin kullanılması, telefonun onaylarını ya da garantisini geçersiz kılabılır ve tehlikeli olabilir.

- Bu cihazı sökmeyin. Onarım gerektiğinde yetkili bir servis teknisyenine götürün.
- TV, radyo ya da kişisel bilgisayar gibi elektrikli aletlerden uzak tutun.
- Bu ürün, radyatör ve fırın gibi ısı kaynaklarından uzak tutulmalıdır.
- Telefonunuzu asla mikrodalga fırına koymayın, bataryanın patlamasına neden olur.
- Düşürmeyin.
- Bu ürünü mekanik titreşim ya da darbelere maruz bırakmayın.
- Bu telefonun kaplaması, ambalaj malzemeleri ya da vinil sarma malzemeleriyle sarıldığında bozulabilir.
- Cihazın dış yüzeyini temizlemek için kuru bir bez kullanın. (Benzin, tiner ya da alkol gibi solventler kullanmayın.)
- Bu ürünü aşırı duman ya da toza maruz bırakmayın.
- Telefonu kredi kartları ya da seyahat biletlelerinin yanına koymayın; manyetik şeritlerin üzerinde bulunan verileri etkileyebilmektedir.
- Ekranı keskin bir nesneyle vurmayın; aksi takdirde telefona hasar verebilir.
- Telefonu sıvıya ya da neme maruz kalmasını önleyin.
- Kulaklık gibi aksesuarları dikkatli kullanın. Kabloların güvenli biçimde toplandığından emin olun ve gereksiz yere antene dokunmayın.
- Kulaklık ve mikrofon gibi aksesuarları dikkatle kullanınız. Kabloların güvenli bir yere kaldırıldığından emin olunuz ve gereksiz yere antene dokunmayınız.

01

02

03

04

05

06

07

08

Güvenli ve verimli kullanım talimatları

Elektronik cihazlar

Tüm mobil telefonlar, performansını etkileyen girişimlere neden olabilir.

- Mobil telefonu, izin almadan tıbbi cihazların yanında kullanmayın. Telefonu, kalp pillerine yakın yerlere, örneğin göğsünüzün üzerindeki ceplere yerleştirmeyin.
- Mobil telefonlar bazı iletme cihazlarında girişime neden olabilir.
- Küçük çaplı girişimler TV'leri, radyoları, PC'leri vs. etkileyebilir.

Yol güvenliği

Araç kullandığınız yerlerde sürüş sırasında mobil telefon kullanımıyla ilgili yasaları ve yönetmelikleri kontrol edin.

- Sürüş sırasında telefonu elde tutarak konuşmayın.
- Sürüş sırasında dikkatinizi tamamen yola verin.
- Mümkünse telefonla uzaktan konuşma (handsfree) kitlerini kullanın.
- Sürüş koşulları gerektiriyorsa arama yapmadan ya da gelen aramayı yanıtlamadan önce kenara çekin ve park edin.

- RF enerjisi, araba teybi, güvenlik cihazları gibi aracınızın bazı elektronik sistemlerini etkileyebilir.
- Araç kullanırken hava yastığının yanına telefonunuzu koymayın ya da handsfree kitinizi bu tür yerlere yerleştirmeyin. Eğer kablosuz cihaz yanlış takılırsa ve hava yastığı devreye girerse, ciddi biçimde yaralanabilirsiniz.

Eğer müzik dinliyorsanız, çevrenizden haberdar olabilmemiz için ses seviyesini makul bir düzeye ayarlayınız. Bu, özellikle caddede karşıdan karşıya geçerken zorunludur.

İşitme Sisteminizi Zararlardan Koruma

Eğer uzun süre yüksek sese maruz kalırsanız, işitme sisteminiz zarar görebilir. Telefonunuzu kulağınızın yanında açık kapatmamanızı, ayrıca müzik ve gelen arama seslerini makul bir seviyeye ayarlamanızı tavsiye ederiz.

Patlatma işlemlerinin yapıldığı alanlar

Patlatma işlemlerinin yapıldığı yerlerde telefonu kullanmayın. Yasaklara, düzenlemelere ve kurallara uyun.

Patlama riski olan ortamlar

- Telefonu yakıt istasyonlarında kullanmayın. Yakıt ya da kimyasal maddelerin yakınında kullanmayın.
- İçinde mobil telefonunuz varken patlayıcı gaz, sıvı ya da diğer patlayıcıları aracınızın içinde taşımayın ya da saklamayın.

Uçakta

Kablosuz cihazlar uçakta girişime neden olabilmektedir.

- Uçaklara binmeden önce mobil telefonunuzu kapatın.
- Uçak yerdeyken, mürettebattan izin almadan kullanmayın.

Çocuklar

Telefonu, çocukların ulaşamayacağı güvenli bir yerde saklayın. Üründen söküldüğünde çocuklarda nefes borusunun tıkanmasına neden olabilecek küçük parçalar bulunmaktadır.

Acil aramalar


Acil aramaları, her hücresel şebekede yapamayabilirsiniz. Bu nedenle, acil arama yapmak için asla yalnızca telefona güvenmemelisiniz. Bölgenizdeki servis sağlayıcıyla görüşerek bilgi alın.

Pil bilgisi ve bakımı

- Yeniden şarj etmeden önce pilin tam bitmesi gerekli değildir. Diğer pil sistemlerinin aksine, pilin performansını etkileyebilecek hafıza etkisi olmayan piller kullanılmaktadır.
- Yalnızca LG pilleri ve şarj aletleri kullanın. LG şarj aletleri, pilinizin en uzun ömürlü olmasını sağlayacak şekilde tasarlanmıştır.
- Pili sökmeyin ya da kısa devre yaptırmayın.
- Pilin metal temas yüzeylerini temiz tutun.
- Pil artık yeterli performans

sağlayamadığında değiştirin. Pil, değişme zamanı gelene kadar yüzlerce kez şarj edilebilir.

- En uzun ömre sahip olması için uzun süre kullanılmadığında pili şarj edin.
- Pil şarj aletini doğrudan güneş ışığına maruz bırakmayın ya da banyo gibi yüksek nem oranına sahip yerlerde kullanmayın.
- Pili soğuk ya da sıcak yerlerde bırakmayın. Bu durum pilin performansını etkileyebilir.
- Yanlış tipte pil takılırsa patlama riski vardır.
- Kullanılmış pilleri üreticinin verdiği talimatlara uygun şekilde atın.

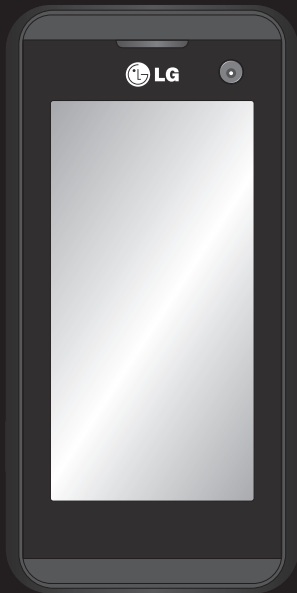

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF700 User Guide

Congratulations on your purchase of the advanced and compact KF700 phone by LG, designed to operate with the latest digital mobile communication technology.

Set up	01
Your standby screen	02
The basics	03
Get creative	04
The web	05
Get organised	06
Settings	07
Accessories	08

Contents

Set up

Getting to know your phone	8
Open view	9
Installing the USIM and battery.....	10
Memory card	12
Menu map.....	13

Your standby screen

Touchscreen tips.....	14
The quick keys.....	15
The status bar	16

The basics

Calls	18
Making a call or video call	18
Making a call from your contacts	18
Answering and rejecting a call.....	18
In-call options.....	19
Adjusting the call volume	19
Speed dialling.....	20
Viewing your call logs	20
Using call divert.....	20
Using call barring.....	21
Changing the common call settings	21
Changing your video call settings.....	22
Contacts	23
Searching for a contact.....	23
Adding a new contact	23
Contact options	23

Creating a group.....	24
Changing your contact settings.....	24
Viewing information	25
Messaging.....	26
Sending a message	26
Entering text.....	26
T9 predictive	27
Abc manual.....	27
Setting up your email	27
Retrieving your email	28
Sending an email using your new account.....	28
Changing your email settings	29
Message folders	29
Managing your messages	30
Using templates.....	30
Using emoticons.....	30
Changing your text message settings.....	31
Changing your multimedia message settings.....	31
Changing your other settings.....	32

Get creative

Camera.....	33
Taking a quick photo.....	33
After you've taken your photo	33
Getting to know the viewfinder.....	34
Using the flash	35

Adjusting the contrast.....	35	Editing your photos.....	46
Using the advanced settings.....	35	Adding text to a photo.....	47
Changing the image size.....	36	Adding an effect to a photo.....	47
Choosing a colour tone.....	37	Adding a colour accent to a photo.....	47
Using the inner camera.....	37	Swapping the colours in a photo.....	48
Viewing your saved photos.....	37	Multimedia	49
Viewing the details of a photo.....	38	My images.....	49
Video camera	39	My images options menu.....	49
Shooting a quick video.....	39	Sending a photo.....	49
After you've shot your video.....	39	Using an image.....	50
Getting to know the viewfinder.....	40	Organising your images.....	50
Adjusting the contrast.....	41	Deleting an image.....	50
Using the advanced settings.....	41	Moving or copying an image.....	50
Changing the video image size.....	42	Marking and unmarking images.....	51
Choosing a colour tone.....	42	Creating a slide show.....	51
Using the inner video camera.....	42	Checking your memory status.....	51
Watching your saved videos.....	43	My sounds.....	52
Your photos and videos	44	Using a sound.....	52
Viewing your photos and videos.....	44	My videos.....	52
Adjusting the volume when viewing a video.....	44	Watching a video.....	52
Capturing an image from a video.....	44	Using options while video is paused.....	52
Viewing the details of a video or photo ..	44	Sending a video clip.....	52
Sending a photo or video from the gallery.....	45	Using a video clip as a ringtone.....	52
Viewing your photos as a slide show.....	45	Using the video options menu.....	53
Setting a photo as wallpaper.....	46	My games and apps.....	53
		Downloading a game.....	53
		Playing a game.....	53

Contents

Using the games options menu.....	53	Get organised	
Flash contents.....	53	Organiser	60
Viewing an SWF file.....	54	Adding an event to your calendar.....	60
Using options viewing the SWF file.....	54	Changing your default calendar view.....	60
Transferring a file to your phone.....	54	Adding an item to your to do list.....	60
Viewing a file.....	54	Sharing a to do item.....	60
Playing a song.....	54	Using date finder.....	61
Creating a playlist.....	55	Setting your alarm.....	61
Editing a playlist.....	55	Adding a memo.....	61
Deleting a playlist.....	56	Voice recorder.....	62
Searching for stations.....	56	Recording a sound or voice.....	62
Resetting channels.....	56	Sending the voice recording.....	62
Listening to the radio.....	56	Using your calculator.....	63
		Adding a city to your world clock.....	63
The web		Converting a unit.....	63
Accessing the web.....	57	Using the stopwatch.....	63
Adding and accessing your bookmarks.....	57	PC Sync	64
Saving a page.....	57	Installing LG PC Suite on your computer ...	64
Accessing a saved page.....	57	Connecting your phone and PC.....	64
Viewing your browser history.....	58	Backing up and restoring your phone's	
Changing the web browser settings.....	58	information.....	64
Using your phone as a modem.....	58	Viewing your phone files on your PC.....	64
Access to Google Service.....	59	Synchronising your contacts.....	65
		Synchronising your messages.....	65
		Using your phone as a mass storage	
		device.....	65

Settings

Changing your screen settings.....	66
Personalising your profiles.....	66
Changing your phone settings.....	66
Changing your connectivity settings.....	67
Using memory manager	67
Sending and receiving your files using Bluetooth.....	68
Pairing with another Bluetooth device.....	69
Using a Bluetooth headset.....	69

Accessories	70
--------------------------	----

Network service	71
------------------------------	----

Technical data	71
-----------------------------	----

Emergency calls	72
------------------------------	----

Guidelines

Guidelines for safe and efficient use	74
---	----

Getting to know your phone

Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Inner camera lens

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Clear key



Deletes a character with each press.

Call key

Dials a phone number and answers incoming calls.

OK key

Lock/ Unlock key

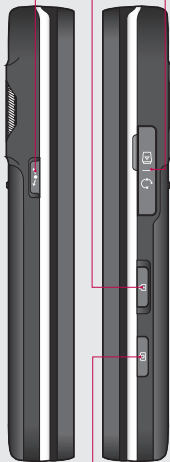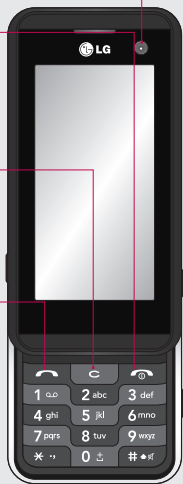

WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Capture button

Open view

Shortcut dial

Zooms in or out when in camera or video mode.
Scrolls through menus.

TIP: You can adjust the volume level when enjoying music, games and during a call.

WARNING: Close contact with a magnetic object may cause a malfunction of the wheel key.

Memory card slot

Battery cover

Battery

Flash

Camera lens

USIM Card Socket

01

02

03

04

05

06

07

08

Installing the USIM and battery




1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.


WARNING: Do not use your fingernail when removing the battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

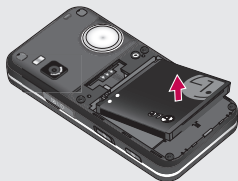

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

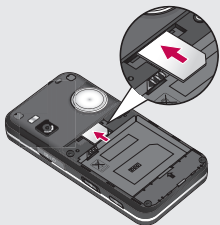


3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards.


To remove the SIM card, pull it gently in the reverse direction.

Installing the USIM and battery

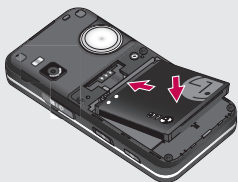

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

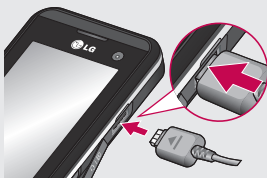

6 Charging your phone

Pull open the cover of the charger socket on the side of your KF700. Insert the charger and plug into a mains electricity socket. Your KF700 will need to be charged until a message reading Fully Charged appears on screen.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

01

02

03

04

05

06

07

08

Memory card

Installing a memory card

Expand the memory space available on your phone using a memory card. The KF700 will support up to a 4GB memory card.



- 1 Remove the cover then slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.



- 2 Replace the battery and cover as before.


Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch  and select .
- 2 Choose **Phone settings** and select **Memory manager** and choose **External memory**.



- 3 Touch **Format** and enter the password, which is set to 0000 as the default. Your card will be formatted and ready to use.
- 4 Inside **my stuff** select **my memory card**. You'll see five folders: **My images**, **My sounds**, **My videos**, **My games and apps** and others.

For more details on using a memory card, see page 67.


 **WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Contacts** and choose **Settings** and select **Copy** or **Move**.
- 3 Choose **Handset to USIM** then **All together** or **One by one**.
- 4 Touch **OK** to confirm.

Menu map

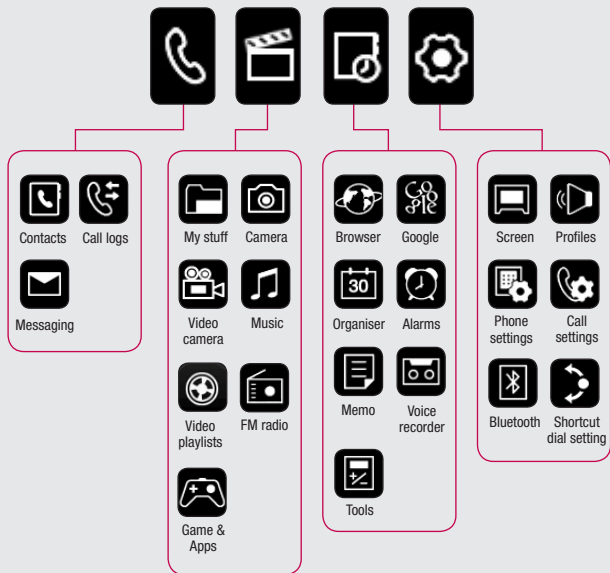

01

02

03

04

05

06

07

08

Your standby screen

Whenever your KF700 isn't in use it'll return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

Touchscreen tips

The standby screen is also a great place to get accustomed to the InteractPad.

To select an item touch the icon on the touchscreen accurately. Your KF700 will vibrate slightly when it recognises you've touched an option.

- There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- When the screen light is off, press the lock/unlock key on the right hand side of the phone to restore the standby screen.
- Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.



▲ Touchscreen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to open the call screen. You can call without having to slide the phone open. To initiate a video call, press the **Video call** tab after inputting the number.



Touch to open your address book. Your contacts are displayed as an alphabetical list. You can also create new contacts and edit existing ones. See page 23 for details.



Touch to create and send an SMS message. See page 26 for details.



Touch to open the full menu which is separated into four sub-menus. Touch each sub-menu's vertical tab to view further options.

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as depicted in the figure below.



Please do not cover the antenna area with your hand during a call or whilst using a Bluetooth connection. It may degrade speech quality.

01

02

03

04

05

06

07











08













Your standby screen

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.



Icon	Description
	Multitasking (In sub-menu)
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set


Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Flight mode is selected
	Bluetooth is active
	HSDPA available
	3G available


Changing your Status from the status bar

Touch the icon that represents your current setting in the status bar and the Status Summary will open. It shows the current Time, Network, Service ID, Battery, Handset memory, External Memory, Profile, MP3, Flight Mode and Bluetooth status. You can set Profile type, play MP3 and activate/deactivate Flight Mode and Bluetooth.

Using the Multitasking function

If you use any function, you can find Multitasking  on the top. Touch  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

From any application, touch  and select Home screen to return to the stand by screen without exiting or exiting all application.

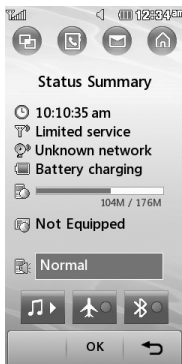

01

02

03

04

05




06


07

08

Calls

Making a call or video call



- 1 Slide open the phone.
- 2 Key in the number using the keypad.
To delete a digit press the **C** hard key.
- 3 Touch **Call** or press the  hard key to initiate the call. Touch  to make a video call.
- 4 To end the call press the  hard key.


TIP! To call with the slide closed. Touch  to open the touchscreen keypad. Enter the number and press **Call**.

TIP! To enter + for making an international call, press and hold 0.


TIP! Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call.
- 4 Touch **Call** or press the  hard key to initiate the call.

TIP! When the slide is closed, touch  to open your address book. Scroll using the side bar or type the first letter of your contact's name to jump to that section of your contact list.

Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Press **Unlock** then **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

TIP! To answer a call with the slide closed touch **Unlock** and select **Accept**.

TIP! To reject a call with the slide closed touch **Unlock** and select **Silent**, then **Reject**.

In-call options



Mute - Touch to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch to turn on the speaker phone.

End - Touch to end the call.

Hold - Touch to put a caller on hold. Touch **Resume** to continue your conversation.

Options - Choose from a list of further in-call options, including **Go to contacts** and **Go to messages** so you can check your messages and add contacts during a call. You can also end the call from here by touching **End call**.

Adjusting the call volume

To adjust the volume during a call turn the jog wheel clockwise to increase it or anti-clockwise to decrease it.

01

02

03

04

05

06



07


08


Calls

Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Touch , select .
- 2 Choose **Contacts** and touch **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once.

To call a speed dial number, slide open the phone and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to press .

TIP! When the slide is closed, touch . Select the contact you'd like to call then touch and hold their number. The call will initiate automatically.

Viewing your call logs

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

If you press  it brings up the calls lists. There are two arrows at the top of the screen which allow you to scroll between:

All calls - View the complete list of all your dialled, received and missed calls.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers you have received calls from.

Missed calls - View the list of all the calls you have missed.



Call charges - View the charges applied to your dialled numbers (this service is network dependant, some operators are unable to support this) and the call duration of all your calls; received and dialled.

Data volume - View the amount in kilobytes of all your received and sent data.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry then **View** to view the date, time and duration of the call.

Using call divert

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call divert** and choose **Voice calls** or **Video calls Deactivate all**.

- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable then touch **Activate**.
- 4 Input the number you'd like to divert to.
- 5 Touch **Divert** to activate.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.


TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Call barring** and choose **Voice calls** or **Video calls** **Deactivate all**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial numbers** from **Call settings** to turn on and compile a list of numbers which be called from your phone. You'll need your PIN2 code from your operator. If you create a fixed dial list, only the numbers in the list can be called from your phone.

Changing the common call settings

- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Common setting**. From here you can amend the settings for:
 - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups or contacts, calls from unregistered numbers (those not in your contacts) or callers who don't have caller ID on.
 - Send my number** - Choose whether your number will be displayed when you call someone.
 - Auto redial** - Choose **On** or **Off**.
 - Answer mode** - Choose how to answer the phone: **Press send key**, **Slide up** or **Press any key**.
 - Minute minder** - Select **On** to hear a tone every minute during a call.

01

02

03

04

05

06

07

08

Calls

BT answer mode - Select **Hands-free**



to be able to answer a call using a Bluetooth headset or select **Handset** to press a key on the handset to answer a call when using a Bluetooth headset.

Save new number - Choose **Yes** or **No**.

Slide close settings - choose what happens when you close the slide during a call. Choose from **End call** or **Continue call**.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Changing your video call settings


- 1 Touch , select  and choose **Call settings**.
- 2 Touch **Video call setting**.
- 3 Choose the settings of your video calling. Determine whether to **Use private image** and **Select private image**, and switch on the **Mirror** (so you can see yourself on screen).

Contacts




Searching for a contact

There are two ways to search for a contact:




From the standby screen

From the standby screen touch  to open the address book.

From the main menu

- 1 Touch  and tap  and select **Contacts**. Then touch Search.
- 2 From the list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 3 You can use the keypad to enter the first letter of the contact you want to call to jump to that section.
- 4 Touch **Call** or press the  hard key to initiate the call.



Adding a new contact

- 1 Touch  and tap  and select **Contacts**.
- 2 Touch **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Input the number and touch  and you can input more numbers.
For example, you can input a different

number for their Mobile, Home, Office, Pager and Fax.


- 6 You can then add up to two email addresses.
- 7 Assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add an Image, Ringtone, Homepage, Home address, Company name, Job title, Company address and a Memo.
- 9 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page 24.

TIP! When the slide is closed, touch  and key in the contact's number. Touch  and choose **Save number** then **New contact**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press  to open the list of options. From here you can:
Edit - Change any of the contact's details.

01

02

03

04

05

06

07

08

Contacts

Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page 26 for details on how to send messages.

Send business card - Send the contact's details to another person as a business card. Choose to send it as a **Text message, Multimedia message**, using **Email** or via **Bluetooth**.

Make a video call - Video call the contact.


Save to USIM/Handset - Choose to save the contact to the USIM card or handset.

Delete - Delete the contact. Touch **Yes** if you are sure.

Creating a group

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Groups** and touch .
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Save**.



Note: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! You can edit an existing group by highlighting it and touching . Choose to Add a member to the group from your contacts, assign a group ringtone, rename the group or delete a group.

Changing your contact settings

You can adapt your contact settings so that your address book works in the way you prefer.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the standby screen touch  then tap . Select **Contacts** and choose **Settings**.
- 2 From here you can adjust the following settings:
Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM, Handset** only or **USIM** only. You can also select to show the first name or last name of a contact first.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to, e.g. if you move a contact from your USIM to the handset it will be deleted from the USIM memory.



Send all contacts via Bluetooth - Beam all of your contacts to another device or computer using Bluetooth.

Backup contacts - See **Backing up and restoring your phone's information** on page 64.

Restore contacts - See **Backing up and restoring your phone's information** on page 64.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

Viewing information

- 1 From the standby screen touch  tap  and select **Contacts**.
- 2 Select **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **Add** and enter all your details as you would for any contact. Touch **Save** to finish.

01

02

03

04

05

06

07




08

Messaging



Messaging


Your KF700 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then tap  and select **Messaging**.

Sending a message

- 1 Touch  then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. Or to send an email, choose **Email**. See page 29 for details.
- 3 A new SMS or email will open. Write your message as normal.
- 4 Touch  then **Insert**, to add an image, video, sound or other information, including contact details.
- 5 Touch **Send**. Choose a contact from your list and press **Select** or key in a new number. You can add multiple contacts.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are two ways to enter text: T9 predictive and ABC manual.

To switch between text entry methods touch the corresponding icon at the top of the screen.

 **T9 predictive text, Abc manual** -

Touch to turn on T9 predictive text then select T9 abc, T9ABC, 123. Touch again to turn T9 predictive off.

 **Abc manual** - Choose abc, ABC or 123.


To enter a space touch **0**.

To delete a character use the **C** hard key below the screen.

To enter a symbol touch **★** key.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'. If there is more than one option for the keys you have pressed, a list will appear on the screen. Select the word you want by touching the screen.

If the word you want doesn't appear, touch  and select **Add to dictionary**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.



Abc manual

In Abc mode you must touch the key repeatedly to choose a letter from the choices available on the key. For example, to write 'hello', touch **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

Setting up your email

You can stay in touch on the move using email on your KF700. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then select **Settings**.
- 2 Touch **Email** then **Email accounts**.
- 3 Open  and touch **Add new**.
- 4 You then enter an email set up wizard. Follow the instructions and touch Continue to move on. You will need the following details:

Title - Enter a name for this account.

My name - Enter your name.

Username - Enter the account's username.

Password - Enter the account's password.

Email address - Enter the account's email address.

Reply email address - Enter the 'reply to' email address.

01

02

03

04

05

06

07

08

Messaging

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

Access point - Choose your Internet access point. Touch access point to use a preset access point .

Auto retrieve - Choose whether to fetch your new emails automatically.

Advanced settings - Choose whether to use the advanced settings.

SMTP port number - Normally, this will be 25.

Incoming server port - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

SMTP authentication - Choose the security settings for the outgoing mail server.

SMTP username - Enter the SMTP username.

SMTP password - Enter the SMTP password.


APOP secure login - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.


Retrieving your email

You can automatically or manually check your account for new email. See 'Change your email settings' to check automatically.

To check manually:

- 1 Touch  then **Settings**, followed by **Email**.
- 2 Touch **Retrieve interval** and choose an interval time to switch auto retrieve on.

Sending an email using your new account

- 1 Touch  then chose **Create new**.
- 2 Choose **Email** and a new email will open.
- 3 Enter the recipient's address and write your message. Touch the paperclip symbol to attach images, videos, sounds or other file types.
- 4 Touch **Send** and your email will be sent.

TIP! You can email Word, Excel, PowerPoint and PDF documents to your KF700 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works in the way you prefer. You may have already entered some of this information during the set up wizard.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then open **Settings**.
- 2 Touch **Email** then you can adapt the following settings :
 - Allow reply email** - Choose to allow the sending of 'read confirmation' messages.
 - Request reply email** - Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF700 checks for new email messages.
 - Include message in Fwd & Reply** - Choose to include the original message or not.
 - Include attachment** - Choose to include the original attachment.
 - Auto Retrieval in Roaming** - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

New Email notification - Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Message folders

You'll recognise the folder structure used on your KF700, it's fairly self-explanatory.

Inbox - All the SMS and MMS messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Mailbox - All the email messages you receive are placed in your mailbox. If you have more than one email account set up messages are filed into the correct account.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

My folders - Create new, personal folders to manage your messages.

Templates

Emoticons

Settings

01

02

03

04

05

06

07

08

Messaging

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Call** - Make a Voice or Video call to the person who sent you the message.
 - Delete** - Delete the message.
 - Create new message** - Open a new, blank message or email.
 - Mark/Unmark** - Mark your messages for multiple deletion or to move them into a different folder.
 - Copy & Move** - Choose to make a copy of your message or move it to a different folder.
 - Filter** - View your message by type. This will group SMS separately from MMS.

Message info. - See additional information for the message, for example, the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to Add new, Edit, Delete or Delete all for Text templates, and Add new, Write multimedia message or Edit for Multimedia templates.

Using emoticons


Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new, Edit, Delete or Delete all** emoticons.

Changing your text message settings

Your KF700 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, see below for more information.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** then **Text message**. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.


Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded, this impacts the size of your message and therefore data charges.

Send long text as - Choose to send as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch  then choose **Settings** then **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Delivery time - Deliver your message at a specific time.

Multi msg. centre - Enter the details for your message centre.

Note: See page 29 for details on how to change your email settings.

Messaging

Changing your other settings

Touch  then choose **Settings** then:

Videomail - If your operator supports this service you can create a new account.


Voicemail - Your voicemail service has already been set up although you can add new voicemail services here.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info. service - Choose your reception status, language and other settings.


Camera


Taking a quick photo


- 1 Press the  key on the right hand side of the handset.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly press the capture button. The white viewfinder box in the centre of the screen will change to red as the camera attempts to focus.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press the capture button fully.


After you've taken your photo


Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and five icons will appear.

 Touch to take another photo straightaway. Your current photo will be saved.

 Touch to look at the other photos in your album. Your current photo will be saved. See page 37 for **Viewing your saved photos**.

 Touch to send the photo as an MMS, Email or via Bluetooth. You can also print the photo using Bluetooth. See page 26 for **Sending a message**, page 68 for **Sending and receiving your files using Bluetooth**.

 Touch to set the photo you have just taken as your wallpaper.

 Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

01

02

03

04

05


06

07

08

Camera


Getting to know the viewfinder

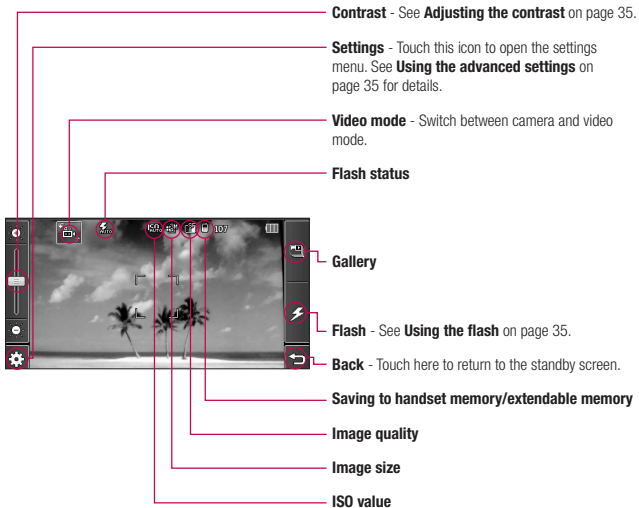



TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Using the flash


The flash is set to Auto as a default, but there are other options.

- 1 Select  from the middle right of the viewfinder to enter the flash sub-menu.
- 2 There are four flash options:
Auto - Your camera will assess the lighting needed to take a good picture and use the flash as necessary.
When taking a picture - The flash will only come on as you take a photo.
Always on - The flash will always be on when in camera mode.
Always off - The camera will never flash. This is useful if you want to save battery power.
- 3 Touch the flash option you'd like to use.
- 4 When you've made your selection the flash menu will automatically close, ready for you to take your picture.


Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper. Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.


Using the advanced settings

From the viewfinder touch  to open all the advanced settings options.



 **Image size** - Change the size of the photo to save on memory space or take a picture preset to the correct size to attach to a contact. See **Changing the image size** on page 36.

 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

01

02

03

04

05


06


07


08


Camera


 **Colour tone** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.


 **Self-timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.


 **Night mode** - Choose between **Off** and **On**. In the night, this mode is useful for taking good photos.


 **Burst shot** - The camera will take a series of shots (three, six or nine), great for recording a fast paced activity.


 **Frame shot** - You can choose to apply a frame to the photo you take.

 **ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto**, **ISO 100**, **ISO 200**, **ISO 400** or **ISO 800**.

 **Shutter sound** - Select one of the pre-set shutter sounds.

 **Swap cam** - Switch between the LG KF700's **inner camera** and **Outer camera**. See **Using the inner camera** on page 37 for details.

 **Memory in use** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.

 **Wide view** - Choose between **Off** and **On**.



 **Reset settings** - Choose **Yes** to reset your phone to its original camera settings.

Note: Always touch **Close** after selecting a new setting to implement the changes you've made.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu. Remember to touch **Close** before exiting to apply any changes.


Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.

- 3 Select a pixel value from the five numerical options (**3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**) or choose the preset: **Contacts** - This sets up the camera to take a photo the perfect size to be added to a phone contact.



Choosing a colour tone

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal(colour), Black & White, Negative, Sepia, Sketch, Solarize, Emboss.**
- 4 Touch the colour tone you'd like to use and select **Close**.


TIP! You can change a photo taken in colour to black and white or sepia after it's taken but you cannot change a picture taken in black and white or sepia back to colour.



Using the inner camera

Your LG KF700 has a 640x480 inner camera, not just for video calling but for taking pictures too.




- 1 To switch to the inner camera touch  then select . Then choose **Inner camera**.

- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image press the capture button as normal.

TIP! The inner camera has fewer settings as it has no flash or ISO. You can still alter the image size, image quality, white balance and more by touching  in the same way as when using the main camera.

- 3 After you've taken the photo you'll be offered all the same options as are available for an image taken with the main camera.
- 4 To return to the main camera touch  and then .

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply touch . From the standby screen you should touch , then select . Choose **My stuff** followed by **My Images**.
- 2 Your gallery will appear on screen.

Camera






Viewing the details of a photo

- 1 Touch the photo once then touch the **i** that appears.
- 2 The photo will reveal the name, the date it was taken, the size (in kilobytes and pixels) and the image type (e.g. jpeg) on the top.
- 3 Touch **x** to close the details and view the photo.


Video camera


Shooting a quick video


- 1 Press the camera key on the right side of the phone.
- 2 Touch the video camera icon in the viewfinder to switch to video mode. The video camera's viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button once to start recording.
- 5 **REC** and a timer will appear at the bottom of the viewfinder.
- 6 To pause the video touch  and resume by selecting .
- 7 Touch  on screen or press the capture button a second time to stop recording.


After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with three icons down the right side.

 Touch to shoot another video straight away. Your current video will be saved.

 Touch to look at the other video clips in your album. Your current video clip will be saved. See page 43 for **Watching your saved videos**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to send the video as an MMS, Email or via Bluetooth. See page 26 for **Sending messages**, or page 68 for **Sending and receiving your files using Bluetooth**.

01

02

03

04

05


06

07

08

Video camera

Getting to know the viewfinder

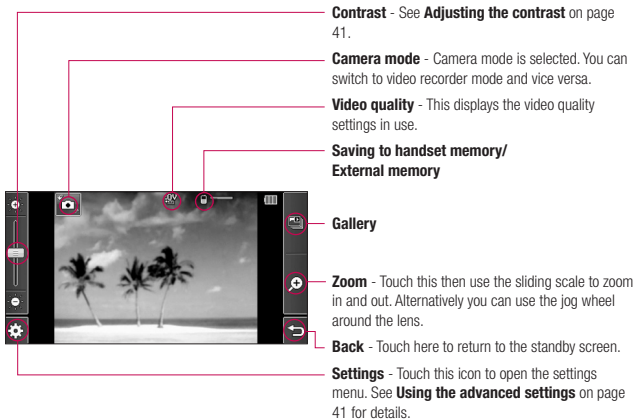

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Adjusting the contrast


Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


Slide the contrast indicator along the bar, towards ☀️ for a lower contrast, hazier image, or towards 🌑 for a higher contrast, sharper image.


Using the advanced settings


From the viewfinder touch ⚙️ to open all the advanced settings options.




 **Image size** - Change the size of the video to save on memory. See **Changing the video image size** on page 42.


 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.


 **White balance** - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.


 **Colour tone** - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page 42.

 **Duration** - Choose **Normal** or limit your video to fit in an **MMS**.

 **Night mode** - Choose between Off and On.

 **Voice** - Choose **Mute** to record a video without sound.

 **Swap cam** - Switch to your LG KF700's inner camera to record a video of yourself. See **Using the inner video camera** on page 42 for details.

 **Memory in use** - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

 **Reset settings** - Choose Yes to reset your phone to its original video settings.

01

02

03

04

05

06

07





08

Video camera

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the video colour or quality you'll be able to see the viewfinder change in preview behind the settings menu.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 Select a pixel value from the 2 options:
 **320x240** - Smaller image size, therefore smaller file size. Great for saving on memory space.
 **176x144** - Smallest image size and therefore smallest file size.

TIP! For video format conversion software, see the CD you received with your KF700.



Choosing a colour tone



- 1 From the viewfinder touch  in the bottom left corner.
- 2 Select  from the settings menu.
- 3 There are seven colour tone options, **Normal** (colour), **Black & White**, **Negative**, **Sepia**, **Sketch**, **Solarize** and **Emboss**.
- 4 When you've made your selection touch **Close** and the changes will appear in your viewfinder.


TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Using the inner video camera




Your LG KF700 has a 320x240 inner camera, not just for video calling but for recording videos too.

- 1 To switch to the inner camera touch  then select .
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, press it a second time to stop recording.

- 3 After you've shot the video you'll be offered all the same options as are available for a video shot using the main camera.
- 4 To return to the main camera touch  and then .

TIP! You can still alter the video size, video quality, duration, mute, white balance, colour tone and more by touching  in the same way as when using the main camera.

Watching your saved videos

- 1 From the viewfinder, simply touch . From the standby screen you should touch , then select  and select **My stuff** and choose **My Videos**.
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

01

02

03

04

05



06

07

08

Your photos and videos

Viewing your photos and videos

- 1 From the viewfinder, simply touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo you want to view once to bring it to the front of the gallery.
- 4 Touch it a second time to open it fully.
- 5 Videos will begin to play automatically. To pause playback touch the screen to bring up the options and select .




TIP! Change the way your photos and videos are displayed in the gallery by touching **Standard** or **Random** at the bottom of the screen.


TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, touch the volume bars on the bottom of the screen. Alternatively, use the jog wheel next to the camera lens.



Capturing an image from a video

- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image.
- 3 Touch .
- 4 The image will appear on screen, with its assigned image name.
- 5 Select **Save**.
- 6 Touch the image then  to return to the gallery.
- 7 The image will be saved in the My stuff **My images** folder and appear in the gallery. You need to exit gallery and then re-open for this to appear.



 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing the details of a video or photo

Videos and photos are grouped together in the gallery. If you have trouble telling which are photos and which are videos, check the details. For example, videos may be AVI or 3GP file types and photos may be JPEG or GIF file types.

- 1 Touch the video still or photo to bring it to the front of the gallery screen. Then touch  to see more information.
- 2 The video still or photo will reveal its name, the date it was taken, its size (in kilobytes and pixels) and whether it's an image or a video (e.g. MP4/3GP or JPEG) on the top.
- 3 Touch  to close the details and view the video still or photo.


Sending a photo or video from the gallery

- 1 Touch a photo or video twice to open it. If you select a video, press  when it starts to play.
- 2 Select  and choose how you would like to send the video or photo: **Message**, **Email**, **Bluetooth**.
- 3 The chosen messaging application will open so you can send the video or photo.


Note: The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case choose one of the other sending options.


Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slide show. Videos cannot be viewed as a slide show.

- 1 Touch the photo you would like to begin the slide show twice to open it.
- 2 Select  on the left hand side.
- 3 The slide show will begin.


There are five options within slide show:

 Touch to display the photo in full screen mode. The bar on the left hand can increase or decrease the speed of the slide show.

 Touch here to view the photos in a random order (i.e. not the chronological order they appear in your gallery).

 Touch to view fast.

 Touch to view slow.

 Touch to pause the slideshow on a particular photo. Touch again to resume playback.

01

02

03

04

05


06

07

08


Your photos and videos

Setting a photo as wallpaper


- 1 Touch the photo you would like to set as wallpaper twice to open it.
- 2 Touch .
- 3 The screen will switch to portrait mode. Select the portion of the photo you would like to set as wallpaper. This area will appear in actual size on screen.
- 4 When you are happy with the section touch **Set**.

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.


- 1 Open the photo you'd like to edit and touch  to bring up the options.





- 2 Touch the icons to adapt your photo:
 -  Draw something on your photo freehand. Select the thickness of the line from the four options. To change the colour of the line see


 below (the colour icon will change to the colour you have selected).

 See **Adding text to a photo** on page 47.

 Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be. To change the colour of a stamp see  below.


 Select a rectangular or ellipse area of your photo.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.

 Change the colour of a stamp, line or some text. You must select the colour before you draw, write or stamp the photo.

 Undo the last edit you made to the photo.

 See **Adding an effect to a photo** on page 47.



 Touch to open further effect options including **Rotate** and **Mirror**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 48.

 Touch to return to the gallery.

Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Input the letter you want.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo


- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:
 - Soften** - Move the marker along the bar to soften the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Mosaic blur** - Touch to apply a blurred mosaic effect to the photo. Touch  to return to the normal photo.
 - Colour Effect** - Change the colour of a photo to **Black and white**, **Sepia**, **Colour negative**, **Enhanced RGB** or **Contrast**. If you select **Contrast** move the marker along the bar to increase or decrease the contrast.

Frame - Add a frame to your photo.

You may be prompted to allow the image size to be changed. To see the frame types select **Yes**. The chosen frame will be superimposed over your photo.

Resize - Touch here for size options.

Touch your desired size to change the size of the photo.

- 3 To undo an effect simply touch .

TIP! You can add more than one effect to a photo, except for a colour effect of which you can only select one at a time.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area that is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch **Save**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.

01

02

03

04

05

06


07

08

Your photos and videos

- 7 Select **Save** to save the changes.

Swapping the colours in a photo


- 1 From the editing screen, touch **More**.
- 2 Choose **Colour Swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch  and select a colour.
- 5 Press **Swap**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then . Touch **My stuff** to open a list of folders storing all of your multimedia files.

My images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera. Touch  to change the view from thumbnail image to list.

My images options menu

Touch  for options.

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Print via Bluetooth**, **Sort by** and **Memory info**. options are available for default images.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Send - Send the image to a friend.

Use as - Set the image to appear at certain times.

Mark/Unmark - Select multiple files.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Rename - Rename an image.

Create new folder - Create a new folder within the **My images** folder.


Slide show - Start a slide show.

Print via Bluetooth - Print an image file via Bluetooth®.

Sort by - Sort images into a specific order.

Memory Manager - View the memory status.

Sending a photo

- 1 Touch  then .
- 2 Touch **My stuff** then choose **My images**.
- 3 Select a photo and touch .
- 4 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.

01

02

03

04

05

06

07

08

Multimedia

- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers or even to identify a caller.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Outgoing call** - Set an image to appear during outgoing calls.
 - Start-up** - Set an image to appear when you switch the phone on.
 - Shut down** - Set an image to appear when you switch the phone off.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

Organising your images

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then Sort by.
- 4 Choose from **Date**, **Type** or **Name**.

Note: As well as sorting your images by category, you can also manually sort them.

Deleting an image

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Delete** then **Yes** to confirm.

TIP! To quickly delete any file in **My stuff**, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.





Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.






Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Mark/Unmark**.
- 4 A box will appear to the left of each image. Touch the image twice and a tick will appear in the box marking it.
- 5 To unmark an image, touch the image again so that the tick disappears from the box.
- 6 Once you have marked all of the appropriate boxes, press  and choose one of the options.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Slide show**.
- 4 Use the  and  to skip through the images or touch  to show your images in a random order.



Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then .
- 2 Touch **My stuff** then **My images**.
- 3 Touch  then **Memory Manager**.
- 4 Choose **Handset memory** or **My memory card**.

Note: If you do not have a memory card inserted, you will not be able to select **My memory card**.

Multimedia

My sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then .
- 2 Touch **My stuff** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and touch **Play** to listen to it.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up**, **Shut down**.

My videos


The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then .
- 2 Touch **My stuff** then **My videos**.
- 3 Select a video and touch **Play**.


TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Using options while video is paused

Touch  while in pause mode and choose from:

- Capture** - Capture the frozen frame as a picture.
- File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.
- Send** - Send the video in a Message, Email, or via Bluetooth.
- Delete** - Delete the video.
- Use as** - Use the video as a ringtone.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email**, **Bluetooth** or **YouTube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using a video clip as a ringtone

- 1 Select a video and touch .
- 2 Touch **Use as** and choose from **Voice ringtone** or **Video ringtone**.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Use as - Set a video as your ringtone.

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Rename - Rename a video.

Mark/Unmark - Select multiple files.

Create new folder - Create a new folder within the **My videos** folder.

Sort by - Sort videos into a specific order.

Memory manager - View the memory status.

My games and apps

You can download new games and applications to your phone to help keep you amused when you have time to spare.

Downloading a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Open Games folder, select **Download games** and touch **Connect**.

- 4 You will connect to the web portal from where you can find a game to download.

TIP! To quickly delete any file in My stuff, touch it once so it is highlighted by the cursor and press the **c** hard key. Confirm by touching **Yes**.

Playing a game

- 1 Touch  then .
- 2 Touch **My stuff** then **My games & Apps**.
- 3 Select a game and touch **Launch**.

Using the games options menu

From the **My Games & Apps** folder, the following options are available:

Create new folder -  Create a folder within **My Games & Apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

Flash contents


The Flash contents folder contains all of your default and downloaded SWF files.

Multimedia



Viewing an SWF file

- 1 Touch  then .
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file and touch **View**.

Using options viewing the SWF file

Full screen view - View your SWF in full screen mode (this only appears if you touch  without pausing).

Mute - Switch the sound off.

 /  - Pause or resume playback.

Use as wallpaper - You can set the wallpaper with Default file.

File info. - View the name, Size, Date, Time, Type and Protection of the file.

Documents

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files in **My stuff**.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page 65 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.



Viewing a file

- 1 Touch  then .
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **Open**.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appears in the others folder rather than the Documents folder. If this happens you can move them.

To Move a file from Others to Documents :


- 1 Touch  then .
- 2 Touch **My stuff** then **Others**.
- 3 Select a file and touch .

- 4 Touch **Move**, check the destination, then touch **Move** again.

Playing a song

- 1 Touch then .
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch to pause the song.
- 5 Touch to skip to the next song.
- 6 Touch to skip to the previous song.
- 7 Touch to return to the **Music** menu.

TIP! To change the volume while listening to music, touch or use the jog dial.

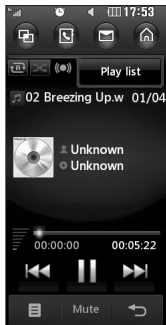

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **Add**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to their name.
- 5 Touch **Done**.

To play a playlist, select it and touch **Play**.

Note: To add a second playlist, touch then **Add new playlist**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. When you want to do this, you can edit the playlist.

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Open the playlist.
- 4 Touch and select:

Now playing – Play the playlist.

Add new songs – To add more songs to the playlist. Mark the ones you want and touch **Done**.

Multimedia

Move up/down – Move the song up or down the list to change the playing order.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Mark/Unmark – Select multiple files.

Use as – You can set the song as an effect sound.

Memory info. – View the memory status.

Deleting a playlist

- 1 Touch then .
- 2 Touch **Music**, then **Playlists**.
- 3 Touch then **Delete** or **Delete all** to delete all of the playlists.

Searching for stations

You can tune your phone into radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 24 channels on your phone.

To auto tune:

- 1 Touch then .
- 2 Touch **FM radio** then .

- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Touch then .
- 2 Touch **FM radio**.
- 3 Touch the channel number you want to save the station to.
- 4 Use the arrow keys at the top of the screen to find your station.
- 5 Press **Set** to save that station.

Resetting channels

- 1 Touch then .
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio



- 1 Touch then .
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

The web

With the browser at your fingertips, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.



Accessing the web

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.


Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.




- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required one and touch **Open**. You will be connected to your bookmark.

Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and select **Saved pages**.
- 3 Enter a name for the web page so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, and delete saved pages.

Accessing a saved page

- 1 From the standby screen select , then touch  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and touch , followed by **Open**.

01

02

03

04

05



06

07



08

The web

Viewing your browser history

- 1 From the standby screen select , then touch  and choose **Browser**. Select **History**.
- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page and touch **Connect**.

Changing the web browser settings

- 1 From the standby screen select , then touch  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Character encoding**, **Cache**, **Cookies**, **Java script**, **Security**, or to reset all settings, select **Reset Settings**.
- 3 Once you have changed your settings, select **OK**.

Using your phone as a modem

Your KF700 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KF700 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF700.

Note: For more information on synchronising using the LG PC Suite see page 65.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF700.
- 2 Pair your PC and KF700 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.

- 7 Click **Connect** and your PC will connect through your KF700.

Note: For more information on Bluetooth see pages 68-69.

Access to Google Service

You can launch google services in this application. Select to Start the Google Service of selected list item Scroll to the Google Service items list and press OK.

- 1 **Search:** Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.
- 2 **Mail:** The Gmail for mobile application is a downloadable Java application, offering the best possible Gmail experience for supported mobile devices. To download, visit <http://gmail.com/app> from your mobile browser.
- 3 **Maps:** You can access maps from your mobile devices.
- 4 **Blogger:** You can manage your account and share your blog. It is available to upload a picture and video.
- 5 **YouTube:** You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.



Organiser

Adding an event to your calendar




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Add new event** option to add new event.
- 4 Select whether you would like to add an **Appointment, Anniversary or Birthday** and touch **OK**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject or Name** and type in your note, followed by **OK**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


TIP! You can set a holiday period in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holiday.

Changing your default calendar view




- 1 From the standby screen select , then touch  and choose **Organiser**. Select **Settings**.
- 2 Touch **Calendar settings** and choose either **Default view** or **Week starts on**.
- 3 Press **OK** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **To do** and touch  in the top right hand corner.
- 3 Set the date for the to do item, add notes and select a priority level: **High, Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

TIP! You can edit an item by selecting it, and touching . Now select **Edit**. Confirm your amends by selecting **Save**.



Sharing a to do item

- 1 From the standby screen select , then touch  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message, Multimedia msg., Email** or **Bluetooth**.




TIP! You can back up and synchronise your calendar with your computer. See **PC Sync** on page 64.


Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2007 will be 09.12.2007. This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch  and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

Setting your alarm




- 1 From the standby screen select , then touch  and choose **Alarms**.
- 2 Touch  to set your alarm.
- 3 Set the time you would like the alarm to sound and touch **Set**.
- 4 Choose whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun** or **Except holiday**. Press **OK**.

- 5 Select  to select a sound for your alarm. To listen to sounds touch the sound, followed by **Play**. After you have made your selection, touch **Select**.
- 6 Add a memo for the alarm. Touch **OK** when you have finished typing the memo. When the alarm sounds the memo will be displayed.
- 7 Finally you can set the snooze interval at **5, 10, 20, 30** minutes, **1** hour or **off**. Press **OK** to confirm your choice.
- 8 Once you have set your alarm, touch **Save**.

Note: You can set up to 5 alarms.

TIP! Even when your phone is off, the alarm will still sound at the set time. If you touch snooze the alarm will sound again in 5 minutes. If you touch **Stop** the message 'Turn on your phone?' will pop up.

Adding a memo

- 1 From the standby screen select , then touch  and choose **Memo**.
- 2 Touch  to add a new memo.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

01

02

03

04

05

06

07

08

Organiser

TIP! You can edit an existing memo. Select the one you want to edit and touch **Edit**.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Touch  then .
- 2 Touch **Voice recorder** and press  to start recording or press  and choose from:


Duration – Set the recording duration. Choose from **MMS msg. size, 1 min** or **No limit**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.


Go to my sounds – Open the Voice recordings folder in **My sounds**.


Recording a sound or voice

- 1 Touch  then .
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

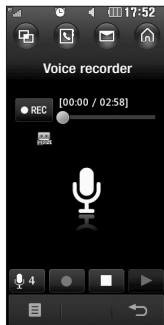




Sending the voice recording




- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

Note: After you have finished recording, touch  and choose **Send, Files(Rename, File info.), Delete, Use as** (to use the recording as your ringtone) or **Go to my sounds**.

Using your calculator



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Calculator**.
- 3 Use the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ÷, x), followed by =.
- 5 For more complex calculations, touch  and choose from **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.

Adding a city to your world clock



- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively touch **Map**, and select your chosen city from the map.
- 4 Touch **Select** to confirm your choice.

TIP! If you are abroad you can change your time zone from World Clock by touching , followed by **Set as time zone**.

Converting a unit

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can now select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the standby screen select , then touch  and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at or touch **Reset** to begin the time again.

01

02

03

04

05

06



07

08

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match, but also as a backup to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the standby screen select , then touch  and choose **Phone settings**.
- 2 Select **Connectivity**, then **USB connection mode**.
- 3 Select **Data Service** and touch **Select**.
- 4 Insert the supplied CD into your PC. **LG PC Suite Installer** will appear on your screen. Click on **LG PC Suite Installer**.
- 5 Select the language you would like the installer to run in and click **OK**.
- 6 Follow the instructions on screen to complete the **LG PC Suite Installer** wizard.
- 7 Once installation is complete, the **LG PC Suite Icon** will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.

- 4 Click on **Next**, then **Next** again, then **Finish**.
Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup or Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, Flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.


Note: To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen select **•••**, then touch  and choose **Phone settings**.
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Select **Mass storage** and touch **select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 All of your phone files will automatically be stored on to your PC hard drive.

Note: Mass Storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

Settings

Within this folder you can adapt your settings to make your KF700 personal to you.

Note: For information on call settings see page 21.




Changing your screen settings

- 1 Touch  then choose .
- 2 Touch **Screen** and then choose from:
 - Screen theme** - Choose the theme for your Home screen, Outgoing call, Start-up and Shut down.
 - Clock & calendar** - Choose how these are displayed on the screen.
 - Backlight** - Choose how long the backlight and keypad remains on for.
 - Brightness** - Adjust the screen's brightness.
 - Handset theme** - Quickly change the whole look of your screen.
 - Font** - Adjust the font colour.
- 3 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon at the top of your screen.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose .
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 Touch  and choose **Edit**.
- 4 You can then change all of the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message alerts, Slide tone** settings and more.

Changing your phone settings

Enjoy the freedom of adapting your KF700 so that it works in a way which suits you best.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose .
- 2 Touch **Phone settings** then choose from the list below.
 - Date & time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.
 - Languages** - Change the language of your KF700's display.
 - Auto key lock** - Choose when and how your keypad is locked.

Security - Adjust your security settings, including PIN codes and handset lock.

Connectivity - See **Changing your connectivity settings** below for more information.

Touchscreen effect - Change the touchscreen settings.

Memory manager - See **Using memory manager** below for more information.

Touchpad calibration - Reset your screen for ease of use.

Reset settings - Reset all the settings to their factory definitions.

Handset information - View the technical information for your KF700.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then . Touch **Phone settings** and select **Connectivity**.

Network settings - Your KF700 connects automatically to your preferred network.

To change these settings use this menu.

Internet profiles - You can set and view Internet profiles.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

USB connection mode - Choose **Data service** and synchronise your KF700 using the LG PC Suite software to copy files from your phone. See page 65 for more information on synchronisation.

Synch service - See page 65 for more information on synchronisation.

Streaming settings - Your network operator has already saved this information. You may edit it if you'd like to make changes.

Using memory manager

Your KF700 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by . Select **Phone settings** then **Memory manager**.

Handset common memory - View the memory available on your KF700 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications, Documents and others.

Settings

Handset reserved memory - View the memory available on your handset for Text msg on the phone, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page 12 for information on **inserting a memory card**.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**.
Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.



- 4 Your KF700 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the relevant folder in My stuff.

Changing your Bluetooth settings:

- 1 Touch  then touch .
- 2 Choose **Bluetooth** then **Settings**.
Make your changes to:
My device visibility - Choose to be **Visible** or **Hidden**.
My device name - Enter a name for your LG KF700.

Supported services - Choose how to use Bluetooth in association with different services. See **Using your phone as a modem** on page 59 or **Using a Bluetooth headset** below.

Remote SIM mode - Choose **On** or **Off**.

My address - Check your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KF700 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Paired Devices** then **New**.
- 3 Your KF700 will search for devices. When the search is completed **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with, touch **Add** and enter the passcode then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Yes** to **Connect now**.

TIP! See page 22 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

Accessories

These accessories were supplied with the KF700.

Charger



Data cable and CD

Connect and synchronise your KF700 and PC.



Battery



User Guide

Learn more about your KF700.



Stereo headset



Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF700

System : GSM 900 / DCS 1800 /
PCS 1900 / W-CDMA

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

Emergency calls

Important:

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions. Because of this, connections in all conditions cannot be guaranteed.

Therefore, you should never rely solely upon any wireless phone for essential communications. (e.g. medical emergencies)

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service provider.

"You can find below DoC document <<http://tr.lgmobile.com>> in this web adress."

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF700

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1

ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.3.1

ETSI TS 151 010-1 V7.6.0 specified by ETSI EN 301 511 V9.0.2

ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,

ETSI EN 300 328 V1.6.1

EN 50360/EN 50361:2001

EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 22, Feb, 2008

LG Electronics Inc, Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF700 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.36 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.18 W/kg averaged over 1g of tissue.

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and maybe dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Guidelines for safe and efficient use

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



LG Electronics Ticaret A.Ş.
Kaptanpaşa Mah. Piyalepaşa Bulvarı NO: 14
Ortadoğu Plaza Kat 7 ve 8 Okmeydanı / ŞİŞLİ İSTANBUL 34384

Tel: (0212) 222 85 70
Fax: (0212) 222 61 44
Vergi No : Şişli Vergi Dairesi 6080467738

Çağrı Merkezi : 444-6-543



GARANTİ BELGESİ

CEP TELEFONU

BELGE NO : 50174

BELGE ONAY TARİHİ : 11.04.2008

Bu belgenin kullanılmasına; 4077 Sayılı Tüketicinin Korunması Hakkında Kanun ve bu Kanun'a dayanılarak yürürlüğe konulan Garanti Belgesi Uygulama Esaslarına Dair Yönelik uyarınca, T.C. Sanayi ve Ticaret Bakanlığı Tüketicinin ve Rekabetin Korunması Genel Müdürlüğü tarafından izin verilmiştir.

GARANTİ ŞARTLARI

1. Garanti süresi, malın teslim tarihinden itibaren başlar ve 2 Yıldır.
2. Malın bütün parçaları dahil olmak üzere tamamı firmamızın garantisine kapsamındadır.
3. Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir. Malın tamir süresi en fazla 30 iş günüdür. Bu süre, mala ilişkin arızanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayii, acentası, temsilciliği, ithalatçısı veya imalatçısından-üreticisinden birisine bildirim tarihinden itibaren başlar. Sanayi malının arızasının 15 iş günü içerisinde giderilmemesi halinde, imalatçı-üretici veya ithalatçı; malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir malını tüketicinin kullanımına tahsis etmek zorundadır.
4. Malın garanti süresi içerisinde, gerek malzeme ve işçilik, gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masrafı, değiştirilen parça bedeli ya da başka herhangi bir ad altında hiçbir ücret talep etmeksizin tamiri yapılacaktır.
5. Tüketicinin onarım hakkını kullanmasına rağmen malın;
 - Tüketicieye teslim edildiği tarihten itibaren, belirlenen garanti süresi içinde kalmak kaydıyla bir yıl içerisinde; aynı arızanın ikiden fazla tekrarlanması veya farklı arızaların dörtten fazla meydana gelmesi veya belirlenen garanti süresi içerisinde farklı arızaların toplamının altıdan fazla olması unsurlarını yanı sıra, bu arızaların maldan yararlanamamayı sürekli kılması,
 - Tamiri için gereken azami sürenin aşılması,
 - Firmanın servis istasyonunun mevcut olmaması halinde sırasıyla satıcısı, bayii, acentası, temsilciliği, ithalatçısı veya imalatçı-üreticisinden birisinin düzenleyeceği raporla arızanın tamirinin mümkün bulunmadığının belirlenmesi, durumlarında tüketici malın ücretsiz değiştirilmesini, bedel iadesi veya ayıp oranında bedel indirimi talep edebilir.
6. Malın kullanma kılavuzunda yer alan hususlara aykırı kullanılmasından kaynaklanan arızalar garanti kapsamı dışındadır.
7. Garanti belgesi ile ilgili olarak çıkabilecek sorunlar için Sanayi ve Ticaret Bakanlığı Tüketicinin ve Rekabetinin Korunması Genel Müdürlüğü'ne başvurulabilir.



LG MONTAJ KARTI

MÜŞTERİ BİLGİLERİ

ADI-SOYADI :

ADRESİ :

TEL :

İMZA :

CİHAZ BİLGİLERİ

MARKASI :

MODELİ :

SERİ NO :

FATURA TARİHİ :

FATURA NO :

AZAMI TAMİR SÜRESİ: 30 İŞ GÜNÜ

YETKİLİ SERVİS

MONTAJ TARİHİ :

KAŞE-İMZA :

* Montaj kartı bölümü eksiksiz doldurularak yetkili servis tarafından servis fişi ekinde merkeze gönderilmelidir.



İMALATÇI / İTHALATÇI FİRMANIN

ÜNVANI : LG ELECTRONICS TİCARET A.Ş.

MERKEZİ ADRESİ : KAPTANPAŞA MAH.
PIYALEPAŞA BULVARI NO 14
OKMEYDANI İSTANBUL

TELEFONU : (0212) 222 85 70

TELEFAKSI : (0212) 222 61 44

FİRMA YETKİLİ İMZAŞİ - KAŞESİ LG
LG ELECTRONICS TİCARET ANONİM ŞİRKETİ
Kaptanpaşa Mah. Piyalepaşa Bulvarı No: 14 Okmeydanı
SİS LİNE

Veri No: SALT ERS 007 738

Tel: (0212) 222 85 70 Faks: (0212) 222 61 44

MALIN

CİNSİ : CEP TELEFONU

MARKASI : LG

MODELİ :

BANDROL VE SERİ NO :

TESLİM TARİHİ VE YERİ :

GARANTİ SÜRESİ : 2 YIL

AZAMI TAMİR SÜRESİ : 30 İŞ GÜNÜ

SATICI FİRMANIN

ÜNVANI :

ADRESİ :

TELEFONU :

TELEFAKSI :

FATURA TARİHİ VE NO:

TARİH-İMZA-KAŞE:

**LG CEP TELEFONU
GARANTİ KARTI
Orta Doğu ve Afrika**

**LG MOBILE PHONE
WARRANTY
Middle East & Africa**



www.lgservice.com
www.lgmobile.com





Terimler ve Koşullar

Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months and 6 months for battery from purchase date (pls. refer to list of coverage at the back), and locally Twenty four months (24) months from purchase date. Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

This Warranty is not applicable if this telephone has:

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has risen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.

Bu pakette bulunan LG cep telefonunuz ve aksesuarları, bu kartın arkasında belirtilen ülkelerde satın alma tarihinden itibaren 12 ay boyunca ve 6 ay batarya için (lütfen arka yüzdeki kapsama listesine bakınız), ve yerel olarak satın alma tarihinden itibaren yirmi dört (24) ay boyunca LG garantisi altındadır. Bu garanti Kartının ibraz edilmesiyle garanti desteği LG Yetkili Servis Merkezlerinde sağlanacaktır. Garanti sadece yerel pazarlarda satılan modelleri kapsar.

Bu telefon aşağıdaki durumlarda garanti kapsamına girmez:

1. Kötü Kullanılmışsa, yanlış kullanılmışsa, telefona bilerek hasar verilmişse, yanlış bir şekilde test edilmişse, sıvı hasarı olmuşsa, tamir edilmişse, her hangi bir şekilde değiştirilmişse veya tahrip edilmişse,
2. El kitabındaki veya ürün şartnamesindeki talimatların uygulanmaması sonucunda ortaya çıkan bir bozuklukta,
3. LG onayı olmayan aksesuarların veya ek öğelerin takılı veya telefonla bağlantılı olarak kullanılması sonucunda ortaya çıkan bir bozuklukta.



Garanti Kartı Warranty Card

Kindly fill in all details below at the time of purchase

Satın alma tarihinde lütfen aşağıdaki bilgileri doldurun

REFERENCE NO:

REFERANS NO:

Customer's Name:

Müşteri'nin Adı:

Product/ Model:

Ürün/ Model:

Serial No.:

Seri No.:

IMEI No.:

IMEI No.:

Dealer's Name:

Bayii Adı:

Date of Purchase:

Satın Alma Tarihi:

Invoice/ Cash memo Details:

Fatura/ Nakit Ayrıntıları:

Operator/ Distributor's Stamp

Operatör/ Distribütör'ün Damgası



Yetkili Servis Merkezleri Authorized Service Centers

Yetkili Servis Telefon Numaraları

Istanbul +902164589797 Ankara +903122305530
Diyarbakır +904122287785 İzmir +902324458600

LG Call Center

LG Çağrı Merkezi: +90 212 289 9999
email: lgdestek@panel.gen.tr

Bölgesel Regional

Middle East

UAE 800 54
KSA +96612112345
+96638343000
Qatar +9744315865
Oman +96824502866/8
Bahrain +97317403304
Yemen +96771503240
Egypt 19960
Syria +963113347720/1
Jordan +96265510137

Orta Doğu

Birleşik Arap Emirlikleri 800 54
Suudi Arabistan +96612112345
+96638343000
Katar +9744315865
Umman +96824502866/8
Bahreyn +97317403304
Yemen +96771503240
Mısır 19960
Suriye +963113347720/1
Ürdün +96265510137

Africa

Morocco 081005454
Tunisia +21670838424
Libya +218213405695
Algeria +21321917494
Kenya +25420252240/1
Nigeria +23418935454
South Africa 0861545454

Others

Turkey +902165450404
Pakistan +92214388271/74

Afrika

Fas 081005454
Tunus +21670838424
Libya +218213405695
Cezayir +21321917494
Kenya +25420252240/1
Niijerya +23418935454
Güney Afrika 0861545454

Diğerleri

Türkiye +902165450404
Pakistan +92214388271/74



Müşteri Kayıt Formu Customer Registration Form

Kindly fill in all details below and fax/email to your
Local Customer Care.

REFERENCE NO:
Date of Purchase:
Customer's Name:
Tel: Fax:
Email:
Address:
Product/ Model:
Serial No.:
IMEI No.:
Date of Purchase:
Distributor's Name:
Dealer's Name:

Lütfen aşağıdaki bilgileri doldurun ve Yerel Müşteri
Hizmetlerine faks yoluyla veya elektronik postayla yollayın.

REFERANS NO:
Satın Alma Tarihi:
Müşteri'nin Adı:
Tel: Faks:
E-posta:
Adres:
Ürün/ Model:
Seri No:
IMEI No.:
Satın Alma Tarihi:
Distribütör'ün Adı:
Bayii'nin Adı:

Stamp

To :

Teleservice International Telefon Onarım ve Ticaret Ltd. Őti.
LG Yetkili servis merkezi
LG Authorized service center

Prof.Dr. Fahrettin Kerim Gökay Cd. No:31/1 Altunizade

Istanbul

TURKEY



LG Mobile Phone Service Centers in Middle East & Africa



Service for LG Mobile Phone is available in the following countries

(List includes Only the Main Service Centers. Other area's customers can contact the Head-quarter of their countries for further information)

Middle East Countries

11 Countries

UAE
Saudi Arabia
Qatar
Oman
Kuwait
Bahrain
Yemen
Iraq
Egypt
Syria
Jordan

Africa Countries

7 Countries

Morocco
Tunisia
Libya
Algeria
Kenya
Nigeria
South Africa

Other Countries

2 Countries

Turkey
Pakistan

Middle East Countries

UAE

Saudi Arabia

Qatar

Oman

Kuwait

Bahrain

Yemen

Iraq

Egypt

Syria


Jordan

UAE

Headquarter

- ❑ Agent Name : Jumbo Electronics Co. Ltd.
- ❑ Address : Telecommunication Division, P.O. Box 3426, Dubai, UAE
- ❑ Telephone No. : +97143367999 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97143340821
- ❑ Web Site : <http://www.jumbocorp.com>
- ❑ Email : Roby.George@jumbo.ae

Service Centers



Area	Address	Telephone No.	Fax No.
Dubai (Karama)	Near Strand Cinema, P.O. Box 3426, Dubai	+97143362621	+97143360847
Abudhabi	Regional Service Center P.O. Box 3832,	+97126732201	+97126733930
Al Ain	Regional Service Center P.O. Box 15444	+97137542898	+97137557898
Sharjah	Regional Service Center P.O. Box 5331	+97165599725	+97165538365
Fujairah	Regional Service Center P.O. Box 868	+97192221406	+97192221828
Ras Al Khaimah	Regional Service Center P.O. Box 1054	+97172272571	+97172271881

UAE

Headquarter

- ❑ Agent Name : Al Sayegh Brothers Trading L.L.C
- ❑ Address : Al Sayegh Brothers Building, Muraqqabat, Deira, P.O. Box 55106, Dubai, UAE
- ❑ Telephone No. : +97142663200 (LG Customer Information Center: 800 54)
- ❑ Fax No. : +97142669964
- ❑ Web Site : www.alsa-g.com
- ❑ Email : helpdesk@alsa-g.com

Service Centers

Area	Address	Telephone No.	Fax No.
Dubai	Al Sayegh Brothers Building, Muraqqabat, Deira P.O. box 55106	+97142622770	+97142669964/ +97142680340
Abu Dhabi	Lotus Tower, Airport road, P.O. Box 7993	+97124452111	+97124462040
Sharjah	Al Sayegh Brothers Main SVC Center Industrial area #6.	+97165436221	+97165437422

UAE

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : World Trade Centre, P. O. Box 9266, Dubai UAE
- ❑ Telephone No. : 04 3318555 (LG Customer Information Center: 800 54)
- ❑ Fax No. : 04 3318855
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : atcc@axiomtelecom.com

Service Centers in UAE

Area	Address	Telephone No.	Fax No.
Dubai	Shk Zayed Road, Al Kawakeb Building, Block C, P O Box 9266, Dubai, UAE	00971 43210600	00971 43210400
Abu Dhabi	Defense Road, Block A 4, Next to Al Sultan Restaurant. Abu Dhabi, UAE	00971 26417144	00971 26417076
Sharjah	Shop no 78, Crystal Plaza, Buhaira Corniche Road , Shj UAE	00971 65751503	00971 65751404

Saudi Arabia

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 9th Floor, Al Subaiee Tower, Abdul Aziz Highway, Al Khobar, KSA, P O Box 4742
- ❑ Telephone No. : 00966 38019000
- ❑ Fax No. : 00966 38019051
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : ksasupport@axiomtelecom.com

Service Centers in KSA

Area	Address	Telephone No.	Fax No.
KHOBAR	9, Al Fanar Complex, Khobar-Dammam Highway, Khobar 31952, KSA	00966 38587922	00966 38587910
RIYADH	Olaya Main Street, Nr. Al Owais Market, Riyadh, KSA	00966 12698255	00966 12698355
JEDDAH	City Plaza Centre, Price Sultan Street, Jeddah, KSA	00966 26922764	00966 26924575

Saudi Arabia

Headquarter

- ❑ Agent Name : AL Farida Telecom Co. Ltd. (SKY)
- ❑ Address : P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia.
- ❑ Telephone No. : +96612112345
- ❑ Fax No. : +96612112311
- ❑ Email : marwan.alshare@alhokair.com.sa

Service Centers

Area	Address	Telephone No.	Fax No.
Riyadh	P.o. box 359, Riyadh 11411, Riyadh, Saudi Arabia	+966121112345	+96612112311



Saudi Arabia

Headquarter

- ❑ Agent Name : Itsalat International Co.
- ❑ Address : P.O. Box 9798, Dammam, 31423, Saudi Arabia.
- ❑ Telephone No. : +96638343000
- ❑ Fax No. : +96638334664
- ❑ Web Site : <http://www.itsalat.com>
- ❑ Email : ashraf.hassan@itsalat.com, headoffice@itsalat.com

Service Centers

Area	Address	Telephone No.	Fax No.
Jeddah	Palestine st., Soukal Jawal, Jeddah	+96626677988	+96626643618
Riyadh	Mursalat, Neat STC, Riyadh	+96614559106	+96612645766
Dammam	Malik Fahd Road	+96638411111	+96638469055


QATAR

Headquarter

- ❑ Agent Name : Video Home & Electronics Center
- ❑ Address : Musherib Street, P.O.Box 4668, Doha, Qatar
- ❑ Telephone No. : +9744315865
- ❑ Fax No. : +9744437876
- ❑ Web Site : <http://www.jumboqatar.com>
- ❑ Email : alexjacob@jumboqatar.com

Service Centers

Area	Address	Telephone No.	Fax No.
Doha	Musherib street, P.O.Box 4668, Doha, Qatar	+9744315865	+9744437876

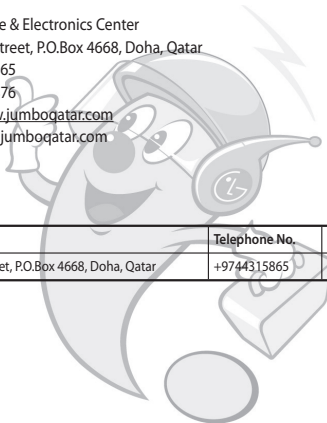


OMAN

Headquarter

- ❑ Agent Name : Oman Gulf Enterprises L.L.C
- ❑ Address : P.O. Box 175, PC 117, Muscat, OMAN
- ❑ Telephone No. : +96824502866/8
- ❑ Fax No. : +96824502019
- ❑ Web Site : <http://www.otegroup.com>
- ❑ Email : sudhirk@otegroup.com

Service Centers

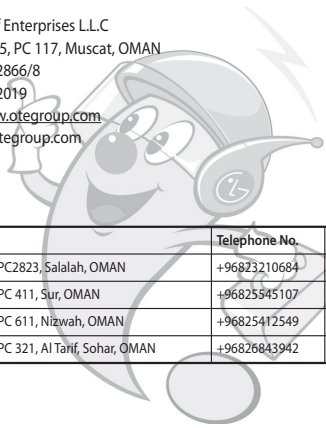

Area	Address	Telephone No.	Fax No.
Salalah	P.O. Box 211, PC2823, Salalah, OMAN	+96823210684	+96823210145
Sur	P.O. Box 480, PC 411, Sur, OMAN	+96825545107	+96825545107
Nizwah	P.O. Box 784, PC 611, Nizwah, OMAN	+96825412549	+96825412549
Sohar	P.O. Box 205, PC 321, Al Tarif, Sohar, OMAN	+96826843942	+96826843942


OMAN

Headquarter

- ❑ Agent Name : Cellucom and Partners L.L.CI
- ❑ Address : Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman
- ❑ Telephone No. : +96824835010
- ❑ Fax No. : +96824834234
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Muscat, Oman	Office No 7, Makha Business Center, Ruwi High Street, Muscat, Oman	+96824835010	+96824834234

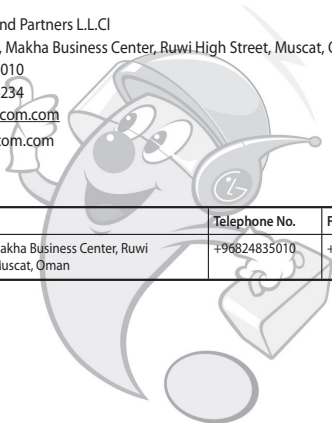


KUWAIT

Headquarter

- ❑ Agent Name : Cellucom Kuwait WLL
- ❑ Address : Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait
- ❑ Telephone No. : +9655710801
- ❑ Fax No. : +9655710803
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Salmiya, Kuwait	Salem Al Mubarak Street, Shaha Complex, P.O. Box: 4019, Salmiya, Kuwait	+9655710801	+9655710803

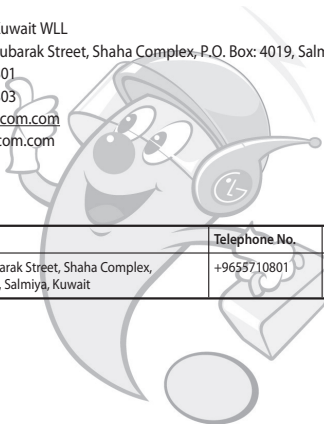


BAHRAIN

Headquarter

- ❑ Agent Name : AJM Kooheji & Sons
- ❑ Address : P.O. Box 74, Manama Bahrain.
- ❑ Telephone No. : +97317403304
- ❑ Fax No. : +97317403800
- ❑ Web Site : <http://www.ajmkooheji.com>
- ❑ Email : habib@ajmkooheji.com

Service Centers

Area	Address	Telephone No.	Fax No.
Sehla	P.O. Box 74, Manama Bahrain.	+97317401919	+97317405654

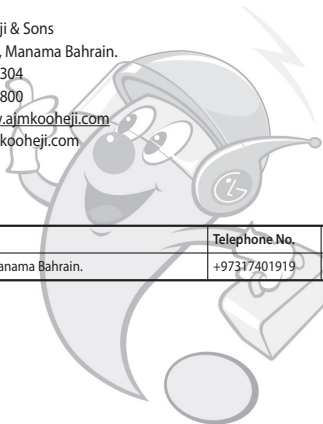

BAHRAIN

Headquarter

- ❑ Agent Name : Cellucom WLL
- ❑ Address : Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain
- ❑ Telephone No. : +97317294026
- ❑ Fax No. : +97317294046
- ❑ Web Site : <http://cellucom.com>
- ❑ Email : info@cellucom.com

Service Centers

Area	Address	Telephone No.	Fax No.
Manama, Bahrain	Shop no 5&6, Gosi commercial Complex, Manama, Kingdom of Bahrain	+97317294026	+97317294046



BAHRAIN

Headquarter

- ❑ Agent Name : Fono
- ❑ Address : Gosi Complex, Exhibition Rd, Manama, Bahrain
- ❑ Telephone No. : 00973 17312001
- ❑ Fax No. : 00973 17310884
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : fcc@almoayyedintl.com.bh

Service Centers in Bahrain

Area	Address	Telephone No.	Fax No.
Bahrain	Fono, Gosi Complex, Exhibition Rd, Manama, Bahrain	00973 17312001	00973 17310884


YEMEN

Headquarter

- ❑ Agent Name : Al Mutarreb
- ❑ Address : Hada st. Al Mutarreb for Trading, P.O. Box-19272
- ❑ Telephone No. : +9671503240
- ❑ Fax No. : +9671500878
- ❑ Email : mutarreb@y.net.ye

Service Centers

Area	Address	Telephone No.	Fax No.
Yemen	Hada st. Al Muttrieb for Trading P.O. Box 19272	+9671503240	+9671500878

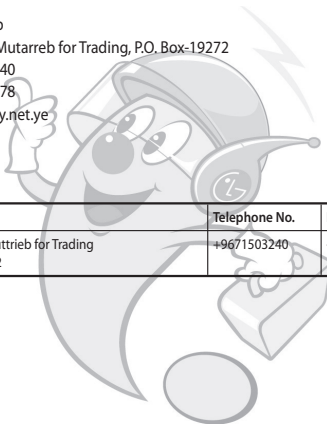

IRAQ

Headquarter

- ❑ Agent Name : Al-Seera Communication Company
- ❑ Address : 14th Ramadan Road, Al-Mansour Street, Baghdad, Iraq
- ❑ Telephone No. : +9647901393615
- ❑ Fax No. : +96415427798
- ❑ Web Site : <http://www.alseera.com>
- ❑ Email : seeracom@hotmail.com, mohammed_d_r@hotmail.com

Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	14th Ramadan Road, Al Mansour Street	+9647901393615	+96415427798



IRAQ

Headquarter

- ❑ Agent Name : Delta General Trading
- ❑ Address : #907 Al Riqqa Palace, Al Maktoum St. P.O. Box 112121 Dubai UAE
- ❑ Telephone No. : +97142249159
- ❑ Fax No. : +97142249079
- ❑ Web Site : <http://www.deltairaq.net>
- ❑ Email : haydar.hussain@deltairaq.net

Service Centers

Area	Address	Telephone No.	Fax No.
Baghdad	Street 13-Bldg.5/7 Mahalla 609, Mansour Baghdad, Iraq	+9647901905965	
Erbil	30th Metru St. Near to Bayiz Café, Erbil Iraq	+964662540070	+964662540071
Bashra	El Jazaier St. Bldg.139/54, No. 1 in front of Lahim Ibageem Eljandoul Restaurant, Bashra Iraq	+96440622146	


EGYPT

Headquarter

- ❑ Agent Name : Delta Communication
- ❑ Address : 39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt
- ❑ Telephone No. : +2027487100 (LG Customer Information Center: 19960)
- ❑ Fax No. : +2025201241
- ❑ Email : salahezz@delta-group.org

Service Centers

Area	Address	Telephone No.	Fax No.
Nasar City	39 M Tawfik Diab – Makram Ebied, Nasar City, Egypt	+2027487100	+2025201241

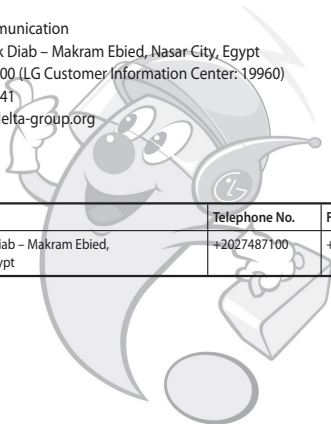

EGYPT

Headquarter

- ❑ Agent Name : Axiom Telecom
- ❑ Address : 8, Al Oboor Buildings, Salah Salem Street, Cairo, Egypt
- ❑ Telephone No. : 002 02 4015050/4013939
- ❑ Fax No. : 002 02
- ❑ Web Site : www.axiomtelecom.com
- ❑ Email : menon@axiomtelecom.com

Service Centers

Area	Address	Telephone No.	Fax No.
AXIOM-CAIRO	3, Abdul Fida Street, Zamalik, Cairo Province, Egypt	002 02 7377881	002 02 7377882
AXIOM- ALEXAN- DRIA	10, Victoria Square Amanwel, Zahrat Al Kotn Building, Somooha, Alexandria, Egypt	002 02 4242529	


SYRIA

Headquarter

- ❑ Agent Name : ECC (Z.Ghreiwati Sons Co.)
- ❑ Address : Abo Romaneh Shakib Arslan str.
- ❑ Telephone No. : +963113347720/1/3/4/5/6, +963113347465
- ❑ Fax No. : +963113333825
- ❑ Email : ecc@net.sy

Service Centers

Area	Address	Telephone No.	Fax No.
Damascus	Kaboon – facing the bus Pullman station	+963119345	+963114537010
Aleppo	Jameilia beside Alseddeik Mosque	+963212284002	+963212122367

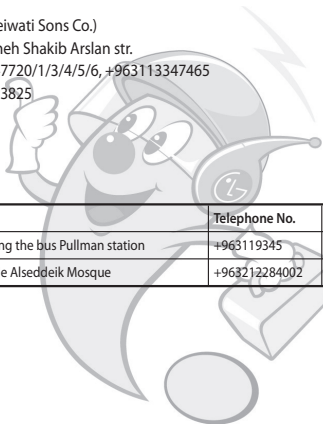


JORDAN

Headquarter

- ❑ Agent Name : Itisalcom Company
- ❑ Address : Lana Complex bldg, Al Rabeyah, Amman, Jordan
- ❑ Telephone No. : +96265510137
- ❑ Fax No. : +96265539358
- ❑ Email : lgsupport@nets.com.jo

Service Centers

Area	Address	Telephone No.	Fax No.
Amman	Al Rabeyah, Amman, Jordan	+96265510137	+96265539358

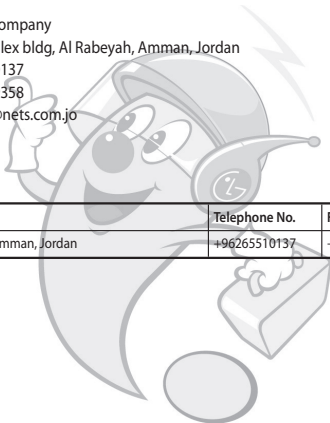

Life's
Good



Africa Countries

- Morocco
- Tunisia
- Libya
- Algeria
- Kenya
- Nigeria
- South Africa

MOROCCO

Headquarter

- ❑ Agent Name : LGEMC (LG Electronics Morocco S.A.R.L)
- ❑ Address : Immeuble 2, Zenith Millenium, Sidi Maarouf, Lotissement Attawfiq, casa, Morocco
- ❑ Telephone No. : 081005454 (LG Customer Information Center)
- ❑ Fax No. : +21222975959
- ❑ Email : abdelhamid@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Cetelec	5 rue Albouhtouri casa anfa Maroc	+21222270790	+21222203748
Lineatec	105 Avenue Fal ould oumaeir Number 1, Agdal, Rabat	+2123776506	+21237671040


TUNISIA

Headquarter

- ❑ Agent Name : TTE (Tunisian Telecom Electric Distribution)
- ❑ Address : Tunisian telecom Distribution, 22 Rue 8600 ZI Charguia, Tunis, Tunisia
- ❑ Telephone No. : +21670838424
- ❑ Fax No. : +21670838422
- ❑ Web Site : <http://www.tte.com.tn>
- ❑ Email : f.hamdi@tte.com.tn

Service Centers

Area	Address	Telephone No.	Fax No.
Tunis	22 Rue 8600 ZI Charguia, Tunis, Tunisia	+21670838424	+21670838422

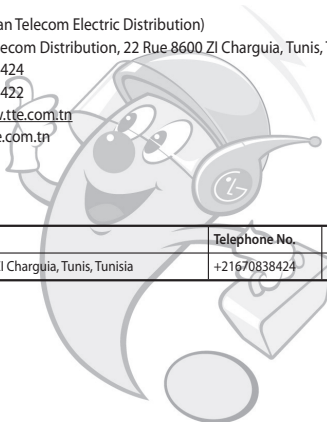

LIBYA

Headquarter

- ❑ Agent Name : PCNA (PC North Africa Company)
- ❑ Address : Noofleen ben Jaber Street, Benghazi, Libya.
- ❑ Telephone No. : +218213405695
- ❑ Fax No. : +218213405957
- ❑ Email : nafrica@ltnet.net, ahmad_al_shebani@hotmail.com

Service Centers

Area	Address	Telephone No.	Fax No.
Benghazi	Islamic center	+218619094079	+218619094079
Tripoli	Aldhara, Al Wadan Street	+218213344333	+218213344333
Mostra	Aldees Street	+21851626294	+21851626294



ALGERIA

Headquarter

- ❑ Agent Name : Algerika
- ❑ Address : 409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger.
- ❑ Telephone No. : +21321917494
- ❑ Fax No. : +21321917505
- ❑ Email : garantie@algerie-k.com

Service Centers

Area	Address	Telephone No.	Fax No.
Algiers	409, Lotissement El-Bouroudj, Ain-Allah Delly Brahim Alger	+21321917494	+21321917505



KENYA

Headquarter

- ❑ Agent Name : Skytel Limited
- ❑ Address : Wilson Airport, PO Box 42444, Nairobi, Kenya
- ❑ Telephone No. : +25420252240/1
- ❑ Fax No. : +25420252240
- ❑ Email : alex.kabuagi@xcom.co.ke

Service Centers

Area	Address	Telephone No.	Fax No.
Nairobi	Wilson Airport, PO Box 42444, Nairobi, Kenya	+25420252240/1	+25420252240




NIGERIA

Headquarter

- ❑ Agent Name : LGEAL (LG Electronics Antwerp Logistics N.V.)
- ❑ Address : 65C, Opebi Road, Ikeja Lagos. Nigeria
- ❑ Telephone No. : +23418935454 (LG Customer Information Center)
- ❑ Fax No. : +23417936510, 4977753
- ❑ Email : cland@lge.com

Service Centers

Area	Address	Telephone No.	Fax No.
Lagos	65C, Opebi Road, Ikeja Lagos. Nigeria	+23418927777	+23417936510

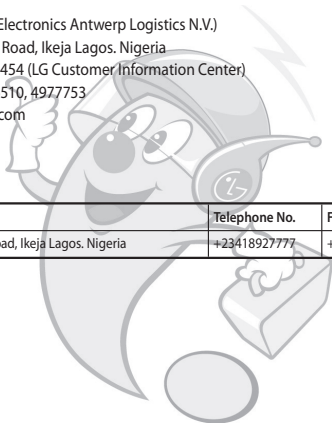

SOUTH AFRICA

Headquarter

- ❑ Agent Name : LG Electronics (Customer Care Only, no on-site repairs)
- ❑ Address : 181 Barbara Road, Elandsfontein, Johannesburg, SA
- ❑ Telephone No. : +27861545454
- ❑ Fax No. : +27115716969
- ❑ Web Site : <http://www.lgmobile.com>

Customer Care only (no on-site repairs)

Area	Address	Telephone No.	Fax No.
Elandsfontein, Johannesburg	181 Barbara Road, Elandsfontein, Johannesburg, SA	+2711861545454	+27115716969


SOUTH AFRICA

Headquarter

- ❑ Agent Name : LG Mobile Care Lounge
- ❑ Address : Monte Casino, Fourways
- ❑ Telephone No. : +27115110185
- ❑ Fax No. : +27115510189
- ❑ Email : <http://www.lgmobile.com>

Service Centers

Area	Address	Telephone No.	Fax No.
Fourways, Johannesburg	Monte Casino, Fourways, Johannesburg, SA.	+27115110185	+27115510189

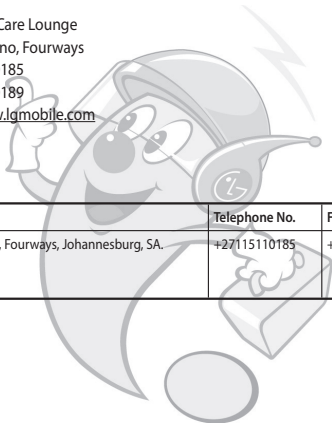


SOUTH AFRICA

Headquarter

- ❑ Agent Name : IXIA
- ❑ Address : 44 Old Pretoria Rd, Midrand, Blue Glass Building
- ❑ Telephone No. : +27116558118
- ❑ Fax No. : +27866340735
- ❑ Web Site : <http://www.ixia.co.za>
- ❑ Email : silvin@ixia.co.za

Service Centers

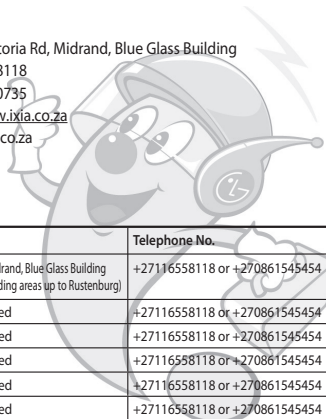

Area	Address	Telephone No.	Fax No.
Midrand Johannesburg	44 Old Pretoria Rd, Midrand, Blue Glass Building (Gauteng and surrounding areas up to Rustenburg)	+27116558118 or +270861545454	+27866340735
Durban	Collection arranged	+27116558118 or +270861545454	+27866340735
Cape Town	Collection arranged	+27116558118 or +270861545454	+27866340735
Port Elizabeth	Collection arranged	+27116558118 or +270861545454	+27137554183
East London	Collection arranged	+27116558118 or +270861545454	+27866340735
Newcastle	Collection arranged	+27116558118 or +270861545454	+27866340735
Polakwane	Collection arranged	+27116558118 or +270861545454	+27866340735
Bloemfontein	Collection arranged	+27116558118 or +270861545454	+27866340735
Kimberley	Collection arranged	+27116558118 or +270861545454	+27866340735

SOUTH AFRICA

Headquarter

- ❑ Agent Name : Cumi Electronics
- ❑ Address : Atlas Lifestyly Center, 1st Floor Cnr Atlas & Northrand Rd, Bardene, Boksburg
- ❑ Telephone No. : +27119186851
- ❑ Fax No. : +27865159850
- ❑ Email : pclark@cumi.co.za

Service Centers

Area	Address	Telephone No.	Fax No.
Boksburg Johannesburg	Atlas Lifestyly Center, 1st Floor Cnr Atlas & Northrand Rd, Bardene, Boksburg	+27119186851/7	+27865159850




SOUTH AFRICA

Headquarter

- ❑ Agent Name : Pope & Sons
- ❑ Address : 2 Marais Street, Durbanville, Cape Town
- ❑ Telephone No. : +27119751888
- ❑ Fax No. : +27119765800
- ❑ Email : kevin@itecape.com

Service Centers

Area	Address	Telephone No.	Fax No.
Durbanville, Cape Town	2 Marais Street, Durbanville, Cape Town	+27119751888	+27119765800

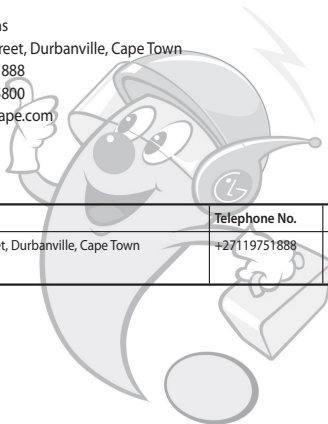

SOUTH AFRICA

Headquarter

- ❑ Agent Name : Vodacare
- ❑ Address : ARC, Ground Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley, Midrand, SA
- ❑ Telephone No. : +27(0)821944
- ❑ Fax No. : +27115464005
- ❑ Web Site : <http://www.vodacom.co.za>
- ❑ Email : vodacarecallcentre@vodacom.co.za

Service Centers (please refer to www.vodacom.co.za for outlets in your region)

Area	Address	Telephone No.	Fax No.
Midrand	ARC, Ground Floor, east wing, Vodacom Service Park, Vodacom Boulevard, Vodavalley, Midrand, SA	+27115464039	+27115464005

SOUTH AFRICA

Headquarter

- ❑ Agent Name : MTN SP
- ❑ Address : 311 15th Rd, Midrand, Johannesburg, SA
- ❑ Telephone No. : +27118484329
- ❑ Fax No. : +27118484445
- ❑ Web Site : <http://www.mtn.co.za>
- ❑ Email : theart_m@mtn.co.za

Service Centers (please refer to www.mtn.co.za for outlets in your region)

Area	Address	Telephone No.	Fax No.
Midrand	311 15th Rd, Midrand, Johannesburg, SA	+27118484329	+27118484445



Life's
Good



Other Countries

- Turkey
- Pakistan

TURKEY

Headquarter

- ❑ Agent Name : Teleservice Int. Telefon
- ❑ Address : Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul
- ❑ Telephone No. : +90 216 - 545 04 04
- ❑ Fax No. : +90 216 - 544 56 56
- ❑ Web Site : <http://www.teleservice.com>
- ❑ Email : handan.ozcelik@teleservice.com

Service Centers

Area	Address	Telephone No.	Fax No.
Istanbul	Dr. Fahrettin Kerim Gökay Cad. No:31-1 Altunizade Üsküdar TR-34662 Istanbul	+90 216 - 545 04 04	+90 216 - 544 56 56
Istanbul	Ataturk Cad. Bağlarbaşı Mah. Cagla Sok. No: 9 Maltepe 34848 Istanbul Turkey	+90 216 - 458 97 97	+90 216 - 458 65 55
Ankara	Necatibey Cad. No:33/B Sıhhiye / Cankaya / Ankara	+90 312 - 230 55 30	+90 312 - 230 55 57
Diyarbakır	İnönü Cad. 4/C Büyük Hotel Altı Dağkapı TR-21090 Diyarbakır	+90 412 - 228 77 85	+90 412 - 228 80 88
Izmir	Gazi Bulvarı No:90/B TR-35230 Çankaya/Izmir	+90 232 - 445 86 00	+90 232 - 445 77 75

PAKISTAN

Headquarter

- ❑ Agent Name : New Allied Mobile Communication
- ❑ Address : 3/3 Ground Floor, Rabbiya Garden, M.C.H.S., Shaheed-e-Millat Road, Karachi, Pakistan.
- ❑ Telephone No. : +92214388271/74
- ❑ Fax No. : +92214388278
- ❑ Email : zpalg@yahoo.com

Service Centers

Area	Address	Telephone No.	Fax No.
Karachi	N-1, 4th Floor, Al -Haroon, 10 Aga Khan III Road, Karachi. 74400.	+92212729722	+92212729722
Lahore	Suite # 10, 2nd Floor Hafeez Centre Gulburg III, Lahore	+92425759157	+92425714684
Multan	352 Hithar Road Behind Hussain Agahi Road, Multan	+926145184012	+92616561456
Faisalabad	63, Gulistan Market, Street # 3, Near Taj Cinema, Railway Road, Faisalabad	+92412640655	-
Islamabad	2 / B, N.H.S.P Centre, Near Utility Store Head Office, Fazal-e-Haq Road, Blue Area	+925128282734	+92512828234



Visit us on
<http://www.lgservice.com>
<http://www.lgmobile.com>

LG YETKİLİ SERVİSLERİNE BAŞVURU FORMU

LG'yi seçtiğiniz için teşekkür ederiz. Artık, LG kalitesine ve teknolojiyle üretilmiş bir telefona sahipsiniz. LG telefonunuz mutlu günlerde kullanmanızı dileriz. Telefonunuzda, doğabilecek her türlü sorun için Yetkili Servislerimize başvurabilirsiniz. LG telefonunuzu Yetkili Servis Merkezlerimize kendiniz bırakabilir yada kargo ile gönderebilirsiniz.

Telefonunuzu LG Yetkili Servisine bırakıyorsanız, Lütfen;

- Cihazınızı LG yetkili servisine teslim ettiğinizde, "Cihaz Takip Formu" alınız,
- Cihazınızın onarım durumu hakkında bilgi almak için gereken, "Cihaz Takip Formu" nun sağ üst köşesinde yer alan sıra numarasını belirleyiniz,
- Cihazınızı teslim almak için, LG Yetkili Servisine gelirken, "Cihaz Takip Formu" nuzu getiriniz.

Cihazınızı LG Yetkili Servisine Kargo ile gönderiyorsanız, Lütfen;

- Size en yakın merkezimizi arayıp, garanti içi işlemler için ücretsiz kargo hizmeti hakkında bilgi alınız,
- Cihazınızın garanti kapsamında onarımı için telefonunuzla birlikte bayi kaşeli ve imzalı garanti belgesini veya faturanızın kopyasını gönderiniz,
- Telefonunuzu göndermeden SIM kartını çıkarınız,
- Şarjla ilgili arızalarda pil ve şarj cihazını da gönderiniz,
- Cihazınızla ilgili sorunlarınızı içeren yazılı notları pakete ekleyiniz,
- Daha sonra bilgi alabilmek için, cihazınızın pilli altındaki etiket üzerinde, telefon kutusunun dış yüzeyinde, faturanızda ve garanti belgenizde bulabileceğiniz telefonun 15 haneli IMEI numarasını not ediniz,
- Kargo şirketinin size vereceği gönderi fişini saklayınız.

NOT: Telefonunuzun garanti belgesinde belirtilen haklardan yararlanabilmeniz için, fatura ve garanti belgesinin satış sırasında eksiksiz doldurulması, kullanım kılavuzu ile garanti belgesindeki uyarılara dikkat edilmesi gerekir.



Yetkili Servis Merkezleri

İSTANBUL TELESERVICE INT.

Prof. Dr. Fahrettin Kerim Gökay Cd. No: 31-1 Altunizade / İSTANBUL Tel: (0216) 544 56 44
Faks: (0216) 544 56 56 e-mail: mhistanbul@teleservice.com
Maltepe servis merkezi: Atatürk Cad. Bağlarbasi Mah. Çağla Sok. No: 9 Maltepe 34848 / İSTANBUL
Tel: (0216) 458 97 97 Faks: (0216) 458 65 55

ANKARA TELESERVICE INT.

Necatibey Cad. No:33/B Sıhhiye / Cankaya ANKARA Tel: (0312) 230 55 30
Faks: (0312) 230 55 57 e-mail: mhankara@teleservice.com

İZMİR TELESERVICE INT.

Gazi Bulvarı No: 90/A Çankaya / İZMİR Tel: (0232) 445 86 00
Faks: (0232) 445 77 75 e-mail: mhizmir@teleservice.com

DIYARBAKIR TELESERVICE INT.

İnönü Cd. 4/C Büyük Otel Altı Dağkapi / DİYARBAKIR Tel: (0412) 228 77 85
Faks: (0412) 228 80 88 e-mail: mhdiyarbakir@teleservice.com

LG GÜNEY KORE FABRİKA

CHEONGHO-RI 19-1, JINWUY-MYUN, PYUNGTAIK-CITY, KYUNGGI-DO 451-713 GÜNEY KORE
Tel: +82-31 686-2351 Faks: +82-31 686-2316

LG CALL CENTER Tel: (0212) 289 99 99 – 332 26 00 Faks: (0212) 289 95 81
e-mail: lgdestek@panel.gen.tr – lgdestek1@panel.gen.tr

<http://tr.lge.com>

