



Life's Good...  
when it's green

عربي  
ENGLISH

دليل مستخدم GD510

Life's Good...  
when it's green

ENGLISH  
عربي



## دليل مستخدم GD510

## GD510 User Guide



Green features  
of this manual



دليل المستخدم هذا مصنوع من 35% من أوراق معاد تصنيعها ومطبوع بحبر من الصويا.

CE0168

www.lgmobile.com

P/N : MMBB0356771 (1.0)

LG ELECTRONICS INC.



Green features  
of this manual



This manual is used 35% of recycled paper and printed with soy inks.

CE0168

www.lgmobile.com

P/N : MMBB0356771 (1.0)

Bluetooth QD ID B015736



قد تختلف بعض المحتويات الموجودة في هذا الدليل  
عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر  
الخدمة.

## دليل مستخدم GD510

تهانينا لشراءك هاتف GD510 المتقدم والصغير من LG.  
والمصمّم للعمل مع التكنولوجيا الرقمية الأحدث لاتصالات  
الهواتف المحمولة.

## المحتويات


22.....	الأسماء	6.....	التعريف على الهاتف الخاص بك
22.....	البحث عن جهة اتصال	7.....	نظرة على الهاتف وهو مفتوح
22.....	إضافة جهة اتصال جديدة	8.....	تثبيت بطاقة SIM و البطارية
22.....	إنشاء مجموعة	9.....	شحن الهاتف
23.....	تغيير إعدادات الأسماء	10.....	بطاقة الذاكرة
23.....	عرض المعلومات	11.....	خريطة القوائم
24.....	الرسائل	12.....	باستخدام شاشة اللمس
24.....	إرسال رسالة	12.....	تلميح شاشة اللمس
24.....	إدخال النص	12.....	التحكم بشاشة اللمس
24.....	وضع T9	13.....	الشاشة الرئيسية الخاصة بك
25.....	التعريف على الكتابة اليدوية	14.....	المفاتيح السريعة
25.....	إعداد البريد الإلكتروني	15.....	شريط الحالة
25.....	استرداد رسائل البريد الإلكتروني	16.....	ATMT
	إرسال بريد إلكتروني باستخدام	17.....	المكالمات
25.....	حسابك الجديد	17.....	إجراء مكالمة
25.....	تغيير إعدادات البريد الإلكتروني	17.....	إجراء مكالمة من الأسماء
26.....	حافظات الرسائل	17.....	الرد على مكالمة ورفضها
26.....	تغيير إعدادات الرسائل النصية	18.....	خيارات أثناء المكالمة
26.....	تغيير إعدادات رسائل الوسائط المتعددة	19.....	الاتصال السريع
27.....	تغيير الإعدادات الأخرى	19.....	إجراء مكالمة ثانية
28.....	الكاميرا	19.....	عرض سجلات المكالمات
28.....	التعرف على محدّد المنظر	20.....	استخدام تحويل المكالمات
29.....	التقاط صورة سريعة	20.....	استخدام حظر المكالمات
29.....	بعد التقاط الصورة	21.....	تغيير إعداد المكالمات العام
30.....	استخدام الإعدادات المتقدمة		

# المحتويات

39.....	المستندات	31.....	كاميرا الفيديو
39.....	نقل ملف إلى هاتفك	31.....	التعرّف على محدّد المنظر
39.....	أخرى	32.....	إنشاء فيديو سريع
39.....	استوديو الأفلام	32.....	بعد إنشاء الفيديو
39.....	إنشاء فيلم	33.....	استخدام الإعدادات المتقدمة
40.....	الموسيقى	34.....	الصور و مقاطع الفيديو
40.....	نقل الموسيقى إلى الهاتف	34.....	عرض الصور وملفات الفيديو
40.....	تشغيل أغنية	34.....	التقاط صورة من فيديو
41.....	إنشاء قائمة تشغيل	34.....	مشاهدة الصور كعرض شرائح
41.....	راديو FM	35.....	تعيين صورة كخلفية الشاشة
41.....	البحث عن محطات	35.....	تعديل الصور
41.....	إعادة تعيين القنوات	36.....	إضافة تأثير إلى صورة
42.....	منظم المواعيد	37.....	الوسائط المتعددة
42.....	إضافة حدث إلى التقويم	37.....	الصور
42.....	إضافة عنصر إلى قائمة المهام	37.....	إرسال صورة
42.....	استخدام الباحث عن التاريخ	37.....	استخدام صورة
43.....	إضافة مذكرة	37.....	طباعة صورة
43.....	إعداد المنبه	38.....	نقل صورة أو نسخها
43.....	إضافة مذكرة بواسطة لوحة الرسم	38.....	الأصوات
44.....	مسجل الصوت	38.....	استخدام صوت
44.....	تسجيل ملف صوتي أو صوت	38.....	ملفات الفيديو
44.....	استخدام الحاسبة	38.....	مشاهدة فيديو
44.....	تحويل وحدة	38.....	إرسال فيديو كليب
45.....	إضافة مدينة إلى ساعتك العالمية	38.....	الألعاب والتطبيقات
45.....	استخدام ساعة الأيقاف	38.....	لعبة لعبة
45.....	التعرف على الشجرة الحامية للبيئة		


53.....	إرسال الملفات واستلامها باستخدام بلوتوث.....	45.....	التعرّف على الحاسبة البيئية.....
54.....	الاقتران بجهاز بلوتوث آخر.....	46.....	مزامنة الكمبيوتر الشخصي.....
54.....	استخدام سماعة رأس بلوتوث.....	46.....	تثبيت LG PC Suite على الكمبيوتر.....
54.....	تحديث البرنامج.....	46.....	توصيل الهاتف والكمبيوتر.....
55.....	الملحقات.....		نسخ احتياطي للمعلومات على الهاتف
56.....	البيانات التقنية.....	46.....	واستعادتها.....
57.....	إرشادات لاستخدام آمن وفعال.....	46.....	عرض ملفات الهاتف على الكمبيوتر.....
		47.....	مزامنة الأسماء.....
		47.....	مزامنة الرسائل.....
		47.....	استخدام الهاتف كجهاز تزامن الموسيقى....
		48.....	الويب.....
		48.....	الوصول إلى ويب.....
		48.....	إضافة الإشارات المرجعية والوصول إليها.....
		48.....	استخدام قارئ RSS.....
		49.....	حفظ صفحة.....
		49.....	الوصول إلى صفحة محفوظة.....
		49.....	عرض محفوظات المتصفح.....
		49.....	تغيير إعدادات متصفح ويب.....
		49.....	استخدام الهاتف كمودم.....
		51.....	الإعدادات.....
		51.....	تخصيص الأوضاع.....
		51.....	تغيير إعدادات الشاشة.....
		51.....	تغيير إعدادات الهاتف.....
		52.....	تغيير إعدادات التوصيل.....
		52.....	استخدام إدارة الذاكرة.....

# التعرّف على الهاتف الخاص بك

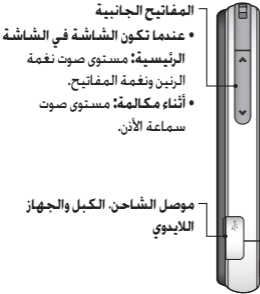

⚠ تحذير: قد يؤدي وضع شيء ثقيل الوزن على الهاتف أو الجلوس عليه عند وجوده في جيبك إلى إلحاق ضرر بوظيفة شاشة LCD وشاشة اللمس.

## نظرة على الهاتف وهو مفتوح

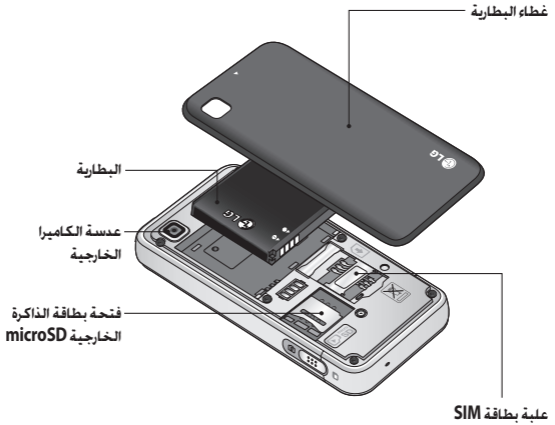

# تثبيت بطاقة SIM و البطارية

## 1 نزع غطاء البطارية

حرّك غطاء البطارية نحو أسفل الهاتف  
وبعيداً عنه.




⚠ تحذير: لا تستخدم أظافرك لإخراج  
البطارية.

⚠ تحذير: لا تقم بإزالة البطارية عندما  
يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك  
إلى إلحاق الضرر بالهاتف.


## 3 تركيب البطارية

أدخل الجانب الأيمن من البطارية في الجهة  
العليا لحجرة البطارية أولاً.  
تأكد من محاذاة ملامسات البطارية مع أطراف  
توصيل الهاتف. اضغط الجانب الأيسر من  
البطارية إلى الأسفل حتى تستقر في مكانها.

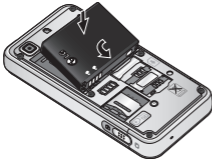

## 2 تثبيت بطاقة SIM

قم بتمرير بطاقة SIM إلى داخل حاملها وتأكد  
من كون ناحية الموصلات الذهبية الموجودة  
على البطاقة موجهة نحو الأسفل. احرص على  
إزالة البطارية من الهاتف قبل تثبيت بطاقة  
SIM. لإزالة بطاقة SIM، اسحبها بلطف في  
الاتجاه المعاكس.

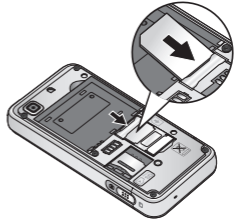

## شحن الهاتف



قم بإزالة غطاء مقبس الشاحن الموجود في جانب الهاتف GD510. قم بتوصيل مهبط السنفرة (الشاحن) وكابل USB المضمّن. قم بتوصيل كابل USB في الهاتف وقم بتوصيله بمقبس الكهرباء. يجب أن يتم شحن الهاتف GD510 حتى تظهر على الشاشة رسالة تشير إلى أن "البطارية ممتلئة".

**ملاحظة:** يجب أن يتم شحن البطارية بالكامل أولاً لتحسين فترة عمل البطارية. تجاهل رسالة "البطارية الممتلئة" الأولى واترك الهاتف في الشحن ليلاً.



غطاء البطارية الذي يحتوي على الخلايا الشمسية متاح وبيع بشكل منفصل. يرجى الاتصال بالتاجر الذي اشتريته منه الهاتف.

[www.lgmobile.com](http://www.lgmobile.com)

\* قد لا يكون متوفر في جميع المتاجر .

## بطاقة الذاكرة

### تركيب بطاقة ذاكرة



يمكنك توسيع مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة microSD.

ملاحظة: بطاقة الذاكرة هي عبارة عن ملحقات اختياري.

1 انزع غطاء البطارية.

2 اضغط فتحة بطاقة الذاكرة الخارجية microSD لتحرير القفل.

3 اقلب الفتحة لأعلى.

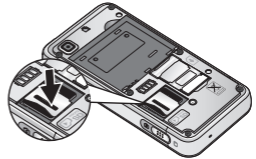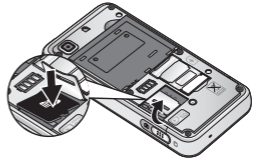

4 ضع بطاقة الذاكرة الخارجية microSD على

غطاء البطاقة. تأكد من كون ناحية الموصلات


الذهبية موجهة نحو الأسفل.

5 اقلب الفتحة لأسفل ثم ادفعها للإقفال.

6 قم باستبدال الغطاء.

### تهيئة بطاقة الذاكرة

قد تكون بطاقة الذاكرة مهياً أصلاً. إذا لم تكن مهياً، ستحتاج إلى تهيئتها قبل البدء باستخدامها.

1 في الشاشة الرئيسية حدد ، ثم إعدادات الهاتف في علامة التبويب الإعدادات.


2 المس معلومات الذاكرة ثم اختر الذاكرة الخارجية.

3 المس تهيئة ثم أكد خيارك.

4 أدخل كلمة المرور إذا كان قد تم تعيين واحدة. ستتم تهيئة البطاقة وتصبح جاهزة للاستخدام.

ملاحظة: إذا تضمنت بطاقة الذاكرة محتوى موجوداً، فقد تختلف بنية الحافظة بعد التهيئة بما أنه تم حذف كل الملفات.

# خريطة القوائم

المس  في الشاشة الرئيسية لفتح القائمة العلوية. من هنا يمكنك الوصول إلى المزيد من القوائم عبر التمرير من خلال الرموز: الاتصال، الترفيه، أدوات المساعدة و الإعدادات.

## الترفيه

- الكاميرا 
- الاستوديو 
- أشياء 
- الموسيقى 
- الألعاب والتطبيقات 
- راديو FM 
- كاميرا الفيديو 
- استوديو الأفلام 

## اتصال

- الأسماء 
- سجلات المكالمات 
- الرسائل 
- البريد الإلكتروني 
- الاتصال 
- البحث عن جهة اتصال 
- الاتصالات السريعة 
- رسالة جديدة 

## الإعدادات

- الأوضاع 
- إعدادات الشاشة 
- إعدادات الهاتف 
- إعدادات المكالمات 
- بلوتوث 
- إعدادات اللمس 
- التوصيل 
- إعدادات الرسائل 

## الأدوات المساعدة

- المتصفح 
- بحث في Google 
- المنبهات 
- المنظم 
- المذكرة 
- مسجل الصوت 
- الأدوات 
- لوحة الرسم 

# باستخدام شاشة اللمس

## التمرير

قم بالسحب من جهة إلى جهة للتمرير.  
على بعض الشاشات، كقائمة محفوظات  
المكالمات، يمكنك أيضاً التمرير لأعلى أو لأسفل.



## تلميحَات شاشة اللمس

- لتحديد عنصر، الممس وسط الرمز.
- لا حاجة إلى الضغط بقوة. فشاشة اللمس حساسة بشكل كافٍ يتيح لها التعرف على لمسة خفيفة ولكن ثابتة.
- استخدم رأس إصبعك للتمس الخيار المطلوب.
- احترس من عدم لمس أي مفاتيح أخرى.
- عندما لا يكون الهاتف GD510 قيد الاستخدام، يعود إلى شاشة القفل.

## التحكم بشاشة اللمس

تتغير مفاتيح التحكم في شاشة لمس الهاتف GD510 بسرعة، وهذا يتوقف على المهمة التي تقوم بها.



## فتح التطبيقات

لفتح أي تطبيق، الممس الرمز.



## الشاشة الرئيسية الخاصة بك

يمكنك أن تقوم بسحب وإفلات ما تحتاج إليه فوراً في كل أنواع الشاشات الرئيسية.

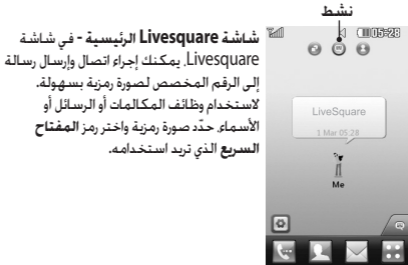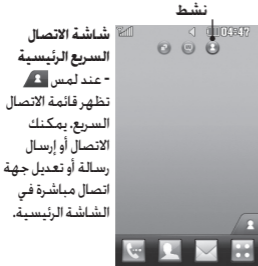

**تلميح!** تعتمد واجهة المستخدم على ثلاثة أنواع شاشات رئيسية. للتبديل بين الشاشات الرئيسية قم بالمسح بسرعة فوق الشاشة من اليمين إلى اليسار أو من اليسار إلى اليمين.

# الشاشة الرئيسية الخاصة بك

## المفاتيح السريعة

توفر المفاتيح السريعة الموجودة على الشاشة الرئيسية وصولاً سهلاً بمجرد لمسة واحدة إلى أكثر الوظائف استخداماً.

المس لفتح الأسماء. للبحث عن الرقم الذي تريد الاتصال به. أدخل اسم جهة الاتصال في أعلى الشاشة مستخدماً لوحة اللمس. يمكنك إنشاء جهات اتصال جديدة وتعديل الأسماء الموجودة.



المس لإحضار لوحة الاتصال بواسطة اللمس لإجراء مكالمة.



المس لفتح القائمة العلوية الكاملة التي تنفصل إلى أربع فئات.



المس للوصول إلى قائمة الرسائل. من هنا يمكنك إنشاء رسالة نصية (SMS) أو رسائل وسائط متعددة (MMS) جديدة. أو عرض حافظة الرسائل.



## شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة والرسائل الجديدة وفترة عمل البطارية، وكذلك لإعلامك ما إذا كان بلوتوث أو GPRS نشطاً.

يفسر الجدول التالي معنى الرموز التي قد تشاهدها على شريط الحالة.

الوصف	الرمز
فشل إرسال رسالة الوسائط المتعددة	
تم تعيين منبه	
الوضع المخصص قيد الاستخدام (يختلف الرقم الموجود في الرمز)	
الوضع عادي قيد الاستخدام	
الوضع خارجي قيد الاستخدام	
الوضع صامت قيد الاستخدام	
سماعة الرأس قيد الاستخدام	
المكالمات محوّلَة	
EDGE قيد الاستخدام	
التجوال	
وضع الرحلات الجوية قيد التشغيل	
بلوتوث نشط	
تشغيل الموسيقى الخلفية	
إيقاف مؤقت للموسيقى الخلفية	
تم تمكين بطاقة الذاكرة للاستخدام	

الوصف	الرمز
تعدد المهام	
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
إشارة الشبكة غير متوفرة	
فترة العمل المتبقية للبطارية	
البطارية فارغة	
الغطاء الخلوي الذي يعمل على الطاقة الشمسية مرفق (شمس رمادية)	
الشحن الخلوي على الطاقة الشمسية قيد الاستخدام (شمس برتقالية)	
رسالة نصية جديدة	
رسالة صوتية جديدة	
صندوق الوارد للرسائل ممتلئ	
فشل إرسال الرسالة	


## الشاشة الرئيسية الخاصة بك


## ATMT

### تغيير الحالة من شريط الحالة

المس وسط شريط الحالة لفتح ملخص الحالة. يعرض الوقت الحالي والشبكة ومعرّف SVC والبطارية وذاكرة الهاتف والذاكرة الخارجية والوضع وMP3 وحالة بلوتوث، ويمكنك هنا تعيين نوع الوضع. وتشغيل/ إيقاف تشغيل MP3S مؤقتاً. وتنشيط/إلغاء تنشيط بلوتوث.

### استخدام وظيفة المهام المتعددة

اضغط مفتاح المشغل الخاص بالمهام المتعددة  لفتح قائمة تعدد المهام. من هنا يمكنك عرض كل التطبيقات قيد التشغيل والوصول إليها بلمسة واحدة.

عند وجود تطبيق يجري تشغيله في الخلفية (لعبة أو راديو FM مثلاً)، يظهر  في شريط الحالة.

### جهاز التنبع الخاص بمكافحة سرقة

#### المحمول [ATMT]


- 1 توفر لك وظيفة ATMT إمكانية الحصول على نظام تعقب لمكان تواجد هاتفك في حال فقدته أو وضعته في غير مكانه.
- 2 عندما يقوم شخص غير مصرح به باستخدام هاتفك، يتم إرسال رسالة نصية (SMS) من الهاتف إلى رقم الهاتف الذي عينته في وقت سابق.
- 3 يمكنك تعيين وظيفة ATMT باتباع الخطوات التالية:
  - ابحث عن علامة التبويب الإعدادات من القائمة الرئيسية. وحدد إعدادات الهاتف ثم حدد الحماية.
  - حدد جهاز التنبع الخاص بمكافحة سرقة المحمول
  - قم بتعيين ATMT وحدد تشغيل
  - أدخل رمز ATMT الافتراضي


#### ملاحظة:


- في حال أردت استخدام الهاتف مع بطاقة SIM أخرى. احرص على إيقاف تشغيل وظيفة ATMT.
- يوصى بإدخال الرقم لـ ATMT مع رمز البلد (على سبيل المثال لدولة الإمارات +971 يليه رقم الهاتف)
- رمز ATMT الافتراضي هو "000000".

## المكالمات


### إجراء مكالمة


1 المس  لفتح لوحة المفاتيح.  
2 أدخل الرقم باستخدام لوحة المفاتيح.

3 المس  لبدء المكالمة.  
4 لإنهاء المكالمة. اضغط المفتاح الذكي.

**تلميح!** لإدخال + لإجراء مكالمة دولية. اضغط باستمرار  0+ .



**تلميح!** اضغط على مفتاح التشغيل لإيقاف شاشة اللمس وذلك لمنع إجراء مكالمات عن طريق الخطأ.


1 في الشاشة الرئيسية المس  لفتح الأسماء.  
2 اضغط خانة حقل الاسم في أعلى الشاشة وأدخل الأحرف القليلة الأولى من جهة الاتصال التي تريد الاتصال بها باستخدام لوحة المفاتيح.

3 في القائمة التي تمت تصفيتها. المس رمز المكالمة إلى جانب جهة الاتصال التي تريد الاتصال بها. تستخدم المكالمة الرقم الافتراضي إذا كان هناك أكثر من رقم لجهة الاتصال هذه.  
4 أو يمكنك لمس اسم جهة الاتصال وتحديد الرقم الذي تريد استخدامه إذا كان هناك أكثر من رقم واحد لاستخدامه لجهة الاتصال هذه. يمكنك أيضاً لمس  لبدء الاتصال بالرقم الافتراضي.

### الرد على مكالمة ورفضها

عند رنين الهاتف. المس المفتاح الذكي للإجابة على المكالمة.

لكتعم الرنين. حرك الغطاء إلى الأعلى. يؤدي ذلك إلى إلغاء قفل الهاتف إذا كان مقفلاً. ثم المس  . يُعتبر هذا الأمر مفيداً إذا كنت قد نسيت تغيير وضع الهاتف إلى صامت أثناء حضور اجتماع. المس  لرفض مكالمة واردة.

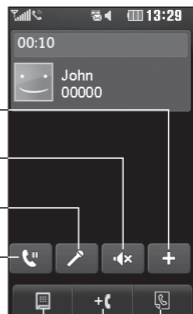

**+** الخيارات - المس لإحضار قائمة بالمزيد من

خيارات أثناء المكالمة.

**⏏** مكبر الصوت - المس لبدء تشغيل مكبر

صوت الهاتف.

**🔇** كتم - المس لإيقاف تشغيل الميكروفون بحيث

لا يتمكن الشخص الذي تتكلم معه من سماعك.

**📞** انتظار - المس لوضع المكالمة قيد الانتظار.

**☰** المس لفتح لوحة مفاتيح رقمية لإجراء مكالمة

ثانية، تسمح لك هذه الوظيفة أيضاً بالتنقل عبر

القوائم مع خيارات مرقمة عند طلب خدمات هاتف

مؤتممة مثل مراكز الاتصال.

**+** المس لإضافة شخص آخر إلى المكالمة.

**🔍** المس للبحث عن الأسماء أثناء إجراء مكالمة.

**تلميح!** للتمرير عبر قائمة خيارات أو قائمة جهات اتصال. المس العنصر الأخير المرئي وقم بتمرير إصبعك إلى أعلى الشاشة. فتتحرك القائمة نحو الأعلى وتحصل على المزيد من العناصر المرئية.

## الاتصال السريع


يمكنك تعيين جهة اتصال تطلبها بشكل متكرر إلى رقم اتصال سريع.

1 حدّد الأسماء في علامة التبويب الاتصال وحدّد الاتصالات السريعة.

2 تم إعداد البريد الصوتي مسبقاً إلى رقم الاتصال السريع 1. ولا يمكنك تغييره. المس أي رقم آخر لتعيينه كجهة اتصال سريع.


3 افتح الأسماء، حدّد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم وذلك بلمس رقم الهاتف الخاص بها مرةً واحدةً. للعثور على جهة اتصال. اضغط مربع حقل الاسم وأدخل الحرف الأول من اسم جهة الاتصال المطلوبة.


## إجراء مكالمة ثانية

1 أثناء المكالمة الأولى. المس  واكتب الرقم الذي تريد الاتصال به.

2 المس  لتوصيل المكالمة.

3 يتم عرض المكالمتين معاً على شاشة المكالمة. ويتم إقفال المكالمة الأولية وبوضع المتصل في حالة الانتظار.

4 للتغيير بين المكالمات. المس  أو اضغط على رقم المكالمة قيد الانتظار.

5 لإنهاء إحدى المكالمتين أو كلاهما اضغط على  ثم حدّد إنهاء بتبعها الكل. قيد الانتظار أو نشط.

**تلميح!** المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة، ووقتها ومدتها.

ملاحظة: سيُفرض عليك رسم مقابل كل مكالمة تجريها.

## عرض سجلات المكالمات

المس سجلات المكالمات في علامة التبويب الاتصال.

**تلميح!** المس أي إدخال لسجل مكالمة واحدة لعرض تاريخ المكالمة، ووقتها ومدتها.

# المكالمات

## استخدام تحويل المكالمات

1 المس إعدادات المكالمات في علامة التبويب إعدادات.

2 المس تحويل المكالمات.

3 اختر ما إذا كنت تريد تحويل المكالمات الصوتية عندما يكون الخط مشغولاً أو عند عدم الرد أو عندما لا يكون الاتصال بك ممكناً.

4 أدخل الرقم الذي تريد أن يتم تحويل المكالمات إليه.

5 المس طلب للتنشيط.

ملاحظة: يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على مزيد من التفاصيل.

**تلميح!** لإيقاف تشغيل كل عمليات تحويل المكالمات، حدّد إلغاء تنشيط الكل من قائمة تحويل المكالمات.

## استخدام حظر المكالمات

1 المس إعدادات المكالمات في علامة التبويب الإعدادات.

2 المس حظر المكالمات.

3 اختر أحد الخيارات السنة أو كلها:

كل الصادرة

المكالمات الدولية الصادرة

المكالمات الدولية الصادرة باستثناء

الوطن

كل الواردة

الواردة عند السفر

إلغاء تنشيط الكل

4 أدخل كلمة مرور حظر المكالمات. يرجى التحقق من توفر هذه الخدمة مع مشغل الشبكة.

**تلميح!** حدّد أرقام الاتصال الثابتة من خيارات إعدادات المكالمات لتنشيط وجميع قائمة بالأرقام التي يمكن الاتصال بها من الهاتف. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

## تغيير إعدادات المكالمات العام

1 المس إعدادات المكالمات في علامة التبويب الإعدادات.

2 قم بالتمرير والمس الإعدادات العامة. من هنا يمكنك تعديل إعدادات الخيارات التالية:

رفض المكالمة - مرر المفتاح إلى التشغيل لتحديد قائمة الرفض. يمكنك لمس مربع النص للاختيار من كل المكالمات أو الأسماء أو المجموعات المحددة أو من الأرقام غير المسجلة (غير المضمنة في الأسماء) أو من دون معرف المتصل. المس حفظ لتغيير الإعداد.

إرسال رقمي - اختر ما إذا كنت ترغب في أن يظهر رقمك عند اتصالك بأحدهم.

معاودة الاتصال التلقائي - مرر المفتاح إلى اليسار

للتشغيل أو إلى اليمين لـ إيقاف التشغيل.

وضع الرد - اختر ما إذا كنت تريد الرد على الهاتف باستخدام مفتاح الإرسال أو أي مفتاح آخر.

منبه الدقائق - مرر المفتاح إلى اليسار لبدء التشغيل لسماع نغمة كل دقيقة خلال فترة المكالمة.

وضع الرد بلوتوث - حدّد لا يدوي لتتمكّن من الرد على مكالمات باستخدام سماعة رأس بلوتوث. أو حدّد هاتف للضغط على مفتاح موجود على الهاتف للرد على مكالمات.

حفظ رقم جديد - حدّد نعم لحفظ رقم جديد.

## 6 عَيِّن جهة الاتصال إلى مجموعة واحدة أو أكثر.

يمكنك تعيين حتى ثلاث مجموعات لجهة الاتصال الواحدة. اختر بين بلا مجموعة أو العائلة أو الأصدقاء أو الزملاء أو المدرسة أو المهتمون جداً.

## 7 كما يمكنك إضافة نغمة الرنين وعيد الميلاد

والذكرى والصفحة الرئيسية وعنوان المنزل واسم الشركة والمهنة وعنوان الشركة والمذكرة وLivecon.

## 8 المس حفظ لحفظ جهة الاتصال.

## إنشاء مجموعة

### 1 المس الأسماء في علامة التبويب الاتصال.

والمس المجموعات.

### 2 المس إضافة مجموعة أو المس وحدد

إضافة مجموعة.

### 3 أدخل اسماً للمجموعة الجديدة. يمكنك أيضاً

أن تحدد نغمة رنين خاصة بالمجموعة.

### 4 المس حفظ.

**ملاحظة:** إذا قمت بحذف مجموعة، فلن تفقد

الأسماء التي كان قد تم تعيينها إلى تلك

المجموعة. ستبقى موجودة في الأسماء.

## البحث عن جهة اتصال

هناك طريقتان للبحث عن جهة اتصال:

### 1 المس الأسماء في علامة التبويب الاتصال.

### 2 المس بحث.

### 3 تظهر قائمة بالأسماء، وعندما تكتب الحرف

الأول من اسم جهة الاتصال في حقل الاسم.

تظهر قائمة بالجهات التي تبدأ بهذا الحرف.

**تلميح!** يتم عرض لوحة المفاتيح الأبجدية حالما تقوم بضغط حقل الاسم.

## إضافة جهة اتصال جديدة

### 1 المس الأسماء في علامة التبويب الاتصال

والمس إضافة جهة اتصال.

### 2 اختر ما إذا كنت تريد حفظ جهة الاتصال في

الهاتف أو SIM.

### 3 أدخل الاسم الأول والأخير.

### 4 يمكنك أن تدخل حتى خمسة أرقام مختلفة

لجهة اتصال واحدة. يتميز كل إدخال بنوع معين

مسبقاً خاص بـ المحمول والمنزل والمكتب

وإعداد الاستدعاء والفاكس.

### 5 إضافة عنواني بريد إلكتروني. يمكنك إدخال

حتى عنواني بريد إلكتروني مختلفين لجهة

الاتصال الواحدة.

## تغيير إعدادات الأسماء

يمكنك تكييف إعدادات جهة الاتصال بحيث تتناسب الأسماء مع تفضيلاتك الخاصة.

1 المس الأسماء في علامة التبويب الاتصال والمس الإعدادات.

2 من هنا يمكنك إعداد الإعدادات التالية:

إعدادات قائمة الأسماء - إعداد سطوع موقع الأسماء. اسم العرض وإعدادات مفتاح الأمر السريع.

نسخ - قم بنسخ الأسماء من الجهاز إلى بطاقة SIM أو من SIM إلى الجهاز. يمكن اختيار واحدة في كل مرة أو الكل دفعة واحدة.

نقل - يعمل هذا الخيار بالطريقة نفسها التي يعمل بها النسخ. غير أنه يتم حفظ جهة الاتصال في الموقع الذي نقلتها إليه فقط.

إرسال كل الأسماء عبر بلوتوث - أرسل كل الأسماء إلى جهاز آخر باستخدام بلوتوث. ستنم مطالبتك ببدء تشغيل بلوتوث إذا قمت بتحديد هذا الخيار.

نسخ احتياطي للأسماء - انظر نسخ احتياطي للمعلومات على الهاتف واستعادتها.

استعادة الأسماء - انظر نسخ احتياطي للمعلومات على الهاتف واستعادتها.

مسح الأسماء - قم بحذف كل الأسماء المتوفرة لديك. اختر بين الهاتف و SIM والمس نعم إذا كنت تريد بالتأكيد مسح الأسماء.

## عرض المعلومات

1 المس الأسماء في علامة التبويب الاتصال والمس المعلومات.

2 من هنا يمكنك عرض أرقام الاتصال بالخدمة والرقم الخاص ومعلومات الذاكرة. (إظهار المساحة الفارغة في الذاكرة) وبطاقة العمل الخاصة بي.


تلميح! لإضافة بطاقة العمل الخاصة بك. حدّد بطاقة العمل الخاصة بي وأدخل التفاصيل كما تقوم عادةً بالنسبة لأي جهة اتصال. المس حفظ للانتهاء.

# الرسائل

## الرسائل

يجمع الهاتف GD510 ميزات إرسال رسائل نصية (SMS) ورسائل وسائط متعددة (MMS) في قائمة واحدة بديهية وسهلة الاستخدام.


## إرسال رسالة


- 1 المس الرسائل في علامة التبويب الاتصال. والمس رسالة جديدة لبدء إنشاء رسالة جديدة.
- 2 المس إدخال لإضافة صورة وملف فيديو وصوت ونموذج وهكذا.
- 3 المس المستلم في أسفل الشاشة لإدخال المستلمين. ثم أدخل الرقم أو المس  لتحديد جهة اتصال. كما يمكنك إضافة جهات اتصال عديدة.
- 4 المس إرسال عندما تصبح جاهزاً.

## إدخال النص


هناك خمس طرق لإدخال نص:

لوحة المفاتيح و لوحة المفاتيح و شاشة الكتابة اليدوية و صندوق الكتابة اليدوية و صندوق الكتابة المزوج.

يمكنك اختيار أسلوب الإدخال بلمس  وأسلوب الإدخال.

المس  لتشغيل وضع T9. يعرض هذا الرمز فقط عندما تختار لوحة المفاتيح كأسلوب إدخال.


المس  لاختيار لغة الكتابة.

المس  للتبديل بين الأرقام والرموز وإدخال النص.

استخدم مفتاح **Shift** للتبديل بين إدخال الأحرف الكبيرة أو الصغيرة.

## وضع T9


يستخدم وضع T9 قاموساً مضمناً للتعرف على الكلمات التي تكتبها استناداً إلى تسلسل المفاتيح التي لمستها. يقوم بتوقع الكلمة التي تقوم بإدخالها ويقترح كلمات بديلة.

 تحذير: إذا تمت إضافة صورة أو فيديو أو صوت إلى رسالة نصية (SMS) فسيتم تحويلها تلقائياً إلى رسائل وسائط متعددة (MMS) وسيُفرض رسم عليك وفقاً لذلك.

## التعرّف على الكتابة اليدوية

في وضع الكتابة اليدوية ما عليك إلا أن تكتب على الشاشة وسيقوم GD510 بتحويل كتابتك اليدوية في رسالتك. حدّد شاشة الكتابة اليدوية أو صندوق الكتابة اليدوية وفق طريقة العرض المفضلة لديك.

## إعداد البريد الإلكتروني

المس البريد الإلكتروني في علامة التبويب الاتصال. إذا لم يتم تعيين حساب البريد الإلكتروني، فابدأ بتعيين معالج البريد الإلكتروني وإنهائه. يمكنك التحقق من الإعدادات وتعديلها بتحديد . كما يمكنك التحقق من الإعدادات الإضافية التي تمت تعبئتها تلقائياً عندما أنشأت الحساب.

## استرداد رسائل البريد الإلكتروني

يمكنك أن تتحقق من وجود رسائل بريد إلكتروني جديدة في حسابك تلقائياً أو يدوياً، للتحقق يدوياً:


- 1 المس البريد الإلكتروني في علامة التبويب الاتصال.
- 2 المس الحساب الذي تريد استخدامه.

## إرسال بريد إلكتروني باستخدام

### حسابك الجديد

- 1 المس بريد إلكتروني جديد فيفتح بريد إلكتروني جديد.
- 2 إكمال الرسالة.
- 3 المس إرسال فيتم إرسال البريد الإلكتروني.

## تغيير إعدادات البريد الإلكتروني

- 1 المس البريد الإلكتروني في علامة التبويب الاتصال.
- 2 المس  وحدّد إعدادات البريد الإلكتروني ثم يمكنك تكييف الإعدادات التالية:  
حسابات البريد الإلكتروني  
البريد الإلكتروني المفضّل

السماح بالرد على البريد الإلكتروني - اختر السماح بإرسال رسائل تأكيد القراءة.

طلب الرد على البريد الإلكتروني - اختر ما إذا كان يجب طلب رسائل تأكيد القراءة.

الفاصل الزمني للاسترداد - حدّد الفاصل الزمني الذي تريد أن يتحقق الهاتف GD510 خلاله من وجود رسائل بريد إلكتروني جديدة.

عدد الرسائل للاستردادها - اختر عدد رسائل البريد الإلكتروني التي تود استردادها في آن واحد.

تضمين الرسالة في إعادة التوجيه والرد - اختر تضمين الرسالة الأصلية في ردك.

تضمين المرفق - اختر تضمين المرفق الأصلي في أي رد.

# الرسائل

## تغيير إعدادات الرسائل النصية

المس الرسائل في علامة التبويب الاتصال والمس الإعدادات. حدّد رسالة نصية. يمكنك إدخال تغييرات على: مركز الرسائل النصية - أدخل تفاصيل مركز الرسائل.

تقارير استلام - مرر المفتاح إلى اليسار لاستلام تأكيد بأنه تم تسليم رسائلتك.

مدة الصلاحية - اختر فترة تخزين رسائلتك في مركز الرسائل.

أنواع الرسائل - حوّل نصك إلى نص أو صوت أو فاكس X.400 أو بريد إلكتروني.

ترميز الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسائلتك وبالتالي على رسوم البيانات.

إرسال النص كطويل - اختر إرسال رسالة طويلة كـ SMS متعددة أو كـ رسائل وسائط متعددة (MMS).

## تغيير إعدادات رسائل الوسائط

### المتعددة

المس الرسائل في علامة التبويب الاتصال. قم بالتمرير واختر الإعدادات ورسالة الوسائط المتعددة. يمكنك إدخال تغييرات على:

وضع الاسترداد - اختر بين الشبكة المحلية أو شبكة التجوال. إذا اخترت يدوي فستلقى إعلام برسائل وسائط متعددة (MMS) فقط ويمكنك حينئذٍ أن تقرر ما إذا كنت ترغب في تنزيلها بشكل كامل.

استرداد تلقائي أثناء التجوال - اختر ما إذا كنت ترغب في استرداد رسائلتك تلقائياً أثناء تواجذك في الخارج (التجوال).

إعلام بريد إلكتروني جديد - اختر ما إذا كان يجب تنبيهك عند وصول رسائل بريد إلكتروني جديدة.

التوقيع - قم بتشغيل هذه الميزة وإنشاء توقيع بريد إلكتروني.

الأولوية - اختر مستوى الأولوية لرسائل البريد الإلكتروني.

حجم البريد المرسل - قم بتعيين الحد الأقصى لحجم البريد الإلكتروني الذي ترسله.

عداد البريد الإلكتروني - أدخل التاريخ الذي تريده. يمكن التحقق من رسائل البريد الإلكتروني التي أرسلتها خلال تلك الفترة.

## حافظات الرسائل

هناك خمس حافظات في قائمة الرسائل.

صندوق الوارد - توضع في صندوق الوارد كل الرسائل التي تستلمها.

المسودات - إذا لم تكن قد انتهيت من كتابة رسالة. يمكن حفظ ما قيمت به في هذه الحافظة. صندوق الصادر - عبارة عن حافظة لحفظ الرسائل مؤقتاً فيما يكون إرسالها جارياً.

العناصر المرسله - يتم وضع كل الرسائل التي أرسلتها في هذه الحافظة.

حافظاتي - إنشاء حافظات لتخزين رسائلتك.

عداد الرسائل - اختر تعيين فترة وقت محدّدة  
لعدّ الرسائل.

خدمة المعلومات - اختر تشغيل/إيقاف تشغيل  
البحث الخلوي وحدّد القنوات واللغات.

تقرير الاستلام - اختر السماح بتقرير الاستلام  
و/أو طلبه.

قراءة الرد - اختر طلب قراءة الرد أو السماح بها.  
الأولوية - اختر مستوى أولوية رسائل وسائط  
متعددة (MMS).

مدة الصلاحية - اختر فترة حفظ رسالتك في  
مركز الرسائل.

مدة الشريحة - اختر المدة التي تظهر خلالها  
الشرائح على الشاشة.


وضع الإنشاء - اختر وضع الرسائل.

وقت الاستلام - اختيار المدة قبل تسليم كل  
رسالة.

مركز الرسائل المتعددة - اختر رسالة من القائمة  
أو قم بإضافة مركز رسالة جديد.

## تغيير الإعدادات الأخرى

التمس الرسائل في علامة التبويب الاتصال. والتمس  
الإعدادات.

البريد الصوتي - التمس  لإضافة خدمة بريد  
صوتي جديدة. اتصل بمشغل الشبكة للحصول  
على مزيد من المعلومات حول الخدمة التي  
يقدمها.

رسالة الخدمة - اختيار استلام أو حظر رسائل  
الخدمة. كما يمكنك تعيين حماية الرسالة وذلك  
بانشاء قوائم بالمرسلين الموثوق بهم وغير الموثوق  
بهم في الخيار أمان الخدمة.




# الكاميرا

## التعريف على محدّد المنظر








**تلميح!** يمكنك إحصار الخيارات بالضغط على الشاشة. وهي تتوقف عن التشغيل تلقائياً بعد بضع ثوانٍ.

## التقاط صورة سريعة

- 1 اضغط على المفتاح  الموجود في الجانب الأيمن من الهاتف.
- 2 عندما تركز الكاميرا على موضوع الصورة. المس  الموجود في وسط الجانب الأيسر من الشاشة لالتقاط صورة. كما يمكنك الضغط على مفتاح  الموجود في جانب الهاتف بقوة.

**تلميح!** للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدد المنظر.

## بعد التقاط الصورة

- تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة.
-  المس لإرسال الصورة كرسالة، أو بريد إلكتروني أو عبر بلوتوث.
-  المس لتعيين صورة الشاشة الرئيسية.
-  المس لتعديل الصورة.
-  المس لحذف الصورة التي التقطتها للتو وأكد بلمس نعم، تظهر الرسالة "محذوفة".
-  المس للانتقال إلى الاستوديو.



# الكاميرا

## استخدام الإعدادات المتقدمة

من محدّد المنظر. المس  لفتح كل خيارات الإعدادات المتقدمة.

الحجم - قم بتغيير حجم الصورة لتوفير مساحة على الذاكرة أو التقاط صورة تم تعيينها مسبقاً إلى حجم جهة الاتصال الصحيح. حدّد قيمة يكسل من الخيارات الرقمية السنة: ( 3M 2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480) الرئيسية (WQVGA), QVGA (320x240).

تأثير الألوان - اختر درجة اللون التي تريد تطبيقها على الصورة التي تلتقطها. هناك أربعة خيارات لدرجة اللون: لا لون ، أسود وأبيض ، سالب أو بني داكن

توازن اللون الأبيض - اختر من ضمن تلقائي ، متوهج مشمس ، فلورسنت أو غائم.

الوضع الليلي - يعتبر استخدامه مفيداً في الأماكن الداكنة.

المؤقت الذاتي - يسمح لك المؤقت الذاتي بتعيين فترة تأخير قبل التقاط الكاميرا الصورة. بعد الضغط على زر الالتقاط. اختر من ضمن 3 ثوانٍ. أو 5 ثوانٍ أو 10 ثوانٍ. يعتبر هذا الأمر جيداً لصورة المجموعة التي تريد أن تكون جزءاً منها.

الجودة - اختر من ضمن دقيق جداً ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم ولكن حجم الملف سيكون أكبر. أي أنك ستتمكن من تخزين عدد أقل من الصور في الذاكرة.

الذاكرة - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

إظهار الصورة الملتقطة - اختر عرض الصورة مع خيارات بعد التقاط صورة.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

صوت الغالق - حدّد خياراً من ضمن خيارات صوت الغالق الثلاثة.

شاشة الشبكة - اختر من ضمن إيقاف التشغيل تقاطع بسيط أو ثلاثية الأقسام.

إعادة ضبط الإعدادات - إعادة تعيين كل إعدادات الكاميرا.

# كاميرا الفيديو

## التعرّف على محدّد المنظر



تلميح! يمكنك إغلاق كل خيارات القائمة المختصرة للحصول على شاشة أوضح لمحدّد المنظر. ما عليك إلا لمس وسط محدّد المنظر مرة واحدة. لاستدعاء الخيارات، المس الشاشة مرة أخرى.

# كاميرا الفيديو

## إنشاء فيديو سريع



1 اضغط مفتاح الكاميرا الموجود في الجانب الأيسر من الهاتف لبضع ثوانٍ.



**تلميح!** للتبديل إلى وضع الكاميرا أو وضع الفيديو، ادفع رمز الكاميرا أو الفيديو إلى الأعلى/الأسفل في الوسط الأيسر من محدّد المنظر.

2 مع حمل الهاتف أفقياً، صوّب العدسة باتجاه موضوع الفيديو.

3 اضغط مفتاح الكاميرا  في الهاتف مرة واحدة لبدء التسجيل، أو المس النقطة الحمراء .


4 سيظهر تسجيل في أسفل محدّد المنظر مع مؤقت في الأسفل يظهر طول الفيديو.

5 لإيقاف الفيديو مؤقتاً، المس  وللاستئناف حدّد .


6 المس  على الشاشة أو اضغط على  مرة ثانية لإيقاف التسجيل.

## بعد إنشاء الفيديو


ستظهر على الشاشة صورةً ثابتةً تمثل الفيديو الملتقط. ويمتد اسم الفيديو عبر أسفل الشاشة مع سبعة رموز في الجانبين الأيمن والأيسر في الأسفل.


المس لتشغيل الفيديو. 

المس لإرسال الفيديو كرسالة أو بريد إلكتروني أو عبر بلوتوث أو YouTube.

المس لتعديل الفيديو. 

المس لحذف الفيديو الذي قمت بالتقاطه لتوكّ وأكّد بلمس نعم، يظهر محدّد المنظر من جديد.

المس  لالتقاط فيديو آخر على الفور.

المس لعرض استوديو الصور وملفات الفيديو المحفوظة. 



## استخدام الإعدادات المتقدمة

في محدد المنظر المس الإعدادات لفتح كل خيارات الإعدادات المتقدمة.

تأثير اللون - اختر درجة اللون لاستخدامها على الفيديو الجديد. لا لون أو أسود وأبيض أو سالب أو بني داكن.

توازن اللون الأبيض - يضمن توازن الأبيض ظهور أي لون أبيض في الفيديو كواقعي. لكي تضبط الكاميرا بشكل صحيح توازن اللون الأبيض. قد نحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي. متوهج. مشمس. فلورسنت أو غائم.

الجودة - اختر من ضمن دقيق جداً. ودقيق وعادي. بقدر ما تكون الجودة دقيقة بقدر ما يكون الفيديو واضح المعالم ولكن حجم الملف سيكون أكبر. ونتيجة لذلك. سيكون عدد ملفات الفيديو التي يمكنك تخزينها في ذاكرة الهاتف أقل.

المدة - قم بتعيين مدة زمنية للفيديو. اختر ما إذا كنت تريد إرسال الفيديو كرسالة رسائل وسائط متعددة (MMS).

**تلميح!** إذا اخترت مدة رسائل وسائط متعددة (MMS). فإن اختيار جودة أقل للصورة سيمنحك من النقاط مقطع فيديو أطول.

الذاكرة - اختر ما إذا كنت تريد حفظ ملفات الفيديو في ذاكرة الهاتف أو في الذاكرة الخارجية.


الصوت - اختر ما إذا كنت تريد تسجيل فيديو مع صوت.

إخفاء رموز - اختر رموز إعدادات الكاميرا لإخفائها يدوياً أو تلقائياً.

إعادة ضبط الإعدادات - قم بإعادة تعيين إعدادات كاميرا الفيديو كافةً.

## الصور ومقاطع الفيديو

### عرض الصور وملفات الفيديو

1 **المس** الاستوديو في علامة التبويب الترفيه. أو **المس**  على شاشة المعاينة الخاصة بالكاميرا. يمكنك التحقق من الصور وملفات الفيديو.

2 يظهر الاستوديو على الشاشة.



3 **المس** الفيديو أو الصورة لفتحهما كلياً.


4 **لتشغيل الفيديو المس** . لإيقاف التشغيل مؤقتاً **المس** .

**تلميح!** انقر إلى اليمين أو إلى اليسار لعرض صور أخرى أو ملفات فيديو أخرى.

### التقاط صورة من فيديو

1 حدّد الفيديو الذي تريد التقاط صورة منه.


2 **المس**  لإيقاف الفيديو مؤقتاً على الإطار الذي تريد تحويله إلى صورة و**المس** جانب الشاشة الأيمن العلوي لفتح قائمة .

3 من قائمة الخيارات حدّد .

4 تظهر الصورة على الشاشة مع الاسم المعين لها.


5 **المس**  للعودة إلى الفيديو.

6 **تحفظ الصورة** في حافظة أسيانتي وتظهر في الاستوديو.

 **تحذير:** قد لا تعمل بعض الوظائف بشكل صحيح إذا لم يكن ملف الوسائط المتعددة مسجلاً في الهاتف.

### مشاهدة الصور كعرض شرائح


يُظهر عرض الشرائح كل الصور الموجودة في الاستوديو كل صورة على حدة كعرض شرائح. ولا يمكن عرض مقاطع الفيديو كعرض شرائح.

1 **المس**  في الاستوديو. ثم قم بالتمرير وحدّد عرض الشرائح.

2 يبدأ عرض الشرائح.

**المس** لإيقاف عرض الشرائح مؤقتاً على صورة معينة

**المس**  للعودة.



**المس**  لإيقاف عرض الشرائح مؤقتاً على صورة معينة.

**المس** مجدداً لاستئناف التشغيل.




**المس** لعرض عشوائي.

**المس** لزيادة سرعة عرض الشرائح أو إنقاص سرعته.


## تعيين صورة خلفية الشاشة


- 1 المس الاستوديو في علامة التبويب الترفيه.
- 2 المس الصورة التي ترغب في تعيينها كخلفية الشاشة لفتحتها.
- 3 المس الشاشة لفتح القائمة.
- 4 المس  .
- 5 يمكنك تغيير حجم الصورة بواسطة  .
- 6 إذا كانت الصورة توافق متطلباتك، فالمس تعيين.
- 7 اختر من ضمن الخيارات ما ترغب في تغييره: الكل عنصر واجهة الاستخدام أو الاتصال السريع.

## تعديل الصور


- 1 افتح الصورة التي ترغب في تعديلها والمس لإحضار لوحة الخيارات. 
- 2 المس الرموز لتعديل صورتك: المنطقة المحيطة. 
- 3 ارسم شيئاً على الشكل الحر لصورتك. حدّد سماكة الخط من ضمن الخيارات الأربعة واللون الذي تود استخدامه.
- 4 أضف كتابة إلى الصورة. 


قم بتزيين صورتك بواسطة الطوابع. اختر من ضمن مختلف الطوابع والألوان المتوفرة والمس الصورة حيثما ترغب في وضع هذه الطوابع.

امسح ما ترسمه. كما يمكنك اختيار حجم الممحاة. 

المس للعودة إلى الاستوديو. 

حفظ التغييرات التي أدخلتها إلى الصور. حدّد لحفظ التغييرات فوق الملف الأصلي. أو كملف جديد. إذا حدّدت ملف جديد، فأدخل اسم ملف.


التراجع عن التأثير الأخير أو التعديل الذي أدخلته على الصورة. 

المس لفتح خيارات عامل التصفية. يمكنك إعداد الصورة المحدّدة. 



# الصور ومقاطع الفيديو

## إضافة تأثير إلى صورة

1 في شاشة التعديل.المس .

2 اختر تطبيق أي من الخيارات على الصورة:

تجميل الوجه - يكشف تلقائياً وجهاً في الصورة ويجعله ساطعاً.

تأثير النفق - تأثير الكاميرا لومو.

لون سالب - تأثير لون سالب.

أسود وأبيض - توفير تأثير الألوان أسود وأبيض.

بني داكن - توفير تأثير بني داكن.

غير واضح - توفير تأثير غير واضح.

زيادة التركيز - حرك العلامة على طول الشريط

لزيادة التركيز على الصورة. حدّد رمز موافق

لتطبيق التغييرات أو اختر  للإلغاء.

تمويه فسيفساء - المس لتطبيق تأثير

فسيفسائي ذي غشاوة على الصورة.

رسم بالزيت - توفير تأثير رسم بالزيت.

التخطيط - تطبيق تأثير لتبدو الصورة

كتخطيط.

زخرفة - توفير تأثير زخرفة.

مشمس - تغيير تأثير التعرض للضوء.

زاهية - تأثير يبعث الوضوح والإشراق.

ضوء القمر - تغيير الضوء ل يبدو كضوء القمر.

معتق - توفير تأثير صورة قديمة.

توهج - توفير تأثير شعاع الضوء.

رسوم متحركة - توفير تأثير رسوم متحركة.

ألوان مائية - توفير تأثير ألوان مائية.

3 للتراجع عن أحد التأثيرات، ما عليك إلا لمس

تراجع .

## الوسائط المتعددة

يمكنك تخزين أي ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور والأصوات وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. يتيح لك استخدام بطاقة ذاكرة تحرير مساحة على ذاكرة الهاتف. يمكنك العثور على هذه الملفات في القائمة أسيائي في علامة التبويب الترفيه.

### الصور


تحتوي الصور على قائمة بالصور بما فيها الصور الافتراضية التي تم تحميلها مسبقاً إلى هاتفك. وصوراً قمت أنت بتنزيلها وصوراً تم التقاطها بكاميرا الهاتف.

### إرسال صورة

- 1 المس أسيائي في علامة التبويب الترفيه وحدد الصور. حدّد الصورة التي تريدها.
- 2 المس إرسال واختر من رسالة الوسائط المتعددة. البريد الإلكتروني. بلوتوث و كاتب المدونة.

### استخدام صورة

يمكنك اختيار الصور لاستخدامها كخلفيات للشاشة وكشاشات قفل أو حتى لتعريف المتصل.

- 1 المس أسيائي في علامة التبويب الترفيه وحدد الصور. حدّد الصورة التي تريدها. والمس .
- 2 المس استخدام كـ واختر من:

صورة الشاشة الرئيسية - تعيين خلفية للشاشة الرئيسية.


صورة إقفال الشاشة - تعيين خلفية شاشة للشاشة القفل.

صور الأسماء - قم بتعيين صورة إلى شخص معين في قائمة الأسماء المتوفرة لديك بحيث تظهر صورته عند اتصاله بك.

صورة بدء التشغيل - تعيين صورة بحيث تظهر عند تشغيل الهاتف.

صورة إيقاف التشغيل - قم بتعيين صورة بحيث تظهر عند إيقاف تشغيل الهاتف.

### طباعة صورة


- 1 المس أسيائي في علامة التبويب الترفيه وحدد الصور. حدّد الصورة التي تريدها. والمس .
- 2 المس طباعة ثم اختر بين بلوتوث و PictBridge.

تلميح! يمكنك الطباعة عبر بلوتوث أو عبر الاتصال بطباعة PictBridge متوافقة.

## الوسائط المتعددة

### نقل صورة أو نسخها


يمكنك نقل صورة أو نسخها بين ذاكرة الهاتف وبطاقة الذاكرة، ويمكنك القيام بذلك إما لتحرير بعض المساحة في إحدى وحدات الذاكرة أو لمنع فقدان الصور.

- 1 المس أشيائي في علامة التبويب الترفيه، وحدد الصور والمس .
- 2 حدّد نقل أو نسخ.
- 3 يمكنك تحديد/إلغاء تحديد الصور بواسطة الضغط عليها بالتتابع، حدّد الصورة التي تريد أن تنقلها أو تنسخها والمس نسخ/نقل.

### الأصوات

تحتوي الأصوات على قائمة أصوات تشمل الأصوات التي تم تنزيلها والأصوات الافتراضية والتسجيلات الصوتية، من هنا يمكنك إدارة الأصوات أو إرسالها أو تعيينها كنفحات رنين.

### استخدام صوت

- 1 المس أشيائي في علامة التبويب الترفيه وحدد الأصوات.
- 2 حدّد الصوت الذي تريده وتظهر رسالة تأكيد.
- 3 المس نعم، يبدأ التشغيل.
- 4 المس  وحدّد استخدام كـ
- 5 اختر من ضمن نغمة رنين و نغمة رسالة و بدء التشغيل و إيقاف التشغيل.

### ملفات الفيديو

تعرض ملفات الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك أو تسجيلها عليه.

### مشاهدة فيديو

- 1 المس أشيائي في علامة التبويب الترفيه وحدد ملفات الفيديو.
- 2 حدّد فيديو ليتم تشغيله.

### إرسال فيديو كليب

- 1 حدّد فيديو.
- 2 المس  ثم إرسال واختر من ضمن رسالة. بريد إلكتروني، بلوتوث و YouTube.

### الألعاب والتطبيقات

يمكنك تثبيت ألعاب وتطبيقات جديدة إلى هاتفك لمساعدتك على التسلية عندما يكون لديك بعض الوقت للقيام بذلك.

كما يمكنك الوصول إلى ذلك باستخدام القائمة الألعاب والتطبيقات في علامة التبويب الترفيه.

### لعبة

- 1 المس الألعاب والتطبيقات في علامة التبويب الترفيه.
- 2 حدّد الألعاب، ثم اختر لعبة لتشغيلها.

## المستندات

من قائمة المستندات في أشميائي يمكنك عرض كل ملفات المستندات. من هنا يمكنك عرض ملفات Excel و PowerPoint و Word و Text و PDF.

## نقل ملف إلى هاتفك

تعتبر تقنية بلوتوث الطريقة الأسهل على الأرجح لنقل ملف من الكمبيوتر إلى هاتفك. كما يمكنك استخدام LG PC Suite عبر كبل المزامنة.

## للنقل باستخدام بلوتوث:

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرتبين لبعضهما بعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يُرسل الملف إليك سيترتب عليك قبوله على الهاتف وذلك بلمس نعم.
- 4 يجب أن يظهر الملف في حافظتي كافتراضي. علامة التبويب الثانية في أشميائي. يمكنك معاينة الملف إذا كانت الحافظة ممتلئة.

## أخرى

تحتوي حافظة أخرى على قائمة ملفات ليست عبارة عن صور أو أصوات أو ملفات فيديو أو مستندات أو ألعاب أو تطبيقات.

## استوديو الأفلام

يمكنك إنشاء فيديو موسيقي.

## إنشاء فيلم

- 1 قم بالتمرير والمس استوديو الأفلام في علامة التبويب الترفيه.
- 2 المس  لإضافة صورة. ضع علامة في خانة اختيار الصور التي تريد تضمينها. ثم حدّد إدراج.
- 3 المس علامة تبويب الوضع لاختيار وضع الفيلم. الوضع الافتراضي هو بني داكن كلاسيكي.
- 4 المس الصوت الافتراضي لتغيير الصوت.
- 5 المس  لمشاهدة ما أنشأته.
- 6 المس  ثم ترتيب التشغيل لإنشاء ترتيب. يمكنك جعله عشوائياً أو متسلسلاً.
- 7 المس  ثم حفظ الموقع لاختيار الموقع الذي تريد حفظ الفيلم فيه.

## الوسائط المتعددة

### الموسيقى

قوائم التشغيل - تحتوي على كل قوائم التشغيل التي أنشأتها.

مزج المسارات - شغل المسارات بترتيب عشوائي.




### نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كيبول المزامنة.

يمكن أيضاً استخدام LG PC Suite. لنقل باستخدام بلوتوث:

- 1 تأكد من إيقاف تشغيل بلوتوث في الجهازين ومن كونهما مرتبطين لبعضهما البعض.
- 2 حدّد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.
- 3 عندما يصبح الملف جاهزاً للإرسال، يجب أن تقبله على هاتفك بالضغط على نعم.
- 4 يجب أن يظهر الملف في الموسيقى < كل المسارات.

### تشغيل أغنية

- 1 المس الموسيقى في علامة التبويب الترفيه.
- 2 حدّد إحدى الحافظات والأغنية التي تريد تشغيلها.
- 3 المس  لإيقاف الأغنية مؤقتاً.
- 4 المس  للتجاوز إلى الأغنية التالية.
- 5 المس  للعودة إلى الأغنية السابقة.
- 6 المس  للعودة إلى قائمة الموسيقى. يمكن للمس أكثر من مرة واحدة للعودة إلى القائمة.

يكون مشغل الموسيقى مضمّناً في الهاتف LG GD510 بحيث يمكنك تشغيل كل مسارات الموسيقى المفضلة لديك. للوصول إلى مشغل الموسيقى، المس الموسيقى في علامة التبويب الترفيه. من هنا يمكنك الوصول إلى عدد من الحافظات:

تم تشغيلها مؤخراً - يقوم بتشغيل الأغاني التي قمت بتشغيلها مؤخراً.

**ملاحظة:** يمكن أن تكون حقوق النشر للمفاتيح الموسيقي محمية بموجب المعاهدات الدولية وقوانين حقوق النشر الوطنية، ولهذا، فقد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر، قبل تحميل أو نسخ الملف. يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

كل المسارات - يحتوي على الأغاني الموجودة في هاتفك باستثناء الموسيقى العشوائية التي تم تنزيلها مسبقاً.

الفنانون - الاستعراض عبر مجموعتك الموسيقية بحسب الفنان.

الألبومات - الاستعراض عبر مجموعتك الموسيقية بحسب الألبوم.

الأنواع - الاستعراض عبر مجموعتك الموسيقية بحسب النوع.

## إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك بإنشاء مجموعة مختارة من الأغاني من حافظة قوائم التشغيل.

- 1 المس الموسيقى في علامة التبويب الترفيه.
- 2 المس قوائم التشغيل ثم إضافة قائمة تشغيل جديدة وأدخل اسم قائمة التشغيل والمس حفظ.
- 3 تعرض حافظة كل المسارات كل الأغاني الموجودة على هاتفك. المس كل الأغاني التي تريد تضمينها في قائمة التشغيل. فتظهر علامة إلى جانب اسم كل أغنية.
- 4 المس تم.

## راديو FM

تتوفر في طراز الهاتف LG GD510 ميزة راديو FM بحيث يمكنك إعداد محطاتك المفضلة للاستماع إليها أثناء تنقلك.





**ملاحظة:** ستحتاج إلى توصيل سماعات الرأس بالهاتف للاستماع إلى الراديو. أدخل سماعات الرأس في المأخذ المخصص لها (هذا المأخذ هو نفسه المأخذ الذي تقوم بتوصيل الشاحن فيه).

## البحث عن محطات

يمكنك إعداد محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. عليك أولاً توصيل سماعة الرأس بالهاتف إذ إنها تعمل كهوائي.

### للضبط تلقائياً:

- 1 قم بالتمرير والمس راديو FM في علامة التبويب الترفيه ثم .
- 2 المس البحث التلقائي تظهر رسالة تأكيد. حدّد نعم. فيتم تلقائياً العثور على المحطات وتخصيصها إلى قناة في هاتفك.


**ملاحظة:** يمكنك أيضاً إعداد إحدى المحطات يدوياً باستخدام  والذي  يظهر في وسط الشاشة. إذا ضغطت باستمرار  و ، فسيتم العثور على المحطات تلقائياً.

### إعادة تعيين القنوات

- 1 قم بالتمرير والمس راديو FM في علامة التبويب الترفيه ثم .
- 2 اختر إعادة تعيين القناة لإعادة تعيين القناة الحالية أو اختر إعادة تعيين كل القنوات لإعادة تعيين كل القنوات. تعود كل قناة إلى معدل التردد 87.5 ميجاهرتز.

## منظم المواعيد

### إضافة حدث إلى التقويم

- 1 المس منظم المواعيد في علامة التبويب أدوات المساعدة وحدّد التقويم.
- 2 حدّد التاريخ الذي تريد إضافة حدث إليه.
- 3 المس  ثم إضافة حدث.
- 4 المس فئة ثم اختر من ضمن موعد أو ذكرى أو عيد ميلاد.
- 5 أدخل الموضوع.

6 تحقق من التاريخ والوقت وأدخل الوقت الذي تريد أن يبدأ عنده الحدث، بالنسبة إلى الموعد و مناسبة الذكرى السنوية أدخل تاريخ ووقت انتهاء الحدث في المربعين السفليين للتاريخ والوقت. أدخل الموقع إذا كان موعداً.

7 عيّن منبه وتكرار.

8 حدّد حفظ فيتم حفظ الحدث في التقويم. يقوم رأس مؤشر مربع الشكل بتحديد اليوم الذي تم حفظ أية أحداث فيه وسيُرن جرس في وقت البدء المعيّن للحدث بحيث يمكنك أن تحافظ على تنظيم أوقانتك.

### إضافة عنصر إلى قائمة المهام

- 1 المس منظم المواعيد في علامة التبويب أدوات المساعدة.
- 2 حدّد المهام ثم المس إضافة مهام.
- 3 عيّن تاريخ المهمة. وأضف ملاحظات وحدّد مستوى للأولوية: عالية أو متوسطة أو منخفضة.
- 4 قم بحفظ المهمة عبر تحديد حفظ.

### استخدام الباحث عن التاريخ

الباحث عن التاريخ هو أداة سهلة تساعدك على احتساب تاريخ الأيام القليلة المقبلة. مثلاً بعد 60 يوماً من التاريخ 10.10.07 سيكون التاريخ 09.12.2007.

- 1 المس منظم المواعيد في علامة التبويب أدوات المساعدة.
- 2 حدّد الباحث عن التاريخ.
- 3 قم بتعيين التاريخ المطلوب في علامة التبويب من.
- 4 حدّد عدد الأيام في علامة التبويب بعد.
- 5 يظهر التاريخ الهدف أدناه.

## إضافة مذكرة

- 1 المس المذكرة في علامة التيوب أدوات المساعدة.
- 2 المس إضافة مذكرة.
- 3 اكتب المذكرة، ثم المس حفظ.
- 4 تظهر المذكرة على الشاشة في تطبيق الذاكرة.

## إعداد المنبه

- 1 المس المنبهات في علامة التيوب أدوات المساعدة، يجب أن يظهر منبه عنصر واجهة الاستخدام في القائمة كافتراضي ولا يمكنك حذفه.
- 2 المس إضافة منبه.
- 3 عيّن الوقت الذي تريد أن يبدأ فيه المنبه بالرنين في حقل البحث الوقت.
- 4 اختر كيف تريد أن يتكرر المنبه في صندوق التكرار: غير مكرّر، مكرّر يوميًا، الاثنين ~ الجمعة، الاثنين ~ السبت، السبت، الأحد، باستثناء أيام العطل أو اختر أيام الأسبوع تشير الرموز إلى يوم الأسبوع الذي اخترته.
- 5 حدّد نوع المنبه لتحديد نوع المنبه المطلوب.
- 6 اختر جرس المنبه وحدّد صوتاً من الحافظة. للاستماع إلى الأصوات، المس الصوت، يليه




7 أضف مذكرة للمنبه في صندوق المذكرة.

8 أخيراً، يمكنك تعيين الفاصل الزمني للانتظار إلى 5 أو 10 أو 20 أو 30 دقيقة أو 1 ساعة أو إيقاف التشغيل.

9 بعد انتهائك من تعيين المنبه، المس حفظ. ملاحظة: يمكنك إعداد 5 منبهات كحد أقصى بما في ذلك منبه عنصر واجهة الاستخدام.

تلميح! قم بتمرير مفتاح التشغيل/إيقاف التشغيل الخاص بالمنبه لتعيينه.


## إضافة مذكرة بواسطة لوحة الرسم

- 1 قم بالتمرير والمس لوحة الرسم في علامة التيوب أدوات المساعدة.
- 2 المس إضافة رسم.
- 3 ارسّم مذكرتك على شاشة اللمس LCD بتبعها .
- 4 المس نعم، فتظهر المذكرة على الشاشة في تطبيق لوحة الرسم.

# منظم المواعيد

## مسجّل الصوت

استخدم مسجّل الصوت لتسجيل مذكرات صوتية أو ملفات صوت أخرى.

المس مسجّل الصوت في علامة التبويب أدوات المساعدة وحدّد . ثم الإعدادات لتغيير الإعدادات:

المدة - تعيين مدة التسجيل. اختر من ضمن بلا تحديد. حجم رسالة وسائط متعددة (MMS) أو 1 دقيقة.

الجودة - حدّد جودة الصوت. اختر من ضمن دقيق جداً، دقيق أو عادي.

الذاكرة المستخدمة - حدّد الموقع الذي تريد حفظ ملفات الصوت فيه. اختر من ضمن الذاكرة الخارجية أو ذاكرة الهاتف.


## استخدام الحاسبة

1 المس الأذونات في علامة التبويب أدوات المساعدة.

2 حدّد الحاسبة.

3 المس المفاتيح الرقمية باستخدام لوحة المفاتيح لإدخال الأرقام.

4 بالنسبة إلى العمليات الحسابية البسيطة، المس الوظيفة المطلوبة (+, -, ×, ÷). يتبعها =.

5 بالنسبة إلى الحسابات الأكثر تعقيداً، المس  واختر من ضمن sin أو cos أو tan أو log أو ln أو exp أو sqrt أو deg أو rad إلخ.

## تحويل وحدة

1 المس الأذونات في علامة التبويب أدوات المساعدة.

2 حدّد محول الوحدات.

3 اختر ما إذا كنت ترغب في تحويل العملة أو المساحة أو الطول أو الوزن أو درجة الحرارة أو الحجم أو السرعة.

4 يمكنك الآن تحديد الوحدة وإدخال القيمة التي تريد التحويل منها. تتبعها الوحدة التي تريد التحويل إليها.

5 تظهر القيمة المناسبة على الشاشة.

## تسجيل ملف صوتي أو صوت

1 المس  لبدء التسجيل.

2 المس  لإيقاف التسجيل مؤقتاً.

3 المس  لإنهاء التسجيل.

4 المس  للاستماع إلى تسجيلك.

## التعرف على الشجرة الحامية



### للبيئة

يتم تجميع الأشجار من خلال شحن الخلية على الطاقة الشمسية، تمثل كل شجرة انبعاثات الكربون المنخفضة، يمكنك زراعة المزيد من الأشجار باستخدام المزيد من الطاقة الشمسية.

## التعرف على الحاسبة البيئية



يمكنك جمع إجمالي انبعاثات الكربون المنخفضة من خلال شحن الخلية على الطاقة الشمسية.

**تلميح!** إذا كانت الخلية التي تعمل على الطاقة الشمسية مرفقة مع الهاتف GD510، فتظهر الشجرة الحامية للبيئة والحاسبة البيئية تحت قائمة الأدوات في علامة التبويب أدوات المساعدة.

## إضافة مدينة إلى ساعتك العالمية

- 1 المس الأدوات في علامة التبويب أدوات المساعدة.
- 2 حدّد الساعة العالمية.
- 3 المس ، يتبعه إضافة مدينة.
- 4 قم بتمرير الكرة الأرضية، المس المنطقة التي تريد واختر المدينة على الخريطة.
- 5 أو المس واكتب اسم المدينة المطلوبة في مربع حقل البحث.

## استخدام ساعة الإيقاف

- 1 المس الأدوات في علامة التبويب أدوات المساعدة.
- 2 حدّد ساعة الإيقاف.
- 3 المس بدء في أسفل الشاشة لبدء تشغيل المؤقت.
- 4 المس الدورة إذا أردت تسجيل وقت الدورة.
- 5 المس إيقاف لإيقاف تشغيل المؤقت.
- 6 المس استئناف لإعادة تشغيل ساعة الإيقاف في الوقت الذي توقفت فيه أو المس إعادة التعيين لإعادة بدء التوقيت من جديد.

## مزامنة الكمبيوتر الشخصي

### نسخ احتياطي للمعلومات على الهاتف

#### واستعادتها

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه أعلاه.

2 انقر فوق الرمز النسخ الاحتياطي وحدد النسخ الاحتياطي أو استعادة.

3 حدّد المحتوى الذي ترغب في إجراء نسخ احتياطي له أو استعادته، حدّد الموقع حيث تريد إجراء نسخ احتياطي للمعلومات أو استعادة المعلومات منه. انقر فوق رمز تشغيل.

4 سيتم إجراء نسخ احتياطي للمعلومات أو استعادتها.

### عرض ملفات الهاتف على الكمبيوتر

1 قم بتوصيل الهاتف بالكمبيوتر كما تم توضيحه سابقاً.


2 انقر فوق رمز إدارة الملفات.

3 تظهر في الجانب الأيسر من الشاشة كل المستندات، ومحتويات الفلاش، والصور، وملفات الصوت والفيديو التي حفظتها في الهاتف.

**تلميح!** يساعدك عرض محتويات الهاتف على الكمبيوتر على ترتيب الملفات، وتنظيم المستندات وإزالة المحتوى الذي لم تعد بحاجة إليه.

يمكنك مزامنة الكمبيوتر مع الهاتف للتأكد من تطابق كافة التفاصيل والتواريخ الهامة. كما يمكنك إجراء نسخة احتياطية لملفاتك للاطمئنان.

### تثبيت LG PC Suite على الكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدّد التوصيل في علامة التبويب الإعدادات.


2 حدّد وضع اتصال USB والمس PC Suite.

3 قم بتوصيل الهاتف والكمبيوتر عبر كابل USB وانتظر لبرهة، تظهر رسالة دليل التثبيت.

4 اتبع الإرشادات التي تظهر على الشاشة لإكمال معالج مثبت LG PC Suite.

5 عند اكتمال عملية التثبيت، يظهر رمز LG PC Suite على سطح المكتب.

### توصيل الهاتف والكمبيوتر

1 في الشاشة الرئيسية اضغط  وحدّد التوصيل في علامة التبويب الإعدادات.

2 حدّد وضع اتصال USB.

3 المس PC Suite.

4 قم بتوصيل الهاتف والكمبيوتر عبر كابل USB وانتظر لبرهة، يعمل PC Suite بشكل تلقائي.

## مزامنة الأسماء

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز إدارة جهة الاتصال.
- 3 سيقوم الكمبيوتر الآن باستيراد وعرض كل الأسماء المحفوظة في بطاقة SIM والهاتف.
- 4 انقر فوق ملف وحدّد حفظ. يمكنك الآن تحديد الهدف والموقع حيث تريد حفظ الأسماء. ملاحظة: لإجراء نسخ احتياطي للأسماء المحفوظة في بطاقة SIM. انقر فوق مجلد بطاقة SIM في الجانب الأيمن من شاشة الكمبيوتر. انقر بزر الماوس الأيمن فوق الأسماء ثم حدّد الكل. انقر بزر الماوس الأيمن في الموقع ذاته وحدّد نسخ إلى ذاكرة الهاتف. انقر الآن فوق حاوية الهاتف في الجانب الأيمن من الشاشة فتظهر كل الأرقام.


## مزامنة الرسائل

- 1 توصيل الهاتف بالكمبيوتر.
- 2 انقر فوق رمز الرسائل.
- 3 تظهر كل رسائل الهاتف في الحافظات على الشاشة.
- 4 انقر فوق عنوان الأعمدة لإعادة ترتيب الرسائل التي تم فرزها بحسب المرسل المحتويات و تاريخ الاستلام.

## استخدام الهاتف كجهاز تزامن

### الموسيقى

يمكنك أن تستخدم هاتفك كجهاز تزامن الموسيقى لمزامنة ملفات الموسيقى فقط. يمكنك تنفيذ مزامنة الموسيقى باستخدام Windows Media Player 10/11 وهو يعتمد ذاكرة الهاتف وبطاقة ذاكرة خارجية.

- 1 افصل الهاتف عن الكمبيوتر.
- 2 في الشاشة الرئيسية حدّد . ثم حدّد التوصيل في علامة التبويب الإعدادات.
- 3 حدّد وضع اتصال USB.
- 4 المس مزامنة الموسيقى.
- 5 توصيل الهاتف بالكمبيوتر. ستظهر على شاشة هاتفك الكلمة التالية: متصل.

## الوصول إلى ويب

### 5 للوصول إلى الإشارة المرجعية المس رمز اتصال

إلى جانب الإشارة المرجعية أو المس عنوان الإشارة المرجعية ثم المس اتصال. سيتم توصيلك بالإشارة المرجعية.

## استخدام قارئ RSS

إنّ RSS أو توزيع المحتوى والتطبيقات عبارة عن مجموعة من أشكال تغذية ويب يتم استخدامها لنشر محتوى يتكرر تحديثه مثل إدخالات المدونات أو عناوين الأخبار أو البث الصوتي على ويب podcasts. ويحتوي مستند RSS والذي يسمى تغذية أو تغذية ويب أو قناة على ملخص محتوى من موقع ويب مرتبط أو على النص الكامل، ويفضل تغذية RSS سينمّن الأشخاص من الاحتفاظ بمواقعهم المفضلة على ويب بشكل تلقائي. هذه الطريقة أسهل من التحقق من تلك المواقع يدويًا، وباستطاعة المستخدم أن يشترك في قناة عبر إدخال ارتباط القناة في القارئ أو بالنقر فوق رمز RSS في متصفح يبدأ عملية الاشتراك. ويتحقق القارئ من القنوات التي اشترك فيها المستخدم بشكل دوري بحثًا عن محتوى جديد. ويقوم بتنزيل أي تحديثات يعثر عليها.

1 المس المتصفح في علامة التبويب أدوات المساعدة.

2 للانتقال مباشرةً إلى صفحة المتصفح الرئيسية، حدّد الصفحة الرئيسية. كطريقة بديلة، حدّد إدخال العنوان واكتب عنوان URL. يتبعه اتصال.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم المفروض على البيانات، اتصل بموفر الشبكة.

## إضافة الإشارات المرجعية والوصول إليها

لكي تتمكّن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل. يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 المس المتصفح في علامة التبويب أدوات المساعدة.


2 حدّد الإشارات المرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة. المس إضافة إشارة مرجعية. أدخل اسمًا للإشارة المرجعية يتبعه URL في مربع الحقل المطابق.

4 المس حفظ. تظهر إشاراتك المرجعية الآن في قائمة الإشارات المرجعية.

## حفظ صفحة

1 انتقل إلى صفحة ويب المطلوبة كما تم وصفه أعلاه.

2 المس  وحدّد حفظ هذه الصفحة.

3 أدخل اسماً لصفحة ويب بحيث يمكنك التعرف عليها بسهولة.

4 المس حفظ.

## استخدام الهاتف كمودم

بإمكان وظيفة الهاتف GD510 أن تكون مضاعفة إذ باستطاعته أن يعمل كمودم للكمبيوتر. ما يوفر لك الوصول إلى البريد الإلكتروني وإنترنت حتى عندما لا يكون باستطاعتك الاتصال باستخدام الأسلاك، ويمكنك استخدام إما كيبيل USB أو بلوتوث.

### استخدام كيبيل USB:

1 تأكد من تثبيت LG PC Suite على الكمبيوتر.

2 قم بتوصيل GD510 والكمبيوتر باستخدام كيبيل USB كما تم توضيحه مسبقاً وابدأ بتشغيل البرنامج LG PC Suite.

3 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق الزر جديد وحدد المودم.

4 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.

5 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.

6 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدّه وانقر فوق اتصال.

سيتم الاتصال بالكمبيوتر من خلال GD510. ملاحظة: لمزيد من المعلومات حول إجراء المزامنة باستخدام LG PC Suite.

### الوصول إلى صفحة محفوظة

المس المتصفح في علامة التبويب أدوات المساعدة. ثم حدّد الصفحات المحفوظة. يمكنك عرض الصفحات المحفوظة هنا.

### عرض محفوظات المتصفح

المس المتصفح في علامة التبويب أدوات المساعدة. ثم حدّد المحفوظات.

### تغيير إعدادات متصفح ويب

المس المتصفح في علامة التبويب أدوات المساعدة. ثم حدّد الإعدادات.

يمكنك أن تختار تعديل الأوضاع أو إعدادات المظهر أو ذاكرة التخزين المؤقت أو ملفات تعريف الارتباط أو إعدادات الأمان.

# الويب

## استخدام بلوتوث:

- 1 تأكد من كَون بلوتوث في وضع التشغيل ومن كونه مرئيًا بالنسبة إلى الكمبيوتر وGD510.
- 2 قم بإقران الكمبيوتر وGD510 بحيث يكون رمز المرور مطلوبًا للاتصال.
- 3 استخدم معالج الاتصال على LG PC Suite لإنشاء اتصال بلوتوث نشط.
- 4 انقر فوق مجموعة إنترنت على الكمبيوتر. ثم انقر فوق الزر جديد.
- 5 اختر مودم USB لمحمول LG وحدد موافق. يظهر الآن على الشاشة.
- 6 اكتب الوضع الذي يجعلك تتصل بالإنترنت واحفظ القيم.
- 7 سيظهر الوضع الذي أنشأته على شاشة الكمبيوتر. حدده وانقر فوق اتصال. سيتم الاتصال بالكمبيوتر من خلال GD510.

# الإعدادات

## تخصيص الأوضاع

يمكنك أن تقوم بسرعة بتغيير وضعك الشخصي على الشاشة الرئيسية.

يمكنك تخصيص إعدادات الوضع باستخدام قائمة الإعدادات.

1 المس الأوضاع في علامة التبويب الإعدادات.

2 اختر الوضع الذي تريد تعديله.

3 يمكنك حينئذٍ تغيير كل خيارات الأصوات والتنبيهات المتوفرة في القائمة. بما فيها إعدادات نغمة الرنين ومستوى الصوت، ونغمة الرسالة وغيرها.

## تغيير إعدادات الشاشة

المس إعدادات الشاشة علامة التبويب الإعدادات.

### إعدادات الشاشة

الخلفية - اختر سمة الشاشة الرئيسية أو شاشة الإقفال.

**Livesquare** - المس دليل Livesquare للتحقق من الوظائف.

سمة الهاتف - اختر سمة للقوائم، كما يمكنك إعداد حجم الخط والوضع.

القائمة العلوية - اختر وضع القائمة العلوية واختر من بين الخطوط المتعرجة أو التمرير. الاتصال - إعداد لون الرقم.

ملاحظة: بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية. قد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

السطوع - قم بضبط سطوع الشاشة.

رسالة الترحيب - اختر تشغيل أو إيقاف التشغيل وإملاً رسالة الترحيب في حقل النص.

بدء التشغيل/إيقاف التشغيل - اختر سمة شاشة بدء التشغيل/إيقاف التشغيل.

## تغيير إعدادات الهاتف

استمتع بحرية تكييف كيفية عمل GD510 مع أسلوبك الخاص.

المس إعدادات الهاتف في علامة التبويب الإعدادات ثم اختر من القائمة أدناه.

### إعدادات الهاتف

التاريخ والوقت - اضبط التاريخ والوقت أو

اختر تحديث الوقت تلقائياً أو استخدام خيار التوقيت الصيفي.

توفير الطاقة - اختر تشغيل أو إيقاف تشغيل إعدادات توفير الطاقة التي تم تعيينها في الشركة أو الليل فقط.

اللغات - غير لغة شاشة الهاتف GD510.

صامت عند الوضع بالمقلوب - اقلب الهاتف GD510 عند الرنين للانتقال إلى وضع كتم الصوت أو التأجيل.

إقفال لوحة المفاتيح تلقائياً - قم بإقفال لوحة المفاتيح تلقائياً في الشاشة الرئيسية.

الحماية - اضبط إعدادات الحماية. وهذا يشمل رموز PIN وقفل الهاتف.

معلومات الذاكرة - انظر استخدام إدارة الذاكرة للحصول على مزيد من المعلومات.

## الإعدادات

**اتصال حزم البيانات** - اختر الوقت الذي تريد أن يتصل فيه هاتفك بشبكة حزم البيانات.

**وضع اتصال USB** - اختر خدمة البيانات من الخيارات وقم بمزامنة هاتف GD510 باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. انظر مزامنة الكمبيوتر الشخصي للحصول على مزيد من المعلومات حول المزامنة.

إذا كنت تستخدم مزامنة الموسيقى مع Windows Media Player، حدّد مزامنة الموسيقى في هذه القائمة. مزامنة الموسيقى متوفرة فقط لمحتويات الموسيقى.

### استخدام إدارة الذاكرة

تتوفر في الهاتف GD510 ثلاثة أنواع من الذاكرة: الهاتف وبطاقة SIM وبطاقة الذاكرة الخارجية. ويمكنك استخدام إدارة الذاكرة لمعرفة طريقة استخدام كل نوع من أنواع الذاكرة والمساحة المتوفرة في كل منها.

المس إعدادات الهاتف في علامة التبويب الإعدادات. ثم معلومات الذاكرة.

**ذاكرة الهاتف العامة** - عرض الذاكرة المتوفرة في الهاتف GD510 للصور والأصوات والفيديو ورسائل وسائط متعددة (MMS) والبريد الإلكتروني وتطبيقات Java وغير ذلك.

**ذاكرة الهاتف المستخدمة** - عرض الذاكرة المتوفرة في الهاتف لرسائل نصية (SMS) والأسماء والتقويم وقائمة المهام والمذكرة والمنبه ومحفوظات المكالمات والإشارات المرجعية وعناصر متفرقة.

**إعادة ضبط الإعدادات** - يسمح هذا الخيار باستعادة كل الإعدادات إلى الافتراضية.

**المعلومات** - حدّد التعليمات لعرض معلومات GD510 التقنية. كما يمكنك ترقية البرنامج **معلومات الهاتف**.

### تغيير إعدادات التوصيل

تم مسبقاً إعداد إعدادات التوصيل بواسطة مشغل الشبكة. بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد فوراً. لتغيير هذه الإعدادات. استخدم هذه القائمة:

المس التوصيل في علامة التبويب الإعدادات.

#### إعدادات الشبكة

**تحديد الشبكة** - إذا حدّدت تلقائياً، فسيبحث GD510 تلقائياً عن الشبكة ويسجل الهاتف على الشبكة. ننصح بهذا الأمر للحصول على خدمة وجودة أفضل.

إذا حدّدت يدوي. فتظهر كل الشبكات المتوفرة حالياً ويمكنك تحديد شبكة لتسجيلها.

**القوائم المفضلة** - يمكنك إضافة شبكة مفضلة للاتصال بها. إذا كانت الشبكة تجري بحثاً تلقائياً. اختر شبكة من قائمة الشبكات أو قم بإضافة شبكة جديدة يدويًا.

**أوضاع إنترنت** - تعرض هذه القائمة أوضاع إنترنت. لا يمكنك حذف أو تعديل التكوينات الافتراضية وهذا يتوقف على متغيرات البلدان.

**نقاط الوصول** - قام مشغل الشبكة بحفظ هذه المعلومات مسبقاً. يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

**ذاكرة SIM** - عرض الذاكرة المتوفرة في بطاقة SIM.

**الذاكرة الخارجية** - عرض الذاكرة المتوفرة في بطاقة الذاكرة الخارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

**إعداد التخزين الأساسي** - اختر الموقع الذي تفضل حفظ العناصر فيه بين الهاتف والذاكرة الخارجية.

## إرسال الملفات واستلامها باستخدام بلوتوث

### لإرسال ملف:

**1** افتح الملف الذي تريد إرساله. وهو عادةً عبارة عن صورة أو فيديو أو ملف موسيقي.

**2** اختر إرسال.  
اختر بلوتوث.

**3** إذا قمت مسبقاً بإقران جهاز بلوتوث. فلن يقوم GD510 بالبحث تلقائياً عن أجهزة بلوتوث أخرى. أو سيبحث GD510 عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.

**4** اختر الجهاز الذي تريد إرسال الملف إليه.

**5** سيتم إرسال ملفك.

**تلميح!** تحقق من شريط التقدم للتأكد من إرسال الملف.


### لاستلام ملف:

**1** لاستلام ملفات. يجب أن يكون بلوتوث في وضع التشغيل و مرئياً. انظر تغيير إعدادات بلوتوث أدناه للحصول على مزيد من المعلومات.

**2** تظهر رسالة تطالبك بقبول الملف من المرسل. المس نعم لاستلام الملف.

**3** ستشاهد الموقع الذي تم حفظ الملف فيه. بالنسبة إلى ملفات الصور. يمكنك اختيار عرض الملف أو استخدام كخلفية للشاشة. يتم عادةً حفظ الملفات في الحافظة المناسبة في أسيائي.

### تغيير إعدادات بلوتوث:

المس بلوتوث في علامة التبويب الإعدادات. وحدد  واختر الإعدادات.

أدخل تغييراتك على:

**إمكانية رؤية جهازي** - اختر أن يكون الجهاز مرئياً. أو مخفياً أو مرئياً لـ **1** دقيقة.

**اسم الجهاز** - أدخل اسماً للهاتف GD510.

**الخدمات المعتمدة** - اختر الطريقة التي

تريدها لاستخدام بلوتوث مع مختلف الخدمات.

**وضع SIM** عن بُعد - تشغيل أو إيقاف تشغيل.

**عنواني** - عرض عنوان بلوتوث.

## الإعدادات

### الاقتران بجهاز بلوتوث آخر

من خلال إقران الهاتف GD510 وجهاز آخر، يمكنك إعداد اتصال محمي برمز مرور.

1 تحقق من كون بلوتوث في وضع التشغيل و مرئياً. يمكنك تغيير الرؤية في القائمة الإعدادات.

2 المس بحث.

3 يبحث الهاتف GD510 عن الأجهزة. عند اكتمال عملية البحث، يظهر تجديد على الشاشة.

4 اختر الجهاز الذي تريد الاقتران به وأدخل رمز المرور ثم المس موافق.

5 يتصل هاتفك حينئذٍ بالجهاز الآخر. حيث عليك إدخال رمز المرور نفسه.

6 لقد أصبح اتصال بلوتوث المحمي برمز مرور آمناً الآن.

### تحديث البرنامج

برنامج تحديث برنامج الهاتف المحمول من LG

لمزيد من المعلومات حول تثبيت هذا البرنامج

وإستخدامه، يرجى زيارة موقع

<http://update.lgmobile.com>. نتيج لك هذه

الميزة ترقية برنامجك إلى الإصدار الأخير بسرعة

وبشكل مريح على إنترنت من دون الحاجة إلى

زيارة مركز الخدمة الخاص بنا. بما أن برنامج ترقية

برنامج الهاتف المحمول يتطلب انتباه المستخدم

الكامل لمدة عملية الترقية، يرجى التحقق من

التعليمات والملاحظات التي تظهر في كل خطوة

قبل المتابعة. تجدر الملاحظة إلى أن إزالة كيبول

اتصال بيانات USB أو البطاريات أثناء التحديث قد

يتسبب بإلحاق ضرر بالغ بهاتفك المحمول. وبما أن

جهة التصنيع لا تتحمل أي مسؤولية تجاه خسارة

بيانات أثناء عملية التحديث، ننصحك بتدوين أي

معلومات مهمة لتوخي الأمان.

### استخدام سماعة رأس بلوتوث

1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً.

2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.


3 المس السؤال قبل الاتصال أو الاتصال دوماً والمس نعم للاتصال الآن. يقوم الهاتف GD510 بالتبديل تلقائياً إلى وضع سماعة الرأس.

## الملحقات

يتم تزويدك بهذه الملحقات مع الهاتف GD510.



كابل البيانات



الشاحن



مضغوط



البطارية



سماعة  
رأس  
ستيريو

### ملاحظة:

- استخدم ملحقات LG الأصلية دائماً.
- يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

# البيانات التقنية

درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ).

+45 درجة مئوية (شحن)

الحد الأدنى: -10 درجات مئوية

## Declaration of Conformity



LG Electronics

### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

# CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

02. Sep. 2009

Signature of representative

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31-36-547-8940, Fax : +31-36-547-8794  
e-mail : jacob @ lge.com

## إرشادات لاستخدام آمن و فعال

- معلومات بيانات SAR للمقيمين في بلدان / مناطق تبني حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين (IEEE) هو 1.6 واط/كغ كمتوسط لكل جرام واحد (1) من النسيج.

### العناية بالمنتج وصيانتته



#### تحذير

استخدم فقط البطاريات، والشواحن، والملحقات الموافق على استخدامها مع طراز الهاتف المعين هذا. إن استخدام أي أنواع أخرى قد يؤدي إلى إبطال أي ضمان أو موافقة تنطبق على الهاتف المحمول. وقد يكون خطيراً.

- لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.
- ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون والرايو. وأجهزة الكمبيوتر الشخصي.
- يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.
- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.

يرجى قراءة هذه الإرشادات البسيطة، عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

### التعرّض لطاقة التردد اللاسلكي

معلومات حول التعرّض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR). لقد تم تصميم طراز الهاتف المحمول GD510 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرّض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص. دون أخذ العمر والصحة بعين الاعتبار.

• تستخدم إرشادات التعرض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد. أو SAR. وتجري اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كل نطاقات التردد التي تم اختبارها.

• وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث نفي بالإرشادات المتعلقة بالتعرّض للموجات اللاسلكية.

• حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين (ICNIRP) هو 2 واط/كجم وهو حد مقسم على نحو متناسب إلى 10 جرامات من النسيج.

• قيمة SAR الأكثر ارتفاعاً لطراز الهاتف هذا والتي تم اختبارها من قبل DASY4 للاستخدام في الأذن هي 1.29 واط/كجم (10 جرام) وعند حمله على الجسم تكون هذه القيمة 1.08 واط/كجم (10 جرام).

## إرشادات لاستخدام آمن و فعال

- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة إعداد النبض. مثلاً، في الجيب على مستوى الصدر.
- قد تسبّب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون والراديو والكمبيوتر الشخصي.

### السلامة على الطرقات

- تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.
- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية. إذا كانت متوفرة.
- توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.
- قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستيريو ومعدات السلامة في السيارة.
- عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.
- إذا كنت تستمع إلى الموسيقى أثناء تنقلك، فتأكد من كونه مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك، هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

- لا تمسك الهاتف بيدتين رطبتين فيما يكون شحنه جار. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصحح الهاتف سخاناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).

- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوئة جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

### تشغيل فعال للهاتف

#### الأجهزة الإلكترونية

- قد تتعرّض كل الهواتف المحمولة للتشويش. ما قد يؤثر على أدائها.

## تجنّب إلحاق الضرر بسمّعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمّعك، ونوصي بالتالي بالأقرب من تشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنك، كما نوصي بضبط مستوى صوت معقول للموسيقى والمكالمات.

## القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية، في حال انكسر الزجاج لا تلمسه أو تحاول إزالته، توقف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قبل موفر خدمة معتمد.

## مناطق التفجير

لا نستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية، التزم بالقيود، واتباع الأنظمة أو القوانين.

## مناطق تتسم أجواؤها بالقابلية

### للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

## في الطائرة

- باستطاعة الأجهزة اللاسلكية أن تتسبب بحدوث تشويش في الطائرة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
- لا تستعمله على الأرض من دون الحصول على إذن من قبل طاقم الطائرة.

## الأطفال

ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال، فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

## مكالمات الطوارئ

قد لا تكون مكالمات الطوارئ متوفرة ضمن شبكات الهاتف المحمول كافة، وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ؛ راجع موفر الخدمة المحلي لديك لمزيد من المعلومات.

## معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها، وبخلاف أنظمة البطاريات الأخرى ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط، فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.
- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.

## إرشادات لاستخدام آمن و فعال

- استبدل البطارية عندما يصبح أداؤها غير مقبول.  
قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
- أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
- لا تعرّض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
- لا تترك البطارية في الأماكن الساخنة أو الباردة. فقد يؤدي ذلك إلى التراجع في أداء البطارية.
- هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
- تخلّص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنّعة، يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلّص منها كمهملات منزلية.
- إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
- قم دائماً بفصل الشاحن عن المقبس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- إن عمر البطارية الفعلي يتوقف على تكوين الشبكة، وإعدادات المنتج، والنقوش المستخدمة، والبطارية والأوضاع البيئية.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



# GD510 User Guide

Congratulations on your purchase of the advanced and compact GD510 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

Getting to know your phone .....	6	Contacts.....	23
Open view .....	7	Searching for a contact.....	23
Installing the SIM and battery .....	8	Adding a new contact.....	23
Charging your phone.....	9	Creating a group .....	23
Memory card.....	10	Changing your contact settings.....	24
Menu map.....	11	Viewing information.....	24
Using your touch screen.....	12	Messaging.....	25
Touch screen tips .....	12	Sending a message .....	25
Control the touch screen .....	12	Entering text.....	25
Your home screen .....	13	T9 mode .....	25
The quick keys.....	14	Handwriting recognition .....	26
The status bar.....	15	Setting up your email.....	26
ATMT .....	17	Retrieving your emails .....	26
Anti-theft mobile tracker[ATMT] ....	17	Sending an email using your new account.....	26
Calls .....	18	Changing your email settings .....	26
Making a call.....	18	Message folders.....	27
Making a call from your contacts... ..	18	Changing your text message settings.....	27
Answering and rejecting a call.....	18	Changing your multimedia message settings.....	28
In-call options .....	19	Changing your other settings .....	28
Speed dialling .....	20	Camera .....	29
Making a second call .....	20	Getting to know the viewfinder ....	29
Viewing your call logs .....	20	Taking a quick photo .....	30
Using call divert.....	21	After taking a photo.....	30
Using call barring.....	21	Using the advanced settings .....	31
Changing the common call setting.....	22		

# Contents

Video camera .....	32	Transferring a file to your phone....	40
Getting to know the viewfinder .....	32	Others .....	40
Making a quick video .....	33	Muvvee studio .....	40
After making a video .....	33	Creating a movie.....	40
Using the advanced settings.....	34	Music .....	41
Your photos and videos .....	35	Transferring music onto your phone.....	41
Viewing your photos and videos ...	35	Playing a song.....	41
Capturing an image from a video..	35	Creating a playlist .....	42
Viewing your photos as a slide show .....	35	FM Radio .....	42
Setting a photo as wallpaper.....	36	Searching for stations .....	42
Editing your photos .....	36	Resetting channels.....	42
Adding an effect to a photo.....	37	Organiser .....	43
Multimedia.....	38	Adding an event to your calendar.	43
Pictures .....	38	Adding an item to your to do list ...	43
Sending a photo.....	38	Using date finder .....	43
Using an image.....	38	Adding a memo.....	44
Printing an image .....	38	Setting your alarm.....	44
Moving or copying an image .....	39	Adding a memo with the drawing panel .....	44
Sounds.....	39	Voice recorder.....	45
Using a sound .....	39	Recording a sound or voice .....	45
Videos .....	39	Using your calculator .....	45
Watching a video .....	39	Converting a unit .....	45
Sending a video clip .....	39	Adding a city to your World clock..	46
Games & Apps .....	39	Using the stopwatch .....	46
Playing a game .....	40	Getting to know the Eco tree .....	46
Documents .....	40		

Getting to know the Eco calculator .....	46	Settings .....	52
PC Sync.....	47	Personalising your profiles .....	52
Installing LG PC Suite on your computer .....	47	Changing your screen settings .....	52
Connecting your phone and PC.....	47	Changing your phone settings .....	52
Backing up and restoring the information on your phone .....	47	Changing your connectivity settings.....	53
Viewing phone files on your PC.....	47	Using memory manager .....	54
Synchronising your contacts .....	48	Sending and receiving your files using Bluetooth.....	54
Synchronising your messages .....	48	Changing your Bluetooth settings:.....	55
Using your phone as a Music Sync device .....	48	Pairing with another Bluetooth device.....	55
The web .....	49	Using a Bluetooth headset.....	56
Accessing the web .....	49	Software Upgrade .....	56
Adding and accessing your bookmarks .....	49	Accessories .....	57
Using RSS reader .....	49	Technical data.....	58
Saving a page .....	50	Guidelines for safe and efficient use..	59
Accessing a saved page .....	50		
Viewing your browser history .....	50		
Changing the web browser settings.....	50		
Using your phone as a modem.....	50		

# Getting to know your phone




## Smart key

- Accepts and ends a call.
- Goes to home screen directly.



## Power/Lock key


- Long press for power on/off.
- Short press to turn on/off the screen.

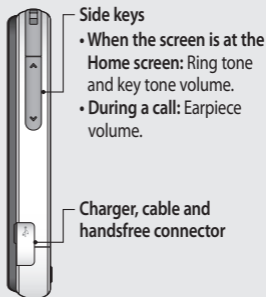

## Side keys

- When the screen is at the Home screen: Ring tone and key tone volume.
- During a call: Earpiece volume.

## Charger, cable and handsfree connector

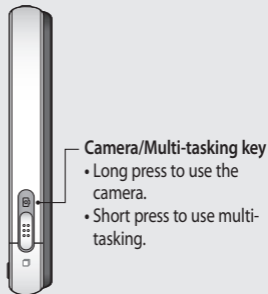


## Camera/Multi-tasking key

- Long press to use the camera.
- Short press to use multi-tasking.

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

# Open view

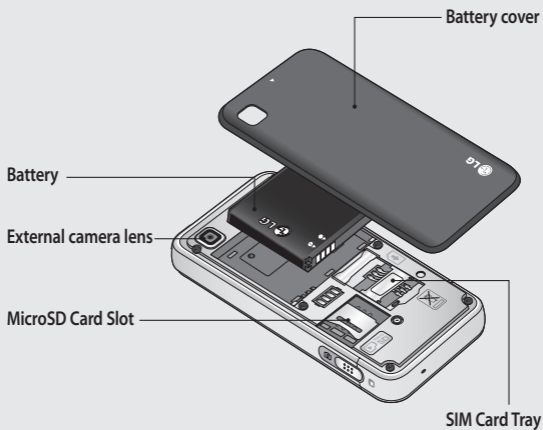

# Installing the SIM and battery

## 1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.




**⚠ WARNING:** Do not use your fingernail to remove the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2 Install the SIM card


Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

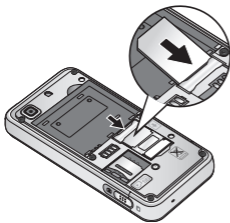

## 3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.

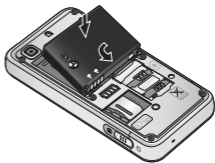

# Charging your phone

Remove the charger socket cover on the side of your GD510. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GD510 must be charged until the "Battery full" message appears on the screen.

**NOTE:** The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Solar cell battery cover is available and sold separately. Please contact the shop where you purchased the phone.

[www.lgmobile.com](http://www.lgmobile.com)

\* It may not be available in all shops based upon availability.



# Memory card

## Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

**NOTE:** A memory card is an optional accessory.

- 1 Remove the battery cover.
- 2 Push the microSD card slot to release lock.
- 3 Flip up the slot.

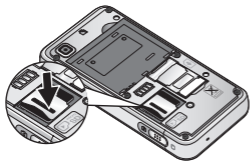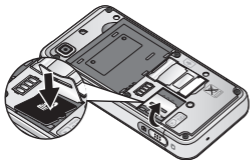


- 4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.

- 5 Flip down then push the slot to lock.
- 6 Replace the cover.


## Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.









**NOTE:** If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

# Menu map









Touch  in the Home screen to open a **Top menu**. From here you can access further menus by scrolling through the icons:

**COMMUNICATION, ENTERTAINMENT, UTILITIES and SETTINGS.**









## COMMUNICATION

-  Contacts
-  Recent history
-  Messaging
-  E-mail
-  Dialling
-  Contact search
-  Speed dials
-  New message









## ENTERTAINMENT

-  Camera
-  Gallery
-  My stuff
-  Music
-  Games & Apps
-  FM radio
-  Video camera
-  Muvvee studio

## UTILITIES

-  Browser
-  Google search
-  Alarms
-  Organiser
-  Memo
-  Voice recorder
-  Tools
-  Drawing panel

## SETTINGS

-  Profiles
-  Screen settings
-  Phone settings
-  Call settings
-  Bluetooth
-  Touch settings
-  Connectivity
-  Message settings

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GD510 is not in use, it will return to the lock screen.

## Control the touch screen

The controls on the GD510 touch screen change dynamically depending on the task you are carrying out.



## Opening Applications

To open any application, simply touch its icon.

## Scrolling


Drag from side to side to scroll.

On some screens, such as the Recent History list, you can also scroll up or down.

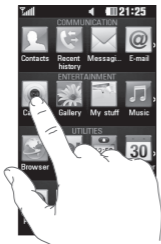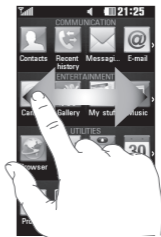

# Your home screen

You can drag and click what you need right away in all home screen types.

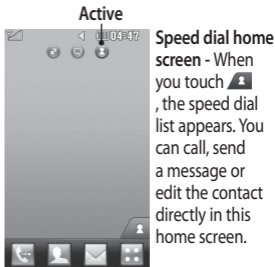

**TIP!** The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

# Your home screen

## The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.





























Touch to open the full **Top menu** which is divided into four categories.

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	Solar cell cover is attached (Gray Sun)
	Solar cell charging is in use (Orange Sun)
	New text message
	New voice message
	Message inbox is full
	Message sending failed


Icon	Description
	Multimedia message sending failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use


# Your home screen

## Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.

## Using the Multi-tasking function

Press the multi-tasking hard key  to open the Multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

# ATMT

## Anti-theft mobile tracker[ATMT]



- 1 The ATMT function provides you with the ability to have a tracking system in place for your phone incase you lose or misplace it.
- 2 When an unauthorized person uses your phone, a SMS is triggered from your phone and the message is sent to your pre-defined phone number.
- 3 You can set the ATMT function by the following steps:
  - Find **SETTINGS** tab from the main menu, then select **Phone settings**, and then select **Security**.
  - Select **Anti-theft mobile tracker**
  - Set ATMT and select ON
  - Enter default ATMT code


### NOTE:

- In case you want to use your phone with some other SIM card, make sure to set the ATMT OFF.
- It is recommended to enter the Number for ATMT with the country code(e.g. for UAE +971 followed by phone number)
- Default ATMT code is "000000".

# Calls



## Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the Smart key.

**TIP!** To enter + for making an international call, press and hold .


**TIP!** Press the power key to lock the touchscreen to prevent calls being made by mistake.

## Making a call from your contacts


- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

## Answering and rejecting a call


When your phone rings, touch the Smart key to answer the call.


To mute the ringing, slide up the cover. This will unlock the phone if it is locked, then tap . This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.

## In-call options

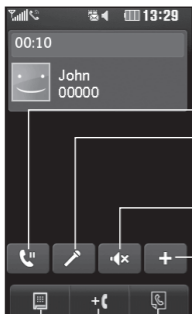



**Hold** - Touch  to put a call on hold.


**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Speaker** - Touch  to turn the speaker phone on.

**Options** - Touch  to bring up a list of further in-call options.

Touch  to search your contacts during a call.

Touch  to add another person to the call.

Touch  to open a numerical keypad for making a second call. This function also allows you to navigate menus with numbered options when you dial automated telephone services, such as call centres.

**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.





# Calls

## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

## Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

**NOTE:** You will be charged for each call you make.

## Viewing your call logs

Touch **Recent history** in the **COMMUNICATION** tab.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

## Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.
- 3 Choose any or all of the six options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
  - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator about this service.

**TIP!** Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

# Calls

## Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

**Call reject** - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **ON** or right for **OFF**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.

**Minute minder** - Slide the switch left to **ON** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select

**Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field will jump the menu to that alphabetical area of the list.


**TIP!** The alphabetical keypad is displayed once you tap the **Name** field.

## Adding a new contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager** and **Fax**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

## Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

# Contacts

## Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Settings**.

2 From here, you can adjust the following settings:

**Contact list settings** - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.

**Copy** - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

**Move** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to.

**Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

**Backup contacts** - Performs a backup your contacts on to the external memory. This option requires external memory.

**Restore contacts** - Restores your contacts from the external memory. This option requires external memory.

**Clear contacts** - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

## Viewing information

1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Information**.

2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My business card**.

**TIP!** To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.


# Messaging

## Messaging

Your GD510 combines SMS and MMS into one intuitive and easy-to-use menu.

## Sending a message


- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.


 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


## Entering text


There are five ways to enter text:

**Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.**

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

## T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

# Messaging


## Handwriting recognition

In Handwriting mode you simply write on the screen and your GD510 will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

## Setting up your email

Touch **E-mail** in the COMMUNICATION tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

## Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch the account you want to use .

## Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

## Changing your email settings

- 1 Touch **E-mail** in the COMMUNICATION tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

### E-mail accounts Preferred e-mail

**Allow reply e-mail** - Choose to allow the sending of read confirmation messages.

**Request reply e-mail** - Choose whether to request read confirmation messages.

**Retrieve interval** - Choose how often your GD510 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at any one time.

**Include message in Fwd. & Reply**

- Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

**New e-mail notification** - Choose whether to be alerted to new emails.

**Signature** - Switch this feature **ON** and create an email signature.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Set the maximum size of sending mail.

**E-mail counter** - Input the date you want. You can check emails you sent during that period.

## Message folders

There are five folders in Messaging menu.

**Inbox** - All the messages you receive are placed into your inbox.

**Drafts** - If you do not finish writing a message, you can save what you have done in this folder.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - All the messages you have sent are placed in this folder.

**My folders** - Create folders to store your messages.

## Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

# Messaging

**Send long text as** - Choose to send long messages as **Multiple SMS** or as an MMS.

## Changing your multimedia message settings

Touch **Messaging** in the **COMMUNICATION** tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose between **Home network** or **Roaming network**.

If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read reply** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.


**Creation mode** - Choose your message mode.

**Delivery time** - Choose how long to wait before a message is delivered.

**Multi msg centre** - Choose one from the list or add a new message centre.

## Changing your other settings

Touch **Messaging** in the **COMMUNICATION** tab. And touch **Settings**.

**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.


**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

**Message counter** - Choose to set period for counting messages.

**Info. service** - Choose whether to turn Cell broadcast on/off and select your channels and languages.

# Camera

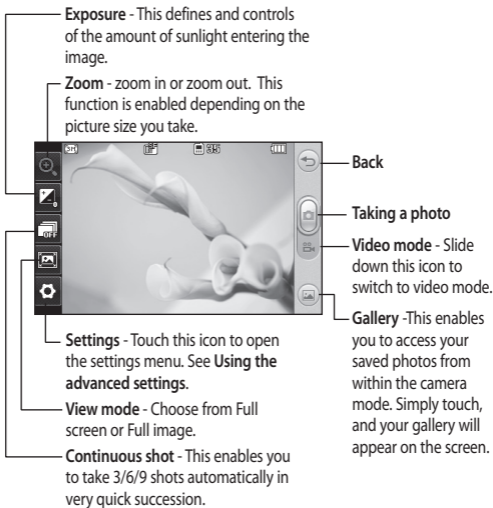


## Getting to know the viewfinder



**TIP!** You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

# Camera






## Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


## After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen image.
-  Touch to edit the photo.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to move to your gallery.



## Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

**Size** - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the six numerical options: **3M (2048x1536)**, **2M (1600x1200)**, **1M (1280x960)**, **VGA (640x480)**, **Home screen (WQVGA)**, **QVGA (320x240)**.

**Colour Effect** - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

**White balance** - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Night mode** - Useful to use in dark places.

**Self-timer** - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

**Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

**Memory** - Choose whether to save your photos to the Handset memory or to the External memory.

**Show captured image** - Choose to view the picture with options after taking a photo.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.


**Shutter sound** - Select one of the three shutter sounds.

**Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.

**Reset settings** - Reset all the camera settings.

# Video camera

## Getting to know the viewfinder

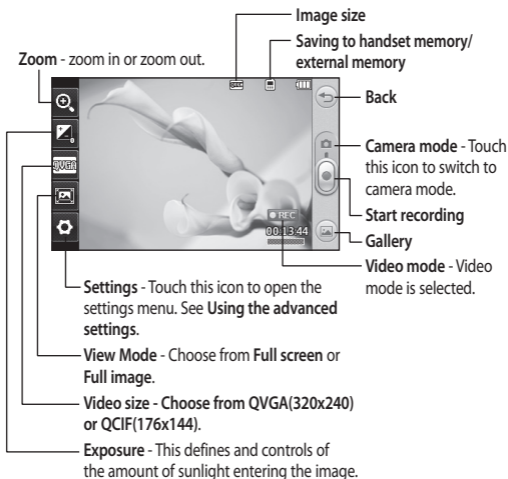







**TIP!** You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

## Making a quick video







- 1 Press the camera key on the right side of the phone for a few seconds.

**TIP!** To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

## After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides.

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth** or **YouTube**.
-  Touch to edit the video.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
- Touch  to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.



# Video camera

## Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

**Colour Effect** - Choose a colour tone to use on your new video. **Off, Black & White, Negative, Sepia.**

**White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy.**

**Quality** - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Duration** - Set a time limit for your video. Choose whether or not to send the video as an MMS.

**TIP!** If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

**Memory** - Choose whether to save your videos to the Handset memory or to the External memory.




**Voice** - Choose whether or not to record a video with sound.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.

**Reset settings** - Reset all the video camera settings.





# Your photos and videos

## Viewing your photos and videos


- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

**TIP!** Flick left or right to view other photos or videos.

## Capturing an image from a video


- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.
- 5 Touch  to return to the video.

- 6 The image will be saved in your **My stuff** folder and appear in the gallery.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


## Viewing your photos as a slide show


Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.

There are options within slideshows:

Touch  to go back.



 Touch to pause the slideshow on a particular photo.

 Touch again to resume playback.


 Touch to increase or decrease the speed of the slideshow.


# Your photos and videos


## Setting a photo as wallpaper


- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch the screen to open the menu.
- 4 Touch .
- 5 You can change the size of the picture with .
- 6 When you are happy with the picture touch **Set**.
- 7 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.


## Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:

 Move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.


 Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



## Adding an effect to a photo

1 From the editing screen, touch



2 Choose to apply any of the options to the photo:

**Face beautify** - Automatically detect a face in the image and brighten it up.


**Tunnel effect** - Lomo camera effect.

**Colour negative** - Colour negative effect.

**Black and white** - Black and white colour effect.

**Sepia** - Give a Sepia effect.

**Blur** - Give a blurred effect.

**Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

**Mosaic blur** - Touch to apply a blurred mosaic effect to the photo.

**Oil painting** - Give an Oil painting effect.

**Sketch** - Apply an effect that makes the picture look like a sketch.

**Emboss** - Give an Emboss effect.

**Solarize** - Change the effect of exposure to the light.

**Vivid** - Give an effect of clearness and brilliance.

**Moonlight** - Change the light to look like moonlight.

**Antique** - Give an old-looking effect.

**Glow** - Give a light beam effect.

**Cartoon** - Give a cartoon effect.

**Water color** - Give a watercolour effect.

3 To undo an effect simply touch

**Undo**  .

# Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

## Pictures

**Images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## Sending a photo

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message, Email, Bluetooth** and **Blogger**.

## Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select

**Images**. Select the picture you want. And touch .

- 2 Touch **Use as** and choose from:

**Homescreen image** - Set a wallpaper for the home screen.


**Lock screen image** - Set a wallpaper for the lock screen.

**Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

**Start up image** - Set an image to appear when you switch the phone on.

**Shut down image** - Set an image to appear when you switch the phone off.


## Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

**TIP!** You can print via bluetooth or by connecting to a PictBridge compatible printer.

## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

## Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

## Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want and a confirmation message appears.
- 3 Touch **Yes**. It will begin to play.

- 4 Touch  and select **Use as**.
- 5 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.


## Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

## Sending a video clip

- 1 Select a video.
- 2 Touch  then **Send** and choose from **Message**, **Email**, **Bluetooth** and **YouTube**.

## Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time.

You can also access this using the menu **Games & Apps** in the ENTERTAINMENT tab.

# Multimedia

## Playing a game

- 1 Touch **Games & Apps** in the ENTERTAINMENT tab.
- 2 Select **Games**, then choose a game to launch.

## Documents

From the **Documents** menu in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

## Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC Suite via your sync cable.

### To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.

- 4 The file should appear in **My folder** as a default, the second tab in **My stuff**. You may overlook the file if the folder is full.





## Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

## Muvee studio

You can create a music video.

## Creating a movie

- 1 Scroll and touch **Muvee studio** in the ENTERTAINMENT tab.
- 2 Touch  to add an image. Tap the checkbox for the images you want to include, then select **Insert**.
- 3 Touch the style tab to choose a Muvee style. The default style is **Classic Sepia**.
- 4 Touch **Default sound** to change the sound.
- 5 Touch  to see what you've created.
- 6 Touch  then **Play order** to create an order. You can make it random or sequential.
- 7 Touch  then **Save Location** to choose where to save the movie.

## Music

Your LG GD510 has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

**NOTE:** The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains all the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.



## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.



You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.

# Multimedia

- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

## FM Radio

Your LG GD510 has an FM radio feature so you can tune into your favourite stations to listen on the move.


**NOTE:** You will need to attach your headphones to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).





42

## Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

### To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


**NOTE:** You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

## Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

# Organiser

## Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

## Adding an item to your to do list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **To do** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

## Using date finder

**Date finder** is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.


- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

# Organiser

## Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

## Setting your alarm


- 1 Touch **Alarms** in the UTILITIES tab.  
**Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Choose weekday**.  
The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

**NOTE:** You can set up to 5 alarms including **Widget alarm**.


**TIP!** Slide the switch **ON/OFF** to the alarm to set it.

## Adding a memo with the drawing panel

- 1 Scroll and touch **Drawing Panel** in the UTILITIES tab .
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Drawing Panel** application.

## Voice recorder

Use your voice recorder to record voice memos or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

**Duration** – Set the recording duration. Choose from **No limit**, **MMS msg. size** or **1 min.**


**Quality** – Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

**Memory in use** – Select where to save the audio files. Choose between **External memory** and **Handset memory**.

## Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

## Using your calculator



- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

## Converting a unit

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

# Organiser

## Adding a city to your World clock

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **World clock**.
- 3 Touch the , followed by **Add city**.
- 4 Scroll the globe, touch the area you want and choose the city on the map.
- 5 Or touch the  and type the name of the city you require in the search field box.

## Using the stopwatch

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Stopwatch**.
- 3 Touch **Start** on the bottom of the screen to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.



## Getting to know the Eco tree

Eco trees are accumulated by charging solar cell. Each tree represents the decreased carbon emissions. You can plant more trees by using more solar energy.



## Getting to know the Eco calculator


You can count the total amount of decreasing carbon emissions by charging the solar cell.

**TIP!** If solar cell is attached to the GD510, Eco tree and Eco calculator are displayed under Tools menu in the UTILITIES tab.


# PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

## Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click to start a backup or began to recover.
- 4 Your information will be backed up or restored.

## Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the **Manage Files** icon.
- 3 All the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the right side of the screen.

# PC Sync

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

## Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Manage Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your SIM card and handset.
- 4 Click on **File** and select **Save**. You can now select the target and where you want to save your contacts to.

**NOTE:** To backup contacts saved to your SIM card, click on the SIM card folder on the left side of your PC screen.

Right-click your contacts and then **Select All**.


Right-click at the same position and select **Copy to Phone Memory**. Now click on the handset folder on the left side of the screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the screen.
- 4 Click the title of the columns to rearrange messages sorted by **Sender, Contents** and **Received date**.

## Using your phone as a Music Sync device

Your Phone can be used as a Music Sync device for Sync Music Files only. Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.

- 1 Disconnect your phone from your PC.
- 2 From the Home screen select , then select **Connectivity** on the **SETTINGS** tab.
- 3 Select **USB connection mode**.
- 4 Touch **Music sync**.
- 5 Connect the phone to your PC. Your phone will read: **Connected**.

# The web

## Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Touch **Browser** in the UTILITIES tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.


- 5 To access the bookmark simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

# The web

## Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

## Accessing a saved page

Touch **Browser** in the UTILITIES tab. And select **Saved pages**. You can view the saved pages here.

## Viewing your browser history

Touch **Browser** in the UTILITIES tab. And select **History**.

## Changing the web browser settings

Touch **Browser** in the UTILITIES tab. And select **Settings**.

You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings.

## Using your phone as a modem

Your GD510 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GD510 and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click **InternetKit** on your PC. Then click **New** button and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GD510.

## Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GD510.
- 2 Pair your PC and GD510 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Internet Kit** on your PC. Then click **New** button.
- 5 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 6 Write the Profile that can connect to the Internet and save the values.
- 7 The profile that you create will appear on your PC screen. Select it and click **Connect**.  
Your PC will connect through your GD510.

# Settings

## Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the SETTINGS tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

## Changing your screen settings

Touch **Screen settings** in SETTINGS tab.

### Screen settings

**Wallpaper** - Choose the theme for your home screen or lock screen.

**Livesquare** - Touch **Livesquare guide** to check its functions.

**Top menu** - Choose the style of the top menu, choose either **Zigzag** or **Scrolling**.

**Handset theme** - Choose the theme for menus. You can also adjust the font size and style.

**Dialling** - Adjust the number colour.

**Brightness** - Adjust the screen brightness.

**Greeting message** - Choose **ON** or **OFF** and fill in the greeting message in the text field.

**Start-up/Shut down** - Choose the theme for your start-up/shut down screen.

## Changing your phone settings

Enjoy the freedom of adapting how your GD510 works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

### Phone settings

**Date & Time** - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

**Power save** - Choose to switch the factory set power saving settings on/off or Night only.

**Languages** - Change the language of your GD510's display.

**Motion silent** - Make the GD510 go into the mute or snooze settings by flipping it over when it is ringing.

**Auto keylock** - Lock the keypad automatically in the Home screen.

**Security** - Adjust your security settings, including PIN codes and handset lock.

**Memory info** - See **Using memory manager** for more information.

**Reset settings** - Restores all settings to their factory defaults.

**Information** - Select **Help** to view the technical information for your GD510. And you can upgrade software with **Handset information**.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch **Connectivity** in the **SETTINGS** tab.

### Network settings

**Select network** - If you select **Automatic**, the GD510 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

**Preferred lists** - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

**Internet profiles** - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn.** - Choose when your device should be connected to network for packet data.

**USB connection mode** - Choose a Data service from the options and synchronise your GD510 using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation. If you use Music sync with Windows Media Player, select **Music sync** in this menu. **Music sync** is only available for music content.

# Settings

## Using memory manager

Your GD510 has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

**Handset common memory** - View the memory available on your GD510 for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**SIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose the location you prefer items to be saved to between Handset and External memory.

## Sending and receiving your files using Bluetooth

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.  
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GD510 will not automatically search for other **Bluetooth** devices. If not, your GD510 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.


**TIP!** Check the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

## Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

**Make your changes to:**

**My device visibility** - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GD510.

**Supported services** - Select how to use Bluetooth in association with different services.

**Remote SIM Mode** - Turn on or off.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GD510 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GD510 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

# Settings

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GD510 will automatically switch to Headset profile.

communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

## Software Upgrade

### LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data

# Accessories

These accessories are supplied with the GD510.

**Charger**



**Data cable**



**Battery**



**CD**



**Stereo headset**



## **NOTE:**

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## Ambient Temperatures

Max : +55°C (discharging),  
+45°C (charging)

Min : -10°C

## Declaration of Conformity



### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

GD510

Trade Name

LG

# CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1  
EN 300 328 V 1.7.1  
EN 60950-1 : 2001  
EN 50360:2001/EN62209-1:2006  
EN 301 511 V9.0.2

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31-36-547-8940, Fax : +31-36-547-8794  
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

02, Sep, 2009

  
Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GD510 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on

Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.29 W/kg (10 g) and when worn on the body is 1.08 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

# Guidelines for safe and efficient use

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.

# Guidelines for safe and efficient use

- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable

performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.











