



KP275 使用手册

LG ELECTRONICS INC.

KP275

繁體中文
簡體中文
ENGLISH

CE 0168

www.lgmobile.com

P/N : MMBB0312109 (1.0)

Bluetooth QD ID B014492



此手冊內的部份內容可能因應手機的軟件或你的服務供應商而跟你的手機有所不同。

KP275 使用手冊 | 繁體中文

恭喜您買了 LG 先進輕巧的 KP275 手機, 本手機專為利用最新的數碼流動通訊科技而設計。

設定 01

主屏幕 02

基本功能 03

自製功能 04

管理功能 05

瀏覽器 06

設定 07

配件 08

目錄

安全及有效使用的指引	7	通訊錄	22
01 設定		搜尋通訊錄	22
了解您的手機	11	新增通訊錄	22
手機視圖	12	通訊錄選項	22
安裝智能咭和電池	13	新增通訊錄至群組	23
記憶咭	16	重新命名群組	23
安裝記憶咭	16	新增圖片至通訊錄	23
取出記憶咭	16	將通訊錄複製到智能咭	24
格式化記憶咭	16	檢視資訊	24
功能總覽	17	訊息	25
02 桌面		訊息	25
桌面	18	發送訊息	25
狀態列	18	輸入文字	25
03 基本功能		使用鍵盤的文字輸入模式	25
通話	19	設定電子郵件	26
撥打電話	19	透過新帳戶發送電子郵件	26
透過通訊錄撥打電話	19	訊息資料夾	26
接聽來電和拒接來電	19	管理訊息	26
撥打視像通話	19	使用常用範本	27
快速撥號	19	變更文字訊息設定	27
檢視通話記錄	20	變更多媒體訊息設定	28
使用來電轉接	20	變更電子郵件設定	28
使用通話限制	20	變更其他設定	29
變更通話設定	21		
變更通用設定	21		
視像通話設定	21		

04 自製功能	
相機	30
快速拍照.....	30
拍攝照片前.....	30
拍攝照片後.....	30
變更圖像大小.....	31
檢視已儲存照片.....	31
將相片設定為牆紙或通訊錄圖像.....	31
視像攝錄機	32
拍攝快速影片.....	32
錄製影片後.....	32
觀看已儲存影片.....	32
音樂	33
音樂.....	33
將音樂傳送至手機.....	33
播放歌曲.....	33
播放音樂時使用選項.....	33
建立播放列表.....	34
播放播放列表.....	34
編輯播放列表.....	34
刪除播放列表.....	35
FM 收音機	36
收聽收音機.....	36
搜尋電台.....	36
編輯頻道.....	36
重設頻道.....	36
使用語音備忘錄.....	37
發送錄音.....	37
我的檔案	38
圖像.....	38
我的圖像選項功能表.....	38
發送照片.....	38
管理圖像.....	39
刪除圖像.....	39
檢查記憶體狀態.....	39
聲音.....	39
使用聲音.....	39
影片.....	39
觀看影片.....	39
在觀看影片時使用選項.....	40
發送錄像片段.....	40
使用影片選項功能表.....	40
我的應用程式.....	40
玩遊戲.....	41
使用遊戲選項功能表.....	41
其他.....	41
我的記憶咭.....	41
遊戲及應用程式	42
遊戲及應用程式.....	42
玩遊戲.....	42
Yahoo	43

目錄

05 管理功能

記事簿.....	44
新增事項至日曆.....	44
編輯日曆事件.....	44
新增待辦事項.....	44
新增備忘錄.....	44
保密備忘錄.....	45
日期搜尋器.....	45
設定.....	45

工具.....	46
設定鬧鐘.....	46
使用計算機.....	46
快選功能表.....	46

06 瀏覽器

瀏覽器.....	47
存取網絡.....	47
新增並存取書籤.....	47
儲存網頁.....	47
存取已儲存的網頁.....	47
檢視瀏覽器記錄.....	48
使用 RSS 讀取裝置.....	48
變更網頁瀏覽器設定.....	48

07 設定

設定.....	49
變更您的情景模式.....	49
自訂您的情景模式.....	49
變更您的日期和時間.....	49
變更語言.....	49
變更安全性設定.....	50
變更您的顯示設定.....	50
檢視記憶體狀態.....	50
重設手機.....	50

連接.....	51
變更連接設定.....	51
變更您的藍芽設定.....	51
同其他藍芽裝置配對.....	51
使用藍芽耳機.....	52
傳送檔案到手機.....	52
使用藍芽發送和接收檔案.....	52
USB 連線模式.....	53
自選模式.....	53
將手機用作大容量儲存裝置.....	53
將手機用作數據機.....	54
PC Suite-同步手機與電腦.....	54

08 配件

配件.....	55
網絡服務.....	56
技術資料.....	56
一般.....	56
環境溫度.....	56

安全及有效使用的指引

請閱讀以下簡易的使用準則。違反這些準則可能會發生危險或觸犯法律。詳細資訊刊於本用戶手冊的正文部份。

無線電波暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 KP275 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量子單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.711 W/kg(10g) 攜帶於身上時則為 0.998 W/kg(10g)。

- 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/Kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

產品護理及維修

警告！

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 遠離電子裝置，如電視、無線電或個人電腦。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 切勿將手機放入微波爐中，這會導致電池爆炸。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 如在特別環境的要求下，請關閉手機。如請勿在未得到批准下在醫療儀器附近使用您的手機。

安全及有效使用的指引

- 請勿以潮濕的雙手對充電中的手機進行操作。
- 這可能會引致觸電或造成手機嚴重損壞。
- 請勿使用刺鼻的化學物品（如酒精、苯、稀釋劑等等）或清潔劑來清潔手機。這可能有失火的危險。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- 開機前，請拔除數據線。

電子裝置

所有手機都可能因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。
- RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。

如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

在飛機

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。

安全及有效使用的指引

- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

了解您的手機



- 在備用模式下：
 - 向上：快選功能表。
 - 向下：搜尋
 - 向右：訊息
 - 向左：情景模式
- 功能表中：在功能表之間導覽。

01

02

03

04

05

06

07

08


手機視圖



安裝智能咭和電池


1 取下電池蓋

沿手機下方推動電池蓋，並提起電池蓋。

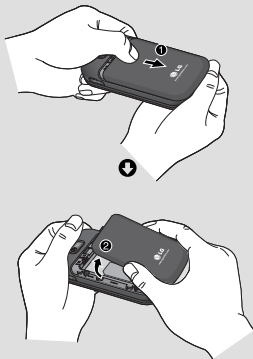

2 取下電池

抬起電池的下方邊緣，小心將其從電池格中取出。

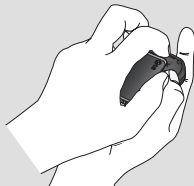

警告：手機開機時，不要取下電池，因為這樣會損壞手機。

3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。要取出智能咭，請向反方向抽出。

警告：當滑蓋打開時，請勿插入智能咭，這樣會損壞手機和智能咭。

01

02

03

04


05

06

07


08

安裝智能喺和電池

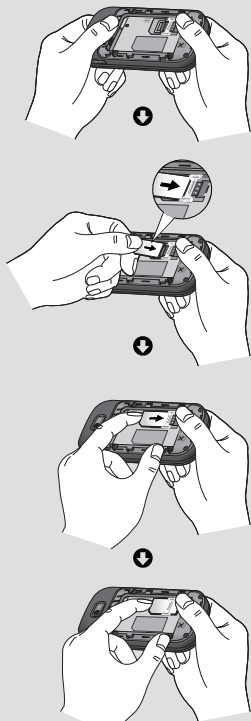

4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池固定。

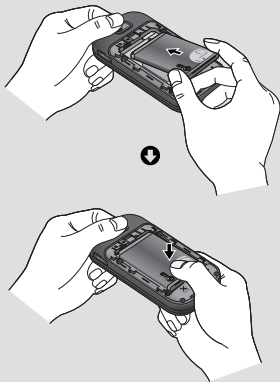


5 蓋上電池蓋


蓋上電池蓋，並蓋緊電池蓋。



6 手機充電

打開 KP275 側面的充電器插孔蓋。插入充電器並插入電源插座。為您的 KP275 手機充電，直至屏幕上顯示「電池電量已滿」訊息。

 警告：不要在柔軟家具上為手機充電。應該在通風良好的區域為手機充電。

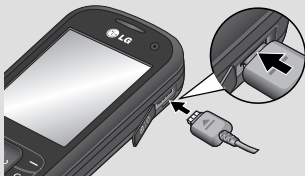

01

02

03

04

05

06

07

08


記憶咭

安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。

提示：記憶咭是選購配件。

打開保護蓋，將記憶咭插入側面的插槽，直到卡緊為止。請確保金屬接觸區面向下(如圖示)。

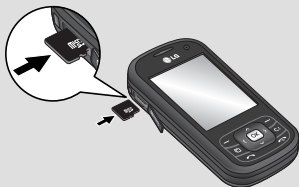

取出記憶咭

打開記憶咭保護蓋，並按下圖所示，將記憶咭輕輕推進手機並放開，從而小心將其取出：



格式化記憶咭

您的記憶咭可能已格式化了。如果您的記憶咭尚未格式化，則在開始使用前，需要將其格式化。

- 1 從備用屏幕按 **OK** 選擇設定。
- 2 選擇記憶體管理，然後再選擇我的記憶咭。
- 3 點按格式化並輸入密碼，預設情況下，安全密碼設定為 0000。您的記憶咭將會格式化，可隨時使用。
- 4 要檢視 KP275 上新格式化資料夾，請點按 **OK** 並選擇我的檔案。選擇我的記憶咭。

警告：格式化記憶咭時，所有的內容將會被清除。如果不想丟失記憶咭上的資料，請先進行備份。

功能總覽



遊戲及應用程式

- 1 我的遊戲及應用程式
- 2 設定



通話

- 1 視像通話撥號
- 2 通話記錄
- 3 通話時間
- 4 數據用量
- 5 通話費用
- 6 來電轉駁
- 7 通話限制
- 8 固定撥號號碼
- 9 來電等候
- 0 通用設定
- * 視像通話設定



記事簿

- 1 日曆
- 2 待辦事項
- 3 備忘錄
- 4 保密備忘錄
- 5 日期搜尋器
- 6 設定



多媒體

- 1 相機
- 2 視像攝錄機
- 3 音樂
- 4 FM 收音機
- 5 語音備忘錄



訊息

- 1 建立新訊息
- 2 收件匣
- 3 郵箱
- 4 草稿
- 5 寄件匣
- 6 已發送項目
- 7 我的資料夾
- 8 常用範本
- 9 情感圖示
- 0 設定



我的檔案

- 1 我的圖像
- 2 我的聲音
- 3 我的影片
- 4 我的遊戲及應用功能
- 5 其他
- 6 我的記憶咭



Yahoo

- 1 Yahoo! oneSearch
- 2 Yahoo! Mail
- 3 Yahoo! Messenger
- 4 Yahoo! Address Book



通訊錄

- 1 新增
- 2 搜尋
- 3 快速撥號
- 4 群組
- 5 服務撥號號碼
- 6 本手機號碼
- 7 我的名片
- 8 設定



工具

- 1 快選功能表
 - 2 鬧鐘
 - 3 計算機
 - 4 秒錶
 - 5 單位轉換器
 - 6 世界時間
 - 7 智能咭服務
- 這功能視乎不同智能咭和網絡商。如果您的網絡商支援智能咭服務，便會出現此功能。



瀏覽器

- 1 主頁
- 2 輸入網址
- 3 書籤
- 4 RSS 讀取裝置
- 5 已儲存網頁
- 6 記錄
- 7 設定



連接

- 1 藍芽
- 2 USB 連線模式



設定

- 1 情景模式
- 2 手機
- 3 屏幕
- 4 日期及時間
- 5 網絡
- 6 互聯網設定
- 7 存取點
- 8 分組數據連線
- 9 安全
- 0 記憶體管理
- * 串流播放設定
- # 重設設定

01

02

03

04

05

06

07

08

桌面

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池壽命等情況，亦告訴您藍芽是否已啟動。




下表說明可能在狀態列中看到的圖示的含義。

圖示	說明
	網絡訊號強度 (列數會有變化)
	無網絡訊號
	可使用 GPRS
	正在使用 EDGE
	已啟用飛航模式
	通話已轉駁
	漫遊
	藍芽已啟動
	已連接 WAP 服務
	多項工作

圖示	說明
	Push 訊息
	鬧鐘已設定
	日程表
	新訊息
	新語音訊息
	正在使用標準情景模式
	正在使用靜音情景模式
	正在使用戶外情景模式
	正在使用耳機情景模式
	剩餘電量
	電池已耗盡


通話

撥打電話


- 1 確保手機已開啓。
- 2 開啓滑蓋後您可使用鍵盤。若要刪除某個數字，請按 。
- 3 按  開始通話。
- 4 若要結束通話，請按  或關閉滑蓋。

提示！若要在撥打國際電話時輸入「+」，請按住 0。


透過通訊錄撥打電話

- 1 選擇功能表中的通訊錄，然後選擇搜尋。
- 2 使用鍵盤輸入要通話聯絡人的名字，然後選擇該聯絡人。
- 3 按  開始通話。

接聽來電和拒接來電


手機響鈴後，按接受或按  接聽來電。

手機正在響鈴時，您可按靜音使響鈴靜音。如果在開會時忘記將情景模式變更為靜音，此功能將十分有用。

按  或選擇拒絕，拒接來電。


撥打視像通話


只有當您和通話對方均位於 3G 覆蓋範圍內時，才可以撥打和接聽視像通話。

- 1 使用鍵盤輸入號碼，或透過「搜尋」選擇電話號碼。
- 2 要啓用視像功能，請按左軟鍵 [選項] 並選擇視像通話撥號。
- 3 根據需要調校攝錄機位置。
- 4 按  或合上手機可結束通話。

快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 按  開啓主功能表。選擇通訊錄，然後選擇快速撥號。
- 2 您的留言信箱預設為快速撥號 1，因此您無法變更此設定。使用導覽鍵並選擇新增或按硬鍵號碼以選擇任何其他號碼。
- 3 通訊錄將開啓。使用導覽鍵，選擇要指定到此號碼的聯絡人，然後選擇選擇。

要撥打快速撥號號碼，請按住指定的號碼，直到電話顯示在屏幕上。通話將自動開始，且不需按 。

01

02

03

04

05

06

07

08

通話

檢視通話記錄

從備用屏幕按 **OK** 選擇**通話**並選擇**通話記錄**。

選擇要檢視的對象：

所有通話 - 檢視所有撥出、已接和未接來電的完整清單。

撥出通話 - 檢視所有已撥出通話的清單。

已接來電 - 檢視所有已接聽來電的清單。

未接來電 - 檢視所有未接來電的清單。

提示! 從任何通話清單，按選項並按刪除全部以刪除所有已存的項目。

使用來電轉接

- 1 按 **OK**，選擇通話。
- 2 選擇來電轉駁。從語音通話和視像通話中選擇。或者，您可選擇停用全部。
- 3 選擇當線路繁忙時、無人接聽、無法接通時，是否轉駁所有通話。
- 4 選擇啓動並選擇是否轉駁至留言中心或轉至其他號碼。
- 5 輸入您的轉駁號碼，或選擇搜尋瀏覽轉駁號碼的通訊錄。

注意：轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

提示！要關閉所有來電轉駁，請從來電轉駁功能表選擇停用全部。

使用通話限制

- 1 按 **OK**，選擇通話。
- 2 選擇通話限制。從語音通話和視像通話中選擇。或者，您可選擇停用全部。
- 3 選擇以下五個選項的任何一個或所有：
 - 所有撥出的通話
 - 國際通話撥號
 - 本地以外的國際撥號
 - 所有來電
 - 國際漫遊時來電
- 4 選擇啓動並輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示! 從通話功能表中選擇固定撥號號碼，以開啓並編譯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。啓用後，僅固定撥號清單中包含的號碼可從手機撥出。

變更通話設定

- 按 **OK**，選擇通話。
- 您可從此處修改以下選項的設定：
 - 通話時間** - 檢視通話時間詳情，包括已接來電和撥出通話。
 - 數據用量** - 檢視所有針對網絡、數據或全部的已接收和已發傳送數據量（以千字節表示）。
 - 通話費用** - 檢視套用至最後通話或所有通話的費用。此服務取決於網絡，部份網絡商無法支援此項服務。
 - 來電轉駁** - 選擇是否轉駁您的來電。
 - 通話限制** - 選擇要限制的通話。
 - 固定撥號號碼** - 選擇可從您的手機呼叫的號碼清單。
 - 來電等候** - 有來電等候時，手機會提示您。

變更通用設定

- 從備用屏幕按 **OK** 選擇通話。
- 選擇通用設定。您可從此處修改以下選項的設定：
 - 來電拒接** - 選擇開啓或關閉並選擇拒接所有通話、通訊錄、群組、無

名稱記錄(不在通訊錄中的號碼)或無來電號碼。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。自動重撥 - 選擇開啓或關閉。

接聽模式 - 選擇是使用按發送鍵、開啓滑蓋或按任何鍵來接聽來電。

分鐘提示 - 選擇開啓後，您便可在通話時聽到分鐘提示音。

藍芽接聽模式 - 選擇免提，可使用藍芽耳機接聽來電或選擇手機，便可透過按手機上的按鍵來接聽來電。

儲存新號碼 - 選擇「是」儲存新號碼。

滑蓋關閉設定 - 設定是否在合上滑蓋時結束通話。

視像通話設定

您可設定撥打/接聽視像通話時的桌面顯示。

- 使用私人圖片：決定是否顯示私人圖像。
- 選擇私人圖像：選擇要顯示的靜態圖像。
- 鏡像：選擇是否啓用鏡像效果。

通訊錄

搜尋通訊錄

- 1 從主功能表中選擇通訊錄，然後選擇搜尋。
- 2 使用鍵盤輸入要進行通話的聯絡人名字。
- 3 要檢視聯絡人及其不同的號碼，請使用導覽鍵。

新增通訊錄

- 1 選擇通訊錄，然後選擇新增。
- 2 選擇是否在手機或智能咭上儲存新通訊錄。
- 3 在提供的欄位中，輸入所需資訊並選擇完成。

或者使用稍微快捷一點的方法…

- 1 輸入要儲存的號碼，然後按選項。
- 2 選擇儲存號碼，然後選擇新增通訊錄或更新通訊錄。
- 3 輸入相關資訊，然後選擇完成。

通訊錄選項

您可在檢視通訊錄時進行多項操作。以下是存取和使用選項功能表的方式：

- 1 從主功能表中選擇通訊錄，然後選擇搜尋。
- 2 選擇選項以開啓選項清單。

在此處您可以：

發送訊息 - 發送訊息給聯絡人。如果聯絡人具有電子郵件地址，選擇您是否要發送訊息或電子郵件。

發送名片 - 以名片方式向他人發送聯絡人的詳細資料。選擇以文字訊息、多媒體訊息、透過電子郵件或藍芽發送。

語音通話撥號 - 直接給選定的聯絡人撥打語音通話。

視像通話撥號 - 直接給選定的聯絡人撥打視像通話。

新增通訊錄 - 新增通訊錄。

編輯 - 變更聯絡人的任何詳細資料。

新增至群組 - 將聯絡人移至群組。

標記 / 取消標記 - 標記某個或全部聯絡人。

搜尋於 - 按號碼或群組搜尋通訊錄。

儲存到智能咭 - 選擇要移動或複製至智能咭還是手機（視您起初儲存聯絡人的位置而定）。

刪除 - 刪除聯絡人。確定後，請選擇是。

文字輸入 - 您可為聯絡人附加符號，變更輸入法模式、寫入語言或新增字詞至字典。

新增通訊錄至群組

您可將聯絡人儲存至不同群組中。例如，將同事與家庭成員分開。手機上存在很多已設定好的群組，包括家人、朋友、同事、同學和重要人士。

- 1 選擇通訊錄並選擇群組。
- 2 選擇到要向其中新增聯絡人的群組並選擇開啓，然後選擇新增。
- 3 將開啓通訊錄清單。選擇到要將其新增至群組中的任何聯絡人並按 標記，然後選擇完成。

提示！ 您可為群組指定鈴聲。
選擇要為其指定鈴聲的群組，並選擇選項及所需的項目。

重新命名群組

您可為自己建立的群組重新命名，以適合您的生活方式。

- 1 選擇通訊錄並選擇群組。
- 2 選擇要為其重新命名的群組。
- 3 選擇選項，再選取重新命名，並輸入您的新群組名稱。
- 4 選擇完成。

注意：您只能將聯絡人指定到群組中，或將圖片新增至已儲存在手機（不是智能咭）記憶體中的通訊錄。

新增圖片至通訊錄

您可變更通訊錄中聯絡人的外觀，使其包含圖片。

- 1 選擇通訊錄並選擇設定。
- 2 選擇通訊錄列表設定並選擇顯示圖片，然後選擇開啓。
選擇完成。
- 3 返回搜尋，並選取要將圖片新增至其中的聯絡人。
- 4 選擇選項並選擇編輯。

通訊錄

- 5 向下選擇至圖像部分。選擇編輯，然後選擇沒有圖像、替身、拍照或使用現有圖像。選擇使用現有圖像後，您可選擇已儲存至手機記憶體中的圖像。選擇拍照後，您的相機取景器將會開啓，這樣您可為聯絡人拍照。拍攝照片，然後按確定。
- 6 選擇完成。

將通訊錄複製到智能咭

您亦可選擇在手機和智能咭之間複製通訊錄。

- 1 選擇通訊錄，然後依次選擇設定和複製。
- 2 選擇在手機至智能咭或智能咭至手機之間複製通訊錄。
- 3 選擇全部或依次序。
- 4 確定後，選擇完成。

檢視資訊

選擇通訊錄。您可從此處檢視服務撥號號碼、本手機號碼和我的名片。

提示！如果您尚未建立名片，名片屏幕將為您提供建立名片的選項。選擇新增並輸入要為聯絡人提供的任何詳情。完成後，選擇完成。

訊息

訊息

KP275 包含與 SMS（文字訊息）、MMS（多媒體訊息服務）和電子郵件及網絡服務訊息相關的功能。若要使用這些功能，請按 **OK** 並選擇訊息。

發送訊息

- 1 若要建立新訊息，請按 **OK** 並選擇訊息，最後選擇建立新訊息。
- 2 選擇訊息以發送文字訊息或多媒體訊息。
- 3 新訊息編輯器將開啓。
訊息編輯器將文字訊息和多媒體訊息集中在一個易於相互切換的模式中。訊息編輯器的預設設定為文字訊息模式。
- 4 使用鍵盤輸入訊息。請參閱右側的輸入文字，了解更多有關如何輸入文字的資訊。
- 5 選擇選項，然後選擇附加新增圖像、影片、聲音、符號、常用範本、情感圖示、名稱及號碼、新投影片、標題或更多（名片/日程表/備忘錄/待辦事項/我的名片）。
- 6 選擇發送。

- 7 從通訊錄選擇某個聯絡人，或從號碼輸入電話號碼。
- 8 選擇發送。

⚠ 警告：若在訊息編輯器中新增了圖像、聲音、影片、投影片或標題，它將自動轉換為多媒體訊息，同時您需為此支付相應費用。

輸入文字

使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立事項，都需要輸入文字。手機中提供以下可用的文字輸入方式：英文字典模式(T9 模式)、ABC 模式和 123 模式。(文字輸入視乎語言設定)

注意：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中的電話號碼）。

使用鍵盤的文字輸入模式

當您需要輸入文字時（例如編寫訊息），鍵盤將預設為 T9 模式。輸入號碼時，例如撥打電話，鍵盤數字鍵將預設為數字模式。

01

02

03

04

05

06

07

08

訊息

設定電子郵件

縱使出門在外，您亦可使用 KP275 上的電子郵件功能與他人保持聯絡。您可快速輕鬆地對 POP3 或 IMAP4 電子郵件帳戶進行設定。

- 1 按 **OK**，然後依次選擇訊息和設定。
- 2 選擇電子郵件，然後選擇電子郵件帳戶。
- 3 選擇新增並遵循快顯指示，然後輸入所需資訊。

透過新帳戶發送電子郵件

若要發送/接收電子郵件，您必須設定一個電子郵件帳戶（詳情請見上文）。

- 1 按 **OK** 並選擇訊息，最後選擇建立新訊息。
- 2 選擇電子郵件，將開啓一個新的電子郵件視窗。
- 3 寫入標題行，然後按「確定」。
- 4 使用鍵盤輸入訊息。

郵箱 - 其中包含所有電子郵件訊息。選擇要使用的帳戶，然後選擇擷取。KP275 便會連接至您的電子郵件帳戶並擷取新訊息。

訊息資料夾

按 **OK**，然後選擇訊息。KP275 手機上使用的資料夾結構可一目了然。

建立新訊息 - 建立新訊息。

收件匣 - 您可檢視訊息。

郵箱 - 接收到的所有電郵會置於您的郵箱。

草稿 - 若不夠時間完成訊息，您可將寫完的部份儲存於此處。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送的訊息將置於您的「已發送項目」資料夾中。

我的資料夾 - 您可將收件匣或已發送訊息中的訊息移至我的資料夾，然後將我的資料夾中的訊息移至原有訊息方塊中。

常用範本 - 一個已編寫好的有用訊息清單，可用於快速回覆。

情感圖示 - 您可新增、編輯和刪除情感圖示。您可在編寫訊息時插入喜愛的情感圖示。

管理訊息

- 1 從備用屏幕按 **OK** 選擇**訊息**並選擇**收件匣**。
- 2 選擇**選項**，然後選擇：

回覆 - 回覆所選訊息。

轉寄 - 將所選訊息發送給他人。

通話 - 向您的寄件者撥打電話。

刪除 - 刪除訊息。

建立新訊息 - 開啓新的空白訊息或電子郵件。

標記/取消標記 - 標記您的訊息以便進行多重刪除。

複製及移動 - 複製或移動訊息至手機、智能咭 或我的資料夾。

篩選 - 按類型來檢視訊息。這樣可將文字訊息與多媒體訊息分開。

訊息資訊 - 參閱訊息的其他資訊，包括類型、標題、寄件者或發送時間。

看到無足夠空間儲存智能咭訊息這則訊息時，請從收件匣中刪除部份訊息。

看到無足夠空間儲存訊息這則訊息時，您可透過刪除訊息或已儲存的檔案來釋放空間。

使用常用範本

爲您最常發送的 文字訊息及多媒體訊息 建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

1 從備用屏幕按 **OK** 選擇**訊息**並選擇**常用範本**。

2 選擇文字範本或多媒體範本。然後，您可選擇**選項**以新增、編輯、刪除或刪除全部範本。

變更文字訊息設定

您的 KP275 已預先定義訊息設定，以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。

從備用屏幕按 **OK** 依次選擇**訊息**、**設定**和**文字訊息**。

您可對以下各項進行變更：

文字訊息中心 - 爲您的訊息中心輸入詳細資料。

發送報告 - 選擇是否要就已發送的訊息接收確認訊息。

有效時期 - 選擇訊息要在訊息中心中保留多久。

訊息類型 - 將您的文字轉換爲語音、傳真、X.400 或電子郵件。

字元編碼 - 選擇訊息中字元的編碼方式，這將影響到您的訊息大小，進而影響數據費用。

發送長文字時設爲 - 當在訊息欄位中輸入的文字長度超過 2 頁時，選擇是以多個文字訊息還是多媒體訊息來發送訊息。

01

02

03

04

05

06

07

08

訊息

變更多媒體訊息設定

您的 KP275 已預先定義訊息設定以便您可立即發送訊息。如果您要變更設定，可按以下指示執行操作。

從備用屏幕按 **OK** 依次選擇訊息、設定和多媒體訊息。

您可對以下各項進行變更：

接收模式 - 選擇本地或漫遊網絡。隨後若選擇手動，您只會先收到多媒體訊息通知，以便您決定是否進行完整下載。

發送報告 - 選擇是否要求或允許發送報告。

閱讀回覆 - 選擇是否要求或允許閱讀回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息要在訊息中心中保留多久。

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

建立模式 - 選擇您的訊息模式。

發送時間 - 在指定時間發送您的訊息。

多媒體訊息中心 - 為您的訊息中心輸入詳細資料。

變更電子郵件設定

您可對電郵設定進行調整，以便符合您的使用習慣。

- 1 按 **OK**，然後依次選擇訊息和設定。
- 2 選擇電子郵件，然後您可調整以下設定：

電子郵件帳戶 - 您可設定電郵帳戶。

允許回覆電郵 - 選擇開啓或關閉允許發送「閱讀確認」訊息。

要求回覆電郵 - 選擇開啓或關閉要求接收「閱讀確認」訊息。

擷取時隔 - 選擇 KP275 查收新電郵的頻率。

轉寄及回覆時加入原始訊息 - 選擇是否包含原始訊息。

包括附件 - 選擇是否加入原始附件。

在漫遊中自動擷取 - 選擇在國外時，是自動接收訊息或停止接收。

新電子郵件通知 - 選擇是否要獲得新電郵的通知。

簽名 - 建立電郵簽名並啓用此功能。

重要性 - 選擇電郵的優先等級。

變更其他設定

按 **OK**，選擇訊息，然後依次選擇設定以及：

視像留言信箱 - 您可新增視像留言信箱中心。

留言信箱 - 您可選擇留言信箱。

服務訊息 - 您可在此處關閉服務訊息，這意味著訊息接收後不會被直接存於至手機中，除非您檢查是否有新訊息。您亦可變更服務訊息的安全性。

資訊服務 - 選擇區域廣播、頻道和語言。

01

02

03

04

05



06

07

08


相機


快速拍照


- 1 按  並選擇多媒體。選擇相機以開啓取景器。
- 2 握穩手機，將鏡頭對準拍照對象。
- 3 定位手機，以便您看到拍照的對象。
- 4 按  拍照。


拍攝照片前


按設定將顯示以下選項，其中某些選項亦會顯示在視像攝錄機設定中：


 **圖像大小** - 請參閱第 31 頁的變更圖像大小。


 **亮度** - 從 -2.0 至 +2.0，變化增量為 0.5。等級越高，畫面亮度越大。


 **色彩效果** - 從以下四種色調選項中選擇：關閉（標準/彩色）、深褐色、黑白或負片。

 **白平衡** - 白平衡可確保照片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從自動、白熱光、陽光、日光燈或陰天中進行選擇。

 **夜間模式** - 若在夜間拍攝時開啓此功能，可獲得更好拍攝效果。


 **計時器** - 計時器可讓您設定按拍攝按鈕後，相機開始拍照前的延遲時間。可供選擇的選項為關閉、3 秒、5 秒或 10 秒。如果您想在拍照時讓自己一起留影，此功能十分有用。


 **拍攝模式** - 可從標準和連環拍攝中選擇。連環拍攝功能可讓您自動快速而連貫地拍攝三張、六張或九張照片，特別適用於拍攝移動物體或體育賽事。


 **圖像質量** - 在特細緻、細緻及標準之間選擇。品質越細緻，相片便越清晰。因此，相片佔用的檔案空間會增大，記憶體中儲存的相片數量就會相應減少。

拍攝照片後

您的拍攝照片會顯示在屏幕上。圖像名稱會顯示在屏幕頂部，您可在屏幕左側看到五個選項。

 **影集** - 選擇以查看影集中的其他相片。當前相片將會被儲存。

 **發送** - 選擇此選項以便透過訊息或電子郵件方式發送相片。請參閱第 25 頁的發送訊息。

 **相機** - 使用此功能可直接拍攝新的相片。當前相片將會被儲存。



使用方式 - 選擇以開啓子功能表，將您的圖像用作牆紙、通訊錄圖像、開機圖像或關機圖像。



刪除 - 刪除剛剛拍攝的相片。選擇是予以確認。取景器將再次出現。

變更圖像大小

您可變更相片大小，以節省記憶體空間。像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若要在手機上儲存更多相片，您可以變更圖片像素以縮小檔案。

- 1 按設定並從工具列中選擇圖像大小。
- 2 從以下三個數字選項中選擇像素值：（320x240、640x480、1280x960）。
- 3 按選擇儲存變更。

檢視已儲存照片

- 1 您可從相機模式和桌面上存取已儲存的相片。從取景器：只需按下影集。從桌面：按 **OK**，然後選擇我的檔案和我的圖像。
- 2 您的圖片集、下載圖像和預設圖像資料夾將會顯示在屏幕上。
- 3 使用導覽鍵選擇要檢視的相片，然後選擇檢視以開啓相片。

將相片設定為牆紙或通訊錄圖像

從我的圖像，選擇圖像和使用方式，將圖像用作牆紙或通訊錄圖像。

注意：通訊錄圖像僅能新增至儲存至手機（而不是智能咭）的通訊錄。

01

02

03

04

05


06

07

08


視像攝錄機


拍攝快速影片


- 1 按  並選擇多媒體。
- 2 選擇視像攝錄機。
- 3 將鏡頭對準拍攝對象。
- 4 按 [OK] 可開始錄製。
- 5 錄製會出現在取景器的右下角，同時計時器將顯示影片的長度。
- 6 若要暫停影片，請選擇暫停，選擇恢復可繼續錄製。
- 7 選擇停止以停止錄製。


錄製影片後


影片名稱及五個選項會示在屏幕底部。

 **影集** - 選擇以查看影集中的其他影片剪輯。當前影片將會被儲存。



 **播放** - 選擇以播放剛剛錄製的影片。

 **新增** - 選擇以直接錄製另一段影片。當前影片將會被儲存。

 **發送** - 選擇以透過訊息、電子郵件或藍芽方式發送影片。請參閱第 25 頁的發送訊息。

 **刪除** - 刪除剛錄製的影片，並透過按「是」予以確認。取景器將再次出現。

觀看已儲存影片

- 1 您可從視像攝錄機模式或從桌面上存取已儲存的影片。如果從視像攝錄機模式觀看，只需選擇影集。如果從桌面上觀看，則需按下 , 然後選擇我的檔案和我的影片。
- 2 我的影片將顯示於屏幕上。
- 3 使用導覽鍵選擇要檢視的影片，然後按  鍵即可欣賞影片。

音樂

音樂

LG KP275 具有內置的音樂播放器，這樣，您可播放所有喜愛的曲目。要存取音樂播放器，請從備用屏幕按

OK 選擇多媒體並依次選擇音樂。

您可從此處存取大量資料夾：

最近播放 - 檢視所有最近播放的。

全部曲目 - 包含手機上具有的所有歌曲。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按音樂專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含建立的任何播放列表。

隨機播放曲目 - 以隨機順序聆聽音樂。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或USB線。若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啓藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 發送檔案後，在手機上選擇是予以接受。
- 4 檔案將出現在全部曲目中。

播放歌曲

1 按 **OK** 並依次選擇多媒體和音樂。

2 選擇全部曲目，然後選擇要播放的歌曲。選擇播放。

選擇 **||** 暫停歌曲。

選擇 **▶▶** 跳至下一首歌曲。

選擇 **◀◀** 跳至上一首歌曲。

選擇返回停止音樂，並返回至全部曲目功能表。

提示！要在聆聽音樂時調節音量大小，請使用向上和向下導覽鍵。

播放音樂時使用選項

選擇「選項」並從以下選項中選擇：

最小化 - 使音樂播放器屏幕消失，這樣，您可按正常方式繼續使用手機。

轉至我的音樂 - 移至我的音樂資料夾。

重複 - 重複選定的曲目。

隨機播放 - 以隨機順序聆聽音樂。

均衡器 - 設定均衡器功能表。

視覺效果 - 選擇視覺效果。

檔案資訊 - 檢視播放列表資訊。

發送 - 透過訊息、電子郵件或藍芽發送給朋友。

01

02

03

04

05

06

07

08

音樂

使用方式 - 將歌曲用作一種鈴聲、訊息提示音、開機或關機音效。

建立播放列表

透過從全部曲目資料夾中選擇歌曲項目，從而建立自己的播放清單。

- 1 按 **OK** 並選擇多媒體。
- 2 選擇音樂，然後選擇播放列表。
- 3 按新增播放列表並輸入播放列表名稱。按儲存。
- 4 新播放列表資料夾將顯示。透過選擇至要包含在播放列表中的歌曲並選擇標記即可選定所有想要的歌曲。
- 5 選擇完成儲存播放列表。

播放播放列表

- 1 按 **OK** 並選擇多媒體。
- 2 選擇音樂，然後選擇播放列表。
- 3 選擇要播放的播放列表。選擇播放。

編輯播放列表

您可能需要不時新增歌曲，或從播放列表中刪除歌曲。

若要整理播放列表，只需使用選項功能表進行編輯。

- 1 按 **OK** 並選擇多媒體。
- 2 選擇音樂，然後選擇播放列表。
- 3 選擇要編輯的播放列表，並選擇選擇，然後選擇選項。選擇以下選項之一：

新增歌曲 - 您可新增歌曲至播放列表中。

下移 - 在播放列表上執行下移操作。

發送 - 發送訊息、電子郵件或藍芽
從列表移除 - 從播放列表中移除歌曲。選擇是確認。

標記 / 取消標記 - 依次序標記一首或全部歌曲。

使用方式 - 將目前曲目設為鈴聲、訊息提示音、開機或關機音效

檔案資訊 - 您可檢視與目前正在聆聽的音樂檔案相關的資訊。

記憶體管理 - 您可檢視記憶體狀態（手機記憶體或外置記憶體）

刪除播放列表

- 1 按 **OK** 並選擇多媒體。
- 2 選擇音樂，然後選擇播放列表。
- 3 選擇要刪除的播放列表，然後選擇選項。
- 4 選擇刪除並選擇是予以確認。

音樂版權受國際公約及國內版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

FM 收音機

收聽收音機

LG KP275 手機具有 FM 收音機功能，以便您可在外出時收聽喜歡的電台節目。

搜尋電台

透過手動或自動搜尋電台頻道，從而進行調諧。這些電台頻道將儲存至特定頻道編號，如此一來，您就不需要重新調諧。手機中最多可儲存 50 個頻道。

自動調諧：

- 1 從備用屏幕按 **OK**，選擇多媒體並依次選擇 FM 收音機。選擇選項。
- 2 選擇自動掃描，然後選擇是。找到的電台將自動分配至頻道編號。

手動調諧：

- 1 從備用屏幕按 **OK** 選擇多媒體並依次選擇 FM 收音機。選擇選項。
- 2 選擇頻道列表，然後選擇要將電台存儲至的頻道編號。
- 3 輸入電台頻道，然後按設定予以儲存。

注意：您亦可透過使用導覽鍵手動調諧電台。

編輯頻道

您需要將電台移至其他頻道，以便令收聽頻率最高的電台存取起來更加容易。

- 1 從備用屏幕按 **OK**，選擇多媒體並依次選擇 FM 收音機。選擇選項。
- 2 選擇頻道列表，然後選擇要變更的頻道。
- 3 從其他頻道中的一個頻道選擇電台，或手動調諧頻道至所需的頻道。透過顯示，然後按選項，您可編輯每個頻道。

重新命名 - 為頻道重新命名。

取代 - 為選定的頻道設定新頻率。

重設頻道

- 1 從備用屏幕按 **OK** 選擇多媒體並依次選擇 FM 收音機。選擇選項。
- 2 依次選擇頻道列表和選項。
- 3 選擇重設頻道以重設目前頻道，或選擇重設所有頻道以重設所有頻道。每個頻道將返回至開始 87.5Mhz 頻率。

提示! 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

使用語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音。

- 1 從備用屏幕按 **OK** 選擇**多媒體**。
- 2 依次選擇**語音備忘錄**和**選項**，然後從以下選項中選擇：

長度 - 設置錄製時間。可從 多媒體訊息大小、30 秒、1分鐘或無限制中選擇。

質素 - 選擇聲音質素。從特細緻、細緻或標準中進行選擇。

記憶體使用裝置 - 可選擇外置記憶體或手機記憶體。

轉至錄音記錄 - 開啓我的聲音中的錄音資料夾。

- 3 選擇 **OK** 開始錄製。
- 4 選擇**停止**即停止錄製。
- 5 在**選項**中選擇**播放**，收聽您的錄音內容。

發送錄音

- 1 完成錄音後，您可選擇**選項**。
- 2 選擇**發送**並從訊息、電子郵件或藍芽中進行選擇。若選擇訊息或電子郵件，則錄製會新增至訊息，且您可按正常方式進行編寫和發送。若選擇藍芽，則系統會提示您開啓藍芽。

我的檔案

您可將多媒體檔案儲存在「我的檔案」中的手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。

您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

圖像

我的圖像包括圖片清單，其中有預載至手機的預設圖像和透過手機相機拍攝的圖像。

我的圖像選項功能表

圖片中可用的選項取決於選取的圖像類型。所有選項將可用於手機相機上拍攝的圖片，但僅使用方式、排序方式、檔案資訊和記憶體管理選項可用於預設圖像。

發送 - 將圖像發送給朋友。

使用方式 - 將圖像設定為特定時間顯示於手機上。

移動 - 將圖像從手機記憶體移至外置記憶體，反之亦然。

複製 - 將圖像從手機記憶體複製至外置記憶體，反之亦然。

刪除 - 刪除圖像。

標記/取消標記 - 選擇多個檔案。

以藍芽列印 - 透過藍芽列印圖像。

檔案 - 重新命名或檢視檔案資訊。

建立新資料夾 - 在我的圖片資料夾內建立新資料夾。

播放投影片 - 開始播放投影片。

排序方式 - 按特定次序排列圖像。

多格子/列表檢視 - 以多格子或列表類型檢視每個圖像。

記憶體管理 - 檢視記憶體狀態。

發送照片


- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 選擇要發送的相片，並按選項。
- 3 選擇發送並從訊息、電子郵件或藍芽中選擇。
- 4 若選擇訊息或電子郵件，則照片會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啓藍芽，並搜尋要向其發送圖片的裝置。

管理圖像

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 依次選擇**選項**和排序方式。
- 3 從日期、類型或名稱中選擇。

刪除圖像

- 1 從備用屏幕，按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 選擇要刪除的圖像並選擇**選項**。
- 3 選擇**刪除**，然後選擇**是**以確認。

提示! 如要快速刪除我的檔案中的任何檔案，先予以選取，遊標會顯示，然後按下  硬鍵。選擇是予以確認。
(不適用於預設檔案)

檢查記憶體狀態

您可查看已使用的記憶體空間及所剩記憶體空間。

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的圖像**。
- 2 依次選擇**選項**和**記憶體管理**。
- 3 選擇**手機記憶體**或**外置記憶體**。

注意: 若您尚未插入記憶咭，您就無法選擇外置記憶體。

聲音

我的聲音資料夾包含錄音記錄和預設聲音。您可在此處管理或將聲音設定為鈴聲。

使用聲音

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的聲音**。
- 2 選擇**預設聲音**或**錄音記錄**。
- 3 選擇某一聲音，並選擇播放開始收聽。
- 4 選擇**選項**，然後選擇使用方式。
- 5 從話音/視像鈴聲、訊息提示音、開機、關機聲音中選擇。

影片

影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的影片**。
- 2 選擇影片，然後按播放。

我的檔案

在觀看影片時使用選項

在暫停模式下選擇選項，並從以下選項進行：

橫向檢視 - 在橫向模式下檢視影片。

靜音/取消靜音 - 開啓/關閉聲音。

擷取 - 您可將屏幕上的暫停圖像儲存為一個圖片檔。（此選項僅當暫停影片時可用。）

重複 - 重複視像檔案。

檔案資訊 - 檢視名稱、大小、日期、類型、版權、安裝、長度、尺寸或保護詳情。

發送 - 透過訊息、電子郵件或藍芽發送影片。

刪除 - 刪除影片。

發送錄像片段

- 1 選擇一影片，然後選擇**選項**。
- 2 選擇**發送**並從訊息、電子郵件或藍芽中進行選擇。
- 3 若選擇訊息或電子郵件，則影片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇藍芽，手機會提示您開啓藍芽，並搜尋要向其發送影片的裝置。

使用影片選項功能表

從我的影片資料夾中，您可以選擇以下選項之一：（只用於手機錄製的影片）

發送 - 向好友發送影片。

移動 - 移至手機記憶體或外置記憶體

複製 - 複製至手機記憶體或外置記憶體

刪除 - 刪除影片剪輯

標記 / 取消標記 - 選擇多個影片剪輯，然後選擇刪除。

檔案 - 重新命名影片或檢視檔案資訊。

建立新資料夾 - 在「我的影片」中建立新資料夾。

排序方式 - 按日期、類型或名稱排列影片。

多格子檢視 / 列表檢視 - 變更影片檢視方式。

記憶體管理 - 您可檢視記憶體狀態。

我的應用程式

您可將已下載的遊戲及應用程式保留在此資料夾中。

玩遊戲

- 1 從備用屏幕按 **OK** 選擇**我的檔案**並依次選擇**我的遊戲及應用程式**。
- 2 選擇遊戲。
- 3 選擇一款遊戲，並按啓動。

使用遊戲選項功能表

在我的遊戲及應用程式資料夾中，以下選項可用：

建立新資料夾 - 在我的遊戲和應用程式功能表中建立資料夾。

排序方式 - 按日期、大小或名稱來排序遊戲及應用程式。

記憶體管理 - 檢視記憶體狀態。

其他

您從其他功能表中檢視未儲存在圖片、聲音或影片中的檔案。

我的記憶咭

若插入記憶咭，則將顯示為我的檔案中的一個資料夾。我的記憶咭資料夾將進一步細分為七個資料夾：我的遊戲及應用程式、其他、圖片、我的聲音、我的圖像、GoogleAppsData 及文件。

遊戲及應用程式

遊戲及應用程式

KP275 手機提供有預載遊戲，可讓您在休閒時娛樂。如果您選擇下載任何其他遊戲或應用功能，下載的遊戲或應用功能將儲存在此資料夾中。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。

玩遊戲

- 1 從備用屏幕按 **OK** 並選擇**遊戲及應用程式**。
- 2 選擇**我的遊戲及應用程式**並依次選擇**遊戲**。
- 3 選擇要播放的遊戲，並選擇**啓動**。

Yahoo

您可以存取 Yahoo 流動互聯網服務。

- 1 Yahoo! oneSearch：您可以搜尋即時答覆。
- 2 Yahoo! Mail：顯示您的電子郵件帳戶。
- 3 Yahoo! Messenger：您可使用 Yahoo! Messenger 收發即時訊息。
- 4 Yahoo! Address Book：您可存取所有聯絡人資料。

注意事項

由於網絡限制，某些國家/地區可能無法存取 Yahoo! Go 服務。

01

02

03

04

05

06

07

08

記事簿

新增事項至日曆

- 1 從備用屏幕按 **OK** 並選擇**記事簿**。
選擇**日曆**。
- 2 選擇要將事項新增至的日期。
- 3 依次選擇**選項**和**新增事項**。
- 4 選擇要新增約會、週年紀念或生日。
- 5 檢查日期，並輸入開始事件的時間。
- 6 對於約會和週年紀念，請在下方兩個時間和日期方塊中輸入完成事件的時間和日期。
- 7 若要新增標題或備註至事件，請按標題或位置，並輸入備註。
- 8 選擇完成，則您的事件將儲存至日曆中。游標會標記已儲存事項的日期，如設鬧鐘提示，事件開始時會響鈴。

提示! 您可以在日曆中設定假期。每次選擇假日中的一日，然後選擇選項並選擇設為假期。設為假期日為紅色。設定鬧鐘時，可選擇清除設定為假日的日期。

編輯日曆事件

- 1 從備用屏幕上按 **OK**，然後依次選擇記事簿和日曆。
- 2 您可查看到所有事件清單。選擇要編輯的事件，並選擇檢視。
- 3 按選項，選擇編輯，然後選擇要變更的事件詳細資料。作出修改，並選擇完成以儲存已編輯的事件。

注意：您可透過檢視事件並依次按選項和刪除從日曆中刪除事件。

新增待辦事項

您可檢視、修改和新增要完成的工作。工作將按時間順序顯示。

新增備忘錄

- 1 從備用屏幕上按 **OK**，然後依次選擇記事簿和備忘錄。
- 2 選擇新增並鍵入您的備忘錄。
- 3 選擇儲存。
- 4 下次開啓備忘錄應用程式時，備忘錄將會顯示在屏幕上。

提示！您可以編輯現有備忘錄。選擇要編輯的備忘錄，按選項並選擇編輯。

保密備忘錄

您可編寫保密備忘錄以保護自己的私隱。您可輸入安全密碼以使用此功能表。

日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。

設定

您可設定發送、備份或恢復日曆或待辦事項。您可查看記憶體資訊或清除全部。

工具

設定鬧鐘

- 1 按 **OK**，然後依次選擇工具和鬧鐘。
- 2 按選項並選擇新增。
- 3 向下按，並輸入想要鬧鐘響鈴的時間。
- 4 選擇鬧鐘鬧鈴的重複類型：不重複、每天、星期一到星期五、星期一到星期六、假日除外或選擇日子。
- 5 向下按並選擇鬧鐘響鈴方式：鬧鐘鈴聲、震動、鈴聲及震動或依據情景模式。
- 6 向下按以選擇鬧鐘鈴聲。按「確定」鍵，並從錄音記錄或預設聲音中選擇一種聲音。
- 7 向下按，並為鬧鐘輸入名稱，或使用建議的名稱。
- 8 選擇完成。

使用計算機

- 1 按 **OK**，然後依次選擇工具和計算機。
- 2 點按數字鍵，輸入數字。
- 3 對於簡單的計算，請使用導覽鍵選擇所需功能 (+, -, x, /)，然後選擇 =。
- 4 對於更複雜的計算，請選擇選項以選擇相應的指令。
- 5 選擇清除鍵清除屏幕並開始新的計算。

快選功能表

您可指定要儲存到「快選功能表」中的功能。若將常用功能儲存在快選功能表中，則只需要按對應的按鍵即可快速使用。

瀏覽器

使用瀏覽器，您可隨時獲取最新新聞和天氣預報以及體育或交通資訊。

另外，瀏覽器還可讓您下載到最新的音樂、鈴聲、待機圖片及遊戲。

存取網絡

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**瀏覽器**。或者，選擇輸入網址並鍵入所需的網址，然後按**開啓**。

注意：連線至此服務和下載內容，需另行收費。請向網絡供應商諮詢收費詳情。

新增並存取書籤

為了方便快捷存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**。
- 2 選擇**書籤**。書籤列表顯示在屏幕上。
- 3 要建立新資料夾，請依次選擇**選項**及建立新資料夾。為書籤資料夾輸入名稱。
- 4 要新增書籤，請選擇**選項**，然後按新增。依次輸入書籤標題和連結。

- 5 選擇**完成**。此時，書籤將顯示於書籤列表中。
- 6 要存取書籤，只需要選擇此書籤，然後選擇**開啓**。

儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 選擇**選項**並選擇儲存項目- 儲存此網頁。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 選擇**儲存**。

提示! 此功能表亦讓您編輯儲存的網頁標題，保護或取消保護屏幕備忘錄並刪除儲存的網頁。

存取已儲存的網頁

- 1 從備用屏幕按 **OK**，並選擇**瀏覽器**。
- 2 選擇已儲存網頁。
- 3 選擇**開啓**，連接到已儲存的頁面。

01

02

03

04

05

06

07

08

瀏覽器

檢視瀏覽器記錄

- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**，然後選擇**記錄**。
- 2 最近存取的網頁標題清單會顯示。
- 3 要存取這些網頁中的一個，只要選擇所需的網頁並按開啓即可。

使用 RSS 讀取裝置

RSS (Really Simple Syndication)是網絡收取點 格式成員之一，用於發布經常更新的內容，如 blog 內容、新聞標題或 podcasts。RSS 文件也稱為 收取點、網絡收取點 或頻道，包含來自關聯網站的內容概要或完整文字。

變更網頁瀏覽器設定


- 1 從備用屏幕按 **OK** 並選擇**瀏覽器**，然後選擇**設定**。
- 2 您可選擇編輯網絡設定、外觀設定、快取記憶、Cookies、安全或重設設定。
- 3 變更設定後，選擇**確定**。

設定

您可透過此資料夾調整各項設定，以便讓 KP275 手機適合您的個人需要。

注意：有關通話設定的詳情，請參閱第 21 頁。

變更您的情景模式

您可從備用屏幕快速變更情景模式。只需要按 ，然後按您想要啓用的情景模式。從以下選項中選擇：標準、靜音、戶外和飛航模式。

提示！使用此功能，開啓或關閉飛航模式。開啓飛航模式後，您將無法撥打電話、連接至互聯網或發送訊息。


自訂您的情景模式

您可對特定情景模式設定進行自訂。

- 1 按設定並選擇情景模式。
- 2 選擇所需的情景模式，然後依次選擇選項和編輯。
- 3 您可在此變更所有鈴聲、鈴聲音量及提示選項。

變更您的日期和時間

您可設定與日期和時間相關的功能。

- 1 按  並開啓設定。
- 2 選擇日期及時間，並從以下清單中選擇：

時間 - 您可設定時間。

日期 - 您可設定日期。

自動更新 - 選擇開啓後，手機將自動更新日期和時間。

夏令時間 - 您可設定夏令時間。

變更語言

轉至設定，選擇手機，然後選擇語言以變更手機中任何文字的語言。任何變更亦將改變語言輸入模式。

網絡 - 您的 KP275 會自動連線至您的首選網絡。使用此功能表可變更這些設定。

互聯網設定 - 設定設定檔，連接到互聯網。

存取點 - 您的網絡商已經爲您儲存此資訊。您可以使用此功能表來新增存取點。

分組數據連線 - 設定分組數據連線。

01

02

03

04

05

06

07

08

設定

變更安全性設定

變更安全性設定，保護 KP275 和手機中重要資訊的安全性。

- 1 按 **OK** 並開啓設定。
- 2 選擇安全並從以下清單中選擇：

PIN 碼要求 - 選擇開啓手機時，需要輸入密碼。

手機鎖 - 選擇一個安全密碼以鎖定您的手機：開機時、在智能咭更換時、立即或無。

更改密碼 - 變更您的 PIN1 碼、PIN2 碼或安全密碼。

變更您的顯示設定

- 1 按 **OK** 並選擇設定。
- 2 選擇屏幕並從以下選項中選擇：

屏幕主題 - 選擇桌面、開機或關機時的畫面。

功能表式樣 - 選擇用於顯示功能表的樣式。

撥號 - 設定撥號字體顯示。

字體 - 調整字體大小。

背光燈 - 選擇背光燈的維持時間。

注意：背光燈開啓時間越長，耗費的電量就越多，這樣，手機充電將

更頻繁。

手機主題 - 快速變更屏幕的整個外觀。

問候語訊息 - 輸入手機開機時的問候訊息。

檢視記憶體狀態

KP275 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。

您可以使用記憶體管理員確定如何使用各記憶體，且查看可用的空間。

按設定並選擇記憶體管理，即可看到 KP275 手機中記憶體的目前狀態（手機共用記憶體、手機預留記憶體、智能咭記憶體和外置記憶體）。

提示！有關安裝記憶咭的資訊，請參閱第 16 頁。

串流播放設定 - 若要設定不同的網絡設定以播放串流內容，則可設定不同的網絡設定。

重設手機

使用設定中的重設設定，將全部設定恢復為原廠設定。您需要安全密碼，才能啓用此功能。

連接

變更連接設定

您的網絡提供商已對您的連接設定進行設定，以便您可立即享用新手機。若要變更任何設定，請使用此功能表。

選擇連接。您可從以下選項中選擇：
藍芽 - 設定 KP275 手機以便使用藍芽。您可調整是否向其他裝置顯示您的手機，或搜尋手機已配對的裝置。

變更您的藍芽設定

- 1 選擇連接，然後選擇藍芽。
- 2 選擇設定。對以下選項作出變更：

顯示我的手機 - 選擇可見、隱藏或可見 時間為1分鐘。

我的裝置名稱 - 為 KP275 手機輸入名稱。

支援的服務 - 搜尋 KP275 支援的設定檔。

我的位址 - 搜尋您的藍芽裝置位址。

同其他藍芽裝置配對

透過將 KP275 手機與其他裝置配對，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢視藍芽是否為開啓和可見。您可在設定功能表中選擇顯示我的裝置，然後選擇可見來變更裝置的可見性。
- 2 從藍芽中，選擇開啓並選擇搜尋新裝置。
- 3 KP275 手機將搜尋裝置。完成搜尋後，將在屏幕上顯示新增和更新選項。
- 4 選擇要配對的裝置，然後選擇新增並輸入密碼，最後選擇確定。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的通行碼。
- 6 密碼保護藍芽連線已準備就緒。

01

02

03

04

05

06

07

08

連接

使用藍芽耳機

- 1 檢查藍芽是否為開啓和可見。
- 2 遵循隨耳機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 KP275 手機將自動連接至藍芽耳機並切換至手機設定檔。

傳送檔案到手機

您也可以使用藍芽，將檔案從電腦傳送至手機。

- 1 確保您的手機與電腦均已開啓藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 發送檔案後，在手機上選擇是，確認接收。
- 4 檔案將儲存至對應的資料夾，具體取決於檔案類型。例如，圖片將儲存至我的圖像資料夾，而音樂則會儲存至我的聲音資料夾。如果手機無法確認檔案類型，檔案將被儲存至其他資料夾中。

注意：使用藍芽發送的檔案將被儲存至手機記憶體中。

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要USB線，且連線方便快捷。您亦可連藍芽接到手機，以接聽來電。

開始使用藍芽共用檔案前，您需要將手機與另一個藍芽裝置進行配對。有關裝置配對資訊，請參閱同其他藍芽裝置配對。

要開啓藍芽，請執行以下操作：

- 1 選擇連接，然後選擇藍芽。
- 2 選擇開啓。
- 3 選擇關閉關閉藍芽。

發送檔案：

- 1 開啓要發送的檔案，通常為照片、影片或音樂檔案。
- 2 選擇選項，然後選擇發送，最後選擇藍芽。
- 3 如果尚未啓用，選擇是開啓藍芽。
- 4 KP275 手機將自動在範圍內搜尋其他啓動了藍芽功能的裝置。
- 5 選擇要將檔案發送至的裝置並選擇發送。

接收檔案：

- 1 接收檔案前，必須將藍芽同時設定為開啓和可見。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。選擇是接收檔案。

提示！留意進度列，確保檔案已發送。

注意 Bluetooth® 字標和徽標屬 Bluetooth SIG, Inc. 所有，LG Electronics 在使用任何此類標記時均已獲得許可。其他商標和交易名稱爲他們各自所有者的商標和交易名稱。

USB 連線模式

您可在手機上選擇 USB 連線模式以用於不同場合。

自選模式

如果將「自選模式」設定爲預設，在您每次透過數據線將手機連接到 PC 時，手機都會提示您選擇 USB 連接模式類型。

警告！首先請確保選擇合理的費率！否則，您可能需要在下載大量數據時（如音樂或影片）支付高額費用。

- 1 將 USB 線連接到裝置。
- 2 從裝置的快顯功能表中選擇 PC 互聯網。
- 3 請稍候，直至電腦上開啓快顯視窗。然後選擇「開始」以便在電腦上安裝「透過手機」軟件（稱爲「透過手機」）及其驅動程式，最後遵循屏幕上的指示進行操作。
- 4 現在，您可按正常使用網絡瀏覽器和電子郵件程式。完成後，請點按「中斷連接」。

將手機用作大容量儲存裝置

只有在您已插入記憶咭的情況下，手機方用作大容量儲存裝置。

- 1 選擇**連接**，然後選擇 **USB 連接模式**。
- 2 顯示**大容量儲存**並按**選擇**。
- 3 將手機連接到電腦。手機將讀取：以USB Mass StorageDevice 及以大型儲存裝置模式連線。傳送期間，請勿斷開連接。
- 4 所有手機檔案將自動儲存至電腦硬碟上。

注意：手機必須從電腦上撥出，以啓動大型儲存裝置。

連接

注意：USB Mass Storage Device 僅備份儲存在記憶咭而非手機記憶體上的內容。要傳送手機記憶體的內容 (例如，通訊錄)，您需要使用電腦同步來進行同步。

將手機用作數據機

KP275 亦可用作電腦的數據機，為您提供電郵和互聯網存取功能。

PC Suite-同步手機與電腦

您可將手機與電腦保持同步，從而確保所有重要詳情與日期相匹配，同時作為重要檔案備份，讓您完全放心。

在電腦上安裝 LG PC Suit

- 1 轉至 www.lgmobile.com 網站，選擇亞太地區，然後選擇您所在國家或地區。
- 2 選擇「產品」功能表，然後選擇手冊及軟件並點按轉至手冊及軟件下載部分。點按「是」以顯示 LG PC Suite 安裝程式。（Windows XP、Windows Media Player 等）。
- 3 選擇執行安裝程式時使用的語言並按一下確定。
- 4 遵循屏幕上的說明，完成 LG PC Suite 安裝程式精靈。

- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

配件

以下配件隨 KP275 手機一併提供。有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些配件。

充電器



使用手冊

了解更多 KP275。



電池



免提耳機



注意

- 只可用原裝 LG 配件。不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商了解更多詳情。

01

02

03

04

05

06

07

08

網絡服務

本手冊所述之無線電話經認可可用於 GSM 900, DCS 1800 及 PCS 1900 及 W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術資料

一般

產品名稱：KP275

系統：GSM 900 / DCS 1800 / PCS 1900
/ W-CDMA

環境溫度

最高：+55°C (放電)
+45°C (充電)

最高：-10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900/ W-CDMA Terminal Equipment

Model Name

KP275

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1/489-24 V1.3.1

EN 300 328 V 1.7.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0188

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

26. Sep. 2008

Signature of representative

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com



视话机软件或服务提供商而定，
本手册中的部分内容可能与您的
手机有所不同。

KP275 用户手册 | 简体中文

恭喜您购买此款功能先进、外观小巧的 LG KP275 手机。它采用了最新的数字移动通信技术，为您提供便利的操作。

设置 01

主屏 02

基本功能 03

高级功能 04

管理功能 05

浏览器 06

设置 07

附件 08

内容

关于安全有效使用手机的准则...	7	电话本.....	23
01 设置		搜索联系人.....	23
开始了解您的手机.....	11	添加新联系人.....	23
打开视图.....	12	联系人选项.....	23
安装 USIM 卡和电池.....	13	将联系人添加到群组.....	24
储存卡.....	16	重命名群组.....	24
安装存储卡.....	16	为联系人添加图片.....	24
拔出储存卡.....	16	将联系人复制到 USIM 卡.....	25
格式化存储卡.....	16	查看信息.....	25
菜单地图.....	17	信息.....	26
02 主屏		信息.....	26
主屏.....	18	发送信息.....	26
状态栏.....	18	输入文本.....	26
03 基本功能		使用键盘文本输入模式.....	26
通话.....	19	设置电子邮件.....	27
拨打电话.....	19	使用新帐户发送电子邮件.....	27
从电话本拨打电话.....	19	信息文件夹.....	27
接听和拒绝电话.....	19	管理信息.....	28
拨打视像电话.....	19	使用模板.....	28
单键拨号.....	19	更改文本信息设置.....	28
查看通话记录.....	20	更改多媒体信息设置.....	29
使用呼叫转接.....	20	更改电子邮件设置.....	29
使用呼叫限制.....	20	更改其它设置.....	30
更改呼叫设置.....	21		
更改常用通话设置.....	21		
视像通话设置.....	22		

04 高级功能		我的文档	39
相机	31	图像	39
快速拍照	31	“我的图像”选项菜单	39
拍照之前	31	发送照片	39
拍照后	31	管理图像	40
更改图像大小	32	删除图像	40
查看保存的照片	32	查看内存状态	40
将照片设为主屏或联系人图像 ..	32	声音	40
摄像机	33	使用声音	40
快速摄像	33	视频	40
拍摄视频后	33	观看视频	41
观看保存的视频	33	观看视频时使用选项	41
音乐	34	发送视频剪辑	41
音乐	34	使用视频选项菜单	41
将音乐传输到手机	34	我的游戏和应用程序	42
播放歌曲	34	玩游戏	42
播放音乐时使用选项	34	使用游戏选项菜单	42
创建播放列表	35	其它	42
播放播放列表	35	我的存储卡	42
编辑播放列表	35	游戏和应用程序	43
删除播放列表	36	游戏和应用程序	43
FM 收音机	37	玩游戏	43
收听收音机	37	Yahoo	44
搜索电台	37		
编辑频道	37		
重置频道	37		
使用录音机	38		
发送录音	38		

内容

05 管理功能

管理器	45
将事件添加到日程表中	45
编辑日程表事件.....	45
添加任务.....	45
添加备忘录.....	45
私人备忘录.....	46
日期计算器.....	46
设置.....	46

工具	47
设置闹钟.....	47
使用计算器.....	47
快速菜单.....	47

06 浏览器

浏览器	48
访问网页.....	48
添加并访问书签.....	48
保存页面.....	48
访问保存的网页.....	49
查看浏览器历史记录	49
使用 RSS 阅读器.....	49
更改网络浏览器设置.....	49

07 设置

设置	50
更改情景模式	50
自定义情景模式.....	50
更改日期和时间.....	50
更改语言.....	51
更改保安设置.....	51
更改显示设置.....	51
查看内存状态.....	52
重设手机.....	52

连接	53
更改连接设置.....	53
更改蓝牙设置.....	53
与其它蓝牙设备配对.....	53
使用蓝牙耳机.....	53
将文件传输到手机.....	54
使用蓝牙发送和接收文件.....	54
USB 连接模式	55
始终询问模式.....	55
将手机用作大容量存储器设备..	55
将手机用作调制解调器.....	56
PC 套件 - 使手机与 PC 同步..	56

08 附件

配件	57
网络服务	58
技术参数	58
标准.....	58
外部环境.....	58

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息

此款 Kp270 型手机已设计为遵守有关适用的无线电波暴露安全求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.711 W/kg (10克)，戴在身体上时，其值为 0.998 W/kg (10克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。

关于安全有效使用手机的准则

- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应在通风条件好的位置对手机进行充电。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。行车安全 查阅有关在驾驶时使用手机的本地法律法规。
- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。

- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线装置可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。

关于安全有效使用手机的准则

- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 请按制造商的说明处置用过的电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

开始了解您的手机



- 在待机模式下：
 - 向上：快捷菜单。
 - 向下：搜索
 - 向右：信息
 - 向左：情景模式
- 在菜单中：在菜单间导航。


打开视图



安装 USIM 卡和电池


1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。

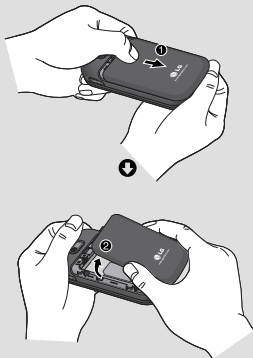

2 取出电池

抬起电池底边，小心将电池从电池室取出。

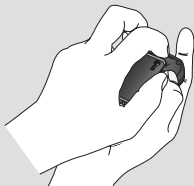

⚠ 警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 USIM 卡

将 USIM 卡滑进 USIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 USIM 卡，沿相反的方向轻推。

⚠ 警告：滑盖打开时请不要插入 USIM 卡，否则可能损坏手机和 SIM 卡。

01

02

03

04



05

06

07


08

安装 USIM 卡和电池

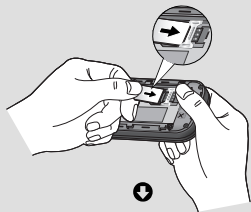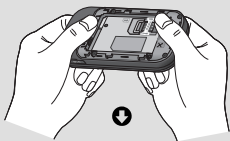

4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底部，直至电池卡入到位。

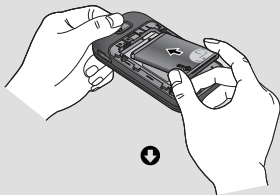


5 像前面一样替换电池盖


先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底端，直至电池卡入到位。



6 充电

打开 KP275 侧面的充电器插槽盖。插入充电器并插入电流插座。只要屏幕上显示“已完全充电”信息，KP275 充电才完成。

 警告：如果手机置于柔软物体之上，请不要充电。应将手机放在完全通风的位置充电。

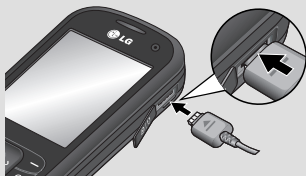

01

02

03

04

05

06

07

08

储存卡

安装存储卡

使用存储卡，可以扩展手机的可用存储空间。

提示：存储卡是可选配件。

打开储存卡插槽。将储存卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。



拔出储存卡

打开插槽盖，向手机内侧推动储存卡并快速释放，然后小心取出储存卡，如下图所示：



格式化存储卡

如果已格式化存储卡，您可以开始使用。如果未格式化存储卡，您需要先进行格式化。

- 1 从待机屏幕中按 **OK** ，选择“设置”。
- 2 选择“内存管理器”，然后选择“外部存储器”。
- 3 选择格式，输入密码，密码默认为0000。储存卡完成格式化，在，您可以使用了
- 4 要在 KP275 上查看新格式化的文件夹，请点触 **OK** 然后选择我的文档。选择外部存储器。

⚠ 警告： 将卡格式化时，所有内将被擦除。如果不想失去储存卡中的数据，请先备份。

菜单地图



游戏和应用程序

- 1 我的应用程序
- 2 设置



呼叫

- 1 拨打视像通话
 - 2 通话记录
 - 3 通话时间
 - 4 数据用量
 - 5 通话费用
 - 6 呼叫转接
 - 7 呼叫限制
 - 8 固定拨号
 - 9 呼叫等待
 - 0 常用设置
- * 视像通话设置



管理器

- 1 日程表
- 2 任务
- 3 备忘录
- 4 私人备忘录
- 5 日期计算器
- 6 设置



多媒体

- 1 相机
- 2 摄像机
- 3 音乐
- 4 收音机
- 5 语音备忘录



信息

- 1 创建新信息
- 2 收件箱
- 3 邮箱
- 4 草稿箱
- 5 发件箱
- 6 已发送
- 7 我的文件夹
- 8 模板
- 9 情感图示
- 0 设置



我的文档

- 1 我的图像
- 2 我的声音
- 3 我的视频
- 4 游戏和应用程序
- 6 其它
- 7 外部存储器



Yahoo

- 1 Yahoo!
 oneSearch
- 2 Yahoo! Mail
- 3 Yahoo!
 Messenger
- 4 Yahoo!
 Address
 Book



电话本

- 1 新增
- 2 搜索
- 3 快速拨号
- 4 群组
- 5 服务号码
- 6 本机号码
- 7 我的名片
- 8 设置



工具

- 1 快速菜单
 - 2 闹钟
 - 3 计算器
 - 4 秒表
 - 5 换算器
 - 6 世界时间
 - 7 SIM 服务(视乎不同网络商)
- * 此功能视 SIM 卡和网络服务而定。如果 SIM 卡支持 SAT (即, SIM 卡应用程序套件) 服务, 则此菜单将是 SIM 卡上存储的运营商特定服务的名称。



浏览器

- 1 主页
- 2 输入地址
- 3 书签
- 4 RSS 阅读器
- 5 保存的网页
- 6 历史记录
- 7 设置



连接

- 1 蓝牙
- 2 USB 连接模式



设置

- 1 情景模式
 - 2 手机
 - 3 显示
 - 4 日期和时间
 - 5 网络
 - 6 互联网设置
 文件
 - 7 存取点
 - 8 分组数据连接
 - 9 安全性
 - 0 内存管理器
- * 流媒体设置
恢复初始设定

01

02

03

04

05

06

07

08











主屏

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启用了蓝牙。




下表说明了您可能在状态栏中看到的不同图标的涵义。

图标	描述
	网络信号强度 (指示栏数不同)
	无网络信号
	GPRS 可用
	正在使用 EDGE
	飞行模式已激活
	呼叫被转接
	正在漫游
	蓝牙已启动
	已连接 WAP 服务
	多任务
	服务信息

图标	描述
	闹钟已设置
	日程表
	新信息
	新语音信息
	正在使用“标准”情景模式
	正在使用“静音”情景模式
	正在使用“户外”情景模式
	正在使用“耳机”情景模式
	剩余电量
	电池电量空


通话

拨打电话


- 1 确保手机已开机。
- 2 您可以打开滑盖，然后使用键盘。
要删除数字，请按 。
- 3 按  开始通话。
- 4 要结束通话，请按  或关闭滑盖。

提示！ 要输入 + 以拨打国际电话，
请按住 0。


从电话本拨打电话

- 1 在菜单中选择电话本，然后选择搜索。
- 2 使用键盘，输入您要呼叫的联系人的首字母，然后滚动到所需联系人。
- 3 按  开始通话。

接听和拒绝电话


电话响后，按接听或  应答来电。

电话响后，按静音可静音。如果您在开会时忘记将情景模式更改为静音，这非常有帮助。

按  或选择拒接以拒接来电。


拨打视像电话


当您及对方都在 3G 覆盖区时，您可以拨打并接听视像电话。

- 1 使用键盘输入电话号码，或者从“搜索”中选择电话号码。
- 2 要启用视像功能，请按左软键 [选项]，然后选择“拨打视像电话”。
- 3 请根据需要调整相机位置。
- 4 按  或闭合翻盖结束通话。

单键拨号

您可以为常用联系人指定快速拨号号码。

- 1 按  以打开主菜单。选择电话本，然后选择快速拨号。
- 2 语音邮件已预设为快速拨号 1，不能对此设置进行更改。使用导航键并选择添加，或通过按硬键数字来选择任意其它数字。
- 3 此时将打开您的地址簿。使用导航键选择您要分配到该号码的联系人，然后选择确定。

要呼叫快速拨号号码，按住指定的数字，直到屏幕上显示该联系人。呼叫将自动开始，而不需要按 。

查看通话记录

01

02

03

04

05

06

07

08

通话

从待机屏幕中，按 **OK** 选择”呼叫”，然后选择”通话记录”。选择以查看：

所有通话 - 查看所有拨电、已接来电和未接来电的完整列表。

拨出电话 - 查看所有已拨打的电话的列表。

已接来电 - 查看打给您的所有电话的列表。

未接来电 - 查看您没接到的所有电话的列表。

提示！从任意通话记录中选择选项，然后选择”全部删除”删除选定的或所有录制项。

使用呼叫转接

- 1 按 **OK**，选择呼叫。
- 2 选择呼叫转接。选择语音通话或视像通话。或者您可以选择“全部停用”。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接、无法接通时转接。
- 4 选择启动，然后选择是要转接到语音邮件还是其他号码。
- 5 输入转接号码或选择搜索浏览电话

本以查找转接号码。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！要关闭所有通话转接，请从呼叫转接菜单中选择全部停用。

使用呼叫限制

- 1 按 **OK**，选择呼叫。
- 2 选择呼叫限制。选择语音来电或视像通话。或者您可以选择“全部停用”。
- 3 选择以下六个选项中的一项或所有项：

所有拨出电话
国际拨出电话
国际漫游时拨打电话
所有来电
国际漫游时来电

- 4 选择启动，然后输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！从呼叫菜单中选择固定拨号打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。启动后，仅可以使用手机拨打此号码列表中的号码。

更改呼叫设置

- 按 **OK**，选择呼叫。
- 在此，您可以修改以下设置：

通话时间 - 查看通话时长的详细信息，包括已接来电和已发送呼叫。

数据用量 - 查看“网络”、“数据”或“全部”的所有已接收和发送数据量 (KB)。

通话费用 - 查看“最后通话”或“所有通话”的相关费用。此服务取决于网络，某些运营商不支持此服务。

呼叫转接 - 选择是否要转接呼叫。

呼叫限制 - 选择要限制的呼叫。
号码列表 - 选择可从此手机拨出的号码列表。

呼叫等待 - 有等待呼叫时会收到通知。

更改常用通话设置

- 从待机屏幕中，按 **OK** 并选择“呼叫”。
- 选择“常用设置”。在此，您可以修改以下设置：

拒接来电 - 选择打开或关闭，选

择拒接所有来电、拒接来自特定组、联系人的来电；或拒接未注册号码（不在电话本中或禁显号码）。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。

自动重拨 - 选择开或关。

接听模式 - 选择是使用接受键、任意键接听电话还是打开手机时接听电话。

分钟提示 - 选择打开，在通话过程中每一分钟将听到一次提示音。

蓝牙接听模式 - 选择免提可使用蓝牙耳机接听来电，或选择手机在使用蓝牙耳机时按手机任意键接听来电。

保存新号码 - 选择“是”以保存新号码。

滑盖关闭设置 - 设置关闭滑盖时是否结束通话。

视像通话设置

您可以设置拨打/接收视像电话的屏幕显示。

- 使用个人图片：确定是否显示个人图像。
- 选择个人图像：选择要显示的个人

通话

图像。

- 3 镜像：选择是否要激活镜像效果。

电话本

搜索联系人

- 1 从主菜单中选择电话本，然后选择搜索。
- 2 使用键盘输入您要呼叫的联系人姓名的第一个字母。
- 3 要在联系人及其不同电话号码间滚动，请使用导航键。

添加新联系人

- 1 选择电话本，然后选择新增。
- 2 选择是将新联系人保存到手机还是 USIM 卡。
- 3 在提供的字段中输入资料，然后选择完成。

或者使用更快捷的方式：

- 1 输入要保存的号码，然后选择选项。
- 2 选择保存号码，然后选择添加新名称或更新电话本。
- 3 输入相关信息，然后选择完成。

联系人选项

查看联系人时，您可以执行多项操作。以下显示如何进入并使用“选项”菜单：

- 1 从主菜单中选择电话本，然后选择搜索。
- 2 选择选项以打开选项列表。

在此，您可以：

发送信息 - 向联系人发送信息。如果联系人有电子邮件地址，请选择是发送信息还是电子邮件。

发送名片 - 将联系人的详细信息作为名片发送给其他人。选择发送方式：作为文本信息、作为多媒体信息、通过电子邮件或蓝牙。

回复电话 - 直接向您选择的联系人拨打语音电话。

拨打视像电话 - 直接向您选择的联系人拨打视像电话。

新增 - 添加新联系人。

编辑 - 更改联系人的任何详细信息。

添加到群组 - 将联系人移动到群组。

标记/去除标记 - 标记一个或全部联系人。

01

02

03

04

05

06

07

08

电话本

查找方式 - 按号码或群组搜索联系人。


保存到 USIM 卡 - 选择是移动还是复制到 SIM 卡或手机（取决于联系人的初始保存位置）。

删除 - 删除联系人。只有在您确定时才选择是。

文本输入 - 您可以插入联系人符号、更改书写方法或语言以及向字典添加字。

将联系人添加到群组

您可以将联系人保存到群组。这对于将工作同事和家人分开等操作非常有帮助。手机中已设置多个群组，包括：家人、朋友、同事、同学、重要人士。

- 1 选择电话本，然后选择群组。
- 2 滚动到您要添加联系人的群组，选择打开，然后选择添加。
- 3 此时将打开联系人列表。滚动到您要添加到群组的联系人，按 ，然后选择完成。

提示！ 您可以为群组指定来电铃声。选择您要为其指定来电铃声的群组，选择选项，然后选择所需项目。

重命名群组

您可以重命名群组以适合您的生活方式。

- 1 选择电话本，然后选择群组。
- 2 选择您要重命名的群组。
- 3 选择选项，选择重命名，然后输入新群组名称。
- 4 选择完成。

备注：您仅可以将联系人分配到群组或向联系人添加保存在手机内存（不是 SIM 卡）中的图片。

为联系人添加图片

您可以为联系人添加图片，更改联系人地址簿中的显示方式。

- 1 选择电话本，然后选择设置。
- 2 选择联系人列表设置，选择显示图片，然后选择打开。
选择完成。
- 3 然后返回搜索，选择您要为其添加图片的联系人。
- 4 选择选项，然后选择编辑。

- 5 向下滚动到图像部分。选择编辑，然后选择无图像、卡通形象、拍照或使用预设置图像。如果选择使用预设置图像，您可以选择保存在内部存储器中的图像。如果选择拍照，将打开相机取景器，以便您为联系人拍照。拍照然后按确定。
- 6 选择完成。

将联系人复制到 USIM 卡

您也可以选择将联系人从 USIM 卡复制到手机，或从手机复制到 SIM 卡。

- 1 选择电话本，选择设置，然后选择复制。
- 2 选择通过从手机到 USIM 卡或从 USIM 卡到手机复制联系人。
- 3 选择是全部还是逐个。
- 4 如果确定，请选择完成。

查看信息

选择电话本。在此，您可以查看服务号码、本机号码以及我的名片。

提示！如果您尚未创建名片，名片屏幕将为您提供创建名片的选项。选择添加，输入所需联系人的详细信息。完成后选择完成。

01

02

03

04

05


06

07


08

信息


信息

KP275 包含与短信（短信服务）、多媒体信息（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。要使用这些功能，请按  并选择信息。

发送信息

- 1 创建新信息请按 ，选择信息，然后选择创建新信息。
- 2 选择信息以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。
信息编辑器以一种直观的模式将短信和彩信组合在一起，可在短信模式和彩信模式间轻松切换。信息编辑器的默认设置为短信模式。
- 4 使用键盘输入信息。有关如何输入文本的详细信息，请参阅右边的输入文本。
- 5 选择选项，然后选择插入以添加图像、视频、声音、符号、模板、情感图示、姓名与号码、添加新幻灯片、主题或更多（名片/日程表/备忘录/任务/我的名片）。
- 6 选择发送。

- 7 从联系人列表中选择联系人或通过选项输入电话号码。
- 8 选择选择。

 **警告：**如果在信息编辑器中添加了图像、视频、视频、新幻灯片或主题，将自动转换到彩信模式，您将需要支付相应的费用。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：T9 模式、Abc 模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

使用键盘文本输入模式

需要输入文本时，如写信息时，键盘将默认为 T9 模式。输入号码时，如拨打电话时，键盘数字键将默认为数字。

设置电子邮件

使用 KP275 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 按 **OK**，选择信息，然后选择设置。
- 2 选择电子邮件，然后选择电子邮件帐户。
- 3 选择新增，按照弹出说明输入所需的信息。

使用新帐户发送电子邮件

要发送/接收电子邮件，您应先设置电子邮件帐户（请参阅以上内容）。

- 1 按 **OK**，选择信息，然后选择创建新信息。
- 2 选择电子邮件，此时将打开新电子邮件窗口。
- 3 写主题行，然后按“确定”。
- 4 使用键盘输入信息。

邮箱 - 包含您的所有电子邮件信息。选择您要使用的帐户，然后选择检索。KP275 将连接到您的电子邮件帐户并检索新邮件。

信息文件夹

按 **OK**，然后选择信息。KP275 上的文件夹结构无需进行说明。

创建新信息 - 创建新信息。

收件箱 - 可检视信息。

邮箱 - 所有收到的电子邮件将放置在电子邮箱中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时存储文件夹。

已发送 - 您发送的所有信息将放置在“已发送”文件夹中。

我的文件夹 - 您可以在此文件夹中管理信息。

模板 - 预先撰写的有用信息列表，用于快速回复。

情感图示 - 您可以添加、编辑和删除图释。您可以在写信息时插入所需图释。

信息

管理信息

- 1 从待机屏幕中，按 **OK** 并选择”信息”，然后选择”收件箱”。
- 2 选择“选项”，然后选择：

回复 - 回复选定的信息。

转发 - 将选定信息发送给其他人。

通话 - 向发件人拨打语音电话。

保存号码 - 将发件人的号码保存到电话本。

删除 - 删除信息。

创建新信息 - 打开新的空白信息或电子邮件。

标记/去除标记 - 标记信息以执行多项删除。

复制和移动 - 将信息复制或移动到手机、SIM 卡或“我的文件夹”。

过滤器 - 按类型查看信息。这可以将短信和彩信分开。

信息资料 - 查看信息的其它信息，包括发送时间、接收时间及阅读报告。

如果看到信息无空间接收 SIM 卡信息，您应从收件箱中删除一些信息。

如果看到信息无空间接收信息，您可以删除手机内存的信息或保存的文件以腾出空间

使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 从待机屏幕中，按 **OK** 并选择”信息”，然后选择”模板”。
- 2 选择”文本模板”或”多媒体模板”。然后，您可以选择“选项”新增、编辑、删除或全部删除模板。

更改文本信息设置

KP275 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

从待机屏幕中，按 **OK** 并选择”信息”，然后选择”设置”和”文本信息”。您可以更改：

文本信息中心 - 输入信息中心的详细信息。

状态报告 - 选择可接收信息已发送确认信息。

有效期 - 选择信息在信息中心中的最常保存时间。

信息类型 - 将文本转换为语音、传真、X.400 或电子邮件。

字符编码 - 选择字符编码方式，这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 当您在信息字段中输入的文本超过 2 页时，请选择是以短信还是彩信方式发送信息。

更改多媒体信息设置

KP275 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，请根据下列步骤执行操作。

从待机屏幕中，按 **[OK]** 并选择”信息”，然后选择”设置”和”多媒体信息”。您可以更改。

检索模式 - 选择是本地还是漫游网络。如果选择手动，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

状态报告 - 选择是否允许请求状态报告。

已读回执 - 选择是否允许发送已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择信息模式。

发送时间 - 在指定时间发送信息。

多媒体信息中心 - 输入信息中心的详细信息。

更改电子邮件设置

您可以调整电子邮件设置以满足您的个人需要。

- 按 **[OK]**，选择信息，然后选择设置。
- 选择电子邮件，然后，您可以调整以下设置：

电子邮件帐户 - 输入此帐户的名称。

允许回复电子邮件 - 选择是否允许发送“读取确认”邮件。

请求回复电子邮件 - 选择是否要请求“读取确认”邮件。

信息

检索间隔 - 选择 KP275 检查新电子邮件信息的频率。

在转发和回复中包含信息 - 选择是否要包含原始信息。

包含附件 - 选择可包含原始附件。

漫游时自动检索 - 选择国际漫游时是自动检索邮件还是停止自动检索。

新电邮通知 - 选择在收到新电子邮件时是否需要提示。

签名 - 创建电子邮件签名并打开此功能。

优先级 - 选择电子邮件信息的优先级级别。

服务信息 - 您可以在此关闭服务信息，这意味着您的信息在到达时将不再被直接推入设备，只有在您检查新信息时才会。您也可以更改服务信息安全性的。

小区服务 - 选择小区服务的接收状态、频道和语言。

更改其它设置



按 **OK**，选择信息，选择设置，然后选择：

视像邮件 - 您可以发送或接收带视频文件的邮件。

语音邮件 - 您可以发送或接收带语音文件的邮件。


相机


快速拍照


- 1 按 ，然后选择多媒体。选择相机以打开取景器。
- 2 握住手机，将镜头对准要拍摄的物体。
- 3 调整手机位置以便您看到要拍摄的物品。
- 4 按  拍照。


拍照之前


按设置以选择以下选项：其中某些设置也将在摄像机设置中显示。


 **图像大小** - 请参阅第 35 页上的更改图像大小。


 **亮度** - 从 -2.0 至 +2.0，增量为 0.5。级别越高，屏幕越亮。


 **色彩效果** - 从四个色彩效果选项中选择：关（标准/彩色）、怀旧、黑白或反色。

 **白平衡** - 白平衡确保照片中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

 **夜间模式** - 选择“开”，在夜晚您可以拍摄出更好的照片。


 **定时器** - 自拍器允许您设置按下拍摄按钮后在相机拍照之前的延迟。选择“关闭”、“3 秒”、“5 秒”或“10 秒”。当您要为自己拍照时，此功能很有用。


 **拍摄模式** - 在标准和连拍之间选择。连拍允许您快速地自动连续拍摄三、六、九张照片，对于拍摄移动中的物体或运动中的物体都非常有用。


 **图像质量** - 在超精细、精细和标准之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

拍照后

拍好的照片将显示在屏幕上。图像的名称在屏幕底部显示，屏幕左侧将显示五个选项。

 **相册** - 选择此选项可以查看相册中的其它照片。将保存您的当前照片。

 **发送** - 选择此选项可以通过信息、电子邮件发送照片。有关发送信息的信息，请参阅第 28 页。

 **相机** - 使用此选项立即拍摄其它照片。将保存您的当前照片。

01

02

03

04

05

06

07

08

相机



用作 - 选择此选项可以打开一个子菜单，以便将图像用作墙纸、联系人图像、开机图像或关机图像。




删除 - 删除刚刚拍摄的照片。选择是确认此操作。此时将出现取景器。

更改图像大小

您可以更改照片大小以保存在储存空间中。像素越多，文件越大，意味着将占用更多内存。如果要在手机中保存更多图片，请更改像素大小，使文件更小。

- 1 按设置，从工具栏中选择图像大小。
- 2 从三个数值选项中选择像素值（320x240、640x480、1280x960）。
- 3 按确定保存更改。

查看保存的照片

- 1 您可以通过相机模式或从主屏访问保存的照片。从取景器中按相册。从主屏上按 ，然后选择我的文档和我的图像。
- 2 屏幕上将显示您的图片库、下载图像和预设图像文件夹。
- 3 使用导航键选择您要查看的照片，然后选择查看打开它。


将照片设为主屏或联系人图像

从相册中，选择图像并选择用作以将图像用作主屏，联系人，开机或关机图像。

备注：联系人图像仅可添加到手机（不是 SIM 卡）中保存的联系人中。


摄像机


快速摄像


- 1 按 ，然后选择多媒体。
- 2 选择摄像机。
- 3 将相机镜头对准要拍摄的物体。
- 4 按“确定”开始录音。
- 5 Rec 出现在取景器的右下角，计时器将显示视频长度。
- 6 要暂停视频，请选择暂停，要恢复录制，请选择恢复。
- 7 选择停止可以停止录制。


拍摄视频后


视频的名称在屏幕底部显示，屏幕底部将显示五个选项。

 **相册** - 选择此选项可以查看摄像册中的其它视频剪辑。将保存您的当前视频剪辑。



 **播放** - 选择此选项可以播放已录制的视频。

 **新建** - 选择此选项可以立即拍摄另一段视频。将保存您的当前视频。

 **发送** - 选择此选项可以通过信息、电子邮件或蓝牙发送视频。有关发送信息的信息，请参阅第 28 页。

 **删除** - 删除刚刚录制的视频，选择“是”确认。此时将出现取景器。

观看保存的视频

- 1 您可以从摄像机模式或主屏访问保存的视频。只需选择相册。从主屏上，您应按 ，然后选择我的文档和我的视频。
- 2 屏幕上将显示您的图片库。
- 3 使用导航键选择您要查看的视频，然后按  键观看。

01

02

03

04

05

06

07

08

音乐

音乐

LG KP275 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请从多媒体中选择音乐。您可以在此访问多个文件夹：

最近播放 - 查看您最近播放的所有歌曲。

所有曲目 - 包含手机中的所有歌曲。

播放列表 - 包含您创建的任何播放列表。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

风格 - 按流派浏览音乐集合。

随机曲目 - 以随机顺序聆听音乐。

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。使用蓝牙传输音乐：

- 1 请确保双方设备都已打开蓝牙，对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。

- 3 文件发出后，您应选择是在您的手机上接受它。
- 4 文件将显示在所有曲目中。

播放歌曲

- 1 按 **OK** 并选择多媒体，然后选择音乐。
- 2 选择所有曲目，然后选择要播放的歌曲。选择播放。
选择 **||** 暂停歌曲。
选择 **▶▶** 跳到下一首歌曲。
选择 **◀◀** 跳到上一首歌曲。
选择返回以停止音乐并返回“所有曲目”菜单。

提示！ 要在听音乐时更改音量，请使用向上和向下导航键。

播放音乐时使用选项

选择”选项”，然后从下列内容中选择：

最小化 - 隐藏音乐播放器屏幕，以便您可以继续照常使用手机。

转到我的音乐 - 将文件移至“我的音乐”文件夹。

重复 - 重复选定的曲目。

随机曲目 - 以随机顺序聆听音乐。

均衡器 - 设置均衡器菜单。

视觉效果 - 选择视觉效果。

文件资料 - 查看选定歌曲的信息。

发送 - 通过多媒体信息、蓝牙或电子邮件向朋友发送选定的歌曲。

用作 - 将歌曲用作以下内容之一：
铃声、信息提示音、开机或关机音。

创建播放列表

您可以从所有曲目文件夹中进行选择，以创建自己的播放列表。

- 1 按 **OK**，然后选择多媒体。
- 2 选择音乐，然后选择播放列表。
- 3 选择“选项”并按添加新的播放列表，然后输入播放列表名称。按保存。
- 4 此时将显示新建播放列表文件夹。选择要包括在播放列表中的所有歌曲：滚动到这些歌曲，然后选择 。
- 5 选择完成以保存播放列表。

播放播放列表

- 1 按 **OK**，然后选择多媒体。
- 2 选择音乐，然后选择播放列表。
- 3 选择要播放的播放列表。选择播放。

编辑播放列表

您可能随时想要向播放列表添加新歌曲或从中删除歌曲。

要管理播放列表，只需使用选项菜单进行编辑。

- 1 按 **OK**，然后选择多媒体。
- 2 选择音乐，然后选择播放列表。
- 3 滚动到您要编辑的播放列表，选择选择，然后选择选项。从以下选项选择：

新增歌曲 - 您可以向播放列表添加歌曲。

下移 - 在播放列表中向下移动。

发送 - 通过信息、电子邮件或蓝牙发送

从列表删除 - 将歌曲从播放列表中删除。选择是确认。

标记/去除标记 - 逐个标记歌曲或一次全部标记。

音乐

用作 - 将当前曲目设为铃声、信息提示音、开机音效或关机音效。

文件资料 - 您可以查看有关正在收听的音乐文件的信息。

内存管理器 - 您可以查看存储器状态（手机内存或外部存储器）。

删除播放列表

- 1 按 **OK**，然后选择多媒体。
- 2 选择音乐，然后选择播放列表。
- 3 滚动到您要删除的播放列表，然后选择选项。
- 4 选择删除，然后选择是确认。

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

FM 收音机

收听收音机

LG KP275 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。

自动微调：

- 1 从待机屏幕中，按 **OK** 选择”多媒体”。选择”收音机”，然后选择”选项”。
- 2 选择”自动扫描”，然后选择”是”。手机将自动为找到的电台分配一个频道编号。

手动微调：

- 1 从待机屏幕中，按 **OK** 选择”多媒体”。选择”收音机”，然后选择”选项”。
- 2 选择”频道列表”，然后选择要保存电台的频道编号。
- 3 输入电台频率，然后按选择以保存。

备注：您也可以使用电台频率旁显示的 L 和 R 手动微调电台。

编辑频道

您可能想要将电台移至其它频道，以便更轻松地访问最常收听的电台。

- 1 从待机屏幕中，按 **OK**，选择”多媒体”。选择”收音机”，然后选择”选项”。
- 2 选择”频道列表”，然后选择您要更改的频道。
- 3 您可以从其它频道中选择一个电台；也可以手动将频道微调至您所需的频率。

您可以通过突出显示来编辑每个频道，然后按”选项”：

重命名 - 重命名频道。

替换 - 为选定频道设置新频率。

重置频道

- 1 从待机屏幕中，按 **OK** 选择”多媒体”。选择”收音机”，然后选择”选项”。
- 2 选择”频道列表”，然后选择”选项”。
- 3 选择重置频道以重置当前频道，或选择重置所有频道以重置所有频道。每个频道的开始频率将返回为 87.5Mhz。

01

02

03

04

05

06

07


08

FM 收音机

提示! 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

使用录音机

使用录音机录制语音备忘录或其它声音。

- 1 从待机屏幕中，按  选择”多媒体”。
- 2 选择”语音备忘录”，然后选择“选项”并从以下内容选择：

长度 - 设置录音时长。从“彩信大小”、“30 秒”、“1分钟”或“无限制”中选择。

质量 - 选择声音质量。从“超精细”、“精细”或“标准”中选择。

已用内存 - 查看每个存储器的当前状态。

转至录音 - 在我的声音中打开“录音”文件夹。

- 3 选择“Rec.”开始录音。
- 4 选择”停止”可以结束录音。
- 5 选择”选项”中的播放收听录音。

发送录音

- 1 完成录音后，请选择“选项”。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。如果选择信息或电子邮件，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择蓝牙，手机可能提示您打开蓝牙。

我的文档

您可以将任意多媒体文件存储到“我的文档”的手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

图像

我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

“我的图像”选项菜单

图片中可用的选项取决于您选择的图像类型。对于手机相机拍摄的照片，所有选项均可用；对于默认图像，仅可使用用作、编辑图像、排序方式、网格（列表）视图和内存管理器选项。

发送 - 向朋友发送图像。

用作 - 设为在特定时间在手机上显示的图像。

移动 - 将图像从手机内存移到存储卡，或从存储卡移到手机内存。

复制 - 将图像从手机内存复制到存储卡，或从存储卡复制到手机内存。

删除 - 删除图像。

标记/去除标记 - 选择多个文件。

编辑图像 - 您可以编辑选定的图像。

通过蓝牙打印 - 通过蓝牙打印图像文件。

文件 - 更改文件名称或查看信息。

新建文件夹 - 在“图片”文件夹中创建一个新的文件夹。

幻灯片显示 - 开始显示幻灯片。

排序方式 - 按特定顺序排列图像。

网格视图/列表视图 - 以网格或列表类型查看每张图像。

内存管理器 - 查看内存状态。

发送照片

- 1 从待机屏幕中，按 **OK** 选择“我的文档”，然后选择“我的图像”。
- 2 选择要发送的照片，然后按“选项”。
- 3 选择发送并从信息、电子邮件或蓝牙中选择。
- 4 如果选择信息或电子邮件，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

01

02

03

04

05


06

07


08


我的文档

管理图像

- 1 从待机屏幕中，按  选择”我的文档”，然后选择”我的图像”。
- 2 选择”选项”，然后选择“排序方式”。
- 3 从日期、类型或名称中选择。


删除图像

- 1 从待机屏幕中，按  选择“我的文档”，然后选择“我的图像”。
- 2 选择要删除的图像，然后选择”选项”。
- 3 选择删除，然后选择是确认删除。

提示！要快速删除“我的文件”中的任意文件，请选择该文件一次，通过光标使其突出显示，然后按  硬键。选择是确认。

查看内存状态

您可以查看已用存储空间和剩余存储空间。

- 1 从待机屏幕中，按  选择”我的文档”，然后选择”我的图像”。


- 2 选择“选项”，然后选择”内存管理器”。
- 3 选择手机内存或外部存储卡。

备注：如果您没有插入存储卡，则无法选择外部存储器。

声音

我的声音文件夹包含默认声音和录音。在此，您可以管理、发送或将声音设为铃声。

使用声音

- 1 从待机屏幕中，按  选择”我的文档”，然后选择”我的声音”。
- 2 选择”预设声音”或”录音”。
- 3 选择一个声音，选择播放试听。
- 4 选择“选项”，然后选择”用作”。
- 5 从来电铃声、信息提示音、开机声音和关机声音中选择。

视频

视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频

- 1 从待机屏幕中，按 **OK** 选择”我的文档”，然后选择”我的视频”。
- 2 选择一个视频，然后按”播放”。

观看视频时使用选项

在暂停模式下选择“选项”并从以下选项中选择：

风景视图 - 以完整拍摄模式观看视频文件。

静音/取消静音 - 打开或关闭声音。

拍照 - 您可以将暂停屏幕上的内容保存为图像文件。（此选项仅在暂停视频时可用。）

重复 - 重复视频文件。

文件资料 - 查看名称、大小、日期、时间、类型、长度、尺寸、保护和版权等详情。

发送 - 以信息、电子邮件形式或通过蓝牙发送视频。

删除 - 删除视频。

发送视频剪辑

- 1 选择视频，然后选择选项。
- 2 选择发送并从信息、电子邮件或蓝牙中选择。
- 3 如果选择信息或电子邮件，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择蓝牙，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

使用视频选项菜单

从我的视频文件夹，您可以选择以下选项：

发送 - 向朋友发送视频。

移动 - 移至手机内存或外部存储器。

复制 - 复制到手机内存或外部存储器。

删除 - 删除视频剪辑。

标记/取消标记 - 选择多个视频剪辑，然后选择删除。

文件 - 重命名视频或查看文件资料。

新建文件夹 - 在“我的视频”中创建新的文件夹。

排序方式 - 按日期、类型或名称排列视频。

我的文档


网格视图/列表视图 - 更改查看视频的方式。

内存管理器 - 您可以查看内存状态。

我的游戏和应用程序

您可以将下载的游戏和应用程序存储在此文件夹中。

玩游戏

- 1 从待机屏幕中，按  选择”我的文档”，然后选择”游戏和应用程序”。
- 2 选择游戏菜单。
- 3 选择一款游戏，然后按启动。

使用游戏选项菜单

在“应用程序”文件夹中，可使用以下选项：

新建文件夹 - 在“游戏和应用程序”菜单下创建文件夹。

排序方式 - 按日期、大小或名称对游戏和应用程序排序。

内存管理器 - 查看内存状态。

其它

从其他菜单中，您可以查看未保存在“图片”、“声音”、“声音”或“视频”中的文件。

我的存储卡

如果您已插入存储卡，它将显示为我的文档中的一个文件夹。外部存储器文件夹又分为七个文件夹：我的游戏和应用程序、其它、图片、我的声音、我的图像、GoogleAppsData 和文档。


游戏和应用程序

游戏和应用程序

KP275中预安装了多款游戏，供您在闲暇时娱乐。如果选择要下载其它游戏或应用程序，它们将保存到此文件夹中。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

玩游戏

- 1 从待机屏幕中，按  选择“游戏和应用程序”。
- 2 选择“我的应用程序”，然后选择“游戏”。
- 3 选择您要玩的游戏，然后选择“启动”。

01

02

03

04

05

06

07

08

Yahoo

您可以访问 Yahoo Mobile 网际网络服务。

- 1 Yahoo! oneSearch: 您可以搜索即时答案。
- 2 Yahoo! Mail: 显示您的电子邮件帐户。
- 3 Yahoo! Messenger: 您可以使用 Yahoo! Messenger 收发即时信息。
- 4 Yahoo! Address Book: 您可以访问您的所有联系人详细信息。

备注

某些国家或地区由于网络限制而无法访问 Yahoo! Go 服务。

管理器

将事件添加到日程表中

- 1 从待机屏幕中，按 **OK** 并选”管理器”，然后选择”日程表”。
- 2 选择您要添加事件的日期。
- 3 选择”选项”，然后选择”新增事件”。
- 4 选择是要添加约会、周年纪念还是生日，然后选择完成。
- 5 查看日期并输入事件开始的时间。
- 6 对于约会和周年纪念，请在下面的”时间”和”日期”框中输入事件结束的时间和日期。
- 7 输入事件主题。使用键盘键入字母和数字。
- 8 选择”完成”，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

提示！您可以在日历中设置假期。一次性选择您的假期所在日期，选择选项，然后选择设置假期。假期中的每一天都将变为红色。设置闹钟时，您可以将设为假期的日期排除在外。

编辑日程表事件

- 1 在主屏上按 **OK**，选择管理器，然后选择日程表。
- 2 您可以查看所有事件列表。滚动到您要编辑的事件，然后选择查看。
- 3 按选项并选择编辑，然后滚动到您要更改的事件详细资料。进行修改，然后选择完成以存储编辑过的事件。

备注：您可以从日程表中删除事件：查看事件，然后按选项和删除。

添加任务

您可以查看、编辑和添加要执行的任务。任务按时间顺序显示。

添加备忘录

- 1 在主屏上按 **OK**，选择管理器，然后选择备忘录。
- 2 选择添加，键入您的备忘录。
- 3 选择保存。
- 4 在您下一次打开备忘录应用程序时，屏幕上将显示此备忘录。

提示！您可以编辑现有备忘录。选择要编辑的备忘录，按选项，然后选择编辑。

01

02

03

04

05

06

07

08

管理器

私人备忘录

您可以撰写私人备忘录以保护自己的隐私。 您可以使用此菜单输入安全密码。

日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。

设置

您可以发送、备份或恢复日程表或任务。 您可以查看内存信息或全部清除。

工具

设置闹钟

- 1 按 **OK**，选择工具，然后选择闹钟。
- 2 按选项，然后选择新增。
- 3 向下滚动，输入所需闹钟时间。
- 4 选择重复类型以说明闹钟的响铃方式：未重复、每天、星期一至星期五、星期一至星期六、节假日除外或选择周日。
- 5 向下滚动，为闹钟选择闹铃、振动、响铃加振动或根据情景模式。
- 6 向下滚动，选择闹钟提示音。按确定键，从录音或预设声音中选择声音。
- 7 向下滚动，为闹钟输入名称或保留建议的名称。
- 8 选择完成。

使用计算器

- 1 按 **OK**，选择工具，然后选择计算器。
- 2 按数字键以输入数字。
- 3 对于简单计算，使用导航键选择您需要的函数（+，-，×，÷），然后选择 =。
- 4 对于更复杂的计算，请选择选项以选择命令。
- 5 选择清除键清除屏幕，开始新计算。

快速菜单

您可以指定要保存在快捷菜单中的功能。如果将经常使用的函数保存在快速菜单中，只需按相应的键即可使用这些函数。

01

02

03

04

05

06

07

08

浏览器

轻松使用浏览器，您可以在需要时随时获取新闻、天气预报以及体育或交通信息。此外，您还可以使用浏览器下载最新音乐、铃声、墙纸和游戏。

访问网页

- 1 从待机屏幕中按 **OK** 并选择“浏览器”。
- 2 要直接访问浏览器主页，请选择“主页”。或者，选择“输入地址”并键入所需的网址，然后选择“开启”。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕中按 **OK** 并选择“浏览器”。
- 2 选择“书签”。此时屏幕上将出现一个书签列表。
- 3 要创建新文件夹，请选择“选项”，然后选择“新建文件夹”。输入书签文件夹的名称。

- 4 要添加一个新的书签，请选择选项并按新增。输入书签名称和网址。
- 5 选择“完成”。现在，您添加的书签将显示在书签列表中。
- 6 要访问书签，仅需滚动到书签，然后选择“打开”即可。

保存页面

- 1 如上所述，访问所需网页。
- 2 选择“选项”，然后选择保存项目 - 保存此页面。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 选择“保存”。

提示！此菜单还允许您编辑已保存的页面的标题、以及删除保存的页面。

访问保存的网页

- 1 从待机屏幕中按 **OK** 并选择”浏览器”。
- 2 选择”保存的网页”。
- 3 选择”开启”以连接到保存的网页。

查看浏览器历史记录

- 1 从待机屏幕中，按 **OK** 并选择”浏览器”，然后选择”历史记录”。
- 2 此时将显示一个您最近访问过网页的标题列表。
- 3 选择”选项”，然后选择历史记录列表，以显示您最近访问过的网页标题列表。

使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。

更改网络浏览器设置


- 1 从待机屏幕中按 **OK** 并选择“浏览器”，然后选择“设置”。
- 2 您可以选择情景模式、外观设置、缓存、Cookie、安全性或恢复初始设定。
- 3 更改设置后，请选择”确认”。

设置

使用此文件夹，您可以调整设置以使 KP275 更具个性化。

备注：有关通话设置的信息，请参阅第 23 页。

更改情景模式

您可以在主屏上快速更改情景模式。只需按 , 然后选择您要激活的情景模式。从标准、静音、户外和飞行模式中选择。

提示！ 使用此功能，将飞行模式设为打开或关闭。飞行模式被设为打开时，您将无法拨打电话、连接互联网或发送信息。


自定义情景模式

您可以自定义每种情景模式。

- 1 按设置并选择情景模式。
- 2 选择您需要的情景模式，选择选项，然后选择编辑。
- 3 您可以从这里更改所有铃声、其音量和提示选项。

更改日期和时间

您可以设置与日期和时间相关的功能。

- 1 按 , 然后打开设置。
- 2 选择日期及时间，并从以下清单中选择：

时间 – 您可设定时间。

日期 – 您可设定日期。

自动更新 – 选择开启后，手机将自动更新日期和时间。

夏令时间 – 您可设定夏令时间。

更改语言

转到设置，选择手机，然后选择语言以更改手机中任意文本的语言。此更改还将改变语言输入模式。

网络 – KP275 将自动连接到首选网络。要更改这些设置，请使用此菜单。

互联网设置文件 – 设置连接到互联网的网络设定。

存取点 – 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

分组数据连接 – 设置分组数据连接。

更改保安设置

更改保密设置以保护 KP275 及重要信息。

- 1 按 **OK**，然后打开设置。
- 2 选择安全性，然后从列表中选择下列内容：

需要 PIN 码 - 选择开机时要请求的 PIN 码。

手机锁 - 为以下选项选择安全码以锁定手机：开机时、如果更换 SIM、立即、无。

更改密码 - 更改 PIN 码、PIN2 码或安全码。

更改显示设置

- 1 按 **OK**，然后选择设置。
- 2 选择屏幕，然后选择：

屏幕主题 - 为待机屏幕或拨出电话选择主题。

菜单样式 - 选择用于显示菜单的样式。

拨号 - 设置拨号显示。

字体 - 调整字体颜色。

背景灯 - 选择背景灯持续时间。

备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

手机方案 - 快速更改屏幕整体外观。

问候语信息 - 输入打开时的问候语信息。

查看内存状态

KP275 有三种可用存储器：手机、USIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

按设置，选择内存管理器，您将看到 KP275 中存储器（用户内存、用户预留内存、SIM 卡内存和外部存储器）的当前状态。

提示！ 有关安装存储卡的信息，请参阅第 18 页。

流媒体设置 - 您可以设置不同的网络设定以播放流媒体内容。

重设手机

使用设置中的恢复初始设定将所有设置重设为出厂设置。要启动此功能，您需要安全密码。

连接

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

选择连接。选项包括：

蓝牙 - 设置 KP275 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

更改蓝牙设置

1 选择连接，然后选择蓝牙。

2 选择设置。进行更改：

我的手机可见性 - 选择“可见”、“可见 1 分钟”或“隐藏”。

我的手机名称 - 为您的 KP275 输入一个名称

支持的服务 - 搜索 KP275 支持的配置文件。

我的地址 - 搜索蓝牙设备地址。

与其它蓝牙设备配对

要将您的 KP275 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否打开且可见。您可以在设置菜单中更改可见性：选择我的设备可见性，然后选择可见。
- 2 从蓝牙中，选择打开，然后选择搜索新设备。
- 3 KP275 将搜索设备。搜索完成时，屏幕上将显示添加和刷新。
- 4 选择您要与之配对的设备，选择添加，输入通行码，然后选择确定。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为打开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 KP275 将自动连接到您的蓝牙耳机并切换到耳机情景模式。

将文件传输到手机

您也可以使用蓝牙将文件从计算机传送到手机。

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用计算机发送文件。
- 3 文件发出后，您必须选择是在您的手机上接受它。
- 4 文件将根据其类型保存到相应文件夹。因此，例如，照片将保存在我的图像文件夹，音乐将保存在我的声音文件夹。如果手机无法识别文件类型，文件将保存在其它文件夹。

备注：使用蓝牙发送的文件将保存在手机内存中。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

开始使用蓝牙共享文件之前，您需要将您的手机与其它蓝牙设备配对。有关配对设备的详细资料，请参阅与其它蓝牙设备配对。

打开蓝牙：

- 1 选择连接，然后选择蓝牙。
- 2 选择打开。
- 3 选择关闭以关闭蓝牙。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 依次选择选项、发送，然后选择蓝牙。
- 3 如果尚未启动，请选择是打开蓝牙。
- 4 KP275 将自动搜索范围内其它启用了蓝牙的设备。
- 5 选择您要向其发送文件的设备，然后选择发送。

接收文件：

- 1 要接收文件，您的蓝牙必须打开且可见。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。选择是以接收文件。

提示！ 注意进度栏，确保文件已发送。

连接

备注 Bluetooth® 字体标记及徽标由 Bluetooth SIG, Inc. 所有, LG Electronics 对此类标记的使用已得到授权。其它商标和产品名称是其各自所有者的商标。

USB 连接模式

您可以在手机上选择用于多种用途的 USB 连接模式。

始终询问模式

如果将默认值设为“始终询问模式”，则每次通过数据线将手机连接到电脑时，手机都会提示您选择 USB 连接模式类型。

警告！ 首先确保您有合适的费率！否则如果下载大量数据（如音乐或视频），您可能产生高费用。

- 1 将 USB 数据线连接到设备。
- 2 从设备中的弹出菜单中选择 PC Internet。
- 3 等到 PC 上打开弹出菜单，选择“开始”在 PC 上安装 Via the phone 软件（称为 Via the phone 及其驱动程序），然后按照屏幕说明执行操作。

- 4 您现在可以正常使用 web 浏览器和电子邮件程序。完成后单击“断开连接”。

将手机用作大容量存储器设备

只有插入存储卡时，您的手机才可以用作大容量存储设备。

- 1 选择”连接”，然后选择”USB 连接模式”。
- 2 突出显示大容量存储，然后按选择。
- 3 将手机连接到电脑。此时手机将显示：正作为大容量存储连接…，随后将显示以大容量存储器模式连接。传输期间不要断开连接。
- 4 所有手机文件将自动保存在电脑硬盘中。

备注：要启动大容量存储，必须将手机从电脑上拔下。

备注：大容量存储将仅备份保存在存储卡中的内容，而不备份手机内存中的内容。要传输手机内存中的内容（如，电话本），您需要使用“电脑同步”进行同步。

将手机用作调制解调器

KP275 可以同时用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。

PC 套件 - 使手机与 PC 同步

您可以使手机与 PC 同步，以确保所有重要信息和日期匹配，同时做好备份。

在计算机上安装 LG PC 套件

- 1 转到 www.lgmobile.com 并选择“Asia & Pacific（亚太地区）”，然后选择您所在的国家/地区。
- 2 选择“产品”菜单，选择“Manual & Software（手册和软件）”，然后单击“Go to Manual & S/W（转到手册和软件）”下载部分。单击“是”，LG PC 套件安装程序将出现。（Windows XP、Windows Media Player 等）。
- 3 选择安装程序运行的语言，然后单击“确定”。
- 4 根据屏幕说明完成 LG PC 套件安装程序向导。
- 5 安装完成后，桌面上将显示 LG PC 套件图标。

配件

这些配件随 KP275 提供。

充电器



用户指南

了解更多关于 KP275 的信息。



电池用



免提耳机



备注

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、PCS 1900 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称：KP275

系统：GSM 900 / DCS 1800 / PCS
1900 / W-CDMA

外部环境

最高温度：+55° C (放电),
+45° C (充电)

最低温度：-10° C

01

02

03

04

05

06

07

08

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900/ W-CDMA Terminal Equipment

Model Name

KP275

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1/ 489-24 V1.3.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax: +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

26. Sep. 2008



Signature of representative



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



KP275 User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact KP275 phone by LG, designed to operate with the latest digital mobile communication technology.

SET UP	01
YOUR HOME SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
BROWSER	06
SETTINGS	07
ACCESSORIES	08

Contents

GUIDELINES	
Guidelines for safe and efficient use	7
01 SET UP	
Getting to know your phone	13
Open view	14
Installing the USIM and battery	15
Memory card	18
Installing a memory card	18
Removing a memory card	18
Formatting a memory card	18
Menu map	19
02 YOUR HOME SCREEN	
Your Home screen	20
The status bar	20
03 THE BASICS	
Calls	21
Making a call	21
Making a call from your contacts	21
Answering and rejecting a call	21
Making a video call	21
Speed dialling	22
Viewing your call logs	22
Using call divert	22
Using call barring	23
Changing the call settings	23
Changing the common call settings	24
Video call setting	24
Contacts	25
Searching for a contact	25
Adding a new contact	25
Contact options	25
Adding a contact to a group	26
Renaming a group	26
Adding a picture to a contact	26
Copying your contacts to your USIM	27
Viewing information	27
Messaging	28
Messaging	28
Sending a message	28
Entering text	28
Text input mode using the keypad	28
Setting up your email	29
Sending an email using your new account	29
Message folders	29
Managing your messages	30
Using templates	30
Changing your text message settings	30
Changing your multimedia message settings	31
Changing your email settings	31
Changing your other settings	32
04 GET CREATIVE	
Camera	33
Taking a quick photo	33
Before you take your photo	33

After you've taken your photo	34	Organising your images	43
Changing the image size	34	Deleting an image	43
Viewing your saved photos	34	Checking your memory status	43
Setting a photo as Wallpaper or Contacts image	35	Sounds	43
Video camera	36	Using a sound	43
Shooting a quick video	36	Videos	44
After you've shot your video	36	Watching a video	44
Watching your saved videos	36	Sending a video clip	44
Music	37	Using the video options menu	44
Music	37	Games and Applications	45
Transferring music onto your phone	37	Playing a game	45
Playing a song	37	Using the games options menu	45
Using options while playing music	38	Others	45
Creating a playlist	38	My memory card	45
Playing a playlist	38	Games & apps	46
Editing a playlist	39	Games & apps	46
Deleting a playlist	39	Playing a game	46
FM radio	40	Yahoo	47
Listening to the radio	40	05 GET ORGANISED	
Searching for stations	40	Organiser	48
Editing the channels	40	Adding an event to your calendar	48
Resetting channels	41	Editing a calendar event	48
Using the Voice recorder	41	Adding a to do	49
Sending a voice recording	41	Adding a memo	49
My stuff	42	Secret memo	49
Images	42	Date finder	49
My images option menus	42	Settings	49
Sending a photo	42		

Contents

Tools	50	Changing your display settings	55
Setting your alarm.....	50	Viewing memory status.....	56
Using your calculator	50	Resetting your phone.....	56
Using the stopwatch.....	50	Connectivity	57
Converting a unit.....	50	Changing your connectivity settings	57
Adding a city to your World time	51	Changing your Bluetooth settings.....	57
Quick menu.....	51	Pairing with another Bluetooth device	57
06 BROWSER		Using a Bluetooth headset.....	58
Browser.....	52	Transferring a file to your phone	58
Accessing the web.....	52	Sending and receiving your files using	
Adding and accessing your bookmarks ...	52	Bluetooth	58
Saving a page	52	USB connection mode	59
Accessing a saved page.....	53	Always ask mode.....	59
Viewing your browser history	53	Using your phone as a mass	
Using RSS reader	53	storage device.....	60
Changing the web browser settings	53	Using your phone as a modem	60
07 SETTINGS		PC suite-Synchronise your phone	
Settings	54	with your PC.....	60
Changing your profiles	54	08 ACCESSORIES	
Customising your profiles	54	Accessories	61
Changing your date & time.....	54	Network service.....	62
Changing the language	55	Technical data	62
Changing your security settings.....	55	General	62
		Ambient Temperatures	62

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this device when tested for use at the ear is 0.711 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available.

Guidelines for safe and efficient use

Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 0.998 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Please consult your doctor to determine if operation of your phone may interfere with the operation of your medical device.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Guidelines for safe and efficient use

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

Guidelines for safe and efficient use

- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Getting to know your phone



01

02

03

04


05

06

07

08


Open view

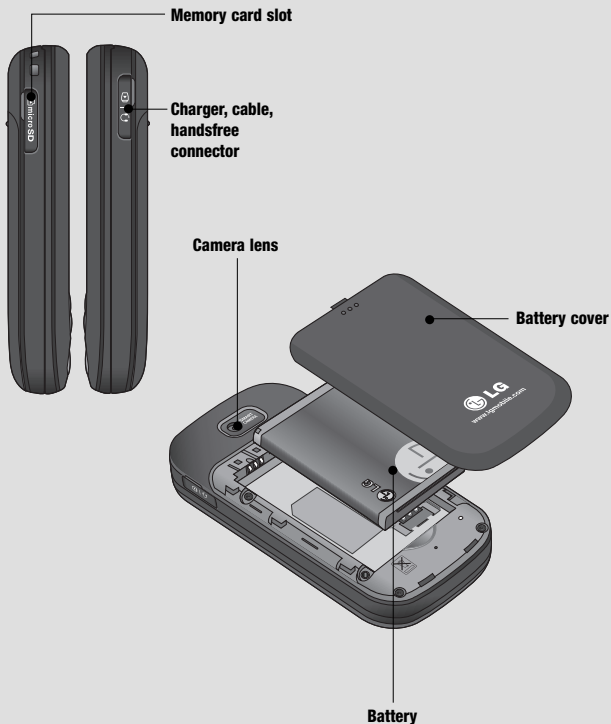

Installing the USIM and battery


1 Remove the battery cover

Press the battery cover release latch. The battery cover should slide and lift off easily.

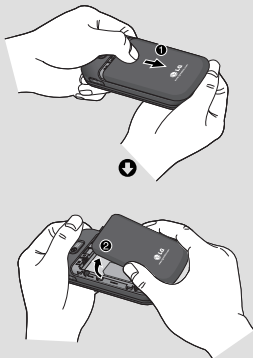

2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.

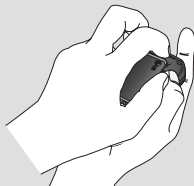

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold color contact area on the card is facing downwards. To remove the USIM card, push it out of the holder from the top.

WARNING: Do not insert the USIM card when the slide is open, as this may damage your phone and USIM card.

01

02

03



04

05

06


07

08

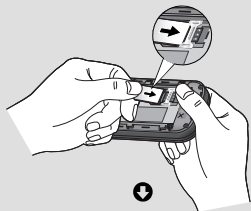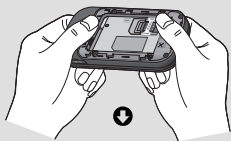

4 Install the battery


Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

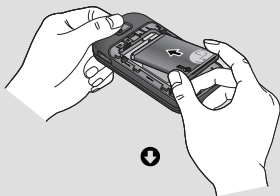

Installing the USIM and battery


5 Replace the battery cover


Insert the top of the battery cover and push down and slide until it clicks into place.

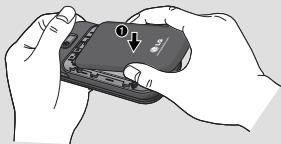

6 Charging your phone

Pull open the cover of the charger socket on the side of your KP275. Insert the charger and plug into a mains electricity socket. Your KP275 will need to be charged until a message reading **Battery Full** appears on screen.

 **WARNING:** Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

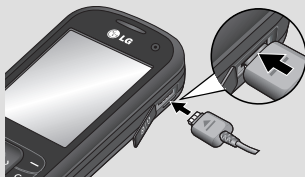

01

02

03

04

05

06

07

08


Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card.

NOTE: A memory card is an optional accessory.

Open the memory card cover. Slide the memory card into the slot until it clicks into place. Make sure that the gold color contact area is facing downwards.

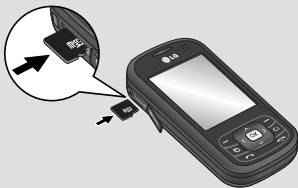

Removing a memory card

Open the cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it, as shown in the following diagram:



Formatting a memory card

Your memory card may already be formatted. If not you will need to do so before you can begin using it.

- 1 From the Home screen press **OK** and select **Settings**.
- 2 Choose **Memory manager** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KP275 press **OK** and select **My stuff**. Choose **My memory card**.

⚠ WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Menu map



Games & apps

- 1 My games & apps
- 2 Settings



Calling

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- * Video call settings



Organiser

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



Multimedia

- 1 Camera
- 2 Video camera
- 3 Music
- 4 FM Radio
- 5 Voice recorder



Messaging

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



My stuff

- 1 My images
- 2 My sounds
- 3 My videos
- 4 My games & apps
- 5 Others
- 6 My memory card



Yahoo

- 1 Yahoo!
oneSearch
- 2 Yahoo! Mail
- 3 Yahoo!
Messenger
- 4 Yahoo! Address Book



Contacts

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial number
- 6 Own number
- 7 My business card
- 8 Settings



Tools

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time
- 7 SIM services

*This feature depends on SIM and the network services. If your operator supports SIM Tool Kit then this menu will appear.



Browser

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



Connectivity

- 1 Bluetooth
- 2 USB connection mode



Settings

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profiles
- 7 Access points
- 8 Packet Data Conn.
- 9 Security
- 0 Memory manager
- * Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08











Your Home screen











The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth connection is active.

The table below explains the meaning of icons you're likely to see in the status bar.




TIP! You can quickly access chosen menus using your **Favourites** list. In standby mode press the left soft key. Select <Empty>, and then **Add** to add a menu as a favourite.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	Multitasking available

Icon	Description
	Push message
	An alarm is set
	New message
	New voice message
	Normal profile in use
	Silent profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty


Calls

Making a call


- 1 Make sure your phone is on.
- 2 You can use the keypad after opening the slide. To delete a digit press .
- 3 Press  to begin the call.
- 4 To end the call, press  or slide the cover closed.

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select **Contacts** in the menu and then **Search**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to begin the call.

Answering and rejecting a call


When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** in order to reject an incoming call.

Making a video call

You can make and receive video calls when both you and the other person have 3G coverage.

- 1 Input the phone number using the keypad, or select the phone number from Contacts.
- 2 To start the video function, press the left soft key [Options] and select Make video call.
- 3 Adjust the camera position if necessary.
- 4 Press  to finish the call, or close the handset.

01

02

03

04

05

06

07

08

Calls

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **OK** to open the main menu. Select **Contacts**, then select **Speed dials**.
- 2 Your voicemail is preset to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Add** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation keys then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press



Viewing your call logs

From the standby screen, press **OK** and select **Calling** then **Call logs**. Choose to view:

All calls - View a complete list of all of your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

TIP! From any calls list, press the left soft key and select Delete all to delete all the recorded items.

TIP! Using the navigation keys to highlight any single call entry in order to view the date and time of the call. To view the call duration select View.

Using call divert

- 1 Press **OK**, select **Calling**.
- 2 Select **Call divert**. Choose from Voice calls, Video calls. Or you can choose Deactivate all.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer, when you are out of reach.
- 4 Choose **Activate** and select whether to divert to voice mail, or to other number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call divers, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Press **OK**, select **Calling**.
- 2 Select **Call barring**. Choose from Voice calls and Video calls. Or you can choose Deactivate all.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial numbers** from the **Calling** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the call settings

- 1 Press **OK**, select **Calling**.
- 2 From here you can amend the settings for:

Call durations - View details of how long you have spent on your calls both received and dialled.

Data volume - View the amount of all your received and sent data for Web, Data or All, measured in kilobytes.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Call waiting - Be alerted when you have a call waiting.

01

02

03

04

05


06

07

08

Calls

Changing the common call settings

- 1 From the standby screen, press  and then select Calling.
- 2 Select Common setting. From here you can amend the settings for:

Call reject - Select On or Off and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Choose On or Off.

Answer mode - Choose whether to answer the phone by pressing the send key, by pressing any key, or by opening the flip.

Minute minder - Select On to hear a tone every minute during a call.

BT answer mode - Choose how to answer a call when using a Bluetooth headset. Select Handsfree or handset.

Save new number - Saves numbers you use that aren't already stored in Contacts.

Slide close setting - Set whether or not a call is ended upon closing the slide.

Video call setting

You can set the screen display when making /receiving a video call.

- 1 **Use private picture:** Determine whether to show the private image or not
- 2 **Select private image:** Select the still image to be displayed.
- 3 **Mirror:** Select to activate the mirror effect or not.

Contacts

Searching for a contact

- 1 Select **Contacts** from the main menu, and choose **Search**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Select **Contacts** and choose **Add new**.
- 2 Choose whether to store your new contact on your **Handset** or **USIM** card.
- 3 Enter the information you want in the fields provided and select **Done**.

Or to use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save number**, and choose either **New contact** or **Update contact**.
- 3 Enter the relevant information and select **Done**.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Select **Contacts** from the main menu, and choose **Search**.
- 2 Select **Options** to open the list of options.

From here you can:

Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send business card - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Email** or **Bluetooth**.

Make voice call - Directly make voice call to a contact you choose.

Make video call - Directly make video call to a contact you choose.

Add new contact - Add a new contact.

Edit - To Change selected contact's details.

Add to group - Move a contact to a group

Mark/Unmark - Mark a contact or all

01

02

03

04

05

06

07

08

Contacts

Search by - Search a contact by Number or Group

Save to USIM/Handset - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Delete - Delete the contact. Select **Yes** only if you are sure.

Text input - You can insert a symbol, change writing method or language and add a word to dictionary.

Adding a contact to a group

You can save your contacts into groups. This is useful for keeping your work colleagues and family separate, for example. There are a number of groups including **Family, Friends, Colleagues, School** and **VIP** already set up on your phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **Open** then select **Add member**.
- 3 Your contacts list will open. Scroll to any contacts you would like to add to the group and press mark, then select **Done**.

TIP! You can assign a ringtone to a group. Select the group you wish to assign the ringtone to, select **Options** and **Group Ringtone**.

Renaming a group

You can rename groups you created to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select the group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Done**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **Contact list settings** and choose **Show picture** and select **On**. Select **Done**.
- 3 Then return to the **Search** and select the contact you want to add a picture to.

- 4 Choose **Options** and select **Edit**.
- 5 Scroll down to the **Image** section. Choose **Edit** and select **No image, Avatar, Take a picture** or **Use existing image**. If you select **Use existing image**, you can choose an image that is saved in your phone memory. If you select **Take a picture**, your camera viewfinder will open, so you can take a picture of your contact. Take the picture then press **OK**.
- 6 Select **Done**.

Copying your contacts to your USIM

You can also choose to copy your contacts from your USIM to your handset or from your handset to your SIM.

- 1 Select **Contacts**, choose **Settings** and select **Copy**.
- 2 Select to copy the contacts from **Handset to USIM** or **USIM to Handset**.
- 3 Choose whether to **All together** or **One by one**.
- 4 Select **Done** if you are sure.

Viewing information

Select **Contacts**. From here you can view your **Service dial numbers**, your **Own number** and **My business card**.

TIP! If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **Add** and enter your details as you would for any contact. Choose **Done** when finished.

01

02

03

04

05


06

07


08

Messaging

Messaging

Your KP275 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) and email, as well as the network's service messages. To use these functions press  and select **Messaging**.

Sending a message

- 1 Create a new message press , select **Messaging** and choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- 5 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Symbols, Template, Emoticon, Name & Number, New slide, Subject** or **More (Business card/Schedule/Memo/To do/My business card)**.

- 6 Choose **Send**.
- 7 Choose a contact from the list of contacts or enter the phone number from **Options**.
- 8 Select **Send**.



WARNING: If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 mode, Abc mode, and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making a call, the keypad number keys will default to 123.

Setting up your email

You can stay in touch on the move using email on your KP275. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **OK**, select **Messaging** and choose **Settings**.
- 2 Select **Email** and then choose **Email accounts**.
- 3 Select **Add** and follow the pop up instruction and enter the information required.

Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press **OK**, select **Messaging** and choose **Create new message**.
- 2 Choose **Email** and a new email window will open.
- 3 Write a subject line.
- 4 Enter your message using the keypad.

MailBox - This contains all your email messages. Select the account you want to use then select **Retrieve**. Your KP275 will connect to your email account and retrieve your new messages.

Message folders

Press **OK**, then select **Messaging**. The folder structure used on your KP275 should be self-explanatory.

Create new message - Create your new message.

Inbox - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

Mailbox - All emails you receive are placed into your Mailbox.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder for messages that are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

My folders - You can move messages existed in Inbox or Sent messages into My folders, and then you can move those messages existed in My folders into the original message box.

Templates - A list of pre written useful messages, useful for a quick reply.

Emoticons - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Messaging

Managing your messages

- 1 From the standby screen, press **OK** and select Messaging then Inbox.
- 2 Select Options and then choose to:
 - Reply** - Send a reply to the selected message.
 - Forward** - Send the selected message on to another person.
 - Make call** - Call the person who sent you the message.
 - Save number** - Save sender's address to the contact.
 - Delete** - Delete the message.
 - Create new message** - Open a new, blank message or email.
 - Mark/Unmark** - Mark/Unmark your messages for multiple deletion.
 - Copy & Move** - Copy or move the message to your phone, SIM or My folders.
 - Filter** - View your message by type. This will group SMS separately from MMS.
 - Message info.** - See additional information for the message, including the time it was sent.

If you see the message No space for SIM message, you should delete some messages from your inbox which is saved in SIM memory to create space.

If you see the message No space for Phone messages you can delete either messages or saved files from phone memory to create space.

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 From the standby screen, press **OK** and select Messaging then choose Templates.
- 2 Choose Text templates or Multimedia templates. You can then select Options to Add new, Edit, Delete or Delete all templates.

Changing your text message settings

Your KP275 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **OK** and select Messaging, then choose Message settings, then Text message. You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Validity period - Choose how long your message is stored at the message centre.

Message types - Convert your text into Voice, Fax, X.400 or Email.

Character encoding - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

Send long text as - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

Changing your multimedia message settings

Your KP275 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

From the standby screen, press **0** and select Messaging, then choose Message settings, then Multimedia message. You can make changes to:

Retrieval mode - Choose Home or Roaming network. If you then choose Manual you will receive only notifications of MMS and you can then decide whether or not to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose your default slide duration time for composing MMS.

Creation mode - Choose your message mode.

Delivery time - Deliver your message at a specific time.

Multimedia msg. centre - Enter the details for your message centre.

01

02

03

04

05

06

07

08

Messaging

Changing your email settings

You can adapt your email settings to your own preferences.

- 1 Press **OK** , select **Messaging** and choose **Settings**.
- 2 Select **Email** then you can adapt the following settings:

Email account - You can set up an email account.

Allow reply email - Choose to allow the sending of 'read confirmation' messages.

Request reply email - Choose whether to request 'read confirmation' messages.

Retrieve interval - Choose how often your KP275 checks for new email messages.

Include message in Fwd & Reply
- Choose whether or not to include the original message.

Include attachment - Choose whether or not to include the original attachment.

Auto Retrieval in Roaming - Choose whether or not to automatically retrieve your messages when abroad.

New email notification - Choose whether or not to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Changing your other settings

Press **OK** , select **Messaging**, choose **Messaging settings** then:

Videomail - You can send or receive the mail with a video file.



Voicemail - You can send or receive the mail with a voice file.

Service message - Here you can switch off Service message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages. You can also change your service message security.

Info. service - Choose the reception status, channels and language of your info messages.


Camera


Taking a quick photo


- 1 Press  and select **Multimedia**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press  to take a photo.


Before you take your photo


Press **Settings** for the following options: Some of those settings will be shown at **Video Camera Settings**, too.


 **Image size**- See **Changing the image size** on page 35


 **Brightness** - From -2.0 to +2.0 at 0.5 intervals. The higher the level, the brighter the screen.


 **Colour effect** - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Black & White** or **Negative**.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

 **Night mode** - You can take better pictures at night by selecting **On**.

 **Timer** - The timer allows you to set a delay after the capture button is pressed before the camera fires. Choose from **Off**, **3 Sec**, **5 Sec** or **10 Sec**. Great for when you want to include yourself in the photo.

 **Shot Mode** - Choose from **Normal** and **Burst shot**. **Burst shot** lets you to take up to **Three**, **Six**, **Nine** shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

 **Image Quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a photo will be. The file size will increase as a result, which means you will be able to store fewer photos in your memory.

01

02

03

04

05

06

07

08

Camera

After you've taken your photo

Your captured photo will appear on the screen. The name of the image is shown at the top of the screen and you will see five options displayed on the down side of the screen.



Album - Choose this to look at the other photos in your album. Your current photo will be saved.



Send - Select this send the photo as a **Message, Email and Bluetooth**. See page 28 for **Sending a message**.



Camera - Use this to take another photo straightaway. Your current photo will be saved.



Use as - Select to open a sub menu to use your image as **Wallpaper**, a **Contacts image, Start up image or Power off image**.




Delete - Deletes the photo you have just taken. Confirm this by selecting **Yes**. The viewfinder will reappear.

Changing the image size

You can change the size of the photo to save memory space. The more pixels means the larger the file size, this in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Settings** and select **Image size** from the toolbar.
- 2 Select a pixel value from the three numerical options (320x240, 640x480, 1280x960).
- 3 Press **OK** to save your changes.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and also from the Home screen. From the viewfinder, simply press **Album**. From the Home screen press , then select **My stuff** and **My images**.
- 2 Your gallery , Download image and Default images folder will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to open it.

Setting a photo as a wallpaper or contact image

From your image gallery, use the navigation keys to select an image and choose Options and Use as to use the selected image as Wallpaper, Contacts image, Start up image or Shut down image.

NOTE : Contact Image can only be added to contacts saved to your phone, not your SIM.

01

02

03

04

05


06

07

08


Video camera


Shooting a quick video


- 1 Press  and select **Multimedia**.
- 2 Choose **Video camera**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press OK to start recording.
- 5 Rec will appear in the bottom of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


After you've shot your video


The name of the video is shown along the bottom of the screen and five options will be displayed at the bottom of the screen.

 **Album** - Select to look at the other video clips in your album. Your current video clip will be saved.



 **Play** - Select to play the video you have just recorded.

 **New** - Select to shoot another video straight away. Your current video will be saved.

 **Send** - Select to send the video as a **Message, Email** or **Bluetooth**. See page 28 for **Sending a message**.

 **Delete** - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the Home screen. Simply select **Album**. From the Home screen you should press , then select **My stuff** and **My videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press  key to watch it.

Music

Music

Your LG KP275 has a built-in music player so you can play all your favourite tracks. To access the music player, select Music from the Multimedia menu. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

All tracks - Contains all of the songs you have on your phone.

Playlists - Contains any playlists you have created.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.





Shuffle tracks - Listen to your music in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you should to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All tracks**.

Playing a song

- 1 Press  and select **Multimedia**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play. Select **Play**.
Select  to pause the song.
Select  to skip to the next song.
Select  to skip to the previous song.
Select **Back** to stop the music and return to the All tracks menu.

TIP! To change the volume while listening to music, use the up and down navigation keys.

01

02

03

04

05

06

07

08

Music

Using options while playing music

Select Options and choose from:

Minimise - Make the music player screen disappear so that you can continue using your phone as normal.

Go to my music - Return to the Music menu.

Repeat - Repeat off, a song or all songs in the list

Shuffle - Listen to your music in a random order.

Equaliser - Set the equaliser menu.

Visualization - Select the visual effects.

File info. - View brief details about the file.

Send - Send the song as a message, email, or via Bluetooth.

Use as - Use the song as one of your ringtone, message tone, start-up or shut down tone.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Press **OK** and select **Multimedia**.
- 2 Choose **Music**, then select **Playlists**.
- 3 Choose Options and press **Add new playlist** and enter the playlist name. Press **Save**.
- 4 The New playlist folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting **Mark**.
- 5 Select **Done** to store the playlist.

Playing a playlist

- 1 Press **OK** and select **Multimedia**.
- 2 Choose **Music**, then select **Playlist**.
- 3 Choose the playlist you would like to play. Select **Play**.

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

To organise your playlists, simply edit them using the **Options** menu.

- 1 Press **OK** and select **Multimedia**.
- 2 Choose **Music**, then select **Playlist**.
- 3 Scroll to the playlist you want to edit and select **Select**, then select **Options**. Choose from:

Add new song - You can add songs to the playlist.

Move down - move down the song **on the playlists**.

Send - Send Message, Email or Bluetooth

Remove from list- Remove a song from the playlist. Select **Yes** to confirm.

Mark/Unmark - Mark a song one by one or all.

Use as - Set the current track as your **Ringtone, Message tone, Start up** or **Shut down**

File info - You can view information about the music file you are listening to.

Memory manager - You can view the memory status (Handset memory or External memory).

Deleting a playlist

- 1 Press **OK** and select **Multimedia**.
- 2 Choose **Music**, then select **Playlists**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and select **Yes** to confirm.

01

02

03

04

05

06

07

08

FM radio

Listening to the radio

Your LG KP275 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning.

To auto tune:

- 1 From the standby screen, press **OK** and select Multimedia then FM radio, choose Options.
- 2 Select Auto scan. The stations found will automatically be allocated to a channel number.

To manually tune:

- 1 From the standby screen, press **O** and select Multimedia then FM radio, choose Options.
- 2 Select Channel list and choose the channel number you want to save the station to.
- 3 Enter the station frequency and press Select to save.

NOTE : You can also manually tune into a station by using L and R displayed next to the radio frequency.

Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 From the standby screen, press **OK**, select Multimedia then FM radio, choose Options.
- 2 Select Channel list and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and pressing Options:

Rename - Rename the channel.

Replace - Set new frequency for the selected channel.

Resetting channels

- 1 From the standby screen, press **OK** and select Multimedia then FM radio, choose Options.
- 2 Select Channel list, then Options.
- 3 Choose Reset channel to reset the current channel or choose Reset all channels to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Using the voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 From the standby screen, press **OK** and select Multimedia.
- 2 Select Voice recorder then options and choose from:

Duration - Set the recording duration. Choose from MMS msg. size, 30 secs, 1 min or No limit.

Quality - Select the sound quality. Choose from Super Fine, Fine or Normal.

Memory in use - Check the current status of each memory.

Go to Voice recordings - Open the Voice recordings folder in My sounds.

- 3 Select Rec. to begin recording.
- 4 Select Stop to end recording.
- 5 Select Play in the options menu to listen to your recording.

Sending the voice recording

- 1 Once you have finished recording, select options.
- 2 Select Send and choose from Message, Email or Bluetooth. If you choose Message or Email, the recording will be added to the message and you can write and end it as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on.

01

02

03

04

05

06

07

08

My stuff

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

Images

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images option menus

The options available to you in My images depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the Use as, Sort by Grid (List) view and Memory manager options are available for default images.

Send - Send the image to a friend.

Use as - Set the image to appear on your phone at certain times.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

Delete - Delete an image.

Mark/Unmark - Select multiple files.

Edit image - You can edit the selected image.

Print via Bluetooth - Print an image via Bluetooth®.

File - Change the name or view the information for the file.

Create new folder - Create a new folder within the My videos folder.

Slide show - Start a slide show.

Sort by - Sort images into a specified order.

Grid view/ List view - View each image in grid or list type.

Memory manager - View the memory status.

Sending a photo

- 1 From the standby screen, press **OK** and select My stuff then choose My images.
- 2 Select the photo you want to send and press Options.
- 3 Select Send and choose from Message, Email, or Bluetooth.


- 4 If you choose Message or Email, your photo will be attached to the message and you can write and send the message as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 From the standby screen, press **OK** and select My stuff, then My images.
- 2 Select Options, then Sort by.
- 3 Choose from Date, Type or Name.

Deleting an image

- 1 From the standby screen, press **OK** and select My stuff, then My images.
- 2 Select the image you want to delete and choose Options.
- 3 Select Delete, then Yes to confirm.

TIP! To quickly delete any file in My files, highlight it with the cursor and press the  key.

Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 From the standby screen, press **OK** and select My stuff, then My images.
- 2 Select Options, then Memory manager.
- 3 Choose Handset memory or External memory.

NOTE : If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The My sounds folder contains the Default sounds and Voice recordings. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 From the standby screen, press **OK** and select My stuff, then My sounds.
- 2 Select Default sounds or Voice recordings.
- 3 Select a sound and press Play to listen to it.
- 4 Select Options and Use as.
- 5 Choose from Voice ringtone, Message tone, Start-up sound and Shut down sound.

01

02

03

04

05

06

07


08

My stuff

Videos

The My videos folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 From the standby screen, press  and select My stuff then My videos.
- 2 Select a video and press Play.
Select Options while watching a video and choose :

Landscape view - View the video file in full shot.

NOTE : You can switch to landscape view & landscape view to normal view using # key, while viewing video.

Mute/ Unmute - Switch the sound on/off.

Capture - You can save what is on the paused screen as an image file. (This option is only available while video is paused.)

Repeat - Repeat the video file.

File info. - View brief details about the file.

Send - Send the video in a message, email or via Bluetooth.

Delete - Delete the video.

Use as ringtone

Sending a video clip

- 1 Select a video and press Options.
- 2 Select Send and choose from Message, Email or Bluetooth.
- 3 If you choose Message or Email, your video clip will be attached to the message and you can write and send the message as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using the video options menu

From the My videos folder, you can choose from the following options:

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Mark/Unmark - Select multiple files.

File - Edit the file name and view its information.

Create new folder - Create a new folder within the My videos folder.

Sort by - Sort videos into a specific order.

Grid view/ List view - View the options menu by grid or list type.

Memory manager - View the memory status.

Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare. If you download a game from the network, you will need to install the downloaded game in your phone before enjoying the game.

Playing a game

- 1 From the standby screen, press **OK** and select My stuff, then Games & apps.
- 2 Select Games menu.
- 3 Select a game and press Launch.

Using the games options menu

From the Games and Applications folders, the following options are available:

Create new folder – Create a folder within the games and applications menu.

Sort by - Sort the games and applications by Date, Size or Name.

Memory manager - View the memory status.

Others

The Others folder is used to store files which are not pictures, sounds, videos, games or applications.

My memory card

If you purchase an optional external memory card, you can manage more content.

01

02

03

04

05

06

07

08


Games & apps

Games and Apps

Your KP275 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

NOTE: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Playing a game

- 1 Press  and select Games & Apps.
- 2 Select My games & apps and choose Games.
- 3 Choose the game you want to play and select Launch.

Yahoo

You can access Yahoo Mobile Internet Service.

- 1 Yahoo! oneSearch : You can search for instant answers.
- 2 Yahoo! Mail : Shows your email account.
- 3 Yahoo! Messenger : You can use Yahoo! Messenger for instant message.
- 4 Yahoo! Address Book : You can access your all contact details

Note

Some countries are unable to access Yahoo! Go Service because of network limitations.

01

02

03

04

05

06

07

08

Organiser

Adding an event to your calendar

- 1 From the standby screen, press **OK** and choose **Organiser** then select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Add**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, press **Subject** or **Name** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

Editing a calendar event

- 1 From the Home screen press **OK**, and select **Organiser**, then **Calendar**.
- 2 You can see a list of all your events. Scroll to the event you would like to edit and select **View**.
- 3 Press **Options** and Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Done** to store the edited event.

Note: You can delete an event from your calendar by viewing the event and then pressing **Options** and **Delete**.

Adding a to do

You can view, edit and add tasks to do. Tasks are displayed in time order.

Adding a memo

- 1 From the Home screen press **OK**, and select **Organiser**, then **Memo**.
- 2 Select **Add** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

Secret memo

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Settings

You can send , back up or restore Calendar or To do. You can see Memory info ot clear all.

01

02

03

04

05

06

07

08

Tools

Quick menu

You can specify functions to save in the Quick menu. If you save frequently used functions in the Quick menu, you can quickly use them by pressing the corresponding key.

Setting your alarm

- 1 Press **OK**, and select **Tools**, then **Alarms**.
- 2 Press **Options** and select **Add new**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Not repeated**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Except holiday**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Alarm Ring**, **Vibration**, **Ring&vibration** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Press OK key and choose a sound from **Voice recordings** or **Default sounds**.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Done**.

Using your calculator

- 1 Press **OK**, and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷) using the navigation keys followed by =.
- 4 For more complex calculations, select **Options** to choose a command.
- 5 Select Clear key to clear the screen and start a new calculation.

Using the stopwatch

- 1 Press **OK**, and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

Converting a unit

- 1 Press **OK**, and select **Tools**, then **Converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Note: For Currency convert, you need to set 'Rate' according to current Exchange rate first.

TIP! You can select the first letter of the city required from the keypad to speed up the process

Adding a city to your World time

- 1 From the Home screen press **OK**, and select **Tools**, then **World time**.
- 2 To find out the time of specific city, press **Options** and select **Add city**.
- 3 Scroll down the list or enter the first letter of the city. Also you can select Map and choose a city.
- 4 Press Select.

01

02

03

04

05

06

07

08

Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen, press **OK** and choose Browser.
- 2 To access the browser homepage directly, select Home. Alternatively, select Enter address and type in your desired URL, followed by Open.

NOTE : An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen, press **OK** and choose Browser.
- 2 Select Bookmarks. A list of your Bookmarks will appear on the screen.

- 3 To create a new folder, select Options and choose Create new folder. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select Options and press Add new. Enter a name for your bookmark followed by the URL.
- 5 Select Done. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select Open.

Saving a page

- 1 Access your required webpage as described above.
- 2 Select Options, Save items, then Save this page.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select Save.

TIP! This menu will also allow you to edit titles of saved pages and delete saved pages.

Accessing a saved page

- 1 From the standby screen, press **OK** and choose Browser.
- 2 Select Saved pages.
- 3 Select Open to connect to the saved page.

Viewing your browser history

- 1 From the standby screen, press **O** and choose Browser, then select History.
- 2 A list of web page titles you have accessed recently will be displayed.
- 3 To access one of these pages, simply select the required page and press Open.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text.

Changing the web browser settings

- 1 From the standby screen, press **OK** and choose Browser then select Settings.
- 2 You can choose to edit Profiles, Appearance settings, Cache, Cookies, Security, or Reset Settings.
- 3 Once you have changed your settings, press Select.

01

02

03

04

05

06

07

08

Settings

Within this folder you can adapt your settings to make your KP275 personal to you.

Note: For information on call settings see page 23.

Changing your profiles

You can quickly change your profile from the Home screen. Simply press  then the profile you would like to activate. Choose from **Normal**, **Silent**, **Outdoor** and **Flight mode**.

Tip! Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet or send messages when **Flight mode** is switched **On**.


Customising your profiles

You can customise each profile setting.

- 1 Press **Settings** and select **Profiles**.
- 2 Choose the profile you want, select **Options** and choose **Edit**.
- 3 You can change all of the tones, its volumes and alert options from here.

Changing your date & time

You can set functions relating to the date and time.

- 1 Press  and open **Settings**.
- 2 Select Date & Time and choose from the list below:

Time - You can enter the current time. You can set the time format to either 24 hours or 12 hours. You can select a city as time zone.

Date - You can enter the current date. You can set the date format (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY).

Auto update date/time - Select On, and the phone will automatically update the date and time.

Daylight saving - Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Changing the language

Go to **Settings**, select **Phone** and choose **Language** to change the language for any text in your phone. Any change will also alter the language input mode.

Network - Your KP275 connects automatically to your preferred network. To change these settings, use this menu.

Internet profiles - Set the profiles to connect to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Set the packet data connection.

Changing your security settings

Change your security settings to keep your KP275 and the important information it holds protected.

- 1 Press **OK** and open **Settings**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Handset lock - Choose a security code to lock your phone **When switching on, If SIM changed, Immediate, None**.

Change codes - Change your **PIN code, PIN2 code or Security code**.

Changing your display settings

- 1 Press **OK** and select **Settings**.
- 2 Select **Screen** and choose from:

Screen theme - Choose the theme for your standby screen or start-up, shut down the phone.

Menu style - Choose the style used to display menus.

Dialling - Set the display used when making a call.

Font - Adjust the font.

Backlight - Choose how long the backlight remains on for.

NOTE : The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Handset theme - Quickly change the whole look of your screen.

Greeting message - Enter the greeting message used when the phone is switched on.

01

02

03

04

05

06

07

08

Settings

Viewing memory status

Your KP275 has three memories available: the phone, the USIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Settings** and choose **Memory manager** and you will then see the current status of the memories (User memory, User reserved memory, SIM memory and External memory) in your KP275.

TIP! See page 18 for information on **Installing a memory card**.

Streaming settings - If you want to set different network setting to play streaming content, you can set different network settings.

Resetting your phone

Use **Reset settings** in **Settings** to reset all the settings to the factory definitions. You need the security code to activate this function.

Connectivity

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu.

Select **Connectivity**. Your options are:

Bluetooth - Set up your KP275 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Changing your Bluetooth settings

- 1 Select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Settings**. Make your changes to:
My device visibility - Choose to be Visible, Visible for 1 min or Hidden.
My device name - Enter a name for your KP275.

Pairing with another Bluetooth device

By pairing your KP275 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Turn on** and Select **Search new device**
- 3 Your KP275 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

01

02

03

04

05

06

07

08

Connectivity

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KP275 will then automatically connect to your Bluetooth headset and switch to headset profile.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on type. So for example, photographs will be saved in the **My images** folder and music in the **My sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Turn on**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KP275 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **Turn on** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

USB connection mode

You can select the USB connection mode on your phone for several uses.

Always ask mode

If you set the “Always ask mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable.

WARNING! First make sure you have a suitable tariff! Otherwise if you download large amounts of data – such as music or video – you may incur high charges.

- 1 Attach the USB cable to the device.
- 2 Select PC Internet from the popup menu in the device.
- 3 Wait until pop up open up on your PC and then select Start to install the Via the phone software, called Via the phone and its drivers on your PC, then follow the onscreen instructions.
- 4 You can now use your web browser and email programs as normal. When you've finished, click Disconnect

01

02

03

04

05

06

07

08

Connectivity

Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Select Connectivity, then USB connection mode.
- 2 Highlight Mass storage and press Select.
- 3 Connect your phone to your PC. Your phone will read:
"Connected" with Mass storage as title. Do not disconnect during transfer.
- 4 All of your phone files will automatically be stored onto your PC hard drive.

NOTE : After selecting mass storage your phone must be reconnected to your PC to initiate Mass Storage.

NOTE : Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

Using your phone as a modem

Your KP275 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires.

PC suite-Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 Go to www.lgmobile.com and choose Asia & Pacific first and then your country.
- 2 Choose Products menu, select Manual & Software and click Go to Manual & S/W download section. Click Yes and LG PC Suite installer will then appear. (Windows XP, Windows Media Player and more).
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Accessories

These accessories were supplied with your KP275.

Charger



User Guide

Learn more about your KP275.



Battery



Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KP275

System : GSM 900 / DCS 1800 / PCS 1900
/ W-CDMA

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900/ W-CDMA Terminal Equipment

Model Name

KP275

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1/ 489-24 V1.3.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

26. Sep. 2008



Signature of representative



Warranty Card
產品保用證

Mobile Phone
手提電話

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.


多謝閣下購買及使用本公司之產品。請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset :12 months
 - (ii) Charger :6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身, 12個月
 - (ii) 充電器, 6個月
 - (iii) 電池, 6個月
 - (iv) 免提耳機, 3個月
 - (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效。本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

