



العربية  
ENGLISH

دليل مستخدم  
KS360

العربية  
ENGLISH



CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

KS360

MMBB0316901 (1.0) G

LG ELECTRONICS INC.

KS360

MMBB0316901 (1.0) G

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

Bluetooth QD ID B014200



قد تختلف بعض المحتويات الموجودة في هذا الدليل عن هاتفك وذلك استناداً إلى برنامج الهاتف أو موفر الخدمة.

KS360 دليل مستخدم | العربية

تهانينا لشرائك هاتف KS360 المتقدم والصغير  
من LG، والمصمّم للعمل مع التكنولوجيا الرقمية  
الأحدث لاتصالات الهواتف المحمولة.

01 الإعداد

02 شاشة وضع الانتظار

03 الأساسيات

04 الإبداع

05 التنسيق

06 المتصفح

07 الإعدادات

08 الملحقات

# المحتويات

20	الاسماء
20	البحث عن جهة اتصال
20	إضافة جهة اتصال جديدة
20	خيارات الاسماء
21	إضافة جهة اتصال إلى مجموعة
21	إعادة تسمية مجموعة
21	إضافة صورة إلى جهة اتصال
22	نسخ الاسماء إلى بطاقة SIM
22	حذف كل الاسماء
22	عرض المعلومات
23	الرسائل
23	الرسائل
23	إرسال رسالة
24	إدخال النص
24	وضع إدخال النص باستخدام لوحة المفاتيح
24	إعداد البريد الإلكتروني
24	إرسال بريد إلكتروني باستخدام حسابك الجديد
25	حافظات الرسائل
25	إدارة الرسائل
26	استخدام النماذج
27	تغيير اعدادات الرسائل النصية
27	تغيير اعدادات رسائل الوسائط المتعددة
28	تغيير اعدادات البريد الإلكتروني
28	تغيير عناصر الاعدادات الأخرى

## 01 الإعداد

7	التعرف على هاتفك
8	نظرة على الهاتف وهو مفتوح
10	تركيب بطاقة SIM والبطارية
13	بطاقة الذاكرة
13	تركيب بطاقة ذاكرة
13	إخراج بطاقة ذاكرة
13	تنسيق بطاقة ذاكرة
14	خريطة القوائم

## 02 شاشة وضع الانتظار

15	شاشة وضع الانتظار
15	شريط الحالة

## 03 الأساسيات

16	المكالمات
16	إجراء مكالمة
16	إجراء مكالمة من قائمة الاسماء
16	الرد على مكالمة ورفضها
17	ضبط مستوى صوت المكالمة
17	الاتصال السريع
17	عرض سجلات المكالمات
18	استخدام تحويل المكالمات
18	استخدام حظر المكالمات
19	تغيير اعدادات المكالمات

## 04 الإبداع

- استخدام مسجل الصوت ..... 37
- تسجيل مذكرة صوتية ..... 37
- إرسال تسجيل صوتي ..... 37
- أشيائي** ..... 38
- صور ..... 38
- قائمة خيارات الصور ..... 38
- إرسال صورة ..... 39
- تنظيم الصور ..... 39
- حذف صورة ..... 39
- حذف صور متعددة ..... 39
- إنشاء عرض شرائح ..... 40
- أصوات ..... 40
- استخدام صوت ..... 40
- ملفات الفيديو ..... 40
- مشاهدة فيديو ..... 40
- استخدام الخيارات فيما الفيديو متوقف مؤقتاً ..... 41
- إرسال فيديو كليب ..... 41
- قائمة خيارات الفيديو ..... 41
- مستندات ..... 42
- عرض مستند ..... 42
- أخرى ..... 42
- الذاكرة الخارجية ..... 42
- الألعاب والتطبيقات** ..... 43
- الألعاب والتطبيقات ..... 43
- لعبة لعبة ..... 43
- عرض التطبيقات ..... 43
- تغيير نمط الشبكة ..... 43
- الوسائط المتعددة** ..... 29
- التقاط صورة سريعة ..... 29
- قبل التقاط الصورة ..... 29
- بعد التقاط الصورة ..... 30
- استخدام الضبط السريع ..... 30
- تغيير حجم الصورة ..... 31
- عرض الصور المحفوظة ..... 31
- تعيين صورة خلفية أو معرف صورة ..... 31
- التقاط فيديو سريع ..... 32
- بعد الانتهاء من التقاط الفيديو ..... 32
- التعرف على محدد المنظر ..... 33
- استخدام الضبط السريع ..... 33
- مشاهدة ملفات الفيديو المحفوظة ..... 33
- ضبط مستوى الصوت عند عرض فيديو ..... 33
- مشغل MP3 ..... 34
- نقل الموسيقى إلى الهاتف ..... 34
- تشغيل أغنية ..... 34
- استخدام خيارات أثناء تشغيل الموسيقى ..... 34
- إنشاء قائمة تشغيل ..... 35
- تشغيل قائمة تشغيل ..... 35
- تعديل قائمة تشغيل ..... 35
- حذف قائمة تشغيل ..... 36
- استخدام راديو FM ..... 36
- البحث عن محطات ..... 36
- إعادة تعيين القنوات ..... 37
- الاستماع إلى الراديو ..... 37

## 05 التنسيق

49	الاعدادات	44	المسئق والأدوات
49	تغيير الأوضاع	44	إضافة حدث إلى التقويم
49	تخصيص الأوضاع	44	تعديل حدث تقويم
49	تغيير التاريخ والوقت	45	مشاركة في حدث تقويم
49	تغيير اللغة	45	إضافة مذكرة
50	تغيير اعدادات الشاشة	45	تعيين المنبه
50	تغيير اعدادات الحماية	46	استخدام الحاسبة
51	استخدام وضع الرحلات الجوية	46	استخدام ساعة الإيقاف
51	استخدام توفير الطاقة	46	تحويل وحدة
51	إعادة تعيين الهاتف	46	إضافة مدينة إلى ساعتك العالمية
51	عرض حالة الذاكرة	46	خدمات SIM
51	تغيير اعدادات بلوتوث		
51	تغيير اعدادات التوصيل		

## 06 المتصفح

52	الاقتران بجهاز بلوتوث آخر	47	المتصفح
52	استخدام سماعة رأس بلوتوث	47	الوصول إلى ويب
53	استخدام الهاتف كوسيلة تخزين ذات سعة كبيرة	47	الاستمتاع ب Yahoo!
53	نقل ملف إلى الهاتف	47	إضافة إشارات مرجعية والوصول إليها
54	إرسال الملفات واستلامها باستخدام بلوتوث	48	الوصول إلى صفحة محفوظة
		48	عرض محفوظات المتصفح
		48	تغيير اعدادات مستعرض ويب

## 08 الملحقات

55	الملحقات
55	خدمة الشبكة
55	البيانات التقنية
55	عام
55	درجات الحرارة المحيطة
58	توجيهات لاستخدام آمن وفعال

# التعرّف على هاتفك

## مفتاح مستوى الصوت

- في وضع الانتظار: التحكم بحجم صوت الرنين.
- أثناء مكالمة: التحكم بحجم صوت المستلم.

01

02

03

04

05

06

07

08

الشاشة الرئيسية

مفتاح OK

مفتاح الاختيار الأيسر

الانتقال إلى القائمة الرئيسية مباشرة.

مفتاح الاتصال

طلب رقم هاتف والإجابة على مكالمات واردة.

مفتاح لوحة اللمس

تنشيط شاشة اللمس بالضغط على المفتاح.

مفاتيح التنقل

• في وضع الانتظار:

أعلى: قائمة الرسائل

أسفل: قائمة الاسماء

يمين: قائمة المفضلات

يسار: قائمة الاوضاع

• في القائمة: التنقل بين القوائم.

موصل الشحن، الكبل، سماعة الرأس

فتحة بطاقة الذاكرة

الكاميرا

مفتاح الاختيار الأيمن  
الانتقال إلى الاسماء مباشرة.

مفتاح الإنهاء/الطاقة  
إنهاء مكالمة أو رفضها. تشغيل/إيقاف تشغيل الهاتف.  
العودة إلى شاشة وضع الانتظار عندما تستخدم هذه القائمة.

مفتاح المسح  
حذف حرف واحد مع كل ضغطة. استخدم هذا المفتاح للرجوع إلى الشاشة السابقة.

# نظرة على الهاتف وهو مفتوح



01

02

03

04

05

06

07


08



# تركيب بطاقة SIM والبطارية


## 1 نزع غطاء البطارية.

اضغط على مزلاج تحرير غطاء البطارية. يجب أن يتم نزع غطاء البطارية بسهولة.

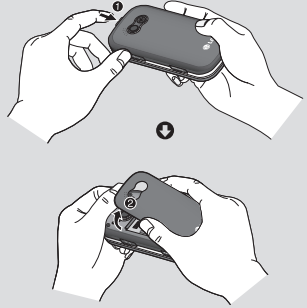

## 2 إخراج البطارية

ارفع الحافة السفلى للبطاقة وقم بإخراجها بتأن من حجرتها.

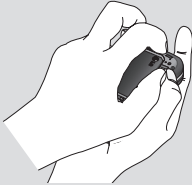

**⚠ تحذير:** لا تخرج البطارية عندما يكون الهاتف قيد التشغيل، إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.



## 3 تركيب بطاقة SIM

أدخل بطاقة SIM داخل الحامل المخصص لبطاقة SIM. تأكد من كون ناحية الموصلات الذهبية الموجودة على البطاقة موجهة نحو الأسفل. لإزالة بطاقة SIM، ادفعها خارج الحامل من الأعلى.

**⚠ تحذير:** لا تدخل بطاقة SIM عندما تكون لوحة المفاتيح مفتوحة، إذ قد يؤدي هذا الأمر إلى إلحاق الضرر بالهاتف وببطاقة SIM معاً.

#### 4 تركيب البطارية

أدخل أولاً الجهة العليا للبطارية في الحافة العليا  
لحجرة البطارية. تأكد من محاذاة ملامسات  
البطاريات مع الأطراف على الهاتف. اضغط  
جهة البطارية السفلى إلى الأسفل حتى تستقر  
في مكانها.

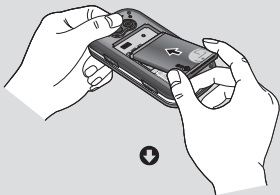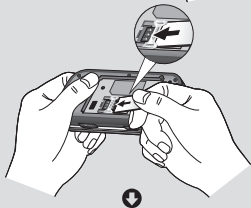

01

02

03

04

05

06



07

08

## تركيب بطاقة SIM والبطارية

### 5 إعادة غطاء البطارية إلى مكانه


أدخل الجهة السفلى لغطاء البطارية وأنزلها إلى الأسفل حتى تستقر في مكانها.

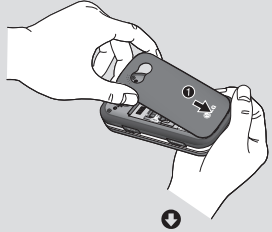

### 6 شحن الهاتف

اسحب لفتح غطاء مقبس الشاحن الموجود على جانب الهاتف KS360. أدخل الشاحن وقم بتوصيله بمقبس كهربائي رئيسي. يجب أن يتم شحن الهاتف KS360 حتى تظهر رسالة على الشاشة تفيد بشحن الهاتف بالكامل.

**⚠ تحذير:** لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم. يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.

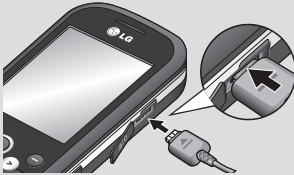

# بطاقة الذاكرة

## تركيب بطاقة ذاكرة

يمكنك زيادة مساحة الذاكرة المتوفرة على هاتفك باستخدام بطاقة ذاكرة.

**تلميح!** بطاقة الذاكرة هي عبارة عن ملحوق اختياري.

افتح فتحة بطاقة الذاكرة. حرّك بطاقة الذاكرة إلى داخل فتحة الغطاء، حتى تستقر في مكانها. تأكد من كون ناحية الموصلات الذهبية موجهة نحو الأسفل.



## إخراج بطاقة ذاكرة

افتح الغطاء وأخرج بطاقة الذاكرة بتأنّ بدفعها بلطف إلى الهاتف وتحريرها بسرعة كما هو مبين في الرسم التخطيطي أدناه:



## تنسيق بطاقة ذاكرة

إذا لم تكن بطاقة الذاكرة مهيأة، فعليك تهيئتها قبل أن تبدأ باستخدامها.

1 من شاشة وضع الانتظار اضغط على **OK** وحدد اعدادات. ثم اختر اعدادات الهاتف.

2 اختر حالة الذاكرة وحدد ذاكرة خارجية.

**تحذير:** عندما تقوم بتهيئة بطاقة الذاكرة، سيتم مسح كل محتواها. إذا لم تكن ترغب في فقدان البيانات الموجودة على بطاقة الذاكرة، فعليك إجراء نسخة احتياطية عنها أولاً.

# خريطة القوائم

## الوسائط المتعددة

- 1 مشغل MP3
- 2 الكاميرا
- 3 كاميرا الفيديو
- 4 راديو FM
- 5 مسجل الصوت



## الأسماء

- 1 بحث
- 2 جهة اتصال جديدة
- 3 اتصالات سريعة
- 4 المجموعات
- 5 نسخ الكل
- 6 حذف الكل
- 7 إعدادات
- 8 المعلومات



## سجل المكالمات

- 1 كل المكالمات
- 2 مكالمات لم يرد عليها
- 3 المكالمات الصادرة
- 4 مكالمات مستلمة
- 5 مدة المكالمات
- 6 تكاليف المكالمات
- 7 معلومات البيانات



## الالعاب وتطبيقات

- 1 الألعاب
- 2 التطبيقات
- 3 وضع الشبكة



## المنسق

- 1 التقويم
- 2 المذكرة



## الأوضاع

- 1 علم
- 2 صامت
- 3 اهتزاز فقط
- 4 خارجي
- 5 سماعة الرأس



## أشياءي

- 1 الصور
- 2 الأصوات
- 3 ملفات الفيديو
- 4 مستندات
- 5 أخرى
- 6 الذاكرة الخارجية



## الرسائل

- 1 رسالة جديدة
- 2 صندوق الوارد
- 3 صندوق البريد الإلكتروني
- 4 مسودات
- 5 صندوق الصادر
- 6 مرسلة
- 7 الاستماع الى البريد الصوتي
- 8 رسائل المعلومات
- 9 النماذج
- 0 إعدادات



## الإعدادات

- 1 التاريخ والوقت
- 2 اللغات
- 3 العرض
- 4 اختصار
- 5 الاتصال
- 6 الحماية
- 7 وضع الرحلات الجوية
- 8 توفير الطاقة
- 9 إعادة التعيين
- 0 حالة الذاكرة



## التوصيل

- 1 بلوتوث
- 2 الشبكة
- 3 اتصال USB



## المتصفح

- 1 الصفحة الرئيسية
- 2 Yahoo!
- 3 الإشارات المرجعية
- 4 إدخال عنوان
- 5 المحفوظات
- 6 الصفحات المحفوظة
- 7 الإعدادات
- 8 المعلومات



## أدوات

- 1 ساعة المنبه
- 2 الحاسبة
- 3 ساعة إيقاف
- 4 محول الوحدة
- 5 الساعة العالمية
- 6 خدمات SIM



# شاشة وضع الانتظار

## شريط الحالة

يستخدم شريط الحالة رموزاً مختلفة للإشارة إلى أمور مثل قوة الإشارة، والرسائل الجديدة وفترة عمل البطارية، وكذلك إعلامك ما إذا كان بلوتوث نشطاً. يفسر الجدول التالي معنى الرموز التي من المحتمل أن تشاهدها على شريط الحالة.

01

02

03

04

05

06

07

08

الوصف	الرمز
رسالة صوتية جديدة	
النمط عام قيد الاستخدام	
النمط صامت قيد الاستخدام	
النمط اهتزاز قيد الاستخدام	
الوضع خارجي قيد الاستخدام	
الوضع سماعة الرأس قيد الاستخدام	
فترة عمل البطارية المتبقية	
البطارية فارغة	

الوصف	الرمز
قوة إشارة الشبكة (يختلف عدد الأشرطة)	
لا إشارة للشبكة	
خدمة التجوال	
بلوتوث منشط	
خدمة WAP متصلة	
تم تعيين المنبه	
رسالة جديدة	

## إجراء مكالمة

- الرد على مكالمة ورفضها**
- 1 عندما يرنّ الهاتف، اضغط على **قبول** أو اضغط على **للرد على المكالمة**.
- أثناء رنين الهاتف، اضغط على مفتاح الاختيار الايمن (صامت) لكتم صوت الرنين. يُعتبر هذا الأمر جيداً إذا كنت قد نسيت تغيير نمط الهاتف إلى **صامت** أثناء حضور اجتماع ما.
- اضغط على **أو حدد رفض لرفض المكالمة الواردة**.

- 1 تأكد من أن هاتفك قيد التشغيل.
- 2 الطريقة الأسرع لإجراء اتصال هي بتنشيط وضع **اللمس بالضغط على** . إذا قمت بالضغط على هذا المفتاح، يمكنك لمس الشاشة لإدخال رقم الهاتف لإجراء مكالمة. أو يمكنك استخدام لوحة المفاتيح بعد فتح القطعة المنزلة. لحذف رقم اضغط على **أو على سهم الرجوع**.
- 3 اضغط على **لبداء المكالمة**.
- 4 لإنهاء مكالمة، اضغط على **أو بفتح لوحة المفاتيح المغلقة**.

**تلميح!** يمكنك تغيير الإعدادات على هاتفك لإجابة على المكالمات من خلال طرق مختلفة. اضغط على **ok** وحدد إعدادات واختر مكالمة. حدد وضع الرد واختر من ضمن **فتح القطعة المنزلة، أي مفتاح أو مفتاح القبول فقط**.

**تلميح!** لإدخال + عند إجراء مكالمة دولية، اضغط باستمرار **0**.

## إجراء مكالمة من قائمة الاسماء

- 1 حدد الاسماء في القائمة واختر بحث.
- 2 باستخدام لوحة المفاتيح، أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها وقم بالتمرير إليها.
- 3 اضغط على **لبداء المكالمة**.

## ضبط مستوى صوت المكالمة

لضبط مستوى صوت المكالمة خلال المكالمة، اضغط مفتاح مستوى الصوت الموجود في الجانب الأيسر من الهاتف.


## الاتصال السريع

يمكنك تعيين رقم اتصال سريع لجهة اتصال تتصل فيها بشكل متكرر.


1 اضغط على قائمة واختر جهات اتصال ثم حدد اتصالات سريعة.

2 يتم مسبقاً تعيين بريدك الصوتي إلى رقم الاتصال السريع 1 ولا يمكنك تغيير ذلك. حدد أي رقم آخر سواء باستخدام مفاتيح التنقل وتحديد تعيين أو بالضغط على مفتاح الرقم الفعلي.

3 افتح دفتر العناوين. حدد جهة الاتصال التي تريد تعيينها إلى ذلك الرقم باستخدام مفاتيح التنقل ثم حدد موافق.

لطلب رقم اتصال سريع، اضغط باستمرار على الرقم المعين حتى ظهور اسم جهة الاتصال على الشاشة. تبدأ المكالمة تلقائياً؛ لا حاجة إلى الضغط على .

## عرض سجلات المكالمات

اضغط على قائمة أو  ، حدد سجل المكالمات. اختر عرض ما يلي:

كل المكالمات - عرض قائمة كاملة تتضمن كل الأرقام التي طلبتها، واستلمتها ولم ترد عليها.

مكالمات لم يرد عليها - عرض قائمة بأي مكالمات لم ترد عليها.

مكالمات صادرة - عرض قائمة بكل الأرقام التي طلبتها.

مكالمات مستلمة - عرض قائمة بكل الأرقام التي اتصلت بك.

مدة المكالمة - عرض تفاصيل تتعلق بمدة مكالماتك؛ تلك التي تلقيتها وتلك التي طلبتها.

تكاليف المكالمات - عرض التكاليف التي تم تطبيقها على مكالماتك الأخيرة أو كل المكالمات. هذه الخدمة تعتمد على الشبكة، وبعض مشغلي الشبكات ليس باستطاعتهم دعم هذه الخدمة.

معلومات البيانات - عرض كمية كل البيانات التي استلمتها وأرسلتها بالكيلو بايت.

**تلميح!** من أي سجل مكالمات حدد خيارات واختر حذف لحذف العناصر المحددة.

**تلميح!** باستخدام مفاتيح التنقل، قم بتمييز أي إدخال مكالمة فردي لعرض تاريخ ووقت المكالمة. لعرض مدة المكالمة حدد عرض.

01

02

03

04

05

06

07

08

## استخدام تحويل المكالمات

- 1 اضغط على قائمة أو (OK) وحدد اعدادات واختر مكالمة.
  - 2 حدد تحويل المكالمات.
  - 3 اختر ما إذا كنت تريد أن يتم تحويل كل المكالمات، عندما يكون الخط مشغولاً، أو عند عدم الرد أو عندما لا يكون الوصول إليك ممكناً أو كل مكالمات البيانات أو كل مكالمات الفاكس.
  - 4 اختر **تشبيط** وحدد ما إذا كنت تريد أن يتم التحويل إلى بريدك الصوتي، أو رقم آخر أو رقمك المفضل.
  - 5 أدخل رقم التحويل أو حدد بحث لاستعراض الأسماء لرقم التحويل.
- ملاحظة:** يتم فرض رسوم على تحويل المكالمات. يرجى الاتصال بموفر الشبكة للحصول على تفاصيل.

## استخدام حظر المكالمات

- 1 اضغط على قائمة أو (OK) وحدد اعدادات واختر مكالمة.
- 2 حدد حظر المكالمات.
- 3 حدد خياراً من ضمن الخيارات السبعة أو كلها:  
كل الصادر  
المكالمات الدولية الصادرة  
المكالمات الدولية الصادرة باستثناء المحلية  
كل الوارد  
الواردة عند السفر  
إلغاء كافة الحظورات  
تغيير كلمة المرور
- 4 حدد **تشبيط** وأدخل كلمة مرور حظر المكالمات. تحقق من توفر الخدمة مع مشغل الشبكة.

**تلميح!** حدد رقم اتصال محدد من القائمة اتصال لتشغيل وتجميع قائمة بالأرقام التي يمكن طلبها من هاتفك. ستحتاج إلى الحصول على رمز PIN2 من مشغل الشبكة. عند التشغيل، وحدها الأرقام المضمنة في قائمة الاتصال المحدد هي الأرقام التي يمكن طلبها من هاتفك.

**تلميح!** لإيقاف تشغيل عمليات تحويل كل المكالمات، اختر إلغاء الكل من قائمة تحويل المكالمات.

## تغيير اعدادات المكالمات

1 اضغط على قائمة أو (OK) وحدد اعدادات واختر  
مكالمة.

2 من هنا يمكنك تعديل اعدادات:

تحويل المكالمات - اختر ما إذا كنت تريد تحويل  
كل مكالماتك.

حظر المكالمات - حدد أي مكالمات ترغب في  
حظرها.

رقم اتصال محدد - اختر قائمة بالأرقام التي يمكن  
طلبها من هاتفك.

وضع الرد - اختر ما إذا كنت تريد الرد على  
الهاتف باستخدام مفتاح القبول، أو أي مفتاح أو  
بفتح القطعة المنزلة للهاتف.

إرسال رقمي - اختر ما إذا كنت ترغب في أن  
يظهر رقمك عند اتصالك بأحدهم.

انتظار المكالمات - لكي يتم تنبيهك عند وجود  
مكالمة قيد الانتظار.

منبه الدقائق - حدد تشغيل لكي تسمع نغمة كل  
دقيقة خلال المكالمة.

معاودة الاتصال التلقائي - اختر أن يحاول  
الهاتف معاودة الاتصال تلقائيًا في حال فشل  
إجراء المكالمة.

إرسال نغمات DTMF - يمكنك إرسال نغمات

DTMF (dual tone multi-frequency)  
للرقم المعروض على الشاشة أثناء المكالمة. هذا  
الخيار مفيد لإدخال كلمة مرور أو رقم حساب  
عندما تقوم بالاتصال بنظام مؤتمت، على سبيل  
المثال، خدمة مصرفية.

01

02

03

04

05

06

07

08

## البحث عن جهة اتصال

- 1 حدد جهات اتصال من القائمة الرئيسية واختر بحث.
- 2 باستخدام لوحة المفاتيح أو لوحة اللمس، أدخل الحرف الأول من اسم جهة الاتصال التي تريد الاتصال بها.
- 3 للتمرير عبر الاسماء وأرقامها المختلفة، استخدم مفاتيح التنقل.

## إضافة جهة اتصال جديدة

- 1 حدد جهات اتصال واختر جهة اتصال جديدة.
  - 2 اختر ما إذا كنت تريد تخزين جهة الاتصال الجديدة على هاتفك أو على بطاقة SIM.
  - 3 أدخل كل المعلومات الموجودة في الحقول المتوفرة وحدد حفظ.
- أو، استخدم طريقة أسرع بعض الشيء...
- 1 أدخل الرقم الذي ترغب بحفظه واضغط على خيارات.
  - 2 اختر حفظ أو إضافة إلى جهة الاتصال الموجودة.
  - 3 أدخل المعلومات المناسبة كما جاء أعلاه وحدد حفظ.

## خيارات الاسماء

هناك العديد من الأمور التي يمكنك القيام بها عند عرض جهة اتصال. إليك الطريقة التي تتيح لك الوصول إلى قائمة خيارات واستخدامها:

- 1 افتح جهة الاتصال التي تريد استخدامها. انظر البحث عن جهة اتصال أعلاه.
- 2 حدد خيارات لفتح قائمة الخيارات من هنا يمكنك:

تعديل - تغيير أي من تفاصيل جهة الاتصال.

رسالة جديدة - إرسال رسالة إلى جهة الاتصال. إذا كان لدى جهة الاتصال عنوان بريد إلكتروني، فحدد ما إذا كنت ترغب في إرسال رسالة، أو بريد إلكتروني.

إرسال عبر - إرسال تفاصيل تتعلق بجهة الاتصال إلى شخص آخر كبطاقة عمل. اختر الإرسال كرسالة نصية، أو رسالة وسانط متعددة، أو عبر بلوتوث أو بواسطة البريد الإلكتروني.

حذف - حذف جهة اتصال. حدد نعم إذا كنت متأكدًا.

جهة اتصال جديدة - إضافة جهة اتصال جديدة حذف متعدد - ضع علامات على عدة جهات اتصال لحذفها.

نسخ إلى SIM/الهاتف - اختر النقل أو النسخ إلى بطاقة SIM أو الهاتف (وفقاً للموقع حيث قمت أصلاً بحفظ جهة الاتصال).

## إضافة جهة اتصال إلى مجموعة

يمكنك حفظ الاسماء ضمن مجموعات، بوضع زملائك في العمل وأفراد عائلتك ضمن مجموعات مختلفة مثلاً. هناك عدد من المجموعات التي تكون معدة مسبقاً على الهاتف وهي تشمل العائلة، والأصدقاء، والزملاء، و VIP، والمجموعة 1 والمجموعة 2 أو بلا مجموعة.

1 حدد جهات اتصال واختر مجموعات.

2 قم بالتمرير إلى المجموعة التي تريد إضافة جهة اتصال إليها وحدد عرض ثم حدد إضافة.

3 تفتح الاسماء. قم بالتمرير إلى أي جهة اتصال تريد إضافتها إلى المجموعة واضغط على ، ثم حدد تم.

4 حدد نعم إذا كنت متأكدًا.

**تلميح!** يمكنك تعيين نغمة رنين أو رمز أو مجموعة. حدد المجموعة التي تريد تعيين نغمة رنين أو رمز لها وحدد خيارات واختر العنصر المطلوب.

## إعادة تسمية مجموعة

يمكنك إعادة تسمية أي مجموعة بشكل يتلاءم مع نمط عيشك.

1 حدد جهات اتصال واختر مجموعات.

2 حدد المجموعة التي تريد إعادة تسميتها.

3 حدد خيارات، وحدد إعادة تسمية وأدخل الاسم الجديد للمجموعة.

4 حدد حفظ.

**ملاحظة:** يمكنك فقط تعيين جهة اتصال إلى مجموعة أو إضافة صورة إلى جهة اتصال تم حفظها في ذاكرة الهاتف (وليس على بطاقة SIM).

## إضافة صورة إلى جهة اتصال

يمكنك تغيير مظهر الاسماء في دفتر عناوينك لتضمن صورة لها.

1 حدد الاسماء واختر اعدادات.

2 حدد خيارات العرض واختر مع الصورة.

3 ثم عد إلى دفتر العناوين وحدد جهة الاتصال التي تريد إضافة صورة إليها.

4 حدد خيارات وحدد تعديل.

5 قم بالتمرير إلى الأسفل إلى مقطع الصورة. حدد

خيارات وحدد صور أو صورة جديدة. إذا حددت

صور، فيمكنك أن تختار صورة محفوظة في ذاكرة

الهاتف. إذا حددت صورة جديدة، فسيفتح محدد

المنظر التابع للكاميرا، بحيث يمكنك التقاط صورة

لجهة الاتصال. التقط الصورة ثم اضغط على تعيين.

6 حدد حفظ.

01

02

03

04

05

06

07

08

## عرض المعلومات

حدد جهات اتصال واختر معلومات. من هنا يمكنك عرض أرقام الاتصال بالخدمة، ورقمك الخاص وبطاقة العمل الخاصة بك.

**تلميح!** إذا لم تكن قد قمت بعد بإنشاء بطاقة عمل، فستوفر لك شاشة بطاقة العمل الفرصة التي تتيح لك إنشاءها. حدد جديد وأدخل التفاصيل كما تقوم عادة بالنسبة لأي جهة اتصال. اختر حفظ.

## نسخ الاسماء إلى بطاقة SIM

- 1 بإمكانك أيضاً أن تختار نسخ الاسماء من بطاقة SIM إلى الهاتف أو من الهاتف إلى بطاقة SIM.
- 1 حدد جهات اتصال واختر نسخ الكل.
- 2 حدد نسخ الاسماء من SIM إلى الهاتف أو من الهاتف إلى SIM.
- 3 اختر ما إذا كنت تريد الاحتفاظ بالأصل أو حذف الأصل.
- 4 حدد نعم إذا كنت متأكداً.

## حذف كل الاسماء


- 1 حدد جهات اتصال واختر حذف الكل.
- 2 حدد لحذف الاسماء من SIM أو الهاتف.
- 3 حدد نعم إذا كنت متأكداً.
- 4 أدخل كلمة المرور، التي تم تعيينها إلى 0000 كضبط افتراضي وحدد موافق.

## الرسائل

### الرسائل

يتضمن الهاتف KS360 وظائف متعلقة بخدمة الرسائل القصيرة SMS، وخدمة رسائل الوسائط المتعددة MMS، والبريد الإلكتروني، وكذلك رسائل خدمة الشبكة. ما عليك إلا الضغط على  وتحديد الرسائل.

### إرسال رسالة

1 اضغط على قائمة أو ، حدد رسائل واختر رسالة جديدة. أو بطريقة أسرع من خلال الضغط على  على لوحة المفاتيح عندما تكون القطعة المنزلة مفتوحة.

2 اختر رسالة لإرسال رسالة SMS أو MMS.

3 يفتح محرر رسائل جديدة. يجمع محرر الرسائل ما بين SMS وMMS ضمن واجهة بديهية واحدة سهلة الاستخدام للتبديل بين الأوضاع. الضبط الافتراضي لمحرر الرسائل هو وضع SMS.


4 أدخل رسالتك باستخدام لوحة المفاتيح. انظر الصفحة 24 للمزيد من المعلومات حول كيفية إدخال نص.

5 المس خيارات واختر إدخال لإضافة صورة، أو صوت، أو فيديو، أو رمز، أو نموذج نص، أو رمز تعبير، أو اسم ورقم، أو شريحة جديدة، أو موضوع أو المزيد (جهة اتصال/بطاقة العمل الخاصة بي/الجدول).

6 اختر إرسال إلى.

7 أدخل رقم الهاتف أو اضغط على خيارات وحدد جهات اتصال أو القائمة الحديثة لفتح قائمة الاسماء. يمكنك إضافة عدة جهات اتصال.

8 حدد إرسال.

 تحذير: إذا تمت إضافة صورة، أو صوت، أو فيديو، أو شريحة جديدة أو موضوع إلى محرر الرسائل، فسيتم تلقياً تحويل العنصر المضافة إلى وضع MMS وسيُفرض رسم عليك مقابل ذلك.

01

02

03

04

05

06


07


08


## إدخال النص

يمكنك إدخال الأحرف الأبجدية والرقمية باستخدام لوحة المفاتيح على الهاتف. فتخزين الأسماء في الأسماء، وكتابة رسالة، وإنشاء أحداث مجدولة في التقويم كلها عمليات تتطلب إدخال النص. وتتوفر أساليب إدخال النص التالية في الهاتف: وضع ABC اليدوي، ووضع 123.

**ملاحظة:** قد تسمح بعض الحقول بوضع إدخال نص واحد فقط (مثل رقم الهاتف في حقول دفتر العناوين).


لإدخال رمز في حقل إدخال النص، اضغط على المفتاح  وحدد رمزاً، ثم حدد موافق. قم بالتمرير باستخدام مفاتيح التنقل لعرض خيارات رموز أكثر.

أكمل كل كلمة بمسافة وذلك بضغطة .

لحذف حرف، اضغط على المفتاح .

## وضع إدخال النص باستخدام لوحة المفاتيح

عندما يُطلب منك إدخال نص، على سبيل المثال، أثناء كتابتك رسالة، ستنقل لوحة المفاتيح افتراضياً إلى وضع ABC. في حالة كنت تدخل رقماً، على سبيل المثال لدى إجراء مكالمة، ستنقل مفاتيح رقم لوحة المفاتيح إلى الأرقام.

يمكنك إدخال أرقام في وضع ABC بالضغطة أولاً على  ومن ثم الرقم الذي تطلبه.

## إعداد البريد الإلكتروني

يمكنك أن تبقى على تواصل أثناء التنقل من خلال استخدام البريد الإلكتروني على الهاتف KS360. فعملية إعداد حساب بريد إلكتروني POP3 أو IMA4 تُعتبر عملية بسيطة وسهلة.

1 اضغط على قائمة أو ، حدد رسائل واختر اعدادات.

2 حدد بريد إلكتروني ثم حساب بريد إلكتروني.

3 حدد جديد.

4 يمكنك الاختيار من Yahoo وGmail وMSN وغيرها.

## إرسال بريد إلكتروني باستخدام حسابك الجديد

لإرسال/استلام رسالة بريد إلكتروني، عليك إعداد حساب بريد إلكتروني (انظر الصفحة أعلاه).

1 اضغط على  قائمة وحدد رسائل واختر رسالة جديدة.

2 اختر بريد إلكتروني فيفتح بريد إلكتروني جديد.

3 اكتب موضوعاً ثم اضغط موافق.

4 أدخل رسالتك باستخدام لوحة المفاتيح.

5 حدد خيارات واختر مرفقاً لإضافة: صورة، وصوت، وفيديو، ومستند، وجهة اتصال، و بطاقة العمل الخاصة بي أو جدول.

6 اضغط إرسال وأدخل عنوان المستلم أو اضغط خيارات وحدد جهات اتصال لفتح قائمة الاسماء.

7 اضغط إرسال فيتم إرسال بريدك الإلكتروني.

### حافظات الرسائل

اضغط على قائمة أو  حدد رسائل. إن حافظه الرسائل المستخدمة في الهاتف KS360 تفسر نفسها بنفسها بطريقة معقولة.

**صندوق الوارد** - توضع في صندوق الوارد كل الرسائل التي تتلقاها. من هنا يمكنك الرد، وإعادة التوجيه والكثير غير ذلك، انظر أدناه للحصول على التفاصيل.

**صندوق البريد الإلكتروني** - يحتوي على كل رسائل البريد الإلكتروني. حدد الحساب الذي تريد استخدامه ثم حدد استرداد. فيتصل الهاتف KS360 بحساب البريد الإلكتروني ويسترد رسائلك الجديدة.

**مسودات** - إذا لم يكن لديك الوقت الكافي لانتهاء من كتابة رسالة، فيمكنك أن تحفظ هنا ما كتبته حتى الآن.

**صندوق الصادر** - عبارة عن حافظه تخزين مؤقت للرسائل فيما يكون إرسالها جارياً.

**مرسلة** - توضع كل الرسائل التي أرسلتها في حافظه المرسلة.

**الاستماع إلى البريد الصوتي** - يمكنك الوصول إلى صندوق البريد الصوتي (إذا وفرته لك الشبكة). لدى تلقيك رسالة صوتية جديدة، يظهر الرمز على شاشة وضع الانتظار.

**رسائل معلومات** - كل رسائل المعلومات والتحديثات التي تتلقاها من مشغل الشبكة.

**نماذج** - لائحة برسائل مفيدة مكتوبة مسبقاً لإجراء رد سريع.

### إدارة الرسائل

يمكنك استخدام **صندوق الوارد** لإدارة رسائلك.

1 اضغط على قائمة أو ، حدد رسائل واختر **صندوق الوارد**.

2 حدد خيارات ثم اختر القيام بما يلي:

**حذف** - حذف الرسالة المحددة.

**رد** - إرسال رد على الرسالة المحددة.

**إعادة توجيه** - إرسال الرسالة المحددة إلى شخص آخر.

**إعادة الاتصال** - الاتصال بالشخص الذي أرسل لك رسالة.

**طريقة عرض مترابطة/عرض عام** - اختر الطريقة التي تُعرض فيها الرسائل في صندوق الوارد الخاص بك.

**معلومات** - عرض تفاصيل تتعلق بالرسالة، وقت إرسالها مثلاً.

01

02

03

04

05

06

07

08

**نسخ/نقل** - اختر نسخ أو نقل الرسالة المحددة إلى بطاقة SIM أو الهاتف.

**حذف متعدد** - حذف الرسائل المحددة.

**حذف كل الرسائل المقروءة** - سيتم حذف كل الرسائل المفتوحة.

**حذف الكل** - حذف الرسائل النصية أو رسائل الوسائط المتعددة أو كل الرسائل.

إذا شاهدت الرسالة **لا توجد مساحة لرسالة SIM** فهذا يعني أنه عليك حذف بعض الرسائل من صندوق الوارد.

إذا شاهدت الرسالة **لا توجد مساحة كافية للرسائل** فيمكنك حذف إما الرسائل أو الملفات المحفوظة لتوفير مساحة.

## استخدام النماذج

يمكنك إنشاء نماذج للرسائل النصية ورسائل

الوسائط المتعددة التي ترسلها بشكل متكرر. هناك بعض النماذج الموجودة مسبقاً على هاتفك، والتي يمكنك تعديلها إذا ما رغبت في ذلك.

1 اضغط على قائمة أو (OK)، حدد رسائل واختر نماذج.

2 اختر نص أو وسائط متعددة. يمكنك من ثم تحديد خيارات واختيار تعديل لتغيير نماذج موجودة لإضافة نموذج جديد أو حذف نماذج.

3 لإرسال نموذج، حدد النموذج الذي تريد إرساله، وحدد خيارات ثم حدد إرسال عبر.

4 اختر الطريقة التي تريد استخدامها لإرسال النموذج مثل رسالة، أو رسالة بلوتوث أو بريد إلكتروني.

5 اختر جهة اتصال وحدد إرسال.

## تغيير اعدادات الرسائل النصية

تكون اعدادات الرسائل في الهاتف KS360 معرفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور.

إذا رغبت في تغيير الاعدادات، فيمكنك القيام بذلك باستخدام خيارات الاعدادات.

اضغط على قائمة أو (OK) ، حدد رسائل، ثم اختر اعدادات ورسالة نصية. يمكنك إدخال تغييرات على:

نوع الرسالة - تحويل النص إلى صوت، أو فاكس، أو تصفح، أو X.400، أو بريد إلكتروني، أو ERMES.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

تقرير الاستلام - اختر تلقي تأكيد باستلام رسالتك.

تكلفة الرد - اختر تحمل تكلفة رد مستلم رسالتك.

رقم مركز الرسائل - أدخل تفاصيل مركز الرسائل.

ترميز الحروف - اختر طريقة ترميز الحروف. ويؤثر هذا الأمر على حجم رسالتك وبالتالي على تكاليف البيانات.

إرسال النص الطويل ك- اختر ما إذا كنت ترغب في إرسال رسالتك ك SMS أو MMS عندما تقوم بإدخال نص يتجاوز طوله طول صفحتين في حقل الرسالة.

ضبط الحامل - اختر ما إذا كنت تريد إرسال رسالتك عبر GSM أو GPRS.

## تغيير اعدادات رسائل الوسائط المتعددة

تكون اعدادات الرسائل في الهاتف KS360 معرفة مسبقاً بحيث يمكنك إرسال الرسائل على الفور.

إذا رغبت في تغيير الاعدادات، فيمكنك القيام بذلك باستخدام خيارات الاعدادات.

اضغط على قائمة أو (OK) ، حدد رسائل، ثم اختر اعدادات ورسالة وسائط متعددة.

يمكنك إدخال تغييرات على:

مدة الشريحة - اختر مدة ظهور الشرائح على الشاشة.

الأولية - اختر مستوى أولوية رسالة الوسائط المتعددة.

مدة الصلاحية - اختر فترة تخزين رسالتك في مركز الرسائل.

تقرير الاستلام - اختر للسماح و/أو طلب تقرير استلام.

تقرير القراءة - اختر السماح بتقرير القراءة و/أو إرساله.

تنزيل تلقائي - اختر تنزيل رسائل الوسائط المتعددة تلقائياً أو يدوياً وهذا يتوقف على ما إذا كنت موجوداً في المنزل أو متجولاً.

نمط الشبكة - حدد نمطاً للشبكة خاصاً بمشغل الشبكة لإرسال رسائل الوسائط المتعددة.

إرسال النص الطويل ك- حدد نوع رسائل الوسائط المتعددة للسماح به.

01

02

03

04

05

06

07

08

## تغيير اعدادات البريد الإلكتروني

يمكنك تغيير اعدادات البريد الإلكتروني وفق تفضيلاتك الخاصة.

1 اضغط على قائمة أو (OK) ، حدد رسائل واختر اعدادات.

2 حدد بريد إلكتروني ويمكنك من تمّ تغيير الاعدادات التالية:

حساب البريد الإلكتروني - يمكنك إعداد حساب بريد إلكتروني.

نقطة الوصول - يمكنك إعداد نقطة الوصول إلى البريد الإلكتروني.

الفاصل الزمني للاسترداد - اختر مدى تكرار قيام الهاتف KS360 بالتحقق من وجود رسائل بريد إلكتروني جديدة.

التوقيع - أنشئ توقيعاً على البريد الإلكتروني وشغل هذه الميزة.

## تغيير عناصر الاعدادات الأخرى

اضغط على قائمة أو (OK) ، حدد رسائل، واختر اعدادات ثم:



رقم البريد الصوتي - يتم تخزين رقم بريدك الصوتي هنا. اتصل بمشغل الشبكة للحصول على مزيد من المعلومات حول الخدمة التي يقدمها.

رسالة الخدمة - قم بتغيير اعدادات رسالة الخدمة.







رسالة معلومات - اختر حالة الوصول، والتنبيهات ولغة رسائل المعلومات.

حفظ الرسالة النصية - اختر ما إذا كنت تريد حفظ الرسائل النصية إلى ذاكرة الهاتف أو إلى الذاكرة الخارجية.

## التقاط صورة سريعة

- 1 اضغط مفتاح الكاميرا الموجود في الجانب الأيسر من الهاتف. سيظهر محدد منظر الكاميرا على الشاشة.
  - 2 مع الإمساك بالهاتف أفقياً، صوّب العدسة باتجاه موضوع الصورة.
  - 3 ضع الهاتف بطريقة يمكنك فيها مشاهدة موضوع الصورة.
  - 4 اضغط على  أو اضغط على مفتاح الكاميرا نحو الأسفل لالتقاط صورة.
- ملاحظة:** يمكنك أيضاً الوصول إلى قائمة الكاميرا من شاشة وضع الانتظار. اضغط على  وحدد الوسائط. حدد كاميرا لفتح محدد المنظر.


## قبل التقاط الصورة


- 01 اضغط على  للوصول إلى هذه الخيارات:
- 02  **المؤقت الذاتي** - يسمح لك بالمؤقت الذاتي بتعيين فترة تأخير بعد ضغط زر الالتقاط. اختر من ضمن 3 ثوانٍ، أو 5 ثوانٍ أو 10 ثوانٍ. يُعتبر هذا الأمر جيداً لصورة المجموعة التي تريد أن تكون جزءاً منها.
- 03 لقطات متعددة  - يمكنك هذا الخيار من أخذ تسع لقطات متتالية وبشكل سريع وتلقائي، ويُعتبر هذا الأمر جيداً لالتقاط صور لكانتات متحركة أو في الأحداث الرياضية.
- 04 توازن اللون الأبيض  - يضمن توازن الأبيض ظهور أي لون أبيض في الصورة كواقعي. لكي تتمكن الكاميرا من ضبط توازن اللون الأبيض بشكل صحيح قد تحتاج إلى تحديد شروط الإضاءة. اختر من ضمن تلقائي، أو ضوء النهار، أو متوهج، أو غائم، أو فلورسنت أو وضع الليل.
- 05 تأثير الألوان  - يمكنك الاختيار من ضمن أربعة خيارات للألوان: إيقاف (عادي/ألوان)، أو بني داكن، أو أحادي (أسود وأبيض) أو سالب.
- 08 EV  - قم بتفعيل وضع الماكرو إذا كنت تلتقط صورة قريبة جداً من الشيء الذي تود تصويره.


## بعد التقاط الصورة


تظهر الصورة الملتقطة على الشاشة. ويظهر اسم الصورة عبر أسفل الشاشة، وستشاهد ستة خيارات تكون معروضة في الجانب الأيسر من الشاشة.

**موافق** - حدد لالتقاط صورة أخرى على الفور. وسيتم حفظ صورتك الحالية.

 **صورة جديدة** - التقاط صورة أخرى على الفور. وسيتم حفظ صورتك الحالية.

 **تعيين ك** - حدد لفتح قائمة فرعية لتعيين صورتك كخلفية أو معرف صورة.

 **أرسل عبر** - حدد لإرسال الصورة كرسالة وسائط متعددة أو بريد إلكتروني أو البلوتوث. انظر الصفحة 23 لإرسال رسالة.

 **الأيوم** - حدد للنظر إلى الصور الأخرى في الألبوم. وسيتم حفظ صورتك الحالية. انظر الصفحة 31 لعرض الصور المحفوظة.

**حذف** - احذف الصورة التي التقطتها للتو وأكد رغبتك في الحذف بتحديد نعم. يظهر محدد المنظر من جديد.

## استخدام الضبط السريع

حدد خيارات للوصول إلى خيارات الإعدادات السريعة. وتشمل هذه الإعدادات خيارات مختلفة لالتقاط الصور.

**كاميرا الفيديو** - قم بتحويل من وضع الكاميرا إلى وضع كاميرا الفيديو.

**عرض** - اختر الوضع القياسي أو الوضع النقي.

**الدقة** - انظر تغيير حجم الصورة على الصفحة 31.

**الجودة** - اختر بين عادي، ودقيق ودقيق جداً. بقدر ما تكون الجودة دقيقة بقدر ما تكون الصورة واضحة المعالم. حجم الملف سيكون أكبر نتيجة لذلك، مما يعني أنه سيكون باستطاعتك تخزين عدد أقل من الصور في الذاكرة.

**نغمة الالتقاط** - حدد صوتاً من ضمن أصوات الالتقاط الثلاثة.

**حفظ في** - اختر ما إذا كنت تريد حفظ الصور في ذاكرة الهاتف أو في الذاكرة الخارجية.

**إعادة تعيين الإعدادات** - اختر نعم لإعادة تشغيل الهاتف وفق الإعدادات الأصلية للكاميرا.

## تغيير حجم الصورة

يمكنك تغيير حجم الصورة لتوفير مساحة على الذاكرة. بقدر ما يكون عدد عناصر البكسل كبيراً، بقدر ما يكون حجم الملف أكبر، وهذا يعني أن الملف سيحتل مساحة أكبر في الذاكرة. إذا أردت أن يستوعب هاتفك المزيد من الصور، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً.

- 1 اضغط **خيارات** وحدد **الدقة** من شريط الأدوات.
- 2 حدد قيمة بكسل من الخيارات الرقمية الأربعة (320x240، و640x480، و1280x960، و1600x1200).
- 3 اضغط **موافق** لتطبيق التغييرات التي قمت بها.

## عرض الصور المحفوظة

- 1 يمكنك الوصول إلى الصور المحفوظة من ضمن وضع الكاميرا ومن شاشة وضع الانتظار. من محدد المنظر، ما عليك إلا الضغط على **ألبوم**. من شاشة وضع الانتظار عليك الضغط على **قائمة** أو **OK** ، ثم تحديد **أشياءي والصور**.
- 2 يظهر المعرض على الشاشة.
- 3 استخدم مفاتيح التنقل لتحديد الصورة التي تريد عرضها وحدد **عرض** لتكبيرها.

## تعيين صورة خلفية أو معرف صورة

من معرض الصور، استخدم مفتاح التنقل لتحديد صورة واختر **خيارات** و**تعيين ك** لاستخدام الصورة المحددة ك **خلفية** أو **معرف صورة** لإحدى الاسماء. عندما تقوم بتعيين الصورة كـ **معرف صورة**، يمكنك اختيار أي جزء من الصورة لتستخدمه.

**ملاحظة:** يمكن إضافة معرف الصورة إلى الاسماء المحفوظة في هاتفك فقط، وليس في بطاقة SIM.

01

02

03

04

05

06

07

08

## التقاط فيديو سريع

1 اضغط بسرعة مفتاح الكاميرا الموجود في الجانب الأيسر من الهاتف.

2 اختر كاميرا الفيديو.

3 أشر عدسة الكاميرا نحو موضوع الفيديو.

4 اضغط مفتاح الكاميرا الموجود في الجانب الأيسر من الهاتف لبدء التسجيل.

5 يظهر **REC** في الزاوية اليمنى السفلى من محدد المنظر وسيعرض المؤقت طول الفيديو.

6 لإيقاف الفيديو مؤقتاً حدد إيقاف مؤقت ولاستئناف التسجيل حدد استئناف.

7 حدد إيقاف لإيقاف التسجيل.

**ملاحظة:** يمكنك أيضاً الوصول إلى كاميرا الفيديو من شاشة وضع الانتظار اضغط على **OK** وحدد الوسائط وقم بالتمرير إلى الأسفل وحدد كاميرا فيديو لفتح محدد المنظر.

## بعد الانتهاء من التقاط الفيديو

يظهر اسم الفيديو عبر أسفل الشاشة، وستشاهد ستة خيارات تكون معروضة في الجانب الأيسر من الشاشة.

**موافق** - حدد لتسجيل فيديو آخر على الفور. وسيتم حفظ الفيديو الحالي.

**إيقاف** - حدد لالتقاط فيديو آخر على الفور. وسيتم حفظ الفيديو الحالي.

**تشغيل** - حدد لتشغيل الفيديو الذي التقطته للتو.

**إرسال** - أرسل عبر - حدد لإرسال الفيديو كرسالة وسائط متعددة أو بريد إلكتروني. انظر الصفحة 23 لإرسال رسالة.

**ألبوم** - حدد للنظر إلى كليات الفيديو الأخرى في الألبوم. وسيتم حفظ ملف الفيديو الحالي. انظر الصفحة 33 لمشاهدة ملفات الفيديو المحفوظة.

**حذف** - احذف الفيديو الذي سجلته للتو وأكد رغبتك في الحذف بتحديد نعم. يظهر محدد المنظر من جديد.

## التعرّف على محدد المنظر

**ملاحظة:** يمكنك ضبط التكبير/التصغير باستخدام مفاتيح مستوى الصوت في الجانب الأيسر من الهاتف.

## استخدام الضبط السريع

حدد خيارات للوصول إلى خيارات الإعدادات السريعة. وستشمل مختلف الخيارات المتعلقة بتسجيل الفيديو.

**كاميرا الفيديو** - قم بتحويل من وضع كاميرا الفيديو إلى وضع الكاميرا.

**عرض** - اختر الوضع القياسي أو الوضع النقي.

**الدقة** - إذا أردت أن يستوعب هاتفك المزيد من ملفات الفيديو، فيمكنك تعديل عدد عناصر البكسل لجعل الملف أصغر حجماً. اختر من ضمن خيارين للفيديو، 320 x 240 أو 176 x 144.

**الجودة** - دقيق جداً/دقيق/عادي.

**حفظ في** - اختر ما إذا كنت تريد حفظ الفيديو كليب في ذاكرة الهاتف أو في الذاكرة الخارجية.

**إعادة تعيين الإعدادات** - اختر **نعم** لإعادة تشغيل الهاتف وفق الإعدادات الأصلية للكاميرا.

## مشاهدة ملفات الفيديو المحفوظة

**1** يمكنك الوصول إلى ملفات الفيديو المحفوظة من ضمن وضع الكاميرا ومن شاشة وضع الانتظار. من محدد المنظر، حدد **البوم**. من شاشة وضع الانتظار عليك الضغط على قائمة أو **OK** ، ثم تحديد أشياءي والصور.

**2** يظهر المعرض على الشاشة.

**3** استخدم مفاتيح التنقل لتحديد الفيديو الذي تريد عرضه واضغط على **OK** لمشاهدته.

## ضبط مستوى الصوت عند عرض فيديو

لضبط مستوى الصوت في الفيديو أثناء تشغيله، استخدم مفاتيح مستوى الصوت الموجودة في الجانب الأيمن من الهاتف. يظهر مستوى حجم الصوت تحت الفيديو، على أعلى الجهة اليسرى.

01

02

03

04

05

06

07

08

## مشغل MP3

هناك مشغل MP3 مضمّن في الهاتف LG KS360 بحيث يمكنك تشغيل كل أنواع الموسيقى المفضلة لديك.

للوصول إلى مشغل MP3، اضغط قائمة أو (OK) وحدد وسائط متعددة ثم مشغل MP3. من هنا يمكنك الوصول إلى:

كل الأغاني - يحتوي على كل الأغاني المتوفرة في هاتفك.

قائمة التشغيل خاصتي - تحتوي على أي قوائم تشغيل قمت بإشائها وكذلك قائمة أثناء التنقل، والأغاني الحديثة، والأغاني المفضلة.

اعدادات - ضبط اعدادات الموسيقى.

## نقل الموسيقى إلى الهاتف

الطريقة الأسهل لنقل الموسيقى إلى الهاتف تتم عبر بلوتوث أو كبل المزامنة. للنقل باستخدام بلوتوث:

1 تأكد من تشغيل بلوتوث على الجهازين ومن كونهما مرئيين بالنسبة إلى بعضهما البعض.

2 حدد ملف الموسيقى على الجهاز الآخر واختر إرساله عبر بلوتوث.

3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.

4 يجب أن يظهر الملف في كل الأغاني.

## تشغيل أغنية

1 حدد قائمة أو (OK) وحدد وسائط متعددة، ثم اختر مشغل MP3.

2 اختر كل الأغاني ثم حدد الأغنية التي تريد تشغيلها. تحديد ▶

3 حدد || لإيقاف الأغنية مؤقتاً.

4 حدد >>> للانتقال إلى الأغنية التالية.

5 حدد <<< للانتقال إلى الأغنية السابقة.

6 حدد C لإيقاف الموسيقى والعودة إلى قائمة مشغل MP3.

تلميح! لتغيير مستوى الصوت أثناء الاستماع إلى الموسيقى، استخدم مفاتيح الموسيقى الموجودة في الجانب الأيسر من الهاتف أو مفاتيح التنقل للأعلى/للأسفل.

## استخدام خيارات أثناء تشغيل الموسيقى

حدد خيارات واختر من ضمن:

تصغير - إخفاء شاشة مشغل الموسيقى بحيث يمكنك الاستمرار في استخدام الهاتف بشكل عادي أثناء تشغيل الموسيقى.

عرض قائمة التشغيل - انظر إلى قائمة التشغيل التي تستمع إليها حالياً.

بحث - ابحث عن مسار من قائمة الأغاني الموجودة في هاتفك.

إضافة إلى قائمة التشغيل - إضافة المقطع الحالي إلى قائمة تشغيل.

تعيين ك - تعيين المقطع الحالي ك نغمة رنين أو نغمة رسالة.

معلومات - يمكنك عرض معلومات تتعلق بملف الموسيقى الذي تستمع إليه.

اعدادات - قم بتغيير المزج ووضع التشغيل أو اعدادات المعادل.


### إنشاء قائمة تشغيل

يمكنك إنشاء قوائم التشغيل الخاصة بك وذلك باختيار مجموعة مختارة من الأغاني منحافظة كل الأغاني.

1 اضغط على  وحدد وسائط متعددة.


2 اختر مشغل MP3، ثم حدد قائمة التشغيل خاصتي.

3 حدد جديد، وأدخل اسم قائمة التشغيل واضغط حفظ.

4 تظهرحافظة قائمة تشغيل جديدة. حدد كافة الأغاني التي تريد تضمينها في قائمة التشغيل وذلك بالتمرير إلى الأغاني التي تريدها وتحديد .

5 حدد حفظ لتخزين قائمة التشغيل.

### تشغيل قائمة تشغيل

1 اضغط قائمة أو  وحدد وسائط متعددة.

2 اختر مشغل MP3، ثم حدد قائمة التشغيل خاصتي.

3 حدد قائمة التشغيل التي تريد تشغيلها وحدد عرض ثم حدد .

### تعديل قائمة تشغيل

قد ترغب، من وقت إلى آخر، في إضافة أغاني جديدة أو حذف أغاني من قائمة التشغيل.

إذا أردت تنظيم قوائم التشغيل، فيمكنك تعديلها باستخدام قائمة خيارات.

1 اضغط قائمة أو  وحدد وسائط متعددة.

2 اختر مشغل MP3، ثم حدد قائمة التشغيل خاصتي.

3 قم بالتمرير إلى قائمة التشغيل التي تريد تعديلها وحدد عرض، ثم حدد خيارات. اختر من ضمن:

تشغيل يمكنك تشغيل الموسيقى المحددة.

إضافة - يمكنك إضافة الأغاني إلى قائمة التشغيل باستخدام هذا الخيار.

إزالة - إزالة أغنية من قائمة التشغيل. حدد نعم للتأكيد.

انتقال للأعلى/للأسفل في قوائم التشغيل.

حذف متعدد - حدد واحذف الأغاني من قائمة التشغيل.

إزالة الكل - إزالة كل الأغاني من قائمة التشغيل.

معلومات - عرض معلومات قائمة التشغيل.

## حذف قائمة تشغيل


## استخدام راديو FM

تتوفر في طراز الهاتف LG KS360 ميزة راديو FM بحيث يمكنك ضبط محطاتك المفضلة للاستماع إليها أثناء التنقل.

**ملاحظة:** ستحتاج إلى إدخال سماعات الرأس لكي تتمكن من الاستماع إلى الراديو. أدخل القابس بمأخذ سماعة الرأس (هو المأخذ نفسه الذي تقوم بتوصيل الشاحن به).

## البحث عن محطات

يمكنك ضبط محطات الراديو في هاتفك وذلك بالبحث عنها إما يدوياً أو تلقائياً. وسيتم حينئذٍ حفظها في أرقام قنوات معينة بحيث لن تعود بحاجة إلى إعادة ضبطها. ويمكنك حفظ ما يصل إلى 12 قناة في هاتفك.  
للضبط تلقائياً:

- 1 حدد قائمة أو  وحدد وسائط متعددة، ثم اختر راديو FM.
- 2 حدد خيارات واختر تفحص تلقائياً ثم حدد موافق.
- 3 في كل مرة يتم فيها العثور على محطة، سيسألك KS360 ما إذا كنت ترغب في حفظها. حدد نعم إذا كنت ترغب في حفظ القناة ولا إذا لم تكن ترغب في ذلك. وسيتم تلقائياً تخصيص المحطات التي تختار حفظها إلى رقم قناة في هاتفك.

1 اضغط قائمة أو  وحدد وسائط متعددة.

2 اختر مشغل MP3، ثم حدد قائمة التشغيل خاصتي.

3 قم بالتمرير إلى قائمة التشغيل التي تريد حذفها وحدد خيارات.

4 حدد حذف الكل وحدد نعم للتأكيد.

## ملاحظة:

كنتيجة لنظام إدارة الحقوق الرقمية (DRM)، قد تتوفر قائمة "حق الشراء" لبعض عناصر الوسائط التي تقوم بتنزيلها من الإنترنت أو تلقاها بواسطة MMS وذلك للسماح لك بالوصول إليها. ويمكنك الحصول على المفتاح الذي يتيح لك شراء الحق من موقع ويب الذي يمتلك حقوق الوصول إلى المحتويات.

إن الموسيقى محمية بموجب حقوق التأليف في المعاهدات الدولية وقوانين حقوق النشر المحلية. قد يكون من الضروري الحصول على إذن أو ترخيص لإعادة إنتاج الموسيقى أو نسخها. يمنع القانون الوطني في بعض البلدان النسخ الخاص للمواد المحمية بحقوق النشر. يُرجى التحقق من القانون الوطني للبلد المعني والمتعلق باستخدام مثل هذه المواد.

للضبط يدوياً:

## استخدام مسجل الصوت

01 استخدم مسجل الصوت لتسجيل مذكرات الصوت أو أصوات أخرى.

02

03

04

05

06

07

08

## تسجيل مذكرة صوتية

1 حدد قائمة أو OK وحدد وسائط متعددة، ثم اختر مسجل الصوت.

2 اضغط على ● لبدء التسجيل.

3 حدد إيقاف مؤقت لإيقاف التسجيل مؤقتاً.

4 اختر إيقاف لإنهاء التسجيل.

5 تحديد ▶ للاستماع إلى التسجيل.

ملاحظة: يمكنك الاستماع إلى كل التسجيلات الصوتية التي قمت بحفظها بتحديد اليوم.

## إرسال تسجيل صوتي

1 حين تنتهي من التسجيل، حدد خيارات.

2 حدد إرسال عبر واختر من ضمن رسالة وسائط متعددة، أو بلوتوث أو بريد إلكتروني. إذا اخترت رسالة أو بريد إلكتروني، فسيضاف التسجيل إلى الرسالة ويمكنك كتابتها وإرسالها بشكل عادي. إذا اخترت بلوتوث، فستتم مطالبتك بتسجيل بلوتوث.

تلميح! إذا كنت تخطط لإرسال تسجيلاتك كرسالة، حدد خيارات وحدد وضع التسجيل واختر MMS قبل أن تبدأ عملية التسجيل. هذا الأمر يضمن استيعاب التسجيل ضمن رسالة.

1 حدد قائمة أو OK وحدد وسائط متعددة، ثم اختر راديو FM.

2 حدد رقم قناة تريد حفظ محطة إليه واختر تعديل.

3 للدخول إلى محطتك، استخدم مفاتيح التنقل للبحث أو إدخال التردد باستخدام لوحة المفاتيح، ثم حدد حفظ.

ملاحظة: يمكنك أيضاً تعديل المحطات التي قمت بحفظها في رقم قناة.

تلميح! لتحسين الاستقبال، قم بتمديد سلك سماعة الرأس الذي يعمل كهوائي الراديو.

## إعادة تعيين القنوات

1 حدد قائمة أو OK وحدد وسائط متعددة، ثم اختر راديو FM.

2 حدد خيارات وحدد إعادة تعيين القنوات. اختر نعم لتأكيد عملية إعادة التعيين. تعود كل قناة إلى التردد 87.5 ميغا هرتز وهو تردد البداية.

## الاستماع إلى الراديو

1 حدد قائمة أو OK وحدد وسائط متعددة، ثم اختر راديو FM.

2 حدد رقم القناة للمحطة التي تريد الاستماع إليها.

ملاحظة: يمكنك الاستماع إلى الراديو عبر مكبر الصوت المضمن. اضغط خيارات، وحدد الاستماع عبر وحدد مكبر الصوت.

إرسال عبر - إرسال الصورة المحددة إلى صديق عبر رسالة وسائط متعددة، أو بلوتوث، أو البريد الإلكتروني.

**ملاحظة:** قد تحتاج إلى تغيير حجم الصورة قبل أن يتم إرسالها بواسطة MMS.

**ملف** - يمكنك تعديل الصورة أو إعادة التسمية أو صنع رسم متحرك أو عرض المعلومات (الاسم والحجم والتاريخ والوقت والنوع وحقوق النشر) للصورة المحددة. إذا توفرت لديك بطاقة ذاكرة خارجية تم إدخالها في الهاتف، سيظهر خياران إضافيان: **نقل إلى الذاكرة الخارجية ونسخ إلى الذاكرة الخارجية.**

**طباعة عبر** - طباعة ملف صورة بواسطة بلوتوث® أو **PictBridge**.

**عرض شرائح** - شاهد عرض شرائح لصورك. انظر إنشاء عرض شرائح على الصفحة 40 لمزيد من المعلومات.

**حافظة جديدة** - إنشاء حافظة جديدة ضمن حافظة الصور الرئيسي.

**تحديد / إلغاء تحديد** - حدد أكثر من صورة لحذفها. **حذف الكل** - حذف كل الصور في حافظة الصور.

**فرز حسب** - ترتيب الصور حسب التاريخ، أو النوع أو الاسم.

**عرض النمط** - تغيير طريقة عرض صورك.

يمكنك تخزين أية ملفات وسائط متعددة في ذاكرة الهاتف بحيث يتوفر لديك الوصول السهل إلى كل الصور، والأصوات، وملفات الفيديو والألعاب. كما يمكنك حفظ ملفاتك في بطاقة الذاكرة. الفائدة من استخدام بطاقة الذاكرة هي أنها تسمح لك بتحرير مساحة على ذاكرة الهاتف.

سيتم حفظ كل ملفات الوسائط المتعددة في **أشياء**. اضغط **قائمة** أو **OK** ثم حدد **أشياء** لفتح قائمة بالحفاظات.

## صور

**الصور** تحتوي على حافظة من الصور الافتراضية وملفات الفلاش الافتراضية التي تم تنزيلها مسبقاً على هاتفك، وصور قمت أنت بتنزيلها وصور تم التقاطها بواسطة كاميرا الهاتف.

## قائمة خيارات الصور

تتوقف الخيارات المتوفرة لك في الصور على نوع الصورة التي حددتها. وستكون كل الخيارات متوفرة للصور التي التقطتها على كاميرا الهاتف. وحدها خيارات عرض، وتعيين ك، ومعلومات الملف وعرض شرائح وفرز بحسب ونوع العرض ستكون متوفرة للصور الافتراضية.

في مجلد الصور، حدد خيارات لإحضار قائمة الخيارات.

**حذف** - حذف الصورة المحددة.

**تعيين ك** - تعيين الصورة المحددة كخلفية أو معرف صورة.

## إرسال صورة

- 1 اضغط قائمة أو  ثم حدد أشيائي.
- 2 حدد صور.
- 3 حدد صورة ثم خيارات.
- 4 حدد إرسال عبر واختر من ضمن رسالة وسائط متعددة، أو بلوتوث أو بريد إلكتروني.
- 5 إذا اخترت رسالة وسائط متعددة أو بريد إلكتروني، فسيتم إرفاق صورتك بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. إذا اخترت بلوتوث، فسُطالِبَ بتشغيل بلوتوث وسيبحث الهاتف عن جهاز لإرسال الصورة إليه.

## تنظيم الصور

- 1 اضغط قائمة أو  ثم حدد أشيائي.
- 2 حدد صور.
- 3 حدد خيارات ثم فرز حسب.
- 4 اختر من ضمن التاريخ، أو النوع أو الاسم.

## حذف صورة

- 1 اضغط  ثم حدد أشيائي.
- 2 حدد صور.
- 3 حدد صورة واضغط خيارات.
- 4 حدد حذف وأكد بالضغط على موافق.

## حذف صور متعددة

- 1 اضغط قائمة أو  ثم حدد أشيائي.
- 2 حدد صور.
- 3 حدد خيارات وتحديد/إلغاء تحديد ثم حذف.
- 4 تظهر خانة بالقرب من كل صورة. حدد  لوضع علامة على كل صورة. لإلغاء تحديد صورة،  حدد مجددًا بحيث تختفي علامة الاختيار من الخانة. أو يمكنك تحديد خيارات ثم اختيار تحديد الكل أو إلغاء تحديد الكل.
- 5 بعد أن تنتهي من تحديد كل الخانات المناسبة، حدد حذف وأكد رغبتك في حذف كل الصور التي حددتها.

01

02

03

04

05

06

07

08

## إنشاء عرض شرائح

إذا أردت مشاهدة كل الصور الموجودة على الهاتف أو تفحص ما لديك، فيمكنك إنشاء عرض شرائح يوفر عليك عملية فتح كل صورة وإغلاقها بشكل فردي.

1 اضغط قائمة أو (OK) ثم حدد أشيائي.

2 تحديد الصور.

3 حدد الصورة التي تريد بدء عرض الشرائح بها وحدد خيارات.

4 اختر عرض شرائح فيبدأ العرض.

5 اضغط إيقاف مؤقت لإيقاف عرض الشرائح مؤقتاً واضغط إنهاء لإنهاء عرض الشرائح والعودة إلىحافظة الصور.

خلال عرض الشرائح، اضغط خيارات للاختيار بين صورة كاملة و ملء الشاشة. حدد أفقي لتغيير اتجاه الصورة.

## أصوات

تحتوي حافظة الأصوات على الأصوات الافتراضية، وتسجيلاتك الصوتية وملفات الصوت التي قمت بتنزيلها. ومن هنا يمكنك إدارة الأصوات، أو إرسالها أو تعيينها كتغمات رنين.

## استخدام صوت

1 اضغط قائمة أو (OK) ثم حدد أشيائي.

2 قم بالتمرير إلى وحدد أصوات.

3 حدد أصوات افتراضية أو اختر من ضمن قائمة ملفات التسجيلات الصوتية.

4 حدد صوت واضغط ▶ للاستماع إليه.

5 حدد خيارات، وحدد تعيين كـ واختر من ضمن نغمة الرنين و معرف نغمة الرنين و نغمة الرسالة.

## ملفات الفيديو

تعرض حافظة مقاطع الفيديو قائمة بملفات الفيديو التي تم تنزيلها إلى هاتفك وملفات الفيديو التي قمت بتسجيلها على هاتفك.

## مشاهدة فيديو

1 اضغط قائمة أو (OK) ثم حدد أشيائي.

2 قم بالتمرير إلى وحدد أصوات.

3 حدد فيديو واضغط على ▶.

## استخدام الخيارات فيما الفيديو متوقف مؤقتاً

مع تحديد خيارات، سيكون الفيديو الذي تقوم بتشغيله في وضع التوقف المؤقت ويمكنك الاختيار من ضمن: **حذف** - حذف الفيديو.

**إرسال عبر** - إرسال الفيديو إلى صديق عبر رسالة وسائط متعددة، أو بلوتوث، أو البريد الإلكتروني. **المعلومات** - عرض معلومات بالملف المحدد مثل الاسم، والحجم، والتاريخ، والوقت، والنوع وتفاصيل حقوق النشر.

## إرسال فيديو كليب

- 1 اضغط قائمة أو **OK** ثم حدد **أشيائي**.
- 2 قم بالتمرير إلى وحد **ملفات فيديو**.
- 3 حدد الفيديو كليب المطلوب واضغط **خيارات**.
- 4 اضغط **إرسال عبر** واختر من ضمن رسالة وسائط متعددة أو بلوتوث أو بريد إلكتروني.
- 5 إذا اخترت رسالة أو بريد إلكتروني، فسيتم إرفاق الفيديو كليب بالرسالة ويمكنك كتابة الرسالة وإرسالها كالمعتاد. أما إذا اخترت **بلوتوث**، فستطالب بتشغيل بلوتوث وسيبحث الهاتف عن جهاز لإرسال الفيديو إليه.

**ملاحظة:** قد تحتاج إلى تغيير حجم الصورة قبل أن يتم إرسالها بواسطة MMS. قد تكون بعض ملفات الفيديو كبيرة جداً بحيث لا يمكن إرسالها بواسطة MMS.

## قائمة خيارات الفيديو

في حافظة ملفات الفيديو، قم بتمييز فيديو واضغط **خيارات** لإحضار قائمة الخيارات التالية.

**حذف** - حذف الفيديو المحدد.

**إرسال عبر** - إرسال الفيديو المحدد إلى صديق عبر رسالة وسائط متعددة، أو بلوتوث، أو البريد الإلكتروني.

**ملف** - إعادة تسمية الفيديو أو عرض المعلومات (الاسم، والحجم، والتاريخ، والوقت والتشغيل وحقوق النشر).

إذا توفرت لديك بطاقة ذاكرة خارجية تم إدخالها في الهاتف، سيظهر خياران إضافيان: **نقل إلى الذاكرة الخارجية** و**نسخ إلى الذاكرة الخارجية**.

**حافظة جديدة** - إنشاء حافظة جديدة ضمن حافظة ملفات الفيديو الرئيسي.

**تحديد / إلغاء تحديد** - حدد أكثر من فيديو كليب واحد قبل تحديد **حذف**.

**حذف الكل** - حذف كل كليات الفيديو في حافظة ملفات الفيديو.

**فرز حسب** - ترتيب ملفات الفيديو حسب التاريخ، أو النوع أو الاسم.

01

02

03

04

05

06

07

08

تشغيل التالي تلقائياً - يسمح بتعيين وضع التشغيل:  
إيقاف، وتكرار مرة واحدة وتكرار الكل.

• إيقاف: تشغيل الملف المحدد.

• تكرار مرة واحدة: تشغيل كل الملفات في القائمة مرة واحدة.

• تكرار الكل: متابعة تشغيل كل الملفات في القائمة بشكل متكرر.

عرض القائمة / عرض الصور المصغرة - تغيير طريقة عرض ملفات الفيديو.

## مستندات

من قائمة المستندات.

## عرض مستند

1 اضغط قائمة أو (OK) ثم حدد أشياء.

2 حدد مستندات.

3 حدد مستنداً واضغط عرض.

## أخرى

يمكنك عرض الملفات التي لم يتم حفظها في حافظات الصور والأصوات والفيديو أو المستندات من القائمة أخرى.

وقد يتبين لك عند نقل الملفات من الكمبيوتر إلى الهاتف أنها تظهر في الحافظة أخرى عوضاً عن ظهورها في الحافظة المستندات. إذا حدث مثل هذا الأمر فيمكنك نقلها.

## الذاكرة الخارجية

إذا قمت بإدخال بطاقة ذاكرة، فستظهر كحافظة ضمن أشياء. ستكون حافظة الذاكرة الخارجية مقسماً إلى خمس حافظات إضافية: الصور، والأصوات، وملفات الفيديو، والمستندات وأخرى. وستحتوي كل حافظة على كل الملفات من ذلك النوع والتي يتم حفظها في بطاقة الذاكرة عوضاً عن حفظها في الهاتف.

# الألعاب والتطبيقات

## الألعاب والتطبيقات

يكون الهاتف KS360 محملاً مسبقاً بالألعاب تهدف إلى تسليتك في أوقات الفراغ. وإذا اخترت تنزيل أية ألعاب أو تطبيقات إضافية، فسيتم حفظها في هذه الحافظة.

### لعب لعبة

1 اضغط قائمة أو  حدد ألعاب وتطبيقات ومن ثم ألعاب.

2 يمكنك تنزيل ألعاب من الموقع ومن ثم الاستمتاع بها.

ملاحظة: يتم فرض رسم إضافي عند الاتصال بهذه الخدمة. للحصول على تفاصيل تتعلق بالرسوم على البيانات، عليك الاتصال بموفر الشبكة.

### عرض التطبيقات

يمكنك إدارة تطبيقات Java المثبتة على هاتفك باستخدام قائمة تطبيقات. كما يمكنك حذف التطبيقات التي تم تنزيلها.

1 اضغط قائمة أو  حدد ألعاب وتطبيقات ومن ثم التطبيقات.

2 قم بعرض وإدارة التطبيقات المتوفرة لديك.

## تغيير نمط الشبكة

لتنزيل لعبة، يمكنك تعيين القيمة للاتصال بالإنترنت باستخدام نمط الشبكة.

1 اضغط قائمة أو  وحدد ألعاب وتطبيقات ومن ثم نمط الشبكة.

2 يمكنك إضافة نمط شبكة جديد وتعديله.

01

02

03

04

05

06

07

08

## إضافة حدث إلى التقويم

- 6 قم بالتمرير إلى الأسفل مرة أخرى لتحديد ما إذا كان الحدث سيحدث مرة واحدة فقط أو إذا كان سيكرر يومياً، أو أسبوعياً، أو شهرياً أو سنوياً. إذا كان الحدث عبارة عن حدث متكرر، فيمكنك أيضاً التمرير إلى الأسفل لإدخال تاريخ انتهاء الصلاحية لتحديد تاريخ تتوقف فيه الأحداث بشكل تام.

- 7 حدد **حفظ** فيتم حفظ الحدث في التقويم. يضع مؤشر مربع الشكل علامة على الأيام التي تم حفظ أحداث فيها.

## تعديل حدث تقويم

- 1 من شاشة وضع الانتظار، اضغط قائمة أو **OK** وحدد **المنسق** ثم **التقويم**.
- 2 حدد **خيارات** وحدد **كل الجداول** لمشاهدة قائمة بكل الأحداث. قم بالتمرير إلى الحدث الذي ترغب في تعديله وحدد **عرض**. بشكل بديل، حدد يوم الحدث في التقويم وحدد **عرض**.
- 3 حدد **تعديل** وقم بالتمرير إلى تفصيل الحدث الذي تريد تغييره. أدخل تعديلاتك وحدد **حفظ** لتخزين الحدث الذي تم تعديله.

**ملاحظة:** يمكنك حذف حدث من التقويم وذلك بتحديد عرض الحدث ثم عرض **خيارات** وحذف.

- 1 من شاشة وضع الانتظار، اضغط قائمة أو **OK** حدد **المنسق** ثم **التقويم**.

- 2 حدد التاريخ الذي تريد إضافة حدث إليه. يمكنك اختيار تاريخ ويمكنك أن تختار التاريخ سواء بالتمرير إليه باستخدام مفاتيح التنقل، أو بتحديد **خيارات** و **الذهاب إلى تاريخ** بهدف إدخال تاريخ.

- 3 حدد **جدول جديد** وقم بالتمرير للأسفل لإدخال الوقت الذي ترغب أن يبدأ الحدث عنده. قم بالتمرير إلى الأسفل وأدخل وقت انتهاء الحدث.

- 4 قم بالتمرير إلى الأسفل مرة أخرى واختر ما إذا كنت ترغب في تعيين **تبيه** للحدث. بم بالتمرير يساراً أو يميناً لمشاهدة الخيارات المتوفرة. يمكنك تعيين المنبه بحيث يرن في الوقت الذي يبدأ فيه الحدث أو في فترة وقت محددة قبل بدء الحدث بهدف تذكيرك باقتراب وقوع الحدث.

- 5 قم بالتمرير إلى الأسفل واختر **موضوعاً** للحدث. استخدم لوحة المفاتيح لكتابة الأحرف والأرقام.

## مشاركة في حدث تقويم

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK وحدد المنسق ثم التقويم.
- 2 حدد الحدث الذي ترغب في المشاركة فيه وحدد خيارات.
- 3 اختر إرسال عبر وحدد من ضمن رسالة نصية، أو رسالة وسائط متعددة، أو بلوتوث أو بريد إلكتروني.

## إضافة مذكرة

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK حدد المنسق ثم المذكرة.
- 2 حدد جديد وكتب مذكرتك.
- 3 حدد خيارات ثم حفظ.
- 4 تظهر المذكرة على الشاشة في المرة التالية التي تفتح فيها تطبيق المذكرة.

**تلميح!** يمكنك تعديل مذكرة موجودة. حدد المذكرة التي تريد تعديلها، اضغط خيارات وحدد تعديل.

## تعيين المنبه

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK وحدد أوقات ثم ساعة المنبه.
  - 2 حدد جديد.
  - 3 قم بالتمرير إلى الأسفل وأدخل الوقت الذي تريد أن يبدأ فيه المنبه بالرنين.
  - 4 اختر نوع التكرار للإشارة إلى ما إذا كنت ترغب في أن يرن المنبه مرة واحدة، أو يومياً، أو الاثنين-الجمعة، أو الاثنين-السبت، أو السبت-الأحد، أو اختر يوم الأسبوع.
  - 5 قم بالتمرير إلى الأسفل وحدد خيارات المنبه التي تريدها، الصوت دائماً، أو الاهتزاز دائماً أو إتباع النمط.
  - 6 قم بالتمرير إلى الأسفل لاختيار نغمة المنبه. اختر أصوات لتحديد صوت جديد.
  - 7 قم بالتمرير إلى الأسفل واختر اسماً للمنبه أو احتفظ بالاسم المقترح.
  - 8 حدد حفظ.
- ملاحظة: يمكنك ضبط 5 تنبيهات كحد أقصى.

01

02

03

04

05

06

07

08

# المنسق والأدوات

## استخدام الحاسبة

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK وحدد أدوات ثم الحاسبة.
- 2 اضغط المفاتيح الرقمية لإدخال الأرقام.
- 3 بالنسبة إلى الحسابات البسيطة، حدد الوظيفة التي تحتاج إليها (+، -، \*، ÷)، يليها =.
- 4 بالنسبة إلى الحسابات الأكثر تعقيداً، حدد وظيفة لتحديد أمر.
- 5 حدد مسح لمسح الشاشة لبدء عملية حسابية جديدة.

## استخدام ساعة الإيقاف

- 1 من شاشة وضع الانتظار اضغط قائمة أو  OK وحدد الأدوات ثم ساعة الإيقاف.
- 2 حدد بدء لبدء تشغيل المؤقت.
- 3 اختر دورة إذا أردت تسجيل وقت الدورة. يمكن حفظ وقت حتى 20 دورة.
- 4 حدد إيقاف لإيقاف تشغيل المؤقت.
- 5 اختر استئناف لإعادة تشغيل ساعة الإيقاف في الوقت الذي توقفت فيه أو حدد إعادة التعيين لإعادة ضبط التوقيت من جديد.

## تحويل وحدة

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK وحدد أدوات ثم محول الوحدة.
- 2 اختر ما إذا كنت ترغب في تحويل وحدات العملة، أو المساحة، أو الطول، أو الوزن، أو درجة الحرارة، أو مستوى الصوت أو السرعة.
- 3 قم بالتمرير إلى الأعلى للاختيار من ضمن وحدة القياس التي تريد إدخالها. قم بالتمرير إلى اليسار وإلى اليمين لتحديد وحدة، ثم قم بالتمرير إلى الأسفل وأدخل كمية الوحدة.
- 4 قم بالتمرير إلى الأسفل إلى خانة تحويل الوحدة واختر قيام الوحدة التي تريد التحويل إليها. يظهر التحويل تلقائياً في السطر أدناه.

## إضافة مدينة إلى ساعتك العالمية

- 1 من شاشة وضع الانتظار، اضغط قائمة أو  OK وحدد أدوات ثم الساعة العالمية.
- 2 قم بالتمرير إلى الأعلى، أو الأسفل، أو يساراً أو يميناً للتنقل ضمن الكرة الأرضية واختيار محيط.
- 3 حدد تكبير لتكبير منطقة واختيار مدن فيها.
- 4 حدد تعيين.

## خدمات SIM

هذه الميزة تعتمد على SIM وخدمات الشبكة.

إذا كانت بطاقة SIM تعتمد خدمات SAT (أي مجموعة أدوات تطبيق SIM)، فستكون هذه القائمة اسم الخدمة الخاصة بالمشغل المخزنة على بطاقة SIM.

## إضافة إشارات مرجعية والوصول إليها

لكي تتمكن من الوصول إلى مواقعك المفضلة على ويب بشكل سريع وسهل، يمكنك إضافة إشارات مرجعية وحفظ صفحات ويب.

1 اضغط قائمة أو (OK) وحدد المتصفح.

2 حدد إشارات مرجعية. تظهر قائمة بالإشارات المرجعية على الشاشة.

3 لإضافة إشارة مرجعية جديدة، حدد خيارات واختار إشارة مرجعية جديدة. أدخل اسماً للإشارة المرجعية، يتبعه URL.

4 اضغط على حفظ. تظهر إشارتك المرجعية الآن في قائمة الإشارات المرجعية.

5 للوصول إلى الإشارة المرجعية ما عليك إلا التمرير للوصول إلى الإشارة المرجعية المطلوبة وتحديد اتصال. فيتم توصيلك بالصفحة التي وضعت عليها إشارة مرجعية.

مع وجود المتصفح في متناول يدك، يمكنك الحصول على آخر الأخبار وتوقعات الطقس وكذلك معلومات تتعلق بالرياضة أو حركة السير كلما احتجت إليها. بالإضافة إلى ذلك، يسمح لك المتصفح بتنزيل أحدث الموسيقى، ونغمات الرنين، والخلفيات والألعاب.

## الوصول إلى ويب

1 اضغط قائمة أو (OK) وحدد المتصفح. أو اضغط على مفتاح الاختيار الأيمن للوصول مباشرة إلى المتصفح.

2 للوصول مباشرة إلى شاشة المتصفح الرئيسية، حدد الشاشة الرئيسية. أو حدد إدخال العنوان واكتب عنوان URL المطلوب، يليه اتصال.

**ملاحظة:** يتم فرض رسم إضافي عند الاتصال بهذه الخدمة وتنزيل المحتوى. للحصول على تفاصيل تتعلق بالرسوم على البيانات، عليك الاتصال بموفر الشبكة.

## الاستمتاع ب Yahoo!

يمكنك التنقل في الويب بسرعة وبسهولة بتحديد هذه القائمة.

01

02

03

04

05

06

07

08

## الوصول إلى صفحة محفوظة

- 1 اضغط قائمة أو (OK) وحدد المتصفح.
- 2 حدد صفحات محفوظة.
- 3 حدد الصفحة المطلوبة واضغط فتح.

تلميح! تسمح لك هذه القائمة أيضاً بحذف صفحات محفوظة.

## عرض محفوظات المتصفح

- 1 اضغط قائمة أو (OK) وحدد المتصفح.
- 2 حدد محفوظات وحدد موافق.

3 تظهر قائمة بعناوين صفحات ويب التي وصلت إليها مؤخراً. للوصول إلى إحدى هذه الصفحات، قم بالتمرير إلى الصفحة المطلوبة وحدد اتصال.

## تغيير اعدادات مستعرض ويب

- 1 اضغط قائمة أو (OK) وحدد المتصفح.
- 2 حدد اعدادات.
- 3 يمكنك أن تختار الطريقة التي يعالج بها الهاتف المعلومات، ويعرضها ويستخدمها عند استعراض الإنترنت. يمكنك تعديل الاعدادات ضمن أنماط الشبكة، و وضع التصيير، وذاكرة التخزين المؤقت، وملفات تعريف الارتباط، وشهادات الأمان، وعرض الصورة، و JavaScript وموقع التخزين.
- 4 عندما تنتهي من تغيير الاعدادات، حدد موافق.

## تغيير التاريخ والوقت

يمكنك تعيين الوظائف المتعلقة بالتاريخ والوقت.

01

1 اضغط قائمة أو  OK وحدد اعدادات.

02

2 حدد التاريخ والوقت واختر من القائمة أدناه.

03

ضبط التاريخ - يمكنك إدخال التاريخ الحالي.

04

تنسيق التاريخ - يمكنك تعيين تنسيق التاريخ. (سنة/شهر/يوم، يوم/شهر/سنة، شهر/يوم/سنة)

05

ضبط الوقت - يمكنك إدخال الوقت الحالي.

06

تنسيق الوقت - يمكنك تعيين تنسيق الوقت إلى 24 ساعة أو 12 ساعة.

07

تحديث تلقائي - حدد تشغيل، فيقوم الهاتف بتحديث الوقت والتاريخ تلقائياً.

08


## تغيير اللغة

حدد لغات لتغيير اللغة لأي نص في هاتفك. سيؤثر أي تغيير أيضاً على وضع إدخال اللغة.

باستطاعتك تكييف الإعدادات ضمن هذه الحافظة لإضفاء طابع شخصي على الهاتف KS360.

ملاحظة: للحصول على مزيد من المعلومات حول إعدادات المكالمات انظر الصفحة 19.

## تغيير الأوضاع

يمكنك تغيير النمط بسرعة من شاشة وضع الانتظار. ما عليك إلا ضغط  باستخدام مفاتيح التنقل ثم النمط الذي ترغب بتنشيطه. اختر من ضمن عام، وصامت، واهتزاز فقط، وخارجي وسماعة الرأس.

## تخصيص الأوضاع

يمكنك تخصيص كل ضبط من اعدادات النمط.

1 اضغط قائمة أو  OK وحدد اعدادات ومن ثم نمط.

2 اختر النمط المطلوبة وحدد تخصيص.

3 بالنسبة إلى النمطين صامت واهتزاز فقط، يمكنك تكييف الاهتزاز. أما بالنسبة للأنماط الأخرى، فيمكنك تغيير كل خيارات الأصوات والتنبيهات المتوفر في القائمة.

## تغيير اعدادات الشاشة

1 اضغط قائمة أو (OK) وحدد اعدادات.

2 حدد عرض واختر من ضمن:

خلفية - اختر خلفية لكي تظهر على شاشة العرض.

الساعات - اختر ظهور التاريخ والوقت على شاشة وضع الانتظار. اختر من ما من تاريخ ووقت أو عادي.

مؤقت الإضاءة الخلفية - اختر فترة بقاء الإضاءة الخلفية قيد التشغيل.

**تلميح!** بقدر ما تطول الفترة التي تكون خلالها الإضاءة الخلفية قيد التشغيل، بقدر ما يتم استخدام طاقة البطارية وقد تحتاج إلى شحن هاتفك بشكل متكرر أكثر.

نمط القائمة - تغيير عرض القائمة من عرض الشبكة إلى عرض القائمة.

نمط الخط الرئيسي - ضبط نوع الخط.

نمط الاتصال - ضبط نمط الخط عند طلب رقم هاتف.

نص وضع الانتظار - اختر إضافة رسالة إلى شاشة وضع الانتظار.

## تغيير اعدادات الحماية

قم بتغيير اعدادات الحماية لحماية الهاتف KS360 والمعلومات الهامة التي يحتوي عليها.

1 اضغط قائمة أو (OK) وحدد اعدادات.

2 حدد الحماية واختر من القائمة أدناه.

طلب رمز PIN - اختر رمز PIN الذي يجب طلبه عند تشغيل هاتفك.

قفل المفاتيح التلقائي - اختر الفترة قبل إقفال لوحة المفاتيح عندما يكون الهاتف قيد الاستخدام.

قفل الهاتف - اختر رمز حماية لإقفال هاتفك، عند التشغيل، أو عند تغيير SIM أو على الفور.

تغيير الرموز - تغيير رمز الحماية، أو رمز PIN1 أو رمز PIN2.

السطوع - استخدم مفاتيح التنقل لضبط السطوع. اختر من 40% أو 60% أو 80% أو 100%، ثم حدد موافق لحفظ التغيير الذي قمت به.

اختصار الشاشة الرئيسية - حدد تشغيل لعرض اختصارات القوائم الأربعة كالصور في وسط شاشة وضع الانتظار.

حجم الخط - تغيير حجم الخطوط في العناصر التالية: القائمة، والطلب والرسائل.

السمة - تغيير مظهر الشاشة بأكمله بشكل سريع.

## استخدام وضع الرحلات الجوية

استخدم هذه الوظيفة للتبديل ما بين تشغيل أو إيقاف وضع الرحلات الجوية. لن يكون باستطاعتك إجراء مكالمات، أو الاتصال بالإنترنت، أو إرسال رسائل عندما يكون وضع الرحلات الجوية قيد التشغيل.

## استخدام توفير الطاقة

اختر تشغيل أو إيقاف تشغيل اعدادات توفير الطاقة.

## إعادة تعيين الهاتف

استخدم إعادة التعيين في اعدادات الهاتف لإعادة تعيين كافة الاعدادات وفق تعريفاتها المحددة من قبل المصنع. ومن أجل تنشيط هذه الوظيفة تحتاج إلى رمز الحماية.

## عرض حالة الذاكرة

تتوفر في الهاتف KS360 ثلاثة أنواع من الذاكرة: الهاتف، وبطاقة SIM وبطاقة ذاكرة خارجية (قد تحتاج إلى شراء بطاقة الذاكرة بشكل منفصل).

ويمكنك استخدام إدارة الذاكرة لتحديد كمية الذاكرة المستخدمة وكمية المساحة المتوفرة.

اضغط قائمة أو **OK** وحدد اعدادات. اختر حالة الذاكرة وستشاهد حينئذٍ حالة أنواع الذاكرة الحالية (عادية، ومحجوزة، وبطاقة SIM وذاكرة خارجية) في الهاتف KS360.

## تغيير اعدادات بلوتوث

1 اضغط قائمة أو **OK** وحدد التوصيل، ثم اختر بلوتوث.

2 اختر ضبط بلوتوث. أدخل تغييراتك على:

إمكانية رؤيتي - اختر عرض أو إخفاء جهازك بالنسبة إلى الآخرين.

اسمي - أدخل اسماً للهاتف KS360.

عنواني - عرض عنوان بلوتوث.

## تغيير اعدادات التوصيل

تم مسبقاً إعداد اعدادات التوصيل بواسطة مشغل الشبكة، بحيث يمكنك أن تتمتع باستخدام هاتفك الجديد منذ البداية. إذا أردت تغيير أي ضابط من الاعدادات، استخدم هذه القائمة.

اضغط قائمة أو **OK** وحدد التوصيل. خيارك هي:

بلوتوث - قم بإعداد KS360 لاستخدام بلوتوث. يمكنك تكييف إمكانية رؤيتك بالنسبة إلى الأجهزة الأخرى أو البحث عبر الأجهزة التي اقترن هاتفك بها.

خدمة التزامن - قم بإعداد KS360 للخدمة المتزامنة.

تلميح! انظر الصفحة 13 للحصول على معلومات حول إدخال بطاقة ذاكرة.

- 3 يبحث الهاتف KS360 عن الأجهزة. عند اكتمال عملية البحث يظهر اقتران وتحديث على الشاشة.
- 4 اختر الجهاز الذي تريد إجراء الاقتران به، وحدد اقتران وأدخل رمز مرور ثم اختر موافق.
- 5 يتصل هاتفك حينئذٍ بالجهاز الآخر، حيث عليك إدخال رمز المرور نفسه.
- 6 لقد أصبح اتصال بلوتوث المحمي بـ رمز مرور آمناً الآن.

### استخدام سماعة رأس بلوتوث

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً.
- 2 اتبع الإرشادات التي تصحب سماعة الرأس لوضعها في وضع الاقتران وإجراء اقتران للأجهزة.
- 3 سيقوم KS360 بالاتصال تلقائياً إلى سماعة رأس بلوتوث والتبديل إلى نمط سماعة الرأس.

الشبكة - يتصل الهاتف KS360 تلقائياً بشبكته المفضلة. لتغيير هذه الإعدادات، استخدم هذه القائمة. كما يمكنك إضافة نقاط وصول جديدة باستخدام هذه القائمة.

**وضع اتصال USB** - اختر خدمة البيانات وقم بمزامنة هاتف KS360 باستخدام البرنامج LG PC Suite لنسخ الملفات من الهاتف. إذا توفرت لديك بطاقة ذاكرة تم إدخالها في الهاتف، فحدد جهاز تخزين ذي سعة كبيرة لاستخدام الهاتف بالطريقة نفسها التي تستخدم بها ذاكرة USB. قم بتوصيل الهاتف بالكمبيوتر واسحب الملفات وأسقطها في حاوية الجهاز القابل للإزالة لهاتف KS360.

### الاقتران بجهاز بلوتوث آخر

عند إجراء اقتران لهاتف KS360 وجهاز آخر، يمكنك إعداد اتصال محمي بـ رمز مرور. وهذا يعني أن الاقتران أصبح آمناً أكثر.

- 1 تأكد من كون بلوتوث في وضع التشغيل ومن كونه مرئياً. يمكنك تغيير إمكانية رؤيتك في قائمة إعدادات بلوتوث وذلك بتحديد إمكانية رؤيتي، ثم عرض.

- 2 حدد قائمة الأجهزة من قائمة بلوتوث واختر جديد.

## كبيرة

### استخدام الهاتف كوسيلة تخزين ذات سعة

8 عندما ترغب في الوصول إلى ملف، صورة مثلاً، حدد قائمة أو (OK) ثم حدد أشيائي وذاكرة خارجية ثم الصور. ستكون كل الصور التي قمت بنقلها موجودة في هذا الملف.

### نقل ملف إلى الهاتف

يمكنك أيضاً نقل الملفات من الكمبيوتر إلى الهاتف باستخدام بلوتوث.

- 1 تأكد من تشغيل بلوتوث على الهاتف والكمبيوتر ومن كونهما مرتين بالنسبة إلى بعضهما البعض.
- 2 استخدم الكمبيوتر لإرسال الملف عبر بلوتوث.
- 3 عندما يتم إرسال الملف سيترتب عليك قبوله على الهاتف وذلك بتحديد نعم.

4 سيتم حفظ الملف ضمن الحافظة المناسبة له وهذا وفقاً لنوعه. وهكذا على سبيل المثال، سيتم حفظ الصور في حافظة الصور والموسيقى في حافظة الأصوات. إذا لم يكن باستطاعة هاتفك التعرف على نوع الملف، سيتم حفظ الملف في الحافظة أخرى.

ملاحظة: ستُحفظ في ذاكرة الهاتف الملفات المرسلة بواسطة بلوتوث.

يمكنك استخدام الهاتف KS360 كجهاز تخزين ذي سعة كبيرة، تماماً مثل ذاكرة USB. هذه الطريقة تعتبر جيدة لنقل الملفات من الكمبيوتر إلى الهاتف. إذا قمت بإدخال بطاقة ذاكرة، عند توصيلها كجهاز تخزين ذي سعة كبيرة، فسيتم عرضها كمحركي أقراص على الكمبيوتر: ذاكرة الهاتف والذاكرة الخارجية.

1 اضغط قائمة أو (OK) وحدد التوصيل.

2 حدد اتصال USB.

3 قم بالتمرير إلى جهاز تخزين ذي سعة كبيرة وحدد موافق.

4 أدخل الطرف الصغير لكل USB بموصل كبل USB على حافة KS360. قم بتوصيل الطرف الكبير بمنفذ USB على الكمبيوتر.

5 تفتح حافظة قرص قابل للإزالة بشكل تلقائي على الكمبيوتر، واثان إذا كنت قد أدخلت بطاقة ذاكرة، وهكذا تظهر كل الحافظات الموجودة في الهاتف أو في بطاقة الذاكرة.

6 قم بسحب وإفلات الصور، أو ملفات الفيديو، أو الموسيقى أو المستندات في الحافظات المناسبة.

7 أخرج الهاتف بأمان وذلك بالنقر فوق الرمز إزالة الجهاز بأمان الموجود على شريط أدوات سطح المكتب.

- 4 سيبحث الهاتف KS360 تلقائياً عن أجهزة بلوتوث أخرى تم تمكينها ضمن النطاق.
- 5 اختر الجهاز الذي تريد إرسال الملف إليه وحدد إرسال.

### لاستلام ملف:

- 1 لتلقي ملفات، يجب أن يكون بلوتوث في وضع التشغيل ومرنياً. انظر تغيير إعدادات بلوتوث على الصفحة 51 للحصول على مزيد من المعلومات.
- 2 تظهر رسالة تطالبك بقبول الملف من المرسل. حدد نعم لاستلام الملف.

**تلميح!** راقب شريط التقدم لكي تتأكد من إرسال الملف.

**ملاحظة** إن علامة الكلمة® بلوتوث وشعاراتها مملوكة من قبل بلوتوث. SIG, Inc. وأي استخدام لمثل هذه العلامات من قبل LG Electronics يتم بموجب ترخيص. أما العلامات التجارية والأسماء التجارية الأخرى فهي تعود إلى مالكيها.

### إرسال الملفات واستلامها باستخدام بلوتوث

يعتبر بلوتوث طريقة جيدة لإرسال الملفات وتلقيها إذ لا حاجة إلى أسلاك ويكون الاتصال سريعاً وسهلاً. كما يمكنك الاتصال بسماعات رأس بلوتوث لإجراء مكالمات وتلقيها.

قبل أن تتمكن من بدء المشاركة في الملفات باستخدام بلوتوث، ستحتاج إلى إجراء اقتراح لهاتفك بجهاز بلوتوث آخر. للحصول على معلومات حول اقتراح الأجهزة، انظر الاقتراح بجهاز بلوتوث آخر على الصفحة 52.

### لتشغيل بلوتوث:

- 1 اضغط قائمة أو OK وحدد التوصيل، ثم اختر بلوتوث.
  - 2 حدد تشغيل/إيقاف بلوتوث واختر تشغيل.
  - 3 حدد إيقاف لإيقاف تشغيل بلوتوث.
- ### إرسال ملف:
- 1 افتح الملف الذي تريد إرساله، وهو عادة عبارة عن صورة، أو فيديو أو ملف موسيقى.
  - 2 حدد خيارات واختر إرسال عبر، ثم بلوتوث.
  - 3 حدد نعم لتشغيل بلوتوث إذا لم يكن قد تم تنشيطه بعد.

## الملحقات

وقد تم تزويدك بهذه الملحقات مع الهاتف KS360.

01

02

03

04

05

06

07

08



سماعة رأس ستيريو



الشاحن

دليل المستخدم

اعرف المزيد حول KS360.



البطارية

### ملاحظة

- استخدم ملحقات LG الأصلية دائماً. يؤدي عدم القيام بذلك إلى إبطال الضمان.
- قد تختلف الملحقات من منطقة لأخرى؛ يرجى مراجعة شركة أو وكيل الخدمة الإقليمي لمزيد من الاستفسارات.

### عام

اسم المنتج: KS360  
النظام : GSM 900 / DCS 1800 / PCS  
1900

### درجات الحرارة المحيطة

الحد الأقصى: +55 درجة مئوية (تفريغ)  
+45 درجة مئوية (شحن)  
الذنيا: -10 درجة مئوية

تمت الموافقة على استخدام الهاتف اللاسلكي، الذي جاء وصفه في هذا الدليل، على شبكات GSM 900، وDCS 1800، وPCS1900.

وهناك عدد من الميزات المضمنة في هذا الدليل وتسمى خدمات الشبكة. هذه الخدمات عبارة عن خدمات خاصة يمكنك الحصول عليها عبر موفر خدمة اللاسلكية. قبل أن تتمكن من الاستفادة من أي خدمة من خدمات الشبكة، عليك الاشتراك فيها عبر موفر الخدمة والحصول على الإرشادات المتعلقة باستخدامها والتي يزودك بها موفر الخدمة.

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

18. JUN. 2008

  
Signature of representative

# توجيهات لاستخدام آمن وفعال

يرجى قراءة هذه الإرشادات البسيطة. عدم التقيد بهذه الإرشادات قد يكون أمراً خطراً أو غير قانوني.

## التعرض لطاقة التردد اللاسلكي

معلومات حول التعرض للموجات اللاسلكية ومعدل الامتصاص المحدد (SAR)

لقد تم تصميم طراز الهاتف المحمول KS360 هذا بحيث يفي بمتطلبات السلامة القابلة للتطبيق المتعلقة بالتعرض للموجات اللاسلكية. وتستند هذه المتطلبات إلى إرشادات علمية تتضمن هوامش سلامة مصممة لضمان السلامة لكل الأشخاص، دون أخذ العمر والصحة بعين الاعتبار.

تستخدم توجيهات التعرض للموجات اللاسلكية وحدة قياس معروفة بمعدل الامتصاص المحدد، أو SAR. وتجرى اختبارات SAR باستخدام أساليب قياسية فيما ينفذ الهاتف عملية الإرسال بأعلى مستوى طاقة مسموح به في كافة نطاقات التردد التي تم اختبارها.

وعلى الرغم من وجود اختلافات بين مستويات SAR لمختلف طرازات هاتف LG، فهي كلها مصممة بحيث تقي بالإرشادات المتعلقة بالتعرض للموجات اللاسلكية.

حد SAR الذي توصي به اللجنة الدولية للحماية من الإشعاع غير المؤين Commission on Non-Ionizing Radiation Protection (ICNIRP) هو 2 واط/كغ وهو حد مقسم على نحو متناسب إلى 10 غرامات من النسيج.

• أعلى قيمة SAR لطراز الهاتف هذا الذي تم اختياره بواسطة DASY4 للاستخدام على الأذن تعادل 0.489 واط/كيلوجرام (10 غرام) وعند الحمل على الجسد تكون 0.949 واط/كيلوجرام (10 غرام).

• معلومات بيانات SAR للمقيمين في بلدان/ مناطق تتبنى حد SAR الموصى به من قبل معهد المهندسين الكهربائيين والإلكترونيين Electrical and Electronics Engineers (IEEE) هو 1.6 واط/كغ متوسط لكل غرام واحد (1) من النسيج.

## العناية بالمنتج وصيانتته



تحذير

استخدم فقط البطاريات والشواحن والملحقات الموافق على استخدامها لطراز الهاتف المعين هذا. فاستخدام أي أنواع أخرى قد يجعل أي كفالة أو موافقة تنطبق على الهاتف غير صالحة، وقد يكون خطيراً.

• لا تقم بتفكيك الوحدة. اعمل على نقل الوحدة إلى تقني صيانة مؤهل عندما تكون بحاجة إلى تنفيذ عمل ما عليها لإصلاحها.

• ضع هذه الوحدة في مكان بعيد عن الأجهزة الإلكترونية مثل أجهزة التلفزيون، والراديو، وأجهزة الكمبيوتر الشخصي.

• يجب إبقاء الوحدة بعيدة عن مصادر السخونة مثل الأجهزة المشعة للحرارة أو الأفران المنزلية.

- تجنب إسقاط الوحدة.
- لا تعرّض هذه الوحدة للاهتزاز الميكانيكي أو الصدمات.
- أوقف تشغيل الهاتف في أي منطقة حيث القوانين الخاصة تطالبك بذلك. على سبيل المثال، لا تستخدم الهاتف في المستشفيات إذ قد يؤثر على المعدات الطبية الحساسة.
- لا تمسك الهاتف بيدين رطبتين فيما يكون شحنه جارياً. فقد يتسبب هذا الأمر بحدوث صدمة كهربائية أو إلحاق ضرر بالغ بالهاتف.
- يجب عدم شحن الهاتف بالقرب من مواد قابلة للاشتعال إذ قد يصبح الهاتف ساخناً وقد يؤدي ذلك إلى اندلاع حريق.
- استخدم قطعة قماش جافة لتنظيف الوحدة من الخارج (لا تستخدم مواد مذيبة كالبنزين أو التينر أو الكحول).
- لا تشحن الهاتف عندما يكون موضوعاً على أثاث ناعم.
- يجب أن يتم شحن الهاتف في منطقة ذات تهوية جيدة.
- لا تعرّض هذه الوحدة للدخان أو الغبار الزائد.
- لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر النقل؛ فقد يؤثر ذلك على المعلومات الموجودة على الأشرطة المعدنية.
- لا تضغط على الشاشة بواسطة شيء حاد إذ قد يؤدي ذلك إلى إلحاق الضرر بالهاتف.
- لا تعرّض الهاتف للسوائل أو الرطوبة.
- استخدم الملحقات كسماعات الأذن مثلاً بحذر. لا تلمس الهوائي دون وجود سبب يدعوك إلى ذلك.

### تشغيل فَعَال للهاتف

#### الأجهزة الإلكترونية

- قد تعرّض كل الهواتف المحمولة للتشويش، مما قد يؤثر على أداؤها.
- لا تستخدم الهاتف المحمول بالقرب من الأجهزة الطبية دون طلب الإذن للقيام بذلك. تجنّب وضع الهاتف على أجهزة ضبط النبض، مثلاً، في الجيب على مستوى الصدر.
- قد تسبب بعض الهواتف المحمولة الإزعاج للأدوات المساعدة للسمع.
- قد يؤثر الحد الأدنى من التشويش على أجهزة التلفزيون، والراديو، والكمبيوتر الشخصي.

# توجيهات لاستخدام آمن وفعال

## السلامة على الطرقات

تحقق من القوانين والأنظمة المتعلقة باستخدام الهواتف المحمولة في المناطق أثناء القيادة.

- لا تستخدم هاتفاً محمولاً باليد أثناء القيادة.
- عليك دوماً تركيز كامل الانتباه على القيادة.
- استخدم مجموعة أدوات لا يدوية، إذا كانت متوفرة.

توقّف عند جانب الطريق قبل إجراء مكالمة أو الإجابة على المكالمة إذا كانت ظروف القيادة تستدعي ذلك.

• قد تؤثر طاقة RF على بعض الأنظمة الإلكترونية في المركبة مثل الاستريو ومعدات السلامة في السيارة.

• عندما تكون المركبة مزودة بكيس هوائي، عليك عدم إعاقة عمله بواسطة تجهيزات لاسلكية مثبتة أو محمولة. فقد يبطل ذلك عمل الكيس الهوائي أو قد يتسبب ذلك بإصابات خطيرة بسبب أداء غير صحيح.

• إذا كنت تستمع إلى الموسيقى أثناء تنفّلك، فتأكد من كون مستوى الصوت معقولاً بحيث تكون مدركاً لما يحيط بك. هذا الأمر يعتبر ملزماً خاصة بالقرب من الطرقات.

## تجنّب إلحاق الضرر بسمعك

قد يؤدي تعرّضك إلى أصوات عالية لفترات وقت طويلة إلى إلحاق الضرر بسمعك. ونوصي بالتالي بألا تقوم بتشغيل الهاتف أو إيقافه عندما يكون قريباً من أذنيك. كما نوصي بتعيين مستوى صوت معقول للموسيقى والمكالمات.

## القطع الزجاجية

بعض قطع الجهاز المحمول مصنوعة من الزجاج. قد ينكسر الزجاج في حال وقع الجهاز على سطح صلب أو تلقى ضربة قوية. في حال انكسر الزجاج، لا تلمسه أو تحاول إزالته. توقّف عن استخدام الجهاز المحمول إلى أن يتم استبداله من قبل موثر خدمة معتمد.

## منطقة تفجير

لا تستخدم الهاتف في الأماكن حيث تكون عمليات التفجير جارية. التزم بالقيود، واتبع الأنظمة أو القوانين.

## مناطق تتسم أجواؤها بالقابلية للانفجار

- لا تستخدم الهاتف في نقطة إعادة التزويد بالوقود.
- لا تستخدم الهاتف بالقرب من الوقود أو المواد الكيميائية.
- لا تقم بنقل أو تخزين غاز أو سائل قابل للاشتعال، أو متفجرات في حجرة السيارة نفسها التي تحتوي على الهاتف المحمول وملحقاته.

## في الطائفة

- حافظ على نظافة الموصلات المعدنية الموجودة على البطارية.
  - استبدل البطارية عندما يصبح أداؤها غير مقبول. قد يعاد شحن البطارية مئات المرات قبل أن تصبح بحاجة إلى الاستبدال.
  - أعد شحن البطارية إذا كنت قد توقفت عن استخدامها لفترة وقت طويلة وذلك لزيادة صلاحية استعمالها إلى الحد الأقصى.
  - لا تعرض شاحن البطارية لنور الشمس المباشر أو لا تستخدمه في أماكن عالية الرطوبة، مثل الحمام.
  - لا تترك البطارية في الأماكن الساخنة أو الباردة، فقد يؤدي ذلك إلى التراجع في أداء البطارية.
  - هناك خطر انفجار، إذا تم استبدال البطارية ببطارية أخرى من نوع غير صحيح.
  - تخلص من البطاريات المستعملة طبقاً لتعليمات الشركة المصنعة. يرجى إعادة التصنيع عندما يكون ذلك ممكناً. لا تتخلص منها كمهملات منزلية.
  - إذا كنت بحاجة إلى استبدال البطارية، فقم بأخذها إلى أقرب فرع للصيانة أو وكيل معتمد من LG Electronics للمساعدة.
  - قم دائماً بفصل الشاحن عن المقيس بعد شحن الهاتف بالكامل لتفادي استهلاك الشاحن طاقة غير ضرورية.
- باستطاعة الأجهزة اللاسلكية أن تتسبب بحوث تشويش في الطائفة.
- أوقف تشغيل الهاتف المحمول قبل الصعود على متن أي طائرة.
  - لا تستعمله على الأرض دون الحصول على إذن من قبل طاقم الطائفة.

## أطفال

- ضع الهاتف في مكان آمن بعيداً عن متناول الأطفال. فهو يحتوي على أجزاء صغيرة قد تنفصل عنه وتتسبب بالاختناق.

## مكالمات الطوارئ

- قد لا تكون مكالمات الطوارئ متوفرة ضمن كافة شبكات الهاتف المحمول. وبالتالي عليك ألا تعتمد فقط على هاتفك المحمول لمكالمات الطوارئ. تحقق من ذلك مع موفر الخدمات المحلي لديك.

## معلومات حول البطارية والعناية بها

- لست بحاجة إلى إفراغ البطارية بشكل كامل قبل إعادة شحنها. وبخلاف أنظمة البطاريات الأخرى، ليس هناك من تأثير للذاكرة يمكنه تخفيض أداء البطارية.
- استخدم بطاريات وشواحن LG فقط. فشواحن LG مصممة لإطالة فترة عمل البطارية.
- لا تعمل على تفكيك البطارية أو تعريضها لحدوث تماس.





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## KS360 User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact KS360 phone by LG, designed to operate with the latest digital mobile communication technology.

SET UP	01
YOUR STANDBY SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
BROWSER	06
SETTINGS	07
ACCESSORIES	08

# Contents

<b>01 SET UP</b>	
Getting to know your phone .....	7
Open view .....	8
Installing the SIM and battery .....	10
<b>Memory card</b> .....	<b>13</b>
Installing a memory card .....	13
Removing a memory card .....	13
Formatting a memory card .....	13
<b>Menu map</b> .....	<b>14</b>
<b>02 YOUR STANDBY SCREEN</b>	
Your standby screen .....	15
The status bar .....	15
<b>03 THE BASICS</b>	
<b>Calls</b> .....	<b>16</b>
Making a call .....	16
Making a call from your contacts .....	16
Answering and rejecting a call .....	16
Adjusting the call volume .....	17
Speed dialling .....	17
Viewing your call logs .....	17
Using call divert .....	18
Using call barring .....	18
Changing the call settings .....	19
<b>Contacts</b> .....	<b>20</b>
Searching for a contact .....	20
Adding a new contact .....	20
Contact options .....	20
Adding a contact to a group .....	21
Renaming a group .....	21
Adding a picture to a contact .....	21
Copying your contacts to your SIM .....	22
Deleting all your contacts .....	22
Viewing information .....	22
<b>Messaging</b> .....	<b>23</b>
Messaging .....	23
Sending a message .....	23
Entering text .....	24
Text input mode using the keypad .....	24
Setting up your email .....	24
Sending an email using your new account .....	24
Message folders .....	25
Managing your messages .....	25
Using templates .....	26
Changing your text message settings .....	27
Changing your multimedia message settings .....	27
Changing your email settings .....	28
Changing your other settings .....	28

## 04 GET CREATIVE

<b>Multimedia</b> .....	29
Taking a quick photo .....	29
Before you've taken your photo .....	29
After you've taken your photo .....	30
Using the quick settings .....	30
Changing the image size .....	31
Viewing your saved photos .....	31
Setting a photo as Wallpaper or Picture ID ..	31
Shooting a quick video .....	32
After you've shot your video .....	32
Getting to know the viewfinder .....	33
Using the quick settings .....	33
Watching your saved videos .....	33
Adjusting the volume when viewing a video .....	33
MP3 player .....	34
Transferring music onto your phone .....	34
Playing a song .....	34
Using options while playing music .....	34
Creating a playlist .....	35
Playing a playlist .....	35
Editing a playlist .....	35
Deleting a playlist .....	36
Using the FM radio .....	37
Searching for stations .....	37
Resetting channels .....	37
Listening to the radio .....	37
Using the voice recorder .....	38
Recording your voice memo .....	38
Sending a voice recording .....	38
<b>My stuff</b> .....	39
Images .....	39
Images options menu .....	39
Sending a photo .....	40
Organising your images .....	40
Deleting an image .....	40
Deleting multiple images .....	40
Creating a slide show .....	41
Sounds .....	41
Using a sound .....	41
Videos .....	41
Watching a video .....	41
Using options while video is paused .....	42
Sending a video clip .....	42
Video options menu .....	42
Documents .....	43
Viewing a document .....	43
Others .....	43
External memory .....	43
<b>Games and Applications</b> .....	44
Games and Applications .....	44
Playing a game .....	44
Viewing applications .....	44
Changing the network profile .....	44

# Contents

## 05 GET ORGANISED

<b>Organiser &amp; Tools.....</b>	<b>45</b>
Adding an event to your calendar.....	45
Editing a calendar event.....	45
Sharing a calendar event.....	46
Adding a memo.....	46
Setting your alarm.....	46
Using your calculator.....	47
Using the stopwatch.....	47
Converting a unit.....	47
Adding a city to your world clock.....	47
SIM services.....	48

## 06 BROWSER

<b>Browser.....</b>	<b>49</b>
Accessing the web.....	49
Enjoying Yahoo!.....	49
Adding and accessing your bookmarks ...	49
Accessing a saved page.....	50
Viewing your browser history.....	50
Changing the web browser settings.....	50

## 07 SETTINGS

<b>Settings.....</b>	<b>51</b>
Changing your profiles.....	51
Personalising your profiles.....	51
Changing your date & time.....	51
Changing the language.....	51
Changing your display settings.....	52
Changing your security settings.....	52
Using flight mode.....	53
Using power save.....	53
Resetting your phone.....	53
Viewing memory status.....	53
Changing your Bluetooth settings.....	53
Changing your connectivity settings.....	53
Pairing with another Bluetooth device.....	54
Using a Bluetooth headset.....	54
Using your phone as a mass storage device..	55
Transferring a file to your phone.....	55
Sending and receiving your files using Bluetooth.....	56

## 08 ACCESSORIES

<b>Accessories.....</b>	<b>57</b>
<b>Network service.....</b>	<b>58</b>
<b>Technical data.....</b>	<b>58</b>
General.....	58
Ambient Temperatures.....	58

<b>Guidelines for safe and efficient use.....</b>	<b>60</b>
---	-----------

# Getting to know your phone



01

02

03

04

05


06

07

08

# Open view



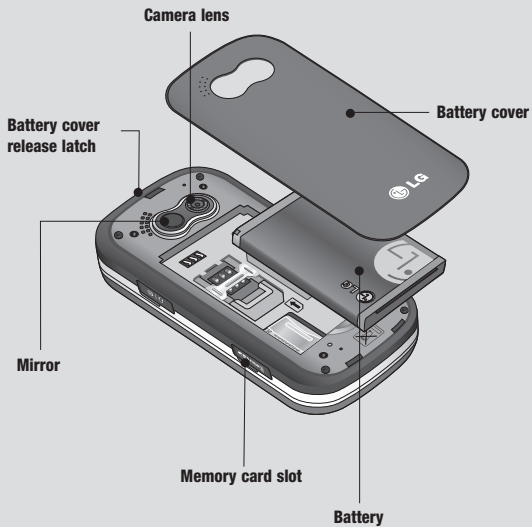

01

02

03

04

05

06


07

08

# Installing the SIM and battery

## 1 Remove the battery cover

Press the battery cover release latch. The battery cover should lift off easily.

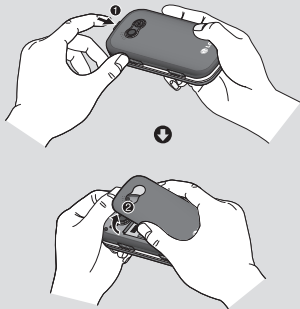

## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.




**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the SIM card


Slide the SIM card into the SIM card holder. Make sure that the gold color contact area on the card is facing downwards. To remove the SIM card, push it out of the holder from the top.

**⚠ WARNING:** Do not insert the SIM card when the keyboard is open, as this may damage your phone and SIM card.

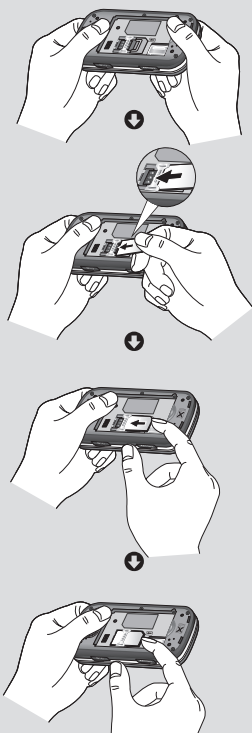

#### 4 Install the battery


Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

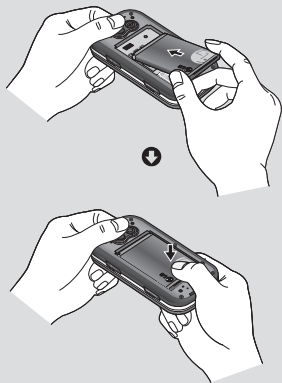

# Installing the SIM and battery

## 5 Replace the battery cover

Insert the bottom of the battery cover and push down until it clicks into place.

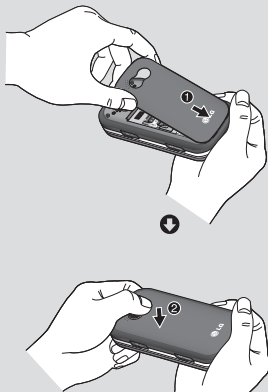

## 6 Charging your phone

Pull open the cover of the charger socket on the side of your KS360. Insert the charger and plug into a mains electricity socket. Your KS360 will need to be charged until a message reading Battery Full appears on screen.

**⚠ WARNING:** Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.



# Memory card

## Installing a memory card

You can expand the memory space available on your phone using a memory card.

**TIP!** A memory card is an optional accessory.

Open the memory card slot. Slide the memory card into the slot cover, until it clicks into place. Make sure that the gold contact area is facing downwards.



## Removing a memory card

Open the cover and carefully remove the memory card by gently pushing it in to the phone and quickly releasing it, as shown in the following diagram:



## Formatting a memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen press **OK** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.

**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

01

02

03

04

05

06

07

08

# Menu map



## Games & Apps

- 1 Games
- 2 Applications
- 3 Network profile



## Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



## Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



## Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder



## Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



## My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 External memory



## Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



## Organiser

- 1 Calendar
- 2 Memo



## Tools

- 1 Alarm clock
  - 2 Calculator
  - 3 Stopwatch
  - 4 Unit converter
  - 5 World clock
  - 6 SIM services\*
- \*This feature depends on SIM and the network services. If your operator supports SIM Tool Kit then this menu will appear.



## Browser

- 1 Home
- 2 Yahoo!
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



## Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection



## Settings








- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status









# Your standby screen

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth is active.

Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set
	New message

Icon	Description
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty

01

02

03

04

05





06

07

08


# Calls

## Making a call


- 1 Make sure your phone is on.
- 2 The fastest way to make a call is to activate touch mode by pressing . If you press this key, you can touch the screen to enter the phone number to call. Or, you can use the keypad after opening the slide. To delete a digit press  or the back arrow.
- 3 Press  to initiate the call.
- 4 To end the call, press  or slide the keypad closed.

**TIP!** To enter + when making an international call, touch and hold **0**.

## Making a call from your contacts


- 1 Select **Contacts** in the menu and choose Search.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the contact.
- 3 Press  to initiate the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing, then select Silent to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press , select **Settings** and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Accept key only**.


## Adjusting the call volume

To adjust the volume during a call, press the volume key on the left hand side of your phone.

## Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Menu** and choose **Contacts**, then select **Speed dials**.
- 2 Your voicemail is set to speed dial 1 and you cannot change this. Select any other number either by using the navigation keys and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation keys, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

## Viewing your call logs

Press **Menu** or , select **Call history**. Choose to view:

**All calls** - View a complete list of all your dialled, received and missed calls.

**Missed calls** - View a list of any calls you have missed.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Call duration** - View details of how long you have spent on your calls; received and dialled.

**Call costs** - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.


**Data information** - View the amount of all your received and sent data in kilobytes.

**TIP!** From any call log select **Options** and choose **Delete** to delete selected items.

**TIP!** Using the navigation keys, highlight any single call entry to view the date and time of the call.

# Calls

## Using call divert

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no reply, when you are out of reach, all data calls or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

**Note:** Charges are incurred for diverting calls. Please contact your network provider for details.


**TIP!** To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

## Using call barring

- 1 Press **Menu** or  , select **Settings** and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international except home country**
  - All incoming**
  - Incoming when abroad**
  - Cancel all barrings**
  - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the call settings

- 1 Press **Menu** or , select **Settings** and choose **Call**.
- 2 From here you can amend the settings for:

**Call divert** - Choose whether to divert your calls.

**Call barring** - Select which calls you would like to be barred.

**Fixed dial number** - Choose a list of numbers that can be called from your phone.

**Answer mode** - Choose whether to answer the phone using only the accept key, any key or by sliding your handset open.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Call waiting** - Be alerted when you have a call waiting.

**Minute minder** - Select **On** to hear a tone every minute during a call.

**Auto redial** - Choose that the phone will automatically try to redial in the case of failure to connect a call.

**Send DTMF tones** - You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call. This option is helpful for entering a password or account number when you call an automated system, like a banking service.

01

02

03

04

05

06

07

08

# Contacts

## Searching for a contact

- 1 Select **Contacts** from the main menu and choose **Search**.
- 2 Using the keypad or touchpad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

## Adding a new contact

- 1 Select **Contacts** and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have in the fields provided and select **Save**.

Or, use a slightly quicker method...

- 1 Enter the number you wish to store and press **Options**.
- 2 Choose **Save** or **Add to existing contact**.
- 3 Enter the relevant information as above and select **Save**.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use the Options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options.

From here you can:

**Edit** - Change any of the contact's details.

**New message** - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

**Send via** - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth** or by **Email**.

**Delete** - Delete the contact. Select **Yes** if you are sure.


**New contact** - Add a new contact.

**Multi delete** - Mark multiple contacts to delete.

**Copy to SIM/phone** - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

## Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **VIP**, **Group 1**, **Group 2** and **No group** already set up on the phone.

- 1 Select **Contacts** and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and select **View** then select **Add**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.
- 4 Select **Yes** if you are sure.

**TIP!** You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to, select **Options** and choose the item you want.

## Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Select **Contacts** and choose **Groups**.
- 2 Select the group you want to rename.
- 3 Choose **Options**, select **Rename** and enter your new group name.
- 4 Select **Save**.

**Note:** You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not SIM) memory.

## Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.

# Contacts

- 5 Scroll down to the **Photo** section. Choose **Options** and select **Images** or **New image**. If you select **Images**, you can choose an image that is saved in your phone memory. If you select **New image**, your camera viewfinder will open, so you can take a picture of your contact. Take the picture then press set.
- 6 Select **Save**.

## Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Select **Contacts** and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

## Deleting all your contacts

- 1 Select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Select **Yes** if you are sure.
- 4 Enter the password, which is set to 0000 as default, and select **OK**.

## Viewing information

Select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own number** and your **Business card**.

**TIP!** If you haven't yet created a business card, the **Business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.



# Messaging

## Messaging

Your KS360 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) Email, Bluetooth message, as well as the network's service messages.

Simply press  and select **Messaging**.

## Sending a message

- 1 Press **Menu** or , select **Messaging** and choose **New message**. Or, a quicker way is to press  on the keypad when the slide is open.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. Message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using the keypad. See page 24 for more information on how to enter text.

- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject** or **More (Contact/ My business card/Schedule)**.
- 6 Choose **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.



**WARNING:** If an **Image, Sound, Video, New slide** or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

01

02

03

04

05

06

07


08


# Messaging

## Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).


To input a symbol in the text entry field, press the  key and select a symbol, then select **OK**. Scroll using the navigation keys to show more symbol options.

Complete each word with a space by pressing .

To delete a character, press .


## Text input mode using the keypad

When you are required to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making call, the keypad number keys will default to numbers.

In Abc mode you can enter numbers by first pressing  and then the number you require.


## Setting up your email

You can stay in touch on the move using email on your KS360. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu** or , select **Messaging** and choose **Settings**.
- 2 Select **Email** then **Email account**.
- 3 Select **New**.


## Sending an email using your new account

To send/receive an email, you should set up an email account (see above).

- 1 Press , select **Messaging** and choose **New message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject then press **OK**.
- 4 Enter your message using the keypad.
- 5 Select **Options** and choose an attachment to add: **Image, Sound, Video, Document, Contact, My business card, Schedule** or **Others**.

- 6 Press **Send** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Send** and your email will be sent.

## Message folders

Press **Menu** or , select **Messaging**. The folder structure used on your KS360 is fairly self-explanatory.

**Inbox** - All the messages you receive are placed into your Inbox. From here you can reply, forward and more, see below for details.

**Email box** - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your KS360 will connect to your email account and retrieve your new messages.

**Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent** - All the messages you send are placed into your Sent folder.

**Listen to voicemail** - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

**Info messages** - All info messages and updates received from your operator.

**Templates** - A list of useful messages, already written for a quick reply.

## Managing your messages

You can use your **Inbox** to manage your messages.

- 1 Press **Menu** or , select **Messaging** and choose **Inbox**.

- 2 Select **Options** and then choose to:

**Delete** - Delete the selected message.

**Reply** - Send a reply to the selected message.

**Forward** - Send the selected message on to another person.

**Return call** - Call the person who sent you the message.

**Threaded view/General view** - Choose the way messages are displayed in your inbox.

01

02

03

04

05

06

07

08

# Messaging

**Information** - View the details of a message, for example, the time it was sent.

**Copy/Move** - Choose to copy or move the selected message to the SIM card or phone.

**Multi delete** - Delete selected messages.

**Delete all read** - All opened messages will be deleted.


**Delete all** - Delete text messages, multimedia messages or all messages.

If you see the message **No space for SIM message**, you should delete some messages from your inbox which are stored in SIM Card.

If you see the message **No space for messages**, you can delete either messages or saved files to create space.

## Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

- 1 Press **Menu** or , select **Messaging** and choose **Templates**.
- 2 Choose **Text** or **Multimedia**. You can then select **Options** and choose **Edit** to change existing templates, to add **New template** or to **Delete** templates.
- 3 To send a template, select the one you want to send, choose **Options** and select **Send via**.
- 4 Choose how you would like to send the template, as a **Message, Bluetooth message** or **Email**.
- 5 Choose a contact and select **Send**.

## Changing your text message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu** or **OK**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

**Message type** - Convert your text into Voice, Fax, Paging, X.400, Email or ERMES.

**Validity period** - Choose how long your message is stored at the message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Reply charging** - Choose to be billed for your message recipient's reply.

**Message centre number** - Enter the details for your message centre.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

**Send long text as** - Choose whether to send your message as SMS or MMS when you enter a text longer than 2 pages in the message field.

**Bearer setting** - Choose whether to send your messages via GSM or GPRS.

## Changing your multimedia message settings

Your KS360 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu** or **OK**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

**Slide duration** - Choose how long your slides appear on screen.

**Priority** - Choose the priority level of your multimedia message.

**Validity period** - Choose how long your message is stored at the message centre.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read report** - Choose to allow and/or send a read report.

01

02

03

04

05

06

07

08

# Messaging

**Auto download** - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Network profile** - Select an operator specific network profile for sending multimedia messages.

**Permitted message type** - Select which type of multimedia messages to allow.

## Changing your email settings

You can adapt your email settings to your own preferences.

1 Press **Menu** or , select **Messaging** and choose **Settings**.

2 Select **Email** then you can adapt the following settings:


**Email account** - You can set up an email account.

**Access point** - You can set the email access point.

**Retrieve interval** - Choose how often your KS360 checks for new email messages.

**Signature** - Create an email signature and switch this feature on.

## Changing your other settings

Press **Menu** or , select **Messaging**, choose **Settings** then:

**Voicemail number** - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.


**Push message** - Change your service message settings.


**Info message** - Choose the reception status, alerts and language of your info messages.

**Save text message** - Choose whether to save your text messages to the phone memory or to the external memory.

# Multimedia


## Taking a quick photo


- 1 Hold the camera key down on the left side of the handset. The camera viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press  or press the camera key all the way down to take a photo.


**Note:** You can also access the camera menu from the standby screen. Press  and select **Multimedia**. Select **Camera** to open the viewfinder.


## Before you've taken your photo


Press  to access these options:

 **Self timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

 **Multi shot** - This enables you to take up to 9 shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

 **White balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Fluorescent** or **Night mode**.

 **Colour effect** - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **EV** - Exposure values, represented by numbers with a plus or minus. When the main subject is darker than the background, increase exposure value. If the subject is much lighter than the background, decrease exposure value.

01

02

03

04

05

06

07

08

# Multimedia

## After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen and you will see six options displayed on the left side of the screen.

**OK** - Select to take another photo straightaway. Your current photo will be saved.



**New image** - Take another photo straightaway. Your current photo will be saved.



**Set as** - Select to open a sub menu to set your image as **Wallpaper** or **Picture ID**.



**Send via** - Select to send the photo as a **Multimedia message** or **Email, Bluetooth**. See page 23 for **Sending a message**.



**Album** - Select to look at the other photos in your album. Your current photo will be saved. See page 31 for **Viewing your saved photos**.

**Delete** - Delete the photo you have just taken and confirm by selecting **Yes**. The viewfinder will reappear.

## Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

**Video camera** - Convert from camera mode to video camera mode.

**Display** - Choose Standard or Clean mode.

**Resolution** - See **Changing the image size** on page 31.

**Quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper a photo will be. The file size will increase as a result, which means you will be able to store fewer photos in your memory.

**Shutter tone** - Select one of the three shutter sounds.

**Save to** - Choose whether to save your photos to the phone memory or to the external memory.


**Reset settings** - Choose **Yes** to reset your phone to the original camera settings.

## Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **Options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the four numerical options (320x240, 640x480, 1280x960, 1600x1200).
- 3 Press **OK** to implement your changes.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply press **Album**. From the standby screen you should press **Menu** or  , then select **My stuff** and **Images**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to enlarge it.

## Setting a photo as Wallpaper or Picture ID


From your image gallery, use the navigation keys to select an image and choose **Options** and **Set as** to use the selected image as **Wallpaper** or **Picture ID** for one of your contacts. When you set the photo as Picture ID you can choose which part of the photo to use.

**Note:** Picture ID can only be added to contacts saved to your phone, not your SIM.

# Multimedia

## Shooting a quick video


- 1 Quickly press the camera key on the left side of the handset.
- 2 Choose **Video camera**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press the camera key on the left side of the handset to start recording.
- 5 **REC** will appear in the bottom right corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.


**Note:** You can also access the **Video camera** from the standby screen. Press  and select **Multimedia**, scroll down and select **Video camera** to open the viewfinder.


## After you've shot your video


The name of the video runs along the bottom of the screen and six options will be displayed on the left side of the screen.

**OK** - Select to record another video straight away. Your current video will be saved.

 **New video** - Select to shoot another video straight away. Your current video will be saved.

 **Play** - Select to play the video you have just recorded.

 **Send via** - Select to send the video as a **Multimedia message** or **Email**. See page 23 for **Sending a message**.

 **Video album** - Select to look at the other video clips in your album. Your current video clip will be saved. See page 33 for **Watching your saved videos**.

**Delete** - Delete the video you have just recorded and confirm by selecting Yes. The viewfinder will reappear.

## Getting to know the viewfinder

**Note:** You can adjust the zoom using the volume keys on the left side of the phone.

## Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

**Camera** - Convert from video camera mode to still camera mode.

**Display** - Choose Standard or Clean mode.



**Resolution** - If you want to fit more videos on your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 176x144, 320x240.

**Quality - Super fine/ Fine/ Normal.**

**Save to** - Choose whether to save your video clip to the phone memory or to an external memory.

**Reset settings** - Choose **Yes** to reset your phone to the original video camera settings.

## Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder select **Album**. From the standby screen you should press **Menu** or , then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to select the video you want to view and press  to watch it.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the volume keys on the left side of the handset. The volume level is shown below the video, on the left hand side.

01

02

03

04

05

06

07

08

# Multimedia

## MP3 player

Your LG KS360 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, press **Menu** or  and select **Multimedia** then **MP3 player**. From here you have access to:

**All songs** - Contains all of the songs you have on your phone.

**My playlist** - Contains any playlists you have created as well as **On the go**, **Recent songs** and **Favourite songs**.







**Settings** - Adjust your music settings.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

## Playing a song

- 1 Press **Menu** or  and select **Multimedia**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select .
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

**TIP!** To change the volume while listening to music, use the volume keys on the left side of your phone, or the up and down navigation keys.

## Using options while playing music

Select **Options** and choose from:

**Minimise** - Hide the music player screen so that you can continue using your phone as normal while music is playing.

**View playlist** - Look at the playlist you are currently listening to.

**Search** - Search for a track from the list of songs on your phone.

**Add to playlist** - Adds the current track to a playlist.



**Set as** - Set the current track as your **Ringtone** or **Message tone**.

**Information** - You can view information about the music file you are listening to.



**Settings** - Change the Shuffle, Play mode or Equalizer settings.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **New**, enter the playlist name and press **Save**.
- 4 The **New playlist** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Save** to store the playlist.


## Playing a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Select the playlist you would like to play and select **View**, then select .

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

**Play** - You can play the selected music.

**Add to Playlist** - You can add songs to the playlist using this option.

01

02

03

04

05

06

07

08

# Multimedia


**Remove** - Remove a song from the playlist. Select **Yes** to confirm.

**Multi delete** - Select and delete songs from the playlist.

**Remove all** - Remove all of the songs from the playlist.

**Information** - Select to view information.

## Deleting a playlist

- 1 Press **Menu** or  and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and select **Yes** to confirm.

## Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

## Using the FM radio


Your LG KS360 has an FM radio feature so you can tune in to your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen to the radio. Insert the plug into the headset socket (this is the same socket that you plug your charger into).


## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your KS360 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.


To manually tune:

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select a channel number that you want to save a station to and choose **Edit**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **Save**.


**Note:** You can also edit the stations you have saved in a channel number.

**TIP!** To improve the reception extend the headset cord, which functions as the radio antenna.

## Resetting channels

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

## Listening to the radio

- 1 Press **Menu** or  and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.




**Note:** You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

# Multimedia

## Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

## Recording your voice memo

- 1 Press **Menu** or  and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Pause** to pause the recording.
- 4 Choose **Stop** to end the recording.
- 5 Select  to listen to the recording.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Album**.


## Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**TIP!** If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode** and choose **MMS**. This will ensure that the recording fits into a message.

# My stuff

You can store any multimedia files in your phone memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone memory.

All your multimedia files will be saved in **My stuff**. Press **Menu** or  then select **My stuff** to open a list of folders.

## Images

**Images** contains a folder of default images and default flash files pre-loaded onto your phone, images downloaded by you and images taken on your phone camera.

## Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **Sort by** and **View style** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

**Delete** - Delete the selected image.

**Set as** - Set the selected image as your **Wallpaper** or as a **Picture ID**.

**Send via** - Send the selected image to a friend via **Multimedia message**, **Bluetooth** or **Email**.

**Note:** The image may need to be resized before it can be sent by MMS.

**File - Edit image, Rename, Make animation** or view the **Information** (Name, Size, Date, Time, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

**Print via** - Print an image file via **Bluetooth** or **Pictbridge**.

**Slide show** - Watch a slide show of your images. See **Creating a slide show** on page 41 for more information.

**New folder** - Create a new folder within the main Images folder.

**Mark/Unmark** - Select more than one image to delete or **Copy** or **Move**.

**Delete all** - Delete all the photos in your Images folder.

01

02

03

04

05

06

07


08

# My stuff


**Sort by** - Arrange your images by **Date**, **Type** or **Name**.

**View style** - Change the way you view your photos.


## Sending a photo

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.




## Organising your images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

## Deleting an image


- 1 Press  then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete** and confirm by pressing **Yes**.

## Deleting multiple images

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** and select **Mark/Unmark** and **Delete**.
- 4 A box will appear next to each image. Select  to mark each image. To unmark an image, select  again so that the tick disappears from the box. Or, you can select **Options** then choose **Mark all** or **Unmark all**.
- 5 Once you have marked all of the appropriate boxes, select **Done** and confirm you want to delete all of the marked images.

## Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.



- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Pause** to pause the slide show and **Quit** to end the slide show and return to the **Images** folder.

During the slide show, press **Options** to choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

## Sounds

The **Sounds** folder contains the **Default** sounds, your **Voice recordings** and sound files downloaded by you. From here you can manage, send or set sounds as ringtones.



## Using a sound

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and press  to listen to it.
- 5 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID** and **Message tone**.

## Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

## Watching a video

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press .

01

02

03

04

05

06

07

08

# My stuff

## Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

**Delete** - Delete the video.

**Send via** - Send the video to a friend via **Multimedia message, Bluetooth** or **Email**.

**Information** - View the Name, Size, Date, Time, Type and Copyright details of the selected file.

## Sending a video clip

- 1 Press **Menu** or  then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.
- 4 Press **Send via** and choose from **Multimedia message, Bluetooth** or **Email**.
- 5 If you choose **Multimedia Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

**Note:** The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all.

## Video options menu

In the **Videos** folder highlight a video and press **Options** to bring up the following list of options.

**Delete** - Delete the selected video.

**Send via** - Send the selected video to a friend via **Multimedia message, Email** or **Bluetooth**.

**File** - Rename the video or view the information (Name, Size, Date, Time, Type and Copyright).

If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

**New folder** - Create a new folder within the main Videos folder.

**Mark/Unmark** - Select more than one video clip before selecting **Delete**.

**Delete all** - Delete all the clips in your Videos folder.

**Sort by** - Arrange your videos by **Date, Type** or **Name**.

**Auto next play** - Allows to set the play mode: **Off, Repeat once** and **Repeat all**.


- **Off**: Plays the selected file.
- **Repeat once**: Plays all files in a list once.
- **Repeat all**: Continues to play all files in a list repeatedly.

**List view / Thumbnail view** - Change the way you view your videos.

## Documents

From the **Documents** menu.

### Viewing a document

- 1 Press **Menu** or  then select **My stuff**.
- 2 Select **Documents**.
- 3 Select a document and press **View**.

## Others

From the **Others** menu, you can view the files which are not saved in the Images, Sounds, Videos or Documents folders.

You may find that when you transfer files from your computer to your phone, they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

## External memory

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images, Sounds, Videos, Documents** and **Others**. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

01

02

03

04

05

06

07


08

# Games and Applications

## Games and Applications

Your KS360 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.


### Playing a game

- 1 Press **Menu** or  and select **Games & Apps** and then **Games**.
- 2 You can download games from site, and then enjoy it.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.


### Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** or  and select **Games & Apps** and then **Applications**.
- 2 View and manage any applications you have.


## Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** or  and select **Games & Apps** and then **Network profile**.
- 2 You can add and edit a new network profile.


# Organiser & Tools

## Adding an event to your calendar

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **New schedule** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.

- 6 Scroll down once more to select whether the event is occurring **Once** or repeated at **Daily**, **Weekly**, **Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days of any saved events.

## Editing a calendar event

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

**Note:** You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

01

02

03

04

05


06

07


08

# Organiser & Tools

## Sharing a calendar event


- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

## Adding a memo

- 1 From the standby screen press **Menu** or , and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Options** then **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.


**TIP!** You can edit an existing memo. Select the one you want to edit, press **Options** and select **Edit**.

## Setting your alarm


- 1 From the standby screen press **Menu** or , and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**, or **Choose weekday**.
- 5 Scroll down and choose whether you would like the alarm to **Always sound**, **Always vibrate** or **Follow profile**.
- 6 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Select **Save**.

**Note:** You can set up to 5 alarms.


## Using your calculator

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.


## Using the stopwatch

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if want to record a lap time. Up to 20 lap times can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch at the time you stopped it at or select **Reset** to return to zero.

## Converting a unit

- 1 From the standby screen press **Menu** or , and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

## Adding a city to your world clock

- 1 From the standby screen press **Menu** or , and select **Tools**, then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Select **Zoom in** to zoom into an area and choose from the cities in that area.
- 4 Press **Set**.

# Organiser & Tools

## **SIM services**


This feature depends on SIM and the network services.

If the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

# Browser

With a browser at the tip of your fingers, you can get up to date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

## Accessing the web

- 1 Press **Menu** or  and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Or select **Enter address** and type in your desired URL, followed by **Connect**.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Enjoying Yahoo!

You can surf the web quickly and easily by selecting this menu.

## Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05


06

07

08


# Browser

## Accessing a saved page


- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

**TIP!** This menu will also allow you to delete saved pages.

## Viewing your browser history

- 1 Press **Menu** or  and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

## Changing the web browser settings


- 1 Press **Menu** or  and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles**, **Rendering mode**, **Cache**, **Cookies**, **Security certificates**, **Show image**, **JavaScript**, **Storage location**.
- 4 Once you have changed your settings, select **OK**.

# Settings

Within this folder you can adapt your settings to make your KS360 personal to you.


**Note:** For information on call settings see page 19.

## Changing your profiles

You can quickly change your profile from the standby screen. Simply press  using the navigation keys then the profile you would like to activate. Choose from **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.


## Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** or  and select **Profiles**.
- 2 Choose the profile you want and select **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list.

## Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

**Set date** - You can enter the current date.

**Date format** - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

**Set time** - You can enter the current time.

**Time format** - You can set the time format to either 24 hours or 12 hours.

**Auto update** - Select **On**, the phone will automatically update the date and time.

## Changing the language

Select **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

01

02

03

04

05


06

07

08

# Settings

## Changing your display settings

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Display** and choose from:

**Wallpaper** - Choose a wallpaper to appear on your screen display.

**Clocks** - Choose to have the time and date visible on your standby screen. Choose from

**No date & time** or **Normal**.

**Backlight timer** - Choose how long the backlight remains on for.

**TIP!** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80% or 100%, then select OK to save your change.

**Home screen shortcut** - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

**Font size** - Change the font size of the following : **Menu**, **Dialling** and **Messaging**.

**Theme** - Quickly change the whole look of your screen.

**Menu style** - Change the menu view from **Grid view** to **List view**.

**Main font style** - Adjust the font type.


**Dialling font style** - Adjust the font style for when you are dialling a phone number.

**Standby text** - Choose to add a message to your standby screen.

**Network Name** - Choose On or Off.

## Changing your security settings

Change your security settings to keep your KS360 and the important information it holds protected.

- 1 Press **Menu** or  and select **Settings**.
- 2 Select **Security** and choose from the list below:

**PIN code request** - Choose a PIN code to be requested when you turn your phone on.

**Auto key lock** - Choose how long before the keypad locks when the phone is not in use.

**Phone lock** - Choose a security code to lock your phone **When power on**, **When SIM changed** or **Immediately**.

**Anti-theft mobile tracker** - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you loose or misplace it.

The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number.

**Change codes** - Change your **Security code**, **PIN1 code**, **PIN2 code** or **ATMT code**.

## Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages when **Flight mode** is switched **On**.

## Using power save

Choose to switch the power saving settings **On** or **Off**.


## Resetting your phone

Use **Reset** in **Phone settings** to reset all the settings to the factory definitions. You need the security code to activate this function.

## Viewing memory status


Your KS360 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** or  and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card and External memory) in your KS360.

**TIP!** See page 13 for information on **inserting a memory card**.

## Changing your Bluetooth settings

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:


**My visibility** - Choose whether to **Show** or **Hide** your device to others.

**My name** - Enter a name for your KS360.

**My address** - View your Bluetooth address.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press **Menu** or  and select **Connectivity**. Your options are:

01

02

03

04

05

06

07

08

# Settings

**Bluetooth** - Set up your KS360 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

**Network** - Your KS360 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

**USB connection** - Choose **Data service** and synchronise your KS360 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select

**Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the KS360 removable device folder.

## Pairing with another Bluetooth device

By pairing your KS360 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **Show**.


- 2 Select **Device list** from the Bluetooth menu and choose **New**.
- 3 Your KS360 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your KS360 will then automatically connect to your Bluetooth headset and switch to headset profile.

## Using your phone as a mass storage device

Your KS360 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

- 1 Press **Menu** or  select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KS360. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

- 8 When you want to then access a file, for example an image, press **Menu** or , then select **My stuff** followed by **External memory** then **Images**. All the images you transfer will be contained in this file.

## Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

**Note:** Files sent using Bluetooth will be saved to the phone memory.

01

02

03

04

05

06

07

08


# Settings

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device** on page 54.

### To switch Bluetooth on:

- 1 Press **Menu** or  and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on if it is not already activated.

- 4 Your KS360 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** on page 53 for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

**Note** The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

# Accessories

These accessories were supplied with your KS360.

## Charger



## Stereo headset



## Battery



## User Guide

Learn more about your KS360.

### Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KS360

System : GSM 900 / DCS 1800 / PCS 1900

### Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KS360

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.6.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

18. JUN. 2008

  
Signature of representative

# Guidelines for safe and efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KS360 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

- The highest SAR value for this model phone tested by DAS4 for use at the ear is 0.489 W/kg (10g) and when worn on the body is 0.949 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

### WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
  - Keep away from electrical appliances such as TVs, radios, and personal computers.
  - The unit should be kept away from heat sources such as radiators or cookers.
  - Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient Use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

## Guidelines for safe and efficient Use

- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



