



GT505 使用手冊

LG ELECTRONICS INC.

GT505 使用手冊

繁體中文  
簡體中文  
ENGLISH



CE 0168 ⓘ

P/N : MMBB0343027 (1.0) H

Bluetooth QD ID B015339

此手冊中的部份內容可能會因手機程式之改良或各網絡商提供的服務而有所不同,這並不會另行通知。

## GT505 使用手冊





恭喜您購買了 LG 先進輕巧的 GT505 手機，本手機專為利用最新的數碼流動通訊科技而設計。

# 內容

了解您的手機 .....	8	變更一般通話設定 .....	25
手機背面 .....	10	變更視像通話設定 .....	26
安裝智能喲和電池 .....	11	<b>通訊錄 .....</b>	<b>27</b>
記憶喲 .....	14	搜尋通訊錄 .....	27
功能表地圖 .....	16	新增通訊錄 .....	27
<b>主屏幕 .....</b>	<b>17</b>	建立群組 .....	28
觸控屏幕提示 .....	17	變更通訊錄設定 .....	28
快捷鍵 .....	18	<b>訊息 .....</b>	<b>30</b>
狀態列 .....	19	訊息 .....	30
從狀態列變更狀態 .....	20	發送訊息 .....	30
使用多項工作功能 .....	20	輸入文字 .....	30
<b>通話功能 .....</b>	<b>21</b>	T9 模式 .....	31
撥打電話或視像通話 .....	21	Abc 模式 .....	31
透過通訊錄撥打電話 .....	21	設定電子郵件 .....	31
接聽來電和拒接來電 .....	21	透過新帳戶發送電子郵件 .....	33
通話中選項 .....	22	變更電子郵件設定 .....	34
調節通話音量 .....	23	訊息資料夾 .....	35
快速撥號 .....	23	使用範本 .....	35
撥打其他電話 .....	23	使用情感圖示 .....	35
關閉 DTMF .....	24	變更文字訊息設定 .....	35
檢視通話記錄 .....	24	變更多媒體訊息設定 .....	36
使用來電轉駁 .....	24	變更其他設定 .....	37
使用通話限制 .....	25	<b>相機 .....</b>	<b>38</b>
		快速拍照 .....	38
		完成拍照後 .....	38

了解取景器 .....	39	在相片中加入文字 .....	51
使用閃光燈 .....	40	在照片中加入效果 .....	51
調整曝光 .....	40	剪裁相片 .....	51
連環拍攝 .....	40	強化相片色彩 .....	52
使用進階設定 .....	41	轉換相片中的色彩 .....	52
變更圖像大小 .....	42	<b>多媒體 .....</b>	<b>53</b>
選擇色彩效果 .....	42	圖片 .....	53
使用內相機 .....	43	我的圖像選項功能表 .....	53
檢視已儲存照片 .....	43	發送照片 .....	53
<b>視像攝錄機 .....</b>	<b>44</b>	使用圖像 .....	54
拍攝快速影片 .....	44	標記圖像 .....	54
拍攝影片後 .....	44	移動或複製圖像 .....	54
了解取景器 .....	45	建立投影片播放 .....	55
調整曝光 .....	46	聲音 .....	55
使用進階設定 .....	46	使用聲音 .....	55
變更影片大小 .....	47	影片 .....	55
選擇色調 .....	47	在暫停影片時使用選項 .....	56
使用內視像攝錄機 .....	48	發送錄像片段 .....	56
觀看已儲存影片 .....	48	遊戲和應用程式 .....	56
<b>照片及影片 .....</b>	<b>49</b>	玩遊戲 .....	56
檢視照片及影片 .....	49	使用遊戲選項功能表 .....	57
檢視照片時使用縮放 .....	49	Flash 內容 .....	57
檢視影片時調節音量 .....	49	檢視 SWF/SVG 檔案 .....	57
將照片設定為待機圖片 .....	49	文件 .....	57
編輯照片 .....	50	檢視檔案 .....	57
		傳送檔案到手機 .....	57

# 內容

其他.....	58	慢跑夥伴.....	67
製作電影.....	58	<b>電腦同步.....</b>	<b>68</b>
音樂.....	59	在電腦上安裝 LG PC Suite.....	68
將音樂傳送至手機.....	59	連接手機和電腦.....	68
播放歌曲.....	60	備份和還原手機資訊.....	69
建立播放列表.....	60	檢視電腦上的手機檔案.....	69
刪除播放列表.....	60	同步處理通訊錄.....	69
使用收音機.....	61	同步訊息.....	70
搜尋電台.....	61	將手機用作大容量儲存裝置.....	70
重設頻道.....	61	<b>網絡功能.....</b>	<b>71</b>
收聽電台.....	61	瀏覽器.....	71
<b>記事簿.....</b>	<b>62</b>	存取網絡.....	71
新增事件至日曆.....	62	新增並存取書籤.....	71
變更預設日曆檢視.....	62	使用 RSS 讀取裝置.....	72
新增項目至待辦事項清單.....	63	儲存網頁.....	72
共用待辦事項工作.....	63	存取已儲存的網頁.....	72
使用日期搜尋器.....	63	檢視瀏覽器記錄.....	73
設定鬧鐘.....	64	變更網頁瀏覽器設定.....	73
新增備忘錄.....	64	將手機用作數據機.....	73
語音備忘錄.....	65	<b>設定.....</b>	<b>75</b>
錄製聲音或語音.....	65	變更屏幕設定.....	75
發送錄音.....	65	個人化情景模式.....	75
使用計算機.....	66	變更手機設定.....	75
轉換單位.....	66	更換觸控設定.....	76
使用秒錶.....	66	變更連接設定.....	76
新增城市至全球時間.....	67		

使用記憶體管理.....	78
使用飛航模式.....	78
使用藍芽發送和接收檔案.....	78
同其他藍芽裝置配對.....	80
使用藍芽耳機.....	80
Wi-Fi.....	81
軟件更新.....	83
配件.....	84
網絡服務.....	85
技術數據.....	85
安全及有效使用準則.....	87
故障排解.....	92

# 了解您的手機

內相機鏡頭

關閉/電源鍵

結束或拒接通話。  
開啟/關閉手機。  
按一下可返回主屏幕。

多項工作鍵

通話鍵

撥打電號碼及接聽來電。



**⚠ 警告：** 手機置於口袋中時，若將較重物體置於手機上，或坐在手機上會損壞手機的觸控屏幕功能。



記憶咭插槽



充電器、USB 線、免提插孔

**提示!** 如要連接 USB 線，請先開機並註冊到網絡。

側鍵

- 屏幕處於備用狀態時: 鈴聲或觸控音量。
- 在通話中: 耳機音量。
- 播放背景音樂時: 控制音量。

鎖定/解鎖按鍵

拍攝按鍵

# 手機背面



# 安裝智能啱和電池

## 1 取下電池蓋

推開手機電池蓋並提起電池蓋。



**⚠ 警告：**請勿使用指甲取出電池。

**⚠ 警告：**手機開機時，不要取下電池，因為這樣會損壞手機。

## 2 取下電池

握住電池上方邊緣，將電池拿出電池格外。



# 安裝智能咭和電池

## 3 安裝智能咭

將智能咭滑入智能咭插槽。請確保智能咭上的金屬接觸區面向下方。若要取出智能咭，請向相反方向輕輕拉出。



## 4 安裝電池

先將電池頂部頂入電池格上方邊緣。請確保電池觸點對準手機觸點。將電池的底部壓入定位。



## 5 為手機充電

打開GT505 側面的充電器插槽蓋。插入充電器並插入電源插座。為您的GT505 手機充電，直至屏幕上顯示「電池電量已滿」訊息。



# 記憶咭

## 安裝記憶咭

使用記憶咭，擴展手機可使用的記憶體空間。

**注意：**記憶咭是選購配件。


- 1 開啟記憶咭蓋。
- 2 將記憶咭放入插槽，直到卡緊為止。請確保金屬接觸區面向下。



- 3 合上記憶咭蓋。

## 格式化記憶咭

您的記憶咭可能已格式化了。若記憶咭尚未格式化，則在開始使用前需要進行格式化。



- 1 從主屏幕選擇 ，然後點按**設定**並選擇**手機設定**。
- 2 點按**記憶體管理**，然後選擇**外置記憶體**。
- 3 點按**格式化**並確認您的選擇。
- 4 若設定有密碼，則輸入密碼，且咭將被格式化，可隨時使用。

**提示!** 要變更預設儲存目標，請從「手機設定」功能表開啟「記憶體管理」並選擇「主要儲存裝置設定」。

**注意：**若記憶咭中包含內容，則其中內容會被記錄至正確的資料夾中，例如，影片會儲存到「我的影片」資料夾中。

## 傳輸通訊錄

將通訊錄從手機傳輸到智能咭：

- 1 從「通訊」標籤中，選擇**通訊錄**，點按 。
- 2 選擇**儲存位置**並選擇複製至智能咭或移動至智能咭。
- 3 依次序選擇名稱，並點按**複製**或 。

# 功能表地圖

在主屏幕中點按 ，開啟**頂部功能表**。您可從此處存取下一級功能表：**通訊**、**娛樂**、**實用工具**和**設定**。

## **通訊**

- 通訊錄
- 通話記錄
- 訊息
- 電子郵件
- 撥號
- 視像通話

## **娛樂**

- 相機
- 視像攝錄機
- 圖片集
- 我的檔案
- 音樂
- Muvee studio
- 遊戲及應用程式
- FM 收音機

## **實用程式**

- 瀏覽器
- 導航
- Google
- 鬧鐘
- 記事簿
- 備忘錄
- 語音備忘錄
- 工具

## **設定**

- 情景模式
- 屏幕
- 手機設定
- 藍芽
- Wi-Fi
- 通話 設定
- 觸控設定
- 連接

# 主屏幕

您可透過此屏幕存取選項、撥打電話、檢視手機狀態以及執行其他更多操作。

## 觸控屏幕提示

主屏幕亦是熟悉觸控屏幕的最佳位置。

要選擇某個項目，請點按圖示中央。


- 點按觸控屏幕時不需要重按，只需要輕輕按一下即可。
- 使用指尖點按所需的選項。小心不要按任何其他鍵。
- 當屏幕燈關閉時，按解鎖鍵返回至主屏幕。
- 未使用 GT505 手機時，預設情況下系統會返回鎖定屏幕。


# 主屏幕

## 快捷鍵

主屏幕上的快捷鍵提供簡單、單觸式操作存取最常用的功能。



點按以顯示觸控撥號盤，以撥打電話。使用標準鍵盤輸入所需號碼，並點按**通話**或按  硬鍵。

若要啟動此號碼的視像通話，請在輸入號碼後按  並選擇**撥打視像通話**。



點按開啟通訊錄。若要搜尋撥號號碼，請使用觸控板輸入聯絡人名稱。您亦可以新增通訊錄或編輯現有通訊錄。



點按以存取「訊息」選項目錄。您可從此處建立新訊息。



點按以開啟完整置頂功能表，此功能表分為四個子功能表。點按垂直標籤，檢視更多選項。

## 狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您是否已啟動藍芽或 GPRS。

下表說明可能在狀態列中看到的圖示的含義。


圖示	說明
	多項工作
	網絡訊號強度 (列數會有變化)
	無網絡訊號
	電池電量
	電池已耗盡
	新文字訊息
	新語音訊息
	訊息收件匣已滿
	發送訊息失敗
	鬧鐘已設定

圖示	說明
	正在使用標準情景模式
	正在使用戶外情景模式
	正在使用靜音情景模式
	正在使用耳機情景模式
	通話線路已轉接
	正在使用 EDGE
	漫遊
	飛航模式已開啟
	藍芽已啟動
	Wi-Fi 開啟
	BGM 播放
	BGM 暫停

# 主屏幕

## 從狀態列變更狀態


點按狀態列中表示目前設定的當前狀態圖示，以開啟狀態摘要。將顯示當前時間、網絡、服務 ID、電池、手機記憶體、外置記憶體、情景模式、MP3、藍芽和 Wi-Fi 狀態。您可設定情景模式類型，播放/暫停 MP3 並啟用/停用藍芽和 Wi-Fi。

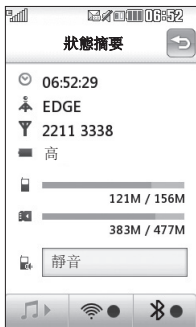

## 使用多項工作功能

按多項工作硬鍵，開啟多項工作功能表。您可從此處檢視已執行的所有應用程式並透過點按操作進行存取。




從任何應用程式，按多項工作鍵並選擇桌面，以返回至主屏幕，而毋需結束或關閉應用程式。


當某些應用程式正在使用時 (例如，遊戲或 FM 收音機)，則  會顯示在狀態列中。

從主屏幕按此鍵，可檢視部分常用功能的捷徑功能表。


# 通話功能

## 撥打電話或視像通話


- 1 點按  開啟按鍵。
- 2 使用鍵盤輸入號碼。要刪除數字，請按清除鍵。
- 3 點按  硬鍵，開始通話。
- 4 若要結束通話，請按  硬鍵。

**提示!** 若要在撥打國際電話時輸入「+」，請點按兩下 。

**提示!** 按鎖定/解鎖按鈕，鎖定觸控屏幕，避免錯誤撥號。


**提示!** 透過點按 ，您可撥打視像通話、發送訊息、儲存號碼或搜尋通訊錄。

## 透過通訊錄撥打電話

- 1 從主屏幕，點按  開啟通訊錄。
- 2 點按「名稱」，輸入要通話聯絡人的前幾個字母。
- 3 從篩選清單中點按要通話的聯絡人，然後選擇要使用的電話號碼（若存有多個記錄）。
- 4 點按通話。

## 接聽來電和拒接來電


手機響鈴後，按  硬鍵接聽來電。

點按  可使響鈴靜音。如果在開會時忘記將設定檔變更為「靜音」，此功能將十分有用。


按  硬鍵拒絕來電。

# 通話功能

## 通話中選項

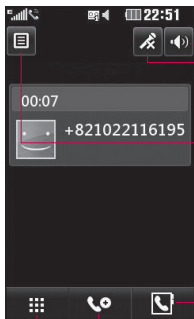


**喇叭** - 點按  以開啟喇叭。

**靜音** - 點按  以關閉麥克風，這樣，通話對方就聽不到您的聲音。

**選項** - 從下一級通話選項清單中進行選擇，包括建立新備忘錄和轉至訊息，這樣您就可以在通話中查看訊息並新增通訊錄。您也可點按結束通話，從此處結束通話。

 - 選擇在通話期間搜尋通訊錄。

 - 選擇將其他人加入至通話中。

 - 點按開啟數字鍵盤，導覽編號選項功能表。例如，撥打緊急求救號碼或其他自動化電話服務。



**提示!** 如要捲動選項清單或聯絡人清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。


## 調節通話音量

若要在通話中調節音量大小，請使用手機右側的上下按鈕。

## 快速撥號





您可為常撥聯絡人指定一個快速撥號號碼。

- 1 從主屏幕，點按  開啟通訊錄。
- 2 點按  並選擇**快速撥號**。
- 3 您的語音信箱已設定至快速撥號 1。點按任何其他號碼，為其指定快速撥號聯絡人。
- 4 您的通訊錄將開啟。透過點按一下相應的電話號碼，選擇要將其指定給此號碼的聯絡人。

若要撥打快速撥號號碼，請從主屏幕點按 ，然後按住指定的號碼，直至聯絡人顯示在屏幕上。

呼叫將自動啟動，而沒有必要按 **通話**。

## 撥打其他電話

- 1 初始通話中，點按  並選擇要通話的號碼。
- 2 撥打電話或搜尋聯絡人。
- 3 按  連接通話。
- 4 兩個通話均將顯示於通話屏幕上。初始通話將會被鎖定，來電者被保留。
- 5 若要變更兩個通話，請點按  並選擇**切換通話**或按保留通話之號碼。
- 6 若要結束其中一個或兩個通話，請按  並依次選擇**結束**、**所有通話**、**保留通話**或**使用中通話**。


**提示!** 您可透過點按「加入圖示」，然後按**加入**以便合併通話。檢查網絡供應商是否支援多方會議通話。

**注意:** 您需為撥打的每個電話付費。

# 通話功能

## 關閉 DTMF

透過 DTMF，您可以使用數字指令在自動化通話內導覽功能表。預設情況下，雙音多頻處於開啟狀態。

若要在通話期間關閉 DTMF（例如，記下號碼），請點按  並選擇關閉 DTMF。

## 檢視通話記錄

點按  並選擇**通訊**，然後點按**最近歷史**。


選擇要檢視的對象：

**所有通話** - 檢視所有已撥、已接和未接來電的完整清單。

**已撥通話** - 檢視所有已撥通話的清單。

**已接來電** - 檢視所有已接聽來電的清單。

**未接來電** - 檢視所有未接來電的清單。

**提示!** 從任何通話記錄點按  和**刪除全部**，刪除全部記錄項目。


## 使用來電轉駁

- 1 點按 ，選擇**設定**並選擇**通話設定**。
- 2 點按來電轉駁並選擇語音通話或視像通話。
- 3 可選擇全部語音/視像通話、線路繁忙時、無人接聽或無法接通時。
- 4 輸入轉駁號碼。
- 5 點按**要求**予以啟用。

**注意:** 轉駁電話需要收費。請聯絡網絡供應商，了解詳情。


**提示!** 要關閉所有來電轉駁，請從**來電轉駁**功能表選擇**停用全部**。

## 使用通話限制

- 1 點按 ，選擇**設定**並選擇**通話設定**。
- 2 點按**通話限制**並選擇語音通話或視像通話。
- 3 選擇以下五個選項的任何一個：
  - 所有撥出通話
  - 撥出的國際通話
  - 撥打本地以外的國際通話
  - 所有來電
  - 國際漫遊時來電
- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

**提示!** 選擇**固定撥號號碼**，開啟並編輯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機撥出。

## 變更一般通話設定

- 1 點按 ，選擇**設定**並選擇**通話設定**。
- 2 點按**通用設定**。您可從此處修改以下選項的設定：
  - 來電拒接** - 點按切換至開啟再按拒絕列表。您可從所有通話、通訊錄或群組、無名稱記錄（即不在通訊錄中的號碼）或無來電號碼中選擇。點按**儲存**變更設定。
  - 發送我的號碼** - 選擇撥出通話時，是否顯示您的號碼。
  - 自動重撥** - 點按以開啟或關閉。
  - 接聽模式** - 選擇按發送鍵或按任何鍵接聽來電。
  - 分鐘提示** - 點按以開/關，這樣您便可選擇通話時是否聽到分鐘提示音。


# 通話功能

**藍芽接聽模式** - 選擇**免提**，可使用藍芽耳機接聽來電，或選擇**手機**，便可透過按手機上的按鍵接聽來電。

**儲存新號碼** - 選擇**是**儲存新號碼。

**提示!** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

## 變更視像通話設定



- 1 點按 ，依次選擇**通話設定**和**視像通話設定**。
- 2 選擇視像通話設定。決定是否使用私人圖像並選擇一個或是否在視像通話撥號時開啟鏡像，以便在屏幕上看到您自己的圖像。

# 通訊錄

## 搜尋通訊錄

有兩種方法可搜尋通訊錄：

### 從主屏幕

- 1 從主屏幕，點按  開啟通訊錄。點按「名稱」，並使用鍵盤輸入聯絡人的名稱。
- 2 點按 **通話** 或  硬鍵，開始通話。


### 從主功能表

- 1 點按 ，選擇**通訊**。
- 2 點按通訊錄和名稱。

**提示!** 點按名稱後，會顯示字母鍵盤。



**提示!** 如要捲動您的通訊錄清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

## 新增通訊錄


- 1 從主屏幕，點按  並選擇**建立新通訊錄**。
- 2 輸入新聯絡人的名字和姓氏。您不必同時輸入名和姓，但必須輸入其中一個。
- 3 輸入多達五個不同的號碼並為各號碼指定一個類型。您可選擇**手機、家庭、辦公室、傳呼機、傳真、VT 和一般**。
- 4 新增電郵地址。
- 5 將聯絡人指定給一個群組。從以下選項中選擇：**沒有群組、家庭、朋友、同事、學校或VIP**。
- 6 您亦可新增**鈴聲、生日、主頁、住宅地址、公司名稱、職位、公司地址和備忘錄**。
- 7 點按**儲存**儲存聯絡人。

# 通訊錄

## 建立群組

- 1 從主屏幕，按  並選擇**通訊**標籤。點按**通訊錄**並選擇**群組**。
- 2 點按 。
- 3 選擇**建立新群組**。
- 4 為您的新群組輸入名稱。
- 5 點按**儲存**。


**注意：**若要刪除某群組，指定給該群組的聯絡人將不會遺失。這些聯絡人仍保留在您的通訊錄中。

**提示！** 透過檢視現有群組並點按  以進行編輯。

## 變更通訊錄設定

您可調整通訊錄設定，以便通訊錄符合您的個人偏好。

**提示！** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 從「通訊」標籤中，點按**通訊錄**，然後點按 。選擇**設定**。
- 2 您可從此處對以下設定進行調整：

**通訊錄列表設定** - 您亦可選擇是先顯示聯絡人的名字還是姓氏。您可使用如撥打語音通話、撥打視像通話或發送訊息這類快速指令進行顯示。

**同步處理通訊錄** - 連接到伺服器以同步通訊錄。請參閱**同步通訊錄**。

**匯出聯絡人** - 在手機與智能咭之間進行聯絡人複製。您可選擇依次序進行或同時複製全部。若選擇依次序，您需要逐一選擇要複製的每個聯絡人。

**匯入聯絡人** - 此操作與複製操作一樣，但聯絡人僅會儲存於您所移動至的位置。因此，如果您將一個聯絡人從智能咭移動至手機，它將從智能咭記憶體中刪除。

**透過藍芽傳送所有通訊錄** - 使用藍芽將您的通訊錄發送至另一裝置。若選定了此選項，系統將會提示您開啟藍芽。



**清除通訊錄資料** - 刪除您所有的聯絡人。若確定要清除通訊錄，請點按**是**。

# 訊息


## 訊息


GT505 手機將文字訊息、多媒體訊息和電子郵件集中在同一功能表中，使用起來方便簡單。


您可以透過以下兩種方法，進入訊息中心：

- 1 從主屏幕，點按  或點按 ，然後依次選擇**通訊**和**訊息**。

## 發送訊息

- 1 依次點按  和**新增訊息**，開啟一則空白訊息。
- 2 您可從此處選擇**訊息**以發送文字訊息或多媒體訊息。
- 3 點按**附加**新增圖像、影片、聲音、常用範本、情感圖示、名稱及號碼、新增投影片、標題或簽名。
- 4 點按**收件者**輸入收件者的電話號碼，或者點按**搜尋**按鈕開啟通訊錄。您可以新增多個聯絡人。完成後，點按**發送**。

 **警告：** 您將按收件者每則文字訊息 160 字元計費。

 **警告：** 若向短訊加插了圖像、影片或聲音，它將自動轉換為多媒體訊息，而您亦需為此支付相應費用。

## 輸入文字


有五種方法輸入文字：


按鍵、鍵盤、手寫屏幕、手寫方塊、雙方格手寫輸入辨識。

點按一下屏幕，然後鍵盤會顯示。

 點按開啟 T9 模式。

 您可變更寫入語言。

 點按以在數字、符號和文字鍵盤之間變換。

使用  捲動每種文字輸入模式下的不同鍵盤類型（例如，大寫或小寫）。

若要輸入空格，請點按 。

## T9 模式

在 T9 模式下，您將看到 。

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，字典便可預測要使用的單字。

例如，按 8、3、5、3、7、4、6、6、3 可得到「telephone」。

## Abc 模式

在 Abc 模式下，您必須重複點按按鍵，才能輸入字母。例如，要寫入「hello」，請點按 4 兩次、3 兩次、5 三次、5 又三次，然後按 6 三次。

## 設定電子郵件

縱使出門在外，您亦可使用 GT505 上的電子郵件功能與他人保持聯絡。您可快速輕鬆地對 POP3 或 IMAP4 電子郵件帳戶進行設定。

**提示!** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 從主屏幕點按 ，然後點按**電子郵件**。
- 2 點按 。
- 3 點按**新增帳戶**。
- 4 您現在可選擇帳戶的工作方式：  
**標題** - 為此帳戶輸入一個名稱。  
**我的名稱** - 輸入您的名稱。  
**用戶名稱** - 輸入帳戶的用戶名稱。

# 訊息

**密碼** - 輸入帳戶的密碼。

**電郵地址** - 輸入帳戶電郵地址。

**回覆電郵地址** - 輸入「回覆」的電郵地址。

**外寄郵件伺服器** - 輸入外寄郵件伺服器位址。

**內送郵件伺服器** - 輸入內送郵件伺服器位址。

**最大接收大小** - 選擇您的電郵大小限制，上限為 2MB。

**郵箱類型** - 輸入郵箱類型，即 POP3 或 IMAP4。

**儲存到伺服器** - 選擇是否將您的電郵儲存到伺服器。對於 IMAP4 帳戶，副本將得以儲存。

**儲存已發送的郵件到** - 選擇是否儲存已發送的電子郵件（當郵箱類型設定為 IMAP4 時）。信箱類型為 POP3 時，已發送的郵件始終會儲存到手機中。

**僅擷取新郵件** - 選擇是否放棄之前已下載的電子郵件。

**存取點** - 選擇您的互聯網存取點。

**下載選項** - 選擇電子郵件下載方式。從以下選項中選擇：僅標題或全部（包括正文）（針對 POP3）；僅標題、標題 + 正文或全部（針對 IMAP4）。

**自動擷取** - 選擇是否自動擷取新電子郵件。

**進階設定** - 選擇是否要使用進階設定。

**SMTP 連接埠號碼** - 通常，此號碼為 25。

**SMTP TLS/SSL** - 選擇是否對外寄伺服器使用 TLS/SSL。

**內送郵件伺服器連接埠** - 通常，對於 POP3 帳戶，此為 110；而對於 IMAP4 帳戶則為 143。

**內送 TLS/SSL** - 選擇是否對內送伺服器使用 TLS/SSL。

**SMTP 驗證** - 選擇外寄郵件伺服器器的安全設定

**SMTP 使用者名稱** - 輸入 SMTP 的使用者名稱。

**SMTP 密碼** - 輸入 SMTP 的密碼。

**APOP 安全登入** - 選擇是否為 POP3 帳戶啟用 APOP 安全登入。IMAP4 帳戶則始終設為關閉。

現在，您的帳戶經已完成設定，並會出現於電郵資料夾的帳戶清單當中。

## 透過新帳戶發送電子郵件

- 1 點按「通訊」功能表中的**電子郵件**以開啟一則新的空白電子郵件。
- 2 您可輸入收件者地址，然後編寫您的訊息。您亦可附加圖像、影片、聲音或其他檔案類型。
- 3 點按**發送**，您的電子郵件便會發出。

**提示!** 您可將 Word、Excel、PowerPoint 及 PDF 文件上載至 GT505，以便在外出時亦可查看。

# 訊息

## 變更電子郵件設定

您可根據自己的偏好，變更電子郵件設定。

**提示!** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

**1** 從主屏幕點按 ，然後選擇**電子郵件和設定**。

**2** 您可調整以下設定：

**電子郵件帳戶** - 管理您的電子郵件帳戶。

**允許回覆電郵** - 選擇是否允許發送閱讀確認訊息。

**要求回覆電郵** - 選擇是否請求「讀取確認」訊息。

**擷取時隔** - 選擇 GT505 查收新電子郵件郵訊息的頻率。

**擷取數量** - 選擇一次擷取的電子郵件數量。

**轉寄與回覆時加入原始訊息** - 選擇回覆中是否包含原始訊息。

**包括附件** - 選擇是否在任何回覆中加入原始附件。

**在漫遊中自動擷取** - 選擇是否在漫遊時自動擷取訊息。

**新郵件通知** - 選擇是否要獲得新電郵的通知。

**簽名** - 建立電郵簽名並啟用此功能。

**重要性** - 選擇電郵的優先等級。

**郵件傳送大小** - 選擇電子郵件訊息的發送大小。

## 訊息資料夾

由於各資料夾的名稱相當清楚，您可辨識用於 GT505 的資料夾結構。

**新增訊息** - 開啟新的空白訊息。

**收件匣** - 接收到的所有訊息會置於收件匣中，您可從此處進行檢視、刪除及更多操作，詳情請參閱以下的**管理您的訊息**。

**草稿** - 若不夠時間完成編寫訊息，您可將寫完的部份儲存於此處。

**寄件匣** - 這裡是發送中的訊息之臨時存放資料夾。

**已發送項目** - 發送的訊息會置於此資料夾中。

**我的資料夾** - 建立資料夾，儲存您的訊息。



**常用範本** - 使用常用文字和多媒體訊息範本清單。

**情感圖示** - 在訊息中新增和插入情感圖示。

**設定** - 更換文字和多媒體訊息的設定。



## 使用範本

為您最常發送的文字訊息及多媒體訊息建立範本。您會發現手機上已存有部份範本，您可根據需要對其進行編輯。

- 1 點按 ，然後選擇**常用範本**。
- 2 選擇**文字範本**或**多媒體範本**。然後，您可點按  以**新增範本**、**刪除**或**刪除全部**範本。若要編輯剛選定的訊息，請作出變更並點按**儲存**。

## 使用情感圖示

情感圖示令您的訊息更添生氣。您會發現手機上已存有一些常用情感圖示。


- 1 點按 ，然後選擇**情感圖示**。
- 2 點按  以**新增表情符號**、**刪除**或**刪除全部**情感圖示。

## 變更文字訊息設定

您的 GT505 已預先定義訊息設定，以便您可立即發送訊息。您可根據自己的偏好變更這些設定。

# 訊息

**提示!** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

點按 ，然後選擇**設定**和**文字訊息**。您可對以下各項進行變更：

**文字訊息中心** - 輸入訊息中心的詳細資料。

**發送報告** - 滑動以開關便在訊息發送後接收確認訊息。

**有效時期** - 選擇訊息在訊息中心的儲存時間。


**訊息類型** - 將您的文字轉換為**語音**、**傳真**、**X.400** 或**電子郵件**。

**字元編碼** - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

**發送長文字時設為** - 選擇以多個文字訊息或以多媒體訊息的方式發送長訊息。

## 變更多媒體訊息設定

您的 GT505 已預先定義訊息設定，以便您可立即發送訊息。您可根據自己的偏好變更這些設定。

點按 ，然後選擇**設定**和**多媒體訊息**。您可對以下各項進行變更：

**擷取模式** - 選擇**本地**或**漫遊網絡**。隨後若選擇**手動**，您只會先收到訊息通知，以便您決定是否進行完整下載。

**發送報告** - 選擇是否允許及/或請求發送報告。

**閱讀回覆** - 選擇是否允許及/或發送閱讀回覆。

**重要性** - 選擇多媒體訊息的優先等級。

**有效時期** - 選擇訊息儲存在訊息中心的時間。

**投影片播放時間** - 選擇投影片在屏幕上的播放時間。


**發送時間** - 選擇隔多久發送訊息。

**多媒體訊息中心** - 輸入訊息中心的詳細資料。

## 變更其他設定

點按 ，選擇**設定**，然後選擇：

**視像留言信箱** - 點按  新增視像留言服務。聯絡網絡商，了解他們提供服務的更多詳情。

**留言信箱** - 點按  新增語音信箱服務。聯絡網絡商，了解他們提供服務的更多詳情。

**服務訊息** - 選擇要接收還是阻止服務訊息。您亦可透過建立信任的和不受信任的寄件者列表來設定您的訊息安全性。

**資訊服務** - 選擇區域廣播、頻道或語言。

# 相機


## 快速拍照

- 1 按手機右側的  鍵。
- 2 水平握住手機，將鏡頭對準拍照對象。
- 3 輕按拍攝按鈕，對焦方塊會顯示在取景器觸控的中央。
- 4 定位手機，以便您在對焦方塊中看到拍照的對象。
- 5 當對焦方塊變綠，則表示相機對焦完成。
- 6 完全按下拍攝按鈕。

## 完成拍照後

拍攝的相片將顯示於屏幕上。圖像名稱以及圖示會顯示在屏幕。




 點按以訊息、電子郵件或藍芽方式發送相片。請參閱「發送訊息」以及「使用藍芽發送和接收檔案」。

**注意：**在漫遊時下載多媒體訊息可能會收取額外費用。


 點按將圖像用作不同用途。

 點按以重新命名。

 點按使用不同工具編輯圖像。


 點按返回至前一個功能表。

 點按刪除圖像。

 點按立即拍攝相片。當前相片將會被儲存。

 點按以檢視已儲存的相片集。

## 了解取景器

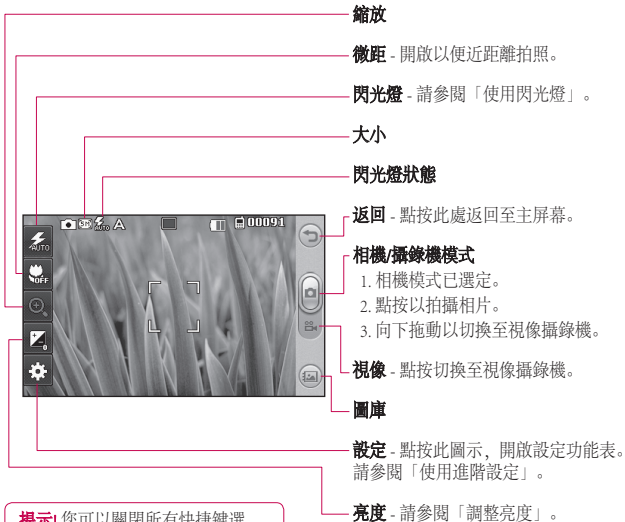

# 相機




## 使用閃光燈

預設閃光燈設定為自動，但還有其他選項。


- 1 從取景器左側選擇  以進入閃光燈子功能表。
- 2 存在以下三個閃光燈選項：  
**自動** - 相機會評估所需的光線，以便獲取較好的拍攝效果，並在有必要時使用閃光燈。  
**永遠關閉** - 相機永遠不會使用補光燈。此選項對於節省電力將十分有用。  
**常開** - 相機始終都會使用閃光燈。
- 3 點按想要的選項之後，閃光燈功能表將自動關閉，以便您立即拍照。
- 4 取景器中的閃光燈狀態圖示會隨著新的閃光燈模式變化。

## 調整曝光


曝光定義圖像在有光和黑暗部分中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

- 1 點按 。
- 2 將對比度指示符沿列向  滑動，曝光度將減低，獲得的圖像較模糊，向  滑動，曝光度將升高，獲得的圖像較清晰。

## 連環拍攝

- 1 從取景器中，點按  開啟所有進階設定選項並選擇**拍攝模式**，然後選擇**連環拍攝**。
- 2 在取景器中定位對象並於要拍攝標準相片時，按拍攝按鍵。
- 3 相機將以快速連續的方式拍照。

## 使用進階設定

從取景器中，點按  以開啟所有進階設定選項。

選擇選項之後，點按**確定**按鈕。

**圖像大小** - 變更相片大小以節省記憶體空間或為通訊錄拍攝一張合適大小的相片。請參閱**變更圖像大小**。

**拍攝模式** - 選擇標準或連環拍攝、畫框模式。

**場景模式** - 設定相機，根據環境調整。從自動、夜間、人像、風景、沙灘、運動和派對中選擇。

**色彩效果** - 選擇要在新相片中使用的色調。請參閱**選擇色彩效果**。

**白平衡** - 從自動、白熱光、陽光、日光燈或陰天中進行選擇。

**計時器** - 自拍計時讓您設定按拍攝按鈕後的延遲時間。可供選擇的選項為：**關閉**、**3秒**、**5秒**或**10秒**。如果您想在拍照時讓自己一起留影，此功能十分有用。

**圖像質量** - 在**超細緻**、**細緻**及**標準**之間選擇。質素越細緻，相片越清晰。因此，相片占用的檔案大小會增大，記憶體中儲存的相片數量就會相應減少。

**自動對焦** - 選擇相機對焦的方式。選擇自動還是手動。

**預覽樣式** - 選擇預覽式樣。

**轉換鏡頭** - 切換到 LG GT505 向內相機。

**記憶體狀態** - 選擇是將照片儲存至手機記憶體還是外置記憶體。

**隱藏圖示** - 選擇手動或自動隱藏照相機設定圖示。

**防手震** - 可讓您在拍照時減少手震。

**顯示拍攝影像** - 選擇拍攝相片後是否顯示圖像。

**快門聲** - 從三種快門聲中選擇一種。

**地理位置標記** - **開啟**/**關閉**

**重新設定** - 還原全部相機預設設定。


# 相機

**提示!** 結束相機時，所有設定將返回至預設情況，但圖像大小和圖像質量除外。需要重設任何非預設設定，例如色調。拍攝下一張照片前，需要進行檢查。

**提示!** 設定功能表會加在取景器上，這樣，當變更圖像色彩或質素要素時，您將能夠在設定功能表後面查看到圖像變更後的預覽效果。


## 變更圖像大小

像素越高，檔案越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多圖片，可以變更解像度來縮小檔案。

- 1 從取景器中，點按 。
- 2 從預覽功能表中選擇**圖像大小**。

- 3 從以下六個選項（5M：2592x1944、3M：2048x1536、2M：1600x1200、1M：1280x960、640x480、320x240）中選擇像素值或選擇預設牆紙大小。


## 選擇色彩效果


- 1 從取景器中，點按 。
- 2 從預覽功能表中，選擇**色彩效果**。
- 3 其中提供色調選項。
- 4 完成選擇後，可返回進階功能表。然後您就可以準備拍照了。


**提示!** 您可將拍攝的彩色照片顏色變更為黑白或復古，但您無法將黑白色或復古照片變為彩色。

## 使用內相機


LG GT505 配備 640x480 的向內相機，不但可用於視像通話，亦可用於拍照。

- 1 若要切換至向內相機，請點按 ，然後從預覽功能表中選擇 **轉換鏡頭**。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要拍攝圖像，請以標準方式按下側面的拍攝按鍵。

**提示!** 由於對內相機沒有閃光燈或感光性調整，因此其具有的設定較少。如同使用主相機一樣，透過點按 ，您亦可改變圖像大小、色彩效果、圖像質量、白平衡並設定計時器。

- 3 拍攝照片後，手機將提供同主相機拍攝照片時可用的所有相同選項。
- 4 若要返回至主相機，請點按 ，然後從預覽功能表中選擇 **轉換鏡頭**。

## 檢視已儲存照片

- 1 您可從相機模式存取已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。

# 視像攝錄機


## 拍攝快速影片

- 1 按住手機右側的相機鍵。
- 2 在相機模式下滑動取景器中的 ，切換至視像模式。
- 3 攝影機的取景器將顯示於屏幕上。
- 4 水平握住手機，將鏡頭對準拍攝對象。
- 5 按一下拍攝按鈕，開始錄製。
- 6 **REC** 將顯示於取景器，而底部的計時器則會顯示影片錄製的長度。
- 7 要暫停影片，請點按  並透過選擇  以繼續。
- 8 點按屏幕上的 ，或再次按拍攝按鈕，停止錄製。


## 拍攝影片後


將在屏幕上顯示一張靜態影片圖像。影片名稱將顯示於屏幕底端，同時還會在屏幕選擇項目。


 點按播放影片。



 點按以**訊息、電子郵件或藍芽**方式發送相片。請參閱「發送訊息」以及「使用藍芽發送和接收檔案」。


**注意：**在漫遊時下載多媒體訊息可能會收取額外費用。


 影片用作鈴聲。

 點按編輯選定圖片的名稱。


 點按返回至前一個功能表。

 點按以刪除剛剛錄製的影片，透過點按  予以確定。取景器將再次出現。

 點按立即拍攝另一張影片。當前影片將會被儲存。

 點按以檢視儲存的影片和圖片集。

## 了解取景器

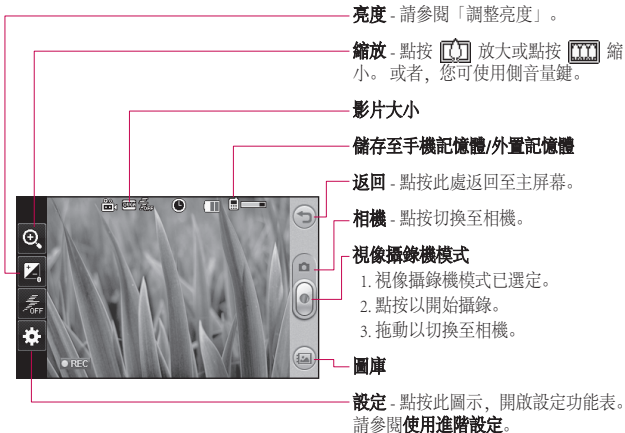




**提示!** 您可以關閉所有快捷鍵選項，以獲取較清晰的取景器屏幕。只需要點按一下取景器中央。要再調用選項，請再按一下屏幕。

# 視像攝錄機

## 調整曝光

曝光定義圖像在有光和黑暗部分中的區別。低對比度會將圖像顯示得較模糊，而高對比度會將圖像顯示得較清晰。

- 1 點按 。
- 2 將曝光指示符沿列向  滑動，曝光度將減低，獲得的圖像較模糊，向  滑動，對比度將升高，獲得的圖像較清晰。

## 使用進階設定

從取景器中，點按**設定**開啟所有進階設定選項。請選擇所需選項。

**影片大小** - 變更影片大小，以便節省記憶體空間。請參閱**變更影片圖像大小**。

**場景模式** - 從自動或夜間模式等。

**色彩效果** - 選擇要在新檢視中使用的色調。請參閱**選擇色調**。

**白平衡** - 白平衡可確保影片中的任何白色部分顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。從**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**中進行選擇。

**影片品質** - 在**特細緻**、**細緻**及**標準**之間選擇。質素越細緻，影片越清晰。因此，檔案大小會增加，意味著手機記憶體中儲存的影片將減少。

**長度** - 為視像設定播放時間限制。從**標準**和**多媒體訊息**之間選擇，以限制透過多媒體訊息方式進行發送的最大大小。

**提示!** 若您選擇多媒體訊息長度，則可選擇低圖像品質，以錄製較長的影片。

**轉換鏡頭** - 切換到 LG GT505 向內相機。

**記憶體狀態** - 選擇將影片儲存至手機記憶體或外置記憶體。


**語音** - 選擇靜音以錄製影片，而沒有聲音。

**隱藏圖示** - 選擇是自動還是手動隱藏相機功能表上的圖示。

**重設設定** - 重設所有視像攝錄機設定。

## 變更影片大小

像素越高，檔案大小越大，從而佔據的記憶體空間便越多。若您想要在手機上儲存更多影片，可以變更影片解像度來縮小檔案。

- 1 從取景器中，點按 。
- 2 從預覽功能表中選擇**影片大小**。

- 3 從以下選項中選擇一個像素值：


**320x240** - 圖像大小較大，從而佔用的檔案空間較大。這非常有助於節省記憶體空間。

**176x144** - 圖像大小最小，從而佔用的檔案空間也最小。

- 4 點按返回圖示，返回至取景器。

**提示!** 對於影片格式轉換軟件，請參閱隨 GT505 提供的光碟。



## 選擇色調

- 1 從取景器中，點按左角的 。
- 2 從預覽功能表中，選擇**色彩效果**。
- 3 其中提供六種選項。
- 4 點按想要使用的色調。

# 視像攝錄機


## 使用內視像攝錄機

LG GT505 配備 320x240 的向內相機，不但可用於視像通話，亦可用於錄製影片。

- 1 若要切換為向內相機，請點按  並選擇**轉換鏡頭**。
- 2 幾秒鐘後，您將看到您自己顯示在取景器中。要開始錄製圖像，請按正常方式按一下拍攝按鍵，要停止錄製，請再按一下此按鍵。
- 3 影片錄製後，系統將提供同主相機錄製影片時可用的所有選項。
- 4 若要返回至主相機，請依次點按  和**轉換鏡頭**。


**提示!** 如同使用主相機一樣，透過點按**設定**，您亦可改變影片大小、色彩效果、白平衡和影片品質等。

## 觀看已儲存影片

- 1 在取景器中，點按 。
- 2 圖片集將顯示於屏幕上。
- 3 點按一次影片，使其顯示於圖片集的最前端。影片將自動播放。

# 照片及影片

## 檢視照片及影片

- 1 點按相機預覽屏幕上的 。
- 2 圖片集將顯示於屏幕上。
- 3 點按影片或相片，以完全開啟。

**提示!** 左右滑動以檢視其他相片或影片。

**提示!** 要刪除相片或影片，請開啟並選擇 。點按 **是** 以確認。

## 檢視照片時使用縮放

檢視照片時，您可以進行縮放。

## 檢視影片時調節音量

要於播放時調整影片音量，請按擴音器符號並點按屏幕底端的音量控制。或者，使用手機側面的音量鍵。

## 將照片設定為待機圖片

- 1 點按要將其設定為牆紙的照片，予以開啟。
- 2 點按屏幕開啟選項功能表。
- 3 點按桌子功能表。
- 4 您可縮放圖片，並使用屏幕底端的縮圖移動圖片。


# 照片及影片


## 編輯照片

您可對相片執行多種變更操作。


1 開啟您想要編輯的相片並點按此相片  以顯示相關選項。


2 點按圖示，以修改照片：

 裁剪相片。選擇方形或圓形裁剪區域，並用指尖在屏幕上滑動以選擇區域。


 用手在相片上進行繪製。從四個選項中選擇線條粗細以及想要使用的色彩。

 在圖片上新增文字。請參閱**在照片中加入文字**。


 使用印章裝飾相片。在不同的印章中進行選擇並在相片中點按要放置印章的位置。


 清除剛用手繪製的內容。您可選擇使用的橡皮擦大小。


 點按以返回圖片集。

 儲存對相片作出的變更。選擇將變更儲存為**更新現有檔案**或**新檔案**。選擇**新檔案**後，輸入檔案名稱。

 復原對照片所做的變更。

 點按以開啟更多效果選項，包括**旋轉**。同時，存在更多的進階編輯選項。請參閱**強化相片色彩及色彩轉換**。

 點按以將色彩效果套用至相片。


 此選項有助您使用自動色彩、亮度等對拍攝的相片進行調整。





## 在相片中加入文字

- 1 從編輯觸控中點按 **T**。
- 2 選擇**文字**以新增無邊框文字，或者選擇其中一個語音氣泡形狀。
- 3 使用鍵盤輸入文字並點按完成。
- 4 透過點按文字即可將其移動並滑動至所需位置。

## 在照片中加入效果




- 1 從編輯觸控中點按 。
- 2 您可將任何一種選項套用至相片。
- 3 要復原效果，只要點按 。

## 剪裁相片

- 1 從編輯觸控中點按 。
- 2 選擇要用於剪裁圖片的形狀。
- 3 在要剪裁區域上拖動方塊。
- 4 若已滿意剪裁部分，請點按 。

# 照片及影片

## 強化相片色彩


- 1 從編輯屏幕點按 。
- 2 選擇**色彩強化**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份，例如某人的頭髮或外衣。
- 4 透過點按  並沿明暗度列上下滑動標記，以變更強化明暗度。
- 5 點按 **OK**。
- 6 所有顏色將從相片中移除，以同為顏色強化標記的部份分離。
- 7 選擇  儲存變更。

## 轉換相片中的色彩

- 1 從編輯屏幕點按 。
- 2 選擇**色彩轉換**。
- 3 選擇照片部份。輪廓線將包括顯示於此區域內一切顏色相近之部份。  
例如，某人的頭髮或外衣。
- 4 選擇一種色彩。
- 5 按**確定**。
- 6 為色彩強化選定的照片部份將變更為選定的色彩轉換。
- 7 選擇  儲存變更。

# 多媒體

您可將任何多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和遊戲。您亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

若要存取多媒體功能表，請依次點按  和**娛樂**。點按**我的檔案**以開啟儲存所有多媒體檔案的資料夾清單。


## 圖片

**我的圖像**包括圖片清單，其中有預載至手機的預設圖像、下載的圖像和透過手機相機拍攝的圖像。

## 我的圖像選項功能表

**我的圖像**中可用選項取決於選定的圖像類型。所有選項均可用於手機相機上拍攝的圖片，但僅**使用方式**、**檔案資訊**、**列印**選項可用於預設圖像。



## 發送照片

- 1 依次點按  和**娛樂**。
- 2 點按**我的檔案**，然後選擇**圖像**。
- 3 選擇要發送的圖片，然後點按**發送**。從**訊息**、**電子郵件**或**藍芽**中選擇。
- 4 若選擇**訊息**或**電子郵件**，您的相片會附加至訊息中，且您可按正常方式編寫和發送訊息。若選擇**藍芽**，手機會提示您開啟藍芽，並搜尋要向其發送圖片的裝置。

# 多媒體

## 使用圖像

您可選擇用作待機圖片或屏幕保護程式的圖像，或甚至將其用於識別來電者。

- 1 依次點按  和 **娛樂**。
- 2 點按**我的檔案**，然後選擇圖像。
- 3 選擇一個圖像並點按 。
- 4 點按**使用方式**並選擇以下一項：

**桌面** - 為主屏幕設定牆紙。

**通訊錄圖像** - 給通訊錄清單中的特定聯絡人分配一個圖像，以便在其向您致電時顯示。

**來電** - 設定來電期間顯示的圖像。



**撥出通話** - 設定撥出通話時所顯示的圖像。

**開機** - 設定開機顯示的圖像。

**關機** - 設定關機顯示的圖像。



## 標記圖像

可在不降低圖片質素的情況下，調節弱光相片。

- 1 依次點按  和 **娛樂**。
- 2 點按**我的檔案**，然後選擇圖像。
- 3 選擇圖像，點按 ，然後點按 **Smart 燈光**。
- 4 燈會自動作出調整，且您可選擇儲存新圖像。

## 移動或複製圖像



您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項程序。

- 1 依次點按  和 **娛樂**。
- 2 點按**我的檔案**，然後選擇圖像。
- 3 點按 ，然後選擇**移動或複製**。

- 4 選擇一個圖像。
- 5 選擇**移動**或**複製**。

## 建立投影片播放



若要查看手機上的所有圖像，則可建立播放投影片，這樣就省去逐一開啟、關閉圖像的麻煩。

- 1 依次點按  和**娛樂**。
- 2 點按**我的檔案**，然後選擇**圖像**。
- 3 點按  和**播放投影片**。

## 聲音

**聲音**資料夾包含已下載的聲音、**預設聲音**和**錄音**。您可在此處管理、發送或將聲音設定為鈴聲。

## 使用聲音

- 1 依次點按  和**娛樂**。
- 2 依次點按**我的檔案**和**聲音**。
- 3 選擇檔案。
- 4 選擇某個聲音，並開始播放此聲音。
- 5 點按  並選擇**使用方式**。
- 6 從**話音鈴聲**、**視像鈴聲**、**訊息提示音**、**開機**或**關機**中選擇。

## 影片

**影片**資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

### 觀看影片

- 1 依次點按  和**娛樂**。
- 2 依次點按**我的檔案**和**影片**。
- 3 選擇一個影片進行播放。

# 多媒體

## 在暫停影片時使用選項

在暫停模式下點按  並從以下選項中選擇：


**發送** - 透過訊息、電子郵件或藍芽發送影片。

**刪除** - 刪除影片。

**使用方式** - 啟用此選項，設定話音鈴聲或視像鈴聲。（受視像畫框大小限制。）

**檔案資訊** - 檢視名稱、大小、日期、類型、長度、尺寸、版權和保護詳情。


## 發送錄像片段

- 1 選擇影片並點按 。
- 2 點按**發送**並從**訊息**、**電子郵件**或**藍芽**中選擇。
- 3 若選擇**訊息**或**電子郵件**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。若選擇**藍芽**，手機會提示您開啟藍芽，並搜尋要向其發送影片的裝置。

## 遊戲和應用程式

您可以將新的遊戲和應用程式下載到手機上，以便在休閒時娛樂。

## 玩遊戲

- 1 依次點按  和**娛樂**。
- 2 點按**遊戲及應用程式**，然後點按**遊戲**。
- 3 選擇並點按某個遊戲以便啟動。

## 使用遊戲選項功能表

遊戲及應用程式資料夾提供以下選項：


**排序方式** - 按日期、大小或名稱來排序遊戲及應用程式。

**檔案資訊** - 檢視遊戲資訊。

## Flash 內容

Flash 內容資料夾中包含您所有的預設及已下載 SWF 檔案。


## 檢視 SWF/SVG 檔案

- 1 依次點按  和 **娛樂**。
- 2 依次點按 **我的檔案** 和 **Flash 內容**。
- 3 選擇要檢視的檔案。

## 文件

從我的檔案中的文件，您可檢視所有文件檔案。您可從此處檢視 Excel、Powerpoint、Word、文字和 pdf 檔案。

## 檢視檔案

- 1 依次點按  和 **娛樂**。
- 2 依次點按 **我的檔案** 和 **文件**。
- 3 選擇一個文件以檢視。

## 傳送檔案到手機

藍芽很可能是將檔案從電腦傳送到手機的最簡易方式。您也可以透過 USB 線使用 LG PC Suite。

接收藍芽傳送：

- 1 確保您的手機與電腦均已開啟藍芽，並已被對方偵測到。
- 2 使用電腦，透過藍芽發送檔案。
- 3 檔案發送後，您需要按 **是** 予以接受。
- 4 該檔案應出現於您的 **文件** 或 **其他** 資料夾中。


# 多媒體

## 其他

此**其他**資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。其使用方式與**文件**資料夾相同。您可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於**其他**資料夾而不是**文件**資料夾中。

若發生這種情況，您可以將其移走。


要將檔案從「其他」移到文件：

- 1 依次點按  和**娛樂**。
- 2 點按**我的檔案**然後選擇**其他**。
- 3 點按**移動**，然後再次點按**移動**。
- 4 選擇移動位置。

## 製作電影

- 1 依次點按  和**娛樂**。
- 2 點按 **Muvve studio**。
- 3 點按  以新增圖像。點按要包含於其中的圖像，然後選擇**附加**。
- 4 點按頂部的式樣標籤，選擇電影式樣。
- 5 點按屏幕底端的聲音標籤，變更聲音，如 mp3 檔案。
- 6 點按**播放**按鈕，查看已建立的內容。
- 7 點按 ，然後點按**播放順序**變更順序。
- 8 點按  並選擇**儲存位置**以選擇電影儲存位置，然後點按使用方式在保存用和多媒體適用之間選擇。
- 9 若要儲存電影，請按**播放**，然後點按左角的儲存圖示。

## 音樂

LG GT505 具有內置的音樂播放機，這樣，您可播放所有喜愛的曲目。若要存取音樂播放機，請依次點按 、**娛樂**和**音樂**。您可從此處存取大量資料夾：

**最近播放** - 您可以欣賞最近聽過的所有歌曲。

**全部曲目** - 包含手機上的所有歌曲。

**演出者** - 按演出者瀏覽音樂收藏。

**專輯** - 按專輯瀏覽音樂收藏。

**類型** - 按類型瀏覽音樂收藏。

**播放列表** - 包含已建立的任何播放列表。

**隨機播放曲目** - 您可隨機聆聽音樂。

## 將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或 USB 線。您亦可使用 LG PC Suite。

接收藍芽傳送：

- 1 確保兩個裝置均開啟藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要按是予以接受。
- 4 檔案應顯示於**音樂 > 全部曲目**中。


# 多媒體

## 播放歌曲

- 1 依次點按  和**娛樂**。
- 2 點按**歌曲**，然後選擇**全部曲**目。
- 3 選擇要播放的歌曲並點按**播放**。
- 4 點按  以暫停歌曲。
- 5 點按  以跳至下一首歌曲。
- 6 點按  以跳至上一首歌曲。
- 7 點按  返回至**音樂**功能表。


## 建立播放列表

透過從**全部曲目**資料夾中選擇歌曲項目，從而建立自己的播放列表。



- 1 依次點按  和**娛樂**。
- 2 點按**音樂**，然後按播放列表。
- 3 點按新播放列表，輸入播放列表名稱並點按**儲存**。

- 4 全部曲目資料夾將顯示。點按要納入播放列表的所有歌曲；記號將顯示於對應的曲目名稱旁。
- 5 點按**完成**。

要播放播放列表，請選擇並點按播放。

**注意：**要新增第二個播放清單，請點按 ，然後點按新播放列表。

## 刪除播放列表

- 1 依次點按  和**娛樂**。
- 2 點按**音樂**，然後按**播放清單**。
- 3 點按 ，然後按**刪除**或**刪除全部**以刪除所有播放列表。

## 使用收音機



LG GT505 手機具有 FM 收音機功能，以便您可在外出時收聽喜歡的電台節目。

**注意：**您需要插入耳機才可收聽收音機。將耳機插入耳機插孔（與插入充電器的插孔相同）。

## 搜尋電台



透過手動或自動搜尋電台節目，將其保留到手機中。這些節目將儲存至特定頻道編號，如此以來，您就不需要重新調諧。

### 自動調諧：


- 1 依次點按  和 **娛樂**。
- 2 依次點按 **FM 收音機** 和 。
- 3 點按 **自動掃描**，然後點按 **是**。  
找到的電台將自動分配至手機中的頻道編號。

**注意：**您亦可透過使用顯示在電台頻率旁的滾輪手動調諧電台。

## 重設頻道

- 1 依次點按  和 **娛樂**。
- 2 依次點按 **FM 收音機** 和 。
- 3 選擇 **重新設定** 以重設目前頻道，或選擇 **重設全部** 以重設全部頻道。



## 收聽電台

- 1 依次點按  和 **娛樂**。
- 2 點按 **FM 廣播**，然後點按要收聽電台的頻道編號。


**提示!** 如要改善收音機的接收效果，您可延長作為收音機天線的耳機線。

# 記事簿


## 新增事件至日曆

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**記事簿**。選擇**日曆**。
- 2 選擇要將事件新增至的日期。
- 3 依次點按  和**新增事件**。
- 4 點按**類型**，然後從以下選項中選擇：**約會**、**週年紀念**或**生日**。檢查日期，並輸入開始事件的時間。
- 5 對於約會和週年紀念日，請在下方兩個時間和日期方塊中輸入結束事件的時間和日期。
- 6 若要新增主題或備註至事件中，請點按**備註**，然後鍵入您的備註。
- 7 設定**鬧鐘**和**重複**。


- 8 選擇**儲存**，則事件將儲存至日曆中。方形彩色游標會標記已儲存事件的日期，且於事件開始時間響鈴，以便您可以進行組織。

**提示!** 您可以在日曆中設定假期。每次點按假日中的一日，然後點按  並選擇**設定假期**。每一日均為粉紅色。



## 變更預設日曆檢視

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**記事簿**。選擇**設定**。
- 2 點按**日曆**並選擇**每月檢視**或**每星期檢視**。
- 3 設定**每星期開始於**。
- 4 按**儲存**確認選擇。

## 新增項目至待辦事項清單

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**記事簿**。
- 2 選擇**待辦事項**並點按**新增待辦事項**。
- 3 為工作設定日期，新增備註，並選擇優先等級：**高**、**中**或**低**。
- 4 透過選擇**儲存**，儲存您的工作。

## 共用待辦事項工作


- 1 從主屏幕，選擇 ，然後依次選擇**實用工具**和**記事簿**。選擇**待辦事項**。
- 2 選擇要共用的工作，然後點按 。
- 3 選擇**發送**。您可選擇按**文字訊息**、**多媒體訊息**、**電子郵件**或**藍芽發送**。

**提示!** 您可以備份並同電腦同步日曆。

## 使用日期搜尋器



日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。例如，自 07 年 10 月 10 日 60 天後的日期為 2007 年 12 月 09 日。

非常適合標記時限。

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**記事簿**。
- 2 選擇**日期搜尋器**。
- 3 在開始日中設定所需日期。
- 4 在之後標籤中設定天數。
- 5 以下將顯示**預計日期**。

# 記事簿

## 設定鬧鐘


- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**鬧鐘**。
- 2 點按**新增鬧鐘**。
- 3 設定鬧鐘響鈴的時間並點按**儲存**。
- 4 選擇鬧鐘的重複方式：每天、星期一至星期五、星期一至星期六、星期六至星期日或假日除外或選擇工作天。  
圖示指明您選擇的工作日。
- 5 選擇**鬧鐘類型**，為鬧鐘選擇一種類型。
- 6 點按**鬧鈴**，然後選擇響鈴。若要收聽聲音，請依次點按聲音和 。
- 7 新增鬧鐘備忘錄。
- 8 最後，您可將延後間隔設定為 5、10、20、30 分鐘、1 小時或關閉。
- 9 一旦設定鬧鐘後，點按**儲存**。

- 10 若要關閉鬧鐘，您可選擇關閉。

**注意：**您最多可設定 5 個鬧鐘。

**提示！** 點按鬧鐘右側的開啟/關閉圖示。



## 新增備忘錄

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**備忘錄**。
- 2 點按**新增備忘錄**。
- 3 鍵入備忘錄，然後按**儲存**。
- 4 下次開啟**備忘錄**應用程式時，備忘錄將顯示在屏幕上。

**提示！** 您可以編輯現有備忘錄。選擇要編輯的備忘錄，並鍵入您的變更內容。

## 語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音。

- 1 依次點按  和**實用程式**。
- 2 依次點按**語音備忘錄**和  並從以下選項中選取：

**設定 > 長度** - 設定錄音持續時間。可選選項包括**多媒體訊息**、**1分鐘**或**無限制**。

**設定 > 質素** - 選擇音質。從**特細緻**、**細緻**或**標準**中進行選擇。


**轉至我的聲音** - 開啟**我的聲音**中的錄音資料夾。


## 錄製聲音或語音

- 1 依次點按  和**實用程式**。
- 2 點按**語音備忘錄**。
- 3 點按  以開始錄製。
- 4 點按  以結束錄製。
- 5 點按  以收聽錄音。



## 發送錄音

- 1 完成錄製後，點按 。
- 2 點按**發送**並從**訊息**、**電子郵件**或**藍芽**中選擇。若選擇**訊息**或**電郵**，錄製會新增至訊息中，您可按正常方式編寫和發送。若選擇**藍芽**，則系統會提示您開啟藍芽。


**注意：**完成錄製後，點按  並選擇**發送**、**檔案**、**刪除**、**使用方式**（將錄製用作鈴聲）、**設定**或**轉至我的聲音**。

# 記事簿

## 使用計算機


- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**工具**。
- 2 選擇**計算機**。
- 3 點按數字鍵，輸入數字。
- 4 對於簡單計算，點按所需的功能（+、-、x、÷），然後按 =。
- 5 對於較為複雜的計算，點按  並選擇 sin、cos、tan、deg、sec、csc、cot、rad、log、ln 或 exp。

## 轉換單位



- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**工具**。
- 2 選擇**單位轉換器**。
- 3 選擇要轉換**匯率、面積、長度、重量、溫度、體積**還是**速度**。

- 4 然後，您可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。
- 5 對應值將顯示於屏幕上。

## 使用秒錶


- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**工具**。
- 2 選擇**秒錶**。
- 3 點按**開始**開始使用計時器。
- 4 如果要記錄圈速，點按圈。
- 5 點按**停止**結束計時器。
- 6 點按恢復以在停止的時刻處重新啟動秒錶，或點按**重新設定**重新開始計時。

## 新增城市至全球時間


- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**工具**。
- 2 選擇**世界時鐘**。
- 3 點按  圖示，然後點按**新增城市**。開始鍵入所需的城市名稱，該城市名稱將顯示於屏幕上。
- 4 點按城市予以選定，則該城市會新增至您的世界時鐘清單中。

## 慢跑夥伴


無論是散步、跑步或慢跑，GT505 透過使用進階 GPS 技術，為您提供最新資訊，包括距離和時間，並保持您的鍛煉記錄。

- 1 從主屏幕，選擇 ，然後點按**實用工具**，並選擇**工具**。
- 2 選擇**慢跑夥伴**。
- 3 點按 <<>> 設定慢跑的距離或時間。

- 4 您可開啟或關閉標定時嗶聲。
- 5 一旦連接至 GPS，開始按鈕將會亮起。點按  開始。

 - 重設按鈕

 - 開始按鈕

 - 暫停按鈕

 - 停止按鈕

定時嗶聲 - 手機按照一定距離或時間間隔發出蜂鳴聲，以便您進行跟蹤且無需查看屏幕。

# 電腦同步

## 永遠詢問

如果將「永遠詢問」設定為預設，在您每次透過數據線將手機連接到 PC 時，手機都會提示您選擇 USB 連接模式類型。如果停用「永遠詢問」，連接模式將是您在「功能表」-「設定」-「連接」-「USB 連接模式」的**大容量儲存**、**PC suite** 或**音樂同步**三個選項中手動選擇的模式。

您可將電腦同手機保持同步，從而確保所有重要詳情和日期相匹配，同時作為重要檔案備份，讓您完全放心。

## 在電腦上安裝 LG PC Suite

- 1 從主屏幕，點按並選擇**連接**。
- 2 選擇 **USB 連接**模式並點按**確定**。
- 3 提供的光碟 插入電腦。按一下出現在屏幕上的 LG PC Suite 安裝程式。

- 4 選擇執行安裝程式時使用的語言並按一下**確定**。
- 5 遵循屏幕上的說明，完成 LG PC Suite 安裝程式精靈。
- 6 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

## 連接手機和電腦

- 1 將 USB 線連接到手機和電腦。
- 2 連按兩下位於桌面上的 **LG PC Suite** 圖示。
- 3 依次按**連線精靈**和 **USB**。
- 4 依次按**下一步**、**下一步**和**完成**。手機和電腦現已連接。

## 備份和還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下**備份**圖示，並選擇**備份**或**還原**。
- 3 選擇備份內容資料和/或電話簿/日程表/任務/備忘錄資料。選擇要將資訊備份的位置或還原資訊的位置。按一下開始備份。
- 4 資訊將會備份。

## 檢視電腦上的手機檔案

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下**管理檔案**圖示。
- 3 所有儲存至手機上的文件、flash 內容、圖像、聲音和影片將會顯示於 LG 手機資料夾的屏幕上。

**提示!** 在電腦上檢視手機的內容，有助您整理檔案、管理文件並刪除不再需要的內容。

## 同步處理通訊錄

- 1 將手機連接到電腦。
- 2 按一下**管理通訊錄**圖示。
- 3 現在，電腦匯入並顯示儲存至智能咭和手機的所有聯絡人。
- 4 按一下**檔案**並選擇**儲存**。現在，您可選擇要儲存聯絡人的位置。

**注意:** 要備份儲存至智能咭的聯絡人，請按一下位於電腦屏幕左側的智能咭資料夾。在其中一個聯絡人上按滑鼠右鍵，並選擇**全部**，然後選擇**複製**或**移至手機記憶體**。

在聯絡人上按滑鼠右鍵，並選擇**複製至通訊錄**。現在按一下位於屏幕左側的**手機**資料夾，顯示所有號碼。


# 電腦同步

## 同步訊息

- 1 將手機連接到電腦。
- 2 按一下**訊息**圖示。
- 3 所有電腦和手機訊息將顯示於屏幕的資料夾中。
- 4 使用屏幕上的工具列編輯和重新排列訊息。

## 將手機用作大容量儲存裝置

只有在您已插入記憶咭的情況下，手機方可用作大容量儲存裝置。

- 1 斷開電腦與手機之連接。
- 2 從主屏幕，選擇 ，然後點按**設定**。
- 3 依次選擇**連接**和 **USB 連接**模式。
- 4 點按**大容量儲存**。

- 5 將手機連接到電腦。手機將讀取：**以大型儲存裝置連接**…及**以大型儲存裝置模式連線**。傳送期間請勿中斷連線。
- 6 卸除式磁碟資料夾將自動在電腦上開啟。


**注意：**大量儲存裝置僅備份儲存在記憶咭，而不是手機記憶體上的內容。要傳送手機記憶體的內容 (例如，聯絡人)，您需要使用「電腦同步」來進行同步。

# 網絡功能

## 瀏覽器

**瀏覽器**可讓您快速、盡情享受遊戲、音樂、新聞、體育和娛樂，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

## 存取網絡

- 1 從主屏幕選擇 ，然後點按**實用程式**，並選擇**瀏覽器**。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後點按**連接**。

**注意：**連線至此服務並下載內容時，會產生其他費用。請向網絡供應商諮詢資料費用。

## 新增並存取書籤

為了方便快捷地存取喜愛的網站，您可新增書籤並儲存網頁。

- 1 從主屏幕，選擇 ，然後點按**實用程式**，並選擇**瀏覽器**。
- 2 選擇書籤。書籤清單顯示在屏幕上。
- 3 要新增書籤，請選擇 ，然後按**新增書籤**。依次輸入書籤標題和連結。
- 4 點按**儲存**。此時，書籤將顯示於書籤清單中。
- 5 若要存取書籤，只需點按書籤，然後點按**連接**。您將連線到該網頁。


# 網絡功能

## 使用 RSS 讀取裝置

RSS (Really Simple Syndication) 是網絡 Feed 格式成員之一，用於發布經常更新的內容，如 Blog 條目、新聞標題或 Podcasts。RSS 文件也稱為 feed、web feed 或頻道，包含來自關聯網站的內容概要或完整文字。RSS 使得人們可以自動跟蹤其最愛網站的更新，這比手動查看要容易多了。


用戶可透過在閱讀器中輸入 feed 連結或按一下啟動訂閱程序的瀏覽器中的 RSS 圖示，即可訂閱 feed 服務。閱讀器會定期檢查用戶訂閱的 feeds，查看是否有新內容更新，並下載其發現的任何更新。

## 儲存網頁


- 1 根據以上所述步驟存取網頁。
- 2 點按  並選擇**儲存此網頁**。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 點按**儲存**。

**提示!** 此功能表亦讓您編輯已儲存頁面標題，保護或取消保護屏幕備忘錄並刪除已儲存頁面。


## 存取已儲存的網頁

- 1 從主屏幕選擇 ，然後點按**實**用程式，並選擇**瀏覽器**。
- 2 選擇**儲存的網頁**。
- 3 選擇要檢視的網頁後，即可開啟網頁。

## 檢視瀏覽器記錄

- 1 從主屏幕選擇 ，然後點按**實用程式**，並選擇**瀏覽器**。選擇**記錄**。
- 2 會顯示最近存取的網頁。若要存取這些網頁中的某個網頁，只要選擇所需網頁即可。

## 變更網頁瀏覽器設定

- 1 從主屏幕選擇 ，然後點按**實用程式**，並選擇**瀏覽器**。選擇**設定**。
- 2 您可選擇編輯**網絡設定**、**外觀設定**、**快取記憶**、**Cookies**、**安全性**或**重設設定**。
- 3 透過點按開關圖示，您只能將這些選項設定為開啟或關閉。

## 將手機用作數據機

GT505 亦可用作電腦的數據機，為您提供電子郵件和互聯網存取功能。您可以使用 USB 線或藍芽。

### 使用 USB 線：

- 1 確保 LG PC Suite 已安裝於電腦上。
- 2 使用 USB 傳輸線連接 GT505 手機和電腦，並啟動 LG PC Suite 軟件。
- 3 按一下電腦上的**通訊**。然後，按一下**設定**並選擇**數據機**。
- 4 選擇 **LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示在屏幕上。
- 5 按一下「**連接**」，您的電腦便可透過 GT505 手機進行連線。

# 網絡功能


## 使用藍芽：

- 1** 確保藍芽已**開啟**，且**可見於**電腦和 GT505 手機。
- 2** 配對電腦和 GT505 手機，以便連線時需要密碼。
- 3** 使用 LG PC 套件上的**連線精靈**，建立有效的藍芽連線。
- 4** 按一下電腦上的**通訊**。然後按一下**設定**。
- 5** 按一下**數據機**。
- 6** 選擇以**藍芽連線的標準數據機**並按一下**確定**。此時，它將顯示在屏幕上。
- 7** 按一下**連接**，您的電腦便可透過 GT505 手機進行連線。

# 設定

您可透過此資料夾調整各項設定，以便讓 GT505 手機適合您的個人需要。

## 變更屏幕設定


- 1 點按 ，然後選擇**設定**。
  - 2 點按**屏幕**，並從以下選項中選擇：
    - 牆紙** - 選擇主屏幕主題。
    - 撥號** - 調校號碼大小和色彩。
    - 字體** - 調整字型大小。
    - 背光燈** - 選擇背光燈的維持時間。  
**注意：**背光燈開啟時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。
    - 亮度** - 調校屏幕的亮度。
    - 手機主題** - 快速變更屏幕的整個外觀。
    - 問候語訊息** - 選擇開啟或關閉，填寫問候語訊息。
- 為來電、撥出通話、**開機**和**關機**選擇圖像。

- 3 點按**儲存**以儲存您的設定。

## 個人化情景模式

您可在主屏幕上快速變更您的情景模式。只需要點按狀態摘要圖示，並點按情景模式標籤。

使用設定功能表，您便可個人化每種情景模式設定。


- 1 按 ，然後選擇**設定**。
- 2 點按**情景模式**，然後選擇您要編輯的情景模式。
- 3 然後，您便可變更清單中的所有可用聲音和提示選項，包括**話音/視像鈴聲及音量、訊息提示及更多**。(除飛航模式外)

## 變更手機設定

您可隨意調整 GT505 的設定，以便適合您的個人偏好。

**提示!** 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

# 設定

- 1 點按 ，然後選擇**設定**。
- 2 點按**手機設定**，然後從以下清單中進行選擇。

**日期及時間** - 調整您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。

**省電模式** - 選擇切換原廠設定省電設定**開啟**或**關閉**。

**語言** - 變更 GT505 的顯示語言。

**自動按鍵鎖** - 在主屏幕下自動鎖定鍵盤。


**安全** - 調節您的安全設定，包括 PIN 碼及手機鎖。

**記憶體管理** - 請參閱**使用記憶體管理程式**。

**重設設定** - 將所有設定重設為原廠設定。

**資訊** - 檢視 GT505 手機的技術資訊。

## 更換觸控設定

依次點按  和**設定**。選擇**觸控設定**。若要重設觸控板，以更易於使用，請選擇**觸控板校準**並點按十字交叉。若已滿意設定，請儲存設定。

選擇**觸控屏幕效果**以便重設**觸控類型**、**音調**、**音量**和**震動**。

## 變更連接設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

依次點按  和**設定**。點按**連接**。

**網絡設定** - 您的 GT505 會自動連線至您的首選網絡。使用此功能表可更換這些設定。

**互聯網設定** - 設定互聯網連接的設定檔。

**存取點** - 您的網絡商已經為您儲存此資訊。您可以使用此功能表來新增存取點。

**GPS 類型** - 選擇**輔助型**或**獨立式 GPS**。

#### GPS

- GPS 技術使用地球軌道衛星提供的資訊，尋找位置。
- 接收器根據訊號抵達的時間，預計到 GPS 衛星的距離，然後使用此資訊確認其位置。
- 所花時間從幾秒鐘到幾分鐘不等。
- 此手機上的輔助型 GPS (A-GPS) 用於透過分組數據連接，擷取位置輔助數據。
- 僅在必要時才從服務伺服器擷取輔助數據。
- 對您所在的位置拍照，並使用有關位置資訊標記拍攝的圖片。

**注意：**GPS 服務具有容錯能力，無法在建築物或地下工作。

**USB 連接模式** - 使用 LG PC Suite 軟件，從手機複製檔案，從而同步 GT505 手機。

若將音樂同步與 Windows Media Player 配合使用，則選擇此功能表中的音樂同步。音樂同步僅可用於音樂內容。若要同步外置記憶體，您可使用「外置記憶體」作為主要儲存裝置。若要同步內置記憶體，您可使用「內置記憶體」作為主要儲存裝置。

**Java 設定** - 允許您設定 Java。

**同步服務** - 伺服器同步功能透過無線網絡同步手機中的資料與伺服器上的資料，如通訊錄地址資訊、日程表項目、待辦事項項目和備忘錄項目。

**串流播放設定** - 您的網絡商已經為您儲存此資訊。若要作出變更，您可對其進行編輯。

# 設定

## 使用記憶體管理

GT505 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

依次點按  和**設定**。選擇**手機設定**，然後選擇**記憶體管理**。

**手機共用記憶體** - 查看 GT505 手機上可用於圖片、聲音、影片、Flash、多媒體訊息、電子郵件、Java 應用程式和其他的記憶體。


**手機預留記憶體** - 查看手機上可用於文字訊息、通訊錄、日曆、待辦事項、備忘錄、鬧鐘、通話記錄、書簽和其他的記憶體。

**智能咭記憶體** - 查看智能咭上可用的記憶體。

**外置記憶體** - 檢視可用於外置記憶咭的記憶體（您可能需要另行購買記憶咭）。

**主要儲存裝置設定** - 選擇首選儲存項目的位置。

## 使用飛航模式


透過選擇 ，然後選擇**設定**，開啟飛航模式。點按**情景模式**，然後選擇**飛航模式**。

在飛航模式中，您不可撥打電話、連線到互聯網、發送訊息或使用藍芽。

## 使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為不需要 USB 線，且連線方便快捷。您亦可連接藍芽到手機，以接聽來電。

### 發送檔案：

- 1 開啟要發送的檔案，通常為照片、影片或音樂檔案。
- 2 點按 ，然後選擇**發送**。選擇**藍芽**。
- 3 點按**是**開啟藍芽。
- 4 若您已配對藍芽裝置，GT505 將無法自動搜尋其他藍芽裝置。否則，GT505 手機將搜尋範圍內其他已啟動藍芽的裝置。



- 5 選擇要將檔案發送至的裝置並點按**選擇**。
- 6 您的檔案將會送出。

**提示!** 留意進度列，確保檔案已發送。

### 接收檔案：

- 1 要接收檔案，藍芽必須為**開啟**並**可見**。參閱以下的**變更您的藍芽設定**，了解更多詳情。
- 2 系統顯示一則訊息，提示您接受來自寄件者的檔案。點按**是**以接收檔案。
- 3 您可查看到檔案儲存位置並選擇**檢視**檔案或用作牆紙。檔案通常儲存到我的檔案中合適的資料夾內。

### 變更藍芽設定：

- 1 點按  並選擇**設定**。
- 2 選擇**藍芽**，然後點按  並選擇**設定**。

對以下選項作出變更：

**顯示我的手機** - 選擇**可見**或**隱藏**或**可見時間**為**1分鐘**。

**我的裝置名稱** - 為 GT505 手機輸入名稱。

**支援的服務** - 顯示受手機支援的所有藍芽功能。

**我的位址** - 顯示您的藍芽地址。

# 設定

## 同其他藍芽裝置配對

透過將 GT505 手機與其他裝置配對，您可設定一個密碼保護連接。這意味著配對會更安全。

- 1 檢查藍芽是否為**開啟並可見**。  
您可在**設定**功能表中變更您的可見狀態。
- 2 點按**搜尋**。
- 3 GT505 手機將搜尋裝置。完成搜尋後，**重新整理**將顯示在屏幕上。
- 4 選擇要配對的裝置並輸入密碼，然後點按**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的通行碼。
- 6 密碼保護藍芽連線已準備就緒。

## 使用藍芽耳機

- 1 檢查藍芽是否為**開啟並可見**。
- 2 遵循隨手機附帶的說明，將手機置於配對模式中並配對裝置。
- 3 點選**每次必須問我**或**不需問就許可**並點按**是**立即連接。您的 GT505 將自動切換至耳機設定檔。

# Wi-Fi

無線管理員可讓您管理裝置上的 Wi-Fi 互聯網和藍芽連線。它容許手機連接本地無線網絡或無線存取互聯網。Wi-Fi 速度較快，且比藍芽無線技術擁有的範圍更廣。

**注意：**GT505 手機支援 WEP、WPA-PSK/2 加密，不支援 EAP 加密。如果 Wi-Fi 服務供應商或網絡管理員設定網絡安全性的加密，您應在彈出視窗中填入對應密鑰。如果尚未設定加密，則系統不會顯示此彈出視窗。如果您不知道密鑰，則需要向 Wi-Fi 服務供應商或網絡管理員諮詢。

## 1. 如何設定 Wi-Fi

- 1 Wi-Fi 開啟
- 2 AP (存取點) 搜尋
  - 搜尋可用於連接的 AP。
- 3 AP 連接
  - 連接至 AP 搜尋清單中想要的 AP。
  - 如果 AP 為 WEP 或 WPA-PSK/2 安全種類，請輸入安全密鑰。

## 2. Wi-Fi 網絡設定檔支援

- 1 Wi-Fi 設定檔支援 (如何連接至常用 AP 或隱藏式 AP)
  - 1) 若 AP 未顯示於搜尋清單中，則可以透過將其另存為設定檔的方式進行連接。
  - 2) 透過將常用 AP 另存為設定檔，則可以輕鬆地在連接至具有安全種類的 AP 時輸入安全密鑰。
  - 3) 若 AP 不支援 DHCP，則可以透過使用靜態 IP 連接至此 AP。

# Wi-Fi

## 2 Wi-Fi 設定檔中各個欄位的說明

- 1) 網絡名稱：SSID (ID)
- 2) 安全種類：WEP、WPA-PSK/2 支援。
- 3) 安全密鑰：儲存安全密鑰。
- 4) IP/DNS 設定：允許您根據 AP 的 DHCP 支援設定動態或靜態 IP。  
如果設定為靜態，請在嘗試連接時輸入 IP 地址的欄位值以及用來連接靜態 IP 的 DNS 伺服器。

## 3 如何儲存 Wi-Fi 設定檔

- 1) 從「選項」功能表中選擇「已儲存網絡」，然後選擇「新增網路」並在每個欄位中輸入值。
- 2) 選擇「Wi-Fi 開啟」並選擇「重新整理」（搜尋 AP），便可選擇並儲存 AP 搜尋清單。
- 3) 連接至 AP 之後，是/否快顯視窗可讓您儲存設定檔。

# 軟件更新

## LG 手機軟件更新程式

有關安裝和使用此程式的更多資訊，請瀏覽

<http://update.lgmobile.com>。

此功能可讓您在互聯網上快捷方便地將軟件更新到最新版本，而無需造訪我們的服務中心。

由於手機軟件更新程式在更新過程中需要用戶格外留意，因此，在繼續下一步操作之前，請務必仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在更新過程中移除 USB 線或電池可能會對手機造成嚴重損壞。由於製造商不會為更新過程中的數據損失承擔任何責任，建議您事先備份好任何重要數據，以策安全。

# 配件

以下配件隨 GT505 手機一併提供。

## 充電器



## USB 線及光碟

在 GT505 和電腦間建立連接並進行同步。



## 電池



## 立體聲耳機



## 使用手冊

了解有關 GT505 的更多資訊。



## 注意：

- 只可用原裝LG 配件。
- 不使用原裝LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商了解更多詳情。

## 網絡服務

本手冊所述之無線電話經認可可用於 GSM 及 W-CDMA 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

## 技術數據

### 一般

產品名稱： GT505

系統： UMTS 900/2100  
GSM 850/900/1800/1900

### 環境溫度

最高： + 50 ° C (放電)，  
+ 45 ° C (充電)

最低： - 10 ° C (放電)，  
0 ° C (充電)

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

GT505

Trade Name

LG

CE 0168 !

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

13. May, 2009

Signature of representative

# 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

## 射頻能量暴露準則

### 無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 GT505 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.941 W/kg (10g)，攜帶於身上時則為 1.17 W/kg (10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

## 產品護理及維修

### 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合格的維修技師處。
- 請遠離電視、收音機或電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。

# 安全及有效使用準則

- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

## 有效手機操作

### 電子裝置

所有手機都可能因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

## 道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子設備，例如立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

## 玻璃部件

手機的部分部件採用玻璃製成。若手機墜落至堅固表面或受到硬物碰撞，玻璃會破碎。若玻璃破碎，則切勿觸碰或企圖移除玻璃。應停止使用手機，直到經由授權服務供應商更換玻璃才能再次使用。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

# 安全及有效使用準則

## 潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

## 電池資料及保護

- 充電前，您無需完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。

- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

# 故障排解

本章列出了您在使用手機過程中可能會遇到的一些問題。部份問題可能需要諮詢服務供應商，而絕大部份的問題都可自行輕鬆解決。

訊息	可能原因	可用解決方法
智能咭錯誤	手機中無智能咭，或插入方式不正確。	請確保智能咭正確插入。
無網絡	訊號較弱 位於 GSM 網絡服務範圍外	舉高手機面向窗口或移到開闊的位置。諮詢服務供應商，瞭解服務區域地圖。
代碼不匹配	在變更安全密碼前，您必須再次輸入以確認新密碼。 兩次輸入的密碼不匹配。	聯絡服務供應商。
無法設定功能	服務供應商不支援此功能 或功能需要註冊	聯絡服務供應商。
無法撥打電話	撥號錯誤 新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。查看新的限制條款。聯絡服務供應商或使用 PIN 2 碼重設限制。

訊息	可能原因	可用解決方法
無法開機	按開/關鍵時間太快 電池已耗盡	按開/關鍵至少兩秒鐘。 為電池充電。檢查觸控充電指示器。
	電池觸片不潔淨	清潔觸片。
充電錯誤	電池完全無電 不在適當溫度範圍內 接觸問題	為電池充電。 確定室溫合適，稍候再充電。 檢查電源以及與手機的連接。檢查電池觸片，必要時進行清潔。
	電源無電 充電器故障	插入到其他插座或檢查電壓。 如果充電器沒有反應，請更換充電器。
	使用不當充電器 電池故障	只可使用原廠 LG 配件。 更換電池。
	手機失去網絡 連接	訊號太弱
號碼不允許	固定撥號功能已開啟。	檢查設定。



此手册中的部份内容可能会因手机程序之改良或各网络商提供的服务而有所不同,这并不会另行通知。

## GT505 用户指南





恭喜您购买此款功能先进、外观小巧的 LG  
GT505 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

# 内容

开始了解您的手机.....	8	更改常用通话设置.....	25
打开视图.....	10	更改视频通话设置.....	26
安装 USIM 卡和电池.....	11	<b>电话本.....</b>	<b>27</b>
存储卡.....	14	正在搜索联系人.....	27
菜单地图.....	16	添加新联系人.....	27
<b>主屏.....</b>	<b>17</b>	创建群组.....	28
触摸屏提示.....	17	更改联系人设置.....	28
快速键.....	18	<b>信息.....</b>	<b>30</b>
状态栏.....	19	信息.....	30
从状态栏更改状态.....	20	发送信息.....	30
使用多任务功能.....	20	输入文本.....	30
<b>通话.....</b>	<b>21</b>	T9 预测.....	31
拨打电话或视频电话.....	21	Abc 手动.....	31
从电话本拨打电话.....	21	设置电子邮件.....	31
接听和拒绝电话.....	21	使用新帐户发送电子邮件.....	33
通话选项.....	22	更改电子邮件设置.....	34
调节通话音量.....	23	信息文件夹.....	35
快速拨号.....	23	使用模板.....	35
拨打第二个电话.....	23	使用图释.....	35
关闭 DTMF.....	24	更改文本信息设置.....	35
查看通话记录.....	24	更改多媒体信息设置.....	36
使用呼叫转接.....	24	更改其它设置.....	37
使用呼叫限制.....	25	<b>相机.....</b>	<b>38</b>
		快速拍照.....	38
		拍照后.....	38

了解取景器 .....	39	为照片添加文本 .....	51
使用闪光灯 .....	40	为照片添加效果 .....	51
调节曝光 .....	40	裁切照片 .....	51
连拍 .....	40	为照片添加颜色 .....	52
使用高级设置 .....	41	交换照片中的颜色 .....	52
更改图像大小 .....	42	<b>多媒体 .....</b>	<b>53</b>
选择色彩效果 .....	42	图片 .....	53
使用内置相机 .....	43	我的图像选项菜单 .....	53
查看保存的照片 .....	43	发送照片 .....	53
<b>摄像机 .....</b>	<b>44</b>	使用图像 .....	54
快速摄像 .....	44	调整图像 .....	54
拍摄视频后 .....	44	移动或复制图像 .....	54
了解取景器 .....	45	创建幻灯片 .....	55
调节曝光 .....	46	声音 .....	55
使用高级设置 .....	46	使用声音 .....	55
更改视频大小 .....	47	视频 .....	55
选择色调 .....	47	暂停视频时使用选项 .....	56
使用内置摄像机 .....	48	发送视频剪辑 .....	56
观看保存的视频 .....	48	我的游戏和应用程序 .....	56
<b>照片和视频 .....</b>	<b>49</b>	玩游戏 .....	56
查看照片和视频 .....	49	使用游戏选项菜单 .....	57
查看照片时使用缩放 .....	49	Flash 内容 .....	57
观看视频时调节音量 .....	49	查看 SWF/SVG 文件 .....	57
将照片设为墙纸 .....	49	文档 .....	57
编辑照片 .....	50	查看文件 .....	57
		将文件传输到手机 .....	57

# 内容

其它.....	58	慢跑伴侣.....	67
创建电影.....	58	<b>电脑同步.....</b>	<b>68</b>
音乐.....	59	在计算机上安装 LG PC 套件.....	68
将音乐传输到手机.....	59	连接手机和 PC.....	68
播放歌曲.....	60	备份和恢复手机信息.....	69
创建播放列表.....	60	在 PC 上查看手机文件.....	69
删除播放列表.....	60	同步电话本.....	69
使用收音机.....	61	同步信息.....	70
搜索电台.....	61	将手机用作大容量存储器设备.....	70
重置频道.....	61	<b>网络.....</b>	<b>71</b>
收听收音机.....	61	浏览器.....	71
<b>公文包.....</b>	<b>62</b>	访问网页.....	71
将事件添加到日程表中.....	62	添加并访问书签.....	71
更改默认日历视图.....	62	使用 RSS 阅读器.....	72
向任务列表添加项目.....	63	保存页面.....	72
共享任务.....	63	访问保存的网页.....	72
使用日期计算器.....	63	查看浏览器历史记录.....	73
设置闹钟.....	64	更改网络浏览器设置.....	73
添加备忘录.....	64	将手机用作调制解调器.....	73
语音备忘录.....	65	<b>设置.....</b>	<b>75</b>
录制声音或语音.....	65	更改屏幕设置.....	75
发送录音.....	65	更改情景模式.....	75
使用计算器.....	66	更改手机设置.....	75
换算单位.....	66	更改触摸设置.....	76
使用秒表.....	66	更改连接设置.....	76
向世界时间添加城市.....	67		

使用内存管理器.....	78
使用飞行模式.....	78
使用蓝牙发送和接收文件.....	78
与其它蓝牙设备配对.....	80
使用蓝牙耳机.....	80
Wi-Fi.....	81
手机软件升级.....	83
配件.....	84
网络服务.....	85
技术参数.....	85
关于安全有效使用手机的准则 .....	87
故障诊断.....	92

# 开始了解您的手机

内置相机镜头

结束/电源键

挂断或拒接来电。  
开机/关机。  
按一次返回主屏。

多任务键

通话键

拨打电话号码并接听来电。



**警告：** 在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。



Micro SD 存储卡  
插槽



充电器、数据线、免提连接器

**提示!** 要连接 USB 数据线，请等到手机开机并注册网络。

侧键

- 屏幕处于待机模式时：按键音量。
- 通话时：耳机音量。
- 播放 BGM 曲目时：连续控制音量。

锁定/解锁键

捕获按钮

# 打开视图



# 安装 USIM 卡和电池

## 1 卸下电池盖

按住手机顶部的电池释放按钮，将电池盖滑出。



**警告：** 不要使用指甲取出电池。

**警告：** 手机开机时，不要取出电池，这可能会损坏手机。

## 2 取出电池

抬起电池顶端，小心将电池从电池室取出。



# 安装 USIM 卡和电池

## 3 安装 USIM 卡

将 USIM 卡滑进 USIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 USIM 卡，沿反方向轻推。



## 4 安装电池

先将电池顶端插入电池室顶部。请确保电池触点与手机端子对齐。向下推电池底端，直至电池卡入到位。



## 5 充电

滑开 GT505 侧面的充电器插槽盖。插入充电器并插入电流插座。要屏幕上显示“电池电量已满”信息，GT505 充电才完成。



# 存储卡

## 安装存储卡

使用存储卡，可以扩展手机的可用存储空间。

**备注：**存储卡是可选配件。


- 1 打开存储卡插槽。
- 2 将存储卡滑入插槽顶部，直到卡入到位。确保金色接触区域面朝下。



- 3 关闭存储卡盖。

## 格式化存储卡

如果已格式化存储卡，您可以开始使用。如果您的存储卡尚未格式化，那么在开始使用之前，请先格式化。



- 1 从主屏选择 ，然后点触**设置**并选择**手机设置**。
- 2 点触**内存管理器**，然后选择**外部存储器**。
- 3 点触**格式化**，然后确认选择。
- 4 输入密码（如果已设置）以格式化存储卡，现在，您可以使用该存储卡了。

**提示！** 要更改默认存储位置，请从“手机设定”菜单选择“主存储器设置”，以打开“内存管理器”。

**备注：**如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将自动保存到“我的视频”文件夹中。

## 传输电话本

将电话本从 USIM 卡传输到手机：

- 1 从“通信”选项卡选择**电话本**，然后点触 。
- 2 选择**存储为止**，然后选择**复制到 USIM 卡**或**移至 USIM 卡**。
- 3 逐个选择姓名，然后点触**复制或** 。

# 菜单地图

点触主屏中的  以打开**顶层菜单**。在此，您可以访问更多菜单：**通信**、**娱乐**、**实用工具**和**设置**。

## **通信**

- 电话本
- 最近记录
- 信息
- 电子邮件
- 拨号
- 可视电话

## **娱乐**

- 相机
- 摄像机
- 图片库
- 我的文档
- 音乐
- Muvee 工作室
- 游戏和应用程序
- FM 收音机

## **实用工具**

- 浏览器
- 导航
- Google
- 闹钟
- 公文包
- 备忘录
- 语音备忘录
- 工具

## **设置**

- 情景模式
- 显示设置
- 手机设定
- 蓝牙
- Wi-Fi
- 通话设置
- 触摸设置
- 连接

# 主屏

您可以通过此屏幕进入选项、拨打电话、查看手机状态等。

## 触摸屏提示

您也可以在主屏上熟悉使用触摸屏。

要选择项目，请点触图标中心位置。



- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- 屏幕灯关闭后，按电源键或长按触摸屏上的解锁键可以返回主屏。
- 不使用 GT505 时，将默认返回锁定屏幕。

# 主屏

## 快速键

主屏上的快速键使您可以一键式轻松访问常用功能。



点触可打开触摸拨号键盘，以拨打电话。按使用普通键盘的方式输入号码，然后点触**呼叫**或按  硬键。要与某号码进行视频通话，请在输入号码后按 ，然后选择**拨打视频电话**。



点触可以打开电话本。要搜索您要呼叫的号码，请使用键盘输入联系人姓名。您也可以创建新的联系人以及编辑现有联系人。



点触可以进入“信息”选项菜单。在此，您可以创建新的短信。



点触可以打开完整顶层菜单，该菜单被划分为四个子菜单。点触竖向选项卡以查看更多选项。

## 状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您可能在状态栏中看到的不同图标的涵义。


图标	描述
	多任务
	网络信号强度 (指示栏数不同)
	无网络信号
	剩余电量
	电池电量空
	新建文本信息
	新语音信息
	收件箱已满
	信息发送失败
	闹钟已设置

图标	描述
	正在使用“标准”情景模式
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用“耳机”情景模式
	呼叫被转接
	正在使用 EDGE
	正在漫游
	飞行模式开
	蓝牙已启动
	Wi-Fi 打开
	播放 BGM
	暂停 BGM

# 主屏

## 从状态栏更改状态

点触状态栏中显示您当前设置的当前状态图标将打开“状态摘要”。它显示当前时间、网络、服务 ID、电池、手机内存、外部存储器、情景模式、MP3、蓝牙及 Wi-Fi 状态。您可以设置情景模式类型、播放/暂停 MP3 及激活/关闭蓝牙和 Wi-Fi。

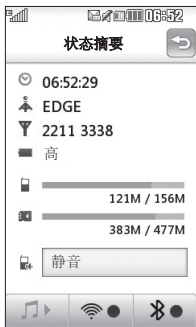

## 使用多任务功能

按多任务硬键以打开“多任务”菜单。在此，您可以查看正在运行的所有应用程序，并通过一个点触操作进入该应用程序。




从任何应用程序按“多任务”键并选择“主屏”可以返回主屏，而不退出或关闭该应用程序。

如果后台中正在运行某个应用程序（如，游戏或 FM 收音机），状态栏中将显示 。

当您通过主屏按此键时，您可以查看快捷菜单以访问常用功能。


# 通话

## 拨打电话或视频电话


- 1 点触  以打开键盘。
- 2 使用键盘键入号码。要删除一个数字，请按清除键。
- 3 点触  硬键启动通话。
- 4 要结束通话，请按  硬键。

**提示!** 要输入 + 以拨打国际电话，请点触  两次。


**提示!** 按“锁定/解锁”按钮锁定触摸屏，防止无意拨出电话。


**提示!** 通过点触 ，您可以拨打视频通话、发送信息、保存号码或搜索电话本。

## 从电话本拨打电话

- 1 从主屏点触  以打开电话本。
- 2 点触“姓名”，然后输入您要呼叫的联系人前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人，如果保存了多个号码，请选择您要使用的那个。
- 4 点触**呼叫**。

## 接听和拒绝电话


电话铃响起时，按  硬键接听电话。

轻触  以静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。


按  硬键拒接来电。

# 通话

## 通话选项

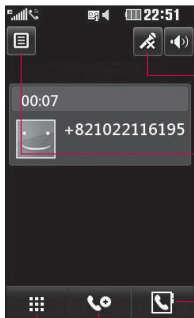


**扬声器** - 点触  打开手机扬声器。

**静音** - 点触  关闭麦克风，与您通话的对方将听不到您的声音。

**选项** - 从列表中选择其它来电选项，包括“新建备忘录”和“转到信息”，以便您在通话过程中查看信息和电话本。您可以通过点触结束通话来结束通话。

 - 选择在通话过程中搜索联系人。

 - 选择以将其他人添加到通话中。

 - 点触可以打开数字键盘，使用数字选项导航菜单。例如，呼叫呼叫中心或其它自动电话服务。



**提示!** 要在选项列表或联系人列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。


## 调节通话音量

要调节通话过程中的音量，请使用手机右侧的向上和向下按钮。

## 快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 从主屏点触  以打开电话本。
- 2 点触 , 选择**快速拨号**。
- 3 语音邮件已设为快速拨号 1。点触任意其它号码，为其指定快速拨号联系人。
- 4 此时将打开您的电话本。点触要指定到该号码的联系人电话号码一次，以选择该联系人。

要拨打快速拨号号码，请从主屏点触 , 然后按住为其指定的号码，直到屏幕上显示该联系人。

将自动启动呼叫，无需再按 **通话**。

## 拨打第二个电话

- 1 在初始呼叫中，点触  并选择您要呼叫的号码。
- 2 拨号或在电话本中搜索。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 要在通话间更改，请点触 , 然后选择**切换通话**或按保持的通话的号码。
- 6 要结束一个呼叫或同时结束两个呼叫，请按 , 选择**全部、已保留或启动**，然后选择**结束**。


**提示!** 您可以通过点触“加入图标”，然后点触**加入**连接多个通话。查看您的网络提供商是否支持多方通话。

**备注:** 您需要对每通电话付费。

# 通话

## 关闭 DTMF

DTMF 允许您使用自动通话中的数字命令导航。DTMF 默认为启动。

要在通话过程中关闭它（例如，要记下某个电话号码），请点触  并选择“关闭声音多频”。

## 查看通话记录

点触 ，选择**通信**，然后点触**最近记录**。


选择以查看：

**所有通话** - 查看所有拨电、已接来电和未接来电的完整列表。

**已拨电话** - 查看所有已拨打的电话的列表。

**已接来电** - 查看打给您的所有电话的列表。

**未接来电** - 查看您没接到的所有电话的列表。

**提示!** 从通话记录中点触  及**全部删除**以删除所有录制的项目。


## 使用呼叫转接

- 1 点触 ，选择**设置**，然后选择**通话设置**。
- 2 点触**呼叫转接**，然后选择**视频呼叫**和/或**语音呼叫**。
- 3 选择转接电话的情况：转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 输入您要转接的号码。
- 5 点触**请求**以激活。

**备注：**转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。


**提示!** 要关闭所有通话转接，请从**呼叫转接**菜单中选择**关闭全部**。

## 使用呼叫限制

- 1 点触 ，选择**设置**，然后选择**通话设置**。
- 2 点触**呼叫限制**，然后选择**视频呼叫**和/或**语音呼叫**。
- 3 选择以下五个选项中的一项或所有项：
  - 所有拨出电话
  - 国际拨出电话
  - 国际漫游时拨打电话
  - 所有来电
  - 国际漫游时来电
- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**提示!** 选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

## 更改常用通话设置

- 1 点触 ，选择**设置**，然后选择**通话设置**。
- 2 点触**常用设置**。在此，您可以修改以下设置：
  - 拒接来电** - 向左滑动开关以突出显示拒绝列表。您可以点触文本框，从所有通话、特定联系人或未知号码（不在电话本中的号码）中进行选择。点触**保存**以更改设置。
  - 发送我的号码** - 选择当您呼叫对方时是否显示您的号码。
  - 自动重拨** - 向左滑动开关为**开**，向右滑动开关为**关**。
  - 接听模式** - 选择是使用发送键还是任意键接听电话。
  - 分钟提示** - 向左滑动开关为**开**，在通话过程中每隔一分钟将听到提示音。


# 通话

**蓝牙接听模式** - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**按手机任意键接听来电。

**保存新号码** - 选择**是**以保存新号码。

**提示!** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

## 更改视频通话设置



- 1 点触 ，选择**通话设置**，然后选择**视频通话设置**。
- 2 选择视频通话的设置。确定是使用个人图像还是选择一个，以及/或者在进行视频通话时是否要打开镜像以在屏幕上看到自己。

# 电话本

## 正在搜索联系人

有两种方式可搜索联系人：

### 从主屏

- 1 从主屏点触  以打开电话本。点触“姓名”，使用键盘输入联系人的姓名。
- 2 点触 **通话** 或  硬键激活通话。

### 从主菜单

- 1 点触 ，选择**通信**。
- 2 点触**电话本**和**搜索**。

**提示!** 当您点触“姓名”时，将显示字母键盘。



**提示!** 要在联系人列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

## 添加新联系人

- 1 从主屏点触 ，然后选择**新建联系人**。
- 2 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 3 可以为每个联系人输入最多 5 个不同的号码并指定一个号码类型。从以下选项选择：**手机、家庭、办公室、传呼机、传真、VT 和普通**。
- 4 添加电子邮件地址。
- 5 将联系人分配到一个或多个群组。从以下选项选择：**无群组、家人、朋友、同事、同学或重要人士**。
- 6 您还可以添加**铃声、生日、主页、家庭地址、公司名称、职位、公司地址**和**备忘录**。
- 7 点触**保存**以保存联系人。

# 电话本

## 创建群组

- 1 从主屏点触 ，然后选择**通信**选项卡。点触**电话本**，然后选择**群组**。
- 2 点触 。
- 3 选择**新建群组**。
- 4 输入新群组的名称。
- 5 点触**保存**。


**备注：**如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。

**提示！**您可以通过突出显示现有群组并点触  以编辑它。

## 更改联系人设置

您可以调整您的电话本设置，使电话本符合您的需要。

**提示！**要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 从“通信”选项卡点触**电话本**，然后点触 。选择**设置**。
- 2 在此，您可以调整以下设置：  
**联系人列表设置** - 您还可以选择是先显示联系人的姓还是名。您可以将以下选项显示为快速命令键：“拨打语音电话”、“拨打视频电话”或“发送信息”。  
**同步** - 连接到服务器以同步电话本。请参阅**同步电话本**。

**导出电话本** - 将联系人从 USIM 卡复制到手机，或从手机复制到 USIM 卡。请选择是一次复制一个还是全部复制。如果选择一次复制一个，您需要逐个选择每个联系人以进行复制。

**导入电话本** - 其操作与复制相同，但联系人仅保存在移动目标位置。因此，如果将联系人从 USIM 卡移动到手机，其将从 USIM 存储卡中删除。

**通过蓝牙发送所有联系人** - 使用蓝牙，将所有联系人发送到其它设备或计算机。如果选择此选项，您会收到打开蓝牙的提示。

**清空电话本** - 删除所有联系人。如果确定要清空电话本，请点触是。

# 信息


## 信息


GT505 将短信、多媒体信息和电子邮件结合到一个直观易使用的菜单中。


有两种方式进入信息中心：

- 1 从主屏点触  或 ，然后选择**通信**和**信息**。

## 发送信息

- 1 点触 ，然后点触**写信息**打开空白信息。
- 2 在此，您可以选择**信息**发送短信或彩信。
- 3 点触**插入**添加图像、视频、声音、新幻灯片、主题或其它（名片、日历、备忘录、任务或我的名片）。
- 4 点触**收件人**输入收件人的号码，或点触搜索图标打开电话本。您可以添加多个联系人。完成后，请点触**发送**。

 **警告：** 您将按每个收件人每条文本信息 160 个字符付费。


 **警告：** 如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。


## 输入文本


有五种方式可输入文本：



按键、键盘、手写屏幕、手写箱、手写双屏。

点触屏幕即显示键盘。


 点触可以打开 T9 预测文本。

 您可以更改撰写语言。

 点触可以在号码、符号和文本键盘间更改。

在每种文本输入模式中，使用  在不同键盘类型之间滚动（例如，大写字母或小写字母）。  
要输入空格，请点触 。

## T9 预测

在 T9 模式中，您将看到 。  
T9 模式使用内置字典，根据您点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，随着您的键入内容，字典将预测您想要使用的单词。  
例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

## Abc 手动

在 Abc 模式中，要输入字母，您必须重复点触按键。例如，要写入“hello”，需要点触两次 4、两次 3、三次 5，再点触三次 5，最后点触三次 6。

## 设置电子邮件

使用 GT505 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

**提示!** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 从主屏点触 ，然后点触 **电子邮件**。
- 2 点触 。
- 3 点触 **添加帐户**。
- 4 现在，您可以选择帐户工作方式：  
**标题** - 输入此帐户的名称。  
**我的名称** - 输入您的名称。  
**用户名** - 输入帐户的用户名。

# 信息

**密码** - 输入帐户的密码。

**电子邮件地址** - 输入帐户电子邮件地址。

**回复电子邮件地址** - 输入“回复”电子邮件地址。

**发出邮件服务器** - 输入发出邮件服务器地址。

**接收邮件服务器** - 输入接收邮件服务器地址。

**最大接收字节数** - 选择电子邮件的大小限制，最大为 2MB。

**邮箱类型** - 输入邮箱类型：  
POP3 或 IMAP4。

**保存到服务器** - 选择是否将电子邮件保存到服务器。对于 IMAP4 账户，始终保存副本。

**保存已发送邮件至** - 选择保存已发送邮件的位置（当邮箱类型设为 IMAP4 时）。当邮箱类型设置为 POP3 时，已发送邮件将始终保存在手机中。

**仅检索新邮件** - 选择是否放弃之前下载的电子邮件。

**接入点** - 选择互联网接入点。

**下载选项** - 选择下载电子邮件的方式。对于 POP3，选择是“仅标题”还是“全部”（包括正文），对于 IMAP4，选择是“仅标题”、“标题 + 正文”还是“全部”。

**自动检索** - 选择是否自动提取新电子邮件。

**高级设置** - 选择是否使用高级设置。

**SMTP 端口号** - 通常为 25。

**SMTP TLS/SSL** - 对于发送服务器，选择是否使用 TLS/SSL。

**接收服务器端口** - 通常，对于 POP3 账户为 110；对于 IMAP4 账户为 143。

**接收 TLS/SSL** - 对于接收服务器，选择是否使用 TLS/SSL。

**SMTP 认证** - 选择发送邮件服务器的安全设置。

**SMTP 用户名** - 输入 SMTP 用户名。

**SMTP 密码** - 输入 SMTP 密码。

**APOP 安全登录** - 选择可为 POP3 帐户激活 APOP 安全登录。IMAP4 账户通常设置为“关”。

现在，已经设置了您的账户，它将显示在“电子邮件”文件夹的账户列表中。

## 使用新帐户发送电子邮件

- 1** 点触“通信”菜单中的**电子邮件**打开空的新电子邮件。
- 2** 您可以输入收件人的地址，写信息。您还可以附加图像、视频、声音或其它文件类型。
- 3** 点触**发送**，您的电子邮件将被发送。

**提示!** 您可以将 Word、Excel、PowerPoint 和 PDF 文档上载到 GT505，以便您可以在旅途中查看它们。

# 信息

## 更改电子邮件设置

您可以更改电子邮件设置以满足您的个人需要。

**提示!** 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

**1** 从主屏点触 ，然后选择**电子邮件和信息设置**。

**2** 您可以调整以下设置：

**电子邮件帐户** - 管理您的电子邮件帐户。

**允许回复电子邮件** - 选择是否允许发送读取确认邮件。

**请求回复电子邮件** - 选择是否要请求读取确认邮件。

**检索间隔** - 选择 GT505 检查新电子邮件信息的频率。

**检索数量** - 选择一次要检索的电子邮件数目。

**包括原始信息** - 选择在回复中是否包含原始信息。

**包含附件** - 选择在回复中是否包含原始附件。

**漫游时自动检索** - 选择在国外（漫游）时是否自动检索邮件。

**新电子邮件通知** - 选择在收到新电子邮件时是否需要提示。

**签名** - 创建电子邮件签名并打开此功能。

**优先级** - 选择电子邮件信息的优先级级别。

**邮件发送大小** - 选择电子邮件信息的发送大小。

## 信息文件夹

您可以识别 GT505 中的文件夹结果，完全无需进行说明。

**新建信息** - 打开新的空白信息。

**收件箱** - 您接收到的所有信息将放置在收件箱。在此，您可以查看、删除及执行其它操作，有关详细信息，请参阅**管理信息**。

**草稿箱** - 如果您来不及写完一条信息，您可以将已写信息保存在此。

**发件箱** - 这是发送信息时的临时存储文件夹。

**已发送** - 您发送的所有信息将放置在此文件夹。

**我的文件夹** - 创建文件夹以存储信息。



**模板** - 使用常用文本和多媒体信息模板列表。

**图释** - 为您的信息添加和插入图释。

**设置** - 更改文本和多媒体信息设置。



## 使用模板

为您最常使用的短信和彩信创建模板。手机中已有一些模板，您可以根据需要进行编辑。

- 1 点触 ，然后选择**模板**。
- 2 选择**文本模板**或**多媒体模板**。然后，您可以点触  以**添加模板**、**删除**或**全部删除**模板。要编辑某信息，请选择它并进行更改，然后点触**保存**。

## 使用图释

使用图释，使您的信息更具趣味性。手机中已有一些常用图释。


- 1 点触 ，然后选择**图释**。
- 2 点触  以**添加图释**、**删除**或**全部删除**图释。

## 更改文本信息设置

GT505 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。

# 信息

**提示!** 要在选项列表中滚动, 请点触所见的最后一个条目, 然后使用手指向上滑过屏幕。列表向上滚动, 您将看到更多条目。

点触 , 然后选择**设置**和**文本信息**。您可以更改:

**文本信息中心** - 输入信息中心的详细信息。

**状态报告** - 向左滑动开关, 在对方收到您发送的信息时接收确认。

**有效期** - 选择信息在信息中心中的最长保存时间。


**信息类型** - 将文本转换为**语音**、**传真**、**X.400** 或**电子邮件**。

**符号编码** - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

**将长文本另发送为** - 选择是以多条短信还是一条彩信发送长信息。

## 更改多媒体信息设置

GT505 已预定义信息设置, 因此, 您可以立即发送信息。可以根据您的个人需要更改这些设置。

点触  然后选择**信息设置**和**多媒体信息**。您可以更改:

**检索模式** - 选择是**本地**还是**漫游**网络。如果选择手动, 那么您仅会收到彩信通知, 随后, 您可以决定是否要完整下载该信息。

**状态报告** - 选择是否允许请求状态报告。

**已读回执** - 选择是否允许发送已读回执。

**优先级** - 选择多媒体信息的优先级级别。

**有效期** - 选择信息在信息中心中的最常保存时间。


**幻灯片持续时间** - 选择幻灯片在屏幕上显示多长时间。


**发送时间** - 选择信息发送前的时间。

**多媒体信息中心** - 输入信息中心的详细信息。

## 更改其它设置

点触 ，选择**设置**，然后：

**视频邮件** - 点触  添加新的视频邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

**语音邮件** - 点触  添加新的语音邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

**服务信息** - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全。

**小区服务** - 选择接收状态、语言和其它设置。

# 相机


## 快速拍照

- 1 按手机右侧的  键。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 轻按拍摄按钮，取景器屏幕的中间会出现一个对焦框。
- 4 使用相机定位，以便在对焦框中看到要拍摄的物品。
- 5 对焦框变绿时，表示相机已对焦。
- 6 完全按下拍摄按钮。


## 拍照后


拍好的照片将显示在屏幕上。图像名称将显示在右侧，同时还显示四个图标。




 点触可以**信息、电子邮件或蓝牙**方式发送照片。请参阅“发送信息”和“使用蓝牙发送和接收文件”。

**备注：**漫游时，如果下载彩信将产生一定费用。


 点触以将图像用作墙纸。

 点触以编辑选定图片的名称。

 点触各种工具以编辑图像。

 点触以返回上一个菜单。

 点触以删除图像。

 点触以立即拍摄其它照片。将保存您的当前照片。

 点触以查看保存的图片库。

## 了解取景器




**提示!** 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

# 相机




## 使用闪光灯

默认闪光灯设置为“自动”，还提供了其它选项。


- 1 选择取景器左侧的  进入闪光灯子菜单。
- 2 有三个闪光灯选项：  
**自动** - 相机将自动评估拍摄好照片所需的光照条件，并在需要时使用闪光灯。  
**始终关闭** - 相机从不使用闪光灯。此选项有助于节省电池电量。  
**常亮** - 相机始终打开闪光灯。
- 3 点触所需选项时，闪光灯菜单将自动关闭，以便您立即拍照。
- 4 取景器中的闪光灯状态图标将根据您设置的新闪光灯模式而更改。

## 调节曝光

曝光定义图像的深浅区域差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 点触 。
- 2 沿滚动条滑动对比度指示器， 对应对比度更低、更模糊的图像， 对应对比度更高、更清晰的图像。

## 连拍

- 1 从取景器点触  以打开所有高级设置选项，选择**拍摄模式**，然后选择**连拍**。
- 2 将物体定位在取景器中，请像拍摄普通照片一样按下拍摄按钮。
- 3 相机将快速连拍多张照片。

## 使用高级设置

从取景器中点触  以打开所有高级设置选项。

选择选项后，点触**确定**按钮。

**切换相机** - 要自拍，请切换到 LG GT505 的内置相机。

**图像大小** - 更改照片大小以节约更多存储空间，或为联系人拍摄合适大小的图片。请参阅**更改图像大小**。

**场景模式** - 设置相机，使其适应环境。从自动、夜间、肖像、风景、海滩、体育和聚会中选择。

**色彩效果** - 选择要对新照片使用的色彩效果。请参阅**选择色彩效果**。

**白平衡** - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**和**阴天**。

**定时器** - 自拍器允许您设置按下拍摄按钮后的延迟。从**关**、**3秒**、**5秒**或**10秒**中选择。如果要为自己拍摄照片，此功能是理想之选。

**拍摄模式** - 选择标准或连拍模式。

**图像质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

**自动对焦** - 选择相机对焦方式。从“自动”、“手动”中选择。

**预览样式** - 选择预览样式。

**存储位置** - 选择是将照片保存到“手机内存”还是“外部存储器”。

**隐藏图标** - 选择手动还是自动隐藏相机设置图标。

**防抖** - 您可以稳定相机以拍摄照片。

**显示已拍照片** - 选择在拍照后是否显示照片。

**快门声音** - 从四种快门声音中选择一种。

**相片定位** - 开/关

**重置** - 重置所有相机默认设置。


# 相机

**提示!** 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。需要重置任何非默认设置，如色调。拍摄下一张照片之前，请先查看。

**提示!** 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。


## 更改图像大小

像素越大，文件越大，同时意味着拍摄的文件将占取更大存储空间。如果要在手机中存储更多图片，您可以更改分辨率，使文件小一点。

- 1 使用取景器，点触左上角的 。
- 2 从“预览”菜单中选择**图像大小**。

- 3 从以下六个选项中选择像素值：(5M: 2592x1944, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240) 或选择预设值。


## 选择色彩效果


- 1 使用取景器，点触左上角的 。
- 2 从“预览”菜单中选择**色彩效果**。
- 3 此时将出现色调选项。
- 4 做出选择后，选择“确定”按钮将关闭色调菜单。随后，您就可以拍照了。


**提示!** 您可以将照片从彩色更改为黑白或怀旧，但是，您不能将黑白或怀旧照片还原为彩色。

## 使用内置相机

LG GT505 配备了 640x480 内置相机，可进行视频通话及拍照。

- 1 要切换到内置相机，请点触 ，然后从“预览”菜单中选择**切换相机**。
- 2 几秒钟后，您将在取景器中看到您自己。要拍照，请像拍摄普通照片一样按下拍摄按钮。

**提示!** 内置相机下包含的设置较少，例如，它没有闪光灯或无法调节灵敏度。通过点触 ，您可以像使用主相机一样，改变图像大小、色彩效果、图像质量、白平衡并设置自拍。

- 3 拍照后，您可用的选项与使用主相机拍照后提供的选项一样。
- 4 要返回主相机，请点触 ，然后从“预览”菜单中选择**切换相机**。

## 查看保存的照片

- 1 您可以在相机模式下访问保存的照片。点触  即会在屏幕上显示图片库。

# 摄像机


## 快速摄像

- 1 长按手机右侧的相机键。
- 2 或者，在相机模式下点触取景器中的  切换到视频模式。
- 3 屏幕上将显示摄像机的取景器。
- 4 水平放置相机，将镜头对准要拍摄的物体。
- 5 按拍摄按钮一次，开始录制。
- 6 取景器顶部将出现 **Rec**，底部计时器显示视频长度。
- 7 要暂停视频，请点触 ，要恢复录制，请选择 。
- 8 点触屏幕上的  或再按一次拍摄按钮停止录制。


## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。屏幕底部将显示视频名称，同时在右侧显示四个图标。


 点触可以播放视频。


 点触可以**信息、电子邮件或蓝牙**方式发送照片。请参阅“发送信息”和“使用蓝牙发送和接收文件”。


**备注：**漫游时，如果下载彩信将产生一定费用。

 点触以将图像用作墙纸。

 点触以编辑选定图片的名称。


 点触以返回上一个菜单。

 点触可以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。

 点触立即拍摄其它视频。将保存您的当前视频。

 点触以查看保存的视频和图片库。

## 了解取景器

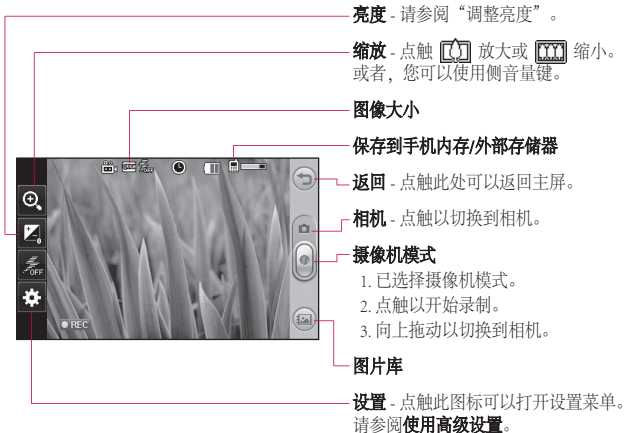




**提示!** 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

# 摄像机

## 调节曝光

曝光定义图像的深浅区域差别。对比度低的图像显示模糊，而对比度高的图像则显示更为清晰。

- 1 点触 。
- 2 沿滚动条滑动曝光指示器，  
 对应曝光度更低、更模糊的图像，  
 对应曝光度更高、更清晰的图像。

## 使用高级设置

从取景器中点触**设置**以打开所有高级设置选项。选择选项后，点触**确定**按钮。

**切换相机** - 切换到 LG GT505 的内置相机以为自己拍摄视频。请参阅**使用内置摄像机**。

**视频大小** - 更改保存在存储空间中的视频大小。请参阅**更改视频图像大小**。

**场景模式** - 从**自动**或**夜间模式**选择。

**色彩效果** - 选择要对新视图使用的色彩效果。请参阅**选择色调**。

**白平衡** - 白平衡确保视频中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

**视频质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，视频越清晰。同时文件更大，这意味着手机内存可保存的视频数更少。

**长度** - 设置视频的长度限制。从**标准**和**彩信**中选择，以限制彩信最大大小。

**提示!** 如果长度选择“彩信”，请尝试选择较低的图像质量以拍摄更长视频。

**存储位置** - 选择是将视频保存到“手机内存”还是“外部存储器”。


**语音** - 选择“静音”，录制视频而不录制声音。

**隐藏图标** - 选择是自动还是手动隐藏相机菜单上的图标。

**重设设置** - 重设所有摄像机设置。


## 更改视频大小

像素越大，文件大小越大，同时意味着拍摄的文件将占取更大存储空间。如果要在手机中存储更多视频，您可以更改分辨率，使文件小一点。

- 1 使用取景器，点触左上角的 。
- 2 从“预览”菜单中选择**视频大小**。
- 3 从选项中选择像素值：  
**320x240** - 图像较小，文件较小。有助于节省存储空间。  
**176x144** - 图像最小，文件最小。
- 4 点触背部图标可以返回到取景器。

**提示!** 有关视频格式转换软件，请查看 GT505 随附的 CD。



## 选择色调

- 1 使用取景器，点触左上角的 。
- 2 从“预览”菜单中选择**色彩效果**。
- 3 此时将出现六个色调选项。
- 4 点触要使用的色调。

# 摄像机


## 使用内置摄像机

LG GT505 配备了 320x240 内置相机，可进行视频通话及录制视频。

- 1 要打开内置摄像机，请点触 ，然后选择切换相机。
- 2 几秒钟后，您将在取景器中看到您自己。要开始录制图像，请像拍摄普通照片一样按下拍摄按钮，再按一次停止录制。
- 3 拍摄视频后，您可用的选项与使用主摄像机拍摄视频后提供的选项一样。
- 4 要返回主相机，请点触 ，然后点触**切换相机**。


**提示！** 通过点触**设置**，您可以像使用主相机一样，改变图像大小、色彩效果、图像质量、白平衡并设置自拍。

## 观看保存的视频


- 1 在取景器中，点触 。
- 2 屏幕上将显示您的图片库。
- 3 点触视频一次，将其调到图片屏幕的前方。此时将开始自动播放。

# 照片和视频

## 查看照片和视频

- 1 点触相机预览屏幕上的 。
- 2 屏幕上将显示您的图片库。
- 3 点触视频或照片可以完全打开。

**提示!** 向左或向右轻弹以查看其它照片或视频。

**提示!** 要删除照片或视频，请打开它，然后选择 。点触是确认。

## 查看照片时使用缩放

查看照片时，您可以放大或缩小。

## 观看视频时调节音量

要在视频播放过程中调节音量，请按扬声器符号，然后点触屏幕底部的音量栏。或者，使用手机侧面的音量键。

## 将照片设为墙纸


- 1 点触您要设为墙纸的照片两次，以打开它。
- 2 点触屏幕可以打开选项菜单。
- 3 点触主屏菜单。
- 4 您可以使用屏幕底部的缩略图放大及缩小图片，以及移动剪切部分。

# 照片和视频


## 编辑照片


您可以对照片执行多项操作以更改、添加或修饰。


- 1 打开您要编辑的照片，点触


 显示选项。


- 2 点触图标以调整照片：

 裁切照片。选择方形或圆形裁切区域，使用手指移过选定区域。


 徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。


 在图片上添加书写内容。请参阅**为照片添加文本**。


 使用标记修饰照片。从不同标记中选择，点触照片中您要放置标记的位置。


 擦除您对图片所做的编辑。您可以选择要使用的橡皮擦大小。


 点触可以返回图片库。

 保存您对照片所做的更改。选择保存所做更改的方式：**更新现有**或**新文件**。如果选择**新文件**，请输入文件名。

 擦除您对照片所做的编辑。


 点触可以打开更多效果选项，包括**旋转**。此外还有一些高级编辑选项。请参阅**添加点彩**和**交换照片中的颜色**。

 点触以对照片应用效果选项。



 此时将使用自动色彩、亮度等对所拍图片进行调整。





## 为照片添加文本

- 1 从编辑屏幕点触 。
- 2 选择**文本**以添加无框文本，或选择“speech bubble”形式中的一种。
- 3 使用键盘输入文本，然后点触**保存**。
- 4 点触文本以移动，将其置于需要的位置。

## 为照片添加效果



- 1 从编辑屏幕点触 。
- 2 您可以对照片应用各种不同选项
- 3 要撤消效果，请点触 。

## 裁切照片

- 1 从编辑屏幕点触 。
- 2 选择您要用用来裁切图片的形状。
- 3 在您要裁切的区域内拖动方框。
- 4 对所做选择满意后，请点触 。

# 照片和视频

## 为照片添加颜色

- 1 从编辑屏幕点触 。
- 2 选择**点彩**。
- 3 选择照片中的一部分。该区域中所有具有相同或类似颜色的内容周围将显示一条轨迹线，例如，某人的头发或外衣。
- 4 通过点触 ，然后向上或向下移动亮度栏的滑块，调整颜色亮度。
- 5 点触**确定**。
- 6 照片中的所有颜色都将清除，除了作颜色标记的部分。
- 7 选择  以保存所做的更改。


## 交换照片中的颜色

- 1 从编辑屏幕点触 。
- 2 选择**色彩交换**。
- 3 选择照片中的一部分。该区域中所有具有相同或类似颜色的内容周围将显示一条轨迹线。例如，某人的头发或外衣。
- 4 选择一种色彩。
- 5 按**确定**。
- 6 照片选定部分的颜色将更改为选定的颜色。
- 7 选择  以保存所做的更改。

# 多媒体

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。

您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

要访问“多媒体”菜单，请点触 ，然后点触**娱乐**。点触**我的文档**以打开文件夹列表，该列表保存您所有的多媒体文件。

## 图片

**我的图像**包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

## 我的图像选项菜单

**我的图像**中可用的选项取决于您选择的图像类型。对于手机相机拍摄的照片，所有选项均可用；对于默认图像，仅可使用**用作打印**、**排序方式**和**内存管理器**选项。



## 发送照片

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的素材**，然后点触**我的图像**。
- 3 选择要发送的照片，然后点触**发送**。从**信息**、**电子邮件**或**蓝牙**中选择。
- 4 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将图片发送至的设备。

# 多媒体

## 使用图像

您可以选择图像以用作墙纸和屏幕保护程序，或用来识别呼叫者。

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的素材**，然后点触**我的图像**。
- 3 选择图像并点触 。
- 4 点触**用作**并从以下选项中选择：  
**主屏主题** - 设置主屏墙纸。

**联系人图像** - 将图像分配给联系人列表中的某人，当其呼叫时，您的手机上会显示该图片。

**来电** - 设为在来电时显示的图像。



**拨出电话** - 设为在拨出电话时显示的图像。

**开机** - 设为开机时显示的图像。

**关机** - 设为关机时显示的图像。



## 调整图像

可以在不损坏照片质量的前提下对微光照片进行调整。

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的素材**，然后点触**我的图像**。
- 3 选择图像，点触 ，然后点触**亮屏**。
- 4 亮度将自动更改，您可以选择保存新图像。



## 移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的素材**，然后点触**我的图像**。
- 3 点触 ，然后选择**移动或复制**。
- 4 选择图像。
- 5 选择**移动或复制**。

## 创建幻灯片

如果要在手机上查看所有图像，您可以创建一个幻灯片显示，这样，您无需对每张图像都执行打开和关闭操作。

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的素材**，然后点触**我的图像**。
- 3 点触 ，然后点触**幻灯片显示**。

## 声音

**我的声音**文件夹包含“下载的声音”、**默认声音**和**录音**。在此，您可以管理、发送或将声音设为铃声。


## 使用声音

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的文档**，然后点触**我的声音**。
- 3 选择**默认声音**或**录音**。
- 4 选择一个声音，随即将播放此声音。
- 5 点触 ，然后选择**用作**。
- 6 从**语音铃声**、**视频铃声**、**信息提示音**、**开机铃声**或**关机铃声**中选择。

## 视频

**我的视频**文件夹显示已下载的视频以及手机中录制的视频列表。

### 观看视频

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的文档**，然后点触**我的视频**。
- 3 选择要播放的视频。

# 多媒体

## 暂停视频时使用选项

在暂停模式下点触  并从以下选项中选择：


**发送** - 以信息、电子邮件形式或通过蓝牙发送视频。

**删除** - 删除视频。

**用作** - 允许设置语音铃声或视频铃声。（此设置受视频帧大小限制。）

**文件信息** - 查看名称、大小、日期、时间、类型、长度、尺寸、保护和版权等详情。


## 发送视频剪辑

- 1 选择视频，然后点触 。
- 2 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 3 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，手机将提示您打开蓝牙并搜索要将视频发送至的设备。

## 我的游戏和应用程序

您可以为手机下载新游戏和应用程序，它们将在闲暇时为您带来乐趣。

## 玩游戏

- 1 点触 ，然后点触**娱乐**。
- 2 点触**游戏和应用程序**，然后点触**游戏**。
- 3 选择并点触要启动的游戏。

## 使用游戏选项菜单

“游戏和应用程序”文件夹中提供下列选项：


**排序方式** - 按日期、大小或名称对游戏和应用程序排序。

**文件信息** - 查看游戏信息。

## Flash 内容

“Flash 内容”文件夹包含所有默认和下载的 SWF 文件。


## 查看 SWF/SVG 文件

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的文档**，然后点触 **Flash 内容**。
- 3 选择要查看的文件。

## 文档

从“我的文档”的“文档”中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

## 查看文件

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的文档**，然后点触**文档**。
- 3 选择文档，然后点触**查看**。

## 将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须点触**是在您的手机上接受它**。
- 4 文件应出现在**文档或其它**文件夹中。



# 多媒体

## 其它

**其它**文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与**文档**文件夹相同。当您从计算机传输文件到手机时，您可能发现文件保存在**其它**而不是**文档**文件夹中。

如果这样，您可以移动文件。


将文件从“其它”移到文档：

- 1 点触 ，然后点触**娱乐**。
- 2 点触**我的文档**，然后点触**其它**。
- 3 点触**移动**，然后再点触**移动**。
- 4 选择文件，然后点触 。

## 创建电影

- 1 点触 ，然后点触**娱乐**。
- 2 点触 **Muvvee 工作室**。
- 3 点触  以添加图像。点触您要包含其中的图像，然后选择**插入**。
- 4 点触顶部的样式标签，然后选择一个电影样式。
- 5 点触屏幕底部的声音标签，更改声音（如 MP3 文件）。
- 6 点触**播放**按钮观看您创建的内容。
- 7 点触 ，然后点触**播放顺序**更改顺序。
- 8 点触 ，然后点触**保存位置**以选择电影的保存位置，点触**时长**在**用于保存**和**用于发送**之间选择。
- 9 要保存电影，请按“播放”，然后点触左角的保存图标。

## 音乐

LG GT505 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请依次点触 、**娱乐**和**音乐**。您可以在此访问多个文件夹：

**最近播放** - 您可以收听您最近播放的所有歌曲。

**所有曲目** - 包含手机中的所有歌曲。

**艺术家** - 按艺术家浏览音乐集合。

**专辑** - 按专辑浏览音乐集合。

**风格** - 按流派浏览音乐集合。

**播放列表** - 包含您创建的任何播放列表。

**随机曲目** - 您可以随机收听音乐。

## 将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。您也可以使用 LG PC 套件。

使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须点触**是**在您的手机上接受它。
- 4 文件应显示在**音乐 > 所有曲目**中。


# 多媒体

## 播放歌曲

- 1 点触 ，然后点触**娱乐**。
- 2 点触**音乐**，然后点触**所有曲目**。
- 3 选择您要播放的歌曲，然后点触**播放**。
- 4 点触  暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以跳到上一首歌曲。
- 7 点触  返回到**音乐**菜单。

## 创建播放列表


您可以从**所有曲目**文件夹中进行选择，以创建自己的播放列表。

- 1 点触 ，然后点触**娱乐**。
- 2 点触**音乐**，然后点触**播放列表**。
- 3 点触**新建播放列表**，输入播放列表名称，然后点触**保存**。



- 4 此时会显示“所有曲目”文件夹。点触所有要包含在播放列表中的歌曲；这些曲目名称旁边将显示一个勾号。

- 5 点触**完成**。

要播放播放列表，请选择列表，然后点触播放。

**备注：**要另外添加一个播放列表，请点触 ，然后点触“新建播放列表”。

## 删除播放列表

- 1 点触 ，然后点触**娱乐**。
- 2 点触**音乐**，然后点触**播放列表**。
- 3 点触 ，然后点触**删除**或**全部删除**从播放列表中删除所有歌曲。

## 使用收音机



LG GT505 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

**备注：**要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

## 搜索电台



您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。

### 自动微调：


- 1 点触 ，然后点触**娱乐**。
- 2 点触**FM 收音机**，然后点触 。
- 3 点触**自动微调**，然后点触**是**。  
手机将自动为找到的电台分配一个频道编号。

**备注：**您也可以使用电台频率旁显示的转盘手动微调电台。

## 重置频道

- 1 点触 ，然后点触**娱乐**。
- 2 点触**FM 收音机**，然后点触 。
- 3 选择**重设**以重设当前频道，或选择**全部重设**以重设所有频道。



## 收听收音机

- 1 点触 ，然后点触**娱乐**。
- 2 点触**FM 收音机**，然后点触您要收听的电台的频道编号。


**提示！** 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

# 公文包


## 将事件添加到日程表中

- 1 从主屏选择 ，然后点触**实用工具**，并选择**管理器**。选择**日历**。
- 2 选择您要添加事件的日期。
- 3 点触 ，然后选择**添加事件**。
- 4 点触**类别**，然后从**约会**、**周年纪念**或**生日**中选择。查看日期并输入事件开始的时间。
- 5 对于约会和周年纪念，请在下面的“时间”和“日期”框中输入事件结束的时间和日期。
- 6 如果您要为事件添加主题或备注，请点触**备注**，然后键入备注。
- 7 设置**闹钟**和**重复**。


- 8 选择**保存**，您的事件将保存在日程表中。方形光标标记已保存事件的日期，在事件开始时间会有闹钟提醒，以便您进行安排。

**提示!** 您可以在日历中设置假期。一次性点触您要休假的每一天，然后点触  并选择**设置假期**。假期中的每一天都将变为绿色。



## 更改默认日历视图

- 1 从主屏选择 ，然后点触**实用工具**，并选择**管理器**。选择**管理器设置**。
- 2 点触**日历**并选择**月视图**或**周视图**。
- 3 设置**周开始日**。
- 4 按**保存**确认您的选择。

## 向任务列表添加项目

- 1 从主屏选择 ，然后点触**实用工具**，并选择**管理器**。
- 2 选择**任务**，点触**添加任务**。
- 3 为任务项设置日期、添加备注或选择优先级：**高**、**中**或**低**。
- 4 选择**保存**以保存任务。


## 共享任务

- 1 从主屏选择 ，然后选择**实用工具**和**管理器**。选择**任务**。
- 2 选择要共享的任务，然后点触 。
- 3 选择**发送**。您可以通过**文本信息**、**多媒体信息**、**电子邮件**或**蓝牙**共享任务项。

**提示!** 您可以将日历备份在计算机上或与计算机同步。

## 使用日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。例如，2007年10月10日后60天是2007年9月12日。这有助于确保不误期。

- 1 从主屏选择 ，然后点触**实用工具**，并选择**管理器**。
- 2 选择**日期计算器**。
- 3 在**自**选项卡中，设置所需日期。
- 4 在**之后**选项卡中，设置天数。
- 5 此时会在下面显示**天**。

# 公文包

## 设置闹钟


- 1 从主屏选择 ，然后点触**实用工具**，并选择**闹钟**。
- 2 点触**添加闹钟**。
- 3 设置您希望闹钟响起的时间，然后点触**保存**。
- 4 选择您希望闹钟响起的方式：  
每天、星期一至星期五、星期一至星期六、星期六至星期天、节假日除外或选择工作日。  
图标指示您选择的工作日。
- 5 选择**闹钟类型**为您的闹钟选择一个类型。
- 6 点触**闹铃**，然后选择闹铃。要听声音，请点触声音，然后点触 。
- 7 为闹钟添加备忘录。
- 8 最后，您可以设置暂停间隔：  
5、10、20、30分钟、1小时或关。
- 9 设置闹钟后，请点触**保存**。

- 10 要关闭闹钟，您可以选择“暂停”或“停止”。

**备注：**您最多可以设置5个闹钟。

**提示！** 点触闹钟右侧的开/关图标。



## 添加备忘录

- 1 从主屏选择 ，然后点触**实用工具**，并选择**备忘录**。
- 2 点触**添加备忘录**。
- 3 键入备忘录，然后选择**保存**。
- 4 在您下一次打开**备忘录**应用程序时，屏幕上将显示此备忘录。

**提示！** 您可以编辑现有备忘录。选择您要编辑的备忘录，然后键入更改。

## 语音备忘录

使用语音备忘录录制语音备忘录或其它声音。

- 1 点触 ，然后点触**实用工具**。
- 2 点触**语音备忘录**，然后点触  并从以下选项中选择：

**设置 > 长度** - 设置录音长度。  
从**彩信**、**1分钟**或**无限制**中选择。

**设置 > 质量** - 选择声音质量。  
从“超精细”、“精细”或“标准”中选择。


**转到声音** - 在**我的声音**中打开“录音”文件夹。


## 录制声音或语音

- 1 点触 ，然后点触**实用工具**。
- 2 点触**语音备忘录**。
- 3 点触  开始录音。
- 4 点触  结束录音。
- 5 点触  收听录音。





## 发送录音

- 1 完成录制后，请点触 。
- 2 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。如果选择**信息**或**电子邮件**，录音将被添加到信息中，您可以照常撰写或发送信息。如果选择“蓝牙”，手机可能提示您打开蓝牙。


**备注：**完成录音后，请点触  并从**发送**、**文件**、**删除**、**用作**（将录音用作铃声）、**设置**或**转到声音**中选择。

# 公文包

## 使用计算器

- 1 从主屏选择 ，然后点触**实用工具**，并选择**工具**。
- 2 选择**计算器**。
- 3 点触数字键以输入数字。
- 4 对于简单计算，点触您所需的函数 (+, -, x, ÷)，然后点触 =。
- 5 对于较复杂的计算，请点触  并从 sin、cos、tan、deg、sec、csc、cot、rad、log、ln 或 exp 中选择。

## 换算单位



- 1 从主屏选择 ，然后点触**实用工具**，并选择**工具**。
- 2 选择**换算器**。
- 3 选择要换算的内容：币种、面积、长度、重量、温度、体积或速率。

- 4 随后，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。
- 5 屏幕上将显示相应的值。

## 使用秒表


- 1 从主屏选择 ，然后点触**实用工具**，并选择**工具**。
- 2 选择**秒表**。
- 3 点触**开始**启动计时器。
- 4 如果您要记录时间，请点触 。
- 5 点触**停止**结束计时器。
- 6 点触**继续**从您停止的时间重新开始秒表，或点触**重设**重新开始计时。

## 向世界时间添加城市

- 1 从主屏选择 ，然后点触**实用工具**，并选择**工具**。
- 2 选择**世界时钟**。
- 3 点触  图标，然后选择**添加城市**。开始键入所需城市的名称，屏幕上将显示该城市。
- 4 点触城市以选定，该城市即被添加到您的世界时间列表。


## 慢跑伴侣

无论是走路、跑步或慢跑，GT505 都为您提供了精确到秒的计时信息，包括距离和时间，并使用 GPS 高级技术为您保留一份锻炼记录。


- 1 从主屏选择 ，然后点触**实用工具**，并选择**工具**。
- 2 选择**慢跑伴侣**。
- 3 点触 <<>> 为慢跑设置“距离”或“时间”。

4 您可以打开或关闭常规蜂鸣。

5 一旦连接 GPS，开始按钮即亮起。点触  开始。

 - 重置按钮

 - 开始按钮

 - 暂停按钮

 - 停止按钮

常规蜂鸣 - 手机在固定距离或时间间隔蜂鸣，使您无需查看屏幕即可了解自己的跑步情况。

# 电脑同步

## 始终询问模式

如果将默认值设为“始终询问模式”，则每次通过数据线将手机连接到电脑时，手机都会提示您选择 USB 连接模式类型。如果禁用“始终询问模式”，则连接模式将是您在“菜单”-“设定”-“连接”-“USB 模式”中设定的模式，即**数据存储**、**PC 套件**或**音乐同步**。

您可以使用手机同步电脑，以确保所有重要信息和日期匹配，同时做好备份。

## 在计算机上安装 LG PC 套件

- 1 从主屏中选择**连接**。
- 2 选择 **USB 连接**模式，然后单击**确定**。
- 3 将随附的 CD 插入电脑。单击显示在屏幕上的 LG PC 套件安装程序。
- 4 选择安装程序运行的语言，然后单击**确定**。
- 5 根据屏幕说明完成 LG PC 套件安装程序向导。
- 6 安装完成后，桌面上将显示 LG PC 套件图标。

## 连接手机和 PC

- 1 将 USB 数据线连接到手机和电脑。
- 2 双击桌面上的 **LG PC 套件**图标。
- 3 单击**连接向导**，然后单击**USB**。
- 4 单击**下一步**，再单击**下一步**，最后单击**完成**。现在，手机与 PC 已连接。

## 备份和恢复手机信息

- 1 如上所述，将手机连接到电脑。
- 2 单击**备份**图标，选择**备份**或**恢复**。
- 3 选择备份**内容数据**和/或**电话本/日程表/任务/备忘录数据**。选择您要保存备份信息的位置，或恢复信息的位置。单击**确定**。
- 4 您的信息将备份。

## 在 PC 上查看手机文件

- 1 如上所述，将手机连接到电脑。
- 2 单击**管理文件**图标。
- 3 手机中保存的所有文档、Flash 内容、图像、声音和视频将显示在“LG 手机”文件夹屏幕中。

**提示!** 在 PC 中查看手机内容有助于您排列文件、整理文档或删除不再需要的内容。

## 同步电话本

- 1 将手机连接到电脑。
- 2 单击**管理电话本**图标。
- 3 PC 中将导入并显示 USIM 卡和手机中保存的所有联系人。
- 4 单击**文件**，然后选择**保存**。现在，您可以选择要保存电话本的位置。

**备注:** 要备份保存在 USIM 卡中的电话本，请单击 PC 屏幕左侧的“SIM 卡”文件夹。右键单击您的一个联系人，选择**全选**，然后**复制**或**移动到手机内存**。

右键单击联系人，然后选择**复制到联系人**。现在，请单击屏幕左侧的**手机**文件夹，此时将显示您的所有号码。


# 电脑同步

## 同步信息

- 1 将手机连接到电脑。
- 2 单击**信息**图标。
- 3 所有电脑和手机信息将显示在屏幕上的文件夹中。
- 4 使用屏幕上的工具栏编辑和排列信息。

## 将手机用作大容量存储设备

只有插入存储卡时，您的手机才可以用作数据存储设备。

- 1 断开手机与电脑的连接。
- 2 从主屏选择 ，然后点触**设置**。
- 3 选择**连接**，然后选择 **USB 连接模式**。
- 4 点触**数据存储**。

- 5 将手机连接到电脑。此时手机将显示：**正以大容量存储器模式连接…**，随后将显示**以大容量存储器模式连接**。传输期间不要断开连接。
- 6 此时将自动打开计算机上的可移动磁盘。


**备注：**数据存储将仅备份保存在存储卡中的内容，而不备份手机内存中的内容。要传输手机内存中的内容（如，电话本），您需要使用“电脑同步”进行同步。

# 网络

## 浏览器

**浏览器**为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

## 访问网页

- 1 从主屏选择 ，然后点触**实用工具**，并选择**浏览器**。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的 URL，然后选择**连接**。

**备注：**连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

## 添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从主屏选择 ，然后点触**实用工具**，并选择**浏览器**。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请选择 ，然后点触**添加书签**。输入书签名称和 URL。
- 4 点触**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，点触书签后点触“连接”即可。您将连接到书签。

# 网络


## 使用 RSS 阅读器

RSS (简易供稿) 是一种网络订阅源格式, 可用于发布最近更新的内容, 如博客、新闻标题或播客。

RSS 文档通常被称为订阅源、网络订阅源或频道, 它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站, 而无需手动查看。


用户订阅源的方式: 将订阅源的链接输入阅读器, 或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

## 保存页面


- 1 如上所述访问网页。
- 2 点触  并选择**保存此页面**。
- 3 为网页输入一个名称, 便于您轻松识别。
- 4 点触**保存**。

**提示!** 此菜单还允许您编辑已保存页面的标题、保护或取消保护屏幕备忘录, 以及删除已保存页面。


## 访问保存的网页

- 1 从主屏选择 , 然后点触**实用工具**, 并选择**浏览器**。
- 2 选择**保存的页面**。
- 3 选择您要查看的页面, 该页面将打开。

## 查看浏览器历史记录

- 1 从主屏选择 ，然后点触**实用工具**，并选择**浏览器**。选择**历史记录**。
- 2 此时将显示您最近访问过的网页。要访问其中一个页面，只需选择所需页面即可。

## 更改网络浏览器设置

- 1 从主屏选择 ，然后点触**实用工具**，并选择**浏览器**。选择**设置**。
- 2 您可以选择编辑**网络设定**、**外观设置**、**缓存**、**Cookie**、**安全性**或**重设设置**。
- 3 您可以轻松将这些设置设为开或关，点触图标即可。

## 将手机用作调制解调器

GT505 可以同时用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

### 使用 USB 数据线：

- 1 确保 PC 上已经安装了 LG PC 套件。
- 2 用 USB 电缆连接 GT505 和您的电脑并启动 LG PC 套件软件。
- 3 单击电脑上的**通信**。然后，单击**设置**并选择**调制解调器**。
- 4 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 5 单击“连接”，您的电脑将与 GT505 之间建立连接。

# 网络

## 使用蓝牙：

- 1 确保已**打开**蓝牙并在电脑和 GT505 上**可见**。
- 2 配对电脑和 GT505，以便需要通行码才能建立连接。
- 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
- 4 单击电脑上的**通信**。然后，单击**设置**。
- 5 单击**调制解调器**。
- 6 选择 **Standard Modem over Bluetooth link**，然后单击**确定**。此时将在屏幕上打开。
- 7 单击**连接**，您的电脑将与 GT505 之间建立连接。

# 设置

使用此文件夹，您可以调整设置以使 GT505 更具个性化。

## 更改屏幕设置

1 点触 ，然后选择**设置**。

2 点触**屏幕设置**，然后从以下选项中选择：

**墙纸** - 为主屏选择主题。

**拨号** - 调整数字大小和颜色。

**字体** - 调整字体大小。

**背景灯** - 选择背景灯持续时间。

**备注：**背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

**亮度** - 调整屏幕亮度。

**主题** - 快速更改屏幕整体外观。

**问候语信息** - 选择开或关，然后填写问候语信息。

为**来电**、**拨出电话**、**开机**或**关机**选择图像。

3 点触**保存**以保存设置。

## 更改情景模式

您可以在主屏上快速更改情景模式。点触状态摘要图标及情景模式标签即可。

使用设置菜单，您可以个性化每个情景模式设置。

1 按 ，然后选择**设置**。

2 点触**情景模式**，然后选择您要编辑的情景模式。


3 随后，您可以更改列表中可用的所有声音和提示选项，包括**语音/视频铃声**和**音量、信息提示**等。

## 更改手机设置

您可以根据自己的需要，随心所欲地对 GT505 进行调节。

**提示！**要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

# 设置

- 1 点触 ，然后选择**设置**。
- 2 点触**手机设置**，然后从下表中选择。

**日期和时间** - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

**省电** - 选择**开或关**以开启或关闭初始的省电设置。

**语言** - 更改 GT505 的显示语言。

**自动键盘锁** - 在主屏下自动锁定键盘。


**安全性** - 调整您的安全设置，包括 PIN 码和手机锁。

**内存管理器** - 请参阅**使用内存管理器**。

**重置设置** - 将所有设置重置到其出厂设置。

**信息** - 查看 GT505 的技术信息。


## 更改触摸设置

点触 ，然后点触**设置**。选择**触摸设置**。要重置触式键盘，使其用起来更方便，请选择**触式键盘校准**，然后点触十字。满意后，请保存设置。

选择**触摸屏效果**以选择**类型**、**提示音**和**振动**。

## 更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

点触 ，然后点触**设置**。点触**连接**。

**网络设定** - GT505 将自动连接到首选网络。要更改这些设置，请使用此选项。

**互联网网络设定** - 设置连接到互联网的网络设定。

**接入点** - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

**GPS 类型** - 选择**辅助 GPS**或**独立型 GPS**。

#### GPS

- GPS 技术使用地球轨道卫星传递的信息查找位置。
- 接收器会根据信号到达 GPS 卫星的时间来估计距离，然后使用该信息确定位置。
- 可能需要几秒甚至几分钟的时间。
- 本机上的辅助 GPS(A-GPS)用于提取分组数据连接的位置帮助数据。
- 仅在需要时从服务服务器提取帮助数据。
- 对您所在位置拍照，在图标中标记出您的所在位置。

**备注:** GPS 服务存在一定的误差，无法在建筑物内或地下使用。

**USB 连接模式** - 使用 LG PC 套件软件同步 GT505 以复制手机中的文件。

如果使用带 Windows Media Player 的音乐同步，请在此菜单中选择“音乐同步”。音乐同步仅适用于音乐内容。如果要使用外部存储器同步，您可以将“外部存储器”用作首选存储器。如果要使用内部存储器同步，您可以将“内部存储器”用作首选存储器。

**同步服务** - 服务器同步功能可以通过无线网络使手机中的数据与服务器的数据同步，如联系人地址信息和日程表项目。


**流媒体设置** - 网络运营商已保存此信息。您可以对其进行编辑以更改。

**Java 设置** - 允许您设置网络设定。

# 设置

## 使用内存管理器

GT505 有三种可用存储器：手机、USIM 卡和外部存储卡（您可能需要单独购买存储卡）。您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触 ，然后点触**设置**。选择**手机设置**，然后选择**内存管理器**。

**手机公用内存** - 查看 GT505 中针对以下各项的可用内存：图片、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。


**手机剩余内存** - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

**USIM 卡内存** - 查看 USIM 卡的可用内存。

**外部存储器** - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

**主存储器设置** - 选择项目的首选保存位置。

## 使用飞行模式


通过依次选择  和**设置**打开飞行模式。点触**情景模式**，然后选择**飞行模式**。

飞行模式下，您不能拨打电话、连接到互联网、发送信息或使用蓝牙。

## 使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

### 发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 点触 ，然后选择**发送**。选择**蓝牙**。
- 3 点触**是**以打开蓝牙。
- 4 如果已配对蓝牙设备，GT505 将不会自动搜索以配对其它蓝牙设备。否则，GT505 将搜索范围内其它启用了蓝牙的设备。



- 5 选择您要向其发送文件的设备，然后点触**选择**。
- 6 您的文件将被发送。

**提示!** 注意进度栏，确保文件已发送。

### 接收文件:

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置，可以选择**查看文件**或**用作墙纸**。文件通常保存在“我的文档”中的相应文件夹。

### 更改蓝牙设置:

- 1 点触 ，然后选择**设置**。
- 2 选择**蓝牙**，然后点触  并选择**设置**。

进行更改:

**我的设备可见性** - 选择**可见**、**隐藏**或**可见1分钟**。

**我的设备名称** - 为您的 GT505 输入一个名称。

**支持的服务** - 显示手机支持的所有蓝牙功能。

**我的地址** - 显示您的蓝牙地址

# 设置

## 与其它蓝牙设备配对

将您的 GT505 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 GT505 将搜索设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

## 使用蓝牙耳机

- 1 查看蓝牙是否为**开且可见**。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触**始终询问**或**允许而不询问**，然后点触**是**立即连接 GT505 即自动转到“耳机”情景模式。

# Wi-Fi

无线管理器能让您管理设备上的 Wi-Fi Internet 和蓝牙连接。它能允许手机连接本地无线网络，或者无线访问 Internet。Wi-Fi 相较于蓝牙无线技术，速度更快、覆盖范围也更广。

**备注：**GT505 支持 WEP、WPA-PSK/2 加密，不支持 EAP 加密。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。如果您不知道密钥，需要咨询 Wi-Fi 服务提供商或网络管理员。

## 1. 如何设置 Wi-Fi

- 1 Wi-Fi 打开
- 2 AP (接入点) 搜索
  - 搜索可用于连接的 AP。
- 3 AP 连接
  - 从 AP 搜索列表连接到所需 AP。
  - 如果 AP 为 WEP 或 WPA-PSK/2 安全类型，请输入安全密钥。

## 2. Wi-Fi 网络模式支持

- 1 Wi-Fi 模式支持 (如何连接常用 AP 或隐藏的 AP)
  - 1) 如果 AP 未显示在搜索列表中，可将其保存为模式后再连接。
  - 2) 通过将常用 AP 保存为模式，可在连接具有安全类型的 AP 时轻松输入安全密钥。
  - 3) 如果 AP 不支持 DHCP，可使用静态 IP 连接 AP。

# Wi-Fi

## 2 对 Wi-Fi 模式中各字段的描述

- 1) 网络名称: SSID (ID)
- 2) 安全类型: WEP、WPA-PSK/2 支持。
- 3) 安全密钥: 保存安全密钥。
- 4) IP/DNS 设置: 您可以根据 AP 是否支持 DHCP 来设置“静态”或“动态”。  
如果设置“静态”，尝试连接时请输入用于连接静态 IP 的 IP 地址和 DNS 服务器。

## 3 如何保存 Wi-Fi 模式

- 1) 从“选项”菜单中选择“已保存的网络”，然后选择“添加网络”，为每个字段输入值。
- 2) 通过选择“Wi-Fi 开”和“刷新”（搜索 AP）可选择并保存 AP 搜索列表。
- 3) 连接到 AP 后，将弹出“是/否”信息，您可以选择是否保存模式。

# 手机软件升级

## LG 手机软件网上更新

更多的功能和相关信息请查阅网站：[LGmobile.com](http://LGmobile.com)

具体途径：<http://www.lgmobile.com>

- 选择地区 - 选择国家 -

手册&软件

此功能能将您的手机软件升级到最新版本，网上操作更加便利，免去您拜访售后的麻烦。

手机软件更新时请留意整个更新过程，确保在更新过程的每一步都仔细阅读过说明和注意事项。

请注意不要在升级过程中拔掉USB接线或电池，这会严重危害您的手机。

在升级过程中产生的数据丢失，厂商不负有任何责任，建议您把重要信息进行备份。

# 配件

这些配件随 GT505 提供。

## 充电器



## 数据线和 CD

在 GT505 和电脑间建立连接并同步。



## 电池



## 立体声耳机



## 用户手册

了解更多关于 GT505 的信息。



## 备注:

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

## 网络服务

本指南中描述的无线手机适用于 GSM 和 W-CDMA 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

## 技术参数

### 标准

产品名称：GT505

系统：UMTS 900/2100  
GSM 850/900/1800/1900

### 外部环境

最高：+ 50 ° C (放电)，  
+ 45 ° C (充电)

最低：- 10 ° C (放电)，  
0 ° C (充电)

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

GT505

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

13. May, 2009

Signature of representative

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

## 暴露在射频能量之下 无线电波暴露和“特定吸收率” (SAR) 信息

此款 GT505 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。

- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.941 W/kg (10克)，戴在身体上时，其值为 1.17 W/kg (10克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

# 关于安全有效使用手机的准则

## 产品保养和维护

### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能变热并引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

### 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

### 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

# 关于安全有效使用手机的准则

## 玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务供应商处更换玻璃。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 故障诊断

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题，您可能需要致电服务提供商，但是大部分问题，您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。检查服务提供商覆盖图。
代码不匹配	更改安全码时，您需要在输入后再确认一次新的安全码。两次输入的代码不匹配。	请与服务提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。

信息	可能原因	可行解决措施
手机无法打开	按开/键时间过短	请按开/键至少两秒钟。
	电池电量空	为电池充电。检查显示屏上的充电指示灯。
	电池触点脏	清洁触点。
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
	触点问题	检查电源，连接到手机。检查电池触点，如果需要，请清洁。
	无电源电压	插入其它插口，或检查电压。
	充电器故障	如果充电器不发热，请替换。
	错误充电器	请仅使用原装 LG 配件。
	电池故障	替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。





Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## GT505 User Guide

Congratulations on your purchase of the advanced and compact GT505 phone by LG, designed to operate with the latest digital mobile communication technology.

# Contents

Getting to know your phone ...	8	Speed dialling .....	23
Open view .....	10	Making a second call .....	23
Installing the USIM and battery .....	11	Turning off DTMF .....	24
Memory card .....	14	Viewing your call logs .....	24
Menu map .....	16	Using call divert .....	25
Your home screen .....	17	Using call barring .....	25
Touch screen tips .....	17	Changing the common call setting .....	26
The quick keys .....	18	Changing your video call settings .....	27
The status bar .....	19	<b>Contacts .....</b>	<b>28</b>
Changing your status from the status bar .....	20	Searching for a contact .....	28
Using the Multitasking function	20	Adding a new contact .....	28
<b>Calls .....</b>	<b>21</b>	Creating a group .....	29
Making a call or video call .....	21	Changing your contact settings	29
Making a call from your contacts .....	21	<b>Messaging .....</b>	<b>31</b>
Answering and rejecting a call..	21	Messaging .....	31
In-call options .....	22	Sending a message .....	31
Adjusting the call volume .....	23	Entering text .....	32
		T9 predictive .....	32
		Abc manual .....	32

# Contents

Setting up your email.....	33	Using the inner camera .....	47
Sending an email using your new account .....	35	Viewing your saved photos.....	47
Changing your email settings ...	35	<b>Video camera .....</b>	<b>48</b>
Message folders.....	36	Shooting a quick video.....	48
Using templates .....	37	After shooting a video .....	49
Using emoticons .....	37	Getting to know the viewfinder.....	50
Changing your text message settings.....	37	Adjusting the exposure .....	51
Changing your multimedia message settings .....	38	Using the advanced settings .....	51
Changing your other settings ...	39	Changing the video image size	53
<b>Camera .....</b>	<b>40</b>	Choosing a colour tone .....	53
Taking a quick photo .....	40	Using the inner video camera ...	54
Once you've taken the photo ....	41	Watching your saved videos.....	54
Getting to know the viewfinder	42	<b>Your photos and videos .....</b>	<b>55</b>
Using the flash .....	43	Viewing your photos and videos.....	55
Adjusting the exposure .....	43	Using zoom when viewing a photo.....	55
Taking a continuous shot.....	44	Adjusting the volume when viewing a video .....	55
Using the advanced settings .....	44	Setting a photo as wallpaper ....	55
Changing the image size .....	46	Editing your photos .....	56
Choosing a colour effect .....	46		

Adding text to a photo .....	57	Using the games options menu .....	64
Adding an effect to a photo.....	58	Flash contents .....	64
Cropping a photo .....	58	Viewing an SWF/SVG file.....	65
Adding a colour accent to a photo .....	58	Documents.....	65
Swapping colours in a photo ....	59	Viewing a file .....	65
<b>Multimedia .....</b>	<b>60</b>	Transferring a file to your phone.....	65
Pictures .....	60	Others .....	66
My images options menu .....	60	Creating a movie .....	66
Sending a photo.....	60	Music .....	67
Using an image.....	61	Transferring music onto your phone.....	67
Marking up your images .....	61	Playing a song.....	68
Moving or copying an image ....	62	Creating a playlist .....	68
Creating a slide show .....	62	Deleting a playlist.....	69
Sounds.....	62	Using the radio .....	69
Using a sound .....	63	Searching for stations.....	69
Videos.....	63	Resetting channels.....	70
Using options while video is paused .....	63	Listening to the radio .....	70
Sending a video clip .....	64		
Games and Applications .....	64		
Playing a game .....	64		

# Contents

<b>Organiser .....</b>	<b>71</b>	<b>PC Sync.....</b>	<b>78</b>
Adding an event to your calendar.....	71	Installing LG PC Suite on your computer .....	78
Changing your default calendar view.....	72	Connecting your phone and PC.....	79
Adding an item to your To do list .....	72	Backing up and restoring your phone's information.....	79
Sharing a To do task.....	72	Viewing your phone files on your PC .....	79
Using date finder .....	73	Synchronising your contacts.....	80
Setting your alarm.....	73	Synchronising your messages... ..	80
Adding a memo.....	74	Using your phone as a mass storage device.....	81
Voice recorder .....	74	<b>The web .....</b>	<b>82</b>
Recording a sound or voice .....	75	Browser.....	82
Sending the voice recording .....	75	Accessing the web.....	82
Using your calculator.....	75	Adding and accessing your bookmarks .....	82
Converting a unit .....	76	Using RSS reader .....	83
Using the stopwatch.....	76	Saving a page.....	83
Adding a city to your world time.....	77	Accessing a saved page.....	83
Jogging Buddy.....	77		

Viewing your browser history ...	84	Wi-Fi.....	94
Changing the web browser settings.....	84	Phone Software update .....	96
Using your phone as a modem .....	84	Accessories .....	97
<b>Settings .....</b>	<b>86</b>	Network service .....	98
Changing your screen settings.....	86	Technical data.....	98
Personalising your profiles .....	87	Guidelines for safe and efficient use .....	100
Changing your phone settings.....	87	Trouble Shooting.....	106
Changing your touch settings .	88		
Changing your connectivity settings.....	88		
Using memory manager .....	90		
Using flight mode.....	91		
Sending and receiving your files using Bluetooth.....	91		
Pairing with another Bluetooth device.....	93		
Using a Bluetooth headset.....	93		

# Getting to know your phone

## Inner camera lens

## End/Power key

Ends or rejects a call.  
Turns the phone on/off.  
Press once to return to  
the home screen.


## Multitasking key

## Call key

Dials a phone number and  
answers incoming calls.



**⚠ WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

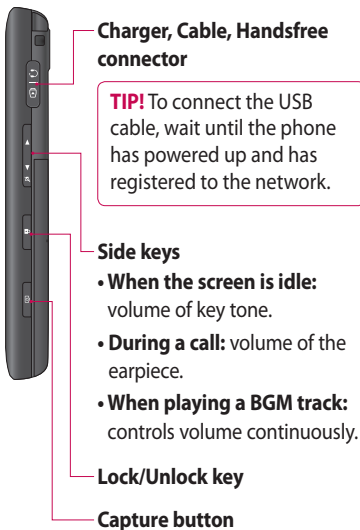

## Open view



# Installing the USIM and battery

## 1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.



**⚠ WARNING:** Do not use your fingernail when removing the battery.

**⚠ WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment.



# Installing the USIM and battery

## 3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the opposite direction.



## 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



## 5 Charging your phone

Slide back the cover of the charger socket on the side of your GT505. Insert the charger and plug into a mains electricity socket. Your GT505 will need to be charged until a message reading "Battery full" appears on screen.



# Memory card

## Installing a memory card

You can expand the memory space available on your phone using a memory card.

**NOTE:** A memory card is an optional accessory.


- 1 Open the memory card cover.
- 2 Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing downwards.



- 3 Close the memory card cover.

## Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen select  then touch **Settings** and choose **Phone settings**.
- 2 Touch **Memory manager** then chose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.



**TIP!** To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

**NOTE:** If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stor

ed in the My Videos folder.

## Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communication tab, select **Contacts** touch .
- 2 Select **Storage location** and select **Copy to USIM** or **Move to USIM**.
- 3 Choose names one by one and touch **Copy** or .

# Menu map

Touch  in the home screen to open a **Top menu**. From here you can access further menus: **Communication**, **Entertainment**, **Utilities** and **Settings**.



## Communication

- Contacts
- Recent history
- Messaging
- Email
- Dialling
- Video call



## Entertainment

- Camera
- Video camera
- Gallery
- My stuff
- Music
- Muvee Studio
- Games&apps
- FM radio



## Utilities

- Browser
- Navigation
- Google
- Alarm
- Organiser
- Memo
- Voice recorder
- Tools



## Settings

- Profiles
- Screen settings
- Phone settings
- Bluetooth
- Wi-Fi
- Call settings
- Touch settings
- Connectivity

# Your home screen

From this screen you can access options, make a call, view the status of your phone and much more.

## Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.


- Do not to press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
  - Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
  - When the screen light is off, either press the Unlock/Lock key on the right hand side or hold down the Unlock key on the touch screen to return the home screen.
- Whenever your GT505 is not in use, it will return to the lock screen as default.


# Your home screen

## The quick keys

The quick keys on your home screen provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**.



Touch to open your contacts. To search for the number you want to call, enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS.

























Touch to open the full Top menu which is separated into four sub-menus. Touch the vertical tabs to view further options.

## The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.


Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	An alarm is set
	Normal profile in use

Icon	Description
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	Wi-Fi on
	BGM play
	BGM pause

# Your home screen

## Changing your status from the status bar


Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wi-Fi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wi-Fi.

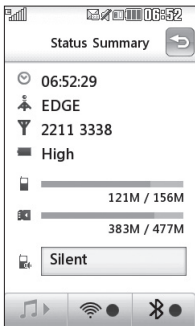

## Using the Multitasking function

Press the multitasking hard key to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.




From any application, press the Multitasking key and select Home screen to return to the home screen without exiting or closing the application.


When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

When you press this key from the home screen, you can view a short cut menu to some commonly used functions.

# Calls

## Making a call or video call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit press the clear key.
- 3 Touch the  hard key to initiate the call.
- 4 To end the call press the  hard key.

**TIP!** To enter + for making an international call, touch  twice.


**TIP!** Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.



**TIP!** You can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .

## Making a call from your contacts

- 1 From the home screen touch  to open Contacts.
- 2 Touch Name and enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch **Call**.


## Answering and rejecting a call


When your phone rings press the  hard key to answer the call.


Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting. Press the  hard key to reject an incoming call.

# Calls


## In-call options

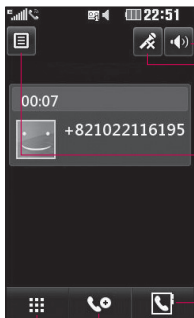



**Speaker** - Touch  to turn on the speaker phone.

**Mute** - Touch  to turn off the microphone so the person you are talking to cannot hear you.

**Options** - Choose from a list of further in-call options, including Create new memo and Go to messages, so you can check your messages and add contacts during a call. You can also end the call from here by touching End call.

 - Choose to search your contacts during a call.

 - Choose to add another person to the call.

 - Touch to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.



**TIP!** To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


## Adjusting the call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

## Speed dialling





You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. Touch any other number to assign it a speed dial contact.
- 4 Your contacts will open. Select the contact you'd like to assign to that number by touching the phone number once.

To call a speed dial number, touch  from the home screen then press and hold the assigned number until the contact appears on screen.

The call will initiate automatically, there's no need to press **Call**.

## Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End Call** followed by **All**, **Held** or **Active**.


# Calls

**TIP!** You can combine your calls by touching “Join icon” then **Join**. Check that your network provider supports conference calling.

**NOTE:** You will be charged for each call you make.

## Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

## Viewing your call logs

Touch  and select

**Communication** and tap **Recent history**.


Choose to view:

**All calls** - View a complete list of all dialled, received and missed calls.


**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Missed calls** - View a list of all the calls you have missed.

**TIP!** From any call log touch  and **Delete all** to delete all the recorded items.

## Using call divert

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call divert** and choose **Video calls** and/or **Voice calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

**NOTE:** Charges are incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.


## Using call barring

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
- 3 Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

# Calls

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

## Changing the common call setting

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Common settings**. From here you can amend the settings for:
  - Call reject** - Slide the switch left to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Slide the switch left for **On** or right for **Off**.

**Answer mode** - Choose whether to answer the phone using the send key or any key.


**Minute minder** - Slide the switch left to **On** to hear a tone every minute during a call.

**BT answer mode** - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

**Save new number** - Select **Yes** to save a new number.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

## Changing your video call settings



- 1 Touch , select **Call settings** and choose **Video call settings**.
- 2 Choose the settings for your video calling. Determine whether to Use private image and select one, and/or switch on the mirror to see yourself on screen when making a video call.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

### From the home screen

- 1 From the home screen touch  to open Contacts. Touch Name and enter the name of the contact using the keypad.
- 2 Touch **Call** or the  hard key to initiate the call.


### From the main menu

- 1 Touch , select **Communication**.
- 2 Touch **Contacts** and **Search**.



**TIP!** The alphabetical keypad is displayed once you tap Name.

**TIP!** To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.


## Adding a new contact

- 1 From the home screen touch  then select **Create new contact**.
- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 4 Add an email addresses.
- 5 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 6 You can also add a **Ringtone, Birthday, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 7 Touch **Save** to save the contact.

## Creating a group

- 1 From the home screen touch  and select the **Communication** tab. Touch **Contacts** and select **Groups**.
- 2 Touch .
- 3 Select **Create new group**.
- 4 Enter a name for your new group.
- 5 Touch **Save**.


**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

**TIP!** You can edit an existing group by highlighting it and touching .

## Changing your contact settings

You can adapt your contact settings so that your Contacts suits your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 From the Communication tab touch **Contacts** and touch . Select **Settings**.
- 2 From here you can adjust the following settings:  
**Contact list settings** - You can also choose to show the first name or last name of a contact first. You can display with quick command key among Make voice call, Make video call or Send a message.

# Contacts

## **Synchronise contacts** -

Connect to your server to synchronise your contacts. See **Synchronising your contacts**.

**Export contacts** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

**Import contacts** - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

## **Send all contacts via**

**Bluetooth** - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.



**Clear contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your contacts.

# Messaging


## Messaging

Your GT505 combines SMS, MMS and email into one intuitive and easy to use menu.


There are two ways to enter the messaging centre:


- 1 From the home screen, touch  or touch , then select **Communication** and choose **Messaging**.

## Sending a message

- 1 Touch  then **New message** to open a blank message.
- 2 From here you can choose **Message** to send an SMS or MMS.
- 3 Touch **Insert** to add an image, video, sound, New slide, Subject or More (Business card, Schedule, Memo, To do or My business card).

- 4 Touch **Recipient** to enter the recipient's number, or touch the search icon to open your contacts. You can add multiple contacts. When you are finished, touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


# Messaging


## Entering text


There are five ways to enter text:


Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

Tap the screen once, then the keyboard shows up.

 Touch to turn on T9 predictive text.


 You can change the writing languages.

 Tap to change between the numbers, symbols and texts keypads.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

To enter a space touch .

## T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.



## Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

## Setting up your email

You can stay in touch on the move using email on your GT505. It's quick and simple to set up a POP3 or IMAP4 email account.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and touch **Email**.
- 2 Touch .
- 3 Touch **Add account**.
- 4 You can now choose how your account works:

**Account name** - Enter a name for this account.

**My name** - Enter your name.

**Username** - Enter the account's username.

**Password** - Enter the account's password.

**Email address** - Enter the account email address.

**Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the outgoing email server address.

**Incoming mail server** - Enter the incoming email server address.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 2MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

# Messaging

**Save sent mail into** - Select whether to save sent emails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

**Retrieve only new** - Choose whether to discard emails already downloaded previously.

**Access point** - Choose your Internet access point.

**Download option** - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

**Auto retrieve** - Choose whether to retrieve your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**SMTP port number** - Normally, this will be 25.

**SMTP TLS/SSL** - Choose whether to use TLS/SSL for outgoing server.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**Incoming TLS/SSL** - Choose whether to use TLS/SSL for incoming server.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**SMTP Username** - Enter the SMTP username.

**SMTP Password** - Enter the SMTP password.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

## Sending an email using your new account



- 1 Touch **New Email** to open a new blank email.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

**TIP!** You can upload Word, Excel, PowerPoint and PDF documents to your GT505 so you can review them on the move.

## Changing your email settings

You can change your email settings according to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  from the home screen, and choose **Email** and from , select settings.
- 2 You can adapt the following settings:
  - Email accounts** - Manage your email accounts.
  - Allow reply Email** - Choose to allow the sending of read confirmation messages.
  - Request reply Email** - Choose whether to request read confirmation messages.

# Messaging

**Retrieve interval** - Choose how often your GT505 checks for new email messages.

**Retrieve amount** - Choose the number of emails to be retrieved at one time.

**Include message original** - Choose to include the original message in your reply.

**Include attachment** - Choose to include the original attachment in any reply.

**Auto retrieval in Roaming** - Choose whether to retrieve your messages automatically when abroad (roaming).

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

**Mail sending size** - Choose sending size of your email messages.

## Message folders

You'll recognise the folder structure used on your GT505, which is fairly self-explanatory.

**New message** - Open a new blank message.

**Inbox** - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** below for details.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent.

**Sent items** - Messages you send are placed in this folder.

**My Folders** - Create folders to store your messages.



**Templates** - Use a list of commonly used text and multimedia message templates.

**Emoticons** - Add and insert emoticons for your messages.

**Settings** - Change the settings for your text and multimedia messages.



## Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add template**, **Delete** or **Delete all** templates. To edit a message just select it, make your changes and touch **Save**.

## Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.


- 1 Touch  then choose **Emoticons**.
- 2 Touch  to, **Add emoticon**, **Delete** or **Delete all** emoticons.

## Changing your text message settings

Your GT505 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

# Messaging

Touch  then choose **Settings** and **Text message**. You can make changes to:

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.


**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as Multiple SMS or as MMS.

## Changing your multimedia message settings

Your GT505 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Settings** and **Multimedia message**. You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.


**Slide duration** - Choose how long your slides appear on screen.


**Delivery time** - Choose how long before a message is delivered.

**Multi msg centre** - Enter the details of your message centre.

## Changing your other settings

Touch , choose **Settings** then:

**Videomail** - Touch  to add a new Videomail service. Contact your network operator for more information on the service they provide.


**Voicemail** - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

**Info. service** - Choose your reception status, language and other settings.


# Camera


## Taking a quick photo

- 1** Press the  key on the right side of the phone.
- 2** Holding the phone horizontally, point the lens towards the subject of the photo.
- 3** Slightly press the capture button, a focus box will appear in the centre of the viewfinder screen.
- 4** Position the phone so you can see the subject of your photo in the focus box.
- 5** When the focus box turns green, the camera has focused on your subject.
- 6** Press the capture button fully.


## Once you've taken the photo


Your captured photo will appear on the screen. The image name is shown with four icons on the right-hand side.

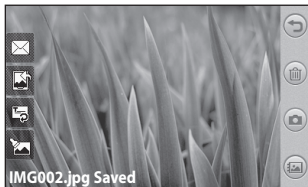



 Touch to send the photo as a **Message, Email** or **Bluetooth**. See Sending a message and Sending and receiving your files using Bluetooth.

**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the image as wallpaper.


 Touch to edit the name of the selected picture.

 Touch to edit the image using various tools.

 Touch to return to the previous menu.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.


# Camera

## Getting to know the viewfinder

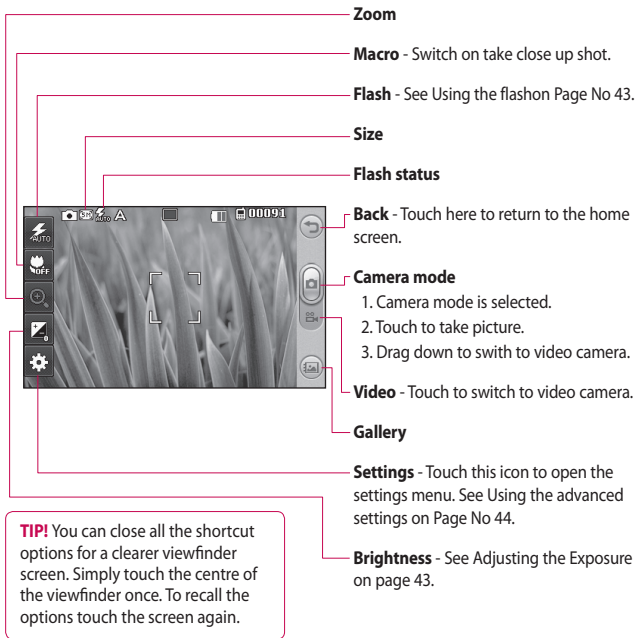




## Using the flash

The default flash setting is auto, but there are other options.

- 1 Select  from the left side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
  - Auto** - Your camera will assess the light available for a good picture and use the flash as necessary.
  - Always off** - The camera will never flash. This is useful if you want to save battery power.
  - Always on** - The camera will always flash.
- 3 When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.
- 4 The flash status icon in the viewfinder will change, based on the new flash mode.


## Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.


- 1 Touch .
- 2 Slide the contrast indicator along the bar towards  for a lower exposure and hazier image or towards  for a higher exposure and a sharper image.

# Camera

## Taking a continuous shot

- 1 From the viewfinder, touch  to open all advanced settings options and select **Shot mode** and then **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as if taking a normal photo.
- 3 The camera will take shots in quick succession.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. After selecting the option, touch the **OK** button.

**Swap cam** - For self portraits, switch to the LG GT505's inner camera.

**Image size** - Change the size of the photo to save memory space or to take an appropriately sized picture for a contact. See **Changing the image size** on page 46.

**Scene mode** - Set the camera to adjust to the environment. Choose from Auto, Night, Portrait, Landscape, Beach, Sport and Party.

**Colour effect** - Choose a colour tone to use on your new photo. See **Choosing a colour effect**.

**White balance** - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

**Shot mode** - Choose the normal or continuous shot mode or Frame shot.

**Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

**Auto focus** - Select the way the camera will focus. Choose from Auto, Manual.

**Preview style** - Choose the preview style.

**Memory in use** - Choose whether to save your photos to the Handset memory or the External memory.

**Hide icons** - Choose the camera settings icons to be hidden manually or automatically.

**Shake reduction** - Enables you to take a photo without the camera wobbling or shaking.

**Show captured image** - Select show the image or not after taking a photo.

**Shutter sound** - Select one of the four shutter sounds.

**Geo-Tagging - On/Off**

**Reset** - Restore all camera default settings.


**TIP!** When you exit the camera all settings will return to their defaults, except image size and image quality. Any non-default settings will need to be reset, such as colour tone. Check these before you take your next photo.

# Camera

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.


## Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can change the resolution to make the files smaller.

- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Image size** from the Preview menu.

- 3 Select a pixel value from the six options (**5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) or choose the predefined wallpaper or contact size.


## Choosing a colour effect


- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Colour effect** from the Preview menu.
- 3 There are colour tone options.
- 4 Once you've made your selection, the colour tone menu can be closed by selecting the OK button. You are then ready to take a picture.


**TIP!** You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.

## Using the inner camera


Your LG GT505 has an inner 640x480 camera for both video calls and taking photos.

- 1 To switch to the inner camera touch  then select **Swap cam** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

**TIP!** The inner camera has fewer settings as it has no flash nor adjustable sensitivity. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.


- 3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
- 4 To return to the main camera touch  and then select **Swap cam** from the Preview menu.

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.


# Video camera


## Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, touch  in the view finder in camera mode to switch to video mode.
- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the capture button a second time to stop recording.


## After shooting a video


A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the right-hand side.


 Touch to play the video.


 Touch to send the photo as a **Message, Email or Bluetooth**. See Sending a message, and Sending and receiving your files using Bluetooth.


**NOTE:** Additional cost may occur when MMS are downloaded when roaming.


 Touch to use the Video as Voice ringtone or Video ringtone.

 Touch to edit the name of the selected video.

 Touch to return to the previous menu.

 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.



 Touch to view the saved videos and pictures gallery.

# Video camera

## Getting to know the viewfinder



**Brightness** - See Adjusting the Brightness.

**Zoom** - Touch  to zoom in or  to zoom out. Alternatively you can use the side volume keys.

**Image size**

**Saving to handset memory/ external memory**

**Back** - Touch here to return to the home screen.

**Camera** - Touch to switch to camera.

**Video camera mode**

1. Video camera mode is selected.
2. Touch to start recording.
3. Drag up to switch to camera.




**Gallery**

**Settings** - Touch this icon to open the settings menu. See **Using the advanced settings**.

**TIP!** You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

## Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure and fuzzier image, or towards  for a higher contrast and sharper image.

## Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options. After selecting the option, touch the **OK** button.

**Swap cam** - Switch to your LG GT505's inner camera to record yourself on video. See **Using the inner video camera**.

**Video size** - Change the size of the video to save memory space. See **Changing the video image size** on page 53.

**Scene mode** - Choose from Auto , Night, Portrait, Landscape, Beach, Sport and Party.

**Colour effect** - Choose a colour tone to use on your new view. See **Choosing a colour tone** on page 53.

# Video camera

**White balance** - The white balance ensures any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

**Video quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

**Duration** - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

**TIP!** If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

**Memory in use** - Choose whether to save your videos to the Handset memory or to the External memory.


**Voice** - Choose Mute to record a video without sound.

**Hide icons** - Select whether to hide the icons on the camera menu automatically or manually.

**Reset settings** - Reset all the video camera settings.

## Changing the video image size


The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can change the video resolution to make the files smaller.

- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from options:  
**320x240** - Smaller image size, and therefore a smaller file size. This is ideal for saving memory space.  
**176x144** - Smallest image size and therefore the smallest file size.

- 4 Touch the back icon to return to the viewfinder.

**TIP!** For video format conversion software, see the CD that came with your GT505.

## Choosing a colour tone

- 1 Using the viewfinder, touch  in the left corner.
- 2 Select **Colour effect** from the Preview menu.
- 3 There are six colour tone options.
- 4 Touch the colour tone you want to use.

# Video camera


## Using the inner video camera

Your LG GT505 has an inner 320x240 camera for both video calls and recording videos.

- 1 To switch to the inner camera, touch  then select **Swap cam**.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.
- 3 After you have shot the video, you'll be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Swap cam**.


**TIP!** You can still alter the image size, colour effect, white balance and quality by touching **Settings** in the same way as when using the main camera.

## Watching your saved videos


- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

# Your photos and videos

## Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

**TIP!** Flick left or right to view other photos or videos.

**TIP!** To delete a photo or video, open it and select . Touch **Yes** to confirm.

## Using zoom when viewing a photo

When viewing photos, you can zoom in and out.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen bottom after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.


## Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch homescreen menu.
- 4 You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.


# Your photos and videos


## Editing your photos


You can do lots of great things to your photos to change them, add to them or liven them up.


1 Open the photo you want to edit and touch  to show the options.


2 Touch the icons to alter your photo:


 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.

 Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.


 Adding writing on a picture. See **Adding text to a photo** on page 57.


 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.


 Erase the editing you have done to the picture. You can choose the size of eraser you use.


 Touch to return to the gallery.

 Save the changes you made to the photos. Select to save the changes as an **Update existing** or a **New file**. If you select **New file** enter a file name.


 Erase the editing you have done to the photo.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo** on page 58.

 Touch to apply the effect options to a photo.

 This helps to adjust a picture taken using automatic colour, brightness etc.



## Adding text to a photo

- 1 From the editing screen, touch  .
- 2 Select **Text** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Save**.
- 4 Move the text by touching it and sliding it to where you want it.





# Your photos and videos




## Adding an effect to a photo

- 1 From the editing screen, touch .
- 2 You can apply any of the various options to the photo.
- 3 To undo an effect simply touch .

## Cropping a photo

- 1 From the editing screen, touch .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop.
- 4 When you are finished with your selection, touch .

## Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour Accent**.
- 3 Select part of the photo.  
A traced line will appear around everything in that area which is the same or a similar colour, for example, a person's hair or jumper.
- 4 Alter the intensity of the accenting by touching  and then sliding the marker up or down the intensity bar.
- 5 Touch **OK**.
- 6 All colour will be removed from the photo, apart from in the section marked for colour accenting.
- 7 Select  to save the changes.

## Swapping colours in a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo.  
A traced line will appear around everything in that area which is the same or a similar colour.  
For example, someone's hair or jumper.
- 4 Select a colour.
- 5 Press **OK**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select  to save the changes.

# Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.


## Pictures

**Images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

## My images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera.

## Sending a photo

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Images**.
- 3 Select the picture you want to send, and touch **Send**. Choose from **Message**, **Email** or **Bluetooth**.

- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

## Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Images**.
- 3 Select an image and touch .
- 4 Touch **Use as** and choose from:
  - Home screen** - Set a wallpaper for the home screen.
  - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

**Incoming call** - Set an image to appear during incoming calls.

**Outgoing call** - Set an image to appear during outgoing calls.

**Switch on** - Set an image to appear when you switch the phone on.

**Switch off** - Set an image to appear when you switch the phone off.

## Marking up your images



A low- light photo can be adjusted without lowering the quality of the picture.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Images**.
- 3 Select an image and touch  then touch **Smart Light**.
- 4 The light will automatically be changed, and you will have an option to save the new image.

# Multimedia



## Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Images**.
- 3 Touch  then select **Move** or **Copy**.
- 4 Select an image.
- 5 Select **Move** or **Copy**.

## Creating a slide show



If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Images**.
- 3 Touch  then **Slide show**.

## Sounds

The **Sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.


## Using a sound

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Sounds**.
- 3 Select a sound and it will begin to play.
- 4 Touch  and select **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** or **Shut down**.


## Videos

The **Videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

### Watching a video

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Videos**.
- 3 Select a video to play.

## Using options while video is paused

Touch  while in pause mode and choose from:

**Send** - Send the video in a message, email or via Bluetooth.


**Delete** - Delete the video.

**Use as** - Enables to set Voice ringtone or Video ringtone. (This can be limited by Video frame size.)

**File info.** - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

# Multimedia


## Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message, Email, Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

## Playing a game

- 1 Touch  then **Entertainment**.
- 2 Touch **Games & apps**, then **Games**.
- 3 Choose and touch a game to launch.

## Using the games options menu

From the Games & apps folder, the following options are available:


**Sort by** - Sort the games and applications by **Date**, **Size** or **Name**.

**File info.** - View the game information.

## Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.


## Viewing an SWF/SVG file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Flash contents**.
- 3 Select the file to view.

## Documents

From Documents in My stuff, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

## Viewing a file

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Documents**.
- 3 Select a document and touch **View**.

## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:



- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

# Multimedia





## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.


To move a file from Others to Documents:

- 1 Touch  then **Entertainment**.
- 2 Touch **My stuff** then **Others**.
- 3 Touch  select move, and mark the files.
- 4 Touch Move and choose the destination folder from the list by touching the icon.

## Creating a movie

- 1 Touch  then **Entertainment**.
- 2 Touch **Muvee Studio**.
- 3 Touch  to add an image. Touch the images you want to include then select **Insert**.
- 4 Touch the style tab across the top to choose a movie style.
- 5 Touch the sound tab at the bottom of the screen to change the sound, such as a mp3 file.
- 6 Touch the **Play** button to see what you've created.
- 7 Touch  then **Play Order** to change the order.
- 8 Touch  then **Save Location** to choose where to save the movie, and touch **Usage** to choose between **For Keeping** and **For MMS**.
- 9 To save your movie, press play and then touch the save icon in the bottom.

## Music

Your LG GT505 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** and **Music**. From here you can access a number of folders:

**Recently played** - You can listen all of the songs you have played recently.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - You can listen to the music randomly.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. You can also use LG PC Suite.

To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

# Multimedia

## Playing a song


- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

## Creating a playlist



You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **New playlist**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

To play a playlist, select it and touch Play.

**NOTE:** To add a second playlist, touch  then New playlist.

## Deleting a playlist

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

## Using the radio



Your LG GT505 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

**NOTE:** You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

## Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning.

### To auto tune:

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.


**NOTE:** You can also manually tune into a station by using wheel displayed next to the radio frequency.

# Multimedia

## Resetting channels

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels.



## Listening to the radio


- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

# Organiser


## Adding an event to your calendar

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square colour cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.


**TIP!** You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red.

# Organiser

## Changing your default calendar view

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**. Select **settings**.
- 2 Touch **Calendar** and choose either **Month view** or **Week view**.
- 3 Set **week starts on**.
- 4 Press **Save** to confirm your choice.

## Adding an item to your To do list

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **To do** and touch **Add to do**.

- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

## Sharing a To do task


- 1 From the home screen select , then **Utilities** and choose **Organiser**. Select **To do**.
- 2 Select the task you would like to share, then touch .
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg.**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer.



## Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the home screen select  then touch **Utilities** and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

## Setting your alarm


- 1 From the home screen select  then touch **Utilities** and choose **Alarms**.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to repeat Daily, Mon - Fri, Mon - Sat, Sat - Sun, Except holiday or Choose weekday. The icons indicate the weekday you select.
- 5 Select **Alarm type** to select a type for your alarm.
- 6 Touch **Alarm bell** then select bell. To listen to sounds touch the sound, followed by .
- 7 Add a memo for the alarm.

# Organiser

- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.
- 10 To power off the alarm, you can choose snooze or stop.  
**NOTE:** You can set up to 5 alarms.

**TIP!** Touch on/off icon on the right hand side of the alarm.



## Adding a memo

- 1 From the home screen select  then touch **Utilities** and choose **Memo**.
- 2 Touch **Add memo**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.





**TIP!** You can edit an existing memo. Select the one you want to edit and type your changes.

## Voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder** then  and choose from:  
**Settings > Duration** - Set the recording duration. Choose from **MMS, 1 min** or **No limit**.  
**Settings > Quality** - Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.  
**Go to sounds** - Open the Voice recordings folder in **My sounds**.


## Recording a sound or voice

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.





## Sending the voice recording

- 1 Once you have finished recording, touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose Bluetooth, you will be prompted to turn Bluetooth on.


**NOTE:** After you have finished recording, touch  and choose **Send, Files, Delete, Use as** (to use the recording as your ringtone), **Settings** or **Go to sounds**.

## Using your calculator

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, x, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **deg**, **sec**, **csc**, **cot**, **rad**, **log**, **ln** or **exp**.

# Organiser

## Converting a unit

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

## Using the stopwatch

- 1 From the home screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

## Adding a city to your world time

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **World clock**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show the screen.
- 4 Touch the city to select it, and it will be added to your World time list.


## Jogging Buddy

Whether walking, running or jogging, GT505 provides up-to-the-second information including distance and time, and keeps an exercise log for you using advanced GPS technology.

- 1 From the home screen select  then touch **Utilities** and choose **Tools**.
- 2 Select **Jogging buddy**.
- 3 Touch << >> to a set Distance or Time for your jog.
- 4 You can switch Regular beep on or off.
- 5 Once GPS is connected, the start button will light up. Touch  to start.

 - Reset button

 - Start button

 - Pause button

 - Stop button

Regular beep - The phone beeps at distance or time intervals to help you keep track without having to keep looking at the screen.

# PC Sync

## Always ask mode

If you set the “Ask always mode” as default, the phone will always prompt you to select a type of USB connection mode each time you connect the phone to a PC via the data cable. If you disable the “Ask always mode”, the connection mode will be the one you have manually set in Menu - Settings - Connectivity - USB Mode and one of the options **Mass storage, PC suite** or **Music sync**.

You can synchronise your PC with your phone to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

## Installing LG PC Suite on your computer

- 1 From the home screen press and choose **Connectivity**.
- 2 Select **USB connection** mode and click **OK**.
- 3 Insert the supplied CD into your PC. Click on the LG PC Suite Installer which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 6 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**. Your phone and PC are now connected.

## Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.

- 3 Choose to back up **Contents Data** and/or **Phonebook/Schedule/ToDo/Memo Data**. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Manage Files** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

# PC Sync

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Manage Contacts** icon.
- 3 Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**NOTE:** To backup contacts saved to your USIM card, click on the SIM card folder on the left side of your PC screen. Right click on one of your contacts and choose **Select all**, then **Copy** or **Move to phone memory**.

Right-click your contacts and select **Copy to contact**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar of your screen to edit and rearrange messages.

## Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the home screen select , then touch **Settings**.
- 3 Select **Connectivity**, then **USB connection** mode.
- 4 Touch **Mass storage**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 A removable disk folder will open automatically on your computer, then all the folders of memory card will be found.


**NOTE:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

# The web

## Browser

**Browser** gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

## Accessing the web

- 1 From the home screen select , then touch **Utilities** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

## Adding and accessing your bookmarks


For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select , then touch **Utilities** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch connect. You will be connected to your bookmark.

## Using RSS reader


RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

## Saving a page

- 1 Access a webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.


**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

## Accessing a saved page


- 1 From the home screen select  then touch **Utilities** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the page you would like to view and it will open.

# The web

## Viewing your browser history

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **History**.
- 2 The web page you have accessed recently will be displayed. To access one of these pages, simply select the item required.

## Changing the web browser settings

- 1 From the home screen select  then touch **Utilities** and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **security**, or **Reset Settings**.
- 3 You can simply set these to on or off by touching the switch icon.

## Using your phone as a modem

Your GT505 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

### Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GT505 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your GT505.

## Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GT505.
- 2 Pair your PC and GT505 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your GT505.

# Settings

Within this folder you can adapt your settings to make your GT505 personal to you.

## Changing your screen settings

**1** Touch  then choose **Settings**.

**2** Touch **Screen settings** and then choose from:

**Wallpaper** - Choose the theme for your home screen.

**Dialling** - Adjust the number size and colour.

**Font** - Adjust the font size.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Brightness** - Adjust the screen brightness.

**Handset Theme** - Quickly change the whole look of your screen.

**Greeting message** - Choose on or off and fill in the greeting message.


Choose an image for **Incoming calls**, **Outgoing calls**, **Start-up** and **Shut-down**.

**3** Touch **Save** to save your settings.

## Personalising your profiles

You can quickly change your profile on the home screen. Simply touch the status summary icon and touch the profile tab.


Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose **Settings**.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Voice/Video ringtone** and **Volume, Message alerts** and more.

## Changing your phone settings

Enjoy the freedom of adapting how your GT505 works to your own preferences.

**TIP!** To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose **Settings**.
- 2 Touch **Phone settings** then choose from the list below.  
**Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.  
**Power save** - Choose to switch the factory set power saving settings **On** and **Off**.

# Settings

**Languages** - Change the language of your GT505's display.

**Auto key lock** - Lock the keypad automatically in home screen.


**Security** - Adjust your security settings, including PIN codes and handset lock. The default security code is 0000.

**Memory manager** - See **Using memory manager**.

**Reset settings** - Reset all the settings to their factory definitions.

**Information** - View the technical information and phone guide for your GT505.


## Changing your touch settings

Touch  then **Settings**. Choose **Touch settings**. To reset the touchpad and make it easier to use, select **Touchpad calibration** and touch the crosses. Save the settings when you are happy with them.

Select **Touchscreen effect** to reset touch **Type**, **Tone** and **Vibration**.

## Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  then **Settings**. Touch **Connectivity**.

**Network settings** - Your GT505 connects automatically to your preferred network. To change these settings use this option.

**Internet profile** - Set the profiles for connecting to the internet.

**Access point** - Your network operator has already saved this information. You can add new access points using this menu.

**GPS type** - Choose either **Assisted GPS** or **Stand alone**.

## GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS ) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

# Settings

**NOTE:** GPS service has an error tolerance and it is unable to work in buildings or underground.

## **USB connection mode** -

Synchronise your GT505 using the LG PC Suite software to copy files from your phone.

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronize with external memory, you can use 'External memory' as Primary storage. If you want to synchronise with internal memory, you can use 'Internal memory' as Primary storage.


**Synch Service** - The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, to do items and memo items via a wireless network.

**Streaming settings** - Your network operator has already saved this information. You may edit it if you'd like to make changes.

**Java settings** - Allows you to set Profiles.

## **Using memory manager**

Your GT505 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately). You can use memory manager to determine how each memory is used and see how much space is available.

Touch  followed by **Settings**. Select **Phone settings** then **Memory Manager**.

**Handset common memory** - View the memory available on your GT505 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.


**Handset reserved memory** - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

**USIM memory** - View the memory available on your USIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage settings** - Choose the location you prefer items to be saved to.

## Using flight mode

Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**. Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

## Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**. Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.
- 4 If you have already paired the Bluetooth device, your GT505 will not automatically search for other Bluetooth devices. If not, your GT505 will search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.



# Settings

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

## To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your My stuff.

## Changing your bluebooth settings:

- 1 Touch  and choose **Settings**.
- 2 Choose **Bluetooth** then touch  and choose **Settings**.

Make your changes to:

**My device visibility** - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

**My device name** - Enter a name for your GT505.

**Supported services** - Show all Bluetooth functions supported by your phone.

**My address** - Show your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GT505 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GT505 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask always** or **Allow without ask** and touch **Yes** to Connect now Your GT505 will automatically switch to Headset profile.

# Wi-Fi

Wireless Manager allows you to manage Wi-Fi Internet and Bluetooth connections on your device. It allows the phone to connect local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

**NOTE:** GT505 supports WEP, WPA-PSK/2 encryption not EAP encryption. If your Wi-Fi service provider or network administrator sets the encryption for network security, you should fill in the key in the pop-up window. If the encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask for it from your Wi-Fi service provider or network administrator.

## 1. How to set up Wi-Fi

- 1 Wi-Fi On
- 2 AP (Access Point) Search
  - Searches which AP is available to be connected.
- 3 AP Connect
  - Connects to the desired AP in the AP search list.
  - If the AP is WEP or WPA-PSK/2 security type, enter the security key.

## 2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to frequently used AP or Hidden AP)
  - 1) If the AP does not appear in the search list, it is possible to connect to it by saving it as a profile.

- 2) By saving the frequently used AP as a profile, it is easier to enter the Security key when connecting to the AP that has the Security type.
  - 3) If the AP does not support the DHCP, it is possible to connect to the AP by using the static IP.
- 2** Description of each field in the Wi-Fi profile
- 1) Network name: SSID (ID)
  - 2) Security type: WEP, WPA-PSK/2 support.
  - 3) Security key: saves the security key.
  - 4) IP/DNS setting: this allows you to set Dynamic or Static depending on the DHCP support of the AP.  
If you set Static, enter the field value of the IP Address and DNS server to connect to the static IP when attempting to connect.
- 3** How to save the Wi-Fi profile
- 1) Select Saved networks from the Options menu, then select Add networks and enter values into each field.
  - 2) It is possible to select and save the AP search list after selecting Wi-Fi On and then selecting Refresh (Searching AP).
  - 3) After connecting to the AP the Y/N popup will enable you to save the profile.

# Phone Software update

## LG Mobile Phone Software upgrade in web site

For more information and using this function,

Please visit LGmobile.com site

**path: <http://www.lgmobile.com>  
– select country – Products menu  
– Manual & software menu**

This Feature allows you to upgrade your software to the latest version and conveniently on the internet without needing to visit our service center.

As the mobile phone software upgrade requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or battery during the upgrade may seriously damage you mobile phone.

As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

# Accessories

These accessories were supplied with GT505.

## Charger



## Data cable and CD

Connect and synchronise your GT505 and PC.



## Battery



## Stereo headset



## User Guide

Learn more about your GT505.



## NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

## Network service

The wireless phone described in this guide is approved for use on the GSM and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : GT505

System : UMTS 900/2100

GSM 850/900/1800/1900

### Ambient Temperatures

Max : + 50 °C (discharging),  
+ 45 °C (charging)

Min : - 10 °C (discharging),  
0 °C (charging)

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM / W-CDMA Terminal Equipment

Model Name

GT505

Trade Name

LG

**CE 0168**

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.7.1  
EN 50360:2001/EN62209-1:2006  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

13. May, 2009

Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GT505 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.941 W/kg (10g) and when worn on the body is 1.17 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/ kg averaged over 1g of tissue.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.

# Guidelines for safe and efficient use

- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Glass Parts**

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

# Guidelines for safe and efficient use

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least two seconds.
	Battery empty Battery contacts dirty	Charge battery. Check charging indicator in the display. Clean contacts.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.





Warranty Card

產品保用證

Mobile Phone

手提電話

The form area is divided into two sections. The left section features a series of approximately 15 horizontal, wavy lines that create a sense of movement and depth. The right section consists of a series of approximately 15 horizontal, straight lines, providing a structured area for text or information.

## Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



Welcome to contact for detailed information  
& Customer Care Centre address

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。


**IMPORTANT** : Please keep and present this warranty card and purchase invoice when services are rendered.  
Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查/維修時出示，否則保用無效。


## Mobile Phone Warranty Policy

### 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
    - (i) Handset: 12 months (ii) Charger : 6 months
    - (iii) Battery : 6 months (iv) Hand free earphone : 3 months.
  - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
  - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
  - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
  - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
  - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
  - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
    - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alteration or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
    - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
    - (iii) The IMEI number sticker on this product has been erased or modified.
    - (iv) The content of warranty policy has been modified without authorization.
  - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
  - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
  - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
  - (11) This warranty card is restricted within Hong Kong SAR only.
- 
- (1) 本公司為客戶提供保用期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
    - (i) 機身: 12個月 (ii) 充電器: 6個月
    - (iii) 電池: 6個月 (iv) 免提耳機: 3個月
  - (2) 保用條款只適用於原裝行貨，水貨及冒牌貨均屬無效。
  - (3) 此保用期只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然虛損包括外殼、鍵盤、顯示屏、天線、附件等。
  - (4) 用戶要求維修服務時，須同時帶同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則維修服務無效。客戶須應付維修費用。
  - (5) 在保用期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作任何處理。
  - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
  - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人釐收所有的維修費用。
    - (i) 手機運作未於可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去、保留膠卷即無效。
    - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
    - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保用服務即無效。
    - (iv) 擅自修改本保用證的內容。
  - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害、意外事件造成之損失概不負責。
  - (9) 本保用證的發出及終止權均屬本公司所有，並不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
  - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
  - (11) 此保用證只適用於香港特別行政區範圍內。



## 服務承諾

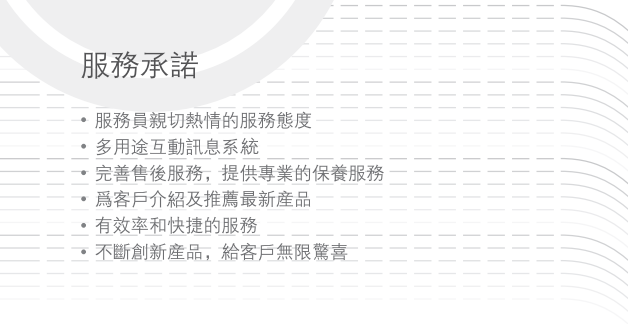- 服務員親切熱情的服務態度
  - 多用途互動訊息系統
  - 完善售後服務，提供專業的保養服務
  - 為客戶介紹及推薦最新產品
  - 有效率和快捷的服務
  - 不斷創新產品，給客戶無限驚喜
- 

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



To:

LG Electronics HK Ltd.  
North Point Post Office Box No.54509  
香港北角郵政信箱54509號



## Limited Warranty

### 限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.  
您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

### Customer Information

#### 客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



