



繁體中文
簡體中文
ENGLISH



使用手冊
用戶手冊
User Guide

LG-T300



CE0168

P/N : MMBB0390556 (1.0)

www.lg.com

Bluetooth QD ID B016849

LG-T300 使用手冊 - 繁體中文

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



安全與有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。


射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本型號手機 LG-T300 之設計符合適用的無線電波暴露安全要求。此要求包括可確保所有用戶安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量子度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.19 瓦/千克 (10 克)，隨身攜帶時則為 1.50 瓦/千克 (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品保護及維護

 **警告：**只可以使用經認可用於此特定手機型號的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。

安全與有效使用準則

有效的手機操作

電子裝置

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，亦即您的胸部口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 如有免提耳機，則請使用。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。

- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。當您在馬路旁邊時，這一點尤其重要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

注意！ 來自耳機的過度噪音和壓力可導致聽力損失。

爆破地區

請勿在進行爆破時使用手機。嚴格遵守相關限制、條例或規定。

潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。

- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。

安全與有效使用準則

- 請保持電池組的金屬接點清潔。
- 當電池失去可接受的效能，請更換電池。電池在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 根據製造商說明棄置廢舊電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

安裝智能咭和手機電池

安裝智能咭

申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和許多其他內容。


重要資訊！

由於智能咭及其觸點很容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。將所有智能咭放置在兒童無法觸及的地方。



插圖

取下電池前，必須關掉手機並中斷電源。

- 1 移除電池蓋。
- 2 取下電池。
- 3 插入智能咭
- 4 裝上電池。
- 5 合上電池蓋。
- 6 將電池充電。

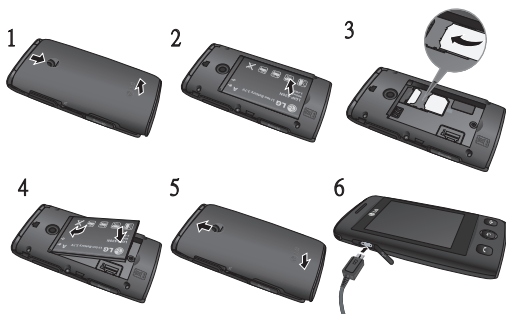

手機部份

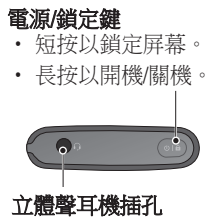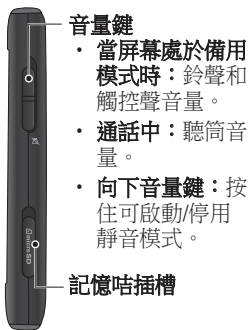

使用觸控屏幕

觸控屏幕提示

- 要選擇某個項目，請按圖示。
- 點按觸控屏幕時無需太大力。觸控屏幕非常敏感，輕輕觸控即可。
- 使用指尖觸控所需的選項。請注意不要觸控其他按鍵。
- 不使用 LG-T300 手機時，系統會返回鎖定屏幕。



捲動

左右滑動即可捲動。在某些屏幕上（例如，通話記錄清單），您亦可上下滑動。

控制觸控屏幕

LG-T300 的觸控屏幕可隨您正執行的工作項目而變更。

開啟應用程式

要開啟任何應用程式，只需點按此應用程式的圖示。




桌面

您可在桌面中滑動並點按所需內容。


啟動



Widget 桌面 - 點按屏幕左下方的  時，手機 Widget 控制面板會出現。拖動圖示以設定 Widget。

啟動



快速撥號桌面 - 點按  時，快速撥號列表會出現。您可透過此桌面直接進行通話、發送訊息或編輯通訊錄。

功能表屏幕

您可以在功能表屏幕中左右滑動即可選擇所需功能。若要在不同桌面之間切換，只需在顯示屏上從左到右或從右到左快速滑動。

- 1 通話屏幕 - 在此功能表中發送訊息或撥打電話。



- 2 多媒體屏幕 - 發送電子郵件或享受遊戲。




- 3 應用程式屏幕 - 在此功能表中使用應用程式。



通話功能


撥打電話


- 1 點按  開啟按鍵。
- 2 使用鍵盤輸入號碼。
- 3 點按  開始通話。

提示！ 要在撥打國際電話時輸入「+」，請按住 。

輕按電源鍵鎖定觸控屏幕，以防不小心進行撥號。



透過通訊錄撥打電話

- 1 從桌面點按  開啟通訊錄。
- 2 點按屏幕頂部的「搜尋」欄位方塊，使用按鍵輸入想要撥打的聯絡人的前幾個字。

- 3 從篩選的列表中，選擇想要撥打的聯絡人旁邊的「通話」圖示。如果該聯絡人存在多個號碼，將使用預設號碼。
- 4 或者，如果該聯絡人存在多個號碼，您也可以從通訊錄中選擇想要使用的號碼。您還可以點按  啟動與預設號碼的通話。

變更一般通話設定

- 1 點按「設定」標籤中的通話設定。
- 2 滑動並點按通用設定。
 - **來電拒接** - 向左滑動開關為開啟。您可以選擇拒接列表以選擇所有通話、通訊錄、群組、所有無來電號碼、所有無名稱來電者
 - **發送我的號碼** - 選擇是否在撥出的電話中顯示您的電話號碼。

- **自動重撥** - 向左滑動開關為開啟，或向右為關閉。
- **接聽模式**
按發送鍵：允許您僅透過按  鍵接聽來電。
按任何鍵：允許您透過按除  鍵外的任何鍵均可接聽來電。
- **分鐘提示** - 向左滑動開關開啟此功能，以便在通話時聽到分鐘提示音。
- **藍芽接聽模式** - 選擇免提，可使用藍芽耳機接聽來電，或選擇手機，便可透過按手機上的按鍵接聽來電。
- **儲存新號碼** - 選擇開啟或關閉儲存新號碼。

通訊錄

搜尋通訊錄

- 1 點按**通訊錄**。
- 2 點按**搜尋**。
- 3 您可看到通訊錄列表。在「搜尋」欄位輸入聯絡人名稱的首字母，功能表將跳至該字母所在的列表區。

新增通訊錄

- 1 點按通訊錄，並選擇新增。
- 2 選擇是否將通訊錄儲存到**內置記憶體**或**智能咭**。
- 3 輸入名字和姓氏。
- 4 您最多可為每個聯絡人輸入五個不同的號碼。
- 5 新增電郵地址。您最多可為每個聯絡人輸入兩個不同的電郵地址。
- 6 將聯絡人編入一個或多個群組。

7 點按**儲存**儲存通訊錄。

變更通訊錄設定

您可以調整通訊錄設定，使**通訊錄**適合您自己的喜好。

點按**選項鍵** ，並選擇設定。


- **顯示名稱** - 選擇先顯示姓氏或名字。
- **複製** - 在智能咭和內置記憶體之間複製通訊錄。您可以選擇一次複製一個或全部通訊錄。
- **移動** - 此操作與「複製」操作一樣，但通訊錄僅會儲存於新的位置。因此，一旦將通訊錄從智能咭移動到內置記憶體，將會從智能咭記憶體中刪除通訊錄。
- **透過藍芽傳送所有通訊錄** - 透過藍芽將所有通訊錄發送到其他手機。

- **備份通訊錄/還原通訊錄** - 將通訊錄儲存或還原到其他儲存體。
- **刪除全部通訊錄** - 刪除您的所有通訊錄。若確定要刪除所有通訊錄，請點按是。

訊息


LG-T300 將文字訊息和多媒體訊息結合在一個易用的功能表中。


發送訊息

- 1 在功能表中點按**訊息**。然後，選擇編寫訊息並開始寫入新訊息。
- 2 點按附加可選擇常用範本等。
- 3 點按屏幕頂部的**收件者**以輸入收件者。然後，輸入號碼或點按  以選擇聯絡人。您還可新增多個聯絡人。
- 4 完成後，請按**發送**。

⚠ 警告：如您新增圖像、影片或聲音檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

輸入文字

您可以透過點按  和輸入法模式選擇輸入法模式。

點按  以開啟 T9 模式。僅當選擇按鍵作為輸入法模式時，才會顯示該圖示。

點按  以切換數字、符號和文字輸入。

使用 **Shift** 鍵在大小寫輸入之間更改。


手寫識別

在手寫模式下，您只需要在屏幕上寫入要輸入的字，LG-T300 手機即會將手寫內容轉換為訊息。

設定您的電子郵件

在多媒體屏幕中點按**電子郵件**。

如果尚未設定電子郵件帳戶，請啟動電子郵件設定精靈並完成設定。

您可以透過選擇  刪除或按設定。

變更文字訊息設定

點按**訊息**，並點按**設定**。選擇**文字訊息**。

文字訊息中心 - 輸入訊息中心的詳細資料。

發送報告 - 向左右滑動以開關，接收已發送訊息的確認訊息。

有效時期 - 選擇訊息儲存在訊息中心的時間。

訊息類型 - 將文字轉換成**文字、語音、傳真、X.400**或**電子郵件**。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

發送長文字時設為 - 選擇將長文字作為**多個文字訊息**或**多媒體訊息發送**。

變更多媒體訊息設定

點按**訊息**，然後點按**設定**和**多媒體訊息**。

接收模式 - 選擇**本地網絡**或**漫遊網絡**。如果選擇**手動**，將僅收到多媒體訊息通知，然後選擇是否進行完整下載。

發送報告 - 選擇**要求及/或允許報告**。

閱讀回覆 - 選擇**要求及/或允許回覆**。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息要在訊息中心中保留多久。

投影片播放時間 - 選擇投影片在屏幕上的顯示時長。

不受支援的附件 - 選擇是否限制或不限制不受支援的附件。

發送時間 - 選擇隔多久發送訊息。

多媒體訊息中心 - 從列表中選擇一個訊息中心或新增訊息中心。

社交網絡服務 (SNS)

您的 LG-T300 備有社交網絡服務，讓您享用及管理社交網絡。

備註：社交網絡服務功能是資料性應用程式。連接及使用網上服務可能需要額外付費。請向網路提供商諮詢資料費用。

Facebook (SNS 續)

主頁：登入後便可檢視朋友的最新狀態。輸入您的最新狀態或查看他人的近況。


個人檔案：您可以檢視個人資訊。並可選擇在留言板寫入更新狀況和上載相片。

朋友：選擇搜尋功能以搜尋您的朋友。

訊息：您可以檢視收件匣/寄件匣資料夾，亦可編寫社交網絡訊息。

相機

快速拍照

- 1 點按**相機**功能表。
- 2 當相機對準拍攝物時，按屏幕右邊的  進行拍照。

提示：要切換到相機模式或影片模式，向上/向下滑動取景器的相機或影片圖示。

拍照之後

拍攝的相片將顯示於屏幕上。

可使用以下選項。

點按 。


發送 - 將相片以訊息、電子郵件或透過藍芽發送。


設為 - 點按以設定桌面圖像（主屏幕牆紙、鎖定畫面牆紙、通訊錄圖像、來電影像、撥出電話影像、開機圖像和關機圖像）。

重新命名 - 點按以重新命名相片。


編輯 - 點按以編輯相片。

 點按刪除圖像。

 點按以返回取景器。

 點按以檢視已儲存的相片集。

使用進階設定

從取景器中，點按  以開啟所有進階設定選項。

選擇所需選項後，請點按 **OK** 按鍵。

大小 - 更改相片的大小以節省記憶體

白平衡 - 選擇**自動**、**白熱光**、**陽光**、**日光燈**和**陰天**。

色彩效果 - 選擇新相片的色調。

連環拍攝 - 在取景器中對準拍攝對象，然後就像拍攝普通相片一樣按拍攝按鈕。相機將以快速連續的方式拍照。

自拍計時 - 自拍計時允許您設定按下快門後的延遲拍攝時間。您可以選擇**關閉**、**3 秒**、**5 秒**或**10 秒**。此功能最適合自拍時使用。

夜間模式 - 在黑暗環境中非常有用。

圖像質量 - 可選擇**特細緻**、**細緻**及**正常**。質素愈細緻，相片便愈清晰。然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

選擇儲存 - 選擇是否將相片儲存至手機記憶體或外置記憶體。

隱藏圖示 - 選擇手動或自動隱藏相機設定圖示。

顯示拍攝圖像 - 選擇開啟可立即檢查所拍攝的圖片。

快門聲 - 從三種快門聲中選擇一種聲音。



格線畫面 - 可選擇**關閉**、**簡單十字**或**三等分**。

重設設定 - 還原所有相機預設設定。

視像攝錄機


快速製作影片

要切換到相機模式或影片模式，向上/向下滑動取景器的相機或影片圖示。

- 1 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 2 按紅點 。
- 3 ● **Rec** 將顯示於取景器底部，而底部的計時器則會顯示影片錄製的長度。
- 4 若要暫停影片，點按  並透過選擇  繼續。
- 5 點按屏幕上的  以停止。

製作影片之後

將在屏幕上顯示一張靜態影片圖像。影片名稱顯示在屏幕底部，同時會在屏幕左側和右側顯示圖示。



 點按播放影片。


可使用以下選項。


點按 。

發送 - 將影片以**訊息**、**電子郵件**或**藍芽**發送。


重新命名 - 點按以重新命名影片。

 點按以刪除剛剛錄製的影片，透過點按  予以確定。取景器將再次出現。

 點按立即拍攝另一段影片。當前影片將會被儲存。

 點按檢視已儲存影片和圖片的圖片集。

使用進階設定

從取景器中，點按  以開啟所有進階設定選項。選擇所需選項後，請點按**確定**按鍵。

色彩效果 - 選擇新影片的色彩調。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動、白熱光、陽光、日光燈**和**陰天**。

品質 - 在**特細緻、細緻**及**正常**之間選擇。質素越細緻，影片越清晰，檔案大小也就越大。因此，手機記憶體儲存的影片數量也將更少。

持續時間 - 為視像設定播放時間限制。您可選擇正常或多媒體訊息限制影片的大小，以透過多媒體訊息發送影片。

選擇儲存 - 選擇是否將影片儲存至手機記憶體或外置記憶體。

音訊錄製 - 選擇靜音以錄製無聲影片。

隱藏圖示 - 選擇手動或自動隱藏視像攝錄機功能表內的圖示。

重設設定 - 重設所有視像攝錄機設定。

音樂

若要存取音樂播放機，請選擇音樂。您可從此處存取多個資料夾：

最近播放 - 播放最近播放過的歌曲。

全部曲目 - 包含手機上的全部歌曲，預載的預設音樂除外。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含已建立的全部播放列表。

隨機播放曲目 - 按照隨機順序播放曲目。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或 USB 線。

若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啟藍芽，且彼此相互連接。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要在手機上點按是予以接收。
- 4 檔案應顯示在音樂 > 全部曲目中。

管理檔案

您可以將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭以便釋放手機記憶體空間。

透過我的檔案，您可以開啟已儲存所有多媒體檔案的資料夾。

遊戲和應用程式

您可將新遊戲和應用程式下載至手機上以供消遣。

FM 收音機

LG-T300 具有 FM 收音機功能，您可在外出旅途中調諧至最愛電台，收聽節目。

搜尋電台

您可透過手動或自動搜尋電台，將手機調諧至收音機電台。電台將被儲存至指定頻道編號中，以防重複調諧。您必須首先將耳機插入手機中，將耳機作為天線使用。

自動調諧：

- 1 選擇 FM 收音機，然後選擇 。

- 2 點按**自動掃描**。顯示一則確認訊息。選擇**是**，系統將自動搜尋電台並分配到手機頻道中。

備註：您亦可透過使用屏幕顯示的◀和▶手動調諧電台。若按住◀和▶，則將自動搜尋電台。

記事簿

新增事件至日曆

- 1 選擇日曆。
- 2 選擇要將事件新增至的日期。
- 3 點按**新增**。

設定工作

- 1 點按**工作**。
- 2 點按**新增**，然後您可以在此功能表中設定並儲存您的工作。

使用日期搜尋器

日期搜尋器是一種方便快捷的工具，有助於您計算特定天數後的日期。

網絡功能

瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

存取網絡

- 1 點按**瀏覽器**。
- 2 要直接跳至瀏覽器主頁，選擇**主頁**。或者，選擇**輸入網址**並鍵入網址，然後選擇**連接**。

備註：連接這些服務並下載內容將需要額外付費。請向網絡供應商諮詢收費詳情。

存取 Google 服務

您可以在此應用程式中啟動 Google 服務。點按「實用程式」標籤中的 Google。

設定

個人化情景模式

您可以透過觸控應用程式屏幕快速更改您的情景模式。

您可使用設定功能表個人化情景模式設定。

- 1 點按**情景模式**。
- 2 選擇想要編輯的情景模式。
- 3 然後，您便可更改列表中的所有可用聲音和提示選項，包括鈴聲和音量、訊息提示音設定等。

變更手機設定

隨意調整 LG-T300 的設定，以便適合您的個人偏好。

從功能表，選擇**設定**，然後選擇**手機設定**。

使用記憶體管理

從功能表中選擇**設定**，然後滑動至**手機設定**。選擇**記憶體資訊**。

變更連接設定

您的連接設定已由網絡商設定，以便您立即使用新手機。若要變更連接設定，請使用此功能表：點按**連接**。

使用藍芽發送和接收檔案

要發送檔案：


- 1 開啟要發送的檔案，通常為相片、影片或音樂檔案。

- 2 選擇發送方式。選擇藍芽。
- 3 如果已配對藍芽裝置，LG-T300 手機將不會自動搜尋其他藍芽裝置。如果尚未配對，LG-T300 手機將搜尋範圍內其他已啟用藍芽的裝置。
- 4 選擇要將檔案發送至的裝置。
- 5 您的檔案將會被送出。

要接收檔案：

- 1 若要接收檔案，藍芽必須開啟並可見。有關詳情，請參閱以下的變更藍芽設定。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按是以接收檔案。
- 3 您將查看到檔案的儲存位置。對於圖像檔，您可選擇檢視檔案或設為牆紙。檔案通常儲存在媒體集的對應資料夾中。

變更您的藍芽設定：

在應用程式屏幕中選擇藍芽。然後，選擇  並選擇設定。

同其他藍芽裝置配對

透過配對 LG-T300 和其他裝置，您可設定一個受密碼保護的連接。

- 1 檢查藍芽是否開啟和可見。您可在設定功能表中變更您的可見狀態。
- 2 點按搜尋。
- 3 您的 LG-T300 將搜尋裝置。完成搜尋後，更新將顯示在屏幕上。
- 4 選擇要配對的裝置並輸入密碼，然後按確定。
- 5 然後，手機將連接到其他裝置，並且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接已準備就緒。

配件

有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

充電器



電池



USB 線



注意：



- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高：+55°C（放電） +45°C（充電）

最低：-10°C

Declaration of Conformity		 LG Electronics
Supplier Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-T300	
Trade Name	LG	
		CE 0168
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1		
EN 301 511 V9.0.2		
EN 50360:2001, EN52209-1:2006		
EN 60950-1:2006		
EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Fomby House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom		
Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name Doo Heung Lee / Director	Issued Date 31. Aug. 2010
LG Electronics Logistics and Services B.V. Veluwezoom 16, 1327 AE Almere, The Netherlands		
	Signature of representative	

LG-T300 用户手册 - 简体中文

此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同,这并不会另行通知。



关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下 无线电波暴露和“特定吸收率” (SAR) 信息。

此款 LG-T300 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有用户（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。

- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 由 DAS4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.19 W/kg（10克），戴在身体上时，其值为 1.50 W/kg（10 克）。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为：每 1 克重的人体组织吸收的能量平均值不超过 1.6 W/kg，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

⚠ 警告：仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。

关于安全有效使用手机的准则

- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 如果车辆配备气囊，不要让安装的或便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。

- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

注意：耳机声音和压力过度可能导致听觉受损。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规定或规章。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

关于安全有效使用手机的准则

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 替换电池类型不当时可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。

- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

安装 SIM 卡和手机电池

安装 SIM 卡

当您预定了手机网络后，您将得到一个插入式 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。


重要！

插入式 SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。


说明

取出电池前，请始终关闭手机并断开与充电器的连接。


- 1 卸下电池盖。
- 2 取出电池。
- 3 插入 SIM 卡。
- 4 插入电池组。
- 5 盖上后盖。
- 6 充电。

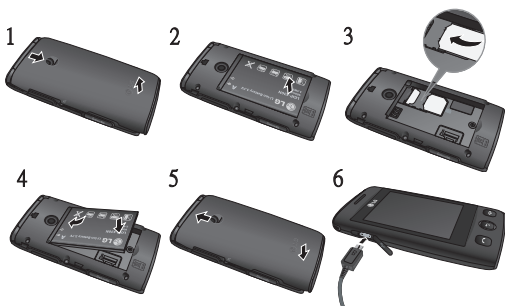

手机部件

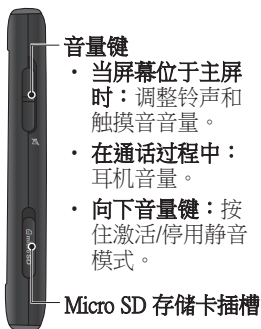

- 电源/锁定键
- 短按可打开/关闭屏幕。
 - 长按可开机/关机。



免提或立体声耳机连接器

使用触摸屏

触摸屏提示

- 要选择项目，请点触图标中心位置。
- 无需大力按。触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- LG-T300 未使用时将返回锁定屏幕。

控制触摸屏

LG-T300 触摸屏上的控件会动态更改，具体取决于您执行的任务。

打开应用程序

要打开任何应用程序，轻触其图标即可。



滚动

来回拖动即可滚动。在主屏上，如访问通话记录列表时，您还可以上下滚动。




主屏

在所有主屏类型中，您都可以直接拖动和单击所需内容。


激活



小工具主屏 - 当您点触屏幕左下方的  时，将出现手机小工具面板。当您通过拖动来注册小工具时，系统将在放下小工具的地点创建小工具。

激活



快速拨号主屏 - 当您点触  时，将出现快速拨号列表。您可以直接在此主屏中呼叫、发送信息或编辑联系人。

菜单屏幕

您可以在所有菜单屏幕来回拖动，以滚动到所需内容。要在不同的主屏之间切换，从左到右或从右到左快速摩擦屏幕即可。

- 1 通话屏幕 - 通过此菜单发送信息或拨打电话



- 2 多媒体屏幕 - 发送电子邮件或玩游戏。






- 3 应用程序屏幕 - 通过此菜单，使用应用程序或设置模式。



通话


拨打电话


- 1 点触  以打开键盘。
- 2 使用键盘键入号码。
- 3 点触  以开始通话。

提示！ 要输入 + 以拨打国际电话，请长按 。

按电源键锁定触摸屏，避免意外拨出电话。

从电话本拨打电话

- 1 从主屏点触  以打开电话本。
- 2 轻触屏幕顶部的“名称”字段框，然后使用键盘输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人旁边的通话图标。如果该联系人有多个号码，则拨打默认号码。


- 4 或者，您可以点触联系人姓名，如果该联系人有多个号码可用，请选择您要使用的号码。您也可以点触  以启动对默认号码的呼叫。

更改常用通话设置

- 1 在**设置**选项卡中点触**通话设置**。
- 2 滚动并点触**常用设置**。
 - **拒接来电** - 向左滑动开关以选择开。您可以点触拒绝列表选择所有通话、特定联系人或群组，或来自未注册号码的呼叫（即，不在您电话本中的联系人）。
 - **发送我的号码** - 选择是否要在拨出电话时显示您的号码。
 - **自动重拨** - 向左滑动开关为开，向右滑动开关为关。

• 接听模式

按发送键：按  键，您可以仅接听来电。

按任意键：按除  键以外的任意键，您可以接听来电。

• **分钟提示** - 向左滑动开关为“开”，在通话过程中每隔一分钟将听到提示音。

• **蓝牙接听模式** - 选择免提可使用蓝牙耳机接听来电，或选择手机按手机任意键接听来电。

• **保存新号码** - 选择“开”或“关”以保存新号码。

电话本

搜索联系人

1 点触**电话本**。

2 点触**搜索**。

3 您将看到一个联系人列表。在“名称”字段中键入联系人姓名的首字母会使菜单跳转到列表的该字母区域。

添加新联系人

1 点触**地址簿**，然后点触**添加**。

2 选择是将联系人保存到**内存**还是**SIM卡**。

3 输入姓氏和名称。

4 对同一个联系人，您最多可以输入 5 个不同的号码。

5 添加电子邮件地址。每个联系人最多可输入两个不同的电子邮件地址。

6 将联系人分配到一个或多个群组。

7 点触**保存**以保存联系人。

更改电话本设置

您可以调整您的电话本设置，使电话本符合您的需要。

点触“选项”键，然后点触设置。


- **显示姓名** - 选择是先显示联系人的名字还是姓氏。
- **复制** - 将电话本从 SIM 卡复制到手机，或从手机复制到 SIM 卡。您可以逐个复制或一次性全部复制。
- **移动** - 此操作与“复制”相同，但是联系人仅保存在新位置。因此，如果将联系人从 SIM 卡移动到内存，其将从 SIM 存储卡中删除。
- **通过蓝牙发送所有联系人** - 通过蓝牙将所有联系人发送到其它手机。

- **备份电话本/恢复电话本** - 将电话本数据保存或恢复到其它存储位置。
- **删除所有联系人** - 删除您的所有联系人。如果确定要清空电话本，请点触是。


信息

LG-T300 将短信和彩信结合到一个直观易使用的菜单中。


发送信息


- 1 点触菜单中的**信息**。然后，点触**写信息**开始写新信息。
- 2 点触**插入**添加图像、视频、声音、模板等。
- 3 点触屏幕底部的**收件人**以输入收件人。然后，输入号码或点触 选择一个联系人。您甚至可以添加多个联系人。


4 就绪后，请点触发送。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本

通过点触  并点触**输入法**，您可以选择输入方法。

点触  可以打开 T9 模式。只有当您选择**键盘**作为输入法时，才会显示此图标。

点触  以在数字、符号和文本输入间切换。
使用 **Shift** 键在大小写输入之间切换。


手写识别

在手写模式中，您只需在屏幕上书写内容，LG-T300 即可将您的手写内容转换为信息。

设置电子邮件

在多媒体屏幕中点触**电子邮件**。

如果尚未设置电子邮件帐户，请启动并完成电子邮件设置向导。

通过选择 ，您可以检查和编辑设置。您还可以检查当您创建帐户时自动填写的其它设置。

更改文本信息设置

点触**信息**，然后点触**设置**。选择**文本信息**。

文本信息中心 - 输入信息中心的信息。

状态报告 - 向左滑动开关，在对方收到您发送的信息时接收确认。

有效期 - 选择信息在信息中心中的最长保存时间。

信息类型 - 将文本转换为**文本、语音、传真、X.400**或**电子邮件**。

符号编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 选择是以**多条短信**还是一条**彩信**发送长信息。

更改多媒体信息设置

点触**信息**，然后点触**设置**和**多媒体信息**。

检索模式 - 选择**本地网络**或**漫游网络**。如果选择**手动**，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

发送报告 - 选择以请求和/或允许发送报告。

已读回执 - 选择以请求和/或允许已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

不受支持的附件 - 选择是否要限制不受支持的附件。

发送时间 - 选择信息发送前的等待时间。

多媒体信息中心 - 从列表中选择或添加新信息中心。

社交网络服务 (SNS)

LG-T300 带有 SNS，允许您体验并管理您的社交网络。

备注：SNS 功能是一款数据密集型应用程序。连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

Facebook (SNS 续)

主页：登录后您将看到朋友的状态更新。就新状态输入评论或查看他人状态。


配置文件：您可以选择“留言”>“状态更新”，然后写入当前状态。查看您的信息详情，然后点触“相册”>“上传照片”以上传照片。

朋友：选择“搜索”按钮以在 Facebook 中搜索您的朋友。

信息：您可以选择“收件箱/已发送”文件夹，并撰写 SN 信息。

相机

快速拍照

- 1 点触**相机**菜单
- 2 当相机对好焦后，点触屏幕中心右侧的  拍照。

提示：要切换为相机模式或视频模式，请向上/向下滑动取景器右上部中间的相机或视频图标。

拍照后

拍好的照片将显示在屏幕上。

可以使用以下选项。




点触 。

发送 - 点触可以信息、电子邮件或蓝牙方式发送照片


用作 - 点触以设置屏幕图像（主屏、墙纸、锁定屏保、联系人图像、来电图像、拨出电话图像、开机图像和关机图像）。

重命名 - 点触可以重命名照片。

编辑 - 点触可以编辑照片。

-  点触可以删除图像。
-  点触可以立即拍摄其它照片。
-  点触可以查看保存的图像库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。

选择选项后，点触**确定**按钮。

大小 - 更改照片大小以保存在储存空间中。

白平衡 - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**和**阴天**。

色彩效果 - 选择新照片的色彩效果。

连拍 - 将物体定位在取景器中，请像拍摄普通照片一样按下拍摄按钮。相机将快速连拍多张照片。

自拍器 - 自拍器允许您设置按下拍摄按钮后的延迟。从**关**、**3秒**、**5秒**或**10秒**中选择。如果要为自己拍摄照片，此功能是理想之选。

夜间模式 - 在黑暗环境下非常有用。

图像质量 - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

选择存储位置 - 选择是将照片保存到手机内存还是外部存储器。

隐藏图标 - 选择要手动或自动隐藏的相机设置图标。

显示已拍图像 - 选择“**开**”立即查看拍摄的照片。

快门声音 - 从三种快门声音中选择一种。

网格屏幕 - 从**关**、**简单十字**或**三等分**中选择。

重置 - 恢复所有相机默认设置。

摄像机

快速录制视频

要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

- 1 水平放置相机，将镜头对准要拍摄的物体。
- 2 按红点 。
- 3 取景器底部将出现 **● Rec**，底部计时器显示视频长度。
- 4 要暂停视频，请点触 ，要恢复录制，请选择 。
- 5 点触屏幕上的 。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频名称在屏幕底部显示，左右侧将显示图标。



 点触可以播放视频。


可以使用以下选项。


点触 。

发送 - 点触可以**信息**、**电子邮件**或**蓝牙**方式发送视频。

重命名 - 点触可以重命名视频。

 点触可以删除您刚拍摄的视频，点触  确认。此时将出现取景器。

 点触立即拍摄其它视频。将保存您的当前视频。

 点触可以查看保存的视频库和图片库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。选择选项后，点触**确定**按钮。

色彩效果 - 选择要对新视图使用的色彩效果。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

质量 - 在**超精细**、**精细**和**标准**之间选择。质量越精细，视频将越清晰，同时，文件更大。因此手机内存中保存的视频将更少。

长度 - 设置视频的长度限制。从**标准**和**彩信**中选择，以限制彩信最大大小。

选择存储位置 - 选择是将视频保存到手机内存还是外部存储器。

录音 - 选择静音以录制视频而不录制声音。

隐藏图标 - 选择是自动还是手动隐藏相机菜单上的图标。

重设置 - 重设所有摄像机设置。

音乐

要访问音乐播放器，请点触**音乐**。您可以在此访问多个文件夹：

最近播放 - 播放您最近播放的歌曲。

所有曲目 - 包含手机上除预先加载的默认音乐以外的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放列表 - 包含您创建的所有播放列表。

随机曲目 - 以随机顺序播放您的曲目。

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或数据线。

使用蓝牙传输音乐：

- 1 请确保双方设备都已打开蓝牙并且连接对方。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须**点触**是在您的手机上接受它。
- 4 文件应显示在**音乐 > 所有曲目**中。

管理文件

您可以将任意多媒体文件储存到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡，您可以释放手机内存的空间。

通过**点触媒体相册**，您可以打开保存所有多媒体文件的文件夹列表。

我的游戏和应用程序

您可以将新游戏和应用程序下载到手机中以供娱乐。


FM 收音机





LG-T300 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您必须首先将耳机插入手机以将其用作天线。

自动微调：

- 1 滚动并点触 **FM 收音机**，然后点触 。
- 2 点触 **自动扫描**。将出现一条确认信息。选择 **是**，随后将自动查找电台并分配给手机中的频道。

备注：您还可以通过使用屏幕中心显示的  和  手动微调电台。如果按住  和 ，将自动查找电台。

管理器

将事件添加到日历中

- 1 点触 **管理器**，然后选择 **日历**。
- 2 选择您要添加事件的日期。
- 3 点触 **添加**。

设置任务

- 1 点触 **任务**。
- 2 点触 **添加**，然后，您可以在此菜单中设置并保存任务。

使用日期计算器

日期计算器是一款便捷的工具，有助于您计算特定天数后的日期。

网络

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

访问网页

- 1 点触**浏览器**。
- 2 要进入浏览器主页，请选择**主页**。或者，选择**输入网址**后键入 URL，然后选择**连接**。

备注：连接这些服务以及下载内容会产生额外费用。查看网络提供商要求的数据付费。

访问 Google 服务

您可以在此应用程序中启动 Google 服务。点触实用工具选项卡中的 **Google**。

设置

个性化情景模式

您可以点触“应用程序”屏幕快速更改情景模式。

使用设置菜单，您可以个性化每种情景模式。

- 1 点触**情景模式**。
- 2 选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示音设置等。

更改手机设置

随意根据需要调整 LG-T300 设置。

从主屏选择**设置**，然后滚动到**设备设置**。

使用内存管理器

从主屏选择**设置**，然后滚动到**设备设置**。选择**内存信息**。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。要更改任意设置，请使用此菜单：
点触**连接**。

使用蓝牙发送和接收文件

发送文件：


- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送**。选择**蓝牙**。
- 3 如果已配对**蓝牙**设备，LG-T300 将不会自动搜索以配对其它**蓝牙**设备。否则，LG-T300 将搜索范围内其它启用了**蓝牙**的设备。

- 4 选择您要向其发送文件的设备。
- 5 您的文件将被发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触是以接收文件。
- 3 您可以查看文件的保存位置。对于图像文件，您可以选择查看文件或用作墙纸。文件通常保存在**媒体相册**中的相应文件夹。

更改蓝牙设置：

点触“应用程序”屏幕中的**蓝牙**。然后选择 ，再选择**设置**。

与其它蓝牙设备配对

将您的 LG-T300 与其它设备配对，您可以设置受通行码保护的连接。

- 1 查看蓝牙是否为**开且可见**。您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 LG-T300 将搜索设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

充电器



电池



USB 线



备注



- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度：+55°C（放电）/ +45°C（充电）

最低温度：-10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-T300	
Trade Name	LG	
	CE 0168	
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1		
EN 301 511 V9.0.2		
EN 60960:2001, EN62209-1:2008		
EN 60950-1:2006		
EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Foreyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom		
Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Doo Heung Lee / Director	31. Aug. 2010
		
LG Electronics Logistics and Services B.V. Veluwezoom 16, 1327 AE Almere, The Netherlands	Signature of representative	

LG-T300 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.19 W/kg (10g) and when worn on the body is 1.50 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the

Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.

Guidelines for safe and efficient use

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE! Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.

Guidelines for safe and efficient use

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.

- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting

or removing the card. Keep all SIM cards out of the reach of small children.



Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

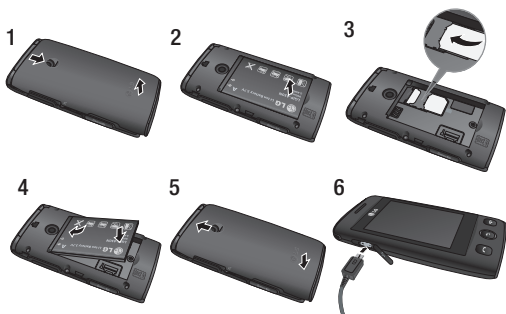

Phone Components

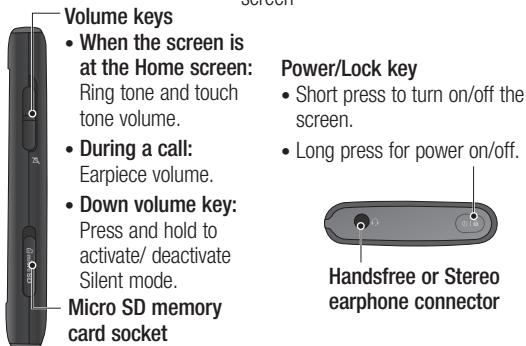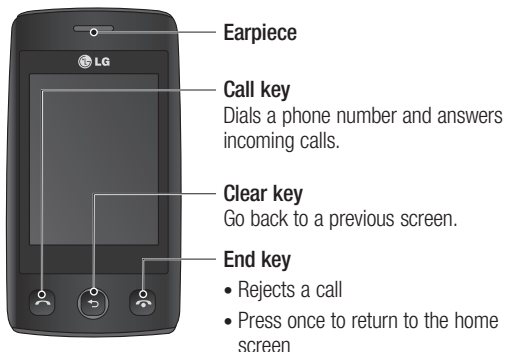

- Power/Lock key**
- Short press to turn on/off the screen.
 - Long press for power on/off.



Using your touch screen

Touch screen tips


- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T300 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the LG-T300 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

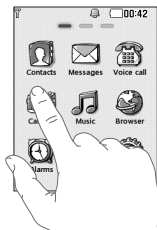

Scrolling


Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.




Your home screen

You can drag and click what you need right away in all home screen types.


Active

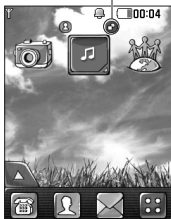

Widget home screen - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active




Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1 - You can open Contacts, Messages, Voice call, Camera, Music, Browser, Alarms, Calendar and Settings from this screen

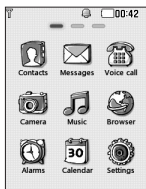

Screen 2 - You can open Logs, E-mail, SNS, My stuff, Messenger, Games and Apps, Gallery, Memo and Tasks






Screen 3 - You can open Google Search, FM Radio, Voice Recorder, Bluetooth, Tools and STK (if supported by network) modules from this screen



Calls


Making a Call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.



- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to call if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, press  key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
 - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers, All unknown numbers.
 - **Send my number** - Choose whether to display your number on an outgoing call.
 - **Auto-redial** - Slide the switch left for ON or right for OFF.
 - **Answer mode**
Press send key: Allows you to only answer an incoming call by pressing the  key.
Press any key: Allows you to answer an incoming call by pressing any key, except the  key.

- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email address. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.


- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.


- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

Messaging


Your LG-T300 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message


- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.

 **WARNING:** If an image, video or sound is added to SMS it will be automatically converted to MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T300 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in Screen 2.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings. Also, you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your message into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and touch **Settings**. Select **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-T300 has SNS that lets you enjoy and manage your social network.

NOTE: SNS feature is a data intensive application. Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.


Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Album > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write a SN message.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Send - Touch to send the photo as a message, email or Bluetooth.

Set as - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image).

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.



Touch to delete the image.




Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful in dark places.

Image quality - Choose between **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.


Grid screen - Choose between **Off**, **Simple cross**, or **Trisection**.


Reset settings - Restore all camera default settings.



Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .

3  **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

4 To pause the video, touch  and resume by selecting .

5 Touch  on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video is displayed at the bottom of the screen together with icons down the left and right sides.


 Touch to play the video.


The following options are available.


Touch .

Send - Touch to send the video as a **Message**, **Email** or **Bluetooth**.


Rename - Touch to rename the video.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options so you can change the video camera setting. After selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures that any white area in your video are realistic.

To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent, and Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**.

The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching My Stuff, you can open a list of the folders that store all your multimedia files.

Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

FM Radio

Your LG-T300 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Organiser

Adding an event to your calendar

- 1 Touch **Calendar** from Screen 1.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your tasks

- 1 Touch **Tasks** from Screen 2.
- 2 Touch **Add**, then you can set and save your task in this menu.

Using your calculator

- 1 Touch **Tools** and then **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Tools** and select **Unit converter**.

- 2 Choose whether you want to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 Then select the unit and enter the value you would like to convert from.

Adding a city to your world clock

- 1 Select **Tools** and touch **World clock**.
- 2 Touch **Add** to add city. Start typing the name of the city you require, and it will be displayed on the screen.
- 3 Touch the city to select it. This will add it to your **World time list**.

Using the stopwatch

- 1 Select **Stopwatch** in **Tools** menu.
- 2 Touch **Start** to begin timing.
- 3 Touch **Lap** if you want to record a lap time.

- 4 Touch **Stop** to end the timer.
- 5 Touch **Reset** to start the time again.

Using your date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Setting your alarm

- 1 Select **Alarm** from Screen 1.
- 2 Touch Add.
- 3 Set the time you would like the alarm to sound and touch Save.

TIP: Touch on/off icon on the right hand side of the alarm to set.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Search

You can launch google search from Screen 3.

Settings

Personalising your profiles

You can quickly change your profile by touching the Application screen.

You can personalise each profile setting.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

Changing your phone settings

Use the freedom of adapting the LG-T300 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:


- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T300 will not automatically search for other **Bluetooth** devices. If not, your LG-T300 will search for other **Bluetooth** enabled devices within range.

- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to view the file. Files will usually be saved to the appropriate folder in **My Stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the Application screen. And select  and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T300 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T300 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Battery



**Data
cable**



NOTE



- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-T300	
Trade Name	LG	
		CE 0168
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1		
EN 301 511 V9.0.2		
EN 50360:2001, EN62209-1:2008		
EN 60950-1:2008		
EN 300 328 V1.7.1		
Supplementary information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom		
Notified Body Identification Number : 0188		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relate complies with the above mentioned standards and Directives	Name	Issued Date
	Doo Haeng Lee / Director	31. Aug. 2010
		
LG Electronics Logistics and Services B.V. Veluwezoom 15, 1527 AE Almere, The Netherlands	Signature of representative	

