



繁體中文  
簡體中文  
ENGLISH

使用手冊

LG-P350



CE 0168 Ⓢ

P/N : MFL67159948 (1.0) **G**

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B017379

# LG-P350 使用手冊



- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。
- 由於使用觸控螢幕鍵盤，我們不建議視障人士使用此手機。
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均為其各自擁有者的財產。
- Google 搜尋、Maps、Google Mail、YouTube、Talk 和 Android Market 均為 Google, Inc. 的註冊商標。



恭喜您購買了 LG 先進輕巧的  
LG-P350 手機，它配合最新的數碼流  
動通訊科技而設計。

# 重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

## 1. 手機記憶體

當手機記憶體的可用空間少於 10%，您的手機便不能再接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

### 要管理應用程式

- 1 從主頁點按**應用程式**標籤，然後選擇**設定**> **應用程式**> **管理應用程式**。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按**解除安裝**然後點按**確定**，以解除安裝該應用程式。

## 2. 延長電池壽命

您可關閉無須持續在背景運行的功能，便能延長電池壽命。您亦可監控應用程式及系統資源的電池電量消耗。

### 要延長您的電池壽命

- 關閉並非使用中的無線電通訊。不使用 Wi-Fi、藍芽或 GPS 時，請關閉這些應用程式。
- 調低螢幕亮度，並設定較短的螢幕超時。
- 關閉 Google Mail、行事曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少您的電池壽命。

### 要檢查電池充電量

- 1 從主頁點按**應用程式**標籤，選擇**設定**> **關於手機**> **狀態**。
- 2 電池的狀態（未充電、放電中）及電量（相對於完全充電的百分比）會在螢幕頂部顯示。


# 重要通知

## 要監察及控制電池使用情況

- 1 從主頁點按**應用程式**標籤，選擇**設定 > 關於手機 > 電池使用狀況**。
- 2 螢幕頂部會顯示電池使用時間：距離上一次連接至電源的時間，或（如已連接電源）上次使用電池電力的總時間。螢幕內容會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

## 3. 安裝開放源碼的作業系統

如果在手機上安裝開源作業系統，而不再使用製造商提供的作業系統，可能會導致您的手機出現故障。

 **警告：**如果您安裝及使用並非由製造商提供的作業系統，您的手機將不能再享受保養。


 **警告：**要保護您的手機和個人資料，請只從受信任的來源下載應用程式，例如 Android Market™。如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正確地運作或出現嚴重錯誤。您需要從手機解除安裝這些應用程式以及其所有的數據及設定。

## 4. 使用解鎖圖形

設定解鎖圖形以保護您的手機。開啓一系列畫面，以指導您繪畫螢幕解鎖圖形。

在主頁點按**應用程式**標籤，然後選擇**設定 > 位置與安全性 > 設定螢幕鎖定 > 圖形**。

按畫面上的指示繪畫螢幕解鎖圖形。選擇下一頁繼續。

 **警告：** 使用圖形鎖定的注意事項。請記住您所設定的解鎖圖形，這是非常重要的。您有 5 次輸入解鎖圖形、PIN 或密碼的機會。如果您已使用了所有 5 次機會，您可以在 30 秒後再嘗試。

### 在無法重新開啓您的解鎖圖形、PIN 或密碼時：

如果已在手機上建立 Google 帳戶，請點按忘記圖形按鈕。然後，您需要使用您的 Google 帳戶登入以解鎖您的手機。如果您尚未在手機上建立 Google 帳戶或忘記帳戶，您需要進行硬性重新設定。

**注意：** 若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

## 5. 使用安全模式及硬性重新設定

### 使用安全模式

\* 令手機從故障狀態中恢復關閉並重啓您的手機。手機電源開啓後，在螢幕顯示 Android 標誌時按住發送鍵。您的手機會一直啓動並進入主頁，左下角會顯示「安全模式」。

\* 使用硬性重新設定（出廠設定）

- 1 取下並重新裝上電池。
- 2 按住 10 秒：**電源/鎖定鍵** + **發送鍵** + **向下音量鍵**。
- 3 開機後，放開這些鍵。

### **警告**

若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行**硬性重新設定**。

# 重要通知

## 6. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「無線基地台」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或嵌入了其他保安功能，因此在連接前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

### 要開啓 Wi-Fi 並連接至 Wi-Fi 網絡

- 1 從主頁點按**應用程式**標籤，並選擇**設定 > 無線及網絡 > Wi-Fi 設定**。
- 2 點按 **Wi-Fi 啓動**，手機便會開始掃描可使用的 Wi-Fi 網絡。
  - 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。

3 點按一個網絡以開始連接。

- 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。
- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）

4 狀態列上的圖示會顯示 Wi-Fi 狀態。

## 7. 使用 micro SD 卡

圖片、音樂及影片只能儲存到外置記憶體。

在使用內置相機前，您需要先將 micro SD 記憶卡插入手機。

如沒有插入記憶卡，您將不能儲存已拍攝的相片及影片。

### **警告：**

手機開啓時，請勿插入或移除記憶卡。否則，您的記憶卡及手機可能會損壞，而記憶卡內儲存的數據亦可能毀損。要安全地移除記憶卡，請選擇**應用程式標籤>設定>SD卡與手機儲存>移除SD卡**。

## 8. 開啓及切換應用程式

您可輕易在 Android 上進行多重任務，即使您開啓另一應用程式，已開啓的應用程式依然會繼續運行。您無須在開啓另一應用程式前退出應用程式。使用及切換數個開啓中的應用程式。Android 會管理每一個應用程式，根據需要停止及啓動程式，確保閒置的應用程式不會耗用不必要的資源。

## 要停止使用中的應用程式

- 1 從主頁點按**應用程式標籤**，然後選擇**設定>應用程式>管理應用程式>執行中**。
- 2 捲動至該應用程式，點按**強制停止**以停止使用。

### **提示** 返回最近使用的應用程式

- 按住主頁鍵，螢幕上將顯示您最近使用的應用程式清單

# 重要通知

## 9. 安裝 LG PC suite 至您的電腦

LG PC Suite IV 是一種幫助您使用 USB 數據通訊線將手機連接到電腦的程式，從而讓您在電腦上使用手機的功能。

您可於 LG 網站下載此程式。瀏覽至 <http://www.lg.com> 網站以獲取您的手機安裝程式和使用資訊。您可參考往下圖示和依據網站指示以下載適合您手機型號的軟件並完成安裝。

**\* 在完成 LG PC Suite IV 安裝後，需要停用僅限大容量儲存模式以執行 LG PC Suite IV。**

**LG PC Suite IV 的主要功能**

- 輕鬆快捷地建立、編輯和刪除手機資料。
- 在電腦和手機之間同步數據（通訊錄、行事曆、訊息（文字訊

息）、書籤、通話記錄）。

- 使用簡單的拖放動作，在電腦和手機之間傳輸多媒體檔案（相片、影片、音樂）。
- 從手機傳送訊息到電腦。
- 將手機用作數據機。
- 在不會損失您的數據的情況之下更新軟件。


**LG-P350 不支援：**

- 透過藍芽來連接電腦
- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- 行事曆中的待辦事項
- 備忘錄
- Java 應用程式


需要更多資訊，請參照 LG PC Suite IV 的用戶指南。這可在安裝 LG PC Suite IV 後從功能表的「說明」上找到。

## 下載 LG 手機支援軟件

1) 登入 www.lg.com , 到支援 → 手機支援

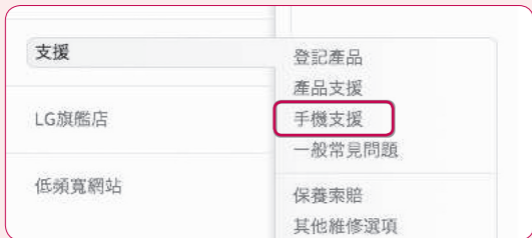

2) 下載及安裝LG 手機支援軟件

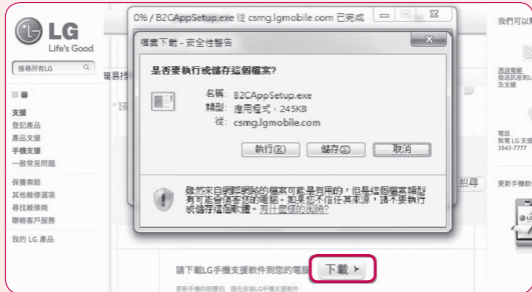

# 重要通知

## 10. 透過 USB 連接手機至電腦

- 1 使用手機隨附的 USB 線，將手機連接至電腦的 USB 連接埠。您會收到 USB 已連接的通知。
- 2 開啓通告欄，點按 USB 已連接。
- 3 點按「**開啓 USB 儲存裝置**」以確認您要在手機的 micro SD 卡及電腦之間傳送檔案。

當手機已連接為 USB 記憶體，您會收到通知。您手機上的 micro SD 卡會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 micro SD 卡。

## 11. 使用數據連接時解鎖螢幕

如在數據連接期間長時間不點按螢幕，您的螢幕會自行關掉。要重新開啓 LCD 螢幕，點按螢幕即可。

**備註：**解除安裝 PC Suite IV 後，不會自動移除 USB 及藍芽驅動程式。因此，必須手動解除安裝這些驅動程式。

**提示！** 要重新在手機上使用 micro SD 卡，您需要開啓通告欄並點按「**關閉 USB 儲存裝置**」。

期間您無法在手機上存取 micro SD 卡，因此您亦無法使用依賴 micro SD 卡的應用程式，例如相機、圖片集及音樂。

要令手機從電腦中斷連接，請小心地按照電腦的說明正確地中斷連接 USB 裝置，以免記憶卡上的資料流失。

- 1 安全地斷開電腦上的 USB 裝置連接。

- 2 開啓通告欄，點按**關閉 USB 儲存裝置**。
- 3 在開啓的對話方塊上點按**關閉**。

## 12. 垂直握住手機

請如普通手機一樣，垂直握住行動手機。

撥打/接聽電話或傳送/接收數據時，盡量避免握住天線所在的手機下部分。否則可能影響通話品質。

## 13. 在螢幕凍結時

如果手機不能回應用戶輸入或螢幕凍結：

請取下電池，再次插入電池並開啓手機。如果問題仍然存在，請聯絡服務中心。

## 14. 在開啓/關閉您的電腦時，請勿連接您的手機

確定手機與電腦已透過數據線中斷連接，因為您的電腦可能存有錯誤。

# 使用行動手機前請先細讀此資訊！

## 如何將音樂/影片檔案儲存至手機

使用 USB 線纜將手機連接到電腦。

點按並向下拖動主頁上的狀態列。選擇 **已連接的 USB > 開啓 USB 儲存體 > 開啓資料夾以檢視檔案**。

如果電腦上沒有安裝 LG Android 平台驅動程式，則需要手動進行設定。在主頁點按**應用程式**標籤，然後選**設定 > SD 卡與手機儲存 > 啓動僅限大容量儲存**。

將電腦中的音樂或影片檔案儲存至手機的可移除儲存體。

- 您可以使用讀卡器，將檔案從電腦複製或移動至手機的可移除儲存體。
- 如果影片檔案包含字幕檔案（與影片檔案同名的 .smi 或 .srt 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。

- 在下載音樂或影片檔案時，必須保護版權的安全。請注意，已損壞檔案或副檔名錯誤的檔案可能會損壞手機。

## 如何播放手機的音樂/影片檔案

### 播放音樂檔案

在主頁點按**應用程式**標籤 > **音樂**。從演唱者、專輯、歌曲和播放清單標籤指定您想播放的檔案。

### 播放影片檔案

在主頁點按**應用程式**標籤 > **影片播放器**，從清單中尋找您想看的影片，點選以播放該影片。

## 如何將通訊錄從舊手機移動至目前手機

使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊手機匯出至電腦。

- 1 在 [www.lg.com](http://www.lg.com) 下載 LG PC Suite IV，然後將其安裝在電腦上。執行該程式，並使用 USB 線纜將手機連接到電腦。
- 2 選擇通訊錄圖示。轉到功能表 > 檔案 > 匯入 > 匯入/匯出，然後選擇儲存於電腦中的 CSV 檔案。
- 3 如果匯入的 CSV 檔案中的欄位與 LG PC Suite IV 中的欄位不同，則需要對應欄位。對應欄位後，按一下「確定」。然後，電腦中便會新增通訊錄。

- 4 如果 LG PC Suite IV 偵測到 LG-P350 手機的連接（使用 USB 線纜），請按一下「同步」或「同步通訊錄」，將電腦中儲存的通訊錄同步至手機並儲存通訊錄。

## 如何透過藍芽發送手機中的數據

**透過藍芽發送數據：**與普通行動手機不同，您可以執行對應的應用程式，而並非從藍芽功能表，透過藍芽發送數據。

- \* **發送圖片：**執行圖片庫應用程式，然後選擇圖片 > 功能表。按一下分享，選擇藍芽 > 檢查藍芽是否開啓，並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。

## 使用行動手機前請先細讀此資訊！

\* **匯出通訊錄**：執行通訊錄應用程式。點按要匯出的地址。按一下**功能表**，選擇**分享 > 藍芽 > 檢查藍芽是否開啓**，並選擇**掃描裝置 > 從清單中選擇您要發送數據的裝置**。

\* **發送所選的多個聯絡人**：執行「通訊錄」應用程式。要選擇多個聯絡人，請按**功能表**鍵並點按**多重選擇**。選擇您要發送的聯絡人或按**功能表**鍵，然後點按全部選取。選擇**分享 > 藍芽 > 檢查藍芽是否開啓**，並選擇**掃描裝置 > 從清單中選擇您要發送數據的裝置**。

\* **連接至其他藍芽裝置（此裝置需支援檔案傳輸）**：選擇「**設定**」>「**無線及網絡**」>「**藍芽設定**」。然後，選擇「**可偵測性**」核取方塊，並搜尋其他藍芽裝置。尋找所需的服務並連接至其他藍芽裝置。

**提示**：版本為藍芽 2.1 EDR 並經 Bluetooth SIG 認證。此與其他 Bluetooth SIG 認證的設置相容。

- 如果您要從其他裝置中搜尋此手機，請轉到「**設定**」>「**無線及網絡**」>「**藍芽設定**」。然後，選擇「**可偵測性**」核取方塊。

核取方塊會在 120 秒後清除。

- 支援的設定檔為 HFP、HSP、OPP、PBAP（伺服器）、FTP（伺服器）、A2DP、AVRCP 和 DUN。

# 了解您的手機

要開啓手機，請按住電源鍵 3 秒鐘。

要關閉手機，請按住電源鍵 3 秒鐘並點按關機。

## 提示！在螢幕鎖定時

1. 將手指從左到右拖動便可解鎖螢幕。
2. 要關閉手機，請按住電源鍵 3 秒鐘並點按關機。



**警告：**若將較重物體置於手機上或坐在手機上，會損壞手機的 LCD 和觸控螢幕功能。

**提示！** 每當您點按應用程式以查看可使用的選項時，按「功能表」鍵。

**提示！** LG-P350 不支援視像通話。

**提示！** 如果 LG-P350 在使用時發生錯誤或無法開啓，取下電池，並重新裝上電池，然後在 5 秒後開機。

# 了解您的手機


立體聲耳機連接器



音量鍵

- 在主頁上：控制鈴聲音量。
- 通話中：控制耳機音量。
- 播放曲目時：持續控制音量。

充電器、micro USB 線連接器



話筒



相機鏡頭

電池蓋

智能卡插槽

電池


micro SD 記憶卡插槽



## 安裝智能卡及電池

開始使用您的新手機前，您需要先設定手機。要插入智能卡及電池：

- 1 要取下電池蓋，請用手按住手機。用另一隻手的拇指按壓電池蓋。用食指揭開電池蓋。

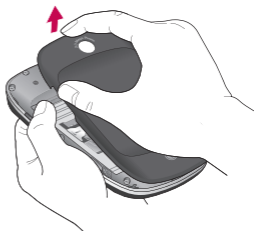

- 2 將智能卡滑入智能卡固定座中，確保智能卡的金屬接觸面朝下。



# 了解您的手機


- 3 對準手機及電池的金屬接觸面插入電池。



- 4 重新蓋上電池蓋。



## 為手機充電

向後滑動 LG-P350 側邊的充電器連接器蓋。插入充電器，並將其連接至電源插座。您必須繼續為 LG-P350 充電，直至您看見 。



**備註** ☒ 第一次充電時必須將電池完全充電，以提高電池壽命。

**備註** ☒ LG-P350 備有內置天線。請加倍小心，避免刮花或損壞此背面區域，否則會影響手機性能。


## 安裝記憶卡

要儲存多媒體檔案（例如使用內置相機拍攝的圖像），您必須安裝記憶卡至您的手機。

**備註：**LG-P350 支援高達 32GB 記憶卡。

要安裝記憶卡：

- 1 插入或移除記憶卡前，請先關閉手機。取下電池蓋。

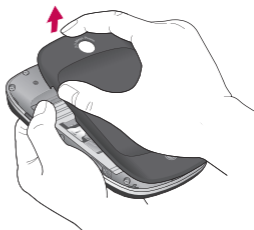

- 2 將記憶卡插入插槽中。並確保金屬接觸面朝下。



# 了解您的手機



## ⚠警告！

手機開啓時，請勿插入或移除記憶卡。否則，您的記憶卡及手機可能會損壞，而記憶卡內儲存的數據亦可能毀損。

## 格式化記憶卡

您的記憶卡可能已被格式化。如尚未格式化，您必須在使用前將其格式化。

**備註：**格式化記憶卡時，卡內所有檔案會被刪除。

- 1 在主頁點按**應用程式**標籤，以開啓應用程式功能表。
- 2 捲動並點按**設定**。
- 3 捲動並點按 **SD 卡與手機儲存**。
- 4 移除 SD 卡。
- 5 點按將SD 卡格式化，並確認您的選項。
- 6 如您設定了圖形鎖定，輸入圖形鎖定然後選擇**清除全部**。記憶卡將被格式化並且可使用。

**備註：**如您的記憶卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

## 提示！

如已移除記憶卡，您可循以下步驟進行格式化。

點按**應用程式 > 設定 > SD 卡與手機儲存 > 將SD 卡格式化**。

# 您的主頁

## 鎖定您的手機

當您不使用 LG-P350 時，請按住電源/鎖定鍵鎖定您的手機。這有助於防止意外按鍵，並可節省電池電力。

另外，如果您有一段時間不使用手機，主頁或其他您正在瀏覽的畫面會被鎖定螢幕取代，以節省電量。

**備註：**如果您在設定圖形時正在執行任何應用程式，則這些應用程式可能仍在鎖定模式中執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費。（例如，通話、存取網絡及數據通訊）

**提示！ 設定解鎖圖形：**您可以連接四個或以上的點以繪畫您專屬的解鎖圖形。


如果您設定圖形，手機螢幕便會鎖定。要解除鎖定手機，請在螢幕上繪畫您所設定的圖形。

**提示！**在設定解鎖圖形時，您必須先建立您的 Gmail 帳戶。




**警告：**嘗試繪畫解鎖圖形 5 次後，手機將會被鎖定 30 秒。

## 解鎖螢幕

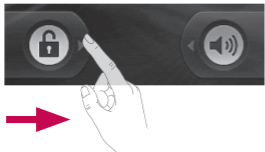不使用 LG-P350 手機時，系統會返回鎖定螢幕。將手指從左到右拖動便可解鎖螢幕。



## 靜音模式

從通告欄中點按  即可 ，或如果您並未使用解鎖圖形，則只需將  向左拖動。



要喚醒手機，按發送、或電源/鎖定鍵。鎖定螢幕會出現。要解鎖主頁，點按鎖定圖示並將手指向右拖動。您最後工作的畫面會開啓。

## 主頁



只需將手指左右滑動便可檢視。

您可使用捷徑小工具自訂每個控制板，它們是您喜愛的應用程式、資料夾及牆紙的捷徑。

**備註：**視乎您的手機供應商而定，某些螢幕圖像可能會有差異。

**提示！** 要新增應用程式圖示至主頁，點按並按住您要新增至主頁的應用程式。

**提示！**

- 點按並按住該圖示。應用程式圖示會變為垃圾桶圖示 。
- 拖動並將應用程式圖示拉至垃圾桶圖示 。


**提示！** 您無法刪除預載應用程式。（只能從螢幕上刪除其圖示。）

## 返回最近使用的應用程式

點按並按住主頁鍵。螢幕會彈出您最近使用過的應用程式的圖示。

## 通告欄

通告欄顯示於螢幕的頂部。

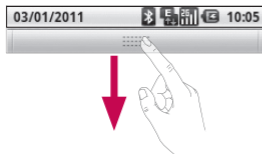



您可點按並向下滑動通告欄。或者，您可在主頁點按**功能表**鍵，並選擇**通知**。您可在此檢查及管理 Wi-Fi、藍芽和 GPS 狀態，以及查看其他通知。


## 螢幕鍵盤


您也可以使用螢幕鍵盤輸入文字。當您需要輸入文字時，螢幕鍵盤會自動顯示在螢幕上。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。


## 手機鍵盤 (Qwerty 鍵盤)


 **Shift 鍵** - 點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。

 **XT9 鍵** - 開啓或關閉 Turn XT9 模式。

 **設定鍵** - 點按檢視設定功能表。選擇編輯器設定，鍵盤配置，編寫語言，用戶字典和輸入法。

 **數字及符號鍵** - 點按以將輸入變更為數字和符號輸入。

 **輸入鍵** - 點按以在訊息欄新建一行。

 **語言鍵** - 點按以更改螢幕鍵盤語言。

 **刪除鍵**

**提示！** 要在 Qwerty 鍵盤與手機鍵盤之間切換，在手機鍵盤長按  並選擇鍵盤設置。

## Google 帳戶設定


當您第一次在手機上開啓 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。


### 重要資訊

- 某些應用程式（例如行事曆）只能與您新增的首個 Google 帳戶搭配使用。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。當您登入時，您在網上的通訊錄、Google Mail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。

## 通話功能

### 接聽來電和拒接來電


在螢幕鎖定時/ 在螢幕解鎖時  
手機響鈴後，將 **接聽** 圖示  向右拖動。


將 **拒接** 圖示  向左拖動以拒接來電。如果您要傳送道歉訊息，請從底部拖動道歉訊息列。

或當您的手機有來電響鈴時按接聽（發送鍵）按鍵。

## 訊息

LG-P350 將文字訊息和多媒體訊息結合在一個直觀易用的功能表中。

 **警告：**160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及語言而有所不同。

 **警告：**如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

## 開啓電子郵件及帳戶螢幕

您可以使用**電子郵件**應用程式讀取 Google Mail 以外服務中的電子郵件。電子郵件應用程式支援以下帳戶類型：POP3、IMAP 及 Exchange。

## 社交網絡

您可在手機上使用社交網絡，並管理您在網上社區內的微型網誌。您可更新目前狀態、上載相片，並檢視朋友們的即時狀態更新。

您可新增您的 Facebook 和 Twitter 帳戶至您的手機。如您沒有這些帳戶，您可到它們的網站設立一個帳戶。

**注意：**連接及使用網上服務可能需要額外付費。請向網路提供商諮詢資料費用。

# 相機

## 了解取景器

**亮度** - 決定及控制進入圖像的光線量。您可滑動亮度指標：向「-」滑動使圖像較亮，或向「+」滑動使圖像較暗。

**變焦** - 拉近或拉遠鏡頭。或者，您可使用側音量鍵。



**影片模式** - 將此圖示向下滑動，便能切換至影片模式。

**拍攝相片**

**圖片庫** - 此功能允許您在相機模式中存取已儲存的相片。只需點按，您的圖片庫即會顯示在屏幕上。

**設定** - 點按此圖示 開啓設定功能表。請參閱**使用進階設定**。

**色彩效果** - 為下一張相片選擇色調。

**備註：** 拍攝相片前，您必須先插入記憶卡。如沒有插入記憶卡，您將不能拍攝相片或儲存已拍攝的相片。

## 拍攝相片後

拍攝的相片將顯示於螢幕上。

**分享** 點按便能以藍芽、電子郵件、Facebook、Gmail、訊息、Picasa 或 Twitter 的方式共享相片。

備註：如在漫遊期間下載多媒體訊息，則可能需額外收費。

備註：分享選項會因地區、電話、服務供應商、計劃和 Android 手機軟件版本而異。

**設為** 點按可將圖像設為聯絡人圖示或者桌布。

**重新命名** 點按以編輯所選擇相片的名稱。


# Google 應用程式



## 地圖


檢查您現時的位置和交通，並取得前往目的地的駕駛方向。LG-P350 必須連接 Wi-Fi 或 3G/GPRS。

**備註：**Maps 並不覆蓋所有城市及國家。

按「功能表」以使用下列選項：


**搜尋**  - 輸入您要尋找的地點。

**路線**  - 此選項將讓您找出所輸入地點的路線。點按  以輸入數據。選擇通訊錄或地圖上的點或目前所在位置。

**圖層**  - 您可以在交通、衛星或地形檢視之間切換。點按 Latitude 後，您將看到 Google 帳戶中通訊錄的位置。

**我的位置**  - 在地圖上指出您現時所處的位置。

**加入Google定位**  - 與您選擇的朋友及 Google 分享您的位置。

**更多(More)**  - 清除地圖或尋找標有星號的項目以及更多。

**備註：**檢視某個位置的**街景圖**時，按**功能表**鍵，再點按**指南針模式**開啓指南針模式。

## Market™

Android Market™ 設有多種有用的應用程式和遊戲供您下載。

## Google Mail™

Google Mail 會在您首次設定手機時設置。視乎您的同步設定，手機的 Google Mail™ 會與您在網上的 Google Mail™ 帳戶自動同步。

## Talk

Talk 是 Google 的即時通訊程式。讓您與其他使用 Talk 的用戶通訊。

## ThinkFree Office

ThinkFree Office 可讓您讀取文件，並提供 Microsoft Word、Excel 和 PowerPoint 的有限編輯功能。但您並不能編輯 PDF 檔案。

- 1 點按並按住任何檔案，就會出現上載、重新命名、移動、複製、刪除、傳送及內容。可用的選項視檔案類型而定。



## 網絡功能


### 瀏覽器


**備註：**連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。


### 使用選項

按**功能表**鍵檢視選項。

-  **新視窗** - 開啓新視窗。
-  **書籤** - 新增/顯示書籤，顯示訪問最多的網站和記錄。


 **視窗** - 顯示所有您已開啓的視窗。


 **重新整理** - 點按以重新整理網頁。

 **下一頁** - 轉至在目前頁面之後連接的頁面。這是與返回鍵不同的概念，返回鍵會返回至上一頁。


## Wi-Fi

### 開啓 Wi-Fi

從主頁開啓通告欄，並點按 。

從功能表中選擇設定 > 無線網路控制 > Wi-Fi 。

### 連接至 Wi-Fi

選擇要連接的 Wi-Fi 網絡。如果看到 ，則需要輸入密碼才能連接。

### 提示！

如果處於 Wi-Fi 範圍以外並選擇 3G 連接，則可能需額外收費。

## USB 數據連線

您的電腦可分享手機的互聯網連接。

您可以使用 USB 線連接手機至您的電腦。

**設定 > 無線及網絡 > 網絡共享及可攜式 Wi-Fi 熱點 > USB 網絡連線**

如想獲取更多有關 USB 數據連線的資訊，請點擊說明。

### 提示！

要使用 USB 數據連線，您必須先在電腦上安裝 PC Suite。

## Wi-Fi 數據連線

以您的 LG-P350 作為可攜式 Wi-Fi 無線基地台。

**設定 > 無線及網絡 > 網絡共享及可攜式 Wi-Fi 熱點 > 可攜式 Wi-Fi 無線熱點。**

### 提示！

如果即使在連接至 Wi-Fi 時，手機仍進入休眠模式，將會自動停用 Wi-Fi 連接。

在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並可能需額外收費。）

**備註：**LG-P350 支援 WEP、WPA/WPA2-PSK 及 802.1x EAP 安全。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

## 手機軟件更新

### 從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 <http://www.lg.com>。

有了這項功能，您無需親臨服務中心，就可透過互聯網將手機韌體更新為最新版本，十分方便。

手機韌體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的手機造成嚴重損害。

## 通知

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽 <http://opensource.lge.com/>。所有授權的條款、免責聲明及通知均可連同原始碼一同下載。

# 配件

該等配件適合配合 LG-P350 使用。

(下述配件並非必要。)

## 充電器



## 數據線

連接您的  
LG-P350 至  
電腦。



## 電池



## 使用手冊

了解有關  
LG-P350  
的更多資  
訊。



## 立體聲 耳機



## 備註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

# LG-P350 用户手册



- 本手册中的部分内容可能不适用于您的手机，具体视您手机的软件或服务提供商而定。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2011 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google search、Maps、Google Mail、YouTube、Talk 和 Android Market 是 Google, Inc. 的商标。



恭喜您购买此款功能先进、外观小巧的 LG-P350 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

# 重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

## 1. 手机内存

当手机内存的可用空间小于10%时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

### 管理应用程序

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **应用程序** > **管理应用程序**。
- 2 当所有应用程序显示时，请滚动并选择要卸载的应用程序。
- 3 轻触**卸载**，然后点触“确定”以卸载所需应用程序。

## 2. 优化电池使用寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您也可以监控应用程序和系统资源如何节省电池电量。

### 延长电池使用寿命

- 关闭未使用的无线电通讯。如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Google Mail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

### 检查电池电量水平

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **状态**。
- 2 电池状态（充电、放电）和电量（完全充电的百分比）显示在屏幕顶部。


# 重要注意事项

## 监视并控制使用电池的项目

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **电量使用情况**。
- 2 屏幕顶部显示电池使用时间。自上次连接到电源的时间，或者连接到电源后在电池电源上运行的时间。屏幕上列出了使用电池电源的应用程序或服务，从最大量到最小量。

## 3. 安装开放源操作系统

如果在手机上安装开放源操作系统，而不使用制造商提供的操作系统，则可能导致手机无法正常工作。

 **警告：** 如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。

 **警告：** 要保护手机和个人数据，请仅从信任源（如 Android Market™）下载应用程序。如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。您需要从手机中卸载那些应用程序及其所有数据和设置。

## 4. 使用解锁图样

设置保护手机的解锁图样。打开一组屏幕，它们可指导您绘制屏幕解锁图样。

在主屏上点触并选择**设置** > **位置和安全** > **设置屏幕锁定** > **图案**。

按照屏上指南指示，绘制屏幕解锁图案。选择“继续”转到下一个屏幕。

**警告：**使用图案锁定时应采取预防措施。请务必记住您设置的解锁图案。您有 5 次机会输入解锁图案。您有 5 次机会输入解锁图样、PIN 或密码。如果使用了所有 5 次机会，则可以在 30 秒后尝试输入。

## 在无法记起解锁图案、PIN 或密码时：

如果您在手机上创建了 Google 帐户，请轻触“忘记了图案”按钮。随后，您要使用您的 Google 帐户登录以将手机解锁。如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

**注意：**如果执行硬重置，所有用户应用程序和用户数据将被删除。在执行硬重置之前，请记得备份任何重要数据。

## 5. 使用安全模式和硬重置

### 使用安全模式

#### \* 从任意故障状态恢复手机

关闭手机并重新启动。手机重新开始时，请在 Android 徽标显示时按住“发送”键。您的手机将完全启动到主屏幕，并在左下角显示“安全模式”。

#### \* 使用硬重置（恢复出厂设置）

- 1 取出并重新插入电池。
- 2 按住以下键超过 10 秒钟：**电源/锁定键 + 发送键 + 音量调低键。**
- 3 开机后，松开这些键。

#### **警告**

如果执行硬重置，所有用户应用程序和用户数据将被删除。在执行**硬重置**之前，请记得备份任何重要数据。

# 重要注意事项

## 6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或实施其他安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

### 打开 Wi-Fi 并连接 Wi-Fi 网络

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **无线和网络** > **Wi-Fi 设置**。
- 2 点触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。
  - 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网路。
- 3 点触某个网络进行连接。
  - 如果网络已打开，您会收到提示，要求您点触**连接**确认连接到该网络。

- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息。）

- 4 状态栏显示了可指明 Wi-Fi 状态的图标。

## 7. 使用 microSD 卡

图片以及音乐和视频文件只能保存到外部存储器。

使用内置相机之前，您需要先将 micro SD 存储卡插入手机中。

不插入存储卡，您将无法保存所拍摄的照片和视频。

### 警告：

请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。要安全地取出存储卡，请选择**主屏** > **应用程序设置** > **存储卡和手机内存** > **取消联结SD卡**。

## 8. 打开和切换应用程序

Android 可轻松地运行多任务，因为即使您打开另一应用程序，当前打开的应用程序也会保持运行状态。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

### 停止使用的应用程序

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序 > 正在运行**。
- 2 滚动到所需应用程序，然后点触**强制停止**以停止使用该应用程序。

**提示：** 返回最近的应用程序  
- 按住“主屏”键，随后将显示屏幕，列出您最近使用的应用程序

# 重要注意事项

## 9. 安装 LG PC suite 至您的电脑

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到 PC，以便在 PC 上使用手机的功能的程序。

您可以从 LG 网站 (<http://www.lg.com>) 下载您的手机安装程式和使用资讯。您可参考往下图示和依据网站指示以下载适合您手机型号的软件并完成安装。

**\* LG PC Suite IV 安装完成后，停用仅大容量存储模式以运行 LG PC Suite IV。**

### LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据。
- 在 PC 和手机之间同步数据（联系人、日历、信息（短信）、书签、通话记录）。

- 使用简单的拖放操作在 PC 和手机之间方便地传输多媒体文件（照片、视频和音乐）。
- 将信息从手机传输到 PC。
- 将手机用作调制解调器。
- 软件更新而不丢失任何数据。


### LG-P350 不支持：

- 通过蓝牙连接 PC
- LG Air Sync (Web Sync、右键单击)
- OSP (On Screen Phone)
- 日历中的待办事项
- 备忘录
- Java 应用程序


安装 PC Suite IV 后，“帮助”菜单中将提供 PC Suite IV 用户指南。

## 下載 LG 手机支援软件

1) 登入www.lg.com，到支援，手机支援

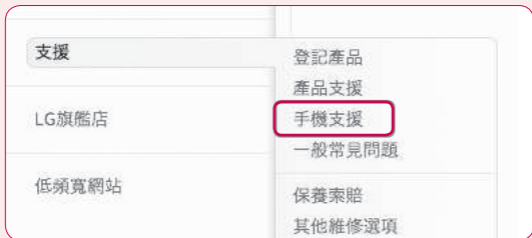

2) 下載及安裝LG 手机支持软件

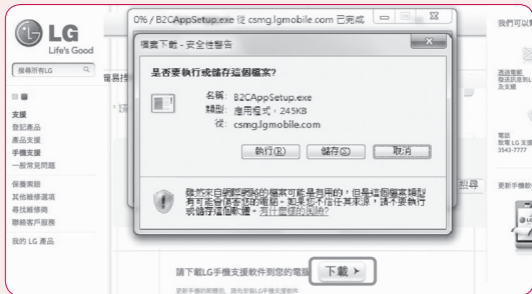

## 重要注意事项

### 10. 通过 USB 将手机连接到电脑

- 1 使用手机附带的 USB 数据线将手机连接到 PC 上的 USB 端口。您将收到一则通知，告知您 USB 已连接。
- 2 打开通知抽屉，并点触“USB 已连接”。
- 3 点触“**打开 USB 存储设备**”以确认在手机的 microSD 卡和 PC 之间传输文件。

当手机作为 USB 存储器进行连接时，您会收到一则通知。您手机的 microSD 卡已安装为 PC 的驱动器。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

### 11. 使用数据连接时的解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，点触即可。

**备注：**卸载 PC Suite IV 时，不会自动删除 USB 和蓝牙驱动程序。因此，它们必须手动卸载。

**提示！** 要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触“**关闭 USB 存储设备**”。

在此期间，无法从手机访问 microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、图片库和音乐）。

要切断手机与 PC 的连接，请仔细按照电脑的说正确地切断 USB 设备的连接，从而避免丢失卡上的信息。

- 1 安全地断开 PC 上的 USB 设备。
- 2 打开通知抽屉，并点触**关闭 USB 存储设备**。
- 3 在打开的对话框中点触**关闭**。

## 12. 向上持握手机

请将手机像普通电话一样向上持握。

拨打/接听电话或发送/接收数据时，尽量避免持握天线所处的手机下部。这可能影响通话质量。

## 13. 屏幕冻结时

如果手机对用户输入无响应或者屏幕冻结：

卸下电池，将它再次插入并将手机开机。如果这仍不起作用，请联系服务中心。

## 14. 不要在 PC 开机/关机时连接手机

确保经数据电缆断开手机和 PC 的连接，因为它可能在 PC 上有错误。

# 在使用手机前，请先阅读此内容！

## 如何将音乐/视频文件保存到手机

使用 USB 数据线将手机连接到 PC。

点触并向下拖动主屏上的状态栏。选择 **USB 已连接** > **打开 USB 存储设备** > **打开文件夹以查看文件**。

如果未在 PC 上安装 LG Android 平台驱动程序，则需要手动设置它。在主屏上点触**应用程序**选项卡，选择**设置** > **存储卡和手机内存** > **启动仅大容量存储**。

将音乐或视频文件从 PC 保存到手机的可移动存储设备。

- 您可以使用读卡器将文件从 PC 复制或移动到手机的可移动存储设备。

- 如果有视频文件和子标题文件（与视频文件带有相同名称的 .smi 或 .srt 文件），请将它们放在同一文件夹中以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。请注意损坏的文件或带有错误扩展名的文件可能损坏手机。

## 如何将音乐/视频文件播放到手机

### 播放音乐文件

从主屏点触**应用程序**选项卡 > **音乐**。通过“艺术家”、“专辑”、“歌曲”、“播放列表”选项卡找到您要播放的文件。

### 播放视频文件

从主屏点触**应用程序**选项卡 > **视频播放器**，找到列表中的所需文件，选择以播放。

## 如何将联系人从旧手机移到当前手机

使用 PC 同步程序将联系人作为 CSV 文件从旧手机导出到 PC。

- 1 从 [www.lg.com](http://www.lg.com) 下载 LG PC Suite IV，将其安装在 PC 上。运行程序，并使用 USB 数据线将您的手机连接到 PC。
- 2 选择**联系人**图标。转到**菜单 > 文件 > 导入**，然后选择在 PC 中保存的 CSV 文件。
- 3 如果导入的 CSV 文件中的字段与 LG PC Suite IV 中的不同，则您需要映射字段。在映射字段后，单击“确定”。随后，联系人将被添加到 PC 中。

- 4 如果 LG PC Suite IV 检测到 LG-P350 手机的连接（使用 USB 数据线），请单击“同步”或“同步联系人”以将 PC 中保存的联系人与手机同步并保存它们。

## 如何通过蓝牙从手机发送数据

**通过蓝牙发送数据：**与普通手机不同，您可以通过不从蓝牙菜单运行对应的应用程序，通过蓝牙发送数据。

- \* **发送图片：**运行“图片库”应用程序，然后选择**图片 > 菜单**。单击**分享**并选择**蓝牙 > 检查蓝牙是否打开**，并选择**扫描查找设备 > 从列表中选择您要发送数据的设备**。

## 在使用手机前，请先阅读此内容！

\* **导出联系人：**运行“联系人”应用程序。点触您要导出到的地址。按**菜单**并选择**分享 > 蓝牙 > 检查蓝牙是否打开**，并选择**扫描查找设备 >**从列表中选择您要发送数据的设备。

\* **发送多个选定联系人：**运行“联系人”应用程序。要选择不止一个联系人，请按**菜单**键，然后点触**多项选择**。选择您要发发送的联系人，或按**菜单**键，点触**全选**。选择**分享 > 蓝牙 > 检查蓝牙是否打开**，并选择**扫描查找设备 >**从列表中选择您要发送数据的设备。

\* **连接到 FTP（仅在此手机上支持 FTP 服务器）：**选择“**设置**”>“**无线和网络**”>“**蓝牙设置**”。随后，选中“**可检测性**”复选框并搜索其它设备。查找所需服务，并连接到 FTP 服务器。

**提示：**版本是 Bluetooth 2.1 EDR 并且已通过 Bluetooth SIG 认证。它与其他 Bluetooth SIG 认证设备兼容。

- 如果要从其它设备搜索此手机，请转到“**设置**”>“**无线和网络**”>“**蓝牙设置**”。

随后，选中“**可检测性**”复选框。

该复选框在 120 秒后被取消选中。

- 支持的情景模式是 HFP、HSP、OPP、PBAP（服务器）、FTP（服务器）、A2DP、AVRCP 及 DUN。

# 开始了解您的手机

要将手机开机，请按住电源键 3 秒。

要将手机关闭，请按住电源键 3 秒，然后点触关机。

## 提示！ 屏幕锁定时

1. 从左到右移动手指以解除屏幕锁定
2. 要将手机关闭，请按住电源键 3 秒，然后点触关机。



**警告：** 在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。

**提示！** 无论何时轻触应用程序以检查可用的选项时，请按“菜单”键。

**提示！** LG-P350 不支持视频通话。

**提示！** 如果 LG-P350 在使用时有错误或者您无法将它开机，请卸下电源，再次安装电池，并在 5 秒后将手机开机。


立体声耳机连接器



音量键

- 在主屏上：控制铃声音量。
- 在通话过程中：控制听筒音量。
- 播放曲目时：连续控制音量。

充电器，微 USB 数据线接口



麦克风



相机镜头

后盖

SIM 卡插槽

电池


microSD 存储卡插槽



## 安装 SIM 卡和电池

在开始浏览新手机之前，您需要先进行设置。插入 SIM 卡和电池：

- 1 要卸下后盖，请用手抓紧手机。用另一只手的拇指用力按后盖。然后用食指将电池盖滑出。

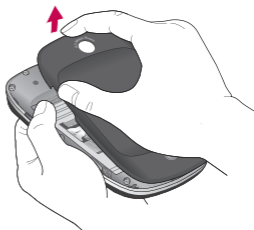

- 2 将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。




- 3 对齐手机和电池上的金色接触区域以插入电池。



- 4 盖上手机的后盖。



## 充电

滑开 LG-P350 侧面的充电器连接器盖。插入充电器并插入电流插座。必须为 LG-P350 充电，直至看到 。



**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

**备注：**LG-P350 有内置天线。请注意不要刮伤或损坏此背面区域，否则会导致性能损失。


## 安装存储卡

要使用内置相机存储多媒体文件（如拍摄的照片），您必须在手机中插入存储卡。

**备注：**LG-P350 最大支持 32GB 存储卡。

插入存储卡：

- 1 关闭手机，然后插入或取出存储卡。卸下后盖。

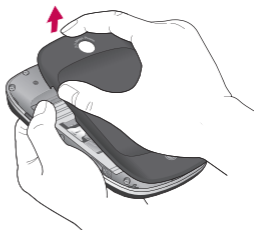

- 2 将储存卡插入插槽。确保金色接触区域面朝下。





### **警告!**

请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。

## **格式化存储卡**

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

**备注：**格式化卡时，卡上的所有文件将被删除。

- 1 在主屏上，点触**应用程序选项卡**以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 滚动并点触**存储卡和手机内存**。
- 4 取消联结 SD 卡。
- 5 点触**格式化 SD 卡**，然后确认选择。
- 6 如果设置了图样锁定，请输入图样锁定，然后选择**清除所有内容**。存储卡完成格式化，现在，您可以使用了。

**备注：**如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

### **提示!**

如果已取消联结存储卡，您可以使用下列步骤格式化。

点触**应用程序 > 设置 > 存储卡和手机内存 > 格式化 SD 卡**。

# 主屏

## 锁定手机

不使用 LG-P350 时，按电源/锁定键可锁定手机。这有助于防止意外按键和节省电池电量。

此外，如果一段时间不使用手机，主屏幕或者您正在查看的其他屏幕将替换为锁定屏幕以节省电池电量。

**备注：**如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用。（例如，打电话、web 访问和数据通信）

**提示！ 设置解锁图案：**  
您可以通过连接四个或更多个点来绘制自己的解锁图案。


如果设置了图案，则手机的屏幕被锁定。要将手机解锁，请在屏幕上绘制您设置的图案。

**提示！ 设置解锁图案时，**需要先创建 Gmail 帐户。




**警告：**在绘制解锁图案时，若 5 次尝试错误，手机将锁定 30 秒。

## 解锁屏幕

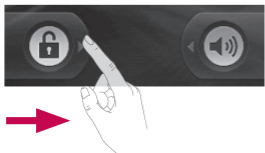LG-P350 未使用时将返回锁定屏幕。 从左到右移动手指以解除屏幕锁定。



## 静音模式

从通知抽屉中，点触  使其变为 ，或者，如果未使用解锁图样，只需将  拖至左侧即可。



要唤醒手机，请按**发送**、或**电源/锁定**键。 锁定屏幕将会显示。 点触锁定图标，向右移动手指可解锁主屏。 您最后使用的屏幕将会打开。

## Home（主菜单）



向左或向右轻轻滑动手指以进行查看。

您也可以使用小工具自定义每个面板，即您喜爱的应用程序、文件夹和墙纸的快捷方式。

**备注：**一些屏幕图像可能因手机提供商而不同。

**提示！** 要将应用程序图标添加到主屏，请点触并按住要添加到主屏的应用程序。

**提示！**

- 点触并按住该图标。 **应用程序**图标将更改为**垃圾箱**图标 。
- 将某个应用程序图标拖曳到**垃圾箱**图标 。

**提示！** 您无法删除预加载的应用程序。（只可以从屏幕上删除其图标。）

## 返回到最近使用的应用程序

点触并按住主屏键。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。

## 通知抽屉

通知抽屉在屏幕顶部运行。





请使用手指点触并滑动通知抽屉。或者，在主屏上点触**菜单键**，然后选择**通知**。您可以在此处检查和管理 Wi-Fi、蓝牙、GPS 状态及其他通知。


## 屏上键盘

您也可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点触要输入文本的文本字段。

手机键盘（Qwerty 键盘）

 **Shift 键** - 点触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

 **XT9 键** - 开启或关闭 XT9 模式。

 **设置键** - 轻触以查看设置菜单。从“编辑器设置”、“键盘布局”、“输入语言”、“用户词典”或“输入方法”中进行选择。

123


@#\*

**数字和符号键** - 点触以将输入更改为数字和符号输入。

**Enter 键** - 轻触以在信息字段新建一行。

**语言键** - 点触以更改屏上键盘语言。

**删除键**

**提示!** 要在 Qwerty 键盘与手机键盘之间切换，请点触手机键盘上的 , 并选择键盘布局。

## Google 帐户设置

当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。


## 重要


- 某些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的联系人、Google Gmail 消息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的手机同步。

## 通话

### 接听和拒绝电话

#### 屏幕锁定时/屏幕解锁时


当手机响铃时，将**接听**图标  拖到右侧。


将**拒绝**图标  拖到左侧以拒接来电。如果要发送借口信息，请从底部拖动借口信息栏。

或则，在您的手机响铃时，按接听按钮。按“拒绝”（电源/锁定键）按钮拒绝来电。点触底部的“借口信息”栏。

## 信息

LG-P350 将短信和彩信结合到一个直观易使用的菜单中。

 **警告：** 160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和语言。

 **警告：** 如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

## 打开电子邮件和帐户屏幕

您可以使用**电子邮件**应用程序读取 Google Gmail 外其他服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。

## 社交网络

通过手机，您可以利用社交网络并管理联机社区中的微型博客。您可以更新您的当前状态，上载照片，并查看朋友的实时状态更新。

您可以将您的 Facebook 和 Twitter 帐户添加到手机。如果没有帐户，您可以访问其站点进行设置。


**备注：** 连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

# 相机

## 了解取景器

**亮度** - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”对应亮度更低的图像，“+”对应亮度更高的图像。

**缩放** - 放大或缩小。或者，您可以使用侧音量键。

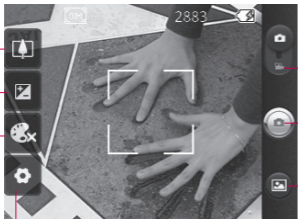

**视频模式** - 向下滑动此图标以切换到视频模式。

**拍照**

**图片库** - 这使您可以在相机模式下访问保存的照片。仅需点触，您的图片库就会出现在屏幕上。

**设置** - 点触此图标可以打开设置菜单。

**色彩效果** - 选择新照片的色彩效果。

**备注：**您需要先插入存储卡，然后才能拍照。不插入存储卡，您将无法拍照，也无法保存所拍摄的照片。

## 拍照后

拍好的照片将显示在屏幕上。

### 转送

点触可以通过蓝牙、电子邮件、Facebook、Gmail、信息、**Picasa** 或 **Twitter** 共享照片。

**备注：**漫游时如果下载了彩信，可能会额外收费。

**备注：**“共享”选项可能因地区、手机、运营商、计划和 Android 手机软件版本的不同而不同。

### 设为

点触以将图像用作**联系人图标或壁纸**。

### 重命名

点触以修改选定图片的名称。

# Google 应用程序



## 地图


检查您当前的位置和交通并接收目的地的方向指引。LG-P350 必须连接到 Wi-Fi 或 3G/GPRS。

**备注：**Maps 并不覆盖所有城市和国家/地区。

**按“菜单”键查看选项：**


**搜索**  - 输入您要寻找的位置。

**路线**  - 这将让您查找您输入位置的路线。点触  以输入数据。从联系人或地图上的点中进行选择。

**图层**  - 您可以将视图从“实时路况”切换到“卫星视图”或“地形”。轻触“纬度”，然后您将从 Google 帐户看到您的联系人的位置。

**我的位置**  - 在地图上指出您的当前位置。

**加入纬度**  - 与您选择的朋友和 Google 共享您的位置。

**更多**  - 清除地图或查找已加星标的项目和更多内容。

## Market™

Android Market™ 允许您下载有用的应用程序和游戏。

## Google Mail™

在首次设置手机时对 Google Mail™ 进行配置。根据您的同步设置，手机上的 Google Mail™ 自动与网上的 Google Mail™ 帐户同步。

## Talk

Talk 是 Google 的即时消息程序。通过 Talk，您可以与同时也在使用它的其他人交谈。

## ThinkFree Office

ThinkFree Office 允许您阅读文档，并且提供用于 Microsoft Word、Excel 和 PowerPoint 的有限编辑功能。但是，您无法编辑 PDF 文件。

- 1 点触并按住某个文件，随后“查看”、“上传”、“重命名”、“移动”、“复制”、“删除”、“发送”和“属性”选项可用。这取决于文件类型。



## 网络

### 浏览器

**备注：**连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。



## 使用选项

按**菜单**键可查看选项。


-  **新窗口** - 打开新窗口。
-  **书签** - 添加/显示书签，显示“访问最多站点”和“历史记录”。
-  **窗口** - 显示所有打开的窗口。
-  **刷新** - 点触以刷新网页。
-  **前进** - 转到当前页的下一页。这与回到前一页的返回键不同。

## Wi-Fi

### 打开 Wi-Fi

从“主屏幕”中打开“通知抽屉”，并点触 。或从“菜单”中选择“设置” > “无线和网络” > Wi-Fi 。

## 连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才可连接。

提示！

如果不在 Wi-Fi 区并且选择 3G 连接，则可能产生另外的费用。

## USB 绑定

您可以将手机的 Internet 连接共享给电脑。

您可以通过 USB 数据线将手机绑定到电脑。

**设置 > 无线和网络 > 绑定与便携式热点 > USB 绑定。**

有关 USB 绑定的详细信息，请单击“帮助”。

提示！

要使用“USB 绑定”，您需要首先在 PC 上安装 PC Suite。

## Wi-Fi 绑定

将 LG-P350 用作便携式 Wi-Fi 热点。

**设置 > 无线和网络 > 绑定与便携式热点 > 便携式 Wi-Fi 热点。**

提示！

如果手机进入睡眠模式，则即使它连接到 Wi-Fi，Wi-Fi 连接也将自动被禁用。

这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生另外的费用。

**备注：**LG-P350 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

## 手机软件更新

### 从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://www.lg.com/>。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

### 注意

要获取 GPL、LGPL、MPL 及其他打开的源证书下的相应源代码，请访问 <http://opensource.lge.com/>。可使用源代码下载所有相关许可条款、声明和通知。

# 配件

以下配件可与 LG-P350 一起使用。

(以下配件为可选配件。)

## 充电器



## 数据线

连接 LG-P350 和 PC。



## 电池



## 用户手册

了解更多关于 LG-P350 的信息。



## 立体声耳机



## 备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

# LG-P350 User Guide



- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google search, Maps, Gmail, YouTube, Talk and Android Market are trademarks of Google, Inc.



Congratulations on your purchase of the advanced and compact LG-P350 phone by LG, designed to operate with the latest digital mobile communication technology.

## Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

### 1. Phone memory

When available space on your phone memory is less than 10%, your phone cannot receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

#### To manage the application

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall the application you desired.

### 2. Optimising Battery Life

You can extend your battery's life by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

#### To extend the life of your battery

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

## Important notice

### To check the battery charge level


- 1 On the home screen, touch **Applications** tab and select **Settings> About phone > Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.


### To monitor and control what uses the battery

- 1 On the home screen, touch **Applications** tab and select **Settings> About phone> Battery use**.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

### 3. Installing an Open Source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

 **WARNING:** If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.


 **WARNING:** To protect your phone and personal data, download applications only from trusted sources, such as Android Market™. If some applications are not properly installed on your phone, your phone may not work correctly or a serious error could occur. You will need to uninstall those applications and all of its data and settings from the phone.

## 4. Using Unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

On the home screen, touch Applications tab and select **Settings > Location & security > Set up screen lock > Pattern.**

Follow the screens to be guided through drawing a screen unlock pattern. Select Next to continue to next screen.

 **WARNING:** Precautions to take when using the Pattern Lock. It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you have used all 5 opportunities, you may attempt again after 30 seconds.

## When you can't recall your unlock Pattern, PIN, or Password:

If you've created a Google account on the phone, tap the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone. If you haven't created a Google account on the phone or you forgot it, you need to perform a hard reset.

**Caution:** If you perform a hard reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a hard reset.

## Important notice

### 5. Using Safe Mode and Hard Reset

#### Using Safe mode

##### \* To recover the phone from any malfunction

Turn off your phone and reboot. While your phone is powering back on, press and hold the Send key while the Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in the lower left-hand corner.

##### \* Using Hard Reset (Factory Reset)

If it does not restore to its original state, use **Hard Reset** to initialise your phone.

- 1 Remove and reinsert the battery.
- 2 Press and hold for over 10 seconds: **Power/Lock** key + **Send** key + **Down Volume** key.

- 3 When the power turns on, release these keys.

#### **WARNING**

If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

### 6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

## To turn Wi-Fi on and connect to a Wi-Fi network

- 1 On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.
  - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
  - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
  - If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The Status bar displays icons that indicate Wi-Fi status.

## 7. Using a micro SD card

Pictures, along with Music and Video files, can only be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first. Without inserting a memory card, you will not be able to save pictures and video you have taken.

### **WARNING:**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Home Screen > Applications > Settings > SD card & phone storage > Unmount SD card**.

## Important notice

### 8. Opening and Switching Applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

#### To stop the application you use

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications > Running**.
- 2 Scroll to the desired application and touch **Force stop** to stop using it.

#### **TIP** Getting back to recent Apps

- Press and hold Home key, then a screen will display a list of the applications you used recently

## 9. Install LG PC suite to your computer

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

You can download this program at the LG web site. Browse to <http://www.lg.com> site to get the installer on your phone and user information. You may refer to the pictures below and follow the instructions to download the software for your phone and complete the installation.

**\* When LG PC Suite IV installation is completed, disable Mass storage only mode to run LG PC Suite IV.**

### Major Functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently.
- Synchronise data between a PC and a phone (Contacts, Calendar, Message(SMS), Bookmark, Call log).
- Transfer multimedia files (photos, videos, music) conveniently with a simple drag & drop between a PC and a phone.
- Transfer the messages from a phone to a PC.
- Use your phone as a Modem.
- S/W update without losing your data.

### LG-P350 does not support:


- PC Connection via Bluetooth
- LG Air Sync (Web Sync, RClick)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java Application

User's guide for PC Suite IV is in Help menu after the installation PC Suite IV.


# Important notice

## Download LG Mobile Support Tool

1) Go to [www.lg.com](http://www.lg.com) , Support , Mobile Phone Support

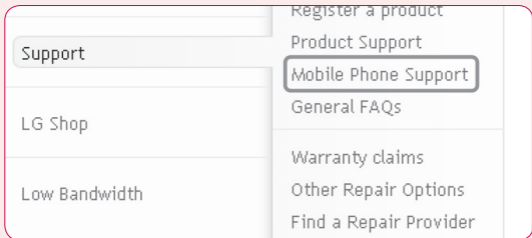

2) Download and Install LG Mobile Support Tool

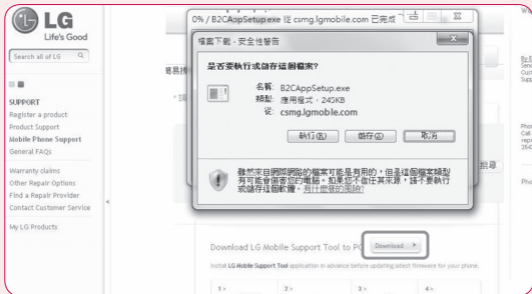

## 10. Connecting your phone to a computer via USB

- 1 Use the USB cable with your phone to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.
- 2 Open the Notification drawer and touch USB connected.
- 3 Touch "**Turn On USB storage**" to confirm that you want to transfer files between your phone's micro SD card and the computer.

When the phone is connected as USB storage, you will receive a notification. Your phone's micro SD card is mounted as a drive on your computer. You can now copy files to and from the micro SD card.

## 11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just touch it.

**Note:** When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

**Tip!** To use a micro SD card on your phone again, you need to open the Notification drawer and touch "**Turn off USB storage**".

During this time, you can't access the micro SD card from your phone, so you can't use applications that rely on the micro SD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing

## Important notice

information on the card.

- 1** Safely disconnect the USB device on your computer.
- 2** Open the Notification drawer and touch **Turn off USB storage**.
- 3** Touch **Turn off USB storage** in the dialog that opens.

### 12. Hold phone up right

**Please hold the mobile phone up right as a regular phone.**

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

### 13. When Screen freezes

**If the phone does not respond to user input or the screen freezes:**

Remove the battery, insert it again and turn the phone on. If it still does not work, please contact the service centre.

### 14. Do not connect your phone when turning your PC on/off

Make sure to disconnect your phone and PC via data cable as your PC might have errors.

# Before using the mobile phone, please read first!

## How to save music/video files to the phone

### Connect your phone to the PC using the USB cable.

Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > Open folder to view files.**

If you didn't install LG Android Platform Driver on your PC, you need to set it manually. On the home screen, touch **Applications** tab and select **Settings > SD card & phone storage > activate Mass storage only.**

### Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.

- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.
- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

## How to play music/video files to the phone

### Playing music files

From home screen touch **Application** tab > **Music**. Locate the file you want to play from Artist, Albums, Songs, Playlists tabs.

### Playing video files

From home screen touch **Application** tab > **Video player**, locate the file you want in the list and select it to play.

## Before using the mobile phone, please read first!

### How to move the contacts from the old phone to the current phone

#### Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

- 1 Download LG PC Suite IV at [www.lg.com](http://www.lg.com) and install it in the PC. Run the program and connect your phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved in the PC.
- 3 If the fields in the imported CSV file are different from the ones in LG PC Suite IV, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added to the PC.

- 4 If the connection of LG-P350 phone (using the USB cable) is detected by LG PC Suite IV, click "Sync" or "Sync Contacts" to synchronise the contacts saved in the PC to your phone and save them.

### How to send data from your phone via Bluetooth

#### Sending data via Bluetooth:

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- \* **Sending pictures:** Run the Gallery application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check If Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.

\* **Exporting contacts:** Run the Contacts application. Touch the address you want to export to. Press **Menu** and Select **Share > Bluetooth > Check** if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

\* **Sending multi-selected contacts:** Run the "Contacts" application. To Select more than one contact press **Menu** key and touch **Multiselect**. Select the contacts you want to send or press **Menu** key and touch **Select all**. Select **Share > Bluetooth > Check** if Bluetooth is turned on and select **Scan for devices >** Choose the device you want to send data from the list.

\* **Connecting to FTP (Only the FTP server is supported on this handset):** Select **"Settings" > "Wireless & networks" > "Bluetooth settings"**. Then, select the **"Discoverable"** checkbox and search for other devices. Find the service you want and connect to the FTP server.

**TIP:** The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to **"Settings" > "Wireless & networks" > "Bluetooth settings"**.

Then, select the **"Discoverable"** checkbox.

The checkbox is cleared after 120 seconds.

- Supported profiles are HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.

# Getting to know your phone

To turn the phone on, press and hold the Power key for 3 seconds.

To turn the phone off, press the Power key for 3 seconds and touch Power Off.

## TIP! When screen is locked

1. Drag your finger from left to right to unlock the screen.
2. To turn the phone off, press the Power key for 3 seconds and touch Power Off.

Earpiece


Home key 

- Returns to the home screen from any screen.

Menu key 

- Check what options are available.

Send key 

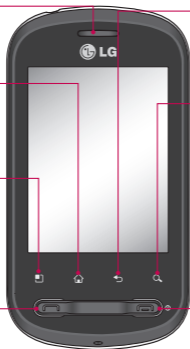

Back key 

- Returns to the previous screen.

Search key 

- Search the web and contents in your phone.

Power/Lock key 

- Powers your phone on/off by pressing and holding the key.  
- Turns the screen off and locks the phone.



**WARNING:** Placing a heavy object on the phone or sitting on it can damage its LCD and touch-screen functionalities.

**Tip!** Press Menu key whenever you tap an application to check what options are available.


**Tip!** LG-P350 does not support video call.

**Tip!** If LG-P350 has errors when you use it or you cannot turn it on, remove battery, install it again and turn it on after 5 seconds.

**Stereo earphone connector**



**Charger, micro USB cable connector**



**Volume keys**

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.

**Microphone**




**Camera lens**

**Back cover**

**SIM card slot**

**Battery**

**micro SD memory card slot**

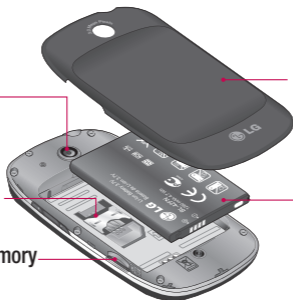


# Getting to know your phone

## Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in your hand. With your other hand, firmly press your thumb on the back cover. Lift off the battery cover with your forefinger.

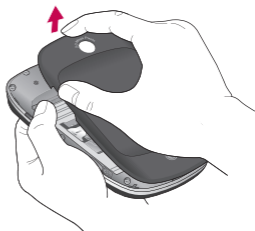

- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.




- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.



- 4 Replace the back cover of the phone.



## Charging your phone

Slide back the cover of the charger connector on the side of your LG-P350. Insert the charger, and plug it into an electrical outlet. Your LG-P350 must be charged until you can see .



**NOTE:** The battery must be initially fully charged to improve battery lifetime.

**NOTE:** The LG-P350 has an internal antenna. Be careful not to scratch or damage this rear area, as this will cause loss of performance.

# Getting to know your phone


## Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

**NOTE:** The LG-P350 supports up to a 32GB memory card.

To insert a memory card:

- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.
- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

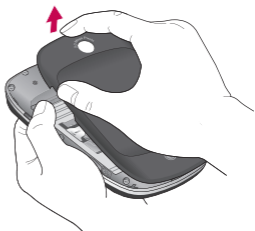



### **⚠ WARNING!**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

## **Formatting the memory card**

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE:** All files on the card are deleted when you format the card.

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Unmount SD card.
- 5 Touch **Format SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

### **Tip!**

If your memory card is already Unmounted, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD card**.

# Your Home screen

## Lock your phone

When you are not using LG-P350, press the Power/Lock key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the home screen or other screen you are viewing is replaced with the lock screen to conserve the battery.

**Note:** If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g. phone call, web access and data communications).

### **Tip! Setting unlock pattern:**

You can draw your own unlock pattern by connecting four or more dots.


If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

**Tip!** When you set an unlock pattern, you need to create your Gmail account first.




**Caution:** The phone will be locked for 30 seconds after 5 incorrect attempts at drawing the unlock pattern.

## Unlock screen

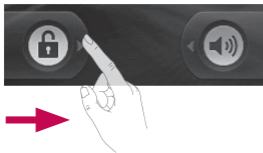Whenever your LG-P350 is not in use, it will return to the lock screen. Drag your finger from left to right to unlock the screen.



## Silent Mode

From Notification drawer, touch  to be  or if you don't use an unlock pattern, simply drag  to the left.



To wake up your phone, press **Send** or **Power/Lock** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen. The last screen

you were working on opens.



## Home

Simply swipe your finger to the left or right to view them. You can also customise each panel with widgets, shortcuts, which are shortcuts to your favourite applications, folders and wallpapers.

**NOTE:** Some screen images may be different depending on your phone provider.

**Tip!** To add an application icon to the home screen, touch and hold the application you want to add to the home screen.

### Tip!

- Touch and hold that icon. The **Applications** icon will be change as the **Trash** icon .
- Drag and drop an application icon to the **Trash** icon .


**Tip!** You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

## Getting back to a recently used applications

Touch and hold the Home key. The screen will show you a pop up with icons of applications that you've used recently.

## Notification drawer

The notification drawer runs across the top of your screen.

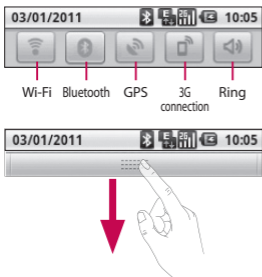


Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can


check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.


## Onscreen Keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard automatically displays on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

## Phone Keypad (Qwerty Keypad)

 **Shift Key** - Touch once to capitalise the next letter you type. Double tap for all caps.

 **XT9 Key** - Turn XT9 Mode on or off.

 **Setting key**- Tap to view the settings menu. Choose from Editor settings, Keyboard layout, Writing language, User dictionary and Other input method.

123

@#\*

### Number and Symbols Key -

Touch to change input to number and symbol entry.



### Enter Key -

Tap to create a new line in the message field.




### Language Key -

Tap to change the On-screen Keyboard language.



### Delete Key

**Tip!** To switch between Qwerty Keypad and Phone Keypad, touch  from Phone Keypad and choose Keyboard Layout.

## Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

## IMPORTANT

- Some applications work only with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronised with your phone.

## Calls

### Answering and rejecting a call

#### When screen is locked/ When screen is unlocked


When your phone rings, drag the **Answer** icon  to the right.


Drag **Decline** icon  to the left to reject an incoming call. Drag Excuse msg bar from the bottom

if you want to send one. Or else When your phone rings press the Answer button(Send key). Press Decline button(Power/Lock key) to reject the incoming call.Touch the Excuse msg bar from the bottom.

## Messaging

Your LG-P350 combines SMS and MMS into one intuitive, easy-to-use menu.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

## Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

## Social Networking

With your phone, you can take advantage of social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time.

You can add your Facebook and Twitter accounts to your phone. If you don't have an account, you can visit their sites to set it up.


**NOTE:** Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

# Camera

## Getting to know the viewfinder

**Brightness** – This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

**Zoom** – Zoom in or zoom out. Alternatively, you can use the side volume keys.

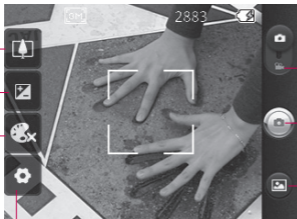

**Video mode** – Slide down this icon to switch to video mode.

### Taking a photo

**Gallery** – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Colour effect** – Choose a colour tone for your new photo.

**NOTE:** You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture or save the picture you have taken.

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo as **Bluetooth, Email, Facebook, Gmail, Messaging, Picasa** or **Twitter**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

**NOTE:** Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

**Set as** Touch to use the image as **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the selected picture.


# Google applications



## Maps


Check your current location and traffic and receive directions to your destination. The LG-P350 must be connected to Wi-Fi or 3G/GPRS.

**NOTE:** Maps does not cover all cities and countries.

### Press Menu key to use options:

**Search**  – Enter the place you are looking for.

**Directions**  – This will let you find out the route of the place you entered. Touch  to input the data. Choose from Contacts or Point on Map or My current location.

**Layers**  – You can switch view from Traffic to Satellite or Terrain. Tap Latitude, then you will see the location of your contacts from Google Account.

**My Location**  – Point your current location on the map.

**Join Latitude**  – Share your location with friends you choose

and Google.

**More**  – Clear map or find Starred items and more.

## Market™

Android Market™ lets you download useful applications and games.

## Gmail™

Gmail™ is configured when you first set up your phone. Depending on your synchronisation settings, Gmail™ on your phone is automatically synchronised with your Gmail™ account on the web.

## Talk

Talk is Google's instant messaging program. It lets you communicate with other people who also use Talk.

## ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited editing functions for Microsoft Word, Excel and PowerPoint. However, you cannot edit a PDF file.

- 1 Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

## The Web

### Browser

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

### Using options


Press the **Menu** key to view options.

-  **New window** – Open a new window.

-  **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.


-  **Windows** – Show all your open windows.

-  **Refresh** – Touch to refresh the web page.

-  **Forward** – Goes to the page you connected to after the current page. This is different from the Back key, which goes to the previous page.


## Wi-Fi

### Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, choose Settings > Wireless & network settings > Wi-Fi .

### To connect to Wi-Fi

Choose the Wi-Fi network you want to connect with. If you see  , you need to enter a password to connect.

## TIP!

If you are out of the Wi-Fi area and choose 3G connection, additional charges may be applied.

## USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

**Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering.**

For more information regarding USB tethering, click Help.

## TIP!

To use USB Tethering, you need to install PC Suite onto your PC first.

## Wi-Fi Tethering

Use your LG-P350 as a portable Wi-Fi hotspot.

**Settings > Wireless & network settings > Tethering & portable**

## hotspot > Portable Wi-Fi hotspot.

## TIP!

If your phone turns into sleep mode even when it is connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.

**NOTE:** The LG-P350 supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit <http://www.lg.com>.

This feature allows you to conveniently update the firmware of your phone to the latest version from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the updating process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

### Notice

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred licence terms, disclaimers and notices are available for download with the source code.

## Accessories

These Accessories are available for use with the LG-P350.  
(Items described below may be optional.)

### Charger



### Data cable

Connect your LG-P350 and PC.



### Battery



### User Guide

Learn more about your LG-P350.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.













