



ไทย
ENGLISH

คู่มือการใช้
LG-S310



P/NO : MFL67003312 (1.0)

www.lg.com

Bluetooth QD ID B016935

LG-S310 คู่มือการใช้ - ไทย

คู่มือการใช้อาจแตกต่างจากตัวเครื่องขึ้นอยู่กับเวอร์ชันซอฟต์แวร์โทรศัพท์และผู้ให้บริการที่ใช้

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบ จากตลาดลักลอบนำเข้าสินค้า รวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับ บริการทางด้านบริการประกันสินค้าอย่างเป็นทางการ

เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งขอความพรมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มให้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบ ผลิตภัณฑ์สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถกรันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพรองจาก มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน การซื้อหรือบัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

สารบัญ

สารบัญ.....	2	เบอร์ส่วนตัว.....	15
คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ	4	นามบัตรส่วนตัว	16
การใส่ซิมการ์ดและการ ชาร์จแบตเตอรี่.....	9	ประวัติการโทร.....	16
การใส่ซิมการ์ด	9	บันทึกการโทร.....	16
การใส่การ์ดหน่วยความจำ	10	สายไม่ได้รับ	16
ส่วนประกอบตัวเครื่อง ..	11	สายที่ได้รับ.....	16
ข้อความ	13	เบอร์ที่ติดต่อ.....	16
เขียนข้อความ	13	เวลาโทร	16
ขอความช่วยเหลือ.....	13	ตัวนับข้อมูลแพ็คเก็ต.....	16
เมลบอกซ์ของฉัน.....	13	ค่าโทร.....	16
สร้างอีเมลแอดเดรสใหม่	13	ตั้งค่า.....	17
แบบร่าง	13	รูปแบบเสียง	17
ข้อความออก.....	13	หน้าจอ	17
ข้อความที่ส่งแล้ว.....	14	วันที่และเวลา.....	17
เก็บถาวร	14	การเชื่อมต่อ.....	17
อีโมติคอน	14	การตั้งค่าการโทร.....	17
ข้อความ SOS	14	โทรศัพท์.....	19
คาดัดตั้งข้อความ	14	ตั้งค่าเครือข่าย	20
สมุดโทรศัพท์	15	โปรไฟล์อินเทอร์เน็ต.....	20
ชื่อ	15	จุดเชื่อมต่อ.....	20
ตั้งค่า	15	การเชื่อมต่อข้อมูลแพ็คเก็ต	20
กลุ่ม.....	15	ระบบป้องกัน	21
โทรด่วน.....	15	ข้อมูลหน่วยความจำ	21
เบอร์บริการ.....	15	เรียกคืนการตั้งค่า.....	21

คลังภาพ.....	22	แอปพลิเคชัน	25
การ์ดความจำ	22	บริการอินเทอร์เน็ต	25
ภาพส่วนตัว	22	โฮมเพจ	25
เสียงส่วนตัว	22	บุคมาร์ก	25
วิดีโอส่วนตัว	22	ไปที่แอดเดรส	25
เกมส์ & แอปฯ	22	เครือข่ายสังคม	26
อื่นๆ	22	PC ชิงค์.....	27
มัลติมีเดีย	22	อุปกรณ์เสริม	28
กล้องถ่ายรูป	22	ข้อมูลทางเทคนิค	29
วิดีโอ.....	22		
เพลง.....	22		
วิทยุ FM.....	23		
เครื่องบันทึกเสียง.....	23		
สร้างเสียงเรียกเขา	23		
สมุดบันทึก	23		
นาฬิกาปลุก	23		
ปฏิทิน	23		
งาน.....	23		
บันทึก	23		
บันทึกลับ	23		
เครื่องคิดเลข	24		
พจนานุกรม.....	24		
นาฬิกาจับเวลา.....	24		
ตัวคนหาวันที่	24		
ตัวแปลงหน่วย.....	24		
เวลาทั่วโลก	24		
ไปที่.....	24		


คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมมีอธิบายอยู่ในคู่มือเล่มนี้

คำเตือน

- เพื่อความปลอดภัยของคุณ โปรดใช้แต่แบตเตอรี่และเครื่องชาร์จของแท้ที่กำหนดให้เท่านั้น
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ เช่น ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์
- ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมายกำหนด

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

 **คำเตือน:** ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคที่มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ การซ่อมแซมภายใต้การรับประกันเป็นการตัดสิทธิ์ของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยไม่มีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน

- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ใช้ผ้าแห้งเช็ดทำความสะอาดสภาพภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลายใดๆ)
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะ

การเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

บริเวณที่ทำให้เกิด ระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการ ระเบิดได้

ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายเซลล์ลาร์บางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับ แบตเตอรี่และการดูแล รักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จแบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง

- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้

- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-S310 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การ

- ทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
 - ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนักสิบ (10) กรัม
 - ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.10 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.988 วัตต์/กก. (10 กรัม)
 - ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื่องเยื่อหนึ่ง (1) กรัม

การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

การใส่ซิมการ์ด


เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับ ซิมการ์ด พลาสติกอันพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ

ข้อสำคัญ! ซิมการ์ดพลาสติกอื่นและขั้วสัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่ หรือถอดการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก

ภาพประกอบ โปรดเปิดอุปกรณ์และเลิกการเชื่อมต่อกับเครื่องชาร์จก่อนถอดแบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ประกอบฝาครอบด้านหลัง
- 6 ชาร์จแบตเตอรี่

หมายเหตุ: ชาร์จแบตเตอรี่ให้เต็มก่อนการใช้งานครั้งแรก

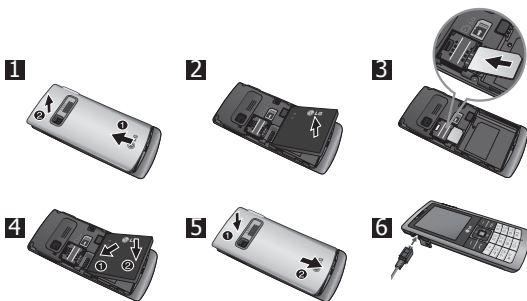


การใส่การ์ดหน่วยความจำ

ยกฝาปิดการ์ดหน่วยความจำขึ้น และใส่การ์ด microSD โดยให้พื้นที่หน้าสัมผัสสีทองคว่ำลง ปิดฝาปิดการ์ดหน่วยความจำจนเข้าที่



ในการถอดการ์ดหน่วยความจำ ให้ดันที่การ์ดเบาๆ ดังแสดงในภาพ

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

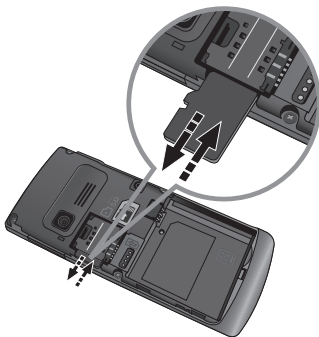

ส่วนประกอบตัวเครื่อง



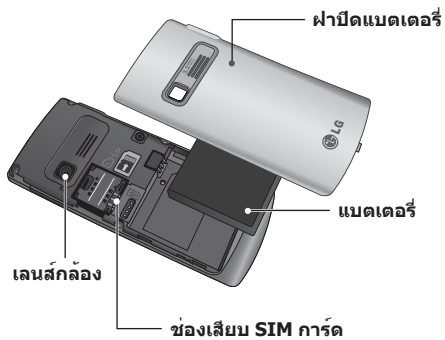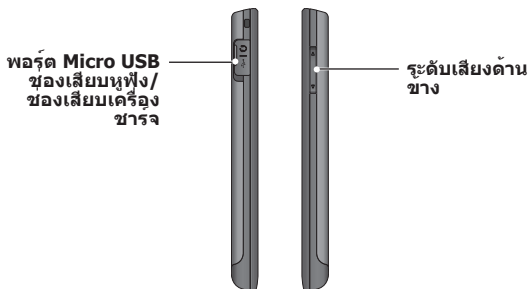

ในส่วนนี้จะอธิบายเกี่ยวกับคุณสมบัตินิเทศภาพของคุณอย่างย่อ

ข้อความ

เขียนข้อความ

เมนูนี้มีฟังก์ชันที่เกี่ยวข้องกับ SMS (Short Message Service) และ MMS (Multimedia Message Service)

ข้อความเข้า

เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้า โดยข้อความเหล่านี้จะถูกจัดเก็บใน ข้อความเข้า

เคล็ดลับ: ข้อความสามารถเรียงได้โดยใช้ตัวเลือกการเรียงที่ระบุเพื่อให้เข้าถึงข้อความได้ง่าย (เรื่อง, วันที่ และผู้ส่ง)

เมลล์บอกซ์ของฉัน

อีเมลล์ของฉันให้คุณรับอีเมลล์ที่คุณชอบบนมือถือโดยมีค่าใช้จ่ายคงที่ในแต่ละเดือน

สร้างอีเมลล์แอดเดรสใหม่

ด้วยการเลือกเมนูนี้ คุณจะไปที่พอร์ทัล Hotmail ซึ่งคุณสามารถสร้างแอดเดรส Hotmail ได้

เมื่อคุณสร้างแอดเดรสแล้ว คุณสามารถตั้งค่าในวิซาร์ดตั้งค่าอีเมลเพื่อรับอีเมล Hotmail ได้

แบบร่าง

คุณสามารถบันทึกข้อความชั่วคราวไว้ในแบบร่างได้

ข้อความออก

โพลเดอ์ที่เก็บข้อความที่ยังไม่ได้ส่ง หรือข้อความที่ล้มเหลวในการส่งเป็นการชั่วคราว

ข้อความที่ส่งแล้ว

หลังจากส่งข้อความออก
ข้อความตัวอักษรหรือ
ข้อความมัลติมีเดียจะถูก
บันทึกในโฟลเดอร์ ส่งแล้ว

เก็บถาวร

คุณสามารถเข้าถึงข้อความ
ที่บันทึกไว้, SMS อัดโน้มนัด
และ MMS อัดโน้มนัดได้

อีโมติคอน

รายการอีโมติคอนที่เป็น
ประโยชน์ที่ได้เขียนไว้แล้ว
สำหรับการตอบกลับแบบ
รวดเร็ว

ข้อความ SOS

ข้อความฉุกเฉินสามารถส่ง
ไปยังหมายเลขที่กำหนด
ไวล่วงหน้า (สูงสุด 3
หมายเลข) โดยกดปุ่ม 9
ค้างบนหน้าจอเมื่อไม่ได้ใช้
งาน และสามารถตั้งค่าจาก
เมนูข้อความโดยใช้เมนูย่อย
SOS เมื่อกดปุ่ม 9 ค้างบน
หน้าจอเมื่อไม่ได้ใช้งาน จะ
แสดงป๊อปอัป 'ตั้งข้อความ
SOS?' กด 'ใช่' แล้วตั้งค่า
ข้อความ SOS เป็นเปิด แล้ว
พิมพ์ข้อความที่ต้องการ
และป้อนหมายเลขสูงสุด 3
หมายเลขในรายชื่อผู้รับที่
คุณต้องการส่งข้อความใน
โหมดฉุกเฉิน และกด เสร็จ

คำติดตั้งข้อความ

เมนูนี้ช่วยคุณตั้งค่าคุณสมบัติ
ผู้ให้บริการเครือข่ายของคุณ

สมุดโทรศัพท์

ชื่อ

เลือกตัวเลือกค้นหาจาก และป้อนชื่อที่คุณต้องการ ค้นหาจากรายชื่อ

คุณสามารถลงทะเบียนที่อยู่รายชื่อใหม่โดยเลือกเพิ่มผู้ติดต่อใหม่จากตัวเลือก คุณสามารถป้อนชื่อ, หมายเลขโทรศัพท์อื่น, อีเมลแอดเดรส, กลุม, ภาพ ฯลฯ โดยใช้ตัวเลือกเพิ่มรายละเอียดของรายชื่อใหม่

ตั้งค่า

คุณสามารถตั้งค่าการแสดงรายชื่อ, คัดลอก, ย้าย, ส่งรายชื่อทางบลูทูธ, สำรอง และเรียกคืนรายชื่อหากใส่การ์ด SD และลบรายชื่อ และตรวจสอบขอมูลหน่วยความจำ

กลุม

คุณสามารถเพิ่มรายชื่อในกลุมที่มีอยู่ได้

โทรด่วน

คุณสามารถกำหนดปุ่มโทรด่วนหนึ่งจาก 2 ถึง 8 ให้กับรายการชื่อและหมายเลขได้ หากคุณอยู่ที่หน้าจอเมื่อไม่ได้ใช้งาน คุณสามารถโทรโต้ทันทีโดยกดปุ่มนี้

เบอร์บริการ

ใช้ฟังก์ชันนี้เพื่อเข้าดูรายการบริการที่ผู้ให้บริการระบบของคุณให้บริการ (หากซิมการ์ดสนับสนุน)

เบอร์ส่วนตัว

คุณสามารถบันทึกและตรวจสอบหมายเลขส่วนตัวของคุณในซิมการ์ดได้

นามบัตรส่วนตัว

ตัวเลือกนี้ใช้เพื่อสร้างนามบัตรส่วนตัวที่มีชื่อและหมายเลข

ประวัติการโทร

บันทึกการโทร

คุณสามารถดูรายการสายโทรออกหรือสายเรียกเข้าทั้งหมดได้

สายไม่ได้รับ

คุณสามารถดูสายที่ไม่ได้รับได้

สายที่ได้รับ

คุณสามารถดูสายที่ได้รับได้

เบอร์ที่ติดต่อ

คุณสามารถดูหมายเลขสายโทรออกและที่พยายามโทรออกได้

เวลาโทร

ช่วยให้คุณสามารถดูระยะเวลาของสายที่โทรเข้าและโทรออกได้ และยังสามารถรีเซ็ตตัวจับเวลาการโทรได้ใหม่อีกด้วย

ตัวนับข้อมูลแพ็คเกจ

คุณสามารถตรวจสอบจำนวนข้อมูลที่รับส่งบนเครือข่ายได้

ค่าโทร

ดูค่าโทรที่เรียกเก็บสำหรับการโทรล่าสุดของคุณ, หมายเลขการโทรทั้งหมด และสามารถตั้งค่าขีดจำกัดการโทรได้ คุณยังสามารถตั้งค่าการโทรได้ด้วย

ตั้งค่า

รูปแบบเสียง

คุณสามารถปรับและกำหนดเสียงโทรศัพท์เองได้ สำหรับเหตุการณ์และสภาพแวดล้อมต่างๆ

หน้าจอ

คุณสามารถเปลี่ยนการตั้งค่าหน้าจอของโทรศัพท์ได้

วันที่และเวลา

คุณสามารถตั้งค่าฟังก์ชันที่เกี่ยวข้องกับวันที่และเวลาได้

การเชื่อมต่อ

บลูทูธ - คุณสามารถปรับการตั้งค่าในการเชื่อมต่อ BT ได้

โหมดการเชื่อมต่อ USB

- คุณสามารถถ่ายโอนไฟล์จาก/ไปยังคอมพิวเตอร์ที่ใช้ร่วมกันได้ไปยังหน่วยความจำในโทรศัพท์โดยใช้โหมดที่เก็บข้อมูล

การตั้งค่าการโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้

การโอนสาย - บริการโอนสายให้คุณโอนสายสนทนาเรียกเขาไปยังหมายเลขอื่นได้ โปรดติดต่อผู้ให้บริการระบบของคุณเพื่อขอทราบรายละเอียด

สายเรียกเข้าทั้งหมด: โอนสายสนทนาทุกสาย

เมื่อไม่ว่าง: โอนสายสนทนาเมื่อผู้ใช้กำลังใช้สายอื่น

ไม่รับสาย: โอนสายสนทนาเมื่อคุณไม่รับสาย

ติดต่อไม่ได้: โอนสายสนทนาเมื่อปิดโทรศัพท์หรืออยู่นอกพื้นที่ให้บริการ

ป้องกันการโทร - บริการป้องกันการโทรนี้จะป้องกันไม่ให้โทรศัพท์ของคุณโทรออกหรือรับสายบางประเภทได้ ฟังก์ชันนี้ต้องใช้อุปกรณ์ป้องกันการโทร

กำหนดเบอร์โทรออก

- คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้ หมายเลขเหล่านั้นจะได้รับการป้องกันไว้ด้วยรหัส PIN2

เปิด: คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้

สายเรียกซ้อน

เปิดใช้: หากคุณเลือก เปิดใช้ คุณสามารถรับสาย (เรียกเข้า) ซ่อนได้

เลิกใช้: หากคุณเลือก ยกเลิก คุณจะไม่สามารถทราบได้ว่ามีสาย (เรียกเข้า) ซ่อนที่กำลังรออยู่

ดูสถานะ: แสดงสถานะของสายเรียกซ้อน

ปฏิเสธการรับสาย

เปิด/ปิดปฏิเสธการรับสาย: คุณสามารถตั้งค่าว่าปฏิเสธสายเรียกเข้าหรือไม่

- **ปิด:** เลิกใช้ปฏิเสธการรับสายอัตโนมัติ

- **ปฏิเสธรายการ:** ปฏิเสธหมายเลขเป้าหมายในรายการที่คุณตั้งค่าไว้เท่านั้น คุณสามารถตั้งค่ารายการปฏิเสธได้โดยใช้เมนูปฏิเสธรายการ

- **ปฏิเสธทุกสาย:** ปฏิเสธการรับสายทั้งหมดในรายการ หรือผู้ใช้สามารถตั้งค่ารายการปฏิเสธโดยเลือกรายชื่อ, กลุม, ไม่ใดลงทะเบียน และไม่มีข้อมูลผู้โทร

ส่งหมายเลขตัวเอง

ตั้งตามระบบ หากเลือกตัวเลือกนี้ การที่คุณจะสามารถส่งหมายเลขโทรศัพท์ของคุณได้หรือไม่ขึ้นอยู่กับบริการของสายโทรศัพท์สองสายที่ให้บริการอยู่ เช่น สาย 1 หรือสาย 2

เปิด: คุณสามารถส่งหมายเลขโทรศัพท์ของคุณไปยังผู้รับ โดยหมายเลขของคุณจะแสดงที่เครื่องโทรศัพท์ของผู้รับสาย


ปิด: ไม่มีการแสดงหมายเลขโทรศัพท์ของคุณ

โทรซ้ำอัตโนมัติ

เปิด: เมื่อใช้งานฟังก์ชันนี้ โทรศัพท์จะพยายามหมุนทวนหมายเลขที่โทรไม่ติดโดยอัตโนมัติ

ปิด: โทรศัพท์จะไม่หมุนทวนหมายเลขซ้ำเมื่อไม่สามารถต่อสายนั้นได้ในครั้งแรก

โหมดตอบรับ

กดปุ่มรับสาย: หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่ม 

รับได้ทุกปุ่ม หากเลือกเมนูนี้ คุณสามารถรับสายเรียกเข้าด้วยการกดปุ่มใดก็ได้ยกเว้นปุ่มวางสายและปุ่มเลือกขบวน

ตัวจับเวลาการโทรฟรี - เมนูนี้ช่วยติดตามจำนวนนาทีของการโทรฟรี เมื่อคุณป้อนจำนวนนาทีที่มีอยู่ เครื่องจะติดตามจำนวนนาทีฟรี เครื่องจะเริ่มต้นลบจำนวนนาทีที่คุณใช้เมื่อคุณใช้สายโทรออก

เตือนทุกนาที - กำหนดว่าจะส่งเสียง 1 นาทีทุก 1 นาทีขณะใช้สาย

โหมดตอบรับ BT - เลือกแฮนด์ฟรีเพื่อรับสายโดยใช้ชุดหูฟังบลูทูธ หรือเลือกตัวเครื่องเพื่อกดปุ่มที่ตัวเครื่องเพื่อรับสาย

บันทึกหมายเลขใหม่ - เลือก ใช่ เพื่อบันทึกหมายเลขใหม่

ความคมชัดของเสียง - ลดเสียงรบกวนรอบข้างขณะใช้สาย เลือก เปิด หรือ ปิด

โทรศัพท์

ให้คุณตั้งค่าโทรศัพท์

ลือคปุ่มอัตโนมัติ - คุณสามารถลือคปุ่มกดอัตโนมัติหลังจากไม่ใช้งานสักครู่

ภาษา - คุณสามารถเปลี่ยนภาษาที่แสดงข้อความบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดป้อนภาษาด้วย

ประหยัดพลังงาน - เลือกจากตัวเลือกต่อไปนี้ ปิด/อัตโนมัติ/ เปิดเสมอ เพื่อเปลี่ยนการตั้งค่าประหยัดพลังงานที่ตั้งมาจากโรงงาน

ข้อมูลเครื่อง - แสดงหมายเลขโทรศัพท์, หมายเลขรุ่น และเวอร์ชัน S/W ของคุณ

ตั้งค่าเครือข่าย

คุณสามารถตั้งค่าเลือกเครือข่าย และโหมดเครือข่ายโดยใช้เมนูนี้ คุณสามารถเพิ่มเครือข่ายที่ต้องการเชื่อมต่อในรายการที่ต้องการได้ด้วย

โปรไฟล์อินเทอร์เน็ต

เมนูนี้แสดงโปรไฟล์อินเทอร์เน็ต คุณสามารถสร้างโปรไฟล์ใหม่ ลบ หรือแก้ไขโปรไฟล์โดยใช้เมนูตัวเลือก อย่างไรก็ตาม คุณไม่สามารถลบหรือแก้ไขการกำหนดค่าเริ่มต้นได้

จุดเชื่อมต่อ

เมนูนี้จะแสดงรายการจุดเชื่อมต่อ คุณสามารถสร้างโปรไฟล์ใหม่ ลบ หรือแก้ไขโปรไฟล์โดยใช้เมนูตัวเลือก อย่างไรก็ตาม คุณไม่สามารถลบหรือแก้ไขการกำหนดค่าเริ่มต้นได้

การเชื่อมต่อข้อมูลแพ็คเก็ต

หากคุณเลือกตัวเลือก 'เมื่อใช้ได้' โทรศัพท์ของคุณจะลงทะเบียนกับเครือข่าย GPRS โดยอัตโนมัติเมื่อคุณเปิดเครื่อง หากคุณเลือก "เมื่อต้องการ" การเชื่อมต่อ GPRS จะสร้างขึ้นตามระยะเวลาของการเชื่อมต่อ WAP หรือแอปพลิเคชัน

ระบบป้องกัน

เมนูนี้ช่วยให้คุณตั้งค่าความปลอดภัยของโทรศัพท์ได้

คำขอรหัส PIN - คุณสามารถตั้งค่าโทรศัพท์ให้ถามรหัส PIN ของซิมการ์ดของคุณ เมื่อเปิดใช้เครื่องโทรศัพท์

ล็อคเครื่อง - คุณสามารถใช้รหัสล็อคตัวเครื่องเพื่อป้องกันการใช้โทรศัพท์ของคุณโดยไม่ได้รับอนุญาต

ล็อคหากเปลี่ยนซิม - ตั้งค่าฟังก์ชันล็อคหากเปลี่ยนซิม

แจ้งเครื่องหาย - คุณสมบัติ ATMT ของโทรศัพท์รุ่นนี้ช่วยให้คุณสามารถใช้ระบบการติดตามตรวจสอบตำแหน่งของโทรศัพท์มือถือในกรณีที่คุณเผลอหายหรือวางไว้ผิดที่

เปลี่ยนรหัส - PIN

ย่อมาจาก Personal Identification Number ซึ่ง เป็นรหัสที่ใช้ในการป้องกันการใช้โทรศัพท์โดยบุคคลที่ไม่ได้รับอนุญาต คุณสามารถเปลี่ยนรหัสการเข้าใช้เครื่อง: รหัส PIN, รหัส PIN2, รหัสป้องกันขโมย

ข้อมูลหน่วยความจำ

คุณสามารถตรวจสอบพื้นที่ว่างและการใช้หน่วยความจำของโทรศัพท์ ซิมการ์ด และหน่วยความจำภายนอก (หากใส่ไว้) ได้

เรียกคืนการตั้งค่า

คุณสามารถกลับไปเริ่มใช้ค่าทั้งหมดที่ตั้งมาจากโรงงานได้ คุณต้องใส่ รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้

คลังภาพ

การัดความจำ

หากโทรศัพท์มีการัดหน่วยความจำในช่องใส่การัด คุณจะสามารถบันทึกภาพ, เสียง และวิดีโอไว้ในการัดได้

ภาพส่วนตัว

แสดงรายการไฟล์ภาพ

เสียงส่วนตัว

ไฟล์วิดีโอที่บันทึกไว้จะแสดงในรายการ

วิดีโอส่วนตัว

แสดงรายการไฟล์วิดีโอ

เกมส์ & แอปฯ

คุณสามารถเข้าสู่เกมส์และแอปพลิเคชันต่างๆ ในโทรศัพท์ของคุณ

อื่นๆ

เมื่อคุณได้รับไฟล์ที่มีรูปแบบที่ไม่ได้กำหนดไว้ทางอีเมล ไฟล์จะถูกบันทึกไว้ในโฟลเดอร์นี้

มัลติมีเดีย

กล้องถ่ายรูป

คุณสามารถถ่ายภาพด้วยกล้องถ่ายรูปที่อยู่ในตัวโทรศัพท์ และปรับการตั้งค่าของกล้องได้ตามความต้องการ

วิดีโอ

คุณสามารถบันทึกวิดีโอคลิปด้วยกล้องถ่ายรูปในตัวได้

เพลง

ด้วยเพลงในโทรศัพท์ จะช่วยให้คุณสามารถเพลิดเพลินกับเพลงที่หลากหลายได้ง่าย

วิทยุ FM

คุณสามารถฟังวิทยุ FM โดยใช้ชุดหูฟังภายนอก

เครื่องบันทึกเสียง

คุณสามารถบันทึกเสียงเตือนได้

สร้างเสียงเรียกเข้า

ฟังก์ชันนี้ช่วยให้คุณสร้างเสียงเรียกเข้าของคุณโดยใช้เครื่องมือนี้

สมุดบันทึก

นาฬิกาปลุก

คุณสามารถตั้งนาฬิกาปลุกให้ทำงานเมื่อถึงเวลาที่ระบุได้หาเวลา

ปฏิทิน

คุณสามารถดูปฏิทินและเพิ่มเหตุการณ์ได้ในวันที่เลือกได้อย่างง่ายดาย

เคล็ดลับ: ผู้ใช้สามารถกำหนดเวลาส่ง SMS เพื่อให้สามารถส่งไปยังหมายเลข/รายชื่อที่กำหนดไว้ในวันที่และเวลาที่ตั้งค่าไว้ได้จากรายการตัวเลือก

งาน

คุณสามารถดู แก้ไข และเพิ่มงานที่จะทำไดรอยรายการ

บันทึก

คุณสามารถเพิ่มบันทึกใหม่ได้หาสิบลรายการ ดู และจัดการบันทึกที่มีอยู่

บันทึกกลับ

คุณสามารถเพิ่มบันทึกกลับได้หาสิบลรายการ คุณต้องป้อนรหัสป้องกันเพื่อใช้เมนูนี้เพื่อปกป้องความเป็นส่วนตัวส่วนตัวของบันทึกกลับของคุณ

เครื่องคิดเลข

เครื่องคิดเลขมีฟังก์ชันการคำนวณพื้นฐาน: บวก, ลบ, คูณ และหาร คุณยังสามารถใช้ฟังก์ชันที่มีอยู่ เช่น Sin, Cos, tan, log, ln, exp, %, x^2 , x^y , sqrt, +/-, deg และ rad

พจนานุกรม

ให้คุณค้นหาพจนานุกรมภาษาอังกฤษเป็นภาษาอื่นดี, ภาษาอื่นดีเป็นภาษาอังกฤษ และพจนานุกรมภาษาอังกฤษด้วย และจดจำการค้นหาล่าสุดได้ด้วย

นาฬิกาจับเวลา

ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันนาฬิกาจับเวลาได้

ตัวค้นหาวันที่

คุณสามารถนับวันที่เป้าหมายได้โดยการเพิ่ม (หลัง) จำนวนวัน

ตัวแปลงหน่วย

ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ ประเภทของหน่วยวัดที่สามารถแปลงเป็นหน่วยต่างๆ ได้นั้นมีหลายประเภท: สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร, ความเร็ว

เวลาทั่วโลก

ฟังก์ชันเวลาทั่วโลกจะแสดงข้อมูลเวลาของเมืองใหญ่ทั่วโลก

ไปที่

ช่วยให้คุณตรงไปยังเมนูที่ค้นหา คุณสามารถตั้งรายการเป็น ไปที่

แอปพลิเคชัน

โทรศัพท์ LG-S310 มาพร้อมกับเกมส์เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในโฟลเดอร์นี้ กดเมนู และเลือก แอปพลิเคชัน เลือก เกมส์ & แอปฯ

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้ โปรดสอบถามขอมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

บริการ อินเทอร์เน็ต


โซมเพจ

ใช้สำหรับเชื่อมต่อกับโซมเพจ โซมเพจจะเป็นไซต์ที่ไต่ระบุไว้ในโปรไฟล์ที่เปิดใช้งาน

บุ๊กมาร์ก

เมนูนี้ช่วยให้คุณจัดเก็บ URL ของเว็บเพจที่คุณชื่นชอบได้ เพื่อให้เขาใช้ได้ง่ายขึ้นในครั้งต่อไป

ไปที่แอดเดรส

คุณสามารถเชื่อมต่อไปยังเว็บไซต์ที่คุณต้องการได้โดยตรง หลังจากป้อน URL ให้กดปุ่ม  เพื่อทำการเชื่อมต่อไปยังไซต์ดังกล่าว

เครือข่ายสังคม

บริการเครือข่ายสังคม (SNS) - โทรศัพท์ LG-S310 มี SNS ที่ให้คุณสนุกสนานและจัดการเครือข่ายสังคมของคุณได้ เลือกเมนู **เครือข่ายสังคม** และเลือกไซต์ทางด้านล่าง:
Facebook, Twitter

หมายเหตุ: คุณสมบัติ SNS เป็นแอปพลิเคชันที่ใช้ข้อมูลจำนวนมาก เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

Facebook (SNS ต่อ)

โชม: ล็อกอินและคุณจะเป็นสถานะที่อัปเดตของเพื่อนๆ ของคุณ ป้อนความเห็นของคุณเกี่ยวกับสถานะใหม่และตรวจดูอื่นๆ

โปรไฟล์: คุณสามารถเลือก **กระดาน > การอัปเดตสถานะ** และเขียนสถานะปัจจุบัน ดูรายละเอียดข้อมูลและอัปโหลดภาพถ่ายโดยเลือก **อัลบั้ม > อัปโหลดภาพ**

เพจที่บันทึก - ให้คุณดูเว็บเพจที่บันทึกไว้ได้

เว็บแอดเดรสล่าสุด - เมื่อนี้จะแสดงประวัติของเพจที่ดูล่าสุด

ตั้งค่า - คุณสามารถตั้งค่าโปรไฟล์, ลักษณะ, แคม และความปลอดภัยที่สัมพันธ์กับบริการอินเทอร์เน็ต

PC ซิงค์

คุณสามารถซิงค์โครนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณเพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และยังสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสามารถสบายใจได้

สำหรับการดำเนินการนี้ ผู้ใช้ต้องเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ผ่านสาย USB และเลือกตัวเลือก "พอร์ต COM"

หมายเหตุ: ติดตั้ง PC Suite โดยใช้ CD ที่ให้มาด้วย และทำตามคำแนะนำการติดตั้ง เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สาย USB และเลือกตัวเลือก "พอร์ต COM"

อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้
เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

แบตเตอรี่
มาตรฐาน



อะแดปเตอร์
สำหรับ
ชาร์จ
แบตเตอรี่



ชุดหูฟัง



สาย
เคเบิล
ขอมูล/
ซีดี



หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามขอแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน เลขที่ 72/127 ถ. สมเด็จ
พระเจ้าตากสิน แขวงบุดคโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ: จันทร์-อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

|

|

—

—

—

—

|

|

LG-S310 User Guide - English

This manual may differ from the phone depending on the phone software version and service provider used.

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program.

In return, you will receive one additional month of warranty for free.

One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Contents

Guidelines for safe and efficient use	4	My business card	16
Installing the SIM card and the handset battery	9	Log.....	16
Installing the SIM Card	9	Call log	16
Illustrations	9	Missed calls	16
Installing a Memory Card.....	10	Received calls.....	16
Phone Components.....	11	Dialled numbers.....	16
Menu Tree.....	13	Call duration	16
Messaging.....	14	Packet data counter.....	17
Create message	14	Call costs	17
Inbox	14	Settings	17
My mailbox.....	14	Profiles	17
Create new e-mail address	14	Display	17
Drafts	14	Date & time	17
Outbox	14	Connectivity	17
Sent items.....	14	Call	17
Saved items.....	15	Phone	19
Emoticons	15	Network.....	20
SOS message.....	15	Internet profiles.....	20
Message settings.....	15	Access points	20
Contacts	15	Packet data conn.....	20
Names	15	Security	20
Settings	15	Memory info	21
Groups	16	Restore factory settings.....	21
Speed dials.....	16	Gallery	21
Service dial numbers	16	My memory card	21
Own number	16	My images	21
		My sounds.....	21
		My videos.....	22

My games & apps	22	PC Sync	27
Others	22	Phone Software update.....	27
Media.....	22	Accessories	28
Camera	22	Technical data.....	29
Video.....	22	Troubleshooting.....	30
Music.....	22		
FM radio.....	22		
Voice recorder	22		
Ringtone creator	22		
Organiser.....	23		
Alarm clock	23		
Calendar.....	23		
To-do list	23		
Notes	23		
Secret notes	23		
Calculator	23		
Stopwatch	24		
Date finder	24		
Converter.....	24		
World time	24		
Go to.....	24		
Applications.....	24		
Web	25		
Home	25		
Bookmarks	25		
Go to address.....	25		
Social network	25		


Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.

- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.

- Risk of explosion if battery is replaced by an incorrect type.
 - Dispose off used batteries according to the manufacturer's instructions.
- Exposure to radio frequency energy**
- Radio wave exposure and Specific Absorption Rate (SAR) information**
- This mobile phone model LG-S310 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
 - While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
 - The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.10W/kg (10g) and when worn on the body is 0.988W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery.
- 5 Attach the back cover.
- 6 Charge the battery.

Note: Fully charge the battery before using it for the first time.

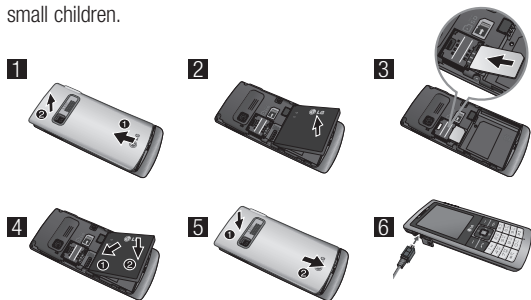


Installing a Memory Card


Remove the battery cover. Push the memory card inside with the gold contact facing upward.



To remove the memory card, gently push it as shown in the diagram.

Note: A memory card is an optional accessory.

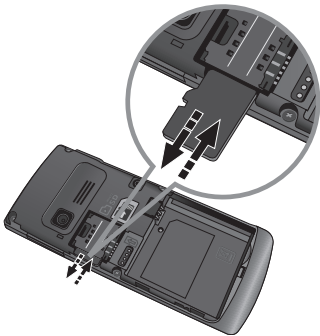

Phone Components

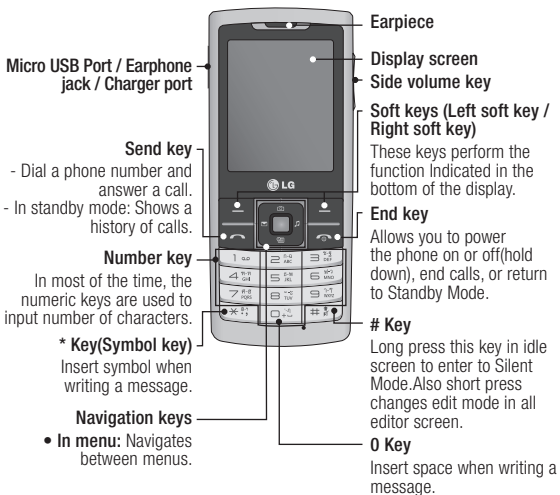

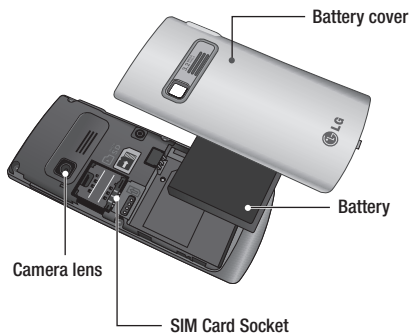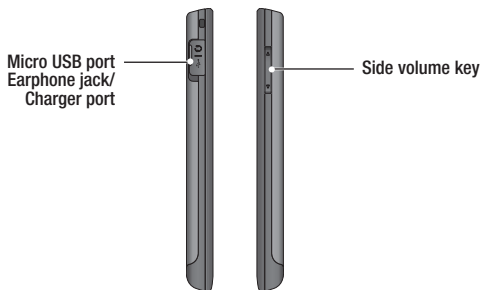

Menu Tree

1. Messaging

- Create message
- Inbox
- My mailbox
- Create new e-mail address
- Drafts
- Outbox
- Sent items
- Saved items
- Emoticons
- SOS message
- Message settings

2. Contacts

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

3. Log

- Call log
- Missed calls
- Received calls
- Dialled numbers
- Call duration
- Packet data counter
- Call costs

4. Settings

- Profiles
- Display
- Date & time
- Connectivity
- Call
- Phone
- Network
- Internet profiles
- Access points
- Packet data conn.
- Security
- Memory info
- Restore factory settings

5. Gallery

- My memory card
- My images
- My sounds
- My videos
- My games & apps
- Others

6. Media

- Camera
- Video
- Music
- FM radio
- Voice recorder
- Ringtone creator

7. Organiser

- Alarm clock
- Calendar
- To-do list
- Notes
- Secret notes
- Calculator
- Stopwatch
- Date finder
- Converter
- World time
- Go to
- SIM services
- Settings

8. Applications

- My game & apps
- Settings

9. Web

- Home
- Bookmarks
- Social network
- Last web address
- Settings
- Go to address
- Saved pages

This section provides brief explanations of features on your phone.

Messaging

Create message

This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service).

Inbox

You will be alerted when you have received messages. They will be stored in Inbox.

My mailbox

My Email lets you get your favourite emails on your mobile for a fixed price each month.

Create new e-mail address

By selecting this menu, you will be directed to Hotmail portal, where you will be able to create Hotmail account.

Once you have created the account, you can set it up in the email setup wizard to receive Hotmail emails.

Drafts

You can save the message temporarily in Drafts.

Outbox

This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.

Sent items

After sending out the message, the text message or multimedia message is saved in the Sent folder.

Saved items

You can access your saved messages, text templates and multimedia templates.

Emoticons

A list of useful Emoticons, already written for a quick reply.

SOS message

An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 Key in the idle screen also it can be set from message menu using SOS sub menu. On long press of 9 key in the idle screen, a popup comes, 'Set SOS message?'. Press 'Yes' then set SOS message ON , then type the required message and input maximum 3 numbers in the recipient list for which you want to send the message in emergency mode and press Done.

Message settings

This menu allows you to set features of your network service provider.

Contacts

Names

Select Search from Options and enter the name that you want to search from the contact list.

You can register a new contact address by selecting Add new contact from Options. You can enter the name, different phone numbers, email addresses, groups, image etc using add details option of a new contact.

Settings

You can set the contact list display,copy,move,send contacts via bluetooth,if SD card is inserted then backup and restore contacts also can clear contacts and check memory info.

Groups

You can add your contacts to any of the available groups.

Speed dials

You can assign any of the keys from 2 to 8 with a name and number list entry. You can call directly by pressing this key when you are in idle screen.

Service dial numbers

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

Own number

You can save and check your own number in SIM card.

My business card

This option allows you to create your own business card featuring name and any numbers.

Log

Call log

You can view lists of all outgoing or incoming calls.

Missed calls

You can view the unanswered calls.

Received calls

You can view the Received calls.

Dialled numbers

You can view the outgoing or attempted call numbers.

Call duration

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

Packet data counter

You can check the amount of data transferred over the network.

Call costs

View the charges applied to your Last call , All calls numbers and can set the limit of calls. Also you can do Cost Settings.

Settings

Profiles

You can adjust and customize the phone tones for different events, or environments.

Display

You can change settings for the phone display.

Date & time

You can set functions relating to the date and time.

Connectivity

Bluetooth - You can adjust setting on BT connection.

USB Connection Mode - You can transfer files from/to a compatible PC to the memory in your phone using the Mass Storage Mode.

Call

You can set the menu relevant to a call.

Call divert - The Call divert service allows you to divert incoming voice calls to another number. For details, contact your service provider.

All voice calls: Diverts voice calls unconditionally.

When busy: Diverts voice calls when the User is in another call.

No answer: Diverts voice calls when you do not answer.

Not reachable: Diverts voice calls when the phone is switched off or out of coverage.

Call barring - The call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password.

Fixed dial numbers - You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

Turn On: You can restrict your outgoing calls to selected phone numbers.

Call waiting

Activate: If you select Activate, you can accept a waiting (receiving) call.

Deactivate: If you select Cancel, you cannot recognize the waiting (receiving) call.

View status: Shows the status of Call waiting.

Call reject

Call Reject On/Off: You can set whether to reject incoming calls.

- **Off:** Disables Automatic call reject.

- **Reject on List:** Only rejects target numbers in the list you set. You can set the reject list using Reject List menu.

- **Reject All Calls:** Rejects all calls on list.

Or Else User can set Reject list by selecting Contacts, Groups, Unregistered & No caller ID.

Send my number

Set by network:

On: You can send your phone number to another party. Your phone number will be shown on the receiver's phone.


Off: Your phone number will not be shown.

Auto redial

On: When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

Off: Your phone will not make any attempts to redial when the original call has not connected.

Answer mode

Press send key: If you select this menu, you can receive a call by only pressing the  key.

Press any key: If you select this menu, you can receive a call by pressing any key except the end key and the right soft key.

Free call timer - This menu allows keep track of free call minutes. Once you enter the minutes available, the device will keep track of free minutes. The device will automatically start subtracting minutes that you've used when you're in a phone call.

Minute minder - Determines whether to sound when you are on the call for every selected minute.

BT answer mode - Select Hands-free to be able to answer a call using a Bluetooth headset, or select Handset to press a key on the handset to answer a call.

Save new number - Select Yes to save a new number.

Voice clarity - Minimizes surrounding noise when you're in a phone call. Select On or Off.

Phone

Allows you to set the phone.

Auto key lock - You can make the key pad locked automatically after some time.

Language - You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Power save - Choose among the followings, Off/Auto/Always On, to change the factory set power saving settings.

Handset information - Shows your phone number, model number and S/W version.

Network

You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Internet profiles

This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

Access points

This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

Packet data conn.

If you select the 'When available' option, your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Security

This menu allows you to set the phone's safety.

PIN code request - You can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

Handset lock - You can use a security code to avoid unauthorized use of the phone.

Lock if SIM in changed - Set the lock function if SIM changed.

Anti-theft mobile tracker - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.

Change codes - PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code, Anti-theft code.

Memory info

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Restore factory settings

You can initialize all factory defaults. You need Security code to activate this function.

Gallery

My memory card

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it.

My images

Shows the list of image files.

My sounds

Saved audio files are displayed in the list.

My videos

Displays the list of video files.

My games & apps

You can access a great selection of games and applications on your phone.

Others

When you receive files of an undefined format via email, the files are saved in this folder.

Media

Camera

You can take photos with the built in camera and adjust its settings to suit your needs.

Video

You can record a video clip through the built-in camera.

Music

Using the songs in your phone, you can easily enjoy various music.

FM radio

You can listen to FM radio with your external earphone.

Tips: Your phone supports wireless FM radio.

Voice recorder

You can record voice memo.

Ringtone creator

This function allows you to create your own personal ringtones by using this tool.

Organiser

Alarm clock

You can set five alarm clocks to go on at a specified time.

Calendar

You can see the calendar and add hundred events here in selected date.

To-do list

You can view, edit and add hundred tasks to do.

Notes

You can add fifty new notes, view and manage saved notes.

Secret notes

You can add fifty secret notes. You need to enter the security code to use this menu to protect your secret notes privacy.

Calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

You can also use the available functions like Sin, Cos, tan, log, ln, exp, %, x^2 , x^y , sqrt, +/-, deg and rad.

Stopwatch

This option allows you to use the function of a stopwatch.

Date finder

You can count the target date by adding(After) days.

Converter

This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume, Velocity.

World time

The World time function provides time information on major cities worldwide.

Go to

It helps you to go to the menu you search for. You can set the item as Go to.

Applications

Your LG-S310 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press Menu and select Applications. Choose My games & apps.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Web


Home

Connects to a homepage.
The homepage will be the site which is defined in the activated profile.

Bookmarks

This menu allows you to store the URL of favorite web pages for easy access at a later time.

Go to address

You can connect directly to the site you want. After entering a specific URL, press  key to make the connection done to connect to the site.

Social network

Social network services

(SNS) - Your LG-S310 has SNS that lets you enjoy and manage your social network.

Select **Social network** menu and select the site as below:
Facebook, Twitter

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall** > **Status updates** and write the current status. See your info detail and upload the photo by selecting **Album** > **Upload Photo**.

Saved pages - Allows you to view your saved web pages.

Last web address - This menu shows the history of recently browsed pages.

Settings - You can set the profile, appearance settings cache and security related to internet service.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

For this User have to connect Mobile with PC through USB cable and Select the option “Data Service”.

Note: Install PC Suite using CD provided and follow the Installation Guide. Connect Mobile with PC through USB cable and Select the option “Data Service”.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp>
----> select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Travel Adapter



Headset



Data cable & CD



NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

LG Service Center

by LG Electronics (Thailand) Co. Ltd. 72/127 Somdetprachaw
Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press Power on key to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error— Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error— Wrong charger	Only use original LG accessories.
Charging error— Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.

Problem	Possible Solution
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	<p>Be sure that you have pressed Talk/Yes key.</p> <p>Be sure that you have accessed the right network service.</p> <p>Be sure that you have not set an outgoing call barring option.</p> <p>Be sure that you have entered the area code.</p>
Your correspondent cannot reach you	<p>Be sure that your phone is switched on.</p> <p>Press Talk/Yes key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.</p>

Troubleshooting

Problem	Possible Solution
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.

