



ไทย  
ENGLISH

คู่มือการใช้  
LG-S365



P/NO : MFL67234904(1.0)

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B017835

# LG-S365 คู่มือการใช้ - ไทย

คู่มือการใช้อาจแตกต่างจากตัวเครื่องขึ้นอยู่กับเวอร์ชันซอฟต์แวร์โทรศัพท์และผู้ให้บริการที่ใช้

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้ถือการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบ จากตลาดลักลอบนำเข้าสินค้า รวมถึงเพื่อให้เห็นใจลูกค้าที่ได้รับบริการทางด้านบริการประกันสินค้าอย่างเป็นทางการ

เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในขอความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบ ผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถทราบได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

## สารบัญ

สารบัญ.....	2
คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ .....	4
การใส่ซิมการ์ดและการชาร์จแบตเตอรี่ .....	9
การใส่ซิมการ์ด .....	9
การใส่การ์ดหน่วยความจำ .....	10
ส่วนประกอบตัวเครื่อง ..	11
การเปิดหรือปิดเครื่อง.....	13
การโทรออก .....	13
การโทรออกระหว่างประเทศ .....	13
การรับสาย.....	13
การเลือกฟังก์ชันและตัวเลือกต่างๆ.....	14
การป้อนข้อความ .....	15
โหมด T9 .....	15
โหมด 123 (โหมดตัวเลข) ;.....	15
โหมดสัญลักษณ์ .....	15
แจ้งเครื่องหาย (ATMT).....	16
เครือข่ายสังคม .....	17
แผนผังเมนู .....	18
แอปพลิเคชัน .....	19
เกมส์ & แอปฯ .....	19

ตั้งค่า.....	19
บันทึกการโทร .....	19
บันทึกการโทร.....	19
สายไม่ได้รับ .....	19
สายที่ได้รับ.....	19
เบอร์ที่ติดต่อ.....	19
เวลาโทร.....	20
ตัวนับข้อมูลแพ็คเกจ.....	20
ค่าโทร.....	20
สมุดบันทึก .....	20
นาฬิกาปลุก .....	20
ปฏิทิน .....	20
รายการสิ่งที่ต้องทำ .....	20
บันทึก .....	21
บันทึกกลับ .....	21
ตัวค้นหาวันที่ .....	21
ไปที่.....	21
เครื่องคิดเลข .....	21
จับเวลา.....	21
แปลงหน่วย .....	21
เวลาทั่วโลก.....	22
มีเดีย.....	22
กล้องถ่ายรูป .....	22
วิดีโอ.....	22
เพลง.....	22
วิทยุ FM.....	22
บันทึกเสียง.....	23

สร้างริงโทน .....	23	เบอร์ส่วนตัว .....	27
<b>ข้อความ .....</b>	<b>24</b>	นามบัตร.....	27
สร้างข้อความ .....	24	<b>SNS.....</b>	<b>28</b>
ถอดเข้า.....	24	Facebook .....	28
ร่าง .....	24	Twitter .....	28
ถอดออก .....	24	<b>อินเตอร์เน็ต.....</b>	<b>28</b>
รายการที่ส่ง.....	24	<b>Messenger .....</b>	<b>28</b>
รายการที่บันทึกไว้.....	25	<b>ตั้งค่า.....</b>	<b>29</b>
ข้อความลับ .....	25	ซิมการ์ดคู่.....	29
อีโมติคอน .....	25	โปรไฟล์.....	29
ตั้งค่าข้อความ .....	25	หน้าจอ .....	29
<b>คลังภาพ .....</b>	<b>25</b>	วันที่และเวลา .....	29
การ์ดความจำ .....	25	เชื่อมต่อ.....	29
ภาพ.....	25	โทร .....	31
เสียงส่วนตัว .....	26	โทรศัพท์.....	34
วิดีโอ.....	26	ระบบป้องกัน .....	34
อื่นๆ .....	26	โหมด SOS.....	35
กล่องความลับ .....	26	ข้อมูลความจำ .....	36
<b>อีเมล .....</b>	<b>26</b>	เรียกคืนการตั้งค่า .....	36
สมัครแอดเดสส์ .....	26	<b>PC ซิงค์.....</b>	<b>37</b>
อื่นๆ .....	26	<b>อุปกรณ์เสริม .....</b>	<b>38</b>
<b>รายชื่อ.....</b>	<b>27</b>	<b>ข้อมูลทางเทคนิค .....</b>	<b>39</b>
รายชื่อ.....	27		
ตั้งค่า.....	27		
กลุ่ม .....	27		
โทรด่วน.....	27		
เบอร์บริการ.....	27		

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมมีอธิบายอยู่ในคู่มือเล่มนี้

### คำเตือน

- เพื่อความปลอดภัยของคุณ โปรดใช้แต่แบตเตอรี่และเครื่องชาร์จของแท้ที่กำหนดให้เท่านั้น
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ เช่น ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์
- ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมายกำหนด

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์



#### คำเตือน:

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นอาจทำให้การชาร์จหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นตอมมีการตรวจสอบ การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพโดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน

- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลายใดๆ)
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตรหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

### อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ

### ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับขี่ช้าลงทางแล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

### บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บขึ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายเซลลูลาร์บางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่

- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว

## การรับพลังงานคลื่นความถี่วิทยุ

### ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-S365 นี้ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเผื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคน

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีกำลังรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนักสิบ (10) กรัม

- ค่า SAR  
สูงสุดสำหรับโทรศัพท์รุ่นนี้  
ซึ่งทำการทดสอบโดย  
DASY4 ขณะถือแนบกับหูคือ  
1.26 วัตต์/กก. (10 กรัม)  
และเมื่อพกพาไว้กับตัวคือ  
1.30 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR  
สำหรับผู้ที่อยู่ในประเทศ/  
พื้นที่ที่ยอมรับขอจำกัด  
SAR ซึ่งแนะนำโดย  
Institute of Electrical and  
Electronics Engineers  
(IEEE) คือ 1.6 วัตต์/กก.  
โดยเฉลี่ยต่อเนื่องเยื่อหนึ่ง  
(1) กรัม

# การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

## การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการ  
เครือข่ายโทรศัพท์เคลื่อน  
ที่ คุณจะได้รับ ซิมการ์ด  
พลาสติกอินทิเกรตรายละเอียด  
การสมัครขอรับบริการ เช่น  
PIN ของคุณ บริการเสริม  
ที่มีให้เลือกใช้ได้ และอื่นๆ  
**ข้อสำคัญ!** ซิมการ์ด  
พลาสติกและขั้วสัมผัสอาจ  
ชำรุดเสียหายได้ง่ายหาก  
ถูกขูดขีดหรือหักงอ ดังนั้น  
จึงควรใช้งาน ใส่ หรือถอด  
การด้วยความระ  
มัดระวัง เก็บซิมการ์ด

ทั้งหมดให้พ้นมือเด็กเล็ก

**ภาพประกอบ** โปรดปิด  
อุปกรณ์และเลิกการเชื่อม  
ต่อกับเครื่องชาร์จก่อนถอด  
แบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ประกอบฝาครอบด้านหลัง
- 6 ชาร์จแบตเตอรี่

**หมายเหตุ:** ชาร์จแบต  
เตอรี่ให้เต็มก่อนการใช้งาน  
ครั้งแรก



## การใส่การ์ดหน่วยความจำ

ยกฝาปิดการ์ดหน่วยความจำขึ้น และใส่การ์ด microSD โดยให้พื้นที่หน้าสัมผัสสีทองคว่ำลง ปิดฝาปิดการ์ดหน่วยความจำจนเข้าที่

ในการถอดการ์ดหน่วยความจำ ให้ดันที่การ์ดเบาๆ ดังแสดงในภาพ


หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม




## ส่วนประกอบตัวเครื่อง



ระดับเสียงด้านข้าง



พอร์ต Micro USB / ช่องเสียบเครื่องชาร์จ

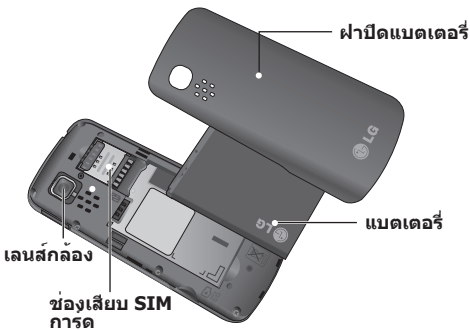

เลนส์กล้อง

ฝาปิดแบตเตอรี่



แบตเตอรี่

ช่องเสียบ SIM การัด



## การเปิดหรือปิดเครื่อง

1. กดปุ่มวางสายค้างไว้จนกว่าเครื่องจะเปิด
2. กดปุ่มวางสายค้างไว้จนกว่าเครื่องจะปิด



## การโทรออก

1. ป้อนหมายเลขโทรศัพท์รวมทั้งรหัสพื้นที่
2. กดปุ่ม  เพื่อโทรออก
3. หากต้องการวางสายให้กดปุ่ม 



## การโทรออกกระหว่างประเทศ

1. กดปุ่ม  ค้างไว้เพื่อเรียกรหัสการโทรออกต่างประเทศขึ้นที่หน้าจอ เครื่องหมาย '+' จะเลือกรหัสการโทรทางไกลต่างประเทศโดยอัตโนมัติ
2. ป้อนรหัสประเทศรหัสพื้นที่และหมายเลขโทรศัพท์
3. กดปุ่ม  [ส่ง] เพื่อโทรออก

## การรับสาย

1. เมื่อคุณมีสายเรียกเข้าโทรศัพท์จะดัง
2. หากตั้งค่า **รับได้ทุกปุ่ม** เป็น **โหมดตอบรับ** (ตั้งค่า > โทร > ตั้งค่าทั่วไป > โหมดตอบรับ) การกดปุ่มใดๆ จะรับสายเรียกเข้าทันที ยกเว้นปุ่มระดับเสียง (ปุ่มเลือกซ้าย/ปุ่มเลือกขวา) และปุ่ม 
3. หากต้องการวางสายให้กดปุ่ม 


## ข้อความปฏิเสธรับสาย:

ระหว่างการเตือนสายเรียกเข้า ให้กด RSK  เงียบแล้วกด LSK  ขอความเพื่อส่งข้อความอธิบายว่าเหตุใดคุณจึงไม่รับสายเรียกเข้า

## การเลือกฟังก์ชันและตัวเลือกต่างๆ

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณปรับแต่งโทรศัพท์ได้ โดยฟังก์ชันดังกล่าวนี้มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้โดยผ่านทางปุ่มเลือกสองปุ่ม **←** และ **→** เมนูและเมนูย่อยแต่ละเมนูช่วยให้คุณดูและเปลี่ยนแปลงการตั้งค่าของ

ฟังก์ชันเฉพาะได้ปุ่มเลือกอาจทำงานแตกต่างกันไปตามการใช้งานในขณะนั้น คุณสามารถดูการทำงานของปุ่มเลือกได้จากข้อความที่ปรากฏในบรรทัดล่างสุดของหน้าจอและอยู่เหนือปุ่มเลือกแต่ละปุ่ม

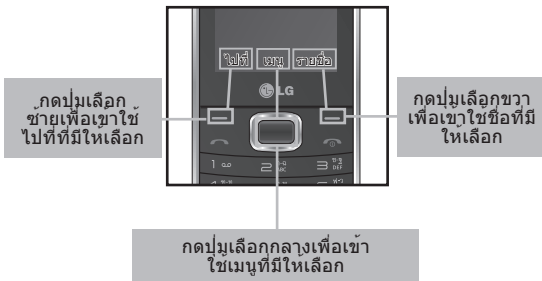

## การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์

### โหมด T9

โหมดการป้อนข้อความโดยใช้ระบบช่วยสะกดคำ T9 ช่วยให้คุณสามารถป้อนคำต่างๆ ได้อย่างง่ายดายด้วยการกดปุ่มน้อยครั้งที่สุด เมื่อคุณกดปุ่มแต่ละครั้ง โทรศัพท์จะเริ่มแสดงตัวอักษรที่คุณกำลังพิมพ์ โดยอ้างอิงตามพจนานุกรมในเครื่อง

### โหมด 123 (โหมดตัวเลข)

พิมพ์ตัวเลขโดยกดปุ่มค้างไว้

### โหมดสัญลักษณ์

โหมดสัญลักษณ์ช่วยให้คุณป้อนสัญลักษณ์หรือตัวอักษรพิเศษต่างๆ ในการป้อนสัญลักษณ์ให้เลือก **ตัวเลือก** → **แทรกสัญลักษณ์** ใช้ปุ่มนาฬิกาเพื่อเลือกสัญลักษณ์ที่ต้องการและกดปุ่ม **ตกลง**

## แจ้งเครื่องหาย (ATMT)

การแจ้งเครื่องหาย (ATMT) ให้คุณสามารถติดตามโทรศัพท์ที่สูญหายได้ เมื่อมีผู้อื่นใช้โทรศัพท์ของคุณโดยไม่ได้รับอนุญาต บริการการติดตามจะเปิดใช้งาน

คุณจะได้รับแจ้งเตือนด้วยข้อความตัวอักษรที่ส่งไปยังหมายเลขโทรศัพท์เริ่มต้นที่คุณตั้งไว้โดยที่ผู้ใช้ที่ไม่ได้รับอนุญาตไม่รู้ คุณสามารถเปิดใช้ ATMT ได้ตลอดเวลา และกำหนดการตั้งค่าส่วนตัวของคุณ

ในการเปิดใช้การแจ้งเครื่องหาย

1. จากเมนูหลัก เลือก **ตั้งค่า > ระบบป้องกัน > แจ้งเครื่องหาย(ATMT) และกด เลือก > ป้อนรหัสป้องกัน > เลือก ตกลง**
2. เลือก **ตั้งค่าป้องกันขโมย**
3. **เปิด หรือ ปิด และกด เลือก**
4. เลือกตัวเลือกชื่อผู้ส่งและรายการหมายเลขที่ส่งเพื่อกำหนด

ค่า ATMT โดยใช้ชื่อหมายเลขโทรศัพท์หลัก หมายเลขโทรศัพท์ของ ATMT SMS จะมีข้อความเกี่ยวกับ IMEI ของโทรศัพท์ที่ถูกขโมย และหมายเลขของคุณที่กำลังใช้เครื่องดังกล่าว

**หมายเหตุ:** รหัส ATMT เป็นค่าเริ่มต้นคือ "0000" คุณต้องป้อนรหัสก่อนจะกำหนดการตั้งค่า ATMT

**หมายเหตุ:** ล็อคแอปพลิเคชัน - เพื่อป้องกันการใช้แอปพลิเคชันในโทรศัพท์โดยไม่ได้รับอนุญาต คุณสามารถล็อคแอปพลิเคชันได้โดยผู้ใช้ต้องป้อนรหัสผ่านเมื่อเขาใช้งานแอปพลิเคชัน รหัสผ่านจะเหมือนกับรหัสความปลอดภัย (รหัสผ่านเริ่มต้นคือ 0000)

## เครือข่ายสังคม

โทรศัพท์ LG-S365 มี SNS (บริการเครือข่ายสังคม) ที่ให้คุณสนุกสนานและจัดการเครือข่ายสังคมของคุณได้ คุณสามารถเข้าใช้เมนูเครือข่ายสังคมได้สองวิธี

1. จากเมนู ไปที่ **SNS > Facebook และ Twitter**
2. จากหน้าจอไม่ได้ใช้งาน > ปุ่มนาฬิกาขึ้น

จากนั้นเลือก SNS ทางด้านล่าง:

### **Facebook News Feed:**

ลือกอินด้วยแอคเคาท์ Facebook และดู Feed จากเพื่อนๆ

### **สถานะ Facebook:**

ลือกอินด้วยแอคเคาท์ Facebook และอัปเดตสถานะของคุณ

### **Twitter News Feed:**

ลือกอินด้วยแอคเคาท์ Twitter และสามารถดูทวีตจากเพื่อนๆ ได้

### **สถานะ Twitter:**

ลือกอินด้วยแอคเคาท์ Twitter และอัปเดตสถานะของคุณ

**หมายเหตุ:** คุณสมบัติ SNS เป็นแอปพลิเคชันที่ใช้ข้อมูลจำนวนมาก เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## แผนผังเมนู

- 1. แอปพลิเคชัน**  
เกมส์ & แอปฯ  
ตั้งค่า
- 2. บันทึกการโทร**  
บันทึกการโทร  
สายไม่ได้รับ  
สายที่ได้รับ  
เบอร์ที่ติดต่อ  
เวลาโทร  
ตัวนับข้อมูลแพ็คเกจ  
ค่าโทร
- 3. สมุดบันทึก**  
นาฬิกาปลุก  
ปฏิทิน  
รายการสิ่งที่ต้องทำ  
บันทึก  
บันทึกกลับ  
ตัวค้นหาวันที่  
ไปที่  
เครื่องคิดเลข  
จับเวลา  
แปลงหน่วย  
เวลาทั่วโลก
- 4. มีเดีย**  
กล้องถ่ายรูป  
วิดีโอ  
เพลง  
วิทยุ FM  
บันทึกเสียง  
สร้างริงโทน
- 5. ข้อความ**  
สร้างข้อความ  
ถอดเขา  
ร่าง  
ถอดออก  
รายการที่ส่ง  
รายการที่บันทึกไว้  
ขอความลับ  
อีโมติคอน  
ตั้งค่าข้อความ
- 6. คลังภาพ**  
การวัดความจำ  
ภาพ  
เสียงส่วนตัว  
วิดีโอ  
อื่นๆ  
กลองความลับ
- 7. อีเมล**  
รับแอดเคาท์  
อื่นๆ
- 8. รายชื่อ**  
รายชื่อ  
ตั้งค่า  
กลุ่ม  
โทรด่วน  
เบอร์บริการ  
เบอร์ส่วนตัว  
นามบัตร
- 9. SNS**  
Facebook  
Twitter
- 10. อินเทอร์เน็ต**
- 11. Messenger**  
Messenger-MSN  
Messenger-Y!
- 12. ตั้งค่า**  
ซิงการคูด  
โปรไฟล์  
หน้าจอ  
วันที่และเวลา  
เชื่อมต่อ  
โทร  
โทรศัพท์  
ระบบป้องกัน  
โหมด SOS  
ข้อมูลความจำ  
เรียกคืนการตั้งค่า

## แอปพลิเคชัน

### เกมส์ & แอปฯ

โทรศัพท์ LG-S365 มาพร้อมกับเกมส์เพื่อช่วยให้คุณเพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติมไฟล์เหล่านั้นจะถูกบันทึกลงในโฟลเดอร์นี้

**หมายเหตุ:** ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้ โปรดสอบถามข้อมูลการคิดค่าบริการจ่ายกับผู้ใช้บริการเครือข่ายของคุณ

### ตั้งค่า

คุณสามารถตั้งโปรไฟล์และดูข้อมูลระบบป้องกันที่เกี่ยวข้องกับเกมส์และแอปพลิเคชันได้

## บันทึกการโทร

### บันทึกการโทร

คุณสามารถดูรายการสายโทรออกหรือสายเรียกเข้าทั้งหมดได้

### สายไม่ได้รับ

คุณสามารถดูสายที่ไม่ได้รับได้

### สายที่ได้รับ

คุณสามารถดูสายที่รับได้

### เบอร์ที่ติดต่อ

คุณสามารถดูหมายเลขสายโทรออกและที่พยายามโทรออกได้

## เวลาโทร

ช่วยให้คุณสามารถดูระยะเวลาของสายที่โทรเข้าและโทรออกได้ และยังสามารูรู้ขีดตัวจับเวลาการโทรได้ใหม่อีกด้วย

## ตัวนับข้อมูลแพ็คเกจ

คุณสามารถตรวจสอบจำนวนข้อมูลที่รับส่งบนเครือข่ายได้

## ค่าโทร

ดูค่าโทรที่เรียกเก็บสำหรับการโทรล่าสุดของคุณ, หมายเลขการโทรทั้งหมด และสามารถตั้งค่าขีดจำกัดการโทรได้ คุณยังสามารถตั้งค่าการโทรได้ด้วย

## สมุดบันทึก

### นาฬิกาปลุก

คุณสามารถตั้งนาฬิกาปลุกให้ทำงานเมื่อถึงเวลาที่ระบุได้หาเวลา

### ปฏิทิน

คุณสามารถดูปฏิทินและเพิ่มเหตุการณ์ที่นี้ในวันที่เลือกได้รยรายการ

### เคล็ดลับ:

ผู้ใช้สามารถกำหนดเวลาส่ง SMS เพื่อให้สามารถส่งไปยังหมายเลข/รายชื่อที่กำหนดไว้ในวันที่และเวลาที่ตั้งค่าไว้ได้จากรายการตัวเลือกปุ่มเลือกซ้าย ■

## รายการสิ่งที่ต้องทำ

คุณสามารถดู แก๊ไขและเพิ่มงานที่จะทำได้รยรายการ

## บันทึก

คุณสามารถเพิ่มบันทึกใหม่ได้หลายรายการ ดูและจัดการบันทึกที่มีอยู่

## บันทึกกลับ

คุณสามารถป้อนบันทึกกลับได้หลายรายการ คุณต้องป้อนรหัสป้องกันเพื่อใช้เมนูนี้เพื่อปกป้องความเป็นส่วนตัวของบันทึกกลับของคุณ

## ตัวค้นหาวรรณที่

คุณสามารถนับวันที่เป้าหมายได้โดยการเพิ่ม (หลัง) จำนวนวัน

## ไปที่

ช่วยให้คุณตรงไปยังเมนูที่ค้นหา คุณสามารถตั้งรายการเป็น ไปที่

## เครื่องคิดเลข

เครื่องคิดเลขมีฟังก์ชันการคำนวณพื้นฐาน: บวก, ลบ, คูณ และหาร  
คุณยังสามารถใช้ฟังก์ชันที่มีอยู่ เช่น Sin, Cos, tan, log, ln, exp, %,  $x^2$ ,  $x^y$ , sqrt, +/-, deg และ rad

## จับเวลา

ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันจับเวลาได้

## แปลงหน่วย

ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ ประเภทของหน่วยวัดที่สามารถแปลงเป็นหน่วยต่างๆ ได้นั้นมีหลายประเภท: สกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร, ความเร็ว

## เวลาโลก

ฟังก์ชันเวลาโลกจะแสดง  
ข้อมูลเวลาของเมืองใหญ่  
ทั่วโลก

## มีเดีย

### กล้องถ่ายรูป

คุณสามารถถ่ายภาพด้วย  
กล้องถ่ายรูปที่อยู่ในตัว  
โทรศัพท์ และปรับการ  
ตั้งค่าของกล้องได้ตาม  
ความต้องการ

### วิดีโอ

คุณสามารถบันทึกวิดีโอ  
โอคลิปด้วยกล้องถ่าย  
รูปในตัวได้

### เพลง

ในการเข้าใช้งานเครื่องเล่น  
เพลง ให้ไปที่ **มีเดีย**>  
เพลง จากขั้นตอนนี้  
คุณสามารถเข้าใช้งาน  
เมนูต่างๆ ดังนี้:

**เล่นล่าสุด** - เล่นเพลง  
ที่คุณเล่นล่าสุด

**ทุกเพลง** - มีเพลงที่  
คุณมีในโทรศัพท์ยกเว้น  
เพลงเริ่มต้นที่โหลดลง  
หน้า

**รายการเล่น** - ประกอบ  
ด้วยรายการเล่นที่คุณ  
สร้างไว้

**ศิลปิน** - เบราวส์ดูราย  
การเพลงที่เก็บไว้ตาม  
ศิลปิน

**อัลบั้ม** - เบราวส์ดูรายการ  
เพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบราวส์ดูราย  
การเพลงที่เก็บไว้ตาม  
แนวเพลง

**สับเปลี่ยนแทร็ค** -  
เล่นแทร็คแบบสุ่มลำดับ

### วิทยุ FM

คุณสามารถฟังวิทยุ FM  
โดยไขชุดหูฟังภายนอก  
ซึ่งคุณภาพจะดีขึ้น

## การค้นหาสถานี


คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก

ในการปรับตั้งอัตโนมัติ:

1. เลือก สแกนอัตโนมัติ จากตัวเลือก ขอความยั่งยืนจะปรากฏขึ้น เลือก ใช่ เครื่องจะค้นหาสถานีวิทยุที่มีอยู่โดยอัตโนมัติ และกำหนดไว้ที่ของสถานีในโทรศัพท์

**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ปุ่มนารีเกด

## การบันทึกวิทยุ

1. ในขณะที่ฟังวิทยุ หากคุณต้องการบันทึกเทคดปุม  [บันทึก]
2. เวลาบันทึกจะปรากฏบนโทรศัพท์ของคุณ หากคุณต้องการหยุดการบันทึก ให้กดหยุด หากการบันทึกเสร็จสิ้น ข้อมูลที่บันทึกจะถูกบันทึกไว้ที่ คลังภาพ ในรูปแบบไฟล์ MP3

## บันทึก FM ล่วงหน้า

คุณสามารถบันทึก FM จากสองสามวินาทีก่อนกดปุ่มบันทึกได้

## บันทึกเสียง

คุณสามารถบันทึกเสียงเตือนได้

## สร้างริงโทน

ฟังก์ชันนี้ช่วยให้คุณสร้างเสียงเรียกเขาสวนตัวของคุณด้วยไฟล์ mp3 ที่มีอยู่

## ข้อความ

### สร้างข้อความ

เมนูนี้มีฟังก์ชันที่เกี่ยวข้องกับ SMS (Short Message Service) และ MMS (Multimedia Message Service)

**เคล็ดลับ:** คุณสามารถส่ง SMS ไปยังรายชื่อหลายคนได้ในครั้งเดียว จากตัวเลือก "ส่ง" จะเปิดรายชื่อที่ผู้ใช้สามารถเลือก/ไม่เลือกรายชื่อในการส่งข้อความ โดยสามารถเลือกได้ 20 รายชื่อเท่านั้น และหากผู้ใช้เลือกเลือกทั้งหมด จะเลือก 20 รายชื่อแรกเท่านั้น ในการส่ง SMS ไปยังกลุ่มของรายชื่อ ให้เลือกตัวเลือก 'กลุ่มรายชื่อ' จากตัวเลือกส่ง

## ถอดเข้า

เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้า โดยข้อความเหล่านี้จะถูกจัดเก็บในถาดเข้า

**เคล็ดลับ:** ข้อความสามารถเรียงได้โดยใช้ตัวเลือก การเรียงที่ระบุเพื่อให้เข้าถึงข้อความได้ง่าย (เรียง, วันที่ และผู้ส่ง)

## ร่าง

คุณสามารถบันทึกข้อความชั่วคราวไว้ในร่างได้

## ถอดออก

โพลเดอร์ที่เก็บข้อความที่ยกเลิกและข้อความที่พยายามส่งแล้วและข้อความที่ส่งไม่สำเร็จเป็นการชั่วคราว

## รายการที่ส่ง

หลังจากส่งข้อความออก ความล้มเหลวหรือข้อความล้มเหลวจะถูกรับที่กในโพลเดอร์ ส่งแล้ว

## รายการที่บันทึกไว้

คุณสามารถเข้าถึงข้อความที่บันทึกไว้, SMS อัดโน้มนัด และ MMS อัดโน้มนัดได้

## ข้อความลับ

คุณสามารถเพิ่มข้อความลับได้หาสิบลรายการ คุณต้องป้อนรหัสป้องกันเพื่อใช้เมนูนี้เพื่อปกป้องความเป็นส่วนตัวของข้อความลับของคุณ

## อีโมติคอน

รายการอีโมติคอนที่เป็นประโยชน์ที่ใดเขียนไว้แล้วสำหรับคำตอบกลับแบบรวดเร็ว

## ตั้งค่าข้อความ

เมนูนี้ช่วยคุณตั้งค่าคุณสมบัตินิวทริการเครือข่าย

**ดูแบบสนทนา** - ตามค่าเริ่มต้น มุมมองสนทนาจะปรากฏขึ้นเมื่อคุณเปิดข้อความหนึ่งในการสนทนา ข้อความที่เกี่ยวข้องของทั้งหมดจะซ้อนกันอย่างเป็นระเบียบเหมือนกับ

ไฟ เราเรียกว่ามุมมองสนทนาคุณสามารถเปลี่ยนการตั้งค่า

นี้เป็นมุมมองมาตรฐานได้โดยใช้เมนูการแสดงในการดำเนินการให้ไปที่ ตั้งค่าขอความ >การแสดง

**ข้อความแฟลช** - ข้อความที่ส่งเป็นข้อความแฟลชจะมองเห็นโดยผู้รับได้ทันที

## คลังภาพ

### การัดความจำ

หากโทรศัพท์มีการัดหน่วยความจำในช่องใส่การัด คุณสามารถบันทึกภาพ, เสียง และวิดีโอไว้ในการัดได้

### ภาพ

แสดงรายการไฟล์ภาพ

## เสียงส่วนตัว

ไฟล์วีดีโอที่บันทึกไว้  
จะแสดงในรายการ

## วีดีโอ

แสดงรายการไฟล์วีดีโอ

## อื่นๆ

เมื่อคุณได้รับไฟล์ที่มีรูปแบบที่ไม่ได้กำหนดไว้  
ไฟล์ทั้งหมดที่ไม่ใช่เสียง/  
วีดีโอ/ภาพจะถูกบันทึก  
ไว้ในโฟลเดอร์นี้

## กล่องความลับ

คุณสามารถเพิ่มข้อมูลลับ  
ได้ คุณต้องป้อนรหัสป้องกัน  
กันเพื่อใช้เมนูเพื่อปกป้อง  
ความเป็นส่วนตัวของข้อมูล  
ของคุณ ให้ทำตามขั้นตอน  
ต่อไปนี้: ไปที่ภาพ เสียง  
หรือไฟล์ใดๆ > ตัวเลือก  
> ย้ายไปยังกล่องความลับ

## อีเมล

หากคุณยังไม่มีแอคเคาท์  
จะขอให้คุณตั้งค่าแอคเคาท์  
สามารถตั้งค่าแอคเคาท์  
Hotmail หรือแอคเคาท์อื่นๆ

## รับแอคเคาท์

เชื่อมต่อโดยตรงกับ  
เซิร์ฟเวอร์ Hotmail

## อื่นๆ

แอคเคาท์อื่นๆ เช่น  
Gmail

**เคล็ดลับ:** หากกำหนด  
ค่าไว้แล้วมากกว่าหนึ่ง  
แอคเคาท์ จะแสดง  
รายการแอคเคาท์  
ให้คุณสามารถเลือกเพื่อ  
ดูถัดเขาได้หากมี  
เพียงแอคเคาท์เดียว  
จะแสดงรายการของเมล  
ที่มีอยู่ในถัดเขา

## รายชื่อ

### รายชื่อ

เลือกตัวเลือกค้นหาจาก  
และป้อนชื่อที่คุณต้องการ  
ค้นหาจากรายชื่อ

คุณสามารถลงทะเบียนที่  
อยู่รายชื่อใหม่โดยเลือก  
เพิ่มผู้ติดต่อใหม่จากตัว  
เลือก คุณสามารถป้อนชื่อ,  
หมายเลขโทรศัพท์อื่น,  
อีเมลแอดเดรส, กลุ่ม, ภาพ  
 ฯลฯ โดยใช้ตัวเลือกเพิ่ม  
รายละเอียดของรายชื่อใหม่

### ตั้งค่า

คุณสามารถตั้งค่าการแสดง  
รายชื่อ, คัดลอก, ย้าย,  
ส่งรายชื่อทางบลูทูธ,  
สำรองและเรียกคืนรายชื่อ  
หากใส่การ์ด  
SD และลบรายชื่อ  
และตรวจสอบข้อมูล  
หน่วยความจำ

### กลุ่ม

คุณสามารถเพิ่มรายชื่อใน  
กลุ่มที่มีอยู่ได้

### โทรด่วน

คุณสามารถกำหนดปุ่ม  
ปุ่มหนึ่งจาก 2 ถึง 8  
ให้กับรายการชื่อและหมายเลข  
ได้ หากคุณอยู่ที่หน้าจอ  
เมื่อไม่ได้ใช้งาน คุณสามารถ  
โทรได้ทันทีโดยกดปุ่มนี้

### เบอร์บริการ

ใช้ฟังก์ชันนี้เพื่อเข้าดูราย  
การบริการที่ผู้ให้บริการ  
ระบบของคุณให้บริการ  
(หากซิมการ์ดสนับสนุน)

### เบอร์ส่วนตัว

คุณสามารถบันทึกและตรวจ  
สอบหมายเลขส่วนตัวของ  
คุณในซิมการ์ดได้

### นามบัตร

ตัวเลือกนี้ใช้เพื่อสร้างนาม  
บัตรส่วนตัวที่มีชื่อและ  
หมายเลข

## SNS

### Facebook

**โสม:** ล็อกอินและคุณจะได้เห็นสถานะที่อัปเดตของเพื่อนๆ ของคุณ ป้อนความเห็นของคุณเกี่ยวกับสถานะใหม่และตรวจสอบดูอื่นๆ

**โปรไฟล์:** คุณสามารถเลือก กระดาน > การอัปเดตสถานะ และเขียนสถานะปัจจุบัน ดูรายละเอียดข้อมูลและอัปโหลดภาพถ่ายโดยเลือก อัปโหลด > อัปโหลดรูปภาพ

### Twitter

Twitter คือบริการเครือข่ายสังคมที่ให้คุณส่งและอ่านข้อความของผู้ใช้คนอื่นๆ ที่เรียกว่าทวีต

**หมายเหตุ:** คุณสมบัติ SNS เป็นแอปพลิเคชันที่ใช้ข้อมูลจำนวนมากเมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

### อินเทอร์เน็ต

เมนูอินเทอร์เน็ตให้คุณดูโสมเพจของผู้ให้บริการและดาวน์โหลดเพลง วิดีโอ และแอปพลิเคชันต่างๆ ได้

### Messenger

มีแอปพลิเคชันสนทนา MSN และ Yahoo ซึ่งคุณสามารถล็อกอินด้วยแอคเคาท์ MSN และ Yahoo ของคุณได้

## ตั้งค่า

### ซิมการ์ดคู่

โทรศัพท์ของคุณสนับสนุนโหมดซิมการ์ดคู่ ช่วยให้คุณสามารถใช้สองซิมการ์ดได้พร้อมกันโดยไม่ต้องมีการเปลี่ยน เมื่อมีการติดตั้งสองซิมการ์ด คุณสามารถเปิดใช้ซิมการ์ดอันใดอันหนึ่งหรือทั้งคู่ได้

**เคล็ดลับ:** ซิมการ์ดคู่เดียว: ในขณะที่หนึ่งในซิมการ์ดกำลังใช้งานกับเครือข่าย เช่น WAP/JAVA/MMS/โทรศัพท์ อีกซิมหนึ่งจะไม่สามารถใช้บริการที่เกี่ยวข้องกับเครือข่ายได้

### โปรไฟล์

คุณสามารถปรับและกำหนดเสียงโทรศัพท์เองได้สำหรับเหตุการณ์และสภาพแวดล้อมต่างๆ

## หน้าจอ

คุณสามารถเปลี่ยนการตั้งค่าหน้าจอของโทรศัพท์ได้

### วันที่และเวลา

คุณสามารถตั้งค่าฟังก์ชันที่เกี่ยวข้องกับวันที่และเวลาได้

### เชื่อมต่อ

**Wi-Fi** - ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) คุณสามารถสนุกสานกับอินเทอร์เน็ตได้สายด้วย Wi-Fi โดยไม่มีค่าบริการเพิ่มเติม

**บลูทูธ** - คุณสามารถปรับการตั้งค่าในการเชื่อมต่อ BT ได้

**โหมดเชื่อมต่อ USB** - คุณสามารถถ่ายโอนไฟล์จาก/ไปยังคอมพิวเตอร์ที่ใช้ร่วมกันได้ไปยังหน่วยความจำในโทรศัพท์โดยใช้โหมดที่เก็บข้อมูล

**ตั้งค่าเครือข่าย** -  
คุณสามารถตั้งค่าเลือก  
เครือข่าย และโหมด  
เครือข่ายโดยใช่เมนูนี้  
คุณสามารถ  
เพิ่มเครือข่ายที่ต้องการ  
เชื่อมต่อใน  
รายการที่ต้องการได้ด้วย  
**โปรไฟล์อินเทอร์เน็ต** -  
เมนูนี้แสดงโปรไฟล์อิน  
เทอร์เน็ต คุณสามารถสร้าง  
โปรไฟล์ใหม่ ลบ หรือแก้ไข  
โปรไฟล์โดยใช่เมนูตัวเลือก  
อย่างไรก็ตาม คุณไม่  
สามารถลบหรือแก้ไขการ  
กำหนดค่าเริ่มต้นได้  
**เชื่อมต่ออินเทอร์เน็ต** -  
เมนูนี้แสดงการตั้งค่าการ  
เชื่อมต่อสำหรับอินเทอร์เน็ต,  
MMS และการเชื่อมต่อ  
Wi-Fi และข้อมูลจุด  
เชื่อมต่อ คุณยังสามารถสร้าง  
โปรไฟล์ใหม่ ลบหรือแก้ไข  
โปรไฟล์โดยใช่เมนูตัวเลือก

**จุดเชื่อมต่อ** -  
เมนูนี้จะแสดงรายการจุด  
เชื่อมต่อ คุณสามารถ  
สร้างโปรไฟล์ใหม่  
ลบ หรือแก้ไขโปรไฟล์  
โดยใช่เมนูตัวเลือก  
**เครือข่ายข้อมูลซิม** -  
คุณสามารถตั้งค่าเลือก  
ซิม (ซิม 1 หรือซิม 2)  
ที่จะสร้างการเชื่อมต่อ  
เครือข่ายข้อมูลได้  
**โรมมิ่งข้อมูล** -  
คุณสามารถตั้งค่าเปิด/  
ปิดโรมมิ่งข้อมูลได้  
เมื่อเปิดโรมมิ่งข้อมูล  
การเตือน "อาจมีค่าใช้จ่าย  
ข้อมูลโรมมิ่ง  
ดำเนินการต่อ?"  
ปรากฏขึ้นในเครือข่าย  
โรมมิ่ง หากตั้งค่าเปิด  
โรมมิ่งข้อมูลและผู้ใช้  
เข้าสู่เครือข่ายโรมมิ่ง  
แอปพลิเคชันที่ใช้ข้อมูล  
(อินเทอร์เน็ต/Java/SNS/  
Widget) จะถูกบล็อก

### **การเตือนค่าใช้จ่ายข้อมูล**

- จะมีค่าใช้จ่ายข้อมูลเมื่อเชื่อมต่ออินเทอร์เน็ต คุณสามารถตั้งค่าเปิด/ปิดการเตือนค่าใช้จ่ายข้อมูลได้ หากเปิดการเตือนค่าใช้จ่ายข้อมูล "อาจมีค่าใช้จ่ายข้อมูลดำเนินการต่อ?" จะปรากฏขึ้น

### **โทร**

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องของการโทรได้

#### **ซิม 1, ซิม 2**

**การโอนสาย:** บริการโอนสายให้คุณโอนสายสนทนาเรียกเข้าไปยังหมายเลขอื่นได้ โปรดติดต่อผู้ให้บริการระบบของคุณเพื่อขอทราบรายละเอียด

- **สายเข้าทั้งหมด:** โอนสายเรียกเข้าทุกสาย
- **เมื่อไม่ว่าง:** โอนสายเมื่อผู้ใช้กำลังใช้สายอื่น

#### • **ไม่รับสาย:**

โอนสายสนทนาเมื่อคุณไม่รับสาย

- **ติดต่อไม่ได้:** โอนสายเรียกเข้าเมื่อปิดเครื่องหรืออยู่นอกพื้นที่ให้บริการ

**ป้องกันการโทร:** บริการป้องกันการโทรนี้จะป้องกันไม่ให้โทรศัพท์ของคุณโทร

ออกหรือรับสายบางประเภทได้ ฟังก์ชันนี้ต้องใช้รหัสการป้องกันการโทร

#### **กำหนดเบอร์โทรออก:**

คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้ หมายเลขเหล่านั้นจะได้รับการป้องกันไว้ด้วยรหัส PIN2

- **เปิด:** คุณสามารถจำกัดการโทรออกไปยังหมายเลขโทรศัพท์ที่เลือกไว้ได้

**บันทึกล่วงหน้า:** คุณสามารถบันทึกเสียงในสายจากสองสามวินาทีก่อนกดปุ่มบันทึกได้

### **สายเรียกซ้อน**

- **เปิดใช้:** หากคุณเลือกเปิดใช้ คุณสามารถรับสาย (เรียกเขา) ซ้อนได้
- **เลิกใช้:** หากคุณเลือกยกเลิก คุณจะไม่สามารถทราบได้ว่ามีสาย (เรียกเขา) ซ้อนที่กำลังรออยู่
- **ดูสถานะ:** แสดงสถานะของสายเรียกซ้อน

### **ส่งหมายเลขตัวเอง**

- **ตั้งตามระบบ:** เรียกการตั้งค่าเริ่มต้นจากเคือข่าย (เปิดหรือปิด) และจะแสดง/ซ่อนหมายเลขโทรศัพท์ของคุณที่โทรศัพท์ของผู้รับ

### **โทรซ้ำอัตโนมัติ**

- **เปิด:** เมื่อใช้งานฟังก์ชันนี้ เครื่องจะพยายามหมุนทวนหมายเลขที่โทรไม่ติดโดยอัตโนมัติ
- **ปิด:** เครื่องจะไม่หมุนทวนหมายเลขซ้ำเมื่อไม่สามารถต่อสายนั้นได้ในครั้งแรก

**เวลาโทรฟรี:** เมนูนี้ช่วยติดตามจำนวนนาทีของการโทรฟรี เมื่อคุณป้อนจำนวนนาทีที่มีอยู่ เครื่องจะติดตามจำนวนนาทีที่ฟรีเครื่องจะเริ่มต้นลบจำนวนนาทีที่คุณใช้เมื่อคุณใช้สายโทรออก

**เตือนทุกนาที:** กำหนดว่าจะส่งเสียงขณะสนทนาทางโทรศัพท์ทุกจำนวนนาทีที่เลือก

**บันทึกเบอร์ใหม่:** เลือก ใช้เพื่อบันทึกหมายเลขใหม่

### **ตั้งค่าทั่วไป**

#### **โหมดตอบรับ**

- **กดปุ่มรับสาย:** หากคุณเลือกเมนูนี้ คุณสามารถรับสายเรียกเขาด้วยการกดปุ่ม 

- **รับได้ทุกปุ่ม:**  
หากเลือกเมนูนี้  
คุณสามารถรับสายเรียก  
เข้าด้วยการกดปุ่มใดก็ได้  
ยกเว้นปุ่มระดับเสียงด้าน  
ข้าง ปุ่มเลือก (ปุ่มเลือก  
ซ้าย/ปุ่มเลือกขวา)  
และปุ่มวางสาย

**โหมดตอบรับ BT** - เลือก  
แฮนด์ฟรีเพื่อรับสายโดยใช้  
ชุดหูฟังบลูทูธ หรือเลือกตัว  
เครื่องเพื่อกดปุ่มที่ตัวเครื่อง  
เพื่อรับสาย

**รายการปฏิเสธการโทร** -  
เมนูนี้แสดงหมายเลข  
โทรศัพท์ของคุณที่คุณ  
เลือกปฏิเสธ คุณสามารถ  
เพิ่มหมายเลขใหม่ได้โดย  
ใช้ปุ่มเพิ่มสายเรียกเข้าที่มา  
จากหมายเลขในรายการ  
ปฏิเสธการโทรจะถูกปฏิเสธ  
โดยอัตโนมัติ

ในบันทึกการโทร ไอคอน  
ปฏิเสธจะปรากฏขึ้นสำหรับ  
สายดังกล่าว

**ตั้งเวลาโทร** - สายโทร  
ออกจะตัดสายอัตโนมัติหลัง  
จากระยะเวลาที่ตั้งไว้ ผู้ใช้  
สามารถเริ่มต้นการโทรตาม  
กำหนดเวลาได้จากเมนูตัว  
เลือก (ผู้ติดต่อ, บันทึกการ  
โทร, หมายขอโทรออก)  
หากใช้การโทรตามกำหนด  
เวลาใน

ตั้งค่า>การตั้งค่าทั่วไป>  
ตั้งเวลาโทร

**การโทรเข้าตัวเอง** -  
การโทรเข้าตัวเองจะเริ่มต้น  
สายเรียกเข้าจริง กด '#\*#'   
ในหมายขอหลักเพื่อโทร  
เข้าตัวเอง  
โดยไม่เสียค่าบริการ

## โทรศัพท์

ให้คุณตั้งค่าโทรศัพท์

**ล็อคปุ่มอัตโนมัติ** - คุณสามารถล็อคปุ่มกดอัตโนมัติหลังจากไม่ใช้งานสักครู่

**ภาษา** - คุณสามารถเปลี่ยนภาษาที่แสดงข้อความบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดป้อนภาษาด้วย

**สถานะแบตเตอรี่** - แสดงเวลาเสถียรที่เหลืออยู่โดยประมาณ เวลาการโทรที่เหลืออยู่จากสถานะแบตเตอรี่ปัจจุบัน

**ข้อมูลเครื่อง** - แสดงหมายเลขโทรศัพท์, หมายเลขรุ่น และเวอร์ชัน S/W ของคุณ

## ระบบป้องกัน

เมนูนี้ช่วยให้คุณตั้งค่าความปลอดภัยของโทรศัพท์ได้

**ขอรหัส PIN** - คุณสามารถตั้งค่าโทรศัพท์ให้ถามรหัส PIN ของซิมการ์ดของคุณเมื่อเปิดใช้เครื่องโทรศัพท์

**ล็อคเครื่อง** - คุณสามารถใช้รหัสล็อคตัวเครื่องเพื่อป้องกันการใช้โทรศัพท์ของคุณโดยไม่ได้รับอนุญาต

**ล็อคหากเปลี่ยนซิม** - ตั้งค่าฟังก์ชันล็อคหากเปลี่ยนซิม

**แจ้งเครื่องหาย(ATMT)** - คุณสมบัติ ATMT ของโทรศัพท์รุ่นนี้ช่วยให้คุณสามารถใช้ระบบการติดตามตรวจสอบตำแหน่งของโทรศัพท์มือถือในกรณีที่คุณทำหายหรือวางไว้ผิดที่

**ล็อคแอปพลิเคชัน** - เพื่อป้องกันการใช้แอปพลิเคชันในโทรศัพท์โดยไม่ได้รับอนุญาต คุณสามารถล็อค

แอปพลิเคชันได้โดยผู้ใช้ต้องป้อนรหัสผ่านเมื่อเขาใช้งานแอปพลิเคชัน รหัสผ่านจะเหมือนกับรหัสความปลอดภัย (รหัสผ่านเริ่มต้นคือ 0000)

**เปลี่ยนรหัส - PIN** ย่อมาจาก Personal Identification Number ซึ่งเป็นรหัสที่ใช้ในการป้องกันการใช้โทรศัพท์โดยบุคคลที่ไม่ได้รับอนุญาต คุณสามารถเปลี่ยนรหัสการเข้าใช้เครื่อง: ใส่รหัส NP, รหัส PIN, รหัส PIN2, รหัสป้องกันขโมย

## **โหมด SOS**

**ตั้งโหมด SOS** - ใช้โหมด SOS หลังจากใช้แล้ว หากคุณกดปุ่ม 9 ครั้งไว้ในหน้าจอไม่ได้ใช้งาน ขอความช่วยเหลือ SOS จะถูกส่งและโทรศัพท์จะอยู่ในโหมด Sos

**ข้อความ** - ในสถานการณ์ฉุกเฉินโทรกด '9' ครั้งไว้เพื่อเปลี่ยนเป็นโหมด SOS โดยในโหมด SOS จะมีการส่งข้อความ SOS ไปยังผู้รับที่กำหนดไว้และจะรับสายเรียกเขาจากผู้รับดังกล่าวโดยอัตโนมัติ เสียงเตือนทั้งหมดจะถูกปิด ในการออกจากโหมด SOS โหมดปุ่มวางสายที่หน้าจอหลัก

**รายชื่อผู้รับ** - รายชื่อผู้รับที่จะส่งข้อความ SOS และระหว่างโหมด SOS จะรับสายเรียกเขาจากหมายเลขเหล่านี้เท่านั้น

**ช่วยเหลือ** - รายละเอียดเพิ่มเติมเกี่ยวกับโหมด SOS อยู่ที่นี้

## **ข้อมูลความจำ**

คุณสามารถตรวจสอบพื้นที่ว่างและการใช้หน่วยความจำของโทรศัพท์ ซิมการ์ด และหน่วยความจำภายนอก (หากใส่ไว้) ได้

## **เรียกคืนการตั้งค่า**

คุณสามารถกลับไปเริ่มใช้ค่าทั้งหมดที่ตั้งมาจากโรงงานได้ คุณต้องใช้รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้

## PC ซิงค์

คุณสามารถซิงค์โครนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณเพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

สำหรับการดำเนินการนี้ ผู้ใช้ต้องเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ผ่านสาย USB และเลือกตัวเลือก "PC suite"

หมายเหตุ: ติดตั้ง **PC Suite** โดยใช้ **CD** ที่ให้มาด้วย และทำตามคำแนะนำการติดตั้ง

## อัปเดตซอฟต์แวร์โทรศัพท์

**การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต**

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดู <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> ----> เลือกประเทศ

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันล่าสุดได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ

## อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้  
เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อะแดปเตอร์สำหรับ  
ชาร์จแบตเตอรี่



คู่มือการใช้  
เรียนรูเพิ่มเติม  
เกี่ยวกับโทรศัพท์  
LG-S365



แบตเตอรี่  
มาตรฐาน



สายเคเบิล  
ลขมุล/  
ซีดี



ชุดหูฟัง



### หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามขอแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

## **ข้อมูลทางเทคนิค**

### **อุณหภูมิแวดล้อม**

**สูงสุด:** +55°C (คายประจุ) +45°C (ขณะชาร์จ)

**ต่ำสุด:** -10°C

### **ศูนย์บริการ LG โดย บริษัท แอลจี อิเลคทรอนิกส์ (ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน เลขที่ 72/127

ถ.สมเด็จพระเจ้าตากสิน แขวงบุคคโล เขตธนบุรี  
กรุงเทพฯ 10600

วันและเวลาทำการ: จันทร์-อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757







# LG-S365 User Guide - English

This manual may differ from the phone depending on the phone software version and service provider used.

## **Product Authentication program**

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program.

In return, you will receive one additional month of warranty for free.

One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

# Contents

<b>Guidelines for safe and efficient use .....</b>	<b>4</b>
<b>Installing the SIM card and the handset battery .....</b>	<b>9</b>
Installing the SIM Card .....	9
Illustrations .....	9
<b>Installing a Memory Card.....</b>	<b>10</b>
<b>Phone Components.....</b>	<b>11</b>
Turning Your Phone On and Off .....	13
Making a call .....	13
Making an international call ..	13
Answering a call .....	13
<b>Selecting functions and options.....</b>	<b>14</b>
<b>Entering Text .....</b>	<b>15</b>
T9 Mode .....	15
123 Mode .....	15
(Numbers Mode) .....	15
Symbol Mode .....	15
<b>Anti Theft Mobile Tracker (ATMT) .....</b>	<b>16</b>
<b>Social network .....</b>	<b>17</b>
<b>Menu Tree.....</b>	<b>18</b>
<b>Applications.....</b>	<b>19</b>
My games & apps .....	19
Settings.....	19
<b>Log.....</b>	<b>19</b>

Call log.....	19
Missed calls .....	19
Received calls.....	19
Dialled numbers.....	19
Call duration .....	20
Packet data counter.....	20
Call costs .....	20
<b>Organiser .....</b>	<b>20</b>
Alarm clock .....	20
Calendar.....	20
To-do list .....	20
Notes .....	20
Secret notes .....	21
Date finder .....	21
Go to.....	21
Calculator .....	21
Stopwatch .....	21
Converter.....	21
World time.....	21
<b>Media.....</b>	<b>22</b>
Camera .....	22
Video.....	22
Music .....	22
FM radio.....	22
Voice recorder .....	23
Ringtone creator .....	23
<b>Messaging .....</b>	<b>23</b>
Create message .....	23
Inbox .....	24
Drafts .....	24

Outbox .....	24	<b>Internet.....</b>	<b>28</b>
Sent items .....	24	<b>Messenger.....</b>	<b>28</b>
Saved items.....	24	<b>Settings .....</b>	<b>28</b>
Secret message.....	25	Dual SIM .....	28
Emoticons .....	25	Profiles .....	28
Message settings.....	25	Display .....	28
<b>Gallery .....</b>	<b>25</b>	Date & time .....	29
My memory card .....	25	Connectivity .....	29
My images .....	25	Call .....	30
My sounds.....	25	Phone .....	33
My videos.....	25	Security .....	33
Others .....	26	SOS mode .....	34
Secret box .....	26	Memory info .....	35
<b>E-mail.....</b>	<b>26</b>	Restore factory settings .....	35
Get an Account.....	26	<b>PC Sync .....</b>	<b>36</b>
Others .....	26	<b>Phone Software update .....</b>	<b>36</b>
<b>Contacts .....</b>	<b>26</b>	<b>Accessories.....</b>	<b>37</b>
Names .....	26	<b>Technical data.....</b>	<b>38</b>
Settings .....	27	<b>Troubleshooting.....</b>	<b>39</b>
Groups .....	27		
Speed dials .....	27		
Service dial numbers .....	27		
Own number .....	27		
My business card .....	27		
<b>SNS.....</b>	<b>27</b>		
Facebook .....	27		
Twitter .....	28		


## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### Warning

- For your safety, use **ONLY** specified **ORIGINAL** batteries and chargers.
- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

### Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.

- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

### **Electronic devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

## **In aircraft**

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.

## **Children**

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

## **Emergency calls**

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## **Battery information and care**

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.

- Risk of explosion if battery is replaced by an incorrect type.
  - Dispose off used batteries according to the manufacturer's instructions.
- Exposure to radio frequency energy**
- Radio wave exposure and Specific Absorption Rate (SAR) information**
- This mobile phone model LG-S365 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
  - While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
  - The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.

- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.26W/kg (10g) and when worn on the body is 1.30W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery.
- 5 Attach the back cover.
- 6 Charge the battery.

**Note:** Fully charge the battery before using it for the first time.

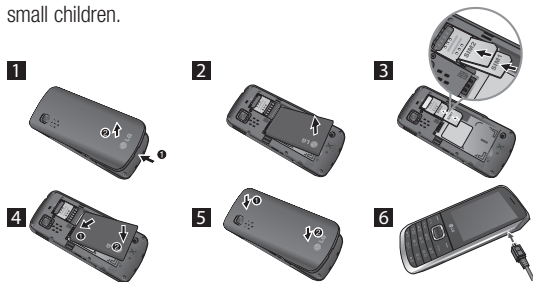

## Installing a Memory Card


Remove the battery cover. Push the memory card inside with the gold contact facing downward.



To remove the memory card, gently push it as shown in the diagram.

**Note:** A memory card is an optional accessory.



## Phone Components

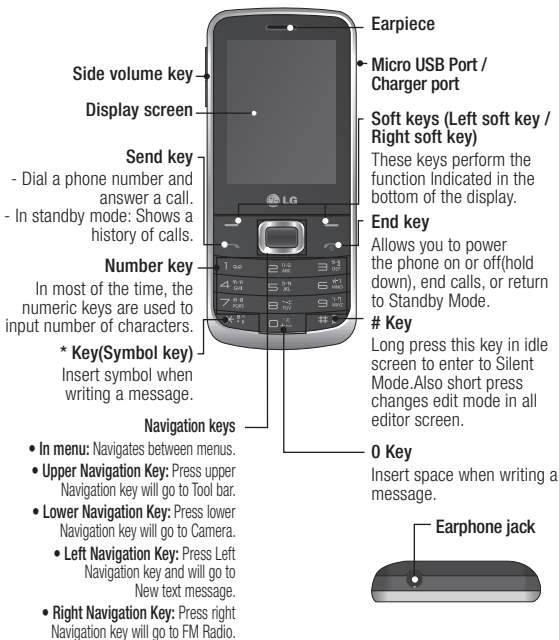

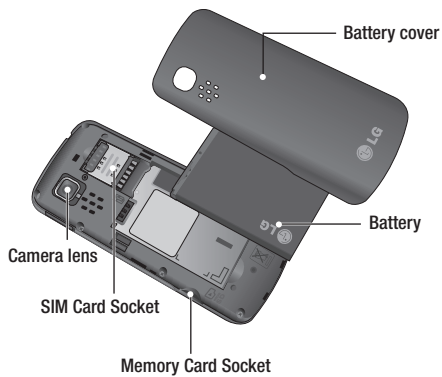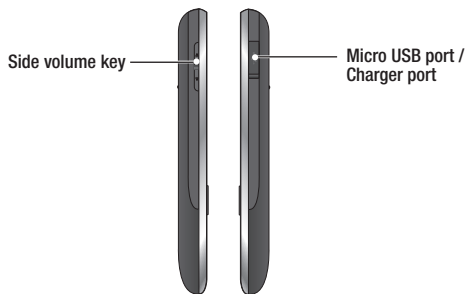




## Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

## Making a call



1. Enter a phone number including the area code.
2. Press the  key to call the number.
3. To end the call, press the  key.



## Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.

2. Enter the country code, area code, and the phone number.
3. Press  [Send] key to call the number.

## Answering a call


1. When you receive a call, the phone rings.
2. If the **Press any key** has been set as the **Answer mode** (Settings > Call > Common setting > Answer mode), any key press will answer a call except for Side volume keys, Soft keys (Left soft key/Right soft key) and  key.
3. To end the call, press the  key.

**SMS On Call Reject:** During Incoming call alert press RSK  silent then press LSK  message, to send a message to explain why you do not answer an incoming call.

## Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked **Go to** and **Names**. Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

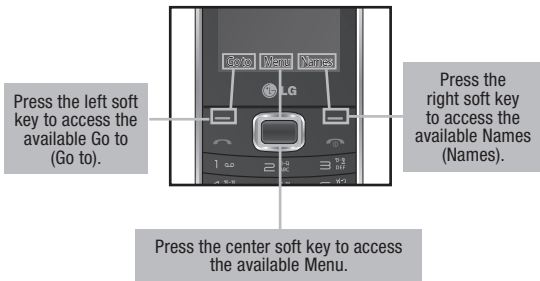

## Entering Text

You can enter alphanumeric characters by using the phone's keypad.

### T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

### 123 Mode (Numbers Mode)

Type numbers by pressing and holding the button keys.

### Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol**. Use the navigation keys to select the desired symbol and press the OK key.

## Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security > Antitheft mobile tracker** and press **Select > Enter Security Code > Select OK**.
2. Select **Set Anti-theft**.
3. Switch **On** or **Off** and press **Select**.
4. Select Sender name & Sending number list options to configure the ATMT

settings with name, primary phone number, secondary number. ATMT SMS will contain information about the stolen phone IMEI, & number of the person who is using that handset.

**Note:** The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

**Note:** Application lock - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).

## Social network

Your LG-S365 has SNS (Social Networking Services) that lets you enjoy and manage your social network. You can access Social Network Menu in two ways.

1. From Menu go to **SNS**  
>**Facebook** and **Twitter**.
2. From Idle Screen >  
Navigation Up Key.

Then select the SNS as below:

**Facebook News Feed:** Login with Facebook account and can view feeds from friends.

**Facebook Status:** Login with Facebook account and update your status.

**Twitter News Feed:** Login with Twitter account and can view tweets from friends.

**Twitter Status:** Login with Twitter account and update your status.

**Note:** SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

# Menu Tree

## 1. Applications

- My games & apps
- Settings

## 2. Log

- Call log
- Missed calls
- Received calls
- Dialled numbers
- Call duration
- Packet data counter
- Call costs

## 3. Organiser

- Alarm clock
- Calendar
- To-do list
- Notes
- Secret notes
- Date finder
- Go to
- Calculator
- Stopwatch
- Converter
- World time

## 4. Media

- Camera
- Video
- Music
- FM radio
- Voice recorder
- Ringtone creator

## 5. Messaging (Standard View)

- Create message
- Inbox
- Drafts
- Outbox
- Sent items
- Saved items
- Secret message
- Emoticons
- Message settings

## 6. Gallery

- My memory card
- My images
- My sounds
- My videos
- Others
- Secret box

## 7. E-mail

- Get an Account
- Others

## 8. Contacts

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

## 9. SNS

- Facebook
- Twitter

## 10. Internet

### 11. Messenger

- Messenger-MSN
- Messenger-Y!

### 12. Settings

- Dual SIM
- Profiles
- Display
- Date & time
- Connectivity
- Call
- Phone
- Security
- SOS mode
- Memory info
- Restore factory settings

## Applications

### My games & apps

Your LG-S365 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

**Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

### Settings

You can set the profile and view the security information related to games and applications.

## Log

### Call log

You can view lists of all outgoing, incoming and missed calls.

### Missed calls

You can view the unanswered calls.

### Received calls

You can view the Received calls.

### Dialled numbers

You can view the outgoing or attempted call numbers.

## Call duration

Allows you to view the duration of your Dialed and Received calls. You can also reset the call timers by entering default security code.

## Packet data counter

You can check the amount of data transferred over the network.

## Call costs

View the charges applied to your Last call, All calls and can set the limit of calls. Also you can do Cost Settings.


## Organiser

### Alarm clock

You can set five alarm clocks to go on at a specified time.

### Calendar

You can see the calendar and add hundred events here in selected date.

**Tips:** User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time from Left soft key  option list > New scheduled SMS.

### To-do list

You can view, edit and add hundred tasks to do.

### Notes

You can add fifty new notes, view and manage saved notes.

## Secret notes

You can add fifty secret notes. You need to enter the security code to use this menu to protect your secret notes privacy.

## Date finder

You can count the target date by adding(After) days.

## Go to

It helps you to go to the menu you search for. You can set the item as Go to.

## Calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. You can also use the available functions like Sin, Cos, tan, log, ln, exp, %,  $x^2$ ,  $x^y$ , sqrt, +/-, deg and rad from Options (LSK).

## Stopwatch

This option allows you to use the function of a stopwatch.

## Converter

This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume, Velocity.

## World time

The World time function provides time information on major cities worldwide.

## Media

### Camera

You can take photos with the built in camera and adjust its settings to suit your needs.

### Video

You can record a video clip through the built-in camera.

### Music

To access the music player, Go to Media>Music. From here, you can access a number of menus:

**Recently played** - Plays the songs you have played recently.

**All songs** - Contains the songs you have on your phone except the pre-loaded default music.

**Playlists** - Contains all the playlists you have created.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Shuffle tracks** - Play your tracks in a random order.

### FM radio

Your phone supports Wireless FM radio service. For better quality you can listen to FM radio with your external earphone.

#### Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning.

To auto tune:

1. Select Auto scan from Options. A confirmation message appears. Select Yes, then the stations will be automatically found and allocated to a channel in your phone.

**Note:** You can also manually tune into a station by using the navigation key.

### Recording the Radio

1. While listening to the radio if you want to record press  (CSK) [Rec] button.
2. The recording time is displayed on your phone. If you want to stop the recording, press Stop. If recording is done, the recorded contents will be saved in Gallery as mp3 file.

### FM Pre-recording

From Options (LSK) > Recording settings > Pre-recording, You can record FM From few seconds before press the record button.

### Voice recorder

You can record voice memo.

### Ringtone creator

This function allows you to create your own ringtones with the existing mp3 files.

## Messaging

### Create message

This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service).

**Tips:** You can send SMS to many contacts at a time.

From Options select “Send via”, it will open the Recently used, Call log and Contacts list, from where user can mark/unmark contacts for sending the message. Only 20 contacts can be marked and if user select Mark all, only first 20 contacts will be marked. User can enter contact numbers manually by selecting the option ‘Enter manually’.

To send the SMS to a particular group of contacts select ‘Contact groups’ Option from Send/Add (CSK) option Or else select the ‘Contact groups’ option from ‘send via’ options.

## **Inbox**

You will be alerted when you have received messages. They will be stored in Inbox.

**Tips:** Messages can be sorted with the given sorting options for an easy access of messages

(subject, Date, and sender).

## **Drafts**

You can save the message temporarily in Drafts.

## **Outbox**

This is a temporary storage folder for the cancelled messages and the messages that has been tried to send and the messages which are not successfully sent.

## **Sent items**

After sending out the message, the text message or multimedia message is saved in the Sent folder.

## **Saved items**

You can access your saved messages, text templates and multimedia templates.

## Secret message

You can add secret message. You need to enter the security code to use this menu to protect your secret message privacy.

## Emoticons

A list of useful Emoticons, already written for a quick reply.

## Message settings

This menu allows you to set features of your network service provider.

**View style** - By default Standard view is displayed. You can change this setting to conversation View using View style menu. To do so, go to Message > Settings > View style. When you open one message in a conversation view, all of your related messages will be stacked neatly, like a deck of cards.

**Flash SMS** - Message that is sent as Flash SMS will be viewed by the receiver immediately.

## Gallery

### My memory card

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it.

### My images

Shows the list of image files.

### My sounds

Saved audio files are displayed in the list.

### My videos

Displays the list of video files.

## Others

When you receive files of an undefined format, all the files other than audio/video/images are saved in this folder.

## Secret box

You can add secret data. You need to enter the security code to use this menu to protect your secret data privacy. In order to hide your data go through following step:

Go to any image, sound or any file > Options > Move > Secret box.

## E-mail

If you have no Account it will ask for account set up.

Hot mail account and other account set up are available.

## Get an Account

It directly connects to the hotmail server.

## Others

Any account like Gmail

**Tips:** If more than one account are already configured, it gives the account list where you can select the view of the INBOX.

If only one account is present, it gives the list of mail present in INBOX.

## Contacts

### Names

Select Search from Options and enter the name that you want to search from the contact list.

You can register a new contact address by selecting Add new contact from Options. You can enter the name, different phone numbers, email address, groups, image etc using add details option of a new contact.

## Settings

You can set the contact list display, copy, move, send all contacts via bluetooth, if SD card is inserted then backup and restore contacts also can clear contacts and check memory info.

## Groups

You can add your contacts to any of the available groups.

## Speed dials

You can assign any of the keys from 2 to 8 with a name and number list entry. You can call directly by pressing this key when you are in idle screen.

## Service dial numbers

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

## Own number

You can save and check your own number in SIM card.

## My business card

This option allows you to create your own business card featuring name and any numbers.

## SNS

### Facebook

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others.

**Profile:** You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by selecting Album > Upload Photo.

## Twitter

Twitter is a social networking service which enables its users to send and read other users' messages called tweets.

**Note:** SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Internet

Internet menu allows you to browse the operator's homepage and downloading music, videos and applications.

## Messenger

It provides MSN and Yahoo chat applications. You can login with your MSN and Yahoo accounts.

## Settings

### Dual SIM

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards.

**Tips:** Dual SIM Single Talk : while one of Dual SIM is operating with network such like WAP/JAVA/MMS/Call, another SIM can not use network related service.

### Profiles

You can adjust and customize the phone tones for different events, or environments.

### Display

You can change settings for the phone display.

## **Date & time**

You can set functions relating to the date and time.

## **Connectivity**

**Wi-Fi** - With Wi-Fi, you can use highspeed internet access within the coverage of the wireless access point (AP). You can enjoy wireless internet with Wi-Fi, without extra charges.

**Bluetooth** - You can adjust setting on BT connection. You can transfer/receive the files to/from other handsets using Bluetooth.

**USB Connection Mode** - You can transfer files from/to a compatible PC to the memory in your phone using the Mass Storage Mode.

**Network settings** - You can set Network mode settings as Automatic/Manual by using this menu. Also you can add a preferable network to be

connected to Preferred lists.

**Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu.

**Internet access** - This menu displays the connection setting used for internet, MMS and Wi-Fi connection and access point information. you can create new profiles, delete or edit them using the option menu.

**Access points** - This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu.

**Data network SIM** - You can set the select SIM (SIM1 or SIM2) through which data network connection is established.

**Data roaming** - You can set Data roaming On/Off. When Data roaming is set On, the alert "Roaming data charges may apply.Continue?" is displayed in roaming network area.If the Data roaming is set Off and user enters roaming network,applications using data(Internet/Java/SNS/Widget) will be blocked.

**Data charges alert** - Data charge is applied when you connects to internet. You can set Data charges alert Always ask/Never Ask. If Data charges alert is set Always ask, "Data charges may apply. Continue?" is displayed.

## Call

You can set the menu relevant to a call.

### SIM1,SIM2

**Call divert:** The Call divert service allows you to divert incoming voice calls to another number. For details, contact your service provider.

- **All voice calls:** Diverts voice calls unconditionally.
- **When busy:** Diverts voice calls when the User is in another call.
- **No answer:** Diverts voice calls when you do not answer.
- **Not reachable:** Diverts voice calls when the phone is switched off or out of coverage.

**Call barring:** The call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password.

**Fixed dial numbers:** You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **Turn On:** You can restrict your outgoing calls to selected phone numbers.

**Pre-recording:** you can record the voice in call from some seconds before press the record button.

### Call waiting

- **Activate:** If you select Activate, you can accept a waiting (receiving) call.
- **Deactivate:** If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status:** Shows the status of Call waiting.

### Send my number

- **Set by network:** Get the default settings from the network and will either show/hide your phone number on the receiver's phone depends on network service..

**On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

**Off:** Your phone number will not be shown.

### Auto redial

- **On:** When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.
- **Off:** Your phone will not make any attempts to redial when the original call has not connected.


**Free call timer:** This menu allows keep track of free call minutes. Once you enter the minutes available, the device will keep track of free minutes. The device will automatically start subtracting minutes that you've used when you're in a phone call.

**Minute minder:** Determines whether to sound when you are on the call for every selected time period.

**Save new number:** Select Yes to save a new number.

## Common setting

### Answer mode

- **Press send key:** If you select this menu, you can receive a call by only pressing the  key.
- **Press any key:** If you select this menu, you can receive a call by pressing any key except the Side volume keys,

Soft keys(Left soft key/Right soft key) and End key.

**BT answer mode** - Select Hands-free to be able to answer a call using a Bluetooth headset, or select Handset to press a key on the handset to answer a call.

**Call rejection list** - This menu shows you the phone numbers of person you have chosen to reject. you can add the new number using add button. The incoming calls received from the Call rejection list numbers will be automatically rejected.

In call log, rejected icon would be shown for such calls.

**Timed Call** - Outgoing calls will be automatically disconnected after the set duration. The user can initiate a timed call from the options menu(contacts, call log, dialing screen) if timed call is enabled in Settings>Common settings>Timed call.

**Self call** - Self call imitates a real incoming call. Press '#\*#' on the home screen to make a self call. This doesn't charge any fee.

## Phone

Allows you to set the phone.

**Auto key lock** - You can make the key pad locked automatically after some time.

**Language** - You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

**Battery status** - Shows you the approximate remaining standby time, remaining call time based on current battery status.

**Handset information** - Shows your phone number, model number and S/W version.

## Security

This menu allows you to set the phone's safety.

**PIN code request** - You can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

**Handset lock** - You can use a security code to avoid unauthorized use of the phone.

**Lock if SIM in changed** - Set the lock function if SIM changed.

**Anti-theft mobile tracker** - The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose it.

**Application lock** - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).

**Change codes** - PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code.

## **SOS mode**

**Set SOS mode** - This enables SOS mode. After enabling if you press long key of 9 in Idle screen, the SOS message is sent and the phone stays in SOS Mode.

**Message** - In the emergency situation, press and hold '9' to change to SOS mode. In SOS mode, SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

**Recipient list** - The list of recipients to whom SOS Message is sent and during SOS Mode, the phone will accept calls from these numbers only.

**Help** - Further details about SOS Mode are mentioned here.

## **Memory info**

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

## **Restore factory settings**

You can initialize all factory defaults. You need Security code to activate this function.

## PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

For this User have to connect Mobile with PC through USB cable and Select the option "PC suite".

**Note:** Install PC Suite using CD provided and follow the Installation Guide.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp>  
----> select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

### Travel Adapter



### User Guide

Learn more about your LG-S365.



### Standard Battery



### Data cable & CD



### Headset



#### NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

## **Technical data**

### **Ambient Temperatures**

**Max.:** +55°C (discharging) +45°C (charging)

**Min.:** -10°C

### **LG Service Center**

by LG Electronics (Thailand) Co. Ltd. 72/127 Somdetprachaw  
Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun 07:00 - 19:00

Call center : 0-2878-5757

## Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press <b>Power on key</b> to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error— Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error— Wrong charger	Only use original LG accessories.
Charging error— Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.

## Troubleshooting

Problem	Possible Solution
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	Be sure that you have pressed <b>Send key</b> . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press <b>Send key</b> for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.

<b>Problem</b>	<b>Possible Solution</b>
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.









