



ไทย  
ENGLISH



คู่มือการใช้  
User Guide

LG-T300



CE0168

P/N : MMBB0390536 (1.0)

[www.lg.com](http://www.lg.com)

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลึกลับรอบน้าเขาสิ้นควรมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หึ่งขอความพรอมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มให้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไมรวมแบตเตอรี่ และอุปกรณ์เสริมอื่นๆ.

ทันทีที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถกรันดีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพรองจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Bluetooth QD ID B016849

# คู่มือการใช้ LG-T300 — ไทย

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ



## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

**การรับพลังงานคลื่นความถี่วิทยุ**  
**ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)**

โทรศัพท์เคลื่อนที่รุ่น LG-T300 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของผู้ใช้


- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่อง

โทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.19 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.50 วัตต์/กก. (10 กรัม)

- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับขอจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต/กก. โดยเฉลี่ยต่อเนื่อง 1 กรัม

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

 คำเตือน: ใช้แบตเตอรี่อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์คน วิทยุและเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสัมผัสที่นอนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียกขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือ แอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

### การทำงานอย่างมีประสิทธิภาพของโทรศัพท์อุปกรณ์อิเล็กทรอนิกส์

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์ โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

### ความปลอดภัยบนท้องถนน

- ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขียานพาหนะ
- ห้ามใช้โทรศัพท์มือถือขณะขับรถ
  - มีสมาธิในการขับขีด้วยความระมัดระวังอย่างเต็มที่

- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แอสนด์ฟรี
- ขับเขาขางทาง แลวจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้อง ดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุ อาจมีผลกระทบต่อระบบ อิเล็กทรอนิกส์บางชนิดในรถ ของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์แพกพาแบบ ไรสายซึ่งขัดขวางการทำงานของ ถุงลม ซึ่งอาจทำให้ถุงลม ไม่ทำงานหรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการ ทำงานผิดปกติของถุงลมนิรภัย
- หากคุณกำลังฟังเพลงในขณะที่ อยู่ข้างนอก โปรดตรวจสอบว่า ระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้หูคุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลาย ความสามารถได้ยิน

ความสามารถในการได้ยินอาจ ถูกทำลายได้หากคุณฟังเสียง ดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิด หรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียง เพลงและระดับเสียงสายสนทนา ไว้ในระดับที่เหมาะสม

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่ง ครัด และทำตามข้อกำหนด หรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

### บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานก่อน

### เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

### การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณี

โทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

### ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายครั้ง

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่ โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้องอาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุด เพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้ว เพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับกำหนดค่าหน้าจอขยาย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

# การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

## การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับ ซิมการ์ด พลาสติกอันพร้อมรายละเอียดการสมัครรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ

### ข้อสำคัญ!


ซิมการ์ดพลาสติกอื่นและขั้วสัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่ หรือถอดการ์ดด้วยความระมัดระวัง

เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก

## ภาพประกอบ

โปรดปิดอุปกรณ์และเลิกการเชื่อมต่อกับแท่นชาร์จก่อนถอดแบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 การใส่ซิมการ์ด
- 4 การใส่แบตเตอรี่
- 5 ประกอบฝาหลัง
- 6 การชาร์จแบตเตอรี่

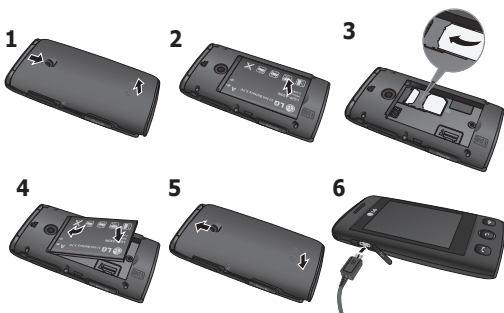

## ส่วนประกอบตัวเครื่อง



หูฟัง

ปุ่มโทรออก/รับสาย

เพื่อโทรออกและรับสายเรียกเข้า

ปุ่มย้อนกลับ

ย้อนกลับไปที่หน้าจอก่อนหน้า

ปุ่มวางสาย



ปุ่มปรับระดับเสียง

- เมื่อหน้าจออยู่ที่หน้าจอหลัก: ระดับเสียงเรียกเข้าและแบบเสียง

- ระหว่างการใช้สาย: ระดับเสียงสนทนา

- ปุ่มลดระดับเสียง: กดค้างไว้เพื่อเปิดใช้/เลิกใช้โหมดเงียบ

ช่องเสียบการ์ดหน่วยความจำ  
Micro SD

ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค

- กดครู่หนึ่งเพื่อเปิด/ปิดหน้าจอ

- กดค้างไว้เพื่อเปิด/ปิดโทรศัพท์



ช่องเสียบหูฟังสเตอริโอ  
หรือแอสแตอริโอ

## การใช้หน้าจอสัมผัส

### เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ LG-T300 เครื่องจะล็อคหน้าจออัตโนมัติ

### ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ LG-T300 สามารถเปลี่ยนแปลงได้ ขึ้นอยู่กับงานที่คุณกำลังทำ

### การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตามเพียงแตะที่ไอคอนนั้น



### การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อน ในหน้าจอบางหน้าจอ เช่น รายการขอมูลการโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย




## หน้าจอหลักของคุณ


คุณสามารถลากและคลิกสิ่งที่ต้องการได้ในหน้าจอหลักทุกประเภท


### ใช้งาน



**หน้าจอหลัก Widget** - เมื่อคุณแตะ  ที่ด้านล่างซ้ายของหน้าจอแผง Widget สำหรับโทรศัพท์มือถือก็จะปรากฏขึ้น เมื่อคุณลงทะเบีย Widget โดยการลาก Widget จะถูกสร้างขึ้นในจุดที่ถูกลาก

### ใช้งาน

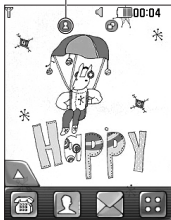

**หน้าจอหลักโทรด่วน** - เมื่อคุณแตะ  รายการโทรด่วนจะปรากฏขึ้น คุณสามารถโทร ส่งข้อความ หรือแก้ไขรายชื่อได้โดยตรงในหน้าจอหลักนี้

## หน้าจอเมนูของคุณ

คุณสามารถลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อนสิ่งที่คุณต้องการได้ในทุกหน้าจอเมนูในการสลับระหว่างหน้าจอเมนูเพียงลากนิ้วบนหน้าจอจากซ้ายไปขวาหรือขวาไปซ้ายอย่างรวดเร็ว

- 1 หน้าจอการโทร-  
ส่งข้อความหรือโทรออกในเมนูนี้



- 2 หน้าจอมีลิตีมีเดีย  
- ส่งอีเมลหรือเล่นเกมส์




- 3 หน้าจอแอปพลิเคชัน  
- ใช้งานแอปพลิเคชัน  
หรือตั้งค่าโปรไฟล์ในเมนูนี้



## การโทร


### การโทรออก


- 1 **แตะ**  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด
- 3 **แตะ**  เพื่อเริ่มการโทรออก

**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ ให้กดค้างไว้ที่ 

กดปุ่มเปิดปิดเพื่อล๊อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ตั้งใจ



### การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอหลัก ให้แตะที่  เพื่อเปิด **รายชื่อ**
- 2 แตะที่กล่องฟิลด์ชื่อที่ด้านบนของหน้าจอ และป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่ต้องการโทรโดยใช้ปุ่มกด

- 3 จากรายการที่ฟิลเตอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทร หมายเลขเริ่มต้นจะถูกใช้ในการโทร หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
- 4 หรือ คุณอาจแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข คุณอาจแตะ  เพื่อโทรโดยใช้หมายเลข เริ่มต้นก็ได้

### การเปลี่ยนการตั้งค่าการโทรทั่วไป

- 1 **แตะที่** **ตั้งค่าการโทร** ในเมนู **การตั้งค่า**
- 2 เลื่อนแล้วแตะ **การตั้งค่าทั่วไป**
  - **ปฏิเสธการรับสาย** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ เปิด คุณสามารถแตะที่ ปฏิเสธรายการเพื่อเลือกการโทรทั้งหมด รายชื่อหรือกลุ่มที่ระบุ หรือการโทรจากหมายเลขที่ไม่รู้จัก (เช่นหมายเลขที่ไม่อยู่ในรายชื่อของคุณ)

- **ส่งเบอร์ตัวเอง** - เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่
- **โทรซ้ำอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเปิด หรือทางขวาเพื่อ ปิด
- **โหมดตอบรับ**  
**กดปุ่มรับสาย:** คุณสามารถรับสายเรียกเขาได้โดยการกดปุ่ม 
- **รับได้ทุกปุ่ม:** คุณสามารถรับสายเรียกเขาได้โดยการกดได้ทุกปุ่ม ยกเว้นปุ่ม 
- **เตือนทุกนาที** - เลื่อนสวิตช์ไปทางซ้ายเพื่อเปิด ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย
- **โหมดตอบรับ BT** - เลือก แสตนดฟรี เพื่อให้สามารถรับสายได้โดยใช้ชุดหูฟังบลูทูธ หรือเลือก ตัวเครื่อง เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง
- **บันทึกเบอร์ใหม่** - เลือก ปิด หรือ ปิด เพื่อบันทึกหมายเลขใหม่

## รายชื่อ

### การค้นหารายชื่อ

- 1 **แตะ สมุดแอดเดรส**
- 2 **แตะ ค้นหา**
- 3 คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อในฟิลด์ชื่อจะทำให้เมนูขามไปพื้นที่ของรายชื่อตามตัวอักษรนั้น

### การเพิ่มรายชื่อใหม่

- 1 **แตะ สมุดแอดเดรส และแตะที่ เพิ่ม**
- 2 **เลือกว่าจะบันทึกรายชื่อไปยังหน่วยความจำภายใน หรือ ซิม**
- 3 **ป้อนชื่อและนามสกุล**
- 4 **คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ**
- 5 **เพิ่มอีเมลแอดเดรส** คุณสามารถป้อนอีเมลแอดเดรสที่แตกต่างกันได้สูงสุด 2 อีเมลต่อหนึ่งรายชื่อ

6 กำหนดรายชื่อให้กับกลุ่ม  
หนึ่งกลุ่มหรือมากกว่า

7 แตะที่ **บันทึก** เพื่อบันทึก  
รายชื่อ

### การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่า  
รายชื่อเพื่อให้เหมาะสมกับ

#### สมุดแอดเดรส

ในแบบที่คุณต้องการได้

แตะที่ **ปุ่มตัวเลือก**  แล้ว  
แตะที่ **ตั้งค่า**

- **ชื่อที่แสดง** - เลือกว่าจะ  
แสดงชื่อหรือนามสกุลของ  
รายชื่อก่อนก็ได้
- **คัดลอก** - คัดลอกรายชื่อจาก  
ซิมไปยังตัวเครื่อง หรือจาก  
ตัวเครื่องไปยังซิม คุณสามารถ  
คัดลอกทีละรายการ หรือ  
ทั้งหมดในครั้งเดียว
- **ย้าย** - ตัวเลือกนี้ทำงานใน  
ลักษณะเดียวกับคัดลอก แต่  
รายชื่อจะถูกจัดเก็บไว้ใน  
ที่ตั้งใหม่เท่านั้น ดังนั้น เมื่อ  
คุณย้ายรายชื่อจากซิมไปยัง  
หน่วยความจำภายใน รายชื่อนั้น  
นั้นจะถูกลบออกจากหน่วย  
ความจำซิม

#### • ส่งทุกรายชื่อผ่านบลูทูธ

- ส่งรายชื่อทั้งหมดไปยัง  
เครื่องอื่นผ่านบลูทูธ

#### • สำรองรายชื่อ/ เรียกคืนรายชื่อ

- บันทึก  
หรือเรียกคืนข้อมูลรายชื่อไป  
ยังที่เก็บอื่น

#### • ลบรายชื่อทั้งหมด -

ลบรายชื่อทั้งหมดของคุณ  
แตะที่ **ใช่** หากคุณต้องการ  
ลบรายชื่อของคุณทั้งหมด

## ข้อความ

โทรศัพท์ LG-T300

ของคุณได้ผสมผสาน SMS

และ MMS ไว้ในเครื่องเดียว

และมีเมนูที่ใช้งานง่าย

### การส่งข้อความ

- 1 แตะที่ **ข้อความ** ในเมนู  
แล้วแตะที่ **เขียนข้อความ**  
เพื่อเริ่มเขียนข้อความใหม่
- 2 แตะที่ **แทรก** เพื่อเพิ่มภาพ  
วิดีโอ เสียง รูปแบบอัตโนมัติ  
และอื่นๆ

3 แตะที่ **ถึง** ที่ด้านบนของ หน้าจอเพื่อป้อนผู้รับ จากนั้นป้อนหมายเลขหรือ แตะ  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลาย รายการได้




4 แตะที่ **ส่ง** เมื่อพร้อม



#### คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

## การป้อนข้อความ

คุณสามารถเลือกวิธีป้อนข้อมูลได้โดยแตะที่  และ **วิธีป้อนข้อมูล** และ  เพื่อเปิดโหมด T9 ไอคอนนี้จะแสดงเฉพาะเมื่อคุณเลือก **ปุ่มกด** เป็นวิธีป้อนข้อมูล แตะที่  เพื่อเปลี่ยนระหว่างตัวเลข

สัญลักษณ์และการป้อนข้อความใช้ปุ่ม **Shift** เพื่อเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก


## การจดจำลายมือ

ในโหมดการจดจำลายมือ คุณจะเขียนบนหน้าจอและ LG-T300 ของคุณจะแปลงลายมือของคุณเป็นข้อความ

## การตั้งค่าอีเมล

แตะที่ **อีเมล** ในหน้าจอ มัลติมีเดีย

ถ้าไม่ได้ตั้งค่าอีเมลแอดเดสส์ ให้เริ่มวิธีการตั้งค่าอีเมล และดำเนินการจนเสร็จสิ้น

คุณสามารถตรวจสอบและแก้ไขการตั้งค่าได้โดยเลือก  นอกจากนี้ คุณยังสามารถตรวจสอบการตั้งค่าเพิ่มเติม ซึ่งมีข้อมูลโดยอัตโนมัติเมื่อคุณสร้างแอดเดสส์

## การเปลี่ยนการตั้งค่า ข้อความตัวอักษร

แตะที่ **ข้อความ** แล้วแตะที่  
**ตั้งค่า** เลือก **ข้อความ**  
**ตัวอักษร**

**ศูนย์ข้อความตัวอักษร** -  
ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลื่อน  
สวิตช์ไปทางซ้ายเพื่อรับการ  
ยืนยันว่าข้อความถูกส่งแล้ว

**ช่วงที่มีผลใช้** - เลือกระยะเวลา  
เวลาที่จัดเก็บข้อความไว้ใน  
ศูนย์ข้อความ

**ชนิดข้อความ** -  
แปลงข้อความตัวอักษรเป็น  
**ตัวอักษร, เสียง, แฟกซ์,**  
**X.400** หรือ **อีเมล**

**การเข้ารหัสตัวอักษร** -  
เลือกวิธีเข้ารหัสตัวอักษรของ  
คุณ ตัวเลือกนี้จะมีผล  
ต่อขนาดของข้อความ  
และค่าบริการส่งข้อความของคุณ

**การส่งข้อความยาว** -  
เลือกเพื่อส่งข้อความยาวแบบ  
หลาย **SMS** หรือเป็น **MMS**

## การเปลี่ยนการตั้งค่า ข้อความมัลติมีเดีย

แตะที่ **ข้อความ** แล้วแตะที่  
**ตั้งค่า** และ  
**ข้อความมัลติมีเดีย**

**โหมดเรียกข้อมูล** - เลือก  
ระหว่าง **เครือข่ายหลัก**  
หรือ **เครือข่ายโรมมิ่ง**  
ถ้าคุณเลือก **กำหนดเอง**  
คุณจะได้รับเฉพาะข้อความ  
แจ้ง MMS และคุณสามารถ  
ตัดสินใจว่าจะดาวน์โหลด  
แบบเต็มหรือไม่

**รายงานผลการส่ง** -  
เลือกเพื่อให้ส่งและ/  
หรือขอรายงานผลการส่ง  
**อ่านข้อความตอบรับ** -  
เลือกเพื่อให้ส่งและ/  
หรือขอการตอบกลับ

**ความสำคัญ** - เลือกระดับ  
ความสำคัญของ MMS

**อายุข้อความ** - เลือกระยะเวลา  
เวลาที่จัดเก็บข้อความไว้ใน  
ศูนย์รับฝากข้อความ

**ระยะเวลาสไลด์ -**

เลือกระยะเวลาที่จะให้สไลด์  
ปรากฏบนหน้าจอ

**การแนบเอกสารที่ไม่รองรับ -**

เลือกว่าคุณจะทำกัเอกสาร  
แนบเอกสารที่ไม่รองรับหรือไม่

**เวลาส่ง -** เลือกระยะเวลาใน  
การรอก่อนส่งข้อความ

**ศูนย์ MMS -** เลือกหนึ่ง

ศูนย์จากรายการหรือ  
เพิ่มศูนย์ข้อความใหม่

## บริการเครือข่ายสังคม (SNS)

โทรศัพท์ LG-T300 มี SNS  
ที่ให้คุณสนุกสนานและจัดการ  
เครือข่ายสังคมของคุณได้

**หมายเหตุ:** คุณสมบัติ SNS  
เป็นแอปพลิเคชันที่ใช้ข้อมูล  
จำนวนมาก เมื่อเชื่อมต่อและ  
ใช้บริการออนไลน์อาจมีค่าใช้จ่าย  
เพิ่มเติม โปรดสอบถาม  
ข้อมูลการคิดค่าใช้จ่ายกับ  
ผู้ให้บริการเครือข่ายของคุณ

## Facebook (SNS ต่อ)

**หน้าหลัก:** ล็อกอิน จากนั้นคุณ  
จะเห็นข้อมูลอัปเดตสถานะของ  
เพื่อนๆ ของคุณ บ่อนความเห็น  
ของคุณเกี่ยวกับสถานะใหม่และ  
ตรวจดูอื่นๆ

**โปรไฟล์:** คุณสามารถเลือก  
กระดาน > อัปเดตสถานะ  
และเขียนสถานะปัจจุบันได้  
ดูรายละเอียดข้อมูลและ  
อัปโหลดภาพถ่ายโดยแตะที่  
อัลบั้ม > อัปโหลดภาพถ่าย

**เพื่อน:** ค้นหาเพื่อนของคุณ  
ใน Facebook โดยการ  
เลือกแท็บ ค้นหา

**ข้อความ:**  
คุณสามารถดูไฟล์เดอ์ถาดเข้า/  
ส่ง และเขียนข้อความ SN ได้

## กล้องถ่ายรูป


### การถ่ายภาพด่วน

- 1 แตะที่เมนู **กล้องถ่ายรูป**
- 2 เมื่อกำลังจับโฟกัสที่วัตถุแล้ว  
ให้แตะที่ 

ที่ตรงกลางด้านขวาของหน้า  
จอเพื่อถ่ายภาพ

**เคล็ดลับ:** ในการสลับโหมด  
กล้องถ่ายรูปหรือโหมดวิดีโอ  
ให้เลื่อนไอคอนกล้องถ่ายรูป  
หรือวิดีโอที่ตรงกลางขวา  
ของช่องมองภาพขึ้น/ลง

## ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ  
ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้  
และที่ 

**ส่ง** - แตะเพื่อส่งรูปภาพเป็น  
ข้อความ, อีเมล หรือผ่านทาง  
บลูทูธ


**ใช้เป็น t-**

แตะเพื่อตั้งค่าภาพหน้าจอหลัก  
(พื้นหลังหน้าจอหลัก,  
พื้นหลังล็อคหน้าจอ, ภาพรายชื่อ,  
ภาพสายเรียกเข้า,  
ภาพสายโทรออก, ภาพเริ่มต้น  
และภาพปิดเครื่อง)

**แก้ไข** - แตะเพื่อแก้ไขรูปภาพ

**แก้ไข** - แตะเพื่อแก้ไข  
รูปภาพ

 แตะเพื่อลบภาพ

 แตะเพื่อถ่ายภาพอื่น  
ทันที โดยที่ภาพปัจจุบัน  
จะได้รับการบันทึกไว้

 แตะเพื่อดูคลังภาพ

## การใช้การตั้งค่า ขั้นสูง

จากช่องมองภาพ ให้แตะ  
 เพื่อเปิดตัวเลือกการ  
ตั้งค่าขั้นสูงทั้งหมด

คุณสามารถเปลี่ยนการ  
ตั้งคากล้องถ่ายรูปได้โดย  
เลื่อนปุ่มหมุน หลังจาก  
เลือกตัวเลือก ให้แตะปุ่ม  
**ตกลง**

**ขนาด** - เปลี่ยนขนาดของ  
รูปภาพเพื่อประหยัดหน่วย  
ความจำ

**ความสมดุลแสง** - เลือก  
ระหว่าง **อัตโนมัติ**,  
**หลอดไฟ**, **แสงอาทิตย์**,  
**ฟลูออเรสเซนต์** และ  
**มิดครีမ်**

**เอฟเฟกต์สี -**

เลือกโทนสีสำหรับรูปภาพใหม่

**ข้อต่อเนื่อง -**

จัดให้วัตถุอยู่ในช่องมองภาพ  
แล้วกดปุ่มถ่ายภาพเหมือนกับ  
การถ่ายภาพปกติ กล้องจะถ่าย  
ภาพต่อเนื่องอย่างรวดเร็ว

**ตั้งเวลาถ่ายภาพ -** ตั้งเวลา  
ถ่ายภาพทำให้คุณสามารถตั้ง  
ช่วงเวลาหน่วงหลังจากที่กดชัต  
เตอร์แล้ว เลือก **ปิด, 3 วินาที,**  
**5 วินาที หรือ 10 วินาที** ซึ่ง  
เป็นวิธีการที่ช่วยให้คุณถ่ายภาพรูป  
ตนเองได้

**โหมดกลางคืน -**

ใช้สำหรับการถ่ายภาพในที่มืด

**คุณภาพของภาพ -**

เลือกระหว่าง **ละเอียดมาก,**  
**ละเอียด** และ **ปกติ**

คุณภาพที่ละเอียดมากขึ้นเท่า  
ใด ความคมชัดของรูปภาพก็  
มากขึ้นเท่านั้น อย่างไรก็ตาม  
ขนาดไฟล์จะเพิ่มตามไปด้วย  
ซึ่งหมายความว่าคุณจะสามารถ  
จัดเก็บรูปภาพในหน่วยความจำ  
ได้น้อยลง

**เลือกที่จัดเก็บ -** เลือกว่าจะ  
บันทึกรูปภาพที่หน่วยความจำ  
เครื่อง หรือที่หน่วยความจำภาย  
นอก

**ซ่อนไอคอน -** เลือกซ่อน  
ไอคอนตั้งคากล้องถ่ายรูปเอง  
หรือโดยอัตโนมัติ

**แสดงภาพที่ถ่าย -**

เลือก **เปิด** เพื่อตรวจสอบ  
รูปภาพที่คุณถ่ายทันที

**เสียงชัตเตอร์ -** เลือกเสียง  
ชัตเตอร์เสียงใดเสียงหนึ่งจาก  
สามเสียง





**หน้าจอกรีด -** เลือกระหว่าง  
**ปิด, 4 ส่วน หรือ 9 ส่วน**

**รีเซ็ตการตั้งค่า -** เรียกคืนการ  
ตั้งค่าเริ่มต้นของกล้องถ่ายรูป



## กล้องวิดีโอ

**การถ่ายวิดีโอด้วย**



ในการสลับโหมดกล้องถ่ายรูป  
หรือโหมดวิดีโอ ให้เลื่อนไอ  
คอนกล้องถ่ายรูปหรือวิดีโอ  
ตรงกลางขวาของช่องมอง  
ภาพขึ้น/ลง

- 1 ให้ถือโทรศัพท์ในแนวนอน และหันไปทางสิ่งที่จะถ่าย
- 2 กดที่จุดสีแดง 
- 3 ● **Rec** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 4 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะที่  แล้วเริ่มบันทึกต่อโดยเลือก 
- 5 แตะที่  บนหน้าจอ


### หลังจากถ่ายวิดีโอ

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอน 8 ไอคอนเรียงอยู่ทางด้านซ้ายและขวา  แตะเพื่อเล่นวิดีโอ ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้แตะที่ 

**ส่ง** - แตะเพื่อส่งวิดีโอเป็นข้อความ, อีเมล หรือผ่านทางบลูทูธ  
**แก้ไข** - แตะเพื่อแก้ไขวิดีโอ

 แตะเพื่อลบบิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง ● แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้  แตะเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้

### การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด คุณสามารถเปลี่ยนการตั้งค่ากล้องวิดีโอใดโดยเลื่อนปุ่มหมุน หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ตกลง** **เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับรูปภาพมุมมองใหม่

**สมดุลแสง** - สมดุลแสงจะช่วยให้มั่นใจได้ว่าส่วนที่เป็นสีขาวที่ปรากฏในวิดีโอจะสวยงามจริงเพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้องคุณอาจต้องกำหนดสภาวะแสงก่อน เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มีดครัม**

**คุณภาพ** - เลือกระหว่าง

**ละเอียดมาก,**

**ละเอียด และ ปกติ**

คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ดังนั้นคุณสามารถจัดเก็บวิดีโอในหน่วยความจำได้น้อยลง

**ระยะเวลา** - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกระหว่าง ปกติ และ MMS เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็นข้อความ MMS ได้

**เลือกที่จัดเก็บ** - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่อง หรือที่หน่วยความจำภายนอก

**การบันทึกเสียง** - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง

**ซ่อนไอคอน** - เลือกว่าจะซ่อนไอคอนในเมนูกล้องถ่ายรูปโดยอัตโนมัติหรือกำหนดด้วยตนเอง

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

## เพลง

ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่ **เพลง** จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอร์ต่างๆ ดังนี้:

**เล่นล่าสุด** - เล่นเพลงที่คุณเล่นล่าสุด

**แหล่งรวมเพลง** - เบลูส์และค้นหาเพลงผ่านบริการออนไลน์

**ทุกแทร็ค** - มีเพลงทั้งหมดที่คุณมีในโทรศัพท์ยกเว้นเพลงเริ่มต้นที่โหลดลงหน้า

**ศิลปิน** - ดูรายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการเพลง** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - เล่นแทร็คในลำดับสุ่ม

## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือทางบลูทูธ หรือสายเคเบิล ข้อมูลคุณยังสามารถใช้ LG PC Suite ได้

ในการโอนเพลงโดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธและเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์อื่น แล้วเลือกส่งไฟล์นั้นผ่านทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นในเพลง > ทุกแทร็ค

## การจัดการไฟล์

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณแก้ไขงานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย

หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้

โดยแตะที่ **อัลบั้มมีเดีย** คุณจะจะสามารถเปิดรายการของไฟล์เดออร์ที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

## เกมส์และแอปพลิเคชัน

เพื่อความเพลิดเพลิน คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันใหม่ลงในโทรศัพท์ได้


## วิทยุ FM

โทรศัพท์ LG LG-T300 ของคุณมีคุณสมบัติวิทยุ FM ดังนั้น คุณสามารถรับฟังสถานีที่คุณชื่นชอบตลอดเวลา

## การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านี้จะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อนเนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศวิทยุ

ในการปรับตั้งอัตโนมัติ:

- 1 เสียบและแตะที่ วิทยุ FM แล้วแตะ 
- 2 แตะที่ **สแกนอัตโนมัติ** ขอความยืนยันจะปรากฏขึ้น เลือก **ใช่** เครื่องจะค้นหาสถานีวิทยุที่มีอยู่โดยอัตโนมัติ

**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ ◀ และ ▶ หากคุณกด ◀ และ ▶ ค้างไว้ จะเป็นการค้นหาสถานีโดยอัตโนมัติ

## สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะที่ **สมุดบันทึก** แล้วเลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะที่ **เพิ่ม**

ตั้งค่าการทำงานของคุณ

- 1 แตะที่ **การทำงาน**
- 2 แตะที่ **เพิ่ม** แล้วคุณจะสามารถตั้งค่าและบันทึกงานของคุณในเมนูนี้ได้

## การใช้ตัวค้นหาวันที่

ตัวค้นหาวันที่เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถค้นหาวันที่ที่ต้องการได้ เมื่อผ่านมาแล้วหลายวัน

## เว็บไซต์

**เบราว์เซอร์** ช่วยให้คุณสามารถเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าคุณอยู่ที่ไหน หรือกำลังทำอะไร

### การเข้าใช้เว็บไซต์

- 1 **แตะที่ เบราวเซอร์**
- 2 ในการไปยังหน้าจอหลักของเบราว์เซอร์ ให้เลือก **หน้าหลัก** หรือเลือก **ไปยัง URL** และพิมพ์ URL ตามด้วย **เชื่อมต่อ**

**หมายเหตุ:** มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้และการดาวน์โหลดเนื้อหาโปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## การเข้าใช้บริการของ Google

คุณสามารถเปิดใช้บริการของ Google ได้ในแอปพลิเคชันนี้ และที่ **Google** ในแท็บ ยูทิลิตี้

### ตั้งค่า

#### การปรับแต่งรูปแบบเสียงของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงได้อย่างรวดเร็วโดยแตะที่บนหน้าจอแอปพลิเคชัน

คุณสามารถกำหนดการตั้งค่าโปรไฟล์แต่ละโปรไฟล์โดยใช้เมนูตั้งค่า

- 1 **แตะที่ โปรไฟล์**
- 2 เลือกรูปแบบเสียงที่คุณต้องการแก้ไข
- 3 คุณสามารถเปลี่ยนตัวเลือกเสียงและการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้งการตั้งค่าเสียงเรียกเข้า และระดับเสียง, เสียงข้อความ และอื่นๆ

## การเปลี่ยนการตั้งค่าโทรศัพท์

อิสระในการปรับการทำงาน  
ของโทรศัพท์ LG-T300  
ในแบบที่คุณต้องการได้

จากหน้าจอหลัก เลือก **ตั้งค่า**  
แล้วเลื่อนไปที่ **ตั้งค่าโทรศัพท์**

## การใช้ตัวจัดการหน่วยความจำ

จากหน้าจอหลัก เลือก **ตั้งค่า**  
แล้วเลื่อนไปที่ **ตั้งค่าโทรศัพท์**  
เลือก **ข้อมูลความจำ**

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับ  
การตั้งค่ามาจากผู้ให้บริการ  
ระบบแล้ว ดังนั้น คุณจึงสนุก  
กับโทรศัพท์ใหม่ของคุณได้  
ทันที ในการเปลี่ยนการตั้งค่า  
ใดๆ ให้ใช้เมนูนี้:  
และที่ **การเชื่อมต่อ**

## การส่งและการรับไฟล์โดยใช้บลูทูธ

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง  
โดยทั่วไปจะเป็นไฟล์ภาพถ่าย,  
วิดีโอ หรือเพลง
- 2 เลือก **ส่ง** เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์ **บลูทูธ**  
แล้ว โทรศัพท์ LG-T300  
จะไม่ค้นหาอุปกรณ์  
**บลูทูธ** อื่นโดยอัตโนมัติ  
หากคุณยังไม่จับคู่อุปกรณ์  
**บลูทูธ** โทรศัพท์ LG-T300  
จะค้นหาอุปกรณ์อื่นๆ ที่ใช้  
**บลูทูธ** ภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการ  
ส่งไฟล์ไป
- 5 ไฟล์ของคุณจะถูกส่งออกไป

### ในการรับไฟล์:

- 1 ในการรับไฟล์  
คุณต้องตั้งค่าบลูทูธเป็น  
**เปิด** และ **มองเห็นได้**  
โปรดดูข้อมูลเพิ่มเติมที่  
**การเปลี่ยนการตั้งค่า**  
**บลูทูธ** ด้านล่าง

- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟลจากผู้ส่งและที่ ใช้ เพื่อรับไฟล์
- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้วสำหรับไฟล์ภาพ คุณสามารถเลือกดูไฟล์หรือใช้เป็นพื้นหลัง โดยทั่วไปไฟล์จะถูกบันทึกในไฟล์เดสก์ทอปที่เหมาะสมใน **อัลบั้มมีเดีย**

#### การเปลี่ยนการตั้งค่าบลูทูธ:

##### และที่ **บลูทูธ**

ในหน้าจอแอปพลิเคชันและเลือก  แล้วเลือก **ตั้งค่า**

#### การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ LG-T300 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**

- 2 และที่ **ค้นหา**
- 3 โทรศัพท์ LG-T300 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่านจากนั้นให้แตะ **ตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

## อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

อุปกรณ์ชาร์จ



แบตเตอรี่



ชุดหูฟัง  
สเตอริโอ



สายเคเบิลข้อมูล  
และซีดี



### หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

**ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์  
(ประเทศไทย) จำกัด**

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน  
72/127 ถ.สมเด็จพระเจ้าตากสิน  
แขวงบุดโคล เขตธนบุรี  
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.



**Call center : 0-2878-5757**

# ข้อมูลทางเทคนิค

## อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DC5 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T300	
Trade Name	LG	
<b>CE 0168</b>		
<b>Applicable Standards Details</b>		
R&TTE Directive	1999/5/EC	
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2		
EN 300 328 v1.7.1		
EN 60950-1:2001		
EN 50360:2001 / EN62209-1:2006		
EN 301 511 v9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	<b>Name</b>	<b>Issued Date</b>
LG Electronics Inc. – EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands	Saung Hyoun, Ji / Director	23.June. 2010
		
	Signature of representative	

# LG-T300 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy


#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.19 W/kg (10g) and when worn on the body is 1.50 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the

Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do

## Guidelines for safe and efficient use

- not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools,

greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

## Efficient phone operation

### Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

## **Potentially explosive atmospheres**

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.

## Guidelines for safe and efficient use

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.

- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting

or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

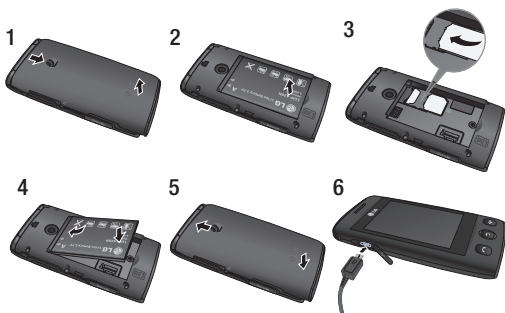

## Phone Components



**Earpiece**

**Call key**

Dials a phone number and answers incoming calls.

**Clear key**

Go back to a previous screen.

**End key**

- Rejects a call.
- Press once to return to the home screen.



**Volume keys**

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate Silent mode.

**Micro SD memory card socket**

**Power/Lock key**

- Short press to turn on/off the screen.
- Long press for power on/off.




**Handsfree or Stereo earphone connector**

## Using your touch screen

### Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T300 is not in use, it will return to the lock screen.

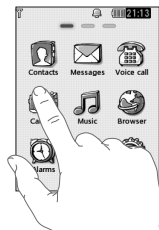

### Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

### Control the touch screen

The controls on the LG-T300 touch screen change dynamically depending on the task you are carrying out.

### Opening Applications

To open any application, simply touch its icon.




## Your home screen


You can drag and click what you need right away in all home screen types.


### Active



**Widget home screen** - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

### Active

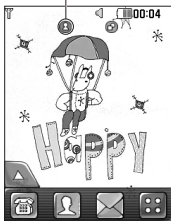


**Speed dial home screen** - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

## Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

**Screen 1** - You can open Contacts, Messages, Voice call, Camera, Music, Browser, Alarms, Calendar and Settings from this screen

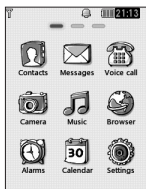

**Screen 2** - You can open Logs, E-mail, SNS, My stuff, Messenger, Games and Apps, Gallery, Memo and Tasks






**Screen 3** - You can open Google Search, FM Radio, Voice Recorder, Bluetooth, Tools and STK (if supported by network) modules from this screen



## Calls


### Making a Call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

**TIP!** To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

### Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to call if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

### Answering and rejecting a call

When your phone rings, press  key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen . This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

## Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
  - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers, All unknown numbers.
  - **Send my number** - Choose whether to display your number on an outgoing call.
  - **Auto-redial** - Slide the switch left for ON or right for OFF.
  - **Answer mode**

**Press send key:** Allows you to only answer an incoming call by pressing the  key.

**Press any key:** Allows you to answer an incoming call by pressing any key, except the  key.

- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

## Contacts

### Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.

## Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email address. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

## Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.


- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.


- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

## Messaging


Your LG-T300 combines SMS and MMS into one intuitive and easy-to-use menu.

### Sending a message


- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

### Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

## Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T300 will convert your handwriting into your message.

## Setting up your email

Touch **E-mail** in Screen 2.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings. Also you can check the additional settings that were filled in automatically when you created the account.

## Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your message into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long text as** - Choose to send long messages as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch **Messages** and touch **Settings**. Select **Multimedia message**.

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read receipt** - Choose to request and/or allow a reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.

**Unsupported attachment** - Choose whether the unsupported attachment is restricted or not.

**Delivery time** - Choose how long to wait before a message is delivered.

**MMS centre** - Choose one from the list or add a new message centre.

## Social network services (SNS)

Your LG-T300 has SNS that lets you enjoy and manage your social network.

**NOTE:** SNS feature is a data intensive application. Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Facebook (Continued SNS)

**Home:** Log in and you will see your friend's updated status. Input your comment about new status or check others.

**Profile:** You can select the **Wall > Status updates** and write the current status. See your


info detail and upload the photo by touching **Album > Upload Photo**.

**Friends:** Search your friends in facebook by selecting Search tap.

**Message:** You can see the Inbox/Sent folder, and write a SN message.

## Camera

### Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-centre of the screen to take a photo.

**TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

### After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .


**Send** - Touch to send the photo as a message, email or Bluetooth.

**Set as** - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image).

**Rename** - Touch to rename the photo.


**Edit** - Touch to edit the photo.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view a gallery of your saved photos.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

**Size** - Change the size of the photo to save memory

**White balance** - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Colour effect** - Choose a color tone for your new photo.

**Continuous shot** - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

**Self-timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or

**10 seconds**. This is ideal if you want to be included in a photo.

**Night mode** - Useful in dark places.

**Image quality** - Choose between **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

**Select storage** - Choose whether to save your photos to the Handset memory or to the External memory.

**Hide icons** - Choose the camera setting icons to hide manually or automatically.

**Show captured image** - Choose **On** to check the picture you took right away.

**Shutter sound** - Select one of the three shutter sounds.





**Grid screen** - Choose between **Off**, **Simple cross**, or **Trisection**.

**Reset settings** - Restore all camera default settings.

## Video camera


### Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording.

### After making a video

A still image representing your captured video will appear on the screen. The name of the video is displayed at the bottom of the screen together with icons down the left and right sides.


 Touch to play the video.


The following options are available.

Touch .

**Send** - Touch to send the video as a **Message**, **Email** or **Bluetooth**.


**Rename** - Touch to rename the video.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options so you can change the video camera setting. After selecting the option, touch the **OK** button.

**Colour Effect** - Choose a color tone to use for your new view.

**White balance** - The white balance ensures that any white area in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

**Quality** - Choose between **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

**Duration** - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

**Select storage** - Choose whether to save your videos to the Handset memory or to the External memory.

**Audio recording** - Choose Mute to record a video without sound.

**Hide icons** - Select whether to hide the icons in the camera menu automatically or manually.

**Reset settings** - Reset all the video camera settings.

## Music

To access the music player, touch **Music.** From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching My Stuff, you can open a list of the folders that store all your multimedia files.

## Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

## FM Radio

Your LG-T300 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

## Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

### To auto tune:

- 1 Scroll and touch **FM radio**, and touch .

- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

**NOTE:** You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

## Organiser

### Adding an event to your calendar

- 1 Touch **Calendar** from Screen 1.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

## Setting your tasks

- 1 Touch **Tasks** from Screen 2.
- 2 Touch **Add**, then you can set and save your task in this menu.

## Using your calculator

- 1 Touch **Tools** and then Calculator.
- 2 Touch the number keys to enter numbers.

## Converting a unit

- 1 Touch **Tools** and select **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

## Adding a city to your world clock

- 1 Select **Tools** and touch **World clock**.
- 2 Touch **Add** to add city. Start typing the name of the city you require, and it will be displayed on the screen.
- 3 Touch the city to select it. This will add it to your World time list.

## Using the stopwatch

- 1 Select **Stopwatch** in **Tools** menu.
- 2 Touch **Start** to begin timing.
- 3 Touch **Lap** if you want to record a lap time.
- 4 Touch **Stop** to end the timer.
- 5 Touch **Reset** to start the time again.

## Setting your alarm

- 1 Select **Alarm** from Screen 1.
- 2 Touch **Add**.
- 3 Set the time you would like the alarm to sound and touch **Save**.

**TIP:** Touch on/off icon on the right hand side of the alarm to set.

## Using your calculator

- 1 Touch **Tools** and then **Calculator**.
- 2 Touch the number keys to enter numbers.

## Converting a unit

- 1 Touch **Tools** and select **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.

- 3 Then select the unit and enter the value you would like to convert from.

## Adding a city to your world clock

- 1 Select **Tools** and touch **World clock**.
- 2 Touch **Add** to add city. Start typing the name of the city you require, and it will be displayed on the screen.
- 3 Touch the city to select it. This will add it to your World time list.

## Using the stopwatch

- 1 Select **Stopwatch** in **Tools** menu.
- 2 Touch **Start** to begin timing.
- 3 Touch **Lap** if you want to record a lap time.
- 4 Touch **Stop** to end the timer.
- 5 Touch **Reset** to start the time again.

## Using your date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## The web

**Browser** gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

### Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

## Access to Google Search

You can launch google search from Screen 3.

## Settings

### Personalising your profiles

You can quickly change your profile by touching the Application screen.

You can personalise each profile setting.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.

- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

### Changing your phone settings

Use the freedom of adapting the LG-T300 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

### Sending and receiving your files using Bluetooth


#### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T300 will not automatically search for other **Bluetooth** devices. If not, your LG-T300 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to view the file. Files will usually be saved to the appropriate folder in **My Stuff**.

### Changing your Bluetooth settings:

Touch **Bluetooth** in the Application screen. And select  and choose **Settings**.

### Pairing with another Bluetooth device

By pairing your LG-T300 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T300 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

**Charger**



**Battery**



**Stereo headset**



**Data cable and CD**



### **NOTE**

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

**“LG Service Center”  
by LG Electronics (Thailand) Co. Ltd.**

72/127 Somdetprachaw Taksin Rd.,  
Bookalo, Thonburi, Bangkok 10600  
LG Service Working day: Mon - Sun  
07:00 - 19:00



**Call center: 0-2878-5757**

# Technical data

## Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
<b>Suppliers Details</b>		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
<b>Product Details</b>		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T300	
Trade Name	LG	
		<b>CE 0168</b>
<b>Applicable Standards Details</b>		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2		
EN 300 328 v1.7.1		
EN 60950-1:2001		
EN 50369:2001 / EN62209-1:2006		
EN 301 511 V9.0.2		
<b>Supplementary Information</b>		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
<b>Declaration</b>		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	<b>Name</b>	<b>Issued Date</b>
	Seung Hyoum, Jr / Director	23.June.2010
LG Electronics Inc. - EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands		
	Signature of representative	



