



ไ ท ย  
ENGLISH

คู่มือการใช้  
LG-A165



P/NO : MFL66984711 (1.0)

[www.lg.com](http://www.lg.com)

Bluetooth QD ID B017062

# | LG-A165 | คู่มือการใช้

คู่มือการใช้อาจแตกต่างจากตัวเครื่องขึ้นอยู่กับเวอร์ชันซอฟต์แวร์  
โทรศัพท์และผู้ให้บริการที่ใช้

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของ  
ทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียน  
แบบ จากตลาดลักลอบนำเข้าสินค้า รวมถึงเพื่อให้แน่ใจว่าลูกค้าได้  
รับ บริการทางด้านการประกันสินค้าอย่างเป็นทางการ  
เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG,  
หนึ่งข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG  
โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ  
ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบ  
ผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ  
รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม  
เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่น  
ๆ ทั้งนี้โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง  
คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์  
จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า  
จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจาก  
มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน  
การซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์



## สารบัญ

การติดตั้งซิมการ์ดและแบตเตอรี่ใน เครื่อง .....	3
ส่วนประกอบตัวเครื่อง .....	4
การเลือกฟังก์ชันและตัวเลือกต่างๆ .....	6
การป้อนข้อความ .....	7
การใส่การ์ดหน่วยความจำ.....	8
วิธีตั้งค่าเสียง .....	9
วิทยุ FM .....	10
การเปิดใช้และการสลับซิมการ์ด ..	11
แจ้งเครื่องหาย (ATMT) .....	12
แผนผังเมนู.....	13
การอ้างอิงคุณสมบัติอย่างย่อ .....	14
คำแนะนำเพื่อความปลอดภัยและ การใช้งานอย่างมีประสิทธิภาพ....	23
อุปกรณ์เสริม .....	27
ข้อมูลทางเทคนิค .....	28

# การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

## การใส่ซิมการ์ด


เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับซิมการ์ด พลาสติกอันพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ **ข้อสำคัญ!** > ซิมการ์ดพลาสติกอันและขั้วสัมผัสอาจชำรุดเสียหายได้ง่าย หากถูกขีดข่วนหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่หรือถอดการด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก

## ภาพประกอบ

โปรดปิดอุปกรณ์และเลิกการเชื่อมต่อกับแท่นชาร์จก่อนถอดแบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ประกอบฝาครอบด้านหลัง
- 6 ชาร์จแบตเตอรี่

หมายเหตุ: ชาร์จแบตเตอรี่ให้เต็มก่อนการใช้งานครั้งแรก

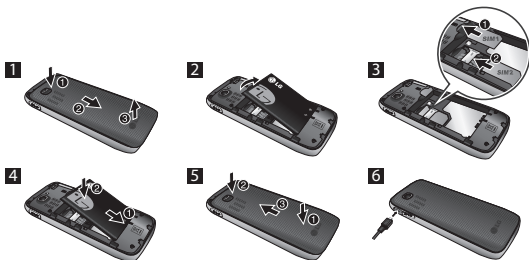

# ส่วนประกอบตัวเครื่อง



## การเปิดหรือปิดเครื่อง

1. กดปุ่มวางสายค้างไว้จนกว่าเครื่องจะเปิด
2. กดปุ่มวางสายค้างไว้จนกว่าเครื่องจะปิด

## การโทรออก

1. ป้อนหมายเลขโทรศัพท์ รวมทั้งรหัสพื้นที่
2. กดปุ่ม  $\curvearrowright$ [ส่ง] หรือเลือก ตัวเลือก > หมุน เพื่อหมุนหมายเลข
3. หากต้องการวางสาย ให้กดปุ่ม  $\curvearrowleft$

## การโทรออกระหว่างประเทศ

1. กดปุ่ม  $\square$  ค้างไว้เพื่อเรียกรหัสการโทรออกต่างประเทศขึ้นที่หน้าจอ เครื่องหมาย '+' จะเลือกรหัสการโทรทางไกลต่างประเทศโดยอัตโนมัติ
2. ป้อนรหัสประเทศ รหัสพื้นที่ และหมายเลขโทรศัพท์
3. กดปุ่ม  $\curvearrowright$ [ส่ง] หรือเลือก ตัวเลือก > หมุน เพื่อหมุนหมายเลข


## การรับสาย

1. เมื่อคุณมีสายเรียกเข้า โทรศัพท์จะดัง
2. กดปุ่ม  $\curvearrowright$ [ส่ง] หรือเลือก ตัวเลือก > ตกลง เพื่อรับสาย
3. หากต้องการวางสาย ให้กดปุ่ม  $\curvearrowleft$

## การเลือกฟังก์ชันและตัวเลือกต่างๆ

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณปรับแต่งโทรศัพท์ได้ โดยฟังก์ชันดังกล่าวนี้มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้โดยผ่านทางปุ่มเลือกสองปุ่ม และ เมนูและเมนูย่อยแต่ละเมนูช่วยให้คุณดูและเปลี่ยนแปลงการตั้งค่าของฟังก์ชันเฉพาะได้

ปุ่มเลือกอาจทำงานแตกต่างกันไปตามการใช้งานในขณะนั้น คุณสามารถดูการทำงานในขณะนั้นของปุ่มเลือกได้จากข้อความที่ปรากฏในบรรทัดล่างสุดของหน้าจอและอยู่เหนือปุ่มเลือกแต่ละปุ่ม

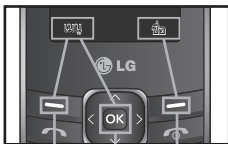

กดปุ่มเลือกซ้ายและปุ่มเลือกกลางเพื่อเข้าใช้เมนูที่มีให้เลือก

กดปุ่มเลือกขวาเพื่อเข้าใช้ข้อที่มีให้เลือก

## การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์


### โหมด T9

โหมดการป้อนข้อความโดยใช้ระบบช่วยสะกดคำ T9 ช่วยให้  
คุณสามารถป้อนคำต่างๆ ได้อย่างง่ายดายด้วยการกดปุ่มน้อยครั้งที่สุด  
เมื่อคุณกดปุ่มแต่ละครั้ง โทรศัพท์จะเริ่มแสดงตัวอักษรที่คิดว่าคุณ  
กำลังพิมพ์ โดยอ้างอิงตามพจนานุกรมในเครื่อง

### โหมด 123

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลขหนึ่งตัว  
คุณสามารถเพิ่มตัวเลขได้ แม้ขณะที่ยังคงอยู่ในโหมดตัวอักษร  
โดยกดปุ่มตัวเลขที่ต้องการค้างไว้

### โหมดสัญลักษณ์

โหมดสัญลักษณ์ช่วยให้คุณป้อนสัญลักษณ์หรือตัวอักษรพิเศษต่าง  
ๆ ในการป้อนสัญลักษณ์ ให้เลือก **ตัวเลือก** → **ใส่สัญลักษณ์** หรือกดปุ่ม   
ใช้ปุ่มนาวิเกตเพื่อเลือกสัญลักษณ์ที่ต้องการ และกดปุ่มตกลง

## การใส่การ์ดหน่วยความจำ

ยกฝาปิดการ์ดหน่วยความจำขึ้น และใส่การ์ด microSD โดยให้พื้นที่หน้าสัมผัสสีทองคว่ำลง ปิดฝาปิดการ์ดหน่วยความจำจนเข้าที่

ในการถอดการ์ดหน่วยความจำ ให้ดันที่การ์ดเบาๆ ดังแสดงในภาพ

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม




## วิธีตั้งค่าเสียง

คุณสามารถตั้งค่าโปรไฟล์ต่างๆ ต่อไปนี้เพื่อปรับการใช้งานให้เข้ากับสภาพแวดล้อมต่างๆ

1. เลือก ค่าติดตั้ง จากเมนูหลักและ เลือกโปรไฟล์
2. เลือกโปรไฟล์และกด [ตัวเลือก - ปรับแต่ง] เพื่อค่าเสียงเรียกเข้า
3. กดปุ่มเลือกซ้าย [ตกลง] แล้วคุณสามารถตั้งค่าเสียงเรียกเข้าที่ต้องการได้

โทรศัพท์ของคุณยังมีตัวเลือกต่อไปนี้ในการปรับแต่งเสียงเรียกเข้า/ชนิดเสียงเตือน:

- › **ตั้งค่าเสียง:** เลือกประเภทเสียง (สายเรียกเข้า, เปิดเครื่อง, ปิดเครื่อง, ขอความ, ปุ่มกด)
- › **ระดับเสียง:** ตั้งค่าระดับเสียงที่ต้องการ (ริงโทน, เสียงปุ่มกด)
- › **ชนิดเสียงเตือน:** เลือกชนิดเสียงเตือน (เสียงเรียกอย่างเดียว, สั้นอย่างเดียว, สั้นและเสียง, สั้นแล้วเสียง) สำหรับเสียงเรียกเข้า
- › **แบบเสียงเรียก:** เลือกแบบเสียงเรียก (ครั้งเดียว, ซ้ำ)
- › **เสียงพิเศษ:** เลือกเสียงพิเศษ (ค่าเตือน, ผิดพลาด, แคมป์ออน)
- › **โหมดรับสาย:** หากคุณเลือก ปุ่มใดก็ได้ คุณสามารถรับสายได้โดยกดปุ่มใดๆ ยกเว้นปุ่ม  และปุ่มเลือกขวา

## วิทยุ FM (ฟังก์ชันนี้อาจแตกต่างกันในแต่ละพื้นที่)

ฟังสถานีวิทยุ FM คุณสามารถเพลิดเพลินกับการฟังวิทยุ FM ได้โดยไม่ต้องใช้ชุดหูฟังเนื่องจากโทรศัพท์รองรับบริการ FM ไร้สาย

1. จากเมนูหลัก ให้เลือก **มัลติมีเดีย** แล้วเลือก **วิทยุ FM**
2. ใช้ปุ่มนาฬิกาเพื่อค้นหาสถานีวิทยุ คุณยังสามารถกด **ตัวเลือก** เพื่อค้นหา คลื่นความถี่วิทยุของช่องสัญญาณที่มีอยู่และจัดเก็บไว้ในรายการช่องสัญญาณโดยอัตโนมัติ
3. กด **ตัวเลือก** เพื่อแก้ไขรายการคลื่นสัญญาณ คุณสามารถตั้งค่าล่วงหน้าได้ถึง 9 สถานี โทรศัพท์ของคุณมีตัวเลือกต่อไปนี้สำหรับการฟังวิทยุ FM:
  - ▶ **บันทึก:** บันทึกรายการวิทยุรายการโปรด
  - ▶ **รายการคลื่นสัญญาณ:** บุคลากรสถานีวิทยุได้ถึง 9 สถานีโดยการป้อนชื่อสถานีและความถี่
  - ▶ **ป้อนเอง:** คุณสามารถตั้งค่าความถี่ด้วยตนเองได้โดยใช้ตัวเลือกนี้
  - ▶ **เล่นแบ็คกราวด์:** ฟังก์ชันนี้ให้คุณทำงานอื่นในโทรศัพท์ได้โดยย่อวิทยุ FM ให้เล็กที่สุด
  - ▶ **ค้นหาอัตโนมัติ:** ค้นหาช่องสัญญาณที่มีอยู่อัตโนมัติและจัดเก็บในรายการช่องสัญญาณโดยอัตโนมัติ
  - ▶ **ตั้งค่า:** ให้คุณสลับคุณภาพเสียงบันทึกและรูปแบบการบันทึกได้ คุณสามารถบันทึกเพลงได้ในรูปแบบ AMR หรือ WAV
  - ▶ **กำหนดบันทึก FM:** คุณสามารถบันทึกรายการวิทยุ FM ตามกำหนดเวลาที่คุณตั้งค่าเวลาการบันทึกไว้ได้
  - ▶ **แนบ:** บันทึกต่อจากไฟล์ที่บันทึกไว้ก่อนหน้านี้

## การเปิดใช้และการสลับซิมการ์ด

โทรศัพท์ของคุณสนับสนุนโหมดซิมการ์ดคู่ ช่วยให้คุณสามารถใช้สองซิมการ์ดได้พร้อมกันโดยไม่ต้องมีการเปลี่ยน เมื่อมีการติดตั้งสองซิมการ์ด คุณสามารถเปิดใช้ซิมการ์ดอันใดอันหนึ่งหรือทั้งคู่ได้

ฟังก์ชันนี้ให้คุณเลือกซิมการ์ดเริ่มต้นสำหรับการโทรหรือส่งข้อความในรายชื่อ บันทึกการโทร และกล่องข้อความ

**1. เลือก [ตั้งค่า] จากเมนูหลัก แล้วเลือก [การตั้งค่าซิมคู่]**

### หมายเหตุ

› หากมีการติดตั้งเพียงหนึ่งซิมการ์ด ซิมการ์ดนี้จะเปิดใช้เป็นค่าเริ่มต้น

## แจ้งเครื่องหาย (ATMT)

การแจ้งเครื่องหาย (ATMT) ให้คุณสามารถติดตามโทรศัพท์ที่สูญหายได้เมื่อมีผู้อื่นใช้โทรศัพท์ของคุณโดยไม่ได้รับอนุญาต บริการการติดตามจะเปิดใช้งาน

คุณจะได้รับแจ้งเตือนด้วยข้อความตัวอักษรที่ส่งไปยังหมายเลขโทรศัพท์เริ่มต้นที่คุณตั้งไว้โดยที่ผู้ใช้ที่ไม่ได้รับอนุญาตไม่รู้ คุณสามารถเปิดใช้ ATMT ได้ตลอดเวลา และกำหนดการตั้งค่าส่วนตัวของคุณ

ในการเปิดใช้การแจ้งเครื่องหาย

1. จากเมนูหลัก ให้เลือก **ค่าติดตั้ง > ตั้งระบบความปลอดภัย > การแจ้งเครื่องหาย** และกด **ตกลง**
2. จากนั้นในเมนูการแจ้งเครื่องหาย ให้แก้ไขและบันทึกชื่อใน **ชื่อผู้ส่ง** และหมายเลขใน **รายการหมายเลขที่ส่ง**
3. เลือก **ตั้งค่าป้องกันขโมย** และกด **ตกลง**
4. เลือก **เปิด** หรือ **ปิด** แล้วกด **ตกลง**
5. ป้อนรหัสความปลอดภัยเพื่อใช้หรือไม่ใช้ฟังก์ชันนี้

### หมายเหตุ

- รหัส ATMT ที่เป็นค่าเริ่มต้น คือ "0000" คุณต้องป้อนรหัสก่อนจะกำหนดการตั้งค่า ATMT

# แผนผังเมนู

## 1. ข้อความ

- 1.1 เขียนข้อความ
- 1.2 ถัดเข้า
- 1.3 ราง
- 1.4 ถัดออก
- 1.5 ข้อความที่ส่งแล้ว
- 1.6 เก็บถาวร
- 1.7 ข้อความบริการ
- 1.8 ข้อความอัตโนมัติ
- 1.9 ค่าตั้งข้อความ
- 1.10 ข้อความ SOS

## 2. สมุดโทรศัพท์

- 2.1 เพิ่มรายชื่อใหม่

## 3. บันทึกการโทร

- 3.1 ประวัติการโทรซิม1
- 3.2 ประวัติการโทรซิม2

## 4. ตั้งค่า

- 4.1 การตั้งค่าซิมคู่
- 4.2 โพรไฟล์
- 4.3 ตั้งค่าจอ
- 4.4 การเชื่อมต่อ
- 4.5 การโทร
- 4.6 เครื่อง

- 4.7 เครื่องช่วย
- 4.8 เครื่องช่วย
- 4.9 การตั้งค่าความปลอดภัย

## 5. คลังภาพ

- 5.1 ภาพของฉัน
- 5.2 เสียงของฉัน
- 5.3 วิดีโอของฉัน
- 5.4 เกมส์ & แอปฯ ของฉัน
- 5.5 อื่นๆ

## 6. นัลดีมีเดีย

- 6.1 กล้องถ่ายรูป
- 6.2 บันทึกภาพวิดีโอ
- 6.3 อัลบั้มภาพ
- 6.4 เครื่องเล่นมีเดีย
- 6.5 แสดงแบบสไลด์
- 6.6 แก๊ซภาพ
- 6.7 วิทยุ FM
- 6.8 เครื่องบันทึกเสียง

## 7. นัดหมาย

- 7.1 นาฬิกาปลุก
- 7.2 ปฏิทิน
- 7.3 งาน

- 7.4 หมายเหตุ
- 7.5 เครื่องคิดเลข
- 7.6 นาฬิกาจับเวลา
- 7.7 แปลงหน่วย
- 7.8 เวลาทั่วโลก
- 7.9 ไปที่
- 7.10 ตัวจัดการไฟล์
- 7.11 บริการซิม

## 8. แอปพลิเคชัน

- 8.1 เกมส์ & แอปฯ
- 8.2 ตั้งค่า

## 9. เบร่าว์เซอร์

- 9.1 โสมเพจ
- 9.2 บุคมาร์ค
- 9.3 ที่อยู่เว็บล่าสุด
- 9.4 ตั้งค่า
- 9.5 บ่อนที่อยู่
- 9.6 หน้าทีเก็บไว้
- 9.7 เบ็ดไฟล์
- 9.8 หน้าก่อนหน้า

# การอ้างอิงคุณสมบัติอย่างย่อ

ในส่วนนี้จะอธิบายเกี่ยวกับคุณสมบัติโทรศัพท์ของคุณอย่างย่อ

## ข้อความ เมนู 1

<b>เขียนข้อความ</b>	เมนูนี้มีฟังก์ชันที่เกี่ยวข้องกับ SMS (Short Message Service) และ MMS (Multimedia Message Service) คุณสามารถส่ง SMS ไปยังรายชื่อหลายคนได้ในครั้งเดียว
<b>กดเข้า</b>	เครื่องจะแจ้งเตือนให้ทราบเมื่อมีข้อความเข้า โดยข้อความเหล่านี้จะถูกจัดเก็บใน ข้อความเข้า
<b>ร่าง</b>	คุณสามารถบันทึกข้อความชั่วคราวไว้ในแบบร่างได้
<b>กดออก</b>	โฟลเดอร์ที่เก็บข้อความที่ยังไม่ได้ส่ง หรือข้อความที่ล้มเหลวในการส่งเป็นการชั่วคราว
<b>ข้อความที่ส่งแล้ว</b>	หลังจากส่งข้อความออก ข้อความตัวอักษรหรือข้อความมัลติมีเดียจะถูกบันทึกในโฟลเดอร์ ส่งแล้ว
<b>เก็บถาวร</b>	คุณสามารถเข้าใช้ข้อความที่บันทึกไว้ได้
<b>ข้อความบริการ</b>	เลือกว่าจะรับ บล็อก ดู หรือแก้ไขแขนเนลเพื่อรับข้อความบริการข้อมูล (ข้อความออกอากาศ) และเลือกภาษาของข้อความบริการ
<b>ข้อความอัตโนมัติ</b>	มีข้อความที่กำหนดไว้ล่วงหน้าในรายการ คุณสามารถดูและแก้ไขข้อความสำเร็จรูปหรือสร้างข้อความใหม่
<b>ค่าตั้งข้อความ</b>	เมนูนี้ช่วยคุณตั้งค่าคุณสมบัติผู้ให้บริการเครือข่ายของคุณ

## ข้อความ เมนู 1 (ต่อ)

**ข้อความ SOS** ข้อความฉุกเฉินสามารถส่งไปยังหมายเลขที่กำหนดล่วงหน้า (สูงสุด 3) โดยกดปุ่ม 9 ค้างไว้ เมื่อกดปุ่ม 9 ค้าง จะแสดงป๊อปอัป 'ตั้งข้อความ SOS?' กด 'ใช่' แล้วพิมพ์ข้อความที่ต้องการ และป้อน 3 หมายเลขที่คุณต้องการส่งข้อความในโหมดฉุกเฉิน และกด บันทึก/เสร็จ

## สมุดโทรศัพท์ เมนู 2

คุณสามารถค้นหารายชื่อในสมุดโทรศัพท์ได้

หมายเหตุ: การค้นหาด้วยความสามารถทำได้ด้วยการป้อนอักขระตัวแรกของชื่อที่คุณต้องการค้นหา

**เพิ่มรายชื่อใหม่** คุณสามารถเพิ่มรายชื่อลงในสมุดโทรศัพท์ด้วยการใช้เมนูนี้

## บันทึกการโทร เมนู 3

**บันทึกการโทร** คุณสามารถดูรายการสายโทรเข้าหรือสายโทรออกทั้งหมดได้ เลือกประวัติการโทรซิม1 หรือประวัติการโทรซิม2 และเลือกตัวเลือกต่อไปนี้

- › **สายที่ไม่ได้รับ:** คุณสามารถดูสายที่ไม่ได้รับได้
- › **สายที่รับ:** คุณสามารถดูสายที่รับได้
- › **สายที่โทรออก:** คุณสามารถดูหมายเลขที่โทรออกได้

## บันทึกการโทร เมนู 3 (ต่อ)

- ▶ **ตัวตั้งเวลาโทร:** ช่วยให้คุณสามารถดูระยะเวลาของสายเรียกเข้าและโทรออกได้ และยังสามารกรีเซตตัวจับเวลาการโทรได้ใหม่อีกด้วย
- ▶ **ตัวนับข้อความตัวอักษร:** แอปพลิเคชันนี้จะนับจำนวนข้อความที่ได้รับและส่งจากโทรศัพท์
- ▶ **ตัวนับ GPRS:** คุณสามารถตรวจสอบจำนวนข้อมูลที่รับส่งบนเครือข่ายได้
- ▶ **ค่าโทร:** ดูค่าโทรที่เรียกเก็บจากหมายเลขที่โทรและเวลาโทรของสายที่ได้รับหรือสายที่โทรออกทั้งหมด คุณยังสามารถตั้งค่าการโทรได้ด้วย

## ตั้งค่า เมนู 4

### การตั้งค่าซิมคู่

เลือกจากตัวเลือกที่คุณต้องการเปลี่ยนแปลง: ซิมคู่เปิด / เฉพาะซิม1 เปิด / เฉพาะซิม2 เปิด / โหมดเครื่องบิน

**เคล็ดลับ:** ซิมคู่พูดเดี่ยว: ในขณะที่หนึ่งในซิมคู่กำลังใช้งานกับเครือข่าย เช่น WAP/JAVA/MMS/โทรศัพท์ อีกซิมหนึ่งจะไม่สามารถใช้บริการที่เกี่ยวข้องกับเครือข่ายได้

### โปรไฟล์

คุณสามารถปรับและกำหนดเสียงโทรศัพท์เองได้สำหรับเหตุการณ์และสภาพแวดล้อมต่างๆ

### ตั้งค่าจอ

คุณสามารถเปลี่ยนการตั้งค่าหน้าจอของโทรศัพท์ได้

### การเชื่อมต่อ

- ▶ **บลูทูธ:** คุณสามารถปรับการตั้งค่าในการเชื่อมต่อ BT ได้
- ▶ **บัญชีข้อมูล:** คุณสามารถจัดการรายการบัญชีข้อมูลที่ใช้สำหรับการตั้งค่าโปรไฟล์ใน WAP หรือ MMS ได้

## ตั้งค่า เมนู 4 (ต่อ)

### การโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้

**เคล็ดลับ:** ใช้งานบัญชีดำโดยการเลือกโหมด เป็น เปิด ในบัญชีดำจากการตั้งค่าขั้นสูง เมื่อเปิดโหมดบัญชีดำ ให้พิมพ์หมายเลขที่ต้องการในบัญชีดำและบันทึก ผู้ใช้จะไม่สามารถรับสายใดๆ จากหมายเลขที่บันทึกไว้ในบัญชีดำได้

### เครื่อง

- › **เวลาและวันที่:** ตั้งวันที่ เวลา โซนเวลา และรูปแบบ
- › **กำหนดการเปิด/ปิด:** เมนูนี้ให้คุณตั้งค่าเวลาที่โทรศัพท์จะเปิดหรือปิดโดยอัตโนมัติ เมื่อคุณตั้งค่าเวลาแล้ว โทรศัพท์จะเปิดโดยอัตโนมัติเมื่อถึงเวลาที่ระบุ สำหรับการปิด โทรศัพท์จะถามให้คุณยืนยันก่อนปิดเมื่อถึงเวลาที่คุณระบุไว้ คุณสามารถระบุเวลาที่แตกต่างกันได้ 4 เวลา
- › **ภาษา:** คุณสามารถเปลี่ยนภาษาของข้อความที่ใช้แสดงบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดป้อนภาษาด้วย
- › **ธีม:** ให้คุณเปลี่ยนรูปโฉมของหน้าจอโทรศัพท์
- › **ข้อความตกท้าย:** เมนูนี้ให้คุณกำหนดข้อความตกท้ายเมื่อเปิดโทรศัพท์ได้ คุณยังสามารถเลือกได้ว่าจะเปิดหรือปิดข้อความตกท้ายเมื่อเปิดเครื่อง
- › **ปุ่มเฉพาะ:** ให้คุณเปลี่ยนการตั้งค่าปุ่มฮอตคีย์ที่กำหนดให้กับปุ่มนาวิเกด (เมื่ออยู่ในโหมดสแตนด์บาย)

## ตั้งค่า เมนู 4 (ต่อ)

- ▶ **อัปเดตวันที่และเวลาอัตโนมัติ:** ให้คุณตั้งค่าโทรศัพท์เพื่ออัปเดตเวลาและวันที่อัตโนมัติตามโซนเวลาท้องถิ่นปัจจุบัน
  - ▶ **ตั้งค่า UART:** ให้คุณตั้งค่าพอร์ต UART เมื่อใช้คำสั่ง AT คุณสามารถเลือกระหว่าง SIM1 หรือ SIM2
  - ▶ **คำติตั้งอื่นๆ:** คุณสามารถตั้งค่าความสว่างและเวลาของหน้าจอได้
- เครือข่าย**      คุณสามารถตั้งค่าเลือกเครือข่าย และโหมดเครือข่ายโดยใช้เมนูนี้ คุณสามารถเพิ่มเครือข่ายที่ต้องการเชื่อมต่อในรายการที่ต้องการได้ด้วย
- เครือข่าย**
  - ▶ **ตั้งค่าความปลอดภัยซิม1/ซิม2:** เมนูนี้ให้คุณตั้งค่าความปลอดภัยของโทรศัพท์
  - ▶ **ล็อคเครื่อง:** คุณสามารถใช้รหัสล็อคตัวเครื่องเพื่อป้องกันการใส่โทรศัพท์ของคุณโดยไม่ได้รับอนุญาต
  - ▶ **ล็อคปุ่มกดโดยอัตโนมัติ:** คุณสามารถล็อคปุ่มกดอัตโนมัติหลังจากไม่ใช้งานสักครู่
  - ▶ **เปลี่ยนรหัสผ่าน:** เปลี่ยนรหัสผ่านโทรศัพท์ ป้อนรหัสเก่าตามด้วยรหัสใหม่
  - ▶ **แจ้งเครื่องหาย:** คุณสมบัต ATMT ของโทรศัพท์รุ่นนี้ช่วยให้คุณสามารถใช้ระบบการติดตามตรวจสอบตำแหน่งของโทรศัพท์มือถือถือในกรณีที่คุณทำหายหรือวางไว้ผิดที่
- การตั้งค่าความปลอดภัย**      คุณสามารถกลับไปเริ่มใช้ค่าทั้งหมดที่ตั้งมาจากโรงงานได้ คุณต้องใส่ รหัสป้องกัน เพื่อใช้งานฟังก์ชันนี้

## คลังภาพ เมนู 5

ภาพของฉันทัน	แสดงรายการไฟล์ภาพ
เสียงของฉันทัน	ไฟล์วิดีโอที่บันทึกไว้จะแสดงในรายการ
วิดีโอของฉันทัน	แสดงรายการไฟล์วิดีโอ
เกมส์ & แอปฯ ของฉันทัน	คุณสามารถเข้าสู่เกมส์และแอปพลิเคชันต่างๆ ในโทรศัพท์ของคุณ
อื่นๆ	เมื่อคุณได้รับไฟล์ที่มีรูปแบบที่ไม่ได้กำหนดไว้ทางบลูทูธ ไฟล์จะถูกบันทึกไว้ในโฟลเดอร์นี้

## มัลติมีเดีย เมนู 6

กล้องถ่ายรูป	คุณสามารถถ่ายภาพด้วยกล้องถ่ายรูปที่อยู่ในตัวโทรศัพท์ และปรับการตั้งค่าของกล้องได้ตามความต้องการ
บันทึกภาพวิดีโอ	คุณสามารถบันทึกวิดีโอคลิปด้วยกล้องถ่ายรูปในตัวได้
อัลบั้มภาพ	เลือกเพื่อดูภาพด้วยตัวเลือกหลังจากถ่ายภาพ
เครื่องเล่นมีเดีย	เครื่องเล่นให้คุณเล่นไฟล์เสียงและวิดีโอได้ คุณยังสามารถ จัดการรายการเล่นได้ด้วย
แสดงแบบสไลด์	โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของ คุณพร้อมกันเป็นภาพสไลด์
แก้ไขภาพ	คุณสามารถแก้ไขภาพได้ โปรแกรมสามารถปรับขนาด ตัด หรือเพิ่มเอฟเฟกต์ต่างๆ ในภาพได้

## บัลติมิดี๋ย เมนู 6 (ต่อ)

<b>วิทยุ FM</b>	คุณสามารถใช้วิทยุ FM โดยมีหรือไม่มีชุดหูฟังภายนอกได้ คุณสามารถฟังสถานีวิทยุที่คุณชอบได้ตลอดเวลา หมายเหตุ: คุณต้องเสียบชุดหูฟังกับช่องเสียบแอสนด์ฟรี เพื่อรับฟังวิทยุ และรับสัญญาณวิทยุได้ดียิ่งขึ้น
<b>เครื่องบันทึกเสียง</b>	คุณสามารถบันทึกเสียงเดือนได้

## นัดหมาย เมนู 7

<b>นาฬิกาปลุก</b>	คุณสามารถตั้งนาฬิกาปลุกให้ทำงานเมื่อถึงเวลาที่ระบุได้
<b>ปฏิทิน</b>	คุณสามารถดูปฏิทินและเพิ่มเหตุการณ์ที่นี้ในวันที่คุณเลือก
<b>งาน</b>	คุณสามารถดู แก้วไข และเพิ่มงานที่จะทำ
<b>หมายเหตุ</b>	คุณสามารถเพิ่มบันทึกใหม่ ดู และจัดการบันทึกที่มีอยู่
<b>เครื่องคิดเลข</b>	เครื่องคิดเลขจะดำเนินการคำนวณขั้นต้น คือ บวก, ลบ, คูณ และหาร
<b>นาฬิกาจับเวลา</b>	ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันนาฬิกาจับเวลาได้
<b>แปลงหน่วย</b>	ใช้แปลงหน่วยวัดให้เป็นหน่วยที่คุณต้องการ ประเภทของหน่วยวัดที่สามารถแปลงเป็นหน่วยต่างๆ ได้นั้นมีอยู่หลายประเภท: สกิลเงิน ความยาว น้ำหนัก
<b>เวลาทั่วโลก</b>	ฟังก์ชันเวลาทั่วโลกจะแสดงข้อมูลเวลาของเมืองใหญ่ทั่วโลก

## นัดหมาย เมนู 7 (ต่อ)

- ไปที่** ช่วยให้คุณตรงไปยังเมนูที่ค้นหา คุณสามารถตั้งรายการเป็น ไปที่
- ตัวจัดการไฟล์** ฟังก์ชันนี้ให้คุณดูเนื้อหาในหน่วยความจำภายในโทรศัพท์ และการหน่วยความจำภายนอก
- บริการซิม**

## แอปพลิเคชัน เมนู 8

- เกมส์ & แอปฯ** โทรศัพท์ LG-A165 ของคุณมาพร้อมกับเกมส์เพื่อช่วยให้คุณได้เพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในโฟลเดอร์นี้ กด เมนู และเลือก แอปพลิเคชัน เลือก เกมส์ & แอปฯ

## เบราว์เซอร์ เมนู 9

- โฮมเพจ** ใช้สำหรับเชื่อมต่อกับโฮมเพจ โฮมเพจจะเป็นไซต์ที่ได้รับอนุญาตไว้ในโปรไฟล์ที่เปิดใช้งาน
- บุ๊คมาร์ค** เมนูนี้ช่วยให้คุณจัดเก็บ URL ของเว็บเพจที่คุณชื่นชอบ เพื่อให้เขาใช้ได้ง่ายขึ้นในครั้งต่อไป
- ที่อยู่เว็บล่าสุด** คุณสามารถดูเพจล่าสุดเมื่อคุณเชื่อมต่ออินเทอร์เน็ตได้
- ตั้งค่า** คุณสามารถตั้งโปรไฟล์ แคช และความปลอดภัยที่สัมพันธ์กับบริการอินเทอร์เน็ต

## เบราว์เซอร์ เมนู 9 (ต่อ)

บ่อนที่อยู่	คุณสามารถเชื่อมต่อไปยังเว็บไซต์ที่คุณต้องการได้โดยตรงหลังจากบ่อน URL ให้กดปุ่ม ตกลง เพื่อทำการเชื่อมต่อไปยังไซต์ดังกล่าว
หน้าที่เก็บไว้	ให้คุณดูเว็บเพจที่บันทึกไว้ได้
เปิดไฟล์	คุณสามารถเปิดไฟล์ต่อไปนี้ที่บันทึกไว้ในโทรศัพท์ได้ WML, XHTML, HTM, HTML
หน้าก่อนหน้า	เมนูนี้จะแสดงประวัติของเพจที่ดูล่าสุด

## ❑ คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย ข้อมูลโดยละเอียดเพิ่มเติมมีอธิบายอยู่ในคู่มือเล่มนี้

### คำเตือน

- › เพื่อความปลอดภัยของคุณ โปรดใช้แต่แบตเตอรี่และแท่นชาร์จของแท้ที่กำหนดให้เท่านั้น
- › ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ เช่น ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์
- › ควรทิ้งแบตเตอรี่ตามวิธีที่กฎหมายกำหนด

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

**คำเตือน!** ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- › อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- › ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- › ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลายใดๆ)
- › อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

## ❑ คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

### **อุปกรณ์อิเล็กทรอนิกส์**

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- › ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ

### **ความปลอดภัยบนท้องถนน**

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- › ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- › หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- › ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

### **บริเวณที่ทำให้เกิดระเบิดได้**

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

### **บริเวณที่อาจเกิดการระเบิดได้**

ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

### **บนเครื่องบิน**

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- › ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

## ❑ คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

### เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

### การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายเซลลูลาร์บางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

### ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- › คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- › ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- › อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- › เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้ง จนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- › อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- › หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- › ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว

- ❑ คำแนะนำเพื่อความปลอดภัยและการทำงานอย่างมีประสิทธิภาพ (ต่อ)

## การรับพลังงานคลื่นความถี่วิทยุ

### ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-A165 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- › ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- › แม้วาระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- › ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก (10 กรัม)
- › ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.27 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.41 วัตต์/กก. (10 กรัม)
- › ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อหนึ่ง (1) กรัม

## ❑ อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

### แบตเตอรี่มาตรฐาน



### อะแดปเตอร์สำหรับชาร์จแบตเตอรี่



### ชุดหูฟัง



### หมายเหตุ

- › ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- › อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

## □ ข้อมูลทางเทคนิค

### อุณหภูมิแวดล้อม

- › สูงสุด: +55°C (คายประจุ)  
+45°C (ขณะชาร์จ)
- › ต่ำสุด: -10°C

### ศูนย์บริการ LG โดย

บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน เลขที่ 72/127

ถ. สมเด็จพระเจ้าตากสิน แขวงมคคโล เขตธนบุรี  
กรุงเทพฯ 10600

วันและเวลาทำการ: จันทร์-อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

# LG-A165 | USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.

## Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.' The customer shall bear the cost of one SMS for the product authentication program.

In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



# Contents

Installing the SIM card and the handset battery.....	3
Phone Components .....	4
Selecting functions and options...	6
Entering Text .....	7
Installing a Memory Card .....	8
How to set the tone.....	9
FM Radio.....	10
Activating and switching SIM cards .....	11
Anti Theft Mobile Tracker (ATMT) .....	12
Menu Tree.....	13
Quick feature reference.....	14
Installing LG PC Suite on your computer.....	22
Guidelines for safe and efficient use .....	23
Accessories .....	27
Technical Data .....	28

## Installing the SIM card and the handset battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


**Important!** > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations


Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

**Note:** Fully charge the battery before using it for the first time.

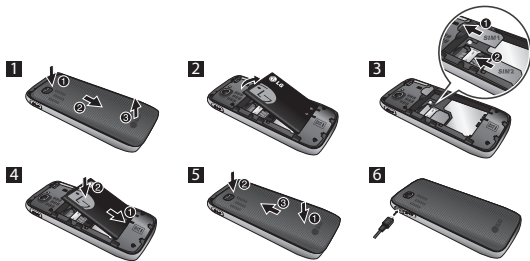

## Phone Components

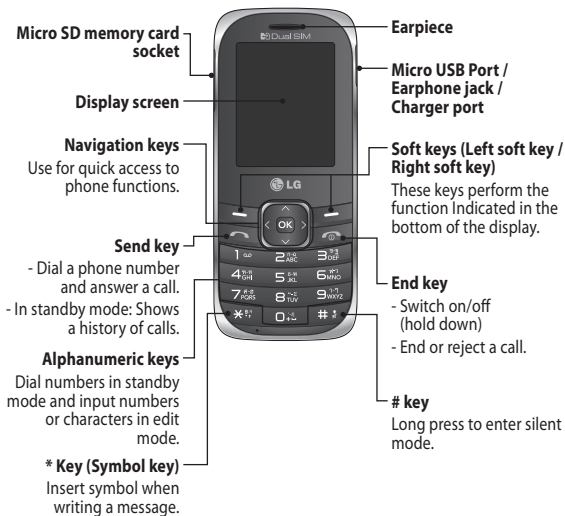


## Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

## Making a call

1. Enter a phone number including the area code.
2. Press the ↵[Send] key or select options > call to call the number.
3. To end the call, press the ⏏ key.



## Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the ↵[Send] key or select options > call to call the number.

## Answering a call

1. When you receive a call, the phone rings.
2. Press the ↵[Send] key or select option > OK to answer a call.
3. To end the call, press the ⏏ key.

## Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key or center soft key to access the available Menu.

Press the right soft key to access the available Names (Names).

## Entering Text

You can enter alphanumeric characters by using the phone's keypad.


### T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

### 123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

### Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol** or press  Key. Use the navigation keys to select the desired symbol and press the OK key.

## Installing a Memory Card

Using a memory card can expand the available storage space of your mobile phone. To insert a memory card, insert it into the card slot until it clicks into place. Ensure that the golden contact area faces downwards, as shown in the figure.

**Note:** A memory card is an optional accessory.




## How to set the tone

You may set up the following different profiles to adapt to different environmental conditions.

1. Select Settings from the main menu, then Select Profiles.
2. Select a profile and press [Options - Customize] to set the ring tone.
3. Press the left soft key [OK] and then you can set the desired ring tone.

Your phone also provides the following options to customize tones/alert types:

- › **Tone settings:** Selects a tone type (Incoming call, Power on, Power off, Message, Keypad).
- › **Volume:** Sets desired volume (Ringtone, Key tone).
- › **Alert type:** Selects an alert type (Ring only, Vib. only, Vib. and ring, Vib. then ring) for the ringing tone.
- › **Ring type:** Selects a ring type (Single, Repeat).
- › **Extra tone:** Selects a extra tone (Warning, Error, Camp on).
- › **Answer mode:** If you select the Any key, you can receive a call by pressing any key except the  key and the right soft key.

## FM Radio (This function may be different in different regions.)

Listens to FM radio station. You can enjoy listening FM without using headset as phone supports wireless FM service.

1. From main menu select Media then select FM radio.
2. Use navigation keypad to search radio station. You can also press Options to search radio frequency for available channels and automatically store to the channel list.
3. Press **Options** to edit the channel list. There are 9 stations you may pre-set. Your phone provides the following options for FM radio:
  - › **Record:** Records your favorite radio programs.
  - › **Channel List:** Bookmark up to 9 radio stations by entering the channel name and frequency.
  - › **Manual input:** You can input frequency manually by using this option.
  - › **Minimize:** This function allows you to do other work on phone by minimizing FM radio.
  - › **Auto Search:** Auto search available channels and automatically store them to the channel list.
  - › **Settings:** Allows you to switch the record audio quality and the record format. You can record in AMR or WAV formats.
  - › **Schedule FM record:** You can record FM program on schedule when you set up the recording time.
  - › **Append:** Resumes a previously recorded file.

## Activating and switching SIM cards

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards.

This function allows you to select the default SIM card for call or message in Contact, Call logs and Message box.

1. Select [Settings] from the main menu, and then select [Dual SIM settings].

### Note

- › If there is only one SIM card installed, this SIM card would be activated as default.

## Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security settings > Anti-theft mobile tracker** and press **OK**.
2. Then in the Anti-theft mobile tracker menu, edit and save the name in **Sender name** and numbers in **Sending number list**.
3. Select **Set Anti-theft** and press **OK**.
4. Switch **On** or **Off** and press **OK**.
5. Input the security code to enable or disable this function.

### Note

› The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

# Menu Tree

## 1. Messaging

- 1.1 Create message
- 1.2 Inbox
- 1.3 Drafts
- 1.4 Outbox
- 1.5 Sent items
- 1.6 Saved items
- 1.7 Broadcast message
- 1.8 Templates
- 1.9 Message settings
- 1.10 SOS message

## 2. Contacts

- 2.1 Add new contact

## 3. Log

- 3.1 Sim1 call log
- 3.2 Sim2 call log

## 4. Settings

- 4.1 Dual SIM settings
- 4.2 Profiles

## 4.3 Display

- 4.4 Connectivity
- 4.5 Call
- 4.6 Phone
- 4.7 Network
- 4.8 Security settings
- 4.9 Restore factory settings

## 5. Gallery

- 5.1 My images
- 5.2 My sounds
- 5.3 My videos
- 5.4 My game & apps
- 5.5 Others

## 6. Media

- 6.1 Camera
- 6.2 Video recorder
- 6.3 Image viewer
- 6.4 Media player
- 6.5 Slide show
- 6.6 Photo editor
- 6.7 FM radio
- 6.8 Voice recorder

## 7. Organiser

- 7.1 Alarm clock
- 7.2 Calendar
- 7.3 To-do list
- 7.4 Notes
- 7.5 Calculator
- 7.6 Stopwatch
- 7.7 Converter
- 7.8 World time
- 7.9 Go to
- 7.10 File manager
- 7.11 SIM services

## 8. Applications

- 8.1 My games & apps
- 8.2 Settings

## 9. Web

- 9.1 Home
- 9.2 Bookmarks
- 9.3 Last web address
- 9.4 Settings
- 9.5 Go to address
- 9.6 Saved pages
- 9.7 Open file
- 9.8 Recent pages

## Quick feature reference

This section provides brief explanations of features on your phone.

### Messaging Menu 1

- |                          |  |
|--------------------------|--|
| <b>Create message</b>    | This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service). You can send SMS to many contacts at a time.                           |
| <b>Inbox</b>             | You will be alerted when you have received messages. They will be stored in Inbox.   |
| <b>Drafts</b>            | You can save the message temporarily in Drafts.  |
| <b>Outbox</b>            | This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.   |
| <b>Sent items</b>        | After sending out the message, the text message or multimedia message is saved in the Sent folder.   |
| <b>Saved items</b>       | You can access your saved messages.  |
| <b>Broadcast message</b> | Choose whether to receive, block, view or edit channels to receive information service messages (broadcast messages). Also choose the languages of information service messages. |
| <b>Templates</b>         | There are pre-defined messages in the list. You can view and edit the template messages or create new messages.  |
| <b>Message settings</b>  | This menu allows you to set features of your network service provider.   |

## Messaging Menu 1 (Continued)

**SOS message** An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 Key. On long press of 9 key, a popup comes, 'Set SOS message?'. Press 'Yes' then type the required message and input 3 numbers for which you want to send the message in emergency mode and press Save/Done.

## Contacts Menu 2

You can search for contacts in phonebook.

**Note:** Instant searching is available by inputting the initial letter of the name you want to search.

**Add new contact** You can add phonebook entries by using this menu.

## Log Menu 3

**Call log** You can view all lists of outgoing or incoming calls. Select sim1 call log or sim2 call log and from that select the following.

- › **missed calls:** You can view the unanswered calls.
- › **received calls:** You can view the Received calls.
- › **dialled numbers:** You can view the outgoing call numbers.

## Log Menu 3 (Continued)

- › **call duration:** Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.
- › **text msg. counter:** This application will count the number of messages received and sent from the phone.
- › **packet data counter:** You can check the amount of data transferred over the network.
- › **call costs:** View the charges applied to your dialled numbers and the call duration of all your received and dialled calls. Also you can do Cost Settings.

## Settings Menu 4

- Dual SIM settings** Choose from the options what you want to change: Dual SIM open / Only SIM1 open / Only SIM2 open / Flight mode.
- Tip:** Dual SIM Single Talk : while one of Dual SIM is operating with network such like WAP/JAVA/MMS/Call, another SIM can not use network related service.
- Profiles** You can adjust and customize the phone tones for different events, or environments.
- Display** You can change settings for the phone display.
- Connectivity**
- › **Bluetooth:** You can adjust setting on BT connection.
  - › **Data account:** You can manage data account list that is used for profile setting on WAP or MMS.

## Settings Menu 4 (Continued)

### Call

You can set the menu relevant to a call.

**Tip:** Enable the Black list, by selecting Mode to ON in Black list, from Advance Settings. Once you switch On the Black List Mode, Type the Required Number to be in the Black List and save it. User can not receive any calls from the numbers which are saved in Black list.

### Phone

- › **Time and date:** Set date, time, time zone, and formats.
- › **Schedule power on/off:** This menu allows you to set up time for the phone automatically power on or off. Once the time is set by you, the phone will power on automatically at the time specified. As for the powering off, the phone will ask you for the confirmation before powering off at the time specified by you. You can specify up to 4 different times.
- › **Language/Writing language:** You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
- › **Themes:** Allows you to change the whole look of your phone display.
- › **Greeting text:** This menu allows you to customize the greeting text upon the phone's power on. You can also choose whether you want the greeting text on or off upon power on.
- › **Dedicated key:** Allows you to change the preferences on the Hotkeys that are currently assigned for your navigation keys (when in standby mode).

## Settings Menu 4 (Continued)

- › **Auto update of date and time:** Allows you to set the phone to automatically update the time and date according to the current local time zone.
- › **UART settings:** User will be able to perform the operation from PC using modem for selected SIM card in UART settings (like AT command using HyperTerminal, PC dialup). User will be able to make the GPRS dialup on PC using the SIM which is selected in UART setting for e.g. if SIM1 is selected then user will be able to make the connection using selected SIM card.
- › **Misc. settings:** You can set the brightness and time of the display screen.

### Network

You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

### Security settings

- › **sim1/sim2 security settings:** This menu allows you to set the phone's safety.
- › **Phone lock:** You can use a security code to avoid unauthorized use of the phone.
- › **Auto keypad lock:** You can make the key pad locked automatically after some time.
- › **Change password:** Changing your phone password, enter the old code followed by the new code.
- › **Anti-theft mobile tracker:** The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.

### Restore factory settings

You can initialize all factory defaults. You need Security code to activate this function.

## **Gallery** Menu 5

<b>My images</b>	Shows the list of image files.
<b>My sounds</b>	Saved audio files are displayed in the list.
<b>My videos</b>	Displays the list of video files.
<b>My game &amp; apps</b>	You can access a great selection of games and applications on your phone.
<b>Others</b>	When you receive files of an undefined format via Bluetooth, the files are saved in this folder.

## **Media** Menu 6

<b>Camera</b>	You can take photos with the built in camera and adjust its settings to suit your needs.
<b>Video recorder</b>	You can record a video clip through the built-in camera.
<b>Image viewer</b>	Choose to view the picture with options after taking a photo.
<b>Media player</b>	The player allows you play audio and video files. You can also manage play lists.
<b>Slide show</b>	Slideshow mode will show all the photos in your gallery one at a time as a slideshow.
<b>Photo editor</b>	You can edit images. The editor can resize, clip or add different effects to the picture.

## Media Menu 6 (Continued)

- FM radio** You can use FM radio with or without your external earphone. You can listen to your favourite radio station anytime.  
**Note:** You have to insert Ear-mic into Handsfree connector in order to listen to the Radio and keep the good radio reception.
- Voice recorder** You can record voice memo.

## Organiser Menu 7

- Alarm clock** You can set the alarm clock to go on at a specified time.
- Calendar** You can see the calendar and add the events here in selected date.
- To-do list** You can view, edit and add tasks to do.
- Notes** You can add new memo, view and manage saved memos.
- Calculator** The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.
- Stopwatch** This option allows you to use the function of a stopwatch.
- Converter** This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Length, Weight.
- World time** The World time function provides time information on major cities worldwide.

## **Organiser** Menu 7 (Continued)

- Go to** It helps you to go to the menu you search for. You can set the item as Go to.
- File manager** This function allows you to view the content in your internal phone memory and the external memory card.
- SIM services** Display additional functions or applications provided by your network service provider.

## **Applications** Menu 8

- My games & apps** Your LG-A165 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press Menu and select Applications. Choose My games & apps.

## **Web** Menu 9

- Home** Connects to a homepage. The homepage will be the site which is defined in the activated profile.
- Bookmarks** This menu allows you to store the URL of favorite web pages for easy access at a later time.
- Last web address** You can view the latest page when you connected internet.
- Settings** You can set the profile, cache and security related to internet service.

## Web Menu 9 (Continued)

<b>Go to address</b>	You can connect directly to the site you want. After entering a specific URL, press OK key to make the connection done to connect to the site.
<b>Saved pages</b>	Allows you to view your saved web pages.
<b>Open file</b>	You can open the following files saved in the phone. WML, XHTML, HTM, HTML.
<b>Recent pages</b>	This menu shows the history of recently browsed pages.

## Installing LG PC Suite on your computer

1. Go to [www.lgapplication.com](http://www.lgapplication.com) and choose your region first and then your country.
2. Select Manual & Software and click Go to Manual & S/W download section to download.
3. Follow the instructions on screen to complete the LG PC Suite Installation on your PC.

## ☐ Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### Warning

- › For your safety, use ONLY specified ORIGINAL batteries and chargers.
- › Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- › Batteries should be disposed off in accordance with relevant legislation.

### Product care and maintenance

**WARNING!** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- › Do not disassemble this unit. Take it to a qualified service technician when repair work is required.  
Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- › The unit should be kept away from heat sources such as radiators or cookers.
- › Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- › Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

## **☐ Guidelines for safe and efficient use (Continued)**

### **Electronic devices**

All mobile phones may get interference, which could affect performance.

- › Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

### **Road safety**

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- › Do not use a hand-held phone while driving.
- › Use a hands-free kit, if available.
- › Pull off the road and park before making or answering a call if driving conditions so require.

### **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### **Potentially explosive atmospheres**

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

### **In aircraft**

Wireless devices can cause interference in aircraft.

- › Turn off your mobile phone before boarding any aircraft.

### **Children**

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

## □ Guidelines for safe and efficient use (Continued)

### Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- › You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- › Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- › Do not disassemble or short-circuit the battery pack.
- › Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- › Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- › Risk of explosion if battery is replaced by an incorrect type.
- › Dispose off used batteries according to the manufacturer's instructions.

## ☐ Guidelines for safe and efficient use (Continued)

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-A165 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- › The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- › While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- › The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- › The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.27W/kg (10g) and when worn on the body is 1.41W/kg (10g).
- › SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

## □ Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

### Standard Battery



### Travel Adapter



### Headset



### Note

- › Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- › Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

## **Technical Data**

### **Ambient Temperatures**

- › **Max** : +55°C (discharging)  
+45°C (charging)
- › **Min** : -10°C

### **LG Service Center**

by LG Electronics (Thailand) Co. Ltd.  
72/127 Somdetprachaw Taksin Rd., Bookalo,  
Thonburi, Bangkok 10600  
Working day : Mon-Sun 07:00 - 19:00  
Call center : 0-2878-5757