



ไทย  
ENGLISH



## GB230

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่าง  
จากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์  
ของโทรศัพท์หรือผู้ให้บริการของคุณ



[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0343516 (1.0)

CE 0168

Bluetooth QD ID B015321

# คู่มือการใช้ GB230 - ไทย

คู่มือนี้จะช่วยให้คุณทำความรู้จักโทรศัพท์มือถือรุ่นใหม่ของคุณ ซึ่งจะให้คำอธิบายที่เป็นประโยชน์ของคุณสมบัติต่างๆ ในโทรศัพท์ของคุณ

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ




# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



## การใส่การ์ดหน่วยความจำ

ยกฝาปิดการ์ดหน่วยความจำขึ้น และใส่การ์ด micro SD โดยให้พื้นที่หน้าสัมผัสสีทองคว่ำลง ปิดฝาปิดการ์ดหน่วยความจำจนเข้าที่ในการถอดการ์ดหน่วยความจำให้ดันที่การ์ดเบาๆ ดังแสดงในภาพ

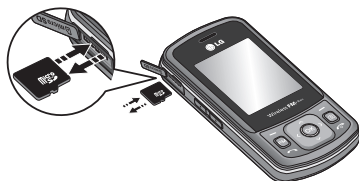

หมายเหตุ: การ์ดหน่วยความจำเป็นอุปกรณ์เสริม

## การฟอร์แมตการ์ดหน่วยความจำ

กด **เมนู** แล้วเลือก **ตั้งค่า**

เลือก **สถานะความจำ** เลือก **ความจำการ์ด** แล้วกด **ฟอร์แมต**  
แล้วป้อนรหัสป้องกัน

**คำเตือน:** เมื่อคุณฟอร์แมตการ์ดหน่วยความจำ ข้อมูลทั้งหมดจะถูกลบออก หากคุณไม่ต้องการให้ข้อมูลในการ์ดหน่วยความจำหายไป ให้สำรองข้อมูลไว้ก่อน

# การใส่ซิมการ์ดและการชาร์จแบตเตอรี่


## การใส่ซิมการ์ด

เมื่อคุณสมัครขอใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับซิมการ์ดพלקอินพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ, บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ

**ข้อสำคัญ!** > ซิมการ์ดพלקอินและซิวส์สัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่ หรือถอดการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดให้พ้นมือเด็กเล็ก

## ภาพประกอบ

- 1 เปิดฝาปิดแบตเตอรี่
- 2 ถอดแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ปิดฝาปิดแบตเตอรี่
- 6 ชาร์จแบตเตอรี่

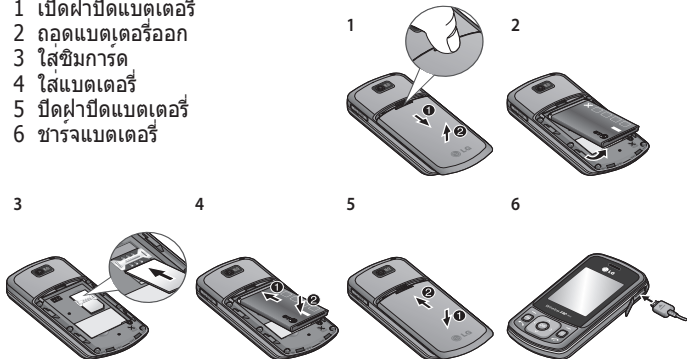

**คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

## แผนผังเมนู

EDGE Rx เท่านั้น

### ข้อความ

สร้างข้อความ  
ถอดเขา  
เมสเสจของเงิน  
ร่าง  
ถอดออก  
รายการที่ส่ง  
รายการที่บันทึกไว้  
อีโมติคอน  
ตั้งค่าข้อความ

### รายชื่อ

ชื่อ  
ตั้งค่า  
กลุ่ม  
โทรด่วน  
เบอร์บริการ  
เบอร์ส่วนตัว  
นามบัตร

### บันทึกการโทร

บันทึกการโทร  
สายไม่ได้รับ  
สายที่ได้รับ  
เบอร์ที่ติดคอ  
เวลาโทร  
ตัวนับข้อมูลแพ็คเกจ  
ค่าโทร

### ตั้งค่า

โปรไฟล์  
แสดง  
วันที่ & เวลา  
การเชื่อมต่อ  
การโทร  
โทรศัพท์  
เครือข่าย  
โปรไฟล์อินเตอร์เน็ต  
จุดเชื่อมต่อ  
การเชื่อมต่อข้อมูลแพ็คเกจ  
ระบบป้องกัน  
สถานะความจำ  
เรียกคืนการตั้งค่า

### คลังภาพ

การตั้งค่าจำ  
ภาพ  
เสียงส่วนตัว  
วิดีโอ  
เกมส์ & แอปฯ  
อื่นๆ

### มีเดีย

กล้องถ่ายรูป  
วิดีโอ  
เพลง  
วิทยุ FM  
บันทึกเสียง  
สร้างริงโทน

### สมุดบันทึก

นาฬิกาปลุก  
ปฏิทิน  
รายการสิ่งที่ต้องทำ  
บันทึก  
บันทึกกลับ  
เครื่องคิดเลข  
นาฬิกาจับเวลา  
ตัวค้นหาวันที่  
ตัวแปลงหน่วย  
เวลาทั่วโลก  
ไปที่  
บริการซิม  
ตั้งค่า

### แอปพลิเคชัน

เกมส์ & แอปฯ  
ตั้งค่า

### เว็บ

โฮม  
เบราว์เซอร์  
เว็บแอดเดรสล่าสุด  
ตั้งค่า  
ไปที่แอดเดรส  
เพจที่บันทึก

## การโทร

### การโทรออก

1 ป้อนหมายเลขโดยใช้ปุ่มกด  
หากต้องกรอกรบที่ละหมายเลข  
กด **ลบ**

2 กด  เพื่อเริ่มการโทรออก


3 หากต้องกรอกรางสาย กด 

**เคล็ดลับ!** ในการป้อน + เมื่อโทรออก  
ต่างประเทศ ให้กดปุ่ม **0** คางไว้

### การโทรออกโดยใช้รายชื่อ

1 เลือก **ชื่อ** จากหน้าจอแสดงต้นแบบ


2 ป้อนตัวอักษรตัวแรกของรายชื่อที่  
คุณต้องการโทรออกโดยใช้ปุ่มกด  
ตัวอย่างเช่น สำหรับ **Office**  
ให้กดหมายเลข 6 ติดต่อกัน 3 ครั้ง  
เพื่อเลือกตัวอักษร "O"

3 เลือก **การโทร** หรือกด   
เพื่อเริ่มการโทรออก

### การรับสายและการปฏิเสธสาย เรียกเขา

เมื่อโทรศัพท์ดังขึ้น ให้กด   
เพื่อรับสาย

คุณสามารถควบคุมระดับเสียงได้โดย  
กดปุ่มด้านข้าง

กด  หรือเลือก **ปฏิเสธ**  
เพื่อปฏิเสธสายเรียกเขา

**เคล็ดลับ!** คุณสามารถเปลี่ยนการตั้งค่า  
ในโทรศัพท์เพื่อรับสายด้วยวิธีอื่นๆได้ กด  
**เมนู** เลือก **ตั้งค่า** แล้วเลือก **การโทร**  
เลือก **โหมดตอบรับ** และเลือกจาก  
**กดปุ่มรับสาย**, **เลื่อนขึ้น** และ  
**รับได้ทุกปุ่ม**

### โทรด่วน

คุณสามารถกำหนดหมายเลขโทรด่วน  
ให้กับรายชื่อที่คุณโทรหาบ่อยๆ ได้

### การดูข้อมูลการโทรของคุณ

คุณสามารถดูบันทึกของสายที่ไม่ได้รับ  
สายที่รับ และสายโทรออกได้ หากว่า  
เครือข่ายสนับสนุนการแสดงผลหมายเลข  
โทรเขา (Calling Line Identification:  
CLI) ในพื้นที่ให้บริการ

### การเปลี่ยนการตั้งค่าการโทร

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับ  
การโทรได้ กด **เมนู** เลือก **ตั้งค่า**  
แล้วเลือก **การโทร**

- **การโอนสาย** - เลือกว่าจะโอนสาย  
ของคุณหรือไม่
- **ป้องกันการโทร** - เลือกเมื่อคุณต้องการ  
ป้องกันการโทรออก
- **กำหนดเบอร์โทรออก** - เลือก  
หมายเลขที่สามารถโทรออกจากโทรศัพท์  
ของคุณได้ คุณจะต้องใช้รหัส  
PUK2 จากผู้ให้บริการด้วย เฉพาะ  
หมายเลขที่อยู่ในรายการหมายเลข  
โทรออกที่กำหนดเท่านั้นที่สามารถ  
โทรออกจากโทรศัพท์ได้

- **สายเรียกข้อน** - แจ้งเตือนให้ทราบเมื่อมีสายเรียกข้อน (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)
- **ปฏิเสธการรับสาย** - ตั้งค่ารายการปฏิเสธการรับสาย
- **ส่งหมายเลขตัวเอง** - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)
- **โทรซ้ำอัตโนมัติ** - เลือก **เปิด** หรือ **ปิด**
- **โหมดรับสาย** - เลือกว่าจะรับสายโดยไข่มุ่ในใดๆ หรือปุ่มรับสายเท่านั้น หรือเลื่อนขึ้น
- **ตัวจับเวลาการโทรฟรี** - เลือกว่าจะแสดงหรือไม่
- **เดือนทุกนาทึ** - เลือก **เปิด** เพื่อฟังเสียงเดือนทุกนาทึระหว่างที่ไขสาย
- **โหมดดอรับ BT** - ตั้งค่า แชนด์ฟรี หรือ ตัวเครื่อง
- **บันทึกเบอร์ใหม่** - เลือก **ใช่** หรือ **ไม่**
- **การตั้งค่าการปิดสไลด์** - เลือกวางสาย หรือ ดำเนินการโทรต่อ

## รายชื่อ

### การค้นหารายชื่อ

- 1 เลือก **ชื่อ** จากหน้าจอสแตนด์บาย
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยไข่มุ่กด

- 3 หากต้องการเลื่อนรายชื่อให้ไข่มุ่ลูกศรขึ้นและลง

### การเพิ่มรายชื่อใหม่

- 1 กด **รายชื่อ** และเลือก **ชื่อ** แล้วกด **ตัวเลือก-เพิ่มรายชื่อใหม่**
- 2 ป้อนข้อมูลทั้งหมดที่คุณมีในฟิลด์ที่ใหม่ แล้วเลือก **ตัวเลือก-เสร็จ**

### การเพิ่มรายชื่อให้กับกลุ่ม

คุณสามารถบันทึกรายชื่อต่างๆไว้ในกลุ่ม เช่น แยกกลุ่มเพื่อนร่วมงานและครอบครัวออกจากกัน มีกลุ่มที่ได้รับการตั้งค่าไว้ในเครื่องอยู่แล้วจำนวนหนึ่ง ได้แก่ **ครอบครัว**, **เพื่อน**, **เพื่อนร่วมงาน**, **วีไอพี**, **กลุ่ม 1**, **กลุ่ม 2** และ **กลุ่ม 3**

## ข้อความ

โทรศัพท์ GB230 ได้รวมฟังก์ชันในการส่งข้อความตัวอักษร และข้อความมัลติมีเดีย อีเมล, รวมทั้งข้อความบริการของเครือข่าย

### การส่งข้อความ

- 1 กด **เมนู** เลือก **ข้อความ** แล้วเลือก **สร้างข้อความ**
- 2 เอดีเตอร์ข้อความใหม่จะเปิดขึ้น เอดีเตอร์ข้อความใหม่จะรวม **ข้อความตัวอักษร** และ **ข้อความมัลติมีเดีย** เข้าด้วยกันเพื่อ

ให้ใช้งานและสลับระหว่างเอดีเตอร์  
ไต่จ่ายค่าเริ่มต้นของเอดีเตอร์  
ข้อความ คือข้อความตัวอักษร

### 3 การป้อนข้อความ

4 เลือก **ตัวเลือก-แทรก** เพื่อเพิ่ม  
**ภาพ, คลิป วิดีโอ, คลิปเสียง,**  
**นัดหมาย, นามบัตร, บันทึกรูป,**  
**ฟีดข้อความ, สิ่งที่ต้องทำ หรือ**  
**รูปแบบข้อความ**

### 5 กด **ตัวเลือก - ปุ่มรับสาย**

#### การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการ  
เดินทางได้โดยใช้อีเมลบนโทรศัพท์  
GB230 ของคุณ ซึ่งสามารถตั้งค่าอีเมล  
แอคเคาท์แบบ POP3 หรือ IMAP4  
ได้อย่างรวดเร็วและง่ายดาย

1 กด **เมนู เลือก ข้อความ** แล้วเลือก  
**ตั้งค่าข้อความ**

2 เลือก **อีเมล** แล้วเลือก  
**แอคเคาท์อีเมล**

3 กด **เพิ่ม** แล้วตั้งค่าแอคเคาท์อีเมล

**การส่งอีเมลโดยใช้แอคเคาท์ใหม่**  
หากต้องการส่ง/รับอีเมล คุณควรตั้งค่า  
อีเมลแอคเคาท์

1 เลือก **เมนู เลือก ข้อความ**  
แล้วเลือก **สร้างข้อความ**

2 เลือก **อีเมล** และอีเมลใหม่จะเปิดขึ้น

### 3 เขียนหัวเรื่อง

### 4 การป้อนข้อความ

5 กด **ตัวเลือก เลือก แทรก** เพื่อเพิ่ม  
**ภาพ, คลิปวิดีโอ, คลิปเสียง,**  
**นามบัตร, นัดหมาย หรือ บันทึกรูป**

6 กด **ส่ง** แล้วป้อนแอตเตรสของผู้รับ  
หรือกด **ตัวเลือก** แล้วเลือก **แทรก-**  
**รายละเอียดรายชื่อ** เพื่อเปิดรายชื่อ

7 กด **ส่ง** แล้วอีเมลจะถูกส่งออกไป

#### การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษร  
ได้โดยใช้ปุ่มกดของโทรศัพท์ ในเครื่อง  
มีวิธีป้อนข้อความให้เลือกใช้ได้  
ดังนี้: ระบบช่วยสะกดคำ T9,  
การป้อนตัวอักษรด้วยตนเอง และ  
โหมด 123

**หมายเหตุ** ฟีดบางฟีดอาจใช้โหมด  
ป้อนข้อความได้โหมดเดียว (เช่น หมายเลข  
โทรศัพท์ที่ฟีดสมุดที่อยู่)

#### ระบบช่วยสะกดคำ T9

ระบบช่วยสะกดคำ T9 จะใช้พจนานุกรม  
ภายในเครื่อง เพื่อรับรู้คำศัพท์ที่คุณ  
เขียนตามลำดับการกดปุ่ม เพียงกดที่  
ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณ  
จะป้อน พจนานุกรมจะรับรู้ได้ถึงคำ  
ศัพท์ เมื่อคุณป้อนตัวอักษรครบทุก  
ตัวแล้ว

## โหมดการป้อนตัวอักษรด้วยตนเอง

โหมดนี้ให้คุณป้อนตัวอักษรโดยการกดปุ่มที่มีตัวอักษรที่ต้องการหนึ่งครั้ง สองครั้ง สามครั้ง หรือสี่ครั้งจนกระทั่งตัวอักษรที่ต้องการปรากฏขึ้น

### โหมด 123

ป้อนตัวเลขต่างๆ โดยกดปุ่มเพียงครั้งเดียวต่อตัวเลขหนึ่งตัว คุณสามารถเพิ่มตัวเลขได้ แม้ขณะที่ยังคงอยู่ในโหมดตัวอักษร โดยกดปุ่มตัวเลขที่ต้องการค้างไว้

### โพลเดอ์ข้อความ

กด **เมนู** เลือก **ข้อความ** โครงสร้างโพลเดอ์ที่ใช้ในโทรศัพท์ GB230 มีโครงสร้างที่เขาใจง่าย

**สร้างข้อความ** - ใช้สร้างข้อความใหม่  
**ถอดเขา** - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในถอดเขา

**เมลบอกซ์ของฉัน** - มีข้อความอีเมลของคุณทั้งหมด

**ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

**ถอดออก** - โพลเดอ์นี้เป็นโพลเดอ์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป หรือจัดเก็บข้อความที่ส่งไม่สำเร็จ

**รายการที่ส่ง** - ข้อความทั้งหมดที่ส่งออกไปจะอยู่ใน **โพลเดอ์ส่ง**

**รายการที่บันทึกไว้** - คุณสามารถเข้าไปบันทึก ข้อความที่บันทึก,รูปแบบข้อความ และ MMS อัตโนมัติ

**อีโมติคอน** - ประโยชน์ของรายการอีโมติคอน พร้อมเขียนสำหรับตอบกลับอย่างไร

## มีเดีย

### เพลง

โทรศัพท์ GB230 มีเครื่องเล่นเพลงภายในตัวที่ใหญ่คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

### การเล่นเพลง

- 1 กด **เมนู** แล้วเลือก **มีเดีย** จากนั้นเลือก **เพลง**
- 2 เลือก **ทุกแทร็ค** แล้วเลือกเพลงที่คุณต้องการเล่น
- 3 เลือก **II** เพื่อหยุดเล่นเพลงชั่วคราว
- 4 เลือก **▶▶** เพื่อข้ามไปยังเพลงถัดไป
- 5 เลือก **◀◀** เพื่อข้ามไปยังเพลงก่อนหน้า

- 6 เลือก **กลับ** เพื่อหยุดเล่นเพลง และกลับไปเมนูเครื่องเล่นเพลง


### การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลเดอ์ทุกเพลง

- 1 กด **เมนู** แล้วเลือก **มีเดีย**
- 2 เลือก **เพลง** แล้วเลือก **รายการเพลง**
- 3 กด **ตัวเลือก** แล้วเลือก **รายการเพลงใหม่** ป้อนชื่อรายการเพลงแล้วกด **บันทึก**
- 4 โพลเดอ์ **ทุกเพลง** จะปรากฏขึ้น เลือกเพลงทั้งหมดที่คุณต้องการรวมในรายการเพลงโดยเลื่อนไปที่เพลงและเลือก
- 5 เลือก **เสร็จ** เพื่อจัดเก็บรายการเพลง


### กล้อง

#### การถ่ายภาพด้วย

- 1 เลือก **เมนู** แล้วเลือก **มีเดีย** เลือก **กล้องถ่ายรูป** เพื่อเปิดช่องมองภาพ
- 2 ให้ถือโทรศัพท์ และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่จะถ่าย
- 4 กด **ปุ่มกลาง**  เพื่อถ่ายภาพ

### กล้องวิดีโอ

#### การถ่ายวิดีโอด้วย

- 1 ในหน้าจอสแตนด์บาย ให้เลือก **เมนู** แล้วเลือก **มีเดีย**
- 2 เลือก **วิดีโอ**
- 3 หันเลนส์ไปทางวัตถุที่ต้องการถ่าย
- 4 เลือก  เพื่อเริ่มต้นการบันทึก
- 5 **Rec** จะปรากฏขึ้นในมุมซ้ายด้านล่างของช่องมองภาพ และตัวตั้งเวลาจะแสดงระยะเวลาของวิดีโอของคุณ
- 6 เลือก **หยุด** เพื่อหยุดการบันทึก

### วิทยุ FM


#### การใช้วิทยุ FM

โทรศัพท์ LG GB230 มีคุณสมบัติ **วิทยุ FM** ดังนั้น คุณสามารถรับฟังสถานีและเพลงที่คุณชื่นชอบได้ตลอดเวลา

#### การฟังวิทยุ

- 1 กด **เมนู** แล้วเลือก **มีเดีย** จากนั้นเลือก **วิทยุ FM**
- 2 เลือกหมายเลขช่องของสถานีที่คุณต้องการฟัง

#### การบันทึกวิทยุ

- 1 กดปุ่มกลางในระหว่างการฟังวิทยุ
- 2 เวลาบันทึกจะปรากฏบนโทรศัพท์ของคุณหากต้องการหยุดการบันทึก ให้กด **ปุ่มกลาง**  หากการบันทึกเสร็จสิ้น

ข้อมูลที่บันทึกจะถูกบันทึกไว้ที่ **คลังภาพ** ในรูปแบบไฟล์ MP3

**3** เมื่อการบันทึกเสร็จสิ้น ให้เลือก **ตัวเลือก** แล้วเลือกจาก **เล่น, ลบ, เสียง แก๊ซ, ไซเป้น, แก๊ซชื่อไฟล์, ข้อมูล** หรือ **ส่งทาง**

**หมายเหตุ:** หากคุณอยู่ในพื้นที่ซึ่งรับสัญญาณวิทยุได้ไม่ชัดเจน อาจทำให้ยากต่อการรับฟังวิทยุ

ดังนั้น เราขอแนะนำให้คุณเสียบชุดหูฟังกับช่องเสียบแชนด์ฟรีเพื่อรับฟัง **วิทยุ** และรับสัญญาณวิทยุที่ดีที่สุดขึ้น

## บันทึกเสียง

ใช้ **บันทึกเสียง** เพื่อบันทึกเสียงเตือนความจำหรือเสียงอื่นๆ

## คลังภาพ

คุณสามารถจัดเก็บ **ไฟล์มีเดีย** ลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานภาพ เสียง วิดีโอ อื่นๆ และเกมส์ หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์ ไฟล์มีเดียมีเดียของคุณทั้งหมดจะบันทึกอยู่ใน **คลังภาพ** กด **เมนู** แล้วเลือก **คลังภาพ** เพื่อเปิดรายการไฟล์เดอ

## ภาพส่วนตัว

ภาพ ประกอบด้วยไฟล์เดอของภาพเริ่มต้นที่มีอยู่ในโทรศัพท์ของคุณ ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

## เสียงส่วนตัว

### ไฟล์เดอเสียง

ไฟล์เดอเสียง ประกอบด้วยเสียงเริ่มต้น การบันทึกเสียงของคุณ การบันทึกวิทยุ และไฟล์เสียงที่คุณดาวน์โหลด จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเข้าได้

## วิดีโอส่วนตัว

**ไฟล์เดอวิดีโอ** จะแสดงรายการวิดีโอที่ดาวน์โหลด และวิดีโอที่ได้บันทึกไว้ในโทรศัพท์

## อื่นๆ

จาก **เมนูอื่นๆ**, คุณสามารถดูไฟล์ที่ไม่ได้บันทึกในไฟล์เดอภาพ **ไฟล์เดอเสียง** หรือ **วิดีโอ**

## เกมส์ & แอปฯ

โทรศัพท์ GB230 มาพร้อมกับเกมส์เพื่อช่วยให้คุณเพลิดเพลินในยามว่าง หากคุณเลือกดาวน์โหลดเกมส์หรือแอปพลิเคชันเพิ่มเติม ไฟล์เหล่านั้นจะถูกบันทึกลงในไฟล์เดอ

## การวัดความจำ

หากคุณใส่การ์ดหน่วยความจำ หน้าจอจะแสดงเป็นโฟลเดอร์ใน คลังภาพ

## สมุดบันทึก

### การใช้ปฏิทิน

เมื่อคุณเข้าสู่เมนูนี้ ปฏิทินจะปรากฏขึ้น เคอร์เซอร์รูปลี่เหลี่ยมจะอยู่ที่วันที่ปัจจุบัน คุณสามารถเลื่อนเคอร์เซอร์ไปยังวันที่อื่นได้โดยไขปุ่มนาฬิกา

### การเพิ่มบันทึก

คุณสามารถลงทะเบียนบันทึกของคุณได้ที่นี่

### การเพิ่มรายการลงในสิ่งที่ต้องทำ

คุณสามารถดู แก้ไข และเพิ่มงานที่จะทำ

### การตั้งเวลาการปลุก

คุณสามารถตั้งนาฬิกาปลุกได้ 5 เวลาตามเวลาที่กำหนดได้

### การใช้เครื่องคิดเลข

เครื่องคิดเลขจะดำเนินการคำนวณขั้นต้น คือ บวก, ลบ, คูณ และหาร

## การใช้นาฬิกาจับเวลา

ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันนาฬิกาจับเวลาได้

### การแปลงหน่วย

ใช้แปลงหน่วยวัดต่างๆ ให้เป็นหน่วยที่คุณต้องการ

### การใส่ชื่อเมืองลงในเวลาทั่วโลก

คุณสามารถเพิ่มเมืองที่ต้องการในรายการของเวลาทั่วโลก และคุณสามารถตรวจสอบเวลาปัจจุบันของ Greenwich Mean Time (GMT) และเมืองหลักทั่วโลกได้

### ไปที่

ช่วยให้คุณตรงไปยังเมนูที่ค้นหา คุณสามารถตั้งรายการเป็น ไปที่

### บริการซิม

คุณสมบัตินี้ขึ้นอยู่กับซิมการ์ดและการให้บริการของเครือข่าย ในกรณีที่ซิมการ์ดสนับสนุนบริการ SAT (เช่น SIM Application Toolkit) เมนูนี้จะเป็นชื่อบริการของผู้ให้บริการซึ่งจัดเก็บไว้ในซิมการ์ด

## เว็บ

### การเข้าใช้เว็บ

คุณสามารถเปิด WAP เบราวเซอร์ และเข้าสู่โฮมเพจของโปรไฟล์ที่ใช้งาน ในการตั้งค่าเว็บคุณสามารถป้อนแอดเดรส URL ได้ด้วยตนเองและเข้าใช้งาน WAP เพจที่เกี่ยวข้องได้อีกด้วย

#### 1 กด เมนู แล้วเลือก เว็บ

2 ในการเข้าถึงโฮมเพจของเว็บโดยตรง ให้เลือก โฮม หรือเลือก ไปที่แอดเดรส แล้วพิมพ์ URL ที่ต้องการ

## การเชื่อมต่อ

### การเปลี่ยนการตั้งค่าการเชื่อมต่อ โหมดการเชื่อมต่อ USB

1 ที่เก็บข้อมูล: เลือกโหมดนี้แล้วเชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ จากนั้นลากแล้ววางไฟล์ไปยังโฟลเดอร์อุปกรณ์ที่ถอดได้ GB230

2 PC Suite: เลือกโหมดนี้แล้วเชื่อมต่อตัวเครื่องเข้ากับคอมพิวเตอร์ในโหมด PC Sync

3 งามเสมอ: เลือกโหมดนี้ จะมีตัวเลือกเพื่อเลือกโหมด เมื่อตัวเครื่องเชื่อมต่อกับคอมพิวเตอร์ทุกครั้ง

หมายเหตุ: ในการใช้ฟังก์ชันที่เก็บข้อมูล USB คุณจะต้องเสียบการ์ดหน่วยความจำภายนอกในโทรศัพท์

## การเปลี่ยนการตั้งค่าบลูทูธ

1 กด เมนู และเลือก ตั้งค่า - การเชื่อมต่อ เลือก บลูทูธ

2 เลือก ตั้งค่า ทำการเปลี่ยนแปลง :

- การมองเห็นเครื่องของฉัน - เลือกว่าจะแสดง หรือ ซ่อน อุปกรณ์ของคุณต่อผู้อื่น
- ชื่อของโทรศัพท์ของฉัน - ป้อนชื่อโทรศัพท์ LG GB230 ของคุณ
- บริการที่รองรับ - แสดงว่ารองรับบริการใดบ้าง
- แอดเดรสส่วนตัว - ดูแอดเดรสบลูทูธ

## การจับคู่กับอุปกรณ์บลูทูธอื่น

การจับคู่โทรศัพท์ GB230 กับอุปกรณ์อื่น ตัวเครื่องจะสร้างรหัสผ่านตามค่าเริ่มต้นทุกครั้งที่คุณเชื่อมต่อกับโทรศัพท์เครื่องอื่นผ่านบลูทูธ

1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็นเปิด และ มองเห็นได้ คุณสามารถเปลี่ยนการมองเห็นในเมนู การตั้งค่าบลูทูธ โดยการเลือก การมองเห็นเครื่องฉัน, จากนั้นเลือก มองเห็นได้

2 เลือก อุปกรณ์ที่ใช้ จากเมนู บลูทูธ

3 โทรศัพท์ GB230 จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ เพิ่ม และ รีเฟรช จะปรากฏขึ้นบนหน้าจอ

4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย จากนั้นตัวเครื่องจะสร้างรหัสผ่านตามค่าเริ่มต้นทุกครั้งที่คุณเชื่อมต่อ รหัสเริ่มต้นคือ 0000

5 จากนั้นโทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นๆ

6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

### การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 ไปที่ [www.lgmobile.com](http://www.lgmobile.com) ก่อนอื่นเลือก Asia & Pacific แล้วเลือกประเทศของคุณ
- 2 เลือกเมนู ผลิตภัณฑ์ เลือก คู่มือ&ซอฟต์แวร์ แล้วคลิก ไปสู่คู่มือ และซอฟต์แวร์สำหรับดาวน์โหลด คลิก ยอมรับ จากนั้น LG PC Suite installer จะปรากฏขึ้น (Windows XP, Windows Media Player และอื่นๆ)
- 3 เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ OK
- 4 ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อทำให้ wizard LG PC Suite Installer เสร็จสมบูรณ์
- 5 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ท็อป

## ตั้งค่า

### การเปลี่ยนวันที่และเวลา

คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

### เปลี่ยนแปลงรูปแบบเสียง

คุณสามารถปรับแต่งการตั้งค่ารูปแบบเสียงได้

- 1 เลือกรูปแบบเสียงที่คุณต้องการแล้วเลือก แก๊ซ จาก ตัวเลือก

### การใช้โหมด Flight

ใช้ฟังก์ชันนี้เพื่อ เปิด หรือ ปิด โหมด Flight คุณจะไม่สามารถโทรออก, เชื่อมต่ออินเทอร์เน็ต, ส่งข้อความใดเมื่อโหมด Flight เปิดอยู่

### การเปลี่ยนการตั้งค่าการแสดงผล

คุณสามารถเปลี่ยนการตั้งค่าของการแสดงผลของโทรศัพท์ได้

### การเปลี่ยนการตั้งค่าความปลอดภัย

เปลี่ยนการตั้งค่าระบบป้องกันของคุณเพื่อป้องกันโทรศัพท์ GB230 และข้อมูลที่สำคัญของคุณ

- **คำขอรหัส PIN** - เลือกให้ขอรหัส PIN เมื่อคุณเปิดเครื่อง

- **ล็อคเครื่อง** - เลือกรหัสป้องกันเครื่อง เพื่อล็อคโทรศัพท์ของคุณเมื่อเปิดเครื่อง หากเปลี่ยนซิม หรือ หักที่
- **เปลี่ยนรหัส** - เปลี่ยนรหัสป้องกัน, รหัส PIN, รหัส PIN2 หรือรหัส ATMT
- **การแจ้งเครื่องหาย** - เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้โดยเจ้าของที่แท้จริง ผู้ใช้ต้องกำหนดการตั้งค่า ATMT ด้วยชื่อ หมายเลขโทรศัพท์หลัก หมายเลขรอง ผู้ใช้ต้องตั้งค่าเปิด ATMT เพื่อเปิดใช้งานคุณสมบัติ ATMT รหัส ATMT เริ่มต้น คือ "0000"

**การรีเซ็ตโทรศัพท์ของคุณ**  
ใช้ เรียกคืนการตั้งค่า เพื่อรีเซ็ตการตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน คุณต้องใส่รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้

**การดูสถานะหน่วยความจำ**  
คุณสามารถใช้สถานะความจำในการดูการใช้หน่วยความจำและดูว่ามีพื้นที่ว่างเหลือเท่าใด: หน่วยความจำทั่วไป, ที่จองแล้ว, ซิม และ การ์ด



## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

### การดูแลและการบำรุงรักษาเครื่อง โทรศัพท์

#### คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนเครื่องโทรศัพท์ ควรให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์คน วิทย์ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบ่งชี้พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน

- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากช่องไหลหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

### การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

#### อุปกรณ์อิเล็กทรอนิกส์

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อเป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบางเล็กน้อย

#### ความปลอดภัยบนท้องถนน

- ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ
- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
  - มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
  - หากสามารถกระทำทำให้ใช้ชุดอุปกรณ์แฮนด์ฟรี

- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการ
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่นอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

#### หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

### บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอร้องอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

### บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

### บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์บนเครื่องบินก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

### เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

### การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

### ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ (ต่อ)

- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานต่อได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

## อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ ตามที่แสดงด้านล่าง



อุปกรณ์ชาร์จ



แบตเตอรี่

- ชุดหูฟังสเตอริโอ
- คู่มือการใช้  
เรียนรู้เพิ่มเติมเกี่ยวกับ  
โทรศัพท์ GB230 ของคุณ
- สายเคเบิลข้อมูลและซึ่ดี  
เชื่อมต่อและซิงโครไนซ์  
โทรศัพท์ GB230  
กับคอมพิวเตอร์

### หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

## ข้อมูลทางเทคนิค

### ทั่วไป

ชื่อผลิตภัณฑ์ : GB230

ระบบ: GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

### อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)

+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

### ศูนย์บริการ LG โดย

บริษัท แอจจี อีเลคทรอนิกส์

(ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127

ถ. สมเด็จพระเจ้าตากสิน แขวงบุคคโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-ศุกร์, เสาร์ที่ 2 และ 4 ของเดือน 08:00 - 17:00น.

Call center : 0-2878-5757

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GB230

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1  
EN 301 511 V9.0.2  
EN 50360-2001, EN62209-1:2006  
EN 60950-1:2001  
EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 -36-547 -8940, Fax : +31 -36 -547 -8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

21, APR, 2009

Signature of representative



# GB230 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.




## Getting to know your phone



## Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut. To remove the memory card, gently push it as shown in the diagram.

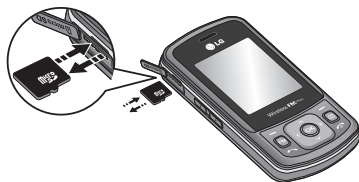

**Note:** A memory card is an optional accessory.

## Formatting the memory card

Press **Menu** and select **Settings**.

Choose **Memory manager**, select **External memory** and press **Format**, and insert security code.

**WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

# Installing the SIM Card and Charging the Battery



## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

## Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

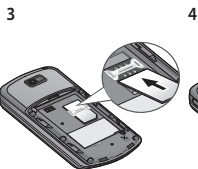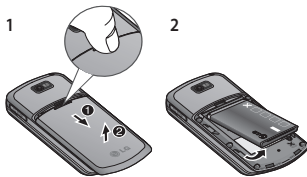

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

# Menu map

EDGE Rx only

## Messaging

Create message  
Inbox  
My mailbox  
Drafts  
Outbox  
Sent items  
Saved items  
Emoticons  
Message settings

## Contacts

Names  
Settings  
Groups  
Speed dials  
Service dial numbers  
Own number  
My business card

## Call log

Call log  
Missed calls  
Received calls  
Dialled numbers  
Call duration  
Packet data counter  
Call costs

## Settings

Profiles  
Display  
Date & Time  
Connectivity  
Call  
Phone  
Network  
Internet profiles  
Access points  
Packet data conn.  
Security  
Memory manager  
Restore factory settings

## Gallery

My memory card  
My images  
My sounds  
My videos  
My games & apps  
Others

## Media

Camera  
Video  
Music  
FM radio  
Voice recorder  
Ringtone creator

## Organiser

Alarm clock  
Calendar  
To-do list  
Notes  
Secret notes  
Calculator  
Stopwatch  
Date finder  
Converter  
World time  
Go to  
SIM services  
Settings

## Applications



My games & apps  
Settings

## Web

Home  
Bookmarks  
Last web address  
Settings  
Go to address  
Saved pages


## Calls

### Making a call


- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.


### Making a call from your contacts

- 1 Select **Names** from the **Standby screen**.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, "O"
- 3 Select **Call** or press  to initiate the call.

### Answering and rejecting a call

When your phone rings, press  to answer the call.

You can control the volume by pressing the side keys.

Press  or select **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings**, and choose **Call**. Select **Answer mode** and choose from **Press send key**, **Slide up** and **Press any key**.

### Speed dialling

You can assign a speed dial number to a contact you call frequently.

### Viewing your Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

### Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** - Choose whether to divert your calls.
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial number** - Choose a list of numbers that can be called from your phone. You'll need your PUK2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

• **Call**  
hav  
you  
• **Call**  
• **Sen**  
you  
wh  
on  
• **Aut**  
• **Ans**  
ans  
sen  
• **Fre**  
sho  
• **Mir**  
ton  
• **BT**  
or H  
• **Sav**  
or M  
• **Slid**  
call  
**Co**  
**Sea**  
1 Se  
sc

- **Call waiting** - Be alerted when you have a call waiting. (Depends on your network provider.)
- **Call reject** - Set the rejected call list.
- **Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)
- **Auto redial** - Choose **On** or **Off**.
- **Answer mode** - Choose whether to answer the phone using any key or send key only or **Slide up**.
- **Free call timer** - Choose whether it shows or not.
- **Minute minder** - Select **On** to hear a tone every minute during a call.
- **BT answer mode** - Set **Hands-free** or **Handset**.
- **Save new number** - Choose **Yes** or **No**.
- **Slide close setting** - Choose **End call** or **Continue call**.

## Contacts

### Searching for a contact

- 1 Select **Names** from the standby screen.

- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts use the up and down arrows.

### Adding a new contact

- 1 Press **Contacts** and choose **Names**. Then press **Options-Add** new contact.
- 2 Enter all the information you have in the fields provided and select **Options-Done**.

### Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **School** and **VIP** already set up on the phone.

## Messaging

Your GB230 includes functions to send text messages and multimedia messages and E-mail, as well as the network's service messages.

## Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.
- 2 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text messages.
- 3 Enter your message.
- 4 Choose **Options-Insert** to add an **Image, Video clip, Sound clip, Schedule, Business card, Note, Text field, To do**, or a **Text template**.
- 5 Press **Options - Send key**.

## Setting up your email

You can stay in touch on the move using email on your GB230. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **Email** then **Email accounts**.
- 3 Press **Add** then set the **E-mail** account.

## Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **Email** and a new email will open.
- 3 Write a subject.
- 4 Enter your message.
- 5 Press options, select **Insert** to add an **Image, Video Clip, Sound Clip, Business card, Schedule** or a **Note**.
- 6 Press **Send** to and enter the recipient's address or press **Options** and select **Insert-Business card**. to open your contacts list.
- 7 Press **Send** and your email will be sent.

## Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

### **T9 predictive mode**

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

### **ABC manual mode**

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### **123 mode**

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

### **Message folders**

Press **Menu**, select **Messaging**. The folder structure used on your GB230 is fairly self-explanatory.

**Create message** - Allows you to create new messages.

**Inbox** - All the messages you receive are placed into your Inbox.

**My mail box** - Contains all your email messages.

**Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.

**Outbox** - This is a temporary storage folder while messages are being sent or stores the messages that are failed to sent.

**Sent items** - All the messages you send are placed into your **Sent folder**.

**Saved Items** - You can access your **Saved messages**, text templates and Multimedia templates

**Emoticons** - A list of useful **Emoticons**, already written for a quick reply.

## Media

### Music

Your GB230 has a built-in **Music** player so you can play all your favourite music.


#### Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select **||** to pause the song.
- 4 Select **▶▶** to skip to the next song.
- 5 Select **◀◀** to skip to the previous song.
- 6 Select **Back** to stop the music and return to the Music player menu.

#### Creating a playlist


You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Media**.
- 2 Choose **Music**, then select **playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.

- 4 The **All tracks** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Done** to store the playlist.

## Camera

### Taking a quick photo

- 1 Select **Menu**, and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press **Center**  key to take a photo.

## Video camera

### Shooting a quick video

- 1 In standby screen, select **Menu** and select **Media**.
- 2 Choose **Video**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press  to start recording.

- 5 Rec will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 Select **Stop** to stop recording.

## FM radio


### Using the FM radio

Your LG GB230 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

### Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

### Recording the Radio

- 1 Press center key during listening to the **Radio**.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press the **Center**  **key**. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

- 3 When the recording is done, select **Option** and then choose from **Play, Delete, Sound edit, Use as, File Rename, Info** or **Send via**.

**Note:** If you stay in an area with bad radio reception, you may find difficulty in listening to the **Radio**.

So, we recommend you insert Ear-mic into Handsfree connector in order to listen to the **Radio** and keep the good radio reception.

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

## Gallery

You can store any **Media files** into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

## My images

Images contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

## My sounds

The **Sounds folder** contains the **Default sounds**, your voice recordings, Radio recordings and sound files downloaded by you. From here you can manage, send, or set sounds as ringtones.

## My videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

## Others

From the **Others menu**, you can view the files that are not saved in the Images, **Sounds** or **Videos folder**.

## My games and apps

Your GB230 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

## My memory card

If you've inserted a memory card, it will be displayed as a folder within **Gallery**.

## Organiser

### Using the calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

You can move the cursor to another date using the navigation keys.

### Adding a memo

You can register your own memos here.

### Adding an item to your to do list

You can view, edit and add tasks to do.

### Setting your alarm

You can set up to 5 alarm clocks to go off at a specified time.

### Using your calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

## Using the stopwatch

This option allows you to use the function of a stopwatch.

## Converting a unit

This converts many measurements into a unit you want.

## Adding a city to your world time

You can add a required city to the list of world clock. You can also check the current time of Greenwich Mean Time (GMT) and major cities around the world.

## Go to

It helps you to go to the menu you search for. You can set the item as Go to.

## SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

## Web

### Accessing the Web

You can launch the wap browser

and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Web**.
- 2 To access the Web homepage directly, select **Home**. Alternately, select **Go to Address** and type in your desired URL.

## Connectivity

### Changing your connectivity settings

USB Connection mode.

- 1 Mass storage: Select this and Connect the handset to your computer and drag and drop files to the GB230 removable device folder.
- 2 PC Suite: Select this and connect the handset to your computer in PCSync mode.
- 3 Always Ask: Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

**Note:** To use the USB mass storage function, you will need to insert an external memory card in your phone.

## Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** - **Connectivity**. Choose **Bluetooth**.
- 2 Choose **Bluetooth settings**.  
Make changes to your :
  - **My phone's visibility** - Choose whether to Show or Hide your device to others.
  - **My phone's name** - Enter a name for your LG GB230.
  - **Supported services** - Shows what it supports.
  - **My address** - View your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your GB230 and another device, handset create password by default everytime you connect to other handset via bluetooth.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu, by selecting **My visibility**, then **visible**.
- 2 Select **Active device** from the **Bluetooth** menu.
- 3 Your GB230 will search for devices.

When the search is completed **Add** and **Refresh** will appear on screen.

- 4 Choose the device you want to pair with, then handset create password by default everytime you connect. Default code is 0000
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

## Installing LG PC Suite on your computer

- 1 Go to [www.lgmobile.com](http://www.lgmobile.com) and choose Asia & Pacific first and then your country.
- 2 Choose Products menu, select Manual & Software and click Go to Manual & S/W download section. Click Yes and LG PC Suite installer will then appear. (Windows XP, Windows Media Player and more).
- 3 Select the language you would like the installer to run in and click OK.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Settings

### Changing your date & time

You can set functions relating to the date and time.

### Changing the Profiles

You can personalise each profile setting.

- 1 Choose the profile you want and Select Edit from **Options**

### Using flight mode

Use this function to switch the flight mode On or Off. You will not be able to make calls, connect to the internet, send messages when Flight mode is switched On.

### Changing your display settings

You can change the settings for the phone display.

### Changing your security settings

Change your security settings to keep your GB230 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.

- **Handset lock** - Choose a security code to lock your handset when switching on, If SIM changed or immediately
- **Change codes** - Change your **Security code, PIN code, PIN2 code, or ATMT code.**
- **Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000".

### Resetting your phone

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function.

**Note:** The security code is "0000".

### Viewing memory status

You can use the memory manager to determine how each memory is used and see how much space is available: **Common, Reserved, SIM card, and External memory.**

## Guidelines for safe and efficient use

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GB230 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.618 W/kg(10g) and when worn on the body is 0.805 W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

## Guidelines for safe and efficient use (Continued)

### Product care and maintenance

#### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Guidelines for safe and efficient use (Continued)

### Efficient phone operation

#### Electronics devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

#### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

#### Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

#### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

## Guidelines for safe and efficient use (Continued)

### Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children.

It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

## Guidelines for safe and efficient use (Continued)

- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## Accessories

There are various accessories for your mobile phone. These are detailed below.



Charger



Battery

- **Stereo headset**
- **User Guide**  
Learn more about your GB230.

- **Data cable and CD**  
Connect and synchronise your GB230 and PC.

### NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further inquiries.

## Technical data

### General

Product name : GB230

System : GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900

### Ambient Temperatures

Max : +55°C (discharging)  
+45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GB230

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1

EN 301 511 V9.0.2

EN 50360:2001, EN62209-1:2006

EN 60950-1:2001

EN300328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


European Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 -36-547 -8940, Fax : +31 -36 -547 -8794  
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

21, APR, 2009

  
Signature of representative

ปรี  
(Pr

IM

วัน

(Pe

ชื่อ

ชื่อ

วัน

(Di

ชื่อ

(Ac

อา

(O

ชื่อ

(D



Digital Mobile

สำหรับส่งคืนบริษัท

# Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)

**ศูนย์บริการข้อมูล**  
Customer Information Center 0-2878-5757 or  
**1-800- L G L G L G โทรฟรี**  
**5 4 5 4 5 4**

[www.lge.co.th](http://www.lge.co.th)

**บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด**  
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน  
คลองเตย กรุงเทพฯ 10110  
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

**LG Electronic (Thailand) CO., Ltd**  
75/81 Richmond Bldg, 22<sup>nd</sup> FL, Sukumvit 26,  
Klongton, Klongtoey Bangkok 10110  
Customer Information Center  
Tel. 0-2878-5757 Fax. 0-2466-0250



ใบอนุญาตเลขที่ ปน.(ต)/2117 ปณจ. พระโขนง  
ถ้าหากส่งในประเทศไม่ต้องพินิตราไปรษณียากร



## บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน  
แขวงบुकคโโล เขตธนบุรี  
กรุงเทพฯ 10600

1) บั  
รับ

2) ก  
เสี  
ห  
ดี

1) ก  
ห

2) ก  
3) ค  
ใช้  
ส

ช  
โ  
ม

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ขำรุคหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องมือวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ที่ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่นๆที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการคาสิน (สำนักงานใหญ่) : เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน แขวงบुकโคล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน  
นับจากวันที่ซื้อ  
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)

ที่อยู่ร้าน : .....  
(Dealer's Address)

ประทับตราร้านค้า