



ไ
ท
ย
—
ENGLISH

คู่มือการใช้

LG-C320



CE0168

P/NO : MFL67003511(1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของ ทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมทั้งเพื่อให้แน่ใจว่าลูกค้าได้ รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และอุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากข้อบกพร่องจาก มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน การซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. LG will bear the cost of one SMS for the product authentication program. For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B016956



คู่มือการใช้ LG-C320

ข้อมูลบางอย่างของคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ





สารบัญ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ	4	เบราว์เซอร์.....	10
การใส่ซิมการ์ดและการชาร์จแบตเตอรี่	6	การเข้าใช้เว็บไซต์.....	10
.....	6	ข้อความ	10
การโทร	7	การส่งข้อความ.....	11
การโทรออก	7	การป้อนข้อความ	11
การโทรออกโดยใช้รายชื่อ	7	ตารางแสดงปุ่มพิมพ์.....	12
การรับสายและการปฏิเสธ		ตารางแสดงตัวอักษรที่พิมพ์กับปุ่ม	
สายเรียกเข้า.....	7	ฟังก์ชัน.....	12
โทรด่วน	7	การเปลี่ยนการตั้งค่า	
การดูการโทรของคุณ.....	8	ข้อความตัวอักษร.....	12
การเปลี่ยนการตั้งค่าการโทร.....	8	การเปลี่ยนการตั้งค่า	
กล้องถ่ายรูป.....	8	ข้อความมัลติมีเดีย	12
การถ่ายภาพด่วน	8	รายชื่อ.....	13
ภายหลังการถ่ายรูป	8	การค้นหารายชื่อ.....	13
กล้องวิดีโอ.....	9	การเพิ่มรายชื่อใหม่.....	13
การถ่ายวิดีโอด่วน	9	เครื่องมือ	13
หลังจากที่ถ่ายวิดีโอแล้ว.....	9	การตั้งเวลาการปลุก	13
เพลง	9	การเพิ่มนัดหมายลงใน	
เครื่องเล่น MP3	9	ปฏิทิน	14
เกมส์และแอปพลิเคชัน	10	การเพิ่มรายการลง	
อีเมล	10	ในรายการทำงาน	14
การส่งอีเมลโดยใช้		การเพิ่มบันทึก.....	14
แอดเดสส์ใหม่.....	10	ตัวค้นหาวันที่.....	14
วิทยุ FM	10	เครื่องบันทึกเสียง	14
การฟังวิทยุ.....	10	การส่งการบันทึกเสียง.....	15
		การใช้เครื่องคิดเลข.....	15
		การใช้นาฬิกาจับเวลา	15

การแปลงหน่วย	15	การดูไฟล์ในโทรศัพท์บน	
การเพิ่มเมืองในเวลาทั่วโลก	15	คอมพิวเตอร์	20
ตั้งค่า	15	PC suite	20
การเปลี่ยนแปลงโปรไฟล์		การติดตั้ง LG PC Suite	
ของคุณ	15	ลงในคอมพิวเตอร์	20
การใช้โหมด Flight	15	การดูไฟล์ในโทรศัพท์บน	
การเปลี่ยนการตั้งค่า		คอมพิวเตอร์	20
โทรศัพท์	15	คำแนะนำเพื่อ ความปลอดภัยและการใ	
การเปลี่ยนวันที่และเวลา.....	16	ใช้งานอย่างมีประสิทธิภาพ	21
การเปลี่ยนการตั้งค่าระบบป้องกัน .	16	อุปกรณ์เสริม	26
การรีเซ็ตโทรศัพท์ของคุณ	17	ข้อมูลทางเทคนิค	27
การเปลี่ยนการตั้งค่า		การแก้ปัญหา	29
การแสดงผล	17		
อัปเดตซอฟต์แวร์			
โทรศัพท์	17		
การอัปเดตซอฟต์แวร์โทร			
ศัพท์มือถือ LG จาก			
อินเทอร์เน็ต	17		
การเปลี่ยนการตั้งค่า			
การเชื่อมต่อ	18		
การเปลี่ยนการตั้งค่าบลูทูธ.....	18		
การจับคู่กับอุปกรณ์บลูทูธอื่น	18		
การใช้ชุดหูฟังบลูทูธ.....	18		
การส่งและการรับไฟล์โดย			
ใช้บลูทูธ.....	19		
การสำรองข้อมูลและการ			
เรียกคืนข้อมูลของโทรศัพท์	19		

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



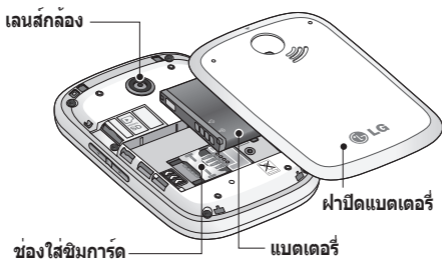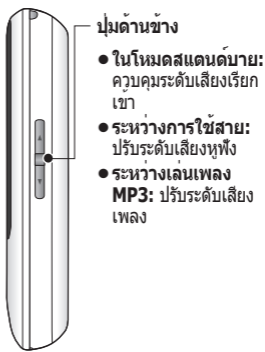

การใส่ซิมการ์ดและการชาร์จแบตเตอรี่


การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับ ซิมการ์ด พลังอินพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ


ข้อสำคัญ! > ซิมการ์ดพลังอินอาจชำรุดเสียหายได้ง่ายหากถูกขีดขีดหรือหักงอ ดังนั้น จึงควรใช้งาน ใส่ หรือถอดการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พ้นมือเด็กเล็ก

ภาพประกอบ

1. เปิดฝาครอบแบตเตอรี่
2. ถอดแบตเตอรี่ออก
3. ใส่ซิมการ์ด
4. ใส่แบตเตอรี่
5. ปิดฝาครอบแบตเตอรี่
6. ชาร์จแบตเตอรี่




 **คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้
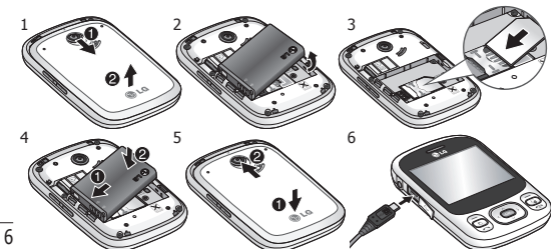
> หากโทรศัพท์ไม่เปิด หรือหากหน้าจอค้างหรือไม่ตอบสนอง ให้ทำตามคำแนะนำสำหรับการใส่แบตเตอรี่อีกครั้ง



การโทร

การโทรออก


1. ตรวจสอบให้แน่ใจว่าโทรศัพท์ของคุณเปิดอยู่
2. คุณสามารถใช้ปุ่มกด เมื่อต้องการลบให้กดปุ่ม 
3. กด  เพิ่มการโทร
4. หากต้องการวางสาย ให้กด 

เคล็ดลับ!


ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม 0 ค้างไว้


การโทรออกโดยใช้รายชื่อ

การโทรไปยังผู้รับที่มีหมายเลขโทรศัพท์ที่บันทึกอยู่ในรายชื่อแล้วทำได้ง่าย

1. กด **เมนู** เพื่อเปิดเมนูหลัก เลือก **รายชื่อ**
2. ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรหาด้วยปุ่มกด และเลื่อนไปที่ **รายชื่อ**
3. กด  เพิ่มการโทร

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กด **ยอมรับ** หรือกด  เพื่อรับสาย ขณะโทรศัพท์ของคุณมีเสียงเรียกเข้า คุณสามารถกด

เจียบ เพื่อปิดเสียงเรียกเข้า วิธีนี้เป็นวิธีที่มีประโยชน์ หากคุณลืมเปลี่ยนรูปแบบเป็น **เจียบ** เมื่ออยู่ในห้องประชุม กด  หรือเลือก **ปฏิเสธ** เพื่อที่จะปฏิเสธสายเรียกเข้า

หมายเหตุ: ในการโทรที่เปิดใช้งานลำโพง ไอคอนลำโพงจะแสดงโดยมีเครื่องหมายกากบาทสีแดง เมื่อเลิกใช้งานลำโพง ไอคอนจะแสดงโดยไม่มีเครื่องหมายกากบาทสีแดง

โทรด่วน

คุณสามารถกำหนดหมายเลขโทรด่วนให้กับรายชื่อที่คุณโทรหาบ่อยๆ ได้

1. กด **เมนู** เพื่อเปิดเมนูหลัก เลือกรายชื่อ แล้วเลือกตัวเลือกและ **โทรด่วน**
2. ข้อความเสียงของคุณได้รับการกำหนดให้อยู่ที่หมายเลขโทรด่วน 1 ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้ เลือกหมายเลขอื่นโดยใช้ปุ่ม **นาฬิกา** และเลือก **ตั้งค่า** หรือโดยการกดปุ่มตัวเลข
3. รายชื่อของคุณจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้นโดยใช้ปุ่ม **นาฬิกา** แล้วกด **เลือก** ในการโทรออกหมายเลขโทรด่วน ให้กดหมายเลขที่กำหนดค้างไว้จนกว่ารายชื่อจะปรากฏขึ้นบนหน้าจอ เครื่อง

จะทำการโทรออกโดยอัตโนมัติโดย
ไม่ต้องกด 

การดูการโทรของคุณ

คุณสามารถดูบันทึกของสายที่ไม่ได้รับสายที่รับ และสายโทรออกได้ หากว่าเครือข่ายสนับสนุนการแสดงผลหมายเลขโทรเข้า (Calling Line Identification: CLI) ในพื้นที่ให้บริการ

การเปลี่ยนการตั้งค่าการโทร

คุณสามารถตั้งค่าฟังก์ชันของการโทรได้
กด **เมนู** เลือก **ตั้งค่า** และเลือก

การโทร

การโอนสาย - เลือกว่าจะโอนสายของคุณหรือไม่

ป้องกันการโทร - เลือกเมื่อคุณต้องการป้องกันการโทรออก

สายเรียกซ้อน - แจ้งเตือนให้ทราบเมื่อมีสายเรียกซ้อน

กำหนดเบอร์โทรออก - เลือกหมายเลขที่สามารถโทรออกจากโทรศัพท์ของคุณได้

ข้อความขอโทษ - ก่อนที่คุณจะปฏิเสธสายเรียกเข้า คุณสามารถใช้ "ข้อความขอโทษ" เพื่อส่งข้อความอธิบายว่าเหตุใดคุณจึงไม่รับสาย

ตั้งค่าการโทรทั่วไป - เข้าถึงโหมดตอบรับ, ส่งหมายเลขตัวเอง,

เตือนทุกนาที, โทรซ้ำอัตโนมัติ, ส่งเสียง DTMF, บันทึกหมายเลขใหม่, โหมดตอบบลูทูธ, โหมดดวงสาย, ปฏิเสธการรับสาย

กล้องถ่ายรูป

การถ่ายภาพด่วน

- 1.กด **เมนู** และเลือก **กล้องถ่ายรูป** และ **กล้อง**
- 2.หันท้องถ่ายรูปไปทางวัตถุที่คุณจะถ่ายภาพ และกด **ตกลง** เพื่อถ่ายภาพ

ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อภาพจะแสดงในหน้าจอพร้อมด้วยท่าไอคอนที่ด้านล่าง

ภาพ - ดูรูปภาพและวิดีโอที่คุณถ่ายในอัลบั้ม

ส่ง - ส่งรูปภาพเป็นข้อความ, เป็นอีเมลหรือผ่านบลูทูธ


สร้าง - ถ่ายอีกภาพหนึ่งทันที

ตั้งเป็น - ใช้ภาพเป็นพื้นหลัง, ภาพรายชื่อ หรือในภาพเริ่มต้นหรือภาพปิดเครื่อง

ลบ - ลบรูปภาพที่คุณเพิ่งถ่าย ช่างมองภาพจะปรากฏขึ้นอีกครั้ง

กล้องวิดีโอ

การถ่ายวิดีโอด้วย

1. กด **เมนู** และเลือก **กล้องถ่ายรูป** และเลือก **วิดีโอ** ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
2. หันกล้องถ่ายรูปไปทางวัตถุที่คุณจะบันทึก
3. กด **ตกลง** เพื่อเริ่มการบันทึก บันทึกจะปรากฏขึ้นที่ด้านล่างของช่องมองภาพ กด  อีกครั้งเพื่อหยุดการบันทึก

หลังจากที่ถ่ายวิดีโอแล้ว

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ

หลังจากบันทึกวิดีโอคลิก คุณสามารถตรวจสอบเมนูได้ดังนี้:

วิดีโอ - ดูรูปภาพและวิดีโอที่คุณถ่ายในอัลบั้ม

เล่น - เล่นไฟล์

สร้าง - กดเพื่อบันทึกวิดีโอใหม่ทันที

ส่ง - ส่งวิดีโอเป็นข้อความ, เป็นอีเมล หรือผ่านบลูทูธ

ลบ - ลบวิดีโอที่คุณเพิ่งบันทึก ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

เพลง

เครื่องเล่น MP3

โทรศัพท์ LG-C320 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

หมายเหตุ:

- ก่อนใช้เครื่องเล่นเพลง คุณจะต้องโอนไฟล์เพลงไปที่โทรศัพท์
- เครื่องเล่นเพลงสนับสนุนประเภท Codec ดังนี้: MP3, WMA, AAC เครื่องเล่นเพลงไม่ได้สนับสนุนคุณสมบัติและรูปแบบไฟล์ทั้งหมดครบถ้วน

ในการเข้าใช้งานเครื่องเล่นเพลง กด **เมนู** และเลือก **เพลง** และเลือก **เครื่องเล่น MP3** จากขั้นตอนนี้ คุณสามารถเข้าใช้:

เล่นล่าสุด - ดูเพลงที่เล่นล่าสุดทั้งหมด

ทุกเพลง - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

รายการของฉัน - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

ศิลปิน - ใช้ดูแทร็คทั้งหมดเรียงตามศิลปิน

อัลบั้ม - ใช้ดูแทร็คทั้งหมดเรียงตามอัลบั้ม

แนวเพลง - ใช้ดูแทร็คทั้งหมดเรียงตาม
แนวเพลง

สุมเพลงทั้งหมด - ใช้เล่นเพลงทั้งหมด
ในลำดับสุม

เกมส์และแอปพลิเคชัน

เข้าถึงเกมส์และแอปพลิเคชันที่ติดตั้งมา
พร้อมกับเครื่องหรือที่คุณดาวน์โหลด

อีเมล

การส่งอีเมลโดยใช้ แอดเดสส์ใหม่

หากต้องการส่ง/รับอีเมล คุณควรตั้งค่า
อีเมลแอดเดสส์

1. กด **เมนู** เลือก **อีเมล** และเลือก
แอดเดสส์ที่คุณต้องการใช้
2. เลือก **สร้างอีเมลใหม่** และหน้าต่าง
อีเมลใหม่จะเปิดขึ้น
3. เขียนหัวเรื่อง แล้วกด **ตกลง**
4. ป้อนข้อความของคุณโดยใช้ปุ่มกด

วิทยุ FM

การฟังวิทยุ

1. กด **เมนู** และเลือก **เพลง** และเลือก
วิทยุ FM
2. เลือกหมายเลขช่องของสถานีที่
คุณต้องการฟัง

หมายเหตุ: หากคุณอยู่ในพื้นที่
ซึ่งรับสัญญาณวิทยุได้ไม่ชัดเจน
อาจทำให้ยากต่อการรับฟังวิทยุ
ต้องต่อชุดหูฟังเพื่อใช้วิทยุ FM

เบราว์เซอร์

การเข้าใช้เว็บไซต์

คุณสามารถเปิดเบราว์เซอร์ WAP และ
เข้าสู่โฮมเพจของโปรไฟล์ที่ใช้งานใน
การตั้งค่าเว็บ คุณสามารถป้อนแอดเดสส์
URL ได้ด้วยตนเอง และเข้าใช้งาน WAP
เพจที่เกี่ยวข้องได้อีกด้วย

1. กด **เมนู** และเลือก **อินเทอร์เน็ต**
2. ในการไปยังหน้าจอหลักของเบราว์เซอร์ ให้เลือก **หน้าหลัก** หรือเลือก
ไปยัง URL และพิมพ์ URL ตามด้วย
เชื่อมต่อ

หมายเหตุ: มีค่าใช้จ่ายในการเชื่อมต่อกับ
บริการเหล่านี้และการดาวน์โหลด
เนื้อหา โปรดสอบถามข้อมูลการคิดค่า
ใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

ข้อความ

โทรศัพท์ LG-C320 ของคุณประกอบด้วยฟังก์ชันที่เกี่ยวข้องกับ SMS (Short Message Service), MMS (Multimedia Message Service) รวมทั้งข้อความ

บริการของเครือข่าย ในการใช้ฟังก์ชันเหล่านี้ กด **เมนู** และเลือก **ข้อความ**

การส่งข้อความ

1. กด **เมนู** เลือก **ข้อความ** และเลือก **เขียนข้อความใหม่**

2. เอดีเตอร์ข้อความใหม่จะเปิดขึ้น เอดีเตอร์ข้อความจะรวม **SMS** และ **MMS** เข้าในโหมดเดียวกัน เพื่อให้สลับการใช้งานได้อย่างง่ายดาย โหมดเริ่มต้นของเอดีเตอร์ข้อความคือโหมด **SMS**

3. ป้อนข้อความของคุณโดยใช้ปุ่มกดโปรดดูข้อมูลเพิ่มเติมเกี่ยวกับวิธีป้อนข้อความที่ **การป้อนข้อความ** ทางขวา

4. เลือก **ตัวเลือก** และเลือก **แทรก** เพื่อใส่ **ภาพ, วิดีโอ, เสียง, รูปแบบอัตโนมัติ, อีโมติคอน, ชื่อและเบอร์, สไลด์ใหม่, ใส่หัวเรื่อง** หรือ **อื่นๆ (นามบัตร/นัดหมาย/บันทึก/การทำงาน/นามบัตรส่วนตัว)**

5. เลือก **ส่งไปที่**

6. เลือกรายชื่อจากรายการรายชื่อหรือป้อนหมายเลขโทรศัพท์

7. เลือก **ส่ง**

⚠ คำเตือน: ภาพ, เสียง, วิดีโอ, สไลด์ใหม่, หัวเรื่อง, นามบัตร, นัดหมายหรือนามบัตรส่วนตัว จะถูกเพิ่มลงในเอดีเตอร์ข้อความ การส่งข้อความจะถูกแปลงเป็นโหมด MMS และคุณจะถูกเรียกเก็บค่าบริการในอัตราดังกล่าว

การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการสร้างตารางนัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในเครื่องมีวิธีป้อนข้อความให้เลือกใช้ได้ดังนี้: โหมด **ABC** และโหมด **123**

หมายเหตุ: ฟิลด์บางฟิลด์อาจใช้โหมดป้อนใดโหมดเดียว (เช่น หมายเลขโทรศัพท์ในฟิลด์สมุดรายชื่อ)

ตารางแสดงปุ่มพิมพ์

Q	W	E	R	T	Y	U	I	O	P
๑	๒	๓	๔	๕	๖	๗	๘	๙	๐
ท	ไ	เ	ร	ต	ย	อ	อิ	อ	ป

A	S	D	F	G	H	J	K	L
๑	๒	๓	๔	๕	๖	๗	๘	๙
อ	ส	ด	ฟ	ก	ห	จ	ค	ล

Z	X	C	V	B	N	M
๑	๒	๓	๔	๕	๖	๗
จ	ข	ค	ด	บ	น	ม

ตารางแสดงตัวอักษรที่พิมพ์

กับปุ่ม ฟังก์ชัน

Q	W	E	R	T	Y	U	I	O	P
๑	๒	๓	๔	๕	๖	*	๗	๘	๐
๑	๒	๓	๔	๕	๖	*	๗	๘	๐

A	S	D	F	G	H	J	K	L
๑	๒	๓	๔	๕	๖	#	๗	'
๑	๒	๓	๔	๕	๖	#	๗	'

Z	X	C	V	B	N	M
๑	๒	๓	๔	๕	๖	(
=	๒	๓	๔	๕	๖	(

การเปลี่ยนการตั้งค่า ข้อความตัวอักษร

กด **เมนู** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความตัวอักษร**
คุณสามารถเปลี่ยนแปลง:

ศูนย์ข้อความตัวอักษร - ป้อนรายละเอียดของศูนย์รับฝากข้อความ

รายงานผลการส่ง - เลือกเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ชนิดข้อความ - แปลง **ข้อความ** เป็น **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว - เลือกว่าจะส่งข้อความของคุณเป็น SMS หรือ MMS หลายข้อความ เมื่อคุณป้อนข้อความที่มีความยาวเกินกว่า 2 หน้า ในฟิลด์ข้อความ

การเปลี่ยนการตั้งค่า ข้อความมัลติมีเดีย

กด **เมนู** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความมัลติมีเดีย**
คุณสามารถเปลี่ยนแปลง:

โหมดการเรียกข้อมูล - เลือกเพื่อดาวน์โหลดข้อความมัลติมีเดียโดยอัตโนมัติหรือด้วยตัวเอง ขึ้นอยู่กับว่าคุณใช้เครือข่ายหลักหรือโรมมิ่ง

โหมดการเรียกข้อมูล - เลือกเพื่อดาวน์โหลดข้อความมัลติมีเดียโดยอัตโนมัติหรือด้วยตัวเอง ขึ้นอยู่กับว่าคุณใช้เครือข่ายหลักหรือโรมมิ่ง

รายงานผลการส่ง - เลือกเพื่อให้ส่งหรือขอรายงานผลการส่ง

อ่านข้อความตอบรับ - เลือกเพื่อให้ส่งหรือขอการตอบกลับการอ่าน

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความมัลติมีเดีย

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์รับฝากข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

โหมดการสร้าง - ใช้เลือกประเภทเนื้อหาที่สนับสนุนโดย MMS

เวลาส่ง - กำหนดเวลาส่งข้อความไปยังผู้รับ ศูนย์ข้อความมัลติมีเดียจะส่งข้อความเมื่อถึงเวลาที่กำหนดไว้

ศูนย์ MMS - ใช้กำหนดค่าข้อมูลเครือข่าย เช่น ศูนย์ข้อความมัลติมีเดีย และโปรไฟล์อินเทอร์เน็ต เพื่อส่งข้อความมัลติมีเดีย

รายชื่อ

การค้นหารายชื่อ

1. กด **เมนู** และเลือก **รายชื่อ**
2. ใช้ปุ่มกดป้อนตัวอักษรตัวแรกของชื่อตามรายชื่อที่คุณต้องการโทรออก
3. หากต้องการเลื่อนดูรายชื่อและหมายเลขอื่น ให้ใช้ปุ่มนำเวก

การเพิ่มรายชื่อใหม่

1. กด **เมนู** และเลือก **รายชื่อ**
2. กด **ตัวเลือก** และเลือก **รายชื่อใหม่**
3. เลือกว่าจะจัดเก็บรายชื่อติดต่อใหม่ของคุณบน **ตัวเครื่อง** หรือ **USIM** การ์ด
4. ป้อนข้อมูลที่ต้องการในฟิลด์ที่ใหม่ แล้วเลือก **เสร็จ**

เครื่องมือ

การตั้งเวลาการปลุก

1. ในการเข้าถึงนาฬิกาปลุก ให้กดเมนูและเลือกเครื่องมือ และเลือกนาฬิกาปลุก
2. ในการตั้งการปลุกใหม่ ให้เลือกการปลุกใหม่ ตั้งเวลา ข่า ประเภทการเตือน เสียงเตือน ระดับเสียง รอบเวลา การเลื่อน สามารถเพิ่มบันทึกในการปลุกได้ด้วย

- 3.เมื่อป้อนรายละเอียดแล้ว ให้กด เสร็จ เพื่อบันทึกการปลูก

การเพิ่มนัดหมายลงในปฏิทิน

- 1.ในการเข้าถึงปฏิทิน ให้กดเมนู และเลือกเครื่องมือ และเลือก สมุดบันทึก แล้วเลือกปฏิทิน
- 2.เลือกรวันที่ที่ต้องการเพิ่มนัดหมาย คุณสามารถเลือกรวันที่โดยการเลื่อน ไปยังวันที่โดยใช้ปุ่มนาฬิกา หรือโดยการเลือก ตัวเลือก และ ไปที่วันที่ เพื่อป้อนวันที่
- 3.ในการเพิ่มนัดหมายใหม่ ให้เลือกนัดหมายใหม่
- 4.ป้อนรายละเอียดของงาน รวมถึงประเภท หัวเรื่อง ที่ตั้ง เวลาเริ่มต้น เวลาเสร็จสิ้น การปลูก และซ้ำ
- 5.เมื่อป้อนรายละเอียดแล้ว ให้กด เสร็จ เพื่อบันทึกนัดหมาย

การเพิ่มรายการลงในรายการทำงาน

- 1.ในการเข้าถึงงาน ให้กดเมนู และเลือกเครื่องมือ และเลือก สมุดบันทึก แล้วเลือกงาน
- 2.ในการตั้งค่างานใหม่ ให้เลือกงานใหม่

- 3.ป้อนรายละเอียดของงาน รวมถึงหัวเรื่อง วันครบกำหนด บันทึก และระดับความสำคัญ

- 4.เมื่อป้อนรายละเอียดแล้ว ให้กด เสร็จ เพื่อบันทึกงาน

การเพิ่มบันทึก

- 1.ในการเข้าถึงบันทึก ให้กดเมนู และเลือกเครื่องมือ และเลือก สมุดบันทึก แล้วเลือกบันทึก
- 2.ในการตั้งค่าบันทึกใหม่ ให้เลือกบันทึกใหม่
- 3.ป้อนรายละเอียดของบันทึก
- 4.เมื่อป้อนรายละเอียดแล้ว ให้กด บันทึก เพื่อบันทึก
- 5.ในการล๊อคบันทึก ให้ไปที่บันทึกโดยใช้ปุ่มนาฬิกา กด ตัวเลือก และเลือก ล๊อค

หมายเหตุ: คุณจะต้องใช้รหัสป้องกัน เพื่อปลดล๊อคบันทึก

ตัวค้นหาวັນที

ตัวค้นหาวันทีเป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันที่ต้องการได้ เมื่อผ่านมาแล้วหลายวัน

เครื่องบันทึกเสียง

ใช้ บันทึกเสียง เพื่อบันทึกเสียงเตือน ความจำหรือเสียงอื่นๆ

การส่งการบันทึกเสียง

เมื่อคุณบันทึกเสียงเสร็จแล้วให้เลือก
ตัวเลือก

การใช้เครื่องคิดเลข

1. กด **เมนู** และเลือก **เครื่องมือ**
แล้วเลือก **เครื่องคิดเลข**
2. กดปุ่มตัวเลขเพื่อป้อนตัวเลข

การใช้นาฬิกาจับเวลา

1. กด **เมนู** และเลือก **เครื่องมือ**
แล้วเลือก **นาฬิกาจับเวลา**
2. เลือก **เริ่ม** เพื่อเริ่มต้นตัวตั้งเวลา

การแปลงหน่วย

1. กด **เมนู** และเลือก **เครื่องมือ**
แล้วเลือก **ตัวแปลงหน่วย**
2. เลือกว่าคุณจะแปลงสกุลเงิน, พื้นที่,
ความยาว, น้ำหนัก, อุณหภูมิ,
ปริมาตร หรือความเร็ว

การเพิ่มเมืองในเวลาทั่วโลก

1. กด **เมนู** และเลือก **เครื่องมือ**
แล้วเลือก **เวลาโลก**
2. ในการค้นหาเวลาของเมืองใดเมือง
หนึ่ง ให้กด **ตัวเลือก** และเลือก
เมืองใหม่

ตั้งค่า

การเปลี่ยนแปลงโปรไฟล์ ของคุณ

1. กด **เมนู** และเลือก **ตั้งค่า**
2. เลือก **โปรไฟล์** แล้วเลือกรูปแบบ
เสียงที่คุณต้องการแก้ไข
3. เลือก **ตัวเลือก** และเลือก
กำหนดเอง
4. คุณสามารถเปลี่ยนแปลงเสียง
ระดับเสียง และการเตือนทั้งหมด
ได้ในที่นี้

การใช้โหมด Flight

เมื่อใช้ โหมด Flight
คุณจะไม่สามารถโทรออก
เชื่อมต่ออินเทอร์เน็ต หรือส่งข้อความ

การเปลี่ยนการตั้งค่า โทรศัพท์

1. กด **เมนู** และเลือก **ตั้งค่า**
2. เลือกตั้งค่า **อุปกรณ์** และเลือกจาก
รายการด้านล่าง

วันที่และเวลา - ปรับการตั้งค่าวันที่และ
เวลาของคุณ หรือเลือกอัปเดตเวลา
อัตโนมัติหรือใช้ตัวเลือกการปรับเวลา
ตามฤดูกาล

ประหยัดพลังงาน - เลือก **เปิด** หรือ **ปิด**
การตั้งค่าประหยัดพลังงาน

ภาษา - เปลี่ยนภาษาบนจอแสดงผล LG-C320 ของคุณ

ล็อคปุ่มอัตโนมัติ - เลือกระยะเวลาในการล็อคปุ่มอัตโนมัติ

ระบบป้องกัน - ปรับการตั้งค่าระบบป้องกัน ได้แก่ รหัส PIN และล็อคเครื่อง

ข้อมูลความจำ - ดู การใช้ตัวจัดการหน่วยความจำ สำหรับข้อมูลเพิ่มเติม

รีเซ็ตการตั้งค่าทั้งหมด - เรียกคืนการตั้งค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจากโรงงาน

ข้อมูลอุปกรณ์ - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ LG-C320

การเปลี่ยนวันที่และเวลา

1. กด **เมนู** และเลือก **ตั้งค่า**

2. เลือก **อุปกรณ์** และเลือก **วันที่และเวลา** แล้วเลือกจากรายการด้านล่าง:

ตั้งแต่วันที่และเวลา - เลิก เปิด
อัปเดตอัตโนมัติ และโทรศัพท์จะอัปเดตวันที่และเวลาโดยอัตโนมัติ

รูปแบบวันที่ - คุณสามารถป้อนวันที่ปัจจุบันได้ คุณสามารถตั้งค่ารูปแบบวันที่ (ว/ดต/ปปปป, ดต/ว/ปปปป, ปปป.ดต.ว)

ตัวแบ่งวัน - คุณสามารถป้อนวันที่ปัจจุบันได้ คุณสามารถตั้งค่าตัวแบ่งวัน (ว/ดต/ปปปป, ว.ดต.ปปปป,

ว-ดต-ปปปป)

รูปแบบเวลา - คุณสามารถตั้งค่ารูปแบบวันที่ **12 ชั่วโมง** หรือ **24 ชั่วโมง**

การเปลี่ยนการตั้งค่าระบบป้องกัน

เปลี่ยนการตั้งค่าระบบป้องกันของคุณเพื่อป้องกันโทรศัพท์ LG-C320 และข้อมูลที่สำคัญของคุณ

1. เลือก **เมนู** และเลือก **ตั้งค่า** แล้วเลือก **อุปกรณ์**

2. เลือก **ระบบป้องกัน** แล้วเลือกจากรายการด้านล่าง: **คำขอรหัส PIN** - เลือกให้ขอรหัส PIN เมื่อคุณเปิดเครื่อง

ล็อคอุปกรณ์ - เลือกรหัสความปลอดภัยเพื่อล็อคโทรศัพท์ของคุณ **ไม่ยืนยัน, เมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิมการ์ด** หรือ **ทันที**

ล็อคแอปพลิเคชัน - คุณสามารถล็อคเนื้อหาที่คุณต้องการซ่อนได้ (รายชื่อ, ข้อความ, อีเมล ฯลฯ)

เปลี่ยนรหัส - เปลี่ยนรหัส PIN (รายการเมนูนี้จะปรากฏขึ้นหากตั้งค่าคำขอรหัส PIN เป็น เปิด), รหัส PIN2, รหัสป้องกัน

หมายเหตุ: รหัสป้องกันเริ่มต้นคือ 0000

การดูสถานะหน่วยความจำ
กด **เมนู** และเลือก **ตั้งค่า**

เลือก อุปกรณ์ และเลือก
ข้อมูลหน่วยความจำ แล้วคุณ将会
สถานะปัจจุบันของหน่วยความจำใน
LG-C320

การรีเซ็ตโทรศัพท์ของคุณ

ใช้ รีเซ็ตการตั้งค่าทั้งหมด ใน
อุปกรณ์ ของเมนู ตั้งค่า เพื่อรีเซ็ตการ
ตั้งค่าทั้งหมดเป็นค่าที่ตั้งมาจากโรงงาน
คุณต้องใส่รหัสป้องกันเพื่อใช้งาน
ฟังก์ชันนี้

การเปลี่ยนการตั้งค่า การแสดงผล

1. กด เมนู และเลือก ตั้งค่า

2. เลือก แสดง แล้วเลือกจาก:

หน้าจอหลัก - ปรับรายการพื้นหลัง
และแสดง

ธีม - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณ
ได้อย่างรวดเร็ว

รูปแบบเมนู - เปลี่ยนมุมมองเมนูจาก
ลิสต์สไตล์ หรือ แบบกริด

แบบอักษร - ปรับขนาดแบบอักษร

ไฟหน้าจอ - เลือกระยะเวลาการทำงาน
ของไฟหน้าจอ นอกจากนี้ ยัง
สามารถใช้ปุ่มนารีเคดเพื่อปรับความ
สว่างของหน้าจอหลัก

เคล็ดลับ! การเปิดไฟหน้าจออกเป็นเวลานานจะทำให้สิ้นเปลืองพลังงานแบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

ข้อความต้อนรับ - หลังจากเลือก เปิด
คุณสามารถเขียนข้อความต้อนรับได้
ข้อความนี้จะปรากฏบนหน้าจอทุกครั้ง
ที่คุณเปิดเครื่อง

หน้าจออื่น - เลือกธีมสำหรับหน้าจอ
หลักหรือหน้าจอการเปิดเครื่อง/
การปิดเครื่อง

อัปเดตซอฟต์แวร์ โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จาก อินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการ
ใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> →
เลือกประเทศ → บริการ

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของ
โทรศัพท์เป็นเวอร์ชันล่าสุดได้อย่าง
สะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่
ศูนย์บริการ

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์
มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดต
อย่างระมัดระวัง โปรดตรวจสอบคำแนะนำ
และหมายเหตุที่ปรากฏขึ้นในแต่ละขั้น
ตอนก่อนดำเนินการต่อไป โปรดทราบว่า
การถอดสายข้อมูล USB หรือแบตเตอรี่
ระหว่างการอัปเดตอาจทำให้โทรศัพท์
มือถือชำรุดเสียหายได้

การเปลี่ยนการตั้งค่า การเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่า
มาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณ
จึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันที
ในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้:
แตะ **การเชื่อมต่อ** ในแท็บ **ตั้งค่า**

การเปลี่ยนการตั้งค่าบลูทูธ

ในการเข้าถึง **บลูทูธ** ให้กดเมนู
และเลือก **ตั้งค่า** และเลือก
การเชื่อมต่อ แล้วเลือก **บลูทูธ**

การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ LG-C320 กับ
อุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่าน
เพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายถึง
ความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัย
มากขึ้น

1. ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด**
และ **มองเห็นได้** คุณสามารถเปลี่ยน
การมองเห็นในเมนู **ตั้งค่า**

ของเมนู **บลูทูธ** โดยการเลือก
การมองเห็นเครื่อง จากนั้นเลือก
มองเห็นได้

2. จาก **บลูทูธ** เลือก **เปิดใช้บลูทูธ**
และเลือก **ค้นหาอุปกรณ์ใหม่**
3. โทรศัพท์ LG-C320 จะค้นหาอุปกรณ์
เมื่อการค้นหาเสร็จสมบูรณ์ **เพิ่ม** และ
รีเฟรช จะปรากฏขึ้นบนหน้าจอ
4. เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย
เลือก **เพิ่ม** และป้อนรหัสผ่าน
จากนั้นเลือก **ตกลง**
5. โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น
ซึ่งคุณควรป้อนรหัสผ่านเดียวกัน
6. การเชื่อมต่อบลูทูธของคุณแบบบึ่ง
กันด้วยรหัสผ่านพร้อมใช้งานแล้ว

การใช้ชุดหูฟังบลูทูธ

1. ตรวจสอบว่าบลูทูธเป็น **เปิดใช้บลูทูธ**
และ **มองเห็นได้**
2. ปฏิบัติตามคำแนะนำที่แนบมาพร้อม
กับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้
อยู่ในโหมดการจับคู่ และจับคู่กับโทร
ศัพท์ของคุณ
3. โทรศัพท์ LG-C320 จะเชื่อมต่อกับชุด
หูฟังบลูทูธและเปลี่ยนเป็นรูปแบบชุด
หูฟังโดยอัตโนมัติ

การส่งและการรับไฟล์โดยใช้บลูทูธ

ในการเปิดบลูทูธ:

1. กด **เมนู** และเลือก **ตั้งค่า** เลือก **การเชื่อมต่อ** แล้วเลือก **บลูทูธ**
2. เลือก **เปิดใช้บลูทูธ**
3. เลือก **เลิกใช้บลูทูธ** เพื่อปิดบลูทูธ

ในการส่งไฟล์:

1. เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
2. เลือก **ตัวเลือก** และเลือก **ส่ง** แล้วเลือก **บลูทูธ**
3. เลือก **ใช่** เพื่อเปิดบลูทูธหากยังไม่ได้เปิดใช้งาน
4. โทรศัพท์ LG-C320 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้บลูทูธภายในรัศมีนั้นโดยอัตโนมัติ
5. เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป แล้วเลือก **ตกลง**

ในการรับไฟล์:

1. ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิดใช้บลูทูธ** และ **มองเห็นได้**
2. เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง เลือก **ใช่** เพื่อรับไฟล์

เคล็ดลับ! คอยเฝ้าดูแถบแสดงความคิดเห็นเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

เคล็ดลับ! เครื่องหมาย Bluetooth® และโลโก้ต่างๆ เป็นสมบัติของ Bluetooth SIG, Inc. และการใช้เครื่องหมายเหล่านั้นโดย LG Electronics อยู่ภายใต้การอนุญาต เครื่องหมายการค้าและชื่อทางการค้าอื่นๆ เป็นสมบัติของเจ้าของเครื่องหมายการค้าและชื่อทางการค้านั้นๆ

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

1. เชื่อมต่อสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
2. เลือก **PC suite** จากเมนูป๊อปอัปในโทรศัพท์
3. คลิกไอคอนสำรอง และเลือก **สำรอง** หรือ **เรียกคืน**
4. เลือกเนื้อหาที่คุณต้องการสำรองข้อมูลหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **ตกลง**
5. ระบบจะสำรองข้อมูลของคุณ

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณบริหารจัดการเรียงไฟล์ จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

PC suite

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

1. เชื่อมต่อตัวเครื่องและ PC โดยใช้สาย USB และรอสักครู่ ข้อความคำแนะนำการติดตั้งจะปรากฏขึ้น
2. ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้วีซาร์ด LG PC Suite Installer เสร็จสมบูรณ์
3. เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ทอป

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

1. เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
2. คลิกที่ไอคอนรูปภาพ
3. ไฟล์ภาพในโทรศัพท์จะโหลดลงในคอมพิวเตอร์เมื่อคุณคลิกหน่วยความจำโทรศัพท์ จะปรากฏขึ้น
4. คลิกที่ไอคอนวิดีโอ
5. ไฟล์วิดีโอในโทรศัพท์จะโหลดลงในคอมพิวเตอร์ เมื่อคุณคลิกหน่วยความจำโทรศัพท์ จะปรากฏขึ้น

หมายเหตุ: เมื่อยกเลิกการติดตั้ง PC Suite IV ไดรเวอร์ของ USB และบลูทูธ จะไม่ถูกลบโดยอัตโนมัติ ดังนั้น คุณต้องยกเลิกการติดตั้งด้วยตัวเอง

หมายเหตุ: โทรศัพท์รุ่นนี้ไม่สนับสนุน LG Air Sync และ On Screen Phone (OSP)

คำแนะนำเพื่อ ความปลอดภัยและ การใช้งานอย่างมี ประสิทธิภาพ

การรับพลังงานคลื่นความถี่วิทยุ
ข้อมูลเกี่ยวกับการรับพลังงานคลื่น
ความถี่วิทยุและค่า SAR (Specific
Absorption Rate)

โทรศัพท์ LG-C320 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของผู้ใช้ทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG

แต่ละรุ่นจะแตกต่างกันบ้างแต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ

- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.612 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.33 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อกำหนด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

⚠ คำเตือน: ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจซ่อม
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบ่งชี้พิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)

- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอกด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์มือถืออาจก่อให้เกิดคลื่นรบกวนเครื่องช่วยฟังบางชนิดได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวน

บ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสิทธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณเช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไรสายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไรสายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์บนเครื่องบินจนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ คุณจึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร

- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้ง จนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีมีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ ห้ามทิ้งแบตเตอรี่เป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่


โทรศัพท์เต็มแล้วเพื่อลดการใช้
พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

- อายุการใช้งานแบตเตอรี่จะขึ้น
อยู่กับการกำหนดค่าเครือข่าย,
การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้,
แบตเตอรี่ และสภาพแวดล้อม

อุปกรณ์เสริม

โทรศัพท์มือถือของคุณมีอุปกรณ์เสริมหลากหลายให้เลือกใช้ ตามที่แสดงด้านล่าง

อุปกรณ์ชาร์จ



แบตเตอรี่



สายเคเบิลข้อมูล



คู่มือการใช้





หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสอบถามเพิ่มเติม

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

- สูงสุด: +55°C (คายประจุ) +45°C (ขณะชาร์จ)
- ต่ำสุด: -10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-C320	
Trade Name	LG	
	CE 0168	
Applicable Standards Details		
R&TTE Directive 1999/5/EC	EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1	
	EN 301 511 V9.0.2	
	EN 50360:2001, EN62209-1:2006	
	EN 60950-1:2006	
	EN 300 328 V1.7.1	
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Doo Haeng Lee / Director	14, Sep. 2010
LG Electronics Logistics and Services B.V. Veluwezoom 15, 1327 AE Almere, The Netherlands	 Signature of representative	

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบคคโล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

การแก้ปัญหา

เนื้อหาในส่วนนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหาบางประการ แต่คุณสามารถแก้ไขปัญหาที่คุณพบบางอย่างได้เองอย่างง่ายดาย

อาการ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่ได้เชื่อมต่อกับระบบเครือข่าย	สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการ	ย้ายไปบริเวณที่ไกลหน้าต่างหรือที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการ
รหัสไม่ตรงกัน	เมื่อคุณต้องการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสนั้นอีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	ติดต่อผู้ให้บริการ
ตั้งค่าฟังก์ชันไม่ได้	ไม่สนับสนุนโดยผู้ให้บริการหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ขอผิดพลาดในการโทรออกหรือการจำกัดบริการ	ตรวจสอบหมายเลขที่โทรออกและตรวจสอบการรับสัญญาณ ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ขอผิดพลาดในการโทรออก มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN 2
โทรศัพท์ไม่สามารถเปิดเครื่องได้	กดปุ่มเปิด/ปิดเครื่องแล้วปล่อยเร็วเกินไป ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดเป็นเวลาอย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์แสดงการชาร์จบนหน้าจอ ทำความสะอาดขั้วแบตเตอรี่

อาการ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ขอผิดพลาดเกี่ยวกับการชาร์จ	แบตเตอรี่หมดโดยสิ้นเชิง มีปัญหาที่ขั้วสัมผัส	ชาร์จแบตเตอรี่ ตรวจสอบกระแสไฟฟ้าและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ ทำความสะอาดหากจำเป็น
	ไม่มีไฟจากเต้าเสียบ	เสียบปลั๊กเข้ากับเต้าเสียบอื่นหรือตรวจสอบกระแสไฟฟ้า
	อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด	ทดสอบด้วยอุปกรณ์ชาร์จเครื่องอื่น ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
การเชื่อมต่อเครือข่ายขาดหาย	สัญญาณอ่อนเกินไป	เชื่อมต่ออีกครั้งกับผู้ให้บริการรายอื่นหากโหมดเครือข่ายเป็นอัตโนมัติ
หมายเลขโทรศัพท์ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว



LG-C320 User Guide

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.



Contents

Getting to Know Your Phone.....	4	Messaging.....	11
Installing the SIM Card and Charging the Battery	6	Sending a message	11
Calling.....	7	Entering text	11
Making a Call	7	Changing your text message settings	12
Making a call from your Contacts ..	7	Changing your multimedia message settings	12
Answering and rejecting a call.....	7	Phonebook	13
Speed dialing.....	7	Searching for a contact.....	13
Viewing your Calls	7	Adding a new contact.....	13
Common settings	8	Tools	13
Camera	8	Setting your Alarm	13
Taking a quick photo	8	Adding an event to your calendar	13
After taking a photo.....	8	Adding an item to your task list....	13
Video Camera.....	8	Adding a memo.....	13
Shooting a quick video.....	8	Date finder.....	13
After you've shot your video.....	9	Voice recoder.....	14
Music.....	9	Sending a voice recording.....	14
MP3 Player	9	Using your calculator.....	14
E-Mail	10	Using the stopwatch.....	14
Sending an email using your new account	10	Converting Units	14
FM Radio.....	10	Adding a city to your World clock.....	14
Listening to the Radio	10	Settings	14
Browser	10	Changing your profiles	14
Accessing the web.....	10	Using Flight Mode	14

Changing your Device settings	14	Guidelines for Safe and Efficient Use	21
Changing the date & time.....	15	Accessories	26
Changing your security settings...	15	Technical Data	27
Viewing memory status.....	16	Troubleshooting	29
Resetting your phone.....	16		
Changing your display settings	16		
Social network services (SNS).....	16		
Phone Software update.....	17		
LG Mobile Phone Software update from internet	17		
Changing your connectivity settings.....	17		
Changing your Bluetooth settings	17		
Pairing with another Bluetooth device.....	17		
Using a Bluetooth headset	18		
Sending and receiving your files using Bluetooth	18		
PC suite	19		
Installing LG PC Suite on your computer	19		
Viewing your phone files on your PC.....	19		
Backing up and restoring your phone's information.....	19		

Getting to Know Your Phone

Earpiece

Send key


- Dials a phone number and answers a call.



- **In standby mode:** Shows the history of calls.


Alpha numeric keys

- **In standby mode:** Input numbers to dial **Hold down**

 - International calls

 - Connect voice mail centre

 to  - Speed dials

 - Hold the key down to go Silent mode

- **In editing mode:** Enter numbers & characters

Soft keys (Left soft key / Right soft key)

- These keys perform the function indicated in the bottom of the display.

Main LCD

End key

- Switch on/off (hold down)
- End or reject a call.


Menu key / OK key

- Selects menu options, confirms actions and answers a call.

Navigation key

In standby mode:

 **Briefly:** Profile selector




 **Briefly:** E-mail provider

 **Briefly:** Message Inbox

 **Briefly:** Camera

In menu: Scroll up & down.



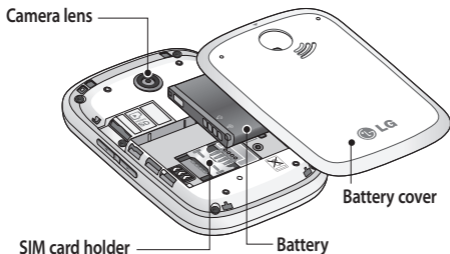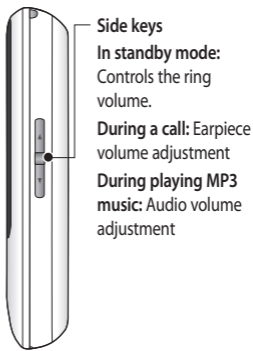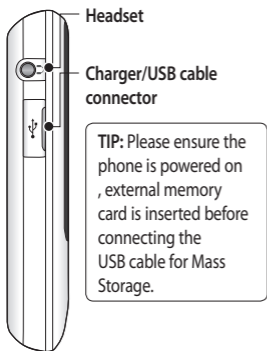

Installing the SIM Card and Charging the Battery


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important! › The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery




 **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

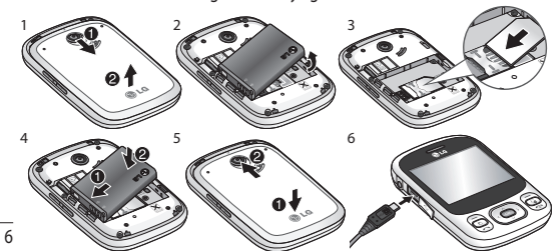› If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.



Calling


Making a Call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press  or the back arrow.
- 3 Press  to begin the call.
- 4 To end the call, press .


TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts


It's easy to call anyone whose number you have stored in your Phonebook.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press  to begin the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press  or select **Reject** in order to reject an incoming call.

NOTE: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialing

You can assign a speed dial number to a contact you call frequently.

Viewing your Calls

You can only check the logs of All, missed, dialled and received calls if the network supports Calling Line Identification (CLI) within the service area.

Common settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Call waiting - Be alerted when you have a call waiting.

Fixed dial numbers - Choose a list of numbers that can be called from your phone.

Excuse messages - Before you reject an incoming call, you can use "Excuse messages" to send a message to explain why you do not receive an incoming call.

Camera

Taking a quick photo

- 1 Press **Menu** and select **Camera** and **Camera**.
- 2 When the camera has focused on your subject, select the **Capture** icon on the bottom-center of the screen and press **OK** to take a photo.

After taking a photo

Your captured photo will appear on the screen. The image name is shown on the bottom top of the screen with five icons on the bottom side.

Images - View the pictures and videos you have taken in your Album.

Send - Send the photo as **Message**, as an **E-mail** or via **Bluetooth**.

New - Take another photo straight away.


Set as - Use the image as Wallpaper, as a **Contact** image, or in your Start up image or Shut down image.

Delete - Delete the photo you have just taken. The viewfinder will reappear.

Video Camera

Shooting a quick video

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.

3 Select the Rec. icon on the bottom-center of the screen and press **OK** to take a video. Rec will appear at the Top right of the viewfinder. Press  again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

Videos - View the pictures and videos you have taken in your Album.

Play - Play the file.

New - Press to shoot another video straight away.

Send - Send the video as **Message**, as an **E-mail** or via **Bluetooth**.

Delete - Delete the video you have just made. The viewfinder will reappear.

Music

MP3 Player

Your LG-C320 has a built-in music player so you can play all your favourite music.

NOTE:

- Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

To access the music player, press **Menu** and select **Music** and select **MP3 player**. From here you can access to:

Last played song - View all the songs you have played recently.

All songs - Contains all the songs you have on your phone.

My Playlists - Contains all playlists you have created.

Artists - Allows you to view all tracks sorted by artist.

Albums - Allows you to view all tracks sorted by album.

Genres - Allows you to view all tracks sorted by genre.

Shuffle all songs - Allows you to play all of the songs in random order.

E-Mail

Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press **Menu**, select **E-Mail** and choose the account you want to use.
- 2 Choose **Create new E-mail** and a new email window will open.
- 3 Write a subject line then press **OK**.
- 4 Enter your message using the keypad.

FM Radio

Listening to the Radio

- 1 Press **Menu** and select **Music**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

NOTE: If you are in an area with bad radio reception, you may have difficulty listening to the radio. It is recommended that you insert headphones into the hands-free connector when listening to the radio to ensure good radio reception.

Browser

Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

- 1 Press **Menu** and select **Internet**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.


Messaging

Your LG-C320 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu** and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write new message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- 4 Select **Options** and choose **Insert** to add an **Image, Video, Sound, Template, Emoticon, Name & number, New slide, Subject** and **More (Business card/Schedule/Memo/Tasks/My business card)**.
- 5 Choose **Send to**.

- 6 Choose a contact from the list of contacts or enter the phone number.
- 7 Select **Send**.

 **WARNING:** Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **ABC/abc/Abc** mode, and **123** mode.

NOTE: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Changing your text message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**.

You can make changes to:

Text message centre - Enter the details for your message centre.

Delivery report - Choose to receive confirmation that your message have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your **Text**, **Voice**, **Fax**, **X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

Send long text as - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.

Changing your multimedia message settings

Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Delivery report - Choose to request or allow a delivery report.

Read reply - Choose to request or allow a read reply.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on screen.

Creation mode - Allows you to select the contents type supported by MMS.

Delivery time - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

MMS centre - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 select **New contact**.
- 3 Choose whether to store your new contact on your **Handset** or **USIM** card.
- 4 Enter the information you want in the fields provided and select **Done**.

Tools

Setting your Alarm

Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.

Adding an event to your calendar

Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys.

Adding an item to your task list

You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amends by selecting **Done**.

Adding a memo

You can lock the memo. Press **Option** and select **Lock** for the private memo to protect privacy.

Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Sending a voice recording

Once you have finished recording, select **Options > Send Via > Message/E-Mail/Bluetooth**.

Using your calculator

- 1 Press **Menu** and select **Tools**, then choose **Calculator**.
- 2 Press the numeric keys to input numbers.

Using the stopwatch

- 1 Press **Menu** and select **Tools**, then choose **Stopwatch**.
- 2 Select **Start** to begin the timer.

Converting Units

- 1 Press **Menu** and select **Tools**, then choose **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.

Adding a city to your World clock

- 1 Press **Menu** and select **Tools**, then choose **World clock**.
- 2 To find out the time of specific city, press **Options** and select **New city**.

Settings

Changing your profiles

- 1 Press **Menu** and select **Settings**.
- 2 Select **Profiles** and then choose the profile you want to edit.
- 3 Select **Options** and choose **Personalise**.
- 4 You can change all of the tones, its volumes and alert options from here.

Using Flight Mode

When Flight mode is activated, you will not be able to make calls, connect to the Internet or send messages.

Changing your Device settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** settings and choose from the list below.

Date and time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings On or Off.

Languages - Change the language of for your LG-C320's display.

Auto key lock - Enables/Disables Auto Keylock.

Security - Adjust your security settings, including PIN codes and handset lock.

Memory info - See Viewing memory status for more information.

Reset all settings - Restores all settings to their factory defaults.

Device info - View the technical information for your LG-C320.

Changing the date & time

- 1 Press **Menu** and select **Settings**.
- 2 Select **Device** and choose Date and time and choose from the list below:

Date and time settings - Select On Auto update, and the phone will automatically update the date and time.

Date format - You can set the date format (DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD).

Date separator - You can enter the current date. You can set the date separator (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY).

Time format - You can set the date format **12 hours** or **24 hours**.

Changing your security settings

Change your security settings to keep your LG-C320 and the important information it holds protected.

- 1 Press **Menu** and select **Settings** and choose **Device**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Device lock - Choose a security code to lock your phone **Never**, **At device start up**, **When SIM card** is changed or **Immediate**.

Application lock - You can lock the contents you want to hide. (Phonebook, Messaging, E-mail, etc.)

Change codes - Change your PIN code PIN2 code, Security code.

Viewing memory status

Press **Menu** and select **Settings**, select **Device** and choose **Memory info** You will then see the current status of the memory space available in your LG-C320.

Resetting your phone

Use **Reset all settings** in **Device** of **Settings** menu to reset all the settings to the factory definitions. You need the security code to activate this function.

Changing your display settings

1 Press **Menu** and select **Settings**.

2 Select **Display** and choose from:

Homescreen - Adjust the Wallpaper and Display items.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view to List style or Grid style.

Font - Adjust the font style and Font Size.

Backlight - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness.

TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Greeting message - After selecting **On**, you can write a welcome message. The message will appear on screen whenever you start-up the phone.

Other screens - Choose the theme of your home screen or start-up/shut down screen.

Social network services (SNS)

Your LG-C320 has SNS that lets you enjoy and manage your social network.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Select **Connectivity** in the **SETTINGS** tab.

Changing your Bluetooth settings

Touch **Bluetooth** in the **SETTINGS** tab. select **Settings** and choose **Connectivity**.

Pairing with another Bluetooth device

By pairing your LG-C320 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** of **Bluetooth** menu, by selecting **My device visibility**, then **Visible**.
- 2 From **Bluetooth**, choose **Activate Bluetooth** and select **Search new device**.

- 3 Your LG-C320 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **Activate Bluetooth** and **Visible**.
- 2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.
- 3 Your LG-C320 will automatically connect to your Bluetooth headset.

Sending and receiving your files using Bluetooth

To switch Bluetooth on:

- 1 Press **Menu** and select **Settings**. Choose **Connectivity** then select **Bluetooth**.

2 Select **Activate Bluetooth**.

- 3 Select **Deactivate Bluetooth** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Your LG-C320 will automatically search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and select **OK**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **Activate Bluetooth** and **Visible**.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is sent.

TIP! The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

PC suite

Installing LG PC Suite on your computer

- 1 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 2 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 3 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Viewing your phone files on your PC

Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the Photos icon.
- 3 Phone image files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.
- 4 Click on the Videos icon.
- 5 Phone video files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.

Note: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

Note: LG air Sync and On Screen Phone (OSP) are not supported by this device.

Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the **PC suite** from the popup menu in your phone.
- 3 Click on the Backup icon, and select **Backup** or **Restore**.

- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click OK.
- 5 Your information will be backed up.

Guidelines for Safe and Efficient Use


Exposure to Radio Frequency Energy

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This LG-C320 mobile phone model has been designed to comply with the applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. SAR tests are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels for various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this phone model tested by DASY4 for use close to the ear is 0.612 W/kg (10 g), and when worn on the body is 1.33 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

Product Care and Maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient Phone Operation

Electronic Devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might experience disturbance due to mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road Safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give your full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.

- If your vehicle is equipped with an airbag, do not obstruct it with installed or portable wireless equipment. This may cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting Area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially Explosive Atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In Aircraft

Wireless devices can cause interference to aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency Calls

Emergency calls may not be available under all mobile networks. You should therefore never depend solely on the phone for emergency calls. Check with your local service provider.

Battery Information and Care


- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

- Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of batteries in the household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Accessories

Various accessories are available for your mobile phone. These are detailed below.

Charger



Battery



Data cable



User Guide



NOTE

- Always use genuine LG accessories. Failure to do so may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further enquires.

Technical Data

Ambient Temperatures

- › Max: +55°C (discharging) +45°C (charging)
- › Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-C320

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1
EN 301 511 V9.0.2
EN 50360:2001, EN62209-1:2006
EN 60950-1:2006
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

14, Sep. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757

Troubleshooting

This section lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Symptom	Possible causes	Possible Corrective measures
No connection to the network	Signal is weak or you're outside of the carrier network.	Move to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required.	Contact your Service Provider.
Calls not available	Dialing error or service limitations.	Check the number dialed and check the reception. Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorized. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean the battery contacts.

Troubleshooting

Symptom	Possible causes	Possible Corrective measures
Charging error	Battery totally empty.	Charge battery.
	Contact problem.	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No power from outlet.	Plug in to a different socket or check voltage.
	Charger defective. Wrong charger. Battery defective.	Test with another charger. Only use original LG accessories. Replace battery.
Network connection is lost.	Signal too weak.	Reconnection to another service provider if network mode is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check the Settings menu and turn the function off.