



ไ ท ย
ENGLISH

คู่มือการใช้ GT350i

คู่มือการใช้
GT350i

LG Electronics

CE0168 !

P/NO : MMBB0379234(1.0) G

www.lg.com



โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการคุณ

ขณะนี้ บริษัท LG ได้ดำเนินการตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์แท้จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกรองจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Bluetooth QD ID B016447



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

ไม่แนะนำให้ผู้พิการทางสายตาใช้เครื่องรุ่นนี้เนื่องจากมีปุ่มกดบนหน้าจอสัมผัส



GT350i คู่มือการใช้

ขอแสดงความยินดีที่คุณซื้อโทรศัพท์เคลื่อนที่รุ่น GT350i
ของ LG ซึ่งทันสมัยและมีขนาดกะทัดรัดออกแบบให้
ทำงานด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่แบบ
ดิจิตอลใหม่ล่าสุด

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ	6	การใช้การป้องกันการโทร.....	25
เริ่มทำความรู้จักกับโทรศัพท์		เบอร์โทรที่กำหนด	26
ของคุณ	11	ข้อความขอโทษ	26
ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ..	12	ค่าโทร	26
การใส่ซิมและแบตเตอรี่.....	14	เวลาในการโทร	26
การชาร์จโทรศัพท์	15	ปริมาณข้อมูล.....	26
การตรวจหน่วยความจำ	16	การเปลี่ยนการตั้งค่าการโทรทั่วไป ..	26
การใช้หน้าจอสัมผัส	17	รายชื่อ.....	27
เคล็ดลับสำหรับหน้าจอสัมผัส	17	การค้นหารายชื่อ.....	27
ควบคุมหน้าจอสัมผัส	17	การเพิ่มรายชื่อใหม่	27
หน้าจอหลักของคุณ	18	การสร้างกลุ่ม.....	27
ปุ่มด่วน.....	19	การเปลี่ยนการตั้งค่าของรายชื่อ	28
แถบสถานะ	20	ข้อความ	29
การเปลี่ยนสถานะจากแถบสถานะ..	21	การส่งข้อความ.....	29
การใช้งานฟังก์ชันมัลติทาสกิ้ง	21	การป้อนข้อความ	29
การโทร	22	โหมด T9.....	29
การโทรออก	22	ตารางอักษรไทย.....	29
การโทรออกโดยใช้รายชื่อ	22	การตั้งค่าอีเมล	30
การรับสายและการปฏิเสธสาย		การดึงข้อมูลอีเมลของคุณ	30
เรียกเข้า	22	การส่งอีเมลโดยใช้แอคเคาท์ใหม่..	30
ตัวเลือกต่างๆ ระหว่างใช้สาย.....	23	การเปลี่ยนการตั้งค่าอีเมล.....	30
การโทร	24	โฟลเดอร์ข้อความ.....	31
การใช้สายที่สอง	24	การเปลี่ยนการตั้งค่าข้อความ	
การใช้การโอนสาย.....	25	ตัวอักษร	31
สายเรียกซ้อน	25	การเปลี่ยนการตั้งค่าข้อความ	
		มัลติมีเดีย	32
		การเปลี่ยนการตั้งค่าอื่นๆ	32

สารบัญ

กล้องถ่ายรูป	33	การโอนไฟล์ไปที่โทรศัพท์.....	42
ทำความเข้าใจกับช่องมองภาพ.....	33	อื่นๆ.....	43
การถ่ายภาพดวน	34	เพลง	43
ภายหลังการถ่ายรูป.....	34	การโอนเพลงไปยังโทรศัพท์	44
การใช้การตั้งค่าขั้นสูง	35	การเล่นเพลง	44
กล้องวิดีโอ.....	36	การสร้างรายการเพลง.....	44
ทำความเข้าใจกับช่องมองภาพ.....	36	วิทยุ FM	44
การถ่ายวิดีโอดวน	37	การค้นหาสถานี	45
หลังจากถ่ายวิดีโอ	37	การรีเซ็ตสถานี	45
การใช้การตั้งค่าขั้นสูง	38	สมุดบันทึก	46
รูปภาพและวิดีโอ	39	การเพิ่มเหตุการณ์ลงในปฏิทิน	46
การดูรูปภาพและวิดีโอ	39	การเพิ่มรายการลงในรายการงาน... ..	46
การบันทึกภาพจากวิดีโอ	39	การใช้ตัวค้นหาวันที่	46
การดูรูปภาพแบบภาพสไลด์.....	39	การเพิ่มบันทึก.....	47
การตั้งค่ารูปภาพเป็นพื้นหลัง	40	การตั้งเวลาการปลุก	47
การแก้ไขรูปภาพ	40	การเพิ่มเมืองในเวลาทั่วโลก	47
มัลติมีเดีย	41	บันทึกเสียง	48
รูปภาพ	41	การบันทึกเสียงหรือเสียงพูด	48
การส่งรูปภาพ	41	การใช้เครื่องคิดเลข.....	48
การใช้รูปภาพ	41	PC ซิงค์.....	49
การพิมพ์ภาพ.....	41	การติดตั้ง LG PC Suite	
การย้ายหรือคัดลอกรูปภาพ.....	42	ลงในคอมพิวเตอร์.....	49
เสียง.....	42	การเชื่อมต่อโทรศัพท์เข้ากับ	
การใช้เสียง	42	คอมพิวเตอร์	49
วิดีโอ	42	การสำรองข้อมูลและการเรียกคืน	
การดูวิดีโอ	42	ข้อมูลของโทรศัพท์.....	49
การส่งวิดีโอคลิป	42		

การดูไฟล์ในโทรศัพท์บน	
คอมพิวเตอร์	49
การซิงโครไนซ์รายชื่อ.....	50
การซิงโครไนซ์ข้อความ	50
เว็บไซต์.....	51
การเข้าใช้เว็บไซต์	51
การใช้ RSS reader.....	51
การใช้โทรศัพท์เป็นโมเด็ม	51
ตั้งค่า	53
การปรับแต่งรูปแบบเสียงของคุณ... ..	53
การเปลี่ยนการตั้งค่าหน้าจอ	53
การเปลี่ยนการตั้งค่าโทรศัพท์.....	53
การเปลี่ยนการตั้งค่าการเชื่อมต่อ... ..	54
การใช้ตัวจัดการหน่วยความจำ	55
การส่งและการรับไฟล์โดยใช้บลูทูธ	55
การเปลี่ยนการตั้งค่าบลูทูธ.....	56
การจับคู่กับอุปกรณ์บลูทูธอื่น	56
การใช้ชุดหูฟังบลูทูธ	57
Wi-Fi	57
การอัปเดตซอฟต์แวร์	58
อุปกรณ์เสริม	59
ข้อมูลทางเทคนิค	60

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำ เหล่านี้อาจทำให้เกิดอันตรายหรือผิ ดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ ข้อมูลเกี่ยวกับการรับพลังงาน คลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น GT350i นี้ ได้รับการออกแบบตรงตามขอ กำหนดเรื่องความปลอดภัยในการ ใช้งานอันเกี่ยวกับการรับพลังงาน คลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้ หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึง การกำหนดค่าเพื่อไว้ทั้งนี้เพื่อ ความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุ และสุขภาพ

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้ อยู่ภายในข้อกำหนดการรับพลังงาน คลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ย ตามเนื้อเยื่อหนัก 10 กรัม

- ค่า SAR สูงสุดสำหรับโทรศัพท์ รุ่นนี้ ซึ่งทำการทดสอบโดย DASy4 ขณะถือแนบกับหูคือ 0.540 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.568 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการ รับรองให้ใช้กับโทรศัพท์ รุ่นนี้ เท่านั้น การใช้อุปกรณ์ประเภท อื่นๆ อาจทำให้การรับรองหรือ การรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่อง โทรศัพท์ ควรนำไปให้ช่างเทคนิค ผู้มีความรู้เมื่อจำเป็นต้องมี การตรวจซ่อม

- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรทัศน์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษห้ามใช้ เช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้เครื่องชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าตะต้องเส้าอากาศโดยไม่จำเป็น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบางเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ขณะขับขี่ยานพาหนะในพื้นที่นั้น

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ

- ขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลมซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความ สามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิด

การระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ปิดโทรศัพท์มือถือของคุณหรือเปิดใช้งานโหมด Flight ก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ



คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ลดลง
- ใช้เฉพาะแบตเตอรี่และที่ชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ

- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจลดลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ ห้ามทิ้งในถังขยะครัวเรือน
- หากคุณต้องเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุด เพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้ว เพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเฉลี่ย, การตั้งคาบผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

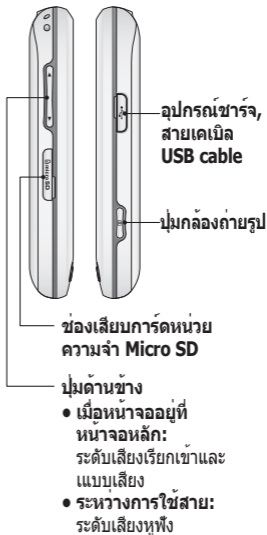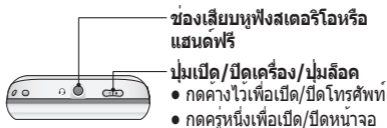

ภาพแสดงตัวเครื่องเมื่อเปิดฝาครอบ



เปลี่ยนโหมดการ

ป้อนข้อความ
(ตัวพิมพ์ใหญ่/
ตัวพิมพ์เล็ก)

SMS

ปุ่มตัวเลขและตัวอักษร

ปุ่มสัญลักษณ์

● ป้อนสัญลักษณ์

ปุ่ม Space

ใช้ในการป้อนที่ว่างเมื่อแก้ไข

SNS

เบร่าส์อินเทอร์เน็ต

Push E-mail


Instant
Messenger

ปุ่ม Enter

ปุ่มลบ

● กดเพื่อลบตัวอักษรแต่ละตัว
การกดปุ่มนี้ค้างไว้จะลบข้อความ
ที่ป้อนไว้ทั้งหมด

⚠ คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์ หรือการนั่งทับเมื่อใส่ไว้ในกระเป๋าทางแกงอาจทำให้จอ LCD ของโทรศัพท์ และการทำงานของหน้าจอสัมผัสเสียหายได้

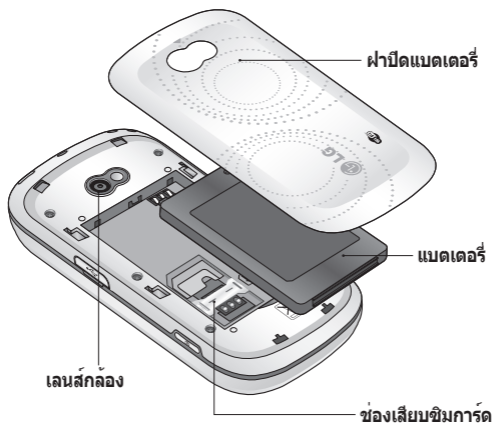

การใส่ซิมและแบตเตอรี่


1 ถอดฝาปิดแบตเตอรี่

เลื่อนฝาปิดแบตเตอรี่
ไปทางด้านล่างของโทรศัพท์
และถอดฝาปิดแบตเตอรี่ออก



2 ใส่ซิมการ์ด

สไลด์ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด ตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองบนการ์ดคว่ำลง ตรวจสอบว่าได้ถอดแบตเตอรี่ออกจากโทรศัพท์แล้วก่อนใส่ซิมการ์ด ในการถอดซิมการ์ด ให้ค่อยๆ ดึงซิมการ์ดออกมา

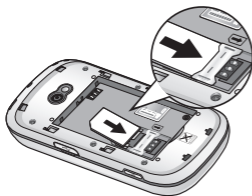


⚠ คำเตือน: อย่าใช้เล็บในการถอดแบตเตอรี่ออก

⚠ คำเตือน: ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

3 ใส่แบตเตอรี่

ใส่แบตเตอรี่โดยให้ด้านบนของแบตเตอรี่ลงไปที่ด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วของโทรศัพท์ จากนั้นกดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่

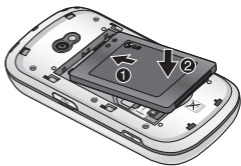

การชาร์จโทรศัพท์

ถอดฝาปิดช่องเสียบอุปกรณ์ชาร์จ
ที่ด้านหลังของโทรศัพท์ GT350i เชื่อม
ต่ออะแดปเตอร์สำหรับชาร์จแบตเตอรี่
(เครื่องชาร์จ) และสายเคเบิล USB
ที่มีให้ เชื่อมต่อสาย USB กับโทรศัพท์
และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ
คุณจะต้องชาร์จโทรศัพท์ GT350i
จนกว่าข้อความ "แบตเตอรี่เต็มแล้ว"
จะปรากฏขึ้นบนหน้าจอ

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็ม
เมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งาน
ของแบตเตอรี่ ไม่ต้องสนใจข้อความ
"แบตเตอรี่เต็มแล้ว" ที่ปรากฏครั้งแรก
และชาร์จแบตเตอรี่ทิ้งไว้ตลอดคืน



การัดหน่วยความจำ

การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยใช้การัดหน่วยความจำ MicroSD

หมายเหตุ: การัดหน่วยความจำเป็นอุปกรณ์เสริม


- 1 เปิดฝาปิดช่องเสียบการัดหน่วยความจำที่ขอบด้านซ้ายมือของโทรศัพท์



- 2 เลื่อนการัดหน่วยความจำเข้าไปในช่องเสียบให้แน่นเข่าที่ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

การฟอร์แมตการัดหน่วยความจำ

การัดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณจำเป็นต้องฟอร์แมตการัดหน่วยความจำก่อนคุณจึงจะสามารถเริ่มต้นใช้งานการัดได้

- 1 จากหน้าจอหลัก ให้เลือก  จากนั้น ตั้งค่าโทรศัพท์ ในแท็บตั้งค่า
- 2 แตะ ข้อมูลความจำ แล้วเลือก ความจำการัด
- 3 แตะ ฟอร์แมต แล้วยืนยันการเลือกของคุณ
- 4 ใส่รหัสผ่าน หากมีการกำหนดไว้ การัดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการัดหน่วยความจำของคุณ โครงสร้างไฟล์เดออร์อาจจะแตกต่างไปจากเดิม ภายหลังจากฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การใช้หน้าจอสัมผัส

เคล็ดลับสำหรับหน้าจอสัมผัส


- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ GT350i เครื่องจะกลับไปล็อคหน้าจอ

ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ GT350i สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ

การเปิดแอปพลิเคชัน

ในการเปิดแอปพลิเคชันใดก็ตามเพียงแตะที่ไอคอนนั้น

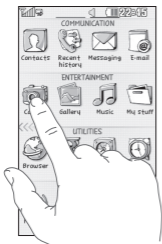

การเลื่อนหา


ลากจากด้านหนึ่งไปยังอีกด้านหนึ่ง เพื่อเลื่อน ในหน้าจอบางหน้าจอ เช่น ข้อมูลโทร คุณสามารถเลื่อนขึ้นหรือลงได้อีกด้วย




หน้าจอหลักของคุณ

คุณสามารถลากและคลิกสิ่งที่คุณต้องการได้ในหน้าจอหลักทุกประเภท


ใช้งาน

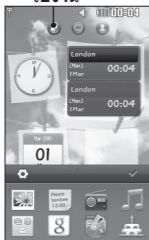


ใช้งาน

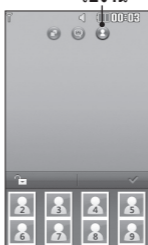

หน้าจอหลัก Widget


เมื่อคุณแตะ  ที่ด้านล่างขวาของหน้าจอ พาเนล Widget สำหรับโทรศัพท์มือถือจะปรากฏขึ้น เมื่อคุณเลือก Widget และลากไปที่หน้าจอ Widget จะปรากฏบนหน้าจอหลักในจุดที่วาง

ใช้งาน

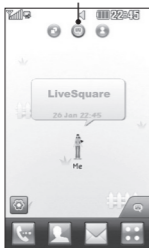

หน้าจอหลัก Livesquare
ในหน้าจอ Livesquare คุณสามารถโทรและส่งข้อความไปยังหมายเลขที่กำหนดให้กับการ์ดคุณ ในการใช้การโทร การส่งข้อความ หรือรายชื่อให้เลือกการ์ดคุณ

หน้าจอหลักโทรศัพท์

คุณสามารถโทร ส่งข้อความ หรือแก้ไขรายชื่อได้โดยตรงในหน้าจอหลักนี้ เมื่อคุณแตะ  รายการโทรศัพท์จะปรากฏขึ้น และคุณสามารถลากโทรศัพท์ไปที่หน้าจอได้

เคล็ดลับ! เมนูสำหรับผู้ใช้งานแบ่งเป็นหน้าจอหลัก 3 ประเภท ในการสลับระหว่างหน้าจอหลักต่างๆ เพียงลากนิ้วบนหน้าจอจากซ้ายไปขวาหรือขวาไปซ้ายอย่างรวดเร็ว

ปุ่มด่วน

ปุ่มด่วนบนหน้าจอหลักจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้ง่ายได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะเพื่อเปิดปุ่มสัมผัสสำหรับ
ใช้โทรออก



แตะเพื่อเปิด รายชื่อ
ในการค้นหาหมายเลขที่คุณ
ต้องการโทร ให้ป้อนชื่อที่ด้าน
บนของหน้าจอโดยใช้นุ่ม
สัมผัส คุณยังสามารถสร้าง
รายชื่อใหม่และแก้ไขรายชื่อ
ที่มีอยู่ได้



แตะเพื่อเข้าใช้เมนู **ข้อความ**
คุณสามารถสร้าง SMS หรือ
MMS ใหม่ หรือดูข้อความใน
โฟลเดอร์ข้อความได้



แตะเพื่อเปิด **เมนูบนสุด**
ทั้งหมดที่แบ่งออกเป็นสี่หมวด

หน้าจอหลักของคุณ

แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งานบลูทูธหรือ GPRS อยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด
	มัลติทาสกิ้ง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ใช้ EDGE อยู่
	ไม่มีสัญญาณเครือข่าย
	พลังงานแบตเตอรี่ที่เหลืออยู่
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่
	ข้อความในถาดเข้าเต็ม
	การส่งข้อความล้มเหลว
	การส่งข้อความมัลติมีเดียล้มเหลว
	อีเมลที่ยังไม่อ่านในถาดเข้าอีเมล



ไอคอน	รายละเอียด
	การส่งล้มเหลว
	ตั้งปลุกแล้ว
	ใช้งานรูปแบบเสียงที่ปรับแต่งเอง (หมายเลขในไอคอนอาจแตกต่างกัน)
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบนอกอาคารอยู่
	ใช้รูปแบบเงียบอยู่
	ใช้ชุดหูฟังอยู่
	โอนสายเรียกเข้า
	โรมมิ่ง
	เปิดใช้โหมด Flight
	ใช้งานบลูทูธ
	เล่น BGM
	หยุด BGM ชั่วคราว
	การ์ดหน่วยความจำเปิดใช้งาน

การเปลี่ยนสถานะจากแถบสถานะ

แตะที่ตรงกลางของแถบสถานะเพื่อเปิดสรุปสถานะ โดยจะแสดงเวลาปัจจุบัน, เครือข่าย, SVC ID, แบตเตอรี่, หน่วยความจำเครื่อง, หน่วยความจำภายนอก, รูปแบบเสียง, MP3 และสถานะบลูทูธ คุณสามารถกำหนดประเภทรูปแบบเสียง เล่น/หยุดชั่วคราว MP3s และเปิด/ปิดการทำงานบลูทูธ





การใช้งานฟังก์ชันมัลติทาสกิ้ง

กดปุ่มมัลติทาสกิ้ง  แล้วปล่อยให้เมนูมัลติทาสกิ้ง จากแท็บ แอปฯ ที่กำลังรัน คุณสามารถดูแอปพลิเคชันทั้งหมดที่รันอยู่ และเขาใช้งานได้ คุณสามารถเริ่มและแก้ไขแอปพลิเคชันโปรดได้จากแท็บ แอปฯ โปรดเมื่อคุณกำลังรันแอปพลิเคชันไว้ที่พื้นหลัง (เช่น เกมส์ หรือวิทยุ FM) ไอคอน  จะปรากฏขึ้นในแถบสถานะ

การโทร



การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด
- 3 แตะ  เพื่อเริ่มการโทรออก
- 4 ในการวางสาย ให้กดปุ่มสมารท์

เคล็ดลับ! ในการป้อน + เพื่อโทรออกต่างประเทศ กด ค้างไว้


เคล็ดลับ! กดปุ่มเปิดปิดเพื่อล๊อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ตั้งใจ

การโทรออกโดยใช้รายชื่อ


- 1 จากหน้าจอหลัก ให้แตะ  เพื่อเปิด รายชื่อ
- 2 แตะที่กล่องฟิลด์ชื่อที่ด้านบนของหน้าจอ และป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่ต้องการโทรโดยใช้ปุ่มกด
- 3 จากรายการที่ฟลิตเตอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทร หมายเลขเริ่มต้นจะถูกใช้ในการโทร หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
- 4 คุณสามารถแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข คุณอาจแตะ  เพื่อโทรโดยใช้หมายเลขเริ่มต้นก็ได้

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้แตะที่ปุ่มรับสายเพื่อรับสาย

ในการปิดเสียงเรียกเข้า ให้ปลดหน้าจอ ล็อค ซึ่งจะปลดล็อคโทรศัพท์ หากล๊อคอยู่ จากนั้นแตะ  วิธีนี้เป็นวิธีที่มีประโยชน์ หากคุณลืมเปลี่ยนรูปแบบเสียงเป็น เงียบเมื่ออยู่ในห้องประชุม แตะ ปฏิเสธ เพื่อปฏิเสธสายเรียกเข้า

ตัวเลือกต่างๆ ระหว่างใช้สาย

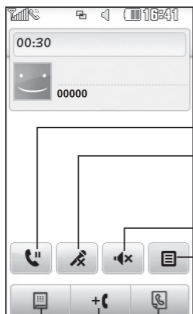

พัก - และ เพื่อพักสาย

ปิดเสียง - และ เพื่อปิดไมโครโฟน
ดังนั้นบุคคลที่กำลังคุยสายอยู่จะไม่ได้ยินเสียงคุณ

ลำโพง - และ เพื่อปิดลำโพง

ตัวเลือก - และ เพื่อแสดงรายการตัวเลือกต่างๆ ระหว่างใช้สาย

และ เพื่อค้นหารายชื่อในระหว่างการโทร

และ เพื่อเพิ่มบุคคลอื่นในการสนทนา


และ เพื่อเปิดปุ่มตัวเลขสำหรับการโทรสายที่สอง ฟังก์ชันนี้ให้คุณนาวิเกตเมนูด้วยตัวเลือกหมายเลขเมื่อคุณโทรอัตโนมัติ เช่น ศูนย์บริการ

เคล็ดลับ! ในการเลื่อนดูรายการตัวเลือกต่างๆ หรือรายชื่อ ให้แตะที่รายการสุดท้ายที่มองเห็นได้ แล้วใช้นิ้วเลื่อนหน้าจอขึ้น รายการต่างๆ จะเลื่อนขึ้นทำให้มองเห็นรายการอื่นๆ ได้





การโทร

โทรด่วน

คุณสามารถกำหนดรายชื่อที่โทรออกบอายเป็นหมายเลขโทรด่วนได้

- 1 เลือก รายชื่อ ในแท็บการติดต่อ และแตะ  และเลือก โทรด่วน
- 2 ข้อความเสียงของคุณถูกตั้งค่าไว้ที่โทรด่วน 1 คุณจะเปลี่ยนไม่ได้ และที่หมายเลขอื่นๆ เพื่อกำหนดรายชื่อสำหรับโทรด่วน
- 3 รายชื่อ ของคุณจะเปิดขึ้น เลือกรายชื่อที่คุณต้องการกำหนดให้กับหมายเลขนั้น โดยการแตะที่หมายเลขโทรศัพท์หนึ่งครั้ง ในการค้นหารายชื่อ ให้แตะที่กล่องฟิลด์ชื่อ และป้อนตัวอักษรแรกของชื่อที่ต้องการ

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ  และพิมพ์หมายเลขที่คุณต้องการโทร
- 2 แตะ  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพักสายคู่สนทนา
- 4 ในการสลับสาย ให้แตะ  หรือกดหมายเลขที่พักสายไว้
- 5 ในการวางสายใดสายหนึ่ง หรือวางสายทั้งสองสาย ให้กด  และเลือก วางสาย แล้วตามด้วยทั้งหมด, พัก หรือ ใช้งาน

เคล็ดลับ! แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การใช้การโอนสาย

- 1 **แตะ** ตั้งค่าการโทร ในแท็บตั้งค่า
- 2 **แตะ** การโอนสาย
- 3 เลือกว่าจะโอนสายเรียกเข้าทั้งหมด, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อกไม่ได้
- 4 ป้อนหมายเลขที่คุณต้องการโอนสาย
- 5 **แตะ** คำขอ เพื่อเปิดใช้งาน

หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด** จากเมนูการโอนสาย

สายเรียกซ้อน

แจ้งเตือนให้ทราบเมื่อมีสายเรียกซ้อน (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

การใช้การป้องกันการโทร

- 1 **แตะ** ตั้งค่าการโทร ในแท็บตั้งค่า
- 2 **แตะ** ป้องกันการโทร
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่งหรือเลือกทั้ง 6 ตัวเลือกนี้:
โทรออกทั้งหมด
สายโทรออกต่างประเทศ
สายโทรออกต่างประเทศ ยกเว้นประเทศแม่
สายเข้าทั้งหมด
สายเข้าเมื่ออยู่ต่างประเทศ
เลิกใช้ทั้งหมด
- 4 ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

เคล็ดลับ! เลือก

กำหนดเบอร์โทรออก จากตัวเลือก **ตั้งค่าการโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรจากโทรศัพท์ของคุณ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

การโทร

เบอร์โทรที่กำหนด

เลือกรายการหมายเลขที่สามารถโทรจากโทรศัพท์ของคุณได้
คุณจะต้องใช้รหัส PUK2
จากคู่มือบริการด้วย เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

ข้อความขอโทษ

ก่อนที่คุณจะปฏิเสธสายเรียกเข้า
คุณสามารถใช้ “ข้อความขอโทษ”
เพื่อส่งข้อความอธิบายว่าเหตุใดคุณจึงไม่รับสาย

ค่าโทร

ดูค่าใช้จ่ายที่คิดตามที่คุณโทรออก
(บริการนี้ขึ้นอยู่กับระบบเครือข่ายและ
ผู้ให้บริการบางรายอาจไม่สนับสนุน
บริการนี้)

เวลาในการโทร

ระยะเวลาทั้งหมดของสายที่โทรออก
หรือสายที่ได้รับหรือทั้งสองอย่าง

ปริมาณข้อมูล

ดูจำนวนข้อมูลที่คุณได้รับและส่งทั้งหมดหรือทั้งสองอย่าง
เป็นกิโลไบต์

การเปลี่ยนการตั้งค่าการโทรทั่วไป

1 และ ตั้งค่าการโทร ในแท็บตั้งค่า

2 เลื่อนแล้วแตะ การตั้งค่าทั่วไป
จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าของ:

ปฏิเสธการรับสาย - เลื่อนสวิตช์ไปที่ **เปิด** เพื่อเลื่อนแถบไปที่ปฏิเสธรายการ คุณสามารถแตะที่กลองขอความช่วยเหลือจากทุกสายรายชื่อหรือกลุ่ม หรือจากหมายเลขที่ไม่ได้ลงทะเบียน (ไม่มีอยู่ในรายชื่อของคุณ) หรือไม่มีข้อมูลผู้โทร และ **บันทึก** เพื่อเปลี่ยนการตั้งค่า

ส่งหมายเลขตัวเอง - เลือกว่าจะแสดงหมายเลขของคุณเมื่อคุณโทรออกหรือไม่

โทรซ้ำอัตโนมัติ - เลื่อนสวิตช์ไปทางซ้าย

เพื่อ **เปิด** หรือทางขวาเพื่อ **ปิด**

โหมดตอบรับ - เลือกว่าจะรับสายโดยไข่มุกรับหรือปุ่มใดๆ

เตือนทุกนาที - เลื่อนสวิตช์ไปทางซ้ายเพื่อ **เปิด** ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย

โหมดตอบรับ BT - เลือก **แฮนด์ฟรี** เพื่อให้สามารถรับสายได้ในระหว่างใช้งานชุดหูฟังบลูทูธหรือเลือก **ตัวเครื่อง** เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

บันทึกเบอร์ใหม่ - เลือก **ใช่** เพื่อบันทึกหมายเลขใหม่

รายชื่อ

การค้นหารายชื่อ

- 1 แตะ รายชื่อ ในแท็บการติดต่อ
- 2 คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อในฟิลด์ชื่อจะทำให้เมนูขามไปที่พื้นที่ของรายชื่อตามตัวอักษรนั้น

เคล็ดลับ! ปุ่มกดตัวอักษรจะปรากฏขึ้นเมื่อคุณแตะที่ฟิลด์ชื่อ

หรือแตะ  จากหน้าจอหลัก

การเพิ่มรายชื่อใหม่


- 1 แตะรายชื่อในแท็บการติดต่อและแตะ สร้างรายชื่อใหม่
- 2 เลือกว่าจะบันทึกรายชื่อไปยังตัวเครื่อง หรือ SIM
- 3 ป้อนชื่อและนามสกุล
- 4 คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุดหกหมายเลขต่อหนึ่งรายชื่อ แต่ละรายการจะมีประเภทที่ตั้งล่วงหน้า เบอร์มือถือ, โสม, ออฟฟิศ, เบอร์เพจเจอร์, แฟกซ์ และ ทั่วไป
- 5 เพิ่มอีเมลแอดเดรส คุณสามารถป้อนอีเมลแอดเดรสที่แตกต่างกันได้สูงสุด 2 อีเมลต่อหนึ่งรายชื่อ

6 กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า คุณสามารถกำหนดกลุ่มได้สูงสุดหกกลุ่มต่อหนึ่งรายชื่อ เลือกระหว่าง ไม่มีกลุ่ม, ครอบครัว, เพื่อน, เพื่อนร่วมงาน, โรงเรียน หรือ รีไอพี

7 คุณยังสามารถเพิ่ม เสียงเรียกเขา, วันเกิด, วันครบรอบ, โสมเพจ, ที่อยู่บ้าน, ชื่อบริษัท, ชื่องาน, ที่อยู่บริษัท, บ้านทีก และไอคอนได้ด้วย

8 แตะ บันทึก เพื่อบันทึกรายชื่อ

การสร้างกลุ่ม

- 1 แตะ รายชื่อ ในแท็บการติดต่อและแตะ กลุ่ม
- 2 แตะ สร้างกลุ่มใหม่ หรือแตะ  และเลือก สร้างกลุ่มใหม่
- 3 ป้อนชื่อสำหรับกลุ่มใหม่ของ คุณ คุณสามารถกำหนดเสียงเรียกเขาให้กับกลุ่มได้
- 4 แตะ บันทึก

หมายเหตุ: หากคุณลบกลุ่มรายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในรายชื่อ

รายชื่อ

การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับรายชื่อในแบบที่คุณต้องการได้

1 แตะรายชื่อ ในแท็บการติดต่อ และแตะ  แล้วยแตะ ตั้งค่า

2 จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

การตั้งค่ารายชื่อ - ปรับการตั้งค่าตำแหน่งรายชื่อ, การแสดงชื่อ และ ปุ่มคำสั่งด่วน

ส่งทุกรายชื่อผ่านบลูทูธ

- ส่งรายชื่อทั้งหมดไปยังอุปกรณ์อื่นโดยใช้บลูทูธ

สำรองข้อมูลรายชื่อ - สำรองข้อมูลรายชื่อของคุณในหน่วยความจำภายนอก ตัวเลือกนี้ต้องการหน่วยความจำภายนอก

เรียกคืนรายชื่อ - เรียกคืนรายชื่อของคุณจากหน่วยความจำภายนอก ตัวเลือกนี้ต้องการหน่วยความจำภายนอก


ลบรายชื่อ - ลบรายชื่อของคุณทั้งหมด เลือกระหว่าง ตัวเครื่อง และ SIM และแตะ ใช่ หากคุณต้องการลบรายชื่อของคุณทั้งหมด

ข้อความ

ข้อความ

โทรศัพท์ GT350i ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเครื่องเดียว และมีเมนูที่ใช้งานง่าย

การส่งข้อความ

- 1 **แตะ** ข้อความ ในแท็บ การติดต่อ และแตะ ข้อความใหม่ เพื่อเริ่มเขียนข้อความใหม่
- 2 **แตะ** แทรก เพื่อเพิ่มภาพ วิดีโอ เสียง รูปแบบอัตโนมัติและอื่นๆ
- 3 **แตะ** ผู้รับ ที่ด้านล่างของหน้าจอเพื่อป้อนผู้รับ จากนั้นป้อนหมายเลขหรือแตะ  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้
- 4 **แตะ** ส่ง เมื่อพร้อม



คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 2 วิธีดังนี้


ปุ่มกดแบบสัมผัส และ Qwerty

แตะเพื่อเปิดโหมด 

โหมดนี้จะใช้เฉพาะเมื่อคุณมีปุ่มกดเป็นวิธีป้อนข้อมูล

แตะ  เพื่อเลือกภาษาเขียน

แตะ  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ

ใช้ปุ่ม  (shift) เพื่อเปลี่ยนการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก

โหมด T9

โหมด T9 ใช้พจนานุกรมภายในเครื่องเพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับปุ่มที่แตะ ซึ่งจะคาดคะเนคำศัพท์ที่คุณป้อนและแนะนำคำศัพท์อื่นๆ

ตารางตัวอักษรไทย


ปุ่ม	อักษร	shift	มัลติ
Q	ก	ข	
W	เ	ก	ใ
E	า	ญ	
R	พ	ช	
T	ะ	ธ	
Y	ั	ค	
U	เ	"	
I	ร	ณ	
O	น	จ	
P	ย	ญ	

ข้อความ

ปุ่ม	อักษร	shift	มัลติ
@	บ	ข	ฐ ค ช
A	ฟ	ฤ	
S	ห	ช	
D	ก	ฎ	
F	ด	โ	
G	เ	ฌ	
H	ั	฽	
J	'	'	
K	า	ษ	
L	ส	ศ	ว ช ษ
~	ง	ล	
Z	พ	,	
X	ป	ุ	
C	แ	จ	
V	อ	ช	
B	^	฽	
N	฽	ั	
M	ท	ด	ฝ ฤ
.	ม	ฌ	ม ฝ


การตั้งค่าอีเมล

และ **อีเมล** ในแท็บ การติดต่อ
ถ้าไม่ได้ตั้งค่าอีเมลแอดเดสส์
ให้เริ่มวิชาการตั้งค่าอีเมลและดำเนินการ
จนเสร็จสิ้น

คุณสามารถตรวจสอบและแก้ไขการตั้งค่า
ได้โดยเลือก  นอกจากนี้ คุณยังสามารถ
ตรวจสอบการตั้งค่าเพิ่มเติมซึ่งมี
ข้อมูล โดยอัตโนมัติเมื่อคุณ
สร้างแอดเดสส์


การดึงข้อมูลอีเมลของคุณ

คุณสามารถตรวจสอบอีเมลใหม่ในแอด
เดสส์ของคุณแบบอัตโนมัติหรือด้วยตนเอง
ได้ ในการตรวจสอบด้วยตนเอง:

- 1 และ **อีเมล** ในแท็บการติดต่อ
- 2 และที่แอดเดสส์ที่คุณต้องการใช้
- 3 และกดเข้า
- 4 และ  และเลือกเรียกดูหรือการ
ซึ่งใครในช.

การส่งอีเมลโดยใช้แอดเดสส์ ใหม่

- 1 และ **อีเมลใหม่**
และอีเมลใหม่จะเปิดขึ้น
- 2 ป้อนข้อความ
- 3 และ **ส่ง** แล้วอีเมลจะถูกส่งออกไป
การเปลี่ยนการตั้งค่าอีเมล
- 4 และ **อีเมล** ในแท็บ การติดต่อ

5 และ  และเลือก การตั้งค่าอีเมล ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

แอดเดสส์อีเมล - ตั้งค่าแอดเดสส์อีเมล

อีเมลที่ต้องการ - เลือกแอดเดสส์อีเมลที่คุณต้องการใช้

ตอบกลับอีเมลได้ - เลือกเพื่อให้ส่งข้อความยืนยันการอ่านได้

ร้องขอการตอบกลับอีเมล - เลือกว่าต้องการขอความยืนยันการอ่านหรือไม่

รวมเวลาการเรียกดู - เลือกความถี่ที่จะให้โทรศัพท์ GT350i ตรวจสอบข้อความอีเมลใหม่

จำนวนที่รับ - เลือกจำนวนอีเมลที่ดึงข้อมูลในหนึ่งครั้ง

รวมข้อความในส่งต่อ & ตอบกลับ - เลือกเพื่อรวมข้อความต้นฉบับในการตอบกลับ

รวมสิ่งที่แนบ - เลือกเพื่อรวมสิ่งที่แนบต้นฉบับในการตอบกลับ

เรียกอัตโนมัติในการโรมมิ่ง - เลือกว่าจะดึงข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ (โรมมิ่ง) หรือไม่

แจ้งเตือนอีเมลใหม่ - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

ลายเซ็น - เลือกลายเซ็นสำหรับอีเมลและ MMS ที่คุณต้องการตั้งค่า

คุณสามารถลงทะเบียนมากกว่าหนึ่งลายเซ็นได้

ระดับความสำคัญ - เลือกระดับความสำคัญของข้อความอีเมล

ขนาดการส่งเมล - ตั้งค่าขนาดภาพที่ใหญ่ที่สุดที่สามารถส่งได้

ตัวนับอีเมล - ป้อนวันที่ที่ต้องการ คุณสามารถตรวจสอบอีเมลที่ส่งในระหว่างช่วงเวลานั้นได้

โพลเดอร์ข้อความ

ในเมนูการส่งข้อความมีห้าโพลเดอร์

สถานะ - ข้อความทั้งหมดที่คุณได้รับจะอยู่ในสถานะ

ร่าง - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่เขียนไว้ในโพลเดอร์นี้ได้

สถานะออก - โพลเดอร์นี้เป็นโพลเดอร์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

รายการที่ส่ง - ข้อความทั้งหมดที่คุณส่งจะอยู่ในโพลเดอร์นี้

โพลเดอร์ส่วนตัว - สร้างโพลเดอร์เพื่อจัดเก็บข้อความ

การเปลี่ยนการตั้งค่าข้อความตัวอักษร

แตะ **ข้อความ** ในแท็บการติดต่อ

และแตะ **ตั้งค่า** เลือก **ข้อความ**

ตัวอักษร คุณสามารถเปลี่ยนแปลง:

ข้อความ

ศูนย์ข้อความตัวอักษร - ป้อนรายละเอียดของศูนย์ข้อความ

รายงานผลการส่ง - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ชนิดข้อความ - แปลงข้อความตัวอักษรเป็น **ตัวอักษร**, **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

การเข้ารหัสตัวอักษร - เลือกวิธีเข้ารหัสตัวอักษรของคุณ ตัวเลือกนี้จะมีผลต่อขนาดของข้อความและค่าบริการส่งข้อความของคุณ

การส่งข้อความยาว - เลือกเพื่อส่งข้อความยาวเป็นหลาย **SMS** หรือ **MMS**

การเปลี่ยนการตั้งค่าข้อความ
มัลติมีเดีย

แตะ **ข้อความ** ในแท็บการติดต่อ เลื่อนและเลือก **ตั้งค่า** และ **ข้อความมัลติมีเดีย** คุณสามารถเปลี่ยนแปลง:

โหมดเรียกข้อมูล - เลือกระหว่าง **เครือข่ายหลัก** หรือ **เครือข่ายโรมมิ่ง** หากคุณเลือก **กำหนดเอง** คุณจะได้รับความเร็วข้อความแฉ่ง **MMS** และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

รายงานผลการส่ง - เลือกเพื่อให้ส่งหรือขอรายงานผลการส่ง

อ่านข้อความตอบรับ - เลือกเพื่อให้ส่งและหรือขอการตอบกลับ

ระดับความสำคัญ - เลือกระดับความสำคัญของ **MMS**

อายุข้อความ - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

ระยะเวลาสไลด์ - เลือกระยะเวลาที่จะให้สไลด์ปรากฏบนหน้าจอ

โหมดการสร้าง - เลือกโหมดข้อความ

เวลาส่ง - เลือกระยะเวลาในการรอก่อนส่งข้อความ

ศูนย์ MMS - เลือกหนึ่งศูนย์จากรายการหรือเพิ่มศูนย์ข้อความใหม่

การเปลี่ยนการตั้งค่าอื่นๆ
แตะ **ข้อความ** ในแท็บการติดต่อ และแตะ **ตั้งค่า**

ข้อความบริการ - เลือกเพื่อรับหรือบล็อกข้อความบริการ คุณยังสามารถกำหนดความปลอดภัยของข้อความได้โดยการสร้างรายการผู้ส่งที่เชื่อถือได้และเชื่อถือไม่ได้ในตัวเลือก

ความปลอดภัย

ตัวนับข้อความ - เลือกเพื่อตั้งค่าระยะเวลาในการนับข้อความ


บริการข้อมูล - เลือกว่าจะเปิด/ปิดข้อความจากระบบ และเลือกข้อมงสัญญาและภาษา

กล้องถ่ายรูป

ทำความรู้จักกับช่องมองภาพ

การรับแสง - ตัวเลือกนี้กำหนดความแตกต่างระหว่างแสงและความมืดในภาพ

ซูม - ซูมเข้าหรือซูมออก ฟังก์ชันนี้เปิดใช้ได้ขึ้นอยู่กับขนาดภาพที่คุณถ่าย

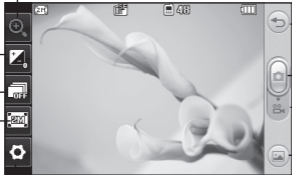

ย้อนกลับ

การถ่ายภาพ

โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

คลังภาพ - คุณสามารถเข้าดูรูปถ่ายที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป เพียงแตะและคลังภาพของคุณจะปรากฏบนหน้าจอ

ตั้งค่า - แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่าโปรดดูที่ **การใช้การตั้งค่าขั้นสูง**

ขนาด - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่ายภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ เลือกค่าพิกเซลจากตัวเลือกหาตัวเลข: 2M (1600x1200), 1M (1280x960), VGA (640x480), หน้าจอหลัก (WQVGA), QVGA (320x240)




เชื่อมต่อเนื่อง - ตัวเลือกนี้ทำให้คุณสามารถถ่ายภาพต่อเนื่องอย่างรวดเร็วได้ถึง 3/6/9 ข้อต่อโดยอัตโนมัติ

เคล็ดลับ!

คุณสามารถเปิดตัวเลือกได้โดยแตะที่หน้าจอ ซึ่งจะปิดอัตโนมัติในสองสามวินาที

กล้องถ่ายรูป







การถ่ายภาพด่วน

- 1 กดปุ่ม  ที่ด้านขวาของโทรศัพท์ค้างไว้
- 2 เมื่อกำลังจับโฟกัสที่วัตถุแล้ว ให้แตะ  ที่ตรงกลางดานขวาของหน้าจอเพื่อถ่ายภาพ คุณสามารถกดปุ่ม  ที่ด้านข้างโทรศัพท์ได้ด้วย

เคล็ดลับ! ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของภาพจะวิ่งที่ด้านล่างของหน้าจอ

-  แตะเพื่อส่งรูปภาพเป็น ข้อความ, อีเมล หรือผ่านทางบลูทูธ
-  แตะเพื่อตั้งค่าหน้าจอลูกภาพรายชื่อ ภาพเริ่มต้น ภาพปิดเครื่อง
-  แตะเพื่อแก้ไขภาพ
-  แตะเพื่อแก้ไขชื่อของภาพที่ถ่าย
-  แตะเพื่อลบภาพที่เพิ่งถ่ายและยืนยันการลบโดยแตะ **ใช่** ขอความ "ลบแล้ว" จะปรากฏขึ้น
-  แตะเพื่อเปิดคลังภาพ



การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับภาพที่คุณถ่าย โทนมืดมีตัวเลือกทั้งหมด 4 ตัวเลือก: **ปิด**, **ขาวดำ**, **เนกาทีฟ** หรือ **ซีเปีย**

ความสมดุลแสง - เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิดครีမ်**

โหมดกลางคืน - ใช้สำหรับการถ่ายภาพในที่มืด

ตั้งเวลาถ่ายภาพ - ตั้งเวลาทำให้คุณสามารถตั้งช่วงเวลาหน่วงหลังจากที่กดปุ่มถ่ายภาพ ให้เลือกจาก **3 วินาที**, **5 วินาที** หรือ **10 วินาที** ซึ่งเหมาะสำหรับการถ่ายภาพกลุ่มที่คุณต้องการเป็นส่วนหนึ่งในกลุ่มด้วย

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ซึ่งหมายความว่า您将สามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

โหมดมุมมอง - เลือกระหว่าง **เต็มหน้าจอ** หรือ **ภาพเต็ม** ในโหมดเต็มหน้าจอ อาจ crops ภาพให้พอดีกับหน้าจอ

เลือกที่จัดเก็บ - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่อง หรือที่หน่วยความจำภายนอก

แสดงภาพที่ถ่าย - เลือกเพื่อดูภาพด้วยตัวเลือกต่างๆ หลังจากถ่ายภาพ

ซ่อนไอคอน - เลือกซ่อนไอคอนดังกล่าวกล้องถ่ายภาพหรือโดยอัตโนมัติ

เสียงชัดเตอร์ - เลือกเสียงชัดเตอร์เสียงใดเสียงหนึ่งจากสามเสียง

หน้าจอกรีด - เลือกระหว่าง **ปิด**, **4 ส่วน** หรือ **9 ส่วน**

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายรูปทั้งหมด

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ









เคล็ดลับ!

คุณสามารถปิดตัวเลือก Shortcut เพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกใช้งานตัวเลือกใหม่ ให้แตะที่หน้าจออีกครั้ง

การถ่ายวิดีโอด้วย







- 1 กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์ค้างไว้เป็นเวลาสองสามวินาที

เคล็ดลับ! ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลือกไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

- 2 ให้ถือโทรศัพท์ในแนวนอนและหันไปทางสิ่งที่จะถ่าย
- 3 กดปุ่มกล้องถ่ายรูป  ที่โทรศัพท์หนึ่งครั้งเพื่อเริ่มการบันทึก หรือแตะที่จุดสีแดง 
- 4 Rec จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 5 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะ  แล้วเริ่มบันทึกต่อโดยเลือก 
- 6 แตะ  บนหน้าจอหรือกด  ซ้ำอีกครั้งเพื่อหยุดการบันทึก

หลังจากถ่ายวิดีโอ

ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงอยู่ที่ด้านล่างของหน้าจอ พร้อมกับมีไอคอน 7 ไอคอนเรียงอยู่ทางด้านซ้ายและขวา

-  แตะเพื่อเล่นวิดีโอ
-  แตะเพื่อส่งวิดีโอเป็น ข้อความ หรือ อีเมล หรือทาง บลูทูธ
-  แตะเพื่อแก้ไขวิดีโอ
-  แตะเพื่อแก้ไขชื่อของภาพที่เลือก
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะ  ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  แตะเพื่อถ่ายวิดีโออื่นต่อ
-  แตะเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้



กล้องวิดีโอ

การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ **ตั้งค่า** เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด

เอฟเฟกต์สี - เลือกโทนสีเพื่อใช้กับวิดีโอใหม่ **ปิด**, **ขาวดำ**, **เนกาทีฟ**, **ซีเปีย**

ความสมดุลแสง - ความสมดุลแสงจะช่วยให้มั่นใจได้ว่าแสงขาวที่ปรากฏในวิดีโอจะสวยงามจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจาก **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** หรือ **มิดครีม**

คุณภาพ - เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพวิดีโอก็จะมากขึ้นเท่านั้น แต่ขนาดไฟล์จะเพิ่มตามไปด้วย ดังนั้นคุณสามารถจัดเก็บวิดีโอในหน่วยความจำได้น้อยลง

ระยะเวลา - ตั้งระยะเวลาจำกัดสำหรับวิดีโอ เลือกว่าจะส่งวิดีโอเป็น MMS หรือไม่

เคล็ดลับ!

หากคุณเลือกระยะเวลาแบบ MMS การเลือกคุณภาพของภาพที่ต่ำลง จะช่วยให้คุณถ่ายภาพวิดีโอได้ยาวนานขึ้น

เลือกที่จัดเก็บ - เลือกว่าจะบันทึกวิดีโอไปยัง **ความจำเครื่อง** หรือไปยัง **ความจำการ์ด**




เสียง - เลือกว่าจะบันทึกวิดีโอพร้อมเสียงหรือไม่

ซ่อนไอคอน - เลือกซ่อนไอคอนตั้งค่ากล้องถ่ายรูปเองหรือโดยอัตโนมัติ

รีเซ็ตการตั้งค่า - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด





รูปภาพและวิดีโอ

การดูรูปภาพและวิดีโอ

- 1 แตะ คลังภาพ ในแท็บความบันเทิง หรือแตะ  บนหน้าจอตัวอย่าง ในกล่องถ่ายรูป คุณสามารถตรวจสอบภาพและวิดีโอของคุณได้
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหรือรูปภาพเพื่อเปิดทั้งไฟล์
- 4 ในการเล่นวิดีโอ แตะ  ในการหยุดเล่นชั่วคราว ให้แตะ 

เคล็ดลับ! กดปุ่มไปทางซ้ายหรือทางขวา เพื่อดูรูปภาพหรือวิดีโออื่น

การบันทึกภาพจากวิดีโอ







- 1 เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
- 2 แตะ  เพื่อหยุดภาพวิดีโอบนเฟรมที่คุณต้องการแปลงเป็นรูปภาพไว้ชั่วคราว แล้วแตะที่ด้านบนบนซ้ายของหน้าจอเพื่อเปิดเมนู 
- 3 จากเมนูตัวเลือก เลือก 
- 4 ภาพจะปรากฏบนหน้าจอพร้อมกับชื่อภาพ
- 5 แตะ  เพื่อกลับไปวิดีโอ
- 6 ภาพจะถูกบันทึกไว้ในโฟลเดอร์แฟ้มข้อมูล และจะปรากฏในคลังภาพ

คำเตือน:

บางฟังก์ชันอาจทำงานไม่ถูกต้องหากไม่ได้บันทึกไฟล์มัลติมีเดียด้วยโทรศัพท์



การดูรูปภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงรูปภาพทั้งหมดในคลังภาพของคุณพร้อมกันเป็นภาพสไลด์ วิดีโอไม่สามารถดูเป็นแบบภาพสไลด์ได้





- 1 แตะ  ใน คลังภาพ แล้วเลื่อนและเลือก ภาพสไลด์
- 2 ภาพสไลด์จะเริ่มต้นภายในภาพสไลด์มีตัวเลือกต่างๆ ดังนี้:
แตะ  เพื่อย้อนกลับ
 แตะเพื่อหยุดภาพสไลด์ชั่วคราวที่ภาพใดภาพหนึ่ง
 แตะอีกครั้งเพื่อเริ่มเล่นต่อ
 แตะเพื่อแสดงสไลด์สุ่ม
 แตะเพื่อเพิ่มหรือลดความเร็วของภาพสไลด์


รูปภาพและวิดีโอ


การตั้งค่ารูปภาพเป็นพื้นหลัง

- 1 **แตะ** คลังภาพ ในแท็บความบันเทิง
- 2 **แตะ** ที่รูปภาพที่คุณต้องการตั้งค่าเป็นพื้นหลัง
- 3 **แตะ** 
- 4 **คุณสามารถ**เปลี่ยนขนาดของรูปภาพได้ด้วย 
- 5 **เมื่อคุณพอใจ**กับรูปถ่ายนี้แล้ว ให้ **แตะ** ตั้งค่า
- 6 **เลือก**จากตัวเลือกที่คุณต้องการเปลี่ยน: ทั้งหมด, หน้าจอหลัก Widget, หน้าจอหลักโทรทัศน์


การแก้ไขรูปภาพ

- 1 **เปิด**รูปภาพที่คุณต้องการแก้ไขและ **แตะ**  เพื่อแสดงตัวเลือก
- 2 **แตะ** ที่ไอคอนเพื่อปรับรูปภาพของคุณ:
 -  เลื่อนนิ้วของคุณไปตามหน้าจอเพื่อเลือกพื้นที่
 -  วาดลายเส้นบนรูปภาพของคุณด้วยมือ เลือกความหนาของเส้นจาก 4 ตัวเลือก จากนั้นเลือกสีที่คุณต้องการใช้
 -  เพิ่มตัวหนังสือบนรูปภาพ

 **ตกแต่ง**รูปภาพของคุณด้วยสแตมป์ เลือกสแตมป์และสีต่างๆ แล้ว **แตะ**ภาพของคุณในจุดที่ต้องการวาง

 **ลบ**สิ่งที่คุณวาด คุณสามารถเลือกขนาดของยางลบได้ด้วย

 **แตะ** เพื่อกลับไปที่คุณคลังภาพ

 **บันทึก**การเปลี่ยนแปลงที่คุณทำไว้ในรูปภาพของคุณ เลือกเพื่อบันทึกการเปลี่ยนแปลงทับ **ไฟล์ต้นฉบับ** หรือเป็น **ไฟล์ใหม่** หากคุณเลือก **ไฟล์ใหม่** ให้อนชื่อไฟล์

 **เลิกทำ** เอฟเฟกต์ หรือการแก้ไขล่าสุดที่คุณทำไว้ในรูปภาพ

 **แตะ** เพื่อเปิดตัวเลือกฟิลเตอร์

 **คุณสามารถ**ปรับภาพที่เลือก



มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ คุณสามารถค้นหาไฟล์เหล่านี้ในเมนู **แฟ้มข้อมูล** ในแท็บความบันเทิง

รูปภาพ


ภาพ ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

การส่งรูปภาพ


- 1 **แตะ** **แฟ้มข้อมูล** ในแท็บความบันเทิง และเลือก **ภาพ** เลือกภาพที่ต้องการ
- 2 **แตะ** **ส่ง** และเลือกจากข้อความมัลติมีเดีย, อีเมล, บลูทูธ

การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นพื้นหลังและลือคหน้าจอหรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 **แตะ** **แฟ้มข้อมูล** ในแท็บความบันเทิง และเลือก **ภาพ** เลือกภาพที่ต้องการ และแตะ 
- 2 **แตะ** **ใช้เป็น** แล้วเลือกจาก:
 - ภาพหน้าจอลหลัก** - กำหนดพื้นหลังสำหรับหน้าจอหลัก
 - ภาพลือคหน้าจอ** - กำหนดพื้นหลังสำหรับภาพลือคหน้าจอ
 - ภาพรายชื่อ** - กำหนดภาพให้กับบุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา
 - ภาพเปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง
 - ภาพปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง


การพิมพ์ภาพ

- 1 **แตะ** **แฟ้มข้อมูล** ในแท็บความบันเทิง และเลือก **ภาพ** เลือกภาพที่ต้องการ และแตะ 
- 2 **แตะ** **พิมพ์ผ่านบลูทูธ**

มัลติมีเดีย

การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำใดหน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

- 1 แตะ **เพิ่มข้อมูล** ในแท็บความบันเทิง เลือก ภาพ และแตะ 
- 2 เลือก ย้าย หรือ คัดลอก
- 3 คุณสามารถเลือก/ไม่เลือกภาพได้ โดยแตะที่ภาพ เลือกภาพที่คุณต้องการย้ายหรือคัดลอกและแตะ ย้าย หรือ คัดลอก

เสียง

เสียง ประกอบด้วยรายการเสียงได้แก่ เสียงที่ดาวน์โหลด, เสียงเริ่มต้น และเสียงบันทึก จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเข้าได้

การใช้เสียง

- 1 แตะ **เพิ่มข้อมูล** ในแท็บความบันเทิง และเลือก เสียง
- 2 เลือกเสียงที่คุณที่ต้องการ ซึ่งจะเริ่มเล่น

3 แตะ  และเลือก ใช้เป็น

4 เลือกจาก เสียงเรียกเข้า, เสียงข้อความ, เปิดเครื่อง และ ปิดเครื่อง


วิดีโอ

วิดีโอ แสดงรายชื่อวิดีโอที่ดาวน์โหลด และวิดีโอที่คุณบันทึกไว้ในโทรศัพท์ของคุณ

การดูวิดีโอ

- 1 แตะ **เพิ่มข้อมูล** ในแท็บความบันเทิง และเลือกวิดีโอ
- 2 เลือกวิดีโอเพื่อเล่น

การส่งวิดีโอคลิก

- 1 เลือกวิดีโอ
- 2 แตะ  เพื่อส่งวิดีโอเป็น ข้อความ หรือ อีเมล หรือทาง บลูทูธ

การโอนไฟล์ไปที่โทรศัพท์

บลูทูธคือวิธีการที่ง่ายที่สุดในการโอนไฟล์จากอุปกรณ์ที่ใช่บลูทูธไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงค์ของคุณ

ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธที่โทรศัพท์และอุปกรณ์ที่ใช้บลูทูธ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้อุปกรณ์ที่ใช้บลูทูธเพื่อส่งไฟล์ผ่านบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะ ใช้
- 4 ไฟล์จะปรากฏใน รูปภาพของฉัน ตามค่าเริ่มต้น (แท็บที่สองในแท็บข้อมูล) คุณอาจมองข้ามไฟล์ถ้าไฟล์เดอแอม

อื่นๆ

อื่นๆ ประกอบด้วยรายการไฟล์ที่ไม่ใช่ภาพ เสียง วิดีโอ เอกสาร เกมหรือแอปพลิเคชัน

เพลง

โทรศัพท์ LG GT350i ของคุณมีเครื่องเล่นเพลงในตัว เพื่อให้คุณเล่นเพลงที่ชื่นชอบทั้งหมด ในการเข้าใช้เครื่องเล่นเพลง ให้แตะ **เพลง** ในแท็บความบันเทิง จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอแอมต่างๆ ดังนี้:

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

เล่นล่าสุด - เล่นเพลงที่คุณเล่นล่าสุด

ทุกแทร็ค - มีเพลงทั้งหมดที่คุณมีในโทรศัพท์ยกเว้นเพลงเริ่มต้นที่โหลดล่วงหน้า

ศิลปิน - เบลาส์ดูรายการเพลงที่เก็บไว้ตามศิลปิน

อัลบั้ม - เบลาส์ดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

แนวเพลง - เบลาส์ดูรายการเพลงที่เก็บไว้ตามแนวเพลง

รายการ - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

สับเปลี่ยนแทร็ค - เล่นแทร็คแบบสุ่มลำดับ





มัลติมีเดีย

การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์ คุณยังสามารถใช้ LG PC Suite ได้ ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อไฟล์พร้อมที่จะส่งแล้ว คุณยอมรับไฟล์ที่โทรศัพท์โดยแตะ ใช่
- 4 ไฟล์จะปรากฏขึ้นใน เพลง > ทุกแทร็ค

การเล่นเพลง

- 1 แตะ เพลง ในแท็บความบันเทิง
- 2 เลือกโพลีเดอไรต์โพลีเดอไรต์หนึ่งและเพลงที่คุณต้องการเล่น
- 3 แตะ  เพื่อหยุดเล่นเพลงชั่วคราว
- 4 แตะ  เพื่อข้ามไปที่เพลงถัดไป
- 5 แตะ  เพื่อย้อนไปที่เพลงก่อนหน้า
- 6 แตะ  เพื่อกลับไปเมนู เพลง คุณอาจแตะมากกว่าหนึ่งครั้งเพื่อกลับไปเมนู

การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณได้โดยเลือกเพลงจากโพลีเดอไรต์ รายการ

- 1 แตะ เพลง ในแท็บความบันเทิง
- 2 แตะ รายการ จากนั้น เพิ่มรายการเพลงใหม่ ป้อนชื่อรายการเพลง และแตะ บันทึก
- 3 โพลีเดอไรต์ ทุกแทร็ค จะแสดงทุกเพลงในโทรศัพท์ของคุณ แตะที่เพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง ซึ่งจะมีเครื่องหมายแสดงสำหรับรายการที่เลือก
- 4 แตะ เสร็จ

วิทยุ FM


โทรศัพท์ LG GT350i ของคุณมีคุณสมบัติวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง

การค้นหาสถานี


คุณสามารถใช้โทรศัพท์ค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณต้องต่อชุดหูฟังกับโทรศัพท์ก่อน เนื่องจากชุดหูฟังจะทำหน้าที่เป็นเสาอากาศวิทยุ

ในการปรับตั้งอัตโนมัติ:

- 1 เลื่อนแล้วแตะ วิทยุ FM ในแท็บความบันเทิง แล้วแตะ 
- 2 แตะ สแกนอัตโนมัติ ข้อความยืนยันจะปรากฏขึ้น เลือก ใช่ เครื่องจะค้นหาสถานีวิทยุที่มีอยู่โดยอัตโนมัติ และกำหนดไว้ที่ช่องสถานีในโทรศัพท์


หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ ◀ และ ▶ แสดงที่ตรงกลางหน้าจอ หากคุณกด ◀ และ ▶ ค้างไว้ จะเป็นการค้นหาสถานีโดยอัตโนมัติ

การรีเซ็ตสถานี

- 1 เลื่อนแล้วแตะ วิทยุ FM ในแท็บความบันเทิง แล้วแตะ 
- 2 เลือก รีเซ็ตสถานี เพื่อรีเซ็ตช่องสถานีปัจจุบัน หรือเลือก รีเซ็ตทุกสถานี เพื่อรีเซ็ตช่องสถานีทั้งหมด ช่องสถานีแต่ละช่องจะกลับไปความถี่เริ่มต้น 87.5Mhz

สมุดบันทึก

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะ สมุดบันทึก ในแท็บ ยูทิลิตี้ และเลือก ปฏิทิน
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะ  แล้วแตะ เพิ่มเหตุการณ์
- 4 แตะ ประเภท แล้วเลือกจาก นัดหมาย, วันครบรอบ หรือ วันเกิด
- 5 ใส่ หัวเรื่อง
- 6 ตรวจสอบและป้อนวันที่และเวลาที่อยากให้เหตุการณ์นั้นเริ่มต้น สำหรับการนัดหมาย และ วันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุด ในช่วงเวลาและวันที่ด้านล่างทั้งสองช่อง ป้อนสถานที่หากเป็นการนัดหมาย
- 7 ตั้งค่า เตือน และ ซ้ำ
- 8 เลือก บันทึก และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมาย กรอบสี่เหลี่ยมกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

การเพิ่มรายการลงในรายการงาน

- 1 แตะ สมุดบันทึก ในแท็บยูทิลิตี้
- 2 เลือก งาน และแตะ เพิ่มงาน
- 3 กำหนดวันที่ของงาน เพิ่มบันทึก และเลือกลำดับความสำคัญ: สูง, กลาง หรือ ต่ำ
- 4 บันทึกงานโดยเลือก บันทึก


การใช้ตัวค้นหาวันที่

- ตัวค้นหาวันที่ เป็นเครื่องมืออำนวยความสะดวกที่ช่วยให้คุณสามารถคำนวณวันหลังจากที่ผ่านมาแล้วหลายวันได้ ตัวอย่างเช่น 60 วันจากวันที่ 10.10.07 คือวันที่ 09.12.2007
- 1 แตะ สมุดบันทึก ในแท็บยูทิลิตี้
 - 2 เลือก ตัวค้นหาวันที่
 - 3 กำหนดวันที่ที่ต้องการในแท็บ จาก
 - 4 ตั้งค่าจำนวนวันในแท็บ หลัง
 - 5 วันที่เป้าหมาย จะปรากฏขึ้นด้านล่าง

การเพิ่มบันทึก

- 1 แตะ บันทึก ในแท็บ ยูทิลิตี้
- 2 แตะ เพิ่มบันทึก
- 3 ป้อน บันทึก ของคุณ แล้วแตะ บันทึก
- 4 บันทึก ของคุณจะปรากฏในหน้าจอ แอปพลิเคชัน บันทึก

การตั้งเวลาการปลุก

- 1 แตะ ตั้งปลุก ในแท็บ ยูทิลิตี้ การปลุก Widget จะปรากฏในรายการเป็น ค่าเริ่มต้น และไม่สามารถลบออกได้
- 2 แตะ เพิ่มการปลุก
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก ในกล่องฟิลด์ เวลา
- 4 เลือกวิธีที่คุณต้องการให้ปลุกซ้ำใน กล้อง ซ้ำ: ไม่ทำซ้ำ, ทุกวัน, จันทร์ ~ ศุกร์, จันทร์ ~ เสาร์, เสาร์ ~ อาทิตย์, ยกเว้นวันหยุด หรือ เลือกวัน ไอคอนจะบ่งชี้ วันที่คุณเลือก
- 5 เลือก รูปแบบเสียงปลุก เพื่อเลือก ประเภทการเตือนที่ต้องการ
- 6 เลือก เสียงกริ่งปลุก และเลือก เสียงจากโพลเดอร์ ในการฟังเสียง ให้แตะ 



7 เพิ่มบันทึกสำหรับการตั้งปลุกในกล่อง บันทึก

- 8 จากนั้นคุณสามารถกำหนดช่วงการ เลื่อนปลุกเป็น 5, 10, 20 หรือ 30 นาที, 1 ชั่วโมง หรือปิด
- 9 เมื่อคุณตั้งปลุกเสร็จแล้ว ให้แตะ บันทึก

หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ รวมถึง การปลุก Widget

เคล็ดลับ! เลื่อน เปิด/ปิด เพื่อตั้งปลุก

การเพิ่มเมืองในเวลาทั่วโลก

- 1 แตะ เวลาโลก ในแท็บยูทิลิตี้
- 2 แตะ  แล้วตามด้วย เมืองใหม่
- 3 เลื่อนลูกโลก แตะที่จุดที่คุณต้องการ และเลือกเมืองในแผนที่
- 4 หรือแตะ  และพิมพ์ชื่อเมืองที่คุณ ต้องการในกล่องฟิลด์ค้นหา

สมุดบันทึก

บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียง หรือไฟล์เสียงอื่นๆ





และ บันทึกเสียง ในแท็บยูทิลิตี้ และเลือก  และ **ตั้งค่า** เพื่อเปลี่ยนการตั้งค่า:

ระยะเวลา - กำหนดระยะเวลา ในการบันทึก เลือกจาก **ไม่จำกัด**, **MMS** หรือ **1 นาที**


คุณภาพ - เลือกคุณภาพเสียง เลือกจาก **ละเอียดมาก**, **ละเอียด** หรือ **ปกติ**

ความจำที่ใช้ - เลือกตำแหน่งที่จะ บันทึกไฟล์เสียง เลือกระหว่างหน่วย ความจำภายนอกและหน่วยความจำ เครื่อง

การบันทึกเสียงหรือเสียงพูด

- 1 และ  เพื่อเริ่มบันทึก
- 2 และ  เพื่อหยุดการบันทึก
- 3 และ  เพื่อจบการบันทึก
- 4 และ  เพื่อฟังรายการที่บันทึก


การใช้เครื่องคิดเลข

- 1 และ เครื่องมือ ในแท็บ ยูทิลิตี้
- 2 เลือก เครื่องคิดเลข
- 3 และที่ปุ่มกดโดยใช้ปุ่มกดเพื่อป้อน หมายเลข
- 4 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, ×, ÷) แล้วตามด้วย =
- 5 สำหรับการคำนวณแบบซับซ้อน ให้แตะ  แล้วเลือกกระหว่าง sin, cos, tan, log, ln, exp, sqrt, deg หรือ rad และอื่นๆ


PC ซิงค์

คุณสามารถซิงค์ไดรฟ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และยังสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสบายใจได้

การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้กด  และเลือก การเชื่อมต่อ ในแท็บการตั้งค่า
- 2 เลือก โหมดเชื่อมต่อ USB และแตะ PC Suite
- 3 เชื่อมต่อตัวเครื่องและ PC โดยใช้สาย USB และรอสักครู่ ขอความคำแนะนำการติดตั้งจะปรากฏขึ้น
- 4 ปฏิบัติตามคำแนะนำบนหน้าจอ เพื่อให้วีซาร์ด LG PC Suite Installer เสร็จสมบูรณ์
- 5 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว ไอคอน LG PC Suite จะปรากฏขึ้นบนเดสก์ทอป

การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 จากหน้าจอหลัก ให้กด  และเลือก การเชื่อมต่อ ในแท็บการตั้งค่า

- 2 เลือก โหมดการเชื่อมต่อ USB
- 3 แตะ PC Suite
- 4 เชื่อมต่อตัวเครื่องและ PC โดยใช้สาย USB และรอสักครู่ PC Suite จะทำงานโดยอัตโนมัติ

การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิก สำรองและเรียกคืน ที่ด้านล่างขวาของเครื่องมือ PC Suite ไอคอน และเลือก สำรอง หรือ เรียกคืน
- 3 ทำเครื่องหมายที่เนื้อหาที่คุณต้องการสำรองหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิกเพื่อเริ่มต้นสำรองหรือเริ่มต้นกู้คืน
- 4 ข้อมูลของคุณจะได้รับการสำรองหรือเรียกคืน

การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิก ไอคอนที่คุณต้องการจัดการ คุณสามารถดูไฟล์ทั้งหมดในโทรศัพท์ได้โดยเลือกแต่ละประเภท

PC ชิงค์

เคล็ดลับ! การดูเนื้อหาของโทรศัพท์บนคอมพิวเตอร์จะช่วยให้คุณสามารถจัดเรียงไฟล์ จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

การซิงโครไนซ์รายชื่อ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน รายชื่อ
- 3 คลิก ชิงค์รายชื่อ คอมพิวเตอร์จะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกในตัวเครื่อง
- 4 คลิก เมนู และเลือก เอ็กซ์พอร์ต ขณะนี้ คุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

การซิงโครไนซ์ข้อความ

- 1 เชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์ของคุณ
- 2 คลิกที่ไอคอน ข้อความ
- 3 ข้อความในคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

คำเตือน ห้ามตัดการเชื่อมต่อกับโทรศัพท์ในขณะที่โอนไฟล์

เว็บไซต์

เบราว์เซอร์ ช่วยให้ท่านเข้าถึงโลกของเกมส เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ได้ทุกที่และทุกอย่างที่คุณต้องการ

การเข้าใช้เว็บไซต์

- 1 แตะ เบราวเซอร์ ในแท็บยูทิลิตี้
- 2 ในการไปยังหน้าจอหลักของเบราว์เซอร์ ให้เลือก หน้าหลัก หรือเลือกไปยัง URL และพิมพ์ URL ตามด้วยเชื่อมต่อ

หมายเหตุ: ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บไซต์ที่เกี่ยวข้องของ RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบได้เสมอ ด้วยระบบอัตโนมัติ

ที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขึ้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อหาเนื้อหาใหม่และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

การใช้โทรศัพท์เป็นโมเด็ม

GT350i ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือบลูทูธก็ได้

การใช้สายเคเบิล USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ GT350i เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB ตามวิธีข้างต้นแล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิกตัวเลือก การเชื่อมต่ออินเทอร์เน็ตโดยใช้โทรศัพท์ และ เพิ่ม

เว็บไซต์

- 4 เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับ อินเทอร์เน็ต และบันทึกค่า
- 5 โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นใน หน้าจอคอมพิวเตอร์ เลือกลงและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GT350i ของคุณ

การใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่าบลูทูธ เป็น เปิด และ มองเห็นได้ ทั้ง คอมพิวเตอร์และโทรศัพท์ GT350i
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ โทรศัพท์ GT350i เพื่อให้ตรงระบบรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ วิศวกรรมการเชื่อมต่อ ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธ ที่ใช้งาน
- 4 คลิกตัวเลือก การเชื่อมต่ออินเทอร์เน็ตโดยใช้โทรศัพท์ และ เพิ่ม
- 5 เขียนโปรไฟล์ที่สามารถเชื่อมต่อกับ อินเทอร์เน็ต และบันทึกค่า
- 6 โปรไฟล์ที่คุณสร้างจะปรากฏขึ้นใน หน้าจอคอมพิวเตอร์ เลือกลงและคลิก Connect คอมพิวเตอร์จะเชื่อมต่อผ่านโทรศัพท์ GT350i ของคุณ

ตั้งค่า

การปรับแต่งรูปแบบเสียง ของคุณ

คุณสามารถเปลี่ยนรูปแบบเสียงบนหน้า
จอหลักของคุณได้อย่างรวดเร็ว

คุณสามารถกำหนดการตั้งค่าโปรไฟล์
แต่ละโปรไฟล์โดยใช้เมนูตั้งค่า

- 1 และ รูปแบบเสียง ในแท็บตั้งค่า
- 2 เลือกรูปแบบเสียงที่คุณต้องการ
แก้ไข
- 3 คุณจะสามารเปลี่ยนตัวเลือกเสียง
และการเตือนทั้งหมดที่มีอยู่ในราย
การได้ รวมทั้งการตั้งค่า
เสียงเรียกเข้า และ ระดับเสียง,
เสียงขอความ และอื่น ๆ

การเปลี่ยนการตั้งค่าหน้าจอ

และ ตั้งค่าจอ ในแท็บการตั้งค่า

การตั้งค่าหน้าจอ

พื้นหลัง - หน้าจอหลัก Widget หรือ
หน้าจอหลักโทรดวนหรือลือคหน้าจอ

เทมเพลตหน้าจอลูก **Widget** -
เลือกธีมสำหรับหน้าจอลูก Widget

Livesquare - และที่ปุ่ม แนะนำ
Livesquare เพื่อตรวจสอบ

การทำงาน คุณสามารถปรับการตั้ง
ค่าต่อไปนี้:

Liveplace - พื้นหลัง Livesquare

ไอคอน - Human หรือ Animal

รีเซ็ตทุกวัน - เปิด/ปิด

ประวัติ - การเลือก  จะลบประวัติ

Livesquare

เมนูหลัก - เลือกสไตล์ของเมนูหลัก

เลือกระหว่าง **Zigzag**, การเลื่อน

หรือ **Screen by screen**

ลือคหน้าจอ - เลือกสไตล์ของลือค
หน้าจอ

การโทร - เลือกสไตล์ของหน้าจอ

การโทรและปรับรูปแบบสำหรับหน้า
จอการโทรเท่านั้น

แบบอักษร - เลือกขนาดแบบ

อักษรและสไตล์

ความสว่าง - ปรับความสว่างของ
หน้าจอ

ข้อความต้อนรับ - เลือก **เปิด** หรือ

ปิด และป้อนข้อความต้อนรับใน

ฟิลด์ข้อความตัวอักษร

เปิดเครื่อง/ปิดเครื่อง - เลือกธีม

สำหรับหน้าจอการเปิดเครื่อง/

การปิดเครื่อง

การเปลี่ยนการตั้งค่าโทรศัพท์

ผลิตเพลนกับอิสระในการปรับ

การทำงานของโทรศัพท์ GT350i

ในแบบที่คุณต้องการได้

และ **ตั้งค่าโทรศัพท์** ในแท็บการตั้งค่า

แล้วเลือกจากรายการด้านล่าง

ตั้งค่า

ตั้งค่าโทรศัพท์

วันที่ & เวลา - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกอัปเดตเวลาอัตโนมัติหรือใช้ตัวเลือกการปรับเวลาตามฤดูกาล

ประหยัดพลังงาน - เลือกการตั้งค่าประหยัดพลังงานที่ตั้งมาจากโรงงาน เป็นเปิด/ปิด หรือเฉพาะกลางคืน

ภาษา - เปลี่ยนภาษาบนจอแสดงผล โทรศัพท์ GT350i ของคุณ

ล็อคปุ่มอัตโนมัติ - ล็อคปุ่มกดอัตโนมัติในหน้าจอหลัก

ระบบป้องกัน - ปรับการตั้งค่าระบบป้องกัน ไตแก รหัส PIN และล็อคเครื่อง

เปลี่ยนรหัส - เปลี่ยนรหัสป้องกัน, รหัส PIN, รหัส PIN2 หรือรหัส ATMT

แจ้งเครื่องหาย(ATMT): เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้โดยเจ้าของที่แท้จริง

ในการใช้งานคุณสมบัต ATMT คุณจะต้องตั้งค่าเพื่อเปิด ATMT และตั้งค่า ATMT สำหรับชื่อเจ้าของ และหมายเลขโทรศัพท์รอง รหัส ATMT เริ่มต้น คือ "000000"

ข้อมูลความจำ - ดูการใช้ตัวจัดการหน่วยความจำสำหรับข้อมูลเพิ่มเติม

รีเซ็ตการตั้งค่า - เรียกคืนการตั้งค่าทั้งหมดให้กลับเป็นค่าที่ตั้งจากโรงงาน

ข้อมูลเครื่อง - คุณสามารถอัปเดตซอฟต์แวร์ (รายละเอียดอยู่ในอัปเดตซอฟต์แวร์ทางเว็บ)

การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันทีในการเปลี่ยนการตั้งค่าใดๆ ให้ใช้เมนูนี้: **แตะ การเชื่อมต่อ** ในแท็บ **ตั้งค่า**

การตั้งค่าเครือข่าย

เลือกเครือข่าย - หากคุณเลือกอัตโนมัติ โทรศัพท์ GT350i จะค้นหาเครือข่ายและลงทะเบียนเครื่องในเครือข่ายโดยอัตโนมัติ ขอแนะนำให้ใช้เพื่อบริการและคุณภาพที่ดีที่สุด ถ้าคุณเลือก **กำหนดเอง** เครือข่ายทั้งหมดที่มีอยู่ในขณะนั้นจะปรากฏขึ้น และคุณสามารถเลือกลงทะเบียนในเครือข่ายใดเครือข่ายหนึ่งได้

รายการที่ต้องการ - คุณสามารถเพิ่มเครือข่ายที่ต้องการเชื่อมต่อได้ ถ้าเครือข่ายกำลังค้นหาโดยอัตโนมัติ

ให้เลือกหนึ่งเครือข่ายจากรายชื่อ
เครือข่าย หากไม่มี ให้เพิ่มเครือข่าย
ใหม่ที่กำหนดเอง

โปรไฟล์อินเทอร์เน็ต - เมนูนี้แสดง
โปรไฟล์อินเทอร์เน็ต คุณไม่สามารถลบ
หรือแก้ไขการกำหนดค่าเริ่มต้นที่ขึ้นอยู่กับ
แต่ละประเทศ

จุดเชื่อมต่อ - ผู้ให้บริการระบบได้
บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุด
เชื่อมต่อใหม่โดยใช้เมนูนี้ได้

การเชื่อมต่อข้อมูลแพ็คเกจ - เลือก
ว่าจะให้โทรศัพท์ของคุณเชื่อมต่อกับ
เครือข่ายข้อมูลแพ็คเกจเมื่อใด

โหมดการเชื่อมต่อ USB - เลือก
เชื่อมต่อ PC Sync จากตัวเลือก
และซิงโครไนซ์โทรศัพท์ GT350i
โดยใช้ซอฟต์แวร์ LG PC Suite เพื่อ
คัดลอกไฟล์จากโทรศัพท์ ดูที่ **PC ซิงค์**
สำหรับข้อมูลเพิ่มเติมเกี่ยวกับ
การซิงโครไนซ์

การใช้ตัวจัดการหน่วยความจำ

โทรศัพท์ GT350i มีหน่วยความจำให้
เลือกสามแบบ: โทรศัพท์, ซิมการ์ด
และหน่วยความจำภายนอก

คุณสามารถใช้ตัวจัดการหน่วยความจำ
เพื่อดูว่าในแต่ละหน่วยความจำใช้หน่วย
ความจำไปเท่าใด และดูว่ามีพื้นที่ว่าง
เหลือเท่าใด

และ **ตั้งค่าโทรศัพท์** ในแท็บตั้งค่า
จากนั้น **ข้อมูลความจำ**

ความจำเครื่อง - ดูหน่วยความจำที่มี
ในโทรศัพท์ GT350i สำหรับรูปภาพ,
เสียง, วิดีโอ, MMS, อีเมล,
แอปพลิเคชัน Java และอื่นๆ

ความจำสำรอง - ดูหน่วยความจำ
ที่มีในเครื่องสำหรับ SMS, รายชื่อ,
ปฏิทิน, รายการงาน, บันทึก,
เดือน, ข้อมูลการโทร, บุคมากร
และรายการเบ็ดเตล็ดอื่นๆ

ความจำซิม - ดูหน่วยความจำที่มีใน
ซิมการ์ด

ความจำการ์ด - ดูหน่วยความจำที่มีใน
การ์ดหน่วยความจำภายนอก (คุณต้อง
ซื้อการ์ดหน่วยความจำแยกต่างหาก)

ตั้งค่าที่เก็บหลัก - เลือกตำแหน่งที่คุณ
ต้องการบันทึกรายการระหว่างความจำ
เครื่อง และหน่วยความจำภายนอก

การส่งและการรับไฟล์โดยใช้ บลูทูธ

ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไป
จะเป็นไฟล์ภาพถ่าย, วิดีโอ
หรือเพลง
- 2 เลือก ส่ง ,เลือก บลูทูธ
- 3 หากคุณจับคู่อุปกรณ์ บลูทูธ
แล้ว โทรศัพท์ GT350i

ตั้งค่า

จะไม่ค้นหาอุปกรณ์ บลูทูธอื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ GT350i จะค้นหาอุปกรณ์อื่นๆ ที่ใช้ บลูทูธภายในรัศมี

- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป
- 5 ไฟล์ของคุณจะถูกส่งออกไป

เคล็ดลับ! ตรวจสอบแถบแสดง
ความคืบหน้าเพื่อให้แน่ใจว่าไฟล์
ของคุณถูกส่งแล้ว

ในการรับไฟล์:

- 1 ในการรับไฟล์
คุณต้องตั้งค่าบลูทูธเป็น เปิด และมองเห็นได้ โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับ การเปลี่ยนการตั้งค่าบลูทูธที่ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และ ใช่ เพื่อรับไฟล์
- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว สำหรับไฟล์ภาพ คุณสามารถเลือก ดู ไฟล์หรือ ใช่เป็นพื้นหลังโดยทั่วไป ไฟล์จะถูกบันทึกในโฟลเดอร์ที่เหมาะสมใน แฟ้มข้อมูล

การเปลี่ยนการตั้งค่าบลูทูธ:

และ บลูทูธ ในแท็บ ตั้งค่า และเลือก  และเลือก ตั้งค่า

ทำการเปลี่ยนแปลง:

การมองเห็นเครื่อง - เลือกเป็นมองเห็นได้, ซ่อน หรือ แสดง 1 นาที

ชื่อเครื่องของฉัน - ป้อนชื่อโทรศัพท์ GT350i ของคุณ

บริการที่รองรับ - เลือกวิธีใช้บลูทูธร่วมกับบริการอื่นๆ

โหมดximรี่มท - เพื่อเปิดหรือปิด

แอดเดรสส่วนตัว - แสดงแอดเดรสบลูทูธ

การจับคู่กับอุปกรณ์บลูทูธอื่น

ในการจับคู่โทรศัพท์ GT350i กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น เปิด และมองเห็นได้ คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู ตั้งค่า
- 2 และ ค้นหา
- 3 โทรศัพท์ GT350i จะค้นหาอุปกรณ์เมื่อการค้นหาเสร็จสมบูรณ์ รีเฟรชจะปรากฏขึ้นบนหน้าจอ

4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้แตะตกลง

5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน

6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

การใช้ชุดหูฟังบลูทูธ

1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น เปิด และมองเห็นได้

2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ

3 แตะ ถ้ามก่อนทำการเชื่อมต่อ หรือให้เชื่อมต่อเสมอ และแตะ ใช้ เพื่อเชื่อมต่อทันที โทรศัพท์ GT350i จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

Wi-Fi

ตัวจัดการไร้สายช่วยให้คุณจัดการการเชื่อมต่ออินเทอร์เน็ตผ่านทาง Wi-Fi (Wireless LAN) ในเครื่องของคุณ โดยให้โทรศัพท์เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเข้าใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและรัศมีครอบคลุมกว้างกว่าเทคโนโลยีไร้สายของ

บลูทูธ และสามารถใช้ส่งอีเมลและการเบราส์อินเทอร์เน็ตอย่างรวดเร็ว

หมายเหตุ: โทรศัพท์ GT350i สนับสนุนการเข้ารหัส WEP และ WPA-PSK/2 แต่ไม่สนับสนุนการเข้ารหัส EAP หรือ WPS หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป๊อปอัป

หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัปนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

การอัปเดตซอฟต์แวร์

การอัปเดตซอฟต์แวร์

โปรแกรมอัปเดตซอฟต์แวร์ โทรศัพท์มือถือ LG

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้งและการใช้โปรแกรมนี้ โปรดไปที่ <http://update.lgmobile.com> คุณสมบัตินี้จะช่วยให้คุณอัปเดตซอฟต์แวร์ของคุณเป็นเวอร์ชันล่าสุดอย่างรวดเร็วและสะดวกผ่านอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการของเรา เนื่องจากโปรแกรมอัปเดตซอฟต์แวร์โทรศัพท์มือถือ ต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายการสื่อสารข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดต อาจทำให้โทรศัพท์ชำรุดเสียหายได้ เนื่องจากผู้ผลิตจะไม่รับผิดชอบต่อการสูญเสียข้อมูลระหว่างกระบวนการอัปเดต คุณควรจงดข้อมูลสำคัญเก็บไว้ก่อน

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ GT350i

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล



แบตเตอรี่



ชุดหูฟังสเตอริโอ



หมายเหตุ:




- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามขออนุญาตนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเรา
ในกรณีที่มีข้อสอบถามเพิ่มเติม

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ),
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 /GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment	
Model Name	GT350i	
Trade Name	LG	
CE0168 		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1/ EN 301 489-07 V1.3.1/ EN 301 489-17 V1.3.2 EN 60950-1 : 2001 EN 50360: 2001/ EN 62209-1: 2006 EN 300 328 V1.7.1 EN 301 511 V9.0.2		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Seung Hyoun, J / Director	20.Apr.2010
LG Electronics Logistics and Services B.V, Veluwezoom 15, 1327 AE Almere, The Netherlands	 Signature of representative	

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบুদ্ধโล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind disability person due to touch screen keypad.



GT350i User Guide

Congratulations on your purchase of the advanced and compact GT350i phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use	6	Using call barring.....	25
Getting to know your phone	11	Fixed dial number	25
Open view	12	Excuse message.....	26
Installing the SIM and battery	14	Call costs	26
Charging your phone	15	Call durations	26
Memory card	16	Data volume	26
Using your touch screen	17	Changing the common call setting.....	26
Touch screen tips	17	Contacts	27
Control the touch screen	17	Searching for a contact.....	27
Your home screen	18	Adding a new contact.....	27
The quick keys.....	19	Creating a group	27
The status bar	20	Changing your contact settings.....	28
Changing your Status from the status bar.....	21	Messaging	29
Using the Multi-tasking function.....	21	Sending a message	29
Calls	22	Entering text.....	29
Making a call.....	22	T9 mode	29
Making a call from your contacts...	22	Setting up your email.....	30
Answering and rejecting a call.....	22	Retrieving your emails	30
In-call options	23	Sending an email using your new account.....	30
Speed dialing	24	Changing your email settings.....	30
Making a second call	24	Message folders.....	31
Using call divert.....	25	Changing your text message settings	31
Call waiting.....	25	Changing your multimedia message settings	32

Contents

Changing your other settings	32	Videos	42
Camera.....	33	Watching a video	42
Getting to know the viewfinder	33	Sending a video clip	42
Taking a quick photo	34	Transferring a file to your phone....	42
After taking a photo.....	34	Others	43
Using the advanced settings	35	Music	43
Video camera.....	36	Transferring music onto your	
Getting to know the viewfinder	36	phone.....	44
Making a quick video	37	Playing a song.....	44
After making a video	37	Creating a playlist	44
Using the advanced settings	38	FM Radio	45
Your photos and videos.....	39	Searching for stations.....	45
Viewing your photos and videos ...	39	Resetting channels.....	45
Capturing an image from a video..	39	Organiser.....	46
Viewing your photos as a slide		Adding an event to your calendar..	46
show	39	Adding an item to task list.....	46
Setting a photo as wallpaper.....	40	Using date finder	46
Editing your photos	40	Adding a memo.....	47
Multimedia.....	41	Setting your alarm.....	47
Pictures	41	Adding a city to your World clock..	47
Sending a photo.....	41	Voice recorder	48
Using an image	41	Recording a sound or voice.....	48
Printing an image	41	Using your calculator.....	48
Moving or copying an image	42	PC Sync	49
Sounds	42	Installing LG PC Suite on your	
Using a sound	42	computer	49
		Connecting your phone and PC....	49

Backing up and restoring the information on your phone	49
Viewing phone files on your PC.....	49
Synchronising your contacts	50
Synchronising the messages	50
The web	51
Accessing the web	51
Using RSS reader	51
Using your phone as a modem.....	51
Settings	53
Personalising your profiles	53
Changing your screen settings	53
Changing your phone settings	53
Changing your connectivity settings.....	54
Using memory manager	55
Sending and receiving your files using Bluetooth.....	55
Changing your Bluetooth settings:.....	56
Pairing with another Bluetooth device.....	56
Using a Bluetooth headset.....	57
Wi-Fi	57
Software Upgrade	58
Accessories.....	59
Technical data	60

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GT350i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.540 W/kg (10 g) and when worn on the body is 0.568 W/kg(10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

Guidelines for safe and efficient use

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

Guidelines for safe and efficient use

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone



Handsfree or Stereo earphone connector

Power/Lock key

- Long press for power on/off.
- Short press to turn on/off the screen.




End key

Call key

- Dials a phone number and answers incoming calls.

Multitasking key

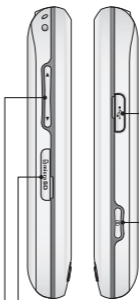

Charger, USB cable

Camera key

Micro SD memory card socket

Side keys

- When the screen is at the Home screen:
Ring tone and key tone volume.
- During a call:
Earpiece volume.

Open view



Change the text input mode
(capital/ small)

SMS

Alpha numeric keys

Symbol key

- Enters symbolic character

Space key

Use to enter a space when editing.

Social Network

Internet Full Browsing

Push E-mail


Instant Messenger

Enter key

Clear key

- Clears a character each time it is pressed. Hold the key down to clear all input.

⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

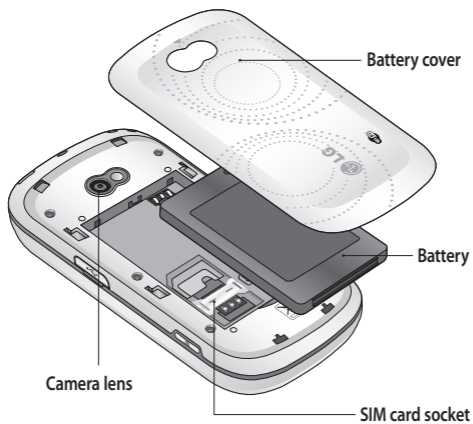

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.



2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently outwards.

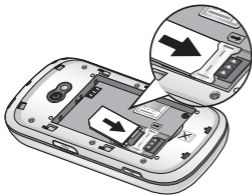


⚠ WARNING: Do not use your fingernail to remove the battery.

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the battery

Insert the top of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery until down it clicks into place.

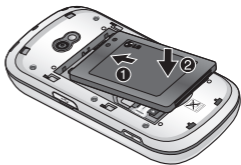

Charging your phone

Remove the charger socket cover on the side of your GT350i. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GT350i must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.


- 1 Open the memory card slot cover on the left-hand edge of the phone.



- 2 Slide the memory card into the slot until it clicks into place. Make sure the gold contact area is facing downwards.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

- 1 From the Home screen select , then **Phone settings** in **SETTINGS** tab.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set. Your card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files would have been deleted.

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your GT350i is not in use, it will return to the lock screen.

Control the touch screen


The controls on the GT350i touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

Scrolling


Drag from side to side to scroll. On some screens, such as the Recent History, you can also scroll up or down.

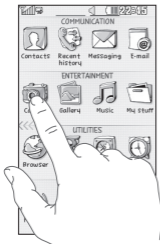


Your home screen

You can drag and click what you need right away in all home screen types.

Active

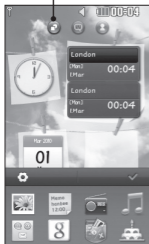

Widget home screen

When you touch  on the bottom right of the screen, the mobile widget panel appears. When you select widget and dragging it onto the screen, the

widget will appear on the home screen in the spot where it was dropped.

Active




Speed dial home screen

You can call, send a message or edit the contact directly in this home screen. When you touch , the speed dial list appears, and you can drag your speed dials

onto the screen.

Active

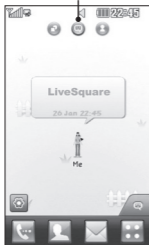

Livesquare home screen

On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call,

messaging or contacts function, select an avatar and choose the **Quick key** icon you want to use.

TIP! The User Interface is based on three types of Homescreen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad to make a call.



Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.















Touch to open the full **Top menu** which is divided into four categories.















Your home screen

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.


Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	EDGE in use
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	Unread Emails in mail inbox


Icon	Description
	Send failed
	An alarm is set
	Customised Profile in use (The number in the icon will vary)
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Calls are diverted
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enabled for use


Changing your Status from the status bar

Touch the centre of the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3s and Bluetooth status. Here you can set the Profile type, play/pause MP3s and activate/deactivate Bluetooth.

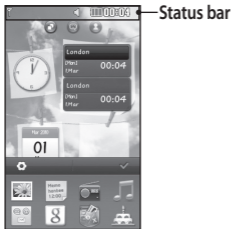



Using the Multi-tasking function


Short press the multi-tasking hard key  to open the Multitasking menu. From the Running App. tab you can view all the applications that are running and access them. You can launch and edit your Favourite applications from the Favourite Apps. tab.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Calls



Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, press the End key.

TIP! To enter + for making an international call, press and hold .


TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 You can also touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.


Answering and rejecting a call

When your phone rings, touch the Send key to answer the call.

To mute the ringing, unlock the phone if it is locked, then tap .

This is useful if you forgot to change your profile to Silent for a meeting. Touch **Reject** to reject an incoming call.

In-call options

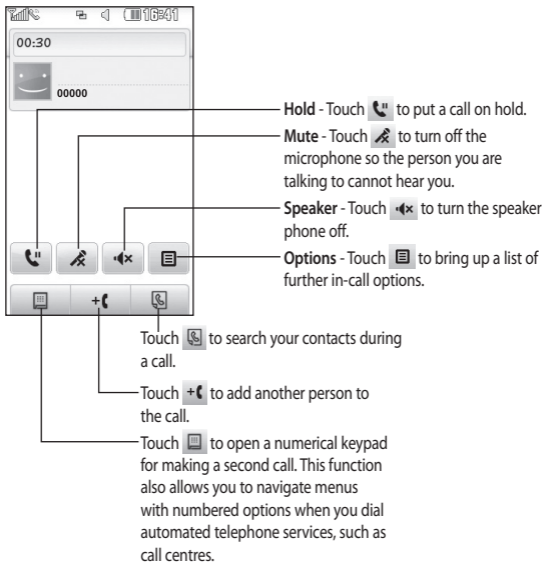


TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.





Calls

Speed dialing

You can assign a frequently-called contact to a speed dial number.

- 1 Select **Contacts** in the **COMMUNICATION** tab and touch  and select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your **Contacts** will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the Name field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or press the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Using call divert

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no answer or when you cannot be contacted.
- 4 Enter the number you want to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, select **Deactivate all** from the **Call divert** menu.

Call waiting

Be alerted when you have a call waiting. (Depends on your network provider.)

Using call barring

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Touch **Call barring**.

- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
 - Deactivate all**
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial numbers** from the **Call settings** options to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Fixed dial number

Choose a list of numbers that can be called from your phone. You'll need your PUK2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls

Excuse message

Before you reject an incoming call, you can use “**Excuse messages**” to send a message to explain why you do not receive an incoming call.

Call costs

View the charges applied to your dialled numbers (this service is network-dependent and some operators cannot support it).

Call durations

View the duration of all your dialled or received calls or both.

Data volume

View the amount in kilobytes of all received or sent data or both.

Changing the common call setting

- 1 Touch **Call settings** in the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or

groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.


Save new number - Select **Yes** to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the Name field.


Or touch  from the home screen.

Adding a new contact

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch **Create new contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to six different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to six groups per contact. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo** and **Livecon**.
- 8 Touch **Save** to save the contact.

Creating a group

- 1 Touch **Contacts** in the **COMMUNICATION** tab. And touch **Groups**.
- 2 Touch **Create new group** or touch  and select **Create new group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your **Contacts**.

Contacts

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

- 1 Touch **Contacts** in the **COMMUNICATION** tab and touch , then touch **Settings**.
- 2 From here, you can adjust the following settings:
 - Contact list settings** - Adjust the **Contacts location**, **Name display** and **Quick command key** settings.
 - Send all contacts via Bluetooth** - Send all of your contacts to another device using Bluetooth.
 - Backup contacts** - Performs a backup your contacts on to the external memory. This option requires external memory.
 - Restore contacts** - Restores your contacts from the external memory. This option requires external memory.


Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.


Messaging

Messaging

Your GT350i combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messaging** in the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send when ready**.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


Entering text


There are two ways to enter text:

Touch keypad and Qwerty.

Touch to turn on  mode.

This mode is only used when you have Keypad as the input method.

Touch  to choose the writing language.

Touch  to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

T9 mode


The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Messaging

Setting up your email


Touch **E-mail** in the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch the account you want to use.
- 3 Touch **Inbox**.
- 4 Touch  and select **Retrieve** or **Synchronisation**.

Sending an email using your new account

- 1 Touch **New e-mail** and a new email will open.
- 2 Complete the message.
- 3 Touch **Send** and your email will be sent.

Changing your email settings

- 1 Touch **E-mail** in the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts - Set up the Email account.

Preferred e-mail - Select the email account you want to use.

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GT350i checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Choose the signature for E-mail and MMS you want to set. You can register one or more of signatures.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

There are five folders in Messaging menu.

Inbox - All the messages you receive are placed into your inbox.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Changing your text message settings

Touch **Messaging** in the **COMMUNICATION** tab and touch **Settings**. Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or **MMS**.

Messaging

Changing your multimedia message settings

Touch **Messaging** in the COMMUNICATION tab. Scroll and choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read reply - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Creation mode - Choose your message mode.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose one from the list or add a new message centre.

Changing your other settings

Touch **Messaging** in the COMMUNICATION tab. And touch **Settings**.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn Cell broadcast on/off and select your channels and languages.

Camera

Getting to know the viewfinder

Exposure - This defines the difference between light and dark in an image.

Zoom - zoom in or zoom out. This function is enabled depending on the picture size you take.



Back

Taking a photo

Video mode - Slide down this icon to switch to video mode.

Gallery - This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.




Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the five numerical options: 2M (1600x1200), 1M (1280x960), VGA (640x480), Home screen (WQVGA), QVGA (320x240).

Continuous shot - This enables you to take 3/6/9 shots automatically in very quick succession.

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Camera




Taking a quick photo


- 1 Long press the  key on the right side of the phone.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo. You can also press the  key on the side of the phone firmly.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.


After taking a photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen.

-  Touch to send the photo as a message, email or via Bluetooth.
-  Touch to set a Home screen, Contacts image, Startup image or Shutdown image.
-  Touch to edit the photo.
-  Touch to edit the name of the captured picture.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The "Deleted" message appears.
-  Touch to open your gallery.

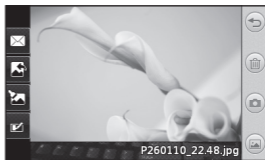

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Color Effect - Choose a color tone to apply to the photo you're taking. There are four color tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

White balance - Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Night mode - Useful to use in dark places.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View mode - Choose between Full screen or Full image. In Full screen, the image may be cropped to fit the screen.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose to view the picture with options after taking a photo.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.


Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from **Off**, **Simple cross** or **Trisection**.

Reset settings - Reset all the camera settings.

Video camera

Getting to know the viewfinder

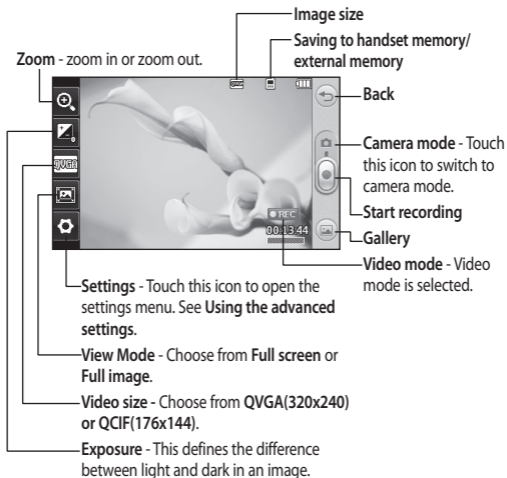







TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Making a quick video








- 1 Long press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key  on the phone once to start recording. Or touch the red dot .
- 4 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the  a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with seven icons down the left and right sides.

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth**.
-  Touch to edit the video.
-  Touch to edit the name of the selected picture.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.



Video camera

Using the advanced settings

From the viewfinder, touch **Settings** to open all the advanced settings options.

Color Effect - Choose a color tone to use on your new video. **Off, Black & White, Negative, Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.




Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Reset settings - Reset all the video camera settings.




Your photos and videos


Viewing your photos and videos


- 1 Touch **Gallery** in the ENTERTAINMENT tab. Or Touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

Capturing an image from a video


- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 From the options menu select .
- 4 The image will appear on the screen, with its image name.

- 5 Touch  to return to the video.
- 6 The image will be saved in your **My stuff** folder and appear in the gallery.






 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos cannot be viewed as a slideshow.



- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slideshow will begin.

There are options within slideshows:


- Touch  to go back.
-  Touch to pause the slideshow on a particular photo.
-  Touch again to resume playback.
-  Touch to show random.
-  Touch to increase or decrease the speed of the slideshow.


Your photos and videos


Setting a photo as wallpaper


- 1 Touch **Gallery** in the ENTERTAINMENT tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch .
- 4 You can change the size of the picture with .
- 5 When you are happy with the picture touch **Set**.
- 6 Choose from the options what you want to change: **All**, **Widget homescreen**, **Speed dial homescreen**.


Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:

 Move your finger across the screen to select the area.


 Draw something on your photo freehand. Select the line thickness from the four options, then the color you want to use.


 Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colors and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.

 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.

 Undo the last effect or edit you made to the photo.

 Touch to open the Filter options.

 You can adjust the selected photo.



Multimedia

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. You can find these files in the menu **My stuff** in the ENTERTAINMENT tab.

Pictures

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Sending a photo


- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message, Email, Bluetooth**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.
 - Start up image** - Set an image to appear when you switch the phone on.
 - Shut down image** - Set an image to appear when you switch the phone off.


Printing an image

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Images**. Select the picture you want. And touch .
- 2 Touch **Print via Bluetooth**.

Multimedia

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.


- 1 Touch **My stuff** in the ENTERTAINMENT tab, select **Images** and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Move** or **Copy**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Sounds**.
- 2 Select a sound you want. It will begin to play.

- 3 Touch  and select **Use as**.

- 4 Choose from **Ringtone**, **Message tone**, **Start-up** and **Shut down**.


Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch **My stuff** in the ENTERTAINMENT tab and select **Videos**.
- 2 Select a video to play.

Sending a video clip

- 1 Select a video.
- 2 Touch  to send the video as a **Message** or **Email** or by **Bluetooth**.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your Bluetooth enabled device to your phone. You can also use the LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and Bluetooth enabled device have Bluetooth switched on and are visible to one another.
- 2 Use your Bluetooth enabled device to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **My folder** as a default (the second tab in **My stuff**). You may overlook the file if the folder is full.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications.

Music

Your LG GT350i has a built-in music player so you can play all your favourite tracks. To access the music player, touch **Music** in the ENTERTAINMENT tab. From here, you can access a number of folders:

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Multimedia


Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 Touch **Music** in the ENTERTAINMENT tab.
- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick mark will be shown for the selected items.
- 4 Touch **Done**.

FM Radio


Your LG GT350i has an FM radio feature so you can tune into your favourite stations to listen on the move.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket.

Searching for stations


You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.


NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Resetting channels

- 1 Scroll and touch **FM radio** in the ENTERTAINMENT tab, then .
- 2 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 Touch **Organiser** in the UTILITIES tab and select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.
- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to task list

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Tasks** and touch **Add tasks**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder


Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

- 1 Touch **Organiser** in the UTILITIES tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 Touch **Memo** in the UTILITIES tab.
- 2 Touch **Add memo**.
- 3 Type your **memo**, then touch **Save**.
- 4 Your **memo** will then appear on the screen in the **Memo** application.

Setting your alarm



- 1 Touch **Alarms** in the UTILITIES tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **Add alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Select day**. The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds touch the .

- 7 Add a memo for the alarm in the **Memo** box.
- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.


Adding a city to your World clock

- 1 Touch **World clock** in the UTILITIES tab.
- 2 Touch the , followed by **New city**.
- 3 Touch the  and type the name of the city you require in the search field box. To make it easier, Scroll the globe, touch the area you want and choose the city on the map.

Organiser

Voice recorder

Use your voice recorder to record voice or other audio files.





Touch **Voice recorder** in the UTILITIES tab and select , then **Settings** to change Settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 min.**


Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between External memory and Handset memory.

Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.


Using your calculator

- 1 Touch **Tools** in the UTILITIES tab.
- 2 Select **Calculator**.
- 3 Touch the numeric keys using the keypad to input numbers.
- 4 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.


PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing LG PC Suite on your computer

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC Suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 From the Home screen press  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC Suite**.

- 4 Connect the handset and PC via USB cable and wait for a while. PC Suite runs automatically.

Backing up and restoring the information on your phone

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Back & Restore** at the right-bottom of **PC Suite tool**. icon, and select **Backup** or **Restore**.
- 3 Mark the content you would like to backup or restore. Select the location you would like to backup information to, or restore information from. Click to start a backup or began to recover.
- 4 Your information will be backed up or restored.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the icons which you want to manage . You can view all the files in your phone by selecting each category.

PC Sync

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove content that you no longer need.

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your handset.
- 4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All your PC and phone messages will be displayed in folders on the screen.
- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

WARNING Do not disconnect your phone during the transfer.

The web

Browser gives you a fast, full color world of games, music, news, sport, entertainment and lots more, straight to your mobile phone. Wherever you are and whatever you like.

Accessing the web

- 1 Touch the **Browser** in UTILITIES tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web

sites automatically. It is much easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Using your phone as a modem

Your GT350i can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GT350i and your PC using the USB cable as outlined previously and launch the LG PC Suite software.
- 3 Click on option Internet Connection using your phone then Add.

The web

- 4 Write the Profile that can connect to the Internet and save the values.
- 5 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350i.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GT350i.
- 2 Pair your PC and GT350i so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click on option Internet Connection using your phone then Add.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**.
Your PC will connect through your GT350i.

Settings

Personalising your profiles

You can quickly change your profile on the Home screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles** in the SETTINGS tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your **Ringtone** and **Volume, Message tone** settings and more.

Changing your screen settings

Touch **Screen settings** in SETTINGS tab.

Screen settings

Wallpaper - Choose the background image for your Widget homescreen, Speed dial homescreen or Lock screen.

Widget home template - Choose the template for your Widget home screen.

Livesquare - Touch Livesquare guide to check its functions. You can also adjust the following settings:

Liveplace - live square background

Livecon - Human or animal

Daily reset - on/off

History - selecting  deletes you Livesquare history

Top menu - Choose the style of the top menu, choose either **Zigzag**, **Scrolling** or **Screen by screen**.

Lock screen - Choose the style of Lock screen.

Dialling - Choose the style of dialling screen and adjust the font style only for your dialling screen.

Font - Choose the font size and style.

Brightness - Adjust the screen brightness.

Greeting message - Choose **ON** or **OFF** and fill in the greeting message in the text field.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your GT350i works for your own style.

Touch **Phone settings** in the SETTINGS tab, then choose from the list below.

Settings

Phone settings

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings on/off or Night only.

Languages - Change the language of your GT350i's display.

Auto keylock - Lock the keypad automatically in the Home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Change codes - change your security code, PIN code, PIN2 code or ATMT code.

Anti Theft Mobile Tracker: When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "000000."

Memory info - See **Using memory manager** for more information.

Reset settings - Restores all settings to their factory defaults.

Handset Information - You can upgrade the Software (details are given in Software upgrade via web)

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the SETTINGS tab.

Network settings

Select network - If you select **Automatic**, the GT350i automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.

If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.

Preferred lists - You can add a preferred network to connect to. If the network is searching

automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a Data service from the options and synchronise your GT350i using the LG PC Suite software to copy files from your phone. See **PC Sync** for more information on synchronisation.

Using memory manager

Your GT350i has three memories available: the phone, the SIM Card and an external memory card.

You can use memory manager to see how each memory is been used and see how much space is available.

Touch **Phone settings** in the **SETTINGS** tab, then **Memory info**.

Handset common memory - View the memory available on your GT350i for Pictures, Sounds, Videos, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, Task list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between Handset and External memory.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your GT350i

Settings

will not automatically search for other **Bluetooth** devices. If not, your GT350i will search for other **Bluetooth** enabled devices within range.


- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the **SETTINGS** tab. And select  and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GT350i.

Supported services - Select how to use Bluetooth in association with different services.

Remote SIM Mode - Turn on or off.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GT350i and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GT350i will search for devices. When the search is completed, **Refresh** will appear on screen.

- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GT350i will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth

wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GT350i supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>. This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are available for use with the GT350i.

Charger



Data cable



Battery



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 /GSM 900/ DCS 1800/ PCS 1900 Quad Band Terminal Equipment

Model Name

GT350i

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1/ EN 301 489-07 V1.3.1/ EN 301 489-17 V1.3.2
EN 60950-1 : 2001
EN 50360: 2001/ EN 62209-1: 2006
EN 300 328 V1.7.1
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

20.Apr. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : _____ บัตรรับประกันเลขที่ : _____
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): _____ เลขเครื่อง : _____
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : _____
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : _____
(อังกฤษ) : _____

วัน เดือน ปี เกิด : _____ เพศ : _____
(Date of Birth) (Gender)

ที่อยู่ : _____
(Address)

อาชีพ : _____ โทรศัพท์ : _____ E-mail : _____
(Occupation) (Telephone No.)

ชื่อจากร้าน : _____
(Dealer's Name)

ศูนย์บริการข้อมูล

Customer Information Center 0-2878-5757 or

1-800-

**L G L G L G
5 4 5 4 5 4**

โทรฟรี

www.lge.co.th

บริษัท แอลจี อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด
75/81 อาคารริชมอนด์ ชั้น 22 สุขุมวิท 26 คลองตัน
คลองเตย กรุงเทพฯ 10110
ศูนย์บริการข้อมูล โทร 0-2878-5757 แฟกซ์ 0-2466-0250

LG Electronic (Thailand) CO., Ltd
75/81 Richmond Bldg, 22nd FL, Sukumvit 26,
Klongton, Klongtoey Bangkok 10110
Customer Information Center
Tel. 0-2878-5757 Fax. 0-2466-0250



ใบอนุญาตเลขที่ ปณ.ต/2117 ปณจ. พระโขนง
ถ้าฝากส่งในประเทศไม่ต้องหนักตราไปรษณียากร



บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

72/127 ถนนสมเด็จพระเจ้าตากสิน
แขวงบुकคโโล เขตธนบุรี
กรุงเทพฯ 10600

เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น
(This warranty is valid only in Thailand)

- 1) บัตรรับประกันนี้มีผลบังคับใช้ 1 ปีนับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอันเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบ หรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่อง ผลิตวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoverages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอันเนื่องมาจากอุบัติเหตุ ไฟไหม้, ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่น ๆ ที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการคาลิน (สำนักงานใหญ่) : เลขที่ 72/127 อ.สมเด็จพระเจ้าตากสิน แขวงบुकโล เขตธนบุรี กรุงเทพฯ 10600

โทร : 0-2878-5757

แฟกซ์ : 0-2466-0250



Digital Mobile

สำหรับส่งคืนบริษัท

Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : บัตรรับประกันเลขที่ :
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน
นับจากวันที่ซื้อ
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): เลขเครื่อง :
 (Serial No.)

วัน เดือน ปี ที่ซื้อ :
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) :
(อังกฤษ) :

วัน เดือน ปี เกิด : เพศ :
(Date of Birth) (Gender)

ที่อยู่ :
(Address)

อาชีพ : โทรศัพท์ : E-mail :
(Occupation) (Telephone No.)

ชื่อจากร้าน :
(Dealer's Name)

ที่อยู่ร้าน :
(Dealer's Address)

ประทับตราร้านค้า