

KU250 | 使用手冊 |

www.lgmobile.com

P/N : MMBB0245512(1.0) 

LG Electronics Inc.

| KU250 | 使用手冊



繁體中文
簡體中文
ENGLISH



| KU250 | 使用手冊

使用手機前，請務必詳讀本手冊。並小心保存本手冊，以備日後參考之用。

CE 0168

LG KU250 使用手冊 I

- 繁體中文

本文件是 LG KU250 3G 視像手機的使用手冊。
LG Electronics 保留本文件的所有權利。未經 LG
Electronics 公司同意，嚴禁複製、修改和分發本文件。



目錄

安全與有效使用準則	5	通話	30	分鐘提示	38
KU250 功能	11	撥打視像通話		藍芽接聽模式	39
手機部位圖解		通話記錄	31	儲存新號碼	
開始使用	13	所有通話		視像通話設定	
安裝智能咭與手機電池		已撥通話			
為電池充電	14	已接來電		情景模式	40
拔下充電器	16	未接來電		多媒體	42
如何使用 microSD 記憶咭		通話時間	32	相機	
記憶咭格式化	18	數據用量		視像攝錄機	43
開／關手機	19	通話費用		音樂	44
一般功能	21	來電轉駁	33	最近播放	
撥打與接聽電話		語音通話		全部曲目	
輸入文字	24	視像通話	34	播放列表	
功能表功能簡介	26	停用全部	35	演出者	
遊戲及應用程式	29	通話限制		專輯	
我的遊戲及應用程式		語音通話	36	類型	
設定		視像通話		隨機播放曲目	
		停用全部	37	影片播放列表	
		固定撥號號碼		語音備忘錄	46
		來電等候		訊息	48
		通用設定	38	建立新訊息	
		來電拒接		訊息	
		發送我的號碼		電郵	49
		自動重撥			
		接聽模式			

收件匣 51

郵箱 52

草稿 54

寄件匣

已傳送項目 55

常用範本 56

文字範本

多媒體範本

情感圖示

設定

文字訊息

多媒體訊息 57

電郵 58

視像留言信箱 62

留言信箱

服務訊息

資訊服務 63

我的檔案 64

我的圖像

我的聲音 65

我的影片 66

我的遊戲及應用程式 68

其他 69

我的記憶咭 69

工具 70

快選功能表

鬧鐘

計算機 71

單位轉換器

匯率

面積 72

長度

重量

溫度 73

體積

速度

世界時間 74

智能卡服務

通訊錄 75

新增

搜尋

快速撥號

群組

服務撥號號碼 76

本手機號碼

我的名片 76

設定

顯示資訊

通訊錄同步化

複製 77

移動

備份通訊錄

還原通訊錄

清除通訊錄資料

記憶體資訊

瀏覽器 78

主頁

輸入地址

書籤

已儲存網頁 79

記錄

設定

網絡設定

外觀設定 80

快取記憶

Cookies

重設設定

安全

目錄

連接	81	設定	92	安全	97
藍芽		手機		PIN碼要求	
伺服器同步	85	自動按鍵鎖		手機鎖	98
USB 連接	86	語言		更改密碼	
		省電模式		記憶體管理員	
記事簿	87	手機資訊		手機共用記憶體	
日曆		屏幕		手機預留記憶體	
待辦事項	88	屏幕主題		智能咕記憶體	99
備忘錄	89	功能表樣式		外置記憶體	
保密備忘錄	90	字體		主要儲存裝置設定	
日期搜尋器		背景燈	93	重設設定	
設定		問候語訊息			
日曆		日期及時間			
備份行事曆與待辦事項	91	時間		配件	100
還原行事曆與待辦事項		日期		軟件升級	102
記憶體資訊		自動更新日期/時間	94	技術資料	103
清除全部		夏令時間			
		網絡			
		選擇網絡			
		網絡模式	95		
		首選列表			
		接入點	96		
		串流	97		

安全與有效使用準則

請詳閱這些簡單準則。違反這些準則可能會招致危險或構成違法行為。本手冊將會提供更進一步的詳細資訊。

無線電波頻率能量暴露

無線電波暴露標準與比吸收率(SAR)資訊

您的流動電話是一部無線電波收發器。其設計和製造不會超出由國際指引(ICNIRP)建議的無線電波頻率能量暴露限制。這些限制是綜合指引的一部份，並定出對一般人的RF能量接受水平。這些指引是經由獨立的科學機構通過對科學研究作定期和徹底的評估而制定的。這些指引包括為確保任何年齡和任何健康狀態人士安全而設的基本安全極限。流動電話的暴露標準採用了一組名為比吸收率的測量數據，即SAR。國際指引中所規定的SAR限制為2.0

W/kg*。

對SAR的測試是通過在標準的操作位置使電話以最高認可功率水平在所有測試波段中傳輸訊號而進行的。儘管SAR是在最高認可功率水平下確定的，電話的實際SAR會遠遠低於其實際值。這是因為電話的設計是為了在不同的功率水平下工作，以達到僅僅接通使用網絡所需的功率。在一般情況下，您離基站越近，電話的輸出功率就越低。在某款型號的電話上市之前，必須符合歐洲R&TTE指引中的標準。該指引包括保護使用者和任何其他個人健康和安全的基本要求。測試該裝置在耳邊使用的最高SAR值為1.24 W/kg。

在將手機置於耳邊正常使用或使其距身體至少1.5厘米遠的情況下，此流動電話符合關於RF暴露的指引。如果隨身攜帶手機，所用的手套或其他裝

安全與有效使用準則

置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。

要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直至傳輸完成為止。測試該裝置貼近身體使用的最高 SAR 值為 1.04 W/kg。

* 公眾使用的流動電話 SAR 限制為 10 克。

人體組織上平均 2.0 瓦特/千克 (W/kg)。指引包括一個基本安全極限，用以向公眾提供額外的保護，並解決任何量度上的差異所帶來的問題。SAR 值會視乎國家報告要求及網絡波段而定。如需其他地區的 SAR 資訊，請參閱 www.lgmobile.com 網

頁中的產品資料。

產品保養與維護

警告!

僅限使用經過審查認可與此特定手機型號配合使用的電池、充電器與配件。使用任何其他類型的配件，可能會使任何本手機適用的認證或保養失效，並可能會造成危險。

- ▶ 請勿拆解本手機（請交由合格維修人員為您進行維修）。
- ▶ 手機應遠離電器設備，如電視、收音機或個人電腦。
- ▶ 手機應遠離熱源，如暖爐或爐具。
- ▶ 請勿將手機放置於微波爐裡，這會導致電池發生爆炸。
- ▶ 請勿讓手機摔落。

- ▶ 請勿使手機遭受機械震動或撞擊。
- ▶ 若使用封套或乙烯質護套，可能會損壞手機表面塗層。
- ▶ 使用乾布清潔外殼。(切勿使用如苯、稀釋劑或酒精的溶劑。)
- ▶ 請勿讓手機置於煙霧濃濁或灰塵污染嚴重的環境中。
- ▶ 請勿讓手機靠近信用卡或電子車票；否則會影響磁帶內的資訊。
- ▶ 請勿用尖銳物品碰觸屏幕，否則會損壞手機。
- ▶ 請勿讓手機接觸液體或暴露在潮濕的環境中。
- ▶ 在使用耳機等配件時，請勿讓耳機連接線過於摺疊。同時不要讓它們接觸到天線。
- ▶ 審慎使用耳機等配件。

電子裝置

所有無線電話均可能因為受到干擾而影響性能。

- ▶ 未經許可，請勿在醫療設備旁使用本產品。避免將手機放在心律調整器上，也就是胸前口袋。
- ▶ 手提電話可能會干擾某些聽覺輔助器材。
- ▶ 手提電話也可能對電視、收音機、電腦等造成輕微干擾。

安全與有效使用準則

道路安全

請檢查當地對行車時使用手提電話的法律規定。

- ▶ 駕駛時請勿使用手提電話。
- ▶ 請專心駕駛。
- ▶ 如果有可能的話，請使用免提聽筒。
- ▶ 請按駕駛狀況需要，撥打或接聽電話前請將汽車停靠路邊。
- ▶ 射頻 (RF) 能量可能會影響某些汽車電子系統，例如：汽車音響、安全設備。
- ▶ 行車時，請勿將手機或免提聽筒套件放在靠近安全氣囊的位置。若無線裝置安裝不當且安全氣囊正好開啟，可能會造成嚴重傷害。

在聆聽音樂時，請調較適當的音量以讓您可留意周遭發生的事情，這特別是在橫過馬路時。

避免損害您的聽覺

如果長時間身處於高音量或喧鬧狀態，這會導致損害您的聽覺。所以我們建議開啟或關閉耳機時，不要將它放於太近耳朵。並將音量調較至適當的水平。

爆破區域

爆破作業進行當中，請勿使用手機。請查明禁止告示並遵守任何規章條例。

具有潛在爆炸危險的環境

- ▶ 請勿在加油站使用手機。請勿在汽油及化學品附近使用手機。
- ▶ 車上攜有流動電話與配件時，請勿運載或儲存可燃氣體、液體或爆炸物在車廂內。

飛機上

在飛機上，無線裝置可能會造成干擾。

- ▶ 登機前請先關閉手提電話。
- ▶ 未經空中服務人員許可，在地面停駐時也請勿使用手機。

兒童

將手機放在兒童接觸不到的安全地方。
手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急撥號可能在某些電話網絡不能發出。
因此，您不應該只倚賴手機發出緊急撥號。請與您本地的服務供應商聯絡。

電池使用與保養

- ▶ 電池充電前，無須完全放電。與其他系統不同，本機所用電池的效能不會受到記憶效應的影響。

安全與有效使用準則

- ▶ 僅限使用LG電池和充電器。LG充電器是經過特別設計，能增加電池壽命至最大極限。
- ▶ 請勿拆解或讓電池發生短路。
- ▶ 電池的金屬接點應保持清潔。
- ▶ 更換性能不再令人滿意的電池。充電數百次後，才需要更換電池。
- ▶ 已長期未使用的電池，請先進行充電以取得最大的性能。
- ▶ 請勿使電池充電器直接曝曬在陽光下，或在浴室等濕度高的場所中使用。
- ▶ 請勿把電池留置在過熱或過冷的地方，否則會降低電池性能。
- ▶ 若使用類型不當的電池，則有發生爆炸的危險。
- ▶ 請根據製造商的指示來處理廢棄電池。


KU250 功能

手機部位圖解

手機正面



KU250 功能

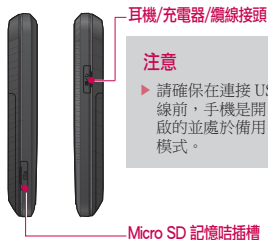

注意

- ▶ 請確保在連接 USB 線前，手機是開啟的並處於備用模式。

後視圖



開始使用

安裝智能咭與手機電池

1. 安裝智能咭。

智能咭包含手機號碼、服務詳情和通訊錄，且必須插入到手機中。如果取出智能咭，手機將無法使用（視乎您現時所在的國家/地區，緊急通話可能屬於例外情況），直至插入有效的智能咭為止。插入和取出智能咭前，務必要斷開手機上的充電器和其他配件。將智能咭插入智能咭插槽。請確定智能咭已正確插入，且咭上的金色接點區朝向上方。要取出智能咭，請輕輕往下按，然後往下方拉出。



插入智能咭



取出智能咭

注意

- ▶ 智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附之說明書進行安裝。

2. 安裝電池。

將電池裝入到電池格中，使其金屬接點接觸到手機中部。將電池的頂部壓入定位。如圖所示合上電池蓋。



開始使用

3. 取出電池。

如圖所示反轉手機，輕輕按下電池蓋以釋放並將其滑開。用手指提起電池並將其抽出。




為電池充電

手機要連接旅行充電器前，必須先裝入電池。



1. 如圖顯示面向箭嘴，將充電器的插頭插入到手機右側。
2. 將旅行充電器的另一端連接至電源插座。



注意

- ▶ 只限使用盒中隨附的充電器。

3. 充電完畢後，電池圖標的移動式指示列將會停止動作。
4. 在第一次使用手機前，請確保電池充足電。

注意！

- 如電池已完全放電，充電顯示可能會在連接到充電器後的約 1 至 1.5 分鐘才會顯示於屏幕之上。
- 請勿強力推進接頭，這樣可能會損壞手機及/或旅行充電器。
- 將電池充電器垂直插入牆壁的電源插座。
- 若您是在其他國家/地區使用電池充電器，請使用符合當地規格的轉接頭配件。
- 在充電期間，請勿移除您的電池或智能咭。

開始使用

警告！

- 如遇上雷暴，請拔下電源線與充電器以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物接觸電池。
這可能會有失火的危險。

拔下充電器

如下圖所示方式，中斷旅行充電器與手機的連接。



如何使用 microSD 記憶咭



<如何插入 microSD 記憶咭>

1. 關閉手機。開機狀態下插入或取出microSD 記憶咭可能會損壞儲存在記憶咭中的檔案。
2. 提起用於保護 microSD 記憶咭插槽的膠蓋。



3. 讓金屬接點朝下，將記憶咭插入到插槽中。切勿強行插入記憶咭到插槽中，若無法將其順利滑入，請檢查記憶咭的插入方式是否正確或插槽中是否有異物。
4. 插入後，推動記憶咭直至聽到卡嗒聲，即表示 microSD 記憶咭已正確就位。
5. 合上塑膠插槽保護蓋。
6. 要取出記憶咭，請首先關機，然後打開插槽護蓋，並用指尖推入記憶咭以將其彈出。

開始使用


注意：

- ▶ 電池電量過低時，避免使用快閃記憶咭。
- ▶ 在咭上寫入資料時，請等到操作完成後再取出記憶咭。
- ▶ 該咭設計為僅可以單一方向輕鬆插入到系統中。
- ▶ 請勿摺曲記憶咭或強行插入插槽。
- ▶ 請勿插入除 microSD 製造外的其他任何記憶咭。
- ▶ 若已使用 FAT32 格式化 microSD 記憶咭，請再次使用 FAT16 格式化 microSD 記憶咭。

有關 microSD 記憶咭的更多資訊，請參閱記憶咭的使用手冊。

記憶咭格式化


開始使用記憶咭前，需要對其格式化。

插入記憶咭後，請選擇 **[功能表]** → **[設定]** → **[記憶體管理員]** → **[外置記憶體]**，然後按左軟鍵 。


本項操作只需在第一次使用記憶咭時進行。格式化過程中，系統會為不同的資料類型建立多個資料夾。

開／關手機

開啟手機

確保智能咭已插入手機且電池已充電。按住  鍵直至開機。如果 PIN 碼要求設定為「開啟」，則輸入隨智能咭提供的智能咭 PIN 碼。(注意：請參閱第 20 頁) 您將會在幾秒鐘後在網上註冊。

關閉手機

按住  直至關機。手機電量較低時，可能有幾秒鐘延遲。此時，切勿再次開機。

存取碼

您可使用本章節中說明的存取碼，以防他人未經授權使用您的手機。您可變更存取碼 (PUK 碼與 PUK2 碼除外)：使用更改密碼功能 [功能表 #.1.5.3] 即可。

PIN 碼 (4 到 8 位數)

PIN (個人識別碼) 碼可防止他人未經授權使用您的智能咭。PIN 碼通常隨智能咭一同提供。如果將 PIN 碼要求設為開啟，則在每次開機時，手機均會要求輸入 PIN 碼。如果將 PIN 碼要求設為關閉，則無需輸入 PIN 碼，手機會直接連接至網絡。

開始使用

PIN2 碼 (4 到 8 位數)

需要使用 PIN2 碼 (部分智能咭中隨附) 來存取如通話費用和固定撥號等功能。僅在智能咭支援這些功能的情況下才可使用。

PUK 碼 (8 位數)

需要使用 PUK (PIN 解鎖碼) 碼才能更改已鎖定的 PIN 碼。PUK 碼可能已隨智能咭一同提供。如果智能咭中未提供，請諮詢網絡供應商以取得 PUK 碼。如果遺失該碼，請聯絡網絡商客戶服務部。

PUK2 碼 (8 位數)

需要隨某些智能咭提供的 PUK2 碼，以解鎖已鎖定的 PIN2 碼。如果遺失該碼，請聯絡網絡商客戶服務部。





安全密碼 (4 位數)

安全密碼可防止他人未經授權使用您的手機。預設安全密碼為「0000」，刪除所有手機記錄及將手機恢復到出廠設定時需要輸入安全密碼。





一般功能

撥打與接聽電話

撥打電話



1. 輸入電話號碼 (包括區碼)。
 - ▶ 要刪除一個數字，請按  鍵。
 - 要刪除所有數字，請按住  鍵。
2. 按  鍵可撥打電話。
3. 按  結束通話。

從通話記錄列表撥號

1. 在備用模式下，按下發送鍵 ，最近來電、已撥通話及未接來電將會顯示。
2. 使用上/下導覽鍵  /  選擇所需的號碼。
3. 按  撥號。

撥打視像通話

您可在 3G 覆蓋服務區域內撥打視像通話。如果來電者位於 3G 覆蓋服務區域內且使用 3G 視像手機，則會建立通話。您也可接聽視像通話。要撥打/接聽視像通話，請執行如下操作。


1. 使用按鍵輸入手機號碼或從已撥通話/已接來電列表中選擇號碼。
 - ▶ 要更正號碼，短按  鍵可刪除上一個數字，或按住  鍵則刪除所有數字。

一般功能

2. 如果您想使用免提聽筒，請確保已插入耳機。
3. 要啟用視像功能，請按左軟鍵 [選項] 並選擇「撥打視像通話」。
 - ▶ 系統會通知您：在撥打視像通話前，您需要關閉其他應用程式。




注意

- ▶ 接通視像通話可能需要一些時間。請耐心等待。連線時間也取決於對方接聽電話的速度。連接視像電話時，您將看到自己的圖像；對方接聽電話後，他們的圖像便會顯示在畫面上。



4. 根據需要調校相機位置。
5. 按  鍵可結束通話。

透過「通訊錄」撥打語音/視像通話

撥打「通訊錄」中儲存的號碼十分方便。

1. 按  鍵存取通訊錄列表。
2. 捲動至要撥號的聯絡人。
3. 按  鍵撥打語音通話。按左軟鍵並選擇「撥打視像通話」以撥打視像電話。
4. 按  結束通話。

撥打國際電話



1. 按住  鍵以輸入國際首碼。
「+」字元會自動選取國際碼。
2. 依次輸入國碼、區碼及電話號碼。
3. 按  。

接聽來電

接到來電時，手機會發出鈴聲且手機圖標會在屏幕上閃爍。如果手機可以識別來電者，則會顯示來電者的電話號碼 (如果已在通訊錄中儲存名稱/相片，則可顯示出來)。


1. 透過按 鍵接聽來電。

注意

- ▶ 要拒接來電，請按  或按右軟鍵。
- ▶ 如果您將「接聽模式」設定為「按發送鍵」(功能表 #.2.0.4)，則只能按發送鍵才可接聽來電。
- ▶ 如果「接聽模式」設定為「按任何鍵」，則按除  外的任何鍵均可接聽來電。

2. 透過按 鍵結束通話。

注意

- ▶ 您可在使用「通訊錄」或其他功能表的功能時接聽來電。
- ▶ 連接相容耳機後，您可同時使用耳機鍵和手機來接聽來電。要拒接來電，請按 。
- ▶ 來電時，您可透過按住下導覽鍵來使鈴聲靜音。

一般功能

訊號強度


透過手機LCD屏幕上的訊號指示可查看訊號強度。訊號強度會不斷變化，尤其是在建築物內時。靠近窗戶可提升接收效果。

輸入文字

使用手機按鍵可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息、建立個人歡迎辭或在日曆中排定事件，都需要輸入文字。

本手機提供以下文字輸入法。

T9 模式

此模式可讓您以每個字母按一個按鍵的方式來輸入文字。鍵盤上的每個按鍵都具有多個字母。T9模式會自動將按鍵與內建字典進行校對以判斷正確的文字，因此需要按下的按鍵遠遠少於傳統ABC模式。這也稱為預測文字功能。您可以透過按  鍵來啟用和取消 T9 模式。

ABC 模式

此模式可讓您輸入字母，方式為按一下、兩下、三下或多下標記有所需字母的按鍵，直到所需字母出現為止。

123 模式(數字模式)

以每個數字按一個按鍵的方式來鍵入數字。

參閱下表，了解可透過字母數字鍵輸入字元之詳細資料。

按鍵	按順序顯示的字元	
	小寫	大寫
1-2	.,?!: /° _0;,'	.,?!: /° _0;,'
2-3	abc2ääåää åæç	ABC2ÄÅÄÄÄ ÀÆÇ
3-4	def3èéêë ë	DEF3ÊÉ ËË
4-5	ghi4îíîï ï	GHI4ÌÍÎÏ Ï
5-6	jk15£	JKL5£
6-7	mno6ñðóö øœ	MNO6ÑÓÓÓ ÖØOE
7-8	pqr7ß\$	PQRS7ß\$
8-9	tuv8ùú ûü	TUV8ÛÜ ÛÜ
9-0	wxyz9	WXYZ9
0-#	空格,0	空格,0

注意

- ▶ 指定給按鍵的字元及相應的顯示順序取決於使用「輸入法模式」選項所選擇的語言。以上表格提供針對英語而設定的字元。

使用123(數字模式)

123模式可讓您在文字訊息輸入中輸入數字(如電話號碼)。請按下與所需數字相對應的按鍵，然後再手動切換適當的文字輸入模式。

功能表功能簡介

本手機的功能表可以 2 種方式顯示。一種為格子樣式，另一種為順序樣式。請注意，每種檢視中的功能表號碼選項會有所不同。本手機預設為以格子樣式來顯示功能表，因此，手冊中的所有功能表號碼選擇均以該設定為根據。

您可在備用畫面中按 **OK** 鍵以啟動功能表。移至所需項目並按 **OK** 鍵進入子功能表。您亦可從主功能表中直接按對應的數字鍵 (如下所示) 進入子功能表。主功能表包括以下置頂功能表和子功能表。

1. 遊戲及應用程式	2. 通話	3. 情景模式
1.1 我的遊戲及應用程式	2.1 撥打視像通話	3.1 標準
1.2 設定	2.2 通話記錄	3.2 靜音
	2.3 通話時間	3.3 震動
	2.4 數據用量	3.4 戶外
	2.5 通話費用	3.5 耳機
	2.6 來電轉駁	3.6 自訂 1
	2.7 通話限制	3.7 自訂 2
	2.8 固定撥號號碼	3.8 自訂 3
	2.9 來電等候	
	2.0 通用設定	
	2.* 視像通話設定	

4. 多媒體	6. 我的檔案	8. 通訊錄
4.1 相機	6.1 我的圖像	8.1 新增
4.2 視像攝錄機	6.2 我的聲音	8.2 搜尋
4.3 音樂	6.3 我的影片	8.3 快速撥號
4.4 影片播放列表	6.4 我的遊戲及應用程式	8.4 群組
4.5 語音備忘錄	6.5 其他	8.5 服務撥號號碼
5. 訊息	6.6 我的記憶咭	8.6 本手機號碼
5.1 建立新訊息	7. 工具	8.7 我的名片
5.2 收件匣	7.1 快選功能表	8.8 設定
5.3 郵箱	7.2 鬧鐘	
5.4 草稿	7.3 計算機	
5.5 寄件匣	7.4 單位轉換器	
5.6 已傳送項目	7.5 世界時間	
5.7 常用範本	7.6 智能卡服務	
5.8 情感圖示		
5.9 設定		

功能表功能簡介

9. 瀏覽器
9.1 主頁
9.2 輸入地址
9.3 書籤
9.4 已儲存網頁
9.5 記錄
9.6 設定
*. 連接
*.1 藍芽
*.2 伺服器同步
*.3 USB 連接

0. 記事簿
0.1 日曆
0.2 待辦事項
0.3 備忘錄
0.4 保密備忘錄
0.5 日期搜尋器
0.6 設定

#. 設定
#.1 手機
#.2 屏幕
#.3 日期及時間
#.4 網絡
#.5 安全
#.6 記憶體管理員
#.7 重設設定

遊戲及應用程式

我的遊戲及應用程式

功能表 1.1

在此功能表下，您可輕鬆下載遊戲和其他應用程式。當中有兩個資料夾，預設為「遊戲」和「應用程式」。每個資料夾都有下載遊戲或應用程式的內建連結。請注意，使用網上服務可能需要另行收費。

設定


功能表 1.2

[選項]

新增

1. 從「選項」功能表中選擇「新增」。需要設定以下項目。

服務名稱	為網絡設定輸入帳戶名稱。
連線模式	從提供的連線模式列表中進行選擇 (預設為「TCP with proxy」或「TCP without proxy」)
IP 位址	輸入由網絡商提供的 WAP 網閘 IP 位址。(例如 195. 115. 025. 129)
proxy 伺服器連接埠	取決於連線模式，網絡商會提供連接埠的詳情。
存取點	從提供的存取點列表中選擇。(有關新增或編輯新接入點的更多詳情，請參閱第 96 頁。)

2. 按  [儲存] 以儲存任何配置變更。

檢視

您可檢視網絡設定。

通話

撥打視像通話 功能表 2.1

使用該功能表，您可撥打視像通話。

1. 使用該功能表，您可撥打視像通話。
 - ▶ 您可輸入號碼。
 - ▶ 您可使用左軟鍵 [選項] 從「搜尋通訊錄」中選擇號碼。
 - ▶ 您可以透過 **OK** [視像通話] 查看通話列表。
2. 按下確認鍵 [視像通話] 可進行視像通話。

視像通話過程中

進行視像通話時，畫面會顯示聯絡人姓名和通話時間、聯絡人的影像、音量指示符、視像控制台以及您本人的影像。

您可以透過按左軟鍵 [選項] 存取以下選項功能表。

- ▶ 揚聲器開啟/關閉
- ▶ 藍芽/耳機通話 (已連接藍芽耳機連時)
- ▶ 保留/繼續
- ▶ 拍攝
- ▶ 相機 (內/外)
- ▶ 檢視寄件者號碼
- ▶ 移到通訊錄
- ▶ 移到訊息
- ▶ 結束通話
- ▶ 設定

接入視像通話

收到視像通話時，畫面上會顯示來電者的如下資訊。

- ▶ **圖片/動畫**：顯示「通訊錄」中設定的圖片 ID、圖像或表示來電的預設動畫。
- ▶ **來電者的姓名和號碼**：顯示來電者號碼。如果該號碼已儲存在「通訊錄」中，則顯示聯絡人的姓名。

通話記錄

功能表 2.2

所有通話 (功能表 2.2.1)

可讓您檢視未接、已接和已撥電話的記錄。對於從記錄中選取的號碼，您可撥打電話或發送訊息。您亦可將號碼儲存到「通訊錄」中。

已撥通話 (功能表 2.2.2)

可讓您檢視已撥通話記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

已接來電 (功能表 2.2.3)

可讓您檢視已接來電記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

未接來電 (功能表 2.2.4)

可讓您檢視未接來電記錄，您可以撥打電話或發送訊息，以及將號碼儲存到「通訊錄」中。

通話

通話時間

功能表 2.3

您可按類型檢視通話時間。按左軟鍵 [選項] 以選擇部份清除或清除全部。另外，初始化時需要安全密碼。

可以使用的計時器如下：

- ▶ **所有通話:** 顯示總通話時間。
- ▶ **已撥通話:** 顯示撥出電話時間。
- ▶ **已接來電:** 顯示來電通話時間。
- ▶ **最後通話:** 以小時/分鐘/秒顯示最後通話時間。

數據用量

功能表 2.4

可讓您檢查接收、傳送及全部資料。

按左軟鍵 [清除全部] 可選擇全部初始化，或者初始化所選的用量類型。

初始化時需要安全密碼。

通話費用

功能表 2.5

1. 該功能可顯示最後通話和所有通話的通話費用。
2. 要進行初始化，請按確認鍵 [清除] 並輸入 PIN2 碼。
3. 您可在設定通話費用中選擇單位或貨幣。根據您的設定，通話時會顯示通話費用 (如果智能喲和網絡支援通話計費 (AOC))。

4. 在設定中，選擇「開啟」以設定通話費用限制。設定通話費用限制後，當達到通話費用限制時，將無法撥出電話。

來電轉駁

功能表 2.6

提供語音和視像通話的來電轉駁功能表。

按下 **OK**，您即可啟用來電轉駁功能表。

語音通話 (功能表 2.6.1)

- ▶ 全部語音通話
- ▶ 線路繁忙時
- ▶ 無人接聽時
- ▶ 無法接通時

1. 不存在號碼列表時

轉至輸入轉駁號碼的編輯程式。您可直接輸入要轉駁來電的號碼，或者在通訊錄中進行搜尋。如果按下 **OK** [轉駁]，手機會在輸入號碼後將要求發送給服務供應商。等候網絡結果時，會顯示要求訊息和動畫。

2. 存在號碼列表時

顯示包括號碼列表的「其他號碼」功能表。等候網絡結果時，會顯示要求訊息和動畫。

通話

3. 選項功能表

啟用所有語音通話功能表後，選擇位於功能表底端的「選項」功能表時，會顯示停用、停用全部、檢視狀態、設定等候時間和清除列表功能表。

「檢視狀態」功能表可顯示網絡上的設定。如果您選擇該功能表，則會顯示要求訊息和動畫。然後，當從網絡上接收到資訊時，會顯示網絡設定。如果您選擇「停用」功能表，則註冊到網絡的來電轉駁號碼會在使用者確認後刪除。「清除列表」功能表會刪除所有轉駁號碼列表。

視像通話 (功能表 2.6.2)

▶ 全部視像通話

▶ 線路繁忙時

▶ 無人接聽時

▶ 無法接通時

1. 不存在號碼列表時

轉至輸入轉駁號碼的編輯程式。您可直接輸入要轉駁來電的號碼，或者在通訊錄中進行搜尋。如果按下 **OK** [轉駁]，手機會在輸入號碼後將要求發送給服務供應商。等候網絡結果時，會顯示要求訊息和動畫。

2. 存在號碼列表時

顯示包括號碼列表的「其他號碼」功能表。等候網絡結果時，會顯示要求訊息和動畫。

3. 選項功能表

啟用所有語音通話功能表後，選擇位於功能表底端的「選項」功能表時，會顯示停用、停用全部、檢視狀態和清除列表功能表。

如果您選擇「停用」功能表，則註冊到網絡的來電轉駁號碼會在使用者確認後刪除。選擇「停用全部」功能表，可在出現要求訊息和動畫後顯示操作結果。「清除列表」功能表會刪除所有轉駁號碼列表。

停用全部 (功能表 2.6.3)

您可選擇是否要全部停用。

通話限制

功能表 2.7

提供語音和視像通話的通話限制功能表。

該功能表包括「語音通話」、「視像通話」和「停用全部」。「語音通話」和「視像通話」功能表具有以下子功能表。

「通話限制」子功能表包含「所有撥出通話」、「撥出的國際通話」、「撥打本地以外的國際通話」、「所有來電」和「國際漫遊時來電」子功能表。

「所有撥出通話」功能表限制所有撥出電話，「撥出的國際通話」功能表限制撥出國際通話，「撥打本地以外的國際通話」功能表限制所有撥出的外國電話，除本地PLMN 國家外。「所有來電」拒接所有的來電，「國際漫遊時來電」功能表拒接漫遊時的來電。

通話

語音通話 (功能表 2.7.1)

視像通話 (功能表 2.7.2)

▶ 所有撥出通話

1. 選定 **OK** 後，該選項會從使用者接收限制密碼並在網絡上啟用限制服務。要求訊息和動畫將會出現。網絡響應時，操作結果將會出現。
2. 選定功能表後，將啟用「所有撥出通話」功能表。從最底端功能表的軟功能表上選擇「選項」功能表。然後顯示「停用」、「停用全部」、「檢視狀態」和「更改密碼」功能表。「停用」功能表會在輸入使用者限制密碼後，停用限制服務。「停用全部」功能表會在輸入使用者限制密碼後，停用在網絡上設定的所有限制服務。

「檢視狀態」功能表可讓使用者檢視目前網絡設定。選擇檢視狀態功能表後，會顯示帶動畫的要求訊息及網絡響應時的操作結果。「更改密碼」功能表可讓使用者變更目前限制密碼。

▶ 撥出的國際通話

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定功能表後，將啟用並執行「撥出的國際通話」功能表。其運作方式與「所有撥出通話」功能表一樣。

▶ 撥打本地以外的國際通話

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。

2. 選定功能表後，將啟用並執行「撥打本地以外的國際通話」功能表。其運作方式與「所有撥出通話」功能表一樣。

▶ 所有來電

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定功能表後，將啟用並執行「來電」功能表。其運作方式與「所有撥出通話」功能表一樣。

▶ 國際漫遊時來電

1. 選定 **OK** 後，其運作方式與「所有撥出通話」功能表一樣。
2. 選定功能表後，將啟用並執行「國際漫遊時來電」功能表。其運作方式與「所有撥出通話」功能表一樣。

停用全部 (功能表 2.7.3)

您可選擇是否要全部停用。

固定撥號號碼 功能表 2.8

- ▶ **開啟/關閉:** 選擇是否啟用固定撥號。需要驗證 PIN2 碼。

來電等候 功能表 2.9

- ▶ **啟動:** 啟用來電等候服務。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。
- ▶ **停用:** 停用來電等候服務。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。
- ▶ **檢視狀態:** 顯示網絡的啟用來電等候服務群組項目。選擇該項目後，會顯示要求訊息和動畫。網絡響應時，操作結果將會出現。

通話

通用設定

功能表 2.0

來電拒接 (功能表 2.0.1)

您可設定是否拒接來電。

1. 在「拒絕」功能表中選擇「開啟」，以啟用來電拒接。拒接列表功能表將會出現。
2. 在拒接列表功能表中設定所需的來電拒接選項。

- ▶ **所有通話**：拒接所有通話。
- ▶ **通訊錄**：拒接「通訊錄」中儲存號碼的來電。
- ▶ **群組**：您可指定儲存在「通訊錄」中的群組單元，對其進行來電拒接。
- ▶ **無名稱記錄**：拒接未儲存在「通訊錄」中的來電。
- ▶ **無來電號碼**：拒接無 CLI 資訊的來電。

發送我的號碼 (功能表 2.0.2)

- ▶ **按網絡設定**：透過由網絡商決定的預設設定來設定。
- ▶ **開啟**：設定在撥出電話時，發送我的手機號碼。
- ▶ **關閉**：設定在撥出電話時，不發送我的手機號碼。

自動重撥 (功能表 2.0.3)

當撥打電話失敗時，可讓您設定自動重撥功能。


接聽模式 (功能表 2.0.4)

可讓您設定接聽方式。您可選擇「按發送鍵」和「按任何鍵」。

分鐘提示 (功能表 2.0.5)

決定是否在通話過程中，播放每分鐘提示音。

藍芽接聽模式 (功能表 2.0.6)

- ▶ **免提：**連接藍芽後，可使用藍芽耳機接聽來電。
- ▶ **手機：**按手機上的  後，您可在手機上通話。如果您按藍芽耳機鍵接聽來電，則可使用藍芽耳機通話。

這是初始接聽模式選擇。通話時，您可在手機和耳機之間互相切換。

儲存新號碼 (功能表 2.0.7)

結束通話時，您可在此功能表中儲存新號碼 (若該號碼並未儲存在通訊錄中)。

視像通話設定 (功能表 2.*)

您可設定撥打/接聽視像通話時的桌面顯示。

- ▶ **使用個人圖像：**決定是否顯示我的圖像。
- ▶ **選擇私人圖像：**選擇要顯示的靜態圖像。
- ▶ **鏡像：**選擇是否啟用鏡像效果。
- ▶ **我的圖像大小：**選擇要顯示的我的圖像大小。
- ▶ **我的圖像位置：**選擇圖像顯示的位置。

情景模式

您可選擇來電的鈴聲或震動效果，並根據情景模式，設定鈴聲、按鍵音和音效的聲音和音量。選擇進行編輯的每個情景模式提供了不同的選項列表。

▶ 提示類型

您可從 [鈴聲]、[震動]、[靜音]、[鈴聲與震動]、[先震動後響鈴]、[最大鈴聲與震動] 中進行選擇。

▶ 話音鈴聲

您可選擇話音通話的鈴聲。

▶ 視像鈴聲

您可選擇視像通話的鈴聲。

▶ 音量

設定鈴聲音量。

▶ 訊息提示

您可選擇在閱讀收到的訊息之前，手機進行提示的頻率。

▶ 訊息提示音

您可從個人檔案或預設檔案中選擇檔案，以便在收到訊息時由手機自動播放這些檔案。

▶ 按鍵音

您可設定按鍵時播放的按鍵音。

▶ 按鍵音音量

從 7 種可用的級別中，設定所選按鍵音的音量。

▶ 確認音效

您可設定手機用於確定動作時播放的確認音。

▶ 開機音效

您可設定手機開機時是否播放音效。

▶ 開機檔案

您可選擇手機開機時播放的音效。

▶ **關機音效**

您可設定手機關機時是否播放音效。

▶ **關機檔案**

您可選擇手機關機時播放的音效。


多媒體

相機

功能表 4.1

此應用程式可讓您拍攝靜態相片。您可以所需尺寸拍攝相片，還可用來當作通訊錄的相片、牆紙及其他一般用途。

您可在拍攝後經由多媒體訊息、電郵或藍芽傳送相片。

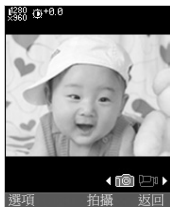

1. 按左軟鍵可存取「選項」並設定以下所需環境。
 - ▶ 透過 / 在選項功能表之間移動。
 - ▶ 透過 / 選擇所需值，並按 確認選擇。
2. 完成所有設定後，請按右軟鍵 [關閉]。
3. 將鏡頭聚焦於想拍攝的物件並按 鍵。
4. 按 儲存相片。拍攝的相片會儲存在「我的檔案」的「圖片」資料夾中。

注意


- ▶ 按右軟鍵 [返回] 可返回到上一模式。

視像攝錄機

功能表 4.2

此應用程式可讓您拍攝影片。您可在該功能表中播放及觀看已儲存的影片檔案。您可在錄影後經由訊息、電郵或藍芽來傳送短片。

亮度: 從 2.0 到 -2.0，間隔等級為 0.5。等級越高，畫面亮度越大。

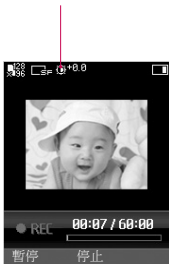

1. 按左軟鍵可存取「選項」並設定以下所需環境。
 - ▶ 透過  /  在選項功能表之間移動。
 - ▶ 透過  /  選擇所需值，並按  確認選擇。
2. 完成所有設定後，請按右軟鍵 [關閉]。
3. 將鏡頭聚焦於想拍攝的物件並按  鍵開始錄製。按  鍵可停止錄製。
 - ▶ 按左軟鍵 [暫停] 可暫停錄製。
4. 按  可儲存短片。它將會儲存在「我的檔案」的「影片」資料夾中。

注意

- ▶ 按右軟鍵 [返回] 可返回到上一模式。

多媒體

音樂

功能表 4.3

最近播放 (功能表 4.3.1)

存在若干個目前可播放的曲目時，該功能表會啟用。

全部曲目 (功能表 4.3.2)

您可檢視儲存在手機/外置記憶體中的全部音樂檔。

播放列表 (功能表 4.3.3)

透過從全部曲目列表中選擇曲目，您可建立自己的播放列表。

演出者 (功能表 4.3.4)

您可檢視和播放按「演出者」排序的音樂。

專輯 (功能表 4.3.5)

您可檢視和播放按「專輯」排序的音樂。

類型 (功能表 4.3.6)

您可檢視和播放按「風格」排序的音樂。


隨機播放曲目 (功能表 4.3.7)

若要連續而隨機地播放音樂，請選擇此項。

影片播放列表





功能表 4.4



您可在此處管理或發送下載或錄製的短片。

若按下  [播放]，您便可啟用該影片檔。

透過「影片」列表中的左軟鍵 [選項]，可執行以下操作。

- ▶ **發送：**如果未受數碼權限管理 (DRM) 保護，您可透過訊息、電郵或藍芽來發送所選短片。
- ▶ **刪除：**刪除所選影片。
- ▶ **標記/取消標記：**使用標記功能，您可播放、發送、刪除、和新增至播放列表。
- ▶ **使用方式：**可將影片設定為話音鈴聲或視像鈴聲。
- ▶ **檔案資訊：**顯示關於選定影片檔案的資訊。
- ▶ **記憶體狀態：**顯示記憶體狀態 (手機記憶體或外置記憶體)。

透過影片播放器，您可觀賞影片。影片檔案以縮圖顯示在列表中。使用  /  /  / ，您可選擇所需影片。選擇所需的影片後，選擇「播放」可觀賞錄製的影片。

選定選項 1. 「播放」時，短片會使用 Media Player 進行播放。要暫停播放，請在播放過程中按 。要繼續播放，請再次按 。

要擷取畫面截圖，請在播放暫停時，按左軟鍵 [選項] 並選擇「擷取」。

要全屏檢視目前的播放內容，請在播放過程中，按左軟鍵 [選項] 並選擇「橫向檢視」。

要恢復到之前的畫面大小，請在全屏模式下再次按右軟鍵。

多媒體

在 Media Player 中觀賞短片時，可使用以下選項：







- ▶ **橫向檢視：**可在橫向闊屏幕檢視
- ▶ **靜音/取消靜音：**如果音量設定為大於零，則靜音模式會啟用；而當音量設定為零，則取消靜音模式會啟用。
- ▶ **擷取：**可將暫停畫面的內容儲存為一個圖像檔案(僅可在暫停模式下)。
- ▶ **重複：**可設定重複選項(無/目前檔案/全部檔案)。
- ▶ **檔案資訊：**播放時，您可檢查檔案資訊(檔案名稱、大小、日期、類型、長度和保護)。
- ▶ **發送：**如果檔案未受數碼權限管理(DRM)保護，您可透過訊息、電郵或藍芽來發送影片。
- ▶ **刪除：**刪除所選影片。

- ▶ **使用方式：**您可以將影片檔設為語音鈴聲或視像鈴聲。此功能表會視乎內容而定。

語音備忘錄

功能表 4.5

1. 錄音前，按左軟鍵 [選項] 以顯示選項快顯功能表。
 2. 使用  /  移動到所需的
功能表項目，然後按 。
- ▶ **長度：**您可將錄音長度設定為多媒體訊息大小、30 秒或 1 分鐘。
 - ▶ **質素：**您可從高、中、低中選擇錄音質素。
 - ▶ **移至我的聲音：**開啟「我的檔案」中「語音錄製」資料夾。

3. 按  開始錄音。開始錄音後，錄音時間會顯示在 LCD 上。要取消錄音，請按「返回」。
4. 完成錄音後，按  退出。錄製的檔案會自動儲存到「我的檔案」的「語音錄製」資料夾中。若再次按 ，您便可開始錄製新語音。
5. 錄音後，按左軟鍵，選擇多個不同的選項。
6. 使用  /  選擇所需的功能表，並按 。
7. 按右軟鍵可關閉子功能表快顯視窗。

訊息

建立新訊息

功能表 5.1

訊息 (功能表 5.1.1)

您可編寫和編輯包含文字、圖像、影片和聲音的訊息。

1. 在「訊息」欄位中輸入您的訊息。

「訊息」欄位中的「選項」功能表

- ▶ **附加:** 您可執行以下動作：
 1. **圖像:** 您可插入圖像。(現有圖像/拍照)
 2. **影片:** 您可插入短片。(每張投影片一個影片)
 3. **聲音:** 您可插入聲音檔案。(每張投影片一個聲音檔案)
 4. **符號:** 您可插入符號。輸入對應的數字鍵後，按 **OK**。

5. **常用範本:** 您可插入儲存在手機上的文字範本。選擇範本後，按 **OK**。所選範本會插入到「訊息」視窗中。
6. **情感圖示:** 您可在編寫訊息時插入表情圖示。
7. **名稱及號碼:** 在搜尋名稱和號碼後，您可插入該記錄。
8. **新增投影片:** 選擇此項可新增投影片。
9. **標題:** 選擇此選項可插入標題。

- ▶ **儲存至草稿**：選擇此項可將訊息儲存至草稿。
 - ▶ **輸入法模式**：選擇所需語言模式。
 - ▶ **寫入語言**：您可選擇編寫訊息的語言。
 - ▶ **新增字詞至字典**：您可將字詞新增到字典。
2. 按下右軟鍵 [返回] 可結束功能表，或在設定子功能表後進入上一功能表。
 3. 按確認鍵 [發送] 可進入收件者畫面。您可從該處直接輸入電話號碼，或利用儲存在通訊錄中的聯絡人。透過左軟鍵 [選項]，您可使用以下功能。

- ▶ **最近使用的**：您可使用之前傳送多媒體訊息的上幾個目標地址。
 - ▶ **儲存至草稿**：選擇此項可將訊息儲存至「草稿」。
 - ▶ **結束**：退回建立新訊息畫面。
4. 按確認鍵 [發送] 可傳送該訊息。訊息會自動儲存在「已傳送項目」資料夾中。如果該訊息尚未發送，則仍位於「寄件匣」中，且顯示發送失敗狀態。

電郵 (功能表 5.1.2)

若要傳送/接收電郵，您必須建立一個電郵帳戶。(參閱第 60-62 頁，了解如何建立電郵帳戶。)



1. 在「收件者」、「抄本」、「密送」欄位中輸入收件者的電郵地址。您可透過按 **OK** 鍵來搜尋「通訊錄」。

訊息

- 將游標移至「標題」欄位，並輸入標題內容。
- 將游標移至「訊息」欄位後，您可輸入訊息內容。
- 透過左軟鍵 [選項]，您可使用以下功能。
 - ▶ **附加：**選擇該功能表，以插入特殊字元、範本和通訊錄。也可以附加多媒體檔案 (圖片、影片和聲音)。
 - ▶ **搜尋通訊錄：**選擇該功能表，以插入儲存在「通訊錄」中的電郵地址。(游標位於「收件者」/「抄本」/「密送」欄位時，僅顯示「選項」功能表。)
- 寫完電郵後，按 **OK** 可傳送電郵。
 - ▶ **最近使用的：**您可以使用最近臨時儲存的電郵地址。
 - ▶ **儲存至草稿：**選擇此項可將訊息儲存至「草稿」。
 - ▶ **檢視附件：**顯示附加的檔案。(該項目僅在已附加檔案時可用。)
 - ▶ **移除：**刪除附件檔案。
 - ▶ **輸入法模式：**選擇所需字典模式。
 - ▶ **新增字詞至字典：**您可將新字詞加入到字典。
 - ▶ **寫入語言：**您可變更寫入語言。
 - ▶ **設定郵件重要性：**您可設定要發送郵件的重要性。

收件匣

功能表 5.2

1. 您可檢視儲存的訊息。選擇訊息，然後按  以檢視該訊息。
2. 透過 ，您可檢視前一則或下一則訊息。
3. 要檢視多媒體訊息(通知)，選擇訊息通知檢視畫面中的「重新接收」。然後，檔案會進行傳輸，完成後，您可檢視該檔案。

透過「收件匣」中的左軟鍵 [選項]，您可使用以下功能。

- ▶ **回覆：**建立對所選訊息的寄件者或所有收件者的回覆。

- ▶ **轉寄：**轉寄所選訊息。

注意

- ▶ 不支援多媒體訊息(通知)和 WAPPUSH 訊息。

- ▶ **撥打視像通話：**您可撥打視像通話。
- ▶ **刪除：**刪除目前的訊息。
- ▶ **建立新訊息：**您可編寫新的訊息或電郵。
- ▶ **複製：**在文字訊息下，您可將訊息複製到手機或智能咭。

訊息

- ▶ **移動**：在文字訊息下，您可將訊息移至手機或智能咭。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

注意

- ▶ 您可檢查電郵中已儲存的電郵內容[功能表 5.3]。

郵箱

功能表 5.3

使用本功能表時，您可連線至遠端郵箱收取新的電郵訊息，也可不登入電郵伺服器，直接檢視之前提取的電郵訊息。

「郵箱」中最多可儲存 300 封電郵。

1. 選擇電郵帳戶，然後按 以檢視已接收的電郵列表。
2. 在電郵列表中，透過左軟鍵 [選項]，您可使用以下功能。視乎電郵郵箱的類型 (POP3 或 IMAP4)，支援的 [選項] 亦會有所不同。

- ▶ **回覆**：建立對所選訊息的寄件者或所有收件者之回覆。
- ▶ **轉寄**：將所選電郵訊息轉寄給其他人。
- ▶ **複製至**：複製所選訊息到其他資料夾。(只限 IMAP4)
- ▶ **重新接收**：重新接收新電郵訊息。(只限 POP3)
- ▶ **訊息同步**：與伺服器進行電郵訊息同步。(只限 IMAP4)
- ▶ **刪除**：若使用 POP3，則刪除電郵。若使用 IMAP4，則變更旗標。
- ▶ **從伺服器刪除**：從伺服器刪除電郵。(只限 POP3)
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **設為已讀／未讀**：可將所選電郵設定為已讀或未讀。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **永久刪除**：從伺服器刪去所選訊息。(只限 IMAP4)
- ▶ **排序方式**：按所選類型排序電郵。
- ▶ **訊息資訊**：訊息的簡要資訊，包括大小、類型、日期和檔案名。

訊息

草稿

功能表 5.4

您可檢視儲存的訊息。選擇訊息，然後按 **OK** 以編輯該訊息。透過左軟鍵 [選項]，您可以使用以下功能。

- ▶ **發送**：傳送所選的訊息。
- ▶ **刪除**：刪除所選訊息。
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間、大小及儲存位置。
- ▶ **編輯**：您可以檢視選定的訊息。

寄件匣

功能表 5.5

「寄件匣」是待發訊息的臨時儲存位置。發送失敗的訊息也置於「寄件匣」中。例如，如果未正確設定「電郵」帳戶，電郵將會置於「寄件匣」中。

1. 選擇一條訊息。
2. 透過左軟鍵 [選項]，您可以使用以下功能。

[對於發送/等待發送的訊息]

- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **取消發送**：您可停止發送／等待發送狀態。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

[對於發送失敗的訊息]

- ▶ **重新傳送**：重新傳送所選訊息。
- ▶ **刪除**：刪除目前的訊息。
- ▶ **儲存到草稿**：您可將訊息發送到草稿。
- ▶ **建立新訊息**：您可編寫新的訊息或電郵。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間及儲存位置。

已傳送項目

功能表 5.6

顯示已發送的訊息 (訊息/電郵)。

[選項]

- ▶ **轉寄**：轉寄所選訊息。
- ▶ **編輯**：可編輯所選訊息。
- ▶ **刪除**：刪除所選訊息。
- ▶ **建立新訊息**：可編寫新訊息。
- ▶ **標記/取消標記**：您可選擇標記或標記全部以進行多重刪除。
- ▶ **篩選**：按所需訊息類型顯示訊息。
- ▶ **訊息資訊**：您可檢查訊息類型、日期和時間、大小及儲存位置。

訊息

常用範本

功能表 5.7

文字範本 (功能表 5.7.1)

透過左軟鍵 [選項]，您可新增、編輯和刪除常用的實用短語。

注意

- ▶ 取決於服務供應商的不同，部份常用範本會儲存為預設設定。

多媒體範本 (功能表 5.7.2)

透過左軟鍵，您可使用以下功能。

- ▶ **新增**：您可建立新多媒體範本。
- ▶ **編寫多媒體訊息**：透過所選範本，建立多媒體訊息。
- ▶ **編輯**：編輯所選範本。
- ▶ **刪除**：刪除所選範本。

- ▶ **全部刪除**：刪除所有範本(預載的範本除外)

情感圖示

功能表 5.8

您可新增、編輯和刪除情感圖示。您可在編寫訊息時插入喜歡的情感圖示。按下確認鍵，您便可檢視該情感圖示。

設定

功能表 5.9

文字訊息 (功能表 5.9.1)

您可設定文字訊息的相關選項。

1. **文字訊息中心**：輸入文字訊息中心的地址。
2. **發送報告**：啟用該選項後，您可驗證該訊息是否已成功發送。
3. **有效時期**：這項網絡服務可讓您設定訊息儲存在短訊中心的期限。

4. **發送長文字為：**將長文字訊息選為多個文字訊息或多媒體訊息。

多媒體訊息 (功能表 5.9.2)

您可設定多媒體訊息的相關選項。

1. **接收模式：**您可分別使用本地網絡和漫遊網絡來設定接收模式。如果選擇「自動」，您會自動接收到多媒體訊息。如果選擇「手動」，則僅可在收件匣中接收通知訊息，然後再決定是否下載多媒體訊息。
2. **發送報告：**可讓您決定是否要求收件者發送確認郵件，及是否發送確認郵件給寄件者。
 - ▶ **要求報告：**決定是否對多媒體訊息要求發送確認郵件。
 - ▶ **允許報告：**決定是否針對發送確認郵件要求允許傳送發送確認郵件。
3. **閱讀回覆：**可讓您決定是否對收件者要求閱讀確認郵件，與是否允許發送閱讀確認郵件給寄件者。
 - ▶ **要求回覆：**決定是否對多媒體訊息要求閱讀確認郵件。
 - ▶ **允許回覆：**決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。
4. **重要性：**您可選擇訊息的重要性(最低優先、正常優先及最高優先)。
5. **有效時期：**發送多媒體訊息時，可讓您設定訊息的有效時期。該訊息僅會在設定的期限內儲存在多媒體訊息伺服器中。
6. **投影片播放時間：**編寫訊息時，可讓您設定每頁的播放時間。

訊息

- 發送時間：**設定向收件者傳送訊息的時間。多媒體訊息中心會在發送時間後發送訊息。
- 多媒體訊息中心：**允許您設定網絡資訊，如 MMSC 和 WAP 網閘，以發送多媒體訊息。使用左軟鍵 [選項]，您可啟動、新增或刪除網絡設定。由核取符號選取的網絡設定名稱是目前的設定值。透過按右軟鍵 [編輯]，您可在編輯模式下檢視和編輯網絡設定的內容。在「選項」下建立新網絡設定時，亦會顯示編輯畫面。每個項目的含義如下。
 - 標題：**網絡設定名稱。
 - MMSC 主頁：**輸入多媒體訊息中心的網址。
 - 多媒體訊息 proxy 伺服器：**輸入 WAP 網閘地址和連接埠號碼。

- 連線模式：**選擇其中一種連線模式。(TCP with proxy、TCP without proxy及UDP)
- 接入點：**指定存取點名稱。(查看WAP 連線設定。)

按確認鍵 [儲存] 以儲存變更並完成多媒體訊息中心設定。

電郵 (功能表 5.9.3)

您可設定用於接收和發送電郵的設定。

- 電郵帳戶：**您可建立或設定包含電郵伺服器和使用者的 ID 的電郵帳戶。按左軟鍵 [選項]，您即可編輯所選電郵帳戶 - 「2.編輯」。您可透過 **OK** 選擇一個電郵帳戶，以用於發送郵件。透過左軟鍵 [選項]，您可選擇以下功能。

- ▶ **新增**：建立新電郵帳戶。
 - ▶ **編輯**：編輯所選的電郵帳戶。
 - ▶ **檢視**：檢視所選電郵帳戶。
 - ▶ **標記/取消標記**：使用標記/取消標記選項進行多項刪除。
 - ▶ **刪除**：刪除所選的電郵帳戶。包含在帳戶中的所有電郵將會被刪除。
2. **允許回覆電郵**：決定是否針對閱讀確認郵件要求允許發送閱讀確認郵件。
 3. **要求回覆電郵**：決定是否要求閱讀確認郵件。
 4. **擷取時隔**：您可設定「擷取時隔」，自動從內送郵件伺服器中提取電郵。新郵件抵達時，畫面的頂端會顯示圖示。您可將自動接收時隔選為關閉、15分鐘、30分鐘、1小時、2小時、4小時或8小時。請注意，使用此「擷取時隔」功能可能需要另外收費。
 5. **轉寄與回覆時加入原始訊息**：決定是否在轉寄或回覆訊息時加入原始訊息。
 6. **包括附件**：決定轉寄訊息時是否包括附件。
 7. **在漫遊中自動擷取**：進入漫遊區域時自動接收電郵帳戶。
 8. **新增電郵通告資訊**：在 UE 中自動提取到新電郵訊息時，您可決定是否自動彈出通知資訊。
 9. **簽名**：您可設定文字簽名，附加在電郵的最後。設定的簽名字會會在撰寫郵件時，自動或手動地附加到電郵結尾處。
 10. **重要性**：您可選擇電郵的重要性（最低優先、正常優先及最高優先）。

訊息

建立新電郵帳戶

1. 從電郵帳戶功能表選項中選擇「新增」。
2. 需要設定以下項目。

標題	輸入一個標題。
我的名字	輸入我的名稱
用戶帳號	輸入電郵帳戶的用戶帳號。
密碼	輸入電郵帳戶密碼。
電郵地址	輸入外寄郵件的電郵地址。
回覆電郵地址	輸入要回覆的電郵地址。
外寄郵件伺服器	輸入外寄電郵伺服器。
內送郵件伺服器	輸入內送電郵伺服器。

標題	輸入一個標題。
最大接收大小	使用左軟鍵選擇最大的電郵接收大小。接收大小限制不可超過 1MB。
郵箱類型	使用左軟鍵將信箱類型選為 POP3 或 IMAP4。
儲存到伺服器	使用左軟鍵決定是否在內送郵件伺服器中保留訊息副本。當信箱類型設定為 IMAP4 時，訊息副本始終會儲存到伺服器上。
儲存已發送的郵件到	選擇儲存已發送郵件的位置 (信箱類型設定為 IMAP4 時)。信箱類型為 POP3 時，已發送的郵件始終會儲存到手機中。

標題	輸入一個標題。
存取點	選擇連線到互聯網的接入點。您可使用左軟鍵選擇設定的接入點。
自動接收	使用左軟鍵決定是否啟用「自動接收」功能。使用自動接收，您可設定自動接收時隔。
進階設定	使用左軟鍵選擇是否編輯以下欄位。
SMTP 連接埠號碼	輸入郵件伺服器連接埠號碼。一般而言，SMTP (外寄郵件伺服器連接埠號碼) 為 25。

標題	輸入一個標題。
內送郵件伺服器連接埠	輸入郵件伺服器連接埠號碼。一般而言，內送郵件伺服器連接埠號碼為 110(POP3) 或 143(IMAP4)。
SMTP 驗證	使用左軟鍵決定外寄郵件伺服器是否需要進行驗證。當 SMTP 驗證設定為「開啟」時，您可輸入 SMTP 使用者名稱和 SMTP 密碼以進行 SMTP 驗證。
SMTP 使用者名稱	輸入 SMTP 使用者名稱
SMTP 密碼	輸入 SMTP 密碼

訊息

標題	輸入一個標題。
APOP 安全登入	使用左軟鍵決定是否啟用「APOP 安全登入」功能。當信箱類型為 IMAP4 時，則 APOP 安全登入始終設定為「關閉」。

3. 按確認鍵 [儲存] 以完成電郵帳戶設定。

編輯電郵帳戶

1. 從電郵帳戶列表中選擇所選電郵帳戶，並按左軟鍵 [選項]，然後選擇「編輯」。
2. 透過上下移動游標，可編輯所需欄位。

3. 完成設定後，請按確認鍵 [儲存] 以完成電郵帳戶設定。

注意

- ▶ 嘗試變更信箱類型時，之前下載的所有電郵將會被刪除。

視像留言信箱 (功能表 5.9.4)

您可新增或編輯視像留言信箱。

留言信箱 (功能表 5.9.5)

您可新增或編輯留言信箱。

服務訊息 (功能表 5.9.6)

您可配置服務訊息接收選項。

資訊服務 (功能表 5.9.7)

- ▶ **區域廣播**：您可設定接收模式。
- ▶ **頻道**：您可新增或編輯頻道。
- ▶ **語言**：您可選擇所需語言。資訊服務訊息將會以您選擇的語言顯示。

我的檔案

我的圖像

功能表 6.1

「圖片」資料夾由用於透過互聯網下載圖片的內建連結和預設圖像組成。

要檢視圖片的詳細資料，請按確認鍵。

選定一個檔案後，透過按左軟鍵 [選項]，可顯示以下選項。

▶ **發送**：只要所選圖片沒有受到「數碼版權管理 (DRM)」保護，您便可經由訊息、電郵或藍芽傳送。

▶ **使用方式**

- **牆紙**：您可將目前選定的圖像設定為牆紙。

- **撥出通話**

- **通訊錄圖像**：您可將目前選定的圖像設定為通訊錄圖像。您可在通訊錄中設定所選記錄的圖像。接到來電時，儲存在該聯絡人中的圖像便會出現。

- **開機**：您可將某圖像設為開機屏幕主題。

- **關機**：您可將某圖像設為關機圖像。

▶ **移動**：可將檔案移動到其他資料夾。

▶ **複製**：可將檔案複製到其他資料夾。

▶ **刪除**：刪除所選圖像。

▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。

▶ 檔案

- **重新命名**：可重新命名圖像。
- **編輯**：可編輯圖像。
- **檔案資訊**：顯示關於選定圖像檔案的資訊。
- ▶ **建立新資料夾**：可在目前選定的資料夾中建立新資料夾。
- ▶ **播放投影片**：您可以播放投影片方式檢視圖像。
- ▶ **排序方式**：可按名稱、日期或檔案類型來排序。
- ▶ **多格子檢視**：可以或多格子檢視來檢視圖像。
- ▶ **記憶體狀態**：可檢視記憶體狀態 (手機記憶體或外置記憶體)。

我的聲音

功能表 6.2

「聲音」資料夾由用於下載鈴聲和音樂的內置連結及包含預設聲音和錄音的資料夾組成

選定一個檔案後，透過按左軟鍵 [選項]，可顯示以下選項。

- ▶ **發送**：只要所選圖像沒有受到「數碼版權管理 (DRM)」保護，您便可經由訊息、電郵或藍芽傳送。
- ▶ **使用方式**
 - **話音鈴聲**：您可將某聲音檔設為接到語音來電時的鈴聲。
 - **視像鈴聲**：您可將某聲音檔設為接到視像來電時的鈴聲。
 - **訊息提示音**：您可將某聲音檔設為收到訊息時的鈴聲。
 - **開機**：您可將某聲音檔設為手機開機時的鈴聲。

我的檔案

- **關機**：您可將某聲音檔設為手機關機時的鈴聲。
- ▶ **移動**：可將檔案移動到其他資料夾。
- ▶ **複製**：可將檔案複製到其他資料夾。
- ▶ **刪除**：刪除所選圖像。
- ▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。
- ▶ **檔案**
 - **重新命名**：可重新命名圖像。
 - **檔案資訊**：顯示關於選定圖像檔案的資訊。
- ▶ **排序方式**：可按名稱、日期或檔案類型來排序。
- ▶ **記憶體狀態**：可檢視記憶體狀態（手機記憶體或外置記憶體）。

我的影片

功能表 6.3


您可在此處管理或發送下載或錄製的短片。

若按下 **OK** [連接]，您便可啟用該影片檔。


透過「影片」列表中的左軟鍵 [選項]，可執行以下操作。

- ▶ **發送**：只要所選短片沒有受到「數碼版權管理 (DRM)」保護，您便可經由訊息、電郵或藍芽傳送。
- ▶ **使用方式**：可將影片設定為話音鈴聲或視像鈴聲。
- ▶ **移動**：將檔案移至手機記憶體或外置記憶體中。
- ▶ **複製**：複製手機記憶體或外置記憶體中的檔案。

- ▶ **刪除**：刪除所選影片。
- ▶ **標記/取消標記**：使用標記功能，您可發送、刪除、移動和複製多個檔案。
- ▶ **檔案**
 - **重新命名**：可重新命名影片。
 - **檔案資訊**：顯示關於選定影片檔案的資訊。
- ▶ **建立新資料夾**：可建立新資料夾。
- ▶ **排序方式**：您可以按名稱、日期或類型來排序檔案。
- ▶ **記憶體狀態**：顯示記憶體狀態（手機記憶體或外置記憶體）。

透過影片播放器，您可觀賞影片。影片檔案以縮圖顯示在列表中。使用 ，您可選擇所需影片。

選擇所需的影片後，選擇「播放」可觀賞錄製的影片。

按下確認鍵（「播放」）時，短片會使用Media Player 進行播放。要暫停播放，請在播放過程中按。要繼續播放，請再次按 。

要擷取畫面截圖，請於暫停播放時選擇選項「3.擷取」。

要以全屏幕檢視目前播放的內容，請於播放期間選擇選項「1.全屏幕檢視」。

要恢復到之前的畫面大小，請在全屏模式下再次按右軟鍵。

我的檔案

在 Media Player 中觀賞短片時，可使用以下選項：

- ▶ **橫向檢視：**您可以橫向檢視模式來檢視影片。
- ▶ **靜音/取消靜音：**如果音量設定為大於零，則靜音模式會啟用；而當音量設定為零，則取消靜音模式會啟用。
- ▶ **拍攝：**可將暫停畫面的內容儲存為一個圖像檔案 (僅可在暫停模式下)。
- ▶ **重複：**可設定重複選項 (無/目前檔案/全部檔案)。
- ▶ **檔案資訊：**播放時，您可檢查檔案的資訊 (檔案名稱、大小、日期、類型、長度和保護)。

- ▶ **發送：**只要影片沒有受到「數碼版權管理 (DRM)」保護，您便可經由訊息、電郵或藍芽傳送。
- ▶ **刪除：**刪除所選影片。
- ▶ **使用方式：**可將影片設定為話音鈴聲或視像鈴聲。

我的遊戲及應用程式

功能表 6.4

在此功能表下，您可輕鬆下載遊戲和其他應用程式。當中有兩個資料夾，預設為「遊戲」和「應用程式」。每個資料夾都有下載遊戲或應用程式的內建連結。請注意，使用網上服務可能需要另行收費。

其他

功能表 6.5

除圖片、聲音、影片、遊戲和應用程式的其他檔案均儲存在該資料夾中。

我的記憶咭

功能表 6.6

若另購外置 microSD 記憶咭，則可儲存及管理更多的內容。

工具



快選功能表


功能表 7.1

您可指定要儲存到「快選功能表」中的功能。您可在「快選功能表」中儲存經常使用的功能。

鬧鐘

功能表 7.2

如果您設定鬧鐘，則  會顯示在指示符列中。指定的鬧鐘會在設定的時刻響鈴。按  以停止鬧鐘後，鬧鐘隨即釋放。按左軟鍵 [延後] 並選擇延後間隔。鬧鐘響鈴停止，並在所選延後時間後恢復響鬧。您最多可設定 5 個鬧鐘。

1. 根據需要，在鬧鐘列表中選擇要設定的鬧鐘。如果沒有鬧鐘，請按左軟鍵 [新增] 以新增鬧鐘。
2. **設定/取消鬧鐘**：透過使用可指定鬧鐘為開啟狀態的選項或透過選擇響鬧時間來設定或取消鬧鐘。
3. **輸入響鬧時間**：透過指定小時和分鐘，輸入所需的響鬧時間。如果手機採用 12 小時的時間格式，則可選擇「AM」或「PM」。
4. **選擇重複模式**：使用  選擇所需重複模式，或者透過按左軟鍵 [列表] 從列表中選擇所需的一項。
5. **選擇鈴聲**：透過按左軟鍵 [編輯] 開啟列表，選擇要在鬧鐘時間響鬧的鈴聲。
6. **輸入備忘錄**：輸入鬧鐘名稱。
7. **延後**：可設定鬧鐘的延後間隔。
8. 完成鬧鐘設定後，按確認鍵 [儲存]。

注意

- ▶ 即使手機已關閉，鬧鈴仍會響鈴。




計算機

功能表 7.3

計算器模組可讓您執行基本的算術功能(如加、減、乘、除)以及一些科學計算功能。(sin、cos、tan、log、ln、exp、sqrt、deg、rad)

1. 按下左軟鍵 [選項]。
2. 選擇適當的函數。

您可透過數字鍵輸入數字，透過  /  和  /  輸入運算符。

按  可輸入小數點。每次按  後，系統會以相反方向連續刪除字元。按住 ，所有字元會以相反方向一次過刪除。

計算完成後，結果會顯示在畫面上，按符號可將結果儲存到該符號中，然後繼續計算。

單位轉換器

功能表 7.4

使用該功能表，使用者可轉換匯率、面積、長度、重量、溫度、體積和速度。

匯率 (功能表 7.4.1)

1. 選擇「匯率」功能表。
2. 使用者可使用功能表「更改匯率」來設定外幣匯率。

工具

3. 最多可輸入 6 種對應於英鎊的貨幣匯率，然後按 [儲存]。然後，您可將一種貨幣轉換為另一種。
4. 您可檢視多達 6 種貨幣單位的值。
5. 按 [重新設定] 以清除目前輸入欄位。
6. 要結束貨幣換算功能，請按 [返回] 鍵。

面積 (功能表 7.4.2)

1. 選擇「面積」功能表。
2. 使用 [列表]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。
4. 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。

5. 要結束面積換算功能，請按 [返回] 鍵。

長度 (功能表 7.4.3)

1. 選擇「長度」功能表。
2. 使用 [列表]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。
4. 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
5. 要結束長度換算功能，請按 [返回] 鍵。

重量 (功能表 7.4.4)

1. 選擇「重量」功能表。
2. 使用 [列表]，選擇要轉換的單位。
3. 輸入標準單位並檢視轉換值。

- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
- 要結束重量換算功能，請按 [返回] 鍵。

溫度 (功能表 7.4.5)

- 選擇「溫度」功能表。
- 使用向上或向下按鍵，將游標置於所需的單位上。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
- 要結束溫度換算功能，請按 [返回] 鍵。
- 透過選擇 [-]，您可插入負數值。

體積 (功能表 7.4.6)

- 選擇「體積」功能表。
- 使用 [列表]，選擇要轉換的單位。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
- 要結束體積換算功能，請按 [返回] 鍵。

速度 (功能表 7.4.7)

- 選擇「速度」功能表。
- 使用 [列表]，選擇要轉換的單位。
- 輸入標準單位並檢視轉換值。
- 按 [重新設定] 以清除目前輸入欄位，並將游標置於輸入欄位中。
- 要結束速度換算功能，請按 [返回] 鍵。

工具

世界時間

功能表 7.5

世界時間功能可提供世界主要城市的時間資訊。

1. 您可使用左軟鍵「選項 → 新增城市」或「選項 → 新增城市 → 地圖」，選擇所需所在城市。
2. 您可使用左軟鍵「選項 → 變更城市」或「變更目前的城市」來變更城市。
3. 您可使用左軟鍵「選項 → 夏令時間」來套用夏令時間。
4. 您可選擇類比時鐘模式「選項 → 類比時鐘」。

智能卡服務

功能表 7.6

您的服務供應商可透過智能咭提供特殊的應用程式，例如家庭銀行、股市等等。如您已註冊其中一種服務，服務名稱會出現在主功能表的最末處。透過「智能咭服務」功能表，您的手機將擁有未來的擴充性，可支援服務供應商提供的額外服務。有關詳情，請聯絡您的服務供應商。

新增

功能表 8.1

您可記錄新聯絡人的地址。您可輸入新聯絡人的名稱、不同的電話號碼和電郵地址。亦可將聯絡人指定給群組，包括圖像或替身、指定特定鈴聲以及輸入聯絡人備忘錄。

搜尋

功能表 8.2

執行通訊錄地址搜尋功能。預設情況下，搜尋操作按名稱來執行。目前的搜尋方法和找到的結果會顯示在「搜尋」視窗中。您可撥打電話或將訊息發送到所選的電話號碼。

快速撥號

功能表 8.3

透過該功能表，您可對快速撥號進行管理。快速撥號會在 2-9 之間設定。您可為特定聯絡人地址記錄多達 5 個不同號碼的快速撥號，亦可為同一聯絡人地址指定多個快速撥號號碼。

群組

功能表 8.4


透過該功能表，您可管理群組資訊 (同時包括儲存到手機和智慧咭中的資訊)。在手機記憶體中，有 5 種預設群組：家庭、朋友、同事、學校和重要人士。您可新增、編輯和刪除群組。未指定某號碼的鈴聲時，則來自該號碼的電話會將指定給該群組的鈴聲作為其自己的鈴聲。

通訊錄

服務撥號號碼

功能表 8.5

您可檢視由服務供應商指定的「服務撥號號碼」(SDN)列表(如果智能咭支援)。

此類號碼包括緊急電話、電話號碼查詢和留言信箱號碼。選擇服務號碼後，按  撥打服務電話。

本手機號碼

功能表 8.6

可讓您顯示智能咭中的手機號碼。您可將自己目前的號碼儲存在智能咭中。

我的名片

功能表 8.7

您可透過按左軟鍵 [新增] 來建立個人名片。輸入姓名、號碼、電郵和圖像後，您可用其作為傳送訊息時的名片。

設定

功能表 8.8

顯示資訊 (功能表 8.8.1)

- ▶ **通訊錄檢視：**選擇要顯示的通訊錄資訊(從手機、智能咭或手機及智能咭)。「手機及智能咭」為預設設定。
- ▶ **名稱顯示：**您可設定以名稱順序顯示。
- ▶ **顯示圖像：**選擇是否顯示圖像/替身。

通訊錄同步化 (功能表 8.8.2)

注意

- ▶ 該服務並不可用於所有國家。有關詳情，請聯絡您的網絡商。

您可將通訊錄內容直接傳送到伺服器。

複製 (功能表 8.8.3)

您可在手機記憶體和智慧咭記憶體之間複製通訊錄資料。您可複製全部，或依次序複製。

移動 (功能表 8.8.4)

您可在手機記憶體和智慧咭記憶體之間移動通訊錄資料。您可移動全部，或依次序移動。

備份通訊錄 (功能表 8.8.5)

您可透過格式化 vcard 將所有通訊錄資料儲存到外置記憶咭。

還原通訊錄 (功能表 8.8.6)

您可透過格式化 vcard 將儲存在外置記憶咭中的所有通訊錄資料還原到手機記憶體。

清除通訊錄資料

(功能表 8.8.7)

清除所有通訊錄的資料。您可刪除儲存在手機和智慧咭上所有通訊錄的資料。

記憶體資訊 (功能表 8.8.8)

您可在此功能表中了解到記憶體的狀態。

瀏覽器

主頁

功能表 9.1

您可啟動網頁瀏覽器並存取主頁。

輸入地址

功能表 9.2

您可手動輸入地址並存取相關網頁。

- ▶ 要輸入符號，請按左軟鍵 [選項] 並從選項功能表中選擇「1.附加符號」以顯示符號表格。
- ▶ 要切換輸入模式，請按左軟鍵 [選項] 並選擇「2.輸入法模式」。

書籤

功能表 9.3

您可儲存最常存取或喜歡的網址／網頁。可對書籤執行「發送」、「新增」、「編輯」、「標記/取消標記」或「刪除」等操作。數個預設定的網址將會儲存為書籤。

新增書籤

1. 按左軟鍵 [選項] 並選擇「2.新增」。
2. 輸入標題及相關的網址資訊。
3. 按 **OK** 以儲存。

連線到所需書籤

按 **OK** 可連線到所需書籤。

將書籤發送給其他人

從「選項」功能表中選擇「發送」。您可透過訊息或電郵發送。

刪除書籤

從「選項」功能表中選擇「刪除」。透過「標記/取消標記」選項，您可刪除多個書籤。

編輯書籤

從「選項」功能表中選擇「編輯」。編輯標題及相關的網址資訊。按 **OK** 以儲存。

注意

- ▶ 您可以享受流動電視服務。

已儲存網頁

功能表 9.4

本手機可將畫面上的網頁儲存為離線檔案。可儲存多達 20 個網頁。

記錄

功能表 9.5

您可檢視曾經連線過的頁面之列表。

設定

功能表 9.6

您可變更瀏覽器、連接顯示、安全和憑證的設定。

網絡設定 (功能表 9.6.1)

按 **OK** 選擇適合的網絡設定。此舉可啟動使用瀏覽器的網絡設定。

瀏覽器

外觀設定 (功能表 9.6.2)

把瀏覽器預設字元編碼設為以下之一：

自動、英文(ASCII)、英文(ISO)、英文(拉丁)、Unicode(UCS2 BE)、Unicode(UCS2 LE)、Unicode(UCS2 自動)、Unicode(UTF-16 BE)、Unicode(UTF-16 LE)、Unicode(UTF-16 自動)、Unicode(UTF-8)。

快取記憶 (功能表 9.6.3)

啟用快取模式讓您可以將存取過的網頁儲存到手機中。若網頁經已在快取模式儲存，則會大大提高隨後在同一網頁瀏覽的網頁載入速度。

Cookies (功能表 9.6.4)

啟用 Cookies 讓您可以儲存伺服器傳送的Cookies。停用此功能可阻止 Cookies 儲存到您的手機中。

重設設定 (功能表 9.6.5)

選擇此選項，可將您的手機重設為預設瀏覽器設定。

安全 (功能表 9.6.6)

憑證列表

若已儲存，此處可顯示一份WTLS/TLS所必需的認證機構列表。您可從此列表檢視認證。

節段清除

使用該選項，可清除安全(WTLS/TLS)節段資料。您需要清除節段數據才可以建立新安全節段。

藍芽

功能表 *.1

藍芽 QD ID: B012660

藍芽連線

本手機採用內置藍芽無線技術，可讓您將手機無線連接到其他藍芽裝置，如免提裝置、電腦、PDA 或其他電話。

注意

- ▶ 我們建議，手機和藍芽裝置之間的距離不要超過 10 米。如果您的手機和其他藍芽裝置之間沒有固體物件，連線效果將會提高。

1. 開始使用

- 功能表 *. 連接 → 1. 藍芽 → 1. 開啟/關閉

要使用藍芽功能，您必須首先將其「開啟」。

2. 搜尋新裝置

- 功能表 *. 連接 → 1. 藍芽 → 2. 搜尋新裝置

使用此功能表，您可搜尋新藍芽裝置並將其與手機配對。請閱讀 <配對裝置>。

3. 配對裝置

若沒有配對裝置。

選項 → 新增

若已有配對裝置。

- 功能表 *. 連接 → 7. 連接 → 1. 藍芽 → 3. 配對裝置

連接

選項

- ▶ **新增裝置**：使用該功能表，您可將新藍芽裝置與手機配對。
- ▶ **重新命名**：透過此功能表，您可為配對裝置使用別名。
- ▶ **連線**
 1. 如果您想建立與所選裝置的連接，請選擇「連接」。
 2. 如果您想中斷與所選裝置的連接，請選擇「中斷」。
- ▶ **刪除**：使用該功能表，您可刪除配對的藍芽裝置。
- ▶ **刪除全部**：使用該功能表，您可以刪除所有配對的藍芽裝置。

4. 設定藍芽設定

- **功能表 * 連接** → 1. **藍芽** → 4. **設定**
- **顯示我的手機**：將「顯示我的手機」設定為「可見」，這樣，當其他裝置搜尋藍芽裝置時，便可偵測到您的手機。如果您選擇 [隱藏]，當其他裝置搜尋藍芽裝置時，便無法偵測到您的手機。
- **我的名字**：您可命名或重新命名您的手機在其他裝置上顯示的名稱。僅當「顯示我的手機」設為「可見」時，您的手機名稱才能顯示在其他裝置上。
- **支援的服務**：此功能表顯示了手機中的可用藍芽服務列表。
- **我的位址**：此功能表顯示了您的藍芽裝置位址。

注意

- ▶ 當使用者在手機上使用藍芽裝置時，手機可能存在安全風險。因此，我們建議在設定或裝置配對後，將藍芽的能見度設定為「隱藏」。不論透過何款藍芽配對裝置接收文件，在檢查寄件者詳細資料後，您可選擇接受或拒絕連線。

<配對裝置>

1. 要搜尋配對的藍芽裝置，請按選項 > 新增裝置。
2. 畫面會顯示「搜尋藍芽裝置」。您可搜尋到 10 米範圍內的藍芽裝置。
3. 找到藍芽裝置後，這些裝置會列於畫面上。如果找不到藍芽裝置，系統會詢問您是否需要重新搜尋。

4. 配對程序

- 按 [新增]。畫面上會顯示要求您輸入密碼的視窗。
- 建立密碼 (由 1 至 16 數位組成) 後，其他裝置的使用者必須輸入配對密碼。其他設備的使用者必須知道密碼才可進行驗證。

<連接耳機或免提裝置>

1. 根據「配對裝置」部份中介紹的程序來連接耳機。
2. 要使用耳機，請從配對裝置中選擇耳機，然後選擇「選項 > 連接」。
3. 要中斷耳機連接，請從配對裝置中選擇耳機，並選擇「選項 > 中斷連接」。

連接

<刪除裝置>

1. 從配對裝置中選擇要刪除的裝置。
2. 您可以透過選擇「選項 > 刪除」來刪除裝置。要刪除所有配對裝置，請選擇 選項 > 刪除全部。

<使用藍芽傳輸資料>

1. 要將資料從您的手機傳輸到其他藍芽裝置上，請首先選擇儲存目標資料的應用程式。例如，要將「我的檔案」中的檔案傳送到其他裝置，請選擇「功能表 > 6」。[我的檔案]
1.我的圖像 / 2.我的聲音 / 3.我的影片 / 5.其他 / 6.我的記憶咭
> 選擇要傳輸的資料 > 選項 > 發送 > 3.[藍芽]
2. 傳輸資料
 - 1) 配對裝置將會出現。如果所需裝置不在列表中，請選擇 [更新]。

- 2) 從畫面上列出的裝置中選擇用於接收資料的裝置並按下。
- 3) 若對方允許您的傳輸要求，便會開始傳輸資料。

<使用藍芽接收資料>

若有另一方試圖傳輸資料，接受連接的問題將會出現在畫面之上。如果您允許連接，這些資料便會傳輸到您的手機上。

資料傳輸過程中，「藍芽」圖示會變為「檔案傳輸」圖示。

而接收到的檔案會根據檔案類型儲存在相應的資料夾中。例如，圖像檔案會自動儲存在「我的圖像」資料夾中。

伺服器同步

功能表 * .2

注意

- ▶ 該服務並不可用於所有國家。請聯絡您的網絡商，了解更多資訊。

如果網絡商支援同步服務，則該服務功能將經由無線網絡同步手機中的資料與伺服器上的資料，如通訊錄、日曆、待辦事項及備忘錄。

連接

1. 選擇連線項目，然後按 **OK**。
2. 透過所選伺服器網絡設定連線到伺服器，當執行同步操作時，會顯示同步動畫。

記錄

選擇「記錄」項目，然後按 **OK** 來檢視上次執行的同步操作。

伺服器同步中心

1. 選擇「伺服器同步中心」項目並按 **OK**。
2. 該功能表可讓您設定同步伺服器的網絡設定。
 - ▶ **網絡設定檔名稱**：輸入網絡設定檔的名稱。
 - ▶ **主機地址**：聯絡您的服務供應商。
 - ▶ **SyncML proxy 伺服器**：聯絡您的服務供應商。
 - ▶ **用戶帳號**：輸入同步伺服器的使用者 ID。
 - ▶ **密碼**：輸入您的密碼。
 - ▶ **通訊錄**：選擇是否同步「通訊錄」。

連接

- ▶ **通訊錄名稱**：輸入伺服器存取的通訊錄資料庫名稱。
- ▶ **日曆**：選擇是否同步日曆。
- ▶ **行事曆名稱**：輸入伺服器存取的行事曆資料庫名稱。
- ▶ **待辦事項**：選擇是否同步待辦事項。
- ▶ **待辦事項名稱**：輸入伺服器存取的工作資料庫名稱。
- ▶ **備忘錄**：選擇是否同步備忘錄。
- ▶ **備忘錄名稱**：輸入伺服器存取的備忘錄資料庫名稱。
- ▶ **同步類型**：選擇同步類型。
- ▶ **存取點**：選擇用於資料連線的存取點。

USB 連接

功能表 *.3

您手機的 USB 連線可用於多種用途。使用者必須為各種用途設定 USB 連線。

如果使用者要使用 USB 記憶棒之類的「大容量儲存」功能，請在此功能表中選擇「大容量儲存」。「大容量儲存」只適用於外置記憶體。

如果使用者使用「大容量儲存」以外的撥號、電腦同步等其他功能，請在此功能表中選擇「資料服務」。











日曆

功能表 0.1

日程表查詢和搜尋

1. 按月參考

您可按月參考您的日程表。游標位於目前日期上，而指定的日期亦會標記出來。

針對游標所處日期而儲存的日程會由一個灰色的框表示。按快捷徑鍵  移至上一年，按  移至下一年，而按  移至今天。按  移至上一月，按  移至下一月。按  移至週日曆。您可使用  /  /  /  來移動日期。

2. 詳細參考

您可參考詳細的日程表，全部內容為使用者編定的日程表。您可使用左軟鍵 [選項]，透過 SMS (文字訊息)、MMS (多媒體訊息)、電郵或藍芽，將日程表發送給其他手機或互聯網網站。

搜尋日程表

您可以新增事項。您可設定開始日期、結束日期、開始時間、結束時間、內容、事件類型、重複和日程表鬧鐘。

- ▶ **設定類型**：約會、週年紀念和生日
- ▶ **設定重複**：一次、每天、每星期、每月、每年、使用者設定

記事簿

- ▶ **鬧鐘設定：**無鬧鐘設定、準時、15分鐘前、30分鐘前、1小時前、1天前、3天前、1星期前

刪除日程表

1. 刪除先前的記錄

使用該功能表，您可刪除過去的所有日程表。

2. 刪除全部記錄

使用此功能，您可刪除所有已儲存的日程表內容。

設定及重設假期

您可設定或清除使用者的假期。按左軟鍵[選項]並選擇「設定假期」。所選的日期會以紅色顯示。

要清除假日，請按左軟鍵 [選項] 並選擇「清除假日」。

日程表通知

如果使用者已完成鬧鐘設定，則指定的鬧鐘聲音將會響鈴。如果通知時間位於日程表開始時間之前，您可再次設定鬧鐘。

待辦事項

功能表 0.2

您可檢視、編輯和新增要完成的工作。工作按時間順序顯示。可透過不同的方式顯示已完成或未完成的工作。

新增

要新增工作，請按「待辦事項」列表管理畫面上的左軟鍵 [選項] 並選擇「新增事項」選項。

然後輸入該工作的日期、記錄和重要性。

完成資料輸入後，請按確認鍵 [儲存] 以儲存新工作。

詳細檢視和編輯

要檢視詳細工作內容，請將游標置於「待辦事項」列表中的所需項目上，然後按確認鍵。透過使用左軟鍵 [選項]，您可編輯和刪除工作。

設定工作狀態

已完成的工作會以刪除線標記，並顯示在「待辦事項」列表中未完成工作的下方。透過選擇「選項」，您可將「設為已完成」的工作「設為未完成」。

備忘錄


功能表 0.3

使用備忘錄管理功能，您可檢視並管理已儲存的備忘錄內容並新增備忘錄。

新增備忘錄

要新增備忘錄，請按左軟鍵 [新增] 或「選項」中的 [新增備忘錄]。輸入備忘錄內容。按確認鍵 [儲存]，您便可將備忘錄儲存到列表中。

編輯和刪除備忘錄

反白選取所需備忘錄並按  以檢視其內容。使用左軟鍵 [選項]，您可編輯或刪除備忘錄的內容。按右軟鍵 [返回]，您便可返回備忘錄管理畫面。您可透過「標記/取消標記」選擇「標記」或「標記全部」備忘錄，然後使用「刪除」選項來刪除備忘錄。

記事簿

保密備忘錄


功能表 0.4

您可編寫保密備忘錄以保護自己的私隱。您可使用此功能表來輸入安全密碼。

新增保密備忘錄

要新增備忘錄，請按左軟鍵 [新增] 或 [選項] 的「新增備忘錄」。輸入備忘錄內容。按確認鍵 [儲存]，您便可將備忘錄儲存到列表中。

編輯和刪除保密備忘錄

反白選取所需備忘錄並按  以檢視其內容。使用左軟鍵 [選項]，您可編輯或刪除備忘錄的內容。按右軟鍵 [返回]，您便可返回備忘錄管理畫面。您可透過「標記/取消標記」選擇「標記」或「標記全部」備忘錄，然後使用「刪除」選項來刪除備忘錄。

日期搜尋器

功能表 0.5

您可使用此功能找到所需日期。

設定

功能表 0.6

日曆 (功能表 0.6.1)

您可設定檢視日曆的配置值。

- ▶ **預設檢視：**您可設定檢視日曆的預設值；每月檢視、每星期檢視
- ▶ **每週開始時間：**1AM、2AM、3AM、4AM、5AM、6AM、7AM、8AM、9AM、10AM、11AM、12PM
- ▶ **每星期開始於：**您可設定開始一週的預設日；星期日、星期一

備份行事曆與待辦事項

(功能表 0.6.2)

您可在插入外置記憶咭時，建立已經儲存在手機中的日曆或待辦事項項目之備份檔案。

還原行事曆與待辦事項

(功能表 0.6.3)

您可在插入外置記憶咭時，還原日曆或待辦事項之備份檔案。

記憶體資訊 (功能表 0.6.4)

您可檢視與日曆、待辦事項、備忘錄和保密備忘錄相關的可用記憶體資料。

清除全部 (功能表 0.6.5)

您可清除所有日曆、待辦事項、備忘錄和保密備忘錄。

設定

手機

功能表 #.1

自動按鍵鎖 (功能表 #.1.1)

若啟用了此功能，在備用模式下如果沒有進行任何按鍵操作，手機按鍵將會自動鎖定。

語言 (功能表 #.1.2)

選擇顯示語言。您可選擇自動語言選項，以將顯示語言變更為智能咭的支援語言。

省電模式 (功能表 #.1.3)

決定是否啟用省電模式。

手機資訊 (功能表 #.1.4)

該功能可顯示智能咭的電話號碼、手機的型號和軟件版本。

屏幕

功能表 #.2

此功能表讓您可以把畫面的顯示選項及功能表的所有圖形介面進行個人化設定。


屏幕主題 (功能表 #.2.1)

您可設定顯示在屏幕上的屏幕顯示。

功能表樣式 (功能表 #.2.2)

您可從格子樣式和順序樣式中選擇所需的**功能表樣式**。

字體 (功能表 #.2.3)

使用 ，您可設定撥號字體大小和撥號字體顏色。

背景燈 (功能表 #. 2. 4)

您可分別設定屏幕背景燈持續時間和亮度以及鍵盤背燈時間。

問候語訊息 (功能表 #. 2. 5)

選擇「開啟」後，您可編寫問候語訊息。

日期及時間 功能表 #. 3

儘管目前的時間可在手機註冊到網絡時自動設定，使用者仍可透過該功能表直接設定時間和日期。使用者設定的時間僅在手機開機時有效。


時間 (功能表 #. 3. 1)

1. 從日期及時間列表中選擇時間項目，然後按 **OK**。
2. 使用導覽鍵移至所需的欄位：小時、分鐘、秒鐘或上午/下午欄位。(在您選擇的時間格式為 12 小時)
3. 使用數字鍵輸入小時、分鐘和秒鐘。
4. 使用 **▶/◀** 選擇時間格式。
5. 選擇小時指示格式，即關閉、布穀鳥鳴鐘及鐘聲。
6. 按確認鍵 [儲存]，使用指定的值設定時間。

日期 (功能表 #. 3. 2)

1. 從日期及時間列表中選擇日期項目，然後按 **OK**。
2. 使用數字鍵輸入年月日。

設定

3. 使用  選擇日期格式。
4. 按確認鍵 [儲存]，使用指定的值設定日期。

自動更新日期/時間

(功能表 #. 3. 3)

當「自動更新」設定為「開啟」時，時間和日期會根據目前時區自動更新。如果選取「首先確認」，則在自動更新前，會首先確認時間和日期更新。

夏令時間 (功能表 #. 3. 4)

選擇是否啟用夏令時間功能。您可將選取的本地城市夏令時間設定為 1 小時或 2 小時。

網絡

功能表 #. 4

選擇網絡 (功能表 #. 4. 1)

在自動和手動間選擇。

- ▶ **自動：**自動搜尋網絡並將手機註冊到網絡。推薦使用這種方式以便獲得最佳的服務和品質。
- ▶ **手動：**目前所有可用的 2G(GSM) 和 3G(UMTS) 網絡都會顯示，您可從中選擇要註冊的網絡。如果網絡註冊失敗，則目前所有可用的網絡會再次顯示，您可選擇其他網絡進行註冊。

網絡模式 (功能表 #. 4. 2)

在選擇網絡功能表中搜尋網絡時，您可設定要搜尋的網絡類型。

- ▶ **自動**：搜尋所有可連線的網絡。
- ▶ **仅限 3G**：僅搜尋支援 3G 的網絡。

首選列表 (功能表 #. 4. 3)

如果網絡在自動搜尋，則您可新增首選網絡以進行連線。而且，可使用以下選項。

- ▶ **新增**：透過以下操作，您可新增網絡。
 - **搜尋**：您可從手機所儲存的網絡列表中進行選擇。
 - **輸入新網絡**：您可輸入要新增的國家代碼 (MCC)、網絡代碼 (MNC) 和 RAT。
- ▶ **刪除**：刪除所選網絡。
- ▶ **編輯**：您可修改所選網絡的資訊。
- ▶ **上移**：將所選網絡上移。
- ▶ **下移**：將所選網絡下移。

設定

接入點 (功能表 #. 4. 4)

該功能表可顯示接入點列表。透過「選項」功能表，您可建立新網絡設定、刪除或編輯這些設定。但是，視乎國家的不同，您無法刪除或編輯預設設定。按下左軟鍵 [選項] 和「編輯」，您便可編輯以下配置項目。

連線標題	接入點網絡設定名稱。
連接方式	從列表中選擇連接方式。(預設為 UMTS。)
認證	從列表中選擇驗證。(預設為不驗證)
用戶名稱	服務供應商提供的資訊。
密碼	服務供應商提供的資訊。
APN	存取網絡的 APN 名稱。服務供應商提供的資訊。

按確認鍵可儲存任何配置變更。

串流 (功能表 #. 4. 5)

如果您想設定不同的網絡設定來播放串流內容，您可設定不同的網絡設定。

安全

功能表 #. 5

PIN碼要求 (功能表 #. 5. 1)

若將此設為「開啟」，則在您每次開機時，都會要求輸入 PIN 碼。

注意

- ▶ 在 PIN 碼輸入視窗中按右軟鍵可返回上一步驟。
- ▶ 3 次錯誤輸入 PIN 碼將導致 PIN 碼失效。此時，您需要輸入 PUK (PIN 解鎖鍵) 碼以重新設定 PIN 碼。
- ▶ 您最多可輸入 10 次 PUK 碼。(注意，如果您 10 次都輸入錯誤的 PUK 碼，則智能咭將會被鎖定，且必須更換。)
- ▶ 如果網絡商設定無法停用 PIN 碼要求，您將無法選擇此功能表項目。

設定

手機鎖 (功能表 #.5.2)

您可鎖定手機。我們提供了以下 4 種鎖定功能。

在開機時: 一旦開機，手機即被鎖定。

在智能咭更換時: 如果更換了手機智能咭，手機則會被鎖定。

立即: 立即鎖定手機。

無: 停用手機鎖定功能。

您需要輸入安全密碼以確認該選擇。

- ▶ 要解除鎖定手機，您需要輸入安全密碼。

更改密碼 (功能表 #.5.3)

您可更改 PIN 碼、PIN2 碼和安全密碼。

記憶體管理員 功能表 #.6

手機共用記憶體 (功能表 #.6.1)

該功能可顯示手機用戶記憶體的狀態。因為該功能會掃描整個檔案系統，以進行統計，因此需要幾秒鐘時間。

手機預留記憶體 (功能表 #.6.2)

該功能可顯示用戶預留記憶體的狀態。常見內容包括「文字訊息」、「通訊錄」、「日曆」、「待辦事項」和「備忘錄」。

1. 鬧鐘(預設鬧鐘除外)
2. 通話記錄
3. 書簽(預設書簽除外)
4. 雜項

- ▶ 保密備忘錄
- ▶ 快選功能表(預設功能表除外)
- ▶ 瀏覽器 > 輸入網址 > 記錄
- ▶ 瀏覽器 > 瀏覽器記錄 > 儲存的網頁
- ▶ 訊息 > 最近使用的號碼
- ▶ 通話計費
- ▶ 通話時間

而且，它可以一個清晰的示意圖顯示每個項目的實際量與總量的對比。

智能咭記憶體 (功能表 #.6.3)

該功能可顯示智能咭用戶記憶體的狀態。

外置記憶體 (功能表 #.6.4)

該功能可顯示外置記憶咭用戶記憶體的狀態。該功能可顯示使用中 and 可用記憶體的使用狀態。

主要儲存裝置設定

(功能表 #.6.5)

您可選擇下載檔案的儲存體：手機記憶體或外置記憶體。

重設設定

功能表 #.7

選擇此選項，將您的手機重設為預設設定。您必須輸入安全密碼。

配件

手機配有多種配件。您可依據個人需要選擇所需配件。

旅行充電器

該充電器讓您在遠離住所或辦公室時亦可為電池充電。



標準電池



注意

- ▶ 請務必使用原裝 LG 配件。
- ▶ 不使用原裝配件可能會導致保養失效。
- ▶ 以上附件可因區域不同而有所差異，詳情可諮詢我們的區域服務商或代理商。

耳筒 (選擇性)

連接手機後便可以進行免提操作。包含耳機、話筒、接聽/結束按鈕。



SGEY0005516



SGEY0003210



SGEY0003209

軟件升級

LG 流動電話軟件升級 程式

有關安裝和使用此程式的更多資料，請瀏覽 <http://update.lgmobile.com>。

此功能可讓您在網上快捷方便地將軟件升級到最新版本，而無需到訪我們的服務中心。

由於流動電話軟件升級程式需要使用者在升級過程中全面監控，請確保繼續操作之前清楚每一步出現的指示和備註。請注意，在升級過程中移除 USB 數據傳輸線或電池可能會對流動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，建議您事先備份好任何重要資料，以策安全。

一般資料

產品名: KU250

系統: GSM900/DCS1800/PCS 1900, WCDMA 2100

淨重: 57.2g (不含電池)

適用溫度

標準: 55°C

充電中: 45°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU250,U250

Trade Name

LG

CE 0168

Applicable Standards Details

REUTE Directive 1999/5/EC

ETSI EN 301 488-01 V1.3.1, ETSI EN 301 488-07 V1.3.1

ETSI EN 301 488-17 V1.3.1, ETSI EN 301 488-24 V1.3.1

ETSI TS 101 010-1 V5.3.0 specified by ETSI EN 301 511 V8.0.2

ETSI TS 134 121 V5.3.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,

ETSI EN 300 328 V1.6.1

EN 60380/EN 60381:2001

EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name

Issued Date

Jin Seog, Kim / Director

10.Apr. 2007

LG Electronics Inc, Amsterdam Office
Veluwezoom 16, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 6940, e-mail : seo@in @ lge.com


Signature of representative

IKU250 用 户 手 册 I

- 简 体 中 文

本 文 档 是 3G 视 频 手 机 LG KU250 的 用 户 手 册。
LG Electronics 保 留 对 此 文 档 的 所 有 权 利。未 经 LG
Electronics 同 意，不 得 复 制、修 改 和 散 发 本 文 档。



内容

关于安全有效使用手机的准则 5

KU250 功能 11
打开视图

开始 13

安装USIM卡和手机
电池

给电池充电 14

断开充电器 16

如何使用 microSD 存储卡

存储卡格式化 18

开机/关机

常规功能 19

拨打电话

输入文本 22

菜单功能概览 24

游戏和应用程序 27

我的应用程序
设置

呼叫 28

拨打视频电话

通话记录 29

所有通话

拨出电话

已接来电

未接来电

通话计时

数据音量

通话费用 30

呼叫转移

语音来电

视频通话

全部停用

呼叫限制 31

语音来电

视频电话

全部停用

固定拨号

呼叫等待

通用设置 32

拒接来电

发送本机号码

自动重拨

接听模式 32
分钟提示

蓝牙接听模式 33

保存新号码

视频通话设置

模式 34

多媒体 35

相机

摄像机

音乐 36

最近播放

所有曲目

播放列表

艺术家

相册

流派

随机曲目

视频播放列表 37

语音备忘录 38

信息	40
创建新消息	
信息	
电子邮件	41
收件箱	42
邮箱	43
草稿箱	44
发件箱	45
已发送的项	
模板	46
文本模板	
多媒体模板	
图释	
设置	47
文本信息	
多媒体信息	
电子邮件	49
视频邮件	50
语音邮件	
服务信息	51
小区服务	

我的素材	52
我的图像	
我的声音	53
我的视频	
我的应用程序	55
其它	
我的存储卡	

工具	56
快速菜单	
闹钟	
计算器	57
换算器	
币种	
面积	
长度	58
重量	
温度	
体积	
速率	59
世界时间	
SIM服务	

电话本	60
新增	
搜索	
快速拨号	
群组	
服务号码	61
本机号码	
我的名片	
设置	
显示数据	
同步电话本	
复制	62
移动	
备份电话本	
恢复电话本	
清空电话本	
内存信息	
浏览器	63
主页	
输入地址	
书签	

内容

保存的网页 64

历史记录

设置

网络设定

外观设置

缓存 65

Cookies

恢复初始设定

安全性

连接 66

蓝牙

服务器同步 69

USB 连接 70

管理器 71

日历

任务 72

备忘录

私人备忘录

日期计算器

设置 73

日程表

备份日历和待办事项

恢复日历和待办事项

内存信息

全部清除

设置 74

手机

自动键盘锁

语言

省电

手机信息

显示

屏幕主题

菜单样式

字体

背景灯

问候语信息 75

日期和时间

时间

日期

自动更新日期/时间

夏令时

网络 76

选择网络

网络模式

首选列表

接入点 77

流媒体

安全性

需要 PIN 码

手机锁 78

更改密码

内存管理器

手机公用内存

手机剩余内存 79

USIM 卡内存

外部存储器

主存储器设置

恢复初始设置

附件 80

软件升级 82

技术数据 83

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

证书信息 (SAR)

本手机符合无线电波暴露的国际准则。本手机是一种无线电发射器和接收器。设计和制造都不能超过国际准则 (ICNIRP) 建议的射频 (RF) 暴露的发射限制。这些限制是完整准则中的一部分，为大众建立了射频的许可水平。此准则以由独立的科学组织通过定期充分地评估科学研究而制定的标准为基础。此准则包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。手机的暴露标准采用一种称为“特定吸收率”或 SAR 的测量单位。国际准则中规定的 SAR 上限值为 2.0 W/kg^* 。

SAR 测试是在所有测试的频带中以手机的最高认可功率电平进行发射时，使用标准操作位置执行的。SAR 是以最高认可功率电平来确定的，手机操作时的实际 SAR 值可能远小于最大值。这是由于手机设计以多个功率电平操作，从而只使用抵达网络所需的功率。因此一般而言，离基站越近则手机的功率输出越低。在新款手机可销售给大众之前，必须证明它符合欧洲 R&TTE 指令。此指令是保护用户及他人健康和安全所需满足的必要条件。对该手机进行测试时，人耳能够承受的 SAR 最大值为 1.24 W/kg 。

携带时，可使用皮带夹或底座固定，皮带夹和底座不得包含金属成分，应将手机置于身体以外 1.5 cm 的位置。本手机在用于耳朵附近的正常使用位置时，或位于距离身体以外 1.5 cm 的位置时，均符合 RF 暴露准则。在某些情况下，如果连接不可用，数据文件和信息的传输将会延迟，直至有可用连接。传输过程中，请保持上述分离距离。要传输数据文件或信息，本手机需要连接到网络。对该手机进行测试

关于安全有效使用手机的准则

时，身体能够承受的 SAR 最大值为 1.04 W/kg。

* 大众使用的手机的 SAR 限制为 2.0 瓦特/千克 (W/kg)，平均值超过十克薄纸。准则包括了安全裕量，以加强对公众的保护及补偿任何测量变量。SAR 值可能根据国家报道需要和网络频带而不同。有关其它地区的 SAR 信息，请参阅 www.lgmobile.com 上的产品信息部分。

警告!

请使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的相关证明或担保、甚至可能造成危险。

产品的保养与维护

- ▶ 请勿擅自拆装手机。(如需任何维修，请将其交给具备相关资格的服务技术人员。)
- ▶ 手机应远离诸如电视机、收音机或个人计算机等电器设备。
- ▶ 切勿将手机置于散热设备或炊具附近。
- ▶ 切勿抛掷手机。
- ▶ 切勿对手机造成任何机械振动或震荡。
- ▶ 手机套或乙烯基外包装均有可能对手机表面造成损伤。
- ▶ 请勿使用刺激性的化学药品(如酒精、苯、稀释剂等)或清洁剂来清洁手机。这存在引发火灾的危险。
- ▶ 切勿将手机置于过度烟尘环境中。
- ▶ 切勿将手机靠近信用卡或交通票卡;这有可能影响磁条中存储的信息。

- ▶ 切勿以尖锐物体接触屏幕; 否则将对手机造成损伤。
- ▶ 不要将手机暴露在液体或潮气中。
- ▶ 谨慎使用如耳机之类的配件。
- ▶ 如果将手机放在口袋或手提包时没有盖上手机插孔 (电源插销)、则金属物件 (如硬币、回形针或钢笔) 会使手机短路。请在不使用时始终盖好插孔。
- ▶ 切勿将手机放在微波炉上、否则会造成电池爆炸。
- ▶ 只有授权人员才能对手机及其配件进行维修。安装不当或非法规维修可能会发生意外、并因此使保修失效。
- ▶ 如果天线损坏、请勿使用手机。如果损坏的天线接触皮肤、则会导致皮肤轻度灼伤。请联系 LG 授权维修中心、以便更换损坏的天线。
- ▶ 请您谨慎使用诸如耳机和听筒等配件。使其线路不被卷折弄断并确保不要碰触天线。
- ▶ 手机标签包含有用于客户支持目的的重要信息。不要将其撕掉。

有效的手机操作

要以最少的耗电量发挥手机的最佳性能, 请您注意以下事项:

- ▶ 通话时请握住手机。直接向话筒中说话、天线朝上、并且手机应位于肩部之上。如果天线可以伸缩、则在通话时应拉出天线。
- ▶ 使用手机时请勿握住天线、因为这样不仅会影响通话质量、还将增加手机工作时的耗电量、从而缩短通话和待机时间。
- ▶ 如果您的手机支持红外线功能、切勿将红外线对准任何人的眼睛。

关于安全有效使用手机的准则

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- ▶ 在未经允许的情况下、不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上、即胸前的口袋内。
- ▶ 手机可能会对某些助听器造成干扰。
- ▶ 微弱的干扰可能会影响电视、收音机、个人计算机等。
- ▶ 不要折弯、刮擦或将其暴露在静电下。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- ▶ 请勿在驾驶时使用手持电话。
- ▶ 驾驶时应全神贯注。
- ▶ 如有条件、可使用免提装置。
- ▶ 如驾驶条件不允许、请将车停在路边或空地旁，然后再拨打或接听电话。
- ▶ 射频能量可能影响车辆内的电子系统、例如立体声音响、安全设备等。
- ▶ 驾车时、不要将手机或免提装置放在靠近安全气囊的地方。如果无线装置安装不当、则在安全气囊弹出时、您可能会受到严重创伤。

若您户外听音乐时请您将音量调节适当。确保您能掌握周围环境和动态。特别在您过马路时应特别注意。

防止损伤您的听力

长时间高分贝的音量会损伤您的听力。所以我们建议您不要 贴近耳边开/关电话听筒。注意将音乐及通话音量调节适当。

爆破现场

切勿在引爆过程中使用手机。请遵守相关限制、并按照规定 行事。

潜在的爆炸性环境

- ▶ 切勿在加油站使用手机。切勿将手机靠近燃料或化学物品。
- ▶ 如车辆上携带有移动电话或其配件, 请勿在车厢里装载或 运输可燃性气体、液体或易爆物品。

在飞机上

无线设备可能对飞机造成干扰。

- ▶ 请在登机前关闭手机。
- ▶ 未经机务人员允许、请勿擅自使用手机。

关于安全有效使用手机的准则

电池信息及保养

您无需在再次充电前对电池进行完全放电。与其它电池系统不同、本机电池不具有可能影响电池性能的记忆效应。

- ▶ 只能使用 LG 电池和充电器。LG 充电器设计会最大程度地延长电池使用寿命。
- ▶ 切勿拆解电池组或将其短路。
- ▶ 保持电池组的金属触点清洁。
- ▶ 当电池不再提供合乎要求的性能时、请更换电池。在需要更换之前、电池组可以反复充电数百次。
- ▶ 如果电池已经使用很长一段时间、请对电池再次进行充电以保持最佳使用状态。
- ▶ 切勿将电池充电器暴露在直射阳光下、或置于诸如浴室之类的高湿环境中。
- ▶ 切勿将电池存放在过热或过冷的地方、这可能损害电池的性能。

网络服务

- ▶ 本用户手册中所述的服务和功能视网络类型或订阅情况而定。因此、您的手机中并非所有菜单均可用。有关预订服务和功能的更多信息、请联系您的网络运营商。

儿童准则

- ▶ 请确保将显示屏保护薄及所有其它薄片卸下并适当弃置。由于儿童有可能吸入或吞下这些薄片、请将其置于儿童无法接触的地方。


KU250 功能

打开视图


前视图



KU250 功能

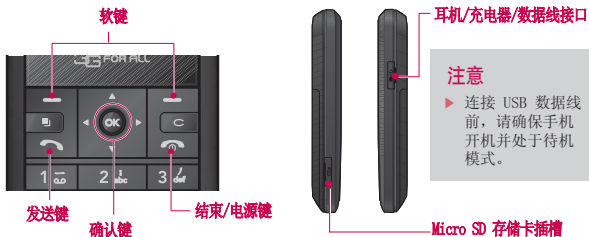

手机背面

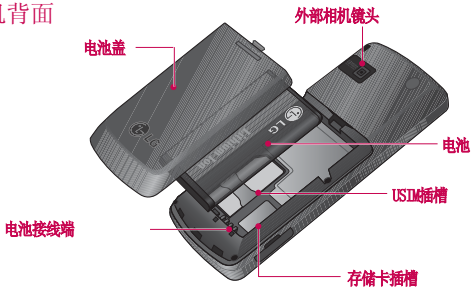

安装USIM卡和手机电池

1. 安装 USIM卡

USIM 卡包含手机号码、服务详细资料和联系信息，因此必须插入手机。取出 USIM 卡之后，手机会无法使用（紧急呼叫除外，取决于您当时所处的国家/地区），直到插入一个有效的USIM卡。插入或取出 USIM 卡之前，请始终断开手机与充电器和其它附件的连接。将USIM卡滑进USIM卡插槽中。确保USIM卡以正确方式插入并且卡上的金色接触区域面朝下。要取出USIM卡，轻轻将卡向下按并反向推出。



注意

- ▶ SIM 卡的金属触点很容易因刮擦而损坏。操作时请对SIM卡多加注意。遵守随SIM卡提供的说明。

开始

2. 安装电池

将电池插入电池室，使电池金属触点与手机中间部位的触点相结合。向下推电池前端，直至电池卡入到位。如图所示，将电池盖盖好。




3. 删除

如图所示，手机背部向上，向下轻推手机盖，释放按钮并滑出。然后用手指握住住电池，向上取出。




给电池充电

要用旅行充电器为手机充电，您必须先装上电池。



1. 如图所示，箭头面朝上，将电源适配器的插头推入手机右侧的插座。
2. 将旅行充电器的另一端连接到墙上的AC电源插座。



注意

- ▶ 请仅使用包装盒随附的充电器

3. 完全充电后电池图标条棒将停止闪烁。
4. 使用手机之前，请确保电池已完全充电。

小心！

- 如果电池已经完全放电，那么充电显示可能要在连接到旅行充电器后大约 1 到 1.5 分钟后才会显示在屏幕上。
- 不可强行插入充电接口，因为这将损坏手机及旅行充电器。
- 将电池组充电器垂直插到墙上电源插座。
- 如果在本国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- 充电时切勿取出电池或SIM卡。

开始

警告!

- 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
- 确保没有细尖的物体，如动物牙齿、指甲进入手机内触碰电池。这存在引发火灾的危险。

断开充电器

如下图所示，将旅行充电器从手机上断开。



如何使用 microSD 存储卡



<MicroSD 存储卡>

<如何插入 microSD 存储卡>

1. 关机。在手机开机时插入或取出microSD 卡会损坏保存在存储卡中的文件。
2. 掀开保护 microSD 插槽的塑料盖。



3. 将存储卡插入插槽，金属触点面朝下。如果滑入存储卡时觉得有些困难，不要强行插入，请检查存储卡插入方式是否正确，或者插槽内是否有异物。
4. 插入后，向前推入存储卡，直到听到“咔”的一声，这意味着 microSD 卡已被正确锁定。



5. 关闭插槽塑料保护。
6. 要取出存储卡，请关掉手机，打开插槽保护，用指尖将存储卡向插槽内推以激活弹出机制。


注意：

- ▶ 电池电量低时避免使用闪存。
- ▶ 写入存储卡时，请在写入操作完成后再取出存储卡。
- ▶ 存储卡在设计时即采取仅以一个方向轻松插入到位。
- ▶ 不要折弯存储卡或强行将其插入插槽。
- ▶ 除 microSD 卡外，不要插入其它任何类型的存储卡。
- ▶ 如果已使用 FAT32 格式化 microSD 卡，请再使用 FAT16 格式化 microSD 卡一次。

有关 microSD 卡的详细信息，请参阅存储卡说明指南。


开始

存储卡格式化


开始使用存储卡之前，您必须先对其进行格式化。插入存储卡后，请选择“菜单”→“设置”→“記憶體管理員”→“外部存储器”，然后按 。此操作应在第一次插入存储卡时完成。格式化期间，手机将为不同的数据类型创建不同的文件夹。

开机/关机

开机





确保在手机中插入 USIM 卡并装入已充电的电池。按住  直至开机。当 PIN 码请求设置为开时，请输入随 USIM 卡提供的 USIM PIN 码。（备注：请参阅第 74 页）数秒钟后，手机便可完成网络注册。

关机





按住  直至关机。关机时可能会出现几秒钟的延迟。在此期间，不要再次开机。

拨打电话

拨打语音电话



1. 输入电话号码，包括完整区号。
 - ▶ 要删除一个数字，请按 。
 - ▶ 要删除所有数字，请按住 。
2. 按  拨打电话。
3. 按  结束呼叫。

从通话记录拨打电话

1. 在待机模式下，按 ，屏幕上将显示最后的来电、去电和未接来电。
2. 使用  /  选择所需号码。
3. 按  键以拨出号码。

拨打视频电话

您可以在 3G 覆盖的服务区域拨打视频电话。如果被呼叫者具有 3G 视频电话，且位于 3G 覆盖的服务区域内，那么你们即可建立通话连接。您还可以接听视频电话。要拨打/应答视频电话，请执行以下操作。


1. 使用键盘输入电话号码，或者从呼入/呼出列表选择电话号码。
 - ▶ 要更正错误，请短按  删除输入的最后一个数字，或者按住  删除所有数字。

常规功能

2. 若不想使用扬声器，请确保将耳机插入。
3. 要启用视频功能，请按左软键 [选项]，然后选择“可视电话”。
 - ▶ 要拨打视频电话，系统将通知您需要关闭其它应用程序。




注意

- ▶ 视频电话可能需要一定时间进行连接。请耐心等待。连接时间也取决于对方应答呼叫的速度。在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示其图像。



4. 请根据需要调整相机位置。
5. 按  或闭合翻盖结束呼叫。

从电话本拨打语音/视频电话

拨打在电话本中存有号码的联系人的电话非常方便。

1. 按  访问联系人列表。
2. 滚动到联系人并拨打电话。
3. 按  拨打视频电话。按左软键并选择“拨打视频电话”。
4. 按  结束呼叫。

拨打国际电话




1. 按住  以输入国际前缀。“+”字符可作为国际接入码前缀。
2. 输入国家代码、地区代码和电话号码。
3. 按  。

应答电话

当接收到电话时、手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者、则会显示该致电者的电话号码（或保存在电话本中的姓名/照片）。


1. 按  键应答来电。

注意

- ▶ 要拒绝来电，请按  或右软键两次。
- ▶ 如果接听模式设置为“按发送键”（菜单 2.10.4），您可以在打开滑盖后按 。
- ▶ 如果接听模式设置为“按任意键”，除了  键，按任何键都将接听来电。

2. 按  结束呼叫。

注意

- ▶ 在使用电话本或其它菜单功能时，您也可以接听来电。
- ▶ 在手机连接到兼容耳机时，您也可以使用耳机键来接听来电，和使用手机一样。要拒接来电，请按 。
- ▶ 您可以通过按住下方音量侧键，在来电时静音。

信号强度


您可以通过手机屏幕上的信号指示符检查信号强度。信号强度会有所差别、尤其是在建筑物内。移到窗口附近可以改善接收质量。

常规功能

输入文本

您可以使用键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、创建个人问候语或者在日历中安排事件等，都需要输入文本。本手机提供以下文本输入方法。

T9英文模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9英文模式自动将所击按键与内部词典进行比较、然后确定正确的单词、因此所需的击键次数比传统的 ABC 模式要少。有时这也称为预测性文本。如果按  键，可激活或取消 T9 模式。

ABC 模式

在此模式中、输入字母时、按标示为所需字母的按键一次、两次、三次或四次、直到显示该字母。

123 模式（数字模式）

以每个数字一次击键的方式输入数字。

使用 123（数字）模式

使用123模式、您可以在文本信息中输入数字（例如电话号码）。按与所需数字对应的按键、然后手动切换回适当的文本输入模式。

菜单功能概览

本手机中的菜单可以 2 种方式显示。一种是网格类型，一种是列表格式。请注意，这两种类型的菜单数字选项有所不同。手机默认设置为以网格类型显示菜单，因此，本手册中所有菜单数字选择依此设置。

您可以通过按待机屏幕中的 **OK** 启动菜单。移至所需项目并按 **OK** 进入子菜单。

1. 游戏和应用程序

1.1 我的应用程序

1.2 设置

2. 呼叫

2.1 拨打视频电话

2.2 通话记录

2.3 通话计时

2.4 数据音量

2.5 通话费用

2.6 呼叫转移

2.7 呼叫限制

2.8 固定拨号

2.9 呼叫等待

2.0 通用设置

2.* 视频通话设置

3. 模式

3.1 标准

3.2 静音

3.3 仅振动

3.4 户外

3.5 耳机

3.6 自定义 1

3.7 自定义 2

3.8 自定义 3

4. 多媒体

- 4.1 相机
- 4.2 摄像机
- 4.3 音乐
- 4.4 视频播放列表
- 4.5 语音备忘录

5. 信息

- 5.1 创建新消息
- 5.2 收件箱
- 5.3 邮箱
- 5.4 草稿箱
- 5.5 发件箱
- 5.6 已发送的项
- 5.7 模板
- 5.8 图释
- 5.9 设置

6. 我的素材

- 6.1 我的图像
- 6.2 我的声音
- 6.3 我的视频
- 6.4 我的应用程序
- 6.5 其它
- 6.6 我的存储卡

7. 工具

- 7.1 快速菜单
- 7.2 闹钟
- 7.3 计算器
- 7.4 换算器
- 7.5 世界时间
- 7.6 SIM服务

8. 电话本

- 8.1 新增
- 8.2 搜索
- 8.3 快速拨号
- 8.4 群组
- 8.5 服务号码
- 8.6 本机号码
- 8.7 我的名片
- 8.8 设置

菜单功能概览

9. 浏览器
9.1 主页
9.2 输入地址
9.3 书签
9.4 保存的网页
9.5 历史记录
9.6 设置
*. 连接
*.1 蓝牙
*.2 服务器同步
*.3 USB 连接

0. 管理器
0.1 日历
0.2 任务
0.3 备忘录
0.4 私人备忘录
0.5 日期计算器
0.6 设置

#. 设置
#.1 手机
#.2 显示
#.3 日期和时间
#.4 网络
#.5 安全性
#.6 内存管理器
#.7 恢复初始设置

游戏和应用程序

我的应用程序

功能表 1.1

在此菜单中，您可以轻松下载游戏和其它应用程序。它默认包含两个文件夹：“游戏”和“应用程序”。每个文件夹都有一个内置的链接，用于下载游戏或应用程序。请注意，使用在线服务时可能会产生额外费用。

设置

功能表 1.2

[选项]

新增

1. 从“选项”菜单选择“新增”。需要配置以下项目。

服务名称	输入网络设置的帐户名。
连接方式	从指定的连接模式列表中选择。（默认情况下为：使用代理的 TCP，或不使用代理的 TCP）
IP 地址	输入运营商提供的 WAP 网关 IP 地址。（例如，195.115.025.129）
代理服务器端口	运营商提供的端口详细信息取决于“连接模式”。
接入点	从指定的接入点列表中选择。（有关添加或编辑新的接入点的详细信息，请参阅第 91 页。）

2. 按 **OK** [保存] 保存任何配置更改

查看

您可以查看网络设定。

呼叫

拨打视频电话 功能表 2.1

使用此菜单，您可以拨打视频电话。

1. 输入您要拨打的号码。
 - ▶ 您可以键入号码。
 - ▶ 您可以使用左软键 [选项] 从“搜索联系人”中选择号码
 - ▶ 您可以通过按 **OK** [可视电话] 从通话记录中选择号码。
2. 按中间键 [视频电话] 拨打视频电话。

视频通话过程中

当您进行视频通话时，屏幕上将显示联系人的姓名和通话持续时间、联系人图像、音量指示符、视频控制面板和您的图像。

您可以通过按左软键 [选项] 来访问以下选项菜单。

- ▶ 扬声器开/关
- ▶ 蓝牙/耳机交谈（连接了蓝牙耳机时）

- ▶ 保持/恢复
- ▶ 捕获
- ▶ 相机（放大 / 缩小）
- ▶ 查看发件人号码
- ▶ 转到电话本
- ▶ 转到信息
- ▶ 结束通话
- ▶ 设置

视频来电

接收到视频电话时，将显示以下致电者信息。

- ▶ **图片/动画**：显示来电图片、电话本中配置的图片或识别来电的预设动画。
- ▶ **致电者姓名和号码**：显示致电者号码。如果该号码存储在电话本中，将显示该联系人的姓名。

通话记录

功能表 2.2

所有通话 (功能表 2.2.1)

此菜单允许您查看未接来电、已接来电、和拨出电话记录。您可以拨打电话或者发送信息到从通话记录中选定的号码中。您也可以将号码保存到电话本中。

拨出电话 (功能表 2.2.2)

使您能够查看拨出电话的记录、拨打电话、发送信息以及将号码保存到电话本中。

已接来电 (功能表 2.2.3)

使您能够查看来电记录、拨打电话、发送信息以及将号码保存到电话本中。

未接来电 (功能表 2.2.4)

使您能够查看未接来电记录、拨打电话、发送信息以及将号码保存到电话本中。

通话计时

功能表 2.3

您可以按类型查看通话时间。按左软键[选项]选择部分初始化还是全部初始化。也可以按右软键[清除]初始化选定的通话时间类型。初始化要求您提供安全码。

可以使用以下计时方式：

- ▶ **全部通话：**显示总通话时间。
- ▶ **已拨电话：**显示拨出电话的通话时间。
- ▶ **已接来电：**显示来电通话时间。
- ▶ **最后通话：**以小时/分钟/秒为单位显示最近通话时间。

数据音量

功能表 2.4

允许您查看发送、接收和传输所有数据的音量。

按左软键[选项]选择全部初始化,或所选音量类型初始化。初始化要求您提供安全码。

呼叫

通话费用

功能表 2.5

1. 此功能将显示“上一次通话”及“所有通话”的费用。
2. 要进行初始化，请按中间键 [清除]，然后输入 PIN2 码。
3. 您可以在“设置通话费用”中选择“单位”或“币种”。根据您的设置，通话过程中将显示通话费用（如果 USIM 卡和网络支持话费建议(AOC)）。
4. 在“设置限制配置”中，选择“开”以配置费用限额。配置完费用限制后，如果通话费用达到该限额，用户将不能继续拨打电话。

呼叫转移

功能表 2.6

为语音和视频通话提供了“呼叫转移”菜单。

如果按 **OK**，您可以激活所有转接菜单。

语音来电 (功能表 2.6.1)

- ▶ 所有语音来电
- ▶ 线路忙时
- ▶ 无人接听时
- ▶ 无法接通时

1. **不存在号码列表时**
2. **存在号码列表时**

视频通话 (功能表 2.6.2)

- ▶ 所有视频通话
- ▶ 线路忙时
- ▶ 无人接听时
- ▶ 无法接通时

1. **不存在号码列表时**
2. **存在号码列表时**

全部停用 (功能表 2.6.3)

您可以选择是否要全部停用。

呼叫限制

功能表 2.7

为语音和视频通话提供了“呼叫限制”菜单。

语音来电 (功能表 2.7.1)

视频电话 (功能表 2.7.2)

- ▶ 所有拨出电话
- ▶ 国际
- ▶ 国际漫游时拨打电话
- ▶ 所有来电
- ▶ 国际漫游时来电

全部停用 (功能表 2.7.3)

您可以选择是否要全部停用。

固定拨号

功能表 2.8

- ▶ **开/关:** 选择是否要激活 FDN。需要进行 PIN 码认证。

呼叫等待

功能表 2.9

- ▶ **激活:** 激活等待服务。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。
- ▶ **关闭:** 停用呼叫等待服务。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。
- ▶ **查看状态:** 显示网络中已激活呼叫等待服务的群组项目。如果选择此项目，屏幕上将显示请求信息和动画。网络应答后，操作结果将显示在屏幕上。

呼叫

通用设置

功能表 2.0

拒接来电 (功能表 2.0.1)

您可以设置是否要拒接来电。

1. 在“拒绝”菜单中选择“开”以激活拒接来电。此时将出现“拒接列表”菜单。
2. 在“拒接列表”菜单中设置所需的拒接来电选项。
 - ▶ **所有来电：**拒接所有来电。
 - ▶ **联系人：**拒接电话本中保存的号码的来电。
 - ▶ **群组：**您可以按存储在电话本中的群组指定拒接来电。
 - ▶ **未注册：**拒接所有未保存在电话本中的来电。
 - ▶ **无来电显示：**拒接没有 CLI 信息的来电

发送本机号码 (功能表 2.0.2)

- ▶ **由网络设置：**使用服务提供商确定的默认设置进行配置。
- ▶ **打开：**配置为在拨出电话时发送我的电话号码。
- ▶ **关闭：**配置为在拨出电话时不发送我的电话号码。

自动重拨 (功能表 2.0.3)

允许您在呼叫尝试失败时设置自动重拨功能。


接听模式 (功能表 2.0.4)

允许您设置应答方式。您可以选择：按发送键、滑开手机以及按任意键。

分钟提示 (功能表 2.0.5)

确定在开机状态下是否每隔 1 分钟响 1 分钟的提示音。

蓝牙接听模式 (功能表 2.0.6)

- ▶ **免提：**连接蓝牙后，您可以使用蓝牙耳机接听电话。
- ▶ **手机：**如果按手机上的  接听电话，您可以通过手机讲电话。如果按蓝牙耳机键接听电话，您可以使用蓝牙耳机讲电话。

这是初始接听模式。接听电话过程中，您可以从手机转到耳机，或从耳机转到手机。

保存新号码 (功能表 2.0.7)

在此菜单中，您可以在结束通话时保存电话号码（如果该号码未保存在电话本中）。

视频通话设置 功能表 2.*

您可設定撥打/接聽視像通話時的桌面顯示。

- ▶ **使用个人图像：**決定是否顯示我的圖像。
- ▶ **选择个人图像：**選擇要顯示的靜態圖像。
- ▶ **鏡像：**選擇是否啟用鏡像效果。
 - **開：**正反翻轉顯示圖像。
 - **關：**按原樣顯示圖像。
- ▶ **我的圖像大小：**選擇要顯示的我的圖像大小。
- ▶ **我的圖像位置：**選擇圖像顯示的位置。

模式

您可以根据情景模式选择来电铃声或振动、配置铃声的声音和音量、按键音以及音效。对于每种情景模式，提供的可供编辑的选项列表不同。

▶ 提示依据

此选项用于确定来电通知方式。您可以从下列选项进行选择：[响铃]、[振动]、[静音]、[响铃并振动]、[振动后响铃]、[最大响铃并振动]。

▶ 语音铃声

您可以为语音来电选择铃声。

▶ 视频铃声

您可以为视频来电选择铃声。

▶ 体积

选择铃声音量。

▶ 信息提示

您可以设置手机在收到信息后提示您的频率，直到您阅读该信息为止。

▶ 信息提示音

您可以从个人文件或默认文件中选择一个要在接收信息时播放的文件。

▶ 按键音

您可以设置要在按键时播放的按键音。

▶ 按键音量

您可以设置所选按键音的音量，有 7 个级别可供选择。

▶ 确认提示音

▶ 打开声音

您可以设置开机时要播放的声音效果。

▶ 打开文件

您可以选择开机时要播放的文件。

▶ 关闭声音

您可以设置关机时要播放的声音效果。

▶ 关闭文件

您可以选择关机时要播放的文件。





相机



功能表 4.1

此应用程序使您能够拍摄照片。您可以拍摄所需尺寸的照片，并将它用作联系人照片、主屏及其它更一般的用途。

拍摄后，可以通过多媒体信息、电子邮件或蓝牙发送照片。

1. 按左软键访问“选项”并设置所需环境，如下所示：

- ▶ 使用  /  在选项菜单间移动。
- ▶ 使用  /  选择所需值， 确认选择。

2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要拍摄的物体，然后按 。
4. 按  保存照片。照片将保存在“我的文件”中的“图片”文件夹中。








注意

- ▶ 按右软键 [返回] 返回到前一个模式。

摄像机

功能表 4.2

此应用程序使您能够录制视频剪辑。在此菜单中，您可以选择同时播放并观看保存的视频文件 录制后，视频剪辑可以通过信息、电子邮件或蓝牙进行发送。

1. 按左软键访问“选项”并设置所需环境，如下所示：
 - ▶ 使用  /  在选项菜单间移动。
 - ▶ 使用  /  选择所需值，然后使用  确认选择。
2. 完成所有设置后，按右软键 [关闭]。
3. 将相机对准要录制的物体，然后按  开始录制。按  停止录制。

多媒体

- ▶ 按右软键 [暂停] 可以停止录制。
- 4. 按 **OK** 保存视频剪辑。视频将保存在“我的文件”中的“视频”文件夹中。

注意

- ▶ 按右软键 [返回] 返回到前一个模式。

音乐

功能表 4.3

最近播放 (功能表 4.3.1)

当前正在播放曲目时，将激活此菜单。

所有曲目 (功能表 4.3.2)

您可以在手机/外部存储器中查看整个音乐文件。

播放列表 (功能表 4.3.3)

您可以从“所有曲目”菜单列表中选择曲目以创建您自己的播放列表

艺术家 (功能表 4.3.4)

您可以按艺术家查看并播放存储的音乐。

相册 (功能表 4.3.5)

您可以按专辑查看并播放存储的音乐。

流派 (功能表 4.3.6)

您可以按流派查看并播放存储的音乐。

随机曲目 (功能表 4.3.7)

如果要连续随机播放音乐，请选择此选项。

视频播放列表 功能表 4.4


在此，您可以管理或发送下载的或拍摄的视频剪辑。

如果按 **OK** [播放]，您可以激活视频文件。

使用视频列表中的左软键 [选项]，您可以使用以下选项。

- ▶ **发送：**您可以通过信息、电子邮件或蓝牙发送选定的视频剪辑（如果不受数字版权管理（DRM）保护）。
- ▶ **删除：**删除选定视频。
- ▶ **标记/取消标记：**使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ **用作：**您可以将视频文件设为语音铃声或视频铃声。此菜单取决于内容。
- ▶ **信息：**显示选定视频文件的信息。
- ▶ **内存状态：**显示内存状态（手机或外部存储卡）。

您可以使用视频播放器观看视频。视频文件以缩略图的形式显示在列表中。您可以使用

 选择所需的视频。选择所需的视频，然后选择“播放”以观看所录制的视频。

选择右软键 [发送信息]，将选定视频附加到信息、电子邮件或蓝牙中。

如果选择选项“1. 播放”，手机将使用Media Player 播放视频剪辑。要暂停播放，请在播放过程中按 **OK**。要恢复暂停的播放，请再按一次 **OK**。

要捕获屏幕抓图，请在暂停播放后按左软键 [选项]，然后选择“捕获”。

要全屏观看当前播放的内容，请在播放过程中按右软键。

要返回至上一个屏幕大小，请在全屏模式下再按一次右软键。

多媒体

在 Media Player 中观看视频剪辑时，可使用以下选项：






- ▶ **风景视图：**您可以以风景视图模式观看视频。
- ▶ **静音/取消静音：**如果“音量”设置为 0 以上的值，“静音”模式将会激活；如果“音量”设置为 0，“取消静音”模式将会激活。
- ▶ **拍照：**您可以将暂停屏幕上的内容保存为图像文件。（仅适用于“暂停”模式）。
- ▶ **重复：**您可以设置重复选项（无/当前文件/所有文件）。
- ▶ **文件信息：**您可以查看正在播放的文件的相关信息（文件名、大小、日期、类型、持续时间、保护）。
- ▶ **发送信息：**您可以通过信息、电子邮件或蓝牙发送视频文件（如果不受数字版权管理(DRM)保护）。

- ▶ **删除：**删除选定视频。
- ▶ **用作：**您可以将视频文件设为语音铃声或视频铃声。此菜单取决于内容。

语音备忘录

功能表 4.5

1. 按左软键 [选项] 在录音前显示选项弹出菜单。
2. 使用  /  移到所需的菜单项目，然后按 。
- ▶ **长度：**您可以将录音的持续时间设置为多媒体大小、30 秒或 1分钟。size, 30 secs, or 1 min.
- ▶ **质量：**您可以从“超精细”、“精细”和“标准”中选择录音质量。
- ▶ **转到我的声音：**在“我的文件”中打开“录音”文件夹。
3. 按  开始录音。开始录音后，录制时间将显示在 LCD 屏幕上。要取消录音，请按“返回”。

4. 录音结束之后，按  停止。录制的文件将自动保存在“我的文件”的“录音”文件夹中。如果再次按  您可以开始录制新语音。
5. 录音完成后，按左软键选择不同的选项。
6. 使用  /  选择所需的菜单，然后按 .
7. 按右软键关闭子菜单弹出窗口。

信息

创建新消息

功能表 5.1


信息 (功能表 5.1.1)


您可以撰写并编辑包含文本、图像、视频和音频的信息。

1. 在“信息”字段中输入您的信息。

“信息”字段中的选项菜单

▶ **插入：**您可以执行以下操作：

1. **图像：**插入图片。(现有图像/拍照)
2. **视频：**您可以插入视频剪辑。(每个幻灯片一个视频剪辑)。
3. **声音：**您可以插入声音文件。(每个幻灯片一个声音)
4. **符号：**您可以插入符号。输入相应的数字键后，按 .

5. **模板：**您可以插入一个保存在手机中的文本模板。选择模板后，按 。选定的模板将被插入到“信息”窗口中。

6. **图释：**您可以在编写信息时插入图释。

7. **姓名与号码：**在电话本中搜索姓名和号码后，您可以插入条目。

8. **添加新幻灯片：**选择以添加新幻灯片。

9. **主题：**选择以插入主题。

▶ **保存到草稿箱：**选择此菜单可将邮件保存到草稿箱中。

▶ **输入法：**选择所需的字典模式。

▶ **编写语言：**您可以选择编写信息的语言。

▶ **添加至自订字：**您可以将单词添加到字典。


- 按右软键 [返回] 以退出菜单，或在设置子菜单后返回上一个菜单。
- 按确认键 [发送] 转到收件人屏幕。在此，您可以直接输入电话号码，或选择存储在电话本中的联系人。使用左软键 [选项]，您可以使用以下功能。
 - ▶ **最近使用**：您可以使用最近发送过信息的彩信地址。
 - ▶ **保存到草稿箱**：选择此菜单可将邮件保存到草稿箱中。
 - ▶ **返回**
- 按确认键 [发送] 发送信息。信息将自动保存到“已发信息”文件夹如果消息未发送出去，它将被保存在发件箱中并标记为失败状态。

电子邮件 (功能表 5.1.2)

要发送/接收电子邮件，您应先设置电子邮件帐户。（请参阅第 60-67 页，以获得如何设置电子邮件帐户的信息。）




- 在“收件人”、“抄送”、“密件抄送”字段中输入收件人的电子邮件地址。您可以按 **OK** 搜索联系人。
- 将光标移到“主题”字段，然后键入主题。
- 您可以通过将光标移到“信息”字段来输入信息内容。
- 使用左软键 [选项]，您可以使用以下功能。
 - ▶ **插入**：选择此菜单插入特殊字符、模板和联系人。此外，还可以附加多媒体文件（图片、视频和声音）。

信息

- ▶ **搜索电话簿:** 选择此菜单插入保存在电话本中的电子邮件地址。(仅在光标定位在“发件人”/“抄送”/“密件抄送”字段时,才显示在“选项”菜单中。)
 - ▶ **最近使用:** 您可以使用最近临时保存的电子邮件地址。
 - ▶ **保存到草稿箱:** 选择此菜单可将邮件保存到草稿箱中。
 - ▶ **查看附件:** 显示附加的文件。(仅在附件了文件时,此项方可用。)
 - ▶ **移除:** 删除附件。
 - ▶ **输入法:** 选择所需的字典模式。
 - ▶ **添加至字典:** 您可以将新单词添加到字典。
 - ▶ **取消:** 您可以更改撰写语言。
 - ▶ **设置邮件优先级:** 您可以配置要发送的电子邮件的优先级。
5. 编写完电子邮件后,按  发

收件箱

功能表 5.2

1. 您可以查看已接收的信息。选择一条信息,然后按  查看信息。
2. 您可以使用  /  查看上一条或下一条信息。
3. 要查看多媒体信息(通知),请选择信息通知查看屏幕中的“检索”。随后,将传输文件;传输完成后,您便可以查看文件。

使用收件箱中的左软键 [选项],您可以使用以下功能。

- ▶ **回复:** 创建对发件人或选定信息所有收件人的回复。
- ▶ **转发:** 转发所选信息。

注意

- ▶ 不支持彩信(通知)和 WAP Push 信息。

- ▶ **拨打视频电话：**您可以拨打视频电话。
- ▶ **删除：**删除当前信息。
- ▶ **创建新消息：**您可以撰写新信息或电子邮件。
- ▶ **复制：**对于短信，您可以将信息复制到手机或 USIM 卡。
- ▶ **移动：**对于短信，您可以将信息移动到手机或 USIM 卡。
- ▶ **过滤器：**按所需信息类型显示信息。
- ▶ **标记/取消标记：**您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ **信息：**您可以检查信息类型、日期和时间，以及保存位置。
- ▶ **保存地址：**将原始号码保存到电话本中。

注意

- ▶ 您可以检查保存在“电子邮件”中的电子邮件 [菜单 5.6]。

邮箱

功能表 5.3

当您进入此菜单时，您既可以连接您的远程邮箱检索新邮件，也可以在不登录电子邮件服务器的情况下查看之前检索到的邮件。

“邮箱”中最多可存储 300 封电子邮件。

1. 选择一个电子邮件账户，然后按 **OK** 查看收到的电子邮件列表。
2. 在电子邮件列表中，使用左软键 [选项]，您可以使用以下功能。根据电子邮件信箱类型（POP3 或 IMAP4）不同，所支持的 [选项] 菜单亦有所不同。

信息

- ▶ **回复**：创建对发件人或选定信息所有收件人的回复
- ▶ **转发**：向他人转发选定的电子邮件。
- ▶ **复制到**：将选定信息复制到其它文件夹。（仅限于 IMAP4）
- ▶ **检索**：检索新电子邮件（仅限于 POP3）
- ▶ **信息同步**：将电子邮件与服务器同步。（仅限于 IMAP4）
- ▶ **删除**：对于 POP3，删除电子邮件。对于 IMAP4，更改标记。
- ▶ **从服务器删除**：从服务器中删除电子邮件。（仅限于 POP3）
- ▶ **创建新消息**：您可以撰写新信息或电子邮件。
- ▶ **设为已读/未读**：您可以将选定电子邮件设为已读或未读。
- ▶ **标记/取消标记**：使用“标记/取消标记”选项删除多项。
- ▶ **彻底删除**：从服务器中彻底删除选定信息。（仅限于 IMAP4）

- ▶ **排序方式**：按选定类型对电子邮件进行排序。
- ▶ **信息**：有关信息的简短消息，例如：大小、类型、日期、数据和文件名。

草稿箱

功能表 5.4

您可以查看保存过的信息。选择一条信息，然后按  编辑信息。

使用左软键 [选项]，您可以使用以下功能。

- ▶ **发送信息**：发送选定信息。
- ▶ **发送**：删除所选信息。
- ▶ **创建新建信息**：您可以撰写新信息或电子邮件。
- ▶ **标记/取消标记**：您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ **过滤器**：按所需的信息类型显示信息。

- ▶ **信息：**您可以检查信息类型、日期和时间尺寸，以及保存位置。
- ▶ **编辑：**您可以编辑选定的信息。

发件箱

功能表 5.5

发件箱是等待发送信息的临时存储处。发送失败的信息也将位于发件箱中。例如，如果电子邮件账户配置不正确，那么电子邮件将被保存在发件箱中。

1. 选择信息。
2. 使用左软键 [选项]，您可以使用以下功能。

[适用于发送/等待信息]

- ▶ **创建新建信息：**您可以撰写新信息或电子邮件。
- ▶ **取消发送：**您可以停止发送/等待状态。
- ▶ **信息：**您可以检查信息类型、日期和时间，以及保存位置。

[适用于发送失败的信息]

- ▶ **重新发送：**重新发送选定的信息。
- ▶ **删除：**删除当前信息。
- ▶ **保存到草稿箱：**您可以立即将信息发送到草稿箱。
- ▶ **新建信息：**您可以撰写新信息或电子邮件。
- ▶ **信息：**您可以检查信息类型、日期和时间尺寸，以及保存位置。

已发送的项

功能表 5.6

显示发送的信息（信息/电子邮件）。

[选项]

- ▶ **转发：**转发选定的信息。
- ▶ **编辑：**您可以编辑选定的信息。
- ▶ **删除：**删除所选信息。
- ▶ **新建信息：**您可以撰写新信息。

信息

- ▶ **标记/取消标记：**您可以选择一个或多个信息以执行“删除多个”操作。
- ▶ **过滤器：**按所需的信息类型显示信息。
- ▶ **信息：**您可以检查信息类型、日期和时间尺寸，以及保存位置。

模板

功能表 5.7

文本模板 (功能表 5.7.1)

您可以使用左软键 [选项] 添加、编辑和删除经常使用的有用短语。

注意

- ▶ 根据服务提供商的不同，手机中将默认保存一些常用短语。

多媒体模板 (功能表 5.7.2)

使用左软键，您可以使用以下功能。

- ▶ **新增：**您可以创建新的多媒体模板。
- ▶ **写彩信：**使用选定模板创建多媒体信息。
- ▶ **编辑：**编辑选定的模板。
- ▶ **删除：**删除选定的模板。
- ▶ **全部删除：**删除所有模板（预安装模板除外）

图释

功能表 5.8

您可以添加、编辑和删除图释。您可以在撰写信息时插入所选图释。如果按确认键，您可以查看图标。

设置

功能表 5.9

文本信息 (功能表 5.9.1)

您可以配置与选项相关的文本信息。

1. **文本信息中心：**输入文本信息中心的地址。
2. **状态报告：**启用此选项，您可以验证信息是否已成功发送。
3. **有效期：**该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。
4. **将长文本另发送为：多条短信，彩信，**以多条短信或彩信选择长文本信息。
5. **字符编码：**自动/默认字母表/Unicode。
6. **将长文本另发送为：**

多媒体信息 (功能表 5.9.2)

您可以配置与选项相关的多媒体信息。

1. **检索模式：**您可以分别使用本地网络和漫游网络设置检索模式。您可以分别使用本地网络和漫游网络设置检索模式。如果选择“自动”，将自动检索多媒体信息。如果选择“手动”，那么您仅会在收件箱中收到一条通知信息，随后，您可以决定是否要下载该多媒体信息。
2. **状态报告：**此菜单使您能够确定是否向收件人请求发送确认邮件，以及是否允许向发件人发送送达确认邮件。
 - ▶ **请求报告：**确定是否为多媒体信息请求发送确认邮件。
 - ▶ **允许报告：**确定是否允许为发送确认邮件请求发送送达确认邮件。


信息

- 3. 已读回执：**此菜单使您能够确定是否向收件人请求读取确认邮件，以及是否允许向发件人发送读取确认邮件。
 - ▶ **请求回复：**确定是否为多媒体信息请求读取确认邮件。
 - ▶ **允许回复：**确定是否允许为阅读确认邮件请求发送读取确认邮件。
- 4. 优先级：**您可以选择信息优先级（低、中或高）。
- 5. 有效期：**允许您在发送多媒体信息时配置信息的有效期。此信息只在配置好的有效期内保存在多媒体服务器中。
- 6. 幻灯片持续时间：**允许您在创建信息时配置每个页面的持续时间。
- 7. 发送时间：**配置将信息发送至收件人的发送时间。多媒体信息中心将在到达发送时间后发送信息。
- 8. 多媒体信息中心：**允许您配置网络信息（如 MMSC 合 WAP 网关），以发送多媒体信息。
 - ▶ **标题：**网络设定名。
 - ▶ **MMSC URL：**输入多媒体信息中心的 URL。
 - ▶ **MMS Proxy：**输入 WAP 网关地址和端口号。
 - ▶ **连接方式：**选择连接模式之一。（使用代理的 TCP，不使用代理的 UDP）
 - ▶ **接入点：**指定接入点名称。（请参阅 WAP 连接设置。）

按右软键 [完成] 保存所作的更改并完成多媒体信息中心设置。

电子邮件 (功能表 5.9.3)

您可以配置设置以接收和传输电子邮件。

1. **电子邮件账户：**您可以创建或配置电子邮件帐户，包括电子邮件服务器和用户ID。按左软键 [选项]，您可以编辑选定的电子邮件账户。2. **编辑** 您可以使用  选择用于发送电子邮件的电子邮件账户。使用左软键 [选项]，您可以选择以下功能。

- ▶ **新增：**创建新的电子邮件帐户。
- ▶ **编辑：**编辑选定的电子邮件帐户。
- ▶ **查看：**查看选定的电子邮件帐户。
- ▶ **标记/取消标记：**“标记/取消标记”选项用于删除多项。
- ▶ **删除：**删除选定的电子邮件帐户。账户中包含的所有电子邮件将被删除。

2. **允许回复电子邮件：**确定是否允许为阅读确认邮件请求发送读取确认邮件。
3. **请求回复电子邮件：**确定是否为多媒体信息请求读取确认邮件。
4. **检索间隔：**您可以配置检索间隔以从邮件接收服务器中自动检索电子邮件。当新电子邮件到达时，待机屏幕的顶部将出现一个图标。您可以选择自动接收的时隙：关、15 分钟、30 分钟或 1 小时。请注意，使用“自动检索”功能时可能会产生附加费用。
5. **在转发和回复中包括消息：**确定在转发信息或答复信息时是否要包含原始信息。
6. **包含附件：**确定在转发信息时是否要包含附件。
7. **漫游时自动检索：**转在漫游区域时自动检索电子邮件帐户。

信息

8. **新电子邮件通知 信息：**当 UE 中自动检索到新电子邮件时，您可以决定是否要弹出通知信息。
9. **签名：**您可以配置签名文本以**附加在电子邮件的末尾。** 在撰写电子邮件时，配置的签名文本将自动或手动附加在电子邮件的末尾。
10. **优先级：**您可以选择电子邮件优先级（低、中或高）。

新电子邮件通知 信息

1. 从“电子邮件帐户”菜单选项中选择“新增”。
2. 需要配置以下项目。
3. 按中软键 [保存] 完成电子邮件帐户配置。

编辑电子邮件账户

1. 从电子邮件账户列表中选择所需的电子邮件账户，按左软键 [选项]，然后选择“编辑”。
2. 您可以通过上下移动光标来编辑所需的字段。

3. 配置完成后，按中软键 [保存] 完成电子邮件帐户配置。

注意

- ▶ 当您尝试更改邮箱类型时，之前下载的所有电子邮件都将被删除。

视频邮件 (功能表 5.9.4)

如果網絡服務供應商支援此功能，您就可以使用此功能表接收視頻郵件。

請向您的網絡服務供應商查詢服務詳細內容，以正確設定手機。

语音邮件 (功能表 5.9.5)

您可以添加或修改语音邮件中心。

服务信息 (功能表 5.9.6)

您可以配置服务信息接收选项。

小区服务 (功能表 5.9.7)

- ▶ **手机广播:** 您可以设置接收状态。
- ▶ **频道:** 您可以添加或修改频道。
- ▶ **语言:** 您可以选择所需语言。随后, 小区广播信息将以您选定的语言显示。

我的素材

我的图像

功能表 6.1

“图片”文件夹由用于从 Internet 下载图片的嵌入式链接和默认图像组成。

要查看图片详细信息，请按确认键。

选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ **发送信息：**只要图像未受数字版权管理 (DRM) 保护，您就可以通过信息、电子邮件或蓝牙发送选定图像。
- ▶ **作用**
 - **墙纸：**您可以将某图像设置为屏幕主题
 - **拨出电话**
 - **联系人图像：**您可以为电话本中选定的条目设置图像。当您收到来电时，将显示保存在电话本中的图像。
 - **开机：**您可以将图像设为开机屏幕主题。
 - **关机：**您可以将图像设为关机图像。

- ▶ **移动：**可以将文件移到其它文件夹。
- ▶ **复制：**可以将文件复制到其它文件夹。
- ▶ **删除：**删除选定的图像。
- ▶ **标记/取消标记：**使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ **文件**
 - **重命名：**可以重命名图像。
 - **编辑：**可以编辑图像
 - **信息：**显示选定图像文件的信息。
- ▶ **新建文件夹：**您可以在当前选定文件夹内创建一个新的文件夹。
- ▶ **幻灯片显示：**您可以幻灯片放映形式查看图像。
- ▶ **排序方式：**按名称、日期或文件类型对文件进行排序。
- ▶ **网格视图：**您可以以或网格视图查看图像。
- ▶ **内存状态：**您可以查看内存状态（手机或外部存储卡）

我的声音

功能表 6.2

“声音”文件夹由用于下载铃声和音乐的嵌入式链接和包含默认声音和录音的文件夹组成。

选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ **发送信息**：只要文件未受数字版权管理 (DRM) 保护，您就可以通过信息、电子邮件或蓝牙发送选定图像。
- ▶ **用作**
 - **语音铃声**：您可以将声音文件设为收到语音来电时的铃声。
 - **视频铃声**：您可以将声音文件设为收到视频来电时的铃声。
 - **信息提示音**：您可以将声音文件设为收到信息时的铃声。
 - **开机**：您可以将声音文件设为开机时的铃声。
 - **关机**：您可以将声音文件设为关机时的铃声。
- ▶ **移动**：可以将文件移到其它文件夹。

▶ **复制**：可以将文件复制到其它文件夹。

▶ **删除**：删除选定的图像。

▶ **标记/取消标记**：使用“标记”功能，您可以发送、删除、移动和复制多个文件。

▶ **文件**

- **重命名**：可以重命名图像。
- **文件信息**：显示选定图像文件的信息。


▶ **排序方式**：按名称、日期或文件类型对文件进行排序。

▶ **内存状态**：您可以查看内存状态（手机或外部存储卡）。

我的视频

功能表 6.3

在此，您可以管理或发送下载的或拍摄的视频剪辑。

如果按  [连接]，您可以激活视频文件。

使用视频列表中的左软键 [选项]，您可以使用以下选项。


我的素材

- ▶ **发送信息：**只要视频剪辑未受数字版权管理（DRM）保护，您就可以通过信息、电子邮件或蓝牙发送选定视频剪辑。
- ▶ **用作：**您可以将视频设为语音铃声或视频铃声。
- ▶ **移动：**将文件移至手机内存或外部存储器。
- ▶ **复制：**将文件复制到手机内存或外部存储器。
- ▶ **删除：**删除选定视频。
- ▶ **标记/取消标记：**使用“标记”功能，您可以发送、删除、移动和复制多个文件。
- ▶ **文件**
 - **重命名：**可以重命名视频。
 - **信息：**显示选定视频文件的信息。
- ▶ **新建文件夹：**您可以创建新文件夹。
- ▶ **排序方式：**您可以按名称、日期或文件类型对文件进行排序。

▶ 网格视图

- ▶ **内存状态：**显示内存状态（手机或外部存储卡）。

您可以使用视频播放器观看视频。视频文件以缩略图的形式显示在列表中。您可以使用

 选择所需的视频。选择所需的视频，然后选择“播放”以观看所录制的视频。

选择右软键 [发送]，将选定视频附加到信息、电子邮件或蓝牙中按“确定”键（播放）时，手机将使用Media Player 播放视频剪辑。要暂停播放，请在播放过程中按 **OK**。

要恢复暂停的播放，请再按一次 **OK**。

要捕获屏幕抓图，请在暂停播放后选择选项 3. 捕获。

要以全屏视图查看当前播放的文件，请在暂停播放后选择选项 1. 广角视图。

要返回至上一个屏幕大小，请在全屏模式下再按一次右软键。

在 Media Player 中观看视频剪辑时，可使用以下选项：

- ▶ **风景视图：**您可以以风景视图模式观看视频。
- ▶ **静音/取消静音：**如果“音量”设置为 0 以上的值，“静音”模式将会激活；如果“音量”设置为 0，“取消静音”模式将会激活。
- ▶ **捕获：**您可以将暂停屏幕上的内容保存为图像文件。（仅适用于“暂停”模式）。
- ▶ **重复：**您可以设置重复选项（无/当前文件/所有文件）。
- ▶ **文件信息：**您可以查看正在播放的文件的相关信息（文件名、大小、日期、类型、持续时间、保护）。
- ▶ **发送信息：**只要文件未受数字版权管理（DRM）保护，您就可以通过信息、电子邮件或蓝牙发送视频。
- ▶ **删除：**删除选定视频。

- ▶ **作用：**您可以将视频文件设为语音铃声或视频铃声。

我的应用程序 功能表 6.4

在此菜单中，您可以轻松下载游戏和其它应用程序。它默认包含两个文件夹：“游戏”和“应用程序”。每个文件夹都有一个内置的链接，用于下载游戏或应用程序。请注意，使用在线服务时可能会产生额外费用。

其它 功能表 6.5

除图片、声音、视频、游戏和应用程序以外的其它文件都保存在此文件夹。

我的存储卡 功能表 6.6

如果您購買選擇性的外置 microSD 記憶咭，則可管理更多的內容。您可如同在手機上一樣來管理內容。

工具



快速菜单

功能表 7.1



您可以指定要保存在快捷菜单中的功能。您可以将常用功能保存在快捷菜单中。

闹钟

功能表 7.2

如果您设置了闹钟， 将出现在指示符栏中。指定的闹钟将在预定时间响起。按  停止闹钟，此时闹钟设置被取消。按左软键 [暂停] 并选择暂停间隔。您可以配置 5 个闹钟。

1. 在闹钟中选择要配置的闹钟。如果没有闹钟，请按左软键 [添加]，添加新的闹钟。
2. **设置/取消闹钟：** 使用用于指定是否打开闹钟的选项或者通过选择闹钟时间来设置或取消闹钟。
3. **输入闹钟时间：** 通过指定“小时”和“分钟”值来输入所需的闹钟时间。如果手机设置为 12 小时制格式，请选择“AM”或“PM”。

4. **选择重复模式：** 使用  /  或通过按左软键 [列表] 从列表中选择所需模式。
5. **选择铃声：** 通过按左软键 [编辑] 打开列表并从中选择闹钟铃声。
6. **输入备忘录：** 输入闹钟名称。
7. **暂停：** 您可以设置闹钟休眠持续时间。
8. 闹钟设置结束后，按中间键 [保存]。

注意








- ▶ 即使关机，闹钟设置仍然有效。

计算器

功能表 7.3

计算器模式允许您执行基本的数学运算，例如加法、减法、乘法和除法；以及一些科学计算函数。（正弦函数、余弦函数、正切函数、对数、自然对数、指数、幂次方、角度值、弧度值）

1. 按左软键 [选项]。
2. 选择适当的函数。

您可以使用数字键输入数字，并使用  /  /  /  输入运算符。您可以通过按 。按 ，字符将按相反的方向依次删除。按住 ，所有字符将按相反的方向一次性删除。计算完成且屏幕上显示结果时，按一个数字将清除之前结果，计算器等待新的输入（即使您没有按右软键 [清除]）。计算完成且屏幕上显示结果时，按一个符号将结果应用至符号操作并继续计算。

换算器

功能表 7.4

使用此菜单，用户可以换算币种、面积、长度、重量、温度、体积和速度。

币种 (功能表 7.4.1)

1. 选择“币种”菜单。
2. 用户可以使用选项菜单“更改币种”来设置币种汇率。
3. 最多输入 6 种币种的汇率（相当于GBP），然后按 [保存到]。然后，您可以将一种币种换算为另一种币种。
4. 您最多可以查看 6 种货币单位的汇率值。
5. 按 [重设] 清除当前输入字段中的值。

面积 (功能表 7.4.2)

1. 选择“面积”菜单。
2. 使用 [列表] 选择换算时所需的单位。

工具

3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

长度 (功能表 7.4.3)

1. 选择“长度”菜单。
2. 使用 [列表] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

重量 (功能表 7.4.4)

1. 选择“重量”菜单。
2. 使用 [列表] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。

4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

温度 (功能表 7.4.5)

1. 选择“温度”菜单。
2. 使用向上、向下箭头键将光标定位在所需的单位上。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

体积 (功能表 7.4.6)

1. 选择“体积”菜单。
2. 使用 [单位] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

速率 (功能表 7.4.7)

1. 选择“速度”菜单。
2. 使用 [列表] 选择换算时所需的单位。
3. 输入标准单位，然后查看换算后的值。
4. 按 [重设] 清除当前输入字段中的值，然后将光标定位在输入字段中。

世界时间

功能表 7.5

世界时钟功能提供有关世界各地主要城市的时间信息。

1. 您可以使用左软键选择“选项 → 添加城市”或“选项 → 添加城市 → 地图”来选择所需城市。
2. 您可以使用左软键选择“选项” → “更改城市”或“更改当前城市”来更改城市。

3. 您可以使用左软键“选项” → “夏令时”应用夏令时时间。
4. 您可以通过“选项” → “模拟时钟”选择模拟时钟模式。

SIM服务

功能表 7.6

您的服务提供商可以通过 SIM 卡提供如家庭银行业务、股市行情之类的特殊应用。如果已注册这些服务之一，该服务名称将出现在主菜单末尾。通过“SIM 卡服务”菜单，您的手机能够满足将来的使用需要，并能够支持服务提供商所提供的额外服务。有关详细信息，请联系您的服务提供商。

电话本

新增

功能表 8.1

您可以注册新的联系人通讯信息。您可以输入新联系人的姓名、不同电话号码和电子邮件地址。您也可以将联系人分配给群组，包括图像或个人形象；为联系人分配特定铃声以及输入备忘录。

搜索

功能表 8.2

执行联系人通讯信息搜索功能。默认情况下，搜索操作按姓名执行。当前搜索方法和找到的结果显示在“搜索”窗口中。您可以向所选电话号码打电话或发送信息。

快速拨号

功能表 8.3

使用此菜单，您可以管理快速拨号。可在2-9 间对快速拨号进行配置。您可以为特定联系人地址分配任何不超过 5 位数的快速拨号号码，可以为同一个联系人地址分配多个快速拨号。

群组


功能表 8.4

使用此菜单，您可以管理群组信息（存储在手机和 USIM 卡中的信息）。手机内存中有 4 个默认群组：朋友、家人、同事和同学。您可以添加、编辑和删除群组。如果没有为某个号码指定铃声，则其来电铃声为所属群组所分配的铃声。

服务号码

功能表 8.5

您可以查看由您的服务提供商分配的服务拨号号码 (SDN) (如果 USIM 卡支持)。

此类号码包括紧急电话、查号台和语音邮件号码。选择服务号码后, 按  呼叫服务。

本机号码

功能表 8.6

允许在 USIM 卡中您的电话号码。您可以在 USIM 卡中保存正在使用的本机号码。

我的名片

功能表 8.7

您可以通过按左软键“添加”创建自己的名片。输入姓名、号码、电子邮件和图像后, 您可以在发送信息时将其用作名片。

设置

功能表 8.8

显示数据 (功能表 8.8.1)

- ▶ **查看电话本:** 选择要显示的联系人信息 (从手机内存、SIM 卡内存或二者)。所有设置为预设设置。
- ▶ **名称显示:** 您可以按姓名设置显示顺序。
- ▶ **显示图像:** 选择是否要显示图像/个人形象。

同步电话本 (功能表 8.8.2)

注意

- ▶ 此服务并非适用于所有国家/地区。有关详细信息, 请与您的服务提供商联系。

您可以直接将电话本内容发送到服务器。

电话本

复制 (功能表 8.8.3)

您可以将联系人从手机内存复制到 USIM 卡或从 USIM 卡复制到手机内存。您可以一次复制所有项目。

移动 (功能表 8.8.4)

您可以将联系人从手机内存移动到 USIM 卡或从 USIM 卡复制到手机内存。您可以一次移动所有项目。

备份电话本 (功能表 8.8.5)

您可以通过格式化 vCard 将所有电话本数据保存在外部存储卡中。

恢复电话本 (功能表 8.8.6)

您可以通过格式化 vCard 将外部存储卡中的所有电话本数据恢复到手机内存中。

清空电话本 (功能表 8.8.7)

清除所有联系人信息。您可以删除保存在手机内存或 USIM 卡中的所有联系人信息。

内存信息 (功能表 8.8.8)

您可以检查此菜单中的存储器状态。

主页

功能表 9.1

您可以启动网络浏览器并访问主页。

输入地址

功能表 9.2

您可以手动输入 URL 地址并访问相关网页。

- ▶ 要输入符号，请按左软键 [选项] 并从“选项”菜单中选择“1. 插入”以显示符号表。
- ▶ 要切换输入模式，请按左软件 [选择] 并选择“2. 输入法”。

书签

功能表 9.3

您可以保存经常访问的或喜爱的 URL/网页。可对书签执行、发送、新增、编辑、标记/取消标记或删除操作。部分预先配置的 URL 被保存为书签。

添加新书签

1. 按左软键 [选项] 并从“选项”菜单中选择“2. 新增”。
2. 输入标题和相关的 URL 信息。
3. 按 **OK** 保存。

连接到所需书签

按 **OK** 连接所需书签。


向他人发送书签

从“选项”菜单中选择“发送”。您可以通过“信息”或“电子邮件”发送。

删除书签

从“选项”菜单中选择“删除”。使用“标记/取消标记”选项，您可以删除多个书签。

编辑书签

从“选项”菜单中选择“编辑”。编辑标题和相关的 URL 信息。按  保存。

注意

- ▶ 您可享受「流動電視」服務。

保存的网页

功能表 9.4

本手机可将显示屏上的页面保存为脱机文件。最多可以保存 20 个网页。

历史记录

功能表 9.5


您可以查看已连接的页面列表。

设置

功能表 9.6

您可以更改浏览器的连接显示、安全性和证书设置。

网络设定 (功能表 9.6.1)

按 ，选择相应的网络设定。这将激活网络设定以启动浏览器。

外观设置 (功能表 9.6.2)

将浏览器默认字符集设为以下之一：

自动、英语 (ASCII)、英语 (ISO)；英语 (LATIN)、Unicode (UCS2BE)；Unicode (UCS2 LE)，Unicode (UCS2 Auto)；Unicode (UTF-16 BE)，Unicode (UTF-16 LE)；Unicode (UTF-16 Auto)，Unicode (UTF-8)。

缓存 (功能表 9.6.3)

启用“缓存”将允许您将访问过的页面保存到手机上。一旦页面存储于缓存中，那么在您以后浏览该页面时，其加载速度将大大提高。

Cookies (功能表 9.6.4)

启用 Cookie 将允许您保存发自服务器的cookie。禁用此功能将阻止 cookie 存储到您的手机中。

恢复初始设定 (功能表 9.6.5)

选择以将手机重新设置为默认浏览器设置。

安全性 (功能表 9.6.6)

证书列表

如果有存储的话，在这里还可以找到WTLS/TLS 需要的根证书列表。用户可以查看列表中的证书。

清除会话

使用此选项可清除安全 (WTLS/TLS) 会话数据。要新建安全会话，应首先清除会话数据。

连接

蓝牙

功能表 *1

Bluetooth QD ID: B012660

蓝牙连接

您的手机具有内置蓝牙无线技术，因此您可以将手机无线连接至其它蓝牙设备上，例如免提、电脑、PDA 或其它电话。

注意

- ▶ 建议将手机和与之联系的蓝牙设备保持在 10 米的范围内。如果您的手机与蓝牙设备间不存在固体对象，则连接质量会提高。

1. 开始

- 菜单 ***. 连接** → 1. 蓝牙 → 1. 打开/关闭

要使用蓝牙功能，您必须先将“蓝牙”设置为 打开。

2. 正在搜索新设备

- 菜单 → *. 连接 → 1. 蓝牙 → 2. 搜索新设备

您可以使用此菜单搜索并将新的蓝牙设备与您的手机配对。请参阅 <配对设备>。

3. 配对设备

如果不存在配对设备。

选项 → 新增设备

如果已存在配对设备。

- 菜单 → #. 设置 → 7. 连接 → 1. 蓝牙 → 1. 连接选项

▶ **新增设备：** 您可以使用此菜单将新的蓝牙设备与您的手机配对。

▶ **重命名：** 使用此菜单，您可以为配对设备使用昵称。

▶ 连接

1. 如果要打开与所选设备的连接，则选择“连接”。
2. 如果要关闭与所选设备的连接，则选择“断开连接”。

▶ **删除：** 您可以使用此菜单删除配对的蓝牙设备。

▶ **全部删除：** 您可以使用此菜单删除所有配对的蓝牙设备。

4. 配置蓝牙设置

• 菜单 * 连接 → 1. 蓝牙 → 4. 设置

- **显示本机号码：** 将 [显示本机号码] 设置为 [可见]，以便其它设备在搜索蓝牙设备时可以检测到您的手机。如果您选择 [隐藏]，其它设备在搜索蓝牙设备时将无法检测到您的手机。

- **我的设备名称：** 您可以对您的手机出现在其它设备上的名称进行命名或重命名。只有在 [显示本机号码] 设置为 [可见] 时，您的手机名称才会显示在其它设备上。

- **支持的服务：** 此菜单显示手机中可用蓝牙服务的列表。

- **我的地址：** 此菜单显示您的蓝牙设备地址。

注意

▶ 用户使用手机中的蓝牙设备时，不能保证手机安全。因此，建议在进行配置或设备配对后，将蓝牙可见性设为隐藏。对于没有进行设备配对而通过蓝牙传入的文件，您可以在检查发件人详细信息后选择接收或拒绝连接。

<对设备>

1. 要搜索蓝牙设备以配对，请按“选项”>“新增设备”
2. 此时屏幕上将显示：正在搜索设备。
将找到 10 米以内的蓝牙设备。
3. 如果找到蓝牙设备，这些设备将列在屏幕上。如果没有找到任何蓝牙设备，系统将询问您是否要重新搜索。

连接

4. 配对过程

- 按 [添加]。此时屏幕上将出现一个窗口，要求输入您的密码。
- 在创建完密码（1 - 16 位）之后，对方设备的用户必须输入此密码才能配对。对方设备的用户必须提前知道密码，以便通过认证。

<连接耳机或免提>

1. 按照“配对设备”部分中介绍的过程配对耳机。
2. 要使用耳机，请从配对的设备中选择手机，然后选择“选项”->“连接”。
3. 要断开耳机连接，请从配对的设备中选择手机，然后选择“选项”->“断开连接”。

<删除设备>

1. 从配对的设备中选择要删除的设备。

2. 您可以通过选择“选项”>“删除”来删除设备。要删除所有配对设备，请选择“选项”>“全部删除”。

<使用蓝牙传输数据>

1. 要将您手机上的数据传输到另一个蓝牙设备上，请先选择用于保存目标数据的应用程序。例如，要将“我的文件”中的文件发送至另一个设备，请选择“菜单”>“6. 我的文件”>“1. 我的图像”/“2. 我的声音”/“3. 我的视频”/“5. 其它”/“6. 我的存储卡”>“选择要传输的数据”>“选项”>“发送”>“3. 蓝牙”
2. 正在传输数据
 - 1) 此时将显示配对的设备。如果列表中有所需设备，请选择[刷新]。
 - 2) 选择要通过屏幕上的设备向其传输数据的设备，然后按 @。
 - 3) 如果另一方允许您传输，随后将传输数据。

<使用蓝牙接收数据>

如果另一方试图传输数据，连接请求问题将显示在屏幕上。如果您允许连接，数据将传输到您的手机上。

数据传输过程中，蓝牙图标将更改为文件传输图标。

接收到的文件将根据文件类型保存到相应的文件夹。例如，图像文件将自动保存到“我的图像”文件夹。

服务器同步

功能表 *2

注意

- ▶ 此服务并非适用于所有国家/地区。有关详细信息，请与您的服务提供商联系。

如果您的网络运营商支持同步服务，则此服务功能可以通过无线网络使手机中的数据与服务器上的数据如电话本、日历和任，如果您的网络运营商支持同步服务，则此服务功能可以通过无线网络使手机中的数据与服务器上的数据，如电话本、日历、任务和备忘录保持同步。

连接

1. 选择“连接”项，然后按 **OK**。
2. 使用所选的服务器情景模式连接至服务器。当执行同步时，屏幕上会显示同步动画。

记录

选择“记录”项，然后按 **OK** 查看执行的最近一个同步操作的记录。

服务器同步中心

1. 选择“服务器同步中心”项，然后按 **OK**。
2. 此菜单允许您配置同步服务器的网络设定。

连接

- ▶ **网络设定名称:** 输入网络设定的名称。
- ▶ **主机地址:** 与您的服务提供商联系。
- ▶ **SyncML 代理:** 请与服务提供商联系。
- ▶ **用户名:** 输入同步服务器的用户名。
- ▶ **密码:** 输入您的密码。
- ▶ **电话本:** 选择是否要同步电话本。
- ▶ **联系人名称:** 输入服务器访问的联系人数据库名称。
- ▶ **日历:** 选择是否要同步日历。
- ▶ **日历名称:** 输入服务器访问的日历数据库名称。
- ▶ **任务:** 选择是否要同步任务。
- ▶ **任务名:** 输入服务器访问的任务数据库名称。
- ▶ **备忘录:** 选择是否要同步备忘录。
- ▶ **备忘录名称:** 输入备忘录数据库名称, 以供服务器访问。

- ▶ **同步类型:** 选择以下同步类型。
- ▶ **接入点:** 选择用于数据连接的接入点。
- ▶ **同步模式:** 选择同步模式

USB 连接

功能表 *3

手机的 USB 连接可用于多种目的。用户必须针对不同的使用设置不同的 USB 连接模式。

如果用户要使用诸如 USB 记忆棒之类的 Mass Storage 功能, 请选择此菜单中的“Mass Storage”。Mass storage 仅可用于外部存储卡。





如果用户使用除 Mass Storage 以外的其它功能, 例如拨号、PC Sync, 请选择此菜单中的“数据服务”。

日历

功能表 0.1

日程表查询和搜索

1. 按月参考

您可以按月参考日程表。光标定位在当前日期上，注册日期下显示下划线。为光标所定位日期保存的日程表显示为灰色框。按快捷键 **1** 移到上年，按快捷键 **2** 移到下一年，按快捷键 **5** 移到今天。按快捷键 **7** 移到上个月，按快捷键 **9** 移到下个月。按  移至周日。您可以使用  /  /  移动日期。

2. 详细参考

您可以参考详细的日程表，也就是用户配置的日程表的全部内容。使用左软键 [选项]，您可以通过短信（文本信息）、彩信（多媒体信息）、电子邮件或蓝牙将日程表发送给其它手机或网站。

新增

您可以添加事件。您可以配置开始时间、结束时间、内容、事件类型、重复和日程表闹钟。

- ▶ 设置类型：约会、周年纪念、生日
- ▶ 设置重复：一次、每日、每周、每月、每年、用户设置
- ▶ 设置闹钟：无闹钟、一次、15分钟前、30分钟前、1小时前、1天前、3天前、1周前

删除日程表

1. 删除以前的日程表

您可以使用此功能删除所有以前的日程表。

2. 删除所有日程表

您可以使用此功能删除所有保存的日程表内容。

管理器

设置和取消假期

您可以设置或取消用户假期。按左软键[选项]，然后选择“设置假期”。选定日期将以红色显示。

要取消假期，按左软键 [选项]，然后选择“清除假期”。

日程表通知

如果用户已配置闹钟设置，则指定的闹铃将会响起。如果通知时间早于预定的起始时间，您可以重新设置闹钟。

任务

功能表 0.2

您可以查看、编辑和添加要执行的任務。任务按时间顺序显示。已完成任务或未完成任务的显示方式不同。

- ▶ 添加
- ▶ 详细视图和编辑
- ▶ 设置任务状态

备忘录

功能表 0.3

- ▶ Add memo
- ▶ 编辑和删除备忘录

私人备忘录

功能表 0.4

- ▶ 添加私人备忘录
- ▶ 编辑和删除私人备忘录

日期计算器

功能表 0.5

您可以使用此功能查找所需日期。

设置

功能表 0.6

日程表 (功能表 0.#.1)

您可以对配置进行设置以查看日历。

- ▶ **默认视图:** 您可以设置查看日历的默认值: 月视图、周视图
- ▶ **周开始时间:** 1AM、2AM、3AM、4AM、5AM、6AM、7AM、8AM、9AM、10AM、11AM、12PM
- ▶ **周开始于:** 您可以设置周开始的默认日期: 周六、周一

备份日历和待办事项

(功能表 0.#.2)

当您插入外部存储器时, 可以为保存在手机中的日历或任务条目创建备份文件。

恢复日历和待办事项

(功能表 0.#.3)

插入外部存储器时, 您可以恢复日历或任务的备份文件。

内存信息 (功能表 0.#.4)

您可以查看有关日历、任务、备忘录和私人备忘录的可用内存的相关信息。

全部清除 (功能表 0.#.5)

您可以清空日历、任务、备忘录和私人备忘录。

设置

手机

功能表 #.1

自动键盘锁 (功能表 #.1.1)

如果激活此功能，待机模式下无需任何按键操作请求即会自动锁定键盘。

语言 (功能表 #.1.2)

选择显示语言。您可以选择“自动”语言选项，将显示语言更改为 USIM 卡支持的语言。

省电 (功能表 #.1.3)

选择是否要激活省电模式。

手机信息 (功能表 #.1.4)

此功能将显示手机的 USIM 卡电话号码、型号和软件版本。

显示

功能表 #.2

此菜单允许您自定义屏幕和菜单的整个图形界面的显示选项。

屏幕主题 (功能表 #.2.1)

您可以设置要在主屏上显示的屏幕主题。

菜单样式 (功能表 #.2.2)

您可以选择所需的菜单样式：网格样式以及逐个样式。

字体 (功能表 #.2.3)

您可以使用 ， 设置字体样式、拨号字体以及拨号字体颜色。

背景灯 (功能表 #.2.4)

您可以分别设置主屏和键盘的背景灯持续时间及亮度。

问候语信息 (功能表 #. 2.5)

选择“开”后，您可以撰写欢迎信息。

日期和时间 功能表 #.3

尽管手机注册到网络时会自动配置当前时间，用户可以使用此菜单直接配置时间和日期。用户配置的时间仅在手机开机时有效。

时间 (功能表 #. 3.1)

1. 从“时间和日期”列表中选择“时间”项，然后按 **OK**。
2. 使用导航键移到所需字段：“小时”、“分钟”、“秒”或“AM”/“PM”字段。（当您选择“12 小时”作为“时间格式”时）
3. 使用数字键输入小时、分钟和秒。
4. 使用 **左**，**右** 选择时间格式。
5. 选择小时指示格式，即，关闭、布谷鸟报时或敲钟报时。

6. 按中软键 [保存] 使用指定值设置时间。

日期 (功能表 #. 3.2)

1. 从“日期和时间”列表中选择“日期”项，然后按 **OK**。
2. 使用 **左**，**右** 选择日期格式。
3. 使用数字键输入日、月和年。
4. 按中软键 [保存] 使用指定值设置日期。

自动更新日期/时间

(功能表 #. 3.3)

当“自动更新”设为“开”时，手机会根据当前时区自动更新时间 and 日期。如果选择了“确认首个”，那么在自动更新之前会先进行确认。

夏令时 (功能表 #. 3.4)

选择是否激活夏令时功能。您可以设置选定的当地城市的夏令时差：1 小时或 2 小时。

设置

网络

功能表 #.4

选择网络 (功能表 #.4.1)

选择“自动”还是“手动”。

- ▶ **自动:** 此功能可自动搜索网络并向网络注册手机。为了得到最佳的服务和质量, 建议选择此设置。
- ▶ **手动:** 所有当前 2G (GSM) 和 3G (UMTS) 网络将会显示在屏幕上, 您可以从中选择一个注册。如果网络注册失败, 则屏幕上会重新列出当前所有可用的网络, 您可以选择另外一个进行注册。

网络模式 (功能表 #.4.2)

您可以在“选择网络”菜单中设置网络类型, 以搜索何时搜索网络。

- ▶ **自动:** 搜索所有可连接网络。
- ▶ **仅限 3G:** 仅搜索支持 3G 的网络。

首选列表 (功能表 #.4.3)

如果自动搜索网络, 您可以添加要连接的首选网络。以下选项可用

- ▶ **新增:** 您可以使用以下选项添加新网络。
 - **搜索:** 您可以从存储在手机中的网络列表中选择其一。
 - **输入新网络:** 您可以输入国家/地区代码 (MCC)、网络代码 (MNC) 和 RAT 以添加。
- ▶ **删除:** 删除选定的网络。
- ▶ **编辑:** 您可以修改选定网络的信息。
- ▶ **上移:** 您可以向上移动选定的网络。
- ▶ **下移:** 您可以向下移动选定的网络。

接入点 (功能表 #.4.4)

此菜单将显示接入点列表。您可以使用“选项”菜单新建、删除或编辑网络设定。但是，根据国家/地区不同，您可能无法删除或编辑默认配置。

您可以通过按左软键 [选项] 和“编辑”来编辑以下配置项。

按确认键可储存任何配置变更。

流媒体 (功能表 #.4.5)

您可以设置不同的网络设定以播放流媒体内容。

安全性

功能表 #.5

需要 PIN 码 (功能表 #.5.1)

如果此选项设为“开”，那么在您每次开机时，会要求您输入 PIN 码。

注意

- ▶ 要返回上一步骤，请在 PIN 码输入窗口中按右软键。
- ▶ 如果 3 次输入的 PIN 码均不正确将会导致 PIN 码失效。在这种情况下，您必须输入 PUK (PIN 解锁密码) 码，然后重新配置 PIN 码。
- ▶ 您可输入 PUK 码的最多次数为 10。(备注：如果您 10 次输入的 PUK 码均不正确，USIM 卡将锁定，必须更换。)
- ▶ 如果根据运营商设置无法禁用 PIN 码请求，那么您将无法选择此菜单项。

设置

手机锁 (功能表 #.5.2)

您可以锁定手机。本手机提供了以下 4个锁定功能。

开机时: 开机时锁定手机。

如果更换 USIM 卡: 如果更换了手机的USIM 卡, 将锁定手机。

立即: 立即锁定手机。

无: 停用锁定功能。

您需要输入安全码以确认所作的选择。

- ▶ 要解锁手机, 您需要输入安全码。

更改密码 (功能表 #.5.3)

您可以更改 PIN 码、PIN2 码和手机密码。

内存管理器 功能表 #.6

手机公用内存 (功能表 #.6.1)

此功能显示手机中用户内存的状态。由于此功能会扫描整个文件系统以进行统计, 因此可能要几秒钟的时间。

手机剩余内存 (功能表 #.6.2)

此功能显示用户剩余内存的状态。常见内容是指文本信息、电话本、日历、任务和备忘录。

1. 闹钟 (默认闹钟除外)
2. 通话记录
3. 书签 (默认书签除外)
4. 其它
 - ▶ 私人备忘录
 - ▶ 快捷菜单 (默认菜单除外)
 - ▶ 浏览器 > 输入地址 > 历史记录
 - ▶ 浏览器 > 历史浏览器 > 保存的页面
 - ▶ 信息 > 最近使用号码
 - ▶ 通话费用
 - ▶ 通话时间

它可以通过图示形式清楚地说明每个项目实际使用内存占总内存的百分比。

USIM 卡内存 (功能表 #.6.3)

此功能显示 USIM 卡用户内存的状态。

外部存储器 (功能表 #.6.4)

此功能显示外部存储卡用户内存的状态。此功能将显示已用内存和可用内存的统计数据。

主存储器设置 (功能表 #.6.5)

您可以选择保存下载文件的存储位置：手机内存或外部存储器。

恢复初始设置 功能表 #.7

选择此选项将手机重新设置为默认配置。

您必须输入安全码。

附件

我们为您的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。

旅行用适配器

此充电器允许您在离开家或公司的时候可以对电池进行充电。



标准电池



注意

- ▶ 确保使用正规的LG配件。
- ▶ 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- ▶ 各个地区的配件可能不同：如有任何疑问、请与我们的地区服务公司或代理查证核实。

耳机 (选项)

耳机连接至手机之后, 可以进行免提操作。包括听筒、麦克风和集成的电话接听/结束按钮。



SGEY0005516



SGEY0003210



SGEY0003209

软件升级

LG 手机软件升级计划

有关安装和使用此计划的详细信息，请访问 [http:// update.lgmobile.com](http://update.lgmobile.com)。

使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。

由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。

技术数据

常规

产品型号: KU250

系统: GSM900/DCS1800/PCS 1900, WCDMA 2100

净重: 57.2g (不含电池)

环境温度

标准: 55° C

正在充电: 45° C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU250,U250

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.8.1, ETSI EN 301 489-07 V1.3.1

ETSI EN 301 489-17 V1.3.1, ETSI EN 301 489-24 V1.3.1

ETSI TS 151 010-1 V6.5.0 specified by ETSI EN 301 511 V6.0.2

ETSI TS 134 121 V6.5.0 specified by ETSI EN 301 906-1 V2.2.1 ETSI EN 301 906-2 V2.2.1,

ETSI EN 300 326 V1.8.1

EN 50360/EN 50361:2001

EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name Issued Date

Jin Seog, Kim / Director 10.Apr. 2007

LG Electronics Inc. Amsterdam Office
Vukuwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 6940, e-mail : esokim @ lge.com


Signature of representative

I KU250 User Guide I

- English

This document is the user guide for the LG KU250 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.



Contents

Guidelines for safe
and efficient use 5

KU250 features 11

Getting Started 13

Installing the USIM card
and battery

Charging the Battery 15

Disconnecting the
charger 17

How to use a microSD
memory card

Memory card formatting 19

Turning the handset
on/off

General functions 22

Making and answering
calls

Entering text 25

Overview of Menu
Functions 27

Games & Apps 30

My games & apps

Settings

Calling 31

Make Video call

Call logs 32

All calls

Dialled calls

Received calls

Missed calls

Call duration 33

Data volume

Call costs

Call divert 34

Voice calls

Video calls 35

Deactivate all 36

Call barring

Voice calls 37

Video calls

Deactivate all 38

Fixed dial numbers

Call waiting 39

Common setting

Call reject

Send my number 40

Auto redial

Answer mode

Minute minder

BT answer mode

Save new number

Video call setting 41

Profiles 42

Multimedia 44

Camera

Video camera 45

Music 46

Recently played

All tracks

Playlists

Artists

Albums

Genres

Shuffle tracks

Video playlists 47

Voice recorder 49

Messages 50

Create new message

Message

Email 51

Inbox 53

Mailbox 54

Drafts 56

Outbox

Sent Items 57

Templates 58

Text templates

Multimedia templates

Emoticons 59

Settings

Text message

Multimedia message

E-mail 62

Videomail 66

Voicemail

Service message 67

Info. service

My stuff 68

My images

My sounds 69

My videos 70

My games & apps 72

Others 73

My memory card

Tools 74

Quick menu

Alarms

Calculator 75

Converter

Currency

Surface 76

Length

Weight

Temperature 77

Volume

Velocity 78

World time

Sim tool kit

Contacts 79

Add new

Search

Speed dials

Groups

Service dial numbers 80

Own number

My business card

Settings

Display data

Synchronise contact 81

Copy all

Move all

Backup contacts

Restore contacts

Clear contacts

Memory info.

Browser 82

Home

Enter address

Bookmarks

Saved pages 83

History

Contents

Settings	83
Profiles	
Appearance settings	84
Cache	
Cookies	
Reset settings	
Security	

Connectivity	85
Bluetooth	
Server sync	89
USB connection	90

Organiser	91
Calendar	
To do	92
Memo	93
Secret memo	94
Date finder	
Settings	
Calendar	

Backup calendar & to do	95
Restore calendar & to do	
Memory info.	
Clear all	

Settings	96
Phone	
Auto key lock	
Language	
Power save	
Handset information	
Screen	
Screen theme	
Menu style	
Font	
Backlight	
Greeting message	97

Date & Time	
Time	
Date	
Auto update date/time	98
Daylight saving	

Network	
Select Network	

Network mode	99
Preferred lists	
Access points	100
Streaming	101

Security	
PIN code request	
Handset lock	102
Change codes	

Memory manager	
Handset common memory	
Handset reserved memory	
SIM memory	103
External memory	
Primary storage setting	
Reset settings	

Accessories	104
--------------------	------------

Software Upgrade	106
-------------------------	------------

Technical data	107
-----------------------	------------

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Certification information (SAR)

This device meets international guidelines for exposure to radio waves

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be

Guidelines for safe and efficient use

shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this device when tested for use at the ear is 1.24 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

The highest SAR value for this device when tested for use at the body is 1.04 W/kg.

* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at www.lgmobile.com.

Product care and maintenance

Warning!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Guidelines for safe and efficient use

- ▶ Please remove the data cable before powering on the handset.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which

contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Guidelines for safe and efficient use

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion if battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.



KU250 features

Parts of the phone

Open view



KU250 features

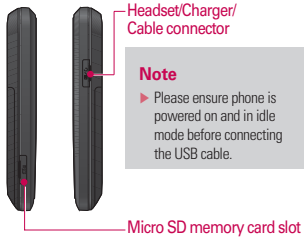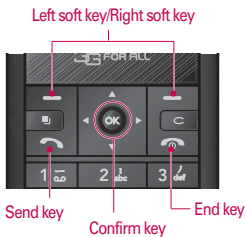

Rear view



Getting Started

Installing the USIM card and battery

1. Installing the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset. If your USIM card is removed then your handset becomes unusable (except for emergency calls depending on which Country you are in at the time) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.



To insert the USIM card To remove the USIM card

Note

- ▶ The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.

Getting Started

2. Installing the battery.

Insert the the battery into the battery compartment as the metal contacts meet in the middle of the phone.

Push down the top of the battery until it snaps into place. Place the battery cover to the phone as shown.



3. To remove the battery.

Turn the phone up-side down, as shown, gently push down the battery cover to release and lift off. Then lift up the battery with your fingers and pull-out the battery.




Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the right side of the phone.
2. Connect the other end of the travel adapter to the mains socket.



Note

- ▶ Only use the charger included in the box.

3. The moving bars on the battery icon will stop after charging is complete.
4. Ensure the battery is fully charged before using the phone for the first time.

Getting Started

CAUTION!

- *If the battery is completely discharged, the charging display will appear on the LCD approximately 1 to 1.5 minutes after connecting TA.*
- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *Insert the battery pack charger vertically to wall power outlet.*
- *If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.*
- *Do not remove your battery or the USIM card while charging.*

WARNING!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. This may cause a fire.*

Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



How to use a microSD memory card



<MicroSD memory card>

<How to insert a microSD memory card>

1. Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.
2. Lift the plastic cover which protects the microSD slot.



3. Insert the memory card into the slot with the metal contacts facing down. Do not force the memory card into the slot, if the card does not slide in easily, please check that the card is being inserted the correct way or if there is a foreign object in the slot.

Getting Started

- Once inserted, push the memory card until you hear a **Click**, meaning that the microSD has been correctly engaged.




- Close the plastic slot protection.
- To remove the memory card, turn the phone off, open the slot protection and push in memory card with the tip of your finger into the slot which will activate the eject mechanism.

Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.


Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Memory Manager** → **External memory**, then press  the left soft key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.


Turning the handset on/off

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold  until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**.

After a few seconds you will be registered on the network.

Turning your handset off

Press and hold  until the power goes off. There may be a few seconds delay while the handset powers down.

Do not turn the handset on again during this time.

Getting Started

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except the PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu #.1.4.3].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorised use. The PIN code is usually supplied with the USIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time it is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as **Fixed dial number**. These functions are only available if supported by your USIM card.

PUK code (8 digits)

The PUK (PIN Unblocking Key) code is required to unblock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact your network operator's customer service department for the code. If you lose the code, contact your network operator's customer service department.

PUK2 code (8 digits)

The PUK2 code, supplied with some USIM cards, is required to unblock a blocked PIN2 code. If you lose the code, contact your network operator's customer service department.





Security code (4 digits)

The security code prevents unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to the factory settings.





General functions

Making and answering calls

Making a voice call



1. Enter the number including the full area code.
 - ▶ To delete a digit press  .
 - To delete all digits press and hold  .
2. Press  to make the call.
3. Press  to finish the call.

Making a call from the call logs

1. In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using  /  .
3. Press  to call the number.

Making a video call


You can make a video call in a 3G covered service area. If the called user has a 3G video phone in a 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.
 - ▶ To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.

- If you do not want to use the speakerphone, ensure you have the headset plugged in.
- To start the video function, press the left soft key [Options] and select **Video call**.
 - You will be notified that you will need to close other applications to make the video call.




Note

- The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- Adjust the camera position if necessary.
- Press  to finish the call, or close the handset.

Making a voice/video call from Contacts

It is easy to call anyone whose number you have stored in your Contacts.

- Press  to access the contacts list.
- Scroll to the contact to make a call.
- Press  to make a voice call. Press the left soft key and select Make video call to make a video call.
- Press  to finish the call.

Making international calls

- Press and hold  for the international prefix. The '+' character prefixes the international access code.
- Enter the country code, area code, and the phone number.

General functions




3. Press .

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.


1. Answer an incoming call by pressing  key.

Note

- ▶ To reject an incoming call, press  or the right soft key.
- ▶ If you set Answer mode as Press send key(Menu 2.10.4), you can answer the call by pressing .
- ▶ If the answer mode is set to Press any key, any key will answer a call except for .

2. End the call by pressing .

Note

- ▶ You can answer a call while using the Contacts or other menu features.
- ▶ When the compatible headset is connected, you can also answer a call using the headset key, as well as using the phone. To reject an incoming call, press .
- ▶ You can mute the ringtone when a call comes in by pressing and holding the volume down navigation key.


Signal strength

You can check the strength of your signal by the signal indicator on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

Entering text

You can enter alphanumeric characters using the keypad. For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text. The following text input methods are available with the handset.

T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text. If you press  key, you can activate or cancel T9 mode.

ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number.

General functions

Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Lower case	Upper case
1	.,?!:@1/°()	.,?!:@1/°()
2	abc2âáãäåæç	ABC2ÂÃÄÅÆÇ
3	def3èéêë	DEF3ÈÉÊË
4	ghi4ìíîï	GHI4ÌÍÎÏ
5	jdkl5£	JKL5£
6	mno6ñòóôõöøœ	MNO6ÑÒÓÔÕÖØœ
7	pqr7\$	PQR7\$
8	tuv8ùúû	TUV8ÙÚÛ
9	wxyz9	WXYZ9
0	Space, 0	Space, 0

Note

- ▶ The characters assigned to the keys and their order of appearance depends on the language selected using the option Input method. The table above provides the characters set for English language.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Overview of Menu Functions

The menu in this phone can be displayed in 2 ways. One is by grid type or secondly in list format. Please note that menu number options are different in each view. The default setting on the phone is set to show the menu in grid type, so therefore all the menu number selections throughout the manual are set according to that setting. You can launch a menu by pressing **OK** in the idle screen. Move to the desired item and press **OK** to go into the sub menu. From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menus and sub menus.

1. Games & Apps	2. Calling	3. Profiles
1.1 My games & apps	2.1 Make Video call	3.1 Normal
1.2 Settings	2.2 Call logs	3.2 Silent
	2.3 Call duration	3.3 Vibrate only
	2.4 Data volume	3.4 Outdoor
	2.5 Call costs	3.5 Headset
	2.6 Call divert	3.6 Customised 1
	2.7 Call barring	3.7 Customised 2
	2.8 Fixed dial numbers	3.8 Customised 3
	2.9 Call waiting	
	2.0 Common setting	
	2.* Video call setting	

Overview of Menu Functions

4. Multimedia

- 4.1 Camera
- 4.2 Video camera
- 4.3 Music
- 4.4 Video playlists
- 4.5 Voice recorder

5. Messages

- 5.1 Create new message
- 5.2 Inbox
- 5.3 Mailbox
- 5.4 Drafts
- 5.5 Outbox
- 5.6 Sent Items
- 5.7 Templates
- 5.8 Emoticons
- 5.9 Settings

6. My stuff

- 6.1 My images
- 6.2 My sounds
- 6.3 My videos
- 6.4 My games & apps
- 6.5 Others
- 6.6 My memory card

7. Tools

- 7.1 Quick menu
- 7.2 Alarms
- 7.3 Calculator
- 7.4 Converter
- 7.5 World time
- 7.6 Sim tool kit

8. Contacts

- 8.1 Add new
- 8.2 Search
- 8.3 Speed dials
- 8.4 Groups
- 8.5 Service dial numbers
- 8.6 Own number
- 8.7 My business card
- 8.8 Settings

9. Browser
9.1 Home
9.2 Enter address
9.3 Bookmarks
9.4 Saved pages
9.5 History
9.6 Settings
*. Connectivity
*.1 Bluetooth
*.2 Server sync
*.3 USB connection

0. Organiser
0.1 Calendar
0.2 To do
0.3 Memo
0.4 Secret memo
0.5 Date finder
0.6 Settings

#. Settings
#.1 Phone
#.2 Screen
#.3 Date & Time
#.4 Network
#.5 Security
#.6 Memory manager
#.7 Reset settings

Games & Apps

My games & apps Menu 1.1

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Each folder has an embedded link for downloading games or applications. Please note that additional costs may be incurred when using online services.

Settings Menu 1.2

[Options]

Add new

1. Select **Add new** from the **Options** menu. The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy or TCP without Proxy)

IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 195. 115. 025. 129)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 98.)

2. Press the **OK** [Save] to save any configuration changes.

Edit

You can edit the profile.

View

You can view the profile.

Mark/Unmark

You can select one or all of the profile.


Delete

Deletes the selected profile.

Make Video call

Menu 2.1

You can make a video call using this menu.

1. Enter the number you want to dial.
 - ▶ You can key in the number.
 - ▶ You can select the number from Search contacts using the left soft key [Options]
 - ▶ You can find the number from call logs by pressing  [Video call].
2. Press the center key [Video call] to make a video call.

During a video call

When you are in a video call, the screen will show the contact's name and duration of call, contact's image, volume indicator, video control panel, and your image.

You can access the following option menus by pressing the left soft key [Options].

- ▶ Speaker (On /Off)
- ▶ Bluetooth/Handset talk (When the Bluetooth headset is connected)
- ▶ Hold / Resume
- ▶ Capture
- ▶ Camera (in / out)
- ▶ View sender number
- ▶ Go to contacts
- ▶ Go to messages
- ▶ End call
- ▶ Settings

Calling

Incoming video call

When a video call is received, the caller's information is displayed as following.

- ▶ **Picture/Animation:** Displays picture ID, graphic image configured in Contacts, or default animation indicating the incoming call.
- ▶ **Caller's name and number:** Shows incoming caller's number. If the number is stored in Contacts, displays the name of the contacts.

Call logs

Menu 2.2

All calls (Menu 2.2.1)

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

Dialled calls (Menu 2.2.2)

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

Received calls (Menu 2.2.3)

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

Missed calls (Menu 2.2.4)

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

Call duration

Menu 2.3

You can view call time by types. Press the left soft key [Options] to choose either partial initialisation or entire initialisation. Also press right soft key [Clear] to initialise a selected duration type. Initialization will require your Security code.

The following timers are available:

- ▶ **All calls:** Shows total call time.
- ▶ **Dialled calls:** Shows outgoing call time.
- ▶ **Received calls:** Shows incoming call time.
- ▶ **Last call:** Shows the latest call time in units of hours/minutes/seconds.

Data volume

Menu 2.4

Allows you to check the sent, received and all data volume transferred.

Press the left soft key [Options] to choose entire initialization. or the selected volume type initialization. Initialization will require your Security code.

Call costs

Menu 2.5

1. This function displays the call costs of the Last call and All calls.
2. To initialise, press the centre key [Clear] and enter the PIN2 code.
3. You can select either **Units** or **Currency** in **Set call cost**.
According to your setting, the call cost is displayed during a call (If USIM and Network support Advice Of Charge(AOC)).

Calling

4. In the **Set limit** configuration, select **On** to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

Call divert

Menu 2.6

Call divert menus for voice and video calls are provided.

If you press **OK**, you can activate call divert menu.

Voice calls (Menu 2.6.1)

- ▶ **All voice calls**
- ▶ **When busy**
- ▶ **No answer**
- ▶ **Not reachable**

1. When the number list is not existed

Converts to an editor for entering a divert number. You can input the number to divert a call directly or search it in phonebook. If you press **OK** [Divert], the phone will send the request to service provider after entering the number. While waiting for the result from the network, a Requesting message and animation appears.

2. When the number list is existed

Displays To other number menu including of the number list. While waiting for the result from the network, a Requesting message and animation appears.


3. Option menu

After activating All voice calls menu, selecting the Options menu at the bottom of the menu displays the Deactivate, Deactivate all, View status, Set waiting time and clear list menus. The View status menu shows the settings on the network. If you select this menu, Requesting. message and animation appear. Then the network settings are displayed when the information is received from the network. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Clear list menu will delete all divert number list.

Video calls (Menu 2.6.2)

- ▶ All video calls
- ▶ When busy
- ▶ No answer
- ▶ Not reachable

1. When the number list is not existed

Converts to an editor for entering a divert number. You can input the number to divert a call directly or search it in phonebook. If you press  [Divert], the phone will send the request to service provider after entering the number. While waiting for the result from the network, a Requesting message and animation appears.

2. When the number list is existed

Displays To other number menu including of the number list. While waiting for the result from the network, a Requesting message and animation appears.

Calling

3. Option menu

After activating the All video calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Deactivate all, View status, Set waiting time and clear list menus. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

Deactivate all (Menu 2.6.3)

You can select to deactivate all or not.

Call barring

Menu 2.7

Call barring menus for Voice and Video calls are provided.

The menu consists of **Voice calls**, **Video calls** and **Deactivate all**. The Voice calls and Video calls menus have the following submenus.

The **Call barring** menu consists of **All outgoing**, **Outgoing international**, **Outgoing international calls except home country**, **All incoming** and **Incoming when abroad** submenus.

The **All outgoing** menu bars dialling all outgoing calls, the **Outgoing international** menu bars dialling outgoing international calls, and the **Outgoing international calls except home country** menu bars dialling outgoing international calls except for the Home PLMN country. **All incoming** rejects all incoming calls and the **Incoming when abroad** menu rejects incoming calls when roaming.

Voice calls (Menu 2.7.1)

Video calls (Menu 2.7.2)

▶ All outgoing

1. When **OK** is selected, it receives the Barring password from user, and activates the barring service on the network. A requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menus on the lowest menu. Then **Deactivate**, **Deactivate all**, **View status** and **Change password** menus appear. The **Deactivate** menu deactivates the barring service after the user's Barring password is entered. The **Deactivate all** menu deactivates all barring services configured in the network after the user's Barring password has been entered. The **View**

status menu enables users to view the current network configuration.

Selecting **View status** menu displays the Requesting message with animation and the result of the operation when the network answers.

Change password menu enables users to change the current barring password.

▶ Outgoing international

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the International calls menu. It operates in the same way as the **Outgoing calls** menu.

▶ Outgoing international calls except home country

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.

Calling

2. When the Options menu is selected
– It activates and operates the **International except home country** menu. It operates in the same way as the **Outgoing calls** menu.

▶ **All incoming**

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls menu. It operates in the same way as the **Outgoing calls** menu.

▶ **Incoming when abroad**

1. When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the Incoming calls when abroad menu. It operates in the same way as the **Outgoing calls** menu.

Deactivate all (Menu 2.7.3)

You can select to deactivate all or not.

Fixed dial numbers Menu 2.8

- ▶ **ON/OFF:** Select whether to activate FDN or not. PIN authentication is required.

Call waiting

Menu 2.9

- ▶ **Activate:** Activates waiting service. Selecting this item, displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **Deactivate:** Deactivates Call waiting service. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **View status:** Displays activated Call waiting service group item of the network. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.

Common setting

Menu 2.0

Call reject (Menu 2.0.1)

You can set whether to reject incoming calls.

1. Select **On** in Reject menu to activate call reject. The Reject list menu appears.
2. Set the desired call reject option in the Reject list menu.
 - ▶ **All calls:** Rejects all calls.
 - ▶ **Contacts:** Rejects the calls from the number stored in Contacts.
 - ▶ **Groups:** You can specify call rejects by group units stored in Contacts.
 - ▶ **Unregistered:** Rejects calls from the number not stored in Contacts.
 - ▶ **No caller ID:** Reject calls which do not have CLI information.

Calling

Send my number (Menu 2.0.2)

- ▶ **Set by network:** Configures with the default settings determined by the service provider.
- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

Auto redial (Menu 2.0.3)

Allows you to set the auto redial function when a call attempt has failed.


Answer mode (Menu 2.0.4)

Allows you to set the answering method. You can choose between **Press send key** and **Press any key**.

Minute minder (Menu 2.0.5)

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

BT answer mode (Menu 2.0.6)

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset.

This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

Save new number (Menu 2.0.7)

In this menu, you can save the phone number when ending a call if the phone number is not saved in a phonebook.

Video call setting

Menu 2*

You can set the screen display when making /receiving a video call.

- ▶ **Use private image:** Determine whether to show the private image or not.
- ▶ **Select private image:** Select the still image to be displayed.
- ▶ **Mirror:** Select to activate the mirror effect or not.
 - **On:** Displays the image flipped side to side.
 - **Off:** Displays the image as it is.
- ▶ **My image size:** Select my image size to be displayed.
- ▶ **My image position:** Select the position where your image will be displayed.

Profiles

You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile. A different list of options is available for each profile that has been selected for editing.

▶ **Alert by**

This option determines the incoming call notification mode. You can select from [Ring], [Vibration], [Silent], [Ring & vibration], [Ring after vibration], [Max Ring & Vibration].

▶ **Voice ringtone**

You can select the ringtone for incoming voice calls.

▶ **Video ringtone**

You can select the ringtone for incoming video calls.

▶ **Volume**

Set the ringtone volume.

▶ **Message alert**

You can set how often the phone is to inform you of a received message until it is read.

▶ **Message tone**

You can select a file from among your own personal files or from the default files, to be played by the phone upon receiving a message.

▶ **Key tone**

You can set the key tone to be played when pressing the keys.

▶ **Key tone volume**

You can set the volume of the chosen key tone, choosing from 7 available levels.

▶ **Confirmation tone**

You can set the confirmation tone to be played by the phone to confirm actions.

▶ **Start-up sound**

You can set the effect to be played when the phone is switched on.

▶ **Start-up file**

You can select which file will be played when the phone is switched on.

▶ **Shut down sound**

You can set the effect to be played when the phone is switched off.

▶ **Shut down file**

You can select which file will be played when the phone is switched off.

Multimedia

Camera

Menu 4.1

This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes.

Once taken, the picture can be sent via Multimedia message, Email or Bluetooth.



1. Press the left soft key to access **Options** and set the desired environment as follows.

- ▶ Move between the options menu with / .
- ▶ Select the desired value with / and confirm the selection with .

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to take and press .
4. Press to save the picture. It is saved in the Pictures folder of My Files.

Note


- ▶ Press the right soft key [Back] to go back to the preview mode.

Video camera

Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent via Message, Email or Bluetooth.

Brightness: From -2.0 to +2.0 at 0.5 intervals the higher the level, the brighter the screen

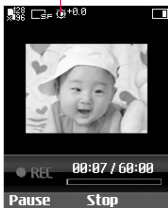

1. Press the left soft key to access Options and set the desired environment as follows.
 - ▶ Move between the options menus with / .
 - ▶ Select the desired value with / and confirm the selection with .
2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to record and press to start recording. And press to stop recording.
 - ▶ You can pause the recording by pressing the left soft key [Pause].
4. Press to save the video clip. It is saved in the Videos folder of My Files.

Note

- ▶ Press the right soft key [Back] to go back to the preview mode.

Multimedia

Music

Menu 4.3

Recently played (Menu 4.3.1)

This menu will be activated when there are some tracks currently played.

All tracks (Menu 4.3.2)

You can view all the music files stored in the phone/external memory.

Playlists (Menu 4.3.3)

You can create your own playlists by choosing tracks from the All tracks menu list.

Artists (Menu 4.3.4)

You can view and play music sorted by Artists.

Albums (Menu 4.3.5)

You can view and play music sorted by Albums.

Genres (Menu 4.3.6)

You can view and play music sorted by Genres.

Shuffle tracks (Menu 4.3.7)

If you want to play the music continuously and randomly, select this option.

Video playlists

Menu 4.4


Here you can manage or send downloaded or captured videos clips.

If you press  [Play], you can activate the video file.



The following are available using the left soft key [Options] in the Video list.

- ▶ **Send:** You can send the selected video clip via Message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ **Delete:** Deletes the selected video.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone. This menu is dependent upon the contents.

- ▶ **File info.:** Shows information on the selected video file.
- ▶ **Memory status:** Displays the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the . Select a desired video and select **Play** to view the recorded video.

Select the left soft key [Send] to attach the selected video to a message, Email or Bluetooth.

When option **1. Play** is selected, the video clip will be played with the Media Player. To pause the playback, press  during the playback. To resume the paused playback, press  once again.

To capture the screen shot, press the left soft key [Options] and select Capture when the playback is paused.

Multimedia

To view the current playback in full screen, press the right soft key during the playback.










To return to the previous screen size, press the right soft key once again in full screen mode.

When viewing video clips in the Media Player, the following options are available:

- ▶ **Landscape view:** You can view the video in wide view mode.
- ▶ **Mute/Unmute:** If the Volume is set to more than 0, Mute mode is activated and if the Volume is set to 0, the Unmute mode is activated.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Repeat:** You can set the repeat option (None/Current file/All files).
- ▶ **File info.:** You can check information on files being played (File name, Size, Date, Type, Duration, Protection).
- ▶ **Send:** You can send the video via Message, Email or Bluetooth if the file is not protected by Digital Rights Management (DRM).
- ▶ **Delete:** Deletes the selected video.
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone. This menu is dependent upon the contents.

Voice recorder

Menu 4.5

1. Press the left soft key [Option] to display the option pop up menu before recording.
2. Move to the desired menu item using  /  and press .
- ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
- ▶ **Quality:** You can select a recording quality from High,Medium and Low.
- ▶ **Go to my sounds:** Opens the Voice recordings folder in My Files.
3. Pressing  starts recording. When recording is started, the recording time appears on the LCD. To cancel recording, press Back.
4. When you finish the recording, press  to stop. The recorded file is automatically saved in the Voice recordings folder in My files. If you press  again, you can start recording a new voice.
5. Press the left soft key to select the various options after the voice recording.
6. Select the desired menu using  /  and press .
7. Press the right soft key to close the sub-menu popup window.

Messages

Create new message Menu 5.1

Message (Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1. Enter your message in the Message field.

Option menus in Message field

- ▶ **Insert:** You can perform the following actions:
 1. **Image:** You can insert an image. (Existing image/Take picture)
 2. **Video:** You can insert a video clip. (One video clip per slide)
 3. **Sound:** You can insert a sound file. (One sound per slide)
 4. **Symbols:** You can insert symbols. After entering the corresponding number keys, press **OK**.

5. **Template:** You can insert a text template saved on the phone. After selecting a template, press **OK**. The selected template is inserted into the Message window.
6. **Emoticon:** You can insert an emoticon on writing a message.
7. **Name & number:** After searching the name and the number in phonebook, you can insert the entry.
8. **New slide:** Select this to add a new slide.
9. **Subject:** Select this to insert a subject.

- ▶ **Save to drafts:** Select this to save the message to drafts.
 - ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Writing language:** You can select the language for writing a message.
 - ▶ **Add to dictionary:** You can add a word to the dictionary.
2. Press the right soft key [Back] to exit the menu or go to previous menu after setting submenus.
 3. Press the confirmation key [Send] to go to the recipients screen. From there you can enter phone numbers directly or from contacts stored in the phonebook. Use the following functions by using the left soft keys [Options].
 - ▶ **Recently used:** You can use the last few MMS addresses that you sent to previously.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **Exit:** To Exit from the editor
 4. Press the confirmation key [Send] to send the message. The message will automatically be saved in the Sent Item folder. If the message has not been sent, it will remain in the Outbox with a failed status.

Email (Menu 5.1.2)

To send/receive an Email, you should set up the Email account. (Refer to page 62–66 for how to set up an E-Mail account.)



1. Enter the Email addresses of the recipients in the To, Cc, fields.

Messages

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.
4. Use the following functions by using the left soft key [Options].
 - ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
 - ▶ **Search contacts:** Select this menu to insert Email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)
 - ▶ **Recently used:** You can use the latest Email address you saved temporarily.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)
 - ▶ **Remove:** Deletes the attachment file.
 - ▶ **Input method:** Select the desired dictionary mode.
 - ▶ **Add to dictionary:** You can add a new word to the dictionary.
 - ▶ **Writing language:** You can change the writing language.
 - ▶ **Set mail priority:** You can configure the priority of the Email you wish to send.
5. When you have finished writing an Email, press **OK** to send the Email.

Inbox

Menu 5.2

1. You can view received messages. Select a message and then press  to view the message.
2. You can view the previous or next message by using .
3. To view a multimedia message (Notification), select **Retrieve** in the message notification view screen. The file is then transmitted, and you can view the file when the transmission is complete.

You can use the following functions by using the left soft key [Options] in the Inbox.

- ▶ **Reply to:** Creates a reply to the sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.

Note

- ▶ Not supported for multimedia message (Notification) and WAP push messages.
- ▶ **Make video call:** You can make a video call.
- ▶ **Delete:** Deletes the current message.
- ▶ **Create new message:** You can write a new message or an E-mail.
- ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.

Messages

- ▶ **Move:** In case of SMS, you can move the message into handset or USIM.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Message information:** You can check the message type, date and time and where it is saved.

Note


- ▶ You can check the saved E-mails in E-mail [Menu 5.6].

Mailbox

Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.

In the Mailbox, up to 300 emails can be stored.

1. Select an email account and then press  to view the received email list.
2. In email list, you can use the following functions by using the left soft key [Options]. According to email mailbox type(POP3 or IMAP4), supported [Options] is different.

- ▶ **Reply to:** Creates a reply to the the sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected email message to others.
- ▶ **Copy to:** Copy the selected message to other folder.(Only IMAP4)
- ▶ **Retrieve:** Retrieves new email messages.(Only POP3)
- ▶ **Message synchronisation:** Email message synchronizes with the server.(Only IMAP4)
- ▶ **Delete:** In case of POP3, deletes the email. In case of IMAP4, changes the flag.
- ▶ **Delete from server:** Deletes the email from server.(Only POP3)
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Set as read/unread:** You can set the selected email to read or unread.
- ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
- ▶ **Expunge:** Expunges the selected message from the server.(Only IMAP4)
- ▶ **Sort by:** Sort the email message by selected type.
- ▶ **Message info.:** Brief information on the message including size, type, date and filenames.

Messages

Drafts

Menu 5.4

You can view saved messages. Select a message and then press **OK** to edit the message.

You can use the following functions by using the left soft key [Options].

- ▶ **Send:** Sends the selected message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message or an E-mail.
- ▶ **Mark/ Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message information:** You can check the message type, date, time, size and where it's saved.

Outbox

Menu 5.5

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, E-mails will be placed in Outbox if the E-mail account is not correctly configured.

1. Select a message.
2. You can use the following functions by using the left soft key [Options].

[For sending / waiting messages]

- ▶ **Create new message:** You can write a new message or an E-mail.
- ▶ **Cancel sending:** You can stop sending/waiting status.
- ▶ **Message information:** You can check the message type, date, time and where it's saved.

[For a failed message]

- ▶ **Resend:** Resends the selected message.
- ▶ **Delete:** Deletes the current message.
- ▶ **Save to drafts:** You can send the message to drafts.
- ▶ **Create new message:** You can write a new message or an E-mail.
- ▶ **Message information:** You can check the message type, date, time, size and where it's saved.

Sent Items

Menu 5.6

Show the messages you sent(Message/E-mail)

[Options]

- ▶ **Forward:** Forwards the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message information:** You can check the message type, date, time, size and where it is saved.

Messages

Templates

Menu 5.7

Text templates (Menu 5.7.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

Note

- ▶ Depending on your service provider, useful phrases are saved as a default.

Multimedia templates (Menu 5.7.2)

You can use the following functions by using the left soft key.

- ▶ **Add new:** You can create a new multimedia template.
- ▶ **Write multimedia message:** Creates a multimedia message with the selected template.
- ▶ **Edit:** Edits the selected template.
- ▶ **Delete:** You can delete a message attachment file.
- ▶ **Delete All:** You can delete all message from draft.

Emoticons

Menu 5.8

You can add, edit and delete emoticons. You can insert the emoticon you prefer when writing a message. If you press the confirmation key, you can view the icon.

Settings

Menu 5.9

Text message (Menu 5.9.1)

You can configure text message related options.

1. **Text message centre:** Input the address of the Text message centre.
2. **Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.

3. **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.

4. **Send long text as:** Select a long text message as Multiple SMS or MMS.

Multimedia message (Menu 5.9.2)

You can configure Multimedia message related options.

1. **Retrieval mode:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.

Messages

- 2. Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.
 - ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
 - ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.
- 3. Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending a read confirmation mail to a sender.
 - ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
 - ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
- 4. Priority:** You can select the priority level of the messages (Low, Normal and High).
- 5. Validity period:** Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.
- 6. Slide duration:** Allows you to configure the duration of each page when writing a message.

7. **Delivery time:** Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.
8. **Multi. msg. centre:** Allows you to configure network information such as the MMSC and the WAP gateway, to send a multimedia message. Using the left soft key [Options], you can activate, add or delete a profile. A profile name selected by a checkmark is the currently configured value. You can view and edit the contents of the profile in edit mode by pressing the right soft key [Edit]. The edit screen also appears when creating a new profile under Options. The meaning of each item is given below.

- ▶ **Title:** Profile name.
- ▶ **MMSC URL:** Enter the multimedia message centre URL.
- ▶ **MMS Proxy:** Enter the WAP gateway address and port number.
- ▶ **Connection mode:** Select one of the connection mode. (TCP with Proxy, TCP without Proxy, UDP)
- ▶ **Access points:** Specify the access point name. (see WAP connection settings.)

Press the right soft key [Done] to save the changes and complete Multimedia msg. centre setting.

Messages

E-mail (Menu 5.9.3)

You can configure settings for receiving and transmitting Emails.

1. **E-mail accounts:** You can create or configure an Email account including the Email server and user ID. You can edit a selected Email account by pressing the left soft key[option]-2.Edit. You can select an Email account to be used to send an Email using **OK**. You can select the following functions using the left soft key [Options].
 - ▶ **Add new:** Create a new Email account.
 - ▶ **Edit:** To edit the selected Email account.
 - ▶ **View:** Views a selected e-mail account.
 - ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
 - ▶ **Delete:** Deletes a selected Email account. All the Emails included in the account will be deleted.
2. **Allow reply email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
3. **Request reply email:** Determines whether to request a read confirmation mail.

4. **Retrieve interval:** You can configure Retrieve interval to retrieve Emails automatically from the incoming mail server. When a new Email arrives, an icon appears at the top of the screen. You can select the auto receiving time slot to **Off, 15 minutes, 30 minutes, 1 hour, 2 hours, 4 hours** or **8 hours**. Please note that additional charges may be incurred using the **Retrieve interval** feature.
5. **Include message in Fwd & Reply:** Determines whether to include the original message when you forward the message or reply to it.
6. **Include attachment:** Determines whether to include the attachment file when you forward the message to it.
7. **Auto retrieval in roaming:** Retrieves email account automatically when you move in to a roaming area.
8. **New Email noti. info:** When new email message is retrieved automatically in UE, you can decide to pop up notification information.
9. **Signature:** You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when composing.
10. **Priority:** You can select the priority level of E-mails (Low, Normal and High).

Messages

Creating a new Email account

1. Select **Add new** from the E-mail account menu options.
2. The following items need to be configured.

Title	Enter a title.
My name	Enter the My name
Username	Enter the user name of the Email account.
Password	Enter the Email account password.
E-mail address	Enter the Email address for outgoing mail.
Reply Email address	Enter the Email address to reply to your Email.
Outgoing mail server	Enter the outgoing Email server.
Incoming mail server	Enter the incoming Email server.

Title	Enter a title.
Maximum receive size	Select the maximum Email receive size using the left soft key. The permissible maximum receive size is no more than 1MB.
Mailbox type	Select the Email inbox type either POP3 or IMAP4 using the left soft key.
Save to server	Determine whether to leave a copy of messages on the incoming server or not using the left soft key. When the mailbox type is set to IMAP4, a copy of message is always saved to the server.
Save sent mail into	Select where to save the sent mails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

Title	Enter a title.
Access points	Select an access point to connect to the Internet. You can select a configured access point using the left soft key.
Auto retrieve	Decide whether to activate Auto retrieve or not using the left soft key. You can set the auto receiving time slot using the Auto retrieve.
Advanced settings	Select below fields either editing or not using the left soft key.
SMTP port number	Enter the mail server port number. In general, the SMTP (Outgoing mail server port number) is 25.

Title	Enter a title.
Incoming server port	Enter the mail server port number. In general, the incoming mail server port number is 110(POP3) or 143(IMAP4).
SMTP authentication	Decide whether the outgoing mail server to require authentication or not using the left soft key. When the SMTP authentication is set to On, you can enter the SMTP Username and SMTP Password for SMTP authentication.
SMTP username	Enter the SMTP username
SMTP password	Enter the SMTP password

Messages

Title	Enter a title.
APOP secure login	Decide whether to activate APOP secure login or not using the left soft key. When the mailbox type is IMAP4, APOP secure login is always set to OFF.

3. Press the centre soft key [Save] to complete the Email account configuration.

Editing an Email account

1. Select a desired Email account from the Email account list and press the left soft [Options] then select Edit.
2. You can edit desired fields by moving the cursor up and down.
3. When configuration is complete, press the centre soft key [Save] to complete the Email account configuration.

Note

- ▶ When you try to change the mailbox type, all Emails downloaded before will be deleted.

Videomail (Menu 5.9.4)

This menu allows you to get the video mail if this feature is supported by the network service provider. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Voicemail (Menu 5.9.5)

You can add or modify voice mail centre.

Service message (Menu 5.9.6)

You can configure the service message receipt option.

Info. service (Menu 5.9.7)

- ▶ **Cell broadcast:** You can set the reception status.
- ▶ **Channels:** You can add or modify the channels.
- ▶ **Languages:** You can select the language you desire. Then, the info service message will be shown in the language that you have selected.

My stuff

My images

Menu 6.1

The Pictures folder consists of embedded links for downloading pictures through the Internet and Default images.

To view the picture in details, press the confirmation key.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Send:** You can send the selected image via Message, E-mail or Bluetooth as long as the image is not protected by Digital Rights Management (DRM).
- ▶ **Use as**
 - **Wallpaper:** You can set an image as the home screen theme.
 - **Outgoing call**
 - **Contact image:** You can set the image of selected entry in contacts. When you receive an incoming call, the image saved in contact is displayed.

- **Start up:** You can set an image as start up screen theme.
- **Shut down:** You can set an image as shut down image.
- ▶ **Move:** Enables the file to be moved to an other folder.
- ▶ **Copy:** Enables the file to be copied to an other folder.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
 - **Rename:** You can rename the image.
 - **Edit:** Enables the image to be edited.
 - **File info.:** Shows information on the selected image file.
- ▶ **Create new folder:** You can create a new folder within the folder currently selected.

- ▶ **Slide show:** You can view the images as a slide show.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **Grid view:** You can view the images as a Grid view.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

My sounds

Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the Default sounds and Voice recordings.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Send:** You can send the selected image via Message, E-mail or Bluetooth as long as the file is not protected by Digital Rights Management (DRM).
- ▶ **Use as**
 - **Voice ringtone:** You can set the sound file as a ringtone for when you receive an incoming voice call.
 - **Video ringtone:** You can set the sound file as a ringtone for when you receive an incoming video call.
 - **Message tone:** You can set the sound file as a ringtone when receiving a message.
 - **Start up:** You can set the sound file as a ringtone when handset starts up.
 - **Shut down:** You can set the sound file as a ringtone when the handset shuts down.

My stuff

- ▶ **Move:** Enables the file to be moved to an other folder.
- ▶ **Copy:** Enables the file to be copied to an other folder.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
 - **Rename:** You can rename the image.
 - **File info.:** Shows information on the selected image file.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

My videos

Menu 6.3

Here you can manage or send downloaded or captured videos clips.

If you press **OK** [Connect], you can activate the video file.



The following are available using the left soft key [Options] in the Video list.

- ▶ **Send:** You can send the selected video clip via Message, E-mail , Bluetooth as long as the clip is not protected by Digital Rights Management (DRM).
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone.
- ▶ **Move:** Moves the file into handset memory or external memory.
- ▶ **Copy:** Copy the file in handset memory or external memory.

- ▶ **Delete:** Deletes the selected video.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
 - **Rename:** You can rename the video.
 - **Info.:** Shows information on the selected video file.
- ▶ **Create new folder:** You can create a new folder.
- ▶ **Sort by:** You can sort files by name, date, or file type.
- ▶ **Memory status:** Displays the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the .

Select a desired video and select **Play** to view the recorded video.

When OK key(Play) is pressed, the video clip will be played with the Media Player. To pause the playback, press  during the playback. To resume the paused playback, press  once again.

To capture the screen shot, select option 3.capture when the playback is paused.

To view the current playback in full screen, select option 1.wide view during the playback.

My stuff

To return to the previous screen size, press the right soft key in full screen mode.

When viewing video clips in the Media Player, the following options are available:

- ▶ **Landscape view:** You can view the video in landscape view mode.
- ▶ **Mute/Unmute:** If the Volume is set to more than 0, Mute mode is activated and if the Volume is set to 0, the Unmute mode is activated.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Repeat:** You can set the repeat option (None/Current file/All files).
- ▶ **File info.:** You can check information on files being played (File name, Size, Date, Type, Duration, Protection).
- ▶ **Send:** You can send the video via Message, E-mail or Bluetooth as long as the file is not protected by Digital Rights Management (DRM).
- ▶ **Delete:** Deletes the selected video.
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone.

My games & apps

Menu 6.4

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Each folder has an embedded link for downloading games or applications. Please note that additional costs may be incurred when using online services.

Others

Menu 6.5

Other files except pictures, sounds, videos, games & applications are stored in this folder.

My memory card

Menu 6.6

If you purchase an optional external microSD memory card, you can manage more content. You can manage content as you do on your phone.

Tools



Quick menu


Menu 7.1

You can specify functions to save in the Quick menu. You can save the functions frequently used in the Quick menu.

Alarms

Menu 7.2

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time. Press  to stop the alarm, and the alarm is released. Press the left soft key [Snooze] and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the left soft key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' which is visible if 12 hour format is specified for the phone.
4. **Select repeat mode:** Select the desired repeat mode using  or select the desired one from the list by pressing left soft key [List].
5. **Select bell:** Select the bell to ring at the alarm time opening the list by pressing left soft key [Edit].
6. **Input memo:** Input alarm name.
7. **Snooze:** You can set the snooze duration for the alarm.
8. When you have finished setting the alarm, press the centre key [Save].

Note

- ▶ The alarm will go off even when the phone is switched off.

Calculator

Menu 7.3

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions. (sin, cos, tan, log, ln, exp, sqrt, deg, rad)

1. Press the left soft key [Options].
2. Select the appropriate function.

You can enter numbers by using the number keys, and the operators by using



You can enter a decimal point by pressing . Whenever you press , characters are sequentially deleted in reverse order. Whenever you hold down , all the characters are deleted in reverse order in one go. When calculation is complete and the result is displayed on the screen, pressing a symbol saves the result into the symbol, and continues calculation.

Converter

Menu 7.4

Using this menu, users can convert **Currency, Surface, Length, Weight, Temperature, Volume and Velocity**.

Currency (Menu 7.4.1)

1. Select the Currency menu.
2. Users can set a currency exchange rate using option menu "Change currency".

Tools

3. Enter currency rates for up to 6 currencies equivalent to GBP and then press [Save].
Then you can convert from one currency to another.
4. You can view the value of up to 6 currency units.
5. Press [Reset] to clear the current input Field.
6. To exit the currency conversion function, press the [Back] key.

Surface (Menu 7.4.2)

1. Select Surface menu.
2. Select the desired unit to convert using [List].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.

5. To exit the Surface conversion function, press [Back] key.

Length (Menu 7.4.3)

1. Select the length menu.
2. Select the desired unit to convert using [List].
3. Enter the standard unit and view your converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the length conversion function, press the [Back] key.

Weight (Menu 7.4.4)

1. Select the Weight menu.
2. Select the desired unit to convert using [List].
3. Enter the standard unit and view the converted value.

4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.
5. To exit the Weight conversion function, press the [Back] key.

Temperature (Menu 7.4.5)

1. Select the Temperature menu.
2. Position the cursor on the desired unit by using the up or down arrow keys.
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the Temperature conversion function, press the [Back] key.
6. You can insert negative values by selecting [-].

Volume (Menu 7.4.6)

1. Select the Volume menu.
2. Select the desired unit to convert using [List].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the volume conversion function, press the [Back] key.

Tools

Velocity (Menu 7.4.7)

1. Select the Velocity menu.
2. Select the desired unit to convert using [List].
3. Enter the standard unit and view the converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.
5. To exit the Velocity conversion function, press the [Back] key.

World time Menu 7.5

The World clock function provides time information on major cities worldwide.

1. You can select a desired city as a base using the left soft key Options → Add city or Options → Add city → Map.
2. You can Change the city using the left soft key Options → Change city or Change current city.

3. You can apply to Daylight Saving time using the left soft key Options → Daylight saving.
4. You can Select the Analogue clock mode Options → Analogue clock.

Sim tool kit Menu 7.6

Your service provider can offer special applications through the SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service.

For more information contact your service provider.

Contacts

Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and Email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact.

Search

Menu 8.2

Performs the contact address search function. The search operation is performed based on a name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number.

Speed dials

Menu 8.3

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

Groups


Menu 8.4

Using this menu you can manage group information (both stored in the Handset and the USIM). In the handset memory, there are 4 default groups: **Family**, **Friends**, **Colleagues** and **School**. You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

Contacts

Service dial numbers Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card).

Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press  to dial the service.

Own number Menu 8.6

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

My business card Menu 8.7

You can create your own business card by pressing the left soft key Add. After entering the name, number, Email and image, you can use it as a business card when sending the message.

Settings Menu 8.8

Display data (Menu 8.8.1)

- ▶ **View contacts from:** Select which contact information shall be displayed (from handset memory, from USIM card or both). All is the default setting.
- ▶ **Name display:** You can set the display order by name.
- ▶ **Show image:** Select whether to display image/avatar or not.

Synchronise contact (Menu 8.8.2)

Note

- ▶ This service is not available in all countries. Please contact your service provider for further information.

You can send the contents of phonebook to the server directly.

Copy all (Menu 8.8.3)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all items or one at a time.

Move all (Menu 8.8.4)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all items or one at a time.

Backup contacts (Menu 8.8.5)

You can save all phonebook data in external memory card by formatting vcard.

Restore contacts (Menu 8.8.6)

You can restore all phonebook data in external memory card to phone memory by formatting vcard.

Clear contacts (Menu 8.8.7)

Clears all contact information. You can delete all contacts saved in the mobile phone memory as well as on the USIM card.

Memory info. (Menu 8.8.8)

You can check the status of memory in this -menu.

Browser

Home

Menu 9.1

You can launch the web browser and access the homepage.

Enter address

Menu 9.2

You can manually enter a URL address and access the associated web page.

- ▶ To enter a symbol, press the left soft key [Options] and select **1.Insert symbol** from **Options** menu to display the symbol table
- ▶ To switch input mode, press the left soft key [Options] and select 2. Input method.

Bookmarks

Menu 9.3

You can store frequently accessed or favourite URLs/Pages. **Send, Add new, Edit, Mark/Unmark** or **Delete** operations can be performed on **Bookmarks**. Several preconfigured URLs are stored as **bookmarks**.

Adding a new bookmark

1. Press the left soft key [Options] and select **2.Add new** from **Options** menu.
2. Enter the title and associated URL information.
3. Press **OK** to save.

Connecting to a desired bookmark

Press **OK** to connect a desired bookmark.


Sending the bookmark to others

Select **Send** from **Options** menu. You can send it via **Message** or **E-mail**.

Deleting a bookmark

Select **Delete** from **Options** menu. You can delete multiple bookmarks using the **Mark/Unmark** option.

Editing a bookmark

Select **Edit** from **Options** menu. Edit the title and associated URL information. Press  to save.

Note

- ▶ You can enjoy the Mobile TV service.

Saved pages

Menu 9.4

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

History

Menu 9.5

You can view the list of the pages you've already connected.

Settings

Menu 9.6

You can change the settings for browser connectivity, display, security, and certificates.

Profiles (Menu 9.6.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

Browser

Appearance settings (Menu 9.6.2)

Sets the browser default character set to one of the following:

Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Cache (Menu 9.6.3)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies (Menu 9.6.4)

Enabling Cookie allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Reset settings (Menu 9.6.5)

Select this to reset your phone to its default browser configuration.

Security (Menu 9.6.6)

Certificates list

If stored, a list of root/ca certificates required for WTLS/TLS can be found here. Certificates can be viewed from the list.

Session clear

Secure (WTLS/TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Bluetooth

Menu *.1

Bluetooth QD ID: B012660

Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA or other phones.

Note

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

1. Getting started

- **Menu *. Connectivity** → **1. Bluetooth** → **1. Turn on/off**

To use the Bluetooth function, you must first set **Turn on**.

2. Searching new device

- **Menu** → ***.Connectivity** → **1. Bluetooth** → **2. Search new device**

Using this menu, you can search and pair a new Bluetooth device with your phone. Please read <Pairing devices>.

3. Paired devices

If no paired device exists.

Option → **Add new device**

If a paired device already exists.

- **Menu** → **#. Settings** → **7. Connectivity** → **1. Bluetooth** → **1. Paired devices**

Connectivity

Option

- ▶ **Add new device:** Using this menu, you can pair a new Bluetooth device with your phone.
- ▶ **Rename:** Using this menu, you can use a nick name for a paired device.
- ▶ **Connect**
 1. If you want to open the connection to the selected device, select Connect.
 2. If you want to close the connection to the selected device, select Disconnect.
- ▶ **Delete:** Using this menu, you can delete the paired Bluetooth device.
- ▶ **Delete all:** Using this menu, you can delete all of the paired Bluetooth devices.

4. Configuring Bluetooth settings

- **Menu *.Connectivity → 1. Bluetooth → 4. Settings**
- **My visibility:** Set [My device visibility] to [Visible] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.
- **My name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My device visibility] is set to [Visible].
- **Supported services:** This menu shows the list of available Bluetooth services in your phone.
- **My address:** This menu shows your Bluetooth device address.

Note

- ▶ When user use Bluetooth Devices with the handset, the security of the handset is at risk. Therefore, we recommend that Bluetooth visibility be set to Hidden after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

<Pairing devices>

1. To search for a Bluetooth device to pair, press Option > Add new device.
2. Screen shows **Searching for devices**. Bluetooth devices within a range of 10m will be found.
3. If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

4. Pairing procedure

- Press [Add]. A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

<Connecting a headset or a handsfree>

1. Pair the headset according to the procedures described in the Pairing Devices section.
2. To use the headset, select the headset from the paired devices, select Options>Connect.
3. To disconnect the headset, select the headset from the paired devices, select Options>Disconnect.

Connectivity

<Deleting devices>

1. Select a device to delete from the Paired devices.
2. You can delete a device by selecting Options > Delete. To delete all paired devices, select Options > Delete All.

<Transmitting data using Bluetooth>

1. To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send a file in the My Files to another device, select Menu > 6. My Files > 1. My images / 2. My sounds / 3. My videos / 5. Others / 6. My memory card > Select data to transmit > Options > Send > 3. Bluetooth
2. Transmitting data
 - 1) The paired devices are displayed. If the desired device does not exist in the list, select [Refresh].

- 2) Select the device to which you want to transmit data from the listed devices on the screen and press it.
- 3) If the other party allows your transmission, the data is transmitted.

<Receiving data using Bluetooth>

If another party attempts to transmit data, question for accepting the connection will appear on the screen. If you allow the connection, the data will be transmitted to your phone.

During data transmission, the Bluetooth icon is changed to File Transfer icon.

And the received files are saved to appropriate folders according to file types. For example, image files are saved to My image folder automatically.

Server sync

Menu *2

Note

- ▶ This service is not available in all countries. Please contact your service provider for further information.

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, To do, and Memo via a wireless network.

Connect

1. Select the Connect item and then press **OK**.
2. Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

Logs

Select the Logs item and then press **OK** to view the log for the last synchronization operation performed.

Server synch. centre

1. Select the Server synch. centre item and then press **OK**.
2. This menu allows you to configure the profile for a synchronization server.
 - ▶ **Profile name:** Input the name for the profile.
 - ▶ **Host address:** Contact your service provider.
 - ▶ **SyncML proxy:** Contact your service provider.
 - ▶ **User name:** Enter your user ID for synchronization server.
 - ▶ **Password:** Input your password.
 - ▶ **Contacts:** Select whether to synchronise Contacts or not.

Connectivity

- ▶ **Contact name:** Input the contacts database name for server access.
- ▶ **Calendar:** Select whether to synchronise Calendar or not.
- ▶ **Calendar name:** Input the calendar database name for server access.
- ▶ **To do:** Select whether to synchronise To do or not.
- ▶ **To do name:** Input the To do database name for server access.
- ▶ **Memo:** Select whether to synchronise Memo or not.
- ▶ **Memo name:** Input the Memo database name for server access.
- ▶ **Sync type:** Select the synchronization type below.
- ▶ **Access point:** Select an access point to use for the data connection.
- ▶ **Sync mode:** Select the synchronization mode

USB connection

Menu *3

USB connection of your phone can be used for several purposes. User must set USB connection mode for several usages.

If user uses Mass storage function like USB memory stick, select Mass storage in this menu. Mass storage is available for only external memory card.

If user use other function such as dial-up, PC Synca etc. except Mass storage, select Data service in this menu.

Calendar





Menu 0.1

Schedule inquiry and search

1. Reference by Months

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked.

The schedule saved for the date where the cursor is located is represented by a grey box. Pressing the shortcut key

1 moves to the previous year and pressing **2** move to the next year and pressing **5** moves to today. Pressing **7** moves to the previous month, and **9** moves to the next month. Pressing **4** moves to the weekly calendar. You can move the date using  /  /  / .

2. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user. You can send the schedule to another phone or an Internet site through SMS (Text message) or MMS (Multimedia message) or E-mail or Bluetooth using the left soft key [Options].

Add new event

You can add an event. You can configure the start date, end date, start time, end time, contents, type of event, repetition, alarm of the schedule.

- ▶ **Set type:** Appointment, Birthday, Anniversary
- ▶ **Set repeat:** Once, Daily, Weekly, Monthly, Annually, User setting

Organiser

- ▶ **Set alarm:** No alarm, On time, 15 mins before, 30 mins before, 1 hour before, 1 day before, 3 days before, 1 week before

Delete schedule

1. Delete previous schedules

You can delete all previous schedules using this function.

2. Delete all schedules

You can delete all saved schedule contents using this function.

Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select

Set holiday.

The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select **Clear holiday.**

Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

To do

Menu 0.2

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

Add

To add a task, press the left soft key [Options] in the Tasks list management screen and select **Add new event** option. Then input the date, description and priority for the task.

When you have finished entering the data, press the centre key [Save] to save the new task.

Detailed view and Edit

To view detailed task contents, locate the cursor on the desired item in the Tasks list, and then press the centre key. You can send, edit and delete a task using the left soft key [Options].

Set job status

Tasks set as finished are displayed as crossed out below the unfinished tasks in the Tasks list. You can set Finished tasks to Not finished by selecting **Options**.

Memo


Menu 0.3

Using the memo management function, you can view and manage saved memo contents, and add new memos.

Add memo

To add a new memo, press the left soft key [Add] or [Add new memo] in Options. Enter the contents of the memo. You can save the memo to the list by pressing the centre key [Save].

Edit and delete memo

Highlight the desired memo and press  to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing right soft key [Back]. You can select Multiple or All memos using the **Mark/Unmark** option and then delete a memo using the Delete option.

Organiser

Secret memo


Menu 0.4

You can write a **secret memo** to protect your privacy. You enter the security code to use this menu.

Add new memo

To add a new memo, press the left soft key [Add] or [Options]. Enter the contents of the memo. You can save the memo to the list by pressing the centre key [Save].

Edit and delete a private memo

Highlight the desired memo and press  to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing right soft key [Back]. You can select Multiple or All memos using the Mark/Unmark option and then delete a memo using the Delete option.

Date finder

Menu 0.5

You can find the date you want with this function.

Settings

Menu 0.6

Calendar (Menu 0.6.1)

You can set the configurations to view the calendar.

- ▶ **Default view:** You can set the default value to view a calendar; Month view, Week view
- ▶ **Week start time:** 1AM, 2AM, 3AM, 4AM, 5AM, 6AM, 7AM, 8AM, 9AM, 10AM, 11AM, 12PM
- ▶ **Week starts on:** You can set the default day to start a week; Sunday, Monday

Backup calendar & to do

(Menu 0.6.2)

You can create the backup files of the calendar or tasks entries saved in the phone when you insert an external memory.

Restore calendar & to do

(Menu 0.6.3)

You can restore the backup files of calendar or tasks when you insert an external memory.

Memory info. (Menu 0.6.4)

You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

Clear all (Menu 0.6.5)

You can clear all of the Calendar, Tasks, Memo and Secret memo.

Settings

Phone

Menu #.1

Auto key lock (Menu #.1.1)

If you activate this function, the keypad will be locked automatically in standby mode without requesting the action of a key press.

Language (Menu #.1.2)

Select the display language. You can select **Automatic** language option to change display language to the USIM card supported language.

Power save (Menu #.1.3)

Decide whether to activate the power save mode or not.

Handset information (Menu #.1.4)

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

Screen

Menu #.2

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

Screen theme (Menu #.2.1)

You can set the screen theme to be displayed on the main screen.

Menu style (Menu #.2.2)

You can select the desired menu style from Grid style and One by one style.

Font (Menu #.2.3)

You can set the font style, dialling font size, and dialling font colour using



Backlight (Menu #.2.4)

You can set the backlight duration and the brightness on the Home screen and the duration on the Keypad individually.

Greeting message (Menu #.2.5)

After selecting **On**, you can write a welcome message.

Date & Time Menu #.3

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time configured by the user is valid only while the phone is turned on.

Time (Menu #.3.1)

1. Select the **Time** item from the Date & time list, and then press **OK**.
2. Move to your desired field, **Hour**, **Minute**, **Second** or am/pm field using the navigation keys. (When you have selected **12 hour** as **Time format**)

3. Enter **Hour**, **Minute** and **Second** using the number keys.
4. Select the time format using **▶**, **◀**.
5. Select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.
6. Press the centre soft key [Save] to set the time with the specified value.

Date (Menu #.3.2)

1. Select the **Date** item from the Date & time list, and then press **OK**.
2. Select the date format using **▶**, **◀**.
3. Enter **Day**, **Month** and **Year** using the number keys.
4. Press the centre soft key [Save] to set the date with the specified value.

Settings

Auto update date/time (Menu #.3.3)

When Auto Update is configured to **On**, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, the time and date update is confirmed before it is updated automatically.

Daylight saving (Menu #.3.4)

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Network

Menu #.4

Select Network (Menu #.4.1)

Select between **Automatic** and **Manual**.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

Network mode (Menu #.4.2)

You can set a type of network to search for when networks are searched in the **Select network** menu.

- ▶ **Automatic:** Searches all the networks connectable.
- ▶ **3G Only:** Searches only networks supporting 3G.

Preferred lists (Menu #.4.3)

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

- ▶ **Add new:** You can add a new network using the followings.
 - **Search:** You can select one from the network list stored in the phone.
 - **Enter new network:** You can enter the country code (MCC), the network code (MNC) and RAT to add.
- ▶ **Delete:** Deletes the selected network.
- ▶ **Edit:** You can modify the information of the selected network.
- ▶ **Move down:** Moves the selected network downward.

Settings

Access points (Menu #.4.4)

This menu shows the access point list.

You can create new profiles, delete or edit them by using the Option Menu.

However, you cannot delete or edit default configurations depending on country variant.

You can edit the following configuration items by pressing the left soft key [Option] and Edit.

Connection title	Access Point profile name.
Bearer	Choose the bearer from the list. (Default is UMTS .)
Authentication	Choose the authentication from the list.(Default is No auth)
User name	Information provided by service provider.
Password	Information provided by service provider.
APN	APN name to access network. Information provided by service provider.

Press confirm key to save any configuration changes.

Streaming (Menu #.4.5)

If you want to set different network settings to play streaming content, you can set different network settings.

Security

Menu #.5

PIN code request (Menu #.5.1)

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

Note

- ▶ Press the right soft key in the PIN code entry window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.
- ▶ The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

Settings

Handset lock (Menu #.5.2)

You can lock your phone. The following 4 lock functions are available.

When switching on: Locks the handset whenever the handset is switched on.

If SIM changed: Locks the handset when the phone's USIM card has been changed.

Immediate: Locks the handset immediately.

None: Deactivates the lock function.

You are requested to enter the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.

Change codes (Menu #.5.3)

You can change the PIN, PIN2, and the mobile phone password.

Memory manager Menu #.6

Handset common memory (Menu #.6.1)

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

Handset reserved memory (Menu #.6.2)

This function shows the status of the User reserved memory. The usual contents are Text messages, Contacts, Calendar, Tasks, Memo.

1. Alarm(except default alarm)
2. Call history

3. Bookmarks(except default bookmarks)

4. Miscellaneous

- ▶ Secret memo
- ▶ Quick menu(except default menus)
- ▶ Browser > Enter Address > History
- ▶ Browser > HistoryBrowser > Saved page
- ▶ Messages > Recently used no.
- ▶ Call cost
- ▶ Call duration

And it gives a clear illustration of the actual amount compared with the total amount for each item.

SIM memory (Menu #.6.3)

This function shows the status of the USIM card user memory.

External memory (Menu #.6.4)

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

Primary storage setting (Menu #.6.5)

You can select the storage to download the file: Handset memory or External memory.

Reset settings

Menu #.7

Select this to reset your phone to its default configuration. You are requested to enter the security code.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Standard Battery



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

Headset (Optional)

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer/termination button.



SGEY0005516



SGEY0003210



SGEY0003209

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service center.

As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.

Technical data

General

Product name: KU250

System: GSM900/DCS1800/PCS 1900, WCDMA 2100

Net weight: 57.2g (Without battery)

Ambient Temperatures

Normal: 55°C

Charging: 45°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU250,U250

Trade Name

LG

CE 0168

Applicable Standards Details

REUTE Directive 1999/5/EC

ETSI EN 301 488-01 V1.3.1, ETSI EN 301 488-07 V1.3.1

ETSI EN 301 488-17 V1.3.1, ETSI EN 301 488-24 V1.3.1

ETSI TS 151 010-1 V5.3.0 specified by ETSI EN 301 511 V8.0.2

ETSI TS 134 121 V5.3.0 specified by ETSI EN 301 908-1 V2.2.1 ETSI EN 301 908-2 V2.2.1,

ETSI EN 300 328 V1.6.1

EN 50380/EN 50361:2001

EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name

Issued Date

Jin Seog, Kim / Director

10.Apr. 2007

LG Electronics Inc. Amsterdam Office
Veluwezoom 16, 1327 AE Almere, The Netherlands
Tel : +31 - 36-547 - 6940, e-mail : seo@in @ lge.com


Signature of representative