



P/N : MMBB0098415

Revision 1.2
PRINTED IN KOREA

用戶手冊

型號 : G7100



繁體中文
簡體中文
ENGLISH



GPRS與MMS手機

用戶手冊

型號 : G7100

使用手機前，請務必詳讀本手冊。
並小心保存本手冊，以備日後參考之用。

GPRS與MMS手機

用戶手冊

型號：G7100

使用手機前，請務必詳讀本手冊。

並小心保存本手冊，以備日後參考之用。



在飛機內，GSM手機必須經常保持關機。



在加油站、儲油槽、化學工廠或爆破場地附近，請勿啓動手機。



在醫院內請務必關機：心律調整器和助聽器等醫療電子裝置可能會受到干擾。



所有無線電收發器都有可能對鄰近的電子裝置造成干擾。手機可能會對電視機、收音機、電腦等造成輕微的干擾。



駕駛時，請勿用手握著手機。



請勿自行拆開手機或電池。



手機內附有細小配件。為免小孩誤吞的危險，請將手機放置於小孩觸摸不到的地方。



勿在手濕時觸摸充電器。



安全須知



請務必使用指定的電池和充電器，否則可能會損壞手機。

請注意:



耗盡的電池需依法令規定予以處置。



請務必使用原附件，以避免對手機造成損害。



緊急撥號也許未能適用於所有網絡。請勿將手機用作緊急救援的主要通訊工具。



切勿過度用力，扭動翻蓋這樣做可能會損壞 LCD 顯示屏。有關詳細資料，請參閱第11頁。

重要資訊

本用戶指南內含有關本手機之操作與使用的重要資訊。請務必仔細詳讀所有資訊，以便能發揮最高的手機性能，並防止手機遭受任何損壞或不當使用。未經本用戶指南中明確許可的任何變更或改裝，將會使您的產品保用無效。



暴露於無線電波和比吸收率(SAR)的訊息

此G7100型號手機設計符合有關無線電波輻射的要求。這要求是基於科學的研究後制定的，並且已包含了一定的安全寬容度，以確保不同年齡和健康狀況的人群的安全。

- 流動電話的輻射標準採用的計算單位被稱為「比吸收率」(“Specific Absorption Rate” or “SAR”)。在測量比吸收率(SAR)時，均採用標準測量方式，測量手機在不同波段中以最高認可發射功率操作時的比吸收率(SAR)。
- 也許不同型號LG手機的比吸收率(SAR)可能有所差異，但它們都符合暴露於無線電波的相關國際標準。
- 根據國際非電離輻射防護委員會(INCRP)所發展的標準，適用於公眾的無線電話比吸收率(SAR)限制是平均每10克組織2.0瓦特/千克(W/kg)。
- 經DASY3的測試，此型號的最高比吸收率(SAR)值為 0.3230 瓦特/千克 (10克)。



目錄

綜覽

手機部位圖解	10
手機正面	10
手機背面	12
按鍵介紹	13
側鍵	14
字母數字鍵	15

顯示資訊

顯示資訊	16
屏幕圖標	16

開始使用

安裝	17
1. 插入SIM咭	17
2. 取出SIM咭	17
3. 安裝電池	18
4. 為電池充電	18
5. 拔下充電器	19
撥打電話與接聽來電	20
撥打電話	20
國際電話	20
從電話簿撥號	20

附加功能

來電功能表	21
1 通話時	21
2 多方通話或會議通話	23
密碼鎖	25
PIN碼(4-8碼)	25
PIN2碼(4-8碼)	25
PUK碼(4-8碼)	25
PUK2碼(4-8碼)	25
保安密碼(4-8碼)	25



功能表	26
訊息 [功能表 1]	28
寫短訊[功能表1-1]	28
寫多媒體訊息[功能表1-2]	30
收件箱[功能表1-3]	37
發件箱[功能表1-4]	38
留言信箱[功能表1-5]	40
小區廣播[功能表1-6]	40
常用短語[功能表1-7]	42
設定[功能表1-8]	43
通話記錄 [功能表 2]	45
未接來電[功能表2-1]	45
已接來電[功能表2-2]	45
已撥電話[功能表2-3]	45
刪除最近通話[功能表2-4]	45
通話計費[功能表2-5]	45
GPRS訊息[功能表2-6]	48
情景模式 [功能表 3]	49
震動[功能表3-1]	49
靜音[功能表3-2]	49
標準[功能表3-3]	49
大聲[功能表3-4]	49
聽筒[功能表3-5]	49
車用[功能表3-6]	49
相機 [功能表 4]	52
拍照[功能表4-1]	52
照在相框中[功能表4-2]	53
連續拍攝[功能表4-3]	53
我的相簿[功能表4-4]	53
設定[功能表4-5]	54



目錄

設定 [功能表 5]	55
響鬧[功能表5-1]	55
日期和時間[功能表5-2]	55
手機設定[功能表5-3]	56
通話設定[功能表5-4]	58
保密設定[功能表5-5]	63
網絡設定[功能表5-6]	66
重新設定[功能表5-7]	66
公事包 [功能表 6]	67
日程表[功能表6-1]	67
電話簿[功能表6-2]	68
娛樂與工具 [功能表 7]	75
遊戲[功能表7-1]	75
計算機[功能表7-2]	75
我的文件夾[功能表7-3]	76
旋律作曲家[功能表7-4]	77
單位換算器[功能表7-5]	77
時區設置[功能表7-6]	77
語音備忘錄[功能表7-7]	78
啓動紅外線[功能表7-8]	79
互聯網 [功能表 8]	79
主頁[功能表8-1]	79
書籤[功能表8-2]	79
Push訊息[功能表8-3]	79
上網設定[功能表8-4]	80
轉到URL[功能表8-5]	82
緩存[功能表8-6]	82
安全設置[功能表8-7]	82
重新設定[功能表8-8]	82
瀏覽器版本[功能表8-9]	82




Java [功能表 9]	84
應用[功能表9-1]	84
下載[功能表9-2]	84
記憶體狀態[功能表9-3]	84
收藏夾 [功能表 10]	85
備忘錄	86
手機的維護	87
技術資料	89



手機部位圖解

手機正面

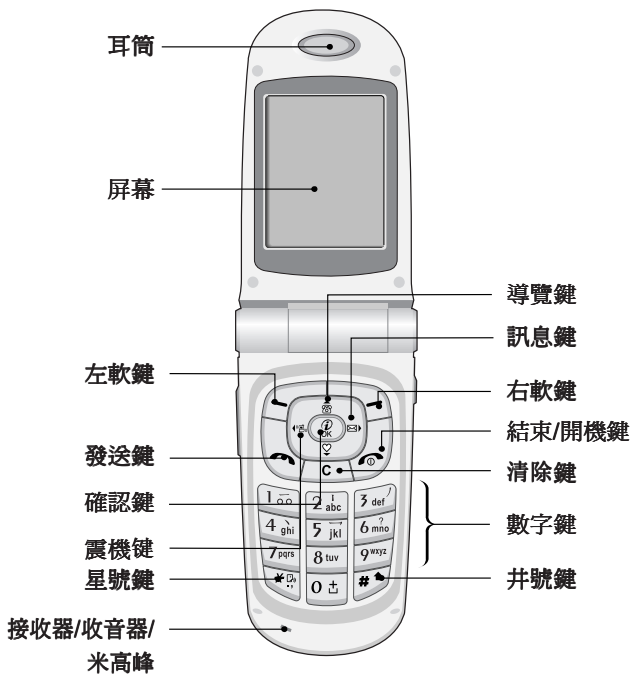



LCD顯示屏可順時針旋轉 90 度，也可逆時針旋轉 180 度。但是，如果強行旋轉，將會導致手機嚴重損壞。



手機部位圖解










手機背面








以下介紹本手機各個按鍵：

鍵盤介紹



按 鍵	說 明
	<p>左軟鍵/右軟鍵 這兩個鍵各可執行屏幕中顯示在其正上方的文字所代表的功能。</p>
	<p>震動鍵 您可直接啓動震機功能。</p> <p>訊息鍵 您可直接進入訊息目錄，毋須在功能表系統中逐頁翻閱。</p> <p>導覽鍵 可用來翻閱姓名、電話簿、功能表或設定選項。按  鍵時，可檢視收藏夾功能表清單。</p> <p>WAP 熱鍵 (= 確認鍵) 按此鍵可直接接駁WAP。</p>
	<p>發送鍵 您可撥打電話及接聽來電。如果您按此鍵之前未輸入電話號碼，手機上會顯示最近撥出、接聽及未接的電話號碼。</p>
	<p>數字鍵 在備用模式下，這些按鍵主要用來撥號；在編輯模式下則用來輸入數字或文字。若您長按住這些按鍵：</p> <ul style="list-style-type: none"> •  鍵可用來撥打留言信箱。 •  鍵可用來撥打國際電話。 •  至  鍵可用來快速撥號。



按鍵介紹

按 鍵	說 明
	結束/開機鍵 用來結束或拒接一通電話。此鍵也可當作開機鍵，按住此鍵幾秒即可開機。
	可刪除字元，返回功能表。此外，在備用模式中按一下此按鍵時，可檢視語音備忘錄清單。
	如按住則可啓用語音辨識。

側鍵

按 鍵	說 明
	上/下側鍵 當合上翻蓋時，如接著按下此鍵，將分別顯示時間、日期、我的顯示及問候語。播放時限，則會根據顯示時間的設定顯示時間。
	相機鍵 此鍵用來拍攝及儲存相片。



字母數字鍵

下列表中所示為各個字母數字鍵的對應關係。

按 鍵	說 明
	., / ? ! - : ' " 1
	A B C 2 Ä Å Á Â Ã Ä Å Æ Ç a b c ä å á â ã ä æ ç
	D E F 3 È É Ê d e f è é ê
	G H I 4 ï ï í î Ğ g h i ï ï í î ğ
	J K L 5 j k l
	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Œ m n o ñ ö ø ò ó ô õ œ
	P Q R S 7 Ş ş p q r s β ş
	T U V 8 Ü Û Ú Û t u v ü ù ú û
	W X Y Z 9 w x y z
	[空格] 0



顯示資訊


屏幕上將會顯示多種圖標，如下所示：

屏幕圖標

圖標/指示器	說明
	顯示網絡訊號的強度。
	電話已接通。
	您可以使用 GPRS 服務。
	表示您正在使用漫遊服務。
	撥打電話使用的是路線1/路線2 – 如果您已申請雙線路服務。
	鬧鐘已設好，並已啓動。
	顯示電池的狀態。
	您收到一個文字訊息。
	您收到一個留言訊息（若您有申請留言訊息服務）
	您收到一個 push 訊息。
	您可查看您的日程表。
	所有音響提示已被關閉。
	音效設定檔內的標準目錄。
	音效設定檔內的大聲目錄。
	音效設定檔內的靜音目錄。
	音效設定內的聽筒目錄。
	音效設定內的車用目錄。
	您可轉接來電。




1. 插入SIM咭

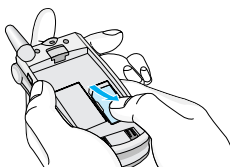

找出手機背面的SIM咭槽。按照以下步驟安裝SIM咭。

1. 如果電池已裝在手機內，先將它取出。
2. 將SIM咭插入SIM咭槽的銀色SIM咭座底下，金色接觸面向下，切角向右。

2. 取出SIM咭

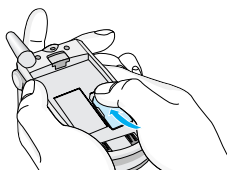

依下面步驟取出 SIM咭。

1. 如已裝入電池請先取出。
2. 從插槽中取出 SIM咭。


注意

- 在手機開啓時取出電池可能會導致手機發生故障。
- SIM咭的金屬接觸面容易刮損。握住及安裝SIM咭時請特別小心。請遵照SIM咭隨附的操作指示。




安裝

3. 安裝電池

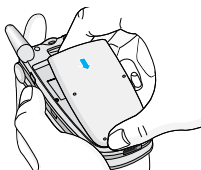


1. 將電池放在手機背面。

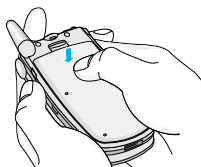


2. 將電池推入手機，直到您聽到卡嗒一聲。

4. 為電池充電

將旅行充電器接駁至手機之前，您必須先安裝好電池。

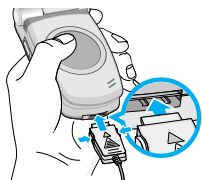

1. 將旅行充電器的一端接頭插入手機底端。

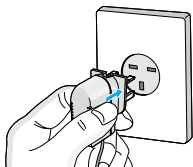

2. 將充電器的另一端接駁至牆上的交流電源插座。
請務必使用手機內附的充電器。





警告

- 請勿強力推進接頭，這樣可能會損壞手機及/或旅行充電器。

5. 拔下充電器



壓住旅行充電器接頭兩側的按鈕即可從手機拔出充電器。

附註

- 請記得在更換電池之後將用過的電池充滿電。
- 在充電期間，請勿移除您的電池或SIM卡。
- 連接旅行充電器後，屏幕上會顯示「電池充電中」。當電池完全耗盡時，背景燈會亮起，但不會顯示「電池充電中」。

附註

如果電池無法充電：

- 關閉手機。
- 確定電池是否安裝正確。



撥打電話與接聽來電

撥打電話

1. 輸入電話號碼（加上區碼）。要修改屏幕上的號碼時，請按 。
2. 按 鍵以撥打號碼。
3. 要結束通話時，按 鍵。

國際電話

1. 按住 鍵可輸入國際撥號前碼。“+”鍵可取代國際撥號碼。
2. 輸入國碼、區碼和電話號碼。
3. 按 鍵。

從電話簿撥號



1. 在備用模式下，按 鍵 [電話簿]。
2. 當屏幕上顯示電話簿的目錄時，請按 鍵選擇搜尋。
3. 依姓名或號碼搜找到您撥號的項目之後，按 鍵撥號。





在通話期間，顯示在手機屏幕上的功能表不同於備用畫面下的預設功能表，我們接下來介紹一些通話中的功能選項。

1 通話時



1-1 保留一個通話


當您撥打或接聽電話之後，按  鍵[發送]可保留通話。保留通話之後，再按  鍵[發送]即可恢復通話。

1-2 撥打第二通電話

您可從電話簿撥打第二個電話的號碼。按  鍵[電話簿]，然後選擇搜尋。若要在通話中將撥打的號碼存入電話簿，按  鍵[電話簿]，然後選擇加入新號碼。

1-3 在兩個電話之間切換

如果想要在兩個電話之間切換，請選擇  鍵[選項]，然後選擇切換，或直接按  鍵 [發送]。

您可按上/下箭號鍵選定其中一個通話。如果您想要結束其中一個通話，先選定您想結束的通話，然後按  鍵[結束]。



1-4 接聽來電


當手機發出響鈴時，按  鍵[發送]即可接聽來電。

手機也可在您正在通話時向您發出來電提示。您的耳筒中會響起一個嘟音，然後屏幕上會顯示有第二個來電正在等待中。此功能稱為「來電等候」，能否使用則視乎您的網絡能否支援而定。有關如何啟動及關閉來電等待功能的詳細說明，請參閱有關「來電等候」的章節[目錄5-4-4]。









來電功能表

若已啟動來電等候功能，您可按  鍵[發送]或選擇  鍵[接聽]，以保留第一個電話並接聽第二個電話。



您可選擇  鍵[功能表]，再選擇結束並接聽，以結束當前的通話並接聽等候中的電話。

1-5 拒接來電

在非通話狀態下，如果機蓋已關閉，您可以按  [結束]或長按  鍵，在不接聽的情況下拒接來電。


若您正在通話中，可按  鍵[功能表]並選擇多方通話/結束並通話或按  鍵[結束]來拒接第一個來電。若您正在通話中，可按  鍵[功能表]並選擇多方通話/拒接或按  鍵[結束]來拒接一通來電。

1-6 將聽筒靜音


在通話期間按  鍵[選項]，然後選擇靜音，可將您的手機聽筒靜音。要恢復手機聲音時，請按  鍵[取消靜音]。

手機被靜音時，來電者無法聽到您的聲音，不過您仍可聽到他們的聲音。

1-7 在通話時開啓雙音多頻音

在通話時開啓雙音多頻音，例如，以讓您的手機使用自動總機接線系統，選擇  鍵[選項]，再選擇 **DTMF**開啓。要關閉雙音多頻音時，請依相同步驟關閉。

1-8 呼叫訊息與無主題主功能表

在通話中目錄下選擇  鍵[選項]，然後選擇訊息或「SIM咭工具組」(屏幕上名稱視乎網絡商之SIM咭)，您即可到達「訊息」及「SIM咭工具組」主目錄選項。只有當您手機內的SIM咭可支援SIM咭工具組服務時，SIM咭工具組目錄才會出現在屏幕上。





2 多方通話或會議通話

若您的網絡服務供應商能支援多方通話或會議服務，此功能將使您可同時與超過一位來電者對話。


要啓動多方通話，您必須至少有一個電話正在通話中以及一個電話保留中，同時這兩個電話都已被接聽。啓動多方通話之後，啓動者可添加、結束或抽出（即從多方通話中抽出，但仍與您連線）任何一個電話。這些選項都包含在通話中目錄內。

一組多方通話可容許最多5位通話者。通話開始之後，您將擁有此多方通話的控制權，只有您可添加其他通話者到這組多方通話。


2-1 撥打第二個電話

您可在通話時撥打第二個電話。如要撥打第二個電話，請輸入其電話號碼，然後按  鍵[發送]。當您接通第二個電話時，第一個電話會自動被保留。跟著，您可選擇  鍵[選項]，然後選擇切換在兩通電話之間切換。


2-2 啓動多方通話

您可選擇  鍵[選項]，然後選擇多方通話/全部加入，將一個保留中的通話聯結至當前正在進行的通話，以形成一組多方通話。

2-3 保留多方通話

如要保留多方通話，選擇  鍵[選項]，然後選擇多方通話/全部保留。


2-4 啓用保留中的多方通話

如要恢復保留中的多方通話，請選擇  鍵[選項]，然後選擇多方通話/全部加入。





來電功能表


2-5 將另一個電話加入多方通話

若要將當前進行中的通話加入保留中的多方通話，請選擇  鍵 [選項]，然後選擇多方通話/全部加入。


2-6 顯示多方通話中的通話者

您可按  鍵和  鍵在手機屏幕上逐一顯示組成多方通話的各位通話者號碼。




2-7 保留多方通話中其中一位通話者的通話

如果您想要保留多方通話中其中一位通話者的通話（其號碼目前顯示在屏幕上），請選擇  鍵 [選項]，然後選擇多方通話/排除。

2-8 在多方通話中進行私人通話

如果您想要與多方通話中其中一位通話者進行私人通話，首先將該通話者的電話號碼顯示在屏幕上，然後選擇  鍵 [選項]，再選擇多方通話/私人通話，將所有其他通話者的通話保留。

2-9 結束多方通話

按  鍵 [結束] 將可結束屏幕上目前顯示的多方通話者之通話。如要結束一組多方通話，請按  鍵 [選項]，然後選擇多方通話/結束多方通話。選擇  鍵 [選項]，然後選擇多方通話/全部結束，將會結束所有進行中及保留中的通話。



您可利用本章所介紹的存取碼來防止您的手機遭人盜用。這些存取碼（除了PUK和PUK2碼之外）都可通過[功能表5-5-5]更改。

PIN碼(4-8碼)

PIN碼（私人識別碼）可保護您的SIM咭免受他人盜用。PIN碼通常是隨SIM咭提供的。當PIN碼被設定為啓動時，每一次開機時，手機都會要求您輸入PIN碼。相反的，當PIN碼被設定為關閉時，您的手機不會要求PIN碼而會直接連接網絡。

PIN2碼(4-8碼)

PIN2碼是您使用某些功能之前必須輸入的密碼，例如通話計費、固定撥號等。此PIN2碼可能會隨一些SIM咭提供。您的SIM咭須能支援這些功能，您方可使用。

PUK碼(4-8碼)

PUK碼（私人解鎖碼）可用來解開已被鎖閉的PIN碼。此PUK碼可能會隨一些SIM咭提供。若無，請向您當地的服務供應商索取此碼。如您遺失此碼，也請聯絡您的服務供應商。

PUK2碼(4-8碼)

PUK2碼可用來解開已被鎖閉的PIN2碼。此PUK2碼可能會隨一些SIM咭提供。如您遺失此碼，請聯絡您的服務供應商。

保安密碼(4-8碼)

保安密碼可防止您的手機遭人盜用。此密碼通常隨手機一起提供。當您要刪除所有手機記錄或啓動「恢復原廠設定」功能表時，將需要使用安全密碼。預設的密碼是“0000”。



功能表



1 訊息

- 1 寫短訊
- 2 寫多媒體訊息
- 3 收件箱
- 4 發件箱
- 5 留言信箱
- 6 小區廣播
- 7 常用短語
- 8 設定



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥電話
- 4 刪除最近通話
- 5 通話計費
- 6 GPRS訊息



3 情景模式

- 1 震動
- 2 靜音
- 3 標準

- 4 大聲
- 5 聽筒
- 6 車用



4 相機

- 1 拍照
- 2 照在相框中
- 3 連續拍攝
- 4 我的相簿
- 5 設定



5 設定

- 1 響鬧
- 2 日期和時間
- 3 手機設定
- 4 通話設定
- 5 保密設定
- 6 網絡設定
- 7 重新設定



6 公事包

- 1 日程表
- 2 電話簿



7 娛樂與工具

- 1 遊戲
- 2 計算機
- 3 我的文件夾
- 4 旋律作曲家
- 5 單位換算器
- 6 時區設置
- 7 語音備忘錄
- 8 啓動紅外線



8 互聯網

- 1 主頁
- 2 書籤
- 3 Push訊息
- 4 上網設定
- 5 轉到URL
- 6 緩存
- 7 安全設置
- 8 重新設定
- 9 瀏覽器版本



9 Java

- 1 應用
- 2 下載
- 3 記憶體狀態



10 收藏夾



11 SIM咭服務

本功能表內容視乎SIM咭及網絡服務而定。





訊息 [功能表 1]

此功能表包括SMS(短訊服務)、MMS(多媒體訊息服務)，留言，以及網絡服務訊息之相關功能。

寫短訊[功能表1-1]

輸入及編輯文字訊息、查看訊息頁數。

1. 按  鍵 [選擇] 以進入**訊息**功能表。
2. 如果您想輸入新訊息，請選取**寫短訊**。
3. 要使文字輸入更加方便，請使用 T9。有關詳細資料，請參閱**如何使用T9輸入法**(第33頁)。
4. 按[加入]可插入文字。
5. 如果您要設定文字選項或結束輸入，請按  [選項]。

附註

- 支援 EMS 第 5 版的手機可以傳送彩色相片、聲音及文字樣式等。如果對方的手機不支援此類選項，則可能無法接收相片、聲音或文字樣式。



加入

- **符號**

新增特定字元。

- **圖片**

在短訊中插入**預設**圖片或**我的文件夾**中可用的圖片。

- **音樂**

在短訊中插入可用的聲音。

- **常用短語**

使用手機已設定的**常用短語**。

- **電話簿**

在**電話簿**中新增電話號碼或電郵地址。



- **名片**

將聯絡資訊新增至訊息。

選項

- **發送**

發送文字訊息。

1. 輸入聯絡人電話號碼。
2. 按  新增更多聯絡人。
3. 在電話簿中新增電話號碼。
4. 輸入電話號碼後按 .




訊息 [功能表 1]

- **儲存**
將訊息儲存至發信箱。
- **字體**
選取字體的**大小與風格**。
- **顏色**
選取前景與背景的**顏色**。
- **對齊**
調整訊息內容的對齊方式為**靠右**、**靠中**或**靠左**。
- **添加入字典**
新增個人常用語。僅在編輯模式為**T9Abc/T9abc/T9ABC**時才會顯示此功能表。
- **T9語言輸入法**
選取 T9 輸入模式。
- **退出**
如果您在輸入訊息時按 **退出**，則可以結束輸入並返回 **訊息** 功能表。您輸入的訊息將不會儲存。

寫多媒體訊息[功能表1-2]

輸入並編輯多媒體訊息、查看訊息大小。

1. 按  [選擇] 進入**訊息**功能表。
2. 如果您想輸入新訊息，請選取。
3. 您可以建立新訊息，或選取其中一個已建立的多媒體訊息範本。
4. 按**加入**以新增 **符號、相片、圖片、音樂、常用短語、電話簿或名片**。



選項

- **預覽**

預覽本人輸入的多媒體訊息。

- **發送**

將多媒體訊息傳送給多個聯絡人、設定訊息的優先次序，以及設定稍後傳送等。

- **儲存**

將多媒體訊息儲存在發信箱或作為範本。

- **加入**

在目前的幻燈片之前或之後加入新幻燈片。

- **轉到**

移至上一張或下一張幻燈片。

- **刪除**

刪除目前的幻燈片。

- **設置訊息格式**

- **設定計時器**

設定幻燈片、文字、圖片及聲音的定時器。

- **置換文字和圖片**

改變訊息內的圖片與文字位置。

- **刪除媒體**

刪除幻燈片播放中的圖片或聲音。此選項僅在存有媒體的情況下才會顯示。



訊息 [功能表 1]

- **添加入字典**

新增個人常用語。僅在編輯模式為**T9Abc/T9abc/T9ABC**時才會顯示此功能表。

- **T9 語言輸入法**

選取T9輸入模式。

- **退出**

返回**訊息**功能表。



如何使用T9輸入法


T9 可讓您快速輸入文字。

在 T9 模式下，您只需按對應的字母鍵一次。此模式以內建字典為基準，您也可以字典中新增常用語。

• 如何在T9 模式下使用。

1. 使用按鍵 **2** ¹abc 至 **9** ^{WXYZ} 輸入字元。一個字母只需按一次按鍵。

例如，輸入「Girl」。

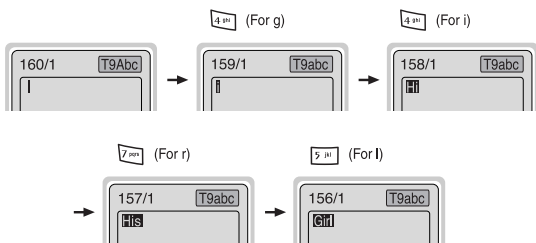

按一次按鍵，字元就會變更一次。因此，在按下所有適當的按鍵之前，您無需特別注意屏幕上顯示的字元。

要刪除多餘的字元，請按 **C**。

要插入一些數字，請按住 **#*** 並按下數字鍵。

按下 ***#** 可以變更語言類型(您也可以使用選項)。

此外，手機還支援三種模式：**Predictive** (T9Abc, T9ABC, T9abc), **Multitap** (ABC, BabC), **Numeric** (123), 如果您要變更模式，請按 **#*** 鍵。



訊息 [功能表 1]

或者：按 鍵，然後選取插入符號。選取所需的字元並按選擇。

2. 完成字元輸入後，請檢查字元是否正確。

如果字元正確：按 並輸入下一個字元。

如果字元不正確：按 ， (上一個與下一個字元) 進行搜尋。

或者：如果沒有您所要的字元，您可以新增個人常用語。
在 Predictive 編輯模式中按 [選項]。選取**添加入字典** 功能表。請看以下範例。



3. 要插入標點符號，請重複按 直到出現所需的符號。

T9 語言

- 您可以透過選取功能表來選取T9語言輸入法。在 T9 模式下，您也可以選取 T9關閉功能表。(預設為 T9開啓)



- 1) **筆劃輸入法(ST)**：如何使用筆劃輸入法選取中文字元。當您逐一輸入個別筆劃字根後，中文字元便會顯示出來。使用〔**↵**(及)〕鍵來查看其他字元選項，並按〔**Ⓚ**〕加以號碼再按數字鍵以選取。同樣地，使用〔**↵**(、)〕、**Ⓚ**及**Ⓚ**鍵來尋找更多不同字元。

例如) 要輸入「你好」，請順序按數字鍵〔**3 def**〕、〔**2 abc**〕及〔**3 def**〕，然後您將會看到首個字元「你」。現在，按〔**Ⓚ**〕然後再按〔**1 aoi**〕鍵選取「好」。

按鍵	筆劃	按鍵	筆劃
〔 1 aoi 〕	一	〔 6 mno 〕	? (通配符號)
〔 2 abc 〕	丨	〔 7 pqr 〕	
〔 3 def 〕	丿	〔 8 tuv 〕	
〔 4 ghj 〕	丶	〔 9 xyz 〕	
〔 5 jkl 〕	㇇	〔 Ⓚ 〕	選擇鍵

<筆劃表>










- 2) **拼音輸入法(PY)**：「拼音輸入法」可根據中文字元的國語拼音尋找字元。

拼音輸入法：在輸入首個拼音符號後便可直接尋找字元。

例如) 要輸入「國民」，請順序按數字鍵〔**4 ghi**〕、〔**8 uv**〕及〔**6 mno**〕，然後「guo」及「huo」將出現在外部編輯屏幕。通過〔**↵**(或)〕鍵選取「guo」後，許多具有相同拼音方式的字元將會出現供您選擇。接下來您可從其中選取字元「國」(按〔**Ⓚ**〕然後再按〔**1 aoi**〕)。在選取首個字元後，接著會出現其他各種字元。您可用相同方法選取「民」(按〔**Ⓚ**〕然後再按〔**5 jkl**〕)。









訊息 [功能表 1]

按鍵	英文字母	按鍵	英文字母
			M N O
	A B C		P Q R S
	D E F		T U V
	G H I		W X Y Z
	J K L		選擇鍵

<拼音字母表>

- 3) **Bopomofo(注音輸入法)**：「Bopomofo」可根據 40 個特別音符號尋找字元 (中文 T9 輸入法使用 37 個注音符號)。請參考下表。

例如) 要輸入「必要」，請順序按數字鍵及，然後「ㄅ」將出現在外部編輯屏幕。因為許多字元均具有相同的注音方式。所以您應從其中選取字元「必」(按然後再按)。在選取首個字元後，接著會出現其他各種字元。您可用相同方法選取「要」(按然後再按)。

按鍵	注音	按鍵	注音
	ㄅ ㄆ ㄇ ㄏ		ㄎ ㄌ ㄍ
	ㄉ ㄊ ㄋ ㄌ		ㄍ ㄎ ㄌ ㄍ
	ㄍ ㄎ ㄌ		ㄎ ㄌ ㄍ ㄎ
	ㄎ ㄌ ㄍ		ㄍ ㄎ ㄌ ㄍ
	ㄍ ㄎ ㄌ ㄍ		ㄍ ㄎ ㄌ








收件箱[功能表1-3]

在您收到訊息時會得到提示。訊息將儲存在**收件箱**中。

在收信箱中，您可以根據圖標識別每則訊息。有關詳細資料，請參閱圖標說明。

圖標說明

- [] 多媒體訊息
- [] 短訊
- [] SIM 訊息
- [] 讀取
- [] 已通知多媒體訊息

如果手機顯示「無足夠記憶體存儲資訊」，您必須刪除某些儲存在收件箱或發件箱中的 SIM 訊息。如果手機顯示「收件箱」，您要刪除每個資料庫中的一些訊息、媒體及應用程式以釋放空間。

* SIM 訊息

SIM 訊息指專門儲存在SIM咭中的訊息。

對於已接收通知的多媒體訊息，您必須在下載與處理完成後方能閱讀。對於通知設定，請參閱 [功能表 1-8-2] 以取得詳細資料。

要閱讀訊息，請按  以選取其中一則訊息。

回覆

您可用訊息回信給寄信人。

轉發

您可將選取的訊息轉發給其他人。



訊息 [功能表 1]

您可以自動覆電給發送這封訊息的寄信人。

刪除

刪除選取的訊息。

儲存訊息資料

取得圖片、聲音與文字。它們將儲存在**我的文件夾**或**電話簿**中。

查看訊息

查看接收的訊息之相關資訊：寄件者地址、主旨（僅限於多媒體訊息）、訊息日期與時間、類型與大小。

重放(僅適用於多媒體訊息)

重新播放多媒體訊息。

* 接收 (僅限於通知訊息)

如果將 **多媒體訊息** 設定為 **自動下載關閉**，則您只能收到通知。要接收訊息，您需要選取 [接收]。儘管 **多媒體訊息** 已設定為 **自動下載開啓**，但由於網絡狀況或其他原因，您可能仍只會收到通知訊息。

發件箱[功能表1-4]

您可以在其中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以查看傳送狀態。

查看方法與查看收件箱中的訊息相同。



圖標說明

[] 已傳送

[] 未發送

[] 轉發

* 已傳送時:

轉發

您可將選取的訊息轉發給其他人。

刪除

刪除選取的訊息。

查看訊息

查看傳送訊息的相關資訊：寄件者地址、主旨（僅限於多媒體訊息）、訊息日期與時間、類型、大小。

* 未發送時:

修改

修改文字訊息。

發送

發送文字訊息。

刪除

刪除選取的訊息。

查看訊息

查看傳送訊息的相關資訊。



訊息 [功能表 1]


留言信箱[功能表1-5]

收聽留言信箱[功能表1-5-1]

聽取留言。

留言中心[功能表1-5-2]

如果您的網絡服務供應商可支援這項功能，您就可以收取語音郵件。當您收到新的語音郵件時，屏幕上將會顯示一個符號。請向您的網絡服務供應商瞭解他們的服務詳情，以適當地設定手機。


1. 在備用模式中按住  鍵一段時間。
2. 您可以檢查下列子功能表：
 - **本地**
在開戶網絡中收聽語音郵件所撥打的號碼。
 - **漫遊地中心**
在其它網絡收聽語音郵件所撥打的號碼。

小區廣播[功能表1-6]

(須視網絡及申請的服務能否支援而定)

小區廣播訊息（CB Message）是由網絡發送給GSM手機用戶的文字訊息。他們可提供一般資訊，例如天氣預報、交通新聞、的士、藥房及股價等等。每一類資訊都有各自的號碼，可供您聯絡服務供應商。當您收到廣播訊息時，可依下列步驟讀取：

讀取[功能表1-6-1]

1. 如果收到資訊服務訊息並選取**讀取**以查看訊息，則訊息會顯示在屏幕上。您可以捲動或按  [下一個] 閱讀其他訊息。
2. 此訊息將一直保留，直至收到其他訊息。



接收[功能表1-6-2]

- **是**
若您選擇本功能表，您的手機將可接收小區廣播訊息。
- **否**
若您選擇本功能表，您的手機將無法再接收小區廣播訊息。


來電提示 [功能表1-6-3]

- **是**
若您選擇本功能表，您的手機在收到小區廣播訊息時將會發出一聲嗶聲。
- **否**
若您選擇本功能表，您的手機在收到小區廣播訊息時將不會發出一聲嗶聲。

語言[功能表1-6-4]

按[開/關] 可以選取所需的語言。然後資訊服務訊息將會以您選取的語言顯示。


題目(取決於網絡和您所申請的服務)[功能表1-6-5]

- **加入新**
若您選擇本功能表，您可將小區廣播以其別稱儲存在手機記憶內。
- **查看列表**
若您選擇本功能表，您可以查看您加入手機記憶的小區廣播類別。當您按  鍵 [選項] 時，就可以修改及刪除您加入的小區廣播類別。



訊息 [功能表 1]

- **現用列表**

按  鍵 [選擇]，您就可以選擇現用列表中的小區廣播訊息類別。

常用短語[功能表1-7]

文字[功能表1-7-1]

您可以建立 11 個文字範本。您可以將預先定義的範本變更爲自己喜好的內容，或者留爲 <空白>。

多媒體[功能表1-7-2]

您可以使用下列子功能表。

修改：編輯多媒體範本。

新加入：新增多媒體範本。

寫訊息：使用多媒體範本編輯多媒體訊息。

刪除：刪除多媒體範本。

名片[功能表1-7-3]

製作本人咭片。主要內容包括姓名、電話號碼、傳真號碼及電郵。



設定[功能表1-8]

短訊[功能表1-8-1]

- 訊息類型

文字、語音

通常，訊息類型會被設定為**文字**。您可以將您的文字轉換為接收設備適用的其它格式。請洽詢您的服務供應商以瞭解您是否可使用此功能。

- 訊息有效期

這項網絡服務可讓您設定訊息中心儲存您的訊息，並不斷嘗試為您傳送訊息的時限。

- 狀態報告

如果您設定本功能表為**是**，您可以檢查您的訊息是否已成功發出。

- 通過同一短訊中心回覆

當您發送一封訊息時，這項功能可讓收信人回覆您的訊息，並將回覆費用記入您的電話帳單。

- 短訊中心

當您要發送文字訊息時，您可以透過本功能表取得短訊中心的地址。



訊息 [功能表 1]

多媒體訊息[功能表1-8-2]

- **訊息有效期**
此網絡服務可讓您設定訊息中心可以儲存文字訊息的期限。
- **狀態報告**
如果在此功能表中設定為**是**，可以查看訊息傳送是否成功。
- **自動下載**
如果選取**開**，可以自動接收多媒體訊息。如果選取**關**，您將只能接收**收信箱**中的通知訊息，然後您可以查看此通知。
- **網絡設定**
如果選用多媒體訊息伺服器，您可設定多媒體伺服器的URL。
- **允許短訊類型**
個人：個人訊息。
廣告：商業訊息。
資訊：必要資訊。

記憶體狀態[功能表1-8-3]

若您選擇本功能表，手機會顯示已用的記憶容量和總記憶容量。總記憶容量是SIM咭和手機記憶的總和。



未接來電[功能表2-1]

本功能表顯示最近未接的來電號碼。您可以撥出此號碼，儲存或查看日期與時間。

已接來電[功能表2-2]

本功能表顯示最近已接的來電號碼。您可以撥出此號碼，儲存或查看日期與時間。

已撥電話[功能表2-3]

本功能表顯示最近撥出的電話號碼。您可以撥出此號碼，儲存或查看日期與時間。

刪除最近通話[功能表2-4]

您可以刪除所有的通話記錄。

通話計費[功能表2-5]

您可在這些子功能表中查看您的通話時間及通話費用。



通話記錄 [功能表 2]

通話時間[功能表2-5-1]

這項功能可讓您查看您最後通話、所有通話、已接來電及撥出通話的通話時間（以小時、分鐘和秒鐘顯示）。您還可以重設通話計時。

1. 在備用模式下按 鍵[功能表]。
2. 按 鍵以直接進入，或用 鍵及 鍵進入**通話記錄**。
3. 翻閱至**通話時間**，然後按 鍵[選擇]。

它有5個子功能表：**最後通話、所有語音通話、已接來電、已撥電話及全部歸零。**

通話費用[功能表2-5-2]

這項功能可讓您查詢您最後通話、所有通話、餘額及重設費用。如要重設費用，您必須輸入PIN2碼。

1. 在備用模式下按 鍵 [功能表]。
2. 按 鍵以直接進入，或用 鍵及 鍵進入**通話記錄**。
3. 捲翻閱至**通話費用**，然後按 鍵 [選擇] 進入。

它有4個子功能表：**最後通話、所有語音通話、餘額及全部歸零。**

附註



- 視乎網絡功能、計費整數捨入及稅率的多寡而定，您的服務供應商所開列的實際通話費可能會有些出入。



設定[功能表2-5-3] (取決於 SIM)

• 設定費率

您可以設定貨幣類型及單位價格。請聯絡您的服務供應商以取得計費的單位價格。如要在本功能表中選擇貨幣或單位，您必須有PIN2碼。

如果要輸入 €、£、\$ 符號，請清除所有幣別字串，然後按  鍵。如果要變更符號，請再次按  鍵。

附註

- 用完所有單位之後，除了緊急電話以外將無法再撥打其它電話。視SIM卡而定，您必須使用PIN2碼來設定通話費用的限額。

• 設定額度

這項網絡服務可讓您按照選取的計費單位來限制您的通話費用。當您選擇讀取時，屏幕上會顯示出剩餘的單位數量。當您選擇更改時，您可更改您的計費限制。

• 自動顯示

這項網絡服務可讓您自動查看您最後通話的費用。如果您在**自動顯示**功能表中選擇**是**，您可以在通話結束時查看最新的費用記錄。



通話記錄 [功能表 2]

GPRS 訊息 [功能表 2-6]

您可查詢已在 GPRS 網絡傳送的數據量。而且，您亦可查看網上連接時間。

通話時間 [功能表 2-6-1]






查看**最後通話**與**累計時間**的通話時間。您也可以重設通話計時器。

數據量 [功能表 2-6-2]

查看 **已傳送**、**已接收** 或 **全部**及 **全部歸零**。



在本功能表中，您可以依照不同的事件、環境及來電群組調校及自定手機的提示音。

1. 在備用模式下按  鍵 [功能表]。
2. 按  鍵以直接進入或用 ( 鍵及  鍵) 進入 **情景模式**。
3. 合上翻蓋時，如按住  鍵一秒即可使用情景模式功能表。

震動[功能表3-1]

如果您需要震動模式，您可以將情景模式設為**震動**模式。在此模式下，所有類型的來電提示均為震動或靜音。

靜音[功能表3-2]

在安靜場所中，可以將操作模式調整為靜音。

標準[功能表3-3]

您可以將情景模式設為標準模式。

大聲[功能表3-4]

如果您正處於一個嘈雜的環境中，您可以將情景模式設為大聲模式。

聽筒[功能表3-5]

使用耳機時，可將操作模式調整為聽筒。

車用[功能表3-6]

啓用免提聽筒時，可將操作模式調整為汽車。



情景模式 [功能表 3]

附註

- 僅在手機上裝有免提聽筒或耳機咪高風時，才能啓用聽筒與車用操作模式。但其內容可能會因人而異。

啓動[功能表3-x-1]

啓用選取的操作模式。

更改[功能表3-x-2]

每個功能表都有如下所示的子功能表，震動除外。

來電提示

可根據不同環境選取來電提示類型，如鈴聲、振動等。

鈴聲

可設定不同環境下的鈴聲類型。

鈴聲音量

可設定不同環境下的鈴聲音量。

短訊提示

可設定不同環境下的訊息提示音：嗶一聲、震機或無聲。

短訊提示音

可以選取收到訊息的提示音。

按鍵音量

可設定不同環境下的按鍵音量。



按鍵音

可根據不同的環境選取不同的按鍵音。

揭蓋音

您可根據不同環境設定不同的機蓋聲音。

確認音音量

您可根據不同環境設定不同的確認音音量。

開關機音量

您可根據不同環境設定不同的手機開啓/關閉音量。

自動接聽

可供您設定自動接聽來電以配合環境狀況。請注意，只有車用和聽筒模式包含此子功能表，可供您啓動此功能。

- **關閉**：手機不會自動接聽電話。
- **5秒後**：5秒後手機將會自動接聽。
- **10秒後**：10秒後手機將會自動接聽。

重新命名[功能表3-x-3]

您可以變更除震動、聽筒及車用功能表之外的預設情景模式名稱。

附註

- 如果您已將免提汽車套件接駁至手機，您將無法啓動來電提示或訊息提示功能表中的震動功能。因此，您只會在車用功能表下看到以下的子功能表；
 - **來電提示**：鈴聲、無聲
 - **短訊提示**：提醒一次、多次提醒、無聲



相機 [功能表 4]

您可以隨時使用相機拍攝相片，並可以在多媒體訊息中傳送相片。

拍照[功能表4-1]

1. 選擇拍照，然後按 。如您要直接進行拍攝，請按住 。
2. 對準目標的影像，然後按 或 。
3. 如要儲存，請按 或 。

注意!

• 設定視窗

按下 或 可選擇不同設定。按下 或 、 控制影像大小、閃光燈、亮度、色彩、旋轉或縮放。



- **解像度** : VGA 640*480、QVGA 320*240、QQVGA 160*120、PB : 48*48。
- **閃燈** : 開, 關。
- **旋轉** : 逆時針旋轉影像 90 度。
- **影像質量** : 高、中與低。
- **變焦** : x1、x2、x4。預設值為 x1。
- **亮度** : -1、-2、標準、+1、+2。
- **顏色** : 原色、恢葛、黑 / 白。

啓用按鍵

- 、 : 移動選擇的項目。
- : 拍攝與儲存相片。
- : 回到之前的功能表或退出拍照模式。
- : 在應用程式設定中，您可以變更預設值。您也可以將影像旋轉 90 度。
- : 選擇設定的項目。
- : 拍攝與儲存相片。






照在相框中[功能表4-2]

您可以在各種相框下拍攝相片。此外，您也可以按 、 選擇相框。

注意!

- 在此模式中，您無法變更解像度與色彩的設定。

連續拍攝[功能表4-3]

每次最多只可連續拍攝 9 張相片。拍攝相片後，您可以按 、 檢視，也可以按  儲存相片。

注意!

- 如果您設定的解像度為 640x480，您僅能連續拍攝 3 張相片。如果設定為 320x240，可以連續拍攝 6 張相片。

我的相簿[功能表4-4]

您可以檢視與傳送相片。此外，您也可以將相片設為牆紙。

全部圖片[功能表4-4-1]

您可以檢視全部相片。

通用圖片[功能表4-4-2]

您可以檢視除相框與電話簿圖片外的所有相片。

相框圖片[功能表4-4-3]

您可以檢視所有相框相片。



相機 [功能表 4]

電話簿圖片[功能表4-4-4]

您可以檢視所有電話簿相片。

- 選項
 - 圖片豫覽 : 螢幕上最多只可檢視 9 幅縮圖。
 - 寫多媒體訊息 : 透過 MMS 訊息傳送相片。
 - 設成牆紙 : 將相片設定為牆紙。
 - 刪除 : 刪除相片。
 - 編輯標題 : 編輯相片標題。

- 電話簿圖片設定
 1. 在相機功能表內，先設定像素為48 * 48，拍照後儲存。
 2. 翻閱至電話簿，選擇其一電話項目後修改。
 3. 翻閱至圖片，然後選擇其功能表（於頭像功能表之後）。
 4. 按左/右鍵以選擇電話簿之圖片。如沒有電話簿圖片，便不能選擇電話簿圖片設定於電話項目內。
 5. 選擇電話簿圖片後，然後儲存。

設定[功能表4-5]

記憶體狀態[功能表4-5-1]





您可以檢查全部、已使用及未用的記憶體容量。

清空相簿[功能表4-5-2]

您可以刪除儲存在相簿中的所有相片。





您可以依您個人方便與喜好來設定以下功能表。

1. 在備用模式下按  鍵 [功能表]。
2. 按  鍵直接進入**設定**，或用  (鍵及 ) 鍵進入設定。

響鬧[功能表5-1]

您可以在本功能表中設定手機在特定時間發出響鬧。

1. 選取**開啓**，然後輸入要設定的響鬧時間。
2. 選取重複時間：**一次、周一~周五、周一~周六、每天**。
3. 選取要設定的響鬧聲，然後按  [確認]。
4. 輸入響鬧名稱，然後按  [確認]。
5. 如果您在關機後使用響鬧項目設定為**是**，則鬧鐘會在您設定的時間發出響鬧，即使手機已關機也一樣會響鬧。

日期和時間[功能表5-2]

設定與日期時間有關的功能。

日期設定[功能表5-2-1]

在本功能表中，您可以設定您手機的日期。

日期格式[功能表5-2-2]

您可以在本功能表中設定**日期格式**。日/月/年，月/日/年，年/月/日

時間設定[功能表5-2-3]

您可以在本功能表中設定手機的時間。


時間格式[功能表5-2-4]

您可以選擇24小時或12小時的時間格式。



設定 [功能表 5]

手機設定[功能表5-3]



您可以設定喜愛的手機圖像。翻閱至**手機設定**功能表，然後按  鍵 [選擇]。

顯示設定[功能表5-3-1]

- **牆紙**

您可以選擇在備用模式中的背景圖片。

- **設定**

按  (或)  選取作為底色圖案的圖案或動畫。

- **我的文件夾**

選取作為底色圖案的圖案或動畫。

- **來電時**

設定接聽電話時將顯示的動畫。

- **撥出電話時**

設定撥打電話時將顯示的動畫。

- **問候語**

如果您選擇是，本功能表可讓您選擇備用時顯示的問候語。您可在文字模式下修改問候語的文字。

- **背景燈**

您可以設定每次您按擊一個按鍵時背景燈的亮燈時間。



- **屏幕對比度**

您可以按 **[ (鍵、) ]** 鍵以設定LCD屏幕的亮度。

- **訊息提示**

開啓功能表之前，預覽選定功能表的目前狀態。其狀態顯示在屏幕底部。

- **功能表顏色**

從各種組合中選取所需的**功能表色彩**。

外屏幕[功能表5-3-2]

- **我的顯示** : 您可以設定按側鍵時出現的動畫。
- **顯示時間** : 您可以設定外部顯示屏時的播放滾動時間或「我的顯示」時的時限。
- **亮度** : 您可以設定外部顯示屏時的亮度。
- **字體顏色** : 您可以設定外部顯示屏的字體色彩。


語言選擇[功能表5-3-3]

變更手機顯示文字的語言。此操作亦會影響語言輸入模式。



設定 [功能表 5]

通話設定[功能表5-4]

您可以在設定功能表中按  鍵[選擇]以設定有關通話的功能表。

來電轉接[功能表5-4-1]

來電轉駁服務可讓您將撥入的語音電話、傳真電話和數據電話轉駁到另一個號碼。詳細資訊請洽詢電信服務商。

- **所有語音通話**
無條件轉接所有語音通話。
- **忙線時**
當手機正在通話時轉接語音通話。
- **無人接聽時**
當手機已關機或在網絡範圍以外時轉接語音通話。
- **無網絡或關機時**
當您未沒有接聽時轉接語音通話。
- **所有數據通訊**
無條件轉接至一個含電腦連線的號碼。
- **所有傳真通訊**
無條件轉接至一個含傳真連線的號碼。
- **取消全部轉接**
取消所有通話轉接服務。



子功能表

來電轉接功能表亦包含下列子功能表。

- 啓動

啓動對應的服務。

語音信箱

轉接至訊息中心。此功能不包含在所有傳真及數據的功能表裏。

其他號碼

輸入要轉接的號碼。

常用號碼

顯示5個轉接號碼的列表。

- 取消

關閉對應的服務。

- 查看狀態

查詢對應服務的狀態。



設定 [功能表 5]

接聽模式[功能表5-4-2]

- **揭蓋接聽**

如果您選擇本功能表，只要揭開翻蓋即可接聽來電。

- **任何鍵接聽**

如果您選擇本功能表，按  [結束] 鍵以外的任何鍵都可接聽來電。

- **按發送鍵接聽**

如果選用此功能表，則只能以按  [發送] 鍵的方式接聽來電。

發送號碼[功能表5-4-3]

(需視網絡及申請的服務能否支援而定)

- **開啓**

如果您選擇本功能表，您可以將您的手機號碼發送給其他人。換句話說，您的電話號碼將會顯示在接聽者的手機上。

- **關閉**

如果您選擇本功能表，您將不會發送您的手機號碼。

- **網絡設定**

如選取此項目，則可以根據您撥打的線路提供手機號碼，如線路 1 或線路 2。



來電等候[功能表5-4-4] (需視網絡能否支援而定)


如果這項服務被啓動，您就可以接聽等候中的來電。如果這項服務被停用，您將無法辨識等待中的來電。

- **開啓**
啓動對應的服務。
- **關閉**
關閉對應的服務。
- **查詢狀態**
查詢此服務的狀態。

每分鐘提示[功能表5-4-5]

如果選取**開啓**，通話時，手機將在每分鐘發出嗶聲，用以提示您通話時間。

語音撥號[功能表5-4-6]

- **自動**：任何時候，您只要揭開機蓋，即可進入語音撥號模式。
- **手動**：按住向下  鍵即進入語音撥號模式。

自動重撥[功能表5-4-7]

- **開啓**
當這項功能被啓動時，您的手機將會在撥電未接通之後嘗試重撥最多10次。
- **關閉**
您的手機將不會在撥號未接通之後嘗試重撥。



設定 [功能表 5]

線路選擇[功能表5-4-8]

只有當服務供應商支援雙線路服務時，才可使用這項功能。在此服務下，您的手機可登記兩個獨立的電話號碼。這項功能可讓您選擇目前使用的手機號碼。如果您的服務供應商可支援這項功能，則屏幕上將顯示以下功能表。

- 線路1
- 線路2

封閉用戶群組[功能表5-4-9]

(取決於網絡)

利用這項功能可限制手機只能撥打屬於特定用戶群的號碼。當您使用這項功能時，每一通撥出的電話都會被附加一個群組索引。如果您已指定群組索引，它將被套用到所有撥出通話。如果未指定任何群組索引，則網絡將會使用首選索引（儲存在網絡中的特定索引）。

預設 : 啓用與網絡商一致的預設群組。

選擇 : 設定選取的封閉用戶群組索引。

編輯 : 修改封閉用戶群組 名稱及封閉用戶群組索引。

刪除 : 刪除選取的封閉用戶群組 。


全部清除 : 刪除所有封閉用戶群組 。



保密設定[功能表5-5]

需要PIN碼[功能表5-5-1]

在本選項中，您可以設定手機在開機時詢問SIM咭的PIN碼。如果這項功能已被啓動，您將會被要求輸入PIN碼。

1. 在保密設定功能表中選取需要PIN碼，然後按  [選擇]。
2. 設定**開啓/關閉**。
3. 如果要變更此設定，則在開機時需要輸入 PIN 密碼。
4. 如果輸入錯誤的 PIN 密碼超過 3 次，手機將被鎖定。一但 PIN 被鎖定，您需要輸入 PUK 密碼。
5. 您最多可以輸入 PUK 密碼 10 次。如果輸入錯誤的 PUK 密碼超過 10 次，就無法將手機解除鎖定。請洽詢電信服務商。

手機鎖[功能表5-5-2]

使用安全密碼可避免他人擅用您的手機。如果將手機鎖定設為“**開啓**”，每次開機時手機均會要求輸入安全密碼。如果將手機鎖定設為「**自動**」，手機只會在您更換 SIM 咭時才要求輸入安全密碼。

撥號限制[功能表5-5-3]

通話限制服務可防止您的手機撥打或接聽特定類別的來電。這項功能需要通話限制密碼。您將可看到以下子功能表。

- **所有撥出**
限制撥出所有電話的服務。
- **國際電話**
限制撥出所有國際電話的服務。



設定 [功能表 5]

- **國際漫遊電話**
限制撥出所有開戶網絡以外的電話（國際漫遊）服務的服務。
- **所有來電**
限制接聽所有來電的服務。
- **國際漫遊時**
限制漫遊時接聽所有來電的服務。
- **全部取消**
您可以取消所有通話限制服務。
- **更改密碼**
您可以更改通話限制服務的密碼。

各主功能表的子功能表:

- **啓動**
要求網絡啓用通話限制。
- **取消**
停用選取的通話限制。
- **查詢狀態**
檢查是否限制通話。



固定撥號[功能表5-5-4] (取決於 SIM)

您可以限制撥出電話時只能撥打選取的電話號碼。這些號碼由您的PIN2碼提供保護的。

- **啓動**

您可以限制撥出電話時只能撥打選取的電話號碼。

- **取消**

停用固定撥號功能。


- **號碼表**

查看設定為固定撥號的號碼清單。

更改密碼[功能表5-5-5]

PIN 是個人身份號碼的縮寫，可防止他人擅用手機。

可以更改存取密碼：**PIN碼、PIN2碼、保安密碼。**

1. 如果您要更改PIN碼/PIN2碼/保安密碼，請輸入您的舊密碼，然後按  鍵[確認]。
2. 輸入新的保安密碼/PIN/PIN2 密碼，然後加以確認。



設定 [功能表 5]

網絡設定[功能表5-6]

您可以自動或手動地選擇您要連接的網絡。通常，手機以自動方式選擇網絡。

自動[功能表5-6-1]

如果選擇**自動**模式，手機會自動搜尋並選擇網絡。選擇**自動**後，即使電源關閉後再重新啓動，手機也會設定為 **自動**。

手動[功能表5-6-2]

手機將搜尋並顯示出一個可用網絡列表。如果您想要使用的網絡與您的開戶網絡服務商已簽訂漫遊協議，您就可以選擇這個網絡。如手機無法存取該選取的網絡，您仍可選擇其他網絡。如果關機，手機會重設為 **自動**。

首選網絡[功能表5-6-3]

您可以設定首選的網絡清單，手機會先嘗試登入該網絡，然後再嘗試登錄到其他網絡。此清單是透過手機的已知網絡預定清單而建立的。

重新設定[功能表5-7]

您可以選擇本功能表，將手機重設回預設的設定值。此外，您必須有保安密碼才可啓動這項功能。



日程表[功能表6-1]

當您進入本功能表時，屏幕上將會顯示一個日程表。在畫面上方是日期和提示圖案的部份。每當您更改日期時，日程表也將根據日期而更新。同時，日程表會使用方形游標標示出特定的日期。如果您在日程表中看到任何底線，表示當天有安排日程。這項功能可提醒您您的日程表及備忘錄。如果您已為某個記事設定了響鬧，手機會發出響鬧。

切換日、月、年的步驟。

按 鍵	說 明	按 鍵	說 明
	每年		每週
	每月		每天

附註

- 您的手機必須開機，才能夠使用這項功能。

新加入[功能表6-1-1]

您可以編輯最多39個字元(21中文字元)。您可以寫一個記事，並可選擇下列記事類型。您最多可建立20個記事。

• 日程表

按 鍵 [選擇] 以輸入標題、日程表時間、重複時間、響鬧時間。

• 備忘錄

- 按 鍵[選擇]選擇新日程。
- 翻閱至備忘錄。
- 輸入備忘錄，然後按 鍵[確認]。



公事包 [功能表 6]

查看[功能表6-1-2]

顯示選取之日期的記事。使用 鍵、 鍵來瀏覽記事表。如果您已為某個記事設定了響鬧，屏幕上將會顯示一個響鬧圖案。同時，如果按 [選擇]，則可以看到詳細的記事內容。按 鍵 [選項] 以刪除或修改您選取の記事。

查看全部[功能表6-1-3]

顯示您設定的所有記事。使用 鍵、 鍵來瀏覽記事清單。您可以按 [選項] 來使用與**查看**相同的功能表。

刪除已過日程[功能表6-1-4]

刪除已收到通知的舊日程。

全部刪除[功能表6-1-5]

刪除所有記事。

電話簿[功能表6-2]


1. 要使用**電話簿**，請在備用模式下按 鍵 [電話簿]。
2. 要使用**電話簿**，請在備用模式下按 鍵 [功能表]，然後選擇**公事包**。


搜尋[功能表6-2-1]

(從電話簿撥號)

1. 首先，在備用模式下按 鍵 [電話簿] 以開啓電話簿。
2. 然後，按 鍵 [選擇] 進入**搜尋**。
3. 輸入要搜尋的電話號碼或電郵地址所屬姓名，或選擇「列表」以查看電話簿。
4. 輸入要搜尋的姓名或號碼之首個字母可進行即時搜尋。



5. 如果您想要修改、刪除、複製一項記錄，或將語音附加到一項記錄，請選擇  鍵[選項]。屏幕上會顯示下列目錄。






- **修改** : 按  鍵[確認]，可修改姓名、電話號碼、電郵及傳真號碼。
- **寫訊息** : 找到所要的號碼後，您可以將訊息傳送到選取的號碼。
- **複製** : 您可將SIM咭的記錄複製至手機，或從手機複製至SIM咭。
- **語音** : 您可利用選取的記錄直接撥號。
- **主要號碼** : 您可從流動電話號碼、住宅號碼或公司號碼之中選出一個經常使用到的號碼。若您設定了主要號碼，此號碼會先出現在屏幕上。
- **刪除** : 您可刪除一項記錄。

加入新[功能表6-2-2]

您可利用此功能添加新的電話簿記錄。

手機記憶庫最多可容納200項記錄。SIM咭的記憶容量則由流動電話服務供應商決定。

您也可以在手機記憶內儲存最多20個字符的姓名，也可儲存在SIM咭內。SIM咭的字符儲存容量依SIM咭而定。

1. 先在備用模式下按  鍵[電話簿]以開啓電話簿。
2. 翻閱至**加入新**，然後按  鍵[選擇]以進入此功能。
3. 選取要儲存的記憶體：SIM或手機。如果設定為手機，則需要選擇主號碼。
 - a. 按  鍵[確認] 以輸入姓名。
 - b. 按  鍵[確認]，然後輸入一個號碼。
 - c. 按  鍵[確認]。



公事包 [功能表 6]

- d. 按 **[☰(鍵和)☷]** 鍵可設定記錄的群組：**家庭、朋友、同事、重要人物、群組1、群組2、其他**。
- e. 按 **[☰, ☷, [☰(,)☷]** 可為項目設定名稱。接聽來電時，該名稱會顯示在屏幕上。
- f. 如您想要附加語音，請按 **[☷]** 鍵[是]。

附註

- 當您在電話簿中同時儲存名字與相片時，可隨時用名字檢視該相片。

您必須在2秒內說出一個字，手機會請您再說一次，以確保語音辨識的準確性。完成語音辨識之後，該語音會自動附加在該號碼上。




附註

- 語音只能附加在您已設定的主要號碼上。例如，若您更改主要號碼，語音會自動附加在更改之後的主要號碼上。這表示，您不能同時將語音附加在流動電話號碼、公司號碼和住宅號碼上。
- 您可將語音口令附加在SIM咭的電話號碼上。當您移除或更換SIM咭時，這些語音口令會一起被刪除。而當您更換SIM咭之後，附加在原SIM咭電話號碼的語音口令可能會被附加到另一個電話號碼。為什麼因為SIM咭並不包含任何有關語音口令的資訊。



來電者群組[功能表6-2-3]

在每一個群組中您最多可以編列20個成員。您總共可建立7個群組。

1. 在備用模式下按  鍵 [電話簿] 以進入電話簿。
2. 翻閱至**來電者群組**項目，然後按  鍵 [選擇] 以進入本功能表。
3. 按  鍵 [選擇] 以選擇您要管理的群組名稱。
 - **查看成員**
顯示選定的群組成員。
 - **群組鈴聲設定**
您可以按照群組設定來電鈴聲。
 - **群組圖示**
您可以設定每個群組的動畫。
 - **加入新成員**
您可以在來電群組中加入新成員。
 - **刪除成員**
您可以刪除已儲存在電話簿中的成員。
 - **重新命名**
您可以更改群組名稱。



公事包 [功能表 6]

快速撥號[功能表6-2-4]

您可以指定數字鍵 [2_{abc}] 至 [9_{qrst}] 的任何一鍵至姓名列表內的一項記錄。按住該鍵2至3秒，您即可直接撥號。

1. 先在備用模式下按 鍵 [電話簿] 開啓電話簿。
2. 翻閱至**快速撥號**，然後按 鍵 [選擇] 進入本功能表。
3. 如果您要添加快速撥號，請選擇 **<空>**。然後，您可以在電話簿中搜尋姓名。
4. 選取已配置簡速撥號的姓名，然後選取**更改**或**刪除**來編輯姓名。
 - **更改**
您可以刪除已儲存在電話簿中的成員。
 - **刪除**
您可以更改群組名稱。

語音列表[功能表6-2-5]

您可以查看所有附加語音的電話號碼。利用 鍵及 鍵並按 鍵 [選項] 以選擇電話號碼之後，您將看到以下子功能表：


- **播放**：您可以播放附加至電話號碼的語音。
- **更改**：您可以更改附加至電話號碼的語音。
- **刪除**：您可以刪除附加至電話號碼的語音。
- **撥號**：您可以選擇以本功能表撥號。

設定[功能表6-2-6]

1. 先在備用模式下按 鍵[電話簿]以開啓電話簿。
2. 翻閱至**設定**，然後按 鍵 [選擇] 進入。




• 記憶設定

翻閱至**記憶設定**，然後按  鍵 [選擇] 進入。

- 如果您選擇**自選**，在添加記錄時，手機將會詢問您要儲存至何處。
- 如果您選擇**手機**，在添加記錄時，手機就不會詢問儲存至何處，而將記錄儲存至手機的記憶。

• 搜尋方式

翻閱至**搜尋方式**，然後按  鍵 [選擇] 進入。

- 如果您選擇**自選**，在搜尋時，手機將會詢問要搜尋那一樣。
- 如果選姓名稱或號碼，手機會依姓名或號碼搜尋項目。



• 查看選項

捲動至查看選項，然後按  鍵 [選擇]。

- **只顯示姓名**：設定僅顯示姓名的電話號碼清單。
- **圖片電話簿**：設定含有名字與相片的電話號碼清單。

全部複製[功能表6-2-7]

您可以將記錄從SIM咭記憶複製/移動至手機記憶，或者從手機記憶複製/移動至SIM咭記憶。





1. 先在備用模式下按  鍵 [電話簿] 以開啓電話簿。
2. 翻閱至**全部複製**，然後按  鍵 [選擇] 以進入本功能表。
 - **SIM咭存至手機**：您可以將記錄從SIM咭複製至手機記憶。
 - **手機存至SIM咭**：您可以將記錄從手機記憶複製至SIM咭。
3. 您可以查看下列子功能表。
 - **保留原號碼**：複製時，保留原始號碼。
 - **刪除原號碼**：複製時，清除原始號碼。



公事包 [功能表 6]

全部刪除[功能表6-2-8]







您可以刪除SIM咭、手機及語音中的所有記錄。這功能需要安全密碼。

1. 在備用模式下按  [電話簿] 並選取**全部刪除**，然後按  [選擇]。
2. 然後，選擇一個您要刪除的記憶。
3. 輸入安全密碼，然後按  [確認] 或  [返回]。

資訊[功能表6-2-9]




• 特別服務號碼

利用這項功能可進入您的服務供應商提供的特殊服務列表（若SIM咭可支援）。

1. 先在備用模式下按  鍵 [電話簿] 以開啓電話簿。翻閱至 **訊息提示**，然後按  鍵 [選擇] 進入本功能表。
2. 翻閱至 **特別服務號碼**，然後按  鍵 [確認] 進入本功能表。
3. 屏幕上將顯示可用的服務名稱。
4. 用  鍵及  鍵選擇一項服務。按  鍵 [發送]。

• 記憶狀況

這項功能可讓您查看您的電話簿有多少可用已用的記憶容量。

1. 先在備用模式下按  鍵 [電話簿] 以開啓電話簿。按  鍵 [選擇] 以選擇**記憶容量**。
2. 翻閱至**記憶狀況**，然後按  鍵 [確認] 以進入本功能表。

• 本機號碼 (取決於 SIM)

您可在SIM咭中查詢您的本機號碼。



遊戲[功能表7-1]


您的手機包含以下遊戲，供您消遣娛樂。


附註

- 每個遊戲的控制鍵皆不相同。但是每個遊戲都分別有屏幕說明解釋其主要控制鍵的用法。以下是一般的控制鍵：

[一般按鍵功能]






 [左軟鍵]：遊戲功能表

 [右軟鍵]：返回

 鍵：暫停或返回遊戲

計算機[功能表7-2]

此工具包含標準的計算功能，例如 +、-、x、÷：加、減、乘、除。

1. 按數字鍵輸入數字。
2. 利用導覽鍵選擇運算符號。
3. 然後，輸入數字，隨後輸入該運算符號。
4. 您可以按  [結果] 鍵來查看結果。
5. 如果您要繼續計算，請重複以上步驟。
6. 利用  鍵清除任何數字或符號。
7. 按  鍵可輸入一個負數。此外，如果您按  鍵，可輸入一個點數。
8. 要結束計算機，請按下  [返回]。



娛樂與工具 [功能表 7]

[我的文件夾\[功能表7-3\]](#)

您可查看，刪除及控制下載內容。

[圖片\[功能表7-3-1\]](#)

[音樂\[功能表7-3-2\]](#)

各主功能表的子功能表

- **編輯標題**

您可以修改每項已下載的內容。

- **寫訊息**

輸入具有圖片或聲音的短訊/多媒體訊息 (取決於媒體類型)。

- **設成牆紙/設成鈴聲**

將下載的聲音或圖片設定為底色圖案或鈴聲。

- **刪除**

您可以刪除每項已下載的內容。

- **全部刪除**

刪除所有已下載的內容。



旋律作曲家[功能表7-4]

您可編寫喜愛鈴聲。當您進入此功能時，之前創作的音符會顯示出來。輸入新音符或更改現時音符：

1. 輸入音符(1_{oct}~7_{oct}: CDEFGAB)。
2. 要調整音符特性，請執行下列操作：
 - **音符時間**：8_{note}鍵為縮短，和9_{note}鍵為延長音符時間，或停頓。
 - **停頓**：0_{note}輸入同時間的停頓作為之前的音符。
 - **八度音階**：*_{oct}設定八度音階為新音符。
 - **高半音**：#_{note}可使音符提高半音。

單位換算器[功能表7-5]

這項功能可將任何測量數目換算成您要的單位。總共可換算成4種單位：**長度、面積、重量及體積。**

1. 您可以按 $\left[\begin{array}{|c|} \hline \text{單位} \\ \hline \end{array} \right]$ 鍵從這4種單位中選擇一種。
2. 利用 $\left[\begin{array}{|c|} \hline \leftarrow \\ \hline \end{array} \right]$ 鍵來選擇標準值。
3. 利用 $\left[\begin{array}{|c|} \hline \text{↕} \\ \hline \end{array} \right]$ 鍵、 $\left[\begin{array}{|c|} \hline \text{↕} \\ \hline \end{array} \right]$ 鍵來選擇您要換算值。
4. 您可以檢查已換算成該單位的值。此外，您可按 $\left[\begin{array}{|c|} \hline \# \\ \hline \end{array} \right]$ 鍵輸入點數值。

時區設置[功能表7-6]

您可以查看世界各城市的時間。

1. 按 $\left[\begin{array}{|c|} \hline \leftarrow \\ \hline \end{array} \right]$ 鍵以選擇屬於時區內的城市。
2. 您也可以按下 $\left[\begin{array}{|c|} \hline \text{設定} \\ \hline \end{array} \right]$ 把您選取的城市時間設定為目前的時間。



娛樂與工具 [功能表 7]

語音備忘錄[功能表7-7]

語音備忘錄功能可容許您錄製多達 10 則語音留言，每則訊息最長 20 秒。

記錄[功能表7-7-1]

1. 您可以在語音備忘錄功能表中錄製語音備忘錄，也可以在備用模式下按下 **C**。
2. 開始錄音後，將顯示錄製中的訊息與剩餘時間。
3. 如果您要結束錄音，請按下 **☞** [儲存]。
4. 鍵入語音備忘錄標題，按下 **☞** [確認]。

查看列表[功能表7-7-2]

手機將顯示語音備忘錄清單。您可以**播放**與**刪除**錄製的語音備忘錄。

啓動紅外線[功能表7-8]

如果啓用此功能，便可以使用紅外線進行 PC 同步處理。您不能同時使用序列埠和紅外線功能。

PC 同步化

電腦同步是一個透過數據傳輸線在電腦與手機之間交換數據的程式。因此，如果您要使用這項功能，您必須購買相關配件套件。如需更多資料，請參閱光碟內的電腦同步說明檔案。





本手機可支援以無線應用協定（WAP）為基礎的服務。您可存取您的開戶網絡支援的服務。服務目錄可供您獲取各種資訊，例如新聞、天氣預報及航班時間表等。

主頁[功能表8-1]

返回主頁。主頁是目前啓用之上網設定中定義的網站。若啓用的上網設定中未定義主頁，服務供應商將為您定義一個主頁。

書籤[功能表8-2]

然後按  鍵[選擇]以進入現有的選項，或按  鍵[返回]退出此功能表。

- **連接**：連接至您選取的書籤。
- **加入新**：您可添加新的書籤。
- **修改**：修改選擇之書籤內容。
- **刪除**：從書籤列表中刪除選取的書籤。

Push訊息[功能表8-3]

收件箱[功能表8-3-1]

您可以讀取或刪除Push訊息。


- **訊息提示**：顯示接收到 Push 訊息的資訊。
- **下載**：使用 Push 訊息的資訊可連線到特定網站。
- **刪除**：刪除選定的 Push 訊息。

接收[功能表8-3-2]

您可以設定選項是否接受訊息。



上網設定[功能表8-4]

您可以設定最多 10 種操作模式，但只能啓用其中一種。捲動至所需的操作模式，然後按  進入可用的選項。

- **啓動**

啓動您選取的上網設定。

- **設置**

您必須先建立子功能表，然後才可瀏覽WAP網站。

- **主頁**

此設定可讓您輸入要當作主頁使用的URL網址。您不需要在每一個URL網址前面輸入“http://”，因為WAP瀏覽器會自動爲您添加。

- **連接方式**

你可設定連接方式: GPRS或數據。

- **數據**

- **GPRS**

- **數據設定**

僅在您選取資料設定作爲連接方式服務時才會出現。

IP地址 : 輸入您要登入之WAP閘道的IP地址。

撥出號碼 : 輸入您登入WAP閘道須撥打的電話號碼。

用戶名 : 您的撥號伺服器（而非WAP閘道）將以此用戶名來確認您的身份。

密碼 : 您的撥號伺服器（而非WAP閘道）將以此密碼來確認您的身份。

通話類型 : 選擇數據通訊的類型：模擬或數字 (ISDN)。

連接速度 : 數據連接的速度。

空閒時限 : 您需要輸入逾時時間。輸入逾時時間後，如果沒有輸入或傳送任何資料，將停用 WAP 導覽服務。



- **GPRS設置**

僅在選擇 GPRS 作為載送服務時，才可使用這些服務設定。

IP地址：輸入您要存取之 WAP 網閘 IP 位址。

APN：輸入 GPRS的 APN。

用戶ID：APN 伺服器的用戶身份。

密碼：APN 伺服器所需的密碼。
- **顯示圖像**

您可選擇是否要顯示WAP網頁上的圖像。
- **連接類型**

連接類型可分為自選連接或固定連接，依您使用的閘道而定。

固定連續
一個穩定的資料傳輸系統，但會產生較多的網絡流量。

短暫
一個未確定（未連接狀態）的服務。
- **安全設置**

連接選項可分為任何傳輸和安全傳輸，依您使用的閘道而定。
- **重命名**

修改上網設定名稱。
- **刪除**

刪除操作模式。
- **加入新**

以手動方式新增操作模式。



互聯網 [功能表 8]

- **電郵伺服器**

以手動方式新增操作模式。

- **接駁電郵伺服器**

連接至您所設定的電郵伺服器。

- **編輯地址**

修改電郵地址。

轉到URL[功能表8-5]

您可直接移至您想要瀏覽的網站。在此功能表下，您也可以修改網址。

緩存[功能表8-6]

您可移除緩存記憶的內容，或更改緩存模式。

清除緩存[功能表8-6-1]

緩存記憶中的所有內容都會被刪除。

查詢緩存[功能表8-6-2]

您可修改查詢緩存的時間。

安全設置[功能表8-7]

在此功能表下將顯示一系列現有的安全認證標準。

重新設定[功能表8-8]

您可將上網設定重設回原廠設定值。

瀏覽器版本[功能表8-9]

顯示 WAP 瀏覽器版本。




如您已上線，則可以查看以下功能表。

- **主頁**
跟[功能表8-1]相同。
- **刷新**
重新載入當前的網頁。
- **書籤**
跟[功能表8-2]相同。
- **加入書籤**
您可將一個網站設成書籤。
- **訊息**
使用 Wap 連時時，您仍可查閱短訊。
- **Push 訊息**
跟 [功能表8-3]相同。
- **轉到URL**
您可直接移至您想要瀏覽的網站。在此功能表下，您也可以修改網址。
- **轉到電郵伺服器**
您可移至您所設定的電郵伺服器。
- **設為電郵伺服器**
您可設定當前網站的地址為電郵伺服器。
- **清除緩存**
移除快取記憶體儲存的內容。
- **存儲圖片**
儲存 WAP 提供的圖像。



Java [功能表 9]

應用[功能表9-1]

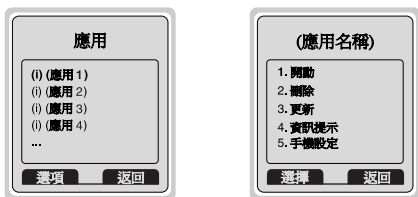

Java功能表選項

捲動到應用程式並選取選項。

1. **開動** : 啟動選定的 MIDlet。
2. **刪除** : 刪除選定的 MIDlet。
3. **更新** : 存取伺服器與更新選定的 MIDlet。
4. **資訊提示** : 顯示關於 MIDlet 的資訊。
5. **手機設定** : 可讓您設定 java 遊戲的背光與聲音。

下載[功能表9-2]

請參閱 [功能表 7-2]。您可以編輯與設定 MIDlet 伺服器位址。使用 WAP 瀏覽器下載 MIDlets，並將其儲存在手機中。您也可以查看儲存在 應用屏幕上的 MIDlets 清單。


記憶體狀態[功能表9-3]

顯示可用於安裝遊戲與應用程式的記憶體大小。您也可以查看手機的整體記憶體狀態。



JAVA™ 是 Sun Microsystems, Inc. 的商標。



您最多可設定 10 個經常在收藏夾中使用的功能表。您可以按  直接連接此功能表。

如果您要加入收藏夾中的功能表，請選擇清單中的 <空>。如果功能表已加入，將顯示下列選項：

- **選擇** : 啓用加入的功能表。
- **更改** : 變更功能表。
- **刪除** : 刪除加入的功能表。
- **全部刪除** : 刪除在收藏夾中已加入的所有功能表。
- **資訊** : 檢視已加入的功能表的資訊。



備忘錄

手機配有多種配件。您可依據個人需要選擇所需配件。



標準電池



免提聽筒

連接電話後可便攜操作。



旅行充電器

您可在離家或辦公室時使用充電器充電。



頸鍊型電話繩



數據傳輸組件/光碟

您可使用數據傳輸組件連接PC進行通訊。

附註

- 請務必使用原裝 LG 配件。
- 不使用原裝配件可能會導致保固失效。
- 以上附件可因區域不同而有所差異，詳情可咨詢我們的區域服務商或代理商。



使用本手機時，請務必遵循以下的基本安全注意事項。

- 請勿用潮濕的手去碰觸充電器接頭。
- 請勿自行拆開本手機。（需要維修時，請交由合格的服務技術人員處理。）
- 手機應遠離電視、收音機或個人電腦等電子設備。
- 切勿拋擲本手機。
- 避免讓手機承受機械性震盪或撞擊。
- 若用包裝紙或保鮮紙包裹本手機，手機的表面塗層可能會受損。
- 請使用乾布來清潔手機外部。（請勿使用苯、稀釋劑或酒精等溶劑）。
- 請勿讓本手機經常接觸煙霧或塵埃。
- 請勿讓手機接近信用咭或其他附有磁帶的咭，否則可能損壞磁帶內的資料。
- 請勿讓硬物碰撞顯示屏，以免損壞機身。
- 請勿讓手機受潮或弄濕。
- 使用如耳筒等配件時請份外小心，如無必要，請勿觸摸天線。



手機的維護

電池保養

- 電池在重新充電之前毋須先完全放電。與其它電池系統不同的是，本電池的性能不會受到記憶效應的影響。
- 您只可使用LG電池和充電器。LG充電器是特別為發揮電池最長壽命而設計的。
- 請勿自行拆開電池或造成電池短路。
- 請保持電池金屬接觸面的清潔。
- 當電池無法再發揮令人滿意的性能時，請更換電池。此電池可重複充電數百次，直到它需要被更換為止。
- 如果電池經過長時間未使用，應重新充電以發揮最大的效力。
- 請勿將電池充電器置於日光下曝曬，或在高濕度下使用，例如在浴室內。
- 請勿將電池保存在太熱或太冷的地方，如此可能會損耗電池的性能。



一般資料

產品名稱 : G7100

系統 : GSM 900/DCS 1800

適用溫度

最高 : +55 °C

最低 : -10 °C



備忘錄





備忘錄

GPRS手机

用户手册

型号：G7100

请您在操作您的手机前仔细阅读此手册。
并保留它作为将来的参考。



所有无线设备在靠近其它电子装备时都会对其造成干扰。



在飞机上，必须关闭GSM手机。



在加油站、燃料仓库、化工厂或爆破活动附近请关机。



在任何有特殊规定的场所请关机。例如，在医院内请关机，因为手机会对心脏起搏器和助听器等电子医疗设备造成干扰。



手机可能对电视、收音机、电脑等造成轻微干扰。



开车时请不要手持手机。



切勿拆除手机或电池。



请将手机放在儿童接触不到的安全地方，以防止它的可拆部件造成窒息危险。



请勿用湿手接触充电器。



安全措施



为了您的安全，请只使用原厂电池和充电器。

注意：



废旧电池应按相关法规进行适当处理。



仅使用原厂附件以防损坏手机。



并非所有蜂窝网络都支持紧急呼叫。因此您不可以只依靠手机作为紧急时刻的通信工具，例如：紧急医疗救护。



手机的显示屏若过分的转动会被损坏。(第10页)

重要信息

本用户手册包括重要的手机使用和操作信息。请仔细阅读以使您的手机发挥最佳性能、防止手机损坏和不正当使用。本手册未明确认可的任何更改和修改可使手机的保修失效。



射频暴露和比吸收率(SAR)信息

此G7100型号手机设计符合有关无线电波辐射的要求。这些要求是基于科学的研究后制定的，并且已包含了一定的安全系数，以确保各个年龄和健康状况的人群的安全。

- 移动电话的辐射标准采用的计量单位被称作比吸收率(SAR)。在测量比吸收率时均采用标准操作方式，使手机在所有被测频段上的发射功率均为其最高级别。
- 尽管不同LG手机在不同位置上的比吸收率值存在差异，但是它们都满足射频暴露的相关国际规范。
- 一些国家的SAR比吸收率信息采纳了INCRP国际规范，适用于公众的无线电话吸收比率限制是平均每10克身体组织2.0瓦特/千克(W/kg)。
- 由(经)DASY3所测试的在耳边使用此款手机的最高的SAR值是0.3230 W/kg(10g)。



目录

概述

手机部件	9
手机主体	9
手机背面	11
按键描述	12
侧按键	13
字母数字键	14

显示信息

显示信息	15
屏幕上的图标	15

第一次使用前

安装	16
插入SIM卡	16
移除SIM卡	16
安装电池	17
给电池充电	17
断开充电器	18

拨打和接听电话	19
拨打一个电话	19
拨打国际电话	19
使用电话簿拨号	19

通话中功能表	20
1 通话中	20
2 多方通话或会议通话	21

访问密码	24
PIN码(4至8位数字)	24
PIN2码(4至8位数字)	24
PUK码(4至8位数字)	24
PUK2码(4至8位数字)	24
安全密码(4至8位数字)	24

进入功能表

功能表一览	25
--------------------	-----------



信息[功能表1]	27
写短信[功能表1-1]	27
写多媒体短信[功能表1-2]	29
收信箱[功能表1-3]	35
发信箱[功能表1-4]	37
语音邮件[功能表1-5]	38
小区广播[功能表1-6]	38
常用短语[功能表1-7]	40
设定[功能表1-8]	41
通话记录[功能表2]	43
未接来电[功能表2-1]	43
已接来电[功能表2-2]	43
拨出电话[功能表2-3]	43
删除最近呼叫[功能表2-4]	43
通话计费[功能表2-5]	43
GPRS信息[功能表2-6]	45
情景模式[功能表3]	46
振动[功能表3-1]	46
静音[功能表3-2]	46
私人[功能表3-3]	46
大声[功能表3-4]	46
耳机[功能表3-5]	46
汽车[功能表3-6]	46
照相[功能表4]	49
照相[功能表4-1]	49
照在相框中[功能表4-2]	50
连续拍摄[功能表4-3]	50
我的相册[功能表4-4]	51
设定[功能表4-5]	52
设定[功能表5]	53
闹钟[功能表5-1]	53
日期和时间[功能表5-2]	53
手机设定[功能表5-3]	54
通话设定[功能表5-4]	55




目录

保密设定[功能表5-5]	60
网络设定[功能表5-6]	62
恢复初始设定[功能表5-7]	63
公文包[功能表6]	64
日程表[功能表6-1]	64
电话本[功能表6-2]	66
附件[功能表7]	72
游戏[功能表7-1]	72
计算器[功能表7-2]	72
我的文件夹[功能表7-3]	73
作曲家[功能表7-4]	74
单位转换器[功能表7-5]	74
时区设置[功能表7-6]	74
语音备忘录[功能表7-7]	75
激活红外线[功能表7-8]	75
互联网[功能表8]	76
主页[功能表8-1]	76
书签[功能表8-2]	76
Push信息[功能表8-3]	76
上网设定[功能表8-4]	77
转到URL[功能表8-5]	79
缓存[功能表8-6]	79
安全设置[功能表8-7]	79
重新设定[功能表8-8]	79
浏览器版本[功能表8-9]	79
在线功能表	80
Java[功能表9]	81
应用程序[功能表9-1]	81
下载[功能表9-2]	81
内存状态[功能表9-3]	81
收藏夹[功能表10]	82
附件	83
保养和维护	84
技术数据	86



手机主体

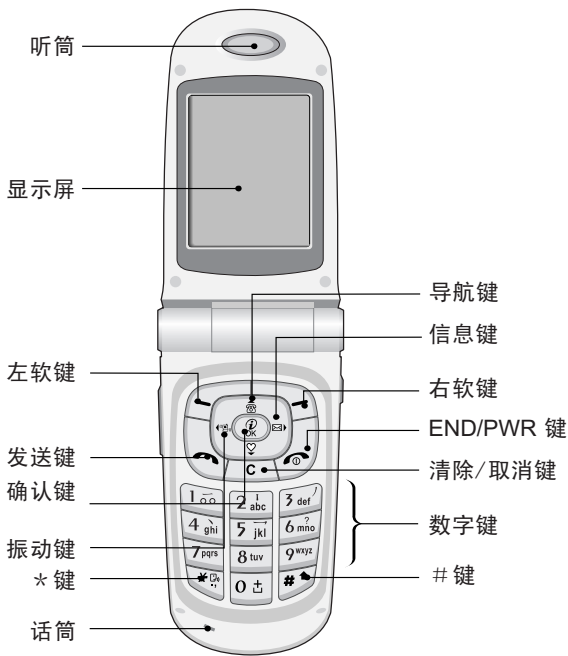




手机部件



显示屏可以被顺时针旋转90度，逆时针旋转180度。如果强制进行旋转，将会损坏相关装置。



手机背面

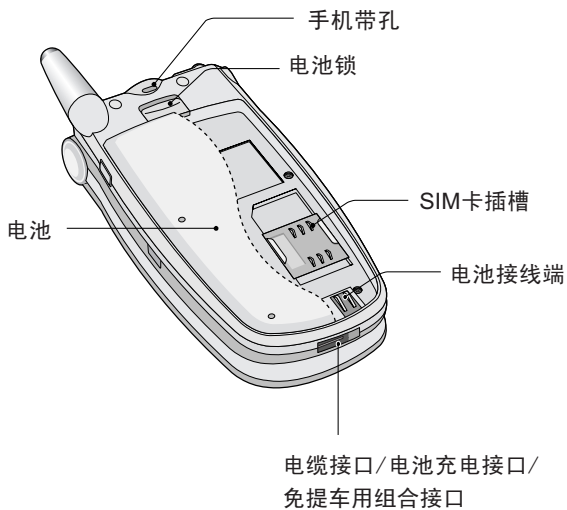














按键描述

以下是手机的主要元件。



键盘描述

按 键	描 述
	左软键/右软键 此软键执行出现在其上方屏幕上所显示的对应功能。
	振动键 您长按该键可以直接激活振动功能。
	信息键 您可以直接进入信息功能表（收件箱、内存状态、日程表或闹钟）。
	导航键 可以在姓名、电话号码、功能表或设定选项中翻阅。当您按下键时，可以浏览收藏夹。
	WAP热键 (=确认键) 长按该键可以直接连接到WAP。
	发送键 您可以拨打电话号码及接听来电。如果您直接按该键而没有输入任何号码，您的手机将显示您最后拨打的号码。
	数字键 这些键主要用来在待机模式下拨号以及在编辑模式下输入数字或字符。如果长按以下各键： <ul style="list-style-type: none">• 长按  进入语音信箱• 长按  拨打国际电话• 长按  至  可以快速拨号
	END/PWR键 用来结束通话或拒接来电。该键也可以用作开关键。按住该键几秒钟可开机或关机。



按 键	描 述
	此键可删除字符、返回功能表。另外，你可以在待机情况下短按此键来浏览语音备忘录。如果您长按此键，您可以记录一条语音记录。
	如果您长按此键，您将激活语音识别功能。

侧按键

按 键	描 述
	上/下侧键 当手机翻盖合闭时，当您连续按下此键，将会依次显示时间、日期、我的显示和问候语。如果您只按一下此键，将显示时间。它将根据您设置的“显示时间”的长短显示。
	照相键 可以使用此键照相和存储照片。



按键描述

字母数字键

每个键将代表多个字符。如下显示：

按 键	描 述
	., / ? ! - : ' " 1
	A B C 2 Ä À Á Â Ã Å Æ Ç a b c ä à á â ã å æ ç
	D E F 3 Ë È É Ê e f ë è é ê
	G H I 4 Ì Í Î Ï Ğ g h i ì í î ï ğ
	J K L 5 j k l
	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Œ m n o ñ ö ø ò ó ô õ œ
	P Q R S 7 Ş ş p q r s ß ş
	T U V 8 Ü Û Ú Û t u v ü ù ú û
	W X Y Z 9 w x y z
	[空格键] 0



手机屏幕会显示很多图标，具体描述如下：


屏幕上的图标

图标/指示器	描 述
	表示网络信号的强度。
	通话连接成功。
	您可以使用GPRS服务。
	您正在使用漫游服务。
	您正在使用线路1或2拨打电话—如果您已经申请了两条服务线路。
	闹铃已设定并启动。
	显示电池电量
	收到文本信息。
	收到语音信息。
	收到push信息。
	查看日程表
	所有音频信号已关闭。
	情景模式中的标准功能。
	情景模式中的大声功能。
	情景模式中的静音功能。
	情景模式中的耳机功能。
	情景模式中的汽车功能。
	转接来电。



安装


1. 插入SIM卡

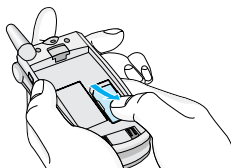

在手机背面查找SIM卡插槽的位置。遵循以下步骤插入SIM卡。

1. 如果装有电池，则先移除电池。
2. 将SIM卡滑入银色弹夹下的插槽中，金色连接器向下，切角向右。

2. 移除SIM卡

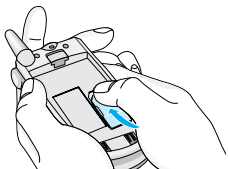

遵循以下步骤移除SIM卡。


1. 如果装有电池，则先移除电池。
2. 将SIM卡从插槽中小心滑出。

注意


- 安装前请确保手机关机并移除电池。
- SIM卡的金属接触片很容易刮损。操作和安装SIM卡时需要特别小心。请遵循随SIM卡附上的安装指南。



3. 安装电池

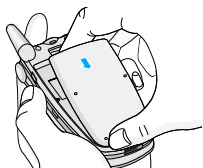


1. 将电池置于手机背面。

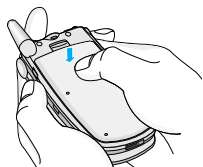


2. 向内推，直到听见一声卡嗒声。

4. 给电池充电

要用旅行充电器为手机充电，您必须先装上电池。

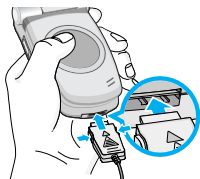

1. 将旅行充电器的一端插入手机底部。

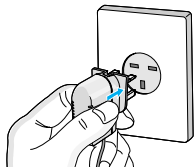

2. 将旅行充电器的另一端连接到墙上的AC电源插座。仅使用原装充电器。





安装

警告

- 不可强行插入充电接口，因为这将损坏手机及旅行充电器。

5. 断开充电器



如图所示，按充电器适配器两侧的按钮，将其与手机断开。

注意

- 手机原装电池在使用前必须完全充电。
- 充电时切勿取出电池或SIM卡。
- 充电完成后，将闪烁绿色。请注意在这种情况下，在手机屏幕显示“正在充电”之前可能会需要较长时间的初始充电时间。




注意

如果电池无法充电：



- 关机。
- 检查电池是否安装妥当。






拨打一个电话

1. 按您想拨打的电话号码（包括区位号）。如果您想删除一位数字，请按  键。
2. 按  [发送] 键来拨打该号码。
3. 按  [结束] 键来结束通话。

拨打国际电话

1. 长按  得到国际电话前缀，符号“+”在拨叫过程中将被替代为国际通话接入码。
2. 输入国家代码，区位号以及电话号码。
3. 按  [发送] 键。

使用电话簿拨号



1. 待机状态下按  键[电话本]。
2. 电话簿功能表显示后，用  键选择“查找”。
3. 通过姓名或号码查找到您想要的电话后，直接按  [发送] 键拨叫。





通话中功能表

1 通话中




1-1 保持通话

拨打电话或应答来电后，按  [发送] 键可保持通话。当一个通话被保持时，按  [发送] 键即可启动它。


1-2 拨打第二个电话

您可以从电话簿中获得一个拨号号码以拨打第二个电话。按  [电话本] 键，然后选择**查找**。要在通话时将拨号号码保存电话簿，按  [电话本] 键然后选择**添加条目**。



1-3 在两通电话间切换


要在两通电话间切换，选择  [选项] 键，然后选择**交换**或按  [发送] 键。您可以通过按上/下箭头键拨打其中一个通话。如果您想结束其中一个通话，选择您想结束的通话，然后按  [结束] 键。

1-4 接听来电

要在手机发出响铃时接听来电，只需按  [发送] 键即可。

当您在通话过程中有来电，手机也会提醒您。听筒会发出提示音，显示屏会显示第二个来电正在等待中。该功能被为呼叫等待，只有在您的网络支持它时才可用。要获取有关如何启动和关闭呼叫等待的详细信息，请参见**呼叫等待**[功能表5-4-4]。



如果启动呼叫等待，您可以通过按  [发送] 或选择  [接听] 键，然后选择**保持并接听**，保持第一个通话电并接听二个来电。

您可以选择  [功能表] 键，然后选择**结束并接听**来结束当前来电并接听待接来电。




1-5 拒接来电

不在通话中时，您只需长按  [结束]键就可以拒接来电，当手机翻盖合上时，只需按  键即可。

在通话中时，您可以按  [功能表]键并选择多方通话/拒接或按  [结束]键拒接来电。


1-6 将话筒静音

在通话中，您可以按  [选项]键然后选择静音将话筒静音。


按  [取消静音]可以将手机取消静音。

将手机静音后，呼叫者就无法听到您讲话，但您仍可以听到对方讲话。

1-7 通话中开启双音多频音

要在通话中开启双音多频音，例如：要让您的手机利用自动电话交换台，可以选择  [选项]键，然后选择开启双音多频。也可按同样步骤关闭双音多频音。

1-8 进入主功能表

按  [选项]键，然后选择主功能表可以从通话中功能表进入信息和SIM卡工具包主功能选项。只有当手机中的SIM卡支持SIM卡工具包服务时才显示SIM卡工具包功能表。

2 多方通话或会议通话

如果您的网络服务提供商支持多方通话或会议通话，您可以同时与超过一个呼叫者通话。



只有当您有一通进中的电话并有另一个保持通话，且这两个电话已经接听时才可设置多方通话。一旦设置多方通话，您就可以添加、断开或分开来电（即从多方通话中移除，但仍与您连接）。




通话中功能表

多方通话可容许最多五名成员。启动后，由您控制多方通话，也只有您可以将来电添加到多方通话。

2-1 拨打第二个电话

在通话中您也可以拨打第二个电话。只要输入第二个电话号码并按  [发送] 即可。当您拨打第二个电话时，第一个电话会自动保持。您可以通过选择  [选项] 键，然后选择 **交换** 在两通电话间切换。


2-2 启动多方通话

您可以选择  [选项] 键，然后选择 **多方通话/全部加入** 将保持中通话与当前通话连接并组成一个多方通话。


2-3 保持多方通话

要保持多方通话，请选择  [选项] 键，然后选择 **多方通话/全部保持**。



2-4 启动保持中的多方通话

要启动保持中的多方通话，请选择  [选项] 键，然后选择 **多方通话/全部加入**。

2-5 将来电添加到多方通话


要将当前通话添加到保持中的多方通话中，请选择  [选项] 键，然后选择 **多方通话/全部加入**。

2-6 在多方通话中显示呼叫者


要在手机屏幕上滚动显示组成多方通话的来电号码，请选择  和  键。





2-7 保持多方通话的成员


要保持多方通话中选择的呼叫者(显示在屏幕上的当前号码), 请选择  [选项]键, 然后选择**多方通话/排除**。

2-8 多方通话中的私人通话

要在多方通话中与其中一个呼叫者进行私人通话, 请在屏幕上显示您想进行对话的呼叫者号码, 然后选择  [选项]键和**多方通话/私人**以保持其他呼叫者。

2-9 结束多方通话

可以按  [结束]键与当前显示的多方通话呼叫者断开。要结束多方通话, 请按  [选项]键, 然后选择**多方通话/结束多方通话**。

选择  [选项]键, 然后选择**多方通话/全部结束**, 结束全部当前和保持中通话。



访问密码

您可以使用该节中描述的访问密码来避免他人使用您的手机。可以利用[功能表4-5-5]来更改访问密码(除PUK1和PUK2码外)。

PIN码(4至8位数字)

PIN码(个人识别号码)防止他人在未经授权的情况下使用您的SIM卡。PIN码通常与SIM卡一起提供。当PIN码设定为启动时,您的手机每次开机时都会要求您输入PIN码。相反,当PIN码设定为关闭时,您的手机则无需PIN码即可直接连接到网络。

PIN2码(4至8位数字)

某些SIM卡会提供PIN2码,用于访问一些功能,例如:通话费用通知、固定拨打号码。这些功能只有在您的SIM卡支持时才可用。

PUK码(4至8位数字)

更改锁定的PIN码需要PUK码(私人解锁密码)。PUK码与SIM卡一起提供。否则,请与您的服务提供商联系以索取密码。如果您丢失此密码,请同样与您的服务提供商联系。

PUK2码(4至8位数字)

某些SIM卡会提供PUK2码,用于更改锁定的PIN2码。如果您丢失了该密码,请同样与您的服务提供商联系。

安全密码(4至8位数字)

安全密码可防止他人未经授权使用您的手机。通常与手机一起提供。删除所有电话条目和启动“初始设定”功能表时需要该密码。安全密码的预设值为“0000”。



1 信息

- 1 写短信
- 2 写多媒体短信
- 3 收信箱
- 4 发信箱
- 5 语音邮件
- 6 小区广播
- 7 常用短语
- 8 设定



2 通话记录

- 1 未接来电
- 2 已接来电
- 3 拨出电话
- 4 删除最近呼叫
- 5 通话计费
- 6 GPRS信息



3 情景模式

- 1 振动
- 2 静音
- 3 私人

- 4 大声
- 5 耳机
- 6 汽车



4 照相

- 1 照相
- 2 照在相框中
- 3 连续拍摄
- 4 我的相册
- 5 设定



5 设定

- 1 闹钟
- 2 日期和时间
- 3 手机设定
- 4 通话设定
- 5 保密设定
- 6 网络设定
- 7 恢复初始设定



6 公文包

- 1 日程表
- 2 电话本



功能表一览



7 附件

- 1 游戏
- 2 计算器
- 3 我的文件夹
- 4 作曲家
- 5 单位转换器
- 6 时区设置
- 7 语音备忘录
- 8 激活红外线



8 互联网

- 1 主页
- 2 书签
- 3 PUSH信息
- 4 上网设定
- 5 转到URL
- 6 缓存
- 7 安全设置
- 8 重新设定
- 9 浏览器版本



9 Java

- 1 应用程序
- 2 下载
- 3 内存状态



10 收藏夹



11 SIM卡工具包



该功能视SIM卡和网络服务而定。



本功能表涉及的功能包括：SMS(短消息服务)，MMS(多媒体信息服务)，语音邮件和网络服务信息。

写短信[功能表1-1]

您可写入并编辑文本信息。您也可以查询信息页数。

1. 按  [选择] 进入信息功能表。
2. 如果您想编写新信息，在功能表中选择写短信。
3. 使用T9文本可更容易地输入信息。详细内容请参见T9文本(第31页)。
4. 选择[添加]来选择添加以下个项。
5. 当您想设置信息选项或已经编辑完信息时，按  [选项]。

注意

- 支持EMS R5的手机可以发送彩色图片、音乐、文字字体等等，但其他不支持此功能的手机可能并不能正确接收您发送的彩色图片、音乐或文字字体。

附加

• 符号

您可以添加特殊符号。

• 图片库

您可以添加默认的或我的文件夹中的支持短信的图片。

• 铃声

您可以添加支持短信的歌曲。

• 文本模板

您可以使用已在手机中设置过的文本模板。



信息[功能表1]

- **电话本**

您可以在电话本中添加电话本中的电话号码或e-mail地址。



- **名片**

您可以添加您的个人联系信息到您的名片中。

选项

- **发送**

发送文本信息。

1. 输入接收者的号码。
2. 按  键可加入更多的接收者。
3. 您可加入电话本中已存的号码。
4. 输入号码后按  键。

- **保存**

将信息储存在发信箱内。

- **字体**

您可以选择文字的大小和字体。

- **颜色**

您可以选择背景和字体的颜色。

- **对齐**

您可以将信息内容调整为右对齐、居中或左对齐。

- **字典**

您可以添加您自己的单词。此功能表只有在T9预想式输入模式(T9Abc/T9abc/T9ABC)时才会显示。

- **T9语言输入法**

选择T9输入法。




- **退出**

您可以返回到信息功能表。

写多媒体短信[功能表1-2]

您可以编写多媒体信息，查看信息大小。

1. 选择  [选择]进入信息功能表。
2. 如果您想要写一条新信息，选择**写多媒体短信**。
3. 您可以创建一条新信息或者选择已经编制好的多媒体信息模板。
4. 按**添加**可以向信息里添加符号，相，图片，歌曲，常用短语，电话本或者名片。

选项

- **预览**

您可以预览编写的多媒体信息。

- **发送**

您可以发送多媒体信息给多个接收人，并可以设定信息优先级和设置发送时间。

- **保存**

您可以将多媒体信息保存到收信箱或者保存为模板。

- **增加**

您可以在当前编辑的片断之前或之后增加一个新片断。

- **转到**

您可以移至前一或后一片断。



信息[功能表1]

- **删除**

您可以删除当前的片断。

- **设置信息格式**

- **设定定时器**

您可以为多媒体信息片断中的文本，图片和歌曲设置定时器。

- **置换文本和图片**

您可以置换信息中图片和文本的位置。

- **删除媒体**

您可以删除片断中的图片或者歌曲。这一选项仅在存在媒体时才显示。

- **字典**

您可以增加自己的单词，此选项仅在编辑模式为联想式输入法(T9Abc/T9abc/T9ABC)时才显示。

- **T9 语言输入法**

选择一种T9输入法。

- **退出**

您可以退回到信息功能表中。




如何使用T9输入法

使用T9输入法，您只需按相应字符的按键一次即可。这种输入法是基于手机中内置的字典实现的，并且您还可以增加新的单词。

• 使用T9输入法输入单词

1. 使用按键 到 开始输入单词。输入一个字符只需按一次按键。比如要快速输入单词“Girl”依次按 ，，，，输入的字符会显示为方块状。

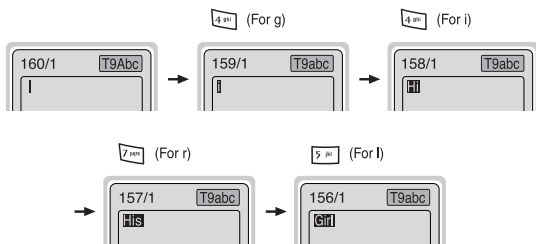

每次按键后单词会改变，因此您不用过于注意屏幕上显示的单词，只需按完所有正确的键即可。

您可使用 键删除一个字符，直到屏幕的最左侧为止。您可以长按 号键插入数字。可以长按 号键更换语言类型。（您也可以使用选项完成）


本电话支持三种输入模式：预想式英文输入（T9Abc，T9ABC，T9abc），英文输入（ABC，abc），数字输入。可以使用 号键更改模式。



提示：使用 键选择插入符号，选取所需的字符后按选择键。




信息[功能表1]

2. 您可在输入完单词后检查拼写是否正确。

如果正确 : 按  键继续写单词。

如果不正确 : 用 ,  键搜索正确的单词。
(返回 和下一个单词)。

提示 : 如果没有您所需的单词, 您可以加入自己的单词。在联想编辑模式下按  [选项], 选择字典, 您会看到如下所示。



3. 您可通过连续按  键插入所需的标点符号。

T9 输入

- 您可通过选择功能表开启T9输入法, 也可选择关闭T9输入法。(缺省状态为开启)



- 1) **笔画(ST)**: 如何使用笔画来选择中文字符。在您依次输入中文笔画时, 屏幕上将显示相关的中文字符。使用 $\left[\overline{\text{re}} \right]$ (和) $\left[\overline{\text{pe}} \right]$ 键来查看符合条件的其它字符, 按 $\left[\text{OK} \right]$ 按钮选定字符。同样, 使用 $\left[\overline{\text{re}} \right]$ 、 $\left[\overline{\text{pe}} \right]$ 、 $\left[\overline{\text{sh}} \right]$ 和 $\left[\overline{\text{zh}} \right]$ 键可也以查看更多类型的字符。

例如 要输入“你好”请依次按数字 $\left[\text{1} \overline{\text{ao}} \right]$ 、 $\left[\text{2} \overline{\text{abc}} \right]$ 、 $\left[\text{3} \overline{\text{def}} \right]$, 随后, 您便可以看到第一个字符, 现在“你”。请按 $\left[\text{OK} \right]$, 然后再按 $\left[\text{1} \overline{\text{ao}} \right]$ 按钮选定“好”。

按键	笔划	按键	笔划
$\left[\text{1} \overline{\text{ao}} \right]$	一	$\left[\text{6} \overline{\text{mno}} \right]$? (通配符号)
$\left[\text{2} \overline{\text{abc}} \right]$	丨	$\left[\text{7} \overline{\text{pqrs}} \right]$	
$\left[\text{3} \overline{\text{def}} \right]$	丿	$\left[\text{8} \overline{\text{tuw}} \right]$	
$\left[\text{4} \overline{\text{ghi}} \right]$	丶	$\left[\text{9} \overline{\text{vwz}} \right]$	
$\left[\text{5} \overline{\text{jkl}} \right]$	㇇	$\left[\text{OK} \right]$	选择键

<汉字笔画表>

- 2) **拼音(PY)**: “拼音”输入是通过中文字符的英语发音来查找中文字符。

拼音: 当输入发音的第一个字母时, 您便可以直接查找字符。

例如 要输入“国民”请依次按数字 $\left[\text{4} \overline{\text{ghi}} \right]$ 、 $\left[\text{8} \overline{\text{tuw}} \right]$ 和 $\left[\text{6} \overline{\text{mno}} \right]$, 此时在子编辑屏幕上会显示‘guo’和‘huo’的发音。如果选择‘guo’则所有与之发音相同的字符均将“国”列出供您选择。然后, 您便可以从中选择字符。(按 $\left[\text{OK} \right]$ 和 $\left[\text{1} \overline{\text{ao}} \right]$ 。) 现在, 选择完第一个字符后, 屏幕上将再次显示多个字符。您可以按相同的方法输入“民”。(按 $\left[\text{OK} \right]$ 和 $\left[\text{5} \overline{\text{jkl}} \right]$ 。)



信息[功能表1]

按键	英文字母	按键	英文字母
			MNO
	ABC		PQRS
	DEF		TUV
	GHI		WXYZ
	JKL		选择键

<汉语拼音表>

3) 注音(Bopomofo) : Bopomofo是根据40个特殊音标(注音)(T9输入法使用了其中的37个音标)来查找字符。请参考以下表格。

例如要输入“必要”，请依次按下数字和，此时在子编辑屏幕上将出现‘ㄅ ㄩ 一’字样。屏幕上将列出与此发音相同的字符以供选择。之后，您可以从中选择“必”字。(按和)。在选择完第一个字符后，屏幕上将再次显示多个字符。您可以按相同的方法输入“要”。(按和)。

按键	注音	按键	注音
	ㄅ ㄆ ㄇ ㄏ		ㄇ ㄉ ㄊ ㄋ
	ㄏ ㄏ ㄏ ㄏ		ㄎ ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ ㄏ
	ㄏ ㄏ ㄏ		一 ㄇ ㄏ




收信箱[功能表1-3]

当收到信息时，手机会给予提示。收到的信息会存储到收信箱中。

在收信箱中，您可以通过指示图标识别每一条信息。图标的含义如下图所示。

指示图标

- [] 多媒体短信
- [] 短信息
- [] SIM卡短信
- [] 已读
- [] 多媒体信息通知

如果手机显示“SIM卡信息已满”，您将需要从SIM卡的收信箱中删除信息。如果手机显示“没有空间存储信息”，您可以通过删除信息、媒体和应用程序释放存储空间。

* SIM信息

SIM信息是指存储在SIM卡上的特殊信息。您可以把SIM信息转存到手机中。

对于收到的多媒体信息通知，您可以对信息进行操作或者等待其自动下载。对于多媒体信息通知，参考[功能表1-8-2]。

若要读取一条信息，通过按  选择读取信息。



信息[功能表1]

回复短信

您可以向发送方回复信息。

转发

您可以转发信息给另一方。

回复电话

您可以向发送方回复电话。

删除

删除所选信息。

摘要

您可以提取信息中的图片、歌曲和文本。他们将被存储到我的文件夹或者电话本中。

查看信息

您可以查看到信息发送方的地址、标题（仅适用于多媒体信息）、信息接收的日期和时间、信息的类型和信息的大小。

重放(仅适用于多媒体信息)

您可以重放多媒体信息。

※ 接收(仅适用于多媒体信息通知)

如果多媒体信息被设置为关闭自动下载，您将只会接收到通知。要接收多媒体信息，需要选择[接收]。



发信箱[功能表1-4]

您可以看到已经被发送和没有被发送的信息。对于已经发送的信息，您可以看到发送状态报告。

同在收信箱中一样，您可以通过图标识别信息。

图标指示

- [] 已发
- [] 未发
- [] 发送已确认

※ 当您使用已发送信息时

转发

您可以转发当前信息给其他接收方。

删除

您可以删除所选信息。

查看信息

您可以查看收信箱中信息的接收方地址、标题（仅适用于多媒体信息）、信息接收的日期和时间、信息的类型和信息的大小。

警告

- 对于未发信息，您可以编辑、发送和删除该消息。



信息[功能表1]


语音邮件[功能表1-5]

收听语音邮件[功能表1-5-1]

您可以收听语音邮件。

语音邮件中心[功能表1-5-2]

如果您的网络服务提供商支持该功能，您即可获得语音邮件。当新语音邮件已接收，屏幕上将显示符号。请向您的网络服务提供商查询服务详情，以便相应地配置手机。

1. 在待机模式下长按  键。
2. 您可以查看以下子功能表。

- **本地中心**

选择本地中心听取语音邮件。

- **漫游地中心**

如果支持漫游服务，您在漫游中可以收取语音邮件。

小区广播[功能表1-6]

(视网络和您所申请的服务而定)

小区广播信息是网络向GSM手机用户提供的文本信息。它们提供一般的信息，例如，天气预报、交通、出租车和药房信息以及股票价格。每种信息类型都有一个号码；因此只要您已输入对应信息类型的特定号码，您将可以收到来自服务提供商的信息。当您收到了一条小区广播信息，您会看到弹出的信息显示您收到了一条信息或者直接显示小区广播信息。如果要再次浏览信息或者手机不在待机模式下，按下面的步骤操作。



读取[功能表1-6-1]

1. 当您接收到小区广播信息时，可以通过选择**读取**显示信息。
通过 **[←, →]** 或者 **☞** 移动光标读取其他的信息。
2. 收到的信息可以保存到有新信息到达之前。

接收[功能表1-6-2]

- **是**
如果您选择此选项，您的手机将接收小区广播信息。
- **否**
如果您选择此选项，您的手机将不再接收小区广播信息。

来电提示[功能表1-6-3]

- **是**
如果您选择该功能，当您收到小区广播信息时，手机将发出提示音。
- **否**
如果您选择该功能表，尽管您收到小区广播信息，您的手机不会发出提示音。

语言[功能表1-6-4]

您可以通过**[开/关]**选择您想要的语言。然后手机将以您所选的语言来接收小区广播信息。




信息[功能表1]

栏目[功能表1-6-5] (视网络和您所申请的服务而定)

- **新增**

您可以在手机中添加小区广播信息号码并加上标题。

- **查看列表**

您可以查看添加的小区广播信息栏目。如果您按  [选项]，您可以修改和删除被添加的小区广播信息栏目。

- **当前列表**

您可以在启动列表中选择小区广播信息栏目。如果您启动了一个栏目，您将会接收此栏目的信息。

常用短语[功能表1-7]

文本[功能表1-7-1]

您拥有11个文本模板。您可以预先修改您常用的模板或者填写<空>。

多媒体[功能表1-7-2]

您可以使用以下的功能。

编辑 : 您可以编辑多媒体信息模板。

添加 : 允许您添加新的多媒体信息模板。

写信息 : 您可以使用模板写多媒体信息。

删除 : 您可以删除多媒体信息模板。

名片[功能表1-7-3]

您可以制作自己的名片，可以键入名字、电话号码、传真号码和电子邮件地址。



设定[功能表1-8]

短信[功能表1-8-1]

- **信息类型**

文本、语音

通常，信息类型设定为文本格式。您可以将文本信息转换为其它格式，以配合接收信息的设备。要获取有关该功能的信息，请联系您的服务提供商。

- **信息有效期**

该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。

- **状态报告**

如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。

- **短信中心回复**

发送信息时，可以让接收信息者回复并将回复费用记入您的话费清单。

- **短信中心**

如果您想发送文本信息，您可以通过该功能表获得SMS中心地址。



信息[功能表1]

多媒体信息[功能表1-8-2]

- **信息有效期**

该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。

- **状态报告**

如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。

- **自动下载**

如果您选择开启，您将自动接收多媒体信息。如果您选择关闭，您将仅能在收件箱中收到通知信息，然后再查阅这些通知信息。

- **网络设定**

如果选择多媒体信息中心，您可以设置多媒体信息中心的URL地址。

- **允许短信类型**

个人：私人信息。

广告：商业信息。

信息：必要信息。

内存状态[功能表1-8-3]

您可以检查剩余空间和每一个存储库或SIM内存的使用状况。您可以进入任何一个存储库。



未接来电[功能表2-1]

该功能表显示最近的未接来电。您可以呼叫该号码，可以保存、查看日期和时间，也可以写信息发送到该号码。

已接来电[功能表2-2]

该功能表显示最近的已接来电。您可以呼叫该号码，可以保存、查看日期和时间，也可以写信息发送到该号码。

拨出电话[功能表2-3]

该功能表显示最近拨打的电话。您可以呼叫该号码，可以保存、查看日期和时间，也可以写信息发送到该号码。

删除最近呼叫[功能表2-4]

您可以删除最近的通话记录，包括全部的未接来电，已接来电，拨出电话或者全部通话。

通话计费[功能表2-5]

在这些子功能表中，您可以查看通话计时和通话费用。

通话计时[功能表2-5-1]

该功能表可让您查看最后通话、所有通话、已接来电和拨出电话的确切时间。您也可以将通话计时器复零。

1. 在待机模式下按 键进入[功能表]。
2. 按 直接进入或使用 和 进入通话记录。
3. 滚动屏幕以突出显示**通话计时**，并按左软键 [选择]。

5个子功能表：上一呼叫，全部呼叫，已接电话，拨出电话，全部重置。



通话记录[功能表2]

通话费用[功能表2-5-2]

该功能表可让您查询最后通话、所有通话的费用，余额并将费用复零。要将费用复零，您需要PIN2码。

1. 在待机模式下按 [功能表]。
2. 按 直接进入或使用 (和) 进入通话记录。
3. 滚动屏幕以突出显示**通话计费**，然后按 [选择]进入。

下列4个子功能表：最后通话、所有通话、余额和全部复零。

注意

- 网络服务商提供的实际话费清单会因为网络的特性，计费的方式，税收等其他因素而造成不同。

设定[功能表2-5-3] (取决于SIM卡)

• 通话费率

您可设置货币类型和计费单价。通话费率的服务提供商联系以获得计费单价。要在该功能表选择货币或单位，您需要PIN2码。

如果您想输入 €，£，\$，清除全部货币符号，然后按 键，如果您想更换符号，再次按 键。

注意

- 当所有的话费都已被使用，除了紧急电话将不能拨打任何电话。依据不同的SIM卡，您需要PIN2码来设定通话费用限制。



- **设定话费**

该网络服务可让您通过选择计费单位来限制您的通话费用。如果您选择**读取**，将显示余额。如果您选择**更改**，您可以更改计费限制。

- **自动显示**

该网络服务可让您自动查看最后通话的费用。如果您在自动显示功能表中选择**开**，通话结束时，您即可查看最后通话的用。

GPRS信息[功能表2-6]

你可以查看通过GPRS在网络上传输的数据量。另外，您还可以查看您的在线时间。

通话计时[功能表2-6-1]

您能查看GPRS的最后通话和所有通话的计时，您也可以将通话计时器复零。





数据量[功能表2-6-2]

您可以查看发送、接收或者全部的数据量和全部复零。



情景模式[功能表3]

在此功能表中，您可依据不同的事件，环境或呼叫群组来调整和定制铃声。

1. 在待机模式下按  [功能表]。
2. 按数字键  或使用  键进入情景模式。
3. 您也可在待机模式下按  直接进入情景模式。
4. 在手机翻盖合上时，如果长按侧键您也可以使用情景模式功能表。

振动[功能表3-1]

如果您需要**振动**模式，可以将情景模式调节为**振动**。
在这种模式下，所有的提示都为**振动**或者**静音**。

静音[功能表3-2]

如果您在安静的场所，可以将情景模式调节为**静音**。

私人[功能表3-3]

如果您需要私人模式，可以将情景模式调节为**私人**。

大声[功能表3-4]

如果您处于嘈杂的环境中，可以将情景模式调节为**大声**。

耳机[功能表3-5]

当您戴上耳机时，可以将情景模式调节为**耳机**。

汽车[功能表3-6]

当您启动免提车用组合时，可以调节该情景模式为**汽车**。



注意

- 若手机连接到诸如耳机和免提之类的配件，您将只能使用耳机或乘车模式功能表，并可进行设定。

启动[功能表3-x-1]

启动选定的情景模式。

更改[功能表3-x-2]

除了振动，每一个情景模式拥有以下子功能表。

来电提示

允许您根据不同环境选择来电提示类型比如：铃音，振动等等。

铃声类型

根据不同环境设定铃声类型。

铃声音量

根据不同环境设定铃声音量。开机音乐的音量和所有提示音乐的音量都根据铃声音量来设定。

短信提示

当收到信息时，根据不同环境发出提示警告音。

短信提示音

当收到信息时，根据不同环境发出提示铃音。

按键音量

根据不同环境设定按键音量。



情景模式[功能表3]

按键音

根据不同环境设定按键声音。

翻盖音

根据不同环境设定翻盖音。

自编铃声音量

根据不同环境设定音效音量。

开/关机音量

根据不同环境设定开关机音量。

自动应答

请注意只有乘车和耳机模式拥有该子功能表。

- **关闭** : 即使您的手机响铃, 也不会自动应答。
- **5秒后** : 在5秒后自动应答。
- **10秒后** : 在10秒后自动应答。

重命名[功能表3-x-3]

您可以修改默认情景模式的名字, 除了振动, 耳机和汽车情景模式。

注意

- 如果您对手机设置了免提功能, 您将不能在来电提示和短信提示中使用振动模式。在汽车情景模式中, 有以下的子功能表:
 - **来电提示** : 铃声, 无声
 - **短信提示** : 提醒一次, 提醒多次, 无声



使用相机您可以在移动中拍取人物或者景物的照片。

照相[功能表4-1]

1. 选择照相，然后按 ，如果您想直接进入此功能表，可以长按 。
2. 对准您要拍照的对象，然后按 或 。
3. 如果您要存储照片，按 或 。

提示!

• 设置窗口

您可以通过按上侧键 或左软键 (,) 控制照片大小、闪光灯、亮度、颜色、旋转和焦距。

- **分辨率** : VGA 640*480、QVGA 320*240、QQVGA 160*120、PB : 48*48。
- **闪光灯** : 开、关。
- **旋转** : 可以逆时针旋转照片90度。
- **图片质量** : 高、中、和低。
- **缩放** : x1、x2、x4. 缺省值是 x1。
- **亮度** : -2、-1、标准、+1、+2。
- **颜色** : 真彩色、棕褐色、黑白。



照相[功能表4]

按键功能

- $\left(\overline{\text{res}}, \text{,}, \text{,}\right)$: 选择您要设置的选项。
- Ⓚ : 照相或者存储照片。
- ⏪ : 退回到前一功能表或推出照相模式。
- ⏴ : 在程序设置中, 您可以更改缺省值。也可以用来旋转图片90度。
- Ⓜ : 选择您要设置的选项。
- Ⓚ : 照相或者存储照片。

照在相框中[功能表4-2]

您可以将照片放在不同的背景中, 而且, 您可以通过按 ⏴ , ⏵ 选择一个相框。

提示!

- 在这种模式下, 您不可以更改分辨率设置。

连续拍摄[功能表4-3]

您可以连续拍摄最多9张照片。照相之后, 您可以通过按 ⏴ , ⏵ 浏览照片, 您也可以通过按 Ⓚ 存储照片。

提示!

- 如果您将分辨率设置为640x480, 您只能照三张照片。如果是320x240, 则可以照六张照片。



我的相册[功能表4-4]

您可以浏览和发送照片，另外，您可以将照片设置为背景。

全部图片[功能表4-4-1]

您可以按顺序最多浏览9张照片。

通用图片[功能表4-4-2]

您可以浏览所有的照片，除了相框图片和电话本图片。

相框图片[功能表4-4-3]

您可以浏览所有的相框图片。

电话本图片[功能表4-4-4]

您可以浏览所有的电话本照片。

• 选项

- **缩小** : 您可以同时在一个屏幕中最多浏览9张图片。
- **写多媒体短信** : 您可以通过多媒体信息服务发送图片。
- **设为墙纸** : 您可以将图片设置为墙纸。
- **删除** : 您可以删除照片。
- **编辑标题** : 您可以编辑图片的标题。



照相[功能表4]

- **电话簿图片设定**
 1. 在相机功能表内，先设定像素为48*48，拍照後储存。
 2. 翻阅至电话簿，选择其一电话项目後修改。
 3. 翻阅至图片，然後选择其功能表(於头像功能表之後)。
 4. 按左/右键以选择电话簿之图片。如没有电话簿图片，便不能选择电话簿图片设定於电话项目内。
 5. 选择电话簿图片後，然後储存。

设定[功能表4-5]

内存状态[功能表4-5-1]



您可以查看总内存容量，已使用内存容量和剩余内存容量。

清空相册[功能表4-5-2]

您可以删除内存中所有的图片。





您可以根据您的需要设置下面的功能表。

1. 在待机模式下按  [功能表]。
2. 按  直接进入设定功能表。

闹钟[功能表5-1]

您最多可以设置五个闹钟。

1. 选择开并输入闹钟的时间。
2. 选择重复周期：一次，周一～周五，周一～周六，每天。
3. 选择闹钟铃声之后按  [确认]。
4. 编辑闹钟名称之后按  [确认]。
5. 如果设置闹钟为关机闹钟，即使手机已关机，闹铃仍然会在您设定的时间进行提示。

日期和时间[功能表5-2]

您可设置与日期和时间相关的功能。

日期设定[功能表5-2-1]

在该功能表中，您可以设定手机日期。

日期格式[功能表5-2-2]

在该功能表中，您可以设定日期格式比如：日/月/年，月/日/年，年/月/日。

时间设定[功能表5-2-3]

您可以设定当前手机时间。

时间格式[功能表5-2-4]

您可以选择时间格式为12小时制或24小时制。



设定[功能表5]

手机设定[功能表5-3]

您可以按需要完成手机设定。

显示设定[功能表5-3-1]

- **墙纸**

您可以选择待机模式下的背景图片。

- **预设**

您可以通过按 [←(或)] 选择一张图片或动画作为墙纸。

- **我的文件夹**

您可以选择一张图片或动画作为墙纸。

- **来电**

您可以设定拨入电话的动画。

- **已拨电话**

您可以设定拨出电话的动画。

- **问候语**

如果您选择开，您将编辑手机在待机模式下显示的文本。

- **背景灯**

您可以设定按键后背景灯开启的时间。

- **屏幕对比度**

您可以按 [←(,)] 键设定您想要的屏幕对比度。

- **信息提示**

您可以在打开功能表之前预览该功能表当前设置。提示显示在屏幕的下端。



- **功能表颜色**

您可以在几种功能表颜色组合中选择自己喜欢的功能表颜色。

外屏颜色[功能表5-3-2]

- **我的显示**：您可以设置当您按侧键时的外屏动画。
- **显示时间**：您可以设置按键后外屏显示的时间。
- **亮度**：您可以设置按侧键时外屏显示的亮度。
- **字体颜色**：您可以设置外屏文字的颜色。

语言[功能表5-3-3]

您可以选择手机上文本显示的语言。此设定会影响到语言输入法。

通话设定[功能表5-4]

在设定功能表中，您可以按  [选择] 设定和通话相关的功能表。

呼叫转接[功能表5-4-1]

呼叫转移服务可让您将语音来电、传真来电和数据来电转移到其它号码。要获取更多信息，请联系您的服务提供商。

- **所有呼叫**

无条件转移语音来电。

- **正在通话时转接来电**

当手机正在使用时转移语音来电。

- **无人接听时转接来电**

转移您没有应答的语音来电。



设定[功能表5]

- **无网络或关机时转接来电**
当手机关机或不在服务区时转移语音来电。
- **转接所有数据来电**
无条件转移到使用PC连接的号码。
- **转接所有传真来电**
无条件转移到使用传真连接的号码。
- **全部取消**
取消全部呼叫转接。

子功能表

呼叫转接功能表有以下子功能表。

- 启动

启动相应服务。

语音信箱

转发到信息中心。该功能不包括在所有数据来电和所有传真来电功能表中。

其他号码

输入接受转移呼叫的电话号码。

常用号码

您可以查询5个转移号码。

- 关闭

取消相应服务。

- 查询状态

查看相应服务的状态。




接听模式[功能表5-4-2]

- **翻盖接听**

选择此功能表，您可以通过翻盖接听来电。

- **任意键接听**

选择此功能表，您可按任意键接听来电，但不包括  [结束] 键。

- **按发送键接听**

选择此功能表，您只可按  [接听] 键接听来电。

发送号码[功能表5-4-3]

(视网络和所申请的服务而定)

- **启动**

您可以将手机号码发送给对方，在接收方手机上将显示您的手机号码。

- **关闭**

在接收方手机上不会显示您的手机号码。

- **网络设定**

如果您选择该功能，是否发送您的手机号码将视您两条线路的服务而定，比如线路一或者线路二。



设定[功能表5]

呼叫等待[功能表5-4-4]

(视网络而定)

- **启动**

如果启用该服务，您可以接收待接来电。

- **关闭**

如果关闭该服务，您将取消此服务。

- **查看状态**

显示呼叫等待的设置状态。

分钟提示[功能表5-4-5]

如果您选择开启，可以在通话期间通过每分钟的蜂鸣声检查通话时间。

语音拨号[功能表5-4-6]

- **自动**：您将通过打开翻盖进入语音拨号模式。

- **手动**：您将通过长按  键进入语音拨号模式。

自动重拨[功能表5-4-7]

- **启动**

当该功能设定为开启时，您的手机在连接失败后将再进行连接尝试。

- **关闭**

连接失败后，您的手机将不再进行连接尝试。



线路选择[功能表5-4-8]

仅在服务提供商支持选择线路服务时才可以使用该功能。如果您的服务提供商支持该功能，将显示以下功能表：

- 线路 1
- 线路 2

封闭用户群组[功能表5-4-9]

(视网络而定)

此功能可以限制手机拨打某用户群组列表中的电话号码。当使用此功能时，每一个呼叫都与一个群组列表相关联。如果已经定义了一个群组列表，所有的呼叫都将使用此列表。如果未定义群组列表，将使用网络中预先定义的列表。（有一个列表存储在网络上）

- 预设** : 使用运营商预设用户群组。
- 选择** : 使用选择的用户群组。
- 修改** : 编辑用户群组的名称和列表。
- 删除** : 删除选择的用户群组。
- 全部清除** : 删除所有用户群组。




设定[功能表5]

保密设定[功能表5-5]

需要PIN码[功能表5-5-1]

在该功能表中，您可以设定手机在开机时需要SIM卡的PIN码。如果启动该功能，您将被要求输入PIN码。

1. 进入保密设定功能表，按  [选择]选择要求PIN码。
2. 设置“开”或者“关”。
3. 如果选择“开”，开机时需要您输入PIN码。
4. 如果您连续三次输错PIN码，手机将被锁定，这时您需要输入PUK码。
5. 您最多可以连续十次输入PUK码，如果您连续十次输错PUK码，您将无法解锁您的手机。这时，您只能联系服务中心寻求帮助。

手机锁[功能表5-5-2]

您可以使用保密码防止他人未经授权使用您的手机。

如果您将手机锁设定为开，则开机时手机将要求您输入安全密码。如果您将手机锁设定为自动，则只有当您更换SIM卡时，手机才要求您输入安全密码。

呼叫限制[功能表5-5-3]

呼叫限制服务可以防止您的手机拨打或接听某种电话。该功能需要呼叫限制密码。您可以查看以下子功能表。

- **所有拨出电话**
您可以限制所有拨出电话。
- **国际电话（呼出国际电话）**
您可以限制拨出国际长途。



- **国际漫游电话（漫游时的呼出国际电话）**

您可以限制当您离开本地网时的所有拨出的国际长途电话。

- **所有来电**

您可以限制所有来电。

- **国际漫游时**

您可以限制国外漫游时来电。

- **全部取消**

您可以取消所有限制服务。

- **更换密码**

您可以更改呼叫限制服务的密码。

一组呼叫限制子功能表：

- **启动**

请求网络启动呼叫限制服务。

- **关闭**

取消所选子功能表呼叫限制服务。

- **查询状态**

查询呼叫限制服务开启或关闭的状态。



设定[功能表5]

固定拨号[功能表5-5-4] (需SIM卡支持)


您可以限制拨电话号码的拨打。这些号码由PIN2码保护。

- **开启**
您可以限制拨打您所选择的电话号码。
- **关闭**
您可以不限制对电话号码的拨打。
- **成员列表**
您可以查看被保存为FDN的号码列表。

更改密码[功能表5-5-5]

PIN是Personal Identification Number(个人识别号码)的缩写。可用于防止未经授权的人使用您的手机。

您可以更改访问密码：安全密码，PIN码，PIN2码。

1. 如果您想更改访问密码：安全密码，PIN码，PIN2码，先输入原密码然后按  [确认]。
2. 输入新的 安全密码，PIN码，或PIN2码，然后确认。

网络设定[功能表5-6]

您可以选择能够自动或手动注册的网络。通常，手机网络选择设定为自动。

自动[功能表5-6-1]

如果您选择“自动”，手机会自动选择在您区域内的可用网络。一旦您选择“自动”，无论手机在开机状态还是关机状态，都将保持设置为“自动”。



手动[功能表5-6-2]

手机会找到可用的网络列表并显示出来。然后您可以选择您想使用的网络，前提是该网络与您本地网络运营商已签订漫游协议。如果手机无法接入到您选择的网络中，手机允许您选择另一个网络。如果您将手机关机。

首选网络[功能表5-6-3]

您可以设定手机在注册其它网络前首先注册的首选网络列表。该列表从手机预设的已知网络列表中创建。

恢复初始设定[功能表5-7]

您可以通过选择该功能表将手机恢复为预设配置。然后，您需要保密码启动该功能。



公文包[功能表6]

日程表[功能表6-1]

当您进入这一功能表，会有一个日历显示出来。屏幕顶端是日期部分，在屏幕底端是图标（日程表和备忘录）。在您更改日期后，日历会按照该日期更新。方形光标也将标示于该日期上。如果日历下方有横线，表示当天已设定日程表。该功能可以提醒您记住您的日程表和备忘录。如果您已设定提示，手机将发出提示音。

更改日、月、年。

按 键	描 述	按 键	描 述
	每年		每周
	每月		每天

提示

- 只有手机开机时才能使用此功能。




新增[功能表6-1-1]

您可以编辑最多39个字符的提示（21个中文文字），最多可以设定20个提示。





• 日程表

按[选择]输入标题、日程表时间、重复时间、闹铃时间。




• 备忘录

1. 选择 增加号码。
2. 选择 备忘录。
3. 输入备忘录，然后按  [确认]。

查看[功能表6-1-2]

显示您所选日期的对应提示。使用  、  浏览提示列表。如果您已经设定提示闹铃，会显示闹钟提示图标。这时，通过按  [选择] 可以看到提示的细节。按  [选项] 删除或编辑您选择的提示。

查看全部[功能表6-1-3]

显示为所有日子所设定的提示。使用  、  浏览提示列表。按  [选项] 后，您可以进入与“查看日期”相同的功能表。

删除已过日程[功能表6-1-4]

您可以删除已经过期的日程。

全部删除[功能表6-1-5]

您可以删除所有提示。



公文包[功能表6]

电话本[功能表6-2]

1. 您可在待机模式下按 [电话本]键进入电话本。
2. 您也可在待机模式下按 [功能表]键进入功能表并选择公文包进入电话本。

查找[功能表6-2-1]

(从电话簿呼叫)

1. 首先，在待机模式下按 [电话本]打开电话簿。
2. 按 [选择]进入查找。
3. 如果你想要查找某人的电话号码或电子邮件地址，输入该人的姓名，或者选择“列表”以查看整个电话本。
4. 通过输入所欲查找姓名或号码的首字母可以进行快速查找。
5. 如果您想要编辑、删除、复制对象，或添加语音，选择 [选项]。将显示以下功能表。
 - **修改** : 您可以通过按 [确认]来编辑姓名、号码、电子邮件和传真。
 - **写信息** : 当查找到你需要的号码后,你可以向所选的号码发送信息。
 - **复制** : 您可以将条目从SIM卡复制到手机或从手机复制到SIM卡。
 - **语音** : 您可以为条目添加语音或更改语音标签。
 - **主要号码** : 您可以从您经常使用的手机、家庭、公司电话中选择一个号码。如果您设定了该功能，将首先显示主要号码。
 - **删除** : 您可以删除条目。












新增[功能表6-2-2]

您可以使用该功能来添加电话簿条目。

手机内存容量为200个条目。SIM卡内存容量取决于移动电话服务提供商。

您也可以在手机内存中保存20个字符的姓名。您可以在SIM卡中保存字符，而字符的数量取决于SIM卡。

1. 首先，在待机模式下按  [电话本] 打开电话簿。
2. 滚动屏幕前突出显示添加条目，按  [选择] 进入。
3. 选择您想使用的内存：**SIM卡**或**手机**。如果选择存储在手机内存中，您还可选择某一个号码作为主号码。
 - a. 拼写要添加的姓名。
 - b. 按  [确认]，然后输入号码。
 - c. 按  [确认]。
 - d. 您可以通过按  键为此条目设置群组。
 - e. 您可以通过按 ，， 键为此条目设置个性图片。
 - f. 如果您想添加语音，按  [是]。

注意

- 如果在电话本中同时设置了头像和图片，则在任何位置都无法浏览到图片。

您应在2秒内说出一个字，然后手机将提示您再说一遍以确保语音识别的精确性。完成语音识别后，语音将被自动附加。






公文包[功能表6]

注意

- 语音只能附加到您设定的主要号码上。例如：如果您更改主要号码，语音将自动附加到更改的号码上。
- 您可以将语音标签添加到SIM卡中的电话号码上。移除或更换SIM卡可以将删除语音标签。

群组[功能表6-2-3]

每个群组最多可以列出20个成员。您可以设定7个群组列表。

1. 在待机模式下按  [电话本] 进入电话簿。
2. 滚动到群组对象，然后按  [选择]，将显示每个群组列表。
3. 按  [选择] 选择您想管理的群组名称。

• 成员列表

您可以查看您想要的成员。

• 群组来电铃声设定

您可以根据群组不同设定来电铃声。

• 群组标志

您可以根据群组不同设定标志。

• 添加成员

- 选择添加成员
- 每个群组不能超过20名成员。

• 删除成员


您可以把成员从该群组中删除。



• 更改姓名

您可以修改和编辑群组名称。






快速拨号[功能表6-2-4]

您可以为姓名列表条目指定按键  -  中的任一键。长按2-3秒即可直接呼叫。



1. 首先，在待机模式下按  [电话本] 打开电话簿。
2. 滚动到快速拨号，然后按  [选择] 进入该功能表。
3. 如果您想添加快速拨号，选择<空>。然后，您可以在电话簿中查找姓名。
4. 选择快速拨号指定的姓名，选择**更改**或**撤销快速拨号**。
 - **更改**：您可以更改指定的快速拨号。
 - **删除**：您可以删除指定的快速拨号号码。

语音列表[功能表6-2-5]

您可以看到所有包含语音的电话号码。您也可以按[发送]直接呼叫。使用  和  选择电话号码后，按  [选项]，您可以看到下列子功能表：

- **播放**：播放附加在电话号码的语音。
- **更改**：更改附加在电话号码的语音。
- **删除**：删除附加在电话号码的语音。
- **呼叫**：您可以选择该功能表以进行呼叫。

设定[功能表6-2-6]

1. 首先，在待机模式下按  [电话本] 打开电话簿。
2. 滚动光标到设定，然后按  [选择] 进入。




公文包[功能表6]

• 保存至

滚动光标到**保存至**，然后按  [选择]进入。


- 如果您选择变量，在添加条目时，手机将提示保存至何处。
- 如果您选择SIM卡或手机，手机不提示您保存至何处，直接将条目保存在SIM卡或手机。

• 查找方式

滚动屏幕光标到**查找方式**，然后按  [选择]进入。

- 如果您选择变量，在查找时，手机将提示如何查找。
- 如果您选择姓名或号码，手机不提示您如何查找，直接按姓名或号码查找条目。



• 查看选项

滚动屏幕光标到**查看选项**，然后按  [选择]进入。

- **只显示姓名**：您可设置电话簿只显示姓名。
- **图片电话本**：您可设置电话簿显示个性图片。

全部复制[功能表6-2-7]





您可以将条目从SIM卡内存复制/移动到手机内存或从手机内存复制/移动到SIM卡内存。

1. 首先，在待机模式下按  [电话本]打开电话簿。
2. 滚动到全部复制，然后按  [选择]进入该功能表。
 - **SIM卡转到手机**：将SIM卡中的条目复制到手机内存。
 - **手机转到SIM卡**：将手机内存中的条目复制到SIM卡。
3. 您可以看到下列子功能表。
 - **保留原号码**：复制的同时，原来的电话记录被保留。
 - **删除原号码**：复制的同时，原来的电话记录被清除。



全部删除[功能表6-2-8]






您可以删除SIM卡、手机和语音中的所有条目。该功能需要安全密码。

1. 在待机模式下按  [电话本]，然后选择全部删除，按  [选择]。
2. 然后选择要清除的内存。
3. 按  [确认]或按  [返回]取消。

信息[功能表6-2-9]




• 特别服务号码

使用该功能访问您的网络运营商提供的特殊服务(如果您的SIM卡支持)。

1. 首先，在待机模式下按  [电话本]打开电话簿。
1. 滚动到**特别服务号码**，然后按  [确认]进入。
3. 将显示可用的服务名称。
4. 使用  键和  键选择服务。按  键[发送]。

• 内存状态

该功能可让您查看电话簿的已用内存和可用内存。

1. 首先，在待机模式下按  [电话本]打开电话簿。按  [选择]选择信息。
1. 滚动到**内存状态**，然后按  [确认]进入该功能表。

• 本手机号码（取决于SIM卡）

您可以在SIM卡上查询本手机号码。



附件[功能表7]




游戏[功能表7-1]

手机为您提供多种有趣的游戏。

提示






- 依游戏不同控制键也会不同。每个游戏会有主要控制键的说明。其他请参考如下所述：

[通用控制键]

-  : 游戏功能表
-  : 返回
-  : 暂停或返回游戏

计算器[功能表7-2]

该功能表包含的标准功能包括+、-、×、÷：加、减、乘、除。

1. 通过按数字键输入数字。
2. 通过导航键选择一个运算符。
3. 然后输入数字。
4. 您可以按  [结果] 查看计算结果。
5. 按[重设]或继续输入数字, 重复上述过程。
6. 您可以按  键删除数字或者符号。
7. 您可以通过按  键输入负数, 同时, 也可以通过按  键输入小数。
8. 您可按  键退出计算器。



我的文件夹[功能表7-3]

您可查看下载的铃声和图片，并将其设为墙纸或手机铃声。同样您也可以查看，聆听，删除或更名下载的数据。

图片库[功能表7-3-1]

铃声[功能表7-3-2]

每一项的子功能表

- **编辑名称**

您可以编辑每一个下载记录的名称。

- **写信息**

您可发送添加图片或声音的短信、彩信（视媒体类型）。

- **设置墙纸/设置铃声**

您可将下载的图片或声音设置为墙纸和铃声。

- **删除**

您可以删除某一个下载记录。

- **全部删除**








您可以删除每一个下载的记录。



附件[功能表7]







作曲家[功能表7-4]

您可以自编想要的铃声。当您进入该功能后，将显示您以前编辑的铃声。您可以重编铃声或更改原有铃声：

1. 输入您想要的音符。（ ~  : CDEFGAB）
2. 要调整音符，步骤如下。
 - **音长** :  缩短和  加长音符或休止音。
 - **休止音** :  插入一个长度和前一个音符一样的休止音。
 - **八度和音** :  设定新音符的八度和音。
 - **升调** :  设定音符的音高。




单位转换器[功能表7-5]

该功能可将任何单位转换为您需要的单位。有4种可以转换的单位类型：长度、面积、重量、和 体积。

1. 您可以通过按  [单位]键选择4种单位类型中的一种。
2. 按  (和 ) 选择您想转换的单位。
3. 您可以按  和  在当前值和转换值之间切换。
4. 您可以查看转换后的结果。您可以按  在小数点后输入数字。

时区设置[功能表7-6]

您可以查看世界各个城市的时间。

1. 通过按  (和 ) 键，您可以查看属于不同时区的城市时间。
2. 您可以使用  [设定]键设置您选择的城市的的时间。



语音备忘录[功能表7-7]

语音记录功能允许您记录10条20秒长的语音信息。

记录[功能表7-7-1]

1. 您可使用功能表或在待机模式下按 **C** 外端按键记录语音。
2. 开始记录后，会显示记录时间信息。
3. 按 **↵** 键结束记录。
4. 按 **↵** [确认]键选择语音记录标题。

查看列表[功能表7-7-2]

您可查看语音记录列表，并可删除和播放语音记录。

激活红外线[功能表7-8]

您可使用红外线功能连接PC-SYNC, 但须注意的是您不可同时使用红外线或串口。

PC Sync

PC SYNC 是通过数据线在PC和手机之间实现数据交换的软件。更多信息，请您在CD中查找帮助说明文件。





互联网[功能表8]

您的手机支持基于无线应用协议（WAP）的服务。您可以访问您的网络运营商所支持的服务。该服务功能表可让您获取有关新闻、天气预报和飞机航班表之类的信息。

主页[功能表8-1]

回到主页。主页是您在启动的上网设定中所设定的WAP站点。如果您没有进行设置，将使用运营商预先设定的站点。

书签[功能表8-2]

您可以按  [选择] 进入该功能表，按  [返回] 退出该功能。

- **连接**：连接到所选书签。
- **添加**：手动新增书签。
- **修改**：更改所选书签的标题和地址。
- **删除**：从书签列表中删除所选书签。

Push信息[功能表8-3]

收信箱[功能表 8-3-1]

您可以读取或删除Push信息。


- **进入**：显示接收到的Push信息。
- **读取**：您将连接到所收Push信息中链接的站点。
- **删除**：删除选择的Push信息。

接收[功能表8-3-2]

选择是否接收Push信息。



上网设定[功能表8-4]

您可以设定最多10个上网设定，但每次只能启动其中一个。
滚动到所要的情景模式并按  进入可用的选项。

- **启动**

您可以启动所选的上网设定。

- **设置**

编辑和更改所选上网设定中的WAP设置。

- **主页**

该设定可让您输入您想作为主页使用的网站地址（URL）。
您不需要在每个URL前键入“http://”，因为WAP浏览器会自动加入。

- **连接方式**

- **数据（电路交换）**
- **GPRS（通用分组无线业务）**

- **数据设定**

IP 地址 : 输入访问WAP网关的IP地址。

拨出号码 : 输入访问WAP网关的拨号号码。

用户名 : 拨号服务器（不是WAP网关）的用户身份。

密码 : 拨号服务器（不是WAP网关）识别您身份所需的密码。

呼叫类型 : 选择数据来电的类型：模拟或ISDN（数码）。

呼叫速度 : 数据连接的速度，9600 或者 14400。

连接时间 : 您可以设定限制时间。超过此时间限制而没有数据输入或传输时，服务将自动关闭。



互联网[功能表8]

- GPRS 设置

只有当选择GPRS作为载体服务时，服务设定才可用。

IP 地址 : 输入访问WAP网关的IP地址。

APN : 输入APN

用户ID : APN服务器的用户身份。

密码 : APN服务器识别您身份所需的密码。

- 显示图象

您可以选择是否要显示WAP卡上的图象。

- 连接类型

连接类型的选项为临时或持续，视网关而定。

固定连续

固定的传输机制，会增加网络通信量。

自选连接

非固定（无连接）的服务。

- 安全设置

该选项可以设定为开启或关闭，视网关而定。

• 重命名

编辑上网设定的名称。

• 删除设定

删除上网设定。

• 添加

您可手动添加上网设定。



- **Email 服务器**

- **电子邮件连接**

- 连接到您配置的电子邮件服务器。

- **编辑地址**

- 编辑电子邮件服务器的地址。

转到URL [功能表8-5]

您可以直接连接到想要的站点。您需要输入想直接连接的特定URL。

缓存 [功能表8-6]

您可以删除缓存内容，更改缓存模式。

清除缓存 [功能表8-6-1]

缓存内容将被清除。

查询缓存 [功能表8-6-2]

您可以更改查询缓存的时间。

安全设置 [功能表8-7]

显示安全证书的列表。

重新设定 [功能表8-8]

您可以将上网设定的所有当前设定复零为初始设定。

浏览器版本 [功能表8-9]

显示WAP浏览器的版本。



在线功能表

在线时，您可以查看下列功能表。

- **主页**
与[功能表8-1]相同。
- **刷新**
下载当前页面。
- **书签**
与[功能表8-2]相同。
- **添加书签**
将当前URL保存为书签。
- **信息**
进行Wap链接时显示SMS信息。
- **Push信息**
查看[功能表8-3]。
- **转到URL**
您可以直接连接到想要的站点。您需要输入想直接连接的特定URL。
- **电子邮件**
您可以连接到您所设置的邮件服务器。
- **电子邮件设定**
将当前URL保存为电子邮件服务器。
- **清除缓存**
缓存中的内容将被清除。
- **保存图像**
保存浏览的图像。



应用程序[功能表9-1]



JAVA 功能表选项

滚动到某一应用程序并选择选项。

1. **打开**：执行所选MIDlet程序。
2. **删除**：删除所选的MIDlet程序。
3. **更新**：连接服务器更新所选的所选的MIDlet程序。
4. **信息**：显示所选的MIDlet程序信息。
5. **设定**：您可为JAVA游戏设置背景灯光和声音。

下载[功能表9-2]

您可编辑下载MIDlet程序服务器的地址，并可将WAP浏览器下载的程序存储在手机中。您也可在应用程序界面下查看所存储的MIDlets列表。

内存状态[功能表9-3]


您可查看游戏和应用程序可用的内存大小以及手机全部的内存状态。



JAVA™ 是SUN系统公司的商标。



收藏夹[功能表10]

您可在收藏夹中设定10个常用功能表。您可使用键盘热键  进入收藏夹。

如果您想在收藏夹设定功能表，选择列表上的<空>栏进入，对于已经设定的功能表，请参照以下说明：

- **启动** : 启动设定的功能表。
- **更改** : 更改功能表。
- **删除** : 删除设定的功能表。
- **删除全部** : 删除收藏夹中所设定的全部功能表
- **信息** : 查看收藏夹中设定的功能表。



我們針對您所使用的行動電話設計了多種款式的配件。您可以依照您的需求選擇適合您的配件。



標準電池



簡易型免持聽筒

使用此項配件將提供您的行動電話免持聽筒的操作模式。



旅行用充電器

此充電裝置將能提供您的行動電話電池充電功能。



項鍊型吊飾



數據傳輸線/光碟

您的行動電話可透過此套件輕易的連結電腦並且進行資料備份或修改。

注意

- 請您務必使用原廠LG配件。
- 仿冒品或替代品及非原廠配件可能會讓您喪失保固權益。
- 所有相關配件可能因地區別不同而有所改變；所以在您購買或使用前請務必向您所在的地區之LG經銷或代理商進行確認。



保养和维护

使用手机时，请遵循以下基本安全注意事项。

- 请勿用湿手接触充电器。
- 请勿拆卸手机。（如果需要修理，请找合格的专业技术人员帮忙。）
- 请远离电子仪器，例如：电视机、收音机或个人计算机。
- 请将手机远离热源，例如：电器或电热烹饪设备。
- 小心轻放。
- 请勿使手机受到机械振动或晃动。
- 如果使用手机套或塑料手机套可能会损坏手机外壳涂层。
- 请用干布擦拭手机外壳。（请勿使用溶解物，如：苯、稀释剂或酒精。）
- 请勿将手机暴露在过多烟雾或灰尘的环境中。
- 勿将手机放于信用卡或磁卡附近；因而影响磁卡上的信息。
- 切勿用利器敲击屏幕；否则，会损坏手机。
- 不要手机置于液体或潮湿的环境中。
- 小心使用耳机等配件。有必要，不必要时请勿触摸天线。



■ 保管电池

- 在重新充电前，不必完全放电。与其他电池不同，本电池不会因电池的记忆功能影响其使用性能。
- 请只使用LG电池和充电器。东方通信充电器可以最大化电池使用寿命。
- 请勿拆卸或使电池短路。
- 请保持金属触点和电池清洁。
- 请在电池无法满足性能要求时进行更换。电池可以充数百次电，直到需要更换。
- 如果长时间不用电池，请重新充电，以延长使用时间。
- 请勿将电池充电器暴露在阳光下或在湿度高的地方使用，如浴室。
- 请勿将电池放置在过热或过冷的地方，这样会影响电池性能。



技术数据

常规

产品名称 : G7100

系统 : GSM 900 / DCS 1800

环境温度

最高 : +55 °C

最低 : -10 °C





备忘录

GPRS Phone

USER'S MANUAL

MODEL: G7100

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.

For Your Safety



All radio transmitters carry risks of interference with electronics in close proximity.



Mobile Phones must be switched off at all times in an aircraft.



Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.



Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.



Minor interference may affect TVs, radios, PCs, etc.



Do not hold the phone in your hand while driving.



Do not dismantle the phone or battery.



Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.



Do not touch the charger or phone with wet hands.



For Your Safety



For your safety, use ONLY specified ORIGINAL batteries and chargers.

Please note:



Batteries should be disposed of in accordance with relevant legislation.



Only use ORIGINAL accessories to avoid damage to your phone.



Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls.



LCD indicator can be damaged if you turn a flip excessively. For details, please see P.11.

Important Information

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model G7100 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone which tested by DASY3 for use at the ear is 0.3230 W/kg (10g).



Contents

Overview

Part of the Phone	10
• Main body of the Phone	10
• Outside of the Phone	12
Key Description	13
• Side of the Key	14
• Letter Keys	15

Display Information

Display Information	16
• On-Screen Icons	16

Getting Started

Installation	17
• Inserting the SIM Card	17
• Removing the SIM Card	17
• Installing the Battery	18
• Charging the Battery	18
• Disconnecting the charger	19
Making and Answering Calls	20
• Making a call	20
• International Calls	20
• Making a call using the Phonebook	20

Additional Functions

In call Menu	21
• 1 During a call	21
• 2 Multiparty or Conference Calls	23



Access Codes	25
• PIN code (4 to 8 digits)	25
• PIN2 code (4 to 8 digits)	25
• PUK code (4 to 8 digits)	25
• PUK2 code (4 to 8 digits)	25
• Security code (4 to 8 digits)	25

Accessing the Menu

Menu Tree	26
------------------------	-----------

Messages [Menu 1]	28
--------------------------------	-----------

- Write short message [Menu 1-1] 28
- Write multimedia message [Menu 1-2] 31
- Inbox [Menu 1-3] 35
- Outbox [Menu 1-4] 36
- Voice mail [Menu 1-5] 38
- Info service [Menu 1-6] 38
- Templates [Menu 1-7] 40
- Settings [Menu 1-8] 41

Call register [Menu 2]	43
-------------------------------------	-----------

- Missed calls [Menu 2-1] 43
- Received calls [Menu 2-2] 43
- Dialed calls [Menu 2-3] 43
- Delete recent calls [Menu 2-4] 43
- Call charges [Menu 2-5] 43
- GPRS information [Menu 2-6] 46



Contents

Profiles [Menu 3]	47
• Vibrate only [Menu 3-1]	47
• Quiet [Menu 3-2]	47
• General [Menu 3-3]	47
• Loud [Menu 3-4]	47
• Headset [Menu 3-5]	47
• Car [Menu 3-6]	47
Camera [Menu 4]	50
• Take picture [Menu 4-1]	50
• Take in modes [Menu 4-2]	51
• Take continuously [Menu 4-3]	51
• My album [Menu 4-4]	52
• Settings [Menu 4-5]	53
Settings [Menu 5]	54
• Alarm clock [Menu 5-1]	54
• Date & Time [Menu 5-2]	54
• Phone settings [Menu 5-3]	55
• Call settings [Menu 5-4]	56
• Security settings [Menu 5-5]	61
• Network settings [Menu 5-6]	63
• Reset settings [Menu 5-7]	64
Organiser [Menu 6]	65
• Scheduler [Menu 6-1]	65
• Phonebook [Menu 6-2]	67
Fun & Tools [Menu 7]	74
• Games [Menu 7-1]	74
• Calculator [Menu 7-2]	74





• My folder [Menu 7-3]	75
• Melody composer [Menu 7-4]	76
• Unit converter [Menu 7-5]	76
• World time [Menu 7-6]	76
• Voice recorder [Menu 7-7]	77
• Activate IrDA [Menu 7-8]	77
Internet [Menu 8]	78
• Home [Menu 8-1]	78
• Bookmarks [Menu 8-2]	78
• Push messages [Menu 8-3]	78
• Profiles [Menu 8-4]	79
• Go to URL [Menu 8-5]	82
• Cache settings [Menu 8-6]	82
• Security certification [Menu 8-7]	82
• Reset profiles [Menu 8-8]	82
• Browser version [Menu 8-9]	82
On browsing menu	83
Java [Menu 9]	84
• Applications [Menu 9-1]	84
• Download [Menu 9-2]	84
• Memory status [Menu 9-3]	84
Favorites [Menu 10]	85
Accessories	86
Care and Maintenance	87
Technical Data	89



Part of the Phone

Main body of the Phone

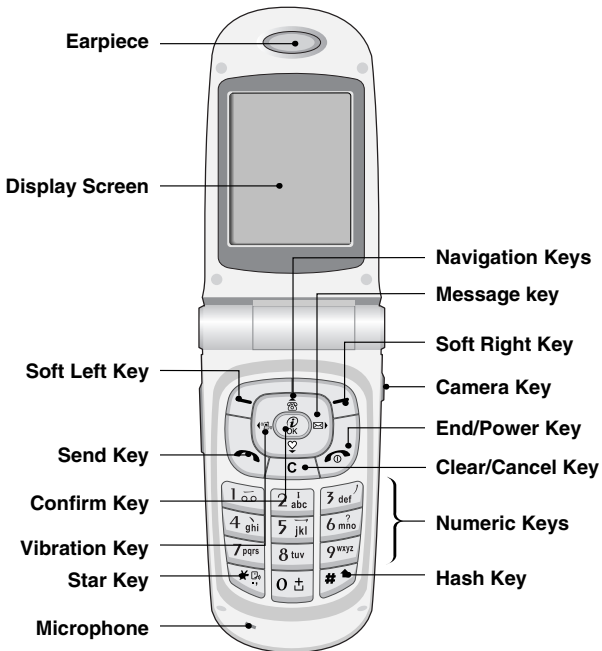

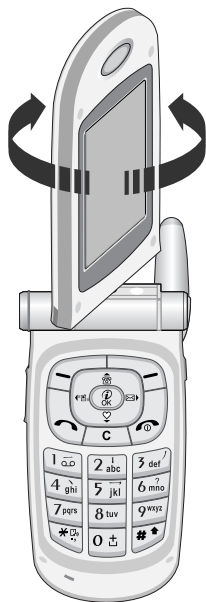


You can rotate LCD clockwise an angle of 90 degrees and counter-clockwise an angle of 180 degrees. However, if you turn it by force, it can cause serious damage.



Part of the Phone

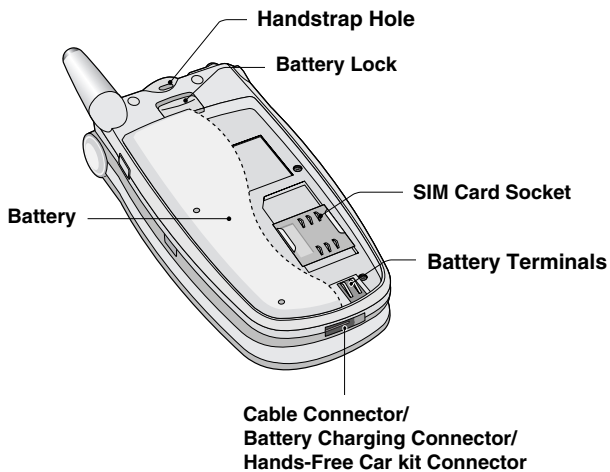









Outside of the Phone







The following shows key components of the phone.

Keypad Description



Key	Description
	<p>Soft Left Key / Soft Right Key</p> <p>Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p>Vibration key</p> <p>You can activate the vibration directly by holding down this key.</p> <p>Message key</p> <p>You can go to Message menu (Inbox, Memory status, Scheduler or Alarm) directly.</p> <p>Navigation Keys</p> <p>Used to scroll through name, phone numbers, menus or setting options. When you press down key, you can view Favorites menu list.</p> <p>WAP Hot key (=Confirm key)</p> <p>If you press this key for a while, you can connect to WAP directly.</p>
	<p>Send Key</p> <p>You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed numbers.</p>
 	<p>Numeric Keys</p> <p>These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time.</p> <ul style="list-style-type: none"> • Used to call your voicemail box by . • Used to call for international call by . • Used to call Speed dials by from  to .
	<p>END/PWR Key</p> <p>Used to end or reject a call. This key is also used as Power Key by pressing this key for a few seconds.</p>



Key Description

Key	Description
	You can delete the characters, go back the menu. In addition, you can view voice memo list when you press this key shortly in a standby mode.
	If you press this key for a long time, you can activate voice recognition.







Side of the Key

Key	Description
	Up/Down Side Key On closing a flip, when you press this key sequently, time, date, my display, and greeting note is displayed respectively. If you press this key once, time is displayed. It will show up depending on setting "Show time".
	Camera key This key is used to take a picture and save it.



Letter Keys

Each key can be used for several symbols. There are shown below.

Key	Description
	., / ? ! - : ' " 1
	A B C 2 Ä Å Ã Ä Å Æ Ç a b c ä å â ã ä æ ç
	D E F 3 Ë È É Ê d e f ë è é ê
	G H I 4 Ï Î Ï Î Ğ g h i ï î ï î ğ
	J K L 5 j k l
	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Œ m n o ñ ö ø ò ó ô õ œ
	P Q R S 7 Ş p q r s β ş
	T U V 8 Ü Û Ú Û t u v ü ú ú û
	W X Y Z 9 w x y z
	[space] 0



Display Information


The screen displays several icons. There are described below.

On-Screen Icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – If you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received an push message.
	You can view your schedule.
	All audible signals are turned off.
	General menu in profile.
	Loud menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	Car menu in profile.
	You can divert a call.




1. Inserting the SIM Card

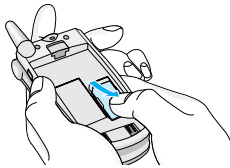

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.

2. Removing the SIM Card

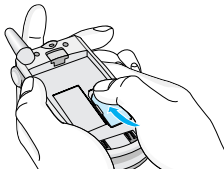

Follow the steps below to Remove the SIM card.

1. Remove the battery if attached.
2. Take out the SIM card from the slot.


Notice

- Removing the battery from the phone whilst it is switched on may cause it to malfunction.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.




Installation

3. Installing the Battery

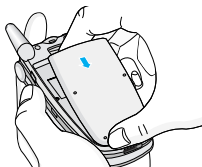


1. Position the lugs on the bottom of the battery into the retaining holder.

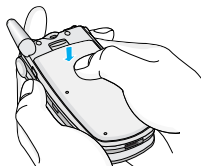


2. Then push to the half of the battery into position.

4. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.

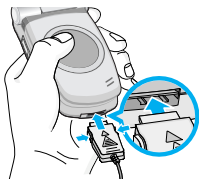

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.

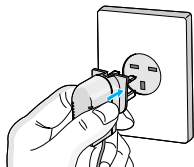

2. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.





Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.

5. Disconnecting the charger



Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

Note

- Ensure the battery is fully charged before using the phone.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging is complete.

Note

If the battery does not charge,

- switch the phone off.
- ensure the battery is correctly fit.



Making and Answering Calls

Making a call

1. Key in phone number including the area code. If you want to delete number, press **C**.
2. Press to call the number.
3. Press to end the call.

International Calls

1. Press and hold the key for the international prefix.
“+” character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Making a call using the Phonebook

1. In standby mode, press [Names].
2. When the menu is displayed, you select Search by pressing .
3. If you find out the desired item through searching by a name or a number, press to call.



The menu displayed on the handset screen during a call is different to the default main menu reached from the idle screen, and the options are described here.

1 During a call

1-1 Putting a Call on Hold

When a call is made or answered, press the [Send] to place it on hold. When a call is held, press the [Send] to make it active.

1-2 Making a Second Call

You can get a dial number from phonebook to make a second call. Press [Names] then select **Search**. To save the dial number into phonebook during call, press [Names] then select **Add new**.

1-3 Swapping Between Two Calls

To switch between two calls, select [Options], then select **Swap** or just press [Send] key.

You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press [End] key when the call you want to end is focused.

1-4 Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the [Send] key.

The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting [Menu 5-4-4].



In call Menu

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing [Send] or by selecting [Answer], then **Hold & Answer**.

You can end the current call and answer the waiting call by selecting [Menu], then **End & Answer**.

1-5 Rejecting an Incoming Call

When not in a call you can reject an incoming call without answering it by simply pressing the [End] or for a long time when the flip is closed.

When in a call you can reject an incoming call by pressing the [Menu] key and selecting **Multiparty/Reject** or by pressing [End] key.

1-6 Muting the Microphone

You can mute the microphone during a call by pressing the [Options] key then selecting **Mute**. The handset can be unmuted by pressing the [Unmute].

When the handset is muted, the caller cannot hear you, but you can still hear them.

1-7 Switching DTMF Tones on During a Call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select [Options], then **DTMF On**. DTMF tones can be turned off the same way.

1-8 Calling up Messages and SIM Tool kit main menu

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting [Options]. SIM Tool kit menu is shown only when SIM in the handset supports SIM Tool kit service.





2 Multiparty or Conference Calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.


A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call.

The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.


2-1 Making a Second Call

You can make a second call while you are already in a call. To do this, enter the second number and press  [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting  [Options] then **Swap**.


2-2 Setting up a Multiparty Call

You can connect a call on hold to the currently active call to form a multiparty call by selecting  [Options] then **Multiparty/Join all**.

2-3 Putting the Multiparty Call on Hold

To put a multiparty call on hold, select  [Options] then **Multiparty/Hold all**.


2-4 Activate the Multiparty Call on Hold

To make a multiparty call on hold active, select  [Options] then **Multiparty/Join all**.





In call Menu


2-5 Adding Calls to the Multiparty Call

To join an active call to the held multiparty call, select  [Options] then **Multiparty/Join all**.


2-6 Displaying Callers in a Multiparty Call

To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.



2-7 Putting a Member of a Multiparty Call on Hold

To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select  [Options] then **Multiparty/Exclude**.

2-8 A Private Call in a Multiparty Call

To have a private call with one caller of a multiparty call, display the number of the caller you wish to talk to on the screen, then select  [Options] and **Multiparty/Private** to put all the other callers on hold.

2-9 Ending a Multiparty Call

The currently displayed caller of a multiparty call can be disconnected by pressing the  [End] key. To end a multiparty call, press  [Options] then select **Multiparty/End multiparty**.

Selecting  [Options] then **Multiparty/End all**, will end all the active and held calls.



You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using [Menu 5-5-5].

[PIN code \(4 to 8 digits\)](#)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code** is set **On**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code** is set **Off**, your phone connects to the network directly without the request PIN code.

[PIN2 code \(4 to 8 digits\)](#)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

[PUK code \(4 to 8 digits\)](#)

The PUK (PIN Unlocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

[PUK2 code \(4 to 8 digits\)](#)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

[Security code \(4 to 8 digits\)](#)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate “Reset settings” menu. The default number is “0000”.



Menu Tree



1 Messages

- 1 Write short message
- 2 Write multimedia message
- 3 Inbox
- 4 Outbox
- 5 Voice mail
- 6 Info service
- 7 Templates
- 8 Settings



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information



3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud

5 Headset

6 Car



4 Camera

- 1 Take picture
- 2 Take in modes
- 3 Take continuously
- 4 My album
- 5 Settings



5 Settings

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 Reset settings



6 Organiser

- 1 Scheduler
- 2 Phonebook



7 Fun & Tools

- 1 Games
- 2 Calculator
- 3 My folder
- 4 Melody composer
- 5 Unit converter
- 6 World time
- 7 Voice recorder
- 8 Activate IrDA



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 Security certification
- 8 Reset profiles
- 9 Browser version



9 Java

- 1 Applications
- 2 Download
- 3 Memory status



10 Favorites



11 SIM Service

This menu depends on SIM and the network services.





Messages [Menu 1]

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

Write short message [Menu 1-1]

You can write and edit text message, checking the number of message pages.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write short message**.
3. To make text input easier, use T9. For details, see **How to use T9** (Page 33).
4. Press [Insert] to attach the followings.
5. If you want to set option for your text, or to finish your writing, press  [Options].

Note

- The phone which supports EMS release 5 is available to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.



Insert

- **Symbol**

You can add special characters.

- **Picture**

You can insert the **Default** pictures or pictures in **My folder** that are available for short messages.

- **Sound**

You can insert sounds that are available for short messages.

- **Text templates**

You can use **Text templates** already set in the phone.

- **Phonebook**

You can add phone numbers or e-mail addresses in **Phonebook**.

- **Business card**

You can add your contact information to the message.





Messages [Menu 1]

Options

- **Send**

Sends text messages.

1. Enter numbers of recipient.
2. Press  key to add more recipients.
3. You can add phone numbers in the phone book.
4. Press  after entering numbers.

- **Save**

Stores messages in Outbox.

- **Font**

You can select **Size** and **Style** of fonts.

- **Colour**

You can select **Colour** of foreground and background.

- **Alignment**

You can make the message contents aligned **Right**, **Centre** or **Left**.

- **Add T9 dictionary**

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

Select a T9 input mode.


- **Exit**

If you press **Exit** while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.



Write multimedia message [Menu 1-2]

You can write and edit multimedia messages, checking message size.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add **Symbol, Photo, Picture, Sound, Text template, Phonebook** or **Business card**.

Options

- **Preview**

You can preview multimedia messages you wrote.

- **Send**

You can send multimedia messages to multiple recipients, prioritise your message, and make it sent later as well.

- **Save**

You can save multimedia messages in the outbox or as templates.

- **Add slide**

You can add a slide before or after current slide.

- **Move to slide**

You can move to previous or next slide.

- **Delete slide**

You can delete current slides.



Messages [Menu 1]

- **Set slide format**

- **Set timer**

- You can set timer for slide, text, picture and sound.

- **Swap text and picture**

- You can switch the position of picture and text of the message.

- **Remove media**

- You can remove pictures or sounds in the slide. This option can be shown only when any media exists.

- **Add T9 dictionary**

- You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

- Select a T9 input mode.

- **Exit**

- You can back to the Message menu.



Note

- If you select the picture (15K) on writing multimedia message, loading duration will take around 15 seconds at least. Furthermore, you can't activate any key during loading time. After 15 seconds, it is available to write multimedia message.



How to Use T9


T9 allows you to input text quickly.

In T9, you only need to press the key with the corresponding letter once. This is based on a built-in dictionary to which you can also add new words.

• Writing words by using T9.

1. Start writing a word by using the keys $\boxed{2 \text{ abc}}$ to $\boxed{9 \text{ mnop}}$. Press each key only once for one letter.

To write for instance 'Girl', press $\boxed{4 \text{ ghil}}$, $\boxed{4 \text{ ghil}}$, $\boxed{7 \text{ prst}}$, $\boxed{5 \text{ jkl}}$. The characters that you enter appear blocked.

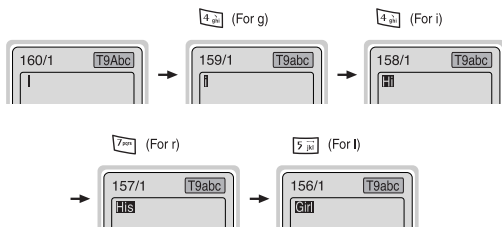

The word changes after each keystroke. Therefore you shouldn't pay too much attention to how the word appears on the display until you have pressed all the appropriate keys.

To delete a character to the left, press $\boxed{\text{c}}$.

To insert several numbers, hold $\boxed{\#*}$ down and key in the numbers.

If you hold $\boxed{\#*}$ down, you can change the type of language. (You can also use options.)

Also, the phone supports three modes: **Predictive** (T9Abc, T9ABC, T9abc), **Multitap** (ABC, abc), **Numeric** (123). If you want to change a mode, press $\boxed{\#*}$ key.



Messages [Menu 1]

Alternatively : Press key and select insert symbols. Select the desired character and press **select**.


2. When you have finished writing a word, check whether the word is correct.

If the word is correct : Press and write the next word.

If the word is not correct : Search by , (**Previous** and **Next word**).

Alternatively : If there is no word you want you can add your own word.

Press [Options] in the Predictive edit mode. Select Add T9 dictionary Menu. You can see the following.

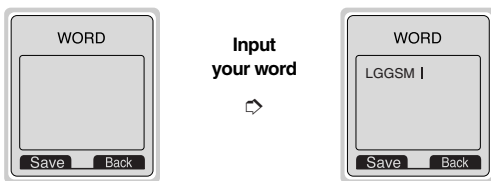

3. To insert a punctuation mark, press repeatedly until the desired mark appears.

T9 languages

- You can select T9 Languages by selecting Menu. In T9 mode, you can also select T9 Off menu. (Default is T9 On)








Inbox [Menu 1-3]

You will be alerted when you have received messages. They will be stored in Inbox.

In Inbox, you can identify each message by icons. For detail, see the icon directive.

Icon directive


- [] Multimedia message
- [] Short message
- [] SIM message
- [] Read
- [] Notified multimedia message

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

*** SIM message**

SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message. For notification setting, see [Menu 1-8-2] for detail.

To read a message, select one of the messages by pressing .

Reply

You can reply to the sender.



Messages [Menu 1]

Forward

You can forward the selected message to another party.

Return call

You can call back to the sender.

Delete

You can delete the current message.

Extract

You can extract picture, sound and text. They will be saved in My folder or Phonebook.

View information

You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

Replay (applicable to Multimedia message only)

You can replay multimedia messages.

* Receive (In the case of notification message)

If **Multimedia message** is set to **Auto download off**, you can get only Notification. To receive a message, you need to select [Receive].




Outbox [Menu 1-4]

You can see sent and unsent messages here. For sent message, you can see the delivery status.

The browsing is same as that for the inbox message.



Icon directive

- [] Sent
- [] Unsent
- [] Delivery confirmed

* When you already sent the message:

Forward

You can forward the current message to other recipients.

Delete

You can delete the current message.

View information

You can view information about outbox messages; Recipient's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

* When you didn't send the message:

Edit

You can edit the message.

Send

You can send the message.

Delete

You can delete the current message.

View information

You can view information about outbox messages.



Messages [Menu 1]


Voice mail [Menu 1-5]

Listen to voice mail [Menu 1-5-1]

You can listen to voice mail.

Voice mail centre [Menu 1-5-2]

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

- **Home**

You can listen to voice mails by selecting **Home**.

- **Roaming**

Even when you are in abroad, you can listen to voice mails if roaming service is supported.

Info service [Menu 1-6]

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;



Read [Menu 1-6-1]

1. When you have received an info service message and select **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling (←, →) or [Next].
2. The message will be shown until another message is reached.

Receive [Menu 1-6-2]

• Yes

If you select this menu, your phone will receive Info service messages.

• No

If you select this menu, your phone will not receive Info service messages any more.

Alert [Menu 1-6-3]

• Yes

Your phone will beep when you have received Info service message numbers.

• No

Your phone will not beep even though you have received info service messages.

Languages [Menu 1-6-4]

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.




Messages [Menu 1]

Topics (Dependent to network and subscription) [Menu 1-6-5]

- **Add new**

You can add Info service message numbers in the Phone memory with its nickname.

- **View list**

You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.

- **Active list**

You can select Info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates [Menu 1-7]

Text [Menu 1-7-1]

You have 11 text templates. You can change the predefined templates into your favorite ones or fill the <empty>s.

Multimedia [Menu 1-7-2]

You can use the following options.

Edit : You can edit multimedia templates.

Add new : Allows you to add new multimedia templates.

Write message: You can write multimedia messages using multimedia templates.

Delete : You can delete multimedia templates.



Business card [Menu1-7-3]

You can make your business card. Key in Name, Phone number, Fax number and Email.

Settings [Menu 1-8]

Short message [Menu 1-8-1]

- **Message types**

Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If you set to **Yes**, you can check whether your message is sent successfully.

- **Reply via same service centre**

When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- **SMS centre**

If you want to send the text message, you can receive the address of SMS centre through this menu.



Messages [Menu 1]

Multimedia message [Menu 1-8-2]

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If it is set to **Yes** in this menu, you can check whether your message is sent successfully.

- **Auto download**

If you select **On**, you receive multimedia messages automatically. If you select **Off**, you receive only notification message in the inbox and then you can check this notification.

- **Network settings**

If you select multimedia message server, you can set URL for multimedia message server.

- **Permitted message types**

Personal : Personal message.

Advertisements : Commercial message.

Information : Necessary information.

Memory status [Menu 1-8-3]

You can check free space and memory usage of each repository, SIM memory. You can go to each repository menu.



Missed calls [Menu 2-1]

This menu shows recently missed numbers. You can call these numbers, save and view the date and the time.

Received calls [Menu 2-2]

This menu shows recently received numbers. You can call these numbers, save and view the date and the time.

Dialled calls [Menu 2-3]

This menu shows the latest dialled numbers up to 20.

Delete recent calls [Menu 2-4]

You can delete recent calls of **Missed calls**, **Received calls**, **Dialled calls** or **All calls**.

Call charges [Menu 2-5]

Within these submenus, you can view the duration and the call cost of your calls.



Call register [Menu 2]

Call duration [Menu 2-5-1]

This function allows you to view the duration of your Last Call, All Calls, Received calls and Dialed calls in hours, minutes and seconds. You can also reset the call timers.

1. Press [Menu] in standby mode.
2. Press for direct access or use (and) to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call duration** and Press [Select].

The following 5 submenus: **Last call**, **All calls**, **Received calls**, **Dialed calls** and **Reset all**.

Call costs [Menu 2-5-2]

This function allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need the PIN2 code.

1. Press [Menu] in standby mode.
2. Press for direct access or use (and) to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call costs** and Press [Select].

The following 4 submenus: **Last call**, **All calls**, **Remaining** and **Reset all**.

Note



- The actual cost invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, tax, and etc.



Settings [Menu 2-5-3] [SIM Dependent]

• Set tariff

You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

If you want to input €, £, \$ symbol, clear all currency strings and then press  key. If you want to change symbol, press  key again.

Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

• Set credit

This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

• Auto display

This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.



Call register [Menu 2]

GPRS information [Menu 2-6]

You can check the amount of data transferred over the network through GPRS. In addition, you can view how much time you are online.

Call duration [Menu 2-6-1]






You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

Data volumes [Menu 2-6-2]

You can check the **Sent**, **Received** or **All data volumes** and reset all.



In this menu, you can adjust and customize the phone tones for different events and environments.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use  and .
3. You can also enter this menu directly by pressing  key in standby mode.
4. When you press side key for a long time with closing the flip, you can use Profile menu.

Vibrate only [Menu 3-1]

You can adjust the profile as **Vibrate only** if you need vibration mode. In the mode, all kinds of alert are Vibrate or Silent.

Quiet [Menu 3-2]

You can adjust the profile as **Quiet** if you are in quiet place.

General [Menu 3-3]

You can adjust the profile as **General**.

Loud [Menu 3-4]

You can adjust the profile as **Loud** if you are in a noisy environment.

Headset [Menu 3-5]

You can adjust the profile as **Headset** when you put on a headset.

Car [Menu 3-6]

You can adjust the profile as **Car** when you activate Handsfree kit.



Profiles [Menu 3]

Note

- Headset and Car profiles can be activated only when Handsfree kit or Ear microphone put on the handset. However, their properties can be personalised.

Activate [Menu 3-x-1]

Activates the selected Profile.

Personalise [Menu 3-x-2]

Each has the submenus as shown below except for **Vibrate only**.

Call alert type

Allows to select alert type such as Ring, Vibrate, etc. for the incoming for adjusting environment.

Ring tone

Allows to set the ring tone for adjusting environment.

Ring volume

Allows to set the ring volume for adjusting environment. The volume of Power on / off sound and all the alert sounds set according to **Ring volume**.

Message alert type

Allows to alert when receiving a message for adjusting environment.

Message tone

Allows to select the alert tone for message reception.

Keypad volume

Allows to set the keypad volume for adjusting environment.



Keypad tone

Allows to select the keypad tone for adjusting environment.

Flip tone

Allows to set the flip tone for adjusting environment.

Effect sound volume

Allows to set the effect sound volume for adjusting environment.

Power on/off volume

Allows to set the power on/off volume for adjusting environment

Auto answer

This function will be activated only when your phone is connected to the headset or handsfree kit.

- **Off** : The phone will not answer automatically.
- **After 5 secs** : After 5 seconds, the phone will answer automatically.
- **After 10 secs** : After 10 seconds, the phone will answer automatically.

Rename [Menu 3-x-3]

You can change the default profile name except of Vibrate only, Headset, and Car menus.

Note

- If you set the Handsfree kit to the phone, you can't use the vibrate mode related with Call alert type or Message alert menu. In car menu, the following submenus are available;
 - **Call alert type** : Ring, Silent
 - **Message alert type** : Ring once, Ring periodically, Silent



Camera [Menu 4]

With the camera you can take pictures of people and events while on the move.

Take picture [Menu 4-1]

1. Select **Camera**, and then press . If you want to reach this menu directly, press for a long time.
2. Focus on the subject to capture the image, and then press or .
3. If you want to save it, press or .

Reference!







- **Settings window**

You can control the image size, flash, brightness, colour, rotating and zooming by pressing side up key , (or).



- **Resolution** : VGA 640*480, QVGA 320*240, QQVGA 160*120, PB : 48*48.
- **Flash** : On, Off
- **Rotating** : Rotate an image 90 degrees anticlockwise.
- **Image quality** : High, Normal, and Low
- **Zooming** : x1, x2, x4. The default value is x1.
- **Brightness** : -2, -1, Standard, +1, +2.
- **Colour** : True colour, Sepia, Black/ White.



Activating a key

-  : Move the item which you set.
-  : Take and save a picture.
-  : Go back to the previous menu or exit from camera mode.
-  : In application setting, you can change the default value.
-  : Move the item which you set.
-  : Take and save a picture




Take in modes [Menu 4-2]

You can take a picture on the various of backgrounds. Furthermore, you can select a frame by pressing  ,  .

Reference!

- In this mode, you can't change the settings of resolution.

Take continuously [Menu 4-3]

You can take the maximum of 9 pictures subsequently at the same time. After taking a picture, you can view it by pressing  ,  . You can also save it by pressing  .

Reference!

- If you set 640x480 in resolution, you can take only 3 pictures. In case of 320x240, it is available to 6 pictures.



Camera [Menu 4]

My album [Menu 4-4]

You can view and send a picture. In addition, you can set the window as a background.

All pictures [Menu 4-4-1]

You can view the maximum of 9 pictures in order.

General pictures [Menu 4-4-2]

You can view all pictures except of frame and phone book ones.

Mode pictures [Menu 4-4-3]

You can view all frame pictures.

Phonebook pictures [Menu 4-4-4]

You can view all phonebook pictures.

• Option

- **Multi view** : You can view the maximum of 9 thumbnails in a screen.
- **Write multimedia message** : You can send a picture thru MMS.
- **Set as wallpaper** : You can set a picture as a wallpaper.
- **Delete** : You can delete a picture.
- **Edit title** : You can edit the title of picture.



- **How to set up phonebook picture**

1. In camera menu, set the resolution to 48 * 48, take a picture and save it.
2. Go to phonebook menu, select a phonebook entry and then edit.
3. Scroll down to the picture and select menu (next to character menu)
- 4 Select available phonebook pictures by pressing left/right keys. (If you don't have any phonebook picture, you can't assign it to the entry.)
5. Select a picture and save it.

Settings [Menu 4-5]

Memory status [Menu 4-5-1]

You can check the capacity of total, used, and free memory.



Clear album [Menu 4-5-2]

You can delete all pictures which saved in a memory.





Settings [Menu 5]

You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Settings**.

Alarm clock [Menu 5-1]

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon~Fri, Mon~Sat, Everyday**.
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].
5. If you set **Alarm clock** to **Power off alarm** the alarm goes off at a specified time even though the phone is switched off.

Date & Time [Menu 5-2]

You can set functions relating to the date and time.

Set date [Menu 5-2-1]

You can enter the current date.

Date format [Menu 5-2-2]

You can set the Date format such as **DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD**. (D: Day / M: Month / Y: Year)

Set time [Menu 5-2-3]

You can enter the current time.

Time format [Menu 5-2-4]

Your can set the time format between 24-hour and 12-hour.



Phone settings [Menu 5-3]

You can set functions relating to the phone.

Display settings [Menu 5-3-1]

- **Wallpaper**

You can select the background pictures in standby mode.

- **Default**

You can select a picture or an animation of wallpaper by pressing [* (or) *].

- **My folder**

You can select a picture or an animation as wallpaper.

- **Incoming calls**

You can set the animation as getting a call.

- **Outgoing calls**

You can set the animation as making a call.

- **Greeting note**

If you select **On**, you can edit the text which is displayed in standby mode.

- **Backlight**

You can set the light-up duration of the internal display.

- **LCD contrast**

You can set the brightness of LCD by pressing [* (,) *].

- **Information window**

You can preview the current state of the selected menu before open the menu. The state is shown at bottom of the display.



Settings [Menu 5]

- **Menu colour**

You can select the preferred menu colour among various combination.


Sub LCD [Menu 5-3-2]

- **My display** : You can set the animation when you press side key.
- **Show time** : You can set the duration when you scroll sub LCD.
- **Brightness** : You can set the brightness when you scroll sub LCD.
- **Font colour** : You can set the font colour which is displayed on sub LCD.

Language [Menu 5-3-3]

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Call settings [Menu 5-4]

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

Call divert [Menu 5-4-1]

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- **All voice calls**

Diverts voice calls unconditionally.

- **If busy**

Diverts voice calls when the phone is in use.

- **If no reply**

Diverts voice calls which you do not answer.



- **If out of reach**

Diverts voice calls when the phone is switched off or out of coverage.

- **All data calls**

Diverts to a number with a PC connection unconditionally.

- **All fax calls**

Diverts to a number with a fax connection unconditionally.

- **Cancel all**

Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

- **Activate**

Activate the corresponding service.

- To voice mail centre**

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

- To other number**

Inputs the number for diverting.

- To favourite number**

You can check recent 5 diverted numbers.

- **Cancel**

Deactivate the corresponding service.

- **View status**

View the status of the corresponding service.




Settings [Menu 5]

Answer mode [Menu 5-4-2]


- **Flip open**

If you select this menu, you can receive an incoming call by only opening the flip.

- **Press any key**

If you select this menu, you can receive a call by pressing any key except  [End] key.

- **Send only**

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number [Menu 5-4-3] (network and subscription dependent)

- **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- **Off**

Your phone number will not be shown.

- **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.



Call waiting [Menu 5-4-4] (network dependent)

- **Activate**

If you select Activate, you can accept a waiting (receiving) call.

- **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status**


Shows the status of Call waiting.

Minute minder [Menu 5-4-5]

If you select **On**, you can check the call duration by deep sound every minute during a call.

Voice dial [Menu 5-4-6]

- **Automatic** : You can enter the voice dial mode whenever you open the flip.

- **Manual** : You can enter the voice dial mode by holding down  key.

Auto redial [Menu 5-4-7]

- **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off**

Your phone will not make any attempts to redial when the original call has not connected.



Settings [Menu 5]

Select line [Menu 5-4-8]

This function is only used if Two Line Service is supported by the Service Provider. If this function is supported by your service provider, the following menu will be displayed.

- Line 1
- Line 2

Closed User Group [Menu 5-4-9] (network dependent)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

Default : Activate the default group agreed on with the network operator.

Set : Setting the selected CUG Index.

Edit : Editing the CUG name and CUG Index.

Delete : Deleting the selected CUG.


Delete all : Deleting All CUG.



Security settings [Menu 5-5]

PIN code request [Menu 5-5-1]

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [Select].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock [Menu 5-5-2]

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.



Settings [Menu 5]

Call barring [Menu 5-5-3]

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing**

The barring service for all outgoing calls.

- **Outgoing international**

The barring service for all outgoing international calls.

- **Outgoing international except home country**

The barring service for all international outgoing calls except home network.

- **All incoming**

The barring service for all incoming calls

- **Incoming when abroad**

The barring service for all incoming calls when roaming

- **Cancel all**

You can cancel all barring services.

- **Change password**

You can change the password for Call Barring Service.

Each call barring menu has following submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.



- **View status**

View the status whether the calls are barred or not.

Fixed dial number [Menu 5-5-4] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **Activate**

You can restrict your outgoing calls to selected phone numbers.

- **Cancel**

You can cancel fixed dialling function.


- **Number list**

You can view the number list saved as Fixed dial number.

Change codes [Menu 5-5-5]

PIN is an abbreviation of Personal Identification Number used to prevent use by only unauthorized person.

You can change the access codes: **PIN code**, **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Network settings [Menu 5-6]

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.



Settings [Menu 5]

Automatic [Menu 5-6-1]

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.

Manual [Menu 5-6-2]

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

Preferred [Menu 5-6-3]

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone’s predefined list of known networks.

Reset settings [Menu 5-7]





You can initialize all factory defaults. You need Security code to activate this function.



Scheduler [Menu 6-1]

When you enter this menu a Calendar will show up. On top of the screen there are sections for date. Also on bottom of the screen there are sections for icons (schedule, memo). Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see under bar on the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description	Key	Description
	Yearly		Weekly
	Monthly		Daily

Note

- Your phone should be switched on to use this function.



Organiser [Menu 6]



Add new [Menu 6-1-1]

You can edit maximum 39 characters (21 characters in Chinese) and take up to 20 notes.





- **Schedule**

Input the subject, the schedule time, the repeat, the alarm by pressing allowed keys.




- **Memo**

1. Select **Add new** by pressing  [Select].
2. Press **Memo**.
3. Input the memo and then press  [OK].

View [Menu 6-1-2]

Shows the note for the chosen day. Use  ,  to browse through the note lists. If you set alarm for the note, Alarm watch is displayed. At that time, if you press  [Select], you can see the note in detail. Press  [Options] to delete, edit the note you selected.

View all [Menu 6-1-3]

Shows the notes that are set for all days. Use  ,  to browse through the note lists. You can use the same menu as “**View**” by pressing  [Options].

Delete past [Menu 6-1-4]



You can delete the past schedule that has been already notified you.

Delete all [Menu 6-1-5]





You can delete for the all note(s).



Phonebook [Menu 6-2]

1. To use **Phonebook**, press  [Names] in standby mode.
2. To use **Phonebook**, press  [Menu] in standby mode and select **Organiser**.

Search [Menu 6-2-1] (Calling from phonebook)

1. In standby mode, press  [Names].
2. **Search** by pressing  [Select].
3. Enter the name whose phone numbers or e-mail address you want to search or Select 'List' to view phonebook.
4. Instant searching is available by inputting the initial letter of the name or number you want to search.
5. If you want to edit, delete, copy an entry, or to add the voice to one, select  [Options]. The following menu will be displayed.
 - **Edit** : You can edit the name, number, E-mail and fax by pressing  [OK].
 - **Write messages** : After you have found the number you want, you can send a message to the selected number.
 - **Copy** : You can copy an entry from SIM to phone or from phone to SIM.
 - **Voice** : You can add the voice to the entry or change the voice tag.
 - **Main number** : You can select the one out of mobile, home, office that you often use. The main number will be displayed first, if you set this.
 - **Delete** : You can delete an entry.



Organiser [Menu 6]

Add new [Menu 6-2-2]

You can add phonebook entry by using this function.

Phone memory capacity is 200 entries. SIM card memory capacity depends on the cellular service provider.

You can also save 20 characters of name in The Phone memory, and save characters in the SIM card. The number of character is SIM dependent feature.

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to highlight **Add new**, and press [Select].
3. Select the memory you want to save: **SIM** or **Phone**. If set to Phone, you need to select which number you want as Main number.
 - a. Press [OK] to input a name.
 - b. Press [OK], then you can input a number.
 - c. Press [OK].
 - d. You can set a group for the entry by pressing (,):
 - e. You can set a character and a picture for the entry by pressing , , (,):
 - f. If you want to add the voice, press [Yes].

Note

- When you save text and picture in a phone book at the same time, you can view a picture on any condition.

You should speak words within 2 seconds, and the phone asks you to speak it again to ensure the accuracy of voice recognition. After voice recognition has finished, Voice is attached successfully.



Note

- The voice can only be attached to the main number which you set. For example, if you change the main number, voice will be automatically attached to the changed number. This means that you cannot attach voice to mobile, office, home number simultaneously.
- You can add voice tag to phone number in SIM card. The voice tag can be erased if you remove or change SIM card.

Caller Groups [Menu 6-2-3]

You can list up to 20 members per one group. There are 7 groups you can make lists to.

1. In standby mode, press [Names].
2. Scroll to **Caller groups** item then press [Select], and every Group list will be displayed.
3. Select Group name you want by pressing [Select].

- **Member list**

Shows the group members you have selected.

- **Group ring tone**

Allows you to specify ring tone for the group members' call.

- **Group icon**

Allows you to select the icon dependent on Group.

- **Add member**

You can add group members. Each group member shouldn't be exceeded 20.



Organiser [Menu 6]

- **Remove member**

You can remove the member from the Group member list. But the name and the number still remain in phonebook.

- **Rename**

You can change a group name.

Speed dials [Menu 6-2-4]

You can assign any of the keys, to with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to **Speed dial**, then press [Select].
3. If you want to add Speed dial, select **(Empty)**. Then, you can search the name in phonebook.
4. Select allocated a name by speed dial, and choose **Change** or **Delete** to edit the name.

- **Change**

You can allocate a new phone number to the dial key.

- **Delete**

You can remove the allocated phone number from the dial key.

Voice list [Menu 6-2-5]

You can see all phone numbers which contain voice. After selecting phone number by using and and press [Options], you can see the following submenus.

- **Play** : You can play voice which is attached to phone number.
- **Change** : You can change voice.
- **Delete** : You can delete voice.
- **Call** : You can call by selecting this menu.



Settings [Menu 6-2-6]

1. Press [Names] in standby mode.

2. Scroll to **Settings**, then press [Select].

• **Set memory**

Scroll to highlight **Set memory**, then press [Select].

- If you select **Variable**, when adding entry, the phone will ask where to store.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.

• **Search by**

Scroll to highlight **Search by**, then press [Select].

- If you select **Variable**, the phone will ask how to search.
- If you select **Name** or **Number**, the phone will search an entry by Name or Number.

• **View options**

Scroll to highlight **View options**, then press [Select]

- **Name only** : Set the phonebook list with displaying only name.
- **With pictures** : Set the phonebook list with the information of character and picture.



Organiser [Menu 6]

Copy all [Menu 6-2-7]

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing [Names] in standby mode.
2. Scroll to **Copy all**, then press [Select] to enter this menu.
 - **SIM to Phone** : You can copy the entry from SIM Card to Phone memory.
 - **Phone to SIM** : You can copy the entry from Phone memory to SIM Card.
3. You can see the following submenus.
 - **Keep original** : When copying, Original Dial Number is kept.
 - **Delete original** : When copying, Original Dial Number will be erased.

Delete all [Menu 6-2-8]

You can delete all entries in SIM, Phone, and Voice. This function requires Security code except for voice.

1. Press [Names] in standby mode and select Delete all, press [Select].
2. Then select a memory to erase.
3. Enter security code and Press [OK] or [Back].



Information [Menu 6-2-9]

• Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing [Names] in standby mode and select **Information**.
2. Scroll to **Service dial number**, then press [Select] to enter.
3. The names of the available services will be shown.
4. Use and to select a service. Press [Send].

• Memory status

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing [Names] in standby mode. Select **Information** by pressing [Select].
2. Scroll to **Memory status**, then press [OK].

• Own number (SIM dependent)

You can check your own number in SIM card.



Fun & Tools [Menu 7]




Games [Menu 7-1]

The phone offers you the games to play with.

Note






- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys. The rest ones are as follows.

[Common Key Function]

-  : Game menu,
-  : Back
-  : Pause or resume a game

Calculator [Menu 7-2]

This contains the standard functions such as $+$, $-$, \times , \div : **Addition**, **Subtraction**, **Multiplication**, and **Division**.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  [Result] to view the result.
5. Press [Reset] or enter numbers to repeat the procedure above.
6. Use  key to erase any numbers or signs.
7. If you press  key, you can input a minus number. In addition, if you press  key, you can input a decimal number.
8. To end **Calculator**, press  [Back].



My folder [Menu 7-3]

Enables you to view the downloaded pictures and sounds. They can be set as Wallpaper or Ring tone. You can view, listen, delete or rename downloaded data.

Pictures [Menu 7-3-1]

Sound [Menu 7-3-2]

The Submenus for each main one

- **Edit title**

You can edit the title for each download contents.

- **Write messages**

You can write Short message/Multimedia message(available depending on type of Media) with attachment pictures or sounds.

- **Set as wallpaper/Set as ring tone**

You can set downloaded sounds or pictures as wallpaper or Ring tone.

- **Delete**

You can delete each downloaded content.

- **Delete all**

You can delete all downloaded contents.



Fun & Tools [Menu 7]

Melody composer [Menu 7-4]

You can compose a ring tone melody which you want. When you enter this function, the tones that you composed before are played. To enter a new or edit an existing tone:

1. Enter the desired notes. ($\boxed{1_{\text{AD}}}$ ~ $\boxed{7_{\text{MN}}}$: CDEFGAB)
2. To adjust the characters of the note, do as follows:
 - **Duration** : $\boxed{8_{\text{SV}}}$ shortens and $\boxed{9_{\text{MV}}}$ lengthens the duration of the note or rest.
 - **Rest** : $\boxed{0_{\text{R}}}$ inserts a rest of the same duration as the previous note.
 - **Octave** : $\boxed{*_{\text{O}}}$ sets the octave for new notes.
 - **Sharp note** : $\boxed{\#_{\text{S}}}$ makes the note sharp.

Unit converter [Menu 7-5]

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length, Area, Weight, and Volume.**

1. You can select one of four unit types by pressing $\boxed{\text{[Unit]}}$ key.
2. Select the standard value by using $\boxed{(\text{=}, \text{,}, \text{>})}$.
3. Select the unit you want to convert by pressing $\boxed{\text{[Unit]}}$ and $\boxed{\text{[Unit]}}$.
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing $\boxed{\#_{\text{S}}}$.

World time [Menu 7-6]

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing $\boxed{(\text{=}, \text{,}, \text{>})}$ key.
2. You can set the current time to the city time you select by pressing $\boxed{\text{[Set]}}$.



Voice recorder [Menu 7-7]

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

Record [Menu 7-7-1]

1. You can record voice memo in Voice recorder menu and also holding down **C** in the standby mode.
2. Once recording is started, the message Recording and the remaining time is displayed.
3. If you want to finish recording, press **S** [Save].
4. Key in Voice memo title, press **S** [OK].

View list [Menu 7-7-2]

The phone shows voice memo list. You can Playback and Delete the recorded voice memo.

Activate IrDA [Menu 7-8]

If you activate this function, you can use PC-Sync by infrared. You can't use serial port and infrared function at the same time.

PC Sync

PC Sync is a program for data exchange between PC and the phone by data cable. For more information, you can use the guide of PC Sync Help file in CD.





Internet [Menu 8]

The phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather reports, and flight times.

Home [Menu 8-1]

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by Service Provider if you don't make in activated profile.

Bookmarks [Menu 8-2]

Press  [Select] to access available options, or press  [Back] to exit.

- **Connect** : Connect to the selected bookmark.
- **Add new** : Add a new bookmark manually.
- **Edit** : Edit the title and the address of the selected bookmark.
- **Delete** : Delete the selected bookmark from the bookmark list.

Push messages [Menu 8-3]

Inbox [Menu 8-3-1]

You can read or delete push messages.


- **Information** : Show the information of received push messages.
- **Load** : You can connect to a specific site using the information in the received push message.
- **Delete** : Delete the selected push message.

Receive [Menu 8-3-2]

You can set the option whether you will receive the message or not.



Profiles [Menu 8-4]

You can make up to 10 profiles and activate only one out of them. Scroll to the desired profile and press  to access available options.

- **Activate**

You can activate the profile you want.

- **Settings**

You can edit and change WAP settings of the selected profile.

- **Homepage**

This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type “http://” at the front of each URL as the WAP Browser will automatically add it.

- **Bearer**

You can set the bearer data service.

- **Data**

- **GPRS**

- **Data settings**

Appears only if you select Data settings as a Bearer\service.

IP address : Enter the IP address of the WAP gateway you want.

Dial number : Enter the telephone number to dial to access your WAP gateway.

User ID : The users identity for your dial-up server (and NOT the WAP gateway).

Password : The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type : Select the type of data call: Analogue or Digital (ISDN).



Internet [Menu 8]

Call speed : The speed of your data connection;9600 or 14400.

Linger time : You need to enter timeout period.After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- GPRS settings

The service settings are only available when GPRS is chosen as a bearer service.

IP address : Input the IP address of the WAP gateway you access.

APN : Input the APN of the GPRS.

User ID : The users identify for your APN server.

Password : The password required by your APN server.

- Display image

You can select whether images on WAP cards are displayed or not.

- Connection type

The options for connection type are Temporary or Continuous and depend on the gateway you are using.

Continuous

A confirmed delivery mechanism but generates more network traffic.

Temporary

A non-confirmed (connectionless) service.



- **Secure settings**

According to the used gateway port, you can choose this option as **On** or **Off**.

- **Rename**

Edit the Profile Name.

- **Delete**

Delete the Profile.

- **Add new**

You can add a new profile manually.

- **Email server**

- **Connect**

Connect to the E-mail server that you configured.

- **Edit address**

Edit the E-mail address.



Internet [Menu 8]

[Go to URL \[Menu 8-5\]](#)

You can directly connect to the site you want. You need to enter a specific URL.

[Cache settings \[Menu 8-6\]](#)

You can remove the contents of Cache memory or change the Cache mode.

[Clear cache \[Menu 8-6-1\]](#)

The contents of Cache memory will be removed.

[Check cache \[Menu 8-6-2\]](#)

You can set the option whether you will check the cache memory or not.

[Security certification \[Menu 8-7\]](#)

A list of the available certificates is shown.

[Reset profiles \[Menu 8-8\]](#)

You can reset profiles to return to original settings.

[Browser version \[Menu 8-9\]](#)

The WAP Browser version is displayed.



If you are on line, you can view the following menus.

■ Home

Refer to [Menu 8-1].

■ Reload

Reloads the current page.

■ Bookmarks

See [Menu 8-2].

■ Save as bookmark

You can save a site as bookmark.

■ Messages

During Wap connection, you can see the Short messages.

■ Push messages

See [Menu 8-3].

■ Go to URL

You can move to the site you want. In this menu, you can also edit the site address.

■ Go to email server

You can move to the E-mail server that you configured.

■ Set as email server

You can set the address of current site as E-mail server.

■ Clear cache

The contents of cache memory will be removed.


■ Save Images

You can save the image which is provided by the WAP.



Java [Menu 9]

Applications [Menu 9-1]

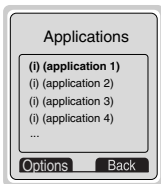

Java Menu Options

Scroll to an application and select Options.

- 1. Open** : Launches the selected MIDlet.
- 2. Delete** : Deletes the selected MIDlet.
- 3. Update** : Accesses the server and updates the selected MIDlet.
- 4. Information** : Displays information about the selected MIDlet.
- 5. Phone settings** : Allows you to set backlight and sound for java game.

Download [Menu 9-2]

You can edit and set MIDlet server address. Download MIDlets using WAP Browser and store them in the phone. You can also view the list of MIDlets stored on the Applications screen.

Memory status [Menu 9-3]

Shows the size of memory available for game and application installations. You can also see the whole memory status of Handset.



JAVA™ is a trademark of Sun Microsystems, Inc.



You can set up to 10 menus which you have used often in Favorites. You can connect this menu directly by pressing hot key .

If you want to register the menu in favorites, select <Empty> on a list. If the menu is already registered, the options are displayed as follows:

- **Select** : Activate the registered menu.
- **Change** : Change the menu.
- **Delete** : Delete the registered menu.
- **Delete all** : Delete all menus which are registered in Favorites.
- **Information**: View the information of registered menu.



Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.



Standard Battery



Portable Handsfree

This connects to your phone, allowing handsfree operation.



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Neckstrap



Data cable/CD

You can connect your phone to PC to exchange the data between them.

Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.



When using this unit, basic safety precautions as below should be always followed.

- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.



Care and Maintenance

□ Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



General

Product name : G7100

System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



LG Electronics

This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

Mr. Jin Seog, Kim
 LG Amsterdam Branch Office
 Capornilaan 6, 1119 NR Schiphol-rijik,
 The Netherlands
 (Tel.) +31-20-655 7774

CE 0700

Mr. Ji Jong, Jeon
 LG Electronics Inc. GSM Division
 Emerald BD, 1042 Hogye-Dong, Dongan-Gu
 Anyang-city, Kyuonki-Do
 431-080, Korea





Memo
