



# Příručka uživatele

## LG KU380



# KU380 Příručka uživatele

Tento dokument představuje uživatelskou příručku k mobilnímu telefonu LG KU380. Společnost LG Electronics si vyhrazuje veškerá práva k tomuto dokumentu. Je zakázáno tento dokument kopírovat, pozměňovat a distribuovat bez výslovného souhlasu společnosti LG Electronics.



## Likvidace starých spotřebičů

1. Pokud je u výrobku uveden symbol pojízdného kontejneru v přeškrtnutém poli, znamená to, že na výrobek vztahuje směrnice Evropské unie č. 2002/96/ES.
2. Všechny elektrické a elektronické výrobky likvidujte odděleně od běžného komunálního odpadu prostřednictvím sběrných zařízení zřízených za tímto účelem vládou nebo místní samosprávou.
3. Správný způsob likvidace starého elektrického spotřebiče pomáhá zamezit možným negativním vlivům na životní prostředí a zdraví.
4. Bližší informace o likvidaci starého spotřebiče získáte u místní samosprávy, ve sběrném zařízení nebo v obchodě, ve kterém jste výrobek zakoupili.



# Obsah

<b>Úvod</b>	<b>6</b>	<b>Přehled funkcí menu</b>	<b>33</b>
<b>Pro vaši bezpečnost</b>	<b>7</b>	<b>Zábava</b>	<b>35</b>
<b>Pokyny k bezpečnému a efektivnímu používání</b>	<b>8</b>	Hry a aplikace	
<b>Funkce telefonu KU380</b>	<b>14</b>	TV	
Součásti telefonu		<b>Vodafone live!</b>	<b>36</b>
<b>První kroky</b>	<b>18</b>	Domovská stránka	
Instalace USIM karty a baterie do přístroje		Zadání URL	
Nabíjení baterie	20	Záložky	
Odpojení nabíječky	21	<b>Uložené stránky</b>	<b>37</b>
Používání paměťové karty microSD		Historie	
Formátování paměťové karty	22	Nastavení prohlížeče	
Zapnutí a vypnutí přístroje		Profily	
Přístupové kódy	23	Nastavení vzhledu	
Zobrazení informací	24	Cache	
<b>Základní funkce</b>	<b>27</b>	Cookies	
Volání a přijímání hovorů		Zabezpečení	
Zadávání textu	30	<b>Původní nastavení</b>	<b>38</b>
Změna režimu zadávání textu		Hledat	
Použití režimu T9	31	TV	
Použití režimu ABC		Hudba	
Práce v režimu 123 (číselný)	32	Hry	
Práce v režimu symbolů		Zvonení	
		Obrázky	
		Zprávy	
		Sport	

<b>Hudba</b>	<b>39</b>	MMS	53
Naposledy přehrané		Emotikony	
Moje hudba		Nastavení zpráv	54
Všechny skladby		SMS	
Seznamy skladeb		MMS	
Interpreti		Email	56
Alba		Hlasová schránka	60
Žánry		Servisní zpráva	
Promíchat stopy		Info služba	61
Hudební obchod		<b>Moje soubory</b>	<b>62</b>
<b>Fotoaparát</b>	<b>40</b>	Obrázky	
Fotoaparát		Zvuky	63
Videokamera	43	Video	64
<b>Zprávy</b>	<b>46</b>	Hry a aplikace	66
Vytvořit novou		Ostatní	
Zpráva		Externí paměť	
Email	47	<b>Organizér</b>	<b>67</b>
Hlasová zpráva	48	Rychlé menu	
Přijaté		Budík	
Email	50	Kalendář	68
Koncepty	51	Úkoly	69
K odeslání	52	Hry a aplikace	
Odeslané		Poznámky	70
Šablony	53	Záznam hlasu	
SMS		Soukromá poznámka	71

# Obsah

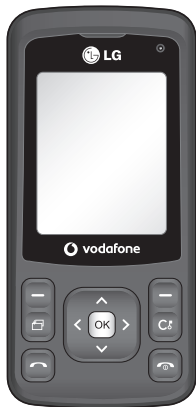
Kalkulačka	72	<b>Výpis volání</b>	<b>77</b>
Převodník jednotek		Všechny hovory	
Světový čas		Volaná čísla	
<b>Nastavení organizéru</b>	<b>73</b>	Přijaté hovory	
Nastavení kalendáře		Zmeškané hovory	
Zalohovat kalendář a ukol		<b>USIM Tool Kit</b>	<b>78</b>
Obnovit kalendář a ukol		<b>Videohovor</b>	<b>79</b>
Informace o paměti		Během videohovoru	
<b>Kontakty</b>	<b>74</b>	Příchozí hovor videotelefonem	
Přidat nový		<b>Nastavení</b>	<b>81</b>
Seznam kontaktů		Profily	
Skupiny		Telefon	82
Rychlé volby		Datum a čas	
Čísla volání asistenční služby	75	Jazyk	83
Vlastní číslo		Automatické zamknutí kláves	
Moje vizitka		Letový režim	
<b>Nastavení kontaktu</b>		Zabezpečení	
Zobrazení kontaktů		Úspora energie	86
Kopírovat		Výběr paměti	
Přesunout		Volba paměti	
Zalohovat kontakty	76	Informace o telefonu	
Obnovit kontakty		Původní nastavení	
Smazat kontakty		<b>Displeje</b>	
Informace o paměti			

Hlavní displej	87
Styl menu	
Písmo	
Podsvícení	
Téma	
Uvítací zpráva	
<b>Hovory</b>	<b>88</b>
Doba volání	
Blokování hovoru	
Pevná volba čísel	90
Objem dat	
Cena hovorů	
Přesměrování hovorů	91
Čekající hovor	93
Hlasová schránka	94
Videohovory	
Společné nastavení	
<b>Nastavení zprav</b>	<b>96</b>
<b>Nastavení kontaktu</b>	
<b>Připojení</b>	
Bluetooth	
Synchronizace	99
Režim připojení USB	101
Síť	102
Přístupové body	103

Nastavení prohlížeče	104
Nastavení streamingu	105
<b>Java</b>	
<b>Příslušenství</b>	<b>107</b>
<b>Technické údaje</b>	<b>108</b>

# Úvod

V rukou máte špičkový kompaktní mobilní telefon KU380, který dokáže využívat nejnovější technologie v oblasti digitální mobilní komunikace.



Tato příručka uživatele obsahuje důležité informace o použití a obsluze tohoto telefonu. V zájmu dosažení optimálního výkonu a zabránění poškození nebo zneužití telefonu byste si měli všechny informace obsažené příručce pečlivě pročíst. Jakékoli změny nebo modifikace, jež nejsou výslovně v této uživatelské příručce schváleny, by mohly anulovat platnost záruky na toto zařízení.

Používání krytů telefonů s magnetickým zámekem ve spojení s výsuvnými typy telefonů způsobuje problémy, např. ztrátu signálu sítě a vypínání telefonů.

# Pro vaši bezpečnost

Přečtěte si prosím tyto jednoduché pokyny. Jejich nedodržení může být nebezpečné nebo nezákonné. Další podrobné informace naleznete v této příručce.

## UPOZORNĚNÍ!

- V letadle musí být mobilní telefon vždy vypnutý.
- Při řízení nedržte telefon v ruce.
- Nepoužívejte mobilní telefon v blízkosti čerpacích stanic, skladů paliv, chemických výrobních zařízení nebo v prostorech s nebezpečím výbuchu.
- Pro svou bezpečnost používejte POUZE určené ORIGINÁLNÍ baterie a nabíječky.
- Když se telefon nabíjí, nedotýkejte se jej mokřými rukama. Mohlo by dojít k zasažení elektrickým proudem nebo k vážnému poškození telefonu.
- Telefon uchovávejte na bezpečném místě mimo dosah malých dětí. Telefon obsahuje malé součásti, u kterých při uvolnění hrozí riziko udušení.

## VÝSTRAHA!

- Vypněte telefon v každé oblasti, kde to vyžadují zvláštní předpisy. Nepoužívejte například telefon v nemocnicích, protože může působit na citlivé lékařské přístroje.
- V některých mobilních sítích nemusí být nouzové hovory dostupné. Proto byste se pro případ nouzových hovorů neměli spoléhat pouze na svůj mobilní telefon.
- Používejte pouze ORIGINÁLNÍ příslušenství, předejete tak poškození svého telefonu.
- Všechny rádiové vysílače v sobě nesou riziko rušení s elektronikou v bezprostřední blízkosti. Mírné rušení mohou zaznamenat televizory, rádia, počítače atd.
- Baterie likvidujte v souladu s platnými právními předpisy.
- Nerozebírejte telefon ani baterii.

# Pokyny k bezpečnému a efektivnímu používání

Pročtěte si prosím tyto jednoduché pokyny. Nedodržení těchto pokynů může být nebezpečné nebo protiprávní. V této příručce jsou podány další podrobné informace.

## Informace o certifikaci (SAR)

### **TOTO ZAŘÍZENÍ SPLŇUJE MEZINÁRODNÍ SMĚRNICE PRO VYSTAVENÍ OSOB RÁDIOVÝM VLNÁM**

Vaše mobilní zařízení je zároveň rádiovým vysílačem a přijímačem. Bylo navrženo a vyrobeno tak, aby nepřekračovalo omezení kladená na vystavení osob rádiovým vlnám (RF) uvedená v mezinárodních směrnicích (ICNIRP). Tato omezení jsou součástí komplexních směrnic a stanovují povolenou hladinu vystavení veřejnosti radiofrekvenčnímu záření. Tyto směrnice byly sestaveny nezávislými vědeckými organizacemi na základě pravidelného a důkladného vyhodnocování vědeckých studií. Tyto směrnice obsahují dostatečnou rezervu, která slouží k zajištění bezpečnosti všech

osob, bez ohledu na věk a zdravotní stav.

Norma pro vystavení osob vyzařování mobilních zařízení používá jednotku, označovanou jako specifická míra pohlcení (Specific Absorption Rate), neboli SAR. Hranice SAR uvedená v mezinárodních směrnících je 2,0 W/kg\*. Testování SAR se provádí ve standardních provozních polohách se zařízením vysílajícím na nejvyšší výkon ve všech testovaných frekvenčních pásmech. Ačkoliv je hodnota SAR stanovena pro nejvyšší certifikovaný vysílací výkon, skutečná hodnota SAR pro dané zařízení při běžném provozu může být výrazně nižší, než je uvedená maximální hodnota. Důvodem je to, že zařízení pracuje na několika úrovních výkonu tak, aby používalo pouze takový výkon, jaký je potřeba k dosažení sítě. Obecně řečeno, čím blíže se nacházíte k základní stanici, tím nižší je výkon zařízení. Před uvedením na trh musí být předloženo prohlášení o shodě s Evropskou směrnicí R&TTE. Tato směrnice obsahuje základní požadavky na ochranu zdraví

a bezpečnosti uživatelů a dalších osob. Nejvyšší hodnotou SAR naměřenou pro toto zařízení při testování u ucha je 0,929 W/kg.

Toto zařízení splňuje požadavky směrnic týkajících se vyzařování RF energie tehdy, když je používáno v normální provozní poloze u ucha, nebo když se nachází alespoň 1,5 cm od těla. Pokud je zařízení umístěno v obalu, na sponě na opasku nebo v držáku na těle, nesmí takový doplněk obsahovat kovové součásti a měl by být umístěn alespoň 1,5 cm od těla. Za účelem přenášení datových souborů nebo zpráv vyžaduje toto zařízení kvalitní připojení k síti. V některých případech může být přenos datových souborů nebo zpráv pozdržen až do dosažení takového připojení. Zajistěte, aby byly dodrženy výše uvedené hodnoty vzdálenosti zařízení od těla až do doby, kdy bude přenos dokončen. Nejvyšší hodnotou SAR naměřenou pro toto zařízení při testování u těla je 1,46 W/kg.

\* Limitem SAR pro mobilní zařízení používaná veřejností jsou 2,0 wattů/kilogram (W/kg) v průměru na deset gramů tkáně.

Směrnice obsahují dostatečnou rezervu, zajišťující dodatečnou ochranu veřejnosti a eliminující případné odchylky při měření. Hodnoty SAR se mohou lišit podle státních požadavků na měření a podle síťového pásma. Informace o SAR v jiných regionech naleznete v části s informacemi o produktech na stránkách [www.lgmobile.com](http://www.lgmobile.com).

## Péče o přístroj a jeho údržba

### VAROVÁNÍ!

Používejte pouze baterie, nabíječku a příslušenství schválené pro tento konkrétní model telefonu. Použití jiných typů by mohlo vést nejen ke zrušení platnosti homologace nebo záruk, které se na telefon vztahují, ale i k ohrožení zdraví.

- ▶ Přístroj nerozebírejte. V případě nutnosti opravy přístroj odnese kvalifikovanému servisnímu technikovi.
- ▶ Telefon neponechávejte a nepoužívejte v blízkosti elektrických spotřebičů, jako je televizor, radiopřijímač nebo osobní počítač.

# Pokyny k bezpečnému a efektivnímu používání

- ▶ Telefon by měl být v bezpečné vzdálenosti od zdrojů tepla, jako jsou radiátory a vařiče.
- ▶ Nikdy neumísťujte přístroj do mikrovlnné trouby, baterie telefonu by mohla explodovat.
- ▶ Neupusťte přístroj na zem.
- ▶ Přístroj by neměl být vystaven mechanickým vibracím nebo nárazům.
- ▶ Při zabalení do fólie nebo obalu z PVC by mohlo dojít k poškození ochranného nátěru telefonu.
- ▶ K čištění přístroje nepoužívejte agresivní chemické přípravky (jako jsou například rozpouštědla – benzen, ředidlo nebo alkohol). Vzniká riziko požáru.
- ▶ Telefon by neměl být vystaven nadměrnému kouři nebo prachu.
- ▶ Telefon by neměl být umístěn v těsné blízkosti platebních karet a dopravních jízdenek, kde by mohlo dojít k poškození údajů na magnetických prouzcích.
- ▶ Nedotýkejte se displeje ostrými předměty; mohlo by dojít k poškození telefonu.
- ▶ Telefon by neměl přijít do styku s tekutinami a vlhkým prostředím.
- ▶ Příslušenství jako sluchátka nebo headsety používejte opatrně. Ubezpečte se, že jejich kabely nejsou zohýbané a že se zbytečně nedotýkají antény.
- ▶ Před zapnutím přístroje odpojte datový kabel.

## Efektivní používání telefonu

### Abyste si užili optimální výkon s minimální spotřebou energie:

- ▶ Při telefonování se nedotýkejte antény. Budete-li držet anténu, mohlo by dojít nejen ke snížení kvality hovoru, ale také k vyšší spotřebě elektrické energie, což by mohlo zkrátit dobu hovoru i pohotovostního režimu.

## Elektronické přístroje

**Všechny mobilní telefony mohou způsobovat rušení s možným negativním vlivem na normální funkci elektronických přístrojů.**

- ▶ Bez povolení není dovoleno používat mobilní telefon v blízkosti lékařských přístrojů. Telefon by neměl být umístěn těsně u kardiostimulátoru (tzn. v náprsní kapse).
- ▶ Některé mobilní telefony mohou rušit funkčnost naslouchátek.
- ▶ Může dojít i k určitému drobnému rušení televize, rádia, osobních počítačů apod.

## Bezpečnost na silnici

**Seznamte se s místními zákony a předpisy o používání mobilních telefonů při řízení motorových vozidel.**

- ▶ Pokud řídíte, nedržte při telefonování telefon v ruce.
- ▶ Věnujte plnou pozornost řízení.

- ▶ Pokud máte handsfree soupravu, používejte ji.
- ▶ Pokud to podmínky řízení vyžadují, je třeba před voláním nebo přijímáním hovoru vozidlo zastavit a zaparkovat.
- ▶ Radiofrekvenční energie by mohla mít vliv na některé elektronické systémy ve voze, například radiopřijímač nebo bezpečnostní zařízení.
- ▶ Pokud máte vozidlo vybavené airbagem, nesmí jeho funkci narušovat pevně nainstalované ani přenosné bezdrátové zařízení. Nefunkčnost airbagu by mohla vést k vážnému zranění.

**Pokud posloucháte hudbu venku, nezapomeňte si nastavit hlasitost tak, abyste slyšeli okolní zvuky. Toto doporučení se vztahuje především na přecházení ulice.**

# Pokyny k bezpečnému a efektivnímu používání

## Vyhnete se poškození sluchu

Pokud jste delší dobu vystaveni hlasitým zvukům, můžete si poškodit sluch. Proto doporučujeme, abyste telefon nezapínali ani nevypínali v blízkosti uší. Také doporučujeme upravit hlasitost hudby a hovorů na rozumnou úroveň.

## Oblast odstřelovacích prací

Telefon není dovoleno používat v oblastech, kde probíhají odstřelovací práce. Je třeba dodržovat příslušná nařízení a postupovat podle platných předpisů a nařízení.

## Potenciálně výbušné prostředí

- ▶ Telefon nepoužívejte u čerpacích stanic. Nepoužívejte jej v blízkosti paliv nebo chemikálií.
- ▶ V části vozidla, ve kterém převážíte mobilní telefon nebo jeho příslušenství, nepřevázejte

ani neuchovávejte hořlavé plyny, kapaliny nebo výbušniny.

## V letadle

### Bezdrátová zařízení mohou v letadlech způsobovat rušení.

- ▶ Před nástupem do letadla je třeba vždy mobilní telefon vypnout.
- ▶ Bez povolení posádky nepoužívejte telefon ani na zemi.

## Děti

Telefon je třeba uchovávat na bezpečném místě mimo dosah malých dětí. Obsahuje totiž malé součástky, s jejichž uvolněním by mohlo být spojeno riziko udušení.

## Tísňová volání

Tísňová volání nemusí být k dispozici ve všech mobilních sítích. Z tohoto důvodu byste se neměli pro případ tísňového volání spoléhat výhradně na mobilní telefon. Ověřte si tuto informaci u místního operátora.

## Informace o bateriích a jejich údržbě

- ▶ Před dobíjením nemusí být baterie úplně vybitá. Na rozdíl od jiných bateriových systémů zde neexistuje paměťový efekt, který by snižoval výkon baterie.
- ▶ Používejte pouze baterie a nabíječky od firmy LG. Svým provedením nabíječky LG zaručují maximální životnost baterií.
- ▶ U baterie neprovádějte demontáž ani je nezkratujte.
- ▶ Kontakty na baterii je třeba udržovat v čistotě.
- ▶ Až baterie přestane podávat přiměřený výkon, vyměňte ji. Potřeba výměny však nastává až po stovkách dobití.
- ▶ Pokud nebyla baterie dlouho používána, před použitím ji znovu nabijte.
- ▶ Nabíječka by neměla být vystavena přímému slunečnímu záření a neměla by se používat ve vlhkém prostředí, například v koupelně.
- ▶ Baterii nenechávejte na horkých ani na chladných místech, snížila by se tím její kapacita.
- ▶ Pokud bude baterie nahrazena nesprávným typem baterie, hrozí nebezpečí výbuchu.
- ▶ Proveďte likvidaci použitých baterií podle pokynů výrobce.
- ▶ Přístroj KU380 používejte výhradně s bateriemi LG Electronics.

# Funkce telefonu KU380

## Součásti telefonu

### Pohled na otevřený telefon



Sluchátko

Kamera VGA

Displej LCD

**V horní části:** Ikony zobrazující sílu signálu, stav baterie a další funkce.

**V spodní části:** Indikace kontextových kláves.

**Alfanumerická klávesnice**

- V pohotovostním režimu:**
  - Seznam profilů
  - Seznam kontaktů
  - Posílání zpráv
  - Kalendář
- V menu:** Prochází položky menu.

**V pohotovostním režimu:** Zadejte číslo, které chcete volat. Stisknete a přidržte: **0 -** pro mezinárodní hovory. **1 \*** pro vytočení střediska hlasových zpráv. **2 star** až **9 myx** pro rychlou volbu.

**V režimu úpravy:** Zadejte čísla a znaky.



# Funkce telefonu KU380

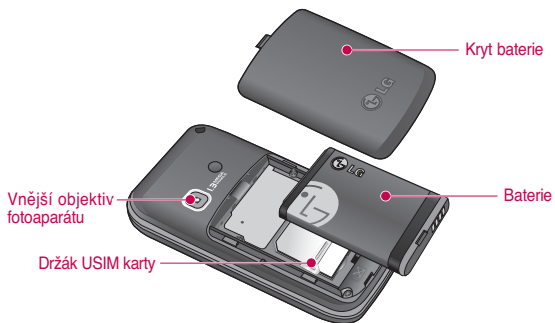
## Pohled zleva

Funkce telefonu KU380



Sluchátka/Nabíječka/Konektor kabelu

## Pohled zezadu



# První kroky

## Instalace USIM karty a baterie do přístroje

### 1. Instalace USIM karty.

USIM karta obsahuje vaše telefonní číslo, informace o službách a kontakty, a proto musí být vložena do vašeho přístroje. Pokud USIM kartu vyjmete, přístroj se stane nepoužitelným (s výjimkou tísňových volání). Před vložením nebo vyjmutím USIM karty odpojte zařízení od nabíječky a od dalších příslušenství. Vložte USIM kartu na své místo. Zkontrolujte, jestli je USIM karta řádně zasunuta a jestli jsou zlaté kontakty natočeny směrem dolů. USIM kartu vyjmete tak, že na ni lehce zatlačíte a vytáhnete ji opačným směrem.



Vložení USIM karty



Vyjmutí USIM karty

### Výstraha!

- ▶ Kovový kontakt USIM karty se snadno poškrábe a poškodí. Se USIM kartou je proto nutné zacházet s mimořádnou opatrností. Dodržujte pokyny dodávané k USIM kartě.
- ▶ Po vyjmutí baterie vložte kartu USIM.

## 2. Instalace SIM karty.

Posuňte baterii nahoru, až zaklapne zpátky na své místo.



## 3. Vyjmutí baterie.

Vypněte přístroj. (Pokud by přístroj zůstal zapnutý, mohlo by dojít ke ztrátě uložených telefonních čísel a zpráv.)

Stiskněte a podržte tlačítko pro uvolnění baterie a vysuňte baterii dolů.

# První kroky

## Nabíjení baterie

Před připojením cestovního adaptéru k telefonu musíte nejdříve vložit baterii.



1. Se šipkou směřující dolů, jak je znázorněno na obrázku, zatlačte zástrčku adaptéru do zásuvky na dolní straně telefonu. Podle cvaknutí, zjistíte, zda je konektor ve správné poloze.
2. Druhý konec cestovního adaptéru zapojte do elektrické zásuvky.



## Výstraha!

- ▶ Používejte pouze nabíječku obsaženou v balení.

3. Nabití baterie poznáte podle toho, že se pohyblivé proužky zastaví.
4. Před prvním použitím telefonu se ujistěte, zda je baterie plně nabitá.

## VÝSTRAHA!

- Konektor nezasunujte násilím, aby nedošlo k poškození telefonu nebo nabíječky.
- Pokud používáte nabíječku v jiné zemi, použijte příslušnou redukci.
- Při nabíjení nevyjímejte baterii ani SIM kartu z telefonu.

## VAROVÁNÍ!

- Protože by při bouřkách s elektrickými výboji mohlo dojít k zasažení elektrickým proudem nebo k požáru, je třeba v těchto případech nabíječku s napájecím kabelem vytáhnout ze zásuvky.
- Dbejte na to, aby se do kontaktu s baterií nedostaly předměty s ostrými hranami, např. zvířecí zuby, nehty apod. Důvodem je nebezpečí vzniku požáru.

## Odpojení nabíječky

Odpojte cestovní adaptér od telefonu podle obrázku.



## Používání paměťové karty microSD



<Paměťová karta microSD>

### <Jak vložit paměťovou kartu microSD>

1. Vypněte přístroj. Vložení nebo vyjmutí karty microSD při zapnutém telefonu může poškodit soubory uložené na paměťové kartě.

2. Sejměte plastový kryt, který zakrývá slot paměťové karty microSD.



3. Vložte do slotu paměťovou kartu. Zlaté kontakty se musejí dotýkat zadní strany karty microSD. Nezasunujte kartu microSD příliš hluboko. V případě, že kartu nelze do slotu zasunout lehce, může být příčinou špatná orientace karty nebo cizí těleso ve slotu.

4. Po vložení zatlačte kartu, až se ozve klapnutí, které signalizuje správné vložení karty microSD.



# První kroky


5. Uzavřete plastový kryt slotu.
6. Před vyjmutím paměťové karty vypněte přístroj, otevřete kryt slotu a zatlačte kartu microSD, aby se odblokovala. Paměťovou kartu opatrně vytáhněte.

## Upozornění:

- ▶ Paměťovou kartu Flash nepoužívejte, je-li stav nabití baterie nízký.
- ▶ Jestliže probíhá zápis na kartu, počkejte, až se zápis dokončí, a teprve potom kartu vyjměte.
- ▶ Díky svému tvaru karta pasuje do přístroje pouze jedním směrem.
- ▶ Kartu neohýbejte, ani ji do slotu netlačte silou.
- ▶ Nevkládejte jiné paměťové karty než karty vyrobené společností microSD.
- ▶ Je-li karta microSD formátovaná pomocí FAT32, zformátujte ji opět pomocí FAT16.


Další informace o kartách microSD naleznete v uživatelské příručce k paměťové kartě.

## Formátování paměťové karty


Před použitím je nutné paměťovou kartu naformátovat. Vložte paměťovou kartu, zvolte **Menu** → **Nastavení** → **Telefon** → **Výběr paměti** → **Externí paměť** a potom stiskněte levou kontextovou klávesu . Tuto operaci proveďte pokud možno pouze po prvním vložení paměťové karty. Během formátování se vytvoří různé složky pro různé typy dat.

## Zapnutí a vypnutí přístroje

### Zapnutí přístroje

Zkontrolujte, zda je v přístroji USIM karta a zda je baterie nabitá. Stiskněte a přidržte , dokud se přístroj nezapne. Zadejte USIM PIN kód dodaný společně s USIM kartou, jakmile se zapne požadavek na vložení PIN kódu. (Poznámka: viz strana 86) Po několika sekundách budete zaregistrováni do sítě.

## Vypnutí přístroje

Stiskněte a podržte , dokud se přístroj nevypne. Vypnutí přístroje může trvat několik sekund. Během této doby přístroj znovu nezapínejte.

## Přístupové kódy

Přístupové kódy popsané v této kapitole mají za cíl zabránit neoprávněnému použití telefonu. S pomocí funkce Změnit kódy lze přístupové kódy změnit (kromě kódů PUK a PUK2).

## Kód PIN (4 až 8 číslic)

Kód PIN (Personal Identification Number – Osobní identifikační číslo) chrání vaši USIM kartu proti neoprávněnému užití. Kód PIN zpravidla obdržíte s USIM kartou. V okamžiku, kdy je požadavek kódu PIN nastaven na Zapnutý, váš telefon bude vyžadovat zadání PIN kódu při každém zapnutí. V okamžiku, kdy je požadavek kódu PIN nastaven na Vypnutý, telefon se připojí přímo do sítě bez nutnosti zadat PIN kód.

## Kód PIN2 (4 až 8 číslic)

Kód PIN2, který je dodáván s některými USIM kartami, je vyžadován, pokud chcete přistupovat k některým funkcím, jako je např. Pevná volba čísla. Tyto funkce jsou k dispozici jen tehdy, pokud je podporuje vaše USIM karta.

## Kód PUK (8 číslic)

Kód PUK (PIN Unblocking Key – klíč k odblokování PIN) je vyžadován ke změně zablokovaného kódu PIN. Kód PUK může být dodáván s USIM kartou. Pokud ne, požádejte o něj svého místního operátora. Ztratíte-li kód, kontaktujte zákaznické oddělení svého mobilního operátora.

## Kód PUK2 (8 číslic)

Kód PUK2 dodávaný s některými USIM kartami, je vyžadován ke změně zablokovaného kódu PIN2. Ztratíte-li kód, kontaktujte zákaznické oddělení svého mobilního operátora.


# První kroky

## Bezpečnostní kód (4 číslice)

Bezpečnostní kód chrání telefon před použitím nepovolanými osobami. Výchozím bezpečnostním kódem je „0000“ a tento bezpečnostní kód je určen k vymazání všech položek v telefonu a k obnovení továrních nastavení přístroje.

## Zobrazení informací


### Nečinná obrazovka bez USIM

Tato úvodní obrazovka telefonu se objeví, není-li v telefonu USIM karta nebo je-li USIM karta neplatná. Na této obrazovce lze provádět pouze tísňová volání a vypnout telefon. Telefon vypnete stisknutím a podržením  po dobu několika sekund.

## Struktura obrazovky

Není-li v telefonu nainstalovaná USIM karta, objeví se animovaná výzva k vložení USIM karty. Je-li vložena USIM karta neplatná, zobrazí se animovaná informace, že USIM karta je uzamčená.

### Funkce tísňového volání

Pravá kontextová klávesa je na obrazovce označena jako Tísňové volání. Stisknete pravou kontextovou klávesu nebo pomocí číselných kláves vytočíte číslo tísňové linky, po stisknutí  se provede tísňové volání.

### Nečinná obrazovka

Je-li nainstalována správná USIM karta, zobrazí se po zapnutí telefonu nečinná obrazovka.


### Struktura obrazovky

Nečinná obrazovka se skládá z názvu operátora, indikátorů, data a času na obrázku v pozadí. Tapetu můžete změnit v menu Nastavení displeje.

## Číslicová obrazovka

Číslicová obrazovka se zobrazí při stisku číselné klávesy na nečinné obrazovce.


### Struktura obrazovky

Číslicová obrazovka se skládá z indikátorů stavu, vytáčeného čísla a kontextového menu. Indikátory stavu jsou stejné jako na nečinné obrazovce. Velikost a barvu písma vytáčení lze změnit v menu Nastavení displeje. Po zadání telefonního čísla můžete uskutečnit hovor stisknutím .

### Kontextová klávesa

Kontextové klávesy lze při vytáčení čísla použít pro několik různých funkcí. Levou kontextovou klávesou můžete provést videohovor, poslat zprávu na číslo, uložit číslo do Kontaktů, prohledávat kontakty.

## Obrazovka zamčení přístroje

Je-li zvolena funkce Zamčení přístroje, lze na této obrazovce provádět pouze tísňové volání, uvolnit zámek a vypnout přístroj. Jako vždy můžete přístroj vypnout stisknutím a podržením  po dobu několika sekund.

### Struktura obrazovky

Struktura obrazovky Zamčení přístroje je stejná jako struktura nečinné obrazovky.

### Funkce tísňového volání

Pravou kontextovou klávesou můžete provést tísňové volání. Stejně jako na nečinné obrazovce bez USIM karty lze vytáčet pouze čísla tísňových linek.

# První kroky

## Funkce odemknutí





Stisknete-li klávesu kromě pravé kontextové klávesy a číselné klávesy, objeví se místní obrazovka s výzvou k zadání Bezpečnostního kódu pro odemčení telefonu. Bezpečnostní kód se konfiguruje v oddíle **Změnit kódy** (#. Nastavení → 2. Telefon → 6. Zabezpečení → 3. Změnit kódy). Zadáte-li nesprávný Bezpečnostní kód, telefon zůstane v uzamčeném stavu. Zadáte-li správný Bezpečnostní kód, telefon se odemkne a zobrazí se nečinná obrazovka. Jestliže jste telefon vypnuli v uzamčeném stavu, zůstane uzamčený i po zapnutí.

## Heslo blokování


Tato služba za určitých podmínek zabráňuje volání. Podmínky lze upravit pomocí funkce Blokování hovorů (#. Nastavení → 4. Hovory → 2. Blokování hovorů). Používáte-li funkci blokování hovorů, je vyžadováno heslo blokování. Heslo získáte od zákaznické služby svého mobilního operátora po objednání této služby. Při aktivaci této služby uslyší volající informační zprávu, že hovor nebude spojen z důvodu blokování hovorů.

## Volání a přijímání hovorů


### Uskutečnění hlasového hovoru




1. Zadejte telefonní číslo včetně místní předvolby.
  - ▶ Stisknutím  můžete smazat jednu číslici. Stisknutím a přidržením  smažete všechny číslice.
2. Stisknutím  zahájíte hovor.
3. Hovor ukončíte stisknutím  nebo zavřením přístroje.

#### Upozornění

- ▶ Aktivací dotykových kláves a stisknutím  můžete v průběhu hovoru zapnout reproduktor.



### Uskutečnění hovoru ze záznamů volání

1. V pohotovostním režimu stiskněte tlačítko Zvednout  a zobrazí se čísla posledních přijatých, volaných a zmeškaných hovorů.

2. Pomocí tlačítek  a  vyberte požadované číslo.
3. Pro volání čísla stiskněte .

### Uskutečnění videohovoru

Videohovory lze uskutečnit v oblasti pokryté službou 3G. Má-li volaný uživatel 3G videotelefon a nachází se v oblasti pokryté službou 3G, uskuteční se videohovor. Jako videohovor lze také přijmout příchozí hovor. Videohovor uskutečníte nebo přijmete následujícím způsobem.


1. Zadejte telefonní číslo klávesnicí nebo zvolte telefonní číslo ze seznamů volaných a přijatých hovorů.
  - ▶ Chcete-li opravit chybu, krátkým stisknutím  smažete poslední číslici nebo dlouhým stisknutím  smažete všechny číslice.
2. Nechcete-li používat reproduktor, zapojte sluchátka.
3. Funkci videa spustíte stisknutím levé kontextové klávesy [Menu] a volbou položky Hovor videotelefonem.

# Základní funkce

- ▶ Před uskutečněním hovoru videotelefonem se zobrazí se výzva k uzavření ostatních aplikací.


## Upozornění



- ▶ Spojení videohovoru může trvat určitou dobu. Mějte strpení. Doba spojování také závisí na tom, jak rychle druhá strana přijme hovor. Když se navazuje spojení pro hovor videotelefonem, vidíte vlastní obraz, a jakmile druhá strana přijme hovor, zobrazí se na obrazovce její obraz.

4. V případě potřeby změňte polohu kamery.
5. Hovor ukončíte stisknutím  nebo zavřením přístroje.



## Uskutečnění hlasového hovoru a videohovoru z Kontakty

Volat osobám, jejichž čísla máte uložena v seznamu Kontakty, je velmi snadné.

1. Stisknutím  přejdete do seznamu s kontakty.

2. Přejděte na kontakt, kterému chcete zavolat.
3. Stisknutím  zahájíte hlasový hovor. Pro uskutečnění videohovoru stiskněte levou kontextovou klávesu a zvolte Provést videohovor.
4. Stisknutím  ukončíte hovor.

## Mezinárodní hovory

1. Podržte stisknuté tlačítko  mezinárodního předčíslí. Znak „+“ automaticky vybere mezinárodní přístupový kód.
2. Zadejte předvolbu země, místní předvolbu a telefonní číslo.
3. Pro volání čísla stiskněte tlačítko .

## Nastavení hlasitosti





Pokud chcete v průběhu hovoru upravit hlasitost zvuku ve sluchátku, stiskněte klávesu na levé straně přístroje. V nečinném režimu můžete upravit hlasitost kláves pomocí.

## Přijímání hovoru


Při přijímání hovoru začne telefon zvonit a na obrazovce se objeví blikající ikonka telefonu. Pokud lze volajícího identifikovat, zobrazí se na displeji jeho telefonní číslo (nebo jméno, pokud jej máte uložené v seznamu Kontakty).

1. Otevřením telefonu přijměte příchozí hovor.


### Poznámka

- ▶ Příchozí hovor můžete odmítnout stisknutím  nebo dvojnásobným stisknutím pravé kontextové klávesy.
  - ▶ Nastavíte-li Režim přijetí hovoru na stisknutí tlačítka Odeslat (menu #.5.0.4), můžete po otevření telefonu přijmout hovor stisknutím .
  - ▶ Pokud je režim pro přijetí hovoru nastaven na stisknutí libovolné klávesy, můžete hovor přijmout stisknutím jakékoliv klávesy kromě .
2. Hovor ukončíte uzavřením přístroje nebo stisknutím .

### Poznámka

- ▶ Hovor můžete přijmout i tehdy, když používáte kontakty nebo jiné funkce menu.
- ▶ Pokud jsou k telefonu připojena kompatibilní sluchátka, můžete hovor přijmout stisknutím klávesy na sluchátkách nebo pomocí telefonu. Příchozí hovor můžete odmítnout stisknutím .
- ▶ Vyzváněcí tón příchozího hovoru můžete ztlumit stisknutím a podržením bočního tlačítka hlasitosti.

## Zkratka pro aktivaci režimu vibrací

Režim Pouze vibrace lze po otevření telefonu aktivovat stisknutím a podržením .

## Síla signálu


Pomocí indikátoru signálu na displeji telefonu můžete kontrolovat sílu signálu. Síla signálu se může měnit, zejména uvnitř budov. U okna může být příjem lepší.

# Základní funkce

## Zadávaní textu

Pomocí klávesnice telefonu můžete vkládat alfanumerické znaky. Například při ukládání jmen do Kontaktů, při psaní zpráv, vytváření osobního přivítání nebo plánování úkolů v kalendáři. U tohoto telefonu jsou dostupné následující možnosti zadávání textu.

### Režim T9

Tento režim umožňuje psát slova tak, že pro jedno písmeno stačí stisknout pouze jedno tlačítko. Každému tlačítku na klávesnici je přiřazeno více písmen. Režim T9 automaticky porovnává vámi stisknutá tlačítka s interním slovníkem a odhaduje správné slovo, takže je zapotřebí menšího počtu stisknutí než u tradičního režimu ABC. Někdy se tento režim nazývá prediktivní psaní textu. Dlouhým stiskem klávesy  můžete režim T9 aktivovat nebo zrušit.


### Režim ABC

Tento režim umožňuje vkládat písmena stisknutím tlačítka označeného příslušným písmenem jednou až čtyřikrát, dokud se nezobrazí požadované písmeno.

### Režim 123 (číselný režim)




V tomto režimu se zadávají čísla, jedním stisknutím jedna číslice.

## Změna režimu zadávání textu

1. Nacházíte-li se v poli, které umožňuje zadávání znaků, zobrazí se v pravém horním rohu LCD obrazovky indikátor režimu zadávání textu.
2. Je-li T9 zapnuto, můžete měnit režim na T9Abc, T9ABC, 123, T9abc stisknutím . Je-li T9 vypnuto, mění se režim na Abc, ABC, 123, abc.

## Použití režimu T9


Režim prediktivního psaní textu T9 umožňuje snadné psaní slov s minimálním počtem stisknutých tlačítek. Při každém stisknutí tlačítka telefon začíná na základě vestavěného slovníku zobrazovat začátek slova, které pravděpodobně chcete napsat. Nová slova přidaná do slovníku jsou pak vybírána jako nejpravděpodobnější slova.


1. Jste-li v režimu prediktivního psaní textu T9, začněte psát slovo pomocí tlačítek  až  tak, že pro každé písmeno stisknete tlačítko jen jednou.
  - ▶ Zobrazené slovo se mění při každém stisku tlačítka. Nevšímejte si toho, co je na displeji, dokud slovo nenapíšete celé.
  - ▶ Pokud je slovo nesprávné i po jeho kompletním napsání, stiskněte jednou  a prohlédněte si další varianty daného slova.

## Příklad

Stisknutím tlačítek     napište **Home**.

Stisknutím  napište **Good**.

- ▶ Pokud v nabízeném seznamu požadované slovo chybí, můžete je přidat použitím režimu ABC.
2. Dříve než začnete upravovat nebo mazat zadané znaky, zadejte celé slovo.
  3. Každé slovo ukončete mezerou, a to stisknutím .

Písmena můžete smazat stisknutím tlačítka .

## Použití režimu ABC

S pomocí tlačítek  až  zadejte text, který chcete napsat.

1. Stiskněte tlačítko s požadovaným písmenem:
  - ▶ Pro první písmeno jednou.
  - ▶ Pro druhé písmeno dvakrát.
  - ▶ atd.



# Přehled funkcí menu

## 1. Zábava

- 1.1 Hry a aplikace
- 1.1 TV

## 2. Vodafone live!

- 2.1 Domovská stránka
- 2.2 Zadání URL
- 2.3 Záložky
- 2.4 Uložené stránky
- 2.5 Historie
- 2.6 Nastavení prohlížeče
- 2.7 Hledat
- 2.8 TV
- 2.9 Hudba
- 2.10 Hry
- 2.11 Zvonění
- 2.12 Obrázky
- 2.13 Zprávy
- 2.14 Sport

## 3. Hudba

- 3.1 Naposledy přehrané
- 3.2 Moje hudba
- 3.3 Hudební obchod

## 4. Fotoaparát

- 4.1 Fotoaparát
- 4.2 Videokamera

## 5. Zprávy

- 5.1 Vytvořit novou
- 5.2 Přijaté
- 5.3 Email
- 5.4 Koncepty
- 5.5 K odeslání
- 5.6 Odeslané
- 5.7 Šablony
- 5.8 Emotikony
- 5.9 Nastavení zpráv

# Přehled funkcí menu

<b>6. Moje soubory</b>	<b>8. Kontakty</b>	<b>#. Nastavení</b>
6.1 Obrázky	8.1 Přidat nový	#.1 Profily
6.2 Zvuky	8.2 Seznam kontaktů	#.2 Telefon
6.3 Video	8.3 Skupiny	#.3 Displej
6.4 Hry a aplikace	8.4 Rychlé volby	#.4 Hovory
6.5 Ostatní	8.5 Čísla volání asistenční služby	#.5 Nastavení zprav
6.6 Externí paměť	8.6 Vlastní číslo	#.6 Nastavení kontaktu
<b>7. Organizér</b>	8.7 Moje vizitka	#.7 Připojení
7.1 Rychlé menu	8.8 Nastavení kontaktu	#.8 Java
7.2 Budík		
7.3 Kalendář	<b>9. Výpis volání</b>	
7.4 Úkoly	9.1 Všechny hovory	
7.5 Hry a aplikace	9.2 Volaná čísla	
7.6 Poznámky	9.3 Přijaté hovory	
7.7 Záznam hlasu	9.4 Zmeškané hovory	
7.8 Soukromá poznámka		
7.9 Kalkulačka		
7.10 Převodník jednotek	<b>*. USIM Tool Kit</b>	
7.11 Světový čas		
7.12 Nastavení organizéru	<b>0. Videohovor</b>	

# Zábava [Menu 1]

## **Hry a aplikace** Menu 1.1

Pomocí tohoto menu si můžete snadno stahovat hry a další aplikace. Implicitně jsou zde dvě složky, Hry a Aplikace. Uvnitř složky Aplikace naleznete aplikaci Google Maps pro mobilní telefony a nabídky prodeje a nákupu na eBay. Pamatujte si, že používání těchto služeb může být dále zpoplatněno. Složku vytvoříte pomocí levé kontextové klávesy [Menu].

## **TV** Menu 1.2

Zvolením tohoto menu přejdete na TV.

# Vodafone live! [Menu 2]

## Domovská stránka

### Menu 2.1

Můžete spustit webový prohlížeč a vstoupit na domovskou stránku aktivovaného profilu v nastaveních prohlížeče.

- ▶ Můžete také přímo přejít na službu Vodafone live! a to stisknutím pravé kontextové klávesy v nečinném režimu.

## Zadání URL

### Menu 2.2

Můžete manuálně zadat adresu URL a přejít na příslušnou webovou stránku.


- ▶ Pro zadání symbolu stiskněte levou kontextovou klávesu [Menu] a zvolte 1. Vložit symbol v menu Možnosti. Zobrazí se tabulka symbolů.
- ▶ Pro přepnutí režimu zadání stiskněte levou kontextovou klávesu [Menu] a zvolte 2. Způsob vložení.

## Záložky


### Menu 2.3

Vaše oblíbené nebo často navštěvované adresy URL nebo webové stránky si můžete uložit. Se záložkami lze provádět operace Odeslat, Přidat, Upravit, Označit/Zrušit označení nebo Smazat. Několik přednastavených adres je již uloženo v podobě záložek.

### Přidání nové záložky

1. Stiskněte levou kontextovou klávesu [Menu] a zvolte 2. Přidat novou v menu Možnosti.
2. Zadejte název a odpovídající informace o adrese URL.
3. Uložte stisknutím .

### Připojení k požadované záložce

Stiskněte  nebo vyberte v Menu položku Připojit.


### Odeslání záložky ostatním

V menu Možnosti vyberte položku Odeslat. Můžete ji odeslat pomocí zprávy nebo e-mailu.

## Smazání záložky

V menu Možnosti vyberte položku Smazat. Více záložek najednou můžete smazat pomocí volby Označit/Zrušit označení.

## Úprava záložky

V menu Možnosti vyberte položku Upravit. Upravte název a informace o adrese URL. Uložte stisknutím .

## Uložení stránky

Menu 2.4

Telefon dokáže uložit stránku na displeji jako off-line soubor. Takto si lze uložit až 20 stránek.

## Historie

Menu 2.5

Můžete zobrazit přehled stránek, ke kterým jste se připojili.


## Nastavení prohlížeče

Menu 2.6

Můžete změnit nastavení možností připojení a vzhledu prohlížeče.

## Profily

(Menu 2.6.1)

Stisknutím tlačítka  vyberte příslušný profil. Tak aktivujete profil, který spustí prohlížeč.

## Nastavení vzhledu

(Menu 2.6.2)

## Cache

(Menu 2.6.3)

Zapnutím vyrovnávací paměti umožníte ukládání navštívených stránek ve vašem telefonu.

Jakmile je stránka uložena ve vyrovnávací paměti, výrazně se urychlí její načítání při opětovném navštívení.

## Cookies

(Menu 2.6.4)

Zapnutím souborů cookie umožníte ukládání souborů cookie poslaných serverem. Pokud tuto funkci vypnete, nebudou se ve vašem telefonu ukládat žádné soubory cookie.

## Zabezpečení

(Menu 2.6.5)

# Vodafone live!

## Seznam certifikátů (Menu 2.6.5.1)

Certifikáty v tomto seznamu si lze zobrazit.

## Relace smazána (Menu 2.6.5.2)

Pomocí této volby lze smazat data zabezpečené relace (WTLS/TLS). Data relace by se měla před vytvořením nové zabezpečené relace smazat.

## Původní nastavení (Menu 2.6.6)

Touto možností obnovíte nastavení telefonu na výchozí nastavení prohlížeče.

## Hledat Menu 2.7

## TV Menu 2.8

Toto menu použijte pro přístup ke službě online televize. Můžete sledovat televizní vysílání a využívat různé služby mobilní TV. Další podrobnosti získáte u svého operátora.

## Hudba Menu 2.9

Toto menu použijte pro práci s hudebními soubory a poslechu stanic Vodafone Radio DJ.

## Hry Menu 2.10

Z webových stránek Vodafone můžete stahovat hry.

## Zvonění Menu 2.11

Z webových stránek Vodafone můžete stahovat vyzváněcí tóny.

## Obrázky Menu 2.12

Z webových stránek Vodafone můžete stahovat obrázky.

## Zprávy Menu 2.13

Toto menu použijte pro přístup na webovou stránku Vodafone a stahování posledních zpráv o událostech.

## Sport Menu 2.14

Toto menu použijte pro přístup na webovou stránku Vodafone a stahování posledních sportovních zpráv.

# Hudba [Menu 3]

## Naposledy přehrané

Menu 3.1

Toto menu zobrazuje posledních 20 přehraných skladeb. Jakmile začne přehrávání, zobrazí se menu „Přehrává se“. Pomocí menu Přehrává se můžete aktivovat přehrávač multimédií.

## Moje hudba

Menu 3.2

### Všechny skladby (Menu 3.2.1)

Můžete prohlížet všechny hudební soubory uložené v paměti telefonu nebo v externí paměti.

### Seznamy skladeb (Menu 3.2.2)

Výběrem skladeb ze seznamu Všechny skladby můžete vytvářet vlastní seznamy skladeb.

### Interpreti

(Menu 3.2.3)

Můžete prohlížet a přehrávat hudbu seřazenou podle Interpreti.

### Alba

(Menu 3.2.4)

Můžete prohlížet a přehrávat hudbu seřazenou podle Alba.

### Žánry

(Menu 3.2.5)

Můžete prohlížet a přehrávat hudbu seřazenou podle Žánru.

### Promíchat stopy

(Menu 3.2.6)

Tuto možnost zvolte, chcete-li přehrávat hudbu nepřetržitě a s náhodným výběrem.

## Hudební obchod

Menu 3.3

S pomocí této nabídky se připojíte k webu Vodafone pro stahování hudby.


### Poznámka

Stahování hudby může být dále zpoplatněno. Bližší podrobnosti získáte u svého operátora.

# Fotoaparát [Menu 4]

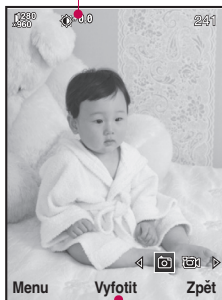
## Fotoaparát

### Menu 4.1






Tato aplikace vám umožňuje pořizovat fotografie. Můžete pořizovat fotografie v požadovaném formátu a použít je pro fotografie kontaktů, výchozí obrazovku a další obecné účely. Zachycený snímek můžete odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth .


**Jas:** od -2,0 do 2,0 v intervalech 0,5.


Čím vyšší hodnota, tím jasnější obrazovka.





Stisknutím  pořídíte snímek.

1. Stiskněte levou kontextovou klávesu. Otevře se nabídka Menu, kde můžete nastavit požadované prostředí.
  - ▶ Mezi položkami možností menu se pohybujte pomocí  / .
  - ▶ Vyberte si požadovanou hodnotu pomocí  /  a poté potvrďte výběr pomocí .

Menu	Popis
Přejít na	Otevře se složka Obrázky a dostupné obrázky se zobrazí jako miniatury. Obrázky lze prohlédnout stisknutím  . Vybraný obrázek lze také odeslat jinému účastníkovi prostřednictvím Zprávy, Pohlednice, E-mailu nebo Bluetooth.
Velikost	1280x960, 640x480, Tapeta, 176x144, Kontakty
Kvalita	Maximální, Vysoká, Standard
Série snímků	Jeden, Tři, Šest , Devět (Poznámka: Dostupnost Série snímků závisí na velikosti.)
Jas	od -2,0 do 2,0 v intervalech 0,5. Čím vyšší hodnota, tím jasnější obrazovka.
WB Vyvážení bílé	Můžete upravit tón pozadí fotografie v závislosti na počasí. Automaticky, Denní světlo, Zataženo, Osvětlit, Interiér.
Noční režim	Zapnutím tohoto režimu zlepšíte kvalitu snímků pořízených v noci.

Menu	Popis
Záběr	Při pořizování snímku můžete použít až 10 efektů rámečku. (dostupné pouze pro Velikost tapety)
Časovač	Spuštění spouště fotoaparátu můžete zpozdít. <b>Žádné, 3, 5 a 10 sekund</b> po aktivaci časového spínače se objeví  .
Efekt	Žádné, Černobílý, Negativ, Sépie
Zvuk	Vyberte požadovaný tón závěrky.
Paměť	Vyberte požadovanou paměť, buď v přístroji nebo externí.
Zrcátko	Zapnutím této volby můžete aktivovat efekt zrcadla.
Přepnout objektiv	Lze přepnout kameru a aktivovat buď interní kameru nebo externí kameru.
Náhled	Zvolte požadovaný Náhled, Celý obrázek nebo Celá obrazovka.

# Fotoaparát

2. Po dokončení upravování nastavení stiskněte pravé kontextové tlačítko [Zavřít].
3. Zaměřte fotoaparát na fotografovaný objekt a stiskněte  .
4. Stisknutím  obrázek uložíte. Uloží se do složky Obrázky ve složce Moje soubory.

## Poznámka

Stisknutím pravé kontextové klávesy [Zpět] se vrátíte do režimu náhledu bez uložení obrázku.


## Videokamera




### Menu 4.2

Tato aplikace vám umožňuje natáčet videoklipy. V tomto menu můžete přehrávat a sledovat uložený soubor videa. Zachycený videoklip můžete odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth.

**Jas:** od -2,0 do 2,0 v intervalech 0,5.  
Čím vyšší hodnota, tím jasnější obrazovka.






Obraz nahrajete po stisknutí .

1. Stiskněte levou kontextovou klávesu. Otevře se nabídka Menu, kde můžete nastavit požadované prostředí.
  - ▶ Mezi položkami možností menu se pohybujte pomocí .
  - ▶ Vyberte požadovanou hodnotu pomocí  a potvrďte pomocí .

# Fotoaparát

Menu	Popis
Přejít na	Otevře se složka Video a dostupná videa se zobrazí jako miniatury. Videa lze prohlédnout stisknutím <b>OK</b> . Vybrané video lze také odeslat jinému účastníkovi prostřednictvím Zprávy, E-mailu nebo Bluetooth.
Velikost	176x144, 128x96
Kvalita	Maximální, Vysoká, Standard
Jas	Od -2,0 do 2,0 v intervalech 0,5. Čím vyšší hodnota, tím jasnější obrazovka.
WB Vyvážení bílé	Můžete upravit tón pozadí videa v závislosti na počasí. Automaticky, Denní světlo, Zataženo, Osvětlit, Interiér.

Menu	Popis
Noční režim	Zapnutím tohoto režimu zlepšíte kvalitu videa pořízeného v noci.
Efekt	Žádné, Černobílý, Negativ, Sépie
Trvání	Vyberte požadovanou dobu nahrávání. MMS, 30 s, 1 min., 2 min., 5 min., 60 min.
Paměť	Vyberte požadovanou paměť, buď v přístroji nebo externí.
Zrcátko	Zapnutím této volby můžete aktivovat efekt zrcadla.
Zvuk	Zvolte, zda se bude nahrávat také zvuk.
Přepnou t objektiv	Lze přepnout kameru a aktivovat buď interní kameru nebo externí kameru.

2. Po dokončení úprav nastavení stiskněte pravé kontextové tlačítko [Zavřít].
3. Zaměřte kameru na snímání objekt a stisknutím  spustíte nahrávání. Stisknutím  ukončete nahrávání.
  - ▶ Nahrávání lze přerušit stisknutím levé kontextové klávesy [Pozastavit].
4. Stisknutím  video klip uložíte. Uloží se do složky Video ve složce Moje soubory.

### Poznámka

Stisknutím pravé kontextové klávesy [Zpět] se vrátíte do režimu náhledu bez uložení videoklipu.

# Zprávy [Menu 5]

## Vytvořit novou Menu 5.1


### Zpráva (Menu 5.1.1)

Můžete psát a upravovat zprávu obsahující kombinaci textu, obrazu, videa a zvuku.

1. Do pole Zpráva zadejte svou zprávu.

**Vložit:** Můžete provádět následující akce:


1. **Obrázek:** Můžete vložit obrázek. (Existující obrázek/Fotografovat)
2. **Video:** Můžete vložit video klip. (Jeden video klip na jeden snímek)
3. **Zvuk:** Můžete vložit zvukový soubor. (Jeden zvuk na jeden snímek)
4. **Symbole:** Můžete vložit symboly. Po zadání příslušných číselných kláves stiskněte .

5. **Sablonu:** Můžete vložit textovou šablonu uloženou v telefonu. Po výběru šablony stiskněte . Vybraná šablona se vloží do okna Zpráva.
6. **Emotikonu:** Při psaní zprávy můžete vložit emotikon.
7. **Jméno a číslo:** Po vyhledání jména a čísla v telefonním seznamu můžete vložit záznam.
8. **Nový snímek:** Volbou této položky přidáte nový snímek.
9. **Předmět:** Vyberte pro vložení předmětu.
  - ▶ **Uložit do konceptů:** Vyberte pro uložení zprávy mezi koncepty.
  - ▶ **Způsob vložení:** Vyberte požadovaný režim slovníku.
  - ▶ **Jazyk písma:** Můžete vybrat jazyk pro psaní zprávy.
  - ▶ **Přidat do slovníku:** Můžete přidat slovo do slovníku.

2. Stisknutím pravé kontextové klávesy [Zavřít] po nastavení podmenu opustíte menu nebo přejdete do předchozího menu.
3. Zprávu odešlete stisknutím potvrzovací klávesy [Odeslat]. Zpráva se automaticky uloží do složky Odeslané zprávy. Jestliže se zpráva neodešle, zůstane ve složce K odeslání a je označena statutem selhání.

## Email (Menu 5.1.2)

Pro odesílání a příjem e-mailu je nutné si založit e-mailový účet. (Viz strana 58–59 týkající se Založení e-mailového účtu.)

1. Zadejte e-mailové adresy příjemců do polí Komu, Kopie, Skrytá kopie. Kontakty lze vyhledávat po stisknutí .

### Poznámka

- Do pole Kopie zadejte referenční e-mailovou adresu pro předání e-mailu.
- Do pole Skrytá kopie zadejte skryté e-mailové adresy pro předání e-mailu bez uvedení údajů o předání.


### Poznámka

- Do polí pro příjemce (Komu), referenční adresu (Kopie) a skrytou referenční adresu (Skrytá kopie) je povoleno zadat pouze platné e-mailové adresy. Po zadání e-mailové adresy se ihned objeví další pole, kam lze zadat další adresu. Lze zadat až 20 příjemců do pole Komu a Kopie a 10 příjemců do pole Skrytá kopie.

2. Přejděte kurzorem do pole Předmět a zadejte předmět zprávy.
3. Obsah zprávy můžete zadat přesunutím kurzoru do pole Zpráva.
4. Následující funkce použijte pomocí levé kontextové klávesy [Menu].
  - ▶ **Vložte:** Vyberte toto menu pro vkládání zvláštních znaků, šablon a kontaktů. Je také možné připojit multimediální soubory (obrázky, videa a zvuky).

- ▶ **Vyhledávání v kontaktech:** Vyberte toto menu pro vkládání e-mailových adres uložených v Kontaktech. (Zobrazuje se v menu Možnosti, pouze pokud se kurzor nachází v polích Komu/Kopie/Skrytá kopie.)
- ▶ **Poslední použité:** Můžete použít poslední e-mailovou adresu, kterou jste dočasně uložili.
- ▶ **Uložit do konceptů:** Vyberte toto menu pro uložení zprávy do Konceptů.
- ▶ **Zobrazit přílohu:** Zobrazí přiložené soubory. (Tato položka je dostupná, pouze jsou-li připojené soubory.)
- ▶ **Odeb.:** Smaže soubor přílohy. (Tato položka je dostupná pouze v případě, jsou-li připojeny soubory.)
- ▶ **Způsob vložení:** Vyberte požadovaný režim slovníku.
- ▶ **Přidat do slovníku:** Můžete přidat nové slovo do slovníku.
- ▶ **Jazyk písma:** Můžete změnit jazyk písma.

- ▶ **Nastavit prioritu e-mailu:** Můžete konfigurovat prioritu e-mailu, který se chystáte odeslat.


5. Když dokončíte psaní e-mailu, stisknete  pro jeho odeslání.



## Hlasová zpráva (Menu 5.1.3)

Můžete odeslat zprávu s nahraným hlasem.

1. Přejděte do menu hlasové zprávy.
2. Pro záznam hlasové zprávy stisknete prostřední klávesu.
3. Nahrávání zastavíte stisknutím levé kontextové klávesy. Pro přímé odeslání zprávy stisknete znovu prostřední klávesu.
4. Chcete-li si prohlédnout zprávu nebo ji uložit do konceptů, stisknete levou kontextovou klávesu [Menu].

## Přijaté Menu 5.2

1. Můžete prohlížet přijaté zprávy. Vyberte zprávu a poté stisknete  pro náhled zprávy.

2. Předchozí nebo následující zprávu můžete prohlížet pomocí  /  .
3. Jestliže chcete prohlédnout multimediální zprávu (Oznámení), vyberte Načíst v obrazovce náhledu oznámení o zprávě. Soubor se následně přenese a po dokončení přenosu jej lze prohlédnout.

Následující funkce můžete použít ve složce Přijaté pomocí levé kontextové klávesy [Menu].

- ▶ **Odpovědět:** Vytvoří odpověď pro odesílatele nebo pro všechny příjemce vybrané zprávy.
- ▶ **Přeposlat:** Předá vybranou zprávu dál.

### Poznámka

Není podporováno pro multimediální zprávy (Oznámení) a WAP push zprávy.

- ▶ **Provést hlasový hovor:** Můžete uskutečnit hlasový hovor.
- ▶ **Provést videohovor:**

Můžete uskutečnit hovor videotelefonem.

- ▶ **Smazat:** Vymaže aktuální zprávu.
- ▶ **Napsat novou:** Můžete napsat novou zprávu nebo e-mail.
- ▶ **Kopírovat:** V případě zprávy SMS můžete zprávu kopírovat do přístroje nebo na USIM kartu.
- ▶ **Přesunout:** V případě zprávy SMS můžete zprávu přesunout do přístroje nebo na USIM kartu.
- ▶ **Filtr:** Zobrazí zprávy podle požadovaného typu zprávy.
- ▶ **Označit/Zrušit označení:** Můžete vybrat jednu nebo více zpráv pro hromadné vymazání.
- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

## Poznámka

Můžete zkontrolovat e-maily uložené v E-mail [Menu 5.6].



## Email

### Menu 5.3

### Zobrazení přehledu e-mailových zpráv

1. Vyberte e-mailový účet a poté stiskněte **OK** pro zobrazení přehledu přijatých e-mailů.
  2. Následující funkce můžete použít v přehledu e-mailů pomocí levé kontextové klávesy [Menu].
    - ▶ **Odpovědět:** Vytvoří odpověď na vybraný e-mail.
    - ▶ **Přeposlat:** Předá vybrané e-mailové zprávy ostatním.
    - ▶ **Obnovit (pouze POP3):** Načte nové e-mailové zprávy.
    - ▶ **Kopírovat do (pouze IMAP):** Zkopíruje vybraný e-mail.
    - ▶ **Hledat:** Vyhledá e-mail.
    - ▶ **Smazat:** Smaže e-mail.
- ▶ **Smazat ze serveru (pouze POP3):** Smaže zprávu nebo e-mail ze serveru.
  - ▶ **Napsat novou:** Vytvoří nový E-mail, novou Pohlednici nebo hlasovou zprávu.
  - ▶ **Označit/Zrušit označení:** Tuto volbu použijte pro smazání více položek.
  - ▶ **Nastavit jako přečtené/nepřečtené:** Vybraný e-mail můžete označit jako přečtený nebo nepřečtený.
  - ▶ **Seřadit podle:** E-mail můžete seřadit podle podmínek.
  - ▶ **Trvale odstranit (pouze IMAP):** Odstraní zvolené údaje v e-mailu.
  - ▶ **Synchronizace zpráv (pouze IMAP):** Synchronizuje e-mail s příchozím e-mailovým serverem.
  - ▶ **Informace o zprávě:** Krátká informace o zprávě včetně velikosti, typu, data, času a názvu souborů.


## Zobrazení e-mailové zprávy

1. Vyberte některý z přijatých e-mailů a stiskněte klávesu Zobrazit pro načtení obsahu e-mailu.
2. Obsah přijatého e-mailu se automaticky zobrazí na obrazovce Zobrazit.
3. Obsah předchozí nebo následující zprávy můžete prohlížet pomocí  / .
4. Na obrazovce Zobrazení e-mailu můžete použít následující funkce pomocí levé kontextové klávesy [Menu].
  - ▶ **Odpovědět:** Vytvoří odpověď na vybraný e-mail.
  - ▶ **Přeposlat:** Předá vybrané e-mailové zprávy ostatním.
  - ▶ **Uložit adresu:** Uloží adresu odesílatele do Kontaktů.
  - ▶ **Smazat:** Smaže e-mail.
  - ▶ **Vyjmout:** Vyjme číslo, E-mailová adresa nebo Webová adresa z e-mailové zprávy.
  - ▶ **Zobrazit přílohu:** Zobrazí přiložený soubor.

- ▶ **Zobrazit příjemce:** Zobrazí e-mailové adresy příjemců zprávy a příjemců kopie.
- ▶ **Napsat novou:** Vytvoří nový E-mail, novou nebo Hlasovou zprávu.
- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

## Koncepty

### Menu 5.4

Můžete prohlížet uložené zprávy. Vyberte zprávu a poté stiskněte  pro úpravu zprávy.

Následující funkce můžete použít pomocí levé kontextové klávesy [Menu].

- ▶ **Odeslat:** Odešle vybranou zprávu.
- ▶ **Smazat:** Smaže aktuální zprávu.
- ▶ **Napsat novou:** Můžete napsat novou zprávu nebo e-mail.
- ▶ **Označit/Zrušit odznačení:** Můžete vybrat jednu nebo více zpráv pro hromadné vymazání.
- ▶ **Filtr:** Zobrazí zprávy podle požadovaného typu zprávy.

- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

## K odeslání

Menu 5.5

V tomto menu můžete prohlížet seznam a obsah zpráv a rovněž si ověřit, zda přenos proběhl úspěšně.

Například: Není-li správně nakonfigurován e-mailový účet, jsou e-maily umístěné ve složce Odchozí.

1. Vyberte zprávu.
2. Následující funkce můžete použít pomocí levé kontextové klávesy [Menu].

### [Pro odcházející / čekající zprávy]

- ▶ **Napsat novou:** Můžete napsat novou zprávu nebo e-mail.
- ▶ **Zrušit odeslatí:** Můžete zastavit stav odesílání nebo čekání.
- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

### [Pro zprávu, kterou se nepodařilo odeslat]

- ▶ **Poslat:** Vybranou zprávu můžete poslat znovu.
- ▶ **Smazat:** Vymaže aktuální zprávu.
- ▶ **Uložit do konceptů:** Zprávu můžete odeslat do konceptů.
- ▶ **Napsat novou:** Můžete napsat novou zprávu nebo e-mail.
- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

## Odeslané

Menu 5.6

Zobrazí odeslané zprávy (Zpráva/ E-mailová zpráva/ hlasová zpráva).

### [Menu]

- ▶ **Odpovědět:** Vytvoří odpověď odesílateli nebo všem příjemcům vybrané zprávy.
- ▶ **Přeposlat:** Předá vybranou zprávu dál.
- ▶ **Upravit:** Můžete upravit vybranou zprávu.

- ▶ **Smazat:** Smaže aktuální zprávu.
- ▶ **Napsat novou:** Můžete napsat novou zprávu.
- ▶ **Označit/Zrušit označení:** Můžete vybrat jednu nebo více zpráv pro hromadné vymazání.
- ▶ **Filtr:** Zobrazí zprávy podle požadovaného typu zprávy.
- ▶ **Informace o zprávě:** Můžete si prohlédnout druh zprávy, předmět, odesílatele, datum a čas a kdy byla zpráva uložena.

## Šablony

Menu 5.7

### SMS

(Menu 5.7.1)

Pomocí levé kontextové klávesy [Menu] můžete přidávat, upravovat nebo mazat často používané užitečné fráze.

#### Poznámka

V závislosti na nastavení provedená vaším operátorem se tyto užitečné fráze uloží jako výchozí.

### MMS

(Menu 5.7.2)

Při vytváření multimediálních zpráv můžete vytvářet, upravovat a prohlížet dostupné šablony. Výchozích šablon je pět (Narozeniny, Pozdrav, Dovolená, Děkuji, Omlouvám se).

K dispozici jsou následující volby.

- ▶ **Přidat:** Můžete vytvořit novou multimediální šablonu.
- ▶ **Psát MMS:** Vytvoří multimediální zprávu s vybranou šablonou.
- ▶ **Upravit:** Upraví vybranou šablonu.

### Emotikony

Menu 5.8

Můžete přidávat, upravovat a mazat emotikony. Můžete vložit emotikon, který jste si oblíbili při psaní zprávy. Po stisknutí potvrzovací klávesy se zobrazí emotikon.

## Nastavení zpráv

Menu 5.9

### SMS

(Menu 5.9.1)

Můžete konfigurovat volby týkající se textové zprávy.

1. **Středisko SMS:** Zadejte adresu Střediska pro textové zprávy.
2. **Doručenka:** Aktivací této volby můžete ověřit, zda se zpráva v pořádku odeslala.
3. **Doba platnosti:** Tato síťová služba vám umožňuje nastavit, jak dlouho budou vaše textové zprávy uloženy v centru zpráv.
4. **Typy zpráv: Text, Hlas, Fax, X.400, E-mail**  
Typ zpráv je obvykle nastaven na **Text**. Textovou zprávu můžete převést do jiných formátů. Zda je tato funkce k dispozici, zjistíte u svého operátora.
5. **Kódování znaků: Automaticky/Výchozí abeceda/Unicode**

► **Automaticky:** Zpráva s jednobytovými znaky se běžně kóduje ve Výchozí abecedě (GSM7). Zpráva s dvoubytovými znaky se automaticky kóduje v Unicode (UCS2).

► **Výchozí abeceda:** Také zpráva s dvoubytovými znaky se kóduje do jednobytového kódování. Upozornění: Dvoubytové znaky s diakritikou se mohou převést do jednobytových znaků bez diakritiky.

► **Unicode:** Zpráva je kódována dvoubytově. Vezměte prosím na vědomí, že vám může být účtován dvojnásobný poplatek.

6. **Způsob odeslání dlouhého textu:** Vyberte dlouhou textovou zprávu jako Hromadnou SMS nebo MMS.

### MMS

(Menu 5.9.2)

Můžete konfigurovat volby týkající se multimediální zprávy.

- 1. Způsob přijetí:** Můžete nastavit režim přijímání pomocí Domácí sítě nebo Roamingové sítě. Pokud vyberete Automaticky, budete multimediální zprávy přijímat automaticky. Pokud vyberete Ručně, obdržíte pouze oznámení o zprávě do složky Příchozí zprávy a máte možnost se rozhodnout, zda multimediální zprávu stáhnete či nikoli.
- 2. Doručeníka:** Umožňuje rozhodnout, zda budete od příjemce žádat potvrzovací e-mail o doručení nebo zda povolíte odeslání potvrzovacího e-mailu o doručení odesílateli.
  - ▶ **Vyžádat hlášení:** Určuje, zda budete žádat potvrzovací e-mail o doručení multimediální zprávy.
  - ▶ **Povolit hlášení:** Určuje, zda povolíte odeslání potvrzovacího e-mailu o doručení v odpověď na žádost o potvrzovací e-mail o doručení.
- 3. Čistá odpověď:** Umožňuje určit, zda budete od příjemce žádat potvrzovací e-mail o přečtení nebo zda povolíte odeslání potvrzovacího e-mailu o přečtení odesílateli.
  - ▶ **Vyžádat odpověď:** Určuje, zda budete žádat potvrzovací e-mail o přečtení multimediální zprávy.
  - ▶ **Povolit odpověď:** Určuje, zda povolíte odeslání potvrzovacího e-mailu o přečtení v odpověď na žádost o potvrzovací e-mail o přečtení.
- 4. Priorita:** Můžete vybrat priority zprávy (Nízká, Normální a Vysoká).
- 5. Doba platnosti:** Umožňuje konfigurovat dobu platnosti zprávy při přenosu multimediální zprávy. Zpráva bude na serveru multimediální služby uložena pouze po určenou dobu.
- 6. Trvání snímku:** Umožňuje konfigurovat trvání každé stránky při psaní zprávy.


- 7. Režim vytváření:** Umožňuje vybrat typ obsahu podporovaný MMS. (Důvěrný, Upozornění, Volné)
- 8. Doba doručení:** Konfiguruje dobu doručení zprávy příjemci. Středisko multimediálních zpráv doručí zprávu po uplynutí doby doručení.
- 9. Středisko MMS:** Umožňuje konfigurovat informace o síti, například MMSC a WAP brány, pro odesílání multimediálních zpráv. S pomocí levé kontextové klávesy [Menu] můžete aktivovat, přidat, prohlížet si nebo smazat profil. Aktuálně nastavenou hodnotou je zaškrtnuté jméno profilu. S pomocí tohoto menu si můžete prohlížet nebo upravovat obsah.
  - ▶ **Název:** Název profilu.
  - ▶ **MMSC URL:** Zadejte adresu URL střediska multimediálních zpráv.
  - ▶ **MMS Proxy:** Zadejte adresu a číslo portu WAP brány.
  - ▶ **Režim připojení:** Vyberte jeden z režimů připojení. (TCP s proxy, TCP bez proxy, UDP)

- ▶ **Přístupový bod:** Uvedte název přístupového bodu. (viz nastavení WAP připojení)

Stisknutím pravé kontextové klávesy [Uložit] uložíte změny a dokončíte nastavení Střediska multimediálních zpráv.

## Email (Menu 5.9.3)

Můžete konfigurovat nastavení pro příjem a přenos e-mailů.

- 1. Pošta Vodafone:** Přístup k Poště Vodafone. (Poznámka: Tato služba není dostupná ve všech zemích. Další informace vám poskytne váš operátor.)
- 2. E-mailové účty:** Můžete vytvořit nebo konfigurovat e-mailový účet včetně e-mailového serveru a uživatelského ID. Stisknutím levé kontextové klávesy [možnost] – 2. Upravit můžete upravit vybraný e-mailový účet. Pomocí  si můžete vybrat e-mailový účet, který se použije pro odeslání e-mailu. Následující funkce můžete zvolit pomocí levé kontextové klávesy [Menu].

- ▶ **Přidat:** Vytvořit nový e-mailový účet.
  - ▶ **Upravit:** Upravit vybraný e-mailový účet.
  - ▶ **Zobrazit:** Zobrazí vybranou poštu.
  - ▶ **Označit/Zrušit označení:** Tuto volbu použijte pro smazání více položek.
  - ▶ **Smazat:** Smaže vybraný e-mailový účet. Smažou se všechny e-maily v tomto účtu.
3. **Povolit odpověď na Email:** Určuje, zda povolíte odeslání potvrzovacího e-mailu o přečtení v odpověď na žádost o potvrzovací e-mail o přečtení.
  4. **Požadovat odpověď:** Zapnuto/ Vypnuto.
  5. **Interval načtení:** Můžete konfigurovat interval pro automatické načítání e-mailu z příchozího poštovního serveru. Jakmile přijde nový e-mail, objeví se v horní části obrazovky ikona. Můžete nastavit časový interval automatického příjmu na Vypnuto, 15 minut, 30 minut, 1 hodina, 2 hodiny, 4 hodiny nebo 8 hodin. Vezměte prosím na vědomí, že používání funkce Načíst interval může být dále zpoplatněno.
  6. **Zahrnout původní zprávu:** Určuje, zda se při přeposílání zprávy nebo v odpovědi na zprávu zahrne původní zpráva.
  7. **Zahrnout přílohu:** Určuje, zda se při přeposílání zahrne soubor s přílohou.
  8. **Automatické načítání při roamingu:** Automaticky načte e-mailový účet, když se pohybujete v roamingové oblasti.
  9. **Upozornění na nový e-mail:** Při doručení nového e-mailu obdržíte oznámení.
  10. **Podpis:** Můžete nastavit textový podpis, který se bude připojovat na konec e-mailu. Nakonfigurovaný text podpisu se automaticky nebo ručně připojuje na konec e-mailu při jeho odeslání.

11. **Priorita:** Můžete vybrat prioritu zpráv (Nízká, Normální a Vysoká).

## Vytvoření nového e-mailového účtu

1. Zvolte Přidat v možnostech menu E-mailový účet.
2. Je třeba nakonfigurovat následující položky.
3. Konfiguraci e-mailového účtu dokončete stisknutím prostřední kontextové klávesy [Uložit].

## Úprava e-mailového účtu

1. Ze seznamu e-mailových účtů vyberte požadovaný e-mailový účet a stiskněte levou kontextovou klávesu [Menu] a následně zvolte Upravit.
2. Přesouváním kurzoru nahoru a dolů můžete upravovat jednotlivá pole.

Název	Zadejte název.
Uživatelské jméno	Zadejte jméno uživatele e-mailového účtu.
Heslo	Zadejte heslo pro e-mailový účet.
E-mailová adresa	Zadejte e-mailovou adresu pro odchozí poštu.
E-mail pro odpověď	Zadejte e-mailovou adresu odpovědi na váš e-mail.
Server odchozí pošty	Zadejte server odchozí pošty.
Server přích. pošty	Zadejte server příchozí pošty.
Maximální velikost pro přijetí	Zvolte maximální velikost příchozího e-mailu pomocí levé kontextové klávesy. Povolená maximální velikost pro přijetí je 1 MB.
Typ schránky	Pomocí levé kontextové klávesy vyberte typ schránky příchozí pošty buď POP3 nebo IMAP4.
Uložit na server	Pomocí levé kontextové klávesy určete, zda se má nebo nemá na serveru příchozí pošty uchovávat kopie zpráv. Je-li typ schránky nastaven na IMAP4, uchovávají se kopie zpráv na serveru vždy.

Od. poštu ul.do sl.	Vyberte místo pro uložení odeslané pošty (je-li typ schránky nastaven na IMAP4). Je-li typ schránky POP3, ukládá se odeslaná pošta vždy v přístroji.
Přístupové body	Vyberte přístupový bod pro připojení do Internetu. Pomocí levé kontextové klávesy můžete vybrat nakonfigurovaný přístupový bod.
Načíst interval	Nastaví interval načítání pošty ze serveru.
Rozšířené nastavení	Nastaví konfiguraci připojení k serveru.
Číslo portu SMTP	Zadejte číslo portu poštovního serveru. Obvykle má SMTP (číslo portu serveru odchozí pošty) hodnotu 25.
Port serveru přichází pošty	Zadejte číslo portu poštovního serveru. Server přichází pošty má obvykle číslo portu 110 (POP3) nebo 143 (IMAP4).

Ověření SMTP	Pomocí levé kontextové klávesy určete, zda bude server odchozí pošty vyžadovat ověření nebo autentikaci. Je-li ověření SMTP nastaveno na Zap, můžete zadat uživatelské jméno a heslo pro SMTP ověření.
Uživatelské jméno SMTP	Zadání uživatelského jména SMTP pro vyžádané ověření.
Heslo SMTP	Zadání hesla SMTP pro vyžádané ověření.
Zab. přihl. APOP	Pomocí levé kontextové klávesy určete, zda se aktivuje zabezpečené přihlášení APOP. Je-li typ schránky IMAP4, zabezpečené přihlášení APOP je vždy nastaveno na YYP.

3. Konfiguraci e-mailového účtu dokončete stisknutím prostřední kontextové klávesy [Uložit].

## Hlasová schránka (Menu 5.9.4)

Můžete nastavit možnosti přijímání hlasové pošty.


## Servisní zpráva (Menu 5.9.5)

Můžete nastavit možnosti jako například Push (SI/SL) zprávy.

- ▶ **Servisní zpráva:** Pokud tuto možnost nastavíte na Zapnuto, budou přijaty všechny zprávy.
- ▶ **Zabezpečení služeb:** Můžete upravovat veškeré možnosti přijímání Push (SI/SL) zpráv.
  - **Nastavení zabezpečení:**
  - **Důvěryhodný seznam:** Nastavíte-li Zapnuto, telefon ověří důvěryhodnost zprávy podle seznamu Důvěryhodných zpráv.
  - **Nedůvěryhodný seznam:** Nastavíte-li Zapnuto, telefon ověří důvěryhodnost zprávy podle seznamu Nedůvěryhodných zpráv.
- **Aktualizace:** Nastavíte-li Zapnuto, můžete aktualizovat seznam Důvěryhodných/ nedůvěryhodných zpráv o adresu serveru zprávy. Volnou možností v nabídce můžete zvolit, který seznam chcete aktualizovat. Kromě toho se v seznamu Důvěryhodných/ nedůvěryhodných zpráv aktualizuje SMSC a původní adresa serveru.
- **Důvěryhodný seznam:** Je platný pouze v případě, je-li stav „Zabezpečení služeb – Důvěryhodný seznam“ nastaven na Zapnuto. Tento seznam uvádí seznam platných SMSC a původních adres serveru (OA). Zpráva s jinou hodnotou SMSC nebo OA adresy bude zahozena.
- **Nedůvěryhodný seznam:** Je platný pouze v případě, je-li stav „Zabezpečení služeb – Nedůvěryhodný seznam“ nastaven na Zapnuto. Zpráva, která odpovídá nastaveným hodnotám (SMSC a původní adresa) je neplatná. Zpráva,

která má jinou hodnotu než SMSC nebo původní adresu bude přijata.

## Info služba (Menu 5.9.6)

- ▶ **Informační služba:** Můžete nastavit stav přijímání těchto zpráv.
- ▶ **Kanály:** Můžete přidávat nebo upravovat kanály.
- ▶ **Jazyky:** Stisknutím tlačítka  můžete zvolit jazyk. Potom se zpráva info služby zobrazí ve zvoleném jazyce.

# Moje soubory [Menu 6]

## Obrázky

### Menu 6.1

Složka Obrázky obsahuje odkazy na stahování obrázků přes internet (Stáhnout obrázky) a Výchozí obrázky. Obrázky pořízené pomocí fotoaparátu se uloží do složky Obrázky, ale i vy sami můžete vytvářet další složky, do kterých si obrázky rozřídíte. Obrázky můžete také odeslat ostatním.

Pro zobrazení obrázku v detailu stisknete potvrzovací klávesu.

Po vybrání souboru Stáhnout obrázky a po stisknutí levé kontextové klávesy [Menu] se zobrazí následující volby.

▶ **Odeslat:** Vybraný obrázek lze odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth.

▶ **Použit jako**

- **Tapeta:** Můžete nastavit obrázek jako téma domovské obrazovky.

- **Obrázek kontaktů:** Můžete nastavit obrázek vybraných položek v kontaktech. Při příchozím hovoru se zobrazí obrázek uložený v kontaktech.

- **Spuštění:** Můžete nastavit obrázek jako téma spouštěcí obrazovky.

- **Vypnutí:** Můžete nastavit obrázek jako téma obrazovky při vypínání.

- **Odchozí hovor:** Můžete nastavit zvukový soubor jako vyzváněcí tón při vypnutí přístroje.

▶ **Přesunout:** Umožňuje přesunout soubor do jiné složky.

▶ **Kopírovat:** Umožňuje zkopírovat soubor do jiné složky.

▶ **Smazat:** Smaže vybrané obrázky.

▶ **Označit/Zrušit označení:** Pomocí funkce Označit můžete odesílat, mazat, přesunovat a kopírovat několik souborů najednou.

▶ **Soubor**

- **Přejmenovat:** Můžete přejmenovat obrázek.

- **Upravit:** Umožňuje úpravu obrázku.

### Poznámka

Ve výchozí složce obrázků se nezobrazuje menu Upravit.

- **Informace o souboru:**  
Zobrazí informace o vybraném obrazovém souboru.
- ▶ **Vytvořit novou složku:**  
V aktuálně vybrané složce můžete vytvořit novou složku.
- ▶ **Prezentace:** Obrázky lze zobrazit formou prezentace.
- ▶ **Seřadit podle:** Soubory můžete seřadit podle Datum, Typ nebo Jméno.
- ▶ **Náhled tabulky:** Obrázky můžete prohlížet v zobrazení seznamu nebo tabulky.
- ▶ **Výběr paměti:** Můžete zobrazit stav paměti (v přístroji nebo na externí paměťové kartě).
- ▶ **Odeslat:** Vybraný obrázek lze odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth.
- ▶ **Použít jako**
  - **Vyzvánění hlasového hovoru:** Můžete nastavit zvukový soubor jako vyzváněcí tón pro příchozí hlasový hovor.
  - **Vyzvánění videohovoru:** Můžete nastavit zvukový soubor jako vyzváněcí tón pro příchozí videohovor.
  - **Tón zprávy:** Můžete nastavit zvukový soubor jako vyzváněcí tón pro příchozí zprávu.
  - **Spuštění:** Můžete nastavit zvukový soubor jako vyzváněcí tón při spuštění přístroje.
  - **Vypnutí:** Můžete nastavit zvukový soubor jako vyzváněcí tón při vypnutí přístroje.
- ▶ **Přesunout:** Přesune soubor do paměti v přístroji nebo do externí paměti.
- ▶ **Kopírovat:** Zkopíruje soubor do paměti v přístroji nebo do externí paměti.

## Zvuky

### Menu 6.2

Složka Zvuky obsahuje odkazy pro stahování vyzváněcích tónů a hudby a také složky s Výchozími zvuky a Hlasovými záznamy. Zde můžete spravovat, odesílat a nastavovat zvuky jako vyzváněcí tóny.

Po vybrání souboru a po stisknutí levé kontextové klávesy [Menu] se zobrazí následující možnosti.

# Moje soubory

- ▶ **Smazat:** Smaže vybraná videa.
- ▶ **Označit/Zrušit označení:** Pomocí funkce Označit můžete odesílat, mazat, přesunovat a kopírovat několik souborů najednou.
- ▶ **Soubor**
  - **Přejmenovat:** Můžete přejmenovat video.
  - **Informace o souboru:** Zobrazí informace o vybraném video souboru.
- ▶ **Vytvořit novou:** Můžete vytvořit novou složku.
- ▶ **Seřadit podle:** Soubory můžete seřadit podle Datum, Typ nebo Jméno.
- ▶ **Výběr paměti:** Můžete zobrazit stav paměti (v přístroji nebo na externí paměťové kartě).

## Video

### Menu 6.3

Zde můžete spravovat a odesílat stažené nebo nahrané video klipy.

Po stisknutí Připojit  můžete aktivovat video soubor.

Pomocí levé kontextové klávesy [Menu] jsou v seznamu Videá dostupné následující funkce.





- ▶ **Odeslat:** Vybraný video klip můžete odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth, pokud není chráněný technologií Digital Rights Management (DRM).
- ▶ **Použít jako:** Můžete nastavit video soubor jako vyzvánění hlasového hovoru nebo vyzvánění videohovoru.
- ▶ **Přesunout:** Přesune soubor do paměti v přístroji nebo do externí paměti.
- ▶ **Kopírovat:** Zkopíruje soubor do paměti v přístroji nebo do externí paměti.
- ▶ **Smazat:** Smaže vybraná videa.
- ▶ **Označit/Zrušit označení:** Pomocí funkce Označit můžete odesílat, mazat, přesunovat a kopírovat několik souborů najednou.
- ▶ **Soubor**
  - **Přejmenovat:** Můžete přejmenovat video.

### - Informace o souboru:


Zobrazí informace o vybraném video souboru.


- ▶ **Vytvořit novou složku:** Můžete vytvořit novou složku.
- ▶ **Seřadit podle:** Soubory můžete seřadit podle názvu, data nebo typu souboru.
- ▶ **Náhled tabulky:** Obrázky můžete prohlížet v zobrazení seznamu nebo tabulky.
- ▶ **Výběr paměti:** Zobrazí stav paměti (v přístroji nebo na externí paměťové kartě).

Můžete zobrazit video pomocí videopřehrávače. Video soubory se zobrazí v seznamu jako miniatury.

Pomocí  /  /  /  můžete vybrat požadované video. Pro zobrazení nahraného videa vyberte požadované video a zvolte Přehrát.

Volbou levé kontextové klávesy [Odeslat] můžete vybrané video připojit ke zprávě, e-mailu nebo odeslat prostřednictvím Bluetooth.

Je-li vybraná možnost 1. Přehrát, přehraje se video klip pomocí programu Media Player. Přehrávání zastavíte stisknutím  během

přehrávání. Přehrávání znovu spustíte opětovným stisknutím .

Pro zachycení obrazovky zastavte přehrávání a stiskněte pravou kontextovou klávesu [Sejmout].


Aktuálně přehrávaný soubor lze zobrazit na celé obrazovce stisknutím pravé kontextové klávesy během přehrávání.

Na předchozí velikost obrazovky se vrátíte opětovným stisknutím pravé kontextové klávesy v celoobrazovkovém režimu.

Při prohlížení video klipů v programu Media Player jsou dostupné následující možnosti:

- ▶ **Na šířku:** Můžete zobrazit video v režimu širokého zobrazení.

### Poznámka

Stisknutím klávesy  si můžete prohlížet video v širokouhlém režimu.

- ▶ **Ztlumit:** Je-li Hlasitost nastavena na hodnotu větší než 0, aktivuje se režim Vypnutého zvuku. Je-li Hlasitost nastavena na hodnotu 0, aktivuje se režim Zapnutého zvuku.

# Moje soubory

- ▶ **Sejmout:** Můžete uložit obsah pozastavené obrazovky jako obrazový soubor (pouze v režimu Pauza).
- ▶ **Opakovat:** Můžete nastavit opakování (Vypnuto/Jeden/Vše).
- ▶ **Informace o souboru:** Můžete prohlížet informace o přehrávaných souborech (Název souboru, Velikost, Datum, Typ, Trvání, Ochrana).
- ▶ **Odeslat:** Video můžete odeslat prostřednictvím Zprávy, E-mailu nebo Bluetooth, pokud není soubor chráněn technologií Digital Rights Management (DRM).
- ▶ **Smazat:** Smaže vybraná videa.
- ▶ **Použít jako:** Můžete nastavit video soubor jako hlas vyzváněcího tónu nebo video vyzváněcího tónu. Toto menu závisí na obsahu.

## Hry a aplikace Menu 6.4

Pomocí tohoto menu si můžete snadno stahovat hry a další aplikace. Implicitně jsou zde dvě složky, Hry a Aplikace. Každá

z těchto složek obsahuje odkaz na stahování her nebo aplikací. Pamatujte, že používání těchto služeb může být zpoplatněno zvlášť. Složku vytvoříte pomocí levé kontextové klávesy [Menu].

## Ostatní Menu 6.5

V této složce se ukládají další soubory kromě obrázků, zvuků, videa, her a aplikací.

## Externí paměť Menu 6.6



Zakoupením volitelné externí paměťové karty microSD získáte nový prostor pro svůj obsah. Prostudujte si oddíl Používání paměťové karty microSD na straně 21 a 22, kde se dozvíte, jak vložit a vyjmout paměťovou kartu. Obsah můžete spravovat stejně jako ve svém telefonu.

# Organizér [Menu 7]

## Rychlé menu Menu 7.1



Do Rychlého menu můžete uložit funkce podle vlastního uvážení. Máte-li často používané funkce uloženy v Rychlém menu, můžete je rychle spustit jednoduchým stiskem klávesy.

## Budík Menu 7.2

Pokud nastavíte budík, objeví se na indikační liště . Zadaný alarm se rozezní v plánovaný čas. Po stisknutí  se alarm zastaví a je zrušen. Stiskněte levé kontextové tlačítko [Odložit] a zvuk alarmu se přeruší a zazní znovu po určené době přerušení. Můžete nastavit až 5 alarmů.

1. V seznamu alarmů si vyberte, který alarm chcete upravit. Pokud není nadefinován žádný alarm, stiskněte pravou kontextovou klávesu [Nový] a přidejte nový alarm.
2. **Nastavit/Zrušit alarm:** Pomocí této možnosti můžete nastavit nebo zrušit alarm a také vybrat čas buzení..

3. **Zadání času alarmu:** V polích pro hodiny a minuty zadejte požadovaný čas buzení. Pokud je v telefonu nastaven 12hodinový časový formát, tak vyberte „AM“ nebo „PM“.

4. **Vyberte režim opakování:** Pomocí  /  vyberte požadovaný režim opakování, který lze rovněž vybrat ze seznamu po stisknutí levé kontextové klávesy [Seznam].

5. **Vybrat zvonek:** Stisknutím levé kontextové klávesy [Upravit] otevřete seznam a vyberte zvonek, který zazní v čase alarmu.

6. **Zadat poznámku:** Zadejte název alarmu.

7. **Odložit:** Můžete nastavit dobu přerušení alarmu.

8. Po skončení nastavování alarmu stiskněte levou kontextovou klávesu [Uložit].

### Upozornění

Budík zazní i tehdy, když bude telefon vypnutý.

## Kalendář

Menu 7.3

### Dotazy a prohledávání v úlohách

#### 1. Prohlížení podle měsíců

Své naplánované úkoly si můžete prohlížet po měsících. Kurzor se nachází na aktuálním datu a zaregistrované datum je označeno. Plán uložený k datu označenému kurzorem je vyznačen šedým polem. Stisknutím klávesové zkratky **1** se přesunete do předchozího roku, stisknutím **3** se přesunete do následujícího roku a stisknutím **5** se přesunete na dnešní den. Stisknutím **7** se přesunete do předchozího měsíce a stisknutím **9** do následujícího měsíce. Stisknutím **4** se přesunete na týdenní kalendář. Datum můžete posouvat pomocí **↑** / **↓** / **←** / **→**.

#### 2. Podrobné prohlížení

Můžete nahlédnout do detailního plánu, tj. celý obsah uživatelsky nakonfigurovaného plánu. Plán můžete pomocí levé kontextové

klávesy [Menu] odeslat do jiného telefonu nebo na Internet prostřednictvím SMS (textová zpráva) nebo MMS (multimediální zpráva) nebo e-mailem případně přes Bluetooth.

#### Přidat novou událost

Můžete přidat novou událost. Můžete nastavit datum začátku, datum konce, čas začátku, čas konce, obsah, typ události, opakování, alarm plánu.

- ▶ **Nastavit kateg.:** Schůzka, Výročí, Narozeniny
- ▶ **Nastavit opakování:** Bez opakování, Denne, Tydne, Mesicne, Rocne, Uzivzatske nastaveni.
- ▶ **Nastavit alarm:** Zadny alarm, Vcas, 15min.pred, 30min.pred, 1 hodinu pred, 1den pred, 3 dny pred, 1 tyden pred.

#### Smazat všechny plány

Touto funkcí můžete smazat obsah všech uložených plánů.

## Nastavit dovolenou

Můžete uživatelsky nastavit nebo zrušit dovolenou. Stiskněte levou kontextovou klávesu [Menu] a zvolte Nastavit dovolenou. Vybrané datum se zobrazí červeně.

Dovolenou zrušíte stisknutím levé kontextové klávesy [Menu] a volbou položky Smazat dovolenou.

## Upozornění na plán

Jestliže uživatel provedl nastavení alarmu, zazní zvuk zadaného alarmu. Jestliže je čas upozornění nastaven před časem začátku plánu, můžete alarm nastavit znovu.

## Úkoly

### Menu 7.4

Zde můžete zobrazovat, upravovat a přidávat úkoly, které chcete splnit. Úlohy se zobrazují v pořadí podle data. Splněné a nesplněné úlohy se zobrazují odlišně.

## Přidat novou událost

Úkol přidáte stisknutím levé kontextové klávesy [Menu] v seznamu Úkolů a volbou položky Přidat novou událost. Zadejte datum, popis a prioritu úkolu. Po dokončení zadávání údajů

stiskněte levou kontextovou klávesu [Uložit] a nový úkol se uloží.

## Zobrazení podrobností a úpravy

Pokud chcete zobrazit podrobný obsah úkolu, umístíte kurzor na požadovanou položku v seznamu úkolů a stisknete prostřední klávesu. Pomocí levé kontextové klávesy [Menu] můžete odeslat, upravovat nebo smazat úkol.

## Nastavit stav úlohy

Úkoly nastavené jako dokončené se v seznamu Úkolů zobrazí přeškrtnuté a pod nedokončenými úkoly. Můžete nastavit Dokončené úkoly jako Nedokončené volbou Možností.

## Hry a aplikace

### Menu 7.5

Pomocí tohoto menu si můžete snadno stahovat hry a další aplikace. Implicitně jsou zde dvě složky, Hry a Aplikace. Každá z těchto složek obsahuje odkaz na stahování her nebo aplikací. Pamatujte, že používání těchto služeb může být dále zpoplatněno.

Složku vytvoříte pomocí levé kontextové klávesy [Menu].

## Poznámky


Menu 7.6

Pomocí funkcí pro správu poznámek si můžete zobrazovat poznámky, pracovat s uloženými poznámkami a přidávat nové poznámky.

### Nová poznámka

Pokud chcete přidat novou poznámku, stiskněte pravou kontextovou klávesu [Přidat] nebo [Přidat novou] v Menu. Zadejte obsah poznámky. Stisknutím prostřední klávesy [Uložit] můžete poznámku uložit do seznamu.




### Úpravy a vymazání poznámky

Zvýrazněte požadovanou poznámku a stisknutím  si zobrazte její obsah. Pomocí levé kontextové klávesy [Menu] můžete upravovat nebo vymazat obsah poznámky. Na obrazovku správy poznámek se můžete vrátit stisknutím pravé kontextové klávesy [Zpět]. Pomocí možnosti Označit/Zrušit označení můžete vybrat několik poznámek nebo všechny poznámky a poté je smazat volbou Smazat.

## Záznam hlasu

Menu 7.7

1. Stisknutím levé kontextové klávesy [Menu] zobrazíte před nahráváním místní menu.
2. Na požadovanou položku menu se přesuňte pomocí  /  a stiskněte  .
  - ▶ **Trvání:** Můžete nastavit délku nahrávání na velikost zprávy MMS, 30 sekund nebo 1 minutu.
  - ▶ **Kvalita:** Můžete vybrat kvalitu nahrávání Maximální kvalitu, Vysokou kvalitu a Normální.
  - ▶ **Přejít na moje zvuky:** Otevře složku Hlasové záznamy ve Zvucích.
3. Stisknutím  začne nahrávání. Jakmile začne nahrávání, zobrazí se na LCD displeji délka nahrávání. Nahrávání přerušíte stisknutím Zpět.
4. Po dokončení opustíte nahrávání stisknutím  Nahráný soubor se automaticky uloží do složky Hlasové záznamy v Moje soubory. Po opětovném stisknutí  se začne nahrávat nový záznam hlasu.

5. Stisknutím levé kontextové klávesy vybírejte různé možnosti záznamu hlasu.
6. Na požadované menu se přesuňte pomocí  /  a stiskněte  .
  - ▶ **Prehr.:** Můžete přehrát záznam hlasu.
  - ▶ **Odeslat:** Odeslání nahraného souboru. Pomocí  /  vyberte Zprávu, E-mail nebo Bluetooth a stiskněte  .
  - ▶ **Soubory:** Můžete změnit název souboru a prohlížet informace.
  - ▶ **Smazat:** Vyberte toto menu pro smazání nahraného souboru.
  - ▶ **Použit jako:** Můžete nastavit nahraný soubor jako vyzvánění hlasového hovoru nebo vyzvánění videohovoru.
  - ▶ **Přejít na moje zvuky:** Otevře složku Hlasové záznamy v Moje soubory.
7. Stisknutím pravé kontextové klávesy uzavřete místní okno podmenu.

## Soukromá poznámka


Menu 7.8

Můžete napsat soukromou poznámku a chránit ji před nepovolanými osobami. Pro použití tohoto menu zadejte bezpečnostní kód.

### Přidat soukromou poznámku

Pokud chcete přidat novou poznámku, stiskněte levou kontextovou klávesu [Přidat] nebo [Menu]. Zadejte obsah poznámky. Stisknutím střední klávesy [Uložit] můžete poznámku uložit do seznamu.

### Úpravy a vymazání soukromé poznámky

Zvýrazněte požadovanou poznámku a stisknutím  si zobrazte její obsah. Pomocí levé kontextové klávesy [Menu] můžete upravovat nebo vymazat obsah poznámky. Na obrazovku správy poznámek se můžete vrátit stisknutím pravé kontextové klávesy [Zpět].








Pomocí možnosti Označit/Zrušit označení můžete vybrat několik

# Organizér

poznámek nebo všechny poznámky a poté je smazat volbou Smazat.

## Kalkulačka Menu 7.9

Modul kalkulačky vám umožňuje provádět základní aritmetické operace, jako je sčítání, odečítání, násobení a dělení plus několik vědeckých funkcí (sin, cos, tan, log, ln, exp, sqrt, deg, rad).

1. Stiskněte levé kontextové tlačítko [Menu].
2. Vyberte příslušnou funkci.  
Čísla můžete zadávat pomocí číselných kláves a operátory pomocí směrových kláves  /  /  / . Stisknutím  můžete zadat desetinnou čárku. Kdykoliv stisknete , budou se znaky jeden po druhém mazat v obráceném pořadí. Kdykoliv stisknete , všechny znaky se najednou smažou v obráceném pořadí.

Po dokončení výpočtu a zobrazení výsledku na obrazovce lze stisknutím symbolu uložit výsledek do tohoto symbolu a pokračovat ve výpočtech.

## Převodník jednotek

Menu 7.0

S pomocí tohoto menu můžete převádět Menu, Povrch, Délku, Hmotnost, Teplotu, Objem a Rychlost.

1. Zvolte menu jednotky.
2. S pomocí této volby si mohou uživatelé nastavit i směnný kurz.
3. Zadejte aktuální směnný kurz. Nyní můžete převádět z jedné měny do druhé.
4. Můžete prohlížet hodnotu v dané jednotce.
5. Pro vymazání pole pro zadávání hodnot stiskněte [Vynulovat].
6. Převodník opustíte tlačítkem [Zpět].

## Světový čas Menu 7.\*

Funkce Světového času poskytuje informace o času ve velkých městech po celém světě.

1. Město můžete vybrat jako základnu pomocí levé kontextové klávesy Menu – Přidat město. Stiskněte levé kontextové tlačítko [Mapa].

2. Město můžete změnit pomocí levé kontextové klávesy Menu – Změnit časové pásmo.
3. Letní čas můžete nastavit pomocí levé kontextové klávesy Menu – Letní čas.
4. Režim ručičkových hodin můžete vybrat pomocí Menu – Ručičkové hodiny.

## Nastavení organizéru

Menu 7.#

### Nastavení kalendáře

(Menu 7.#.1)

Můžete nastavit konfiguraci pro zobrazení kalendáře.

- ▶ **Výchozí zobrazení:** Výchozí zobrazení kalendáře můžete nastavit jako Zobrazit po měsících nebo Zobrazit po týdnech.
- ▶ **Týdenní doba zahájení:** 1:00, 2:00, 3:00, 4:00, 5:00, 6:00, 7:00, 8:00, 9:00, 10:00, 11:00, 12:00

- ▶ **Týden začíná v:** Můžete nastavit výchozí den začátku týdne buď Neděle nebo Pondělí.

### Zalohovat kalendář a ukol (Menu 7.#.2)

Když vložíte externí paměť, můžete v telefonu vytvořit zálohovací soubory pro kalendář nebo úkoly uložené v telefonu.

### Obnovit kalendář a ukol (Menu 7.#.3)

Když vložíte externí paměť, můžete v telefonu obnovit zálohovací soubory pro kalendář nebo úkoly.

### Informace o paměti (Menu 7.#.4)

Můžete zobrazit informaci o dostupné paměti pro Kalendář, Úkoly, Poznámky a Soukromé poznámky.

# Kontakty [Menu 8]

## Přidat nový Menu 8.1

Zde můžete zapsat novou adresu kontaktu. Můžete zadat jméno, různá telefonní čísla a e-mailové adresy nového kontaktu. Kontakt můžete přiřadit do skupin, vložit do něj obrázek nebo avatar, přiřadit mu určitý vyzváněcí tón nebo zadat poznámku pro kontakt. Další dostupná pole jsou Adresa domovské stránky, Domácí adresa, Název společnosti, Pracovní zařazení a Adresa společnosti. Můžete zadávat a spravovat adresy kontaktů v závislosti na využití paměti.

## Seznam kontaktů Menu 8.2

Umožňuje prohledávat adresy kontaktů. Vyhledávací operace používá jako výchozí kritérium vlastní jméno. Aktuální způsob hledání a nalezené záznamy se zobrazí v okně Vyhledávání. Na vybrané telefonní číslo můžete zavolat nebo poslat zprávu. Kontakty lze vyhledávat podle telefonního čísla nebo podle informace o skupině.

## Upozornění

V menu Nastavení lze vyhledávat podle příjmení.


## Skupiny Menu 8.3

Pomocí tohoto menu můžete spravovat informace o skupině (uložené v přístroji nebo na USIM kartě). V paměti přístroje je 5 výchozích skupin: Rodina, Přátelé, Kolegové, Škola a VIP. Můžete přidávat, upravovat a mazat skupiny. Není-li u čísla určen vyzváněcí tón, zazní při volání z tohoto čísla vyzváněcí tón přiřazený skupině, do které číslo náleží.

## Rychlé volby Menu 8.4

Pomocí tohoto menu můžete spravovat nastavení rychlé volby. Rychlé volby jsou nakonfigurovány na klávesy 2–9. Můžete určit rychlé vytáčení až pro 5 adres kontaktů, jedna adresa kontaktu může mít několik voleb rychlého vytáčení.

## Čísla volání asistenční služby Menu 8.5

Můžete zobrazit seznam Čísel volání asistenční služby (SDN) přidělená vaším operátorem (je-li podporován USIM kartou). Tato čísla zahrnují tísňové volání, informace o telefonních číslech a hlasovou poštu. Po výběru číslo služby vytočíte stisknutím .

## Vlastní číslo Menu 8.6

Umožňuje zobrazit vaše telefonní číslo v USIM kartě. Používaná vlastní čísla můžete uložit v USIM kartě.

## Moje vizitka Menu 8.7

Stisknutím levé kontextové klávesy Přidat můžete vytvořit vlastní vizitku. Po zadání jména, čísla, e-mailu a obrázku můžete vizitku použít při zasílání zprávy.

## Nastavení kontaktu Menu 8.8

### Zobrazení kontaktů (Menu 8.8.1)

- ▶ **Umístění kontaktů:** Vyberte, které informace o kontaktu se budou zobrazovat (z paměti přístroje, z USIM karty nebo z obou). Výchozí nastavení je Telefon a USIM.
- ▶ **Způsob zobrazení:** Můžete nastavit pořadí zobrazení podle jména.
- ▶ **Zobrazit obrázek:** Vyberte, zda se zobrazí obrázek/avatar.

### Kopírovat (Menu 8.8.2)

Kontakty můžete kopírovat z paměti telefonu do USIM karty nebo z USIM karty do paměti telefonu. Můžete najednou kopírovat všechny položky nebo vybrané položky.

### Přesunout (Menu 8.8.3)

Kontakty můžete přesunout z paměti telefonu do USIM karty

# Kontakty

nebo z USIM karty do paměti telefonu. Můžete najednou přesunout všechny položky nebo vybrané položky.

## Zálohovat kontakty (Menu 8.8.4)

Všechna data telefonního seznamu v přístroji můžete uložit na paměťovou kartu formátováním vcard.

## Obnovit kontakty (Menu 8.8.5)

Všechna data telefonního seznamu na externí paměťové kartě můžete obnovit do přístroje formátováním vcard.

## Smazat kontakty (Menu 8.8.6)

Vymaže všechny informace o kontaktech. Můžete smazat všechny kontakty uložené v paměti mobilního telefonu i na USIM kartě.

## Informace o paměti (Menu 8.8.7)

V tomto menu můžete zkontrolovat stav paměti kontaktů.

# Výpis volání [Menu 9]

## Všechny hovory

Menu 9.1

Umožňuje vám zobrazit záznamy o zmeškaných, přijatých a volaných hovorech. Na číslo, které si v tomto seznamu vyberete, můžete zavolat nebo poslat zprávu. Toto číslo si také můžete uložit do seznamu kontaktů.

## Volaná čísla

Menu 9.2

Umožňuje zobrazit záznam o vytočeném hovoru, uskutečnit hovor, odeslat zprávu a uložit číslo do seznamu kontaktů.

## Přijaté hovory

Menu 9.3

Umožňuje zobrazit záznam o přijatém hovoru, uskutečnit hovor, odeslat zprávu a uložit číslo do seznamu kontaktů.

## Zmeškané hovory

Menu 9.4

Umožňuje zobrazit záznam o zmeškaném hovoru, uskutečnit hovor, odeslat zprávu a uložit číslo do seznamu kontaktů.

# USIM Tool Kit [Menu \*]

Toto menu (Menu \*) se může lišit v závislosti na tom, zda jsou na USIM kartě podpůrné služby SAT (například USIM Application Toolkit). Jestliže USIM karta podporuje SAT služby, bude v tomto menu název služby konkrétního operátora uložené na USIM kartě, například „Zvláštní“. V takovém případě si v informacích dodaných s USIM kartou prostudujte použití souvisejících voleb.

Jestliže USIM karta nepodporuje SAT služby, budou v tomto menu alarmy.

Informace o menu Budík naleznete na straně 70.

# Videohovor [Menu 0]

Pomocí tohoto menu můžete uskutečnit hovor videotelefonem.

1. Zadejte číslo, které si přejete vytočit.
  - ▶ Číslo můžete zadat klávesami.
  - ▶ Číslo můžete vyhledat v kontaktech pomocí levé kontextové klávesy [Menu].
2. Pro uskutečnění videohovoru stisknete prostřední klávesu [Videohovor].

## Během videohovoru

Při hovoru videotelefonem obrazovka ukazuje jméno kontaktu a délku hovoru, obrázek kontaktu, indikaci hlasitosti, panel ovládání obrazu a váš obraz.

Stisknutím levého kontextového tlačítka [Menu] lze vstupovat na následující menu možností.

- ▶ Hovor telefonem <-> Hover Bluetooth
- ▶ Pokracovat <-> Pridrzet
- ▶ Nahrat
- ▶ Oddalit fotoaparát

- ▶ Zobrazit číslo odesílatele
- ▶ Prejit na kontakty
- ▶ Prejit na zpravy
- ▶ Ukončit hovor
- ▶ Nastavení

## Příchozí hovor videotelefonem

Jestliže je videohovor přijatý, zobrazí se informace o volajícím následovně.

- ▶ **Obrázek/Animace:** Zobrazí ID obrázku, grafický obrázek nakonfigurovaný v Kontaktech nebo výchozí animaci indikující příchozí hovor.
- ▶ **Jméno a číslo volajícího:** Zobrazí číslo účastníka, který volá. Je-li číslo uloženo v kontaktech, zobrazí se jméno z kontaktů.

ID obrázku a nastavení animace se používá v pořadí Kontakty, video soubor použitý ve Vyzváněcím tónu skupiny a video soubor použitý v Profilu.

# Videohovor

Pro příchozí videohovor lze také nastavit zvuk. Nastavení zvuku se používá v pořadí Kontakty, Vyzváněcí tón skupiny a Profil.

Příchozí hovor můžete přijmout stisknutím prostřední klávesy [Potvr.]. Příchozí hovor můžete také přijmout a zobrazit soukromý obrázek stisknutím levé kontextové klávesy [Soukromé].


Vyzvánění příchozího hovoru lze ztišit stisknutím pravé kontextové klávesy [Tichý].

Jakmile se vyzvánění ztiší, stiskněte pravou kontextovou klávesu [Odmít.] pro odmítnutí hovoru.

# Nastavení [Menu #]

## Profily

### Menu #.1

Můžete vybrat vyzváněcí tón nebo vibraci pro příchozí hovor a nastavit zvuk a hlasitost vyzváněcího tónu, tón kláves a zvukový efekt podle profilu. Dostupné profily jsou [Normální], [Tichý], [Pouze vibrace], [Venku], [Sluchátka], [Vlastní 1], [Vlastní 2] a [Vlastní 3]. Vyberte profil a aktivujte profil stisknutím . Po stisknutí levé kontextové klávesy [Menu] vyberte menu Upravit pro změnu konfigurace profilů [Normální], [Venku], [Pouze vibrace], [Sluchátka], [Vlastní 1], [Vlastní 2] a [Vlastní 3]. Pro každý profil vybraný k úpravě je dostupný jiný seznam možností.

### ► **Upozornění pomoci**

Tato volba určuje režim upozornění na příchozí hovor. Můžete vybrat [Vyzvánění], [Vibrace], [Tichý režim], [Vyzvánění a vibrace], [Vyzvánění po vibraci], [Maximální vyzvánění a vibrace].

### ► **Vyzváněcí melodie hlasového hovoru**

Můžete vybrat vyzváněcí tón pro příchozí hlasové hovory.

### ► **Vyzvánění videohovoru**

Můžete vybrat vyzváněcí tón pro příchozí videohovory.

### ► **Hlasitost**

Nastavte hlasitost vyzváněcího tónu.

### ► **Ohlášení zprávy**

Můžete nastavit, kolikrát vás telefon upozorní na přijatou zprávu, než si ji přečtete.

### ► **Tón zprávy**

Z vlastních nebo výchozích souborů můžete vybrat soubor, který telefon přehraje při přijetí zprávy.

### ► **Tón tlačítek**

Můžete vybrat soubor ze svých osobních souborů nebo z výchozích souborů, který se přehraje po přijetí zprávy.

### ► **Hlasitost tónu kláves**

Můžete nastavit hlasitost vybraného tónu kláves, a to ze 7 dostupných úrovní.

### ► **Tón vysunutí**

Vyberte požadovaný tón, který bude telefon vydávat při otevření a zavření telefonu.

# Nastavení

## ▶ Potvrzovací tón

Můžete nastavit potvrzovací tón, který telefon přehraje na potvrzení akcí.

## ▶ Zvuk při spuštění

Můžete nastavit efekt, který se přehraje při zapnutí telefonu.

## ▶ Vybrat zvuk při spuštění

Můžete vybrat soubor, který se přehraje při zapnutí telefonu.

## ▶ Zvuk při vypnutí

Můžete nastavit efekt, který se přehraje při vypnutí telefonu.

## ▶ Vybrat zvuk při vypnutí

Můžete vybrat soubor, který se přehraje při vypnutí telefonu.

## Telefon





Menu #.2

### Datum a čas





(Menu #.2.1)

Aktuální čas se automaticky nastavuje při registraci telefonu do sítě, uživatel však může nastavit čas a datum přímo pomocí tohoto menu. Čas nastavený uživatelem je platný pouze po dobu, po kterou je telefon zapnutý.

## Čas

1. V seznamu Datum a čas vyberte položku Čas a stiskněte .
2. Pomocí navigačních kláves se přesuňte na požadované pole Hodina, Minuta nebo Dopoledne/Odpoledne. (Pokud jste vybrali 12hodinový formát času)
3. Pomocí číselných kláves zadejte hodinu a měsíc.
4. Pomocí tlačítek   vyberte formát data.
5. Posuňte se dolů a vyberte formát indikace času, tj. Vypnuto, Kukačky, Zvonkohra.
6. Pro nastavení času stiskněte  prostřední kontextové tlačítko.

## Datum

1. V seznamu Datum a čas vyberte položku Datum a stiskněte .
2. Pomocí tlačítek   vyberte formát data.
3. Pomocí číselných kláves zadejte den, měsíc a rok.
4. Pro nastavení data stiskněte  prostřední kontextové tlačítko.

## Automatická aktualizace data a času

Pokud je zapnutá funkce Automatická aktualizace, bude se datum a čas automaticky upravovat podle aktuální časové zóny. Pokud je vybrána volba Nejprve potvrdit, potvrdí se změna času a data před automatickou aktualizací.

## Letní čas

Vyberte, zda chcete aktivovat funkci letního času. Můžete nastavit rozdíl letního času vybraného domovského města o 1 hodinu nebo 2 hodiny.

## Jazyk (Menu #.2.2)

Vyberte si jazyk zobrazení. Pomocí možnosti Automaticky můžete změnit zobrazovaný jazyk na jazyk podporovaný USIM kartou.

## Automatické zamknutí kláves (Menu #.2.3)

Při aktivaci této funkce se klávesy automaticky uzamknou po přednastavené časové prodlevě po zasunutí telefonu.

## Letový režim (Menu #.2.4)

Aktivujete-li Letový režim, můžete telefon používat bez připojování k 3G bezdrátové síti. Telefon ignoruje Bluetooth, signály 3G bezdrátového telefonu a FM rádia, uživatel přitom může nadále provádět úkony nevyžadující bezdrátové sítě. V letovém režimu nelze uskutečňovat hovory (ani tísňová volání) a také není možné používat další funkce vyžadující pokrytí síťovým signálem.

## Zabezpečení (Menu #.2.5)

### Požadavek kódu PIN

Je-li funkce zapnutá, budete při každém zapnutí telefonu vyzváni k zadání PIN.

# Nastavení

## Upozornění

- ▶ V okně zadání PIN kódu se na předchozí krok vrátíte stisknutím pravé kontextové klávesy.
- ▶ Po 3 nesprávných zadání PIN kódu dojde ke znehodnocení PIN kódu. V takovém případě musíte zadat kód PUK (PIN Unblock Key) a nastavit PIN kód znovu.
- ▶ Maximální počet pokusů o zadání PUK kódu je 10. (Poznámka: Pokud zadáte 10krát nesprávný PUK kód, dojde k zablokování USIM karty a kartu je nutné vyměnit.)
- ▶ Jestliže není možné žádost o PIN kód deaktivovat nastavením operátora, nelze zvolit tuto položku menu.

## Zámek telefonu

Telefon můžete zamknout. K dispozici jsou následující 4 možnosti uzamčení.

**Při zapnutí:** Zamkne přístroj, kdykoliv jej zapnete.

**Při změně karty USIM:** Zamkne přístroj v okamžiku výměny USIM karty.

**Ihned:** Okamžitě zamkne přístroj.

**Žádné:** Vypne funkci uzamčení.

Jako potvrzení této volby budete vyzváni k zadání bezpečnostního kódu.

- ▶ Přístroj odemknete zadáním tohoto bezpečnostního kódu.





## Změnit kódy

Můžete změnit kódy PIN, PIN2, heslo mobilního telefonu a heslo pro blokování hovorů.

## Kód PIN

PIN je zkratka výrazu Personal Identification Number (Osobní identifikační číslo) a omezuje používání telefonu neoprávněnými uživateli.

## Postup změny kódu PIN

1. V seznamu „Změnit kódy“ vyberte „Kód PIN“ a poté stiskněte .
2. Zadejte aktuální PIN kód a stiskněte .
3. Zadejte nový PIN kód a stiskněte .
4. Znovu zadejte nový PIN kód a stiskněte .

- ▶ Pokud se PIN kód liší od kódu zadaného v kroku 3, zopakujte se celý postup od kroku 3.
- 5. Pokud došlo k řádné změně PIN kódu, zobrazí se hlášení Změněno. Pokud zadáte v kroku 2 nesprávný PIN kód, zopakujte se postup od kroku 2 a váš počet pokusů o zadání správného kódu se sníží o 1.
- 6. V okně zadání PIN kódu se na předchozí krok vrátíte stisknutím pravé kontextové klávesy.

### Upozornění

Po trojnásobném zadání nesprávného PIN kódu do okna pro zadání PIN kódu dojde ke znehodnocení nastaveného PIN kódu. V takovém případě musíte zadat kód PUK (PIN Unblock Key) a nastavit PIN kód znovu. Maximální počet pokusů o zadání PUK kódu je 10. (Poznámka: Pokud zadáte 10krát nesprávný PUK kód, dojde k zablokování USIM karty, kterou je nutné následně vyměnit.)

### Kód PIN2

PIN2 je zkratka výrazu Personal Identification Number 2 (Osobní identifikační číslo 2) a omezuje používání telefonu neoprávněnými uživateli podobně jako PIN kód. Postup změny kódu PIN2 je stejný jako u PIN kódu. Po 3 nesprávných zadání PIN2 kódu dojde k jeho znehodnocení. V takovém případě musíte zadat kód PUK2 a nastavit PIN2 kód znovu. Maximální počet pokusů o zadání PUK2 kódu je 10, stejně jako u kódu PUK1. Po 10 nesprávných zadáních PUK2 kódu dojde ke znehodnocení tohoto kódu.

### Bezpečnostní kód

Bezpečnostní kód se používá ke změně hesla mobilního telefonu. Maximální počet pokusů o zadání bezpečnostního kódu není omezen jako v případě kódu PIN a PIN2.

# Nastavení

## Úspora energie (Menu #.2.6)

Určete, zda se aktivuje režim úspory energie.

## Výběr paměti (Menu #.2.7)

### Uživatelská paměť

Tato funkce zobrazuje stav uživatelské paměti mobilního telefonu. Provedení funkce může trvat několik sekund, protože prochází celý souborový systém, aby zjistila údaj o stavu paměti.

### Paměť vyhrazená uživateli

Tato funkce zobrazuje stav paměti mobilního telefonu vyhrazené uživateli. Běžným obsahem jsou SMS, Kontakty, Kalendář, Úkoly, Poznámky, Alarm, Historie hovorů a Záložky. U každé položky udává zřetelně aktuální velikost v porovnání s celkovou velikostí.

### Paměť USIM

Tato funkce zobrazuje stav uživatelské paměti USIM karty.

### Externí paměť

Tato funkce zobrazuje stav uživatelské paměti externí karty.

Zobrazuje údaje o použité a volné paměti.

## Volba paměti (Menu #.2.8)

Můžete vybrat úložiště pro stahování souboru: Paměť telefonu nebo externí paměť.

## Informace o telefonu (Menu #.2.9)

Tato funkce zobrazuje telefonní číslo USIM karty, název modelu a verzi softwaru mobilního telefonu.

## Původní nastavení (Menu #.2.0)

Vyberte tuto volbu pro obnovení výchozí konfigurace. Budete vyzváni k zadání bezpečnostního kódu.

## Displej Menu #.3

Toto vám umožňuje si přizpůsobit možnosti zobrazování obrazovky, menu a celého grafického rozhraní.

## Hlavní displej (Menu #.3.1)

Můžete nastavit téma obrazovky, které se zobrazí na hlavní obrazovce.

### Domovská obrazovka

- ▶ **Tapeta:** Můžete si vybrat obrázek, který se zobrazí na hlavní obrazovce.
- ▶ **Položky na domovské obrazovce:** Můžete vybrat, které se zobrazí na obrazovce: Kalendář + Hodiny, Kalendář, Hodiny, Průvodce hodinami a klávesami, Duální hodiny, Průvodce klávesami nebo Nezobrazovat.
- ▶ **Typ hodin:** Můžete vybrat typ hodin.
- ▶ **Barva písma hodin:** Můžete vybrat barvu zobrazení hodin.

### Obrázek odchozího hovoru

Můžete zvolit, který obrázek se zobrazí při pokusu o volání.

### Obrázek při spuštění

Můžete zvolit, který obrázek se zobrazí při zapínání telefonu.


## Obrázek při vypnutí

Můžete zvolit, který obrázek se zobrazí při vypínání telefonu.

## Styl menu (Menu #.3.2)

Pomocí možností Styl tabulky a Styl seznamu můžete nastavit požadovaný styl menu.

## Písmo (Menu #.3.3)

Pomocí  můžete nastavit styl písma, velikost písma vytáčení a barvu písma vytáčení.

## Podsvícení (Menu #.3.4)

Délku trvání podsvícení můžete nastavit nezávisle pro výchozí obrazovku a pro klávesnici.

## Téma (Menu #.3.5)

Můžete nastavit požadované téma telefonu – Bílé nebo Černé.

## Uvítací zpráva (Menu #.3.6)

Zvolte Zapnuto a můžete napsat uvítací zprávu.

# Nastavení

## Hovory

Menu #.4

### Doba volání

(Menu #.4.1)

Délku trvání hovoru si můžete zobrazit podle typů. Stisknutím levé kontextové klávesy [Menu] zvolte částečnou inicializaci nebo úplnou inicializaci. Před inicializací budete požádáni o bezpečnostní kód.

K dispozici jsou následující údaje:

- ▶ **Všechny hovory:** Zobrazuje celkovou délku volání.
- ▶ **Volaná čísla:** Zobrazuje délku volaných hovorů.
- ▶ **Přijaté hovory:** Zobrazuje délku přijatých hovorů.
- ▶ **Poslední hovor:** Zobrazuje dobu posledního hovoru v jednotkách hodiny/minuty/sekundy.

### Blokování hovoru (Menu #.4.2)

K dispozici jsou menu Blokování hovorů pro hlasové hovory a videohovory.

Menu má tyto položky: Hlasové hovory, Videohovory a Deaktivovat vše. Hlasové hovory a Videohovory mají následující podmenu.


Menu Blokování hovoru má tyto podmenu: Všechny odchozí, Odchozí mezinárodní, Odchozí mezinárodní hovory kromě domácí země, Všechny příchozí a Příchozí při roamingu.

Menu Všechny odchozí blokuje vytáčení všech odchozích hovorů, menu Odchozí mezinárodní blokuje vytáčení odchozích mezinárodních hovorů a menu Odchozí mezinárodní hovory kromě domácí země blokuje vytáčení odchozích mezinárodních hovorů kromě hovorů pro domácí zemi PLMN. Všechny příchozí odmítne všechny příchozí hovory a Příchozí při roamingu odmítne příchozí hovory při roamingu.

## Hlasové hovory


### Videohovory

#### Všechny odchozí


1. Pokud je vybráno , obdrží od uživatele heslo pro blokování hovorů a aktivuje službu blokování hovorů v síti. Objeví se hlášení s požadavkem a animace. Jakmile síť odpoví, zobrazí se výsledek této operace.
2. Je-li vybráno menu Možnosti, aktivuje se menu Odchozí hovory. Z nejnižšího kontextového menu vyberte možnost Menu. Následně se zobrazí menu Deaktivovat, Deaktivovat vše, Zobrazit stav a Změnit heslo. Menu Deaktivovat deaktivuje službu blokování po zadání uživatelského hesla blokování. Menu Deaktivovat vše deaktivuje všechny služby blokování konfigurované v síti po zadání uživatelského hesla blokování. Menu Zobrazit stav umožňuje uživateli zobrazit si stav aktuální konfigurace sítě. Po vybrání možnosti Zobrazit stav se zobrazí hlášení s požadavkem

a s animací a poté, co síť odpoví, také výsledek operace. Menu Změnit heslo umožňuje uživatelům aktuální heslo blokování.

#### Odchozí mezinárodní


1. Pokud je vybráno , bude fungovat stejně jako menu Odchozí hovory.
2. Je-li vybráno menu Možnosti, aktivuje se a je funkční menu Mezinárodní hovory. Je funkční stejným způsobem jako menu Odchozí hovory.

#### Odchozí mezinárodní hovory kromě domácích


1. Pokud je vybráno , bude fungovat stejně jako menu Odchozí hovory.
2. Je-li vybráno menu Možnosti, aktivuje se a je funkční menu Mezinárodní hovory kromě domácích země. Je funkční stejným způsobem jako menu Odchozí hovory.

# Nastavení

## Všechny příchozí

1. Pokud je vybráno , bude fungovat stejně jako menu Odchozí hovory.
2. Je-li vybráno menu Možnosti, aktivuje se a je funkční menu Příchozí hovory. Je funkční stejným způsobem jako menu Odchozí hovory.

## Příchozí hovory při roamingu

1. Pokud je vybráno , bude fungovat stejně jako menu Odchozí hovory.
2. Je-li vybráno menu Možnosti, aktivuje se a je funkční menu Příchozí hovory při roamingu. Je funkční stejným způsobem jako menu Odchozí hovory.

## Pevná volba čísel (Menu #.4.3)

### ▶ Zapnuto/Vypnuto

- **Zapnout:** Zvolte pro aktivaci FDN. Je třeba ověření PIN2.
- **Vypnout:** Zvolte pro deaktivaci FDN. Je třeba ověření PIN2.

- ▶ **Povolená čísla pro vytáčení (FDN):** Zobrazuje aktuální seznam pevných voleb. Čísla s pevnou volbou můžete upravovat, přidávat nebo mazat. Tento seznam můžete upravovat po zadání PIN2 kódu. A informace o konfiguraci se uloží na USIM kartu. Jestliže FDN omezuje odchozí hovory, použijí se informace uložené na USIM kartě.

## Objem dat (Menu #.4.4)

Umožňuje zjistit objem odeslaných, přijatých a veškerých dat, která se přenesla.

Stisknutím levé kontextové klávesy [Smazat vše] zvolíte úplnou inicializaci. Můžete také použít položku [Smazat] pro inicializaci vybraného typu objemu. Před inicializací budete požádáni o bezpečnostní kód.

## Cena hovorů (Menu #.4.5)

1. Tato funkce zobrazuje cenu Posledního hovoru a Všech hovorů.

2. Funkci zapnete stisknutím levé kontextové klávesy [Smazat] a následným zadáním kódu PIN2.
3. V možnosti Nastavit cenu hovoru si můžete vybrat buď jednotky nebo měnu. V závislosti na tomto nastavení se cena hovoru zobrazí v průběhu hovoru (Pokud vaše SIM karta a síť podporují funkci Oznámení o ceně (AOC)).
4. Pokud chcete nastavit limit ceny za hovory, vyberte v možnosti Nastavit cenu hovoru. Pokud nastavíte limit hovoru a cena za hovory dosáhne tohoto limitu, nebude již možné provádět žádné další hovory.

## Přesměrování hovoru

(Menu #.4.6)

K dispozici jsou menu Přesměrování hovoru pro hlasové hovory a videohovory.

Stisknutím , můžete aktivovat menu přesměrování hovoru.

## Hlasové hovory

### Všechny hlasové hovory


#### Když je obsazeno

#### Pokud neodpovídá

#### Pokud je nedostupný

##### 1. Jestliže seznam čísel neexistuje

Změní se na editor, kde lze zadat číslo pro přesměrování.

Můžete přímo zadat číslo pro přesměrování hovoru přímo nebo číslo vyhledat v telefonním seznamu. Po stisknutí  [Přesměrovat] odešle telefon po zadání čísla žádost poskytovateli služeb. Při čekání na výsledek ze sítě se objeví zpráva o probíhající žádosti a animace.

##### 2. Jestliže seznam čísel existuje

Zobrazí se menu Na jiné číslo a seznam čísel. Při čekání na výsledek ze sítě se objeví zpráva o probíhající žádosti a animace.

# Nastavení


## 3. Menu s možnostmi

Jestliže po aktivaci menu Všechny hlasové hovory vyberete menu Možnosti v dolní části menu, zobrazí se menu Deaktivovat, Deaktivovat vše, Zobrazit stav a Vymazat seznam. Menu Zobrazit stav ukazuje nastavení v síti. Zvolíte-li toto menu zobrazí se zpráva o žádosti a animace. Jakmile síť doručí informace, zobrazí se nastavení sítě. Zvolíte-li menu Deaktivovat, provede se po potvrzení ze strany uživatele vymazání čísel přesměrování hovoru registrovaných v síti. Menu Smazat seznam vymaže seznam všech čísel přesměrování.

## Videohovory

### Všechny hovory videotelefonem

#### 1. Jestliže seznam čísel neexistuje

Změní se na editor, kde lze zadat číslo pro přesměrování. Můžete přímo zadat číslo pro přesměrování hovoru přímo nebo číslo vyhledat v telefonním seznamu. Po stisknutí 

[Přesměrovat] odešle telefon po zadání čísla žádost poskytovateli služeb. Když čekáte, až ze sítě přijde výsledek, objeví se zpráva o probíhající žádosti a animace.

#### 2. Jestliže seznam čísel existuje

Zobrazí se menu Na jiné číslo a seznam čísel. Při čekání na výsledek ze sítě se objeví zpráva o probíhající žádosti a animace.

#### 3. Menu s možnostmi

Jestliže po aktivaci menu Všechny video hovory vyberete menu Možnosti v dolní části menu, zobrazí se menu Deaktivovat, Deaktivovat vše, Zobrazit stav a Vymazat seznam. Zvolíte-li menu Deaktivovat, provede se po potvrzení ze strany uživatele vymazání čísel přesměrování hovoru registrovaných v síti. Po výběru menu Zrušit vše se namísto zobrazené zprávy o probíhající žádosti a animaci zobrazí výsledek operace. Menu Smazat seznam vymaže seznam všech čísel přesměrování.

## Když je obsazeno

### 1. Jestliže seznam čísel neexistuje

Funguje stejně jako menu Všechny hlasové hovory.

### 2. Jestliže seznam čísel existuje

Funguje stejně jako menu Všechny hlasové hovory.

### 3. Při výběru menu Možnosti

Aktivuje se a je funkční menu Pokud obsazeno. Funguje stejně jako menu Všechny hlasové hovory.

## Pokud neodpovídá

### 1. Jestliže seznam čísel neexistuje

Funguje stejně jako menu Všechny hlasové hovory.

### 2. Jestliže seznam čísel existuje

Funguje stejně jako menu Všechny hlasové hovory.

### 3. Při výběru menu Možnosti

Aktivuje se a funguje stejně jako menu Pokud neodpovídá. Funguje stejným způsobem jako menu Všechny hlasové hovory až na to, že uživatelé

mohou nastavit dobu zpoždění v menu Nastavit dobu čekání v seznamu menu.

## Pokud je nedostupný

### 1. Jestliže seznam čísel neexistuje

Funguje stejně jako menu Všechny hlasové hovory.

### 2. Jestliže seznam čísel existuje

Funguje stejně jako menu Všechny hlasové hovory.

### 3. Při výběru menu Možnosti

Aktivuje se a funguje stejně jako menu Pokud mimo dosah. Funguje stejně jako menu Všechny hlasové hovory.

## Čekající hovor (Menu #.4.7)

- ▶ **Aktivovat:** Aktivuje službu čekajících hovorů. Pokud zvolíte tuto položku, zobrazí se hlášení s požadavkem na navázání hovoru a animace. Jakmile síť odpoví, zobrazí se výsledek této operace.
- ▶ **Deaktivovat:** Vypne službu čekajících hovorů. Pokud zvolíte tuto položku, zobrazí se

# Nastavení

hlášení s požadavkem na navázání hovoru a animace. Jakmile síť odpoví, zobrazí se výsledek této operace.

- ▶ **Zobrazit stav:** Zobrazí položku služby čekajících hovorů dané sítě. Pokud zvolíte tuto položku, zobrazí se hlášení s požadavkem na navázání hovoru a animace. Jakmile síť odpoví, zobrazí se výsledek této operace.

## Hlasová schránka (Menu #.4.8)

Můžete přidat nebo upravit středisko hlasové pošty.

## Videohovory (Menu #.4.9)

Můžete nastavit zobrazení obrazovky pro volání při odchodím nebo příchozím hovoru videotelefonem.

- ▶ **Použít soukromý obrázek:** Určete, zda se zobrazí osobní obrázek.
- ▶ **Zvolit soukromý obrázek:** Vyberte fotografii, která se zobrazí.

- ▶ **Zrcátko:** Vyberte pro aktivaci nebo deaktivaci efektu zrcadla.
- **Zapnuto:** Zobrazí obrázek roztážený do stran.
- **Vypnuto:** Zobrazí obrázek ve skutečné velikosti.
- ▶ **Velikost mého obrázku:** Vyberte velikost pro zobrazení svého obrázku.
- ▶ **Poloha mého obrázku:** Vyberte pozici, na které se zobrazí váš obrázek.

## Společné nastavení

(Menu #.4.0)

### Odm. hov

Můžete nastavit odmítnutí příchozích hovorů.

1. Pro aktivaci odmítnutí hovorů vyberte Zapnuto v menu Odmítnout. Zobrazí se menu Seznam odmítnutých.
  2. V menu Seznam odmítnutých nastavte požadovanou volbu odmítnutí hovoru.
- ▶ **Všechny hovory:** Odmítnete všechny hovory.

- ▶ **Kontakty:** Odmítne hovory z čísla uloženého v Kontaktech.
- ▶ **Skupiny:** Můžete stanovit odmítnutí hovorů podle skupin uložených v Kontaktech.
- ▶ **Neregistrováno:** Odmítne hovory z čísla, které není uloženo v Kontaktech.
- ▶ **Žádné ID volajícího:** Odmítne hovory, které nemají informaci o CLI.

### Odeslat vlastní číslo

- ▶ **Nastavit podle sítě:** Konfiguruje se s výchozím nastavením vytvořeným poskytovatelem služeb.
- ▶ **Zapnuto:** Telefon bude odesílat vlastní telefonní číslo při odchozím hovoru.
- ▶ **Vypnuto:** Telefon nebude odesílat vlastní telefonní číslo při odchozím hovoru.

### Automatické opakování vytáčení

Umožňuje vám nastavit funkci automatického opakování vytáčení pro případ, že se vám nepodaří navázat hovor.

### Režim přijetí hovoru

Umožňuje vám nastavit si režim odpovědi. Můžete vybrat mezi Stisknout „Odeslat“, Posunout a Stisknout libovolné tlačítko.

### Minutové upozornění

Tato funkce určuje, jestli se vám každou minutu hovoru bude ozývat zvukové upozornění.

### Režim odpovědi BT

- ▶ **Hands-free:** Je-li připojen Bluetooth, můžete hovor přijmout pomocí Bluetooth sluchátek.
- ▶ **Telefon:** Přijmete-li hovor stisknutím  na přístroji, můžete hovořit přes přístroj. Přijmete-li hovor stisknutím klávesy Bluetooth sluchátka, můžete hovořit přes Bluetooth sluchátka.

Toto je výběr úvodního režimu odpovědi. Při hovoru můžete přepínat z přístroje na sluchátka a ze sluchátek na přístroj.

### Uložit nové číslo

V tomto menu můžete po ukončení hovoru uložit telefonní číslo, pokud

# Nastavení

ještě není uložené  
v telefonním seznamu.

## Zasunutí telefonu

Můžete nastavit, zda se hovor  
při zasunutí telefonu ukončí.

## Nastavení zprav

Menu #.5

Podrobné informace naleznete na  
straně 57.

## Nastavení kontaktu

Menu #.6

Podrobné informace naleznete na  
straně 78 (Menu 8.8).

## Připojení

Menu #.7

### Bluetooth

(Menu #.7.1)

### Bluetooth QD ID B013211

### Připojení Bluetooth

Váš telefonní přístroj má  
vestavěnou bezdrátovou technologii  
Bluetooth, která umožňuje telefon  
bezdrátově připojit k jinému  
Bluetooth zařízení jako například  
k handsfree sadě, k počítači, PDA  
nebo k jinému telefonu.

Můžete například hovořit pomocí  
bezdrátové Bluetooth sady  
handsfree nebo prohlížet  
internetové stránky prostřednictvím  
bezdrátového připojení mobilním  
telefonem. Můžete si také  
vyměňovat navštívenky, položky  
kalendáře a obrázky.

### Upozornění

Doporučujeme telefon a Bluetooth  
zařízení, se kterým komunikujete,  
udržovat ve vzájemné vzdálenosti do  
10 metrů. Připojení bude lepší,  
pokud mezi telefonem a druhým  
Bluetooth zařízením nebudou žádné  
neprostupné předměty.

### 1. Začínáme

- Menu → #. Nastavení →  
7. Připojení → 1. Bluetooth →  
1. Zapnout/vypnout

Pro použití funkce Bluetooth musíte  
nejprve nastavit Zapnout.

### 2. Konfigurace nastavení Bluetooth

- Menu → #. Nastavení →  
7. Připojení → 1. Bluetooth →  
4. Nastavení

- **Má viditelnost:** Nastavením [Má viditelnost] na hodnotu [Viditelné] způsobíte, že ostatní zařízení mohou váš telefon detekovat při vyhledávání Bluetooth zařízení. Zvolíte-li [Skruté], nebudou ostatní zařízení schopná při vyhledávání Bluetooth zařízení detekovat váš telefon.
- **Nazev meho zar.:** Svůj telefon můžete nazvat nebo přejmenovat a tento název zobrazí na druhém zařízení. Název telefonu se zobrazí na jiných zařízení pouze v případě, že [Má viditelnost] je nastavena na hodnotu [Viditelné].
- **Podporované služby:** Můžete prohlížet seznam zařízení jako například sluchátka a handsfree sada podporovaná telefonem s Bluetooth technologií.
- **Moje adresa:** Můžete si zobrazit adresu zařízení Bluetooth.

### Upozornění

Jestliže uživatel používá Bluetooth zařízení v přístroji, je zařízení vystaveno bezpečnostnímu riziku. Proto doporučujeme po konfiguraci a spárování zařízení nastavit viditelnost Bluetooth na hodnotu Skruté. U souborů přicházejících přes Bluetooth z párovaného nebo nepárovaného zařízení můžete po kontrole údajů o odeslateli určit, zda připojení přijmete nebo odmítnete.

## 3. Vyhledání a párování nového zařízení

### <Hledání nového zařízení>


Nové zařízení můžete vyhledat v následujícím menu.

- **Menu** → **#. Nastavení** → **7. Pripojeni** → **1. Bluetooth** → **2. Vyhledat nové zařízení**

### <Spárování zařízení>

1. Bluetooth zařízení vyhledáte a spárujete po stisknutí Přidat nové zařízení.
2. Na obrazovce se zobrazí Hledání zařízení. Detekují se Bluetooth zařízení do vzdálenosti 10 m.

# Nastavení

3. Po detekci se Bluetooth zařízení zobrazí v seznamu zařízení na obrazovce. Pokud žádné Bluetooth zařízení není detekováno, zobrazí se dotaz, zda si přejete vyhledání zopakovat.
4. Postup párování
  - Stiskněte . Na obrazovce se objeví okno s výzvou pro zadání vašeho hesla.
  - Po vytvoření hesla (v délce 1 až 16 číslic) musí uživatel druhého zařízení zadat toto heslo pro spárování. Uživatel druhého zařízení musí heslo předem znát, jinak nelze uživatele ověřit.
- ▶ KU380 podporuje následující Bluetooth služby
  - Profil sluchátek
  - Profil hands-free
  - Profil objektu Push
  - Profil přenosu souborů
  - Profil telefonického připojení do sítě
  - Profil rozšířené audio
  - Profil dálkového ovládání zvuku a obrazu (pouze zvuk)

## Možnost


- ▶ **Přidat nové zařízení:** V tomto menu můžete párovat nové Bluetooth zařízení se svým telefonem.
- ▶ **Připojit**
  1. Vyberte Připojit, jestliže si přejete zahájit připojení k vybranému zařízení.
  2. Vyberte Odpojit, jestliže si přejete ukončit připojení k vybranému zařízení.
- ▶ **Smazat:** Pomocí tohoto menu můžete smazat párované Bluetooth zařízení.
- ▶ **Smazat vše:** Pomocí tohoto menu můžete smazat všechna párovaná Bluetooth zařízení.

## <Spárovaná zařízení>

1. Bluetooth zařízení vyhledáte a spárujete po stisknutí Vyhledat nové zařízení.
2. Na obrazovce se zobrazí Hledání zařízení. Detekují se Bluetooth zařízení do vzdálenosti 10 m.
3. Po detekci se Bluetooth zařízení zobrazí v seznamu zařízení na

obrazovce. Pokud žádné Bluetooth zařízení není detekováno, zobrazí se dotaz, zda si přejete vyhledání zopakovat.

#### 4. Postup párování

- Stiskněte  . Na obrazovce se objeví okno s výzvou pro zadání vašeho hesla.
- Po vytvoření hesla (v délce 1 až 16 číslic) musí uživatel druhého zařízení zadat toto heslo pro párování. Uživatel druhého zařízení musí heslo předem znát, jinak nelze uživatele ověřit.

#### <Mazání zařízení>


1. V obrazovce Párovaná zařízení vyberte zařízení, které se smaže.
2. Zařízení můžete smazat stisknutím klávesy Smažit nebo volbou Možnosti → Smažit. Všechna zařízení smažete volbou Možnosti → Smažit vše.

#### <Přenos dat pomocí Bluetooth>

1. Pro přenos dat ze svého telefonu na jiné zařízení Bluetooth nejprve vyberte aplikaci, ve které

se cílová data uloží. Například pro odeslání dat do Moje soubory na jiném zařízení vyberte Menu → 6. Moje soubory → 1. Obrázky / 2. Zvuky / 3. Video / 5. Data Bluetooth / 6. Další soubory / 7. Externí paměť → Vybrat data pro přenos → Odeslat → 3. Bluetooth

#### 2. Přenos dat

- 1) Zobrazí se nalezená párovaná zařízení. Jestliže požadované zařízení není v seznamu, zvolte [Aktualizovat].
- 2) Ze zařízení na obrazovce vyberte zařízení, do kterého chcete přenést data a stiskněte  .
- 3) Jakmile druhá strana vybere [Ano] pro [Požadavek připojení], data se přenesou.

#### Synchronizace (Menu #.7.2)


(Poznámka: Tato služba není dostupná ve všech zemích. Bližší podrobnosti zjistíte u svého operátora.)

V případě, že službu Synchronizace podporuje operátor vaší sítě, tato


# Nastavení

funkce služby synchronizuje data v telefonu s daty na serveru, jako jsou například Kontakty, Kalendář, Úkoly a Poznámky, prostřednictvím bezdrátové sítě.

## Připojit

1. Vyberte položku Připojit a stiskněte tlačítko .
2. Připojte se k serveru s pomocí zvoleného profilu serveru. Při provádění synchronizace se objeví animace synchronizace.

## Záznamy

Zvolte položku Záznamy a potom stiskněte tlačítko  pro prohlížení záznamu o naposledy prováděné synchronizaci.

## Synchronizační server

1. Zvolte položku Synchronizační server a stiskněte tlačítko .
2. Toto menu vám umožňuje nakonfigurovat profil synchronizačního serveru.
  - ▶ **Jméno profilu:** Zadejte jméno profilu.
  - ▶ **Hostitelská adresa:** Kontaktujte svého operátora.

- ▶ **SyncML proxy:** Kontaktujte svého operátora.
- ▶ **Uživatelské jméno:** Zadejte svoje uživatelské jméno pro synchronizační server.
- ▶ **Heslo:** Zadejte svoje heslo.
- ▶ **Kontakty:** Zvolte, zda chcete Kontakty synchronizovat či nikoliv.
- ▶ **Jméno kontaktu:** Zadejte databázi kontaktů pro přístup na server.
- ▶ **Kalendář:** Zvolte, zda chcete synchronizovat kalendář či nikoliv.
- ▶ **Název kalendáře:** Zadejte název databáze kalendáře pro přístup na server.
- ▶ **Úkoly:** Zvolte, zda chcete Úkoly synchronizovat či nikoliv.
- ▶ **Název úkolu:** Zadejte název databáze Úkolů pro přístup na server.
- ▶ **Poznámky:** Zvolte, zda chcete synchronizovat Poznámky či nikoliv.

- ▶ **Název poznámky:** Zadejte název databáze Poznámek pro přístup na server.
- ▶ **Typy synchronizace:** Z níže uvedených položek vyberte druh synchronizace.
  - Normální  
Telefon a server si musejí vyměnit informace o upravených datech.
  - Záloha  
Telefon odesílá veškerá data z databáze na server. Server má nahradit veškerá data v cílové databázi daty odesílanými telefonem. To znamená, že telefon přepisuje veškerá data v databázi na serveru.
  - Obnovit  
Server odesílá veškerá svá data z databáze do telefonu. Telefon má nahradit veškerá data v cílové databázi daty odesílanými ze serveru. To znamená, že server přepisuje veškerá data v databázi telefonu.
- ▶ **Přístupový bod:** Zvolte přístupový bod, který chcete použít pro datové připojení.
- ▶ **Režim synchronizace:** Z níže uvedeného seznamu zvolte režim synchronizace.
  - Ručně  
Synchronizace bude spuštěna výhradně uživatelem.
  - Automaticky  
Aplikace automaticky spustí synchronizaci na základě definovaných preferencí (v pravidelných intervalech nebo provedení změn).
  - Četnost synchronizace  
Při volbě automatického režimu synchronizace vyberte automatickou synchronizaci.

### Režim připojení USB (Menu #.7.3)

Režim připojení USB svého telefonu můžete aktivovat pro různé účely použití.

Pokud použijete funkci Mass Storage jako je například paměťová karta USB, zvolte v tomto menu Mass Storage.

# Nastavení

Funkce Mass Storage je dostupná pouze pro externí paměťovou kartu.

Pokud používáte datové služby jako například aplikaci PC Suite, zvolte v tomto menu položku modem.

Pokud používáte funkci synchronizace hudby v přehrávači Windows Media Player, zvolte v tomto menu Synchronizace hudby. Synchronizace hudby je k dispozici pouze pro hudební obsah. Chcete-li provést synchronizaci s externí pamětí, můžete použít „Externí paměť“ jako Hlavní úložiště. Chcete-li provést synchronizaci s interní pamětí, můžete jako „Hlavní úložiště“ použít „Interní paměť“.

## Síť (Menu #.7.4)

### Vybrat síť

Zvolte Automaticky nebo Ručně.

- ▶ **Automaticky:** Automaticky vyhledá síť a zaregistruje přístroj do sítě. Tato volba se doporučuje pro dosažení nejlepší kvality služeb.

- ▶ **Ručně:** Zobrazí se všechny momentálně dostupné 2G (GSM) a 3G (UMTS) sítě a máte možnost vybrat, do které se telefon zaregistruje. Není-li registrace v síti úspěšná, zobrazí se seznam sítí znovu a můžete vybrat jinou síť pro registraci.

### Upozornění

Jestliže přístroj v manuálním režimu ztratí síť, zobrazí se hlášení upozorňující na nutnost výběru dostupné sítě.

### Režim sítě

Můžete vybrat druh sítě, která se bude vyhledávat při vyhledávání z menu Vybrat síť.

- ▶ **Automaticky:** Vyhledá všechny připojitelné sítě.
- ▶ **UMTS:** Vyhledá pouze sítě s podporou 3G.  
(S výjimkou Švýcarska)
- ▶ **GSM 900/1800:** Vyhledá pouze sítě s podporou pásem GSM 900/1800.

- ▶ **GSM 1900:** Vyhledá pouze sítě s podporou GSM 1900.

### Seznamy preferovaných

Jestliže se síť vyhledává automaticky, můžete přidat preferovanou síť pro připojení. K dispozici jsou následující volby.

- ▶ **Přidat novou:** Pomocí následujících položek můžete přidat novou síť.
  - **Hledat:** Můžete vybrat jednu síť ze seznamu sítí uložených v telefonu.
  - **Zadejte novou síť:** Můžete zadat kód země (MCC), kód sítě (MNC) RAT pro přidání.
- ▶ **Smazat:** Smaže vybrané sítě.
- ▶ **Upravit:** Můžete upravit informace o vybrané síti.
- ▶ **Nahoru:** Posune vybranou síť nahoru.
- ▶ **Dolů:** Posune vybranou síť dolů.

### Přístupové body (Menu #.7.5)

Toto menu obsahuje seznam přístupových bodů. Pomocí menu Možnosti můžete vytvářet nové profily, mazat je a upravovat. Nemůžete však mazat a upravovat konfigurace závislé na regionální odchylce podle země. Stisknutím levého kontextového tlačítka [Menu] a Upravit můžete upravovat následující konfigurační položky.

Název spojení	Název profilu Přístupového bodu.
Nosič	Vyberte nosič ze seznamu. (Výchozí je UMTS.)
Ověření	Vyberte ověření ze seznamu. (Výchozí je Žádné ověření)
Uživatelské jméno	Informace od poskytovatele služeb.
Heslo	Informace od poskytovatele služeb.
APN	Název APN pro přístup do sítě. Údaje poskytnuté operátorem.

- ▶ Pro uložení změn konfigurace stiskněte potvrzovací tlačítko.

# Nastavení

## Nastavení prohlížeče

(Menu #.7.6)

### Profily

Stisknutím tlačítka vyberte příslušný profil. Tak aktivujete profil, který spustí prohlížeč.

### Nastavení vzhledu

#### - Kódování znaků

Nastaví výchozí znakovou sadu v prohlížeči na některou z následujících.

- ▶ Automaticky, Angličtina (ASCII), Angličtina (ISO), Angličtina (LATIN), Unicode (UCS2 BE), Unicode (UCS2 LE), Unicode (UCS2 Auto), Unicode (UTF-16 BE), Unicode (UTF-16 LE), Unicode (UTF-16 Auto), Unicode (UTF-8).

#### - Ovládání posouvání

Umožňuje nastavit rychlost posouvání volbou počtu řádků, o které se obrazovka posune. Zvolte 1 řádek, 2 řádky nebo 3 řádky.

#### - Zobrazit obrázek

Zapíná či vypíná zobrazování obrázků při procházení webových stránek.

#### - Javascript

Zvolte, zda se JavaScript zapne nebo vypne.

#### Cache

Zapnutím vyrovnávací paměti umožníte ukládání navštívených stránek ve vašem telefonu.

Jakmile je stránka uložena ve vyrovnávací paměti, výrazně se urychlí její načítání při opětovném navštívení.

#### Cookies

Zapnutím souborů cookies umožníte ukládání souborů cookies poslaných serverem. Pokud tuto funkci vypnete, nebudou se ve vašem telefonu ukládat žádné soubory cookie.

#### Zabepečení

Jestliže uživatel stiskne Certifikáty, zobrazí se informace o certifikaci. Uživatel může vymazat informace zabezpečené relace stisknutím Smazání relace.

## Původní nastavení

Vyberte tuto volbu pro obnovení výchozí konfigurace.

## Seznam certifikátů

Pokud jsou uloženy, zobrazí se zde seznam kořenových/ca certifikátů,

vyžadovaných pro WTLS/TLS. Certifikáty v tomto seznamu si lze zobrazit.

## Relace smazána

Pomocí této volby lze smazat data zabezpečené relace (WTLS/TLS). Data relace by se měla před vytvořením nové zabezpečené relace smazat.

## Nastavení streamingu (Menu #.7.7)

Chcete-li použít odlišné nastavení sítě pro přehrání streamovaného obsahu, můžete nastavit různá síťová nastavení.

## Java

Menu #.8

### Profily sítě

1. Přejděte kurzorem na profil, který si přejete aktivovat.
2. Stiskněte  .

### Přidání nového profilu

1. V Menu vyberte položku Přidat. Je třeba nakonfigurovat následující položky.

Název služby	Zadejte název účtu pro profil.
Režim připojení	Vyberte z uvedeného seznamu režimů připojení. (Výchozí je TCP s proxy nebo TCP bez proxy)
Adresa IP	Zadejte IP adresu brány WAP poskytnutou operátorem. (např. 195. 129)
Port proxy serveru	Údaje o portu poskytne operátor, závisí na režimu připojení.
Přístupový bod	Vyberte z uvedeného seznamu přístupových bodů. (Další podrobnosti o přidávání a úpravě nového přístupového bodu naleznete na straně 106)

# Nastavení

2. Stisknutím  [Uložit] uložíte změny konfigurace.

Upravit a smazat profil můžete volbou Upravit a Smazat v menu Možnosti.

# Příslušenství

Zde vidíte různá příslušenství pro váš mobilní telefon. Vyberte si mezi nimi dle svých osobních požadavků na komunikační vybavení.

## Cestovní adaptér

Tato nabíječka umožňuje dobíjet baterii mimo domov nebo pracoviště.



## Standardní baterie



Sada sluchátek a mikrofonu pro handsfree a ovladače pro přehrávač hudby

## Stereofonní sluchátka



**Ovladač:** Tlačítko Odpovědět a ukončit, ovládání přehrávače hudby, ovládání hlasitosti, tlačítko Přidržet a mikrofon.

Po připojení sluchátek a ovladače připojte ovladač ke konektoru pro sluchátka na pravé straně telefonu.

## Upozornění

- ▶ Vždy používejte pouze originální příslušenství LG.
- ▶ Pokud tak neučiníte, může dojít ke zrušení platnosti záruky.
- ▶ Příslušenství se může v různých oblastech lišit; vyžádejte si další informace od naší místní pobočky nebo zastoupení.

# Technické údaje

## Obecné

**Název výrobku:** KU380

**System:** GSM900 / DCS1800 /  
PCS 1900 /  
WCDMA 2100

**Čistá hmotnost:** 67,5 g  
(bez baterie)

## Provozní teplota

**Max:** +55 °C (běžná) /  
+45 °C (při dobíjení)

**Min:** -10 °C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Y eongdeungpo-gu, Se oul, Kor ea 150-721

## Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KU380

Trade Name

LG

CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC  
ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1  
ETSI EN 301 489-17 V1.3.1, ETSI EN 301 489-24 V1.3.1  
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2  
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1  
ETSI EN 301 908-2 V2.2.1, ETSI EN 300 328 V1.4.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by BABT.

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives.

European Standard Center  
LG Electronics s Logistics and Services B.V.  
Valuwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36-547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob @lge.com

Name

Issued Date

Seung Hyun Ji / Director 03.SEP. 2007

Signature of representative

LG Electronics CZ s. r. o. tímto prohlašuje, že zařazení mobilní telefon KU380 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES [V. č. 426/2000 Sb.].

„Vývojem tohoto telefonu motivovaného snahou o zlepšení jeho funkcí, ovladatelnosti a použitelnosti mohlo dojít ke vzniku rozdílu mezi jeho ovládáním a návodem k ovládání uvedeným v této příručce. Tyto případné rozdíly způsobené změnami softwaru, které mohou být provedeny i na přání Vašeho operátora, Vám ochotně vysvětlí náš prodejce či servisní středisko.

Tyto případné rozdíly způsobené vývojovými změnami softwaru mobilního telefonu provedené výrobcem nejsou vadami výrobku ve smyslu uplatnění práv z odpovědnosti za vady a nevztahuje se na ně poskytnutá záruka.“

# KU380 User Guide

This document is the user guide for the LG KU380 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.



## Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



# Table of Contents

<b>Introduction</b>	<b>6</b>	<b>Overview of Menu Functions</b>	<b>32</b>
<b>For Your Safety</b>	<b>7</b>	<b>Entertainment</b>	<b>34</b>
<b>Guidelines for Safe and Efficient Use</b>	<b>8</b>	Games & Applications	
<b>KU380 Features</b>	<b>13</b>	Mobile TV	
Parts of the phone		<b>Vodafone live!</b>	<b>35</b>
<b>Getting Started</b>	<b>17</b>	Homepage	
Installing the USIM card and battery		Enter URL	
Charging the Battery	19	Bookmarks	
Disconnecting the charger	20	Saved pages	
How to use a microSD memory card		History	36
Memory card formatting	21	Browser settings	
Turning the handset on/off		Profiles	
Access codes	22	Appearance settings	
Display information	23	Cache	
<b>General Functions</b>	<b>26</b>	Cookies	
Making and answering calls		Security	
Entering text	28	Reset settings	
Changing the text input mode	29	Search	
Using the T9 Mode		Mobile TV	
Using the ABC Mode	30	Music	
Using the 123 (Number) mode		Games	37
Using the symbol mode	31	Ringtones	
		Pictures	
		News	
		Sport	

<b>Music</b>	<b>38</b>	Multimedia templates	52
Recently played		Emoticons	
My music		Messaging settings	
All tracks		Text message	
Playlists		Multimedia message	53
Artists		Email	55
Albums		Voicemail	57
Genres		Service message	
Shuffle tracks		Info. service	58
Music store		<b>My Files</b>	<b>59</b>
<b>Camera</b>	<b>39</b>	Pictures	
Still camera		Sounds	60
Video camera	42	Videos	
<b>Messaging</b>	<b>45</b>	Games & Applications	62
Create new		Others	
Message		External memory	63
Email	46	<b>Organiser &amp; Tools</b>	<b>64</b>
Voice message	47	Quick menu	
Inbox		Alarms	
Email	48	Calendar	
Drafts	50	Tasks	66
Outbox		Games & Applications	
Sent messages	51	Memo	
Templates		Voice recorder	67
Text templates		Private memo	

# Table of Contents

Calculator	68	All calls	73
Converter		Dialled calls	
World time	69	Received calls	
Organiser settings		Missed calls	
Calendar settings		<b>USIM Tool Kit</b>	<b>74</b>
Backup calendar & tasks		<b>Video call</b>	<b>75</b>
Restore calendar & tasks		During a video call	
Memory info.		Incoming video call	
<b>Contacts</b>	<b>70</b>	<b>Settings</b>	<b>77</b>
Add new		Profiles	
Contacts list		Phone setting	78
Groups		Date & Time	
Speed dials		Language	79
Service dial numbers	71	Auto key lock	
Own number		Flight mode	
My business card		Security	
Contact settings		Power save	81
Contact list setting		Memory manager	
Copy		Primary storage setting	82
Move		Handset Information	
Backup contacts		Reset settings	
Restore contacts		<b>Display settings</b>	
Clear contacts	72	Main Display	
Memory info.		Menu style	83
<b>Calls</b>	<b>73</b>	Font	

Backlight	83
Welcome message	
Handset theme	
Call setting	
Call durations	
Call barring	
Fixed dial numbers	85
Data volume	
Call costs	
Diverts	86
Call waiting	87
Voicemail	
Video call	
Common settings	89
Messaging setting	90
Contact setting	
Connectivity	
Bluetooth	
Synchronisation	94
USB connection mode	95
Network	96
Access points	97
Browser settings	
Streaming settings	98
Java setting	99

Accessories	100
Technical data	101

# Introduction

Congratulations on your purchase of the advanced and compact KU380 3G video mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Use of phone cases with magnetic locks with slide type phones has caused problems such as loss of network signal and phones powering off.

# For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

## CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*

# Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## Certification information (SAR)

### THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating

positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device. Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this device when tested for use at the ear is 0.929 W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some

cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use at the body is 1.46 W/kg.

\* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

For SAR information in other regions please look under product information at [www.lgmobile.com](http://www.lgmobile.com).

## Product care and maintenance

### WARNING!

*Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.*

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.

# Guidelines for Safe and Efficient Use

- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

**Check the laws and regulations on the use of mobile phones in the areas when you drive.**

## Efficient phone operation

**To enjoy optimum performance with minimum power consumption please.**

- ▶ Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

## Electronic devices

**All mobile phones may get interference, which could affect performance.**

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

**If you are listening to music whilst outside and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.**

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

## Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

## Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

# Guidelines for Safe and Efficient Use

- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion if battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.
- ▶ For use only with battery LG Electronics, KU380.

# KU380 Features

## Parts of the phone

### Open view



VGA camera

LCD screen

- ▶ **Top:** Icons showing signal strength, battery level and various other functions
- ▶ **Bottom:** Soft key indications

### Navigation keys

#### ▶ In standby mode:

- ▶ List of Profiles
- ▶ Contacts list
- ▶ Messaging
- ▶ Calendar

#### ▶ In menu: Navigates menus.

### Alpha numeric keys

- ▶ **In standby mode:** Input numbers to dial.

Hold down:

**0** for international calls.

**1** to dial voice mail centre.

**2** to **9** for speed dials.

- ▶ **In editing mode:** Enter numbers & characters.

# KU380 Features



## Left soft key/ Right soft key

Performs the function indicated at the bottom of the display.

## Send key

- ▶ Dials a phone number and answers a call.
- ▶ **In standby mode:** Shows a history of calls made, received, and missed.

## Left side view



Headset/Charger/Cable connector

# KU380 Features

## Rear view



# Getting Started

## Installing the USIM card and battery

### 1. Installing the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset. If your USIM card is removed then your handset becomes unusable (except for emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.



To insert the USIM card



To remove the USIM card

#### Note

- ▶ The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.
- ▶ After removing the battery, insert USIM card.

# Getting Started

## 2. Installing the battery.

Slide the battery upwards until it snaps back into place.



## 3. To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press and hold down the battery release button and slide the battery down.

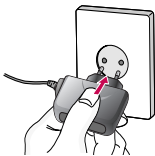


## Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the left side of the phone until it clicks into place.
2. Connect the other end of the travel adapter to the mains socket.



### Note

- ▶ Only use the charger included in the box.

3. The moving bars on the battery icon will stop after charging is complete.
4. Ensure the battery is fully charged before using the phone for the first time.

### CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the USIM card while charging.

### WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. This may cause a fire.

# Getting Started

## Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



## How to use a microSD memory card



<MicroSD memory card>

### <How to insert a microSD memory card>

1. Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.

2. Lift the plastic cover which protects the microSD slot.



3. Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.

4. Once inserted, push the memory card until you hear a **Click**, meaning that the microSD has been correctly engaged.




5. Close the plastic slot protection.
6. To remove the memory card, turn the phone off, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

#### Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.


## Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Phone settings** → **Memory manager** → **External memory**, then press  the left soft key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.


## Turning the handset on/off

### Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold  until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**. (Note: Please refer to page 79) After a few seconds you will be registered on the network.

# Getting Started

## Turning your handset off

Press and hold  until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

## Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except the PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu #.2.6.3].

## PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorised use. The PIN code is usually supplied with the USIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time it is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

## PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as **Fixed dial number**. These functions are only available if supported by your USIM card.

## PUK code (8 digits)

The PUK (PIN Unlocking Key) code is required to unblock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact your network operator's customer service department for the code. If you lose the code, contact your network operator's customer service department.

## PUK2 code (8 digits)


The PUK2 code, supplied with some USIM cards, is required to unblock a blocked PIN2 code. If you lose the code, contact your network operator's customer service department.

## Security code (4 digits)

The security code prevents unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to the factory settings.

## Display information


### No USIM idle screen

This is the initial screen of the phone that appears when there is no USIM card installed in the phone, or the installed USIM card is invalid. In this screen, users can only make emergency calls, and turn the phone off. To turn the phone off, press and hold down  for a few seconds.

### Screen structure

If there is no USIM card installed, an animation telling you to insert a USIM card appears. If the USIM card inserted into the phone is invalid, an animation telling you that the USIM card is locked appears.

## Emergency call function

The right soft key is represented by "Emergency" on the screen. Press the right soft key or dial your emergency number using the number keys, and then press  to make an emergency call.

## Idle screen

The idle screen appears when you have installed a proper USIM card and turned the phone on.

### Screen structure


Idle screen consists of the operator's name, indicators, date and time on a background image. You can change the wallpaper in the **Display settings** menu.

## Numbering screen

The numbering screen appears when a number key is pressed in the idle screen.

# Getting Started


## Screen structure

The numbering screen consists of status indicators, dialled number and soft menu. Status indicators are the same as those of the idle screen. You can change the size and colour of the dialling font in the **Display settings** menu. You can make a call while dialling a phone number by pressing .

## Soft key

You can use the soft keys for several functions while dialling a number. Using the left soft key, you can make a video call, send a message to the number, save the number to Contacts, search contacts.

## Handset lock screen

When the **Handset lock** function is selected, you can only make an emergency call, release the lock, and turn off the phone in this screen. As always, you can turn the phone off by pressing and holding  for a few seconds.

## Screen structure

The screen structure of the Handset lock screen is the same as that of the idle screen.

## Emergency call function

You can make an emergency call using the right soft key. As with the **No USIM idle screen**, only emergency numbers can be dialled.

## Unlock function

If you press key except right soft key and number key, a popup screen appears asking you to input the Security code to unlock the phone. The Security code is configured in the **Change codes** (#. Settings → 2. Phone settings → 6. Security > 3. Change codes). If you key in an incorrect Security Code, the phone will remain in **Handset lock** status. If you key in the correct Security code, the phone will be unlocked, and the idle screen will be displayed. If you have turned the phone off in the **Handset lock** status, you will find the phone remains in **Handset lock** status when you turn it on.





## Barring password

This service obstructs calling service in some conditions. This condition can be edited using the **Call barring** feature (#. Settings → 4. Call settings → 2. Call barring). The barring password is required when you use the call barring function. The password is obtained from your network operator's customer service when you subscribe to this service. While this service is activated, the caller will hear the information message that the call is not connected because of the call barring.


# General Functions

## Making and answering calls





### Making a voice call

1. Enter the number including the full area code.
  - ▶ To delete a digit press .
  - ▶ To delete all digits press and hold .
2. Press  to make the call.
3. Press  to finish the call, or close the handset.

#### Note



- ▶ To activate the speakerphone during a call, activate the touch keys and press .

### Making a call from the call logs

1. In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using  / .
3. Press  to call the number.


## Making a video call

You can make a video call in a 3G covered service area. If the called user has a 3G video phone in a 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.
  - ▶ To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.
2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press the left soft key [Options] and select **Video call**.
  - ▶ You will be notified that you will need to close other applications to make the video call.




**Note**

- ▶ The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.



4. Adjust the camera position if necessary.
5. Press  to finish the call, or close the handset.

**Making a voice/video call from Contacts**



It is easy to call anyone whose number you have stored in your Contacts.

1. Press  to access the contacts list.
2. Scroll to the contact to make a call.
3. Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
4. Press  to finish the call.

**Making international calls**

1. Press and hold  for the international prefix. The '+' character prefixes the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

**Adjusting the volume**

During a call, if you want to adjust the earpiece volume, use  on the left side of the phone. In idle mode, you can adjust the key volume using .




**Answering a call**


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

# General Functions


1. Open the slider to answer an incoming call.

## Note


- ▶ To reject an incoming call, press  or the right soft key twice.
- ▶ If you set **Answer mode** as **Press send key** (Menu #.5.0.4), you can answer the call by pressing  after opening the slider.
- ▶ If the answer mode is set to Press any key, any key will answer a call except for .

2. End the call by closing the handset or pressing .

## Note

- ▶ You can answer a call while using the Contacts or other menu features.
- ▶ When the compatible headset is connected, you can also answer a call using the headset key, as well as using the phone. To reject an incoming call, press .
- ▶ You can mute the ringtone when a call comes in by pressing and holding the volume down side key.

## Shortcut to activate vibrate mode

You can activate the vibrate only mode by pressing and holding down  after opening the phone.


## Signal strength

You can check the strength of your signal by the signal indicator on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

## Entering text

You can enter alphanumeric characters using the keypad. For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text. The following text input methods are available with the handset.

## T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text. If you press  key for a long time, you can activate or cancel T9 mode.

## ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.


## 123 mode (Number mode)

Type numbers using one keystroke per number.

## Changing the text input mode




1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator

in the upper right corner of the LCD screen.

2. If T9 is on, you can change the mode to T9Abc, T9ABC, 123, T9abc by pressing . When T9 is off, the mode will be changed to Abc, ABC, 123, abc.

## Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing  to . Press one key per letter.
  - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
  - ▶ If the word is still incorrect after typing completely, press  once or more to scroll through the other word options.

# General Functions

## Example

Press to type **Good**.

Press to get **Home**.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
  3. Complete each word with a space by pressing .

To delete letters, press .

## Using the ABC Mode

Use to to enter your text.

1. Press the key labelled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.
2. To insert a space, press once.  
To delete letters, press .

Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Lower case	Upper case
	.,?!" '1-()@/!:_	.,?!" '1-()@/!:_
	abc2âáãäåäæç	ABC2ÁÁÁÁÁÆÇ
	def3èéêë	DEF3ÈÉÊË
	ghi4íîï	GHI4ÍÎÏ
	jk15£	JKL5£
	mno6ñòóôõöøœ	MNO6ÑÓÓÓÓØŒ
	pqr7ß\$	PQRS7ß\$
	tuv8ùúûü	TUV8ÚÚÚÛ
	wxyz9	WXYZ9
	Space, 0	Space, 0

## Note


- ▶ The characters assigned to the keys and their order of appearance depends on the language selected using the option **Input method**. The table above provides the characters set for English language.

## Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Using the symbol mode

The symbol mode enables you to enter various symbols or special characters.

To enter a symbol, select **Options** → **Insert** → **Symbols**. Use the navigation and numeric keys to select the desired symbol and press  .

# Overview of Menu Functions

You can launch a menu by pressing **OK** in the idle screen. Move to the desired item and press **OK** to go into the sub menu.

From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menus and sub menus.

<b>1. Entertainment</b> <ul style="list-style-type: none"><li>1.1 Games &amp; Applications</li><li>1.2 Mobile TV</li></ul>	<b>3. Music</b> <ul style="list-style-type: none"><li>3.1 Recently played</li><li>3.2 My music</li><li>3.3 Music store</li></ul>	<b>5. Messaging</b> <ul style="list-style-type: none"><li>5.1 Create new</li><li>5.2 Inbox</li><li>5.3 Email</li><li>5.4 Drafts</li><li>5.5 Outbox</li><li>5.6 Sent messages</li><li>5.7 Templates</li><li>5.8 Emoticons</li><li>5.9 Messaging settings</li></ul>
<b>2. Vodafone live!</b> <ul style="list-style-type: none"><li>2.1 Homepage</li><li>2.2 Enter URL</li><li>2.3 Bookmarks</li><li>2.4 Saved pages</li><li>2.5 History</li><li>2.6 Browser settings</li><li>2.7 Search</li><li>2.8 Mobile TV</li><li>2.9 Music</li><li>2.10 Games</li><li>2.11 Ringtones</li><li>2.12 Pictures</li><li>2.13 News</li><li>2.14 Sport</li></ul>	<b>4. Camera</b> <ul style="list-style-type: none"><li>4.1 Still camera</li><li>4.2 Video camera</li></ul>	

**6. My Files**

- 6.1 Pictures
- 6.2 Sounds
- 6.3 Videos
- 6.4 Games & Applications
- 6.5 Others
- 6.6 External memory

**7. Organiser & Tools**

- 7.1 Quick menu
- 7.2 Alarms
- 7.3 Calendar
- 7.4 Tasks
- 7.5 Games & Applications
- 7.6 Memo
- 7.7 Voice recorder
- 7.8 Private memo
- 7.9 Calculator
- 7.10 Converter
- 7.11 World time
- 7.12 Organiser settings

**8. Contacts**

- 8.1 Add new
- 8.2 Contacts list
- 8.3 Groups
- 8.4 Speed dials
- 8.5 Service dial numbers
- 8.6 Own number
- 8.7 My business card
- 8.8 Contact settings

**9. Calls**

- 9.1 All calls
- 9.2 Dialed calls
- 9.3 Received calls
- 9.4 Missed calls

**\*. USIM Tool Kit****0. Video call****#. Settings**

- #.1 Profiles
- #.2 Phone setting
- #.3 Display settings
- #.4 Call setting
- #.5 Messaging setting
- #.6 Contact setting
- #.7 Connectivity
- #.8 Java setting

# Entertainment [Menu 1]

## Games & Applications

### Menu 1.1

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Inside the folder Applications you can find and use Google Maps for Mobile and bid and buy whatever you need on eBay. Please note that additional costs may be incurred when using online services. You can create a folder using the left soft key [Options].

## Mobile TV

### Menu 1.2

You can access Mobile TV by selecting this menu.

# Vodafone live! [Menu 2]

## Homepage

Menu 2.1

You can launch the web browser and access the homepage of the activated profile on Browser settings.

- ▶ You can also directly access Vodafone live! by pressing the right soft key in idle mode.

## Enter URL

Menu 2.2

You can manually enter a URL address and access the associated web page.

- ▶ To enter a symbol, press the left soft key [Options] and select **1.Insert symbol** from **Options** menu to display the symbol table.
- ▶ To switch input mode, press the left soft key [Options] and select **2. Input method**.

## Bookmarks

Menu 2.3

You can store frequently accessed or favourite URLs/Pages. **Send**, **Add new**, **Edit**, **Mark/Unmark** or **Delete** operations can be performed on **Bookmarks**. Several preconfigured URLs are stored as bookmarks.

## Adding a new bookmark

1. Press the left soft key [Options] and select **2.Add new** from **Options** menu.
2. Enter the title and associated URL information.
3. Press **OK** to save.

## Connecting to a desired bookmark

Press **OK** to connect a desired bookmark.

## Sending the bookmark to others

Select **Send** from **Options** menu. You can send it via **Message** or **Email**.

## Deleting a bookmark

Select **Delete** from **Options** menu. You can delete multiple bookmarks using the **Mark/Unmark** option.

## Editing a bookmark

Select **Edit** from **Options** menu. Edit the title and associated URL information. Press **OK** to save.

## Saved pages

Menu 2.4

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

# Vodafone live!


## History Menu 2.5

You can view the list of the pages you've already connected.

## Browser settings Menu 2.6

You can change the settings for browser connectivity and display.

## Profiles (Menu 2.6.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

## Appearance settings (Menu 2.6.2)

## Cache (Menu 2.6.3)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

## Cookies (Menu 2.6.4)

Enabling Cookie allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

## Security (Menu 2.6.5)

### Certificates list (Menu 2.6.5.1)

Certificates can be viewed from the list.

### Session list (Menu 2.6.5.2)

Secure (WTLS/TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

## Reset settings (Menu 2.6.6)

Select this to reset your phone to its default browser configuration.

## Search Menu 2.7

You can search on-line menu.

## Mobile TV Menu 2.8

Use this menu to access the online TV service. You can watch TV and use various Mobile TV services. For further details, please contact your Service Provider.

## Music Menu 2.9

Use this menu to enjoy music files and listen to Vodafone Radio DJ stations.

## **Games** Menu 2.10

You can download games from the Vodafone website.

## **Ringtones** Menu 2.11

You can download ringtones from the Vodafone website.

## **Pictures** Menu 2.12

You can download pictures from the Vodafone website.

## **News** Menu 2.13

Use this menu to access the Vodafone website to get recent news events.

## **Sport** Menu 2.14

Use this menu to access the Vodafone website to get the latest sports news.

# Music [Menu 3]

## Recently played Menu 3.1

This menu shows the last 20 tracks that were played. And, if it starts to play, the menu "Now playing" will be displayed. You can activate media player on playing through Now playing menu.

## My music Menu 3.2

### All tracks (Menu 3.2.1)

You can view all the music files stored in the phone/external memory.

### Playlists (Menu 3.2.2)

You can create your own playlists by choosing tracks from the All tracks menu list.

### Artists (Menu 3.2.3)

You can view and play music sorted by Artists.

### Albums (Menu 3.2.4)

You can view and play music sorted by Albums.

### Genres (Menu 3.2.5)

You can view and play music sorted by Genres.

## Shuffle tracks (Menu 3.2.6)

If you want to play the music continuously and randomly, select this option.

## Music store Menu 3.3

Connects to the Vodafone music download site.


### Note

Additional charges may be incurred when downloading music. Contact your service provider for further information.

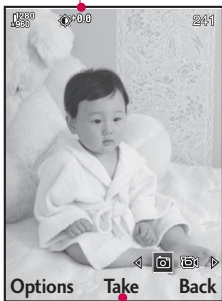
# Camera [Menu 4]


## Still camera






Menu 4.1

This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes. Once taken, the picture can be sent by Message, Postcard, Email or Bluetooth .

**Brightness:** From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.






Press  to take a picture.

1. Press the left soft key to access **Options** and set the desired environment as follows.
  - ▶ Move between the options menus with  / .
  - ▶ Select the desired value with  /  and confirm the selection with .

# Camera

Menu	Description
Go to	The Pictures folder is launched and displays existing pictures as thumbnails. You can view pictures by pressing <b>OK</b> . You can also send the selected picture to another party via <b>Message, Postcard, EMail or Bluetooth.</b>
Size	1600x1200, 640x480, 320X240, Wallpaper, 176x144, Contact
Quality	Super fine, Fine, Standard
Burst shot	One, Three, Six, Nine (Note: Available Burst shot depends on the size.)
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
Preview	Select the desired Preview method, either Full image, Full screen.
White balance	You can adjust the tone of the background photo according to the weather. <b>Auto, Daylight, Cloudy, Illuminate, Indoors</b>

Menu	Description
Night mode	You can take better pictures at night by selecting <b>On</b> .
Frame Shot	You can apply one of 10 frame effects when taking a picture. (available only in case of <b>Wallpaper</b> size)
Timer	You can delay the camera shutter time. None, 3 secs., 5secs., 10 secs. "  " is shown when the timer is activated.
Effect	None, Black & White, Negative, Sepia
Sound	Select the desired shutter sound.
Memory	Select the desired memory, either <b>Handset</b> or <b>External</b> .
Mirror	You can activate the mirror effect by selecting <b>On</b> .
Swap cam	You can switch the camera to activate either the Internal or the External camera.

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what you want to take and press .
4. Press  to save the picture. It is saved in the Pictures folder of My Files.

**Note**

Press the right soft key [Back] to go back to the preview mode without saving the picture.

# Camera


## Video camera






Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by Message, Email or Bluetooth.

**Brightness:** From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen






Press the  to record the image.

1. Press the left soft key to access **Options** and set the desired environment as follows.
  - ▶ Move between the options menus with  / .
  - ▶ Select the desired value with  /  and confirm the selection with .

Menu	Description
Go to	The Videos folder is launched and displays existing videos as thumbnails. You can view videos by pressing <b>OK</b> . You can also send the selected video to another party via Message, Email or Bluetooth.
Grootte	176x144, 128x96
Quality	Super fine, Fine, Standard
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
White balance	You can adjust the tone of the background video according to the weather: <b>Auto, Daylight, Cloudy, Illuminate, Indoors</b>

Menu	Description
Night mode	You can take better shots at night by selecting <b>On</b> .
Effect	None, Black & White, Negative, Sepia
Duration	Select the desired recording time. <b>Message, 30 secs., 1 min, 2mins., 5mins., 60 mins.</b>
Memory	Select the desired memory, either <b>Handset</b> or <b>External</b> .
Mirror	You can activate the mirror effect by selecting <b>On</b> .
Mute	Decide whether to record the sound or not.
Swap cam	You can switch the camera to activate either <b>Internal</b> or <b>External</b> .

# Camera

2. After finishing all the settings, press the right soft key [Close].
3. Focus the camera on what to record and press  to start recording. And press  to stop recording.
  - ▶ You can pause the recording by pressing the left soft key [Pause].
4. Press  to save the video clip. It is saved in the Videos folder of My Files.

## Note

Press the right soft key [Back] to go back to the preview mode without saving the video clip.

# Messaging [Menu 5]

## Create new

Menu 5.1

## Message



(Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1. Enter your message in the Message field.

### Option menus in Message field

▶ **Insert:** You can perform the following actions:

1. **Image:** You can insert an image. (Existing image/Take picture)
2. **Video:** You can insert a video clip. (One video clip per slide)
3. **Sound:** You can insert a sound file. (One sound per slide)
4. **Symbols:** You can insert symbols. After entering the corresponding number keys, press .
5. **Template:** You can insert a text template saved on the phone. After selecting a template, press . The selected template

is inserted into the Message window.


6. **Emoticon:** You can insert an emoticon on writing a message.
7. **Name & number:** After searching the name and the number in phonebook, you can insert the entry.
8. **New slide:** Select this to add a new slide.
9. **Subject:** Select this to insert a subject.
  - ▶ **Save to drafts:** Select this to save the message to drafts.
  - ▶ **Input method:** Select the desired dictionary mode.
  - ▶ **Writing language:** You can select the language for writing a message.
  - ▶ **Add to dictionary:** You can add a word to the dictionary.
2. Press the right soft key [Back] to exit the menu or go to previous menu after setting submenus.

# Messaging

3. Press the confirmation key [Send] to send the message. The message will automatically be saved in the Sent Items folder. If the message has not been sent, it will remain in the Outbox with a failed status.

## Email (Menu 5.1.2)

To send/receive an Email, you should set up the Email account. (Refer to page 56-59 for how to set up an Email account.)


1. Enter the Email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing .

### Note

- Enter the reference Email address to forward the Email in Cc(Carbon copy) field.
- Enter a hidden reference Email address to forward the Email without forwarding information in Bcc(Blind Carbon Copy) field.

- Only valid Email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an Email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.
4. Use the following functions by using the left soft key [Options].
  - ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
  - ▶ **Search contacts:** Select this menu to insert Email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)




- ▶ **Recently used:** You can use the latest Email address you saved temporarily.
  - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
  - ▶ **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)
  - ▶ **Remove:** Deletes the attachment file. (This item is only available when the files are already attached.)
  - ▶ **Input method:** Select the desired dictionary mode.
  - ▶ **Add to dictionary:** You can add a new word to the dictionary.
  - ▶ **Writing language:** You can change the writing language.
  - ▶ **Set mail priority:** You can configure the priority of the Email you wish to send.
5. When you have finished writing an Email, press  to send the Email.

## Voice message (Menu 5.1.3)

You can send the message with a recorded voice.

1. Enter the voice message menu.
2. Press the centre key to record your voice message.
3. Press the centre key to stop the recording. For sending the message directly, press the centre key once again.
4. If you want to preview the message or save it to drafts, press the left soft key [Options].

## Inbox Menu 5.2

1. You can view received messages. Select a message and then press  to view the message.
2. You can view the previous or next message by using  / .
3. To view a multimedia message (Notification), select **Retrieve** in the message notification view screen. The file is then transmitted, and you can view the file when the transmission is complete.

# Messaging

You can use the following functions by using the left soft key [Options] in the Inbox.

- ▶ **Reply to:** Creates a reply to the sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.

## Note

Not supported for multimedia message (Notification) and WAP push messages.

- ▶ **Make voice call:** You can make a voice call.
- ▶ **Make video call:** You can make a video call.
- ▶ **Delete:** Deletes the current message.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Copy:** In case of SMS, you can copy the message into handset or USIM.
- ▶ **Move:** In case of SMS, you can move the message into handset or

USIM.

- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Message information:** You can check the message type, subject, from, date and time and where it is saved.

## Note

You can check the saved emails in Email [Menu 5.6].

## Email

Menu 5.3

### Viewing Email message list

1. Select an Email account and then press **[OK]** to view the received Email list.
2. In Email list, you can use the following functions by using the left soft key [Options].
  - ▶ **Reply:** Creates a reply to the selected Email.

- ▶ **Forward:** Forwards the selected Email message to others.
  - ▶ **Retrieve (POP3 only):** Retrieves new Email messages.
  - ▶ **Copy to (IMAP only):** Copies the selected email .
  - ▶ **Search:** Searches the Email you want to find out.
  - ▶ **Delete:** Deletes the Email.
  - ▶ **Delete from server (POP3 only):** Deletes the message or Email from server.
  - ▶ **Message synchronisation (IMAP only):** Synchronises Email to retrieve Email server.
  - ▶ **Create new message:** Creates a new message Email, Postcard, or voice message.
  - ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
  - ▶ **Set as read/unread:** You can set the selected Email to read or unread.
  - ▶ **Sort by:** You can sort Email according to the conditions.
  - ▶ **Expunge (IMAP only):** Removes the selected Email data at a time.
  - ▶ **Message information:** Brief information on the message including size, type, date, time and filenames.
- ### Viewing an Email message
1. Select one of the received Emails and press the View key to receive the contents of the Email.
  2. The contents of the received Email are automatically displayed in the View screen.
  3. In the Email View screen, you can select the following functions by using the left soft key [Options].
    - ▶ **Reply:** Creates a reply to the selected Email.
    - ▶ **Forward:** Forwards the selected Email message to others.
    - ▶ **Save address:** Saves the sender's address to Contacts.

# Messaging

- ▶ **Delete:** Deletes the Email.
- ▶ **Extract:** Extracts the number, Email address or Web address from Email message.
- ▶ **View attachment:** Shows the attached file.
- ▶ **View recipients:** Shows the Email addresses of the recipients and reference (Cc).
- ▶ **Create new message:** Creates a new message.
- ▶ **Message information:** Brief information on the message including size, type, date, time and filenames.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message information:** You can check the message type, subject, from, date, time, size and where it's saved.

## Drafts

Menu 5.4

You can view saved messages. Select a message and then press **[OK]** to edit the message.

You can use the following functions by using the left soft key [Options].

- ▶ **Send:** Sends the selected message.
- ▶ **Delete:** Deletes the selected message.

## Outbox

Menu 5.5

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, Emails will be placed in Outbox if the Email account is not correctly configured.

1. Select a message.
2. You can use the following functions by using the left soft key [Options].

### [For sending / waiting messages]

- ▶ **Create new message:** You can write a new message or an Email.

- ▶ **Cancel sending:** You can stop sending/waiting status.
- ▶ **Message information:** You can check the message type, subject, from, date, time, size and where it's saved.

### [For a failed message]

- ▶ **Resend:** Resends the selected message.
- ▶ **Delete:** Deletes the current message.
- ▶ **Save to drafts:** You can send the message to drafts.
- ▶ **Create new message:** You can write a new message or an Email.
- ▶ **Message information:** You can check the message type, subject, from, date, time, size and where it's saved.

## Sent messages

Menu 5.6

Shows the messages you sent (Message/Email/Postcard/Voice message).

### [Options]

- ▶ **Reply to:** Creates a reply to sender or all recipients of the selected message.

- ▶ **Forward:** Forwards the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Create new message:** You can write a new message.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Message information:** You can check the message type, subject, from, date, time, size and where it is saved.

## Templates

Menu 5.7

### Text templates

(Menu 5.7.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

# Messaging

## Note

Depending on your service provider, useful phrases are saved as a default.

## Multimedia templates (Menu 5.7.2)

You can create, edit and view available templates when creating multimedia messages. Five types of template (Birthday, Greeting, Holiday, Thanks, Sorry) are saved by default.

The following options are available.

- ▶ **Add new:** You can create a new multimedia template.
- ▶ **Write multimedia message:** Creates a multimedia message with the selected template.
- ▶ **Edit:** Edits the selected template.

## Emoticons Menu 5.8

You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message. If you press confirmation key, you can view the icon.

## Messaging settings

Menu 5.9

### Text message (Menu 5.9.1)

You can configure text message related options.

- 1. Text message centre:** Input the address of the Text message centre.
- 2. Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.
- 3. Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- 4. Message types: Text, Voice, Fax, X.400, Email**  
Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

## 5. Character encoding: Auto/ Default /Unicode

- ▶ **Auto(default):** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).
- ▶ **Default alphabet:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.
- ▶ **Unicode:** Message is encoded in double byte. Please note that you may be charged double.

**6. Send long text as:** Select a long text message as Multiple SMS or MMS.

## Multimedia message

(Menu 5.9.2)

You can configure Multimedia message related options.

- 1. Retrieval mode:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.
- 2. Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.
  - ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
  - ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.
- 3. Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and

# Messaging

whether to allow sending a read confirmation mail to a sender.

- ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
  - ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
4. **Priority:** You can select the priority level of the messages (Low, Normal and High).
  5. **Validity period:** Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.
  6. **Slide duration:** Allows you to configure the duration of each page when writing a message.
  7. **Creation mode:** Allows to select the contents type supported by MMS. (Restricted, Warning and Free)
  8. **Delivery time:** Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.
  9. **Multimedia message centre:** Allows you to configure network information such as the MMSC and the WAP gateway, to send a multimedia message.

Using the left soft key [Options], you can activate, add, view or delete a profile. A profilename selected by a checkmark is the currently configured value. You can view and edit the contents of the profile by using option menu.

    - ▶ **Title:** Profile name.
    - ▶ **MMSC URL:** Enter the multimedia message centre URL.
    - ▶ **MMS Proxy:** Enter the WAP gateway address and port number.
    - ▶ **Connection mode:** Select one of the connection mode. (TCP with Proxy, TCP without Proxy, UDP)

- ▶ **Access points:** Specify the access point name. (see WAP connection settings.)


Press the right soft key [Save] to save the changes and complete Multimedia msg. centre setting.

## Email (Menu 5.9.3)

You can configure settings for receiving and transmitting emails.

- 1. Vodafone email:** Access to Vodafone Mail.

(**Note:** This service is not available in all countries. Please contact your service provider for further information.)

- 2. Email accounts:** You can create or configure an Email account including the Email server and user ID. You can edit a selected Email account by pressing the left soft key[option]-2.Edit. You can select an Email account to be used to send an Email using . You can select the following functions using the left soft key [Options].

- ▶ **Add new:** Create a new Email account.
  - ▶ **Edit:** To edit the selected Email account.
  - ▶ **View:** Views a selected Email account.
  - ▶ **Mark/Unmark:** Use mark/unmark option for multiple deletion.
  - ▶ **Delete:** Deletes a selected Email account. All the emails included in the account will be deleted.
- 3. Allow reply Email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
  - 4. Include original message:** Determines whether to include the original message when you forward the message or reply to it.
  - 5. Include attachment:** Determines whether to include the attachment file when you forward the message.
  - 6. Auto retrieval in roaming:** Retrieves Email account automatically when you move in roaming area.

# Messaging

**7. Automatic download:** You can set the configuration of downloading the contents for CPE.

**8. New Email noti.:** Receives the notification information when arriving new Email.

**9. Signature:** You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when it is sent.

**10. Priority:** You can select the priority level of Emails (Low, Normal and High).

## Creating a new Email account

1. Select **Add new** from the Email account menu options.
2. The following items need to be configured.

Title	Enter a title.
Username	Enter the user name of the Email account.
Password	Enter the Email account password.
Email address	Enter the Email address for outgoing mail.
Reply Email address	Enter the Email address to reply to your Email.
Outgoing mail server	Enter the outgoing Email server.
Incoming mail server	Enter the incoming Email server.
Maximum receive size	Select the maximum Email receive size using the left soft key. The permissible maximum receive size is no more than 1MB.
Mailbox type	Select the Email inbox type either POP3 or IMAP4 using the left soft key.
Save to server	Determine whether to leave a copy of messages on the incoming server or not using the left soft key. When the mailbox type is set to IMAP4, a copy of messages are always saved to the server.
Save sent mail into	Select where to save the sent mails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

Access points	Select an access point to connect to the Internet. You can select a configured access point using the left soft key.
Advanced settings	Sets the configuration to connect Email server.
SMTP port number	Enter the mail server port number. In general, the SMTP (Outgoing mail server port number) is 25.
Incoming server port	Enter the mail server port number. In general, the incoming mail server port number is 110(POP3) or 143(IMAP4).
SMTP authentication	Decide whether the outgoing mail server to require authentication or not using the left soft key. When the SMTP authentication is set to On, you can enter the SMTP Username and SMTP Password for SMTP authentication.
SMTP username	Enters SMTP user name to require authentication.
SMTP password	Enters SMTP password to require authentication.
APOP secure login	Decide whether to activate APOP secure login or not using the left soft key. When the mailbox type is IMAP4, APOP secure login is always set to OFF.

3. Press the centre soft key [Save] to complete the Email account configuration.

### Voicemail (Menu 5.9.4)

You can configure the voicemail receipt option.

### Service message (Menu 5.9.5)


You can configure the option settings such as Push(SI/SL) messages.

- ▶ **Message receive:** If you set On, all service messages will be received.
- ▶ **Service security:** You can manipulate the overall receipt options related to Push(SI/SL) messages.

#### - Service security set

- **Trusted:** If you set On, the phone will verify the appropriateness of message by comparing to the list in Trusted list.
- **Untrusted:** If you set On, the phone will verify the appropriateness of message by comparing to the list in Untrusted list.

# Messaging

- **Update:** If you set On, you can update the 'Trusted/Untrusted list' with the address of message server. , you can choose which list you want to update by selecting one of options from popup list. In addition, server' SMSC & Originating address in the message will be updated to either of Trusted/Untrusted list.
  - **Trusted list:** Only valid "Service security > Trusted list" status is 'On'. The list indicates the valid list of server's SMSC & Originating address(OA). Message which has differ value to either of SMSC or OA address will be discarded.
  - **Untrusted list:** Only valid "Service security > Untrusted list" status is 'On'. Message which has matched values(SMSC & Originating address) means invalid. Message which has differ value to either of SMSC or OA address will be accepted.
- Info. service** (Menu 5.9.6)
- ▶ **Cell broadcast:** You can set the reception status.
  - ▶ **Channels:** You can add or modify the channels.
  - ▶ **Languages:** You can select the language you want by pressing  . Then, the info service message will be shown in the language that you have selected.

# My Files [Menu 6]

## Pictures

### Menu 6.1

The Pictures folder consists of embedded links for downloading pictures through the Internet and Default images.

Pictures taken using the camera are stored in the Pictures folder and you can create new folders to manage them. You can also send multiple files to other people.

To view the picture in details, press the confirmation key.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Send:** You can send the selected image via Message, Postcard, Email or Bluetooth.
- ▶ **Use as**
  - **Home screen:** You can set an image as the home screen theme.
  - **Contacts image:** You can set the image of selected entry in contacts. When incoming a call, the image saved in contact is displayed.

- **Start up image:** You can set an image as shut up screen theme.
- **Power off image:** You can set an image as shut down image.

- ▶ **Move:** Enables the file to be moved to other folder.
- ▶ **Copy:** Enables the file to be copied to other folder.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
  - **Rename:** You can rename the image.
  - **Edit:** Enables the image to be edited.

### Note

Edit menu is not displayed in default images folder.

- **File info.:** Shows information on the selected image file.

# My Files

- ▶ **Create new folder:** You can create a new folder within the folder currently selected.
- ▶ **Slide show:** You can view the images as a slide show.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **List view/Grid view:** You can view the images as a List view or Grid view.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

## Sounds

Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the Default sounds and Voice recordings. Here you can manage, send or set sounds as ringtones.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Use as**
  - **Voice ringtone:** You can set the sound file as a ringtone when incoming a voice call.

- **Video ringtone:** You can set the sound file as a ringtone when incoming a video call.
- **Message tone:** You can set the sound file as a ringtone when receiving a message.
- **Start up sound:** You can set the sound file as a ringtone when handset starts up.
- **Power off sound:** You can set the sound file as a ringtone when handset shut down.
- ▶ **Sort by:** You can sort the files by date, file type or name.
- ▶ **File info.:** Shows the information on the selected sound file.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

## Videos

Menu 6.3

Here you can manage or send downloaded or captured videos clips.





If you press  [Connect], you can activate the video file.

The following are available using the left soft key [Options] in the Video list.



- ▶ **Send:** You can send the selected video clip via Message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone.
- ▶ **Move:** Moves the file into handset memory or external memory.
- ▶ **Copy:** Copies the file in handset memory or external memory.
- ▶ **Delete:** Deletes the selected video.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **File**
  - **Rename:** You can rename the video.
- ▶ **Create new folder:** You can create a new folder.
- ▶ **Sort by:** You can sort files by name, date, or file type.

▶ **List view/Grid view:** You can view the images as a List view or Grid view.

▶ **Memory status:** Displays the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the  /  /  /  . Select a desired video and select **Play** to view the recorded video.

Select the left soft key [Send] to attach the selected video to a message, Email or Bluetooth.

When option **1. Play** is selected, the video clip will be played with the Media Player. To pause the playback, press  during the playback. To resume the paused playback, press  once again.

To capture the screen shot, press the right soft key [Capture] when the playback is paused.

To view the current playback in full screen, press the right soft key during the playback.


# My Files

To return to the previous screen size, press the right soft key once again in full screen mode.

When viewing video clips in the Media Player, the following options are available:

- ▶ **Wide view:** You can view the video in wide view mode.

## Note

You can also view the video in wide view mode by pressing  key.

- ▶ **Mute/Unmute:** If the Volume is set to more than 0, Mute mode is activated and if the Volume is set to 0, the Unmute mode is activated.
- ▶ **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- ▶ **Repeat:** You can set the repeat option (None/Current file/All files).
- ▶ **File info.:** You can check information on files being played (File name, Size, Date, Type, Duration, Protection).

- ▶ **Send:** You can send the video via Message, Email or Bluetooth if the file is not protected by Digital Rights Management (DRM).
- ▶ **Delete:** Deletes the selected video.
- ▶ **Use as:** You can set the video file as voice ringtone or video ringtone. This menu is dependent upon the contents.

## Games & Applications

Menu 6.4

You can easily download games and other applications in this menu. It has two folders, **Games** and **Applications**, as default. Each folder has an embedded link for downloading games or applications. Please note that additional cost may be incurred when using online services. You can create a folder using the left soft key [Options].

## Others

Menu 6.5

Other files except pictures, sounds, videos, games & applications are stored in this folder.

## External memory Menu 6.6



If you purchase an optional external microSD memory card, you can manage more content. Refer to the section **How to use a microSD memory card** on page 22 and 23 to learn how to insert and remove the memory card. You can manage content as you do on your phone.

# Organiser & Tools [Menu 7]

## Quick menu Menu 7.1


You can specify functions to save in the Quick menu. If you save the functions frequently used in the Quick menu, you can quickly start the functions simply by pressing key.

## Alarms Menu 7.2

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time. Press  to stop the alarm, and the alarm is released. Press the right soft key [Snooze] and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the left soft key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either

'AM' or 'PM' which is visible if 12 hour format is specified for the phone.

4. Select repeat mode: Select the desired repeat mode using  or select the desired one from the list by pressing left soft key [List].
5. **Select bell:** Select the bell to ring at the alarm time opening the list by pressing left soft key [Edit].
6. **Input memo:** Input alarm name.
7. **Snooze:** You can set the snooze duration for the alarm.
8. When you have finished setting the alarm, press the centre key [Save].

### Note

The alarm will go off even when the phone is switched off.

## Calendar Menu 7.3

### Schedule inquiry and search

#### 1. Reference by Months

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked.

The schedule saved for the date where the cursor is located is represented by a grey box. Pressing the shortcut key **1 yr** moves to the previous year and pressing **3 yr** move to the next year and pressing **5 yr** moves to today. Pressing **7 mo** moves to the previous month, and **9 mo** moves to the next month. Pressing **\* w** moves to the weekly calendar. You can move the date using **⏪** / **⏩** / **⏴** / **⏵** .

## 2. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user. You can send the schedule to another phone or an Internet site through SMS (Text message) or MMS (Multimedia message) or Email or Bluetooth using the left soft key [Options].

### Add new event

You can add an event. You can configure the start date, end date, start time, end time, contents, type of event, repetition, alarm of the schedule.

- ▶ **Set type:** Appointment, Anniversary, Birthday

- ▶ **Set repeat:** Once, Daily, Weekly, Monthly, Annually, User setting
- ▶ **Set alarm:** No alarm, On time, 15 mins before, 30 mins before, 1 hour before, 1 day before, 3 days before, 1 week before

### Delete all schedules

You can delete all saved schedule contents using this function.

### Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select **Set holiday**. The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select **Clear holiday**.

### Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

# Organiser & Tools

## Tasks

Menu 7.4

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

### Add

To add a task, press the left soft key [Options] in the Tasks list management screen and select **Add new event** option. Then input the date, description and priority for the task.

When you have finished entering the data, press the centre key [Save] to save the new task.

### Detailed view and Edit

To view detailed task contents, locate the cursor on the desired item in the Tasks list, and then press the centre key. You can send, edit and delete a task using the left soft key [Options].

### Set job status

Tasks set as finished are displayed as crossed out below the unfinished tasks in the Tasks list. You can set Finished tasks to Not finished by selecting **Options**.

## Games & Applications

Menu 7.5

You can easily download games and other applications in this menu. It has two folders, Games and Applications, as default. Each folder has an embedded link for downloading games or applications. Please note that additional cost may be incurred when using online services. You can create a folder using the left soft key [Options].

## Memo


Menu 7.6

Using the memo management function, you can view and manage saved memo contents, and add new memo.

### Add memo







To add a new memo, press the left soft key [Add] or [Add new memo] in Options. Enter the contents of the memo. You can save the memo to the list by pressing the centre key [Save].







### Edit and delete memo

Highlight the desired memo and press  to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing right soft key [Back].

You can select Multiple or All memos using the Mark/Unmark option and then delete a memo using the Delete option.

## Voice recorder Menu 7.7

1. Press the left soft key [Option] to display the option pop up menu before recording.
2. Move to the desired menu item using  /  and press .
- ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
- ▶ **Quality:** You can select a recording quality from **Super fine, Fine, and Normal**.
- ▶ **Go to my sounds:** Opens the Voice recordings folder in Sounds.
3. Pressing  starts recording. When a recording is started, the recording time appears on the LCD. To cancel the recording, press the Back.
4. When you finish the recording, press  to exit. The recorded file is automatically saved in the Voice recordings folder in My files. If you press  again, you can start recording new voice.

5. Press the left soft key to select the various options after the voice recording.
6. Select the desired menu using  /  and press .
- ▶ **Play:** You can play the voice.
- ▶ **Send:** To send the recorded file. Select one from Message, Email and Bluetooth using  /  and press .
- ▶ **File:** You can change the name of file and view the information.
- ▶ **Delete:** Select this menu to delete a recorded file.
- ▶ **Use as:** You can set the recorded file as the Voice Ringtone, Video Ringtone.
- ▶ **Go to my sounds:** Opens the Voice recordings folder in My Files.
7. Press the right soft key to close the sub-menu popup window.

## Private memo Menu 7.8

You can write the private memo to protect your privacy. You enter the security code to use this menu.

# Organiser & Tools

## Add private memo

To add a new memo, press the left soft key [Add] or [Options]. Enter the contents of the memo. You can save the memo to the list by pressing the centre key [Save].

## Edit and delete a private memo

Highlight the desired memo and press **OK** to view its contents. You can edit or delete the contents of a memo using the left soft key [Options]. You can return to the memo management screen by pressing right soft key [Back]. You can select Multiple or All memos using the Mark/Unmark option and then delete a memo using the Delete option.

## Calculator Menu 7.9

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions. (sin, cos, tan, log, ln, exp, sqrt, deg, rad)

1. Press the left soft key [Options].
2. Select the appropriate function.

You can enter numbers by using the number keys, and the operators by using  $\sqrt{\quad}$  /  $\sqrt[\square]{\quad}$  /  $\langle \rangle$  /  $\langle \rangle$  . You can enter a decimal point by pressing  $\# .$  . Whenever you press  $\leftarrow$  , characters are sequentially deleted in reverse order. Whenever you hold  $\leftarrow$  down, all the characters are deleted in reverse order in one go.

When calculation is complete and the result is displayed on the screen, pressing a symbol saves the result into the symbol, and continues calculation.

## Converter Menu 7.10

Met dit menu kunt u valuta, oppervlakte-, lengte-, gewicht-, temperatuur-, volume- en snelheidsmaten converteren.

1. Select the unit menu.
2. Users can set a exchange rate using option menu.
3. Enter the current rate, and then you can convert from one currency to another.
4. You can view the value of units.
5. Press [Reset] to clear the current input Field.

6. To exit the conversion function, press the [Back] key.

## World time Menu 7.11

The World time provides time information on major cities worldwide.

1. You can select a desired city as a base using the left soft key Options → Add city → Press the left soft key [Map].
2. You can Change the city using the left soft key Options → Change city or Change current city.
3. You can apply to Daylight Saving time using the left soft key Options → Daylight saving.
4. You can Select the Analog clock mode Options → Analog clock.

## Organiser settings Menu 7.12

### Calendar settings (Menu 7.12.1)

You can set the configurations to view the calendar.

- ▶ **Default view:** You can set the default value to view a calendar; Month view, Week view

- ▶ **Week start time:** 1 AM, 2 AM, 3 AM, 4 AM, 5 AM, 6 AM, 7 AM, 8 AM, 9 AM, 10 AM, 11 AM, 12 PM

- ▶ **Week starts on:** You can set the default day to start a week; Sunday, Monday

### Backup calendar & tasks (Menu 7.12.2)

You can create the backup files of the calendar or tasks entries saved in the phone when you insert an external memory.

### Restore calendar & tasks (Menu 7.12.3)

You can reset the backup files of calendar or tasks when you insert an external memory.

### Memory info. (Menu 7.12.4)

You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

# Contacts [Menu 8]

## Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and Email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact. Other available fields include Home page URL, Home address, Company name, Job title and company address. You can enter and manage contact addresses depending on the memory usage.

## Contacts list

Menu 8.2

Performs the contact address search function. The search operation is performed based on a first name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number. A Contacts search can be performed based on the phone number or group information.

### Note

In Settings menu, the search operation can be performed based on the last name.

## Groups

Menu 8.3

Using this menu you can manage group information (both stored in the Handset and the USIM). In the handset memory, there are 5 default groups: Family, Friends, Colleagues, School and VIP. You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.


## Speed dials

Menu 8.4

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

## Service dial numbers

Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press  to dial the service.

## Own number

Menu 8.6

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

## My business card

Menu 8.7

You can create your own business card by pressing the left soft key Add. After entering the name, number, Email and image, you can use it as a business card when sending the message.

## Contact settings

Menu 8.8

### Contact list setting (Menu 8.8.1)

- ▶ **View contacts from:** Select which contact information shall be displayed (from handset memory,

from USIM card or both). All is the default setting.

- ▶ **Name display:** You can set the display order by name.
- ▶ **Show image/avatar:** Select whether to display image/avatar or not.

### Copy

(Menu 8.8.2)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all or selected entries at a time.

### Move

(Menu 8.8.3)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all or selected items at a time.

### Backup contacts

(Menu 8.8.4)

You can save all phonebook data in handset to external memory card by formatting vcard.

### Restore contacts

(Menu 8.8.5)

You can restore all phonebook data in external memory card to phone memory by formatting vcard.

# Contacts

## Clear contacts (Menu 8.8.6)

Clears all contact information. You can delete all contacts saved in the mobile phone memory as well as on the USIM card.

## Memory info. (Menu 8.8.7)

You can check the status of contacts memory in this menu.

# Calls [Menu 9]

## All calls Menu 9.1

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

## Dialled calls Menu 9.2

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

## Received calls Menu 9.3

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

## Missed calls Menu 9.4

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

# USIM Tool Kit [Menu \*]

Depending on whether you have SAT support services or not (i.e. USIM Application Toolkit) on the USIM card, this menu (Menu \*) may be different.

If the USIM card supports SAT services, this menu will be the operator-specific service name stored on the USIM card, for instance "Special". Please refer in that case to the information provided with your USIM card for further information on how to use the related options.

If the USIM card does not support SAT services, this menu will be **Alarms**.

For the **Alarms** menu feature, please refer to page 68.

# Video call [Menu 0]

You can make a video call using this menu.

1. Enter the number you want to dial.
  - ▶ You can key in the number.
  - ▶ You can select the number from Search contacts using the left soft key [Options]
2. Press the centre key [Video call] to make a video call.

## During a video call

When you are in a video call, the screen will show the contact's name and duration of call, contact's image, volume indicator, video control panel, and your image.

You can access the following option menus by pressing the left soft key [Options].

- ▶ Mute/Unmute
- ▶ Speaker (On /Off)
- ▶ Bluetooth/Handset talk (When the Bluetooth headset is connected)
- ▶ Hold/Resume
- ▶ Capture
- ▶ View sender number

- ▶ Go to contacts
- ▶ Go to messages
- ▶ Settings
- ▶ End call

## Incoming video call

When a video call is received, the caller's information is displayed as following.

- ▶ **Picture/Animation:** Displays picture ID, graphic image configured in Contacts, or default animation indicating the incoming call.
- ▶ **Caller's name and number:** Shows incoming caller's number. If the number is stored in Contacts, displays the name of the contacts.

Picture ID and animation setting is used in the order of Contacts, video file used in Group ringtone, and video file used in Profile.

Also, sound can be set for the incoming video call. The sound setting is used in the order of Contacts, Group ringtone, and Profile.

# Video call

You can accept the incoming call by pressing the centre key [Accept]. Also you can accept the incoming call and show the private image by pressing the left soft key [Private].

The incoming call ringing can be silenced by pressing the right soft key [Silent]. It can be also silenced by long press on on the left side of the phone.

When ringing is silenced, press the right soft key [Reject] to reject the call.

# Settings [Menu #]

## Profiles

Menu #.1

You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile. The profiles provided include [Normal], [Silent], [Vibrate only], [Outdoor], [Headset], [Customised 1], [Customised 2], and [Customised 3]. Select a profile, and press **[OK]** to activate the profile. After pressing the left soft key [Options], select the Edit menu for the [Normal], [Outdoor], [Headset], [Customised 1], [Customised 2] and [Customised 3] profile to change the configuration. A different list of options is available for each profile that has been selected for editing.

### ▶ Alert by

This option determines the incoming call notification mode. You can select from [Ring], [Vibration], [Silent], [Ring & vibration], [Ring after vibration], [Max Ring & Vibration].

### ▶ Voice ringtone

You can select the ringtone for incoming voice calls.

### ▶ Video ringtone

You can select the ringtone for incoming video calls.

### ▶ Volume

Set the ringtone volume.

### ▶ Message alert

You can set how often the phone is to inform you of a received message until it is read.

### ▶ Message tone

You can select a file from among your own personal files or from the default files, to be played by the phone upon receiving a message.

### ▶ Key tone

You can set the key tone to be played when pressing the keys.

### ▶ Key tone volume

You can set the volume of the chosen key tone, choosing from 7 available levels.

### ▶ Slide tone

Select the desired tone the phone will emit when you slide up/down the phone.

# Settings

## ▶ Confirmation tone

You can set the confirmation tone to be played by the phone to confirm actions.

## ▶ Start up sound

You can set the effect to be played when the phone is switched on.

## ▶ Select start up sound

You can select which file will be played when the phone is switched on.

## ▶ Power off sound

You can set the effect to be played when the phone is switched off.

## ▶ Select power off sound

You can select which file will be played when the phone is switched off.

## Phone setting Menu #.2

### Date & Time (Menu #.2.1)

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time

configured by the user is valid only while the phone is turned on.

### Time

1. Select the **Time** item from the Date & time list, and then press **OK**.
2. Move to your desired field, **Hour**, **Minute**, or am/pm field using the navigation keys. (When you have selected **12 hour** as **Time format**)
3. Enter **Hour**, and **Minutes** using the number keys.
4. Select the time format using **← / →**.
5. Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.
6. Press the centre soft key **OK** to set the time with the specified value.

### Date

1. Select the **Date** item from the Date & time list, and then press **OK**.
2. Select the date format using **← / →**.
3. Enter **Day**, **Month** and **Year** using the number keys.

4. Press the centre soft key (OK) to set the date with the specified value.

### Auto update date/time

When Auto Update is configured to **On**, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, the time and date update is confirmed before it is updated automatically.

### Daylight saving

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

### Language (Menu #.2.2)

Select the display language. You can select **Automatic** language option to change display language to the USIM card supported language.

### Auto key lock (Menu #.2.3)

If you activate this function, the keypad will be locked automatically after predefined delay time when the slide is closed.

### Flight mode (Menu #.2.4)

If you activate the Flight mode, you can use the phone without connecting the 3G wireless network. 3G wireless phone and FM radio signals from the phone or Bluetooth connections are prevented, but you can still do tasks which do not require the use of wireless network. With flight mode you cannot make any calls including emergency calls or use other features that require network service.

### Security (Menu #.2.5)

#### PIN code request

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

#### Note

- ▶ Press the right soft key in the PIN code entry window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.

# Settings

- ▶ The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

## Handset lock

You can lock your phone. The following 4 lock functions are available.

**When switching on:** Locks the handset whenever the handset is switched on.

**If USIM changed:** Locks the handset when the phone's USIM card has been changed.

**Immediate:** Locks the handset immediately.

**None:** Deactivates the lock function.

You are requested to enter the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.





## Change codes

You can change the PIN, PIN2, and the mobile phone password.

### PIN code

PIN is the abbreviation for Personal Identification Number, and is used to restrict use by an unauthorised user.

### PIN code change procedure

1. Select 'PIN code' from the 'Change codes' list and then press .
  2. Enter the current PIN code, and press .
  3. Enter the new PIN code, and press .
  4. Enter the new PIN code once again, and press .
- ▶ If the PIN code is different from that of step 3, the procedure is restarted from step 3.
5. When the PIN code is changed properly, a **Changed** message is displayed. If you enter an incorrect PIN code in step 2, the procedure is restarted from step 2, and the number of attempts you have left to enter the number decreased by 1.

- Press the right soft key in the PIN code entry window to return to the previous step.

**Note**

- ▶ Three incorrect PIN code entries in the PIN code entry window would invalidate the PIN code. In this case, you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again. The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)

**PIN2 code**

PIN2 is the abbreviation for Personal Identification Number 2, and is used to restrict use by unauthorised users as with the PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to enter the PUK2 code in order to use the PIN2 code again. The maximum number of times you may try to enter the PUK2 code is 10, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

**Security code**

The security code is used to change the mobile phone password. The maximum number of attempts to enter the security code is not limited as it is with PIN and PIN2.

**Power save** (Menu #.2.6)

Decide whether to activate the power save mode or not.

**Memory manager** (Menu #.2.7)**Common memory**

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

**Reserved memory**

This function shows the status of the User reserved memory. The usual contents are Text msg, Contacts, Calendar, Tasks, Memo, Alarms, Call history, and Bookmarks. And it gives a clear illustration of the actual amount compared with the total amount for each item.

# Settings

## USIM memory

This function shows the status of the USIM card user memory.

## External memory

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

## Primary storage setting

(Menu #.2.8)

You can select the storage to download the file: Handset memory or External memory.

## Handset Information

(Menu #.2.9)

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

## Reset settings (Menu #.2.10)

Select this to reset your phone to its default configuration. You are requested to enter the security code.

## Display settings (Menu #.3)

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

### Main Display (Menu #.3.1)

You can set the screen theme to be displayed on the main screen.

### Home screen

- ▶ **Wallpaper:** You can select an image to be displayed on the main screen.
- ▶ **Homescreen items:** You can select which items to display on the screen: Calendar + Clock, Calendar, Clock, Clock + Key guide, Dual clock, Key guide or Do not show.
- ▶ **Clock type:** You can select the type of clock.
- ▶ **Clock font colour:** You can select the colour of displaying the clock.

### Outgoing call picture

You can select the image to be displayed while trying to call.

### Start up picture

You can select the image to be displayed while the phone is being switched on.



## Power off picture

You can select the image to be displayed while the phone is being switched off.

## Menu style (Menu #.3.2)

You can select the desired menu style from Grid style and List style.

## Font (Menu #.3.3)

You can set the font style, dialling font size, and dialling font colour using  /  .

## Backlight (Menu #.3.4)

You can set the backlight duration and the brightness on the Home screen and the duration on the Keypad individually.

## Welcome message (Menu #.3.5)

After selecting On, you can write a welcome message.

## Handset theme (Menu #.3.6)

Select the desired handset theme from White and Black.”

## Call setting (Menu #.4)

### Call durations (Menu #.4.1)

You can view call time by types. Press the left soft key [Options] to choose either partial initialisation or entire initialisation. Initialization will require your Security code.

The following timers are available:

- ▶ **All calls:** Shows total call time.
- ▶ **Dialled calls:** Shows outgoing call time.
- ▶ **Received calls:** Shows incoming call time.
- ▶ **Last call:** Shows the latest call time in units of hours/minutes/seconds.

### Call barring (Menu #.4.2)

Call barring menus for Voice and Video calls are provided.

The menu consists of **Voice calls**, **Video calls** and **Deactivate all**. The Voice calls and Video calls menus have the following submenus.

The **Call barring** menu consists of **All outgoing**, **Outgoing international**, **Outgoing international calls except**

# Settings

**home country, All incoming and Incoming when abroad** submenus.

The **All outgoing** menu bars dialling all outgoing calls, the **Outgoing international** menu bars dialling outgoing international calls, and the **Outgoing international calls except home country** menu bars dialling outgoing international calls except for the Home PLMN country. **All incoming** rejects all incoming calls and the **Incoming when abroad** menu rejects incoming calls when roaming.

Voice calls

Video calls

## All outgoing

1. When  is selected, it receives the Barring password from user, and activates the barring service on the network. A requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menus on the lowest menu. Then Deactivate, Deactivate all, View status and Change password menus

appear. The **Deactivate** menu deactivates the barring service after the user's Barring password is entered. The **Deactivate all** menu deactivates all barring services configured in the network after the user's Barring password has been entered. The **View status** menu enables users to view the current network configuration. Selecting **View status** menu displays the Requesting message with animation and the result of the operation when the network answers. **Change password** menu enables users to change the current barring password.

## Outgoing international

1. When  is selected, it operates in the same way as the **Outgoing calls** menu.
2. When the Options menu is selected, it activates and operates the International calls menu. It operates in the same way as the **Outgoing calls** menu.

## Outgoing international calls except home country

1. When  is selected, it operates in the same way as the **Outgoing calls** menu.

- When the Options menu is selected
  - It activates and operates the **International except home country** menu. It operates in the same way as the **Outgoing calls** menu.

### All incoming

- When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
- When the Options menu is selected, it activates and operates the Incoming calls menu. It operates in the same way as the **Outgoing calls** menu.

### Incoming when abroad

- When **OK** is selected, it operates in the same way as the **Outgoing calls** menu.
- When the Options menu is selected, it activates and operates the Incoming calls when abroad menu. It operates in the same way as the **Outgoing calls** menu.

### Fixed dial numbers (Menu #.4.3)

#### ▶ On/Off

- On:** Select whether to activate FDN ornot. PIN2 authentication is

required.

- OFF:** Select whether to activate FDN ornot. PIN2 authentication is required.
- ▶ **FDN list:** Displays the current FDN list. You can edit, add, or delete fixed dial numbers. PIN2 authentication is required to edit,add, or delete the list. And the configuration information is saved on the USIM. The information saved on the USIM is used when FDN restricts outgoing calls.

### Data volume (Menu #.4.4)

Allows you to check the sent, received and all data volume transferred.

Press the left soft key [Clear all] to choose entire initialization. You can also use the [Clear] for the initialization of the selected volume type. Initialization will require your Security code.

### Call costs (Menu #.4.5)


- This function displays the call costs of the Last call and All calls.
- To initialise, press the centre key [Clear] and enter the PIN2 code.

# Settings

3. You can select either **Units** or **Currency** in **Set call cost**. According to your setting, the call cost is displayed during a call (If USIM and Network support Advice Of Charge(AOC)).
4. In the **Set limit** configuration, select **On** to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

## Diverts (Menu #.4.6)

Call divert menus for voice and video calls are provided.

If you press  , you can activate call divert menu.

### Voice calls

#### All voice calls


#### When busy

#### No answer

#### Not reachable

### 1. When the number list is not existed

Converts to an editor for entering a divert number. You can input the number to divert a call directly or

search it in phonebook. If you press  [Divert], the phone will send the request to service provider after entering the number. While waiting for the result from the network, a Requesting message and animation appears.

### 2. When the number list is existed

Displays To other number menu including of the number list. While waiting for the result from the network, a Requesting message and animation appears.

### 3. Option menu

After activating All voice calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Deactivate all, View status and clear list menus.


The View status menu shows the settings on the network. If you select this menu, Requesting. message and animation appear. Then the network settings are displayed when the information is received from the network. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation.

Clear list menu will delete all divert number list.

## Video calls

### All video calls

#### 1. When the number list is not existed

Converts to an editor for entering a divert number. You can input the number to divert a call directly or search it in phonebook. If you press  [Divert], the phone will send the request to service provider after entering the number. While waiting for the result from the network, a Requesting message and animation appears.

#### 2. When the number list is existed

Displays To other number menu including of the number list. While waiting for the result from the network, a Requesting message and animation appears.

#### 3. Option menu

After activating the All video calls menu, selecting the Options menu at the bottom of the menus displays the Deactivate, Deactivate all, View status and clear list menus.

If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

### When busy

#### 1. When the number list is not existed

It operates the same as All voice calls menu.

#### 2. When the number list is existed

It operates the same as All voice calls menu.

#### 3. When Option menu is selected

It activates and operates If busy menu. It operates the same as All voice calls menu.

### No answer

#### 1. When the number list is not existed

It operates the same as All voice calls menu.

# Settings

## 2. When To a number is selected

It operates the same as All voice calls menu.

## 3. When Option menu is selected

Activates and operates No answer menu. It operates the same as All voice calls menu except that users can configure delay time in the Set waiting time menu in the menu list.

## Not reachable

### 1. When the number list is not existed

It operates the same as All voice calls menu.

### 2. When the number list is existed

It operates the same as All voice calls menu.

### 3. When Options menu is selected

Activates and operates If out of reach menu. It operates the same as All voice calls menu.

## Call waiting (Menu #.4.7)

- ▶ **Activate:** Activates waiting service. Selecting this item, displays requesting message and animation.

When the network answers, the result of the operation is displayed.

- ▶ **Deactivate:** Deactivates Call waiting service. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **View status:** Displays activated Call waiting service group item of the network. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.

## Voicemail (Menu #.4.8)

You can add or modify voice mail centre.

## Video call (Menu #.4.9)

You can set the screen display when making /receiving a video call.

- ▶ **Use private image:** Determine whether to show the private image or not.
- ▶ **Select private image:** Select the still image to be displayed.
- ▶ **Mirror:** Select to activate the mirror effect or not.

- **On:** Displays the image flipped side to side.
- **Off:** Displays the image as it is.
- ▶ **My image size:** Select my image size to be displayed.
- ▶ **My image position:** Select the position where your image will be displayed.

## Common settings (Menu #.4.10)

### Call reject

You can set whether to reject incoming calls.

1. Select **On** in Reject menu to activate call reject. The Reject list menu appears.
2. Set the desired call reject option in the Reject list menu.
  - ▶ **All calls:** Rejects all calls.
  - ▶ **Contacts:** Rejects the calls from the number stored in Contacts.
  - ▶ **Groups:** You can specify call rejects by group units stored in Contacts.
  - ▶ **Unregistered:** Rejects calls from the number not stored in Contacts.

- ▶ **No caller ID:** Reject calls which do not have CLI information.

### Send my number

- ▶ **Set by network:** Configures with the default settings determined by the service provider.
- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

### Auto redial

Allows you to set the auto redial function when a call attempt has failed.

### Answer mode


Allows you to set the answering method. You can choose between **Press send key**, **Slide up** and **Press any key**.

### Minute minder

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

# Settings

## BT answer mode

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset.

This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

## Save new number

In this menu, you can save the phone number when ending a call if the phone number is not saved in a phonebook.

## Slide close setting

when the slide is down, you can set the call is ended or not.

## Messaging setting

Menu #.5

For detailed information, please refer to page 53.

## Contact setting Menu #.6

For detailed information, please refer to 71. (Menu 8.8)

## Connectivity Menu #.7

### Bluetooth (Menu #.7.1)

#### Bluetooth QD ID B013211

#### Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

**Note**

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

**1. Getting started**

- **Menu** → **#. Settings** → **7. Connectivity** → **1. Bluetooth** → **3. Turn on/off**

To use the Bluetooth function, you must first set **Turn on**.

**2. Configuring Bluetooth settings**

- **Menu** → **#. Settings** → **7. Connectivity** → **1. Bluetooth** → **4. Settings**
- **My visibility:** Set [My handset's visibility] to [Show to all] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.
- **My name:** You can name or rename your phone as it will appear on other

devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Show to all].

- **Supported services:** You can view the list of devices such as headsets and handsfree kits supported by this Bluetooth enabled phone.
- **My address:** You can check the address of Bluetooth.

**Note**

- ▶ When user uses Bluetooth Device in the handset, the security of the handset is at risk. Therefore, we recommend that Bluetooth visibility be set to Hidden after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

**3. Search and pair new device****<Searching new device>**

You can search new device as following menu.


- **Menu** → **#. Settings** → **7. Connectivity** → **1. Bluetooth** → **2. Search new devices**

# Settings

## <Pairing devices>

1. To search for a Bluetooth device to pair, press **Add new device**.
2. Screen shows **Searching for devices**. Bluetooth devices within a range of 10m will be found.
3. If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

### 4. Pairing procedure

- Press . A window will appear on the screen asking you to enter your password.
  - After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.
- ▶ KU380 supports follow Bluetooth services
- Headset profile
  - Hands-free profile
  - Object push profile
  - File transfer profile

- Dial-up networking profile
- Advanced audio profile
- Audio video remote control profile(audio only)

## Option

- ▶ **Add new device:** Using this menu, you can pair a new Bluetooth device with your phone.
- ▶ **Connect**
  1. If you want to open the connection to the selected device, select the Connect.
  2. If you want to close the connection to the selected device, select the Disconnect.
- ▶ **Delete:** Using this menu, you can delete the paired Bluetooth device.
- ▶ **Delete all:** Using this menu, you can delete all of the paired Bluetooth devices.


## <Pairing devices>

1. To search for a Bluetooth device to pair, press **Add new device**.
2. Screen shows **Searching for devices**. Bluetooth devices within a range of 10m will be found.

- If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

### Option

- ▶ **Add new device:** Using this menu, you can pair a new Bluetooth device with your phone.
  - ▶ **Connect:** If you want to open the connection to the selected device, select the Connect.
- Pairing procedure


- Press  . A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

### <Deleting devices>

- Select a device to delete from the Paired devices screen.
- You can delete a device by pressing the Delete key or by selecting Options → Delete. To delete all

paired devices, select Options → Delete All.

### <Transmitting data using Bluetooth>

- To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the My Files to another device, select Menu → 6. My Files → 1. Pictures / 2. Sounds / 3. Videos/ 5. Bluetooth data / 6. Other files / 7. External memory → Select data to transmit → Send → 3. Bluetooth
- Transmitting data
  - Paired device found is displayed. If the desired device does not exist in the list, select [Refresh].
  - Select the device to which you want to transmit data from the devices on the screen and press  .
  - If the other party selects [Yes] for [Connection request], the data is transmitted.

# Settings

## Synchronisation (Menu #.72)

(Note: This service is not available in all countries. Please contact your service provider for further information.)

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, Tasks, and Memo via a wireless network.

### Connect

1. Select the Connect item and then press **OK**.
2. Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

### Logs

Select the Logs item and then press **OK** to view the log for the last synchronization operation performed.

### Server synch. centre

1. Select the Server synch. centre item and then press **OK**.

2. This menu allows you to configure the profile for a synchronization server.

- ▶ **Profile name:** Input the name for the profile.
- ▶ **Host address:** Contact your service provider.
- ▶ **SyncML proxy:** Contact your service provider.
- ▶ **User name:** Enter your user ID for synchronization server.
- ▶ **Password:** Input your password.
- ▶ **Contacts:** Select whether to synchronise Contacts or not.
- ▶ **Contact name:** Input the contacts database name for server access.
- ▶ **Calendar:** Select whether to synchronise Calendar or not.
- ▶ **Calendar name:** Input the calendar database name for server access.
- ▶ **Tasks:** Select whether to synchronise Tasks or not.
- ▶ **Tasks name:** Input the Tasks database name for server access.
- ▶ **Memo:** Select whether to synchronise Memo or not.

▶ **Memo name:** Input the Memo database name for server access.

▶ **Sync type:** Select the synchronization type below.

- Normal

The phone and the server are required to exchange information about the modified data.

- Backup

The phone sends all the data from a database to the server. The server is expected to replace all data in the target database with the data sent by the phone. This means the phone overwrites all the data in the server database.

- Restore

The server sends all its data from a database to the phone. The phone is expected to replace all data in the target database with the server sent by the server. This means the server overwrites all data in the phone database.

▶ **Access point:** Select an access point to use for the data connection.

▶ **Sync mode:** Select the synchronization mode below.

- Manual

The synchronisation will only occur when explicitly initiated by the user.

- Automatic

The application will automatically initiate a sync, based on the preferences defined (either a regular reminder or after changes have been made.)

- Sync frequency

Select the automatic sync preference when you choose automatic sync mode.

## USB connection mode

(Menu #.73)

You can activate USB connection mode of your phone for several usages.

If you use Mass storage function like USB memory card, select Mass storage in this menu. Mass storage is available for only external memory card.

If you use Data service such as PC suite application, select Data service in this menu.

# Settings

If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronise with external memory, you can use 'External memory' as Primary storage. If you want to synchronise with internal memory, you can use 'Internal memory' as Primary storage.

## Network (Menu #.74)

### Select Network

Select between **Automatic** and **Manual**.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

### Note

- ▶ When your handset lose the network in manual mode, the popup message to select the available network will be shown in the Idle screen.

### Network mode

You can set a type of network to search for when networks are searched in the **Select network** menu.

- ▶ **Automatic:** Searches all the networks connectable.
- ▶ **UMTS:** Searches only networks supporting 3G. (Except for Swiss)
- ▶ **GSM 900/1800:** Searches only networks supporting GSM 900/1800 band.
- ▶ **GSM 1900:** Searches only networks supporting GSM 1900 band.

### Preferred lists

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

- ▶ **Add new:** You can add a new network using the followings.

- **Search:** You can select one from the network list stored in the phone.
- **Enter new network:** You can enter the country code (MCC), the network code (MNC) and RAT to add.
- ▶ **Delete:** Deletes the selected network.
- ▶ **Edit:** You can modify the information of the selected network.
- ▶ **Move up:** Moves the selected network upward.
- ▶ **Move down:** Moves the selected network downward.

## Access points (Menu #.7.5)

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

You can edit the following configuration items by pressing the left soft key [Option] and Edit.

Connection title	Access Point profile name.
Bearer	Choose the bearer from the list. (Default is <b>UMTS</b> .)
Authentication	Choose the authentication from the list. (Default is <b>No auth</b> )
User name	Information provided by service provider.
Password	Information provided by service provider.
APN	APN name to access network. Information provided by service provider.

- ▶ Press **confirm** key to save any configuration changes.

## Browser settings (Menu #.7.6)

### Profiles

Select the appropriate profile by pressing **OK**. This will activate the profile to initiate browser launch.

### - Character encoding

Sets the browser default character set to one of the following.

- ▶ Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto),

# Settings

Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

## - Scrolling control

Allows you to set the scroll speed by selecting the number of lines to scroll. Select one from 1 line, 2 lines, 3 lines.

## - Show Image

Allows you to enable or disable image display during browsing.

## - Javascript

### Cache

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

### Cookie

Enabling Cookie allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

## Reset setting

Select this to reset your phone to its default configuration.

## Security

If user presses Certificates, certification information is shown.

User can clear secure session information by pressing Session clear.

## Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here. Certificates can be viewed from the list.

## Session clear

Secure (WTLS/ TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

## Streaming settings (Menu #.7.7)

If you want to set different network setting to play streaming content, you can set different network settings.

## Java setting

Menu #.8

### Activating a profile

1. Move the cursor to the profile you would like to activate.
2. Press **OK** .

### Adding a new profile

1. Select **Add new** from the **Options** menu. The following items need to be configured.

Service name	Enter an account name for the profile.
Connection mode	Choose from the given list of connection modes. (Default is TCP with Proxy or TCP without Proxy)
IP address	Enter the WAP Gateway IP address provided by the operator. (e.g. 195. 115. 025. 129)
Proxy server port	Port details are provided by the operator, depending upon the Connection mode.
Access point	Choose from the given list of access points. (For more details on adding or editing a new access point, refer to page 98.)

2. Press the **OK** [Save] to save any configuration changes.

You can edit and delete a profile by selecting **Edit** and **Delete** from the **Options** menu.

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

---

## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



---

## Hands free ear-microphone and music player controller combo

### Stereo headset



### Controller:

Answer & End key, music player control, volume control, Hold button and microphone.

After connecting the headset and the controller, plug the end of controller into the headset jack on the right side of the phone.

---

## Standard Battery



### Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

# Technical data

## General

**Product name:** KU380

**System:** GSM900/DCS1800/PCS  
1900/WCDMA 2100

**Net weight:** 67.5g (Without battery)

## Ambient Temperatures

**Max:** +55°C (Normal) / +45°C  
(Charging)

**Min:** -10°C



# Declaration of Conformity



LG Electronics

## Suppliers Details

### Name

LG Electronics Inc

### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

### Product Name

E-GSM 900 / DCS 1800/ PCS 1900 / W-CDMA Terminal Equipment

### Model Name

KU380

### Trade Name

LG

CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC  
ETSI EN 301 489-01 V1.6.1, ETSI EN 301 489-07 V1.3.1  
ETSI EN 301 489-17 V1.3.1, ETSI EN 301 489-24 V1.3.1  
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2  
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-1 V2.2.1  
ETSI EN 301 908-2 V2.2.1, ETSI EN 300 328 V1.4.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

The conformity to above standards is verified by BABT.

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Europe an Standard Center  
LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794  
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

03.SEP. 2007

Signature of representative





