



KF750 คู่มือการใช้

CE 0168

[www.lgmobile.com](http://www.lgmobile.com)

P/N : MMBB0274815 (1.1) H

LG ELECTRONICS INC.

KF750 คู่มือการใช้

ไทย  
ENGLISH

Bluetooth QD ID B013855



ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่าง  
จากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์  
หรือของโทรศัพท์หรือผู้ให้บริการของคุณ

## คู่มือการใช้ **KF750**

ขอแสดงความยินดีที่คุณซื้อโทร  
ศัพทเคลื่อนที่รุ่น KF750 ของ LG  
ที่ทันสมัยมีขนาดกะทัดรัด ออกแบบให้ทำงาน  
ด้วยการใช้เทคโนโลยีการสื่อสารเคลื่อนที่  
แบบดิจิทัลใหม่ล่าสุด



#### การทิ้งผลิตภัณฑ์เก่า

- 1 สัญลักษณ์รูปถังขยะแบบมีล้อพร้อมเครื่องหมายกากบาทขีดฆ่าที่มาพร้อมผลิตภัณฑ์ หมายความว่าผลิตภัณฑ์นั้นอยู่ภายใต้ข้อกำหนดของ European Directive 2002/96/EC
- 2 ผลิตภัณฑ์อิเล็กทรอนิกส์และทางไฟฟ้าทั้งหมดต้องจัดทิ้งแยกจากขยะเทศบาล โดยจัดทิ้งในพื้นที่จัดเก็บที่ระบุไว้โดยเฉพาะโดยรัฐหรือเจ้าหน้าที่ในพื้นที่
- 3 การทิ้งผลิตภัณฑ์เก่าอย่างถูกต้องจะช่วยปกป้องผลกระทบในเชิงลบต่อสิ่งแวดล้อมและสุขภาพ
- 4 สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการทิ้งผลิตภัณฑ์เก่าของคุณ โปรดติดต่อเจ้าหน้าที่ในพื้นที่ของคุณ ฝ่ายบริการด้านการจัดเก็บขยะหรือร้านค้าที่คุณซื้อผลิตภัณฑ์นั้น

การติดตั้ง	01
หน้าจอสแตนด์บาย	02
การทำงานพื้นฐาน	03
เริ่มต้นงานสร้างสรรค์	04
เริ่มต้นการจัดการ	05
เว็บไซต์	06
การตั้งค่า	07
อุปกรณ์เสริม	08

# สารบัญ

## คำแนะนำ

คำแนะนำเพื่อความปลอดภัยและ  
การใช้งานอย่างมีประสิทธิภาพ.... 9

## การติดตั้ง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.....14  
การใส่ USIM และแบตเตอรี่ .....16  
การตั้งค่าหน่วยความจำ .....18  
แผนผังเมนู.....20

## หน้าจอแสดงต้นแบบ

หน้าจอแสดงต้นแบบ .....22  
    เคล็ดลับสำหรับ  
    หน้าจอสัมผัส .....22  
    แถบสถานะ .....23

## การทำงานพื้นฐาน

การโทร .....24  
    การโทรออก .....24  
    การโทรแบบ  
    สนทนาทางวิดีโอ .....24  
    การโทรออก/โทรแบบสนทนา  
    ทางวิดีโอจากรายชื่อ .....24  
    การโทรออกต่างประเทศ .....25  
    การรับสายและการปฏิเสธสาย  
    เรียกเข้า .....25  
    โทรด่วน .....25  
    การใช้สายที่สอง .....25  
    สัญญาณเสียง DTMF .....26

การดูบันทึกการโทร .....26  
การใช้การโอนสาย.....27  
การใช้การบอกรับการโทร.....27  
การเปลี่ยนการตั้งค่า  
การโทรทั่วไป .....28  
การเปลี่ยนการตั้งค่า  
การสนทนาทางวิดีโอ .....28  
รายชื่อ.....29  
    การค้นหารายชื่อ .....29  
    การเพิ่มรายชื่อใหม่ .....29  
    ตัวเลือกต่างๆ ของรายชื่อ .....30  
    การสร้างกลุ่ม.....30  
    การใช้หมายเลขบริการ .....31  
    การดูหมายเลขโทรศัพท์ของ  
    คุณ .....31  
    การสร้างนามบัตร .....31  
    การเปลี่ยนการตั้งค่า  
    ของรายชื่อ.....31  
ข้อความ .....33  
    ข้อความ .....33  
    การส่งข้อความ .....33  
    การป้อนข้อความ .....33  
    ระบบช่วยสะกดคำ T9.....34  
    การป้อนตัวอักษรด้วยตนเอง 34  
    การตั้งค่าอีเมล.....34  
    การตั้งค่าข้อมูลอีเมล .....35  
    การส่งอีเมลโดยใช้แอดเดสส์  
    ใหม่.....35  
    การเปลี่ยนการตั้งค่าอีเมล.....36

โพลเดอร์ข้อความ.....	36	หลังจากที่ถ่ายวิดีโอแล้ว .....	47
การจัดการข้อความ .....	37	การปรับความสว่าง.....	47
การใช้ข้อความอัตโนมัติ .....	37	การใช้การตั้งค่าขั้นสูง.....	48
การใช้อีโมติคอน .....	38	การเปลี่ยนขนาด	
การเปลี่ยนการตั้งค่าข้อความ		ของภาพวิดีโอ .....	49
ตัวอักษร.....	38	การเลือกเสียงเอฟเฟกต์.....	49
การเปลี่ยนการตั้งค่าข้อความ		การดูวิดีโอที่บันทึกไว้.....	50
มัลติมีเดีย .....	38	ภาพถ่ายและวิดีโอ .....	51
การเปลี่ยนการตั้งค่าอื่นๆ .....	39	เมนูตัวเลือกการแก้ไขอัลบั้ม	
		ภาพถ่าย .....	51
		เมนูตัวเลือกการแก้ไข	
		อัลบั้มวิดีโอ .....	51
		การดูภาพถ่ายและวิดีโอ .....	51
		การปรับระดับเสียง	
		ขณะดูวิดีโอ.....	51
		การบันทึกภาพจากวิดีโอ .....	52
		การส่งภาพถ่ายหรือ	
		วิดีโอจากอัลบั้ม.....	52
		การดูภาพถ่ายแบบ	
		ภาพสไลด์ .....	53
		การตั้งค่าภาพถ่ายเป็น	
		หน้าจอล็อก .....	53
		การแก้ไขภาพถ่าย .....	53
		การเพิ่มเอฟเฟกต์	
		ลงในภาพถ่าย.....	54
		การแปลงภาพถ่าย .....	54
		การใส่สปีดไลท์ในภาพถ่าย	54
		การแก้ไขวิดีโอ .....	55
		การตัดความยาวของวิดีโอ .....	55
<b>เริ่มต้นงานสร้างสรรค์</b>			
กล้องถ่ายรูป .....	40		
การถ่ายภาพด่วน .....	40		
หลังจากที่ถ่ายภาพแล้ว.....	40		
การใช้แฟลช .....	41		
การปรับความสว่าง.....	41		
การเลือกโหมดชัตเตอร์ .....	41		
การใช้โหมด			
ถ่ายภาพต่อเนื่อง .....	42		
การใช้โหมดเฟรมช็อต.....	42		
การถ่ายภาพพาโนรามา.....	42		
การใช้การตั้งค่าขั้นสูง.....	43		
การเปลี่ยนขนาดภาพ .....	44		
การเลือกโทนสี .....	45		
การดูภาพถ่ายที่บันทึกไว้.....	45		
การตั้งค่าภาพถ่ายเป็นหน้าจอล็อก			
หรือภาพรายชื่อ .....	46		
กล้องวิดีโอ.....	47		
การถ่ายวิดีโอด้วย .....	47		

## สารบัญ

การรวมวิดีโอสองเรื่อง เข้าด้วยกัน.....55	การใช้ตัวเลือก ขณะหยุดวิดีโอชั่วคราว .....63
การรวมภาพถ่ายเข้ากับวิดีโอ 55	การส่งวิดีโอคลิป .....63
การเพิ่มข้อความลงในวิดีโอ .56	การใช้วิดีโอคลิป เป็นเสียงเรียกเข้า .....63
การซ่อนภาพถ่าย.....56	การใช้เมนูตัวเลือกของวิดีโอ 63
การใส่รายการบันทึกเสียง....57	เกมส์และแอปพลิเคชัน .....64
การใส่ชาวด์แทร็คลงในวิดีโอ57	เฟลิดเฟลิ่งกับเมนู M-Toy ...64
การเปลี่ยนความเร็ว ของวิดีโอ .....57	การดาวน์โหลดเกมส์หรือ แอปพลิเคชัน.....64
การใส่เอฟเฟกต์	การเล่นเกมส์ .....65
การเลื่อนภาพ .....58	การใช้เมนูตัวเลือกของเกมส์ 65
มัลติมีเดีย .....59	แฟลชคอนเทนท์ .....65
ภาพ .....59	การดูไฟล์ SWF/SVG .....65
เมนูตัวเลือกของภาพ.....59	การใช้ตัวเลือกในการดูไฟล์ SWF/SVG .....65
การส่งภาพถ่าย .....60	เอกสาร .....66
การใช้รูปภาพ .....60	การโอนไฟล์ไปที่โทรศัพท์ ..66
การจัดการรูปภาพ.....60	การดูไฟล์ .....66
การลบรูปภาพ.....60	อื่นๆ.....66
การย้ายหรือคัดลอกรูปภาพ..61	โปรแกรมสร้างภาพยนตร์.....67
การแก้ไขภาพ.....61	การสร้างภาพยนตร์ .....67
การเลือกหรือยกเลิก	เพลง .....67
การเลือกรูปภาพ.....61	การโอนเพลงไปยังโทรศัพท์ 68
การสร้างภาพสไลด์.....62	การเล่นเพลง .....68
การตรวจสอบ	การใช้ตัวเลือกขณะเล่นเพลง68
สถานะหน่วยความจำ.....62	การสร้างรายการเพลง.....69
เสียง.....62	การแก้ไขรายการเพลง.....69
การใช้เสียง .....62	การลบรายการเพลง .....69
วิดีโอ.....62	
การดูวิดีโอ.....62	

การใช้วิทยุ.....	70
การค้นหาสถานี.....	70
การแก้ไขสถานี.....	71
การรีเซ็ตสถานี.....	71
การฟังวิทยุ.....	71
การใช้เครื่องบันทึกเสียง.....	72
การบันทึกเสียงหรือเสียงพูด.....	72
การส่งรายการบันทึกเสียง.....	72
สมุดบันทึก.....	73
การเพิ่มเหตุการณ์ ลงในปฏิทิน.....	73
การเปลี่ยนมุมมองเริ่มต้น ของปฏิทิน.....	73
การเพิ่มรายการ ลงในสิ่งที่ต้องทำ.....	73

## เริ่มต้นการจัดการ

การแบ่งบันรายการที่ต้องทำ.....	74
การเพิ่มบันทึก.....	74
การตั้งเวลาปลุก.....	74
การใช้เครื่องคิดเลข.....	75
การใช้นาฬิกาจับเวลา.....	75
การแปลงหน่วย.....	75
การใส่ชื่อเมือง ลงในเวลาทั่วโลก.....	75
PC Sync.....	77
การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์.....	77
การเชื่อมต่อโทรศัพท์เข้ากับ	

คอมพิวเตอร์.....	77
การสำรองข้อมูลและการเรียก คืนข้อมูลของโทรศัพท์.....	77
การดูไฟล์ในโทรศัพท์บนคอม พิวเตอร์.....	78
การซิงโครไนซ์รายชื่อ.....	78
การซิงโครไนซ์ข้อความ.....	78
การซิงโครไนซ์เพลงของคุณ.....	78
การใช้โทรศัพท์ของคุณเป็น อุปกรณ์เก็บข้อมูล.....	79
PIN สำหรับการเชื่อมต่อ DivX.....	79
เบราว์เซอร์.....	81
การเข้าใช้เว็บไซต์.....	81
การเพิ่มและการใช้บุ๊คมาร์ค.....	81
การบันทึกเพลง.....	81

## เว็บไซต์

การเข้าใช้เพจที่บันทึกไว้.....	82
การดูประวัติข้อมูลเบราว์เซอร์.....	82
การใช้ RSS reader.....	82
การเพิ่ม Feed.....	82
การอัปเดต RSS reader.....	83
การเปลี่ยนการตั้งค่า เว็บเบราว์เซอร์.....	83
เว็บไซต์.....	84
การใช้โทรศัพท์เป็นโมเด็ม.....	84
การใช้บลูทูธ.....	84
การส่งและการรับไฟล์โดยใช้	

บลูทูธ .....	84
การจับคู่กับอุปกรณ์ บลูทูธ อื่น .....	86
การใช้ชุดหูฟัง บลูทูธ .....	86
ตั้งค่า .....	87
การเปลี่ยนการตั้งค่าหน้าจอ .87	
การปรับแต่งรูปแบบของคุณ .87	

## **การตั้งค่า**

การเปลี่ยนการตั้งค่า โทรศัพท์ .....	88
การใช้วันที่ & เวลา .....	88
การเปลี่ยนการตั้งค่าอื่นๆ .....	88
การเปลี่ยนการตั้งค่าระบบ ป้องกัน.....	89
การใช้สถานะความจำ .....	89
การใช้โหมด Flight.....	89

## **อุปกรณ์เสริม .....90**

## **บริการของเครือข่าย .....91**

## **ข้อมูลทางเทคนิค .....91**

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

### การรับพลังงานคลื่นความถี่วิทยุ

โทรศัพท์เครื่องนี้ตรงตามข้อกำหนดสากลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ เครื่องโทรศัพท์ของคุณเป็นทั้งตัวส่งและตัวรับคลื่นวิทยุ ซึ่งได้รับการออกแบบและผลิตไม่ให้เกิดความถี่ในการปล่อยพลังงานคลื่นความถี่วิทยุ (RF) ที่แนะนำโดยข้อกำหนดสากล (ICNIRP) ข้อจำกัดเหล่านี้เป็นส่วนหนึ่งของมาตรฐานฉบับสมบูรณ์และได้กำหนดระดับของพลังงานคลื่น RF ที่อนุญาตไว้สำหรับประชาชนทั่วไป ข้อกำหนดนี้พัฒนาขึ้นโดยหน่วยงานทางด้านวิทยาศาสตร์ที่เป็นหน่วยงานอิสระ ตามระยะเวลาและการประเมินผลจากการศึกษาด้านวิทยาศาสตร์ ข้อกำหนดนี้ยังรวมถึงมาตรฐานระดับความปลอดภัยเพื่อความปลอดภัยของประชาชนทั่วไป โดยไม่ขึ้นกับอายุและสุขภาพ

มาตรฐานการดูดกลืนคลื่นความถี่สำหรับโทรศัพท์เคลื่อนที่นี้ใช้หน่วยที่เรียกว่า SAR (Specific Absorption Rate) ข้อกำหนดสากลระบุให้ SAR มีค่าไม่เกิน 2.0 W/kg\* การทดสอบค่า SAR ได้ดำเนินการทดสอบตามตำแหน่งการใช้งานมาตรฐาน ซึ่งเครื่องโทรศัพท์จะส่งคลื่นที่ระดับพลังงานสูงสุดที่ได้รับการรับรองในทุกคลื่นความถี่ที่ผ่านการทดสอบแล้ว แม้ว่าค่า SAR จะกำหนดจากระดับพลังงานสูงสุดที่ได้รับการรับรอง ค่า SAR ของโทรศัพท์ที่แท้จริงในขณะที่ทำงานอาจต่ำกว่าค่าสูงสุดก็ได้ โทรศัพท์ได้รับการออกแบบให้ทำงานได้ในหลายระดับพลังงาน เพื่อให้พลังงานเฉพาะที่จำเป็นที่จะสามารถเข้าถึงระบบเครือข่ายได้ โดยทั่วไปยิ่งคุณอยู่ใกล้สถานีฐานมากเท่าไร ค่าพลังงานที่ใช้ของโทรศัพท์ก็จะยิ่งน้อยลง ก่อนวางจำหน่ายโทรศัพท์ทุกรุ่นต่างๆ จึงจำเป็นต้องแสดงว่าโทรศัพท์รุ่นนั้นเป็นไปตามข้อกำหนดของ European R&TTE Directive ข้อกำหนดนี้รวมอยู่ในข้อกำหนดที่จำเป็นในการป้องกันสุขภาพและความปลอดภัยของผู้ใช้งานและบุคคลอื่น

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ค่า SAR สูงสุดของโทรศัพท์เครื่องนี้ขณะทดสอบโดยถือแนบกับหู คือ 0.5 W/kg โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือใส่โทรศัพท์เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านี้ไม่ควรเป็นโลหะและควรให้โทรศัพท์ที่อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น ค่า SAR สูงสุดของโทรศัพท์เครื่องนี้ขณะทดสอบโดยพกพาไว้กับตัว คือ 0.755 W/kg \* ค่า SAR สูงสุดสำหรับโทรศัพท์เคลื่อนที่เมื่อใช้ทั่วไป คือ 2.0 วัตต์/กิโลกรัม (W/kg) ซึ่งเป็นค่าโดยเฉลี่ยต่อเนื้อเยื่อหนึ่งกรัม ข้อกำหนดนี้สอดคล้องกับขอบเขตของความปลอดภัยที่สำคัญ เพื่อป้องกันการเพิ่มเติมเพื่อความปลอดภัยของสาธารณะ และรองรับความแตกต่างในการวัดค่า ค่า SAR อาจแตกต่างกันขึ้นอยู่กับข้อกำหนดการรายงาน และคลื่น

ความถี่ของเครือข่ายในแต่ละประเทศ สำหรับข้อมูลเพิ่มเติมเกี่ยวกับ SAR ในภูมิภาคอื่นๆ โปรดดูที่ข้อมูลผลิตภัณฑ์จาก [www.lgmobile.com](http://www.lgmobile.com).

### การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

**⚠ คำเตือน**  
**ใช้แบตเตอรี่**  
**อุปกรณ์ชาร์จแบตเตอรี่ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้นการใช้อุปกรณ์ประเภทอื่นๆ ที่ไม่ผ่านการรับรองดังกล่าวอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้**

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์น วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสิ้นเปลืองหรือการกระแทก

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือครันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่เคดิตหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้

- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น

## การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

- โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ
- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
  - โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
  - ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

### ความปลอดภัยบนท้องถนน

- ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี้นยานพาหนะ
- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- หากสามารถกระทำได้ ให้ใช้ชุดอุปกรณ์แฮนด์ฟรี
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- หลังงานคลีนความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะอยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้

คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## ในเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจาก

มือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียว ในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จแบตเตอรี่ของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้ง

จนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีอุณหภูมิสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ





ช่องเสียบอุปกรณ์ชาร์จ,  
สายเคเบิล, แอนดรูรี่

**เคล็ดลับ:**

ในการเชื่อมต่อสาย USB  
ให้รอจนโทรศัพท์เปิด  
เครื่องและลงทะเบียนกับ  
เครือข่ายแล้ว



ปุ่มด้านข้าง

• เมื่อนำจอไม่ใช้งาน:  
ระดับเสียงปุ่ม

• ระหว่างการใช้สาย:  
ปรับระดับเสียงลำโพง

• ขณะเล่นแทริค BGM

- กดสั้นๆ: ความคมระดับเสียง

- กดค้าง: เลื่อนไปที่ไฟล์เพลง  
ถัดไปหรือก่อนหน้า

ปุ่มหน้าจอสัมผัส: เปลี่ยนจอ LCD

ให้เป็นหน้าจอสัมผัสเพื่อเข้าใช้  
ไฟล์ของคุณ

เปิดเมนูอัลติทาสกิ้ง

ปุ่มถ่ายภาพ

01

02

03

04

05

06

07


08

เลนส์กล้องถ่ายรูป

แฟลช

ช่องเสียบ USIM การ์ด

ฝาปิดแบตเตอรี่

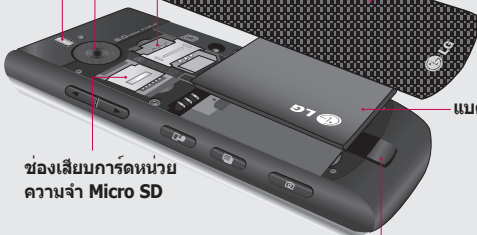

ช่องเสียบการ์ดหน่วย  
ความจำ Micro SD


แบตเตอรี่

ตัวปลดล็อคแบตเตอรี่  
กดปุ่มนี้เพื่อถอดแบตเตอรี่

# การใส่ USIM และแบตเตอรี่

## 1 ถอดฝาปิดแบตเตอรี่

กดปุ่มคล้ายสวิตช์แบตเตอรี่ที่ด้านบนของโทรศัพท์ค้างไว้ แล้วดึงฝาปิดแบตเตอรี่ขึ้น

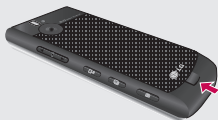

## 2 ถอดแบตเตอรี่ออก

จับที่ขอบด้านบนของแบตเตอรี่ และยกแบตเตอรี่ขึ้นจากช่องใส่แบตเตอรี่โดยใช้ฝ่ามือปิดแบตเตอรี่




**คำเตือน:** อย่าใช้เล็บในการถอดแบตเตอรี่ออก

**คำเตือน:** ห้ามถอดแบตเตอรี่ขณะที่เปิดโทรศัพท์อยู่ เนื่องจากอาจทำให้เครื่องเสียหายได้

## 3 การใส่ USIM การ์ด

เลื่อน USIM การ์ดเข้าไปในช่องใส่ USIM การ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลงในการถอด USIM การ์ด ให้ค่อยๆ ดึงการ์ดออกมาในทิศทางตรงข้ามกับตอนใส่

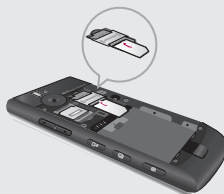


#### 4 ใส่แบตเตอรี่

ใส่แบตเตอรี่ โดยให้ด้านบนของแบตเตอรี่สอดลงไปทางด้านบนของช่องใส่แบตเตอรี่ก่อน ตรวจสอบให้แน่ใจว่าขั้วสัมผัสของแบตเตอรี่ตรงกับขั้วในโทรศัพท์ จากนั้น กดด้านล่างของแบตเตอรี่ให้แน่นเข้าที่



#### 5 การชาร์จโทรศัพท์

เสียบฝักปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างของโทรศัพท์ KF750 ออก และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณจะต้องชาร์จโทรศัพท์ KF750 จนกว่าจะปรากฏข้อความว่าแบตเตอรี่เต็ม บนหน้าจอ

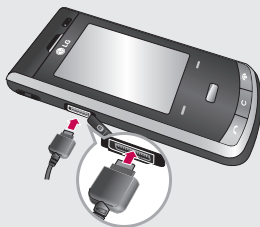

01

02

03

04

05

06

07

08

## การ์ดหน่วยความจำ

### การใส่การ์ดหน่วยความจำ

คุณสามารถเพิ่มพื้นที่หน่วยความจำบนโทรศัพท์ได้โดยการใช้การ์ดหน่วยความจำ โทรศัพท์ KF750 สามารถรองรับการ์ดความจำสูงสุดไม่เกิน 4 กิกะไบต์

**เคล็ดลับ:** การ์ดหน่วยความจำเป็นอุปกรณ์เสริม


- 1 เปิดฝาปิดแบตเตอรี่ออกก่อน
- 2 เสียบการ์ดหน่วยความจำเข้าไปในช่องเสียบที่ด้านบนให้แน่นเข้าที่โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสทองคว่ำลง



- 3 ใส่แบตเตอรี่และฝาปิดกลับคืน

### การฟอร์แมตการ์ดหน่วยความจำ

หากได้มีการฟอร์แมตการ์ดหน่วยความจำแล้ว คุณสามารถเริ่มใช้การ์ดหน่วยความจำนั้นได้หากยังไม่ได้ฟอร์แมตการ์ด คุณต้องทำการฟอร์แมตก่อน

- 1 จากหน้าจอสแตนด์บาย กด  เลือก ตั้งค่า แล้วเลือก ตั้งค่าโทรศัพท์
- 2 เลือก สถานะความจำ จากนั้นเลือก หน่วยความจำการ์ด
- 3 เลือกฟอร์แมตแล้วยืนยันการเลือกของคุณ
- 4 ใส่รหัสผ่าน หากมีการกำหนดไว้ จากนั้นการ์ดของคุณจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน


**เคล็ดลับ!** ในการเปลี่ยนปลายทางที่จัดเก็บเริ่มต้น ให้เปิด สถานะความจำ จากเมนู ตั้งค่าโทรศัพท์ แล้วเลือก การตั้งค่าที่เก็บหลัก

**หมายเหตุ:** หากการ์ดหน่วยความจำของคุณมีข้อมูลอยู่ภายใน ข้อมูลต่างๆ จะถูกกำหนดให้อยู่ในไฟล์เดสก์ท็อปโดยอัตโนมัติ ตัวอย่างเช่น วิดีโอจะเก็บไว้ในไฟล์เดสก์ท็อป

## การโอนรายชื่อ

ในการโอนรายชื่อจาก USIM

ไปยังโทรศัพท์:

- 1 จากหน้าจอสแตนด์บาย ให้เลือก  แล้วเลือก รายชื่อ
- 2 เลือก การตั้งค่ารายชื่อ และ คัดลอก
- 3 เลือก เครื่องไปยัง USIM แล้วแตะที่ เสร็จ
- 4 เลือก พร้อมกันทั้งหมด หรือ ที่ละรายการ จากนั้นแตะที่ เสร็จ

01

02

03

04

05

06

07

08

## แผนผังเมนู



### เกมส์&แอปฯ

- 1 M-Toy
- 2 เกมส์ & แอปฯ
- 3 ตั้งค่า



### การโทร

- 1 ดอสายวีดีโอ
- 2 บันทึกการโทร
- 3 เวลาในการโทร
- 4 ปริมาณข้อมูล
- 5 ค่าโทร
- 6 การโอนสาย
- 7 ป้องกันการโทร
- 8 กำหนดเบอร์โทรออก
- 9 สายเรียกข้อน
- 0 ตั้งค่าทั่วไป
- \* ตั้งคาสงทนาทางวีดีโอ



### สมุดบันทึก

- 1 ปฏิทิน
- 2 สิ่งที่ต้องทำ
- 3 บันทึก
- 4 บันทึกกลับ
- 5 ตัวค้นหาวันที่
- 6 ตั้งค่า



### มีลติมีเดีย

- 1 ทัชมีเดีย
- 2 กลองถ่ายรูป
- 3 กลองวีดีโอ
- 4 เพลง
- 5 วิทยุ FM
- 6 บันทึกเสียง
- 7 โปรแกรมแก้ไขไฟล์
- 8 โปรแกรมสร้างภาพยนตร์



### ข้อความ

- 1 ข้อความใหม่
- 2 ถาดเข้า
- 3 เมลบอกซ์
- 4 ราง
- 5 ถาดออก
- 6 รายการที่ส่ง
- 7 โฟลเดอร์สวนตัว
- 8 ข้อความอัตโนมัติ
- 9 อีโมติคอน
- 0 ตั้งค่า



### แฟ้มข้อมูล

- 1 ภาพ
- 2 เสียง
- 3 วีดีโอ
- 4 เกมส์&แอปฯ
- 5 แฟลชคอนเทนท์
- 6 เอกสาร
- 7 อื่นๆ
- 8 การดความจำ



## Google

- 1 ค้นหา
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 YouTube
- 6 ประวัติที่อัปโหลด



## รายชื่อ

- 1 รายชื่อใหม่
- 2 ค้นหา
- 3 โทรด่วน
- 4 กลุ่ม
- 5 เมอร์ริการ
- 6 เบอร์ส่วนตัว
- 7 นามบัตร
- 8 ตั้งค่า



## เครื่องมือ

- 1 เมนูด่วน
- 2 ตั้งปลุก
- 3 เครื่องคิดเลข
- 4 นาฬิกาจับเวลา
- 5 ตัวแปลงหน่วย
- 6 เวลาทั่วโลก
- 7 บริการ USIM



## เบราว์เซอร์

- 1 โฮม
- 2 ไปยัง URL
- 3 บุคมาร์ค
- 4 RSS reader
- 5 เพลงที่บันทึก
- 6 ประวัติ
- 7 ตั้งค่า



## การเชื่อมต่อ

- 1 บลูทูธ
- 2 การซิงค์เซิร์ฟเวอร์
- 3 โหมดการเชื่อมต่อ USB
- 4 TV out
- 5 PIN สำหรับการเชื่อมต่อ DivX



## ตั้งค่า

- 1 รูปแบบเสียง
- 2 โทรศัพท์
- 3 หน้าจอ
- 4 วันที่ & เวลา
- 5 เครือข่าย
- 6 โพรไฟล์อินเทอร์เน็ต
- 7 จุดเชื่อมต่อ
- 8 เชื่อมต่อข้อมูลแพ็คเกจ
- 9 ระบบป้องกัน
- 0 สถานะความจำ
- # การตั้งค่าสตรีมมิ่ง
- \* รีเซ็ตการตั้งค่า

01

02

03

04

05

06

07

08

## หน้าจอสแตนด์บาย

เมื่อไม่มีการใช้งานโทรศัพท์ KF750 เครื่องจะกลับเข้าสู่หน้าจอสแตนด์บายจากหน้าจอนี้ คุณสามารถเข้าใช้งานตัวเลือกเมนูต่างๆ, โทรออกแบบด่วน เปลี่ยนรูปแบบเสียง และอื่นๆ ได้อีกมากมาย

### เคล็ดลับสำหรับหน้าจอสัมผัส

หากคุณกด  หน้าจอจะเปลี่ยนเป็นปุ่มสัมผัสแบบอินเตอร์แอคทีฟ

กดปุ่มสัมผัสค้างไว้จากหน้าจอสแตนด์บายเพื่อเข้าสู่เมนูลัดมีเดียเพิ่มเติม

ในการเลือกรายการ ให้แตะที่ไอคอนบนหน้าจอสัมผัสอย่างถูกต้อง โทรศัพท์ KF750 จะสั่นเล็กน้อย เมื่อคุณแตะที่ตัวเลือกใดๆ

- คุณไม่จำเป็นต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสเพียงเบาๆ
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- ห้ามปิดคลุมโทรศัพท์ด้วยของหรือปก เนื่องจากหน้าจอสัมผัสจะไม่ทำงานหากมีวัตถุใดๆ ปิดคลุมอยู่
- ในการออกจากหน้าจอสัมผัส ให้แตะที่ไอคอน โฮม ที่มุมบนขวาหนึ่งครั้ง โทรศัพท์จะกลับไปหน้าจอสแตนด์บาย
- ปุ่มสัมผัสด้านล่างหน้าจอสัมผัสจะสามารถ

ใช้เป็นปุ่มลูกศรสี่ทิศทางสำหรับเลื่อนดูเมนูต่างๆ ของโทรศัพท์

**เคล็ดลับ!** ใช้หน้าจอสัมผัสเพื่อเข้าถึงเพลง ภาพถ่าย เกมส์ เอกสาร และวิทยุอย่างสะดวกรวดเร็ว



ปุ่มสัมผัส

**หมายเหตุ:** เมื่อไฟหน้าจอดับลง ให้กดปุ่มกลิ้งที่ด้านขวามือของโทรศัพท์เพื่อกลับไปยังหน้าจอสแตนด์บาย

### คำแนะนำสำหรับลูกค้า

เพื่อการรับสัญญาณที่ดียิ่งขึ้น LG ขอแนะนำให้คุณถือโทรศัพท์ตามตัวอย่างด้านล่าง



โปรดอย่าให้มือของคุณบดบังบริเวณเสาอากาศระหว่างการโทรออกหรือขณะการใช้งานเชื่อมต่อบลูทูธ การกระทำดังกล่าวอาจลดคุณภาพของสัญญาณ

### แถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูล เช่น ระดับความแรงของสัญญาณ, ข้อความใหม่ และพลังงานแบตเตอรี่ รวมถึงแสดงว่ามีการใช้งาน บลูทูธ หรือ GPRS อยู่หรือไม่

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	คำอธิบาย
	การทำงานหลายอย่าง
	ความแรงของสัญญาณ (จำนวนแถบอาจแตกต่างกันไป)
	ไม่มีสัญญาณเครือข่าย

ไอคอน	คำอธิบาย
	เปิดใช้เมื่อบริบทป้องกัน
	แบตเตอรี่หมด
	ข้อความตัวอักษรใหม่
	ข้อความเสียงใหม่
	อีเมลใหม่
	ตั้งปลุกแล้ว
	ใช้รูปแบบปกติอยู่
	ใช้รูปแบบเงียบอยู่
	หน่วยความจำภายนอก
	โอนสายเรียกเข้า
	ใช้ GPRS ได้
	ใช้ EDGE อยู่
	โรมมิ่ง
	ใช้งาน บลูทูธ
	ปฏิเสธการรับสาย
	ใช้ HSDPA ได้
	ใช้ 3G ได้

01

02

03

04

05



06

07

08

## การโทร


### การโทรออก

- 1 ป้อนหมายเลขโทรศัพท์รวมทั้งรหัสพื้นที่ หากต้องการลบที่ละหมายเลข กด **C** หากต้องการลบหมายเลขทั้งหมด กด **C** ค้างไว้
- 2 กด  เพื่อโทรออก
- 3 กด  หรือปิดเครื่องเพื่อวางสาย

### การโทรแบบสนทนาทางวิดีโอ

คุณสามารถโทรแบบสนทนาทางวิดีโอได้เมื่ออยู่ในพื้นที่ให้บริการ 3G ถ้าผู้ที่ยอมรับสายมีโทรศัพท์วิดีโอ 3G และอยู่ในพื้นที่ให้บริการ 3G จะสามารถสนทนาทางวิดีโอได้ นอกจากนี้คุณยังสามารถรับสายสนทนาทางวิดีโอได้ การโทรออก/รับสายสนทนาทางวิดีโอทำได้ดังนี้



- 1 ป้อนหมายเลขโทรศัพท์โดยใช้ปุ่มกดหรือเลือกหมายเลขโทรศัพท์จากรายการหมายเลขโทรศัพท์ที่โทรออก/รับสาย หากต้องการแก้ไขข้อผิดพลาด ให้กด **C** แล้วป้อนหรือลบหมายเลขล่าสุด หรือกด **C** ค้างไว้เพื่อลบหมายเลขทั้งหมด
- 2 ถ้าคุณไม่ต้องการใช้ลำโพง ตรวจสอบให้แน่ใจว่าคุณได้เสียบชุดหูฟังแล้ว

- 3 หากต้องการเริ่มใช้งานฟังก์ชันวิดีโอ กดปุ่มเลือก [ตัวเลือก] และเลือก **สนทนาทางวิดีโอ** คุณจะได้รับแจ้งว่าคุณต้องปิดแอปพลิเคชันอื่นๆ ก่อนโทรแบบสนทนาทางวิดีโอ **หมายเหตุ:** การสนทนาทางวิดีโออาจต้องใช้เวลาสักครู่ในการเชื่อมต่อ โปรดรอ ระยะเวลาในการเชื่อมต่อสายสนทนาทางวิดีโอจะขึ้นอยู่กับความเร็วในการรับสายของผู้รับ ภาพของคุณจะปรากฏขึ้นขณะเชื่อมต่อ การสนทนาทางวิดีโอ หลังจากผู้รับรับสายแล้ว ภาพของผู้รับจะปรากฏขึ้นที่หน้าจอ
- 4 ปรับตำแหน่งกล้องตามต้องการ
- 5 กด  เพื่อวางสาย หรือปิดเครื่อง



### การโทรออก/โทรแบบสนทนาทางวิดีโอจากรายชื่อ

การโทรไปยังผู้รับที่มีหมายเลขโทรศัพท์บันทึกอยู่ในรายชื่อแล้วทำได้ง่าย


- 1 แตะที่ปุ่มเลือกขวาเพื่อเข้าใช้ลิสต์รายชื่อ
- 2 เลื่อนไปยังรายชื่อที่ต้องการโทรออก

- 3 กด  เพื่อโทรออก  
กดปุ่มเลือกซ้ายและเลือก  
**ต่อสายวิดีโอ** เพื่อโทรแบบสนทนา  
ทางวิดีโอ
- 4 กด  เพื่อวางสาย

### การโทรออกต่างประเทศ


- 1 กด  ค้างไว้เพื่อเรียกรหัสการ  
โทรออกต่างประเทศขึ้นที่หน้าจอ  
เครื่องหมาย '+' จะนำหน้ารหัสการ  
โทรออกทางไกลต่างประเทศ
- 2 บอกรหัสประเทศ รหัสพื้นที่  
และหมายเลขโทรศัพท์
- 3 กด 

### การรับสายและการปฏิเสธสาย เรียกเขา


เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย  
กดปุ่มเลือกซ้ายเพื่อปิดเสียงเรียกเข้า  
วิธีนี้เป็นวิธีที่ดี หากคุณลืมเปลี่ยนรูปแบบ  
เป็น เงียบ เมื่ออยู่ในห้องประชุม  
กดปุ่มเลือกขวาเพื่อปฏิเสธสายเรียกเข้า

### โทรด่วน


คุณสามารถกำหนดรายชื่อที่โทรออก  
บ่อยเป็นหมายเลขโทรด่วนได้

- 1 กด  และเลือก **รายชื่อ**
- 2 เลือก **โทรด่วน**
- 3 ข้อความเสียงได้รับการกำหนด  
ให้อยู่ที่หมายเลขโทรด่วน 1  
ซึ่งคุณไม่สามารถเปลี่ยนแปลงได้  
เลือกหมายเลขอื่นๆ เพื่อกำหนดรายชื่อ  
สำหรับโทรด่วน
- 4 สมุดแอดเดรสจะเปิดขึ้น เลือกรายชื่อ  
ชื่อที่คุณต้องการกำหนดให้กับหมายเลข  
นั้น โดยการแตะที่หมายเลขโทรศัพท์  
หนึ่งครั้ง

ในการโทรหมายเลขโทรด่วน

- 1 กดตัวเลขที่กำหนดไว้แล้วกดปุ่มรับ  
สาย  หรือ
- 2 กดตัวเลขที่กำหนดไว้ค้างไว้จนกว่า  
รายชื่อจะปรากฏที่หน้าจอ

### การใช้สายที่ส่ง

- 1 ขณะอยู่ในสายสนทนาแรก ให้แตะปุ่ม  
เลือกซ้ายแล้วเลือก **เพิ่มสายใหม่**
- 2 กดหมายเลขหรือค้นหารายชื่อของคุณ  
(โปรดดูรายละเอียดเกี่ยวกับวิธี  
โทรออกจากรายชื่อที่หน้า 29)
- 3 กด  เพื่อต่อสาย

01

02

03

04

05

06

07

08

## การโทร

- 4 สายสนทนาทั้งสองสายจะแสดงอยู่บนหน้าจอการโทรออก สายสนทนาแรกจะล็อคและพักสายคู่สนทนา
- 5 เลือก **สลับ** เพื่อเปลี่ยนไปมาระหว่างแต่ละสาย
- 6 ในการวางสายใดสายหนึ่งหรือวางสายทั้งสองสาย ให้เลือก **ตัวเลือก** → **วางสาย** แล้วตามด้วย **ทั้งหมด** หรือ **ใช้งาน**

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

### สัญญาณเสียง DTMF

DTMF ทำให้คุณสามารถใช้คำสั่งตัวเลขในการนำเสนอบนหน้าจอในข้อความอัตโนมัติ โดย DTMF จะเปิดตามค่าเริ่มต้น

### การดูบันทึกการโทร

กด  เลือก **การโทร** →

**บันทึกการโทร**

เลือกเพื่อดู:

**ทุกสาย** - รายการที่คุณโทรออก, ได้รับ และไม่ได้รับทั้งหมด

**สายโทรออก** - รายการหมายเลขที่คุณโทรออกทั้งหมด

**สายที่ได้รับ** - รายการหมายเลขที่โทรเข้ามาหาคุณทั้งหมด

**สายไม่ได้รับ** - รายการสายที่คุณไม่ได้รับทั้งหมด

กด  เลือก **การโทร**

จาก การโทร คุณสามารถเลือกดูรายการต่อไปนี่:

**เวลาในการโทร** - ระยะเวลาทั้งหมดของสายที่โทรออกและสายที่ได้รับ

**ปริมาณข้อมูล** - ดูจำนวนข้อมูลที่คุณได้รับและส่งทั้งหมดเป็นกิโลไบต์

**ค่าโทร** - ดูค่าใช้จ่ายที่คิดตามที่คุณโทรออก (บริการนี้ขึ้นอยู่กับระบบเครือข่ายผู้ให้บริการบางรายอาจไม่สนับสนุนบริการนี้)

### เคล็ดลับ!

จากรายการโทรใดก็ได้ ให้แตะปุ่มเลือกซ้าย และ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

## การใช้การโอนสาย

- 1 กด  เลือก การโทร
  - 2 เลือก การโอนสาย แล้วเลือก โทรด้วยเสียง และ/หรือ สทนาทางวิดีโอ
  - 3 เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อติดต่อไม่ได้
  - 4 ป้อนหมายเลขที่คุณต้องการให้ โอนสายไป
  - 5 เลือก **เปิดใช้** เพื่อเปิดใช้
- หมายเหตุ: คุณต้องเสียค่าใช้จ่ายในการโอนสายด้วย โปรดติดต่อผู้ให้บริการเครือข่ายของคุณสำหรับรายละเอียดเพิ่มเติม

### เคล็ดลับ!

ในการปิดการโอนสายทั้งหมด ให้เลือก **เลิกใช้ทั้งหมด**

## การใช้การป้องกันการโทร

- 1 กด  เลือก การโทร
- 2 เลือก ป้องกันการโทร แล้วเลือก โทรด้วยเสียง และ/หรือ สทนาทางวิดีโอ
- 3 เลือกตัวเลือกใดตัวเลือกหนึ่ง หรือเลือกทั้ง 6 ตัวเลือกนี้:  
โทรออกทั้งหมด  
สายโทรออกต่างประเทศ  
สายโทรออกต่างประเทศ ยกเว้นประเทศแม่  
สายเรียกเข้าทั้งหมด  
สายเข้าเมื่ออยู่ต่างประเทศ
- 4 ป้อนรหัสผ่านสำหรับป้องกันการโทร โปรดตรวจสอบกับผู้ให้บริการระบบเครือข่ายของคุณเกี่ยวกับบริการนี้

### เคล็ดลับ! เลือก

#### กำหนดเบอร์โทรออก

เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณจะต้องใช้รหัส PIN2 จากผู้ให้บริการด้วย เมื่อเปิดใช้ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

01

02

03

04

05

06

07

08

## การโทร

### การเปลี่ยนการตั้งค่าการโทร ทั่วไป

- 1 กด  เลือก การโทร
- 2 เลือก **ตั้งค่าทั่วไป** จากหน้าจอนี้  
คุณสามารถแก้ไขการตั้งค่าของ:  
**ปฏิเสธการรับสาย** - เลือก เปิด หรือ  
ปิด และเลือกปฏิเสธทุกสาย, จาก  
กลุ่มหรือรายชื่อที่ระบุไว้, สายจาก  
หมายเลขที่ไม่รู้จัก (ไม่มีอยู่ในรายชื่อ  
ของคุณหรือผู้โทรที่ไม่มีข้อมูลผู้โทร)  
**ส่งหมายเลขตัวเอง** - เลือกว่าจะ  
แสดงหมายเลขของคุณเมื่อคุณโทร  
ออกหรือไม่

**โทรซ้ำอัตโนมัติ** - เลือก เปิด  
หรือ ปิด

**โหมดตอบรับ** - เลือกว่าจะ  
รับสายโดยใช้ปุ่มรับสาย, ปุ่มใดๆ  
หรือโดยเปิดฝาสนทนา

**เตือนทุกนาที** - เลือกเปิด ปิด  
เพื่อฟังเสียงเตือนทุกนาทีในระ  
หว่างที่ใช้สาย

**โหมดตอบรับ BT** - เลือก แชนด์ฟรี  
เพื่อให้สามารถรับสายได้ในระหว่าง  
ที่ใช้งานชุดหูฟัง บลูทูธ หรือเลือก  
ตัวเครื่อง เพื่อรับสายโดยกดปุ่มบนตัว  
เครื่องขณะใช้ชุดหูฟัง บลูทูธ

**บันทึกหมายเลขใหม่** - เลือก ใช้  
เพื่อบันทึกหมายเลขใหม่

การตั้งค่าการปิดสไลด์ - เลือก  
วางสาย เพื่อวางสายเมื่อปิดฝาสนทนา

### การเปลี่ยนการตั้งค่าการ สนทนาทางวิดีโอ

- 1 กด  เลือก การโทร
- 2 เลือก **ตั้งค่าสนทนาทางวิดีโอ**
- 3 กำหนดว่าจะ **ใช้รูปส่วนตัว**  
แล้วเลือกรูป/หรือเปิด **กระจุก** (คุณ  
สามารถมองเห็นตัวเองบนหน้าจอได้)

# รายชื่อ

## การค้นหารายชื่อ

คุณสามารถค้นหารายชื่อได้ 2 วิธี:

### จากหน้าจอสแตนด์บาย


- 1 จากหน้าจอสแตนด์บาย ให้แตะปุ่มเลือกขวาเพื่อเปิดสมุดแอดเดรส
- 2 เลือกตัวอักษรตามตัวอักษรแรกของรายชื่อที่คุณต้องการดู เช่น 'Home' ให้เลือก **H-O**

**เคล็ดลับ!** คุณสามารถค้นหาตามกลุ่มได้โดยการแตะที่ปุ่มเลือกขวาแล้วเลือก **ค้นหาตามกลุ่ม** ซึ่งจะเป็นการแสดงรายการกลุ่มทั้งหมดของคุณ

### จากเมนูหลัก

- 1 เลือก **รายชื่อ**
- 2 เลือก **ค้นหา** และป้อนตัวอักษร 2-3 ตัวแรกของรายชื่อที่คุณต้องการค้นหาโดยใช้ปุ่มกด
- 3 สมุดแอดเดรสของคุณจะแสดงรายชื่อของผู้ติดต่อที่สอดคล้องกับตัวอักษรที่คุณป้อนมา

## การเพิ่มรายชื่อใหม่

- 1 กด  และเลือก **รายชื่อ**
- 2 เลือก **รายชื่อใหม่**
- 3 เลือกว่าจะบันทึกรายชื่อไปยัง **ตัวเครื่อง** หรือ **USIM**
- 4 ป้อนชื่อและนามสกุลของรายชื่อติดต่อใหม่ คุณไม่จำเป็นต้องป้อนทั้งสองรายการ แต่คุณต้องป้อนรายการใดรายการหนึ่ง
- 5 ป้อนหมายเลขที่ต่างกันสูงสุด 7 หมายเลข แล้วระบุประเภทให้กับแต่ละหมายเลข โดยเลือกจาก **เบอร์มือถือ**, **โฮม**, **ออฟฟิศ**, **เบอร์เพจเจอร์**, **แฟกซ์**, **VT** และ **ทั่วไป** และที่ **ตกลง**
- 6 เพิ่มอีเมลแอดเดรสสูงสุด 2 รายการ
- 7 กำหนดรายชื่อให้กับกลุ่ม เลือกจาก **ไม่มีกลุ่ม**, **ครอบครัว**, **เพื่อน**, **เพื่อนร่วมงาน**, **โรงเรียน** หรือ **วีไอพี**
- 8 คุณสามารถเพิ่ม **โฮมเพจ**, **ที่อยู่บ้าน**, **ชื่อบริษัท**, **ชื่องาน**, **ที่อยู่บริษัท** และ **บันทึก** ได้

### เคล็ดลับ!

คุณสามารถสร้างกลุ่มที่กำหนดเองสำหรับรายชื่อของคุณได้ โปรดดูที่ **การสร้างกลุ่ม** ทางด้านล่าง

01

02

03

04

05

06

07

08

## รายชื่อ

### ตัวเลือกต่างๆ ของรายชื่อ

คุณสามารถใช้ฟังก์ชันต่างๆ ได้มากมายขณะที่ดูรายชื่อ ขึ้นตอนต่อไปนี้จะแสดงวิธีการเข้าถึงและใช้งานเมนูตัวเลือกต่างๆ:

**1** เปิดรายชื่อที่คุณต้องการใช้ โปรดดูที่ **การค้นหารายชื่อ** ในหน้า 29

**2** กดปุ่มเลือกซ้ายเพื่อเปิดรายการตัวเลือก

จากขั้นตอนนี้ คุณสามารถ:

**แก้ไข** - เปลี่ยนแปลงรายละเอียดของรายชื่อติดต่อ

**ส่งข้อความ** - ส่งข้อความหรืออีเมลในรายชื่อ โปรดดูรายละเอียดเกี่ยวกับวิธีการส่งข้อความที่หน้า **33**

**ส่งนามบัตร** - ส่งรายละเอียดของรายชื่อไปยังบุคคลอื่นเป็นนามบัตรเลือกเพื่อส่งเป็น ข้อความตัวอักษร, ข้อความมัลติมีเดีย, อีเมล หรือผ่านบลูทูธ


**ต่อสายสนทนา** - โทรออกไปยังรายชื่อที่ต้องการ

**ต่อสายวิดีโอ** - สนทนาทางวิดีโอกับรายชื่อที่ต้องการ

**บันทึกไปUSIM/เครื่อง** - เลือกย้ายหรือคัดลอกไปยัง USIM การ์ดหรือตัวเครื่อง (ขึ้นอยู่กับตำแหน่งที่คุณบันทึกรายชื่อตั้งแต่เริ่มแรก)

**ลบ** - ลบรายชื่อ และที่ ใช้เมื่อคุณแน่ใจ


### การสร้างกลุ่ม

- 1** กด  และเลือก **รายชื่อ**
- 2** เลือก **กลุ่ม** แล้วแตะปุ่มเลือกซ้าย
- 3** เลือก **เพิ่มกลุ่มใหม่**
- 4** บ้อนชื่อสำหรับกลุ่มใหม่ของคุณ
- 5** แตะที่ **เสร็จ**

**หมายเหตุ:** หากคุณลบกลุ่ม รายชื่อที่ได้รับการกำหนดให้กับกลุ่มนั้นจะไม่หายไป แต่ยังคงอยู่ในสมุดแอดเดรส

**เคล็ดลับ!** คุณสามารถแก้ไขกลุ่มที่มีอยู่ได้โดยการเลื่อนแถบไปที่กลุ่มที่ต้องการ แล้วแตะปุ่มเลือกซ้ายเลือกเพื่อ **เพิ่มสมาชิก** ในกลุ่ม จากรายชื่อของคุณ, กำหนด **กลุ่มเสียงเรียกเข้า**, เปลี่ยนชื่อกลุ่ม หรือลบกลุ่ม

## การใช้หมายเลขบริการ

คุณสามารถดูรายการ Service Dialling Numbers (SDN) ที่กำหนดโดยผู้ให้บริการ (ถ้า USIM การ์ดรองรับ) หมายเลขนี้ประกอบด้วยหมายเลขโทรฉุกเฉิน หมายเลขบริการสอบถามข้อมูล และหมายเลขระบบฝากข้อความ หลังจากเลือกหมายเลขบริการ กด  เพื่อโทรออก

## การดูหมายเลขโทรศัพท์ของคุณ


ฟังก์ชันนี้ให้คุณสามารถแสดงหมายเลขโทรศัพท์ของคุณใน USIM การ์ด

## การสร้างนามบัตร

คุณสามารถสร้างนามบัตรของตนเองโดยเลือก นามบัตร และ เพิ่ม หลังจากป้อนชื่อ อีเมลและภาพ คุณสามารถใช้ข้อมูลดังกล่าวเป็นนามบัตรเมื่อส่งข้อความ

## การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้เหมาะกับการทำงานของสมุดแอดเดรส ในแบบที่คุณต้องการได้

- 1 กด  และเลือก รายชื่อ
- 2 เลือก **ตั้งค่า** จากหน้าจอนี้ คุณสามารถปรับการตั้งค่าต่อไปนี้:

**การตั้งค่ารายชื่อ** - เลือกว่าจะดูรายชื่อที่บันทึกไว้ทั้งใน ตัวเครื่อง & USIM, เฉพาะตัวเครื่อง หรือ เฉพาะ USIM นอกจากนี้ คุณยังสามารถเลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อติดต่อขึ้นก่อนก็ได้ และแสดงภาพของรายชื่อ

**ซิงโครไนซ์รายชื่อ** - เชื่อมต่อไปยังเซิร์ฟเวอร์ของคุณเพื่อซิงโครไนซ์รายชื่อต่างๆ โปรดดูที่ การซิงโครไนซ์รายชื่อ ในหน้า 77

**คัดลอก** - คัดลอกรายชื่อจาก USIM ไปยังตัวเครื่อง หรือจากตัวเครื่องไปยัง USIM เลือกว่าจะคัดลอกทีละรายการหรือพร้อมกันทั้งหมด

**ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับตัวเลือก คัดลอก แต่เครื่องจะบันทึกเฉพาะรายชื่อในตำแหน่งที่คุณย้ายไปเท่านั้น หากคุณย้ายรายชื่อจาก USIM ไปยังตัวเครื่อง รายชื่อนั้นจะถูกลบออกจากหน่วยความจำ USIM

01

02

03

04

05

06

07

08

## รายชื่อ

**ส่งทุกรายชื่อผ่านบลูทูธ -**  
ส่งข้อมูลรายชื่อทั้งหมดไปยังตัวเครื่อง  
ด้วย บลูทูธ

**สำรองข้อมูลรายชื่อ -** โปรดดูที่  
การสำรองข้อมูลและการเรียกคืนข้อมูล  
ในโทรศัพท์ ในหน้า 77

**เรียกคืนรายชื่อ -** โปรดดูที่ การสำรอง  
ข้อมูลและการเรียกคืนข้อมูลใน  
โทรศัพท์ ในหน้า 77

**ลบรายชื่อ -**  
ลบรายชื่อของคุณทั้งหมด แต่ที่ ใช้  
หากคุณต้องการล้างสมุดแอดเดรส  
ของคุณ

**ข้อมูลหน่วยความจำ -** คุณสามารถดู  
จำนวนพื้นที่หน่วยความจำที่เหลือ  
อยู่ในตัวเครื่องหรือใน USIM

# ข้อความ

## ข้อความ

โทรศัพท์ KF750 ของคุณได้ผสมผสาน SMS, MMS และอีเมลไว้ในเครื่องเดียว และเมนูที่ใช้ง่าย

## การส่งข้อความ

- 1 เลือก **ข้อความ** แล้วเลือก **ข้อความใหม่**
- 2 เลือก **ข้อความ** เพื่อส่ง SMS หรือ MMS หรือหากต้องการส่งอีเมล เลือก **อีเมล** โปรดดูรายละเอียดที่หน้า 35
- 3 หากคุณเลือก **ข้อความ** จะมี SMS ใหม่เปิดขึ้น
- 4 เลือก **ตัวเลือก** และเลือก **แทรก** เพื่อเพิ่มภาพ วิดีโอ เสียง หรือเรื่อง
- 5 กด **ส่ง** ป้อนหมายเลข โทรศัพท์หรือเลือก **รายชื่อ** เพื่อเปิดลิสรายชื่อ คุณสามารถเพิ่มรายชื่อติดต่อหลายรายการได้

**คำเตือน:** การส่งข้อความให้กับผู้รับแต่ละรายจะคิดค่าใช้จ่ายที่ 160 ตัวอักษรต่อหนึ่งข้อความตัวอักษร\* ขึ้นอยู่กับเครือข่าย

## คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือเสียงลงใน SMS ข้อความดังกล่าวจะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

## การป้อนข้อความ

คุณสามารถป้อนข้อความได้ 2 วิธีดังนี้ ระบบช่วยสะกดคำ T9 และการป้อนตัวอักษรด้วยตนเอง

ในการเปลี่ยนระหว่างวิธีการป้อนข้อความแต่ละวิธี ให้กดปุ่ม **#\*#** ค้างไว้เมื่อเปิดข้อความเปล่าอยู่

### ระบบช่วยสะกดคำ T9 -

เปิดระบบช่วยสะกดคำ T9 แล้วเลือก **T9 abc, T9 Abc** หรือ **123**

### การป้อนตัวอักษรด้วยตนเอง - เลือก **Abc, ABC** หรือ **123**

ในการเปลี่ยนระหว่างตัวพิมพ์ใหญ่, ตัวพิมพ์เล็ก และตัวพิมพ์ใหญ่นำหน้าตัวให้กดปุ่ม **#\*#**

ในการลบตัวอักษร ให้ใช้ปุ่ม **C** ที่ด้านล่างหน้าจอ

หากต้องการป้อนสัญลักษณ์ ให้เลือก **ตัวเลือก** และ **แทรก**

01

02

03

04

05

06

07

08

## ข้อความ

### ระบบช่วยสะกดคำ T9

โหมด T9 จะใช้พจนานุกรมภายในเครื่องเพื่อรับรู้คำศัพท์ที่คุณเขียนตามลำดับการกดปุ่ม เพียงแตะที่ปุ่มตัวเลขที่สัมพันธ์กับตัวอักษรที่คุณจะป้อน พจนานุกรมจะรับรู้ได้ถึงคำศัพท์ เมื่อคุณป้อนตัวอักษรครบทุกตัวแล้ว ตัวอย่างเช่น กด 8, 3, 5, 3, 7, 4, 6, 6, 3 เพื่อเขียนคำว่า 'telephone'

### การป้อนตัวอักษรด้วยตนเอง

ในโหมดการป้อนตัวอักษรด้วยตนเอง คุณต้องกดที่ปุ่มซ้ำๆ เพื่อป้อนตัวอักษร ตัวอย่างเช่น ในการเขียนคำว่า 'hello' ให้กด **4** สองครั้ง, **3** สองครั้ง, **5** สามครั้ง, **5** สามครั้ง อีกครั้งหนึ่ง แล้วกด **6** สามครั้ง

### การตั้งค่าอีเมล

คุณสามารถติดต่อสื่อสารระหว่างการเดินทางได้โดยใช้อีเมลบนโทรศัพท์ KF750 ของคุณ ซึ่งสามารถตั้งค่าอีเมลแอดเดสส์แบบ POP3 หรือ IMAP4 ได้อย่างรวดเร็วและง่ายดาย

- 1** เลือก **ข้อความ** แล้วเลือก **ตั้งค่า**
- 2** เลือก **อีเมล** แล้วเลือก **แอดเดสส์อีเมล**
- 3** คุณสามารถเลือกวิธีการทำงานของแอดเดสส์ได้ดังนี้

**ชื่อ** - ป้อนชื่อสำหรับแอดเดสส์นี้

**ชื่อของฉัน** - ป้อนชื่อของคุณ

**ชื่อผู้ใช้** - ป้อนชื่อผู้ใช้แอดเดสส์

**รหัสผ่าน** -

ป้อนรหัสผ่านของแอดเดสส์

**อีเมลแอดเดสส์** - ป้อนอีเมลแอดเดสส์ของแอดเดสส์

**อีเมลที่ตอบกลับ** - ป้อนอีเมลแอดเดสส์เพื่อใช้ 'ตอบกลับ'

**เซิร์ฟเวอร์เมลที่ส่งออก** - ป้อนรายละเอียดของแอดเดสส์

**เซิร์ฟเวอร์เมลขาเข้า** - ป้อนรายละเอียดของแอดเดสส์

**ขนาดการรับสูงสุด** -

เลือกขนาดที่จำกัดไว้ของอีเมล

ขนาดการรับสูงสุดคือ 1MB

**ประเภทเมลบ็อกซ์** -

ป้อนประเภทเมลบ็อกซ์ POP3 หรือ IMAP4

**บันทึกในเซิร์ฟเวอร์** - เลือกว่าจะบันทึกอีเมลไว้ในเซิร์ฟเวอร์หรือไม่ เครื่องจะบันทึกสำเนาของแอดเดสส์แบบ IMAP4 ไว้เสมอ

**บันทึกเมลที่ส่งไว้ใน** - เลือกที่ที่จะบันทึกอีเมลแบบ IMAP4 เครื่องจะบันทึกสำเนาของแอดเดสส์แบบ POP3 ไว้ในโทรศัพท์เสมอ

**จุดเชื่อมต่อ** - เลือกจุดเชื่อมต่ออินเทอร์เน็ต

**ดาวน์โหลดอัตโนมัติ** - เลือกว่าจะดึงอีเมลใหม่โดยอัตโนมัติหรือไม่

**ตั้งค่าขั้นสูง** - เลือกว่าจะใช้การตั้งค่าขั้นสูงหรือไม่

**หมายเลขพอร์ต SMTP** - โดยทั่วไปหมายเลขนี้ คือ 25

**พอร์ตเซิร์ฟเวอร์เข้า** - โดยทั่วไป หมายเลขนี้ คือ 110 สำหรับแอคเคาท์แบบ POP3 และ 143 สำหรับแอคเคาท์แบบ IMAP4

**ตรวจสอบสิทธิ์ SMTP** - เลือกการตั้งค่าความปลอดภัยของเซิร์ฟเวอร์เมลล์ขาออก

**ชื่อผู้ใช้ SMTP** - ป้อนชื่อผู้ใช้ SMTP

**รหัสผ่าน SMTP** - ป้อนรหัสผ่าน SMTP

**ล็อกอินที่ปลอดภัย APOP** - เลือกเพื่อเปิดใช้งานล็อกอินเพื่อความปลอดภัย APOP สำหรับแอคเคาท์แบบ POP3 สำหรับแอคเคาท์แบบ IMAP4 จะตั้งค่าเป็นปิดการใช้งานเสมอ

ในตอนนี้อย่างน้อยคุณได้กำหนดค่าให้กับแอคเคาท์เรียบร้อยแล้ว ซึ่งแอคเคาท์นี้จะปรากฏอยู่ในรายการแอคเคาท์ในโฟลเดอร์ อีเมล

## การดึงข้อมูลอีเมล

คุณสามารถตรวจสอบอีเมลใหม่ในแอคเคาท์ของคุณแบบอัตโนมัติหรือด้วยตนเองได้ โปรดดูที่ 'การเปลี่ยนการตั้งค่าอีเมล' เพื่อตรวจสอบแบบอัตโนมัติในการตรวจสอบด้วยตนเอง:

- 1 เลือก **ข้อความ** และ **เมลล์ออกซ์**
- 2 เลือกแอคเคาท์ที่คุณต้องการใช้
- 3 เลือก **เรียกดู** จากนั้นโทรศัพท์จะเชื่อมต่อกับแอคเคาท์อีเมลและดึงข้อมูลข้อความใหม่ให้คุณ

## การส่งอีเมลโดยใช้แอคเคาท์ใหม่

- 1 เลือก **ข้อความ** แล้วเลือก **สร้างใหม่**
- 2 เลือก **อีเมล** และอีเมลใหม่จะเปิดขึ้น
- 3 ใช้แท็บ และ **ตัวเลือก** เพื่อป้อนที่อยู่ผู้รับ และเขียนข้อความใช้ **แทรก** เพื่อแนบรูปภาพ, วิดีโอ, เสียง หรือไฟล์ประเภทอื่น
- 4 เลือก **ส่ง** แล้วอีเมลจะถูกส่งออกไป

### เคล็ดลับ!

คุณสามารถอีเมลเอกสาร Word, Excel, PowerPoint และ PDF ไปที่โทรศัพท์ KF750 เพื่อตรวจดูเอกสารระหว่างเดินทางได้

01

02

03

04

05

06

07

08

## ข้อความ

### การเปลี่ยนการตั้งค่าอีเมล

คุณสามารถเปลี่ยนแปลงการตั้งค่าอีเมลเพื่อให้เป็นในแบบที่คุณต้องการได้

- 1 เลือก **ข้อความ** แล้วเปิด **ตั้งค่า**
- 2 เลือก **อีเมล** ซึ่งคุณสามารถเปลี่ยนแปลงการตั้งค่าต่อไปนี้ได้:

#### ตอบกลับอีเมลได้ -

เลือกเพื่อให้ส่งข้อความ 'ยืนยันการอ่าน'

#### ร้องขอการตอบกลับ

- เลือกว่าต้องการข้อความ 'ยืนยันการอ่าน' หรือไม่

**รอบเวลาการเรียกดู** - เลือกความถี่ที่จะให้โทรศัพท์ KF750 ตรวจสอบข้อความอีเมลใหม่

#### ประกอบด้วยข้อความในการส่งต่อ & ตอบกลับ -

เลือกเพื่อแสดงข้อความต้นฉบับหรือไม่

**รวมสิ่งที่แนบ** - เลือกเพื่อแสดงสิ่งที่แนบต้นฉบับ

#### เรียกอัตโนมัติในการโรมมิ่ง -

เลือกเพื่อดึงข้อมูลข้อความโดยอัตโนมัติเมื่อคุณอยู่ต่างประเทศ หรือหยุดการดึงข้อมูลอัตโนมัติ

**การแจ้งเตือนอีเมลใหม่** - เลือกว่าจะแจ้งเตือนอีเมลใหม่หรือไม่

**ลายเซ็น** - สร้างลายเซ็นในอีเมลและเปิดคุณสมบัตินี้

**ระดับความสำคัญ** - เลือกระดับความสำคัญของข้อความอีเมล

### โพลเดอ์ข้อความ

โครงสร้างโพลเดอ์ที่ใช้ในการรับส่งข้อความในโทรศัพท์ KF750 เป็นโครงสร้างที่เข้าใจง่าย

#### ภาคเข้า - ข้อความทั้งหมดที่

คุณได้รับจะอยู่ในภาคเข้า จากที่นี่คุณสามารถตอบกลับ, ส่งต่อ และดำเนินการอื่นๆ ได้ โปรดดูรายละเอียดที่ด้านล่างนี้

**เมลบ็อกซ์** - อีเมลทั้งหมดที่คุณได้รับจะอยู่ในเมลบ็อกซ์

**ร่าง** - หากคุณยังเขียนข้อความไม่เสร็จ คุณสามารถบันทึกสิ่งที่คุณเขียนไว้ที่นี่ได้

**ภาคออก** - โพลเดอ์นี้เป็นโพลเดอ์จัดเก็บแบบชั่วคราวขณะที่กำลังส่งข้อความออกไป

**รายการที่ส่ง** - ข้อความทั้งหมดที่คุณส่งออกไปจะอยู่ในโพลเดอ์รายการที่ส่ง

**โพลเดอ์ส่วนตัว** - คุณสามารถจัดการข้อความในโพลเดอ์นี้ได้

## การจัดการข้อความ

คุณสามารถใช้ ถัดเข้า ในการจัดการข้อความของคุณได้

**1** เลือก **ข้อความ** และ **ถัดเข้า**

**2** เลือก **ตัวเลือก** แล้วเลือก:

**ตอบกลับ** - ส่งข้อความตอบกลับไปยังข้อความที่เลือก

**ส่งต่อ** - ส่งข้อความที่เลือกไปยังบุคคลอื่น

**การโทร** - โทรออกหรือสนทนาทางวิดีโอกับบุคคลที่ส่งข้อความมา

**ลบ** - ลบข้อความ

**ข้อความใหม่** - เปิดข้อความหรืออีเมลเปล่าใหม่

**เลือก/ไม่เลือก** - เลือกข้อความเพื่อลบหลายรายการ

**คัดลอกและย้าย** - คัดลอกหรือย้ายข้อความไปที่โทรศัพท์, USIM หรือโฟลเดอร์ส่วนตัว

**ฟิลเตอร์** - ดูข้อความตามประเภท ซึ่งจะแบ่งกลุ่ม SMS แยกจาก MMS

**ข้อมูลข้อความ** - ดูข้อมูลเพิ่มเติมของข้อความ ซึ่งรวมถึงเวลาที่ส่งและรายงานการส่งและอ่านข้อความ

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ USIM** ปรากฏขึ้น คุณควรลบข้อความบางข้อความในถาดเข้าออก

หากมีข้อความ **ไม่มีที่ว่างสำหรับข้อความ** คุณสามารถลบข้อความหรือไฟล์ที่บันทึกออกได้ เพื่อสร้างพื้นที่

## การใช้ข้อความอัตโนมัติ

สร้างข้อความอัตโนมัติสำหรับข้อความ SMS และ MMS ที่คุณส่งบ่อยๆ คุณจะพบว่าข้อความอัตโนมัติบางข้อความในโทรศัพท์ของคุณแล้ว ซึ่งคุณสามารถแก้ไขข้อความเหล่านั้นได้ หากต้องการ

**1** เลือก **ข้อความ** แล้วเลือก **ข้อความอัตโนมัติ**

**2** เลือก **ข้อความอัตโนมัติ** หรือ **MMS อัตโนมัติ** คุณสามารถเลือก **ตัวเลือก** เพื่อ **เพิ่มใหม่**, **แก้ไข**, **ลบ** หรือ **ลบทั้งหมด** สำหรับข้อความอัตโนมัติ

01

02

03

04

05

06

07

08

## ข้อความ

### การใช้โมติคอน

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้โมติคอน คุณจะพบว่า มีโมติคอนที่ใช้กันทั่วไปในโทรศัพท์ของคุณแล้ว

- 1 เลือก **ข้อความ** แล้วเลือก **โมติคอน**
- 2 เลือก ตัวเลือก เพื่อ **เพิ่มใหม่**, **แก้ไข**, **ลบ** หรือ **ลบทั้งหมด** สำหรับโมติคอน

### การเปลี่ยนการตั้งค่าข้อความตัวอักษร

การตั้งค่าข้อความของโทรศัพท์ KF750 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า โปรดทำตามขั้นตอนต่อไปนี้

เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความตัวอักษร** คุณสามารถเปลี่ยนแปลง:

**ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลือกเพื่อรับการยืนยันว่าข้อความได้ส่งออกไปแล้ว

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ชนิดข้อความ** - แปลงข้อความตัวอักษรเป็น **เสียง**, **แฟกซ์**, **X.400** หรือ **อีเมล**

**การเข้ารหัสตัวอักษร** - เลือกวิธีเข้ารหัสตัวอักษรในข้อความของคุณ ซึ่งจะส่งผลต่อขนาดของข้อความ จึงอาจมีค่าใช้จ่ายตามข้อมูลด้วย

**การส่งข้อความยาว** - เลือกเพื่อส่งเป็นหลาย **SMS** หรือเป็น **MMS**

### การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ KF750 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า โปรดทำตามขั้นตอนต่อไปนี้

เลือก **ข้อความ** แล้วเลือก **ตั้งค่า** และ **ข้อความมัลติมีเดีย** คุณสามารถเปลี่ยนแปลง:

**โหมดการเรียกข้อมูล** - เลือกเครือข่าย **โสม** หรือ **โรมมิ่ง** หากคุณเลือก **กำหนดเอง** คุณจะได้รับเฉพาะข้อความแจ้ง **MMS** และคุณสามารถตัดสินใจว่าจะดาวน์โหลดแบบเต็มหรือไม่

**รายงานผลการส่ง** - เลือกเพื่อให้ส่งและ/หรือต้องการรายงานผลการส่ง

## อ่านข้อความตอบรับ

- เลือกเพื่อใหม่และ/  
หรือส่งการตอบกลับการอ่าน

## ระดับความสำคัญ -

เลือกระดับความสำคัญของ MMS

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่จัด  
เก็บข้อความไว้ในศูนย์ข้อความ

**ระยะเวลาสไลด์** - เลือกระยะเวลาที่จะ  
ให้สไลด์ปรากฏบนหน้าจอ

**โหมดการสร้าง** - เลือกโหมดข้อความ

**เวลาส่ง** - ส่งข้อความในเวลาที่เหมาะสม

**ศูนย์ข้อความนัดดื่มเดียว** - ป้อนรายละเอียด  
ของศูนย์ข้อความ

## การเปลี่ยนการตั้งค่าอื่นๆ

เลือก **ข้อความ** และ **ตั้งค่า**  
จากนั้นเลือก:

**บริการข้อมูล** - เลือกสถานะการรับ,  
ภาษา และการตั้งค่าอื่นๆ

**ข้อความบริการ** - เลือกเพื่อรับหรือ  
บล็อกข้อความบริการ คุณยังสามารถกำ  
หนดความปลอดภัยของข้อความได้โดย  
การสร้างรายการผู้ส่งที่เชื่อถือได้และ  
เชื่อถือไม่ได้

01

02

03

04

05

06

07

08


## กล้องถ่ายรูป

### การถ่ายภาพด้วย

- 1 กดปุ่มที่ด้านขวามือของเครื่องโทรศัพท์ และช่องมองภาพของกล้องถ่ายรูปจะปรากฏขึ้นบนหน้าจอ
- 2 ให้ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางสิ่งที่ต้องการถ่าย
- 3 กดปุ่มถ่ายภาพลงเล็กน้อย ช่องโฟกัสจะปรากฏขึ้นที่กึ่งกลางของหน้าจอ ช่องมองภาพ
- 4 จัดตำแหน่งโทรศัพท์เพื่อให้คุณสามารถมองเห็นสิ่งที่ถ่ายในช่องโฟกัส
- 5 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 6 กดปุ่มถ่ายภาพลงจนสุด

### หลังจากที่ถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ ชื่อของภาพจะวิ่งไปตามด้านล่างของหน้าจอ พร้อมกับมีไอคอน 5 ไอคอนเรียงอยู่ทางด้านขวามือ

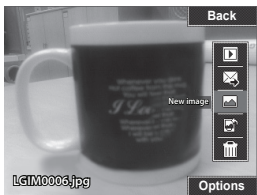

**Back** ย้อนกลับไปเมนูก่อนหน้า

- ดูภาพที่คุณถ่ายใน อัลบั้ม
- ส่งภาพถ่ายเป็น MMS, อีเมล หรือผ่านบลูทูธ โปรดดูที่หน้า 33 สำหรับการส่งข้อความ, หน้า 84 สำหรับการส่งและการรับไฟล์โดยใช้บลูทูธ
- และเพื่อถ่ายภาพอื่นๆ ทันที โดยที่ภาพปัจจุบันของคุณจะได้รับการบันทึกไว้
- ใช้ภาพเป็นพื้นหลัง ใช้เป็นภาพพรายชื่อ หรือใช้ในหน้าจอเปิดหรือปิดเครื่อง
- ลบภาพที่เพิ่งถ่ายไว้ และยืนยันด้วยการแตะที่ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

**เคล็ดลับ!** ในโหมดกล้องถ่ายรูป ให้เลือกไอคอน เลน เพื่อเปิดอัลบั้มภาพถ่าย โปรดดูรายละเอียดเพิ่มเติมที่ **การดูภาพถ่ายที่บันทึกไว้** ในหน้า 46



## กล้องถ่ายรูป

**เฟรมซีอิท** - เลือกจากหนึ่งในเฟรมภาพสนุกๆ ที่จะแปลงโฉมเพื่อนของคุณให้เป็นโจรสลัด หรือแค่ตกแต่งภาพบริเวณโดยรอบก็ได้

**พานอรามา** - ประเภทการถ่ายภาพนี้เหมาะสำหรับการถ่ายภาพกลุ่มคนขนาดใหญ่หรือถ่ายภาพวิวแบบพานอรามา โปรดดูรายละเอียดเพิ่มเติมที่การถ่ายภาพพานอรามา ในหน้า 43

### การใช้โหมดถ่ายภาพต่อเนื่อง

โหมดถ่ายภาพต่อเนื่องเหมาะสำหรับการถ่ายภาพเคลื่อนไหวหรือภาพกีฬา

- 1** เลือก **ถ่ายภาพต่อเนื่อง**
- 2** จัดให้วัตถุอยู่ในช่องมองภาพ แล้วกดปุ่มถ่ายภาพเหมือนกับการถ่ายภาพปกติ
- 3** กล้องจะถ่ายภาพต่อเนื่อง 9 ซี๊ด และแสดงภาพแรกพร้อมด้วยภาพขนาดย่อ 8 ภาพที่ด้านซ้ายมือของหน้าจอ
- 4** เลือกซี๊ดที่ต้องการโดยเลือกที่ภาพขนาดย่อ: เลือกหนึ่งครั้งเพื่อดู และเลือก **บันทึก** เพื่อบันทึก
- 5** เครื่องหมายจะปรากฏขึ้นข้างรูปภาพขนาดย่อ เลือก **บันทึก** เพื่อออก

### การใช้โหมดเฟรมซีอิท

เฟรมซีอิทใช้แปลงโฉมเพื่อนของคุณให้เป็นโจรสลัด หรือแค่ตกแต่งขอบภาพด้วยกรอบก็ได้

- 1** เลือกเมนู **เฟรมซีอิท**
- 2** เล็งให้วัตถุอยู่ในเฟรมภาพสนุกๆ แล้วกดปุ่มถ่ายภาพ
- 3** บันทึกภาพโดยเลือก **บันทึก**

### การถ่ายภาพพานอรามา

ถ่ายภาพวิถีชีวิตในแบบที่เป็นด้วยภาพพานอรามา กล้องจะถ่ายภาพ 3 ภาพในแนวเดียวกัน และรวมกันเข้าเป็นภาพเดียวเพื่อให้ได้ภาพมุมกว้างจนเป็นภาพพานอรามา

- 1** เลือก **พานอรามา**
- 2** ถ่ายภาพแรกตามปกติ เสาทางด้านขวามือของภาพจะปรากฏในช่องมองภาพ
- 3** เมื่อถ่ายภาพที่สองและสามแล้วเรียงภาพเงาของภาพก่อนหน้าเข้ากับภาพถัดไปในช่องมองภาพ
- 4** ในอัลบั้มภาพถ่าย รูปภาพจะถูกบันทึกไว้เป็นภาพสามภาพแยกกัน และเป็นภาพพานอรามาหนึ่งภาพ

**หมายเหตุ:** เนื่องจากขนาดของภาพภาพพานอรามาที่แสดงมุมมองอัลบั้มจะมีลักษณะค่อนข้างผิดสัดส่วน



## กล้องถ่ายรูป

จากช่องมองภาพ ให้เลือก **ตั้งค่า** แล้วเปิดตัวเลือก **ดูตัวอย่าง** ของการตั้งค่าขั้นสูงทั้งหมด

**ความจำที่ใช้** - เลือกว่าจะบันทึกภาพถ่ายที่หน่วยความจำ **ตัวเครื่อง** หรือที่หน่วยความจำ **ภายนอก**

**ซ่อนไอคอน** - ตั้งค่าว่าจะซ่อนไอคอนไว้ที่ด้านข้างของช่องมองภาพโดยอัตโนมัติหรือไม่

**อัตโนมัติ** - เลือกวิธีการโฟกัส

**เสียง** - เลือกเสียงชัตเตอร์เสียงใดเสียงหนึ่งจากสามเสียง

**หมายเหตุ:** เลือก **บันทึก** ทุกครั้งหลังการเลือกการตั้งค่าใหม่เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก

**เคล็ดลับ!** เมื่อคุณออกจากกล้องถ่ายรูป การตั้งค่าทั้งหมดของคุณจะกลับสู่ค่าเริ่มต้น ยกเว้นขนาดภาพและคุณภาพของภาพ สำหรับการตั้งค่าที่ไม่ใช่ค่าเริ่มต้น การตั้งค่าของคุณจะถูกรีเซ็ต ตัวอย่างเช่น โทนสีและ ISO ตรวจสอบค่าเหล่านี้ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

**เคล็ดลับ!** เมื่อบริการตั้งค่าซ้อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นการเปลี่ยนแปลงภาพในการดูตัวอย่างด้านหลังเมื่อบริการตั้งค่าอย่าลืมเลือก **บันทึก** ก่อนที่จะออกจากทำงานเพื่อใช้การเปลี่ยนแปลง

### การเปลี่ยนขนาดภาพ

จำนวนพิกเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บรูปภาพในโทรศัพท์หรือการหน่วยความจำให้มากขึ้น คุณสามารถแก้ไขจำนวนพิกเซลเพื่อทำให้ไฟล์มีขนาดเล็กลงได้

- 1 จากช่องมองภาพ ให้เลือก **ตั้งค่า** ในมุมซ้ายด้านล่าง
- 2 เลือก **ขนาด**
- 3 เลือกค่าพิกเซลจากตัวเลือกหกตัวเลือก (**5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) หรือเลือกค่าที่ตั้งไว้ล่วงหน้า:

รายชื่อ - ตัวเลือกนี้จะเป็นการกำหนดให้กล้องถ่ายภาพในขนาดที่เหมาะสมกับการใส่เข้าไปในรายชื่อในโทรศัพท์

- เลือกตัวเลือกขนาดที่คุณต้องการใช้ และแตะที่ **เลือก** เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก เมนูการตั้งค่าจะปิดโดยอัตโนมัติ และเตรียมพร้อมให้คุณถ่ายภาพ

### การเลือกโทนสี

- จากช่องมองภาพ ให้เลือก **ตั้งค่า** ในมุมซ้ายด้านล่าง
- เลือก **เอฟเฟกต์**
- โทนสีมีตัวเลือกทั้งหมด 12 ตัวเลือกดังนี้: **ไม่มี, ขาวดำ, เนกาทีฟ, ซีเปียสีฟ้า, ฟิมพ์นูน, สเก็ตซ์, สีม่วง, สีน้ำเงิน, ขาวดำ, แบบ Edgemap หรือ แบบ Posterize**
- เลือกโทนสีที่คุณต้องการใช้ แล้วเลือก **เลือก**
- เมื่อคุณเลือกโทนสีแล้ว เมนูจะปิดลงโดยอัตโนมัติ และกล้องก็พร้อมสำหรับการถ่ายภาพแล้ว

**เคล็ดลับ!** คุณสามารถเปลี่ยนภาพที่ถ่ายไว้สีเป็นขาวดำหรือซีเปียได้ แต่คุณจะเปลี่ยนภาพที่ถ่ายไว้เป็นขาวดำหรือซีเปียกลับเป็นภาพสีไม่ได้

### การดูภาพถ่ายที่บันทึกไว้

- คุณสามารถเข้าใช้ภาพถ่ายที่บันทึกไว้จากในโหมดกล้องถ่ายรูปและจากอัลบั้มที่ด้านบนสุดของเมนูไอคอน
- อัลบั้มของคุณจะปรากฏบนหน้าจอ
- เลือกภาพถ่ายที่คุณต้องการดู เพื่อแสดงภาพถ่ายดังกล่าวที่ด้านหน้าสุดของอัลบั้ม
- เลือกภาพถ่ายอีกครั้งเพื่อเปิดทั้งไฟล์

01

02

03

04

05

06

07

08

## กล้องถ่ายรูป

### การตั้งค่าภาพถ่ายเป็นหน้าจอลหลักหรือภาพรายชื่อ

จากอัลบั้มภาพของคุณ ให้เลือกภาพและ  
**ใช้เป็น** เพื่อใช้ภาพเป็นหน้าจอลหลัก  
หรือภาพรายชื่อ

**หมายเหตุ:** สามารถเพิ่มภาพรายชื่อ  
ลงในรายชื่อที่บันทึกอยู่ในเครื่องเท่านั้น  
ไม่ใช่ในซิม

**เคล็ดลับ!** คุณสามารถเข้าสู่ภาพถ่าย  
โดยใช้หน้าจอลสัมผัส กดปุ่มเลือกซ้ำ  
ที่ด้านขวาของโทรศัพท์แล้วแตะไอ  
คอน **รูปภาพ** จากนั้นคุณสามารถ  
เลื่อนดูภาพโดยการสัมผัสที่หน้าจอล



## กล้องวิดีโอ

### การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้เลือก **ตั้งค่า** แล้วเปิดตัวเลือก อื่นๆ ของการตั้งค่าขั้นสูง

**ขนาด** - เปลี่ยนขนาดของวิดีโอเพื่อบันทึกลงในพื้นที่หน่วยความจำ โปรดดู **การเปลี่ยนขนาดของภาพวิดีโอ** ทางด้านล่าง

**โหมดถ่ายภาพ** - ตั้งค่าภาพเพื่อให้เหมาะกับสภาพแวดล้อม เลือกจาก **อัตโนมัติ, รูปคน, ทิวทัศน์, กลางคืน, ชายหาด, กีฬา และ ปาร์ตี้**

**เอฟเฟกต์** - เลือกเสียงเอฟเฟกต์เพื่อใช้กับภาพที่คุณถ่าย โปรดดู **การเลือกเสียงเอฟเฟกต์** ที่หน้า 49

**ความสมดุลแสง** - สมดุลแสงจะช่วยให้คุณมั่นใจได้ว่าแสงสว่างที่ปรากฏในภาพจะสวยสมจริง เพื่อให้กล้องของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อน เลือกจาก **อัตโนมัติ, หลอดไฟ, แดดจ้า, ฟลูออเรสเซนต์** หรือ **มิดครีမ်**

**บันทึกพิเศษ** - บันทึกภาพเคลื่อนไหวด้วยการตั้งค่าหลายประเภท

**คุณภาพ** - เปลี่ยนขนาดของภาพเพื่อบันทึกในพื้นที่หน่วยความจำ หรือถ่าย ภาพแบบที่กำหนดขนาดไว้ถูกต้องสำหรับรายชื่อ โปรดดูที่ **การเปลี่ยนขนาดภาพ** ในหน้า 45

LG KF750 | คู่มือการใช้

**ระยะเวลา** - เลือกเสียงซัดเตอร์เสียงใดเสียงหนึ่งจากสามเสียง

จากช่องมองภาพ ให้เลือก **ตั้งค่า** แล้วเปิดตัวเลือก **ดูตัวอย่าง** ของการตั้งค่าขั้นสูง

**หน่วยความจำที่ใช้** - เลือกว่าจะบันทึกวิดีโอไว้ที่ หน่วยความจำ **ตัวเครื่อง** หรือ **หน่วยความจำ ภายนอก**

**ช้อนไอคอน** - ตั้งค่าให้กล้องถ่ายรูปช้อนไอคอนไว้ที่ด้านข้างของช่องมองภาพโดยอัตโนมัติ

**เสียง** - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง

**หมายเหตุ:** และ บันทึก ทุกครั้งหลังการเลือกการตั้งค่าใหม่เพื่อใช้การเปลี่ยนแปลงที่คุณเลือก

**เคล็ดลับ!** เมื่อคุณออกจากกล้องวิดีโอ การตั้งค่าทั้งหมดของคุณจะกลับสู่ค่าเริ่มต้น ยกเว้นขนาดภาพและคุณภาพของภาพ สำหรับการตั้งค่าที่ไม่ใช่ค่าเริ่มต้น การตั้งค่าของคุณจะถูกรีเซ็ต ตัวอย่างเช่น โทนสีและความสมดุลแสง ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายวิดีโอครั้งถัดไป

## การเปลี่ยนขนาดของภาพวิดีโอ

จำนวนฟรیمเซลยิ่งมากขึ้นเท่าใด ขนาดไฟล์ก็จะใหญ่มากขึ้นเท่านั้น ซึ่งอีกนัยหนึ่งก็คือ การใช้เนื้อที่หน่วยความจำมากขึ้น หากคุณต้องการเก็บวิดีโอลงในโทรศัพท์ของคุณให้มากขึ้น คุณสามารถแก้ไขจำนวนฟรیمเซลเพื่อให้ไฟล์มีขนาดเล็กลงได้

- 1 เลือก **ขนาด** จากเมนูตั้งค่า
- 2 เลือกค่าฟรیمเซลจาก 4 ตัวเลือกดังนี้:  
**640x480(W)** - ตัวเลือกหน้าจอกว้างที่มีคุณภาพสูงที่สุด  
**320x240** - ขนาดภาพเล็กลง ขนาดไฟล์จึงเล็กลงด้วย เหมาะสำหรับการประหยัดพื้นที่หน่วยความจำ  
**176x144** - ขนาดภาพเล็กที่สุด ขนาดไฟล์จึงเล็กลงด้วย  
**WIDE 16:9** - ตัวเลือกหน้าจอกว้าง
- 3 เลือกตัวเลือกขนาดที่คุณต้องการใช้ และแตะที่ **บันทึก** เพื่อการเปลี่ยนแปลงที่คุณเลือก เมนูการตั้งค่าจะปิดโดยอัตโนมัติ และเตรียมพร้อมให้คุณถ่ายภาพวิดีโอ

**หมายเหตุ:** เมื่อคุณดูวิดีโอของคุณ ความเร็วในการเล่นจะอยู่ที่ 30 เฟรมต่อวินาที ยกเว้นการถ่ายภาพที่

120 fps ซึ่งความเร็วในการเล่นจะอยู่ที่ 15 เฟรมต่อวินาที

 **คำเตือน:** ซอฟต์แวร์ตัดต่อที่ยอดเยี่ยมบน LG KF750 สามารถทำงานร่วมกับวิดีโอทุกประเภท ยกเว้น 640x480 ห้ามบันทึกด้วยรูปแบบนี้ หากคุณต้องการตัดต่อวิดีโอของคุณ

## การเลือกเสียงเอฟเฟกต์

- 1 เลือก **ตั้งค่า** แล้วเลือก **เอฟเฟกต์**
- 2 โทสนิมิตัวเลือกทั้งหมด 12 ตัวเลือกดังนี้: **ปิด**, **ขาวดำ**, **เนกาทีฟ**, **ซีเปียสีฟ้า**, **พินพ็อน**, **สเก็ตซ์**, **สีม่วง**, **สีน้ำเงิน**, **ขาวดำ**, **แบบ Edgemap** หรือ **แบบ Posterize**
- 3 เลือกโทสนิมิตที่คุณต้องการใช้ แล้วแตะ **เลือก**
- 4 เมื่อคุณเลือกโทสนิมิตแล้ว เมนูจะปิดลงโดยอัตโนมัติ และเตรียมพร้อมให้คุณถ่ายภาพวิดีโอ

**เคล็ดลับ!** คุณสามารถเปลี่ยนภาพวิดีโอจากสีเป็นขาวดำหรือซีเปียได้ หลังจากบันทึกภาพ แต่คุณจะไม่เปลี่ยนภาพวิดีโอขาวดำหรือซีเปียเป็นภาพสีไม่ได้

01

02

03

04

05

06

07

08

# กล่องวิดีโอ

## การดูวิดีโอที่บันทึกไว้

- 1** เลือกไอคอนอัลบั้ม อัลบั้มของคุณจะปรากฏบนหน้าจอ
- 2** เลือกวิดีโอที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอที่ด้านหน้าสุดของอัลบั้ม
- 3** เลือกวิดีโออีกครั้งเพื่อเปิดทั้งไฟล์

# ภาพถ่ายและวิดีโอ

## เมนูตัวเลือกการแก้ไขอัลบั้มภาพถ่าย

คุณสามารถดูและแก้ไขภาพของคุณได้โดยใช้เมนู ตัวเลือก ในอัลบั้มภาพถ่าย

**ดู** - ดูภาพ

**ส่ง** - ส่งภาพให้เพื่อน

**ลบ** - ลบภาพ

**ใช้เป็น** - ตั้งค่าใช้ภาพเป็นภาพหน้าจอลหลัก/ภาพรายชื่อ/ภาพเปิดหรือปิดเครื่อง

**แก้ไขชื่อ** - แก้ไขชื่อภาพ

**แก้ไข** - แก้ไขภาพ

**พิมพ์** - พิมพ์ไฟล์ภาพผ่าน PictBridge หรือบลูทูธ

**การแสดงวันที่** - ตั้งค่าตัวเลือกการ  
แสดงวันที่

## เมนูตัวเลือกการแก้ไขอัลบั้มวิดีโอ

คุณสามารถดูและแก้ไขวิดีโอของคุณได้โดยใช้เมนู ตัวเลือก ในอัลบั้มวิดีโอ

**เล่น** - เล่นวิดีโอ

**ส่ง** - ส่งวิดีโอให้เพื่อน

**ลบ** - ลบวิดีโอ


**ใช้เป็น** - ตั้งค่าใช้วิดีโอเป็นเสียงเรียกเข้า

**แก้ไขชื่อ** - แก้ไขชื่อวิดีโอ

**แก้ไข** - แก้ไขวิดีโอ

**การแสดงวันที่** - ตั้งค่าตัวเลือกการ  
แสดงวันที่

## การดูภาพถ่ายและวิดีโอ

- 1 หลังจากถ่ายภาพหรือวิดีโอ ให้เลือก **อัลบั้ม**
- 2 อัลบั้มของคุณจะปรากฏบนหน้าจอ
- 3 เลือกวิดีโอหรือภาพถ่ายที่คุณต้องการดูหนึ่งครั้ง เพื่อแสดงวิดีโอหรือภาพถ่ายที่ด้านหน้าสุดของอัลบั้ม
- 4 เลือกวิดีโอหรือภาพถ่ายอีกครั้งเพื่อเปิดทั้งไฟล์
- 5 วิดีโอจะเริ่มเล่นโดยอัตโนมัติ หากต้องการหยุดเล่นชั่วคราว ให้เลือก 

**เคล็ดลับ!** คุณสามารถลบภาพถ่ายหรือภาพวิดีโอได้ เลือกภาพถ่ายหรือภาพวิดีโอ แล้วเลือก **ตัวเลือก** และเลือก **ลบ** เลือก **ใช่** เพื่อยืนยัน

## การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอ หน้าจอไม่ทำงานในโหมดวิดีโอโปรดตรวจสอบ หรือ ใช้ปุ่มเลื่อนขึ้นและเลื่อนลงบนปุ่มสัมผัส

01

02

03

04

05


06


07

08


## ภาพถ่ายและวิดีโอ

### การบันทึกภาพจากวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการบันทึกภาพมา
- 2 กดปุ่ม  เพื่อหยุดภาพวิดีโอบนเฟรมที่คุณต้องการแปลงเป็นรูปภาพไว้ชั่วคราว แล้วแตะที่ด้านขวาของหน้าจอเพื่อเปิดเมนูตัวเลือก
- 3 จากเมนูตัวเลือก เลือก ถ่ายภาพ
- 4 รูปภาพจะปรากฏบนหน้าจอพร้อมกับชื่อภาพที่กำหนดให้
- 5 เลือก ตกลง
- 6 เลือก กลับ เพื่อกลับไปอัลบั้ม
- 7 เครื่องจะจัดเก็บรูปภาพไว้ในโฟลเดอร์ โฟล์ของคุณ และจะอยู่ในอัลบั้ม คุณจำเป็นต้องออกจากอัลบั้ม และเปิดอีกครั้งเพื่อให้ภาพปรากฏ

 **คำเตือน:** บางฟังก์ชันอาจทำงานไม่ถูกต้อง หากไม่ได้บันทึกไฟล์มัลติมีเดียไว้ในโทรศัพท์

### การส่งภาพถ่ายหรือวิดีโอจากอัลบั้ม

- 1 เลือกภาพถ่ายหรือวิดีโอสองครั้งเพื่อเปิด หากคุณเลือกวิดีโอ ให้กด  เมื่อเริ่มเล่น

**เคล็ดลับ!** คุณสามารถเปลี่ยนชื่อภาพถ่ายหรือภาพวิดีโอได้ เลือกภาพถ่ายหรือภาพวิดีโอ แล้วเลือกตัวเลือก และเลือก ไฟล์- แก้อชื่อ ป้อนชื่อใหม่สำหรับภาพถ่ายหรือวิดีโอ

- 2 เลือกปุ่มเลือกซ้ายเพื่อเปิดเมนูตัวเลือก
- 3 เลือก ส่ง และเลือกวิธีที่คุณต้องการส่งวิดีโอหรือภาพถ่ายของคุณ ดังนี้: ข้อความ, อีเมล หรือ บลูทูธ
- 4 แอปพลิเคชันข้อความที่เลือกจะเปิดขึ้น เพื่อให้คุณสามารถส่งวิดีโอหรือภาพถ่ายได้

**หมายเหตุ:** อาจจำเป็นต้องลดขนาดภาพถ่ายหรือวิดีโอ ก่อนที่จะสามารถส่งทาง MMS ได้ วิดีโอบางไฟล์อาจมีขนาดใหญ่เกินกว่าที่จะส่งทาง MMS ในกรณีดังกล่าว ให้เลือกตัวเลือกใดตัวเลือกหนึ่งต่อไปนี้

## การถ่ายภาพแบบภาพสไลด์

โหมดภาพสไลด์จะแสดงภาพถ่ายทั้งหมดในอัลบั้มของคุณพร้อมกันเป็นภาพสไลด์ ไม่สามารถดูวิดีโอเป็นแบบภาพสไลด์ได้

- 1 เลือกภาพถ่ายที่คุณต้องการเริ่มเล่นภาพสไลด์ และแตะสองครั้งเพื่อเปิด
- 2 เลือกปุ่มเลือกซ้ายเพื่อเปิดเมนูตัวเลือก
- 3 เลือก ภาพสไลด์ จากนั้นภาพสไลด์จะเริ่มเล่น

## การตั้งค่าภาพถ่ายเป็นหน้าจอหลัก

- 1 เลือกภาพถ่ายที่คุณต้องการตั้งค่าเป็นภาพพื้นหลัง 2 ครั้งเพื่อเปิด
- 2 เลือกปุ่มเลือกซ้ายเพื่อเปิดเมนูตัวเลือก
- 3 เลือก ใช้เป็น - หน้าจอหลัก

## การแก้ไขภาพถ่าย

มีคุณสมบัติยอดเยี่ยมมากมายที่คุณสามารถใช้ในการเปลี่ยนแปลงภาพถ่าย เพิ่มภาพถ่าย หรือทำให้มีชีวิตชีวขึ้นเล็กน้อย

- 1 เปิดภาพถ่ายที่คุณต้องการแก้ไขและเลือก ตัวเลือก
- 2 เลือก แก้ไข
- 3 เลือกไอคอนเพื่อปรับภาพถ่ายของคุณ:

 หมุนภาพไปทางซ้ายหรือขวา

 เปลี่ยนขนาดของรูปภาพ


 แทรกไอคอนลงในรูปภาพ


 ตัดภาพให้มีขนาด 640X480, 320X240, 176X146

 บิดภาพ

 เปลี่ยนโทนสีเป็น ขาวดำ, ซีเปีย หรือ เนกาทีฟสี

 เปลี่ยนหรือใส่เฟรมให้กับรูปภาพ

 กลับรูปภาพให้เป็นภาพที่สะท้อนจากกระจก

 เปลี่ยนแปลงรูปภาพโดยใช้รูปร่าง, กระจกวิเศษ หรือ สปีดไลท์

01

02

03

04

05

06

07

08

## ภาพถ่ายและวิดีโอ

### การเพิ่มเอฟเฟกต์ลงในภาพถ่าย

- 1 จากหน้าจอแก้ไข ให้เลือก **สเปเชียลเอฟเฟกต์** หรือ **เฟรมเอฟเฟกต์**
- 2 เลือกเพื่อใช้ตัวเลือกใดตัวเลือกหนึ่งจาก 2 ตัวเลือกกับภาพถ่าย:  
**สเปเชียลเอฟเฟกต์** - เปลี่ยนสีของภาพเป็น **ขาวดำ**, **ซีเปีย** หรือ **เนกาทีฟสี**  
**เฟรมเอฟเฟกต์** - ใส่เฟรมให้กับภาพถ่าย เลือกประเภทเฟรมที่ต้องการ เลือก **ตกลง** เพื่อให้เฟรมที่เลือกซ้อนทับอยู่บนภาพถ่าย
- 3 ในการเลิกทำเอฟเฟกต์เพียงแคเลือก **เลิกทำ**

**เคล็ดลับ!** คุณสามารถใช้เอฟเฟกต์มากกว่าหนึ่งเอฟเฟกต์ในภาพถ่ายได้ ยกเว้นเอฟเฟกต์สี

### การแปลงภาพถ่าย

การแปลงภาพถ่ายเหมาะสำหรับการเปลี่ยนสีหน้าของเพื่อนคุณ หรือเพียงแค่ใช้เอฟเฟกต์งานศิลปะเพื่อตัดแปลงภาพถ่ายก็ได้

- 1 จากหน้าจอแก้ไข ให้เลือก **อื่นๆ** แล้วเลือก **รูปร่าง**

- 2 หากไม่พบหน้าในรูปภาพ จะปรากฏข้อความบ๊อปปี้ ไม่พบหน้า และเอฟเฟกต์รูปร่างจะถูกยกเลิก
- 3 หากพบหน้า สไลด์แรกของรูปร่างจะถูกนำไปใช้กับรูปภาพ
- 4 เลือกสไลด์ของรูปร่างที่คุณต้องการใช้กับภาพถ่าย
- 5 เลือกความหนักเบาของรูปร่าง
- 6 เลือก **ตกลง** เพื่อใช้ค่าการเปลี่ยนแปลง

### การใส่สปีดไลท์ในภาพถ่าย

- 1 เลือกตำแหน่งที่ต้องการในรูปภาพ
- 2 เลือกขนาดของสปีดไลท์
- 3 เลือก **ตกลง** เพื่อใช้ค่าการเปลี่ยนแปลง

**เคล็ดลับ!** ใช้กระจกวิเศษเพื่อตัดลอกด้านซ้ายของภาพไปทับด้านขวาเพื่อแต่งภาพให้ดลกขบขัน

**เคล็ดลับ!** คุณสามารถเลิกทำเอฟเฟกต์มากกว่าหนึ่งเอฟเฟกต์ในภาพภายใต้ ยกเว้นการยอขยาย หากมีการใช้เอฟเฟกต์อื่นก่อนใช้เอฟเฟกต์การยอขยาย เครื่องจะใช้เอฟเฟกต์ปัจจุบันและจะบันทึกเอฟเฟกต์การยอขยาย จำนวนการเลิกทำจะถูกรีเซ็ต

### การแก้ไขวิดีโอ

คุณสมบัติแก้ไขภาพจะสามารถใช้ได้กับวิดีโอทุกประเภท ยกเว้น 640x480 ห้ามบันทึกด้วยรูปแบบนี้ หากคุณต้องการตัดต่อวิดีโอของคุณ

### การตัดความยาวของวิดีโอ


- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วแตะที่ ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Trim
- 3 เลือก เริ่ม และ วางสาย เพื่อทำเครื่องหมายที่จุดเริ่มและจุดสิ้นสุดใหม่

### การรวมวิดีโอสองเรื่องเข้าด้วยกัน

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Video merge

3 โพลเดอร์วิดีโอจะเปิดขึ้น เลือกวิดีโอที่คุณต้องการรวม แล้วเลือก เลือก

4 เลือก เอฟเฟกต์ เพื่อเลือกวิธีการรวมวิดีโอเข้าด้วยกัน: ปิด, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board หรือ Dissolve

5 กดปุ่ม  เพื่อบันทึกวิดีโอที่รวมกันใหม่นี้ เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

6 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมวิดีโอเรื่องอื่นๆ

### การรวมภาพถ่ายเข้ากับวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Image merge
- 3 โพลเดอร์ภาพจะเปิดขึ้น เลือกภาพถ่ายที่คุณต้องการรวมเข้ากับวิดีโอ แล้วเลือก เลือก
- 4 เลือกและเลื่อนภาพถ่ายเพื่อรวมเข้าที่ตอนท้ายหรือตอนเริ่มต้นของวิดีโอ

01

02

03

04

05

06

07

08

## ภาพถ่ายและวิดีโอ

- 5 เลือก เอฟเฟกต์ เพื่อเลือกวิธีการรวมภาพถ่ายและวิดีโอเข้าด้วยกัน: ปิด, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board หรือ Dissolve
- 6 กด  เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อรวมภาพถ่ายอื่นๆ

### การเพิ่มข้อความลงในวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Text overlay
- 3 ป้อนข้อความโดยใช้ปุ่มกด แล้วเลือก บันทึก
- 4 เลือก เริ่ม และเลือกกว่าเมื่อใดที่ต้องการให้ข้อความปรากฏขึ้น
- 5 เลือกบริเวณหน้าจอที่คุณต้องการให้ข้อความปรากฏขึ้น
- 6 เลือก ยกเลิก เพื่อเลือกกว่าเมื่อใดที่ต้องการให้ข้อความหายไป
- 7 เลือก บันทึก เพื่อบันทึก เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 8 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มข้อความอื่นๆ

### การซ่อนภาพถ่าย

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Image overlay
- 3 โฟลเดอร์ภาพจะเปิดขึ้น เลือกภาพถ่ายที่คุณต้องการซ่อนบนวิดีโอ แล้วเลือก เลือก
- 4 เลือก เริ่ม และเลือกกว่าเมื่อใดที่ต้องการให้ภาพปรากฏขึ้น
- 5 เลือกบริเวณหน้าจอที่คุณต้องการให้ภาพปรากฏขึ้น หากภาพถ่ายมีขนาดใหญ่มากเกินไป ภาพอาจซ่อนทับทั้งหมด ซึ่งอาจไม่ใช่เพียงบริเวณที่เลือกได้
- 6 เลือก ยกเลิก เพื่อเลือกกว่าเมื่อใดที่ต้องการให้ภาพหายไป
- 7 เลือก บันทึก เพื่อบันทึก เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 8 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มภาพถ่ายอื่นๆ

## การใส่รายการบันทึกเสียง

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Voice recording คุณภาพของเสียงต้นฉบับ อาจได้รับผลกระทบจากการใส่การบันทึกเสียงได้
- 3 เลือก ใช้ เพื่อดำเนินการต่อ
- 4 กดปุ่ม เล่น เพื่อดูวิดีโอ เมื่อถึงตอนที่ต้องการบันทึกเสียง ให้กด พัก
- 5 กด วางสาย เพื่อหยุดการบันทึก และเล่น
- 6 เลือก บันทึก แล้วตามด้วย ใช้ เพื่อบันทึก เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 7 ทำซ้ำขั้นตอนเหล่านี้เพื่อเพิ่มการบันทึกเสียงอื่นๆ ลงในวิดีโอ

## การใส่ซาวด์แทร็คลงในวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Audio dubbing
- 3 โพลเดอร์เสียงจะเปิดขึ้น เลือกแทร็คที่คุณต้องการเพิ่มในวิดีโอ แล้วแตะที่เลือก
- 4 การบันทึกเสียงต้นฉบับในวิดีโอจะถูกลบออก

- 5 หากเสียงสั้นกว่าวิดีโอ ให้เลือกว่าจะเล่น ที่เดียว หรือเล่น ซ้ำ
- 6 เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

## การเปลี่ยนความเร็วของวิดีโอ

- 1 เลือกวิดีโอที่คุณต้องการแก้ไข แล้วเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Time scaling
- 3 เลือกตัวเลือกความเร็วตัวเลือกใด ตัวเลือกหนึ่งจากสี่ตัวเลือกนี้: x4, x2, x1/4, x1/2
- 4 เลือกเพื่อบันทึกทับไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่

01

02

03

04

05


06

07

08

## ภาพถ่ายและวิดีโอ

### การใส่เอฟเฟกต์การเคลื่อนไหว

- 1 เปิดวิดีโอที่คุณต้องการแก้ไข แล้วเลือก  และเลือก ตัวเลือก
- 2 เลือก แก้ไข แล้วเลือก Dimming Effect
- 3 เลือกเพื่อบันทึกที่ไฟล์ต้นฉบับหรือบันทึกเป็นไฟล์ใหม่
- 4 วิดีโอของคุณจะมีการเฟดเข้าที่ตอนเริ่มต้นและเฟดออกที่ตอนจบ

## มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ในแฟ้มข้อมูลได้ ทำให้คุณเข้าใช้งานรูปภาพ เสียง วิดีโอ และเกมส์ทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

### ภาพ

**ภาพ** ประกอบด้วยรายการรูปภาพ รวมถึงภาพเริ่มต้นที่โหลดลงในโทรศัพท์ล่วงหน้า ภาพที่คุณดาวน์โหลด และภาพที่ถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์

### เมนูตัวเลือกของภาพ

ตัวเลือกที่มีอยู่ใน **ภาพ** จะขึ้นอยู่กับประเภทรูปภาพที่คุณเลือก ตัวเลือกทั้งหมดจะใช้ได้กับภาพที่คุณถ่ายด้วยกล้องถ่ายรูปของโทรศัพท์ ส่วนตัวเลือก **ใช้เป็น**, **พิมพ์**, **เรียงตามมุมมองกริด (รายการ)** และ **สถานะความจำ** จะมีสำหรับภาพเริ่มต้นเท่านั้น

**ส่ง** - ส่งภาพให้เพื่อน

**ใช้เป็น** - กำหนดภาพเพื่อแสดงที่เครื่องโทรศัพท์ในเวลาที่ต้องการ

**ย้าย** - ย้ายรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือย้ายจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**คัดลอก** - คัดลอกรูปภาพจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือคัดลอกจากการ์ดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์

**ลบ** - ลบภาพ

**เลือก/ไม่เลือก** - เลือกไฟล์หลายไฟล์

**พิมพ์** - พิมพ์ภาพผ่าน PicBridge หรือบลูทูธ®

**ไฟล์** - เปลี่ยนชื่อหรือดูข้อมูลของไฟล์

**สร้างโฟลเดอร์ใหม่** - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์ภาพ

**ภาพสไลด์** - เริ่มต้นภาพสไลด์

**เรียงตาม** - เรียงภาพตามลำดับที่ระบุไว้

**มุมมองกริด/ มุมมองรายการ** - ดูภาพแต่ละภาพในมุมมองกริดหรือรายการ

**สถานะความจำ** - ดูสถานะหน่วยความจำ

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การส่งภาพถ่าย

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือกภาพถ่ายที่คุณต้องการส่ง แล้วแตะที่ **ตัวเลือก**
- 3 เลือก **ส่ง** แล้วเลือกจาก **ข้อความ** **อีเมล** หรือ **บลูทูธ**
- 4 หากคุณเลือก **ข้อความ** หรือ **อีเมล** ภาพถ่ายจะแนบไปกับข้อความ และคุณสามารถเขียนและส่งข้อความได้ตามปกติ หากคุณเลือก **บลูทูธ** เครื่องจะแสดงข้อความให้คุณเปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งภาพไป

### การใช้รูปภาพ

คุณสามารถเลือกรูปภาพเพื่อใช้เป็นภาพพื้นหลังและภาพปกหน้าจอ หรือใช้เพื่อระบุผู้โทรเข้าได้

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือกภาพและแตะที่ **ตัวเลือก**
- 3 เลือก **ใช้เป็น** แล้วเลือกจาก:
  - พื้นหลัง** - กำหนดเป็นภาพพื้นหลังของหน้าจอสแตนด์บาย
  - สายโทรออก** - กำหนดให้ภาพปรากฏขึ้นระหว่างการโทรออก
  - ภาพรายชื่อ** - กำหนดภาพให้กับ

บุคคลใดบุคคลหนึ่งในรายชื่อ เพื่อให้ภาพนั้นปรากฏขึ้นเมื่อบุคคลนั้นโทรมา

**ภาพเริ่มต้น** - กำหนดให้ภาพปรากฏขึ้นเมื่อเปิดเครื่อง

**ภาพการปิดเครื่อง** - กำหนดให้ภาพปรากฏขึ้นเมื่อปิดเครื่อง

### การจัดการรูปภาพ

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือก **ตัวเลือก** จากนั้นเลือกเรียงตาม
- 3 เลือกจาก **วันที่**, **ประเภท** หรือ **ชื่อ**

### การลบรูปภาพ

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือกภาพถ่ายที่คุณต้องการลบ แล้วเลือก **ตัวเลือก**
- 3 เลือก **ลบ** แล้วเลือก **ใช่** เพื่อยืนยัน

**เคล็ดลับ!** ในการลบไฟล์ในไฟล์ของฉัน อย่างรวดเร็ว ให้เลือกไฟล์ที่ต้องการหนึ่งครั้ง เพื่อเลื่อนเคอร์เซอร์ไปที่ไฟล์ แล้วกดปุ่ม **C** ยืนยันโดยเลือก **ใช่**

## การย้ายหรือคัดลอกรูปภาพ

คุณสามารถย้ายหรือคัดลอกรูปภาพระหว่างหน่วยความจำของโทรศัพท์กับการ์ดหน่วยความจำได้ เพื่อเป็นการเพิ่มพื้นที่หน่วยความจำในหน่วยความจำได้หน่วยความจำหนึ่ง หรือเพื่อป้องกันภาพมิให้สูญหาย

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือกภาพและเลือก **ตัวเลือก**
- 3 เลือก **ย้าย** หรือ **คัดลอก**

## การแก้ไขภาพ

คุณสามารถแก้ไขภาพโดยใช้เมนู **ตัวเลือก**

- 1 เลือกเมนู **มีลดีมีเดีย**
- 2 เลือก **โปรแกรมแก้ไขไฟล์**
- 3 เลือก **Image Editor** แล้วเลือกจากตัวเลือกต่างๆ โปรดดูรายละเอียดที่หน้า 53

## การเลือกหรือยกเลิกการเลือกรูปภาพ

หากคุณต้องการย้าย คัดลอก ส่ง หรือลบภาพต่างๆ ในครั้งเดียว ก่อนอื่นคุณต้องระบุภาพที่ต้องการโดยการเลือกด้วยเครื่องหมาย

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือก **ตัวเลือก** แล้วเลือก **เลือก/ไม่เลือก**
- 3 จะมีช่องปรากฏขึ้นที่ด้านซ้ายของแต่ละภาพ หากคุณเลือกภาพ เครื่องหมายจะปรากฏขึ้นในช่องทำเครื่องหมาย
- 4 ในการยกเลิกการเลือกภาพ ให้เลือกที่ภาพอีกครั้ง เพื่อลบเครื่องหมายออกจากช่อง
- 5 เมื่อคุณทำเครื่องหมายที่ภาพต่างๆ ตามต้องการแล้ว ให้เลือกตัวเลือก **ใดตัวเลือกหนึ่ง** เพื่อนำไปใช้กับภาพทั้งหมด

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การสร้างภาพสไลด์

หากคุณต้องการดูภาพทั้งหมดบนโทรศัพท์ หรือดูภาพที่มีอย่างรวดเร็ว คุณสามารถสร้างภาพสไลด์เพื่อประหยัดเวลาในการเปิดและปิดภาพแต่ละภาพ

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือก **ตัวเลือก** แล้วเลือก **ภาพสไลด์**

### การตรวจสอบสถานะหน่วยความจำ

คุณสามารถตรวจสอบจำนวนพื้นที่หน่วยความจำที่ใช้ไปและจำนวนที่เหลืออยู่ที่สามารถใช้ได้

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **ภาพส่วนตัว**
- 2 เลือก **ตัวเลือก** แล้วเลือก **สถานะความจำ**
- 3 เลือก **ความจำเครื่อง** หรือ **หน่วยความจำการ์ด**

**หมายเหตุ:** หากคุณไม่ได้ใส่การ์ดหน่วยความจำไว้ คุณจะเลือกหน่วยความจำการ์ด ไม่ได้

### เสียง

โพลเดอร์ **เสียง** ประกอบด้วย **เสียงเริ่มต้น** และ **การบันทึกเสียง** จากขั้นตอนนี้ คุณสามารถจัดการ ส่ง หรือกำหนดเสียงเป็นเสียงเรียกเข้าได้

### การใช้เสียง

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **เสียง**
- 2 เลือก **เสียงเริ่มต้น** หรือ **การบันทึกเสียง**
- 3 เลือกเสียง แล้วเลือก **เล่น** เพื่อฟังเสียง
- 4 เลือก **ตัวเลือก** แล้วเลือก **ใช้เป็น**
- 5 เลือกจาก **เสียงเรียกเข้าแบบเสียง, เสียงเรียกเข้าแบบวิดีโอ, เสียงข้อความ, เสียงเปิดเครื่อง, เสียงปิดเครื่อง**

### วิดีโอ

โพลเดอร์ **วิดีโอ** จะแสดงรายการวิดีโอที่ดาวน์โหลด และวิดีโอที่ได้บันทึกไว้ในโทรศัพท์

### การดูวิดีโอ

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **วิดีโอส่วนตัว**
- 2 เลือกวิดีโอ แล้วกดปุ่ม **เล่น**

**เคล็ดลับ!** ในการลบไฟล์ใน  
ไฟล์ของฉัน อย่างรวดเร็ว ให้เลือก  
ไฟล์ที่ต้องการหนึ่งครั้ง เพื่อเลื่อน  
เคอร์เซอร์ไปที่ไฟล์ แล้วกดปุ่ม **C**  
ยืนยันโดยเลือก **ใช่**

## การใช้ตัวเลือกขณะหยุดวิดีโอชั่วคราว

**เลือก ตัวเลือก** ในขณะที่อยู่ในโหมด  
หยุดชั่วคราว และเลือกจาก:

**มุมมองแนวนอน** -

ดูไฟล์วิดีโอแบบเต็มภาพ

**ปิด/ เปิดเสียง** - ปิด/เปิดเสียง

**ถ่ายภาพ** - ถ่ายเฟรมที่นิ่งอยู่เป็นรูปภาพ

**ซ้ำ** - เล่นไฟล์วิดีโอซ้ำ

**ข้อมูลไฟล์** - ดูรายละเอียดของชื่อ  
ขนาด วันที่ เวลา ประเภท ระยะเวลา  
ขนาด บั๊กกันไฟล์ และลิขสิทธิ์

**ส่ง** - ส่งวิดีโอในข้อความ, อีเมล  
หรือผ่านบลูทูธ

**ลบ** - ลบวิดีโอ

**ใช่เป็น** - ใช่เป็นเสียงเรียกเข้าแบบเสียง/  
วิดีโอ

## การส่งวิดีโอคลิบ

- 1 เลือกวิดีโอ แล้วเลือก **ตัวเลือก**
- 2 เลือก **ส่ง** แล้วเลือกจาก **ข้อความ**  
**อีเมล** หรือ **บลูทูธ**
- 3 หากคุณเลือก **ข้อความ** หรือ **อีเมล**  
วิดีโอคลิบจะแนบไปกับข้อความ  
และคุณสามารถเขียนและส่งขอ  
ความได้ตามปกติ หากคุณเลือก  
**บลูทูธ** เครื่องจะแสดงข้อความให้คุณ  
เปิดบลูทูธ และโทรศัพท์จะค้นหาอุปกรณ์ที่จะส่งวิดีโอไปให้

## การใช้วิดีโอคลิบ เป็นเสียงเรียกเข้า

- 1 เลือกวิดีโอ แล้วเลือก **ตัวเลือก**
- 2 เลือก **ใช่เป็น** และเลือกจาก  
**เสียงเรียกเข้าแบบเสียง** หรือ  
**เสียงเรียกเข้าแบบวิดีโอ**

## การใช้เมนูตัวเลือกของวิดีโอ

จากโฟลเดอร์ **วิดีโอ** คุณสามารถเลือก  
จากตัวเลือกต่อไปนี้ได้:

**ส่ง** - ส่งวิดีโอไปยังเพื่อน

**ใช่เป็น** - กำหนดให้วิดีโอเป็นเสียง  
เรียกเข้า

**ย้าย** - ย้ายวิดีโอคลิบจากหน่วยความ  
จำของโทรศัพท์ไปที่การ์ดหน่วยความจำ  
หรือย้ายจากการดหน่วยความจำไปที่หน่วย  
ความจำของโทรศัพท์

01

02

03

04

05

06

07

08

## มัลติมีเดีย

**คัดลอก** - คัดลอกวีดิโอคลิปจากหน่วยความจำของโทรศัพท์ไปที่การ์ดหน่วยความจำ หรือคัดลอกจากการดหน่วยความจำไปที่หน่วยความจำของโทรศัพท์  
**ลบ** - ลบวีดิโอ

**เลือก/ไม่เลือก** - เลือกไฟล์หลายไฟล์

**ไฟล์** - แก้ไขชื่อไฟล์และดูข้อมูล

**สร้างโฟลเดอร์ใหม่** - สร้างโฟลเดอร์ใหม่ภายในโฟลเดอร์วีดิโอ

**เรียงตาม** - เรียงวีดิโอตามลำดับที่ระบุไว้

**มุมมองกริด/ มุมมองรายการ** - ดูเมนูตัวเลือกในมุมมองกริดหรือรายการ  
**สถานะความจำ** - ดูสถานะหน่วยความจำ

### เกมส์และแอปพลิเคชัน

คุณสามารถดาวน์โหลดเกมส์และแอปพลิเคชันมาไว้ที่โทรศัพท์ได้ เพื่อให้คุณได้เพลิดเพลินในยามว่าง

### ผลิตเพลนกับเมนู M-Toy

คุณสามารถผลิตเพลนกับเกมส์ดีฟอลต์ที่มีอยู่ถึง 6 เกมส์ ซึ่งประกอบด้วย: **Dart, Homerun Derby, Magic Ball, Hammer, Maze, Fishing**

**เกี่ยวกับ** - ดูข้อมูลของเกมส์

**ตั้งค่า** - ตั้งค่าเสียงและระบบสันเมื่อเปิดเกมส์

**รีเซ็ตข้อมูล** - รีเซ็ตการตั้งค่าทั้งหมด  
**ออก** - สิ้นสุดเกมส์

### การดาวน์โหลดเกมส์หรือแอปพลิเคชัน

- 1** เลือกเมนู **เกมส์** ในการดาวน์โหลดเกมส์ และเมนู **แอปพลิเคชัน** ในการดาวน์โหลดแอปพลิเคชัน
- 2** เลือก **ดาวน์โหลดเกมส์ / แอปพลิเคชัน** แล้วกดปุ่ม **เชื่อมต่อ**
- 3** คุณจะเชื่อมต่อกับเว็บพอร์ทัลเพื่อค้นหาเกมส์ที่จะได้โหลด

**เคล็ดลับ!** ในการลบไฟล์ในไฟล์ของฉันทันทีอย่างรวดเร็ว ให้แตะที่ไฟล์ที่ต้องการหนึ่งครั้ง เพื่อเลื่อนเคอร์เซอร์ไปที่ไฟล์ แล้วกดปุ่ม **C** ยืนยันโดยกดปุ่ม **ใช่**

## การเล่นเกมส์

- 1 เลือกเมนู **เกมส์**
- 2 เลือกเกมส์ และแตะที่ **เริ่ม**

## การใช้เมนูตัวเลือกของเกมส์


จากโฟลเดอร์เกมส์และแอปพลิเคชัน จะมีตัวเลือกต่างๆ ต่อไปนี้:

**สร้างโฟลเดอร์ใหม่** – สร้างโฟลเดอร์ ภายในเมนูเกมส์และแอปพลิเคชัน

**เรียงตาม** - เรียงลำดับเกมส์และแอปพลิเคชันตาม **วันที่, ขนาด หรือ ชื่อ**

**สถานะความจำ** -

ดูสถานะหน่วยความจำ

**เคล็ดลับ!** คุณสามารถเข้าสู่เกมส์โดยใช้หน้าจอสัมผัส กดปุ่ม  ที่ด้านขวาของโทรศัพท์แล้วแตะไอคอน **เกมส์** คุณสามารถเข้าสู่เกมส์ได้โดยการสัมผัสหน้าจอ

## แฟลชคอนเทนท์

โฟลเดอร์แฟลชคอนเทนท์ ประกอบด้วยแฟลชคอนเทนท์ดีฟอลต์และที่ดาวน์โหลดทั้งหมด

## การดูไฟล์ SWF/SVG

- 1 เลือก **ไฟล์ของฉัน** แล้วเลือก **แฟลชคอนเทนท์**
- 2 เลือกไฟล์ แล้วกดปุ่ม **เล่น**

## การใช้ตัวเลือกในการดูไฟล์ SWF/SVG

เลือก **ตัวเลือก** ในขณะที่อยู่ในโหมดหยุดชั่วคราว และเลือกจาก:

**เล่น/หยุดชั่วคราว** - หยุดชั่วคราวหรือเล่นต่อ

**เต็มหน้าจอ/ มุมมองแนวนอน** - ดู SWF/SVG ในโหมดมุมมองเต็มหน้าจอหรือแนวนอน (มุมมองนี้จะแสดงขึ้นก็ต่อเมื่อคุณเลือก **ตัวเลือก** โดยไม่มีการหยุดชั่วคราว)

**ปิด/เปิดเสียง** - เปิด/ปิดเสียง

**ใช้เป็นภาพพื้นหลัง** - ตั้งค่าไฟล์ SWF/SVG เป็นภาพพื้นหลัง

**ข้อมูลไฟล์** - ดูชื่อ ขนาด วันที่ เวลา และประเภทของไฟล์

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### เอกสาร

จากเมนู เอกสาร คุณสามารถดูไฟล์ เอกสารทั้งหมดได้ จากชั้นตอนนี้ คุณจะสามารถดูไฟล์ Excel, PowerPoint, Word, ข้อความ และ PDF ได้

### การโอนไฟล์ไปที่โทรศัพท์

บลูทูธ คือวิธีการที่ง่ายที่สุดในการ โอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ คุณยังสามารถใช้ LG PC Suite ผ่านทางสายสำหรับซิงโครไนซ์ได้ โปรดดูรายละเอียดในหน้า 77

ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าได้เปิดบลูทูธ ที่โทรศัพท์และคอมพิวเตอร์ และทั้งคู่ต่างมองเห็นกันแล้ว
- 2 ใช้คอมพิวเตอร์เพื่อส่งไฟล์ทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยการเลือก **ตกลง**
- 4 ไฟล์จะปรากฏอยู่ในโฟลเดอร์ **เอกสาร** หรือ **อื่นๆ**

### การดูไฟล์

- 1 เลือก **แฟ้มข้อมูล** แล้วเลือก **เอกสาร**
- 2 เลือกเอกสาร แล้วเลือก **ดู**

### อื่นๆ


โฟลเดอร์ **อื่นๆ** ใช้สำหรับจัดเก็บไฟล์ประเภทอื่นๆ ที่ไม่ใช่รูปภาพ เสียง วิดีโอ เกมส์ หรือแอปพลิเคชัน ซึ่งมีวิธีใช้เดียวกับโฟลเดอร์ **เอกสาร** คุณจะพบว่าเมื่อคุณโอนไฟล์จากคอมพิวเตอร์ไปที่โทรศัพท์ ไฟล์เหล่านั้นจะปรากฏอยู่ในโฟลเดอร์ **อื่นๆ** มากกว่าจะปรากฏในโฟลเดอร์ **เอกสาร** หากเป็นเช่นนั้น คุณสามารถย้ายไฟล์เหล่านั้นได้

ในการย้ายไฟล์จากโฟลเดอร์ **อื่นๆ** ไปที่โฟลเดอร์ **เอกสาร**:

- 1 เลือก **ไฟล์ของฉัน** แล้วเลือก **อื่นๆ**
- 2 เลือกไฟล์ แล้วเลือก **ตัวเลือก**
- 3 เลือก **ย้าย**

## โปรแกรมสร้างภาพยนตร์

ด้วยโปรแกรมสร้างภาพยนตร์ คุณสามารถสร้างภาพสไลด์พร้อมเสียงเพลงได้

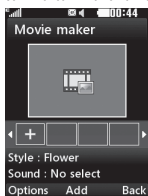

### การสร้างภาพยนตร์

- 1 ไปที่ ความบันเทิง แล้วเลือก **โปรแกรมสร้างภาพยนตร์**
- 2 เลือก **+** เพื่อใส่รูปภาพ เลือกรูปภาพที่คุณต้องการ แล้วเลือก **เสร็จ** ใน **ตัวเลือก**
- 3 เลือกเมนู **สไลด์** เพื่อเลือกรูปแบบภาพยนตร์
- 4 เลือก **เล่น** เพื่อดูภาพยนตร์ที่คุณสร้าง

## เพลง

LG KF750 มีเครื่องเล่นเพลงในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลง ให้เลือก **เพลง** จากเมนูหลักจากชั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอร์ต่างๆ ดังนี้:

**เล่นล่าสุด** - ดูเพลงที่เล่นล่าสุดทั้งหมด

**เพลงส่วนตัว** - ทุกเพลง:

**ทุกแทร็ค** - ประกอบด้วยเพลงทั้งหมดที่มีในโทรศัพท์

**ศิลปิน** - เบราว์เซอร์รายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - เบราว์เซอร์รายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบราว์เซอร์รายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - ฟังเพลงแบบสุ่ม

01

02

03

04

05

06

07

08




## มัลติมีเดีย

### การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธ หรือสายสำหรับซิงโครไนซ์ คุณยังสามารถใช้ LG PC Suite ได้ โปรดดูรายละเอียดในหน้า 77 ในการโอนไฟล์โดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และต่างมองเห็นกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์ แล้วเลือกเพื่อส่งทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์โดยแตะที่ **ตกลง**
- 4 ไฟล์จะปรากฏขึ้นใน **เพลง** → **ทุกแทร็ค**

### การเล่นเพลง

- 1 เลือก **เพลงส่วนตัว** แล้วเลือก **ทุกแทร็ค**
- 2 เลือกเพลงที่ต้องการเล่น และแตะที่ **เล่น**
- 3 กด  เพื่อหยุดเล่นเพลงชั่วคราว
- 4 แตะที่  (ขวา) เพื่อข้ามไปยังเพลงถัดไป
- 5 แตะที่  (ซ้าย) เพื่อข้ามไปยังเพลงก่อนหน้า

### การใช้ตัวเลือกขณะเล่นเพลง

เลือก **ตัวเลือก** แล้วเลือก:

**ย่อ** - ทำให้หน้าจอเครื่องเล่นเพลงหายไป เพื่อให้คุณสามารถใช้งานโทรศัพท์ต่อไปได้ตามปกติ

**ไปที่เพลงส่วนตัว** - ย้ายไฟล์ไปไว้ในโฟลเดอร์เพลงส่วนตัว

**ซ้ำ** - เล่นแทร็คที่เลือกซ้ำ

**สับเปลี่ยน** - ฟังเพลงแบบสุ่ม

**อีควอไลเซอร์** - ตั้งค่าเมนูอีควอไลเซอร์

**การแสดงผล** - เลือกิวิวลเอฟเฟกต์

**เพิ่มในรายการเพลง** -

เพิ่มไฟล์ลงในรายการเพลง

**ข้อมูลไฟล์** - ดูชื่อ ขนาด วันที่ เวลา ประเภท ระยะเวลา บั๊องกันไฟล์ และลิขสิทธิ์ของเพลง


**ส่ง** - ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ

**ลบ** - ลบเพลง

**ใช้เป็น** - ใช้เพลงเป็นหนึ่งในเสียงเรียกเข้า

## การสร้างรายการเพลง

คุณสามารถสร้างรายการเพลงของคุณเองได้โดยการเลือกเพลงจากโพลีเดอรัททุกแทร็ค

- 1 เลือก เพลงส่วนตัว แล้วเลือก รายการ
- 2 เลือก เพิ่ม ใส่ชื่อรายการเพลง และกดปุ่ม  บันทึก
- 3 โพลีเดอรัททุกแทร็คจะปรากฏขึ้น เลือกเพลงทั้งหมดที่คุณต้องการใส่ไว้ในรายการเพลง จะมีเครื่องหมายปรากฏอยู่ข้างชื่อเพลง

ในการเล่นรายการเพลง ให้เลือกรายการที่ต้องการ แล้วเลือก เล่น

**หมายเหตุ:** ในการเพิ่มรายการเพลง อีกรายการ ให้เลือก ตัวเลือก แล้วเลือก เพิ่มรายการเพลงใหม่

## การแก้ไขรายการเพลง

ในบางครั้ง คุณอาจต้องการเพิ่มเพลงหรือลบเพลงออกจากรายการเพลง เมื่อคุณต้องการเพิ่มหรือลบเพลง คุณสามารถแก้ไขรายการเพลงได้

- 1 เลือก เพลงส่วนตัว แล้วเลือก รายการ
- 2 เลือก รายการเพลง
- 3 เลือก ตัวเลือก แล้วเลือก:

เพิ่มเพลงใหม่ – เพื่อเพิ่มเพลงใหม่ในรายการเพลง เลือกเพลงที่ต้องการแล้วเลือก เสริม

เลื่อนขึ้น/ลง – ย้ายเพลงขึ้นหรือลงเพื่อเปลี่ยนแปลงลำดับการเล่นเพลง

ส่ง – ส่งเพลงเป็นข้อความหรือผ่านบลูทูธ

## ลบออกจากรายการ

– ลบเพลงออกจากรายการเพลง เลือก ไข่ เพื่อยืนยัน

เลือก/ไม่เลือก - เลือกไฟล์หลายไฟล์ ไข่เป็น – คุณสามารถกำหนดให้เพลงเป็นเสียงเอฟเฟกต์ได้

## การลบรายการเพลง

- 1 เลือก เพลงส่วนตัว แล้วเลือก รายการ
- 2 เลือก ตัวเลือก แล้วเลือก ลบ หรือ ลบทั้งหมด เพื่อลบรายการเพลงทั้งหมด

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การใช้วิทยุ

LG KF750 มีคุณสมบัตินิเทศวิทยุ FM ดังนั้นคุณสามารถรับฟังสถานีที่คุณชื่นชอบได้ตลอดเวลา

**หมายเหตุ:** คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ โดยเสียบลงในช่องเดียวกับที่คุณเสียบอุปกรณ์ชาร์จแบตเตอรี่

### การค้นหาสถานี

คุณสามารถตั้งสถานีวิทยุโดยการค้นหาด้วยตนเองหรือโดยอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องปรับตั้งสถานีใหม่อีก คุณสามารถบันทึกได้สูงสุด 50 ช่องสถานีในโทรศัพท์ของคุณ

#### ในการปรับตั้งอัตโนมัติ:

- 1 จาก **เพลง** ให้เลือก **วิทยุ FM** แล้วเลือก **ตัวเลือก**
- 2 เลือก **สแกนอัตโนมัติ** แล้วเลือก **ใช่** สถานีที่พบจะถูกกำหนดไว้ในหมายเลขช่องสถานีโดยอัตโนมัติ

**เคล็ดลับ!** คุณสามารถเข้าถึงเพลงโดยใช้หน้าจอสัมผัส กดปุ่มกล้องถ่ายรูปที่ด้านขวาของโทรศัพท์แล้วเลือกไอคอน **วิทยุ** หรือ **เพลง**

#### ในการปรับตั้งด้วยตนเอง:

- 1 เลือก **วิทยุ FM** แล้วเลือก **ตัวเลือก**
- 2 เลือก **รายการช่อง** แล้วเลือกหมายเลขช่องสถานีที่ต้องการบันทึกสถานีไว้
- 3 บ่อนความถี่ของสถานี แล้วแตะที่ **เลือก** เพื่อบันทึก

**หมายเหตุ:** คุณยังสามารถค้นหาสถานีด้วยตนเองโดยใช้  (ซ้าย) และ  (ขวา) ที่แสดงอยู่ถัดจากความถี่วิทยุ

## การแก้ไขสถานี

คุณอาจต้องการย้ายสถานีไปยังช่องสถานีอื่น เพื่อให้คุณสามารถรับฟังสถานีที่ฟังบ่อยได้อย่างง่ายดาย

- 1 เลือก **วิทยุ FM** แล้วเลือก **ตัวเลือก**
- 2 เลือก **รายการช่อง** และเลือกช่องสถานีที่คุณต้องการเปลี่ยน
- 3 เลือกสถานีจากช่องใดช่องหนึ่ง หรือปรับตั้งช่องสถานีตามความถี่ที่คุณต้องการด้วยตนเอง

คุณสามารถแก้ไขแต่ละช่องได้โดยเลื่อนแถบไปที่ช่องสถานี แล้วแตะที่ **ตัวเลือก**:

- แก้ไข - เปลี่ยนชื่อของสถานี
- แทนที่ - ตั้งค่าความถี่ใหม่ให้กับช่องสถานีที่เลือก
- รีเซ็ตสถานี - รีเซ็ตของสถานี
- รีเซ็ตทุกสถานี - รีเซ็ตทุกช่องสถานี

## การรีเซ็ตสถานี

- 1 เลือก **วิทยุ FM** แล้วเลือก **ตัวเลือก**
- 2 เลือก **รายการช่อง** แล้วเลือก **ตัวเลือก**
- 3 เลือก **รีเซ็ตสถานี** เพื่อรีเซ็ตของสถานีปัจจุบัน หรือเลือก **รีเซ็ตทุกสถานี** เพื่อรีเซ็ตทุกช่องสถานี สถานีแต่ละช่องสถานีจะกลับไปความถี่เริ่มต้น 87.5Mhz

**เคล็ดลับ!** ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

## การฟังวิทยุ

เลือก **วิทยุ FM** แล้วป้อนหมายเลขช่องสถานีที่คุณต้องการฟัง

**เคล็ดลับ!** ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

01

02

03

04

05

06

07

08

## มัลติมีเดีย

### การใช้เครื่องบันทึกเสียง

ใช้ เครื่องบันทึกเสียง เพื่อบันทึกเสียง  
เตือนความจำหรือเสียงอื่นๆ

- 1 เลือก **มัลติมีเดีย**
- 2 เลือก **บันทึกเสียง** แล้วเลือก  
ตัวเลือก และเลือกจาก:

**ระยะเวลา** –

กำหนดระยะเวลาในการบันทึก

เลือกจาก **ขนาดข้อความ MMS,**  
**30 วินาที, 1 นาที** หรือ **ไม่จำกัด**

**คุณภาพ** – เลือกคุณภาพของเสียง

เลือกจาก **ละเอียดมาก, ละเอียด**  
หรือ **ปกติ**

**ความจำที่ใช้** – ตรวจสอบสถานะ  
หน่วยความจำปัจจุบัน

**ไปที่เสียง** – เปิดโฟลเดอร์รายการ  
บันทึกเสียงใน เสียง

### การบันทึกเสียงหรือเสียงพูด

- 1 เลือก **มัลติมีเดีย**
- 2 เลือก **บันทึกเสียง**
- 3 เลือก **บันทึก** เพื่อเริ่มบันทึก
- 4 เลือก **หยุด** เพื่อสิ้นสุดการบันทึก  
เสียง
- 5 เลือก **เล่น** ใน **ตัวเลือก**  
เพื่อฟังรายการที่บันทึก

### การส่งรายการบันทึกเสียง


1 เมื่อคุณบันทึกเสียงเสร็จแล้ว ให้เลือก  
ตัวเลือก

2 เลือก **ส่ง** แล้วเลือกจาก **ข้อความ**  
**อีเมล** หรือ **บลูทูธ** หากคุณเลือก  
**ข้อความ** หรือ **อีเมล** รายการที่บันทึก  
ก็จะแนบไปกับข้อความ และคุณส  
สามารถเขียนและส่งข้อความได้ตาม  
ปกติ หากคุณเลือก **บลูทูธ** เครื่องจะ  
แสดงข้อความให้คุณเปิดบลูทูธ

**หมายเหตุ:** เมื่อคุณบันทึกเสียงเสร็จแล้ว  
ให้เลือก **ตัวเลือก** แล้วเลือก **เล่น, ส่ง,**  
**ไฟล์, ลบ, ใช้เป็น** (เพื่อใช้เป็นเสียง  
เรียกเข้า) และ **ไปที่เสียง**


## สมุดบันทึก

### การเพิ่มเหตุการณ์ลงในปฏิทิน


- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **สมุดบันทึก** เลือก **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 เลือก **ตัวเลือก** แล้วเลือก **เพิ่มนัดหมาย**
- 4 เลือกว่าคุณจะเพิ่ม **นัดหมาย**, **วันครบรอบ** หรือ **วันเกิด** และเลือก **เสร็จ**
- 5 ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่ม
- 6 สำหรับการนัดหมายและวันครบรอบ ให้ป้อนเวลาและวันที่ที่เหตุการณ์สิ้นสุดในระยะเวลาและวันที่ด้านล่างทั้งสองช่อง
- 7 หากคุณต้องการเพิ่มหัวข้อหรือหมายเหตุในเหตุการณ์ ให้แตะที่ **ใส่หัวข้อ** หรือ **ชื่อ** และพิมพ์หมายเหตุ
- 8 เลือก **เสร็จ** และเหตุการณ์ของคุณจะบันทึกอยู่ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมกำกับอยู่ และเสียงกริ่งจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดต่างๆ

**เคล็ดลับ!** คุณสามารถกำหนดวันหยุดในปฏิทินได้ เลือกวันที่เป็นวันหยุดของคุณ แล้วเลือก **ตัวเลือก** และ **ตั้งวันหยุด** วันเหล่านั้นจะมีเงาสีแดงแสดงอยู่ เมื่อคุณตั้งปลุก คุณสามารถเลือกที่จะเว้นวันที่กำหนดเป็นวันหยุดได้

### การเปลี่ยนมุมมองเริ่มต้นของปฏิทิน

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **สมุดบันทึก** เลือก **ตั้งค่า**
- 2 เลือก **ปฏิทิน** และ **ตัวเลือก** แล้วเลือก **มุมมองเดือน** หรือ **มุมมองสัปดาห์**
- 3 กด **ตกลง** เพื่อยืนยันการเลือกของคุณ

### การเพิ่มรายการลงในสิ่งที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **สมุดบันทึก**
- 2 เลือก **สิ่งที่ต้องทำ** แล้วเลือก **เพิ่ม**
- 3 กำหนดวันที่ของรายการที่ต้องทำ เพิ่มหมายเหตุ และเลือกลำดับความสำคัญ: **สูง**, **กลาง** หรือ **ต่ำ**
- 4 บันทึกรายการสิ่งที่ต้องทำโดยเลือกที่ **เสร็จ**

01

02

03

04

05

06


07

08

## สมุดบันทึก


**เคล็ดลับ!** คุณสามารถแก้ไขรายการโดยเลือกรายการ แล้วแตะ **ตัวเลือก** และ **แก้ไข** ยืนยันการแก้ไขโดยการเลือก **บันทึก**

### การแบ่งบันรายการที่ต้องทำ

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **สมุดบันทึก** เลือก **สิ่งที่ต้องทำ**
- 2 เลือกรายการที่ต้องการที่ต้องการแบ่งบัน แล้วเลือก **ตัวเลือก**
- 3 เลือก **ส่ง** คุณสามารถเลือกแบ่งบันรายการที่ต้องทำ เป็น **ข้อความตัวอักษร**, **ข้อความมีลติมีเดีย**, **อีเมล** หรือ **บลูทูธ**

**เคล็ดลับ!** คุณสามารถสำรองข้อมูลและซิงโครไนซ์ปฏิทินของคุณกับคอมพิวเตอร์ได้ โปรดดูที่ PC Sync ในหน้า 77



### การเพิ่มบันทึก

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **สมุดบันทึก**- **บันทึก**
- 2 หากไม่มีบันทึกใดๆ **อยู่** ให้เลือก **เพิ่ม**
- 3 พิมพ์บันทึก แล้วตามด้วย **บันทึก**

- 4 **บันทึกของคุณจะปรากฏขึ้นบนหน้าจอ** เมื่อคุณเปิดแอปพลิเคชัน **บันทึก** ในครั้งถัดไป

**เคล็ดลับ!** คุณสามารถแก้ไขบันทึกที่มีอยู่ได้ เลือกบันทึกที่ต้องการแก้ไข แล้วเลือก **แก้ไข**

### การตั้งเวลาปลุก

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **เครื่องมือง** - **ตั้งปลุก**
- 2 เลือก **ตัวเลือก** แล้วแตะที่ **เพิ่มใหม่**
- 3 กำหนดเวลาที่ต้องการให้ส่งเสียงปลุก
- 4 เลือกว่าคุณต้องการให้ส่งเสียงปลุกครั้งเดียว, ทุกวัน, จันทร์ - ศุกร์, จันทร์ - เสาร์, เสาร์ - อาทิตย์ หรือ ยกเว้นวันหยุด
- 5 เลือก  และ **แก้ไข** เพื่อเลือกเสียงสำหรับการปลุก ในการฟังเสียง ให้เลือกเสียง แล้วแตะ **เล่น**
- 6 เพิ่มบันทึกสำหรับการปลุก แล้วเลือก **เสร็จ** เมื่อคุณพิมพ์เสร็จ เมื่อเสียงปลุกดัง เครื่องจะแสดงบันทึกขึ้นมา
- 7 สุดท้าย คุณสามารถกำหนดรอบเวลาในการเลื่อนปลุกเป็น 5, 10, 20, 30 นาที, 1 ชั่วโมง หรือ **ปิด**
- 8 เมื่อคุณตั้งปลุกเสร็จแล้ว เลือก **เสร็จ**

หมายเหตุ: คุณสามารถตั้งปลุกได้ถึง 5 รายการ

### การใช้เครื่องคิดเลข

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก เครื่องมือ เลือก เครื่องคิดเลข
- 2 เลือกปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้เลือก ฟังก์ชันที่คุณต้องการ (+, -, x, /) แล้วตามด้วย =
- 4 สำหรับการคำนวณแบบซับซ้อน ให้เลือก **ตัวเลข** แล้วเลือก +/-, sin, cos, tan, log, ln, exp, sqrt, deg หรือ rad

### การใช้นาฬิกาจับเวลา

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก เครื่องมือ เลือก นาฬิกาจับเวลา
- 2 เลือก เริ่ม เพื่อเริ่มต้นตัวตั้งเวลา
- 3 เลือก หยุด เพื่อหยุดตัวตั้งเวลา
- 4 เลือก รอบ เพื่อวัดเวลาแต่ละรอบ
- 5 ในการเริ่มนาฬิกาจับเวลาใหม่ เลือก ต่อ
- 6 เลือก รีเซ็ต เพื่อกลับไปที่ยุ่

### การแปลงหน่วย

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก เครื่องมือ เลือก ตัวแปลงหน่วย
- 2 เลือกว่าคุณจะแปลง **สกุลเงิน**, **พื้นที่**, **ความยาว**, **น้ำหนัก**, **อุณหภูมิ**, **ปริมาตร** หรือ **ความเร็ว**
- 3 คุณสามารถเลือกหน่วย และป้อนค่าที่คุณต้องการแปลง แล้วตามด้วยหน่วยที่คุณต้องการแปลงเป็น
- 4 ค่าผลลัพธ์ที่เกี่ยวข้องกันจะปรากฏขึ้นบนหน้าจอ

### การใส่ชื่อเมืองลงในเวลาทั่วโลก

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก เครื่องมือ เลือก เวลาทั่วโลก
- 2 เลือก **ตัวเลข** ตามด้วย **เพิ่มเมือง** เริ่มพิมพ์ชื่อเมืองที่คุณต้องการ และชื่อนั้นจะปรากฏที่ด้านบนของหน้าจอ หรือเลือก **แผนที่** และเลือกเมืองที่เลือกไว้จากแผนที่
- 3 กด **เลือก** เพื่อยืนยันการเลือกของคุณ

01

02

03

04

05

06

07

08

## สมุดบันทึก

### เคล็ดลับ!

หากคุณไปต่างประเทศ คุณสามารถเปลี่ยนโซนเวลาจากเวลาทั่วโลกได้ โดยการเลือก **ตัวเลือก** แล้วตามด้วย **เปลี่ยนเมืองหลัก** เลือกเมืองที่คุณต้องการตามวิธีด้านบน แล้วแตะที่ **เลือก**

## PC Sync

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณ ตรงกัน รวมทั้งยังเป็นการสำรองข้อมูลที่ช่วยให้คุณจำได้อย่างง่ายดายอีกด้วย

### การติดตั้ง LG PC Suite ลงในคอมพิวเตอร์

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **ตั้งค่าโทรศัพท์**
- 2 เลือก **การเชื่อมต่อ** และ **โหมดการเชื่อมต่อ USB**
- 3 เลือก **โหมดการเชื่อมต่อ USB** แล้วคลิก **ตกลง**  
เพลง - โหมดซิงค์เพลง  
อื่นๆ - โหมดบริการข้อมูล
- 4 ใส่แผ่นซีดีที่ให้มาด้วยในเครื่องคอมพิวเตอร์ คลิก **LG PC Suite Installer** ซึ่งจะปรากฏที่หน้าจอของคุณ
- 5 เลือกภาษาที่ต้องการใช้ในการติดตั้ง แล้วคลิกที่ **OK**
- 6 ปฏิบัติตามคำแนะนำบนหน้าจอเพื่อทำให้ wizard **LG PC Suite Installer** เสร็จสมบูรณ์
- 7 เมื่อติดตั้งเสร็จเรียบร้อยแล้ว **ไอคอน LG PC Suite** จะปรากฏขึ้นบนเดสก์ทอป

### การเชื่อมต่อโทรศัพท์เข้ากับคอมพิวเตอร์

- 1 เชื่อมสาย USB ที่โทรศัพท์และคอมพิวเตอร์ของคุณ
- 2 ดับเบิลคลิกที่ **LG PC Suite** บนเดสก์ทอปของคุณ
- 3 คลิกที่ **Connection Wizard** แล้วคลิก **USB**
- 4 คลิกที่ **Next** แล้วคลิก **Next** อีกครั้ง จากนั้นคลิก **Finish** โทรศัพท์และคอมพิวเตอร์ของคุณเชื่อมต่อกันเรียบร้อยแล้ว

### การสำรองข้อมูลและการเรียกคืนข้อมูลของโทรศัพท์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Backup** แล้วเลือก **Backup** หรือ **Restore**
- 3 เลือกเนื้อหาที่คุณต้องการสำรองข้อมูลหรือเรียกคืน เลือกตำแหน่งที่คุณต้องการสำรองข้อมูลหรือเรียกคืนข้อมูล คลิก **OK**
- 4 ระบบจะสำรองข้อมูลของคุณ

01

02

03

04

05

06

07

08

## PC Sync

### การดูไฟล์ในโทรศัพท์บนคอมพิวเตอร์

- 1 เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องคอมพิวเตอร์ตามวิธีข้างต้น
- 2 คลิกที่ไอคอน **Contents**
- 3 เอกสารทั้งหมด, แฟลชคอนเทนท์, ภาพ, เสียง และวิดีโอ ซึ่งคุณบันทึกไว้ในโทรศัพท์ของคุณจะปรากฏบนหน้าจอในโฟลเดอร์ LG Phone

**เคล็ดลับ!** การดูเนื้อหาของโทรศัพท์บนเครื่องคอมพิวเตอร์จะช่วยให้คุณบริหารจัดการจัดเรียงไฟล์จัดการเอกสาร และลบเนื้อหาที่คุณไม่ต้องการใช้อีกต่อไปได้

### การซิงโครไนซ์รายชื่อ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Contacts**
- 3 เลือก **Transfer** แล้วเลือก **Import from mobile handset** เครื่องคอมพิวเตอร์ของคุณจะอิมพอร์ตและแสดงรายชื่อทั้งหมดที่บันทึกไว้ใน USIM การ์ดและโทรศัพท์
- 4 คลิกที่ **File** แล้วเลือก **Save** จากนั้นคุณสามารถเลือกตำแหน่งที่คุณต้องการบันทึกรายชื่อ

**หมายเหตุ:** ในการสำรองข้อมูลรายชื่อที่บันทึกไว้ใน USIM การ์ด ให้คลิกที่โฟลเดอร์ SIM Card ทางด้านซ้ายมือของหน้าจอคอมพิวเตอร์ เลือก **Edit** ที่ด้านบนสุดของหน้าจอ แล้วเลือก **Select All** คลิกขวาที่รายชื่อของคุณ แล้วเลือก **Copy to contact** จากนั้นคลิกที่โฟลเดอร์ **Handset** ทางด้านซ้ายมือของหน้าจอและหมายเลขทั้งหมดจะปรากฏขึ้น

### การซิงโครไนซ์ข้อความ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Messages**
- 3 ข้อความในเครื่องคอมพิวเตอร์และโทรศัพท์ของคุณจะปรากฏขึ้นในโฟลเดอร์บนหน้าจอ
- 4 ใช้แถบเครื่องมือด้านบนสุดของหน้าจอเพื่อแก้ไขและจัดเรียงข้อความ

### การซิงโครไนซ์เพลงของคุณ

- 1 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี
- 2 คลิกที่ไอคอน **Music**
- 3 โฟล์เพลงที่คุณบันทึกจะแสดงบนหน้าจอในโฟลเดอร์ Music

**หมายเหตุ:** การใช้งาน Music ต้องใช้ข้อกำหนดต่อไปนี้

- Windows XP Service Pack 2 ขึ้นไป
- Windows Media Player 11 ขึ้นไป
- ต้องเปิดโหมดการเชื่อมต่อ USB และโหมดซิงค์เพลง

## การใช้โทรศัพท์ของคุณเป็นอุปกรณ์เก็บข้อมูล

โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการตั้งค่าความจำติดตั้งไว้

- 1 เลิกการเชื่อมต่อเครื่องโทรศัพท์ของคุณออกจากเครื่องคอมพิวเตอร์
- 2 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **ตั้งค่า**
- 3 เลือก **การเชื่อมต่อ** และ **โหมดการเชื่อมต่อ USB**
- 4 เลื่อนแถบมาที่ **ที่เก็บข้อมูล** แล้วแตะ **เลือก**
- 5 ใช้เชื่อมต่อเครื่องโทรศัพท์ของคุณเข้ากับเครื่องพีซี โทรศัพท์ของคุณจะแสดงข้อความ: **Connecting as Mass Storage...** แล้วตามด้วย **Connected as Mass Storage Mode** อย่ายกเลิกการเชื่อมต่อระหว่างการทำโอนข้อมูล

- 6 ไฟล์ทั้งหมดในโทรศัพท์ของคุณจะได้รับการจัดเก็บไปยังฮาร์ดดิสก์ของเครื่องคอมพิวเตอร์โดยอัตโนมัติ

**หมายเหตุ:** คุณต้องถอดสายเชื่อมต่อของโทรศัพท์ออกจากคอมพิวเตอร์ของคุณเพื่อเริ่มใช้ที่เก็บข้อมูล

**หมายเหตุ:** ที่เก็บข้อมูลจะสำรองข้อมูลเนื้อหาที่บันทึกไว้ในการหน่วยความจำเท่านั้น โดยไม่บันทึกในหน่วยความจำเครื่อง ในการถ่ายโอนเนื้อหาของหน่วยความจำเครื่อง (เช่น รายชื่อ) คุณจำเป็นต้องซิงค์ในซีโดยใช่ PC Sync

## PIN สำหรับการเชื่อมต่อ DivX

ติดตั้งตัวแปลง DivX ซึ่งมีให้มาในแผ่นซีดีเดียวกับซอฟต์แวร์ PC Sync เมื่อติดตั้งแล้ว ให้เลือก DivX จาก Program Files บนเครื่องพีซี จากนั้นเลือกตัวแปลง DivX แล้วตามด้วย Converter ซึ่งจะเป็นการเปิดแอปพลิเคชัน Converter ใช้ลูกศรในแอปพลิเคชันเพื่อเปลี่ยนรูปแบบการแปลงเป็น Mobile หากคุณคลิกขวาที่ช่องแอปพลิเคชันแล้วเลือก Preferences คุณจะสามารุแปลงตำแหน่งที่บันทึกไฟล์ที่แปลงแล้วได้

01

02

03

04

05

06

07

08


## PC Sync

เมื่อคุณพร้อมสำหรับการแปลงไฟล์แล้ว เพียงลากแล้ววางไฟล์ลงในแอปพลิเคชัน คุณจะต้องเลือก Convert เพื่อเริ่มกระบวนการ เมื่อขั้นตอนเสร็จสิ้น บออปอัป Conversion complete จะปรากฏขึ้น จากนั้นไฟล์ที่แปลงแล้วจะสามารถถ่ายโอนไปยังโทรศัพท์ของคุณได้ โดยใช้ฟังก์ชันที่เก็บข้อมูล (โปรดดูรายละเอียดที่หน้า 79) หรือ อัปโหลดโดยใช้ซอฟต์แวร์ PC Sync (โปรดดูรายละเอียดที่หน้า 77)

## เบราวเซอร์

เพียงใช้เบราวเซอร์และปลายนิ้วสัมผัส คุณก็จะสามารถค้นหาข่าวสารและพยากรณ์อากาศได้ ตลอดจนข้อมูลเกี่ยวกับกีฬาหรือการจราจรได้ทุกเมื่อที่คุณต้องการ นอกจากนี้ เบราวเซอร์ยังช่วยให้คุณสามารถดาวน์โหลดเพลง เสียงเรียกเข้า ภาพพื้นหลัง และเกมส์ใหม่ล่าสุดได้


### การเข้าเว็บไซต์

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **เบราวเซอร์**
- 2 ในการเข้าถึงโฮมเพจของเบราวเซอร์โดยตรง ให้เลือก **เบราวเซอร์** หรือเลือก **ไปยัง URL** จากนั้นพิมพ์ URL ที่คุณต้องการ แล้วเลือก **เปิด**

**หมายเหตุ:** ค่าใช้จ่ายเพิ่มเติมจะเกิดขึ้นเมื่อเชื่อมต่อกับบริการนี้และเมื่อดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

### การเพิ่มและการใช้บุ๊คมาร์ค

เพื่อการเข้าเว็บไซต์ที่คุณชื่นชอบได้อย่างรวดเร็วและง่ายดาย คุณสามารถเพิ่มบุ๊คมาร์คและบันทึกเว็บเพจได้

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **ใช้งาน 02**
- 2 เลือก **บุ๊คมาร์ค** รายการบุ๊คมาร์คของคุณจะปรากฏขึ้นบนหน้าจอ

- 3 ในการสร้างโฟลเดอร์ใหม่ ให้เลือก **ตัวเลือก** แล้วเลือก **สร้างโฟลเดอร์ใหม่** ป้อนชื่อโฟลเดอร์บุ๊คมาร์คของคุณ
- 4 ในการเพิ่มบุ๊คมาร์คใหม่ ให้เลือก **ตัวเลือก** แล้วแตะที่ **เพิ่มใหม่** ป้อนชื่อสำหรับบุ๊คมาร์ค แล้วตามด้วยป้อน URL
- 5 เลือก **เสร็จ** บุ๊คมาร์คของคุณจะปรากฏขึ้นในรายการบุ๊คมาร์ค
- 6 ในการเข้าใช้บุ๊คมาร์ค ให้เลื่อนไปที่บุ๊คมาร์คแล้วเลือก **เปิด**

### การบันทึกเพจ

- 1 เข้าถึงเว็บเพจที่ต้องการตามที่อธิบายไว้ข้างต้น
- 2 เลือก **ตัวเลือก** แล้วเลือก **บันทึกรายการ - บันทึกเพจนี้**
- 3 ป้อนชื่อสำหรับเว็บเพจเพื่อให้ง่ายต่อการจดจำ
- 4 เลือก **บันทึก**

**เคล็ดลับ!** เมื่อนี้จะช่วยให้คุณสามารถแก้ไขชื่อของเพจที่คุณบันทึกไว้ ป้องกันหรือไม่ป้องกันบันทึกเดือนความจำบนหน้าจอ รวมถึงลบเพจที่บันทึกไว้ได้

01

02

03

04

05


06

07

08

## เบราว์เซอร์

### การเข้าใช้เพจที่บันทึกไว้

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก **เบราว์เซอร์**
- 2 เลือก **บันทึกเพจ**
- 3 เลือก **เปิด** เพื่อเชื่อมต่อไปยังเพจที่บันทึกไว้

### การดูประวัติข้อมูลเบราว์เซอร์

- 1 จากหน้าจอสแตนด์บาย กด  และเลือก **เบราว์เซอร์** แล้วเลือก **ประวัติ**
- 2 **ประวัติการแสดงผล** จะปรากฏขึ้น เลือก **ตัวเลือก** แล้วเลือก **เพิ่มในบุ๊กมาร์ก** เพื่อเพิ่มเพจที่เปิดอยู่ในบุ๊กมาร์กของคุณ
- 3 เลือก **ตัวเลือก** และเลือก **แสดงประวัติ** เพื่อดูรายการชื่อเว็บไซต์ที่คุณเข้าใช้งานล่าสุด
- 4 ในการเข้าใช้เพจใดเพจหนึ่ง ให้เลือกเพจที่ต้องการ แล้วแตะที่ **เปิด**

### การใช้ RSS reader

RSS (Really Simple Syndication) เป็นกลุ่มรูปแบบ Web feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า **feed**, **web feed** หรือ **channel** จะมีสรุปเนื้อหาหรือข้อความเต็มจากเว็บที่เกี่ยวข้อง RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบ ด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง

ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือคลิกที่ไอคอน RSS ในเบราว์เซอร์ที่เปิดขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อหาเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ


### การเพิ่ม Feed

คุณสามารถป้อน Feed ด้วยตนเอง โดยตรงได้ดังนี้: **เบราว์เซอร์** → **RSS reader** → **ตัวเลือก** → **เพิ่มใหม่** หรือคลิกลิงค์ Feed โดยเลือกไอคอน RSS ในเว็บเพจ

## การอัปเดต RSS reader

- 1 คุณสามารถเลือกตัวเลือก อัปเดต หรือ อัปเดตทั้งหมด
- 2 หากคุณต้องการอัปเดตอัตโนมัติ เลือก กำหนดการอัปเดต

## การเปลี่ยนการตั้งค่า เว็บเบราว์เซอร์

- 1 จากหน้าจอสแตนด์บาย กด  แล้วเลือก เบราวเซอร์ เลือก การตั้งค่าเบราว์เซอร์
- 2 คุณสามารถเลือกแก้ไข โพรไฟล์, การตั้งค่าลักษณะ, แคช, คุกกี้, ระบบป้องกัน หรือ รีเซ็ตการตั้งค่า
- 3 เมื่อคุณเปลี่ยนแปลงการตั้งค่าของคุณ ให้แตะ เลือก

01

02

03

04

05

06

07

08

## เว็บไซต์

### การใช้โทรศัพท์เป็นโมเด็ม

โทรศัพท์ของคุณสามารถทำหน้าที่เป็นโมเด็มของเครื่องคอมพิวเตอร์ได้ จึงทำให้คุณสามารถส่งอีเมลและเข้าถึงอินเทอร์เน็ตได้ แม้ในเวลาที่คุณไม่ได้เชื่อมต่อโดยใช้สาย โดยคุณสามารถใช้สาย USB หรือ บลูทูธ ก็ได้

#### การใช้สาย USB:

- 1 ตรวจสอบให้แน่ใจว่าคุณได้ติดตั้ง LG PC Suite บนเครื่องคอมพิวเตอร์ของคุณแล้ว
- 2 เชื่อมต่อ KF750 เข้ากับคอมพิวเตอร์ของคุณด้วยสาย USB แล้วเริ่มซอฟต์แวร์ LG PC Suite
- 3 คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิกที่ **Settings** และเลือก **Modem**
- 4 เลือก **LG Mobile USB Modem** และเลือก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 5 คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ KF750 ของคุณ

**หมายเหตุ:** สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการซิงโครไนซ์โดยใช้ LG PC Suite โปรดดูที่หน้า 77

### การใช้ บลูทูธ

- 1 ตรวจสอบให้แน่ใจว่าได้ตั้งค่า บลูทูธ เป็น **เปิด** และ **แสดง** ทั้งเครื่องพีซีและโทรศัพท์ KF750
- 2 จับคู่เครื่องคอมพิวเตอร์ของคุณและ KF750 เพื่อให้ต้องระบุรหัสผ่านสำหรับการเชื่อมต่อ
- 3 ใช้ **Connection wizard** ใน LG PC Suite เพื่อสร้างการเชื่อมต่อบลูทูธที่ใช้
- 4 คลิกที่ **Communication** บนคอมพิวเตอร์ของคุณ จากนั้นคลิก **Settings**
- 5 คลิกที่ **Modem**
- 6 เลือก **Standard Modem over บลูทูธ link** แล้วคลิก **OK** จากนั้นโมเด็มจะปรากฏขึ้นบนหน้าจอ
- 7 คลิกที่ **Connect** และเครื่องคอมพิวเตอร์ของคุณจะเชื่อมต่ออินเทอร์เน็ตผ่านโทรศัพท์ KF750 ของคุณ

### การส่งและการรับไฟล์โดย ใช้บลูทูธ

บลูทูธเป็นวิธีในการส่งและรับไฟล์ที่ดีโดยไม่จำเป็นต้องต่อสาย ซึ่งสามารถเชื่อมต่อได้อย่างรวดเร็วและง่ายดาย คุณยังสามารถเชื่อมต่อกับชุดหูฟังบลูทูธเพื่อโทรออกและรับสายได้

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก ตัวเลือก แล้วเลือก **ส่ง** เลือก **บลูทูธ**
- 3 เลือก **ใช่** เพื่อเปิด บลูทูธ
- 4 โทรศัพท์ KF750 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้ บลูทูธ ภายในรัศมีนั้นโดยอัตโนมัติ
- 5 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไปให้ แล้วเลือก **เลือก** เพื่อส่งไฟล์
- 6 ไฟล์ของคุณจะถูกส่งออกไป

**เคล็ดลับ!** คอยเฝ้าดูแถบแสดงความคิดเห็นเพื่อให้แน่ใจว่าไฟล์ของคุณถูกส่งแล้ว

### ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่า บลูทูธ เป็น **เปิด** และ **แสดง** โปรตูดข้อมูลเพิ่มเติมเกี่ยวกับ **การเปลี่ยนการตั้งค่า บลูทูธ** ที่ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง เลือก **ใช่** เพื่อรับไฟล์

- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว และคุณสามารถเลือกเพื่อ ดู ไฟล์หรือ **ใช่เป็นภาพพื้นหลัง** ได้ โดยปกติ ไฟล์จะบันทึกไว้ในโฟลเดอร์ที่เกี่ยวข้องกันใน ไฟล์ของวัน

### การเปลี่ยนการตั้งค่า บลูทูธ:

- 1 กด  ในหน้าจอสแตนด์บาย แล้วเลือก **การเชื่อมต่อ**

- 2 เลือก **บลูทูธ** แล้วเลือก **ตั้งค่า** ทำการเปลี่ยนแปลง:

**การมองเห็นเครื่อง** - เลือกให้แสดง, แสดง 1 นาที หรือ ซ่อน

**ชื่อเครื่องของฉัน** - ป้อนชื่อโทรศัพท์ KF750 ของคุณ

**บริการที่รองรับ** - ค้นหาโปรไฟล์ที่ KF750 รองรับ โปรดดูที่ การใช้โทรศัพท์เป็นโมเด็ม ในหน้า 84 หรือ การใช้ชุดหูฟัง บลูทูธ ในหน้า 86

**แอตเดรสส่วนตัว** - ค้นหาแอตเดรสอุปกรณ์ บลูทูธ ของคุณ

01

02

03

04

05

06

07

08

## เว็บไซต์

### การจับคู่กับอุปกรณ์ บลูทูธ อื่น

โดยการจับคู่โทรศัพท์ KF750 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้ ซึ่งหมายความว่าอุปกรณ์ที่จับคู่ด้วยก็จะปลอดภัยมากขึ้น

- 1 ตรวจสอบว่าได้ตั้งค่า บลูทูธ เป็น **เปิด** และ **แสดง** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
- 2 เลือก **อุปกรณ์ที่จับคู่** และ **สร้าง**
- 3 โทรศัพท์ KF750 จะค้นหาอุปกรณ์ เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** และ **เพิ่ม** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่าน จากนั้นให้กด **เพิ่ม**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่นซึ่งคุณเคยป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

### การใช้ชุดหูฟัง บลูทูธ

- 1 ตรวจสอบว่าได้ตั้งค่า บลูทูธ เป็น **เปิด** และ **แสดง**
- 2 ปฏิบัติตามคำแนะนำที่แนบมาพร้อมกับชุดหูฟัง เพื่อตั้งค่าชุดหูฟังให้อยู่ในโหมดการจับคู่ และจับคู่กับโทรศัพท์ของคุณ
- 3 แตะที่ **ใช้** เพื่อ **เชื่อมต่อ**ทันที โทรศัพท์ KF750 จะเปลี่ยนเป็นรูปแบบชุดหูฟังโดยอัตโนมัติ

**เคล็ดลับ!** โปรดดูรายละเอียดเกี่ยวกับ **โหมดตอบรับ BT** ที่หน้า 22 เพื่อที่คุณจะได้สามารถควบคุมวิธีการรับสาย เมื่อมีการเชื่อมต่อชุดหูฟัง บลูทูธ

# ตั้งค่า

ภายในโพลเดอรันี้ คุณสามารถปรับการตั้งค่าเพื่อให้โทรศัพท์ KF750 ตอบสนองการทำงานในแบบของคุณได้

**หมายเหตุ:** โปรดดูข้อมูลเกี่ยวกับการตั้งค่าการโทรได้ที่หน้า 24

## การเปลี่ยนการตั้งค่าหน้าจอ

**1** จากหน้าจอสแตนด์บาย กด  แล้วเลือก **ตั้งค่า**

**2** เลือก **ตั้งค่าการแสดงผล** และเลือก:

**ธีมหน้าจอ** - เลือกธีมสำหรับหน้าจอ สแตนด์บายหรือสายโทรออก

**รูปแบบเมนู** - เลือกรูปแบบสำหรับเมนูที่แสดง

**โทรออก** - ตั้งค่ารูปแบบหน้าจอ ขณะโทรออก

**แบบอักษร** - ปรับสีแบบอักษร

**ไฟหน้าจอ** - เลือกระยะเวลาการทำงานของแบ็คไลท์

**หมายเหตุ:** การเปิดแบ็คไลท์เป็นเวลานานจะทำให้สิ้นเปลืองพลังงาน แบตเตอรี่มากยิ่งขึ้น และคุณอาจจำเป็นต้องชาร์จโทรศัพท์ของคุณบ่อยยิ่งขึ้นด้วย

**ธีมเครื่อง** - เปลี่ยนรูปโฉมทั้งหน้าจอของคุณได้อย่างรวดเร็ว

**ข้อความต้อนรับ** - ป้อนข้อความ

ต้อนรับที่จะให้แสดงเมื่อเปิดโทรศัพท์

**3** เลือก **เลือก** เพื่อบันทึกการตั้งค่าของคุณ

## การปรับแต่งรูปแบบของคุณ

คุณสามารถเปลี่ยนรูปแบบบนหน้าจอ สแตนด์บายของคุณได้อย่างรวดเร็ว เพียงแตะที่ไอคอนรูปแบบที่ใช้งานในปัจจุบันทางด้านมุมบนขวามือ

คุณสามารถใช้เมนูการตั้งค่าในการปรับแต่งการตั้งค่ารูปแบบแต่ละรายการได้

**1** จากหน้าจอสแตนด์บาย กด 

**2** เลือก **รูปแบบเสียง** และเลือกรูปแบบที่คุณต้องการแก้ไข คุณไม่สามารถแก้ไขรูปแบบ **เจียบ**

**3** เลือก **ตัวเลือก** แล้วเลือก **แก้ไข**

**4** จากนั้น คุณสามารถเปลี่ยนตัวเลือกเสียง และการเตือนทั้งหมดที่มีอยู่ในรายการได้ รวมทั้ง **เสียงเรียกเข้า** และ **ระดับเสียง, แบบเดือนข้อความ, การตั้งค่าเสียงเปิดหน้าจอ** เป็นต้น

01

02

03

04

05

06


07

08

# ตั้งค่า

**การเปลี่ยนการตั้งค่าโทรศัพท์**  
เพลิดเพลินไปกับอิสระแห่งการปรับ  
เปลี่ยนการทำงานของโทรศัพท์ KF750  
เพื่อให้ตรงกับรูปแบบการทำงานของคุณ  
ใหม่มากที่สุด

**เคล็ดลับ!** ในการเลื่อนดูรายการ  
การตัวเลือก ให้แตะที่รายการสุดท้าย  
ที่มองเห็น แล้วใช้นิ้วเลื่อนหน้าจอ  
ขึ้น รายการต่างๆ จะเลื่อนขึ้น  
ทำให้มองเห็นรายการอื่นๆ ได้

- 1 จากหน้าจอแสดงแถบนำทาง กด 
- 2 เลือก **ตั้งค่าโทรศัพท์** แล้วเลือกจากรายการทางด้านล่าง
  - ล็อคปุ่มอัตโนมัติ** - ล็อคปุ่มกดอัตโนมัติในหน้าจอแสดงแถบนำทางและตามเวลาที่กำหนด
  - การสั่นที่ซัพแพด** - เปิด หรือ ปิดการสั่นปุ่มสัมผัส
  - เอฟเฟกต์ทัชสกรีน** - ตั้งค่าเสียงเอฟเฟกต์เมื่อแตะหน้าจอ
  - ภาษา** - เปลี่ยนภาษาบนจอแสดงผลของ KF750 ของคุณ
  - ประหยัดพลังงาน** - เลือก เปิด หรือ ปิด การตั้งค่าประหยัดพลังงาน

**ข้อมูล** - ดูข้อมูลทางด้านเทคนิคของโทรศัพท์ KF750

## การใช้วันที่ & เวลา

**วันที่ & เวลา** - ปรับการตั้งค่าวันที่และเวลาของคุณ หรือเลือกให้ เครื่องอัปเดตเวลาอัตโนมัติเมื่อคุณเดินทางหรือสำหรับการปรับเวลาคตามฤดูกาล

## การเปลี่ยนการตั้งค่าอื่นๆ

การตั้งค่าการเชื่อมต่อจะได้รับการตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้นคุณจึงสามารถเพลิดเพลินกับโทรศัพท์ใหม่ของคุณได้ทันที หากคุณต้องการเปลี่ยนแปลงการตั้งค่า ให้ใช้เมนูนี้

**เครือข่าย** - โทรศัพท์ KF750 จะเชื่อมต่อกับเครือข่ายที่ต้องการได้โดยอัตโนมัติ ในการเปลี่ยนการตั้งค่าเหล่านี้ ให้ใช้เมนูนี้

**โปรไฟล์อินเทอร์เน็ต** - ตั้งค่าโปรไฟล์ให้เชื่อมต่อกับอินเทอร์เน็ต

**จุดเชื่อมต่อ** - ผู้ให้บริการระบบได้บันทึกข้อมูลนี้แล้ว คุณสามารถเพิ่มจุดเชื่อมต่อใหม่โดยใช้เมนูนี้ได้

**เชื่อมต่อข้อมูลแพ็คเกจ** - ตั้งค่าการเชื่อมต่อข้อมูลแพ็คเกจ

## การเปลี่ยนการตั้งค่าระบบป้องกัน

### คำขอรหัส PIN -

ตั้งค่าให้โทรศัพท์ขอรหัส PIN ของซิมการ์ดเมื่อเปิดโทรศัพท์


**ล็อคเครื่อง** - ตั้งคาล็อคโทรศัพท์เพื่อป้องกันการใช้งานโดยไม่ได้รับอนุญาตซึ่งคุณจะต้องใช้รหัสป้องกัน

**เปลี่ยนรหัส** - เปลี่ยนรหัสต่อไปนี้: PIN/ PIN2/ รหัสป้องกัน

### การใช้สถานะความจำ

KF750 ของคุณมีหน่วยความจำให้เลือกสามแบบ: โทรศัพท์, USIM การ์ด และการ์ดหน่วยความจำภายนอก (คุณอาจต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

คุณสามารถใช้สถานะความจำเพื่อดูว่าในแต่ละหน่วยความจำใช้หน่วยความจำไปเท่าใด และดูว่ามีพื้นที่ว่างเหลือเท่าใด

กด  ในหน้าจอสถานะหน่วยความจำ เลือก **ตั้งค่า** แล้วเลือก **สถานะความจำ**

**ความจำเครื่อง** - หน่วยความจำที่มีในโทรศัพท์ KF750 สำหรับภาพ, เสียง, วิดีโอ, แฟลช, MMS, อีเมล, แอปพลิเคชัน Java, และอื่นๆ

**ความจำสำรอง** - หน่วยความจำที่มีในเครื่องสำหรับ SMS, รายชื่อ, ปฏิทิน, สิ่งที่ต้องทำ, บันทึก, เตือน, ข้อมูลการโทร, บัตรการ และรายการเบ็ดเตล็ดอื่นๆ

**ความจำ USIM** - หน่วยความจำที่มีใน USIM การ์ด

**หน่วยความจำการ์ด** - หน่วยความจำที่มีในการ์ดหน่วยความจำภายนอก (คุณต้องซื้อการ์ดหน่วยความจำแยกต่างหาก)

**การตั้งค่าที่เก็บหลัก** - เลือกความจำเครื่อง หรือ หน่วยความจำการ์ด

**เคล็ดลับ!** โปรดดูข้อมูลเพิ่มเติมเกี่ยวกับการใส่การ์ดหน่วยความจำ ที่หน้า 18

### การใช้โหมด Flight

**เปิดโหมด Flight โดยกด** 

ในหน้าจอสถานะหน่วยความจำ แล้วเลือก **ตั้งค่า** - รูปแบบเสียง เลือกโหมด Flight แล้วกด

 **เปิดใช้งาน**

#### ในโหมด Flight

คุณจะไม่สามารถโทรออก

เชื่อมต่ออินเทอร์เน็ต ส่งข้อความหรือใช้ บลูทูธ ได้

01

02

03

04

05

06

07

08

## อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้เป็นอุปกรณ์ที่มาพร้อมกับโทรศัพท์ KF750 ของคุณ

### อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล  
และซีดี

เชื่อมต่อและซิง  
โครไนซ์โทรศัพท์  
KF750 เข้ากับพีซี



### แบตเตอรี่



คู่มือการใช้

เรียนรู้เพิ่มเติมเกี่ยวกับ  
โทรศัพท์ KF750  
ของคุณ



### ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสงสัยเพิ่มเติม

## บริการของเครือข่าย

โทรศัพท์ไร้สายที่อธิบายไว้ในคู่มือนี้ได้รับการรับรองให้ใช้ในระบบเครือข่าย GSM 900 และ DCS 1800, PCS1900 และ W-CDMA

คุณสมบัติต่างๆ ที่กล่าวถึงในคู่มือนี้เรียกว่า บริการเสริมจากระบบเครือข่าย ซึ่งเป็นบริการพิเศษที่คุณขอเปิดใช้ บริการได้จากผู้ให้บริการของคุณ ก่อนที่คุณจะสามารถใช้คุณสมบัติต่างๆ ของบริการเสริมจากระบบเครือข่ายเหล่านี้ คุณต้องสมัครขอรับบริการผ่านทางผู้ให้บริการ และขอคำแนะนำในการใช้จากผู้ให้บริการด้วย

## ข้อมูลทางเทคนิค

### ทั่วไป

ชื่อผลิตภัณฑ์ : KF750

ระบบ : GSM 900 / DCS 1800 / PCS 1900 / W-CDMA

### อุณหภูมิแวดล้อม

สูงสุด : +55°C (คายประจุ), +45°C (ขณะชาร์จ)

ต่ำสุด : -10°C

**ศูนย์บริการ LG โดย บริษัท แอลจี อีเลคทรอนิกส์ (ประเทศไทย) จำกัด**  
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบวศโล เขตธนบุรี กรุงเทพฯ 10600  
วันและเวลาทำการ : จันทร์-ศุกร์, เสาร์ที่ 2 และ 4 ของเดือน 08:00 - 17:00น.  
Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.6.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar. 2008

LG Electronics Inc, Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## **KF750** User Guide

Congratulations on your purchase of the advanced and compact KF750 phone by LG, designed to operate with the latest digital mobile communication technology.



#### **Disposal of your old appliance**

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Setup 01

Your standby screen 02

The basics 03

Get creative 04

Get organised 05

The web 06

Settings 07

Accessories 08

# Contents

## Setup

Getting to know your phone .....	8
Installing the USIM and battery .....	10
Memory card.....	12
Menu map.....	14

## Your standby screen

Touch screen tips.....	16
The status bar .....	17

## The basics

Calls .....	18
Making a voice call .....	18
Making a video call.....	18
Making a voice/video call from Contacts.....	18
Making international calls.....	19
Answering and rejecting a call.....	19
Speed dialling.....	19
Making a second call.....	19
DTMF tones .....	20
Viewing your call logs.....	20
Using call divert .....	20
Using call barring.....	21
Changing the common call settings .....	21
Changing your video call settings .....	22
Contacts.....	23
Searching for a contact.....	23
Adding a new contact .....	23
Contact options .....	24

Creating a group.....	24
Using service dial numbers .....	25
Viewing your own number.....	25
Creating a business card.....	25
Changing your contact settings .....	25
Messaging.....	27
Messaging.....	27
Sending a message .....	27
Entering text .....	27
T9 predictive .....	27
Abc manual .....	28
Setting up your email .....	28
Retrieving your email .....	29
Sending an email using your new account .....	29
Changing your email settings ...	29
Message folders.....	30
Managing your messages .....	30
Using templates.....	31
Using emoticons.....	31
Changing your text message settings .....	31
Changing your multimedia message settings.....	32
Changing your other settings....	32

## Get creative

Camera .....	33
Taking a quick photo .....	33
After you've taken your photo .....	33
Using the flash.....	34

Adjusting the brightness.....	34	Adding an effect to a photo .....	44
Choosing a shot mode .....	34	Morphing a photo.....	44
Using continuous shot mode ....	35	Spotlighting a photo .....	45
Using a frame shot mode.....	35	Editing your videos.....	45
Taking a panoramic shot .....	35	Trimming the length of your video .....	45
Using the advanced settings .....	36	Merging two videos together.....	45
Changing the image size.....	37	Merging a photo with a video .....	46
Choosing a colour tone.....	37	Adding text to a video.....	46
Viewing your saved photos.....	38	Overlaying a photo.....	46
Setting a photo as a wallpaper or contact image .....	38	Adding a voice recording.....	47
Video camera .....	39	Adding a soundtrack to your video .....	47
Shooting a quick video .....	39	Changing the speed of your video .....	48
After you've shot your video .....	39	Adding a dimming effect .....	48
Adjusting the brightness.....	39	Multimedia.....	49
Using the advanced settings .....	39	Images.....	49
Changing the video size .....	40	My images option menus .....	49
Choosing an effect tone .....	41	Sending a photo.....	49
Watching your saved videos .....	41	Using an image .....	50
Your photos and videos .....	42	Organising your images .....	50
Editing photo album options ....	42	Deleting an image .....	50
Editing video album options .....	42	Moving or copying an image.....	50
Adjusting the volume when viewing a video.....	42	Editing an image .....	51
Capturing an image from a video.....	42	Marking and unmarking images.....	51
Sending a photo or video from the album .....	43	Checking your memory status .....	51
Viewing your photos as a slide show .....	43	Sounds .....	51
Setting a photo as a wallpaper .....	43	Using a sound.....	51
Editing your photos.....	44	Videos.....	52

# Contents

Watching a video.....	52	Editing the channels .....	58
Using options while video is paused.....	52	Resetting channels .....	58
Sending a video clip.....	52	Listening to the radio .....	59
Using a video clip as a ringtone.....	52	Using voice recorder .....	59
Using the video options menu.....	52	Sending the voice recording.....	59
Games and Applications.....	53	<b>Get organised</b>	
M-Toy menu .....	53	Organiser.....	60
Playing a game.....	53	Adding an event to your calendar.....	60
Using the games options menu.....	53	Changing your default calendar view .....	60
Flash contents .....	54	Adding an item to your to do list.....	60
Viewing an SWF/SVG file.....	54	Sharing a to do item.....	61
Using options viewing the SWF/SVG file.....	54	Adding a memo.....	61
Documents .....	54	Tools .....	62
Transferring a file to your phone .....	54	Setting your alarm .....	62
Viewing a file.....	55	Using your calculator.....	62
Others.....	55	Using the stopwatch.....	62
Movie maker .....	55	Converting a unit .....	63
Creating a movie .....	55	Adding a city to your world time .....	63
Music.....	55	PC Sync.....	64
Playing a song.....	56	Installing LG PC Suite on your computer .....	64
Using options while playing music .....	56	Connecting your phone and PC.....	64
Creating a playlist.....	56	Backing up and restoring your phone's information.....	64
Editing a playlist .....	57	Viewing your phone files on your PC .....	65
Deleting a playlist .....	57	Synchronising your	
Using the radio.....	57		
Searching for stations.....	58		

contacts .....	65	Changing your screen settings.....	74
Synchronising your messages.....	65	Personalising your profiles.....	74
Synchronising your music.....	65	Changing your phone settings.....	75
Using your phone as a mass storage device .....	66	Using Date & Time.....	75
PIN for DivX connection .....	66	Changing your other settings.....	75
		Changing security settings .....	76
		Using memory manager.....	76
		Using flight mode.....	76
<b>The web</b>		<b>Accessories.....</b>	<b>77</b>
Browser .....	68	<b>Network service .....</b>	<b>78</b>
Accessing the web .....	68	<b>Technical data .....</b>	<b>78</b>
Adding and accessing your bookmarks.....	68	<b>Guidelines</b>	
Saving a page .....	69	Guidelines for safe and efficient use .....	80
Accessing a saved page .....	69		
Viewing your browser history .....	69		
Using RSS reader .....	69		
Adding the Feed.....	70		
Updating the RSS reader .....	70		
Changing the web browser settings .....	70		
The web .....	71		
Using your phone as a modem .....	71		
Using Bluetooth.....	71		
Sending and receiving your files using Bluetooth.....	72		
Pairing with another Bluetooth device .....	73		
Using a Bluetooth headset .....	73		
<b>Settings</b>			

## Getting to know your phone





### Charger, USB Cable, Handsfree connector

**TIP:** To connect the USB cable, wait until the phone has powered up and has registered to the network.



### Side keys

- **When the screen is idle:** volume of ring tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
  - **Short press:** controls the volume.
  - **Long press:** move to the next or previous music file.
- **Touch screen button:** turn the LCD into a touch screen to access your files.
- **Opens the multitasking menu**
- **Capture button**

01

02

03


04

05

06

07


08

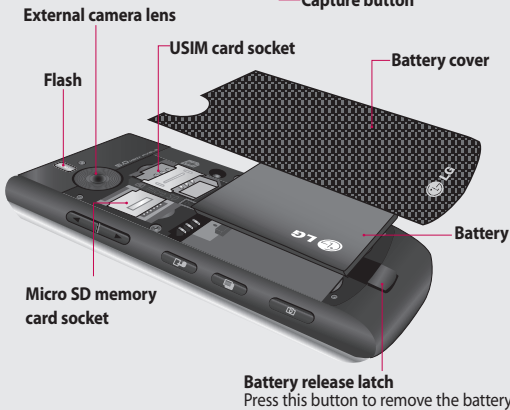

# Installing the USIM and battery

## 1 Remove the battery cover

Press and hold down the battery release button at the top of the phone and lift off the battery cover.

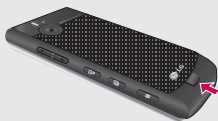

## 2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.




**WARNING:** Do not use your fingernail when removing the battery.

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## 3 Install the USIM card

Slide the USIM card into the USIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the USIM card, pull it gently in the reverse direction.

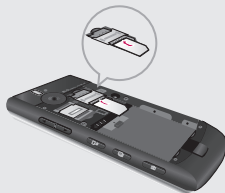


#### 4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



#### 5 Charging your phone

Slide back the cover of the charger socket on the side of your KF750. Insert the charger (with the arrow to the back of the handset) and plug into a mains electricity socket. Your KF750 will need to be charged until a message reading "Battery full" appears on screen.

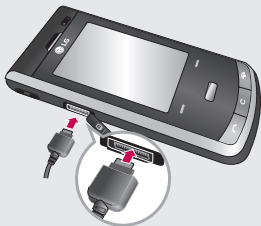

01

02

03

04

05

06

07

08

## Memory card

### Installing a memory card

You can expand the memory available on your phone using a memory card. The KF750 will support up to a 4GB memory card.

**TIP:** A memory card is an optional accessory.


- 1 Remove the battery cover as before.
- 2 Lift the memory card cover and insert a micro SD card with the gold contact area facing downwards. Close the memory card cover so that it clicks shut.



- 3 Replace the battery cover.

### Formatting the memory card

If your memory card is already formatted, you can begin using it straight away. If your card isn't formatted, you will need to do so.

- 1 From the standby screen press  then select **Settings**.
- 2 Select **Memory manager** then choose **External memory**.
- 3 Select **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

**TIP!** To change your default storage destination, open **Memory manager** from the Phone settings menu and select **Primary storage settings**.

**NOTE:** If your memory card has existing content it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

01

02

03

04

05

06

07

08

Setup

13

## Menu map



### Games & apps

- 1 M-Toy
- 2 My games & apps
- 3 Settings



### Calling

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- \* Video call settings



### Organiser

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



### Multimedia

- 1 Touch media
- 2 Camera
- 3 Video camera
- 4 Music
- 5 FM radio
- 6 Voice recorder
- 7 Media editor
- 8 Movie maker



### Messaging

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



### My stuff

- 1 My images
- 2 My sounds
- 3 My videos
- 4 Games & Apps
- 5 Flash contents
- 6 Documents
- 7 Others
- 8 My memory card



### Google

- 1 Search
- 2 Mail
- 3 Maps
- 4 Blogger
- 5 You Tube
- 6 Upload History



### Tools

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time
- 7 SIM service



### Connectivity

- 1 Bluetooth
- 2 Server sync
- 3 USB connection mode
- 4 TV out
- 5 PIN for DivX connection



### Contacts

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial numbers
- 6 Own number
- 7 My business card
- 8 Settings



### Browser

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



### Settings

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profile
- 7 Access points
- 8 Packet data conn.
- 9 Security
- 0 Memory manager
- \* Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08

## Your standby screen

Whenever your KF750 isn't in use it will return to your standby screen. From here you can access menu options, make a quick call and change your profile - as well as many other things.

### Touch screen tips

If you press the touch screen button on the right-hand side of the phone the screen will switch to an interactive touch screen keypad.

Press and hold the touch screen button from the standby screen to enter a further multimedia menu.

To select an item, touch the icon on the touch screen. Your KF750 will vibrate slightly when it recognises that you've touched an option.

- There's no need to press too hard as the touchscreen is sensitive enough to pick up on a light touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Don't cover the phone with a case or cover, as the touch screen will not work with any material covering it.

- The touch pad below the screen can be used as a four way arrow pad to navigate you through the phone menus.

**TIP!** Use the touch screen for fast and easy access to your music, Photo, M-Toy, Document and FM radio.



Touch pad

**NOTE:** When the screen light goes off, you can press the camera key on the right hand side of the phone to restore the standby screen.

#### Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as shown below.



Please do not cover the antenna area with your hand during a call or when using a Bluetooth connection. It may reduce signal quality.

### The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Battery empty

Icon	Description
	New text message
	New email
	An alarm is set
	Normal profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	3G available

01

02

03

04

05





06

07

08

## Calls

### Making a voice call


- 1 Enter the number including the full area code.  
To delete a digit press .  
To delete all digits press and hold .
- 2 Press  to make the call.
- 3 Press  or close the handset to finish the call.

### Making a video call

You can make a video call in a 3G-covered service area if the user you are calling also has a 3G video phone in a 3G-covered service area. You can also receive video calls. To make a video call, do the following.



- 1 Enter the phone number, as before.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key **Options** and select **Make video call**. You will be notified that you will need to close other applications to make the video call.

**NOTE:** The video call may take some time to connect. Please be patient. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.


- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

### Making a voice/video call from Contacts


It's easy to call anyone whose number you have stored in your Contacts.

- 1 Press the down key on the navigation touch pad to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.
- 4 Press  to finish the call.

## Making international calls

- 1 Press and hold **0 9** for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

## Answering and rejecting a call


When your phone rings press the  hard key to answer the call.

Press Silent to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting!

Press the End key to reject the incoming call.



## Speed dialling

You can assign a frequently-called contact to a speed dial number.


- 1 Press  and select **Contacts**.
- 2 Select **Speed dials**.
- 3 Your Voicemail is set to speed dial 1. Select any other number to assign it to a speed dial contact.

- 4 Your address book will open. Select the contact you'd like to assign to that number.

To call a speed dial number:

- 1 Press the assigned number then press the send key , or .
- 2 Press and hold the assigned number until the contact appears on screen.

## Making a second call

- 1 During your initial call, press **OK**, then **Options**, and select **Add new call**.
- 2 Dial the number or search your contacts (see page 18 for details on how to make a call from Contacts).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 Select **Swap** to change between the calls.
- 6 To end one or both calls select **Options** → **End** followed by **All** or **Active**.

**NOTE:** You will be charged for each call you make.

01

02

03

04

05

06

07


08

## Calls

### DTMF tones

DTMF allows you to use numerical commands to navigate menus within automated messages. DTMF is switched on as default.

### Viewing your call logs

Press , then select **Calling** →

#### Call logs.


Choose to view:

**All calls** - View a complete list of all of your dialled, received and missed calls.

**Dialled calls** - View a list of all the numbers you have called.

**Received calls** - View a list of all the numbers that have called you.

**Missed calls** - View a list of all the calls you have missed.

Press , select **Calling**.

Before Calling you can also choose to view:


**Call durations** - View the duration of all your sent and received calls.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**Call costs** - View the charges applied to your dialled numbers (this service is network-dependant. Some operators are unable to support it).

**TIP!** From any calls list, touch the left soft key and **Delete All** to delete all the recorded items.

### Using call divert

- 1 Press , then select **Calling**.
- 2 Select **Call divert** and choose **Voice calls** and/or **Video calls**.
- 3 Choose when to divert all calls; when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Select **Activate**.

**NOTE:** Charges may be incurred for diverting calls. Please contact your network provider for details.


**TIP!** To turn off all call diverts, choose **Deactivate all**.

## Using call barring

- 1 Press , select **Calling**.
- 2 Select **Call barring** and choose **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
  - All outgoing**
  - Outgoing international**
  - Outgoing international calls except home country**
  - All incoming**
  - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

**TIP!** Select **Fixed dial number** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

## Changing the common call settings

- 1 Press , then select **Calling**.
- 2 Select **Common settings**. From here you can amend the settings for:
  - Call reject** - Select **On** or **Off** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
  - Send my number** - Choose whether your number will be displayed when you call someone.
  - Auto redial** - Choose **On** or **Off**.
  - Answer mode** - Choose whether to answer the phone by pressing the **Send** key, by pressing any key, or by opening the slide.
  - Minute minder** - Select **On** to hear a tone every minute during a call.
  - BT answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Handsfree** or **handset**.

01

02

03

04

05

06

07

08


## Calls

**Save new number** - Saves numbers you use that aren't already stored in Contacts.

**Slide close setting** - Select **End call** to be able to disconnect a call by closing the slide.

**Voice clarity**- Select **Yes** to listen to the voice clearly.

### Changing your video call settings

- 1 Press , then select **Calling**.
- 2 Select **Video call settings**.
- 3 Determine whether to **Use private picture** and/or, switch on the **Mirror**.

# Contacts

## Searching for a contact

There are two ways to search for a contact:

### From the standby screen


- 1 From the standby screen touch the down key on the touch pad to open the address book.
- 2 Press the number key corresponding to the first letter of the contact you'd like to view. So, for 'Home' press **4** (GHI) twice.

**TIP!** You can search by group by touching the left soft key and selecting **Search by group**. This will bring up a list of all your groups.

### From the main menu

- 1 Select **Contacts**.
- 2 Select **Search** and enter the first few letters of the contact you'd like to find using the keypad.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

## Adding a new contact

- 1 Press  and select **Contacts**.
- 2 Select **Add new**.
- 3 Choose whether to save the contact to your **Handset** or **USIM**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 5 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**.
- 6 Add up to two email addresses.
- 7 You can assign the contact to a group. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.
- 8 You can also add a **Homepage, Home address, Company name, Job title, Company address** and a **Memo**.

**TIP!** You can create customised groups for your contacts. See **Creating a group** on page 24.

01

02

03

04

05

06

07

08

## Contacts

### Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page 23.
- 2 Press the left soft key to open the list of options.  
From here you can:

**Send message** - Send a message or an email to the contact. See page 27 for details on how to send messages.

**Send business card** - Send the contact's details to another person as a business card. Choose to send as a **Text message, Multimedia msg, Email** or via **Bluetooth**.

**Make voice call** - Call the contact.

**Make video call** - Make a video call to the contact.

**Edit** - You can edit the contact.

**Mark/Unmark** - Mark your contacts for multiple selection.


**Search by** - You can search the entry by number or group.

**Save to USIM/ Handset** - Choose to move or copy to the USIM card or handset (depending on where you originally saved the contact).

**Delete** - Delete the contact.

**Text input** - You can set the text input method.


### Creating a group

- 1 Press  and select **Contacts**.
- 2 Select **Groups** and touch the left soft key.
- 3 Select **Add new group**.
- 4 Enter a name for your new group.
- 5 Touch **Done**.

**NOTE:** If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

**TIP!** You can edit an existing group by highlighting it and touching the left soft key. Choose to **Add a member** to the group from your contacts, assign a **Group ringtone, Rename** the group or **Delete** the group.

## Using service dial numbers

You can view the list of Service Dial Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voicemail numbers. After selecting a service number, press  to dial that service.

## Viewing your own number


Select **Own number** in the Contacts menu to view your number.

## Creating a business card

You can create your own business card by selecting **My business card**, then **Add**. Enter your name, number, email address and image.

## Changing your contact settings

You can adapt your contact settings so that your address book works according to your preferences.

- 1 Press  and select **Contacts**.
- 2 Select **Settings**. From here you can adjust the following settings:

**Contact list settings** - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset only** or **USIM** only. You can also select to show the first name or last name of a contact first, and to show a contact picture.

**Synchronise contacts** - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page 65.

**Copy** - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one by one, or all together.

**Move** - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to. If you move a contact from the USIM to the handset it will be deleted from the USIM memory.

**Send all contacts via Bluetooth** - Send all contacts information to another handset by Bluetooth.

**Back up contacts** - See **Backing up and restoring your phone's information** on page 64.

01

02

03

04

05

06

07

08

## Contacts

**Restore contacts** - See **Backing up and restoring your phone's information** on page 64.

**Clear contacts** - Delete all your contacts.


**Memory info.** - You can check how much memory you've got left on your handset or your USIM.

# Messaging

## Messaging

Your KF750 combines SMS, MMS and email into one intuitive and easy to use menu.

### Sending a message

- 1 Select **Messaging** then choose **Create new message**.
- 2 Choose **Message** to send an SMS or MMS. A new SMS will open.
- 3 Select **Options**, then **Insert**, to add an image, video, sound or subject.
- 4 Press  **Send**. Enter the phone number or select **Contacts** to open your contacts list. You can add multiple contacts.



**WARNING:** You will be charged per 160 character text message for each person that you send the message to.





**WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.


## Entering text

There are two ways to enter text:

T9 predictive and Abc manual.

To switch between text entry methods, press and hold the  key when you have a blank message open.

To change between upper, lower and title case press the  key.

To delete a character use the  hard key below the screen.

To enter a symbol select **Options** and **Insert**.

### T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

## Messaging

### Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press **4** twice, **3** twice, **5** three times, **5** three times again, then **6** three times.

### Setting up your email

You can stay in touch on the move using email on your KF750. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Select **Messaging** then select **Settings**.
- 2 Select **Email**, then **Email accounts**.
- 3 You can now choose how your account works:
  - Title** - Enter a name for this account.
  - My name** - Enter your name.
  - Username** - Enter the account username.
  - Password** - Enter the account password.
  - Email address** - Enter the account email address.
  - Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the account details.

**Incoming mail server** - Enter the account details.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

**Save sent mail into** - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

**Access point** - Choose your Internet access point.

**Auto retrieve** - Choose whether to fetch your new emails automatically.

**Advanced settings** - Choose whether to use the advanced settings.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

Now your account is set up, it will appear in the list of accounts in your Email folder.

### Retrieving your email

You can automatically or manually check your account for new email. See 'Changing your email settings' to check automatically.

To check manually:

- 1 Select **Messaging** then **Mailbox**.
- 2 Select the account you want to use.
- 3 Choose **Retrieve** and the phone will connect to your email account and retrieve your new messages.

### Sending an email using your new account

- 1 Select **Messaging**, then choose **Create new message**.
- 2 Choose **Email** and a new email will open.

3 Use **Options** to enter the recipient's address and to write your message. Use **Insert** to attach images, videos, sounds or other file types.

4 Select **Send** and your email will be sent.

**TIP!** You can email Word, Excel, Power Point and PDF documents to your KF750 so you can review them on the move.

### Changing your email settings

You can adapt your email settings so that it works according to your preferences.

1 Select **Messaging** then open **Settings**.

2 Select **Email** and then you can adapt the following settings:

**Allow reply email** - Choose to allow the sending of 'read confirmation' messages.

**Request reply email** - Choose whether to request 'read confirmation' messages.

**Retrieve interval** - Choose how often your KF750 checks for new email messages.

01

02

03

04

05

06

07

08

## Messaging

### **Include message in Fwd & Reply** -

Choose whether or not to include the original message.

**Include attachment** - Choose whether or not to include the original attachment.

### **Auto Retrieval in Roaming** -

Choose whether or not to automatically retrieve your messages when abroad.

**New email notification** - Choose whether or not to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

### Message folders

**Inbox** - All the messages you receive are placed into your inbox. Here you can read, reply to and forward your messages.

**Mailbox** - All emails you receive are placed into your Mailbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far here.

**Outbox** - This is a temporary storage folder for messages that are being sent.

**Sent items** - All the messages you send are placed into your Sent items folder.

### Managing your messages

- 1 Select **Messaging** then **Inbox**.
- 2 Select Options and then choose to:
  - Reply** - Send a reply to the selected message.
  - Forward** - Send the selected message on to another person.
  - Call** - Call the person who sent you the message.
  - Delete** - Delete the message.
  - Create new message** - Open a new, blank message or email.
  - Mark/Unmark** - Mark your messages for multiple deletion.
  - Copy & Move** - Copy or move the message to your phone, USIM or My folders.
  - Filter** - View your message by type. This will group SMS separately from MMS.

**Message info.** - See additional information for the message, including the time it was sent.

If you see the message **No space for USIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

### Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 Select **Messaging** then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then select Options to **Add new, Edit, Delete** or **Delete all** templates.

### Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Select **Messaging** then choose **Emoticons**.
- 2 Select Options to **Add new, Edit, Delete** or **Delete all** emoticons.

### Changing your text message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Validity period** - Choose how long your message is stored at the message centre.

**Message types** - Convert your text into **Voice, Fax, X.400** or **Email**.

**Character encoding** - Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.

01

02

03

04

05

06

07

08

# Messaging

**Send long text as** - Choose to send as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Your KF750 message settings are pre-defined so that you can send messages immediately. If you'd like to change the settings, you can do so as follows.

Select **Messaging**, then choose **Settings**, then **Multimedia message**.

You can make changes to:

**Retrieval mode** - Choose **Home** or **Roaming** network. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether or not to download them in full.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read reply.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Delivery time** - Deliver your message at a specific time.

**Multi msg. centre** - Enter the details for your message centre.

## Changing your other settings

Select **Messaging**, choose **Settings** then:

**Info. service** - Choose your reception status, language and other settings.

**Service message** - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.


## Camera

### Taking a quick photo

- 1 Press and hold the capture button on the right-hand side of the handset and the camera's viewfinder will appear on the screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Slightly depress the capture button and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject of your photo in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button fully.

### After you've taken your photo

Your captured photo will appear on the screen. The name of the image runs along the bottom of the screen together with five icons down the right side.

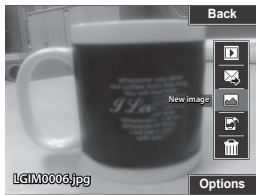

**Back** Go back to previous menu.

- View the pictures you have taken in your Album.
- Send the photo as an MMS, Email, via Bluetooth or Blog This. See page 27 for **Sending a message**, page 72 for **Sending and receiving your files using Bluetooth**.
- Take another photo straight away. Your current photo will be saved.
- Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.
- Delete the photo you have just taken. The viewfinder will reappear.

**TIP!** In camera mode select the Play icon to open the photo album. See page 38, **Viewing your saved photos**, for details.

01

02

03

04

05

06


07

08

# Camera

## Using the flash



Flash is set to Auto by default, but there are other options.

- 1 Select  from the top right corner of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
  - On** - Your camera will always flash when taking a picture.
  - Auto** - Your camera will assess whether or not the flash is necessary for a good picture.
  - Off** - The camera will never flash. This is useful if you want to save battery power. Select the flash option you'd like to use.
- 3 When you've made your selection the flash menu will automatically close, ready for you to take your picture, and the flash icon in the viewfinder will change according to your chosen flash mode.

**NOTE:** Whenever you exit the camera, the flash setting will revert to Auto mode. You'll need to switch the flash back on if you still need it when you reopen the camera.

## Adjusting the brightness

Contrast defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select **Brightness** in **Settings**.
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier image or towards  for a higher contrast, sharper image.

## Choosing a shot mode

- 1 Select **Settings** to view the available shot modes.
- 2 Choose from the five options:
  - Normal** - This is the default shot type. The photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 33.
  - Continuous shot** - This enables you to take nine shots automatically in very quick succession. See **Using continuous shot mode** below for details.
  - Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just to

decorate their surroundings.

**Panorama** - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view. See **Taking a panoramic shot** below for more details.

**Music video shot** - This shot type allows to take a shot with music or voice.

### Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the screen.
- 4 Select the shot you want to keep by selecting the thumbnail.

### Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

### Taking a panoramic shot

Capture life as it appears using panoramic shot. The camera will let you take three photos, all aligned, and combine them into one image so that your wide angle view becomes a panoramic photo.

- 1 Select **Panorama**.
- 2 Take the first photo as normal. A ghosted version of the right side of the image will appear in the viewfinder.
- 3 When you take the second and third photos, line the ghost of the previous image up with the next image in the viewfinder.
- 4 In phone photos are saved as a one panoramic image only.

01

02

03

04

05

06

07

08

## Camera

**NOTE:** Due to the image size the panoramic photo will appear slightly distorted in the Album view.

### Using the advanced settings

From the viewfinder select **Settings**.

**Size** - Change the size of the photo. See **Changing the image size** on page 37.

**Scene mode** - Set the the camera to adjust for the environment. Choose from **Auto, Portrait, Landscape, Night, Beach, Sports, and Party**.

**Brightness** - Set the brightness of the image in the viewfinder of the camera.

**Effect** - Choose a colour tone to apply to the photo you're taking. See **Choosing a colour tone** on page 37.

**White Balance** - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Daylight, Cloudy, Illuminate and Indoors**.

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds, 5 seconds or 10 seconds**. Great for a group photo that you want to be part of too!

**Shot mode** - See page 34.

**ISO** - ISO determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be to light. This is useful in darker conditions when the flash can't be used. Choose an ISO value from **Auto, ISO 100, ISO 200, ISO 400 or ISO 800**.

**Quality** - Super fine/ Fine /Normal

**Memory in use** - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Focus mode** - Set the camera to focus automatically.

**Sound** - Select one of three different shutter sounds.

**NOTE:** Always select **Save** after selecting a new setting to implement the changes you've made.

**TIP!** When you exit the camera, all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example, colour tone and ISO. Check them before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you'll be able to see the image change in preview behind the settings menu. Remember to select **Save** before exiting to apply any changes.

## Changing the image size

The more pixels, the larger the file size, which in turn means they will take up more of your memory. If you want to fit more pictures on your phone or memory card you can alter the number of pixels to make the file size smaller.

- 1 From the viewfinder select **Settings** in the bottom left corner.
- 2 Select **Size**.
- 3 Select a pixel value from the six numerical options (**5M: 2592x1944**, **3M: 2048x1536**, **2M: 1600x1200**, **1M: 1280x960**, **640x480**, **320x240**) or choose the preset:  
**Contact** - This sets the camera to take a photo the perfect size to be added to a phone contact.
- 4 Select the size option you'd like to use and press **Select** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

## Choosing a colour tone

- 1 From the viewfinder, select **Settings**.
- 2 Select **Effect**.
- 3 There are twelve colour tone options: **Off**, **Black & White**, **Negative**, **Sepia**, **Blue**, **Emboss**, **Sketch**, **Purplish**, **Bluish**, **Monochrome**, **Edgemap**, or **Posterize**.
- 4 Choose the colour tone you'd like to use and press **Select**.

01

02

03

04

05

06

07

08

## Camera

**5** When you've made your selection, the colour tone menu will automatically close, ready for you to take your picture.

**TIP!** You can change a photo taken in colour to black and white or sepia, taken but you cannot change a picture taken in black and white or sepia back to colour.

**NOTE:** Contact images can only be added to contacts saved to your phone, not your SIM.

**TIP!** You can also access your photos using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and touch the **Photo** icon. You can then scroll through your pictures by touching the screen.

### Viewing your saved photos


- 1** You can access your saved photos from within the camera mode and from the Album at the top of the icon menu.
- 2** Your album will appear on the screen.
- 3** Highlight the photo you want to view to bring it to the front of the album.
- 4** Select the photo to open it fully.

### Setting a photo as a wallpaper or contact image

From your image album, select an image and **Use as** to use the image as a wallpaper or contact image.





## Video camera


### Shooting a quick video

- 1 Move the camera mode switch to  and press the centre button. The video camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the capture button once to start recording.
- 4 **REC** will appear at the bottom of the viewfinder. Press the capture button again to stop recording.

### After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.




-  View your video album.
-  Play the file.
-  New video is played.
-  Send the video as an MMS, as an Email, via Bluetooth or YouTube. See page 27 for **Sending a message**, or page 72 for **Sending and receiving your files using Bluetooth**.

 Delete the video you have just made. The viewfinder will reappear.

**TIP!** Select the album icon to open the video album. See **Watching your saved videos** on page 41 for details.

### Adjusting the brightness

Contrast defines the difference between light and dark in an Video. A low contrast Video will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Select .
- 2 Slide the contrast indicator along the bar, towards  for a lower contrast, hazier Video, or towards  for a higher contrast, sharper Video.

### Using the advanced settings

From the viewfinder select **Settings**.

**Size** - Change the size of the video. See **Changing the video size** on page 40.

**Scene mode** - Set the Video for adjusting the environment. Choose from **Auto**, **Portrait**, **Landscape**, **Night**, **Beach**, **Sports**, and **Party**.

01

02

03

04

05

06

07

08

## Video camera

**Effect** - Choose an effect tone to apply to the video you're making. See **Choosing an effect tone** on page 41.

**White Balance** - The white balance ensures that any white in your Videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Indoors**, **Illuminate** and **Cloudy**.

**Music video shot** - This shot type allows to take a shot with music or voice.

**Recording speed** - Record the video using **Normal**, **Slow video**, **Fast video**.

**Duration** - Select the maximum length of the recording.

**Memory in use** - Choose whether to save your videos to the **Handset** memory or to the **External** memory.

**Hide icons** - Hide the icons to the side of the viewfinder.

**Voice** - Choose **Mute** to record a video without sound.

**NOTE:** Always touch **Save** after selecting a new setting to implement the changes you've made.

**TIP!** When you exit the video camera all your settings will return to default, except Video Size & Video Quality. Any non-default settings you require will need to be reset, for example colour tone and white balance. Check them before you shoot your next video.

### Changing the video size

The more pixels, the larger the file size, which in turn means they will take up more memory. If you want to fit more videos onto your phone you can alter the number of pixels to make the file size smaller.

- 1 Select **Size** from the settings menu.
- 2 Select a pixel value from the four options:

**640x480(W)** - The highest quality wide screen option.

**320x240** - Smaller Video size, therefore smaller file size. Great for saving on memory space.

**176x144** - Smallest Video size and therefore a smaller file size.

**16:9 Wide** - Wide screen option.

- 3 Select the size option you'd like to use and press **Save** to implement your changes. The settings menu will automatically close, ready for you to shoot your video.

**NOTE:** When you view your videos, playback speed is 30 frames per second, with the exception of 120 fps where playback is at 15 frames per second.



**WARNING:** The great editing software on your LG KF750 is compatible with all video types except 640x480. Don't record in this format if you plan to edit your video.

### Choosing an effect tone

- 1 Select **Settings** and choose **Effect**.
- 2 There are twelve colour tone options: **Off, Black & White, Negative, Sepia, Blue, Emboss, Sketch, Purplish, Bluish, Monochrome, Edgemap** and **Posterize**.
- 3 Choose the colour tone you'd like to use and press **Select**.

- 4 When you've made your selection, the colour tone menu will automatically close, ready for you to shoot your video.

**TIP!** You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia to colour.

### Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

01

02

03

04

05

06

07

08

## Your photos and videos

### Editing photo album options

You can view and edit your images using the Options menu in the photo album.

**View** - View the image.

**Send** - Send the image to a friend.

**Delete** - Delete the image.

**Use as** - Set the image as a wallpaper/ contacts image/start-up or shut down image.

**Slide show** - Set the image as a slide show.

**Edit** - Edit the image.

**Print** - Print an image file via PictBridge or Bluetooth.

### Editing video album options

You can view and edit your videos using the Options menu in the video album.

**Play** - Play the video.

**Send** - Send the video to a friend.

**Delete** - Delete the video.

**Use as** - Set the video as a ringtone.

**Rename** - Rename the video.


**Edit** - Edit the video.

**TIP!** You can easily delete a photo or video. Select the photo or video, then select **Options** and choose **Delete**.


### Adjusting the volume when viewing a video

To adjust the volume of the audio on a video, use up and down on the touch pad.


### Capturing an image from a video

- 1 Play the video you would like to capture an image from.
- 2 Press  to pause the video on the frame you'd like to convert to an image and open the options menu.
- 3 From the options menu select **Capture**.
- 4 The image will appear on the screen with its assigned image name.
- 5 Select **OK**.
- 6 Select **Delete** to return to the album.

- 7 The image will be saved in the My files folder and will appear in the album (You need to exit the album and then re-open for this to appear).

 **WARNING:** Some functions may not work properly if the multimedia file has not been recorded on the phone.

### Sending a photo or video from the album

- 1 Select a photo or video to open it. If you select a video, press  when it starts to play.
- 2 Select the left soft key to open the options menu.
- 3 Select **Send** and choose how you would like to send the video or photo: **Message, Email or Bluetooth**.
- 4 The chosen messaging application will open so you can send the video or photo.

**NOTE:** The photo or video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS at all, in which case you can choose one of the other sending options.

### Viewing your photos as a slide show

Slide show mode will show all the photos in your album one at a time as a slide show.

- 1 Select the photo you would like to begin the slide show.
- 2 Press the left soft key to open the Options menu.
- 3 Select **Slide show** and it will begin.

### Setting a photo as a wallpaper

- 1 Select the photo you would like to set as a wallpaper.
- 2 Select the left soft key to open the Options menu.
- 3 Select **Use as - Wallpaper**.

01

02

03

04

05

06










07

08

# Your photos and videos

## Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and select **Options**.
- 2 Select **Edit**.
- 3 Select an icon to adapt your photo:
  -  Rotate the image left or right.
  -  Change the size of the photo.
  -  Insert an icon to the image.
  -  Clip the image to 640X480, 320X240, 176X146.
  -  Distort the image.
  -  Change the colour tone to Black and white, Sepia, or Colour negative.
  -  Change or add a frame to the image.
  -  Reverse the picture to a mirror image.
  -  Change the image using morphing, fun mirror, or spotlight.

## Adding an effect to a photo

- 1 From the editing screen, select **Special effect** or **Frame effect**.

- 2 Choose to apply any of the two options to the photo:
  - Special effect** - Change the colour of a photo to **Black and white**, **Sepia** or **Colour Negative**.
  - Frame effect** - Add a frame to your photo. Select the desired frame type. Select **OK** to have the chosen frame superimposed over your photo.
- 3 To undo an effect simply select **Undo**.

**TIP!** You can use more than one effect on a photo, except for a colour effect.

## Morphing a photo

Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect.

- 1 From the editing screen select **More** and then **Morphing**.
- 2 If the face in the picture is not detected, a pop up message **Face is not detected** will be displayed and the morphing effect will be cancelled.

- 3 If the face is detected the first morphing style will be applied to the picture.
- 4 Select the morphing style you would like to use on the photo.
- 5 Select the intensity of morphing.
- 6 Select **OK** to apply the changes.

### Spotlighting a photo

- 1 Select the desired location on the image.
- 2 Select the size of spotlight.
- 3 Select **OK** to apply the changes.

**TIP!** Use the Fun mirror to copy the left side of the image over the right side to make fun pictures.

**TIP!** You can undo more than one effect on a photo, except for a resize. If any effect is already applied before the resize effect, the applied and resize effects will be saved. The undo count will then be reset.

### Editing your videos

Editing features are available for all video types except 640x480. Don't record in this format if you plan to edit your video.

### Trimming the length of your video

- 1 Choose the video you'd like to edit, and touch **Options**.
- 2 Select **Edit** and choose **Trim**.
- 3 Select **Start** and **End** to mark the new start and end points.

### Merging two videos together

- 1 Choose the first video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge to and choose **Select**.
- 4 Select **Effect** to choose how the videos merge together: **None**, **Fade out**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board** or **Dissolve**.

01

02

03

04


05

06


07

08

## Your photos and videos

- 5 Press  to save the new merged video. Choose to save over the original file or as a new file.
- 6 Repeat these steps to merge more videos.

### Merging a photo with a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and choose **Select**.
- 4 Select and slide the photo to merge it to the end or the beginning of the video.
- 5 Select **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board** or **Dissolve**.
- 6 Press . Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

### Adding text to a video

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and press **Save**.
- 4 Press **Start** and mark when you'd like the text to appear.
- 5 Select the area of the screen you'd like the text to appear in.
- 6 Select **OK** to mark when you'd like the text to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more text.

### Overlaying a photo

- 1 Choose the video you'd like to edit, and select **Options**.
- 2 Select **Edit** and choose **Image overlay**.

- 3 The My images folder will open. Choose the photo you would like to overlay your video and choose **Select**.
- 4 Select **Start** and mark when you'd like the photo to appear.
- 5 Select the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.
- 6 Select **OK** to mark when you'd like the photo to disappear.
- 7 Select **Save** to save it. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more photos.

### Adding a voice recording

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Voice recording**. The quality of the original audio will be affected by adding a voice recording.
- 3 Select **Yes** to continue.
- 4 Press **Play** to view your video. When you get to the part you'd like to record your voice over, press **Pause**.
- 5 Press **End** to stop recording.
- 6 Select **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 7 Repeat these steps to add more voice recordings to the video.

### Adding a soundtrack to your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video and press **Select**.
- 4 The original audio recording of your video will be erased.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07


08

# Your photos and videos

## Changing the speed of your video

- 1 Choose the video you'd like to edit and select **Options**.
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.
- 4 Choose to save over the original file or as a new file.

## Adding a dimming effect

- 1 Open the video you'd like to edit, select  and select **Options**.
- 2 Select **Edit** and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

## Multimedia

You can store any multimedia files on your phone's memory in My stuff so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

### Images

**My images** contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

### My images option menus

The options available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Sort by Grid (List) view** and **Memory manager** options are available for default images.

**Send** - Send the image to a friend.

**Use as** - Set the image to appear on your phone at certain times.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete an image.

**Mark/Unmark** - Select multiple files.

**Print** - Print an image via PictBridge or Bluetooth®.

**File** - Change the name or view the information for the file.

**Slide show** - Start a slide show.

**Sort by** - Sort images into a specified order.

**Grid view/ List view** - View each image in grid or list type.

**Memory manager** - View the memory status.

### Sending a photo

- 1 Select **My stuff** then choose **My images**.
- 2 Select the photo you want to send and press **Options**.

01

02

03

04

05

06

07

08

## Multimedia

- 3 Select **Send** and choose from **Message, Email, Bluetooth** or **Blog**.
- 4 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

### Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Select **My stuff** then **My Images**.
- 2 Select the image and touch **Options**.
- 3 Select **Use as** and choose from:
  - Wallpaper** - Set a wallpaper for the standby screen.
  - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.
  - Start up image** - Set an image to appear when you switch the phone on.

**Shut down image** - Set an image to appear when you switch the phone off.

### Organising your images

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Sort by**.
- 3 Choose from **Date, Type** or **Name**.

### Deleting an image

- 1 Select **My stuff**, then **My images**.
- 2 Select the image you want to delete and choose **Options**.
- 3 Select **Delete**, then **Yes** to confirm.

**TIP!** To quickly delete any file in My files, highlight it with the cursor and press the **C** key.

### Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Select **My stuff** then **My images**.
- 2 Select an image and select **Options**.
- 3 Select **Move** or **Copy**.

### Editing an image

You can edit the image using the **Options** menu.

- 1 Select **Multimedia** menu.
- 2 Select **Media editor**.
- 3 Select **Image** editor and choose from several options. See page 44 for details.

### Marking and unmarking images

If you want to move, copy, send or delete several images at once, you first need to identify them by marking them with a tick.

- 1 Select **My stuff** then **My images**.
- 2 Select **Options** then **Mark/Unmark**.
- 3 A box will appear to the left of each image. If you select an image, a tick will appear in the box marking it.
- 4 To unmark an image, select the image again so that the tick disappears from the box.

- 5 Once you have marked all of the appropriate images, choose one of the options to apply to all of them.

### Checking your memory status

You can check to see how much of your memory you have used and how much you have remaining.

- 1 Select **My stuff**, then **My images**.
- 2 Select **Options**, then **Memory manager**.
- 3 Choose **Handset memory** or **External memory**.

**NOTE:** If you do not have a memory card inserted, you will not be able to select External memory.

### Sounds

The **My sounds** folder contains the **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

### Using a sound

- 1 Select **My stuff**, then **My sounds**.
- 2 Select **Default sounds** or **Voice recordings**.

01

02

03

04

05

06

07

08

## Multimedia

- 3 Select a sound and press **Play** to listen to it.
- 4 Select **Options** and **Use as**.
- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** and **Shut down sound**.

### Videos

The **My videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

### Watching a video

- 1 Select **My stuff** then **My videos**.
- 2 Select a video and press **Play**.

### Using options while video is paused

Select **Options** while in pause mode and choose from:

**Landscape view** - View the video file in full shot.

**Mute/ Unmute** - Switch the sound on/off.

**Capture** - Capture the frozen frame as a picture.

**Repeat** - Repeat the video file.

**File info.** - View brief details about the file.

**Send** - Send the video in a message, email or via Bluetooth.

**Delete** - Delete the video.

**Use as** - Use as a voice/video ringtone.

### Sending a video clip

- 1 Select a video and press **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**, **You Tube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

### Using a video clip as a ringtone

- 1 Select a video and select **Options**.
- 2 Select **Use as** and choose from **Voice ringtone** or **Video ringtone**.

### Using the video options menu

From the **My videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Use as** - Set a video as your ringtone.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Mark/Unmark** - Select multiple files.

**File** - Edit the file name and view its information.

**Create new folder** - Create a new folder within the My videos folder.

**Sort by** - Sort videos into a specific order.

**Grid view/ List view** - View the options menu by grid or list type.

**Memory manager** - View the memory status.

## Games and Applications

You can download games and applications to your phone to keep you amused when you have time to spare.

## M-Toy menu

You can enjoy six default games:

**Dart, Homerun Derby, Magic Ball, Hammer, Maze and Fishing.**

**About** - View the information for a game.

**Setting** - Set the sound and vibration when activating a game.

**Reset data** - Reset all settings.

**Exit** - Leave the M-Toy menu.

## Playing a game

**1** Select **Games** menu.

**2** Select a game and touch **Launch**.

## Using the games options menu

From the Games and Applications folders, the following options are available:

**Create new folder** - Create a folder within the games and applications menu.

**Sort by** - Sort the games and applications by **Date, Size** or **Name**.

01

02

03

04

05


06

07

08

# Multimedia

**Memory manager** - View the memory status.

**TIP!** You can also access these games using the touch screen. Press and hold the  touch screen button on the right-hand side of the phone and touch the **M-Toy** icon.

## Flash contents

The Flash contents folder contains all of your default and downloaded flash contents.

### Viewing an SWF/SVG file

- 1 Select **My Stuff**, then **Flash contents**.
- 2 Select the file and press **Play**.

### Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

**Play/Pause** - Pause or resume playback.

#### **Full screen/ Landscape view** -

View your SWF/SVG in full screen or landscape view mode (this only appears if you select **Options** without

pausing).

**Mute/Unmute** - Switch the sound on/off.

**Use as wallpaper** - Set the SWF/SVG file as a wallpaper.

**File info.** - View brief details about the file.

## Documents

From the Documents menu, you can view Excel, Powerpoint, Word, text and pdf files.

## Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable. See page 64 for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **OK**.

- The file should appear in your **Documents** or **Others** folder.

## Viewing a file

- Select **My stuff**, then **Documents**.
- Select a document and choose **View**.

## Others


The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

To move a file from Others to Documents:

- Select **My Stuff** then **Others**.
- Select a file and choose **Options**.
- Select **Move**.

## Movie maker

The Movie maker allows you to create an image slide show combined with music.

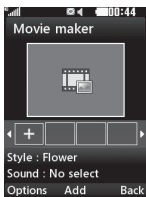

## Creating a movie

- Go to **Multimedia** and select **Movie maker**.
- Select **+** to add an image. Choose the images you want to include then select **Done**.
- Select **Style** menu to choose a movie style.
- Select **Play** to see what you've created.

## Music

Your LG KF750 has a built-in music player so you can play all your favourite tracks. To access the music player, select **Music** from the Multimedia menu. From here you can access a number of folders:

**Recently played** - View all of the songs you have played recently.

01

02

03

04

05

06

07

08

## Multimedia

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - Browse through your music collection by artist.




**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - Listen to your music in a random order.

### Playing a song

- 1 Select **My music**, then **All tracks**.
- 2 Select the song you want to play and choose **Play**.
- 3 Press  to pause the song.
- 4 Touch  (right) to skip to the next song.
- 5 Touch  (left) to skip to the previous song.

### Using options while playing music

Select **Options** and choose from:

**Minimise** - Make the music player screen disappear so that you can continue using your phone as normal.

**Go to my music** - Move the Cursor to the My music folder.

**Repeat** - Repeat the selected track.

**Shuffle** - Listen to your music in a random order.

**Equaliser** - Set the equaliser menu.

**Visualisation** - Select the visual effects.

**Add to playlist** - Add the file to a playlist.

**File info.** - View brief details about the file.


**Send** - Send the song as a message or via Bluetooth.

**Delete** - Delete the song.

**Use as** - Use the song as one of your ringtones.

### Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Select **My music**, then **Playlists**.
- 2 Select **Add**, enter the playlist name and press  **Save**.
- 3 The All tracks folder will be displayed. Select all of the songs that you would like to include in your playlist; a tick will show next to the file name.

To play a playlist, select it and choose **Play**.

**NOTE:** To add a second playlist, select **Options** then **Add new playlist**.

### Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

- 1 Select **My music**, then **Playlists**.
  - 2 Select the playlist.
  - 3 Select **Options**.
- Add new songs** – Add more songs to the playlist. Mark the ones you want and select **Done**.

**File info.** - View the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

**Send** – Send a song as a message or via Bluetooth.

**Remove from list** – Remove a song from the playlist.

**Mark/Unmark** – Select multiple files.

**Use as** – You can set the song as an effect sound.

**Memory manager** - You can view the current status of memory.

### Deleting a playlist

- 1 Select **My music**, then **Playlists**.
- 2 Select **Options** then **Delete** or **Delete all** to delete all of the playlists.

### Using the radio

Your LG KF750 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

**NOTE:** You need to insert your headphones to listen to the radio. Insert them into the same socket as your charger.

01

02

03

04

05

06

07

08

# Multimedia

## Searching for stations

You can tune radio stations by searching for them either manually or automatically. They will be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

### To auto tune:



- 1 From **Music** select **FM radio** then **Options**.
- 2 Select **Auto scan**. The stations found will automatically be allocated to a channel number.

**TIP!** You can access music using the touch screen. Press and hold the touch screen button on the right-hand side of the phone and choose the **FM Radio** or **Music** icon. You can then scroll through and select your music files or the radio functions by touching the screen.

### To manually tune:

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and choose the channel number you want to save the station to.

- 3 Enter the station frequency and touch **Select** to save.

**NOTE:** You can also manually tune into a station by using  (left) and  (right) displayed next to the radio frequency.

## Editing the channels

You may want to move the stations to another channel so that the ones you listen to most frequently are easier to access.

- 1 Select **FM radio** then **Options**.
- 2 Select **Channel list** and select the channel you want to change.
- 3 Either select a station from one of the other channels, or manually tune the channel into the frequency you want.

You can edit each channel by highlighting it and touching **Options**:

**Rename** - Rename the channel.

**Replace** - Set new frequency for the selected channel.

## Resetting channels

- 1 Select **FM radio**, then **Options**.
- 2 Select **Channel list**, then **Options**.

- 3** Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

**TIP!** To improve the radio reception, extend the headset cord, which functions as the radio antenna.

### Listening to the radio

Select **FM radio**, then enter the channel number of the station you would like to listen to.

### Using voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1** Select **Multimedia**.
- 2** Select **Voice recorder** then options and choose from:

**Duration** – Set the recording duration.

Choose from **MMS msg. size, 30 secs, 1 min** or **No limit**.

**Quality** – Select the sound quality. Choose from **Super Fine, Fine** or **Normal**.

**Memory in use** - Check the current status of each memory.

**Go to Voice recordings** – Open the Voice recordings folder in **My sounds**.

- 3** Select **Rec.** to begin recording.
- 4** Select **Stop** to end recording.
- 5** Select **Play** in the options menu to listen to your recording.

### Sending the voice recording

- 1** Once you have finished recording, select options.
- 2** Select **Send** and choose from **Message, Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

**NOTE:** After you have finished recording, select **Options** and choose **Play, Send, File, Delete, Use as** (to use the recording as your ringtone) or **Go to Voice recordings**.

01

02

03

04

05


06

07

08


# Organiser

## Adding an event to your calendar


- 1 From the standby screen, press  and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Select **Options** then **Add new event**.
- 4 Select whether you would like to add an **Appointment**, **Anniversary** or **Birthday** and select **Done**.
- 5 Check the date and enter the time you would like your event to begin.
- 6 For appointments and anniversaries enter the time and date your event finishes in the lower time and date boxes.
- 7 If you would like to add a subject or a note to your event, touch **Subject** or **Name** and type in your note.
- 8 Select **Done** and your event will be saved in the calendar. A cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

**TIP!** You can set a holiday in your calendar. Select each day you are on holiday one at a time, then choose **Options** and select **Set holiday**. Each day will be shaded red. When you come to set an alarm, you can choose to exclude days set as holidays.

## Changing your default calendar view


- 1 From the standby screen press  and choose **Organiser**. Select **Settings**.
- 2 Select **Calendar** and choose either **Month view** or **Week view**.
- 3 Press **Done** to confirm your choice.

## Adding an item to your to do list

- 1 From the standby screen press  and choose **Organiser**.
- 2 Select **To do** and select **Add**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Done**.


**TIP!** You can edit an item by selecting it, touching **Options** and **Edit**. Confirm your amendments by selecting **Save**.

### Sharing a to do item

- 1 From the standby screen press  and choose **Organiser**. Select **To do**.
- 2 Select the to do item you would like to share, then select **Options**.
- 3 Select **Send**. You can choose to share your to do item by **Text message**, **Multimedia msg**, **Email** or **Bluetooth**.

**TIP!** You can back up and synchronise your calendar with your computer. See PC Sync on page 64.

### Adding a memo

- 1 From the standby screen press  and choose **Organiser - Memo**.
- 2 Select **Add**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit and select **Edit**.

01

02

03

04

05



06

07

08

## Tools


### Setting your alarm

- 1 From the standby screen press  and choose **Tools** then **Alarms**.
- 2 Select **Options** and touch **Add new**.
- 3 Set the time you would like the alarm to sound.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat, Sat - Sun, Sat-Wed, Sat-Thu, Sun-Thu** or **Except Holiday**.
- 5 Select  and **Edit** to select a sound for your alarm. To listen to sounds select the sound, and touch **Play**.
- 6 Add a memo for the alarm and select **Done** when you have finished typing. When the alarm sounds the memo will be displayed.
- 7 Finally, you can set the snooze interval at **5, 10, 20** or **30 mins, 1 hour** or **off**.
- 8 Once you have set your alarm, select **Done**.


**NOTE:** You can set up to 5 alarms.

The alarm will be alerted on even if the phone is switched off.


### Using your calculator

- 1 From the standby screen, press  and choose **Tools**. Select **Calculator**.
- 2 Select the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, x, ÷), followed by =.
- 4 For more complex calculations, select **Options** and choose from +/-, **sin, cos, tan, log, ln, exp, sqrt, deg** or **rad**.


### Using the stopwatch

- 1 From the standby screen, press  and choose **Tools**. Select **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Select **Stop** to stop the timer.
- 4 Select **Lap** to measure each lap time.
- 5 To restart stopwatch, select **Resume**.
- 6 Select **Reset** to return to zero.

## Converting a unit

- 1 From the standby screen, press  and choose **Tools**. Select **Converter**.
- 2 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 You can now select the unit and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 4 The corresponding value will appear on the screen.

## Adding a city to your world time

- 1 From the standby screen, press  and choose **Tools**. Select **World time**.
- 2 Select **Options**, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen. Alternatively choose **Map**, and select your chosen city from the map.
- 3 Press **Select** to confirm your choice.

**TIP!** If you are abroad, you can change your time zone from World time by selecting **Options**, followed by **Change current city**. Choose your required city as above.

01

02

03

04

05

06


07

08

## PC Sync

You can synchronise your PC with your phone to make sure all your important details and data match, and also as a backup to put your mind at ease.

### Installing LG PC Suite on your computer

- 1 From the standby screen press  and choose **Connectivity**.
- 2 Select **USB connection mode** and click **OK**.  
**Music** - Music Sync mode.  
**Others** - Data Service mode.
- 3 Insert the supplied CD into your PC. Click on the **LG PC Suite Installer** which will appear on your screen.
- 4 Select the language you would like the installer to run in and click **OK**.
- 5 Follow the instructions on the screen to complete the **LG PC Suite Installer wizard**.
- 6 Once installation is complete, the **LG PC Suite icon** will appear on your desktop.

### Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite Icon** on your desktop.
- 3 Click on **Connection Wizard** and **USB**.
- 4 Click on **Next**, then **Next** again, and **Finish**. Your phone and PC are now connected.

### Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

## Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

## Synchronising your contacts

- 1 Connect your phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Select **Transfer**, then **Import from mobile handset**. Your PC will now import and display all contacts saved to your USIM card and handset.
- 4 Click on **File** and select **Save**. You can now select where you would like to save your contacts to.

**NOTE:** To backup contacts saved to your USIM card, click on the SIM card folder on your PC screen. Select **Edit** at the top of the screen, then **Select all**. Right-click your contacts and select **Copy to contacts**. Now click on the **Handset** folder on the left of your screen and all your numbers will be displayed.

## Synchronising your messages

- 1 Connect your phone to your PC.
- 2 Click on the **Messages** icon.
- 3 All of your PC and phone messages will be displayed in folders on your screen.
- 4 Use the tool bar at the top of your screen to edit and rearrange messages.

## Synchronising your music

- 1 Connect your phone to your PC.
- 2 Click on the **Music** icon.
- 3 The music files you have saved will be displayed on the screen in the Music folder.

01

02

03

04

05

06

07

08

## PC Sync

**NOTE:** The following conditions must be met.

- Windows XP Service Pack 2 or higher.
- Windows Media Player 11 or higher.
- USB Connection mode should be active and Music Sync mode should be on.

### Using your phone as a mass storage device

Your phone can only be used as a mass storage device if you have a memory card inserted.

- 1 Disconnect your phone from your PC.
- 2 From the standby screen, press .
- 3 Select **Connectivity**, then **USB connection mode**.
- 4 Highlight **Mass storage** and press **Select**.
- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage...** followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.

- 6 All of your phone files will automatically be stored onto your PC hard drive.

**NOTE:** Your phone must be unplugged from your PC to initiate Mass Storage.

**NOTE:** Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the contents of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

### PIN for DivX connection

Install the DivX converter which is supplied on the same CD as the PC Sync software.

Once installed select DivX from the Program Files on your PC, then DivX converter followed by Converter.

This will open the Converter application. Use the arrows in the application to change the conversion format to Mobile. If you right-click on the application box and select Preferences, you can change the location that the converted files are saved in.

Once you are ready to convert your files, simply drag and drop the files into the application. You will need then to select Convert for the process to begin. When the process is finished a “Conversion complete” pop up will be displayed. The converted file can now be transferred to your phone using the Mass Storage functionality (see page 66 for details) or uploaded using the PC Sync software (see page 64 for details).

### **Using TV out**

Choose PAL or NTSC for connecting your KF750 to a TV.

01

02

03

04

05

06


07

08

## Browser

With a browser at the tip of your fingers, you can get up-to-date news and weather forecasts as well as information on sports or traffic whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers and games.

### Accessing the web

- 1 From the standby screen, press  and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**.  
Alternatively, select **Enter address** and type in your desired URL, followed by **Open**.

**NOTE:** An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

### Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.


- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To create a new folder, select **Options** and choose **Create new folder**. Enter the name of your bookmark folder.
- 4 To add a new bookmark, select **Options** and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 5 Select **Done**. Your bookmark will be displayed in the list of bookmarks.
- 6 To access the bookmark, simply scroll to it and select **Open**.

## Saving a page


- 1 Access your required webpage as described above.
- 2 Select **Options**, **Save items**, then **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Select **Save**.

**TIP!** This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

## Accessing a saved page

- 1 From the standby screen press  and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select **Open** to connect to the saved page.

## Viewing your browser history

- 1 From the standby screen press  and choose **Browser**, and then select **History**.
- 2 **Visual history** will be displayed. Select **Options** and select **List history**, to show a list of web page titles you have accessed recently.
- 3 To access one of these pages, simply select the required page and touch **Open**.

## Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a **feed**, **web feed**, or **channel**, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

01

02

03

04

05

06

07

08

## Browser

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


### Adding the Feed

You can input the feed directly yourself: **Browser** → **RSS reader** → **Options** → **Add new** or you can click the feed link by selecting the RSS icon in the webpage.

### Updating the RSS reader

- 1 You can select **Update** or **Update all Options**.
- 2 If you want to update it automatically, select **Update schedule**.

### Changing the web browser settings

- 1 From the standby screen press  and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **Security**, or **Reset Settings**.
- 3 Once you have changed your settings, touch **Select**.

## The web

### Using your phone as a modem

Your KF750 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

#### Using the USB cable:

- 1 Ensure you have LG PC Suite installed on your PC.
- 2 Connect your KF750 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click **Connect** and your PC will connect through your KF750.

**NOTE:** For more information on synchronising using LG PC Suite see page 64.

### Using Bluetooth

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KF750.
- 2 Pair your PC and KF750 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Settings**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KF750.

01

02

03

04

05

06

07

08

## The web

### Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

#### To send a file:

- 1 Open the file you want to send.
- 2 Select Options and choose **Send**. Choose **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on.
- 4 Your KF750 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and choose **Select** to send the file.
- 6 Your file will be sent.


**TIP!** Keep an eye on the progress bar to make sure your file is sent.

#### To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.

- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file. Files will usually be saved to the relevant folder in My Stuff.

#### Changing your Bluetooth settings:

- 1 Press  in the standby screen, and choose **Connectivity**.
- 2 Choose **Bluetooth** then **Settings**. Make your changes to:

**My device visibility** - Choose to be Visible, Visible for 1 min or Hidden.

**My device name** - Enter a name for your KF750.

**Supported services** - Search for the profile supported by KF750. See **Using your phone as a modem** on page 71 or **Using a Bluetooth headset** on page 73.

**My address** - Search your Bluetooth device address.

## Pairing with another Bluetooth device

By pairing your KF750 and another device, you can set up a passcode-protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Select **Paired devices, Options**, then **Add new device**.
- 3 Your KF750 will search for devices. If devices are found, **Refresh** and **Add** will appear on screen.
- 4 Choose the device you want to pair with and enter a passcode then press **Add**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

## Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Select **Yes** to **Connect now**. Your KF750 will automatically switch to Headset profile.

01

02

03

04

05

06

07


08

## Settings

Within this folder you can adapt your settings to personalise your KF750.

**NOTE:** For information on call settings see page 21.

### Changing your screen settings

**1** From the standby screen, press  and select **Settings**.

**2** Select **Screen** and then choose from:

**Screen theme** - Choose the theme for your Home Screen, start Up, Shut down the phone.

**Menu style** - Choose the style used to display menus.

**Dialling** - Set the display used when making a call.

**Font** - Adjust the font.

**Backlight** - Choose how long the backlight remains on for.

**NOTE:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

**Image quality enhancement** - Chooosed the menu to enhance the quality of the selected image.

**Handset theme** - Quickly change the whole look of your screen.


**Greeting message** - Enter the greeting message used when the phone is switched on.

**3** Choose **Select** to save your settings.

### Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the currently active profile icon.

Using the settings menu you can personalise each profile setting.

**1** From the standby screen, press  and select **Settings**.

**2** Select **Profiles** and then choose the profile you want to edit. You cannot edit the **Silent** profile. You can edit the Alert By option of your silent profile.

**3** Select **Options** and choose **Edit**.

**4** You can then change all of the sounds and alert options available in the list, including your **Ring tone** and **Volume, Message alerts** and more.

## Changing your phone settings

Enjoy the freedom of adapting your KF750 so that it works in a way that suits you.

- 1 From the standby screen, press



- 2 Select **Settings**, then **Phone**, and choose from the list below.

**Auto key lock** - Lock the keypad automatically in the standby screen.

**Touchpad** - Turn the touchpad vibration **On** or **Off**.

**Touchscreen effect** - Set the effect tone used when touching the screen.

**Languages** - Change the language of for your KF750's display.

**Power save** - Choose to switch the power saving settings **On** or **Off**.

**Information** - View the technical information for your KF750.

## Using Date & Time

**Date & Time** - Adjust your date and time settings or choose to automatically update the time when you travel or for daylight saving.

## Changing your other settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. If you want to change any settings, use this menu.

**Network** - Your KF750 connects automatically to your preferred network. To change these settings, use this menu.

**Internet profiles** - Set the profiles to connect to the internet.

**Access points** - Your network operator has already saved this information. You can add new access points using this menu.

**Packet data conn** - Set the packet data connection.

01

02

03

04

05

06

07

08

# Settings

## Changing security settings


**PIN code request** - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

**Handset lock** - Set the phone lock to avoid unauthorised use. You will need a security code.

**Change codes** - Change the codes: PIN/ PIN2/ Security code.

## Using memory manager

Your KF750 has three memories available: the phone, the USIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available. Press  in standby screen. Select **Settings** then **Memory Manager**.

**Handset Common memory** - View the memory available on your KF750 for images, sounds, videos, flash, MMS, applications, java and others.

**Handset reserved memory** - View the memory available on your handset for SMS, contacts, calendar items, to do list, memos, alarms, call history, bookmarks and miscellaneous items.



**USIM memory** - View the memory available on your USIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - choose Handset memory or External memory.

**TIP!** See page 12 for information on **Installing a memory card**.

## Using flight mode

Turn on flight mode by pressing  in standby screen, and then select **Settings** and **Profiles**. Select **Flight mode** and press  to activate.

Flight mode will not allow you to make calls, connect to the internet, send messages or use Bluetooth.

## Accessories

These accessories were supplied with KF750.

### Charger



### USB cable and CD

Connect and synchronise your KF750 and PC.



### Battery



### User Guide

Learn more about your KF750.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 and W-CDMA network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KF750

System : GSM 900 / DCS 1800 /  
PCS 1900 / W-CDMA

### Ambient Temperatures

Max : +55°C (discharging), +45°C  
(charging)

Min : -10°C

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF750

Trade Name

LG

CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.6.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

21.Mar, 2008

LG Electronics Inc, Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model KF750 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DAS4 for use at the ear is 0.5 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.755 W/kg averaged over 1g of tissue.

### Product care and maintenance

#### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Guidelines for safe and efficient use

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.

## Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



Digital Mobile

สำหรับส่งคืนบริษัท

# Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)



www.lgs.co.th

ศูนย์บริการข้อมูล  
Customer Information Center 2204-1888 by  
1-800-545454 โทรฟรี

### บริษัท แอลจีอิเล็กทรอนิคส์ จำกัด

75/2 อาคารวีรวัฒน์ 6 ชั้นที่ 26 แขวงคลองเตย กรุงเทพฯ 10110  
ศูนย์บริการข้อมูล โทร 0-2204-1888 แฟกซ์ 0-2260-8810

### LG Mitr Electronics Co.,Ltd.

75/2 Richmond Bldg., Sukumvit 26, Klong-Toey, Bangkok 10110  
Customer Information Center Tel. 0-2204-1888 Fax 0-2260-8810

 **LG Mitr Electronics**



ใบอนุญาตเลขที่ ปณ.(ต)/2117 ปณจ.โพธิ์ไทร  
ถ้าฟากส่งในประเทศไม่ต้องผนึกตราไปรษณียากร



**บริษัท แอลจีมีตรอิเล็กทรอนิกส์ จำกัด**

75 /1-3 อาคารริชมอนด์ สุขุมวิท 26

แขวงคลองตัน เขตคลองเตย

กรุงเทพฯ 10110

## เงื่อนไขการรับประกัน

การรับประกันนี้มีผลเฉพาะในประเทศไทยเท่านั้น

(This warranty is valid only in Thailand)

- 1) บัควARRANTY 1 ปี นับแต่วันที่ซื้อ พร้อมบัตรรับประกันที่ใส่ข้อความสมบูรณ์เท่านั้น
- 2) ภายในระยะเวลาประกัน หากผลิตภัณฑ์ที่ซื้อ ชำรุดหรือเสียหายอื่นเนื่องมาจากข้อบกพร่องของ วัสดุที่ใช้ประกอบหรือความผิดพลาดในการผลิต โดยมีได้เกิดจากการ ใช้เครื่องผิดวิธี บริษัทฯ ยินดีซ่อมหรือเปลี่ยนอะไหล่โดยไม่มีค่าใช้จ่าย
- 1) We warranty 1 year on the commencing on the date of purchase and fill the detail by completely.
- 2) With the warranty period we will eliminate, free of charge, any type of misused or any defect in the part resulting from faults in material or workmanship either by repairing, or exchanging parts.

## เงื่อนไขนอกการรับประกัน

(Warranty Exclusion and Uncoversages)

- 1) การซ่อมที่นอกเหนือจากการซ่อม ณ ศูนย์บริการ LG หรือ ศูนย์บริการที่ได้รับการแต่งตั้ง
- 2) การใช้ผลิตภัณฑ์ที่ไม่ถูกต้อง อันทำให้อุปกรณ์นั้นชำรุดเสียหาย
- 3) ความเสียหายอื่นเนื่องมาจากอุบัติเหตุ ไฟไหม้ ฟ้าผ่า, ใช้กระแสไฟฟ้าผิดประเภทและอุบัติเหตุอื่นที่มนุษย์ไม่สามารถควบคุมได้
- 1) If repair are not undertaken by LG Service Center or Authorize Service Center.
- 2) Damage to accessory due to misuse.
- 3) Defects caused by accident, fire, lightning, incorrect voltage and other acts beyond human control.

ศูนย์บริการสุรนันทน์ : 26 / 75/2 อาคารวิกรมองค์ ณ.สุรนันทน์ 26 แขวงคลองเตย กรุงเทพฯ 10110 โทร. 0-2260-8787 แฟกซ์ 0-2260-8810

ศูนย์บริการเชียงใหม่ : 84 หมู่ 12 อ. เพชรเกษม ซ. 120 อ.กระพูกมบ. จ.สมุทรสาคร 74190 โทร. 0-2431-0010 แฟกซ์ 0-2810-3378

ศูนย์บริการเชียงใหม่ : 250/5 - 6 อ.เชียงใหม่-อำเภอ ต.ป่าตัน อ.เมือง จ.เชียงใหม่ 50300 โทร. 0-5321-5823 แฟกซ์ 0-5341-2231

ศูนย์บริการพิษณุโลก : 210/9 -10 -11 อ.มิตรภาพ ต.ในเมือง อ.เมือง จ.พิษณุโลก 65000 โทร. 0-5528-0508 แฟกซ์ 0-5528-0509

ศูนย์บริการอุตรดิตถ์ : 304 หมู่ 4 อ.เมืองเมืองบ้านม่วง ต.หนองขอนกว้าง อ.เมือง จ.อุตรดิตถ์ 41000 โทร. 0-4224-9562 แฟกซ์ 0-4220-4757

ศูนย์บริการหาดใหญ่ : ห้อง 4-5 อาคารทรอสลิเด็นท์แมนชั่น 10/1 อ.ประชาพิสัย อ.หาดใหญ่ จ.สงขลา 90110 โทร.0-7435-2275 แฟกซ์ 0-7422-5476

ศูนย์บริการนครราชสีมา : 1630/1-2 อ.มิตรภาพ ต.ในเมือง อ.เมือง จ.นครราชสีมา 30000 โทร. 0-4424-7304 แฟกซ์ 0-4424-7305



Digital Mobile

สำหรับส่งคืนบริษัท

## Warranty Card / ใบรับประกันสินค้า

ประเภทสินค้า : ..... บัตรรับประกันเลขที่ : .....  
(Product & Model) (Warranty Card Number)

กรุณาส่งคืนบริษัทภายใน 7 วัน  
นับจากรวันที่ซื้อ  
เพื่อสิทธิประโยชน์ในการรับประกันสินค้า

IMEI หมายเลขเครื่อง 15 หลัก (IMEI 15 Digits): ..... เลขเครื่อง : .....  
 (Serial No.)

วัน เดือน ปี ที่ซื้อ : .....  
(Purchase Date)

ชื่อผู้ซื้อ (Customer's Name) (ไทย) : .....  
(อังกฤษ) : .....

วัน เดือน ปี เกิด : ..... เพศ : .....  
(Date of Birth) (Gender)

ที่อยู่ : .....  
(Address)

อาชีพ : ..... โทรศัพท์ : ..... E-mail : .....  
(Occupation) (Telephone No.)

ชื่อจากร้าน : .....  
(Dealer's Name)

ที่อยู่ร้าน : .....  
(Dealer's Address)

ประทับตราร้านค้า