



CE0168 



ไ
ท
ย
ENGLISH

คู่มือการใช้

LG-E730

P/NO : MFL67343618 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ
ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านบริการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,
To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program. For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.' The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



ไทย

คู่มือการใช้ LG-E730

คู่มือนี้จะช่วยคุณเริ่มต้นใช้งานโทรศัพท์ของคุณ

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณขึ้นอยู่กับโทรศัพท์ ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2011 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Android Market™ เป็นเครื่องหมายการค้าของ Google, Inc.



สารบัญ

คำแนะนำเพื่อความปลอดภัยและ
การใช้งานอย่างมีประสิทธิภาพ..... 7

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.... 19

ส่วนประกอบอุปกรณ์..... 32

การใส่ซิมการ์ดและแบตเตอรี่..... 35

การชาร์จโทรศัพท์..... 37

การใช้การ์ดหน่วยความจำ..... 38

การล็อคและปลดล็อคหน้าจอ 40

การป้องกันการล็อคหน้าจอ 41

หน้าจอหลักของคุณ 44

เคล็ดลับสำหรับหน้าจอสัมผัส 44

หน้าหลัก..... 45

การปรับแต่งหน้าจอหลัก..... 46

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด 47

แถบการแจ้งเตือน 48

การดูแถบสถานะ..... 49

แป้นพิมพ์บนหน้าจอ 52

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง 54

การตั้งค่าแอคเคาท์ Google 55

การเชื่อมต่อกับเครือข่ายและอุปกรณ์... 57

Wi-Fi 57

การเชื่อมต่อกับเครือข่าย Wi-Fi..... 57

บลูทูธ 59

การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์ ... 60

การเปลี่ยนชื่อหรือการตั้งค่าป้องกัน ของ Portable hotspot	62	ตั้งค่าการโทร	75
การใช้ Wi-Fi Cast	64	รายชื่อ..... 76	
การใช้งาน Wi-Fi Direct เพื่อแบ่งปันผ่าน SmartShare.....	65	การค้นหารายชื่อ.....	76
การใช้ SmartShare	67	การเพิ่มรายชื่อใหม่.....	76
การโทร 72		เพื่อนสนิท.....	77
การโทรออก	72	การย้ายรายชื่อจากโทรศัพท์เก่าไปยัง โทรศัพท์ใหม่.....	78
การโทรออกโดยใช้รายชื่อ	72	ข้อความ..... 79	
การรับสายและการปฏิเสธสายเรียกเข้า.....	72	การส่งข้อความ.....	79
การปรับระดับเสียงสายสนทนา.....	73	กล่องเซร็ด	80
การใช้สายที่สอง.....	73	การใช้สไมลีย์	81
การดูบันทึกการโทร	74	การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย	81

สารบัญ

อีเมล	82	การถ่ายภาพด้วย	90
การจัดการแอคเคาท์อีเมล.....	82	เมื่อคุณถ่ายภาพแล้ว.....	90
หน้าจอแอคเคาท์อีเมล.....	83	การใช้การตั้งค่าขั้นสูง	91
การทำงานกับโฟลเดอร์แอคเคาท์.....	84	กล้องวิดีโอ	94
การเขียนและส่งอีเมล	84	ทำความรู้จักกับช่องมองภาพ	94
เครือข่ายสังคม	86	การถ่ายวิดีโอด้วย	95
การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ	86	หลังการถ่ายวิดีโอ	95
การดูและอัปเดตสถานะของคุณ	87	การใช้การตั้งค่าขั้นสูง	96
การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ..	88	การปรับระดับเสียงขณะดูวิดีโอ.....	97
Facebook และ Twitter.....	88	บัลติมี่เดีย	98
กล้องถ่ายรูป	89	คลังภาพ	98
ทำความรู้จักกับช่องมองภาพ	89	มุมมองตามลำดับเวลา	98

เพลง.....	99	บราวเซอร์	108
การโอนไฟล์เพลงโดยใช้อุปกรณ์จัดเก็บ		การใช้แถบเครื่องมือเว็บ	108
ข้อมูล USB.....	99	การใช้ตัวเลือก	109
การเล่นเพลง	100	LG On-Screen Phone 2.0.....	110
วิทยุ FM	102	ไอคอน On-Screen Phone 2.0.....	110
การค้นหาสถานี	103	คุณสมบัติ On-Screen Phone 2.0.....	111
ยูทิลิตี้.....	105	การติดตั้ง On-Screen Phone	
การตั้งเวลาการปลุก.....	105	ในคอมพิวเตอร์.....	112
การใช้เครื่องคิดเลข.....	105	การเชื่อมต่อโทรศัพท์ของคุณกับ	
การเพิ่มเหตุการณ์ลงในปฏิทิน	106	คอมพิวเตอร์	113
การเปลี่ยนมุมมองปฏิทิน	106	การตรวจสอบการเชื่อมต่อ On-Screen	
Polaris Office.....	107	Phone.....	114
เว็บไซต์	108		

สารบัญ

การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์	114	ภาษาและคีย์บอร์ด	128
ตั้งค่า..... 115		Voice input & output.....	128
ตั้งค่าการเชื่อมต่อ	115	การช่วยสำหรับการเข้าถึง	131
ตั้งค่าการโทร	117	วันที่และเวลา.....	131
เสียง	120	เกี่ยวกับโทรศัพท์.....	131
หน้าจอ.....	121	อัปเดตซอฟต์แวร์โทรศัพท์.....	132
Gesture	122	DivX Mobile DivX	134
พิกัดและการป้องกัน	122	อุปกรณ์เสริม	136
แอปพลิเคชัน	124	ข้อมูลทางเทคนิค	137
แอคเคาท์และการซิงค์	125	การแก้ปัญหา.....	138
ความเป็นส่วนตัว	126		
ที่เก็บข้อมูล	127		

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น LG-E730 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการ

กำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อของร่างกายที่หนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.690 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.757 วัตต์/กก. (10 กรัม)
- ข้อมูลระดับ SAR สำหรับผู้ที่อยู่ในประเทศ/พื้นที่ที่ยอมรับข้อจำกัด SAR ซึ่งแนะนำโดย Institute of Electrical and Electronics Engineers (IEEE) คือ 1.6 วัตต์/กก. โดยเฉลี่ยต่อเนื้อเยื่อ 1 กรัม

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็น ต้องมีการตรวจซ่อม

- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป

- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำ ความเสียหายต่อข้อมูลได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจ ทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลว หรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือ ซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว

ความเสียหายของหน้าจอแก้วเกิดขึ้น จากการใช้งานโดยไม่ได้รับอนุญาต หรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้ การรับประกัน

- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงาน ปกติ การสัมผัสกับผิวโดยตรงเป็นระยะ เวลานานโดยไม่มีการระบายอากาศหรือ มีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือ เกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้อง ระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือ ทันทีหลังจากการใช้การ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องอาจได้รับผลจากคลื่นรบกวนทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น

- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือขณะขับรถ

- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง
แล้วจอดรถก่อนโทรออกหรือรับสาย
หากสภาพการขับขี่ทำให้จำเป็นต้อง
ดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบ
ต่อระบบอิเล็กทรอนิกส์บางชนิด
ในรถของคุณ เช่น วิทยุติดรถยนต์
อุปกรณ์เพื่อความปลอดภัย เป็นต้น

- หากรถของคุณติดตั้งถุงลมนิรภัย
ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย
ซึ่งขัดขวางการทำงานของถุงลม
ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจ
ทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจาก
การทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้าง
นอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับ
ที่เหมาะสม เพื่อให้คุณยังสามารถได้ยิน
เสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่ง
เมื่ออยู่ข้างถนน

คำแนะนำเพื่อความปลอดภัยและการทำงานอย่างมีประสิทธิภาพ

หลีกเลี่ยงการทำลายความ สามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

- อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้
- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทร

ฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับ

การออกแบบมาเพื่อยืดอายุการใช้งาน
ของแบตเตอรี่ให้นานที่สุด

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่
ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัส
แบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประ
สิทธิภาพการใช้งานลดต่ำลงจนถึงระดับ
ที่ไม่อาจใช้งานได้ แบตเตอรี่นี้
สามารถชาร์จใหม่ได้หลายร้อยครั้งก่อน
ที่จะต้องเปลี่ยนก้อนใหม่

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้
เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่
โดนแสงแดดโดยตรง
หรือใช้ในสภาพที่มีความชื้นสูง เช่น
ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่
ร้อนหรือเย็น เนื่องจากประสิทธิภาพของ
แบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง
อาจทำให้เกิดการระเบิดได้

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้วโปรดรีไซเคิลเมื่อเป็นไปได้อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ก่อนเริ่มใช้โทรศัพท์ โปรดอ่านข้อมูลนี้!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับบริการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง

เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 แอปพลิเคชัน > ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3แตะ ถอนการติดตั้ง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่ของโทรศัพท์:

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช่ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง

- ปิดการซิงค์อัตโนมัติของ Google Mail™, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
 - แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่
- การตรวจสอบระดับกำลังไฟแบตเตอรี่:**
- แอปพลิเคชัน > ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะสถานะแบตเตอรี่ (กำลังชาร์จหรือไม่ชาร์จ) และระดับ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:

- แอปพลิเคชัน > ตั้งค่า > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่

เวลาใช้งานของแบตเตอรี่จะแสดงอยู่ที่ด้านบนของหน้าจอ โดยแสดงระยะเวลา นับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้ายหรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดงระยะเวลานับจากที่โทรศัพท์ใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้กำลังไฟแบตเตอรี่ โดยเรียง

ลำดับตามปริมาณที่ใช้จากมากไปน้อย

3. ก่อนการติดตั้งแอปพลิเคชัน และ OS โอเพ่นซอร์ส

⚠ คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์ของคุณจะไม่ได้ได้รับความคุ้มครองตามการรับประกัน

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market™ เท่านั้น หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องทั้งหมดออกจากโทรศัพท์

4. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณจำเป็นต้องแก้ไขสู่สภาพเดิม ให้ใช้ Hard Reset เพื่อรีบูตโทรศัพท์ของคุณ

1. เมื่อปิดโทรศัพท์แล้ว ให้กดปุ่ม **ปุ่มลดระดับเสียง + ปุ่มเปิด/ปิด** ค้างไว้ด้วยมือซ้าย
2. เมื่อไฟ LED ที่ด้านล่างของโทรศัพท์สว่างขึ้น ให้แตะ **ปุ่มเมนู + ปุ่มย้อนกลับ** ค้างไว้ด้วยมือขวา คุณดำเนินการนี้ทันที

ก่อนที่หน้าจอจะแสดงโลโก้ LG ตรวจสอบให้แน่ใจว่ามีข้อผิดพลาดยังคงกดปุ่มลดระดับเสียงและเปิด/ปิดค้างไว้

3. เมื่อโลโก้ LG ปรากฏขึ้นบนหน้าจอ ให้กดปุ่มค้างไว้ประมาณ 2 วินาที แล้วปล่อยปุ่มทั้งหมดพร้อมกันก่อนที่โลโก้ LG จะหายไป

รอให้โทรศัพท์ทำการ Hard Reset อย่างน้อยหนึ่งนาที จากนั้นคุณสามารถเปิดเครื่องโทรศัพท์ได้

ข้อควรระวัง: หากคุณทำ Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ และไม่สามารถย้อนกลับได้ อย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

5. การใช้การ์ด microSD

รูปภาพ, ไฟล์เพลง และวิดีโอสามารถบันทึกในหน่วยความจำภายนอกเท่านั้น ก่อนการใช้กล่องในตัว คุณต้องใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ถ้าคุณไม่ใส่การ์ดหน่วยความจำ คุณจะไม่สามารถบันทึกภาพหรือวิดีโอที่คุณถ่ายด้วยกล้องได้

6. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน

การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช่ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชัน:

- 1 แอปพลิเคชัน > ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน
- 2 เลื่อนไปยังแอปพลิเคชันที่ต้องการ และแตะ หยุด เพื่อหยุด

เคล็ดลับ! ในการกลับไปยังแอปพลิเคชันก่อนหน้า ให้กดปุ่ม หน้าจอหลัก ค้างไว้ หน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

7. การติดตั้ง LG PC Suite

LG PC Suite IV คือโปรแกรมที่ช่วยให้คุณเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สายเคเบิลการสื่อสารข้อมูล USB เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของโทรศัพท์มือถือของคุณบนคอมพิวเตอร์ได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก้ไข และลบข้อมูลในโทรศัพท์ได้ง่าย
- ซิงโครไนซ์ข้อมูลโทรศัพท์มือถือกับข้อมูลคอมพิวเตอร์ (รายชื่อ, ปฏิทิน, ข้อความ SMS, บุคมารค และบันทึกการโทร)
- โอนไฟล์มัลติมีเดียได้ง่าย (รูปถ่าย, วิดีโอ, เพลง) โดยลากและวางระหว่างคอมพิวเตอร์และโทรศัพท์

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

- โอนข้อความ SMS จากโทรศัพท์ไปยังคอมพิวเตอร์
- อัปเดตซอฟต์แวร์โดยไม่สูญเสียข้อมูล

LG-E730

ไม่สนับสนุนฟังก์ชันต่อไปนี้:

- LG Air Sync (Web Sync, R-Click)
- สิ่งที่ต้องทำในปฏิทิน
- บันทึก
- แอปพลิเคชัน Java

การตั้งค่า LG PC Suite จาก microSD

- 1 ใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์ (อาจใส่ไว้แล้ว)
- 2 ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมดที่เก็บข้อมูลเท่านั้นในโทรศัพท์ของคุณแล้ว (ในเมนูแอปพลิเคชัน ให้เลือก **ตั้งค่า > ที่เก็บข้อมูล > ช่องที่เก็บข้อมูลเท่านั้น**)

- 3** ใช้สายเคเบิลข้อมูล USB เพื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์
- 4** ในแถบสถานะ ให้ลากไอคอน USB เลือกเชื่อมต่อ USB แล้วและเปิดใช้ที่เก็บข้อมูล USB แล้วเลือก "ตกลง" เพื่อยืนยัน คุณสามารถดูเนื้อหาของที่จัดเก็บข้อมูลบนคอมพิวเตอร์ของคุณและโอนไฟล์ได้
- 5** คัดลอกไฟล์เดสก์ท็อป LG PC Suite IV จากที่เก็บข้อมูลไปยังคอมพิวเตอร์
- 6** เรียกใช้ไฟล์ LGInstaller.exe ในคอมพิวเตอร์และทำตามคำแนะนำ
- 7** เมื่อทำการติดตั้ง LG PC Suite IV เสร็จเรียบร้อย ให้เปิดการใช้โหมดที่เก็บข้อมูลเท่านั้น เพื่อเริ่มใช้งาน LG PC Suite IV หรือคุณสามารถดาวน์โหลดโปรแกรมจากเว็บไซต์ LG (www.lg.com) ไปที่ www.lg.com และเลือกภูมิภาค ประเทศ และภาษา

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หมายเหตุ: อย่าย้ายหรือลบไฟล์โปรแกรมอื่นที่ติดตั้งในการ์ดหน่วยความจำของคุณ เนื่องจากอาจทำให้แอปพลิเคชันที่ติดตั้งไว้ล่วงหน้าเสียหายได้

8. การซิงค์โครโนซ์โทรศัพท์กับคอมพิวเตอร์ผ่าน USB

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้ง LG PC Suite ในคอมพิวเตอร์ โปรดดูหน้าก่อนหน้านี้นี้สำหรับการติดตั้ง LG PC Suite

- 1** ใช้สายเคเบิล USB เพื่อเชื่อมต่อโทรศัพท์กับพอร์ต USB ที่คอมพิวเตอร์ เมื่อเชื่อมต่อแล้ว คุณจะได้รับการแจ้งว่าสร้างการเชื่อมต่อ USB แล้ว
- 2** เปิดแถบการแจ้ง และแตะ เชื่อมต่อ USB แล้ว
- 3** แตะ **เปิดใช้ที่เก็บข้อมูล USB** และเลือก "ตกลง" เพื่อยืนยันว่าคุณต้องการโอนไฟล์ระหว่างการการ์ด microSD ของโทรศัพท์และคอมพิวเตอร์

คุณจะได้รับการแจ้งเมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB คุณสามารถคัดลอกไฟล์ระหว่างการการ์ด microSD ได้

เคล็ดลับ! ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้ง และแตะ **ปิดที่เก็บข้อมูล USB**

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ระหว่างเวลานี้

คุณจะไม่สามารถเข้าใช้การ์ด microSD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด microSD เช่น กล้อง คลังภาพ และเพลง

การยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์:

เปิดแถบการแจ้งเตือน และแตะ

ปิดที่เก็บข้อมูล USB เพื่อยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์อย่างปลอดภัย

9. ถีอโทรศัพท์ดั่งขึ้น

ถีอโทรศัพท์มือถือถีอแนวดั่งเหมือกับโทรศัพท์ท่วไป โทรศัพท์ LG-E730 มีเสออากศกยใน ระมัตระวังอยอให้เกิดรอยขีดข่วนหรือความเสือหายที่บริเวณด้นหลังเครื่อง เนื่องจกอจส่งผลต่อประสือธิภพการทงงาน

ในขณะทงการโทรออก/รับสยหรือทงการส่ง/รับข้อมูล ให้หลีกเสืองการถีอบริเวณส่วนลางของโทรศัพท์ซึ่งเป็นด้นที่มการติดดั่งเสออากศไว้ การทงดั่งกลวส่งผลกับคุณภพการโทร

10. เมื่อน้ำจอค้าง

หากน้ำจอค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน:
ถอดแบตเตอรี่ ใส่กลับเข้าไป
แล้วเปิดโทรศัพท์

หรือ

กดปุ่ม เปิด/ปิดเครื่อง/ล็อค
ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิด
หากยังไม่สามารถแก้ไขปัญหาได้
โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ส่วนประกอบอุปกรณ์

หูฟัง

เซนเซอร์รับสัญญาณ

เลนส์กล้อง

ปุ่มหน้าหลัก 

กลับไปยังหน้าจอหลักจาก
หน้าจอใดๆ

ปุ่มเมนู 

- ตรวจสอบว่ามีตัวเลือกอะไรบ้าง
- ไปที่ Google Search™
โดยกดปุ่มนี้ค้างไว้



ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค

- เปิดหรือปิดเครื่องโดยกดปุ่ม
นี้ค้างไว้
- กดครู่หนึ่งเพื่อล็อค/
ปลดล็อคหน้าจอ

ปุ่มกลับ 

กลับไปยังหน้าจอก่อนหน้า

ไมโครโฟน

หมายเหตุ: เซนเซอร์รับสัญญาณ

เมื่อรับสายหรือโทรออกเซนเซอร์รับสัญญาณจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัสโดยการรับรู้เมื่อโทรศัพท์อยู่ใกล้หูวิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์

คำเตือน


การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่าปิดเซนเซอร์รับสัญญาณLCD ด้วยฟิล์มป้องกันเนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ปุ่มปรับระดับเสียง


- ในหน้าจอหลัก:
ควบคุมระดับเสียงกึ่ง
- ระหว่างการใช้สาย:
ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแตร็ค:
ควบคุมระดับเสียงต่อเนื่อง



การใส่ซิมการ์ดและแบตเตอรี่


ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:

- 1 ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ใช้นิ้วหัวแม่มือของมืออีกข้างออกแรงกดฝาครอบด้านหลัง ใช้นิ้วบาคเพื่อดันถอดฝาครอบด้านหลังออกด้วยนิ้วชี้

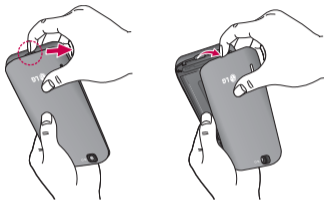


เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

- 2** เลื่อนซิมการ์ดเข้าไปในช่องเสียบซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

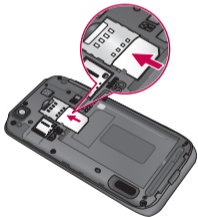

- 3** ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ (1) และค่อยๆ กดลงจนกว่าจะแน่นเข้าที่ (2)

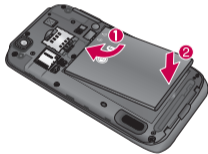


- 4** วางฝาครอบด้านหลังบนช่องใส่แบตเตอรี่ (1) และกดลงจนกระทั่งแน่นเข้าที่ (2)



การชาร์จโทรศัพท์

เปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านบน
เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ

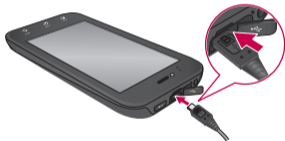

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่


การใช้การ์ดหน่วยความจำ

ในการใส่การ์ดหน่วยความจำ:

ใส่การ์ดหน่วยความจำลงในช่องเสียบโปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

การถอดการ์ดหน่วยความจำอย่างปลอดภัย:

แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล > ยกเลิกการต่อเชื่อมการ์ด SD

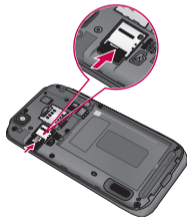

หมายเหตุ: โทรศัพท์ LG-E730 สนับสนุน
การลดหน่วยความจำสูงสุดไม่เกิน 32
กิกะไบต์

⚠ คำเตือน

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การลดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการลดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ:
การลดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการ์ดได้

หมายเหตุ: ไฟล์ทั้งหมดในการลดหน่วยความจำจะถูกลบออกเมื่อฟอร์แมต

- 1** บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน**  เพื่อเปิดเมนูแอปพลิเคชัน

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

- 2 เลื่อนและแตะ **ตั้งค่า** > **ที่เก็บข้อมูล**
- 3 แตะ **ยกเลิกการเชื่อมต่อการ์ด SD** และแตะ **ตกลง** เพื่อยืนยัน
- 4 แตะ **ลบการ์ด SD** > **ลบการ์ด SD** > **ลบทุกสิ่ง** แล้วยืนยันการเลือกของคุณ
- 5 หากคุณตั้งค่าล็อคแบบให้ป้อนข้อมูลล็อคแบบ แล้วเลือก **ลบทุกสิ่ง**

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดออร์อาจแตกต่างกันไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การล็อคและปลดล็อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล็อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่

ในขณะที่คุณไม่ได้ใช้งาน LG-E730

ให้กดปุ่มเปิด/ปิดเครื่อง/ล็อค 

เพื่อล็อคโทรศัพท์ของคุณ

หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าหน้าจอล็อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารขอมูล)

ในการทำให้โทรศัพท์ของคุณใช้

งานได้ ให้กดปุ่มเปิด/ปิดเครื่อง/ล็อค หน้าจอล็อคจะปรากฏ และและเลื่อนล็อคหน้าจอขึ้นเพื่อปลดล็อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

การป้องกันการล็อคหน้าจอ

คุณสามารถล็อคหน้าจอให้คุณเพียงคนเดียวที่สามารถปลดล็อคเพื่อเข้าถึงโทรศัพท์ของคุณได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

การตั้งค่าแบบการปลดล็อค, PIN

หรือรหัสผ่านเป็นครั้งแรก:

- แอปพลิเคชัน > ตั้งค่า > พิกัดและการป้องกัน > ตั้งคาล็อคหน้าจอ > รูปแบบ, PIN หรือรหัสผ่าน

เมื่อตั้งค่าแล้ว คุณสามารถเปลี่ยนได้ในเมนู **เปลี่ยนล็อคหน้าจอ**

หมายเหตุ:

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสดังกล่าวเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ

หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมแบบการปลดล็อค:

หากคุณล็อกอินบัญชี Google
ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5
ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น คุณจะ
ต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google
ของคุณเพื่อปลดล็อคโทรศัพท์

หากคุณไม่ได้สร้างแอคเคาท์ Google
บนโทรศัพท์ หรือคุณลืม คุณต้องทำการ
Hard Reset

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธี
นาฬิกาเกิดโทรศัพท์ของคุณ

แตะ – ในการเลือกเมนู/ตัวเลือก
หรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/
ตัวเลือกนั้น

แตะค้างไว้ – ในการเปิดเมนูตัวเลือก
หรือจับวัตถุที่คุณต้องการย้าย ให้แตะวัตถุ
ที่คุณต้องการย้ายค้างไว้

ลาก – ในการเลื่อนดูรายการหรือเคลื่อนที่
ซ้ำๆ ให้ลากผ่านหน้าจอ

ลากนิ้ว – ในการเลื่อนดูรายการ
หรือเคลื่อนที่อย่างรวดเร็ว
ให้วัดนิ้วผ่านหน้าจอสัมผัส
(ลากอย่างรวดเร็วแล้วปล่อย)

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไว
ต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้อง
การ ระวังอย่าแตะโดนปุ่มอื่นๆ

หน้าหลัก


เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูพาเนล นอกจากนี้คุณยังสามารถปรับแต่งพาเนลด้วย Widget, ปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ชื่นชอบ

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

ในหน้าจอหลัก คุณสามารถดูปุ่มด่วนได้ที่ด้านล่างหน้าจอ ปุ่มด่วนจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ชื่นชอบได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

 **แตะไอคอน โทรศัพท์** เพื่อแสดงปุ่มหมายเลขแบบสัมผัสสำหรับใช้โทรออก

 **แตะไอคอน รายชื่อ** เพื่อเปิดรายชื่อ

 **แตะไอคอน ข้อความ** เพื่อเข้าใช้เมนูข้อความ นี่คือที่ซึ่งคุณสามารถสร้างข้อความใหม่ได้

หน้าจอหลักของคุณ



แตะที่แอปพลิเคชัน

ด้านล่างหน้าจอ คุณสามารถดู
แอปพลิเคชันที่ติดตั้งทั้งหมดได้

ในการเปิดแอปพลิเคชัน เพียงแตะไอคอน
ในรายการแอปพลิเคชัน

การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลัก
ของคุณโดยเพิ่ม Widget, ข้อความ,
โฟลเดอร์ หรือวอลเปเปอร์ เพื่อให้ใช้
โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่ม Widget
ที่ใช้อยู่ในหน้าจอหลัก

การเพิ่มรายการในหน้าจอหลัก:

1 หน้าจอหลัก > เมนู > เพิ่ม

หรือ

แตะค้างไว้บนส่วนที่ว่างของหน้าจอ
หลัก

2 ในเมนู โหมดเพิ่ม ให้เลือกรายการที่
คุณต้องการเพิ่ม จากนั้นคุณจะได้เห็น
รายการที่เพิ่มบนหน้าจอหลัก

3 ลากไปยังตำแหน่งที่คุณต้องการ
แล้วปล่อยนิ้ว

การลบรายการจากหน้าจอหลัก:

- หน้าจอหลัก >
แตะที่ไอคอนที่ต้องการลบค้างไว้ >
ลากไปยัง 

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชัน
ในหน้าจอหลัก จากเมนูแอปพลิเคชัน ให้
แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

การกลับไปที่แอปพลิเคชันที่เพิ่ง ใช้ล่าสุด

- 1 แตะปุ่ม หน้าหลัก ค้างไว้ หน้าจอจะ
แสดงป๊อปอัพโดยมีไอคอนของ
แอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน
หรือแตะปุ่ม **กลับ** เพื่อกลับไป
ที่แอปพลิเคชันปัจจุบันของคุณ

หน้าจอหลักของคุณ

แถบการแจ้งเตือน

แถบการแจ้งเตือนอยู่ด้านบนสุดของหน้าจอ



เสียงกริ่ง
- สั่น

Wi-Fi

บลูทูธ


GPS

การเชื่อมต่อ
ข้อมูล

แตะและเลื่อนแถบการแจ้งเตือนลงด้วยนิ้วมือ หรือ ในหน้าจอหลัก แตะปุ่ม **เมนู** แล้วเลือก **การแจ้งเตือน** ในหน้าจอนี้ คุณสามารถตรวจสอบและจัดการเสียง, Wi-Fi, บลูทูธ และ GPS รวมถึงการแจ้งเตือนอื่นๆ ได้

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายุแบตเตอรี่, บลูทูธที่ใช้งาน และการเชื่อมต่อข้อมูล



ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด
	ไม่มีซิมการ์ด
	ไม่มีสัญญาณ
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	เปิด Wi-Fi Direct
	ชุดหูฟังแบบใช้สาย

หน้าจอหลักของคุณ

ไอคอน	รายละเอียด
	กำลังใช้สาย
	พักสาย
	ลำโพง
	ปิดไมโครโฟนโทรศัพท์
	สายไม่ได้รับ
	เปิดบลูทูธ
	เชื่อมต่อกับอุปกรณ์บลูทูธ

ไอคอน	รายละเอียด
	ค่าเตือนระบบ
	ตั้งปลุก
	ข้อความเสียงใหม่
	ปิดเสียงเรียกเข้า
	โหมดสั่น
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่

ไอคอน	รายละเอียด
	ข้อมูลเข้าและออก
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	กำลังรับสัญญาณ GPS
	กำลังรับข้อมูลตำแหน่งจาก GPS

ไอคอน	รายละเอียด
	เชื่อมต่อ On-Screen Phone
	3 การแจ้งเตือนไม่ได้ดู
	กำลังซิงค์ข้อมูล
	ดาวน์โหลดเสร็จสิ้น
	Gmail ใหม่
	ข้อความ Google Talk ใหม่
	ข้อความใหม่

หน้าจอหลักของคุณ

ไอคอน	รายละเอียด
	กำลังเล่นเพลง
	เหตุการณ์ที่จะเกิดขึ้น
	เปิดวิทยุ FM ในแบ็คกราวด์
	กำลังใช้งานการปล่อยสัญญาณผ่าน USB
	กำลังใช้งาน Portable Wi-Fi hotspot



ไอคอน	รายละเอียด
	กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกดและการป้อนข้อความ

แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

 แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณสามารถแตะแท็บนี้ค้างไว้เพื่อดูเมนูตั้งค่าได้

แตะเพื่อดูหรือแตะค้างเพื่อเปลี่ยนภาษาที่ใช้เขียน

แตะเพื่อแทรกอีโมติคอนเมื่อเขียนข้อความ

แตะเพื่อเว้นวรรค

แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

แตะเพื่อลบตัวอักษรก่อนหน้า

แตะเพื่อซ่อนแป้นพิมพ์บนหน้าจอ

หน้าจอหลักของคุณ

การป้อนตัวอักษรที่ใช้สำหรับ เน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปนเป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á")

ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มซุมเขาจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก
คุณจะมีโอกาสเปิดการใช้เครือข่าย
เพื่อลงชื่อเข้าใช้แอคเคาท์ Google
และเลือกวิธีการใช้บริการ Google
ที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google ของคุณ:

- ลงชื่อเข้าใช้แอคเคาท์ Google
จากหน้าจอตั้งค่าที่แสดง

หรือ

- แอปพลิเคชัน > เลือกแอปพลิเคชัน
Google เช่น **Gmail** > เลือก **สร้าง**
เพื่อสร้างแอคเคาท์ใหม่

หากคุณมีแอคเคาท์ Google ให้ป้อน
อีเมลแอดเดรสและรหัสผ่านของคุณ
จากนั้นแตะ **ลงชื่อเข้าใช้**

เมื่อคุณตั้งค่าแอคเคาท์ Google
บนโทรศัพท์ โทรศัพท์ของคุณจะ
ซิงโครไนซ์กับแอคเคาท์ Google
บนเว็บโดยอัตโนมัติ

การตั้งค่าแอคเคาท์ Google

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บ จะซิงโครไนซ์กับโทรศัพท์ของคุณ (ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากไซนอิน คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

Wi-Fi

ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "ฮอตสปอต" จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ

เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ

ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

หมายเหตุ: ถ้าคุณอยู่นอกพื้นที่ Wi-Fi หรือตั้งค่า Wi-Fi เป็น **ปิด** อาจมีการคิดค่าใช้จ่ายเพิ่มเติมโดยผู้ให้บริการเครือข่าย โทรศัพท์เคลื่อนที่สำหรับการใช้งานข้อมูล โทรศัพท์เคลื่อนที่

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

การเปิด Wi-Fi

และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi
 - 2 แตะ **Wi-Fi** เพื่อเปิด และเริ่มสแกนหาเครือข่าย Wi-Fi
- รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ

3 แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายเป็นแบบเปิด คุณจะต้องยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่าย โดยการแตะ **เชื่อมต่อ**
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับการแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 4 แแถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

บลูทูธ

คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้อง ไม่ใช่จากเมนูบลูทูธเหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

เคล็ดลับ! ด้วย LG-E730 คุณสามารถสนุกสนานกับบลูทูธความเร็วสูงได้ หากอุปกรณ์ที่คุณต้องการแบ่งปันไฟล์สนับสนุนบลูทูธความเร็วสูงด้วย ไฟล์จะถูกส่งผ่านเครือข่ายความเร็วสูงโดยอัตโนมัติในการส่งข้อมูลด้วยบลูทูธความเร็วสูง ก่อนใช้โปรดตรวจสอบว่า Wi-Fi เป็น ปิดแล้วในอุปกรณ์ของคุณ การตั้งค่าบลูทูธความเร็วสูงอาจแตกต่างกันขึ้นอยู่กับอุปกรณ์ โปรดตรวจสอบการตั้งค่าของอุปกรณ์กับผู้ให้บริการ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

การเปิดบลูทูธและการจับคู่โทรศัพท์
ของคุณกับอุปกรณ์บลูทูธ

- 1 แอปพลิเคชัน > ตั้งค่า >
ตั้งค่าการเชื่อมต่อ > บลูทูธ > เปิด
- 2 ไปที่ การตั้งค่า > สแกนหาอุปกรณ์
- 3 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย
จากรายการ

เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะ
เชื่อมต่อกับอุปกรณ์นั้น

ถ้าอุปกรณ์ที่คุณต้องการจับคู่ไม่อยู่ในราย
การ ให้ตรวจสอบว่าอุปกรณ์นั้นได้รับการ
ตั้งค่าเป็น **ค้นหาได้** แล้วสแกนอีกครั้ง

การส่งรูปภาพโดยใช้บลูทูธ

- 1 เลือกรูปภาพ > เมนู > แบ่งปัน >
บลูทูธ
- 2 ตรวจสอบว่า บลูทูธ เป็น เปิด
แล้วเลือก สแกนหาอุปกรณ์
- 3 เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูล
จากรายการ

การแบ่งปันการเชื่อมต่อข้อมูลใน โทรศัพท์

การปล่อยสัญญาณผ่าน USB และ
Portable Wi-Fi hotspot เป็นคุณสมบัติ

ที่ยอดเยี่ยมในกรณีที่ไม่มี การเชื่อมต่อ
ไร้สายให้ใช้งาน คุณสามารถแบ่งปัน
การเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์มากกว่าหนึ่งเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi hotspot ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนในแถบการแจ้ง

สำหรับข้อมูลล่าสุดเกี่ยวกับการปล่อยสัญญาณและ Portable hotspot รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่ <http://www.android.com/tether>

การตั้งค่าการปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot:

- แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > Tethering & portable hotspot > เลือกตัวเลือกที่คุณต้องการปรับ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

เคล็ดลับ!

หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ (เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการแชร์ แต่ถ้าคุณกำลังใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่น คุณอาจจำเป็นต้องเตรียมการเครื่องคอมพิวเตอร์ของคุณสำหรับการเชื่อมต่อเครือข่ายด้วย USB สำหรับข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การเปลี่ยนชื่อหรือการตั้งค่าป้องกันของ Portable hotspot

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

- 1 บนหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน**  และเลือก **ตั้งค่า**
- 2 แตะ **ตั้งค่าการเชื่อมต่อ** แล้วเลือก **Tethering & portable hotspot**
- 3 ตรวจสอบให้แน่ใจว่าเลือก **Portable Wi-Fi hotspot** ไว้แล้ว

4 แตะ **Portable Wi-Fi hotspot settings**

5 แตะ **Configure Wi-Fi hotspot**

- กล้องโต้ตอบ **Configure Wi-Fi hotspot** จะเปิดขึ้น
- คุณสามารถเปลี่ยน SSID (ชื่อ) ของเครือข่าย ที่จะปรากฏ ให้คอมพิวเตอร์เครื่องอื่นๆ เห็นเมื่อทำการสแกนหาเครือข่าย Wi-Fi
- นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected

Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)

- หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟิลเตอร์สฟานจะถูกเพิ่มลงในกล้องโต้ตอบ **Configure Wi-Fi hotspot** ถ้าคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวเมื่อทำการเชื่อมต่อ hotspot ของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถแตะ **เปิด** ในเมนู **ระบบป้องกัน** เพื่อลบระบบป้องกันออกจากเครือข่าย Wi-Fi ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

ข้อควรระวัง!

หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็น เปิด คุณจะไม่สามารถป้องกันการให้บริการออนไลน์โดยไม่ได้รับอนุญาตของบุคคลอื่นและอาจมีค่าใช้จ่ายเพิ่มเติม คุณควรเปิดใช้งานตัวเลือกระบบป้องกันเสมอ เพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

6 แต่ บันทึก

การใช้ Wi-Fi Cast

คุณสามารถแบ่งปันเนื้อหาที่เป็นเพลง รูปภาพ และวิดีโอให้กับผู้ใช้คนอื่นๆ ที่ใช้โทรศัพท์ Android และเชื่อมต่อผ่านเครือข่าย Wi-Fi และ Wi-Fi Directed เดียวกันได้

ตรวจสอบเครือข่าย Wi-Fi และ Wi-Fi Directed ของคุณล่วงหน้า และตรวจสอบว่าผู้ใช้เชื่อมต่อกับเครือข่ายเดียวกัน

- 1 แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า **Wi-Fi Direct** > **Wi-Fi Direct** > เปิด
- 2 เลือกอุปกรณ์ที่ต้องการเชื่อมต่อจากรายการอุปกรณ์ที่สแกนหา
- 3 แตะ **เชื่อมต่อ**

การใช้งาน **Wi-Fi Direct** เพื่อแบ่งปันผ่าน **SmartShare**

Wi-Fi Direct จะสแกนหาอุปกรณ์ Wi-Fi Direct ที่อยู่ในบริเวณใกล้เคียงโดยอัตโนมัติ และอุปกรณ์ที่ค้นหาพบจะ

ปรากฏอยู่บนหน้าจอโดยเรียงตามลำดับการค้นพบ และคุณสามารถเลือกอุปกรณ์ที่ต้องการเพื่อทำการแบ่งปันข้อมูลมัลติมีเดียผ่าน Smart Share ได้

Wi-Fi Direct จะไม่สามารถใช้งานได้ในขณะที่ใช้ฟังก์ชัน Wi-Fi อื่นๆ อยู่

- 1 แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า **Wi-Fi Direct**
- 2 ตรวจสอบว่าเลือก **Wi-Fi Direct** เป็นเปิด

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

3 เลือกอุปกรณ์ที่ต้องการเชื่อมต่อจากรายการอุปกรณ์ที่สแกนหา

Forced Group owner mode –
แตะเพื่อเปิดใช้โหมดเจ้าของของกลุ่ม
ซึ่งจะทำให้อุปกรณ์ Wi-Fi รุ่นเก่าสามารถ
เชื่อมต่อได้ด้วยการสแกนหาโทรศัพท์ของคุณ
ในกรณีนี้ คุณจะต้องป้อนรหัสผ่านที่
ตั้งไว้ใน **เมนู > ขั้นสูง > รหัสผ่าน**

หมายเหตุ: เมื่อโทรศัพท์ของคุณอยู่ในโหมดเจ้าของกลุ่ม จะใช้พลังงานแบตเตอรี่มากกว่าปกติ การเชื่อมต่อ Wi-Fi Direct ไม่รวมบริการอินเทอร์เน็ต เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่ายไร้สาย อุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้

การเปิด SmartShare และอนุญาตให้แบ่งปันเนื้อหา

1แตะแท็บ แอปพลิเคชัน  และเลือก SmartShare

2 กดปุ่ม **เมนู** และเลือก **ตั้งค่า**

3แตะช่องทำเครื่องหมาย ค้นหาได้ เพื่อเปิด

- แตะ **รับคำขอเสมอ** หากคุณต้องการยอมรับคำขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
- แตะ **รับไฟล์** หากคุณต้องการอนุญาตให้อุปกรณ์อื่นอัปโหลดไฟล์ไปยังโทรศัพท์ของคุณได้โดยอัตโนมัติ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

4 ในส่วนแบ่งปันคอนเทนต์ ให้แตะเพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก **รูปภาพ, วิดีโอ และ เพลง**

5 SmartShare เปิดใช้งานแล้วและพร้อมแบ่งปันเนื้อหา

การแบ่งปันเนื้อหาจากไลบรารีเนื้อหา ระยะใกล้กับอุปกรณ์อื่น

ให้อุปกรณ์แสดงผลของคุณ (เช่น ทีวี) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหา ระยะใกล้ของคุณ (เช่น คอมพิวเตอร์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA ในอุปกรณ์ของคุณ (เช่น ทีวีและคอมพิวเตอร์) อย่างถูกต้องแล้ว

- 1** แตะปุ่มบนขวาหรือเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
- 2** แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหา ระยะใกล้
- 3** คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4** แตะภาพขนาดเล็กของเนื้อหา หรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**

การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่นทีวี)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

- 1** ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน **คลังภาพ** ให้แตะค้างไว้เพื่อเลือกหลายไฟล์ จากนั้นคุณสามารถเลือกไฟล์หลายไฟล์เพื่อแบ่งปันได้

- 2** แตะ **แบ่งปัน** บนเมนู และเลือก **SmartShare**

- 3** **SmartShare** จะเริ่มทำงานโดยอัตโนมัติด้วยไฟล์ที่เลือก

- 4** เลือกอุปกรณ์จากรายการอุปกรณ์แสดงผลเพื่อเล่นไฟล์

หมายเหตุ: ทำตามขั้นตอนเดียวกันนี้เพื่อใช้เครื่องเล่นเพลง กล้องถ่ายรูป และเครื่องเล่นวิดีโอเพื่อแบ่งปันเนื้อหา

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

หมายเหตุ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้ อุปกรณ์ DLNA บางประเภท (เช่น ทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล

1 **แตะแท็บ แอปพลิเคชัน**  **และเลือก SmartShare**

2 **แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล**

3 **คุณสามารถเรียกดูไลบรารีเนื้อหาได้**

4 **แตะภาพขนาดเล็กของเนื้อหา แล้วแตะปุ่มเมนูดาวน์โหลด**

หมายเหตุ: ไม่สนับสนุนเนื้อหาบางประเภท

การอัปโหลดเนื้อหาจากโทรศัพท์ของฉันไปยังไลบรารีเนื้อหาระยะไกล

หมายเหตุ: ตรวจสอบว่าใส่การ์ด SD ถูกต้องและเลือกรับไฟล์ในเมนูตั้งค่าแล้ว

1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**

2 แตะปุ่มบนซ้ายและเลือกโทรศัพท์
ของคุณ

3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้





4 แตะภาพขนาดเล็กของเนื้อหาค้างไว้
แล้วแตะ **ปุ่มเมนูอัปโหลด**


5 เลือกอุปกรณ์ของไลบรารีเนื้อหาระยะ
ไกลที่จะอัปโหลด

หมายเหตุ: อุปกรณ์ที่ใช้ DLNA
บางประเภทไม่สนับสนุนฟังก์ชัน
อัปโหลด DMS และจะไม่มีการ
อัปโหลด ไม่สนับสนุนเนื้อหาบางประเภท


การโทร

การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้แตะ 
- 3 แตะ  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอน วางสาย 

เคล็ดลับ! ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ 

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทร โดยแตะ **ค้นหา**
- 3 ในรายชื่อ ให้แตะรายชื่อที่คุณต้องการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อคุณได้รับสายเรียกเข้าในสถานะล็อคให้ลาก  ไปทางขวาเพื่อรับสายเรียกเข้า

ลากไอคอน  ไปทางซ้ายเพื่อปฏิเสธสายเรียกเข้า

ลากแถบ **ข้อความขอโทษ** จากด้านล่าง หากต้องการส่ง



เคล็ดลับ! ข้อความขอโทษ

คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการตอบกลับข้อความในระหว่างการประชุม



การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **ปุ่มตัวเลข**  และหมายเลข นอกจากนี้ คุณสามารถค้นหาได้โดยแตะ รายชื่อ  และเลือกหมายเลขที่คุณต้องการออก

การโทร

- 2 **แตะ**  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพับสายไว้
- 4 **แตะ** หมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่  **รวมสาย** เพื่อทำการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้ **แตะ** **วางสาย** หรือกดปุ่มหน้าหลัก และเลื่อนแถบการแจ้งเตือน และเลือก **วางสาย**

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร


บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ **บันทึกการโทร** ดูรายการสายที่โทรออก ได้รับ ไม่ได้รับ และโทรด้วยเสียงทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ! กดปุ่ม เมนู จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน**  เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนแล้วแตะ **ตั้งค่า**
- 3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ

รายชื่อ



เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

ในหน้าจอหลัก

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะ ค้นหา และป้อนชื่อโดยใช้แป้นพิมพ์

การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วกดปุ่ม เมนู แตะ เพิ่มในรายชื่อ และ สร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพ เลือกจาก ภาพถ่าย หรือ เลือกจากคลังภาพ
- 3 เลือกประเภทรายชื่อโดยแตะ 
- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ

5 ตะ บันทีก


เพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ
ไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท

- 1 ตะ  เพื่อเปิด รายชื่อ
- 2 ตะที่รายชื่อเพื่อดูรายละเอียด
- 3 ตะดาวทางด้านขวาของชื่อ
ดาวจะเปลี่ยนเป็นสีน้ำเงิน


การลบรายชื่อออกจากรายชื่อเพื่อน สนิท

- 1 ตะ  เพื่อเปิด รายชื่อ
- 2 ตะที่แท็บ **กลุ่ม** เลือก **รายการโปรด**
ที่ด้านบนสุดของรายการ แล้วเลือกราย
ชื่อที่ต้องการดูรายละเอียด
- 3 ตะที่ดาวสีน้ำเงินทางด้านขวาของ
ชื่อ ดาวจะเปลี่ยนเป็นสีเทาและรายชื่อ
จะถูกลบออกจากรายชื่อเพื่อนสนิท

รายชื่อ

การย้ายรายชื่อจากโทรศัพท์เก่าไปยังโทรศัพท์ใหม่

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากโทรศัพท์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Suite


- 1 ติดต่อ PC Suite IV
ในคอมพิวเตอร์ก่อน เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือก  ไปที่ **ไฟล์ > อิมพอร์ต** และเลือกไฟล์ CSV ที่บันทึกไว้ในคอมพิวเตอร์ของคุณ

- 3 หากไฟล์อยู่ในไฟล์ CSV ที่อิมพอร์ตแตกต่างจากไฟล์ที่อยู่ใน LG PC Suite IV คุณจำเป็นต้องแมปไฟล์ หลังจากแมปไฟล์ ให้คลิก ตกลง จากนั้นรายชื่อจะถูกเพิ่มใน PC Suite IV
- 4 หาก PC Suite IV ตรวจพบการเชื่อมต่อของโทรศัพท์ LG-E730 (โดยใช้สายเคเบิล USB) ให้คลิก **ซิงค์** หรือ **ซิงค์รายชื่อ** เพื่อซิงค์ไครนซ์รายชื่อที่บันทึกในคอมพิวเตอร์กับโทรศัพท์

ข้อความ

โทรศัพท์ LG-E730 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเมนูที่ใช้ง่ายเพียงเมนูเดียว

การส่งข้อความ

- 1 **แตะไอคอน**  บนหน้าจอหลักและแตะ **ข้อความใหม่** เพื่อเปิดข้อความเปล่า
- 2 **ป้อนรายชื่อหรือหมายเลขของรายชื่อ** ในฟิลด์ **ถึง** ขณะที่คุณป้อนรายชื่อรายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณ


สามารถเพิ่มรายชื่อหลายรายการได้


หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 **แตะฟิลด์ป้อนข้อความ** และเริ่มต้นเขียนข้อความ
- 4 **กดปุ่ม** **เมนู** เพื่อเปิดเมนูตัวเลือกเลือกจาก **เพิ่มเรื่อง, แนบ, ส่ง** และ **อื่นๆ**
- 5 **แตะที่** **ส่ง** เพื่อส่งข้อความ

ข้อความ

6 หน้าจอจะเปิดขึ้น พร้อมมีชื่อ/หมายเลขผู้รับตามด้วยข้อความการตอบกลับปรากฏบนหน้าจอขณะที่คุณดูและส่งข้อความเพิ่มเติม เธรดข้อความจะถูกสร้างขึ้น

 **คำเตือน:** การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

 **คำเตือน:** หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

กล่องเธรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การใช้สไมล์ย์

ทำให้ข้อความของคุณสนุกสนานมากขึ้น
ด้วยการใช้สไมล์ย์

เมื่อเขียนข้อความใหม่ ให้กดปุ่ม **เมนู**
แล้วเลือก **แทรกสไมล์ย์**

การเปลี่ยนการตั้งค่า ข้อความอัตโนมัติ

การตั้งค่าข้อความของโทรศัพท์ LG-E730
จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว
ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณ
สามารถเปลี่ยนการตั้งค่าโดยอิงตามความ
ต้องการของคุณ

แตะไอคอน **ข้อความ** บนหน้าจอหลัก
จากนั้นแตะปุ่ม **เมนู** และแตะ **ตั้งค่า**

อีเมล

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมลจากบริการอื่นๆนอกเหนือจาก Google Mail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณสามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

การเพิ่มแอคเคาท์อีเมลอื่น:

- แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ เดอะ เมนู > เพิ่มแอคเคาท์

หลังจากการตั้งค่าครั้งแรก อีเมลจะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

- แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ > ตั้งค่า

การลบแอคเคาท์อีเมล:

- แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ > ตั้งค่า > ตั้งค่าแอคเคาท์ที่คุณต้องการลบ > ลบแอคเคาท์

หน้าจอแอคเคาท์อีเมล

คุณสามารถแตะที่แอคเคาท์เพื่อดู ถัดเข้าแอคเคาท์ที่คุณใช้สำหรับส่งอีเมลตามค่าเริ่มต้นจะมีเครื่องหมายถูกเลือกไว้



– แตะเพื่อเปิดถาดเข้ารวม ซึ่งมีข้อความที่ส่งถึงแอคเคาท์ของคุณทั้งหมด ข้อความใน ถาดเข้ารวม

จะมีรหัสสีแสดงอยู่ทางด้านซ้าย แบ่งตามแอคเคาท์ โดยสีที่ใช้จะเป็นสีเดียวกับที่ใช้กับแอคเคาท์ในหน้าจอแอคเคาท์

อีเมล

 –แตะไอคอนโฟลเดอร์เพื่อเปิดโฟลเดอร์แอดเดคเคาท์

อีเมลล่าสุดในแอดเดคเคาท์เท่านั้นที่จะถูกดาวน์โหลดลงในโทรศัพท์ของคุณ ในการดาวน์โหลดข้อความอีเมลเพิ่มเติม (ก่อนหน้า) ให้แตะ **โหลดอีเมลเพิ่มเติม** ที่ด้านล่างของรายการอีเมล

การทำงานกับโฟลเดอร์แอดเดคเคาท์

แต่ละแอดเดคเคาท์ประกอบด้วยโฟลเดอร์ ถัดเข้า, ถัดออก, ส่งแล้ว และ ร่าง ทั้งนี้ คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอดเดคเคาท์ของคุณสนับสนุน

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ

- 1 เมื่ออยู่ในแอปพลิเคชัน อีเมล ให้แตะปุ่ม **เมนู** แล้วแตะ **เขียนข้อความ**

2 ป้อนแอดเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษร แอดเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น คั่นแอดเดรสแต่ละแอดเดรสด้วยเครื่องหมายอัฒภาค

3 เพิ่ม Cc/Bcc และเพิ่มไฟล์สิ่งที่แนบหากต้องการ

4 ป้อนตัวอักษรในข้อความ

5 แตะปุ่ม **ส่ง**
หากคุณไม่ได้เชื่อมต่อกับเครือข่ายตัวอย่างเช่น หากคุณกำลังเปิดใช้งานโหมดเครื่องบิน ข้อความที่คุณต้อง

การส่งจะถูกเก็บในโฟลเดอร์ ภาดออกจนกว่าจะเชื่อมต่อกับเครือข่ายอีกครั้ง หากมีข้อความที่กำลังรอส่งอยู่ ภาดออกจะปรากฏบนหน้าจอ แอดเดรส

เคล็ดลับ! เมื่อภาดเข้ามีอีเมลใหม่เข้ามา คุณจะได้รับแจ้งด้วยเสียงพร้อมการสั่น และที่การแจ้งอีเมลเพื่อหยุดการแจ้ง


เครือข่ายสังคม

คุณสามารถใช้โทรศัพท์สำหรับเครือข่ายสังคม และเพื่อจัดไมโครบล็อกของคุณในชุมชนออนไลน์ คุณสามารถอัปเดตสถานะ ปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้

หากคุณไม่มีแอคเคาท์ คุณสามารถไปที่เว็บไซต์เพื่อสร้างแอคเคาท์ได้

หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ

- 1.แตะหน้าจอหลักค้างไว้ เมื่อมี Widget ต่างๆ ปรากฏขึ้น ให้เลือก **Social+**  และแตะ  ปุ่มตั้งค่า คุณยังสามารถเข้าใช้ได้ด้วยวิธีอื่น บนหน้าจอหลัก เลือกตั้งค่า แอปพลิเคชัน > ตั้งค่า > บัญชีและการซิงค์ > ตั้งค่า **Social+**
- 2.เลือกแอปพลิเคชันเครือข่ายสังคมที่คุณต้องการใช้จาก Facebook, Twitter และ MySpace
- 3.ป้อนอีเมลแอดเดรสและรหัสผ่านชุมชนขอ

งคุณ จากนั้นแตะ **Log In**

- 4 โปรตรอสักครู่ขณะกำลังยืนยันรายละเอียดของคุณกับชุมชนของคุณ
- 5 หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

การดูและอัปเดตสถานะของคุณ

- 1 คุณสามารถดูและอัปเดตเนื้อหาชุมชนได้โดยใช้ Widget **Social+**  ได้ทุกเมื่อ
- 2 บน Widget **Social+**  เลือกบริการเครือข่ายสังคมที่คุณล็อกอิน แล้วคุณ will เห็นสถานะและเนื้อหาของคุณ

- 3 เมื่อคุณแตะที่ช่องป้อนข้อความ จะสลับหน้าจอเพื่ออัปเดตสถานะปัจจุบันพร้อมความเห็น หรือเพื่ออัปโหลดรูปภาพ

เคล็ดลับ! คุณสามารถอัปเดตสถานะของคุณพร้อมกันได้ โดยทำเครื่องหมายบริการ SNS ที่คุณต้องการอัปโหลดจาก **Facebook, Twitter** และ **MySpace**

หมายเหตุ: การดำเนินการนี้ขึ้นอยู่กับบริการเครือข่าย


เครือข่ายสังคม

เคล็ดลับ! คุณสามารถใช้ข้อมูลเกี่ยวกับเพื่อนได้ ไซต์เครือข่ายสังคมเท่านั้น หรือชิงโคร! ในข้อมูลทั้งหมดกับรายชื่อ

การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ


- 1 เลือก แอปพลิเคชัน > ตั้งค่า > แอคเคาท์และการซิงค์
- 2 เลือกแอคเคาท์ที่คุณต้องการลบแล้วแตะ **ลบแอคเคาท์**

Facebook และ Twitter

- 1 บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน  เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลือกแอปพลิเคชันเครือข่ายสังคมที่คุณต้องการใช้ระหว่าง Facebook และ Twitter
- 3 ป้อนอีเมลแอดเดรสและรหัสผ่านที่คุณตั้งค่าบนชุมชนของคุณ แล้วแตะ Log In
- 4 โปรดรอซักครู่ กำลังตรวจสอบรายละเอียดของคุณกับชุมชนของคุณ
- 5 หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

กล้องถ่ายรูป

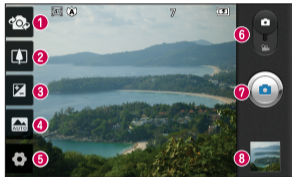

ทำความรู้จักกับช่องมองภาพ



- 1 **สลับเลนส์** – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 **ซูม** – ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงตามข้างใด
- 3 **ความสว่าง** – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าไปในภาพ
- 4 **โหมดภาพ** – เลือกจาก **อัตโนมัติ**, **รูปคน**, **แนวอน**, **กีฬา**, **กลางคืน** และ **ดวงอาทิตย์ตก**
- 5 **ตั้งค่า** – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 6 **โหมดวิดีโอ** – เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ
- 7 **การถ่ายภาพ**
- 8 **คลังภาพ** – แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูคลังภาพและดูภาพถ่ายที่บันทึกไว้ภายในโหมดกล้องถ่ายรูป

กล้องถ่ายรูป

การถ่ายภาพด่วน

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 ถู้อโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 แตะค้างที่ปุ่ม  เบาๆ ช่องโฟกัสจะปรากฏขึ้นที่กลางหน้าจอช่องมองภาพ
- 4 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 5 ยกนิ้วออกจาก 

เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ

แบ่งปัน

แตะเพื่อแบ่งปันรูปภาพของคุณโดยใช้ **SmartShare**, **บลูทูธ**, **อีเมล**, **Facebook**, **Gmail**, **ข้อความ**, **Picasa**, **Social+**, **Twitter** หรือ **Wi-Fi Cast**

เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันรูปภาพของคุณกับชุมชน SNS ได้

ตั้งเป็น

แตะเพื่อใช้ภาพเป็น
ไอคอนรายชื่อ หรือ พื้นหลัง

แก้ไข

แตะเพื่อแก้ไขชื่อของภาพที่เลือก



แตะเพื่อลบภาพ



แตะเพื่อถ่ายภาพอื่นทันที
ภาพปัจจุบันจะถูกบันทึก

การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

 – เรียกคืนการตั้งค่าเริ่มต้นของ
กล้องถ่ายรูป


 – แตะเมื่อใดก็ตามที่คุณต้องการทราบ
ว่าฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำ
แนะนำอย่างย่อกับคุณ


เปลี่ยนแปลงการตั้งค่ากล้องถ่ายรูปโดย
การเลื่อนรายการ หลังจากเลือกตัวเลือก
ให้แตะปุ่ม **กลับ**



– โฟกัสเฉพาะจุด

กล้องถ่ายรูป

 – เลือกความละเอียดภาพ
หากคุณเลือกความละเอียดสูง
ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่าคุณ
จะสามารถจัดเก็บรูปภาพในหน่วยความจำ
ได้น้อยลง

 – ISO กำหนดความไวของเซนเซอร์
แสงในกล้อง ISO ที่มากขึ้น
ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะ
เป็นประโยชน์สำหรับสภาพแวดล้อมที่มืด
ในขณะที่คุณไม่สามารถใช้แฟลชได้


 – ปรับปรุงคุณภาพสีในสภาพแสง
ต่างๆ

 – ใช้เอฟเฟกต์ศิลปะกับรูปภาพ

 – ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่ง
เป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้

 – เลือกโหมดชัตเตอร์ต่างๆ

 – แสดงรูปภาพที่คุณถ่ายล่าสุดโดย
อัตโนมัติ

 – เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการ และแก้ไขรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แก้ไขไปยังบล็อกที่สนับสนุนแก้ไขตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่


หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งาน GPS เท่านั้น

เคล็ดลับ! เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง, โทนสี, ตัวตั้งเวลาและโหมดถ่ายภาพ ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ! เมนูการตั้งค่าซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นดูตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า



กล้องวิดีโอ

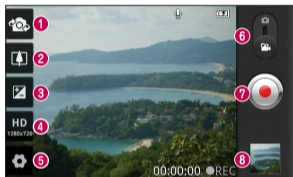ทำความรู้จักกับช่องมองภาพ



- 1 สลับเลนส์ – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ชุม – ชุมเข้าหรือชุมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้
- 3 ความสว่าง – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ
- 4 ขนาดวิดีโอ – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก
- 5 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 6 โหมดกล้องถ่ายรูป – เลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 7 เริ่มการบันทึก
- 8 คลังภาพ – แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูคลังภาพและวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ

การถ่ายวิดีโอด้วย

- 1 เลื่อนปุ่มโหมด กล้องถ่ายรูป ลง และไอคอนจะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถู้อิโตร์คัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 กดปุ่มบันทึก  หนึ่งครั้งเพื่อเริ่มการบันทึก
- 5 REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ

6 แตะที่

บนหน้าจอเพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ

ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ

เล่น

แตะเพื่อเล่นวิดีโอ



แบ่งปัน

แตะเพื่อแบ่งปันรูปภาพของคุณโดยใช้ **SmartShare**, **บลูทูธ**, **อีเมล**, **Facebook**, **Gmail**, **ข้อความ**, **Wi-Fi Cast** หรือ **Youtube**

กล้องวิดีโอ

แก้ไข


แตะเพื่อแก้ไขชื่อของวิดีโอ
ที่เลือก

-  แตะเพื่อถ่ายภาพวิดีโออื่นต่อ
วิดีโอปัจจุบันจะถูกบันทึก
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่าย
ไว้ ยืนยันโดยการแตะ **ตกลง**
ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัว
เลือกขั้นสูงทั้งหมด


 – เรียกคืนการตั้งค่าเริ่มต้นของกล้อง
ถ่ายวิดีโอ

 – แตะเมื่อคุณต้องการทราบว่าฟังก์ชัน
นี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่าง
ย่อเกี่ยวกับคุณ

ปรับการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อน
รายการ หลังจากเลือกตัวเลือก ให้แตะปุ่ม
กลับ

 – ปรับปรุงคุณภาพสีในสภาพแสง
ต่างๆ

 – เลือกโทนสีเพื่อใช้กับรูปภาพมู
มองใหม่

 – ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอ
ของคุณ เลือกระหว่าง ปกติ และ MMS
เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็น
ข้อความ MMS ได้

 – เลือก **ปิดเสียง**
เพื่อบันทึกวิดีโอโดยไม่มีเสียง

 – รีวิวอัตโนมัติแสดงวิดีโอที่คุณบันทึก
ล่าสุดโดยอัตโนมัติ

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น
ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือ
ของหน้าจอ

มัลติมีเดีย




คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงใน
การดหน่วยความจำเพื่อเข้าถึงไฟล์รูปภาพ
และวิดีโอได้อย่างง่ายดาย

คลังภาพ

แตะแท็บ **แอปพลิเคชัน**  แล้วเลือก
คลังภาพ เปิดรายการของแถบแคตตาล็อก
ที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

หมายเหตุ: ตรวจสอบว่าได้ติดตั้งการ
ดหน่วยความจำลงในโทรศัพท์เพื่อบันทึกรูป
ภาพและเข้าใช้รูปภาพทั้งหมดของคุณ
หากไม่มีการดหน่วยความจำ โทรศัพท์จะไม่
แสดงรูปภาพหรือวิดีโอโดยไม่มีภาพ Picasa
ซึ่งอยู่ในอัลบั้ม Picasa

มุมมองตามลำดับเวลา

คลังภาพ ใน LG-E730 จะแสดงมุมมอง
ของรูปภาพและวิดีโอตามลำดับเวลา
ในโหมดมุมมองกริด ให้ลาก   
ไปทางขวา และวันที่ถ่ายภาพจะปรากฏขึ้น

โดยเริ่มจากล่าสุด หากคุณเลือกวันที่ระบุ
รูปภาพทั้งหมดที่คุณถ่ายในวันนั้นจะถูก
จัดกลุ่ม

เพลง

โทรศัพท์ LG-E730 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณ
ชื่นชอบทั้งหมดได้
ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่
เพลง

การโอนไฟล์เพลงโดยใช้อุปกรณ์ จัดเก็บข้อมูล USB

- 1 เชื่อมต่อโทรศัพท์ LG-E730
กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ทำการติดตั้งไดรเวอร์
แพลตฟอร์ม LG Android
ในคอมพิวเตอร์ของคุณ คุณต้อง
เปลี่ยนการตั้งค่าด้วยตัวเอง เลือก
ตั้งค่า > ที่เก็บข้อมูล แล้วเลือก
ที่เก็บข้อมูลเท่านั้น
- 3 แตะ เปิดที่เก็บข้อมูล USB

มีเดีย




4 คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณ และออนไลน์

หมายเหตุ: คุณต้องติดตั้งการ์ด SD ก่อน หากไม่มีการ์ด SD คุณจะไม่สามารถใช้ที่เก็บข้อมูล USB ได้

หมายเหตุ: หากคุณติดตั้งไดรเวอร์แพลตฟอร์ม LG Android คุณจะเห็นป๊อปอัพที่มีข้อความเปิดใช้ที่เก็บข้อมูล USB ในทันที

การเล่นเพลง

- 1 ในหน้าจอหลัก แตะที่ **แอปพลิเคชัน**  และเลือก **เพลง**
- 2 แตะ **เพลง**
- 3 เลือกเพลงที่คุณต้องการเล่น

	แตะเพื่อหยุดการเล่นไว้ชั่วคราว
	แตะเพื่อเริ่มเล่นต่อ
	แตะเพื่อข้ามไปที่แทร็คถัดไปในอัลบั้ม รายการเล่น หรือสลับเปลี่ยน

	แตะเพื่อข้ามไปที่แทร็คก่อนหน้าในอัลบั้ม รายการเล่น หรือสลับเปลี่ยน
	แตะเพื่อดูหน้าจอลไลบรารีเพลง
	แตะเพื่อตั้งค่าโหมดซ้ำ
	แตะเพื่อเล่นรายการเพลงปัจจุบันในโหมดสลับเปลี่ยน
	แตะเพื่อดูรายการเพลงปัจจุบัน

	แตะเพื่อดูเนื้อเพลง ตัวเลือกนี้ใช้ได้เมื่อเพลงมีเนื้อเพลงมาด้วยเท่านั้น
---	---

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์

แตะเพลงหนึ่งในรายการเพลงค้างไว้ หน้าจอจะแสดง **เลน**, **เพิ่มในรายการเพลง**, **ใช้เป็นเสียงเรียกเข้า**, **ลบ**, **แบ่งปัน**, **ค้นหา** และ **รายละเอียด** ขึ้นมาเป็นตัวเลือก

ลิขสิทธิ์มีเดีย

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับ ความคุ้มครองตามสนธิสัญญานานาชาติและ กฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้ สิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการ คัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ ให้ ตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

วิทยุ FM

โทรศัพท์ LG-E730 มีคุณสมบัติวิทยุ FM ในตัว ดังนั้น คุณสามารถค้นหาสถานีที่คุณ ชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

หมายเหตุ: คุณต้องใช้หูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องค้นหาอีกครั้ง คุณสามารถจัดเก็บได้สูงสุด 48 ของสถานีในโทรศัพท์ของคุณ

การปรับตั้งอัตโนมัติ

- 1 บนหน้าจอหลัก **แตะ** แท็บ **แอปพลิเคชัน**  **และเลือก** **วิทยุ FM**

- 2 กดปุ่ม **เมนู** แล้วแตะ **สแกนอัตโนมัติ**

- 3 หากมีช่องสถานีที่ตั้งไว้ล่วงหน้าแล้ว คุณจะเห็นป๊อปอัพ "รีเซ็ตช่องทั้งหมดและเริ่มสแกนอัตโนมัติ?" หากคุณเลือกตกลง ช่องสถานีที่ตั้งไว้ล่วงหน้าทั้งหมดจะถูกลบและจะเริ่มค้น **สแกนอัตโนมัติ**

- 4 ระหว่างการสแกนอัตโนมัติ **แตะ** **หยุด** หากคุณต้องการหยุดการสแกน โดยจะบันทึกเฉพาะของสถานีที่สแกนพบก่อนหยุดการสแกนเท่านั้น

มีเดีย


หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ปุ่มหมุนบนหน้าจอ

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ

หากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิตมาเพื่อใช้รับสัญญาณวิทยุ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้

ยูทิลิตี้

การตั้งเวลาการปลุก

- 1 แอปพลิเคชัน > ตั้งปลุก/นาฬิกา >  > การเตือนใหม่
- 2 หลังจากที่กำหนดเวลาแล้ว โทรศัพท์ LG-E730 จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก
- 3 ตั้งค่า ระยะเวลาเลื่อน, สั่น, เสียงปลุก และ **Puzzle lock** แล้วเพิ่มป้ายกำกับเพื่อตั้งชื่อการปลุก และบันทึก

การใช้เครื่องคิดเลข

- 1 แอปพลิเคชัน > เครื่องคิดเลข
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน กดปุ่มเมนู แตะที่ **พาเนลขั้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ

ยุทธวิธี

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แอปพลิเคชัน > ปฏิทิน
- 2 ในการตรวจสอบเหตุการณ์ ให้แตะวันที่ แตะปุ่ม **เมนู** หากคุณต้องการเพิ่มเหตุการณ์ใหม่ แตะ **เหตุการณ์ใหม่**
- 3 แตะ **อะไร** แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น
- 4 แตะ **ที่ใด** แล้วป้อนสถานที่
- 5 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย**

แล้วป้อนรายละเอียด

- 6 หากคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **การทำซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น
- 7 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

การเปลี่ยนมุมมองปฏิทิน

- 1 แอปพลิเคชัน > ปฏิทิน
- 2 ที่ด้านบนของหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ เดือน นัดหมาย)

Polaris Office

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ใช้ออกเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

การจัดการไฟล์

Polaris Office ให้ผู้ใช้ออกจัดการไฟล์ รวมถึงการคัดลอก การตัด และการวาง และลบไฟล์และโฟลเดอร์ได้อย่างสะดวกบนมือถือ

การดูไฟล์

ผู้ใช้ออกสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือเมื่อดูเอกสารโดยใช้ Polaris Office ออปเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

เว็บไซต์

บราวเซอร์

บราวเซอร์ ช่วยให้ท่านเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของท่าน ได้ทุกที่และทุกอย่างที่ท่านต้องการ

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้แถบเครื่องมือเว็บ



แตะเพื่อย้อนกลับหนึ่งเพจ



แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม **ย้อนกลับ** ซึ่งจะไปยังเพจก่อนหน้า



แตะเพื่อแสดงหน้าต่างที่เปิดอยู่ทั้งหมด



แตะเพื่อเพิ่มหน้าต่างใหม่



แตะเพื่อเปลี่ยนการตั้งค่าบราวเซอร์

การใช้ตัวเลือก

กดปุ่ม เมนู เพื่อดูตัวเลือก

-  **บุ้คมาร์ค** – ดูบุ้คมาร์คปัจจุบันและเพิ่มบุ้คมาร์คใหม่ นอกจากนี้ คุณยังสามารถดูประวัติเบราว์เซอร์ของคุณ
-  **เพิ่มบุ้คมาร์ค** – เพิ่มเว็บเพจปัจจุบันเป็นบุ้คมาร์ค
-  **อ่านทีหลัง** – เพิ่มใน อ่านทีหลัง
-  **เพิ่ม RSS feed** – เพิ่มเว็บเพจปัจจุบันใน RSS feed
-  **แบ่งปันเพจ** – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้



อื่นๆ





- **ค้นหาบนหน้า:** ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน
- **เลือกข้อความ:** ให้คุณคัดลอกข้อความใดๆ จากเว็บเพจ
- **เพิ่มปุ่มลัดในหน้าหลัก:** เพิ่มปุ่มลัดของเพจปัจจุบันในหน้าหลัก
- **ข้อมูลเพจ:** แสดงข้อมูลเว็บเพจ
- **ดาวน์โหลด:** แสดงประวัติดาวน์โหลดของคุณ

LG On-Screen Phone 2.0

LG On-Screen Phone 2.0 ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธหรือ Wi-Fi คุณยังสามารถควบคุมโทรศัพท์จากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

ไอคอน On-Screen Phone 2.0

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ หรือยกเลิกการเชื่อมต่อ
-  หมุนหน้าต่าง On-Screen Phone (ต้องใช้แอปพลิเคชันที่รองรับการหมุน)

-  เริ่มต้น LG Home Panorama หรือเปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

คุณสมบัติ On-Screen Phone 2.0

- **การถ่ายโอนและการควบคุมแบบเรียลไทม์:** แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- **การควบคุมเมาส์:** ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอมพิวเตอร์
- **ป้อนข้อความด้วยแป้นพิมพ์:** ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์

- **ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์):** ส่งไฟล์จากโทรศัพท์ (เช่น คลังภาพ เครื่องเล่นวิดีโอ เพลง และ Polaris Office) ไปยังคอมพิวเตอร์ เพียงแค่คลิกขวาแล้วลากเพื่อส่งไฟล์ไปยังคอมพิวเตอร์
- **ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์):** ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง

LG On-Screen Phone 2.0

On-Screen Phone ไฟล์ที่คุณส่งจะถูกจัดเก็บโฟลเดอร์ OSP

- **การแจ้งเตือนเหตุการณ์แบบเรียลไทม์:** ป้อนข้อข้อความเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความมาถึงตลอดจนแจ้งเมื่อถึงเวลาปลุกและแจ้งเตือนเหตุการณ์
- **LG Home Panorama:** จะแสดงพื้นที่ทำงานทั้งหมดของ LG Home คุณสามารถจัดเรียงไอคอน Widget ได้ง่ายๆ และรันแอปพลิเคชันได้โดยดับเบิลคลิกข้อความ

หมายเหตุ: โปรดทราบว่า LG Home เป็น Launcher เริ่มต้น

การติดตั้ง On-Screen Phone ในคอมพิวเตอร์

หากคุณติดตั้ง LG PC Suite IV โปรแกรม On-Screen Phone จะถูกดาวน์โหลดลงในคอมพิวเตอร์ของคุณด้วย จากนั้นคุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

การเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์

On-Screen Phone 2.0 ให้การเชื่อมต่อ USB, บลูทูธ และ Wi-Fi โปรดทำตามคำแนะนำในวีซาร์ดการเชื่อมต่อของโปรแกรม OSP

หมายเหตุ: โปรดตรวจสอบว่าเลือกช่องทำเครื่องหมาย On-Screen Phone ใน **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่าโทรศัพท์บนหน้าจอ** แล้ว โปรดทราบว่าแบตเตอรี่อาจหมดเร็วขึ้นเนื่องจากการใช้กระแสไฟหากเชื่อมต่อ On-Screen Phone ผ่าน Wi-Fi

LG On-Screen Phone 2.0

การตรวจสอบการเชื่อมต่อ On-Screen Phone

เมื่อเชื่อมต่ออุปกรณ์แล้ว ให้ลากแถบสถานะที่ด้านบนของหน้าจอหลักลงมาเพื่อตรวจสอบสถานะการเชื่อมต่อ On-Screen Phone

การยกเลิกการเชื่อมต่อโทรศัพท์ กับคอมพิวเตอร์

คลิก  ที่ด้านบนซ้ายของหน้าต่าง On-Screen Phone หรืออีกวิธีหนึ่งคือให้ลากแถบการแจ้งเตือนที่ด้านบนของหน้าจอหลักลงมา แล้วเลือก "เชื่อมต่อ On-Screen Phone" และ "ตกลง" ในกล่องโต้ตอบยกเลิกการเชื่อมต่อ

ตั้งค่า

ในหน้าจอหลักแตะแท็บ **แอปพลิเคชัน**
 แล้วเลื่อนไปและแตะ **ตั้งค่า**

ตั้งค่าการเชื่อมต่อ

ในหน้าจอนี้ คุณสามารถจัดการ Wi-Fi และบลูทูธ คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ และสลับไปยังโหมดเครื่องบินได้ด้วย

โหมดเครื่องบิน –

หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Wi-Fi – เปิด Wi-Fi

เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

ตั้งค่า Wi-Fi – ให้คุณสามารถตั้ง

ค่าและจัดการจุดเชื่อมต่อไร้สาย

ตั้งค่าการแจ้งเครือข่าย หรือเพิ่มเครือข่าย

Wi-Fi หน้าจอตั้งค่า Wi-Fi ขั้นสูงจะเข้า

ใช้จากหน้าจอตั้งค่า Wi-Fi กดปุ่ม **เมนู**

และแตะ **ขั้นสูง**

ตั้งค่า Wi-Fi Direct – ตั้งชื่ออุปกรณ์

Wi-Fi Direct และสแกนหาอุปกรณ์อื่นๆ

ตั้งค่า

เคล็ดลับ! การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยพีซีของคุณจำเป็นต้องป้อน MAC แอดเดรสของ LG-E730 ลงในเราเตอร์ คุณสามารถค้นหา MAC แอดเดรสได้ในเมนูสำหรับผู้ใช้อุปกรณ์: **แตะ แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi** แล้วกดปุ่ม **เมนู** แล้วเลือก **ขั้นสูง > MAC แอดเดรส**

บลูทูธ – เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

การตั้งค่า – ตั้งชื่ออุปกรณ์และโหมดค้นหาได้ สแกนหาอุปกรณ์อื่นๆ หรือตรวจสอบรายการอุปกรณ์บลูทูธที่คุณกำหนดค่าก่อนหน้านี้ และที่ตรวจพบเมื่อโทรศัพท์สแกนหาอุปกรณ์บลูทูธครั้งล่าสุด

Tethering & portable hotspot – คุณสามารถกำหนดการตั้งค่าการปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot

ตั้งค่า VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, จุดเชื่อมต่อ (APN) และอื่นๆ

ตั้งค่าโทรศัพท์บนหน้าจอ – ให้คุณเปิด On-Screen Phone และเปลี่ยนรหัสผ่าน On-Screen Phone (รหัสผ่านเริ่มต้นคือ "0000")

ตั้งค่าการโทร

< กำหนดเบอร์โทรออก >

เลือก **กำหนดเบอร์โทรออก** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากรหัสโทรศัพท์ได้ คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากรหัสโทรศัพท์ได้

< ขอลความเสียง >

บริการขอลความเสียง – ให้คุณเลือกบริการขอลความเสียงของผู้ให้บริการ

ตั้งค่า

ตั้งค่าข้อความเสียง – หากคุณใช้บริการข้อความเสียงของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขโทรศัพท์ที่ใช้ฟังและจัดการข้อความเสียงของคุณ

< ตั้งค่าการโทรอื่นๆ >

ป้องกันการโทร – เลือกเมื่อคุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

ปฏิเสธการรับสาย – ตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจาก **ปิด**, **ปฏิเสธรายการ** หรือ **ปฏิเสธทุกสาย**

ข้อความขอโทษ – เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

ตั้งค่าสนทนาวิดีโอ – เปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ

การส่งต่อสาย – เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อไม่มีสัญญาณ

เวลาโทร – ระยะเวลาการโทรทั้งหมด ได้แก่ ทุกสาย สายโทรออก สายที่ได้รับ และการโทรครั้งล่าสุด

ค่าโทร – ดูค่าใช้จ่ายการโทรของคุณ บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการ บางรายไม่รองรับฟังก์ชันนี้

เพิ่มการตั้งค่า – ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

- **ข้อมูลผู้โทร:** เลือกแสดงหมายเลขของคุณในการโทรออกหรือไม่
- **สายเรียกซ้อน:** หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังใช้งานโทรศัพท์ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

ตั้งค่า

เสียง

< ทั่วไป >

โหมดเงียบ – ให้คุณปิดเสียงทั้งหมด (รวมถึงเสียงเรียกเข้าของการโทรและการแจ้งเตือน) ยกเว้นเสียงจากเพลง วิดีโอ และการปลุกที่ตั้งไว้ (มีเดียและการปลุกต้องปิดเสียงในแอปพลิเคชันเหล่านั้น)

สั่น – ให้คุณตั้งค่าให้โทรศัพท์สั่นเมื่อคุณได้รับสายเรียกเข้า

ระดับเสียง – ให้คุณตั้งระดับเสียงสำหรับเสียงเรียกเข้า มีเดียและการปลุก หากคุณไม่ได้เลือกตัวเลือก ใช้ระดับเสียงสายเรียกเข้า สำหรับการแจ้งเตือน" คุณสามารถตั้งระดับเสียงสายเรียกเข้าและการแจ้งเตือนแยกกันได้

< สายเรียกเข้า >

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

< การแจ้ง >

เสียงเรียกเข้าของการแจ้ง – ให้คุณตั้งค่าเสียงการแจ้งเริ่มต้นของคุณ

< การตอบรับ >

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อใช้ปุ่มตัวเลขเพื่อหมุนหมายเลข

การเลือกเสียง – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่มไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองต่อการสัมผัส

เสียงล็อคหน้าจอ – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อล็อคและปลดล็อคหน้าจอ

การโต้ตอบการสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์สั่นเล็กน้อยเมื่อคุณแตะปุ่มเลือกต่างๆ และดำเนินการอื่นๆ

หน้าจอ

ความสว่าง – ปรับความสว่างของหน้าจอ

หมุนจออัตโนมัติ – ตั้งค่าเพื่อสลับการวางแนวโดยอัตโนมัติเมื่อหมุนโทรศัพท์

แอนิเมชัน – ตั้งค่าเพื่อแสดงแอนิเมชัน

ตั้งค่า

ไทม์เอาต์หน้าจอ – ตั้งค่าเวลาปิดหน้าจอ
แสดงแบบอักษร – เปลี่ยนแบบอักษร
ที่แสดง (เฉพาะเมนูภาษาอังกฤษ)

Gesture

ใช้การเดาทำทาง – ปรับตั้งค่าทำทาง
การเคลื่อนไหวสำหรับฟิลด์การป้อนข้อ
ความ สายเรียกเข้า การปลุก คลังภาพ
และเครื่องเล่นวิดีโอ

รีเซตเซนเซอร์ท่าทาง – การปรับเทียบ
เซนเซอร์การเคลื่อนไหวโดยวางโทรศัพท์
บนพื้นผิวราบ

พิกัดและการป้องกัน

ใช้เครือข่ายไร้สาย – หากคุณเลือก
ใช้เครือข่ายไร้สาย โทรศัพท์จะกำหนด
ตำแหน่งโดยประมาณจากการใช้เครือ
ข่าย Wi-Fi และโทรศัพท์เคลื่อนที่
เมื่อคุณเลือกตัวเลือกนี้
คุณจะได้รับแจ้งว่าจะยินยอมให้ Google
ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้
หรือไม่

ใช้ดาวเทียม GPS – หากคุณเลือก
ใช้ดาวเทียม GPS โทรศัพท์จะกำหนด
ตำแหน่งด้วยความแม่นยำระดับถนน
ตั้งค่าล็อคหน้าจอ – ตั้งค่าแบบปลดล็อค
เพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่
แนะนำคุณในการวาดแบบปลดล็อคหน้า
จอ คุณสามารถตั้ง **PIN** หรือ **รหัสผ่าน**
แทน **รูปแบบ** หรือเว้นไว้เป็น **ไม่มี** ได้
เมื่อคุณเปิดโทรศัพท์หรือเรียกหน้าจอ
คุณจะต้องวาดแบบปลดล็อคเพื่อ
ปลดล็อคหน้าจอ

ตั้งค่าล็อค SIM/RUIM card –
ตั้งค่าล็อค SIM/RUIM card หรือเปลี่ยน
PIN ของ SIM/RUIM card
รหัสผ่านที่มองเห็นได้ – เลือกให้แสดง
รหัสผ่านเมื่อคุณพิมพ์ หรือยกเลิกการเลือก
ให้ซ่อนรหัสผ่านเมื่อคุณพิมพ์
เลือกตัวช่วยอุปกรณ์ –
เพิ่มหรือลบตัวช่วย
ใช้รหัสเฉพาะรักษาความปลอดภัย –
ให้คุณเข้าถึงใบรับรองความปลอดภัย
ติดตั้งจากการ์ด SD – เลือกติดตั้ง
ใบรับรองที่เข้ารหัสจากการ์ด SD

ตั้งค่า

ตั้งค่ารหัสผ่าน – ตั้งค่าหรือเปลี่ยนรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะ

ลบพื้นที่จัดเก็บ –

ลบรหัสเฉพาะของเนื้อหาทั้งหมด
และรีเซ็ตรหัสผ่าน

แอปพลิเคชัน

คุณสามารถดูและจัดการแอปพลิเคชันได้
แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจากตลาด

คำเตือน

โทรศัพท์มือถืออาจทำงานผิดปกติ และอาจถูกนำไปใช้อย่างผิดกฎหมายในการกำหนดตำแหน่งของคุณ และเข้าถึงข้อมูลส่วนตัวผ่านอินเทอร์เน็ต ทั้งนี้ขึ้นอยู่กับแอปพลิเคชันที่คุณติดตั้ง เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น

จัดการแอปพลิเคชัน – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว

บริการที่กำลังรัน – ตรวจสอบบริการที่กำลังรันอยู่ในปัจจุบัน

การใช้ที่เก็บข้อมูล – ดูที่เก็บข้อมูลที่แอปพลิเคชันใช้

อัตราการใช้แบตเตอรี่ – ดูการใช้แบตเตอรี่

การพัฒนา – ตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน

แอดเดทและการซิงค์

<ตั้งค่าการซิงค์ทั่วไป >

ข้อมูลแบ็คกราวด์ – อนุญาตให้แอปพลิเคชันซิงค์โครโนลชีข้อมูลในแบ็คกราวด์ ไม่ว่าจะกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้อาจประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

ซิงค์อัตโนมัติ –

อนุญาตให้แอปพลิเคชันซิงค์โครโนลชีและส่งและรับข้อมูลตามกำหนดเวลาของตนเองได้

ตั้งค่า

< จัดการแอคเคาท์ >

แสดงแอคเคาท์ Google
ทั้งหมดและแอคเคาท์อื่นๆ
ที่คุณเพิ่มในโทรศัพท์
หากคุณแตะที่แอคเคาท์ในหน้าจอ
หน้าจอแอคเคาท์จะเปิด

ความเป็นส่วนตัว

รีเซ็ตข้อมูลจากโรงงาน – หากคุณ
เลือก รีเซ็ตข้อมูลจากโรงงาน
จะเป็นการลบข้อมูลส่วนตัวทั้งหมด
ออกจากพื้นที่การจัดเก็บภายในโทรศัพท์

รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google,
แอคเคาท์อื่นๆ, ข้อมูลและการตั้งค่าระบบ/
แอปพลิเคชัน, แอปพลิเคชันที่ดาวน์โหลด
และใบอนุญาต DRM

การรีเซ็ตโทรศัพท์จะไม่ลบการอัปเดต
ซอฟต์แวร์ระบบที่คุณดาวน์โหลดหรือไฟล์
ในการ์ด microSD เช่น เพลง หรือรูปภาพ
หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะ
ต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น
Android ครั้งแรก

ที่เก็บข้อมูล

< โหมดการเชื่อมต่อ USB >

ที่เก็บข้อมูลเท่านั้น – โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการ์ดหน่วยความจำติดตั้งไว้ คุณสามารถตั้ง ที่เก็บข้อมูลเท่านั้น เป็นการตั้งค่าเริ่มต้นของโหมดการเชื่อมต่อ USB ได้

< การ์ด SD >

ตรวจสอบพื้นที่การ์ด SD รวมที่สามารถใช้ได้ และยกเลิกการเชื่อมต่อการ์ด SD เพื่อถอดการ์ดออกอย่างปลอดภัย **ลบการ์ด SD** หากคุณต้องการลบข้อมูลทั้งหมดจากการ์ด SD

< ที่เก็บข้อมูลภายใน >

ตรวจสอบ พื้นที่ที่ใช้ได้

ตั้งค่า

ภาษาและคีย์บอร์ด

ใช้การตั้งค่า ภาษาและคีย์บอร์ด เพื่อเลือกภาษาและภูมิภาคสำหรับข้อความในโทรศัพท์ และสำหรับการกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

Voice input & output

< การป้อนด้วยเสียง >

ตั้งค่าจดจำเสียง – ใช้ ตั้งค่าจดจำเสียง เพื่อกำหนดค่าคุณสมบัติการป้อนด้วยเสียง Android

- **ภาษา:** เปิดหน้าจอซึ่งคุณสามารถกำหนดภาษาที่ใช้ในการป้อนข้อความด้วยเสียง
- **ค้นหาปลอดภัย:** เปิดกล่องโต้ตอบซึ่งคุณสามารถกำหนดว่าคุณต้องการให้ฟิลเตอร์ Google SafeSearch บล๊อคผลการค้นหาบางชนิดหรือไม่
- **ปิดกั้นคำไม่สุภาพ:** เมื่อไม่ได้เลือกไว้ ระบบความจำเสียงของ Google จะจดจำและบันทึกคำต่างๆ ที่คนส่วนใหญ่คิดว่าเป็นคำที่ไม่เหมาะสมไว้ เมื่อคุณป้อนข้อความด้วยเสียง

แต่ถ้าเลือกตัวเลือกนี้ไว้
ระบบความจำเสียงของ Google จะแทน
ที่ค่าเหล่านั้นในบันทึกด้วยตัวเว้นว่างที่มี
เครื่องหมายสี่เหลี่ยม (#)

< เอาต์พุตเสียง >

ตั้งค่า Text-to-speech –
ใช้ ตั้งค่า Text-to-speech

เพื่อกำหนดค่าตัวสังเคราะห์ Text-to-
speech ของ Android สำหรับแอปพลี
เคชันที่สามารถใช้งานคุณสมบัตินี้ได้

หมายเหตุ: หากคุณไม่ได้ติดตั้งข้อมูล
ตัวสังเคราะห์เสียงพูด จะมีเฉพาะ
การตั้งค่าติดตั้งข้อมูลเสียง เท่านั้น

- **ฟังตัวอย่าง:** เล่นเสียงตัวอย่างสั้นๆ
ของตัวสังเคราะห์เสียงพูดโดยใช้การตั้ง
ค่าในปัจจุบันของคุณ
- **ใช้การตั้งค่าของฉันเสมอ:** เลือก
ตัวเลือกนี้เพื่อใช้การตั้งค่าบนหน้าจอนี้
แทนการตั้งค่าตัวสังเคราะห์เสียงพูดที่มี
อยู่ในแอปพลิเคชันอื่นๆ

ตั้งค่า

- **เอ็นจินเริ่มต้น:** เปิดกล่องโต้ตอบซึ่งคุณสามารถตั้งค่าแอปพลิเคชัน Text-to-speech ที่ต้องการเลือกใช้ กรณีที่มีแอปพลิเคชันติดตั้งไว้มากกว่าหนึ่งแอปพลิเคชัน
- **ติดตั้งข้อมูลเสียง:** หากโทรศัพท์ของคุณไม่มีข้อมูลตัวสังเคราะห์เสียงพูดติดตั้งอยู่ ตัวเลือกนี้จะทำการเชื่อมต่อกับ Android Market และให้คำแนะนำในขั้นตอนการดาวน์โหลดและติดตั้งข้อมูลดังกล่าวแก่คุณ ตัวเลือกนี้จะไม่ทำงานหากมีข้อมูลติดตั้งไว้อยู่แล้ว
- **อัตราการพูด:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกอัตราความเร็วในการพูดของตัวสังเคราะห์เสียง
- **ภาษา:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกภาษาของข้อความที่คุณต้องการให้ตัวสังเคราะห์เสียงอ่าน ตัวเลือกนี้มีประโยชน์เป็นอย่างยิ่งเมื่อใช้ควบคู่กับ **ใช้การตั้งค่าของฉันเสมอ** ซึ่งจะช่วยให้แน่ใจได้ว่าข้อความในแอปพลิเคชันต่างๆ ได้รับการอ่านอย่างถูกต้อง
- **Pico TTS:** กำหนดค่าการตั้งค่า **Pico TTS**

การช่วยสำหรับการเข้าถึง

ใช้การตั้งค่า การช่วยสำหรับการเข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติม

วันที่และเวลา

ใช้การตั้งค่า วันที่และเวลา เพื่อกำหนดค่าการแสดงผลวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อกำหนดค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ได้

เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

ตั้งค่า

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG

มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้น ตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ

LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์ได้ที่: **ตั้งค่า > เกี่ยวกับโทรศัพท์ > ซอฟต์แวร์อัปเดต > ตรวจสอบอัปเดตในตอนนี**

คุณสามารถเลื่อนการอัปเดตเป็นเวลา 1 ชั่วโมง, 3 ชั่วโมง, 6 ชั่วโมง หรือ 1 วันได้ ในกรณีนี้ แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาการอัปเดตด้วยตัวคุณเองอีกด้วย

ตั้งค่า

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการ
เครือข่าย พื้นที่ และประเทศของคุณ

DivX Mobile **DIVX**

เกี่ยวกับวิดีโอ DIVX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ
DivX® ไม่เกิน 640x480
รวมถึงข้อมูลฟรีเนียม
DivX®, DivX Certified® และโลโก้ที่
เกี่ยวข้องเป็นเครื่องหมายการค้าของ
Rovi Corporation หรือบริษัทในเครือ
และใช้โดยได้รับอนุญาต

หมายเหตุ: ซอฟต์แวร์โอเพ่นซอร์ส
ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม
GPL, LGPL, MPL
และและใบอนุญาตโอเพ่นซอร์สอื่นๆ
โปรดไปที่ <http://opensource.lge.com/>
เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ
และประกาศที่อ้างอิงถึงทั้งหมด สามารถ
ดาวน์โหลดได้พร้อมกับซอร์สโค้ด

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-E730 (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์สำหรับ
ชาร์จแบตเตอรี่



แบตเตอรี่



ชุดหูฟัง
สเตอริโอ



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-E730
ของคุณกับคอมพิวเตอร์



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
LG-E730



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ)
+45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-E730

Trade Name

LG

CE0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1

EN 300 328 v1.7.1

EN 60950-1-2006+A11-2009

EN 50360-2001 / AC:2006 / EN62209-1-2006 / EN62209-2-2010

EN 301 511 v9.0.2

EN 301 208-1 v4.2.1 / EN 301 208-2 v4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Issued Date

Doo Haeng Lee / Director

27, July, 2011

LG Electronics Inc. - EU Representative
Willemsoom 15, 1327 AG Almere, The Netherlands


Signature of representative

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
<p>ไม่มีการเชื่อมต่อกับ เครือข่าย/ เครือข่ายขาดหาย</p>	<p>สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการ ผู้ให้บริการใช้บริการใหม่</p>	<p>ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย ตรวจดูว่าซิมการ์ดใช้งานมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิม ของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ ที่สุด ติดต่อผู้ให้บริการ</p>

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดย ป้อนรหัสใหม่ซ้ำ รหัสที่คุณป้อนทั้งสองครั้ง ไม่ตรงกัน	หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
ตั้งค่าแอปพลิเคชัน ไม่ได้	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดเครื่องแล้ว ปล่อยเร็วเกินไป ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลังชาร์จบนหน้าจอ ทำความสะอาดขั้วแบตเตอรี่

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกหรือเย็นเกินไป	ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หมายเลขโทรศัพท์ ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชัน กำหนดหมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ/ ส่งข้อความตัวอักษร และรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน
การ์ด SD ไม่ทำงาน	สนับสนุนระบบไฟล์ FAT16, FAT32	ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ด หรือฟอร์แมตการ์ด SD โดยใช้โทรศัพท์

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หน้าจอไม่ทำงานเมื่อรับสาย	เซนเซอร์รับสัญญาณมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด
ไม่มีเสียง	โหมดสั่น	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสั่นหรือโหมดปิดเสียง

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
โทรศัพท์ค้างหรือ ไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ถอดแบตเตอรี่ออก ใส่กลับเข้าไปอีกครั้ง และเปิดโทรศัพท์ ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทาง เว็บไซต์

ศูนย์บริการ LG โดย บริษัท แอลจีอิเล็กทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน 72/127 ถ.สมเด็จพระเจ้าตากสิน

แขวงบुकคโโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757



ENGLISH

LG-E730 User Guide

This guide helps you to get started using your phone.

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Contents

Guidelines for safe and efficient use	7	Notification drawer	44
Getting to know your phone	17	Viewing the status bar	44
Device components	29	Onscreen keyboard	48
Installing the SIM card and battery	32	Entering accented letters	49
Charging your phone	34	Google account set up	50
Using the memory card	35	Connecting to Networks and Devices	51
Locking and unlocking the screen	37	Wi-Fi	51
Secure your lock screen	38	Connecting to Wi-Fi networks	51
Your Home screen	40	Bluetooth	52
Touch screen tips	40	Sharing your phone's data connection	54
Home	41	To rename or secure your portable hotspot	56
Customising the Home screen	42	Using the Wi-Fi Cast	58
Returning to recently-used applications	43		

Enabling Wi-Fi Direct to share through SmartShare	58	Adding a new contact.....	68
Using SmartShare	59	Favourite contacts.....	69
Calls.....	64	Moving contacts from your old phone to your new phone	70
Making a call.....	64	Messaging	71
Calling your contacts.....	64	Sending a message	71
Answering and rejecting a call	64	Threaded box	72
Adjusting call volume	65	Using Smilies.....	73
Making a second call	65	Changing your message settings	73
Viewing your call logs.....	66	Email.....	74
Call settings	67	Managing an email account.....	74
Contacts.....	68	Email account screen.....	75
Searching for a contact	68	Working with account folders.....	76

Contents

Composing and sending email	76	Getting to know the viewfinder	86
Social networking.....	78	Shooting a quick video	87
Adding your account to your phone	78	After shooting a video	87
Viewing and updating your status.....	79	Using the advanced settings	88
Removing accounts from your phone	80	Adjusting the volume when viewing a video	89
Facebook and Twitter	80	Multimedia.....	90
Camera	81	Gallery	90
Getting to know the viewfinder	81	Timeline view.....	91
Taking a quick photo	82	Music.....	91
Once you've taken the photo	82	Transferring music files using USB mass storage devices	91
Using the advanced settings.....	83	Playing a song	92
Video camera.....	86	FM Radio.....	94

Searching for stations	94	On-Screen Phone 2.0 icons.....	101
Utilities.....	96	On-Screen Phone 2.0 features	102
Setting your alarm.....	96	Installing On-Screen Phone on your PC ..	103
Using your calculator.....	96	Connecting your phone to your PC	103
Adding an event to your calendar	97	Checking the On-Screen Phone	
Changing your calendar view	98	connection	104
Polaris Office	98	Disconnecting your phone from	
The web.....	99	your PC	105
Browser	99	Settings	106
Using the web toolbar	99	Wireless & networks	106
Using options.....	100	Call settings	108
LG On-Screen Phone 2.0.....	101	Sound	110
		Display.....	112
		Gesture	112

Contents

Location & security	113	Technical data.....	125
Applications.....	114	Troubleshooting	126
Accounts & sync.....	115		
Privacy	116		
Storage	116		
Language & keyboard	117		
Voice input & output.....	117		
Accessibility	120		
Date & time	120		
About phone.....	120		
Phone software update	120		
DivX Mobile DivX	122		
Accessories	124		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-E730 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins

designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

Guidelines for safe and efficient use

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DAS4 for use at the ear is 0.690 W/kg (10g) and when worn on the body is 0.757 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.

Guidelines for safe and efficient use

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation.

Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting

permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

Guidelines for safe and efficient use

- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use your phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.

Guidelines for safe and efficient use

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some

data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 **Applications > Settings > Applications > Manage applications**
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.

Getting to know your phone

2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Google Mail™, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- **Applications > Settings > About phone > Status**

The battery status (charging or not charging) and level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- **Applications > Settings > About phone > Battery use**

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

Getting to know your phone

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Android Market™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

4. Using the hard reset (Factory reset)

If your phone needs to be restored to its original condition, use hard reset to reboot your phone.

1. When the phone is switched off, press and hold the **Volume down key + Power key** with your left hand.
2. When the LED on the bottom of the phone lights up, touch and hold the **Menu key + Back key** with your right hand. You need to do this immediately, before the screen displays the LG logo. Make sure your left

hand is still holding the Volume down and Power keys.

3. When the LG logo is displayed on the screen, continue to hold the keys for around 2 seconds, and then release all them at the same time, before the LG logo disappears.

Leave your phone for at least a minute while the hard reset is carried out. You will then be able to switch your phone back on.

Caution: If you perform a hard reset, all user applications and user data will be deleted.

This cannot be reversed. Remember to back

up any important data before performing a hard reset.

5. Using a microSD card

Pictures, music and video files, can only be saved to external memory.

Before using the built-in camera, you will need to insert a microSD memory card into your phone.

If you don't insert a memory card, you cannot save the pictures or videos you take with the camera.

Getting to know your phone

6. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To stop applications:

- 1 **Applications > Settings > Applications > Manage applications**
- 2 Scroll to the desired application and touch **Stop** to stop it.

TIP! To return to recent apps Press and hold the **Home** key. The screen then displays a list of applications you have recently used.

7. Installing LG PC Suite

LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable. Once connected, you can use the functions of your mobile phone on your PC.

Major functions of LG PC Suite IV

- Easily create, edit and delete phone data
- Synchronise mobile phone data with PC data (contacts, calendar, SMS messages, bookmarks and call log)
- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone

Getting to know your phone

- Transfer SMS messages from your phone to a PC
- Software update without losing your data

LG-E730 does not support the following functions:

- LG Air Sync (Web Sync, R-Click)
- To-do in Calendar
- Memo
- Java application

Installing LG PC Suite from your microSD

- 1** Insert your microSD memory card into your phone. (It may already be inserted)
- 2** Before connecting the USB data cable, make sure that **Mass storage only** mode is enabled on your phone. (In the applications menu, choose **Settings** > **Storage** > **Mass storage only** check box.)
- 3** Use the USB data cable to connect your phone to the PC.

- 4 In the status bar, drag the USB icon. Choose USB connected and Turn on USB storage. Then select "ok" to confirm. You can view the mass storage content on your PC and transfer files.
- 5 Copy the LGPCSuiteIV folder from mass storage to your PC.
- 6 Run the LGInstaller.exe file on your PC and follow the instructions.
- 7 When LG PC Suite IV installation is complete, disable **Mass storage only** mode to run LG PC Suite IV.

Or you can download the program from the LG website (www.lg.com). Go to www.lg.com and select your region, country and language.

NOTE: Do not remove or delete other program files installed on your memory card. This may damage your preinstalled applications.

Getting to know your phone

8. Synchronising your phone to a computer via USB

NOTE: To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC.

Please refer to previous pages to install LG PC Suite.

- 1 Use the USB cable to connect your phone to a USB port on your computer. Once connected, you will receive a notification that a USB connection has been made.

- 2 Open the notification drawer and touch USB connected.
- 3 Touch **Turn on USB storage** and select "Ok" to confirm that you want to transfer files between your phone's microSD card and the computer.

You will receive a notification when the phone connects as USB storage. You can now copy files to and from the microSD card.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer:

Open the notification drawer and touch **Turn Off USB Storage** to disconnect your phone from the computer safely.

9. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-E730 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

Getting to know your phone

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

10. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on.

OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components

Earpiece

Proximity sensor

Camera lens

Home key 

Return to the Home screen from any screen.

Menu key 

- Check what options are available.
- Go to Google Search™ by pressing and holding this key.



Power/Lock key

- Switch your phone on/off by pressing and holding this key.
- Short press to lock/unlock the screen.

Back key 

Return to the previous screen.

Microphone


Getting to know your phone

NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.


WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.



Volume keys

- In the Home screen: Control ringer volume.
- During a call: Control your earpiece volume.
- When playing a track: Control volume continuously.

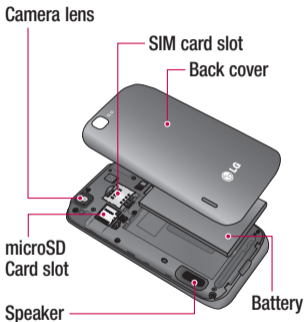


Getting to know your phone


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, firmly press your thumb on the back cover. Use the fingertip cutout to pull off the back cover with your forefinger.

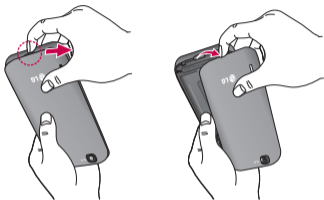

- 2** Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

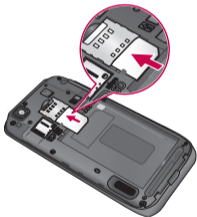

- 3** Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).



Getting to know your phone

- 4 Align the back cover over the battery compartment (1) and press it down until it clicks into place (2).



Charging your phone

Open the cover of the charger connector on the top. Insert the charger and plug it into an electrical outlet.



NOTE: The battery must be fully charged initially to improve battery lifetime.


Using the memory card

To insert a memory card:

Insert the memory card into the slot.
Make sure the gold contact area is facing downwards.

To remove the memory card safely:

Applications > Settings > Storage > Unmount SD card.

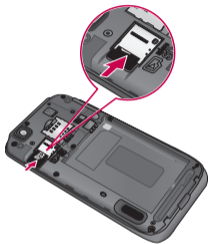

NOTE: The LG-E730 supports memory cards up to 32 GB.

Getting to know your phone


WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on your memory card are deleted when it is formatted.


- 1 On the Home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings > Storage**.
- 3 Touch **Unmount SD card** and touch OK to confirm it.
- 4 Touch **Erase SD card > Erase SD card > Erase everything**, then confirm your choice.

- 5 If you have set a pattern lock, input the pattern lock then select **Erase Everything**.

NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will have been deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-E730, press the Power/Lock key  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the Power/Lock key. The lock screen will appear. Touch and slide the lock screen upwards to unlock your home screen. The last screen you viewed will open.

Getting to know your phone

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- **Applications > Settings > Location & security > Set up screen lock > Pattern, PIN or Password**

Once it is set, you can change it on the **Change screen lock** menu.

NOTE:

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgotten pattern button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Flick – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.

NOTE: Some screen images may be different depending on your phone provider.

On your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch screen dialpad to make a call.




Touch the **Contacts** icon to open your contacts.



Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

Your Home screen

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Customising the Home screen

You can customise your Home screen by adding widgets, shortcuts, folders or wallpapers. For more convenience using your phone, add your favourite widgets to the Home screen.

To add items on your Home screen:

1 Home screen > Menu > Add


OR

Touch and hold the empty part of the Home screen.

2 In the **Add Mode** menu, select items you want to add. You will then see added items on the Home screen.

3 Drag it to the location you want and lift your finger.

To remove an item from the Home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 

TIP! To add an application icon to the Home screen from the Applications menu, touch and hold the application you want to add.


Returning to recently-used applications

- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your current application.

Your Home screen

Notification drawer

The notification drawer runs across the top of your screen.

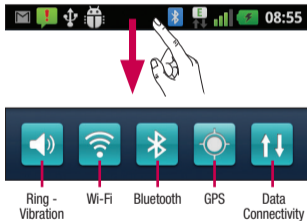

Touch and slide the notification drawer down with your finger.







Or, on the Home screen, press the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth and GPS as well as other notifications.








Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.

















Below is a table explaining the meaning of icons you're likely to see in the status bar.








Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wi-Fi Direct is on
	Wired headset






Icon	Description
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device

Your Home screen

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging

Icon	Description
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected

Icon	Description
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Google Talk message
	New message
	Song is playing

Icon	Description
	Upcoming event
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active


Your Home screen


Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.


Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

 Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to view or press and hold to change the writing language.

 Tap to insert an emoticon when writing a message.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- **Applications** > select a Google application, such as **Gmail** > select **Create** to create a new account.

If you have a Google account, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use highspeed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 **Applications > Settings > Wireless & networks > Wi-Fi settings.**

Connecting to Networks and Devices

- 2 Touch **Wi-Fi** to turn it on and start scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are asked to confirm that you want to connect to that network by touching **Connect**.

- If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 4 The status bar displays icon that indicate Wi-Fi status.

Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

TIP! With LG-E730, you can enjoy Bluetooth high speed.

If the device you want to share files with also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

- 1 Applications > Settings > Wireless & networks > Bluetooth > ON**
- 2 Go to Bluetooth settings > Scan for devices**
- 3 Choose the device you want to pair up with from the list.**

Once the pairing is successful, your device will connect to the device.

Connecting to Networks and Devices

If the device you want to pair up with is not on the list, make sure that target device is set to be **Discoverable**, then scan again.

Sending pictures using Bluetooth

- 1 Select a picture > Menu > Share > Bluetooth**
- 2** Check whether **Bluetooth** is **ON**, then select **Scan for devices**.
- 3** Choose the device you want to send data to from the list.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status

bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To change USB tethering & portable Wi-Fi hotspot settings:

- **Applications > Settings > Wireless & networks > Tethering & portable hotspot** > Choose options that you want to adjust


TIP!

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

Connecting to Networks and Devices

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the Home screen, touch the **Applications** tab  and select **Settings**.
 - 2 Touch **Wireless & networks** and select **Tethering & Portable hotspot**.
 - 3 Ensure **Portable Wi-Fi hotspot** is ticked.
 - 4 Touch **Portable Wi-Fi hotspot** settings.
- 5 Touch **Configure Wi-Fi hotspot**.
 - The **Configure Wi-Fi hotspot** dialog box will open.
 - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).

- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!

If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

- 6** Touch **Save**.

Connecting to Networks and Devices

Using the Wi-Fi Cast

You can share your music, picture and video content between users who use Android Phones connected via the same Wi-Fi & Wi-Fi Directed network.

Check your Wi-Fi & Wi-Fi Directed network in advance and make sure the users are connected to the same network.

- 1 Applications > Settings > Wireless & networks > Wi-Fi Direct Settings > Wi-Fi Direct > ON**

- 2** Select a device to connect from the scanned device list.

- 3** Touch **Connect**.

Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and the searched devices are listed as they are found and you can select a specific device to share multimedia data through Smart Share.

Wi-Fi Direct cannot be enabled while using other Wi-Fi functions.

- 1 **Applications > Settings > Wireless & networks > Wi-Fi Direct Settings**
- 2 Ensure **Wi-Fi Direct** is **ON**.
- 3 Select a device to connect from the scanned device list.

Forced Group owner mode – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in the **Menu > Advanced > Password**.

NOTE: When your phone becomes a group owner, it will consume more battery power than when it is a client. Wi-Fi Direct connection does not provide Internet service. Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Connecting to Networks and Devices

Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Press the **Menu** key and select **Settings**.
- 3 Touch Discoverable checkbox to turn on.
 - Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
 - Touch **Receive files** if you would like to

automatically allow upload files to my phone from other devices.

- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch the top right button to or select the device from renderer lists.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail or press the Menu key and select Play button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE: Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Touch **Share** on the menu and select the **SmartShare**.

Connecting to Networks and Devices

- 3 SmartShare** is automatically launched with the selected files.
- 4** Select the device from renderer lists to play the files.

NOTE: Follow the similar steps to use the Music player, Camera and Video player to share contents.

Notice: Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and

will not appear in the renderer device list. Your device might not be able to play some contents.

To download contents from remote content library

- 1** Touch **Applications** tab  and select **SmartShare**.
- 2** Touch the top left button and select the device of the remote content library.
- 3** You can browse the content library.
- 4** Touch a content thumbnail then touch **Download menu key**.

Notice: A few types of contents are not supported.

To upload contents from my phone to remote content library

NOTE: Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.





- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top left button and select My phone.


- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **Upload menu key**.
- 5 Select a device of remote content library to be uploaded.

Notice: Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.


Calls

Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch the  to make a call.
- 4 To end a call, touch the **End** icon .


TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When you receive a call in Lock state, drag the  to the right to answer incoming call.

Drag the  to the left to reject an incoming call.

Drag the **Excuse messages** bar from the bottom if you want to send one.




TIP! Excuse messages

You can send a message quickly using this function. This is useful if you need to reply the message during a meeting.


Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call


- 1 During your first call, touch **Dialpad**  and dial the number. Also, you can search your contacts by touching **Contacts**  and select the number you want to call.
- 2 Touch the  to make the call.

Calls

- Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- Touch the displayed number to toggle between calls. Or touch  **Merge calls** to make a conference call.
- To end active calls, touch **End** or press Home Key and slide the notification bar down and select **End call**.

NOTE: You are charged for each call you make.

Viewing your call logs

On the Home screen, touch  and choose the **Call log** tab.


View a complete list of all dialled, received and missed voice calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 On the Home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Capture picture** or **Pick from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.


Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns blue.


Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the **Groups** tab, select **Favourites** at the top of the list and choose a contact to view its details.
- 3 Touch the blue star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Contacts

Moving contacts from your old phone to your new phone


Export your contacts as a CSV file from your old phone to your PC using a PC sync program.

- 1 Install PC Suite IV on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 Select the . Go to **File > Import** and select the CSV file saved on your PC.
- 3 If the fields in the imported CSV file are different from those in PC Suite IV, you need to map the fields. After mapping the fields, click OK. The contacts are then added to PC Suite IV.
- 4 If PC Suite IV detects the connection of your LG-E730 phone (using the USB cable), click Sync or Sync contacts to synchronise the contacts saved on your PC with your phone.

Messaging

Your LG-E730 combines SMS and MMS into one intuitive, easy-to-use menu.


Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.
- 3 Touch Enter message field and start to compose your message.
- 4 Press the **Menu** key to open the Options menu. Choose from **Add subject**, **Attach**, **Send** and **More**.
- 5 Touch **Send** to send your message.

NOTE: You will be charged for a text message for every person you send the message to.

Messaging

- 6 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to a SMS message, it is automatically converted into a MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the

Menu key, then choose **Insert smiley**.

Changing your message settings

Your LG-E730 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen and touch the **Menu** key, then tap **Settings**.

Email

You can use the Email application to read emails from services other than Google Mail. The Email application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **Email** application, a setup wizard opens to help you to set up an email account.

To add another email account:

- **Applications > Email >** in the account screen, touch **Menu > Add account**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's setting:

- **Applications > Email >** in the account screen, touch **Menu > Settings**

To delete an email account:

- **Applications** > **Email** > in the account screen, touch **Menu** > **Settings** > touch an account you want to delete > **Remove account**

Email account screen

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.



– Touch to open your Combined Inbox, with messages sent to all of your accounts. Messages in the Combined Inbox are colour

coded on the left, by account, using the same colours used for your accounts in the Accounts screen.



– Touch the folder icon to open the account folders.

Only the most recent emails in your account are downloaded to your phone. To download more (earlier) email messages, touch **Load more emails** at the bottom of the emails list.

Email

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **Email** application, touch the **Menu** key, then touch **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Add Cc/Bcc and add attachment files if required.
- 4 Enter the text of the message.

- 5 Touch the **Send** button.
If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

Social networking

You can use your phone for social networking and to manage your micro-blog in on-line communities. You can update your current status, upload photos and view your friend's status updates.

If you don't have an account, you can visit the website to set one up.


NOTE: Additional costs may be incurred when connecting to and using online services. Check data charges with your network provider.


Adding your account to your phone

- 1 Touch and hold the home screen. When various Widgets appear, choose **Social+**  and tap the  **Setting button**. You can also access in a different way. On the home screen, choose **Applications > Settings > Accounts & sync > Social+ settings**.
- 2 Choose the social networking client application you want to use from Facebook for LG, Twitter for LG and MySpace for LG.

- 3 Enter your community email address and password, then tap **Log in**.
- 4 Wait while your details are confirmed with your community.
- 5 If you tap your community, you can see the its current status.

Viewing and updating your status

- 1 You can view and update social community content using the **Social+**  widget at any time.

- 2 On the **Social+**  widget, choose the Social Networking service which you want to log in. You will then see your status and contents.
- 3 When you touch the input box, the screen will switch to update your current status with comments or upload photos.

TIP! You can update your status and upload photos simultaneously to Facebook for LG, Twitter for LG and MySpace for LG by selecting the checkbox.

Social networking


NOTE: This depends on network services.

TIP! You can synchronise your friend contact to your contact list.

Removing accounts from your phone

- 1 Choose **Applications > Settings > Accounts & sync**.
- 2 Choose the account you want to delete, then touch **Remove account**.

Facebook and Twitter

- 1 On the home screen, touch the Applications tab  to open the applications menu.
- 2 Choose any social networking client application you want to use among Facebook and Twitter
- 3 Enter your email address and the password that you set up on your community, then tap Log in.
- 4 Wait while your details are checked with your community.
- 5 If you tap your community, you can see the current status of your social community.

Camera



Getting to know the viewfinder



- 1 Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 Brightness** – This defines and controls the amount of sunlight entering the image.
- 4 Scene mode** – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night** and **Sunset**.
- 5 Settings** – Touch this icon to open the Settings menu.
- 6 Video mode** – Slide this icon down to switch to video mode.
- 7 Taking a photo**
- 8 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.

Camera

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone, point the lens towards the subject you want to photograph.
- 3 Touch and hold the  lightly and a focus box will appear in the centre of the viewfinder screen.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Take your finger off the .

Once you've taken the photo

Your captured photo appears on the screen.

Share


Touch to share your photo using **SmartShare, Bluetooth, E-mail, Facebook, Gmail, Messaging, Picasa, Social+, Twitter or Wi-Fi Cast.**

TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

Set as Touch to use the image as a **Contact icon** or **wallpaper**.

Rename Touch to edit the name of the selected picture.


 Touch to delete the image.

 Touch to take another photo immediately. Your current photo is saved.


Using the advanced settings

In the viewfinder, touch  to open all advanced options.









 – Restore all camera default settings.

 – Touch whenever you want to know how this function operates. This provides you with a quick guide.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

 – Focuses on the specific spot.

Camera

-  – Select the image resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.
-  – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions when you cannot use the flash.
-  – Improves colour qualities in different lighting conditions.
-  – Applies artistic effects to the pictures.
-  – Set a delay after the capture button is pressed. This is ideal if you want to be in the photo.
-  – Select various shot modes.
-  – It automatically shows you the picture you just took.
-  – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.


NOTE: This function is only available when GPS is active.

TIP! When you exit the camera, some settings return to their defaults, such as white balance, colour tone, timer and scene mode. Check these before you take your next photo.

TIP! The Settings menu is superimposed over the viewfinder so, when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.



Video camera

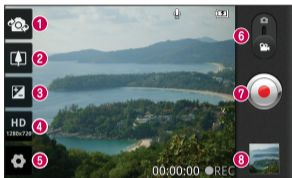Getting to know the viewfinder



- 1 Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 Brightness** – This defines and controls the amount of sunlight entering the video.
- 4 Video size** – Touch to set the size (in pixels) of the video you record.
- 5 Settings** – Touch this icon to open the settings menu.
- 6 Camera mode** – Slide this icon up to switch to camera mode.
- 7 Start recording**
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Shooting a quick video

- 1 Slide the **Camera** mode button down and the icon changes to .
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 REC appears at the bottom of the viewfinder with a timer showing the length of the video.

- 6 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play

Touch to play the video.



Share

Touch to share your video using **SmartShare, Bluetooth, E-mail, Facebook, Gmail, Messaging, Wi-Fi Cast** or **Youtube**.

Rename

Touch to edit the name of the selected video.


Video camera

-  Touch to shoot another video straight away. Your current video is saved.
-  Touch to delete the video you just made. Confirm by touching **OK**. The viewfinder reappears.


Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.




-  – Restore all video camera default settings.

-  – Touch if you want to know how this function operates. This provides you with a quick guide.

Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.

-  – Improves colour qualities in different lighting conditions.

-  – Choose a colour tone to use for your new view.

-  – Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.
-  – Choose **Mute** to record a video without sound.
-  – Auto review automatically shows you the video you just recorded.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

Multimedia


You can store multimedia files on a memory card for easy access to all your image and video files.

Gallery

Touch the **Applications** tab , then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.

NOTE: Make sure you install a memory card in the phone to save photos and access all your pictures. Without a memory card, the phone does not display photos or videos without Picasa images, which are in your Picasa album.

Timeline view

LG-E730 **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

Music

Your LG-E730 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.

Transferring music files using USB mass storage devices

- 1 Connect the LG-E730 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings > Storage**, then select **Mass storage only**.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage content on your PC and transfer the files.

Multimedia

NOTE: You need to install an SD card first. Without an SD card, you cannot use USB mass storage.

NOTE: If you installed LG Android Platform Driver, you will immediately see a pop-up saying Turn on USB storage.

Playing a song

- 1 In the Home screen, touch the **Applications** tab  and select **Music**.
- 2 Touch **Songs**.

- 3 Select the song you want to play.

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist or shuffle.
	Touch to skip to the previous track in the album, playlist or shuffle.
	Touch to see music library screen.
	Touch to set repeat mode.
	Touch to play the current playlist in shuffle mode.
	Touch to see the current playlist.



Touch to see lyrics. This option is on only if the song includes the lyrics.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. It displays **Play**, **Add to playlist**, **Use as ringtone**, **Delete**, **Share**, **Search** and **Details** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Multimedia

FM Radio

Your LG-E730 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

NOTE: You need to use your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again.

You can store up to 48 channels on your phone.

Tuning in automatically

- 1 In the Home screen, touch the **Applications** tab  and select **FM Radio**.

- 2 Press the **Menu** key, then touch **Auto scan**.
- 3 If there are preset channels, you will see a pop-up asking "Reset all channels and start auto scan?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
- 4 During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.


NOTE: You can also manually tune in to a station using the on-screen wheel.

TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna.

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Utilities

Setting your alarm

- 1 **Applications** > **Alarm/Clock** >  > **New alarm**
- 2 After you set the time, the LG-E730 lets you know how much time is left before the alarm will sound.
- 3 Set **Snooze duration**, **Vibration**, **Alarm tone** and **Puzzle lock** then add a label to name the alarm. Touch **Save**.

Using your calculator

- 1 **Applications** > **Calculator**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

1 Applications > Calendar

2 To check the event, touch the date. Touch the **Menu** key if you want to add a new event. Touch **New event**.

3 Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.

4 Also touch **Where** then enter the location.

5 If you want to add a note to your event, touch **Description** and enter the details.

6 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.

7 Touch **Save** to save the event in the calendar.

Utilities

Changing your calendar view

- 1 **Applications > Calendar**
- 2 On the top of the screen, you can find the different view types of the Calendar (Day, Week, Month, Agenda).

Polaris Office

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Managing files

Polaris Office provides mobile users with convenient file management features, including copying, cutting and pasting, and deleting files and folders right on the device.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

The web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the web toolbar



Touch to go back a page.



Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.



Touch to show all your open windows.



Touch to add a new window.




Touch to change web browser settings.

The web

Using options

Press the **Menu** key to view options.

 **Bookmarks** – View your current bookmarks and add a new bookmark. You can also view your browser history.

 **Add bookmark** – Add the current web page as a bookmark.

 **Read it later** – Added in **Read it later**.

 **Add RSS Feed** – Add the current web page to the RSS feed.

 **Share page** – Allows you to share the web page with others.

More



- **Find on page:** Allows you to find letters or words on the current web page.
- **Select text:** Allows you to copy any text from the web page.
- **Add shortcut to Home:** Add the shortcut for the current web page to the Home screen.
- **Page info:** Displays the web page information.
- **Downloads:** Displays your download history.





LG On-Screen Phone 2.0

LG On-Screen Phone 2.0 allows you to view your mobile phone screen from a PC via a USB, Bluetooth, or Wi-Fi connection.

You can also control your mobile phone from your PC using the mouse or keyboard.

On-Screen Phone 2.0 icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available at applications that support rotation).

-  Launches LG Home Panorama or changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone program.
-  Maximises the On-Screen Phone window.
-  Minimises the On-Screen Phone window.

LG On-Screen Phone 2.0

On-Screen Phone 2.0 features

- **Real-time transfer and control:** Displays and controls your mobile phone screen when connected to your PC.
- **Mouse control:** Allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- **Text input with keyboard:** Allows you to compose a text message or note using your computer keyboard..
- **File transfer (mobile phone to PC):** Sends a file from your mobile phone (e.g. Gallery, Video Player, Music and Polaris Office) to your PC. Simply right-click and drag to send a file to your PC.
- **File transfer (PC to mobile phone):** Sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the On-Screen Phone window. The files you send are stored on OSP folder.

- **Real-time event notifications:** Prompts a pop-up to inform you of any incoming calls or text, as well as alarm and event notifications.
- **LG Home Panorama:** Shows the whole workspaces of LG Home. You can easily organise icons or widgets and run an application by double-clicking the shortcut.

NOTE: Please make sure LG Home is a default launcher.

Installing On-Screen Phone on your PC

If you install LG PC Suite IV, the On-Screen Phone program will also be downloaded on your PC. Then you can install the On-Screen Phone on your PC.

Connecting your phone to your PC

On-Screen Phone 2.0 provides USB, Bluetooth and Wi-Fi connection.

Please follow the instruction on Connection Wizard of OSP program.

LG On-Screen Phone 2.0


NOTE: Please make sure that On-Screen Phone check box in **Settings > Wireless & network > On-Screen Phone settings** is selected.

Please make sure that the battery may run out more quickly due to the current consumption if On-Screen Phone is connected via Wi-Fi.


Checking the On-Screen Phone connection

Once the devices have been connected, drag down the status bar at the top of the home screen to check the On-Screen Phone connection status.

Disconnecting your phone from your PC

Click  in the top left of the On-Screen Phone window. Or drag down the notification bar at the top of the home screen and select "On-Screen Phone connected". Touch "Ok" in the disconnect dialog.

Settings

In the Home screen, touch the **Applications** tab  then scroll to and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

Airplane mode – After switching to airplane mode, all wireless connections are disabled.

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

Wi-Fi Direct Settings – Set Wi-Fi Direct device name and scan for other devices.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-E730 into the router.

You can find the MAC address in the following user interface: Touch **Application > Settings > Wireless & networks > Wi-Fi settings** and press the **Menu** key. Then select **Advanced > MAC Address**.

Bluetooth – Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable mode, scan for other devices. Alternatively, check a list of Bluetooth devices that you've previously configured as well as those detected when the phone last scanned for Bluetooth devices.

Tethering & portable hotspot – You can configure the USB tethering and portable Wi-Fi hotspot settings.

Settings

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

On-Screen Phone settings – Allows you to turn on On-Screen Phone and to change the On-Screen Phone password (the default password is "0000").

Call settings

< Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – Allows you to select your carrier's voicemail service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call reject – Allows you to set the call reject function. Choose from **Off**, **Reject on list** or **Reject all calls**.

Excuse messages – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Video call settings – Change your video call settings.

Call forwarding – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Settings

Call duration – View the duration of calls including all calls, dialled calls, received calls and last call.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function)

Additional settings – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.

- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

Sound

< **General** >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos and any alarms you have set. Media and alarms must be silenced in their own applications.

Vibrate – Allows you to set your phone to vibrate when you receive an incoming call.

Volume – allows you to set the volume for ringtones, media and alarms. If you uncheck the option "use incoming call volume for notifications" you can set the volume for incoming calls and notifications separately.

< Incoming calls >

Phone ringtone – Allows you to set your default incoming call ringtone.

< Notifications >

Notification ringtone – Allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Settings

Screen lock sounds – Allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the soft keys and carry out other actions.

Display

Brightness – Adjust the screen brightness.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Animation – Set to display an animation.

Screen timeout – Set the time for screen timeout.

Display font – Change the display font.

Gesture

Use motion gestures – Adjust the gesture settings for the text input field, incoming call, alarm, gallery and video player.

Reset gesture sensor – Calibrate the motion sensor with the phone placed on a flat surface.

Location & security

Use wireless networks – If you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – If you select **Use GPS satellites**, your phone determines your location to street level accuracy.

Set up screen lock – Set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing

a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Set up SIM/RUIM card lock – Set up SIM/RUIM card lock or change the SIM/RUIM PIN.

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – Add one or more administrators.

Settings

Use secure credentials – Allows you to access secure certificates.

Install from SD card – Choose to install encrypted certificates from your SD card.

Set password – Set or change the credential storage password.

Clear storage – Clear credentials for all content and reset password.

Applications

You can view and manage the applications.

Unknown sources – Default setting to install non-Market applications.

WARNING

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Check services that are currently running.

Storage use – View storage used by applications.

Battery usage – See what has been using the battery.

Development – Set options for application development.

Accounts & sync

< General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

Auto-sync – Permits applications to synchronise, send and receive data to their own schedule.

Settings

< **Manage accounts** >

List of all Google accounts and other accounts you have added to your phone. If you touch an account in this screen, its account screen opens.

Privacy

Factory data reset – If you select Factory data reset, it will erase all of your personal data from the internal phone storage, including information about your Google account, any other accounts, your system/application data and settings, any downloaded applications and your DRM licence.

Resetting the phone will not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information that you entered when you first started Android.

Storage

< **USB connection mode** >

Mass storage only – Your phone can be used as a mass storage device if you have a memory card inserted. You can set **Mass**

storage only as a default setting for USB connection mode.

< **SD card** >

Check total available SD card space. Touch **Unmount SD card** for safe removal. **Erase SD card** if you want to delete all data from the SD card.

< **Internal storage** >

Checks the available space.

Language & keyboard

Use the Language & keyboard settings to select the language and region for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

Voice input & output

< **Voice input** >

Voice recognition settings – Use the **Voice recognition settings** to configure the Android voice input feature.

Settings

- **Language:** Opens a screen where you can set the language you use speech to enter text.
- **SafeSearch:** Opens a dialog box where you can set whether you want the Google SafeSearch filter to block certain results.
- **Block offensive words:** When deselected, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When selected, Google voice recognition replaces those words in transcriptions with a placeholder comprised of hash symbols (#).

< Voice output >

Text-to-speech settings – Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** Plays a brief sample of the speech synthesiser, using your current settings.

- **Always use my settings:** Check to use the settings on this screen rather than the speech synthesiser settings available in other applications.
- **Default Engine:** Opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data.

This setting is not available if the data is already installed.

- **Speech rate:** Opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful when combined with **Always use my settings** to ensure text is spoken correctly across a variety of applications.
- **Pico TTS:** Configure the **Pico TTS settings**.

Settings

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins.

Date & time

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone

View legal information and check phone status and software version.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp>
→ select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer

Settings

firmware version available for your device. First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 3 hours, 6 hours or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: This feature is dependent on your network service provider, region and country.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 640x480, including premium content DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the LG-E730. **(Items described below may be optional.)**

Travel adaptor



Battery



Stereo headset



Data cable

Connect your LG-E730 and PC.



User Guide

Learn more about your LG-E730.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-E730

Trade Name

LG



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1

EN 300 328 v1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010

EN 301 511 v9.0.2

EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BADT)

BADT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. - EU Representative
Wolkensloot 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee / Director

Issued Date

27, July, 2011

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.

Message	Possible causes	Possible corrective measures
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error New SIM card inserted. Pre-paid charge limit reached.	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2.

Troubleshooting

Message	Possible causes	Possible corrective measures
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug the charger into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.

Troubleshooting

Message	Possible causes	Possible corrective measures
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.

Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.

LG Service Center by LG Electronics (Thailand) Co. Ltd.

72/127 Somdetprachaw Taksin Rd.,
Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sun

07:00 - 19:00

Call center : 0-2878-5757