


# PRADA

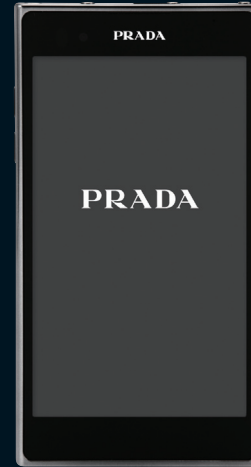

**PRADA** phone by **LG 3.0**



**CE 0168**

P/N : MFL67471502 (1.0)

ไทย | ENGLISH

ในการดาวน์โหลดคู่มือผู้ใช้ฉบับเต็มล่าสุด ให้ไปที่ [www.lg.com](http://www.lg.com)

ในคอมพิวเตอร์หรือแล็ปท็อป

## โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็น ผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้ รัับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณ ได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง “โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG” โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการ รับประกันสินค้า อันเนื่อง จากข้อบกพร่องจากมาตรฐานในขั้นตอน การผลิต โดยไม่จำเป็นต้องแสดงหลักฐาน ในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

### Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.


Once your phone is authenticated, you will receive the message ‘Your handset is a genuine LG product.’

The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

# | LG-P940 | คู่มือการใช้

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับโทรศัพท์ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับเหตุการณ์ทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2012 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Android Market™ เป็นเครื่องหมายการค้าของ Google, Inc.

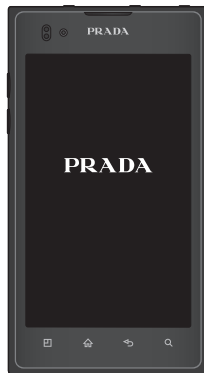

# สารบัญ

## 5 คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

---

## 11 เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

---

### 11 ก่อนเริ่มใช้โทรศัพท์โปรดอ่านขอมูลนี้!

- 17 ส่วนประกอบอุปกรณ์
- 19 การใส่ซิมการ์ดและแบตเตอรี่

### 20 การชาร์จโทรศัพท์

- 20 การใช้การ์ดหน่วยความจำ
- 22 การล็อคและปลดล็อคหน้าจอ
- 22 การรักษาความปลอดภัยการล็อคหน้าจอ

## 24 หน้าจอหลักของคุณ

---

- 24 เคล็ดลับสำหรับหน้าจอสัมผัส
- 24 หน้าจอหลัก
- 25 การปรับแต่งหน้าจอหลัก
- 25 การปรับแต่งการออกแบบแอปพลิเคชันจากหน้าจอหลัก

- 26 การปรับแต่งการออกแบบหน้าจอหลัก

- 26 การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

- 26 แถบการแจ้งเตือน

- 27 การดูแถบสถานะ

- 28 แป้นพิมพ์บนหน้าจอ

- 29 การป้อนตัวอักษรที่ใช้สำหรับเล่นเกม

## 30 การตั้งค่าแอคเคาท์ GOOGLE

---

## 31 เครื่องขายสังคัม

---

- 31 การดูและอัปเดตสถานะของคุณ
- 31 การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ

## 32 อีเมล

---

- 32 การจัดการแอคเคาท์อีเมล
- 32 หน้าจอแอคเคาท์อีเมล

- 33 การทำงานกับโฟลเดอร์แอคเคาท์

- 33 การเขียนและส่งอีเมล

## 34 เว็บไซต์เบราว์เซอร์

---

- 34 การใช้แถบเครื่องมือเว็บ
- 34 การใช้ตัวเลือก

## 35 มัลติมีเดีย

---

- 35 คลังภาพ
- 35 แก์โฆษณา
- 36 เพลง
- 36 วิทยุ FM
- 37 NFC
- 38 HDMI

## 40 เชื่อมต่อ

---

- 40 บลูทูธ
- 41 Wi-Fi
- 42 Wi-Fi Direct
- 43 การใช้ SmartShare

- 45 การแบ่งบันเครือข่ายโทรศัพท์เคลื่อนที่
- 46 GPS
- 46 การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลคอมพิวเตอร์
- 48 การเชื่อมต่อ VPN

## **50 การโทร**

---

- 50 การโทรออก
- 50 การโทรออกโดยใช้รายชื่อ
- 50 การรับสายและการปฏิเสธสายเรียกเข้า
- 50 การปรับระดับเสียงสายสนทนา
- 50 การใช้สายที่สอง
- 51 การดูบันทึกการโทร
- 51 ตั้งค่าการโทร

## **52 รายชื่อ**

---

- 52 การค้นหารายชื่อ
- 52 การเพิ่มรายชื่อใหม่

- 52 เพื่อนสนิท
- 52 อิมพอร์ตหรือเอ็กซ์พอร์ตรายชื่อ
- 53 การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

## **54 ข้อความ**

---

- 54 การส่งข้อความ
- 54 กล่องเซรต
- 54 การใช้ SMS ในลิ้น
- 55 การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

## **56 กล้องถ่ายรูป**

---

- 56 ทำความรู้จักกับช่องมองภาพ
- 57 การถ่ายภาพด่วน
- 57 เมื่อคุณถ่ายภาพแล้ว
- 57 การใช้การตั้งค่าขั้นสูง

## **59 กล้องวิดีโอ**

---

- 59 ทำความรู้จักกับช่องมองภาพ

- 60 การถ่ายวิดีโอด่วน
- 60 หลังการถ่ายวิดีโอ
- 60 การใช้การตั้งค่าขั้นสูง
- 60 การปรับระดับเสียงขณะดูวิดีโอ

## **61 ยทิลิตี้**

---

- 61 การตั้งเวลาการปลุก
- 61 การใช้เครื่องคิดเลข
- 61 การเพิ่มเหตุการณ์ลงในปฏิทิน
- 61 การเปลี่ยนมุมมองปฏิทิน
- 62 Polaris Office

## **63 LG ON-SCREEN PHONE 2.0**

---

- 63 ไอคอน On-Screen Phone 2.0
- 63 คุณสมบัติ On-Screen Phone 2.0
- 64 การติดตั้ง On-Screen Phone ในคอมพิวเตอร์

64 การเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์

65 การตรวจสอบการเชื่อมต่อ On-Screen Phone

66 การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

## **67 ดั้งคำ**

---

67 ดั้งคำการเชื่อมต่อ

68 ดั้งคำการโทร

69 เสียง

70 หน้าจอ

70 ทำทางการเคลื่อนไหว

70 พิกัดและการป้องกัน

71 แอปพลิเคชัน

71 แอคเคาท์และการซิงค์

72 ความเป็นส่วนตัว

73 ที่เก็บ

73 ภาษาและคีย์บอร์ด

73 อินพุตและเอาต์พุตเสียง

74 การช่วยสำหรับการเข้าถึง

74 เชื่อมต่อ

75 วันที่และเวลา

75 เกี่ยวกับโทรศัพท์

## **76 ซอฟต์แวร์คอมพิวเตอร์ (LG PC SUITE)**

---

77 การเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์

79 การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์

79 การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

80 การส่งเนื้อหาที่มีลิขสิทธิ์จากอุปกรณ์ไปยังคอมพิวเตอร์

## **81 สำรองและเรียกคืน**

---

### **84 อัปเดตซอฟต์แวร์โทรศัพท์**

---

84 เครื่องหมายการค้า

### **86 อุปกรณ์เสริม**

---

### **87 ข้อมูลทางเทคนิค**

---

### **88 การแก้ปัญหา**

---

### **91 คำถามที่พบบ่อย**

---

## คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

### การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-P940 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.564 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.762 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขนาบห่างจากร่างกาย อย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับการพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้ากว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะทางดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

## การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

### คำเตือน:

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่น ๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์มือถือ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่ง
- ความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรมำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่หรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำให้ความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำให้ความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากช่องเหลวหรือความชื้น

- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้อง เสวอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือ ซ่อมแซมแกวที่แตก มีรอยแตก หรือราว ความเสียหายของหนวดจอ แกวเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลาโดยไม่มีกระบวนการระบายอากาศหรือไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อย ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือ โทรศัพท์ในระหว่างหรือทันทีหลังจาก การใช้งาน

## การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

- โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่ง คลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ
- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือ เครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น

- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับ ควบคุมเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเขาขางทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรง เนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลง และระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

**หมายเหตุ:** แรงดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

## ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัสหรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารขอรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียว ในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง

- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก้อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้ง จนกว่าจะจำเป็นต้องเปลี่ยนก้อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจลดลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่างถึงเป็นขยะในครัวเรือน

- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดควาเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

## เริ่มทำความรู้จักกับ โทรศัพท์ของคุณ

### ก่อนเริ่มใช้โทรศัพท์ โปรดอ่านข้อมูลนี้!

โปรดตรวจสอบเพื่อหาว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับบริการหรือติดต่อตัวแทนฝ่ายบริการ

### 1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 1MB โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

**การถอนการติดตั้งแอปพลิเคชัน:**

1. แอปพลิเคชัน > **ตั้งค่า** > **แอปพลิเคชัน** > **จัดการแอปพลิเคชัน**
2. เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
3. แตะ **ถอนการติดตั้ง**

### 2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

**การยืดอายุแบตเตอรี่ของโทรศัพท์:**

ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช่ ปิด Wi-Fi, บลูทูธ หรือ NFC หากคุณไม่ได้ใช้งาน

- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Google Mail™, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดมาบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่

**การตรวจสอบระดับกำลังไฟแบตเตอรี่:**

- **แอปพลิเคชัน** > **ตั้งค่า** > **เกี่ยวกับโทรศัพท์** > **สถานะสถานะแบตเตอรี่** (กำลังชาร์จหรือไม่ชาร์จ) และระดับ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

**การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:**

- **แอปพลิเคชัน** > **ตั้งค่า** > **เกี่ยวกับโทรศัพท์** >

### การใช้แบตเตอรี่

เวลาใช้งานของแบตเตอรี่จะแสดงอยู่ที่ด้านบนของหน้าจอ โดยแสดงระยะเวลา นับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้าย หรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดงระยะเวลานับจากที่โทรศัพท์ใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับตามปริมาณที่ใช้จากมากไปน้อย

## 3. ก่อนการติดตั้งแอปพลิเคชันและ OS ไอโฟนเซอร์ส

### คำเตือน:

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์ของคุณจะไม่ได้รับความคุ้มครองตามการรับประกัน

### คำเตือน:

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้อ่านข้อตกลงแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market™ เท่านั้นหากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องของทั้งหมดออกจากโทรศัพท์

## 4. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

1. ปิดเครื่อง
2. กดปุ่มต่อไปนี้ค้างไว้พร้อมกัน (เป็นเวลานานกว่า 10 วินาที):  
ปุ่มเปิด/ปิดเครื่อง/ล๊อค + ปุ่มกลองกายรูป + ลดระดับเสียง
3. โทรศัพท์จะเปิดขึ้นและรีเซ็ตค่าจากโรงงานทันที

**คำเตือน:**

หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

## 5. การเปิดและการสลับแอปพลิเคชัน

มีลิตาสกึ่งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกันโดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

### การหยุดแอปพลิเคชัน:

1. แอปพลิเคชัน > **ตั้งค่า** > **แอปพลิเคชัน** > **บริการที่กำลังรัน**
2. เลื่อนไปยังแอปพลิเคชันที่ต้องการและแตะ **หยุด** เพื่อหยุด

**เคล็ดลับ!** ในการกลับไปยังแอปพลิเคชันก่อนหน้านี้ หากคอมพิวเตอร์หลัก ค้างไว้ หน้าที่จะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

## 6. ติดตั้งซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

### ด้วยแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคลากร) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ

- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาสมัครสมาชิกในคอมพิวเตอร์ของคุณจากอุปกรณ์อื่น

**คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาวิธีการใช้งานแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" ของคุณได้**

## การติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite"

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บไซต์ของ LG

1. ไปที่ [www.lg.com](http://www.lg.com) และเลือกประเทศที่คุณต้องการ
1. ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P940)
2. คลิก **PC Sync** จาก **ดาวน์โหลด** และคลิก **ดาวน์โหลด WINDOW PC Sync Download** เพื่อดาวน์โหลดแอปพลิเคชันคอมพิวเตอร์ **LG PC Suite**

## ข้อกำหนดของระบบสำหรับแอปพลิเคชันคอมพิวเตอร์ LG PC Suite

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต, Windows 7 32 บิต/64 บิต
- CPU: โพรเซสเซอร์ 1GHz หรือสูงกว่า
- หน่วยความจำ: 512MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG

## หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

- **ไดรเวอร์ USB ในตัวของ LG** จำเป็นสำหรับอุปกรณ์ **LG** และคอมพิวเตอร์ ซึ่งจะติดตั้งโดยอัตโนมัติเมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ **"LG PC Suite"**

## 7. การซิงโครไนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์

ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ต่างๆ ด้วยซอฟต์แวร์ "LG PC Suite" เพื่อความสะดวกของคุณ ความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ และบุคมาร์คได้ด้วย

ขั้นตอนจะมีดังต่อไปนี้:

1. เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
2. หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
3. คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
4. ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

## 8. ทำการถ่ายโอนเพลง ภายถ่ายและใช้อุปกรณ์จัดเก็บข้อมูล USB

**หมายเหตุ: โดรวอร์ USB ในตัวของ LG**  
**• โดรวอร์ USB ในตัวของ LG จำเป็นสำหรับอุปกรณ์ LG และคอมพิวเตอร์ ซึ่งจะติดตั้งโดยอัตโนมัติเมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"**

1. แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล เพื่อตรวจสอบสี่เหลี่ยมมุมฉาก (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการ์ดหน่วยความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)
2. เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
3. รายการโหมดการเชื่อมต่อ USB จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล
4. เปิดโพลเดอร์หน่วยความจำที่ถอดไดบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณ และโอนไฟล์
5. คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโพลเดอร์โดรว์

6. เลือกตัวเลือก **ซาร์จเท่านั้น**  
เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

## 9. ถูโทรศัพท์ตั้งขึ้น

ถือโทรศัพท์มือถือถนัดแนวดิ่งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P940 มีเสาอากาศภายใน รวมถึงการระมัดระวังอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่ด้านในฝาด้านหลัง เนื่องจากเป็นเสาอากาศ NFC ในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

## 10. เมื่อนำจอค้าง

หากหน้าจอค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน:

ถอดแบตเตอรี่ ใส่กลับเข้าไป แล้วเปิดโทรศัพท์

หรือ

กดปุ่ม **เปิด/ปิดเครื่อง/ล็อค**

ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิด หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

## ส่วนประกอบอุปกรณ์

ปุ่มกล้องถ่ายรูป

หูฟัง

เซนเซอร์รับสัญญาณ

เลนส์กล้องถ่ายรูปตัวใน

ปุ่มหน้าหลัก

กลับไปยังหน้าจอหลักจาก  
หน้าจอใดๆ

ปุ่มเมนู

- ตรวจสอบว่ามีตัวเลือก  
อะไรบ้าง



ปุ่มเปิด/ปิดเครื่อง/ปุ่มล็อค

- เปิดหรือปิดเครื่องโดยกดปุ่ม  
นี้ค้างไว้
- กดครู่หนึ่งเพื่อล็อค/  
ปลดล็อคหน้าจอ

ปุ่มกลับ


กลับไปยังหน้าจอก่อนหน้านี้

ปุ่มค้นหา

### หมายเหตุ: เซนเซอร์รับสัญญาณ


เมื่อรับสายหรือโทรออก เซนเซอร์รับสัญญาณจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัสโดยการรับรู้อุปกรณ์ที่พบบนโต๊ะหรือบนโต๊ะทำงาน วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์

**คำเตือน:** การวางวัตถุที่มีน้ำหนักมาอยู่บนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่านั่งบนเซนเซอร์รับสัญญาณ LCD ด้วยฟิล์มป้องกัน เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดพลาดได้

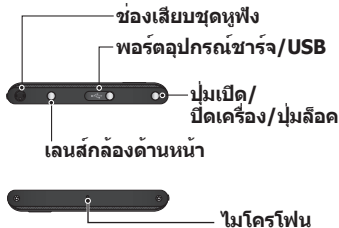

**ปุ่มปรับระดับเสียง**


- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง

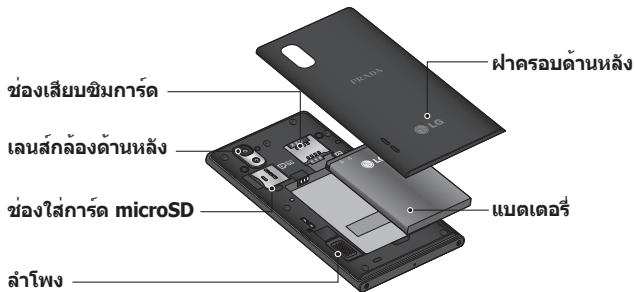


## การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:


1. ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ไขมือข้างหนึ่งของคุณ ดึงฝาครอบด้านหลังออกด้วยนิ้วหัวแม่มือของคุณตามที่แสดงไว้ในภาพ

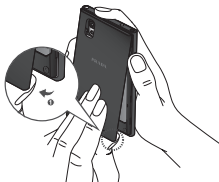

2. เสียบซิมการ์ดเข้าไปในช่องเสียบซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

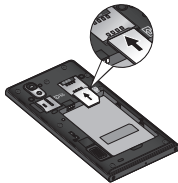

3. ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ (1) และคอยากดลงจนกว่าจะแน่นเข้าที่ (2)

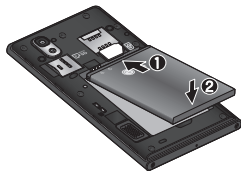

4. วางฝาครอบด้านหลังบนช่องใส่แบตเตอรี่ (1) และกดลงจนกระทั่งแน่นเข้าที่ (2)



## การชาร์จโทรศัพท์

เลื่อนและเปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านบน เสียบอุปกรณ์ชาร์จและเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ



**หมายเหตุ:** แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มตบใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่


## การใช้การ์ดหน่วยความจำ

โทรศัพท์ของคุณสนับสนุนการ์ดหน่วยความจำ microSD™ หรือ microSDHC™ ความจุสูงสุด 32GB การ์ดหน่วยความจำเหล่านี้ออกแบบมาโดยเฉพาะสำหรับโทรศัพท์มือถือและอุปกรณ์ที่มีขนาดเล็กมากอื่นๆ และเหมาะสำหรับจัดเก็บไฟล์มัลติมีเดีย เช่น เพลง โปรแกรม วิดีโอ และภาพถ่ายสำหรับใช้กับโทรศัพท์ของคุณ

**ในการใส่การ์ดหน่วยความจำ:**  
ใส่การ์ดหน่วยความจำลงในช่องเสียบโปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

**การถอดการ์ดหน่วยความจำอย่างปลอดภัย:**

แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล > ยกเลิกการต่อเชื่อมการ์ด SD

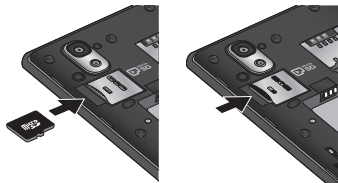


**หมายเหตุ:**

- ใช้งานเฉพาะการ์ดหน่วยความจำที่ใช้งานร่วมกันได้กับโทรศัพท์ของคุณเท่านั้น การใส่การ์ดหน่วยความจำที่ไม่สามารถใช้งานร่วมกันได้ อาจทำให้การ์ดและขมูลที่จัดเก็บไว้บนการ์ด รวมถึงโทรศัพท์เสียหายได้
- ขนาดไฟล์ที่สนับสนุนโดย FAT32 สามารถใช้กับความจุน้อยกว่า 4GB

**คำเตือน:**อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย

**การฟอร์แมตการ์ดหน่วยความจำ:** การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำจากอนึ่งจะสามารถใช้งานได้

**หมายเหตุ:** ไฟล์ทั้งหมดในการ์ดหน่วยความจำจะถูกลบออกเมื่อฟอร์แมต

1. บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน  เพื่อเปิดเมนูแอปพลิเคชัน
2. เลื่อนและแตะ **ตั้งค่า > ที่เก็บข้อมูล**
3. แตะ **ยกเลิกการเชื่อมต่อการ์ด SD**
4. แตะ **ลบการ์ด SD > ลบการ์ด SD > ลบทุกสิ่ง**
5. หากคุณตั้งค่าล๊อคแบบให้ป้อนขอมูลล๊อคแบบ แล้วเลือก **ลบทุกสิ่ง**

**หมายเหตุ:** หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดอรอาจจะแตกต่างไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

## การล็อคและปลดล็อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล็อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่

ในขณะที่คุณไม่ได้ใช้งาน LG-P940 โทรศัพท์จะเปิด/ปิดเครื่อง/ล็อค **○** เพื่อล็อคโทรศัพท์ของคุณ หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าหน้าจอล็อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ออกโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าเว็บไซต์ และการสื่อสารข้อมูล) ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กดปุ่มเปิด/ปิดเครื่อง/ล็อค **○** หน้าจอล็อคจะปรากฏ และจะเลื่อนล็อคหน้าจอขึ้นเพื่อปลดล็อคหน้าจอหลักของคุณหน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

### เคล็ดลับ!

ในการทำให้โทรศัพท์ของคุณใช้งานได้ คุณสามารถใช้ปุ่มลดระดับเสียงขณะที่หน้าจอปิดอยู่

## การรักษาความปลอดภัยการล็อคหน้าจอ

คุณสามารถล็อคหน้าจอให้คุณเพียงคนเดียวที่สามารถปลดล็อคเพื่อเข้าถึงโทรศัพท์ของคุณได้

**การตั้งค่าแบบการปลดล็อค, PIN หรือรหัสผ่านเป็นครั้งแรก:**

แอปพลิเคชัน > ตั้งค่า > ฝึกดีและการป้องกัน > ตั้งค่าล็อคหน้าจอ > รูปแบบ, PIN หรือรหัสผ่าน

เมื่อตั้งค่าแล้ว คุณสามารถเปลี่ยนได้ในเมนู เปลี่ยนล็อคหน้าจอ

### หมายเหตุ:

**ขอควรระวังเมื่อใช้ล็อคหน้าจอ**

● สิ่งสำคัญคือต้องจำแบบปลดล็อค Pin และรหัสผ่านที่คุณตั้งไว้ให้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้ หากคุณใช้แบบ Pin และรหัสผ่านไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสเพียง 5 ครั้งในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือรหัสผ่าน การปลดล็อคของคุณ:

▮ **หากคุณลืมรูปแบบ:**

หากคุณล็อกอินแอคเคาท์ Google ในโทรศัพท์แต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้นคุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมคุณต้องทำการ Hard Reset

▮ **หากคุณลืม PIN หรือ รหัสผ่าน:**

หากคุณลืม PIN หรือรหัสผ่านคุณต้องทำการ Hard Reset

## หน้าจอหลักของคุณ

### เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธี  
นาฬิกาเกิดโทรศัพท์ของคุณ

**แตะ** – ในการเลือกเมนู/ตัวเลือก  
หรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/  
ตัวเลือกนั้น

**แตะค้างไว้** – ในการเปิดเมนูตัวเลือก  
หรือจับวัตถุที่คุณต้องการขยาย ให้แตะ  
วัตถุที่คุณต้องการขยายค้างไว้

**ลาก** – ในการเลื่อนดูรายการหรือเคลื่อน  
ที่ซากรูปร่างผ่านหน้าจอ


**ลากนิ้ว** – ในการเลื่อนดูรายการหรือ  
เคลื่อนที่อย่างรวดเร็ว ให้รวัดนิ้วผ่าน  
หน้าจอสัมผัส (ลากอย่างรวดเร็วแล้วปล่อย)

#### หมายเหตุ:

- ในการเลือกรายการ  
ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอ  
สัมผัสไวต่อการสัมผัสที่เบาและ  
แน่นอน
- ไขปลายนิ้วในการสัมผัส  
ที่ตัวเลือกที่ต้องการ  
ระวังอย่าแตะโดนปุ่มอื่นๆ

## หน้าจอหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือ  
ขวาเพื่อดูพาเนล นอกจากนี้ คุณยังสามารถปรับแต่งพาเนลด้วย Widget, ปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ชื่นชอบ

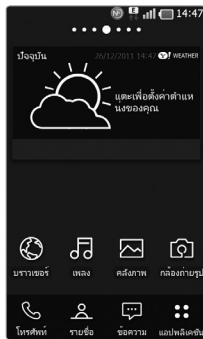

### หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

ในหน้าจอหลัก คุณสามารถดูปุ่มด่วนได้  
ที่ด้านล่างหน้าจอ ปุ่มด่วนจะทำให้  
สามารถเข้าใช้งานฟังก์ชันที่ชื่นชอบได้  
อย่างรวดเร็วด้วยการกดเพียงปุ่มเดียว  
📞 และไอคอน โทรศัพท์ เพื่อแสดงปุ่ม  
หมายเลขแบบสัมผัสสำหรับใช้โทรออก  
👤 และไอคอน รายชื่อ เพื่อเปิดรายชื่อ

**☑** และไอคอน **ข้อความ** เพื่อเขาใช้เมนูข้อความ นี่คือที่ซึ่งคุณสามารถสร้างข้อความใหม่ได้ **☑** และแท็บ **แอปพลิเคชัน** ด้านล่างหน้าจอ คุณสามารถดูแอปพลิเคชันที่ติดตั้งทั้งหมดได้ ในการเปิดแอปพลิเคชัน เพียงแตะไอคอนในรายการแอปพลิเคชัน

### การปรับแต่งหน้าจอลock

คุณสามารถปรับแต่งหน้าจอลockของคุณโดยเพิ่ม **Widget**, **ข้อความ**, **โพลีเดออร์** หรือ **วอลเปเปอร์** เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่ม **Widget** ที่ใข่มอยในหน้าจอลock

#### การเพิ่มรายการในหน้าจอลock:


1. หน้าจอลock > **เมนู** **☑** > **เพิ่ม** หรือ **แตะค้างไว้**บนส่วนที่ว่างของหน้าจอลock
2. ในเมนู **โหมดแก้ไข** ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณ จะเห็นรายการที่เพิ่มบนหน้าจอลock
3. ลากไปยังตำแหน่งที่คุณต้องการ แล้วปล่อยนิ้ว

#### การลบรายการจากหน้าจอลock:

หน้าจอลock > **แตะที่ไอคอน**ที่ต้องการลบค้างไว้ > ลากไปยัง **☑**

**เคล็ดลับ!** ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอลock จากเมนูแอปพลิเคชัน ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

### การปรับแต่งการออกแบบแอปพลิเคชันจากหน้าจอลock

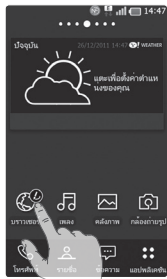

คุณสามารถแก้ไขไอคอนแอปพลิเคชันบนหน้าจอลockตามความต้องการของคุณได้

1. **แตะค้างไว้**ที่แอปพลิเคชันที่จะปรับแต่ง จากนั้นไอคอนการแก้ไขจะปรากฏขึ้นที่มุมบนขวาของไอคอนแอปพลิเคชัน
2. **แตะไอคอนการแก้ไข**และเลือกการออกแบบไอคอนที่ต้องการ

## การปรับแต่งการออกแบบหน้าจอลูก



คุณสามารถปรับแต่งการออกแบบหน้าจอลูกได้โดยการดาวน์โหลดแอปพลิเคชัน Launcher และธีมจาก **LG SmartWorld** หรือ **Android Market**

1. เลือก หน้าจอลูก > แอปพลิเคชัน > **LG SmartWorld** หรือ **Android Market**
2. เลือก Launcher และธีมที่มี 'Launcher หรือธีม' เป็นคำหลัก
3. ดาวน์โหลดและติดตั้งแอปพลิเคชัน Launcher และธีมที่ต้องการ
4. คุณสามารถเปลี่ยนแปลงค่าเริ่มต้นของ Launcher ที่ดาวน์โหลดได้โดยเลือก หน้าจอลูก > แอปพลิเคชัน > ตัวเลือกหน้าหลัก หลังจากติดตั้งเสร็จแล้ว

### หมายเหตุ:

- **LG SmartWorld** จะให้คุณตั้งค่าแอดเดสส์และไชนอินเพื่อใช้งาน
- **LG SmartWorld** อาจไม่สามารถใช้งานได้โดยขึ้นอยู่กับพื้นที่ โทรศัพท์ ผู้ให้บริการ แผนบริการ และเวอร์ชันซอฟต์แวร์

## การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด


- 1.แตะปุ่มหน้าหลักค้างไว้  หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2.แตะไอคอนเพื่อเปิดแอปพลิเคชันหรือแตะปุ่ม กลับ  เพื่อกลับไปแอปพลิเคชันปัจจุบันของคุณ

## แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนบนสุดของหน้าจอ



เสียง/สั่น/ Wi-Fi บลูทูธ NFC เปิดใช้ข้อมูลแล้ว  
เจียบ

แตะและเลื่อนแถบการแจ้งลงด้วยนิ้วมือหรือ ในหน้าจอลูก กดปุ่ม เมนู  แล้วเลือก การแจ้งเตือน ในหน้าจอนี้ คุณสามารถตรวจสอบเสียง/สั่น/เจียบ, Wi-Fi, บลูทูธ, NFC, เครื่องเล่นเพลง ฯลฯ

## การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายูแบตเตอรี่, Wi-Fi, บลูทูธ หรือ NFC ที่ใช้งาน และการเชื่อมต่อข้อมูล



ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด
	ไม่มีซิมการ์ด
	ไม่มีสัญญาณ
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	เปิด Wi-Fi Direct
	ชุดหูฟังแบบใช้สาย
	กำลังใช้สาย
	พักสาย
	ลำโพง
	ปิดโมโครโฟนโทรศัพท์


ไอคอน	รายละเอียด
	สายไม่ได้รับ
	เปิดบลูทูธ
	เชื่อมต่อกับอุปกรณ์บลูทูธ
	เปิด NFC แล้ว
	ค่าเตือนระบบ
	ตั้งปลุก
	ข้อความเสียงใหม่
	ปิดเสียงเรียกเข้า
	โหมดสั่น
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	ข้อมูลเข้าและออก
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	กำลังดาวน์โหลดข้อมูลแบบความเร็วสูง



ไอคอน	รายละเอียด
	กำลังอัปเดตข้อมูลแบบความเร็วสูง
	กำลังรับสัญญาณ GPS
	กำลังรับข้อมูลตำแหน่งจาก GPS
	เชื่อมต่อ On-Screen Phone
	3 การแจ้งยังไม่ได้อ่าน
	กำลังซิงค์ข้อมูล
	ดาวน์โหลดเสร็จสิ้น
	Gmail ใหม่
	ข้อความ Google Talk ใหม่
	ข้อความใหม่
	กำลังเล่นเพลง
	เหตุการณ์ที่จะเกิดขึ้น
	เปิดวิทยุ FM ในแบ็คกราวด์
	กำลังใช้งาน Portable Wi-Fi hotspot
	กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot

## แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลดข้อความที่คุณต้องการป้อนข้อความ

### การใช้งู่มก และ การป้อนข้อความ


 และหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ และสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

  และเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณสามารถแตะแท็บนี้ค้างไว้เพื่อดูเมนูตั้งค่างได้

 และเพื่อดูหรือแตะค่างเพื่อเปลี่ยนภาษาที่ใช้เขียน

 และ หรือสัมผัสค้างไว้ เพื่อแทรกอีโมติคอนขณะเขียนข้อความ

 และเพื่อเว้นวรรค

 และเพื่อขึ้นบรรทัดใหม่ในฟิลดข้อความ

 และเพื่อลบตัวอักษรก่อนหน้า

 และเพื่อซ่อนแป้นพิมพ์บนหน้าจอ

## การป้อนตัวอักษรที่ใช้สำหรับ เน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปน เป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "à") ตัวอย่างเช่น ในการป้อน "à" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มซุมเขาจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

## การตั้งค่าแอคเคาท์ GOOGLE

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่ายเพื่อลงชื่อเข้าใช้แอคเคาท์ Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

### การตั้งค่าแอคเคาท์ Google ของคุณ:

- ลงชื่อเข้าใช้แอคเคาท์ Google จากหน้าจอตั้งค่าที่แสดง

หรือ

- แอปพลิเคชัน > เลือกแอปพลิเคชัน Google เช่น **Gmail** > เลือก **สร้าง** เพื่อสร้างแอคเคาท์ใหม่

หากคุณมีแอคเคาท์ Google ให้ออนอีเมลแอดเดรสและรหัสผ่านของคุณ จากนั้นแตะ **ลงชื่อเข้าใช้** เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ขึ้นอยู่กับ การตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากใช้ขั้นอื่น คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

## เครือข่ายสังคม

ด้วยโทรศัพท์ของคุณ คุณสามารถใช้งานเครือข่ายสังคมและจัดไม่ใครบล็อกรของคุณในชุมชนออนไลน์ได้ คุณสามารถอัปเดตสถานะปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้ตามเวลาจริง คุณสามารถเพิ่มแอคเคาท์ Facebook, Twitter และ Myspace บนโทรศัพท์ของคุณได้ หากคุณไม่มีแอคเคาท์ สามารถเยี่ยมชมเว็บไซต์เหล่านั้นได้เพื่อตั้งค่าแอคเคาท์

**หมายเหตุ:** เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าบริการกับผู้ให้บริการเครือข่ายของคุณ

1. ในหน้าจอหลัก ให้เลือกแอปพลิเคชัน SNS ที่คุณต้องการใช้
2. หากคุณยังไม่มีแอคเคาท์ ให้แตะลงทะเบียนทันทีและป้อนรายละเอียด
3. ป้อนอีเมลแอดเดรสและรหัสผ่านที่คุณตั้งค่านับชุมชนของคุณ แล้วแตะล็อกอิน
4. โปรดรอซักระยะ กำลังตรวจสอบรายละเอียดของคุณกับชุมชนของคุณ
5. ตรวจสอบว่าชุมชนถูก เปิด หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

**เคล็ดลับ!** หากคุณเพิ่ม Widget เครือข่ายสังคมบนหน้าจอหลัก Widget จะแสดงสถานะเมื่อโทรศัพท์ของคุณอัปเดตจากเครือข่าย คุณสามารถเข้าใช้ชุมชนโดยตรงได้โดยแตะที่ Widget

## การดูและอัปเดตสถานะของคุณ

1. เลือกชุมชนที่ต้องการเข้าใช้
2. คุณสามารถดูสถานะปัจจุบันของชุมชนของคุณได้
3. คุณสามารถอัปเดตสถานะด้วยความเห็นหรือการอัปโหลดรูปภาพได้

**หมายเหตุ:** ทั้งนี้ขึ้นกับบริการเครือข่าย

**เคล็ดลับ!** คุณสามารถใช้ข้อมูลเกี่ยวกับเพื่อนได้ใน SNS เท่านั้น หรือซิงค์ข้อมูลทั้งหมดกับรายชื่อ

## การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ

เลือก แอปพลิเคชัน > ตั้งค่า > แอคเคาท์และการซิงค์ > เลือกแอคเคาท์ที่คุณต้องการลบ > แตะลบแอคเคาท์

## อีเมล

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Google Mail ได้ แอปพลิเคชันอีเมล รองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณ สามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

## การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

### การเพิ่มแอคเคาท์อีเมลอื่น:

1. แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ และ **เมนู** > **เพิ่มแอคเคาท์** หลังจากการตั้งค่าครั้งแรก อีเมล จะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

### การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:


1. แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ และ **เมนู** > **ตั้งค่า**


### การลบแอคเคาท์อีเมล:

1. แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ และ **เมนู** > **ตั้งค่า** > **และแอคเคาท์ที่คุณต้องการลบ** > **ลบแอคเคาท์**
2. **และปุ่ม** **นำออก** ในกล่องโต้ตอบเพื่อยืนยันว่าคุณต้องการลบแอคเคาท์นั้น

## หน้าจอแอคเคาท์อีเมล

คุณสามารถแตะที่แอคเคาท์เพื่อดู แถบเข้า แอคเคาท์ที่คุณใช้สำหรับส่ง อีเมลตามค่าเริ่มต้นจะมีเครื่องหมายถูกเลือกไว้ด้วย

 – แตะเพื่อเปิดแถบเข้ารวม ซึ่งมีข้อความที่ส่งถึงแอคเคาท์ของคุณ ทั้งหมด ข้อความใน แถบเข้ารวม จะมีรหัสสีแสดงอยู่ทางด้านซ้าย แบ่งตามแอคเคาท์ โดยสีที่ใช้จะเป็นสีเดียวกับที่ใช้กับแอคเคาท์ในหน้าจอ แอคเคาท์


 – แตะไอคอนโฟลเดอร์เพื่อเปิดโฟลเดอร์แอคเคาท์ อีเมลล่าสุดในแอคเคาท์เท่านั้นจะถูกดาวน์โหลดลงในโทรศัพท์ของคุณ ในการดาวน์โหลดข้อความอีเมลเพิ่มเติม (ก่อนหน้า) ให้แตะ **โหลดอีเมลเพิ่มเติม** ที่ด้านล่างของรายการอีเมล

## การทำงานกับไฟล์เดอแอนด์เคาท์

แต่ละแอนด์เคาท์ประกอบด้วยไฟล์เดอแอนด์เกตเข้า, เกตออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีไฟล์เดอแอนด์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอนด์เคาท์ของคุณสนับสนุน

## การเขียนและส่งอีเมล

### การเขียนและส่งข้อความ

1. ในขณะที่อยู่ในแอปพลิเคชัน อีเมล ให้แตะที่  เพื่อ **เขียนข้อความ**
2. ป้อนแอดเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษรแอดเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น คั่นแอดเดรสแต่ละแอนด์เคาท์ด้วยเครื่องหมายอัฒภาค
3. เพิ่ม Cc/Bcc และเพิ่มไฟล์สิ่งที่แนบหากต้องการ
4. ป้อนตัวอักษรในข้อความ
5. แตะปุ่ม **ส่ง**  
 หากคุณไม่ได้เชื่อมต่อกับเครือข่ายตัวอย่างเช่น หากคุณกำลังเปิดใช้งานโหมดเครื่องบิน ข้อความที่คุณต้องการส่งจะถูกเก็บในไฟล์เดอแอนด์เกตออกจนกว่าจะเชื่อมต่อกับเครือข่ายอีกครั้ง หากมีข้อความที่กำลังรอส่งอยู่ เกตออก จะปรากฏบนหน้าจอแอนด์เคาท์

**เคล็ดลับ!** เมื่อเกตเข้ามีอีเมลใหม่เข้ามา คุณจะได้รับแจ้งด้วยเสียงพร้อมการสั่น

## เว็บไซต์บราวเซอร์

บราวเซอร์ ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรทัศน์ของคุณ ได้ทุกที่และทุกอย่างไม่ต้องการ

**หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามขอมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ**

## การใช้แถบเครื่องมือเว็บ



แตะเพื่อย้อนกลับหนึ่งเพจ



แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม ย้อนกลับ ซึ่งจะไปยังเพจก่อนหน้า



แตะเพื่อแสดงหน้าตาที่เปิดอยู่ทั้งหมด



แตะเพื่อเพิ่มหน้าต่างใหม่

## การใช้ตัวเลือก

กดปุ่ม เมนู เพื่อดูตัวเลือก



**อ่านที่หลัง** – เพิ่มเว็บเพจปัจจุบันในอ่านที่หลัง



**เพิ่ม RSS feed** – เพิ่มเว็บเพจปัจจุบันใน RSS feed



**แบ่งปันเพจ** – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้



**หาในเพจ** – ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน



**เลือกข้อความ** – ให้คุณคัดลอกข้อความใดๆ จากเว็บเพจ




**อื่นๆ**

- **โฮมเพจ:** ไปยังโฮมเพจ
- **ตั้งค่าโฮมเพจ:** ตั้งค่าเว็บเพจปัจจุบันเป็นโฮมเพจของคุณ
- **เพิ่มปุ่มลัดในหน้าหลัก:** เพิ่มปุ่มลัดของเพจปัจจุบันในหน้าหลัก
- **ขอมูลเพจ:** แสดงขอมูลเว็บเพจ
- **ดาวน์โหลด:** แสดงประวัติดาวน์โหลดของคุณ
- **ตั้งค่า:** แสดงการตั้งค่าเบราว์เซอร์




## มีเดีย

คุณสามารถจัดเก็บไฟล์มีเดียลงใน  
ในการหน่วยความจำเพื่อเข้าถึงไฟล์  
รูปภาพและวิดีโอได้อย่างง่ายดาย

### คลังภาพ


แตะแท็บ แอปพลิเคชัน   
แล้วเลือก **คลังภาพ** เปิดรายการของ  
แถบแคตตาล็อกที่คุณเก็บไฟล์มีเดีย  
มีเดียทั้งหมดได้


### มุมมองตามลำดับเวลา


**คลังภาพ** ใน LG-P940 จะแสดง  
มุมมองของรูปภาพและวิดีโอตาม  
ลำดับเวลา ในโหมดมุมมองกริด  
หลากหลาย    ไปทางขวา  
และวันที่ถ่ายภาพจะปรากฏขึ้น  
โดยเริ่มจากล่าสุด หากคุณเลือกวันที่  
ระบุ รูปภาพทั้งหมดที่คุณถ่ายในวันนั้น  
จะถูกจัดกลุ่ม


### แก้ไขภาพ

คุณสามารถแก้ไขรูปภาพและใช้เอฟเฟกต์  
ต่างๆ ได้

1. แตะแท็บ แอปพลิเคชัน   
แล้วเลือก **แก้ไขภาพ**
2. เลือกภาพที่ต้องการแก้ไข
3. เลือกตัวเลือกการแก้ไขที่ต้องการและ  
แก้ไขภาพได้ตามต้องการ


 **แก้ไขภาพโดยใช้ เลือก, หมุน และ  
ปรับขนาด**

 **ใช้ฟิลเตอร์ที่แตกต่างกัน 19  
ประเภท**

 **ปรับภาพโดยใช้ ระดับอัตโนมัติ,  
ความสมดุลสี, ความสว่าง,  
ความเข้มสี, ความสว่างสี และ  
ความอึมตัวของสี**

 **ใช้ขอบที่แตกต่างกัน 18 ประเภท**

 **รวมภาพที่เลือกปัจจุบันและภาพอื่นๆ  
บันทึกภาพที่แก้ไข**

 **ทำสิ่งที่คุณยกเลิกไปแล้วอีกครั้ง  
เลิกทำ: ย้ายไปยังขั้นตอนก่อนหน้านี้  
ก่อนแก้ไขภาพ**

 **ย้ายไปยังเมนูก่อนหน้า**

4. **ปรับภาพตามต้องการโดยใช้เอฟเฟกต์  
ต่างๆ**

5. **เมื่อดำเนินการเสร็จเรียบร้อย ให้เลือก  
บันทึก**

**หมายเหตุ:**

- คุณสมบัตินี้อาจไม่สามารถใช้งานได้ โดยขึ้นอยู่กับความละเอียดของรูปภาพและรูปแบบไฟล์
- คุณสามารถเข้าใช้คุณสมบัตินี้ได้จากแอปพลิเคชันคลังภาพ ไปที่ **คลังภาพ และเลือกภาพ > เมนู > เพิ่มเติม > แก้ไข**

## เพลง

โทรศัพท์ LG-P940 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะที่ **เพลง**

### การเล่นเพลง

1. ในหน้าจอหลัก แตะที่ **แอปพลิเคชัน**  และเลือก **เพลง**
2. แตะ **เพลง**
3. เลือกเพลงที่คุณต้องการเล่น

	แตะเพื่อหยุดการเล่นไว้ชั่วคราว
	แตะเพื่อเริ่มเล่นต่อ
	แตะเพื่อข้ามไปที่แทร็คถัดไปในอัลบั้ม รายการเล่น หรือสลับเปลี่ยน
	แตะเพื่อข้ามไปที่แทร็คก่อนหน้าในอัลบั้ม รายการเล่น หรือสลับเปลี่ยน
	แตะเพื่อตั้งค่าโหมดซ้ำ
	แตะเพื่อเล่นรายการเพลงปัจจุบันในโหมดสลับเปลี่ยน
	แตะเพื่อดูรายการเพลงปัจจุบัน
	แตะเพื่อดูเนื้อเพลง ตัวเลือกนี้ใช้ได้เมื่อเพลงมีเนื้อเพลงมาด้วยเท่านั้น
	แตะเพื่อเปลี่ยนแปลงระดับเสียง
	แตะเพื่อตั้งค่าเอฟเฟกต์เสียงแบบเวอรัลลเซอร์วานขณะเชื่อมต่อกับแจ็คหูฟัง

ในการปรับระดับเสียงระหว่างฟังเพลง ให้กดปุ่มเพิ่มและลดระดับเสียงที่ด้านซ้ายของโทรศัพท์ หรือแตะปุ่มระดับเสียงซอฟต์แวร์และเลื่อนปุ่มเลื่อนในหน้าจอเครื่องเล่น

แตะเพลงหนึ่งในรายการเพลงค้างไว้ หน้าจอจะแสดง **เล่น**, **เพิ่มในรายการเพลง**, **ใช้เป็นเสียงเรียกเข้า**, **ลบ**, **แบ่งปัน**, **ค้นหา** และ **รายละเอียด** ขึ้นมาเป็นตัวเลือก

**หมายเหตุ:** ลิขสิทธิ์ของไฟล์เพลง จะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมาย ลิขสิทธิ์ของแต่ละประเทศ ดังนั้นอาจจำเป็นที่ต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีขออนุญาตในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง กอนดาวน์โหลดหรือคัดลอกไฟล์ให้ตรวจสอบกฎของบังคับของประเทศนั้นๆเกี่ยวกับการใช้สื่อต่างๆ

## วิทยุ FM

โทรศัพท์ LG-P940 มีคุณสมบัติวิทยุ FM ในตัว ดังนั้น คุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา


**หมายเหตุ: คุณต้องใช้ชุดหูฟังเพื่อรับฟังวิทยุ เลียบชุดหูฟังเข้าในช่องเสียบหูฟัง**

**หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ปุ่มหมุนบนหน้าจอ**

**การค้นหาสถานี**

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องค้นหาอีกว่าคุณสามารถจัดเก็บได้สูงสุด 48 ช่องสถานีในโทรศัพท์ของคุณ

**การปรับตั้งอัตโนมัติ**

1. บนหน้าจอหลัก **แตะ** แท็บ **แอปพลิเคชัน**  **และเลือก** **วิทยุ FM**
2. กดปุ่ม **เมนู** แล้ว **แตะ** **สแกนอัตโนมัติ**
3. หากมีช่องสถานีที่ตั้งใจล่วงหน้าแล้ว คุณจะเห็นป๊อปอัป "รีเซ็ตของทั้งหมดและเริ่มสแกนอัตโนมัติ?" หากคุณเลือก **ตกลง** ของสถานีที่ตั้งใจล่วงหน้าทั้งหมดจะถูกลบและจะเริ่ม **สแกนอัตโนมัติ**
4. ระหว่างการสแกนอัตโนมัติ **แตะ** **หยุด** หากคุณต้องการหยุดการสแกน โดยจะบันทึกเฉพาะของสถานีที่สแกนพบก่อนหยุดการสแกนเท่านั้น

**เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุหากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิตมาเพื่อใช้รับสัญญาณวิทยุ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้**

**NFC**

โทรศัพท์ LG-P940 ของคุณสามารถใช้ NFC ได้ NFC (Near Field Communication) คือเทคโนโลยีการเชื่อมต่อไร้สายที่ให้การสื่อสารแบบสองทางระหว่างอุปกรณ์อิเล็กทรอนิกส์ โดยจะทำงานในระยะสองสามเซนติเมตร คุณสามารถแบ่งปันเนื้อหากับแท็ก NFC หรืออุปกรณ์อื่นได้โดยการแตะกับอุปกรณ์ของคุณ หากคุณแตะแท็ก NFC กับอุปกรณ์ของคุณ จะแสดงเนื้อหาของแท็กในอุปกรณ์ของคุณ

**หมายเหตุ:** ระวังระวังอย่าให้  
เกิดรอยขีดข่วนหรือความเสียหาย  
ที่ด้านในฝาด้านหลัง  
เนื่องจากเป็นเสาอากาศ NFC

### ในการเปิดหรือปิด NFC

จากหน้าจอหลัก ให้แตะและเลื่อนแถบ  
การแจ้งเตือนด้วยนิ้วของคุณ และเลือก  
ไอคอน NFC เพื่อเปิด

**หมายเหตุ:** ขณะเปิดใช้งานโหมด  
Flight จะสามารถใช้งานแอปพลิเคชัน  
เคชั่น NFC ได้

### การใช้งาน NFC

ในการใช้ NFC ให้ตรวจสอบให้แน่ใจว่า  
คุณเปิดอุปกรณ์ของคุณและเปิดใช้งาน  
การตั้งค่า NFC ในกรณีที่เป็นปิดใช้งาน  
เอาไว้

### การใช้งานเขียนแท็ก

1. เปิดแอปพลิเคชัน NFC
2. เลือกแท็บ **ใหม่**  
และเลือกตัวเลือกที่ต้องการ:  
**รายชื่อ, URL, บันทึก, การโทร,**  
**ข้อความตัวอักษร** และ **นัดหมาย**
3. ป้อนข้อมูลเพื่อเขียนลงในแท็กหรือ  
อุปกรณ์ และเลือก **แบ่งปัน**
4. แตะด้านหลังอุปกรณ์ของคุณกับ  
แท็กหรืออุปกรณ์เพื่อแบ่งปัน

### การใช้งานอ่านแท็ก

1. ในการอ่านแท็กบริการ ให้แตะแท็ก  
บริการหรืออุปกรณ์ NFC อื่นกับฝา  
ด้านหลังของอุปกรณ์ของคุณ
2. เมื่อพบแท็กหรืออุปกรณ์แล้ว  
จะแสดงข้อมูลที่เกี่ยวข้อง



### HDMI

HDMI (High Definition Multimedia Interface) คืออินเตอร์เฟซเสียง/วิดีโอขนาดกะทัดรัดสำหรับส่งข้อมูลดิจิทัลแบบไม่มีบัสอัด หากโทรศัพท์ของคุณเชื่อมต่อ  
กับทีวี/จอภาพผ่านสาย HDMI คุณสามารถดูไฟล์ภาพและวิดีโอผ่านทีวี/จอภาพเมื่อเครื่องเล่นวิดีโอหรือโปรแกรมดูภาพปรากฏขึ้นบนหน้าจอโทรศัพท์ของคุณ

เมื่อใช้อุปกรณ์ของคุณกับอะแดปเตอร์ MHL จะทำให้คุณสามารถดูวิดีโอและมีเดียอื่นๆ ที่คุณมีอยู่ในโทรทัศน์บนทีวี HD ที่สามารถทำงานร่วมกันได้  
หมายเหตุ: สาย Universal HDMI และอะแดปเตอร์ MHL ไม่ได้ในมาพร้อมกับอุปกรณ์ของคุณ

หมายเหตุ:

อาจต้องใช้เวลาสักครู่ในการเล่นไฟล์มีเดีย ขึ้นอยู่กับอุปกรณ์ที่เชื่อมต่อกับโทรทัศน์ อาจเล่นไฟล์ได้ไม่ถูกต้องเมื่อใช้สายเคเบิลหรืออุปกรณ์ที่ไม่ได้รับการรับรองจาก HDMI แนวตำแหน่งของภาพที่ตั้งค่าในโทรทัศน์จะถูกนำไปใช้กับภาพที่แสดงในอุปกรณ์ด้วย วิดีโอที่ได้รับการป้องกัน เช่น DRM(digital rights management) จะแสดงเฉพาะในโทรทัศน์ของคุณเท่านั้น หากโทรทัศน์ของคุณเชื่อมต่อกับทีวี/จอภาพด้วยความละเอียด HDMI ต่ำ การเล่นวิดีโอความละเอียดสูง/การดูตัวอย่างในกล่องถายรูปอาจไม่แสดงบนทีวี/จอภาพ

## เชื่อมต่อ

### บลูทูธ

คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้องไม่ใช่จากเมนูบลูทูธเหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

**เคล็ดลับ! ด้วย LG-P940** คุณสามารถสนุกสนานกับบลูทูธความเร็วสูงได้ หากอุปกรณ์ที่คุณต้องการแบ่งปันไฟล์สนับสนุนบลูทูธความเร็วสูงด้วย ไฟล์จะถูกส่งผ่านเครือข่ายความเร็วสูงโดยอัตโนมัติในการส่งข้อมูลด้วยบลูทูธความเร็วสูง ก่อนใช้โปรดตรวจสอบว่า Wi-Fi เป็น ปิด แล้วในอุปกรณ์ของคุณ การตั้งค่าบลูทูธความเร็วสูงอาจแตกต่างกันขึ้นอยู่กับอุปกรณ์ โปรดตรวจสอบการตั้งค่าของอุปกรณ์กับคู่มือบริการ

หมายเหตุ:

- **LG** ไม่มีส่วนรับผิดชอบใดๆ สำหรับการสูญหาย การสกัด์กัน หรือการนำข้อมูลที่ส่งหรือรับผ่านคุณสมบัตินี้สื่อสารไร้สายด้วยบลูทูธไปใช้ในทางที่ผิด
- คุณต้องแน่ใจเสมอว่าได้แบ่งปันและรับข้อมูลจากอุปกรณ์ที่เชื่อถือได้และปลอดภัย ในกรณีที่มีสิ่งกีดขวางระหว่างอุปกรณ์ ระยะเวลาทำงานอาจลดลง
- อุปกรณ์บางรุ่น โดยเฉพาะรุ่นที่ยังไม่ผ่านการทดสอบหรืออนุญาตโดย Bluetooth SIG อาจไม่สามารถใช้งานร่วมกับกับอุปกรณ์ของคุณได้

**การเปิดบลูทูธและการจับคู่โทรศัพท์ของคุณกับอุปกรณ์บลูทูธ**

1. แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > แตะ บลูทูธ เพื่อเปิด
2. ไปที่ การตั้งค่า > สแกนหาอุปกรณ์
3. เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ

เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น ถ้าอุปกรณ์ที่คุณต้องการจับคู่ไม่อยู่ในรายการ ให้ตรวจสอบ

สอบว่าอุปกรณ์เป้าหมายได้รับการตั้งค่าเป็น คนหาได แลวสแกนอีกครั้ง

**ส่งข้อมูลด้วยคุณสมบัติไร้สายบลูทูธ**



1. เลือกไฟล์หรือรายการ เช่น รายชื่อ เหตุการณ์ในปฏิทิน บันทึกรหัส หรือไฟล์มีเดีย จากแอปพลิเคชันที่เหมาะสม หรือดาวน์โหลด
2. เลือกตัวเลือกการส่งด้วยบลูทูธ

**หมายเหตุ: วิธีการเลือกตัวเลือก อาจแตกต่างกันตามประเภทข้อมูล**

3. ค้นหาและจับคู่อุปกรณ์ที่เปิดใช้งานบลูทูธ

**รับข้อมูลด้วยคุณสมบัติไร้สายบลูทูธ**

1. ในโหมดรองรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่าบลูทูธ > คนหาได** อุปกรณ์บลูทูธอื่นๆ จะสามารถค้นหาอุปกรณ์ของคุณได้เป็นเวลา 120 วินาที
2. เมื่อเครื่องแสดงข้อความ ให้ป้อน PIN สำหรับคุณสมบัติไร้สายบลูทูธ และเลือก **ตกลง** (หากจำเป็น)
3. เลือก **ยอมรับ** เพื่อยืนยันว่าคุณต้องการรับข้อมูลจากอุปกรณ์ ข้อมูลที่ได้รับจะถูกบันทึกไว้ในโฟลเดอร์บลูทูธ

**หมายเหตุ: หากคุณได้รับรายชื่อ คุณสามารถบันทึกรายชื่อลงในสมุดโทรศัพท์ได้ด้วยวิธีต่อไปนี้ : แตะ รายชื่อ  > กด  > เพิ่มเติม > อิมพอร์ต/เอ็กซ์พอร์ต ดูที่หน้า 52**

## Wi-Fi

เรียนรู้เพื่อใช้คุณสมบัติเครือข่ายไร้สายของโทรศัพท์เพื่อเปิดใช้งานและเชื่อมต่อเครือข่ายไร้สายในท้องถิ่น (WLAN) ที่ใช้ได้กับมาตรฐาน IEEE 802.11 b/g/n คุณสามารถเชื่อมต่ออินเตอร์เน็ตหรืออุปกรณ์เครือข่ายอื่นใดทุกทีที่มีจุดเชื่อมต่อหรือฮอตสปอต

**เปิดใช้งานคุณสมบัติ WLAN**  
 ในโหมดรองรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi > Wi-Fi**

**หมายเหตุ: WLAN ที่เปิดใช้งาน และทำงานบนพื้นหลังจะใช้พลังงานแบตเตอรี่ หากต้องการสำรองพลังงานแบตเตอรี่ให้เปิดใช้งาน WLAN เฉพาะเมื่อจำเป็น**

## ค้นหาและเชื่อมต่อกับ WLAN

1. ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi** อุปกรณ์จะค้นหา WLAN ที่พร้อมใช้งานโดยอัตโนมัติ
2. เลือกเครือข่ายจาก **เครือข่าย Wi-Fi**
3. ป้อนรหัสผ่านสำหรับเครือข่าย (หากจำเป็น)
4. เลือก **เชื่อมต่อ เพิ่ม WLAN ด้วยตัวเอง**
  1. ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi > เพิ่มเครือข่าย Wi-Fi**
  2. ป้อน SSID สำหรับเครือข่าย และเลือกประเภทการรักษาความปลอดภัย
  3. ตั้งค่าการรักษาความปลอดภัยตามประเภทการรักษาความปลอดภัยที่เลือก
  4. เลือก **บันทึก**

## เชื่อมต่อกับ WLAN ด้วย Wi-Fi Protected Setup (WPS)

- ด้วยการใช้ WPS คุณสามารถเชื่อมต่อกับเครือข่ายที่มีการรักษาความปลอดภัยได้
- ในการเชื่อมต่อกับ WLAN ด้วยปุ่ม WPS
1. ในโหมดรอรับสาย เปิดรายการ

แอปพลิเคชันแล้วเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi**

2. เลือก **กดปุ่มการเชื่อมต่อ**
3. กดปุ่ม WPS บนจุดเชื่อมต่อภายใน 2 นาที

ในการเชื่อมต่อกับ WLAN ด้วยปุ่ม WPS

1. ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi**
2. เลือกเครือข่ายที่มีไอคอน WPS ระบุไว้ และเลือก **WPS PIN**
3. บนจุดเชื่อมต่อ ป้อน PIN และกดปุ่มเริ่ม

## Wi-Fi Direct

เรียนรู้วิธีใช้คุณสมบัติ WLAN Direct เพื่อเชื่อมต่ออุปกรณ์สองเครื่องด้วย WLAN โดยไม่ต้องใช้งานจุดเชื่อมต่อ

### เชื่อมต่ออุปกรณ์ของคุณเข้ากับอุปกรณ์ WLAN อื่น

1. ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันและเลือก **ตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi Direct > ตกลง > Wi-Fi Direct**
2. กด **เมนู**  **> สแกน**
3. เลือกอุปกรณ์แล้วเลือก **เชื่อมต่อ** เมื่อเจ้าของอุปกรณ์อื่นยอมรับการ

- เชื่อมต่อจะถือว่าการจับคู่เสร็จสมบูรณ์
4. ในการเลือกใช้งานคุณสมบัติ WLAN Direct เลือก ยกเลิกการเชื่อมต่อ Wi-Fi Direct

#### หมายเหตุ:

โหมด **Forced G/O (Forced Group owner)** – และเพื่อเปิดใช้โหมดเจ้าของกลุ่ม ซึ่งจะทำให้อุปกรณ์ Wi-Fi รุ่นเก่าสามารถเชื่อมต่อได้ด้วยการสแกนหาโทรศัพท์ของคุณ ในกรณีนี้ คุณจะต้องป้อนรหัสผ่านที่ตั้งไว้ในเมนู > ขั้นสูง > รหัสผ่าน

## การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่ายไร้สาย อุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้

### การเปิด SmartShare

และอนุญาตให้แบ่งปันเนื้อหา

1. แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**
2. กดปุ่ม **เมนู** และเลือก **ตั้งค่า**
3. แตะช่องทำเครื่องหมาย **ค้นหาได้** เพื่อเปิด

- แตะ **รับคำขอเสมอ** หากคุณต้องการยอมรับคำขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
  - แตะ **รับไฟล์** หากคุณต้องการอนุญาตให้อุปกรณ์อื่นอัปโหลดไฟล์ไปยังโทรศัพท์ของคุณโดยอัตโนมัติ
4. ในส่วนแบ่งปันเนื้อหา ให้แตะเพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก **รูปภาพ**, **วิดีโอ** และ **เพลง**
  5. SmartShare เปิดใช้งานแล้ว และพร้อมแบ่งปันเนื้อหา

การแบ่งปันเนื้อหาจากไลบรารีเนื้อหาในระยะใกล้กับอุปกรณ์อื่นให้อุปกรณ์แสดงผลของคุณ (เช่น ทีวี) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหาในระยะใกล้ของคุณ (เช่น คอมพิวเตอร์)

**หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA ในอุปกรณ์ของคุณ (เช่น ทีวีและคอมพิวเตอร์) อย่างถูกต้องแล้ว**

1. แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**
2. แตะปุ่มบนขวาหรือเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
3. แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาในระยะใกล้

4. คุณสามารถเรียกดูไลบรารีเนื้อหาได้
  5. แต่ละภาพขนาดเล็กของเนื้อหา หรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**
- การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่นทีวี)**

**หมายเหตุ:** ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

1. ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน **คลังภาพ** ให้แตะค้างไว้เพื่อเลือกหลายไฟล์ จากนั้นคุณสามารถเลือกไฟล์หลายไฟล์เพื่อแบ่งปันได้
2. แตะ **แบ่งปัน** บนเมนู และเลือก **SmartShare**
3. SmartShare จะเริ่มทำงานโดยอัตโนมัติด้วยไฟล์ที่เลือก
4. เลือกอุปกรณ์จากรายการอุปกรณ์แสดงผลเพื่อเล่นไฟล์

**หมายเหตุ:** ทำตามขั้นตอนเดียวกันนี้เพื่อใช้เครื่องเล่นเพลง กล้องกายรูป และเครื่องเล่นวิดีโอเพื่อแบ่งปันเนื้อหา

**หมายเหตุ:** ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้ว โดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้ อุปกรณ์

DLNA บางประเภท (เช่น ทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

**การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล**

1. แตะที่ **แอปพลิเคชัน** **SmartShare** และเลือก **SmartShare**
2. แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
3. คุณสามารถเรียกดูไลบรารีเนื้อหาได้
4. แต่ละภาพขนาดเล็กของเนื้อหาแล้วแตะ **ปุ่มเมนูดาวน์โหลด**

**หมายเหตุ:** ไม่สนับสนุนเนื้อหาบางประเภท การอัปโหลดเนื้อหาจากโทรศัพท์ของฉันไปยังไลบรารีเนื้อหาระยะไกล

**หมายเหตุ:** ตรวจสอบว่าใส่การ์ด SD ถูกต้อง และเลือกรับไฟล์ในเมนูตั้งค่าแล้ว

1. แตะที่ **แอปพลิเคชัน** **SmartShare** และเลือก **SmartShare**
2. แตะปุ่มบนซ้ายและเลือกโทรศัพท์ของฉัน
3. คุณสามารถเรียกดูไลบรารีเนื้อหาได้
4. แต่ละภาพขนาดเล็กของเนื้อหาค้างไว้แล้วแตะ **ปุ่มเมนูอัปโหลด**

5. เลือกอุปกรณ์ของไลบรารีเนื้อหา  
ระยะไกลที่จะอัปโหลด  
หมายเหตุ: อุปกรณ์ที่ใช้ DLNA  
บางประเภทไม่สนับสนุนฟังก์ชัน  
อัปโหลด DMS และจะไม่มีการอัป  
โหลด ไม่สนับสนุนเนื้อหาบางประเภท

## การแบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่

เรียนรู้วิธีการตั้งค่าอุปกรณ์ของคุณให้  
เป็นโมเด็มไร้สายหรือจุดเชื่อมต่อไร้สาย  
สำหรับคอมพิวเตอร์หรืออุปกรณ์อื่นๆ  
และแบ่งปันการเชื่อมต่อเครือข่ายไร้สาย  
ของอุปกรณ์ของคุณ

### แบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่ ของอุปกรณ์ของคุณด้วย WLAN

1. ในโหมดรอรับสาย  
เปิดรายการแอปพลิเคชันแล้วเลือก  
ตั้งค่า > ระบบไร้สายและเครือข่าย  
> Portable hotspot
2. เลือก **Portable Wi-Fi hotspot  
settings** > ตกลง
3. เลือก **Portable Wi-Fi hotspot**  
เพื่อเปิดใช้งานฮอตสปอต WLAN
4. เลือก **Configure Wi-Fi hotspot**  
เพื่อปรับแต่งฮอตสปอต WLAN:  
**SSID** เครือข่าย - ดูและแก้ไขชื่อ  
อุปกรณ์ที่จะแสดงบนอุปกรณ์ภายใน  
นอก

### การรักษาความปลอดภัย - เลือกประเภทการรักษาความปลอดภัย แบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่ ของอุปกรณ์ของคุณด้วย USB

1. เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์  
โดยใช้สายเคเบิล USB
1. รายการโหมดการเชื่อมต่อ USB  
จะปรากฏขึ้น
3. เลือก การปล่อยสัญญาณผ่าน  
**USB** เพื่อเปิดใช้งานคุณสมบัติการ  
ปล่อยสัญญาณผ่าน USB อุปกรณ์  
ของคุณจะแบ่งปันการเชื่อมต่อเครือ  
ข่ายโทรศัพท์มือถือบนคอมพิวเตอร์  
ของคุณ ในการหยุดการแบ่งปันเครือ  
ข่ายโทรศัพท์มือถือ ให้ยกเลิกการ  
เลือกกล่องทำเครื่องหมายที่อยู่ถัด  
จาก การปล่อยสัญญาณผ่าน  
**USB** (เลือกตัวเลือก ชาร์จเท่านั้น เพื่อ  
ยกเลิกการเชื่อมต่อโทรศัพท์)

หมายเหตุ: วิธีการแบ่งปันสำหรับการ  
การเชื่อมต่อเครือข่ายอาจแตกต่างกัน  
ในแต่ละระบบปฏิบัติการคอม  
พิวเตอร์

## GPS

อุปกรณ์ของคุณมีตัวรับสัญญาณระบบกำหนดตำแหน่งบนพื้นโลก (GPS) ติดตั้งเอาไว้ เรียนรู้วิธีการเปิดใช้งานบริการตำแหน่ง ในการรับสัญญาณ GPS ให้ได้ดียิ่งขึ้น หลีกเลี่ยงการใช้งานโทรศัพท์ของคุณในสถานการณ์ต่อไปนี้:

- ระหว่างอาคาร ในอุโมงค์ หรือทางใต้ดิน หรือภายในอาคาร ในระหว่างที่สภาพอากาศเลวร้าย ภายในสนามพลังแรงดันไฟฟ้าสูง หรือสนามพลังแม่เหล็กไฟฟ้า
- ห้ามแตะบริเวณเสาอากาศภายในหรือใช้มือหรือวัตถุอื่นปิดบริเวณนี้ไว้ขณะใช้งานฟังก์ชัน GPS
- คุณสมบัตินี้อาจไม่สามารถใช้งานได้โดยขึ้นอยู่กับภูมิภาคหรือผู้ให้บริการของคุณ

### เปิดใช้งานบริการตำแหน่ง

คุณต้องเปิดใช้งานบริการตำแหน่งเพื่อรับข้อมูลตำแหน่งและค้นหาแผนที่

1. ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตำแหน่งและระบบป้องกัน**
2. ปรับการตั้งค่าต่อไปนี้เพื่อเปิดใช้งานบริการตำแหน่ง:  
**ใช้เครือข่ายไร้สาย** - ตั้งค่าเพื่อใช้ WLAN และ/หรือเครือข่ายโทรศัพท์เคลื่อนที่ในการค้นหาตำแหน่งของคุณ  
**ใช้ดาวเทียม GPS** - ตั้งค่าเพื่อใช้ดาวเทียม GPS

ในการค้นหาตำแหน่งของคุณ

## การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลคอมพิวเตอร์

เรียนรู้วิธีเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลในโหมดการเชื่อมต่อ USB ด้วยการเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ คุณจะสามารถถ่ายโอนข้อมูลเข้าสู่และออกจากอุปกรณ์ของคุณได้โดยตรง และใช้งานซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

### ฟังก์ชันโทรศัพท์ของคุณกับคอมพิวเตอร์

ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้งซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite) ในคอมพิวเตอร์ ดาวน์โหลดโปรแกรมจากเว็บไซต์ LG ([www.lg.com](http://www.lg.com))

1. ใช้สายเคเบิลข้อมูล USB เพื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์  
**รายการ โหมดการเชื่อมต่อ USB** จะปรากฏขึ้น และให้เลือก **PC software**
3. เริ่มใช้งานโปรแกรม LG PC Suite จากคอมพิวเตอร์  
 โปรดดูวิธีใช้ซอฟต์แวร์คอมพิวเตอร์

(LG PC Suite) สำหรับข้อมูลเพิ่มเติม

## หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

- **ไดรเวอร์ USB ในตัวของ LG** จำเป็นสำหรับอุปกรณ์ LG และคอมพิวเตอร์ ซึ่งจะติดตั้งโดยอัตโนมัติเมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

## เชื่อมต่อโดยใช้เป็นอุปกรณ์เก็บข้อมูล

คุณสามารถเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้เป็นดิสก์แบบถอดได้ และเข้าถึงไฟล์ใดก็ตามที่ หากคุณใส่การ์ดหน่วยความจำลงในอุปกรณ์ คุณจะเข้าถึงไฟล์ใดก็ตามที่ของการ์ดหน่วยความจำได้โดยการใช้อุปกรณ์เป็นที่อ่านการ์ดหน่วยความจำ

### ▶ แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล

เพื่อตรวจสอบสื่อเก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการ์ดหน่วยความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)

2. เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
3. รายการโหมดการเชื่อมต่อ USB จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล

4. เปิดโฟลเดอร์หน่วยความจำที่ถอดได้นบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณและโอนไฟล์
5. คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโฟลเดอร์ไดรฟ์
6. เลือกตัวเลือก **ซาร์จเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์ทำการถ่ายโอนเพลง ภาพถ่าย และใช้โหมดที่เก็บข้อมูล USB

### ▶ แอปพลิเคชัน >

#### ตั้งค่า > ที่เก็บข้อมูล

เพื่อตรวจสอบสื่อเก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการ์ดหน่วยความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)

2. เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
3. รายการโหมดการเชื่อมต่อ USB จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล
4. เปิดโฟลเดอร์หน่วยความจำที่ถอดได้นบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณและโอนไฟล์
5. คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโฟลเดอร์ไดรฟ์
6. เลือกตัวเลือก **ซาร์จเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

**หมายเหตุ:** ในการยกเลิกการเชื่อมต่ออุปกรณ์จากคอมพิวเตอร์ให้คลิกที่ไอคอนอุปกรณ์ USB บนแถบงาน Windows และคลิกที่ตัวเลือกเพื่อถอดอุปกรณ์เก็บข้อมูลอย่างปลอดภัย จากนั้นจึงดึงสายเคเบิลข้อมูลออกจากคอมพิวเตอร์ มิฉะนั้น คุณอาจสูญเสียข้อมูลที่จัดเก็บไว้บนการ์ดหน่วยความจำ หรือทำให้การลดหน่วยความจำเสียหายได้

## การเชื่อมต่อ VPN

คุณสามารถสร้างเครือข่ายส่วนตัวเสมือน (VPN) และเชื่อมต่อกับเครือข่ายส่วนตัวของคุณได้อย่างปลอดภัยผ่านเครือข่ายสาธารณะ เช่น อินเทอร์เน็ต

**หมายเหตุ:** อุปกรณ์ของคุณควรมีการกำหนดค่าสำหรับการเข้าถึงอินเทอร์เน็ตเอาไว้แล้ว หากคุณมีปัญหาในการเข้าถึงอินเทอร์เน็ต คุณจะต้องแก้ไขการเชื่อมต่อ หาก你不แน่ใจเกี่ยวกับขอมูลการเชื่อมต่อที่ควรป้อนให้สอบถามจากผู้ให้บริการของคุณ

## ตั้งค่าการเชื่อมต่อ VPN

1. ในโหมดอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า VPN > เพิ่ม VPN**
2. เลือกประเภท VPN
3. ปรับแต่งขอมูลการเชื่อมต่อ

**หมายเหตุ:** ตัวเลือกที่พร้อมใช้งานอาจแตกต่างกันตามประเภท VPN

- **ชื่อ VPN** - ป้อนชื่อของเซิร์ฟเวอร์ VPN
- **ตั้งค่าเซิร์ฟเวอร์ VPN** - ป้อน IP แอดเดรสของเซิร์ฟเวอร์ VPN
- **เปิดใช้งานการเข้ารหัส** - ตั้งค่าเพื่อเข้ารหัสเซิร์ฟเวอร์ VPN
- **ตั้งค่าคีย์ไขรวมล่วงหน้า IPSec** - ป้อนคีย์ preshared
- **เปิดใช้งาน L2TP ลับ** - ตั้งค่าเพื่อใช้รหัสผ่านลับ L2TP
- **ตั้งค่า L2TP ลับ** - ป้อนรหัสผ่านลับ L2TP
- **ตั้งค่าใบรับรองผู้ใช้** - เลือกใบรับรองผู้ใช้ที่เซิร์ฟเวอร์ VPN จะใช้ในการระบุตัวคุณ คุณสามารถอิมพอร์ตใบรับรองจากเซิร์ฟเวอร์ VPN หรือดาวน์โหลดจากเว็บ
- **ตั้งค่าใบรับรอง CA** - เลือกใบรับรอง Certificate Authority (CA) ที่เซิร์ฟเวอร์ VPN

จะใช้ในการระบุตัวคุณ คุณสามารถ  
อิมพอร์ตใบรับรองจากเซิร์ฟเวอร์  
VPN หรือดาวน์โหลดจากเว็บ

- โดเมนการค้นหา **DNS** - ป้อน  
แอดเดรสเซิร์ฟเวอร์ชื่อโดเมน (DNS)

4. เมื่อดำเนินการเสร็จเรียบร้อย ให้กด


 > **บันทึก**

**เชื่อมต่อกับเครือข่ายส่วนตัว**

1. ในโหมดรอร์รับสาย เปิดรายการ  
แอปพลิเคชันแล้วเลือก **ตั้งค่า >**  
**ตั้งค่าการเชื่อมต่อ > ตั้งค่า VPN**
2. เลือกเครือข่ายส่วนตัวที่จะเชื่อมต่อ
3. ป้อนชื่อผู้ใช้และรหัสผ่าน แล้วเลือก  
**เชื่อมต่อ**


## การโทร

### การโทรออก

1. แตะ  เพื่อเปิดเมนูพิมพ์
2. ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้แตะ 
3. แตะ  เพื่อโทรออก
4. ในการวางสาย ให้แตะไอคอนวางสาย 


**เคล็ดลับ! ในการป้อน “+” เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ 0+**

### การโทรออกโดยใช้รายชื่อ

1. แตะ  เพื่อเปิด รายชื่อ
2. เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **ค้นหา**
3. ในรายชื่อ ให้แตะรายชื่อที่คุณต้องการโทรออก

### การรับสายและการปฏิเสธสายเรียกเขา

เมื่อคุณได้รับสายเรียกเข้าในสถานะ **ลือค** ให้ลาก  ไปทางขวาเพื่อรับสายเรียกเข้า




ลากไอคอน  ไปทางซ้ายเพื่อปฏิเสธสายเรียกเขา  
ลากแถบ **ขอความช่วยเหลือ** จากด้านล่าง หากคุณต้องการส่ง


**เคล็ดลับ! ขอความช่วยเหลือ คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกรี้จะเป็นประโยชน์ในกรณีที่คุณต้องการตอบกลับข้อความในระหว่างการประชุม**

### การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์


### การใช้สายที่สอง

1. ในระหว่างการโทรสายแรก ให้แตะ **ปุ่มตัวเลข**  และหมุนหมายเลข นอกจากนี้คุณสามารถค้นหาได้โดยแตะ **รายชื่อ**  และเลือกหมายเลขที่คุณต้องการออก
2. แตะ  เพื่อโทรออก
3. สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทรสายสนทนาแรก จะลือคและพักสายไว้

4. แตะหมายเลขที่แสดงเพื่อสลับสลายหรือแตะที่  รวมสาย เพื่อทำการประชุมสาย
5. ในการวางสายที่ใช้ ให้แตะวางสาย หรือกดปุ่ม หนาหลัก และเลื่อนแถบการแจ้งลง และเลือก วางสาย

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

## การดูบันทึกการโทร


บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ บันทึกการโทร ดูรายการสายที่โทรออก ได้รับ ไม่ได้รับ และโทรด้วยเสียงทั้งหมด

### เคล็ดลับ!

- แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร
- กดปุ่ม เมนู จากนั้นแตะลบทั้งหมด เพื่อลบรายการที่บันทึกไว้ทั้งหมด

## ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ


1. บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน  เพื่อเปิดเมนูแอปพลิเคชัน
2. เลื่อนแล้วแตะ ตั้งค่า
3. แตะ ตั้งค่าการโทร และเลือกตัวเลือกที่คุณต้องการปรับ

## รายชื่อ



เพิ่มรายชื่อในโทรศัพท์และ  
ซิงโครไนซ์กับรายชื่อในแอคเคาท์  
Google หรือแอคเคาท์อื่นที่สนับสนุน  
การซิงโครไนซ์รายชื่อ

## การค้นหารายชื่อ

ในหน้าจอหลัก

1. แตะ  เพื่อเปิด รายชื่อ
2. แตะ **ค้นหา** และป้อนชื่อโดยใช้  
แป้นพิมพ์


## การเพิ่มรายชื่อใหม่

1. แตะ 
  - ป้อนหมายเลขของรายชื่อใหม่  
แล้วกดปุ่ม **เมนู** แตะ **แท็บ**  
**เพิ่มในรายชื่อ** และ  
**สร้างรายชื่อใหม่**
  - 2. หากคุณต้องการเพิ่มรูปภาพให้  
กับรายชื่อใหม่ ให้แตะพื้นที่ภาพ  
เลือกจาก **ถ่ายภาพ** หรือ  
**เลือกจากคลังภาพ**
  - 3. เลือกประเภทรายชื่อโดยแตะ 
  - 4. แตะชนิดของข้อมูลรายชื่อ และป้อน  
รายละเอียดเกี่ยวกับรายชื่อ
  - 5. แตะ **บันทึก**


## เพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ  
ไว้ในกลุ่มรายการโปรด

**การเพิ่มรายชื่อเป็นเพื่อนสนิท**



1. แตะ  เพื่อเปิด รายชื่อ
2. แตะที่รายชื่อเพื่อดูรายละเอียด
3. แตะดาวทางด้านขวาของชื่อ กรอบ  
ไอคอนดาวจะกลายเป็นสีขาว

**การลบรายชื่อออกจากรายชื่อ  
เพื่อนสนิท**

1. แตะ  เพื่อเปิด รายชื่อ
2. แตะที่แท็บ **กลุ่ม**  
เลือก **รายการโปรด**  
ที่ด้านบนสุดของรายการ แล้วเลือก  
รายชื่อที่ต้องการดูรายละเอียด
3. แตะที่กรอบดาวสีขาวทางด้านขวา  
ของชื่อ ดาวจะเปลี่ยนเป็นสีเทา  
และรายชื่อจะถูกลบออกจากรายชื่อ  
เพื่อนสนิท

## อิมพอร์ตหรือเอ็กซ์พอร์ต รายชื่อ

ในการอิมพอร์ต/  
เอ็กซ์พอร์ตไฟล์รายชื่อ (ในรูปแบบ  
vcf) จากหน่วยความจำที่จัดเก็บ  
(ที่เก็บข้อมูลภายใน/  
การ์ดหน่วยความจำ) หรือ SIM หรือ  
USIM การเข้าไปยังอุปกรณ์ของคุณหรือ  
ออกจากอุปกรณ์ของคุณ

- 1.แตะ  เพื่อเปิด รายชื่อ
- 2.กด  > **อื่นๆ** > **อิมพอร์ต/เอ็กซ์พอร์ต**
- 3.เลือกตัวเลือกที่ต้องการในการอิมพอร์ต/เอ็กซ์พอร์ต หากคุณมีมากกว่าหนึ่งแอคเคาท์ เลือกแอคเคาท์ที่คุณต้องการเพิ่มรายชื่อ
- 4.เลือกไฟล์รายชื่อเพื่ออิมพอร์ต/เอ็กซ์พอร์ต แล้วเลือก **ตกลง** เพื่อยืนยัน

## การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์ โดยใช้โปรแกรม PC Sync


- 1.ติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" บนคอมพิวเตอร์เรียกใช้โปรแกรมและเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2.จากด้านบนสุดของหน้าจอ เลือก **อุปกรณ์ > อิมพอร์ตข้อมูลส่วนตัว > อิมพอร์ตรายชื่อ**
- 3.จะมีป๊อปอัพสำหรับการเปิดไฟล์รายชื่อปรากฏขึ้น
- 4.เลือกไฟล์รายชื่อและคลิก **เปิด**
- 5.ป๊อปอัพสำหรับการอิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ ไปยังรายชื่อ

- ในอุปกรณ์จะปรากฏขึ้น
- 6.หากรายชื่อในอุปกรณ์และรายชื่อใหม่จากคอมพิวเตอร์ไม่เหมือนกัน ให้เลือกรายชื่อที่คุณต้องการอิมพอร์ตจากคอมพิวเตอร์
  - 7.คลิกปุ่ม [ตกลง] เพื่ออิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ลงในอุปกรณ์


## ข้อความ

โทรศัพท์ LG-P940  
ของคุณได้ผสมผสาน SMS และ MMS  
ไว้ในเมนูที่ใช้งานเพียงเมนูเดียว

## การส่งข้อความ

- แตะไอคอน  บนหน้าจอหลักและแตะ **ข้อความใหม่** เพื่อเปิดข้อความเปล่า
- ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิวด์ ถึง ขณะที่คุณป้อนรายชื่อ รายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะ ผู้รับที่แนะนำได้ คุณสามารถเพิ่มรายชื่อหลายรายการได้

**หมายเหตุ:** คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- แตะฟิวด์ป้อนข้อความ และเริ่มต้นเขียนข้อความ
- กดปุ่ม **เมนู**  เพื่อเปิดเมนูตัวเลือก เลือกรายชื่อ เพิ่มเรื่อง, แนบ, ส่ง และอื่นๆ
- แตะที่ **ส่ง** เพื่อส่งข้อความ
- หน้าจอจะเปิดขึ้น พร้อมมีชื่อ/หมายเลขผู้รับตามด้วยข้อความ การตอบกลับปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม

เรตข้อความจะถูกสร้างขึ้น


**คำเตือน:**การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

**คำเตือน:**หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

## กล่องเรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก



## การใช้สไลม์

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้สไลม์ เมื่อเขียนข้อความใหม่ ให้กดปุ่ม **เมนู**  แล้วเลือก **แทรกสไลม์**

## การเปลี่ยนการตั้งค่าข้อความ มีลติมีเดีย


การตั้งค่าข้อความของโทรศัพท์  
LG-P940 จะได้รับการกำหนดค่าไว้  
ล่วงหน้าแล้ว ดังนั้น

คุณสามารถส่งข้อความได้  
ทันที คุณสามารถเปลี่ยนการตั้งค่า  
โดยอิงตามความต้องการของคุณ

และไอคอน **ข้อความ**   
บนหน้าจอหลัก จากนั้นแตะปุ่ม **เมนู**   
และแตะ **ตั้งค่า**

# กล้องถ่ายรูป

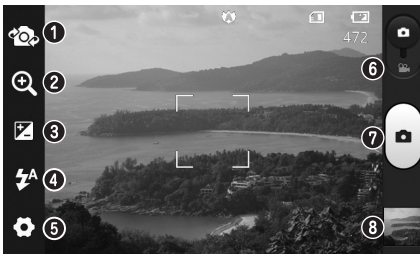

## ทำความรู้จักกับช่องมองภาพ





- 1 สลับเลนส์ - สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ขุม - ขุมเข้าหรือขุมออก หรือคุณสามารถใช้ปรับระดับเสียงด้านข้างได้
- 3 ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงที่เข้าในภาพ
- 4 แฟลช - ให้คุณเปิดแฟลชเมื่อถ่ายภาพในสภาพแวดล้อมที่มีด
- 5 ตั้งค่า -แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่าขั้นสูง
- 6 โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ
- 7 ถ่ายภาพ - บันทึกภาพถ่าย
- 8 คลังภาพ -แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูคลังภาพและดูภาพถ่ายที่บันทึกไว้ภายในโหมดกล้องถ่ายรูป

**หมายเหตุ:** ความจุของหน่วยความจำอาจแตกต่างกัน โดยขึ้นอยู่กับภาพที่ถ่ายหรือสภาพของการถ่าย



## การถ่ายภาพดวง

1. เปิดแอปพลิเคชัน กล้องถ่ายรูป  
คุณสามารถกดปุ่ม กล้องถ่ายรูป  ได้โดยตรง
2. ถู้อิทธิศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
3. แตะนิ้วของคุณบนเป้าหมายที่ปรากฏบนหน้าจอและช่องโฟกัสจะปรากฏขึ้น
4. เมื่อช่องโฟกัสเป็นสี่เหลี่ยม แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
5. แตะไอคอน ถ่ายภาพ  เพื่อบันทึกภาพถ่าย

## เมื่อคุณถ่ายภาพแล้ว

แตะ  เพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย  
 แตะ เมนู > แตะ แบ่งปัน  
 เพื่อแบ่งปันภาพถ่ายด้วย  
**SmartShare, บลูทูธ, อีเมล, Gmail, ข้อความ, Picasa, Social+**

**เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันรูปภาพของคุณกับชุมชน SNS ได้**


 แตะ เมนู > เพิ่มเติม > ตั้งเป็น แตะเพื่อใช้ภาพถ่ายเป็น ไอคอนรายชื่อ หรือ พื้นหลัง  
 แตะ เมนู > เพิ่มเติม > แก้ไข  
 แตะเพื่อแก้ไขภาพถ่าย


 แตะค้างไว้บนหน้าจอ และแตะ  ลม และยืนยันโดยการแตะ

 ยืนยันการลบ  
 แตะเพื่อไปยังหน้าจอลงของมองภาพ

## การใช้การตั้งค่าขั้นสูง


ในจอลงมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด


 - เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป


 แตะเมื่อใดก็ตามที่คุณต้องการทราบวาฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อกับคุณ

เปลี่ยนแปลงการตั้งค่ากล้องถ่ายรูปโดยการเลื่อนรายการ หลังจากเลือกตัวเลือกให้แตะปุ่ม กลับ

 A - โฟกัสเฉพาะจุด

 B - เลือกความละเอียดภาพ หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่า คุณสามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

 C - คนหาการตั้งค่าสีและแสงสว่างที่เหมาะสมกับสภาพแวดล้อมในปัจจุบัน เลือกจากอัตโนมัติ, ภาพบุคคล, ทิวทัศน์ และพระอาทิตย์ตก

 ISO - ISO กำหนดความไวของเซนเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อม

ล้อมที่มีดูในขณะที่คุณไม่สามารถใช้แฟลชได้

**WB** -

ปรับปรุ่คุณภาพสีในสภาพแสงต่างๆ

**☺** - ถ่ายภาพในเวลา 2-3 วินาทีหลังจากคลิกที่ชัตเตอร์ ตัวเลือกนี้เหมาะสมในกรณีที่ความต้องการถ่ายรูปตนเอง

**★** - เลือกโหมดชัตเตอร์ที่คุณต้องการ

**📷** - ช่วยให้คุณสามารถตรวจสอบภาพถ่ายหลังจากการบันทึกภาพได้

**📶** - เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการและแก้รูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แก้ไปยังบล็อกที่สนับสนุนแก้ตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่

**หมายเหตุ:** ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งาน GPS เท่านั้น


**ที่เก็บข้อมูล** - เลือกที่เก็บข้อมูลเพื่อจัดเก็บภาพ

**เคล็ดลับ!** เมื่อคุณออกจากกล้องการตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง ตัวตั้งเวลาและโหมดภาพ ตรวจสอบค่าเหล่านี้ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

**เคล็ดลับ!** เมนูการตั้งค่าซ้อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นดูตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า

# กล้องวิดีโอ

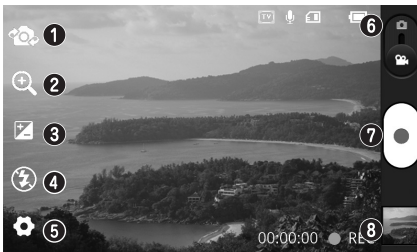


## ทำความรู้จักกับช่องมองภาพ



- ❶ สลับเลนส์ – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- ❷ ซูม – ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้
- ❸ ความสว่าง – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงที่เข้าในวิดีโอ
- ❹ แฟลช – ให้คุณเปิดแฟลชเมื่อบันทึกวิดีโอในสภาพแวดล้อมที่มืด
- ❺ ตั้งค่า –แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่าขั้นสูง
- ❻ โหมดกล้องถ่ายรูป – เลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป
- ❼ บันทึก – เริ่มการบันทึก
- ❽ คลังภาพ –แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูคลังภาพและดูวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ







**หมายเหตุ: ฟังก์ชันซูมจะใช้ไม่ได้เมื่อบันทึกวิดีโอ**

## การถ่ายวิดีโอ


1. เลื่อนปุ่มโหมด กล้องถ่ายรูป ลง และไอคอนจะเปลี่ยนเป็น 
2. ช่องมองภาพของกล้องวิดีโอ จะปรากฏขึ้นบนหน้าจอ
3. ถ้าวัดทิศทาง แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
4. กดปุ่มบันทึก  หนึ่งครั้งเพื่อเริ่มการบันทึก
5. REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
6. แตะที่  บนหน้าจอเพื่อหยุดการบันทึก


## หลังการถ่ายวิดีโอ


วิดีโอที่คุณบันทึกจะปรากฏขึ้นบนแกลเลอรี แตะ  เพื่อดูวิดีโอล่าสุดที่คุณบันทึก

-  แตะเพื่อเล่นวิดีโอ
-  แตะบนหน้าจอดูค้างไว้ และแตะเพื่อ แบ่งปัน วิดีโอด้วย SmartShare, บลูทูธ, อีเมล, Gmail, ข้อความ หรือ YouTube
-  แตะเพื่อไปยังหน้าจอช่องมองภาพ
-  แตะค้างไว้บนหน้าจอ ดู และแตะ  ลบ และยืนยันโดยการแตะ  ยืนยันการลบ

## การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด.

 - เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายวิดีโอ

 - แตะเมื่อคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อเกี่ยวกับคุณปรับการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนรายการ หลังจากเลือกตัวเลือกให้แตะปุ่ม **กลับ**

 - แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก

 -

ปรับปรุงคุณภาพสีในสภาพแสงต่างๆ

 - เลือก ปิดเสียง เพื่อบันทึกวิดีโอโดยไม่มีเสียง

 - รีวิวอัตโนมัติแสดงวิดีโอที่คุณบันทึกล่าสุดโดยอัตโนมัติ


 **ที่เก็บข้อมูล** - เลือกที่เก็บข้อมูลเพื่อบันทึกวิดีโอ

## การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือของหน้าจอ

## ยูทิลิตี้

### การตั้งเวลาการปลุก

1. แอปพลิเคชัน > ตั้งปลุก/นาฬิกา >  > การเตือนใหม่
2. ตั้งเวลา ระยะเวลาเลื่อน, สั่น, เสียงปลุก และ **Puzzle lock** แล้วพิมพ์ค่ากับเพื่อตั้งชื่อการปลุก และบันทึก
3. หลังจากที่บ้านที่ทำการปลุกแล้ว โทรศัพท์ LG-P940 จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก

### การใช้เครื่องคิดเลข

1. แอปพลิเคชัน > เครื่องคิดเลข
2. แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
3. สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
4. สำหรับการคำนวณที่ซับซ้อน กดปุ่มเมนู แตะที่ **พานอลขั้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ

### การเพิ่มเหตุการณ์ลงในปฏิทิน

1. แอปพลิเคชัน > ปฏิทิน
2. ในการตรวจสอบเหตุการณ์ ให้แตะวันที่ และปุ่ม **เมนู** หากต้องการเพิ่มเหตุการณ์ใหม่ แตะ **เหตุการณ์ใหม่**
3. แตะ **อะไร** แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น
4. แตะ **ที่ใด** แล้วป้อนสถานที่
5. หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย** แล้วป้อนรายละเอียด
6. ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **การทำซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น
7. แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

### การเปลี่ยนมุมมองปฏิทิน

1. แอปพลิเคชัน > ปฏิทิน
2. ที่ด้านบนของหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ เดือน นัดหมาย)

## Polaris Office

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ใหญ่ใช้ดูเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

### การจัดการไฟล์

Polaris Office ให้ผู้ใช้มือถือจัดการไฟล์ รวมถึงการคัดลอก การตัด และการวาง และลบไฟล์และโฟลเดอร์ได้อย่างสะดวกบนมือถือ







### การดูไฟล์

ผู้ใช้มือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือเมื่อดูเอกสารโดยใช้ Polaris Office ออบเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

## LG ON-SCREEN PHONE 2.0

LG On-Screen Phone 2.0 ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อลูทหรือ Wi-Fi คุณยังสามารถควบคุมโทรศัพท์จากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

### ไอคอน On-Screen Phone 2.0

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ หรือยกเลิกการเชื่อมต่อ
-  หน้าต่าง On-Screen Phone (ต้องใช้แอปพลิเคชันที่รองรับการหมุน)
-  เริ่มต้น LG Home Panorama หรือเปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

## คุณสมบัติ On-Screen Phone 2.0

- **การถ่ายโอนและการควบคุมแบบเรียลไทม์:** แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- **การควบคุมเมาส์:** ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอมพิวเตอร์
- **ป้อนข้อความด้วยแป้นพิมพ์:** ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์
- **ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์):** ส่งไฟล์จากโทรศัพท์ (เช่น คลังภาพ เครื่องเล่นวิดีโอ เพลง และ Polaris Office) ไปยังคอมพิวเตอร์ เพียงแค่คลิกขวาแล้วลากเพื่อส่งไฟล์ไปยังคอมพิวเตอร์
- **ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์):** ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง On-Screen Phone ไฟล์ที่คุณส่งจะถูกจัดเก็บไฟล์เดสก์ท็อป
- **การแจ้งเตือนเหตุการณ์แบบเรียลไทม์:** ป้อนข้อมูลเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความมาถึง ตลอดจนแจ้งเมื่อถึงเวลาปลุกและแจ้งเตือนเหตุการณ์

**• LG Home Panorama:**

จะแสดงพื้นที่ทำงานทั้งหมดของ LG Home คุณสามารถจัดเรียงไอคอน Widget ใต้ง่ายๆ และรันแอปพลิเคชันได้โดยดับเบิลคลิกข้อคัดัด

**หมายเหตุ: โปรดทราบว่า LG Home เป็น Launcher เริ่มต้น LG Home Panorama จะสนับสนุนการใช้งานเฉพาะบนหน้าหลัก LG Widget บางรายการจะไม่สามารถเริ่มทำงานได้**

## การติดตั้ง On-Screen Phone ในคอมพิวเตอร์

1. เยี่ยมชมหน้าหลัก LG ([www.lg.com](http://www.lg.com)) และเลือกประเทศที่คุณต้องการ
2. ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P940) > คลิก OSP ( On-Screen Phone ) เพื่อดาวน์โหลด จากนั้นคุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

## การเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์

On-Screen Phone 2.0

จะมีการเชื่อมต่อ USB, บลูทูธ และ Wi-Fi

โปรดปฏิบัติตามคำแนะนำบนวีซาร์ด การเชื่อมต่อของโปรแกรม OSP

**หมายเหตุ:**

- โปรดตรวจสอบให้แน่ใจว่าคุณเลือกกล่องทำเครื่องหมาย On-Screen Phone ใน ตั้งค่า > การเชื่อมต่อ > On-Screen Phone
- โปรดทราบว่าแบตเตอรี่อาจหมดเร็วขึ้นเนื่องจากการใช้กระแสไฟหากเชื่อมต่อ On-Screen Phone ผ่าน Wi-Fi
- เมื่อคุณเชื่อมต่อโทรศัพท์มือถือของคุณกับคอมพิวเตอร์ด้วยฮอตสปอตเคลื่อนที่ และใช้อินเทอร์เน็ตบนคอมพิวเตอร์ อุปกรณ์จะสลับเป็นเครือข่าย 3G โดยอัตโนมัติ และอาจมีค่าใช้จ่ายในการถ่ายโอนข้อมูลเพิ่มเติมโดยขึ้นอยู่กับแผนข้อมูลของคุณ

- การเชื่อมต่อไร้สายผ่าน Wi-Fi อาจไม่สามารถใช้งานได้สมบูรณ์ โดยขึ้นอยู่กับข้อกำหนดหรือสถานะของเครือข่ายของคุณ
- การซุ่มหน้าจอลิโพรศพ์ท้อาจทำให้โทรศัพท์ช้าลง

### การเชื่อมต่อ USB:

1. เปิดแอปพลิเคชัน On-Screen Phone คลิกริขารดการเชื่อมต่อ และเลือก "การเชื่อมต่อผ่านสายเคเบิล USB" และคลิก "ถัดไป"
2. เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB แล้วคลิก "ถัดไป"
3. ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" รหัสผ่านเริ่มต้นคือ "0000" คุณสามารถเปลี่ยนรหัสผ่านใน **ตั้งค่า > เชื่อมต่อ > เปลี่ยนรหัสผ่าน**
4. คลิก "ตกลง" เพื่อออกจากหน้าต่าง

### การเชื่อมต่อไร้สายด้วยบลูทูธ:


1. ในโทรศัพท์ ให้ไปที่ **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่าบลูทูธ** เลือกบลูทูธเพื่อเปิดและเลือก **ค้นหา**
2. หากเคยเชื่อมต่อโดยใช้สายเคเบิลมาก่อนหน้านี้ ให้ริขารดการเชื่อมต่อใหม่เพื่อสร้างการเชื่อมต่อใหม่

3. ริขารดการเชื่อมต่อในคอมพิวเตอร์ โดยเลือก "การเชื่อมต่อบลูทูธ" แล้วเลือก "ถัดไป"
4. ริขารดจะเริ่มต้นค้นหาโทรศัพท์ที่จับคู่ เมื่อโทรศัพท์ที่คุณต้องการเชื่อมต่อปรากฏขึ้น ให้คลิก "หยุด" เพื่อหยุดการค้นหา
5. เลือก "**LG-P940**" จากรายการอุปกรณ์ แล้วคลิก "ถัดไป" คุณสามารถเปลี่ยนชื่ออุปกรณ์หากต้องการ
6. ป้อนรหัส PIN (เช่น "0000") แล้วคลิก "ถัดไป"
7. ที่โทรศัพท์ ให้ตอบรับคำขอ จากนั้นป้อนรหัส PIN รหัสเดียวกันแล้วแตะ "ตกลง"
8. ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" (รหัสผ่านเริ่มต้นคือ "0000")
9. แตะ "ตกลง" เพื่อออก

### การตรวจสอบการเชื่อมต่อ On-Screen Phone

เมื่อเชื่อมต่ออุปกรณ์แล้ว ให้ลากแถบสถานะที่ด้านบนของหน้าจอลิโพรศพ์ท้อมาเพื่อตรวจสอบสถานะการเชื่อมต่อ On-Screen Phone

## การยกเลิกการเชื่อมต่อ โทรศัพท์กับคอมพิวเตอร์

คลิก  ที่ด้านบนซ้ายของหน้าต่าง On-Screen Phone หรืออีกวิธีหนึ่งคือ ให้ลากแถบการแจ้งเตือนที่ด้านบนของหน้าจอหลักลงมา แล้วเลือก "เชื่อมต่อ On-Screen Phone" เลือกเมนู "Disconnect On-Screen Phone" และแตะ "ยกเลิกการเชื่อมต่อ" ในกล่องโต้ตอบยกเลิกการเชื่อมต่อ

## ตั้งค่า

ในหน้าจอหลัก และแท็บ  
แอปพลิเคชัน  แล่งเลื่อนและ  
แตะ ตั้งค่า

## ตั้งค่าการเชื่อมต่อ

ในหน้าจอนี้ คุณสามารถจัดการ Wi-Fi  
และบลูทูธ คุณยังสามารถตั้งค่าเครือข่าย  
โทรศัพท์เคลื่อนที่ และสลับไปยังโหมด  
เครื่องบินได้ด้วย

**โหมดเครื่องบิน** – หลังจากสลับไปยัง  
โหมดเครื่องบิน การเชื่อมต่อเครือข่าย  
ทั้งหมดจะใช้งานไม่ได้

**Wi-Fi** – เปิด Wi-Fi

เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

**ตั้งค่า Wi-Fi** – ให้คุณสามารถ

ตั้งค่าและจัดการจุดเชื่อมต่อ

ไร้สาย ตั้งค่าการแจ้งเตือนเครือข่าย

หรือเพิ่มเครือข่าย Wi-Fi หน้าจอตั้งค่า

Wi-Fi ชั้นสูงจะเขาใช้จากหน้าจอตั้งค่า

Wi-Fi กดปุ่ม **เมนู** และแตะ **ชั้นสูง**

**ตั้งค่า Wi-Fi Direct** – เลือก

กล่องทำเครื่องหมายเพื่อเปิดใช้

งาน Wi-Fi Direct ตั้งชื่อ Wi-Fi Direct

และสแกนหาอุปกรณ์อื่นๆ

**เคล็ดลับ! การดู MAC แอดเดรส**  
ในการเชื่อมต่อกับเครือข่ายไร้  
สายบางเครือข่ายด้วยพีลเตอร์  
**MAC** คุณจำเป็นต้องป้อน **MAC**  
**แอดเดรสของ LG-P940**  
ลงในเราเตอร์  
คุณสามารถค้นหา **MAC**  
**แอดเดรส**ได้ในเมนูสำหรับผู้ใช้  
ต่อไปนี้: **แตะ** แอปพลิเคชัน >  
**ตั้งค่า** > **ตั้งค่าการเชื่อมต่อ** >  
**ตั้งค่า Wi-Fi** และกดปุ่ม **เมนู**  
แล้วเลือก **ชั้นสูง** > **MAC แอดเดรส**

- **บลูทูธ** – เปิดหรือปิดคุณสมบัติไร้  
สายบลูทูธ
  - ▶ ดูที่หน้า 40
- **การตั้งค่าบลูทูธ**
  - **ชื่ออุปกรณ์:** ตั้งชื่อบลูทูธสำหรับ  
อุปกรณ์ของคุณ
  - **ค้นหาได้:** ตั้งค่าให้อุปกรณ์บลูทูธ  
อื่นๆสามารถมองเห็นอุปกรณ์  
ของคุณได้
  - **ค้นหาอุปกรณ์:** ตั้งค่าให้อุปกรณ์  
บลูทูธอื่นๆ  
สามารถมองเห็นอุปกรณ์ของคุณได้

**หมายเหตุ:**

กดเมนูเพื่อเปลี่ยนแปลงการ  
ตั้งค่าการโอนรายชื่อ

- ส่งเป็นไฟล์เดียว:  
ส่งรายชื่อในรูปแบบ **nested vCard** การดำเนินการนี้อาจลดเวลาในการโอนรายชื่อได้ แต่อุปกรณ์รุ่นเก่าจะไม่สามารถรับรายชื่อใหม่ได้ในกรณีนี้ในการรับรายชื่อ
- ส่งแยกต่างหาก:  
ส่งแต่ละรายชื่อเป็น **vCard** เดียว เมื่ออุปกรณ์รุ่นเก่าไม่สามารถรับรายชื่อทั้งหมดได้ ให้เลือกตัวเลือกรับรายชื่อ

**Portable hotspot** – คุณสามารถกำหนดค่าการตั้งค่าฮอตสปอต Wi-Fi เคลื่อนที่ได้

**ตั้งค่า VPN** – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

**NFC** – เปิด NFC เพื่ออ่านและแลกเปลี่ยนแท็ก

**เครือข่ายโทรศัพท์เคลื่อนที่** – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

## ตั้งค่าการโทร

< **กำหนดเบอร์โทรออก** >

เลือก **กำหนดเบอร์โทรออก** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

< **ข้อความเสียง** >

**บริการข้อความเสียง** – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ **ตั้งค่าข้อความเสียง** – หากผู้ใช้บริการข้อความเสียงของผู้ให้บริการตัวเลือกนี้จะให้คุณเปลี่ยนหมายเลขโทรศัพท์ที่รับฟังและจัดการข้อความเสียงของคุณ

< **ตั้งค่าการโทรอื่นๆ** >

**ปฏิเสธการรับสาย** – ตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจาก **ปิด**, **ปฏิเสธรายการ** หรือ **ปฏิเสธทุกสายการส่งต่อสาย**  
– เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อไม่มีสัญญาณ

**เพิ่มการตั้งค่า** – ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

- **ข้อมูลผู้โทร:** เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่
- **สายเรียกซ้อน:**

หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังสนทนากับอีกสายหนึ่งอยู่ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

**ป้องกันการโทร** – เลือกเมื่อ

คุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

**ค่าโทร** – ดูค่าใช้จ่ายการโทรของคุณ บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการบางรายไม่รองรับฟังก์ชันนี้

**เวลาโทร** – ระยะเวลาการโทรทั้งหมดได้แก่ ทุกสาย สายโทรออก สายที่ได้รับ และการโทรครั้งล่าสุด

**ขอความช่วยเหลือ** –

เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

## เสียง

**< ทัวไป >**

**โหมดเงียบ** – ให้คุณปิดเสียงทั้งหมด (รวมถึงเสียงเรียกเข้าของการโทรและการแจ้ง) ยกเว้นเสียงจากเพลง วิดีโอ และการปลุกที่ตั้งไว้ คุณสามารถปิดเสียงมีเดียและการปลุกได้ในตัวแอปพลิเคชันเอง

**สั้น** – ให้คุณตั้งค่าให้โทรศัพท์สั้นเมื่อคุณได้รับสายเรียกเข้า

**ระดับเสียง** – ให้คุณตั้งระดับเสียงสำหรับเสียงเรียกเข้า มีเดียและการปลุก หากคุณไม่ได้เลือกตัวเลือก "ใช้ระดับเสียงสายเรียกเข้าสำหรับการแจ้งเตือน" คุณสามารถตั้งระดับเสียงสายเรียกเข้าและการแจ้งแยกกันได้

**< สายเรียกเข้า >**

**เสียงเรียกเข้าโทรศัพท์** – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

**< การแจ้ง >**

**เสียงเรียกเข้าของการแจ้ง** – ให้คุณตั้งค่าเสียงการแจ้งเริ่มต้นของคุณ

**< การตอบรับ >**

**เสียงสัมผัส** – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อไข่มุกตัวเลขเพื่อหมนหมายเลข

**การเลือกเสียง** – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบ

สนองการสัมผัส  
**เสียงล็อคหน้าจอ** - ให้คุณตั้งค่าให้  
 โทรศัพท์เล่นเสียงเมื่อล็อคและ  
 ปลดล็อคหน้าจอ  
**การตอบสนองการสัมผัส** - ให้คุณตั้งค่า  
 ให้โทรศัพท์สัมผัสเล็กน้อยเมื่อคุณแตะปุ่ม  
 เลือกต่างๆ และเมื่อมีการตอบสนอง  
 บางอย่างบน UI

## หน้าจอ

**ความสว่าง** -  
 ปรับความสว่างของหน้าจอ  
**หมุนจออัตโนมัติ** - ตั้งค่าเพื่อสลับ  
 การวางแนวโดยอัตโนมัติเมื่อคุณ  
 หมุนโทรศัพท์  
**แอนิเมชัน** - ตั้งค่าเพื่อแสดงแอนิเมชัน  
**ใหม่เอาต์หน้าจอ** - ตั้งค่าเวลาใหม่  
 เอาต์หน้าจอ  
**แสดงแบบอักษร** -  
 เปลี่ยนแบบอักษรที่แสดง

## ท่าทางการเคลื่อนไหว

ปรับการตั้งค่าการเคลื่อนไหวสำหรับ  
 หน้าจอหลัก, สายเรียกเข้า, การปลุก  
 หรือเครื่องเล่นวิดีโอ  
**จัดเรียงไอเท็ม** -  
 หากคุณเลือกตัวเลือกนี้ คุณจะสามาร  
 เปลี่ยนตำแหน่งรายการไปยังหน้าจอ  
 หลักอื่นได้ โดยการแตะรายการค้างไว้  
 และเอียงอุปกรณ์

**ปิดเสียง** - เลือกตัวเลือกนี้เพื่อปิด  
 เสียงสายเรียกเข้าโดยการคว้า  
 โทรศัพท์ลงขณะที่เสียงสายเรียก  
 เขากำลังดัง  
**เลื่อน (หยุด)** - เลือกตัวเลือกนี้เพื่อ  
 เลื่อน (หยุด) การปลุกโดยคว้าเครื่องลง  
**หยุดพัก** - เลือกตัวเลือกนี้เพื่อหยุด  
 ฟังวิดีโอโดยการคว้าโทรศัพท์ลง

## พิกัดและการป้องกัน

< ตำแหน่งของฉัน >  
**ใช้เครือข่ายไร้สาย** - หากคุณเลือก  
**ใช้เครือข่ายไร้สาย** โทรศัพท์จะ  
 กำหนดตำแหน่งโดยประมาณจาก  
 การใช้เครือข่าย Wi-Fi และโทรศัพท์  
 เคลื่อนที่ เมื่อคุณเลือกตัวเลือกนี้  
 คุณจะได้รับแจ้งว่าจะยินยอมให้ Google  
 ใช้ตำแหน่งของคุณเมื่อให้บริการเหลา  
 นี้หรือไม่  
**ใช้ดาวเทียม GPS** - หากคุณเลือก  
**ใช้ดาวเทียม GPS** โทรศัพท์จะกำหนด  
 ตำแหน่งด้วยความแม่นยำระดับถนน  
 < ปลดล็อคหน้าจอ >  
**ตั้งคาล็อคหน้าจอ** - ตั้งค่าแบบ  
 ปลดล็อคเพื่อป้องกันโทรศัพท์  
 เปิดชุดหน้าจอที่แนะนำคุณในการวาด  
 แบบปลดล็อคหน้าจอ คุณสามารถตั้ง  
**PIN** หรือ **รหัสผ่าน** แทน **รูปแบบ**  
 หรือ **วงไวเป็น** **ไม่มี** **ได้**  
 เมื่อคุณเปิดโทรศัพท์หรือเรียกหน้าจอ

คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

### < ล็อคซิมการ์ด >

**ตั้งค่าล็อคซิมการ์ด** – ตั้งค่าล็อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

### < รหัสผ่าน >

**รหัสผ่านที่มองเห็นได้** – เลือกให้แสดงรหัสผ่านเมื่อคุณพิมพ์ หรือยกเลิกการเลือกให้ซ่อนรหัสผ่านเมื่อคุณพิมพ์

### < การจัดการอุปกรณ์ >

**เลือกตัวช่วยอุปกรณ์** – เพิ่มหรือลบตัวช่วย

### < พื้นที่จัดเก็บรหัสเฉพาะ >

**ใช้รหัสเฉพาะรักษาความปลอดภัย**  
– ให้คุณเข้าถึงใบรับรองความปลอดภัย  
**ติดตั้งจากการ์ด SD** – เลือกติดตั้งใบรับรองที่เข้ารหัสจากการ์ด SD  
**ตั้งค่ารหัสผ่าน** – ตั้งค่าหรือเปลี่ยนรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะ  
**ลบพื้นที่จัดเก็บ** – ลบรหัสเฉพาะของเนื้อหาทั้งหมด และรีเซ็ตรหัสผ่าน

## แอปพลิเคชัน

คุณสามารถดูและจัดการแอปพลิเคชันได้ **แหล่งที่มาที่โมร็อกโก** – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจากตลาด

**คำเตือน** โทรศัพท์มือถืออาจทำงานผิดปกติ และอาจถูกนำไปใช้อย่างผิดกฎหมายในการกำหนดตำแหน่งของคุณ และเข้าถึงข้อมูลส่วนตัวผ่านอินเทอร์เน็ต ทั้งนี้ขึ้นอยู่กับแอปพลิเคชันที่คุณติดตั้งเพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น

**จัดการแอปพลิเคชัน** – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว  
**บริการที่กำลังรัน** – ตรวจสอบบริการที่กำลังรันอยู่ในปัจจุบัน  
**การใช้ที่เก็บข้อมูล** – ดูที่เก็บข้อมูลที่แอปพลิเคชันใช้  
**อัตราการใช้แบตเตอรี่** – ดูการใช้แบตเตอรี่  
**การพัฒนา** – ตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน

## แอคเคาท์และการซิงค์

**< ตั้งค่าการซิงค์ทั่วไป >**  
**ข้อมูลแบ็คกราวด์** – อนุญาตให้แอปพลิเคชันซิงค์โครในข้อมูลในแบ็คกราวด์ ไม่ว่าคุณกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

**ซิงค์อัตโนมัติ** – อนุญาตให้แอปพลิเคชันซิงค์โครโนลจิสต์ ส่ง และรับข้อมูลตามกำหนดเวลาของตนเองได้

**< ตั้งค่าอัปเดต Social+ >**

**ตั้งค่า Social+** – อนุญาตให้ทำการตั้งค่าสภาพแวดล้อมของ Widget เครื่องขายสังคัมที่เหมาะสมที่สุด

**< จัดการแอคเคาท์ >**

แสดงแอคเคาท์ Google ทั้งหมดและแอคเคาท์อื่นๆ ที่คุณเพิ่มในโทรศัพท์ หากคุณแฉะแอคเคาท์ในหน้าจอนี้ หน้าจอตั้งค่าการซิงค์แอคเคาท์จะเปิด

## ความเป็นส่วนตัว

เปลี่ยนการตั้งค่าสำหรับการจัดการการตั้งค่าและข้อมูลของคุณ

- **สำรองข้อมูลของฉัน:** เลือกเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google
- **เรียกคืนอัตโนมัติ:** ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณ เมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ
- **รีเซ็ตข้อมูลจากโรงงาน:** รีเซ็ตการตั้งค่าของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น

## Android ครั้งแรก

**หมายเหตุ:**

- หากคุณเลือก รีเซ็ตข้อมูลจากโรงงาน จะเป็นการลบข้อมูลส่วนตัวทั้งหมดออกจากหน่วยความจำระบบของโทรศัพท์ รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google, แอคเคาท์อื่นๆ, ข้อมูลและการตั้งค่าระบบ/แอปพลิเคชัน ตลอดจนแอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM
- การรีเซ็ตโทรศัพท์จะไม่เป็นการลบการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลด รวมถึงไฟล์ที่อยู่ในการ์ด microSD ของคุณหรือหน่วยความจำภายใน เช่น เพลงหรือภาพถ่าย ดังนั้น หากคุณต้องการลบข้อมูลทั้งหมดบนหน่วยความจำภายในโดยไม่ต้องรีเซ็ตโทรศัพท์ ให้เลือกกล่องทำเครื่องหมายลบหน่วยความจำภายใน

## ที่เก็บ

ตรวจสอบข้อมูลหน่วยความจำของการค้นหาหน่วยความจำและอุปกรณ์ของคุณ และฟอร์แมตหน่วยความจำภายนอกหรือภายใน.

คุณสามารถยกเลิกการเชื่อมต่อการ์ดหน่วยความจำ (การ์ด SD) เพื่อลบหรือฟอร์แมตอย่างปลอดภัย

## ภาษาและคีย์บอร์ด

ใช้การตั้งค่า ภาษาและคีย์บอร์ด เพื่อเลือกภาษาสำหรับข้อความในโทรศัพท์ และสำหรับการกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

## อินพุตและเอาต์พุตเสียง

ตั้งค่าจุดจำเสียงและใช้ตั้งค่า Text-to-speech เพื่อกำหนดคำตัวสังเคราะห์แปลงข้อความเป็นเสียงพูดของ Android เพื่อให้แอปพลิเคชันสามารถใช้ประโยชน์ได้

### < การป้อนด้วยเสียง >

**ตั้งค่าจุดจำเสียง** – ใช้ตั้งค่าจุดจำเสียง เพื่อกำหนดค่าคุณสมบัตการป้อนด้วยเสียง Android

- **ภาษา:** เปิดหน้าต่างซึ่งคุณสามารถกำหนดภาษาที่ใช้ในการป้อนข้อความด้วยเสียง
- **SafeSearch:** เปิดกล่องโต้ตอบ

ซึ่งคุณสามารถกำหนดว่าคุณต้องการให้ฟิลเตอร์ Google SafeSearch บล็อกผลการค้นหาบางชนิดหรือไม่

### • **บล็อกคำที่ไม่เหมาะสม:**

เมื่อไม่ได้เลือกไว้

ระบบความจำเสียงของ Google จะจดจำและบันทึกคำต่างๆ ที่คนส่วนใหญ่คิดว่าเป็นคำที่ไม่เหมาะสมไว้ เมื่อคุณป้อนข้อความด้วยเสียง แต่ถาเลือกตัวเลือกนี้ไว้

ระบบความจำเสียงของ Google จะแทนที่คำเหล่านั้นในบันทึกด้วยตัวเว้นว่างที่มีเครื่องหมายดาว ( \* )

### < เอาต์พุตเสียง >

**ตั้งค่า Text-to-speech** – ใช้ **ตั้งค่า Text-to-speech** เพื่อกำหนดค่าตัวสังเคราะห์ Text-to-speech ของ Android สำหรับแอปพลิเคชันที่สามารถใช้งานคุณสมบัตินี้ได้

**หมายเหตุ:** หากคุณไม่ได้ติดตั้ง **ข้อมูลตัวสังเคราะห์เสียงพูด** จะมีเฉพาะการตั้งค่าติดตั้ง **ข้อมูลเสียง** เท่านั้น

- **ฟังตัวอย่าง:** เล่นเสียงตัวอย่างสั้นๆ ของตัวสังเคราะห์เสียงพูดโดยใช้การตั้งค่าในปัจจุบันของคุณ
- **ใช้การตั้งค่าของฉันเสมอ:** เลือกตัวเลือกนี้เพื่อใช้การตั้งค่าบนหน้าจอนี้แทนการตั้งค่าตัวสังเคราะห์เสียงพูดที่มีอยู่ในแอปพลิเคชันอื่นๆ

- **Default engine:** เปิดกล่องโต้ตอบซึ่งคุณสามารถตั้งค่าแอปพลิเคชัน Text-to-speech ที่ต้องการเลือกใช้ กรณีที่มีแอปพลิเคชันติดตั้งไว้มากกว่าหนึ่งแอปพลิเคชัน
- **ติดตั้งข้อมูลเสียง:** หากโทรศัพท์ของคุณไม่มีข้อมูลตัวสังเคราะห์เสียงพูดติดตั้งอยู่ ตัวเลือกนี้จะทำการเชื่อมต่อกับ Android Market และให้คำแนะนำในขั้นตอนการดาวน์โหลดและติดตั้งข้อมูลดังกล่าวแก่คุณ ตัวเลือกนี้จะไม่ทำงาน หากมีข้อมูลติดตั้งไว้อยู่แล้ว
- **อัตราการพูด:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกอัตราความเร็วในการพูดของตัวสังเคราะห์เสียง
- **ภาษา:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกภาษาของข้อความที่คุณต้องการให้ตัวสังเคราะห์เสียงอ่าน ตัวเลือกนี้มีประโยชน์เป็นอย่างยิ่งเมื่อใช้ควบคู่กับ **ใช้การตั้งค่าของเงินเสมอ** ซึ่งจะช่วยให้แน่ใจได้ว่าข้อความในแอปพลิเคชันต่างๆ ได้รับการอ่านอย่างถูกต้อง
- **Pico TTS:** กำหนดค่าการตั้งค่า Pico TTS

## การช่วยสำหรับการเข้าถึง

ใช้การตั้งค่า

**การช่วยสำหรับการเข้าถึง** เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

**หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติม**

## เชื่อมต่อ

< โหมดการเชื่อมต่อ USB >

**โหมดการเชื่อมต่อเริ่มต้น** - คุณสามารถตั้งค่าโหมดที่ต้องการ (ชาร์จเท่านั้น, ที่เก็บข้อมูล, ชอพด์แวร์คอมพิวเตอร์ และการปล่อยสัญญาณผ่าน USB) **ถ้ามเสมอ** - เลือกตัวเลือกนี้เพื่อเลือกโหมดการเชื่อมต่อ USB ทุกครั้งที่คุณเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์

< ตั้งค่า On-Screen Phone >

**On-Screen Phone** -

เลือกตัวเลือกนี้เพื่อใช้งาน On-Screen Phone ดู On-Screen Phone บนหน้า 63

**Disconnect On-Screen Phone**

- เลือกเพื่อยกเลิกการเชื่อมต่อ On-Screen Phone

**เปลี่ยนรหัสผ่าน** - เลือกเพื่อเปลี่ยนแปลงรหัสผ่าน On-Screen Phone

## <LG PC Suite(คอมพิวเตอร์)>

การเชื่อมต่อ Wi-Fi -

เลือกตัวเลือกนี้เพื่อใช้ **LG PC Suite(คอมพิวเตอร์)** ด้วยการเชื่อมต่อ Wi-Fi

โปรดอย่าลืมว่าควรมีการเชื่อมต่อเครือข่าย Wi-Fi สำหรับ LG PC Suite(คอมพิวเตอร์) ด้วยการเชื่อมต่อ Wi-Fi ใน การตั้งค่าการเชื่อมต่อ

## วันที่และเวลา

ใช้การตั้งค่าวันที่และเวลา เพื่อตั้งค่าวิธีการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ได้

## เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

## ซอฟต์แวร์คอมพิวเตอร์ (LG PC SUITE)

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ผ่านการเชื่อมต่อ USB หรือ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

### ด้วยแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคมาโรค) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาที่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์อื่น

คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาวิธีการใช้งานแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" ของคุณได้

### การติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite"

คุณสามารถดาวน์โหลดแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" ได้จากเว็บเพจของ LG

- ไปที่ [www.lg.com](http://www.lg.com) และเลือกประเทศที่คุณต้องการ
- ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P940)
- คลิก **PC Sync** จาก **ดาวน์โหลด** และคลิก **ดาวน์โหลด WINDOW PC Sync Download** เพื่อดาวน์โหลดแอปพลิเคชันคอมพิวเตอร์ **LG PC Suite**

### ข้อกำหนดของระบบสำหรับแอปพลิเคชันคอมพิวเตอร์ LG PC Suite

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต, Windows 7 32 บิต/64 บิต

- CPU; โพรเซสเซอร์ 1GHz หรือสูงกว่า หน่วยความจำ: 512MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG


### หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

- ไดรเวอร์ USB ในตัวของ LG จำเป็นสำหรับอุปกรณ์ LG และคอมพิวเตอร์ ซึ่งจะติดตั้งโดยอัตโนมัติเมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

## การเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถเชื่อมต่ออุปกรณ์โดยใช้สาย USB หรือ Wi-Fi ได้

## วิธีการเชื่อมต่ออุปกรณ์ด้วยสายเคเบิล USB

1. คลิก  ที่ด้านบนสุดของหน้าจอ
2. ส่วนที่เก็บข้อมูลอุปกรณ์จะถูกสร้างขึ้นในส่วนไลบรารีบริเวณด้านซ้ายของหน้าจอ และอุปกรณ์จะถูกเชื่อมต่อ

**หมายเหตุ:**  
เมื่อคุณเลือกโหมดการเชื่อมต่อจากอุปกรณ์ เลือก 'ซอฟต์แวร์คอมพิวเตอร์' เพื่อเชื่อมต่อ

## วิธีการสร้างการเชื่อมต่อไร้สายด้วย Wi-Fi


การเชื่อมต่อ Wi-Fi สำหรับอุปกรณ์ การเชื่อมต่ออินเทอร์เน็ตสำหรับคอมพิวเตอร์ด้วยเราเตอร์ไร้สายตัวเดียวกัน:

- การกำหนดค่าอุปกรณ์
  1. จากอุปกรณ์ของคุณ เลือก ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi และเปิดใช้งาน Wi-Fi
  2. จากรายการเครือข่าย Wi-Fi ที่ค้นหา ให้เลือกเครือข่ายที่จะเชื่อมต่อ
  3. คุณอาจต้องป้อนรหัสผ่านหากเครือข่ายมีการรักษาความปลอดภัย
  4. จากอุปกรณ์ของคุณ เลือก ตั้งค่า > การเชื่อมต่อ > เปิดใช้งานการเชื่อมต่อ Wi-Fi

- การกำหนดค่าคอมพิวเตอร์
  1. ไปที่ **การกำหนดค่าเครือข่าย**
  2. ตรวจสอบให้แน่ใจว่าคอมพิวเตอร์เชื่อมต่อกับเครือข่ายเดียวกันกับที่เชื่อมต่อกับอุปกรณ์

การเชื่อมต่อ Wi-Fi สำหรับทั้งอุปกรณ์และคอมพิวเตอร์ ด้วยเราเตอร์ไร้สายเดียวกัน:
- การกำหนดค่าอุปกรณ์
  1. จากอุปกรณ์ของคุณ เลือก ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi และเปิดใช้งาน Wi-Fi
  2. จากรายการเครือข่าย Wi-Fi ที่ค้นหา ให้เลือกเครือข่ายที่จะเชื่อมต่อ
  3. คุณอาจต้องป้อนรหัสผ่านหากเครือข่ายมีการรักษาความปลอดภัย
  4. จากอุปกรณ์ของคุณ เลือก ตั้งค่า > การเชื่อมต่อ > เปิดใช้งานการเชื่อมต่อ Wi-Fi
- การกำหนดค่าคอมพิวเตอร์
  1. ไปที่ **การกำหนดค่าเครือข่าย**
  2. ตรวจสอบให้แน่ใจว่าคอมพิวเตอร์เชื่อมต่อกับเครือข่ายเดียวกันกับที่เชื่อมต่อกับอุปกรณ์

วิธีการเชื่อมต่อกับฮอตสปอต:

- การกำหนดค่าอุปกรณ์
    1. เลือก ตั้งค่า > ตั้งค่าการเชื่อมต่อ > Portable hotspot > เปิดใช้งาน Portable Wi-Fi hotspot เพื่อกำหนดค่าฮอตสปอต Wi-Fi
    2. จาก Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot จุดข้อมูล SSID ของเครือข่ายไว้
  - การกำหนดค่าคอมพิวเตอร์
    1. ไปที่ **การกำหนดค่าเครือข่าย**
    2. ค้นหาเครือข่ายเดียวกันกับที่เชื่อมต่อกับอุปกรณ์จากรายการเครือข่าย และเลือกเครือข่ายที่จะเชื่อมต่อ
- โปรดอ่านด้านบนและปฏิบัติตามขั้นตอนด้านล่าง**
1. คลิก  ที่ด้านบนสุดของหน้าจอ
  2. แล้วเลือกการเชื่อมต่อ Wi-Fi
  3. โปรดปฏิบัติตามคำแนะนำในวิซาร์ดการเชื่อมต่อ
  4. ส่วนที่เก็บข้อมูลอุปกรณ์จะถูกสร้างขึ้นในส่วนไลบรารีบริเวณด้านซ้ายของหน้าจอ และอุปกรณ์จะถูกเชื่อมต่อ

- หากคุณไม่สามารถค้นหาอุปกรณ์ที่จะเชื่อมต่อได้จากอุปกรณ์ให้เลือก ตั้งค่า > การเชื่อมต่อ > เปิดใช้การเชื่อมต่อ Wi-Fi และคลิกกล่องใหม่ในคอมพิวเตอร์
- คุณอาจพบกับการเชื่อมต่อ Wi-Fi ที่ไม่ดี ทั้งนี้ขึ้นอยู่กับข้อกำหนดค่าเครือข่ายและสถานะของเครือข่าย
- หากคุณเชื่อมต่ออุปกรณ์และคอมพิวเตอร์ด้วยสล็อตสปีดและใช้อินเทอร์เน็ตบนคอมพิวเตอร์คุณอาจเสียค่าใช้จ่ายในการเชื่อมต่อกับสล็อตสปีดตามแผนการชำระเงินของคุณ
- แบตเตอรี่อุปกรณ์ของคุณอาจหมดอย่างรวดเร็วหากคุณใช้งาน Wi-Fi

## การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์

ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยซอฟต์แวร์ "LG PC Suite" เพื่อความสะดวกของคุณ เพื่อความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ และบุคคารถได้ด้วย ขั้นตอนจะมีดังต่อไปนี้:

1. เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
2. หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
3. คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
4. ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

## การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

1. ติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" บนคอมพิวเตอร์ เรียกใช้โปรแกรมและเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
2. จากด้านบนสุดของหน้าจอ เลือก **อุปกรณ์ > อิมพอร์ตข้อมูลส่วนตัว > อิมพอร์ตรายชื่อ**
3. จะมีป๊อปอัพสำหรับการเปิดไฟล์รายชื่อปรากฏขึ้น
4. เลือกไฟล์รายชื่อและคลิก **เปิด**
5. ป๊อปอัพสำหรับการอิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ไปยังรายชื่อในอุปกรณ์จะปรากฏขึ้น

6. หากรายชื่อในอุปกรณ์และรายชื่อใหม่จากคอมพิวเตอร์ไม่เหมือนกัน ให้เลือกรายชื่อที่คุณต้องการ อิมพอร์ตจากคอมพิวเตอร์
7. คลิกปุ่ม [ตกลง] เพื่ออิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ลงในอุปกรณ์

## การส่งเนื้อหา มัลติมีเดียจากอุปกรณ์ไปยังคอมพิวเตอร์

1. เชื่อมต่ออุปกรณ์และคอมพิวเตอร์ด้วยสายเคเบิล USB
2. เรียกใช้แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite"
3. หลังจากการเชื่อมต่อ เลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
4. เลือก **มัลติมีเดีย**
5. เลือกช่องทำเครื่องหมายของเนื้อหาที่จะส่ง
6. คลิก **เริ่ม** เพื่อถ่ายโอนเนื้อหาจากอุปกรณ์ไปยังคอมพิวเตอร์

## สำรองและเรียกคืน

### เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของสมาร์ตโฟน

ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในการ์ดเก็บข้อมูลเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลสมาร์ตโฟนได้ หากสมาร์ตโฟนของคุณสูญหาย ถูกขโมย


หรือเสียหายจากปัญหาที่ไม่คาดคิด แอปพลิเคชันสำรองและเรียกคืนนี้สนับสนุนระหว่างสมาร์ตโฟน LG, เวอร์ชันซอฟต์แวร์อื่น หรือ OS อื่น นอกจากนี้ เมื่อคุณซื้อสมาร์ตโฟน LG ใหม่ คุณสามารถสำรองข้อมูลสมาร์ตโฟน LG-P940 ปัจจุบันไปยังเครื่องใหม่ของคุณได้

หากคุณมีแอปพลิเคชันสำรองและเรียกคืนโหนดไว้ล่วงหน้าในสมาร์ตโฟนของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลสมาร์ตโฟนของคุณส่วนใหญ่, แอปพลิเคชัน รวมถึงแอปพลิเคชันที่ไม่มีการป้องกันและการตั้งค่า, บุคลากร, ปฏิทิน, บันทึกการโทร, รายชื่อ, ข้อความ และ การตั้งค่าระบบโดยใช้แอปพลิเคชันนี้ได้

- การสำรองข้อมูลสมาร์ตโฟนด้วยตัวเอง
- การกำหนดเวลาสำรองข้อมูลสมาร์ตโฟนอัตโนมัติ
- การเรียกคืนข้อมูลสมาร์ตโฟน

### สำรองข้อมูลสมาร์ตโฟน

**หมายเหตุ:** ในการสำรองข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์ออนบอร์ด ต้องใส่การ์ดเก็บข้อมูล (การ์ดหน่วยความจำ) สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใส่การ์ดเก็บข้อมูล (การ์ดหน่วยความจำ) โปรดดูบทการใช้การ์ดหน่วยความจำ

1. ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล
2. แตะแท็บ แอปพลิเคชัน  แล้วเลือกสำรองและเรียกคืน > สำรองข้อมูล > การดที่เก็บข้อมูล
3. แตะ เพิ่มใหม่ เพื่อป้อนชื่อสำหรับไฟล์สำรองแล้วเลือก ทำต่อ
4. เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการสำรอง แล้วเลือก ทำต่อเพื่อสำรองข้อมูล
5. เมื่อสำรองข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ 'เสร็จ' จากนั้นเลือก ทำต่อ เพื่อเสร็จสิ้นการสำรองข้อมูล

## การกำหนดเวลาสำรองข้อมูลอัตโนมัติ

คุณสามารถเปิดใช้การสำรองข้อมูลในสมารถโฟนโดยอัตโนมัติตามการตั้งค่ากำหนดเวลาได้ ในการดำเนินการนี้ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล
2. แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **สำรองและเรียกคืน > นัดหมาย**
3. ในหน้าจอ **ตำแหน่งสำรองข้อมูลตามกำหนดเวลา** ให้แตะ **การ์ดเก็บข้อมูล**
4. จากรายการ ให้เลือกความถี่ที่คุณต้องการให้สำรองข้อมูลและการตั้งค่าอุปกรณ์ แล้วเลือก **ทำต่อ**
5. เลือกช่องทำเครื่องหมายข้างข้อมูลที่คุณต้องการสำรอง แล้วเลือก **ทำต่อ** เพื่อเสร็จสิ้นการตั้งค่ากำหนดเวลา

## การเรียกคืนข้อมูลสมารถโฟน

ในการเรียกคืนข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์อ่อนบรอดต้องปิดโหมดที่เก็บข้อมูล

**หมายเหตุ:** ไฟล์ทั้งหมดที่เก็บไว้ในสมารถโฟนจะถูกลบก่อนเรียกคืนไฟล์สำรอง


1. ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล
2. แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **สำรองและเรียกคืน > เรียกคืน > การ์ดที่เก็บข้อมูล**
3. ในหน้าจอ **เรียกคืน** ให้เลือกไฟล์สำรองที่มีข้อมูลที่คุณต้องการเรียกคืน
4. เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการเรียกคืน แล้วเลือก **ทำต่อ** เพื่อเรียกคืนไปยังโทรศัพท์

**หมายเหตุ:** โปรดทราบว่าข้อมูลสำรองที่ขอของคุณจะถูกบันทึกทับด้วยเนื้อหาจากการสำรองของคุณ


5. หากไฟล์สำรองถูกเข้ารหัส ให้พิมพ์รหัสผ่านที่คุณตั้งค่าเพื่อเข้ารหัส
6. เมื่อเรียกคืนไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ **'เสร็จ'** จากนั้นเลือก **ใช่** เพื่อรีเซ็ตโทรศัพท์

## หมายเหตุ:

- ขณะอยู่ในโหมดที่เก็บข้อมูล แอปพลิเคชันสำรองและเรียกคืนนี้ จะไม่สามารถทำงานได้ เลือกตัวเลือกซาร์ทเท่านั้นเมื่อเชื่อมต่อสาย USB
- คุณสามารถตั้งค่าเปิดใช้งานการเข้ารหัสเพื่อเข้ารหัสไฟล์สำรองขอคุณเพื่อเพิ่มการป้องกัน

กด **เมนู**  จากหน้าจอสำรองและเรียกคืน และเลือก **ตั้งค่า > ระบบป้องกัน** และเลือกช่องทำเครื่องหมาย และหลังจากการเปิดใช้การเข้ารหัส ใน การเรียกคืนข้อมูลสมุดบันทึกที่ซิงโครไนซ์ คุณต้องมีรหัสผ่านการเปิดใช้

**หมายเหตุ:**

- คุณสามารถเปิดใช้การลบการสำรองเกาต์ดโน้มติและเก็บไว้เฉพาะการสำรองล่าสุดได้ กด **เมนู**  จากหน้าจอสำรองและเรียกคืน และเลือก **ตั้งค่า > สำรองข้อมูลตามกำหนดเวลา > ลบการสำรองเกาต์ดโน้มติ เพื่อเลือกจำนวนการสำรองตามกำหนดเวลาที่จะเก็บไว้**
- เมื่อคุณใส่การ์ดหน่วยความจำ ไพล์ไดเรกทอรีของการ์ดหน่วยความจำจะปรากฏขึ้นในไพล์เดออร์ /Polaris Office /My folders /\_ExternalSD /spritebackup ภายใต้หน่วยความจำเก็บข้อมูล (เมื่อใส่การ์ดหน่วยความจำ)

- การสำรองข้อมูลช่วยให้ผู้ใช้สำรองข้อมูลสิ่งที่ผู้ใช้เลือกไว้ดทันที (แอปพลิเคชันและข้อมูลแอปพลิเคชัน, รายชื่อ, ขอดความ, บันทึกการโทร, ปฏิทิน, บุคมาเรค) สำหรับประวัติการสำรองล่าสุด หากไม่มีประวัติของการสำรอง “ไม่มีการสำรอง” จะปรากฏขึ้น หากมีประวัติ จะแสดงสูงสุดสองไฟล์สำรอง
- การเรียกคืนช่วยให้ผู้ใช้เรียกคืนรายการที่สำรองเมื่อผู้ใช้ต้องการใช้ไฟล์สำรอง แอปพลิเคชันเรียกคืนสามารถใช้กับโทรศัพท์ที่สำรองข้อมูลและสมารทโฟน LG อื่นๆ ได้
- กำหนดเวลาช่วยให้ผู้ใช้ตั้งเวลาสำหรับการสำรองข้อมูลตามกำหนดเวลาโดยสร้างไฟล์สำรองอัตโนมัติตามเวลาที่ต้องการ เช่น ในตอนเช้าเมื่อผู้ใช้ไม่ได้ใช้โทรศัพท์ ไม่มีการตั้งคาคการสำรองข้อมูลตามกำหนดเวลาตามคาเริ่มตุน หากไม่มีการตั้งคาคก่อนหน้า กำหนดเวลา หากมี จะแสดงเวลาของการสำรองข้อมูลตามกำหนดเวลาครั้งถัดไป

## อัปเดตซอฟต์แวร์โทรศัพท์

### การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

**หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น**

### อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์ได้ที่: **ตั้งค่า >**

#### **เกี่ยวกับโทรศัพท์ > ซอร์ฟแวร์อัปเดต > ตรวจสอบอัปเดต** ในตอนนี้

คุณสามารถเลื่อนการอัปเดตเป็นเวลา 1 ชั่วโมง, 4 ชั่วโมง, 8 ชั่วโมง หรือหนึ่งวันได้ ในกรณีนี้แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาการอัปเดตด้วยตัวคุณเองอีกด้วย

**หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย พื้นที่ และประเทศของคุณ**

### เครื่องหมายการค้า

- ลิขสิทธิ์ 2012 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง
- Bluetooth® เป็นเครื่องหมายการค้า

- จดทะเบียนของ Bluetooth SIG, Inc. ทั่วโลก
- Wi-Fi®, โลโก้ Wi-Fi CERTIFIED และโลโก้ Wi-Fi logo เป็นเครื่องหมายการค้าจดทะเบียนของ Wi-Fi Alliance
  - เครื่องหมายการค้าและลิขสิทธิ์อื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ


**DivX Mobile DIVX**  
 เกี่ยวกับวิดีโอ **DIVX: DivX®** เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ [divx.com](http://divx.com)

**เกี่ยวกับ DIVX VIDEO-ON-DEMAND:** อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ [vod.divx.com](http://vod.divx.com) สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

**DivX Certified®** สำหรับเล่นวิดีโอ **DivX®** ไม่เกิน **HD 720P**  
 รวมถึงเนื้อหาพรีเมียม **DivX®**, **DivX Certified®** และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ

**Rovi Corporation หรือบริษัทในเครือ และใช้โดยได้รับอนุญาต**

**หมายเหตุ:**  
**ซอฟต์แวร์โอเพ่นซอร์ส**  
 ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และและใบอนุญาตโอเพ่นซอร์สอื่นๆโปรดไปที่ <http://opensource.lge.com/> เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ และประกาศที่อ้างอิงถึงทั้งหมด สามารถดาวน์โหลดได้พร้อมกับซอร์สโค้ด

**DTS**   
 ผลิตภายใต้การอนุญาตจาก DTS Licensing Limited DTS และสัญลักษณ์เป็นเครื่องหมายการค้าจดทะเบียน, & DTS 2.0 Channel และโลโก้ DTS เป็นเครื่องหมายการค้าของ DTS, Inc. ผลิตภัณฑรวมถึงซอฟต์แวร์ © DTS, Inc. สงวนลิขสิทธิ์

**Dolby Digital Plus**   
 Manufactured under license from Dolby Laboratories. Dolby และสัญลักษณ์ตัวอักษร D สองตัวเป็นเครื่องหมายการค้าของ Dolby Laboratories

## อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-P940 (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์  
ชาร์จแบตเตอรี่



สายเคเบิลข้อมูล  
เชื่อมต่อโทรศัพท์  
LG-P940  
ของคุณกับคอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้  
เรียนรู้เพิ่มเติม  
เกี่ยวกับโทรศัพท์  
LG-P940



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

# ข้อมูลทางเทคนิค

## อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ), +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี  
อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตึกสิน  
เลขที่ 72/127 ถ. สมเด็จพระเจ้าตาก  
สิน แขวงบวรคดีโล เขตธนบุรี กรุงเทพฯ  
10600

วันและเวลาที่ทำการ :  
จันทร์-อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757

### Declaration of Conformity



#### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P940

Trade Name

LG

CE 0168

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.8.1 / EN 301 489-3 V1.8.1 / EN 301 489-7 V1.3.1  
EN 301 489-17 V2.1.1 / EN 301 489-19 V1.3.1 / EN 301 489-24 V1.3.1  
EN 301 208 V1.2.1  
EN 60950-1-2006-A11:2009  
EN 60950-2201 V1:2006 / EN 62209-1-2006 / EN 62209-2:2010  
EN 301 511 V6.2.1  
EN 301 608 V4.2.1 / EN 301 608-2 V4.2.1  
EN 302 201-1 V1.1.1 / EN 302 201-2 V1.1.1  
EN 302 800 V1.1.1

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

#### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives.

Name

Doo Haeng Lee/Director

Issued Date

13. Dec. 2011

LG Electronics Logistics and Services B.V.  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

## การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย เครือข่ายขาดหาย	สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการ ผู้ให้บริการใช้บริการใหม่	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่ายตรวจสอบว่าซิมการ์ดใช้งานมานานกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ที่สุด ติดต่อผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกันคุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำ รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ


ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถโทรออกได้	ขอผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบ เติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่  ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัด การโทรใหม่โดยรหัส PIN2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดเครื่องแล้ว ปล่อยเร็วเกินไป ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์ กำลังชาร์จบนหน้าจอ ทำความสะอาดขั้วแบตเตอรี่
ขอผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่ อุณหภูมิภายนอกร้อนหรือ เย็นเกินไป มีปัญหาที่ขั้วสัมผัส  ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด  อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จ ไฟที่อุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อ กับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยน อุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
หมายเลขโทรศัพท์ใช้ โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนด หมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ/ ส่งข้อความตัว อักษรและรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออก จากโทรศัพท์



ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับ การสนับสนุน
การ์ด SD ไม่ทำงาน	สนับสนุนระบบไฟล์ FAT16, FAT32	ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ด หรือฟอร์แมตการ์ด SD โดยใช้โทรศัพท์
หน้าจอไม่ทำงาน เมื่อฉันรับสาย	เซนเซอร์รับสัญญาณ มีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด
ไม่มีเสียง	โหมตสัน	ตรวจสอบการตั้งค่าสถานะของเมนูเสียง เพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมตสันหรือโหมตปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ถอดแล้วใส่แบตเตอรี่กลับเข้าไปอีกครั้ง เปิดโทรศัพท์ ลองใช้บริการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์


## คำถามที่พบบ่อย

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ



ชนิดชนิดย่อย	คำถาม	คำตอบ
<b>BT</b> บลูทูธ อุปกรณ์	ฟังก์ชันที่ใช้ได้ผ่าน บลูทูธมีอะไรบ้าง?	คุณสามารถเชื่อมต่ออุปกรณ์เสียงบลูทูธ เช่น ชุดหูฟังสเตอริโอ/โมโน ชุดดีดรถยนต์ และแบบรับรูปภาพ วิดีโอ รายชื่อ ฯลฯ ผ่านเมนูคลังภาพ/รายชื่อ รวมถึงเมื่อมีการเชื่อมต่อเซิร์ฟเวอร์ FTP กับอุปกรณ์ที่สามารถใช้งานร่วมกันได้ คุณจะสามารถแบงบันทึกเนื้อหาที่จัดเก็บไว้ในสื่อเก็บข้อมูล (หน่วยความจำภายในหรือการ์ด SD)
<b>BT</b> บลูทูธ ชุดหูฟัง	หากฉันเชื่อมต่อชุดหูฟังบลูทูธของฉัน ฉันจะสามารถฟังเพลงผ่านหูฟังแบบใช้สายขนาด 3.5 มม. ของฉันได้หรือไม่	เมื่อมีการเชื่อมต่อชุดหูฟังบลูทูธ ระบบเสียงทั้งหมดจะถูกเล่นผ่านชุดหูฟัง ดังนั้น คุณจะไม่สามารถฟังเพลงผ่านหูฟังแบบใช้สายของคุณได้
<b>ข้อมูล</b> รายชื่อ สำรองข้อมูล	ฉันจะสามารถสำรองข้อมูลรายชื่อได้อย่างไร	ข้อมูลรายชื่อสามารถส่งใครในระหว่างโทรศัพท์ของคุณกับ Gmail™ ได้


ชนิด ชนิดย่อย	คำถาม	คำตอบ
<b>ข้อมูล</b> การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะตั้งค่าการซิงค์ทางเดียวกับ Gmail	มีเฉพาะการซิงโครไนซ์สองทางให้ใช้งาน
<b>ข้อมูล</b> การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะซิงโครไนซ์ไฟล์เดสก์ท็อปอีเมลทั้งหมด	ถ้าคุณซิงโครไนซ์โดยอัตโนมัติ คุณสามารถดูโฟลเดอร์อื่นๆ ได้โดยการกดปุ่มเมนู  และแตะ โฟลเดอร์ เพื่อเลือกโฟลเดอร์
<b>บริการของ Google™</b> ล็อกอิน Gmail	ฉันควรที่จะล็อกอิน Gmail ทุกครั้งที่ฉันต้องการเข้าใช้งาน Gmail หรือไม่	เมื่อคุณล็อกอิน Gmail แล้ว คุณไม่ต้องล็อกอิน Gmail อีก
<b>บริการของ Google</b> แอคเคาท์ Google	เป็นไปได้หรือไม่ที่จะฟیلเตอร์อีเมล	ไม่ได้ ไม่สนับสนุนการฟیلเตอร์อีเมลผ่านโทรศัพท์
<b>ฟังก์ชันโทรศัพท์</b> YouTube™	เป็นไปได้หรือไม่ที่จะเล่นวิดีโอ YouTube	ได้ อุปกรณ์สนับสนุนวิดีโอ YouTube แต่คุณจะต้องดูผ่านแอปพลิเคชัน YouTube (ไม่ใช่เบราว์เซอร์)
<b>ฟังก์ชันโทรศัพท์</b> อีเมล	จะเกิดอะไรขึ้นเมื่อฉันใช้งานแอปพลิเคชันอื่นขณะเขียนอีเมล	อีเมลของคุณจะถูกบันทึกเป็นร่างโดยอัตโนมัติ
<b>ฟังก์ชันโทรศัพท์</b> เสียงเรียกเข้า	มีการจำกัดขนาดไฟล์หรือไม่เมื่อฉันใช้ไฟล์ .MP3 เป็นเสียงเรียกเข้า	ไม่มีการจำกัดขนาดไฟล์

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ เวลาข้อความ	โทรศัพท์ของฉันไม่ แสดงเวลาที่ได้รับ ข้อความที่เกาเกิน 24 ชั่วโมงได้ ฉันจะ เปลี่ยนแปลงส่วนนี้ได้ อย่างไร	คุณสามารถดูได้เฉพาะเวลาข้อความที่ได้รับ ในวันเดียวกันเท่านั้น
ฟังก์ชันโทรศัพท์ การ์ด microSD	โทรศัพท์สนับสนุน ขนาดการ์ดหน่วย ความจำสูงสุดเท่าใด	สามารถใช้งานร่วมกันได้กับการ์ดหน่วย ความจำขนาด 32 GB
ฟังก์ชันโทรศัพท์ การนำทาง	เป็นไปได้หรือไม่ที่จะ ติดตั้งแอปพลิเคชัน การนำทางอื่นใน โทรศัพท์ของฉัน	แอปพลิเคชันที่มีอยู่ใน Android Market™ และใช้งานร่วมกับฮาร์ดแวร์ได้สามารถติดตั้ง และใช้งานได้
ฟังก์ชันโทรศัพท์ การซิงโครไนซ์	เป็นไปได้หรือไม่ที่จะ ซิงโครไนซ์รายชื่อ จากแอดเดสส์บุ๊ก ทั้งหมดของฉัน	สามารถซิงโครไนซ์ได้เฉพาะรายชื่อของ Gmail และเซิร์ฟเวอร์ MS Exchange (เซิร์ฟเวอร์อีเมล ของบริษัท) เท่านั้น
ฟังก์ชันโทรศัพท์ รอและหยุดชั่วคราว	เป็นไปได้หรือไม่ที่ จะบันทึกรายชื่อด้วย รอคอยและหยุดพัก ในรูปแบบหมายเลข	<p>หากคุณโอนรายชื่อด้วยฟังก์ชัน W &amp; P เป็นหมายเลข คุณจะไม่สามารถใช้คุณสมบัติ เหล่านั้นได้ คุณจะต้องบันทึกแต่ละหมายเลข ใหม่อีกครั้ง</p> <p>วิธีการบันทึกด้วยรอและหยุดชั่วคราว:</p> <ol style="list-style-type: none"> <li>1. จากหน้าจอหลัก กดไอคอน <b>โทรศัพท์</b> </li> <li>2. กดหมายเลขโทรศัพท์ และกด <b>ปุ่มเมนู</b> </li> <li>3. แตะ <b>เพิ่มหยุดชั่วคราว 2 วินาที</b> หรือ <b>เพิ่มการรอ</b></li> </ol>


ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ ระบบป้องกัน	ฟังก์ชันระบบป้องกัน ของโทรศัพท์ที่มี อะไรบ้าง	คุณสามารถตั้งค่าให้จำเป็นต้องมีการป้อน แบบปลดล็อคก่อนที่จะสามารถเข้าถึงหรือใช้งาน โทรศัพท์ได้
ฟังก์ชันโทรศัพท์ แบบ ปลดล็อค	ฉันจะสร้างแบบ ปลดล็อคได้อย่างไร	<ol style="list-style-type: none"> <li>1. จากหน้าจอล็อก กด <b>ปุ่มเมนู</b> </li> <li>2. แตะ <b>ตั้งค่า &gt; ปลอดภัยและการป้องกัน</b></li> <li>3. แตะ <b>ตั้งค่าล็อคหน้าจอ &gt; แบบ</b> ในครั้งแรก จะมีการแสดงบทช่วยสอนสั้นๆ เกี่ยวกับการสร้างแบบปลดล็อค</li> <li>4. ตั้งค่าโดยการวาดแบบของคุณหนึ่งครั้ง และอีกครั้งเพื่อยืนยัน</li> </ol> <p><b>ข้อควรระวังเมื่อใช้ล็อคแบบ</b> สิ่งสำคัญคือต้องจำแบบปลดล็อคที่ คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้ โทรศัพท์ของคุณได้หากคุณใช้แบบ ไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสดัง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณ จะสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที</p>

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ แบบ ปลดล็อค	ฉันควรทำอย่างไร หากฉันลืมแบบปลด ล็อคและไม่ได้สร้าง แอคเคาท์ Google ในโทรศัพท์	<p><b>หากคุณลืมแบบ:</b>          หากคุณล็อกอินบัญชี Google          ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง          5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น          คุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์          Google ของคุณเพื่อปลดล็อคโทรศัพท์          หากคุณไม่ได้สร้างแอคเคาท์ Google          บนโทรศัพท์ หรือคุณลืม คุณต้องทำการ          Hard Reset</p> <p><b>ขอควรระวัง:</b> หากคุณทำการรีเซ็ตค่าจาก          โรงงาน ข้อมูลแอปพลิเคชันผู้ใช้          และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่า          ลืมสำรองข้อมูลสำคัญไว้ก่อนทำการรีเซ็ต          ค่าจากโรงงาน</p> <p>วิธีการรีเซ็ตค่าจากโรงงาน:</p> <ol style="list-style-type: none"> <li>1. ปิดเครื่อง</li> <li>2. กดปุ่มต่อไปนี่ย่างไว้พร้อมกัน(เป็นเวลา              นาน              กว่า 10 วินาที): <b>ปุ่มเปิด/ปิดเครื่อง/ล็อค              + ปุ่มกลองกายารูป + ลดระดับเสียง</b></li> <li>3. โทรศัพท์จะเปิดขึ้นและรีเซ็ตค่าจาก              โรงงานทันที</li> </ol>
ฟังก์ชันโทรศัพท์ หน่วยความจำ	ฉันจะรู้ว่าหน่วยความ จำเต็มได้หรือไม่	ได้ คุณจะได้รับการแจ้ง

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ การสนับสนุนภาษา	เป็นไปได้หรือไม่ที่ จะเปลี่ยนภาษา	โทรศัพท์มีความสามารถหลายภาษา การเปลี่ยนภาษา: 1. จากหน้าจอหลัก กด ปุ่มเมนู  และแตะ <b>ตั้งค่า</b> 2. แตะ <b>ภาษา</b> และแป้นพิมพ์ > <b>เลือกภาษา</b> 3. แตะภาษาที่ต้องการ
ฟังก์ชันโทรศัพท์ VPN	ฉันจะตั้งค่า VPN ได้อย่างไร	การกำหนดค่าการเข้าถึง VPN จะแตกต่างกัน ในแต่ละบริษัท ในการกำหนดค่าการเข้าถึง VPN จากโทรศัพท์ของคุณ คุณต้องมีราย ละเอียดจากผู้ดูแลระบบเครือข่ายของบริษัท ของคุณ
ฟังก์ชันโทรศัพท์ ระยะเวลาหน้าจอ	หน้าจอของฉันปิด หลังจากเพียงแค 15 วินาที ฉันจะเปลี่ยนระยะ เวลาสำหรับการปิด ไฟหน้าจอได้ อย่างไร	1. จากหน้าจอหลัก กด ปุ่มเมนู  2. แตะ <b>ตั้งค่า</b> > <b>หน้าจอ</b> 3. ในการตั้งค่าหน้าจอ แตะ <b>ระยะเวลา</b> 4. แตะระยะเวลาไฟหน้าจอที่ต้องการ
ฟังก์ชันโทรศัพท์ การตอบสนองที่สัมผัสได้	ฉันเปิดการโต้ตอบกา รสัมผัสในโทรศัพท์ข องฉัน อย่างไรก็ตาม พอฉันกดหมายเลขโทรศัพท์ โทรศัพท์ก็ยังคงสั้นอยู่ ฉันจะปิดการสั้นนี้ได้อย่างไร	1. จากหน้าจอหลัก กด ปุ่มเมนู  2. แตะ <b>ตั้งค่า</b> > <b>เสียง</b> 3. แตะ <b>การโต้ตอบการสัมผัส</b> เพื่อเอา เครื่องหมายออกและปิดการใช้งานฟังก์ชัน

ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ Wi-Fi และ 3G	เมื่อใช้ได้ทั้ง Wi-Fi และ 3G โทรศัพท์ของฉันจะใช้บริการใด	เมื่อใช้ข้อมูล โทรศัพท์ของคุณอาจใช้การเชื่อมต่อ Wi-Fi เป็นค่าเริ่มต้น (หากเปิดการเชื่อมต่อ Wi-Fi ในโทรศัพท์) อย่างไรก็ตาม จะไม่มีการแจ้งเมื่อโทรศัพท์เปลี่ยนจากบริการหนึ่งไปสู่อีกบริการหนึ่งหากต้องการทราบว่ากำลังใช้การเชื่อมต่อข้อมูลใด ให้ดูไอคอน 3G หรือ Wi-Fi ที่บนสุดของหน้าจอ
ฟังก์ชันโทรศัพท์ หน้าจอหลัก	เป็นไปได้หรือไม่ที่จะลบแอปพลิเคชันออกจากหน้าจอหลัก	ได้ เพียงแตะไอคอนค้างไว้จนกว่าไอคอนถึงขยับปรากฏขึ้นที่บริเวณกลางล่างของหน้าจอ จากนั้น ลากไอคอนไปยังถึงขยับโดยไม่ตองยกนิ้วขึ้น
ฟังก์ชันโทรศัพท์ แอปพลิเคชัน	ฉันดาวน์โหลดแอปพลิเคชันและแอปพลิเคชันนั้นทำให้เกิดข้อผิดพลาดจำนวนมาก ฉันจะลบได้อย่างไร	<ol style="list-style-type: none"> <li>1. จากหน้าจอหลัก กด <b>ปุ่มเมนู</b> </li> <li>2. แตะ <b>ตั้งค่า</b> &gt; <b>แอปพลิเคชัน</b> &gt; <b>จัดการแอปพลิเคชัน</b></li> <li>3. แตะแอปพลิเคชัน แลแตะ <b>ถอนการติดตั้ง</b></li> </ol>
ฟังก์ชันโทรศัพท์ อุปกรณ์ชาร์จ	ฉันสามารถชาร์จโทรศัพท์ ด้วย USB โดยไม่ติดตั้งใครเวอร์	ได้ โทรศัพท์จะได้รับการชาร์จไฟจากสายเคเบิล USB ไม่ว่าจะมีการติดตั้งใครเวอร์ที่จำเป็นหรือไม่


ชนิด ชนิดย่อย	คำถาม	คำตอบ
ฟังก์ชันโทรศัพท์ การปลุก	ฉันสามารถใช้ไฟล์เพลงของฉันในการปลุกได้หรือไม่	ได้ หลังจากบันทึกไฟล์เพลงเป็นเสียงเรียกเข้า า คุณสามารถนำมาใช้ในการปลุกได้ 1. แตะที่เพลงในรายการไลบรารีค้างไว้ ในเมนูที่เปิดขึ้น และ <b>ใช่เป็นเสียงเรียกเข้าโทรศัพท์</b> 2. ในหน้าจอกำหนดค่านาฬิกาปลุกให้เลือกใช่ เพลงเป็นเสียงเรียกเข้า
ฟังก์ชันโทรศัพท์ การปลุก	การปลุกจะส่งเสียงหรือทำงานหรือไม่หากโทรศัพท์ปิดอยู่	ไม่สนับสนุนการทำงานนี้
ฟังก์ชันโทรศัพท์ การปลุก	หากระดับเสียงดังเรียกเข้าของฉันปิดหรือลั่นอยู่ฉันจะได้ยินเสียงปลุกหรือไม่	การปลุกของคุณถูกกำหนดให้ส่งเสียงแม่ในสถานการณ์เหล่านี้

ชนิด ชนิดย่อย	คำถาม	คำตอบ
โซลูชันการกู้คืนข้อมูล การรีเซ็ตข้อมูลจากโรงงาน	ฉันจะทำการรีเซ็ต ข้อมูลจากโรงงาน ได้อย่างไร	<p>รีเซ็ตการตั้งของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก</p> <ol style="list-style-type: none"> <li>1. จากหน้าจอหลัก กด <b>ปุ่มเมนู</b> </li> <li>2. แตะ <b>ตั้งค่า</b> &gt; <b>ความเป็นส่วนตัว</b> &gt; <b>รีเซ็ตข้อมูลจากโรงงาน</b></li> <li>3. อ่านค่าเตือนและแตะ <b>รีเซ็ต โทรศัพท์</b></li> <li>4. แตะ <b>ลบทุกสิ่ง</b></li> </ol> <p><b>ข้อควรระวัง:</b></p> <ul style="list-style-type: none"> <li>• หากคุณเลือก รีเซ็ตข้อมูลจากโรงงาน จะเป็นการลบข้อมูลส่วนตัวทั้งหมดออก จากหน่วยความจำระบบของโทรศัพท์ รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google, แอคเคาท์อื่นๆ, ข้อมูลและการตั้งค่าระบบ/แอปพลิเคชัน ตลอดจนแอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM</li> <li>• การรีเซ็ตโทรศัพท์จะไม่เป็นการลบการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลด รวมถึงไฟล์ที่อยู๋ในการ์ด microSD ของคุณหรือหน่วยความจำภายใน เช่น เพลงหรือภาพถ่าย ดังนั้น หากคุณต้องการลบข้อมูลทั้งหมดบนหน่วยความจำภายในโดยไม่ต้องรีเซ็ตโทรศัพท์ ให้เลือกกล่องทำเครื่องหมาย ลบหน่วยความจำภายใน</li> </ul>

ชนิด ชนิดย่อย	คำถาม	คำตอบ
โซลูชันการกู้คืนข้อมูล Hard Reset (รีเซ็ตค่าจากโรงงาน)	ฉันจะทำการรีเซ็ตค่าจากโรงงานได้อย่างไร หากฉันไม่สามารถเข้าไปที่เมนูการตั้งค่าของโทรศัพท์ได้	<p>วิธีการทำ Hard Reset (รีเซ็ตค่าจากโรงงาน):</p> <ol style="list-style-type: none"> <li>1. ปิดเครื่อง</li> <li>2. กดปุ่มค่อไปนี้ค้างไว้พร้อมกัน(เป็นเวลา นานกว่า 10 วินาที): <b>ปุ่มเปิด/ปิดเครื่อง/ล็อค + ปุ่มกล้องถ่ายรูป + ลดระดับเสียง</b></li> <li>3. โทรศัพท์จะเปิดขึ้นและรีเซ็ตค่าจากโรงงานทันที</li> </ol> <p><b>ขอควรระวัง:</b> หากทำการรีเซ็ตค่าจากโรงงานแล้ว แอปพลิเคชันที่ติดตั้งและข้อมูลผู้ใช้ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำการรีเซ็ตค่าจากโรงงาน</p>

# | LG-P940 | USER GUIDE

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.

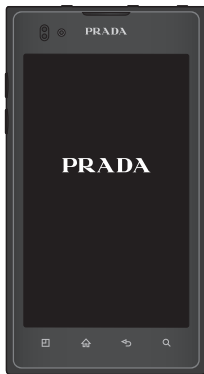

# CONTENTS

## **5 GUIDELINES FOR SAFE AND EFFICIENT USE**

---

### **11 GETTING TO KNOW YOUR PHONE**

---

#### **11 Before you start using the phone, please read this!**

- 17 Device components
- 19 Installing the SIM card and battery
- 20 Charging your phone
- 20 Using the memory card
- 21 Locking and unlocking the screen
- 22 Secure your lock screen

### **24 YOUR HOME SCREEN**

---

- 24 Touch screen tips
- 24 Home screen
- 25 Customising the Home screen

26 Customising the Application design from Home screen

26 Customising the Home screen design

27 Returning to recently-used applications

27 Notification drawer

27 Viewing the status bar

29 Onscreen keyboard

29 Entering accented letters

### **30 GOOGLE ACCOUNT SET UP**

---

### **31 SOCIAL NETWORKING**

---

- 31 Viewing and updating your status
- 32 Removing accounts on your phone

### **33 EMAIL**

---

- 33 Managing an email account
- 33 Email account screen
- 34 Working with account folders
- 34 Composing and sending email

### **35 THE WEB**

---

- 35 Browser
- 35 Using the web toolbar
- 35 Using options

### **36 MULTIMEDIA**

---

- 36 Gallery
- 36 Image Editor
- 37 Music
- 38 FM Radio
- 39 NFC
- 40 HDMI

**41 CONNECTIVITY**

- 41 Bluetooth
- 42 Wi-Fi
- 43 Wi-Fi Direct
- 44 Using SmartShare
- 46 Mobile network sharing
- 47 GPS
- 47 PC connections with a PC data cable
- 49 VPN connections

**51 CALLS**

- 51 Making a call
- 51 Calling your contacts
- 51 Answering and rejecting a call
- 51 Adjusting call volume
- 51 Making a second call
- 52 Viewing your call logs

- 52 Call settings

**53 CONTACTS**

- 53 Searching for a contact
- 53 Adding a new contact
- 53 Favourite contacts
- 54 Import or export contacts
- 54 Moving Contacts from your Old Device to your New Device

**55 MESSAGING**

- 55 Sending a message
- 55 Threaded box
- 56 Using Smilies
- 56 Changing your message settings

**57 CAMERA**

- 57 Getting to know the viewfinder
- 58 Taking a quick photo

- 58 Once you've taken the photo

- 58 Using the advanced settings

**60 VIDEO CAMERA**

- 60 Getting to know the viewfinder
- 61 Shooting a quick video
- 61 After shooting a video
- 61 Using the advanced settings
- 62 Adjusting the volume when viewing a video

**63 UTILITIES**

- 63 Setting your alarm
- 63 Using your calculator
- 63 Adding an event to your calendar
- 63 Changing your calendar view
- 64 Polaris Office

**65 LG ON-SCREEN  
PHONE 2.0**

---

65 On-Screen Phone 2.0 icons

65 On-Screen Phone 2.0 features

66 Installing On-Screen Phone on your PC

66 Connecting your phone to your PC

68 Checking the On-Screen Phone connection

68 Disconnecting your phone from your PC

**69 SETTINGS**

---

69 Wireless & networks

70 Call settings

71 Sound

72 Display

72 Gesture

72 Location & security

74 Applications

74 Accounts & sync

75 Privacy

76 Storage

76 Language & keyboard

76 Voice input & output

77 Accessibility

77 Connectivity

78 Date & time

78 About phone

**79 PC SOFTWARE(LG PC  
SUITE)**

---

80 Connecting your Device to your PC

82 Synchronising your Device to a Computer

82 Moving Contacts from your Old Device to your New Device

83 Sending Multimedia contents from Device to PC

**84 BACKUP & RESTORE**

---

**88 PHONE SOFTWARE  
UPDATE**

---

89 Trademarks

**91 ACCESSORIES**

---

**92 TECHNICAL DATA**

---

**93 TROUBLESHOOTING**

---

**96 FAQ**

---

## GUIDELINES FOR SAFE AND EFFICIENT USE

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P940 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.564 W/kg (10 g) and when worn on the body is 0.762 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection

to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

### **WARNING:**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided they have functionality

equal to that of the parts being replaced.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to do so by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.

- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE: Excessive sound pressure from earphones can cause hearing loss.**

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It contains small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has

- not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
  - Do not leave the battery in hot or cold places as this may deteriorate the battery performance.
  - There is risk of explosion if the battery is replaced by an incorrect type.
  - Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
  - If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
  - Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
  - Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# GETTING TO KNOW YOUR PHONE

## BEFORE YOU START USING THE PHONE, PLEASE READ THIS!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

### 1. Phone memory

When there is less than 1MB of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

#### To uninstall applications:

1. **Applications > Settings > Applications > Manage applications.**
2. Once all applications appear, scroll to and select the

- application you want to uninstall.
3. Touch **Uninstall.**

### 2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

#### Extending your phone's battery life:

Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or NFC, turn them off.

- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

#### To check the battery power level:

- **Applications > Settings > About phone > Status.**

The battery status (charging or not charging) and level (percentage charged) is displayed at the top of

the screen.

### To monitor and control how battery power is being used:

#### • Applications > Settings > About phone > Battery use

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

## 3. Before installing an open source application and OS

### **WARNING:**

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

### **WARNING:**

To protect your phone and personal data, only download applications from trusted sources, such as Android Market™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

## 4. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

1. Turn the power off.
2. Press and hold the following keys at the same time (for over 10 seconds): **Power/Lock key + Camera key + Volume Down Key**
3. The phone will turn on and perform a factory reset immediately.

**WARNING:**

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.

## 5. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

### To stop applications:

1. **Applications > Settings > Applications > Running services**
2. Scroll to the desired application and touch **Stop** to stop it.

**TIP!** To return to a recent application, press and hold the Home key. The screen then displays a list of applications you have recently used.

## 6. Installing PC Software(LG PC Suite)

"LG PC Suite" PC Software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

### With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the software in your device.
- Backup and restore the device.

- Play multimedia content in your PC from another device.

**TIP! You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.**

### Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the LG website.

1. Go to [www.lg.com](http://www.lg.com) and select a country of your choice.
2. Go to **Support > Mobile Phone Support >** Select the Model (LG-P940).
3. Click **PC Sync** from **Downloads**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

### System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1GHz or higher processor
- Memory: 512MB or higher RAM
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers.

#### **NOTE: LG Integrated USB Driver**

- **LG integrated USB driver is required to an LG device to a PC. It is installed automatically when you install "LG PC Suite" PC software.**

## 7. Synchronising your phone to a Computer

Data from your device and PC can be synchronised easily with “LG PC Suite” PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.

The procedure is as follows:

1. Connect your device to PC.  
(Use a USB cable or Wi-Fi connection.)
2. After connection, run the program and select the device section from the category on the left side of the screen.
3. Click [Personal information] to select.
4. Select the checkbox of contents to synchronise and click the **Sync** button.

## 8. Transferring music, photos and videos using USB mass storage devices

### NOTE: LG Integrated USB Driver

• LG integrated USB driver is required to an LG device to a PC. It is installed automatically when you install “LG PC Suite” PC software.

1. **Application > Settings > Storage** to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)
2. Connect the phone to your PC using the USB cable.
3. USB connection mode list will appear, and select **Mass storage** option.
4. Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
5. Copy the files from your PC to the drive folder.

6. Select **Charge only** option to disconnect the phone.

## 9. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P940 has an internal antenna. Be careful not to scratch or damage the inside of the back cover as this is the NFC antenna. While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

## 10. When the screen freezes

**If the screen freezes or the phone does not respond when you try to operate it:**

Remove the battery, reinsert it, then turn the phone on.

### **OR**

Press and hold the **Power/Lock** key for 10 seconds to turn it off. If it still does not work, please contact the service centre.

## Device components

Camera key

Earpiece

Proximity sensor

Front camera lens

Home key 

Return to the Home screen from any screen.

Menu key 

• Check what options are available.



Power/Lock key

- Switch your phone on/off by pressing and holding this key.
- Short press to lock/unlock the screen.

Back key 

Return to the previous screen.


Search key 

### NOTE: Proximity sensor


When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

### WARNING:

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

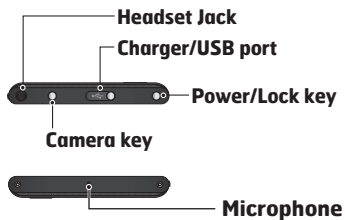**Volume keys**

- In the Home screen: Control ringer volume.
- During a call: Control your earpiece volume.
- When playing a track: Control volume continuously.

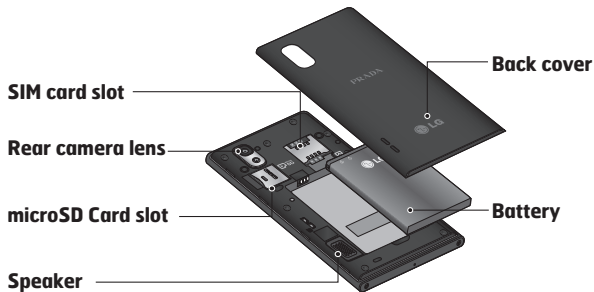


## Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


1. To remove the back cover, hold the phone firmly in one hand. With your other hand, pull off the back cover with your thumb as shown in figure.



2. Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

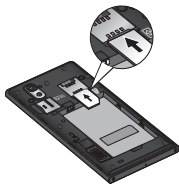

3. Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

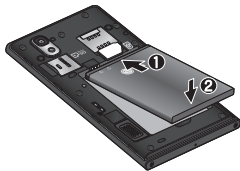

4. Align the back cover over the battery compartment (1) and press it down until it clicks into place (2).



## Charging your phone

Slide and open the cover of the charger connector on the top. Insert the charger and plug it into an electrical outlet.



**NOTE:** The battery must be fully charged initially to improve battery lifetime.

## Using the memory card


Your phone supports the use of microSD™ or microSDHC™ memory cards of up to 32GB capacity. These memory cards are specifically designed for mobile phones and other ultra-small devices, and are ideal for storing media-rich files such as music, programs, videos, and photographs for use with your phone.

### To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

### To remove the memory card safely:

**Applications > Settings > Storage > Unmount SD card.**

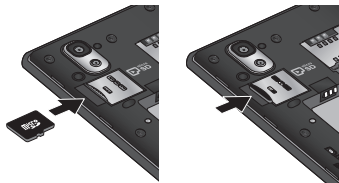

**NOTE:**

- Use only compatible memory cards with your phone. Using incompatible memory cards may damage the card and data stored on the card, as well as the phone.
- The file size supported by FAT32 can be used with a capacity of less than 4GB.


**WARNING:**

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

**To format the memory card:**

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE: All files on your memory card are deleted when it is formatted.**


1. On the Home screen, touch the **Applications** tab  to open the

- applications menu.
2. Scroll and touch **Settings > Storage**.
3. Touch **Unmount SD card**.
4. Touch **Erase SD card > Erase SD card > Erase everything**
5. If you have set a pattern lock, input the pattern lock then select **Erase Everything**.


**NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will have been deleted.**

## Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P940, press the Power/Lock key  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit

all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications). To wake up your phone, press the Power/Lock key . The lock screen will appear. Touch and slide the lock screen upwards to unlock your home screen. The last screen you viewed will open.

**TIP!**

To wake up your phone, you can alternatively use the volume down key while the screen is turned off.

## Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

**To set an Unlock Pattern, PIN or Password for the first time:**

- **Applications > Settings > Location & security > Set up screen lock > Pattern, PIN or Password**

Once it is set, you can change it on the **Change screen lock** menu.

**NOTE:**

**Precautions to take when using Screen lock.**

- **It is very important to remember the unlock Pattern, Pin & Password you set. You will not be able to access your phone if you use an incorrect Pattern, Pin & Password 5 times. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you have used all 5 opportunities, you can try again after 30 seconds.**

**When you cannot recall your unlock Pattern, PIN or Password:**

- **If you have forgotten Pattern :**  
If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern** button. You are then required to log in with your Google account to unlock your phone.  
If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

- **If you have forgotten PIN or Password:** If you forgot your PIN or Password, you need to do Hard reset.

## YOUR HOME SCREEN

### Touch screen tips

Here are some tips on how to navigate around your phone.

**Touch** – To choose a menu/option or open an application, touch it.

**Touch and hold** – To open an options menu or grab an object you want to move, touch and hold it.

**Drag** – To scroll through a list or move slowly, drag across the touch screen.


**Flick** – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

#### NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.


## Home screen

Simply swipe your finger to the left or right to view the panels. You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.

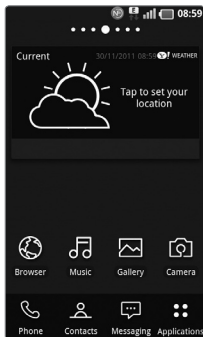



**NOTE:** Some screen images may be different depending on your phone provider.

On your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.

 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

## Customising the Home screen

You can customise your Home screen by adding widgets, shortcuts, folders or wallpapers. For more convenience using your phone, add your favourite widgets to the Home screen.


### To add items on your Home screen:

1. **Home screen** > **Menu**  > **Add**  
OR

Touch and hold the empty part of the Home screen.


2. In the **Edit mode** menu, select items you want to add. You will then see added items on the Home screen.
3. Drag it to the location you want and lift your finger.

### To remove an item from the Home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 

**TIP! To add an application icon to the Home screen from the Applications menu, touch and hold the application you want to add.**

## Customising the Application design from Home screen

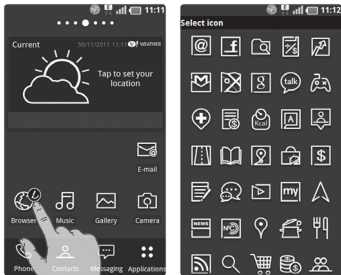

According to your preference you can further edit application icons on the Home screen.

1. Tap and hold an application to customise, then the editing icon appears at the upper right side of the application icon.
2. Tap the editing icon and select the desired icon design.

## Customising the Home screen design

You can customise the current Home screen design by



downloading launcher and theme applications from either **LG SmartWorld** or the **Android Market**.

1. Select **Homescreen > Applications > LG SmartWorld** or **Android Market**.
2. Search for launcher and theme with 'launcher', or, 'theme' as keyword.
3. Download and install your choice of launcher application and its relevant themes.
4. You can change default with downloaded launcher by selecting **Home screen > Application > Home Selector** after installing successfully.

### NOTE:


- **LG SmartWorld will require you to setup an account and sign in.**
- **LG SmartWorld may not be available depending on area, phone, carrier, plan and software version.**


## Returning to recently-used applications

1. Touch and hold the **Home** key . The screen displays a pop-up with icons of applications you used recently.
2. Touch an icon to open the application. Or touch the **Back** key  to return to your current application.

## Notification drawer

The notification drawer runs across the top of your screen.

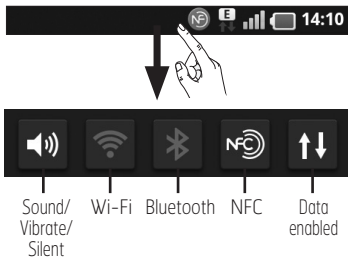

Touch and slide the notification drawer down with your finger. Or, on the Home screen, press the **Menu** key  and select **Notifications**. Here you can check








and manage Sound/Vibrate/Silent, Wi-Fi, Bluetooth, NFC, the music player, etc.














## Viewing the status bar
















The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Wi-Fi, Bluetooth or NFC and data connections.






Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wi-Fi Direct is on
	Wired headset
	Call in progress

Icon	Description
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	NFC is on
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable


Icon	Description
	Downloading data
	Uploading data
	High-Speed Downloading data
	High-Speed Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Google Talk message
	New message
	Song is playing
	Upcoming event



Icon	Description
	FM radio turned on in the background
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active


## Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.


### Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double tap for all caps.


  Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.


 Tap to view or press and hold to change the writing language.

 Tap, or touch and hold to insert an emoticon when writing a message.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

## Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

## GOOGLE ACCOUNT SET UP

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

### To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

### OR

- **Applications** > select a Google application, such as **Gmail** > select **Create** to create a new account.

If you have a Google account, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

## SOCIAL NETWORKING

With your phone, you can take advantage of social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friend's status updates in real-time.

You can add your Facebook, Twitter and Myspace accounts to your phone. If you don't have an account, you can visit their sites to set it up.

**NOTE: Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.**

1. On the home screen, choose any SNS application you want to use.
2. If you don't yet have an account, touch Sign up now and input details.
3. Enter the e-mail address and password that you set up on your community, then tap Log in.
4. Wait while your details are checked with your community.

5. Check your community is turned **ON**. If you tap your community, you can see the current status of your social community.

**TIP! If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.**

**You can also access the social community directly by touching the widget.**

### Viewing and updating your status

1. Choose a community you want to access.
2. You can see the current status of your social community.
3. You can update your status with comments or by uploading photos.

**NOTE: This is dependent on network services.**

**TIP! You can use information about friends only in SNS or sync all data to Contacts.**

## **Removing accounts on your phone**

Choose **Applications > Settings > Accounts & sync** > Choose an account you want to delete > Touch **Remove account**.

## EMAIL

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide the account settings you need.

### Managing an email account

The first time you open the **Email** application, a setup wizard opens to help you to set up an email account.

#### To add another email account:

1. **Applications > Email >** in the account screen, touch **Menu > Add account.**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

#### To change an email account's setting:

1. **Applications > Email >** in the account screen, touch **Menu > Settings**

#### To delete an email account:

1. **Applications > Email >** in the account screen, touch **Menu > Settings >** touch an account you want to delete **> Remove account.**
2. Touch the **Remove** button in the dialog box to confirm that you want to delete the account.


### Email account screen

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.



– Touch to open your Combined Inbox, with messages sent to all of your accounts.

Messages in the Combined Inbox are colour coded on the left, by account, using the same colours used for your accounts in the Accounts screen.


 – Touch the folder icon to open the account folders. Only the most recent emails in your account are downloaded to your phone. To download more (earlier) email messages, touch **Load more emails** at the bottom of the emails list.

## Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

## Composing and sending email

### To compose and send a message

1. While in the **Email** application, touch  to **Compose**.
2. Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with a semicolon.

3. Add Cc/Bcc and add attachment files if required.
4. Enter the text of the message.
5. Touch the **Send** button. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

**TIP!** When a new email arrives in the inbox, you will receive a notification by sound or vibration.





## THE WEB

### Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.







**NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.**

### Using the web toolbar

-  Touch to go back a page.
-  Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.
-  Touch to show all your open windows.
-  Touch to add a new window.

### Using options


Press the **Menu** key to view options.

-  **Read it later** – Add the current web page in Read it later.
-  **Add RSS Feed** – Add the current web page to the RSS feed.
-  **Share page** – Allows you to share the web page with others.
-  **Find on page** – Allows you to find letters or words on the current web page.
-  **Select text** – Allows you to copy any text from the web page.
-  **More**
  - **Home page:** Go to the Home page.
  - **Set Home page:** Set the current web page as your Home page.
  - **Add shortcut to Home:** Add the shortcut of the current web page to the Home screen.
  - **Page info:** Displays the web page information.
  - **Downloads:** Displays your download history.
  - **Settings:** Displays Browser settings.


## MULTIMEDIA

You can store multimedia files on a memory card for easy access to all your image and video files.

### Gallery











Touch the **Applications** tab , then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.

### Timeline view

LG-P940 **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

## Image Editor

You can edit photos and apply various effects.

1. Touch the **Applications** tab , then select **Image Editor**.
2. Select an image you want to edit.
3. Select desired editing option and edit the image as desired.
  -  Edits an image by using **Select, Rotate and Resize**.
  -  Applies 19 different types of filter.
  -  Adjusts the image using **Auto level, RGB Balance, Brightness, Contrast, Hue and Saturation**.
  -  Applies 18 different types of border.
  -  Combines the currently selected image with other images.
  -  Saves the edited image.
  -  Performs again what you have undone.
  -  Undo: Moves to the previous step before the image is edited.
  -  Moves to the previous menu.
4. Adjust the image as desired using a variation of the effect.
5. When you are finished, select **Save**.


**NOTE:**

- This feature may be unavailable depending on your photo resolution and file format.
- You can access this feature from Gallery application. Go to Gallery and select an image > Menu > More > Edit.

## Music

Your LG-P940 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.

### Playing a song

1. In the Home screen, touch the **Applications** tab  and select **Music**.
2. Touch **Songs**.
3. Select the song you want to play.

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist or shuffle.
	Touch to skip to the previous track in the album, playlist or shuffle.
	Touch to set repeat mode.
	Touch to play the current playlist in shuffle mode.
	Touch to see the current playlist.
	Touch to see lyrics. This option is on only if the song includes the lyrics.
	Touch to change the volume.
	Touch to set virtual surround audio effect when connected with headset jack.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone or touch the SW volume button and slide the thumb in player screen.

Touch and hold any song in the list. It displays **Play**, **Add to playlist**, **Use as ringtone**, **Delete**, **Share**, **Search** and **Details** as options.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material.

Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

## FM Radio

Your LG-P940 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.


**NOTE:** You need to use your headset to listen to the radio. Insert them into the headset jack.

## Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again.

You can store up to 48 channels on your phone.

## Tuning in automatically

1. In the Home screen, touch the **Applications** tab  and select **FM Radio**.
2. Press the **Menu** key, then touch **Auto scan**.
3. If there are preset channels, you will see a pop-up asking "Reset all channels and start Auto scan?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
4. During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

**NOTE:** You can also manually tune in to a station using the on-screen wheel.

**TIP!** To improve radio reception, extend the headset cord as this also functions as the radio antenna. If you connect a headset not specifically made for radio reception, radio reception may be poor.


## NFC

Your LG-P940 is NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters.

You can share your contents with a NFC tag or another device via simple touch with your device. If you touch a NFC tag with your device, it will display the tag contents on your device.

**NOTE:** Be careful not to scratch or damage the inside of the back cover as this is the NFC antenna.

### To switch NFC on or off

From the Home screen, touch and slide the notification drawer down with your finger, then select the NFC icon  to turn it on.

**NOTE:** When the Flight mode is activated, the NFC application can still be used.

### Using NFC

To use NFC, make sure your device is switched on and activate the NFC setting, if disabled.

### Using Tag writing

1. Open the NFC application.
2. Select **New** tab, and select the desired option: **Contact**, **URL**, **Memo**, **Call**, **Text message** and **Schedule**.
3. Key in the informations to write to a tag or a device and select **Share**.
4. Touch the back of your device to a tag or a device to share.

## Using Tag reading

1. To read a service tag, touch the service tag or other NFC device with the back cover of your device.
2. When a tag or device is recognised, corresponding information is displayed.



## HDMI

HDMI (High Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data. If your phone is connected to a TV/monitor via an HDMI cable, you can see the image and video file

through the TV/monitor when the video player or image viewer is visible on your phone screen.

**Your device, when used with an MHL adapter, allows you to view videos and other media that you have on your phone on a compatible HD TV.**

**Note: The Universal HDMI cable and MHL adapter are not included with your device.**

### **NOTE:**

**It may take time to play media files depending on the device connected to your phone. Files may not be played properly when using a cable or device that is not HDMI-certified. The image orientation set in your phone also applies to the image displayed on the device. The protected video as like DRM(digital rights management) displays only on your phone. If your phone is connected to a TV/monitor with the low HDMI resolution, the high resolution video playback/camera preview may not display on the TV/monitor.**

## CONNECTIVITY

### Bluetooth

You can use Bluetooth to send data by running a corresponding application, and not just from the Bluetooth menu as on most other mobile phones.

**TIP!** With LG-P940, you can enjoy Bluetooth high speed. If the device you want to share files with also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depending on the device. Please check the device's settings with their service provider.

#### NOTE:

- **LG is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature.**
- **Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.**
- **Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.**

**Turning on Bluetooth and pairing up your phone with a Bluetooth device**

1. **Applications > Settings > Wireless & networks > Touch Bluetooth** to turn it on.
2. Go to **Bluetooth settings > Scan for devices**
3. Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the device.

If the device you want to pair up with is not on the list, make sure that target device is set to be **Discoverable**, then scan again.

### Send data using the Bluetooth wireless feature

1. Select a file or item, such as a contact, calendar event, memo, or media file, from an appropriate application or **Downloads**.
2. Select an option for sending data via Bluetooth.

**NOTE: The method for selecting an option may vary by data type.**



3. Search for and pair with a Bluetooth-enabled device.

### Receive data using the Bluetooth wireless feature

1. In Idle mode, open the application list and select **Settings > Wireless & network > Bluetooth settings > Discoverable**. Your device is discoverable to other Bluetooth devices for 120 seconds.
2. When prompted, enter the PIN for the Bluetooth wireless feature and select **OK** (if

necessary).

3. Select **Accept** to confirm that you are willing to receive data from the device. Received data is saved to the bluetooth folder.

**NOTE: If you receive a contact, you can save the contacts into the phonebook as following.**  
**: Touch Contact  > Press  > More > Import/Export. Refer to page 54.**

## Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

### Activate the WLAN feature

In Idle mode, open the application list and select **Settings > Wireless & networks > Wi-Fi settings > Wi-Fi**.

**NOTE: An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.**

### Find and connect to a WLAN

1. In Idle mode, open the application list and select **Settings > Wireless & network > Wi-Fi settings**. The device will automatically search for available WLANs.
2. Select a network under **Wi-Fi networks**.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

### Add a WLAN manually

1. In Idle mode, open the application list and select **Settings > Wireless & network > Wi-Fi settings > Add Wi-Fi network**.
2. Enter the SSID for the network and select the security type.
3. Set the security settings depending on the selected security type.
4. Select **Save**.

### Connect to a WLAN using a Wi-Fi Protected Setup (WPS)

Using WPS, you can connect to a secured network.

To connect to a WLAN with a WPS button,


1. In Idle mode, open the application list and select **Settings > Wireless & network Wi-Fi settings**.
  2. Select **Push Button Connection**.
  3. Press a WPS button on the access point within 2 minutes.
- To connect to a WLAN with a WPS button,

1. In Idle mode, open the application list and select **Settings > Wireless & network > Wi-Fi settings**.
2. Select a network indicated by the WPS icon and select **WPS PIN**.
3. On the access point, enter the PIN and press the start button.

### Wi-Fi Direct

Learn to use the WLAN Direct feature to connect two devices via a WLAN without requiring an access point.

**Connect your device to another WLAN device**

1. In Idle mode, open the application list and select **Settings > Wireless & network > Wi-Fi Direct settings > OK > Wi-Fi Direct.**
2. Press **Menu**  **> Scan.**
3. Select a device and then select **Connect.** When the owner of the other device accepts the connection, pairing is complete.
4. To deactivate the WLAN Direct feature, select **Disconnect Wi-Fi Direct.**


**NOTE:**

**Forced G/O mode(Forced Group owner mode) – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in the Menu > Advanced > Password.**

## Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

### To turn SmartShare on and allow sharing contents

1. Touch **Applications** tab  and select **SmartShare.**
2. Press the **Menu** key and select **Settings.**
3. Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
4. Touch **Receive files** if you would like to automatically allow the upload of files to your phone from other devices.
5. Touch **Discoverable** checkbox to turn on.
6. Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures, Videos and Music.**
7. **SmartShare** is now activated and ready to share contents.

### To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

**NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).**

1. Touch the top right button to or select the device from renderer lists.
2. Touch the top left button and select the device of the remote content library.
3. You can browse the content library.
4. Touch a content thumbnail or press the **Menu** key and select **Play** button.

**To share contents from your phone to your renderer device(e.g. TV)**

**NOTE: Make sure that your renderer device is properly configured.**

1. While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
2. Touch **Share** on the menu and select the **SmartShare**.

3. **SmartShare** is automatically launched with the selected files.
4. Select the device from renderer lists to play the files.

**NOTE: Follow the similar steps to use the Music player, Camera and Video player to share contents.**

**Notice:** Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.


**To download contents from remote content library**

1. Touch **Applications** tab  and select **SmartShare**.
2. Touch the top left button and select the device of the remote content library.
3. You can browse the content library.
4. Touch a content thumbnail then touch **Download menu key**.

**Notice:** A few types of contents are not supported.

## To upload contents from my phone to remote content library

**NOTE: Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.**

1. Touch **Applications** tab  and select **SmartShare**.
2. Touch the top left button and select **My phone**.
3. You can browse the content library.
4. Touch and hold a content thumbnail and then touch the **Upload** menu key.
5. Select a device of remote content library to be uploaded.

**Notice:** Some DLNA enabled devices do not support DMS upload functionality so will not upload. A few types of contents are not supported.

## Mobile network sharing

Learn to set your device as a wireless modem or wireless access point for PCs or other devices, and share your device's mobile network connection.

## Share your device's mobile network via WLAN

1. In Idle mode, open the application list and select **Settings > Wireless & network > Portable hotspot**.
2. Select **Portable Wi-Fi hotspot settings > OK**.
3. Select **Portable Wi-Fi hotspot** to activate the WLAN hotspot.
4. Select **Configure Wi-Fi hotspot** to customise the WLAN hotspot: **Network SSID** - View and edit the device name that will be shown to external devices. **Security** - Select the security type.

## Share your device's mobile network via USB

1. Connect the phone to your PC using the USB cable.
2. **USB connection mode** list will appear.
3. Select **USB tethering** to activate the USB tethering feature. Your device shares the mobile network connection on your PC. To stop sharing the network connection, clear the check box next to **USB tethering**. (Select **Charge only** option to disconnect the phone.)

**NOTE: The sharing method for the network connection may differ depending on the PC's operating system.**

## GPS

Your device is equipped with a global positioning system (GPS) receiver. Learn to activate location services. To receive better GPS signals, avoid using your device in the following conditions:

- Between buildings, in tunnels or underground passages, or inside buildings in poor weather around high voltage or electromagnetic fields.
- Do not touch the internal antenna area or cover this area with your hands or other objects while using the GPS functions.
- This feature may be unavailable depending on your region or service provider.

### **Activate location services**

You must activate location services to receive location information and search the map.

1. In Idle mode, open the

- application list and select **Settings > Location & security**.
2. Adjust the following settings to activate location services:  
**Use wireless networks** - Set to use WLAN and/or mobile networks for finding your location.  
**Use GPS satellites** - Set to use the GPS satellite for finding your location.

## PC connections with a PC data cable

Learn to connect your device to a PC with a PC data cable in USB connection modes. By connecting the device to a PC, you can transfer data to and from your device directly and use the PC software program(LG PC Suite).

### **Sync your phone with your computer**

To synchronise your phone with your PC using the USB cable, you need to install PC software(LG PC Suite) onto your PC. Download the program from the LG website ([www.lg.com](http://www.lg.com)).

1. Use the USB data cable to connect your phone to the PC.
2. **USB connection mode** list will appear, then select **PC software**.
3. Run the LG PC Suite program from your PC.  
Refer to the PC software(LG PC Suite) help for more information.

**NOTE: LG Integrated USB Driver**  
 • LG integrated USB driver is required to connect an LG device to a PC. It is installed automatically when you install "LG PC Suite" PC software.

### Connect as a mass storage device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can access the file directory of the memory card by using the device as a memory card reader.

1. **Application > Settings > Storage** to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)

2. Connect the phone to your PC using the USB cable.
3. **USB connection mode** list will appear, then select **Mass storage** option.
4. Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
5. Copy the files from your PC to the drive folder.
6. Select **Charge only** option to disconnect the phone.

### Transferring music, photos and videos using USB mass storage mode

1. **Application > Settings > Storage** to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)
2. Connect the phone to your PC using the USB cable.
3. **USB connection mode** list will appear, then select **Mass storage** option.
4. Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer files.

5. Copy the files from your PC to the drive folder.
6. Select **Charge only** option to disconnect the phone.

**NOTE: To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.**

## VPN connections

You can create virtual private networks (VPN) and connect to your private network securely through a public network, such as the internet.


**NOTE: Your device should already be configured with internet access. If you have trouble accessing the internet, you need to edit connections. If you are not sure about the connection information to enter, ask your service provider.**

## Set up VPN connections

1. In Idle mode, open the application list and select **Settings > Wireless & networks > VPN settings > Add VPN**.
2. Select a VPN type.
3. Customise the connection information.

**NOTE: Available options may vary depending on the VPN type.**

- **VPN name** - Enter a name of the VPN server.
- **Set VPN server** - Enter the IP address of the VPN server.
- **Enable Encryption** - Set to encrypt the VPN server.
- **Set IPsec pre-shared key** - Enter a preshared key.
- **Enable L2TP secret** - Set to use the L2TP secret password.
- **Set L2TP secret** - Enter the L2TP secret password.
- **Set user certificate** - Select a user certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download from the web.





- **Set CA certificate** - Select a certificate authority (CA) certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download from the web.
  - **DNS search domains** - Enter the domain name server (DNS) address.
4. When you are finished, press **Menu**  > **Save**.


### **Connect to a private network**

1. In Idle mode, open the application list and select **Settings > Wireless & networks > VPN settings**.
2. Select a private network to connect.
3. Enter the user name and password and select **Connect**.


## CALLS

### Making a call



1. Touch  to open the keypad.
2. Enter the number using the keypad. To delete a digit, touch the .
3. Touch the  icon to make a call.
4. To end a call, touch the **End** icon .

**TIP! To enter "+" to make international calls, touch and hold .**

### Calling your contacts

1. Touch  to open your contacts.
2. Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search**.
3. In the list, touch the contact you want to call.

### Answering and rejecting a call



When you receive a call in Lock state, drag the  to the right to answer incoming call. Drag the  to the left to reject an incoming call. Drag the **Excuse msg** bar from the bottom if you want to send one.



**TIP! Excuse messages**  
You can send a message quickly using this function. This is useful if you need to reply to a message during a meeting.

### Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.


### Making a second call

1. During your first call, touch **Dialpad**  and dial the number. Also, you can search your contacts by touching Contacts  and select the number you want to call.

2. Touch the  to make the call.
3. Both calls are displayed on the call screen. Your initial call is locked and put on hold.
4. Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call.
5. To end active call, touch **End** or press **Home** Key and slide the notification bar down and select **End call**.

**NOTE: You are charged for each call you make.**

## Viewing your call logs

On the Home screen, touch  and choose the **Call log** tab. View a complete list of all dialed, received and missed voice calls.

### TIP!

- **Touch any call log entry to view the date, time and duration of the call.**
- **Press the Menu key, then touch Delete all to delete all the recorded items.**

## Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


1. On the Home screen, touch the **Applications** tab  to open the applications menu.
2. Scroll and touch **Settings**.
3. Tap **Call settings** and choose the options that you want to adjust.

## CONTACTS



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

### Searching for a contact

#### In the Home screen

1. Touch  to open your contacts.
2. Touch **Search** and enter the contact name using the keyboard.

### Adding a new contact


1. Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** tab and then **Create new contact**.
2. If you want to add a picture to the new contact, touch the image area.  
Choose from **Capture picture** or **Pick from Gallery**.
3. Select the contact type by touching .
4. Touch a category of contact information and enter the details

- about your contact.
5. Touch **Save**.


### Favourite contacts

You can classify frequently called contacts as favourites.

#### Adding a contact to your favourites



1. Touch  to open your contacts.
2. Touch a contact to view their details.
3. Touch the star to the right of the contact's name. The outline of star icon turns white.

#### Removing a contact from your favourites list

1. Touch  to open your contacts.
2. Touch the **Groups** tab, select **Favourites** at the top of the list and choose a contact to view their details.
3. Touch the white outlined star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

## Import or export contacts

To import/export contact files (in vcf format) from a storage memory (Internal storage/memory card) or SIM or USIM card to your device or vice versa.

1. Touch  to open your contacts.
2. Press  > **More** > **Import/Export**.
3. Select an desired option for importing/exporting.  
If you have more than one account, select an account to which you want to add the contact.
4. Select contact files to import/export and select **OK** to confirm.

## Moving Contacts from your Old Device to your New Device

Export your contacts as a CSV file from your old device to your PC using a PC sync program.

1. Install "LG PC Suite" PC software on the PC. Run the program and connect your device to the PC using a USB cable.

2. From the top of the screen, select **Device** > **Import personal information** > **Import contacts**.
3. A pop-up to open a contacts file will appear.
4. Select a contacts file and click **Open**.
5. A pop-up to import a new contact from PC to the contacts in the device will appear.
6. If the contacts in the device and new contacts from PC are different, select a contact you want to import from PC.
7. Click the [OK] button to import a new contact from PC to the device.

## MESSAGING


Your LG-P940 combines SMS and MMS into one intuitive, easy-to-use menu.

### Sending a message

1. Touch  icon on the home screen, and touch **New message** to open a blank message.
2. Enter a contact name or contact number in the **To** field.

As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE: You will be charged for a text message for every person you send the message to.**

3. Touch **Enter message** field and start to compose your message.
4. Press the **Menu** key  to open the Options menu. Choose from **Add subject, Attach, Send** and so on.
5. Touch **Send** to send your message.
6. The message screen opens, with your message after Recipient

Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

#### **WARNING:**

The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

#### **WARNING:**

If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

### Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

## Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the **Menu** key , then choose **Insert smiley**.


## Changing your message settings

Your LG-P940 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon  on the home screen and touch the **Menu** key , then tap **Settings**.

# CAMERA

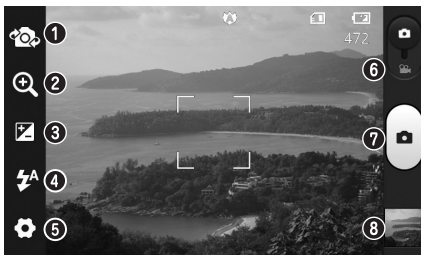

## Getting to know the viewfinder




- 1 Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 Brightness** – This defines and controls the amount of light entering the image.
- 4 Flash** – Allows you to turn on the flash when taking a photo in dark conditions.
- 5 Settings** – Touch this icon to open the advanced settings menu.
- 6 Video mode** – Slide this icon down to switch to video mode.
- 7 Capture** – Takes a photo.
- 8 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.


**NOTE:** The memory capacity may differ depending on the shooting scene or shooting conditions.

## Taking a quick photo







1. Open the **Camera** application.  
You can also press **Camera** key  directly.
2. Hold the phone, point the lens towards the subject you want to photograph.
3. Touch your finger on the subject from the screen and a focus box will appear.
4. When the focus box turns green, the camera has focused on your subject.
5. Touch the **Capture** icon  to take the picture.

## Once you've taken the photo


Touch  to view the last photo you captured.



-  Touch **Menu > Share** to share your photo using **SmartShare, Bluetooth, E-mail, Gmail, Messaging, Picasa, Social+, Google+.**

**TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.**










-  Touch **Menu > More > Set as** to use the image as a **Contact icon** or **Wallpaper.**
-  Touch **Menu > More > Edit** to edit the picture.
-  Long touch on View screen then touch  **Delete** and Confirm by touching  **Confirm Delete**
-  Touch to go to the view finder screen.

## Using the advanced settings

In the viewfinder, touch  to open all advanced options.

-  – Restore all camera default settings.
-  – Touch whenever you want to know how this function operates. This provides you with a quick guide.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

-  – Focuses on the specific spot.
-  – Select the image resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.
-  – Finds the color and light settings appropriate for the current environment. Choose from **Auto**, **Portrait**, **Landscape**, and **Sunset**.
-  – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions when you cannot use the flash.
-  – Improves colour qualities in different lighting conditions.
-  – Takes pictures a few seconds after clicking the shutter. This option is ideal if you want to be in the picture.
-  – Select the desired shot mode.
-  – Allows you to review images after taking pictures.
-  – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can

see the pictures displayed on a map.

**NOTE: This function is only available when GPS is active.**


**Storage** – Select storage to save images.

**TIP! When you exit the camera, some settings return to their defaults, such as white balance, timer and scene mode. Check these before you take your next photo.**

**TIP! The Settings menu is superimposed over the viewfinder so, when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.**

# VIDEO CAMERA

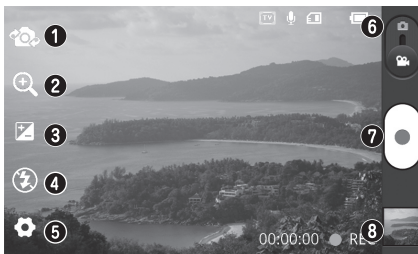


## Getting to know the viewfinder




- 1 Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 Brightness** – This defines and controls the amount of light entering the video.
- 4 Flash** – Allows you to turn on the flash when recording a video in dark conditions.
- 5 Settings** – Touch this icon to open the advanced settings menu.
- 6 Camera mode** – Slide this icon up to switch to camera mode.
- 7 Record** – Starts recording.
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.




**NOTE: The zoom function is not available while video recording.**

## Shooting a quick video

1. Slide the **Camera** mode button down and the icon changes to .
2. The video camera viewfinder appears on the screen.
3. Holding the phone, point the lens towards the subject you want to capture in your video.
4. Press the Record  button once to start recording.
5. **REC** appears at the bottom of the viewfinder with a timer showing the length of the video.
6. Touch  on the screen to stop recording.

## After shooting a video


Your captured video will appear on the Gallery. Touch  to view the last video you captured.


-  Touch to play the video.
-  Long touch on View screen then touch to **Share Video** using **SmartShare**, **Bluetooth**, **E-mail**, **Gmail**, **Messaging** or **YouTube**.
-  Touch to Go to the view finder screen.


 Long touch on View screen then touch  **Delete** and Confirm by touching  **Confirm Delete**.


## Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.


 – Restore all video camera default settings.


 – Touch if you want to know how this function operates. This provides you with a quick guide. Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.

 – Touch to set the size (in pixels) of the video you are recording.

 **WB** – Improves colour qualities in different lighting conditions.

 – Choose **Mute** to record a video without sound.

 – Auto review automatically shows you the video you just recorded.


 **Storage** – Select storage to save videos.

## **Adjusting the volume when viewing a video**

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

## UTILITIES

### Setting your alarm

1. **Applications > Alarm/Clock >**  **> New alarm.**
2. Set the **time, Repeat, Snooze duration, Vibration, Alarm tone** and **Puzzle lock** then add a label to name the alarm. Touch **Save.**
3. After you save the alarm, the LG-P940 lets you know how much time is left before the alarm will sound.

### Using your calculator

1. **Applications > Calculator.**
2. Touch the number keys to enter numbers.
3. For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
4. For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose sin, cos, tan, log and so on.

### Adding an event to your calendar

1. **Applications > Calendar.**
2. To check the event, touch the date. Touch the **Menu** key if you want to add a new event. Touch **New event.**
3. Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.
4. Also touch **Where** then enter the location.
5. If you want to add a note to your event, touch **Description** and enter the details.
6. If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
7. Touch **Save** to save the event in the calendar.

### Changing your calendar view

1. **Applications > Calendar.**
2. On the top of the screen, you can find the different view types of the Calendar (Day, Week, Month, Agenda).

## **Polaris Office**

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

### **Managing files**

Polaris Office provides mobile users with convenient file management features, including copying, cutting and pasting, and deleting files and folders right on the device.







### **Viewing files**

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

## LG ON-SCREEN PHONE 2.0

LG On-Screen Phone 2.0 allows you to view your mobile phone screen from a PC via a USB, Bluetooth, or Wi-Fi connection. You can also control your mobile phone from your PC using the mouse or keyboard.

### On-Screen Phone 2.0 icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available in applications that support rotation).
-  Launches LG Home Panorama or changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone program.
-  Maximises the On-Screen Phone window.
-  Minimises the On-Screen Phone window.

## On-Screen Phone 2.0 features

- **Real-time transfer and control:** Displays and controls your mobile phone screen when connected to your PC.
- **Mouse control:** Allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- **Text input with keyboard:** Allows you to compose a text message or note using your computer keyboard.
- **File transfer (mobile phone to PC):** Sends a file from your mobile phone (e.g. Gallery, Video Player, Music and Polaris Office) to your PC. Simply right-click and drag to send a file to your PC.
- **File transfer (PC to mobile phone):** Sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the On-Screen Phone window. The files you send are stored on OSP folder.
- **Real-time event notifications:** Prompts a pop-up to inform you of any incoming calls or

text, as well as alarm and event notifications.

- **LG Home Panorama:** Shows the whole workspaces of LG Home. You can easily organise icons or widgets and run an application by double-clicking the shortcut.

**NOTE: Please make sure LG Home is the default launcher. LG Home Panorama is only supported on LG Home. Some widgets cannot be launched.**

## Installing On-Screen Phone on your PC

1. Visit LG Home ([www.lg.com](http://www.lg.com)) and select a country of your choice.
2. Go to **Support > Mobile Phone Support >** Select the Model (LG-P940) > Click **OSP** ( On-Screen Phone ) to download. You can install the On-Screen Phone on your PC.

## Connecting your phone to your PC

On-Screen Phone 2.0 provides USB, Bluetooth and Wi-Fi connection. Please follow the instruction on Connection Wizard of OSP program.

### NOTE:

- Please make sure that **On-Screen Phone** check box in **Settings > Connectivity > On-Screen Phone** is selected.
- Please be aware that the battery may run out more quickly due to the current consumption if **On-Screen Phone** is connected via **Wi-Fi**.
- When you connect your mobile phone to a PC using a portable hotspot and use the Internet on the PC, it automatically switches to the 3G network. Then, additional data charges may apply depending on your data plan.

- **Wireless connection through Wi-Fi may not work properly depending on your network configuration or condition.**
- **Zooming the phone screen may slow the phone down.**

### **USB connection:**

1. Open the On-Screen Phone application. Click Connection Wizard and select “USB Cable connection”, then click “Next”.
  2. Connect your mobile phone to the PC using a USB cable and click “Next”.
  3. Enter the On-Screen Phone password and click “Next”. The default password is “0000”. You can change the password in **Settings > Connectivity > Change Password**.
  4. Click “OK” to exit the window.
2. If you have previously connected using a cable, run the New Connection Wizard to create a new connection.
  3. Run the Connection Wizard on the computer, select “Bluetooth connection”, then “Next”.
  4. The wizard will start searching for Bluetooth-enabled mobile phones. When the mobile phone you want to connect to appears, click “Stop” to stop searching.
  5. Select “**LG-P940**” from the device list and click “Next”. You can rename the device if you wish.
  6. Enter the PIN code (e.g. “0000”) and click “Next”.
  7. On your mobile phone, accept the request and enter the same PIN code, then touch “OK”.
  8. Enter the On-Screen Phone password and click “Next”. (The default password is “0000”).
  9. Touch “OK” to exit.

### **Wireless connection with Bluetooth:**


1. On your mobile phone, go to **Settings > Wireless & networks > Bluetooth settings**. Select Bluetooth to turn it on and then select **Discoverable**.

Wireless connection with Wi-Fi

## Checking the On-Screen Phone connection

Once the device is connected, drag down the status bar at the top of the home screen to check the On-Screen Phone connection status.

## Disconnecting your phone from your PC

Click  in the top left of the On-Screen Phone window. Or drag down the notification bar at the top of the home screen and select "On-Screen Phone connected". Select "Disconnect On-Screen Phone" menu and touch "Disconnect" in the disconnect dialog.

## SETTINGS

In the Home screen, touch the **Applications** tab  then scroll and touch **Settings**.

### Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

**Airplane mode** – After switching to airplane mode, all wireless connections are disabled.

**Wi-Fi** – Turns on Wi-Fi to connect to available Wi-Fi networks.

**Wi-Fi settings** – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

**Wi-Fi Direct settings** – Tick the check box to make Wi-Fi Direct active. Set Wi-Fi Direct device name and scan for other devices.

### TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P940 into the router.

You can find the MAC address in the following user interface: Touch Application > Settings > Wireless & networks > Wi-Fi settings and press the Menu key. Then select Advanced > MAC Address.

- **Bluetooth** – Turn the Bluetooth wireless feature on or off.
  - ▶ Refer to page 41.
- **Bluetooth settings**
  - **Device name:** Set a Bluetooth name for your device.
  - **Discoverable:** Set your device to be visible to other Bluetooth devices.
  - **Scan for devices:** Set your device to be visible to other Bluetooth devices.

**NOTE:**

**Press Menu to change the Contact transfer setting.**

- **Send as one file: Send contacts as a nested vCard.** This may reduce transfer time, but old devices may not support this mode on receiving contacts.
- **Send separately: Send each contact as a single vCard.** When old devices can not receive all contacts, choose this.

**Portable hotspot** – You can configure the portable Wi-Fi hotspot settings.

**VPN settings** – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

**NFC** – Turns on NFC to read and exchange tags.

**Mobile networks** – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

## Call settings

### < Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

### < Voicemail >

**Voicemail service** – Allows you to select your carrier's voicemail service.

**Voicemail settings** – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

### < Other call settings >

**Call reject** – Allows you to set the call reject function. Choose from **Off**, **Reject on list** or **Reject all calls**.

**Call forwarding** – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

**Additional settings** – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are in another call (depending on your network provider).

**Call barring** – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

**Call costs** – View the charges applied to your calls. (This service is network dependent; some operators do not support this function).

**Call duration** – View the duration of calls including all calls, dialled calls, received calls and last call.

**Excuse messages** – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

## Sound

### < General >

**Silent mode** – Allows you to mute all sounds (including call and notification ringtones) except the audio from music and videos and any alarms you have set. You can mute media and alarm sounds in their own applications.

**Vibrate** – Allows you to set your phone to vibrate when you receive an incoming call.

**Volume** – Allows you to set the volume for ringtone, media and alarm. If you uncheck the option "Use ringtone volume for notifications" you can set the volume for incoming calls and notifications separately.

### < Incoming calls >

**Phone ringtone** – Allows you to set your default incoming call ringtone.

### < Notifications >

**Notification ringtone** – Allows you to set your default notification ringtone.

## < Feedback >

**Audible touch tones** – Allows you to set the phone to play tones when using the dialpad to dial numbers.

**Audible selection** – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

**Screen lock sounds** – Allows you to set your phone to play a sound when locking and unlocking the screen.

**Haptic feedback** – Allows you to set your phone to vibrate briefly when you touch the soft keys and on certain UI interactions.

## Display

**Brightness** – Adjust the screen brightness.

**Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.

**Animation** – Set to display an animation.

**Screen timeout** – Set the time for screen timeout.

**Display font** – Change the display font.

## Gesture

Adjust the gesture settings for home screen, incoming call, alarm or video player.

**Rearrange items** - If you checkmark this, you can relocate an item to other home screens by touching and holding an item and tilting the device.

**Mute** - Checkmark this to mute the incoming call by flipping the phone over while the phone is ringing.

**Snooze (Stop)** - Checkmark this to snooze(Stop) the alarm by flipping the phone over.

**Pause** - Checkmark this to pause the video by flipping the phone over.

## Location & security

### <My location>

**Use wireless networks** – If you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

**Use GPS satellites** – If you select **Use GPS satellites**, your phone determines your location to street level accuracy.

#### <Screen unlock>

**Set up screen lock** – Set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern** or leave it as **None**. When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

#### <SIM card lock>

**Set up SIM card lock** – Set up SIM card lock or change the SIM PIN.

#### <Passwords>

**Visible passwords** – Select to show passwords as you type them or deselect to hide passwords as you type them.

#### <Device administration>

##### **Select device administrators**

– Add one or more administrators.

##### <Credential storage>

**Use secure credentials** – Allows you to access secure certificates.

**Install from SD card** – Choose to install encrypted certificates from your SD card.

**Set password** – Set or change the credential storage password.

**Clear storage** – Clear credentials for all content and reset password.

## Applications

You can view and manage the applications.

**Unknown sources** – Default setting to install non-Market applications.

### **WARNING:**

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Android Market.

**Manage applications** – Manage and remove installed applications.

**Running services** – Check services that are currently running.

**Storage use** – View storage used by applications.

**Battery use** – See what has been using the battery.

**Development** – Set options for application development.

## Accounts & sync

< **General sync settings** >

**Background data** – Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

**Auto-sync** – Permits applications to synchronise, send and receive data to their own schedule.

< **Social+ update settings** >

**Social+ settings** – Permits to set up optimised social network widget environment.

< **Manage accounts** >

List of all Google accounts and other accounts you have added to your phone. If you touch an account in this screen, its account sync settings screen opens.

## Privacy

Change the settings for managing your settings and data.

- **Back up my data:** Set to back up your settings and application data to the Google server.
- **Automatic restore:** Set to restore your settings and application data when the applications are reinstalled on your device.
- **Factory data reset:** Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

### NOTE:

- **If you select Factory data reset, it will erase all of your personal data from your phone's system memory, including information about your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM license.**
- **Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card or internal memory, such as music or photos. And so, if you want to erase all the data on the internal memory while resetting the phone, select the check box of Erase internal memory.**

## Storage

Check memory information of memory cards and your device and format the external or internal memory.

You can also unmount the memory card(SD card) to safely remove it or format it.

## Language & keyboard

Use the Language & keyboard settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

## Voice input & output

Set Voice recogniser settings and use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

### < Voice input >

**Voice recogniser settings** – Use the **Voice recogniser settings** to configure the Android voice input feature.

- **Language:** Opens a screen where you can set the language you use

speech to enter text.

- **SafeSearch:** Opens a dialog box where you can set whether you want the Google SafeSearch filter to block certain results.
- **Block offensive words:** When deselected, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When selected, Google voice recognition replaces those words in transcriptions with a placeholder comprised of star symbols ( \* ).

### < Voice output >

**Text-to-speech settings** – Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

**NOTE: If you don't have speech synthesiser data installed, only the Install voice data setting is available.**

- **Listen to an example:** Plays a brief sample of the speech synthesiser, using your current settings.

- **Always use my settings:** Check to use the settings on this screen rather than the speech synthesiser settings available in other applications.
- **Default engine:** Opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.
- **Speech rate:** Opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful when combined with **Always use my settings** to ensure text is spoken correctly across a variety of applications.
- **Pico TTS:** Configure the **Pico TTS settings**.

## Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

**NOTE: Requires additional plug-ins.**

## Connectivity

<USB connection mode>

**Default connection mode** - You can set the desired mode(**Charge only, Mass storage, PC software, and USB tethering**)

**Always ask** - Checkmark this to select the USB connection mode whenever you connect your phone to a PC.

<On-Screen Phone settings>

**On-Screen Phone** - Checkmark this to use On-Screen Phone. See On-Screen Phone on page 65.

**Disconnect On-Screen Phone** - Select to disconnect On-Screen Phone.

**Change password** - Select to change the On-Screen Phone password.

## <PC Suite>

**Wi-Fi connection** - Checkmark this to use **LG PC Suite** with Wi-Fi connection.

Please note that Wi-Fi network should be connected for LG PC Suite via Wi-Fi connection in **Wireless & networks settings**.

## Date & time

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

## About phone

View legal information and check phone status and software version.

## PC SOFTWARE(LG PC SUITE)

“LG PC Suite” PC software is a program that helps you connect your device to a PC via a USB, or Wi-Fi connection. Once connected, you can use the functions of your device from your PC.

### With your “LG PC Suite” PC software, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the software in your device.
- Backup and restore the device.
- Play multimedia contents in your PC from another device.

**TIP!** You can use the Help menu from the application to find out how to use your “LG PC Suite” PC software.

### Installing “LG PC Suite” PC software

“LG PC Suite” PC software can be downloaded from the webpage of LG.

1. Go to [www.lg.com](http://www.lg.com) and select a country of your choice.
2. Go to **Support > Mobile Phone Support >** Select the Model (LG-P940).
3. Click **PC Sync** from **Downloads**, and click **WINDOW PC Sync Download** to download “LG PC Suite” PC software.

### System Requirements for “LG PC Suite” PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1GHz or higher processor
- Memory: 512MB or higher RAM
- Graphic card: 1024 x 768 resolution, 32 bit color or higher

- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers.


### NOTE: LG Integrated USB Driver

- LG integrated USB driver is required to an LG device to a PC. It is installed automatically when you install “LG PC Suite” PC software.

## Connecting your Device to your PC

“LG PC Suite” PC software can connect a device with a USB cable or Wi-Fi.

### How to connect a device with USB cable

1. Click  on the top of the screen.
2. Device storage section will be created in the library section on the left side of the screen and the device will be connected.

**NOTE: When you select the connection mode from the device, choose ‘PC Software’ to connect.**

### How to establish wireless connection with Wi-Fi

Wi-Fi connection for device, Ethernet connection for PC with same wireless router:

- Device configuration
  1. From your device, select **Settings > Wireless & Networks > Wi-Fi Settings** and enable the Wi-Fi.
  2. From the list of Wi-Fi network searched, select a network to connect.
  3. You may need to enter the password if the network is secured.
  4. From your device, select **Settings > Connectivity > enable the Wi-Fi Connection.**
- PC configuration
  1. Go to **Network Configuration.**
  2. Make sure that the PC is connected to the same network to which the device is connected.

Wi-Fi connection for both device and PC, with same wireless router:


- Device configuration
  1. From your device, select **Settings > Wireless & Networks > Wi-Fi Settings** and enable the Wi-Fi.
  2. From the list of Wi-Fi network searched, select a network to connect.
  3. You may need to enter the password if the network is secured.
  4. From your device, select **Settings > Connectivity > enable the Wi-Fi Connection.**
- PC configuration
  1. Go to **Network Configuration.**
  2. Make sure that the PC is connected to the same network to which the device is connected.

How to connect with Hotspot:

- Device configuration
  1. Select **Settings > Wireless & networks > Portable Wi-Fi hotspot** to configure the Wi-Fi Hotspot.

2. From the step 1, select **Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot** remember the SSID information of the network.
- PC configuration
    1. Go to **Network Configuration.**
    2. Make sure that the PC is connected to the same portable hotspot.

**Please read the above and follow the procedures below.**

1. Click  on the top of the screen.
2. Then select Wi-Fi connection.
3. Please follow the instruction on Connection Wizard.
4. Device storage section will be created in the library section on the left side of the screen and the device will be connected.

**NOTE:**

- **If you cannot find the device to connect, From the device select Settings > Connectivity > Enable Wi-Fi connection and click Retry in PC .**
- **You may experience bad Wi-Fi connection depending on network configuration and network status.**
- **If you connect the device and PC with Hotspot and use the Internet on your PC, you may incur data charges in connection with Hotspot depending on your payment plan.**
- **The battery of your device may run low quickly if you use Wi-Fi.**

## Synchronising your Device to a Computer

Data from your device and PC can be synchronised easily with “LG PC Suite” PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.

The procedure is as follows:

1. Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
2. After connection, run the program and select the device section from the category on the left side of the screen.
3. Click [Personal information] to select.
4. Select the checkbox of contents to synchronise and click the **Sync** button.

## Moving Contacts from your Old Device to your New Device

Export your contacts as a CSV file from your old device to your PC using a PC sync program.

1. Install "LG PC Suite" PC software on the PC. Run the program and connect your device to the PC using a USB cable.

2. From the top of the screen, select **Device > Import personal information > Import contacts**.
3. A pop-up to open a contacts file will appear.
4. Select a contacts file and click **Open**.
5. A pop-up to import a new contact from PC to the contacts in the device will appear.
6. If the contacts in the device and new contacts from PC are different, select a contact you want to import from PC.
7. Click the [OK] button to import a new contact from PC to the device.
6. Click **Start** to transfer contents from the device to PC.

## **Sending Multimedia contents from Device to PC**

1. Connect the device and PC with a USB cable.
2. Run "LG PC Suite" PC software.
3. After connection, select the device section from the category on the left side of the screen.
4. Select **Multimedia**.
5. Select the checkbox of the contents to send.

## BACKUP & RESTORE

### About backing up and restoring smart phone data


It recommends that you regularly create and save a backup file on the Storage card, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue. This Backup & Restore application support between LG smart phones, other S/W version or OS. And so, when you buy the new LG smart phone, you can back up the current LG-P940 smart phone data on your new one.

If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Applications** including unprotected applications, their settings, **Bookmarks, Calendar, Call log, Contacts, Messages, and System settings** using this application.

- To perform a manual backup of your smart phone data.
- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.

### Back up your smart phone data


**NOTE: To back up data that is in your on-board device memory, the Storage Card(memory card) must be inserted. For more information on inserting the Storage Card(memory card), see the Using the memory card chapter.**

1. Insert to the memory card into the slot and check out the storage status.
2. Touch the **Application** tab , and then select **Backup & Restore > Backup > Storage Card**.
3. Touch the **Add new** to enter a name for your backup file, and then select **Continue**.
4. Select the check box next to the item you want to back up, and then select **Continue** to back up.
5. When all selected files backed

up, you will see the message '**Done**' and select **Continue** to finish backing up data.

### Scheduling automatic backups

You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:


1. Insert to the memory card into the slot and check out the storage status.
2. Touch the **Application** tab , and then select **Backup & Restore > Schedule**.
3. On the **Scheduled Backup Location** screen, touch **Storage Card**.
4. From the list, select how often you want to back up your device data and settings, and select **Continue**.
5. Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

### Restoring smart phone data

To restore data that is in your

on-board device memory, mass storage mode must be turned off.

**NOTE: All files that are stored on your smart phone are deleted before the backup file is restored.**

1. Insert to the memory card into the slot and check out the storage status.
2. Touch the **Application** tab , and then select **Backup & Restore > Restore > Storage Card**.
3. On the **Restore** screen, select a backup file that contains the data you want to restore.
4. Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.


**NOTE: Please note that your phone data will be overwritten with the contents of your backup.**

5. If the backup file is encrypted, type the password that you set to encrypt.


6. When all selected files restored, you will see the message '**Done**' and select **Yes** to restart the phone.

**NOTE:**

- While in Mass storage mode, this Back & Restore Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.

Press the **Menu**  from the **Backup & Restore** screen, and select **Settings > Security** and select the check box. And after enabling encryption, To restore synchronized organizer data, you must have an activation password.

**NOTE:**

- You can also enable automatic delete old backups and only keep the most recent backup. Press the Menu  from the Backup & Restore screen, and select Settings > Scheduled backup > Auto delete old backups to select the number of scheduled backups to keep.
- When you insert a memory card in your smart phone, the file directory of the memory card will appear in the Polaris Office / My folders/\_ ExternalSD/spritebackup folder under the Storage Memory (when memory card is inserted.).
- Backup allows a user to immediately back up what the user selects. (Application and application data, Contacts, Messages, Call log, Calendar, Bookmarks) For the recent backup history, if there is no history of backups, "No backup" is displayed ; if there is history, up to two backed up files are displayed.

**NOTE:**

- **Restore** allows a user to restore backed up items when the user wants using backup files. The Restore application can be used on the backed up smart phone as well as other LG smart phones.
- **Schedule** allows a user to set a time for a scheduled backup by automatically generating a backup file at a desired time such as an early morning when the user usually does not use the phone. No scheduled backup is set by default if there is no previous setting through Schedule; otherwise, the time of next scheduled backup is displayed.

## PHONE SOFTWARE UPDATE

### LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language. This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

**NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.**

### LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone:

**Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours, or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

**NOTE: This feature is dependent on your network service provider, region and country.**

## Trademarks

- Copyright 2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

### DivX Mobile **DivX**

**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to

convert your files into DivX videos.

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration. **DivX Certified® to play DivX® video up to HD 720P, including premium content. DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.**

### Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>  
All referred licence terms, disclaimers and notices are available for download with the source code.



Manufactured under license from DTS Licensing Limited. DTS and the Symbol are registered trademarks, & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## ACCESSORIES

These accessories are available for use with the LG-P940. **(Items described below may be optional.)**

### Travel adaptor



**Data cable**  
Connect your LG-P940 and PC.



### Battery



**User Guide**  
Learn more about your LG-P940.



### Stereo headset



#### **NOTE:**

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

# TECHNICAL DATA

## Ambient Temperatures

**Max:** +55°C (discharging), +45°C (charging)

**Min:** -10°C

## LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;  
Bookala, Thonburi, Bangkok 10600  
Working day : Mon - Sun 07:00  
- 19:00

**Call center : 0-2878-5757**

### Declaration of Conformity



#### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

#### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG P990

Trade Name

LG

**CE 0168**

#### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 490-1 V18.0.1 / EN 301 490-2 V14.1 / EN 301 490-3 V1.1.1  
EN 301 490-1 V2.3.1 / EN 301 490-10 V1.2.1 / EN 301 490-24 V1.1.1  
EN 301 590 V1.2.1  
EN 60950-1:2006-A1:2006  
EN 50369:2005/AC:2006 / EN 50369-1:2006 / EN 50369-2:2006  
EN 301 511 V8.2.2  
EN 301 488 V16.2.1 / EN 301 488-2 V16.2.1  
EN 301 201-1 V1.1.1 / EN 301 201-2 V1.1.1  
EN 301 488 V3.2.1

#### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BART)

BART, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number: 0168

#### Declaration

I hereby declare under our sole responsibility  
that the product mentioned above to which this  
declaration relates complies with the above mentioned  
standards and Directives.

Name  
Doo Haeng Lee/Director

Issued Date  
13. Dec. 2011

LG Electronics Logistics and Services B.V.  
Viluveezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

## TROUBLESHOOTING

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6-12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.


<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Calls not available	Dialling error New SIM card inserted. Pre-paid charge limit reached.	New network not authorised. Check for new restrictions.  Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts.
Charging error	Battery is not charged. Outside temperature is too hot or cold. Contact problem  No voltage  Charger defective  Wrong charger Battery defective	Charge battery.  Make sure phone is charging at a normal temperature.  Check the charger and connection to the phone. Check the battery contacts and clean them if necessary. Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.



<b>Message</b>	<b>Possible causes</b>	<b>Possible corrective measures</b>
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove and re-insert battery. Turn on the phone. Try to do a software update service via the website.


## FAQ

Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

<b>Category Sub- Category</b>	<b>Question</b>	<b>Answer</b>
<b>BT</b> Bluetooth Devices	What are the functions available via Bluetooth?	You can connect Bluetooth audio device such as Stereo/Mono headset, Car Kit and share pictures, videos, contacts, etc via Gallery/Contacts menu. Also when FTP server is connected to a compatible device, you can share contents stored in the storage media (internal memory or SD card).
<b>BT</b> Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
<b>Data</b> Contacts Backup	How can I back up Contacts?	The Contacts data can be synchronised between your phone and Gmail™.

Category Sub- Category	Question	Answer
<b>Data</b> Synchronisation	Is it possible to set up one-way sync with Gmail?	Only two-way synchronisation is available.
<b>Data</b> Synchronisation	Is it possible to synchronise all the Email folders?	The Inbox is automatically synchronised. You can view other folders by pressing the <b>Menu Key</b>  and touch <b>Folders</b> to choose a folder.
<b>Google™ Service</b> Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you log into Gmail, you don't need to log in Gmail again.
<b>Google Service</b> Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
<b>Phone Function</b> YouTube™	Is it possible to play YouTube videos?	Yes, YouTube videos are supported but may have to be viewed through the YouTube application (and not the browser).
<b>Phone Function</b> Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
<b>Phone Function</b> Ringtone	Is there a file size limitation for when I want to use a .MP3 file as a ringtone?	There is no file size limitation.




Category Sub- Category	Question	Answer
<b>Phone Function</b> Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.
<b>Phone Function</b> microSD Card	What is the maximum supported size for a memory card?	32 GB memory cards are compatible.
<b>Phone Function</b> Navigation	Is it possible to install another navigation application on my phone?	Any application that is available on Android Market™ and is compatible with the hardware can be installed and used.
<b>Phone Function</b> Synchronisation	Is it possible to synchronise my contacts from all my email accounts?	Only Gmail and MS Exchange server(Company Email Server) contacts can be synchronised.
<b>Phone Function</b> Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the W &amp; P functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> <li>1. From the Home screen, press the <b>Phone</b> icon .</li> <li>2. Dial the number, then press the <b>Menu</b> <b>Key</b> .</li> <li>3. Touch <b>Add 2-sec pause</b> or <b>Add wait</b>.</li> </ol>


Category Sub- Category	Question	Answer
<b>Phone Function Security</b>	What are the phone's security functions?	You are able to set the phone to require the entry of an Unlock Pattern before the phone can be accessed or used.
<b>Phone Function Unlock Pattern</b>	How do I create the Unlock Pattern?	<ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b> .</li><li>2. Touch <b>Settings &gt; Location &amp; security</b>.</li><li>3. Touch <b>Set up screen lock &gt; Pattern</b>. The first time you do this, a short tutorial about creating an Unlock Pattern appears.</li><li>4. Set up by drawing your pattern once, then again for confirmation.</li></ol> <p><b>Precautions to take when using pattern lock.</b></p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.</p>

---

Category Sub- Category	Question	Answer
<b>Phone Function</b> Unlock Pattern	What should I do if I forgot the Unlock Pattern and I didn't create the Google account on the phone?	<p>If you have forgotten unlock pattern and if you have not logged in to your google account then you need to perform a hard reset(Factory reset).</p> <p><b>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.</b></p> <p>How to perform a Hard reset(factory reset):</p> <ol style="list-style-type: none"><li>1. Turn the power off.</li><li>2. Press and hold the following keys at the same time(for over 10 seconds): <b>Power/ Lock key + Camera key + Volume Down Key</b></li><li>3. The phone will turn on and perform a factory reset immediately.</li></ol>
<b>Phone Function</b> Memory	Will I know when my memory is full?	Yes, you will receive a notification.


---

Category Sub- Category	Question	Answer
<b>Phone Function</b> Language Support	Is it possible to change the language?	<p>The phone has multilingual capabilities. To change the language:</p> <ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b>  and touch <b>Settings</b>.</li><li>2. Touch <b>Language &amp; keyboard &gt; Select language</b>.</li><li>3. Touch the desired language.</li></ol>
<b>Phone Function</b> VPN	How do I set up a VPN?	<p>VPN access configuration is different according to each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.</p>
<b>Phone Function</b> Screen out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b> .</li><li>2. Touch <b>Settings &gt; Display</b>.</li><li>3. Under Display settings, touch <b>Screen timeout</b>.</li><li>4. Touch the preferred screen backlight timeout time.</li></ol>
<b>Phone Function</b> Tactile feedback	I've turned on haptic feedback on my phone. However, when I dial a number, the phone still vibrates. How do I turn this off?	<ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b> .</li><li>2. Touch <b>Settings &gt; Sound</b>.</li><li>3. Touch <b>Haptic feedback</b> to remove the checkmark and disable the function.</li></ol>

Category Sub- Category	Question	Answer
<b>Phone Function</b> Wi-Fi & 3G	When Wi-Fi and 3G are both available, which service will my phone use?	When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other. To know which data connection is being used, view the 3G or Wi-Fi icon at the top of your screen.
<b>Phone Function</b> Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the dustbin icon appears at the bottom-center of the screen. Then, without lifting your finger, drag the icon to the trash can.
<b>Phone Function</b> Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b> .</li><li>2. Touch <b>Settings &gt; Applications &gt; Manage applications</b>.</li><li>3. Touch the application, then touch <b>Uninstall</b>.</li></ol>
<b>Phone Function</b> Charger	Is it possible to charge my phone by USB data cable without installing the necessary USB driver?	Yes, the phone will get charged by the USB cable irrespective of whether the necessary drivers are installed or not.

Category Sub- Category	Question	Answer
<b>Phone Function</b> Alarm	Can I use music files for my Alarm?	Yes. After saving a music file as a ringtone, you can use it for your alarm. <ol style="list-style-type: none"><li>1. Touch and hold a song in a library list. In the menu that opens, touch <b>Use as ringtone</b>.</li><li>2. In an alarm clock setting screen, select the song as a ringtone.</li></ol>
<b>Phone Function</b> Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
<b>Phone Function</b> Alarm	If my Ringer Volume is set to Off or Vibrate, will I hear my Alarm?	Your Alarm is programmed to be audible even in these scenarios.

---

Category Sub- Category	Question	Answer
<b>Recovery Solution</b> Factory data reset	How do I perform a Factory data reset?	<p>Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.</p> <ol style="list-style-type: none"><li>1. From the Home screen, press the <b>Menu Key</b> .</li><li>2. Touch <b>Settings &gt; Privacy &gt; Factory data reset</b>.</li><li>3. Read the warning and touch <b>Reset phone</b>.</li><li>4. Touch <b>Erase everything</b>.</li></ol> <p><b>Attention:</b></p> <ul style="list-style-type: none"><li>• If you select Factory data reset, it will erase all of your personal data from your phone's system memory, including information about your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM license.</li><li>• Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card or internal memory, such as music or photos. And so, if you want to erase all the data on the internal memory while resetting the phone, select the check box of Erase internal memory.</li></ul>

---

---

Category Sub- Category	Question	Answer
<b>Recovery Solution</b> Hard Reset (Factory Reset)	How can I perform a factory reset if I can't access the phone's setting menu?	How to perform a Hard Reset (Factory Reset): 1. Turn the power off. 2. Press and hold the following keys at the same time(for over 10 seconds): <b>Power/ Lock key + Camera key + Volume Down Key</b> 3. The phone will turn on and perform a factory reset immediately. <b>Attention:</b> <b>If a factory reset is performed, all installed applications and user data will be erased. Please remember to back up any important data before performing a factory reset.</b>

---

