



繁體中文
简体中文
ENGLISH



用戶指南

LG-P970



P/N: MFL67204218(1.1) **H**

www.lg.com



LG-P970 用戶指南 – 繁體中文

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同, 這並不會另行通知。
- 由於使用觸控屏幕鍵盤, 我們不建議視障人士使用此手機。
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。



內容

重要通知	5	Google 帳戶設定	26
1. 手機記憶體	5	建立您的 Google 帳戶	26
2. 延長電池電量	5	登入您的 Google 帳戶	26
3. 安裝開源的作業系統	6	通話 / 聯系	28
4. 使用解鎖圖案	7	撥打語音通話	28
5. 連接至 Wi-Fi 網絡	7	撥打視像通話	28
6. 開啟及切換應用程式	8	視像通話功能表	28
7. 安裝 LG PC suite 至您的電腦	9	從通訊錄中撥打電話	28
8. 透過 USB 連接手機至電腦	13	接聽來電和拒接來電	29
9. 使用數據連接時解鎖螢幕	14	調整通話音量	29
10. 在開啟/關閉您的電腦時，請勿 連接您的手機	14	通話期間撥打第二個電話	29
11. 垂直手機	14	檢視通話記錄	30
12. 如果螢幕凍結	14	通話設定	30
了解您的手機	15	通訊錄	31
安裝智能卡及電池	17	搜尋通訊錄	31
為手機充電	18	新增通訊錄	31
安裝記憶卡	18	常用的通訊錄	32
格式化記憶卡	19	訊息/電郵	33
您的桌面	20	訊息	33
觸控屏幕小秘訣	20	發送訊息	33
鎖定您的手機	20	更改訊息設定	34
解鎖螢幕	21	設定您的電子郵件	34
主頁	21	其他 (POP3, IMAP)	
在您的桌面上新增 widget	22	電子郵件帳戶	34
查看最近使用的應用程式	22	其他 (POP3, IMAP, GME) 電子郵件 帳戶	34
螢幕鍵盤	25	編寫及發送電子郵件	35
輸入重音字母	25	處理帳戶資料夾	36
		新增及編輯電子郵件帳戶	36

社交網絡	38	如何將音樂/影片檔案儲存至手機	50
新增您的帳戶至手機	38	如何從您的舊手機上的聯絡資料移	
檢視及更新您的狀態	38	到現在的手機	50
從手機移除帳戶	39	如何透過藍芽發送手機中的資料	51
相機	40	Google 應用程式	53
瞭解取景器	40	地圖	53
快速拍照	41	Market	53
拍攝相片後	41	Gmail	53
使用進階設定	41	Talk	53
使用對焦模式	43	Google 搜尋	53
檢視已儲存的相片	43	實用程式	54
視像攝錄機	44	設定鬧鐘	54
瞭解取景器	44	使用計算機	54
拍攝快速影片	45	新增事件至日曆	54
拍攝影片後	45	錄製聲音或語音	55
使用進階設定	45	發送錄音	55
觀看已儲存的影片	46	網絡功能	56
觀看影片時調整音量	46	瀏覽器	56
多媒體	47	使用選項	56
媒體匣	47	設定	57
更改圖片集內容的顯示方式	47	無線網絡	57
音樂	48	聲音	58
播放歌曲	48	顯示	58
使用收音機	48	筆觸	59
搜尋電台	49	位置與安全性	59
收聽電台	49	應用程式	60
使用 USB 大容量儲存裝置傳送		帳號與同步處理設定	60
檔案	49	私隱	61

內容

SD 卡與手機儲存	61	版權和商標	70
語言與鍵盤	61	配件	72
語音輸入與輸出	61	技術數據	73
可存取性	62	疑難排解	74
日期與時間	62		
關於手機	62		
Wi-Fi	62		
開啟 Wi-Fi	62		
連接至 Wi-Fi	62		
共享手機的流動數據連接	63		
可攜式 Wi-Fi 熱點設定	63		
要將手機的數據連接以可攜式熱點 的形式分享	64		
要重新命名或保護可攜式熱點 ..	64		
使用 SmartShare	65		
要使用 SmartShare 允許分享及播 放內容	65		
啟用 Wi-Fi Direct 透過 SmartShare 進行分享	66		
如何使用螢幕上的手機	66		
螢幕上的手機圖示	67		
螢幕上的手機功能	67		
如何在電腦上安裝 On-Screen 手機	67		
如何將手機連接至電腦	68		
要檢查手機至電腦連接	68		
中斷電腦與手機的連接	68		
手機軟件更新	69		

重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

當手機記憶體的可用空間少於 10%，您的手機便不能再接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要管理應用程式：

- 1 從主頁點按**應用程式**標籤，然後選擇**設定** > **應用程式** > **管理應用程式** > 執行中。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按解除安裝然後點按確定，以卸載該應用程式。

2. 延長電池電量

您可關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池時間。您亦可監控應用程式及系統資源的電池電量消耗。

延長您的電池用量：

- 關閉非使用中的無線電通訊。不使用 Wi-Fi、藍芽或 GPS 時，請關閉這些應用程式。
- 調低屏幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少您的電池壽命。

要檢查電池充電量：

- 1 從主頁點按**應用程式**標籤，選擇**設定** > **關於手機** > **狀態**。
- 2 電池狀態（充電中、放電中）及電池存量（相對於完全充電的百分比）會在螢幕顯示。

重要通知

要監察及控制電池使用情況：

- 1 從主頁點按**應用程式**標籤，選擇**設定** > **關於手機** > **電池使用狀況**。
- 2 螢幕會顯示電池使用時間：這是您最後把手機連接到電源的時間，或如果已連接到電源，就是您的手機最後使用電池電力運作的時間。 屏幕內容會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

3. 安裝開源的作業系統

如果在手機上安裝開源作業系統，而不再使用製造商提供的作業系統，可能會導致您的手機出現故障。

警告

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Android Market。 如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正常地運作或出現嚴重錯誤。 您需要從手機卸載這些應用程式以及其所有的數據及設定。

警告

如果您安裝及使用並非由製造商提供的作業系統，您的手機將不再受保養。

4. 使用解鎖圖案

設定解鎖圖案以保護您的手機。
開啟一系列畫面，以指導您繪畫屏幕解鎖圖案。

您可以連接四個或以上的點以繪畫您專屬的解鎖圖案。

如果您設定圖案，手機屏幕便會鎖定。要解除鎖定手機，請在螢幕上繪畫您所設定的圖形。

注意：在設定解鎖圖形時，您必須先建立您的 Gmail 帳戶。



警告 使用圖案鎖定的 注意事項

請記住您所設定的解鎖圖案，這是非常重要的。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

在無法重新開啟您的解鎖圖案：

如果您嘗試在手機上登入您的 Google 帳戶但錯誤輸入解鎖圖案 5 次，請按忘記解鎖圖案鈕。然後，您需要使用您的 Google 帳戶登入以解鎖您的手機。

5. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或嵌入了其他保安功能，因此在連接前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

要開啟 Wi-Fi 並連接至 Wi-Fi 網絡：

- 1 從主頁點按**應用程式**標籤，並選擇**設定 > 無線及網路 > Wi-Fi 設定**。
- 2 點按開啟Wi-Fi，手機便會開始掃描可使用的 Wi-Fi 網絡。

重要通知

- 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。
- 3 點按一個網絡以開始連接。
- 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。
- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）
- 4 狀態列上的圖示會顯示 Wi-Fi 狀態。

6. 開啟及切換應用程式

您可輕易在 Android 上進行多重任務，即使您開啟另一應用程式，已開啟的應用程式依然會繼續運行。您無須在開啟另一應用程式前退出應用程式。使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

要停止使用中的應用程式

- 1 從桌面點按**應用程式**標籤，然後選擇**設定 > 應用程式 > 管理應用程式**。
- 2 捲動至該應用程式，點按**強制停止**以停止使用。

提示！

返回最近使用的應用程式

點按並按住**主頁**鍵。畫面將會顯示您最近使用的應用程式清單。

7. 安裝 LG PC suite 至您的電腦

要以 USB線同步數據至您的電腦，您需在電腦上安裝 LG PC suite 程式。

您可於 LG 網站下載此程式。瀏覽至 <http://www.lg.com> 網站以獲取您的手機安裝程式和使用資訊。您可參考往下圖示和依據網站指示以下載適合您手機型號的軟件並完成安裝。

LG PC SUITE

LG PC Suite IV 是一種幫助您使用 USB 線將手機連接到電腦的程式，從而讓您在電腦上使用手機的功能。

LG PC Suite IV 的主要 功能

- 輕鬆快捷地建立、編輯和刪除手機資料
- 從電腦和手機同步數據（通訊錄、日曆、訊息（文字訊息）、書簽）
- 傳輸多媒體檔案（相片、影片、音樂）使用簡單的拖放動作，在電腦和手機之間傳輸檔案。
- 從手機傳輸訊息到電腦。
- 在不會損失您的數據的情況之下更新軟件。

重要通知

LG-P970 不支援：

- 透過藍芽來連接電腦
- 日曆中的待辦事項
- Java 應用程式


要需更多資訊，請參照 LG PC Suite IV 的用戶指南。這可在安裝 LG PC Suite IV 後從說明上找到。

下載 LG 手機支援軟件

1) 登入 www.lg.com , 到支援 → 手機支援



2) 下載及安裝LG 手機支援軟件

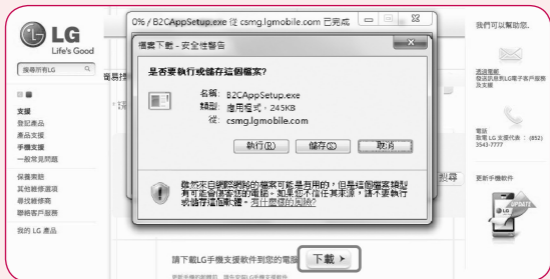

重要通知

3) 在下載相關手機支援軟件後並執行以完成下載所購買手機型號的 LG PCSuite IV 檔案並按照指示完成安裝。

* 在完成 LG PCSuite IV 安裝後，請確保大容量儲存設定在停用模式，以執行 LGPCSuite IV。

8. 透過 USB 連接手機至電腦

如要透過 USB 設備傳送 microSD 記憶卡上的資料：

- 1 安裝您的 microSD 記憶卡至您的手機。（有可能已插在您的手機中。）
- 2 連接 USB線前，請確保已於您的手機啟動**大容量儲存**模式。（在**應用程式**標籤，選擇**設定** > **應用程式** > **開發** > 取消勾選**USB 偵錯**）
- 3 使用手機隨附的 USB 線，將手機連接至電腦的 USB 連接埠。點按**開啟 USB 儲存體**。您會收到 USB 已連接的通知。

當手機已連接為 USB 記憶體，您會收到通知。您手機上的 microSD 卡會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 microSD 卡。

注意：卸載 PC Suite IV 後，不會自動移除 USB 及藍芽驅動程式。因此，必須手動解除安裝這些驅動程式。

提示！ 要重新在手機上使用 microSD 卡，您需要開啟通告欄並點按**關閉 USB 儲存裝置**。期間您無法在手機上存取 microSD 卡，因此您亦無法使用依賴 microSD 卡的應用程式，例如相機、圖片集及音樂功能。要令手機從電腦中斷連接，請小心地按照電腦的說明正確地中斷連接 USB 裝置，以免記憶卡上的資料流失。

- 1 開啟通告欄，點按**關閉 USB 儲存裝置**。
- 2 在開啟的對話方塊上點按**關閉**。
- 3 安全地中斷電腦上的 USB 裝置連接。

重要通知

警告

手機開啟時，請勿插入或移除 microSD 卡。否則，microSD 卡及手機可能會損壞，而 microSD 卡內儲存的數據亦可能毀損。要安全取出 microSD 卡，從主屏幕，按下功能表鍵並點按**設定 > SD 卡和手機儲存 > 解除安裝 SD 卡**。

9. 使用數據連接時解鎖螢幕

如在數據連接期間長時間不點按屏幕，您的屏幕會自行關掉。要開 LCD 螢幕，點按硬鍵_可。

10. 在開啟/關閉您的電腦時，請勿連接您的手機

確定中斷數據線手機與電腦的連接，否則可能令電腦產生錯誤。

11. 垂直手機

請如普通手機一樣，垂直及直立握住手機，因為 LG-P970 備有內置天線。小心不要刮花或損壞手機背部，這會令手機功能受損。撥打 / 接聽電話或傳送 / 接收數據時，盡量避免握住天線所在的手機下部分。否則可能影響通話品質。

12. 如果螢幕凍結

如果手機不能回應用戶輸入或螢幕凍結：

請取下電池，再次插入電池並開啟手機。如果問題仍然存在，請聯絡服務中心。

了解您的手機

要開啟手機，請長按住電源鍵。

要關閉手機，請長按電源鍵，並點按關機，然後點按確定。

耳機

感應器

主頁鍵

- 由任何畫面回到主頁。

功能表鍵

- 查看可使用的選項。

話筒

電源/鎖定鍵


- 長按此鍵以開啟 / 關閉手機電源。
- 按住並鎖定畫面。

返回鍵

- 返回前一畫面。

搜尋鍵

- 搜尋網絡以及您手機中的內容。

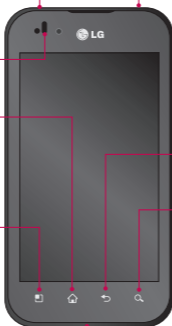


⚠ 警告： 若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控螢幕功能。
請勿將保護貼貼在 LCD 的感應器。
這可能會導致感應器出現故障。

提示！ 每當您點按應用程式以查看可使用的選項時，點按功能表鍵。

提示！ 如果在您使用 LG-P970 時顯示錯誤訊息，或無法開啟，請取下電池，並重新裝上電池，然後稍後再開機。

了解您的手機





音量鍵

- 在桌面上：控制鈴聲音量。
- 通話中：控制聽筒音量。
- 播放曲目時：控制音量。

G-鍵

- 輕易地立即啟用功能，只需將手機傾斜、搖動或點按手機。

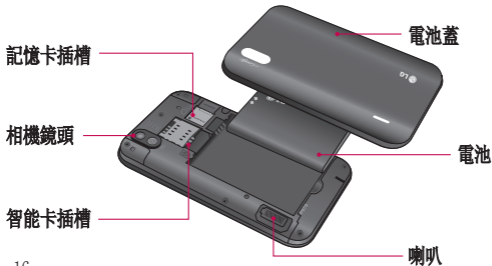

安裝智能卡及電池

開始使用您的新手機前，您需要先設定手機。要插入智能卡及電池：


- 1 要取下電池蓋，請用手按住手機。用另一隻手按壓電池蓋中心位置，用食指拉開電池蓋。然後揭開電池蓋。



- 2 將智能卡滑入智能卡插槽中，確保智能卡的金屬接觸面朝下。



- 3 對準手機及電池的金屬接觸面，插入電池。

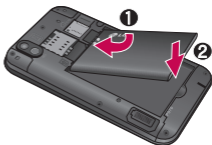


了解您的手機

4 重新蓋上電池蓋。



為手機充電

充電器插孔於 LG-P970 頂部 插入充電器，並將其連接至電源插座。您必須繼續為 LG-P970 充電，直至您看見 。



注意：第一次充電時必須將電池完全充電，以提高電池壽命。

18

安裝記憶卡

要儲存多媒體檔案（例如使用內置相機拍攝的圖像），您必須安裝記憶卡至您的手機。

要安裝記憶卡：

1 插入或移除記憶卡前，請先關閉手機。 取下電池蓋。



2 將記憶卡插入插槽中。 並確保金屬接觸面朝下。



格式化記憶卡

您的記憶卡可能已格式化。如尚未格式化，您必須在使用前將其格式化。

注意：當您格式化記憶卡時，所有已儲存在卡上的資料都會被刪除。

- 1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。
- 2 捲動並點按**設定**。
- 3 捲動並點按 **SD 卡與手機儲存**。
- 4 點按**移除SD 卡**。
- 5 點按**將SD 卡格式化**，並確認您的選項。
- 6 如您設定了圖形鎖定，輸入圖形鎖定然後選擇**清除全部**。記憶卡將被格式化並且可使用。

注意：如您的記憶卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

提示！ 如已移除記憶卡，您可循以下步驟進行格式化。

點按**應用程式 > 設定 > SD 卡與手機儲存 > 將SD 卡格式化**。

警告

手機開啟時，請勿插入或移除記憶卡。否則，您的記憶卡及手機可能會損壞，而記憶卡內儲存的數據亦可能毀損。要安全地移除記憶卡，請選擇**應用程式 > 設定 > SD 卡與手機儲存 > 移除SD卡**。

您的桌面

觸控屏幕小秘訣

以下是一些小秘訣，讓您輕鬆使用觸控屏幕操作手機。

點按 - 要選擇功能表/選項或開啟應用程式，只需點按即可。

點按並按住 - 要開啟選項功能表或移動物件，點按並按住該選項。

拖動 - 要捲動清單或緩慢移動，用手指在觸控屏幕上拖動。

翻閱 - 要捲動清單或快速移動，用手指掃過屏幕（快速拖動並放手）。

翻轉 - 將來電靜音或暫停音樂/影片播放器或鬧鐘功能表。

傾斜及平放 - 放大/縮小及瀏覽列表。

點按 - 點按螢幕以重新顯示音樂的控制列。

備註：

- 要選擇某個項目，請觸控圖示中心。
- 請勿過份用力按壓；只需輕力並準確地點按，觸控屏幕已能感應。
- 使用手指尖點按您需要的選項。請注意不要碰到其他按鍵。

鎖定您的手機

當您不使用 LG-P970 時，請輕按**電源**鍵鎖定您的手機。這有助防止意外觸動鍵盤及節省電量。

如果您有一段時間不使用手機，桌面或其他您正在瀏覽的畫面會被鎖定屏幕取代，以節省電量。

注意：如果您在設定圖案時正在執行任何應用程式，則這些應用程式可能繼續在鎖定模式中執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如，通話、存取網絡及數據通訊）。

解鎖螢幕

提示！ 長按手機左側的 G-鍵，然後搖動手機兩次。相機預覽會自動啟動。如果您想使用本功能，您需要選擇**設定 > 手勢 > 開啟使用移動手勢 > 轉至相機**。

要解手機鎖，按**電源**鍵。鎖定螢幕會出現。點按鎖定螢幕並向上拖動就可解鎖。您最後工作的畫面會開啟。

主頁

只需將手指左右滑動便可檢視。您可使用 widget 自訂每個控制板，它們是您喜愛的應用程式、資料夾及牆紙的捷徑。

提示！ 當按住了G-鍵，將手機向左或向右傾斜可讓您快速檢視桌布。

注意：視乎您的手機供應商，某些螢幕圖像可能會有差異。

在主頁上，您可檢視螢幕下方的快速按鍵。快速按鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。



點按手機圖示開啟觸控撥號鍵盤，撥打電話。



點按通訊錄以開啟您的通訊錄。



點按**訊息**圖示，進入訊息功能表。

您可在此建立新訊息。



點按**應用程式標籤**。您便可檢視您安裝的全部應用程式。檢視您的應用程式。

如要啟動應用程式，點按應用程式表上的圖示即可。

注意：預載應用程式有可能會因應您手機的軟件及您的服務供應商而有所不同。

您的桌面

在您的桌面上新增 widget


您可新增捷徑、widget 或資料夾，以自訂您的桌面。將您喜愛的 widget 添加到桌面上，您便可更方便地使用您的手機。

要新增所需的圖示至您的桌面：

- 1 在主頁點按**功能表**鍵並選擇**新增**。或長按桌面的空白部份。
- 2 在**編輯模式**功能表上，點按您要新增的項目類型。
- 3 例如，在清單中選擇**資料夾**並點按。在清單中選擇有電話號碼的通訊錄，然後點按。
- 4 您會在桌面上看到一個新的資料夾圖示。將其拖動至您想要的位置，然後放開手指。

提示！ 要新增應用程式圖示至桌面，在**應用程式**功能表上長按要新增至桌面的應用程式。

要從桌面移除應用程式圖示：

- 1 點按並按住您想移除。
- 2 拖動並將應用程式圖示拉至垃圾桶圖示 。

備註： 您無法刪除預載應用程式。（只能從螢幕上刪除其圖示。）

查看最近使用的應用程式

- 1 點按並按住**主頁**鍵。螢幕會顯示您最近使用過的應用程式的圖示。
- 2 點按圖示以開啟該應用程式，或者按**返回**鍵回到使用中的應用程式。

通告欄

通告欄顯示於螢幕的頂部。



您可點按並向下滑動通告欄。



或者，您可在桌面點按**功能表鍵**，並選擇**通知**。您可在此檢查及管理 Wi-Fi、藍芽和 GPS 狀態，以及查看其他通知。

檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、電池電量及啟動中的藍芽及數據連接。

下表說明可能在狀態列中看到的圖示的含義。



[狀態列]

圖示	說明
	沒有智能卡
	無訊號
	飛航模式
	已連接至 Wi-Fi 網絡
	耳機模式
	正在通話
	通話保留
	喇叭開啟
	電話話筒已靜音
	未接來電
	藍芽開啟
	已連接至一個藍芽裝置
	系統警告
	鬧鐘已設定
	新留言訊息
	麥克風靜音

您的桌面




圖示	說明
	震動模式
	電池已完全充電
	電池充電中
	數據輸入及輸出
	手機已通過 USB 線連接至電腦
	數據下載
	數據上載
	正在取得 GPS
	從 GPS 接收位置數據
	螢幕電話已連接
	還有 3 個通知未顯示
	正在同步數據
	下載完成
	新電郵



圖示	說明
	新 Gmail
	新 Google 語音訊息
	新訊息
	正在播放歌曲
	待辦事項
	FM 收音機已在背景啟動
	可攜式 Wi-Fi 熱點已啟動


螢幕鍵盤

您也可以使用螢幕鍵盤輸入文字。當您需要輸入文字時，螢幕鍵盤會自動顯示在屏幕上。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤輸入文字

   點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。

  點按切換至數字符號鍵盤。您亦可以點按並按住這個標籤以瀏覽設定功能表。

 要開啟 LCD 螢幕，點按硬鍵即可。

 點按以輸入一個空格。

 點按以在訊息欄新建一行。

 點按以刪除前一個字母。

 點按以隱藏文字鍵盤。

輸入重音字母


當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：á）。

例如，要輸入「á」，按下並按住“a”鍵，直到顯示該特殊字元。然後選擇所需的特殊字元。

Google 帳戶設定

當您第一次在手機上開啟 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。

建立您的 Google 帳戶

- 1 在桌面點按**應用程式**標籤 , 以開啟應用程式功能表。
- 2 點按 **Gmail** 後再按 **下一步** > **建立** 以啟動 Gmail 設立精靈。
- 3 點按文字欄位以開啟觸控鍵盤，並輸入您的姓名及 Google 帳戶使用者名稱。輸入文字時，您可按鍵盤上的**下一步** 移至下一個文字欄位。
- 4 當您完成輸入您的名字及姓氏後，點按 **下一步**。您的手機會連接 Google 的伺服器，檢查使用者名稱是否可用。
- 5 輸入並重新輸入密碼。然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

登入您的 Google 帳戶

- 1 輸入您的電子郵件地址及密碼，然後點按**登入**。等候直至登入完成。
 - 2 登入後，您可使用 Gmail 手機上的 Google 服務。
 - 3 當您在手機上設定了 Google 帳戶，您的手機會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定。）
- 登入後，您可使用 Gmail、Google Calendar、Android Market；以及在手機上享用其他 Google 服務。


重要資訊！

- 某些應用程式，例如日曆，只能適用於您新增的首個 Google 帳戶。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。當您登入時，您在網上的通訊錄、Gmail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。如果您在設置時沒有登入一個 Google 帳戶，則在您首次啟動一個需要 Google 帳戶的應用程式（例如 Gmail 和 Android Market）時，您將被提示登入或新建一個 Google 帳戶。
- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

通話 / 聯系



撥打語音通話

- 1 點按  選擇撥號標籤。
- 2 在鍵盤上輸入號碼。要刪除一個數字，點按**清除**圖示 。
- 3 點按**通話**圖示  撥打電話。
- 4 要結束通話，點按**結束**圖示 。

提示！ 若要在撥打國際電話時輸入「+」，請點按並按住 。

提示！ 若要在通話中顯示鍵盤，請點按**撥號鍵盤**。

撥打視像通話

- 1 點按  開啟按鈕。
- 2 輸入之前一樣的電話號碼。
- 3 點按**視像通話**圖示  以進行視像通話。
- 4 如果您不想使用免持聽筒，請點按**免持聽筒**並且確保已插入耳機。

- 5 連線視像通話時，您將看到自己的圖像；對方接聽電話後，他們的圖像便會顯示在屏幕上。根據需要調校攝錄機位置。

- 6 要結束通話，點按**結束**。

私人：您可以更改當前的私人圖像。

撥號鍵盤：輸入號碼。

保留：靜音及暫停影片。

靜音：關閉聲音。


揚聲器：開啟或關閉揚聲器。

視像通話功能表

拍攝 - 您可以拍攝其他人。

使用背面相機 - 切換鏡頭。

從通訊錄中撥打電話


- 1 點按  可開啟通訊錄。
- 2 捲動通訊錄清單，或點按**搜尋**以輸入您想致電的聯絡人名稱的第一個字母。
- 3 在清單內點按您想致電的聯絡人。

接聽來電和拒接來電


提示！ 翻轉您的手機或按音量（側）鍵以將來電靜音。

提示！ 按 G-鍵及搖動您的手機接聽來電。
通話時按 G-鍵及搖動以結束通話。

在螢幕鎖定時：

手機響鈴時，拖動拒接圖示  至左方以拒接來電。

在螢幕解鎖時

手機響鈴時，點按接聽圖示 。
點按拒接圖示  以拒接來電。

提示！ 歉意訊息

當您要拒接來電，您可以透過拖動屏幕上的道歉訊息快速發送一條訊息。如果您需要在會議中回覆訊息，此功能將十分有用。

調整通話音量

要在通話時調整通話音量，按手機左側的音量上/下鍵。

通話期間撥打第二個電話

- 1 開始通話時，點按**新增通話** 。
- 2 撥號或者在通訊錄中搜尋選擇您要通話的號碼。
- 3 點按**通話**圖示  以開始撥打電話。
- 4 兩個通話均會在通話屏幕中顯示。您的原來通話會被鎖定及保留。
- 5 點按保留的列表，在兩個通話之間進行切換。
附註： 您可以點按**合併通話**  開始會議通話。
- 6 要結束使用中通話，點按**結束**圖示 。

通話 / 聯系

檢視通話記錄

在桌面點按 ，然後選擇**通話記錄**標籤。

檢視所有已撥、已接和未接來電的完整清單。

提示！ 點按任何單個通話記錄項目，檢視通話的日期、時間和持續時間。

提示！ 點按**功能表**鍵，然後點按**刪除全部**，刪除所有記錄項目。

通話設定

您可設置手機的通話設定，例如來電轉接及您的服務供應商提供的特別功能。

- 1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。
- 2 捲動並點按**設定**。
- 3 點按**通話設定**，選擇您要調整的選項。

< 固定撥號 >

選擇**固定撥號**，以開啟並編輯一份可從您手機撥打的號碼清單。您需要使用 PIN 2 密碼，它可從您的網絡商取得。從手機只可撥出固定撥號列表中的號碼。

< 留言信箱 >

語音信箱服務 - 讓您選擇您的服務供應商的語音信箱服務。

語音信箱設定 - 如果您正在使用您的服務供應商所提供的語音信箱服務，此選項允許您輸入電話號碼用來接聽或者管理您的語音信箱。

< 其他通話設定 >

來電轉接 - 您可設置在忙碌、無應答的、無法取得等情況下轉駁通話。

其他通話設定 - 您可更改以下設定：

- **本機號碼**：選擇是否在撥出的電話中顯示您的電話號碼。
- **來電待接**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您。（這取決於您的網絡供應商。）

通話限制 - 選擇您想要何時限制通話。輸入通話限制密碼。請向您的網絡供應商瞭解此服務詳情。

通話費用 - 檢視您的通話收費。（此服務視乎您的網絡而定；一些網絡供應商不支援此功能。）

通話時間 - 檢視所有通話的持續時間，包括所有、已撥、已接來電及最後通話。

歉意訊息 - 當您拒接來電時，使用此功能您可以快速發送一條訊息。如果您需要在會議中回覆訊息，此功能將十分有用。

視像通話設定 - 變更視像通話設定。

通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

搜尋通訊錄

- 1 從桌面點按  以開啟通訊錄。
- 2 點按**搜尋**，使用鍵盤輸入該聯絡人姓名。

新增通訊錄


- 1 從桌面點按 ，然後輸入新聯絡人的號碼，再點按**功能表鍵**，點按**新增至通訊錄**。選擇**建立新通訊錄**或**新增至現有通訊錄**。
- 2 如您希望為新聯絡人新增相片，點按圖片圖示。
從**拍攝相片**或**從圖片集選取**。
- 3 點按  選擇通訊錄類型。
- 4 點按一個文字欄位以開啟觸控鍵盤，然後輸入新聯絡人的名稱。
- 5 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。
- 6 點按儲存以儲存通訊錄。

通話 / 聯系


常用的通訊錄

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛：

- 1 從桌面點按  以開啟通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右面的星星。星號會轉為黃色。

要從最愛清單移除聯絡人：



- 1 從桌面點按  以開啟通訊錄。
- 2 點按**群組**標籤然後選擇**我的最愛**。點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右面的黃色星星。星號會轉為灰色，表示該聯絡人已從您的最愛清單移除。

訊息/電郵

訊息


LG-P970 將文字訊息和多媒體訊息結合在一個易用的功能表中。

發送訊息

- 1 點按桌面上的  圖示，然後點按新增訊息以開啟空白訊息。
- 2 點按  以輸入聯絡人清單的聯絡人名稱，或在收件者一欄中輸入撥打號碼。您可以新增多個聯絡人。

注意： 如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

- 3 點按下方的**輸入訊息**開始輸入訊息內容。
- 4 點按**發送**以發送訊息。

提示！ 您可點按  圖示以把您想分享的檔案附加到您的訊息。

- 5 訊息畫面會開啟，訊息內容會顯示在您的名稱之下。屏幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息對話。

警告

160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及語言而有所不同。

警告

如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

附註： 當您在通話期間收到短信，您會聽收到提示。

訊息/電郵

更改訊息設定

LG-P970 已為您預先定義訊息設定，讓您可以立即發送訊息。您可以按喜好更改這些設定。

點按桌面上的**訊息**圖示，然後點按**功能表**鍵，再點按**設定**。

設定您的電子郵件

點按**應用程式**標籤，然後選擇電子郵件。如果尚未設定電子郵件帳戶，請開始電子郵件設定精靈。

提示！ 如已設定電子郵件帳戶，則不會自動啟動精靈。

您可以選擇郵箱類型為 **MS Exchange** 或其他。

其他 (POP3, IMAP) 電子郵件帳戶

電郵地址 - 輸入帳戶的電子郵件地址。

使用者名稱 - 輸入帳戶的使用者名稱。

密碼 - 輸入帳號密碼。

網域 - 輸入帳戶的網域 (可選)

伺服器位址 - 輸入伺服器位址

使用 SSL - 選擇是否使用為 Microsoft Exchange 使用 SSL
點按下一步按鈕以連接伺服器。

設定完成頁面會出現，您需要為帳戶顯示及我的名字輸入「名稱」。現在帳戶會顯示在帳戶清單中。

其他 (POP3, IMAP, GME) 電子郵件帳戶

電郵地址 - 輸入帳戶的電子郵件地址。

密碼 - 輸入帳號密碼。

選擇是否啟用推送電郵帳戶。當您選擇啟用，它會直接連接至伺服器。

設定完成頁面會出現，您需要輸入「名稱」。

現在帳戶會顯示在帳戶清單中。

內送伺服器 - 輸入內送電郵伺服器的地址。

連接埠號碼 - 通常會顯示帳戶的預設號碼。

安全種類 - TLS/SSL/關閉。

外寄伺服器 - 輸入外送電郵伺服器的地址。

連接埠號碼 - 通常會顯示帳戶的預設號碼。

安全種類 - TLS/SSL/關閉。

帳號屏幕

帳號屏幕列出您的合併收件匣及您的每個電子郵件帳戶。

- 點按**應用程式**標籤，然後選擇**電子郵件**。屏幕顯示帳號列表。

提示！ 在帳號列表用力點按電子郵件帳戶，以在桌面移動帳戶圖示。點按圖示直接轉至收件匣。

您可點按一個帳戶以檢視其**收件匣**。您發出電子郵件的預設帳戶以勾選標記表示。

編寫及發送電子郵件

要編寫及發送訊息：

- 1 在**電子郵件**應用程式，點按**功能表**鍵，並點按**編寫**。
- 2 輸入將會收到訊息的收件者的地址。當您輸入文字時，會從您的通訊錄顯示匹配的地址。以逗號分隔多個地址。
- 3 點按**功能表**鍵，然後點按**新增抄本/密件抄送**，您便能夠將訊息抄本/密件抄送至其他聯絡人/電子郵件地址。
- 4 輸入訊息的文字。
- 5 點按**附加**以在訊息加上您想分享的檔案。

訊息/電郵

6 點按傳送。

如您尚未準備好發送訊息，點按**功能表**鍵並按**儲存為草稿**，可把訊息存到**草稿**資料夾。點按**草稿**資料夾內的草稿訊息，繼續編寫訊息。如您發送前點按**返回**鍵 ，您的訊息也會儲存為草稿。在快顯視窗「儲存到草稿？」點按「否」，以放棄並刪除訊息；如果您在飛航模式或沒有數據連接的情況下操作，則無法發送郵件。有待處理的訊息將會儲存在**寄件匣**內；如果當中有訊息，便會顯示在帳戶畫面上。

請注意，使用 Exchange 帳戶發送的訊息不會位於手機內，而會位於 Exchange 伺服器內。

如您想檢視**已發送**資料夾內您所發送的訊息（或帶有**已發送**標籤的訊息），您便需要時常開啟**發送**資料夾 / 標籤，並從選項功能表中選擇**重新整理**。

提示！ 當收件匣收到新電郵，會發出通知鈴聲及震動。點按電郵通知使通知消失。

處理帳戶資料夾

每個帳戶設有**收件匣**、**寄件匣**、**已發送**及**草稿**資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的特色而定。

新增及編輯電子郵件帳戶

要新增電子郵件：

- 1 點按**應用程式**標籤，然後選擇**電郵**。
- 2 選擇 **MS Exchange** 或其他。
- 3 輸入該帳戶的名稱，確定發出郵件內您想顯示的名稱，然後點按**完成**。

要變更帳戶設定：

- 1 開啟**帳戶**畫面。
- 2 選擇選項，在開啟的功能表中點按設定。

要刪除電子郵件：

- 1 開啟**帳戶**畫面。
- 2 點按並按住您想刪除的帳戶。
- 3 在開啟的功能表點按**刪除**及在對話方塊中點按**確定**以確認。

社交網絡

您可在手機上盡享社交網絡的樂趣，並管理您在網上社區內的微型博客。您可更新上載相片的目前狀態，並檢視朋友們的狀態更新。如您沒有這些帳戶，您可到它們的網站設立一個帳戶。

注意：連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

新增您的帳戶至手機

- 1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。
- 2 在 Facebook、Twitter 及 MySpace 中選擇希望使用的社交網絡應用程式。
- 3 輸入您在社區內設定的電子郵件地址及密碼，然後點按**登入**。
- 4 請等待系統基於您的社區核對您的詳細資料。
- 5 如您點按您的社區，您可查看該社區的即時狀態。

提示！ 如果您在桌面新增「我的狀態」widget，它會顯示您的狀態並在社區上幫助您直接更新您的狀態。

您亦可以在桌面新增「社區動態」widget，顯示社區的更新及消息。

檢視及更新您的狀態

- 1 選擇您想存取的社區。
- 2 您可查看您的社區的即時狀態。
- 3 您可以通過發表評論或上載相片來更新您的目前狀態。

備註：此功能視乎不同的網絡服務而定。

提示！ 您僅能使用社交網站內的朋友資訊，或者同步處理所有數據至通訊錄。

從手機移除帳戶


- 1 選擇**應用程式** > **設定** > **帳戶**和**同步設定**。
- 2 選擇您希望刪除的一個帳戶，然後點按**移除帳戶**。

相機

瞭解取景器

縮放 - 放大或縮小。 或者，您可使用側音量鍵。

轉換 - 您可從外置相機轉換至內置相機。

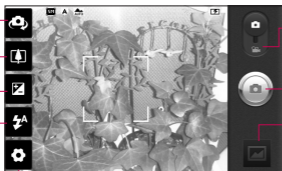

影片模式 - 向下滑動此圖示可切換到影片模式。

拍攝相片

圖片庫 - 點按就可觀賞您最後拍下的相片。 這容許您從相機模式存取圖片庫並觀看已保存的相片。


設定 - 點按此圖示，開啟設定功能表。 請參閱使用進階設定。

閃光燈 - 容許您在黑暗地方拍照時打開閃光燈。

亮度 - 決定圖像的光亮度。 沿著亮度列滑動指標，向“-”方向可降低圖像亮度，向“+”則可提升亮度。

提示! 您可關閉所有捷徑選項，獲得更清晰的取景器畫面。 您只需點按一下取景器的正中心。 要重新開啟選項，請再點按一下屏幕。

快速拍照

- 1 開啟**相機**應用程式。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 點按快門圖示 。
- 4 相機會為圖像對焦。對焦圖像後，對焦器會變為綠色，相機便會拍攝相片。

拍攝相片後

拍攝的相片將顯示於屏幕上。

分享 點按以分享您的相片，透過 Bluetooth、Facebook for LG、Gmail、MySpace for LG、Picasa、Twitter for LG、訊息及電子郵件。

備註：如在漫遊期間下載多媒體訊息，則可能需額外收費。


提示！ 如果您擁有社交網絡帳戶並已在手機設定好，您可在您的社區中分享您的照片。

設為 點按可將圖像設為通訊錄圖示或牆紙。

重新命名 點按以編輯所選擇相片的名稱。

 點按以刪除圖像。

 點按以立即拍攝新相片。

 點按以檢視您最後拍攝的照片。

使用進階設定

在取景器內點按  以開啟所有進階選項。

您可更改相機設定。選擇選項後，請點按**返回**鍵。

對焦 - 點按此圖示選擇選項功能表。請參閱**使用對焦模式**。

圖像大小 - 點按以設定所拍攝相片的大小（像素）。

場景模式 - 選擇**標準**、**人像**、**橫向**、**運動**、**日落**或**夜間**。

ISO - ISO 等級決定相機感光器的敏感度。ISO 愈高，鏡頭對光線的敏感度愈高。當您無法使用閃光燈時，它能讓您在黑暗環境中拍攝得更清晰。

相機

白平衡 - 選擇**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**。

色彩效果 - 為新相片選擇色調。選擇**無**、**復古**、**黑白**、**底片**、**鮮艷**、**復古**、**藍色**、**浮雕**或**曝光**。

計時器 - 自動計時器讓您設定按下快門後的延遲拍攝時間。

拍攝模式 - 可從選項選擇多種拍攝模式。

圖像質素 - 可選擇**最細緻**、**細緻**及**標準**。質素愈細緻，相片便愈清晰。然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

自動檢視 - 如您將**自動檢視**設定為開啟，便會自動顯示剛拍攝的相片。

快門聲 - 有四種快門聲音可供選擇。

標籤位置 - 啟動以使用手機的定位服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

附註：此功能只適用於已啟用定位服務。



還原所有相機預設設定。



任何時候，如您想知道此功能如何操作，點按便可。此會向您提供快速指南。

提示！ 當您結束相機後，某些設定將返回預設。拍攝下一張相片前，需要檢查這些設定。

提示！ 設定功能表乃疊於取景器上，因此當您更改圖像顏色或質素的設定，您會即時在設定功能表背後看見預覽圖像的更改。

使用對焦模式

您可從以下選項選擇對焦模式：

自動 - 將相機設定為自動對焦。


微距 - 微距模式讓您拍攝極近距離的物件。如果您正嘗試近距離拍攝但對焦方塊仍為紅色，請嘗試開啟微距模式。

持續

表情追蹤 - 如果您在拍照時設定表情追蹤，相機會自動偵測人臉並對焦。

手動 - 將相機設定為手動對焦。

檢視已儲存的相片

- 1 您可在相機模式內存取您已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。點按屏幕上的相片。您會看到**投影播放及功能表**。



點按以檢視投影片。點按**功能表**並選擇您所需要的選項。



點按以分享内容。



點按以刪除相片。



點按**更多**以檢視更多以下的選項。

詳細資料 - 進一步瞭解更多有關內容的資訊。

設為 - 設為通訊錄圖示或者牆紙。

裁剪 - 裁剪您的相片。在屏幕上移動手指以選擇修改區域。

向左旋轉

向右旋轉

提示！ 在縮圖列表，您可以透過按住 G-鍵及向左或向右傾斜以快速移動。

提示！ 點按 G-鍵以放大/縮小相片。當您放大了相片，按住 G-鍵並傾斜手機以改變檢視相片方向。

提示！ 檢視相片時向左或右滑動，可前往上一張 / 下一張相片。

視像攝錄機

瞭解取景器

縮放 – 放大或縮小。或者，您可使用側音量鍵。開始錄製影片前，您可使用變焦功能。您無法在錄製途中調整焦距。

轉換 – 您可從外置相機轉換至內置相機。



相機模式 – 將此圖示向上滑動，便能切換至相機模式。

開始錄製

媒體匣 – 點按以觀看您最後拍下的影片。這容許您從影片模式存取媒體匣並觀看已保存的影片。

設定 – 點按此圖示，開啟設定功能表。請參閱使用進階設定。

閃光燈 – 容許您在黑暗地方攝錄時打開閃光燈。

亮度 – 決定影片的光亮度。沿著亮度列滑動指標，向“-”方向可降低圖像亮度，向“+”則可提升亮度。

拍攝快速影片

- 1 開啟**相機**應用程式並將相機模式向下滑至**影片**模式。快門圖示會變成。
- 2 視像攝錄機的取景器會在屏幕上顯示。
- 3 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 4 點按開始影片圖示。
- 5 錄製將顯示於取景器底部，同時計時器會顯示影片錄製的長度。
- 6 點按停止影片圖示以停止錄製。

拍攝影片後

代表該影片的靜止圖像會在屏幕上出現。

播放

點按以播放影片。

分享

點按便能以Bluetooth、Gmail、YouTube、訊息或電子郵件共享影片。

附註： 如在漫遊期間下載多媒體訊息，則可能需額外收費。

重新命名 點按以編輯所選擇影片的名稱。



點按以刪除剛錄製的影片，並點按確認。取景器將再次出現。



點按此鍵可直接錄製另外一個影片。



點按以檢視您最後拍下的影片。

使用進階設定

從取景器中點按以開啟所有進階選項。

調整視像攝錄機設定。選擇選項後，請點按**返回**鍵。

影片大小 - 點按以設定所錄製影片的大小（像素）。您可選擇的影片圖像大小為高清（1280x720）、TV（720x480）、VGA（640x480）、QVGA（320x240）及 QCIF（176x144）。

視像攝錄機

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**。


色彩效果 - 為影片選擇新色調。選擇**無**、**復古**、**黑白**、**底片**、**鮮艷**、**復古**、**藍色**、**浮雕**或**曝光**。


影片品質 - 可選擇最**細緻**、**細緻**及**適中**。

持續時間 - 設定影片的最長錄製持續時間。您可選擇**標準**或**多媒體訊息**限制影片的大小，以透過多媒體訊息發送影片。


語音服務 - 選擇**靜音**以錄製影片，而沒有聲音。

自動查看 - 如您將此項設定為**開啟**，將會自動顯示您剛錄製的影片。

 重新設定所有影片相機設定。

 任何時候，如您想知道此功能如何操作，點按便可。此會向您提供快速指南。

觀看已儲存的影片

- 1 在取景器中，點按 。
- 2 您的圖片集會顯示於屏幕上。
- 3 點按一下影片，將自動播放。

提示! 翻轉您的手機暫停播放影片。

觀看影片時調整音量


要在影片播放途中調整音量，您可使用在手機左側的音量鍵。

多媒體

媒體匣

可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空间。

點按**應用程式**標籤，然後選擇**媒體匣**。

- 1 您可在相機模式內存取您已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。點按屏幕上的相片。您會看到**投影播放及功能表**。



點按以檢視投影片。點按**功能表**並選擇您所需要的選項。



點按以分享內容。



點按以刪除相片。



點按**更多**以檢視更多以下的選項。

詳細資料 - 進一步瞭解更多有關內容的資訊。

設為 - 設為聯絡人圖示或者桌布。

裁剪 - 裁剪您的相片。在屏幕上移動手指以選擇修改區域。

向左旋轉

向右旋轉

更改圖片集內容的顯示方式

您可以順時序圖示或堆疊方式、按拍攝時間及地點分類，檢視圖片集內的圖像和短片。



將圖片集檢視開關拖動至左方，以按時序格線檢視圖片集內容。







將圖片集檢視開關拖動至右方，以按堆疊方式檢視圖片集內容。

多媒體

音樂

LG-P970 具有內置音樂播放器，讓您播放所有您最愛的曲目。要存取音樂播放器，請點按**應用程式**標籤，然後選擇**音樂**。

播放歌曲

- 1 在桌面點按**應用程式**標籤，然後選擇**音樂**。
- 2 點按**歌曲**。
- 3 選擇要播放的歌曲。
- 4 點按  暫停播放歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  返回歌曲的開首。
點按  兩次以返回至上一首歌曲。

若要在聆聽音樂時調節音量，請按手機左側的向上及向下音量鍵。

便會顯示**播放、新增至播放清單、作為手機鈴聲、刪除、詳細資料和搜尋**選項。

附註： 音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您可能需要取得授權或許可，才可以複寫或複製音樂。在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，請先檢查有關國家關於使用這類材料的國內法律。

使用收音機

LG-P970 具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

注意： 您必須插入耳機才能收聽電台。請將之插入耳機插孔。


搜尋電台

您可以使用手動或自動搜尋功能調校電台。搜尋到的電台隨即儲存到特定的頻道編號，這樣您就不用重新調頻。

- 1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
- 2 點按**掃描 FM 電台頻道**。
- 3 如果有預設頻道，您會看見彈出視窗說「所有頻道將被重設。繼續？」。如您選擇確定，將會刪除所有預設頻道及啟動自動掃描。
- 4 在自動掃描的過程中，如您希望**停止掃描**點按停止。只會儲存停止掃描前所掃描的頻道。

注意： 您亦可使用轉輪以手動方式調頻。

收聽電台

- 1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
- 2 點按您要收聽的電台的頻道編號。
- 3 點按  圖示。可選擇是否以內置揚聲器收聽廣播。

使用 USB 大容量儲存裝置傳送檔案

要使用 USB 裝置傳送檔案：

- 1 使用 USB 線連接 LG-P970 至電腦。
- 2 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您需要選擇**設定 > SD 咭和手機儲存 > 開啟僅限大容量儲存體**。
- 3 點按**開啟 USB 儲存體**。
- 4 您可於電腦檢視大容量儲存體的內容並傳送檔案。

多媒體

備註：

- 您必須先安裝記憶卡。如沒有記憶卡，則無法使用 USB 大容量儲存。
- 使用 USB 大量儲存功能後，點按核取方塊以點按開啟 USB 儲存體；如果您想使用 LG PC Suite 將手機與電郵進行同步，需要點按**設定 > 應用程式 > 開發 > 勾選 USB 偵錯**。

如何將音樂/影片檔案儲存至手機

- 1 使用 USB 線將手機連接到電腦。
 - 點按並向下拖動主頁上的狀態列。選擇 **已連接的 USB > 開啟 USB 儲存體 > 開啟資料夾**以檢視檔案。
 - 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您將需要手動更改設定。有關更多資訊，請參閱「使用大容量儲存裝置傳送檔案」。

- 2 從電腦上將音樂或影片儲存到手機外置儲存空間。
 - 您可以使用讀卡器，將檔案從電腦複製或移動至手機的可移除儲存體。
 - 如果影片檔案包含字幕檔案（與影片檔案同名的 .srt 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。
 - 在下載音樂或影片檔案時，必須保護版權的安全。請注意，已損壞檔案或副檔名錯誤的檔案可能會損壞手機。

如何從您的舊手機上的聯絡資料移到現在的手機

使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊手機匯出至電腦。

- 1 請於 www.lg.com 下載 PC Sync for Android，然後將其安裝在電腦上。執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。

- 2 選擇**通訊錄**圖示。轉到**檔案** > **匯入**，然後選擇儲存於電腦中的 CSV 檔案。
- 3 如果 PC Sync for Android 偵測到 LG-P970 手機的连接（使用 USB 線），請按一下「同步」或「同步通訊錄」，將電腦中儲存的通訊錄同步至手機並儲存通訊錄。
- 4 如果匯入的 CSV 檔案中的欄位與 PC Sync for Android 中的欄位不同，則需要對應欄位。對應欄位後，按一下「確定」。然後，PC Sync for Android 中便會新增通訊錄。

如何透過藍芽發送手機中的資料

您可在經由藍芽執行相應程式傳輸資料，取代一般手機從藍芽功能表傳輸的方法。

- **發送圖片**：執行媒體匣應用程式，然後選擇**圖片** > **功能表**。按一下**分享**，選擇**Bluetooth** > 檢查**藍芽是否開啟**，並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。
- **匯出通訊錄**：執行**通訊錄**應用程式。點按要匯出的通訊錄。按一下**功能表**，選擇**分享** > **Bluetooth** > 檢查**藍芽是否開啟**，並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。
- **發送所選的多個聯絡人**：執行**通訊錄**應用程式。要選擇多於一個聯絡人，點按**功能表**鍵然後點按**功能表**鍵及**分享**。選擇您要發送的聯絡人或**分享** > **Bluetooth** > 檢查**藍芽是否開啟**並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。
- **連接至 FTP**（此手機僅支援 FTP 伺服器）：設定 > **無線及網絡** > **藍芽設定**。然後，選擇**掃描裝置**，並搜尋其他裝置。尋找所需的服務並連接至 FTP 伺服器。

多媒體

提示！ 版本為藍芽 2.1 SIG 並經 Bluetooth SIG 認證。此與其他 Bluetooth SIG 認證的設置相容。

注意：如果您要從其他裝置中搜尋此手機，請轉到**設定** > **無線及網絡** > **藍芽設定**。然後，選擇**可偵測性**核取方塊。核取方塊會在 120 秒後清除。

注意：支援的設定檔為 HFP、HSP、OPP、PBAP（伺服器）、FTP（伺服器）、A2DP 和 AVRCP。

Google 應用程式

- 1 首先，請建立一個 Google 帳戶。輸入您的使用者名稱和密碼。
- 2 登入後，您的 Google 帳戶中的通訊錄、電子郵件和日曆會自動與您的 LG-P970 同步。

地圖

檢查您現時的位置和交通，並取得前往目的地的駕駛方向。您的手機必須連接 Wi-Fi 或 3G/GPRS。

注意：Google 地圖並不覆蓋所有城市及國家。

Market

Android Market™ 設有多種有用的應用程式和遊戲供您下載。您從 Google Market 安裝的應用程式和遊戲可於 LG-P970 功能表中找到。

您可以檢視其他人對某個應用程式的評論，或者您可以發表您的評論。

Gmail

Hotmail 會在您首次設定手機時設置。視乎您的同步設定，手機的 Gmail 會與您在網上的 Google 帳戶自動同步。收件匣對話清單是您預設的 Gmail 檢視模式。

點按**功能表**鍵，然後點按**重新整理**以傳送或接收新電郵，並與您在網上的 Google Mail 帳戶同步。通過使用**功能表**鍵，您可以編寫電子郵件、新增帳戶、跳至標籤、搜尋以及更多。

Talk

Google Talk 是 Google 的即時通訊程式，讓您與其他使用 Google Talk 的用戶通訊。

點按**功能表**鍵並檢查以下選項：**所有好友、新增好友、搜索、登出、設定**等。

Google 搜尋

Google Mobile Web Search 能讓您搜尋網站。

實用程式

設定鬧鐘

- 1 在桌面點按**應用程式**標籤，然後選擇**鬧鐘/時鐘**。
- 2 若要新增鬧鐘，請點按**新增鬧鐘**。
- 3 設定鬧鐘然後點按**儲存**以設定。

注意：要在鬧鐘列表屏幕刪除鬧鐘，點按功能表鍵並選擇刪除/刪除全部。

使用計算機





- 1 在桌面點按**應用程式**標籤，然後選擇**計算機**。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。
- 4 如要進行更複雜的計選，點按**進階面板**，然後選擇 **sin**、**cos**、**tan**、**log** 等等。

新增事件至日曆

- 1 在桌面點按**應用程式**標籤，然後選擇**日曆**。
- 2 首先，您必須建立一個 Google 帳戶，才可使用**日曆**。
- 3 要檢查事項，點按日期。如您希望新增事件，按住事件。再按**新事件**。
- 4 點按**主題**，然後輸入事件名稱。並輸入事件開始及完結的時間。
- 5 然後點按**地點**，輸入事件地點。
- 6 若要新增備註至您的事件，點按**說明**，然後輸入詳情。
- 7 若要重複鬧鐘，請設定**重複頻率**，如有需要亦可設定**提醒類型**。
- 8 點按日曆中的**完成**以儲存事件。日曆中所有已儲存事件的日子將以顏色方格標記。鬧鐘將於事件的開始時間響起，讓您安排得井井有條。

錄製聲音或語音

使用錄音程式錄製語音備忘錄或其他聲音檔案。

- 1 在桌面點按**應用程式**標籤，然後選擇**錄音程式**。
- 2 點按  錄製開始錄音。
- 3 點按  停止錄音。
- 4 點按  播放 以聆聽錄音。
- 5 點按  列表圖示存取您的專輯。您可聆聽已儲存的錄音。

提示！ 點按  揚聲器按鈕設定揚聲器模式。
點按  以**重新命名**及**設為**。

通知： 可用的錄製時間可能與真實時間有所不同。

發送錄音

- 1 完成錄製後，可透過點按**共用**發送聲音短片。
- 2 從**Bluetooth**、**電子郵件**、**Gmail**及**訊息**中選擇。如選擇**電子郵件**、**Gmail**和**訊息**，錄音將會新增至您編寫的訊息，然後如常地傳送。

網絡功能

瀏覽器


瀏覽器令您透過手機盡享快捷、全彩色的遊戲、音樂、新聞、體育、娛樂及更多，而無論您身在何處，有何種需求，均能一一滿足您。

注意： 連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

使用選項


點按**功能表**鍵檢視選項。

 **新視窗** - 開啟一個新的視窗。

 **書籤** - 新增/顯示書籤，顯示訪問最多的網站和記錄。

 **視窗** - 顯示所有您已開啟的視窗。

 **重新整理** - 點按重新整理網頁。

 **下一頁：** 轉至在目前頁面之後連接的頁面。 **返回**鍵將您帶回之前的頁面。

更多

- **新增書籤：** 將目前網頁新增至書籤。
- **在頁面中尋找：** 如您輸入了一個字母或任何字詞，將會從網頁尋找輸入的字母。
- **選取文字：** 點按並選擇您要複製的文字。長按任何輸入方塊，您即可貼上文字。
- **頁面資訊：** 顯示該頁的資訊。
- **分享網頁：** 發送網頁。
- **下載：** 顯示下載記錄。
- **設定：** 更改瀏覽器設定。

注意： 要回到之前的網頁，點按**返回**鍵。

設定

在桌面點按**應用程式**標籤，然後捲動，再點按**設定**。

無線網絡

您可在此管理 Wi-Fi、Wi-Fi Direct、共享網絡和藍芽。您亦可設定流動網絡和飛航模式。

飛航模式 - 設定飛航模式後，所有無線連接均會停用。

Wi-Fi - 點按以勾選：啟動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

Wi-Fi 設定 - 讓您設定及管理無線存取點。設定網絡通知，或新增 Wi-Fi 網絡。從 Wi-Fi 設定屏幕進入進階 Wi-Fi 設定屏幕。點按**功能表**鍵並點按**進階**。

Wi-Fi Direct 設定 - 設定 Wi-Fi Direct 裝置名稱及掃描其他裝置。或成為群組用戶允許連接傳統的 Wi-Fi 裝置。

提示！ 如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連線，您需要把 LG-P970 手機的 MAC 位址輸入到路由器。

您可在以下用戶介面找到 MAC 位址：點按**應用程式** > **設定** > **無線網絡** > **Wi-Fi 設定**，然後點按**功能表**鍵。再選擇**進階** > **MAC 位址**。

藍芽 - 點按以勾選：啟動藍芽以連接至藍芽裝置。

藍芽設定 - 設定裝置名稱及可找到的裝置，並掃描其他裝置。或者，檢查您以前配置的藍芽裝置列表，以及手機最近一次掃描藍芽裝置時所偵測到的藍芽裝置。

可攜式熱點 - 將您的手機連接分享成為可攜式 Wi-Fi 熱點。

流動網絡設定 - 設定資料漫遊、網絡模式、存取點名稱 (APN)，等等。

設定

聲音

< 一般 >

靜音模式 - 允許您設定除了來自媒體音效及鬧鐘聲音外的所有聲音為靜音，包括電話和通知鈴聲。

(您必須要通過媒體和鬧鐘自己的應用程式來使得它們靜音。)

通知: 設定靜音模式後將無法使用**設定 > 聲音 > 音量**功能表。

震動 - 允許您設定來電時手機震動。

音量 - 允許您設定鈴聲、媒體及鬧鐘的音量。如果您沒有勾選使用來電音量作為通知音量，那麼您可以分別設定它們的音量。

< 來電 >

電話鈴聲 - 允許您設定預設的來電鈴聲。

< 通知 >

通知鈴聲 - 允許您設定預設的通知鈴聲。

< 回饋 >

觸控音效 - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

選擇項目時發聲 - 當您點按按鈕、圖示或者其他對您的點按作出反應的屏幕上的項目時，允許您設定您的手機播放按鍵音。

螢幕鎖定聲音 - 允許您設定鎖定或解鎖屏幕時播放聲音。

觸覺回饋 - 按下螢幕按鍵與出現特定的操作行為時會震動。

顯示

亮度 - 調節屏幕亮度。

自動旋轉屏幕 - 當您將手機橫向或直立放置時，允許您設定手機自動改變方向至橫向或直向模式。

動畫 - 當您在屏幕間導覽時，允許您設定動畫效果。

螢幕逾時 - 允許您調整屏幕自動關閉前的延遲時間。為了使電池保持最好效能，請使用最短逾時。

顯示字體 - 變更顯示字體。

筆觸

調整文字輸入欄位、桌面、鬧鐘、音樂、影片播放器、來電、媒體匣、相機及瀏覽器的筆觸設定。

位置與安全性

< 我的位置 >

使用無線網絡 - 如選擇**使用無線網絡**，手機會使用 Wi-Fi 和流動網絡判定所在的位置。

使用 GPS 衛星定位 - 如選擇**啟用 GPS 衛星**，手機會確定您所處的位置，準確地找出您身處的街道。

< 螢幕解鎖 >

設定螢幕鎖定 - 設定解鎖圖案以保護您的手機。開啟一系列畫面，以指導您繪畫螢幕解鎖圖案。您可以設定 **PIN碼** 或**密碼**，而不是**解鎖圖案**或者**不設定**。

提示！ 要使用圖形鎖定以鎖定螢幕

- 1 首次進行此步驟時，將會出現關於建立解鎖案圖的簡短教程。
- 2 系統會提示您繪製並再次繪製屬於自己的個人圖形。下一次當您開啟手機或喚醒螢幕時，系統會提示您繪製解鎖圖形，替螢幕解鎖。

< SIM卡鎖定 >

設定SIM卡鎖定 - 設定鎖定SIM卡或更改SIM卡 PIN 碼。

< 密碼 >

顯示密碼 - 選擇隨您輸入顯示密碼、或於輸入時隱藏。

< 裝置管理 >

選擇裝置管理員 - 新增或移除裝置管理員。

設定

〈 認證儲存空間 〉

使用安全認證 - 勾選後允許應用存取安全認證及其他認證。您可以使用憑證儲存建立某些類型的 Wi-Fi 連接。如果您沒有為憑證儲存設定密碼，則該設定不可用。

從 SD 卡安裝 - 允許您從記憶卡安裝加密憑證。

設定密碼 - 允許您為您的安全憑證儲存設定或變更認證。您的密碼必須不少於 8 個字符。

清除儲存空間 - 清除認證儲存空間的所有內容，並重設密碼。

應用程式

未知的來源 - 除了 Android Market 的應用程式，允許安裝您從網站、電子郵件或其它地方得到的應用程式。



警告

要保護您的手機和個人資料，請只從受信任的來源下載應用程式，例如 Android Market。

管理應用程式 - 管理及移除已安裝的應用程式。

正在運作的服務 - 允許您查看及控制目前正在運作的服務。該選項顯示每個正在運行的服務的進程及分別佔用的內存量。

儲存空間使用量 - 檢視應用程式的儲存空間使用量。

開發 - 允許您設定應用程式開發選項，例如 **USB 偵錯**、**保持清醒** 和 **允許模擬位置**。

帳號與同步處理設定

〈 一般同步處理設定 〉

背景資料 - 允許應用程式在背景中同步數據，而不論您是否啟動它們。不勾選此設定會幫助節省電池電力，同時也會降低（但不會完全停止）數據利用率。

自動同步 - 允許應用程式在自己的平臺上同步、發送和接收數據。

〈管理帳戶〉

您新增到此手機上的所有 Google 帳戶和其他帳戶的列表。如果您點按該屏幕上的某一帳戶，則該帳戶的屏幕會開啟。

私隱

〈個人資料〉

出廠數據重設 - 從內部手機儲存體刪除所有您的個人資料，包括您 Google 帳戶、其它帳戶、您的系統和應用程式數據和設定、以及任何您所下載的應用程式以及 DRM 授權。重設手機並不會刪除任何您所下載的系統軟件更新，也不會刪除諸如音樂或相片等在您記憶卡上的檔案。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

SD 卡與手機儲存

〈USB 連接模式〉

您的手機可用作大型儲存裝置。您可以將 USB 連線模式預設為僅限大容量儲存體。

〈SD 卡〉

檢查總空間及可用空間。點按移除 SD 卡以安全移除。如您希望刪除記憶卡上的所有資料，請將 SD 卡格式化。在您格式化一個記憶卡之前必須先解除安裝。

〈手機內置記憶體〉

檢查可用空間。

語言與鍵盤

使用**語言與鍵盤**設定來選擇您手機文字的語言，包括您新增至字典的字詞，並配置您的螢幕鍵盤。

語音輸入與輸出

〈語音輸入〉

語音辨識系統設定 -

使用**語音識別**設定，以設定 Android 語音輸入功能。

設定

〈 語音輸出裝置 〉

文字轉語音設定 -

使用**文字轉語音設定**，為可使用 Android 文字轉語音合成器的應用程式設定此功能。

備註：如果您沒有安裝語音合成數據，那麼只有**安裝語音資料項設定**可使用。

可存取性

您可使用**可存取性**設定，以設定任何已安裝到手機的可存取性外掛程式。

備註：需要額外外掛程式，才可選擇此選項。

日期與時間

使用**日期與時間**設定以設置您所希望的日期顯示方式的標準。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。


關於手機

檢視法律資訊，檢查手機狀態和軟件版本。

Wi-Fi


使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速瀏覽互聯網。您可以使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

開啟 Wi-Fi

從桌面開啟通告欄，然後點按  以開啟。

您也可點按**應用程式 > 設定 > 無線及網絡**，然後開啟 Wi-Fi。

連接至 Wi-Fi

選擇要連接的 Wi-Fi 網絡。如果看到 ，則需要輸入密碼以連接。

備註：


- 如果處於 Wi-Fi 範圍以外並選擇 3G 連接，則可能需額外收費。

- 如果手機進入休眠模式，即使在連接至 Wi-Fi 時，也會自動停用 Wi-Fi 連接。在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並會收取額外費用。）
- LG-P970 支援 WEP、WPA/WPA2-PSK 及 802.1x EAP。安全。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

共享手機的流動數據連接

您可將手機切換成可攜式 Wi-Fi 熱點，同時與最多 5 部裝置共享手機的數據連接。

當手機正共享數據連接，狀態列會顯示圖示，而通告欄內也會顯示進行中的通告。

圖示	說明
	可攜式 Wi-Fi 熱點已啟動

有關可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com/tether>。

注意：連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

可攜式 Wi-Fi 熱點設定

在桌面點按**應用程式**標籤，然後選擇**設定**。

點按**無線網絡**並選擇**可攜式熱點**。選擇您想調整的選項。


可攜式 Wi-Fi 熱點 - 勾選以可攜式 Wi-Fi 熱點的形式共享手機的網絡數據連接。

可攜式 Wi-Fi 熱點設定 - 開啟選擇以設定熱點名稱、開啟熱點及選項以設定熱點並非使用時應開啟的時間。

設定

說明 - 開啟載有可攜式 Wi-Fi 熱點資料的對話方塊，並取得更多資料的詳情。

要將手機的數據連接以可攜式熱點的形式分享

- 1 在桌面點按**應用程式**標籤，然後選擇**設定**。
- 2 點按**無線網絡**並選擇**可攜式熱點**。
- 3 勾選**可攜式 Wi-Fi 熱點**。
 - 手機將會開始廣播 Wi-Fi 網絡名稱 (SSID)，您可以將手機連接至最多 8 台電腦或其他裝置。進行中的通告  會加入至狀態列及通告欄內。
 - 選擇**可攜式 Wi-Fi 熱點**後，您可更改其網絡名稱或保護 Wi-Fi 網絡。
- 4 取消選擇**可攜式 Wi-Fi 熱點**以停止透過 Wi-Fi 共享數據連接。

要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

- 1 在桌面點按**應用程式**標籤，然後選擇**設定**。
- 2 點按**無線及網絡**並選擇**可攜式無線熱點**。
- 3 確保已選擇**可攜式無線 Wi-Fi 熱點**。
- 4 點按**可攜式無線 Wi-Fi 熱點設定**。
- 5 點按**設定無線 Wi-Fi 熱點**。
 - **設定 Wi-Fi 熱點**對話方塊開啟。
 - 您可以更改當掃描 Wi-Fi 網絡時其他電腦所看見的網絡 SSID (名稱)。
 - 您也可以點按**安全性功能表**，以預先共用的金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。

- 如果您點按 **WPA2 PSK 安全** 選擇，密碼欄位會加入至**設定 Wi-Fi 熱點**的對話方塊內。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要輸入該密碼。或點按**安全**功能表內的**開啟**，從 Wi-Fi 網絡移除安全性。

注意！

如果您將安全選項設定為**開啟**，則無法防止其他人士在未經授權的情況下使用網上服務，並可能產生額外收費。要避免未經授權的使用，您應該保留此安全選項。

6 點按**儲存**。

使用 **SmartShare**

SmartShare 使用 DLNA（數碼生活網絡聯盟）技術透過無線網絡分享數碼內容。兩個裝置均必須獲 DLNA 認證以支援此功能。

使用 Smart Share (SmartShare1.3 版本)，您可在兩個裝置之間分享及播放多媒體內容（SmartShare1.0 只可分享内容）。兩個裝置必須連接至 Wi-Fi 網絡（已啟用 DLNA）或任何其他已設為 Wi-Fi 熱點的裝置；要建立第三個裝置 Wi-Fi 熱點，轉到設定 > 無線及網絡 > 可攜式熱點 > 啟用可攜式 Wi-Fi 熱點核取方塊。

要使用 **SmartShare** 允許分享及播放內容

要使用 SmartShare 應用程式，轉到應用程式 > SmartShare > 選項 > 設定 > 啟用可偵測核取方塊，然後選擇您想分享的內容，再按返回。

點按來源圖示，然後點按重新整理圖示，將會顯示裝置列表。選擇您想分享數據的裝置。

設定

啟用 Wi-Fi Direct 透過 SmartShare 進行分享

使用其他 Wi-Fi 功能時無法啟用 Wi-Fi Direct。

如果兩個裝置都支援 Wi-Fi Direct，兩者可在沒有使用 Wi-Fi 熱點的情況下進行連接；Wi-Fi Direct 自動掃描附近的 Wi-Fi Direct 裝置，所掃描的裝置會以被掃描的先後次序列出，您可以選擇指定的裝置以透過 SmartShare 分享多媒體數據。

- 1 在桌面點按應用程式標籤，然後選擇設定。
 - 2 點按無線及網絡，然後選擇 Wi-Fi Direct 設定。
 - 3 確保已選擇 Wi-Fi Direct。
 - 4 在已掃描裝置列表選擇裝置進行連接。
- **強制 G/O 模式** - 點按以啟動群組所有者模式，允許其他 Wi-Fi 裝置可透過掃描手機來進行連接。在此情況，您必須輸入密

碼，該密碼設定在功能表 > 進階 > 密碼。然後轉到應用程式 > SmartShare > 選項 > 設定 > 選擇可偵測性 > 然後接受設定畫面顯示的 IP。現在點按來源圖示，您將會在列表看到已連接的裝置名稱；點按裝置便可看到分享内容。

注意：當手機成為群組所有者時，將會較成為用戶時消耗更多電池電量。Wi-Fi Direct 連接並不提供互聯網服務。連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

提示！ 需要安裝 Wi-Fi Cast 應用程式以儲存使用 Wi-Fi Direct 分享的內容。

如何使用螢幕上的手機

螢幕上的手機讓您透過 USB 或藍芽連接從電腦裡檢視手機螢幕。您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

螢幕上的手機圖示



連接或中斷電腦與手機的連接。



旋轉 On-Screen 手機視窗（只適用於支援旋轉的應用程式）。



更改 On-Screen 手機偏好設定。



結束 On-Screen 手機程式。



將 On-Screen 手機視窗最小化。

螢幕上的手機功能

- 即時傳送及控制：連接至電腦時，顯示並控制您的手機螢幕。
- 滑鼠操控：讓您在電腦螢幕上使用滑鼠拖動並點按，以控制您的手機。
- 使用鍵盤輸入文字：讓您使用電腦鍵盤編寫文字訊息或備註。
- 檔案傳送（由手機至電腦）：從手機將檔案（如相片、影片、音樂及 ThinkFree Office 檔案）傳送至電腦內。只須按滑

鼠右鍵，並將檔案拖動至您的電腦內。

- 檔案傳送（由電腦至手機）：從電腦將檔案傳送至手機內。只須選擇您想傳送的檔案，然後拖放至 On-Screen 手機視窗內。您傳送的檔案會儲存在 micro SD 咭內。
- 即時事件通知：如有，顯示彈出視窗，就任何來電或文字/多媒體訊息、鬧鐘及事件通知向您發出提示通知。

通告：相機預覽及影片並不受 OSP 支援，因此無法在電腦上提供。

如何在電腦上安裝 On-Screen 手機

瀏覽 LG 主頁 (<http://www.lg.com>)，前往支援 > 手機支援 > 下載 LG 手機支援工具至電腦。如果您下載 LG PC Suite IV，On-Screen 手機程式也會一同下載至您的電腦內。然後您可於電腦上安裝 On-Screen 手機。

設定

如何將手機連接至電腦

USB 連接:

- 1 開啟連接精靈，選擇「USB 線連接」，然後按「下一頁」。
- 2 使用 USB 線將手機接至電腦，然後按「下一頁」。
- 3 輸入螢幕上的手機密碼，然後按「下一頁」。預設密碼為「0000」。您可在**設定 > 無線及網絡 > 螢幕上的手機設定**變更密碼。
- 4 按「確定」結束視窗。

使用藍芽無線連接:


- 1 在手機上，前往**設定 > 無線網絡 > 藍芽設定**。選擇**開啟藍芽**並選擇**可偵測性**。
- 2 如果您曾使用纜線連接，執行新連接精靈以建立新連接。
- 3 在電腦上執行連接精靈，選擇「藍芽連接」，再選擇「下一頁」。
- 4 精靈會開始搜尋已啟用藍芽的手機。顯示您想連接的手機後，按「停止」以停止搜尋。

- 5 從裝置清單選擇「LG-P970」，然後按「下一頁」。您可以為裝置重新命名。
- 6 輸入 PIN 碼（如「0000」），然後按「下一頁」。
- 7 在手機上，接受要求並輸入相同 PIN 碼，再點按「確定」。
- 8 輸入螢幕上的手機密碼，然後按「下一頁」（預設密碼為「0000」）。
- 9 點按「確定」結束。

要檢查手機至電腦連接

只要已連接裝置，向下拖動桌面上方的通知列，以檢查螢幕上的手機的連接狀態。

中斷電腦與手機的連接

點按在螢幕上的手機視窗左上角的 。或向下拖動桌面上方的通知列，然後選擇「On-Screen 手機」。在斷開連接視窗內點按「是」。

備註: 關閉 On-Screen 手機服務後，必須重新開啟手機。

手機軟件更新

從互聯網更新 LG 手機軟件

要了解更多有關此功能的資訊，請瀏覽 <http://www.lg.com/>。

透過此功能，您便無須親臨客戶服務中心，就可透過互聯網更新手機韌體至較新版本，這非常方便。此更新功能只在 LG 發佈適合您的手機有較新韌體版本時才可使用。

手機韌體更新要求使用者必需緊密留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的手機造成嚴重損害。

注意：LG 保留權利，可酌情決定只為指定型號提供韌體更新，並不保證所有手機型號均有韌體的較新版本。

Remote Call

這是標準線上支援解決方案。

Remote Call + Mobile pack 為遠程支援解決方案，可讓支援代表在電腦上檢視及控制客戶的手機螢幕，遠程診斷以及解決手機問題。

版權和商標

此手機包含的所有技術和產品的權利均為其各自擁有者的財產：

- Bluetooth® 乃 Bluetooth SIG, Inc. 的註冊商標。
- microSD™ 及 microSD 標誌乃 SD Card Association 的商標。
- Google™, Google Search™, Maps™, Gmail™, YouTube™, Talk™ 和 Market™ 均為 Google, Inc. 的註冊商標。
- Wi-Fi® 及 Wi-Fi Protected Access® 乃 Wi-Fi Alliance 的註冊商標。 Wi-Fi Direct™ 及 Wi-Fi Protected Setup™ 乃 Wi-Fi Alliance 的商標。



- 包含獲 Adobe Systems Incorporated 授權的 Adobe® Flash® Player 或 Adobe AIR® 技術。版權所有 © 1995–2011。

• Dolby Mobile 授權通知



由獲得 Dolby Laboratories 的授權下製造。Dolby 及 double-D 符號乃 Dolby Laboratories 的商標。

• DivX 手機



關於 DIVX 影片：DivX® 數碼影片格式由 DivX, Inc 建立，是播放 DivX 影片的官方 DivX Certified® 裝置。要取得詳情以及將檔案轉換為 DivX 影片的軟件工具，請瀏覽 www.divx.com。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的影片播放器選項功能表找出 DivX VOD 部分。請前往 vod.divx.com 以參考更多有關如何完成註冊的資訊。

DivX Certified® 可播放HD 720p 以下的 DivX® 影片，包括專貴內容。

DivX®, DivX Certified® 及相關標誌是 DivX, Inc. 的商標並經授權下使用。

通告!

公開原始碼軟件

若要取得

GPL、LGPL、MPL 或其他
公開來源授權的相應原
始碼，請瀏覽 [http://
opensource.lge.com/](http://opensource.lge.com/)。

所有授權的條款、免責聲
明及通知均可連同原始碼
一同下載。

配件

該等配件適合配合 LG-P970 使用。
(下述配件並非必要。)

充電器



數據線

連接您的
LG-P970 至電
腦。



電池



使用手冊

瞭解有關
LG-P970 的更多
資訊。



立體聲耳機



備註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高: +55° C (放電) +45° C (充電)

最低: -10° C

疑難排解

本章會列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行解決。

訊息	可能起因	合理的修正措施
智能卡錯誤	手機內無智能卡，或不正確地插入智能卡。	確保已正確地插入智能卡。
無網絡連接/失去網絡	網絡範圍外訊號弱 網絡商套用新服務	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能卡是否過期。 如是者，請前往網絡供應商的就近分店更換智能卡。
密碼不正確	要更改安全密碼，您需要再次輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	預設的手機密碼為 [0000]。如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。
無法撥打電話	撥號錯誤 新智能卡已插入 已達預付費用上限	新網絡未獲受權。 請檢查新的限制。 聯絡您的服務供應商，或使用 PIN 2 重設限額。
手機無法啟動	按下開啟/關閉鍵的時間不夠長 電池並無充電 電池接觸面骯髒	按下開啟/關閉鍵至少兩秒。 保持充電器連接更長時間。清潔金屬接觸面。 取出電池並重新插入。

訊息	可能起因	合理的修正措施
充電錯誤	<p>電池並無充電。 外界溫度太高或太低 接觸不良</p> <p>無電壓 充電器故障 使用了不正確的充電器。 電池故障。</p>	<p>替電池充電。 確保於正常溫度下為手機充電。 檢查充電器是否正常，以及是否正確地連接 電源至手機。 檢查電池接觸點，如有髒污 則需清潔。 插入不同插座內。 如充電器沒有變暖，則需更換充電器。 請只使用原裝 LG 配件。 更換新電池。</p>
不允許撥打號碼	固定撥號號碼功能已開啟。	檢查設定。
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機上的部份訊息
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式
記憶卡無法運作	只支援 FAT 16, FAT 32 檔案系統	透過讀牯器檢查記憶卡檔案系統或使用手機 將 SD 卡格式化
接收來電時，屏幕 並無開啟。	感應器問題	如果您使用任何保護貼或保護套，檢查該等配 件有否掩蓋距離感應器附近的範圍。 確保距 離感應器附近並無任何障礙物。
無聲音	震動或靜音模式	檢查聲音功能表的設定狀態，確保您並非使用 震動或靜音模式。
掛線或凍結	軟件間歇性問題	<p>移除電池並再插入電池。 開啟手機。 透過 WEB 網站嘗試進行軟件更新。</p>



LG-P970 用户手册 - 中文

- 本手册中的部分内容可能不适用于您的手机，具体视您手机的软件或服务提供商而定。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2011 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。



目录

重要注意事项	5	Google 帐户设置	25
1. 手机内存	5	创建 Google 帐户	25
2. 优化电池使用寿命	5	登录 Google 帐户	25
3. 安装开放源操作系统	6	通话/联系人	27
4. 使用解锁图样	7	拨打语音电话	27
5. 连接 Wi-Fi 网络	7	拨打视像电话	27
6. 打开和切换应用程序	8	视频通话菜单中	27
7. 在 PC 上安装 LG PC 套件	8	呼叫联系人	27
8. 通过 USB 将手机连接到计 算机	12	接听和拒绝电话	28
9. 使用数据连接时的解锁屏幕	13	调节音量	28
10. 不要在 PC 开机/关机时连接 手机	13	拨打第二个电话	28
11. 向上持握手机	13	查看通话记录	29
12. 屏幕冻结	13	通话设置	29
开始了解您的手机	14	电话本	30
安装 SIM 卡和电池	16	搜索联系人	30
充电	17	添加新联系人	30
安装存储卡	17	收藏夹联系人	31
格式化存储卡	18	信息/电子邮件	32
主屏	19	信息	32
触摸屏提示	19	发送信息	32
锁定手机	19	更改信息设置	33
解锁屏幕	19	设置电子邮件	33
主屏	20	Microsoft Exchange	
将小工具添加到主屏	20	电子邮件帐户	33
返回到最近使用的应用程序	21	其他 (POP3, IMAP, GME) 电子邮件 帐户	34
屏上键盘	23	撰写和发送电子邮件	34
输入带注音的字母	24	使用帐户文件夹	35
		添加或编辑电子邮件帐户	35

社交网络	37	如何将音乐/视频文件保存到手机	50
将您的帐户添加到手机	37	如何将旧手机上的联系人移至当前手机	50
查看和更新状态	37	如何通过蓝牙从手机发送数据 ..	51
在手机上删除帐户	38	Google 应用程序	53
相机	39	地图	53
了解取景器	39	Market	53
快速拍照	40	Gmail	53
拍照后	40	Talk	53
使用高级设置	40	Google Search	53
使用对焦模式	42	实用工具	54
查看保存的照片	42	设置闹钟	54
摄像机	44	使用计算器	54
了解取景器	44	将事件添加到日历中	54
快速摄像	45	录制声音或语音	55
拍摄视频后	45	发送录音	55
使用高级设置	45	网络	56
观看保存的视频	46	浏览器	56
观看视频时调节音量	46	使用选项	56
多媒体	47	设置	57
我的文档	47	无线和网络	57
更改相册内容显示的方式	47	声音	58
音乐	47	显示	58
播放歌曲	48	笔势	59
使用收音机	48	安全性和位置	59
搜索电台	49	使用多个	60
收听收音机	49	数据同步	61
使用 USB 大容量存储设备传输文件	49	隐私	61

目录

SD 卡和手机存储器.....	61
区域和文本.....	62
语音输入与输出.....	62
辅助功能.....	62
日期和时间.....	62
关于手机.....	62
Wi-Fi.....	62
打开 Wi-Fi.....	63
连接到 Wi-Fi.....	63
共享您手机的移动数据连接....	63
便携式 Wi-Fi 热点设置.....	64
将手机的数据连接共享为便携式 Wi-Fi 热点.....	64
重命名或确保您的便携式热点 安全.....	64
使用 SmartShare.....	65
使用 SmartShare 以允许共享和播 放内容.....	65
启用 WLAN Direct, 通过 SmartShare 共享.....	66
如何使用屏幕手机.....	66
屏幕手机图标.....	67
屏幕手机功能.....	67
如果在 PC 上安装屏幕手机....	67
如何将手机连接至 PC.....	67
检查手机到 PC 的连接.....	68
断开手机与 PC 的连接.....	68
手机软件更新.....	69

版权所有和商标.....	70
配件.....	72
技术参数.....	73
故障排除.....	74

重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存的可用空间小于 10% 时，您的手机无法收到新信息。

您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

管理应用程序：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。
- 2 当所有应用程序显示时，请滚动并选择要卸载的应用程序。
- 3 依次点触**卸载**和“确定”以卸载所需的应用程序。

2. 优化电池使用寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您也可以监控应用程序和系统资源如何节省电池电量。

延长电池使用寿命：

- 关闭未使用的无线电通讯。如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

检查电池电量水平：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 关于手机 > 状态**。
- 2 电池状态（充电、放电）和电量（完全充电的百分比）显示在屏幕顶部。

重要注意事项

监视并控制使用电池的项目：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 关于手机 > 电池使用**。
- 2 屏幕顶部显示电池使用时间。这是手机最近一次连接到电源后的时长，或连接到电源后，手机最后使用电池电源的时长。屏幕上列出了使用电池电源的应用程序或服务，从最大量到最小量。

3. 安装开放源操作系统

如果在手机上安装开放源操作系统，而不使用制造商提供的操作系统，则可能导致手机无法正常工作。



警告

如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。



警告

为保护您的手机和个人数据，请只从信任的来源（如 Android Market）下载应用程序。如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。您需要从手机中卸载那些应用程序及其所有数据和设置。

4. 使用解锁图样

设置屏幕锁定以保护您的手机，要进行设置，请选择**应用程序 > 设置 > 位置和安全 > 设置屏幕锁定**。这样就可打开用于屏幕锁定的多个选项设置的屏幕。

您可以通过连接四个或更多个点来绘制自己的解锁图案。

如果设置了图样，则手机的屏幕被锁定。要将手机解锁，请在屏幕上绘制您设置的图样。

注意：设置解锁图样时，需要先创建 Gmail 帐户。

警告 使用图样锁定时应采取预防措施。

请务必记住您设置的解锁图样。您有 5 次机会输入解锁图样、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法调用解锁图样、PIN 或密码时：

如果您尝试在手机上登录 Google 帐户并使用图样 5 次均失败，请轻触“忘记图样”按钮。随后，您要使用您的 Google 帐户登录以将手机解锁。

5. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或实施其他安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

打开 Wi-Fi 并连接 Wi-Fi 网络：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 无线和网络 > Wi-Fi 设置**。
- 2 点触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。

重要注意事项

- 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网路。
- 3 点触某个网络进行连接。
- 如果网络已打开，您会收到提示，要求您点触**连接**确认连接到该网络。
- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息。）
- 4 状态栏显示了可指明 Wi-Fi 状态的图标。

6. 打开和切换应用程序

Android 可轻松地运行多任务，因为即使您打开另一应用程序，当前打开的应用程序也会保持运行状态。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

停止使用的应用程序：

- 1 请点触主屏上的**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序 >**单击**运行**选项卡。
- 2 滚动到所需应用程序，然后点触**强制停止**以停止使用该应用程序。

提示！

返回到最近使用的应用程序

点触并按住**主屏键**。屏幕上将出现您最近访问的应用程序。

7. 在 PC 上安装 LG PC 套件

要通过 USB 数据线同步手机与 PC，您需要在 PC 上安装 LG PC 套件程序。

您可以从 LG 网站(<http://www.lg.com>) 下载您的手机安装程式和使用资讯。您可参考往下图示和依据网站指示以下载适合您手机型号

的软件并完成安装。

LG PC 套件

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到 PC，以便在 PC 上使用手机的功能的程序。

LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据
- 从 PC 或手机同步数据（联系人、日历/信息（短信）、书签）使用简单的拖放操作在 PC 和手机之间
- 方便地传输多媒体文件（照片、视频和音乐）
- 将信息从手机传输到 PC
- 软件更新而不丢失任何数据

LG-P970 不支持：

- 通过蓝牙连接 PC
- 日历中的待办事项
- Java 应用程序

有关详细信息，请参阅 LG PC Suite IV 的用户手册。您安装 LG PC Suite IV 后，可在“帮助”菜单中找到此手册。


重要注意事項

下載 LG 手機支援軟件

1) 登入www.lg.com，到支援，手機支援



2) 下載及安裝LG 手机支持軟件

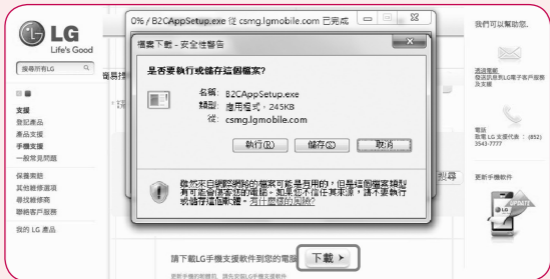

3) 在下载相关手机支援软件后并执行以完成所下载的 LG PCSuite IV 文件，然后按说明执行操作。

* LG PC Suite IV 安装完成后，禁用大容量存储模式以运行 LG PC Suite IV。

重要注意事项

8. 通过 USB 将手机连接到计算机

使用 USB 设备传输 microSD 卡中的文件：

- 1 在手机上安装 microSD 卡。
(存储卡可能已插入手机。)
- 2 连接 USB 数据线之前，请确保手机已启用**大容量存储**模式。
(在**应用程序**选项卡上选择**设置** > **应用程序** > **开发** > 取消选择 **USB 调试**)
- 3 使用手机附带的 USB 数据线将手机连接到计算机上的 USB 端口。打开通知抽屉，选择“USB 已连接”然后点触**打开 USB 存储设备**。

当手机作为 USB 存储器进行连接时，您会收到一则通知。您手机的 microSD 卡已安装为计算机的驱动器。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

在此期间，无法从手机访问 microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、我的文档和音乐功能）。

备注：卸载 PC Suite IV 时，不会自动删除 USB 和蓝牙驱动程序。因此，它们必须手动卸载。

提示！ 要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触关闭 USB 存储。要断开手机与计算机的连接，请仔细按照计算机的说明正确地断开 USB 设备的连接，从而避免丢失卡上的信息。

- 1 打开通知抽屉，并点触**关闭 USB 存储设备**。
- 2 在打开的对话框中点触**关闭 USB 存储设备**。
- 3 安全地断开计算机上的 USB 设备。

警告

请勿在手机开机时插入或取出 microSD 卡。否则，可能损坏 microSD 卡以及手机，并且 microSD 卡上存储的数据也可能会损坏。要安全取出 microSD 卡，请在主屏中按菜单键，然后点触 **设置 > SD 卡和手机存储器 > 取消安装存储卡**。

9. 使用数据连接时的解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，按硬键即可。

10. 不要在 PC 开机/关机时连接手机

确保经数据电缆断开手机和 PC 的连接，因为它可能在 PC 上有错误。

11. 向上持握手机

请将手机像普通电话一样向上持握，LG-P970 有内置天线。请注意不要刮伤或损坏手机背面，否则会导致性能损失。拨打/接听电话或发送/接收数据时，尽量避免持握天线所处的手机下部。这可能影响通话质量。

12. 屏幕冻结

如果手机对用户输入无响应或者屏幕冻结：

卸下电池，将它再次插入并将手机开机。如果这仍不起作用，请联系服务中心。

开始了解您的手机

要将手机开机，请按住**电源键** 3 秒。

要将手机关闭，请按住**电源键** 3 秒，然后依次点触“关机”和“确定”。

听筒

近程传感器

主屏键

- 从任何屏幕返回主屏。

菜单键

- 检查可用的选项。

麦克风

电源/锁定键

- 按住此键可开/关机。
- 按下并锁定屏幕。

返回键

- 返回上一个屏幕。

搜索键


- 在手机中搜索网络和内容。



⚠ 警告： 在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。
不要在 LCD 的进程传感器上使用保护膜。
这可能会影响传感器的感应度。

提示！ 当您轻触应用程序以检查可用选项时，请点触菜单。

提示！ 如果您在使用时 LG-P970 显示错误信息，或者您无法开机，请取出电池，然后再装回，5 秒钟后重新开机。




音量键

- 在主屏上：控制铃声音量。
- 在通话过程中：控制听筒音量。
- 播放曲目时：连续控制音量。

3D 动作笔势 (G-key)

- 通过倾斜、晃动或点触手机，可轻松执行相应功能。



microSD 存储卡插槽

相机镜头

SIM 卡插槽



开始了解您的手机

安装 SIM 卡和电池

在开始浏览新手机之前，您需要先进行设置。插入 SIM 卡和电池：


- 1 要卸下后盖，请用手抓紧手机。用食指花开手机盖时，用另一只手牢牢按住手机盖的中间位置。然后，卸下电池盖。



- 2 将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。




- 3 对齐手机和电池上的金色接触区域以插入电池。

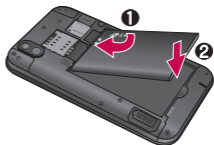

4 盖上手机的后盖。



充电

充电器接口位于 LG-P970 顶部。插入充电器，然后将其插入电源插座。必须为 LG-P970 充电，直至看到 。



备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

安装存储卡

要存储更多媒体文件（如使用内置相机拍摄的图像），您必须将存储卡插入手机中。

插入存储卡：

1 关闭手机，然后插入或取出存储卡。卸下后盖。



2 将存储卡插入插槽。确保金色接触区域面朝下。

开始了解您的手机



格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

备注：格式化卡时，卡上的所有文件将被删除。

- 1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 滚动并点触**存储卡和手机内存**。
- 4 点触**取消联结 SD 卡**。
- 5 点触**格式化 SD 卡**，然后确认选择。

- 6 如果设置了图样锁定，请输入图样锁定，然后选择**清除全部内容**。存储卡完成格式化，现在，您可以使用了。

备注：如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

提示！ 如果存储卡已删除，您可以使用下列步骤格式化。

点触**应用程序 > 设置 > 存储卡和手机内存 > 格式化 SD 卡**。

警告

请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。要安全地取出存储卡，请选择**应用程序 > 设置 > 存储卡和手机内存 > 取消联结 SD 卡**。

主屏

触摸屏提示

以下是关于如何浏览手机的一些提示。

点触 - 要选择菜单/选项或打开应用程序，请点触它。

点触并按住 - 要打开选项菜单或选中想要移动的对象，请点触并按住它。

拖动 - 要滚动浏览列表或慢慢移动，请在触摸屏上拖动。

轻弹 - 要滚动浏览列表或快速移动，请在触摸屏上轻弹（快速拖动然后释放）。

翻转 - 暂停或静音来电、音乐/视频播放器或闹钟。

倾斜和摇动 - 放大/缩小以及在列表间导航。

轻触 - 轻触手机的四个侧面，控制音乐以及将光标移到下一页。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。

- 使用指尖点触所需选项。请注意不要触碰到其它键。

锁定手机

不使用 LG-P970 时，按**电源**键可锁定手机。这有助于防止意外按键和节省电池电量。

如果一段时间不使用手机，主屏幕或者您正在查看的其他屏幕将替换为锁定屏幕以节省电池电量。

备注：如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、web 访问和数据通信）。

解锁屏幕

提示！ 按住手机左侧的 G-key，然后晃动手机两次。此时将自动启动相机预览。如果要使用此功能，您需要选择**设置 > 笔势 > 打开使用动作笔势 > 转到相机**。

主屏

要唤醒手机，请按**电源**键。锁定屏幕将会显示。触摸并向上滑动屏幕即可解锁主屏。您最后使用的屏幕将会打开。

主屏

向左或向右轻轻滑动手指以进行检查。

您也可以使用小工具自定义每个面板，即您喜爱的应用程序、文件夹和墙纸的快捷方式。

提示！ 按住 G-key 后，向左或向右倾斜手机以快速查看墙纸。

备注：一些屏幕图像可能因手机提供商而不同。

在主屏上，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。



点触手机可打开触摸拨号键盘，以拨打电话。




点触联系人以打开电话本。



点触**信息**图标以访问信息菜单。

在这里，您可以创建新信息。

 点触屏幕底部的**应用程序**选项卡。然后，您可以查看安装的所有应用程序。只需点触即可滚动浏览您的应用程序。

要打开所需应用程序，从应用程序列表中间点触相应图标即可。

备注：根据手机软件或服务提供商的不同，预加载的应用程序将有所不同。

将小工具添加到主屏

您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。


要将所需图标添加到主屏：

- 1 在主屏上，点触**菜单**键并选择**添加**。或长按主屏的空白部分。
- 2 在**编辑模式**菜单上，点出您要添加的项目类型。
- 3 例如，从列表中选择**文件夹**并轻触它。从列表中选择**有电话号码的联系人**并轻触它。

- 4 您将在主屏上看到新文件夹的图标。 将其拖动到所需面板的所需位置，然后在屏幕上松开手指。

提示！ 要将应用程序图标添加到主屏，请在**应用程序菜单**上点触并按住要添加到主屏的应用程序。

从主屏中删除应用程序图标：

- 1 点触并按住您要删除的图标。
- 2 将应用程序图标拖放到垃圾箱图标 。

备注：您无法删除预加载的应用程序。（只可以从屏幕上删除其图标。）

返回到最近使用的应用程序

- 1 点触并按住**主屏键**。 屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。


- 2 点触某个图标以打开其应用程序。 或者，点触**返回键**以返回到当前应用程序。

通知抽屉

通知抽屉在屏幕顶部运行。



请使用手指点触并滑动通知抽屉。

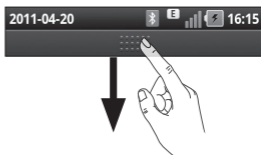

或者，在主屏上点触**菜单键**，然后选择**通知**。 您可以在此处检查和管理 Wi-Fi、蓝牙、GPS 状态及其他通知。

主屏

查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。



[状态栏]

图标	描述
	无 SIM 卡
	无信号
	飞行模式
	已连接到 Wi-Fi 网络
	有线耳机
	正在通话
	呼叫保持
	扬声器
	手机麦克风静音




图标	描述
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	振动模式
	电池已充满电
	电池正在充电
	数据传进和传出
	手机已通过 USB 数据线与 PC 连接
	正在下载数据
	正在上载数据
	GPS 正在采集
	正在从 GPS 接收位置数据



图标	描述
	屏幕手机已连接
	还有 3 个通知未显示
	数据正在同步
	下载完成
	新电子邮件
	新 Gmail
	新 Google Talk 信息
	新信息
	正在播放歌曲
	近期事件
	在后台打开 FM 收音机
	便携式 Wi-Fi 热点激活


屏上键盘

您可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点触要输入文本的文本字段。


使用键盘并输入文本

   轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。


  轻触以切换为数字和符号键盘。您也可以点触并按住此项卡以查看设置菜单。

 轻触以查看，或长按以更改编写语言。

 轻触以输入空格。

 轻触以在信息字段新建一行。

 轻触以删除上一字符。

 轻触以隐藏屏上键盘。

主屏

输入带注音的字母


当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“ä”）。

例如，要输入“á”，点触并按住“a”，直到显示特殊字符。然后，选择所需特殊字符。

Google 帐户设置

当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。

创建 Google 帐户

- 1 在主屏上点触**应用程序**选项卡  以打开应用程序菜单。
- 2 依次轻触 **Gmail** 和 **下一步 > 创建** 以启动 Gmail 设置向导。
- 3 点触文本字段以打开触摸键盘，输入您的姓名和 Google 帐户的用户名。当输入文本时，您可以点触键盘上的 **下一步** 移动到下一文本字段。
- 4 完成姓名和用户名输入后，请轻触 **下一步**。您的手机正在与 Google 服务器通信，正在检查用户名可用性。
- 5 输入并重新输入您的密码。然后按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触**登录**。正在登录，请稍候。
 - 2 登录后，您可在手机上使用 Gmail 收发邮件和利用 Google 服务。
 - 3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（具体取决于您的同步设置。）
- 登录后，您可以使用 Gmail、Google Calendar、Android Market；从 Android Market 下载应用程序；以及在手机上使用其他 Google 服务。




Google 帐户设置


重要!

- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的联系人、Gmail 消息、日历事件和来自网络上这些应用程序和服务的其它信息将与您的手机同步。如果在安装期间未登录 Google 帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Android Market）时会提示您登录或创建一个 Google 帐户。
- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

通话/联系人

拨打语音电话

- 1 点触  以打开键盘。
- 2 在键盘上输入号码。要删除一个数字，请点触**清除**按钮。
- 3 点触**通话**图标  以拨打电话。
- 4 要结束通话，请点触**结束**图标 。

提示！ 要输入“+”以拨打国际电话，请点触并按住 。

提示！ 要在通话过程中显示键盘，请点触**拨号盘**。

拨打视频电话

- 1 点触  以打开键盘。
- 2 像往常一样输入电话号码。
- 3 点触**视频通话**图标  拨打视频电话。

- 4 若不想使用扬声器，请点触**免提**，确保将耳机插入。
- 5 在视频电话连接过程中，您会看到自己的图像；在对方接听后，屏幕将显示其图像。请根据需要调整内置相机位置。
- 6 要结束视频通话，请点触**结束**。
个人：您可以更改图像，而不显示当前个人图像。

拨号盘：键入号码。

保持：静音，暂停视频。

静音：关闭声音。


扬声器：扬声器开或关。

视频通话菜单中

捕捉 - 您可以捕捉他人图像。

使用备选相机 - 切换相机。

呼叫联系人

- 1 点触  可以打开电话本。
- 2 滚动浏览联系人列表，或点触**搜索**输入您要呼叫的联系人首字母。
- 3 在列表中，点触您要呼叫的联系人。


通话/联系人

接听和拒绝电话



提示！ 翻转手机或按音量键对来电静音。
按音量键对来电静音。

提示！ 按 G-key，晃动手机以接听来电。
在通话过程中，按 G-key 并晃动手机可退出通话。

屏幕锁定时：

铃声响起时，将“拒绝”图标  拖到左侧可以拒接来电。

屏幕解锁时：

手机响起时，点触**接受**图标 。
点触**拒绝**图标  可以拒接来电。

提示！ 借口信息

要拒接来电时，您可以通过拖动屏幕上的**借口信息**快速发送信息。此选项有助于在会议时回复信息。

调节音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低按钮。

拨打第二个电话

- 1 在初始呼叫中，点触**添加呼叫** 。
- 2 拨号码或搜索联系人，以选择要呼叫的号码。
- 3 点触**通话**图标  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 点触列表，在通话间切换。
备注：您可点触**合并通话**  启动电话会议。
- 6 要结束当前通话，请点触**结束**图标 。

查看通话记录

在主屏上，点触  并选择**通话记录**选项卡。

查看所有拨电、已接来电和未接来电的完整列表。

提示！ 点触任意单个通话记录条目，以查看通话日期、时间和时长。

提示！ 点触**菜单键**，然后点触**全部删除**以删除所有记录条目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

- 1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。
- 2 滚动并点触**设置**。
- 3 轻触**通话设置**，然后选择要调整的选项。

<固定拨号>

选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN 2 码，此密码由运营商提供。仅可以使用手机拨打此号码列表中的号码。

<语音信箱>

语音邮件 - 允许您选择运营商的语音信箱服务。

语音信箱设置 - 如果当前在使用运营商的语音信箱服务，此选项使您可以输入用于收听和管理语音信箱的号码。

<其他通话设置>

呼叫转移 - 您可以配置开机时如何转移呼叫、何时不应答等等。

附加设置 - 此菜单允许您更改以下设置：

- **来电显示** - 选择是否要在拨出电话时显示您的号码。
- **呼叫等待** - 如果启用了呼叫等待功能，在通话过程中，手机将提醒您有来电。（这取决于网络提供商。）

通话/联系人

呼叫限制 - 选择何时限制呼叫。输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

通话费用 - 查看通话的相关费用。（此服务取决于网络；某些运营商不支持此功能。）

通话时间 - 查看所有通话的时间，包括“全部”、“已拨电话”、“已接来电”和“最后通话”。

借口信息 - 拒绝通话时，您可使用此功能快速发送一条信息。此选项有助于在会议时回复信息。

视频通话设置 - 更改您的视频通话设置。


电话本

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

搜索联系人

- 1 在主屏上点触  可打开联系人。
- 2 点触**搜索**，使用键盘输入联系人姓名。


添加新联系人

- 1 在主屏上点触 ，输入新联系人的号码，然后依次点触**菜单键**和**添加到电话本**。选择**新建联系人**或**添加到姓名**。
- 2 如果您要为新联系人添加图片，请点触 。从**拍照**或从**“我的文档”**中选择。
- 3 点触  以选择联系人类型。
- 4 点触文本字段以打开触摸键盘，输入新联系人的姓名。
- 5 点触联系人信息类别，并输入有关联系人的详细信息。
- 6 点触**完成**以保存联系人。


收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹：

- 1 在主屏上点触  可打开联系人。
- 2 点触联系人以查看详细信息。
- 3 点触联系人姓名右侧的星号。星号变为金色。

从收藏夹列表中删除联系人：



- 1 在主屏上点触  可打开联系人。
- 2 点触**群组**选项卡，然后选择**收藏夹**。点触联系人以查看详细信息。
- 3 点触联系人姓名右侧的金色星号。星号变为灰色，联系人已从收藏夹中删除。


信息/电子邮件

信息

LG-P970 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

- 1 点触主屏上的  图标，然后点触**新建信息**打开空白信息。
- 2 通过点触  或在收件人字段中输入呼叫号码，以便从联系人列表中联系人姓名。您可以添加多个联系人。
备注：您将按每个收件人每条文本信息付费。
- 3 点触下面的**写信息**开始撰写信息。
- 4 点触**发送**发送信息。

提示！ 您可以点触  图标以附加想要在信息中共享的文件。

- 5 信息屏幕将会打开，您的信息显示在您的名称后面。屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

警告

160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和语言。

警告

如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

备注：在通话期间收到短信时，手机将发出通知铃声。

更改信息设置

LG-P970 已预定义信息设置，因此，您可以立即发送信息。您可以根据喜好更改设置。

在主屏上点触**信息**图标，然后点触**菜单**键，再轻触**设置**。

设置电子邮件

点触**应用程序**选项卡，然后选择**电子邮件**。如果尚未设置电子邮件帐户，请启动电子邮件设置向导。

提示！ 如果已设置电子邮件帐户，则不会自动启动向导。

您可以选择邮箱类型为 **MS Exchange** 或其他。

Microsoft Exchange 电子邮件帐户

电子邮件地址 - 输入帐户电子邮件地址。

用户名 - 输入帐户用户名。

密码 - 输入帐户密码。

域 - 输入帐户域（可选）。

服务器地址 - 输入电子邮件服务器地址。

使用 SSL - 选择是否要对 Microsoft Exchange 使用 SSL。

点触“下一步”按钮连接服务器。此时将出现设置完成页面，您需要输入帐户显示的“名称”以及“我的名称”。

现在，此帐户将显示在帐户列表中。

信息/电子邮件

其他 (POP3, IMAP, GME) 电子邮件帐户

电子邮件地址 - 输入帐户电子邮件地址。

密码 - 输入帐户密码。

选择是否要启用 Push 电子邮件帐户。如果选择启用，将直接连接到服务器。

此时将出现设置完成页面，您需要输入“名称”。

现在，此帐户将显示在帐户列表中。

接收服务器 - 输入接收邮件服务器的地址。

端口号 - 通常显示每个帐户的默认编码。

安全类型 - TLS/SSL/关。

发送服务器 - 输入发出邮件服务器的地址。

端口号 - 通常显示每个帐户的默认编码。

安全类型 - TLS/SSL/关。

帐户屏幕

帐户屏幕列出了您的合并的收件箱以及您的每个电子邮件帐户。

- 点触**应用程序**选项卡，然后选择**电子邮件**。此时将出现**帐户列表**屏幕。

提示! 在帐户列表中，轻触电子邮件帐户将帐户图标移至主屏。点触图标可直接进入**收件箱**。


您可以点触帐户以查看其**收件箱**。您用于发送电子邮件的默认帐户将以勾选符号表示。

撰写和发送电子邮件

要撰写和发送邮件：

- 在**电子邮件**应用程序中，点触**菜单**键，然后点触**撰写**。
- 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。用逗号分隔多个地址。
- 点触**菜单**键并点触**添加抄送/密送**以便抄送或密送给其他联系人/电子邮件地址。

- 4 输入邮件的正文。
 - 5 点触**附加**以附加想要在邮件中共享的文件。
- 点触**发送**。

如果暂不发送邮件，请依次点触**菜单键**和**保存草稿**，将其保存在**草稿箱**文件夹中。在**草稿箱**文件夹中点触草稿箱邮件以继续编辑邮件。如果在发送前点触了**返回键** ，出现“保存至草稿箱”的弹出窗口时点触“否”，以舍弃并删除某个邮件，如果您正使用飞行模式或无数据连接，则无法发送邮件。未发送邮件将保存至**发件箱**中，如果正在接收邮件，它将显示在“账户”屏幕。

请注意，使用 Exchange 帐户发送的邮件将不会存储在手机上；但它们会存储在 Exchange 服务器上。如果要查看**已发送**文件夹（或带**已发送**标签）中的已发送邮件，则通常需要打开**已发送**文件夹/标签并从选项菜单中选择**刷新**。

提示！ 当新电子邮件到达收件箱时，会发出声音或振动通知。点触电子邮件通知后，通知消失。

使用帐户文件夹

每个帐户均具有**收件箱**、**发件箱**、**已发送**和**草稿箱文件夹**。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

添加或编辑电子邮件帐户

要添加电子邮件帐户：

- 1 点触**应用程序**选项卡，然后选择**电子邮件**。
- 2 选择 **MS Exchange** 或其他。
- 3 输入帐户的名称，确认您希望您的名称在外发邮件中显示的方式，然后点触**完成**。

信息/电子邮件

更改帐户设置：

- 1 打开**帐户**屏幕。
- 2 选择选项，在打开的菜单中点触设置。

要删除电子邮件帐户：

- 1 打开**帐户**屏幕。
- 2 点触并按住您要删除的帐户。
- 3 点触打开菜单中的**删除**，然后点触对话框中的**确定**确认删除。

社交网络

通过手机，您可以体验社交网络并管理联机社区中的微型博客。您可以更新您的当前状态，上载照片，并查看朋友的状态更新。

如果没有帐户，您可以访问其网站进行设置。

备注：连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

将您的帐户添加到手机

- 1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。
- 2 选择您要使用的社交网络客户端应用程序：Facebook、Twitter 和 MySpace。
- 3 输入您在社区上设置的电子邮件地址和密码，然后轻触**登录**。
- 4 正在检查您的社区的详细信息，请稍候。
- 5 如果轻触您的社区，您可以看到社区的当前状态。

提示！ 如果将“我的状态”小工具添加到主屏，将显示您的状态并帮助您直接更新社区状态。

您还可以将“社区源”添加到主屏，以显示来自社区的任何更新和新闻。

查看和更新状态

- 1 选择要访问的社区。
- 2 您可以看到社区的当前状态。
- 3 您可使用备注或通过上传照片来更新自己的当前状态。

备注：具体取决于网络服务。

提示！ 您可只在社交网络网站中使用好友的信息或将所有数据与电话本同步。

社交网络

在手机上删除帐户


- 1 选择**应用程序** > **设置** > **帐户和同步**。
- 2 选择要删除的帐户，然后点触**删除帐户**。

相机

了解取景器

缩放 - 放大或缩小。或者，您可以使用侧音量键。

转换 - 您可以从外部相机转到内置相机。

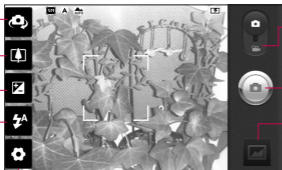

视频模式 - 向下滑动此图标以切换到视频模式。

拍照

我的文档 - 点触以查看最近拍摄的照片。您可以访问“我的文档”并查看相机模式下保存的照片。

设置 - 点触此图标可以打开设置菜单。请参阅使用高级设置。


闪光灯 - 在黑暗处拍照时刻打开闪光灯。

亮度 - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”降低图像亮度，“+”调高图像亮度。

提示! 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要调用选项，请再次点触屏幕。

相机

快速拍照

- 1 打开**相机**应用程序。
- 2 水平拿稳手机，将镜头对准您要拍摄的物体。
- 3 点触快门图标 。
- 4 相机将使图像进入焦距。图像处于焦距内时，每个角的对焦指示符均会变绿，并且相机将以此拍照。

拍照后

拍好的照片将显示在屏幕上。

共享

点触以通过**蓝牙**、**Picasa**、**信息**、**Facebook for LG**、**MySpace for LG**、**Twitter for LG**、**Gmail**、**电子邮件**分享您的照片。

备注：漫游时如果下载了彩信，可能会额外收费。

提示！ 如果您拥有一个社交网络帐户并在手机上设置了该帐户，您可以将您的照片共享到社区。

设定为

点触以将图像设为**联系人图标**或**墙纸**。

重命名

点触以编辑选定图片的名称。



点触可以删除图像。



点触可以立即拍摄其他照片。



点触以查看最近拍摄的照片。

使用高级设置

在取景器中点触  以打开所有高级选项。

滚动转盘，您可以更改相机设置。选择选项后，点触**返回**键。

对焦 - 点触此图标以选择选项菜单。请参阅“使用对焦模式”。

图像大小 - 点触可设置所拍照片的尺寸（以像素为单位）。

场景模式 - 从以下选项中选择：
自动、肖像、风景、**运动**、**日落**
和夜间。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。

白平衡 - 从以下选项中选择：
标准、白炽灯、日光、**荧光灯**
和阴天。

色彩效果 - 选择新照片的色彩效果。从以下选项中选择：**无**、**怀旧**、**黑白**、**反色**、**逼真**、**怀旧**、**蓝调**、**浮雕**和**曝光**。

自拍器 - 自拍器允许您设置按下拍摄按钮后、拍照前的延迟。

拍摄模式 - 从选项中选择不通过的拍摄模式。

图像质量 - 从**超精细**、**精细**和**标准**中选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

自动查看 - 如果将自动查看设置为开，手机将显示刚刚自动拍摄的照片。

快门声音 - 从四种快门声音中选择一种。

标签位置 - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的的博客，您可以在地图上看到此照片。

备注：此功能仅在激活了定位服务时可用。



恢复所有相机默认设置。



无论您何时想要了解此功能如何操作，均可点触该选项。这将为您的快速指南。

提示！ 退出相机时，部分设置将返回默认值。拍摄下一张照片之前，请先检查相机设置。

相机

提示！ 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

使用对焦模式

您可以使用下列选项中选择对焦模式：

自动 - 将相机设置为自动对焦。


微距 - 微距允许您拍摄大特写。如果您正在尝试拍摄大特写，但是对焦框为红色，请尝试打开微距模式。

连拍

人脸跟踪 - 如果设置了人脸跟踪并拍照，您的相机将自动检测并对焦人脸。

手动 - 将相机设置为自动对焦。

查看保存的照片

1 您可以在相机模式下访问保存的照片。点触  即会在屏幕上显示图像库。在屏幕上点触照片。随后，您将看到**幻灯片**和**菜单**。



点触以观看幻灯片放映。点触**菜单**并选择您要的选项。



点触以共享内容。



点触以删除照片。



点触**更多**可获得以下更多选项。

详情 - 查找有关此内容的更多信息。

设置为 - 设置为联系人图标或墙纸。

裁切 - 裁切照片。使用手指移过屏幕以选定区域。

旋转 - 向左旋转或向右旋转。

提示！ 在缩略图列表中，您可以通过按住 G-key 并向右或向左倾斜来快速移动。

提示！ 按 G-key 放大/缩小照片。对照片进行缩放时，请按住 G-key，然后倾斜手机以移动。

提示！ 查看照片时，轻触手机左右侧，您可以转到上一张/下一张照片。

摄像机

了解取景器

缩放 - 放大或缩小。或者，您可以使用侧音量键。在开始录制视频之前，您可以使用缩放功能。录制期间，不能控制缩放功能。

转换 - 您可以从外部相机转到内置相机。



相机模式 - 向上滑动此图标以切换到相机模式。

开始录制



我的文档 - 点触以查看最近录制的视频。您可以访问“我的文档”并查看摄像机模式下保存的视频。

设置 - 点触此图标可以打开设置菜单。请参阅使用高级设置。

闪光灯 - 您可以在黑暗处视频时打开闪光灯。

亮度 - 此选项定义并控制进入视频的光量。沿滚动条滑动亮度指示器，“-”降低视频亮度，“+”调高视频亮度。

快速摄像

- 1 打开**相机**应用程序，将相机模式按钮向下滑动到**视频**位置。快门图标将由  更改为 。
- 2 屏幕上将显示摄像机的取景器。
- 3 水平放置相机，将镜头对准要拍摄的物体。
- 4 点触以启动视频图标 。
- 5 REC 将显示在取景器底部，计时器将显示视频长度。
- 6 点触停止视频图标  停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

播放

点触以播放视频。

共享

点触可以通过**蓝牙**、**电子邮件**、**Gmail**、**信息**或**YouTube** 共享视频。

备注：漫游时如果下载了彩信，可能会额外收费。

编辑

点触以编辑录制的视频。



点触以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。



点触可以立即拍摄另一段视频。



点触以查看最近拍摄的视频。

使用高级设置

从取景器中点触  以打开所有高级选项。

滚动转盘以调节摄像机设置。选择选项后，点触**返回**键。

视频大小 - 点触可设置录制的视频的大小（以像素为单位）。选择视频大小：HD (1280x720)、TV (720x480)、VGA (640x480)、QVGA (320x240) 和 QCIF (176x144)。

摄像机

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

色彩效果 - 选择要对新视图使用的色彩效果。从以下选项中选择：**无**、**怀旧**、**黑白**、**反色**、**逼真**、**怀旧**、**蓝调**、**浮雕**和**曝光**。


图像质量 - 从**超精细**、**精细**和**标准**中选择。

长度 - 设置视频的长度限制。从**标准**和**彩信**中选择，以限制彩信最大大小。


视频 - 选择**静音**，录制视频而不录制声音。

自动查看 - 如果将此选项设为开，则会自动显示您刚刚录制的视频。

 重置所有摄像机设置。

 无论您何时想要了解此功能如何操作，均可点触该选项。这将为您提供快速指南。

观看保存的视频

- 1 在取景器中，点触 。
- 2 屏幕上将显示“我的文档”。
- 3 点触视频一次，将其调到“我的文档”前方。此时将开始自动播放。

提示! 翻转手机以暂停视频播放。

观看视频时调节音量


要在播放视频时调节音量，请使用手机左侧的音量键。


多媒体

我的文档

您也可以将文件保存到外部存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

点触**应用程序**选项卡，然后选择**我的文档**。

1 您可以在相机模式下访问保存的照片。点触  即会在屏幕上显示图像库。在屏幕上点触照片。随后，您将看到**幻灯片**和**菜单**。

 点触以观看幻灯片放映。点触**菜单**并选择您要的选项。

 点触以共享内容。

 点触以删除照片。

 点触**更多**可获得以下更多选项。

详情 - 查找有关此内容的更多信息。


设置为 - 设置为联系人图标或墙纸。


裁切 - 裁切照片。使用手指移过屏幕以选定区域。

旋转 - 向左旋转或向右旋转。

更改相册内容显示的方式

您可以在时间网格或堆栈中按拍摄的日期和位置查看相册中的图像和视频。

 将相册视图切换键拖到左侧可在时间网格中查看相册内容。





 将相册视图切换键拖到右侧可在堆栈中查看相册的内容。

音乐

LG-P970 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请点触**应用程序**选项卡，然后选择**音乐**。

多媒体

播放歌曲

- 1 在主屏上点触**应用程序**选项卡，然后选择**音乐**。
- 2 点触**歌曲**。
- 3 选择您要播放的歌曲。
- 4 点触  以暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以返回到歌曲的第一部分。点触  两次以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机右侧的音量调高和音量调低键。

点触并按住列表中的任何歌曲。它将显示播放、添加到播放列表、用作手机铃声、删除、共享、搜索和详细信息选项。

备注：音乐文件的版权可能受国际条约和国家版权法保护。

因此，可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

使用收音机

LG-P970 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：您必须连接耳机才能收听无线广播。将耳机插入耳机插孔。

搜索电台


您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。

- 1 在主屏上点触**应用程序**选项卡，然后选择 **FM 收音机**。
- 2 点触**扫描 FM 电台**。
- 3 如果有预设频道，您将看到一则弹出信息：“所有频道将被重设。继续？”。如果选择**确定**，则所有预设频道均会被删除，并启动自动扫描。
- 4 在自动扫描期间，若要停止扫描，请点触**停止扫描**。仅保存停止前扫描到的频道。

备注：您还可以使用显示的转盘手动微调电台。

收听收音机

- 1 在主屏上点触**应用程序**选项卡，然后选择 **FM 收音机**。
- 2 点触您要收听的电台的频道编号。

- 3 点触  图标。您可以通过内置扬声器收听收音机。

使用 USB 大容量存储设备传输文件

使用 USB 设备传输文件：

- 1 使用 USB 数据线将 LG-P970 连接到 PC。
- 2 如果未在 PC 上安装 LG Android 平台驱动程序，您需要选择**设置 > SD 卡和手机存储器 > 打开仅大容量存储**。
- 3 点触**打开 USB 存储**。
- 4 您可以在 PC 中查看大容量存储内容，然后传输文件。

备注：

- 您需要先安装 microSD 卡。没有 microSD 卡，您不能使用 USB 大容量存储。
- 使用 USB 大容量存储功能时，如果您要使用 LG PC Suite 在手机和 PC 间实现同步，请点触**设置 > 应用程序 > 开发 > 取消选择 USB 调试**，然后点触复选框以选择**打开 USB 存储**。

多媒体

如何将音乐/视频文件保存到手机

- 1 使用 USB 数据线将手机连接到 PC。
 - 点触并向下拖动主屏上的状态栏。选择 **USB 已连接** > **打开 USB 存储设备** > 打开文件夹以查看文件。
 - 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要进行手动设置。有关详细信息，请参阅“使用大容量存储设备传输文件”。
- 2 将 PC 上的音乐或视频保存到手机的可移动存储。
 - 您可以使用读卡器将文件从 PC 复制或移动到手机的可移动存储设备。
 - 如果有视频文件和子标题文件（与视频文件带有相同名称的 .srt 文件），请将它们放在同一文件夹中以便在播放视频文件时自动显示子标题。

- 下载音乐或视频文件时，必须保护版权。请注意损坏的文件或带有错误扩展名的文件可能损坏手机。

如何将旧手机上的联系人移至当前手机

使用 PC 同步程序将联系人作为 CSV 文件从旧手机导出到 PC。

- 1 从 www.lg.com 下载用于 PC Sync for Android 并在 PC 中安装它。运行程序，并使用 USB 数据线将您的 Android 手机连接到 PC。
- 2 如果 PC Sync for Android 检测到 LG-P970 手机的连接（使用 USB 数据线），请单击 **同步** 或 **同步联系人** 以将 PC 中保存的联系人与手机同步并保存它们。
- 3 选择 **联系人** 图标。转到 **文件** > **导入**，然后选择在 PC 中保存的 CSV 文件。

4 如果导入的 CSV 文件中的字段与 PC Sync for Android 中的不同，则需要映射字段。在映射字段后，单击“确定”。随后，联系人添加在 PC Sync for Android 中。

如何通过蓝牙从手机发送数据

要通过蓝牙发送数据，您无需像使用常规手机那样通过“蓝牙”菜单，直接运行相应应用程序即可。

- **发送图片：**运行**我的文档**应用程序，然后选择**图片** > 菜单。单击**共享**并选择**蓝牙** > 检查**蓝牙是否打开**，并选择**扫描设备** > 从列表中选择您要发送数据的设备。
- **导出联系人：**运行**联系人**应用程序。点触您要导出到的地址。点触菜单并选择**共享** > **蓝牙** > **检查蓝牙是否打开**，并选择**扫描设备** > 从列表中选择您要发送数据的设备。

- **发送多个选定联系人：**运行**联系人**应用程序。要选择多个联系人，请点触**菜单**键，然后依次点触**菜单**键和**共享**。选择要发送的联系人，或点触**全选** > **共享** > **蓝牙** > 选定**蓝牙是否打开**，然后选择**扫描设备** > 从列表中选择要向其发送数据的设备。
- **连接到 FTP（仅在此手机上支持 FTP 服务器）：****设置** > **无线和网络** > **蓝牙设置**。随后，选中**可检测性**复选框并搜索其它设备。查找所需服务，并连接到 FTP 服务器。

提示！ 版本是 Bluetooth 2.1 并且已通过 Bluetooth SIG 认证。它与其他 Bluetooth SIG 认证设备兼容。

多媒体

备注：如果要从其他设备搜索此手机，请转到**设置 > 无线和网络 > 蓝牙设置**。随后，选中可见复选框。该复选框在 120 秒后被取消选中。

备注：支持的情景模式是 DAP、HFP、HSP、OPP、PBAP（服务器）、FTP（服务器）、A2DP 和 AVRCP。

Google 应用程序

- 1 首先设置 Google 帐户。输入用户名和密码。
- 2 登录后，您的 Google 帐户中的联系人、电子邮件和日历将自动与 LG-P970 同步。

地图

检查您当前的位置和交通并接收目的地的方向指引。手机必须连接到 Wi-Fi 或 3G/GPRS。

备注： Google Maps 并不覆盖所有城市和国家/地区。

Market

Android Market 允许您下载有用的应用程序和游戏。如果从 Android Market 安装应用程序和游戏，它们将显示在 LG-P970 菜单中。

您可查看其他人对应用程序的评价或者发布自己的评价。

Gmail

在首次设置手机时对 Gmail 进行配置。根据您的同步设置，Gmail 将通过手机自动与 Google 网络帐户同步。Gmail 默认视图为收件箱对话列表。

点触**菜单**键，然后点触**刷新**可发送或接收新电子邮件，以及与网络上的 Google 帐户同步电子邮件。使用**菜单**键，您可撰写电子邮件、添加帐户、转到标签、搜索和了解更多。

Talk

Google Talk 是 Google 的即时消息程序。通过 Google Talk，您可以与同时也在使用它的其他人交谈。

点触**菜单**键，选择以下可用选项：**全部朋友、添加朋友、搜索、退出、设置**等。

Google Search

Google Mobile Web Search 允许您搜索网站。

实用工具

设置闹钟

- 1 在主屏上点触**应用程序**选项卡，然后选择**闹钟/时钟**。
- 2 如果要添加新闹钟，请点触**新闹钟**。
- 3 设置闹钟，点触**保存**以打开闹钟。

备注：要删除闹钟列表屏幕上的闹钟，点触**菜单**键，然后选择**删除/全部删除**。

使用计算器





- 1 在主屏上点触**应用程序**选项卡，然后选择**计算器**。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的功能（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，点触**高级面板**，然后选择 sin、cos、tan、log 等。

将事件添加到日历中

- 1 在主屏上点触**应用程序**选项卡，然后选择**日历**。
- 2 首先，您必须创建 Google 帐户才能使用**日历**。
- 3 要查看活动，请点触日期。如果要添加新活动，请点触并按住。然后点触**新活动**。
- 4 点触**内容**，然后输入事件名称。查看日期并输入活动开始和结束的时间。
- 5 也可以点触**位置**，然后输入位置。
- 6 如果您要为事件添加备注，请点触**描述**，然后输入详细信息。
- 7 如果要重复闹钟上，请设置**重复**，必要时设置**提醒**。
- 8 点触**完成**，将活动保存在日历中。日历中带颜色的方框将标记所有已保存活动的日期。在活动开始时间会有闹钟提醒，以便您进行安排。

录制声音或语音

使用录音机录制录音机或其他音频文件。

- 1 在主屏上点触**应用程序**选项卡，然后选择**语音备忘录**。
- 2 点触  录音开始录音。
- 3 点触  停止结束录音。
- 4 点触  播放收听录音。
- 5 点触  列表可访问相册。您可以收听保存的录音。

提示！ 点触  扬声器按钮设置扬声器模式。
点触  以**重命名或设为**。

注意： 可用录制时间以实际时间为准。

发送录音

- 1 录音完成后，您可以点触**共享**发送音频剪辑。
- 2 从**蓝牙、电子邮件、Gmail**和**信息**中选择。当您选择**电子邮件、Gmail**和**信息**时，录音将被添加到信息中，您可以照常撰写和发送信息。

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

使用选项

点触**菜单**键可查看选项。



新窗口：打开新窗口。



书签：添加/显示书签、显示访问最多的站点和历史记录。



窗口：显示所有打开的窗口。



刷新：点触以刷新网页。



前进：转到当前页的最后一页。使用**返回**键可转到上一页。



更多

- **添加书签：**将当前网页设为书签。
- **页内查找：**如果输入字母或任何单词，则会标记您从网页中输入的所有字母。
- **选择文本：**点触并选择您要复制的行。长按任何输入的文本，随后您便可粘贴该内容。
- **页面信息：**显示网页信息。
- **共享页面：**发送网页。
- **下载：**显示下载历史记录。
- **设置：**更改网络浏览器设置。

备注：要返回上一个网页，请点触**返回**键。

设置

在主屏上点触**应用程序**选项卡，然后滚动并点触**设置**。

无线和网络

在这里，您可以管理 Wi-Fi、Wi-Fi Direct、绑定和蓝牙。您也可以设置移动网络和飞行模式。

飞行模式 - 设置飞行模式后，所有无线连接将被禁用。

Wi-Fi - 点触以选择：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

Wi-Fi 设置 - 允许您设置和管理无线接入点。设置网络通知，或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。依次点触**菜单键**和**高级**。

Wi-Fi Direct 设置 - 设置 Wi-Fi Direct 设备名，然后扫描其他设备。或者，转到群组所有者模式，允许连接合法的 Wi-Fi 设备。

提示！ 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 LG-P970 的 MAC 地址。

您可以在以下用户界面中找到 MAC 地址：点触**应用程序 > 设置 > 无线和网络 > Wi-Fi 设置**，然后点触**菜单键**。然后，选择**高级 > MAC 地址**。

蓝牙 - 点触以选择：打开蓝牙以连接蓝牙设备。

蓝牙设置 - 设置设备名称和可见模式，扫描其他设备。或者，检查您之前配置的蓝牙设备以及手机上上次扫描蓝牙设备时检测到的那些设备的列表。

便携式热点 - 将手机的移动连接作为便携式 Wi-Fi 热点共享。

移动网络设置 - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

设置

声音

<常规>

静音模式 - 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。（若要使媒体和闹钟静音，您必须在各自的应用程序中操作。）

通知：设置静音模式后，**设置** > **声音** > **音量** 菜单不可用。

振动 - 允许您将手机设置为在接到来电时振动。

音量 - 允许您为铃声、媒体和闹钟设置音量。如果取消选择为通话和通知使用相同音量的选项，则可分别设置各自的音量。

<来电>

手机铃声 - 允许您设置默认来电铃声。

<通知>

通知铃声 - 允许您设置默认通知铃声。

<反馈>

屏幕按键音 - 允许您将手机设置为在使用拨号盘拨号时播放音调。

操作音选择 - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

屏幕锁定提示音 - 允许您将手机设置为在锁定和解锁屏幕时播放声音。

触觉反馈 - 允许您将手机设置为在点触软键和执行其他操作时短时振动。

显示

亮度 - 调整屏幕的亮度。

自动旋转屏幕 - 允许您将方向设置为在侧翻或竖翻手机时自动切换为风景模式或肖像模式。

动画 - 允许您将手机设置为在屏幕间导航时显示动画渐变。

待机时间 - 允许您调整屏幕自动关闭之前的延迟时间。为取得最佳电池性能，请使用最短的便利待机时间。

显示字体 - 更改显示字体。

笔势

调整文本输入字段、主屏、闹钟、音乐、视频播放器、来电、我的文档、相机和浏览器的笔势设置。

安全性和位置

〈我的位置〉

使用无线网络 - 如果选择使用无线网络，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。

使用 GPS 卫星 - 如果选择使用 GPS 卫星，您的手机将确定您的位置并精确到街道级别。

〈屏幕解锁〉

设置屏幕锁定 - 设置解锁图案以确保您的手机安全。打开一组屏幕，它们可指导您绘制屏幕解锁图样。您可设置 **PIN** 或**密码**，而不要使用**图案**或保持其值为**无**。

提示！ 使用图样锁定锁定屏幕

- 1 第一次这样做时，将显示有关创建解锁图样的简短指南。
- 2 您会收到提示要求绘制并重新绘制您自己的图样。在您下一次打开手机或唤醒屏幕时，您会收到提示要求绘制解锁图样以解锁屏幕。

〈SIM 卡锁定〉

设置 SIM 卡锁定 - 设置 SIM 卡锁定或更改 SIM PIN。

〈密码〉

可见的密码 - 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

〈设备管理〉

选择设备管理器 - 添加或删除设备管理器。

设置

<凭据存储>

使用安全凭据 - 选择此项以允许应用程序访问手机的加密存储安全证书和相关密码及其他凭据。您可使用凭据存储建立有些类型的 Wi-Fi 连接。如果未为凭据存储设置密码，则此设置不可用。

从存储卡安装 - 允许您从 microSD 卡安装加密的证书。

设置密码 - 允许您为安全凭据存储设置或更改密码。密码最少为 8 个字符。

清除存储 - 删除所有安全证书及相关凭据，同时擦除安装存储本身的密码。

使用多个

未知源 - 允许安装您从网站、电子邮件或其他非 Android Market 位置获得的应用程序。

 **警告：** 要保护手机和个人数据，请仅从信任源（如 Android Market）下载应用程序。

管理应用程序 - 管理和删除安装的应用程序。

正在运行的服务 - 允许您查看和控制当前正在运行的服务和应用程序。此选项显示正在运行的各项服务需要的进程及占用的内存大小。

存储空间使用情况 - 查看应用程序所用的存储空间。

电量使用情况 - 查看应用程序的耗电量。

开发 - 设置应用程序开发的选项，如 **USB 调试**、**保持清醒** 以及 **允许模拟位置**。

数据同步

〈常规同步设置〉

背景数据 - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

自动同步 - 允许应用程序根据自己的计划同步、发送和接收数据。

〈管理帐户〉

所有 Google 帐户及已添加到手机的其他帐户的列表。

如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

隐私

〈个人数据〉

重置出厂数据 - 擦除手机内部存储中的所有数据，包括关于 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息。重置手机不会擦除您已下载的任何系统软件更新或 microSD 卡上的任何

文件，如音乐或照片。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

SD 卡和手机存储器

〈USB 连接模式〉

本手机可用作数据存储设备。您可以将默认的 USB 连接模式设为仅批量存储。

〈存储卡〉

检查空间总量和可用的空间。点触**删除存储卡**以安全移除。如果要删除 microSD 卡上的所有数据，请**格式化存储卡**。您必须先取消安装 microSD 卡，然后才能将其格式化。

〈手机内部存储〉

检查可用的空间。

设置

区域和文本

使用**区域和文本**设置为手机上的文本以及屏上键盘配置选择语言和区域（包括已添加到词典中的文字）。

语音输入与输出

<语音输入>

语音识别程序设置 -
使用**语音识别程序设置**配置 Android 语音输入功能。

<语音输出>

文字转语音设置 -
您可以使用**文字转语音设置**来配置 Android 文本转语音合成器，通过该应用程序来利用此功能。

备注：如果未安装语音合成器数据，则只有**安装语音数据**设置可用。

辅助功能

使用**辅助功能**可配置您在手机上安装的任何辅助功能插件。

备注：需要额外的插件才能变成可选。

日期和时间

使用**日期和时间**设置，以设置日期显示方式的参考。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

关于手机


查看法律信息，检查手机状态和软件版本。

Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问 Internet。

您可通过 Wi-Fi 尽情享受无线 Internet 的便利性，而且无需额外付费。

打开 Wi-Fi

从主屏幕中打开“通知抽屉”，并点触 。

或者点触 **应用程序 > 设置 > 无线网络**，然后打开 **Wi-Fi**。

连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才可连接。

备注：


- 如果不在 Wi-Fi 区并且选择 3G 连接，则可能产生另外的费用。
- 如果手机进入睡眠模式，则即使它连接到 Wi-Fi，Wi-Fi 连接也将自动被禁用。这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生另外的费用。
- LG-P970 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP。安全性。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显

示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

共享您手机的移动数据连接

您也可以将您的手机转接到便携式 Wi-Fi 热点，一次将您手机的数据连接与最多五个设备进行共享。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

图标	描述
	便携式 Wi-Fi 热点激活

有关便携式热点的信息，包括支持的操作系統及其他详细信息，请访问 <http://www.android.com/tether>。

备注：连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

设置

便携式 Wi-Fi 热点设置

在主屏上点触**应用程序**选项卡，然后选择**设置**。

点触**无线和网络**，然后选择**便携式热点**。


选择您要调整的选项。

便携式 Wi-Fi 热点 - 勾选以将您的手机网络数据连接共享为便携式 Wi-Fi 热点。

帮助 - 打开一个对话框，上面显示有关便携式 Wi-Fi 热点以及有关在哪可以了解更多的信息。

将手机的数据连接共享为便携式 Wi-Fi 热点

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**便携式热点**。
- 3 选定**便携式 Wi-Fi 热点**。
 - 片刻之后，手机将开始广播其 WLAN 网络名称 (SSID)，这样您将可以通过其连接最多 8 台电脑或其他设备。持续的通知

 将添加到状态栏和通知抽屉中。

- 选择**便携式 Wi-Fi 热点**之后，您可以更改其网络名称或确保其安全。
- 4 取消选择**便携式 Wi-Fi 热点**以停止通过 Wi-Fi 共享您的数据连接。

重命名或确保您的便携式热点安全

您可以更改手机 Wi-Fi 网络名称 (SSID) 的名称并确保其 Wi-Fi 网络的安全。

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**便携式热点**。
- 3 确保已选择**便携式 Wi-Fi 热点**。
- 4 点触**便携式 Wi-Fi 热点设置**。
- 5 点触**配置 Wi-Fi 热点**。
 - 此时将打开**配置 Wi-Fi 热点**对话框。

- 您可以更改网络 SSID（名称），这将是其他电脑在扫描 Wi-Fi 网络时看到的名称。
- 您也可以点触**安全性**菜单来为网络配置 Wi-Fi 保护访问 2（WPA2）安全性以及预共享密钥（PSK）。
- 如果点触 **WPA2 PSK** 安全性选项，则密码字段将会添加到**配置 Wi-Fi 热点**对话框中。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。或者在安全性菜单中点触**打开**，以从 Wi-Fi 网络中删除**安全性**。

注意！

如果将安全性选项设为**开放**，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用，最好保持安全性选项。

6 点触**保存**。

使用 SmartShare

SmartShare 使用 DLNA（数字生活网络联盟）技术，通过无线网络共享数字内容。

要支持此功能，双方设备都必须经过 DLNA 认证。

使用 SmartShare（SmartShare1.3 版），您可以分享和播放两个设备中的多媒体内容（使用 SmartShare1.0，您只能分享内容）。

双方设备都应连接到 Wi-Fi 网络（启用了 DLNA）或任何其他成为 Wi-Fi 热点的设备，要创建第三个 Wi-Fi 热点，请转至设置 > 无线网络 > 便携式热点 > 启用便携式 Wi-Fi 热点复选框。

使用 SmartShare 以允许共享和播放内容

要使用 SmartShare 应用程序，请转至应用程序 > SmartShare > 选项 > 设置 > 启用可检测性复选框，选择您要分享的内容后按“返回”。

设置

轻触“来自”图标和“刷新”图标后设备列表将会显示。选择您想要与之分享数据的设备。

启用 WLAN Direct, 通过 SmartShare 共享

使用其他 WLAN 功能时, 无法启用 WLAN Direct。

如果双方设备支持 Wi-Fi Direct, 则它们可以不使用 Wi-Fi 热点就能进行连接, Wi-Fi Direct 自动扫描附近的 Wi-Fi Direct 设备, 搜索到的设备将按搜索顺序列出, 您可以选择特定设备以通过 SmartShare 共享多媒体数据。

- 1 在主屏上点触应用程序选项卡, 然后选择设置。
 - 2 点触无线和网络, 并选择 **Wi-Fi Direct 设置**。
 - 3 请确保已选中 **Wi-Fi Direct**。
 - 4 在扫描到的设备列表中选择要连接的设备。
- **强制 G/O 模式** - 点触以激活群组用户模式, 该模式允许您通过扫描手机连接合法的 Wi-Fi 设

备。在这种情况下, 您必须输入密码, 可通过以下流程设置: 菜单 > 高级 > 密码。然后转至应用程序 > SmartShare > 选项 > 设置 > 使之可见 > 接受显示在设置屏幕上的 IP。现在点触“来自”图标, 您将看到已连接的设备名称列表, 然后轻触设备, 您可以看到已分享的内容。

备注: 当手机设置为群组用户模式时, 将比用作客户端时消耗更多电池电量。WLAN Direct 连接不提供互联网服务。连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

提示! 必须安装 Wi-Fi cast 应用程序以便存储已使用 Wi-Fi Direct 来分享的内容。

如何使用屏幕手机

屏幕手机允许您通过 USB 或蓝牙连接从 PC 查看手机屏幕。您也可以使用鼠标或键盘从您的 PC 控制手机。

屏幕手机图标



将手机连接至 PC 或从 PC 断开手机连接。



旋转屏幕手机窗口（仅在应用程序支持旋转功能时可用）。



更改屏幕手机首选项。



退出屏幕手机程序。



最小化屏幕手机窗口。

屏幕手机功能

- 实时传输和控制：在连接至 PC 时显示并控制您的手机。
- 鼠标控制：允许您使用鼠标在 PC 屏幕上单击或拖动来控制您的手机。
- 使用键盘输入文本：允许您使用电脑键盘撰写短信或便笺。
- 文件传输（手机到 PC）：从手机发送文件（例如照片、视频、音乐和 Polaris Office 文件）到 PC。只需右键单击并拖动即可将文件发送到 PC。
- 文件传输（PC 到手机）：从 PC 发送文件到手机。只需选择您要传输的文件并将其拖放到屏幕

手机窗口即可。您发送的文件存储在 micro SD 卡上。

- 实时事件通知：以弹出窗口提示的方式通知您有来电或短信/彩信，以及闹钟和事件通知。

注意：在 OSP 中不支持相机预览和视频，因此在 PC 中不可用。

如果在 PC 上安装屏幕手机

访问 LG 主页 (<http://www.lg.com>) 并转到支持 > 手机支持 > 将 LG 手机支持工具下载到 PC。如果下载 LG PC Suite IV，则屏幕手机程序也会下载到 PC 上。随后您便可在 PC 上安装屏幕手机。

如何将手机连接至 PC USB 连接：

- 1 打开连接向导，选择“USB 数据线连接”并单击“下一步”。
- 2 使用 USB 数据将手机连接至 PC，然后单击“下一步”。

设置

- 3 输入屏幕手机密码并单击“下一步”。默认密码为“0000”。您可以在**设置 > 无线和网络 > 屏幕手机设置**中更改密码。
- 4 单击“确定”退出窗口。

通过蓝牙无线连接:


- 1 在手机上，转到**设置 > 无线和网络 > 蓝牙设置**。选择**打开蓝牙**并选择**可发现**。
- 2 如果您以前使用数据线进行过连接，则运行“新建连接向导”创建新的连接。
- 3 在电脑上运行连接向导，选择“蓝牙连接”，然后选择“下一步”。
- 4 向导将开始搜索已启用蓝牙的手机。您希望连接的手机出现时，单击“停止”以停止搜索。
- 5 从设备列表中选择“LG-P970”，然后单击“下一步”。如果需要，可以重命名设备。
- 6 输入 PIN 码（例如“0000”）并单击“下一步”。

- 7 在您的手机上，接受请求并输入相同的 PIN 码，然后点触“确定”。
- 8 输入屏幕手机密码并单击“下一步”（默认密码为“0000”）。
- 9 点触“确定”退出。

检查手机到 PC 的连接

设备一旦建立连接，请将主屏上方的通知栏向下拖动以检查屏幕手机连接状态。

断开手机与 PC 的连接

单击屏幕手机窗口左上角的 。或者，将主屏上方的通知栏向下拖动，然后选择“屏幕手机”。在“断开连接”窗口中点触“是”。

备注：关闭屏幕手机服务后，必须重新启动手机。

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://www.lg.com>。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

远程呼叫

这是标准的联机支持解决方案。

远程呼叫 + Mobile Pack 是远程支持解决方案，允许支持代表在其 PC 上查看和控制客户手机屏幕，以远程诊断和修复手机问题。

版权所有和商标

此设备中包含的所有技术和产品的所有权是其各自所有者的财产：

- Bluetooth[®] 是 Bluetooth SIG, Inc 的注册商标。
- microSD[™] 和 microSD 徽标是 SD Card Association 的商标。
- Google[™], Google Search[™], Maps[™], Gmail[™], YouTube[™], Talk[™] 和 Market[™] 是 Google, Inc. 的商标。
- Wi-Fi[®] 和 Wi-Fi Protected Access[®] 是 Wi-Fi Alliance 的注册商标。Wi-Fi Direct[™] 和 Wi-Fi Protected Setup[™] 是 Wi-Fi Alliance 的商标。



- Adobe[®] Flash[®] Player 或 Adobe AIR[®] 技术由 Adobe Systems Incorporated 许可。Copyright ©1995-2011, 版权所有。

• Dolby Mobile 许可通知



由 Dolby Laboratories 许可生产。Dolby 和 double-D 符号是 Dolby Laboratories 的商标。

• DivX 移动



关于 DivX 视频：DivX[®] 是由 DivX, Inc. 开发的一种数码视频格式。是经播放 DivX 视频的 DivX Certified[®] 官方认证的设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 www.divx.com。

关于 DivX VIDEO-ON-DEMAND：要播放 DivX Video-on-Demand (VOD) 内容，必须先注册此 DivX Certified[®] 设备。要获取您的注册码，请在视频播放器选项菜单中找到 DivX VOD 部分。有关如何完成注册的详细信息，请转到 vod.divx.com。

DivX Certified[®] 可播放最高为 HD 720p 的 DivX[®] 视频，包括额外付费内容。

DivX[®]、DivX Certified[®] 及相关徽标是 DivX, Inc. 的商标，使用必须经过许可。

注意!

打开源软件

要获取 GPL、LGPL、MPL 及其他打开的源证书下的相应源代码，请访问 <http://opensource.lge.com/>。

可使用源代码下载所有相关许可条款、声明和通知。

配件

以下配件可与 LG-P970 一起使用。
(以下配件为可选配件。)

充电器



数据线

连接 LG-P970
和 PC。



电池



用户手册

了解更多关于
LG-P970 的
信息。



立体声耳机



备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度: +55° C (放电), +45° C (充电)

最低温度: -10° C

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，超出 GSM 网络区域。 运营商应用了新服务	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。如果超过，请在最近的网络提供商处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入新 SIM 卡 达到预付费限制	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 使充电器保持连接更长时间。清洁触点。 取出电池并重新插入。

信息	可能原因	可行解决措施
充电错误	<p>电池未充电。 外部温度太热或太冷 触点问题</p> <p>无电压 充电器故障</p> <p>错误充电器。 电池故障。</p>	<p>为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。</p> <p>插入不同的插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。</p>
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查可支持的文件格式
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查存储卡文件系统或使用手机格式化存储卡
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。 确保近程传感器周围的区域干净。
无声音	振动或静音模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	<p>取出电池并重新插入。 打开手机。 尝试通过网站执行软件更新服务。</p>



LG-P970 User Guide - English

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.



Contents

Important notice	5	Adding widgets to your home screen.....	23
1. Phone memory	5	Getting back to a recently used application.....	24
2. Optimising battery life.....	5	Onscreen keyboard	26
3. Installing an open source OS....	6	Entering accented letters	26
4. Using unlock pattern.....	7	Google Account Set-up	27
5. Connecting to Wi-Fi networks	8	Creating your Google account....	27
6. Opening and switching applications	9	Signing in to your Google account	27
7. Installing the LG PC suite on your PC	10	Calls/Contacts	29
8. Connecting your phone to a computer via USB	14	Making a voice call.....	29
9. Unlock screen when using data connection.....	15	Making a video call	29
10. Do not connect your phone when you power on/off your PC	15	In Video call Menu	30
11. Hold your phone upright	15	Calling your contacts.....	30
12. If the screen freezes.....	15	Answering and rejecting a call ...	30
Getting to know your phone	16	Adjusting call volume	31
Installing the SIM card and battery.....	18	Making a second call	31
Charging your phone.....	19	Viewing your call logs.....	31
Installing the memory card	19	Call settings.....	31
Formatting the memory card	20	Contacts	33
Your Home screen	21	Searching for a contact	33
Touch-screen tips	21	Adding a new contact.....	33
Lock your phone	21	Favourite contacts.....	34
Unlock screen	22	Messaging/Email	35
Home	22	Messaging.....	35
		Sending a message.....	35
		Changing your message settings	36

Setting up your email	36	Watching your saved videos	50
Microsoft Exchange email account	36	Adjusting the volume when viewing a video	50
Others (POP3, IMAP, GME) email account	37	Multimedia	51
Composing and sending email...	38	Gallery	51
Working with account folders.....	39	To change how the contents of an album are displayed	51
Adding and editing email accounts.....	39	Music	52
Social networking	40	Playing a song	52
Adding your account to your phone.....	40	Using the radio.....	53
Viewing and updating your status	40	Searching for stations.....	53
Removing accounts on your phone.....	41	Listening to the radio.....	53
Camera	42	Transferring files using USB mass storage devices.....	54
Getting to know the viewfinder...	42	How to save music/video files to your phone	54
Taking a quick photo	43	How to move contacts from your old phone to your current phone	55
Once you've taken the photo	43	How to send data from your phone via Bluetooth.....	56
Using the advanced settings	43	Google applications.....	58
Using the focus mode.....	45	Maps.....	58
Viewing your saved photos	46	Market.....	58
Video camera	47	Gmail.....	58
Getting to know the viewfinder...	47	Talk	59
Shooting a quick video	48	Google Search	59
After shooting a video.....	48		
Using the advanced settings	49		

Contents

Utilities	60	Portable Wi-Fi hotspot settings ..	71
Setting your alarm	60	To share your phone's data	
Using your calculator	60	connection as a portable Wi-Fi	
Adding an event to your calendar	60	hotspot	71
Recording a sound or voice	61	To rename or secure your portable	
Sending the voice recording	61	hotspot	71
The Web	62	Using SmartShare	72
Browser	62	To Use SmartShare to allow sharing	
Using options	62	and playing the contents	73
Settings	63	Enabling Wi-Fi Direct to share	
Wireless & networks.....	63	through SmartShare	73
Sound.....	64	How to use On-Screen Phone....	74
Display	65	On-Screen Phone icons.....	74
Gesture	65	On-Screen Phone features	75
Location & security	65	How to install On-Screen Phone	
Applications	67	on your PC.....	75
Accounts & sync	67	How to connect your mobile phone	
Privacy	68	to your PC.....	76
SD card & phone storage	68	To check the phone to PC	
Language & keyboard	68	connection	77
Voice input & output.....	68	To disconnect your phone from	
Accessibility	69	your PC	77
Date & time	69	Phone Software update	77
About phone	69	Copyrights and trademarks	79
Wi-Fi	69	Accessories	81
Turn on Wi-Fi	69	Technical data	82
To connect to Wi-Fi	69	Troubleshooting	83
Sharing your phone's mobile data			
connection.....	70		

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can't receive new messages. You will need to check your phone memory and delete some data, such as applications or messages to make more memory available.

To manage the application:

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll and select the application you want to uninstall.
- 3 Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising battery life

You can extend your battery's life by turning off features that you don't need constantly running in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery:

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may cause your battery's life to be reduced.

To check the battery charge level:

- 1 On the home screen, touch **Applications** tab and select **Settings > About phone > Status**.

Important notice

- 2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

To monitor and control what uses the battery:

- 1 On the home screen, touch **Applications** tab and select **Settings > About phone > Battery use**.
- 2 The top of the screen displays battery usage time. This is either how long since your phone was last connected to a power source or if connected to a power source, how long since your phone was last run on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an open source OS

If you install an open source OS on your phone and you do not use the OS provided by the manufacturer, this may cause your phone to malfunction.



WARNING

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING**

To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work properly or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using unlock pattern

Set screen lock to secure your phone, To set select **Applications > Settings > Location & Security > Set up screen lock**. This opens a screen with set of options for screen lock.

You can draw your own unlock pattern by connecting four or more dots.

If you set a pattern, the phone screen will lock. To unlock the phone, draw the pattern you have set on the screen.

Caution: When you set an unlock pattern, you need to create your Gmail account first.

Important notice



WARNING

Precautions to take when using the Pattern Lock

It is very important that you remember the unlock pattern you set. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all five chances, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

If you have logged on to your Google account on the phone and failed to use correct pattern five times, tap the Forgot pattern button. You will then be required to sign in with your Google account to unlock your phone.

5. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network:

- 1 On the home screen, touch **Applications** tab and select **Settings > Wireless & networks > Wi-Fi settings**.

- 2 Touch **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
 - List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The status bar displays icons that indicate Wi-Fi status.

6. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use:

- 1 On the home screen, touch **Applications** tab and select **Settings > Applications > Manage Applications > Click on the tab Running**.
- 2 Scroll to the desired application and touch **Stop** to stop using it.

Important notice

TIP!

Getting back to a recent Application

Touch and hold the **Home** key. A screen will appear listing the applications you have used recently.

The PC suite is saved in the microSD memory card found as part of the in-box contents and you can simply copy it to your PC.

7. Installing the LG PC suite on your PC

To synchronise your phone with your PC via a USB cable, you need to install the LG PC suite program on your PC.

You can download this program at the LG web site. Browse to <http://www.lg.com> site to get the installer on your phone and user information. You may refer to the pictures below and follow the instructions to download the software for your phone and complete the installation.

LG PC SUITE

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of your mobile phone on your PC.

Major functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently
- Synchronise data from a PC or phone (contacts, calendar, message (SMS), bookmark)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between your PC and your phone
- Transfer messages from your phone to your PC
- S/W update without losing your data

LG-P970 does not support:


- PC Connection via Bluetooth
- To-do in Calendar
- Java Application

For more information, please refer to the user's guide for LG PC Suite IV. This can be found in the Help menu after installing LG PC Suite IV.


Important notice

Download LG Mobile Support Tool

1) Go to www.lg.com , Support , Mobile Phone Support

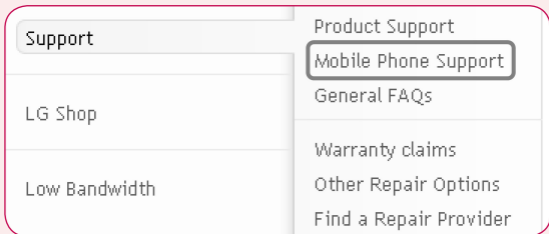

2) Download and Install LG Mobile Support Tool

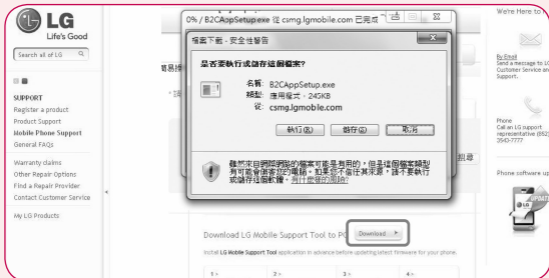

3) After download software and run LG PCSuite IV file and follow the instructions to complete the installation.

* When LG PCSuite IV installation is completed, disable Mass storage mode to run the LG PCSuite IV.

Important notice

8. Connecting your phone to a computer via USB

To transfer files in your microSD card using USB devices:

- 1 Install your microSD card in your phone. (It may already be inserted on your phone.)
- 2 Before connecting the USB data cable, make sure that the **Mass storage** mode is enabled on your phone. (On the **Applications** tab, choose **Settings > SD Card & Phone Storage>Check Mass Storage Only**.)
- 3 Use the USB cable with your phone to connect the phone to a USB port on your computer. Open the notification drawer and select USB Connected then touch **Turn on USB storage**.

When the phone is connected as USB storage, you will receive a notification. Your phone's microSD card is mounted as a drive on your

computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**. To disconnect your phone from the computer, carefully follow your computer's instructions for correctly disconnecting USB devices, to avoid losing information on the card.

- 1 Open the notification drawer and touch **Turn off USB storage**.
- 2 Touch **Turn off USB Storage** in the dialog that opens.

- 3 Safely disconnect the USB device on your computer.

9. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just press the hard key.

10. Do not connect your phone when you power on/off your PC

Make sure you disconnect your phone and PC via data cable as it might cause errors on your PC.

11. Hold your phone upright

Please hold your phone straight and upright, as with a normal phone. The LG-P970 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this will cause loss of performance. While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. This may affect call quality.

12. If the screen freezes

If the phone does not respond to user input or the screen freezes:

Remove the battery, insert it again and switch on the phone. If it still does not work, please contact the service centre.

Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.

To turn off the phone, press and hold the **Power** key for 3 seconds, touch **Power off** and touch OK.

EarMic

Proximity Sensor

Home key

- Return to home from any screen.

Menu key

- Check what options are available.

Power/Lock key

- Switch your phone on/off by pressing and holding this key.

- Press and lock the screen.

Back key

- Return to the previous screen.

Search key

- Search the web and contents in your phone.


Microphone



⚠ WARNING: Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This may cause the sensor to malfunction.

TIP! Touch the **Menu** key whenever you tap an application to check what options are available.

TIP! If the LG-P970 displays error messages when you use it, or if you cannot turn it on, remove the battery, put it back in, then turn it on after 5 seconds.




Volume keys

- On the home screen: control ringer volume.
- During a call: control your earpiece volume.
- When playing a track: control volume continuously.

3D Motion Gesture key (G-key)

- Easy to activate features instantly by tilting, shaking or tapping the phone.



microSD memory card slot


Camera lens

SIM card slot

Back cover

Battery

Speaker

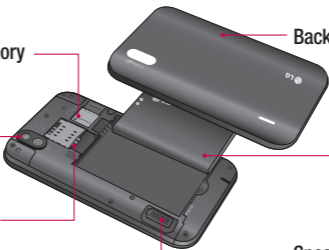

Getting to know your phone

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the back cover, hold the phone firmly in your hand. With the other hand, firmly press down the centre of the battery cover, while pulling the top away with your forefinger. Then lift off the battery cover.



- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.




- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.

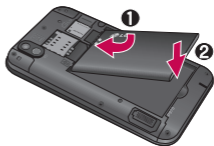

- 4 Replace the back cover of the phone.



Charging your phone

The charger connector on the top of your LG-P970. Insert the charger and plug it into an electrical socket. Your LG-P970 must be charged until you can see .



NOTE: The battery must be fully charged initially to extend battery lifetime.

Installing the memory card

To store multimedia files, such as photographs created with the built-in camera, you must insert a memory card into your phone.

To insert a memory card:

- 1 Turn off your phone before inserting or removing the memory card. Remove the back cover.



- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

Getting to know your phone



Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on your memory card are deleted when you format it.

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount SD Card**.
- 5 Touch **Erase SD card**, then confirm your choice.

- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting, as all the files will have been deleted.

TIP! If your memory card is already unmounted, you can use the following steps to format it. Touch **Applications > Settings > SD Card & Phone Storage > Erase SD card**.

WARNING

Do not insert or remove the memory card when the phone is on. Otherwise, you may damage the memory card as well as your phone and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Applications > Settings > SD card&phone storage > Unmount SD card**.

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch screen.

Flick - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

Tilting & Panning - Zoom in/out and navigate through lists.

Tapping - Control music and move the cursor on a text page by tapping one of the four sides of the phone.

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using the LG-P970, press the **Power** key to lock your phone. This helps to prevent accidental touching of the keys and saves battery power.

If you do not use the phone for a while, the home screen or other screen you are viewing is replaced by the lock screen to conserve the battery.

NOTE: If there are any programs running when you set the pattern, they may continue running in lock mode. It is recommended that you

Your Home screen

exit all programs before entering lock mode to avoid unnecessary charges (e.g. phone call, web access and data communications).

Unlock screen

TIP! Press the G-key on the left side of the phone, keep it pressed, then shake the phone twice. The camera preview will automatically be launched. If you want to use this feature, you need to choose **Settings > Gesture > turn on Use motion gestures > Go to camera.**

To turn on your phone, press the **Power** key. The lock screen will appear. Touch and slide up the lock screen to unlock your home screen. The last screen you were working on will open.

Home

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, LG widgets, shortcuts to your favourite applications, folders and wallpapers.

TIP! Once the G-key is held down, tilting the phone left or right allows you to view the wallpaper quickly.

NOTE: Some screen images may be different depending on your phone provider.

In your home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.




Touch the **Phone** to bring up the touch-dialling pad to make a call.



Touch the **Contacts** to open your contacts.



Touch the **Messaging** icon to access the messaging menu. Here, you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.

To open the desired application, simply touch the icon in the applications list.

NOTE: Preloaded applications may be different depending on your phone's software or your service provider.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience when using your phone, add your favourite widgets to the home screen.

To add a desired icon to your home screen:


- 1 On the home screen, touch the **Menu** key and select **Add**. Or

long touch the empty part of the home screen.

- 2 On the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
- 4 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.

TIP! To add an application icon to the home screen on the **Applications** menu, touch and hold the application you want to add.

To remove an application icon from the home screen:

- 1 Touch and hold the icon you want to remove.
- 2 Drag and drop an application icon to the bin icon .

Your Home screen


NOTE: You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

Getting back to a recently used application


- 1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you have used recently.
- 2 Touch an icon to open its application. Or touch the **Back** key to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

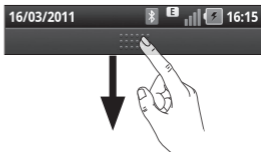

Or on the home screen touch the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth, GPS and as well as other notifications.
















Viewing the status bar













The status bar uses different icons to display phone information, such as signal strength, new messages, battery life and active Bluetooth and data connections.











Below is a table explaining the meaning of icons you are likely to see in the status bar.



[Status bar]

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail

Icon	Description
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected
	3 more notifications not displayed


Icon	Description
	Data is syncing
	Download finished
	New email
	New Gmail
	New Google Talk message
	New message
	Song is playing
	Upcoming event
	FM radio turned on in the background
	Portable Wi-Fi hotspot is active


Your Home screen


Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.


Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double-tap for all caps.


 Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the settings menu.

 Tap to view or long press to change the writing language.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters


When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. á).

For example, to input "á", touch and hold the "a" key until the special characters are shown. And select the special character you want.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 On the home screen, touch **Applications** tab  to open the applications menu.
- 2 Tap **Gmail** and tap **Next >** **Create** to start the Gmail set up wizard.
- 3 Touch a text field to open the touch keyboard and enter your name and username for your Google account. When entering text, you can move to the next text field by touching **Next** on the keyboard.
- 4 When you have finished inputting your name and username, tap **Next**. Your phone is

communicating with Google servers and checking username availability.

- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Gmail and take advantages of Google services on your phone.
- 3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (This depends on your synchronisation settings.)

Google Account Set-up





After sign in, you can use Gmail, Google Calendar and Android Market; download applications from Android Market; and take advantage of other Google services on your phone.


IMPORTANT!

- Some applications, such as Calendar, only work with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with these applications first. When you sign in, your contacts, Gmail messages, calendar events and other information from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Gmail or Android Market.
- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.

Calls/Contacts



Making a voice call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad.
To delete a digit, touch **Clear** icon .
- 3 Touch **Call** icon  to make a call.
- 4 To end a call, touch **End** icon .

TIP! To enter “+” to make international calls, touch and hold down .

TIP! To bring up the keypad during a call, touch **Dialpad**.

Making a video call

- 1 Touch  to open the keypad.
- 2 Enter the phone number as before.
- 3 Touch the **Video call** icon  to make a video call.

- 4 If you do not want to use the speaker phone, touch **Speaker** and ensure you have the headset plugged in.
- 5 While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen. Adjust the inner camera position if necessary.

6 To end a video call, touch **End**.
Private: You can change the image instead of showing the current private image.

Dialpad: Type in a number.

Hold: Mute the sound and pause the video.

Mute: Mute the sound.

Speaker: Speaker on or off.


Calls/Contacts

In Video call Menu

Capture - You can capture an image of the other.

Use secondary camera - Switch the camera.

Calling your contacts


- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

TIP! Flip your phone or press the volume (side) key to mute the incoming call.
Press the volume (side) key to mute the incoming call also.

TIP! Press the G-key and shake your phone to answer a call.
On a call press the G-key and shake to quit the call.

When screen locked:

When your phone rings, Drag decline icon  to the left to decline/reject an incoming call.

When screen is unlocked:

When your phone rings, touch the **Accept** icon . Touch decline icon  to Decline/Reject an incoming call.





TIP! Excuse messages

When you want to decline/reject a call, you can send a message quickly by dragging **Excuse msg** on the screen. This is useful if you need to reply the message during a meeting.

Adjusting call volume

To adjust the in-call volume during a call, use volume up & down keys on the left side of the phone.

Making a second call

- 1 During your initial call, touch **Add call** .
- 2 Dial the number or search your contacts to select the number you want to call.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch the list of holding on to toggle between calls.
NOTE: You can touch **Merge calls**  to make a conference call.
- 6 To end active calls, touch **End** icon .

Viewing your call logs

On the home screen, touch  and choose **Call log** tab.

View a complete list of all dialed, received and missed calls.

TIP! Touch any single call log entry to view the date, time and duration of the call.

TIP! Touch the **Menu** key, then touch **Delete All** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding and other special features offered by your carrier.

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.

Calls/Contacts

3 Tap **Call settings** and choose options that you want to adjust.

< Fixed Dialling Numbers >

Select **Fixed Dialling Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – Allows you to select your carrier's voicemail service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer and so on.

Additional settings – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

Call duration – View the duration of all calls including all, dialed, received calls and the last call.


Excuse messages – When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Video call settings – Change your video call settings.




Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google account or other accounts that support syncing contacts.

Searching for a contact

- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

Adding a new contact


- 1 On the home screen, touch , and enter the new contact's number, then touch the **Menu** key, touch **Add to contacts**. Select **Create new contact** or **Add to existing**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from gallery**.
- 3 Select the contact type by touching .
- 4 Touch a text field to open the touch keyboard and enter a new contact's name.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **save** to save the contact.

Calls/Contacts


Favourite contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites:

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns gold.
- 4 The favorites contact will be saved under groups as Favorites.

To remove a contact from your favourites list:



- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Groups** tab and select **Favourites**. Touch a contact to view their details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.


Messaging/Email

Messaging

Your LG-P970 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  icon on the home screen and touch **New message** to open a blank message.
- 2 Enter a contact name from contact's list by touching  or enter a call number in the To field. You can add multiple contacts.
NOTE: You will be charged for a text message for every person you send the message to.
- 3 Touch **Enter message** below to start entering your message.
- 4 Touch **Send** to send your message.

TIP! You can touch  icon to attach the file you want to share with your message.

- 5 The message screen opens, with your message after recipient's name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

WARNING

The 160-character limit may vary from country to country depending on how the SMS is coded and the language.

WARNING

If an image, video or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

Messaging/Email

NOTE: If you get an SMS message during a call, there will be ring notification.

Changing your message settings

Your LG-P970 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen and touch the **Menu** key, then tap **Settings**.

Setting up your email

Touch **Applications** tab and select **Email**. If the email account is not set up, you need to start the email set up wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

You can select mailbox type between **MS Exchange** and **Other**.

Microsoft Exchange email account

Email address – Enter the email address.

User name – Enter the account's user name.

Password – Enter the account's password.

Domain – Enter the account's domain (optional).

Server address – Enter the server address.

Use SSL – Choose whether to use SSL for Microsoft Exchange.

Touch the **Next** button to connect to the server.

Setup complete screen will appear and you need to enter "name" for account display and my name.

Now the account will appear in the list of accounts.

Others (POP3, IMAP, GME) email account

Email address – Enter the email address.

Password – Enter the account's password.

Choose whether to enable Push Email account. Once you select to enable, it will connect to the server immediately.

Setup complete screen will appear and you need to enter “name”.

Now the account will appear in the list of accounts.

Incoming server – Enter the incoming email server address.

Port number – Each account's default number will be displayed.

Secure type – Choose from TLS, SSL and Off.

Outgoing server – Enter the outgoing email server address.

Port number – Each account's default number will be displayed.

SMTP Secure type – Choose from TLS, SSL and Off.

The Accounts screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

- Touch **Application** tab and select **Email**. The **Account list** screen appears.

TIP! In account lists touch and hold an email account to move the account icon in your home screen. Touch the icon to go to the **Inbox** directly.


You can touch an account to view its **Inbox**. The account from which you send email by default is indicated with a checkmark.

Messaging/Email

Composing and sending email

To compose and send a message:

- 1 While in the **Email** application, touch the **Menu** key and touch **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your contacts. Separate multiple addresses with Semicolon.
- 3 Touch the **Menu** key and touch **Add Cc/Bcc** to be able to add Cc or Bcc other contacts/email addresses.
- 4 Enter the text of the message body.
- 5 Touch **Attach** to attach the file you want to share with your message.
- 6 Touch **Send**.
If you're not ready to send the message, touch the **Menu** key and touch **Save as draft** to save

it in a **Drafts** folder. Touch a draft message in a **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key  before sending it. Touch No in the popup "save to Draft?" to abandon and delete a message, if you're working in flight mode or without data connection you cannot send mails. The pending messages will be stored in the **Outbox** and it is displayed on the Accounts screen if it is having messages. **Accounts** screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself.

If you want to see your sent messages in the **Sent** folder (or with the **Sent** label), you will often need to open the **Sent** folder/label and select **Refresh** from the options menu.

TIP! When a new email has arrived at the inbox, notification with sound, vibration will work. Tap the email notification to disappear that.

Working with account folders

Each account has **Inbox**, **Outbox**, **Sent** and **Drafts** folders. Depending on the features supported by your account's service provider, you may have additional folders.

Adding and editing email accounts

To add an email account:

- 1 Touch the **Applications tab** and select **Email**.
- 2 Select **MS Exchange** or **Other**.
- 3 Enter a name confirm how you want your name to appear in outgoing mail, then touch **Done**.

To change account settings:

- 1 Open the **Accounts** screen.
- 2 Select options, In the menu that opens, touch settings.

To delete an email account:

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Delete** in the menu that opens and **OK** in the dialog box to confirm.

Social networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status upload photos and view your friends' status updates.

If you don't have an account, you can visit the website to set one up.

NOTE: Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Adding your account to your phone

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Choose any social networking client application you want to use among Facebook, Twitter, and MySpace.
- 3 Enter your email address and the password that you set up on your community, then tap **Log in**.

- 4 Wait while your details are checked with your community.
- 5 If you tap your community, you can see the current status of your social community.

TIP! If you add 'My Status' widget on your home screen, it will show your status and help you update your status directly on the social community.

You can also add 'Social Feeds' widget on your home screen which shows any updates and news from the social community.

Viewing and updating your status

- 1 Choose a community you want to access.
- 2 You can see the current status of your social community.
- 3 You can update your current status with comments or uploading photos.

NOTE: This is dependent on network services.

TIP! You can use information about friends only in the social networking site or sync all data to contacts.

Removing accounts on your phone


- 1 Choose **Applications > Settings > Accounts & sync**.
- 2 Choose the account you want to delete, then touch **Remove account**.

Camera

Getting to know the viewfinder

Zoom - Zoom in or zoom out. Alternatively, you can use the side volume keys.

Convert - You can convert to the internal camera from the external one.

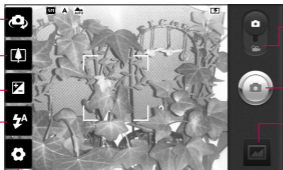

Video mode - Slide down this icon to switch to video mode.

Taking a photo

Gallery - Touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.


Settings - Touch this icon to open the settings menu. See Using the advanced settings.

Flash - Allows you to turn on the flash when taking a photo in a dark place.

Brightness - This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” to lower the brightness of the image or towards “+” to increase it.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch the shutter icon .
- 4 The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture.

Once you've taken the photo

Your captured photo will appear on the screen.

Share Touch to share your photo via **Smartshare, Bluetooth, Picasa, Messaging, Facebook for LG, MySpace for LG, Twitter for LG, Gmail, or Email.**


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


TIP! If you have a social networking site account and set it up on your phone, you can share your photos to your community.

Set as Touch to set the image as **Contact icon** or **Wallpaper.**


Rename Touch to edit the name of the selected picture.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view the last photo you captured.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the list. After selecting the option, touch the **Back** key.

Camera

Focus – Touch this icon to select the options menu. See Using the focus mode.

Image size – Touch to set the size (in pixels) of the picture you are taking.

Scene mode – Choose from **Normal**, **Portrait**, **Landscape**, **Sports**, **Sunset** and **Night**.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Colour effect – Choose a colour tone for your new photo. Choose from **None**, **Sepia**, **Black & white**, **Negative**, **Vivid**, **Negative sepia**, **Blue**, **Emboss** and **Solarise**.

Timer – The self-timer allows you to set a delay before a picture is taken after the shutter is pressed.

Shot mode – Select various shooting modes from the options.



Image quality – Choose from **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Auto review – If you set **Auto review** to on, it will show you the picture you have just taken automatically.

Shutter sound – Select one of the four shutter sounds.

Tag location – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when location service is activated.

-  Restore all camera default settings.
-  Touch whenever you want to know how this function operates. This is to provide you with a quick guide.

TIP! When you exit the camera, some settings will return to default. Check camera settings before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Using the focus mode

You can select the focus mode using the following options;

Auto – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Continuous

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.


Manual – Set the camera to focus manually.

Camera


Viewing your saved photos

1 You can access your saved photos from within the camera mode.

Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to see slide show. Touch **Menu** and select the options you want.

 Touch to share the contents.

 Touch to delete a photo.

 Touch **More** for more options below.

Details - Find out more information about the contents.

Set as - Set as contact icon or wallpaper.

Crop - Crop your photo. Move your finger across the screen to select the area.

Rotate - Rotate left or right.

TIP! In the thumbnail list you can move quickly by holding the G-key and tilting right or left.

TIP! Press the G-key to zoom In/Out of the photo. Once you are zoomed into a photo, hold down the G-key and tilt the phone to move around a photo.

TIP! Tapping the left or right side of the phone while photo is viewing allows you to go to the previous/next photo.

Video camera

Getting to know the viewfinder

Zoom - Zoom in or zoom out. Alternatively, you can use the side volume keys. Before starting to record a video, you can use the zoom function. You can't control the zoom function during recording.

Convert - You can convert to the internal camera from the external one.



Camera mode - Slide up this icon to switch to camera mode.

Start recording

Gallery - Touch to view the video you recorded last. This enables you to access your gallery and view your saved videos from within the video mode.





Settings - Touch this icon to open the settings menu. See Using the advanced settings.

Flash - Allows you to turn on the flash when taking a Video in a dark place.

Brightness - This defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar, towards “-” to lower the brightness of the video or towards “+” to increase it.

Video camera

Shooting a quick video

- 1 Open the **Camera** application and slide the camera mode button down to the **Video** position. The shutter icon  will change to .
- 2 The video camera viewfinder will appear on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Touch the start video icon .
- 5 Rec will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch the stop video icon  to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play

Touch to play the video.

Share

Touch to share your video via **Smartshare, Bluetooth, Email, Gmail, Messaging** or **YouTube**.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Rename

Touch to edit the name of the selected video.



Touch to delete the video you just made and confirm by touching **Yes**. The viewfinder will reappear.



Touch to shoot another video straight away.



Touch to view the last video you recorded.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

Adjust the video camera settings by scrolling the list. After selecting the option, touch the **Back** key.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image size from HD (1280x720), TV (720x480), VGA (640x480), QVGA (320x240) or QCIF (176x144).

White balance – The white balance ensures that white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Colour effect – Choose a colour tone to use for your new view. Choose from **None**, **Sepia**, **Black&White**, **Negative**, **Vivid**, **Negative sepia**, **Blue**, **Emboss** and **Solarize**.

Video quality – Choose from **Super fine**, **Fine** and **Normal**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Voice – Choose **Mute** to record a video without sound.

Auto review – If you set this to **On**, it will automatically show you the video you have just recorded.




Reset all the video camera settings.



Touch whenever you want to know how this function operates. This is to provide you with a quick guide.

Video camera

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It will start to play automatically.

TIP! Flip your phone to pause the playing video.

Adjusting the volume when viewing a video


To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.


Multimedia

Gallery

You can also save your files to your external memory card. The advantage of using a memory card is that you can free up space on your phone memory.

Touch **Applications** tab, then select **Gallery**.

1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to see slide show. Touch **Menu** and select the options you want.

 Touch to share the contents.

 Touch to delete a photo.

 Touch **More** for more options below.

Details - Find out more information about the contents.


Set as - Set as contact icon or wallpaper.


Crop - Crop your photo. Move your finger across the screen to select the area.

Rotate - Rotate left or right.

To change how the contents of an album are displayed

You can view the images and videos in your albums in a chronological grid or in stacks, sorted by the date and the location where they were taken.

 Drag the Album View switch to the left to view the album contents in a chronological grid.





 Drag the Album View switch to the right to view the contents of the album in stacks.

Multimedia

Music

Your LG-P970 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Applications** tab, then select **Music**.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  twice to go back to the previous song.

To change the volume while listening to music, touch the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Use**

as phone ringtone, **Delete**, **Share**, **Search** and **Details** as options.

NOTE: Music file copyright may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the laws of the relevant country concerning the use of such material.

Using the radio

Your LG-P970 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: You must attach your headphone to listen to the radio. Insert that into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning it.


- 1 On the home screen, touch **Applications** tab and select **FM Radio**.
- 2 Touch the **Scan FM radio stations**.
- 3 If there are pre-set channels, you will see a pop-up with 'All channels will be reset. Continue?'. If you choose **OK**,

all the pre-set channels will be deleted and auto scan will start.

- 4 During auto scanning, touch **Stop scanning** if you want to stop scanning. Only channels scanned before you stop scanning will be saved.

NOTE: You can also manually tune in to a station using the wheel displayed.

Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.
- 3 Touch  icon. You can listen to the radio via built-in speaker.

Multimedia

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the LG-P970 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you will need to change settings manually. Choose **Settings > Applications > Development > uncheck USB debugging** and connect your phone to your PC using the USB data cable.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE:

- You need to install your microSD card first. Without a microSD card, you cannot use USB mass storage.
- After using USB mass storage function, if you want to synchronise your phone with your PC using the LG PC suite, you need to touch **Settings > Applications > Development > check USB debugging**, then touch the checkbox to touch **Turn on USB storage**.

How to save music/video files to your phone

- 1 Connect your phone to the PC using the USB cable.
- Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage > Open folder to view files**.
 - If you haven't installed LG Android Platform Driver on your PC, you will need to set it manually. For more information, refer to 'Transferring files using USB mass storage devices'.

- 2 Save music or video files from your PC to the phone's removable storage.
 - You may copy or move files from your PC to the phone's removable storage using mass storage mode.
 - If there is a video file with a subtitle file (.srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.
 - When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to your phone.

How to move contacts from your old phone to your current phone

Export your contacts as a CSV file from your old phone to your PC using a PC sync program.

- 1 Download PC Sync for Android at www.lg.com and install it on your PC. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 If the connection for the LG-P970 phone (using the USB cable) is detected by PC Sync for Android, click "Sync" or "Sync contacts" to synchronise the contacts saved in the PC to your phone and save them.
- 3 Select the **Contacts** icon. Go to **File > Import** and select the CSV file saved in the PC.
- 4 If the fields in the imported CSV file are different from the ones in PC Sync for Android, you need to map the fields. After mapping the fields, click OK. Then the contacts are added in PC Sync for Android.

Multimedia

How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a corresponding application, rather than from the Bluetooth menu as with normal mobile phones.

- **Sending pictures:** Run the **Gallery** application and select **Picture > Menu**. Click **Share** and select **Bluetooth > Check if Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.
- **Exporting contacts:** Run the **Contacts** application. Touch the address you want to export to. Touch the **Menu** and select **Share > Bluetooth > Check if Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.
- **Sending multi-selected contacts:** Run the **Contacts** application. To select more than one contact touch the **Menu** key and touch **Share**. Select the contacts you want to send or touch **Select all > Share > Bluetooth > Check if Bluetooth is turned on** and select **Scan for devices >** Choose the device you want to send data from the list.
- **Connecting to FTP (Only the FTP server is supported on this handset):** Select **Settings > Wireless & networks > Bluetooth settings**. Make Bluetooth On then and search for other devices. Find the service you want and connect to the FTP server.

TIP! The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

NOTE: If you want to search for this phone from other devices, go to **Settings > Wireless & networks > Bluetooth settings**. Then, select the **Discoverable** checkbox. The checkbox is cleared after 120 seconds.

NOTE: Supported profiles are HFP, HSP, OPP, PBAP (server), FTP (server), A2DP and AVRCP.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email and calendar in your Google account will automatically synchronise with your LG-P970.

Maps

Check your current location and traffic and receive directions to your destination. Your phone must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

Market

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the LG-P970 menu.

You can check others' comments regarding an application or you can post your own comments.

Gmail

Gmail is configured when you first set up your phone. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list is your default Gmail view.

Touch the **Menu** key, then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google account on the web. With the **Menu** key, you can compose an email, add accounts, go to labels, search and so on.

Talk

Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.

Touch the **Menu** key and select available options as below: **All friends, Add friend, Search, Sign out, Settings** and so on.

Google Search

Google Mobile Web Search allows you to search for websites.

Utilities

Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Alarm/Clock**.
- 2 If you want to add a new alarm, touch **New alarm**.
- 3 Set the alarm and touch **Save** to turn on.

NOTE: To delete the alarm on alarm list screen, touch the **Menu** key and select **Delete/Delete all**.

Adjust the below options: Alarm in silent mode, Side button behavior, Alarm volume, Set default ringtone, Weather info settings and Puzzle lock options.

Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷), followed by =.

- 4 For more complex calculations, touch **Advanced panel**, then choose sin, cos, tan, log and so on.

Adding an event to your calendar


- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a account to use **Calendar**.
- 3 To check the event, touch the date. Touch and hold if you want to add a new event. then touch **New event**.
- 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin and finish.
- 5 Also touch **Where**, then enter the location.
- 6 If you would like to add a note to your event, touch **Description** and enter the details.

- 7 If you want to repeat the alarm, set **Repetition** and set **Reminders** if necessary.
- 8 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Recording a sound or voice

Use the voice recorder to record voice memos or other audio files.

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  Record to begin recording.
- 3 Touch  Stop to end recording.
- 4 Touch  Play to listen to the recording.
- 5 Touch  List to access your album. You can listen to the saved recording.

TIP! Touch  Speaker button to set the speaker mode. Touch  to **Rename** and **Set as**.

Notice: The available recording time may differ from the real time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message that you write, and it will be sent normally.

The Web





Browser


Browser gives you a fast, full-colour world of games, music, news, sports, entertainment and much more, right on your mobile phone. Wherever you are and whatever you're into.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Touch the **Menu** key to view options.

-  **New window:** Open a new window.
-  **Bookmarks:** Add/show bookmark, show most visited site and history.
-  **Windows:** Show all your open windows.
-  **Refresh:** Touch to refresh the web page.

 **Forward:** Goes to the page you connected to after the current page. The **Back** key takes you to the previous page.

More

- **Add bookmark:** Add the current web page as a bookmark.
- **Find on page:** If you enter a letter or word, it will mark all the letters you entered in web page.
- **Select text:** Touch and select the lines you want to copy. Long touch any input box then you can paste it.
- **Page info:** Show the web page information.
- **Share page:** Send the web page.
- **Downloads:** Show downloaded history.
- **Settings:** Change web browser settings.

NOTE: To return the previous web page, touch the **Back** key.

Settings

On the home screen, touch **Application** tab then scroll and touch **Settings**.

Wireless & networks

Here you can manage Wi-Fi, Wi-Fi Direct, Tethering and Bluetooth. You can also set mobile networks and airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Wi-Fi – Touch to select: This turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key and touch **Advanced**.

Wi-Fi Direct Settings – Set Wi-Fi Direct device name and scan for other devices. Or be a Group owner to allow legacy Wi-Fi devices to connect.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P970 into the router.

You can find the MAC address in the following user interface: Touch **Applications > Settings > Wireless & networks > Wi-Fi settings** and touch the **Menu** key. Then select **Advanced > MAC address**.

Bluetooth – Touch to select: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable mode, scan for other devices. Or check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

Settings

Portable hotspot – Share your phone's mobile connection as a portable Wi-Fi hotspot.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

Sound

< General >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos and any alarms you have set. (You must silence media and alarms in their own applications.)

Notice: After setting silent mode it is not available to use **Settings > Sound > Volume** menu.

Vibrate – Allows you to set your phone to vibrate when you receive an incoming call.

Volume – Allows you to set the volume for ringtones, media and

alarms. If you un-select the option to use the same volume for both calls and notifications, you can set both volumes separately.

< Incoming calls >

Phone ringtone – Allows you to set your default incoming call ringtone.

< Notifications >

Notification ringtone – Allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – Allows you to set the phone to play tones when using the dial keypad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sounds – Allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the soft keys and perform other actions.

Display

Brightness – Adjust the brightness of the screen.

Auto-rotate screen – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

Animation – Allows you to set animated transitions when navigating from screen to screen.

Screen timeout – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

Display font – Change the display font.

Gesture

Adjust the gesture settings for text input field, home screen, alarm, music, Video player, incoming call, Gallery, Camera and Browser.

Location & security

< My Location >

Use wireless networks – If you select **Use wireless networks**, your phone will determine your approximate location using Wi-Fi and mobile networks.

Use GPS Satellites – If you select **Use GPS satellites**, your phone will be determine your location to street-level accuracy.

< Screen unlock >

Set up screen lock – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern**, or leave it as **None**.

Settings

TIP! To lock your screen by using the Pattern Lock

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You are prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you will be prompted to draw your unlock pattern to unlock the screen.

< SIM card lock >

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

< Passwords >

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

< Device administration >

Select device administrators – Add or remove device administrators.

< Credential storage >

Use secure credentials – Select to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of Wi-Fi connections. If you have not set a password for credential storage, this setting is dimmed.

Install from SD card – Allows you to install encrypted certificates from a microSD card.

Set password – Allows you to set or change the password for your secure credential storage. Your password must have at least eight characters.

Clear storage – Deletes all secure certificates and related credentials and erases the secure storage's own password.

Applications

Unknown sources – Permits installation of applications that you obtain from websites, email or other locations other than Android Market.



WARNING

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

Storage use – View storage used by applications.

Development – Allows you to set options for application development, such as **USB debugging**, **Stay awake** and **Allow mock locations**.

Accounts & sync

<General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Un-selecting this setting can save battery power and lowers (but does not eliminate) data use.

Auto-sync – Permits applications to synchronise, send and receive data on their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone. If you touch an account in this screen, its account screen opens.

Settings

Privacy

< Personal data >

Factory data reset – Erases all of your personal data from internal phone storage, including information about your Google account, any other accounts, your system/application data and settings, any downloaded applications and your DRM licence. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information as when you first started Android.

SD card & phone storage

< USB connection mode >

Your phone can be used as a mass storage device. You can set the default USB connection mode setting to **Mass storage only**.

< SD card >

Check total space and available space. Touch **Unmount SD card** for safe removal. **Erase SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

< Internal phone storage >

Check the **Available space**.

Language & keyboard

Use the **Language & keyboard** settings to select the language and Input Method for entering text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Voice input & output

< Voice input >

Voice recogniser settings –

Use the Voice recognizer settings to configure the Android voice input feature.

< Voice output >

Text-to-speech settings –

Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can take advantage of it.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

Accessibility

Use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone


View legal information and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).


You can enjoy wireless internet with Wi-Fi, without extra charges.

Turn on Wi-Fi

From the home screen, open the notification drawer and touch  on.

Or touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.

To connect to Wi-Fi

Choose Wi-Fi network you want to connect to. If you see , you need to enter password to connect.

Settings


NOTE:

- If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.
- If your phone changes to sleep mode, even when connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. In this case, if your phone has access to 3G data, it may be connected to the 3G network automatically, and additional charges may be applied.)
- The LG-P970 supports WEP, WPA/WPA2-PSK and 802.1x EAP. security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Sharing your phone's mobile data connection

You can also share your phone's data connection with up to five devices at once, by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

Icon	Description
	Portable Wi-Fi hotspot is active

For the latest information about portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

NOTE: Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Portable Wi-Fi hotspot settings

On the home screen, touch the **Application** tab and select **Settings**.

Touch **Wireless & networks** and select **Portable hotspot**.

Choose options that you want to adjust.


Portable Wi-Fi hotspot – Check to share your phone's mobile network data connection as a portable Wi-Fi hotspot.

Help – Opens a dialog with information about portable Wi-Fi hotspots as well as information about where to learn more.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 On the home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Portable hotspot**.

3 Check **Portable Wi-Fi hotspot**.

- After a moment, the phone starts broadcasting its Wi-Fi network name (SSID), so you can connect to it with up to eight computers or other devices. An ongoing notification  is added to the status bar and notifications drawer.
 - When **Portable Wi-Fi hotspot** is selected, you can change its network name or secure it.
- 4 Unselect **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Portable hotspot**.

Settings

- 3 Ensure **Portable Wi-Fi hotspot** is selected.
- 4 Touch **Portable Wi-Fi hotspot settings**.
- 5 Touch **Configure Wi-Fi hotspot**.
 - The **Configure Wi-Fi hotspot** dialog opens.
 - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security with a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!

If you set the security option as **Open**, you can not prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised use, you are advised to keep the security option.

- 6 Touch **Save**.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Using smart share (SmartShare1.3 version) you can share and play the multimedia contents between 2 devices. (for SmartShare1.0 you can only share the contents)

Both devices should be connected to a Wi-Fi network (DLNA enabled) or any other device which is acting as

Wi-Fi hotspot,

To make Third device Wi-Fi Hotspot goto settings > Wireless and Networks > Portable Hotspot > enable Portable Wi-Fi hotspot checkbox.

To Use SmartShare to allow sharing and playing the contents

To use SmartShare application Applications > SmartShare > options > settings > enable the discoverable checkbox then Select the contents you want to share then press back.

Then tap on from icon then tap refresh icon then list of devices will appear select the device with which you want to share the data.

Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct cannot be enabled while using other Wi-Fi functions.

If both the devices support Wi-Fi direct they can connect without using the Wi-Fi hotspot, Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and the searched devices will be listed up in the order of arrival and you can select a specific device to share multimedia data through SmartShare.

- 1 On the home screen, touch the **Application** tab and select **Settings**.
 - 2 Touch **Wireless & networks** and select **Wi-Fi Direct Settings**.
 - 3 Ensure **Wi-Fi Direct** is selected.
 - 4 Select a device to connect in the scanned device list.
- **Forced G/O mode** - Touch to activate group owner mode

Settings

that enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in the Menu > Advanced > Password. Then goto applications > SmartShare > options > settings > make discoverable > and accept the ip showing in the settings screen. Now touch from icon u will see the connected device name in list and tap on the device you can see the shared contents.






NOTE: When your phone becomes group owner, it will consumes more battery power than being a client. Wi-Fi Direct connection does not provide Internet service. Additional cost may be incurred when connecting and using online services. Check data charges with your network provider.

TIP! Wi-Fi cast application has to be installed to store the contents shared using Wi-Fi Direct.

How to use On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC using the mouse or keyboard.

On-Screen Phone icons

-  Connects or disconnects your mobile phone to/from your PC.
-  Rotates the On-Screen Phone window (only available at applications that support rotation).
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone program.
-  Minimises the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click and drag to send a file to your PC.
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the On-Screen

Phone window. The files you send are stored on a micro SD card.

- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages, as well as alarm and event notifications.

Notice: The Camera preview and Video are not supported in OSP, so it is not available on the PC.

How to install On-Screen Phone on your PC

Visit LG Home (<http://www.lg.com>) and go to Support > Mobile Phone Support > Download LG Mobile Support Tool to PC. If you download LG PC Suite IV, the On-Screen Phone program will also be downloaded on your PC. Then you can install the On-Screen Phone on your PC.

Settings

How to connect your mobile phone to your PC

USB connection:

- 1 Open Connection Wizard, select "USB Cable connection" and click "Next".
- 2 Connect your mobile phone to the PC using a USB cable and click "Next".
- 3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless & Networks > On-Screen Phone Settings**.
- 4 Click "OK" to exit the window.

Wireless connection with Bluetooth:


- 1 On your mobile phone, go to **Settings > Wireless & networks > Bluetooth settings**. Select **Turn on Bluetooth** and select **Discoverable**.

- 2 If you have previously connected using a cable, run the New Connection Wizard to create a new connection.
- 3 Run the Connection Wizard on the computer, select "Bluetooth connection", then "Next".
- 4 The wizard starts searching for Bluetooth-enabled mobile phones. When the mobile phone that you wish to connect to appears, click "Stop" to stop searching.
- 5 Select "LG-P970" from the device list and click "Next". You can rename the device if you wish.
- 6 Enter the PIN code (e.g. "0000") and click "Next".
- 7 On your mobile phone, accept the request and enter the same PIN code, then touch "OK".
- 8 Enter the On-Screen Phone password and click "Next" (the default password is "0000").
- 9 Touch "OK" to exit.

To check the phone to PC connection

Once the devices have been connected, drag down the notification bar at the top of the home screen to check the On-Screen Phone connection status.

To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Or drag down the notification bar at the top of the home screen and select "On-Screen Phone". Touch "Yes" in the Disconnect window.

NOTE: You must restart your phone after shutting down the On-Screen Phone service.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware of your phone to the newer version conveniently from the internet without the need to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Settings

NOTE: LG reserves the right to make firmware updates available only for selective models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.


Remote Call

It is a standard online support solution.

Remote Call + Mobile pack is a remote support solution that enables support representatives to view and control the customers mobile screen on their pc in order to remotely diagnose and fix mobile problems.

Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.
- microSD™ and the microSD logo are Trademarks of the SD Card Association.
- Google™, Google Search™, Maps™, Gmail™, YouTube™, Talk™ and Market™ are trademarks of Google, Inc.
- Wi-Fi® and Wi-Fi Protected Access® are registered trademarks of the Wi-Fi Alliance. Wi-Fi Direct™ and Wi-Fi Protected Setup™ are trademarks of the Wi-Fi Alliance.
-  Includes ADOBE® FLASH® PLAYER
Contains Adobe® Flash® Player or Adobe AIR® technology under license from Adobe Systems Incorporated. Copyright © 1995-2011.

- **Dolby Mobile License notice**



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

- **DivX Mobile**



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Copyrights and trademarks

DivX Certified® to play DivX® video up to HD 720p, including premium content. DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under licence.

Notice!

Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the LG-P970.
(Items described below may be optional.)

Charger



Data cable

Connect your LG-P970 and PC.



Battery



User Guide

Learn more about your LG-P970.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. Check if the SIM card is older than 6–12 months. If so, change your SIM at your network provider's nearest branch.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialling error New SIM card inserted Prepaid Charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery is not charged Battery contacts are dirty	Press the On/Off key down for at least two seconds. Keep charger attached for longer. Clean the contacts. Take out the battery and insert again.

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage Charger defective	Plug into a different socket. If the charger does not warm up, replace it. Only use original LG accessories.
	Wrong charger. Battery defective.	Replace battery.
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/ send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check if it is covering the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove and re-insert battery. Turn on the phone. Try to do a software update service via WEB site.

