



ไ
ท
ย
ENGLISH

คู่มือการใช้
LG-P920



CE 0168 !

P/N : MFL67359901 (1.1)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเขาสินค้ารวมถึงเพื่อให้เห็นใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG,

หนึ่งขอความปรออมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG

โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มให้บริการ

ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ

รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม

เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ.

ทันทีที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง

คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์

จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถยืนยันได้ว่า

จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบการรองจาก

มาตรฐานในขั้นตอนการผลิต โดยไม่ว่าเป็นตองแสดงหลักฐานใน

การซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.



คู่มือการใช้ LG-P920 - ไทย

คู่มือนี้มีข้อมูลเกี่ยวกับระบบปฏิบัติการ Android Gingerbread เวอร์ชัน 2.3 หากโทรศัพท์ของคุณใช้ระบบปฏิบัติการ Android Froyo เวอร์ชัน 2.2 โปรดดูหน้า 100 เพื่ออัปเดตโทรศัพท์ของคุณ

- บางส่วนของคู่มือนี้อาจไม่สามารถนำไปใช้กับโทรศัพท์ของคุณขึ้นอยู่กับซอฟต์แวร์โทรศัพท์หรือผู้ให้บริการ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางด้านสายตาใช้เครื่องรุ่นนี้ เนื่องจากมีปุ่มกดบนหน้าจอแบบสัมผัส
- ลิขสิทธิ์ ©2011 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google Search, Map, Gmail, YouTube, Talk และ Market เป็นเครื่องหมายการค้า Google, Inc.



สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ.5

ข้อความประกาศสำคัญ.....13

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ22

การใส่ซิมการ์ดและแบตเตอรี่ 24

การชาร์จโทรศัพท์ 25

การฟอร์แมตการ์ดหน่วยความจำ 26

หน้าจอหลักของคุณ28

เคล็ดลับสำหรับหน้าจอสัมผัส.... 28

ลือคโทรศัพท์ของคุณ 30

ปลดลือคหน้าจอ 30

หน้าหลัก 30

การเพิ่ม Widget

ในหน้าจอหลักของคุณ 31

การกลับไปแอปพลิเคชันที่เพิ่ง

ใช้ล่าสุด 32

แป้นพิมพ์บนหน้าจอ..... 34

การตั้งค่าแอคเคาท์ Google...36

การสร้างแอคเคาท์ Google 36

การใช้อินแอคเคาท์ Google

ของคุณ..... 36

การโทร/รายชื่อ38

การโทรออก..... 38

โทรแบบสนทนาทางวิดีโอ..... 38

ในเมนูสนทนาทางวิดีโอ 39

การโทรออกโดยรายชื่อ..... 39

การรับสายและการปฏิเสธสาย

เรียกเขา 39

การปรับระดับเสียงสายสนทนา .. 39

การใส่สายที่สอง 40

การดูบันทึกการโทร 40

ตั้งค่าการโทร..... 40

รายชื่อ 42

การคนหารายชื่อ 42

การเพิ่มรายชื่อใหม่ 42

เพื่อนสนิท 43

ข้อความ/อีเมล44

ข้อความ 44

การส่งข้อความ 44

การเปลี่ยนการตั้งค่าข้อความ

มัดติมีเดีย 45

การตั้งค่าอีเมล..... 45

แอคเคาท์อีเมล Microsoft

Exchange 45

แอคเคาท์อีเมล (POP3, IMAP)

อื่น 46

การเขียนและส่งอีเมล..... 47

การทำงานกับโฟลเดอร์

แอคเคาท์ 48

การเพิ่มและการแก้ไขแอคเคาท์

อีเมล/การเพิ่มแอคเคาท์

อีเมล: 48

เครือข่ายสังคม50

การเพิ่มแอคเคาท์ไปยังโทร

ศัพท์ของคุณ 50

การดูและอัปเดตสถานะของคุณ	50
การลบแอคเคาท์ออกจากโทรศัพทของคุณ	51
Facebook และ Twitter	51
รูปภาพและวิดีโอ	52
ทำความเข้าใจกับช่องมองภาพ (กล้องถ่ายรูป)	52
การถ่ายภาพอย่างรวดเร็ว	53
เมื่อคุณถ่ายภาพแล้ว	53
การใช้การตั้งค่าขั้นสูง (กล้องถ่ายรูป)	54
การดูรูปภาพที่บันทึกไว้	55
ทำความเข้าใจกับช่องมองภาพ (กล้องวิดีโอ)	57
การถ่ายวิดีโอตอน	58
หลังการถ่ายวิดีโอ	58
การใช้การตั้งค่าขั้นสูง (กล้องวิดีโอ)	59
การดูวิดีโอที่บันทึกไว้	60
การปรับระดับเสียงขณะดูวิดีโอ	60
รูปภาพและวิดีโอ 3D	60
การถ่ายวิดีโอ 3D ตอน	62
3D ช่องว่าง	63
YouTube 3D	63
คลังภาพ 3D	63
กล่อง 3D	63
3D เกม&แอปฯ	63
คู่มือ 3D	64

มัลติมีเดีย	65
คลังภาพ	65
เพลง	65
การเล่นเพลง	66
การใช้ SmartShare	66
การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล USB	69
วิธีบันทึกไฟล์เพลง/วิดีโอในโทรศัพท์	69
วิธีย้ายรายชื่อจากโทรศัพท์เก่าของคุณไปยังโทรศัพท์ที่ใช้ในปัจจุบัน	70
วิธีการส่งข้อมูลจากโทรศัพท์ของคุณผ่านบลูทูธ	71
HDMI	72
ยูทิลิตี้	74
การตั้งเวลาการปลุก	74
การใช้เครื่องคิดเลข	74
การเพิ่มเหตุการณ์ลงในปฏิทิน	74
การบันทึกเสียงหรือเสียงพูด	75
การส่งรายการบันทึกเสียง	75
โซนเวลาท้องถิ่น	75
ตัวแปลงเกมส์ 3D	76
การแก้ไขวิดีโอ	76
เว็บไซต์	78
บราวเซอร์	78
การใช้ตัวเลือก	78

สารบัญ

แอปพลิเคชันใน Google.....80	การแบ่งปันการเชื่อมต่อข้อมูล
Maps..... 80	โทรศัพท์มือถือของโทรศัพท์ 93
Market 80	การปล่อยสัญญาณและสอดสปีด
Gmail 80	แบบพกพา..... 94
Talk..... 80	การเปลี่ยนชื่อหรือรักษาความ
Google Search 81	ปลอดภัยของสอดสปีด
LG SmartWorld.....82	เคลื่อนที่..... 95
วิธีการเข้าสู่ LG SmartWorld	วิธีใช้ On-Screen Phone..... 96
จากโทรศัพท์ของคุณ 82	ไอคอน On-Screen Phone..... 97
วิธีการใช้ LG SmartWorld 82	คุณสมบัติ On-Screen Phone... 97
ตั้งค่า.....84	วิธีติดตั้ง On-Screen Phone
ระบบไร้สายและเครือข่าย..... 84	ในคอมพิวเตอร์ 98
เสียง..... 85	วิธีเชื่อมต่อโทรศัพท์กับคอม
หน้าจอ 86	พิวเตอร์..... 98
ท่าทางการเคลื่อนไหว..... 86	ในการตรวจสอบการเชื่อมต่อ
ตำแหน่งและระบบป้องกัน 87	โทรศัพท์กับคอมพิวเตอร์ 99
แอปพลิเคชัน..... 88	การยกเลิกการเชื่อมต่อโทรศัพท์
บัญชีและการซิงค์ 89	กับคอมพิวเตอร์..... 99
ความเป็นส่วนตัว 89	อัปเดตซอฟต์แวร์โทรศัพท์ 100
ความจำการ์ด SD และเครื่อง..... 90	ซิงค์โทรศัพท์ของคุณกับคอม
ภาษาและคีย์บอร์ด 90	พิวเตอร์..... 101
อินพุตและเอาต์พุตเสียง..... 90	ลิขสิทธิ์และเครื่องหมาย
การช่วยสำหรับการเข้าถึง..... 92	การค้า.....103
วันที่และเวลา 92	อุปกรณ์เสริม.....105
เกี่ยวกับโทรศัพท์ 92	ข้อมูลทางเทคนิค.....106
Wi-Fi..... 92	การแก้ปัญหา.....107
เปิด Wi-Fi..... 92	
การเชื่อมต่อไปยัง Wi-Fi 93	

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-P920 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่โตมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและ

มีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DAS4 ขณะถือแนบกับหูคือ 0.368 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.562 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจาก

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปิดเข็มขัดหรือที่ใส่โทรศัพท์เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะ และควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้นจนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นอาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน

- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่กรดหรือแบตเตอรี่โดยสารที่มีแก๊สแมงเหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแก๊สแมงเหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายาม

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ถอดหรือซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาต หรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน

- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลาสั้นโดยไม่มีการระบายอากาศหรือมีไม่เพียงพอ อาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น

กรณืทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น

- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับผลกระทบบางอย่างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลง หากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่านำสัมผัส หรือพยายามดึงออก ให้

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแกวนี้ จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory

Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง

- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่นในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพ

อากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง

- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับกำหนัดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ข้อควรระวังเมื่อดูเนื้อหา 3D

1. เมื่อดูเนื้อหา 3D:

- การมองเห็นของเด็กเล็กกำลังพัฒนา เด็กอายุต่ำกว่า 5 ขวบไม่ควรดูเนื้อหา 3D
- ผู้ดูบางราย อาจมีอาการไม่สบาย เช่น คลื่นไส้ ตาล้า เหนื่อยล้า หรือเวียนเมื่อดูเนื้อหา 3D ผู้ชมควรพักเป็นระยะเพื่อหลีกเลี่ยงอาการเหล่านี้ เนื่องจากความแตกต่างระหว่างบุคคล ให้พิจารณาความถี่และระยะเวลาของการพักที่เหมาะสมกับคุณ หากมีอาการไม่สบายเหล่านี้ ให้หยุดดูและพักจนกว่าอาการจะหายไป หากยังมีอาการอยู่หลังจากหยุดดูและพักแล้ว โปรดปรึกษาแพทย์ ทำตามคำแนะนำที่มาพร้อมกับอุปกรณ์มือถือของคุณเกี่ยวกับระยะห่างและมุมมอง.

- การดูเนื้อหา 3D ในระหว่างการรับชมที่แนะนำอาจช่วยลดโอกาสที่จะเกิดอาการต่างๆ ได้
- 2. ผู้ปกครองควรให้คำแนะนำในการดูเนื้อหา 3D เพื่อให้เด็กปฏิบัติตามการใช้งานที่แนะนำ

ข้อความประกาศสำคัญ

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องลบข้อมูลบางอย่างออกจากหน่วยความจำโทรศัพท์ เช่น แอปพลิเคชันหรือข้อความ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การจัดการแอปพลิเคชัน:

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนลงไปยังแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง และเลือก
- 3 **แตะ ถอนการติดตั้ง** และแตะตกลง เพื่อยกเลิกการติดตั้งแอปพลิเคชันที่คุณเลือก

คำเตือน

หากคุณลบข้อมูลที่จัดเก็บในการ์ด SD ภายในของโทรศัพท์ คุณไม่สามารถเรียกคืนข้อมูลนั้นโดยใช้ตัวเลือกรีเซ็ตข้อมูลจากโรงงาน (ตั้งค่า > ความเป็นส่วนตัว > รีเซ็ตข้อมูลจากโรงงาน)

2. การยืดอายุแบตเตอรี่

คุณสามารถยืดอายุแบตเตอรี่ได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานในแบ็คกราวด์ คุณยังสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่:

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS เมื่อไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ

ข้อความประกาศสำคัญ

• บางแอปพลิเคชันที่คุณดาวน์โหลดอาจลดยุติแบบเดือร การตรวจสอบระดับประจุแบตเตอรี่:

1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะ**

2 สถานะแบตเตอรี่ (กำลังชาร์จ, กำลังคายประจุ) และระดับ (เปอร์เซ็นต์เมื่อเทียบกับชาร์จเต็ม) จะแสดงที่ด้านบนของหน้าจอ

ในการตรวจสอบและควบคุมการใช้แบตเตอรี่:

1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่**

2 ด้านบนของหน้าจอจะแสดงเวลาที่ใช้แบตเตอรี่ เวลานี้จะแสดงช่วงเวลานับจากครั้งสุดท้ายที่โทรศัพท์ของคุณเชื่อมตือกับแหล่งจ่ายไฟ หรือ

หากโทรศัพท์ของคุณกำลังเชื่อมตือกับแหล่งจ่ายไฟ จะแสดงช่วงเวลานับจากครั้งสุดท้ายที่มีการใช้พลังงานจากแบตเตอรี่ หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้ไฟฟ้จากแบตเตอรี่จากมากไปน้อย

3. การติดตั้ง OS โอเพ่นซอร์ส

หากคุณติดตั้ง OS โอเพ่นซอร์สในโทรศัพท์ของคุณ และไมใช้ OS จากผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้

คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต โทรศัพท์ของคุณจะไมได้รับความคุ้มครองตามการรับประกัน

⚠ คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น หากแอปพลิเคชันติดตั้งในโทรศัพท์โดยไม่ถูกต้อง โทรศัพท์อาจทำงานไม่ถูกต้องหรือเกิดข้อผิดพลาดร้ายแรง คุณอาจต้องการยกเลิกการติดตั้งแอปพลิเคชันและข้อมูลและการตั้งค่าจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ ซึ่งจะเปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ

คุณสามารถวาดแบบปลดล็อคของคุณได้โดยการเชื่อมต่อสิ่งจตุหรือมากกว่าหากคุณตั้งค่าแบบไวหน้าจอของโทรศัพท์คุณจะถูกล็อคในการปลดล็อคโทรศัพท์ ให้ป้อนแบบตามที่คุณตั้งไวบนหน้าจอ

ข้อควรระวัง: สร้างแอคเคาท์ Gmail ก่อนการตั้งค่าแบบปลดล็อค

⚠ คำเตือน

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือคุณต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณมีโอกาสเพียงห้าครั้งในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ เมื่อคุณทำการป้อนทั้งหมดห้าครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ:

- 1 ในกรณีที่คุณลืมแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ: หากคุณลืมรูปแบบ: หากคุณสร้างแอคเคาท์ Google บนโทรศัพท์ ให้แตะที่ปุ่ม ลืมแบบ จากนั้นคุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมคุณจำเป็นต้องทำการ Hard Reset

ข้อความประกาศสำคัญ

2 หากคุณลืม PIN หรือรหัสผ่าน หากคุณลืม PIN หรือรหัสผ่าน คุณจำเป็นต้องทำการ Hard Reset

5. การใช้ Hard Reset

หากไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

เมื่อปิดโทรศัพท์แล้ว ให้กดปุ่ม 3D + ปุ่มลดระดับเสียง+ปุ่มเปิด/ปิดค้างไว้สิบวินาทีเมื่อหน้าจอแสดงโลโก้ LG ให้ปล่อยปุ่มเปิด/ปิดหลังจากหน้าจอแสดงหน้าจอ Hard Reset ให้ปล่อยปุ่มอื่นๆ

รอให้โทรศัพท์ทำการ Hard Reset อย่างน้อยหนึ่งนาทีแล้วทำการ Reboot System now โทรศัพท์จะเปิดเครื่อง

ข้อควรระวัง: หาก你做 Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ และไม่สามารถย้อนกลับได้ อย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

6. การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "ฮอตสปอต" จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ Wi-Fi เมื่อคุณไม่ได้ใช้เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และเชื่อมต่อเครือข่าย Wi-Fi:

- 1** บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน และเลือกตั้งค่า > ระบบไร้สายและเครือข่าย > ตั้งค่า Wi-Fi
- 2** แตะ Wi-Fi เพื่อเปิด และเริ่มสแกนหาเครือข่าย Wi-Fi
- รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
- 3** แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายเป็นแบบเปิด คุณจะได้รับแจ้งให้ยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่าย โดยการแตะ **เชื่อมต่อ**
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 4** แถบสถานะจะแสดงไอคอนระบบสถานะ Wi-Fi

7. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากแอปพลิเคชันที่เปิดจะทำงานต่อไปแม้ว่าคุณจะเปิดแอปพลิเคชันเพิ่มเติม คุณไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช่ทรัพยากรโดยไม่จำเป็น

การหยุดใช้งานแอปพลิเคชัน:

- 1** บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน >**
- 2** **จัดการแอปพลิเคชัน**
- 3** เลื่อนไปยังแอปพลิเคชันที่เลือก และแตะ **บังคับหยุด** เพื่อปิด

เคล็ดลับ!

การกลับไปแอปพลิเคชันล่าสุด
 แตะปุ่ม **หน้าหลัก** ค้างไว้ หน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้อยู่ล่าสุด

ข้อความประกาศสำคัญ

8. การติดตั้ง LG PC Suite ในคอมพิวเตอร์ของคุณ

ในการซิงโครไนซ์โทรศัพท์ผ่านสาย USB กับคอมพิวเตอร์ของคุณ คุณจะต้องติดตั้งโปรแกรม LG PC Suite ในคอมพิวเตอร์ของคุณ

คุณสามารถดาวน์โหลดโปรแกรมนี้ได้จากเว็บไซต์ LG ที่ www.lg.com ไปที่ และเลือกภูมิภาค ประเทศ และภาษา ไปที่เว็บไซต์ LG สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้งและใช้โปรแกรม

LG PC SUITE

LG PC Suite IV เป็นโปรแกรมที่ช่วยให้คุณเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สายการสื่อสารข้อมูล USB เพื่อให้คุณสามารถใช้ฟังก์ชันของโทรศัพท์มือถือบนคอมพิวเตอร์ของคุณได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก๊จ และลบข้อมูลในโทรศัพท์ได้ง่าย
- ซิงโครไนซ์ข้อมูลจากคอมพิวเตอร์หรือโทรศัพท์ (รายชื่อ, ปฏิทิน, ข้อความ(SMS), บุคมารค, บันทึกการโทร)
- ถ่ายโอนไฟล์มัลติมีเดีย (ภาพถ่าย, วิดีโอ และเพลง) ได้ง่ายเพียงลากแล้ววางระหว่างคอมพิวเตอร์และโทรศัพท์
- ถ่ายโอนข้อความจากโทรศัพท์ไปยังคอมพิวเตอร์ของคุณ

- อัปเดตซอฟต์แวร์โดยไม่สูญเสียข้อมูล

LG-P920 ไม่สนับสนุน:

- การเชื่อมต่อคอมพิวเตอร์ผ่านบลูทูธ
- สิ่งที่ต้องทำในปฏิทิน
- แอปพลิเคชัน Java

สำหรับข้อมูลเพิ่มเติม โปรดดูที่คู่มือผู้ใช้ **LG PC Suite IV** คุณสามารถดูได้จากเมนูวิธีใช้หลังจากติดตั้ง **LG PC Suite IV**

9. การเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ผ่าน USB

การถ่ายโอนไฟล์ในการ์ด microSD ของคุณด้วยอุปกรณ์ USB:

- 1 ติดตั้งการ์ด microSD ในโทรศัพท์ (อาจติดตั้งไว้ในโทรศัพท์ของคุณแล้ว)
- 2 ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมด

ที่เก็บข้อมูล ในโทรศัพท์ของคุณแล้ว (ในแท็บแอปพลิเคชัน ให้เลือก **ตั้งค่า > ความจำการ์ด SD และเครื่อง > ที่เก็บข้อมูล** เท่านั้น)

- 3 ใช้สาย USB ที่มาพร้อมกับโทรศัพท์ของคุณเพื่อเชื่อมต่อกับพอร์ต USB ที่คอมพิวเตอร์ และ **เปิดที่เก็บข้อมูล USB** คุณจะได้รับการแจ้งว่าเชื่อมต่อ USB แล้ว

เมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB คุณจะได้รับการแจ้งการถอด microSD ของโทรศัพท์จะติดตั้งเป็นไดรฟ์ในคอมพิวเตอร์ คุณสามารถคัดลอกไฟล์ระหว่างการถอด microSD ได้

หมายเหตุ: เมื่อยกเลิกการติดตั้ง PC Suite IV ไดรเวอร์ของ USB และบลูทูธ จะไม่ถูกลบโดยอัตโนมัติ คุณต้องถอดด้วยตัวเอง

เคล็ดลับ! ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้ง และแตะ **ปิดที่เก็บข้อมูล USB** ระหว่างเวลานี้

ข้อความประกาศสำคัญ

คุณจะไม่สามารถเข้าใช้การ์ด microSD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด microSD เช่น กล้อง คลังภาพ และเพลง ในการยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้ทำตามคำแนะนำในคอมพิวเตอร์ในการยกเลิกการเชื่อมต่ออุปกรณ์ USB เพื่อหลีกเลี่ยงการสูญเสียชีวิตข้อมูลในการ์ด

- 1 ยกเลิกการเชื่อมต่ออุปกรณ์ USB กับคอมพิวเตอร์ของคุณอย่างปลอดภัย
- 2 เปิดแถบการแจ้งเตือนและแตะ **ปิดที่เก็บข้อมูล USB**
- 3 แตะ **ปิด** ในกล่องโต้ตอบที่เปิดขึ้น

คำเตือน

อย่าใส่หรือถอดการ์ด microSD เมื่อโทรศัพท์ของคุณเปิดอยู่ ซึ่งอาจทำให้การ์ด microSD และโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ด microSD อาจเสียหาย ในการถอดการ์ด microSD อย่างปลอดภัยจากหน้าจอหลัก ให้กดปุ่ม **เมนู** และแตะ **ตั้งค่า > ความจำการ์ด SD และเครื่อง > ยกเลิกการเชื่อมต่อการ์ด SD**

10. ปลดล็อคหน้าจอลืม
ใช้การเชื่อมต่อข้อมูล
หน้าจอลืม LCD จะดับลงหากไม่ได้แตะเป็นระยะเวลาที่ตั้งไว้เมื่อใช้การเชื่อมต่อข้อมูล และเพื่อเปิดอีกครั้ง

11. อย่าเชื่อมต่อโทรศัพท์เมื่อคุณเปิดและปิดคอมพิวเตอร์

โปรดอย่าลืมยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ผ่านสายข้อมูลเพื่อหลีกเลี่ยงอันตรายต่อคอมพิวเตอร์

12. ถูโทรศัพท์ที่ตั้งขึ้น

โปรดถือโทรศัพท์ของคุณในแนวตั้งตรงและไถระดับ เช่นเดียวกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P920 มีเสาอากาศภายในระดับระวางอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่อง เนื่องจากประสิทธิภาพการทำงานอาจด้อยลง ในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล โปรดหลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ เนื่องจากอาจส่งผลกระทบต่อคุณภาพของการโทร

13. หากหน้าจอค้าง

หากโทรศัพท์ไม่ตอบการป้อนข้อมูลของผู้ใช้ หรือหน้าจอค้าง: ถอดแบตเตอรี่ออก ใส่กลับเข้าไปอีกครั้ง และเปิดโทรศัพท์ หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หากต้องการเปิดโทรศัพท์ ให้กดปุ่ม **เปิด/ปิดเครื่อง** ค้างไว้ 3 วินาที
หากต้องการปิดโทรศัพท์ ให้กดปุ่ม **เปิด/ปิดเครื่อง** ค้างไว้ 3 วินาที
จากนั้นแตะ **ปิดเครื่อง** แล้วแตะ **ตกลง**



คำเตือน: การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ ห้ามติดฟิล์มป้องกันบนเซนเซอร์รับสัญญาณของ LCD เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

เคล็ดลับ! แตะปุ่ม **เมนู** เมื่อคุณแตะแอปพลิเคชันเพื่อดูว่ามีตัวเลือกอะไรบ้าง

เคล็ดลับ! หาก LG-P920 แสดงข้อความแสดงข้อผิดพลาดจากการใช้งานหรือคุณไม่สามารถเปิดเครื่องได้ ให้ถอดแบตเตอรี่ ใส่กลับเข้าไปใหม่ และเปิดเครื่องอีกครั้งหลังจากผ่านไป 5 วินาที

ช่องเสียบหูฟัง
สเตอริโอ

เปิด/ปิดเครื่อง
/ ปุ่มล็อค



ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นเพลง: ควบคุมระดับเสียงได้ตลอดเวลา



ช่องเสียบอุปกรณ์ชาร์จ, ช่องเสียบสาย
เคเบิล micro USB

HDMI

ปุ่ม 3D

- เข้าใช้ เมนู 3D โดยตรงโดยกดปุ่มนี้ค้างไว้
- ในโหมดกล้องถ่ายรูป: ถ่ายภาพโดยกดปุ่มนี้

ฝาครอบ
ด้านหลัง

แบตเตอรี่

ช่องเสียบซิมการ์ด

เลนส์กล้อง

ช่องเสียบการ์ดหน่วย
ความจำ Micro SD




เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มต้นใช้โทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:

- 1 ในการถอดฝาครอบด้านหลังให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ใช้นิ้วหัวแม่มือของมืออีกข้างออกแรงกดที่ตรงกลางของฝาครอบแบตเตอรี่พร้อมกับใช้นิ้วชี้ดึงส่วนบนออกมา แล้วถอดฝาครอบแบตเตอรี่ออก

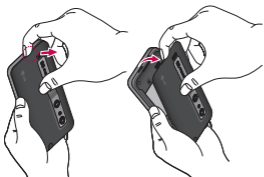

- 2 ใส่ซิมการ์ดเข้าไปในช่องใส่ซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการคว้าง

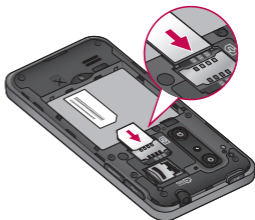


- 3 ใส่แบตเตอรี่ให้เข้าที่โดยให้หน้าสัมผัสสีทองในโทรศัพท์และแบตเตอรี่ตรงกัน



4 ปิดฝาครอบด้านหลังโทรศัพท์



การชาร์จโทรศัพท์


ช่องเสียบอุปกรณ์ชาร์จของ LG-P920 อยู่ที่ส่วนบนของเครื่อง เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ คุณต้องชาร์จโทรศัพท์ LG-P920 จนกว่าจะเห็น 



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อใช้ครั้งแรกเพื่อยืดอายุการใช้งานของแบตเตอรี่




ในการใส่การ์ดหน่วยความจำ:

1 ปิดโทรศัพท์ก่อนใส่หรือถอดการ์ดหน่วยความจำถอดฝาครอบด้านหลัง

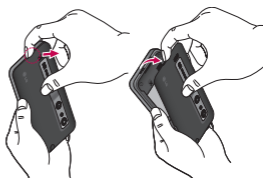

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

2 ใส่การ์ดหน่วยความจำลงในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

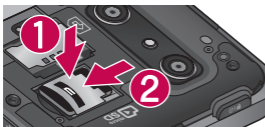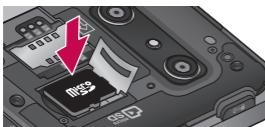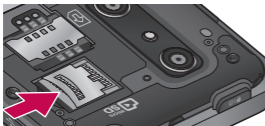

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตก่อนที่จะใช้งานได้

หมายเหตุ: ไฟล์ทั้งหมดในการ์ดหน่วยความจำจะถูกลบออกเมื่อฟอร์แมต

- 1** บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน เพื่อเปิดเมนูแอปพลิเคชัน
- 2** เลื่อนลงแล้วแตะ ตั้งค่า
- 3** เลื่อนลงแล้วแตะ ความจำการ์ด SD และเครื่อง

4 แตะ ยกเลิกการเชื่อมต่อการ์ด SD

5 แตะ ฟอร์แมต การ์ด SD แล้วยืนยันการเลือกของคุณ

6 หากคุณตั้งค่าล็อคแบบใหม่และเลือก ลบทุกสิ่ง การ์ดจะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดืออาจจะแตกต่างไปจาก

เดิมภายหลังการฟอร์แมต เนื่องจาก
ไฟล์ทั้งหมดถูกลบออก

เคล็ดลับ! หากถอดการเชื่อมต่อ
การดหน่วยความจำแล้ว คุณสามารถ
ฟอร์แมตได้โดยมีขั้นตอนดังนี้ **แต่**
แอปพลิเคชัน > ตั้งค่า > ความ
จำการด SD และ เครื่อง >
ฟอร์แมต การด SD

 **คำเตือน** อย่าใส่หรือถอด
การดหน่วยความจำขณะโทรศัพท์
ของคุณเปิดอยู่ มิเช่นนั้น อาจทำให้
การดหน่วยความจำและโทรศัพท์
ของคุณเสียหายได้ และข้อมูลที่จัด
เก็บในการดหน่วยความจำอาจเสีย
หาย ในการถอดการดความจำ
อย่างปลอดภัย เลือก
แอปพลิเคชัน > ตั้งค่า >
ความจำการด SD และ เครื่อง
> ยกเลิกการเชื่อมต่อการด SD

หน้าจอลึกของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับการนำเวกเตอร์โทรศัพท์ของคุณ

แตะ - ในการเลือกเมนู/ตัวเลือก หรือเปิดแอปพลิเคชันให้แตะที่เมนู/ตัวเลือกนั้น




แตะค้างไว้ - ในการเปิดเมนูตัวเลือก หรือจับวัตถุที่คุณต้องการขยาย ให้แตะวัตถุที่คุณต้องการขยายค้างไว้



ลาก - ในการเลื่อนรายการหรือคีย์ๆ ย้ายให้ลากผ่านหน้าจอลึก



ลากนิ้ว - ในการเลื่อนรายการหรือย้ายอย่างรวดเร็วให้ลากนิ้วผ่านหน้าจอลึกสัมผัส (ลากเร็วแล้วปล่อย)

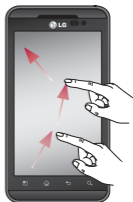

หุบและกางนิ้ว -
ในการซูมเข้าที่เนื้อหาขณะที่ภาพอยู่กึ่งกลางระหว่างปลายนิ้ว ให้หุบนิ้วบนหน้าจอโดยกดนิ้วสองนิ้วลงและเลื่อนเข้าหากัน สำหรับการยืดเนื้อหา ให้เลื่อนนิ้วแยกจากกันเพื่อซูมออกจากภาพ



หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

หน้าจอหลักของคุณ

ล๊อคโทรศัพท์ของคุณ

ในขณะที่คุณไม่ได้ใช้งาน LG-P920 ใ้กดปุ่ม **เปิด/ปิดเครื่อง** เพื่อล๊อคโทรศัพท์ของคุณ ซึ่งจะช่วยหลีกเลี่ยงการสัมผัสหน้าจอโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่

หากคุณไม่ใช่โทรศัพท์ชั่วคราว หน้าจอที่คุณกำลังดูจะเปลี่ยนเป็นหน้าจอล๊อคเพื่อประหยัดพลังงานแบตเตอรี่

หมายเหตุ: หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าแบบการล๊อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมดล๊อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล๊อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรศัพท์, การเข้าเว็บไซต์ หรือการสื่อสารข้อมูล)

ปลดล๊อคหน้าจอ

ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กดปุ่ม **เปิด/ปิดเครื่อง** หน้าจอล๊อคจะปรากฏและเลื่อนล๊อคหน้าจอขึ้นเพื่อ


ปลดล๊อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น


หน้าหลัก


เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดู นอกจากนี้ คุณยังสามารถปรับแต่งพาเนลด้วย Widget, ปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์และภาพพื้นหลังที่ชื่นชอบ

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

ในหน้าจอหลัก คุณสามารถดูปุ่มด่วนได้ที่ด้านล่างหน้าจอ ปุ่มด่วนจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ชื่นชอบได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

 **แตะไอคอน โทรศัพท์** เพื่อแสดงปุ่มหมายเลขแบบสัมผัสสำหรับใช้โทรออก

 **แตะเพื่อเปิด รายชื่อ**

 **แตะไอคอน ข้อความ** เพื่อเข้าใช้เมนูข้อความ คุณสามารถสร้างข้อความใหม่ได้ทันที

⚙️ แตะแท็บ **แอปพลิเคชัน** ด้านล่างหน้าจอ คุณสามารถดู แอปพลิเคชันที่ติดตั้งทั้งหมดได้ แตะเพื่อเลือנדูแอปพลิเคชันของคุณ


ในการเปิดแอปพลิเคชันเพียง แตะไอคอนแอปพลิเคชัน

หมายเหตุ: แอปพลิเคชันที่โหลดไว้ล่วงหน้าอาจแตกต่างกันตามซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

การเพิ่ม Widget ในหน้าจอหลักของคุณ

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มปุ่มลัด, Widget หรือโพลเดอร์ เพื่อเพิ่มความสะดวกในการใช้โทรศัพท์ ให้เพิ่ม Widget ที่ใช้บ่อยในหน้าจอหลัก



การเพิ่มไอคอนในหน้าจอหลัก:

- 1 บนหน้าจอหลัก ให้แตะปุ่ม **เมนู**  และเลือก **เพิ่ม** หรือแตะค้างไว้บนส่วนที่ว่างของหน้าจอหลักเป็นระยะเวลาหนึ่ง
- 2 ในเมนู **โหมดแก้ไข** ให้แตะ

- 3 **ประเภทรายการ**ที่ต้องการเพิ่ม เช่น เลือก **โพลเดอร์** จากรายการแล้วแตะ เลือก **รายชื่อที่มีหมายเลขโทรศัพท์** จากรายการแล้วแตะ
- 4 ไอคอนของโพลเดอร์ใหม่จะปรากฏบนหน้าจอหลัก ลากไปยังตำแหน่งที่ต้องการบนพาเนลด้านขวา และยกนิ้วออกจากจอ

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปพลิเคชัน ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม


การลบไอคอนแอปพลิเคชันจากหน้าจอหลัก:

- 1 แตะไอคอนที่คุณต้องการลบค้างไว้ ไอคอนถึงขยับ  จะปรากฏขึ้น
- 2 ลากและวางไอคอนแอปพลิเคชันลงในไอคอนถึงขยับ 

หมายเหตุ: คุณไม่สามารถลบแอปพลิเคชันที่โหลดไว้ล่วงหน้าได้ (คุณสามารถลบได้เฉพาะไอคอนออกจากหน้าจอเท่านั้น)

หน้าจอล็อกของคุณ

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด


- 1 แตะปุ่ม **หน้าหลัก**  ค้างไว้ หน้าจอจะแสดงบ็อบอัฟโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน หรือแตะปุ่ม **กลับ** เพื่อกลับไปแอปพลิเคชันปัจจุบัน


แถบการแจ้งเตือน

แถบการแจ้งเตือนด้านบนสุดของหน้าจอ



แตะและเลื่อนแถบการแจ้งเตือนลงด้วยนิ้วมือ

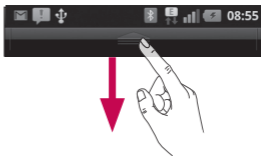

หรือ ในหน้าจอล็อก แตะปุ่ม **เมนู**  และเลือก **การแจ้งเตือน** ในหน้าจอนี้ คุณสามารถตรวจสอบและจัดการสถานะ Wi-Fi, บลูทูธ และ GPS รวมถึงการแจ้งเตือนอื่นๆ ได้

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายุแบตเตอรี่ และบลูทูธและการเชื่อมต่อข้อมูล ตารางด้านล่างนี้จะแสดงถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

[แถบสถานะ]

ไอคอน	รายละเอียด
	ไม่มีซิมการ์ด
	ไม่มีสัญญาณ
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	ชุดหูฟังแบบไร้สาย
	กำลังใช้สาย
	อยู่ระหว่างพักสาย
	ลำโพง
	ปิดไมโครโฟนโทรศัพท์
	สายไม่ได้รับ
	เปิดบลูทูธ
	เชื่อมต่อกับอุปกรณ์บลูทูธ
	ค่าเตือนระบบ

ไอคอน	รายละเอียด
	ตั้งปลุก
	ข้อความเสียงใหม่
	ปิดเสียงเรียกเข้า
	โหมดสั้น
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	ข้อมูลเข้าและออก
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	เชื่อมต่อ On-Screen Phone
	3 การแจ้งเตือนไม่ได้ดู


หน้าจอหลักของคุณ


ไอคอน	รายละเอียด
	กำลังซิงโครไนซ์ข้อมูล
	ดาวน์โหลดเสร็จสิ้น
	อีเมลใหม่
	Gmail ใหม่
	ข้อความ Google Talk ใหม่
	ข้อความใหม่
	กำลังเล่นเพลง
	เหตุการณ์ที่จะเกิดขึ้น
	กำลังใช้งานการปล่อยสัญญาณผ่าน USB
	กำลังใช้งานสอดสเปด Wi-Fi เคลื่อนที่
	กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และสอดสเปดแบบพกพา
	เปิด GPS

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏโดยอัตโนมัติบนหน้าจอเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ


การใช้ปุ่มกดและการป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ และสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

 แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณจะสามารถแตะที่บนนี้ค้างไว้เพื่อดูเมนูตั้งค่าได้

 แตะเพื่อดูหรือเปลี่ยนภาษาที่ใช้เขียน

 แตะเพื่อเว้นวรรค

 แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

 และเพื่อลบตัวอักษรก่อนหน้า


 และเพื่อซ่อนแป้นพิมพ์บน

หน้าจอ

การตั้งค่าแอดเดสส์ Google

ครั้งแรกที่คุณเปิดแอปพลิเคชัน Google ในโทรศัพท์ คุณจะต้อง ใช้นินด้วยแอดเดสส์ Google ของคุณ หากคุณไม่มีแอดเดสส์ Google เครื่องจะขอให้คุณสร้าง แอดเดสส์

การสร้างแอดเดสส์ Google

- 1 บนหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน  เพื่อเปิดเมนูแอปพลิเคชัน
- 2 แตะ **Gmail** และแตะ **ถัดไป** > **สร้าง** แตะ Gmail และแตะ **ถัดไป** > **สร้าง** เพื่อเริ่มวิธีการ การตั้งค่า Gmail
- 3 แตะที่ฟิลด์ข้อความตัวอักษร เพื่อเปิดแป้นพิมพ์สัมผัส และป้อนชื่อและชื่อผู้ใช้แอดเดสส์ Google ของคุณ ขณะป้อนข้อความ คุณสามารถเลื่อนไปที่ฟิลด์ข้อความตัวอักษรถัดไปได้ โดยแตะ **ถัดไป** บนแป้นพิมพ์
- 4 เมื่อคุณป้อนชื่อและชื่อผู้ใช้ของคุณแล้ว ให้แตะ **ถัดไป**

โทรศัพท์ของคุณจะติดต่อกับเซิร์ฟเวอร์ Google และตรวจสอบชื่อผู้ใช้นั้น

- 5 ป้อนรหัสผ่านของคุณสองครั้ง จากนั้น ปฏิบัติตามคำแนะนำ และป้อนข้อมูลที่จำเป็นและไม่จำเป็นเกี่ยวกับแอดเดสส์ โปรดรอในระหว่างที่เซิร์ฟเวอร์สร้างแอดเดสส์ของคุณ

การใช้นินแอดเดสส์ Google ของคุณ

- 1 ป้อนอีเมลแอดเดสส์และรหัสผ่านของคุณจากนั้น แตะ **ลงชื่อเข้าใช้** รอสักครู่เพื่อใช้นิน
- 2 หลังจากใช้นิน คุณจะสามารถใช้ Gmail และบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ
- 3 เมื่อคุณตั้งค่าแอดเดสส์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอดเดสส์ Google บนเว็บโดยอัตโนมัติ (ขึ้นอยู่กับวิธีการซิงโครไนซ์ของคุณ)

หลังจากไชน์อื่น คุณสามารถใช้ Gmail, Google Calendar, และ Android Market ดาวน์โหลดแอปพลิเคชันจาก Android Market สารรองการตั้งค่าของคุณไว้บนเซิร์ฟเวอร์ Google และใช้บริการอื่นๆ ของ Google บนโทรศัพท์ของคุณ

ข้อสำคัญ!




- บางแอปพลิเคชัน เช่น ปฏิทินจะสามารถทำงานได้กับแอคเคาท์ Google แรกที่คุณเพิ่มเท่านั้น หากคุณต้องการใช้มากกว่าหนึ่งแอคเคาท์ Google ในโทรศัพท์ของคุณ โปรดตรวจสอบให้แน่ใจว่าคุณไชน์อื่นด้วยแอคเคาท์ที่คุณต้องการใช้งานกับแอปพลิเคชันเหล่านี้ก่อนการใช้งาน เมื่อคุณไชน์อื่นแล้ว รายชื่อ, ขอความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากเว็บแอปพลิเคชันเหล่านี้และบริการต่างๆ จะซิงโครไนซ์กับโทรศัพท์ของคุณ


หากคุณไม่ได้ไชน์อื่นแอคเคาท์ Google ระหว่างการตั้งค่า คุณจะตองไชน์อื่นหรือสร้างแอคเคาท์ Google ในครั้งแรกที่คุณเริ่มต้นแอปพลิเคชันที่ต้องใช้ เช่น Gmail หรือ Android Market

- หากคุณต้องการใช้คุณสมบัติสารรองข้อมูลเพื่อเรียกคืนการตั้งค่าในโทรศัพท์เครื่องนี้จากโทรศัพท์เครื่องอื่นที่ใช้ Android OS หรือใหม่กว่า คุณตองไชน์อื่นแอคเคาท์ Google ในตอนนี้ระหว่างการตั้งค่า หากคุณรอให้การตั้งค่าเสร็จสมบูรณ์ การตั้งค่าจะไม่ถูกเรียกคืน
- หากคุณมีแอคเคาท์องค์กรของบริษัทหรือองค์กรอื่น แผนกไอทีของคุณอาจมีคำแนะนำพิเศษเกี่ยวกับวิธีไชน์อื่นแอคเคาท์

การโทร/รายชื่อ



การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขบนปุ่มกด ในการ
ลบตัวเลข ให้แตะไอคอน **ล้าง**
- 3 แตะที่ไอคอน **โทร**  เพื่อ
โทรออก
- 4 ในการวางสาย ให้แตะไอคอน
วางสาย 

เคล็ดลับ! ในการป้อน “+”
เพื่อโทรออกต่างประเทศ ให้กด
 ค้างไว้

เคล็ดลับ! ในการเปิดปุ่มกดขึ้น
ระหว่างการโทรออก ให้แตะ
ปุ่มหมุ่หมายเลข

โทรแบบสนทนาทางวิดีโอ

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโทรศัพท์
เหมือนเช่นเคย
- 3 แตะไอคอน **สนทนาทางวิดีโอ**
 เพื่อโทรสนทนาทางวิดีโอ

- 4 หากคุณไม่ต้องการใช้ลำโพง
ให้แตะ **ลำโพง** และตรวจสอบ
ให้แน่ใจว่าคุณได้เสียบชุดหูฟัง
แล้ว
- 5 ขณะเชื่อมต่อการสนทนาทาง
วิดีโอ คุณจะเห็นภาพของ
คุณเอง: หลังจากผู้รับรับสาย
แล้ว คุณจะเห็นภาพของผู้
รับบนหน้าจอ ปรับตำแหน่ง
กล้องภายในตามต้องการ
- 6 ในการวางสาย ให้แตะ
วางสาย

ส่วนตัว: คุณสามารถเปลี่ยน
ภาพอื่นแทนภาพส่วนตัวที่
แสดงอยู่ในปัจจุบัน

ปุ่มหมุ่หมายเลข: ป้อน
หมายเลข

พัก: ปิดเสียงไมโครโฟน
และหยุดภาพวิดีโอชั่วคราว


ปิดเสียง: ปิดเสียงไมโครโฟน

ลำโพง: เปิดหรือปิดลำโพง

ในเมนูสนทนาทางวิดีโอ

ถ่ายภาพ - คุณสามารถถ่ายภาพ
อีกฝ่ายหนึ่งหรือตัวคุณเองได้
ใช้กล้องด้านหลัง/ด้านหน้า
- สลับกล้องถ่ายรูป


การโทรออกโดยใช้รายชื่อ


- 1 แตะ  เพื่อเปิดรายชื่อของคุณ
- 2 เลื่อนดูรายชื่อหรือป้อนอักขระตัว
แรกของรายชื่อที่คุณต้องการ
โทรโดยแตะ **ค้นหา**
- 3 ในรายชื่อ ให้แตะรายชื่อที่คุณ
ต้องการโทรออก

การรับสายและการปฏิเสธ สายเรียกเขา



เคล็ดลับ! คำว่าหน้าจอโทรศัพท์ลง
หรือกดปุ่มระดับเสียง (ด้านข้าง)
เพื่อปิดเสียงสายเรียกเขา ต้องตั้งค่า
ทำทางการเคลื่อนไหวไวลูงหน้า
แตะ **แอปพลิเคชัน > ตั้งค่า >**
Gesture > ใช้การเดาทำทาง
> สายเรียกเขา > ทำเครื่องหมาย
ปิดเสียง

เมื่อลืตกหน้าจอ:

เมื่อโทรศัพท์ตั้งขึ้น
ให้ลากไอคอน **รับสาย** 
ไปทางขวา

ลากไอคอน **ปฏิเสธ**  ไปทาง
ซ้ายเพื่อปฏิเสธสายเรียกเขา

เมื่อไม่ได้ลืตกหน้าจอ:

เมื่อโทรศัพท์ตั้งขึ้น
ให้แตะไอคอน **รับสาย** 
แตะไอคอน
ปฏิเสธ  เพื่อปฏิเสธสาย
เรียกเขา

เคล็ดลับ! ขอความช่วยเหลือ




เมื่อคุณปฏิเสธสาย คุณสามารถส่ง
ขอความช่วยเหลืออย่างรวดเร็วโดยการลาก
ขอความช่วยเหลือ บนหน้าจอ ตัวเลือก
นี้จะเป็นประโยชน์ในกรณีที่คุณต้องการ
ตอบกลับขอความช่วยเหลือในระหว่างการประชุม

การปรับระดับเสียงสาย สนทนา

หากต้องการปรับระดับเสียง
ระหว่างการใช้อยู่ ให้ใช้ปุ่ม
ปรับระดับเสียงขึ้นและลงทาง
ด้านซ้ายของโทรศัพท์

การโทร/รายชื่อ

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **ปุ่มหมุนหมายเลข**  และหมายเลข นอกจากนี้ คุณสามารถค้นหาได้โดยแตะรายชื่อ  และเลือกหมายเลขที่คุณต้องการออก
- 2 แตะไอคอน **โทร**  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและปักสายไว้
- 4 แตะที่รายการค้างไว้เพื่อสลับสาย **หมายเหตุ:** คุณสามารถแตะ **รวมการโทร**  เพื่อทำการประชุมสายได้
- 5 ในการวางสายที่กำลังสนทนา ให้แตะ **ไอคอนวางสาย** 

การดูบันทึกการโทร

บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ

บันทึกการโทร

ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

เคล็ดลับ!

แตะที่รายการบันทึกการโทรรายการหนึ่งเพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ! แตะปุ่ม **เมนู** แล้วแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าการโทรได้ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
 - 2 เลื่อนลงแล้วแตะ **ตั้งค่า**
 - 3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ
- < กำหนดเบอร์โทรออก >
เลือก กำหนดเบอร์โทรออก เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจาก

โทรศัพท์ได้ คุณจะต้องใช้รหัส PIN 2 จากผู้ให้บริการด้วย เฉพาะหมายเลขในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

< ข้อความเสียง >

บริการข้อความเสียง – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ

ตั้งค่าข้อความเสียง – หากคุณใช้บริการข้อความเสียงของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขโทรศัพท์ที่ไขฟังและจัดการข้อความเสียงของคุณ

< ตั้งค่าการโทรอื่นๆ >

ปฏิเสธการรับสาย – ตั้งค่าเพื่อปฏิเสธสายในรายการ หรือทุกสาย หากคุณจะสร้างรายการปฏิเสธสาย ให้แตะ รายการปฏิเสธสาย > ปุ่ม เมนู > ปฏิเสธสายเข้ามาใหม่ แล้วสร้างรายการปฏิเสธใหม่จากรายชื่อ บันทึกการโทร หรือหมายเลขใหม่

การส่งต่อสาย – คุณสามารถกำหนดให้ส่งต่อสายเมื่อคุณใช้สาย ไม่รับสาย ฯลฯ

เพิ่มการตั้งค่า – ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

- **ข้อมูลผู้โทร:** เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่
- **สายเรียกซ้อน:** หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังใช้สาย (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

ป้องกันการโทร – เลือกเมื่อคุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

ค่าโทร – ดูค่าใช้จ่ายการโทรของคุณ (บริการนี้ขึ้นอยู่กับเครือข่าย: ผู้ให้บริการบางรายไม่รองรับฟังก์ชันนี้)

เวลาโทร – ดูระยะเวลาการ

การโทร/รายชื่อ

โทรทั้งหมด สายโทรออก
สายที่ได้รับ และการโทร
ครั้งล่าสุด


ขอความช่วยเหลือ – เมื่อคุณปฏิบัติ
เลขสาย คุณสามารถส่งข้อความ
ได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้
ตัวเลือกนี้จะเป็นประโยชน์ในกรณี
ที่คุณต้องการตอบกลับข้อความ
ในระหว่างการประชุม

ตั้งค่าสนทนาวิดีโอ – เปลี่ยน
การตั้งค่าการสนทนาทางวิดีโอ





รายชื่อ

คุณสามารถเพิ่มรายชื่อในโทร
ศัพท์และซิงโครไนซ์กับรายชื่อ
ในแอคเคาท์ Google หรือแอค
เคาท์อื่นที่สนับสนุนการซิงโคร
ไนซ์รายชื่อ

การค้นหารายชื่อ

- 1 บนหน้าจอหลัก ให้แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ ค้นหา และป้อนชื่อ
โดยใช้ปุ่มกด


การเพิ่มรายชื่อใหม่

- 1 บนหน้าจอหลัก ให้แตะ  และป้อนหมายเลขของรายชื่อใหม่ แล้วแตะปุ่ม  จากนั้นแตะ **เพิ่มในรายชื่อ** แล้วเลือก **สร้างรายชื่อใหม่** หรือ **เพิ่มในรายชื่อที่มีอยู่**
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะ 
- 3 เลือกระหว่าง **ถ่ายภาพ** หรือ **เลือกจากคลังภาพ**
- 4 เลือกเสียงเรียกเข้าโดยแตะ 
- 5 แตะฟิล์ดข้อความเพื่อเปิดแบบพิมพ์สัมผัสและป้อนชื่อของรายชื่อใหม่
- 6 แตะชนิดของข้อมูลรายชื่อและป้อนรายละเอียดของรายชื่อ
- 7 แตะ **บันทึก** เพื่อบันทึกรายชื่อ


เพื่อนสนิท

คุณสามารถกำหนดรายชื่อที่โทรหาบ่อยเป็นเพื่อนสนิทได้

การเพิ่มรายชื่อในเพื่อนสนิท:

- 1** บนหน้าจอหลัก ให้แตะ  เพื่อเปิดรายชื่อ
- 2** แตะที่รายชื่อเพื่อดูรายละเอียด
- 3** แตะที่ดาวทางด้านขวาของชื่อดาวจะเปลี่ยนเป็นสีทอง

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท:



- 1** บนหน้าจอหลัก ให้แตะ  เพื่อเปิดรายชื่อ
- 2** แตะแท็บ **กลุ่ม** แล้วเลือก **รายการโปรด** แตะที่รายชื่อเพื่อดูรายละเอียด
- 3** แตะที่ดาวสีทองทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากเพื่อนสนิท

ข้อความ/อีเมล

ข้อความ

โทรศัพท์ LG-P920 ของคุณได้
ผสมผสาน SMS และ MMS
ไว้ในเมนูที่ใช้งานเพียงเมนูเดียว

การส่งข้อความ

- 1 แตะไอคอน  บนหน้าจอหลักเพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขโทรออกในฟิลด์ **ถึง** ขณะที่คุณป้อนรายชื่อ รายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณสามารถเพิ่มรายชื่อหลายรายการได้
หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน
- 3 แตะ **ป้อนข้อความ** ด้านล่างเพื่อเริ่มต้นป้อนข้อความ
- 4 แตะ **ส่ง** เพื่อส่งข้อความ **เคล็ดลับ!** คุณสามารถแตะไอคอน  เพื่อแนบไฟล์ที่ต้องการส่งไปกับข้อความของคุณ

- 5 หน้าจอจะเปิดขึ้นพร้อมมีชื่อตามด้วยข้อความการตอบกลับจะปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เรขรตข้อความจะถูกสร้างขึ้น

คำเตือน

การจำกัดตัวอักษรที่ 160 ตัวอักษร อาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

คำเตือน

หากมีการใส่รูปภาพ วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

หมายเหตุ: หากคุณได้รับข้อความ SMS ระหว่างการใช้สาย จะมีเสียงกริ่งแจ้งเตือนโทรศัพท์

การเปลี่ยนการตั้งค่า ขอความมัลติมีเดีย

การตั้งค่าขอความของโทรศัพท์ LG-P920 จะได้รับการกำหนดค่าไวล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งขอความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าเหล่านี้ได้โดยอิงตามความต้องการของคุณ

แตะไอคอน **ขอความ** บนหน้าจอหลัก จากนั้นแตะปุ่ม **เมนู** และ **แตะ** **ตั้งค่า**

การตั้งค่าอีเมล

แตะแท็บ **แอปพลิเคชัน** และเลือก **อีเมล** หากยังไม่ได้ตั้งค่าแอคเคาท์อีเมล คุณต้องเริ่มวิธีการการตั้งค่าอีเมล

เคล็ดลับ! หากได้ตั้งค่าแอคเคาท์อีเมลไว้แล้ว วิธีการจะไม่เปิดใช้อัตโนมัติ

คุณสามารถเลือกประเภทเมลบ็อกซ์ **MS Exchange** หรืออื่นๆ ก็ได้

แอคเคาท์อีเมล Microsoft Exchange

อีเมลแอดเดรส – ป้อนอีเมลแอดเดรสของแอคเคาท์

ชื่อผู้ใช้ – ป้อนชื่อผู้ใช้แอคเคาท์

รหัสผ่าน – ป้อนรหัสผ่านของแอคเคาท์

โดเมน – ป้อนโดเมนของแอคเคาท์ (เลือกได้)

แอดเดรสเซิร์ฟเวอร์ – ป้อนแอดเดรสเซิร์ฟเวอร์

ใช้ SSL – เลือกว่าจะใช้ SSL หรือไม่ SSL สำหรับ Microsoft Exchange หรือไม่

แตะปุ่ม **ถัดไป** เพื่อเชื่อมต่อกับเซิร์ฟเวอร์

หน้าการตั้งค่าเสร็จสมบูรณ์จะปรากฏขึ้น: คุณจะต้องป้อน "ชื่อ" สำหรับชื่อที่แสดงแอคเคาท์และชื่อฉัน

แอคเคาท์ดังกล่าวจะแสดงอยู่ในรายการของแอคเคาท์ในโฟลเดอร์อีเมลของคุณในขณะนี้

ข้อความ/อีเมล

แอคเคาท์อีเมล (POP3, IMAP) อื่น

อีเมลแอคเดรส – ป้อนอีเมลแอคเดรสของแอคเคาท์

รหัสผ่าน – ป้อนรหัสผ่านของแอคเคาท์

หน้าการตั้งค่าเสร็จสมบูรณ์จะปรากฏขึ้นและคุณจะต้องป้อน "ชื่อ" แอคเคาท์ดังกล่าวจะแสดงอยู่ในรายการของแอคเคาท์ในไฟล์เดอรัอีเมลของคุณในขณะนี้

POP3 / IMAP4 – เลือกประเภทโปรโตคอล, POP3 หรือ IMAP4

เซิร์ฟเวอร์ขาเข้า – ป้อนแอคเดรสเซิร์ฟเวอร์อีเมลขาเข้า

ประเภทการป้องกัน – TLS/SSL/ปิด

หมายเลขพอร์ต – ตามปกติจะแสดงหมายเลขเริ่มต้นของแต่ละแอคเคาท์

เซิร์ฟเวอร์ขาออก – ป้อนแอคเดรสเซิร์ฟเวอร์อีเมลขาออก

ประเภทการป้องกัน SMTP – TLS/SSL/ปิด

หมายเลขพอร์ต – ตามปกติจะแสดงหมายเลขเริ่มต้นของแต่ละแอคเคาท์

หน้าจอแอคเคาท์

หน้าจอ แอคเคาท์ จะแสดงรายการ **ถอดเข้ารวม** และแอคเคาท์อีเมลแต่ละแอคเคาท์ของคุณ

- **แตะแท็บ แอปพลิเคชัน** แล้วเลือก **อีเมล** หน้าจอ **รายการแอคเคาท์** จะปรากฏขึ้น

เคล็ดลับ! ในรายการแอคเคาท์แตะแอคเคาท์อีเมลให้แรงขึ้นเพื่อย้ายไอคอนแอคเคาท์ไปที่หน้าจอหลักแตะไอคอนเพื่อตรงไปที่ถอดเข้า

คุณสามารถแตะที่แอคเคาท์เพื่อดู **ถอดเข้ารวม** ได้ แอคเคาท์ที่คุณใช้สำหรับส่งอีเมลตามค่าเริ่มต้นจะมีเครื่องหมายถูก

การเปิดถอดเข้ารวม:

หากคุณกำหนดค่าให้มีแอคเคาท์

ที่ใช้สำหรับส่งและรับอีเมลมากกว่าหนึ่งแอดเดสส์ คุณสามารถดูข้อความทั้งหมดที่ส่งไปยังแอดเดสส์ต่างๆ ได้ใน **สมุดรายชื่อ** ของคุณ

1 แตะ **อีเมล**

2 แตะ **สมุดรายชื่อ** (ในหน้าจอ **แอดเดสส์**) ขอบความใน **สมุดรายชื่อ** จะมีรหัสสีแสดงอยู่ทางด้านซ้าย แบ่งตามแอดเดสส์ โดยสีที่ใช้จะเป็นสีเดียวกับที่ใช้กับแอดเดสส์ในหน้าจอ **แอดเดสส์**

การเขียนและส่งอีเมล


การเขียนและส่งข้อความ:

- 1** ในแอปพลิเคชัน **อีเมล** ให้แตะปุ่ม **เมนู** และแตะ **เขียนข้อความ**
- 2** ป้อนแอดเดสส์ของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษร แอดเดสส์ที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น คั่นแอดเดสส์แต่ละแอดเดสส์ด้วยเครื่องหมายจุลภาค

3 แตะปุ่ม **เมนู** แล้วแตะ **เพิ่ม Cc/Bcc** เพื่อคัดลอก หรือช่องทางการคัดลอกไปยังรายชื่อ/อีเมลแอดเดสส์อื่น

4 ป้อนตัวอักษรในข้อความ

5 แตะ **แนบ** เพื่อแนบไฟล์ที่คุณต้องการส่งพร้อมข้อความของคุณ

6 แตะ **ส่ง** หากคุณยังไม่พร้อมที่จะส่งข้อความ ให้แตะปุ่ม **เมนู** และแตะ **บันทึกเป็นร่าง** เพื่อบันทึกข้อความในโฟลเดอร์ **ร่าง** แตะข้อความในโฟลเดอร์ **ร่าง** เพื่อจัดการกับข้อความต่อ ข้อความของคุณจะถูกบันทึกเป็นร่างเช่นกัน หากคุณแตะปุ่ม **กลับ**  ก่อนทำการส่งข้อความ แตะ **ยกเลิก** เพื่อยกเลิกและลบข้อความ รวมทั้งร่างที่บันทึกไว้ด้วย หากคุณไม่ได้เชื่อมต่อกับเครือข่าย ตัวอย่างเช่น หากคุณกำลังเปิดใช้งานโหมดเครื่องบิน ข้อความที่คุณส่งจะถูกเก็บในโฟลเดอร์ **สมุดออก** จนกว่าจะเชื่อมต่อ

ข้อความ/อีเมล

กับเครือข่าย หากมีข้อความ
ที่กำลังรอส่งอยู่ **กดออก**
จะแสดงขึ้นบนหน้าจอ
แอดเดสส์

โปรดทราบว่าข้อความที่ส่งโดย
ใช้แอดเดสส์ Exchange จะไม่
จัดเก็บในโทรศัพท์: ข้อความ
จะถูกจัดเก็บไว้ที่เซิร์ฟเวอร์
Exchange หากคุณต้องการดูข้อ
ความที่ส่งในโฟลเดอร์ **ส่งแล้ว**
(หรือข้อความที่มีป้าย **ส่งแล้ว**)
คุณจะต้องเปิดโฟลเดอร์/ป้าย
ส่งแล้ว และเลือก **รีเฟรช** จาก
เมนูตัวเลือก

เคล็ดลับ! เมื่อกดเข้ามีอีเมลใหม่
คุณจะได้รับแจ้งด้วยเสียงพร้อมการ
สั่น และที่การแจ้งอีเมลเพื่อปิด

การทำงานกับโฟลเดอร์ แอดเดสส์

แต่ละแอดเดสส์ประกอบด้วย
โฟลเดอร์กดเข้า กดออก
ส่งแล้ว ราง ถึงขยะ และขยะ
ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอก
เหนือจากนี้ ขึ้นอยู่กับคุณสมบัติ

ที่ผู้ให้บริการแอดเดสส์ของคุณ
สนับสนุน

การเพิ่มและการแก้ไข แอดเดสส์อีเมล

การเพิ่มแอดเดสส์อีเมล:

- 1 **แตะแท็บ แอปพลิเคชัน** และ
เลือก **อีเมล**
- 2 เลือก **MS Exchange** หรือ
อื่นๆ หากได้ตั้งค่าแอดเดสส์
อีเมลไว้แล้ว วิชาการจะไม่เปิด
ใช้อัตโนมัติ ในกรณีนี้ คุณต้อง
แตะปุ่ม **เมนู** แล้วแตะ
เพิ่มแอดเดสส์

การเปลี่ยนการตั้งค่าแอด เดสส์:

- 1 **เปิดหน้าจอ แอดเดสส์**
- 2 **แตะปุ่ม เมนู** และเลือก **ตั้งค่า**

การลบแอดเดสส์อีเมล:

- 1 **เปิดหน้าจอ แอดเดสส์**
- 2 **แตะค้างแอดเดสส์ที่ต้องการลบ**
- 3 **แตะ นำบัญชีออก** ในเมนูที่
เปิด และแตะ **ตกลง** ในกล่อง
โต้ตอบเพื่อยืนยัน

เคล็ดลับ!

What's New

แสดงการแจ้งเตือนสายที่ไม่ได้รับ, ขอบความที่ยังไม่ได้อ่าน, ขอบความเสี่ยง, อีเมล, Twitter ตามลำดับความสำคัญ โดยจะแสดงการแจ้งเตือนรายการเหล่านี้ในระยะเวลาหนึ่ง

1 เลือก แอปพลิเคชัน >

What's New



2 โดยการแตะปุ่ม  คุณจะ
สามารถเลือกไต่ระหว่างมุมมอง
รายการและมุมมองประเภท

เครือข่ายสังคม

คุณสามารถใช้โทรศัพท์สำหรับเครือข่ายสังคม และเพื่อจัดไมโครบล็อกของคุณในชุมชนออนไลน์ คุณสามารถอัปเดตสถานะปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้ หากคุณไม่มีแอคเคาท์ คุณสามารถไปที่เว็บไซต์เพื่อสร้างแอคเคาท์ได้



หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ

- 1 แตะหน้าจอหลักค้างไว้ เมื่อมี Widget ต่างๆ ปรากฏขึ้น ให้เลือก **Social+**  และแตะ  **ปุ่มตั้งค่า** คุณยังสามารถแก้ไขได้ด้วยวิธีอื่น บนหน้าจอหลัก เลือกตั้งค่า แอปพลิเคชัน > ตั้งค่า > บัญชีและการซิงค์ > ตั้งค่า Social+

- 2 เลือกแอปพลิเคชันเครือข่ายสังคมที่คุณต้องการใช้จาก Facebook, Twitter และ MySpace
- 3 ป้อนอีเมลแอดเดรสและรหัสผ่านชุมชนของคุณ จากนั้นแตะ **Log In**
- 4 โปรดรอสักครู่ขณะกำลังยืนยันรายละเอียดของคุณกับชุมชนของคุณ
- 5 หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

การดูและอัปเดตสถานะของคุณ

- 1 คุณสามารถดูและอัปเดตเนื้อหาชุมชนได้โดยใช้ Widget **Social+**  ได้ทุกเมื่อ
- 2 บน Widget **Social+**  เลือกบริการเครือข่ายสังคมที่คุณล็อกอิน แล้วคุณจะได้เห็นสถานะและเนื้อหาของคุณ
- 3 เมื่อคุณแตะที่ช่องป้อนข้อความ จะสลับหน้าจอเพื่ออัปเดต

สถานะปัจจุบันพร้อมความเห็น
หรือเพื่ออัปโหลดรูปถ่าย

เคล็ดลับ! คุณสามารถอัปเดต
สถานะของคุณพร้อมกันได้
โดยทำเครื่องหมายบริการ SNS
ที่คุณต้องการอัปโหลดจาก
Facebook, Twitter และ
MySpace

หมายเหตุ: การดำเนินการนี้ขึ้น
อยู่กับบริการเครือข่าย

เคล็ดลับ! คุณสามารถใช้ข้อมูล
เกี่ยวกับเพื่อนได้โซเชียลเครือข่าย
สังคมเท่านั้น หรือซิงโครไนซ์
ข้อมูลทั้งหมดกับรายชื่อ

การลบแอคเคาท์ออกจาก โทรศัพท์ของคุณ

- 1 เลือก แอปพลิเคชัน >
ตั้งค่า > แอคเคาท์และ
การซิงค์
- 2 เลือกแอคเคาท์ที่คุณต้องการ
ลบ แล้วแตะ **ลบแอคเคาท์**

Facebook และ Twitter

- 1 บนหน้าจอหลัก ให้แตะแท็บ
แอปพลิเคชัน 
เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลือกแอปพลิเคชันเครือข่าย
สังคมที่คุณต้องการใช้ระหว่าง
Facebook และ Twitter
- 3 บ่อนอีเมลแอคเดรสและรหัส
ผ่านที่คุณตั้งค่าบนชุมชน
ของคุณ แล้วแตะ Log In
- 4 โปรดรอซีกครู่ กำลังตรวจสอบ
รายละเอียดของคุณกับชุมชน
ของคุณ
- 5 หากคุณแตะชุมชนของคุณ
คุณสามารถดูสถานะปัจจุบัน
ของชุมชนได้

รูปภาพและวิดีโอ

ทำความรู้จักกับช่องมองภาพ (กล้องถ่ายรูป)

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้

สลับกล้องถ่ายรูป - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้



การเปลี่ยนระหว่างโหมด 2D - 3D - และเพื่อสลับโหมดถ่ายภาพระหว่าง 2D และ 3D

การถ่ายภาพ

โหมดวิดีโอ - เลื่อนไอคอนนี้ไปทางขวาเพื่อสลับเป็นโหมดวิดีโอ

คลังภาพ - และรูปภาพล่าสุดที่เพิ่งถ่ายเพื่อดู คุณสามารถเขาดคลังภาพและดูภาพถ่ายที่บันทึกไว้ภายในโหมดกล้องถ่ายรูป


ตั้งค่า - แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่การใช้งานตั้งค่าขั้นสูง

แฟลช - ให้คุณเปิดแฟลชเมื่อถ่ายภาพในที่มืด

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของภาพ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง

เคล็ดลับ! คุณสามารถปิดตัวเลือกปุ่มลัดเพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกคืนตัวเลือก ให้แตะที่หน้าจออีกครั้ง

การถ่ายภาพอย่างรวดเร็ว

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 ถูโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 แตะไอคอนชัตเตอร์ 
- 4 กล้องจะจับโฟกัสที่ภาพ เมื่อภาพอยู่ในโฟกัสแล้ว ตัวบ่งชี้แต่ละมุมจะเปลี่ยนเป็นสีเขียว และกล้องจะถ่ายภาพ

หมายเหตุ: ปัญหาภาพขบมิด อาจเกิดขึ้นได้เมื่อคุณถ่ายภาพภายในอาคารเนื่องจากลักษณะเฉพาะตัวของกล้องถ่ายรูป (ขบมิดคือ ความแตกต่างของสีระหว่างบริเวณกึ่งกลางและขอบ)

เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ

แบ่งปัน แตะเพื่อแบ่งปันภาพถ่ายของคุณทาง บลูทูธ, Facebook, Social+, Twitter, Picasa, ข้อความ,

Gmail หรือ อีเมล

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

เคล็ดลับ! หากคุณมีแอคเคาท์ของ ไซโตเครือข่ายสังคม และตั้งค่าบนโทรศัพท์ คุณสามารถแบ่งปันภาพถ่ายของคุณกับชุมชนของคุณได้

ตั้งเป็น แตะเพื่อใช้ภาพเป็น ไอคอนรายชื่อ หรือ พื้นหลัง

แก้ไข แตะเพื่อแก้ไขชื่อของภาพที่เลือก

แก้ไข แตะเพื่อแก้ไขภาพถ่ายที่คุณถ่าย



แตะเพื่อลบภาพ



แตะเพื่อถ่ายภาพอื่นทันที



แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย

รูปภาพและวิดีโอ

การใช้การตั้งค่าขั้นสูง (กล่องถ่ายรูป)

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

คุณสามารถเปลี่ยนการตั้งค่ากล่องถ่ายรูปได้โดยเลื่อนปุ่มหมุน

หลังจากเลือกตัวเลือก ให้แตะปุ่ม **กลับ**

โฟกัส – เลือกตัวเลือกโฟกัสจาก **อัตโนมัติ**, **มาโคร**, **AF ต่อเนื่อง** และ **การติดตามหน้า**

ขนาดภาพ – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของภาพที่ถ่าย

โหมดถ่ายภาพ – เลือกระหว่าง **อัตโนมัติ**, **รูปคน**, **ทิวทัศน์**, **พระอาทิตย์ตก** และ **กลางคืน**

สมดุลแสง – เลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มิดครีม**

เอฟเฟกต์สี – เลือกโทนสีสำหรับภาพถ่ายใหม่เลือกระหว่าง **ไม่มี**, **สีซีเปีย**, **โมโน**, **เนกาทีฟ**, **สดใส** และ **โซลาไลซ์**

ตัวตั้งเวลา – ตัวตั้งเวลาให้คุณสามารถตั้งช่วงเวลาหน่วงก่อนถ่ายภาพหลังจากที่กดชัตเตอร์แล้ว

โหมดชัต – เลือกโหมดการถ่ายจาก **ปกติ** หรือ **ชัตต่อเนื่อง**

คุณภาพ – เลือกระหว่าง **ละเอียดมาก**, **ละเอียด** และ **ปกติ** คุณภาพที่ละเอียดมากขึ้นเท่าใด ความคมชัดของภาพถ่ายก็มากขึ้นเท่านั้น อย่างไรก็ตาม ไฟล์จะมีขนาดใหญ่ขึ้น กล่าวคือคุณสามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

รีวิวนำอัตโนมัติ – หากคุณตั้งค่าเปิด **รีวิวนำอัตโนมัติ** ภาพที่คุณถ่ายล่าสุดจะแสดงขึ้นโดยอัตโนมัติ

เสียงชัตเตอร์ – เลือกเสียงชัตเตอร์เสียงใดเสียงหนึ่งจากสี่เสียง

แท็กตำแหน่ง – เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการ และแท็กรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แท็กไปยังบล็อกที่สนับสนุนแท็กตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่หมายเหตุ ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานบริการตำแหน่งเท่านั้น

ที่เก็บ – เลือกรูด SD ภายใน หรือ รูด SD ภายนอก เพื่อบันทึกภาพ

- 📌 เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป
- ❓ **แต่ที่นี่** หากคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร วิธีต่อไปนี้จะให้คำแนะนำอย่างย่อกับคุณ


เคล็ดลับ!

เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น ตรวจสอบการตั้งค่ากล้องถ่ายรูปก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ!

เมนูการตั้งค่าซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนคุณสมบัติสีหรือคุณภาพของภาพ คุณจะเห็นการเปลี่ยนแปลงในภาพตัวอย่างด้านหลังเมนูการตั้งค่า

การดูรูปภาพที่บันทึกไว้

1 คุณสามารถเข้าดูรูปภาพที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูปได้ เพียงแตะ  และคลังภาพของคุณจะปรากฏบนหน้าจอ แต่ภาพบนหน้าจอ แล้วคุณจะได้เห็น **ภาพสไลด์** และ **เมนู**



แตะเพื่อดูภาพสไลด์ แต่ **เมนู** และเลือกตัวเลือกที่คุณต้องการ



แตะเพื่อแบ่งปันเนื้อหา

รูปภาพและวิดีโอ



แตะเพื่อลบภาพถ่าย



แตะ **อื่นๆ** เพื่อดูตัวเลือก
เพิ่มเติมด้านล่าง

รายละเอียด - ดูข้อมูลเพิ่มเติมเกี่ยวกับเนื้อหาเหล่านั้น

ตั้งเป็น - ตั้งเป็นไอคอนรายชื่อหรือภาพพื้นหลัง

ครีโอล - ครีโอลภาพของคุณ
เลื่อนนิ้วของคุณบนหน้าจอ
เพื่อเลือกพื้นที่


หมุน - หมุนไปทางซ้าย
หรือขวา

แก้ไข - แตะเพื่อแก้ไขภาพ
โดยใช้เครื่องมือต่างๆ

ทำความเข้าใจกับช่องมองภาพ (กล้องวิดีโอ)

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้

สลับกล้องถ่ายรูป - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้

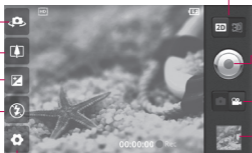

การเปลี่ยนระหว่างโหมด 2D - 3D - และเพื่อสลับโหมดถ่ายภาพระหว่าง 2D และ 3D

เริ่มการบันทึก

โหมดกล้องถ่ายรูป - เลื่อนไอคอนนี้ไปทางซ้ายเพื่อสลับเป็นโหมดกล้องถ่ายรูป

คลังภาพ - และเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเขาดูคลังภาพและดูวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ

ตั้งค่า - และไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้งานตั้งค่าขั้นสูง

แฟลช - ให้คุณเปิดแฟลชเมื่อถ่ายวิดีโอในที่มืด

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของภาพ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง

เคล็ดลับ! คุณสามารถปิดตัวเลือกปุ่มลัดเพื่อให้หน้าจช่องมองภาพโล่งขึ้นได้ เพียงแตะที่กึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการเรียกคืนตัวเลือก ให้แตะที่หน้าจ่อีกครั้ง

รูปภาพและวิดีโอ

การถ่ายวิดีโอ

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป และเลื่อนปุ่ม โหมดกล้องถ่ายรูปลงไปตำแหน่ง **วิดีโอ** ไอคอนขีดเตอร์  จะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล้องวิดีโอ จะปรากฏขึ้นบนหน้าจอ
- 3 ให้ถือโทรศัพท์ไว้ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 แตะไอคอนเริ่มบันทึกวิดีโอ 
- 5 REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะไอคอนหยุดบันทึกวิดีโอ  เพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ

ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ

เล่น

แตะเพื่อเล่นวิดีโอ

แบ่งปัน

แตะเพื่อแบ่งปันวิดีโอทาง **บลูทูธ, Facebook, อีเมล, Gmail, ข้อความ หรือ YouTube**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

แก้ไข

แตะเพื่อแก้ไขชื่อของวิดีโอที่เลือก



แตะเพื่อลบวิดีโอที่คุณถ่ายไว้และยืนยันโดยการแตะ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง




แตะเพื่อถ่ายภาพวิดีโออื่นต่อ



แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก

การใช้การตั้งค่าขั้นสูง (กล่องวิดีโอ)

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด
ปรับการตั้งค่ากล่องถายรูป
ได้โดยเลื่อนปุ่มหมุน หลังจาก
เลือกตัวเลือก ให้แตะปุ่ม **กลับ**
ขนาดวิดีโอ – แตะเพื่อตั้งค่า
ขนาด (พิกเซล) ของวิดีโอที่จะ
บันทึก ตั้งค่าขนาดภาพวิดีโอเป็น
1080P(1920x1080),
HD(1280x720),
D1(720x480), VGA(640x480),
QVGA(320x240) หรือ
QCIF(176x144)

ไวต์บาลานซ์ – สมดุลแสงจะ
ช่วยให้มั่นใจได้ว่าส่วนที่เป็นสี
ขาวที่ปรากฏในวิดีโอจะสวยสม
จริง เพื่อใหกล่องของคุณปรับ
ความสมดุลแสงได้อย่างถูกต้อง
คุณอาจจำเป็นต้องกำหนดสภาวะ
แสงก่อน เลือกระหว่าง
อัตโนมัติ, หลอดไฟ,
แสงอาทิตย์, ฟลูออเรสเซนต์
และ **มิดครีม**

เอฟเฟกต์สี – เลือกโทนสีเพื่อ
ใช้กับรูปภาพมุมมองใหม่
เลือกระหว่าง **ไม่มี, สีซีเปีย,**
โมโน, เนกาทีฟ, สดใส
และ **โซลาไลซ์**

คุณภาพของวิดีโอ - เลือก
ระหว่าง **ละเอียดมาก, ละเอียด**
และ **ปกติ**

ระยะเวลา - ตั้งระยะเวลาจำกัด
สำหรับวิดีโอ เลือกระหว่าง **ปกติ**
และ **MMS** เพื่อจำกัดขนาด
วิดีโอให้สามารถส่งเป็นข้อความ
MMS ได้

การบันทึกเสียง – เลือก
ปิดเสียง เพื่อบันทึกวิดีโอโดย
ไม่มีเสียง


รีวัตโนมัตติ – หากคุณตั้ง
ค่าไว้ที่ **เปิด** วิดีโอที่คุณบันทึก
ล่าสุดจะแสดงขึ้นโดยอัตโนมัติ

ที่เก็บ – เลือกระหว่าง **การ์ด**
SD ภายใน หรือ **การ์ด SD**
ภายนอก เพื่อบันทึกวิดีโอ

รูปภาพและวิดีโอ

- 📷 รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด
- ❓ และที่นี่หากคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไรวิธีต่อไปนี้จะให้คำแนะนำอย่างย่อกับคุณ

การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะ  ที่มุมขวาล่าง
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะที่วิดีโอหนึ่งครั้งเพื่อแสดงวิดีโอที่ด้านหน้าสุดของคลังภาพวิดีโอที่เลือกจะเริ่มเล่นอัตโนมัติ

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่นให้ไข่มุมปรับระดับเสียงที่ด้านซ้ายมือของหน้าจอ

รูปภาพและวิดีโอ 3D

ทำความเข้าใจกับช่องมองภาพ (กล้อง 3D)





- 1 สลับกล้องถ่ายรูป - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้
- 2 โฟกัส 3D - คุณสามารถปรับแต่งโฟกัส 3D ด้วยตัวเองได้ โดยการปรับการซ้อนทับด้วยแถบที่ปรากฏอยู่ด้านล่างก่อนการเริ่มต้นถ่ายภาพ 3D คุณสามารถใช้ฟังก์ชันนี้ได้
- 3 ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ เลื่อนตัววงชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของวิดีโอ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง

- 4 **แฟลช** - ให้คุณเปิดแฟลชเมื่อถ่ายวิดีโอในที่มืด
- 5 **ตั้งค่า** -แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้งานตั้งค่าขั้นสูง


3D focus mode -

เลือกตัวเลือกโฟกัส 3D แบบอัตโนมัติจากขอบ, ศูนย์ ขอบ จะใช้พื้นที่ขอบเพื่อการขยายการซ่อนทับ ศูนย์ จะใช้พื้นที่ศูนย์กลาง คุณยังสามารถปรับด้วยตนเองได้โดยใช้ฟังก์ชันโฟกัส 3D ของช่องมองภาพ

การถ่ายภาพ 3D

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 แตะปุ่ม 3D  เพื่อกลับไปช่องมองภาพ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 4 แตะไอคอนชัตเตอร์ 
- 5 กล้องจะจับโฟกัสที่ภาพเมื่อภาพอยู่ในโฟกัสแล้ว ตัวบ่งชี้แต่ละมุมจะเปลี่ยนเป็นสีเขียวและกล้องจะถ่ายภาพ

ทำความรู้จักกับช่องมองภาพ (กล้องวิดีโอ 3D)

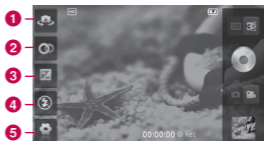

- 1 **สลับกล้องถ่ายรูป** - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้
- 2 **โฟกัส 3D** - คุณสามารถปรับแต่งโฟกัส 3D ด้วยตัวเองได้ โดยการปรับการซ่อนทับด้วยแถบที่ปรากฏอยู่ด้านล่าง ก่อนการเริ่มต้นถ่ายวิดีโอ 3D คุณสามารถใช้ฟังก์ชันนี้ได้ คุณไม่สามารถปรับฟังก์ชันนี้ในขณะที่ทำการบันทึกได้
- 3 **ความสว่าง** - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของวิดีโอ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง




รูปภาพและวิดีโอ

- 4 **แฟลช** – ให้คุณเปิดแฟลชเมื่อถ่ายวิดีโอในที่มืด
- 5 **ตั้งค่า** - แต่ละไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้การตั้งค่าขั้นสูง


3D focus mode - เลือกตัวเลือกโฟกัส 3D แบบอัตโนมัติจากขอบศูนย์ -ขอบ จะใช้พื้นที่ขอบเพื่อการขยายการซ่อนทับ-ศูนย์ จะใช้พื้นที่ศูนย์กลาง คุณยังสามารถปรับด้วยตนเองได้โดยใช้ฟังก์ชันโฟกัส 3D ของช่องมองภาพ


Stabilization – ตั้งค่าเป็นเปิด เพื่อช่วยในการถ่ายภาพในกรณีที่มีมือไม่นิ่ง

การถ่ายวิดีโอ 3D ด้วย

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป และเลื่อนปุ่มโหมดกล้องถ่ายรูปลงไปตำแหน่ง วิดีโอ ไอคอนชัตเตอร์  จะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล้องวิดีโอ จะปรากฏขึ้นบนหน้าจอ: แต่ละปุ่ม 3D 


3 ให้ถือโทรศัพท์ในมุมมองแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ

4 แต่ละไอคอนเริ่มต้นที่วิดีโอ  REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ

5 แต่ละไอคอนหยุดบันทึกวิดีโอ  เพื่อหยุดการบันทึก

- หมายเหตุ
- โหมดกล้อง 3D ใช้ได้เฉพาะกับมุมมองแนวนอนเท่านั้น
 - รักษาระยะระหว่างกล้องและวัตถุให้มากกว่า 0.5 ม.
 - เพื่อรับชมเนื้อหา 3D ได้อย่างสมบูรณ์แบบที่ดีที่สุดให้ถืออุปกรณ์ห่างจากตาของคุณ 30~40 ซม.

3D ช่องว่าง

กดปุ่ม 3D ที่ด้านขวาของโทรศัพท์ค้างไว้เพื่อเข้าใช้  เมนู 3D ซึ่งจะแสดงเนื้อหา 3D เช่น YouTube 3D, คลังภาพ 3D, กล้อง 3D และ คู่มือ 3D



YouTube 3D

- 1.แตะ YouTube 3D เพื่อเริ่มเมื่อหน้าจอสลับไปเป็นเว็บ YouTube 3D วิดีโอ 3D ต่างๆ จะปรากฏขึ้น
- 2.เลือกวิดีโอที่คุณต้องการดู วิดีโอจะปรากฏในรูปแบบต่อเนื่องในโหมดแนวตั้ง
- 3.หมุนเป็นแนวนอน แล้วโหมด 3D จะเปิดขึ้นโดยอัตโนมัติ



คลังภาพ 3D


- 1.แตะ  คลังภาพ 3D ภาพ 3D จะแสดงเป็นรายการ
- 2.เลือกภาพที่คุณต้องการดู

หมายเหตุ

- เนื้อหา 3D เหมาะสำหรับมารับชมด้วยจอภาพที่อยู่ด้านหน้าของคุณในระยะ 30~40 ซม.



กล้อง 3D

- 1.แตะ  กล้อง 3D และหน้าจอลจะเปลี่ยนไปเป็นโหมดกล้อง 3D ในการสร้างรูปถ่าย 3D และการบันทึก 3D โปรดดูที่รูปภาพและวิดีโอ 3D ในหน้าก่อนหน้า



3D เกมส์&แอปฯ

- 1.แตะ  3D เกมส์&แอปฯ แล้วเกมส์และแอปพลิเคชัน 3D ที่คุณดาวน์โหลดมาจาก Market จะปรากฏขึ้น แอปพลิเคชันสื่รายการ เช่น Asphalt6, Let's Golf2, Nova, Gulliver's Travels จะให้มาตามค่าเริ่มต้น

3D ช่องว่าง

คู่มือ 3D

คู่มือ 3D มีคำแนะนำที่ช่วยให้ใช้งานเนื้อหา 3D ด้วยโทรศัพท์ได้ง่ายขึ้น ซึ่งจะแนะนำวิธีสร้างภาพ 3D, เชื่อมต่อกับทีวี 3D ผ่านทาง HDMI, ดูเนื้อหา 3D และการแบ่งปัน

มัลติมีเดีย

คลังภาพ

คุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำภายนอกได้เช่นกัน ประโยชน์ของการใช้การ์ดหน่วยความจำ คือ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำของโทรศัพท์

แตะ **แอปพลิเคชัน** แล้วเลือก **คลังภาพ**

1 แตะภาพบนหน้าจอ แล้วคุณจะได้เห็น **ภาพสไลด์** และ **เมนู**



แตะเพื่อดูภาพสไลด์ **แตะเมนู** และเลือกตัวเลือกที่คุณต้องการ



แตะเพื่อเลือกตัวเลือกที่คุณต้องการ



แตะเพื่อแบ่งปันเนื้อหา



แตะเพื่อลบภาพถ่าย



แตะ **อื่นๆ** เพื่อดูตัวเลือกเพิ่มเติมด้านล่าง

รายละเอียด - ดูข้อมูลเพิ่มเติมเกี่ยวกับเนื้อหาเหล่านั้น

ตั้งเป็น - ตั้งเป็นไอคอนรายชื่อหรือภาพพื้นหลัง

ครีโอล - ครีโอลภาพของคุณเลื่อนนิ้วของคุณบนหน้าจอเพื่อเลือกพื้นที่

หมุน - หมุนไปทางซ้ายหรือขวา

แก้ไข - แตะเพื่อแก้ไขภาพโดยใช้เครื่องมือต่างๆ

ในการดูเนื้อหา 3D

1 ให้เลือกภาพที่คุณต้องการดู

2 หมุนเป็นแนวนอน แล้วโหมด 3D จะเปิดขึ้น

3 สำหรับข้อมูลเพิ่มเติมโปรดดูที่ คู่มือ 3D

หมายเหตุ: สามารถแปลงส่วนของไฟล์ภาพจาก 2D เป็น 3D ได้

เพลง

โทรศัพท์ LG-P920 มีเครื่องเล่นภายในตัวที่ทำให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **เพลง**

มัลติมีเดีย

การเล่นเพลง

- 1 บนหน้าจอหลัก และแท็บ แอปพลิเคชัน และเลือก เพลง
- 2 และ เพลง
- 3 เลือกเพลงที่คุณต้องการเล่น
- 4 และ  เพื่อหยุดเล่นเพลงชั่วคราว
- 5 และ  เพื่อข้ามไปที่เพลงถัดไป
- 6 และ  เพื่อย้อนไปยังช่วงเริ่มต้นของเพลงนั้น และ  สองครั้งเพื่อย้อนไปที่เพลงก่อนหน้านี้

หากต้องการปรับระดับเสียงในขณะที่ฟังเพลง ให้ใช้นิ้วปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์

แต่ละเพลงหนึ่งในรายการเพลงค้างไว้ หน้าจอจะแสดงตัวเลือกเล่น, เพิ่มในรายการเพลง, ใช้เป็นเสียงเรียกเข้า, ลบ และแบ่งปัน

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลง จะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ

ดังนั้น คุณอาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ โปรดตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่ายไร้สายอุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้

การเปิด SmartShare และอนุญาตให้แบ่งปันเนื้อหา

- 1 และแท็บ แอปพลิเคชัน  และเลือก **SmartShare**


- 2 กดปุ่ม **เมนู** และเลือก **ตั้งค่า**
- 3 **แตะ**ช่องทำเครื่องหมายค้นหาได้ เพื่อเปิด
- 4 **แตะ** **รับค่าขอเสนอ** หากคุณต้องการยอมรับค่าขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
- 5 **แตะ** **รับไฟล์** หากคุณต้องการอนุญาตให้อุปกรณ์อื่นอัปโหลดไฟล์ไปยังโทรศัพท์ของคุณได้โดยอัตโนมัติ
- 6 ในส่วนแบ่งปันคอนเทนต์ ให้ **แตะ**เพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปันเลือกจากรูปภาพ, วิดีโอ และ เพลง
- 7 **SmartShare** เปิดใช้งานแล้ว และพร้อมแบ่งปันเนื้อหา

การแบ่งปันเนื้อหาจากไลบรารีเนื้อหาระยะไกลกับอุปกรณ์อื่น

ให้อุปกรณ์แสดงผลของคุณ (เช่นทีวี) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหาระยะไกลของคุณ (เช่น คอมพิวเตอร์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA

ในอุปกรณ์ของคุณ (เช่น ทีวีและคอมพิวเตอร์) อย่างถูกต้องแล้ว

- 1 **แตะ**แท็บ **แอปพลิเคชัน**  และเลือก **SmartShare**
- 2 **แตะ**ปุ่มบนขวาหรือเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
- 3 **แตะ**ปุ่มบนซ้ายและเลือกอุปกรณ์ของเนื้อหาระยะไกล
- 4 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 5 **แตะ**ภาพขนาดเล็กของเนื้อหาหรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**

การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่น ทีวี)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

- 1 ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน คลังภาพ ให้ **แตะ**ค้างไว้เพื่อเลือกหลายไฟล์จากนั้นคุณสามารถเลือกไฟล์หลายไฟล์เพื่อแบ่งปันได้

มัลติมีเดีย

2 แตะแบ่งปันบนเมนู และเลือก **SmartShare**

3 SmartShare จะเริ่มทำงาน โดยอัตโนมัติด้วยไฟล์ที่เลือก

4 เลือกอุปกรณ์จากรายการ อุปกรณ์แสดงผลเพื่อเล่นไฟล์

หมายเหตุ: ทำตามขั้นตอน คล้ายกันนี้เพื่อใช้เครื่องเล่นเพลง เพื่อแบ่งปันเนื้อหา

โปรดทราบ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้ อุปกรณ์ DLNA บางประเภท(เช่นทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาาระยะไกล

1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**

2 แตะปุ่มบนซ้ายและเลือก

อุปกรณ์ของไลบรารีเนื้อหา ระยะไกล

3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้

4 แตะภาพขนาดเล็กของเนื้อหาแล้วแตะปุ่มเมนูดาวน์โหลด

หมายเหตุ: ไม่สนับสนุนเนื้อหาบางประเภท

การอัปโหลดเนื้อหาจากโทรศัพท์ของฉันไปยังไลบรารีเนื้อหาาระยะไกล

หมายเหตุ: ตรวจสอบว่าใส่การ์ด SD ถูกต้อง และเลือกรับไฟล์ในเมนูตั้งค่าแล้ว

1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**

2 แตะปุ่มบนซ้ายและเลือก โทรศัพท์ของฉัน

3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้

4 แตะภาพขนาดเล็กของเนื้อหา ค้างไว้ แล้วแตะปุ่มเมนูอัปโหลด

5 เลือกอุปกรณ์ของไลบรารีเนื้อหา ระยะไกลที่จะอัปโหลด

หมายเหตุ: อุปกรณ์ที่ใช้ DLNA บางประเภทไม่สนับสนุนฟังก์ชันอัปโหลด DMS และจะไม่มีการอัปโหลดไม่สนับสนุนเนื้อหาบางประเภท

การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล USB

ในการโอนไฟล์โดยใช้อุปกรณ์ USB:

- 1 เชื่อมต่อโทรศัพท์ LG-P920 กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณ คุณต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เลือก **ตั้งค่า > ความจำการต SD และ เครื่อง > ที่เก็บข้อมูลเท่านั้น** และเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สาย USB
- 3 **แตะ** **เปิดที่เก็บข้อมูล USB**
- 4 คุณสามารถดูเนื้อหาของที่จัด

เก็บข้อมูลบนคอมพิวเตอร์ของคุณและโอนไฟล์ได้

หมายเหตุ: คุณจะตองติดตั้งการ์ด microSD ก่อน หากไม่มีการ์ด microSD คุณจะไม่สามารถใช้ที่เก็บข้อมูล USB ได้

วิธีบันทึกไฟล์เพลง/วิดีโอในโทรศัพท์

- 1 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สาย USB
 - **แตะและลากแถบสถานะ**ในหน้าจอหลักลงเลือก **เชื่อมต่อ USB แล้ว > เปิดใช้ที่เก็บข้อมูล USB > เปิดโฟลเดอร์เพื่อดูไฟล์**
 - หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณ คุณต้องตั้งค่าด้วยตัวเองสำหรับข้อมูลเพิ่มเติม โปรดดูที่การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล'
- 2 บันทึกเพลงหรือไฟล์วิดีโอจากคอมพิวเตอร์ของคุณไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์

มัลติมีเดีย

- คุณสามารถคัดลอกหรือย้ายไฟล์จากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์โดยใช้ตัวอ่านการ์ด
- หากมีไฟล์วิดีโอที่มีไฟล์คำบรรยาย (ไฟล์ .smi หรือ .srt ที่ใช้ชื่อเดียวกับไฟล์วิดีโอ) ใหวางไฟล์ไว้ในโฟลเดอร์เดียวกันเพื่อให้คำบรรยายปรากฏขึ้นในขณะที่เล่นไฟล์วิดีโอ
- เมื่อทำการดาวน์โหลดไฟล์เพลงหรือวิดีโอจะต้องมีลิขสิทธิ์อย่างถูกต้อง โปรดอย่าลืมว่าไฟล์ที่เสียหายหรือมีนามสกุลไฟล์ที่ไม่ถูกต้องอาจสร้างความเสียหายให้กับโทรศัพท์ของคุณได้

วิธีย้ายรายชื่อจากโทรศัพท์เก่าของคุณไปยังโทรศัพท์ที่ใช้ในปัจจุบัน

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากโทรศัพท์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

- 1 ดาวน์โหลด Mobile Sync for Android จาก www.lg.com และติดตั้งในคอมพิวเตอร์ของคุณ เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์มือถือ Android ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือกไอคอน **รายชื่อ** ไปที่ **เมนู > อื่นๆ > อิมพอร์ต** และเลือกไฟล์ CSV ที่บันทึกไว้ในคอมพิวเตอร์
- 3 หากฟิลด์ภายในไฟล์ CSV ที่อิมพอร์ตแตกต่างจากฟิลด์ที่อยู่ใน Mobile Sync for Android คุณจำเป็นต้องแนบฟิลด์หลังจากแนบฟิลด์ ให้คลิก ตกลง รายชื่อจะถูกเพิ่มลงใน

Mobile Sync for Android

- 4** หาก Mobile Sync for Android ตรวจพบการเชื่อมต่อโทรศัพท์ LG-P920 โดยใช้สายเคเบิล USB ให้คลิกที่ "ซิงค์" หรือ "ซิงค์รายชื่อ" เพื่อทำการซิงโครไนซ์รายชื่อที่บันทึกไว้ในคอมพิวเตอร์กับโทรศัพท์ของคุณ และทำการบันทึก

วิธีการส่งข้อมูลจากโทรศัพท์ของคุณผ่านบลูทูธ

คุณสามารถส่งข้อมูลผ่านบลูทูธ โดยการเปิดแอปพลิเคชันที่เหมาะสม ไม่ใช่การเปิดจากเมนูบลูทูธเหมือนโทรศัพท์ทั่วไป

- **การส่งรูปภาพ:** เรียกใช้แอปพลิเคชัน **คลังภาพ** และเลือก **รูปภาพ** > **เมนู** คลิก **แบ่งปัน** และเลือก **บลูทูธ** > ให้ตรวจสอบว่า **บลูทูธเปิดอยู่** และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ
- **เอ็กซ์พอร์ตรายชื่อ:** เรียกใช้แอปพลิเคชัน **รายชื่อ** และที่อยู่ที่คุณต้องการทำการเอ็กซ์พอร์ต และ **เมนู** และเลือก **แบ่งปัน** > **บลูทูธ** > ให้ตรวจสอบว่า **บลูทูธเปิดอยู่** และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ
- **การส่งรายชื่อหลายรายการ:** เรียกใช้แอปพลิเคชัน **รายชื่อ** ในการเลือกรายชื่อมากกว่าหนึ่งรายชื่อ และ **ปุ่ม** **เมนู** แล้ว **ปุ่ม** **เมนู** และ **ปุ่ม** **แบ่งปัน** เลือกรายชื่อที่คุณต้องการส่งหรือ **เลือกทั้งหมด** > **แบ่งปัน** > **บลูทูธ** > ให้ตรวจสอบว่า **บลูทูธเปิดอยู่** และเลือก **สแกนหาอุปกรณ์** > เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ
- **การเชื่อมต่อกับ FTP (เครื่องรับหรือรับเฉพาะเซิร์ฟเวอร์ FTP):** **ตั้งค่า** > **ระบบไร้สายและเครือข่าย** > **การตั้งค่าบลูทูธ** จากนั้น

มัลติมีเดีย

ทำเครื่องหมายที่ช่อง ค้นหา ใต้ และทำการค้นหาอุปกรณ์อื่น ค้นหาบริการที่คุณต้องการ และทำการเชื่อมต่อกับเซิร์ฟเวอร์ FTP

เคล็ดลับ! เวอร์ชันบลูทูธ

2.1+EDR

ซึ่งได้รับการรับรองจาก Bluetooth SIG ซึ่งสามารถทำงานร่วมกับอุปกรณ์อื่นๆ ที่ได้รับการรับรองจาก Bluetooth SIG ได้

หมายเหตุ: หากคุณต้องการค้นหาโทรศัพท์เครื่องนี้จากอุปกรณ์อื่นๆ ไปที่ **ตั้งค่า > ระบบไร้สายและเครือข่าย > การตั้งค่าบลูทูธ** จากนั้น ทำเครื่องหมายที่ช่อง ค้นหา ใต้ เครื่องหมายที่ช่องนี้จะหายไปหลังจากผ่านไป 120 วินาที

หมายเหตุ: รองรับโปรไฟล์เหล่านี้: SDAP, HFP, HSP, OPP, PBAP (เซิร์ฟเวอร์), FTP (เซิร์ฟเวอร์), A2DP และ AVRCP

HDMI

HDMI (High Definition Multimedia Interface) คืออินเทอร์เฟซเสียง/วิดีโอขนาดกะทัดรัดสำหรับส่งขอมูลดิจิทัลแบบไม่มีข้อผิดพลาด หากคุณสามารถเชื่อมต่อโทรศัพท์กับทีวีหรือจอแสดงผลโดยใช้สายเคเบิล HDMI คุณสามารถส่งไฟล์ภาพหรือวิดีโอด้วยเครื่องเล่นวิดีโอ/โปรแกรมดูภาพของโทรศัพท์ และดูบนทีวีหรือจอแสดงผลได้ คุณยังสามารถเล่นเนื้อหา 3D บนทีวีหรือจอแสดงผล 3D ได้ด้วย

หมายเหตุ: อาจต้องใช้เวลาสักครู่ในการเล่นไฟล์มีเดีย ขึ้นอยู่กับอุปกรณ์ที่เชื่อมต่อกับโทรศัพท์ อาจเล่นไฟล์ได้ไม่ถูกต้องเมื่อใช้สายเคเบิลหรือผลิตภัณฑ์ที่ไม่ได้รับการรับรองจาก HDMI แนวตำแหน่งของภาพที่ตั้งค่าในโทรศัพท์จะถูกใช้ในอุปกรณ์ด้วยเนื้อหา 3D อาจไม่สามารถส่งโดยอัตโนมัติได้หากโทรศัพท์และทีวี 3D TV สนับสนุนเวอร์ชัน

HDMI แตกต่างกันในกรณีนี้
คุณสามารถเปลี่ยนการตั้งค่า 3D
ของทีวีได้โดยดูคู่มือผู้ใช้ของทีวี
เมื่อใช้สายเคเบิล HDMI
ตัวอย่างการเล่นวิดีโอ 3D, กล้อง
3D หรือตัวอย่างกล้องวิดีโอ 3D
จะแสดงบนทีวีหรือจอแสดงผล
เท่านั้น อาจไม่มีการสนับสนุน
สัญญาณ HDMI ออกสำหรับ
ไฟล์บางไฟล์ตามการร้องขอ
ของเจ้าของลิขสิทธิ์
หากข้อมูลในโทรศัพท์
แสดงไม่ถูกต้องในอุปกรณ์เนื่อง
จากปัญหาการซิงค์ คุณจำเป็นต้อง
ดองเปลี่ยนความละเอียดของ
โทรศัพท์ (ในหน้าจอหลักให้แตะ
ปุ่ม เมนู แลวแตะ ตั้งค่า >
HDMI > ความละเอียด)

ยูทิลิตี้

การตั้งเวลาการปลุก

- 1 ในหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก นาฬิกาปลุก
- 2 ถ้าคุณต้องการเพิ่มการเตือนใหม่ แตะ การเตือนใหม่
- 3 ตั้งค่าการเตือนและแตะ บันทึก เพื่อเปิดการทำงาน

หมายเหตุ: ในการลบการตั้งค่าการปลุกในหน้าจอรายการเตือน ให้แตะปุ่มเมนู และเลือก ลบ/ลบทั้งหมด

การใช้เครื่องคิดเลข

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน แล้วเลือก เครื่องคิดเลข
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) ตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน แตะ เมนู และ พาเนลขั้นสูง จากนั้นเลือก sin, cos, tan, log, อื่นๆ

หมายเหตุ: เครื่องคิดเลขนี้รองรับ

หน่วยมาตรฐานของการวัดค่ามุม, เรเดียน เท่านั้น

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 บนหน้าจอหลัก แตะแท็บ แอปพลิเคชัน แล้วเลือก ปฏิทิน
- 2 คุณต้องสร้างแอคเคาท์ MS Exchange หรือ Google ก่อนเพื่อใช้งานปฏิทิน
- 3 ในการตรวจสอบเหตุการณ์ ให้แตะวันที่ แตะค้างไว้หากคุณต้องการเพิ่มเหตุการณ์ใหม่แล้วแตะ เหตุการณ์ใหม่
- 4 แตะ อะไร แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น
- 5 จากนั้นแตะ ที่ใด และป้อนข้อมูลที่ตั้ง
- 6 ในการเพิ่มบันทึกลงในเหตุการณ์ของคุณให้แตะ คำอธิบาย และป้อนรายละเอียด

7 หากคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **การทำซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น

8 แตะ **เสร็จ** เพื่อบันทึกเหตุการณ์ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมสีในปฏิทิน กำกับอยู่เสียงเตือนจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์ เพื่อให้คุณไม่พลาดกำหนดการณต่างๆ

การบันทึกเสียงหรือเสียงพูด

ใช้บันทึกเสียงเพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

- 1** บนหน้าจอหลัก แตะ **แอปพลิเคชัน** และเลือก **บันทึกเสียง**
- 2** แตะ  เพื่อเริ่มการบันทึก
- 3** แตะ  เพื่อหยุดการบันทึก
- 4** แตะ  เพื่อฟังการบันทึก
- 5** แตะ  เพื่อเข้าถึงอัลบั้มของคุณ คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้

โปรดทราบ: เวลาการบันทึกที่มีอาจแตกต่างจากเวลาจริง

การส่งรายการบันทึกเสียง

- 1** เมื่อคุณบันทึกเสียงเสร็จแล้ว คุณสามารถส่งคลิปเสียงได้โดยแตะ **แบ่งปัน**
- 2** เลือกระหว่าง **บลูทูธ**, **อีเมล**, **Gmail** และ **ข้อความ** เมื่อคุณเลือก **อีเมล**, **Gmail** และ **ข้อความ** การบันทึกเสียงจะถูกเพิ่มในข้อความที่คุณเขียนและส่งตามปกติ

โซนเวลาท้องถิ่น

คุณสามารถตั้งค่าตัวเลือก **ใช้โซนเวลาท้องถิ่น** และเลือก **โซนเวลาท้องถิ่น** จากรายการได้ซึ่งจะใช้แทนที่โซนเวลาท้องถิ่นที่ตั้งค่าโดยเครือข่ายโทรศัพท์มือถือ เพื่อให้โซนเวลาที่คุณเลือกมีผลในปฏิทินและกิจกรรมในโทรศัพท์ของคุณ

- 1** บนหน้าจอที่ไม่ได้ใช้งานให้แตะ  ปุ่มหน้าหลัก


ยูทิลิตี้

- 2 และ ปฏิทิน แล้วลงชื่อเข้าใช้
แอดเดสของคุณ
- 3 ในเมนูปฏิทิน ให้เลือกตัวเลือก
ตั้งค่า
- 4 และ ใช้โซนเวลาที่ท้องถิ่น และ
เลือกโซนเวลาที่ต้องการใน
ตัวเลือกโซนเวลาที่ท้องถิ่น

ตัวแปลงเกมส์ 3D


คุณสามารถสนุกสนานกับเกมส์
2D ที่เป็นที่นิยมในแบบ 3D
ได้ด้วยตัวแปลงเกมส์ 3D
ที่ใช้เอ็นจิน HRZ

เกมส์ที่คุณเพิ่มในรายการตัว
แปลงเกมส์ 3D จะถูกแปลงเป็น
3D แบบเรียลไทม์เมื่อคุณกดปุ่ม
ฮอตคีย์ 3D ทางด้านขวาของ
โทรศัพท์

- 1 และแท็บ แอปพลิเคชัน
แล้วเลือก ตัวแปลงเกมส์ 3D
- 2 และ  และเลือกเกมส์ที่คุณ
ต้องการ
- 3 คุณสามารถเล่นเกม 3D ในราย
การตัวแปลงเกมส์ 3D ในแบบ
3D ในกรณีที่คุณลงทะเบียน

เกมส์แบบปรับแต่งเองได้
คุณสามารถตั้งค่า คุณภาพ,
ความลึกของภาพ 3D

- สเกลความลึก ได้ใน 3D
settings

- 1 และ  ในรายการเกมส์
- 2 บันทึกค่าหลังจากการตั้งค่า

ประกาศ:

ตัวแปลงเกมส์ 3D ทำงานใน
เกมส์ 2D แบบ OpenGL เท่านั้น
หมายเหตุ: การแปลง 3D
ไม่มีค่าบริการเพิ่มเติม

การแก้ไขวิดีโอ

ใช้แก้ไขวิดีโอเพื่อแก้ไขวิดีโอที่
คุณถ่าย

- 1 และแท็บ แอปพลิเคชัน
บนหน้าจอหลัก
- 2 และ แก้ไขวิดีโอ เมื่อคุณไม่มี
โครงการค้างอยู่ จะใช้โดยเฉพาะ
สร้าง และ ช่วยเหลือ.
แตะปุ่มเมนูเพื่อดู ช่วยเหลือ
- 3 และ สร้าง และเลือก เพิ่ม เพื่อ
เพิ่มวิดีโอ ภาพ หรือเพลงที่
คุณต้องการแทรก คุณสามารถ

ลากไฟล์ลงไปยังตำแหน่งที่
คุณต้องการวางได้

หมายเหตุ: หากคุณเลือกวิดีโอ
3D ในตอนแรก คุณจะสามาร
เพิ่มได้เฉพาะวิดีโอ 3D ที่มีความ
ละเอียดเดียวกับเสียงเท่านั้น
และหากคุณเลือกวิดีโอ 2D
คุณสามารถเพิ่มได้เฉพาะ
วิดีโอ 2D

- 4** แตะ Trim เพื่อแก้ไขความยาว
ของวิดีโอโดยการลากแถบ
Trim คุณสามารถควบคุมแบบ
ละเอียดได้โดยใช้ Detail View
- 5** หากโครงการของคุณเสร็จสิ้น
แล้ว ให้แตะเอกซ์พอร์ตบนหน้า
จอหลักเพื่อสร้างไฟล์ที่เสร็จ
สมบูรณ์ ตรวจสอบให้แน่ใจว่า
บันทึกการเปลี่ยนแปลงของคุณ
แล้วก่อนออกไปยังเมนูหลัก
- 6** คุณสามารถแบ่งปันไฟล์ที่คุณ
แก้ไขกับเพื่อนๆ ผ่านบลูทูธ,
อีเมล, Facebook, Gmail,
ขอความ และ Youtube ได้

เว็บไซต์

บราวเซอร์

บราวเซอร์จะนำคุณเข้าสู่โลกที่เต็มไปด้วยสีสันของเกมสเฟลวง ข่าวสาร กีฬา ความบันเทิง และอื่นๆ อีกมากมายอย่างรวดเร็วที่โทรศัพท์มือถือของคุณโดยตรง ไม่ว่าจะคุณอยู่ที่ใดหรือสนใจสิ่งใดอยู่


หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

< แถบเครื่องมือ >


แถบไอคอนบนหน้าจอด้านล่างทำให้การใช้งานบราวเซอร์เป็นเรื่องง่าย

 **ย้อนกลับ:** ไปที่เว็บเพจก่อนหน้า

 **ส่งต่อ:** ไปที่เว็บเพจต่อไป

 **หน้าต่าง:** แสดงหน้าต่างที่เปิดอยู่ทั้งหมด


 **หน้าต่างใหม่:** เปิดหน้าต่างใหม่


 **ตั้งค่า:** ไปที่การตั้งค่าบราวเซอร์


การใช้ตัวเลือก


แตะปุ่ม **เมนู** เพื่อดูตัวเลือก

 **อ่านทีหลัง:** เพิ่มในอ่านทีหลัง

 **แบ่งปันเพจ:** ส่งเว็บเพจผ่านบลูทูธ, อีเมล, Facebook, Gmail ข้อความและอื่นๆ

 **ค้นหบนหน้า:** หากคุณป้อนตัวอักษรหรือคำ จะทำเครื่องหมายตัวอักษรทั้งหมดที่คุณป้อนในเว็บเพจ

 **เลือกข้อความ:** แตะและเลือกบรรทัดที่คุณต้องการคัดลอกคุณสามารถวางข้อความลงในช่องป้อนข้อความโดยแตะค้างที่ช่องป้อนข้อความ

 **เพิ่ม RSS Feed:** เพิ่มเว็บเพจรายการโปรดของคุณ เมื่อมีไอเท็มใหม่ปรากฏบนไซต์ คุณจะได้รับแจ้งโดยอัตโนมัติจาก Google Reader

หมายเหตุ: RSS (Really Simple Syndication) เป็นตระกูลของรูปแบบ Web Feed ที่ใช้เพื่อเผยแพร่เนื้อหาที่ได้รับการอัปเดตเป็นประจำ เช่น รายการใน Blog, หัวข้อข่าว หรือ Podcast เอกสาร RSS ที่เรียกว่า Feed, Web Feed หรือ Channel ประกอบไปด้วยการสรุปเนื้อหาหรือข้อความเต็มจากเว็บไซต์ที่เกี่ยวข้องของ RSS ช่วยให้ทุกคนสามารถติดตามความเคลื่อนไหวของเว็บไซต์ที่ตนชื่นชอบได้เสมอ ด้วยระบบอัตโนมัติที่สะดวกกว่าการเฝ้าดูด้วยตนเอง ผู้ใช้สมัครใช้บริการ Feed โดยป้อนลิงค์ของ Feed ลงใน Reader หรือโดยการคลิกที่ไอคอน RSS ในบราวเซอร์ที่เริ่มต้นขั้นตอนการสมัครใช้บริการ Reader จะตรวจดู Feed ที่ผู้ใช้สมัครใช้บริการเป็นประจำเพื่อดูเนื้อหาใหม่ และดาวน์โหลดการอัปเดตต่างๆ ที่พบ

สำหรับเว็บเพจ RSS Feed ที่ใช้ไม่ได้เมนูไอคอน 'เพิ่ม RSS Feed' จะใช้งานไม่ได้

▼ อื่นๆ

- **โฮมเพจ:** ไปที่โฮมเพจ
- **ตั้งค่าโฮมเพจ:** ตั้งค่าหน้าเว็บปัจจุบันเป็นโฮมเพจของคุณ
- **เพิ่มปุ่มลัดในหน้าหลัก:** เพิ่มเพจปัจจุบันเป็นปุ่มลัดในหน้าหลัก
- **ข้อมูลเพจ:** แสดงข้อมูลเว็บเพจ
- **ดาวน์โหลด:** แสดงประวัติการดาวน์โหลด

แอปพลิเคชันใน Google

- 1 ขั้นแรก ให้สร้างแอคเคาท์ Google ป้อนชื่อผู้ใช้และรหัสผ่าน
- 2 หลังจากไชน์อื่นแล้ว รายชื่ออีเมล และปฏิทินในแอคเคาท์ Google จะซิงโครไนซ์กับโทรศัพท์ LG-P920 ของคุณโดยอัตโนมัติ

Maps

ตรวจสอบสถานที่ปัจจุบันของคุณ และสภาพการจราจร รวมทั้งรับข้อมูลทิศทางเพื่อไปยังปลายทางของคุณ โทรศัพท์ของคุณต้องเชื่อมต่อกับ Wi-Fi หรือ 3G/GPRS

หมายเหตุ: Google Maps ไม่ได้ให้บริการครอบคลุมทุกเมืองและทุกประเทศ

Market

Android Market ช่วยให้คุณดาวน์โหลดแอปพลิเคชันและเกมส์ได้ หากคุณติดตั้งแอปพลิเคชันและเกมส์จาก Android Market แอปพลิเคชันเหล่านั้นจะ

ปรากฏในเมนูของ LG-P920 คุณสามารถตรวจสอบความเห็นของคนอื่นๆ เกี่ยวกับแอปพลิเคชัน หรือคุณสามารถโพสต์ความเห็นของคุณได้

Gmail

Gmail ได้รับการกำหนดค่าเมื่อคุณตั้งค่าโทรศัพท์เป็นครั้งแรก ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ Gmail ในโทรศัพท์ของคุณจะทำการซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ รายการสนทนาในถาดเข้าจะเป็นมุมมอง Gmail เริ่มต้น

Talk

Google Talk เป็นโปรแกรมข้อความโต้ตอบแบบทันทีของ Google ซึ่งช่วยให้คุณติดต่อสื่อสารกับบุคคลอื่นที่ใช้ Google Talk

แตะปุ่ม **เมนู** และเลือกตัวเลือกที่มีอยู่ตามที่แสดงด้านล่าง:

เพื่อนทั้งหมด, เพิ่มเพื่อน,
ค้นหา, ไลน์เอาด,
ตั้งค่าและอื่นๆ

Google Search

Google Mobile Web Search
ให้คุณค้นหาเว็บไซต์ต่างๆ

LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาที่น่าสนใจบนเดสก์ทอป เช่น เกมส์, แอปพลิเคชัน, ฟังก์ชันและเสียงเรียกเข้า ทำให้ผู้ใช้โทรศัพท์ LG สามารถสัมผัสกับประสบการณ์ "Mobile Life" ได้มากยิ่งขึ้น

วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ

- 1 แตะไอคอน  เพื่อเข้าถึง LG SmartWorld
- 2 แตะ ลุงชื่อเข้าใช้ และ ป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะ รีจิสเตอร์ และสมัครสมาชิกของ LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ

หมายเหตุ: หากไม่มีไอคอน



- 1 ให้ใช้เว็บเบราว์เซอร์มือถือเพื่อเข้าใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 ใช้งานและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld โดยการแตะไอคอน 

วิธีการใช้ LG SmartWorld

- เข้าร่วมการส่งเสริมการขาย LG SmartWorld ทุกเดือน
- ค้นหาและดาวน์โหลดเนื้อหา 3D จาก 'โซน 3D'
- ลองใช้ปุ่ม "เมนู" เพื่อค้นหาสิ่งที่คุณต้องการอย่างรวดเร็ว
 - **ประเภท:** ค้นหาเนื้อหาตามประเภท (เช่น

การศึกษา, ความบันเทิง,
เกมส์, และอื่นๆ)

- **แอปพลิเคชันของจีน:**
รายการเนื้อหาที่ดาวน์โหลด
หรือเนื้อหาที่ต้องอัปเดต
 - **แอปพลิเคชันสำหรับคุณ:**
เนื้อหาที่แนะนำอิงตามตัว
เลือกก่อนหน้าของคุณ
 - **ค้นหา:** ค้นหาเนื้อหา
 - **ตั้งค่า:** ตั้งค่าโปรไฟล์และ
หน้าจอ
- และลองใช้ฟังก์ชันอื่นๆ ที่มี
ประโยชน์ (หน้าจอรายละเอียด
เนื้อหา)
 - **รายการที่ต้องการ:** บันทึก
เนื้อหาที่คุณสนใจ
 - **แบ่งปัน:** แบ่งปันเนื้อหา
ข้อมูลผ่านอีเมล,
Facebook, Twitter
และขอความช่วยเหลือ

หมายเหตุ: LG SmartWorld
อาจไม่มีให้บริการในบาง
ประเทศหรือผู้ให้บริการบางราย

ตั้งค่า

บนหน้าจอหลัก แตะแท็บ
แอปพลิเคชัน แล้วเลื่อนและ
แตะ **ตั้งค่า**

ระบบไร้สายและเครือข่าย

ในหน้าจอนี้ คุณจะสามารถจัดการ Wi-Fi และ บลูทูธ คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่และโหมดเครื่องบินได้

โหมดเครื่องบิน – หลังจากตั้งค่าโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Wi-Fi – แตะเพื่อเลือก: เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

ตั้งค่า Wi-Fi – ให้คุณสามารถตั้งค่าและจัดการจุดเชื่อมต่อไร้สาย ตั้งค่าการแจกเครือข่าย หรือเพิ่มเครือข่าย Wi-Fi หน้าจอตั้งค่า Wi-Fi ขั้นสูงจะเข้าใจจากหน้าจอตั้งค่า Wi-Fi แตะปุ่ม **เมนู** และแตะ **ขั้นสูง**

บลูทูธ – แตะเพื่อเลือก: เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

การตั้งค่า – ตั้งชื่ออุปกรณ์และ

โหมดค้นหาได้ สแกนหาอุปกรณ์อื่นๆ หรือตรวจสอบรายการอุปกรณ์บลูทูธที่คุณกำหนดค่าก่อนหน้านี้ และที่ตรวจพบเมื่อโทรศัพท์สแกนหาอุปกรณ์บลูทูธครั้งล่าสุด

การปล่อยสัญญาณและสอดสเปดแบบพกพา – ปล่อยสัญญาณโทรศัพท์ของคุณไปยังคอมพิวเตอร์ด้วยสายเคเบิล USB เพื่อแบ่งปันการเชื่อมต่ออินเทอร์เน็ตของโทรศัพท์กับคอมพิวเตอร์และเปลี่ยนโทรศัพท์เป็นจุดเชื่อมต่อ Wi-Fi เพื่อแบ่งปันการเชื่อมต่ออินเทอร์เน็ตของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่นๆ

ตั้งค่า VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

ตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่าย และผู้ให้บริการ, ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

ตั้งค่า On-Screen Phone – ให้คุณเปลี่ยนรหัสผ่าน On-Screen Phone (รหัสผ่านเริ่มต้นคือ “0000”) On-Screen Phone ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ คุณยังสามารถควบคุมโทรศัพท์มือถือจากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

เสียง

< ทั่วไป >

โหมดเงียบ – ให้คุณปิดเสียงทั้งหมด (รวมถึงเสียงเรียกเข้าของการโทรและการแจ้ง) ยกเว้นเสียงจากเพลง วิดีโอ และการปลุกที่ตั้งไว้ (มีเดียและการปลุกต้องปิดเสียงจากแอปพลิเคชันเหล่านั้น)

โปรดทราบ: หลังจากตั้งโหมดเงียบแล้ว คุณจะไม่สามารถใช้เมนู **ตั้งค่า > เสียง > ระดับเสียง** ได้

สั่น – ให้คุณตั้งค่าให้โทรศัพท์สั่นเมื่อคุณได้รับสายเรียกเข้า

ระดับเสียง – ให้คุณตั้งระดับเสียงสำหรับเสียงเรียกเข้า มีเดีย และการปลุก หากคุณไม่ได้เลือกตัวเลือกเพื่อใช้ระดับเสียงเดียวกันสำหรับการโทรและการแจ้ง คุณสามารถตั้งระดับเสียงแยกกันได้

< สายเรียกเข้า >

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

< การแจ้ง >

เสียงเรียกเข้าของการแจ้ง – ให้คุณตั้งค่าเสียงการแจ้งเริ่มต้นของคุณ

< การตอบรับ >

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เพื่อเล่นเสียงเมื่อหมุนหมายเลขโดยใช้ปุ่มกด

ตั้งค่า

การเลือกเสียง – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองต่อการสัมผัส

เสียงลือคหน้าจอ – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อลือคและปลดลือคหน้าจอ

การโต้ตอบการสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์สั่นเล็กน้อยเมื่อคุณแตะปุ่มเลือกต่างๆ และดำเนินการอื่นๆ

หน้าจอ

ความสว่าง – ปรับความสว่างของหน้าจอ

หมุนจออัตโนมัติ – ให้คุณตั้งค่าการวางแนวเพื่อสลับโหมดแนวนอนหรือโหมดแนวตั้งโดยอัตโนมัติเมื่อคุณหมุนโทรศัพท์นอนหรือตั้ง

แอนิเมชัน – ให้คุณตั้งค่าการเปลี่ยนแบบเคลื่อนไหวเมื่อเปลี่ยนจากหน้าจอหนึ่งไปยังอีกหน้าจอหนึ่ง

ไหมเอาต์หน้าจอ – ให้คุณปรับเวลาหน่วงก่อนที่หน้าจอจะปิดโดยอัตโนมัติ เพื่อประสิทธิภาพของแบตเตอรี่สูงสุด ให้ใช้ไหมเอาต์ที่สั้นที่สุด

แสดงแบบอักษร - เปลี่ยนแบบอักษรที่แสดง

< 3D settings >

Warning popup – แสดงป๊อปอัปค่าเตือนเมื่อคุณเริ่มเล่นเกม 3D ยกเว้นคุณจะไม่เลือกของ 'Do not show again'

ท่าทางการเคลื่อนไหว

ใช้การเดาท่าทาง – ปรับตั้งค่าท่าทางการเคลื่อนไหวสำหรับสายเรียกเข้าและสำหรับการตั้งปลุก

<สายเรียกเข้า>

ปิดเสียง – ให้คุณปิดเสียงโดยการคว้าเครื่องเมื่อมีสายเรียกเข้า

<การปลุก>

เลื่อน (หยุด) – ให้คุณเลื่อน (หยุด) การปลุกโดยคว้าเครื่องลง

รีเซ็ทเซ่นเซอร์ท่าทาง – การเปรียบเทียบเซนเซอร์การเคลื่อนไหวโดยวางโทรศัพท์บนพื้นผิวราบ

ตำแหน่งและระบบป้องกัน

< ตำแหน่งของฉับ >

ใช้เครือข่ายไร้สาย – หากคุณเลือก **ใช้เครือข่ายไร้สาย** โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์เคลื่อนที่

ใช้ดาวเทียม GPS – หากคุณเลือก **ใช้ดาวเทียม GPS** โทรศัพท์จะกำหนดตำแหน่งของคุณด้วยความแม่นยำระดับถนน

< ปลดล็อคหน้าจอ >

ตั้งค่าล็อคหน้าจอ – ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ ซึ่งจะเปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ คุณสามารถตั้ง **PIN** หรือ **รหัสผ่าน** แทน **รูปแบบ** หรือ **วงตัวเลือกเป็น** **ไม่มี** ได้

เคล็ดลับ! การล็อคหน้าจอโดยใช้ล็อคแบบ

- 1** ในครั้งแรก จะมีการแสดงบทช่วยสอนสั้นๆ เกี่ยวกับการสร้างแบบปลดล็อค
- 2** คุณจะได้รับแจ้งให้วาดและวาดซ้ำแบบของคุณในการครั้งต่อไปที่คุณเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะได้รับแจ้งให้วาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

< ล็อคซิมการ์ด >

ตั้งค่าล็อคซิมการ์ด – ตั้งค่าล็อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

< รหัสผ่าน >

รหัสผ่านที่มองเห็นได้ – เลือกให้แสดงรหัสผ่านเมื่อคุณพิมพ์หรือยกเลิกการเลือกให้ซ่อนรหัสผ่านเมื่อคุณพิมพ์

< การจัดการอุปกรณ์ >

เลือกตัวช่วยอุปกรณ์ – เพิ่มหรือลบตัวช่วยอุปกรณ์

ตั้งค่า

< พื้นที่จัดเก็บรหัสเฉพาะ >

ใช้รหัสเฉพาะรักษาความปลอดภัย – เลือกเพื่อให้แอปพลิเคชันเข้าใช้ที่จัดเก็บที่เข้ารหัสของใบรับรองความปลอดภัยและรหัสผ่านที่เกี่ยวข้อง และรหัสเฉพาะอื่นๆ ในโทรศัพท์พื้นที่จัดเก็บรหัสเฉพาะใช้สำหรับสร้างการเชื่อมต่อ VPN และ Wi-Fi หากคุณไม่ได้ตั้งรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะ การตั้งค่านี้จะเป็นสีเทา

ติดตั้งจากการ์ด SD – ให้คุณติดตั้งใบรับรองที่เข้ารหัสจากการ์ด microSD

ตั้งค่าน์รหัสผ่าน – ให้คุณตั้งหรือเปลี่ยนรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะที่ปลอดภัย รหัสผ่านของคุณต้องยาวอย่างน้อยแปดตัวอักษร

ลบพื้นที่จัดเก็บ – ลบใบรับรองความปลอดภัยและรหัสเฉพาะที่เกี่ยวข้องของทั้งหมด และลบรหัสผ่านของพื้นที่จัดเก็บที่ปลอดภัย

แอปพลิเคชัน

แหล่งที่มาที่ไม่รู้จัก – อนุญาตการติดตั้งแอปพลิเคชันที่คุณได้รับจากเว็บไซต์ อีเมล หรือแหล่งอื่นๆ นอกเหนือจาก Android Market

คำเตือน

โทรศัพท์มือถืออาจทำงานผิดปกติและอาจถูกนำไปใช้อย่างผิดกฎหมายในการกำหนดตำแหน่งของคุณ และเข้าถึงข้อมูลส่วนตัวผ่านอินเทอร์เน็ต ทั้งนี้ขึ้นอยู่กับแอปพลิเคชันที่ติดตั้งเพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัวให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น

จัดการแอปพลิเคชัน – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว

บริการที่กำลังรัน – ให้คุณดูและควบคุมบริการและแอปพลิเคชันที่กำลังรันในขณะนี้ตัวเลือกนี้จะแสดงการประมวลผลที่แต่ละบริการที่กำลังรันต้องการ และจำนวนหน่วยความจำที่ใช้

การใช้ที่เก็บข้อมูล – ดูที่เก็บข้อมูลที่แอปพลิเคชันใช้

การใช้แบตเตอรี่ – ดูการใช้แบตเตอรี่

การพัฒนา – ให้คุณตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน เช่น ดีบั๊ก **USB**, ตื่นเสมอ และ **อนุญาตตำแหน่งจำลอง**

บัญชีและการซิงค์

< ตั้งค่าการซิงค์ทั่วไป >

ข้อมูลแบ็คกราวด์ – อนุญาตให้แอปพลิเคชันซิงโครไนซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณจะกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตามการไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช้ทั้งหมด) การใช้ข้อมูล

ซิงค์อัตโนมัติ – อนุญาตให้แอปพลิเคชันซิงโครไนซ์ ส่ง และรับข้อมูลตามกำหนดเวลาของตนเองได้

< ตั้งค่าอัปเดต Social+ >

ตั้งค่า Social+ – ให้คุณตั้งค่า

รอบเวลารีเฟรชของแอปพลิเคชันเครือข่ายสังคมทั้งหมดที่อยู่ในโทรศัพท์ได้

< จัดการแอคเคาท์ >

แสดงแอคเคาท์ Google ทั้งหมดและแอคเคาท์อื่นๆ ที่คุณเพิ่มในโทรศัพท์

หากคุณแตะแอคเคาท์ในหน้าจอนี้ หน้าจอแอคเคาท์จะเปิด

ความเป็นส่วนตัว

< ข้อมูลส่วนตัว >

รีเซ็ตข้อมูลจากโรงงาน – ลบข้อมูลส่วนตัวทั้งหมดออกจากพื้นที่การจัดเก็บภายในโทรศัพท์รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google และแอคเคาท์อื่นๆ, ข้อมูลและการตั้งค่าระบบ/แอปพลิเคชัน ตลอดจนแอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM การรีเซ็ตโทรศัพท์จะไม่ลบหรือเรียกคืนการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลด หรือไฟล์ (เช่น ไฟล์ภาพและไฟล์เพลง) ในการด microSD หรือ

ตั้งค่า

การ์ด SD ภายใน หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะได้รับแจ้งให้ป้อนข้อมูลอีกครั้งเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

ความจำการ์ด SD และเครื่อง

< การ์ด SD >

ตรวจสอบพื้นที่ทั้งหมดและพื้นที่ที่ใช้ได้ และ ยกเลิกการเชื่อมต่อการ์ด SD ภายนอก เพื่อถอดอย่างปลอดภัย **ฟอร์แมตการ์ด SD ภายนอก** หากต้องการลบข้อมูลทั้งหมดจากการ์ด microSD คุณต้องยกเลิกการเชื่อมต่อการ์ด microSD ก่อนจึงจะสามารถฟอร์แมตได้

< พื้นที่การจัดเก็บภายในโทรศัพท์ >

ตรวจสอบ พื้นที่ที่ใช้ได้

ภาษาและคีย์บอร์ด

ใช้การตั้งค่า **ภาษาและคีย์บอร์ด** เพื่อเลือกภาษาและภูมิภาคสำหรับข้อความในโทรศัพท์ และ สำหรับการกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

อินพุตและเอาต์พุตเสียง

< การป้อนด้วยเสียง >

ตั้งค่าจดจำเสียง – ใช้ **ตั้งค่าจดจำเสียง** เพื่อกำหนดค่าคุณสมบัติการป้อนด้วยเสียง Android

- **ภาษา:** เปิดหน้าจอซึ่งคุณสามารถกำหนดภาษาที่ใช้ในการป้อนข้อความด้วยเสียง
- **SafeSearch:** เปิดกล่องโต้ตอบซึ่งคุณสามารถกำหนดว่าคุณต้องการให้ฟิลเตอร์ Google Safe Search บล็อกผลการค้นหาบางชนิดหรือไม่
- **บล็อกคำที่ไม่เหมาะสม:** เมื่อไม่ได้เลือกไว้ ระบบความจำเสียงของ Google จะจดจำและบันทึกคำต่างๆ ที่คนส่วน

ใหญ่คิดว่าเป็นค่าที่ไม่เหมาะสมไว้ เมื่อคุณป้อนข้อความด้วยเสียง แต่ถาเลือกตัวเลือกนี้ไว้ ระบบความจำเสียงของ Google จะแทนที่ค่าเหล่านั้นในบันทึกด้วยตัวเว้นว่างที่มีเครื่องหมายแฮช (#)

< เอาต์พุตเสียง >

ตั้งค่า Text-to-speech – ใช้ตั้งค่า **Text-to-speech** เพื่อกำหนดค่าตัวสังเคราะห์ Text-to-speech ของ Android สำหรับแอปพลิเคชันที่สามารถใช้งานนี้
หมายเหตุ: หากคุณไม่ได้ติดตั้งข้อมูลตัวสังเคราะห์เสียงพูด จะมีเฉพาะ การตั้งค่าติดตั้งข้อมูลเสียง เท่านั้น

- **ฟังตัวอย่าง:** เล่นเสียงตัวอย่างสั้นๆของตัวสังเคราะห์เสียงพูดโดยใช้การตั้งค่าในปัจจุบันของคุณ
- **ใช้การตั้งค่าของฉันเสมอ:** เลือกตัวเลือกนี้เพื่อใช้การตั้งค่าบนหน้าจอนี้แทนการตั้งค่าตัวสังเคราะห์เสียงพูดที่มีอยู่ใน

แอปพลิเคชันอื่นๆ

- **Default engine:** เปิดกล่องโต้ตอบซึ่งคุณสามารถตั้งค่าแอปพลิเคชัน Text-to-speech ที่ต้องการเลือกใช้ กรณีที่มีแอปพลิเคชันติดตั้งไว้มากกว่าหนึ่งแอปพลิเคชัน
- **ติดตั้งข้อมูลเสียง:** หากโทรศัพท์ของคุณไม่มีข้อมูลตัวสังเคราะห์เสียงพูดติดตั้งอยู่ ตัวเลือกนี้จะทำการเชื่อมต่อกับ Android Market และให้คำแนะนำในขั้นตอนการดาวน์โหลดและติดตั้งข้อมูลดังกล่าวแก่คุณ ตัวเลือกนี้จะไม่ทำงานหากมีข้อมูลติดตั้งไว้อยู่แล้ว
- **อัตราการพูด:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกอัตราความเร็วในการพูดของตัวสังเคราะห์เสียง
- **ภาษา:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกภาษาของข้อความที่คุณต้องการให้ตัวสังเคราะห์เสียงอ่าน ตัวเลือกนี้มีประโยชน์เป็นอย่างยิ่งเมื่อใช้

ตั้งค่า

ควบคู่กับ **ใช้การตั้งค่าของ
ฉันเสมอ** ซึ่งจะช่วยให้แน่ใจได้
ว่าข้อความในแอปพลิเคชัน
ต่างๆ ได้รับการอ่านอย่าง
ถูกต้อง

- **Pico TTS:** กำหนดค่าการตั้ง
ค่า Pico TTS

การช่วยสำหรับการเข้าถึง

**ใช้การตั้งค่า การช่วยสำหรับการ
การเข้าถึง** เพื่อกำหนดค่าปลั๊ก
อินช่วยเหลือสำหรับการเข้าถึงที่
คุณติดตั้งในโทรศัพท์
หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติม
เพื่อให้สามารถใช้งานได้

วันที่และเวลา

ใช้การตั้งค่า วันที่และเวลา เพื่อ
ตั้งค่าการแสดงวันที่ คุณยังสามารถ
ใช้การตั้งค่าเหล่านี้เพื่อตั้งค่า
เวลาและโซนเวลาของคุณแทน
การรับเวลาปัจจุบันจากเครือข่าย
โทรศัพท์เคลื่อนที่ได้อีก

เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมาย และตรวจสอบ
สถานะโทรศัพท์และเวอร์ชัน
ซอฟต์แวร์

Wi-Fi

ด้วย Wi-Fi คุณสามารถใช้การ
เข้าถึงอินเทอร์เน็ตความเร็วสูง
ภายในพื้นที่ครอบคลุมของจุด
เชื่อมต่อไร้สาย (AP)


คุณสามารถสนุกสนานกับ
อินเทอร์เน็ตได้สายด้วย Wi-Fi
โดยไม่มีค่าบริการเพิ่มเติม

เปิด Wi-Fi

จากหน้าจอหลัก เปิดแถบการ
แจ้ง และแตะ  เปิด

หรือ แตะ **แอปพลิเคชัน >
ตั้งค่า > ตั้งค่าการเชื่อมต่อ
แล้วเปิด Wi-Fi**

การเชื่อมต่อไปยัง Wi-Fi

เลือกเครือข่าย Wi-Fi ที่คุณต้องการเชื่อมต่อ หากคุณพบ  คุณจะต้องป้อนรหัสผ่านเพื่อทำการเชื่อมต่อ


หมายเหตุ:

- หากคุณอยู่นอกพื้นที่ Wi-Fi และเลือกใช้การเชื่อมต่อ 3G อาจมีค่าใช้จ่ายเพิ่มเติม
- หากโทรศัพท์ของคุณเข้าสู่โหมดปิดเมื่อมีการเชื่อมต่อ Wi-Fi การเชื่อมต่อ Wi-Fi จะถูกปิดโดยอัตโนมัติ (ในกรณีนี้ หากโทรศัพท์ของคุณสามารถเข้าใช้ 3G ได้ อาจจะทำให้การเชื่อมต่อไปยังเครือข่าย 3G โดยอัตโนมัติ และอาจมีค่าใช้จ่ายเพิ่มเติม)
- โทรศัพท์ LG-P920 สนับสนุนการรักษาความปลอดภัย WEP, WPA/WPA2-PSK และ 802.1x EAP หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่าย



ข่ายไว้ ต้องป้อนรหัสในหน้าต่างบอบบัพ หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างบอบบัพนี้จะไม่ปรากฏขึ้น คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

การแบ่งปันการเชื่อมต่อข้อมูลโทรศัพท์มือถือของโทรศัพท์

คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์ได้ถึงห้าเครื่องพร้อมกันด้วยการเปลี่ยนโทรศัพท์ของคุณเป็นฮอตสปอต Wi-Fi เคลื่อนที่ ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนในแถบการแจ้ง

ไอคอน	รายละเอียด
	กำลังใช้งานการปล่อยสัญญาณผ่าน USB

ตั้งค่า

ไอคอน	รายละเอียด
	กำลังใช้งาน хотสปอต Wi-Fi เคลื่อนที่
	กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ хотสปอตแบบพกพา

สำหรับข้อมูลล่าสุดเกี่ยวกับ хотสปอตเคลื่อนที่ รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่ <http://www.android.com/tether>

หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การปล่อยสัญญาณและ хотสปอตแบบพกพา

บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **ตั้งค่า** แตะ **ระบบไร้สายและเครือข่าย** และเลือก **хотสปอตเคลื่อนที่**

เลือกตัวเลือกที่คุณต้องการปรับ **การปล่อยสัญญาณผ่าน USB** - คุณสามารถแชร์การเชื่อมต่ออินเทอร์เน็ตให้กับคอมพิวเตอร์ได้ คุณสามารถแชร์โทรศัพท์กับคอมพิวเตอร์ได้โดยใช้สายเคเบิล USB


хотสปอต Wi-Fi เคลื่อนที่ - เลือกเพื่อแบ่งปันการเชื่อมต่อข้อมูลบนเครือข่ายโทรศัพท์เคลื่อนที่ของโทรศัพท์ด้วยการเป็น хотสปอต Wi-Fi เคลื่อนที่

ช่วยเหลือ - เปิดกล่องโต้ตอบที่มีข้อมูลเกี่ยวกับ хотสปอต Wi-Fi เคลื่อนที่ ตลอดจนคำแนะนำเกี่ยวกับที่ที่คุณสามารถเรียนรู้เพิ่มเติม

เคล็ดลับ!

คุณสามารถใช้ทั้งการปล่อยสัญญาณผ่าน USB และ хотสปอต Wi-Fi แบบพกพาได้

การแบ่งปันการเชื่อมต่อ ข้อมูลของโทรศัพท์โดย เป็นฮอตสปอต Wi-Fi

- 1 บนหน้าจอหลัก ให้แตะแท็บ
แอปพลิเคชัน เลือก **ตั้งค่า**
- 2 แตะ **ระบบไร้สายและเครือข่าย** และเลือก **ฮอตสปอต
เคลื่อนที่**
- 3 คลิกเลือก **ฮอตสปอต Wi-Fi
เคลื่อนที่**
 - หลังจากรอสักครู่โทรศัพท์จะ
เริ่มบรอดคาสต์ชื่อเครือข่าย
Wi-Fi (SSID) ซึ่งให้คุณเชื่อมต่อ
โทรศัพท์กับคอมพิวเตอร์
หรืออุปกรณ์อื่นเพิ่มเติมได้ถึง
ห้าเครื่องการแจ้งเตือนแบบตอ
เนื่อง  จะถูกเพิ่มลงในแถบ
สถานะและแถบการแจ้งเตือน
 - เมื่อมีการเลือก **ฮอตสปอต
Wi-Fi เคลื่อนที่** คุณสามารถ
เปลี่ยนแปลงชื่อเครือข่ายหรือ
ป้องกันฮอตสปอต Wi-Fi
เคลื่อนที่ได้
- 4 ยกเลิกการเลือก **ฮอตสปอต
Wi-Fi เคลื่อนที่** เพื่อหยุด

การแบ่งปันการเชื่อมต่อข้อมูล
ผ่าน Wi-Fi

หมายเหตุ:

เมื่อคุณเปิดฮอตสปอต Wi-Fi
แบบพกพาครั้งแรก คุณจะต้อง
ตั้งรหัสผ่านเพื่อป้องกันการใช้การ
เชื่อมต่อข้อมูลร่วมกัน

การเปลี่ยนชื่อหรือรักษา ความปลอดภัยของฮอต สปอตเคลื่อนที่

คุณสามารถเปลี่ยนชื่อเครือข่าย
Wi-Fi (SSID) ของโทรศัพท์
ของคุณ รวมทั้งรักษาความปลอดภัย
ของเครือข่าย Wi-Fi ได้

- 1 บนหน้าจอหลัก ให้แตะแท็บ
แอปพลิเคชัน เลือก **ตั้งค่า**
- 2 แตะ **ระบบไร้สายและเครือข่าย**
และเลือก **ฮอตสปอต
เคลื่อนที่**
- 3 ให้ความสนใจว่าเลือก **ฮอตสปอต
Wi-Fi เคลื่อนที่** ไว้แล้ว
- 4 แตะ **ตั้งค่าฮอตสปอต Wi-Fi
เคลื่อนที่**
- 5 แตะ **กำหนดค่าฮอตสปอต**

ตั้งค่า

Wi-Fi

- กล้องโดตอบ กำหนดค่าฮอตสปอต **Wi-Fi** จะเปิดขึ้น
- คุณสามารถเปลี่ยน SSID (ชื่อ) ของเครือข่าย ที่จะปรากฏให้คอมพิวเตอร์เครื่องอื่นๆ เห็น เมื่อทำการสแกนหาเครือข่าย Wi-Fi
- นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)
- หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟิวเจอร์รหัสผ่านจะถูกเพิ่มลงในกล่องโดตอบ กำหนดค่าฮอตสปอต **Wi-Fi** หากคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวอีกครั้งเมื่อทำการเชื่อมต่อฮอตสปอตของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถแตะ **เปิด** ในเมนู **ระบบป้องกัน** เพื่อลบระบบ

ป้องกันออกจากเครือข่าย Wi-Fi ของคุณ

ข้อควรระวัง!






หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็น **เปิด** คุณจะไม่สามารถป้องกันการให้บริการออนไลน์โดยไม่ได้รับอนุญาตและอาจมีค่าใช้จ่ายเพิ่มเติมคุณควรเปิดใช้งานตัวเลือกระบบป้องกันเสมอ เพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

6 แตะ บันทึก

วิธีใช้ On-Screen Phone

On-Screen Phone ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ คุณยังสามารถควบคุมโทรศัพท์มือถือจากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

ไอคอน On-Screen Phone

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์ หรือยกเลิกการเชื่อมต่อ
-  หมุนหน้าต่าง On-Screen Phone (ต้องใช้แอปพลิเคชันที่รองรับการหมุนเท่านั้น)
-  เปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

คุณสมบัติ On-Screen Phone

- การถ่ายโอนและการควบคุมแบบเรียลไทม์: แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- การควบคุมเมาส์: ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอม

พีวีเดอร์

- ป้อนข้อความด้วยแป้นพิมพ์: ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์
- ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์): ส่งไฟล์จากโทรศัพท์ (เช่น ภาพถ่าย วิดีโอ เพลง และไฟล์ Polaris Office) ไปยังคอมพิวเตอร์ เพียงแค่คลิกขวาแล้วลากเพื่อส่งไฟล์ไปยังคอมพิวเตอร์
- ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์): ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง On-Screen Phone ไฟล์ที่ส่งจะถูกจัดเก็บในการด microSD
- การแจ้งเตือนเหตุการณ์แบบเรียลไทม์: ป๊อปอัพข้อความเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความตัวอักษร/มัลติมีเดียมาถึง ตลอดจนแจ้ง

ตั้งค่า

เมื่อถึงเวลาปลุกและแจ้งเตือนเหตุการณ์

โปรดทราบ: การดูตัวอย่างในกล่องถ่ายรูป วิดีโอ และเนื้อหาจากโหมด 3D (3D เกมส์& แอปฯ, คู่มือ 3D, YouTube 3D, 3D คลังภาพ) ไม่รองรับใน OSP ดังนั้นจึงไม่สามารถใช้ได้บนคอมพิวเตอร์

วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์

ไปที่ หน้าหลัก LG (<http://www.lg.com>) แล้วไปที่ **บริการ > การสนับสนุนโทรศัพท์มือถือ > ดาวน์โหลดเครื่องมือสนับสนุนมือถือ LG** ลงในคอมพิวเตอร์ หากคุณดาวน์โหลด LG PC Suite IV โปรแกรม On-Screen Phone จะถูกดาวน์โหลดลงในคอมพิวเตอร์ของคุณด้วย จากนั้น คุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

หมายเหตุ: ไปที่ **ตั้งค่า > ตั้งค่าที่เก็บ SD**

การ์ดและเครื่อง และต้องแน่ใจว่าไม่ได้ทำเครื่องหมายที่ช่อง "ที่เก็บข้อมูลเท่านั้น"

วิธีเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

การเชื่อมต่อ USB:

- 1 เปิดวิหารดการเชื่อมต่อ เลือก "การเชื่อมต่อผ่านสายเคเบิล USB" แล้วคลิก "ถัดไป"
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB แล้วคลิก "ถัดไป"
- 3 ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" รหัสผ่านเริ่มต้นคือ "0000" คุณสามารถแก้ไขรหัสผ่านได้ใน **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า On-Screen Phone**
- 4 คลิก "ตกลง" เพื่อออกจากหน้าต่าง

การเชื่อมต่อไร้สายด้วยบลูทูธ:

- 1 ในโทรศัพท์ ให้ไปที่ **ตั้งค่า > ระบบไร้สายและเครือข่าย > การตั้งค่า เลิก** เปิดบลูทูธ แล้วเลือก **ค้นหาได้**
- 2 หากเคยเชื่อมต่อโดยใช้สายเคเบิลมาก่อนหน้านี้ ให้รับวิศวกรรมการเชื่อมต่อใหม่เพื่อสร้างการเชื่อมต่อใหม่
- 3 รับวิศวกรรมการเชื่อมต่อในคอมพิวเตอร์ โดยเลือก "การเชื่อมต่อบลูทูธ" แล้วเลือก "ถัดไป"
- 4 วิศวกรจะเริ่มต้นค้นหาโทรศัพท์ที่จับบลูทูธ เมื่อโทรศัพท์ที่คุณต้องการเชื่อมต่อปรากฏขึ้น ให้คลิก "หยุด" เพื่อหยุดการค้นหา
- 5 เลือก "LG-P920" จากรายการอุปกรณ์ แล้วคลิก "ถัดไป" คุณสามารถเปลี่ยนชื่ออุปกรณ์หากต้องการ
- 6 ยอมรับคำขอจับคู่ในโทรศัพท์ของคุณ และเลือก **ถัดไป** ในคอมพิวเตอร์


7 ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" (รหัสผ่านเริ่มต้นคือ "0000")

8 แตะ "ตกลง" เพื่อออก

ในการตรวจสอบการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

เมื่อเชื่อมต่ออุปกรณ์แล้ว ให้ลากแถบการแจ้งที่ด้านบนของหน้าจอหลักลงมาเพื่อตรวจสอบสถานะการเชื่อมต่อ On-Screen Phone

การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

คลิก  ที่ด้านบนซ้ายของหน้าต่าง On-Screen Phone หรืออีกวิธีหนึ่งคือ ให้ลากแถบการแจ้งที่ด้านบนของหน้าจอหลักลงมา แล้วเลือก "On-Screen Phone" แตะ "ใช่" ในหน้าต่างเล็ก การเชื่อมต่อ

หมายเหตุ: คุณต้องรีสตาร์ทโทรศัพท์

ตั้งค่า

หลังจากเปิดบริการ On-Screen Phone

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้งานได้อัตโนมัติเมื่อ LG ให้บริการเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณ

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบ

ว่าการถอดสายข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตเฟิร์มแวร์โทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้งานได้เมื่อ LG ให้บริการเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

ครั้งแรก, คุณสามารถตรวจสอบซอฟต์แวร์

ได้จาก โทรศัพท์ของคุณ:

ตั้งค่า > เกี่ยวกับโทรศัพท์ > ซอร์ฟแวร์อัปเดต > ตรวจสอบอัปเดตในตอนนี้

คุณยังสามารถจัดกำหนดเวลา
การอัปเดตใหม่เป็น 1 ชั่วโมง,
4 ชั่วโมง, 8 ชั่วโมง หรือ 24
ชั่วโมงก่อนการอัปเดต

ในกรณีนี้ แอปพลิเคชันจะแจ้ง
คุณให้อัปเดตเมื่อเวลาหมดลง
แล้ว คุณยังสามารถจัดกำหนด
เวลาใหม่ หรืออัปเดตด้วยตัวคุณ
เองได้อีกด้วย

หมายเหตุ: ข้อมูลส่วนตัวของ
คุณจากพื้นที่การจัดเก็บภายใน
โทรศัพท์รวมถึงข้อมูลเกี่ยวกับ
แอคเคาท์ Google ของคุณและ
แอคเคาท์อื่นๆ, ข้อมูลระบบหรือ
แอปพลิเคชันและการตั้งค่าของ
คุณ, แอปพลิเคชันที่ดาวน์โหลด
และใบอนุญาต DRM อาจสูญ
หายในกระบวนการอัปเดตซอฟต์แวร์
ของโทรศัพท์ ดังนั้น LG ขอ
แนะนำให้คุณสำรองข้อมูลส่วน
ตัวก่อนการอัปเดตซอฟต์แวร์ของ
โทรศัพท์ LG ไม่รับผิดชอบต่อ

การสูญหายของข้อมูลส่วน
ตัวใดๆ

ซิงค์โทรศัพท์ของคุณกับ คอมพิวเตอร์

คุณสามารถใช้ LG PC Suite
เพื่อซิงค์รายชื่อและปฏิทิน
Outlook ระหว่างคอมพิวเตอร์
และโทรศัพท์ของคุณ และสามารถ
ใช้อัปเดตเฟิร์มแวร์โทรศัพท์
ของคุณเป็นเวอร์ชันล่าสุดได้

การติดตั้ง LG PC Suite

ใช้ LG PC Suite installer ที่
โหลดลงหน้าไว้ในหน่วยความ
จำโทรศัพท์

- 1 เชื่อมต่อโทรศัพท์ของคุณกับ
คอมพิวเตอร์โดยใช้สาย USB
ที่มาพร้อมกับโทรศัพท์
- 2 เมื่อหน้าจอ 'เชื่อมต่อ USB
แล้ว' ปรากฏบนโทรศัพท์
ให้แตะ 'เปิดใช้ที่เก็บข้อมูล
USB' และเลือก 'ตกลง'
เพื่อแสดงหน้าจอ
'กำลังใช้ที่เก็บข้อมูล USB'

ตั้งค่า

- 3 บนคอมพิวเตอร์ โทรศัพท์ที่เชื่อมต่อจะแสดงเป็นดิสก์แบบถอดได้ ไปที่ดิสก์แบบถอดได้นี้ และเปิดโฟลเดอร์ **LGE**
- 4 คัดลอกโฟลเดอร์ **pc_suite** ไปยังคอมพิวเตอร์
- 5 บนโทรศัพท์ของคุณ ให้กดปุ่มหน้าหลัก และไปที่ แอปพลิเคชัน > ตั้งค่า > ความจำการ์ด **SD** และ เครื่อง จากนั้นปิดการตั้งค่า 'ที่เก็บข้อมูลเท่านั้น'
- 6 ยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์
- 7 บนคอมพิวเตอร์ ให้ไปที่โฟลเดอร์ **pc_suite** ดับเบิลคลิกที่ **LGInstaller.exe** และทำตามคำแนะนำบนหน้าจอ เพื่อติดตั้ง LG PC Suite

ลิขสิทธิ์และเครื่องหมายการค้า

สิทธิ์ในเทคโนโลยีและผลิตภัณฑ์ทั้งหมดที่รวมอยู่ในอุปกรณ์นี้เป็นทรัพย์สินของเจ้าของนั้นๆ:

- Bluetooth® เป็นเครื่องหมายการค้าจดทะเบียนของ Bluetooth SIG, Inc.
- โลโก้ microSD และ microSD เป็นเครื่องหมายการค้าของ SD Card Association
- Google, Android, Google Search, Google Calendar, Google Maps, Google Latitude, Gmail, YouTube, Google Talk และ Android Market เป็นเครื่องหมายการค้าของ Google, Inc.
- Wi-Fi เป็นเครื่องหมายการค้าจดทะเบียนของ Wireless Fidelity Alliance, Inc.
-  ใช้เทคโนโลยี Adobe® Flash® Player โดย Adobe Systems Incorporated

• DivX Mobile

DIVX

HD

เกี่ยวกับ DIVX VIDEO:

DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, Inc. อุปกรณ์นี้เป็นอุปกรณ์ DivX Certified® อย่างเป็นทางการ ซึ่งสามารถเล่นวิดีโอ DivX ได้สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ www.divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน **DivX Certified®**

ลิขสิทธิ์และเครื่องหมายการค้า

สำหรับเล่นวิดีโอ DivX®
ไตสูงสุด HD 720p
รวมถึงขอมูลฟรีเมียม
DivX®, DivX Certified®
และโลโก้ที่เกี่ยวข้องเป็น
เครื่องหมายการค้าของ
DivX, Inc และใช้โดยได้รับ
อนุญาต ได้รับความคม
ครองตามสิทธิบัตรของ
สหรัฐอเมริกาตั้งต่อไปนี้:
7,295,673; 7,460,668;
7,515,710; 7,519,274

ประกาศ!

ซอฟต์แวร์โอเพ่นซอร์ส
ในการซอร์สโค้ดที่
เกี่ยวข้องตาม GPL, LGPL,
MPL และใบอนุญาต
โอเพ่นซอร์สอื่นๆ โปรดไป
ที่ <http://opensource.lge.com/> เงื่อนไขใบอนุญาต
การปฏิเสธการรับผิดชอบ
และประกาศที่อ้างอิงถึงทั้ง
หมดสามารถดาวน์โหลดได้
พร้อมกับซอร์สโค้ด

- Wi-Fi® และ Wi-Fi Protected Access® เป็นเครื่องหมายการค้าจดทะเบียนของ Wi-Fi Alliance

- **DTS 2.0 Channel**



ผลิตภายใต้การ
อนุญาตของ
DTS Licensing

Limited

DTS และสัญลักษณ์เป็น
เครื่องหมายการค้าจดทะเบียน,
& DTS 2.0 Channel และ
โลโก้ DTS เป็นเครื่องหมาย
การค้าของ DTS, Inc.
ผลิตภัณฑ์รวมถึงซอฟต์แวร์
© DTS, Inc. สงวนลิขสิทธิ์

- **Dolby Digital Plus**



ผลิตภายใต้การอน
ุญาตของ Dolby Laboratories
Dolby และสัญลักษณ์ตัว
อักษร D สองตัว เป็นเครื่องหมาย
การค้าของ Dolby
Laboratories

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-P920 (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อุปกรณ์ชาร์จ



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-P920
ของคุณกับคอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
LG-P920



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ), +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P920

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1
EN 300 328 v1.7.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006 / EN 62209-1:2006 / EN 62209-2:2010
EN 301 511 v9.0.2
EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

3, May, 2011

Signature of representative

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย/เครือข่ายขาดหาย	ระดับสัญญาณอ่อนภายนอกพื้นที่เครือข่าย GSM ผู้ให้บริการใช้บริการใหม่	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย ตรวจสอบว่าซิมการ์ดใช้งานมานานกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ที่สุด
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำ รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	รหัสเริ่มต้นคือ [0000] หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือดองลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการหรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN 2

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดค้างไว้นานเกินไป ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที เสียบอุปกรณ์ชาร์จให้แน่นขึ้น ทำความสะอาดขั้วสัมผัสแบตเตอรี่ ถอดแบตเตอรี่ออกและใส่เข้าไปใหม่
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่ อุณหภูมิภายนอกร้อนหรือเย็นเกินไป มีปัญหาที่ขั้วสัมผัส	ชาร์จแบตเตอรี่ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่และทำความสะอาดหากจำเป็น เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น หากอุปกรณ์ชาร์จไม่ทำงานให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
หมายเลขโทรศัพท์ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบการตั้งค่า
ไม่สามารถรับ/ส่งข้อความตัวอักษรและรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน
การ์ด SD ไม่ทำงาน	สนับสนุนระบบไฟล์ FAT16, FAT32	ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ดหรือฟอรัมเมตการ์ด SD โดยใช้โทรศัพท์

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หน้าจอไม่แสดงขึ้นเมื่อจัมรับสาย	เซนเซอร์รับสัญญาณมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด
ไม่มีเสียง	อยู่ในโหมดสั่นหรือโหมดปิดเสียง	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสั่นหรือโหมดปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ถอดแล้วใส่แบตเตอรี่กลับเข้าไปอีกครั้งเปิดโทรศัพท์ หากโทรศัพท์ล๊อคและไม่ทำงาน ให้กดปุ่มเปิด/ปิดเครื่อง/ล๊อค ค้างไว้ 10 วินาทีเพื่อปิดเครื่อง จากนั้นกดปุ่มเปิด/ปิดเครื่อง/ล๊อคอีกครั้งค้างไว้ 3 วินาทีเพื่อรีบูตโทรศัพท์ ลองใช้บริการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน
72/127 ถ.สมเด็จพระเจ้าตากสิน
แขวงบुकคโโล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - อาทิตย์, 07:00 - 19:00น.

Call center : 0-2878-5757



LG-P920 User Guide - English

This manual contains information on Android Gingerbread Operating System version 2.3. If your phone is using Android Froyo Operating System version 2.2, please refer to page 94 to update your phone.

- Some parts of this manual may not apply to your phone, depending on its software or your service provider.
- This handset is not recommended for the visually-impaired because it has a touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google Search, Maps, Gmail, YouTube, Talk and Market are trademarks of Google, Inc.



Contents

Guidelines for safe and efficient use	5
Important notice	12
Getting to know your phone	21
Installing the SIM card and battery	23
Charging your phone	24
Formatting the memory card	25
Your Home screen	27
Touch-screen tips	27
Lock your phone	29
Unlock screen	29
Home	29
Adding widgets to your home screen	30
Getting back to a recently used application	31
Notification drawer	31
Viewing the status bar	31
On-screen keyboard	33
Google Account Set-up	34
Creating your Google account	34
Signing in to your Google account	34
Calls/Contacts	36
Making a voice call	36
Making a video call	36
In Video call Menu	36
Calling your contacts	37
Answering and rejecting a call	37
Adjusting call volume	37
Making a second call	37
Viewing your call logs	38
Call settings	38
Contacts	40
Searching for a contact	40
Adding a new contact	40
Favorite contacts	40
Messaging/Email	42
Messaging	42
Sending a message	42
Changing your message settings	43
Setting up your email	43
Microsoft Exchange email account	43
Other (POP3, IMAP) email account	44
Composing and sending email	45
Working with account folders	46
Adding and editing email accounts	46
Social networking	48
Adding your account to your phone	48
Viewing and updating your status	48

Removing accounts from your phone.....	49	Multimedia	61
Facebook and Twitter	49	Gallery.....	61
Photos and videos	50	Music	61
Getting to know the viewfinder (Camera).....	50	Playing a song	62
Taking a quick photo	51	Using SmartShare	63
Once you've taken the photo	51	Transferring files using USB mass storage devices	65
Using the advanced settings (Camera).....	52	How to save music/video files to your phone.....	66
Viewing your saved photos	53	How to move contacts from your old phone to your current phone.....	66
Getting to know the viewfinder (Video camera).....	54	How to send data from your phone via Bluetooth.....	67
Shooting a quick video	55	HDMI.....	68
After shooting a video.....	55	Utilities	70
Using advanced settings (Video camera).....	55	Setting your alarm.....	70
Watching your saved videos	56	Using your calculator.....	70
Adjusting the volume when viewing a video	57	Adding an event to your calendar.....	70
3D photos and videos.....	57	Recording a sound or voice	71
Shooting a quick 3D video	59	Sending the voice recording	71
3D Space	60	Home Time Zone.....	71
YouTube 3D	60	3D Game Converter	72
3D Gallery.....	60	Editing videos.....	72
3D Camera	60	The Web	74
3D Games & Apps.....	60	Browser.....	74
3D Guide	60	Using options	74

Contents

Google applications.....	76	Sharing your phone's mobile data connection	88
Maps.....	76	Tethering & portable hotspot.....	88
Market.....	76	To share your phone's data connection as a portable Wi-Fi hotspot	89
Gmail.....	76	To rename or secure your portable hotspot.....	90
Talk	76	How to use On-Screen Phone.....	91
Google Search	76	On-Screen Phone icons.....	91
LG SmartWorld	77	On-Screen Phone features	91
How to Get to LG SmartWorld from Your Phone	77	How to install On-Screen Phone on your PC.....	92
How to use LG SmartWorld.....	77	How to connect your mobile phone to your PC	92
Settings	79	To check the phone-to-PC connection	93
Wireless & Networks	79	To disconnect your phone from your PC	94
Sound.....	80	Phone Software update	94
Display	81	Sync your phone with your computer.....	95
Gesture	81	Copyrights and trademarks	97
Location & security	82	Accessories	99
Applications	83	Technical data	100
Accounts & sync	84	Troubleshooting.....	101
Privacy	84		
SD card & phone storage	85		
Language & keyboard	85		
Voice input & output.....	85		
Accessibility	87		
Date & time	87		
About the phone	87		
Wi-Fi	87		
Turn on Wi-Fi	87		
To connect to Wi-Fi	87		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P920 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.368 W/kg (10 g) and when worn on the body is 0.562 W/kg(10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

Guidelines for safe and efficient use

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use LG batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to do so by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It

- may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
 - Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
 - Do not charge the phone when it is on soft furnishings.
 - The phone should be charged in a well ventilated area.
 - Do not subject this unit to excessive smoke or dust.
 - Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
 - Do not tap the screen with a sharp object as it may damage the phone.
 - Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
 - Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
 - Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone

Guidelines for safe and efficient use

near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped

with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if

the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It contains small parts which may cause a choking hazard if detached.

Guidelines for safe and efficient use

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it

no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places as this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

3D Content Viewing Precautions

1. When viewing 3D content:

- The vision of young children may still be developing. 3D contents should not be viewed by children under the age of 5.
- Some viewers may experience symptoms of discomfort such as nausea, eye strain, fatigue and dizziness when viewing 3D content. All viewers should take regular breaks to help avoid these symptoms. Each person is different, so determine the frequency and length of

breaks that works for you. If you experience any symptoms of discomfort, discontinue viewing and take a break until the symptoms go away. If symptoms continue even after you stop viewing and take a break, consult a doctor.

- Follow the guidelines provided with your mobile device regarding viewing distances and angles. Watching 3D content within the recommended viewing range may lessen the likelihood that you could experience any discomfort.
- ### 2. A responsible adult should supervise the viewing of 3D content by children to make sure they follow recommended use.


Important notice

Please check this section to see if any problems you have had with your phone are described, before taking the phone in for servicing or calling a service representative.

1. Phone memory

When the available space in your phone memory is less than 10%, your phone can't receive new messages. You will need to delete some data from your phone memory, such as applications or messages, to provide more memory space.

To manage the application:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll down to the application you want to uninstall and select it.
- 3 Tap **Uninstall** and touch OK to uninstall the selected application.

WARNING

If you delete your data stored on the internal SD card of your phone, you cannot restore it using the Factory data reset option (Settings > Privacy > Factory data reset).

2. Optimising battery life


You can extend your battery's life by turning off features that you don't need that run in the background. You can also monitor how applications and system resources use battery power.

To extend the life of your battery:


- Turn off radio communications that aren't in use. Turn off Wi-Fi, Bluetooth or GPS when not in use.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.

- Some applications you have downloaded may reduce your battery's life.

To check the battery charge level:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > About phone > Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of a full charge) are displayed at the top of the screen.

To monitor and control battery use:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > About phone > Battery use**.
- 2 The top of the screen displays the battery usage time. This is either how long since your phone was last connected to a power source or, if connected to a power source, how long since your phone last ran on battery

power. The body of the screen lists the applications or services using battery power, from highest consumption to least.

3. Installing an open source OS

If you install an open source OS on your phone and do not use the OS provided by the manufacturer, your phone may malfunction.

WARNING


If you install and use an OS other than the one provided by the manufacturer, your phone will not be covered by the warranty.

Important notice

WARNING

To protect your phone and personal data, only download applications from trusted sources such as Android Market. If some applications are incorrectly installed on your phone, your phone may not work properly, or serious errors may occur. You will need to remove these applications and all their data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can draw your own unlock pattern by connecting four or more dots. If you set a pattern, the phone screen will lock. To unlock the phone, enter the pattern you have set on the screen. On the home screen, touch **Applications** tab  and select **Settings > Location & security > Set up screen lock > Pattern**. Follow the screens to be

guided through drawing a screen unlock pattern. Select Next to continue to next screen.

Caution: Create a Gmail account first, before setting an unlock pattern.

WARNING

Precautions to take when using Pattern Lock

It is essential that you remember the unlock pattern you set. You have five chances to enter your unlock pattern, PIN or password. Once you have used all five chances, you can try again 30 seconds later.

When you can't recall your unlock Pattern, PIN, or Password:

- 1 If you have forgotten pattern:**
If you've created a Google account on the phone, tap the **Forgot pattern** button. Then, you are required to sign in with your Google account to unlock your phone. If you haven't created a

Google account on the phone or you forgot it, you need to perform a Hard reset.

2 If you have forgotten PIN or Password.

If you forgot your PIN or Password, you need to do Hard reset.

5. Using hard reset

If it does not restore to the original condition, use Hard Reset to initialise your phone.

When the phone is turned off, Press and hold 3D key + Volume down key + Power key for over ten seconds.

When screen shows LG logo, release power key.

After screen shows hard reset screen, release other keys.

Choose Yes using Volume down key and press 3D key to select. Leave your phone over a minute while it performs hard reset, then select **reboot system now**.

Caution: If you perform a Hard reset, all user applications and user data are deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.


6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone you need to access a wireless access point or “hotspot.” Some access points are open, and you can simply connect to them. Others are hidden or have other security features, so you must configure your phone to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

Important notice


To turn Wi-Fi on and connect to a Wi-Fi network:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and start scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are prompted to confirm you want to connect to that network by touching **Connect**.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4 The status bar displays icons indicating Wi-Fi status.

7. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open a further application. You do not need to quit an application before opening another one. Use and switch between several open applications. Android manages each application, stopping and starting it as needed, to ensure idle applications don't consume resources unnecessarily.

To stop using an application:

- 1 On the home screen, touch the **Applications** tab  and select **Settings> Applications> Manage applications**.
- 2 Scroll to the chosen application and touch **Force Stop** to close it.

TIP!

Going back to a recent Application

Touch and hold the **Home** key. A screen will appear listing the applications you have used recently.

8. Installing the LG PC suite on your PC

To synchronise your phone with your PC via a USB cable, you need to install the LG PC suite program on your PC. You can download this program from the LG website at www.lg.com. Go to <http://www.lg.com> and select your region, country and language. Visit the LG website for more information on installing and using the program.

LG PC SUITE

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use your mobile phone's functions on your PC.

Major LG PC Suite IV functions

- Create, edit and delete phone data easily.
- Synchronise data from a PC or phone (contacts, calendar, messages (SMS)).
- Transfer multimedia files (photo, video and music) easily with a simple drag & drop between your PC and phone.

Important notice

- Transfer messages from your phone to your PC.
- Software update without losing your data


The LG-P920 does not support:

- PC Suite connection via Bluetooth
- Internet Kit in PC Suite
- To-do in Calendar
- Java Applications

For more information, please refer to the LG PC Suite IV user guide. This can be found in the Help menu after installing LG PC Suite IV.

9. Connecting your phone to a computer via USB

To transfer files in your microSD card using USB devices:

- 1 Install your microSD card on your phone. (It may already be inserted in your phone.)
- 2 Before connecting the USB data cable, make sure the **Mass storage** mode is enabled on your phone. (On the **Applications** tab , choose **Settings > SD card & phone storage > Mass storage only**)
- 3 Use the USB cable with your phone to connect it to a USB port on your computer. Touch **Turn on USB storage**. You will get a notification that the USB is connected.

When the phone is connected as USB storage, you will receive a notification. Your phone's microSD card is installed as a drive on your

computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. They must therefore be removed manually.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**. During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card such as camera, gallery and music functions. To disconnect your phone from the computer, carefully follow the computer's instructions about how to disconnect USB devices, to avoid losing information on the card.

- 1 Safely disconnect the USB device from your computer.
- 2 Open the notification drawer and touch **Turn off USB storage**.
- 3 Touch **Turn off** in the dialogue

box that opens.

WARNING

Do not insert or remove the microSD card when the phone is on. This might damage the microSD card as well as your phone, and the data stored on the microSD card could be corrupted. To remove the microSD card safely, from the Home screen press the **Menu** key and touch **Settings > SD card & phone storage > Unmount SD card**.

10. Unlock screen when using a data connection

The LCD display will go dark if untouched for a set time when using a data connection. Touch it to turn it on again.

Important notice

11. Do not connect your phone when you turn your PC on and off

Make sure you disconnect your phone and PC via a data cable to avoid any harm to your PC.

12. Hold your phone upright

Please hold your phone straight and level, like a normal phone. The LG-P920 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this will impair performance. While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. This may affect call quality.

13. If the screen freezes


If the phone does not respond to user input, or the screen freezes:

Remove the battery, reinsert it and switch on the phone. If it still does not work, please contact the service centre.

Getting to know your phone

To turn on the phone, hold down the **Power** key for 3 seconds.

To turn off the phone, hold down the **Power** key for 3 seconds, touch Power off and touch OK.

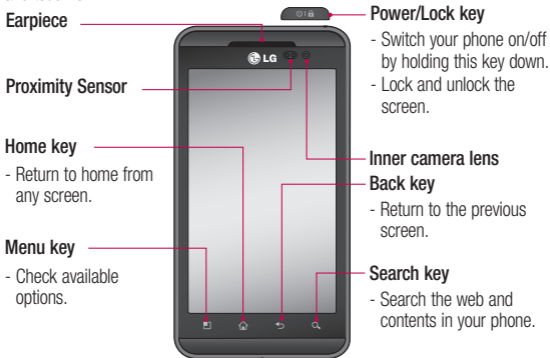

⚠ WARNING: Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This could cause the sensor to malfunction.

TIP! Touch the Menu key whenever you tap an application to see what options are available.

TIP! If the LG-P920 displays an error message when you use it, or if you cannot turn it on, remove the battery, put it back in, then turn it on again after 5 seconds.

Getting to know your phone

Stereo earphone connector

Power/Lock key



Volume keys

- On the home screen: control ringer volume.
- During a call: control your earpiece volume.
- When playing music: control volume at any time.

Charger, micro USB cable connector

HDMI

3D key

- Access 3D Space directly by holding this key down.
- In Camera mode: take a photo by pressing this key.



Back cover

Battery

SIM card slot

microSD memory card slot


Camera lens




Installing the SIM card and battery

Before you can start using your new phone, it has to be set up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in one hand. With the other hand, firmly press down on the centre of the battery cover, while pulling the top away with your forefinger. Then lift off the battery cover.

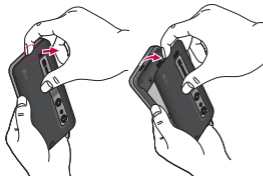

- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

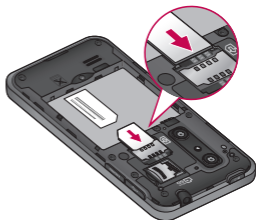

- 3 Insert the battery in place by aligning the gold contacts on the phone and the battery.



Getting to know your phone

4 Replace the phone's back cover.




NOTE: The battery must be fully charged on first use to extend battery lifetime.


NOTE: The battery must be fully charged on first use to extend battery lifetime.

To insert a memory card:



1 Remove the back cover.

Charging your phone

The charger connector is on the top left side of your LG-P920. Insert the charger and plug it into an electrical socket. Your LG-P920 must be charged until you can see .

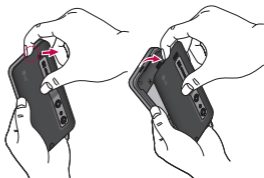


- 2 Insert the memory card into the slot. Make sure the gold contact area on the card is facing downwards.

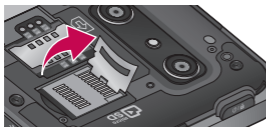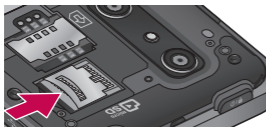

Formatting the memory card

Your memory card may already be formatted. If not, you must format it before you can use it.

NOTE: All files on your memory card are deleted when it is formatted.

- 1 On your home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch Settings.
- 3 Scroll and touch SD card & phone storage.
- 4 Touch Unmount SD Card and touch OK to confirm it.
- 5 Touch Format SD card > Format SD card > Erase everything .
- 6 If you set a pattern lock, enter it and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting, as all files will have been deleted.

Getting to know your phone

TIP! If your memory card is already unmounted, you can use the following steps to format it.

Touch **Applications** tab  > **Settings** > **SD card & phone storage** > **Format SD Card.**



WARNING Do not insert or remove the memory card while the phone is on. Otherwise it may damage the memory card and your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, select **Applications** > **Settings** > **SD card&phone storage** > **Unmount SD card.**

Your Home screen

Touch-screen tips

Here are some tips on navigating around your phone.

Touch - To choose a menu/option or open an application, touch it.




Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.



Drag - To scroll through a list, or move slowly, drag across the touch screen.




Flick - To scroll through a list, or move quickly, flick across the touch screen (drag quickly and release).

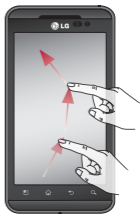

Your Home screen

Pinch and stretch -

To zoom out content or image, pinch on the screen by placing two fingers and bring them together. To zoom in, stretch content or image by moving the fingers away from each other.



NOTE:

- To select an item, touch the centre of the icon.
- Do not to press too hard: the touch screen is sensitive enough to pick up a light, steady touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using your LG-P920, press the **Power** key to lock it. This helps avoid accidental touches on the screen and saves battery power.

If you do not use the phone for a while, whatever screen you are viewing will be replaced by the lock screen to conserve the battery.

NOTE: If there are any programmes running when you set the pattern, they may keep running in lock mode. We recommend you to exit all programmes before entering lock mode to avoid unnecessary charges and to avoid battery consumption also (e.g. for phone calls, web access or data communications).

Unlock screen

To wake up your phone, press the **Power** key. The lock screen will appear. Touch and slide up the lock screen to unlock your home

screen. The last screen you viewed will open.

Home

Simply move your finger left or right to view them.

You can also customise each panel with widgets, shortcuts to your favourite applications, folders and wallpaper.

NOTE: Some screen images may vary depending on your phone provider.

On your home screen, you can view quick keys on the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use most.



Touch the **Phone** icon to bring up the touch-dialling pad to make a call.




Touch the **Contacts** icon to open your contacts.



Touch the **Messaging** icon to access the messaging menu. You

Your Home screen

can create a new message here.

 Touch the **Applications** tab at the bottom of the screen. You can then view all the installed applications. Just touch to scroll through your applications.


To open any application, simply touch the icon in the applications list.

NOTE: Pre-loaded applications may vary depending on your phone's software or your service provider.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets or folders to it. For more convenience when using your phone, put your favourite widgets on the home screen.

To add an icon to your home screen:


- 1 On the home screen, touch the **Menu** key  and select **Add**. Or long touch the empty part of

the home screen.

- 2 In the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
- 4 A new folder's icon will appear on the home screen. Long press on it and drag it to the desired location on the right panel and take your finger off the screen.

TIP! To add an application icon to the home screen from the **Applications** menu, touch and hold the application you want to add.


To remove an application icon from the home screen:

- 1 Touch and hold the icon you want to remove. The bin icon  will appear.
- 2 Drag and drop the application

icon to the bin icon .


NOTE: You cannot delete pre-loaded applications. (You can only remove their icons from the screen.)

Getting back to a recently used application


- 1 Touch and hold the **Home** key . The screen will give a pop up with icons for applications you have used recently.
- 2 Touch an icon to open its application. Or touch the **Back** key to go back to your current application.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

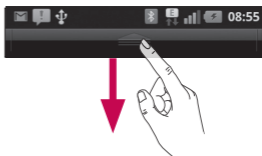

Alternatively, on the home screen touch the **Menu** key  and select **Notifications**. Here you can check and manage Ring, Wi-Fi, Bluetooth, GPS and Data Connection status, as well as other notifications.

Viewing the status bar















The status bar uses different icons to display phone information, such as signal strength, new messages, battery life and active Bluetooth and data connections.
















The table below explains the meaning of the icons you are likely to see in the status bar.

Your Home screen

13/05/2011    17:29

[Status bar]

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call on hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set

Icon	Description
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	On-Screen Phone connected
	3 more notifications not displayed
	Data is synchronising
	Download finished
	New email
	New Gmail


Icon	Description
	New Google Talk message
	New message
	Song is playing
	Upcoming event
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active
	GPS On


On-screen keyboard


You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field


where you want to enter text.

Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double-tap for all capitals.

 Tap to switch to the numbers and symbols keyboard. You can also hold this tab down to view the settings menu.

 Tap to view or long tap to change the writing language.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the on-screen keyboard.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 On the home screen, touch the **Applications** tab  to open the applications menu.
- 2 Tap **Gmail** and tap **Next > Create** to start the Gmail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When entering text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you have entered your name and username, tap **Next**. Your phone will communicate with Google servers and check username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign in**. Wait to sign in.
- 2 After sign in, you can use Gmail and Google services on your phone.
- 3 Once you have set up your Google account on your phone, it will automatically be synchronised with your Google account on the web. (This depends on your synchronisation settings.)

After sign in, you can use Gmail, Google Calendar and Android Market, download applications from Android Market and use other Google services on your phone.

IMPORTANT!





- Some applications, such as Calendar, Talk etc only work with the first Google account you add. If you plan to use more than one Google account with your phone, be sure to sign into the one you want to use with these applications first. Once you login to Google account, no option to sign out from the first google account and removal of first Google account ,but you can add/remove more Google accounts . When you sign in, your contacts, Gmail messages, calendar events and other information from these applications and services on the web are synchronised with your phone. The first time you open the


Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

- If you have an enterprise account through your company or another organisation, your IT department may have special instructions on how to sign into that account.

Calls/Contacts



Making a voice call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter “+” to make international calls, hold down .

TIP! To bring up the keypad during a call, touch **Dialpad**.

Making a video call


- 1 Touch  to open the keypad.
- 2 Enter the phone number as before.
- 3 Touch the **Video call** icon  to make a video call.

- 4 If you do not want to use the speaker phone, touch **Speaker** and make sure you have your headset plugged in.
- 5 While the video call is connecting, you will see your own image: after the other party answers, you will see their image on the screen. Adjust the inner camera position if necessary.
- 6 To end a video call, touch **End**.
Private: You can change the image instead of showing the live image.
Dialpad: Type in a number.
Hold: Mute the microphone and pause the video.
Mute: Mute the microphone.
Speaker: Speaker on or off.


In Video call Menu

- Capture** - You can capture an image of the other party or your own.
- Use back/front camera** - Switch cameras.

Calling your contacts

- 1 Touch  to open your list of contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call, by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

TIP! If you forgot to put the phone in silent mode then Tap on **Applications** tab  > **Settings** > **Gesture** > **Use motion gestures** > **Incoming call** > tick **Mute** and during Incoming Call tilt down the phone to mute the ringtone .


When screen is locked:

When your phone rings, drag Answer icon  to the right. Drag

Reject icon  to the left reject an incoming call.

When screen is unlocked:

When your phone rings, touch the Answer  icon

Touch the Decline icon  to Decline/Reject an incoming call.



TIP! Excuse messages

When you want to Reject a call, you can send a message quickly by using Excuse msg function. This is useful if you need to reply to a message during a meeting.

Adjusting call volume


To adjust the in-call volume during a call, use the volume up & down key on the right side of the phone.


Making a second call


- 1 During your first call, touch **Dialpad**  and dial the number. Also, you can search your contacts by touching **Contacts**  then scroll through the

Calls/Contacts

contact list or enter the first letter(s) of the contact you want to call by touching Search.

- 2 Touch the **Call** icon  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 4 Touch the hold list to toggle between calls.

NOTE: You can touch **Merge calls**  to make a conference call.

- 5 To end active calls, touch the **End** icon .

Viewing your call logs

On the home screen, touch  and choose the **Call log** tab.


View a complete list of all dialled, received and missed calls.

TIP! Touch any single call log entry to view the date, time and duration of the call.

TIP! Touch the **Menu** key, then touch **Delete All** to delete all recorded items.

Call settings

You can configure phone call settings, such as call forwarding and other special features offered by your carrier.

- 1 On your home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll down and touch **Settings**.
- 3 Tap **Call settings** and choose the options you want to adjust.

< Fixed Dialing Numbers >

Select Fixed Dialing Numbers to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, available from your operator. Only numbers on the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – Allows you to select your carrier's voicemail service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call reject – Set to ON to reject calls on list or all calls. If you make a Call reject list, touch **Call reject list** > **Menu key** > **New reject entry**. Then create New reject entry from Contacts, Call logs or New number.

Call forwarding – You can forward your Voice Calls /Video Calls to other numbers . Choose whether to forward calls Always , Forward calls when Busy, Unanswered and Unreachable.

Additional settings – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on another call. (This depends on your network provider.)

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent: some operators do not support this function.)

Call duration – View the duration of all calls, dialled calls, received calls and the last call.

Excuse messages – When you reject a call, you can send a message quickly using this function. This is useful if you need to reply to a message during a meeting.


Calls/Contacts

Video call settings – Change your video call settings.




Contacts


You can add contacts on your phone and synchronise them your Google account contacts or those in other accounts that support contact synchronisation.

Searching for a contact

- 1 On the home screen, touch  to open your contact list.
- 2 Touch **Search** and enter the contact name using the keypad.

Adding a new contact


- 1 On the home screen, touch , and enter the new contact's number, then touch the **Menu** key , and touch **Add to contacts**. Then choose whether to **Create new contact** or **Add to the existing**.
- 2 If you want to add a picture to the new contact, touch .

- 3 Choose between **Capture picture** or **Pick from gallery**.
- 4 Select the **Ringtone** by touching .
- 5 Touch a text field to open the touch keyboard and enter a new contact's name.
- 6 Enter your contact's details .
- 7 Touch **Save** to save the contact.


Favorite contacts

You can assign frequently-called contacts as favorites.

To add a contact to your favorites:

- 1 On the home screen, touch  to open your contact list.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star will turn gold.

To remove a contact from your Favorites list:


- 1 On the home screen, touch  to open your contact list.
- 2 Touch the **Groups** tab and select **Favorites**. Touch a contact to view their details.
- 3 Touch the gold star to the right of the contact's name. The star will turn grey and the contact will be removed from favorites.

Messaging/Email

Messaging


Your LG-P920 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch the  icon on the home screen, and touch New message to open a blank message.
- 2 Enter a contact name or number in the To field. As you enter the contact name, matching contacts will appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** below to start entering your message.
- 4 Touch **Send** to send your message.

TIP! You can touch the  icon to attach the file you want to send with your message.

- 5 The message screen opens, with your message after Recipient Name/Number. Responses will appear on the screen. As you view and send additional messages, a message thread will be created.

WARNING

The 160-character limit may vary from country to country, depending on language and how the SMS is coded.

WARNING

If an image, video or audio file or Subject is added to an SMS message, it will be automatically converted into an MMS message and you will be charged accordingly.


NOTE: If you get an SMS message during a call, there will be a beep sound notification.

Changing your message settings

Your LG-P920 message settings are pre-defined, so you can send messages immediately. You can change these settings based on your preferences.

Touch the **Messaging** icon on the home screen and touch the **Menu** key, then tap **Settings**.

Setting up your email

Touch the **Applications** tab  and select **Email**. If the email account is not set up, you need to start the email set up wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

You can select mailbox type, **MS Exchange** or **Others**.

Microsoft Exchange email account

Email address – Enter the account email address.

User name – Enter the account username.

Password – Enter the account password.

Domain – Enter the account domain (optional)

Server address – Enter the server address

Use SSL – Choose whether or not to use SSL for Microsoft Exchange.

Touch the **Next** button to connect the server.

Setup complete page will appear: you will need to enter “name” for account display and My name.

The account will now appear in the list of accounts in your Email folder.

Messaging/Email

Other (POP3, IMAP) email account

Email address – Enter the account email address.

Password – Enter the account password.

Setup complete page will appear and you will need to enter “name”.

The account will now appear in the list of accounts in your Email folder.

POP3 / IMAP4 – Select protocol type, either POP3 or IMAP4.

Incoming server – Enter the incoming email server address.

Secure type – TLS/SSL/Off.

Port number – Normally each account’s default number will be displayed.

Outgoing server – Enter the outgoing email server address.


SMTP Secure type – TLS/SSL/Off.

Port number – Normally each account’s default number will be

displayed.

The Accounts screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

- Touch the **Applications** tab  and select **Email**. The **Account list** screen appears.


TIP! In account lists, long tap on an email account and touch Add to homescreen option to display the account icon on the home screen. Touch the icon to go to straight to the inbox.

You can touch an account to view its Inbox. The default account from which you send email is indicated with a tick.

To open your Combined Inbox:

If you have configured email to send and receive email from more than one account, you can view all messages sent to all accounts in

your **Combined Inbox**.


- 1 Touch the **Applications** tab  and select **Email**.
- 2 Touch **Combined Inbox** (on the **Accounts** screen). Messages in the **Combined Inbox** are colour-coded on the left, by account, using the same colours used for your accounts in the **Accounts** screen.

Composing and sending email

To compose and send a message:

- 1 In the **Email** application, touch the **Menu** key, then touch **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts. Separate multiple addresses with commas.
- 3 Touch the **Menu** key and then touch **Add Cc/Bcc** to copy or

blind copy to other contacts/email addresses.

- 4 Enter the text of the message.
- 5 Touch **Attach** to attach the file you want to share with your message.
- 6 Touch **Send**.
If you're not ready to send the message, touch the **Menu** key and then touch **Save as draft** to save it in a **Drafts** folder. Touch a message in a Drafts folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key  and tap on **Yes** in **Save as draft** pop up before sending it. If you aren't connected to a network, for example if you're working in airplane mode, the messages you send are stored in your **Outbox** folder until you're connected to a network. If it contains any pending messages, the **Outbox** will be displayed on

Messaging/Email

the Accounts screen.

Please note that messages sent using an Exchange account will not be located on the phone, they will be stored on the Exchange server itself. If you want to see your sent messages in the **Sent** folder, then touch **Menu** key and touch on **Folders** then touch on **Sent** folder and select **Refresh** from the **Menu** options.


TIP! When a new email arrives in the inbox, there will be sound and vibration notification.

Working with account folders

Each account has **Inbox**, **Outbox**, **Sent**, **Drafts**, **Trash** and **Junk folders**. Depending on the features your account service provider supports, you may have additional folders.

Adding and editing email accounts

To add an email account:

- 1 Touch the **Applications** tab  and select **Email**.
- 2 Select **MS Exchange** or **Other**. If an email account is already set up, the wizard is not activated automatically. In this case, you need to touch the **Menu** key then tap **Add account**.

To change account settings:

- 1 Open the **Accounts** screen.
- 2 Touch the **Menu** key > **More** and then select **Settings**.

To delete an email account:

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens and touch **Remove** in the dialogue box to confirm.

TIP!

What's New

Shows notifications for a Missed call, an Unread message, Voice mail, Email in priority order. Notifications over a certain period of time are shown.

- 1 Choose **Applications > What's New.**
- 2 By tapping the  button, you can choose between list view or category view.



Social networking

You can use your phone for social networking and to manage your micro-blog in on-line communities. You can update your current status, upload photos and view your friend's status updates.

If you don't have an account, you can visit the website to set one up.

NOTE: Additional costs may be incurred when connecting to and using online services. Check data charges with your network provider.

Adding your account to your phone

- 1 Touch and hold the home screen. When various Widgets appear, choose **Social+**  and tap the  **Setting button**. You can also access in a different way. On the home screen, choose **Applications > Settings > Accounts & sync > Social+ settings**.
- 2 Choose the social networking

client application you want to use from Facebook for LG, Twitter for LG and MySpace for LG.

- 3 Enter your community email address and password, then tap **Log in**.
- 4 Wait while your details are confirmed with your community.
- 5 If you tap your community, you can see the current status.

Viewing and updating your status

- 1 You can view and update social community content using the **Social+**  widget at any time.
- 2 On the **Social+**  widget, choose the Social Networking service which you want to log in. You will then see your status and contents.
- 3 When you touch the input box, the screen will switch to update your current status with comments or upload photos.

TIP! You can update your status and upload photos simultaneously to Facebook for LG, Twitter for LG and MySpace for LG by selecting the checkbox.

NOTE: This depends on network services.

TIP! You can synchronise your friend contact to your contact list.

Removing accounts from your phone

- 1 Choose **Applications > Settings > Accounts & sync.**
- 2 Choose the account you want to delete, then touch **Remove account.**

Facebook and Twitter


- 1 On the home screen, touch the **Applications** tab  to open the applications menu.
- 2 Choose any social networking client application you want to use among Facebook and Twitter
- 3 Enter your email address and the password that you set up on your community, then tap Log in.
- 4 Wait while your details are checked with your community.
- 5 If you tap your community, you can see the current status of your social community.

Photos and videos

Getting to know the viewfinder (Camera)

Zoom - Zoom in or out. Alternatively, you can use the side volume keys.

Switch camera - You can move to the internal camera from the external one.

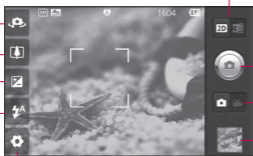

Transition between 2D - 3D modes - Touch to switch photo shoot mode between 2D and 3D.

Taking a photo

Video mode - Slide this  icon to the right to switch to video mode.

Gallery - Touch the last photo you took to view. This enables you to access your gallery and view saved photos within camera mode.


Settings - Touch this icon to open the settings menu. See Using the advanced settings.

Flash - Allows you to turn on the flash when taking a photo in a dark place.

Brightness - This defines and controls the amount of light entering the image. Slide the brightness indicator along the bar towards "-" to decrease the image brightness and towards "+" to increase it.

TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To restore the options, touch the screen again.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone horizontally, point the lens towards the subject which you want to photograph.
- 3 Touch the capture icon .
- 4 When the image is focused, the focus indicators turn green and the image will be captured.

Notice: A shading issue may occur when you take a picture indoors, due to the characteristics of the camera. (Shading means a colour difference between centre and sides.)

Once you've taken the photo

Your captured photo will appear on the screen.

Share Touch to share it via **Bluetooth, eBuddy XMS, Google+, Facebook,**

Social+, Twitter, Picasa, Messaging, Gmail or Email.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


TIP! If you have a social networking site account and set it up on your phone, you can share your photos with your community.

Set as Touch to set the image as **Contact icon** or **Wallpaper**.

Rename Touch to edit the name of the captured picture.

Edit Touch to edit the photo you took.


 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view the last photo you took.

Photos and videos

Using the advanced settings (Camera)

In the viewfinder, touch  to open all the advanced options.

You can change the camera setting by scrolling the list. After selecting an option, touch the **Back** key.

Focus – Select the focus option from **Auto**, **Macro**, **Continuous AF** and **Face tracking**.

Image size – Touch to set the size (in pixels) of the picture you are taking.

Scene mode – Choose between **Auto**, **Portrait**, **Landscape**, **Sunset** and **Night**.

White balance – Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Colour effect – Choose a colour tone for your new photo. Choose between **None**, **Sepia**, **Black&White**, **Negative**, **Vivid** and **Solarize**.

Timer – The self-timer allows you to set a delay before a picture is taken after pressing the shutter.

Shot mode – Select shooting mode from **Normal** or **Continuous shot**.

Image quality – Choose between **Super Fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will be larger, meaning you'll be able to store fewer photos in the memory.

Auto review – If you set **Auto review** to on, it will automatically show you the picture you have just taken.



Shutter sound – Select one of the four shutter sounds.

Tag location – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available

when location service is activated.

Storage – Select either Internal memory or **SD card** to save images.


-  Restore all camera default settings.
-  Touch this if you want to know how this function operates. This will provide you a quick guide.

TIP! When you exit the camera, some settings will return to their defaults. Check the camera settings before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change image colour or quality features you will see the image preview change behind the settings menu.

Viewing your saved photos

1 You can access your saved photos from within camera mode. Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to see slide show. Touch **Menu** and select the options you want.

 Touch to share the contents.

 Touch to delete a photo.

 Touch **More** for more options, as below.

Details - Find out more information about the content.

Set as - Set as contact icon or wallpaper.

Crop - Crop your photo. Move your finger across the screen to select an area.

Rotate - Rotate left or right.


Edit - Touch to edit the image using various tools.

Photos and videos

Getting to know the viewfinder (Video camera)

Zoom - Zoom in or out. Alternatively, you can use the side volume keys.

Switch camera - You can move to the internal camera from the external one.

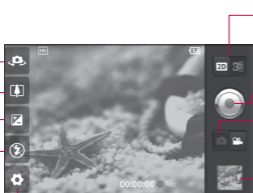

Transition between 2D - 3D modes - Touch to switch photo shoot mode between 2D and 3D.

Start recording

Camera mode - Slide this  icon to the left to switch to camera mode.

Gallery - Touch to view the video you recorded last. This enables you to access your gallery and view your saved videos from within the video mode.





Settings - Touch this icon to open the settings menu. See Using the advanced settings.

Flash - Allows you to turn on the flash when capturing a video in dark place.

Brightness - This defines and controls the amount of light entering the video. Slide the brightness indicator along the bar towards “-” to decrease the video brightness or towards “+” to increase it.

TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To restore the options, touch the screen again.

Shooting a quick video

- 1 Open the **Camera** application and slide the camera mode icon to right to switch to video mode. The capture icon  will change to .
- 2 The video camera viewfinder will appear on the screen.
- 3 Hold the phone horizontally, point the lens towards the video subject.
- 4 Touch the start video icon .
- 5 REC will appear at the bottom of the viewfinder, along with a timer showing the length of the video.
- 6 Touch the stop video icon  to stop recording.

After shooting a video

A still image representing your video will appear on the screen.


Play Touch to play the video.


Share Touch to share your video via **Bluetooth**, **Facebook**, **Email**, **Gmail**, **Messaging**


or **YouTube**.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Rename Touch to edit the name of the recorded video.

 Touch to delete the video you made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video straight away.

 Touch to view the last video you recorded.

Using advanced settings (Video camera)

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera settings by scrolling the list. After selecting an option, touch the **Back** key.

Video size – Touch to set the size (in pixels) of the video you will

Photos and videos

record. Set the video image size as 1080P(1920x1080), HD(1280x720), D1(720x480), VGA(640x480), QVGA(320x240) or QCIF(176x144).

White balance – The white balance ensures white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Colour effect – Choose a colour tone to use for your new view. Choose between **None**, **Sepia**, **Black&White**, **Negative**, **Vivid** and **Solarize**.

Video quality – Choose between **Super Fine**, **Fine** and **Normal**.

Duration – Set a time limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Audio recording – Choose **Mute** to record a video without sound.

Auto review – If you set this to **On**, it will automatically show you the video you have just recorded.

Storage – Select either Internal memory or External **SD card** to save videos.




Reset all video camera settings.



Touch this if you want to know how this function operates. This will provide you a quick guide.

Watching your saved videos

- 1 In the viewfinder, touch  on the lower right-hand corner.
- 2 Your gallery will appear on the screen.
- 3 Touch a video to play.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the right side of the phone.

3D photos and videos

Getting to know the viewfinder (3D Camera)





- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 3D focus**- You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D picture, you can use this function.

- 3 Brightness** - This defines and controls the amount of light entering the image. Slide the brightness indicator along the bar towards “-” to decrease the image brightness or “+” to increase it.
- 4 Flash** - Allows you to turn on the flash when taking a photo in a dark place.
- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.


3D focus mode - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also fine-tune manually with 3D focus function of viewfinder.

Photos and videos

Taking a 3D Photo

- 1 Open the Camera application.
- 2 Touch the 3D button  on the viewfinder.
- 3 Hold the phone horizontally, point the lens towards the subject which you want to photograph.
- 4 Touch the capture icon .
- 5 When the image is focused, the focus indicators turns green and the image will be captured.

Getting to know the viewfinder (3D Video Camera)

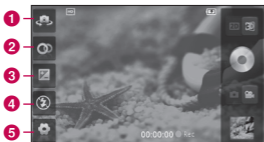

- 1 **Switch camera** - You can move to the internal camera from the external one.




- 2 **3D focus** - You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D video, you can use this function. You can't adjust this function while recording.
- 3 **Brightness** - This defines and controls the amount of light entering the video. Slide the brightness indicator along the bar towards "-" to decrease the video brightness or "+" to increase it.
- 4 **Flash** - Allows you to turn on the flash when capturing a video in dark place.

- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.



3D focus mode - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also fine-tune manually with 3D focus function of viewfinder.

Stabilization - Set On to compensate unsteady hand.

Shooting a quick 3D video

- 1 Open the Camera application and slide the camera mode icon to right to switch to video mode. The capture icon  will change to .
- 2 The video camera viewfinder will appear on the screen: touch the 3D button .
- 3 Holding the phone in landscape view, point the lens towards the


video subject.

- 4 Touch the start video icon . REC will appear at the bottom of the viewfinder, along with a timer showing the length of the video.
- 5 Touch the stop video icon  to stop recording.

NOTE

- 3D camera mode is only allowed in landscape view.
- Keep the distance between the camera and the object more than 0.5m.
- For the optimal 3D viewing experience, hold the device 30~40cm away from your eyes.


3D Space

Press and hold the 3D key on the right side of the phone to access  3D Space. It will show you 3D content such as YouTube 3D, 3D Gallery, 3D Camera and 3D guide.

YouTube 3D

- 1 Touch YouTube 3D to launch. As the screen switches to YouTube 3D web, various 3D videos appear.
- 2 Select a video you want to watch. The video will be shown in side by side format in portrait mode.
- 3 Rotate to landscape and 3D mode will turn on automatically.


3D Gallery

- 1 Touch the  3D Gallery. The 3D images will then be listed.
- 2 Choose one you want to see.

NOTE

- 3D content is best viewed with the screen 30~40cm in front of you.

3D Camera

- 1 Touch the  3D Camera and the screen will switch to 3D camera mode. To create 3D photos and 3D recordings, see the 3D photos and videos on previous pages.

3D Games & Apps

- 1 Touch  3D Games & Apps and any 3D Games and Applications you have downloaded from Market will be listed. Four applications, such as Asphalt6, Let's Golf 2, Nova, Gulliver's Travels, are provided as default games.

3D Guide

The 3D Guide contain instructions that makes 3D content easier to use with this phone. It will advise you how to create 3D pictures, connect to 3D TV via HDMI, view 3D content and share them.

Multimedia


Gallery

You can also save your files to an external memory card. The advantage of using a memory card is that you can free up memory space on your phone.

Touch the **Applications** tab , then select **Gallery**.


- 1 Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to view the slide show.

 **Menu** Touch to select the options you want.

 Touch to share the content.

 Touch to delete a photo.

 Touch **More** for more options, as below.

Details - Find out more information about the content.

Set as - Set as contact icon or wallpaper.

Crop - Crop your photo. Move your finger across the screen to

select an area.

Rotate - Rotate left or right.


Edit - Touch to edit the image using various tools.

To view 3D content,

- 1 Select the image you want to watch.
- 2 Rotate to landscape and 3D mode turns on.
- 3 For more information, refer to the 3D Guide.

NOTE: A part of image files can be converted 2D to 3D.

Music

Your LG-P920 has a built-in player that lets you play all your favourite music. To access the music player, touch the **Applications** tab  then select **Music**.

Multimedia

Playing a song

- 1 On the home screen, touch the **Applications** tab  and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the start of the song. Touch  twice to go back to the previous song.

To adjust the volume while listening to music, touch the up and down volume keys on the right side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Use as ringtone**, **Delete**, **Share**, **Search** and **Details** as options.

NOTE: Music file copyright may be protected by international treaties and national copyright laws.


You may therefore need to obtain permission or a licence to reproduce or copy music. In some countries, laws prohibit private copying of copyrighted material. Before downloading or copying a file, please check the laws of the relevant country governing the use of such material.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Touch **Application** tab  and select **SmartShare**.
- 2 Press the **Menu** key and select **Settings**.
- 3 Touch Discoverable checkbox to turn on.
- 4 Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
- 5 Touch **Receive files** if you would like to automatically allow upload files to my phone from other devices.
- 6 Under the Sharing contents


section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.

- 7 **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC)

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch **Application** tab  and select **SmartShare**.
- 2 Touch the top right button to or select the device from renderer lists.
- 3 Touch the top left button and select the device of the remote content library.
- 4 You can browse the content library.

Multimedia

- 5 Touch a content thumbnail or press the Menu key and select Play button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE: Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Touch **Share** on the menu and select the **SmartShare**.
- 3 **SmartShare** is automatically launched with the selected files.
- 4 Select the device from renderer lists to play the files.


NOTE: Follow the similar steps to use the Music player to share contents.

NOTICE: Check that your device is

connected with your home network using Wi-Fi connection to use this application and make sure that your device is connected to DLNA certified Wi-fi.

Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents


To download contents from remote content library

- 1 Touch **Application** tab  and select **SmartShare**.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail then touch **download menu key**.

NOTICES: A few types of contents are not supported.

To upload contents from my phone to remote content library

NOTE: Make sure that SD card is correctly mounted and the Received files in settings menu is checked.

- 1 Touch **Application** tab  and select **SmartShare**.
- 2 Touch the top left button and select **My phone**.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **upload menu key**.
- 5 Select a device of remote content library to be uploaded.

NOTICE: Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the LG-P920 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you will need to change settings manually. Choose **Settings > SD card & phone storage > Mass storage only** and connect your phone to your PC using the USB data cable.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage content on your PC and transfer files.

NOTE: You will need to install your microSD card first. Without a microSD card, you cannot use USB mass storage.

Multimedia

How to save music/ video files to your phone

- 1 Connect your phone to the PC using the USB cable.
 - Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage** > Open the removable memory folder in the PC to view the files.
 - If you haven't installed LG Android Platform Driver on your PC, you will need to set it manually. For more information, refer to Page 65 "Transferring files using USB mass storage devices".
- 2 Save music or video files from your PC to the phone's removable storage.
 - You can copy or move files from PC to the phone's removable storage using a card reader.
 - If there is a video file with a subtitle file (a .smi or .srt file with the same name as the video file),

put them in the same folder to display the subtitle automatically when playing the video file.

- When downloading music or video files, copyright must be respected. Please note that a file that is corrupted or has the wrong extension may cause damage to your phone.

How to move contacts from your old phone to your current phone

Export your contacts as a CSV file from your old phone to your PC, using a PC sync programme.

- 1 Download PC Suite for Android at www.lg.com and install it on your PC. Run the programme, and connect your Android mobile phone to the PC using a USB cable.
- 2 Select the **Contacts** icon. Go to **File->Import** and select the CSV

file saved on the PC.

- 3 If the fields in the imported CSV file are different from the ones in PC Suite for Android, you need to map the fields. After mapping the fields, click OK. The contacts will then be added in PC Suite for Android.
- 4 If the LG-P920 phone connection using the USB cable is detected by PC Suite for Android, click "Sync" or "Sync contacts" to synchronise the contacts saved in the PC to your phone and save them.

How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a suitable application, rather than from the Bluetooth menu as with normal mobile phones.

- **Sending pictures:** Run the **Gallery** application and select the **Picture** to be sent > **Menu**. Click

Share and select **Bluetooth** > Check if **Bluetooth is turned on** and select **Scan for devices** > Choose the device to which you want to send the data , from the list of devices.

- **Exporting contacts:** Run the **Contacts** application. Touch the address you want to export to. Touch the **Menu** and select **Share** > **Bluetooth** > Check if **Bluetooth is turned on** and select **Scan for devices** > Choose the device to which you want to send the data , from the list of devices.
- **Sending multiple contacts:** Run the **Contacts** application. To select more than one contact touch the Menu key and touch Share. Select the contacts you want to send or touch **Select all** > **Share** > **Bluetooth** > Check if **Bluetooth is turned on** and select Scan for devices > Choose the device to which you want to send the data ,

Multimedia

from the list of devices.

- **Connecting to FTP (Only FTP servers are supported on this handset): Settings > Wireless & networks > Bluetooth settings.**

Then select the **Discoverable** tickbox and search for other devices. Find the service you want and connect to the FTP server.

TIP! The version is Bluetooth 2.1+ EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

NOTE: If you want to search for this phone from other devices, go to **Settings > Wireless & Networks > Bluetooth settings**. Then select the **Discoverable** tickbox. The tickbox is cleared after 120 seconds.

NOTE: The following profiles are supported: SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP and AVRCP.

HDMI

HDMI (High Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data. If you connect your phone to a TV or monitor using an HDMI cable, you can transmit images or video files with the video player/image viewer of your phone and see them on the TV or monitor. You can also play 3D content on a 3D TV or monitor.

Note: It may take time to play media files depending on the device connected to your phone. Files may not be played properly when using a non-HDMI certified cable or product. The image orientation you set on your phone is also used on the device.

3D content may not be transmitted automatically if your phone and 3D TV support different HDMI versions. In this case, you can change the 3D settings of TV referring to the

TV'S user manual. When using a HDMI cable, 3D video playback, 3D camera preview, or 3D video camera preview is displayed only on a TV or monitor. HDMI OUT may not be supported from some of the files due to request from copyright owner.

If your phone data is not displayed properly on the device due to a sync issue, you need to change the resolution of your phone. (On the Home screen, tap on the Menu key, and then tap Settings > HDMI > Resolution.)


Utilities

Setting your alarm

- 1 On the home screen, touch the **Applications** tab  and select **Alarm/Clock**.
- 2 If you want to add a new alarm, touch **New alarm**.
- 3 Set the alarm and touch **Save** to turn it on.

NOTE: To delete the alarm on the alarm list screen, touch the Menu key and select Delete/Delete all.

Using your calculator

- 1 On the home screen, touch the **Applications** tab  and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch **Menu** and **Advanced panel**, then choose sin, cos, tan, log, etc.

NOTE: As a standard unit of angle measure, radian is only supported by this calculator.






Adding an event to your calendar

- 1 On the home screen, touch the **Applications** tab  and select **Calendar**.
- 2 You must first create MS Exchange or Google account to use Calendar.
- 3 To check the event, touch the date. Hold it down if you want to add a new event. Then touch **New event**.
- 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to start and finish.
- 5 Then touch **Where** and enter the location.
- 6 To add a note to your event, touch **Description** and enter the details.

- 7 If you want to repeat the alarm, set **Repetition** and set **Reminders** if necessary.
- 8 Touch **Save** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Recording a sound or voice

Use the voice recorder to record voice memos or other audio files.

- 1 On the home screen, touch the **Applications** tab  and select **Voice Recorder**.
- 2 Touch  to start recording.
- 3 Touch  to stop recording.
- 4 Touch  to listen to the recording.
- 5 Touch  to access your album. You can listen to the saved recording.

Notice: Available recording time may differ from the real time.

Sending the voice recording


- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose between **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message you write, and it will be sent.

Home Time Zone

You can set the option **Use home time zone** & select **Home time zone** from the list.

This is used to override the local time zone set by the mobile network so that time zone of your choice is applicable to Calendar and events of your phone.

Utilities

- 1 On the idle screen, touch the **Home** key .
- 2 Touch **Calendar**, then sign in to your account.
- 3 In the **Calendar** menu, select **Settings** option.
- 4 Touch **Use Home Time Zone** and select required time zone in **Home Time Zone** option.


3D Game Converter

You can enjoy popular 2D games in 3D by using 3D Game Converter powered by HRZ engine.

The Games you have added to 3D game converter list will be transformed to 3D in real time when you simply press 3D hot key on the right-hand side of the phone.

- 1 Touch the **Applications** tab, then select **3D Game Converter**.
- 2 Touch  and select games you would like to choose.
- 3 You can play games on 3D game converter list, in 3D.

- In case you have registered customizable game, you can set Quality, 3D depth, Depth scale in 3D settings.

- 1 Touch  on games list.
- 2 Save the settings after setting up.

Notice

3D game converter works on only 2D OpenGL-based games.

NOTE: 3D converting does not cost you.

Editing videos

Use Video editor to edit the videos you have captured.

- 1 On the homescreen, touch the **Applications** tab.
- 2 Touch **Video editor**. When you have no project going on, only **New** and **Help** is available. Tap the **Menu** key to see the **Help**.
- 3 Touch **New** and select **Add** to add videos, images or Musics you'd like to insert. You can drag files down to where you want

to place.

NOTE: If you select 3D video at first, you can only add 3D videos having same resolution with audio. Also you can add only 2D videos If you select 2D video at first.

- 4 Touch **Trim** to edit the length of video dragging the Trim bar. You can control in detail with using **Detail view**.
- 5 If you are finished with your project, touch **Export** on main screen to make complete file. Make sure save the changes you have made before exit to main menu.
- 6 You can share the file you have edited with your friends via **Bluetooth, Email, Facebook, Gmail, Messaging** and **Youtube**.

The Web


Browser


Browser gives you a fast, full-colour world of games, music, news, sports, entertainment and much more, right on your mobile phone - Wherever you are and whatever you're into.


NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.


< Tool bar >

The icons bar present in the bottom of the screen makes it easier to use the browser.

 **Backward:** Move to the previous web page.

 **Forward:** Move to the next web page.


 **Windows:** Shows all your open windows.


 **New windows:** Open a new window.


 **Settings:** Move to Browser settings.


Using options


Touch the **Menu** key to view options.

 **Read it later:** Added in Read it later.

 **Share page:** Send the web page via Bluetooth, Email, Facebook, Gmail, Messaging and so on.

 **Find on page:** If you enter a letter or word, it will mark all the letters you entered, in the web page.

 **Select text:** Touch and select the lines you want to copy. You can paste it into any input box by touching it for an extended period.

 **Add RSS Feed:** Add your favourite web page. When a new item appears on the site, you will automatically be notified by Google reader.

NOTE: RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts.

An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up-to-date with their favourite websites in an automated way that is easier than checking manually. The user subscribes to a feed by entering its link into the reader or clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content, and downloads any updates it finds.

For unavailable RSS Feed webpages, the 'Add RSS Feed' icon menu will be disabled.

More

- **Home page:** Displays the Home page.
- **Set home page:** Set the current page as your home page.
- **Add shortcut to home:** Add the

current page to home screen as Shortcut.

- **Page info:** Shows the web page information.
- **Downloads:** Shows the download history.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, the contacts, email and calendar in your Google account will automatically synchronise with your LG-P920.

Maps

Check your current location and traffic and receive directions to your destination. Your phone must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

Market

Android Market lets you download applications and games. If you install applications and games from Android Market, they will appear in the LG-P920 menu.

You can check other peoples' comments regarding an application, or post your own comments.

Gmail

Gmail is configured when you first set up your phone. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list will be your default Gmail view.

Talk

Google Talk is Google's instant messaging programme. It lets you communicate with other people who use Google Talk.

Open **Talk** and touch the **Menu** key to select the available options like **All friends, Add friend, Search, Sign out, Settings, etc.**


Google Search


Google Mobile Web Search allows you to search for websites.

LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer “Mobile Life” experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no  icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the .

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
- Find and download exciting 3D content from the ‘3D zone’.
- After Sign into **LG SmartWorld** Touch **Menu** key for different options.
 - **Categories:** Find contents


LG SmartWorld

by category (e.g. Education, Entertainment, Games, etc).

- **My Apps:** List of downloaded/ to-be-updated contents.
- **Apps for you:** Recommended content based on your previous choices.
- **Search:** Search Content.
- **Settings:** Change profile, notification, display settings and check for LG SmartWorld update.
- Try other useful functions as well. (My apps screen)
 - **Wish List:** Save the content you're interested in
 - **Share:** Share content information through E-mail, Facebook, Twitter and SMS.

NOTE: LG SmartWorld may not be available in all carriers or countries.

Settings

On the home screen, touch the **Applications** tab  then scroll and touch **Settings**.

Wireless & Networks

Here, you can manage Wi-Fi, Bluetooth, Tethering, hotspot, VPN and On-Screen phone. You can also set mobile networks and airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Wi-Fi – Touch to select: This turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key and touch **Advanced**.

Bluetooth – Touch to select: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable mode, scan for other devices. Alternatively, check a list of Bluetooth devices you've previously configured plus those detected when the phone last scanned for Bluetooth devices.

Tethering & portable hotspot – Tether your phone to your computer with a USB cable to share your phone's Internet connection with your computer and turn your phone into a Wi-Fi access point to share your phone's Internet connection with additional computers or devices.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) etc.

On-Screen Phone settings – Allows you to change the On-

Settings

Screen Phone password (the default password is "0000"). On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

Sound

< General >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos, and any alarms you have set. (Media and alarms must be silenced from their own applications.)

Notice: After setting silent mode it is not available to use **Settings > Sound > Volume** menu.

Vibrate – Allows you to set your phone to vibrate when you receive an incoming call.

Volume – Allows you to set the

volume for ringtone, media and alarm. If you uncheck the option to use incoming call volume for notification, you can set both volumes for incoming call and notification separately.

< Incoming calls >

Phone ringtone – Allows you to set your default incoming call ringtone.

< Notifications >

Notification ringtone – Allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – Allows you to set the phone to play tones when dialling numbers using the dial keypad.

Audible selection – Allows you to set your phone to make a sound when you touch buttons, icons and other on-screen items that are touch-sensitive.

Screen lock sounds – Allows you

to set your phone to make a sound when locking and unlocking the screen.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the soft keys and carry out other actions.

Display

Brightness – Adjust the brightness of the screen.

Auto-rotate screen – Allows you to set the orientation to switch to landscape mode or portrait mode automatically when you turn the phone sideways or upright.

Animation – Allows you to set animated transitions when navigating from screen to screen.

Screen timeout – Allows you to adjust the delay time before the screen automatically turns off. For best battery performance, use the shortest convenient timeout.

Display font - Change the display

font.

< 3D settings >

Warning popup – It will display a warning popup whenever you start a 3D games unless you select the tick box 'Do not show again'.

Gesture

Use motion gestures – Adjust the gesture settings for the incoming calls and the alarm.

<Incoming call>

Mute – Allows you to mute the sound by flipping the phone over while the phone is ringing.

<Alarm>

Snooze (stop) – Allows you to snooze(stop) the alarm by flipping the phone over.

Reset gesture sensor – Calibrate the motion sensor with the phone placed on a flat surface.

Settings

Location & security

< My Location >

Use wireless networks – If you select **Use wireless networks**, your phone will determine your approximate location using Wi-Fi and mobile networks.

Use GPS Satellites – If you select **Use GPS satellites**, your phone will determine your location with street-level accuracy.

< Screen unlock >

Set up screen lock – Set an unlock pattern to secure your phone. This opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern**, or leave the option as **None**.

TIP! To lock your screen by using the **Pattern Lock**

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You will be prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you will be prompted to draw your unlock pattern to unlock the screen.

< SIM card lock >

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

< Passwords >

Visible passwords – Select to show passwords as you type them, or deselect to hide them as you type them.

< Device administration >

Select device administrators – Add or remove device administrators.

< Credential storage >

Use secure credentials – Select to allow applications to access your phone's encrypted store of secure certificates, related passwords and other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. If you have not set a credential storage password, this setting is greyed out.

Install from SD card – Allows you to install encrypted certificates from a microSD card.

Set password – Allows you to set or change the password for your secure credential storage. Your password must have at least eight characters.

Clear storage – Deletes all secure certificates and related credentials and erases the secure storage's own password.

Applications

Unknown sources – Permits installation of applications you get from websites, email or other locations than Android Market.

WARNING

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Allows you to view and control services and applications that are currently running. This option displays what

Settings

processes each running service needs, and how much memory it is using.

Storage use – View storage used by applications.

Battery use – See what has been using the battery.

Development – Allows you to set options for application development, such as **USB debugging**, **Stay awake** and **Allow mock locations**.

Accounts & sync

<General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively using them. Un-selecting this setting can save battery power, and will lower (but not eliminate) data use.

Auto-sync – Permits applications to synchronise, send and receive data on their own schedule.

< Social+ update settings >

Social+ settings – Allows you to set refresh interval of all Social Network application present on the phone.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone.

If you touch an account in this screen, its account screen will open.

Privacy

< Personal data >

Factory data reset – Erases all your personal data from internal phone storage, including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence. Resetting the phone will not delete or restore any system software updates you have downloaded or any files (e.g., photos and music

files) on your microSD card or internal SD card. If you reset the phone this way, you will be prompted to re-enter the same information as when you first started Android.

SD card & phone storage

< SD card >

Check total space and available space. Touch **Unmount SD card** to remove it safely. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you format it.

< Internal phone storage >

Check the **Available space**.

Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

Voice input & output

< Voice input >

Voice recogniser settings – Use the **Voice recogniser settings** to configure the Android voice input feature.

- **Language:** Opens a screen where you can set the language you use when entering text by speaking.
- **SafeSearch:** Opens a dialogue box where you can set whether you want Google SafeSearch filter to block some results.
- **Block offensive words:** When un-selected, Google voice recognition will recognise and transcribe words many people consider offensive, when you enter text by speaking. When selected, Google voice recognition replaces those words in transcriptions with a place holder comprised of hash symbols (#).

Settings

< Voice output >

Text-to-speech settings – Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can benefit from it.

NOTE: If you don't have speech synthesiser data installed, only the Install voice data setting will be available.

- **Listen to an example:** Plays a brief sample of the speech synthesiser using your current settings.
- **Always use my settings:** Check to use the settings on this screen rather than the speech synthesiser settings available in other applications.
- **Default engine:** Opens a dialogue box where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your

phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.

- **Speech rate:** Opens a dialogue box where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a dialogue box where you can select the language of the text you want the synthesiser to read. This is particularly useful when combined with **Always use my settings** to ensure text is spoken correctly across a variety of applications.
- **Pico TTS:** Configure the Pico TTS settings.

Accessibility

Use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become available.

Date & time

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone, rather than getting the current time from the mobile network.

About the phone

View legal information and check phone status and software version.


Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the area of wireless access point (AP) coverage.

You can enjoy wireless internet with Wi-Fi, without incurring extra


charges.

Turn on Wi-Fi

From the home screen, open the notification drawer and touch  on.

Or touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.

To connect to Wi-Fi

Choose the Wi-Fi network you want to connect to. If you see , you need to enter a password to connect.

NOTE:

- If you are out of a Wi-Fi area and choose the 3G connection, additional charges may be applied.
- If your phone changes to sleep mode when connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. (In this case, if your phone has access to Mobile data it may connect to the Mobile network) .




Settings

- The LG-P920 supports WEP, WPA/WPA2-PSK and 802.1x EAP. Security. If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Sharing your phone's mobile data connection

You can also share your phone's data connection with upto five devices simultaneously, by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an on-going notification in the notifications drawer.

Icon	Description
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

For the latest information about portable hotspots, including operating systems supported and other details, go to <http://www.android.com/tether>.

NOTE: Additional costs may be incurred when connecting to and using online services. Check data charges with your network provider.

Tethering & portable hotspot

On the home screen, touch the **Applications** tab and select **Settings**.

Touch **Wireless & Networks** and select **Tethering & portable**

hotspot.

Choose the options you want to adjust.

USB tethering -You can share your phone's internet connection with your computer.You can tether your phone to your computer with a USB cable.



Portable Wi-Fi hotspot – Select to share your phone's mobile network data connection as a portable Wi-Fi hotspot.

Help – Opens a dialogue box with information about USB Tethering and portable Wi-Fi hotspots and advice about where to learn more.

TIP!

You can use both USB tethering and Portable Wi-Fi hotspot at same time.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 On the home screen, touch the **Applications** tab  and select **Settings**.
- 2 Touch **Wireless & Networks** and select **Tethering & portable hotspot**.
- 3 Check **Portable Wi-Fi hotspot**.
 - After a moment the phone starts broadcasting its Wi-Fi network name (SSID), enabling you to connect to it with up to five additional computers or other devices. An on-going notification  is added to the status bar and notifications drawer.
 - When **Portable Wi-Fi hotspot** is selected, you can change its network name or make it secure.
- 4 Un-select **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

Settings

Note:

When you first time enable Portable Wi-Fi hotspot, you need to set a password for secure data connection sharing.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch the **Applications** tab  and select **Settings**.
- 2 Touch **Wireless & Networks** and select **Tethering & portable hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is selected.
- 4 Touch **Portable Wi-Fi hotspot settings**.
- 5 Touch **Configure Wi-Fi hotspot**.
 - The **Configure Wi-Fi hotspot** dialogue box will open.
 - You can change the network SSID

(name) that other computers see when scanning for Wi-Fi networks.

- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialogue box. If you enter a password, you will need to re-enter it when you connect to the phone's hotspot with a computer or other device. You can touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!






If you set the security option as **Open**, you can not prevent unauthorised usage of online services by other people, and additional charges may be incurred. To avoid unauthorised use, you are advised to keep the security option enabled.

6 Touch **Save**.

How to use On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available with applications that support rotation).
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Minimises the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.

Settings

- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

Notice: The Camera preview, videos and contents from 3D mode(3D Game & Apps, 3D Guide, YouTube

3D, 3D Gallery) are not supported in OSP, so they are not available on the PC.

How to install On-Screen Phone on your PC

Visit LG Home (<http://www.lg.com>) and go to **Support > Mobile Phone Support > Download LG Mobile Support Tool to PC**. If you download LG PC Suite IV, the On-Screen Phone programme will also be downloaded on your PC. You can then install the On-Screen Phone on your PC.

NOTE: Go to **Settings > SD card & phone storage** and make sure that the "**Mass storage only**" checkbox is deselected.

How to connect your mobile phone to your PC

USB connection:

- 1 Open Connection Wizard, select "USB Cable connection" and click "Next".

- 2 Connect your mobile phone to the PC using a USB cable and click "Next".
- 3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless & Networks > On-Screen Phone Settings**.
- 4 Click "OK" to exit the window.
- 4 The wizard will start searching for Bluetooth-enabled mobile phones. When the mobile phone you want to connect to appears, click "Stop" to stop searching.
- 5 Select "LG-P920" from the device list and click "Next". You can rename the device if you wish.
- 6 Accept the pairing request in your phone and select "Next" in PC.
- 7 Enter the On-Screen Phone password and click "Next". (The default password is "0000").
- 8 Touch "OK" to exit.

Wireless connection with Bluetooth:


- 1 On your mobile phone, go to **Settings > Wireless & Networks > Bluetooth settings**. Select **Turn on Bluetooth** and then select **Discoverable**.
- 2 If you have previously connected using a cable, run the New Connection Wizard to create a new connection.
- 3 Run the Connection Wizard on the computer, select "Bluetooth connection", then "Next".

To check the phone-to-PC connection

Once the devices have been connected, drag down the notification bar at the top of the home screen to check the On-Screen Phone connection status.

Settings

To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Alternatively, drag down the notification bar at the top of the home screen and select "On-Screen Phone". Touch "Yes" in the Disconnect window.

NOTE: You must restart your phone after shutting down the On-Screen Phone service.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware of your phone to the newer version conveniently from the

internet without the need to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selective models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone Software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer

version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:
Settings > About phone > Software update > Check now for update.

You can also rearrange update schedule in 1 hour, 4 hours, 8 hours or 24 hours before updates.

In this case, the application will notify you to update when the time is up. Also you can rearrange or update by manually.

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the

process of updating your phone's software.

Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

Sync your phone with your computer

You can use the LG PC Suite to sync Outlook contacts and calendar between your computer and your phone.

Installing the LG PC Suite

Use the LG PC Suite installer pre-loaded in the phone memory.


- 1 Connect your phone to your computer using the USB cable that came with your phone.
- 2 When the 'USB connected' screen appears on your phone, tap 'Turn on USB storage' and select 'OK' to display the 'USB storage in use' screen.

Settings

- 3 On your computer, the connected phone is recognised as a removable disk. Navigate to this removable disk and open **LGE** folder.
- 4 Copy the entire **pc_suite** folder to your computer.
- 5 On your phone, press the home key and go to **Applications > Settings > SD card & phone storage** and then disable '**Mass storage only**' setting.
- 6 Disconnect your phone from the computer.
- 7 On your computer, go to **pc_suite** folder, double-click **LGInstaller.exe** and follow the onscreen instructions to install LG PC Suite.

Copyrights and trademarks

The rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
- microSD and the microSD logo are Trademarks of the SD Card Association.
- Google, Android, Google Search, Google Calendar, Google Maps, Google Latitude, Gmail, YouTube, Google Talk and Android Market are trademarks of Google, Inc.
- Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.
-  Contains Adobe® Flash® Player technology by Adobe Systems Incorporated.

- **DivX Mobile**



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are

Copyrights and trademarks

trademarks of DivX, Inc. and are used under licence. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

Notice!

Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/> All referred licence terms, disclaimers and notices are available for download with the source code.

- Wi-Fi® and Wi-Fi Protected Access® are registered trademarks of the Wi-Fi Alliance.

- **DTS 2.0 Channel**



Manufactured under license from DTS Licensing Limited. DTS and the Symbol are registered trademarks, & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

- **Dolby Digital Plus**



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

These Accessories are available for use with the LG-P920.

(Items described below may be optional.)

Charger



Data cable

Connect your LG-P920 and PC.



Battery



User Guide

Learn more about your LG-P920.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P920

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1
EN 300 328 v1.7.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006 / EN 62209-1:2006 / EN 62209-2:2010
EN 301 511 v9.0.2
EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards, regulation and directives

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

3, May, 2011


Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone, or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection / Losing network	Weak Signal outside GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
An application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key held down long enough Battery is not charged Battery contacts are dirty	Hold the On/Off key down for at least two seconds. Keep the charger attached for longer. Clean the contacts. Take out the battery and reinsert it.

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Charging error	Battery is not charged. Outside temperature is too hot or cold Contact problem No voltage Charger defective	Charge battery. Make sure the phone is charging at normal temperature. Check the charger and connection to the phone. Check the battery contacts, and clean them if necessary.
	Wrong charger. Battery defective.	Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive / send SMS & Picture	Memory Full	Delete some messages from the phone.
Files not open	Unsupported file format	Check the file formats that can be supported
SD Card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using phone
The screen does not come on when I receive a call.	Proximity sensor problem	If you use a protective tape or case, check whether it is covering the area around the proximity sensor. Make sure the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.

Message	Possible causes	Possible Corrective Measures
Hang up or freeze	Intermittent software problem	<p>Remove and re-insert battery. Turn on the phone.</p> <p>If the phone is locked and does not work, press and hold the Power/Lock key for 10 seconds to turn it off. Then, press the Power/Lock key again for 3 seconds to reboot the phone.</p> <p>Try to do a software update service via the website.</p>

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757