



繁體中文  
簡體中文  
ENGLISH

使用手冊  
**LG-P920**



**CE 0168** 

P/N : MFL67230159 (1.1)

[www.lg.com](http://www.lg.com)





# LG-P920 使用手冊

## - 繁體中文

本用戶手冊載有 Android Gingerbread 作業系統版本 2.3 的資訊。如果您的手機正使用 Android Froyo 作業系統版本 2.2，請參閱第 86 頁的更新手機詳細資訊和方法。

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同，這並不會另行通知。
- 由於此手機備有觸控屏幕鍵盤，不建議視障人士使用。
- Copyright ©2011 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google 搜尋、Maps、Gmail、YouTube、Talk 和 Market 均為 Google, Inc. 的註冊商標。



# 內容

安全及有效使用準則 .....	5	通話設定 .....	37
重要通知 .....	11	通訊錄 .....	39
了解您的手機 .....	20	搜尋聯絡人 .....	39
安裝智能卡 (SIM 卡) .....	22	新增聯絡人 .....	39
為手機充電 .....	23	常用的聯絡人 .....	39
格式化記憶卡 .....	24	<b>訊息/電郵 .....</b>	<b>40</b>
<b>您的桌面 .....</b>	<b>26</b>	訊息 .....	40
觸控螢幕小秘訣 .....	26	發送訊息 .....	40
鎖定您的手機 .....	28	更改訊息設定 .....	41
解鎖螢幕 .....	28	設定您的電子郵件 .....	41
主頁 .....	28	Microsoft Exchange 電子郵 件帳戶 .....	41
在您的桌面上新增小工具 .....	29	其他 (POP3, IMAP) 電郵帳戶 .....	42
返回最近使用的應用程式 .....	29	編寫及發送電子郵件 .....	43
通告欄 .....	30	處理帳戶資料夾 .....	44
檢視狀態列 .....	30	新增及編輯電子郵件帳戶 .....	44
螢幕鍵盤 .....	32	<b>社交網絡 .....</b>	<b>45</b>
<b>Google 帳戶設定 .....</b>	<b>33</b>	新增您的帳戶至手機 .....	45
建立您的 Google 帳戶 .....	33	檢視及更新您的狀態 .....	45
登入您的 Google 帳戶 .....	33	從手機移除帳戶 .....	46
<b>通話 / 聯系 .....</b>	<b>35</b>	Facebook 和 Twitter .....	46
撥打語音通話 .....	35	<b>相片及影片 .....</b>	<b>47</b>
撥打視像通話 .....	35	了解取景器 (相機) .....	47
視像通話功能表 .....	36	拍攝快照 .....	48
從通訊錄中撥打電話 .....	36	拍攝相片後 .....	48
接聽來電和拒接來電 .....	36	使用進階設定 (相機) .....	49
調整通話音量 .....	36	檢視已儲存的相片 .....	50
通話期間撥打第二個電話 .....	37	了解取景器 (視像攝錄機) .....	51
檢視通話記錄 .....	37		

拍攝快速影片	52	<b>實用程式</b>	<b>65</b>
拍攝影片後	52	設定鬧鐘	65
使用進階設定 (視像攝錄機)	53	使用計算機	65
觀看已儲存的影片	54	新增事件至日曆	65
觀看影片時調整音量	54	錄製聲音或語音	66
3D 相片和影片	54	發送錄音	66
拍攝快速 3D 影片	56	本國時區	66
<b>3D 空間</b>	<b>57</b>	3D 遊戲轉換器	66
YouTube 3D	57	編輯影片	67
3D 圖片集	57	<b>網絡功能</b>	<b>68</b>
3D 相機	57	瀏覽器	68
3D 遊戲和應用程式	57	使用選項	68
3D 指南	57	<b>Google 應用程式</b>	<b>70</b>
<b>多媒體</b>	<b>58</b>	地圖	70
媒體匣	58	Market	70
音樂	58	Gmail	70
播放歌曲	59	通話	70
使用 SmartShare	59	Google 搜尋	70
使用 USB 大容量儲存裝置傳送檔案	61	<b>LG SmartWorld</b>	<b>71</b>
如何將音樂/影片檔案儲存至手機	62	如何從手機進入 LG SmartWorld	71
如何從您的舊手機上的聯絡資料移到現在的手機	62	如何使用 LG SmartWorld	71
如何透過藍芽發送手機中的數據	63	<b>設定</b>	<b>73</b>
HDMI	64	無線及網絡	73
		聲音	74
		顯示	74
		手勢	75
		位置及安全	75

# 內容

應用程式 .....	77	版權和商標 .....	88
帳號及同步處理 .....	77	配件 .....	90
隱私設定 .....	78	技術數據 .....	91
SD 卡和手機儲存 .....	78	疑難排解 .....	92
語言及鍵盤 .....	78		
語音輸入及輸出 .....	78		
協助工具 .....	79		
日期及時間 .....	80		
關於手機 .....	80		
Wi-Fi .....	80		
開啓 Wi-Fi .....	80		
共享手機的流動數據連接 ...	81		
共享網絡及可攜式熱點 .....	81		
要將手機的數據連接以可攜 式熱點的形式分享 .....	82		
要重新命名或保護可攜式熱 點 .....	82		
如何使用螢幕手機 (On screen Phone) .....	83		
螢幕手機圖示 .....	83		
螢幕手機功能 .....	84		
如何在電腦上安裝螢幕手機 ..	84		
如何將手機連接至電腦 .....	85		
要檢查手機至電腦連接 .....	86		
要中斷電腦與手機的連接 ...	86		
手機軟件更新 .....	86		
將手機與您的電腦同步 .....	87		

# 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

## 射頻能量暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。本型號手機 LG-P920 之設計符合適用的無線電波暴露安全要求。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非游離輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。

- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.368 W/kg (10 克)，攜帶於身上時則為 0.562 W/kg (10 克)。
- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，知道傳輸完成為止。

# 安全及有效使用準則

## 產品保護及維護

### 警告：

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以濕水的手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，

否則可能會對手機造成損毀。

- 請勿將手機暴露於液體或濕氣中。
- 請小心使用耳機等配件。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。

## 有效地操作手機

### 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避

免將手機放置在心臟起搏器附近，例如您胸口上的口袋。

- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

## 道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。

# 安全及有效使用準則

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

## 避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此，我們建議您不要在靠耳朵太近的地方開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

**附註：**來自耳機的過度噪音和壓力可導致聽力損失。

## 玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件

可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質附近使用電腦。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機含有微細零件，如果拆開，可能造成哽咽危險。

## 緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

## 電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力

# 安全及有效使用準則

損耗。

- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

何不適的可能性。

2. 負責任的成人應監督兒童觀看 3D 內容，確保他們依照建議方法使用。

## 觀看 3D 內容的注意事項

### 1. 觀看 3D 內容時：

- 幼童的視力可能仍處於發展階段。5 歲以下的兒童不應觀看 3D 內容。
- 觀看 3D 內容時，部分人士可能出現不適的症狀，如作嘔、雙眼過勞、疲勞及昏厥。所有觀看人士應定期休息，避免出現這些症狀。每位人士各有不同，請確定適合自己的休息頻率和時間長度。如果出現任何不適的症狀，停止觀看並休息片刻，直至症狀消退。如果停止觀看並休息片刻後症狀仍然持續，請諮詢醫生。
- 依照流動裝置隨附的指南，查看有關觀看距離及角度的資訊。在建議觀看範圍內觀看 3D 內容，可減少感到任

# 重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機遇到的問題有否描述過。

## 1. 手機記憶體

當手機記憶體的可用空間少於10%，您的手機便很可能不能再接收新訊息。您需要刪除手機記憶體的部分數據，如應用程式或訊息，以提供更多記憶體空間。

**要管理應用程式：**

- 1 從主頁點按**應用程式**標籤，然後選擇**設定 > 應用程式 > 管理應用程式**。
- 2 當所有應用程式出現後，選擇至您想解除安裝的應用程式，然後作出選擇。
- 3 點按**解除安裝**然後點按**確定**，以解除安裝選定的應用程式。

### **警告：**

如果您刪除儲存在手機 SD 卡的數據，將無法使用重設為原廠設定（設定 > 隱私設定 > 重設為原廠設定>重設手機。

## 2. 優化電池壽命

您可關閉無須在背景運行的功能，便能延長兩次充電之間的電池壽命。您亦可監控應用程式及系統資源如何使用電池電量。

**要延長您的電池壽命：**

- 關閉非使用中的無線電通訊。關閉非使用中的 Wi-Fi、藍芽或 GPS。
- 調低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會減少您的電池壽命。

# 重要通知

## 要檢查電池充電量：

- 1 從主頁點按**應用程式**標籤，選擇**設定 > 關於手機 > 狀態**。
- 2 電池狀態（充電中/放電中）及電池存量（相對於完全充電的百分比）會在螢幕顯示。

## 要監察及控制電池使用狀況：

- 1 從主頁點按**應用程式**標籤，選擇**設定 > 關於手機 > 電池使用狀況**。
- 2 螢幕頂部會顯示電池使用時間。這是您最後把手機連接到電源的時間，或如果已連接到電源，就是您的手機最後使用電池電力運作的時間。螢幕內容會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

## 3. 安裝開放源碼的作業系統

如果在手機上安裝開源作業系統，而不再使用製造商提供的作業系統，可能會導致您的手機出現故障。

### 警告：

如果您安裝及使用並非由製造商提供的作業系統，您的手機將不再受保養。

### 警告：

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Android Market。如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正常地運作或出現嚴重錯誤。您需要從手機移除這些應用程式以及其所有的數據及設定。

## 4. 使用解鎖圖案

設定解鎖圖案以保護您的手機。開啓一系列畫面，以指導您繪畫屏幕解鎖圖案。您可以連接四個或以上的點以繪畫您專屬的解鎖圖案。如果您設定圖案，手機屏幕便會鎖定。要解除鎖定手機，請在螢幕上輸入您所設定的圖形。在主頁點按應用程式標籤，然後選擇設定 > 位置與安全性 > 設定螢幕鎖定 > 圖形。按畫面上的指示繪畫螢幕解鎖圖形。選擇下一頁繼續。

**注意：**先建立 Gmail 帳戶，才設定解鎖圖形。



**警告：**

### 使用圖案鎖定的注意事項

請記住您所設定的解鎖圖案，這是至關重要的。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

### 在無法重新開啓您的解鎖圖形、PIN 或密碼時：

- 1 如果您忘記了解鎖圖形：**如果已在手機上建立 Google 帳戶，請點按忘記圖形按鈕。然後，您需要使用您的 Google 帳戶登入以解鎖您的手機。如果您尚未在手機上建立 Google 帳戶或忘記帳戶，您需要進行硬性重新設定。
- 2 如果您忘記了 PIN 碼或密碼。**如果您忘記了您的 PIN 碼或密碼，您需要進行硬性重新設定。

# 重要通知

## 5. 使用硬性重新設定

如果無法回復原來的狀態，使用硬性重新設定將您的手機進行初始化。

關閉手機電源後，同時按住 3D 鍵 + 音量降低控制鍵 + 電源鍵超過十秒。當螢幕開始亮着和顯示 LG 標誌，立即釋放電源鍵。

然後當螢幕顯示硬性重新設定圖像時，釋放其他按鍵。手機將顯示一些選項，請以音量向下鍵移至 “Yes” 再按 3D 鍵。

手機進行硬性重新設定需時至少一分鐘，然後按 3D 鍵以選擇 ‘reboot system now’。您的手機將會重新開啓。

**注意：**若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。這並不能還原。請記住先備份所有重要的數據，才進行硬性重新設定。

## 6. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或備有其他保安功能，因此在連接前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

**要開啓 Wi-Fi 並連接至 Wi-Fi 網絡：**

- 1 從主頁點按**應用程式**標籤，並選擇**設定 > 無線及網絡 > Wi-Fi 設定**。
- 2 點按開啓 Wi-Fi，手機便會開始掃描可使用的 Wi-Fi 網絡。
- 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。
- 3 點按一個網絡以開始連接。
- 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。

- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）

4 狀態列上的圖示會顯示 Wi-Fi 狀態。

## 7. 開啓及切換應用程式

您可輕易在 Android 上進行多重任務，即使您開啓其他應用程式，已開啓的應用程式依然會繼續運行。您無須在開啓另一應用程式前退出應用程式。使用及切換數個開啓中的應用程式。Android 會管理每一個應用程式，根據需要停止及啓動程式，確保閒置的應用程式不會耗用不必要的資源。

**要停止使用應用程式：**

- 1 從主頁點按**應用程式**標籤，然後選擇**設定 > 應用程式 > 管理應用程式**。
- 2 捲動至選定的應用程式，然後點按**強制停止**關閉應用程式。

**提示！ 返回最近使用的應用程式**

點按並按住**主頁**鍵。畫面將會顯示您最近使用的應用程式清單。

## 8. 安裝 LG PC suite 至您的電腦

要以 USB 線同步數據至您的電腦，您需在電腦上安裝 LG PC suite 程式。

您可於 LG 網站下載此程式。瀏覽至 <http://www.lg.com> 網站以獲取您的手機安裝程式和使用資訊。您可參考往下圖示和依據網站指示以下載適合您手機型號的軟件並完成安裝。

# 重要通知

## LG PC SUITE

LG PC Suite IV 是一種幫助您使用 USB 數據線將手機連接到電腦的程式，讓您在電腦上使用手機的功能。

### LG PC Suite IV 主要功能

- 輕鬆建立、編輯和刪除手機資料。
- 從電腦和手機同步數據（通訊錄、日曆/訊息（文字訊息）、書籤等）。
- 使用簡單的拖放動作，在電腦和手機之間輕鬆傳輸多媒體檔案（相片、影片及音樂）。
- 從手機傳輸訊息到電腦。
- 在不會損失您的數據的情況之下更新軟件。

## LG-P920 不支援：

- 透過藍芽來連接電腦
- 行事曆中的待辦事項
- Java 應用程式


要需更多資訊，請參照 LG PC Suite IV 的用戶指南。這可在安裝 LG PC Suite IV 後從說明菜單上找到。

## 下載 LG 手機支援軟件

1) 登入 [www.lg.com](http://www.lg.com) , 到支援→手機支援



2) 下載及安裝LG 手機支援軟件

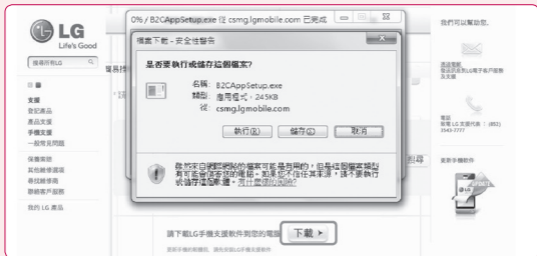

3) 在下載相關手機支援軟件後並執行以完成下載所購買手機型號的 LG PCSuite IV 檔案並按照指示完成安裝。

\* 在完成 LG PCSuite IV 安裝後，請確保大容量儲存設定在停用模式，以執行 LGPCSuite IV。

# 重要通知

## 9. 透過 USB 連接手機至電腦

如要透過 USB 設備傳送 microSD 記憶卡上的資料：

- 1 安裝您的 microSD 記憶卡至您的手機。（有可能已插在您的手機中。）
- 2 連接 USB 線前，請確保已於您的手機啟動**大容量儲存**模式。（在**應用程式**標籤，選擇**設定 > SD 卡及手機儲存 > 僅限大容量儲存**）
- 3 使用手機隨附的 USB 線，將手機連接至電腦的 USB 連接埠。點按**開啓 USB 儲存體**。您會收到 USB 已連接的通知。

當手機已連接為 USB 記憶體，您會收到通知。您手機上的 microSD 卡會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 microSD 卡。

**附註：**卸載 PC Suite IV 後，不會自動移除 USB 及藍芽驅動程式。因此，必須手動解除安裝這些驅

動程式。

**提示！** 要重新在手機上使用 microSD 卡，您需要開啓通告欄並點按**關閉 USB 儲存裝置**。期間您無法在手機上存取 microSD 卡，因此您亦無法使用依賴 microSD 卡的應用程式，例如相機、圖片集及音樂功能。要令手機從電腦中斷連接，請小心地按照電腦的說明中斷連接 USB 裝置，以免記憶卡上的資料流失。

- 1 安全地從電腦解除 USB 裝置連接。
- 2 開啓通告欄，點按**關閉 USB 儲存裝置**。
- 3 在開啓的對話方塊上點按**關閉**。

### 警告：

手機開啓時，請勿插入或移除 microSD 卡。否則，microSD 卡及手機可能會損壞，而 microSD 卡內儲存的數據亦可能毀損。要安全取出 microSD 卡，從主螢幕按下功能表鍵並點按設定 > SD 卡及手機儲存 > 移除 SD 卡。

## 10. 使用數據連接時解鎖螢幕

如在數據連接期間在設定時間內不點按螢幕，您的螢幕會自行關掉。點按螢幕可再次開啓。

## 11. 在開啓及關閉電腦時，請勿連接手機

確定透過數據線中斷手機與電腦的連接，避免令電腦受損。

## 12. 將手機直立

請以垂直和水平方向握住手機，就像普通手機一般。LG-P920 擁有內置天線。小心不要刮花或損壞手機背部，這會令手機功能受損。撥打 / 接聽電話或傳送 / 接收數據時，盡量避免握住天線所在的手機下部分。否則可能影響通話品質。

## 13. 如果螢幕凍結

如果手機不能回應用戶輸入或螢幕凍結：

請取下電池，重新插入電池並開啓手機。如果問題仍然存在，請聯絡服務中心。

# 了解您的手機

要開啓手機，請長按電源鍵。

要關閉手機，請長按電源鍵，並點按關機，然後點按確定。

耳機


感應器

主頁鍵

- 由任何畫面回到主頁。

功能表鍵

- 檢查可使用的選項。

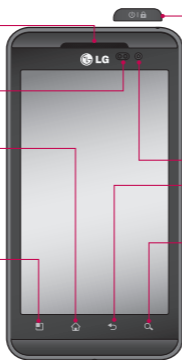

電源/鎖定鍵

- 按住此鍵以開啓 / 關閉手機電源。
- 將螢幕鎖定及解鎖。

內相機鏡頭

返回鍵

- 返回前一畫面。

搜尋鍵

- 搜尋網絡以及您手機中的內容。



**警告：**若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控螢幕功能。請勿將保護貼掩蓋 LCD 的感應器。這可能會導致感應器出現故障。

**提示！** 每當您點按應用程式以查看可使用的選項時，點按功能表鍵。

**提示！** 如果在您使用 LG-P920 時顯示錯誤訊息，或無法開啓，請取下電池，並重新裝上電池，稍後再次開機。

立體聲耳機插孔 電源/鎖定鍵



音量鍵

- 在桌面上：控制鈴聲音量。
- 通話中：控制聽筒音量。
- 播放音樂時：控制媒體音量。

充電器、USB 線插孔

HDMI

3D 鍵

- 按住此鍵可存取 3D 空間。
- 在相機模式：按此按鍵拍攝相片。



電池蓋

電池

智能卡插槽

microSD 記憶卡  
插槽

相機鏡頭




# 了解您的手機


## 安裝智能卡 (SIM 卡)

開始使用您的新手機前，您需  
要先設定手機。要插入智能卡  
及電池：

- 1 要取下電池蓋，請用一隻手  
握住手機。用另一隻手按  
壓電池蓋中心位置，用食指  
拉開電池蓋。然後揭開電  
池蓋。

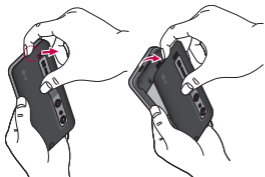

- 2 將智能卡滑入智能卡插槽  
中，確保智能卡的金屬接  
觸面朝下。

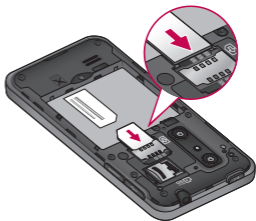


- 3 對準手機及電池的金屬接觸  
面插入電池。



#### 4 重新蓋上電池蓋。




### 為手機充電

充電器接頭位於 LG-P920 側邊插入充電器，並將其連接至電源插座。您必須繼續為 LG-P920 充電，直至您看見 。




**附註：**首次使用時必須將電池完全充電，以提高電池壽命。

#### 1 取下電池蓋。

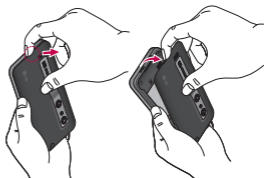

# 了解您的手機

- 2 將記憶卡插入插槽中。並確保金屬接觸面朝下。

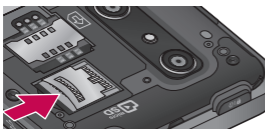

## 格式化記憶卡


您的記憶卡可能已格式化。如尚未格式化，您必須在使用前將其格式化。

**附註：**格式化記憶卡時，所有已儲存在卡上的資料都會被刪除。

- 1 在主頁點按**應用程式**標籤，以開啓應用程式功能表。
- 2 選擇**設定**。
- 3 點按 **SD 卡及手機儲存**。
- 4 點按**解除安裝 SD 卡**然後點按**確定**以確認。
- 5 點按**格式化 SD 卡** > **格式化 SD 卡** > **清除全部**。
- 6 如果您設定圖案，輸入圖形鎖定然後選擇**清除全部**。記憶卡將被格式化並且可使用。

**附註：**如您的記憶卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有檔案經已刪除。

**提示！** 如已移除記憶卡，您可循以下步驟進行格式化。點按**應用程式 > 設定 > SD 卡和手機儲存 > 將 SD 卡格式化。**

 **警告** 手機開啓時，請勿插入或移除記憶卡。否則，您的記憶卡及手機可能會損壞，而記憶卡內儲存的數據亦可能毀損。要安全地移除記憶卡，選擇**應用程式 > 設定 > SD 卡及手機儲存 > 移除 SD 卡。**

# 您的桌面

## 觸控螢幕小秘訣

以下是一些小秘訣，讓您輕鬆使用觸控螢幕操作裝置。

**點按** - 要選擇功能表/選項或開啓應用程式，只需點按即可。




**點按並按住** - 要開啓選項功能表或抓住要移動的物件，點按並按住該選項。



**拖動** - 要捲動清單或緩慢移動，用手指在觸控螢幕上拖動。




**翻閱** - 要捲動清單或快速移動，用手指掃過螢幕（快速拖動並放手）。

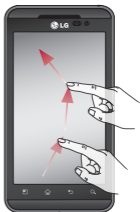

**縮放** - 要縮小內容或圖像，以兩隻手指觸按屏幕，然後拉近兩隻手指。

要放大，在內容或圖像上分開兩隻手指。



**附註：**

- 要選擇某個項目，請觸控圖示中心。
- 請勿過份用力按壓：只需平穩地輕力點按，觸控螢幕已能感應。
- 使用手指尖點按您需要的選項。請注意不要碰到其他按鍵。

# 您的桌面

## 鎖定您的手機

當您不使用 LG-P920 時，輕按電源鍵鎖定手機。這有助防止意外點按螢幕及節省電量。

如果您有一段時間不使用手機，任何您正在瀏覽的畫面會被鎖定螢幕取代，以節省電量。

**附註：**如果您在設定圖案時正在執行任何應用程式，則這些應用程式可能繼續在鎖定模式中執行。我們建議您先結束所有程式才進入鎖定模式，以防產生不必要的收費及電池消耗（如通話、存取網絡或數據通訊）。

## 解鎖螢幕

要喚醒手機，按**電源**鍵。鎖定螢幕會出現。點按鎖定螢幕並向上拖動就可解鎖。您最後檢視的畫面將會開啓。

## 主頁

只需將手指左右滑動便可檢視。您可使用小工具自訂每個

控制板，它們是您喜愛的應用程式、資料夾及牆紙的捷徑。

**附註：**視乎您的手機供應商而定，某些螢幕圖像可能有所不同。

在桌面上，您可檢視螢幕下方的快速按鍵。快速按鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。



點按**手機**圖示開啓觸控撥號鍵盤，撥打電話。



點按可開啓**通訊錄**。



點按**訊息**圖示，進入訊息功能表。您可在此建立新訊息。



點按螢幕底下的**應用程式標籤**。您便可檢視全部已安裝的應用程式。點按以捲動檢視您的應用程式。


要開啓應用程式，只需點按應用程式清單中的圖示。

**附註：**預載應用程式有可能會因應您手機的軟件及您的服務供應商而有所不同。

## 在您的桌面上新增小工具



您可新增捷徑、小工具或資料夾，以自訂您的桌面。將您喜愛的小工具放在桌面上，您便可更輕鬆地使用您的手機。

### 要新增圖示至您的桌面：

- 1 在主頁螢幕上，點按**功能表**鍵  並選擇**新增**。或者，點按桌面的空白部分。
- 2 在**編輯模式**功能表上，點按您要新增的項目類型。
- 3 例如，在清單中選擇**資料夾**並點按。在清單中選擇**最愛通訊錄**，然後點按。
- 4 新的資料夾圖示將會顯示在桌面上。將其拖動至正確控制板上所需的位置，然後鬆開手指。


**提示！** 要從應用程式功能表新增應用程式圖示至桌面，點按並按住您要新增的應用程式。

### 要從桌面移除應用程式圖示：

- 1 點按並按住您想移除的圖示。垃圾桶圖示  會出現。
- 2 拖動並將應用程式圖示拉至垃圾桶圖示 。

**附註：**無法刪除預載應用程式。（只可從畫面移除其圖示。）

### 返回最近使用的應用程式

- 1 點按並按住**主頁**鍵 。螢幕會彈出您最近使用過的應用程式的圖示。
- 2 點按圖示以開啓該應用程式，或者點按**返回**鍵回到使用中的應用程式。


# 您的桌面


## 通告欄

通告欄顯示於螢幕的頂部。



您可點按並向下滑動通告欄。

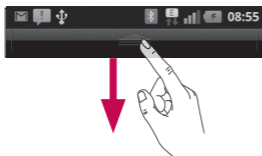

或者，您可在桌面點按**功能表**鍵，並選擇**通知**。您可在此檢查及管理 Wi-Fi、藍芽和 GPS 狀態，以及查看其他通知。

## 檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及藍芽和數據連接。

下表說明可能在狀態列中看到的圖示的含義。

13/05/2011

17:29

### [狀態列]

圖示	說明
	沒有智能卡
	無訊號
	飛航模式
	已連接至 Wi-Fi 網絡
	有線耳機
	正在通話
	通話保留
	喇叭開啓
	電話話筒已靜音
	未接來電
	藍芽開啓
	已連接至一個藍芽裝置

圖示	說明
	系統警告
	鬧鐘已設定
	新留言訊息
	鈴聲靜音
	震動模式
	電池已完全充電
	電池充電中
	數據輸入及輸出
	手機已通過 USB 線連接至電腦
	數據下載
	數據上載
	螢幕電話已連接
	還有 3 個通知未顯示


圖示	說明
	正在同步數據
	下載完成
	新電郵
	新 Gmail
	新 Google 語音訊息
	新訊息
	正在播放歌曲
	待辦事項
	USB 共享網絡已啓動
	可攜式 Wi-Fi 熱點已啓動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啓動
	GPS 開啓


# 您的桌面


## 螢幕鍵盤





您可以使用螢幕鍵盤輸入文字。螢幕鍵盤在您需要輸入文字時會自動在屏幕上顯示。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

## 使用鍵盤輸入文字

 點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。

 點按切換至數字及符號鍵盤。您亦可以按住這個標籤以檢視設定功能表。

 點按以觀看或改變書寫語言。

-  點按以輸入一個空格。
-  點按以在訊息欄新建一行。
-  點按以刪除前一字母。
-  點按以隱藏螢幕鍵盤。

# Google 帳戶設定

當您第一次在手機上開啓 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。

## 建立您的 Google 帳戶

- 1 在主頁點按**應用程式**標籤 ，以開啓應用程式功能表。
- 2 點按 **Gmail** 後再按 **[Next](下一頁) > [Create]** 建立以啓動 Gmail 設立精靈。
- 3 點按文字欄位以開啓觸控鍵盤，並輸入您的姓名及 Google 帳戶使用者名稱。輸入文字時，您可按鍵盤上的**下一頁**移至下一個文字欄位。
- 4 輸入您的名稱及使用者名稱後，點按**[Next](下一頁)**。手機會連接 Google 伺服器，並檢查使用者名稱是否可用。

- 5 輸入並重新輸入密碼。然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

## 登入您的 Google 帳戶

- 1 輸入您的電子郵件地址及密碼，然後點按 **[Enter]** 登入。等候登入。
- 2 登入後，您可使用手機上的 Gmail 及 Google 服務。
- 3 當您在手機上設定了 Google 帳戶，您的手機便會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定。）

登入後，您可使用 Gmail、Google Calendar、Android Market、從 Android Market 下載應用程式、備份您的設定至 Google 伺服器，以及在手機上享用其他 Google 服務。

# Google 帳戶設定

## 重要資訊！





- 某些應用程式，例如日曆、通話等只能適用於您新增的首個 Google 帳戶。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。當您登入 Google 帳戶後，沒有選項可供您登出或移除首個 Google 帳戶，不過您可以新增/移除其他 Google 帳戶。當您登入時，您在網上的通訊錄、G-mail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。當您第一次在手機上開啓 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。
- 如果您希望使用備份功能，從另一運行 Android OS 或更高版本的手機將設定還原至此手機，則必須在設定時


即登入您的 Google 帳戶。如果您等到設定完成之後，將不會還原您的設定。

- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

# 通話 / 聯系



## 撥打語音通話

- 1 點按  開啓按鈕。
- 2 在鍵盤上輸入號碼。要刪除一個數字，點按清除圖示 。
- 3 點按通話圖示  撥打電話。
- 4 要結束通話，點按結束圖示 。

**提示！** 若要在撥打國際電話時輸入「+」，按住 。

**提示！** 若要在通話中顯示鍵盤，請點按撥號鍵盤。

## 撥打視像通話

- 1 點按  開啓按鈕。
- 2 輸入之前一樣的電話號碼。
- 3 點按視像通話圖示  以進行視像通話。

- 4 如果您不想使用免持聽筒，請點按免持聽筒並且確保已插入耳機。
- 5 連線視像通話時，您將看到自己的圖像；對方接聽電話後，您將在螢幕上看到他們的圖像。根據需要調校攝錄機位置。
- 6 要結束通話，點按結束。

前往收音機錄製

**撥號鍵盤：**輸入號碼。

**保留：**將咪高風靜音及暫停影片。

**靜音：**將咪高風靜音。

**揚聲器：**開啓或關閉揚聲器。


# 通話 / 聯系

## 視像通話功能表

**拍攝** - 您可以拍攝對方或自己的圖像。

**使用後置 / 前置相機** - 切換相機。



## 從通訊錄中撥打電話

- 1 點按  以開啓通訊錄。
- 2 捲動通訊錄，或點按**搜尋**以輸入您想致電的聯絡人名稱的第一個字母。
- 3 在清單內點按您想致電的聯絡人。



## 接聽來電和拒接來電

**提示！** 如果您忘記將手機設定為靜音模式，您只需點按應用程式標籤 > 設定 > 手勢 > Use 使用移動手勢 > 來電 > 勾選靜音，並在來電期間向下傾斜手機來使鈴聲靜音。

## 在螢幕鎖定時：

手機響鈴後，將接聽圖示  向右拖動。將拒接圖示  向左拖動以拒接來電。

## 在螢幕解鎖時：

手機響鈴後，點按接聽  圖示。點按拒接圖示  以拒接來電。

**提示！ 道歉訊息** 當您要拒接來電，您可以透過拖動屏幕上的**道歉訊息**快速發送一條訊息。如果您需要在會議中回覆訊息，此功能將十分有用。


## 調整通話音量

要在通話時調整通話音量，按手機右側的音量上/下鍵。

## 通話期間撥打第二個電話

- 1 第一次通話中，點按撥號鍵盤並撥號。您也可以點按通訊錄搜尋聯絡人，然後選擇您想致電的號碼。
- 2 點按**通話**圖示以開始撥打電話。
- 3 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 4 點按保留清單在通話之間切換。**附註：**您可以點按**合併通話**開始會議通話。
- 5 要結束使用中通話，點按結束**結束**圖示。

## 檢視通話記錄

在桌面點按，然後選擇**通話記錄**標籤。

檢視所有已撥、已接和未接來電的完整清單。

**提示！** 點按任何單個通話記錄項目，檢視呼叫的日期、時間和持續時間。

**提示！** 點按**功能表**鍵，然後點按**刪除全部**，刪除所有記錄項目。

## 通話設定

您可設置手機的通話設定，例如來電轉接及您的服務供應商提供的特別功能。

- 1 在主頁點按**應用程式**標籤，以開啓應用程式功能表。
- 2 選擇並點按**設定**。
- 3 點按**通話設定**，選擇您要調整的選項。

### < 固定撥號 >

選擇**固定撥號**，以開啓並編輯一份可從您手機撥打的號碼清單。您將需要從網絡商取得 PIN2 碼。僅可從手機撥出固定撥號列表上的號碼。

### < 語音留言 >

**語音信箱服務** - 讓您選擇您的服務供應商的語音信箱服務。

## 通話 / 聯系

**語音信箱設定** - 如果您正在使用您的服務供應商所提供的語音信箱服務，此選項允許您輸入電話號碼用來接聽或者管理您的語音信箱。

### < 其他通話設定 >

**來電拒接** - 設定拒接清單上的來電或所有來電。如果您建立拒接來電列表，點按拒接來電列表 > 功能表鍵 > 新拒絕項目。然後從通訊錄、通話記錄或新號碼建立新增拒絕項目。

**來電轉接** - 您可以將您的話音通話 / 視像通話轉接至其他號碼。選擇是否轉接所有來電、繁忙時轉接來電、未接聽和無法接通時轉接來電。

**其他設定** - 您可更改以下設定：

- **本機號碼**：選擇是否在撥出的電話中顯示您的電話號碼。

- **來電等候**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您。（視乎您的網絡供應商而定。）

**通話限制** - 選擇您想要何時限制通話。輸入通話限制密碼。請向您的網絡供應商瞭解此服務詳情。

**通話費用** - 檢視您的通話收費。（此服務視乎您的網絡而定；一些網絡供應商不支援此功能。）

**通話時間** - 檢視最後通話、所有通話、撥出通話及已接來電的持續時間。


**歉意訊息** - 當您拒接來電時，您可以使用此功能快速發送一條訊息。如果您需要在會議中回覆訊息，此功能將十分有用。

**視像通話設定** - 變更視像通話設定。

## 通訊錄

您可在手機上新增聯絡人，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的聯絡人同步。

## 搜尋聯絡人

- 1 從桌面點按  以開啓通訊錄。
- 2 點按**搜尋**，使用鍵盤輸入該聯絡人姓名。

## 新增聯絡人

- 1 從桌面點按 ，然後輸入新聯絡人的號碼，再點按**功能表鍵** ，然後點按**新增至通訊錄**。然後選擇要**建立新通訊錄**或**新增至現有的**。
- 2 如您希望為新聯絡人新增相片，點按 。
- 3 **從拍攝照片**或**從相簿挑選**。
- 4 點按以選擇鈴聲 。
- 5 點按一個文字欄位以開啓觸控鍵盤，然後輸入新聯絡人的名稱。


6 輸入聯絡人的詳情。

7 點按**儲存**可儲存聯絡人。


## 常用的聯絡人

您可將常用的聯絡人指定為您的最愛。

### 新增聯絡人至您的最愛：

- 1 從桌面點按  以開啓通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右上角的星星。星號會轉為金色。

### 要從最愛清單移除聯絡人：



- 1 從桌面點按  以開啓聯絡人清單。
- 2 點按**群組**標籤，然後選擇**加入收藏**。點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右上角的金色星星。星號會轉為灰色，而聯絡人會從我的最愛中移除。

# 訊息/電郵

## 訊息

LG-P920 將文字訊息和多媒體訊息結合在一個功能表中。

## 發送訊息

- 1 點按桌面的  圖示，然後點按新訊息以開啓空白訊息。
- 2 在**收件者**一欄中輸入聯絡人的名稱或撥打號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可點按一個建議的收件者。您可以新增多個聯絡人。  
**注意：**如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。
- 3 點按下方的**輸入訊息**開始輸入訊息內容。
- 4 點按**發送**以發送訊息。**提示！** 您可點按  圖示以把您想發送的檔案附加到您的訊息。

- 5 訊息畫面會開啓，訊息內容會顯示在您的名稱之下。螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息對話。

### 警告：

160 個字元的限制可能會依國家/地區而有所不同，取決於語言及文字訊息的編碼方式。

### 警告：

如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

**附註：**當您在通話期間收到文字訊息，將會收到通知。

## 更改訊息設定

您的 LG-P920 已預先定義訊息設定，以便您可立即發送訊息。您可按個人偏好更改這些設定。

點按桌面上的**訊息**圖示，然後點按**功能表**鍵，再點按**設定**。

## 設定您的電子郵件

點按**應用程式**標籤，然後選擇電子郵件。如果尚未設定電子郵件帳戶，請開始電子郵件設定精靈。

**提示！** 如已設定電子郵件帳戶，則不會自動啟動精靈。

您可以選擇郵箱類型為 **MS Exchange** 或其他。

## Microsoft Exchange 電子郵件帳戶

**電郵地址** — 輸入帳戶的電子郵件地址。

**密碼** - 輸入帳號密碼。

**使用者名稱** — 輸入帳戶的使用者名稱。

**伺服器位址** - 輸入伺服器位址

**網域** — 輸入帳戶的網域（可選擇）

**使用 SSL** - 選擇是否使用 SSL

為 Microsoft Exchange 使用 SSL

點按下一步按鈕以連接伺服器。

設定完成頁面會出現：您需要為帳戶顯示及我的名字輸入「名稱」。

帳戶現在會顯示在電郵資料夾的帳戶清單中。

# 訊息/電郵

## 其他 (POP3, IMAP) 電郵帳戶

**電郵地址** — 輸入帳戶的電子郵件地址。

**密碼** - 輸入帳號密碼。

設定完成頁面會出現，您需要輸入「名稱」。

帳戶現在會顯示在電郵資料夾的帳戶清單中。

**POP3 / IMAP4** - 選擇協定類型，即 POP3 或 IMAP4。

**內送伺服器** — 輸入內送電郵伺服器的地址。

**安全種類** - TLS/SSL/關閉。

**連接埠號碼** - 通常會顯示帳戶的預設號碼。

**外送伺服器** — 輸入外送電郵伺服器的地址。

**SMTP 安全種類** - TLS/SSL/關閉。

**連接埠號碼** - 通常會顯示帳戶的預設號碼。

## 帳戶螢幕

帳戶螢幕列出您的**聯合收件匣**及您的每個電子郵件帳戶。


- 點按**應用程式**標籤，然後選擇**電郵**。 螢幕顯示**帳戶清單**。

**提示！** 在帳戶清單中，用力點按電郵帳戶，將帳戶圖示移動至桌面。 點按圖示直接前往收件匣。

您可點按一個帳戶以檢視其**聯合收件**。 發送電郵的預設帳戶旁邊會有一個勾號。

要開啓聯合收件匣：

如您已配置電子郵件從多於一個帳戶發送及接收電子郵件，則可以在**聯合收件匣**檢視發送至所有帳戶的所有訊息。

- 1 點按應用程式標籤，然後選擇電郵。
- 2 點按**聯合收件匣**（於**帳戶**屏幕上）。**聯合收件匣**的訊息左側會按照**帳戶**以在帳戶屏幕內用於帳戶的相同顏色編碼標示。
- 6 點按**傳送**。如您尚未準備好發送訊息，點按**功能表**鍵並按**儲存為草稿**，可把訊息存到**草稿**資料夾。點按**草稿**資料夾內的訊息，繼續編寫訊息。如您發送前點按**返回**鍵 ，您的訊息也會儲存為草稿。點按**放棄**以放棄並刪除訊息，包括任何已儲存的草稿。如您沒有連接至網絡，例如正處於飛航模式，您發送的訊息會儲存在**寄件匣**料夾內，直至您連接至網絡。如載有任何有待處理的訊息，會於**帳戶**屏幕顯示**寄件匣**。

## 編寫及發送電子郵件

### 要編寫及發送訊息：

- 1 在**電郵**應用程式，點按**功能表**鍵，並點按**編寫**。
- 2 輸入將會收到訊息的收件者的地址。當您輸入文字時，會從您的通訊錄顯示匹配的地址。以逗號分隔多個地址。
- 3 點按**功能表**鍵，然後點按**新增抄本/密件抄送**，以複製或隱藏複製至其他聯絡人/電郵地址。
- 4 輸入訊息的文字。
- 5 點按**附加** 以在訊息加上您想發送的檔案。

請注意，使用 Exchange 帳戶發送的訊息不會儲存在手機內，而會儲存在 Exchange 伺服器內。如您想檢視寄件備份資料夾內您所發送的訊息，點按功能表鍵並點按資料夾，然後點按寄件備份資料夾，並從功能表選項中選擇重新整理。

# 訊息/電郵

**提示！** 當收件匣收到新電郵，會發出聲音及震動通知。

## 處理帳戶資料夾

每個帳戶具有收件匣、寄件匣、寄件備份、草稿匣、垃圾桶及垃圾郵件資料夾。視乎您的帳戶服務供應商支援的功能，您可擁有額外資料夾。

## 新增及編輯電子郵件帳戶

要新增電子郵件：

- 1 點按**應用程式**標籤，然後選擇**電子郵件**。
- 2 選擇 **MS Exchange** 或**其他**。如已設定電子郵件帳戶，則不會自動啟動精靈。在此情況下，您需要點按**功能表**鍵，然後點按**新增帳戶**。

要變更帳戶設定：

- 1 開啓**帳戶**畫面。
- 2 點按**功能表**鍵並選擇**設定**。


要刪除電子郵件：

- 1 開啓**帳戶**畫面。
- 2 點按並按住您想刪除的帳戶。
- 3 在開啓的功能表點按**移除帳戶**，然後在對話方塊中點按**確定**以確認。

**提示！**

### 最新動態

按優先次序顯示未接來電、未讀訊息、語音訊息、電郵及 Twitter 的通知。會顯示特定時間的通知。

- 1 選擇**應用程式** > **最新**。
- 2 透過點按  按鈕，您可以選擇列表檢視或類別檢視。

# 社交網絡

您可在手機上使用社交網絡，並管理您在網上社區內的微型博客。您可更新目前狀態、上載相片，並檢視朋友們的狀態更新。

如您沒有這些帳戶，您可到它們的網站設立一個帳戶。

**附註：**連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

## 新增您的帳戶至手機

- 1 點按並按住桌面。顯示不同小工具時，選擇 **Social+**  並點按  **設定按鍵**。您亦可使用不同方法。從桌面選擇**應用程式 > 設定 > 帳戶及同步處理 > Social+ 設定**。
- 2 在 Facebook、Twitter 及 MySpace 中選擇希望使用的社交網絡應用程式。
- 3 輸入您的社區電郵地址及密碼，然後點按**登入**。
- 4 請等待系統基於您的社區確

認您的詳細資料。

- 5 如果您點按社區，可看見其目前狀態。

## 檢視及更新您的狀態

- 1 您可隨時使用 **Social+**  小工具檢視及更新社交社區內容。
- 2 在 **Social+**  小工具選擇您要登入的社交網絡服務。您將會看見您的狀態及內容。
- 3 當您點按輸入方塊，螢幕會切換以評論更新您的目前狀態或上載照片。

**提示！** 您可透過選擇核取方塊，同時更新您的狀態和上載相片至 Facebook for LG、Twitter for LG 和 MySpace for LG。

**附註：**視乎網絡服務而定。

# 社交網絡

**提示！** 您可同步朋友聯絡資料和聯絡人清單。

## 從手機移除帳戶

- 1 選擇**應用程式 > 設定 > 帳號及同步處理**。
- 2 選擇您希望刪除的一個帳戶，然後點按**移除帳號**。

## Facebook 和 Twitter

- 1 在主頁點按應用程式標籤 ，以開啓應用程式功能表。
- 2 在 Facebook 和 Twitter 中選擇希望使用的社交網絡應用程式。
- 3 輸入您在社區內設定的電子郵件地址及密碼，然後點按登入。
- 4 請等待系統基於您的社區核對您的詳細資料。
- 5 如您點按您的社區，您可查看該社區的即時狀態。

# 相片及影片

## 了解取景器（相機）

**縮放** - 放大或縮小。 或者，您可使用側音量鍵。

**切換相機** - 您可從外置相機轉換至內置相機。



**在 2D 與 3D 模式之間轉換的** - 將照片拍攝模式在 2D 與 3D 之間切換。

**拍攝相片**

**視像攝錄機** - 向右滑動此圖示以切換到視像攝錄機。

**媒體匣** - 點按以檢視您最後拍攝的照片。 這容許您從相機模式存取圖片庫並檢視已儲存的相片。

**設定** - 點按此圖示，開啓設定功能表。 請參閱使用進階設定。


**閃光燈** - 容許您在黑暗地方拍照時打開閃光燈。

**亮度** - 決定及控制進入圖像的光線量。 沿著亮度計滑動指標，向 - 方向可降低圖像亮度，向 + 則可提升亮度。

**提示！** 您可以關閉所有捷徑選項，以獲取更清晰的取景器螢幕。 您只需點按一下取景器的正中心。 要還原選項，請再次點按螢幕。

# 相片及影片

## 拍攝快照

- 1 開啓相機應用程式。
- 2 握住手機，將鏡頭對準拍攝的對象。
- 3 點按快門圖示 。
- 4 對焦圖像後，對焦指示器會變為綠色，相機便會拍攝相片。

**附註：** 基於相機本身的特質，當您於室內拍攝的時後有可能會產生暗角問題。（「暗角」指中心與周圍之間輕微的色差。）

## 拍攝相片後

拍攝的相片將顯示於屏幕上。

**分享** 點按以分享相片，透過 Facebook、Social+、Twitter、Picasa、Gmail 訊息、電子郵件或藍芽。

**備註：** 如在漫遊期間下載多媒體訊息，則可能需額外收費。

**提示！** 如果您擁有社交網絡帳戶並已在手機設定好，您可在您的社區中分享您的照片。

**設為** 點按可將圖像設為通訊錄圖示或者牆紙。

**重新命名** 點按以編輯所選擇相片的名稱。

**編輯** 點按以編輯拍攝的相片。



點按以刪除圖像。



點按以立即拍攝新相片。



點按以檢視您最後拍攝的照片。

## 使用進階設定（相機）

從取景器中點按  以開啓所有進階選項。

選擇選項後，請點按**返回**鍵。

**對焦** - 從**自動**、**微距**、**動態**及**表情追蹤**選擇對焦選項。

**圖像大小** - 點按以設定所拍攝相片的大小（像素）。

**場景模式** - 可選擇**自動**、**人像**、**風景**、**黃昏**和**夜間**。

**白平衡** - 可選擇**自動**、**白熱光**、**陽光**、**螢光燈**和**陰天**。

**色彩效果** - 為下一張相片選擇色調。可選擇**無**、**棕褐色**、**單色**、**底片**、**鮮艷**及**曝光**。

**計時器** - 自動計時器讓您設定按下快門後的延遲拍攝時間。

**拍攝模式** - 從**標準**或**連環**拍攝選擇拍攝模式。

**圖像質量** - 可選擇**最細緻**、**細緻**和**標準**。質素愈細緻，相片便愈清晰。不過，檔案大小會較大，表示您在記憶體中儲

存較少的照片。

**自動檢視** - 如您將**自動檢視**設定為開啓，便會自動向您展示您剛拍攝的相片。

**快門聲** - 有四種快門聲音可供選擇。

**標籤位置** - 啓動以使用手機的定位服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

**附註：**此功能只適用於已啓用定位服務。

**儲存** - 選擇**內置記憶體**或**SD卡**以儲存圖像。



還原所有相機預設設定。




點按便可知此功能如何操作。以下向您提供快速指南。

**提示！** 當您結束相機後，某些設定將返回預設。拍攝下一張相片前，需要檢查相機設定。

# 相片及影片

**提示！** 設定功能表乃疊於取景器上，因此當您更改圖像顏色或質素功能，您會在設定功能表背後看見預覽圖像的更改。

## 檢視已儲存的相片

**1** 您可以在相機模式中存取已儲存的相片。只需點按，您的圖片集即會顯示在螢幕上。點按螢幕上的相片。您會看到**投影播放**及**功能表**。



點按以檢視投影片。點按**功能表**並選擇您所需要的選項。



點按以分享內容。



點按以刪除相片。



點按**更多**以檢視更多以下的選項。

**詳細資料** - 進一步瞭解更多有關內容的資訊。

**設為** - 設為通訊錄圖示或

者牆紙。

**修剪** - 裁剪您的相片。在螢幕上移動手指以選擇區域。

**向左旋轉**。


**向右旋轉**。

**編輯** - 點按以使用不同編輯圖像的工具。

## 了解取景器（視像攝錄機）

**縮放** - 放大或縮小。或者，您可使用側音量鍵。

**切換相機** - 您可從外置相機轉換至內置相機。

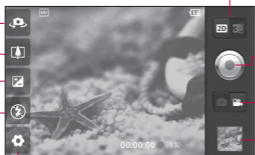

**在 2D 與 3D 模式之間轉換的** - 將照片拍攝模式在 2D 與 3D 之間切換。

**開始錄製**

**相機模式** - 向左滑動此圖示以切換到相機模式。

**媒體匣** - 點按以觀看您最後拍下的影片。這容許您從影片模式存取媒體匣並觀看已保存的影片。

**設定** - 點按此圖示，開啓設定功能表。請參閱使用進階設定。

**閃光燈** - 容許您在黑暗地方拍攝影片時開啓閃光燈。

**亮度** - 決定及控制進入圖像的光線量。沿著亮度計滑動指標，向「-」方向可降低圖像亮度，向「+」則可提升亮度。

**提示！** 您可以關閉所有捷徑選項，以獲取更清晰的取景器螢幕。您只需點按一下取景器的正中心。要還原選項，請再次點按螢幕。

# 相片及影片

## 拍攝快速影片

- 1 開啓**相機**應用程式並將相機模式按鈕移至**影片**位置。  
快門圖示會變成.
- 2 視像攝錄機的取景器會在屏幕上顯示。
- 3 握住手機，將鏡頭對準拍照對象。
- 4 點按開始影片圖示.
- 5 錄製將顯示於取景器底部，而計時器會顯示影片錄製的長度。
- 6 點按停止影片圖示以停止錄製。

## 拍攝影片後

代表該影片的靜止圖像會在螢幕上出現。

**播放**

點按以播放影片。

**分享**

點按便能以 Facebook、Gmail、YouTube、訊息電子郵件、藍芽分享影片。

**附註：** 如在漫遊期間下載多媒體訊息，則可能需額外收費。

**重新命名**

點按以編輯所選擇影片的名稱。



點按以刪除錄製的影片，並點按**是**確認。取景器將再次出現。



點按此鍵可直接錄製另外一個影片。



點按以檢視您最後拍下的影片。

## 使用進階設定（視像攝錄機）

從取景器中點按  以開啓所有進階選項。選擇選項後，請點按**返回**鍵。

**影片大小** - 點按以設定您將錄製影片的大小（像素）。設定影片圖像大小為 1080P(1920x1080)、HD(1280x720)、D1(720x480)、VGA(640x480)、QVGA(320x240) 或 QCIF(176x144)。

**白平衡** - 白平衡確保您影片內的白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動**、**白熱光**、**陽光**、**螢光燈**和**陰天**。

**色彩效果** - 為影片選擇新色調。可選擇**無**、**棕褐色**、**單色**、**底片**、**鮮艷**及**曝光**。


**影片質量** - 可選擇最**細緻**、**細緻**和**標準**。


**持續時間** - 設定影片的時間限制。您可選擇**標準**或**多媒體訊息**限制大小上限，以透過多媒體訊息發送影片。

**聲音** - 選擇**靜音**以錄製無聲影片。

**自動檢視** - 如您將此項設定為**開啓**，將會自動顯示您剛錄製的影片。


**儲存** - 選擇**內置記憶體**或**SD卡**以儲存影片。

 重新設定所有影片相機設定。

 點按便可知此功能如何操作。以下向您提供快速指南。

# 相片及影片

## 觀看已儲存的影片

- 1 在取景器內點按右下角的 。
- 2 您的圖片集會顯示於屏幕上。
- 3 點按影片以播放。

## 觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機左側的音量鍵。

## 3D 相片和影片

### 了解取景器 (3D 相機)



- 1 **切換相機** - 您可從外置相機轉換至內置相機。


- 2 **3D 對焦** - 您可調整底部條列重疊部分的多寡，以手動微調 3D 對焦。開始拍攝 3D 照片前，您可使用此功能。
- 3 **亮度** - 決定及控制進入影片的光線量。沿著亮度計滑動指標，向「-」方向可降低影片亮度，向「+」則可提升亮度。
- 1 **閃光燈** - 容許您在黑暗地方拍攝影片時開啓閃光燈。
- 5 **設定** - 點按此圖示，開啓設定功能表。請參閱使用進階設定。

**3D 對焦模式** - 從邊框、中心選擇自動 3D 對焦選項。邊框使用邊框區域，將重疊的多寡最佳化。中心使用中心區域。您亦可使用取景器的 3D 對焦功能，手動進行微調。

## 拍攝 3D 相片

- 1 開啟相機應用程式。
- 2 選至取景器的 3D 按鍵 。
- 3 握住手機，將鏡頭對準拍攝的對象。
- 4 點按快門圖示 。
- 5 相機會為圖像對焦。對焦圖像後，每個角落的對焦指示器會變為綠色，相機便會拍攝相片。

## 了解取景器（3D 影片相機）

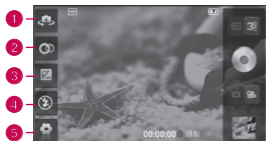

- 1 **切換相機** - 您可從外置相機轉換至內置相機。

- 2 **3D 對焦** - 您可調整底部條列重疊部分的多寡，以手動微調 3D 對焦。開始拍攝 3D 影片前，您可使用此功能。錄製期間無法調整此功能。
- 3 **亮度** - 決定及控制進入影片的光線量。沿著亮度計滑動指標，向「-」方向可降低影片亮度，向「+」則可提升亮度。
- 4 **閃光燈** - 容許您在黑暗地方拍攝影片時開啓閃光燈。
- 5 **設定** - 點按此圖示，開啓設定功能表。請參閱使用進階設定。

**3D 對焦模式** - 從邊框、中心選擇自動 3D 對焦選項。邊界使用邊界區域，將重疊的多寡最佳化。中心使用中心區域。您亦可使用取景器的 3D 對焦功能，手動進行微調。

**穩定功能** - 選擇開啓以修正手震帶來的不穩。

# 相片及影片

## 拍攝快速 3D 影片

- 1 開啓相機應用程式並將相機模式按鈕移下至影片位置。快門圖示  會變成 。
- 2 視像攝錄機取景器會在螢幕上顯示：點按 3D 按鍵 。
- 3 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 4 點按開始影片圖示 。錄製將顯示於取景器底部，而計時器會顯示影片錄製的長度。
- 5 點按停止影片圖示  以停止錄製。

### 注意

- 3D 相機模式只可在橫向檢視時使用。
- 相機與對象之間的距離保持超過 0.5 米。
- 爲取得最佳 3D 觀看體驗，以距離雙眼 30~40 厘米握住裝置。

## 3D 空間

按住手機右側的 3D 鍵以存取 3D 空間。將會顯示 3D 內容，如 YouTube 3D、3D 圖片集、3D 相機及 3D 指南。



### YouTube 3D

- 1 點按 YouTube 3D 以啓動。當螢幕切換到 YouTube 3D 網絡，將會顯示不同的 3D 影片。
- 2 選擇您想觀看的影片。影片將於人像模式以並列格式顯示。
- 3 旋轉成爲橫向，便會自動開啓 3D 模式。



### 3D 圖片集

- 1 點按 3D 圖片集。將會列出 3D 影像。
- 2 選擇您想看的影像。

### 注意

- 螢幕距離您 30~40 厘米時，能取得觀看 3D 內容的最佳效果。



### 3D 相機

- 1 點按 3D 相機，螢幕便會切換至 3D 相機模式。要建立 3D 相片及 3D 錄影，請參閱上頁的 3D 相片及 3D 影片。



### 3D 遊戲和應用程式

- 1 點按 將會列出 3D 遊戲及應用程式和任何已從 Market 下載的 3D 遊戲及應用程式。4 個應用程式，如 Asphalt6、Let's Golf2、Nova 及 Gulliver's Travels，會在預設設定中提供。



### 3D 指南

3D 指南載有透過本手機令 3D 內容更容易使用的說明。將會建議您如何建立 3D 相片、透過 HDMI 連接到 3D TV、觀看 3D 內容和分享 3D 內容。


# 多媒體


## 媒體匣

可將檔案儲存至記憶卡中。使用記憶卡的好處在於，您可以釋放手機的記憶體空間。

點按**應用程式**標籤，然後選擇**媒體匣**。

- 1 點按螢幕上的相片。您會看到**投影播放**及**功能表**。

 點按以檢視幻燈片放映。

 Menu 點按以選擇您所需要的選項。

 點按以分享內容。

 點按以刪除相片。

 點按**更多**以檢視更多以下的選項。

**詳細資料** - 進一步瞭解更多有關內容的資訊。

**設為** - 設為通訊錄圖示或者牆紙。

**修剪** - 裁剪您的相片。在螢幕上移動手指以選擇區域。

**向左旋轉**。

**向右旋轉**。

**編輯** - 點按以使用不同編輯圖像的工具。

**要觀看 3D 內容，**

- 1 選擇您想觀看的圖像。
- 2 旋轉成爲橫向，便會開啓 3D 模式。
- 3 詳情請參閱 3D 指南。

**附註：** 部分圖像檔可由 2D 轉換爲 3D。

## 音樂

LG-P920 具有內置播放器，讓您播放所有您最愛的音樂。要存取音樂播放器，請點按應用程式標籤，然後選擇音樂。

## 播放歌曲

- 1 在桌面點按**應用程式**標籤，然後選擇**音樂**。
- 2 點按**歌曲**。
- 3 選擇要播放的歌曲。
- 4 點按  暫停播放歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  返回歌曲的開首。點按  兩次以返回至上首歌曲。

若要在聆聽音樂時調節音量，請按手機右側的向上及向下音量鍵。

點按並按住清單上的任何歌曲，便會顯示**播放**、**新增至播放列表**、**作為鈴聲**、**刪除**和**分享**選項。

**附註：** 音樂檔案的版權可能受國際公約和國內版權法保護。

需要取得許可或授權才可以複寫或複製音樂。在某些國家，法律禁止私人複製受版權保護的材料。下載或複製檔案前，請先檢查有關國家規管使用這類材料的法律。

## 使用 SmartShare

**SmartShare** 使用 DLNA（數碼生活網絡聯盟）技術透過無線網絡分享數碼內容。兩個裝置均必須獲 DLNA 認證以支援此功能。

### 開啓 SmartShare 及允許共享內容

- 1 點按應用程式標籤 ，然後選擇 **SmartShare**。
- 2 點按功能表鍵並選擇設定。
- 3 點按可偵測的核取方塊以開啓。
- 4 如果您想自動接受其他裝置的分享請求，點按始終接受

## 多媒體


請求。

- 5 如果您想自動允許其他裝置上傳檔案至手機，點按接收檔案。
- 6 在共享內容部分下，點按為想共享的內容類型加上核取符號。從圖片、影片及音樂中選擇。
- 7 **SmartShare** 現已啓用以共享內容。

### 從遠方資料庫共享內容至其他裝置

讓您的播放裝置（例如：電視）從遠方資料庫（例如：電腦）播放多媒體內容

**注意：**請確保裝置的 DLNA 功能已正確設定（例如：電視及電腦）

- 1 點按應用程式標籤 ，然後選擇 **SmartShare**。
- 2 點按右上方的按鈕以從播放裝置表選擇裝置。
- 3 點按左上方的按鈕以從遠方資料庫選擇裝置。
- 4 您可瀏覽資料庫。

- 5 點按內容縮圖或按功能表鍵，然後選擇播放按鈕。

### 從手機共享內容至播放裝置（如電視）

**附註：**請確保播放裝置的 DLNA 功能已正確設定

- 1 使用媒體匣應用程式瀏覽圖片或影片時，點按並按住以選擇檔案。然後，您便可選擇多個用以共享的檔案。
- 2 點按功能表上的「共享」並選擇 **SmartShare**。
- 3 **SmartShare** 將自動啓用並包括所選檔案
- 4 從播放裝置表選擇裝置以播放檔案。


**注意：**按照類似步驟使用音樂播放器來分享內容

**通知：**要使用此應用程式，請檢查裝置已使用 Wi-Fi 連接與本地網絡連接，並確保裝置已連接至 DLNA 認證的 Wi-Fi。

部分啓用 DLNA 的裝置（如電視）僅支援 DLNA 的 DMP 功

能，且不會出現在轉換器裝置清單上。您的裝置可能無法播放部分內容。

## 要從遠方資料庫下載內容

- 1 點按應用程式標籤 ，然後選擇 **SmartShare**。
- 2 點按左上方的按鈕以從遠方資料庫選擇裝置。
- 3 您可瀏覽資料庫。
- 4 點按內容縮圖，然後點按下載功能表鍵

**通知：**不支援某些類型的內容。

## 要將手機的內容上載至遠方資料庫

**注意：**確保正確安裝 SD 卡並勾選設定功能表中的接收檔案。

- 1 點按應用程式標籤 ，然後選擇 **SmartShare**。
- 2 點按左上方的按鈕，然後選擇我的手機。
- 3 您可瀏覽資料庫。
- 4 點按並按住內容縮圖，然後點按上載功能表鍵
- 5 選擇要上載的遠方資料庫

裝置。

**通知：**部分 DLNA 裝置不支援 DMS 上載功能並不會進行上載。

不支援某些類型的內容。

## 使用 USB 大容量儲存裝置傳送檔案

要使用 USB 裝置傳送檔案：

- 1 使用 USB 線將 LG-P920 連接至電腦。
- 2 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您將需要手動更改設定。選擇設定 > SD 卡及手機儲存 > 確認「僅限大容量儲存」啟動，然後使用 USB 線將手機連接到電腦。
- 3 點按「開啓 USB 儲存裝置」。
- 4 您可於電腦檢視大容量儲存體的內容並傳送檔案。

**附註：**您必須先安裝 microSD 卡。如沒有 microSD 卡，則無法使用 USB 大容量儲存。

# 多媒體

## 如何將音樂/影片檔案儲存至手機

- 1 使用 USB 線將手機連接到電腦。
  - 點按並向下拖動主頁上的狀態列。在通知欄選擇「USB 已連接」> 開啓 USB 儲存裝置 > 在電腦開啓資料夾以檢視手機儲存檔案。
  - 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您將需要手動更改設定。有關更多資訊，請參閱「使用大容量儲存裝置傳送檔案」。
- 2 從電腦上將音樂或影片儲存到手機外置儲存空間。
  - 您可以使用讀卡器，將檔案從電腦複製或移動至手機的可移除儲存裝置。
  - 如果影片檔案包含字幕檔案（與影片檔案同名的 .smi 或 .srt 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。
  - 在下載音樂或影片檔案時，

必須尊重和維護擁有者的版權。請注意，已損壞的檔案或副檔名錯誤的檔案可能會損壞手機。

## 如何從您的舊手機上的聯絡資料移到現在的手機

使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊手機匯出至電腦。

- 1 請於 [www.lg.com](http://www.lg.com) 下載 LG PC Suite (可參考頁 16-18)，然後將其安裝在電腦上。執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。
- 2 選擇通訊錄圖示。轉到檔案 > 匯入，然後選擇儲存在電腦上的 CSV 檔案。

- 3 如果匯入的 CSV 檔案中的欄位與 LG PC Suite 中的欄位不同，則需要對應欄位。對應欄位後，按一下「確定」。通訊錄將會新增到 LG PC Suite。
- 4 如果 LG PC Suite 偵測到使用 USB 線的 LG-P920 手機連接，請按一下「同步」或「同步通訊錄」，將電腦中儲存的通訊錄同步至手機並儲存通訊錄。

## 如何透過藍芽發送手機中的數據

您可在經由藍芽執行合適的程式傳輸資料，取代一般手機從藍芽功能表傳輸的方法。

- **匯出通訊錄：**執行**通訊錄**應用程式。點按要匯出的地址。按一下**功能表**，選擇**分享 > 藍芽 > 檢查藍芽是否開啓**，並選擇**掃描裝置 >** 從清單中選擇您要發送數據的裝置。
- **發送多個聯絡人：**執行**通訊錄**應用程式。要選擇多於一個聯絡人，點按**功能表**鍵然後點按**功能表**鍵及**共享**。選擇您要發送的聯絡人或點按**選擇全部 > 分享 > 藍芽 > 檢查藍牙是否開啓**並選擇**掃描裝置 >** 從清單中選擇您要發送數據的裝置。
- **連接至 FTP（此手機僅支援 FTP 伺服器）：**設定 > 無線及網絡 > 藍芽設定。然後選擇**可偵測性**勾選框，並搜尋其他裝置。尋找所需的服務並連接至 FTP 伺服器。
- **發送圖片：**執行**媒體匣**應用程式，然後選擇**圖片 > 功能表**。按一下**分享**，選擇**藍芽 > 檢查藍芽是否開啓**，並選擇**掃描裝置 >** 從清單中選擇您要發送數據的裝置。

# 多媒體

**提示！** 藍芽版本為 2.1+EDR 並經 Bluetooth SIG 認證。此與其他 Bluetooth SIG 認證的設置相容。

**附註：**如果您要從其他裝置中搜尋此手機，請轉到**設定 > 無線及網絡 > 藍芽設定**。然後選擇**可偵測性**勾選框。勾選框將會在 120 秒後清除。

**附註：**The支援以下設定檔：SDAP、HFP、HSP、OPP、PBAP（伺服器）、FTP（伺服器）、A2DP 及 AVRCP。

## HDMI

HDMI（高清多媒體介面）是傳輸未經壓縮數碼數據的精簡聲音/影像介面。如果您使用 HDMI 線將手機連接到電視或顯示器，可透過手機的影片播放器/圖像檢視器傳輸圖像或影片檔案，並在電視或顯示器上觀看。您亦可在 3D 電視或顯示器上播放 3D 內容。

**附註：**播放媒體需時，視乎連接手機的裝置而定。如果使用

非 HDMI 認證的纜線或產品，檔案可能無法正常播放。您在手機上設定的圖像方向亦會使用在裝置上。

如果手機及 3D 電視支援不同的 HDMI 版本，3D 內容可能無法自動傳輸。在此情況下，請參閱電視的使用者手冊，更改電視的 3D 設定。使用 HDMI 線時，3D 影片播放、3D 相機預覽或 3D 影片相機預覽只會顯示在電視或顯示器上。由於版權所有人的請求，HDMI 輸出可能不支援部份檔案。如果手機資料因同步問題而未能正常顯示，您需要更改手機的解像度。（從桌面點按功能表鍵，然後點按**設定 > HDMI > 解像度**。）

# 實用程式

## 設定鬧鐘

- 1 在桌面點按**應用程式**標籤，然後選擇**鬧鐘/時鐘**。
- 2 若要新增鬧鐘，請點按**新鬧鐘**。
- 3 設定鬧鐘然後點按**儲存**以開啓。

**附註：**要在鬧鐘列表屏幕刪除鬧鐘，點按**功能表**並選擇**刪除**。

## 使用計算機

- 1 在桌面點按**應用程式**標籤，然後選擇**設定**。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。
- 4 如要進行更複雜的計選，點按**功能表**及**進階面板**，然後選擇 sin、cos、tan 及 In 等。

**附註：**本計算機只僅支援弧度作為量度角度的標準單位。





## 新增事件至日曆

- 1 在桌面點按**應用程式**標籤，然後選擇**日曆**。
- 2 必須先建立 MS Exchange 或 Google 帳戶才可使用行事曆。
- 3 要檢查事項，點按日期。如您希望新增事件，按住事件。再點按**新事件**。
- 4 點按**內容**，然後輸入事件名稱。檢查日期，並輸入事件開始及完結的時間。
- 5 然後點按**地點**並輸入位置。
- 6 要在事件新增附註，點按**說明**並輸入詳細資料。
- 7 若要重複鬧鐘，請設定**重複**，如有需要亦可設定**提示音**。
- 8 點按日曆中的**完成**以儲存事件。日曆中所有已儲存事件的日子將以顏色方格標記。鬧鐘將於事件的開始時間響起，讓您安排得井井有條。

# 實用程式

## 錄製聲音或語音

使用錄音程式錄製語音備忘錄或其他聲音檔案。

- 1 在桌面點按**應用程式**標籤，然後選擇錄音程式。
- 2 點按  以開始錄製。
- 3 點按  以停止錄製。
- 4 點按  以聆聽錄音。
- 5 點按  以存取您的專輯。您可聆聽已儲存的錄音。

**注意：**可用的錄製時間可能與真實時間有所不同。


## 發送錄音

- 1 完成錄製後，可透過點按**分享**發送聲音短片。
- 2 從 Gmail、訊息、電子郵件及藍芽中選擇。如選擇電子郵件、**Gmail** 和**訊息**，錄音將會新增至您編寫的訊息，然後如常地傳送。

## 本國時區

您可以設定選項「使用本國時區」並從清單中選擇「本國時區」。

這優先用於流動網絡設定的本地時區，以便將您所選的時區適用於手機的行事曆與事件。


- 1 在備用畫面中點按  主頁鍵。
- 2 點按行事曆登入您的帳戶。
- 3 在行事曆功能表中選擇設定選項。
- 4 點按使用本國時區並在本國時區選項中選擇所要的時區。


## 3D 遊戲轉換器

您可使用 HRZ 引擎提供的 3D 遊戲轉換器，以 3D 享受極受歡迎的 2D 遊戲。

只需按手機右側的 3D 熱鍵，新增至 3D 遊戲轉換器清單的遊戲將會即時轉換為 3D。

- 1 點按應用程式標籤，然後選擇 3D 遊戲轉換器。

- 2 點按  並選擇所需遊戲。
  - 3 您可透過 3D 享受 3D 遊戲轉換器清單上的遊戲。
- 如果您已註冊可自訂的遊戲，則可在 3D 設定中設定品質、3D 深度、深度等級。

- 1 點按遊戲清單上的 。
- 2 設定後儲存設定。

### 通知：

3D 遊戲轉換器僅適用於 2D OpenGL 遊戲。

**注意：**3D 轉換無須額外收費。

## 編輯影片

使用影片編輯器，編輯您已拍攝的影片。

- 1 在主頁上點按應用程式標籤。
- 2 沒有使用中的專案時，點按影片編輯器只可使用新增及說明。點按功能表鍵以查看說明。
- 3 點按新增並選擇新增至要插入的影片、圖像或音樂。。

您可拖動檔案至所需位置。

**注意：**如果您最初選擇 3D 影片，只可新增與音頻有相同解析度的 3D 影片。如果選擇 2D 影片，亦只可新增 2D 影片。

- 4 點按裁剪，拖動裁剪列以編輯影片長度。您可使用詳細檢視以詳細控制。
- 5 如果完成專案，點按主螢幕的匯出以製作完整檔案。結束主功能表前，確保儲存已進行的變更。
- 6 您可透過藍芽、電郵、Facebook、Gmail、訊息和 Youtube 與朋友分享已編輯的檔案。

# 網絡功能


## 瀏覽器


無論您身在何處，有何需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接在手機上載入更多內容。


**附註：**連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。


### < 工具列 >

以下螢幕的圖示列讓您在**使用**瀏覽器時更為簡便。

 **前一頁：**移至前一個網頁。

 **下一頁：**移至下一個網頁。


 **視窗：**顯示所有您已開啓的視窗。

 **新增視窗：**開啓一個新視窗。

 **設定：**移至瀏覽器設定。


## 使用選項


點按**功能表**鍵檢視選項。

 **稍後讀取：**新增到稍後讀取。

 **新增 RSS 收取點：**新增您最愛的網頁。當網站上出現新項目，Google 讀取裝置將會自動向您發送通知。

 **分享網頁：**透過藍芽、電郵、Facebook、Gmail 及訊息等發送網頁。

 **在頁面中搜尋：**如您輸入了一個字母或任何字詞，將會標記您從網頁輸入的所有字母。

 **選擇文字 -** 點按並選擇您要複製的文字。您可長時間點按文字，在任何輸入方塊中貼上文字。

**附註：**RSS（簡易資訊聚合）是網絡 Feed 格式成員之一，用於發佈經常更新的內容，如網誌項目、新聞標題或 podcasts。RSS 文件也稱為 feed、web feed 或頻道，載有來自關聯網站的內容概要或完整

文字。RSS 讓人們能夠以自動化的方式跟貼最愛網站的更新，這比手動查看更輕鬆容易。使用者可透過在讀取裝置中輸入 Feed 連結，或按一下啟動訂閱程序瀏覽器中的 RSS 圖示，即可訂閱 Feed 服務。讀取裝置會定期檢查使用者訂閱的 Feed，查看是否有新內容並下載任何找到的更新。

至於無法使用 RSS Feed 網頁，「新增 RSS Feed」圖示將會停用。

### ▼ 更多

- **主頁**：移至主頁。
- **設定主頁**：設定目前網頁為主頁。
- **新增捷徑至主頁**：新增本頁至主頁作為捷徑。
- **頁面資訊**：顯示該網頁的資訊。
- **下載**：顯示下載記錄。

# Google 應用程式

- 1 首先，請建立一個 Google 帳戶。輸入您的使用者名稱和密碼。
- 2 登入後，您的 Google 帳戶中的通訊錄、電子郵件和日曆會自動與您的 LG-P920 同步。

## 地圖

檢查您現時的位置和交通，並取得前往目的地的駕駛方向。您的手機必須連接 Wi-Fi 或 3G/GPRS。

**注意：**Google 地圖並不覆蓋所有城市及國家。

## Market

Android Market™ 設有多種應用程式和遊戲供您下載。您從 Android Market 安裝的應用程式和遊戲可於 LG-P920 功能表中找到。

您可以檢視其他人對某個應用程式的評論，或者發表自己的評論。

## Gmail

Gmail 會在您首次設定手機時設置。視乎您的同步設定，手機的 Gmail 會與您在網上的 Google 帳戶自動同步。收件匣對話清單是您預設的 Gmail 檢視模式。

## 通話

Talk 是 Google 的即時通訊程式，讓您與其他使用 Google Talk 的用戶通訊。

點按功能表鍵並檢查以下可使用的選項：所有好友、新增好友、搜索、登出及設定等。


## Google 搜尋


Google Search 能讓您搜尋網站。

# LG SmartWorld

LG SmartWorld 提供各式各樣的豐富內容 - 遊戲、應用程式、牆紙及鈴聲 - 讓 LG 手機使用者盡享多姿多采的「流動生活」體驗。

## 如何從手機進入 LG SmartWorld

- 1 點按  圖示以存取 LG SmartWorld。
- 2 點按登入並輸入 LG World 的 ID/PW。如果您未註冊，點按註冊可成爲 LG SmartWorld 會員。
- 3 下載您想要的內容。

**附註：**如果沒有  圖示該怎麼辦？

- 1 使用手機網絡瀏覽器，存取 LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) 並選擇您的國家/地區。
- 2 下載 LG SmartWorld 應用程式。
- 3 執行並安裝已下載的檔案。
- 4 點按  圖示以存取 LG SmartWorld。

## 如何使用 LG SmartWorld

- 參與 LG SmartWorld 每月推廣。
- 從「3D 區」尋找並下載刺激有趣的 3D 內容。
- 登入 LG SmartWorld 後點按功能表鍵選擇不同選項。
  - **類別：**依類別（如教育、娛樂及遊戲等）尋找內容。

## LG SmartWorld

- **我的應用程式：**列出已下載 / 有待更新的内容。
- **為您提供的應用程式：**根據您以往的選擇為您推薦内容。
- **搜尋：**搜尋内容。
- **設定：**變更情景模式、通知、顯示設定和查看 LG SmartWorld 更新。
- 也嘗試其他實用的功能吧。  
(内容詳細資料螢幕)
  - **願望清單：**儲存您感興趣的内容。
  - **分享：**透過電郵、Facebook、Twitter 及文字訊息分享内容資訊。

**附註：**LG SmartWorld 不一定在所有運營商或國家中提供。

# 設定

在桌面點按**應用程式**標籤，然後捲動並點按**設定**。

## 無線及網絡

您可在此管理 Wi-Fi、設定和藍芽。您亦可設定流動網絡和飛航模式。

**飛航模式** - 設定飛航模式後，所有無線連接均會停用。

**Wi-Fi** - 點按以勾選：啓動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

**Wi-Fi 設定** - 讓您設定及管理無線網絡存取點。設定網絡通知，或新增 Wi-Fi 網絡。從 Wi-Fi 設定螢幕進入進階 Wi-Fi 設定螢幕。點按**功能表**鍵並點按**進階**。

**藍芽** - 點按以勾選：啓動藍芽以連接至藍芽裝置。

**藍芽設定** - 設定裝置名稱及可找到的裝置，並掃描其他裝置。或者，檢查您以前配置的藍芽裝置列表，以及手機最近一次掃描藍芽裝置時所偵測到

的藍芽裝置。

**網絡共享及可攜式無線熱點** - 透過 USB 線將手機數據連線到電腦，與電腦分享手機的互聯網連線，並將手機轉成 Wi-Fi 接入點，與其他電腦或裝置分享手機的互聯網連線。

**VPN 設定** - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不同類型的 VPN。

**流動網絡** - 設定數據漫遊、網絡模式和運營商及存取點名稱 (APNs) 等的選擇。

**螢幕手機設定** - 讓您更改 On-Screen phone 密碼 (預設密碼為「0000」)。On-Screen 手機讓您透過 USB 或藍芽連接從電腦裡檢視手機螢幕。您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

# 設定

## 聲音

### < 標準 >

**靜音模式** - 讓您將所有聲音（包括來電及提示鈴聲）靜音，但不包括播放音樂及影片的聲音，以及您已設定的鬧鐘響鬧。（您必需在其相關應用程式為媒體及鬧鐘靜音）。

**通知：**設定靜音模式後將無法使用**設定 > 聲音 > 音量**功能表。

**震動** - 允許您設定來電時手機震動。

**音量** - 允許您設定鈴聲、媒體及鬧鐘的音量。如果您沒有勾選電話和通知使用相同音量的選項，那麼您可以分別設定它們的音量。

### < 來電 >

**電話鈴聲** - 允許您設定預設的來電鈴聲。

### < 通知 >

**通知鈴聲** - 允許您設定預設的通知鈴聲。

### < 回饋 >

**觸控音效** - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

**選擇項目時發聲** - 當您點按按鈕、圖示及屏幕上其他對您的點按作出反應的項目時，允許您設定您的手機發出按鍵音。

**螢幕鎖定聲音** - 允許您設定鎖定或解鎖螢幕時發出聲音。

**觸控回饋** - 當您點按功能表鍵、返回鍵以及進行其他動作時，允許您設定手機輕微震動。

## 顯示

**亮度** - 調節螢幕亮度。

**自動旋轉螢幕** - 當您將手機橫向或直立放置時，允許您設定手機自動改變方向至橫向或直向模式。

**動畫** - 當您在螢幕間導覽時，允許顯示視窗動畫。

**螢幕逾時** - 允許您調整螢幕自動關閉前的延遲時間。為了保持電池的最佳效能，請使用最短合宜的逾時。

**顯示字體** - 變更顯示字體。

< 3D 設定 >

**快顯警告** - 每當您開始 3D 遊戲，將會顯示快顯警告，除非您選擇「不要再顯示」勾選框。

## 手勢

**使用動作手勢** - 調整來電及與鬧鐘一併使用的手勢設定。

<來電>

**靜音** - 當手機響起時，翻轉手機可將聲音靜音。

<鬧鐘>

**延後（停止）** - 翻轉手機可延後（停止）鬧鐘。

**重新設定手勢感應器** - 將手機放在平面上，以校準移動感應器。

## 位置及安全

< 我的位置 >

**使用無線網絡** - 如選擇**使用無線網絡**，手機會使用 Wi-Fi 和流動網絡確定您大概所處的位置。

**使用 GPS 衛星定位** - 如選擇**使用 GPS 衛星定位**，手機會確定您所處的位置，以街道級別的準確程度找出您身處的位置。

< 螢幕解鎖 >

**設定螢幕鎖定** - 設定解鎖圖案以保護您的手機。將開啓一系列畫面，以指導您繪畫螢幕解鎖圖案。您可以設定 **PIN 碼** 或 **密碼**，而不是**解鎖圖形**或者保留選項為**無**。

# 設定

**提示！** 要使用圖案鎖定以鎖定螢幕

- 1 首次進行此步驟時，將會出現關於建立解鎖案圖的簡短教程。
- 2 系統將會提示您繪製並再次繪製屬於自己的個人圖案。下一次當您開啓手機或喚醒螢幕時，系統會提示您繪製解鎖圖案，替螢幕解鎖。

## < SIM 卡鎖定 >

**設定 SIM 卡鎖定** - 設定 SIM 卡鎖定或更改 SIM 卡 PIN 碼。

## < 密碼 >

**顯示密碼** - 選擇隨您輸入顯示密碼、或於輸入時隱藏並取消選擇。

## < 裝置管理 >

**選擇裝置管理員** - 增加或移除裝置管理員。

## < 認證儲存空間 >

**使用安全認證** - 選擇以允許應用程式存取您手機的安全證書、相關密碼以及其他憑證的加密儲存。可使用憑證儲存建立某些類型的 VPN 和 Wi-Fi 連接。如果您沒有為憑證儲存設定密碼，則無法選擇此設定。

**從 SD 卡安裝** - 允許您從 microSD 卡安裝加密證書。

**設定密碼** - 允許您為您的安全憑證儲存設定或更改密碼。您的密碼必須不少於 8 個字符。

**清除儲存空間** - 刪除所有安全證書、相關憑證，同時清除安全儲存自身的密碼。

## 應用程式

**未知的來源** - 除了 Android Market 的應用程式，允許安裝您從網站、電子郵件或其他地方得到的應用程式。



**警告** 視乎您所安裝的應用程式，手機可能無法正確操作，並可能透過互聯網被非法用於建立您的位置及存取個人資料。

為了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 **Android Market**。

**管理應用程式** - 管理及移除已安裝的應用程式。

**正在運作的服務** - 讓您檢視並控制目前正在執行的服務及應用程式。此選項顯示每個正在運行服務的進度及分別佔用的記憶體。

**儲存空間使用量** - 檢視每個應用程式所使用的儲存空間。

**電池使用狀況** - 查看正使用電池電量的項目。

**開發** - 允許您設定應用程式開發選項，例如 **USB 偵錯**、**保持清醒**和**允許模擬位置**。

## 帳號及同步處理

< **一般同步處理設定** >

**背景資料** - 允許應用程式在背景中同步資料，而不論您是否正在使用它們。不選擇此設定會幫助節省電池電力，亦將會降低（但不會完全停止）數據利用率。

**自動同步處理** - 允許應用程式在自己的平臺上同步、發送和接收數據。

< **Social+ 更新設置** >

**Social+ 設置** - 讓您設定手機上所有社交網絡應用程式的重新整理間隔。

< **管理帳號** >

您新增到此手機上的所有 Google 帳戶和其他帳戶的列表。

# 設定

如果您點按該螢幕上的某一帳戶，則該帳戶的螢幕會開啓。

## 隱私設定

### < 個人數據 >

**重設為原廠設定** - 從內部手機儲存體刪除所有您的個人資料，包括您 Google 帳戶、其它帳戶、您的系統和應用程式數據和設定、以及任何您所下載的應用程式以及 DRM 授權。重設手機將不會刪除或復原 microSD 卡或內置 SD 卡上任何您已下載的系統軟件更新或任何檔案（如相片及音樂檔案）。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啓動 Android 時所輸入的訊息。

## SD 卡和手機儲存

### < SD 卡 >

檢查總空間及可用空間。點按**移除 SD 卡**可安全移除。如您希望刪除 microSD 卡上的所有資料，請將 SD 卡格式化。在

您格式化一個 microSD 卡之前必須先解除安裝。

### < 手機內置記憶體 >

檢查可用空間。

## 語言及鍵盤

使用**語言及鍵盤**設定以選擇您手機文字的語言，包括您新增至字典的字詞，並設定您的屏幕鍵盤。

## 語音輸入及輸出

### < 語音輸入 >

**語音辨識系統設定** - 使用**語音辨識系統設定**，以設定 Android 語音輸入功能。

- **Language (語言)**：開啓屏幕，從中設定輸入文字時的發音語言。
- **SafeSearch**：開啓對話方塊，從中設定使用 Google SafeSearch 時是否希望程式過濾部分結果。
- **Block offensive words (封鎖令人反感的字詞)**：取消

選擇後，當您輸入文字時，Google 語音識別會辨認大部份人認為令人反感的字詞，並會發聲譯出。選擇後，語音識別於轉換時會以內有井號的括號 (#) 代替相關字詞。

### < 語音輸出 >

**文字轉語音設定** - 使用**文字轉語音設定**，為可使用 Android 文字轉語音合成器的應用程式設定此功能。

**附註：**如果您沒有安裝語音合成數據，那麼只有**安裝語音數據項設定**可使用。

- **聆聽範例：**使用您的現有設定，播放語音合成器的簡短範例。
- **永遠使用我的設定：**在此螢幕勾選使用設定，而並非使用其他應用程式中可使用的語音合成器設定。
- **預設引擎** - 開啓對話方塊，從中設定您想使用的文字轉語音應用程式（如有兩個或

以上的應用程式。）

- **安裝語音資料：**如果手機沒有安裝語音合成數據，連接至 Android Market，系統會指導您下載及安裝數據。如已安裝數據，則無法選擇此設定。
- **語音速率：**開啓對話方塊，從中選擇合成器發聲的速度。
- **語言：**開啓對話方塊，從中選擇合成器所讀取的文字語言。配合永遠使用我的設定使用尤其實用，能確保在不同應用程式內也能正確讀出文字。
- **Pico TTS：**設定 Pico TTS 設定。

### 協助工具

您可使用**可存取性**設定，以設定任何已安裝到手機的可存取性外掛程式。

**附註：**需要其他外掛程式，才可選擇此選項。

# 設定

## 日期及時間

使用**日期及時間**設定以設定顯示日期的方式。您亦可以使用這些設定來設定您自己的時間和時區，而不只是從流動網絡取得目前時間。

## 關於手機


檢視法律資訊，檢查手機狀態和軟件版本。

## Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 覆蓋範圍內高速訪問互聯網。

您可以使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

## 開啓 Wi-Fi

從桌面開啓通告欄，然後點按  以開啓。

您也可點按**應用程式 > 設定 > 無線及網絡**，然後開啓 Wi-Fi。

## 連接至 Wi-Fi

選擇要連接的 Wi-Fi 網絡。如果看到 ，則需要輸入密碼才能連接。

### 附註：

- 如果處於 Wi-Fi 範圍以外並選擇 3G 連接，則可能需額外收費。
- 如果手機進入睡眠模式，即使在連接至 Wi-Fi 時，也會自動停用 Wi-Fi 連接。（在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並會收取額外費用。）
- LG-P920 支援 WEP、WPA/WPA2-PSK 及 802.1x EAP。安全。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

## 共享手機的流動數據連接

您可將手機切換成可攜式 Wi-Fi 熱點，同時與最多 5 部裝置共享手機的數據連接。

當手機正共享數據連接，狀態列會顯示圖示，而通告欄內也會顯示進行中的通告。

圖示	說明
	USB 共享網絡已啟動
	可攜式 Wi-Fi 熱點已啟動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啟動

有關可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com/tether>。

**附註：**連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

## 共享網絡及可攜式熱點

在桌面點按**應用程式**標籤，然後選擇**設定**。

點按無線網絡並選擇網絡共享和可攜式熱點。

選擇您想調整的選項。

**USB 共享網絡** - 您的電腦可分享手機的互聯網連線。您可以使用 USB 線連接手機至您的電腦。

**可攜式 Wi-Fi 熱點** - 選擇以可攜式 Wi-Fi 熱點的形式共享手機的網絡數據連接。


**說明** - 開啓載有可攜式 Wi-Fi 熱點資訊的對話方塊，並提供了解更多相關資訊的方法。

### 提示！

您可同時使用 USB 共享網絡和可攜式 Wi-Fi 熱點。

# 設定

## 要將手機的數據連接以可攜式熱點的形式分享

- 1 在桌面點按**應用程式**標籤，然後選擇**設定**。
- 2 點按**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 3 勾選**可攜式 Wi-Fi 熱點**。
  - 手機將會開始廣播 Wi-Fi 網絡名稱 (SSID)，您可以將手機連接至最多額外 5 台電腦或其他裝置。進行中的通告  會加入至狀態列及通告欄內。
  - 選擇**可攜式 Wi-Fi 熱點**後，您可更改其網絡名稱或保護 Wi-Fi 網絡。
- 4 **取消選擇**可攜式 Wi-Fi 熱點以停止透過 Wi-Fi 共享數據連接。

**注意：** 當您首次啓用可攜式 Wi-Fi 熱點時，您需要為安全數據連接共享設定密碼。

## 要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

- 1 在桌面點按**應用程式**標籤，然後選擇**設定**。
- 2 點按**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 3 確保已選擇**可攜式 Wi-Fi 熱點**。
- 4 點按**可攜式 Wi-Fi 熱點設定**。
- 5 點按**設定 Wi-Fi 熱點**。
  - **設定 Wi-Fi 熱點**對話方塊會開啓。
  - 您可以更改當掃描 Wi-Fi 網絡時其他電腦所看見的網絡 SSID (名稱)。
  - 您也可以點按**安全**功能表，使用預先共用的金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。

- 如果您點按 **WPA2 PSK 安全** 選項，密碼欄位會加入至**設定 Wi-Fi 熱點**的對話方塊內。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要重新輸入該密碼。您可點按**安全**功能表內的**開啓**，從 Wi-Fi 網絡移除安全性。

### 注意！


如果您將安全選項設定為**開啓**，則無法防止其他人士在未經授權的情況下使用網上服務，並可能產生額外收費。要避免未經授權的使用，您應該保留啓用此安全選項。

- 6 點按**儲存**。

## 如何使用螢幕手機 (On screen Phone)

螢幕手機讓您透過 USB 或藍芽連接從電腦裡檢視手機螢幕。您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

### 螢幕手機圖示

-  將手機連接到電腦，或中斷連接。
-  旋轉 On-Screen 手機視窗（只適用於支援旋轉的應用程式）。
-  更改 On-Screen 手機偏好設定。
-  結束 On-Screen 手機程式。
-  將 On-Screen 手機視窗最小化。

# 設定

## 螢幕手機功能

- 即時傳送及控制：連接至電腦時，顯示並控制您的手機螢幕。
- 滑鼠操控：讓您在電腦螢幕上使用滑鼠拖動並點按，以控制您的手機。
- 使用鍵盤輸入文字：讓您使用電腦鍵盤編寫文字訊息或備註。
- 檔案傳送（由手機至電腦）：從手機將檔案（如相片、影片、音樂檔案）傳送至電腦內。只須按滑鼠右鍵，並將檔案拖動至您的電腦內。
- 檔案傳送（由電腦至手機）：從電腦將檔案傳送至手機內。只須選擇您想傳送的檔案，然後拖放至 On-Screen 手機視窗內。您傳送的檔案會儲存在 microSD 卡內。

- 即時事件通知：如有，顯示彈出視窗，就任何來電或文字/多媒體訊息。

**通知：**The3D 模式的相機預覽、影片及內容（3D 遊戲及應用程式、3D 指南、YouTube 3D 及 3D 圖片集）在 OSP 中不受支援，因此在電腦上無法使用。

## 如何在電腦上安裝螢幕手機

瀏覽 LG 主頁 (<http://www.lg.com>)，前往**支援 > 手機支援 > 下載 LG 手機支援工具**至電腦。如果您下載 LG PC Suite IV，On-Screen 手機程式也會一同下載至您的電腦內。您便可於電腦上安裝 On-Screen 手機。

**附註：**轉至**設定 > SD 卡及手機儲存設定**並確保已取消選擇「**僅限大容量儲存**」核取方塊。

## 如何將手機連接至電腦

### USB 連接：

- 1 開啟連接精靈，選擇「USB 線連接」，然後按「下一步」。
- 2 使用 USB 線連將手機接至電腦，然後按「下一步」。
- 3 輸入 On-Screen 手機密碼，然後按「下一步」。預設密碼為「0000」。您也可在手機設定 > 無線及網絡 > 螢幕手機設定內更改密碼。
- 4 按「確定」結束視窗。

### 使用藍芽無線連接：

- 1 在手機上，前往設定 > 無線及網絡 > 藍芽設定。選擇開啓藍芽，然後選擇可偵測性。
- 2 如果您曾使用USB線連接，執行新連接精靈以建立新連接。


- 3 在電腦上執行連接精靈，選擇「藍芽連接」，再選擇「下一頁」。
- 4 精靈將會開始搜尋已啓用藍芽的手機。顯示您想連接的手機後，按「停止」以停止搜尋。
- 5 從裝置清單選擇「LG-P920」，然後按「下一步」。您可以為裝置重新命名。
- 6 接受手機中的配對要求，然後在電腦中選擇下一頁。
- 7 輸入 On-Screen 手機密碼，然後按「下一步」。（預設密碼為「0000」）。
- 8 點按「確定」結束。

# 設定

## 要檢查手機至電腦連接

只要已連接裝置，向下拖動桌面上方的通知列，以檢查 On-Screen 手機的連接狀態。

## 要中斷電腦與手機的連接

點按在 On-Screen 手機視窗左上角的 。或者，向下拖動桌面上方的通知列，然後選擇「On-Screen 手機」。在斷開連接視窗內點按「是」。

**備註：**關閉 On-Screen 手機服務後，必須重新開啓手機。

## 手機軟件更新

### 從互聯網更新 LG 手機軟件

要了解更多有關此功能的資訊，請瀏覽 <http://www.lg.com/>。

透過此功能，您便無須親臨客戶服務中心，就可透過互聯網更新手機韌體至較新版本，這非常方便。此更新功能只在 LG 發佈適合您的手機有較新韌體

版本時才可使用。

手機韌體更新要求使用者必需緊密留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的手機造成嚴重損害。

**附註：**LG 保留權利，可酌情決定只為選擇型號提供韌體更新，並不保證所有手機型號均有韌體的較新版本。

### 透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 將手機韌體更新為較新版本。LG 推出適合您裝置韌體的較新版本時，此功能才可使用。

首先，您可以使用手機檢查軟件版本：**設定 > 關於手機 > 軟體更新 > 現在檢查更新。**

**附註：**內部手機儲存體的個人資料—包括 Google 帳戶及任何其他帳戶的資訊、系統 / 應用程式數據

及設定、任何已下載的應用程式及 DRM 授權—在更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不負責。

## **將手機與您的電腦同步**

您可以使用 LG PC Suite 在電腦與手機之間同步處理 Outlook 通訊錄及行事曆。

## **安裝 LG PC Suite**

請參閱第 16-17 頁下載及安裝 LG 手機支援軟件，並執行以安裝 LG PC Suite。

## 版權和商標

此手機包含的所有技術和產品的權利均為其各自擁有者的財產：

- Bluetooth® 乃 Bluetooth SIG, Inc. 的註冊商標。
- microSD 及 microSD 標誌乃 SD Card Association 的商標。
- Google、Android、Google Search、Google Calendar、Google Maps、Google Latitude、Gmail、YouTube、Google Talk 及 Android Market 乃 Google, Inc. 的註冊商標。
- Wi-Fi 乃 Wireless Fidelity Alliance, Inc. 的註冊商標。
-  包括 Adobe Systems Incorporated 的 Adobe® Flash® Player 技術。

### • DivX 手機



關於 DIVX 影片：DivX® 數碼影片格式由 DivX, Inc 建立，是播放 DivX 影片的官方 DivX Certified® 裝置。要取得詳情以及將檔案轉換為 DivX 影片的軟件工具，請瀏覽 [www.divx.com](http://www.divx.com)。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。請前往 [vod.divx.com](http://vod.divx.com) 以參考更多有關如何完成註冊的資訊。


**DivX Certified® 可播放HD 720p 以下的 DivX® 影片，包括專貴內容。**


DivX®、DivX Certified® 及相關標誌乃 DivX, Inc. 的商標並經授權下使用。受以下一個或多個美國專利：7,295,673; 7,460,668; 7,515,710; 7,519,274 的保障

### 通告！ 公開原始碼 軟件

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽 <http://opensource.lge.com/>。所有授權的條款、免責聲明及通知均可連同原始碼一同下載。

- Wi-Fi® 及 Wi-Fi Protected Access® 乃 Wi-Fi Alliance 的註冊商標。

- **DTS 2.0 Channel**  由 DTS Licensing Limited 的授權下製造。DTS 及符號乃註冊商標，而 DTS 2.0 Channel 及 DTS 標誌乃 DTS, Inc. Product 的商標（包括軟件）。© DTS, Inc. 保留所有權利。

- **Dolby Digital Plus**  由 Dolby Laboratories 的授權下製造。Dolby 及 double-D 符號乃 Dolby Laboratories 的商標。

# 配件

該等配件適合配合 LG-P920 使用。  
(下述配件為可選購配件。)

## 充電器



## USB 線

連接您的 LG-P920 至電腦。



## 電池



## 使用手冊

了解有關 LG-P920 的更多資訊。



## 立體聲 耳機



## 附註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

# 技術數據

## 環境溫度

最高：+55°C（放電）+45°C（充電）

最低：-10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

#### Name

LG Electronics Inc

#### Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

#### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

#### Model Name

LG-P920

#### Trade Name

LG

CE 0168 !

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1  
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1  
EN 300 328 v1.7.1  
EN 60950-1:2006+A11:2009  
EN 50360:2001 / AC:2006 / EN 62209-1:2006 / EN 62209-2:2010  
EN 301 511 v9.0.2  
EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. - EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name	Issued Date
Doo Haeng Lee/Director	3, May, 2011

  
Signature of representative

# 疑難排解

本章會列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	合理的修正措施
智能卡錯誤	手機內無智能卡，或不正確地插入智能卡。	確保已正確地插入智能卡。
無網絡連接 / 失去網絡	GSM 網絡範圍外訊號弱。網絡商套用新服務	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能卡是否多於 6~12 個月。 如是者，請前往網絡供應商的就近分店更換智能卡。
密碼不正確	要更改安全密碼，您需要重新輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	預設的手機密碼為 [0000]。如您忘記密碼，請聯絡您的服務供應商。
無法設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。
無法撥打電話	撥號錯誤 新智能卡已插入 已達預付費用上限	新網絡未獲授權。 請檢查新的限制。 聯絡您的服務供應商，或使用 PIN 2 重設限額。
手機無法啟動	按住開/關鍵的時間太長 電池並無充電 電池接觸面骯髒	按住開/關鍵至少兩秒。 保持充電器連接更長時間。清潔金屬接觸面。 取出電池並重新插入。

訊息	可能起因	合理的修正措施
充電錯誤	電池並無充電。 外界溫度太高或太低 接觸不良  無電壓 充電器故障 使用了不正確的充電器。 電池故障。	替電池充電。 確保於正常溫度下為手機充電。 檢查充電器是否正常，以及是否正確地連接電源至手機。檢查電池接觸點，如有髒污則需清潔。 將充電器插入不同的插座。 如充電器沒有變暖，則需更換充電器。 請只使用原裝 LG 配件。 更換新電池。
不允許撥打號碼	固定撥號號碼功能已開啓。	檢查設定。
無法接收 / 發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。
無法開啓檔案	不支援的檔案格式	檢查支援的檔案格式
SD 卡無法運作	只支援 FAT 16，FAT 32 檔案系統	透過讀卡器檢查 SD 卡檔案系統，或使用手機將 SD 卡格式化
接收來電時，屏幕並無開啓。	感應器問題	如果您使用保護貼或保護套，檢查該等配件有否掩蓋距離感應器附近的範圍。確保距離感應器附近並無任何障礙物。
無聲音	震動或靜音模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。

# 疑難排解

訊息	可能起因	合理的修正措施
掛線或凍結	軟件間歇性問題	<p>移除電池並再插入電池。開啓手機。</p> <p>如果手機已鎖上而且不能正常運作，請長按電源 / 鎖定鍵 10 秒將其關閉。然後，再次長按電源 / 鎖定鍵 3 秒重新啓動手機。</p> <p>透過網站嘗試進行軟件更新。</p>



# LG-P920 用户手册 - 中文

本手册包含关于 Android Gingerbread 操作系统 2.3 的信息。如果您的手机使用的是 Android Froyo 操作系统 2.2，请参阅第 88 页以更新您的手机。

- 此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同，这并不会另行通知。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2011 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google Search、Maps、Gmail、YouTube、Talk 和 Android Market 是 Google, Inc. 的商标。



# 目录

关于安全有效使用手机的准则	5	通话设置	37
重要注意事项	11	电话本	38
开始了解您的手机	20	搜索联系人	38
安装 SIM 卡和电池	22	添加新联系人	39
充电	23	收藏夹联系人	39
格式化存储卡	24	<b>信息/电子邮件</b>	<b>40</b>
<b>主屏</b>	<b>26</b>	信息	40
触摸屏提示	26	发送信息	40
锁定手机	28	更改信息设置	41
解锁屏幕	28	设置电子邮件	41
主屏	28	Microsoft Exchange 电子	
将小工具添加到主屏	29	邮件帐户	41
返回到最近使用的应用程序	29	其他 (POP3、IMAP、GME)	
通知抽屉	30	电子邮件帐户	41
查看状态栏	30	撰写和发送电子邮件	42
屏上键盘	32	使用帐户文件夹	44
<b>Google 帐户设置</b>	<b>33</b>	添加或编辑电子邮件帐户	44
创建 Google 帐户	33	<b>社交网络</b>	<b>45</b>
登录 Google 帐户	33	将您的帐户添加到手机	45
<b>通话/联系人</b>	<b>35</b>	查看和更新状态	45
拨打语音电话	35	删除手机上的帐户	46
拨打视像电话	35	Facebook 和 Twitter	46
视频通话菜单中	35	<b>照片和视频</b>	<b>47</b>
呼叫联系人	36	了解取景器 (相机)	47
接听和拒绝电话	36	快速拍照	48
调节音量	36	拍照后	48
拨打第二个电话	36	使用高级设置 (相机)	49
查看通话记录	37	查看保存的照片	50

了解取景器（摄像机）	51	<b>实用工具</b>	<b>66</b>
快速摄像	52	设置闹钟	66
拍摄视频后	52	使用计算器	66
使用高级设置（摄像机）	53	将事件添加到日历中	66
观看保存的视频	54	录制声音或语音	67
观看视频时调节音量	54	发送录音	67
3D 照片和视频	54	主时区	67
快速拍摄 3D 视频	56	3D Game Converter	68
<b>3D 空间</b>	<b>57</b>	编辑视频	68
YouTube 3D	57	<b>网络</b>	<b>70</b>
3D 图片库	57	浏览器	70
3D 相机	57	使用选项	70
3D 游戏和应用程序	57	<b>Google 应用程序</b>	<b>72</b>
3D 指南	57	地图	72
<b>多媒体</b>	<b>58</b>	Market	72
我的文档	58	Gmail	72
音乐	58	Talk	72
播放歌曲	59	Google Search	72
使用 SmartShare	59	<b>LG SmartWorld</b>	<b>73</b>
使用 USB 大容量存储设备		如何从手机访问 LG	
传输文件	61	SmartWorld	73
如何将音乐/视频文件保存到手机	62	如何使用 LG SmartWorld	73
如何将旧手机上的联系人移至当前手机	62	<b>设置</b>	<b>75</b>
如何通过蓝牙从手机发送数据	63	无线和网络	75
HDMI	64	声音	76
		显示	76
		笔势	77
		位置和安全	77

# 目录

使用多个 .....	78	版权所有和商标 .....	90
数据同步 .....	79	配件 .....	92
隐私 .....	79	技术参数 .....	93
SD 卡和手机存储器 .....	80	故障排除 .....	94
区域和文本 .....	80		
语音输入与输出 .....	80		
辅助功能 .....	81		
日期和时间 .....	81		
关于本手机 .....	82		
Wi-Fi .....	82		
打开 Wi-Fi .....	82		
连接到 Wi-Fi .....	82		
共享您手机的移动数据连接 ..	83		
绑定与便携式热点 .....	83		
将手机的数据连接共享为便 携式 Wi-Fi 热点 .....	84		
重命名或确保您的便携式热 点安全 .....	84		
如何使用屏幕手机 .....	85		
屏幕手机图标 .....	85		
屏幕手机功能 .....	85		
如果在 PC 上安装屏幕手机 ..	86		
如何将手机连接至 PC .....	86		
检查手机与 PC 的连接 .....	87		
断开手机与 PC 的连接 .....	87		
手机软件更新 .....	88		
同步手机与电脑 .....	89		

# 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

## 暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款 LG-P920 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员(无论年龄和健康状况)安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会

(ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。

- 由 DAS4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.368 W/kg (10克)，戴在身体上时，其值为 0.562 W/kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

# 关于安全有效使用手机的准则

## 产品保养和维护

### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
  - 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
  - 远离诸如电视、收音机或个人电脑之类的电器。
  - 远离诸如暖气片或厨灶之类的热源。
  - 小心不要让手机摔落。
  - 不要让手机受到机械振动或撞击。
  - 在任何有特殊条例要求的区域关闭手机。例如，请勿
- 在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
  - 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
  - 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
  - 如果手机置于柔软物体之上，请不要充电。
  - 应将手机放在完全通风的位置充电。
  - 不要在烟雾或灰尘过多的环境中使用或存放手机。
  - 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
  - 不要用尖锐物体敲击屏幕，这可能会损坏手机。
  - 不要将手机暴露在液体或潮气中。
  - 谨慎使用诸如耳机之类的配

件。在不必要的情况下，不要触摸天线。

- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 作为电子设备，您的手机在正常操作下会发热。空气不流通情况下，长时间与皮肤直接接触可能会导致不适或轻微灼伤。因此，在手机使用中或刚使用完后，请小心接触。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。

- 微弱的干扰可能会影响电视、收音机、个人电脑等。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

# 关于安全有效使用手机的准则

## 防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

**备注：**耳机声音和压力过度可能导致听觉受损。

## 玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段

时间，请对电池再次进行充电以保持最佳使用状态。

- 不要将电池充电器暴露在直射阳光下，也不要诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

# 关于安全有效使用手机的准则

## 观看 3D 内容的注意事项

### 1. 观看 3D 内容时：

- 青少年儿童的视力仍在发育中。3D 内容不适合 5 岁以下儿童观看。
  - 部分观众在观看 3D 过程中可能有不适症状，如恶心、视觉疲劳、疲乏和眩晕。所有观众应不时休息，以避免上述症状。休息频率及时长因人而异。如果您感到任何不适，请停止观看并休息，直至不适症状消失。如果在停止观看后仍感觉不适，请咨询医生。
  - 遵循移动设备随附的指南中有关观看距离及角度的内容。在建议的观看角度范围内观看 3D 内容将减少不适可能。
- ### 2. 监护人应指导儿童观看 3D 内容并确保其遵循建议的使用规定。

## 重要注意事项

请查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

### 1. 手机内存

当手机内存的可用空间小于 10% 时，您的手机无法收到新信息。您需要删除手机内存中的一些数据（如应用程序或信息），以便提供更多内存。

#### 管理应用程序：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **应用程序** > **管理应用程序**。
- 2 当所有应用程序显示时，向下滚动并选择要卸载的应用程序。
- 3 轻触**卸载**，然后点触“确定”以卸载选定应用程序。

#### 警告

如果删除您手机内置 SD 卡上存储的数据，这些数据将无法通过“重置出厂数据”选项来恢复（“设置”>“隐私”>“重置出厂数据”）。

### 2. 优化电池使用寿命

您可以通过禁用无需在后台运行的功能来延长电池的使用寿命。您也可以监控应用程序和系统资源如何节省电池电量。

#### 延长电池使用寿命：

- 在不用时关闭无线电通讯。在不用时关闭 Wi-Fi、蓝牙和 GPS 功能。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

# 重要注意事项

## 检查电池电量水平：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **状态**。
- 2 电池状态（充电、放电）和电量（完全充电的百分比）显示在屏幕顶部。

## 监视并控制电池的使用：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **关于手机** > **电池使用**。
- 2 屏幕顶部显示电池使用时间。这是手机最近一次连接到电源后的时长，或连接到电源后，手机最后使用电池电源的时长。屏幕上列出了使用电池电源的应用程序或服务，从大量到最小量。

## 3. 安装开放源操作系统

如果在手机上安装开放源操作系统，而不使用制造商提供的操作系统，则可能导致手机无法正常工作。

### 警告

如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。

### 警告

为保护您的手机和个人数据，请只从信任的来源（如 Android Market）下载应用程序。如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。您需要从手机中卸载那些应用程序及其所有数据和设置。

## 4. 使用解锁图样

设置保护手机的解锁图样。

打开一组屏幕，它们可指导您绘制屏幕解锁图样。您可以通过连接四个或更多个点来绘制自己的解锁图案。如果您设置图案，手机屏幕将锁定。要将手机解锁，请在屏

幕上输入您设置的图样。在主屏上点触并选择设置 > 安全和位置 > 设置屏幕锁定 > 图样。按照屏上指南指示，绘制屏幕解锁图样。

选择“下一步”转到下一个屏幕。

**警告：**在设置解锁图案之前，请先创建一个 Gmail 帐户。



### 警告

#### 使用图样锁定时的预防措施

请务必记住您设置的解锁图样。您有 5 次机会输入解锁图样、PIN 或密码。一旦用完 5 次机会，您需等待 30 秒方可再次尝试。

**如果遗忘了解锁图样、PIN 码或密码：**

- 1 在无法调用解锁图样、PIN 或密码时：**如果您忘记图案：如果您已在手机上创建 Google 帐户，请轻触“忘记图案”按

钮。随后，您要使用您的 Google 帐户登录以将手机解锁。如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

- 2 如果您忘记 PIN 或密码。**如果您忘记 PIN 或密码，您需要执行硬重置。

## 5. 使用硬重置

如果未恢复到原始条件，请使用硬重置初始化手机。当手机关机时，同时按住主 3D 键 + 音量调低键 + 电源键 10 秒钟以上。在屏幕显示 LG 徽标时，释放电源键。在屏幕显示硬重置屏幕后，释放其他键。选择“是”音量使用向下键，然后按 3D 的关键选择。留给手机一分钟时间，让其执行硬重置，接着手机将开机。

然后选择“现在重启系统”

**注意：**如果执行硬重置，所

# 重要注意事项

有用户应用程序和用户数据都将被删除。此操作无法撤销。在执行硬重置之前，记得备份任何重要数据。

## 6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或有其他安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

**打开 Wi-Fi 并连接 Wi-Fi 网络：**

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **无线和网络** > **Wi-Fi 设置**。
- 2 点触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。
  - 将显示可用的 Wi-Fi 网络

列表。锁图标表示受到安全保护的**网络**。

**3** 点触某个网络进行连接。

- 如果网络已打开，您会收到提示，要求您点触**连接**确认连接到该网络。
- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息。）

**4** 状态栏显示了可指明 Wi-Fi 状态的图标。

## 7. 打开和切换应用程序

Android 可轻松地运行多任务，因为即使您打开另一应用程序，当前打开的应用程序也会保持运行状态。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

## 停止使用应用程序：

- 1 在主屏上，点触**应用程序**选项卡，然后选择**设置** > **应用程序** > **管理应用程序**。
- 2 滚动到选定的应用程序，然后点触**强制停止**以停止该应用程序。

### 提示！ 返回到最近使用的应用程序

点触并按住**主屏键**。屏幕上将出现您最近访问的应用程序。

## 8. 在 PC 上安装 LG PC 套件

要通过 USB 数据线同步手机与 PC，您需要在 PC 上安装 LG PC 套件程序。

您可以从 LG 网站(<http://www.lg.com>) 下载您的手机安装程式和使用资讯。您可参考往下图示和依据网站指示以下载适合您手机型号的软件并完成安装。

### LG PC 套件

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到 PC，以便在 PC 上使用手机的功能的程序。

# 重要注意事项

## LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据。
- 从 PC 或手机同步数据（联系人、日历、信息（短信）、书签）
- 使用简单的拖放操作在PC 和手机之间方便地传输多媒体文件（照片、视频和音乐）
- 将信息从手机传输到 PC。
- 软件更新而不丢失任何数据

## LG-P920 不支持:

- 通过蓝牙连接 PC
- 日历中的待办事项
- Java 应用程序


有关详细信息，请参阅 LG PC Suite IV 的用户手册。您安装 LG PC Suite IV 后，可在“帮助”菜单中找到此手册。

## 下載 LG 手机支援软件

1) 登入www.lg.com，到支援，手机支援



2) 下載及安裝LG 手机支持软件

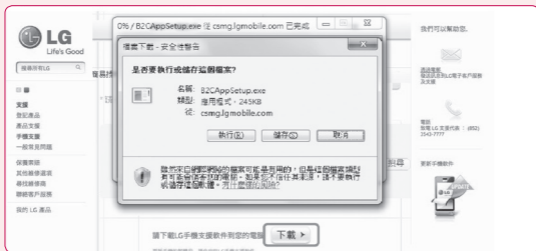

3) 在下载相关手机支援软件后并执行以完成所下载的 LG PCSuite IV 文件，然后按说明执行操作。

\* LG PC Suite IV 安装完成后，禁用大容量存储模式以运行

# 重要注意事项

LG PC Suite IV。

## 9. 通过 USB 将手机连接到电脑

使用 USB 设备传输 microSD 卡中的文件：

- 1 在手机上安装 microSD 卡。（存储卡可能已插入手机。）
- 2 连接 USB 数据线之前，请确保手机已启用**大容量存储**模式。（在**应用程序**选项卡上选择**设置 > SD 卡和手机内存 > 仅批量储存**）
- 3 使用手机附带的 USB 数据线将手机连接到电脑的 USB 端口。点触**打开 USB 存储**。您将收到一则通知，告知您 USB 已连接。

当手机作为 USB 存储器进行连接时，您会收到一则通知。您手机的 microSD 卡已安装为电脑的驱动器。现在，您可以将文件复制到 microSD

卡，也可以从 microSD 卡中复制文件。

**备注：**卸载 PC Suite IV 时，不会自动删除 USB 和蓝牙驱动程序。因此，必须手动将其卸载。

**提示！** 要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触**关闭 USB 存储**。在此期间，无法从手机访问 microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、图片库和音乐功能）。要断开手机与电脑的连接，请仔细按照电脑说明正确地断开 USB 设备的连接，从而避免丢失卡上的信息。

- 1 安全地断开电脑上的 USB 设备。
- 2 打开通知抽屉，并点触**关闭 USB 存储设备**。
- 3 在打开的对话框中点触**关闭**。



### 警告

请勿在手机开机时插入或取出 microSD 卡。否则可能损坏 microSD 卡以及手机，并且 microSD 卡上存储的数据也可能会损坏。要安全取出 microSD 卡，请在主屏中按菜单键，然后点触**设置 > SD 卡和手机内存 > 取消安装 SD 卡**。

## 10. 使用数据连接时的解锁屏幕

使用数据连接时，如果一段时间内未触摸屏幕，屏幕将会变黑。触摸屏幕，屏幕就会变亮。

## 11. 不要在 PC 开机/关机时连接手机

请务必断开手机和电脑之间的数据线，以免对电脑造成任何伤害。

## 12. 向上持握手机

请将手机像普通电话一样向上持握。LG-P920 具有内置天线。请注意不要刮伤或损坏手机背面，否则会导致性能损失。拨打/接听电话或发送/接收数据时，尽量避免持握天线所处的手机下部。这可能影响通话质量。

## 13. 屏幕冻结

如果手机对用户输入无响应或者屏幕冻结：

卸下电池，将它再次插入并将手机开机。如果这仍不起作用，请联系服务中心。

# 开始了解您的手机

要将手机开机，请按住**电源键** 3 秒。

要将手机关闭，请按住**电源键** 3 秒，然后依次点触“关机”和“确定”。

**听筒**


**近程传感器**

**主屏键**

- 从任何屏幕返回主屏。

**菜单键**

- 检查可用选项。

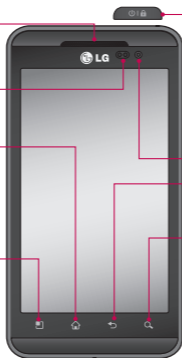

**电源/锁定键**

- 按住此键可开/关机。
- 屏幕锁定和解锁。

**内置相机镜头  
返回键**

- 返回上一个屏幕。

**搜索键**

- 在手机中搜索网络和内容。

**警告：** 在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 的进程传感器上使用保护膜。这可能会影响传感器的感应度。

**提示！** 当您轻触应用程序以检查可用选项时，请点触菜单。

**提示！** 如果您在使用时 LG-P920 显示错误信息，或者您无法开机，请取出电池，然后再装回，5 秒钟后重新开机。

立体声耳机连接器

电源/锁定键



音量键

- 在主屏上：控制铃声音量。
- 在通话过程中：控制听筒音量。
- 播放音乐时：随时控制音量。

充电器，微 USB 数据线接口

HDMI

3D 键

- 按住此键可直接访问 3D 空间。
- 在相机模式下：按此键拍照。



后盖

电池

SIM 卡插槽

microSD 存储  
卡插槽

相机镜头




# 开始了解您的手机


## 安装 SIM 卡和电池

在开始使用新手机之前，需要先进行设置。插入 SIM 卡和电池：

- 1 要卸下后盖，请用手抓紧手机。用食指花开手机盖时，用另一只手牢牢按住手机盖的中间位置。然后，卸下电池盖。

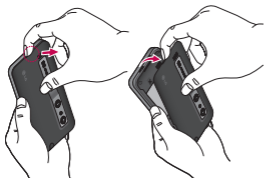

- 2 将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。

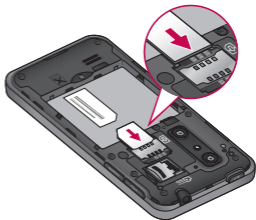


- 3 对齐手机和电池上的金色接触区域以插入电池。



4 盖上手机后盖。



## 充电


充电器接口位于 LG-P920 顶部。插入充电器，然后将其插入电源插座。必须为 LG-P920 充电，直至看到 。



**备注：**第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。


## 插入存储卡：

1 卸下后盖。

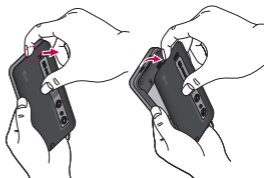

# 开始了解您的手机

- 2 将存储卡插入插槽。确保金色接触区域面朝下。

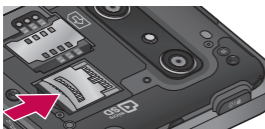

## 格式化存储卡


如果已格式化存储卡，您可以开始使用。如果尚未格式化，则必须先格式化才能使用。

**备注：**格式化卡时，卡上的所有文件将被删除。

- 1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。
- 2 向下滚动并点触**设置**。
- 3 向下滚动并点触**存储卡和手机内存**。
- 4 点触“取消安装 SD 卡”，并点触“确定”以确认。
- 5 点触“格式化 SD 卡” > “格式化 SD 卡” > “清除全部内容”。
- 6 如果设置了图样锁定，请输入图样锁定并选择**清除全部内容**。存储卡完成格式化，现在，您可以使用了。

**备注：**如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

**提示！** 如果存储卡已删除，您可以使用下列步骤格式化。点触**应用程序 > 设置 > 存储卡和手机内存 > 格式化 SD 卡**。

 **警告** 请勿在手机开机时插入或取出存储卡。否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。要安全地取出存储卡，请选择**应用程序 > 设置 > 存储卡和手机内存 > 取消安装 SD 卡**。

# 主屏

## 触摸屏提示

以下是关于如何浏览手机的一些提示。

**点触** - 要选择菜单/选项或打开应用程序，请点触它。




**点触并按住** - 要打开选项菜单或选中想要移动的对象，请点触并按住它。



**拖动** - 要滚动浏览列表或慢慢移动，请在触摸屏上拖动。




**轻弹** - 要滚动浏览列表或快速移动，请在触摸屏上轻弹（快速拖动然后释放）。

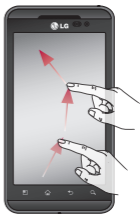

## 并拢和张开 -

要缩小内容或图像，请将双指置于屏幕上并收拢以收拢屏幕。

在放大，请将双指张开以放大内容或图像。



## 备注:

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。

# 主屏

## 锁定手机

不使用 LG-P920 时，按**电源**键可锁定手机。这有助于防止意外按键和节省电池电量。

如果在一段时间内不使用手机，您当前正在观看的屏幕将被锁定屏幕取代，以节省电量。

**备注：**如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。建议您先退出所有程序，然后再进入锁定模式，以避免不必要的费用和电池电量消耗（例如，通话费、网络访问费和数据通信费）。

## 解锁屏幕

要唤醒手机，请按**电源**键。锁定屏幕将会显示。触摸并向上滑动屏幕即可解锁主屏。您最后查看的屏幕将会打开。

## 主屏


只需向左或向右轻轻滑动手指就能查看。您也可以使用


小工具自定义每个面板，即您喜爱的应用程序、文件夹和墙纸的快捷方式。


**备注：**一些屏幕图像可能因手机提供商而不同。

在主屏上，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。

 点触**手机**图标可打开触摸拨号键盘，以拨打电话。

 点触**联系人**图标以打开**电话本**。

 点触**信息**图标以访问信息菜单。您可以在这里创建新信息。

 点触屏幕底部的**应用程序**选项卡。然后，您可以查看安装的所有应用程序。只需点触即可滚动浏览您的应用程序。


要打开所需应用程序，从应用程序列表中点触相应图标即可。

**备注：**根据手机软件或服务提供商的不同，预加载的应用程序将有所不同。

## 将小工具添加到主屏



您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。

### 要将图标添加到主屏：

- 1 在主屏中，点触**菜单键**  并选择**添加**。或长按主屏的空白部分。
- 2 在**编辑模式**菜单上，点出您要添加的项目类型。
- 3 例如，从列表中选择**文件夹**并轻触它。从列表中选择**有电话号码的联系人**并轻触它。
- 4 主屏上将会显示新文件夹的图标。长按此图标并将其拖到右侧面板上的所需位置，然后让手指离开屏幕。


**提示！** 要将应用程序图标添加到主屏，请在应用程序菜单上点触并按住要添加到主屏的应用程序。

### 从主屏中删除应用程序图标：

- 1 点触并按住您要删除的图标。垃圾箱图标  将会出现。
- 2 将应用程序图标拖曳到垃圾箱图标 。

**备注：**预加载的应用程序无法删除（只能从屏幕上删除其图标）。

## 返回到最近使用的应用程序

- 1 点触并按住**主屏键** 。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或点触**返回键**以返回到当前应用程序。


# 主屏


## 通知抽屉

通知抽屉在屏幕顶部运行。



请使用手指点触并滑动通知抽屉。

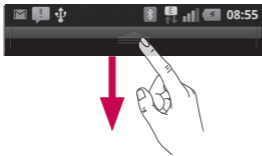

或者，在主屏上点触**菜单**键 ，然后选择**通知**。您可以在此处检查和管理 Wi-Fi、蓝牙、GPS 状态及其他通知。

## 查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。

13/05/2011

    17:29



### [状态栏]


图标	描述
	无 SIM 卡
	无信号
	飞行模式
	已连接到 Wi-Fi 网络
	有线耳机
	正在通话
	通话正在保持
	扬声器
	手机麦克风静音

图标	描述
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	振动模式
	电池已充满电
	电池正在充电
	数据传进和传出
	手机已通过 USB 数据线 与 PC 连接
	正在下载数据
	正在上载数据

图标	描述
	屏幕手机已连接
	还有 3 个通知未显示
	数据正在同步
	下载完成
	新电子邮件
	新 Gmail
	新 Google Talk 信息
	新信息
	正在播放歌曲
	近期事件
	USB 绑定已激活
	便携式 WLAN 热点已 激活

# 主屏

图标	描述
	USB 绑定和便携式热点均已激活。
	GPS 开

 轻触以在信息字段新建一行。


 轻触以删除上一字符。


 点触以隐藏屏上键盘。


## 屏上键盘

您可以使用屏上键盘输入文本。在您需要输入文本时，屏上键盘会自动显示在屏幕上。要手动显示键盘，只需点触要输入文本的文本字段。

### 使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

 轻触以切换为数字和符号键盘。您也可以按住此选项卡以查看设置菜单。

 轻触以查看或更改变写语言。

 轻触以输入空格。

# Google 帐户设置

当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。

## 创建 Google 帐户

- 1 在主屏上，点触**应用程序**选项卡  以打开应用程序菜单。
- 2 依次轻触 **Gmail** 和 **下一步** > **创建**以启动 Gmail 设置向导。
- 3 点触文本字段以打开触摸键盘，输入您的姓名和 Google 帐户的用户名。当输入文本时，您可以点触键盘上的**下一步**移动到下一文本字段。
- 4 输入姓名和用户名后，请轻触**下一步**。您的手机将会与 Google 服务器通信，并会检查用户名可用性。

- 5 输入并重新输入您的密码。然后按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

## 登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触**登录**。等待登录。
  - 2 登录后，您可在手机上使用 Gmail 收发邮件和 Google 服务。
  - 3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（具体取决于您的同步设置。）
- 登录后，您可以使用 Gmail、Google Calendar、Android Market；从 Android Market 下载应用程序；将您的设置备份到 Google 服务器；以及在手机上使用其他 Google 服务。

# Google 帐户设置



## 重要！

- 诸如日历、Talk 等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。在您登录到 Google 帐户之后，无法从第一个 Google 帐户中注销以及删除第一个 Google 帐户，但是您可以添加/删除其他 Google 帐户。登录后，您的联系人、G-mail 消息、日历事件和来自网络上的这些应用程序和服务的其他信息将与您的手机同步。当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。

- 如果想使用备份功能从运行 Android 操作系统或更高版本的其他手机向您的手机恢复设置，则您现在必须在安装期间登录 Google 帐户。如果等到安装完成后再次登录，则不会恢复您的设置。
- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

# 通话/联系人



## 拨打语音电话

- 1 点触  以打开键盘。
- 2 在键盘上输入号码。要删除一个数字，请点触清除按钮 。
- 3 点触通话图标  以拨打电话。
- 4 要结束通话，请点触结束图标 。

**提示!** 要输入“+”以拨打国际电话，请按住 。

**提示!** 要在通话过程中显示键盘，请点触**拨号盘**。

## 拨打视像电话

- 1 点触  以打开键盘。
- 2 像往常一样输入电话号码。
- 3 点触视频通话图标  拨打视频电话。

- 4 若不想使用扬声器，请点触免提，确保将耳机插入。
- 5 在视频电话连接过程中，您会看到自己的图像；在对方应答后，屏幕将显示对方的图像。请根据需要调整内置相机位置。
- 6 要结束视频通话，请点触结束。

**拨号盘:** 键入号码。

**保持:** 使麦克风静音，暂停视频。

**静音:** 使麦克风静音。

**扬声器:** 扬声器开或关。


## 视频通话菜单中

**拍摄** - 您可以拍摄对方或自己的图像。

**使用后置/前置相机** - 切换相机。

# 通话/联系人



## 呼叫联系人

- 1 点触  以打开联系人列表。
- 2 滚动浏览联系人列表，或点触 **搜索** 输入您要呼叫的联系人的首字母。
- 3 在列表中，点触您要呼叫的联系人。



## 接听和拒绝电话

**提示!** 如果您忘记使手机处于静音模式，请轻触“应用程序”选项卡 > 设置 > 笔势 > 使用动作笔势 > 来电 > 勾选“静音”，并且在来电期间向下倾斜手机使铃声静音。

### 屏幕锁定时：

在手机响铃时，向右拖动接听图标 。向左拖动拒接图标  以拒接来电。

### 屏幕解锁时：

手机响铃时，点触接听图标 。点触“拒绝”图标  可以拒接来电。

**提示!** **借口信息**要拒接来电时，您可以通过拖动屏幕上的**借口信息**快速发送信息。此选项有助于在会议时回复信息。

## 调节音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低按钮。


## 拨打第二个电话

- 1 在初始呼叫中，点触拨号盘  然后拨号。您可以通过点触“电话本”来搜索联系人， 也可以选择要拨打的号码。
- 2 点触**通话**图标  以连接通话。
- 3 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 4 点触并按住列表，可在通话间切换。**备注:** 您可点触**合并通话**  进行多方

通话。

- 5 要结束当前通话，请点触**结束图标** 。

## 查看通话记录

在主屏上，点触  并选择**通话记录**选项卡。

查看所有拨电、已接来电和未接来电的完整列表。

**提示!** 点触任意单个通话记录条目，以查看通话日期、时间和时长。

**提示!** 点触 **菜单**键，然后点触**全部删除**以删除所有记录条目。

## 通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

- 1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。

- 2 向下滚动并点触**设置**。

- 3 轻触**通话设置**，然后选择要调整的选项。

### <固定拨号>

选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要由运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

### <语音信箱>

**语音邮件** - 允许您选择运营商的语音信箱服务。

**语音信箱设置** - 如果当前在使用运营商的语音信箱服务，此选项使您可以输入用于收听和管理语音信箱的号码。

### <其他通话设置>

**拒接来电** - 设置拒接列表上的来电还是所有来电。如果设置了拒接来电列表，请点触“拒接来电列表”>“静音”键 >“新拒接条目”。然后从“电话本”、“通话记录”或“新号码”创建新

# 通话/联系人

拒接条目。

**呼叫转移** - 您可以将您的语音呼叫/视频呼叫转移到其他号码。选择始终转移、忙时转移、无应答时转移还是无法接通时转移。

**附加设置** - 此菜单允许您更改以下设置：

- **来电显示** - 选择是否要在拨出电话时显示您的号码。
- **呼叫等待** - 如果启用了呼叫等待功能，在通话过程中，手机将提醒您有新来电。（这取决于网络提供商。）

**呼叫限制** - 选择何时限制呼叫。输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

**通话费用** - 查看通话的相关费用。（此服务取决于网络；某些运营商不支持此功能。）

**通话时间** - 查看“所有通话”、“已拨电话”、“已接来电”和“上次通话”的通话时间。


**借口信息** - 拒绝通话时，您可使用此功能快速发送一条信息。此选项有助于在会议时回复信息。

**视频通话设置** - 更改您的视频通话设置。

## 电话本

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

## 搜索联系人

- 1 在主屏上点触  可打开联系人列表。
- 2 点触 **搜索**，使用键盘输入联系人姓名。


## 添加新联系人

- 1 在主屏上点触 ，输入新联系人的号码，然后依次点触**菜单键**  和**添加到电话本**。然后选择是要**创建新联系人**，还是**添加到现有联系人**。
- 2 如果您要为新联系人添加图片，请点触 。
- 3 选择**拍照**或**从图片库选择**。
- 4 通过点触选择铃声 。
- 5 点触文本字段以打开触摸键盘，输入新联系人的姓名。
- 6 输入您的联系人详细信息。
- 7 点触**保存**以保存联系人。


## 收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

### 将联系人添加到收藏夹：

- 1 在主屏上点触  可打开联系人列表。
- 2 点触联系人以查看详细信息。
- 3 点触联系人姓名右侧的星号。星号变为金色。

### 从收藏夹列表中删除联系人：



- 1 在主屏上点触  可打开联系人列表。
- 2 点触**群组**选项卡，然后选择**收藏夹**。点触联系人以查看详细信息。
- 3 点触联系人姓名右侧的金色星号。星号变为灰色，联系人已从收藏夹中删除。

# 信息/电子邮件

## 信息

LG-P920 将短信和彩信结合到一个直观易使用的菜单中。

## 发送信息

- 1 点触主屏上的  图标，然后点触“新信息”以打开空白信息。
- 2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以点触建议的收件人。您可以添加多个联系人。  
**备注：**您将按每个收件人每条文本信息付费。
- 3 点触下面的**写信息**开始撰写信息。
- 4 点触**发送**发送信息。**提示！**您可以点触  图标以附加想要在信息中发送的文件。

- 5 信息屏幕将会打开，您的信息显示在您的名称后面。屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

### 警告

160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和语言。

### 警告

如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

**备注：**在通话期间收到短信时，手机将发出通知铃声。

## 更改信息设置

LG-P920 已预定义信息设置，因此，您可以立即发送信息。您可以根据个人需要更改这些设置。

在主屏上点触**信息**图标，然后点触**菜单**键，再轻触**设置**。

## 设置电子邮件

点触**应用程序**选项卡，然后选择**电子邮件**。如果尚未设置电子邮件帐户，请启动电子邮件设置向导。

**提示！** 如果已设置电子邮件帐户，则不会自动启动向导。

您可以选择邮箱类型为 **MS Exchange** 或**其他**。

## Microsoft Exchange 电子邮件帐户

**电子邮件地址** - 输入帐户电子邮件地址。

**用户名** - 输入帐户用户名。

**密码** - 输入帐户密码。

**域** - 输入帐户域（可选）

**服务器地址** - 输入电子邮件服务器地址。

**使用 SSL** - 选择是否使用 SSL

使用 SSL。

点触“下一步”按钮连接服务器。

此时将出现设置完成页面，您需要输入帐户显示的“名称”以及“我的名称”。

此时，帐户将出现在您的“电子邮件”文件夹列表中。

## 其他 (POP3、IMAP、GME) 电子邮件帐户

**电子邮件地址** - 输入帐户电子邮件地址。

**密码** - 输入帐户密码。

此时将出现设置完成页面，您需要输入“名称”。

此时，帐户将出现在您的“电子邮件”文件夹列表中。

# 信息/电子邮件

**POP3 / IMAP4** - 选择协议类型：POP3 或 IMAP4。

**接收服务器** - 输入接收邮件服务器的地址。

**安全类型** - TLS/SSL/关。

**端口号** - 通常显示每个帐户的默认编码。

**发送服务器** - 输入发出邮件服务器的地址。

**安全类型** - TLS/SSL/关。

**端口号** - 通常显示每个帐户的默认编码。

## 帐户屏幕

帐户屏幕列出了您的**合并的收件箱**以及您的每个电子邮件帐户。

- 点触**应用程序**选项卡，然后选择**电子邮件**。此时将出现**帐户列表**屏幕。

**提示!** 在帐户列表中，长时间轻触一个电子邮件帐户并点触“添加到主屏”选项，以便在主屏上显示帐户图标。

您可以点触帐户以查看其**合并的收件箱**。您用于发送电子邮件的默认帐户将以勾选符号表示。

要打开您合并的收件箱：

如果您已将电子邮件配置为从多个帐户收发电子邮件，则可以在**全并的收件箱**中查看发送到您所有帐户的所有邮件。

- 1 点触应用程序选项卡，然后选择电子邮件。
- 2 点触**合并的收件箱**（在帐户屏幕中）。**合并的收件箱**将按帐户在左侧采取颜色编码的方式区分，每个帐户使用的颜色与您在**帐户**屏幕中使用的颜色完全一样。

## 撰写和发送电子邮件

要撰写和发送邮件：

- 1 在**电子邮件**应用程序中，点触**菜单**键，然后点触**撰写**。

- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。用逗号分隔多个地址。
- 3 点触**菜单**键并点触**添加抄送/密件抄送**以便抄送或密件抄送给其他联系人/电子邮件地址。
- 4 输入邮件的正文。
- 5 点触**附加**以附加想要在邮件中发送的文件。
- 6 点触**发送**。如果暂不发送邮件，请依次点触**菜单**键和**保存草稿**，将其保存在**草稿箱**文件夹中。在草稿箱文件夹中点触邮件以继续编辑邮件。如果您在发送信息之前轻触返回键并在“另存为草稿”弹出屏幕上轻触“是”，您的信息还将另存为草稿。点触**放弃**以舍弃或删除邮件，包括任何已保存的草稿。如果未连接至网络，例如

如果您以飞行模式工作，您发送的邮件将存储到您的**发件箱**文件夹中，直到重新连接至网络。如果包括任何未发送的邮件，**发件箱**就会显示在**帐户**屏幕上。

请注意，使用 Exchange 帐户发送的邮件将不会存储在手机上；但它们会存储在 Exchange 服务器上。如果您要在“已发送”文件夹中查看您的已发送信息，请依次点触菜单键、“文件夹”和“已发送”文件夹，然后从菜单选项中选择“刷新”。

**提示!** 当新电子邮件到达收件箱时，会发出声音或振动通知。

# 信息/电子邮件

## 使用帐户文件夹

每个帐户都包括**收件箱、发件箱、已发送、草稿箱、垃圾箱和垃圾邮件文件夹**。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

## 添加或编辑电子邮件帐户

要添加电子邮件帐户：

- 1 点触**应用程序**选项卡，然后选择**电子邮件**。
- 2 选择 **MS Exchange** 或**其他**。如果已设置电子邮件帐户，则不会自动启动向导。在这种情况下，您需要点触**菜单键**，然后点触**添加帐户**。

更改帐户设置：

- 1 打开**帐户**屏幕。
- 2 点触**菜单键**，然后选择**设置**。

要删除电子邮件帐户：


- 1 打开**帐户**屏幕。

- 2 点触并按住您要删除的帐户。
- 3 点触打开菜单中的**删除帐户**，然后点触对话框中的**确定**以确认删除。

### 提示！

#### 新功能

根据优先顺序，针对未接来电、未读信息、语音邮件、电子邮件、Twitter 显示通知。针对特定时间显示通知。

- 1 选择**应用程序** > **新功能**。
- 2 通过轻触  按钮，您可以选择列表视图或类别视图。

# 社交网络

通过手机，您可以体验社交网络并管理联机社区中的微博。您可以更新您的当前状态，上载照片，并查看朋友的状态更新。

如果没有帐户，您可以访问其网站进行设置。

**备注：**连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。


## 将您的帐户添加到手机

- 1 点触并按住主屏。当多种 Widgets 出现时，选择**社交+** ，然后轻触  **设置**按钮。您也可以选择其他方式。在主屏上，选择**应用程序 > 设置 > 帐户和同步 > “社交+”**设置。
- 2 选择您要使用的社交网络客户端应用程序：Facebook、Twitter 和 MySpace。
- 3 输入您的通信电子邮件地址和密码，然后轻触

**登录。**

- 4 正在确认您的社区的详细信息，请稍候。
- 5 如果轻触您的社区，您可以看到社区的当前状态。

## 查看和更新状态

- 1 您可以使用**社交+**  小工具随时查看和更新社区内容。
- 2 在**社交+**  小工具上，选择您登录的社交网络服务，随后便能看到您自己的状态和内容。
- 3 当您点触输入框时，屏幕将会切换，并用评论或上传照片更新您目前的状态。

**提示！** 您可以更新状态并通过选择复选框同时将照片上传到 Facebook for LG、Twitter for LG 和 MySpace for LG。

**备注：**具体取决于网络服务。

# 社交网络

**提示！** 您可以使您的朋友联系人  
人与您的联系人列表同步。

## 删除手机上的帐户

- 1 选择**应用程序** > **设置** > **帐户和同步**。
- 2 选择要删除的帐户，然后点触**删除帐户**。

## Facebook 和 Twitter


- 1 在主屏上，点触应用程序选项卡  以打开应用程序菜单。
- 2 选择您要使用的社交网络客户端应用程序：  
Facebook 和 Twitter。
- 3 输入您在社区上设置的电子邮件地址和密码，然后轻触登录。
- 4 正在与您的社区确认您的详细信息，请稍候。
- 5 如果轻触您的社区，您可以看到社区的当前状态。

# 照片和视频

## 了解取景器（相机）

**缩放** - 放大或缩小。或者，您可以使用侧音量键。

**切换相机** - 您可以从外部相机切换到内置相机。

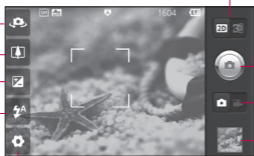

**在 2D - 3D 模式之间转换**  
- 点触可在 2D 和 3D 模式之间切换照片拍摄模式。

**拍照**

**视频模式** - 向右滑动此图标以切换到视频模式。

**图片库** - 点触以查看最近拍摄的照片。您可以访问“我的文档”并查看相机模式下保存的照片。

**设置** - 点触此图标可以打开设置菜单。请参阅使用高级设置。


**闪光灯** - 在黑暗处拍照时刻打开闪光灯。

**亮度** - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”降低图像亮度，“+”调高图像亮度。

**提示!** 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要恢复选项，请再次点触屏幕。

# 照片和视频

## 快速拍照

- 1 打开**相机**应用程序。
- 2 拿稳手机，将镜头对准您要拍摄的对象。
- 3 点触快门图标 。
- 4 图像对焦准确时，对焦指示符变绿，将拍摄图像。

**注意：**由于相机自身限制，当尝试在室内拍照时，可能会遇到阴影问题。（阴影的含义是中心与边缘位置的细微色差。）

## 拍照后

拍好的照片将显示在屏幕上。

**共享** 点触以通过**蓝牙**、**Facebook**、**Social+**、**Twitter**、**Picasa**、**信息**、**Gmail** 或**电子邮件**分享您的照片。

**备注：**漫游时如果下载了彩信，可能会额外收费。

**提示！** 如果您拥有一个社交网络帐户并在手机上设置了该帐户，您可以将您的照片共享到社区。

**设定为** 点触以将图像设为**联系人图标**或**墙纸**。

**重命名** 点触以编辑选定图片的名称。

**编辑** 点触以编辑您拍摄的照片。



点触可以删除图像。




点触可以立即拍摄其他照片。



点触以查看最近拍摄的照片。

## 使用高级设置（相机）

在取景器中点触  以打开所有高级选项。

滚动转盘，您可以更改相机设置。选择选项后，点触**返回**键。

**对焦** - 选择对焦选项：**自动**、**微距**、**连续自动对焦**和**人脸跟踪**。

**图像大小** - 点触可设置所拍照片的尺寸（以像素为单位）。

**场景模式** - 从以下选项中选择：**自动**、**肖像**、**风景**、**日落**、**夜间**。

**白平衡** - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**、**阴天**。

**色彩效果** - 选择新照片的色彩效果。从以下选项中选择：**无**、**棕褐色**、**单色**、**反色**、**逼真**和**曝光**。

**自拍器** - 自拍器允许您设置按下拍摄按钮后、拍照前的延迟。

**拍摄模式** - 选择拍摄模式：“**标准**”或“**连拍**”模式。

**图像质量** - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

**自动查看** - 如果将**自动查看**设置为开，手机将自动显示刚拍摄的照片。


**快门声音** - 从四种快门声音中选择一种。


**标签位置** - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

# 照片和视频

**备注：**此功能仅在激活了定位服务时可用。

**存储** - 选择内存或 SD 卡以保存图像。


 恢复所有相机默认设置。

 若要了解此功能如何操作，请点触该选项。以下为您提供快速指南。


**提示！** 退出相机时，部分设置将返回默认值。拍摄下一张照片之前，请先检查相机设置。


**提示！** 设置菜单层叠在取景器之上，因此，当您更改图像颜色或品质时，您将在设置菜单下预览到图像更改效果。


## 查看保存的照片

**1** 您可以在相机模式下访问保存的照片。点触  即会在屏幕上显示图像

库。在屏幕上点触照片。随后，您将看到**幻灯片和菜单**。

 点触以观看幻灯片放映。点触**菜单**并选择您要的选项。

 点触以共享内容。

 点触以删除照片。

 点触**更多**可获得以下更多选项。

**详情** - 查找有关此内容的更多信息。

**设置为** - 设置为联系人图标或墙纸。

**裁切** - 裁切照片。使用手指移过屏幕以选定区域。


**旋转** - 向左旋转或向右旋转。

**编辑** - 点触可使用不同的工具编辑图像。

## 了解取景器（摄像机）

**缩放** - 放大或缩小。或者，您可以使用侧音量键。

**切换相机** - 您可以从外部相机切换到内置相机。

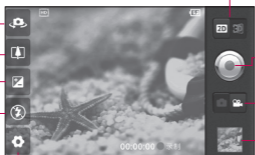

**在 2D - 3D 模式之间转换**  
- 点触可在 2D 和 3D 模式之间切换照片拍摄模式。

**开始录制**

**相机模式** - 向左滑动此图标以切换到相机模式。

**我的文档** - 点触以查看最近录制的视频。您可以访问“我的文档”并查看摄像机模式下保存的视频。

**设置** - 点触此图标可以打开设置菜单。请参阅使用高级设置。

**闪光灯** - 允许您在黑暗处拍摄视频时打开闪光灯。

**亮度** - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”降低图像亮度，“+”调高图像亮度。

**提示!** 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要恢复选项，请再次点触屏幕。

# 照片和视频

## 快速摄像

- 1 打开**相机**应用程序，将相机模式按钮向下滑动到**视频**位置。快门图标将由  更改为 。
- 2 屏幕上将显示摄像机的取景器。
- 3 握住手机，将镜头对准要拍摄的对象。
- 4 点触以启动视频图标 。
- 5 REC 将显示在取景器底部，计时器将显示视频长度。
- 6 点触停止视频图标  停止录制。

## 拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

### 播放

点触以播放视频。

### 共享

点触可以通过**蓝牙**、**Facebook**、**电子邮件**、**Gmail**、**信息**或**YouTube**共享视频。

**备注：**漫游时如果下载了彩信，可能会额外收费。

### 重命名

点触以编辑选定视频的名称。



点触以删除您拍摄的视频，点触**是**确认。此时将出现取景器。




点触可以立即拍摄另一段视频。



点触以查看最近拍摄的视频。

## 使用高级设置 (摄像机)

从取景器中点触  以打开所有高级选项。滚动转盘以调节摄像机设置。选择选项后，点触**返回键**。

**视频大小** - 点触可设置录制的视频的大小（以像素为单位）。将视频图像大小设置为 1080P (1920x1080)、HD (1280x720)、D1 (720x480)、VGA (640x480)、QVGA (320x240) 或 QCIF (176x144)。

**白平衡** - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动、白炽灯、日光、荧光灯和阴天**中选择。

**色彩效果** - 选择要对新视图使用的色彩效果。从以下选项中选择：**无、棕褐色、单色、反色、逼真和曝光**。

**视频质量** - 在**超精细、精细和标准**之间选择。

**长度** - 设置视频的长度限制。从**标准和彩信**中选择，以限制彩信最大大小。

**录音** - 选择**静音**以录制视频而不录制声音。

**自动查看** - 如果将此选项设为开，则会自动显示您刚刚录制的视频。

**存储** - 选择**内置 SD 卡**或**外部 SD 卡**来保存视频。




重置所有摄像机设置。



若要了解此功能如何操作，请点触该选项。以下为您提供快速指南。

# 照片和视频

## 观看保存的视频

- 1 在取景器中，点触右下角的 。
- 2 屏幕上将显示“我的文档”。
- 3 点触要播放的视频。

## 观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

## 3D 照片和视频

### 了解取景器（3D 相机）





- 1 **切换相机** - 您可以从外部相机切换到内置相机。


- 2 **3D 对焦** - 您可以通过底部的状态栏调整重叠量来手动微调 3D 对焦。在拍摄 3D 图片之前，您可以使用此功能。
- 3 **亮度** - 此选项定义并控制进入视频的光量。沿滚动条滑动亮度指示器，“-”降低视频亮度，“+”调高亮度。
- 4 **闪光灯** - 允许您在黑暗处拍摄视频时打开闪光灯。
- 5 **设置** - 点触此图标可以打开设定菜单。请参阅使用高级设置。

**3D 对焦模式** - 选择自动 3D 对焦选项：边框、中心。边框使用边框区域来优化重叠量。中心则使用中心来优化重叠量。您还可以通过取景器的 3D 对焦功能来手动微调。

## 拍摄 3D 照片

- 1 打开相机应用程序。
- 2 在取景器中，点触 3D 按钮 。
- 3 拿稳手机，将镜头对准您要拍摄的对象。
- 4 点触快门图标 。
- 5 相机将使图像进入焦距。图像处于焦距内时，每个角的对焦指示符均会变绿，并且相机将以此拍照。

## 了解取景器（3D 摄像机）

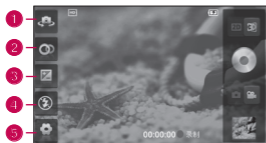

- 1 **切换相机** - 您可以从外部相机切换到内置相机。

- 2 **3D 对焦** - 您可以通过底部的状态栏调整重叠量来手动微调 3D 对焦。在拍摄 3D 视频之前，您可以使用此功能。在录制时无法调整此功能。
- 3 **亮度** - 此选项定义并控制进入视频的光量。沿滚动条滑动亮度指示器，“-”降低视频亮度，“+”调高亮度。
- 4 **闪光灯** - 允许您在黑暗处拍摄视频时打开闪光灯。
- 5 **设置** - 点触此图标可以打开设置菜单。请参阅使用高级设置。

**3D 对焦模式** - 选择自动 3D 对焦选项：边框、中心。边框使用边框区域来优化重叠量。中心则使用中心来优化重叠量。您还可以通过取景器的 3D 对焦功能来手动微调。

**稳定** - 设置“开”对手抖进行补偿。

# 照片和视频


## 快速拍摄 3D 视频

- 1 打开相机应用程序，将相机模式按钮向下滑动到视频位置。快门图标将由  更改为 。
- 2 屏幕上将显示摄像机的取景器：点触 3D 按钮 。
- 3 在风景视图下握住手机，将镜头对准要拍摄的对象。
- 4 点触以启动视频图标 。REC 将显示在取景器底部，计时器将显示视频长度。
- 5 点触停止视频图标  停止录制。

### 备注

- 3D 相机模式只能在风景视图中使用。
- 确保相机和对象之间的距离超过 0.5 米。
- 为获得最佳 3D 视觉体验，请将设备和眼睛保持 30~40 厘米的距离。


## 3D 空间

按住手机右侧的 3D 键，可访问  3D 空间。将会显示 3D 内容，如 YouTube 3D、3D 图片库、3D 相机和 3D 指南。

### YouTube 3D

- 1 点触 YouTube 3D 以启动。随着屏幕切换到 YouTube 3D 网页，将会出现各种 3D 视频。
- 2 选择要观看的视频。视频将以肖像模式并排显示。
- 3 旋转到风景视图，3D 模式将会自动开启。


### 3D 图片库

- 1 点触  3D 图片库。3D 图像将会列出。
- 2 选择要观看的图像。


#### 备注

- 3D 内容的最佳观看距离是置于正前方 30-40 厘米处。

### 3D 相机

- 1 点触  3D 相机，屏幕将会切换到 3D 相机模式。要创建 3D 照片和 3D 录音，请参阅前几页的 3D 照片和视频。

### 3D 游戏和应用程序

- 1 点触  3D 游戏和应用程序、您从 Market 下载的所有 3D 游戏和应用程序将会列出。将会提供四个应用程序 (Asphalt6、Let's Golf2、Nova、Gulliver's Travels) 作为默认设置。

### 3D 指南

3D 指南中提供了便于您在此手机上使用 3D 内容的说明。该指南会告诉您如何创建 3D 图片，通过 HDMI 连接到 3D 电视、观看 3D 内容以及共享这些内容。

# 多媒体

## 我的文档

您也可以将文件保存到外部存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

点触**应用程序**选项卡，然后选择**我的文档**。

- 1 在屏幕上点触照片。随后，您将看到**幻灯片和菜单**。



点触以查看幻灯片放映。



点触以选择您需要的选项。



点触以分享内容。



点触以删除照片。



点触**更多**可获得以下更多选项。

**详情** - 查找有关此内容的更多信息。

**设置为** - 设置为联系人图标或墙纸。

**裁切** - 裁切照片。使用手指移过屏幕以选定区域。

**旋转** - 向左旋转或向右旋转。

**编辑** - 点触可使用不同的工具编辑图像。

## 要观看 3D 内容，


- 1 请选择要观看的图像。
- 2 旋转到风景视图，3D 模式将会打开。
- 3 有关详细信息，请参阅“3D 指南”。

**备注：**部分图像文件可由 2D 转换成 3D。

## 音乐

LG-P920 拥有内置播放器，因此，您可以播放所有喜爱的音乐。要访问音乐播放器，请点触“应用程序”选项卡，然后选择“音乐”。

## 播放歌曲

- 1 在主屏上点触**应用程序**选项卡，然后选择**音乐**。
- 2 点触**歌曲**。
- 3 选择您要播放的歌曲。
- 4 点触  以暂停歌曲。
- 5 点触  以跳到下一首歌曲。
- 6 点触  以返回到歌曲的开头。点触  两次以返回到上一首歌曲。

要在聆听音乐时调节音量，请按手机右侧的音量调高和音量调低键。

点触并按住列表中的任何歌曲。它将显示**播放**、**添加到播放列表**、**用作铃声**、**删除**和**搜索**选项。


**备注：**音乐文件的版权可能受国际条约和国家版权法保护。

可能需要获得许可或许可证才能复制音乐。在某些国家，相关法律禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

## 使用 SmartShare

**SmartShare** 使用 DLNA（数字生活网络联盟）技术，通过无线网络共享数字内容。要支持此功能，双方设备都必须经过 DLNA 认证。

### 打开 SmartShare 并允许共享内容

- 1 点触**应用程序**选项卡 ，然后选择 **SmartShare**。
- 2 按菜单键，然后选择**设置**。
- 3 点触**可检测性**复选框以打开。
- 4 如果要自动接受来自其他

## 多媒体

设备的共享请求，请点触自动接受请求。

- 5 如果要自动允许从其他设备上传文件到我的手机，请点触接收文件。
- 6 在**共享内容**部分，点触以勾选您要共享的内容类型。从图片、视频和音乐中进行选择。
- 7 **SmartShare** 目前已激活，可以开始共享内容。

### 要从远程内容库向其他设备共享内容

\* 允许您的图像生成设备（如 TV）播放来自远程内容库（如 PC）的多媒体内容

**注：**请确保已正确配置您的设备（例如，TV 和 PC）的 DLNA 功能。

- 1 点触**应用程序**选项卡，然后选择 **SmartShare**。
- 2 点触右上角的按钮，或从图像生成设备列表中选择所需设备。

- 3 点触左上角的按钮，选择远程内容库中的设备。
- 4 您可以浏览远程内容库。
- 5 点触内容缩略图或按菜单键，然后选择**播放**按钮。

### 共享手机或图像生成设备（如电视）中的内容

**备注：**请确保已正确配置您的图像生成设备。

- 1 使用图片库应用程序浏览您的图片或视频时，请点触并按住以选择文件。随后，您可以选择要共享的多个文件。
- 2 点触菜单中的**共享**，选择 **SmartShare**。
- 3 **SmartShare** 将自动启动以共享选定文件。
- 4 从图像生成设备列表中选择设备以播放文件。

**备注：**要使用此應用程式，請檢查裝置已使用 Wi-Fi 連接與本地網絡連接，並確保裝置已連接至 DLNA 認證的 Wi-Fi。

**注意：**要使用此应用程序，请检查您的设备已通过 Wi-Fi 连接到主网络。

某些启用了 DLNA 的设备（如 TV）仅支持 DLNA 的 DMP 功能，将不会显示在图像生成设备列表中。您的设备可能无法播放某些内容。

### 从远程内容库下载内容

- 1 点触**应用程序**选项卡，然后选择 **SmartShare**。
- 2 点触左上角的按钮，选择远程内容库中的设备。
- 3 您可以浏览远程内容库。
- 4 点触内容缩略图，然后点触下载菜单键

**注意：**有几种类型的内容不受支持。

### 从手机上传内容到远程内容库

**备注：**确保 SD 卡已正确安装，并且选中了设置菜单中的**接收文件**。

- 1 点触**应用程序**选项卡，然

后选择 **SmartShare**。

- 2 点触左上角的按钮，然后选择**我的手机**。
- 3 您可以浏览远程内容库。
- 4 点触并按住内容缩略图，然后点触上传菜单键
- 5 选择要上传的远程内容库的设置。

**注意：**有些已启用 DLNA 的设备不支持 DMS 上传功能，将不会上传。

有几种类型的内容不受支持。

### 使用 USB 大容量存储设备传输文件

#### 使用 USB 设备传输文件：

- 1 使用 USB 数据线将 LG-P920 连接到 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**设置 > SD 卡和手机存储 > 仅批量储存**，然后使用 USB 数据线，将手机连接到 PC。

# 多媒体

- 3 点触**打开 USB 存储**。
- 4 您可以在 PC 中查看批量存储内容，然后传输文件。

**备注：**您需要先安装 microSD 卡。没有 microSD 卡，您不能使用 USB 大容量存储。

## 如何将音乐/视频文件保存到手机

- 1 使用 USB 数据线将手机连接到 PC。
  - 点触并向下拖动主屏上的状态栏。选择“USB 已连接”>“打开 USB 存储设备”>在 PC 中打开移动存储文件夹以查看文件。
  - 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动设置。有关详细信息，请参阅“使用大容量存储设备传输文件”。
- 2 将 PC 上的音乐或视频保存到手机的可移动存储。
  - 您可以使用读卡器将文件从

PC 复制或移动到手机的可移动存储设备。

- 如果有视频文件和子标题文件（与视频文件带有相同名称的 .smi 或 .srt 文件），请将它们放在同一文件夹中以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。请注意，已损坏或扩展名出错的文件可能会损坏您的手机。

## 如何将旧手机上的联系人移至当前手机

**使用 PC 同步程序将联系人作为 CSV 文件从旧手机导出到 PC。**

- 1 从 [www.lg.com](http://www.lg.com) 下载用于 Mobile Sync for Android 并在 PC 中安装它。运行程序，并使用 USB 数据线将您的 Android 手机连接到 PC。
- 2 选择联系人图标。转到文

件 -> 导入，然后选择在 PC 上保存的 CSV 文件。

- 3 如果导入的 CSV 文件中的字段与 Mobile Sync for Android 中的不同，则需要映射字段。在映射字段后，单击“确定”。随后，联系人添加在 Mobile Sync for Android 中。
- 4 如果 Mobile Sync for Android 检测到 LG-P920 手机的连接（使用 USB 数据线），请单击“同步”或“同步联系人”以将 PC 中保存的联系人与手机同步并保存它们。

## 如何通过蓝牙从手机发送数据

要通过蓝牙发送数据，您无需像使用常规手机那样通过“蓝牙”菜单，直接运行适当应用程序即可。

- **发送图片：**运行“我的文档”应用程序，然后选择

图片 > 菜单。单击“共享”并选择“蓝牙”> 检查蓝牙是否打开，并选择“扫描设备”> 从设备列表中选择您要发送数据到其中的设备。

- **导出联系人：**运行“联系人”应用程序。点触您要导出到的地址。点触**菜单**并选择**共享 > 蓝牙 > 检查蓝牙是否打开**，并选择**扫描设备 > 从列表中选择您要发送数据的设备**。
- **发送多个联系人：**运行**联系人**应用程序。要选择多个联系人，请点触**菜单**键，然后依次点触“菜单”键和“共享”。选择要发送的联系人，或点触**全选 > 共享 > 蓝牙 > 选定蓝牙是否打开**，然后选择扫描设备 > 从列表中选择要向其发送数据的设备。
- **连接到 FTP（仅在此手机上支持 FTP 服务器）：**设置 > 无线和网络 > 蓝牙

# 多媒体

**设置。** 随后，选中**可见复选框**并搜索其他设备。查找所需服务，并连接到 FTP 服务器。

**提示！** 版本是 Bluetooth 2.1+EDR 并且已通过 Bluetooth SIG 认证。它与其他 Bluetooth SIG 认证设备兼容。

**备注：**如果要从其他设备搜索此手机，请转到**设置 > 无线和网络 > 蓝牙设置**。然后，选择**可见复选框**。120 秒后，该复选框将自动取消选定。

**备注：**支持以下配置文件：SDAP、HFP、HSP、OPP、PBAP（服务器）、FTP（服务器）、A2DP 和 AVRCP。

## HDMI

HDMI（高清多媒体接口）是一种用来传输未经压缩的数字数据的紧凑音频/视频接口。如果通过 HDMI 数据线将手机连接至电视或显示器，即可通过手机的视频播放器/图像查看器传输图像或视频文件，并在电视或显示器上进行观看。您还可以在 3D 电视或显示器上播放 3D 内容。

**备注：**播放媒体文件可能需要等待一段时间，具体取决于和手机连接的设备。使用非 HDMI 认证的数据线或产品，可能会造成文件无法正常播放。您在手机中设置的图像也将用于设备。

如果您的手机和 3D 电视支持其他 HDMI 版本，则 3D 内容可能无法自动传送。如果遇到这种情况，请参考电视机的用户手册更改电视的 3D 设置。使用 HDMI 数据线时，只能在电视或显示器上

显示 3D 视频播放、3D 相机预览或 3D 摄像机预览。由于版权所有者要求，部分文件可能不支持 HDMI 输出。如果同步原因导致手机数据无法在设备上正确播放，您需要更改手机分辨率。（在主屏上，轻触“菜单”键，然后轻触“设置”>HDMI>“分辨率”。）

# 实用工具

## 设置闹钟

- 1 在主屏上点触**应用程序**选项卡，然后选择**闹钟/时钟**。
- 2 如果要添加新闹钟，请点触新闹钟。
- 3 设置闹钟，点触保存以打开闹钟。

**备注：**要删除闹钟列表屏幕上的闹钟，点触“菜单”键，然后选择“删除/全部删除”。

## 使用计算器

- 1 在主屏上点触**应用程序**选项卡，然后选择**计算器**。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的功能（+、-、 $\times$  或  $\div$ ），然后点触 =。
- 4 对于更复杂的计算，点触**菜单**和**高级面板**，然后选择 sin、cos、tan、log 等。

**备注：**作为测量角度的标准单位，此计算器只支持弧度。





## 将事件添加到日历中

- 1 在主屏上点触**应用程序**选项卡，然后选择**日历**。
- 2 您必须先创建 MS Exchange 或 Google 帐户才能使用日历。
- 3 要查看活动，请点触日期。如果要添加新活动，请按住新活动。然后点触**新活动**。
- 4 点触**内容**，然后输入事件名称。查看日期并输入活动开始和结束的时间。
- 5 然后点触**位置**，并输入位置。
- 6 要为事件添加备注，请点触**描述**，然后输入详细信息。
- 7 如果要重复闹钟上，请设置**重复**，必要时设置**提醒**。

- 8 点触**完成**，将活动保存在日历中。日历中带颜色的方框将标记所有已保存活动的日期。在活动开始时间会有闹钟提醒，以便您进行安排。

## 录制声音或语音

使用录音机录制录音机或其他音频文件。

- 1 在主屏上点触**应用程序**选项卡，然后选择**语音备忘录**。
- 2 点触  以开始录制。
- 3 点触  以停止录制。
- 4 点触  以收听录音。
- 5 点触  以访问相册。您可以收听保存的录音。

**注意：**可用录制时间以实际时间为准。

## 发送录音


- 1 录音完成后，您可以点触**共享**发送音频剪辑。
- 2 从**蓝牙、电子邮件、Gmail**

和**信息**中选择。当您选择**电子邮件、Gmail** 和**信息**时，录音将被添加到信息中，您可以照常撰写和发送信息。

## 主时区

您可以设置选项**使用主时区**并从列表中选择**主时区**。

此设置用来覆盖移动网络设置的本地时区，以便您选择的时区适用于您的手机的日历和事件。

- 1 在空闲屏幕上，点触主屏键 。
- 2 点触**日历**，然后登录您的帐户。
- 3 在**日历**菜单中，选择**设置**选项。
- 4 点触**使用主时区**并在**主时区**选项中选择所需的时区。

# 实用工具

## 3D Game Converter

借助基于 HRZ 引擎的 3D Game Converter，您可以在 3D 模式下玩流行的 2D 游戏。

您只需按下手机右侧的 3D 热键，便可实时将添加到 3D 游戏转换器列表的游戏转换为 3D。

- 1 点触**应用程序**选项卡，然后选择 **3D Game Converter**。
- 2 点触  并选择所需游戏。
- 3 您可以用 3D 模式播放 3D Game Converter 列表中的游戏。
  - 如果您已注册可定制游戏，则可在 3D 设置中设定质量、3D 深度、深度标尺。
- 1 在游戏列表上点触（所需图标图像）。
- 2 设置后保存设置。

### 备注：

3D Game Converter 仅适用

于基于 2D OpenGL 的游戏。

**注：**3D 转换不需要额外付费。

## 编辑视频

使用视频编辑器可以编辑已经拍摄的视频。

- 1 在主屏上，点触**应用程序**选项卡。
- 2 如果没有运行项目，只有**新建**和**帮助**可用，点触视频编辑器。轻触菜单键。
- 3 点触**新建**，然后选择**添加**以添加要插入的视频、图像或音乐。您可以将文件向下拖到所需位置。

**注：**如果您首先选择 3D 视频，则只能添加具有相同分辨率和音频的 3D 视频。另外，如果选择 2D 视频，则只能添加 2D 视频。

- 4 点触**剪辑**以通过拖动剪辑栏编辑视频长度。您可以使用**细节**视图进行详细控制。

- 5 如果您已完成项目，请点触主屏上的**导出**以生成完成文件。确保在退出主菜单之前先保存所作修改。
- 6 您可以通过蓝牙、**电子邮件**、**Facebook**、**Gmail**、**信息和 Youtube** 与朋友共享已编辑的文件。

# 网络


## 浏览器


浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问—畅行无阻、精彩无限。

**备注：**连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

### <工具栏>


以下屏幕上的图标栏将方便您使用浏览器。

 **返回：**移至上一个网页。

 **前进：**移至下一个网页。


 **窗口：**显示所有打开的窗口。


 **新窗口：**打开新窗口。


 **设置：**移至浏览器设置。


## 使用选项

点触**菜单**键可查看选项。

 **稍后再读：**添加至稍后再读。

 **共享页面：**通过蓝牙、电子邮件、Facebook、Gmail、信息等发送网页。

 **页内查找：**如果输入字母或任何单词，则会标记您从网页中输入的所有字母。

 **选择文本：**点触并选择您要复制的行。长按文本可将之粘贴到任何输入框。

 **添加 RSS 源：**添加您喜爱的网页。当网站上出现新项目时，Google 阅读器会自动通知您。

**备注：**RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

对于无法使用 RSS 源网页，“添加 RSS 源”图标菜单将会禁用。

### 更多

- **主页：**移至主页。
- **设置主页：**将当前页面设置成主页
- **在主页上添加快捷方式：**将当前页面作为快捷方式添加到主屏。
- **页面信息：**显示网页信息。
- **下载：**显示下载历史记录。

# Google 应用程序

- 1 首先设置 Google 帐户。输入用户名和密码。
- 2 登录后，您的 Google 帐户中的联系人、电子邮件和日历将自动与 LG-P920 同步。

## 地图

检查您当前的位置和交通并接收目的地的方向指引。手机必须连接到 Wi-Fi 或 3G/GPRS。

备注：**Google Maps 并不覆盖所有城市和国家/地区。**

## Market

Android Market 允许您下载应用程序和游戏。如果从 Android Market 安装应用程序和游戏，它们将显示在 LG-P920 菜单中。

您可查看其他人对应用程序的评价或者发布自己的评价。

## Gmail

在首次设置手机时对 Gmail 进行配置。根据您的同步设置，手机上的 Gmail 自动与网上的 Google 帐户同步。收件箱对话列表是您的默认 Gmail 视图。

## Talk

Google Talk 是 Google 提供的即时消息程序。通过 Google Talk，您可以与同时也在使用它的其他人交谈。

点触菜单键，选择以下可用选项：全部朋友、添加朋友、搜索、退出、设置等。


## Google Search


Google Mobile Web Search 允许您搜索网站。

# LG SmartWorld

LG SmartWorld 提供了琳琅满目的精彩内容（游戏、应用程序、墙纸和铃声），将让 LG 手机用户有机会体验到更丰富的“移动生活”。

## 如何从手机访问 LG SmartWorld

- 1 轻触  图标可访问 LG SmartWorld。
- 2 轻触“登录”，然后输入您在 LG SmartWorld 的 ID/密码。如果尚未注册，请轻触“注册”以获得 LG SmartWorld 会员资格。
- 3 下载所需的内容。

**备注：**如果没有  图标怎么办？

- 1 使用手机网络浏览器访问 LG SmartWorld ([www.lgworld.com](http://www.lgworld.com))，并选择您所在的国家/地区。
- 2 下载 LG SmartWorld 应用程序。
- 3 执行并安装下载的文件。
- 4 轻触  图标以访问 LG SmartWorld。

## 如何使用 LG SmartWorld

- 参加 LG SmartWorld 每月的促销活动。
- 在“3D 地带”中查找和下载激动人心的 3D 内容。
- 在登录 LG SmartWorld 之后，点触菜单键显示不同的选项
- **类别：**按类别查找内容（如教育、娱乐、游戏）

# LG SmartWorld

等)。

- **我的应用程序：** 列出下载的/将要更新的内容。
- **适合您的应用程序：** 根据您以前的选择所建议的内容。
- **搜索：** 搜索内容。
- **设置：** 更改情景模式、通知、显示设置和检查 LG SmartWorld 更新
- 还可以试用其他有用功能。  
(内容详细资料屏幕)
- **愿望清单：** 保存您感兴趣的内容
- **共享：** 通过电子邮件、Facebook、Twitter 和短信分享内容信息。

**备注：** 在您所在的国家或地区可能无法使用 LG SmartWorld。

# 设置

在主屏上点触**应用程序**选项卡，然后滚动并点触**设置**。

## 无线和网络

在这里，您可以管理 Wi-Fi、蓝牙、绑定、热点、VPN 和屏幕手机。

**飞行模式** - 在设置飞行模式之后，将禁用所有无线连接。

**Wi-Fi** - 点触以选择：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

**Wi-Fi 设置** - 允许您设置和管理无线接入点。设置网络通知，或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。依次点触**菜单键**和**高级**。

**蓝牙** - 点触以选择：打开蓝牙以连接蓝牙设备。

**蓝牙设置** - 设置设备名称和可见模式，扫描其他设备。或者，检查您之前配置的蓝牙设备以及手机上次扫描蓝

牙设备时检测到的那些设备的列表。

**绑定与便携式热点** - 通过 USB 数据线将手机与电脑绑定，以与电脑共享手机的互联网连接；以及将手机切换至 Wi-Fi 接入点，以与其他电脑或设备共享手机的互联网连接。

**VPN 设置** - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

**移动网络设置** - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

**屏幕手机设置** - 允许您更改屏幕手机密码（默认密码为“0000”）。屏幕手机允许您通过 USB 或蓝牙连接从 PC 查看手机屏幕。您也可以使用鼠标或键盘从您的 PC 控制手机。

# 设置

## 声音

### <常规>

**静音模式** - 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。（媒体和闹钟静音必须分别在各自应用程序中操作。）

**通知：**设置静音模式后，**设置 > 声音 > 音量**菜单不可用。

**振动** - 允许您将手机设置为在接到来电时振动。

**音量** - 允许您为铃声、媒体和闹钟设置音量。如果取消选择为通话和通知使用相同音量的选项，则可分别设置各自的音量。

### <来电>

**手机铃声** - 允许您设置默认来电铃声。

### <通知>

**通知铃声** - 允许您设置默认通知铃声。

### <反馈>

**屏幕按键音** - 允许您将手机设置为在使用拨号盘拨号时播放音调。

**操作音选择** - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

**屏幕锁定提示音** - 允许您将手机设置为在锁定和解锁屏幕时播放声音。

**触觉反馈** - 允许您将手机设置为在点触软键和执行其他操作时短时振动。

## 显示

**亮度** - 调整屏幕的亮度。

**自动旋转屏幕** - 允许您将方向设置为在侧翻或竖翻手机时自动切换为风景模式或肖像模式。

**动画** - 允许您将手机设置为在屏幕间导航时显示动画渐变。

**待机时间** - 允许您调整屏幕自动关闭之前的延迟时间。为取得最佳电池性能，请使用最短的便利待机时间。

**显示字体** - 更改显示字体。

### < 3D 设置 >

**警告弹出信息** - 您开始 3D 游戏时将显示一则警告弹出信息，除非您选择复选框**不再为我显示**。

## 笔势

**使用动作笔势** - 调整来电的笔势设置，并用于闹钟。

### <来电>

**静音** - 可让您在手机响铃时将手机翻转实现静音效果。

### <闹钟>

**暂停（停止）** - 可让您通过将手机翻转来暂停（停止）闹钟。

**重置笔势传感器** - 将手机放置在平坦表面上，并校准动作传感器。

## 位置和安全

### <我的位置>

**使用无线网络** - 如果选择使用无线网络，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。

**使用 GPS 卫星** - 如果选择使用 GPS 卫星，您的手机将确定您的位置并精确到街道级别。

### <屏幕解锁>

**设置屏幕锁定** - 设置解锁图案以确保您的手机安全。此时将打开一组屏幕，它们可指导您绘制屏幕解锁图样。您可设置 **PIN** 或**密码**，而不要使用**图案**或保持其值为**无**。

# 设置

## **提示!** 使用图样锁定锁定屏幕

- 1** 第一次这样做时，将显示有关创建解锁图样的简短指南。
- 2** 您会收到提示要求绘制并重新绘制您自己的图样。在您下一次打开手机或唤醒屏幕时，您会收到提示要求绘制解锁图样以解锁屏幕。

## <SIM 卡锁定>

**设置 SIM 卡锁定** - 设置 SIM 卡锁定或更改 SIM PIN。

## <密码>

**可见的密码** - 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

## <设备管理>

**选择设备管理器** - 添加或删除设备管理器。

## <凭据存储>

**使用安全凭据** - 选择此项以允许应用程序访问手机的加密存储安全证书和相关密码及其他凭据。可使用凭据存储建立有些类型的 VPN 和 Wi-Fi 连接。如果未为凭据存储设置密码，则此设置将呈灰色。

**从存储卡安装** - 允许您从 microSD 卡安装加密的证书。

**设置密码** - 允许您为安全凭据存储设置或更改密码。密码最少为 8 个字符。

**清除存储** - 删除所有安全证书及相关凭据，同时擦除安装存储本身的密码。

## **使用多个**

**未知源** - 允许安装您从网站、电子邮件或其他非 Android Market 位置获得的应用程序。



**警告：**手机可能无法正常运行，并可能会被非法用于建立您的位置，并能通过互联网访问个人信息，具体取决于您所安装的应用程序。

为保护您的手机和个人数据，请只从信任的来源（如 Android Market）下载应用程序。

**管理应用程序** - 管理和删除安装的应用程序。

**正在运行的服务** - 可让您查看和控制当前正在运行的服务和应用程序。此选项显示正在运行的各项服务需要的进程及占用的内存大小。

**存储空间使用情况** - 查看应用程序所用的存储空间。

**电量使用情况** - 查看耗电情况。

**开发** - 设置应用程序开发的选项，如 **USB 调试**、**保持清醒**以及**允许模拟位置**。

## 数据同步

### <常规同步设置>

**背景数据** - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

**自动同步** - 允许应用程序根据自己的计划同步、发送和接收数据。

### <社交+ 更新设置>

**社交+ 设置** - 使您可以为手机上的所有社交网络应用程序设置刷新间隔。

### <管理帐户>

所有 Google 帐户及已添加到手机的其他帐户的列表。如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

## 隐私

### <个人数据>

**重置出厂数据** - 擦除手机内部存储中的所有数据，包括

# 设置

关于 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息。重置手机不会删除或恢复您已下载的任何系统软件更新，或是 microSD 卡以及内置 SD 卡上的任何文件（如照片和音乐文件）。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

## SD 卡和手机存储器

### <存储卡>

检查空间总量和可用的空间。点触**取消安装 SD 卡**以将之安全移除。如果要删除 microSD 卡上的所有数据，请**格式化外部 SD 卡**。您必须先取消安装 microSD 卡，然后才能将其格式化。

### <手机内部存储>

检查**可用的空间**。

## 区域和文本

使用**区域和文本**设置为手机上的文本以及屏上键盘配置选择语言和区域（包括已添加到词典中的文字）。

## 语音输入与输出

### <语音输入>

**语音识别程序设置** - 使用**语音识别程序设置**配置 Android 语音输入功能。

- **语言：**打开一个屏幕，在此可以设置您在通过讲话的方式输入文字时使用的语言。
- **SafeSearch：**打开一个对话框，在此，您可以设置是否需要 Google SafeSearch 筛选器屏蔽某些搜索结果。
- **屏蔽攻击性言论：**取消选择时，Google 语音识别将在您以口头方式输入文本时识别和抄写许多人认为具有攻击性的言论。选择时，Google 语音识别将用由井号 (#) 组成的占位符替代

文字记录中的那些字眼。

## <语音输出>

**文字转语音设置** - 您可以使用**文字转语音设置**来配置 Android 文本转语音合成器，通过该应用程序来利用此功能。

**备注：**如果未安装语音合成器数据，则只有**安装语音数据**设置可用。

- **聆听示例：**使用您的当前设置播放语音合成器的简短示例。
- **总是使用我的设置：**勾选以使用该屏幕上的设置替代其他应用程序中提供的语音合成器设置。
- **默认引擎：**如果安装了多个文本至语音应用程序，则会打开一个对话框，在此可以设置您要使用的文本至语音应用程序。
- **安装语音数据：**如果您的手机未安装语音合成器数据，请连接至 Android

Market，系统将引导您完成下载和安装数据的过程。如果数据已经安装，则此设置不可用。

- **语速：**打开一个对话框，在此可以选择您希望合成器发音的速率。
- **语言：**打开一个对话框，在此可以选择您希望合成器读出的语言。该选项在结合**总是使用我的设置**一起使用时尤为有用，这样可以确保文本在不同的应用程序中均可正确发音。
- **Pico TTS：**配置 Pico TTS 设置。

## 辅助功能

使用**辅助功能**可配置您在手机上安装的任何辅助功能插件。

**备注：**需要额外的插件才能使用。

## 日期和时间

使用**日期和时间**设置可设置日期的显示方式。您还可使

# 设置

用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

## 关于本手机

查看法律信息，检查手机状态和软件版本。

## Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问互联网。


您可通过 Wi-Fi 尽情享受无线互联网的便利性，而且无需额外付费。

## 打开 Wi-Fi

从主屏幕中打开“通知抽屉”，并点触 。

或者点触 **应用程序 > 设置 > 无线和网络**，然后打开 **Wi-Fi**。

## 连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才可连接。

### 备注：

- 如果不在 Wi-Fi 区并且选择 3G 连接，则可能产生另外的费用。
- 如果手机进入睡眠模式，当其连接到 Wi-Fi 时，Wi-Fi 连接也将自动被禁用。（这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生另外的费用。）
- LG-P920 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP。安全性。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

## 共享您手机的移动数据连接

您也可以将您的手机转接到便携式 Wi-Fi 热点，将您手机的数据连接同时与多达五个设备进行共享。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

图标	描述
	USB 绑定已激活
	便携式 WLAN 热点已激活
	USB 绑定和便携式热点均已激活。

有关便携式热点的信息，包括支持的操作系统及其他详细信息，请访问 <http://www.android.com/tether>。

**备注：**连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

## 绑定与便携式热点

在主屏上点触**应用程序**选项卡，然后选择**设置**。

点触**无线和网络**，然后选择**便携式热点**。

选择您要调整的选项。

**USB 绑定** - 您可以将手机的 Internet 连接共享给电脑。您可以通过 USB 数据线将手机绑定到电脑。

**便携式 Wi-Fi 热点** - 选择以将您的手机网络数据连接共享为便携式 Wi-Fi 热点。


**帮助** - 打开一个对话框，上面显示有关 USB 绑定和便携式 Wi-Fi 热点以及有关在哪可以了解更多的信息。

## 提示！

您可以同时使用 USB 绑定和便携式 Wi-Fi 热点。

# 设置

## 将手机的数据连接共享为便携式 Wi-Fi 热点

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**便携式热点**。
- 3 选定**便携式 Wi-Fi 热点**。
  - 片刻之后，手机将开始广播其 Wi-Fi 网络名称 (SSID)，这样您将可以通过其另外再连接五台电脑或其他设备。持续的通知  将添加到状态栏和通知抽屉中。
  - 选择**便携式 Wi-Fi 热点**之后，您可以更改其网络名称或确保其安全。
- 4 取消选择**便携式 Wi-Fi 热点**以停止通过 Wi-Fi 共享您的数据连接。

**备注：** 当您首次启用便携式 Wi-Fi 热点时，您需要设置密码以进行安全的数据连接共享。

## 重命名或确保您的便携式热点安全

您可以更改手机 Wi-Fi 网络名称 (SSID) 的名称并确保其 Wi-Fi 网络的安全。

- 1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**便携式热点**。
- 3 确保已选择**便携式 Wi-Fi 热点**。
- 4 点触**便携式 Wi-Fi 热点设置**。
- 5 点触**配置 Wi-Fi 热点**。
  - 将会打开**配置 Wi-Fi 热点**对话框。
  - 您可以更改网络 SSID (名称)，这将是其他电脑在扫描 Wi-Fi 网络时看到的名称。
  - 您也可以点触**安全性**菜单来为网络配置 Wi-Fi 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。

- 如果点触 **WPA2 PSK** 安全性选项，则密码字段将会添加到**配置 Wi-Fi 热点**对话框中。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。您可以在安全性菜单中点触**打开**，以从 Wi-Fi 网络中删除**安全性**。

### 注意！

如果将安全性选项设为**开放**，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用，最好保持安全性选项。

## 6 点触**保存**。

## 如何使用屏幕手机

屏幕手机允许您通过 USB 或蓝牙连接从 PC 查看手机屏幕。您也可以使用鼠标或键盘从您的 PC 控制手机。

## 屏幕手机图标



将手机连接至 PC 或断开连接。



旋转屏幕手机窗口（仅在应用程序支持旋转功能时可用）。



更改屏幕手机首选项。



退出屏幕手机程序。



最小化屏幕手机窗口。

## 屏幕手机功能

- **实时传输和控制**：在连接至 PC 时显示并控制您的手机。
- **鼠标控制**：允许您使用鼠标在 PC 屏幕上单击或拖动来控制您的手机。
- **使用键盘输入文本**：允许您使用电脑键盘撰写短信或便笺。

# 设置

- 文件传输（手机到 PC）：  
从手机发送文件（例如照片、视频、音乐和 Polaris Office 文件）到 PC。只需右键单击并拖动即可将文件发送到 PC。
- 文件传输（PC 到手机）：  
从 PC 发送文件到手机。只需选择您要传输的文件并将其拖放到屏幕手机窗口即可。您发送的文件存储在 microSD 卡上。
- 实时事件通知：以弹出窗口提示的方式通知您有来电或短信/彩信。

**注意：**OSP 不支持 3D 模式的相机预览、视频及内容（3D 游戏和应用程序、3D 指南、YouTube 3D、3D 图片库），因此这些内容无法在 PC 上显示。

## 如果在 PC 上安装屏幕手机

访问 LG 主页 (<http://www.lg.com>) 并转到**支持 > 手机支持 > 将 LG 手机支持工具下载到 PC**。如果下载 LG PC Suite IV，则屏幕手机程序也会下载到 PC 上。随后您便可在 PC 上安装屏幕手机。

**备注：**转到**设置 > SD 卡和手机存储设置**，并确定已取消选择**仅批量储存**复选框。

## 如何将手机连接至 PC

### USB 连接：

- 1 打开连接向导，选择“USB 数据线连接”并单击“下一步”。
- 2 使用 USB 数据将手机连接至 PC，然后单击“下一步”。
- 3 输入屏幕手机密码并单击“下一步”。默认密码为“0000”。您可以在**设**

**置** > **无线和网络** > **屏幕手机设置**中更改密码。

- 4 单击“确定”退出窗口。

### 通过蓝牙无线连接:

- 1 在手机上，转到**设置** > **无线和网络** > **蓝牙设置**。选择**打开蓝牙**并选择**可发现**。
- 2 如果您以前使用数据线进行过连接，则运行“新建连接向导”创建新的连接。
- 3 在电脑上运行连接向导，选择“蓝牙连接”，然后选择“下一步”。
- 4 向导将开始搜索已启用蓝牙的手机。您希望连接的手机出现时，单击“停止”以停止搜索。
- 5 从设备列表中选择“LG-P920”，然后单击“下一步”。如果需要，可以重命名设备。

- 6 在您的手机中接受配对请求并在 PC 是选择“下一步”。


- 7 输入屏幕手机密码并单击“下一步”。（默认密码为“0000”）。

- 8 点触“确定”退出。

### 检查手机与 PC 的连接

设备一旦建立连接，请将主屏上方的通知栏向下拖动以检查屏幕手机连接状态。

### 断开手机与 PC 的连接

单击屏幕手机窗口左上角的 。或者，将主屏上方的通知栏向下拖动，然后选择“屏幕手机”。在“断开连接”窗口中点触“是”。

**备注:** 关闭屏幕手机服务后，必须重新启动手机。

# 设置

## 手机软件更新

### 从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

**备注：**LG 保留根据自行判断决定固件更新仅可用于指定

型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

### 通过空中下载 (OTA) 的 LG 手机软件更新

此功能允许您通过空中下载 (OTA) 方便地将手机的固件更新为最新版本，而无需连接 USB 数据线。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

首先，您可以在手机上检查软件版本：**设置 > 关于手机 > 软件更新 > 现在检查更新。**

**备注：**手机内存中的您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

## 同步手机与电脑

您可以使用 LG PC 套件在电脑和手机间同步 Outlook 电话本和日历。

### 安装 LG PC 套件

请参阅第 16-17 页下载及安装 LG 手机支援软件，并执行以安装 LG PC 套件。

# 版权所有和商标

此设备中包含的所有技术和产品的所有权是其各自所有者的财产：

- Bluetooth® 是 Bluetooth SIG, Inc 的注册商标。
- microSD 和 microSD 徽标是 SD Card Association 的商标。
- Google、Android、Google Search、Google Calendar、Google Maps、Google Latitude、Gmail、YouTube、Google Talk 和 Android Market 是 Google, Inc. 的商标。
- Wi-Fi 是 Wireless Fidelity Alliance, Inc. 的注册商标。
-  包括 Adobe Systems Incorporated 提供的 Adobe® Flash® Player 技术。

- DivX 移动



关于 DivX 视频：DivX® 是由 DivX, Inc. 开发的一种数码视频格式。是经播放 DivX 视频的 DivX Certified® 官方认证的设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 [www.divx.com](http://www.divx.com)。

关于 DIVX VIDEO-ON-DEMAND：要播放 DivX Video-on-Demand (VOD) 内容，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。有关如何完成注册的详细信息，请转到 [vod.divx.com](http://vod.divx.com)。DivX Certified® 可播放最高为 HD 720p 的 DivX® 视频，包括额外付费内容。

DivX®、DivX Certified® 及相关徽标是 DivX, Inc. 的商标，使用必须经过许可。适用于以下一个或多个美国专利：7,295,673；7,460,668；7,515,710；7,519,274

### **注意！** 打开源软件

要获取 GPL、LGPL、MPL 及其他打开的源证书下的相应源代码，请访问 <http://opensource.lge.com/>。可使用源代码下载所有相关许可条款、声明和通知。

- Wi-Fi® 和 Wi-Fi Protected Access® 是 Wi-Fi Alliance 的注册商标。
- DTS 2.0 Channel  由 DTS Licensing Limited 许可生产。DTS 和 Symbol 是注册商标。DTS 2.0 Channel 和 DTS 徽标是 DTS, Inc. 的商标。产品包括软件。© DTS, Inc. 保留所有权利。
- Dolby Digital Plus  由 Dolby Laboratories 许可生产。Dolby 和 double-D 符号是 Dolby Laboratories 的商标。

# 配件

以下配件可与 LG-P920 一起使用。

(以下配件为可选配件。)

## 充电器



## 数据线

连接 LG-P920 和 PC。



## 电池



## 用户手册

了解更多关于 LG-P920 的信息。



## 立体声 耳机



## 备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

# 技术参数

外部环境

最高温度: +55° C (放电), +45° C (充电)

最低温度:

-10° C

## Declaration of Conformity



LG Electronics

### Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P920

Trade Name

LG

CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1

EN 300 328 v1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / AC:2006 / EN 62209-1:2006 / EN 62209-2:2010

EN 301 511 v9.0.2

EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. - EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

3, May, 2011

Signature of representative

# 故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，超出 GSM 网络区域。 运营商应用了新服务	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果超过，请在最近的网络提供商处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。如果忘记代码，请联系您的服务提供商。
应用程序无法设置	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入新 SIM 卡 达到预付费限制	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 使充电器保持连接更长时间。清洁触点。 取出电池并重新插入。

信息	可能原因	可行解决措施
充电错误	<p>电池未充电。 外部温度太热或太冷 触点问题</p>	<p>为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 将充电器插入其它插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。</p>
	<p>无电压 充电器故障 错误充电器。 电池故障。</p>	
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查支持的文件格式
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查存储卡文件系统或使用手机格式化存储卡
我收到来电时，屏幕未打开。	近程传感器问题	如果使用了保护带或保护套，请检查其是否盖住近程传感器周围的区域。 确保近程传感器周围的区域干净。
无声音	振动或静音模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	<p>取出电池并重新插入。打开手机。</p> <p>如果手机锁定而无法使用，请按住电源/锁定键 10 秒以关机。然后，再次按住电源/锁定键 3 秒以重新开机。</p> <p>尝试通过网站执行软件更新服务。</p>





# LG-P920 User Guide - English

This manual contains information on Android Gingerbread Operating System version 2.3. If your phone is using Android Froyo Operating System version 2.2, please refer to page 95 to update your phone.

- Some parts of this manual may not apply to your phone, depending on its software or your service provider.
- This handset is not recommended for the visually-impaired because it has a touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google Search, Maps, Gmail, YouTube, Talk and Market are trademarks of Google, Inc.



# Contents

<b>Guidelines for safe and efficient use</b> .....	<b>5</b>	Calling your contacts.....	38
<b>Important notice</b> .....	<b>12</b>	Answering and rejecting a call....	38
<b>Getting to know your phone</b> .....	<b>22</b>	Adjusting call volume.....	38
Installing the SIM card and battery.....	24	Making a second call.....	38
Charging your phone.....	25	Viewing your call logs.....	39
Formatting the memory card.....	26	Call settings.....	39
<b>Your Home screen</b> .....	<b>28</b>	Contacts.....	41
Touch-screen tips.....	28	Searching for a contact.....	41
Lock your phone.....	30	Adding a new contact.....	41
Unlock screen.....	30	Favorite contacts.....	41
Home.....	30	<b>Messaging/Email</b> .....	<b>43</b>
Adding widgets to your home screen.....	31	Messaging.....	43
Getting back to a recently used application.....	32	Sending a message.....	43
Notification drawer.....	32	Changing your message settings.....	44
Viewing the status bar.....	32	Setting up your email.....	44
On-screen keyboard.....	34	Microsoft Exchange email account.....	44
<b>Google Account Set-up</b> .....	<b>35</b>	Other (POP3, IMAP) email account.....	45
Creating your Google account.....	35	Composing and sending email....	46
Signing in to your Google account.....	35	Working with account folders.....	47
<b>Calls/Contacts</b> .....	<b>37</b>	Adding and editing email accounts.....	47
Making a voice call.....	37	<b>Social networking</b> .....	<b>49</b>
Making a video call.....	37	Adding your account to your phone.....	49
In Video call Menu.....	37	Viewing and updating your status.....	49

Removing accounts from your phone.....	50
Facebook and Twitter .....	50
<b>Photos and videos.....</b>	<b>51</b>
Getting to know the viewfinder (Camera).....	51
Taking a quick photo .....	52
Once you've taken the photo .....	52
Using the advanced settings (Camera).....	53
Viewing your saved photos .....	54
Getting to know the viewfinder (Video camera).....	55
Shooting a quick video .....	56
After shooting a video.....	56
Using advanced settings (Video camera).....	56
Watching your saved videos .....	57
Adjusting the volume when viewing a video .....	58
3D photos and videos.....	58
Shooting a quick 3D video .....	60
<b>3D Space.....</b>	<b>61</b>
YouTube 3D .....	61
3D Gallery.....	61
3D Camera .....	61
3D Games & Apps.....	61
3D Guide .....	61

<b>Multimedia .....</b>	<b>62</b>
Gallery.....	62
Music .....	62
Playing a song .....	63
Using SmartShare .....	64
Transferring files using USB mass storage devices.....	66
How to save music/video files to your phone.....	67
How to move contacts from your old phone to your current phone .....	67
How to send data from your phone via Bluetooth.....	68
HDMI.....	69
<b>Utilities .....</b>	<b>71</b>
Setting your alarm.....	71
Using your calculator.....	71
Adding an event to your calendar.....	71
Recording a sound or voice .....	72
Sending the voice recording .....	72
Home Time Zone.....	72
3D Game Converter .....	73
Editing videos.....	73
<b>The Web.....</b>	<b>75</b>
Browser.....	75
Using options.....	75
<b>Google applications.....</b>	<b>77</b>
Maps.....	77

# Contents

Market.....	77	Tethering & portable hotspot.....	89
Gmail.....	77	To share your phone's data	
Talk.....	77	connection as a portable Wi-Fi	
Google Search.....	77	hotspot.....	90
<b>LG SmartWorld.....</b>	<b>78</b>	To rename or secure your	
How to Get to LG SmartWorld		portable hotspot.....	91
from Your Phone.....	78	How to use On-Screen Phone.....	92
How to use LG SmartWorld.....	78	On-Screen Phone icons.....	92
<b>Settings.....</b>	<b>80</b>	On-Screen Phone features.....	92
Wireless & Networks.....	80	How to install On-Screen Phone	
Sound.....	81	on your PC.....	93
Display.....	82	How to connect your mobile	
Gesture.....	82	phone to your PC.....	93
Location & security.....	83	To check the phone-to-PC	
Applications.....	84	connection.....	94
Accounts & sync.....	85	To disconnect your phone from	
Privacy.....	85	your PC.....	95
SD card & phone storage.....	86	Phone Software update.....	95
Language & keyboard.....	86	Sync your phone with your	
Voice input & output.....	86	computer.....	96
Accessibility.....	88	<b>Copyrights and trademarks.....</b>	<b>98</b>
Date & time.....	88	<b>Accessories.....</b>	<b>100</b>
About the phone.....	88	<b>Technical data.....</b>	<b>101</b>
Wi-Fi.....	88	<b>Troubleshooting.....</b>	<b>102</b>
Turn on Wi-Fi.....	88		
To connect to Wi-Fi.....	88		
Sharing your phone's mobile			
data connection.....	89		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P920 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.368 W/kg (10 g) and when worn on the body is 0.562 W/kg(10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

# Guidelines for safe and efficient use

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

### **WARNING**

Only use LG batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to do so by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It

- may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
  - Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
  - Do not charge the phone when it is on soft furnishings.
  - The phone should be charged in a well ventilated area.
  - Do not subject this unit to excessive smoke or dust.
  - Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
  - Do not tap the screen with a sharp object as it may damage the phone.
  - Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
  - Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
  - Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone

# Guidelines for safe and efficient use

near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped

with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if

the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It contains small parts which may cause a choking hazard if detached.

# Guidelines for safe and efficient use

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it

no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places as this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

## 3D Content Viewing Precautions

### 1. When viewing 3D content:

- The vision of young children may still be developing. 3D contents should not be viewed by children under the age of 5.
- Some viewers may experience symptoms of discomfort such as nausea, eye strain, fatigue and dizziness when viewing 3D content. All viewers should take regular breaks to help avoid these symptoms. Each person is different, so determine the frequency and length of

breaks that works for you. If you experience any symptoms of discomfort, discontinue viewing and take a break until the symptoms go away. If symptoms continue even after you stop viewing and take a break, consult a doctor.

- Follow the guidelines provided with your mobile device regarding viewing distances and angles. Watching 3D content within the recommended viewing range may lessen the likelihood that you could experience any discomfort.
- ### 2. A responsible adult should supervise the viewing of 3D content by children to make sure they follow recommended use.


## Important notice

Please check this section to see if any problems you have had with your phone are described, before taking the phone in for servicing or calling a service representative.

### 1. Phone memory

When the available space in your phone memory is less than 10%, your phone can't receive new messages. You will need to delete some data from your phone memory, such as applications or messages, to provide more memory space.

#### To manage the application:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > Applications > Manage applications**.
- 2 When all applications appear, scroll down to the application you want to uninstall and select it.
- 3 Tap **Uninstall** and touch OK to uninstall the selected application.

#### **WARNING**

If you delete your data stored on the internal SD card of your phone, you cannot restore it using the Factory data reset option (Settings > Privacy > Factory data reset).

### 2. Optimising battery life


You can extend your battery's life by turning off features that you don't need that run in the background. You can also monitor how applications and system resources use battery power.

#### To extend the life of your battery:


- Turn off radio communications that aren't in use. Turn off Wi-Fi, Bluetooth or GPS when not in use.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.

- Some applications you have downloaded may reduce your battery's life.

### To check the battery charge level:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > About phone > Status**.
- 2 The battery status (charging, discharging) and level (as a percentage of a full charge) are displayed at the top of the screen.

### To monitor and control battery use:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > About phone > Battery use**.
- 2 The top of the screen displays the battery usage time. This is either how long since your phone was last connected to a power source or, if connected to a power source, how long since your phone last ran on battery

power. The body of the screen lists the applications or services using battery power, from highest consumption to least.

### 3. Installing an open source OS

If you install an open source OS on your phone and do not use the OS provided by the manufacturer, your phone may malfunction.

#### **WARNING**


If you install and use an OS other than the one provided by the manufacturer, your phone will not be covered by the warranty.

## Important notice

### **WARNING**

To protect your phone and personal data, only download applications from trusted sources such as Android Market. If some applications are incorrectly installed on your phone, your phone may not work properly, or serious errors may occur. You will need to remove these applications and all their data and settings from the phone.

## 4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can draw your own unlock pattern by connecting four or more dots. If you set a pattern, the phone screen will lock. To unlock the phone, enter the pattern you have set on the screen. On the home screen, touch **Applications** tab  and select **Settings > Location & security > Set up screen lock > Pattern**. Follow the screens to be

guided through drawing a screen unlock pattern. Select Next to continue to next screen.

**Caution:** Create a Gmail account first, before setting an unlock pattern.

### **WARNING**

#### **Precautions to take when using Pattern Lock**

It is essential that you remember the unlock pattern you set. You have five chances to enter your unlock pattern, PIN or password. Once you have used all five chances, you can try again 30 seconds later.

### **When you can't recall your unlock Pattern, PIN, or Password:**

- 1 If you have forgotten pattern:** If you've created a Google account on the phone, tap the **Forgot pattern** button. Then, you are required to sign in with your Google account to unlock your phone. If you haven't created a

Google account on the phone or you forgot it, you need to perform a Hard reset.

## 2 If you have forgotten PIN or Password.

If you forgot your PIN or Password, you need to do Hard reset.

## 5. Using hard reset

If it does not restore to the original condition, use Hard Reset to initialise your phone.

When the phone is turned off, Press and hold 3D key + Volume down key + Power key for over ten seconds.

When screen shows LG logo, release power key.

After screen shows hard reset screen, release other keys.

Choose Yes using Volume down key and press 3D key to select. Leave your phone over a minute while it performs hard reset, then select **reboot system now**.


**Caution:** If you perform a Hard reset, all user applications and user data are deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

## 6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone you need to access a wireless access point or “hotspot.” Some access points are open, and you can simply connect to them. Others are hidden or have other security features, so you must configure your phone to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

### To turn Wi-Fi on and connect to a Wi-Fi network:

- 1 On the home screen, touch the **Applications** tab  and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and

## Important notice

start scanning for available Wi-Fi networks.


- A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3** Touch a network to connect to it.
- If the network is open, you are prompted to confirm you want to connect to that network by touching **Connect**.
- If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details.)
- 4** The status bar displays icons indicating Wi-Fi status.

## 7. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open a further application. You do not need to quit an application before opening another one. Use and switch

between several open applications. Android manages each application, stopping and starting it as needed, to ensure idle applications don't consume resources unnecessarily.

### To stop using an application:

- 1** On the home screen, touch the **Applications** tab  and select **Settings > Applications > Manage applications**.
- 2** Scroll to the chosen application and touch **Force Stop** to close it.

### TIP!

#### Going back to a recent Application

Touch and hold the **Home** key. A screen will appear listing the applications you have used recently.

## 8. Installing the LG PC suite on your PC

To synchronise your phone with your PC via a USB cable, you need to install the LG PC suite program on your PC.

You can download this program at the LG web site. Browse to <http://www.lg.com> site to get the installer on your phone and user information. You may refer to the pictures below and follow the instructions to download the software for your phone and complete the installation.

### LG PC SUITE

The LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable, so that you can use your mobile phone's functions on your PC.

#### Major LG PC Suite IV functions

- Create, edit and delete phone data easily.
- Synchronise data from a PC or phone (contacts, calendar, messages (SMS)).
- Transfer multimedia files (photo, video and music) easily with a simple drag & drop between your PC and phone.
- Transfer messages from your phone to your PC.

## Important notice

- Software update without losing your data


**The LG-P920 does not support:**

- PC Suite connection via Bluetooth
- Internet Kit in PC Suite
- To-do in Calendar
- Java Applications


For more information, please refer to the LG PC Suite IV user guide. This can be found in the Help menu after installing LG PC Suite IV.

## Download LG Mobil Support Tool

1) Go to [www.lg.com](http://www.lg.com) , Support , Mobile Phone Support

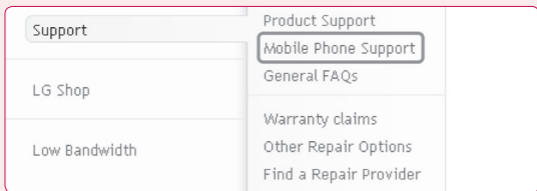

2) Download and Install LG Mobile Support Tool

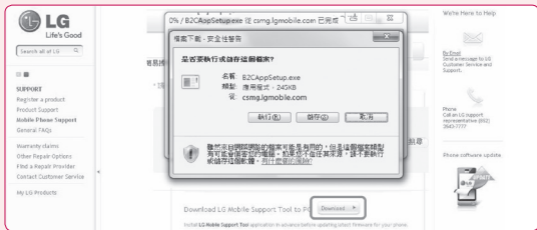


3) After download software and run LG PCSuite IV file and follow the instructions to complete the installation.

\* When LG PCSuite IV installation is completed, disable Mass storage mode to run the LG PCSuite IV.

## Important notice

### 9. Connecting your phone to a computer via USB

#### To transfer files in your microSD card using USB devices:

- 1 Install your microSD card on your phone. (It may already be inserted in your phone.)
- 2 Before connecting the USB data cable, make sure the **Mass storage** mode is enabled on your phone. (On the **Applications** tab , choose **Settings > SD card & phone storage > Mass storage only**)
- 3 Use the USB cable with your phone to connect it to a USB port on your computer. Touch **Turn on USB storage**. You will get a notification that the USB is connected.

When the phone is connected as USB storage, you will receive a notification. Your phone's microSD card is installed as a drive on your

computer. You can now copy files to and from the microSD card.

**NOTE:** When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. They must therefore be removed manually.

**TIP!** To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**. During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card such as camera, gallery and music functions. To disconnect your phone from the computer, carefully follow the computer's instructions about how to disconnect USB devices, to avoid losing information on the card.

- 1 Safely disconnect the USB device from your computer.
- 2 Open the notification drawer and touch **Turn off USB storage**.
- 3 Touch **Turn off** in the dialogue

box that opens.



### **WARNING**

Do not insert or remove the microSD card when the phone is on. This might damage the microSD card as well as your phone, and the data stored on the microSD card could be corrupted. To remove the microSD card safely, from the Home screen press the **Menu** key and touch **Settings > SD card & phone storage > Unmount SD card.**

## **10. Unlock screen when using a data connection**

The LCD display will go dark if untouched for a set time when using a data connection. Touch it to turn it on again.

## **11. Do not connect your phone when you turn your PC on and off**

Make sure you disconnect your phone and PC via a data cable to

avoid any harm to your PC.

## **12. Hold your phone upright**

Please hold your phone straight and level, like a normal phone. The LG-P920 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this will impair performance. While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. This may affect call quality.

## **13. If the screen freezes**

If the phone does not respond to user input, or the screen freezes: Remove the battery, reinsert it and switch on the phone. If it still does not work, please contact the service centre.

# Getting to know your phone

To turn on the phone, hold down the **Power** key for 3 seconds.

To turn off the phone, hold down the **Power** key for 3 seconds, touch Power off and touch OK.

**Earpiece**

**Proximity Sensor**

**Home key**

- Return to home from any screen.

**Menu key**

- Check available options.

**Power/Lock key**

- Switch your phone on/off by holding this key down.  
- Lock and unlock the screen.


**Inner camera lens**

**Back key**

- Return to the previous screen.

**Search key**

- Search the web and contents in your phone.

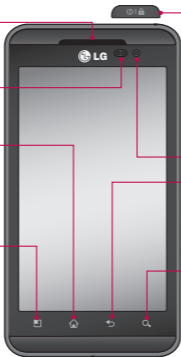

**⚠ WARNING:** Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This could cause the sensor to malfunction.

**TIP!** Touch the Menu key whenever you tap an application to see what options are available.

**TIP!** If the LG-P920 displays an error message when you use it, or if you cannot turn it on, remove the battery, put it back in, then turn it on again after 5 seconds.

**Stereo earphone connector**

**Power/Lock key**



**Volume keys**

- On the home screen: control ringer volume.
- During a call: control your earpiece volume.
- When playing music: control volume at any time.

**Charger, micro USB cable connector**

**HDMI**

**3D key**

- Access 3D Space directly by holding this key down.
- In Camera mode: take a photo by pressing this key.



**Back cover**

**Battery**

**SIM card slot**

**microSD memory card slot**

**Camera lens**




# Getting to know your phone


## Installing the SIM card and battery

Before you can start using your new phone, it has to be set up. To insert the SIM card and battery:

- 1 To remove the back cover, hold the phone firmly in one hand. With the other hand, firmly press down on the centre of the battery cover, while pulling the top away with your forefinger. Then lift off the battery cover.

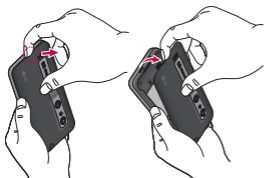

- 2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

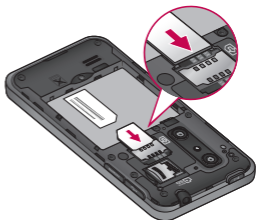


- 3 Insert the battery in place by aligning the gold contacts on the phone and the battery.



- 4 Replace the phone's back cover.



## Charging your phone

The charger connector is on the top left side of your LG-P920. Insert the charger and plug it into an electrical socket. Your LG-P920 must be charged until you can see .




**NOTE:** The battery must be fully charged on first use to extend battery lifetime.

**NOTE:** The battery must be fully charged on first use to extend battery lifetime.


To insert a memory card:

- 1 Remove the back cover.

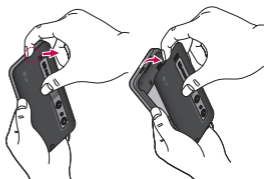

# Getting to know your phone


- 2 Insert the memory card into the slot. Make sure the gold contact area on the card is facing downwards.

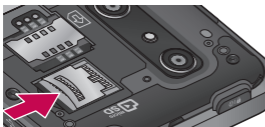

## Formatting the memory card

Your memory card may already be formatted. If not, you must format it before you can use it.

**NOTE:** All files on your memory card are deleted when it is formatted.

- 1 On your home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch Settings.
- 3 Scroll and touch SD card & phone storage.
- 4 Touch Unmount SD Card and touch OK to confirm it.
- 5 Touch Format SD card > Format SD card > Erase everything .
- 6 If you set a pattern lock, enter it and select **Erase Everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting, as all files will have been deleted.

**TIP!** If your memory card is already unmounted, you can use the following steps to format it.

Touch **Applications** tab  > **Settings** > **SD card & phone storage** > **Format SD Card**.



**WARNING** Do not insert or remove the memory card while the phone is on. Otherwise it may damage the memory card and your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, select **Applications** > **Settings** > **SD card&phone storage** > **Unmount SD card**.

# Your Home screen

## Touch-screen tips

Here are some tips on navigating around your phone.

**Touch** - To choose a menu/option or open an application, touch it.




**Touch and hold** - To open an options menu or grab an object you want to move, touch and hold it.



**Drag** - To scroll through a list, or move slowly, drag across the touch screen.




**Flick** - To scroll through a list, or move quickly, flick across the touch screen (drag quickly and release).

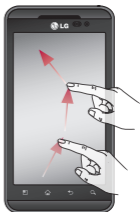

### **Pinch and stretch -**

To zoom out content or image, pinch on the screen by placing two fingers and bring them together. To zoom in, stretch content or image by moving the fingers away from each other.



### **NOTE:**

- To select an item, touch the centre of the icon.
- Do not to press too hard: the touch screen is sensitive enough to pick up a light, steady touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

# Your Home screen

## Lock your phone

When you are not using your LG-P920, press the **Power** key to lock it. This helps avoid accidental touches on the screen and saves battery power.

If you do not use the phone for a while, whatever screen you are viewing will be replaced by the lock screen to conserve the battery.

**NOTE:** If there are any programmes running when you set the pattern, they may keep running in lock mode. We recommend you to exit all programmes before entering lock mode to avoid unnecessary charges and to avoid battery consumption also (e.g. for phone calls, web access or data communications).

## Unlock screen

To wake up your phone, press the **Power** key. The lock screen will appear. Touch and slide up the lock screen to unlock your home

screen. The last screen you viewed will open.

## Home

Simply move your finger left or right to view them.

You can also customise each panel with widgets, shortcuts to your favourite applications, folders and wallpaper.

**NOTE:** Some screen images may vary depending on your phone provider.

On your home screen, you can view quick keys on the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use most.



Touch the **Phone** icon to bring up the touch-dialling pad to make a call.




Touch the **Contacts** icon to open your contacts.



Touch the **Messaging** icon to access the messaging menu. You

can create a new message here.

 Touch the **Applications** tab at the bottom of the screen. You can then view all the installed applications. Just touch to scroll through your applications.

To open any application, simply touch the icon in the applications list.

**NOTE:** Pre-loaded applications may vary depending on your phone's software or your service provider.

## Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets or folders to it. For more convenience when using your phone, put your favourite widgets on the home screen.

### To add an icon to your home screen:

- 1 On the home screen, touch the **Menu** key  and select **Add**. Or long touch the empty part of



the home screen.

- 2 In the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
- 4 A new folder's icon will appear on the home screen. Long press on it and drag it to the desired location on the right panel and take your finger off the screen.

**TIP!** To add an application icon to the home screen from the **Applications** menu, touch and hold the application you want to add.


# Your Home screen

## To remove an application icon from the home screen:

- 1 Touch and hold the icon you want to remove. The bin icon  will appear.
- 2 Drag and drop the application icon to the bin icon .


**NOTE:** You cannot delete pre-loaded applications. (You can only remove their icons from the screen.)

## Getting back to a recently used application


- 1 Touch and hold the **Home** key . The screen will give a pop up with icons for applications you have used recently.
- 2 Touch an icon to open its application. Or touch the **Back** key to go back to your current application.

## Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

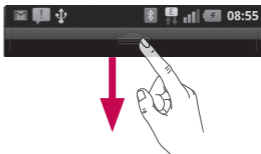

Alternatively, on the home screen touch the **Menu** key  and select **Notifications**. Here you can check and manage Ring, Wi-Fi, Bluetooth, GPS and Data Connection status, as well as other notifications.

## Viewing the status bar






The status bar uses different icons to display phone information, such as signal strength, new messages, battery life and active Bluetooth and data connections.

















The table below explains the meaning of the icons you are likely to see in the status bar.

13/05/2011


 17:29

**[Status bar]**

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call on hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	On-Screen Phone connected
	3 more notifications not displayed
	Data is synchronising
	Download finished
	New email

## Your Home screen


Icon	Description
	New Gmail
	New Google Talk message
	New message
	Song is playing
	Upcoming event
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active
	GPS On


### On-screen keyboard


You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the

keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double-tap for all capitals.

 Tap to switch to the numbers and symbols keyboard. You can also hold this tab down to view the settings menu.

 Tap to view or long tap to change the writing language.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the on-screen keyboard.

# Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

## Creating your Google account

- 1 On the home screen, touch the **Applications** tab  to open the applications menu.
- 2 Tap **Gmail** and tap **Next > Create** to start the Gmail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When entering text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you have entered your name and username, tap **Next**. Your phone will communicate with Google servers and check username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

## Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign in**. Wait to sign in.
- 2 After sign in, you can use Gmail and Google services on your phone.
- 3 Once you have set up your Google account on your phone, it will automatically be synchronised with your Google account on the web. (This depends on your synchronisation settings.)

# Google Account Set-up

After sign in, you can use Gmail, Google Calendar and Android Market, download applications from Android Market and use other Google services on your phone.

## **IMPORTANT!**





- Some applications, such as Calendar, Talk etc only work with the first Google account you add. If you plan to use more than one Google account with your phone, be sure to sign into the one you want to use with these applications first. Once you login to Google account, no option to sign out from the first google account and removal of first Google account ,but you can add/remove more Google accounts . When you sign in, your contacts, Gmail messages, calendar events and other information from these applications and services on the web are synchronised with your phone. The first time you open the


Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

- If you have an enterprise account through your company or another organisation, your IT department may have special instructions on how to sign into that account.

# Calls/Contacts



## Making a voice call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad.  
To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch the **End** icon .

**TIP!** To enter “+” to make international calls, hold down .

**TIP!** To bring up the keypad during a call, touch **Dialpad**.

## Making a video call

- 1 Touch  to open the keypad.
- 2 Enter the phone number as before.
- 3 Touch the **Video call** icon  to make a video call.


- 4 If you do not want to use the speaker phone, touch **Speaker** and make sure you have your headset plugged in.
- 5 While the video call is connecting, you will see your own image: after the other party answers, you will see their image on the screen. Adjust the inner camera position if necessary.
- 6 To end a video call, touch **End**.  
**Private:** You can change the image instead of showing the live image .  
**Dialpad:** Type in a number.  
**Hold:** Mute the microphone and pause the video.  
**Mute:** Mute the microphone.  
**Speaker:** Speaker on or off.

## In Video call Menu


- Capture** - You can capture an image of the other party or your own.
- Use back/front camera** - Switch cameras.

# Calls/Contacts

## Calling your contacts

- 1 Touch  to open your list of contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call, by touching **Search**.
- 3 In the list, touch the contact you want to call.

## Answering and rejecting a call

**TIP!** If you forgot to put the phone in silent mode then Tap on **Applications** tab  > **Settings** > **Gesture** > **Use motion gestures** > **Incoming call** > tick **Mute** and during Incoming Call tilt down the phone to mute the ringtone .


### When screen is locked:

When your phone rings, drag Answer icon  to the right. Drag

Reject icon  to the left reject an incoming call.

### When screen is unlocked:

When your phone rings, touch the Answer  icon

Touch the Decline icon  to Decline/Reject an incoming call.



### TIP! Excuse messages

When you want to Reject a call, you can send a message quickly by using Excuse msg function. This is useful if you need to reply to a message during a meeting.




## Adjusting call volume

To adjust the in-call volume during a call, use the volume up & down key on the right side of the phone.

## Making a second call

- 1 During your first call, touch **Dialpad**  and dial the number. Also, you can search your contacts by touching **Contacts**  then scroll through the

contact list or enter the first letter(s) of the contact you want to call by touching Search.

- 2 Touch the **Call** icon  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 4 Touch the hold list to toggle between calls.  
**NOTE:** You can touch **Merge calls**  to make a conference call.
- 5 To end active calls, touch the **End icon** .

## Viewing your call logs

On the home screen, touch  and choose the **Call log** tab.


View a complete list of all dialed, received and missed calls.

**TIP!** Touch any single call log entry to view the date, time and duration of the call.

**TIP!** Touch the **Menu** key, then touch **Delete All** to delete all recorded items.

## Call settings

You can configure phone call settings, such as call forwarding and other special features offered by your carrier.

- 1 On your home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll down and touch **Settings**.
- 3 Tap **Call settings** and choose the options you want to adjust.

### < Fixed Dialing Numbers >

Select Fixed Dialing Numbers to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, available from your operator. Only numbers on the fixed dial list can be called from your phone.

# Calls/Contacts

## < Voicemail >

**Voicemail service** – Allows you to select your carrier's voicemail service.

**Voicemail settings** – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

## < Other call settings >

**Call reject** – Set to ON to reject calls on list or all calls. If you make a Call reject list, touch **Call reject list** > **Menu key** > **New reject entry**. Then create New reject entry from Contacts, Call logs or New number.

**Call forwarding** – You can forward your Voice Calls /Video Calls to other numbers . Choose whether to forward calls Always , Forward calls when Busy, Unanswered and Unreachable.

**Additional settings** – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on another call. (This depends on your network provider.)

**Call barring** – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

**Call costs** – View the charges applied to your calls. (This service is network dependent: some operators do not support this function.)

**Call duration** – View the duration of all calls, dialled calls, received calls and the last call.


**Excuse messages** – When you reject a call, you can send a message quickly using this function. This is useful if you need to reply to a message during a meeting.

**Video call settings** – Change your video call settings.




## Contacts


You can add contacts on your phone and synchronise them your Google account contacts or those in other accounts that support contact synchronisation.

### Searching for a contact

- 1 On the home screen, touch  to open your contact list.
- 2 Touch **Search** and enter the contact name using the keypad.

### Adding a new contact


- 1 On the home screen, touch , and enter the new contact's number, then touch the **Menu** key , and touch **Add to contacts**. Then choose whether to **Create new contact** or **Add to the existing**.
- 2 If you want to add a picture to the new contact, touch .

- 3 Choose between **Capture picture** or **Pick from gallery**.
- 4 Select the **Ringtone** by touching .
- 5 Touch a text field to open the touch keyboard and enter a new contact's name.
- 6 Enter your contact's details .
- 7 Touch **Save** to save the contact.

### Favorite contacts


You can assign frequently-called contacts as favorites.

#### To add a contact to your favorites:

- 1 On the home screen, touch  to open your contact list.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star will turn gold.

## Calls/Contacts

### To remove a contact from your Favorites list:


- 1 On the home screen, touch  to open your contact list.
- 2 Touch the **Groups** tab and select **Favorites**. Touch a contact to view their details.
- 3 Touch the gold star to the right of the contact's name. The star will turn grey and the contact will be removed from favorites.

# Messaging/Email

## Messaging


Your LG-P920 combines SMS and MMS into one intuitive, easy-to-use menu.

### Sending a message

- 1 Touch the  icon on the home screen, and touch New message to open a blank message.
- 2 Enter a contact name or number in the To field. As you enter the contact name, matching contacts will appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE:** You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** below to start entering your message.
- 4 Touch **Send** to send your message.

**TIP!** You can touch the  icon to attach the file you want to send with your message.

- 5 The message screen opens, with your message after Recipient Name/Number. Responses will appear on the screen. As you view and send additional messages, a message thread will be created.

#### **WARNING**

The 160-character limit may vary from country to country, depending on language and how the SMS is coded.

#### **WARNING**

If an image, video or audio file is added to an SMS message, it will be automatically converted into an MMS message and you will be charged accordingly.

# Messaging/Email


**NOTE:** If you get an SMS message during a call, there will be a beep sound notification.

## Changing your message settings

Your LG-P920 message settings are pre-defined, so you can send messages immediately. You can change these settings based on your preferences.

Touch the **Messaging** icon on the home screen and touch the **Menu** key, then tap **Settings**.

## Setting up your email

Touch the **Applications** tab  and select **Email**. If the email account is not set up, you need to start the email set up wizard.

**TIP!** If an email account is already set up, the wizard is not activated automatically.

You can select mailbox type , **MS Exchange** or **Others**.

## Microsoft Exchange email account

**Email address** – Enter the account email address.

**User name** – Enter the account username.

**Password** – Enter the account password.

**Domain** – Enter the account domain (optional)

**Server address** – Enter the server address

**Use SSL** – Choose whether or not to use SSL for Microsoft Exchange.

Touch the Next button to connect the server.

Setup complete page will appear: you will need to enter “name” for account display and My name.

The account will now appear in the list of accounts in your Email folder.

## Other (POP3, IMAP) email account

**Email address** – Enter the account email address.

**Password** – Enter the account password.

Setup complete page will appear and you will need to enter “name”.

The account will now appear in the list of accounts in your Email folder.

**POP3 / IMAP4** – Select protocol type, either POP3 or IMAP4.

**Incoming server** – Enter the incoming email server address.

**Secure type** – TLS/SSL/Off.

**Port number** – Normally each account’s default number will be displayed.

**Outgoing server** – Enter the outgoing email server address.

**SMTP Secure type** – TLS/SSL/Off.

**Port number** – Normally each account’s default number will be displayed.

## The Accounts screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

- Touch the **Applications** tab  and select **Email**. The **Account list** screen appears.


**TIP!** In account lists, long tap on an email account and touch Add to homescreen option to display the account icon on the home screen. Touch the icon to go to straight to the inbox.

You can touch an account to view its Inbox. The default account from which you send email is indicated with a tick.

### To open your Combined Inbox:

If you have configured email to send and receive email from more than one account, you can view all messages sent to all accounts in your **Combined Inbox**.

# Messaging/Email

- 1 Touch the **Applications** tab  and select **Email**.
- 2 Touch **Combined Inbox** (on the **Accounts** screen). Messages in the **Combined Inbox** are colour-coded on the left, by account, using the same colours used for your accounts in the **Accounts** screen.


## Composing and sending email

### To compose and send a message:

- 1 In the **Email** application, touch the **Menu** key, then touch **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts. Separate multiple addresses with commas.
- 3 Touch the **Menu** key and then touch **Add Cc/Bcc** to copy or blind copy to other contacts/email

addresses.

- 4 Enter the text of the message.
- 5 Touch **Attach** to attach the file you want to share with your message.
- 6 Touch **Send**.

If you're not ready to send the message, touch the **Menu** key and then touch **Save as draft** to save it in a **Drafts** folder. Touch a message in a Drafts folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key  and tap on **Yes** in **Save as draft** pop up before sending it. If you aren't connected to a network, for example if you're working in airplane mode, the messages you send are stored in your **Outbox** folder until you're connected to a network. If it contains any pending messages, the **Outbox** will be displayed on the **Accounts** screen.

Please note that messages sent using an Exchange account will not be located on the phone, they will be stored on the Exchange server itself. If you want to see your sent messages in the **Sent** folder, then touch **Menu** key and touch on **Folders** then touch on **Sent** folder and select **Refresh** from the **Menu** options.


**TIP!** When a new email arrives in the inbox, there will be sound and vibration notification.

## Working with account folders

Each account has **Inbox**, **Outbox**, **Sent**, **Drafts**, **Trash** and **Junk folders**. Depending on the features your account service provider supports, you may have additional folders.

## Adding and editing email accounts

**To add an email account:**

- 1 Touch the **Applications** tab  and select **Email**.
- 2 Select **MS Exchange** or **Other**. If an email account is already set up, the wizard is not activated automatically. In this case, you need to touch the **Menu** key then tap **Add account**.

**To change account settings:**

- 1 Open the **Accounts** screen.
- 2 Touch the **Menu** key > **More** and then select **Settings**.

**To delete an email account:**

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens and touch **Remove** in the dialogue box to confirm.

# Messaging/Email

## TIP!

### What's New

Shows notifications for a Missed call, an Unread message, Voice mail, Email in priority order. Notifications over a certain period of time are shown.

- 1 Choose **Applications > What's New.**
- 2 By tapping the  button, you can choose between list view or category view.



## Social networking

You can use your phone for social networking and to manage your micro-blog in on-line communities. You can update your current status, upload photos and view your friend's status updates.

If you don't have an account, you can visit the website to set one up.

**NOTE:** Additional costs may be incurred when connecting to and using online services. Check data charges with your network provider.

### Adding your account to your phone

- 1 Touch and hold the home screen. When various Widgets appear, choose **Social+**  and tap the  **Setting button**. You can also access in a different way. On the home screen, choose **Applications > Settings > Accounts & sync > Social+ settings**.
- 2 Choose the social networking

client application you want to use from Facebook for LG, Twitter for LG and MySpace for LG.

- 3 Enter your community email address and password, then tap **Log in**.
- 4 Wait while your details are confirmed with your community.
- 5 If you tap your community, you can see the its current status.

### Viewing and updating your status

- 1 You can view and update social community content using the **Social+**  widget at any time.
- 2 On the **Social+**  widget, choose the Social Networking service which you want to log in. You will then see your status and contents.
- 3 When you touch the input box, the screen will switch to update your current status with comments or upload photos.

# Social networking

**TIP!** You can update your status and upload photos simultaneously to Facebook for LG, Twitter for LG and MySpace for LG by selecting the checkbox.

**NOTE:** This depends on network services.

**TIP!** You can synchronise your friend contact to your contact list.

## Removing accounts from your phone

- 1 Choose **Applications > Settings > Accounts & sync**.
- 2 Choose the account you want to delete, then touch **Remove account**.

## Facebook and Twitter

- 1 On the home screen, touch the **Applications** tab  to open the applications menu.
- 2 Choose any social networking client application you want to use among Facebook and Twitter
- 3 Enter your email address and the password that you set up on your community, then tap Log in.
- 4 Wait while your details are checked with your community.
- 5 If you tap your community, you can see the current status of your social community.

# Photos and videos

## Getting to know the viewfinder (Camera)

**Zoom** - Zoom in or out. Alternatively, you can use the side volume keys.

**Switch camera** - You can move to the internal camera from the external one.



**Transition between 2D - 3D modes** - Touch to switch photo shoot mode between 2D and 3D.

**Taking a photo**

**Video mode** - Slide this  icon to the right to switch to video mode.

**Gallery** - Touch the last photo you took to view. This enables you to access your gallery and view saved photos within camera mode.

**Settings** - Touch this icon to open the settings menu. See Using the advanced settings.


**Flash** - Allows you to turn on the flash when taking a photo in a dark place.

**Brightness** - This defines and controls the amount of light entering the image. Slide the brightness indicator along the bar towards “-” to decrease the image brightness and towards “+” to increase it.

**TIP!** You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To restore the options, touch the screen again.

# Photos and videos

## Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone horizontally, point the lens towards the subject which you want to photograph.
- 3 Touch the capture icon .
- 4 When the image is focused, the focus indicators turn green and the image will be captured.

**Notice:** A shading issue may occur when you take a picture indoors, due to the characteristics of the camera. (Shading means a colour difference between centre and sides.)

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share it via **Bluetooth, Facebook, Social+, Twitter, Picasa, Messaging, Gmail** or **Email**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.


**TIP!** If you have a social networking site account and set it up on your phone, you can share your photos with your community.


**Set as** Touch to set the image as **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the captured picture.


**Edit** Touch to edit the photo you took.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view the last photo you took.

## Using the advanced settings (Camera)

In the viewfinder, touch  to open all the advanced options.

You can change the camera setting by scrolling the list. After selecting an option, touch the **Back** key.

**Focus** – Select the focus option from **Auto**, **Macro**, **Continuous AF** and **Face tracking**.

**Image size** – Touch to set the size (in pixels) of the picture you are taking.

**Scene mode** – Choose between **Auto**, **Portrait**, **Landscape**, **Sunset** and **Night**.

**White balance** – Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Colour effect** – Choose a colour tone for your new photo. Choose between **None**, **Sepia**, **Mono**, **Negative**, **Vivid** and **Solarize**.

**Timer** – The self-timer allows you to set a delay before a picture is taken after pressing the shutter.

**Shot mode** – Select shooting mode from Normal or Continuous shot.

**Image quality** – Choose between **Super Fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will be larger, meaning you'll be able to store fewer photos in the memory.

**Auto review** – If you set **Auto review** to on, it will automatically show you the picture you have just taken.

**Shutter sound** – Select one of the four shutter sounds.


**Tag location** – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you


# Photos and videos

upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

**NOTE:** This function is only available when location service is activated.

**Storage** – Select either Internal memory or **SD card** to save images.

 Restore all camera default settings.


 Touch this if you want to know how this function operates. This will provide you a quick guide.

**TIP!** When you exit the camera, some settings will return to their defaults. Check the camera settings before you take your next photo.


**TIP!** The settings menu is superimposed over the viewfinder, so when you change image colour or quality features you will see the image preview change behind the settings menu.

## Viewing your saved photos

1 You can access your saved photos from within camera mode. Just touch  and your gallery will appear on the screen. Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to see slide show. Touch **Menu** and select the options you want.

 Touch to share the contents.

 Touch to delete a photo.

 Touch **More** for more options, as below.

**Details** - Find out more information about the content.

**Set as** - Set as contact icon or wallpaper.

**Crop** - Crop your photo. Move your finger across the screen to select an area.


**Rotate** - Rotate left or right.

**Edit** - Touch to edit the image using various tools.

## Getting to know the viewfinder (Video camera)

**Zoom** - Zoom in or out. Alternatively, you can use the side volume keys.

**Switch camera** - You can move to the internal camera from the external one.

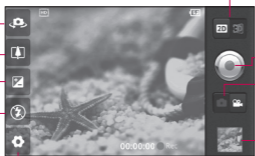

**Transition between 2D - 3D modes** - Touch to switch photo shoot mode between 2D and 3D.

**Start recording**

**Camera mode** - Slide this  icon to the left to switch to camera mode.

**Gallery** - Touch to view the video you recorded last. This enables you to access your gallery and view your saved videos from within the video mode.

**Settings** - Touch this icon to open the settings menu. See Using the advanced settings.





**Flash** - Allows you to turn on the flash when capturing a video in dark place.

**Brightness** - This defines and controls the amount of light entering the video. Slide the brightness indicator along the bar towards “-” to decrease the video brightness or towards “+” to increase it.

**TIP!** You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To restore the options, touch the screen again.

# Photos and videos

## Shooting a quick video

- 1 Open the **Camera** application and slide the camera mode icon to right to switch to video mode. The capture icon  will change to .
- 2 The video camera viewfinder will appear on the screen.
- 3 Hold the phone horizontally, point the lens towards the video subject.
- 4 Touch the start video icon .
- 5 REC will appear at the bottom of the viewfinder, along with a timer showing the length of the video.
- 6 Touch the stop video icon  to stop recording.

## After shooting a video

A still image representing your video will appear on the screen.


**Play** Touch to play the video.


**Share** Touch to share your video via **Bluetooth**, **Facebook**, **Email**, **Gmail**, **Messaging**


or **YouTube**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.


**Rename** Touch to edit the name of the recorded video.

 Touch to delete the video you made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video straight away.

 Touch to view the last video you recorded.

## Using advanced settings (Video camera)

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera settings by scrolling the list. After selecting an option, touch the **Back** key.

**Video size** – Touch to set the size (in pixels) of the video you will

record. Set the video image size as 1080P(1920x1080), HD(1280x720), D1(720x480), VGA(640x480), QVGA(320x240) or QCIF(176x144).

**White balance** – The white balance ensures white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

**Colour effect** – Choose a colour tone to use for your new view. Choose between **None**, **Sepia**, **Mono**, **Negative**, **Vivid** and **Solarize**.



**Video quality** – Choose between **Super Fine**, **Fine** and **Normal**.

**Duration** – Set a time limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.


**Audio recording** – Choose **Mute** to record a video without sound.

**Auto review** – If you set this to **On**, it will automatically show you the video you have just recorded.

**Storage** – Select either Internal memory or External **SD card** to save videos.

-  Reset all video camera settings.
-  Touch this if you want to know how this function operates. This will provide you a quick guide.

## Watching your saved videos

- 1 In the viewfinder, touch  on the lower right-hand corner.
- 2 Your gallery will appear on the screen.
- 3 Touch a video to play.

# Photos and videos

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the right side of the phone.

## 3D photos and videos

### Getting to know the viewfinder (3D Camera)





- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 3D focus**- You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D picture, you can use this function.


- 3 Brightness** - This defines and controls the amount of light entering the image. Slide the brightness indicator along the bar towards "-" to decrease the image brightness or "+" to increase it.
- 4 Flash** - Allows you to turn on the flash when taking a photo in a dark place.
- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.

**3D focus mode** - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also fine-tune manually with 3D focus function of viewfinder.

## Taking a 3D Photo

- 1 Open the Camera application.
- 2 Touch the 3D button  on the viewfinder.
- 3 Hold the phone horizontally, point the lens towards the subject which you want to photograph.
- 4 Touch the capture icon .
- 5 When the image is focused, the focus indicators turns green and the image will be captured.

## Getting to know the viewfinder (3D Video Camera)

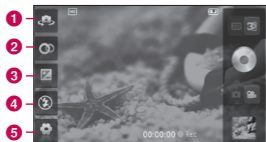

- 1 **Switch camera** - You can move to the internal camera from the external one.

- 2 **3D focus** - You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D video, you can use this function. You can't adjust this function while recording.
- 3 **Brightness** - This defines and controls the amount of light entering the video. Slide the brightness indicator along the bar towards "-" to decrease the video brightness or "+" to increase it.
- 4 **Flash** - Allows you to turn on the flash when capturing a video in dark place.




# Photos and videos

- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.



**3D focus mode** - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also fine-tune manually with 3D focus function of viewfinder.

**Stabilization** - Set On to compensate unsteady hand.

## Shooting a quick 3D video

- 1 Open the Camera application and slide the camera mode icon to right to switch to video mode. The capture icon  will change to .
- 2 The video camera viewfinder will appear on the screen: touch the 3D button .
- 3 Holding the phone in landscape view, point the lens towards the


video subject.

- 4 Touch the start video icon . REC will appear at the bottom of the viewfinder, along with a timer showing the length of the video.
- 5 Touch the stop video icon  to stop recording.

### NOTE

- 3D camera mode is only allowed in landscape view.
- Keep the distance between the camera and the object more than 0.5m.
- For the optimal 3D viewing experience, hold the device 30~40cm away from your eyes.

## 3D Space

Press and hold the 3D key on the right side of the phone to access  3D Space. It will show you 3D content such as YouTube 3D, 3D Gallery, 3D Camera and 3D guide.




### YouTube 3D

- 1 Touch YouTube 3D to launch. As the screen switches to YouTube 3D web, various 3D videos appear.
- 2 Select a video you want to watch. The video will be shown in side by side format in portrait mode.
- 3 Rotate to landscape and 3D mode will turn on automatically.



### 3D Gallery


- 1 Touch the  3D Gallery. The 3D images will then be listed.
- 2 Choose one you want to see.

#### NOTE

- 3D content is best viewed with the screen 30~40cm in front of you.




### 3D Camera

- 1 Touch the  3D Camera and the screen will switch to 3D camera mode. To create 3D photos and 3D recordings, see the 3D photos and videos on previous pages.



### 3D Games & Apps

- 1 Touch  3D Games & Apps and any 3D Games and Applications you have downloaded from Market will be listed. Four applications, such as Asphalt6, Let's Golf 2, Nova, Gulliver's Travels, are provided as default games.



### 3D Guide

The 3D Guide contain instructions that makes 3D content easier to use with this phone. It will advise you how to create 3D pictures, connect to 3D TV via HDMI, view 3D content and share them.

# Multimedia


## Gallery

You can also save your files to an external memory card. The advantage of using a memory card is that you can free up memory space on your phone.


Touch the **Applications** tab , then select **Gallery**.


- 1 Touch the photo on the screen. You will then see **Slideshow** and **Menu**.

 Touch to view the slide show.

 **Menu** Touch to select the options you want.

 Touch to share the content.

 Touch to delete a photo.

 Touch **More** for more options, as below.

**Details** - Find out more information about the content.

**Set as** - Set as contact icon or wallpaper.

**Crop** - Crop your photo. Move your finger across the screen to

select an area.

**Rotate** - Rotate left or right.


**Edit** - Touch to edit the image using various tools.

### To view 3D content,

- 1 Select the image you want to watch.
- 2 Rotate to landscape and 3D mode turns on.
- 3 For more information, refer to the 3D Guide.

**NOTE:** A part of image files can be converted 2D to 3D.

## Music

Your LG-P920 has a built-in player that lets you play all your favourite music. To access the music player, touch the **Applications** tab  then select **Music**.

## Playing a song

- 1 On the home screen, touch the **Applications** tab  and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the start of the song. Touch  twice to go back to the previous song.

To adjust the volume while listening to music, touch the up and down volume keys on the right side of the phone.

Touch and hold any song in the list. It will display **Play**, **Add to playlist**, **Use as ringtone**, **Delete** and **Share** as options.

**NOTE:** Music file copyright may be protected by international treaties and national copyright laws.

You may therefore need to obtain permission or a licence to reproduce or copy music. In some countries, laws prohibit private copying of copyrighted material. Before downloading or copying a file, please check the laws of the relevant country governing the use of such material.


# Multimedia

## Using SmartShare

**SmartShare** uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Both devices must be DLNA certified to support this feature.

### To turn SmartShare on and allow sharing contents

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Press the **Menu** key and select **Settings**.
- 3 Touch Discoverable checkbox to turn on.
- 4 Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
- 5 Touch **Receive files** if you would like to automatically allow upload files to my phone from other devices.
- 6 Under the Sharing contents


section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.

- 7 **SmartShare** is now activated and ready to share contents.

### To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC)

**NOTE:** Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top right button to or select the device from renderer lists.
- 3 Touch the top left button and select the device of the remote content library.
- 4 You can browse the content library.

- 5 Touch a content thumbnail or press the Menu key and select Play button.

## To share contents from your phone to your renderer device(e.g. TV)

**NOTE:** Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Touch **Share** on the menu and select the **SmartShare**.
- 3 **SmartShare** is automatically launched with the selected files.
- 4 Select the device from renderer lists to play the files.

**NOTE:** Follow the similar steps to use the Music player to share contents.

**NOTICE:** Check that your device is connected with your home network

using Wi-Fi connection to use this application and make sure that your device is connected to DLNA certified Wi-fi.

Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents

## To download contents from remote content library


- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail then touch **download menu key**.

**NOTICES:** A few types of contents are not supported.

# Multimedia

## To upload contents from my phone to remote content library

**NOTE:** Make sure that SD card is correctly mounted and the Received files in settings menu is checked.

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top left button and select **My phone**.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **upload menu key**.
- 5 Select a device of remote content library to be uploaded.

**NOTICE:** Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.

## Transferring files using USB mass storage devices

### To transfer files using USB devices:

- 1 Connect the LG-P920 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you will need to change settings manually. Choose **Settings > SD card & phone storage > Mass storage only** and connect your phone to your PC using the USB data cable.
- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage content on your PC and transfer files.

**NOTE:** You will need to install your microSD card first. Without a microSD card, you cannot use USB mass storage.

## How to save music/ video files to your phone

- 1 Connect your phone to the PC using the USB cable.
  - Touch and drag down the status bar on the home screen. Select **USB connected > Turn on USB storage** > Open the removable memory folder in the PC to view the files.
  - If you haven't installed LG Android Platform Driver on your PC, you will need to set it manually. For more information, refer to Page 66 "Transferring files using USB mass storage devices".
- 2 Save music or video files from your PC to the phone's removable storage.
  - You can copy or move files from PC to the phone's removable storage using a card reader.
  - If there is a video file with a subtitle file (a .smi or .srt file with the same name as the video file),

put them in the same folder to display the subtitle automatically when playing the video file.

- When downloading music or video files, copyright must be respected. Please note that a file that is corrupted or has the wrong extension may cause damage to your phone.

## How to move contacts from your old phone to your current phone

### Export your contacts as a CSV file from your old phone to your PC, using a PC sync programme.

- 1 Download PC Suite for Android at [www.lg.com](http://www.lg.com) and install it on your PC. Run the programme, and connect your Android mobile phone to the PC using a USB cable.
- 2 Select the **Contacts** icon. Go to **File->Import** and select the CSV

# Multimedia

file saved on the PC.

- 3 If the fields in the imported CSV file are different from the ones in PC Suite for Android, you need to map the fields. After mapping the fields, click OK. The contacts will then be added in PC Suite for Android.
- 4 If the LG-P920 phone connection using the USB cable is detected by PC Suite for Android, click "Sync" or "Sync contacts" to synchronise the contacts saved in the PC to your phone and save them.

## How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a suitable application, rather than from the Bluetooth menu as with normal mobile phones.

- **Sending pictures:** Run the **Gallery** application and select the **Picture** to be sent > **Menu**. Click

**Share** and select **Bluetooth** > Check if **Bluetooth is turned on** and select **Scan for devices** > Choose the device to which you want to send the data , from the list of devices.

- **Exporting contacts:** Run the **Contacts** application. Touch the address you want to export to. Touch the **Menu** and select **Share** > **Bluetooth** > Check if **Bluetooth is turned on** and select **Scan for devices** > Choose the device to which you want to send the data , from the list of devices.
- **Sending multiple contacts:** Run the **Contacts** application. To select more than one contact touch the **Menu** key and touch **Share**. Select the contacts you want to send or touch **Select all** > **Share** > **Bluetooth** > Check if **Bluetooth is turned on** and select **Scan for devices** > Choose the device to which you want to send the data ,

from the list of devices.

- **Connecting to FTP (Only FTP servers are supported on this handset): Settings > Wireless & networks > Bluetooth settings.**

Then select the **Discoverable** tickbox and search for other devices. Find the service you want and connect to the FTP server.

**TIP!** The version is Bluetooth 2.1+ EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

**NOTE:** If you want to search for this phone from other devices, go to **Settings > Wireless & Networks > Bluetooth settings**. Then select the **Discoverable** tickbox. The tickbox is cleared after 120 seconds.

**NOTE:** The following profiles are supported: SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP and AVRCP.

## HDMI

HDMI (High Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data. If you connect your phone to a TV or monitor using an HDMI cable, you can transmit images or video files with the video player/image viewer of your phone and see them on the TV or monitor. You can also play 3D content on a 3D TV or monitor.

**Note:** It may take time to play media files depending on the device connected to your phone. Files may not be played properly when using a non-HDMI certified cable or product. The image orientation you set on your phone is also used on the device.

3D content may not be transmitted automatically if your phone and 3D TV support different HDMI versions. In this case, you can change the 3D settings of TV referring to the

## Multimedia

TV'S user manual. When using a HDMI cable, 3D video playback, 3D camera preview, or 3D video camera preview is displayed only on a TV or monitor. HDMI OUT may not be supported from some of the files due to request from copyright owner.

If your phone data is not displayed properly on the device due to a sync issue, you need to change the resolution of your phone. (On the Home screen, tap on the Menu key, and then tap Settings > HDMI > Resolution.)


# Utilities

## Setting your alarm

- 1 On the home screen, touch the **Applications** tab  and select **Alarm/Clock**.
- 2 If you want to add a new alarm, touch **New alarm**.
- 3 Set the alarm and touch **Save** to turn it on.


**NOTE:** To delete the alarm on the alarm list screen, touch the Menu key and select Delete/Delete all.

## Using your calculator

- 1 On the home screen, touch the **Applications** tab  and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch **Menu** and **Advanced panel**, then choose sin, cos, tan, log, etc.

**NOTE:** As a standard unit of angle measure, radian is only supported by this calculator.

## Adding an event to your calendar






- 1 On the home screen, touch the **Applications** tab  and select **Calendar**.
- 2 You must first create MS Exchange or Google account to use Calendar.
- 3 To check the event, touch the date. Hold it down if you want to add a new event. Then touch **New event**.
- 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to start and finish.
- 5 Then touch **Where** and enter the location.
- 6 To add a note to your event, touch **Description** and enter the details.

## Utilities

- 7 If you want to repeat the alarm, set **Repetition** and set **Reminders** if necessary.
- 8 Touch **Save** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

### Recording a sound or voice

Use the voice recorder to record voice memos or other audio files.

- 1 On the home screen, touch the **Applications** tab  and select **Voice Recorder**.
- 2 Touch  to start recording.
- 3 Touch  to stop recording.
- 4 Touch  to listen to the recording.
- 5 Touch  to access your album. You can listen to the saved recording.

**Notice:** Available recording time may differ from the real time.


### Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose between **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message you write, and it will be sent.

### Home Time Zone

You can set the option **Use home time zone** & select **Home time zone** from the list.

This is used to override the local time zone set by the mobile network so that time zone of your choice is applicable to Calendar and events of your phone.

- 1 On the idle screen, touch the **Home** key .
- 2 Touch **Calendar**, then sign in to your account.
- 3 In the **Calendar** menu, select **Settings** option.
- 4 Touch **Use Home Time Zone** and select required time zone in **Home Time Zone** option.


## 3D Game Converter

You can enjoy popular 2D games in 3D by using 3D Game Converter powered by HRZ engine.

The Games you have added to 3D game converter list will be transformed to 3D in real time when you simply press 3D hot key on the right-hand side of the phone.

- 1 Touch the **Applications** tab, then select **3D Game Converter**.
- 2 Touch  and select games you would like to choose.
- 3 You can play games on 3D game converter list, in 3D.

- In case you have registered customizable game, you can set Quality, 3D depth, Depth scale in 3D settings.

- 1 Touch  on games list.
- 2 Save the settings after setting up.

### Notice

3D game converter works on only 2D OpenGL-based games.

**NOTE:** 3D converting does not cost you.

## Editing videos

Use Video editor to edit the videos you have captured.

- 1 On the homescreen, touch the **Applications** tab.
- 2 Touch **Video editor**. When you have no project going on, only **New** and **Help** is available. Tap the **Menu** key to see the **Help**.
- 3 Touch **New** and select **Add** to add videos, images or Musics you'd like to insert. You can drag files down to where you want

## Utilities

to place.

**NOTE:** If you select 3D video at first, you can only add 3D videos having same resolution with audio. Also you can add only 2D videos If you select 2D video at first.

- 4 Touch **Trim** to edit the length of video dragging the Trim bar. You can control in detail with using **Detail view**.
- 5 If you are finished with your project, touch **Export** on main screen to make complete file. Make sure save the changes you have made before exit to main menu.
- 6 You can share the file you have edited with your friends via **Bluetooth, Email, Facebook, Gmail, Messaging** and **Youtube**.

# The Web


## Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment and much more, right on your mobile phone - Wherever you are and whatever you're into.


**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.


### < Tool bar >


The icons bar present in the bottom of the screen makes it easier to use the browser.

 **Backward:** Move to the previous web page.

 **Forward:** Move to the next web page.

 **Windows:** Shows all your open windows.


 **New windows:** Open a new window.


 **Settings:** Move to Browser settings.


## Using options


Touch the **Menu** key to view options.

 **Read it later:** Added in Read it later.

 **Share page:** Send the web page via Bluetooth, Email, Facebook, Gmail, Messaging and so on.

 **Find on page:** If you enter a letter or word, it will mark all the letters you entered, in the web page.

 **Select text:** Touch and select the lines you want to copy. You can paste it into any input box by touching it for an extended period.

 **Add RSS Feed:** Add your favourite web page. When a new item appears on the site, you will automatically be notified by Google reader.

**NOTE:** RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts.

# The Web

An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up-to-date with their favourite websites in an automated way that is easier than checking manually. The user subscribes to a feed by entering its link into the reader or clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content, and downloads any updates it finds.

For unavailable RSS Feed webpages, the 'Add RSS Feed' icon menu will be disabled.

## More

- **Home page:** Displays the Home page.
- **Set home page:** Set the current page as your home page.
- **Add shortcut to home:** Add the

current page to home screen as Shortcut.

- **Page info:** Shows the web page information.
- **Downloads:** Shows the download history.

# Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, the contacts, email and calendar in your Google account will automatically synchronise with your LG-P920.

## Maps

Check your current location and traffic and receive directions to your destination. Your phone must be connected to Wi-Fi or 3G/GPRS.

**NOTE:** Google Maps does not cover all cities and countries.

## Market

Android Market lets you download applications and games. If you install applications and games from Android Market, they will appear in the LG-P920 menu.

You can check other peoples' comments regarding an application, or post your own comments.

## Gmail

Gmail is configured when you first set up your phone. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list will be your default Gmail view.

## Talk

Google Talk is Google's instant messaging programme. It lets you communicate with other people who use Google Talk.

Open **Talk** and touch the **Menu** key to select the available options like **All friends, Add friend, Search, Sign out, Settings, etc.**


## Google Search


Google Mobile Web Search allows you to search for websites.

# LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer “Mobile Life” experiences.

## How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

**NOTE:** What if there is no  icon?

- 1 Using a mobile Web browser, access LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

## How to use LG SmartWorld


- Participate in monthly LG SmartWorld promotions.
- Find and download exciting 3D content from the ‘3D zone’.
- After Sign into **LG SmartWorld** Touch **Menu** key for different options.
  - **Categories:** Find contents

by category (e.g. Education, Entertainment, Games, etc).

- **My Apps:** List of downloaded/ to-be-updated contents.
- **Apps for you:** Recommended content based on your previous choices.
- **Search:** Search Content.
- **Settings:** Change profile, notification , display settings and check for LG SmartWorld update.
- Try other useful functions as well. (My apps screen)
  - **Wish List:** Save the content you're interested in
  - **Share:** Share content information through E-mail, Facebook, Twitter and SMS.

**NOTE:** LG SmartWorld may not be available in all carriers or countries.

# Settings

On the home screen, touch the **Applications** tab  then scroll and touch **Settings**.

## Wireless & Networks

Here, you can manage Wi-Fi, Bluetooth, Tethering, hotspot, VPN and On-Screen phone. You can also set mobile networks and airplane mode.

**Airplane mode** – After setting Airplane mode, all wireless connections will be disabled.

**Wi-Fi** – Touch to select: This turns on Wi-Fi to connect to available Wi-Fi networks.

**Wi-Fi settings** – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key and touch **Advanced**.

**Bluetooth** – Touch to select: Turns on Bluetooth to connect to Bluetooth devices.

**Bluetooth settings** – Set device name & discoverable mode, scan for other devices. Alternatively, check a list of Bluetooth devices you've previously configured plus those detected when the phone last scanned for Bluetooth devices.

**Tethering & portable hotspot** – Tether your phone to your computer with a USB cable to share your phone's Internet connection with your computer and turn your phone into a Wi-Fi access point to share your phone's Internet connection with additional computers or devices.

**VPN settings** – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

**Mobile networks** – Set options for data roaming, network mode & operators, access point names (APNs) etc.

**On-Screen Phone settings** – Allows you to change the On-

Screen Phone password (the default password is "0000"). On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

## Sound

### < General >

**Silent mode** – Allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos, and any alarms you have set. (Media and alarms must be silenced from their own applications.)

**Notice:** After setting silent mode it is not available to use **Settings > Sound > Volume** menu.

**Vibrate** – Allows you to set your phone to vibrate when you receive an incoming call.

**Volume** – Allows you to set the

volume for ringtone, media and alarm. If you uncheck the option to use incoming call volume for notification, you can set both volumes for incoming call and notification separately.

### < Incoming calls >

**Phone ringtone** – Allows you to set your default incoming call ringtone.

### < Notifications >

**Notification ringtone** – Allows you to set your default notification ringtone.

### < Feedback >

**Audible touch tones** – Allows you to set the phone to play tones when dialling numbers using the dial keypad.

**Audible selection** – Allows you to set your phone to make a sound when you touch buttons, icons and other on-screen items that are touch-sensitive.

**Screen lock sounds** – Allows you

# Settings

to set your phone to make a sound when locking and unlocking the screen.

**Haptic feedback** – Allows you to set your phone to vibrate briefly when you touch the soft keys and carry out other actions.

## Display

**Brightness** – Adjust the brightness of the screen.

**Auto-rotate screen** – Allows you to set the orientation to switch to landscape mode or portrait mode automatically when you turn the phone sideways or upright.

**Animation** – Allows you to set animated transitions when navigating from screen to screen.

**Screen timeout** – Allows you to adjust the delay time before the screen automatically turns off. For best battery performance, use the shortest convenient timeout.

**Display font** - Change the display

font.

## < 3D settings >

**Warning popup** – It will display a warning popup whenever you start a 3D games unless you select the tick box 'Do not show again'.

## Gesture

**Use motion gestures** – Adjust the gesture settings for the incoming calls and the alarm.

## <Incoming call>

**Mute** – Allows you to mute the sound by flipping the phone over while the phone is ringing.

## <Alarm>

**Snooze (stop)** – Allows you to snooze(stop) the alarm by flipping the phone over.

**Reset gesture sensor** – Calibrate the motion sensor with the phone placed on a flat surface.

## Location & security

### < My Location >

**Use wireless networks** – If you select **Use wireless networks**, your phone will determine your approximate location using Wi-Fi and mobile networks.

**Use GPS Satellites** – If you select **Use GPS satellites**, your phone will determine your location with street-level accuracy.

### < Screen unlock >

**Set up screen lock** – Set an unlock pattern to secure your phone. This opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern**, or leave the option as **None**.

**TIP!** To lock your screen by using the **Pattern Lock**

- 1 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 2 You will be prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you will be prompted to draw your unlock pattern to unlock the screen.

### < SIM card lock >

**Set up SIM card lock** – Set up SIM card lock or change SIM PIN.

### < Passwords >

**Visible passwords** – Select to show passwords as you type them, or deselect to hide them as you type them.

### < Device administration >

**Select device administrators** – Add or remove device administrators.

# Settings

## < Credential storage >

**Use secure credentials** – Select to allow applications to access your phone's encrypted store of secure certificates, related passwords and other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. If you have not set a credential storage password, this setting is greyed out.

**Install from SD card** – Allows you to install encrypted certificates from a microSD card.

**Set password** – Allows you to set or change the password for your secure credential storage. Your password must have at least eight characters.

**Clear storage** – Deletes all secure certificates and related credentials and erases the secure storage's own password.

## Applications

**Unknown sources** – Permits installation of applications you get from websites, email or other locations than Android Market.

### WARNING

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Android Market.

**Manage applications** – Manage and remove installed applications.

**Running services** – Allows you to view and control services and applications that are currently running. This option displays what

processes each running service needs, and how much memory it is using.

**Storage use** – View storage used by applications.

**Battery use** – See what has been using the battery.

**Development** – Allows you to set options for application development, such as **USB debugging**, **Stay awake** and **Allow mock locations**.

## Accounts & sync

<General sync settings >

**Background data** – Permits applications to synchronise data in the background, whether or not you are actively using them. Un-selecting this setting can save battery power, and will lower (but not eliminate) data use.

**Auto-sync** – Permits applications to synchronise, send and receive data on their own schedule.

< Social+ update settings >

**Social+ settings** – Allows you to set refresh interval of all Social Network application present on the phone.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone.

If you touch an account in this screen, its account screen will open.

## Privacy

< Personal data >

**Factory data reset** – Erases all your personal data from internal phone storage, including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence. Resetting the phone will not delete or restore any system software updates you have downloaded or any files (e.g., photos and music

# Settings

files) on your microSD card or internal SD card. If you reset the phone this way, you will be prompted to re-enter the same information as when you first started Android.

## SD card & phone storage

### < SD card >

Check total space and available space. Touch **Unmount SD card** to remove it safely. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you format it.

### < Internal phone storage >

Check the **Available space**.

## Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

## Voice input & output

### < Voice input >

**Voice recogniser settings** – Use the **Voice recogniser settings** to configure the Android voice input feature.

- **Language:** Opens a screen where you can set the language you use when entering text by speaking.
- **SafeSearch:** Opens a dialogue box where you can set whether you want Google SafeSearch filter to block some results.
- **Block offensive words:** When un-selected, Google voice recognition will recognise and transcribe words many people consider offensive, when you enter text by speaking. When selected, Google voice recognition replaces those words in transcriptions with a place holder comprised of hash symbols (#).

## < Voice output >

**Text-to-speech settings** – Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can benefit from it.

**NOTE:** If you don't have speech synthesiser data installed, only the Install voice data setting will be available.

- **Listen to an example:** Plays a brief sample of the speech synthesiser using your current settings.
- **Always use my settings:** Check to use the settings on this screen rather than the speech synthesiser settings available in other applications.
- **Default engine:** Opens a dialogue box where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your

phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.

- **Speech rate:** Opens a dialogue box where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a dialogue box where you can select the language of the text you want the synthesiser to read. This is particularly useful when combined with **Always use my settings** to ensure text is spoken correctly across a variety of applications.
- **Pico TTS:** Configure the Pico TTS settings.

# Settings

## Accessibility

Use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

**NOTE:** Requires additional plug-ins to become available.

## Date & time

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone, rather than getting the current time from the mobile network.

## About the phone

View legal information and check phone status and software version.


## Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the area of wireless access point (AP) coverage.

You can enjoy wireless internet with Wi-Fi, without incurring extra


charges.

## Turn on Wi-Fi

From the home screen, open the notification drawer and touch  on.

Or touch **Application > Settings > Wireless & networks**, then turn **Wi-Fi** on.

## To connect to Wi-Fi

Choose the Wi-Fi network you want to connect to. If you see , you need to enter a password to connect.

### NOTE:




- If you are out of a Wi-Fi area and choose the 3G connection, additional charges may be applied.
- If your phone changes to sleep mode when connected to Wi-Fi, the Wi-Fi connection will be disabled automatically. (In this case, if your phone has access to Mobile data it may connect to the Mobile network) .

- The LG-P920 supports WEP, WPA/WPA2-PSK and 802.1x EAP. Security. If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

## Sharing your phone's mobile data connection

You can also share your phone's data connection with upto five devices simultaneously, by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an on-going notification in the notifications drawer.

Icon	Description
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

For the latest information about portable hotspots, including operating systems supported and other details, go to <http://www.android.com/tether>.

**NOTE:** Additional costs may be incurred when connecting to and using online services. Check data charges with your network provider.

## Tethering & portable hotspot

On the home screen, touch the **Applications** tab and select **Settings**.

Touch **Wireless & Networks** and select **Tethering & portable**

# Settings

## hotspot.

Choose the options you want to adjust.

**USB tethering** -You can share your phone's internet connection with your computer.You can tether your phone to your computer with a USB cable.



**Portable Wi-Fi hotspot** – Select to share your phone's mobile network data connection as a portable Wi-Fi hotspot.

**Help** – Opens a dialogue box with information about USB Tethering and portable Wi-Fi hotspots and advice about where to learn more.

## TIP!

You can use both USB tethering and Portable Wi-Fi hotspot at same time.

## To share your phone's data connection as a portable Wi-Fi hotspot


- 1 On the home screen, touch the **Applications** tab  and select **Settings**.
- 2 Touch **Wireless & Networks** and select **Tethering & portable hotspot**.
- 3 Check **Portable Wi-Fi hotspot**.
  - After a moment the phone starts broadcasting its Wi-Fi network name (SSID), enabling you to connect to it with up to five additional computers or other devices. An on-going notification  is added to the status bar and notifications drawer.
- When **Portable Wi-Fi hotspot** is selected, you can change its network name or make it secure.
- 4 Un-select **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

## Note:

When you first time enable Portable Wi-Fi hotspot, you need to set a password for secure data connection sharing.

## To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch the **Applications** tab  and select **Settings**.
- 2 Touch **Wireless & Networks** and select **Tethering & portable hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is selected.
- 4 Touch **Portable Wi-Fi hotspot settings**.
- 5 Touch **Configure Wi-Fi hotspot**.
  - The **Configure Wi-Fi hotspot** dialogue box will open.
  - You can change the network SSID

(name) that other computers see when scanning for Wi-Fi networks.

- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialogue box. If you enter a password, you will need to re-enter it when you connect to the phone's hotspot with a computer or other device. You can touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

# Settings

## ATTENTION!






If you set the security option as **Open**, you can not prevent unauthorised usage of online services by other people, and additional charges may be incurred. To avoid unauthorised use, you are advised to keep the security option enabled.

6 Touch **Save**.

## How to use On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

## On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available with applications that support rotation).
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Minimises the On-Screen Phone window.

## On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.

- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

**Notice:** The Camera preview, videos and contents from 3D mode(3D Game & Apps, 3D Guide, YouTube

3D, 3D Gallery) are not supported in OSP, so they are not available on the PC.

## How to install On-Screen Phone on your PC

Visit LG Home (<http://www.lg.com>) and go to **Support > Mobile Phone Support > Download LG Mobile Support Tool to PC**. If you download LG PC Suite IV, the On-Screen Phone programme will also be downloaded on your PC. You can then install the On-Screen Phone on your PC.

**NOTE:** Go to **Settings > SD card & phone storage** and make sure that the **"Mass storage only"** checkbox is deselected.

## How to connect your mobile phone to your PC

### USB connection:

- 1 Open Connection Wizard, select "USB Cable connection" and click "Next".

# Settings

- 2 Connect your mobile phone to the PC using a USB cable and click "Next".
- 3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless & Networks > On-Screen Phone Settings**.
- 4 Click "OK" to exit the window.
- 4 The wizard will start searching for Bluetooth-enabled mobile phones. When the mobile phone you want to connect to appears, click "Stop" to stop searching.
- 5 Select "LG-P920" from the device list and click "Next". You can rename the device if you wish.
- 6 Accept the pairing request in your phone and select "Next" in PC.
- 7 Enter the On-Screen Phone password and click "Next". (The default password is "0000").
- 8 Touch "OK" to exit.


## Wireless connection with Bluetooth:

- 1 On your mobile phone, go to **Settings > Wireless & Networks > Bluetooth settings**. Select **Turn on Bluetooth** and then select **Discoverable**.
- 2 If you have previously connected using a cable, run the New Connection Wizard to create a new connection.
- 3 Run the Connection Wizard on the computer, select "Bluetooth connection", then "Next".

## To check the phone-to-PC connection

Once the devices have been connected, drag down the notification bar at the top of the home screen to check the On-Screen Phone connection status.

## To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Alternatively, drag down the notification bar at the top of the home screen and select "On-Screen Phone". Touch "Yes" in the Disconnect window.

**NOTE:** You must restart your phone after shutting down the On-Screen Phone service.

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware of your phone to the newer version conveniently from the

internet without the need to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

**NOTE:** LG reserves the right to make firmware updates available only for selective models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

### LG Mobile Phone Software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer

# Settings

version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

**Settings > About phone > Software update > Check now for update.**

You can also rearrange update schedule in 1 hour, 4 hours, 8 hours or 24 hours before updates.

In this case, the application will notify you to update when the time is up. Also you can rearrange or update by manually.

**NOTE:** Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the

process of updating your phone's software.

Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

## Sync your phone with your computer

You can use the LG PC Suite to sync Outlook contacts and calendar between your computer and your phone.

### Installing the LG PC Suite


Use the LG PC Suite installer pre-loaded in the phone memory.

- 1 Connect your phone to your computer using the USB cable that came with your phone.
- 2 When the 'USB connected' screen appears on your phone, tap 'Turn on USB storage' and select 'OK' to display the 'USB storage in use' screen.

- 3 On your computer, the connected phone is recognised as a removable disk. Navigate to this removable disk and open **LGE** folder.
- 4 Copy the entire **pc\_suite** folder to your computer.
- 5 On your phone, press the home key and go to **Applications > Settings > SD card & phone storage** and then disable '**Mass storage only**' setting.
- 6 Disconnect your phone from the computer.
- 7 On your computer, go to **pc\_suite** folder, double-click **LGInstaller.exe** and follow the onscreen instructions to install LG PC Suite.

# Copyrights and trademarks

The rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
- microSD and the microSD logo are Trademarks of the SD Card Association.
- Google, Android, Google Search, Google Calendar, Google Maps, Google Latitude, Gmail, YouTube, Google Talk and Android Market are trademarks of Google, Inc.
- Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.
-  Includes ADOBE® FLASH® PLAYER  
Contains Adobe® Flash® Player technology by Adobe Systems Incorporated.

- **DivX Mobile**



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

**DivX Certified® to play DivX® video up to HD 720p, including premium content.**

**DivX®, DivX Certified® and associated logos are**

trademarks of DivX, Inc. and are used under licence. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

### Notice!

#### Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/> All referred licence terms, disclaimers and notices are available for download with the source code.

- Wi-Fi® and Wi-Fi Protected Access® are registered trademarks of the Wi-Fi Alliance.

- **DTS 2.0 Channel**



Manufactured under license from DTS Licensing Limited. DTS and the Symbol are registered trademarks, & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

- **Dolby Digital Plus**



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## Accessories

These Accessories are available for use with the LG-P920.

(Items described below may be optional.)

### Charger



### Data cable

Connect your LG-P920 and PC.



### Battery



### User Guide

Learn more about your LG-P920.



### Stereo headset



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

# Technical data

## Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

## Declaration of Conformity



LG Electronics

### Suppliers Details

**Name**

LG Electronics Inc

**Address**

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

### Product Details

**Product Name**

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

**Model Name**

LG-P920

**Trade Name**

LG

CE 0168 !

### Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1  
/ EN 301 489-19 v1.2.1 / EN 301 489-24 v1.5.1  
EN 300 328 v1.7.1  
EN 60950-1:2006+A11:2009  
EN 50360:2001 / AC:2006 / EN 62209-1:2006 / EN 62209-2:2010  
EN 301 511 v9.0.2  
EN 301 908-1 v4.2.1 / EN 301 908-2 v4.2.1

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. – EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

3, May, 2011

  
Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone, or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection / Losing network	Weak Signal outside GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
An application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key held down long enough Battery is not charged Battery contacts are dirty	Hold the On/Off key down for at least two seconds. Keep the charger attached for longer. Clean the contacts. Take out the battery and reinsert it.

<b>Message</b>	<b>Possible causes</b>	<b>Possible Corrective Measures</b>
Charging error	<p>Battery is not charged.</p> <p>Outside temperature is too hot or cold</p> <p>Contact problem</p> <p>No voltage</p> <p>Charger defective</p> <p>Wrong charger.</p> <p>Battery defective.</p>	<p>Charge battery.</p> <p>Make sure the phone is charging at normal temperature.</p> <p>Check the charger and connection to the phone.</p> <p>Check the battery contacts, and clean them if necessary.</p> <p>Plug the charger into a different socket.</p> <p>If the charger does not warm up, replace it.</p> <p>Only use original LG accessories.</p> <p>Replace battery.</p>
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive / send SMS & Picture	Memory Full	Delete some messages from the phone.
Files not open	Unsupported file format	Check the file formats that can be supported
SD Card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using phone
The screen does not come on when I receive a call.	Proximity sensor problem	If you use a protective tape or case, check whether it is covering the area around the proximity sensor. Make sure the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.

# Troubleshooting

Message	Possible causes	Possible Corrective Measures
Hang up or freeze	Intermittent software problem	Remove and re-insert battery. Turn on the phone.  If the phone is locked and does not work, press and hold the Power/Lock key for 10 seconds to turn it off. Then, press the Power/Lock key again for 3 seconds to reboot the phone.  Try to do a software update service via the website.