



ไทย
ENGLISH



คู่มือการใช้

LG-P698f



CE 0168

P/N : MFL67445510 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่าง เป็นทางการ เพื่อให้ แน่ใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับ โปรแกรมตรวจสอบผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG" โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากข้อบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐาน ในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์



ไทย

คู่มือการใช้ LG-P698f

คู่มือนี้จะช่วยคุณเริ่มต้นใช้งานโทรศัพท์ของคุณ หากคุณต้องการข้อมูลเพิ่มเติม โปรดไปที่ www.lg.com

- เนื้อหาบางส่วนในข้อมูลนี้อาจใช้งานกับโทรศัพท์ของคุณไม่ได้ ซึ่งจะขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์และผู้ให้บริการของคุณ
- ไม่แนะนำให้ผู้ที่มีความบกพร่องทางด้านสายตาใช้เครื่องรุ่นนี้ เนื่องจากมีแป้นพิมพ์บนหน้าจอแบบสัมผัส
- ลิขสิทธิ์ ©2011 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้องของ เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Maps™, Gmail™, YouTube™, Talk™ และ Android Market™ เป็นเครื่องหมายการค้าของ Google, Inc.



สารบัญ

คำแนะนำเพื่อความปลอดภัยและการ
ใช้งานอย่างมีประสิทธิภาพ5

ข้อความประกาศสำคัญ12

เริ่มทำความรู้จักกับโทรศัพท์
ของคุณ22

การใส่ซิมการ์ดและแบตเตอรี่.....24

การชาร์จโทรศัพท์25

การติดตั้งการ์ดหน่วยความจำ26

การฟอร์แมตการ์ดหน่วยความจำ27

หน้าจอหลักของคุณ28

เคล็ดลับสำหรับหน้าจอสัมผัส28

ล๊อคโทรศัพท์ของคุณ.....28

ปลดล๊อคหน้าจอ.....29

โหมดเงียบ29

หน้าหลัก29

การเพิ่ม Widget

ในหน้าจอหลักของคุณ.....30

การกลับไปทีแอปพลิเคชันที่

เพิ่งใช้ล่าสุด31

การใช้ซิมคู่.....31

แถบการแจ้งเตือน.....31

การดูแถบสถานะ32

แป้นพิมพ์บนหน้าจอ34

การป้อนตัวอักษรที่ใช้สำหรับ

เนนเสียง.....35

การตั้งค่าแอคเคาท์ Google36

การสร้างแอคเคาท์ Google.....36

การใช้อินแอคเคาท์ Google

ของคุณ36

การโทร38

การโทรออก38

การโทรออกโดยใช้รายชื่อ38

การรับสายและการปฏิเสธสาย

เรียกเขา38

การปรับระดับเสียงสายสนทนา.....38

การใช้สายที่สอง38

การดูบันทึกการโทร39

ตั้งค่าการโทร.....39

รายชื่อ.....40

การค้นหารายชื่อ.....40

การเพิ่มรายชื่อใหม่40

เพื่อนสนิท.....40

ข้อความ/อีเมล41

ข้อความ41

การส่งข้อความ.....41

กล่องเซรูด42

การใช้สโมลล์42

การเปลี่ยนการตั้งค่าข้อความ

มัลติมีเดีย42

การเปิดหน้าจออีเมลและแอคเคาท์ .43

การเขียนและส่งอีเมล44

| | |
|-----------------------------------|------------------------------------|
| การทำงานกับไฟล์เดอแอนด์แคท์... 46 | การใช้ SmartShare.....56 |
| การเพิ่มและการแก้ไขแอดแคท์ | เพลง.....57 |
| อีเมล.....46 | การเล่นเพลง.....57 |
| เครือข่ายสังคม.....47 | การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บ |
| เครือข่ายสังคม.....47 | ข้อมูล USB.....58 |
| การเพิ่มแอดแคท์ไปยังโทรศัพท์ | วิธีบันทึกไฟล์เพลง/ |
| ของคุณ.....47 | วิดีโอในโทรศัพท์ของคุณ.....59 |
| การดูและอัปเดตสถานะของคุณ....48 | การย้ายรายชื่อจากโทรศัพท์เก่า |
| การลบแอดแคท์ออกจากโทรศัพท์ | ไปโทรศัพท์ใหม่.....60 |
| ของคุณ.....48 | การส่งข้อมูลจากโทรศัพท์โดย |
| กล้องถ่ายรูป.....49 | ใช้บลูทูธ.....60 |
| ทำความเข้าใจกับช่องมองภาพ.....49 | การใช้วิทยุ.....62 |
| การถ่ายภาพดาวน์.....50 | การค้นหาสถานี.....62 |
| เมื่อคุณถ่ายภาพแล้ว.....50 | การรีเซ็ตสถานี.....62 |
| การใช้การตั้งค่าขั้นสูง.....50 | การฟังวิทยุ.....62 |
| การดูรูปภาพที่บันทึกไว้.....52 | ยูทิลิตี้.....63 |
| กล้องวิดีโอ.....53 | การตั้งเวลาการปลุก.....63 |
| ทำความเข้าใจกับช่องมองภาพ.....53 | การใช้เครื่องคิดเลข.....63 |
| การถ่ายวิดีโอดาวน์.....54 | การเพิ่มเหตุการณ์ลงในปฏิทิน.....63 |
| หลังการถ่ายวิดีโอ.....54 | การเปลี่ยนมุมมองปฏิทิน.....64 |
| การใช้การตั้งค่าขั้นสูง.....55 | Polaris Viewer.....64 |
| การดูวิดีโอที่บันทึกไว้.....55 | บันทึกเสียง.....65 |
| มัลติมีเดีย.....56 | การบันทึกเสียงหรือเสียงพูด.....65 |
| โหมดมุมมอง.....56 | การส่งรายการบันทึกเสียง.....65 |
| มุมมองตามลำดับเวลา.....56 | เว็บไซต์.....66 |
| | บราวเซอร์.....66 |
| | การใช้แถบเครื่องมือเว็บ.....66 |

สารบัญ

| | | | |
|--|-----------|--|-----------|
| การใช้ตัวเลือก | 66 | การปล่อยสัญญาณผ่าน USB และการแบ่งปันข้อมูล | 80 |
| ตั้งค่า..... | 68 | การแบ่งปันการเชื่อมต่อข้อมูลของ โทรศัพท์โดยเป็น Portable Wi-Fi hotspot | 81 |
| การตั้งค่าซิมคู่..... | 68 | การเปลี่ยนชื่อหรือรักษาความปลอดภัย ของ Portable hotspot..... | 82 |
| ระบบไร้สายและเครือข่าย | 68 | การอัปเดตซอฟต์แวร์..... | 84 |
| ตั้งค่าการโทร..... | 70 | อัปเดตซอฟต์แวร์โทรศัพท์..... | 84 |
| เสียง..... | 71 | DivX Mobile | 85 |
| หน้าจอ..... | 72 | อุปกรณ์เสริม | 87 |
| ตำแหน่งและระบบป้องกัน | 72 | ข้อมูลทางเทคนิค | 88 |
| แอปพลิเคชัน..... | 74 | การแก้ปัญหา..... | 90 |
| บัญชีและการซิงค์..... | 74 | | |
| ความเป็นส่วนตัว..... | 74 | | |
| ที่เก็บ..... | 75 | | |
| ภาษาและคีย์บอร์ด..... | 75 | | |
| อินเทอร์เน็ตและเอาต์พุตเสียง | 75 | | |
| การช่วยสำหรับการเข้าถึง | 77 | | |
| วันที่และเวลา..... | 77 | | |
| เกี่ยวกับโทรศัพท์..... | 77 | | |
| Wi-Fi | 77 | | |
| การเปิด Wi-Fi..... | 78 | | |
| การเชื่อมต่อกับ Wi-Fi..... | 78 | | |
| การแบ่งปันการเชื่อมต่อข้อมูล ในโทรศัพท์..... | 79 | | |
| การตั้งค่าการปล่อยสัญญาณ ผ่าน USB และ Portable Wi-Fi hotspot | 79 | | |
| การแบ่งปันการเชื่อมต่อข้อมูล ของโทรศัพท์ด้วย USB | 80 | | |

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-P698f นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific

Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมี การรับรองขนาดสัญญาณแล้ว โดย การส่งสัญญาณดังกล่าวได้ กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่

- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ขณะถือแนบกับหูคือ 1.26 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 1.15 วัตต์/กก. (10 กรัม)

- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหูหรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่า

จะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็น ต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสิ้นใจของ

- LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพโดยมีประสิทธิภาพการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
 - ควรตั้งโทรทัศน์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
 - ไม่ควรทำโทรทัศน์ตกหล่น
 - ไม่ควรนำเครื่องโทรทัศน์ไว้ในที่ที่มีการสันดาปหรือการกระแทก
 - ปิดเครื่องโทรทัศน์ในบริเวณที่มีขลุ่ยบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรทัศน์ในโรงพยาบาลเนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
 - ห้ามสัมผัสโทรทัศน์ด้วยมือ
 - เบี่ยง ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรทัศน์ชารต์

เสียหายได้

- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้แบตเตอรี่ติดหรือแบตเตอรี่โดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้ อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซม แก้วที่แตกมีรอยแตก หรือราว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้อง จะไม่ครอบคลุมภายใต้การรับประกัน

- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลานานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

การทำงานอย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์ โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบน ของถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่ ขับเข้าข้างทาง แลวงจรถูกคนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์ บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจ

ทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

หมายเหตุ: เสียงที่ดังมากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็งหรือถูกกระแทกหากส่วนที่เป็นแก้วนี้แตกอย่าสัมผัสหรือพยายามดึงออกให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัดและทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

- อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้
- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
 - ห้ามใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้ง

เก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้

โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบ

กับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้า

สัมผัสแบตเตอรี่

- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานาน เพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้

ข้อความประกาศสำคัญ

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ก่อนที่จะโทรศัพท์ไปขอรับบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การจัดการแอปพลิเคชัน

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง

- 3 **แตะ ถอนการติดตั้ง** และ **ตกลง** เพื่อยกเลิกการติดตั้งแอปพลิเคชันที่คุณเลือก

2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

ยืดอายุแบตเตอรี่

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail™, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ

- บางแอปพลิเคชันที่คุณดาวน์โหลดอาจลดอายุแบตเตอรี่

การตรวจสอบระดับประจุของแบตเตอรี่

- 1 ในหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน แล้วเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะ > รวมกัน**
- 2 สถานะแบตเตอรี่ (กำลังชาร์จ, ไม่ชาร์จ) และระดับ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้แบตเตอรี่

- 1 ในหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า > เกี่ยวกับโทรศัพท์ > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่**

- 1 เวลาใช้งานของแบตเตอรี่จะแสดงอยู่ที่ด้านบนของหน้าจอ โดยแสดงระยะเวลาที่นับจากที่คุณเชื่อมต่อกับแหล่งจ่ายครั้งสุดท้าย หากเชื่อมต่อกับแหล่งจ่ายไฟ จะแสดงระยะเวลาที่นับจากที่คุณใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้ไฟฟ้าจากแบตเตอรี่จากมากไปน้อย

3. การติดตั้งระบบปฏิบัติการโอเพนซอร์ส

หากคุณติดตั้งระบบปฏิบัติการ (OS) โอเพนซอร์สในโทรศัพท์แทนที่จะใช้ OS จากผู้ผลิต โทรศัพท์ของคุณอาจทำงานผิดพลาด

ข้อความประกาศสำคัญ

คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต โทรศัพท์ของคุณจะไม่ได้รับ ความคุ้มครองตามการรับประกันอีกต่อไป

คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้อัปเดตแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market™ เท่านั้น หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ โทรศัพท์อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าทั้งหมดของแอปพลิเคชันออกจากโทรศัพท์

4. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ บนหน้าจอหลัก และแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า >**

**พิกัดและการป้องกัน >
ตั้งคาล็อคหน้าจอ > รูปแบบ**
ทำตามคำแนะนำบนหน้าจอ สำหรับการวาดแบบปลดล็อคหน้าจอ เลือก ทำต่อเพื่อป้องกันหน้าจอถัดไป เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ

ข้อควรระวัง:

สร้างแอคเคาท์ Gmail ก่อนทำการตั้งค่าแบบปลดล็อค

คำเตือน

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเขาใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาเพียง 5 ครั้งในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หาก你做การป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือ รหัสผ่าน การปลดล็อคของคุณ:

หากคุณลืม รูปแบบ: หากคุณล็อกอินบัญชี Google ในโทรศัพท์แต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น คุณจะตกลง ชื่อเขาใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืม คุณต้องทำการ Hard Reset **หากคุณลืม PIN หรือรหัสผ่าน:** หากคุณลืม PIN หรือรหัสผ่าน คุณต้องทำการ Hard Reset

ข้อควรระวัง: หากคุณทำ Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ อย่า ลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

5. การใช้งาน Hard Reset

หากไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

เมื่อปิดโทรศัพท์แล้ว ให้กดปุ่ม **หน้าหลัก** + ปุ่ม **ลดระดับเสียง** + ปุ่ม **เปิด/ปิด**ค้างไว้สักระยะหนึ่ง เมื่อหน้าจอแสดงโลโก้ LG ให้ปล่อยปุ่ม **เปิด/ปิด**

หลังจากสองสามวินาที โทรศัพท์ของคุณจะแสดงหน้าจอการกู้คืนของระบบ Android พร้อมด้วยตัวเลือก **ใช่/ไม่** หลังจากหน้าจอแสดงตัวเลือก ดานบน ให้ปล่อยปุ่มอื่นๆ

ในการเลื่อนระหว่างตัวเลือก เราสามารถใช้ปุ่ม **เพิ่ม/ลดระดับเสียง** ได้ กดปุ่ม **ลดระดับเสียง** เพื่อไปที่ตัวเลือก **ใช่** และกดปุ่ม **เปิดปิด**เครื่อง สำหรับการยืนยัน

ข้อความประกาศสำคัญ

ข้อควรระวัง: หากคุณทำ Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ และไม่สามารถย้อนกลับได้อีก ย้ำ สำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

6. การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ ให้เขาใช้จุดเชื่อมต่อไร้สาย หรือ "Hotspot" ได้ จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi**

- 2 แตะ **Wi-Fi** เพื่อเปิด และเริ่มสแกนหาเครือข่าย Wi-Fi

- รายการเครือข่าย Wi-Fi ที่มีอยู่จะปรากฏขึ้น เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ

- 3 แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายเป็นแบบเปิด คุณจะตองยืนยันว่าคุณต้องการเชื่อมต่อกับเครือข่ายโดยการแตะ **เชื่อมต่อ**

- หากเครือข่ายมีการป้องกัน คุณจะตองป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)

- 4 แถบสถานะจะแสดงไอคอนที่ระบุสถานะ Wi-Fi

7. การใช้การ์ด microSD

รูปภาพ, ไฟล์เพลง และวิดีโอสามารถบันทึกในหน่วยความจำภายนอกเท่านั้นก่อนการใส่ลงในตัว คุณตองใส่การ์ด microSD ในโทรศัพท์ก่อนหากไม่ได้ใส่

การลดหน่วยความจำคุณจะไม่สามารถถ่ายภาพหรือภาพวิดีโอได้

คำเตือน

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการลดหน่วยความจำอาจเสียหาย ในการถอดการ์ดความจำอย่างปลอดภัย ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** จากนั้นเลือก **ตั้งค่า > ที่เก็บข้อมูล > ยกเลิกการเชื่อมต่อการ์ด SD**

8. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชัน

ก่อนเปิดแอปพลิเคชันอื่นการใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช่ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชัน

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน**
- 2 เลื่อนไปยังแอปพลิเคชันที่ต้องการ และแตะ **บังคับหยุด** เพื่อหยุดใช้งาน

ข้อความประกาศสำคัญ

เคล็ดลับ หากต้องการกลับไปยังแอปพลิเคชันก่อนหน้านี้ ให้กดปุ่มหน้าจอหลักค้างไว้ หน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

9. การตัดลอก LG PC Suite จากการ์ด SD

LG PC Suite IV คือโปรแกรมที่ช่วยให้คุณเชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์โดยใช้สายเคเบิลการสื่อสารข้อมูล USB เมื่อเชื่อมต่อแล้วคุณ สามารถใช้ฟังก์ชันของโทรศัพท์มือถือบนคอมพิวเตอร์ได้

ฟังก์ชันหลักของ LG PC Suite IV

- สร้าง แก๊จ และลบข้อมูลโทรศัพท์ได้ง่าย
- ซิงโครไนซ์ข้อมูลจากคอมพิวเตอร์และโทรศัพท์ (รายชื่อ,

ปฏิทิน, ข้อความ(SMS), บุคมารค และบันทึกการโทร)

- โอนไฟล์มัลติมีเดียได้ง่าย (รูปถ่าย, วิดีโอ, เพลง) โดยลากและวางระหว่างคอมพิวเตอร์และโทรศัพท์
- โอนข้อความ SMS จากโทรศัพท์ไปยังคอมพิวเตอร์
- อัปเดตซอฟต์แวร์โดยไม่สูญเสียข้อมูล

การตั้งค่า LG PC Suite จากการ์ดหน่วยความจำ microSD

- 1 ใส่การ์ดหน่วยความจำ microSD ในโทรศัพท์ (อาจใส่ไว้แล้ว)
- 2 ก่อนเชื่อมต่อสายข้อมูล USB ให้ตรวจสอบว่าเปิดใช้โหมด **ที่เก็บข้อมูล** เท่านั้น ในโทรศัพท์ของคุณแล้ว (ในเมนู แอปพลิเคชัน ให้เลือก ตั้งค่า แล้วเลือกที่เก็บข้อมูล แล้วเลือกของ

ที่เก็บข้อมูลเท่านั้น)

- 3 ใช้สายเคเบิลข้อมูล USB เพื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์
- 4 ในแถบสถานะ ให้ลากไอคอน USB
 - เลือก **เชื่อมต่อ USB แล้ว และ เปิดใช้ที่เก็บข้อมูล USB** แล้วแตะที่ตกลง เพื่อยืนยัน
 - คุณสามารถดูเนื้อหาของที่จัดเก็บข้อมูลบนคอมพิวเตอร์ของคุณและโอนไฟล์ได้
- 5 คัดลอกไฟล์เดอร์ LG PC Suite IV ในที่เก็บข้อมูลไปยังคอมพิวเตอร์
 - เรียกใช้ไฟล์ LGInstaller.exe ในคอมพิวเตอร์และทำตามคำแนะนำ

* เมื่อทำการติดตั้ง LG PC Suite IV เสร็จเรียบร้อย ให้เปิดการใช้โหมด **ที่เก็บข้อมูลเท่านั้น**

เพื่อเริ่มใช้งาน LG PC Suite IV
หมายเหตุ: อาย้ายหรือลบไฟล์โปรแกรมอื่นที่ติดตั้งในการดหน่วยความจำของคุณ เนื่องจากอาจทำให้แอปพลิเคชันที่ติดตั้งไวลวงหน้าเสียหายได้

10. การเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้ USB

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้ง LG PC Suite ในคอมพิวเตอร์ดาวน์โหลดโปรแกรมจากเว็บไซต์ LG (www.lg.com) ไปที่ www.lg.com และเลือกภูมิภาค ประเทศ และภาษา สำหรับข้อมูลเพิ่มเติม ให้ไปที่หน้าต่างๆ ในไซต์ เนื่องจาก PC Suite อยู่ในการ์ด microSD คุณเพียงแคคัดลอกไปยังคอมพิวเตอร์

LG-P698f ไม่สนับสนุน:

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)

ข้อความประกาศสำคัญ

- สิ่งที่ต้องทำในปฏิทิน
- บันทึกลง
- แอปพลิเคชัน Java

หลังจากติดตั้ง PC Suite IV
คุณจะมีคู่มือผู้ใช้ในเมนูวิธีใช้

- 1 ใช้สายเคเบิล USB เพื่อเชื่อมต่อโทรศัพท์กับพอร์ต USB ที่คอมพิวเตอร์ เมื่อเชื่อมต่อแล้ว คุณจะได้รับการแจ้งว่าสร้างการเชื่อมต่อ USB แล้ว
- 2 เปิดแถบการแจ้ง และแตะเชื่อมต่อ USB แล้ว
- 3 แตะ **เปิดใช้ที่เก็บข้อมูล USB** เพื่อยืนยันว่าคุณต้องการโอนไฟล์ระหว่างการด microSD ของโทรศัพท์และคอมพิวเตอร์

คุณจะได้รับการแจ้งเมื่อโทรศัพท์เชื่อมต่อเป็นที่เก็บข้อมูล USB การด microSD ของโทรศัพท์จะเชื่อมต่อเป็นไดรฟ์ในคอมพิวเตอร์คุณสามารถคัดลอกไฟล์ระหว่างการด microSD ได้

หมายเหตุ: เมื่อยกเลิกการติดตั้ง PC Suite IV ไดรเวอร์ของ USB และบลูทูธ จะไม่ถูกลบโดยอัตโนมัติ คุณต้องถอนการติดตั้งด้วยตนเอง

เคล็ดลับ ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้ง และแตะ **ปิดที่เก็บข้อมูล USB**

ระหว่างเวลานี้ คุณจะไม่สามารถเข้าใช้การ์ด microSD จากโทรศัพท์ คุณจึงไม่สามารถใช้แอปพลิเคชันที่ใช้การ์ด microSD เช่น กล้อง คลังภาพ และเพลง

ในการยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ ให้ทำตามคำแนะนำในคอมพิวเตอร์ในการยกเลิกการเชื่อมต่ออุปกรณ์ USB อย่างถูกต้อง เพื่อหลีกเลี่ยงการสูญเสียข้อมูลในการด

- 1 เปิดแถบการแจ้ง และแตะ **ปิดที่เก็บข้อมูล USB**
- 2 ยกเลิกการเชื่อมต่อ

อุปกรณ์ USB กับคอมพิวเตอร์ของคุณอย่างปลอดภัย

11. การปลดล็อคหน้าจอ เมื่อใช้การเชื่อมต่อ ข้อมูล

หน้าจอจะดับลงหากไม่ได้แตะเป็นระยะเวลาหนึ่งเมื่อใช้การเชื่อมต่อข้อมูล ในการเปิดหน้าจอ LCD ให้แตะที่หน้าจอ

12. ถูโทรศัพท์ตั้งขึ้น

โปรดถือโทรศัพท์ตั้งขึ้นในลักษณะเดียวกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P698f มีเสาอากาศภายในระมัดระวังอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่อง เนื่องจากจะส่งผลให้ประสิทธิภาพการทำงานลดลงในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถือบริเวณส่วนล่างของโทรศัพท์ซึ่ง

เป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดั่งกล่าวส่งผลกับคุณภาพการโทร

13. เมื่อนำจอค้าง

หากหน้าจอค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน: ถอดแบตเตอรี่ ใส่กลับเข้าไป แล้วเปิดโทรศัพท์ หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

14. อย่าเชื่อมต่อ โทรศัพท์ของคุณ ในขณะที่ทำการ เปิด/ปิดคอมพิวเตอร์

ตรวจสอบว่าคุณได้ยกเลิกการเชื่อมต่อสายเคเบิลข้อมูลระหว่างโทรศัพท์และคอมพิวเตอร์แล้ว การเชื่อมต่อค้างไว้อาจทำให้เกิดข้อผิดพลาดในคอมพิวเตอร์

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หากต้องการเปิดโทรศัพท์ ให้กดปุ่ม เปิด/ปิดเครื่อง ค้างไว้ 3 วินาที

หากต้องการปิดโทรศัพท์ ให้กดปุ่ม เปิด/ปิดเครื่อง ค้างไว้ 3 วินาที จากนั้นแตะ **ปิดเครื่อง** แล้วแตะ **ตกลง**

ลำโพง

เซนเซอร์

ปุ่มกลับ 


กลับไปยังหน้าจอ
ก่อนหน้า

ปุ่มหน้าหลัก 

กลับไปยังหน้าหลัก
จากหน้าจอใดๆ

ปุ่มเมนู 

ตรวจสอบว่ามีตัวเลือก
อะไรบ้าง

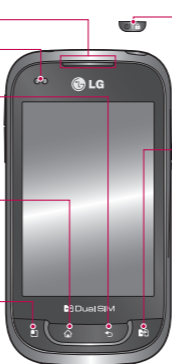

ปุ่มเปิด/ปิดเครื่อง
/ปุ่มล็อค

เปิดหรือปิดเครื่องโดย
กดปุ่มนี้ค้างไว้

ปุ่มสลับซิม 


- กดปุ่มสำหรับการเลือกซิม1/
ซิม2 (ซิมที่เลือกจะมีเครื่อง
หมายถ่วงสีเหลี่ยมบน
ไอคอน RSSI)
- กดปุ่มค้างเพื่อไปที่
การตั้งค่าซิมคู่

หมายเหตุ: เซนเซอร์

เมื่อรับสายหรือโทรออก เซนเซอร์จะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคปุ่มกดแบบสัมผัสโดยการรับรู้เมื่อโทรศัพท์อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้อุปกรณ์สัมผัสทำงานโดยไม่ตั้งใจขณะโทรศัพท์

คำเตือน

การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ ห้ามติดฟิล์มป้องกันบนเซนเซอร์ของ LCD เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้



ปุ่มปรับระดับเสียง


- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง

ช่องเสียบอุปกรณ์
ชาร์จ, ช่องเสียบสาย
เคเบิล micro USB

ช่องเสียบหูฟังสเตอริโอ



ปุ่มเปิด/ปิดเค
รื่อง/ปุ่มลัด

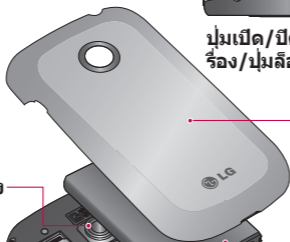

ฝาครอบ
ด้านหลัง

เลนส์กล้อง

ช่องเสียบ
การ์ดความจำ
Micro SD

แบตเตอรี่

ช่องเสียบซิม2

ช่องเสียบซิม1


เสาอากาศภายใน

ไมโครโฟน

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

การใส่ซิมการ์ดและแบตเตอรี่

- 1 ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคง ใช้นิ้วหัวแม่มือของมืออีกข้าง ออกแรงกดฝาครอบด้านหลัง แล้วถอดฝาครอบแบตเตอรี่ออก

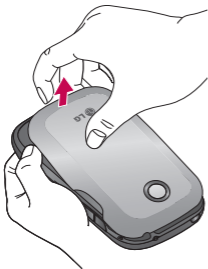

- 2 เลื่อนซิมการ์ดเข้าไปในช่องเสียบซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง




- 3 ใส่แบตเตอรี่โดยให้หน้าสัมผัสสีทองในโทรศัพท์และแบตเตอรี่ตรงกัน



4 ปิดฝาครอบด้านหลัง



การชาร์จโทรศัพท์

เลื่อนเปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านข้างเสียบอุปกรณ์ชาร์จ แลวเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟคุณต้องชาร์จโทรศัพท์ LG-P698f จนกว่าจะเห็น 



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มตบใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


การติดตั้งการ์ดหน่วยความจำ

ในการจัดเก็บไฟล์มัลติมีเดีย เช่น ภาพที่ถ่ายโดยใช้กล้องถ่ายรูปในตัว คุณต้องใส่การ์ดหน่วยความจำในโทรศัพท์


หมายเหตุ: โทรศัพท์ LG-P698f สนับสนุนการดหน่วยความจำสูงสุดไม่เกิน 32 กิกะไบต์

ในการใส่การ์ดหน่วยความจำ:

- 1 ถอดฝาครอบด้านหลัง

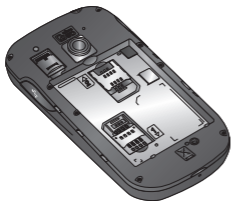

- 2 ใส่การ์ดหน่วยความจำลงในช่องเสียบ โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

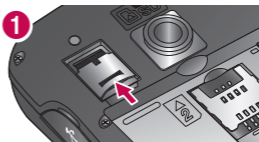

- 3 ปิดฝาปิดช่องเสียบ

คำเตือน

อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่จัดเก็บในการ์ดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ

การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อน จึงจะสามารถใช้งานการ์ดได้
หมายเหตุ: ไฟล์ทั้งหมดในการ์ด จะถูกลบออกเมื่อคุณฟอร์แมตการ์ด

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนไปและแตะ **ตั้งค่า >** ที่เก็บข้อมูล

3 แตะ **ยกเลิกการเชื่อมต่อการ์ด SD**

4 แตะ **ลบการ์ด SD** แล้วยืนยันการเลือกของคุณ

5 หากคุณตั้งค่าล๊อคแบบให้ป้อนข้อมูลล๊อคแบบแล้วเลือก **ลบทุกสิ่ง** การ์ด จะได้รับการฟอร์แมตและพร้อมสำหรับการใช้งาน

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดสก์ทอปจะแตกต่างกันไปจากเดิมหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนำวิเกตโทรศัพท์ของคุณ

แตะ – ในการเลือกเมนู/ตัวเลือก หรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/ตัวเลือกนั้น

แตะค้างไว้ –

ในการเปิดเมนูตัวเลือก หรือจับวัตถุที่คุณต้องการขยาย ให้แตะวัตถุที่คุณต้องการขยายค้างไว้

ลาก – ในการเลื่อนดูรายการหรือเคลื่อนที่ซ้ำๆ ให้ลากผ่านหน้าจอ

ลากนิ้ว – ในการเลื่อนดูรายการหรือเคลื่อนที่อย่างรวดเร็ว ให้ตวัดนิ้วผ่านหน้าจอสัมผัส (ลากอย่างรวดเร็วแล้วปล่อย)

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก

หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแนนอน

- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการระวังอย่าแตะโดนปุ่มอื่นๆ

ล็อคโทรศัพท์ของคุณ

ในขณะที่คุณไม่ได้ใช้งาน LG-P698f ให้กดปุ่มเปิด/ปิดเครื่องเพื่อล็อคโทรศัพท์ของคุณ ซึ่งจะช่วยป้องกันการกดปุ่มโดยไม่ได้ตั้งใจและประหยัดพลังงานแบตเตอรี่

นอกจากนี้ หาก你不ใช้โทรศัพท์ชั่วคราว หน้าจอหลักหรือหน้าจออื่นที่คุณกำลังดูจะเปลี่ยนเป็นหน้าจอล็อคเพื่อประหยัดพลังงานแบตเตอรี่

หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าแบบการล็อค โปรแกรมเหล่านั้นอาจจะยังคงทำงานอยู่ในโหมด ล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมด

ล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารขอมูล)

การตั้งค่าแบบปลดล็อค:

คุณสามารถวาดแบบปลดล็อคของคุณได้โดยการเชื่อมต่อจุด หากคุณตั้งค่าแบบไว้ หน้าจอ

ของโทรศัพท์คุณจะถูกล็อค ในการปลดล็อคโทรศัพท์ให้วาดแบบตามที่ติดตั้งไว้บน


หน้าจอ **ข้อควรระวัง:** เมื่อคุณจะทำกรตั้งค่าแบบปลดล็อคคุณจำเป็นต้องสร้างแอดเดสที่ Gmail ก่อน

ข้อควรระวัง: หากมีการวาดแบบผิดติดต่อกันมากกว่า 5 ครั้ง คุณจะไม่สามารถปลดล็อคโทรศัพท์ได้ ในกรณีนี้ ข้อมูลส่วนตัวและข้อมูลที่ดาวน์โหลดทั้งหมดจะถูกลบ

ปลดล็อคหน้าจอ

เมื่อไม่มีการใช้งานโทรศัพท์ LG-P698f เครื่องจะกลับไปล็อคหน้าจอ ใช้นิ้วมือของคุณลากจากกลาง

ขึ้นบนเพื่อปลดล็อคหน้าจอ

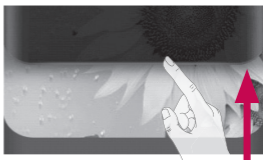

โหมดเงียบ

ในแถบการแจ้ง  ให้แตะ  เพื่อเปลี่ยน

หน้าหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูพานελ นอกจากนี้คุณยังสามารถปรับแต่งพานελด้วย Widget, ปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ชื่นชอบ

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

หน้าจอลหลักของคุณ

ในหน้าจอลหลัก คุณสามารถดูปุ่มด่วนได้ที่ด้านล่างหน้าจอล ปุ่มด่วนจะทำให้สามารถเขาใช้งานฟังก์ชันที่ใช้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะไอคอน โทรศัพท์ เพื่อแสดงปุ่มหมายเลขแบบสัมผัสสำหรับใช้โทรออก



แตะไอคอน รายชื่อ เพื่อเปิดรายชื่อ



แตะไอคอน ข้อความ เพื่อเข้าใช้เมนูข้อความ นี่คือนี่ซึ่งคุณสามารถสร้างข้อความใหม่ได้



แตะแท็บ แอปพลิเคชัน ด้านล่างหน้าจอล คุณสามารถดูแอปพลิเคชันที่ติดตั้งทั้งหมดได้ในการเปิดแอปพลิเคชันที่ต้องการ เพียงแตะไอคอนในรายการแอปพลิเคชัน


หมายเหตุ: แอปพลิเคชันที่โหลดไว้วางหน้าจอลแตกต่างกันตามซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

การเพิ่ม Widget ในหน้าจอลหลักของคุณ

คุณสามารถปรับแต่งหน้าจอลหลักของคุณโดยเพิ่มปุ่มลัด, Widget หรือโฟลเดอร์ เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่ม Widget ที่ใช้อย่างน้อยในหน้าจอลหลัก

- 1 บนหน้าจอลหลัก ให้กดปุ่ม **เมนู** และเลือก **เพิ่ม** หรือ **แตะค้าง** ไว้บนส่วนที่ว่างของหน้าจอลหลัก
- 2 ในเมนู **โหมดแก้ไข** ให้แตะประเภทรายการที่คุณต้องการเพิ่ม
- 3 เช่น เลือก **โฟลเดอร์** จากรายการแล้วแตะ
- 4 จากนั้นคุณ จะเห็นไอคอนโฟลเดอร์ใหม่บนหน้าจอลหลัก ลากไปยังตำแหน่งที่ต้องการบนพาเนลที่ต้องการแล้วยกนิ้วออกจากหน้าจอล

เคล็ดลับ ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลักจากเมนู **แอปพลิเคชัน** ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

เคล็ดลับ ในการลบไอคอนแอปพลิเคชันออกจากหน้าจอหลัก ให้แตะค้างไว้ที่ไอคอนปุ่มลัดที่คุณต้องการลบ แล้วลากไปยัง 

หมายเหตุ: คุณไม่สามารถลบแอปพลิเคชันที่โหลดไวล่วงหน้าได้ (คุณสามารถลบได้เพียงไอคอนบนหน้าจอเท่านั้น)

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

- 1 แตะปุ่ม **หน้าหลัก** ค้างไว้ หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน หรือแตะปุ่ม **กลับ** เพื่อกลับไปแอปพลิเคชันปัจจุบัน

การใช้ซิมคู่

เมื่อใส่สองซิมการ์ดในโทรศัพท์ของคุณ จะแสดงข้อมูลซิมการ์ดบนแถบการแจ้ง เมื่อกดปุ่มสลับซิม จะสลับซิมที่ใช้งานปัจจุบัน

หมายเหตุ:

- หากใส่ซิมการ์ดเดียวหรือปิดซิมหนึ่ง การสลับซิมจะใช้ไม่ได้ และปุ่มสลับซิมจะไม่ทำงาน
- ระหว่างการโทร ส่งข้อความ หรือใช้บริการข้อมูล RSSI ของอีกซิมหนึ่งอาจแสดงเป็น 'ไม่มีบริการ' เนื่องจากสถานะบริการเครือข่าย

คำเตือน

หากคุณอยู่นอกพื้นที่บริการ อาจทำให้อุปกรณ์ของคุณใช้พลังงานแบตเตอรี่มากขึ้น

แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนสุดของหน้าจอ

หน้าจอหลักของคุณ



แตะและเลื่อนแถบการแจ้งเตือนด้วยนิ้วมือ หรือ ในหน้าจอหลัก แตะปุ่มเมนู แล้วเลือก การแจ้งเตือน ในหน้าจอนี้ คุณจะสามารถตรวจสอบและจัดการเสียง, Wi-Fi, บลูทูธ และ GPS รวมถึงการแจ้งเตือนอื่นๆ ได้

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายุแบตเตอรี่ และบลูทูธที่ใช้งานและการเชื่อมต่อข้อมูล

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ



[แถบสถานะ]

| ไอคอน | รายละเอียด |
|-------|-----------------------------|
| | ไม่มีซิมการ์ด |
| | ไม่มีสัญญาณ |
| | โหมดเครื่องบิน |
| | เชื่อมต่อกับเครือข่าย Wi-Fi |
| | ซุดหูฟังแบบใช้สาย |

| ไอคอน | รายละเอียด |
|---|---------------------------|
|  | กำลังใช้สาย |
|  | พักสาย |
|  | ลำโพง |
|  | ปิดไมโครโฟนโทรศัพท์ |
|  | สายไม่ได้รับ |
|  | เปิดบลูทูธ |
|  | เชื่อมต่อกับอุปกรณ์บลูทูธ |
|  | ค่าเตือนระบบ |
|  | ตั้งปลุก |
|  | ข้อความเสียงใหม่ |
|  | ปิดเสียงเรียกเข้า |
|  | โหมดสัน |
|  | ชาร์จแบตเตอรี่เต็มแล้ว |

| ไอคอน | รายละเอียด |
|---|--|
|  | กำลังชาร์จแบตเตอรี่ |
|  | ข้อมูลเข้าและออก / เครือข่ายข้อมูลเริ่มต้น |
|  | โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB |
|  | กำลังดาวน์โหลดข้อมูล |
|  | กำลังอัปโหลดข้อมูล |
|  | กำลังรับสัญญาณ GPS |
|  | กำลังรับข้อมูลตำแหน่งจาก GPS |
|  | 3 การแจ้งเตือนไม่ได้ดู |
|  | กำลังซิงค์ข้อมูล |
|  | ดาวน์โหลดเสร็จสิ้น |
|  | Gmail ใหม่ |

หน้าจอหลักของคุณ


| ไอคอน | รายละเอียด |
|---|--|
|  | ข้อความ Talk ใหม่ |
|  | ข้อความใหม่ |
|  | กำลังเล่นเพลง |
|  | เหตุการณ์ที่จะเกิดขึ้น |
|  | เปิดวิทยุ FM ในแบ็คกราวด์ |
|  | เปิด SmartShare |
|  | SmartShare รองขอแบ่งปัน |
|  | กำลังใช้การปล่อย สัญญาณผ่าน USB |
|  | กำลังใช้งาน Portable Wi-Fi hotspot |



| ไอคอน | รายละเอียด |
|---|--|
|  | กำลังใช้งานทั้งการ ปล่อยสัญญาณผ่าน USB และ Portable hotspot |

แป้นพิมพ์บนหน้าจอ


คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะที่ลวดข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกดและการป้อนข้อความ


 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่


  แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณ


สามารถแตะที่บับนี้ค้างไว้
เพื่อดูเมนูตั้งค่าได้

 แตะเพื่อดูหรือแตะค้าง
เพื่อเปลี่ยนภาษาที่ใช้เขียน

 แตะเพื่อเว้นวรรค

 แตะเพื่อขึ้นบรรทัดใหม่
ในฟิลด์ข้อความ

 แตะเพื่อลบตัวอักษร
ก่อนหน้า

 แตะเพื่อซ่อนแป้นพิมพ์
บนหน้าจอ

ตัวอักษรจากภาษาอื่นๆ แล้ว
เลือกตัวอักษรพิเศษที่คุณ
ต้องการ

การป้อนตัวอักษรที่ใช้ สำหรับเนนเสียง


เมื่อคุณเลือกภาษาฝรั่งเศส
หรือสเปนเป็นภาษาที่ใช้ป้อน
ข้อความ คุณสามารถป้อนตัว
อักษรพิเศษของภาษาฝรั่งเศส
หรือสเปนได้ (เช่น "á")

ตัวอย่างเช่น ในการป้อน "á"
ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่ม
ชุมเขาจะขยายใหญ่ขึ้นและ
แสดง

การตั้งค่าแอคเคาท์ Google

ครั้งแรกที่คุณเปิดแอปพลิเคชัน Google บนโทรศัพท์ คุณจะต้อง ไซนอินด้วยแอคเคาท์ Google ของคุณ หากคุณไม่มีแอคเคาท์ Google คุณต้องสร้างแอคเคาท์

การสร้างแอคเคาท์ Google

- 1 ในหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน  เพื่อเปิดเมนูแอปพลิเคชัน
- 2 แตะ **Gmail** แล้วแตะ **ถัดไป** > **สร้าง** เพื่อเริ่มวิซาร์ดตั้งค่า Gmail™
- 3 ป้อนชื่อของคุณและชื่อผู้ใช้ สำหรับแอคเคาท์ Google
- 4 แตะ **ถัดไป** ในขณะที่โทรศัพท์ของคุณกำลังติดต่อกับ เซิร์ฟเวอร์ Google และกำลัง ตรวจสอบชื่อใช้นั้น
- 5 ป้อนรหัสผ่านของคุณสองครั้ง ปฏิบัติตามคำแนะนำและป้อน ข้อมูลที่จำเป็นและไม่จำเป็น เกี่ยวกับแอคเคาท์ โปรดรอ

ในระหว่างที่เซิร์ฟเวอร์สร้าง แอคเคาท์ของคุณ

การไซนอินแอคเคาท์ Google ของคุณ

- 1 ป้อนอีเมลแอตเดรส และรหัสผ่านของคุณ จากนั้นแตะ **ลงชื่อเข้าใช้** รอให้ระบบไซนอินคุณ
 - 2 หลังจากไซนอิน คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จาก บริการต่างๆ ของ Google บนโทรศัพท์ของคุณ
 - 3 เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ (ขึ้นอยู่กับ การตั้งค่าการซิงโครไนซ์ของคุณ)
- หลังจากไซนอิน คุณจะสามารถใช้ บริการต่างๆ ของ Google บนโทรศัพท์ของคุณ




ข้อสำคัญ!

- บางแอปพลิเคชัน เช่น ปฏิทิน จะสามารถทำงานได้กับแอคเคาท์ Google แรกที่คุณเพิ่มเท่านั้น หากคุณต้องการใช้มากกว่าหนึ่งแอคเคาท์ Google ในโทรศัพท์ของคุณ โปรดตรวจสอบให้แน่ใจว่าคุณทำการไซนอินด้วยแอคเคาท์ที่คุณต้องการใช้งานกับแอปพลิเคชันนั้นๆ เช่นปฏิทิน ก่อนการใช้งาน เมื่อคุณทำการไซนอิน รายชื่อ, ขอความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ หากคุณไม่ได้ไซนอินแอคเคาท์ Google ระหว่างการตั้งค่า คุณจะตองไซนอินหรือสร้างแอคเคาท์ Google ในครั้งแรกที่คุณเริ่มต้นแอปพลิเคชันที่ต้องใช้ เช่น Gmail หรือ Android Market™

- หากคุณมีแอคเคาท์องค์กรของบริษัทหรือองค์กรอื่น แผนกไอทีของคุณอาจมีคำแนะนำพิเศษเกี่ยวกับวิธีไซนอินแอคเคาท์

การโทร


การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้แตะไอคอน **ล้าง**
- 3 แตะที่ไอคอน **โทร**  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอน **วางสาย** 

เคล็ดลับ ในการป้อน “+” เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ **0+**

เคล็ดลับ หากใส่และเปิดใช้งานซิมการ์ดทั้งคู่ สามารถเลือกซิม1/ซิม2 ในหน้าจอโทรได้โดยใช้ปุ่มการสลับซิม

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักขระตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **ค้นหา**

- 3 ในรายชื่อ ให้แตะรายชื่อที่คุณต้องการโทรออก



การรับสายและการปฏิเสธสายเรียกเขา



เมื่อโทรศัพท์ดังขึ้น แตะที่ไอคอน **รับสาย**  แตะที่ไอคอน **ปฏิเสธ**  ไปทาง
ลากแถบ **ข้อความขอโทษ** จากด้านล่าง หากคุณต้องการส่ง

การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์


การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ  ปุ่ม **เมนู** และเลือก .
- 2 หมายเหตุหมายเลขโทรออกหรือคนหารายชื่อ

- 3 แตะไอคอน โทร  เพื่อโทรออก
- 4 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะลือคและพักสายไว้
- 5 แตะหมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่  รวมสาย เพื่อทำการประชุมสาย
- 6 ในการวางสายที่ใช้ ให้แตะสิ้นสุด หรือกดปุ่มหน้าหลัก และเลื่อนแถบการแจ้งเตือน และเลือก วางสาย

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร

ในหน้าจอหลัก ให้แตะ  และเลือกแท็บ บันทึกการโทร ดูรายการสายที่โทรออก ได้รับ ไม่ได้รับ และโทรด้วยเสียงทั้งหมด

เคล็ดลับ แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ กดปุ่ม เมนู จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนแล้วแตะ **ตั้งค่า**
- 3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ

รายชื่อ




เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

ในหน้าจอหลัก

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะ ค้นหา และป้อนชื่อ โดยใช้แป้นพิมพ์

การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วกดปุ่ม **เมนู** แตะ **เพิ่มในรายชื่อ** และ **สร้างรายชื่อใหม่**
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะที่  เลือกจาก **ถ่ายภาพ** หรือ **เลือกจากคลังภาพ**
- 3 เลือกประเภทรายชื่อโดยแตะ  เลือกว่าจะบันทึกรายชื่อไปยังโทรศัพท์หรือซิม (ซิม 1/ซิม 2)


- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ

- 5 แตะ **บันทึก**


เพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะที่ดาวทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเหลือง

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท


- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะที่แท็บ **กลุ่ม** เลือกรายการโปรดที่ด้านบนสุดของรายการ แล้วเลือกรายชื่อที่ต้องการดูรายละเอียด
- 3 แตะที่ดาวสีทองทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายชื่อเพื่อนสนิท

ข้อความ/อีเมล

ข้อความ

โทรศัพท์ LG-P698f
ของคุณได้ผสมผสาน SMS และ
MMS ไว้ในเมนูที่ใช้งานเพียง
เมนูเดียว

การส่งข้อความ

- 1 **แตะไอคอน**  บนหน้าจอหลักและแตะ **ข้อความใหม่** เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิลด์ถึง ขณะที่คุณป้อนรายชื่อรายชื่อที่ตรงกัน จะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณสามารถเพิ่มรายชื่อหลายรายการได้

บันทึก: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 **แตะ ป้อนข้อความ** เพื่อเริ่มต้นป้อนข้อความ

- 4 กดปุ่ม **เมนู** เพื่อเปิดเมนูตัวเลือก เลือกจาก โทร, เพิ่มเรื่อง, แนบ, แทรกสไมล์, ยกเลิก (ลบ), ทุกข้อความ ฯลฯ
- 5 **แตะที่ ส่ง** เพื่อส่งข้อความ
- 6 หน้าจอจะเปิดขึ้น พร้อมมีชื่อ/หมายเลขผู้รับ ตามด้วยข้อความ การตอบกลับปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เรดข้อความจะถูกสร้างขึ้น

เคล็ดลับ หากใส่และเปิดใช้งานซิมการ์ดทั้งคู่ สามารถเลือกซิม1/ซิม2 ในหน้าจอโทรได้โดยใช้ปุ่มการสลับซิม

ข้อความ/อีเมลล์

คำเตือน:

การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับวิธีการเข้ารหัสและภาษาของ SMS

คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงใน SMS ข้อความดังกล่าว จะถูกแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

หมายเหตุ:

เมื่อคุณได้รับข้อความ SMS ระหว่างการใช้สาย จะมีเสียงกริ่งแจ้งเตือนให้ทราบ

กล่องเรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณ

สามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การใช้สไมลีย์

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้สไมลีย์ เมื่อเขียนข้อความใหม่ ให้กดปุ่มเมนู แล้วเลือก แทรกสไมลีย์

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ LG-P698f จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ

คำเตือน:

ในโหมดนี้ MMS ของอุปกรณ์ จะแนะนำผู้ใช้ในการสร้างและส่งข้อความที่มีเนื้อหาของ Core MM Content Domain การแนะนำนี้มีให้ผ่านทางข้อความค่าเตือน

หมายเหตุ: การตั้งค่าข้อความจากระบบอาจสนับสนุนสำหรับซิม 1 เท่านั้น

การเปิดหน้าจออีเมลและแอคเคาท์

คุณสามารถใช้แอปพลิเคชันอีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Google Mail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange

การเปิดแอปพลิเคชันอีเมล

จากหน้าจอหลัก ให้แตะแอปพลิเคชัน-> อีเมล เลือกผู้ให้บริการอีเมล

วิศวารด์ตั้งค่าจะเปิดขึ้นเพื่อช่วยให้คุณเพิ่มอีเมล

แอคเคาท์ หลังจากตั้งค่าเริ่มต้นแล้ว

อีเมล จะแสดงข้อมูลของ ถาดเข้า ของคุณ (หากคุณมีเพียงแอคเคาท์เดียว)

หรือหน้าจอ แอคเคาท์ (หากคุณมีหลายแอคเคาท์)หน้าจอแ

แอคเคาท์

หน้าจอ แอคเคาท์

จะแสดงรายการ ถาดเข้ารวม และแอคเคาท์อีเมลแต่ละแอคเคาท์ของคุณ

- 1 การเปิดแอปพลิเคชัน อีเมล หากคุณไม่ได้ อยู่ที่หน้าจอแอคเคาท์ ให้กดปุ่มเมนู และแตะ แอคเคาท์
- 2 เลือกผู้ให้บริการอีเมล



- แตะเพื่อเปิดถาดเข้ารวม ซึ่งมีข้อความที่รับจากแอคเคาท์ของคุณทั้งหมด



- แตะเพื่อเปิดรายการข้อความที่คุณเพิ่งติดตาม



- แตะไอคอนโฟลเดอร์เพื่อเปิดโฟลเดอร์

แอคเคาท์คุณสามารถแตะที่แอคเคาท์เพื่อดู ถาดเข้า แอคเคาท์ที่คุณใช้สำหรับส่งอีเมลตามค่าเริ่มต้น

ข้อความ/อีเมล

จะมีเครื่องหมายถูกเลือกไว้อยู่

การเปิดถาดเข้ารวม

หากคุณกำหนดค่าให้มีแอคเคาท์ที่ใช้สำหรับส่งและรับอีเมลมากกว่าหนึ่งแอคเคาท์ คุณสามารถดูข้อความทั้งหมดที่ส่งไปยังแอคเคาท์ต่างๆ ได้ใน ถาดเข้ารวม ของคุณ

1 แตะ **อีเมล**

2 แตะ **ถาดเข้ารวม**

(ในหน้าจอแอคเคาท์)
ข้อความในถาดเข้ารวมจะมีรหัสสีแสดงอยู่ทางด้านซ้ายของข้อความ แบ่งตามแอคเคาท์ โดยสีที่ใช้จะเป็นสีเดียวกับที่ใช้กับแอคเคาท์ที่แสดงอยู่ในหน้าจอ แอคเคาท์อีเมลล่าสุดในแอคเคาท์เท่านั้นที่จะถูกดาวน์โหลดลงในโทรศัพท์ของคุณ ในการดาวน์โหลดข้อความอีเมลเพิ่มเติม (ก่อนหน้า) ให้แตะ

โหลดข้อความเพิ่มเติมที่ด้านล่างของรายการอีเมล

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ

- 1 เมื่ออยู่ในแอปพลิเคชัน **อีเมล** ให้กดปุ่ม **เมนู** และ **แตะ เขียนข้อความ**
- 2 ป้อนแอตเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษรแอตเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้นคั่น แอตเดรสแต่ละแอคเคาท์ด้วยเครื่องหมายจุลภาค
- 3 แตะปุ่ม **เมนู** แล้วแตะ **เพิ่ม Cc/Bcc** เพื่อส่งสำเนาหรือสำเนาซ่อนของเมลไปยังรายชื่อ/อีเมลแอตเดรสอื่น
- 4 ป้อนตัวอักษรในข้อความ

1 กดปุ่ม เมนู และแตะ เพิ่ม
สิ่งที่แนบ เพื่อแนบไฟล์ที่
คุณต้องการแนบบนกับ
ข้อความของคุณ

2 แตะปุ่ม ส่ง

หากคุณยังไม่พร้อมที่จะ
ส่งข้อความ ให้แตะปุ่ม
บันทึกเป็นร่าง เพื่อบันทึก
ข้อความในโฟลเดอร์ร่าง
และข้อความฉบับร่างใน
โฟลเดอร์ ร่างเพื่อจัดการ
กับข้อความต่อ ข้อความ
ของคุณจะถูกบันทึกเป็น
ร่างเช่นกัน หากคุณแตะ
ปุ่ม **กลับ**  ก่อนทำ
การส่งข้อความ แตะปุ่ม
ยกเลิก

เพื่อยกเลิกและลบข้อความ
รวมทั้งร่างที่บันทึก
ไว้ด้วย หากคุณไม่ได้เชื่อม
ต่อกับเครือข่าย ตัวอย่างเช่น
หากคุณกำลังเปิดใช้งาน
โหมดเครื่องบิน ข้อความ
ที่คุณต้องการส่งจะถูกเก็บ
ในโฟลเดอร์

ถาดออก จนกว่าจะเชื่อมต่อ
กับเครือข่ายอีกครั้ง หากมีข้อ
ความที่กำลังรอส่ง
อยู่ ถาดออก จะปรากฏบน
หน้าจอ แอ็คเคาท์

โปรดทราบว่าข้อความที่ส่ง
โดยใช้แอ็คเคาท์ Exchange
จะไม่บันทึกอยู่ในโทรศัพท์;
แต่จะได้รับการบันทึกไว้ใน
เซิร์ฟเวอร์ Exchange
หากคุณต้องการดูข้อความ
ที่ส่งแล้วในโฟลเดอร์ส่งแล้ว
ให้แตะ โฟลเดอร์ และแตะ
โฟลเดอร์ส่งแล้ว และเลือก
รีเฟรช จากตัวเลือกเมนู

เคล็ดลับ! เมื่อถาดเข้ามี
อีเมลใหม่เข้ามา คุณจะได้รับ
แจ้งเตือนเสียงพร้อมการสั่น

ข้อความ/อีเมล

การทำงานกับโฟลเดอร์ แอคเคาท์

แต่ละแอคเคาท์ประกอบด้วย โฟลเดอร์ ภาตเข้า, ภาตออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน

การเพิ่มและการแก้ไข แอคเคาท์อีเมล

- 1 ในการเพิ่มแอคเคาท์อีเมล ให้แตะแท็บ แอปพลิเคชัน และเลือก อีเมล
- 2 เลือก MS Exchange หรืออื่นๆ และเข้าสู่การตั้งค่าบัญชี
- 3 หากได้ตั้งค่าแอคเคาท์อีเมลไว้แล้ว คุณต้องแตะปุ่มเมนู แล้วแตะเพิ่มแอคเคาท์จากหน้าจอแอคเคาท์
- 4 ป้อนชื่อสำหรับแอคเคาท์ ยืนยันว่าคุณต้องการแสดงชื่อของคุณให้แสดงในเมล

ที่ส่งออก จากนั้นแตะปุ่มเสร็จ

การแก้ไขการตั้งค่าของแอคเคาท์

- 1 เปิดหน้าจอ แอคเคาท์
- 2 แตะค้างไว้ที่แอคเคาท์ที่คุณต้องการเปลี่ยนการตั้งค่า ในเมนูที่เปิดขึ้นมา ให้แตะตั้งค่าแอคเคาท์

การลบแอคเคาท์อีเมล

- 1 เปิดหน้าจอ แอคเคาท์
- 2 แตะค้างไว้ที่แอคเคาท์ที่คุณต้องการลบ
- 3 แตะ **นำบัญชีออก** ในเมนูที่เปิดขึ้นมา
- 4 แตะปุ่ม **ตกลง** ในกล่องโต้ตอบเพื่อยืนยันว่าคุณต้องการลบแอคเคาท์นั้น

เครือข่ายสังคม

เครือข่ายสังคม

ด้วยโทรศัพท์ของคุณ คุณสามารถใช้งานเครือข่ายสังคมและจัดไมโครบล็อกของคุณในชุมชนออนไลน์ได้ คุณสามารถอัปเดตสถานะปัจจุบัน อัปโหลดรูปภาพ และดูการอัปเดตสถานะของเพื่อนได้ตามเวลาจริง

คุณสามารถเพิ่มแอคเคาท์ Facebook, Twitter และ Myspace บนโทรศัพท์ของคุณได้ หากคุณไม่มีแอคเคาท์สามารถเยี่ยมชมเว็บไซต์เหล่านั้นได้เพื่อตั้งค่าแอคเคาท์

หมายเหตุ: เมื่อเชื่อมต่อและใช้บริการออนไลน์ อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การเพิ่มแอคเคาท์ไปยังโทรศัพท์ของคุณ

- 1 แตะหน้าจอหลักค้างไว้ เมื่อมี Widget ต่างๆ ปรากฏขึ้น ให้เลือก สังคม+  และแตะ  ปุ่มตั้งค่า คุณยังสามารถเข้าใช้ได้ด้วยวิธีอื่นบนหน้าจอหลัก เลือกตั้งค่า แอปพลิเคชัน > ตั้งค่า > แอคเคาท์และการซิงค์ > ตั้งค่า Social+
- 2 เลือกแอปพลิเคชันเครือข่ายสังคมที่คุณต้องการใช้จาก Facebook สำหรับ LG, Twitter สำหรับ LG และ MySpace สำหรับ LG
- 3 ป้อนอีเมลแอคเคาต์และรหัสผ่านชุมชนของคุณ จากนั้นแตะ Log In
- 4 โปรดรอสักครู่ขณะที่กำลังยืนยันรายละเอียดของคุณกับชุมชนของคุณ
- 5 หากคุณแตะชุมชนของคุณ คุณสามารถดูสถานะปัจจุบันของชุมชนได้

เครือข่ายสังคม

เคล็ดลับ! หากคุณเพิ่ม Widget เครือข่ายสังคมบนหน้าจอหลัก Widget จะแสดงสถานะเมื่อโทรศัพท์ของคุณอัปเดตจากเครือข่าย คุณสามารถเข้าใช้ชุมชนโดยตรงได้โดยแตะที่ Widget

การดูและอัปเดตสถานะของคุณ

- 1 คุณสามารถดูและอัปเดตเนื้อหาชุมชนได้โดยใช้ Widget Social+  ได้ทุกเมื่อ
- 2 บน Widget Social+  เลือกบริการเครือข่ายสังคมที่คุณต้องการล็อกอินแล้วคุณจะได้เห็นสถานะและเนื้อหาของคุณ
- 3 เมื่อคุณแตะที่ช่องป้อนข้อความ จะสลับหน้าจอเพื่ออัปเดตสถานะปัจจุบันพร้อมความเห็น

หรือเพื่ออัปโหลดรูปถ่าย

เคล็ดลับ! คุณสามารถอัปเดตสถานะและอัปโหลดรูปถ่ายไปยัง Facebook for LG, Twitter for LG และ MySpace for LG พร้อมกันได้โดยเลือกช่องทำเครื่องหมาย

หมายเหตุ: การดำเนินการนี้ขึ้นอยู่กับบริการเครือข่าย

เคล็ดลับ! คุณสามารถซิงโครไนซ์รายชื่อของเพื่อนกับรายชื่อของคุณได้

การลบแอคเคาท์ออกจากโทรศัพท์ของคุณ

เลือก **ตั้งค่า** >
แอคเคาท์และการซิงค์ >
เลือก
แอคเคาท์ที่คุณต้องการลบ >
แตะ **นำบัญชีออก**

กล้องถ่ายรูป

ทำความเข้าใจกับช่องมองภาพ

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของภาพ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้



โหมดวิดีโอ - เลื่อนไอคอนนี้ลงเพื่อสลับไปยังโหมดวิดีโอ

การถ่ายภาพ

คลังภาพ -แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูคลังภาพและดูภาพถ่ายที่บันทึกไว้จากภายในโหมดกล้องถ่ายรูป

ตั้งค่า -แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า ดูที่ 'การใช้การตั้งค่าขั้นสูง'


ขนาดภาพ -แตะเพื่อตั้งค่าขนาด (พิกเซล) ของภาพที่ถ่าย

โหมดภาพถ่าย - เลือกจาก อัตโนมัติ, รูปคน, ทิวทัศน์, กีฬา, กลางคืน และ พระอาทิตย์ตก

เคล็ดลับ ปิดตัวเลือกปุ่มลัดเพื่อให้หน้าจอช่องมองภาพโล่งขึ้นได้ และกึ่งกลางของช่องมองภาพหนึ่งครั้ง ในการแสดงตัวเลือกให้แตะที่หน้าจออีกครั้ง

กล้องถ่ายรูป

การถ่ายภาพด่วน

- 1 เปิดแอปพลิเคชันกล้องถ่ายรูป
- 2 ถือโทรศัพท์ในแนวนอน และหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 ที่กลางหน้าจอช่องมองภาพของโฟกัสจะเริ่มกะพริบในขณะที่กำลังพยายามจับภาพวัตถุในโฟกัส
- 4 ช่องโฟกัสจะเป็นสีเขียวเมื่อวัตถุอยู่ในโฟกัส
- 5 กดปุ่มถ่ายภาพ คุณสามารถกดปุ่มถ่ายภาพได้ไม่ว่าช่องโฟกัสจะเป็นสีเขียวหรือไม่
- 6 กดปุ่มถ่ายภาพ 

เมื่อคุณถ่ายภาพแล้ว

ภาพที่ถ่ายจะปรากฏบนหน้าจอ

แบ่งปัน และเพื่อแบ่งปันรูปภาพของคุณโดยใช้ **SmartShare, บลูทูธ, อีเมล, Gmail, ข้อความ,**

Picasa หรือ Social+


หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

เคล็ดลับ หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันรูปภาพของคุณกับชุมชน SNS ได้

ตั้งค่าเป็น และเพื่อใช้ภาพเป็น **ไอคอนรายชื่อ** หรือ **พื้นหลัง**

แก้ไข และเพื่อแก้ไขชื่อของภาพที่เลือก

 และเพื่อลบภาพ

 และเพื่อถ่ายภาพอื่นทันที ภาพปัจจุบันจะถูกบันทึก

 และเพื่อดูคลังภาพที่บันทึกไว้

การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

เปลี่ยนแปลงการตั้งค่ากล้อง
ถ่ายรูปโดยการเลือกรายการ
หลังจากเลือกตัวเลือก ให้แตะ
ปุ่ม **กลับ**

ISO – ISO

กำหนดความไวของเซ็นเซอร์
แสงในกล้อง ISO ที่มากขึ้น
ความไวของกล้องก็มากขึ้น
เท่านั้น ซึ่งจะเป็นประโยชน์
สำหรับสภาพแวดล้อมที่มีมืดใน
ขณะที่คุณไม่สามารถใช้แฟลช
ได้ เลือกจากค่า ISO ที่มีได้แก่
**อัตโนมัติ, 400, 200 และ
100 สมดุลแสง – เลือกจาก
อัตโนมัติ, หลอดไฟ,
แสงอาทิตย์, ฟลูออเรสเซนต์
และ มีดครีม เอฟเฟกต์สี –
เลือกโทนสีสำหรับภาพถ่ายใหม่
ตัวตั้งเวลา - ตัวตั้งเวลาทำให้
คุณสามารถตั้งช่วงเวลาหน่วง
หลังจากที่กดปุ่มถ่ายภาพแล้ว
ได้ เลือก **ปิด, 3 วินาที, 5
วินาที หรือ 10 วินาที** ซึ่ง
เป็นวิธีการที่ช่วยให้คุณถ่ายรูป
ตนเองได้**

คุณภาพของภาพ

– เลือกจาก **ละเอียดมาก,
ละเอียด และ ปกติ**

คุณภาพที่ละเอียดมาก
ขึ้นเท่าใดความคมชัดของ
ภาพถ่ายก็มากขึ้นเท่านั้น
อย่างไรก็ตาม ขนาดไฟล์
จะเพิ่มตามไปด้วย ซึ่งหมาย
ความว่าคุณจะสามารถ
จัดเก็บภาพถ่ายในหน่วย
ความจำได้น้อยลง


รีวิวดัตโนมัติ – หากคุณเปิด
รีวิวดัตโนมัติ ภาพที่คุณถ่าย
ล่าสุดจะแสดงขึ้นโดยอัตโนมัติ


เสียงชัดเตอร์ – เลือก
เสียงชัดเตอร์เสียงใดเสียง
หนึ่งจาก **สี่เสียง**

แท็กตำแหน่ง – เปิดฟังก์ชัน
นี้เพื่อใช้บริการตามพื้นที่ของ
โทรศัพท์ ถ่ายภาพในที่ที่ต้องการ
การและแท็กรูปภาพด้วย
ตำแหน่งที่ถ่ายภาพ หากคุณ
อัปโหลดรูปภาพที่แท็กไปยัง
บล็อกที่สนับสนุนแท็กตำแหน่ง
คุณจะเห็นรูปภาพนั้นแสดงบน

กล้องถ่ายรูป

แผนที่หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งาน GPS เท่านั้น


 – เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

 และเมื่อใดก็ตามที่คุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อกับคุณ

เคล็ดลับ เมื่อคุณออกจากกล้องการตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง, เอฟเฟกต์สี, ตัวตั้งเวลาและโหมดถ่ายภาพ ตรวจสอบค่าเหล่านี้ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ เมนูการตั้งค่าซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า

การดูรูปภาพที่บันทึกไว้

เข้าดูรูปภาพที่บันทึกไว้ในขณะอยู่ในโหมดกล้องถ่ายรูป เพียงแตะ  และแตะที่หน้าจอแล้วคุณ将会เห็น ภาพสไลด์ และ เมนู

เคล็ดลับ ลากนิ้วไปทางซ้ายหรือทางขวาเพื่อดูรูปภาพหรือวิดีโออื่น



- แตะเพื่อดูภาพสไลด์



- แตะเพื่อแบ่งปันเนื้อหาหรือลบภาพ และอื่นๆ เพื่อดูตัวเลือกเพิ่มเติม

รายละเอียด – ตรวจสอบข้อมูลในเนื้อหา

ตั้งค่าเป็น – ตั้งเป็นไอคอนรายชื่อหรือภาพพื้นหลัง

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

ความสว่าง - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของวิดีโอ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง

ซูม - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้



โหมดกล้องถ่ายรูป - เลื่อนไอคอนนี้ขึ้นเพื่อสลับไปยังโหมดกล้องถ่ายรูป

เริ่มการบันทึก

คลังภาพ - แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเขาดูคลังภาพและดูวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ




ตั้งค่า - แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า ดูที่ 'การใช้การตั้งค่าขั้นสูง'

ระยะเวลา - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกระหว่าง ปกติ และ MMS เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็นข้อความ MMS ได้

ขนาดวิดีโอ - แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก

กล้องวิดีโอ

การถ่ายวิดีโอด้วย

- 1 เลื่อนปุ่มโหมด กล้องถ่ายรูปลง และไอคอนจะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ในแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 กดปุ่มบันทึก  หนึ่งครั้งเพื่อเริ่มการบันทึก
- 5 REC จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพพร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ


ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏขึ้นบนหน้าจอ

-  **เล่น** แตะเพื่อเล่นวิดีโอ
-  **แบ่งปัน** แตะเพื่อแบ่งปันวิดีโอของคุณทาง **SmartShare, บลูทูธ, อีเมล, Gmail, ขอความ หรือ YouTube**

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดขอความ MMS ขณะโรมมิ่ง

-  **แก้ไขชื่อ** แตะเพื่อแก้ไขชื่อของวิดีโอที่เลือก
-  แตะเพื่อถ่ายวิดีโออื่นต่อวิดีโอปัจจุบันจะถูกบันทึก
-  แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ ยืนยันโดยการแตะ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง
-  แตะเพื่อดูคลังภาพสำหรับวิดีโอที่บันทึกไว้

การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด
ปรับการตั้งค่ากล้องถ่ายรูปได้
โดยเลื่อนรายการ หลังจากเลือก
ตัวเลือก ให้แตะปุ่ม **กลับ**


ความสมดุลแสง – สมดุลแสง
จะช่วยให้มั่นใจได้ว่าส่วนที่เป็น
สีขาวที่ปรากฏในวิดีโอจะสวยงาม
จริง เพื่อให้กล้องของคุณปรับ
ความสมดุลแสงได้อย่างถูกต้อง
คุณอาจจำเป็นต้องกำหนด
สภาวะแสงก่อน เลือกจาก
อัตโนมัติ, หลอดไฟ,
แสงอาทิตย์, ฟลูออเรสเซนต์
และ **มิดครีม**


เอฟเฟกต์สี – เลือกโทนสี
เพื่อใช้กับรูปภาพมุมมองใหม่

คุณภาพของวิดีโอ – เลือก
จาก **ละเอียดมาก, ละเอียด**
และ **ปกติ**


การบันทึกเสียง – เลือก
ปิดเสียง เพื่อบันทึกวิดีโอโดย
ไม่มีเสียง

รีวิวอัตโนมัติ – รีวิวอัตโนมัติแสดงวิดีโอที่คุณ
บันทึกล่าสุดโดยอัตโนมัติ

 – เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายวิดีโอ

 – แตะเมื่อคุณต้องการ
ทราบว่าฟังก์ชันนี้ทำงาน
อย่างไร วิธีนี้จะให้คำแนะนำ
อย่างย่อกับคุณ

การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะ 
- 2 คลังภาพจะปรากฏบน
หน้าจอ
- 3 แตะที่วิดีโอหนึ่งครั้งเพื่อ
แสดงวิดีโอที่ดาวน์โหลด
ของคลังภาพ วิดีโอจะเริ่ม
เล่นโดยอัตโนมัติ
- 4 การปรับระดับเสียง
ขณะดูวิดีโอ

ในการปรับระดับเสียงของ
วิดีโอขณะเล่น ให้ใช้ปุ่มปรับ
ระดับเสียงที่ด้านซ้ายมือของ
หน้าจอ

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในการ์ดหน่วยความจำเพื่อเข้าถึงไฟล์รูปภาพและวิดีโอได้อย่างง่ายดาย


แตะ **แอปพลิเคชัน** แล้วเลือก **คลังภาพ** เปิดรายการของแถบแคตตาล็อกที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

หมายเหตุ: ตรวจสอบว่าได้ติดตั้งการ์ดหน่วยความจำลงในโทรศัพท์เพื่อบันทึกรูปภาพและเข้าใช้รูปภาพทั้งหมดของคุณ หากไม่มีการ์ดหน่วยความจำโทรศัพท์จะไม่แสดงรูปภาพหรือวิดีโอโดยไม่มีภาพ Picasa ซึ่งอยู่ในอัลบั้ม Picasa

โหมดมุมมอง

แตะที่ **คลังภาพ** มุมมองโฟลเดอร์จะปรากฏขึ้นแตะโฟลเดอร์ใดๆ จะเปลี่ยนเป็นโหมดมุมมองกริด หากคุณแตะภาพจะเปลี่ยนโหมดมุมมองเต็ม

มุมมองตามลำดับเวลา

คลังภาพ ใน LG-P698f จะแสดงมุมมองของรูปภาพและวิดีโอตามลำดับเวลา ในโหมดมุมมองกริดไหลจาก  ไปทางขวาและวันที่ถ่ายภาพจะปรากฏขึ้น โดยเริ่มจากล่าสุด หากคุณเลือกวันที่ระบุ รูปภาพทั้งหมดที่คุณถ่ายในวันนั้นจะถูกจัดกลุ่ม

การใช้ SmartShare

SmartShare ให้คุณสามารถสนุกรสนานกับเนื้อหาที่มีเดียมีเดียกับอุปกรณ์ DLNA (Digital Living Network Alliance) อื่นได้ดียิ่งขึ้น

* แบ่งปันเนื้อหาที่มีเดียของคุณให้กับอุปกรณ์ DLNA (DMS) อื่นๆ

1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **SmartShare**

- 2 กดปุ่ม **เมนู** และเลือก **ตั้งค่า**
- 3 **แตะ**ช่องทำเครื่องหมาย SmartShare เพื่อเปิด
- 4 คุณสามารถเปลี่ยนชื่ออุปกรณ์ ไอคอน และเลือกประเภทเนื้อหาที่แบ่งปันได้

*** ให้อุปกรณ์แสดงผลของคุณ (เช่น ทีวี) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหาระยะไกล (เช่น คอมพิวเตอร์)**

- 1 **แตะ**ที่ปุ่มขวามือเพื่อเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
- 2 **แตะ**ปุ่มบนซ้ายและเลือกหนึ่งไลบรารีเนื้อหาระยะไกล
- 3 **แตะ**ช่องทำเครื่องหมายค้นหาได้ เพื่อเปิด
- 4 **แตะ**ภาพขนาดเล็กของเนื้อหาหรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**


โปรดทราบ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้

โปรดทราบ: อุปกรณ์ DLNA บางประเภท (เช่น ทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล




เพลง

โทรศัพท์ LG-P698f มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลง บนหน้าจอหลักให้แตะแท็บแอปพลิเคชันและเลือก **เพลง**

การเล่นเพลง

- 1 ในหน้าจอหลัก **แตะ**แท็บ **แอปพลิเคชัน** และเลือก **เพลง**
- 2 **แตะ** **เพลง**
- 3 เลือกเพลงที่คุณต้องการเล่น
- 4 **แตะ**  เพื่อหยุดเล่นเพลงชั่วคราว

มัลติมีเดีย

- 5 แตะ  เพื่อข้ามไปที่ถัดไป
- 6 แตะ  เพื่อย้อนไปยังช่วงเริ่มต้นของเพลงนั้น แตะ  สองครั้งเพื่อกลับไปฟังเพลงก่อนหน้า

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์

แตะเพลงหนึ่งในรายการเพลงค้างไว้ หน้าจอจะแสดงตัวเลือกเล่น, เพิ่มในรายการเพลง, ใช้เป็นเสียงเรียกเข้าโทรศัพท์, ลบ, รายละเอียด, แบ่งปัน และ ค้นหา

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมาย ลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับอนุญาตหรือได้รับอนุญาตในการทำซ้ำหรือคัดลอกเพลงในกฎหมายของบางประเทศ มีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ ให้ตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล USB

การโอนไฟล์โดยใช้อุปกรณ์ USB

- 1 เชื่อมต่อโทรศัพท์ LG-P698f กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม

LG Android ในคอมพิวเตอร์ของคุณคุณต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เลือก **ตั้งค่า > ที่เก็บข้อมูล** แล้วเลือก **ที่เก็บข้อมูลเท่านั้น**

3 และ **เปิดที่เก็บข้อมูล USB**

4 คุณสามารถดูเนื้อหาที่จัดเก็บบนคอมพิวเตอร์ของคุณ และโอนไฟล์

หมายเหตุ: คุณต้องติดตั้งการ์ด SD ก่อน หากไม่มีการ์ด SD คุณจะไม่สามารถใช้ที่เก็บข้อมูล USB ได้

หมายเหตุ: หากคุณติดตั้งไดรเวอร์แพลตฟอร์ม LG Android คุณจะเห็นป๊อปอัพที่มีข้อความเปิดใช้ที่เก็บข้อมูล USB ในทันที

วิธีบันทึกไฟล์เพลง/ วิดีโอในโทรศัพท์ของคุณ

1 เชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB ในหน้าจอหลักให้แตะและลากแถบสถานะลงมาเลือก **เชื่อมต่อ USB** แล้ว **> เปิดใช้ที่เก็บข้อมูล**

USB เปิดโฟลเดอร์เพื่อดูไฟล์ในคอมพิวเตอร์ของคุณ หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณคุณต้องทำการตั้งค่าด้วยตัวเอง สำหรับข้อมูลเพิ่มเติม โปรดดูที่ 'การโอนไฟล์โดยใช้อุปกรณ์จัดเก็บข้อมูล'

2 การบันทึกไฟล์เพลงหรือวิดีโอจากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์

- คุณสามารถคัดลอกหรือย้ายไฟล์จากคอมพิวเตอร์ไปยังที่จัดเก็บที่ถอดออกได้ของโทรศัพท์โดยใช้ตัวอ่านการ์ด
- หากมีไฟล์วิดีโอที่มีไฟล์คำบรรยาย (ไฟล์ *.srt ที่ใช้ชื่อเดียวกับไฟล์วิดีโอ) ในวางไฟล์ไว้ในโฟลเดอร์เดียวกันเพื่อให้คำบรรยายปรากฏขึ้นโดย

มัลติมีเดีย

อัปเดตมัลติมีเดียขณะเล่นไฟล์วิดีโอ

- เมื่อทำการดาวน์โหลดไฟล์เพลงหรือวิดีโอจะต้องมีลิขสิทธิ์อย่างถูกต้อง โปรดทราบว่าไฟล์ที่เสียหายหรือมีนามสกุลไฟล์ที่ไม่ถูกต้องอาจสร้างความเสียหายให้กับโทรศัพท์ได้

การย้ายรายชื่อจากโทรศัพท์เก่าไปโทรศัพท์ใหม่

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากโทรศัพท์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

- 1 ดาวน์โหลด PC Suite IV จาก www.lg.com และติดตั้งในคอมพิวเตอร์เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์มือถือ Android ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 เลือกไอคอน รายชื่อ ไปที่เมนู > ไฟล์ > อิมพอร์ต

และเลือกไฟล์ CSV ที่บันทึกไว้ในคอมพิวเตอร์

- 3 หากไฟล์ตกอยู่ในไฟล์ CSV ที่อิมพอร์ตแตกต่างจากไฟล์ที่อยู่ใน LG PC Suite IV คุณจำเป็นต้องแมปฟิลด์ หลังจากแมปฟิลด์ ให้คลิก ตกลง จากนั้นรายชื่อจะถูกเพิ่มใน PC Suite IV

- 4 หาก PC Suite IV ตรวจพบการเชื่อมต่อของโทรศัพท์ LG-P698f (โดยใช้สายเคเบิล USB) ให้คลิก ซิงค์ หรือ ซิงค์รายชื่อ เพื่อซิงโครไนซ์รายชื่อที่บันทึกในคอมพิวเตอร์กับโทรศัพท์

การส่งข้อมูลจากโทรศัพท์โดยใช้บลูทูธ

การส่งข้อมูลโดยใช้บลูทูธ คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียก

ใช้แอปพลิเคชันที่เกี่ยวข้อง
ไม่ใช่จากเมนูบลูทูธเหมือนใน
โทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

* **การส่งรูปภาพ:** เรียกใช้แอป
พลิเคชันคลังภาพ แล้วเลือก
รูปภาพ > **เมนู** คลิก
แบ่งปัน แล้วเลือก **บลูทูธ**
ตรวจสอบว่าเปิดบลูทูธแล้ว
แล้วเลือก **สแกนหาอุปกรณ์**
เลือกอุปกรณ์ที่คุณต้องการส่ง
ข้อมูลจากรายการ

* **เอ็กซ์พอร์ตรายชื่อ:** เรียก
ใช้แอปพลิเคชันรายชื่อ
แตะที่อยู่ที่คุณต้องการทำ
การเอ็กซ์พอร์ต กดปุ่ม **เมนู**
และเลือก **แบ่งปัน** > **บลูทูธ**
ตรวจสอบว่าเปิดบลูทูธแล้ว
แล้วเลือก **สแกนหาอุปกรณ์**
เลือกอุปกรณ์ที่คุณต้องการส่ง
ข้อมูลจากรายการ

* **การส่งข้อมูลไปยังรายชื่อ
ที่เลือกหลายรายการ:**
เรียกใช้แอปพลิเคชันรายชื่อ
ในการเลือกมากกว่าหนึ่งรายชื่อ
ชื่อ ให้กดปุ่ม **เมนู** และแตะ

แบ่งปัน > ทำเครื่องหมาย
เลือกรายชื่อที่คุณต้องการ
แบ่งปันหรือทำเครื่องหมาย
เลือกตัวเลือก เลือกทั้งหมด
ด้านบนหน้าจอเพื่อเลือก
รายชื่อทั้งหมด > **แบ่งปัน**
> **บลูทูธ**

* **การเชื่อมต่อกับ FTP
(เครื่องรุ่นนี้รองรับเฉพาะ
เซิร์ฟเวอร์ FTP):** เลือก
ตั้งค่า > **ตั้งค่าการเชื่อมต่อ**
> **ตั้งค่าบลูทูธ**
เลือกช่อง **ค้นหาได้** เพื่อ
ให้คุณสามารถค้นหา
โทรศัพท์ของคุณจาก
อุปกรณ์อื่นได้ ค้นหา
บริการ FTP และเชื่อมต่อ
เซิร์ฟเวอร์ FTP

• หากคุณต้องการค้นหา
โทรศัพท์เครื่องนี้จาก
อุปกรณ์อื่นๆ ไปที่ **ตั้งค่า** >
ตั้งค่าการเชื่อมต่อ
> **การตั้งค่า**
เลือกช่อง **ค้นหาได้** เครื่อง
หมายที่ช่องนี้จะหายไปหลัง

มัลติมีเดีย

จากผ่านไป 120วินาที

การใช้วิทยุ

โทรศัพท์ LG-P698f มีคุณสมบัติวิทยุ FM ในตัว ดังนั้นคุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

หมายเหตุ: คุณจะต้องเสียบหูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้นคุณจึงไม่จำเป็นต้องค้นหาอีกครั้ง คุณสามารถจัดเก็บได้สูงสุด 48 ของสถานี ในโทรศัพท์ของคุณ

การปรับตั้งอัตโนมัติ

1 บนหน้าจอหลักแตะแท็บแอปพลิเคชันแล้วเลือกวิทยุ FM

62 2 กดปุ่มเมนูแล้วแตะสแกนอัตโนมัติ

3 หากมีช่องสถานีที่ตั้งไว้วงหนมาแล้ว คุณจะเห็นป๊อปอัพ "รีเซ็ตช่องทั้งหมดและเริ่มสแกนอัตโนมัติ?" หากคุณเลือกตกลงของสถานีที่ตั้งไว้วงหนมาทั้งหมดจะถูกลบและจะเริ่มต้นสแกนอัตโนมัติ

4 ระหว่างการสแกนอัตโนมัติแตะหยุดหากคุณต้องการหยุดการสแกน โดยจะบันทึกเฉพาะของสถานีที่สแกนพบก่อนหยุดการสแกนเท่านั้น

การรีเซ็ตสถานี


กดปุ่มเมนูและเลือกรีเซ็ตสถานีเพื่อรีเซ็ตสถานีปัจจุบันหรือเลือกรีเซ็ตสถานีทั้งหมด

การฟังวิทยุ

แตะฟังผ่านเพื่อกำหนดว่าจะฟังวิทยุผ่านลำโพงหรือหูฟัง

ยูทิลิตี้

การตั้งเวลาการปลุก

- 1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **นาฬิกา**
- 2 หากคุณต้องการเพิ่มการตั้งปลุกใหม่ แตะ  และเลือก **เพิ่มการปลุก**
- 3 ตั้งค่าเวลา แล้วแตะ  เพื่อเปิดการเตือน หลังจากที่กำหนดเวลาแล้ว โทรศัพท์ LG-P698f จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก
- 4 ตั้งค่า **ซ้ำ**, **เสียงเรียกเข้า** หรือ **สั้น** แล้วเพิ่มป้ายกำกับเพื่อตั้งชื่อการปลุก แตะ **เสร็จ**

หมายเหตุ: ในการเปลี่ยนการตั้งค่าการปลุกในหน้าจอรายการเตือนให้กดปุ่ม **เมนู** และเลือก **ตั้งค่า** คุณสามารถปรับตัวเลือกด้านล่าง: **การปลุกอยู่ในโหมดเงียบ**, **ระดับเสียงการปลุก**, **ระยะเวลาเลื่อน**

การใช้เครื่องคิดเลข

- 1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **เครื่องคิดเลข**
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน กดปุ่ม **เมนู** แตะที่พาเนล **ขั้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **ปฏิทิน**
- 2 ในการตรวจสอบเหตุการณ์ ให้แตะวันที่ แตะค้างไว้หากคุณต้องการเพิ่มเหตุการณ์ใหม่ แตะ **เหตุการณ์ใหม่**

ยุทธวิธีดี

3 แตะ **อะไร**

แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น

4 แตะ **ที่ใด** แล้วป้อนสถานที่

5 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย** แล้วป้อนรายละเอียด

6 ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **การทำซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น

7 แตะ **เสร็จ** เพื่อบันทึกเหตุการณ์ในปฏิทิน วันที่ที่มีการบันทึกเหตุการณ์ไว้จะมีเครื่องหมายกรอบสี่เหลี่ยมสีในปฏิทินกำกับอยู่ เสียงเตือนจะดังขึ้นเมื่อถึงเวลาเริ่มต้นของเหตุการณ์เพื่อให้คุณไม่พลาดกำหนดการณ์ต่างๆ

การเปลี่ยนมุมมองปฏิทิน

- 1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **ปฏิทิน** กดปุ่ม **เมนู**
- 2 เลือกมุมมองปฏิทินของวัน สัปดาห์ หรือเดือนที่ต้องการ

Polaris Viewer

Polaris Viewer คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ใช้ออกเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

การจัดการไฟล์

Polaris Viewer ให้ผู้ใช้อ่มือถือจัดการไฟล์ รวมถึงการคัดลอก การตัด และการวาง และลบไฟล์และโฟลเดอร์ได้อย่างสะดวกบนมือถือ

การดูไฟล์




ผู้ใช้อ่มือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร

Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือ เมื่อดูเอกสารโดยใช้ Polaris Viewer ออบเจกต์และเลย์เอาต์ จะเหมือนกับในเอกสารต้นฉบับ

บันทึกเสียง

ใช้บันทึกเสียงเพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 ในหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** และเลือก **บันทึกเสียง**
- 2 แตะ  เพื่อเริ่มบันทึก
- 3 แตะ  เพื่อจบการบันทึก
- 4 แตะ  เพื่อฟังการบันทึก

หมายเหตุ: แตะ  เพื่อเข้าใช้อัลบั้ม คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้

โปรดทราบ: เวลาการบันทึกที่มีอยู่อาจต่างจากเวลาจริง

การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว คุณสามารถส่งคลิปเสียงได้โดยแตะ **แบ่งปัน**
- 2 เลือกจาก **บลูทูธ**, **อีเมล**, **Gmail** และ **ข้อความ** เมื่อคุณเลือก **อีเมล**, **Gmail** และ **ข้อความ** การบันทึกเสียงจะถูกเพิ่มในข้อความ จากนั้น คุณสามารถเขียนและส่งข้อความได้ตามปกติ




เว็บไซต์




บราวเซอร์

บราวเซอร์ ช่วยให้คุณสามารถเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณได้ทุกที่และทุกอย่างที่คุณต้องการ

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

การใช้แถบเครื่องมือเว็บ

-  แตะเพื่อย้อนกลับหนึ่งเพจ
-  แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบันโดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม **ย้อนกลับ** ซึ่งจะไปยังเพจก่อนหน้า
-  แตะเพื่อแสดงหน้าตาที่เปิดอยู่ทั้งหมด

-  แตะเพื่อเพิ่มหน้าตาใหม่
-  แตะเพื่อเปลี่ยนการตั้งค่าบราวเซอร์
-  เพิ่ม/แสดงบุ๊กมาร์คและแสดง **ไซต์ที่เข้าชมบ่อยสุด, อานที่หลัง และ ประวัติ**

การใช้ตัวเลือก

- กดปุ่ม **เมนู** เพื่อดูตัวเลือก
-  **อานที่หลัง** – เพิ่มเว็บเพจปัจจุบันเป็นบุ๊กมาร์ค
-  **เพิ่ม RSS feed** – เพิ่มเว็บเพจปัจจุบันใน RSS feed
-  **แบ่งปันเพจ** – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้
-  **หาในเพจ** – ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน



เลือกข้อความ

– ให้คุณคัดลอกข้อความใดๆ
จากเว็บเพจ



อื่นๆ

- **โฮมเพจ:** ไปยังโฮมเพจ
- **ตั้งค่าโฮมเพจ:** ตั้งค่าเว็บเพจ
ปัจจุบันเป็นโฮมเพจของคุณ
- **เพิ่มปุ่มลัดในหน้าหลัก:**
เพิ่มปุ่มลัดของเพจปัจจุบันใน
หน้าหลัก
- **ข้อมูลเพจ:**
แสดงข้อมูลเว็บเพจ
- **ดาว์นโหลด:** แสดงดาว์นโหลด
ประวัติของคุณ

เคล็ดลับ ในการกลับไปเว็บเพจ
ก่อนหน้า กดปุ่ม **กลับ**

ตั้งค่า

ในหน้าจอหลัก แตะที่
แอปพลิเคชัน แล้วเลื่อนและ
แตะ **ตั้งค่า**

การตั้งค่าซิมคู่

คุณสามารถกำหนดการตั้งค่า
ซิมคู่ได้

เมื่อใส่สองซิมการ์ดในโทรศัพท์
ของคุณ จะแสดงข้อมูลซิมการ์ด
แต่ละเพื่อทำเครื่องหมายเลือก
ซึ่งจะเปิดซิมที่เลือกเป็นใช้งาน

หากคุณพยายามปิดซิม1
ขณะซิม2 ถูกปิดอยู่ ซิม2
ควรจะเปิดเอง (ไมอนุญาตให้ปิด
ซิมการ์ดทั้งคู่พร้อมกัน)

ซิมสีซิม – ซิมสีซิมที่คุณเลือก
จะใช้กับสัญลักษณ์ RSSI
และไอคอนซิม

เปิดใช้ข้อมูล – แตะเพื่อทำ
เครื่องหมายเลือก ซึ่งจะเปิดใช้
การเข้าถึงข้อมูลผ่านเครือข่าย
โทรศัพท์เคลื่อนที่

เครือข่ายข้อมูลเริ่มต้น – คุณ
สามารถเปลี่ยนเครือข่าย

ข้อมูลเริ่มต้นได้

บริการแพ็คเกจมือถือทั้งหมด
(เว็บ, MMS, อีเมล ฯลฯ)
จะใช้ซิมที่เลือกในค่านี้

เมื่อใส่ซิมการ์ดเดี่ยว เครือข่าย
ข้อมูลเริ่มต้นจะถูกตั้งค่าเป็นซิม
ที่ใส่ และไม่อนุญาตให้เปลี่ยน

หมายเหตุ: เมื่อเปิด โหมดเครื่องบิน
การตั้งค่าซิมคู่ จะถูกปิดใช้งาน

ระบบไร้สายและเครือข่าย

ในหน้าจอนี้ คุณสามารถจัดการ
Wi-Fi และบลูทูธ คุณยังสามารถ
ตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่
และสลับไปยังโหมดเครื่องบิน
ได้ด้วย

โหมดเครื่องบิน – หลังจาก
สลับไปยังโหมดเครื่อง
บิน การเชื่อมต่อเครือข่ายทั้ง
หมดจะใช้งานไม่ได้

Wi-Fi – แตะเพื่อทำเครื่องหมาย: เปิด Wi-Fi เพื่อเชื่อมต่อ
เครือข่าย Wi-Fi ที่มีอยู่

ตั้งค่า Wi-Fi – ให้คุณสามารถตั้งค่าและจัดการจุดเชื่อมต่อไร้สาย ตั้งค่าการแจกจ่ายเครือข่าย หรือเพิ่มเครือข่าย Wi-Fi หน้าจอตั้งค่า Wi-Fi ขึ้นสูงจะเข้าใช้จากหน้าจอตั้งค่า Wi-Fi กดปุ่ม **เมนู** และแตะ **ขึ้นสูง**

เคล็ดลับ การดู MAC แอดเดรสในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของ LG-P698f ลงในเราเตอร์คุณสามารถค้นหา MAC แอดเดรสได้ในเมนูสำหรับผู้ใช้ออนไลน์: แตะ **แอปพลิเคชัน** > **ตั้งค่า** > **ตั้งค่าการเชื่อมต่อ** > **ตั้งค่า Wi-Fi** แล้วกดปุ่ม **เมนู** แล้วเลือก **ขึ้นสูง** > **MAC แอดเดรส**

บลูทูธ – แตะเพื่อทำเครื่องหมาย: เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

การตั้งค่า – ตั้งชื่ออุปกรณ์และโหมด ค้นหาได้ สแกนหา

อุปกรณ์อื่นๆ หรือตรวจสอบรายการอุปกรณ์บลูทูธที่คุณกำหนดค่าก่อนหน้านี้ และที่ตรวจพบเมื่อโทรศัพท์สแกนหาอุปกรณ์บลูทูธครั้งล่าสุด

Tethering & portable hotspot – คุณสามารถกำหนดการตั้งค่าการปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot

ตั้งค่า VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

ตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

หมายเหตุ:

- ตามค่าเริ่มต้น โหมดเครือข่ายสำหรับช่องเสียบ 1 จะถูกตั้งค่าเป็นโหมด WCDMA และโหมดเครือข่ายสำหรับช่อง

ตั้งค่า

เสียบ 2 จะถูกตั้งค่าเป็นโหมด GSM ดังนั้นโหมดเครือข่ายสำหรับช่องเสียบ 2

จะไม่สามารถเปลี่ยนเป็นโหมด WCDMA ได้โดยตรง

- หากต้องการเปลี่ยนโหมดเครือข่ายสำหรับช่องเสียบ 2 เป็นโหมด WCDMA ให้เปลี่ยนโหมดเครือข่ายสำหรับช่องเสียบ 1 เป็น เฉพาะ GSM ก่อนเปลี่ยนโหมดเครือข่ายเป็น WCDMA ในช่องเสียบ 2

ตั้งค่าการโทร

คุณสามารถกำหนดการตั้งค่าการโทรของซิมการ์ดที่คุณใส่ได้

< กำหนดเบอร์โทรออก >

เลือก **กำหนดเบอร์โทรออก** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนด

เท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

< ข้อความเสียง >

บริการข้อความเสียง – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ

ตั้งค่าข้อความเสียง – หากคุณใช้บริการข้อความเสียงของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขโทรศัพท์ที่ใช้ฟังและจัดการข้อความเสียงของคุณ

< ตั้งค่าการโทรอื่นๆ >

การส่งต่อสาย

– เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือโอนเมื่อไม่มีสัญญาณ

ป้องกันการโทร

– เลือกเมื่อคุณต้องการป้องกันการโทรออกป้อนรหัสผ่านสำหรับจำกัดการโทรโปรดตรวจสอบกับผู้ให้

บริการเครือข่ายของ
คุณเกี่ยวกับบริการนี้

คาโทร – ค่าใช้จ่ายการโทร
ของคุณ

บริการนี้ขึ้นอยู่กับเครือข่าย
ผู้ให้บริการบางรายไม่รองรับ
ฟังก์ชันนี้

เวลาโทร

– ระยะเวลาการโทรทั้งหมด
ใดแก่ ทุกสาย สายโทรออก
สายที่ได้รับ และการโทรครั้ง
ล่าสุด

เพิ่มการตั้งค่า – ตัวเลือกนี้
จะช่วยให้คุณเปลี่ยนแปลงการ
ตั้งค่าต่อไปนี้:

ข้อมูลผู้โทร: เลือกว่าคุณจะ
แสดงหมายเลขของคุณในการ
โทรออกหรือไม่

สายเรียกซ้อน:

หากเปิดใช้สายเรียกซ้อน คุณ
จะได้รับแจ้งสายเรียกเข้าขณะ
กำลังใช้งานโทรศัพท์ (ขึ้นอยู่กับผู้ให้บริการเครือข่าย
ของคุณ)

< **ร่วมกัน** >

ข้อความขอโทษ – เมื่อคุณ
ต้องการปฏิเสธสาย คุณสามารถ
ส่งข้อความได้อย่างรวดเร็วโดย
ใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็น
ประโยชน์ในกรณีที่คุณต้องการ
ปฏิเสธการรับสายในระหว่าง
การประชุม

ปฏิเสธการรับสาย – ให้คุณ
สามารถตั้งค่าฟังก์ชันปฏิเสธ
การรับสายเลือกจาก
ปิด, ปฏิเสธรายการ หรือ
ปฏิเสธทุกสาย

เสียง

< **ทั่วไป** >

โหมดเจียบ

– ให้คุณปิดเสียงทั้งหมด
(รวมถึงเสียงเรียกเข้าของการ
โทรและการแจ้ง)

ยกเว้นเสียงจากเพลง วิดีโอ
และการปลุกที่ตั้งไว้

(คุณต้องปิดเสียงมีเดียและการ
ปลุกในแอปพลิเคชันเหล่านั้น)
สั้น – ให้คุณตั้งค่าให้โทรศัพท์

ตั้งค่า

สั้นเมื่อคุณได้รับสายเรียกเข้า

ระดับเสียง – ให้คุณตั้งระดับเสียงสำหรับเสียงเรียกเข้า มีเดียและการปลุก หากคุณไม่ได้เลือกตัวเลือกเพื่อใช้ระดับเสียงสายเรียกเข้าสำหรับการแจ้ง คุณสามารถตั้งระดับเสียงสายเรียกเข้าและการแจ้งแยกกันได้

< สายเรียกเข้า >

เสียงเรียกเข้าโทรศัพท์ซิม 1/ ซิม 2 – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของซิมการ์ดที่คุณใส่

< การแจ้ง >

เสียงเรียกเข้าของการแจ้ง – ให้คุณตั้งค่าเสียงการแจ้งเริ่มต้นของคุณ

< การตอบรับ >

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อไขปุ่มตัวเลขเพื่อหมุนหมายเลข

การเลือกเสียง – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อ

คุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองการสัมผัส

เสียงล๊อคหน้าจอ – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อล๊อคและปลดล๊อคหน้าจอ

การตัดตอบการสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์สั้นเล็กน้อยเมื่อคุณกดปุ่มเลือกต่างๆ และดำเนินการอื่นๆ

หน้าจอ

ความสว่าง

– ปรับความสว่างของหน้าจอ

หมุนจออัตโนมัติ – ตั้งค่าเพื่อสลับการวางแนวโดยอัตโนมัติเมื่อคุณหมุนโทรศัพท์

แอนิเมชัน – ตั้งค่าเพื่อแสดงแอนิเมชัน

ไทม์เอาต์หน้าจอ – ตั้งค่าเวลาไทม์เอาต์หน้าจอ

ตำแหน่งและระบบป้องกัน ใช้เครือข่ายไร้สาย

– หากคุณเลือก **ใช้เครือข่ายไร้สาย** โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์เคลื่อนที่ เมื่อคุณเลือกตัวเลือกนี้ คุณจะได้รับแจ้งว่าจะยินยอมให้ Google ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้หรือไม่

ใช้ดาวเทียม GPS – หากคุณเลือก **ใช้ดาวเทียม GPS** โทรศัพท์จะกำหนดตำแหน่งด้วยความแม่นยำระดับถนน

ตั้งค่าล็อคหน้าจอ – ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ คุณสามารถตั้ง **PIN** หรือ **รหัสผ่าน** แทน **รูปแบบ** หรือ **วงเวียน** เป็น **ไม่มี** ได้เมื่อคุณเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

ตั้งค่าล็อค SIM/RUIM card – ตั้งค่าล็อค SIM/RUIM card หรือเปลี่ยน PIN ของ SIM/RUIM card

รหัสผ่านที่มองเห็นได้

– เลือกให้แสดงรหัสผ่านเมื่อคุณพิมพ์ หรือยกเลิกการเลือกให้ซ่อนรหัสผ่านเมื่อคุณพิมพ์

เลือกตัวช่วยอุปกรณ์

– เพิ่มหรือลบตัวช่วย

ใช้รหัสเฉพาะรักษาความปลอดภัย – ให้คุณเข้าถึงไบรร์รองความปลอดภัย

ติดตั้งจากการ์ด SD – เลือกติดตั้งไบรร์รองที่เข้ารหัสจากการ์ด SD

ตั้งค่ารหัสผ่าน – ตั้งค่าหรือเปลี่ยนรหัสผ่านสำหรับพื้นที่จัดเก็บรหัสเฉพาะ

ลบพื้นที่จัดเก็บ – ลบรหัสเฉพาะของเนื้อหาทั้งหมด และรีเซ็ตรหัสผ่าน

ตั้งค่า

แอปพลิเคชัน

คุณสามารถจัดการแอปพลิเคชัน และตั้งค่าปุ่มลัดการเริ่มต้น อย่างรวดเร็ว

แหล่งที่มาที่ไม่รู้จัก – ตั้งค่า เริ่มต้นเพื่อติดตั้งแอปพลิเคชัน ที่ไม่ได้มาจากตลาด

จัดการแอปพลิเคชัน – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว

บริการที่กำลังรัน – ตรวจสอบบริการที่กำลังรันอยู่ในปัจจุบัน

การใช้ที่เก็บข้อมูล – ดูที่เก็บข้อมูลที่แอปพลิเคชันใช้

การใช้แบตเตอรี่ – ดูการใช้แบตเตอรี่

การพัฒนา – ตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน

บัญชีและการซิงค์

<ตั้งค่าการซิงค์ทั่วไป>

ข้อมูลแบ็คกราวด์ – อนุญาตให้แอปพลิเคชันซิงค์โครโนซ

ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณ จะกำลังใช้งานขอมูลอยู่หรือไม่ ก็ตาม การไม่เลือกการตั้งค่านี้อาจสามารถประหยัดไฟแบตเตอรี่ และลด (ไม่ใช่ทั้งหมด) การใช้ขอมูล

ซิงค์อัตโนมัติ

อนุญาตให้แอปพลิเคชันซิงค์โครโนซ ส่ง และรับขอมูลตามกำหนดเวลาของตนเองได้

<จัดการแอคเคาท์>

แสดงแอคเคาท์ Google ทั้งหมดและแอคเคาท์อื่นๆ ที่คุณเพิ่มในโทรศัพท์

หากคุณแตะที่แอคเคาท์ในหน้าจอ นี้ หน้าจอแอคเคาท์จะเปิด

ความเป็นส่วนตัว

หากคุณเลือก รีเซ็ตขอมูลจากโรงงาน จะเป็นการลบขอมูลส่วนตัวทั้งหมดออกจากพื้นที่การจัดเก็บภายใน

โทรศัพท์ รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google, แอคเคาท์อื่นๆ, ข้อมูลและการตั้งค่าระบบ/แอปพลิเคชัน ตลอดจนแอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM การรีเซ็ตโทรศัพท์จะไม่ลบการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลดหรือไฟล์ในการ์ด microSD เช่น เพลง หรือรูปภาพ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

ที่เก็บ

< โหมตการเชื่อมต่อ USB > ที่เก็บข้อมูลเท่านั้น – โทรศัพท์ของคุณสามารถใช้เป็นอุปกรณ์เก็บข้อมูลได้ หากคุณมีการดหน่วยความจำติดตั้งไว้ คุณสามารถตั้งที่เก็บข้อมูลเท่านั้น เป็นการตั้งค่าเริ่มต้นของโหมตการเชื่อมต่อ USB ได้

< การ์ด SD >

ตรวจสอบพื้นที่การ์ด SD รวมที่สามารถใช้ได้ และยกเลิกการเชื่อมต่อการ์ด SD เพื่อถอดการ์ดออกอย่างปลอดภัย

ลบการ์ด SD

หากคุณต้องการลบข้อมูลทั้งหมดจากการ์ด SD

< ที่เก็บข้อมูลภายใน >

ตรวจสอบ พื้นที่ที่ใช้ได้

ภาษาและคีย์บอร์ด

ตั้งค่าภาษาอุปกรณ์และแป้นพิมพ์

อินพุตและเอาต์พุตเสียง

< การป้อนด้วยเสียง >

ตั้งค่าจดจำเสียง –

ใช้ **ตั้งค่าจดจำเสียง** เพื่อกำหนดค่าคุณสมบัตการป้อนด้วยเสียง Android

- **ภาษา:** เปิดหน้าจอซึ่งคุณสามารถกำหนดภาษาที่ใช้ในการป้อนข้อความด้วยเสียง

ตั้งค่า

● **SafeSearch:** เปิดกล่องโต้ตอบซึ่งคุณสามารถกำหนดว่าคุณต้องการให้ฟิลเตอร์ Google SafeSearch บล็อกผลการค้นหาบางชนิดหรือไม่

● **บล็อกคำที่ไม่เหมาะสม:** เมื่อไม่ได้เลือกไว้ ระบบความจำเสียงของ Google จะจดจำและบันทึกคำต่างๆ ที่คนส่วนใหญ่คิดว่าเป็นคำที่ไม่เหมาะสมไว้ เมื่อคุณป้อนข้อความด้วยเสียง แต่ถ้าเลือกตัวเลือกนี้ไว้ ระบบความจำเสียงของ Google จะแทนที่คำเหล่านั้นในบันทึกด้วยตัวเว้นวรรคที่มีเครื่องหมายแฮช (#)

< เอาต์พุตเสียง >

ตั้งค่า Text-to-speech –
ใช้ **ตั้งค่า Text-to-speech** เพื่อกำหนดคำตัวสังเคราะห์ Text-to-speech ของ Android สำหรับแอปพลิเคชันที่สามารถใช้งานคุณสมบัตินี้ได้

● **ฟังตัวอย่าง:** เล่นเสียงตัวอย่างสั้นๆ ของตัวสังเคราะห์เสียงพูดโดยใช้การตั้งค่าในปัจจุบันของคุณ

● **ใช้การตั้งค่าของฉันเสมอ:** เลือกตัวเลือกนี้เพื่อใช้การตั้งค่าบนหน้าจอนี้แทนการตั้งค่าตัวสังเคราะห์เสียงพูดที่มีอยู่ในแอปพลิเคชันอื่นๆ

● **เอ็นจินเริ่มต้น:** เปิดกล่องโต้ตอบซึ่งคุณสามารถตั้งค่าแอปพลิเคชัน Text-to-speech ที่ต้องการเลือกใช้ กรณีที่มีแอปพลิเคชันติดตั้งไว้มากกว่าหนึ่งแอปพลิเคชัน

● **ติดตั้งข้อมูลเสียง:** หากโทรศัพท์ของคุณไม่มีข้อมูลตัวสังเคราะห์เสียงพูดติดตั้งอยู่ ตัวเลือกนี้จะทำการเชื่อมต่อกับ Android Market และให้คำแนะนำในขั้นตอนการดาวน์โหลดและติดตั้งข้อมูล

ดังกล่าวแก่คุณ ตัวเลือกนี้จะไม่ทำงาน หากมีข้อมูลติดตั้งไว้อยู่แล้ว

- **อัตราการพูด:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกอัตราความเร็วในการพูดของตัวสังเคราะห์เสียง
- **ภาษา:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกภาษาของข้อความที่คุณต้องการให้ตัวสังเคราะห์เสียงอ่าน ตัวเลือกนี้มีประโยชน์เป็นอย่างยิ่งเมื่อใช้ควบคู่กับ **ใช้การตั้งค่าของฉันเสมอ** ซึ่งจะช่วยให้แน่ใจได้ว่าข้อความในแอปพลิเคชันต่างๆ ได้รับการอ่านอย่างถูกต้อง
- **Pico TTS:**
กำหนดค่าการตั้งค่า **Pico TTS**

การช่วยสำหรับการเข้าถึง

ใช้การตั้งค่า

การช่วยสำหรับการเข้าถึง

เพื่อกำหนดค่าปลั๊กอินช่วยเหลือนสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

วันที่และเวลา

ใช้การตั้งค่า **วันที่และเวลา** เพื่อกำหนดค่าที่กำหนดเองสำหรับวิธีการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อกำหนดเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ใด

เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

Wi-Fi

ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้

ตั้งค่า

สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเปิด Wi-Fi

จากหน้าจอหลัก เปิดแถบการแจ้งเตือน และแตะ 

บนหน้าจอหลัก ให้แตะแท็บแอปพลิเคชัน และเลือก ตั้งค่า > พิกัดและการป้องกัน > ตั้งค่าลือคหน้าจอ > รูปแบบ



การเชื่อมต่อกับ Wi-Fi

เลือกเครือข่าย Wi-Fi ที่คุณต้องการเชื่อมต่อ หากคุณพบ  คุณจะตองป้อนรหัสผ่านเพื่อทำการเชื่อมต่อ
หมายเหตุ:


- หากคุณอยู่นอกพื้นที่ครอบคลุม Wi-Fi และเลือกใช้การเชื่อมต่อ 3G อาจมีค่าใช้จ่ายเพิ่มเติม
- หากโทรศัพท์ของคุณเข้าสู่โหมดปิดเมื่อมีการเชื่อม



ต่อ Wi-Fi การเชื่อมต่อ Wi-Fi จะถูกปิดโดยอัตโนมัติ

- ในกรณีนี้หากโทรศัพท์ของคุณสามารถเข้าใช้ 3G ได้อาจจะทำการเชื่อมต่อกับเครือข่าย 3G โดยอัตโนมัติและอาจมีค่าใช้จ่ายเพิ่มเติม
- โทรศัพท์ LG-P698f สนับสนุนการรักษาความปลอดภัย WEP, WPA/WPA2-PSK และ 802.1x EAP หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ตองป้อนรหัสในหน้าต่างป๊อปอัป หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้หน้าต่างป๊อปอัปนี้จะไม่ปรากฏขึ้นขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแล

การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์

คุณสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์ได้ถึงห้าเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi hotspot ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนในแถบการแจ้งเตือน

| ไอคอน | รายละเอียด |
|---|--------------------------------|
|  | กำลังใช้การปล่อยสัญญาณผ่าน USB |

| | |
|---|--|
|  | กำลังใช้งาน Portable Wi-Fi hotspot |
|  | กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot |

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการปล่อยสัญญาณและ Portable hotspots รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่ <http://www.android.com/tether>

การตั้งค่าการปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot

- 1 ในหน้าจอหลัก ให้แตะแท็บ แอปพลิเคชัน และเลือก **ตั้งค่า**
- 2 แตะ **ตั้งค่าการเชื่อมต่อ** แล้วเลือก **Tethering & portable hotspot**

ตั้งค่า

3 เลือกตัวเลือกที่คุณต้องการปรับ

การแชร์ USB – เลือกเพื่อแบ่งปันการเชื่อมต่อข้อมูลบนเครือข่ายโทรศัพท์เคลื่อนที่ของโทรศัพท์กับคอมพิวเตอร์ผ่านการเชื่อมต่อ USB

Portable hotspot – เลือกเพื่อแบ่งปันการเชื่อมต่อข้อมูลบนเครือข่ายโทรศัพท์เคลื่อนที่ของโทรศัพท์ด้วย Wi-Fi sharing

ช่วยเหลือ – เปิดกล่องโต้ตอบที่มีข้อมูลเกี่ยวกับการแชร์ USB และ Portable Wi-Fi Hotspot ตลอดจนข้อมูลเกี่ยวกับที่ที่คุณสามารถเรียนรู้เพิ่มเติม

การแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์ด้วย USB

หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ

(เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการแชร์ แต่ถ้าคุณกำลังใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่นคุณอาจจำเป็นต้องเตรียมการเครื่องคอมพิวเตอร์ของคุณสำหรับการเชื่อมต่อเครือข่ายด้วย USB สำหรับข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การปล่อยสัญญาณผ่าน USB และการแบ่งปันข้อมูล

คุณไม่สามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์ของคุณและการรด microSD ผ่าน USB ในเวลาเดียวกันได้

ขณะที่คุณกำลังใช้การเชื่อมต่อ USB หากคุณต้องการใช้การ์ด microSD กับคอมพิวเตอร์ คุณจะต้องเลิกการเชื่อมต่อก่อน

- 1 ใช้สายเคเบิล USB ที่มากับโทรศัพท์เพื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์
- 2 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า**
- 3 แตะ **ตั้งค่าการเชื่อมต่อ** แล้วเลือก **Tethering & portable hotspot**
- 4 เลือก **การปล่อยสัญญาณผ่าน USB**
 - โทรศัพท์จะเริ่มแบ่งปันการเชื่อมต่อขอมูลบนเครือข่ายโทรศัพท์เคลื่อนที่กับคอมพิวเตอร์ผ่านการเชื่อมต่อ USB การแจ้งเตือนแบบต่อเนื่อง จะถูกเพิ่มลงในแถบสถานะ และแถบการแจ้งเตือน
- 5 ยกเลิกการเลือก **การปล่อยสัญญาณผ่าน**

USB เพื่อหยุดการแบ่งปันการเชื่อมต่อขอมูลหรือถอดสายเคเบิล USB ก็ได้

การแบ่งปันการเชื่อมต่อขอมูลของโทรศัพท์โดยเป็น **Portable Wi-Fi hotspot**

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า**
- 2 แตะ **ตั้งค่าการเชื่อมต่อ** แล้วเลือก **Tethering & portable hotspot**
- 3 เลือก **Portable hotspot**
 - หลังจากรอสักครู่ โทรศัพท์จะเริ่ม broadcast ชื่อเครือข่าย Wi-Fi (SSID) ซึ่งคุณสามารถเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่นจำนวนสูงสุดห้าเครื่อง การแจ้งเตือนแบบต่อเนื่อง จะถูกเพิ่มลงในแถบสถานะ และแถบการแจ้งเตือน

ตั้งค่า

- เมื่อมีการเลือก **Portable hotspot** คุณสามารถเปลี่ยนแปลงชื่อเครือข่ายหรือป้องกัน Portable hotspot นั้นได้
- 4 ยกเลิกการเลือก **Portable hotspot** เพื่อหยุดการแบ่งปันการเชื่อมต่อข้อมูลผ่าน Wi-Fi

การเปลี่ยนชื่อหรือรักษาความปลอดภัยของ Portable hotspot

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

- 1 ในหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน** และเลือก **ตั้งค่า**
- 2 แตะ **ตั้งค่าการเชื่อมต่อ** แล้วเลือก **Tethering & portable hotspot**

- 3 ตรวจสอบให้แน่ใจว่าเลือก **Portable Wi-Fi hotspot** ไว้แล้ว
- 4 แตะ **Portable Wi-Fi hotspot settings**
- 5 แตะ **Configure Wi-Fi hotspot**
 - กลองโต้ตอบ **Configure Wi-Fi hotspot** จะปรากฏขึ้น
 - คุณสามารถเปลี่ยน SSID (ชื่อ) ของเครือข่าย ที่จะปรากฏให้คอมพิวเตอร์เครื่องอื่นๆ เห็น เมื่อทำการสแกนหาเครือข่าย Wi-Fi
 - นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) ที่ใช้ Pre-Shared Key (PSK)
 - หากคุณแตะที่ตัวเลือก **ระบบป้องกัน WPA2 PSK** ฟิลดร์รหัส

ผ่านจะถูกเพิ่มลงใน
กล่องโต้ตอบ
**Configure Wi-Fi
hotspot** ถ้าคุณป้อน
รหัสผ่านไว้ คุณจะต้อง
ป้อนรหัสผ่านดังกล่าว
เมื่อทำการเชื่อมต่อ
hotspot ของโทรศัพท์
กับคอมพิวเตอร์หรือ
อุปกรณ์อื่นหรือแตะ
เปิด ในเมนู
ระบบป้องกัน เพื่อ
ลบระบบป้องกันออก
จากเครือข่าย
Wi-Fi ของคุณ

6 แตะ **บันทึก**

การอัปเดตซอฟต์แวร์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์ โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้งานได้ต่อเมื่อ LG ให้บริการเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้นเนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่ากา

ถอดสายข้อมูล USB หรือ แบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียวและไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตเฟิร์มแวร์โทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้งานได้ต่อเมื่อ LG ให้บริการเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น ครั้งแรก, คุณสามารถตรวจสอบซอฟต์แวร์ได้จาก โทรศัพท์ของคุณ: **ตั้งค่า** > **เกี่ยวกับโทรศัพท์**

> ซอร์ฟแวร์อัปเดต

> ซอฟต์แวร์เวอร์ชัน

คุณยังสามารถจัดกำหนดเวลาการอัปเดตใหม่เป็น 1 ชั่วโมง, 4 ชั่วโมง, 8 ชั่วโมง หรือ 24 ชั่วโมงก่อนการอัปเดต ในกรณีนี้ แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาใหม่ หรืออัปเดตด้วยตัวคุณเองได้อีกด้วย

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย พื้นที่ หรือประเทศ

DivX Mobile

DivX

เกี่ยวกับวิดีโอ DivX: DivX® เป็นฟอร์แมตวิดีโอ ดิจิตอลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าสามารถเล่นวิดีโอ DivX

ได้ สำหรับข้อมูลเพิ่มเติม และเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ **DivX VIDEO**

-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน 320x240

DivX®, DivX Certified® และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ Rovi Corporation หรือ

การอัปเดตซอฟต์แวร์

บริษัทในเครือ และใช้โดย
ได้รับอนุญาต

ประกาศ:

ซอฟต์แวร์โอเพ่นซอร์ส

ในการขอรับซอร์สโค้ดที่
เกี่ยวข้องตาม GPL, LGPL,
MPL และและใบอนุญาต
โอเพ่นซอร์สอื่นๆ โปรดไปที่
<http://opensource.lge.com/>

เงื่อนไขใบอนุญาต

การปฏิเสธการรับผิดชอบ
และประกาศที่อ้างอิงถึงทั้ง
หมด สามารถดาวน์โหลด
ได้พร้อมกับซอร์สโค้ด

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-P698f (รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์สำหรับชาร์จแบตเตอรี่



สายเคเบิลข้อมูลเชื่อมต่อโทรศัพท์ LG-P698f ของคุณกับคอมพิวเตอร์



แบตเตอรี่



คู่มือการใช้เรียนรู้เพิ่มเติมเกี่ยวกับโทรศัพท์ LG-P698f



ชุดหูฟังสเตอริโอ



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

ศูนย์บริการ LG โดย บริษัท แอลจี

อิเล็กทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน

แขวงบुकโคล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-อาทิตย์,

07:00 - 19:00น.

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P698

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-07 V1.3.1 / EN 301 489-17 V2.1.1 /

EN 301 489-19 V1.2.1 / EN 301 489-24 V1.5.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 / EN 301 908-2 V4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Issued Date

Doo Haeng Lee / Director

22. Aug. 2011

Signature of representative

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหามางบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|----------------------------|--|--|
| ข้อผิดพลาดของซิมการ์ด | ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง | ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง |
| ไม่มีการเชื่อมต่อเครือข่าย | สัญญาเช่าก่อนหรืออยู่นอกพื้นที่บริการ | ไปที่บริเวณใกล้เคียงกับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่ายตรวจสอบว่าซิมการ์ดใช้งานมานานกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ที่สุด ติดต่อผู้ให้บริการ |
| รหัสไม่ตรงกัน | ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำรหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน | หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ |
| ตั้งค่าแอปพลิเคชันไม่ได้ | ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน | ติดต่อผู้ให้บริการ |

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|------------------------|--|---|
| ไม่สามารถโทรออกได้ | ขอผิดพลาดในการโทรออก มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน | ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยรหัส PIN2 |
| เปิดเครื่องไม่ได้ | กดปุ่มเปิด/ปิดเครื่องแล้วปล่อยเร็วเกินไป ไม่ได้ชาร์จแบตเตอรี่ ชั่วแบตเตอรี่สปริง | กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลังชาร์จบนหน้าจอ ทำความสะอาดขั้วแบตเตอรี่ |
| ความผิดปกติของการชาร์จ | ไม่ได้ชาร์จแบตเตอรี่ อุณหภูมิภายนอกเย็นเกินไป หรือมีปัญหาที่ขั้วสัมผัส ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด | ชาร์จแบตเตอรี่ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่ |
| โทรศัพท์โทรออกไม่ได้ | กำลังใช้การกำหนดหมายเลขโทรออก | ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว |

การแก้ปัญหา

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|--|-------------------------------|--|
| ไม่สามารถรับ / ส่งข้อความ ตัวอักษรและรูปภาพได้ | หน่วยความจำเต็ม | ลบข้อความบางข้อความออกจากโทรศัพท์ |
| เปิดไฟล์ไม่ได้ | ไม่สนับสนุนรูปแบบไฟล์ | ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน |
| การ์ด SD ไม่ทำงาน | สนับสนุนระบบไฟล์ FAT16, FAT32 | ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ด หรือฟอร์แมตการ์ด SD โดยใช้โทรศัพท์ |
| หน้าจอไม่ทำงานเมื่อจื่นรับสาย | เซ็นเซอร์รับสัญญาณมีปัญหา | หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซ็นเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซ็นเซอร์รับสัญญาณสะอาด |
| ไม่มีเสียง | โหมดยืน | ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดยืนหรือโหมดปิดเสียง |
| โทรศัพท์ค้าง | ปัญหาซอฟต์แวร์ชั่วคราว | ถอดแบตเตอรี่ออก ใส่กลับเข้าไปอีกครั้ง และเปิดโทรศัพท์ ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์ |

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|-------------|--------------------|---|
| โทรศัพท์แสง | รีสตาร์ทโทรศัพท์ | <ol style="list-style-type: none"> 1. ปิดโทรศัพท์ 2. ถอดฝาปิดแบตเตอรี่ 3. ใส่แบตเตอรี่ 4. ปิดฝาคครอบ 5. เปิดโทรศัพท์อีกครั้ง |



English

LG-P698f User Guide

This guide helps you get started using your phone.

If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone. This depends on your phone's software and your service provider.
- This handset is not recommended for the visually impaired because of its touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Contents

| | | | |
|--|-----------|--|-----------|
| Guidelines for safe and efficient use | 6 | Google account setup | 37 |
| Important notice | 13 | Creating your Google account... 37 | |
| Getting to know your phone | 23 | Signing in to your Google account..... | 37 |
| Installing the SIM card and battery..... | 25 | Calls | 39 |
| Charging your phone..... | 26 | Making a call..... | 39 |
| Installing the memory card..... | 27 | Calling your contacts..... | 39 |
| Formatting the memory card..... | 28 | Answering and rejecting a call.. | 39 |
| Your Home screen | 29 | Adjusting call volume..... | 40 |
| Touch screen tips..... | 29 | Making a second call..... | 40 |
| Lock your phone..... | 29 | Viewing your call logs..... | 40 |
| Unlock screen..... | 30 | Call settings..... | 41 |
| Silent mode..... | 30 | Contacts | 42 |
| Home..... | 30 | Searching for a contact..... | 42 |
| Adding widgets to your Home screen..... | 31 | Adding a new contact..... | 42 |
| Returning to recently-used applications..... | 32 | Favorite contacts..... | 42 |
| Using Dual SIM..... | 32 | Messaging/email | 44 |
| Notification drawer..... | 33 | Messaging..... | 44 |
| Viewing the status bar..... | 33 | Sending a message..... | 44 |
| Onscreen keyboard..... | 35 | Threaded box..... | 45 |
| Entering accented letters..... | 36 | Using Smilies..... | 45 |
| | | Changing your message settings..... | 45 |
| | | Opening Email and the Accounts Screen..... | 45 |

Contents

| | |
|---|-----------|
| Composing and Sending Email | 47 |
| Working with Account Folders | 48 |
| Adding and Editing Email Accounts | 48 |
| Social Networking | 50 |
| Social Networking | 50 |
| Adding your account to your phone | 50 |
| Viewing and updating your status | 51 |
| Removing accounts from your phone | 51 |
| Camera | 52 |
| Getting to know the viewfinder | 52 |
| Taking a quick photo | 53 |
| Once you've taken the photo | 53 |
| Using the advanced settings | 54 |
| Viewing your saved photos | 55 |
| Video camera | 56 |
| Getting to know the viewfinder | 56 |
| Shooting a quick video | 57 |
| After shooting a video | 57 |
| Using the advanced settings | 58 |
| Watching your saved videos | 58 |
| Adjusting the volume when viewing a video | 58 |
| Multimedia | 59 |
| View model | 59 |
| Timeline view | 59 |
| Using SmartShare | 59 |
| Music | 60 |
| Playing a song | 60 |
| Transferring files using USB mass storage devices | 61 |
| How to save music/video files on your phone | 62 |
| Moving contacts from your old phone to your new phone | 63 |
| Sending data from your phone using Bluetooth | 63 |
| Using the radio | 64 |
| Searching for stations | 65 |
| Resetting channels | 65 |
| Listening to the radio | 65 |
| Utilities | 66 |
| Setting your alarm | 66 |
| Using your calculator | 66 |
| Adding an event to your calendar | 66 |
| Changing your calendar view | 67 |

| | | | |
|-----------------------------------|-----------|--|-----------|
| Polaris Viewer..... | 67 | Wi-Fi..... | 80 |
| Voice recorder | 68 | Turning on Wi-Fi | 80 |
| Recording a sound or voice | 68 | Connecting to Wi-Fi | 80 |
| Sending the voice recording | 68 | Sharing your phone's data connection | 81 |
| The Web..... | 69 | USB tethering & portable Wi-Fi hotspot settings..... | 82 |
| Browser | 69 | To share your phone's data connection via USB | 82 |
| Using the web toolbar | 69 | USB tethering and data sharing | 82 |
| Using options..... | 69 | To share your phone's data connection as a portable Wi-Fi hotspot..... | 83 |
| Settings | 71 | To rename or secure your portable hotspot..... | 84 |
| Dual SIM settings..... | 71 | Software update | 86 |
| Wireless & networks | 71 | Phone software update | 86 |
| Call settings | 73 | DivX Mobile | 87 |
| Sound | 74 | Accessories | 88 |
| Display..... | 75 | Technical data..... | 89 |
| Location & security | 75 | Troubleshooting | 91 |
| Applications..... | 76 | | |
| Accounts & sync..... | 77 | | |
| Privacy..... | 77 | | |
| Storage..... | 77 | | |
| Language & keyboard | 78 | | |
| Voice input & output..... | 78 | | |
| Accessibility | 79 | | |
| Date & time | 80 | | |
| About Phone..... | 80 | | |

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P698f has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level

in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.26 W/kg (10 g) and when worn on the body is 1.15 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should

position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

Guidelines for safe and efficient use

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Guidelines for safe and efficient use

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use the phone near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use the phone on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

Guidelines for safe and efficient use

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Important notice

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When available space in your phone memory is less than 10%, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

Managing applications

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.

- 3 Tap **Uninstall**, then touch **OK** to uninstall the application you selected.

2. Optimising battery life

Extend your battery's life between charges by turning off features you don't need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your battery's life

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may cause your battery life to be reduced.

Important notice

Checking the battery charge level

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Status > Common**.
- 2 The battery status (Charging, Not charging) and level (percentage charged) is displayed at the top of the screen.

Monitoring and controlling what uses the battery

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Battery use**.
- 2 Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected to a power source or, if connected to a power source, how long you

were last running on battery power. The body of the screen lists applications or services using battery power, from greatest amount to least.

3. Installing an open source operating system

If you install and use an open source operating system (OS) on your phone rather than using the OS provided by the manufacturer, your phone may malfunction.

WARNING

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

 **WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Android Market. If there are improperly installed applications on your phone, your phone may not work normally or a serious error may occur. You must uninstall those applications and all their data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. On the home screen, touch **Applications** tab and select **Settings > Location & security > Set up screen lock > Pattern**.

Select **Continue** to next screen. Opens a set of screens that guide you through drawing a screen unlock pattern.

Caution: create a Gmail account before setting an unlock pattern.

 **WARNING**

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

If you have forgotten pattern: If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tab the Forgotten pattern button. You are then required to

Important notice

log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you forgot it, you have to perform a Hard reset.

If you have forgotten PIN or Password: If you forgot your PIN or Password, you need to do Hard reset.

5. Using the hard reset

If it does not restore to the original condition, use hard reset to initialise your phone.

When the phone is turned off, press and hold the **Home** key + **Volume down** key + **Power** key for over ten seconds. When the screen shows the LG logo, release the **Power** key.

After few seconds your phone get the Android system recovery screen with **Yes/No** options.

After the screen shows the above option, release the other keys.

To navigate between the options, we can use the **Volume up/down** key. Press the **Volume down** key to navigate to Yes option and press the **Power** key for confirmation.

Leave your phone for at least a minute while it performs the hard reset, then your phone will be turned on.

Caution: if you perform a hard reset, all user applications and user data are deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, access a wireless access point or “hotspot.” Some access points are open and you can simply connect

to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
 - If the network is open, you are asked to confirm that you want to connect to that network by touching **Connect**.

- If the network is secure, you're asked to enter a password or other credentials. (Ask your network administrator for details)

- 4 The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you first need to insert a microSD memory card into your phone.

If you don't insert a memory card, you cannot save the pictures and video you take with the camera.

Important notice

WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, in the Home screen, touch the **Applications** tab, then select **Settings > Storage > Unmount SD Card**.

8. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

Stopping applications

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.
- 2 Scroll to the desired application and touch **Force stop** to stop it.

TIP! Returning to recent apps
Press and hold the Home key.
A screen then displays a list
of the applications you used
recently.

9. Copying LG PC Suite from an SD card

LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable. Once connected, you can use the functions of the mobile phone on your PC.

Major functions of LG PC Suite IV

- Create, edit and delete phone data with ease
- Synchronise mobile phone data with PC data (contacts, calendar, SMS messages, bookmarks and call log)

- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone
- Transfer SMS messages from your phone to a PC
- Software update without losing your data

Installing LG PC Suite from your microSD memory card

- 1 Insert your microSD memory card into your phone. (It may already be inserted)
- 2 Before connecting the USB data cable, make sure that **Mass storage only** mode is enabled on your phone. (In the applications menu, choose **Settings**, then select **storage** and then select the **Mass storage only** box.)
- 3 Use the USB data cable to connect your phone to the PC.

Important notice

- 4 • In the status bar, drag the USB icon.
 - Choose **USB connected** and **Turn on USB storage**.
 - You can view the mass storage content on your PC and transfer files.
- 5 • Copy the LGPCSuiteIV folder in mass storage to your PC.
 - Run the LGInstaller.exe file on your PC and follow the instructions.

* When LG PC Suite IV installation is complete, disable **Mass storage only** mode to run LG PC Suite IV.

NOTE: do not remove or delete other program files installed on your memory card. This may damage your preinstalled applications.

10. Connecting your phone to a computer using USB

NOTE: to synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC. Download the program from the LG website (www.lg.com). Go to www.lg.com and select your region, country and language. For more information, visit the various pages of the site. Since PC Suite is on the microSD card, you can simply copy it to your PC.

LG-P698f does not support:

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java application

After installing PC Suite IV, you can find the User Guide in the Help menu.

- 1 Use the USB cable to connect your phone to a USB port on your computer. Once connected, you will receive a notification that a USB connection has been made.
- 2 Open the notification drawer and touch USB connected.
- 3 Touch **Turn on USB storage** to confirm that you want to transfer files between your phone's microSD card and the computer.

You will receive a notification when the phone connects as USB storage. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth drivers are not automatically removed. You must uninstall them manually.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow your computer's instructions for properly disconnecting USB devices to avoid losing information on the card.

- 1 Safely disconnect the USB device from your computer.
- 2 Open the notification drawer and touch **Turn Off USB Storage**.

Important notice

11. Unlocking the screen when using a data connection

Your display goes dark if untouched for a period of time when using a data connection. To turn on your LCD screen, just touch it.

12. Hold your phone straight up

Hold your mobile phone straight up, as you would a regular phone. The LG-P698f has an internal antenna. Be careful not to scratch or damage the back of the phone, as that causes loss of performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

13. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on. If it still does not work, please contact the service centre.

14. Do not connect your phone when you turn on/off your PC.

Make sure you disconnect the data cable between your phone and PC; leaving it connected might cause errors on your PC.

Getting to know your phone

To turn on your phone, press and hold the Power key for 3 seconds.

To turn off the phone, press and hold the Power key for 3 seconds, then touch **Power off** and **OK**.

Speaker

Proximity sensor

Back key 


Return to the previous screen.

Home key 

Return to home from any screen.

Menu key 

Check what options are available.

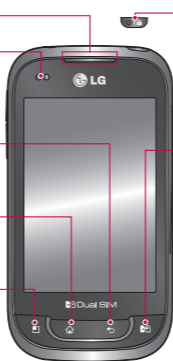

Power/Lock key

Switch your phone on/off by pressing and holding this key.
Turn off and lock the screen.

SIM Switch Key 

- Press the Key for SIM1/ SIM2 selection (Selected SIM is marked by square box on RSSI icon).
- Press and Hold the key to go to Dual SIM settings

NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

WARNING

Placing a heavy object on the phone or sitting on it, can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This may cause the sensor to malfunction.

Getting to know your phone



Installing the SIM card and battery

- 1 To remove the back cover, hold the phone in your hand firmly. With the other hand, firmly press your thumb on the back cover. Now lift off the back cover.



- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.



- 3 Insert the battery by aligning the gold contacts on the phone and the battery.



Getting to know your phone

- 4 Replace the back cover of the phone.



Charging your phone

Slide open the cover of the charger connector on the side. Insert the charger, then plug it into an electrical outlet. Your LG-P698f must be charged before you see



NOTE: the battery must be fully charged initially to improve battery lifetime.


Installing the memory card

To store multimedia files, such as images captured using the built-in camera, you must insert a memory card into your phone.

NOTE: the LG-P698f supports memory cards up to 32 GB.


To insert a memory card:

- 1 Turn the phone off before inserting or removing a memory card. Remove the back cover.

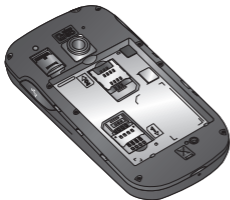

- 2 Open the slot protection and insert the memory card

into the slot. Make sure the gold contact area is facing downwards.

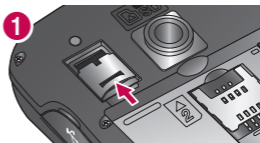

- 3 Close the slot protection.

Getting to know your phone



WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: all files on the card are deleted when you format the card.

- 1** In the Home screen, touch the **Applications** tab to open the applications menu.
- 2** Scroll to and touch **Settings** > **Storage**, then select **Mass storage only**.
- 3** Touch **Unmount SD card**.
- 4** Touch **Erase SD card**, then confirm your choice.
- 5** If you have set a pattern lock, input the pattern lock then select **Erase Everything**. The card is then formatted and ready to use.

NOTE: if there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – to choose a menu/option or open an application, touch it.

Touch and hold – to open an options menu or grab an object you want to move, touch and hold it.

Drag – to scroll through a list or move slowly, drag across the touch screen.

Flick – to scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using the LG-P698f, press the power key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen or another screen you are viewing is replaced with the lock screen to conserve battery power.

If there are any programs running when you set the pattern, they may be still running in Lock mode. It is recommended that you exit all programs before entering the Lock mode to avoid unnecessary charges (e.g. phone calls, Web access and data communications).

Your Home screen

Setting an unlock pattern: you can draw your own unlock pattern by connecting the dots. If you set a pattern, the phone screen locks. To unlock the phone, draw the pattern that you set on the screen.

Caution: when you set an unlock pattern, you need to create your Google account first.

Caution: if there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, Refer Point-4 under Important Notice.

Unlock screen

Whenever your LG-P698f is not in use, it returns to the lock screen. Drag your finger from bottom to top to unlock the screen.



Silent mode

In the notification drawer, touch  to be .

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.

NOTE: some screen images may be different depending on your phone provider.

In your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch screen dialpad to make a call.



Touch the **Contacts** icon to open your contacts.



Touch the **Message** icon to access the messaging menu. This is where you can create a new message.



Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications.

To open the desired application, simply touch the icon in the applications list.

NOTE: preloaded applications may differ according to your phone's software or your service provider.


Adding widgets to your Home screen

You can customise your Home screen by adding shortcuts, widgets or folders to it. For more convenience using your phone, add your favourite widgets to the Home screen.

- 1 In the Home screen, press the **Menu** key and select **Add**. Or touch and hold the empty part of the home screen.
- 2 In the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 You then see a new folder icon on the Home screen. Drag it to the desired location on the desired panel, then take your finger off the screen.

Your Home screen

TIP! To add an application icon to the Home screen from the **Applications** menu, touch and hold the application you want to add.

TIP! To remove an application icon from the Home screen, touch and hold the icon you want to remove, then drag it to .

NOTE: you cannot delete preloaded applications. (Only their icons can be deleted from the screen)

Returning to recently-used applications

- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to the current application.

Using Dual SIM

When two SIM cards are inserted on your phone, the SIM cards information are displayed on your notification drawer. When you press the SIM switch key, currently active SIM is switched.

NOTE:

- If only one SIM card is inserted or one SIM is off, SIM switching is not available, and the SIM switch key has no action.
- During a call, sending a message or using a data service, the other SIM's RSSI might be displayed as 'No service' due to the network service status.



WARNING

If you are outside of the service area, it may cause your device to consume more battery power.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

Or, in the Home screen, press the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth and GPS as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life and active Bluetooth and data connections.















Below is a table explaining the meaning of icons you're likely to see in the status bar.























[Status bar]

| Icon | Description |
|------|------------------------------|
| | No SIM card |
| | No signal |
| | Airplane mode |
| | Connected to a Wi-Fi network |
| | Wired headset |

Your Home screen

| Icon | Description |
|--|---------------------------------|
|  | Call in progress |
|  | Call hold |
|  | Speakerphone |
|  | Phone microphone is muted |
|  | Missed call |
|  | Bluetooth is on |
|  | Connected to a Bluetooth device |
|  | System warning |
|  | Alarm is set |
|  | New voicemail |
|  | Ringer is silenced |
|  | Vibrate mode |
|  | Battery fully charged |
|  | Battery is charging |


| Icon | Description |
|---|--|
|  | Data in and out / Default data network |
|  | Phone is connected to PC via USB cable |
|  | Downloading data |
|  | Uploading data |
|  | GPS is acquiring |
|  | Receiving location data from GPS |
|  | 3 more notifications not displayed |
|  | Data is syncing |
|  | Download finished |
|  | New Gmail |
|  | New Google Talk message |
|  | New message |



| Icon | Description |
|---|--|
|  | Song is playing |
|  | Upcoming event |
|  | FM radio turned on in the background |
|  | SmartShare On |
|  | SmartShare sharing request |
|  | USB tethering is active |
|  | Portable Wi-Fi hotspot is active |
|  | Both USB tethering and portable hotspot are active |


Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text


 Tap once to capitalise the next letter you type. Double tap for all caps.


  Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the Settings menu.


 Tap to view or press and hold to change the writing language.

 Tap to enter a space.

Your Home screen

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").


For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account setup

The first time you open the Google application on your phone, you are required to sign in with your existing Google account. If you do not have a Google account, you are asked to create one.

Creating your Google account

- 1 In the Home screen, touch the **Applications** tab  to open the Applications menu.
- 2 Tap **Gmail**, then tap **Next > Create** to start the Gmail setup wizard.
- 3 Enter your name and username for your Google account.
- 4 Tap **Next**. Your phone is now communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Follow the instructions and enter

the required and optional information about your account. Wait while the server creates your account.

Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign In**. Wait while the system signs you in.
- 2 After signing in, you can use Gmail and take advantage of Google services on your phone.
- 3 Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the Web. (This depends on your synchronisation settings)

After signing in, you can use other Google services on your phone.

Google account setup





IMPORTANT!


- Some applications, such as Calendar, only work with the first Google account you add. If you plan to use more than one Google account on your phone, be sure to sign in first to the one you want to use with applications such as Calendar. When you sign in, your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronised with your phone. If you do not sign in to a Google account during setup, you are asked to sign in or create a Google account the first time you start an application that requires one, such as Gmail or Android Market™.

- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign in to that account.

Calls


Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the **Clear** icon .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter “+” to make international calls, touch and hold .

TIP! If both the SIM cards are inserted and activated, SIM1/SIM2 can be selected on Dial Screen by using SIM switching key.

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When your phone rings, touch the **Answer** icon .

Touch the **Decline** icon  to reject an incoming call.

Drag the **Excuse messages** bar from the bottom if you want to send one. If the caller is unknown, the **Excuse messages** bar is not available.

Calls




TIP! Excuse messages


When you want to decline a call, you can send a message quickly by touching **Excuse msg** on the screen. This is useful if you need to reply the message during a meeting

Adjusting call volume

To adjust the in-call volume during a call, use the Volume Up and Down key on the left side of the phone.

Making a second call


- 1 During your initial call, touch  the Menu key and select .
- 2 Dial the number, or search your contacts.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls are displayed on the call screen. Your initial call is locked and put on hold.

5 Touch the displayed number to toggle between calls. Or touch  **Merge calls** to make a conference call.

6 To end active calls, touch **End** or press the **Home** Key and slide the notification bar down and select **End call**.

NOTE: you are charged for each call you make.

Viewing your call logs

In the Home screen, touch  and choose the **Call log** tab.

View a complete list of all dialed, received and missed voice calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 In the Home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.


Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keyboard.

Adding a new contact


- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from Gallery**.

- 3 Select the contact type by touching . Choose whether to save the contact to your phone or SIM (SIM 1/SIM 2).
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.


Favorite contacts

You can classify frequently called contacts as favorites.

Adding a contact to your favorites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

Removing a contact from your favorites list


- 1 Touch  to open your contacts.
- 2 Touch the Groups tab, select Favourites at the top of the list and choose a contact to view its details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

Messaging/email

Messaging

Your LG-P698f combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can also add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.


- 3 Touch Enter message to start entering your message.
- 4 Press the **Menu** key to open the options menu. Choose from

Call, Add subject, Attach, Insert smiley, Discard(Delete), All messages, etc.

- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message below your name or number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

TIP! If both the SIM cards are inserted and activated , SIM1/SIM2 can be selected on Message editor screen by using SIM switching key.

! WARNING: The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

NOTE: When you get an SMS message during a call, there will be a ring notification.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.


Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the **Menu** key, then choose **Insert smiley**.

Changing your message settings

Your LG-P698f message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

 **WARNING:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

NOTE: Cell broadcast settings can be supported only for SIM1.

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Google Mail. The Email application supports the following

Messaging/email

account types: POP3, IMAP and Exchange.

To open the Email application

From the Home screen, touch **Email**.

Select Email Service Provider.

A setup wizard opens to help you add an email account. After the initial setup, Email displays the contents of your Inbox (if you have only one account) or the Accounts screen (if you have multiple accounts).

The Accounts screen

The Accounts screen lists your Combined Inbox and each of your email accounts.

- 1 Open the **Email** application. If you're not on the Account screen, press the **Menu Key** and touch **Accounts**.

- 2 Select the Email service provider.



- Touch to open your Combined Inbox, with messages sent to all of your accounts.



- Touch to open just the list of your starred messages.



- Touch the folder icon to open the account's folders.

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.

To open your Combined Inbox

If you have configured Email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox.

- 1 Touch **Email**.

2 Touch **Combined Inbox** (in the Accounts screen). Messages in the Combined Inbox are colour coded along their left sides, by account, using the same colours that are used for your accounts in the Accounts screen.


Only your account's most recent emails are downloaded to your phone. To download more (earlier) email messages, touch **Load more messages** at the bottom of the emails list.

Composing and Sending Email

To compose and send a message:

- 1** While in the **Email** application, press the **Menu Key** and touch **Compose**.
- 2** Enter an address for the message's intended recipient. As you enter text, matching

addresses are offered from your Contacts. Separate multiple addresses with commas.

- 3** Press the **Menu Key** and touch **Add Cc/Bcc** to be able to Cc or Bcc other contacts/email addresses.
- 4** Enter the text of the message.
- 5** Press the **Menu Key** and touch **Add Attachment** to attach the file you want to share with your message.
- 6** Touch the **Send** button. If you're not ready to send the message, touch the **Save as draft** button to save it in a Drafts folder. Touch a draft message in a Drafts folder to resume working on it. Your message will also be saved as a draft if you touch the **Back Key**  before sending it. Touch the **Discard** button

Messaging/email

to abandon and delete a message, including any saved drafts. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself. If you want to see your sent messages in the Sent folder (or with the Sent label), you will often need to open the Sent folder/label and select Refresh from the options menu.

Working with Account Folders

Each account has Inbox, Outbox, Sent, and Drafts folders. Depending on the features supported by your account's service provider, you may have additional folders.

Adding and Editing Email Accounts

To add an email account

- 1 Press the **Menu Key** and touch **Add account**.
- 2 Select **Email Service Provider**, and enter email account settings.
- 3 Enter a name for the account, confirm how you want your name to appear in outgoing mail, then touch the **Done** button.

To change an account's settings

- 1 Open the Accounts screen.
- 2 Touch and hold the account whose settings you want to change. In the menu that opens, touch **Account settings**.

To delete an email account

- 1 Open the Accounts screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens.
- 4 Touch the **OK** button in the dialog box to confirm that you want to delete the account.

Social Networking


Social Networking



With your phone, you can take advantage of Social Networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friend's status updates in real-time.

You can add your Facebook, Twitter and Myspace accounts to your phone. If you don't have an account, you can visit their sites to set it up.

NOTE: Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone



1 Touch and hold the home screen. When various Widgets appear, choose **Social+** 

and tap the  **Setting button**. You can also access in a different way, on the home screen, choose **Applications** tap  > **Settings** > **Accounts & sync** > **Social+ settings**.

- 2 Choose the Social Networking client application you want to use from Facebook for LG, Twitter for LG and MySpace for LG.
- 3 Enter your community email address and password, then tap **Log in**.
- 4 Wait while your details are confirmed with your community.
- 5 If you tap your community, you can see its current status.

TIP! If you add a Social Networking widget on your home screen, the widget will show your status when your phone updates from the network. You can also access the social community directly by touching the widget.

Viewing and updating your status


- 1 You can view and update social community content using the **Social+**  widget at any time.
- 2 On the **Social+**  widget, choose the Social Networking service which you want to log in. You will then see your status and contents.
- 3 When you touch the input box, the screen will switch to update your current status with comments or upload photos.

TIP! You can update your status and upload photos simultaneously to Facebook for LG, Twitter for LG and MySpace for LG by selecting the checkbox.

NOTE: This depends on network services.

TIP! You can synchronise your friend's contact to your contact list.

Removing accounts from your phone

- 1 Choose **Applications** tap  **Settings** > **Accounts & sync**
- 2 Choose an account you want to delete > Touch **Remove account**.

Camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar towards “-” to lower the brightness of the image or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Video mode - slide this icon down to switch to video mode.

Taking a photo

Gallery - touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.


Settings - touch this icon to open the Settings menu. See 'Using the advanced settings'.

Image size – touch to set the size (in pixels) of the picture you take.

Scene mode – choose from **Auto, Portrait, Landscape, Sports, Night** and **Sunset**.

TIP! Close all shortcut options to give a clearer viewfinder screen. Touch the centre of the viewfinder once. To display the options, touch the screen again.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone horizontally and point the lens towards the subject you want to photograph.
- 3 In the centre of the viewfinder screen, a focus box starts blinking as it tries to get the subject in focus.
- 4 The focus box turns green when the subject is in focus.
- 5 Press the capture button. You can press the capture button whether the focus box is green or not.
- 6 Press the capture  button.

Once you've taken the photo

Your captured photo appears on the screen.

Share Touch to share your photo using **SmartShare, Bluetooth, Email, Gmail, Messaging, Picasa** or **Social+**.


NOTE: additional charges may apply when MMS messages are downloaded while roaming.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

Set as Touch to use the image as a **Contact icon** or **wallpaper**.

Rename Touch to edit the name of the selected picture.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo is saved.

Camera

 Touch to view a gallery of your saved photos.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

ISO – the ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions. Select from ISO values of **Auto**, **400**, **200** and **100**.

White balance – choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Color effect – choose a color tone for your new photo.

Timer – the self-timer allows you to set a delay after the capture button is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be in the photo.

Image quality – choose from **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size increases as a result, which means you can store fewer photos in the memory.


Auto review – if you turn **Auto review** on, it automatically shows you the picture you just took.


Shutter sound – select one of four shutter sounds.

Tag location – activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports

geotagging, you can see the pictures displayed on a map.

NOTE: this function is only available when GPS is active.


 – Restore all camera default settings.

 – Touch whenever you want to know how this function operates. This provides you with a quick guide.

TIP! When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.

TIP! The Settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.

Viewing your saved photos

Access your saved photos while in **Camera** mode. Just touch  and touch the screen. You then see **Slideshow** and **Menu**.

TIP! Flick left or right to view other photos or videos.



- Touch to see a slideshow.



- Touch to share the contents or delete a photo. Touch **More** for more options.

Details – check information on the content.

Set as – set as a contact icon or wallpaper.

Crop – crop your photo. Move your finger across the screen to select the area.

Rotate – rotate left or right.

Video camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar towards “-” to lower the brightness of the video or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Camera mode - slide this icon up to switch to camera mode.

Start recording




Gallery - touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Settings - touch this icon to open the settings menu. See 'Using the advanced settings'.

Duration – set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Video size – touch to set the size (in pixels) of the video you record.

Shooting a quick video

- 1 Slide the **Camera** mode button down and the icon changes to .
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 REC appears at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play

Touch to play the video.

Share

Touch to share your video using **SmartShare, Bluetooth, Email, Gmail, Messaging** or **YouTube**.

NOTE: additional charges may apply when MMS messages are downloaded while roaming.

Rename

Touch to edit the name of the selected video.



Touch to shoot another video right away. Your current video is saved.



Touch to delete the video you just made. Confirm by touching **OK**. The viewfinder reappears.



Touch to view a gallery of your saved videos.

Video camera

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.


White balance – white balance ensures that the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.


Color effect – choose a color tone to use for your new view.

Video quality – choose from **Super fine**, **Fine** and **Normal**.


Audio recording – choose **Mute** to record a video without sound.

Auto review – auto review automatically shows you the video you just recorded.

 – Restore all video camera default settings.

 – Touch if you want to know how this function operates. This provides you with a quick guide.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery appears on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts playing automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

Multimedia

You can store multimedia files on a memory card to have easy access to all your image and video files.

Touch the **Applications** tab, then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.


NOTE: make sure you install a memory card in the phone to save photos and access all your pictures. Without a memory card, the phone does not display photos or videos from Picasa images, which are in your Picasa album.

View mode

Touch **Gallery**. Folder view is displayed.

Touch any folder and it turns to grid view mode. If you tap a photo, it changes into full view mode.

Timeline view

LG-P698f **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

Using SmartShare

SmartShare provides you with a better way to enjoy multimedia contents with other DLNA (Digital Living Network Alliance) enabled devices.

* Share your media contents with other DLNA devices (DMS)

- 1 In the Home screen, touch the **Applications** tab and select **SmartShare**.

Multimedia

2 Press the **Menu** key and select **Settings**.

3 Touch the Discoverable tickbox to turn on.

4 You can change your device name, icon and select the sharing content types.

* **Let your renderer device (e.g. TV) play multimedia contents from remote content library (e.g. PC)**

1 Touch the top right button to select the device from a list of renderers.

2 Touch the top left button and select a remote content library.

3 You can browse the remote content library.

4 Touch a content thumbnail or press the **Menu** key and select the Play button.

NOTICE: check that your device is connected to your home network using a Wi-Fi connection in order to use this application.

NOTICE: some DLNA-enabled devices (e.g. TV) support only DMP features of DLNA and will not appear in the renderer device lists.

Music


Your LG-P698f has a built-in music player that lets you play all your favourite tracks. To access the music player, On the home screen, touch the **Applications** tab and then touch on **Music**.

Playing a song



1 In the Home screen, touch the **Applications** tab and select **Music**.

2 Touch **Songs**.

3 Select the song you want to play.

4 Touch  to pause the song.

5 Touch  to skip to the next song.

- 6 Touch  to go back to the beginning of the song. Touch  twice to return to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. It displays **Play, Add to playlist, Use as phone ringtone, Delete, Details, Share** and **Search** as options.

NOTE: music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Transferring files using USB mass storage devices

To transfer files using USB devices

- 1 Connect the LG-P698f to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on

Multimedia

your PC, you need to change the settings manually. Choose **Settings > Storage**, then select **Mass storage only**.

- 3 Touch **Turn on USB storage**.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE: you need to install an SD card first. Without an SD card, you cannot use USB mass storage.

NOTE: if you installed LG Android Platform Driver, you will immediately see a pop-up saying Turn on USB storage.

How to save music/video files on your phone

- 1 Connect your phone to the PC using the USB cable. In the Home screen, touch and drag the status bar down. Select **USB connected > Turn on USB storage > Open folder to view files**.

If you didn't install LG Android Platform Driver on your PC, you must set it up manually. For more information, refer to 'Transferring files using USB mass storage devices'.

- 2 Save music or video files from the PC to the phone's removable storage.
 - You can copy or move files from your PC to your phone's removable storage using a card reader.
 - If there is a video file with a subtitle file (*.srt file with the same name as the video file), place it in the same folder to display subtitles automatically when playing the video file.
 - When downloading music or video files, copyrights must be secured. Note that corrupted files or files with incorrect extensions may damage your phone.

Moving contacts from your old phone to your new phone

Export your contacts as a CSV file from your old phone to your PC using a PC sync program.

- 1 Download PC Suite IV from www.lg.com and install it on the PC. Run the program and connect your Android mobile phone to the PC using the USB cable.
- 2 Select the **Contacts** icon. Go to **Menu > File > Import** and select the CSV file saved on your PC.
- 3 If the fields in the imported CSV file are different from those in PC Suite IV, you need to map the fields. After mapping the fields, click OK. The contacts are then added to PC Suite IV.
- 4 If PC Suite IV detects the connection of your LG-P698f

phone (using the USB cable), click Sync or Sync contacts to synchronise the contacts saved on your PC with your phone.

Sending data from your phone using Bluetooth

Sending data using Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

- * **Sending pictures:** run the Gallery application, then select **Picture > Menu**. Click **Share**, then select **Bluetooth**. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.
- * **Exporting contacts:** run the Contacts application. Touch the address you want to export to. Press the **Menu** key and select

Multimedia

Share > Bluetooth. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.

* **Sending multi-selected contacts:** Run the Contacts application. To select more than one contact, press the **Menu** key and touch **Share >** tick the contacts you want to share or tick **Select all** option in top of the screen to select all the contacts > **Share > Bluetooth**. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.

* **Connecting to FTP (only FTP server is supported on this handset):** select **Settings > Wireless & networks > Bluetooth Settings**. Select the

Discoverable box so you can search for your phone on other devices. Find the FTP service and connect to the FTP server.

- If you want to search for this phone from other devices, go to **Settings > Wireless & networks > Bluetooth Settings**. Select the **Discoverable** box. The box is cleared after 120 seconds.

Using the radio

Your LG-P698f has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: you must attach your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again. You can store up to 48 channels on your phone.

Tuning in automatically

- 1 In the Home screen, touch the **Applications** tab and select **FM Radio**.
- 2 Press the **Menu** key, then touch **Auto scan**.
- 3 If there are preset channels, you will see a pop-up asking "Reset all channels and start auto scan?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
- 4 During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: you can also manually tune in to a station using the displayed wheel.

Resetting channels

Press the **Menu** key and choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

Listening to the radio

Touch **Listen Via** to set the speaker or headset to listen to the radio.


TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Utilities

Setting your alarm

- 1 In the Home screen, touch the **Applications** tab and select **Clock**.
- 2 If you want to add a new alarm, touch  and select **Add alarm**.
- 3 Set the time, to turn on the alarm. After you set the time, the LG-P698f lets you know how much time is left before the alarm will sound.
- 4 Set **Repeat**, **Ringtone** or **Vibrate**, then add a label to name the alarm. Touch **Done**.

NOTE: to change alarm settings on alarm list screen, press the **Menu** key and select **Settings**. You can adjust the below options: **Alarm in silent mode**, **Alarm volume**, **Snooze duration** and **Side button behavior**.

Using your calculator

- 1 In the Home screen, touch the **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced** panel, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**.
- 2 To check the event, touch the date. Touch and hold if you want to add a new event. Touch **New event**.

- 3 Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.
- 4 Also, touch **Where** then enter the location.
- 5 If you want to add a note to your event, touch **Description** and enter the details.
- 6 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 7 Touch **Done** to save the event in the calendar. A coloured square in the calendar marks all days that have saved events. An alarm sounds at the event start time to help you stay organised.

Changing your calendar view

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**. Press the **Menu** key.
- 2 Select the calendar view for a particular day, week or month.

Polaris Viewer

Polaris Viewer is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Managing files

Polaris Viewer provides mobile users with convenient file management features, including copying, cutting and pasting, and deleting files and folders right on the device.

Utilities




Viewing files


Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Viewer, the objects and layout remain the same as in their original documents.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 In the Home screen, touch the **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: touch  to access your album. You can listen to the saved recording.

NOTICE: the available recording time may differ from the real time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording is added to the message, then you write and send the message normally.


The Web


Browser


Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.


Using the web toolbar


 Touch to go backwards one page.

 Touch to go forwards one page to the one you connected to after the current page. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.

 Touch to show all your open windows.

 Touch to add new window.

 Touch to change web browser settings.


 Add/show bookmark and show **Most visited**, **Read it later** and **History**.


Using options


Press the **Menu** key to view options.

 **Read it later** – add the current web page as a bookmark.

 **Add RSS feed** – add the current web page to the RSS feed.

 **Share page** – allows you to share the web page with others.

 **Find on page** – allows you to find letters or words on the current web page.

 **Select text** – allows you to copy any text from the web page.

The Web



More

- **Home page:** go to the Home page.
- **Set Home page:** set the current web page as your Home page.
- **Add shortcut to Home:** add the shortcut of the current web page to the Home screen.
- **Page info:** displays the web page information.
- **Downloads:** displays your download history.

TIP! To return to the previous web page, press the **Back** key.

Settings

In the Home screen, touch the **Applications** tab then scroll to and touch **Settings**.

Dual SIM settings

You can configure Dual SIM settings.

When two SIM cards are inserted on your phone, the SIM cards information are displayed. Touch to tick. This turns on the selected SIM to active.

If you try to turn off SIM1 when SIM2 is off, SIM2 should be turned on by itself. (it is not allowed to turn off both SIM cards simultaneously.)

SIM color theme – SIM color theme you select is applied to indicator RSSI & SIM icon.

Data enabled – touch to tick. This enable data access over the mobile network.

Default data network – you can change the default data network.

All mobile packet services (Web, MMS, Email, etc) will use SIM selected on this value.

When only one SIM card is inserted, the default data network is set as the inserted SIM and it is not allowed to change.

NOTE: When airplane mode is on, dual SIM settings is disabled.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

Airplane mode – after switching to airplane mode, all wireless connections are disabled.

Wi-Fi – touch to tick. This turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The

Settings

advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P698f into the router.

You can find the MAC address in the following user interface: Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and press the **Menu** key. Then select **Advanced > MAC Address**.

Bluetooth – touch to tick. This turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – set device name & discoverable mode, scan for other devices. Or, check a list of Bluetooth devices that you've

previously configured and those detected when the phone last scanned for Bluetooth devices.

Tethering & portable hotspot – you can configure the USB tethering and portable Wi-Fi hotspot settings.

VPN settings – displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – set options for data roaming, network mode & operators, access point names (APNs) and so on.

NOTE:

- By default ,the network mode for Slot 1 is set as WCDMA mode and Slot 2 network mode is set as GSM mode so slot 2 network mode can't be changed to WCDMA mode directly.

- If slot 2 network mode needs to be changed to WCDMA mode, then Slot 1 network mode should have been changed to GSM only mode before changing the network mode to WCDMA in Slot 2.

Call settings

You can configure the call settings of SIM card you inserted.

< Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – allows you to select your carrier's voicemail service.

Voicemail settings – if you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call forwarding – choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Call barring – select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – view the charges applied to your calls. (This service is network dependent; some operators do not support this function)

Call duration – view the duration of calls including all calls, dialled calls, received calls and last call.

Settings

Additional settings – this lets you change the following settings:

Caller ID: choose whether to display your number on an outgoing call.

Call waiting: if call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

< Common >

Excuse messages – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Call reject – allows you to set the call reject function. Choose from **Off**, **Reject on list** or **Reject all calls**.

Sound

< General >

Silent mode – allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos and any alarms you have set. You must silence media and alarms in their own applications.

Vibrate – allows you to set your phone to vibrate when you receive an incoming call.

Volume – allows you to set the volume for ringtones, media and alarms. If you deselect the option to use the incoming call volume for notifications, you can set the volume for incoming calls and notifications separately.

< Incoming calls >

SIM 1/ SIM 2 Phone ringtone

– Allows you to set your default incoming call ringtone of SIM card you inserted.

< Notifications >

Notification ringtone – allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – allows you to set the phone to play tones when using the dialpad to dial numbers.

Audible selection – allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sounds – allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – allows you to set your phone to vibrate briefly when pressing the soft keys on certain UI Interactions.

Display

Brightness – adjust the screen brightness.

Auto-rotate screen – set to switch orientation automatically when you rotate the phone.

Animation – set to display an animation.

Screen timeout – set the time for screen timeout.

Location & security

Use wireless networks – if you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – if you select **Use GPS satellites**, your phone determines your location to street level accuracy.

Settings

Set up screen lock – set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **password** instead of a **pattern** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Set up SIM card lock – set up SIM card lock or change the SIM PIN.

Visible passwords – select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – add one or more administrators.

Use secure credentials – allows you to access secure certificates.

Install from SD card – choose to install encrypted certificates from your SD card.

Set password – set or change the credential storage password.

Clear storage – clear credentials for all content and reset password.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown sources – default setting to install non-Market applications.

Manage applications – manage and remove installed applications.

Running services – check services that are currently running.

Storage use – view storage used by applications.

Battery usage – see what has been using the battery.

Development – set options for application development.

Accounts & sync

< General sync settings >

Background data – permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

Auto-sync – permits applications to synchronise, send and receive data to their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone.

If you touch an account in this screen, its account screen opens.

Privacy

If you select Factory data reset, it will erase all of your personal data from the internal phone storage, including information about

your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM license.

Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information that you did when you first started Android.

Storage

< USB connection mode >

Mass storage only – your phone can be used as a mass storage device if you have a memory card inserted. You can set **Mass storage only** as a default setting of the USB connection mode.

Settings

< SD card >

Check total available SD card space. Touch **Unmount SD Card** for safe removal. **Erase SD Card** if you want to delete all data from the SD card.

< Internal storage >

Checks the available space.

Language & keyboard

Set local language and region as well as keyboard settings.

Voice input & output

< Voice input >

Voice recognizer settings – use the **Voice recognizer settings** to configure the Android voice input feature.

- **Language:** opens a screen where you can set the language you use speech to enter text.

- **SafeSearch:** opens a dialog where you can set whether you want the Google SafeSearch filter to block some results.
- **Block offensive words:** when not selected, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When ticked, Google voice recognition replaces those words in transcriptions with a placeholder comprised of hash symbols (#).

< Voice output >

Text-to-speech settings – use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

NOTE: if you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** plays a brief sample of the speech synthesiser, using your current settings.
- **Always use my settings:** tick to use the settings on this screen in place of speech synthesiser settings available in other applications.
- **Default Engine:** opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** if your phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.
- **Speech rate:** opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful in combination with **Always use my settings** to ensure that text is spoken correctly in a variety of applications.
- **Pico TTS:** configure the **Pico TTS settings**.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: requires additional plug-ins.

Settings

Date & time

Use **Date & time** settings to set your preference for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About Phone



View legal information and check phone status and software version.

Wi-Fi


With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).

Enjoy wireless Internet using Wi-Fi, without extra charges.

Turning on Wi-Fi

From the Home screen, open the notification drawer and touch . or touch **Applications** tab > **Settings** > **Wireless & networks**, then tap on **Wi-Fi** .

Connecting to Wi-Fi

Choose the Wi-Fi network you want to connect to. If you see , you need to enter a password to connect.

NOTE:

- if you are outside the Wi-Fi coverage area and choose 3G connection, additional charges may apply.
- If your phone goes into sleep mode when connected to Wi-Fi, the Wi-Fi connection is automatically disabled.
- In this case, if your phone has access to 3G data, it may connect to the 3G network




automatically and additional charges may apply.

- The LG-P698f supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key into the pop-up window. If encryption is not set, this pop-up window is not shown. Obtain the key from your Wi-Fi service provider or network administrator.

Sharing your phone's data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with up to five devices at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

| Icon | Description |
|---|--|
|  | USB tethering is active |
|  | Portable Wi-Fi hotspot is active |
|  | Both USB tethering and portable hotspot are active |

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

NOTE: additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Settings

USB tethering & portable Wi-Fi hotspot settings

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 3 Choose options that you want to adjust.

USB tethering – tick to share your phone's mobile network data connection with your computer via a USB connection.

Portable Wi-Fi hotspot – tick to share your phone's mobile network data connection as Wi-Fi sharing.

Help – opens a dialog with information about USB tethering and portable Wi-Fi hotspots as well as information on where to learn more.


To share your phone's data connection via USB

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.


USB tethering and data sharing

You can't share your phone's data connection and microSD card via USB at the same time. If you are using your USB connection to

make your microSD card available to your computer, you must disconnect it first.

- 1 Use the USB cable that came with your phone to connect your phone to your computer.
- 2 In the Home screen, touch the **Applications** tab and select **Settings**.
- 3 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 4 Tick **USB tethering**.
 - The phone starts sharing its mobile network data connection with your computer via the USB connection. An ongoing notification  is added to the status bar and notifications drawer.
- 5 Deselect **USB tethering** to stop sharing your data connection. Or just disconnect the USB cable.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 3 Tick **Portable Wi-Fi hotspot**.
 - After a moment, the phone starts broadcasting its Wi-Fi network name (SSID) so you can connect to it with up to five computers or other devices. An ongoing notification  is added to the status bar and notifications drawer.
 - When **Portable Wi-Fi hotspot** is ticked, you can change its network name or secure it.
- 4 Deselect **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

Settings

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
 - 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
 - 3 Ensure **Portable Wi-Fi hotspot** is ticked.
 - 4 Touch **Portable Wi-Fi hotspot settings**.
 - 5 Touch **Configure Wi-Fi hotspot**.
- The **Configure Wi-Fi hotspot** dialog opens.
 - You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security, with a pre-shared key (PSK).
 - If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!

If you set the security option as **Open**, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

6 Touch **Save**.

Software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable

or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

Settings > About phone > Software update > Check now for update.

You can also delay the update by 1 hour, 4 hours, 8 hours or 24 hours. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: This feature is dependent on the network service provider, region or countries.

DivX Mobile **DIVX**

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the

DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 320x240

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

NOTICE:

Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred license terms, disclaimers and notices are available for download with the source code.

Accessories

These accessories are available for use with the LG-P698f.
(Items described below may be optional.)

Travel adapter



Data cable

Connect your LG-P698f and PC.



Battery



User Guide

Learn more about your LG-P698f.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sun

07:00 - 19:00

Call center : 0-2878-5757

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P698f

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-07 V1.3.1 / EN 301 489-17 V2.1.1 /

EN 301 489-19 V1.2.1 / EN 301 489-24 V1.5.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 / EN 301 908-2 V4.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Doo Haeng Lee / Director

08. Nov. 2011

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

| Message | Possible causes | Possible corrective measures |
|--|---|--|
| SIM error | There is no SIM card in the phone or it is inserted incorrectly. | Make sure that the SIM card is correctly inserted. |
| No network connection/ Losing network | Signal is weak or you're outside the carrier network. Operator applied new services. | Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider. |
| Codes do not match | To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match. | If you forgot the code, contact your service provider. |
| Any application cannot be set | Not supported by service provider or registration required. | Contact your service provider. |

Troubleshooting

| Message | Possible causes | Possible corrective measures |
|-----------------------------|--|---|
| Calls not available | Dialling error New SIM card inserted. Pre-paid charge limit reached. | New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2. |
| Phone cannot be switched on | On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty. | Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts. |
| Charging error | Battery is not charged. Outside temperature is too hot or cold. Contact problem No voltage Charger defective Wrong charger Battery defective | Charge battery. Make sure phone is charging at a normal temperature. Check the charger and connection to the phone. Check the battery contacts and clean them if necessary. Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery. |

| Message | Possible causes | Possible corrective measures |
|--|---|--|
| Number not permitted | The Fixed dialling number function is on. | Check the Settings menu and turn the function off. |
| Impossible to receive / send SMS & picture | Memory full | Delete some messages from the phone. |
| Files not opening | Unsupported file format | Check the file formats that can be supported. |
| SD card not working | FAT16, FAT32 file system supported | Check SD card file system via card reader, or format SD card using the phone. |
| The screen does not turn on when I receive a call. | Proximity sensor problem | If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean. |
| No sound | Vibration mode | Check the settings status of the sound menu to make sure you are not in vibrate or silent mode. |
| Hang up or freeze | Intermittent software problem | Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website. |

Troubleshooting

| Message | Possible causes | Possible corrective measures |
|-------------------------------------|----------------------|---|
| Phone locked and does not function. | Restarting the phone | <ol style="list-style-type: none"><li data-bbox="491 199 705 231">1. Turn the phone off.<li data-bbox="491 240 778 273">2. Remove the battery cover.<li data-bbox="491 282 695 315">3. Install the battery.<li data-bbox="491 323 674 356">4. Close the cover.<li data-bbox="491 365 767 398">5. Turn the phone on again. |