


KG290 使用手冊

- 繁體中文

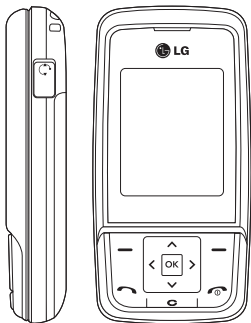

目錄

安全須知	4	設定	22	待辦事項	27
安全與有效使用準則	5	網絡設定		秒錶	
KG290 功能	10	檢視模式	23	單位轉換器	
手機正面		暫存記憶		世界時間	
屏幕圖標	13	Cookies		智能咭服務	
安裝	15	安全認證		多媒體	28
插入智能咭與手機電池		顯示圖像		MP3 播放器	
為電池充電	17	Java 指令		所有曲目	
拔下充電器	18	記憶體用於		我的播放清單	
一般功能	19	資訊		設定	
輸入文字		通話記錄	24	相機	
變更文字輸入模式		所有通話		視像攝錄機	30
使用 T9 模式	20	未接來電		FM 收音機	
功能表	21	已撥通話		語音備忘錄	
瀏覽器	22	已接來電		訊息	31
主頁		通話時間		新增訊息	
書籤		通話費用		文字	
輸入網址		數據資訊		多媒體	32
記錄		工具	25	收件匣	33
已儲存的網頁		鬧鐘		草稿	34
		日曆		寄件匣	
		計算機	26	已發送	
		備忘錄		收聽留言訊息	

資訊廣播 34

讀取 35

主題

常用範本

文字

多媒體

設定 36

文字訊息

多媒體訊息

留言信箱號碼 37

Push 訊息

資訊廣播

我的檔案 39

圖像

聲音

影片

其他

遊戲及應用功能 40

網絡設定

外置記憶體

情景模式 42

啟動

更改

通訊錄 44

搜尋

新增通訊錄

快速撥號

群組

複製全部 45

刪除全部

設定

檢視選項

資訊

設定 46

日期及時間

語言

屏幕

牆紙

背景燈時計

亮度

功能導向捷徑

主題

功能表風格

備用歡迎辭 47

網絡名稱

彩色撥號字體

連接

藍芽

網絡 48

USB連接模式 49

通話 50

來電轉駁

接聽模式

發送我的號碼 51

來電等候

分鐘提示

自動重撥

選擇線路

傳送DTMF 52

安全

PIN 碼要求

自動按鍵鎖

手機鎖

通話限制 53

固定撥號號碼

更改密碼

飛航模式

省電模式 54

重設

記憶體狀態

配件 55

配件技術資料 56

安全須知

警告！

- 在飛機內，應全程關閉手機。
- 駕駛時，請勿手持手機通話。
- 在加油站、儲油槽、化學工廠或爆破場地附近，請勿啟動手機。
- 請務必使用指定的電池和充電器，否則可能會損壞手機。
- 請勿在手濕時操作正在充電的手機。這可能會引致觸電或造成手機嚴重損壞。
- 手機內附有細小配件。為免小孩誤吞的危險，請將手機放置於小孩觸摸不到的地方。

注意！

- 在醫院內請務必關機：心律調整器和助聽器等醫療電子裝置可能會受到干擾。
- 緊急撥號也許未能適用於所有網絡。請勿將手機用作緊急救援的主要通訊工具。
- 請務必使用原裝配件，以避免對手機造成損害。
- 所有無線電收發器都有可能對鄰近的電子裝置造成干擾。手機可能會對電視機、收音機、電腦等造成輕微的干擾。
- 耗盡的電池需依法令規定予以處置。
- 請勿自行拆開手機或電池。
- 若使用類型不當的電池，則有發生爆炸的危險。

安全與有效使用準則

無線電波頻率能量暴露

無線電波暴露準則與比吸收率 (SAR) 資訊

本手提電話型號 KG290 的設計，已符合暴露在無線電波下使用的安全要求。此種要求是建基於科學準則，包括可確保公眾安全的设计標準，範圍涵蓋各年齡層，以及他們的各種健康狀況。

- ▶ 無線電波暴露準則採用一種測量單位，即所謂的比吸收率 (SAR)。SAR 測試是透過標準方法進行的，測試當中手機將會在所有操作頻段中發射最高的認可功率。
- ▶ 儘管各 LG 手機型號的 SAR 值都不一樣，但是所有產品均符合任何相關的無線電波暴露準則。

- ▶ 國際非電離輻射防護委員會 (ICNIRP) 建議的 SAR 限制為平均每十克組織 2 瓦特/千克。
- ▶ 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.752 W/kg (10g) (不鏽鋼機殼) 或 1.01 W/kg (10g) (鋁質機殼)，而攜帶於身上時則為 0.245 W/kg (10g) (不鏽鋼機殼) 或 0.483 W/kg (10g) (鋁質機殼)。
- ▶ 採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/kg) 的國家/地區居民的 SAR 數據資訊 (如美國、加拿大、澳洲及臺灣)。

安全與有效使用準則

產品保養與維護

警告！

僅限使用經過審查認可與此特定手機型號配合使用的電池、充電器與配件。使用任何其他類型的配件，可能會使任何本手機適用的認證或保養失效，並可能會造成危險。

- ▶ 請勿拆解本手機(請交由合格維修人員為您進行維修)。
- ▶ 手機應遠離電器設備，如電視、收音機或個人電腦。
- ▶ 手機應遠離熱源，如暖爐或爐具。
- ▶ 請勿將手機放置於微波爐裡，這會導致電池發生爆炸。
- ▶ 請勿讓手機摔落。
- ▶ 請勿使手機遭受機械震動或撞擊。
- ▶ 若使用封套或乙烯質護套，可能會損壞手機表面塗層。
- ▶ 使用乾布清潔外殼。(切勿使用如苯、稀釋劑或酒精的溶劑。)
- ▶ 請勿讓手機置於煙霧濃濁或灰塵污染嚴重的環境中。
- ▶ 請勿讓手機靠近信用卡或電子車票；否則會影響磁帶內的資訊。
- ▶ 請勿用尖銳物品碰觸屏幕，否則會損壞手機。
- ▶ 請勿將手機暴露於液體或濕氣中。
- ▶ 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- ▶ 審慎使用耳機等配件。

電子裝置

所有無線電話均可能因為受到干擾而影響性能。

- ▶ 未經許可，請勿在醫療設備旁使用本產品。避免將手機放在心律調整器上，也就是胸前口袋。
- ▶ 手提電話可能會干擾某些聽覺輔助器材。
- ▶ 手提電話也可能對電視、收音機、電腦等造成輕微干擾。

道路安全

請檢查當地對行車時使用手提電話的法律規定。

- ▶ 駕駛時請勿使用手提電話。
- ▶ 請專心駕駛。
- ▶ 如果可以的話，請使用免提聽筒。

- ▶ 請按駕駛狀況需要，撥打或接聽電話前請將汽車停靠路邊。
- ▶ 射頻(RF)能量可能會影響某些汽車電子系統，例如：汽車音響、安全設備。
- ▶ 行車時，請勿將手機或免提聽筒套件放在靠近安全氣囊的位置。若無線裝置安裝不當且安全氣囊正好開啓，可能會造成嚴重傷害。

在聆聽音樂時，特別是在橫過馬路時，請調較適當的音量讓您可以留意周遭發生的事情。

避免損害您的聽覺

如果長時間身處於高音量或喧鬧狀態，這會導致損害您的聽覺。所以我們建議開啓或關閉耳機時，不要將它放於太近耳朵。並將音量調較至適當的水平。

安全與有效使用準則

爆破區域

爆破作業進行當中，請勿使用手機。請查明禁止告示並遵守任何規章條例。

具有潛在爆炸危險的環境

- ▶ 請勿在加油站使用手機。請勿在汽油及化學品附近使用手機。
- ▶ 車上攜有流動電話與配件時，請勿運載或儲存可燃氣體、液體或爆炸物在車廂內。

飛機上

在飛機上，無線裝置可能會造成干擾。

- ▶ 登機前請先關閉手提電話。
- ▶ 未經空中服務人員許可，在地面停駐時也請勿使用。

兒童

將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急撥號可能在某些電話網絡不能發出。因此，您不應該只倚賴手機發出緊急撥號。請與您本地的服務供應商聯絡。

電池使用與保養

- ▶ 電池充電前，無須完全放電。與其他系統不同，本機所用電池的性能不會受到記憶效應的影響。
- ▶ 僅限使用 LG 電池和充電器。LG 充電器是經過特別設計，能增加電池壽命至最大極限。
- ▶ 請勿拆解或讓電池發生短路。
- ▶ 電池的金屬接點應保持清潔。
- ▶ 更換性能不再令人滿意的電池。充電數百次後，才需要更換電池。
- ▶ 已長期未使用的電池，請先進行充電以取得最大的性能。
- ▶ 請勿使電池充電器直接曝曬在陽光下，或在浴室等濕度高的場所中使用。
- ▶ 請勿把電池留置在過熱或過冷的地方，否則會降低電池性能。
- ▶ 若使用類型不當的電池，則有發生爆炸的危險。
- ▶ 請根據製造商的指示來處理廢棄電池。

KG290 功能

手機正面





側邊按鍵

- ▶ 在備用模式(開啓/關閉):
按鍵音量
- ▶ 在通話中: 耳機音量

側邊相機鍵

按住 - 啓動相機



耳機插孔

KG290 功能

導覽鍵

- ▶ 在備用模式中:
 - ◀ 快捷: 訊息列表
 - ▼ 快捷: 通訊錄
 - < 快捷: 情景模式列表
(按住: 啟動/關閉震動模式)
 - > 快捷: 最愛目錄
- ▶ 在功能表中: 上下左右鍵

發送鍵

- ▶ 撥打電話或接聽來電。
- ▶ 在備用模式下: 顯示最近的已撥通話、已接來電和未接來電。

數字鍵

- ▶ 在備用模式中:
輸入數字來撥號。
按住:
 - 0+ 國際電話
 - 1+ 撥打留言信箱號碼
 - 2+ 至 9+ 快速撥號
- ▶ 在編輯模式中: 輸入數字和文字

聽筒

主屏幕

- ▶ 上方: 顯示訊號強弱、電池電量及其他不同的功能的圖示。
- ▶ 下方: 軟鍵功能指示

左軟鍵 / 右軟鍵

- ▶ 這些按鍵可以執行顯示在屏幕底部的功能。

[確定]鍵

- ▶ 選擇功能表或確定

結束鍵

清除鍵



顯示資訊



區域	說明
第一行	顯示各種圖標。
中間行	顯示訊息、指示及您輸入的任何資訊，例如要撥打的號碼。
最後一行	顯示目前兩個軟鍵指定執行的功能。

屏幕上將會顯示多種圖標，如下所示。

屏幕圖標

圖示	說明
	顯示網絡訊號的強度。
	您可使用 GPRS 服務。
	鬧鐘已設，並已啓動。
	您已經啓動藍芽功能表。
	顯示電池的狀態。
	您收到一個文字訊息。
	您收到一個留言訊息。 (若您有申請留言訊息服務)

KG290 功能

圖示 說明



情景模式設定為震動。



情景模式設定為靜音。



情景模式設定為標準。



情景模式設為戶外。



情景模式設定為聽筒。



通話已轉駁。



手機正在存取 WAP。


插入智能咭與手機電池

1. 安裝智能咭。

智能咭包含手機號碼、服務詳情和聯絡人，且必須插入到手機中。

如果取出智能咭，手機將無法使用（甚至包括緊急通話），直至插入有效的智能咭為止。插入和取出智能咭前，務必要拔除手機上的充電器和其他配件。將智能咭滑入智能咭固定座。

請確保智能咭已正確插入，且咭上的金屬接觸區面向下方。要取出智能咭，請在輕壓後向反方向抽出。

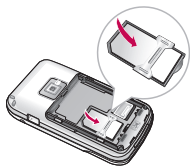

插入智能咭



取出智能咭


附註

- ▶ 智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附之說明書進行安裝。

安裝


2. 安裝電池。

對準電池上的金色觸點與電池格中的電池觸點（金色觸點），裝入電池。將電池的頂部壓入定位。

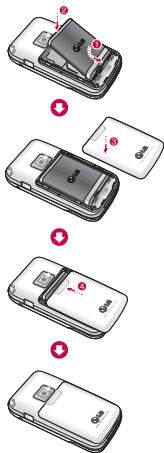


3. 取下電池。

關閉電源。（如果未關閉電源，有可能會遺失儲存的電話號碼和訊息。）壓下電池釋放門 ❶ 並打開電池蓋 ❷。然後，取出電池。

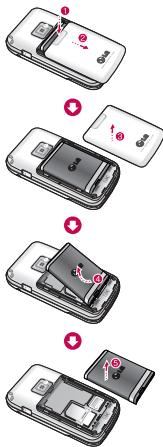

為電池充電

將旅行充電器接駁至手機之前，您必須先安裝好電池。

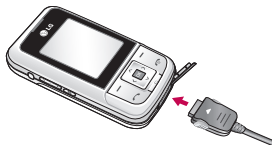

1. 將旅行充電器的一端接頭插入手機底端。
2. 將充電器的另一端接駁至牆上的交流電源插座。請務必使用手機隨附的充電器。
3. 充電完畢後，電池圖標的移動式指示列將會停止動作。
4. 首次使用手機時，必須將電池充滿電。

注意！

- 請勿強力推進接頭，這樣可能會損壞手機及/或旅行充電器。
- 若您是在其他國家/地區使用電池充電器，請使用符合當地規格的轉接頭配件。
- 在充電期間，請勿移除您的電池或智能咭。

警告！

- 如遇上雷暴，請拔下電源線與充電器以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物接觸電池。這可能會有失火的危險。

安裝

拔下充電器

中斷充電器和手機之間的連接時，請拔下接頭而非電線。



輸入文字

你可使用手機鍵盤上的按鍵輸入字元，例如通訊錄中儲存名稱、寫訊息、建立日程表均需輸入文字。以下為手機內提供的文字輸入模式。例如，在通訊錄中儲存名稱、編寫訊息、建立個人問候語或在日曆中排定事件，都需要輸入文字。本手機提供以下文字輸入法。


T9 模式

使用此模式時，每個字母只要按一下按鍵即可輸入單字。鍵盤上每個按鍵都代表一個以上的字母。T9 模式會自動將您按下的按鍵與內建語文字典進行校對，然後決定正確的單字，因此按鍵次數較傳統 ABC 模式少。


ABC 模式

使用此模式時，按下標示所需字母的按鍵一次、兩次、三次或四次，直至顯示所需字母便成。

123 模式 (數字模式)

只要按一次按鍵即可輸入一個數字。要把文字輸入欄的輸入模式變更為123模式，請按  鍵直到顯示 123 模式。




變更文字輸入模式



1. 進入允許輸入字元的欄位後，在屏幕右上角可看到文字輸入模式指示器。
2. 按  可於 T9Abc、T9abc、T9ABC、ABC、Abc、abc 及 123 之間切換。

一般功能

使用 T9 模式

T9 預測文字輸入模式讓您可以使用最少的按鍵次數輕鬆輸入單字。當您按每個按鍵時，手機會開始根據內建字典顯示手機認為您要鍵入的字元。新增字母後，單字會隨之變更以顯示字典中最相近的候選字。

1. 在 T9 預測文字輸入模式中，按下按鍵  至  開始輸入單字。
2. 在編輯或刪除任何按鍵輸入之前，輸入整個單字。
3. 按  鍵在每個單字後加入空格。

要刪除字母，請按 。
按住  可連續清除字母。

按鍵	按順序顯示的字元	
	大寫	小寫
	., /?!-:.' "@1	., /?!-:.' "@1
	A B C 2 Ä Å Æ Ç	a b c 2 à â æ ç
	D E F 3 É Ê Ë Ì	d e f 3 é è ë ì
	G H I 4 Î Ï	g h i 4 î ï
	J K L 5	j k l 5
	M N O 6 Ñ Ò Ó Ô	m n o 6 ñ ò ó ô
	P Q R S 7	p q r s 7
	T U V 8 Ù	t u v 8 ù
	W X Y Z 9 ?	w x y z 9 ?
	空格鍵 0	空格鍵 0

功能表

1. 瀏覽器

- 1.1 主頁
- 1.2 書籤
- 1.3 輸入網址
- 1.4 記錄
- 1.5 已儲存的網頁
- 1.6 設定
- 1.7 資訊

2. 通話記錄

- 2.1 所有通話
- 2.2 未接來電
- 2.3 已撥通話
- 2.4 已接來電
- 2.5 通話時間
- 2.6 通話費用
- 2.7 數據資訊

3. 工具

- 3.1 鬧鐘
- 3.2 日曆
- 3.3 計算機
- 3.4 備忘錄
- 3.5 待辦事項
- 3.6 秒錶
- 3.7 單位轉換器
- 3.8 世界時間
- 3.9 智能咭服務

4. 多媒體

- 4.1 MP3 播放器
- 4.2 相機
- 4.3 視像攝錄機
- 4.4 FM 收音機
- 4.5 語音備忘錄

5. 訊息

- 5.1 新增訊息
- 5.2 收件匣
- 5.3 草稿
- 5.4 寄件匣
- 5.5 已發送
- 5.6 收聽留言訊息
- 5.7 資訊廣播
- 5.8 常用範本
- 5.9 設定

6. 我的檔案

- 6.1 圖像
- 6.2 聲音
- 6.3 影片
- 6.4 其他
- 6.5 遊戲及應用功能
- 6.6 外置記憶體

7. 情景模式

- 7.1  標準
- 7.2  靜音
- 7.3  震動
- 7.4  戶外
- 7.5  聽筒

8. 通訊錄

- 8.1 搜尋
- 8.2 新增通訊錄
- 8.3 快速撥號
- 8.4 群組
- 8.5 複製全部
- 8.6 刪除全部
- 8.7 設定
- 8.8 資訊

9. 設定

- 9.1 日期及時間
- 9.2 語言
- 9.3 屏幕
- 9.4 連接
- 9.5 通話
- 9.6 安全
- 9.7 飛航模式
- 9.8 省電模式
- 9.9 重設
- 9.0 記憶體狀態

瀏覽器

主頁

功能表 1.1

連線到主頁。主頁是目前啓用之網絡設定中定義的網站。如果您還未在已啓用的網絡設定中定義主頁。服務供應商將爲您定義一個主頁。

書籤

功能表 1.2

您可以在此功能表中，將喜愛網頁的網址儲存起來，方便日後存取。手機已預載許多書籤。這些預載書籤無法刪除。

輸入網址

功能表 1.3

您可直接移至您想要瀏覽的網站。在此功能表下，您也可以修改網址。

記錄

功能表 1.4

此功能表可顯示最近瀏覽過的網頁。

已儲存的網頁

功能表 1.5

本手機可將畫面上的網頁儲存爲離線檔案。

設定

功能表 1.6

您可以設定網絡設定、檢視模式、暫存記憶、Cookies 及安全認證、顯示圖像、Java指令和記憶體存取設定。

網絡設定

(功能表 16.1)

網絡設定即用來連接互聯網的網絡資訊。

手機記憶體內儲存了一些系統業者的預設網絡設定。無法將預設網絡設定重新命名。

檢視模式

(功能表 1.62)

您可變更瀏覽器的畫面大小。

暫存記憶

(功能表 1.63)

您已存取的資訊或服務會儲存在手機的快取記憶體中。

附註

- ▶ 快取記憶體是一種緩衝記憶體，可用來暫時儲存資料。

Cookies

(功能表 1.64)

檢查是否已使用 Cookies。

安全認證

(功能表 1.65)

您可以看到儲存於手機上的安全認證列表。

顯示圖像

(功能表 1.66)

讓您可以啓用或停用瀏覽時的圖像顯示。

Java 指令

(功能表 1.67)

此功能表可讓您在使用網頁瀏覽器時啓用 Java 指令。

記憶體用於

(功能表 1.68)

您可以選擇要使用的記憶體。
(手機或外置記憶體)

資訊

功能表 1.7

顯示 WAP 瀏覽器的版本。

通話記錄

如果網絡支援服務區域內的來電線路識別(CLI)，則您可以查看未接、已接和已撥的電話。號碼與名稱(如果有的話)會和來電的日期與時間一起顯示。您也可以查看通話時間。

所有通話

功能表 2.1

此選項讓您可以查看所有通話記錄。

未接來電

功能表 2.2

使用此選項可以查看最近 50 個未接聽電話。

已撥通話

功能表 2.3

使用此選項可以查看最近 50 個撥出電話(已撥出或嘗試撥出)。

已接來電

功能表 2.4

使用此選項可以查看最近 50 個來電。

通話時間

功能表 2.5

您可以查看來電與已撥電話的通話時間。您也可以重設通話計時。

通話費用

功能表 2.6

您可以查看最後通話及所有通話的通話費用與餘額，並可重設費用。要重設全部通話費用，需要輸入 PIN2 碼。

數據資訊


功能表 2.7

您可查詢已在 GPRS 網絡傳送的數據用量。而且，您亦可查看數據傳輸時間。

鬧鐘

功能表 3.1

您可以在本功能表中設定手機在特定時間發出響鬧。

1. 選取新增，然後輸入要設定的響鬧時間。
2. 選取重複時間：一次、星期一~星期五、星期一~星期六、星期六至星期日和每天。
3. 選取要設定的鬧鐘鈴聲，然後按  [確定]。









日曆


功能表 3.2



當您進入本功能表時，屏幕上將會顯示一個日程表。每當您更改日期時，日程表也將根據日期而更新。同時，日程表會使用方形游標標示出特定的日期。如果您在日程表中看到任何底線，表示當天有安排日程。這項功能可提醒您日程及備忘錄。如果您已為



某個記事設定了響鬧，手機屆時會發出響鬧鈴聲。

切換日、月、年的步驟。

按鍵	說明	按鍵	說明
 	每年	 	每週
 	每月	 	每天


在日程表模式中，按左軟鍵  [選項]，如下：



- ▶ **檢視：**檢視選定日期的日程及備忘錄。使用 、 鍵瀏覽記事列表。

如要檢視記事詳細資料，請按左軟鍵  [選項]。按左軟鍵  [選項] 可顯示以下選項：檢視、修改、刪除、新增日程表、經由文字訊息/多媒體訊息/藍芽/發送、日曆、行程表音效、所有日程表、轉到日期、多項刪除、刪除過期記錄以及刪除全部。

工具

- ▶ **新增日程表:** 在選定日期新增日程及備忘錄。您可以儲存多達 100 則記事。

輸入備忘錄後按左軟鍵  [選項-新增/修改]。請在下列部份輸入適用的資料：設定日期、時間、標題、鬧鐘、重複及到期時間。

- ▶ **行程表音效:** 您可以為每個選定日期設定響鬧鈴聲。
- ▶ **所有日程表:** 查看選定日期的行程及備忘錄。使用 、 在備註列表中瀏覽。如果您為注意事項設定了響鬧，鬧鐘圖示將會出現。
- ▶ **轉到日期:** 您可以直接進入選定日期。
- ▶ **刪除過期記錄:** 您可以刪除在過去已經通知過您的日程表。
- ▶ **刪除全部:** 刪除所有日程。

計算機




功能表 3.3

此功能表包含標準的計算功能，例如 +, -, x, /: 加、減、乘、除。

此外，您也可以使用各種計數機功能，例如 +/-, sin, cos, tan, log, ln, exp, sqrt.

備忘錄

功能表 3.4

1. 按左軟鍵  [確定] 來選擇備忘錄。
2. 如果列表清空，可使用左軟鍵  [新增] 來加入新備忘錄。
3. 輸入備忘錄並按左軟鍵  [選項] → [儲存]。

待辦事項

功能表 3.5

您可檢視、編輯和新增要完成的工作。工作按時間順序顯示。可透過不同的方式顯示已完成或未完成的工作。

秒錶

功能表 3.6

1. 按 [開始] 可開始計時，然後可按 [以圈計] 記錄圈速。
2. 按 [停止] 確定圈速記錄。
3. 按 [重設] 套用預設條件。

單位轉換器

功能表 3.7

這項功能可將任何測量單位轉換成您所需的單位。總共可轉換7種單位：**貨幣、面積、長度、重量、溫度、體積和速度。**

世界時間

功能表 3.8

使用上/下導覽鍵，可以查看格林威治時間 (GMT) 及世界主要城市目前的時間。

屏幕會顯示城市名稱、目前日期及時間。

您能選擇一個渴望的城市作為基地，您可從更改或新增城市功能中選擇。

智能咕服務

功能表 3.9

此功能表會按智能咕和網絡服務而異。

多媒體

MP3 播放器

功能表 4.1

所有曲目

(功能表4.1.1)

您可檢視儲存在手機/外置記憶體中的全部音樂檔。

我的播放清單

(功能表4.1.2)

透過從全部曲目功能表清單中選擇曲目，您可建立自己的播放清單。

設定

(功能表4.1.3)

隨機

(功能表4.1.3.1)

若要連續而隨機地播放音樂，請選擇此項。

重複

(功能表4.1.3.2)

若選擇「一首」，只會重複播放您所選擇的那一首曲目。
若選擇「全部」，則會重複播放播放清單中的所有曲目。若選擇「關閉」，則不會重複播放任何曲目。

調諧器

(功能表4.1.3.3)

您可以在數種音樂風格中選擇均衡器。爵士樂、搖滾、流行音樂等。

播放面板

(功能表4.1.3.4)

有3種播放面板可供選擇，您可根據個人喜好進行變更。


相機


功能表 4.2

使用手機內置的相機模組，可以拍攝相片或錄製影片。此外，你亦可以將相片傳送給其他人及選擇將相片設為牆紙。



• 影相

按住相機  按鈕。相機可隨時進行拍攝，而您可能需要將其旋轉到水平位置。

- 為拍出清晰的相片，按相機  按鈕時請握穩相機。

- 適當調較與相片拍攝對象的距離（不低於 50 厘米）。

- 由於相機不能受震盪，需小心處理，使用軟布來清潔相機鏡頭。

- 請勿拆開或改裝相機，這樣做有可能會引致失火或故障。

▶ **解像度 (Resolution):** 可設定圖像大小。(1280x960)、(640x480) 及 (320x240)。連環拍照只能在解像度設定為(320x240)、(640x480) 像素時使用。

▶ **質量 (Quality):** 讓您可以將圖像質量設定為正常 (Normal)、細緻 (Fine) 和特細緻 (super Fine)。

▶ **自拍時計 (Self timer):** 您可以選擇延遲時間：(關閉、3 秒、5 秒及 10 秒)。手機會在指定時間後進行拍攝。

▶ **檢視模式 (View mode):** 可以檢視完整圖像或全屏幕畫面。

▶ **儲存至 (Save to):** 可設定拍照後的儲存位置。(外置記憶體/手機)

▶ **連環拍照 (Multi shot):** 讓您可以連續拍攝多張相片。

▶ **色彩效果 (Effect):** 提供 4 種設定選擇。(底片/黑白/深褐色/彩色)

▶ **白平衡 (White balance):** 讓您可以根據環境變更設定。(夜間模式/日光燈/陰天/白熱光/日光/自動)

▶ **快門音效 (Shutter tone):** 可設定拍照時的聲音。

▶ **重設設定 (Reset settings):** 可讓您重設設定。

多媒體

視像攝錄機

功能表 4.3

1. 選擇[視像攝錄機]功能表。
2. 除了以下項目，視像攝錄機設定功能表與相機設定相同：



按 **OK** 可錄製影像。

- ▶ **模式 (Mode):** 可讓您設定經由多媒體訊息或「標準」模式傳送影片檔案。
- ▶ **解像度 (Resolution):** 您可以選擇以下解像度：128x96、176x144。

FM 收音機

功能表 4.4

KG290 配備了內置的「FM 收音機」。您必須插入耳機後才可收聽收音機，因為耳機將會作為 FM 天線使用。

1. 使用左/右導覽鍵搜尋所需的電台。
2. 使用「選項」功能表中的「自動選取頻道」功能或「編輯頻道」來預設頻道。
3. 預設收音機頻道後，您可透過按相應的數字鍵 (快按) 來收聽其他頻道。

語音備忘錄

功能表 4.5

您可使用此功能錄製 10 條以上的語音備忘，每條最長可達 60 秒鐘。

新增訊息


功能表 5.1

功能表 5.1 本功能表中包含與 SMS (短訊服務)、MMS(多媒體訊息服務)、語音信箱、以及網絡服務訊息等相關功能。

文字


(功能表 5.1.1)


輸入及編輯文字訊息。

1. 按  [確定]以進入訊息功能表。
2. 如要編寫新訊息，請選取「文字」。
3. 要更方便輸入文字，請使用 T9 語言輸入法。
4. 按 [選項] 可選用下列各項。

選項

▶ **發送給:** 發送文字訊息。

1. 輸入聯絡人的電話號碼。
2. 按  新增更多聯絡人。

3. 在通訊錄列表中加入電話號碼。
4. 按  [選項]，然後在輸入號碼後按「發送」。

▶ 附加

- **符號:** 新增特定字元。
 - **圖像:** 在訊息中附加預設圖像或我的資料夾中可用的圖片。
 - **聲音:** 在訊息中附加可用的聲音。
 - **文字範本:** 使用手機已設定的文字範本。
 - **通訊錄:** 您可以附加在通訊錄中的電話號碼或電郵地址。
 - **我的名片:** 您可以將個人我的名片加入到訊息中。
- ▶ **儲存至草稿:** 將訊息儲存在草稿。
- ▶ **T9 語言輸入:** 選擇 T9 輸入模式語言。


訊息

- ▶ **清除文本:** 可在編寫文字訊息時清除文字。
- ▶ **退出:** 如果您在輸入訊息時按退出，則可以結束輸入並返回訊息功能表。您輸入的訊息將不會被儲存。

多媒體

(功能表 5.12)

輸入並編輯多媒體訊息、查看訊息大小。

1. 按  [確定] 進入訊息功能表。
2. 如要編寫新訊息，請選取「多媒體」。
3. 您可以建立新訊息，或選取其中一個已建立的多媒體訊息範本。

可插入不多於300kb 的多媒體訊息檔案。

選項

- ▶ **發送給:** 您可以向多位收件者傳送多媒體訊息、排列訊息的重要性，亦可設定稍後再傳送訊息。
- ▶ **附加:** 您可以新增符號/圖像/影片/聲音/新增相片/新增影片/新增聲音/新增投影片/文字範本/通訊錄/我的名片。

附註

- ▶ 所有訊息將會自動儲存在寄件匣資料夾內，即使在傳送失敗時也不例外。
- ▶ **預覽:** 預覽已輸入的多媒體訊息。
- ▶ **儲存:** 您可以將訊息儲存「至草稿」或「作範本」。
- ▶ **編輯標題:** 您可以為訊息編輯標題。

- ▶ **刪除投影片:** 您可以刪除已插入的投影片。
- ▶ **投影片播放時間:** 您可以設定投影片之間的播放時間。
- ▶ **T9 語言輸入:** 選擇 T9 輸入模式語言。選擇「關閉T9」也可以關閉T9輸入法。
- ▶ **新增T9文字:** 選擇「新增T9文字」可將新單字輸入到字典中。
- ▶ **退出:** 返回訊息功能表。

附註

- ▶ 如果在編寫多媒體訊息時選擇一個較大的圖片(如 200K)，則約需 10 秒鐘的載入時間。而且，在載入期間您不可進行任何按鍵操作。10 秒後，您才可編寫訊息。

收件匣

功能表 5.2

在您收到訊息時會得到提示。訊息將儲存在收件匣中。

如果手機顯示「無足夠記憶體儲存智能咭訊息」，您必須刪除某些儲存在收件匣或寄件匣中的智能咭訊息。如果手機顯示「無足夠記憶體儲存訊息」，您要刪除每個資料庫中的一些訊息、多媒體及應用程式以釋放空間。

附註

- ▶ **智能咭訊息:** 智能咭訊息指專門儲存在智能咭中的訊息。您可以把訊息移至手機。

訊息

草稿

功能表 5.3

使用此功能表，您可以預設最常使用的多媒體訊息。此功能表會顯示預設的多媒體訊息列表。

寄件匣

功能表 5.4

此功能表讓您可以查看將要發送或已發送失敗的訊息。成功傳送訊息後，訊息會移到已傳送資料夾中。



已發送

功能表 5.5

此功能表可檢視已發送的訊息。您可以查看訊息的時間與內容。

收聽留言訊息

功能表 5.6

按  [確定] 可用來聽取留言。您也可以備用模式中按  鍵聽取留言。

附註

- ▶ 接到留言時，手機會顯示圖標，而且您會聽到提示音。請向您的網絡商洽詢服務內容的詳細資料，並據此正確設定手機。

資訊廣播

功能表 5.7

(須視網絡及申請的服務能否支援而定)

資訊服務訊息為網絡發送給 GSM 的文字訊息。這些訊息提供一般資訊，如天氣報告、交通消息、的士、藥劑及股票價格。




每種資訊都有一個號碼。因此，只要您輸入特定號碼即可聯絡服務供應商取得相關資訊。

當您接收到資訊廣播訊息時，您可以看到快顯訊息顯示您已收到一個訊息或直接顯示該資訊廣播訊息。

要再次檢視訊息，請依從以下步驟：


讀取

(功能表 5.7.1)

1. 收到資訊服務訊息時，選擇「讀取」可檢視訊息，該訊息將會顯示於螢幕之上。透過按 、 或  [確定] 可閱讀其他訊息。
2. 此訊息將一直保留，直至收到其他訊息。

主題

(功能表 5.7.2)

- ▶ **檢視列表：**若您選擇本功能表，您可以查看您加入手機記憶的資訊服務類別。當您按鍵  [選項]時，就可以修改及刪除您已加入的資訊服務類別。

- ▶ **目前列表：**您可以在啟動列表選擇資訊服務訊息號碼。如果啟動了某個資訊廣播訊息號碼，您便可收到由該號碼發送的訊息。

常用範本

功能表 5.8

文字

(功能表 5.8.1)

列表中有 6 個預設文字範本：

- 請回覆電話。
- 我遲到了，我會立刻到達。
- 您在哪？
- 我在路途中。
- 緊急！請聯絡我
- 我愛你！

多媒體

(功能表 5.8.2)

儲存新範本後，您可使用以下選項。

訊息

設定

功能表 5.9

文字訊息

(功能表 59.1)

- ▶ **訊息類型:** 文字、語音、傳真、國內傳呼、X.400、電郵、ERMES。

通常訊息類型會被設定為文字。您可以將您的文字轉換為接收設備適用的其他格式。請洽詢您的服務供應商以瞭解您是否可使用此功能。

- ▶ **有效期:** 這項網絡服務可讓您設定訊息儲存在短訊中心的期限。
- ▶ **發送報告:** 如果您設定本功能表為是，您可以查看您的訊息是否已成功發出。
- ▶ **經同一訊息中心回覆:** 當您發送一封訊息時，這項功能可讓收件人回覆您的訊息，並將回覆費用記入您的電話帳單。

- ▶ **訊息中心號碼:** 如果您想傳送文字訊息，可透過此功能表接收訊息中心的地址。

多媒體訊息

(功能表 59.2)

- ▶ **標題:** 開啓本功能表時，可輸入多媒體訊息標題。
- ▶ **投影片播放時間:** 寫入訊息時，顯示每頁的播放時間。
- ▶ **重要性:** 您可以設定所選訊息的重要性。
- ▶ **有效期:** 此網絡服務可讓您設定文字訊息儲存在短訊中心的期限。
- ▶ **發送報告:** 如果在此功能表中設定為是，可以查看訊息是否已成功發出。
- ▶ **讀取報告:** 您可以使用此功能表向訊息收件人收取閱讀確認郵件。

- ▶ **自動下載:** 如選擇「開啓」，您可以自動接收多媒體訊息。如果選擇「關閉」，您只會在收件匣收到通知訊息，並在此處檢查通知。如選擇「僅限本地網絡」，您會視乎本地網絡提供的服務而收到多媒體訊息。
- ▶ **網絡設定:** 如果選用多媒體訊息伺服器，您可設定多媒體伺服器的 URL。
- ▶ **允許訊息類型**
 - **個人:** 個人訊息。
 - **廣告:** 商業訊息。
 - **資訊:** 必要資訊。

留言信箱號碼 (功能表 5.9.3)

如果您的網絡服務供應商可支援這項功能，您就可以聽取留言訊息。當您收到新的留言訊息時，屏幕上將會顯示一個符號。請向您的網絡服務供應商瞭解他們的服務詳情，以適當地設定手機。

Push 訊息 (功能表 5.9.4)

您可以設定選項是否接收訊息。

資訊廣播 (功能表 5.9.5)

- ▶ **接收**
 - **開啓:** 若您選擇本功能表，您的手機將可接收資訊服務訊息。
 - **關閉:** 若您選擇本功能表，您的手機將無法再接收資訊服務訊息。

訊息

▶ 提示

- **開啓:** 若您選擇本功能表，您的手機在收到資訊服務訊息時將會發出一聲嗶聲。
- **關閉:** 若您選擇本功能表，您的手機在收到資訊服務訊息時將不會發出一聲嗶聲。

▶ 語言

按中間[標示選擇]鍵以選取所需的語言。然後資訊服務訊息將會以您選取的語言顯示。

我的檔案

圖像

功能表 6.1

顯示多媒體記憶體內 JPG 的檔案列表。

聲音

功能表 6.2

顯示多媒體記憶體中的 MP3 等音樂檔列表，以及預設聲音檔案。

影片

功能表 6.3

您可在多媒體記憶體的「我的檔案／影片」中顯示 3GP、3G2 檔案列表。支援的檔案包括以 MPEF4 及 h.263 影片編碼及 AMR 音訊編碼進行編碼的 .3pg 檔案。

其他

功能表 6.4

顯示多媒體記憶體「我的檔案／其他」中的檔案列表。

附註

- ▶ 經由藍芽將手機連到電腦時，您可與「聲音」和「影片」等資料夾之間進行檔案收發。您可將任何檔案類型複製到「其他」資料夾。您只能接收「圖像」和「聲音」等資料夾中的檔案。您只能播放或檢視「其他」資料夾中受支援的檔案類型。經由 USB 線連接到電腦時，您只可在內置資料夾中看到以下資料夾：
「圖像」、「聲音」、
「影片」、「文件」及
「其他」。您可以看到外置記憶體中的所有資料夾。

我的檔案

遊戲及應用功能 功能表 6.5

在此功能表中，可以管理安裝在您手機中的 Java 應用程式。您可播放或刪除下載的應用程式，或設定連接選項。

選擇資料夾後按 [選項]，可提供數個選項的子功能表將會出現。

- ▶ **開啓:** 您可以看到已儲存的遊戲。
- ▶ **新增資料夾:** 建立新幻燈片。
- ▶ **刪除全部:** 您可以全部刪除。

網絡設定 (功能表 6.5.1)

設定檔是用於連接至互聯網的網絡資訊。一些網絡商在電話記憶體內已儲存預設的設定檔。無法重新命名預設設定檔。

每個設定檔的功能表如下：

- ▶ **啓動:** 啓用所選設定檔。
- ▶ **修改:** 用此可編輯和變更所選設定檔的 WAP 設定。

外置記憶體 功能表 6.6

在此功能表中可以檢視記憶體中的圖像、聲音、影片及其他。若沒有外置記憶體，將會顯示”請插入外置記憶體”。

附註

- ▶ 必須插入智能咭，這樣，手機才能識別為卸除式磁碟。

New Fantastic LG

KG290 可作為大容量儲存裝置使用。如果將手機與電腦以 USB 連接線連接後，這就可以將手機作為卸除式磁碟使用。

只須連接 USB 線，即可下載 MP3 檔案、相片、影片、文字檔案等，讓您快速在電腦與手機之間進行存取。

附註

- ▶ 「大容量儲存」功能只有在手機處於備用模式時才可使用。
- ▶ 下載檔案的過程中請勿拔下纜線。下載檔案後，您需要按一下電腦上的「安全地移除硬件」，然後，才能拔除 USB 連接線。
- ▶ 將檔案複製到卸除式磁碟時，屏幕會顯示相關傳送畫面。這表示「大容量儲存」裝置正在使用中，且數據正在傳送中。資料傳送中時，請勿拔除 USB 連接線。如果您在傳送中時拔下連接線，則會遺失或損壞資料，甚至可能損壞手機。
- ▶ 將手機用作「大容量儲存」裝置時，網絡訊號便會中斷，所有通話和訊息傳送將被拒絕。

情景模式


在情景模式中，您可以調整和自訂不同事件、環境或來電者群組的手機鈴聲。

有五個預設情景模式：標準、靜音、震動、戶外及聽筒。

按左軟鍵[功能表]，然後使用上下導覽鍵選取情景模式。


啓動

(功能表 7.x.1)

1. 顯示情景模式列表。
2. 在情景模式列表中，按上下鍵到想要啓用的情景模式，然後按左軟鍵  [確定] 鍵。
3. 然後，選擇啓動，按[確定] 鍵。

更改

(功能表 7.x.2)

在情景模式列表中按上下鍵到所需的情景模式。按「確定」鍵或左軟鍵  後選擇更改。情景模式設定選項將會開啓。

視需要設定選項。

- ▶ **來電提示類型：**設定來電提示的類型。
- ▶ **鈴聲：**從列表中選取所需的鈴聲。
- ▶ **鈴聲音量：**設定鈴聲音量。
- ▶ **訊息提示類型：**設定訊息提示類型。
- ▶ **訊息提示音：**選取訊息提示音。
- ▶ **按鍵音效：**選取所需的按鍵音。
- ▶ **按鍵音量：**選取所需的按鍵音量。
- ▶ **滑蓋音效：**可根據不同環境設定滑蓋音效。
- ▶ **確認音音量：**設定確認音音量
- ▶ **開機/關機音量：**設定開啓/關閉手機時的鈴聲音量。
- ▶ **自動接聽：**可供您設定自動接聽來電以配合環境狀況。請注意，只有連接免提裝置時，此(聽筒)模式才包含此子功能表，可供您啓動。

- **關閉:** 手機不會自動接聽電話。
- **5 秒後:** 5 秒後手機將會自動接聽。
- **10 秒後:** 10 秒後手機將會自動接聽。


附註

- ▶ 所有設定檔都不可以重新命名。

通訊錄


搜尋

功能表 8.1

1. 按左軟鍵  [確定] 進入搜尋。
2. 輸入您要搜尋的名稱。

附註





- ▶ 輸入搜尋姓名的前幾個字母即可進行即時搜尋。

3. 如果您想要修改、刪除、複製一項記錄，或將語音附加到一項記錄，請選擇  鍵 [選項]。

新增通訊錄



功能表 8.2

您可利用此功能加入新的通訊錄記錄。手機記憶庫最多可容納 1000 項記錄。智能咭的記憶容量則由流動電話服務供應商決定。智能咭的字元儲存容量依智能咭而定。

1. 透過按左軟鍵  [確定] 選擇「新增通訊錄」。
2. 輸入名稱。
3. 按 ，然後可輸入號碼。
4. 您可以透過按  為項目設定群組。
5. 您可以透過按左軟鍵  [選項] 為某個項目設定鈴聲或相片。

快速撥號

功能表 8.3

您可以指定數字鍵  至  的任何一鍵作為姓名列表內的一項記錄。您即可直接撥號。

群組

功能表 8.4

您可以依據每個群組列出成員。您總共可建立 7 個群組。

複製全部

功能表 8.5

您可以將智能咭的項目複製至手機記憶體，相反亦然。


刪除全部

功能表 8.6

您可刪除智能咭或手機中的全部記錄。

設定

功能表 8.7

翻閱至設定，然後按  鍵 [確定] 進入。

檢視選項

(功能表 8.7.1)



選取檢視選項，然後按鍵 [確定]。

- ▶ **只顯示名稱:** 將電話簿清單設定為只顯示名稱。
- ▶ **名稱及號碼:** 將電話簿清單設定為顯示名稱與號碼。

- ▶ **附有圖片:** 透過聯絡人的資料及圖片設定電話簿清單。

資訊

功能表 8.8

- ▶ **服務撥號號碼:** 利用這項功能可進入您的服務供應商提供的特別服務號碼列表(若智能咭支援)。
- ▶ **本手機號碼 (取決於智能咭):** 您可以儲存並查看智能咭內的本手機號碼。
- ▶ **我的名片:** 本功能表可讓您製作個人名片，內含名稱和電話號碼。選取左軟鍵  [新增] 來輸入欄內資料。如果您想修改、刪除或傳送名片，請選擇左軟鍵  [選項]。

設定

日期及時間

功能表 9.1

設定與日期和時間有關的功能。

語言

功能表 9.2

變更手機顯示的語言。此操作亦會影響語言輸入模式。

屏幕

功能表 9.3

牆紙

(功能表 9.3.1)

在備用模式下選取牆紙。

背景燈時計

(功能表 9.3.2)

您可以設定顯示屏幕和按鍵的背景燈的持續時間。

屏幕: 關閉/5秒/10秒/20秒/30秒/
60秒/180秒

按鍵: 關閉/5秒/10秒/30秒

亮度

(功能表 9.3.3)

您可以設定 LCD 的亮度：
100%、80%、60% 和 40%。

功能導向捷徑

(功能表 9.3.4)

選擇「開啓」可將 4 個導覽鍵及功能表鍵的功能以圖片方式顯示於備用模式視窗中間。


主題

(功能表 9.3.5)

您可以根據個人喜好變更目前的主題。

功能表風格

(功能表 9.3.6)

您的手機可提供格線及列表功能表主題。您的手機為您提供格子檢視及列表檢視。請透過上下鍵並按左軟鍵  [確定]，設定功能表功能表風格。

備用歡迎辭

(功能表 93.7)

如果您選擇開啓，本功能表可讓您選擇備用時顯示的歡迎辭。您可在文字模式下修改歡迎辭的文字。

網絡名稱

(功能表 93.8)

如啓用本功能，主屏幕上會顯示網絡名稱。

彩色撥號字體

(功能表 93.9)

若選擇開啓，撥號字型顏色將會各不相同。

連接

功能表 9.4

藍芽

(功能表 94.1)

藍芽功能讓兼容的流動裝置、周邊設備及電腦，只要彼此靠近，不需透過任何線路，便可直接連

線。本手機支援內建的藍芽連接功能，使它可以連接兼容的藍芽耳機、電腦應用程式等等。

附註

- ▶ 當手機由其他藍芽裝置接收到資訊時，會要求您確認。確認傳輸之資料後，該檔案會複製到手機上。
- ▶ 資料會依其檔案類型儲存到以下資料夾中：
 - 影片 (.3gp、mp4)：影片資料夾
 - 圖像 (.bmp、gif、jpg、png)：圖像資料夾
 - 聲音 (.amr、wav、aac)：聲音資料夾
 - MP3 (.mp3)：聲音/MP3 資料夾

▶ 藍芽開啓 / 關閉

您可以開啓或關閉藍芽功能。

設定

▶ 配對裝置

您可以檢視所有已與 KG290 配對的裝置。進入配對的裝置後，您可以存取以下選項。

▶ 設定

- **顯示我的手機:** 表示您的手機是否會顯示到其他藍芽裝置中。
- **我的手機名稱:** 您可以設定藍芽裝置名稱。預設名稱為 LG KG290。
- **我的藍芽位址:** 您可檢視您的藍芽裝置的位址。

網絡

(功能表 942)

您可以自動或手動地選擇您要連接的網絡。

網絡選擇

(功能表 9421)

手機通常以自動方式選擇網絡。

▶ **自動:** 如果選擇自動模式，手機會自動搜尋並選擇網絡。選擇自動後，即使電源關閉後再重新啓動，手機也會設定為自動。

▶ **手動:** 手機將搜尋並顯示出一個可用的網絡列表。如果您所需使用的網絡與您的開戶網絡服務商已簽訂漫遊協議，您就可以選擇這個網絡。如手機無法存取該選取的網絡，您仍可選擇其他網絡。如果關機，手機會重設為自動。

▶ **首選網絡:** 您可以設定首選網絡的列表，手機會先嘗試登入該網絡，然後再嘗試登入其他網絡。此列表是透過手機的已知網絡預定列表而建立的。

更改頻段

(功能表 9422)

可讓您選擇只限 PCS 或 EGSM/DCS。

GPRS 連接

(功能表 94.2.3)

您可以根據各種不同狀況設定 GPRS 服務。

▶ **開機:** 如選用此功能，開機時手機會自動登入 GPRS 網絡。此將會啟動 WAP 或電腦撥接應用程式，用以建立電話與網絡之間的連接，便可即時傳輸數據。當您結束應用程式後，GPRS 連接也會結束，但仍保留 GPRS 網絡的註冊身份。

▶ **需要時:** 如果選擇此功能表，手機會在連接到 WAP 或應用程式服務時才建立 GPRS 連接，並在結束 WAP 或應用程式服務時中斷連接。

存取點

(功能表 94.2.4)

可讓您從清單中選擇接入點。

USB 連接模式

(功能表 94.3)

您可選擇一種數據服務或大容量儲存模式。當資料傳送完畢後，請嘗試跟隨以下步驟。

附註!


- 拔除連接線前，您必需先在視窗系統的「安全地移除硬體」按「停止」。否則，不保證已傳輸數據的完整性。

1. 在視窗通知區域連按 [安全地移除硬體]
2. 選擇「USB Mass Storage Device」，然後按「停止」。若有需要，請選擇適合的磁碟區或儲存裝置(Storage Device) 後按「確定」。以下訊息將會出現：「現在可以放心地從系統中移除'USB Mass Storage Device' 裝置。」
3. 然後拔除連接線。

設定

通話

功能表 9.5

您可以在設定功能表中按左軟鍵  [確認] 以設定有關通話的功能表。

來電轉駁

(功能表 95.1)



來電轉接服務可讓您將語音、傳真和數據通話轉接到另一個號碼。詳細資訊請洽詢電訊服務商。

- ▶ **所有語音通話:** 無條件轉接所有語音通話。
- ▶ **線路繁忙時:** 當手機正在通話時轉接語音通話。
- ▶ **無人接聽時:** 當您沒有接聽時轉接語音通話。
- ▶ **無網絡或關機時:** 當手機已關機或在網絡範圍以外時轉接語音通話。

- ▶ **所有數據通話:** 無條件轉接至連接 PC 的號碼。
- ▶ **所有傳真通話:** 無條件轉接至連接傳真的號碼。
- ▶ **取消全部:** 取消所有來電轉接服務。

接聽模式

(功能表 95.2)

- ▶ **滑蓋開啓:** 如果選擇此功能表，只須滑開手機，即可接聽來電。
- ▶ **按任何鍵:** 如果您選擇本功能表，按除  [結束] 鍵以外的任何鍵都可接聽來電。
- ▶ **按發送鍵:** 如果選用此功能表，則只可以按  [發送] 鍵來接聽來電。

發送我的號碼

(功能表 95.3)

(需視網絡及申請的服務能否支援而定)

- ▶ **按網絡設定:** 如選取此項目，則可以根據您撥打的線路而提供手機號碼，如線路 1 或線路 2。
- ▶ **開啓:** 如果您選擇本功能表，您可以將您的手機號碼發送給其他人。亦即是，您的電話號碼將會顯示在接聽者的手機上。
- ▶ **關閉:** 如果您選擇本功能表，您將不會發送您的手機號碼。

來電等候

(功能表 95.4)

(需視網絡能否支援而定)

- ▶ **啓動:** 啓動對應的服務。
- ▶ **取消:** 關閉對應的服務。
- ▶ **檢視狀態:** 查看此服務的狀態。

分鐘提示

(功能表 95.5)

如果選取開啓，通話時，手機將在每分鐘發出嗶聲，以提示您通話時間。

自動重撥

(功能表 95.6)

- ▶ **開啓:** 啓動此功能後，當通話無法接通時，手機會自動重撥該號碼。
- ▶ **關閉:** 當原初通話無法接通時，手機將不會自動重撥該號碼。

選擇線路

(功能表 95.7)

(需視網絡和智能咭有否支援而定)

此功能表只有在智能咭支援兩個用戶號碼(即兩條電話線路)時才會顯示。選擇撥打電話與傳送短訊時想使用的電話線路(在線路 1 和線路 2 之間)。無論選擇哪一條線路，兩條線路都可接聽來電。

設定

傳送DTMF

(功能表 95.8)

您可以在通話中發送接觸音頻以控制您的語音信箱或其他自動化電話服務。

安全


功能表 9.6

PIN 碼要求

(功能表 96.1)

在本選項中，您可以設定手機在開機時詢問智能咭的 PIN 碼。

如果這項功能已被啟動，您將會被要求輸入 PIN 碼。

1. 在安全功能表中選取 PIN 碼要求，然後按  [確定]。
2. 設定為開啓/關閉。
3. 如果要變更此設定，則在開機時需要輸入 PIN 碼。
4. 如果輸入錯誤的 PIN 碼超過 3 次，手機將被鎖定。PIN 碼一旦被鎖定，您需要輸入 PUK 碼。

5. 您最多可以輸入 PUK 碼 10 次。如果輸入錯誤的 PUK 碼超過 10 次，就無法將手機解除鎖定。請洽詢電訊服務商。

自動按鍵鎖

(功能表 96.2)

如果你啓用此功能時，當滑蓋蓋上時，按鍵會按照預設時間自動鎖上。

附註

- ▶ 當按鍵被鎖時，您不可使用緊急電話。

手機鎖

(功能表 96.3)

使用安全密碼可避免他人擅用您的手機。如果您將手機鎖設定為 [在開機時]，手機會在每次開啓時要求您輸入安全密碼。

如果您將手機鎖設為 [智能咭更換時]，手機只會在智能咭更換時要求您輸入安全密碼。

通話限制

(功能表 9.6.4)

通話限制服務可限制您的手機撥打或接聽特定類別的來電。這項功能需要限制密碼。您將可看到以下子功能表。

- ▶ **所有撥出通話:** 限制撥出所有電話的服務。
- ▶ **國際撥號:** 限制撥出所有國際電話的服務。
- ▶ **本地以外的國際撥號:** 限制撥出所有開戶網絡以外的電話(國際漫遊)服務。
- ▶ **所有來電:** 限制接聽所有來電的服務。
- ▶ **國際漫遊時來電:** 限制漫遊時接聽所有來電的服務。
- ▶ **取消所有限制通話:** 您可以取消所有通話限制服務。
- ▶ **更改密碼:** 您可以更改從服務供應商取得的限制密碼。

固定撥號號碼

(功能表 9.6.5)

(取決於智能咭)

您可以限制撥出電話時只能撥打選取的電話號碼。這些號碼由您的 PIN2 碼提供保護的。

更改密碼

(Menu 9.6.6)

PIN 是個人身份號碼的縮寫，可防止他人擅用手機。

可以更改存取密碼: **安全密碼和 PIN2 碼。**

飛航模式

功能表 9.7

當您登上飛機前或身處一個禁止使用無線網絡的地方時，此功能可讓您只是使用無需用到無線網絡的手機功能。

如果您開啓了飛航模式，該圖示將取代網絡訊號強度圖示顯示在畫面之上。

設定

省電模式

功能表 9.8

如果設定為「開啓」，您便可以在不使用手機時節省電量。

重設

功能表 9.9

您可以選擇本功能表，將手機重設回預設的設定值。此外，您必須有安全密碼才可啓動這項功能。

記憶體狀態

功能表 9.0

您可以查看每個資料庫、智能咭及外置記憶體的可用空間與使用狀況。您可以進入每個資料庫功能表。

配件

手機配有多種配件。您可依據個人需要選擇所需配件。

標準電池



旅行充電器

您可在離家或辦公室時使用充電器充電。



便攜免提裝置

此裝置可連至手機，讓您實現免提操作。



附註

- ▶ 請務必使用原裝 LG 配件。
- ▶ 不使用原裝配件可能會導致保養失效。
- ▶ 以上附件可因區域不同而有所差異，詳情可諮詢我們的區域服務商或代理商。

配件技術資料

一般資料

產品名稱：KG290

系統：GSM 900 / DCS 1800 / PCS 1900

適用溫度

最高：+55°C (標準), +45°C (電池充電)

最低：-10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KG290

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1(2005) / EN 301 489-07 v1.3.1(2005) / EN 301 489-17 v1.2.1(2002)
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.6.1 (2004-11)

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

04. JUN. 2007


LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-6940, e-mail : seokim @ lge.com


Signature of representative

KG290 用户手册

- 简体中文

本档是 2G 手机 LG KG290 的用户手册。
LG Electronics 保留对此档的所有权利。
未经 LG Electronics 同意，不得复制、
修改和散发本档。

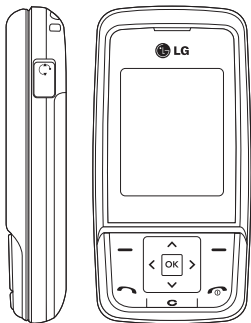

内容

安全措施	4	设置	24	任务	28
关于安全有效使用手机的准则	5	网络设定		计时表	
手机部件	10	查看样式		单位对换器	29
手机正面		缓存		世界时间	
屏幕上的图标	14	Cookies		SIM 服务	
		保安证书			
开始	16	显示图像	25	多媒体	30
安装SIM卡和手机电池		Java 脚本		MP3 播放机	
给电池充电	18	已用内存		全部歌曲	
断开充电器	19	资料		我的播放列表	
				设置	
常规功能	20	通话记录	26	照相机	
输入文本		所有通话		录影机	32
更改文本输入模式		未接来电		FM 收音机	
使用 T9 模式	21	拨电		语音录音机	
电话本		已接来电			
		通话持续时间		信息	33
菜单一览表	22	通话费用		新信息	
		数据资料		文本	
浏览器	23	工具	27	多媒体	34
主页		闹钟		收件箱	35
书签		日历		草稿箱	
输入网址		计算器	28	发件箱	36
浏览记录	24	备忘录		已发送	
已保存的页面				收听语音邮件	

小区广播信息 36

阅读 37

栏目

模板

模板

多媒体

设置 38

文本

多媒体信息

语音邮件中心 39

PUSH 信息

小区广播信息

我的文档 40

图像

声音

视频

其它

游戏与应用程序 41

游戏和应用程序

网络设置

外部储存器

设置 43

启动

更改

电话簿 44

搜索

新联系人

快捷拨号

群组

全部复制

全部删除 45

设置

查看选项

资料

设置 46

日期和时间

语言

显示

墙纸

背景灯计时器

亮度

主屏快捷键

主题

菜单样式

问候语

网络名称 47

彩色拨号字体

连接性 47

蓝牙

网络 48

USB 连接模式 49

呼叫 50

呼叫转接

接听模式

发送本机号码 51

来电连接等待

分钟提示

自动重拨

选择线路

发送双音多频 52

保安

PIN 码要求

自动键盘锁

手机锁

呼叫限制

固定的拨号号码 53

更改代码

航行模式 54

省电模式

重新设置

内存状态

附件 55

技术数据 56

安全措施

警告！

- 在飞机上，必须关闭手机。
- 开车时请不要手持手机。
- 在加油站、燃料仓库、化工厂或爆破活动附近请关机。
- 为了您的安全，请只使用原厂电池和充电器。
- 手机在充电时，不要用湿手拿起手机。这可能会导致电击或使您的手机严重受损。
- 请将手机放在儿童接触不到的安全地方，以防止它的可拆部件使儿童造成窒息危险。

小心！

- 在任何有特殊规定的场所请关机。例如，在医院内请关机，因为手机会对心脏起搏器和助听器等电子医疗设备造成干扰。
- 并非所有蜂窝网络都支持紧急呼叫。因此您不可以只依靠手机作为紧急时刻的通信工具，例如：紧急医疗救护。
- 仅使用原厂附件以防损坏手机。
- 手机可能对电视、收音机、电脑等造成轻微干扰。
- 废旧电池应按相关法规进行适当处理。
- 切勿拆除手机或电池。
- 如果用不适当的电池进行替换，可能会有爆炸危险。

关于安全有效使用手机的准则

射频能量照射

辐射波照射和吸收比率(SAR)信息

该款 KG290 型移动电话的设计完全遵循了辐射波照射的相关安全要求。该要求基于科学的指导原则，包括用于确保所有人(无论年龄和健康状况)安全的辐射允许限度。

- ▶ 辐射波照射指导原则采用了一种称为吸收比率(或 SAR)的测量单位。进行 SAR 测试时，手机将使用一种标准化的方法，在所有可用的频段上以其最高测定能量级发射频率。
- ▶ 虽然各种型号 LG 手机的 SAR 级可能不尽相同，但它们均是遵循辐射波暴露的相关规定设计制造而成。
- ▶ 国际非电离辐射保护委员会(ICNIRP)所规定的 SAR 界限

是在十(10)克人体组织上平均为 2W/kg。

- ▶ 经DASY4测试表明，此型号手机在手持使用时SAR的最大值为 0.752W/kg(10克)，戴在身体上时，其值为 1.01W/kg(10g)。
- ▶ 各国/地区政府所采用的SAR 数据信息是由电气和电子工程师协会(IEEE)评估制定，其标准是在一(1)克人体组织上平均为 1.6W/kg (例如美国、加拿大、澳大利亚和台湾)。

产品保养和维护

警告!

请仅使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的相关证明或担保，甚至可能造成危险。

关于安全有效使用手机的准则

- ▶ 请勿擅自拆装手机。(如需任何维修, 请将其交给具备相关资格的服务技术人员。)
- ▶ 手机应远离诸如电视机、收音机或个人计算机等电器设备。
- ▶ 切勿将手机置于散热设备或炊具附近。
- ▶ 切勿抛掷手机。
- ▶ 切勿对手机造成任何机械振动或震荡。
- ▶ 手机套或乙烯基外包装均有可能对手机表面造成损伤。
- ▶ 请勿使用刺激性的化学药品(如酒精、苯、稀释剂等)或清洁剂来清洁手机。这存在引发火灾的危险。
- ▶ 切勿将手机置于过度烟尘环境中。
- ▶ 切勿将手机靠近信用卡或交通票卡; 这有可能影响磁条中存储的信息。
- ▶ 切勿以尖锐物体接触屏幕; 否则将对手机造成损伤。
- ▶ 不要将手机暴露在液体或潮气中。
- ▶ 谨慎使用如耳机之类的配件。
- ▶ 如果将手机放在口袋或手提包时没有盖上手机插孔(电源插销), 则金属物件(如硬币、回形针或钢笔)会使手机短路。请在不使用时始终盖好插孔。
- ▶ 切勿将手机放在微波炉上, 否则会造成电池爆炸。
- ▶ 只有授权人员才能对手机及其配件进行维修。安装不当或非法定维修可能会发生意外, 并因此使保修失效。

- ▶ 如果天线损坏，请勿使用手机。如果损坏的天线接触皮肤，则会导致皮肤轻度灼伤。请联系 LG 授权维修中心，以便更换损坏的天线。
- ▶ 手机标签包含有用于客户支持目的的重要信息。不要将其撕掉。

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- ▶ 在未经允许的情况下，不得在医疗设备附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- ▶ 手机可能会对某些助听器造成干扰。
- ▶ 微弱的干扰可能会影响电视、收音机、个人计算机等。

- ▶ 不要折弯、刮擦或将其暴露在静电下。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- ▶ 请勿在驾驶时使用手持电话。
- ▶ 驾驶时应全神贯注。
- ▶ 如有条件，可使用免提装置。
- ▶ 如驾驶条件不允许，请将车停在路边或空地旁，然后再拨打或接听电话。
- ▶ 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- ▶ 驾车时，不要将手机或免提装置放在靠近安全气囊的地方。如果无线装置安装不当，则在安全气囊弹出时，您可能会受到严重创伤。

关于安全有效使用手机的准则

防止损伤您的听力

长时间高分贝的音量会损伤您的听力。所以我们建议您不要贴近耳边开/关电话听筒。注意将音乐及通话音量调节适当。

爆破现场

切勿在引爆过程中使用手机。请遵守相关限制，并按照规定行事。

潜在的爆炸性环境

- ▶ 切勿在加油站使用手机。切勿将手机靠近燃料或化学物品。
- ▶ 如车辆上携带有移动电话或其配件，请勿在车厢里装载或运输可燃性气体、液体或易爆物品。

在飞机上

无线设备可能对飞机造成干扰。

- ▶ 请在登机前关闭手机。
- ▶ 未经机务人员允许，请勿擅自使用手机。

电池信息及保养

您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。

- ▶ 只能使用 LG 电池和充电器。LG 充电器设计会最大程度地延长电池使用寿命。
- ▶ 切勿拆解电池组或将其短路。
- ▶ 保持电池组的金属触点清洁。

- ▶ 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- ▶ 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- ▶ 切勿将电池充电器暴露在直射阳光下，或置于诸如浴室之类的高湿环境中。
- ▶ 切勿将电池存放在过热或过冷的地方，这可能损害电池的性能。
- ▶ 如果用不适当的电池进行替换，可能会有爆炸危险。
- ▶ 请按制造商的说明处置用过的电池。

网络服务

本用户手册中所述的服务和功能视网络类型或订阅情况而定。因此，您的手机中并非所有菜单均可用。有关预订服务和功能的更多信息，请联系您的网络运营商。

儿童准则

请确保将显示屏保护薄及所有其它薄片卸下并适当弃置。由于儿童有可能吸入或吞下这些薄片，请将其置于儿童无法接触的地方。

手机部件

手机正面

正面图



手机背面



注意

- ▶ 在通电话时请不要接触天线。它也许影响讲话质量

左边



侧按键

- ▶ 在待机模式下
(打开/闭合):
控制按键音量
- ▶ 通话时: 听筒音量

照相机热键

右边



耳机

手机部件

滑开电话

发送键

- ▶ 拨打电话或接听来电。
- ▶ **在待机模式下:** 显示最近的拨出电话、已接来电和未接来电。

数字键

- ▶ **在待机模式下:** 输入号码以便拨号。
长按:
 - 0** 国际电话
 - 1** 激活语音邮件中心菜单
 - 2** 至 **9** 快速拨号
- ▶ **在编辑模式下:** 输入数字和字符。

听筒

主屏


- ▶ **顶部:** 信号强度、电池电量及其它功能
- ▶ **底部:** 软键指示

左软键 / 右软键

- ▶ 这些按键执行显示屏底部所示的功能。

结束/电源键



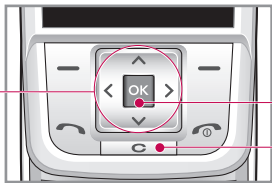

导航键

▶ 在待机模式下:

- ▲ **短按:** 新信息
(**长按:** 消息突现)
- ▼ **短按:** 电话本姓名列表
- ◀ **短按:** 列出情景模式
(**长按:** 激活/取消振动模式)
- ▶ **短按:** 列出收藏夹

▶ 在菜单中: 上拉与下拉

确认键

- ▶ 选择菜单选项并确认操作。
- ▶ WAP access (长按键)

清除/取消键

- ▶ 每一次删除一个字。长按键删除所有输入。使用按键回到之前屏幕

手机部件

显示信息



区域	说明
第一行	显示不同图标。
中间各行	显示信息、说明以及输入的任何信息，如要拨打的号码等。
最后一行	显示当前给两个软键指定的功能。

手机屏幕会显示很多图标，具体描述如下：

屏幕上的图标

图标	描述
	表示网络信号的强度。
	您可以使用 GPRS 服务。
	闹铃已设定并启动。
	显示蓝牙已经打开。
	设置日程表
	显示电池电量。
	收到文本信息。

图标	描述
	收到语音信息。
	情景模式中的振动功能。
	情景模式中的无声功能。
	情景模式中的私人功能。
	情景模式中的户外功能。
	情景模式中的耳机功能。
	转接来电。
	指示手机目前正在访问WAP。

备注


- ▶ 交谈的质量也许改变根据网络覆盖面积。当信号强度是在2个信号以下，您我的经验减弱的声音，电话下落或粗劣的音像。参见这个信号如同显示为你的通电。当没有信号，那路段里是没有网络覆盖面积：您在这种情况下不能访问网络为任何服务（电话，消息等等）

开始


安装SIM卡和手机电池

1. 安装 SIM卡。

您的sim卡片包含您的电话号码、服务细节和联络，必须被插入入您的手机。如果您的SIM 卡片是去除，您的手机然后变得不能再用（甚而紧急呼叫）直到一合法sim 卡被插入。分开充电器和其它辅助部件从的手机在插入和去除您的sim 卡片之前。滑SIM 卡片入sim 持卡者。确定sim 卡片适当地被插入并且金联系范围在卡片面对向下。对去除这SIM 卡，按下来轻和拉扯在反向方向。

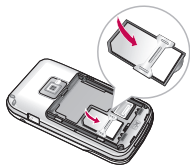

插入SIM 卡

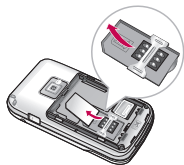


取出SIM 卡

注意

- ▶ SIM卡的金属触点很容易因刮擦而损坏。操作时请对SIM卡多加注意。遵守随SIM卡提供的说明。

2. 安装电池。

插入电池排列金联络电池与这电池终端(金子联络)在这电池隔间。然后推挤下来这上面电池直到它攫取入地方。

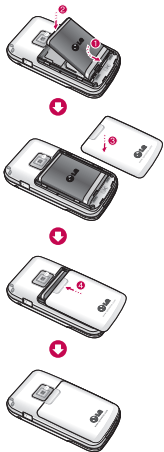

3. 卸下电池。


关闭电源。如果力量被留下,有您能丢失被存放的电话号码和消息。)的机会按电池释放销**1**和打开电池**2**。然后去除电池。



开始

给电池充电

要用旅行充电器为手机充电，您必须先装上电池。

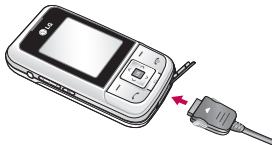

1. 将旅行充电器的一端插入手机底部。
2. 将旅行充电器的另一端连接到墙上的 AC 电源插座。
3. 完全充电后电池图标条棒将停止闪烁。
4. 手机原装电池在使用前必须完全充电。

小心

- 不可强行插入充电接口，因为这将损坏手机及旅行充电器。
- 如果在本国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- 充电时切勿取出电池或 SIM 卡。

警告

- 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
- 确保没有细尖的物体，如动物牙齿、指甲进入手机内触碰电池。这存在引发火灾的危险。

断开充电器

要用旅行充电器为手机充电，您必须先装上电池。



常规功能

输入文本

您可以使用手机键盘输入字母数字字符。例如，存放名在联络，写消息，创造个人问候或预定的事件在日历全部要求输入的文本。以下文本输入方法是手机可利用的。


T9 英文模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9 英文模式自动将所击按键与内部词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的 ABC 模式要少。有时这也称为预测性文本。


ABC 模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式（数字模式）






以每个数字一次击键的方式输入数字。要在文本输入区域中更改为 123 模式，按  键直到显示 123 模式。

更改文本输入模式


1. 当处于允许输入字符的区域中时，在 LCD 屏幕的右上角可以看到文本输入模式指示符。
2. 按  键对换 T9Abc 、 T9abc 、 T9ABC 、 ABC 、 Abc 、 abc 和 123 之间。

使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。您还可以在词典中添加新单词。当添加新单词时，手机将从词典中选择可能性最大的单词。

1. 预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按一次键。
2. 输入整个单词之后再对输入的内容进行编辑或删除。
3. 按  键以空格结束每个单词。要删除字母，请按 。按住  删除整个单词。

注意

- ▶ 要从文本输入模式中退出而不保存输入内容，按 。手机返回待机模式。

有关可使用字母数字键输入的字符，请参阅下表了解更多信息。

按键	按顺序显示的字符	
	大写	小写
	.,/?!-:'"@1	.,/?!-:'"@1
	A B C 2 Â Ã Ä Ç	a b c 2 â ä ç
	D E F 3 É Ê Ë Ì	d e f 3 é ê ë ì
	G H I 4 Î Ï	g h i 4 î ï
	J K L 5	j k l 5
	M N O 6 Ñ Ò Ó Ü	m n o 6 ñ ò ó ü
	P Q R S 7	p q r s 7
	T U V 8 Û	t u v 8 û
	W X Y Z 9 ?	w x y z 9 ?
	空格键 0	空格键 0

电话本

您可以将电话号码及其对应的姓名存储在 SIM 卡的内存中。

此外，您还可以在手机存储器中存储最多 1000 个号码和姓名。

电话本菜单中可以使用 SIM 卡和手机存储器，使用方式相同。

菜单一览表 (菜单设为网格类型。)

1. 浏览器

- 1.1 主页
- 1.2 书签
- 1.3 输入网址
- 1.4 浏览记录
- 1.5 已保存的页面
- 1.6 设置
- 1.7 资料

2. 通话记录

- 2.1 所有通话
- 2.2 未接来电
- 2.3 拨电
- 2.4 已接来电
- 2.5 通话持续时间
- 2.6 通话费用
- 2.7 数据资料

3. 工具

- 3.1 闹钟
- 3.2 日历
- 3.3 计算器
- 3.4 备忘录
- 3.5 任务
- 3.6 计时表
- 3.7 单位对换器
- 3.8 世界时间
- 3.9 SIM 服务

4. 多媒体

- 4.1 MP3 播放机
- 4.2 照相机
- 4.3 录影机
- 4.4 FM 收音机
- 4.5 语音录音机

5. 信息

- 5.1 新信息
- 5.2 收件箱
- 5.3 草稿箱
- 5.4 发件箱
- 5.5 已发送
- 5.6 收听语音邮件
- 5.7 小区广播信息
- 5.8 模板
- 5.9 设置

6. 我的文档

- 6.1 图像
- 6.2 声音
- 6.3 视频
- 6.4 其它
- 6.5 游戏与应用程序
- 6.6 外部存储器

7. 设置

- 7.1  普通
- 7.2  静音
- 7.3  振动
- 7.4  户外
- 7.5  耳机

8. 电话本

- 8.1 搜索
- 8.2 新联系人
- 8.3 快捷拨号
- 8.4 群组
- 8.5 全部复制
- 8.6 全部删除
- 8.7 设置
- 8.8 资料

9. 设置

- 9.1 日期和时间
- 9.2 语言
- 9.3 显示
- 9.4 连接性
- 9.5 呼叫
- 9.6 保安
- 9.7 航行模式
- 9.8 省电模式
- 9.9 重新设置
- 9.0 内存状态

您可以访问不同的 WAP（无线应用协议）服务，如银行业务、新闻、天气报告和航班信息等。这些服务专为手机应用而设计，由 WAP 服务提供商负责进行维护。

向您的网络运营商及(或) 希望使用其服务的服务提供商咨询，了解WAP服务的提供、定价和收费情况。服务提供商将向您提供有关如何使用其服务的说明。

一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。要在任何时间退出浏览器，按开关机键。手机将返回待机模式。

注意

- ▶ 视浏览器版本而定，WAP 浏览器菜单可能有所不同。

主页

功能表 1.1

回到主页。主页是您在启动的上网设定中所设定的 WAP 站点。如果您没有进行设置，将使用运营商 预先设定的站点。

书签

功能表 1.2

此菜单使您可以存储喜爱网页的 URL 以便以后访问。您的手机上已预先安装若干个书签。这些预先安装的书签不能删除。

输入网址

功能表 1.3

您可以直接连接到想要的站点。输入特定的 URL 后，按 OK 键。

浏览器

浏览记录

功能表 1.4

此菜单将显示最近浏览的页面。

已保存的页面

功能表 1.5

电话可能保存页在显示作为一个离线文件

设置

功能表 1.6

您可以设置与 Internet 服务相关的情景模式、缓存及安全性。

网络设定

(功能表 1.6.1)

上网设定为用于连接互联网的网络信息。每个上网设定均有子菜单，如下所示：

查看样式

(功能表 1.6.2)

您能改变浏览器屏幕尺寸(正常看法或适合对屏幕)

缓存

(功能表 1.6.3)

您已访问的信息或服务保存在手机的缓存中。

注意

▶ 缓存是一种缓冲存储器，可以暂时保存数据。

Cookies

(功能表 1.6.4)

您可以设定您已访问的信息或服务是否保存在手机的Cookie中。

保安证书

(功能表 1.6.5)

证书已存储在您的手机中。

显示图像 (功能表 1.6.6)

允许您使能或使图像显示在浏览期间失去能力。

Java 脚本 (功能表 1.6.7)

这菜单允许您激活Java 脚本当您使用浏览器。

已用内存 (功能表 1.6.8)

您能选择记忆使用(电话或外部)

资料 功能表 1.7

您可以查看 WAP 浏览器版本的信息。

通话记录

仅当网络支持服务区内的主叫线路识别 (CLI) 时, 您才能检查未接来电、已接来电和拨出电话。屏幕上显示电话号码和姓名 (如果有) 以及通话 日期和时间。您还可以查看通话计时和计费。

所有通话 功能表 2.1

您可以查看拨出电话跟已接来电的所有列表。

未接来电 功能表 2.2

此选项允许您查看最后 50 个未应答的来电。

拨电 功能表 2.3

此选项允许您查看最后 50 个去电 (拨出或尝试)。

已接来电 功能表 2.4

此选项允许您查看最后 50 个来电。在按左软键 [选项] 之后, 您还可以:

通话持续时间 功能表 2.5

可查看来电和去电的通话时间长度。您也可以重置通话时间。

通话费用 功能表 2.6

可检查最后通话、全部通话的费用和余额, 你也可以选择全部清零。要重置费用, 您需要 PIN2 码。


数据资料 功能表 2.7

您可以通过 GPRS 信息选项查看自己的在线时间。此外, 您也可以查看在网络上传输的数据量。

闹钟

功能表 3.1

您最多可以设置五个闹钟。






1. 选择开并输入闹钟的时间。
2. 选择重复周期：一次、周一至周五、周一至周五周六、周六至周三、周六至周四、每天。
3. 选择闹钟铃声之后按  [设定]。


日历





功能表 3.2

当您进入这一功能表，会有一个日历显示出来。屏幕顶端是日期部分，在屏幕底端是图标(日程表和备忘录)。在您更改日期后，日历会按照该日期更新。

更改日、月、年。

按键	描按	按键	描按
	 每年		 每周
	 每月	 每天	

在日程表模式下，按左软键  [选项]，如下所示：

- ▶ **查看：**查看选定日期的所有日程和备注。使用 、 浏览记事列表。
- ▶ **新日程表：**可为选定的日期添加新的日程和备注。可存储多达 100 条记事。
- ▶ **日程表响音：**您可以为每个选定的日期设置闹钟铃声。
- ▶ **所有日程表：**您可以按导航键 、 移动到以下各部分输入相应的信息：时间、重复、闹钟和日程。
- ▶ **转到日期：**您可以直接转到选定的日期。
- ▶ **删除已过日程：**您可以删除已经过期的日程。
- ▶ **全部删除：**您可以删除所有备注。

工具

计算器




功能表 3.3

该功能表包含的标准功能包括 +, -, x, ÷ : 加、减、乘、除。


此外,您还可以使用计算器的其它各种功能,如,正弦函数、余弦函数及对数计算等。

备忘录

功能表 3.4

1. 按左软键  [确定] 选择备忘录。
2. 如果备忘录为空,可按左软键  [新建]。
3. 输入备忘录内容,然后按左软键  [确定]。

注意

- ▶ 如果要更改文本输入模式,请依次按  这些模式

任务

功能表 3.5

您能观看,编辑和增加任务做。任务显示时间顺序。被完成了或未被完成的任务被显示用不同的方式。

计时表

功能表 3.6

1. 按 [开始] 开始计时,按OK键记录一圈的时间。
2. 按 [停止] 确定一圈时间的记录。
3. 按 [重置] 复位。

单位对换器

功能表 3.7

该功能可实现单位的转换。有4种可以转换的单位类型：货币，面积，长度，重量，温度，音量，速度

世界时间

功能表 3.8

您可以通过此项功能设置时区。

使用上/下导览键，可以查看格林威治时间（GMT）及世界主要城市目前的时间。

屏幕会显示城市名称、目前日期及时间。

您能选择一个重要城市作为基地，您可从更改或新增城市功能中选择。

SIM 服务

功能表 3.9

此菜单视 SIM卡和网络服务而定。

多媒体

MP3 播放机

功能表 4.1

全部歌曲

(功能表 4.1.1)

您能观看所有音乐文件被存放在电话/外部记忆

我的播放列表

(功能表 4.1.2)

您能创造您自己的播放表选从所有菜单名单

设置

(功能表 4.1.3)

随机播放

(功能表 4.1.3.1)

如果您想要连续和任意地演奏音乐选择这个选择

重复

(功能表 4.1.3.2)

如果您选择一，只有您选择的一首歌曲将被重覆。并且所有歌曲在您的播放表将被重覆。并且没有重覆当一首歌曲在选择没有的情况下

平衡器

(功能表 4.1.3.3)

您能选择调平器在音乐、爵士乐、摇滚乐、POP，等之中几种风格

播放机外皮

(功能表 4.1.3.4)

有3 种类播放机外皮


照相机


功能表 4.2

使用手机内置的相机模式，您可以拍摄人物照片或录制视频。此外，您可以将照片发送给其他人，或将照片设为墙纸。



• 拍照

按住相机  按钮。打开相机镜头盖后即可使用相机拍照，您可以水平方向旋转屏幕。

- 要拍出清晰的照片，请拖稳相机不要晃动，按相机  按钮。
- 适当地调节与拍摄对象的距离（大于 50 厘米）。
- 小心保管相机，避免撞击，使用柔软的布擦拭相机镜头。
- 不要拆卸或非专业人员维修相机，这可能引起火灾或相机出现故障。
- ▶ **决心：** 允许您设置图像尺寸：(1280x960)、(640x480) 和 (320x240)。连拍仅适用于 320x240、640x480 的分辨率。
- ▶ **质量：** 允许您将图像质量设置为：正常、精细和超精细。

- ▶ **自拍计时器：** 允许您选择延迟时间（关、3 秒、5 秒、10 秒）。手机将会在指定的时间之后拍照。
- ▶ **检视模式：** 可以检视完整图像或全屏幕画面。
- ▶ **保存至：** 您可以设置拍照后的保存位置。（外存/内存）
- ▶ **连拍：** 允许您单拍或连拍。连拍时允许您拍摄多张照片。
- ▶ **色彩效果：** 4 种图像效果设置（关/棕褐色/单色/反色）
- ▶ **白平衡：** 允许您根据环境更改设置。（荧光灯/阴天/灯光/日光/自动）
- ▶ **快门声音：** 您可以设置拍照时的声音。
- ▶ **恢复最初设定：** 允许您重置设置。

多媒体

录影机

功能表 4.3

1. 选择摄像机菜单。
2. 摄像机设置菜单与照相机设置菜单基本相同，除以下项之外：



按  录制图像。

- ▶ **录像模式：**允许您将视频文件发送方式设置为“彩信”或“标准”。
- ▶ **决心：**您可以选择以下分辨率：128x96、176x144。

FM 收音机

功能表 4.4

您可以搜索收音机电台并收听节目。

1. 轻触相应频道的数字键以将当前选定的收音机电台存储于此频道。
2. 预设收音机频道之后，您可以收听所有预设频道。
3. 您可以调节频率以及更改指定频道的收音机电台。您可以通过轻触两秒或按侧键搜索下一个电台。

语音录音机

功能表 4.5

在这个特点您能记录10个声音备忘录，最大60秒

新信息


功能表 5.1

本功能表涉及的功能包括：SMS（短消息服务），MMS（多媒体信息服务），语音邮件和网络服务信息等。

文本

(功能表 5.1.1)


您可写入并编辑文本信息。

1. 按左软键  [确定] 进入新信息菜单。
2. 如果您想写文本信息，选择写文本信息。
3. 使用 T9 文本可更容易地输入信息。
4. 选择 [选项] 来选择使用个项。

选项

▶ **发送至：** 发送文本信息。

1. 输入接收者的号码。

2. 按  键可加入更多的接收者。
3. 可在电话本或最近号码当中选择电话号码。
4. 所有信息均会自动保存在发信箱中，即使在发送失败之后。

▶ **插入**

▶ **发送：** 发送文本信息。

- **符号：** 您可以添加特殊符号。
- **图像：** 您可以插入图像。您也可以将收到的短信中的图像以 EMS 图像保存在此，并在发送其它信息时使用。
- **声音：** 您可以添加支持短息的歌曲。
- **文本模板：** 您可以使用已在手机中设置过的常用短语。
- **电话本：** 您可以在地址簿中添加电话号码。
- **名片：** 你可以添加名片。

信息

- ▶ **保存到草稿箱：**在“草稿箱”中保存信息。
- ▶ **T9语言输入：**选择 T9 输入模式的语言。您也可以通过选择“T9 关闭”来停用 T9 输入模式。
- ▶ **清除文本：**您可以在撰写短信时清除文本。
- ▶ **退出：**如果在写信息时按“退出”，可结束写信息并返回“写文本信息”菜单。您写的信息不会被保存。

多媒体

(功能表 5.1.2)

您可以编写多媒体信息，查看信息大小。

1. 通过按左软键“确定”进入新信息菜单。
2. 选择写多媒体信息。
3. 您可以创建一条新信息或者选择已经编制好的多媒体模板。

用户在 T9 模式下可以创建自己语言。

可插入彩信的文件最大为 300kb.

选项

- ▶ **发送至：**您可以发送多媒体信息给多个接收人。
- ▶ **插入：**您可以添加符号、图像、视频、声音、文本模板和名片及其他。

注意

- ▶ 所有信息均会自动保存在发信箱中，即使在发送失败之后。
- ▶ **预览：**您可以预览创建的多媒体信息。
- ▶ **保存：**您可以将多媒体信息保存到“草稿箱”。
- ▶ **修改标题：**您可以为讯息编辑标题。

- ▶ **删除幻灯片：**您可以删除已插入的幻灯片
- ▶ **幻灯片持续时间：**您可以设定幻灯片的持续播放时间
- ▶ **T9语言输入：**选择 T9 输入模式的语言。您也可以通过选择“关闭 T9”来停用 T9 输入模式。
- ▶ **T9 新建字：**将新建 T9 单词选为字典中输入的新字。
- ▶ **退出：**您可以退回到信息功能表中。

注意

- ▶ 如果在撰写多媒体信息时选择了大尺寸的图片文件（例如，200K），加载时间可能需要 10 秒钟。此外，在加载期间您不能激活按键。大约 10 秒钟之后，您可以撰写信息。

收件箱

功能表 5.2

当收到信息时，手机会给予提示。收到的信息会存储到收件箱中。如果手机显示“没有空间存储信息”，您可以通过删除信息、媒体和应用程序释放存储空间。

备注

- ▶ **SIM 信息：**SIM 信息是指存储在 SIM 卡上的特殊信息。

对于收到的多媒体信息通知，您可以对信息进行操作或者等待其自动下载。

草稿箱

功能表 5.3

使用此功能表，您可以查看保存的信息。

信息

发件箱

功能表 5.4

此菜单允许您查看要发送或发送失败的信息。成功发送信息后，信息将被移到发件箱菜单。



已发送

功能表 5.5

您可以通过此功能表查看您已经发送的信息。您也可以查看其时间和信息的内容。

收听语音邮件

功能表 5.6

一旦选择此菜单，输入语音邮箱号码后，只需按左软键  [确认] 即可收听语音邮件。您也可以
在待机模式下长按  键来收听语音邮件。

注意

- ▶ 当您收到语音邮件时，您的手机会显示相应的图标并且您可以听到提示音。请与网络提供商联系，了解有关其服务的详细信息，以便对您的手机正确进行配置。

小区广播信息




功能表 5.7

(视网络和您所申请的服务而定)

小区广播信息是通过网络以文本信息形式向GSM 用户发送的。它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。不同类型的信息有不同的号码；因此您可以联系服务提供商，以便正确输入特定信息的特定号码。在收到小区广播信息时，您会看到弹出信息，告诉您已收到信息，或者直接显示小区广播信息。


阅读

(功能表 5.7.1)

1. 当您收到了信息服务消息和选择。读观看消息，这将是显示编辑在屏幕。您能读其它消息由滚动 、 或  [确定]。
2. 收到的信息可以保存到有新信息到达之前。

栏目

(功能表 5.7.2)

- ▶ **新题目：** 您能增加信息服务消息号在电话记忆以它的绰号
- ▶ **查看列表：** 您可以查看添加的小区广播信息栏目。如果您按  [选项]，您可以编辑和删除被添加的小区广播信息栏目。
- ▶ **当前列表：** 您可以在启动列表中选择小区广播信息栏目。如果您启动了一个栏目，您将会接收此栏目的信息。

模板

功能表 5.8

模板

(功能表 5.8.1)

您共有 6 种文本模板，如下所示：

- 请回话！
- 对不起！我迟到了，我马上到。
- 你现在在哪里？
- 我在路上。
- 非常紧急，请速联系！
- 我爱你！

多媒体

(功能表 5.8.2)

添加多媒体信息模板后，您可以使用以下的功能。

信息

设置

功能表 5.9

文本

(功能表 5.9.1)

- ▶ **信息类型：**文本、语音、传真、国内传呼、X.400、电子邮件、ERMES

通常，信息类型设定为文本格式。您可以将文本信息转换为其它格式，以配合接收信息的设备。要获取有关该功能的信息，请联系您的服务提供商。

- ▶ **有效期：**该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。
- ▶ **发送报告：**如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。
- ▶ **回复计费：**如果信息已发出，则它可以允许接收人回复并支付回复至您的手机所需要的费用。

- ▶ **信息中心号码：**如果要发送文本信息，您可以通过此菜单接收短信中心地址。

多媒体信息

(功能表 5.9.2)

- ▶ **主题：**你可以进入信息主题当菜单选择“开”。
- ▶ **设置定时器：**撰写信息时，每页的显示时间。
- ▶ **优先权：**您可以设置您选择的信息的优先级。
- ▶ **有效期：**该网络服务可让您在发送信息时设定信息在信息中心储存的期限。
- ▶ **发送报告：**如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。
- ▶ **阅读报告：**您可以就收件人是否接收到信息收到回执。

- ▶ **自动下载：**如果您选择开启，您将自动接收多媒体信息。如果您选择关闭，您将仅能在收件箱中收到通知信息，然后再查阅这些通知信息。
- ▶ **网络设定：**如果选择多媒体信息中心，您可以设置多媒体信息中心的URL地址。
- ▶ **允许的消息类型**
 - **个人：**私人信息。
 - **广告：**商业信息。
 - **资料：**必要信息。

语音邮件中心 (功能表 5.9.3)

如果您的网络服务提供商支持此功能，则可接收语音邮件。当新语音邮件已接收，屏幕上将显示符号。请向您的网络服务提供商查询服务详情，以便相应地配置手机。

PUSH 信息 (功能表 5.9.4)

选择是否接收 Push 信息。

小区广播信息 (功能表 5.9.5)

▶ 接收

如果您选择此选项，您的手机将接收小区广播信息。

▶ 信息提示

如果您选择该功能，当您收到小区广播信息时，手机将发出提示音。

▶ 语言

您可以通过 [开/关] 选择您想要的语言。

我的文档

图像

功能表 6.1

显示多媒体内存中“图像”文件夹下的 jpg、bmp、gif、wbmp、png 文件列表。

声音

功能表 6.2

显示多媒体内存中“声音”文件夹下的 MP3、AAC、IMY、WAV、AMR、MIDI 文件列表。

视频

功能表 6.3

显示多媒体存储器中我的媒体\视频内的 3GP、3G2 文件列表。仅支持 .3gp 文件，此类文件格式为 MPEG4、h.263 视频编码和 AMR 音频编码。

其它

功能表 6.4

显示多媒体存储器中“我的媒体”\“其它”内的文件列表。

注意

- ▶ 当手机通过蓝牙连接到电脑时，您可以向“音乐”和“视频”文件夹发送及接收文件。您可以将任何文件类型复制到“其它”。您只能在“照片”、“声音”和“图像”文件夹中接收文件。您仅可以查看或播放“其它”文件夹中的文件（如果文件类型受支持）。当手机通过USB 数据线连接到电脑时，您将在内存中看到以下文件夹：“图像”、“声音”、“视频”和“其它”。您可以查看外部存储器中的所有文件夹。

游戏与应用程序 功能表 6.5

在此菜单中，您可以管理手机中安装的 Java 应用程序。您可以播放或删除下载的应用程序，或者设置连接选项。

游戏和应用程序 (功能表 6.5.1)

- **游戏：**在此菜单中，您可以管理手机中安装的 Java 应用程序。您可以播放或删除下载的应用程序，或者设置连接选项。下载应用被组织在文件夹。

在选择文件夹以后，按 [选择] 并且次级菜单可利用对几选择显示。

- ▶ **开：**您能看被存放的游戏。
- ▶ **新文件夹：**创造一张新幻灯片。
- ▶ **删除所有：**您能删除所有。

网络设置 (功能表 6.5.2)

设置网络信息使用连接到互联网。有缺省配置文件为一些操作员，被存放在电话记忆。它不可能给缺省配置文件改名。

各设置有子菜单如下：

- ▶ **激活：**激活选择的外形。
- ▶ **编辑：**使用这编辑和改变WAP设置为选择的外形。

外部存储器 功能表 6.6

此菜单允许您查看存储卡中的视频、照片、音乐、图像、声音及其它文件。如果外部存储器不可用，将会显示一则弹出信息“请插入外部存储器”。

我的文档

注意

- ▶ 要将手机识别为可移动磁盘，必须先安装 SIM 卡。

令人耳目一新的 LG

KG290 拥有海量存储功能。如果连接 USB 电缆，您就可以使用此手机中的可移动磁盘。

您可以下载 MP3 文件、照片、视频以及 txt 文件等等。这是从电脑访问手机的最快方式。您只需尝试连接 USB 电缆即可。一切就是这么简单！


注意

- ▶ MASS STORAGE 功能仅在手机为待机模式时可用。
- ▶ 在下载某些文件时，请勿移除数据线。文件下载完毕后，您需要单击电脑上的“安全移除硬件”，然后断开数据线连接。
- ▶ 在将文件复制到可移动磁盘时，显示屏上将显示“正在传输”信息。这表示 MASS STORAGE 正在运行，数据正在传输。当状态为“正在传输”时，请不要断开数据线连接。如果您在“正在传输”时断开数据线连接，将丢失或损坏所有数据，并可能会损坏手机。
- ▶ 如果您在使用 MASS STORAGE 时收到来电，呼叫将被拒绝。

在“情景模式”中，您可以调节和自定义手机铃声，用于不同的事件、环境或群组。


启动

(功能表 7.x.1)

1. 屏幕上显示情景模式的列表。
2. 在情景模式列表中，滚动到要启动的情景模式，然后按左软键 [选择]  键。
3. 然后，选择启动。

更改

(功能表 7.x.2)

在情景模式列表中，滚动到所需的情景模式。按左软键  或OK键后，选择“更改”。情景模式设置选项打开。按需要设置该选项。

- ▶ **来电提示：**设置来电提示类型。
- ▶ **铃声：**从列表中选择所需的铃声类型。
- ▶ **铃声音量：**设置铃声的音量。

- ▶ **信息提示：**设置信息的提示类型。
- ▶ **信息提示音：**选择信息的提示音。
- ▶ **按键音：**选择所需的按键音。
- ▶ **按键音量：**设置按键音的音量。
- ▶ **音乐效果音量：**设置确认音效。
- ▶ **开/关机音量：**设置开机/关机时的铃声音量。
- ▶ **自动应答：**请注意只有耳机模式拥有该子功能表。
 - **关：**即使您的手机响铃，也不会自动应答。
 - **5 秒后：**在5 秒后自动应答。
 - **10 秒后：**在10 秒后自动应答。


注意

- ▶ 所有情景模式都不能重命名。

电话簿


搜索

功能表 8.1

1. 按左软键  [确定] 进行查找。
2. 输入您要查找的名称。

注意





- ▶ 通过输入姓名的第一个字母可以进行即时搜索。


3. 如果要编辑、删除或复制条目，请选择左软键  [选项]。

新联系人

功能表 8.2



您可以使用该功能来添加电话簿条目。

1. 按左软键  [确定] 保存。
2. 输入姓名。
3. 按  ，然后输入号码。
4. 您可以通过按  [<],  [>] 键为此条目设置群组。

5. 您可以通过按左软键  [选项] 为条目设置铃声和照片。

快捷拨号

功能表 8.3

您可以为姓名列表条目指定按键  ~  中的任一键。可按此按键直接呼叫。

群组

功能表 8.4

每个群组最多可以列出20个成员。您可以设定6个群组列表。

全部复制

功能表 8.5

您可以将条目从SIM 卡内存复制到手机内存或从手机内存复制到SIM 卡内存。


全部删除

功能表 8.6

您可以删除 SIM 卡和手机中的所有条目。

设置

功能表 8.7

滚动到设置，然后按左软键  [确定]。

- ▶ **保存至：** 您可以将默认存储器设为：始终询问、SIM 卡、手机。

查看选项



(功能表 8.7.1)

滚动屏幕光标到查看选项，然后按 [确定] 进入。

- ▶ **名字：** 设置电话本名单由显示名字。
- ▶ **名字 & 数字：** 设置电话簿名单由显示名字和数字
- ▶ **图片：** 设置电话本名单以联络的信息和图片。

资料

功能表 8.8

- ▶ **服务号码：** 使用该功能访问您的网络运营商提供的特殊服务（如果您的 SIM 卡支持）
- ▶ **本机号码（取决于 SIM 卡）：** 您可以存储并查看自己的 SIM 卡号码。
- ▶ **名片：** 此选项允许您创建自己的名片，包含您的姓名和手机号码。要创建新名片，请按左软键  [添加] 并将信息输入此字段。启动简拼查找：您可以设置进行简拼查找。如果您要编辑、删除或发送名片，请选择左软键  [选项]。

设置

日期和时间

功能表 9.1

您可设置与日期和时间相关的功能。

语言

功能表 9.2

您可以选择手机上文本显示的语言。此设定会影响到语言输入法。

显示

功能表 9.3

墙纸

(功能表 9.3.1)

您可以从默认图像、已下载和照片当中选择一张图片作为您待机模式下的背景图片。

背景灯计时器

(功能表 9.3.2)

您可以设定按键后背景灯开启的时间。(关/10 秒/20 秒/30 秒/60 秒)

亮度

(功能表 9.3.3)

您可以将屏幕亮度设置为：100%、80%、60% 和 40%。

主屏幕捷径

(功能表 9.3.4)

如果您选择“开”，就可以在待机窗口中显示 4 个导航键的功能。


主题

(功能表 9.3.5)

您能改变当前的主题到其它主题。

菜单样式

(功能表 9.3.6)

手机提供了网格和列表菜单主题。通过滚动和按左软键  [确定] 来设置菜单样式。

问候语

(功能表 9.3.7)

如果您选择开，您将编辑手机在待机模式下显示的文本。

网络名称

(功能表 9.3.8)

如果激活此功能，网络名称将显示在主屏幕上。

彩色拨号字体

(功能表 9.3.9)

如果您精选，拨的字体的颜色得到各种各样(不仅黑颜色)

连接性

功能表 9.4

蓝牙

(功能表 9.4.1)

使用蓝牙、您可以与近距离的兼容移动设备、外围设备和计算机直接通信、而无需任何连线。本手机支持内置蓝牙连接、这样使其可与兼容的蓝牙手机、计算机应用程序等连接。

注意

- ▶ 当您从其他的蓝牙服务上接收数据，手机会请求一个确认信息。确认后传输，数据将会拷贝到您的手机上。
- ▶ 根据文件类型，它将会被存到如下的文件夹中：
 - **视频(.3gp, mp4):**
视频文件夹
 - **图像(.bmp, gif, jpg, png):**
图像文件夹
 - **声音(.amr, wav, aac):**
声音文件夹
 - **MP3(.mp3):** 声音/MP3 文件夹

▶ 打开/关闭蓝牙

您可以设定蓝牙功能为开或者关。

设置

▶ 装置列表

您可以查看 KG290 已配对的的所有设备。当您预先查找到蓝牙设备并配对成功后、进入配对设备时、单击选项后、可以使用如下功能：

▶ 蓝牙设置

- **本机显示设置：**指其它蓝牙设备是否可以搜索到您的手机。
- **我的名字：**您可以设置蓝牙设备的名称。默认名称为 KG290。
- **我的地址：**您可以查看您的蓝牙设备的地址。

网络

(功能表 9.4.2)

您可以选择能够自动或手动注册的网络。您也可以查看首选网络。

网络选择

(功能表 9.4.2.1)

通常、手机网络选择设定为自动。

- ▶ **自动：**如果您选择“自动”、手机会自动选择在您区域内的可用网络。一旦您选择“自动”、无论手机在开机状态还是关机状态、都将保持设置为“自动”。
- ▶ **手动：**手机会找到可用的网络列表并显示出来。然后您可以选择您想使用的网络、前提是该网络与您本地网络运营商已签订漫游协议。如果手机无法接入到您选择的网络中、手机允许您选择另一个网络。
- ▶ **首选网络：**您可以设定手机在注册其它网络前首先注册的首选网络列表。该列表从手机预设的已知网络列表中创建。

改变频带 (功能表 9.4.2.2)

美国 (1900)

允许您选择美国 (1900) 只根据网络可及性。

欧洲 (900/1800)

允许您选择欧洲 (900/1800) 根据网络可及性。

GPRS 设定 (功能表 9.4.2.3)

您可以选择当开机时连接或需要时两种情况。

- ▶ **开机时连接：**如果选择此菜单、则在开机时、手机会自动注册到 GPRS网络。启动 WAP 或计算机拨号应用程序、在手机和网络间建立连接、即可进行数据传输。结束该应用程序后、GPRS连接即会断开、但 GPRS 网络的注册信息将会保持。

- ▶ **需要时：**如果选择此菜单、则会在连接 WAP 服务时建立起 GPRS连接、并在断开 WAP 连接后结束。

存取点 (功能表 9.4.2.4)

允许您选择存取点从名单。

USB 连接模式 (功能表 9.4.3)

您可以选择一种模式：数据服务和存储器。(数据服务/存储器)结束使用话机内存时、单击“退出”并执行以下步骤。

注意！

- 移除数据线之前、请先单击“退出”。否则、无法保证传输数据的完整性。
1. 单击通知区域。
[拔出或弹出硬件]

设置

2. 选择 USB Mass Storage Device、单击“停止”。此时将出现以下信息：“现在您可以从系统安全移除‘USB Mass Storage Device’”。
3. 然后移除数据线。

呼叫

功能表 9.5

您可以设定和通话相关的功能表。

呼叫转接

(功能表 9.5.1)



呼叫转接服务可让您将语音来电、传真来电和数据来电转移到其它号码。要获取更多信息，请联系您的服务提供商。

- ▶ **全部语音通话：**无条件转移语音来电。
- ▶ **忙碌时：**当手机正在使用时转移语音来电。

- ▶ **无人接听时：**转移您没有应答的语音来电。
- ▶ **无网络服务或关机时：**当手机关机或不在服务区时转移语音来电。
- ▶ **所有数据来电：**无条件转移到使用 PC 连接的号码。
- ▶ **所有传真来电：**无条件转移到使用传真连接的号码。
- ▶ **全部取消：**取消全部呼叫转接。

接听模式

(功能表 9.5.2)

- ▶ **任意键：**选择此功能表，您可按任意键接听来电，但不包括  [结束]键、右软键和音量侧键。
- ▶ **仅用发送键：**如果选择此菜单，您按  [发送] 键或左软键就可以接听电话。

发送本机号码 (功能表 9.5.3)

(视网络和所申请的服务而定)

- ▶ **由网络设定：**如果您选择该功能，是否发送您的手机号码将视您两条线路的服务而定，比如线路一或者线路二。
- ▶ **开：**您可以将手机号码发送给对方，在接收方手机上 将显示您的手机号码。
- ▶ **关：**在接收方手机上不会显示您的手机号码。

来电连接等待 (功能表 9.5.4)

(视网络而定)

- ▶ **启动：**如果启用该服务，您可以接收待接来电。
- ▶ **取消：**如果关闭该服务，您将取消此服务。
- ▶ **查看状态：**显示呼叫等待的设置状态。

分钟提示 (功能表 9.5.5)

如果您选择开，可以在通话期间通过每分钟的蜂鸣声检查通话时间。

自动重拨 (功能表 9.5.6)

- ▶ **开：**当该功能设定为开启时，您的手机在连接失败后将再进行连接尝试。
- ▶ **关：**连接失败后，您的手机将不再进行连接尝试。

选择线路 (功能表 9.5.7)

只有 SIM 卡支持两个用户号码，即两条电话线路时才显示此菜单。选择您要用于拨打电话与发送短信的电话线路（线路 1 或线路 2）。无论选择哪一条线路，均可应答其中一条线路上的呼叫。

设置

发送双音多频

(功能表 9.5.8)

您可以通过开/ 关来设置是否发送双频多音。


保安

功能表 9.6

PIN 码要求

(功能表 9.6.1)

在该功能表中，您可以设定手机在开机时需要 SIM 卡的PIN 码。如果启动该功能，您将被要求输入 PIN 码。

1. 进入保密设定功能表，按  [确定] 进入设置PIN码菜单。
2. 设置“启动”或者“关闭”。

自动键盘锁

(功能表 9.6.2)

此菜单允许您设置自动键盘锁定时间。您可以按侧面的音量键两次以激活键盘。

注意

- ▶ 键盘锁状态下，您不能进行紧急呼叫。

手机锁

(功能表 9.6.3)

您可以使用此功能防止他人未经授权使用您的手机。如果您将手机锁设定为当开机时，则开机时手机将要求您输入安全密码。如果您将手机锁设定为当更换SIM卡时，则只有当您更换SIM卡时，手机才要求您输入安全密码。您也可以选择立即设定锁定手机。

呼叫限制

(功能表 9.6.4)

呼叫限制服务可以防止您的手机拨打或接听某种电话。该功能需要呼叫限制密码。您可以查看以下子功能表。

- ▶ **所有拨出电话：**您可以限制所有拨出电话。

- ▶ **拨出国际电话：**您可以限制拨出国际长途。
- ▶ **国际漫游时拨打电话：**您可以限制在国际漫游时所拨打的电话。
- ▶ **所有来电：**您可以限制所有来电。
- ▶ **国际漫游时来电：**您可以限制国外漫游时来电。
- ▶ **取消所有限制：**您可以取消所有限制服务。
- ▶ **更改密码：**您可以更改呼叫限制服务的密码。

固定的拨号号码 (功能表 9.6.5) (需SIM 卡支持)

您可以限制电话号码的拨打。这些号码由 PIN2 码保护。

更改代码 (Menu 9.6.6)

PIN 是 Personal Identification Number (个人识别号码) 的缩写。用来防止未经授权的人使用您的手机。您可以更改访问密码：**安全密码，PIN 码，PIN2 码。**

航行模式 功能表 9.7

如果您在飞机上或在阻止了无线网络的处所、此功能允许您使用不需使用无线网络的电话功能。

如果您启用了飞行模式、该图标将代替网络信号图标显示在屏幕上。

设置

省电模式

功能表 9.8

如果设置为“开”、可以在不使用手机时节省用电。

重新设置

功能表 9.9

您可以通过选择该功能表将手机恢复为预配置。您需要安全密码启动该功能。

内存状态

功能表 9.0

您可以查看内部存储状态和多媒体存储状态。您可以进入各个存储器功能表。

附件

我们为你的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。

标准电池



旅行用适配器

当您不在办公室或家中时，可以使用此充电器为电池充电。



便携式耳机

这连接到您的电话，允许耳机操作



注意

- ▶ 确保使用正规的LG 配件。
- ▶ 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- ▶ 各个地区的配件可能不同；如有任何疑问，请与我们的地区服务公司或代理查证核实。

技术数据

常规

常规 : KG290

系统 : GSM 900 / DCS 1800 / PCS 1900

净重 : 54.5g (没有电池)

环境温度

最高 : +55°C (标准), +45°C (电池充电)

最低 : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KG290

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1(2005) / EN 301 489-07 v1.3.1(2005) / EN 301 489-17 v.1.2.1(2002)
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.6.1 (2004-11)

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jun Seog, Kim / Director

04. JUN. 2007

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel: +31-36-547-8940, e-mail: seokim @ lge.com


Signature of representative

| KG290 | User Guide

- English

This document is the user guide for the LG KG290 Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.

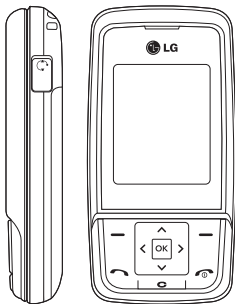


Table of Contents

For Your Safety	4	Enter address	22	Calculator	26
Guidelines for Safe and Efficient Use	5	History		Memo	
KG290 Features	10	Saved pages		To do	
Parts of the phone		Settings		Stopwatch	
On-Screen Icons	13	Network profiles		Unit converter	
		View style		World time	27
		Cache		SIM services	
		Cookies	23		
Getting Started	15	Security Certificates		Multimedia	28
Installing the SIM card and battery		Show image		MP3 player	
Charging the Battery	17	Java script		All songs	
Disconnecting the charger	18	Memory in use		My playlist	
		Information		Settings	
				Camera	
General Functions	19	Call history	24	Video camera	30
Entering text		All calls		FM radio	
Changing the text input mode		Missed calls		Voice recorder	
Using the T9 Mode		Dialled calls			
Contacts	20	Received calls		Messaging	31
		Call duration		New message	
Overview of Menu Functions	21	Call costs		Text	
		Data information		Multimedia	32
				Inbox	33
Browser	22	Tools	25	Drafts	
Home		Alarm clock		Outbox	
Bookmarks		Calendar		Sent	
				Listen voicemail	

Info messages 34

Read

Topic

Templates

Text

Multimedia 35**Settings**

Text message

Multimedia message

Voicemail number 36

Push message

Info message

My stuff 37

Images

Sounds

Videos

Others

Games & Apps

Games & Apps

Network profiles 38

External memory

Profiles 40

Activate

Personalise

Contacts 42

Search

New contact

Speed dials

Groups

Copy all

Delete all

Settings

View options 43**Information**

Settings 44

Date & Time

Languages

Display

Wallpaper

Backlight timer

Brightness

Home screen shortcut

Theme

Menu style

Standby text

Network name

Colourful dial font 45

Connectivity 45

Bluetooth

Network 46

USB connection mode 47

Call

Call divert

Answer mode 48

Send my number

Call waiting

Minute minder

Auto redial

Select line 49

Send DTMF tones

Security

PIN code request

Auto key lock

Phone lock

Call barring 50

Fixed dial number

Change codes

Flight mode

Power save 51**Reset****Memory status**

Accessories 52

Technical data 53

For Your Safety

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*

CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

Guidelines for Safe and Efficient Use

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KG290 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.

- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.752W/kg (10g) and when worn on the body is 1.01W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.

Guidelines for Safe and Efficient Use

- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Only authorised personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorised Service Centre to replace the damaged antenna.
- ▶ The label on the phone contains important information for customer support purposes. Do not remove it.

- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers. (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.
- ▶ Do not bend, scratch, or expose to static electricity.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.

Guidelines for Safe and Efficient Use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.

- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion if battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

Network service


- ▶ Some services and functions described in this user's guide are dependent on network or subscription. Therefore, all menus may not be available in your phone. Please consult your network operator for more information about your subscription.


Avoid damage to your hearing

- ▶ Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

KG290 Features

Parts of the phone

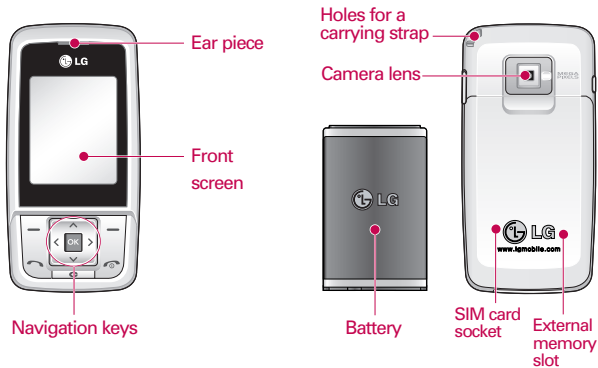

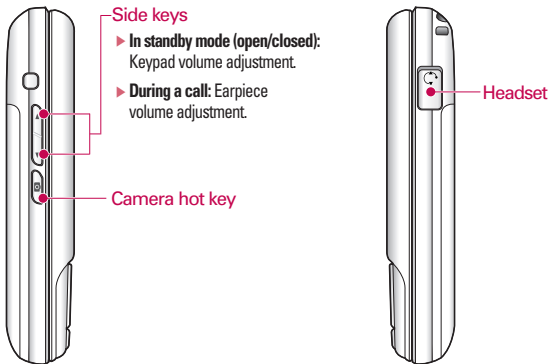

KG290 Features

Navigation keys

▶ In standby mode:

- ▶ **Briefly:** Write new Message (long press: present Messages pop-up)
- ▶ **Briefly:** List of Contacts
- ▶ **<|** **Briefly:** List of Profiles (long press: Activate/ Deactivate Vibrate mode)
- ▶ **|>** **Briefly:** List of Favourites

▶ In menu: Scroll up or down and Right or Left

Send key

- ▶ Dial a phone number and answer a call.
- ▶ **In standby mode:** Displays recently dialed, received and missed call.

Alpha numeric keys

- ▶ **In standby mode:** Input numbers to dial. Hold down:
 - ▶ **0+** for international calls.
 - ▶ **1** to dial voice mail centre.
 - ▶ **2+** to **9+** to speed dials.
- ▶ **In editing mode:** Enter numbers & characters.

Earpiece

Main screen

- ▶ **Top:** Icons showing signal strength, battery level and various other functions
- ▶ **Bottom:** Soft key indications

Left soft key/ Right soft key

- ▶ These keys perform the function Indicated in the bottom of the display.

Confirm key


- ▶ Select menu options and confirm actions.
- ▶ WAP access (long press)

End/Power Key

Clear key



Display Information

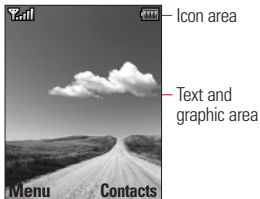






Area	Description
First line	Displays various icons.
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

The screen displays several icons. These are described below.

On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.
	You can use GPRS service.
	The alarm has been set and is on.
	The bluetooth is set to On.
	Tells you the status of the battery.
	You have received a message.
	You have received a voice message.
	Vibrate only menu in profile.

KG290 Features

Icon	Description
	Silent menu in profile.
	General menu in profile.
	Outdoor menu in profile.
	Headset menu in profile.
	All calls are diverted.

Getting Started


Installing the SIM card and battery

1. Installing the SIM card.

Your SIM card contains your phone number, service details and contacts and must be inserted into your handset.

If your SIM card is removed then your handset becomes unusable (other than emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your SIM card. Slide the SIM card into the SIM card holder.

Make sure that the SIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

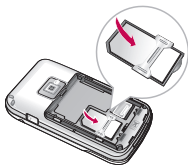

To insert the SIM card



To remove the SIM card


Note

- ▶ The metal contact of the SIM card can easily be damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

Getting Started

2. Installing the battery.

Insert the battery aligning the gold contacts on the battery with the battery terminals (gold contacts) in the battery compartment. Then push down the top of the battery until it snaps into place.

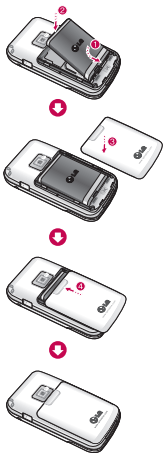


3. To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.) Press the battery release latches **1** and open the battery **2**. Then remove the battery.



Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.

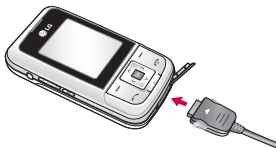

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket at the bottom of the phone until it clicks into place.
2. Connect the other end of the travel adapter to the main socket.
3. The moving bars on the battery icon will stop after charging is completed.
4. Ensure the battery is fully charged before using the phone for the first time.

CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the SIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. This may cause a fire.

Getting Started

Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



General Functions

Entering text

You can enter alphanumeric characters using the keypad. For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text. The following text input methods are available with the handset.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  until 123 mode is displayed.




Changing the text input mode



1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
2. Press  to switch between T9Abc, T9abc, T9ABC, 123, abc and ABC.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.











General Functions

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing .

To delete letters, press . Press and hold down  to erase entire words.

Note

- ▶ Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	./?!-:~'"@ 1	./?!-:~'"@ 1
	ABC2ÂÃÆÇ	abc2âãæç
	DEF3ÊËËË	def3êëëë
	GHI4ÎÏ	ghi4îï
	JKL5	jkl5
	MNO6ÑÔÕŒ	mno6ñôõœ
	PQRS7	pqrs7
	TUV8Û	tuv8û
	WXYZ9?	wxyz9?
	Space,0	Space,0

Contacts

You can store phone numbers and their corresponding names in the memory of your SIM card.

The SIM card and phone are both used in the same way in the Contacts menu.

Overview of Menu Functions

1. Browser

- 1.1 Home
- 1.2 Bookmarks
- 1.3 Enter address
- 1.4 History
- 1.5 Saved pages
- 1.6 Settings
- 1.7 Information

2. Call history

- 2.1 All calls
- 2.2 Missed calls
- 2.3 Dialed calls
- 2.4 Received calls
- 2.5 Call duration
- 2.6 Call costs
- 2.7 Data information

3. Tools

- 3.1 Alarm clock
- 3.2 Calendar
- 3.3 Calculator
- 3.4 Memo
- 3.5 To do
- 3.6 Stopwatch
- 3.7 Unit converter
- 3.8 World time
- 3.9 SIM services

4. Multimedia

- 4.1 MP3 player
- 4.2 Camera
- 4.3 Video camera
- 4.4 FM radio
- 4.5 Voice recorder






5. Messaging

- 5.1 New message
- 5.2 Inbox
- 5.3 Drafts
- 5.4 Outbox
- 5.5 Sent
- 5.6 Listen voicemail
- 5.7 Info messages
- 5.8 Templates
- 5.9 Settings

6. My stuff

- 6.1 Images
- 6.2 Sounds
- 6.3 Videos
- 6.4 Others
- 6.5 Games & Apps
- 6.6 External memory

7. Profiles

- 7.1  General
- 7.2  Silent
- 7.3  Vibrate only
- 7.4  Outdoor
- 7.5  Headset

8. Contacts

- 8.1 Search
- 8.2 New contact
- 8.3 Speed dials
- 8.4 Groups
- 8.5 Copy all
- 8.6 Delete all
- 8.7 Settings
- 8.8 Information

9. Settings

- 9.1 Date & Time
- 9.2 Languages
- 9.3 Display
- 9.4 Connectivity
- 9.5 Call
- 9.6 Security
- 9.7 Flight mode
- 9.8 Power save
- 9.9 Reset
- 9.0 Memory status

Browser

Home

Menu 1.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks

Menu 1.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

Enter address

Menu 1.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

History

Menu 1.4

This menu will show the recent browsing pages.

Saved pages

Menu 1.5

The phone can save the page on display as an offline file.

Settings

Menu 1.6

You can set the profile, cache and security related to internet service.

Network profile

(Menu 1.6.1)

A profile is the network information used to connect to the Internet.

View style

(Menu 1.6.2)

You can change the browser screen size. (normal view or fit to screen)

Cache

(Menu 1.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

Note

- ▶ A cache is a buffer memory, which is used to save data temporarily.

Cookies (Menu 1.6.4)

The information or services you have accessed are saved in the cache memory of the phone.

Security Certificates (Menu 1.6.5)

You can see the list of personal certificates that have been stored in your phone.

Show image (Menu 1.6.6)

Allows you to enable or disable the image display during browsing.

Java script (Menu 1.6.7)

This menu allows you to activate the Java Script while you use the web browser.

Memory in use (Menu 1.6.8)

You can select a memory to use.(Phone or External)

Information Menu 1.7

You can view the information of WAP browser version.

Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls Menu 2.1

You can view all lists of outgoing or incoming calls.

Missed calls Menu 2.2

This option lets you view the last 50 unanswered calls.

Dialled calls Menu 2.3

This option lets you view the last 50 outgoing calls (called or attempted).

Received calls Menu 2.4

This option lets you view the last 50 incoming calls.

Call duration Menu 2.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

Call costs Menu 2.6

Allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need to PIN2 code.

Data information Menu 2.7


You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you are online.

Alarm clock

Menu 3.1

You can set the alarm clock to go on at a specified time.

1. Select On and enter the alarm time you want.
2. Select the repeat period: Once, Mon-Fri, Mon-Sat, Sat-Sun, Sat-Wed, Sat-Thu, Sun-Thu and Everyday.
3. Select the alarm tone you want and press  [Save].









Calendar


Menu 3.2





When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see marked date in the calendar, it means that there is a schedule or memo that day.

This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description	Key	Description
 , 	Yearly	 , 	Weekly
 , 	Monthly	 < ,  >	Daily

In the scheduler mode, press left soft key  [Options] as follows:

- ▶ **View:** View all schedules and memo for the chosen day. Use  ,  to browse through the note lists.
- ▶ **New schedule:** Allows you to add new schedule for the chosen day. You can store up to 100 schedules.
- ▶ **Scheduler tone:** You can set the alarm tone of each chosen date.
- ▶ **All schedules:** View all schedules and memo for the chosen day. Use  ,  to browse through the note lists. If you set alarm for the note, the alarm icon is displayed.
- ▶ **Go to date:** You can enter any date directly.
- ▶ **Delete all:** You can delete all the schedules.

Tools

Calculator




Menu 3.3

This contains the standard functions such as +, -, x, n : Addition, Subtraction, Multiplication, and Division.


Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, sqrt.

Memo

Menu 3.4

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, press the left soft key  [New].
3. Input the memo and then press left soft key  [Options] → [Save].

Note

- ▶ If you want to change the text input mode, press the  in order.

To do

Menu 3.5

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

Stopwatch

Menu 3.6

1. Press [Start] to take time and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of lap time.
3. Press [Reset] to default condition.



Unit converter

Menu 3.7

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

World time

Menu 3.8

The World clock function provides time information on major cities worldwide. You can view the time of the desired country or city by navigating using  / . You can select a desired city as a base.

SIM services

Menu 3.9

This menu depends on SIM and the network services.

Multimedia

MP3 player

Menu 4.1

All songs

(Menu 4.1.1)

You can view all the music files stored in the phone/external memory.

My playlist

(Menu 4.1.2)

You can create your own playlists by choosing tracks from the All songs menu list.

Settings

(Menu 4.1.3)

Shuffle

(Menu 4.1.3.1)

If you want to play the music randomly, select this option.

Repeat

(Menu 4.1.3.2)

If you select One, only the selected song will be repeated. If you select All, all the songs in your playlist will be repeated. And finally if you select Off, only the selected song will play once and the further songs will not be repeated.

Equalizer

(Menu 4.1.3.3)

You can choose the equalizer among several genres of music. Jazz, Rock, Pop, etc.

Player skin

(Menu 4.1.3.4)

There are 3 kinds of player skin and you can change it as you want.


Camera


Menu 4.2

Using the camera module built in your phone, you can take pictures. Additionally, you can send photos to other people and select photos as wallpaper.



- **To take a picture**

Hold down the camera  button. The camera will be ready to use and you may want to rotate the screen into a horizontal position.

- To take clear pictures, press the camera  button while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.
- ▶ **Resolution:** Allows you to set the image size. (1280x960) (640x480) and (320x240). Multishot is only available with the (320x240), (640x480) pixel resolution.
- ▶ **Quality:** Allows you to set the image quality from Normal, Fine and Super fine.

- ▶ **Self timer:** Allows you to select the delay time (Off, 3 seconds, 5 seconds, 10 seconds). Then the phone takes a photo after the specified time.
- ▶ **View mode:** You can view Full image or Full screen.
- ▶ **Save to:** You can set the space after taking a picture. (External/Phone)
- ▶ **Multi shot:** Allows to take multishot photos successively.
- ▶ **Colour effect:** 4 settings are available. (Off/Sepia/Mono/Negative)
- ▶ **White balance:** Allows you to change the settings according to the environment. (Fluorescent/Cloudy/Incandescent/Daylight/Auto)
- ▶ **Shutter tone:** You can set the sound when taking a picture.
- ▶ **Reset settings:** Allows you to reset the settings.

Multimedia

Video camera

Menu 4.3

1. Select Video camera menu.
2. Video camera settings menu is the same with Photo camera settings, except following items:



Press the  to record the image.

- ▶ **Video mode:** Allows you to set to send a video file through MMS or General.
- ▶ **Resolution:** You may select the following resolution: 128x96, 176x144 .

FM radio

Menu 4.4

You can search radio stations and enjoy listening to the radio.

1. Tap the corresponding number key of a channel to store the currently selected radio station into.
2. After presetting the radio channels, you can listen to all the preset channels.
3. You can adjust frequency and change the radio station in the selected channel. You can search for the next station by tapping for at least two seconds.

Voice recorder

Menu 4.5

In this feature you can record over 10 voice memos, up to a maximum of 60 seconds each.

New message


Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.



Text

(Menu 5.1.1)

You can write and edit text message.

1. Enter the New messages menu by pressing the left soft key  [OK].
2. If you want to write a new text message, select Text.
3. To make text input easier, use T9 mode.
4. Press [Options] to attach the followings.

Options

- ▶ **Send to:** Sends text messages.
 1. Enter numbers of recipient.
 2. Press  key to add more recipients.
 3. You can add phone numbers in the address book.
 4. Press the  [Option] and then press send after entering numbers.

▶ Insert


- **Symbol:** You can add different symbols.
- **Image:** You can insert the images. You can also save some EMS Images here from some images of received SMS messages and use it when sending to another message.
- **Sound:** You can insert sounds that are available for short messages.
- **Text template:** You can use Text templates already set in the phone.
- **Contact:** You can add phone numbers in address book.
- **Business card:** You can add your Business card to the message.
- ▶ **Save to drafts:** Stores messages in Drafts.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **Clear text:** You can clear text while writing SMS.
- ▶ **Exit:** If you press Exit while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.

Messaging

Multimedia

(Menu 5.1.2)

You can write and edit multimedia messages, checking message size.

1. Enter the New message menu by pressing the left soft key  [OK].
2. If you want to write a new message, select Multimedia.
3. You can create a new message or choose one of the multimedia message templates already made.

Maximum available file size, that can be inserted to MMS-message, is 300 kb.

Options

- ▶ **Send to:** You can send multimedia messages to multiple recipients, set the settings like priority, delivery report etc or save to drafts to send it later.
- ▶ **Insert:** You can add Symbol, Image, Video, Sound, New slide, Text template, Contact, Business card, Others.

Note

- ▶ All messages will be automatically saved in the outbox folder, even after a sending failure.

- ▶ **Preview:** You can preview multimedia messages you have created.
- ▶ **Save:** You can save multimedia messages to drafts or as templates.
- ▶ **Edit subject:** You can edit a subject of the selected message.
- ▶ **Delete slide:** You can delete the selected slide.
- ▶ **Slide duration:** You can set a specific interval between each slides.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **New T9 word:** Select the New T9 word for inputting New word into the dictionary.
- ▶ **Exit:** You can get back to the Message menu.

Note

- ▶ If you select a picture with a large file size (200K for example) on writing multimedia message, the loading duration will take around 10 seconds. Furthermore, you can't activate any keys during the loading time. After about 10 seconds, you should be able to write the message.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

Note

- ▶ **SIM message:** SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.

Drafts

Menu 5.3

Using this menu, you can preset messages that you use most frequently. This menu shows the preset message list.

Outbox

Menu 5.4

This menu allows to view the message which is about to send or is failed sending. After sending the message successfully, the message will be moved to sent box.


Sent

Menu 5.5

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Listen voicemail

Menu 5.6

Once this menu has been selected, simply press the left soft key  [OK] to listen to voice mail.

You can also hold down the  key in standby mode to listen to voice mail.

Note

- ▶ When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

Messaging

Info messages

Menu 5.7

(Dependent to network and subscription)




Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

Read

(Menu 5.7.1)

1. When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling ,  or  [OK].
2. The message will be shown until another message is selected.

Topic

(Menu 5.7.2)

- ▶ **New topic:** You can add info service message numbers in the phone memory with its nickname.
- ▶ **View list:** You can see Info service message numbers which you have added. If you press [Options], you can edit and delete info message categories which you have added.
- ▶ **Active list:** You can select info service message numbers in the active list. if you activate an info service number, you can receive messages sent from the number.

Templates

Menu 5.8

Text

(Menu 5.8.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way**

- **Very urgent! Please contact me.**
- **I love you**

Multimedia (Menu 5.8.2)

After saving new template, you can use the following options.

Settings Menu 5.9

Text message (Menu 5.9.1)

▶ **Message types:**

Text, Voice, Fax, Natl. paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.

- ▶ **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.

- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- ▶ **Message centre number:** If you want to send the text message, you can receive the address of SMS centre through this menu.

Multimedia message (Menu 5.9.2)

- ▶ **Subject:** You can enter multimedia messages subject when this menu is on.
- ▶ **Slide duration:** Display the duration of each page when writing the message.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your multimedia messages will be stored at the message centre.

Messaging

- ▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.
- ▶ **Read report:** You can receive the report whether the receiver read the message or not.
- ▶ **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages depends on Home network.
- ▶ **Network profile:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message type**
 - **Personal:** Personal message.
 - **Advertisement:** Commercial message.
 - **Information:** Necessary information.

Voicemail number (Menu 5.9.3)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Push message (Menu 5.9.4)

You can set the option whether you will receive the message or not.

Info message (Menu 5.9.5)

▶ Receive

If you select this menu, your phone will receive Info service messages.

▶ Alert

Your phone will beep when you have received Info service message numbers.

▶ Languages

You can select the language you want by pressing OK key.

Images

Menu 6.1

Show the list of jpg, bmp, gif, wbmp, png files at Images folder in Multimedia memory.

Sounds

Menu 6.2

Show the list of MP3, AAC, IMY, WAV, AMR, MIDI files at Sounds folder in Multimedia memory.

Videos

Menu 6.3

Shows the list of 3GP, MP4 files at My media\Videos in Multimedia memory. Supported file types are 3gp files, that are encoded with MPEG4 and h.263 video-codecs and AMR audio-codec.

Others

Menu 6.4

Show the list of files in My media\Others in the Multimedia memory.

Note

► When you connect the phone with a PC via Bluetooth, you can both send and receive files to the Music and Video folders. You can copy/move any file type to the External Memory. You can only receive files from the Photos, Sounds, and Images folders. You can not able to view/play files in the Others folder. When connecting with a PC via USB cable you will only see the following folders in the internal memory: Images, Sounds, Videos, and Others. You can see all folders in the external memory.

Games & Apps

Menu 6.5

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

Games & Apps

(Menu 6.5.1)

- **Games:** In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

My stuff

After selecting a folder, press [Options] and then sub menus available to several options are displayed.

- ▶ **Open:** You can see the stored games.
- ▶ **New folder:** Create a new slide.
- ▶ **Delete all:** You can delete all.

Network profiles (Menu 6.5.2)

A profile is the network information used to connect to the Internet. There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Edit:** Use this to edit and change WAP settings for the selected profile.

External memory Menu 6.6

This menu allows you to view Images, Sounds, Videos, Documents and Others in memory card. If the external memory is not available, a pop up message "Please insert external memory" is displayed.

Note

- ▶ The SIM card must be installed in order for the phone to be recognised as a removable disk.

New Fantastic LG

The KG290 works as a mass storage device. If you connect the USB cable, you can use the phone as a Removable Disk. You can download MP3 files, photos, videos, text files etc. this gives you fast access from the PC to phone, by just connecting the USB cable.

Note

- ▶ MASS STORAGE function will only work when the phone is in idle mode.
- ▶ DO NOT remove the cable while you are downloading files. After you download the files, you need to click “Safely Remove Hardware” on the PC and then disconnect the cable.
- ▶ When you copy a file to the removable disk, you can see a message on the display “transferring”. It means MASS STORAGE is working and data is being transferred. While “transferring”, do not disconnect the cable. If you disconnect the cable while “transferring”, data will be lost or corrupted and possibly damage the phone.
- ▶ If you receive a call when using as MASS STORAGE the call will be rejected.


Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.


There are five preset profiles: General, Silent, Vibrate only, Outdoor and Headset.

Profiles can be personalised. Press the left soft key [Menu] and select Profiles using up/down navigation keys.

Activate (Menu 7X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key  [OK] or OK key.
3. Then, select Activate.

Personalise (Menu 7X.2)

Scroll to the desired profile in the Profile list. After pressing the left soft key  or the OK key, select Personalise.

The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.

- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tone:** Set the tone for slides.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- ▶ **Auto answer:** This function will be activated only when your phone is connected to the handsfree kit.
 - **Off:** The phone will not answer automatically.

- **After 5 secs:** After 5 seconds, the phone will answer automatically.
- **After 10 secs:** After 10 seconds, the phone will answer automatically.


Note

- ▶ All profiles cannot be renamed.

Contacts


Search

Menu 8.1

1. Select Search by press the left soft key  [OK].
2. Enter the name that you want to search.

Note






▶ Instant searching is available by inputting the initial letter of the name.

3. If you want to edit, delete, copy an entry, select left soft key  [Options].

New contact



Menu 8.2

You can add phonebook entry by using this function.

1. Select New contact by press left soft key  [OK].
2. Input a name.
3. Press  , then you can input a number.
4. You can set a group for the entry by pressing [ , ].
5. You can set a ringtone and a photo for the entry by press left soft key  [Options].

Speed dials

Menu 8.3

You can assign any of the keys  to  with a Name list entry. You can call directly by pressing this key.

Groups

Menu 8.4

You can list up to the members per each group. There are 7 groups you can make lists to.

Copy all

Menu 8.5

You can copy entries from SIM card memory to Phone memory and vice versa.


Delete all

Menu 8.6

You can delete all entries from SIM or Phone.

Settings

Menu 8.7

Scroll to Settings, then press the left soft key  [OK] to view the phonebook list in 3 different types:

View options

(Menu 8.7.1)

Scroll to highlight View options, and then press the left soft key [OK].

- ▶ **Name only:** Set the phonebook list with displaying only name.
- ▶ **Name and number:** Set the phonebook list with name and number.
- ▶ **With picture:** Set the phonebook list with the information of character and picture.


Information

Menu 8.8

- ▶ **Service dial number:** Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).
- ▶ **Own number (SIM dependent):** You can save and check your own number in SIM card.

- ▶ **My business card:** This option allows you to create your own business card featuring Name and an mobile phone number.

To create a new business card, press the left soft key  [New] and enter the information into the fields.

If you want to edit, delete or to send a business card, select left soft key  [options].

Settings

Date & Time

(Menu 9.1)

You can set functions relating to the date and time.

Languages

(Menu 9.2)

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Display

(Menu 9.3)

Wallpaper

(Menu 9.3.1)

You can select the background pictures in standby mode.

Backlight timer

(Menu 9.3.2)

You can set the light-up duration of the display. (Off / 10 Seconds / 20 Seconds / 30 Seconds / 60 Seconds)

Brightness

(Menu 9.3.3)

You can set the brightness of LCD:
100%, 80%, 60%, 40%

Home screen shortcut

(Menu 9.3.4)

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window. (Profiles/Messaging/ Favourites/Contacts).


Theme

(Menu 9.3.5)

You can change current theme to other one as you want.

Menu style

(Menu 9.3.6)

Your phone provides you with Grid and List menu themes. Set the menu style by scrolling and pressing the left soft key  [OK].

Standby text

(Menu 9.3.7)

If you select **On**, you can edit the text which is displayed in standby mode.

Network name

(Menu 9.3.8)

If this function is activated, network name will be displayed on LCD.

Colourful dial font (Menu 9.3.9)

If you select On, the colour of dialing font get various.

Connectivity Menu 9.4

Bluetooth (Menu 9.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:

- **Video (.3gp, mp4):** Videos folder
- **Image (.bmp, gif, jpg, png):** Images folder
- **Sound (.amr, wav, aac):** Sounds folder
- **MP3 (.mp3):** Sounds/MP3 folder

▶ Bluetooth on/off

You can activate or cancel the Bluetooth function.

▶ Device list

You can view all devices which your KG290 is already paired to. If you enter Paired devices, you access the options

▶ Bluetooth settings

- **My visibility:** This indicates whether your handset will be visible to other Bluetooth devices.
- **My name:** You can set the name of Bluetooth device. The default name is LG KG290.
- **My address:** You can view the address of your Bluetooth device.

Settings

Network

(Menu 9.4.2)

You can select a network which will be registered either automatically or manually.

Network selection

(Menu 9.4.2.1)

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.
- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other

networks. This list is set from the phone's predefined list of known networks.

Change frequency band

(Menu 9.4.2.2)

Allows you to select either PCS only or EGM/DCS.

GPRS attach

(Menu 9.4.2.3)

You can set GPRS service depending on various situations.

- ▶ **Switch on:** If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.
- ▶ **When needed:** If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or applicaion connection.

Access point (Menu 9.4.2.4)

Allow you to select the access point from the list.

USB connection mode (Menu 9.4.3)

You can choose one mode : Data service and Mass storage.


When you have finished using the phone memory, click Exit and take the following steps.

Caution!

- *Before you remove the cable, it is necessary that you click Exit. Or, the integrity of transferred data is not guaranteed.*

1. Click on the notification area.
[Unplug or Eject Hardware]
2. Select USB Mass Storage Device, click on Stop. The following message will appear: "The 'USB Mass Storage Device' device can now be safely removed from the system"
3. Then remove the cable.

Call Menu 9.5

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.




Call divert (Menu 9.5.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- ▶ **All voice calls:** Diverts voice calls unconditionally.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.
- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **All fax calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel all:** Cancels all call divert service.

Settings

Answer mode (Menu 9.5.2)

- ▶ **Slide open:** If you select this menu, you can receive a call by lifting up the slide of your phone.
- ▶ **Any key:** If you select this menu, you can receive a call by pressing any key except  [End] key and .
- ▶ **Send key only:** If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number (Menu 9.5.3) (network and subscription dependent)

- ▶ **Set by network:** If you select this, you can send your phone number depending on two line service such as line 1 or line 2.
- ▶ **On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.
- ▶ **Off:** Your phone number will not be shown.

Call waiting (Menu 9.5.4) (network dependent)

- ▶ **Activate:** If you select Activate, you can accept a waiting (receiving) call.
- ▶ **Cancel:** If you select Cancel, you cannot recognize the waiting (receiving) call.
- ▶ **View status:** Shows the status of Call waiting.

Minute minder (Menu 9.5.5)

If you select On, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu 9.5.6)

- ▶ **On:** When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.
- ▶ **Off:** Your phone will not make any attempts to redial when the original call has not connected.

Select line (SIM dependent)

(Menu 9.5.7)

This menu is shown only if the SIM supports two subscriber numbers, that is, two phone lines. Select which phone line (between Line 1 and Line 2) you want to use for making calls and sending short messages. Calls on both lines can be answered irrespective of the selected line.

Send DTMF tones

(Menu 9.5.8)

You can set touch tones on/off during an active call to control your voice mailbox or other automated phone services.

Security

Menu 9.6

PIN code request

(Menu 9.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
2. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Auto key lock

(Menu 9.6.2)

This menu allows to set the time of Auto key lock.

Note

- ▶ You cannot make emergency calls under the key lock.

Phone lock

(Menu 9.6.3)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.

Settings

If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

Call barring (Menu 9.6.4)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- ▶ **All outgoing:** The barring service for all outgoing calls.
- ▶ **Outgoing international:** The barring service for all outgoing international calls.
- ▶ **O/G international except home country:** The barring service for all international outgoing calls except home network.
- ▶ **All incoming:** The barring service for all incoming calls.
- ▶ **Incoming when abroad:** The barring service for all incoming calls when roaming.

- ▶ **Cancel all barrings:** You can cancel all barring services.
- ▶ **Change password:** You can change the password for Call Barring Service.

Fixed dial number (Menu 9.6.5) (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

Change codes (Menu 9.6.6)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes:
Security code, PIN1 code, PIN2 code.

Flight mode Menu 9.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

Power save

Menu 9.8

If you set On, you can save the power when you don't use the phone.

Reset

Menu 9.9

You can initialize all factory defaults. You will need Security code to activate this function.

Memory status

Menu 9.0

You can check free space and memory usage of each repository, Internal memory and Multimedia memory. You can go to each repository menu.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Portable Handsfree

This connects to your phone, allowing handsfree operation.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name : KG290

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (normal), +45°C (battery charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri-Band Terminal Equipment

Model Name

KG290

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1(2005) / EN 301 489-07 v1.3.1(2005) / EN 301 489-17 v.1.2.1(2002)
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.6.1 (2004-11)

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Jin Seog, Kim / Director

04. JUN. 2007

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31-36-547-8940, e-mail : seokim @ lge.com

Signature of representative

