



ENGLISH
हिंदी



User Guide
उपयोगकर्ता मार्गदर्शिका
LG-T310i



CE0168 !

P/N : MMBB0390473 (1.0)

www.lg.com

Bluetooth QD ID B016848

LG-T310i User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Contents

Guidelines for safe and efficient use	4	Adding a new contact	17
Installing the SIM card and the handset battery	10	Changing your contact settings	17
Installing the SIM Card	10	Messaging	18
Illustrations.....	10	Entering Text.....	19
Phone Components	11	Handwriting recognition	19
Using your touch screen	12	Setting up your email	19
Touch screen tips.....	12	Changing your text message settings	20
Control the touch screen	12	Changing your multimedia message settings.....	20
Your home screen	13	Social network services (SNS)	22
Your menu screen	14	Facebook (Continued SNS)..	22
Calls	15	Camera	22
Making a Call.....	15	Taking a quick photo	22
Making a call from your contacts	15	After taking a photo.....	23
Answering and rejecting a call.....	15	Using the advanced settings	23
Changing the common call setting.....	16	Video camera	24
Contacts	16	Making a quick video	24
Searching for a contact	16	After making a video	25
		Using the advanced settings .	25

Music	26	Settings	32
Transferring music onto your phone	26	Personalising your profiles ..	32
Managing files	27	Changing your phone settings	32
Games and Applications	27	Changing your connectivity settings	33
FM Radio	28	Sending and receiving your files using Bluetooth	33
Searching for stations	29	Pairing with another Bluetooth device	34
Recording the Radio	29	Wi-Fi	35
Application	30	Software update	36
Adding an event to your calendar	30	Phone Software update	36
Setting your alarm	30	Accessories	37
Using the Dictionary	30	Technical data	38
Voice recorder	30	Troubleshooting	39
Using your calculator	30		
Converting a unit	30		
PC Suite	30		
The web	31		
Accessing the web	31		
Access to Google Service ...	31		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T310i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.961 W/kg (10g) and when worn on the body is 0.974 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR

limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small

children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.


Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

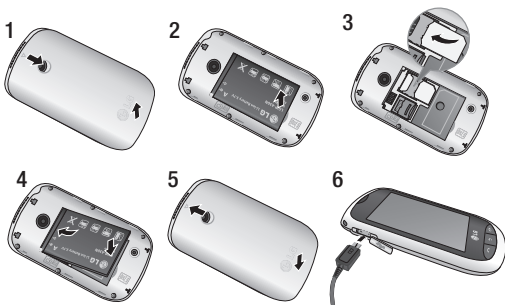

Phone Components

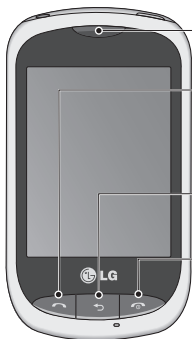

Earpiece

Call key

Dials a phone number and answers incoming calls.

Back key

Go back to a previous screen.

End key

- End or reject a call.
- Come back to idle screen from menu.



Volume keys

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate/ deactivate Silent mode.

Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.



Handsfree or Stereo earphone connector

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T310i is not in use, it will return to the lock screen.



Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Control the touch screen

The controls on the LG-T310i touch screen change dynamically depending on the task you are carrying out.

Opening Applications


To open any application, simply touch its icon.




Your home screen


You can drag and click what you need right away in all home screen types.


Active

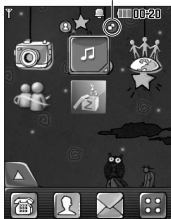

Widget home screen - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active

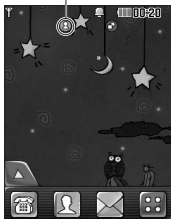

Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message, edit or remove the contact directly in this home screen.

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen. To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1

You can open Contacts, Messages, Voice call, Logs, Camera, Music, Calendar, Alarms, Oxford dictionary, Browser, Games and apps and Settings modules from this screen.



Screen 2

You can open E-mail, SNS, Google search, My stuff, Messenger, Gallery, FM radio, Voice recorder, Tasks, Profiles,

Wi-Fi and Bluetooth modules from this screen.





Screen 3


You can open World clock, Calculator, Unit converter, Stopwatch, Date finder, Memo, LG app store, News Hunt, LG Zap Box, E-Comix and STK (if supported by network) modules from this screen.



Calls


Making a Call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, press  key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
 - **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.
 - **Send my number** - Choose whether to display your number on an outgoing call.
 - **Auto-redial** - Slide the switch left for ON or right for OFF.
 - **Answer mode**
Press send key: Allows you to only answer an incoming call by pressing the  key.
Press any key: Allows you to answer an incoming call by pressing any key, except the  key.

- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Always to handsfree to be able to answer a call using a Bluetooth headset, or select Always to handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

Adding a new contact


- 1 Touch **Contacts** and touch **Add**.
 - 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
 - 3 Enter your first and last name.
 - 4 You can enter up to five different numbers per contact.
 - 5 Add an email addresses. You can enter up to two different email addresses per contact.
 - 6 Assign the contact to one or more groups.
 - 7 Touch **Save** to save the contact.
- **Display name** - Choose whether to display the first or last name of a contact first.
 - **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
 - **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
 - **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
 - **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
 - **Delete all contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to delete all your contacts.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.

TIP: LG Customer Care number is available by default in Contact list (18001809999)

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Messaging

Your LG-T310i combines SMS and MMS into one intuitive and easy-to-use menu.


Sending a message


- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.


TIP: User can Copy a selected text from any editor and can paste the same in any other editor.

Ex: Go to Message Editor, Type some text. Now Select the Text you want to copy by scrolling over the text. Now Place the cursor at a point you want to paste the text. Go to Option and Click on Paste, so that copied text will get Pasted.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T310i will convert your handwriting into your message.

Setting up your email

Touch **E-mail** from screen 2.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Note:

After creating the account, Go to Settings → Refresh → Show amount.

On this screen, 3 options will be displayed and user can select any one. By default, only 25 messages will be shown. If user wants to see more emails, then either increase the count to 50 or 100 from this menu or select Load more options from - Email Account → Inbox → Option → Load more.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment -

Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

TIP: You can send SMS to many contacts at a time. User can select/deselect all contacts for sending the message. Only 20 contacts can be marked and if user select Select all only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select Group Option and select particular group.

NOTE:

Excuse message:
During Incoming call alert, a preset Message can be send as SMS on clicking Excuse msg.

NOTE:

SMS Sorting:
Inbox Messages can be sorted with the given sorting options for an easy access of messages. (Date, Sender and Read/Unread)

Social network services (SNS)

Your LG-T310i has SNS that lets you enjoy and manage your social network.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

TIP: Facebook, MySpace and Twitter are java application based on Java technology.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.


Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Album > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write a SN message.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Send - Touch to send the photo as a **Message, Email** or via **Bluetooth**.

Set as - Touch to set as Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shutdown image.

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.



Touch to delete the image.




Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory.

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds,** or **10 seconds.** This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Image quality - Choose between **Super fine, Fine,** and **Normal.** The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.


Grid screen - Choose between **Off, Simple cross,** or **Trisection.**




Reset settings - Restore all camera default settings.

Video camera

Making a quick video


To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.


-  Touch to play the video.



The following options are available.

Touch .


Send - Touch to send the video as a **Message**, **Email** or via **Bluetooth**.

Rename - Touch to rename the video.

-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

-  Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**.

The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and Other content. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

NOTE:

Secret box

You can Move the multimedia files to Secret box to avoid unauthorized use. You will need a security code to access the data.

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

NOTE: Date and Time should be set to current, matching to the server date and time settings, to login to Instant Messenger.

News Hunt - News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

LG Zap Box - It is an interactive application where user can download MP3 / Image files from the connected site, also playlist can be created.

Messenger - It is an chatting application through which user can get connected with friends.

LG app Store - This application launches the LG Application store.

E-Comix - E-Comix is a digital e-comics reader that allow you to read your favorite comics under one application. Application comes up with some preloaded comics & you can also download more comics by visiting the E-Comix store within application.

How it work: Tab on E-Comix application & select the comic of your own choice. Flick on the text you want to read, it shall open in the bigger window for you.



FM Radio


Your LG-T310i has Wireless FM radio feature so you can tune into your favourite stations to listen to while on the move.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the radio. It is recommended that you insert headphones into the handsfree connector when listening to the radio to ensure good radio reception.

To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Recording the Radio

- 1 Select Record during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press Stop key. If recording is done, the recorded contents will be saved as mp3 file in My stuff.

Application

Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Using the Dictionary

Touch **Oxford dictionary** from Screen 1 which contains an alphabetical list of words with information about them.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

NOTE: Install PC Suite using CD provided and follow the Installation Guide.

WARNING: Do not disconnect your phone during the transfer.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

Access to Google Service

Touch **Google Search** to launch google search application.

TIP: LG-T310i has default bookmarks to launch below Social Networking Sites.
Orkut: <http://m.orkut.com>
Picasa: <http://picasaweb.google.com>
Flickr: <http://m.flickr.com>

Settings

Personalising your profiles

You can personalise each profile setting.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

NOTE:

Timed Profile

User can set a required profile automatically for the pre define Time.

For Ex: If user wants handset profile to be silent from 2:00 PM~3:00 PM, then set the time and select profile as silent for the time frame.

Changing your phone settings

Use the freedom of adapting the LG-T310i to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

NOTE:

Anti Theft Mobile Tracker - When the handset is stolen, handset sends the SMS to the pre-defined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone IMEI, Owners name & Phone number of the person who is using that handset.

To activate the ATMT feature,configure the ATMT settings with Owner Name, Alternate numbers(3) and set ATMT 'ON'. Default ATMT code is "000000."

TIP: You can set the application lock to avoid unauthorized use of Contact, Message, Email, Call history, My stuff, Calendar, Alarm, Memo, Voice recorder, Tasks and Browser. You will need a security code to access the data.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:
Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T310i will not automatically search for other **Bluetooth** devices. If not, your LG-T310i will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** then select **Options**  and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T310i and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T310i will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T310i supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software update

Phone Software update


LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support. This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre. As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Stereo headset



Battery



Data cable and CD



NOTE


- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity		LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T310i	
Trade Name	LG	
		CE 0168
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1		
EN 300 328 v1.7.1		
EN 60950-1:2006		
EN 50360:2001 / EN62209-1:2006		
EN 301 511 v9.0.2		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom		
Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name	Issued Date
	Doo Haeng Lee / Director	15, Sep. 2010
LG Electronics Inc. – EU Representative Veluwezoom 15, 1327 AE Almere, The Netherlands		
	Signature of representative	

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Troubleshooting

Message	Possible Causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid charge limit reached	Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Battery defective	Replace battery.	

Message	Possible Causes	Possible Corrective Measures
Touch function doesn't work or is abnormal	Touchpad calibration fault	Perform the touchpad calibration via phone setting menu.
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.
No sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

LG-T310i उपयोगकर्ता मार्गदर्शिका - हिंदी

इस मैनुअल की कुछ सामग्री फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर आपके फोन से अलग हो सकती है।



सामग्री

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ.....	4
सिम कार्ड और हैंडसेट बैटरी स्थापित करना	10
सिम कार्ड स्थापित करना	10
उदाहरण.....	10
फोन घटक	11
टच स्क्रीन का उपयोग करना.....	12
टच स्क्रीन टिप्स.....	12
टच स्क्रीन को नियंत्रित करें.....	12
आपकी होम स्क्रीन.....	13
आपकी मेनू स्क्रीन.....	14
कॉल्स.....	16
कॉल करना.....	16
अपने संपर्कों से कॉल करना	16
काल को स्वीकार और अस्वीकार करना	16
सामान्य कॉल सेटिंग में परिवर्तन.	17
संपर्क.....	18
संपर्क खोजना.....	18
नया संपर्क जोड़ना	18
अपनी संपर्क सेटिंग्स को बदलना	18
संदेश भेजना	19
पाठ दर्ज करना.....	20
अपनी ईमेल सेट करना.....	20
अपनी पाठ संदेश सेटिंग्स परिवर्तित करना	21
अपनी मल्टीमीडिया संदेश सेटिंग्स परिवर्तित करना.....	21
सामाजिक नेटवर्क सेवाएँ (SNS). Facebook (जारी SNS).....	23
कैमरा	24
तुरंत फोटो लेना.....	24
फोटो लेने के बाद	24
उन्नत सेटिंग्स का उपयोग करना .	24
वीडियो कैमरा.....	25
तुरंत वीडियो बनाना	25
वीडियो बनाने के बाद.....	26
उन्नत सेटिंग्स का उपयोग करना.	26
संगीत.....	27
अपने फोन पर संगीत स्थानांतरित करना	28
फाइलें प्रबंधित करना.....	28
खेल और अनुप्रयोग	29
FM रेडियो	30
स्टेशनों की खोज	30

अनुप्रयोग	31	Wi-Fi.....	36
अपने कैलेंडर पर इवेंट जोड़ना ..	31	सॉफ्टवेयर नवीनीकरण.....	37
अपना अलार्म सेट करना	31	फोन सॉफ्टवेयर नवीनीकरण.....	37
शब्दकोश का उपयोग करना	31	सहायक उपकरण	38
वॉइस रिकॉर्डर	31	तकनीकी डेटा.....	39
अपने कैलकुलेटर का उपयोग करना	31		
इकाई कनवर्ट करना	31		
PC सुइट	31		
वेब.....	32		
वेब तक पहुँच प्राप्त करना	32		
Google सर्च तक पहुँचना	32		
सेटिंग्स	33		
अपने प्रोफाइल को व्यक्तिगत रूप देना.....	33		
अपने फोन की सेटिंग्स बदलना ..	33		
अपनी कनेक्टिविटी सेटिंग्स बदलना	34		
किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना.....	35		

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

कृपया इन सरल दिशानिर्देशों को पढ़ें। इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है।

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंग एक्सपोजर और स्पेसिफिक अब्सॉर्प्शन रेट (SAR) की जानकारी

यह मोबाइल फोन LG-T310i रेडियो तरंगों के एक्सपोजर के लिए लागू सुरक्षा आवश्यकताओं के साथ अनुपालन करने के लिए डिजाइन किया गया है। यह आवश्यकताएँ उन वैज्ञानिक मार्गदर्शिकाओं के आधार पर बनाई गई हैं, जो कि आयु और स्वास्थ्य पर ध्यान दिए बिना सभी उपयोगकर्ताओं की सुरक्षा को सुनिश्चित करने के लिए डिजाइन किए गए सुरक्षा उपायों को शामिल करता है।

- रेडियो तरंग एक्सपोजर दिशानिर्देश, स्पेसिफिक अब्सॉर्प्शन रेट या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। SAR के परीक्षण, उपयोग किए गए सभी फ्रीक्वेंसी बैंड्स में उच्चतम

प्रमाणित पॉवर स्तर पर संप्रेषणा करने वाले फोन के साथ मानव विधियों के उपयोग से किए जाते हैं।

- वैसे तो कई LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबद्ध दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- गैर-आयनाइजिंग रेडियेशन प्रोटेक्शन (ICNIRP) पर अंतर्राष्ट्रीय कमीशन द्वारा अनुशंसित SAR सीमा, 10g टिश्यू पर 2 W/kg की औसत से है।
- DASY4 द्वारा परिक्षित, कान के पास उपयोग के लिए इस मॉडल फोन का उच्चतम SAR मान 0.961 W/kg (10ग्रा) है और जब शरीर पर पहना जाए तो 0.974 W/kg (10ग्रा) है।
- जिन देशों/क्षेत्रों ने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित SAR सीमा को स्वीकार किया है, वहाँ के निवासियों के लिए SAR डेटा जानकारी 1g टिश्यू पर औसतन 1.6 W/kg है।

उत्पाद की देखभाल और रखरखाव

⚠ चेतावनी: इस विशेष मॉडल के लिए स्वीकृत बैटरियों, चार्जर्स और सहायक उपकरण का ही उपयोग करें। किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकती हैं और यह खतरनाक हो सकता है।

- इस यूनिट को न खोलें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें।
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- इसे गिराएँ नहीं।
- यूनिट को मैकेनिकल कंपन या झटकों से बचाएँ।
- जिस किसी भी क्षेत्र में विशेष नियम के तहत आवश्यक हो, वहाँ

फोन बंद कर दें। उदाहरण के लिए, अपने फोन का उपयोग अस्पतालों में न करें, क्योंकि यह संवेदनशील मेडिकल उपकरणों को प्रभावित कर सकता है।

- चार्ज होते समय फोन को गीले हाथों से न पकड़ें। इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है।
- हैंडसेट को ज्वलनशील पदार्थों के नजदीक चार्ज न करें, क्योंकि हैंडसेट गर्म हो सकता है और आग के खतरे का कारण बन सकता है।
- यूनिट को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें (बैंजीन, थिनर, या एल्कोहल जैसे विलायकों का उपयोग न करें)।
- फोन को हल्के साज-सामान पर रख कर चार्ज न करें।

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

- फोन को अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए.
- इस यूनिट को अत्यधिक धुएँ या धूल में न रखें.
- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है.
- स्क्रीन को नुकीली वस्तु से न ठकठकाएँ, क्योंकि इससे फोन को नुकसान हो सकता है.
- फोन को तरल पदार्थ या नमी में न रखें.
- ईयरफोन जैसे सहायक उपकरण का उपयोग सावधानी से करें. एंटीना को अनावश्यक रूप से न छुएँ.
- मोबाइल फोन द्वारा कुछ श्रवण सुविधाएँ बाधित हो सकती हैं.
- छोटा-सा व्यवधान भी टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकता है.

सड़क सुरक्षा

- जिन क्षेत्रों में आप वाहन चलाते हैं, वहाँ मोबाइल फोन के उपयोग से संबंधित कानून और नियमों की जानकारी ले लें.
- वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें.
 - वाहन चलाने पर पूरा ध्यान दें.
 - यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें.
 - यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ.
 - RF ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है.
 - जब आपका वाहन एयर बैग से सुसज्जित हो, तो इसमें स्थापित या

कार्यकुशल फोन कार्यवाही

इलेक्ट्रॉनिक डिवाइसेज

- बिना अनुमति के अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास न करें. फोन को पेसमेकर के पास अर्थात् अपने शर्ट ऊपरी जेब में न रखें.

पोर्टेबल वायरलेस उपकरण से बाध
।। न डालें। इससे एयर बैग विफल
हो सकता है या अनुपयुक्त कार्य के
चलते गंभीर चोट पहुँचा सकता है।

- यदि आप यात्रा के समय संगीत
सुन रहे हैं, तो कृपया सुनिश्चित
करें कि वॉल्यूम उचित स्तर पर रहे,
जिससे आप अपने चारों ओर के
वातावरण के प्रति सचेत रहें। विशेष
रूप से सड़कों के पास होने पर यह
महत्वपूर्ण होता है।

अपने सुनने की क्षति से बचें

यदि आप लंबे समय तक तेज ध्वनि
सुनते हैं तो आपकी सुनने की क्षमता
को क्षति पहुँच सकती है। इसलिए हम
सलाह देते हैं कि आप कान के पास
हैंडसेट को चालू या बंद न करें। हम
इसकी भी सलाह देते हैं कि संगीत
और कॉल वॉल्यूम उचित स्तर पर
सेट हों।

नोट :

ईयरफोन के अधिक ध्वनि दबाव
से सुनने की क्षमता को क्षति पहुँच
सकती है।

विस्फोटन क्षेत्र

फोन का उपयोग ऐसे स्थान पर न
करें जहाँ विस्फोट हो रहे हों। प्रतिबंध
ों पर ध्यान दें, और नियमों-विनियमों
का पालन करें।

संभावित रूप से विस्फोट वाले वातावरण

- ईंधन भरने के स्थान पर फोन का
उपयोग न करें।
- ईंधन या रसायनों के पास उपयोग
न करें।
- मोबाइल फोन और सहायक उपकरण
ों को ज्वलनशील गैस, तरल या
विस्फोटकों के साथ अपने वाहन में
न ले जाएँ या न ही रखें।

विमान में

वायरलेस डिवाइस से एयरक्रॉफ्ट में
व्यवधान उत्पन्न हो सकता है।

- किसी भी एयरक्रॉफ्ट में चढ़ते समय
अपना मोबाइल फोन बंद कर दें।
- क्रू की अनुमति के बिना विमानतल
पर इसका उपयोग न करें।

सुरक्षित और प्रभावी उपयोग के लिए मार्गदर्शिकाएँ

बच्चे

फोन को छोटे बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें। इसमें छोटे-छोटे भाग होते हैं जो यदि अलग हो जाएँ तो गले में फँस सकते हैं।

आपातकालीन कॉल्स

आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स के साथ उपलब्ध हो सकती हैं। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है। अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।

- केवल LG बैटरियों और चार्जर्स का उपयोग करें। LG चार्जर्स, बैटरी की आयु अधिकतम सीमा तक बढ़ाने के लिए डिजाइन किए गए हैं।
- बैटरी पैक को अलग-अलग न करें या उसे शार्ट सर्किट से बचाएँ।
- बैटरी पैक के धातु वाले हिस्सों को साफ रखें।
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें। बैटरी पैक को सैकड़ों बार रीचार्ज किया जा सकता है, जब तक कि इसे बदलने की आवश्यकता न हो।
- यदि बैटरी को लंबे समय से प्रयोग नहीं किया गया है, तो इसकी उपयोगिता को अधिकतम बढ़ाने के लिए इसे रीचार्ज करें।
- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है।
- यदि बैटरी को गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा है।

- उपयोग की गई बैटरियों का निपटान, निर्माता के निर्देशों के अनुसार ही करें। जब भी संभव हो इसे रीसायकल करें। इसे घरेलू कचरे की तरह न फेंकें।
- यदि आपको बैटरी बदलने की आवश्यकता हो, तो सहायता के लिए इसे निकटतम अधिकृत LG Electronics सर्विस पॉइंट या डीलर के पास ले जाएं।
- फोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर की अनावश्यक ऊर्जा खपत को बचाया जा सके।
- वास्तविक बैटरी जीवन नेटवर्क कॉन्फिगरेशन, उत्पाद सेटिंग्स, उपयोग पद्धति, बैटरी और वातावरण की परिस्थितियों पर निर्भर करेगा।

सिम कार्ड और हैंडसेट बैटरी स्थापित करना

सिम कार्ड स्थापित करना

जब आप किसी सेल्युलर नेटवर्क की सदस्यता लेते हैं, तो आपको आपकी सदस्यता विवरणों से लोड किया गया एक प्लग-इन सिम कार्ड प्रदान किया जाता है, जैसे आपका पिन, कोई उपलब्ध वैकल्पिक सेवाएँ और अनेक अन्य.

महत्वपूर्ण!


प्लग-इन सिम कार्ड और उसके संपर्क, खरोंचने या मुड़ने से आसानी से खराब हो सकते हैं, इसलिए कार्ड को हैंडल करते समय, डालते और निकालते समय सावधानी रखें.

सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें.


उदाहरण

बैटरी निकालने से पहले डिवाइस हमेशा बंद करें और चार्जर डिस्कनेक्ट कर दें.

- 1 बैटरी कवर निकालें.
- 2 बैटरी बाहर निकालें.
- 3 सिम कार्ड डालें.
- 4 बैटरी पैक डालें.
- 5 बैक कवर संलग्न करें.
- 6 बैटरी चार्ज करें.

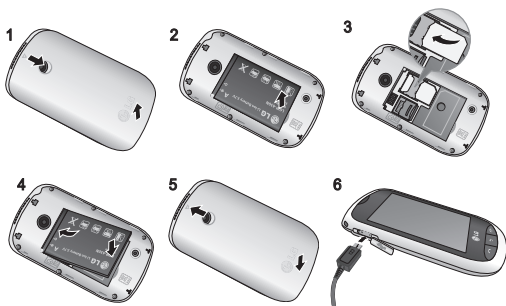

फोन घटक

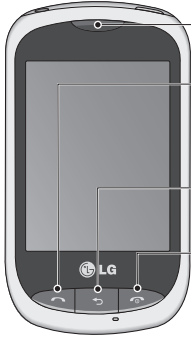

ईयरपीस

कॉल कुंजी

इससे फोन नंबर डायल किए जाते हैं और आवक कॉल के उत्तर दिए जाते हैं.

साफ कुंजी

किसी पिछली स्क्रीन पर वापस जाने के लिए.

समाप्त कुंजी

- काल समाप्त या रद्द करने के लिए.
- मेनु से अइडल स्क्रीन में वापस जाने के लिए.




वॉल्यूम कुंजियाँ

- जब स्क्रीन होम स्क्रीन पर हो: रिंग टोन और टच टोन वॉल्यूम.
- कॉल के दौरान: इयरपीस वॉल्यूम.
- नीचे वॉल्यूम कुंजी: शांत मोड को सक्रिय/निष्क्रिय करने के लिए दबाकर रखें.

पावर/लॉक कुंजी

- स्क्रीन को चालू/बंद करने के लिए कम दबाएँ.
- पावर चालू/बंद करने के लिए देर तक दबाएँ.



हैंड्सफ्री या स्टीरियो ईयरफोन कनेक्टर

टच स्क्रीन का उपयोग करना

टच स्क्रीन टिप्स

- किसी आइटम का चयन करने के लिए, आइकन के मध्य को टच करें.
- ज्यादा जोर से न दबाएँ. टचस्क्रीन लाइट, फर्म टच को पिक अप करने के लिए अधिक संवेदनशील है.
- आपको जिस विकल्प की आवश्यकता है, उसे टच करने के लिए अपनी अंगुली के टिप का उपयोग करें. सावधान रहें कि अन्य कुंजियाँ टच न हो.
- जब भी आपका LG-T310i उपयोग में न हो, तो यह लॉक स्क्रीन पर वापस चला जाएगा.

टच स्क्रीन को नियंत्रित करें

आप जो कार्य कर रहे हैं, उस पर निर्भर करते हुए LG-T310i टच स्क्रीन पर नियंत्रण डायनेमिक रूप से बदलते हैं.


अनुप्रयोग खोलना

कोई अनुप्रयोग खोलने के लिए, केवल इसके आइकन को टच करें.



स्कॉलिंग


स्कॉल करने के लिए किनारे से किनारे तक खींचें. कुछ स्क्रीनों पर, जैसे कॉल इतिहास सूची, आप ऊपर या नीचे स्कॉल कर सकते हैं.

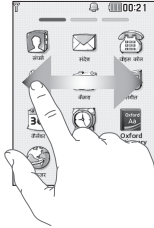


आपकी होम स्क्रीन

आपको सभी स्क्रीन प्रकारों में अभी जिसकी आवश्यकता है, आप उसे खींच सकते हैं या उस पर क्लिक कर सकते हैं.


सक्रिय

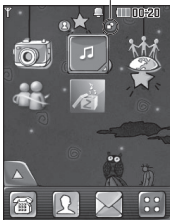

विजेट होम स्क्रीन – जब आप स्क्रीन के  को स्क्रीन के बाईं ओर पर टच करते हैं, तो मोबाइल विजेट पैनल प्रकट होता है. जब आप विजेट को खींचकर पंजीकृत करते हैं, तो उस जगह पर विजेट बन जाता है, जहाँ इसे छोड़ा गया था.

सक्रिय



स्पीड डायल होम स्क्रीन – जब आप  को टच करते हैं, तो स्पीड डायल सूची प्रकट होती है. आप इस होम स्क्रीन में संदेश भेज सकते हैं, कॉल कर सकते हैं, या सीधे संपर्क को संपादित कर सकते हैं.

आपकी मेनू स्क्रीन

आपको सभी मेनू स्क्रीन में जिसकी आवश्यकता है, उसे स्क्रॉल करने की लिए आप किनारे से किनारे तक खींचें। मेनू स्क्रीन के बीच स्वेप करने के लिए, प्रदर्शन पर बाएँ से दाएँ या दाएँ से बाएँ केवल तीव्रता से वाइप करें।

स्क्रीन 1 – आप इस स्क्रीन से संपर्क, संदेश, वॉइस कॉल, लॉग्स, कैमरा, संगीत, कैलेंडर, अलार्म, Oxford dictionary, ब्राउज़र, खेल एवं अनुप्रयोग,सेटिंग्स भाग खोल सकते हैं।



स्क्रीन 2 – आप इस स्क्रीन से ई-मेल, SNS, Google खोज, मेरी चीजें, संदेश वाहक, गैलेरी, FM रेडियो, वॉइस रिकार्डर, कार्य,प्रोफाइल्स, WI-FI, ब्लूटूथ भाग खोल सकते हैं।



स्क्रीन 3 – आप इस स्क्रीन से विश्व घड़ी, कैलकुलेटर, इकाई परिवर्तक, स्टापवॉच, तिथि खोजक, मेमो, LG app store, News Hunt, LG Zap Box, E-Comix भाग खोल सकते हैं।



अक्षर व अंक प्रविष्ट करने की तालिका

कुंजी	अक्षर / अंक (कुन्जियों को इतनी बार दबाएँ)													
	1 बार	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार
1	ँ	ं	ः	्	०	1								
2	ा	ि	ी	ु	ू	ृ	अ	आ	इ	ई	उ	ऊ	ऋ	ॠ
3	े	ै	ँ	ो	ौ	ॉ	ए	ऐ	एँ	ओ	औ	औँ	३	
4	क	ख	ग	घ	ङ	4	च	छ	ज					
5	च	छ	ज	झ	ञ	5	झ							
6	ट	ठ	ड	ढ	ण	6	ड	ढ						
7	त	थ	द	ध	न	7	न							
8	प	फ	ब	भ	म	8	फ							
9	य	र	ल	व	श	ष	स	ह	०	७	७	र	७	ब
0	—	0												

हिन्दी शब्द लिखने के उदाहरण

1) किताब

- क : - बटन 4 को 1 बार दबाएँ.
 ि : - बटन 2 को 2 बार दबाएँ.
 त : - बटन 7 को 1 बार दबाएँ.
 ा : - बटन 2 को 1 बार दबाएँ.
 ब : - बटन 8 को 3 बार दबाएँ.

3) ज्ञानी



- ज : - बटन 5 को 3 बार दबाएँ.
 ् : - बटन 1 को 4 बार दबाएँ.
 अ : - बटन 5 को 5 बार दबाएँ.
 ा : - बटन 2 को 1 बार दबाएँ.
 न : - बटन 7 को 5 बार दबाएँ.
 ी : - बटन 2 को 3 बार दबाएँ.

2) क्षत्रिय

- क : - बटन 4 को 1 बार दबाएँ.
 ् : - बटन 1 को 4 बार दबाएँ.
 ष : - बटन 9 को 6 बार दबाएँ.
 त : - बटन 7 को 1 बार दबाएँ.
 ् : - बटन 1 को 4 बार दबाएँ.
 र : - बटन 9 को 2 बार दबाएँ.
 ि : - बटन 2 को 2 बार दबाएँ.
 य : - बटन 9 को 1 बार दबाएँ.

कॉल्स


कॉल करना

- 1 कीपैड को खोलने के लिए  पर टच करें।
- 2 कीपैड का उपयोग करके संख्या लिखें।
- 3 कॉल आरंभ करने के लिए  पर टच करें।


युक्ति! अंतर्राष्ट्रीय कॉल करने हेतु + दर्ज करने के लिए 0+ दबाए रखें।

गलती से कॉल आरंभ होने से बचने के लिए टचस्क्रीन को लॉक करने हेतु पावर कुंजी दबाएं।


अपने संपर्कों से कॉल करना

- 1 हमारे स्क्रीन से संपर्कों को खालेने के लिए  पर टच करें।
- 2 स्क्रीन के शीर्ष पर नाम फील्ड बॉक्स थपथपाएं और आप जिस संपर्क को कॉल करना चाहते हैं, कीपैड का उपयोग करते हुए

उसके नाम के पहले कुछ अक्षर दर्ज करें।

- 3 फिल्टर की गई सूची से, आप जिस संपर्क को कॉल करना चाहते हैं उसके आगे कॉल आइकन को टच करें। यदि उस संपर्क के लिए एक से अधिक नंबर हुए, तो कॉल डिफॉल्ट नंबर का उपयोग करेगी।
- 4 या आप संपर्क के नाम को टच कर सकते हैं और यदि उस संपर्क के लिए उपयोग करने हेतु एक से अधिक नंबर हैं, तो आप नंबर का चयन कर सकते हैं। डिफॉल्ट नंबर पर कॉल आरंभ करने के लिए भी आप  टच कर सकते हैं।

काल को स्वीकार और अस्वीकार करना

जब आपका फोन रिंग करता है तब आप  कुंजी दबाकर काल का उत्तर दे सकते हैं। रिंग को मौन करने के लिए स्क्रीन पर "मौन" टैब को टच करें, यह उपयोगी है अगर आप मीटिंग से पहले प्रोफाइल को मौन करना भूल गए हैं। काल

निष्क्रिय करने के लिए स्क्रीन पर “अस्वीकार” टैब को टच करें।

सामान्य कॉल सेटिंग में परिवर्तन

- 1 सेटिंग्स मेनू में कॉल सेटिंग टच करें.
 - 2 सामान्य सेटिंग्स पर स्कॉल और टच करें.
- **कॉल छोड़ें** – स्विच को बाएँ खिसकाकर चालू करें. आप, सभी कॉल, विशिष्ट संपर्क या समूह या अप्रज्वित नंबर की कॉल्स (अर्थात् जो आपकी संपर्क सूची में नहीं हैं) को चुनने के लिए, अस्वीकार करें सूची टच कर सकते हैं.
 - **मेरा नंबर भेजें** – चुनें कि आउटगोइंग कॉल पर आपका नंबर प्रदर्शित करें या नहीं.
 - **आटो-रीडायल** – स्विच को चालू करने के लिए बाएँ या बंद करने के लिए दाएँ खिसकाएँ.
 - **उत्तर मोड**
भेजें कुंजी दबाएँ:  कुंजी, आपको केवल इनकमिंग कॉल का उत्तर देने की अनुमति देता है।
कोई कुंजी दबाएँ:  कुंजी के अलावा कोई भी कुंजी दबाकर, आपको इनकमिंग कॉल का उत्तर देने की अनुमति देता है।
 - **मिनट माइंडर** – कॉल के दौरान प्रत्येक मिनट एक टोन सुनने के लिए स्विच को चालू करने के लिए बाएँ खिसकाएँ.
 - **BT उत्तर मोड** – ब्लूटूथ हैंडसेट के उपयोग से कॉल का उत्तर देने के योग्य होने के लिए हैंडसपरी का चयन करें या कॉल का उत्तर देने हेतु हैंडसेट की दबाने के लिए हैंडसेट का चयन करें.
 - **नया नंबर सहेजें** – नया नंबर सहेजने के लिए चालू या बंद का चयन करें.

संपर्क

संपर्क खोजना

- 1 संपर्कों को टच करें.
- 2 खोजें टच करें.
- 3 आप संपर्कों की एक सूची देखते हैं. नाम फील्ड में संपर्क नाम का प्रथम अक्षर लिखने पर मेनू को सूची के उस वर्णमाला क्षेत्र पर ले जाएगा.


नया संपर्क जोड़ना

- 1 संपर्कों को टच करें और जोड़ें को टच करें.
- 2 आपकी आंतरिक मेमरी या SIM पर संपर्क सहेजें, चुनें.
- 3 अपना प्रथम और अंतिम नाम दर्ज करें.
- 4 एक संपर्क के साथ आप पांच नंबरों तक दर्ज कर सकते हैं.
- 5 ईमेल पता जोड़ें. आप प्रति संपर्क दो भिन्न ईमेल पते दर्ज कर सकते हैं.
- 6 संपर्क को एक या अधिक समूहों को असाइन करें.


- 7 संपर्क सहेजने के लिए रक्षित टच करें.

अपनी संपर्क सेटिंग्स को बदलना

आप अपनी संपर्क सेटिंग्स को अनुकूल बना सकते हैं ताकि आपके संपर्क आपकी अपनी प्राथमिकताओं को सूट करें.

विकल्प कुंजी टच करें  और सेटिंग्स टच करें.

- **नाम दर्शाएँ** – पहले संपर्क का प्रथम या अंतिम नाम प्रदर्शित करें या नहीं, चुनें.
- **कॉपी** – अपने सिम से अपने हैंडसेट में या इसके उलट संपर्कों को कॉपी करें. आप एक समय में एक संपर्क या सभी एक बार में कॉपी कर सकते हैं.
- **स्थानांतरित करें** – यह कॉपी की तरह कार्य करता है, लेकिन केवल संपर्क नए स्थान पर संग्रहीत किया जाता है. इसलिए, संपर्क को एकबार सिम से आंतरिक मेमोरी पर ले जाए जाने पर उसे सिम मेमोरी से हटा दिया जाएगा.

- **ब्लूटूथ द्वारा सभी संपर्क भेजें** – ब्लूटूथ द्वारा सभी संपर्कों को अन्य हैंडसेट पर भेजता है.
 - **सर्म्क का बैकअप लें / सर्म्क की पूर्वावस्था को प्राप्त करें** – संपर्कों का डेटा अन्य संग्रहण पर सहेजें या पुनर्स्थापित करें.
 - **सभी संपर्क हटाएँ** – अपने सभी संपर्कों को हटाएँ. यदि आप सुनिश्चित हैं कि आप अपने सभी संपर्कों को हटाना चाहते हैं तो हाँ टच करें.
- 1 मेनू में संदेशों को टच करें और टच करें संदेश लिखें, नया संदेश लिखना शुरू करने के लिए, संदेश लिखें.
 - 2 चित्र, वीडियो, ध्वनि, टेम्पलेट और इत्यादि जोड़ने के लिए, सम्मिलित टच करें.
 - 3 प्राप्तकर्ताओं को दर्ज करने के लिए स्क्रीन के ऊपरी हिस्से में, का पर टच करें. संपर्क का चयन करने के लिए नंबर दर्ज करें या  टच करें. आप एकाधिक संपर्क भी जोड़ सकते हैं.
 - 4 तैयार होने पर भेजें टच करें.

युक्ति: LG कस्टमर केयर का नंबर पहले से ही संपर्क लिस्ट में उपलब्ध है (18001809999).

संदेश भेजना

आपका LG-T310i, SMS और MMS को एक सहज और आसानी से उपयोग किए जाने वाले मेनू में संयुक्त करता है.

संदेश भेजना


⚠ चेतावनी: यदि चित्र, वीडियो या ध्वनि SMS पर जोड़े जाते हैं, तो वे स्वचालित रूप से MMS पर कनवर्ट किए जाएँगे और आपको उसी के अनुसार शुल्क देना होगा.



युक्ति!

उपयोगकर्ता संपादक से चयनित पाठ की प्रतिलिपि बनाकर और किसी अन्य संपादक में उसको पेस्ट कर सकते हैं।


उदाहरण स्वरूप : संदेश संपादक में जाकर कुछ पाठ टाइप करें। पाठ के ऊपर स्कॉल करके उस पाठ का चयन करें, जिसका आप प्रतिलिपि बनाना चाहते हैं। आप अब पाठ जहाँ पेस्ट करना चाहते हैं, उस बिंदु पर कर्सर रखें और विकल्प में जाकर पेस्ट चुनें, ताकि प्रतिलिपि किए गए पाठ पेस्ट हो सकें।

पाठ दर्ज करना

आप  पर टैपिंग और निवेशण विधि द्वारा अपनी निवेशण विधि चुन सकते हैं।

टच करें  T9 मोड चालू करने के लिए। यह आइकन केवल तभी दिखाया जाता है, जब आप कीपैड को निवेशण विधि के रूप में चुनते हैं। टच करें  नंबरर्स, प्रतीकों और पाथ इनपुट के बीच बदलने के लिए। SHIFT कुंजी का उपयोग करें, कैपिटल या लोअरकेस इनपुट के बीच बदलने के लिए।

अपनी ईमेल सेट करना

अनुप्रयोग स्क्रीन में ई-मेल टच करें। यदि ईमेल खाता सेट नहीं है, तो ईमेल सेटअप विजार्ड प्रारंभ करें और समाप्त करें। चयन करने के द्वारा आप सेटिंग्स की जाँच और संपादन कर सकते  हैं।

आप स्वचालित रूप से आपके द्वारा खाता बनाए जाने पर भरी गई अतिरिक्त सेटिंग्स भी जाँच सकते हैं।

नोट :

अकाउन्ट बनाने के बाद सेटिंग्स
-> पुनश्चर्या -> मात्रा दिखाएँ
पर जाएँ।

इस स्क्रीन पर 3 विकल्प दिखेंगे
और उपयोगकर्ता कोई भी एक का
चयन कर सकते हैं। अपने आप
सिर्फ 25 मैसेज दिखेंगे। अगर
आप ज्यादा ईमेल देखना चाहते
हैं तो इसी मेनु से आप संख्या 50
या 100 कर सकते हैं या अधिक
लोड करें विकल्प का चयन करें
- ईमेल अकाउन्ट -> इन्वाक्स ->
विकल्प -> अधिक लोड करें।

अपनी पाठ संदेश सेटिंग्स परिवर्तित करना

संदेशों को टच करें और सेटिंग्स टच
करें. चयन करें पाठ्य संदेश.

संदेश केंद्र – अपने संदेश केंद्र के
विवरण दर्ज करें.

डेलिवरी रिपोर्ट – यह पुष्टिकरण
प्राप्त करने के लिए स्विच को बाएँ
खिसकाएँ कि आपके संदेश डेलिवर
हो गए हैं.

मान्यता अवधि – चुनें, संदेश केंद्र
पर आपके संदेश कितने समय तक
संग्रहीत रहते हैं.

संदेश प्रकार – अपने पाठ्य को
पाठ्य, वाइस, .फैक्स, X-400 या
ई-मेल में कनवर्ट करें.

वर्ण एन्कोडिंग – चुनें, आपके वर्ण
कैसे एनकोडेड किए जाते हैं. इससे
आपके संदेशों का आकार और फलतः
डेटा शुल्क प्रभावित होता है.

लंबे पाठ्य को ऐसे भेजें – बड़े संदेशों
को एकाधिक SMS या MMS के रूप
में भेजना चुनें.

अपनी मल्टीमीडिया संदेश सेटिंग्स परिवर्तित करना

संदेशों को टच करें और, सेटिंग्स
और मल्टीमीडिया संदेश टच करें.

पुनर्प्राप्ति मोड – धरेलू तंत्र या रोमिंग
तंत्र के बीच चुनें. यदि आप चुनते
हैं मैन्युअल, तो आप केवल MMS
की सूचनाएँ प्राप्त करेंगे और आप
फिर निर्णय कर सकते हैं उन्हें पूरे में
डाउनलोड करें या नहीं.

डेलिवरी रिपोर्ट – अनुरोध और/या डेलिवरी रिपोर्ट की अनुमति दें, चुनें.

प्राप्ति पढ़ना – अनुरोध और/या उत्तर की अनुमति दें, चुनें.

प्राथमिकता – अपने MMS का प्राथमिकता स्तर चुनें.

मान्यता अवधि – चुनें कि आपका संदेश कब तक संदेश केंद्र में संग्रह किया जाना है.

स्लाइड की अवधि – आपकी स्लाइड्स स्क्रीन पर कब तक प्रकट रहेंगी, चुनें.

असमर्थित संलग्नक – असमर्थित संलग्नक प्रतिबंधित है या नहीं, चुनें.

वितरण समय – संदेश वितरण किए जाने से पहले कब तक प्रतीक्षा करें, चुनें.

MMS केंद्र – सूची से एक चुनें या एक नया संदेश केंद्र जोड़ें.

युक्ति!

उपयोगकर्ता एक समय में कई संपर्कों को एसएमएस भेज सकते हैं। उपयोगकर्ता संपर्कों का चयन/अचयन कर के संदेश भेज सकते हैं। केवल 20 संपर्क चयन कर सकते हैं, अगर उपयोगकर्ता “सभी चुनें” चयन करते हैं तो केवल पहले 20 संपर्क चिन्हित होंगे। किसी विशेष समूह को एसएमएस भेजने के लिये भेजे विकल्प से ‘समूह’ विकल्प चुनें और ठीक दबाएँ।

नोट :

इनबॉक्स के संदेश तक आसानी से पहुंचने के लिए, दिए गए सॉर्टिंग विकल्पों (से क्रमबद्ध करें) के साथ सॉर्ट किया जा सकता है (दिनांक, प्रेषक, पढ़ा गया/न पढ़ा गया)।

नोट :

खेद संदेश: इनकमिंग काल के दौरान खेद संदेश पर क्लिक करके एक पूर्वनिश्चित मैसेज SMS के रूप में भेजा जा सकता है।

युक्ति!

Facebook, Myspace और Twitter जावा अनुप्रयोग है जो जावा तकनीक पर आधारित है।

सामाजिक नेटवर्क सेवाएँ (SNS)

आपके LG-T310i में SNS है, जो आपको आपके सामाजिक नेटवर्क का आनंद लेने और उसे प्रबंधित करने देता है।

नोट: SNS सुविधा एक डेटा प्रधान अनुप्रयोग है. ऑनलाइन सेवाएँ कनेक्ट करने और उपयोग करते समय, अतिरिक्त शुल्क लग सकता है. अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जाँचें.

Facebook (जारी SNS)

होम: लॉग इन करें और आप अपने मित्र की अद्यतन स्थिति देखेंगे. नई स्थिति के बारे में अपनी टिप्पणी इनपुट करें या अन्य की जाँच करें.


प्रोफाइल: आप वॉल > स्थिति अपडेट का चयन कर सकते हैं और वर्तमान स्थिति लिखें. अपनी जानकारी विवरण देखें और एल्बम टच कर फोटो अपलोड करें > फोटो अपलोड करें.

मित्र: खोज टैप का चयन कर facebook में अपने मित्र खोजें.

संदेश: आप इनबॉक्स/भेजें फोल्डर देख सकते हैं और एक SN संदेश लिख सकते हैं.

कैमरा

तुरंत फोटो लेना

- 1 कैमरा मेनू टच करें.
- 2 जब कैमरे का फोकस आपकी वस्तु पर हो, तो फोटो लेने के लिए स्क्रीन के दाएँ-केंद्र पर  को टच करें.

युक्ति: कैमरा मोड या वीडियो मोड पर स्विच करने के लिए, व्यूफाइंडर के दाएँ-केंद्र में कैमरा या वीडियो आइकन को ऊपर/नीचे खिसकाएँ.

फोटो लेने के बाद

आपके द्वारा कैचर किया गया फोटो स्क्रीन पर प्रकट होगा.

निम्न विकल्प उपलब्ध हैं.

टच .


भेजें – फोटो को संदेश, ईमेल के रूप में या ब्लूटूथ द्वारा भेजने के लिए टच करें.


ऐसे सेट करें – स्क्रीन छवि


(मुखपृष्ठ स्क्रीन वॉलपेपर, लॉकस्क्रीन वॉलपेपर, संपर्क छवि, आवक कॉल छवि, जावक कॉल छवि, स्टार्ट-अप छवि और शट डाउन छवि) सेट करने के लिए टच करें.

नाम बदलें – फोटो का नाम बदलने के लिए टच करें.


संपादित करें – फोटो संपादित करने के लिए टच करें.

 छवि हटाने के लिए टच करें.

 तुरंत एक अन्य फोटो लेने के लिए टच करें.

 आपकी सहेजी गई फोटो की गैलेरी देखने के लिए टच करें.

उन्नत सेटिंग्स का उपयोग करना

व्यूफाइंडर से, सभी उन्नत सेटिंग्स विकल्प खोलने के लिए  टच करें.

विकल्प का चयन करने के बाद, ठीक बटन टच करें.

आकार – मेमोरी बचाने के लिए फोटो का आकार बदलें.

व्हाइट बैलेंस – ऑटो, उद्दीप्त, ६
पू, प्रतिदीप्त और मेघाच्छादित के
बीच चुनें.

रंग प्रभाव – अपनी नई फोटो के लिए
एक रंग टोन चुनें.

शॉट जारी – व्यूफाइंडर में वस्तु को
उपयुक्त स्थिति में रखें, यदि सामान्य
फोटो लेनी है, तो फिर कैप्चर बटन
दबाएँ. कैमरा तुरंत अनुक्रम में शॉट
लेगा.

सेल्फ-टाइमर – सेल्फ-टाइमर, शटर
दबाने के बाद आपको विलंब सेट
करने की अनुमति देता है. 3 सेकंड, 5
सेकंड या 10 सेकंड में बंद का चयन
करें. यदि आप फोटो में शामिल होना
चाहते हैं, तो यह उपयुक्त है.

नाइट मोड – उपयोगकर्ता के लिए
अधेरे स्थानों में उपयोगी है.

छवि गुणवत्ता – अत्युत्तम, अच्छा और
सामान्य के बीच चुनें. गुणवत्ता जितनी
अच्छी होगी, फोटो उतनी स्पष्ट होगी.
हालाँकि, परिणामस्वरूप फाइल का
आकार बढ़ जाएगा, जिसका अर्थ है
कि आप मेमोरी में कम फोटो संग्रहित
कर पाएंगे.

संग्रह चुनें – अपनी फोटोज हैंडसेट
मेमोरी या बाह्य मेमोरी में सहेजने के
लिए चुनें.

छुपे आईकॉन्स – कैमरा सेटिंग
आईकॉन्स को मैन्युअली या स्वचालित
रूप से छुपाना चुनें.

कैप्चर की गई छवि दिखाएँ – आपने
चित्र सही तरीके से लिया है, जांचने
के लिए चालू करें.

शटर ध्वनि – शटर की तीन ध्वनियों
में से कोई एक चुनें.

ग्रिड स्क्रीन – बंद, सिम्पल क्रॉस या
तीन खंड के बीच चुनें.






सेटिंग्स रीसेट करें – सभी डिफॉल्ट
कैमरा सेटिंग्स को पुनर्स्थापित करें.

वीडियो कैमरा

तुरंत वीडियो बनाना


कैमरा मोड या वीडियो मोड पर स्विच
करने के लिए, व्यूफाइंडर के दाएं
केंद्र में कैमरा या वीडियो आइकन को
ऊपर/नीचे स्लाइड करें.

- 1 फोन को क्षैतिज रूप से पकड़
कर, लेंस को वीडियो के विषय
पर केंद्रित करें.

- 2 लाल बिंदु दबाएं .
- 3 व्यूफाइंडर के नीचे टाइमर के साथ वीडियो की लंबाई दिखाते हुए  Rec दिखाई देगा.
- 4 वीडियो को विराम देने के लिए,  का चयन करते हुए  टच करें और दुबारा शुरू करें.
- 5 खत्म करने के लिए स्क्रीन पर टच  करें.

वीडियो बनाने के बाद

स्क्रीन पर आपके कैप्चर किए गए वीडियो को प्रस्तुत करने वाली एक स्थिर छवि प्रकट होगी. स्क्रीन के नीचे बाईं और दाईं ओर आइकन्स के साथ वीडियो का नाम चलता है.


 वीडियो चलाने के लिए टच करें.


निम्न विकल्प उपलब्ध हैं.


टच कर .

भेजें – वीडियो को संदेश, ईमेल के रूप में या ब्लूटूथ के माध्यम से भेजने के लिए टच करें.


नाम बदलें – वीडियो का नाम बदलने के लिए टच करें.

 आपने अभी जो वीडियो बनाया है, उसे हटाने के लिए टच करें और हाँ टच कर पुष्टि करें. व्यूफाइंडर पुनः प्रकट होगा.

 तुरंत एक अन्य वीडियो शूट करने के लिए टच करें. आपका वर्तमान वीडियो सहेजा जाएगा.

 सहेजे गए वीडियोज और छवियों की गैलरी देखने के लिए टच करें.

उन्नत सेटिंग्स का उपयोग करना

व्यूफाइंडर से, सभी उन्नत सेटिंग्स विकल्प खोलने के लिए  टच करें. आप व्हील को स्क्रॉल करते हुए वीडियो कैमरा सेटिंग्स बदल सकते हैं. विकल्प का चयन करने के बाद, ठीक बटन टच करें.

रंग प्रभाव – अपने नए व्यू के लिए उपयोग करने हेतु रंग टोन चुनें.

व्हाइट बैलेंस – व्हाइट बैलेंस सुनिश्चित करता है कि आपके वीडियो में कोई भी व्हाइट क्षेत्र वास्तविक है. अपने कैमरे का व्हाइट बैलेंस सही रूप से समायोजित करने के

लिए सक्षम करने हेतु, आपको प्रकाश परिस्थितियों को निर्धारित करने की आवश्यकता हो सकती है. ऑटो, उद्दीप्त, धूप, प्रतिदीप्त और मेघाच्छादित के बीच चुनें.

गुणवत्ता – अत्युत्तम, अच्छा और सामान्य के बीच चुनें. गुणवत्ता जितनी बढ़िया होगी, वीडियो उतना स्पष्ट होगा लेकिन फाइल का आकार बढ़ जाएगा. परिणामस्वरूप, आप फोन की मेमोरी में कम वीडियो संग्रहीत करने के योग्य होंगे.

अवधि – अपने वीडियो के लिए अवधि सीमा सेट करें. MMS संदेश के रूप में भेजने के लिए अधिकतम आकार सीमा हेतु सामान्य और MMS के बीच चुनें.

संग्रहण चुनें – चुनें कि आपके वीडियो हैंडसेट मेमोरी में सहेजने हैं या बाह्य मेमोरी में.

ऑडियो रिकॉर्डिंग – बिना ध्वनि के वीडियो रिकॉर्ड करने के लिए म्यूट चुनें.

छुपे आइकॉन्स – चयन करें कि कैमरा मेनू में आइकॉन्स को स्वचालित रूप से या मैन्युअली छुपाना है.

सेटिंग्स रीसेट करें – वीडियो कैमरा की सभी सेटिंग्स को रीसेट करें.

संगीत

म्यूजिक प्लेयर तक पहुंच के लिए, टच करें संगीत. यहां से आप अनेक फोल्डर्स तक पहुंच सकते हैं:

हाल ही में चलाया गया – आपके द्वारा हाल ही में चलाए गए गाने चलाता है.

सभी ट्रैक्स – इसमें पहले से लोड डिफॉल्ट संगीत को छोड़ कर वे सभी गाने होते हैं, जो आपके फोन में हैं.

कलाकार – संगीत संग्रह में कलाकार के अनुसार ब्राउज करता है.

एल्बम्स – आपके संगीत संग्रह को एल्बम के अनुसार ब्राउज करता है.

विद्या – आपके संगीत संग्रह में विद्या के अनुसार ब्राउज करता है.

प्लेलिस्ट – इसमें आपके द्वारा बनाई गई सभी प्लेलिस्ट्स होती हैं.

ट्रैक्स शफल करें – आपके ट्रैक्स को आकस्मिक क्रम में चलाता है.

अपने फोन पर संगीत स्थानांतरित करना

संगीत को अपने फोन पर स्थानांतरित करने का सबसे आसान तरीका ब्लूटूथ या डेटा केबल के माध्यम से करना है। ब्लूटूथ का उपयोग करते हुए संगीत स्थानांतरित करने के लिए:

- 1 सुनिश्चित करें कि दोनों डिवाइसेज पर ब्लूटूथ स्विच ऑन हो और वे एक-दूसरे से कनेक्ट हों।
- 2 अन्य डिवाइस पर संगीत फाइल का चयन करें और ब्लूटूथ के माध्यम से भेजने का चयन करें।
- 3 जब फाइल भेजी जाती है, तो आपको इसे अपने फोन पर हां टच करते हुए स्वीकार करना होगा।
- 4 फाइल संगीत > सभी ट्रैक्स में प्रकट होनी चाहिए।

फाइलें प्रबंधित करना

आप अपनी फोन मेमोरी में मल्टीमीडिया फाइलों को संग्रहित कर सकते हैं, ताकि आप अपने सभी चित्रों, ध्वनियों, वीडियोज और गेम्स तक आसानी से पहुंचें। आप अपनी फाइलों को मेमोरी कार्ड में भी सहेज सकते हैं। मेमोरी कार्ड का उपयोग करना, आपको, आपके फोन की मेमोरी में स्पेस मुक्त करने की अनुमति देता है।

मेरी चीजें टच कर, आप उन फोल्डर्स की सूची खोल सकते हैं, जिनमें आपकी सभी मल्टीमीडिया फाइलें संग्रहित होती हैं।

नोट :

गुप्त बॉक्स :

अनाधिकृत इस्तेमाल से बचाने के लिए आप मल्टीमीडिया फाइल को गुप्त बाक्स में डाल सकते हो। डाटा को इस्तेमाल करने के लिए आपको गुप्त कोड चाहिए होगा।

खेल और अनुप्रयोग

आप आनंद लेने के लिए, अपने फोन पर नए खेल और अनुप्रयोग डाउनलोड कर सकते हैं।

नोट :

Instant messenger में लाग इन करने के लिए वर्तमान दिनांक और समय को सरवर के दिनांक और समय जैसा सेट करें।

LG Zap Box : यह इंटरैक्टिव अनुप्रयोग है, जिसमें उपयोगकर्ता कनेक्ट की गई साइट से MP3 / छवि फाइलें डाउनलोड कर सकता है, प्लेलिस्ट भी बनाई जा सकती हैं।


News Hunt : राह में होने पर भी क्षेत्रीय भाषाओं में न्यूज़पेपर्स देखने और पढ़ने हेतु सक्षम किए जाने के लिए डिज़ाइन किया गया एक विशिष्ट मोबाइल अनुप्रयोग हैं ।

भैसॅंजर : यह एक चैटिंग अनुप्रयोग है जिससे आप अपने दोस्तों से कनेक्ट हो सकते हैं।

LG app Store : यह अनुप्रयोग LG अनुप्रयोग स्टोर को चालू करता है।

ई-कॉमिक्स - ईकॉमिक्स एक ऐसा डिजिटल रीडर है जो आपको आपको आपकी पसंदिता कॉमिक्स को पढ़ने का मौका देता है। यह कुछ प्री-लोडेड कॉमिक्स के साथ आता है तथा आप कॉमिक्स स्टोर में जाकर अपने पसंद के कॉमिक्स को डाउनलोड भी कर सकते हैं।

विवरण: ई-कॉमिक्स पर जाएँ और अपने पसंद के कॉमिक्स को पढ़ने के लिए चुनें। विषय वस्तु को बड़े स्क्रीन में पढ़ने के लिए विलक करें ।

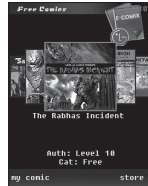

FM रेडियो

आपके LG-T310i में आपको वायरलेस FM रेडियो की सुविधा दी गई है जिससे आप अपने पसंदिता स्टेशन से धुनो को सुन सकते हैं


स्टेशनों की खोज

आप अपने लिये स्वयं या स्वतः खोज से रेडियो स्टेशनों को अपने फोन में ढुन कर सकते हैं ।

उसके बाद उन विशेष चैनल संख्या को सहेज लिया जाएगा, तो आपको उन विशेष चैनलो को पुनः ढूँन करने की जरूरत नहीं पड़ेगी ।

नोट: अगर आप एक ऐसे क्षेत्र में हैं जहाँ आपको रेडियो सुनने में कठिनाई हो रही है तो यह सलाह दी जाती है कि आप हैंडस्फी कनेक्टर में हैंडसेट डालके सुनिए ताकी आपको रेडियो सुनने में कोई कठिनाई ना हो ।

आटो धुन करने के लिये :

- 1 स्क्रोल और टच करें FM रेडियो, और टच कर .

- 2 स्वतः स्कैन पर टच करें । एक पुष्टिकरण संदेश प्रकट होता है फिर उसके बाद स्टेशन स्वतः चैनल्स को खेज कर फोन में सेट हो जाता है ।

नोट: आप ◀ और ▶ का उपयोग करके जो स्क्रीन के मध्य में उपलब्ध है स्वयं भी स्टेशन को धुन कर सकते हैं । अगर आप ◀ और ▶ को बहुत ढेर तक ढबा कर रखेंगे तो स्टेशन स्वतः मिल जाएगा ।

रेडियो को रिकार्ड करना :

- 1 रेडियो सुनते समय रिकार्ड को चुनें ।
- 2 रिकार्डिंग का समय आपके फोन में दिखाई देगा । अगर आप रिकार्डिंग को रोकना चाहते हैं, तो स्टाप बटन को ढबाएँ । रिकार्डिंग पूरा होने पर रिकार्डड अंश मेरी चीजें में MP3 फाइल के रूप में सुरक्षित हो जाएगा ।

अनुप्रयोग

अपने कैलेंडर पर इवेंट जोड़ना

- 1 कैलेंडर टच करें.
- 2 आप उस दिनांक का चयन करें, जिस पर आप इवेंट जोड़ना चाहेंगे.
- 3 जोड़ें टच करें ।

अपना अलार्म सेट करना

- 1 अलार्मस टच करें.
- 2 टच करें जोड़ें, फिर आप इस मेनू में अपना अलार्म सेट और सहेज सकते हैं.

शब्दकोश का उपयोग करना

Oxford Dictionary को स्क्रीन 1 से चुनें जो शब्दों की वर्णमाला के बारे में जानकारी देता है ।

वॉइस रिकॉर्डर

वॉइस मेमोज या अन्य ऑडियो फाइलों को रिकॉर्ड करने के लिए अपना वॉइस रिकॉर्डर उपयोग करें.

अपने कैलकुलेटर का उपयोग करना

- 1 मल्टीमीडिया स्क्रीन में कैलकुलेटर टच करें.
- 2 संख्याएँ दर्ज करने के लिए संख्या कुजियों को टच करें.

इकाई कनवर्ट करना

- 1 अनुप्रयोग स्क्रीन में इकाई परिवर्तक टच करें.
- 2 चुनें कि आप मुद्रा, क्षेत्रफल, लंबाई, भार, तापमान, वॉल्यूम या वेग कनवर्ट करना चाहते हैं.
- 3 फिर इकाई का चयन करें और वह मान दर्ज करें, जिससे आप कनवर्ट करना चाहेंगे.

PC सुइट

आप अपने PC को अपने फोन के साथ सिंक्रनाइज कर सकते हैं. यह आपके सभी महत्वपूर्ण विवरण और दिनांक का मिलन सुनिश्चित करेगा और एक बैकअप के रूप में भी कार्य करेगा ताकि आप निश्चित रह सकें

नोट: प्रदान किए गए CD उपयोग करके PC सुइट इंस्टाल करें एवं इंस्टालेशन गाइड का पालन करें

चेतावनी : आप अपने फोन को स्तानंतरित के दौरान डिस्कनेक्ट ना करें

वेब

ब्राउजर सीधे आपके फोन पर तेज, गेम्स, संगीत, समाचार, खेल, मनोरंजन और अधिक की पूर्ण रंग दुनिया देता है. चाहें आप कहीं भी हों और कुछ भी कर रहे हों.

वेब तक पहुँच प्राप्त करना

- 1 ब्राउजर टच करें.
- 2 सीधे ब्राउजर के होम पृष्ठ पर जाने के लिए, होम का चयन करें. वैकल्पिक रूप से, चयन करें पता दर्ज करें और कनेक्ट करने के बाद URL में लिखें.

नोट: इन सेवाओं से कनेक्ट करने और सामग्री डाउनलोड करने पर आपको अतिरिक्त शुल्क लगेगा. अपने नेटवर्क प्रदाता से डेटा शुल्क जाँचें.

Google सर्विस तक पहुचना

Google खोज अनुप्रयोग खेलने के लिए "Google खोज" पर टच करें।

युक्ति!

नीचे दी गइ Social Networking Sites खोलने के लिए पहले से ही बुकमार्क हैं :

Orkut: <http://m.orkut.com>

Picasa: <http://picasaweb.google.com>

Flickr: <http://m.flickr.com>

सेटिंग्स

अपने प्रोफाइल को व्यक्तिगत रूप देना

आप सेटिंग्स मेनू के उपयोग से, प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं।

- 1 प्रोफाइल्स टच करें।
- 2 वह प्रोफाइल चुनें, जिसे आप संपादित करना चाहते हैं।
- 3 आप फिर सूची में उपलब्ध सभी ध्वनियाँ और अलर्ट विकल्प बदल सकते हैं, साथ ही अपनी रिंगटोन और वॉल्यूम, संदेश टोन सेटिंग्स और अधिक।


नोट :

टाइम्ड प्रोफाइल : उपयोगकर्ता आवश्यक प्रोफाइल को पूर्व निर्धारित समय पर स्वचालित रूप से सेट कर सकते हैं।

उदाहरण स्वरूप : यदि उपभोगकर्ता हैंडसेट प्रोफाइल को 2:00~3:00 बजे तक मौन चाहता है तो समय और उस समय सीमा के लिए प्रोफाइल को मौन के रूप में चुनें।

अपने फोन की सेटिंग्स बदलना

अपनी स्वयं की प्राथमिकताओं के लिए, LG-T310i रूपान्तरित करने की स्वतंत्रता का उपयोग करें।

होम स्क्रीन से,  का चयन करें, फिर सेटिंग्स का चयन करें और डिवाइस सेटिंग्स पर स्कॉल करें।

युक्ति!

चोरी रोधक ट्रैकर :

जब हैंडसेट चोरी होता है तब हैंडसेट के असली मालिक द्वारा कॉन्फिगर किए गए पूर्व निर्धारित नंबरों पर एस एम एस भेजता है।

एसएमएस चोरी हुए फोन के IMEI नंबर, वर्तमान स्थान (वर्तमान स्थान सेल प्रसारण संदेश के अनुसार लिया जाएगा) और उस व्यक्ति का फोन नंबर जो हैंडसेट इस्तेमाल कर रहा है, के बारे में जानकारी देता है।

चोरी रोधक ट्रैकर सुविधा को सक्रिय करने के लिए चोरी रोधक ट्रैकर के सेटिंग में नाम, प्राथमिक और माध्यमिक नंबरों के साथ कॉन्फिगर करें और चोरी रोधक ट्रैकर को चालू पर सेट करें। डिफॉल्ट चोरी रोधक ट्रैकर कोड "000000" है।

युक्ति!

अनुप्रयोग लॉक:

आप अनुप्रयोग लॉक को संपर्क, मैसेज, ई. मेल, काल इतिहास, मेरी चीजें, कैलेंडर, अलार्म, मेमो, वॉइस रिकॉर्डर, कार्य और ब्राउज़र के अनाधिकृत उपयोग से बचने के लिए निर्धारित कर सकते हैं। डेटा का उपयोग करने के लिए आपको सुरक्षा कोड की आवश्यकता होगी।

अपनी कनेक्टिविटी सेटिंग्स बदलना

आपकी कनेक्टिविटी सेटिंग्स, आपके नेटवर्क ऑपरेटर के द्वारा पहले ही सेट कर दी गई है, ताकि आप अपने नए फोन का आनंद तुरंत ले सकें। कोई सेटिंग्स बदलने के लिए, इस मैनू का उपयोग करें:

संयोजकता टच करें

ब्लूटूथ का उपयोग करके अपनी फाइलें भेजना और प्राप्त करना फाइल भेजने के लिए:


- 1 उस फाइल को खोलें जिसे आप भेजना चाहते हैं, विशिष्ट रूप से यह कोई फोटो, वीडियो या संगीत फाइल होगी.
- 2 भेजें चुनें. ब्लूटूथ चुनें.
- 3 यदि आपने पहले से ब्लूटूथ डिवाइस युग्मित किया है, तो आपका LG-T310i स्वचालित रूप से अन्य ब्लूटूथ डिवाइसेज नहीं खोजेगा. यदि नहीं, तो आपका LG-T310i सीमा के अंदर अन्य ब्लूटूथ सक्षम किए डिवाइसेज खोजेगा.
- 4 वह डिवाइस चुनें, जिस पर आप फाइल भेजना चाहते हैं.
- 5 आपकी फाइल भेजी जाएगी.

फाइल प्राप्त करने के लिए:

- 1 फाइलें प्राप्त करने के लिए, आपका ब्लूटूथ चालू और दृश्यमान, दोनों होना आवश्यक है. अदि क जानकारी के लिए नीचे देखें अपनी ब्लूटूथ सेटिंग्स बदलना.

- 2 आपको प्रेषक की ओर से फाइल स्वीकार करने के लिए एक संदेश द्वारा संकेत मिलेगा. फाइल प्राप्त करने के लिए हाँ टच करें.
- 3 आप देखेंगे, फाइल कहीं सहेजी गई है. छवि फाइलों के लिए, आप फाइल देखने या वॉलपेपर के रूप में उपयोग करना चुन सकते हैं. सामान्यतः फाइलें उचित फोल्डर में मेरी चीजें पर सहेजी जाएंगी.

ब्लूटूथ सेटिंग्स बदलना :

ब्लूटूथ टच करें फिर विकल्प  और सेटिंग्स टच करें।

किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना

अपना LG-T310i और अन्य डिवाइस युग्मित कर, आप पासकोड रक्षित कनेक्शन सेट कर सकते हैं.

- 1 जाँचे कि आपका ब्लूटूथ चालू और दृश्यमान है. सेटिंग्स मेनू में आप अपनी दृश्यता बदल सकते हैं.
- 2 खोजें टच करें.

- 3 आपका LG-T310i डिवाइसेज खोजेगा। जब खोज पूर्ण हो जाती है, ताजा करें स्क्रीन पर प्रकट होगा।
- 4 वह डिवाइस चुनें, जिसके साथ आप युग्म करना चाहते हैं और पासकोड दर्ज करें, फिर टच करें ठीक।
- 5 आपका फोन फिर अन्य डिवाइस से कनेक्ट होगा, जिस पर आपको वही पासकोड दर्ज करने की आवश्यकता होगी।
- 6 अब आपका पासकोड रक्षित ब्लूटूथ कनेक्शन तैयार है।

से ई-मेल और इंटरनेट ब्राउजिंग की अनुमती देता है ।

नोट: LG-T310i WEP और WPA/WPA2-PSK सुरक्षा का समर्थन करता है। यदि आपके Wi-Fi सेवा प्रदाता या नेटवर्क व्यवस्थापक नेटवर्क सुरक्षा के लिए एन्क्रिपशन सेट करे, तो आप पॉप अप विंडो में कुंजी को भरें । अगर एन्क्रिपशन सेट नहीं है, तो पॉप अप विंडो दिखाई नहीं देगा । आप अपने Wi-Fi सेवा प्रदाता या नेटवर्क व्यवस्थापक से कुंजी प्राप्त कर सकते हैं ।

Wi-Fi

वायरलेस प्रबंधक आपको अनुमती देता है कि आप इंटरनेट कनेक्शन का प्रबंधन अपने फोन के Wi-Fi (वायरलेस लैन) में उपयोग कर सकते हैं । यह फोन स्थानीय वायरलेस नेटवर्क से कनेक्ट करने के लिए या इंटरनेट को बिना वायर के उपयोग करने की अनुमती देता है । Wi-Fi तेज है और इसकी सीमा ब्लूटूथ वायरलेस तकनीक से भी ज्यादा है । यह तेजी

सॉफ्टवेयर नवीनीकरण

फोन सॉफ्टवेयर नवीनीकरण

LG माबोइल फोन सॉफ्टवेयर

नवीनीकरण प्राग्रम

इस प्रोग्राम को स्थापित और उपयोग करने की अधिक जानकारी के लिए, कृपया : <http://update.lgmobile.com>. और <http://www.lg.com/common/index.jsp> . पर जाएँ → देश चयन करें . यह सुविधा आपको हमारे सेवा केंद्र पर जाए बिना आपके सॉफ्टवेयर को इंटरनेट पर जल्दी और आसानी से नवीनतम संस्करण में नवीनीकृत करने की अनुमति देता है । जैसे की मोबाइल फोन में फर्मवेयर अपडेट होता रहता है उस वक्त उपयोगकर्ता का पूरा ध्यान रहना चाहिए , कृपया आगे बढ़ने से पहले सभी निर्देशों और नोट को अच्छी तरह जाँच लें. कृपया ध्यान रखें कि नवीनीकरण के दौरान युएसबी या डाटा केबल को निकालने से आपके फोन का गंभीर रूप से नुकसान हो सकता है

सहायक उपकरण

आपके मोबाइल फोन के लिए विभिन्न सहायक उपकरण हैं। आप इन विकल्पों का अपनी व्यक्तिगत संचार आवश्यकताओं के अनुसार चयन कर सकते हैं।

चार्जर



स्टीरियो
हेडसेट



बैटरी



डेटा केबल
और सीडी



नोट

- हमेशा प्रामाणिक LG सहायक उपकरणों का उपयोग करें।
- ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- सहायक उपकरण विभिन्न क्षेत्रों में भिन्न हो सकते हैं।

तकनीकी डेटा

परिवेशी तापमान

अधिकतम: +55°C (डिस्चार्जिंग) +45°C (चार्जिंग)

न्यूनतम: -10°C

Declaration of Conformity LG Electronics

Supplier Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T310i

Trade Name

LG

CE 0168 

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1

EN 300 328 v1.7.1

EN 60950-1:2006

EN 50360:2001 / EN62209-1:2006

EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

15. Sep. 2010

LG Electronics Inc. - EU Representative
Wuwezoon 15, 1327 AE Almere, The Netherlands


Signature of representative

CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
2nd Floor, 9B, DLF Cyber City, Phase-III,
Gurgaon - 122002

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,
Phase-III, Gurgaon - 122002.
Haryana

Dear Sir,

RE: Loss of mobile phone no.:

MAKE MODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES NO

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a)
 - (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
 - (ii) Block the SIM Card with your service provider within 3 days.
 - (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



LG **24 x 7** CALL CENTER OPERATIONS

 CALL	1800-180-9999 (Toll Free)	 SMS	5757554 (Send SMS)
--	--	---	-------------------------------------


CLICK

www.lgindia.com
lgservice@lgindia.com

