

## LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี  
**1-800-545454**  
กรุงเทพและปริมณฑล  
**0-2878-5757**

เว็บไซต์และอีเมล :

<http://www.lg.com/th> และ [support.lgeth@lge.com](mailto:support.lgeth@lge.com)

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน  
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน  
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง  
เพื่อความสะดวกในการติดต่อ  
กับศูนย์บริการของแอลจีทั่วประเทศ



ไ  
ท  
ย  
ENGLISH

คู่มือการใช้  
User Guide

# LG-T375



CE0168 ⓘ

P/N : MFL67481605(1.0)

[www.lg.com](http://www.lg.com)



# คู่มือการใช้ LG-T375

## - ไทย

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ

### โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบ จากตลาดลักลอบนำเข้าสินค้า รวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งขอความพรอมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบ ผลิตภัณฑ์นี้สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และอุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของ คุณได้รับการตรวจสอบและรับรองคุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG" โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่องมาจากขอบกพร่องจาก มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานใน การซื้อหรือบัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

# สารบัญ

คำแนะนำเพื่อความปลอดภัย และการใช้งานอย่างมี ประสิทธิภาพ .....	3	ตั้งค่า.....	26
การติดตั้งซิมการ์ดและ แบตเตอรี่ในเครื่อง.....	10	Wi-Fi .....	29
ส่วนประกอบตัวเครื่อง .....	12	อัปเดตซอฟต์แวร์ .....	30
การใช้หน้าจอสัมผัส .....	13	อุปกรณ์เสริม .....	31
การโทร .....	14	ข้อมูลทางเทคนิค .....	32
รายชื่อ.....	16	การแก้ปัญหา.....	34
ข้อความ.....	17		
การป้อนข้อความ .....	18		
การตั้งค่าอีเมล.....	20		
กล้องถ่ายรูป.....	20		
กล้องวิดีโอ .....	22		
เพลง .....	23		
การจัดการไฟล์.....	24		
แอปพลิเคชัน .....	24		
PC Suite .....	25		
การติดตั้งแอปพลิเคชันคอม พิวเตอร์ LG PC Suite IV”	25		
การติดตั้ง On-Screen Phone ในคอมพิวเตอร์ .....	25		
เว็บไซต์ .....	26		
การตั้งค่าซิมการ์ดคู่.....	26		

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายหรือ ผิดกฎหมาย

## การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า **SAR (Specific Absorption Rate)**

โทรศัพท์เคลื่อนที่รุ่น LG-T375 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของผู้ใช้ทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้วโดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้ขอยุ
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DAS4 ขณะถือแนบกับหูคือ 0.718 วัตต/กก. (10 กรัม)

## การดูแลและการบำรุงรักษาเครื่องโทรศัพท์



**คำเตือน:** ใช้แบตเตอรี่อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็น ต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพโดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์ตู้ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อนเช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตกหล่น
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสัมผัสที่ร้อนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาลเนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน

- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะ อาจถูกไฟฟ้าดูดและอาจทำให้ โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อน และทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาด ภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิต หรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่ โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวังอย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายาม ถอดหรือซ่อมแซม แก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลานานโดยไม่มีการระบายอากาศ หรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบางเล็กน้อย

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสุขภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์เพกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงานหรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถการได้ยิน

- ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม
- เมื่อใช้หูฟัง ให้ลดระดับเสียงลง หากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

**หมายเหตุ:** แรงแดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์บนเครื่องบินก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องชาร์จแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้งหากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน

- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเตาเสียทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

# การติดตั้งซิมการ์ดและแบตเตอรี่ในเครื่อง

## การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์เคลื่อนที่ คุณจะได้รับซิมการ์ด พลั๊กอินพร้อมรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้อื่นๆ


### ข้อสำคัญ!

ซิมการ์ดพลั๊กอินและขั้วสัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งานใส่หรือถอดการดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดไว้ในมือเด็กเล็ก

## ภาพประกอบ

โปรดปิดอุปกรณ์และเลิกการเชื่อมต่อกับแท่นชาร์จก่อนถอดแบตเตอรี่

- 1 ถอดฝาครอบด้านหลัง
- 2 ยกแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ประกอบฝาครอบด้านหลัง
- 6 ชาร์จแบตเตอรี่


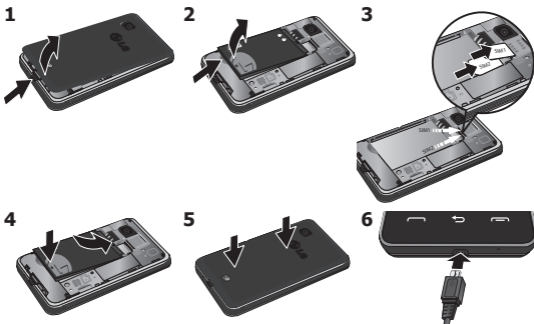


## การใส่การ์ดหน่วย ความจำ

ถอดฝาปิดช่องเสียบการ์ดหน่วย  
ความจำ ดันการ์ดหน่วยความจำ  
เข้าไปข้างในโดยใช้หน้าสัมผัสสี  
ทองหงายขึ้นในการถอดการ์ด  
หน่วยความจำ ให้กดเบาๆ

**หมายเหตุ:**  
การถอดหน่วยความจำ  
เป็นอุปกรณ์เสริม

# ส่วนประกอบตัวเครื่อง

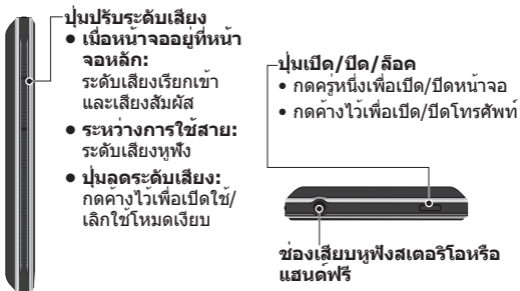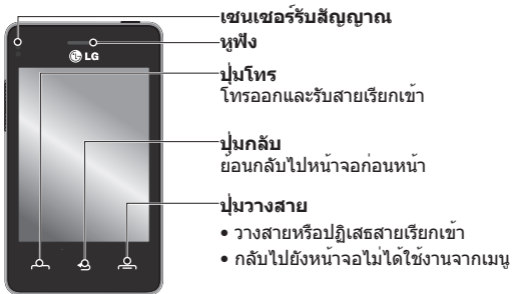

# การใช้หน้าจอสัมผัส

## เคล็ดลับสำหรับหน้าจอสัมผัส

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสจะไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ
- เมื่อไม่มีการใช้งานโทรศัพท์ LG-T375 เครื่องจะกลับไปล็อคหน้าจอ

## ควบคุมหน้าจอสัมผัส

การควบคุมบนหน้าจอสัมผัสของ LG-T375 สามารถเปลี่ยนแปลงได้ขึ้นอยู่กับงานที่คุณกำลังทำ

### การเปิดแอปพลิเคชัน



ในการเปิดแอปพลิเคชันใดก็ตาม เพียงแตะที่ไอคอนนั้น


### การเลื่อนหา

ลากจากด้านหนึ่งไปยังอีกด้านหนึ่งเพื่อเลื่อน ในหน้าจอบางหน้าจอ เช่น รายการบันทึกการใช้ คุณสามารรถเลื่อนขึ้นหรือลงได้อีกด้วย

# การโทร

## การโทรออก



- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด
- 3 แตะ  เพื่อเริ่มการโทรออก

**หมายเหตุ:** ในการโทรจากซิม 2 ให้แตะเครื่องหมายลูกศรไปข้างหน้าในไอคอน 

**เคล็ดลับ!** ในการป้อน + เพื่อโทรออกต่างประเทศ กดปุ่ม "0" ค้างไว้


กดปุ่มเปิดปิดเพื่อล็อคหน้าจอสัมผัสเพื่อป้องกันการโทรออกโดยไม่ได้ตั้งใจ

## การโทรออกโดยใช้รายชื่อ

- 1 จากหน้าจอหลัก ให้แตะ  เพื่อเปิด **รายชื่อ**
- 2 แตะกล่องฟิลต์ค้นหาที่ด้านบนของหน้าจอ และป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่ต้องการโทรโดยใช้ปุ่มกด
- 3 จากรายการที่ฟิลเตอร์นี้ ให้แตะที่ไอคอนโทร ถัดจากรายชื่อที่ต้องการโทร หมายเลขเริ่มต้นจะถูกใช้ในการโทร หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข
- 4 คุณอาจแตะที่ชื่อและเลือกหมายเลขที่จะใช้ หากรายชื่อนั้นมีหมายเลขมากกว่าหนึ่งหมายเลข คุณอาจแตะที่  เพื่อโทรโดยใช้หมายเลขเริ่มต้นก็ได้

**การโทรเข้าตัวเอง** - การโทรเข้าตัวเองจะเริ่มต้นสายเรียกเข้าจริง กด '#\*#' ในปุ่มหมายเลขเพื่อโทรเข้าตัวเอง โดยไม่เสียค่าบริการ

## การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อโทรศัพท์ดังขึ้น ให้กดปุ่ม  เพื่อรับสาย

ในการปิดเสียงกริ่ง ให้แตะที่แท็บเจียบ ในหน้าจอสัญญาณตอบรับ วิธีนี้เป็นวิธีที่มีประโยชน์ หากคุณลืมเปลี่ยนรูปแบบเสียงเป็น เจียบเมื่ออยู่ในห้องประชุม แตะที่แท็บปฏิเสธ เพื่อปฏิเสธสายเรียกเข้าในหน้าจอสัญญาณตอบรับ



## การเปลี่ยนการตั้งค่าการโทร

1 แตะ การโทร ในเมนู ตั้งค่า  
2 จากหน้าจอ ให้แตะซิม 1/ซิม 2

- **รายการปฏิเสธรับสาย** - คุณสามารถเลือกหมายเลขจากบันทึกการโทร/รายชื่อ/ป้อนเอง/ผู้โทรที่ไม่รู้จักทั้งหมด/หมายเลขที่ไม่รู้จักทั้งหมด
- **ส่งหมายเลขตัวเอง** - เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

- **โทรซ้ำอัตโนมัติ** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ เปิด หรือทางขวาเพื่อ ปิด
- **เตือนทุกนาที** - เลื่อนสวิตช์ไปทางซ้ายเพื่อ เปิด ฟังเสียงเตือนทุกนาทีระหว่างการใช้สาย
- **บันทึกเบอร์ใหม่** - เลือก ปิด หรือ ปิด เพื่อบันทึกหมายเลขใหม่

## การเปลี่ยนการตั้งค่าการโทรทั่วไป

- **โหมดตอบรับ**  
กดปุ่มรับสาย:  
คุณสามารถรับสายเรียกเข้าได้โดยการกดปุ่ม   
รับได้ทุกปุ่ม:  
คุณสามารถรับสายเรียกเข้าได้โดยการกดใดทุกปุ่ม ยกเว้นปุ่ม 
- **โหมดตอบรับ BT** - เลือก แชนด์ฟรีเสมอ เพื่อให้สามารถรับสายได้โดยใช้ชุดหูฟังบลูทูธหรือเลือก เครื่องเสมอ เพื่อรับสายโดยกดปุ่มบนตัวเครื่อง

# รายชื่อ

## การค้นหารายชื่อ

- 1 แตะ รายชื่อ
- 2 คุณจะเห็นรายชื่อ การพิมพ์ตัวอักษรแรกของชื่อในฟิลด์ค้นหาจะทำให้เมนูขามไปพื้นที่ของรายชื่อตามตัวอักษรนั้น

## การเพิ่มรายชื่อใหม่

- 1 แตะที่ รายชื่อ และแตะที่ เพิ่ม
- 2 เลือกว่าจะบันทึกรายชื่อไปยังหน่วยความจำภายใน, ซิม 1 หรือ ซิม 2
- 3 ป้อนชื่อและนามสกุล
- 4 คุณสามารถป้อนหมายเลขที่แตกต่างกันได้สูงสุด 5 หมายเลขต่อหนึ่งรายชื่อ
- 5 เพิ่มอีเมลแอดเดรส คุณสามารถป้อนอีเมลแอดเดรสที่แตกต่างกันได้สูงสุดสองอีเมลต่อหนึ่งรายชื่อ
- 6 กำหนดรายชื่อให้กับกลุ่มหนึ่งกลุ่มหรือมากกว่า
- 7 แตะ บันทึก เพื่อบันทึกรายชื่อ

## การเปลี่ยนการตั้งค่าของรายชื่อ

คุณสามารถปรับการตั้งค่ารายชื่อเพื่อให้ตรงกับ รายชื่อ ในแบบที่คุณต้องการได้

แตะ ปุ่มตัวเลือก  และแตะ ตั้งค่า

- **ชื่อที่แสดง** - เลือกว่าจะแสดงชื่อหรือนามสกุลของรายชื่อก่อนก็ได้
- **มุมมองรายชื่อ** - เลือกว่าจะแสดงชื่อ หรือ ชื่อและเบอร์
- **คัดลอก** - คัดลอกรายชื่อจากซิม 1 ไปยังหน่วยความจำภายใน, ซิม 2 ไปยังหน่วยความจำภายใน หรือในทางกลับกัน ซิม 1 ไปยังซิม 2 หรือในทางกลับกัน คุณสามารถคัดลอกที่ละรายการ หรือทั้งหมดในครั้งเดียว
- **ย้าย** - ตัวเลือกนี้ทำงานในลักษณะเดียวกับคัดลอก แต่รายชื่อจะถูกจัดเก็บไว้ในที่ตั้งใหม่เท่านั้น ดังนั้น เมื่อคุณย้ายรายชื่อจากซิมไปยังหน่วยความจำภายใน รายชื่อนั้นจะถูกลบออกจากหน่วยความจำซิม


- **ส่งทุกรายชื่อผ่านบลูทูธ** - ส่งรายชื่อทั้งหมดไปยังเครื่องอื่นผ่านบลูทูธ
- **สำรองข้อมูลรายชื่อ / เรียกคืนรายชื่อ** - บันทึกหรือเรียกคืนข้อมูลรายชื่อไปยังที่เก็บอื่น
- **ลบรายชื่อทั้งหมด** - ลบรายชื่อทั้งหมดของคุณ และที่ ใช้ หากคุณต้องการลบรายชื่อของคุณทั้งหมด

## ข้อความ

โทรศัพท์ LG-T375 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเครื่องเดียว และมีเมนูที่ใช้งานง่าย


### การส่งข้อความ

- 1** และ **ข้อความ** ในเมนูและแตะ **เขียนข้อความ** เพื่อเริ่มเขียนข้อความใหม่
- 2** และ **แทรก** เพื่อเพิ่มภาพ วิดีโอ เสียง รูปแบบอัตโนมัติ และอื่นๆ

**3** และ **ไป** ที่ด้านบนสุดของหน้าจอเพื่อป้อนผู้รับ แล้วป้อนหมายเลข หรือแตะ  เพื่อเลือกรายชื่อ คุณสามารถเพิ่มรายชื่อหลายรายการได้

**4** และ  เพื่อพร้อม

### หมายเหตุ:

ในการส่งข้อความจากซิม 2 ให้แตะเครื่องหมายลูกศรไปทางขวาในไอคอน 

### คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ, เสียง สไลด์ใหม่ และอื่นๆ ลงใน SMS ข้อความดังกล่าวจะแปลงเป็น MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น




### เคล็ดลับ:

ผู้ใช้สามารถคัดลอกข้อความที่เลือกจากโปรแกรมแก้ไขใดๆ และสามารถวางในโปรแกรมแก้ไขใดๆ

ตัวอย่างเช่น: ไปที่โปรแกรมแก้ไขข้อความ พิมพ์ข้อความ เลือกข้อความที่คุณต้องการคัดลอกโดยเลื่อนทับข้อความเลื่อนเคอร์เซอร์ไปที่จุดที่คุณต้องการวางข้อความ ไปที่ตัวเลือกและคลิกวางข้อความที่คัดลอกจะถูกวาง

**หมายเหตุ: ข้อความสแปม** - คุณสามารถบล็อกข้อความที่ไม่ต้องการได้โดยระบุหมายเลขหรือคำ ข้อความเหล่านั้นจะถูกจัดเก็บไว้ในโฟลเดอร์กล่องสแปม

## การป้อนข้อความ

คุณสามารถเลือกวิธีป้อนข้อมูลได้ โดยแตะ  และ **วิธีป้อนข้อมูล** และ  เพื่อเปิดโหมด T9 ไอคอนนี้จะแสดงเฉพาะเมื่อคุณเลือก **ปุ่มกด** เป็นวิธีป้อนข้อมูล และที่  เพื่อเปลี่ยนระหว่างตัวเลข สัญลักษณ์ และการป้อนข้อความ ใช้ปุ่ม **Shift** เพื่อเปลี่ยนระหว่างการป้อนตัวพิมพ์ใหญ่หรือพิมพ์เล็ก

## การเปลี่ยนการตั้งค่าข้อความตัวอักษร

แตะ **ข้อความ** และแตะ **ตั้งค่า** เลือก **ข้อความตัวอักษร**

**ศูนย์ข้อความตัวอักษร** - ป้อนรายละเอียดของศูนย์ข้อความ

**รายงานผลการส่ง** - เลื่อนสวิตช์ไปทางซ้ายเพื่อรับการยืนยันว่าข้อความถูกส่งแล้ว

**ช่วงที่มีผลใช้** - เลือกระยะเวลาที่  
จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ชนิดข้อความ** - แปลงข้อความ  
ตัวอักษรเป็น **ตัวอักษร, เสียง,  
แฟกซ์, X.400** หรือ **อีเมล**

**การเข้ารหัสตัวอักษร** - เลือกวิธี  
เข้ารหัสตัวอักษรของคุณตัวเลือกนี้  
จะมีผลต่อขนาดของข้อความและ  
ค่าบริการส่งข้อความของคุณ

**การส่งข้อความยาว** - เลือกเพื่อ  
ส่งข้อความยาวแบบ **เป็นหลาย  
SMS** หรือเป็น **MMS**

## **การเปลี่ยนการตั้งค่า ข้อความมัลติมีเดีย**

**แตะ ข้อความ และแตะ ตั้งค่า  
และ ข้อความมัลติมีเดีย**

**โหมดเรียกข้อมูล** - เลือกระหว่าง  
**เครือข่ายหลัก** หรือ

**เครือข่ายโรมมิ่ง** ถ้าคุณเลือก  
**กำหนดเอง** คุณจะได้รับ  
เฉพาะข้อความแจ้ง MMS และ  
คุณสามารถตัดสินใจว่าจะ  
ดาวน์โหลดแบบเต็มหรือไม่

**รายงานผลการส่ง** - เลือกเพื่อ  
ให้ส่งและขอรายงานผลการส่ง

**อ่านข้อความตอบรับ** - เลือกเพื่อ  
ให้ส่งและขอการตอบกลับ

**ระดับความสำคัญ** - เลือก  
ระดับความสำคัญของ MMS

**อายุข้อความ** - เลือกระยะเวลาที่  
จัดเก็บข้อความไว้ในศูนย์ข้อความ

**ระยะเวลาสไลด์** - เลือกระยะเวลา  
ที่จะให้สไลด์ปรากฏบนหน้าจอ

**การแนบเอกสารที่ไม่รองรับ** -  
เลือกว่าคุณจะจำกัดเอกสารแนบ  
เอกสารที่ไม่รองรับหรือไม่

**เวลาส่ง** - เลือกระยะเวลาในการ  
รอก่อนส่งข้อความ

**ศูนย์ MMS** - เลือกหนึ่งศูนย์จาก  
รายการหรือเพิ่มศูนย์ข้อความใหม่

**เคล็ดลับ:** คุณสามารถส่ง SMS ไปยังรายชื่อหลายคนได้ในครั้งเดียว ผู้ใช้สามารถเลือก/ไม่เลือกรายชื่อทั้งหมดสำหรับส่งข้อความใด โดยสามารถเลือกได้ 20 รายชื่อเท่านั้น และหากผู้ใช้เลือกเลือกทั้งหมด จะเลือก 20 รายชื่อแรกเท่านั้น

ในการส่ง SMS ไปยังกลุ่มของรายชื่อ ให้เลือกตัวเลือกกลุ่มและเลือกกลุ่ม

**หมายเหตุ: ข้อความขอโทษ**  
- ระหว่างการเตือนสายเรียกเข้า สามารถส่งข้อความที่กำหนดไวล่วงหน้าเป็น SMS โดยคลิกข้อความขอโทษ

**หมายเหตุ: การจัดเรียง SMS** - ข้อความถัดเข้าสามารถเรียงได้โดยใช้ตัวเลือกการเรียงเพื่อให้เข้าถึงข้อความ (วันที่, ผู้ส่ง และอ่าน/ยังไม่อ่าน)

## การตั้งค่าอีเมล

และ **อีเมล** จากหน้าจอ 2

ถ้าไม่ได้ตั้งค่าอีเมลแอดเดสส์ให้เริ่มวิชาการตั้งค่าอีเมลและดำเนินการจนเสร็จสิ้น

คุณสามารถตรวจสอบและแก้ไขการตั้งค่าและตรวจสอบการตั้งค่าเพิ่มเติมที่ป้อนโดยอัตโนมัติเมื่อคุณสร้างแอดเดสส์ได้

## กล้องถ่ายรูป


### การถ่ายภาพด่วน

**1** ดแตะเมนู **กล้องถ่ายรูป**

**2** เมื่อกล้องจับโฟกัสที่วัตถุแล้วให้แตะ  ที่ตรงกลางด้านขวาของหน้าจอเพื่อถ่ายภาพ

**เคล็ดลับ:** ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

## ภายหลังการถ่ายรูป

ภาพที่ถ่ายจะปรากฏบนหน้าจอ  
ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้  
และ 

**อัปโหลด** - และเพื่ออัปโหลด  
รูปภาพ

**ส่งทาง** - และเพื่อส่งรูปภาพเป็น  
**ข้อความ, อีเมล** หรือทาง **บลูทูธ**

**ตั้งเป็น** - และเพื่อตั้งเป็นพื้นหลัง  
หน้าจอหลัก พื้นหลังล็อคหน้าจอ  
ภาพรายชื่อ

**แก้ไข** - และเพื่อแก้ไขรูปภาพ



และเพื่อลบภาพ




และเพื่อถ่ายภาพอื่นทันที



และเพื่อดูคลังภาพที่บันทึกไว้

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ   
เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูง  
ทั้งหมด

หลังจากเลือกตัวเลือก ให้แตะ  
**ปุ่ม ดกล**

**ขนาด** - เปลี่ยนขนาดของรูปภาพ  
เพื่อประหยัดหน่วยความจำ

**สมดุลแสง** - เลือกระหว่าง  
**อัตโนมัติ, หลอดไฟ,**  
**แสงอาทิตย์, ฟลูออเรสเซนต์**  
และ **มิดครี**

**เอฟเฟกต์สี** - เลือกโทนสีสำหรับ  
รูปภาพใหม่

**ขีดต่อเนือง** - จัดให้วัตถุอยู่ใน  
ช่องมองภาพ แล้วกดปุ่มถ่ายภาพ  
เหมือนกับการถ่ายภาพปกติ กล้อง  
จะถ่ายภาพต่อเนื่องอย่างรวดเร็ว

**ตัวตั้งเวลา** - ตั้งเวลาถ่ายภาพ  
ทำให้คุณสามารถตั้งช่วงเวลา  
หน่วงหลังจากที่กดชัตเตอร์แล้ว  
เลือก **ปิด, 3 วินาที, 5 วินาที**  
หรือ **10 วินาที** ซึ่งเป็นวิธีการที่  
ช่วยให้คุณถ่ายรูปตนเองได้

**โหมดกลางคืน** - ใช้สำหรับการ  
ถ่ายภาพในที่มืด

**เลือกที่จัดเก็บ** - เลือกว่าจะบันทึก  
รูปภาพที่หน่วยความจำเครื่องหรือ  
ที่หน่วยความจำภายนอก

**แสดงภาพถ่าย** - เลือกเปิดเพื่อ  
ตรวจสอบภาพที่คุณถ่ายทันที





**เสียงชัตเตอร์** - เลือกเพื่อเปิด  
หรือปิดเสียงชัตเตอร์

**รีเซ็ตการตั้งค่า** - เรียกคืนการตั้ง  
ค่าเริ่มต้นของกล้องถ่ายรูป

# กล้องวิดีโอ


## การถ่ายวิดีโอด้วย

ในการสลับโหมดกล้องถ่ายรูปหรือโหมดวิดีโอ ให้เลื่อนไอคอนกล้องถ่ายรูปหรือวิดีโอที่ตรงกลางขวาของช่องมองภาพขึ้น/ลง

- 1 ถือโทรศัพท์ในแนวนอน และหันไปทางสิ่งที่จะถ่าย
- 2 กดที่จุดสีแดง 
- 3 ● **Rec** จะปรากฏขึ้นที่ด้านล่างของช่องมองภาพและตัวตั้งเวลาทางด้านล่างเพื่อแสดงระยะเวลาของวิดีโอของคุณ
- 4 ในการหยุดบันทึกภาพวิดีโอชั่วคราว ให้แตะ  แล้วเริ่มบันทึกต่อโดยเลือก 
- 5 แตะ  บนหน้าจอเพื่อหยุดการบันทึกวิดีโอ


## หลังจากถ่ายวิดีโอ


ภาพนิ่งที่แสดงวิดีโอที่ถ่ายจะปรากฏขึ้นบนหน้าจอ ชื่อของวิดีโอจะแสดงที่ด้านล่างของหน้าจอ ตัวเลือกที่คุณเลือกใช้ได้มีดังนี้


 แตะเพื่อเล่นวิดีโอ

แตะ  เพื่อ


**ส่งทาง** - เพื่อส่งวิดีโอเป็น **ข้อความ**, **อีเมล** หรือทาง **บลูทูธ**

 แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ และยืนยันโดยการแตะ **ใช่** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

 แตะเพื่อถ่ายภาพวิดีโออื่นต่อทันที โดยที่วิดีโอปัจจุบันของคุณจะได้รับการบันทึกไว้

 แตะเพื่อดูคลังภาพของวิดีโอและภาพที่บันทึกไว้

## การใช้การตั้งค่าขั้นสูง

จากช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกการตั้งค่าขั้นสูงทั้งหมด คุณสามารถเปลี่ยนการตั้งค่ากล้องวิดีโอหลังจากการเลือกตัวเลือก **แตะปุ่ม ตกลง**

**เอฟเฟกต์สี** - เลือกโทนสีเพื่อใช้กับรูปภาพมุมมองใหม่

**ความสมดุลแสง** - สมดุลแสงจะช่วยให้มั่นใจได้ว่าส่วนที่เป็นสีขาวที่ปรากฏในวิดีโอจะสวยงามจริงเพื่อให้องค์ประกอบของคุณปรับความสมดุลแสงได้อย่างถูกต้อง คุณอาจจำเป็นต้องกำหนดสภาวะแสงก่อนเลือกระหว่าง **อัตโนมัติ**, **หลอดไฟ**, **แสงอาทิตย์**, **ฟลูออเรสเซนต์** และ **มิดครีม**

**ระยะเวลา** - ตั้งค่าจำกัดระยะเวลาสำหรับวิดีโอของคุณ เลือกระหว่างปกติ และ MMS เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็นข้อความ MMS ได้

**เลือกที่จัดเก็บ** - เลือกว่าจะบันทึกรูปภาพที่หน่วยความจำเครื่องหรือที่หน่วยความจำภายนอก

**รีเซ็ตการตั้งค่า** - รีเซ็ตการตั้งค่ากล้องถ่ายวิดีโอทั้งหมด

## เพลง

ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะที่ **เพลง** จากขั้นตอนนี้ คุณสามารถเข้าใช้งานโพลเดอ์ต่างๆ ดังนี้:

**เล่นล่าสุด** - เล่นเพลงที่คุณเล่นล่าสุด

**ทุกแทร็ค** - มีเพลงที่คุณมีในโทรศัพท์ยกเว้นเพลงเริ่มต้นที่โหลดล่วงหน้า

**ศิลปิน** - เบลาร์สดูรายการเพลงที่เก็บไว้ตามศิลปิน

**อัลบั้ม** - เบลาร์สดูรายการเพลงที่เก็บไว้ตามอัลบั้ม

**แนวเพลง** - เบลาร์สดูรายการเพลงที่เก็บไว้ตามแนวเพลง

**รายการ** - ประกอบด้วยรายการเพลงที่คุณสร้างไว้

**สับเปลี่ยนแทร็ค** - เล่นแทร็คแบบสุ่มลำดับ

## การโอนเพลงไปยังโทรศัพท์

วิธีการที่ง่ายที่สุดในการโอนไฟล์เพลงไปที่โทรศัพท์ คือ ทางบลูทูธหรือสายเคเบิลข้อมูล

ในการโอนเพลงโดยใช้บลูทูธ:

- 1 ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ได้เปิดบลูทูธ และเชื่อมต่อกันแล้ว
- 2 เลือกไฟล์เพลงบนอุปกรณ์อื่น แล้วเลือกส่งไฟล์นั้นผ่านทางบลูทูธ
- 3 เมื่อส่งไฟล์แล้ว คุณจะต้องยอมรับไฟล์บนโทรศัพท์ โดยแตะ **ใช่**
- 4 ไฟล์จะปรากฏขึ้นในเพลง > ทุกแทร็ค

## การจัดการไฟล์

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำของโทรศัพท์ได้ ทำให้คุณหาใช้งานภาพ เสียง วิดีโอ เอกสาร และเนื้อหาอื่นทั้งหมดได้อย่างง่ายดาย หรือคุณยังสามารถบันทึกไฟล์ลงในการ์ดหน่วยความจำได้ การใช้การ์ดหน่วยความจำทำให้คุณเพิ่มพื้นที่ในหน่วยความจำของโทรศัพท์ได้ โดยแตะที่ **เพิ่มข้อมูล** คุณสามารถเปิดรายการของไฟล์เดอรัที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

## แอปพลิเคชัน

### การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะ **ปฏิทิน**
- 2 เลือกวันที่ที่ต้องการเพิ่มเหตุการณ์
- 3 แตะ **เพิ่ม**

### การตั้งเวลาการปลุก

- 1 แตะ **ตั้งปลุก**
- 2 แตะ **เพิ่ม** แล้วคุณสามารถตั้งปลุกและบันทึกในเมนูนี้ได้

### บันทึกเสียง

ใช้เครื่องบันทึกเสียง เพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

### การใช้เครื่องคิดเลข

- 1 แตะ **เครื่องคิดเลข**
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข

## การแปลงหน่วย

- 1 ดตะ แปลงหน่วย
- 2 เลือกว่าคุณต้องการแปลงสกุลเงิน, พื้นที่, ความยาว, น้ำหนัก, อุณหภูมิ, ปริมาตร หรือความเร็ว
- 3 จากนั้น ให้เลือกหน่วยและป้อนค่าที่คุณต้องการแปลง

## PC Suite

คุณสามารถซิงโครไนซ์คอมพิวเตอร์กับโทรศัพท์ของคุณ เพื่อให้แน่ใจว่ารายละเอียดที่สำคัญทั้งหมดของคุณและวันที่ต่างๆ ตรงกัน และยังสามารถสำรองข้อมูลไฟล์ที่ช่วยให้คุณสามารถสบายใจได้

### คำเตือน:

ห้ามตัดการเชื่อมต่อกับโทรศัพท์ในขณะที่โอนไฟล์

### หมายเหตุ: On - Screen Phone - On-Screen Phone

ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ

## การติดตั้งแอปพลิเคชันคอมพิวเตอร์ LG PC Suite IV™

แอปพลิเคชันคอมพิวเตอร์ LG PC Suite IV™ สามารถดาวน์โหลดได้จากเว็บไซต์ของ LG

- 1 ไปที่ [www.lg.com](http://www.lg.com) และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-T375)
- 3 คลิก PC Sync จากดาวน์โหลด และคลิก WINDOW PC Sync ดาวน์โหลด เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite IV"

## การติดตั้ง On-Screen Phone ในคอมพิวเตอร์

ดาวน์โหลด OSP จาก [www.lg.com](http://www.lg.com) > การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-T375) > OSP

## เว็บไซต์

**เบราว์เซอร์** ช่วยให้คุณเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ไม่ว่าจะอยู่ที่ไหน หรือกำลังทำอะไร

## การเข้าใช้เว็บไซต์

- 1 และ **เบราว์เซอร์**
- 2 ในการไปยังหน้าจอหลักของเบราว์เซอร์ตามค่าเริ่มต้น ให้เลือก **โฮม** หรือ **เลือกไปยัง URL** และพิมพ์ URL ตามด้วย **เชื่อมต่อ** โฮมเพจจะถูกตั้งค่าใน **เชื่อมต่อ > โปรไฟล์เบราว์เซอร์**

### หมายเหตุ:

มีค่าใช้จ่ายในการเชื่อมต่อกับบริการเหล่านี้และการดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

## การเข้าใช้บริการของ Google

และ **Google Search** เพื่อเรียกแอปพลิเคชัน Google Search

## การตั้งค่าซิมการ์ด


คุณจะได้เห็นไอคอนสัญญาณเครือข่ายสองไอคอนใต้ที่ด้านบนซ้ายของหน้าจอเมื่อคุณใส่ซิมการ์ด

ในการเลือกหรือสลับซิมการ์ดให้กดเมนู และเลือกการตั้งค่าซิมการ์ด

## ตั้งค่า


## การเปลี่ยนการตั้งค่าโทรศัพท์

อิสระในการปรับการทำงาน  
ของโทรศัพท์ LG-T375  
ในแบบที่คุณต้องการได้

จากหน้าจอหลัก ให้เลือก  และแตะ **ตั้งค่า** แล้วเลื่อนไปที่ **ตั้งค่าอุปกรณ์**

**แจ้งเครื่องหาย(ATMT) -** เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้โดยเจ้าของที่แท้จริงในการใช้งานคุณสมบัตินี้ ATMT คุณจะต้องตั้งค่าเพื่อเปิด ATMT และตั้งค่า ATMT สำหรับชื่อเจ้าของและหมายเลขโทรศัพท์สำรอง ATMT เริ่มต้นคือ "0000"

**หมายเหตุ:**

การแจ้งเครื่องหาย(ATMT) -  
(  > ตั้งค่า >  
ตั้งค่าอุปกรณ์ > ระบบป้องกัน  
> การแจ้งเครื่องหาย(ATMT))  
เมื่อโทรศัพท์ของคุณถูกขโมย เครื่องจะส่ง SMS ไปยังหมายเลขที่กำหนดไว้ล่วงหน้าโดยเจ้าของที่แท้จริง  
ATMT SMS จะมีข้อความเกี่ยวกับ IMEI ของโทรศัพท์ที่ถูกขโมย ชื่อเจ้าของและหมายเลขโทรศัพท์ของคุณคนที่กำลังใช้เครื่องดังกล่าว

## การตั้งค่าบริการ SOS

- **บริการ SOS -** เปิดโหมด SOS หลังจากเปิดแล้ว หากคุณกดปุ่มระดับเสียง 4 ครั้งเมื่อล็อคหน้าจออยู่ ขอความช่วยเหลือ SOS จะถูกส่งและโทรศัพท์จะอยู่ในโหมด SOS

ในสถานการณ์ฉุกเฉินขอความช่วยเหลือ SOS จะถูกส่งไปยังผู้รับที่กำหนดไว้ และจะรับสายเรียกเข้าจากผู้รับดังกล่าวโดยอัตโนมัติ เสียงการแจ้งทั้งหมดจะถูกปิดเสียงในการออกจากโหมด SOS ใหญ่กดปุ่มวางสายในหน้าจอหลัก

## การเปลี่ยนการตั้งค่าการเชื่อมต่อ

การตั้งค่าการเชื่อมต่อจะได้รับ การตั้งค่ามาจากผู้ให้บริการระบบแล้ว ดังนั้น คุณจึงสนุกกับโทรศัพท์ใหม่ของคุณได้ทันทีในการเปลี่ยนการตั้งค่าให้ใช้เมนูนี้: **แตะ เชื่อมต่อ**

## การส่งและการรับไฟล์ โดยใช้บลูทูธ

### ในการส่งไฟล์:

- 1 เปิดไฟล์ที่คุณต้องการส่ง โดยทั่วไปจะเป็นไฟล์ภาพถ่าย, วิดีโอ หรือเพลง
- 2 เลือก **ส่งทาง** เลือก **บลูทูธ**
- 3 หากคุณจับคู่อุปกรณ์ **บลูทูธ** แล้ว โทรศัพท์ LG-T375 จะไม่ค้นหาอุปกรณ์ **บลูทูธ** อื่นโดยอัตโนมัติ หากคุณยังไม่จับคู่อุปกรณ์บลูทูธ โทรศัพท์ LG-T375 จะค้นหาอุปกรณ์อื่นๆ ที่ใช้ **บลูทูธ** ภายในรัศมี
- 4 เลือกอุปกรณ์ที่คุณต้องการส่งไฟล์ไป
- 5 ไฟล์ของคุณจะถูกส่งออกไป

### ในการรับไฟล์:

- 1 ในการรับไฟล์ คุณต้องตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** โปรดดูข้อมูลเพิ่มเติมที่ **การเปลี่ยนการตั้งค่าบลูทูธ** ด้านล่าง
- 2 เครื่องจะแสดงข้อความให้คุณยอมรับไฟล์จากผู้ส่ง และที่ ใช้เพื่อรับไฟล์

- 3 คุณจะเห็นว่าไฟล์ได้รับการบันทึกไว้แล้ว สำหรับไฟล์ภาพ คุณสามารถเลือก **ดู** ไฟล์โดยทั่วไป ไฟล์จะถูกบันทึกใน **โฟลเดอร์ที่เหมาะสมในแฟ้มข้อมูล**

### เคล็ดลับ!

- 1 เมื่อคุณใช้ชุดหูฟังบลูทูธ จะไม่รองรับโปรไฟล์ A2DP และ AVRCP ขณะที่คุณเล่นวิดีโอ ซึ่งหมายความว่า คุณจะไม่ได้ยินเสียงของวิดีโอหากคุณใช้ชุดหูฟังบลูทูธ
- 2 ฟังก์ชันการถ่ายโอนไฟล์ทางบลูทูธจะถูกปิดในขณะที่ใช้แอปพลิเคชันบางอย่าง (โทรเสียง, กล้องถ่ายรูป, เครื่องเล่นเพลง, UMS/PCSync)

**การเปลี่ยนการตั้งค่าบลูทูธ:**  
แตะ **บลูทูธ** แล้วเลือก **ตัวเลือก**  
และเลือก **ตั้งค่า**

## การจับคู่กับอุปกรณ์ บลูทูธอื่น

ในการจับคู่โทรศัพท์ LG-T375 กับอุปกรณ์อื่น คุณสามารถกำหนดรหัสผ่านเพื่อป้องกันการเชื่อมต่อได้

- 1 ตรวจสอบว่าได้ตั้งค่าบลูทูธเป็น **เปิด** และ **มองเห็นได้** คุณสามารถเปลี่ยนการตั้งค่าการมองเห็นได้ในเมนู **ตั้งค่า**
- 2 **แตะ ค้นหา**
- 3 โทรศัพท์ LG-T375 จะค้นหาอุปกรณ์ เมื่อการค้นหาเสร็จสมบูรณ์ **รีเฟรช** จะปรากฏขึ้นบนหน้าจอ
- 4 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วย และป้อนรหัสผ่านจากนั้นให้**แตะตกลง**
- 5 โทรศัพท์ของคุณจะเชื่อมต่อกับอุปกรณ์อื่น ซึ่งคุณจำเป็นต้องป้อนรหัสผ่านเดียวกัน
- 6 การเชื่อมต่อบลูทูธของคุณแบบป้องกันด้วยรหัสผ่านพร้อมใช้งานแล้ว

## Wi-Fi

ตัวจัดการไร้สายช่วยให้คุณสามารถจัดการการเชื่อมต่ออินเทอร์เน็ตด้วย Wi-Fi (Wireless LAN) ของโทรศัพท์ โดยให้โทรศัพท์เชื่อมต่อเครือข่ายไร้สายในท้องถิ่นหรือเขาใช้อินเทอร์เน็ตแบบไร้สาย Wi-Fi เร็วกว่าและมีช่วงกว้างกว่าเทคโนโลยีไร้สายบลูทูธ ซึ่งจะช่วยให้สามารถส่งอีเมลและเบราว์เซอร์เน็ตได้อย่างรวดเร็ว

**หมายเหตุ:** โทรศัพท์ LG-T375 สนับสนุนการรักษาความปลอดภัย WEP และ WPA/WPA2-PSK หากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณตั้งค่าการเข้ารหัสสำหรับการรักษาความปลอดภัยเครือข่ายไว้ ต้องป้อนรหัสในหน้าต่างป๊อปอัป หากไม่ได้มีการตั้งค่าการเข้ารหัสไว้ หน้าต่างป๊อปอัปนี้จะไม่ปรากฏขึ้น

คุณสามารถขอรหัสจากผู้ให้บริการ Wi-Fi หรือผู้ดูแลระบบเครือข่ายของคุณ

# อัปเดตซอฟต์แวร์

## อัปเดตซอฟต์แวร์ โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์  
มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับ  
การใช้ฟังก์ชันนี้ โปรดดูที่  
<http://update.lgmobile.com>  
หรือ [http://www.lg.com/  
common/index.jsp](http://www.lg.com/common/index.jsp) →

เลือกประเทศและภาษา →  
การสนับสนุน คุณสมบัตินี้ให้คุณ  
อัปเดตเฟิร์มแวร์ของโทรศัพท์เป็น  
เวอร์ชันล่าสุดได้อย่างสะดวกจาก  
อินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์  
บริการ เนื่องจากการอัปเดตเฟิร์ม  
แวร์โทรศัพท์มือถือต้องการให้ผู้  
ใช้ดำเนินการอัปเดตอย่างระมัด  
ระวัง โปรดตรวจสอบคำแนะนำ  
และหมายเหตุที่ปรากฏขึ้นในแต่  
ละขั้นตอนก่อนดำเนินการต่อไป  
โปรดทราบว่า การถอดสายข้อมูล  
USB หรือแบตเตอรี่ระหว่างการ  
อัปเดตอาจทำให้โทรศัพท์  
มือถือชำรุดเสียหายได้

# อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการใช้งานส่วนตัวของคุณ

อุปกรณ์ชาร์จ



แบตเตอรี่



คู่มือการใช้



ชุดหูฟังสเตอริโอ



สายเคเบิลข้อมูลและซิงค์



## หมายเหตุ

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

# ข้อมูลทางเทคนิค

## อุณหภูมิแวดล้อม

สูงสุด: +55°C (คายนประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

## ศูนย์บริการ LG โดย

บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ.สมเด็จพระเจ้าตากสิน

แขวงบดินเดา เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ: จันทร์-เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T375

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V 1.8.1 (2008) / EN 301 489-7 V 1.3.1 (2005) / EN 301 489-17 V 2.1.1 (2009)  
EN 50360:2001/AC:2006 / EN 62209-1:2006  
EN 60950-1:2006+A11:2009  
EN 301 511 V9.0.2  
EN 300 328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

8 March 2012

LG Electronics Inc. – EU Representative  
Krijgsman 1, 1186 DM Amstelveen  
The Netherlands

Signature of representative

# การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย


ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด USIM	ไม่ได้ใส่ USIM การัดในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย/เครือข่ายขาดหาย	ระดับสัญญาณอ่อน ภายนอกพื้นที่เครือข่าย GSM ผู้ให้บริการใช้บริการใหม่	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่งตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย ตรวจสอบว่าซิมการ์ดมีอายุมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สำนักงานของผู้ให้บริการเครือข่าย
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่อีกครั้ง รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	รหัสเริ่มต้นคือ [0000] หากคุณลืมรหัสโปรดติดต่อผู้ให้บริการ

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุน หรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการโทรออก มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN 2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที เสียบอุปกรณ์ชาร์จให้นานขึ้น ถอดแบตเตอรี่แล้วใส่ใหม่อีกครั้ง

# การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือเย็นเกินไป มีปัญหาที่ขั้วสัมผัส ไม่มีกระแสไฟฟ้า	ตรวจสอบให้แน่ใจว่าขั้วจชาร์จโทรศัพท์ภายในอุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น
	อุปกรณ์ชาร์จชำรุด	เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟอื่น
	อุปกรณ์ชาร์จไม่ถูกต้อง	หากอุปกรณ์ชาร์จไม่ทำงานให้เปลี่ยนอุปกรณ์ชาร์จใหม่
	แบตเตอรี่ชำรุด	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่
หมายเลขโทรศัพท์ใช้โทรออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบการตั้งค่า

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถรับ/ ส่งข้อความตัวอักษร และรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความในโทรศัพท์ บางส่วนออก
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบ ไฟล์	ตรวจสอบรูปแบบไฟล์ที่ ได้รับการสนับสนุน
หน้าจอไม่ทำงานเมื่อสัมผัสสาย	เซนเซอร์รับ สัญญาณมีปัญหา	หากคุณใช้เทปหรือกล่อง ป้องกัน ตรวจสอบอุปกรณ์ ดังกล่าวปิดคลุมพื้นที่รอบ เซนเซอร์รับสัญญาณ หรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่ รอบเซนเซอร์รับ สัญญาณสะอาด
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ ชั่วคราว	ถอดแบตเตอรี่แล้วใส่ แบตเตอรี่ เปิดโทรศัพท์ ลองอัปเดตซอฟต์แวร์ผ่าน ทางเว็บไซต์



# LG-T375 User Guide

- English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## **Product Authentication program**

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.' The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

# Contents

Guidelines for safe and efficient use .....	3	Software update .....	31
Installing the SIM card and the handset battery .....	10	Accessories .....	32
Phone Components .....	12	Technical data.....	33
Using your touch screen.....	13	Troubleshooting.....	35
Calls .....	14		
Contacts .....	16		
Messaging .....	17		
Entering Text.....	18		
Setting up your email .....	20		
Camera .....	21		
Video camera.....	22		
Music .....	24		
Managing files .....	25		
Application.....	25		
PC Suite .....	26		
Installing "LG PC Suite IV" PC application .....	26		
Installing On-Screen Phone on your PC .....	26		
The web .....	27		
Dual SIM setting .....	27		
Settings .....	27		
Wi-Fi.....	30		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T375 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.

## Guidelines for safe and efficient use

- The highest SAR value for this model phone tested by DAS4 for use close to the ear is 0.718 W/kg (10g).

### Product care and maintenance



**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

# Guidelines for safe and efficient use

## Efficient phone operation

### Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## **Avoid damage to your hearing**

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volume is set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.

## **Blasting area**

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## **Potentially explosive atmospheres**

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

# Guidelines for safe and efficient use

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

# Installing the SIM card and the handset battery

## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

### Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.

## Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

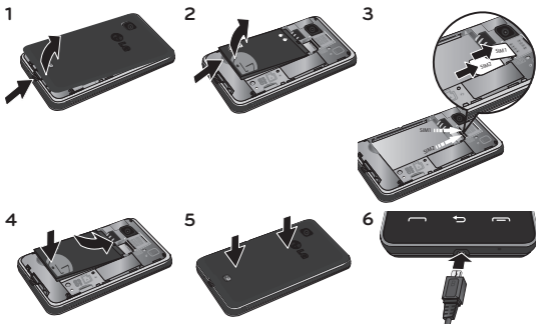



## Installing a Memory Card

Remove the back cover of your phone. Push the memory card inside with the gold contact facing downwards.

To remove the memory card, gently pull it outside.

**NOTE:** A memory card is an optional accessory.

# Phone Components

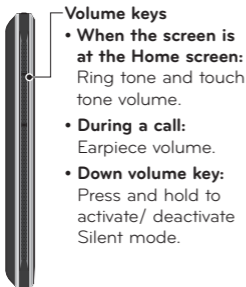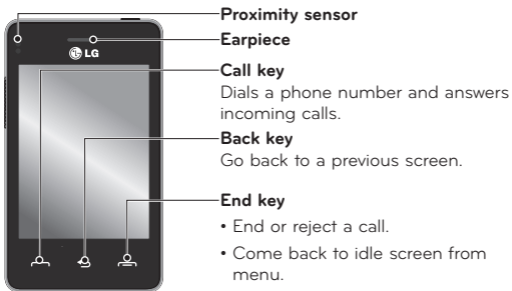

- Power/Lock key**
- Short press to turn on/off the screen.
  - Long press for power on/off.



**Handsfree or Stereo earphone connector**

# Using your touch screen

## Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T375 is not in use, it will return to the lock screen.

## Control the touch screen

The controls on the LG-T375 touch screen change dynamically depending on the task you are carrying out.

### Opening Applications



To open any application, simply touch its icon.


### Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

# Calls

## Making a Call



- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

**NOTE:** To make a call from SIM2 touch the forward arrow mark on  icon.

**TIP!** To enter + for making an international call, press and hold "0".

Press the power key to lock the touch screen to prevent calls being made by mistake.

## Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one number for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one number for that contact. You can also touch  to initiate the call to the default number.

**NOTE:**

**Self call** - Self call imitates a real incoming call. Press '#\*#' on the Dialpad to make a self call. This doesn't charge any fee.

## Answering and rejecting a call

When your phone rings, press  key to answer the call.



To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

## Changing the call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 From the screen touch SIM1/SIM2.

- **Call rejection list** - You can select numbers from **Logs**, **Contacts**, **Enter manually**, **All unknown callers** and **All unknown numbers**.
- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **Save new number** - Select ON or OFF to save a new number.

## Changing the common call setting

- **Answer mode**
  - Press send key:** Allows you to only answer an incoming call by pressing the  key.
  - Press any key:** Allows you to answer an incoming call by pressing any key, except the  key.

- **BT answer mode** - Select Always to handsfree to be able to answer a call using a Bluetooth headset, or select Always to handset to press a handset key to answer a call.

## Contacts

### Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.


### Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory**, **SIM1** or **SIM2**.
- 3 Enter your first and last name.

- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

### Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.



- **Display name** - Choose whether to display the first or last name of a contact first.
- **Contacts view** - Choose whether to display **Name** or **Name & number**.


- **Copy** - Copy your contacts from your SIM1 to your internal memory, SIM2 to your internal memory or vice versa, SIM1 to SIM2 or vice versa. You can do this one contact at a time, or all at once.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts / Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to delete all your contacts.

## Messaging

Your LG-T375 combines SMS and MMS into one intuitive and easy-to-use menu.

### Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch  **SIM1** when ready.

**NOTE:** To send a message from SIM2 touch the forward arrow mark on  **SIM1** icon.



**WARNING:** If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


**TIP:** User can Copy a selected text from any editor and can paste the same in any other editor.



Ex: Go to Message Editor, Type some text. Now Select the Text you want to copy by scrolling over the text. Now Place the cursor at a point you want to paste the text. Go to Option and Click on Paste, so that copied text will get Pasted.

### **NOTE: Spam Message**

- You can block the unwanted messages by giving Spam numbers or Spam words. Those messages will get stored in Spam Box Folder.

## Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method. Touch to  change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

## Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

**Text message centre** - Enter the details of your message centre.

**Delivery report** - Slide the switch left to receive confirmation that your messages have been delivered.

**Validity period** - Choose how long your messages are stored at the message centre.

**Message types** - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

**Character encoding** - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

**Send long message as** - Choose to send long messages as **Multiple SMS** or as an **MMS**.

## Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

**Retrieval mode** - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

**Delivery report** - Choose to request and/or allow a delivery report.

**Read receipt** - Choose to request and/ or allow a receipt.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on the screen.

**Unsupported attachment** -

Choose whether the unsupported attachment is restricted or not.

**Delivery time** - Choose how long to wait before a message is delivered.

**MMS centre** - Choose one from the list or add a new message centre.

**TIP:** You can send SMS to many contacts at a time. User can select/deselect all contacts for sending the message. Only 20 contacts can be marked and if user select Select all only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select Group Option and select particular group.

**NOTE: Excuse message**

- During Incoming call alert, a preset Message can be send as SMS on clicking Excuse msg.

**NOTE: SMS Sorting**


- Inbox Messages can be sorted with the given sorting options for an easy access of messages.  
**(Date, Sender, Read and Unread)**

## Setting up your email

Touch **E-mail** from screen 2. If the email account is not set up, start the email set up wizard and finish it. You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

# Camera

## Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

**TIP:** To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

## After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch 

**Upload** - Touch to upload the photo.

**Send Via** - Touch to send the photo as a **Message**, **Email** or via **Bluetooth**.

**Set as** - Touch to set as **Homescreen wallpaper**, **Lockscreen wallpaper**, **Contacts image**.

**Edit** - Touch to edit the photo.



Touch to delete the image.




Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

**Size** - Change the size of the photo to save memory.

**White balance** - Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

**Colour effect** - Choose a color tone for your new photo.

**Continuous shot** - Choose from **Normal shot, Three, Six** or **Nine** and position the subject in the viewfinder, then press the capture button as if taking a normal photo to take continuous shot.

**Self-timer** - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds,** or **10 seconds.** This is ideal if you want to be included in a photo.

**Night mode** - Useful to user in dark places.

**Select storage** - Choose whether to save your photos to the Handset memory or to the External memory.

**Show captured image**  
- Choose On to check the picture you took right away.




**Shutter sound** - Select to make Shutter Sound On or Off.

**Reset settings** - Restore all camera default settings.

## Video camera

### Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.


- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .

- 5 Touch  on screen to stop video recording.

## After making a video


A still image representing your captured video will appear on the screen. The name of the video is displayed at the bottom of the screen.


The following options are available.


 Touch to play the video.

Touch  to.


**Send Via** - To send the video as a **Message, Email** or via **Bluetooth**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

## Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

**Colour effect** - Choose a color tone to use for your new view.

**White balance** - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent, and Cloudy**.

**Duration** - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

**Select storage** - Choose whether to save your videos to the Handset memory or to the External memory.

**Reset settings** - Reset all the video camera settings.

## Music

To access the music player, touch **Music**. From here, you can access a number of folders:

**Recently played** - Plays the songs you have played recently.

**All tracks** - Contains the songs you have on your phone except the pre-loaded default music.

**Artists** - Browse through your music collection by artist.

**Albums** - Browse through your music collection by album.

**Genres** - Browse through your music collection by genre.

**Playlists** - Contains all the playlists you have created.

**Shuffle tracks** - Play your tracks in a random order.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

### To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

## Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and other content.

You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

## Application

### Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

## Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

## Voice recorder

Use your **voice recorder** to record voice memos or other audio files.

## Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

## Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

## PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

**WARNING:** Do not disconnect your phone during the transfer.

**NOTE: On - Screen Phone**  
- On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection.

## Installing "LG PC Suite IV" PC application

"LG PC Suite IV" PC application can be downloaded from the webpage of LG.

- 1 Go to [www.lg.com](http://www.lg.com) and select a country of your choice.
- 2 Go to Support > Mobile Phone Support > Select the Model (LG-T375).
- 3 Click PC Sync from Download, and click WINDOW PC Sync Download to download "LG PC Suite IV" PC software.

## Installing On-Screen Phone on your PC

Download OSP from [www.lg.com](http://www.lg.com) > Support > Mobile Phone Support > Select the Model (LG-T375) >OSP.

## The web

**Browser** gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

### Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page touch **Yes**. Once page is loaded tap on settings button in the right top corner for more options.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

## Access to Google Service

Touch **Google** and select **Gmail, Blogger** and other Google applications.

## Dual SIM setting


You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the **SIM card**, press **Menu** and select **Dual SIM settings**.

## Settings


### Changing your phone settings

Use the freedom of adapting the LG-T375 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

### **Anti-theft mobile tracker -**

When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "0000".

**NOTE:** Anti Theft Mobile Tracker - (  > Settings > Device settings > Security > Anti-theft Mobile tracker)

When the handset is stolen, handset sends the SMS to the predefined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone **IMEI, Owner name & phone number** of the person who is using that handset.

### **SOS Service settings**

- **SOS Service** - This enables SOS mode. After enabling if you press down volume key 4 times when screen is locked, the SOS message is sent and the phone stays in SOS Mode.

In the emergency situation SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

### **Changing your connectivity settings**

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use **Menu > Settings > Connectivity**.

## Sending and receiving your files using Bluetooth

### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T375 will not automatically search for other **Bluetooth** devices. If not, your LG-T375 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Bluetooth settings** for more information.

- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

### TIP!

- 1 When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, Music Player, UMS/PCSync)

**Changing your Bluetooth settings:** Touch **Bluetooth** then select **Options** and choose **Settings**.

## Pairing with another Bluetooth device

By pairing your LG-T375 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T375 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

## Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

**NOTE:** The LG-T375 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

# Software update

## Phone Software update

### LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support. This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

### Charger



### Battery



### User Guide



### Stereo headset



### Data cable



#### NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

## Technical data

### Ambient Temperatures

**Max.:** +55°C (discharging)  
+45°C (charging)

**Min.:** -10°C

### LG Service Center

by LG Electronics (Thailand) Co. Ltd. 72/127 Somdetprachaw  
Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sat 08:00 - 18:00

Call center : 0-2878-5757

# Declaration of Conformity



LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

## Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-T375

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V 1.8.1 (2008) / EN 301 489-7 V 1.3.1 (2005) / EN 301 489-17 V 2.1.1 (2009)  
EN 50360:2001/AC:2006 / EN 62209-1:2006  
EN 60950-1:2006+A11:2009  
EN 301 511 V9.0.2  
EN 300 328 V1.7.1

## Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom  
Notified Body Identification Number : 0168

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

8 March 2012

LG Electronics Inc. – EU Representative  
Krijgsman 1, 1186 DM Amstelveen  
The Netherlands

Signature of representative

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

<b>Message</b>	<b>Possible Causes</b>	<b>Possible Corrective Measures</b>
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6-12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.

# Troubleshooting

<b>Message</b>	<b>Possible Causes</b>	<b>Possible Corrective Measures</b>
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid charge limit reached	New network not authorised. Check for new restrictions. Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery is not charged Battery contacts are dirty	Press the On/Off key down for at least two seconds. Keep charger attached for a longer time. Clean the Battery contacts and insert again.

<b>Message</b>	<b>Possible Causes</b>	<b>Possible Corrective Measures</b>
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed Dial Number function is on.	Check settings.

# Troubleshooting

<b>Message</b>	<b>Possible Causes</b>	<b>Possible Corrective Measures</b>
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

