

LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี
1-800-545454
กรุงเทพและปริมณฑล
0-2878-5757

เว็บไซต์และอีเมล :
<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อ
กับศูนย์บริการของแอลจีทั่วประเทศ

คู่มือการใช้

LG-P720h

P/N : MFL67481414 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบ นำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้าอันเนื่องจากข้อบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐาน ในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

คู่มือการใช้ LG-P720h

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับโทรศัพท์ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2012 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Android Market™ เป็นเครื่องหมายการค้าของ Google, Inc.



สารบัญ

คำแนะนำเพื่อความปลอดภัย
และการใช้งานอย่างมี
ประสิทธิภาพ 5

เริ่มทำความรู้จักกับโทรศัพท์
ของคุณ 12

ก่อนเริ่มใช้โทรศัพท์โปรดอ่าน

ข้อมูลนี้!.....12

ส่วนประกอบอุปกรณ์.....17

การใส่ซิมการ์ดและ

แบตเตอรี่19

การชาร์จโทรศัพท์.....20

การใช้การ์ดหน่วยความจำ.....20

การล็อคและปลดล็อค

หน้าจอ21

การรักษาความปลอดภัย

การล็อคหน้าจอ22

หน้าจอหลักของคุณ 23

เคล็ดลับสำหรับหน้าจอ

สัมผัส.....23

หน้าจอหลัก.....23

การปรับแต่งหน้าจอหลัก...24

การปรับแต่งการออกแบบ

แอปพลิเคชันจากหน้า

จอหลัก24

การกลับไปไปที่แอปพลิเคชัน

ที่เพิ่งใช้ล่าสุด25

แถบการแจ้ง25

การดูแถบสถานะ.....25

แป้นพิมพ์บนหน้าจอ27

การป้อนตัวอักษรที่ใช้สำหรับ

เน้นเสียง.....27

การตั้งค่าแอคเคาท์

Google 28

เมนู 3D.....29

คู่มือ 3D.....29

คลังภาพ 3D29

3D เกมส์&แอปฯ.....29

ตัวแปลงเกมส์ 3D29

กล่อง 3D.....30

YouTube 3D30

สำรองข้อมูล 31

เกี่ยวกับการสำรองข้อมูล

และเรียกคืนข้อมูลของ

สมาร์ตโฟน31

สำรองข้อมูลสมาร์ตโฟน...31

การกำหนดเวลาสำรอง

ข้อมูลอัตโนมัติ31

การเรียกคืนข้อมูลสมาร์ต

โฟน.....32

การโทร 34

การโทรออก34

การโทรแบบสนทนาทาง

วิดีโอ34

ในเมนูสนทนาทางวิดีโอ ..34

การโทรออกโดยใช้รายชื่อ 34

การรับสายและการปฏิเสธ

สายเรียกเข้า.....34

การปรับระดับเสียงสาย

สนทนา.....35

การใช้สายที่สอง.....35

การดูบันทึกการโทร35

ตั้งค่าการโทร.....35

รายชื่อ.....36

การคนหารายชื่อ.....36

การเพิ่มรายชื่อใหม่.....36

รายชื่อเพื่อนสนิท.....36

อิมพอร์ตหรือเอ็กซ์พอร์ต

รายชื่อ36

การย้ายรายชื่อจากอุปกรณ์

เก่าไปยังอุปกรณ์ใหม่.....37

ข้อความ..... 38

การส่งข้อความ38

กล่องเรด38

การใช้สโมลีย์38

การเปลี่ยนการตั้งค่าข้อความ

มีลดีมีเดีย39

อีเมล 40

การจัดการแอคเคาท์อีเมล.40

หน้าจอแอคเคาท์อีเมล.....40

การทำงานกับโฟลเดอร์

แอคเคาท์.....41

การเขียนและส่งอีเมล41

กล้องถ่ายรูป..... 42

ทำความรู้จักกับช่องมอง

ภาพ.....42

| | |
|-------------------------------|----|
| การถ่ายภาพด่วน | 43 |
| เมื่อคุณถ่ายภาพแล้ว..... | 43 |
| การใช้การตั้งค่าขั้นสูง | 43 |

กล้องวิดีโอ

| | |
|--------------------------------|----|
| ทำความเข้าใจกับช่องมองภาพ..... | 45 |
| การถ่ายวิดีโอตอน | 46 |
| หลังการถ่ายวิดีโอ | 46 |
| การใช้การตั้งค่าขั้นสูง | 46 |
| การปรับระดับเสียง | |
| ขณะดูวิดีโอ | 47 |
| รูปภาพและวิดีโอ 3D | 47 |

มัลติมีเดีย.....

| | |
|----------------|----|
| คลังภาพ | 49 |
| เพลง..... | 49 |
| วิทยุ FM | 50 |

เว็บไซต์

| | |
|----------------------|----|
| บราวเซอร์ | 52 |
| การใช้ตัวเลือก | 52 |

ยูทิลิตี้.....

| | |
|----------------------------------|----|
| การตั้งเวลาการปลุก..... | 53 |
| การใช้เครื่องคิดเลข..... | 53 |
| การเพิ่มเหตุการณ์ลงในปฏิทิน..... | 53 |
| การเปลี่ยนมุมมองปฏิทิน | 53 |
| Polaris Office..... | 53 |
| แก้ไขวิดีโอ..... | 54 |

LG SmartWorld

| | |
|---|----|
| วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ..... | 55 |
| วิธีการใช้ LG SmartWorld | 55 |

เชื่อมต่อ.....

| | |
|---|----|
| บลูทูธ | 56 |
| Wi-Fi | 57 |
| การใช้ SmartShare | 58 |
| การแบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่ | 61 |
| GPS..... | 61 |
| การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลคอมพิวเตอร์ | 62 |
| การเชื่อมต่อ VPN | 64 |

ตั้งค่า.....

| | |
|---------------------------|----|
| ตั้งค่าการเชื่อมต่อ | 66 |
| โทร | 67 |
| เสียง | 67 |
| หน้าจอ | 68 |
| ตัวประหยัดพลังงาน..... | 68 |
| ท่าทางการเคลื่อนไหว | 69 |
| พิกัดและการป้องกัน | 69 |
| แอปพลิเคชัน | 69 |
| แอคเคาท์และการซิงค์ | 70 |
| ความเป็นส่วนตัว | 70 |
| ที่เก็บข้อมูล | 71 |
| ภาษาและคีย์บอร์ด | 71 |

| | |
|-------------------------------|----|
| Voice input & output..... | 71 |
| การช่วยสำหรับการเข้าถึง | 73 |
| เชื่อมต่อ..... | 73 |
| วันที่และเวลา..... | 73 |
| เกี่ยวกับโทรศัพท์..... | 73 |

LG On-Screen Phone... 74

| | |
|--|----|
| ไอคอน On-Screen Phone..... | 74 |
| คุณสมบัติ On-Screen Phone..... | 74 |
| วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์..... | 74 |
| วิธีเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ | 75 |
| ในการตรวจสอบการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ | 75 |
| การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์ | 75 |

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)..... 76

| | |
|--|----|
| การเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์..... | 77 |
| การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์..... | 79 |
| การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่..... | 79 |
| การส่งเนื้อหา มัลติมีเดียจากอุปกรณ์ไปยังคอมพิวเตอร์..... | 80 |

สารบัญ

| | |
|------------------------|----|
| อัปเดตซอฟต์แวร์ | |
| โทรศัพท์..... | 81 |
| เครื่องหมายการค้า..... | 82 |
| DivX Mobile..... | 82 |
| DTS..... | 83 |
| Dolby Mobile..... | 83 |
| ข้อมูลทางเทคนิค..... | 84 |
| อุปกรณ์เสริม..... | 85 |
| การแก้ปัญหา..... | 86 |

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-P720h นี้

ได้รับการออกแบบตรงตาม

ข้อกำหนดเรื่องความปลอดภัยในการใช้งานสำหรับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่

วิทยุ

- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 0.196 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือขอความในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งขอความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง และก่อให้เกิดอันตรายและทำให้การสัมผัสผิดพลาดได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรศัพท์มือถือ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อนหรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มี

การสั่นสะเทือนหรือการกระแทก

- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะ

- อาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
 - ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
 - ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแกวท์ที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแกวท์เกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
 - โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวหนังโดยตรงเป็นระยะเวลาสั้นโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อย ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาต

- เสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
 - ดังนั้น โทรทัศน์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับขี่อย่างช้าๆ แลวงจรถูกก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรง

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

เนื่องจากการทำงานผิดปกติของถูลมนิรภัยได้

- หากคุณกำลังฟังเพลงในขณะอยู่ข้างนอก โปรดตรวจดูวาระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดเครื่องใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลง และระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลง หากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลง

บนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอขมอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงาน

งานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมดได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียว ในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที

เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่

- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับ การกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

ข้อควรระวังเมื่อดูเนื้อหา 3D

1. สภาพแวดล้อมของการดู

1.1 เวลาของการดู คำเตือน

- เมื่อดูเนื้อหา 3D ให้พัก 5 - 15 นาทีทุกชั่วโมง การดูเนื้อหา 3D เป็นระยะเวลาอันยาวนานอาจทำให้เกิดอาการปวดหัว วิงเวียน เหนื่อยล้า หรือตาล้าได้

1.2 ระยะของการดู ข้อควรระวัง

- รักษาระยะห่างอย่างน้อย 30 ซม. เมื่อดูเนื้อหา 3D หากคุณรู้สึกไม่สบายขณะดูเนื้อหา 3D ให้ออกห่างจากหน้าจอมากขึ้น

2. อายุของผู้ดู ข้อควรระวัง

2.1 ทารก/เด็ก

- ห้ามเด็กอายุต่ำกว่า 5 ปี ดูหรือใช้โทรทัศน์ 3D
- เด็กอายุต่ำกว่า 10 ปีอาจมีแนว

โน้มมากกว่าในการโต้ตอบขณะดูเนื้อหา 3D เช่น การสัมผัสหน้าจอ หรือกระโดดเข้าหาภาพ สำหรับ การให้เด็กดูเนื้อหา 3D ต้องมีการดูแลเป็นพิเศษ สำหรับเด็ก ระยะเวลาระหว่างตาจะสั้นกว่าผู้ใหญ่ จึงมีความแตกต่างของภาพ 3D ที่ปรากฏบนจอตามากกว่าผู้ใหญ่ และรับระยะลึกจากการมองสาม มิติมากกว่าแม้ว่าจะดูภาพ 3D ภาพเดียวกันก็ตาม

2.2 วัยรุ่น

- วัยรุ่นอายุต่ำกว่า 19 ปีอาจโต้ตอบด้วยความอ่อนไหวเนื่องจากการ กระตุ้นจากแสงในเนื้อหา 3D แนะนำให้งดการดูเนื้อหา 3D เป็นเวลานานเมื่อรู้สึกเหนื่อย

2.3 ผู้สูงอายุ

- เนื่องจากอายุ ผู้สูงวัยอาจรับรู้เอฟเฟกต์ 3D ได้น้อยกว่า ผู้ที่มีอายุน้อยกว่า ห้ามนั่งใกล้หน้า จอเกินกว่าระยะห่างที่แนะนำ

3. ผู้ป่วยเรื้อรังและ/หรือตั้งครบก

คำเตือน

- ห้ามดูภาพ 3D หากคุณรู้สึก คลื่นไส้บ่อย ตั้งครบก และหรือเป็นโรคเรื้อรัง เช่น โรคลมบ้าหมู, หัวใจผิดปกติ

หรือโรคความดันโลหิต ฯลฯ

- หากคุณมีอาการของการมองเห็นสามมิติหรือการมองสามมิติผิดปกติ ไม่แนะนำให้คุณภาพ 3D หากคุณมองเห็นภาพซ้อนหรือรู้สึกไม่สบาย
- หากคุณมีอาการตาเข, ตามัว หรือตาพร่า คุณอาจพบปัญหาในการรับรู้ความรู้สึก และรู้สึกเหนื่อยลางายเนื่องจากภาพซ้อนขอแนะนำให้พักบ่อยขึ้นกว่าผู้ใหญ่ปกติ
- หากคุณมีสายตาไม่เท่ากันระหว่างตามขวาและตาซ้าย คุณต้องใส่แว่นสายตา (แว่นตา) ก่อนดูภาพ 3D

4 อาการที่คุณต้องงดหรือหยุดดูภาพ 3D คำเตือน

- ห้ามดูภาพ 3D เมื่อคุณรู้สึกเหนื่อยล้าเนื่องจากนอนพักผ่อนไม่พอ ทำงานหนัก หรือดื่มแอลกอฮอล์
- หากคุณมีอาการเหล่านั้น ให้หยุดใช้/ดูภาพ 3D และพักผ่อนจนกว่าอาการจะหายไป
 - ปวดหัว, ตาล้า, วิงเวียน, คลื่นไส้, ใจสั่น, มองเห็นไม่ชัด, ไม่สบาย, มองเห็นภาพซ้อน, การมองเห็นผิดปกติ หรือเหนื่อยล้า หากอาการไม่หายไป โปรดปรึกษาแพทย์

5 โรคลมชักที่เกิดจาก

อาการแพ้แสง คำเตือน

- ผู้ใช้บางรายอาจเกิดอาการลมชักหรืออาการผิดปกติอื่นๆ เมื่อถูกแสงกระพริบหรือที่มีรูปแบบเฉพาะ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ก่อนเริ่มใช้โทรศัพท์ โปรดอ่านข้อมูลนี้!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความ เพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 แอปพลิเคชัน > ตั้งค่า > แอปพลิเคชัน > จัดการแอปพลิเคชัน
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3แตะ ถอนการติดตั้ง

2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและ

ทรัพยากรระบบได้

การยืดอายุแบตเตอรี่ของโทรศัพท์:

ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธหากคุณไม่ได้ใช้งาน

- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail™, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่

การตรวจสอบระดับกำลังไฟแบตเตอรี่:

- แอปพลิเคชัน > ตั้งค่า > เกี่ยวกับโทรศัพท์ > สถานะสถานะแบตเตอรี่ (กำลังชาร์จหรือไม่ชาร์จ) และระดับ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:

- แอปพลิเคชัน > ตั้งค่า > เกี่ยวกับโทรศัพท์ > การใช้แบตเตอรี่

เวลาใช้งานของแบตเตอรี่จะแสดงอยู่ที่ด้านบนของหน้าจอ โดยแสดงระยะเวลา นับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้าย

หรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดง
ระยะเวลานับจากที่โทรศัพท์ใช้พลังงาน
จากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะ
แสดงรายการแอปพลิเคชันหรือบริการที่
ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับ
ตามปริมาณที่ใช้จากมากไปน้อย

3. ก่อนการติดตั้งแอปพลิเคชัน และ OS ไอโฟนเซอร์ส

คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอก
เหนือจากของผู้ผลิต อาจทำให้โทร
ศัพทของคุณทำงานผิดปกติได้ นอก
จากนั้น โทรศัพท์ของคุณจะไม่ได้รับ
ความคุ้มครองตามการรับประกัน

คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วน
ตัว ให้ดาวน์โหลดแอปพลิเคชัน
เฉพาะจากแหล่งที่เชื่อถือได้ เช่น
Android Market™ เท่านั้น หากมี
การติดตั้งแอปพลิเคชันไม่ถูกต้องใน
โทรศัพท์ อาจทำงานไม่ปกติหรือ
เกิดข้อผิดพลาดร้ายแรง คุณต้อง
ถอนการติดตั้งแอปพลิเคชันเหล่านั้น
และข้อมูลและการตั้งค่าที่เกี่ยวข้อง
ทั้งหมดออกจากโทรศัพท์

4. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไข
สู่สภาพเดิมได้ ให้ใช้ Hard Reset
(รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่ม
ต้นของโทรศัพท์

- 1 ปิดเครื่อง
- 2 กดปุ่ม **ปุ่ม 3D + ปุ่มลดระดับเสียง**
พร้อมกันค้างไว้ และกดปุ่มเปิด/
ปิดเครื่อง/ลือค
- 3 เมื่อโลโก้ LG ปรากฏขึ้น ให้ปล่อย
ปุ่มทั้งหมด
- 4 หลายวินาทีต่อมา คุณจะสามารรถ
เลือกฟังก์ชันรีเซ็ตค่าจากโรงงานได้
ในเมนูทิลิตี้กู้คืนระบบ Android

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

5 เลื่อนรายการโดยใช้ ปุ่มระดับเสียง และเลือกโดยใช้ ปุ่ม 3D

⚠ คำเตือน

หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมด จะถูกลบ โปรดอย่าลืมสำรองข้อมูล สำคัญไว้ก่อนทำ Hard Reset

5. การเปิดและการสลับ แอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

การหยุดแอปพลิเคชัน:

- 1 แอปพลิเคชัน > ตั้งค่า > แอปพลิเคชัน > บริการที่กำลังรัน
- 2 เลื่อนไปยังแอปพลิเคชันที่ต้องการ และแตะ หยุด เพื่อหยุด

เคล็ดลับ! ในการกลับไปยังแอปพลิเคชันก่อนหน้าให้กดปุ่ม หน้าจอหลักค้างไว้ หน้าจอจะแสดงรายการแอปพลิเคชันที่คุณใช้งานล่าสุด

6. การติดตั้งซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคลากร) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ

- เล่นเนื้อหาที่มีแต่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์อื่น

เคล็ดลับ! คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาวิธีการใช้งานซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บไซต์ของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ **การสนับสนุน** > **การสนับสนุนโทรศัพท์มือถือ** > **เลือกรุ่น (LG-P720h)**
- 3 คลิก **PC Sync** จาก **ดาวน์โหลด** และคลิก **WINDOW PC Sync** **ดาวน์โหลด** เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ **"LG PC Suite"**

ข้อกำหนดของระบบสำหรับซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต, Windows 7 32 บิต/64 บิต

- CPU: โพรเซสเซอร์ 1GHz หรือสูงกว่า
- หน่วยความจำ: 512MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

จำเป็นต้องใช้ไดรเวอร์ USB ในตัวของ LG ในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

7. การซิงโครไนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์

ข้อมูลของอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เพื่อความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ และบุคคมาค์ได้ด้วย

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
- 2 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
- 3 คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
- 4 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อชิงโครโนซ์ และคลิกที่ปุ่ม **ซิงค์**

8. ทำการถ่ายโอนเพลง ภายถ่าย และใช้อุปกรณ์เก็บข้อมูล USB

- 1 แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล เพื่อตรวจสอบสื่อเก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการจดความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 รายการโหมดการเชื่อมต่อ USB จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล
- 4 เปิดโพลเดอร์หน่วยความจำที่ถอดได้บนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์
- 5 คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโพลเดอร์ไดรฟ์

- 6 เมื่อดำเนินการเสร็จเรียบร้อย เลือกตัวเลือก **ซาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

9. ถือกีโทรศัพท์ตั้งขึ้น

ถือกีโทรศัพท์มือถือถือกีแนวตั้งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P720h มีเสาอากาศภายใน

ในขณะที่ทำการโทรออก/รับสายหรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถือกีบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

10. เมื่อนำจอค้าง

หากหน้าจอค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน: ถอดแบตเตอรี่ ใส่กลับเข้าไป แล้วเปิดโทรศัพท์ หรือ กดปุ่ม **เปิด/ปิดเครื่อง/ล็อค** ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิด หากยังไม่สามารถแก้ไขปัญหาก็โปรดติดต่อศูนย์บริการ

ส่วนประกอบอุปกรณ์



หมายเหตุ: เซนเซอร์รับสัญญาณ

เมื่อรับสายหรือโทรออก เซนเซอร์รับสัญญาณจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัสโดยการรับรูเมื่อโทรศัพท์อยู่ไกลหู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์

⚠ คำเตือน

การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่าปิด เซนเซอร์รับสัญญาณ LCD ด้วยฟิล์มป้องกันเนื่องจากอาจทำให้เซนเซอร์ทำงานผิดพลาดได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง



ช่องเสียบอุปกรณ์ชาร์จ, ช่องเสียบสายเคเบิล micro USB


ปุ่ม 3D

- ในหน้าจอหลัก: เข้าใช้เมนู 3D โดยตรงโดยกดปุ่มนี้ค้างไว้
- ในโหมดกล้องถ่ายรูป: ถ่ายภาพโดยกดปุ่มนี้
- การดูไฟล์ในคลังภาพ: สลับระหว่างโหมด 2D และ 3D ของการดูโดยกดแล้วปล่อยปุ่มนี้

ช่องใส่การ์ด microSD

เลนส์กล้องด้านหลัง


ช่องเสียบซิมการ์ด

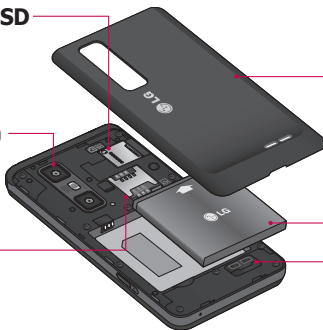


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ในการใส่ซิมการ์ดและแบตเตอรี่:

- 1 ในการถอดฝาครอบด้านหลัง ให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ใช้มือข้างหนึ่งของคุณ ดึงฝาครอบด้านหลังออกด้วยนิ้วหัวแม่มือของคุณตามที่แสดงไว้ในภาพ

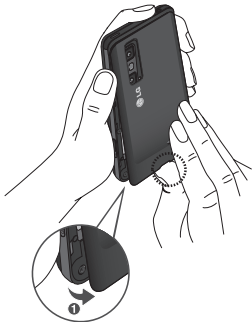

- 2 เลื่อนซิมการ์ดเข้าไปในช่องเสียบซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

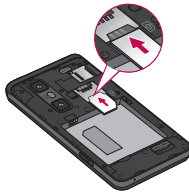

- 3 ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ (1) และค่อยๆ กดลงจนกว่าจะแน่นเข้าที่ (2)



- 4 วางฝาครอบด้านหลังบนช่องใส่แบตเตอรี่ (1) และกดลงจนกระทั่งแน่นเข้าที่ (2)

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



การชาร์จโทรศัพท์

เสียบและเปิดฝาปิดช่องเสียบอุปกรณ์ชาร์จที่ด้านหลัง เสียบอุปกรณ์ชาร์จและเสียบปลั๊กไฟเข้ากับเตาเสียบไฟ



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มตบใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่

การใช้การ์ดหน่วยความจำ

โทรศัพท์ของคุณสนับสนุนการ์ดหน่วยความจำ microSD™ หรือ microSDHC™ ความจุสูงสุด 32GB


การ์ดหน่วยความจำเหล่านี้ออกแบบมาโดยเฉพาะสำหรับโทรศัพท์มือถือและอุปกรณ์ที่มีขนาดเล็กมากขึ้นๆ และเหมาะสำหรับจัดเก็บไฟล์มีเดีย เช่น เพลง โปรแกรม วิดีโอ และภาพถ่ายสำหรับใช้กับโทรศัพท์ของคุณ

ในการใส่การ์ดหน่วยความจำ:

ใส่การ์ดหน่วยความจำลงในช่องเสียบโปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

การถอดการ์ดหน่วยความจำอย่างปลอดภัย:

แอปพลิเคชัน > ตั้งค่า > ที่เก็บข้อมูล > ยกเลิกการต่อเชื่อมการ์ด SD

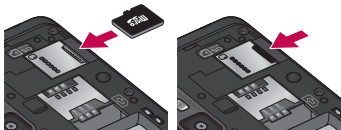


หมายเหตุ: ใช้งานเฉพาะการ์ดหน่วยความจำที่ใช้งานร่วมกันได้กับโทรศัพท์ของคุณเท่านั้น การใช้การ์ดหน่วยความจำที่ไม่สามารถใช้งานร่วมกันได้ อาจทำให้การ์ดและข้อมูลที่จัดเก็บไว้บนการ์ดรวมถึงโทรศัพท์เสียหายได้

คำเตือน: อย่าใส่หรือถอดการ์ดหน่วยความจำเมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดังกล่าวอาจทำให้การ์ดหน่วยความจำและโทรศัพท์ของคุณเสียหายได้ และข้อมูลที่เก็บในการ์ดหน่วยความจำอาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ: การ์ดหน่วยความจำของคุณอาจฟอร์แมตแล้ว หากยังไม่ได้ฟอร์แมต คุณต้องฟอร์แมตการ์ดหน่วยความจำก่อนจึงจะสามารถใช้งานการ์ดได้


หมายเหตุ: ไฟล์ทั้งหมดในการ์ดหน่วยความจำจะถูกลบออกเมื่อฟอร์แมต

- 1 บนหน้าจอหลัก ให้แตะแท็บ **แอปพลิเคชัน**  เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนและแตะ **ตั้งค่า > ที่เก็บข้อมูล**
- 3 แตะ **ยกเลิกการเชื่อมต่อการ์ด SD**
- 4 แตะ **ฟอร์แมตการ์ด SD > ฟอร์แมตการ์ด SD > ลบทุกสิ่ง**
- 5 หากคุณตั้งค่าล๊อคแบบ ให้ออนข้อมูลล๊อคแบบ แล้วเลือก **ลบทุกสิ่ง**


หมายเหตุ: หากมีข้อมูลอยู่ในการ์ดหน่วยความจำของคุณ โครงสร้างไฟล์เดอรอาจจะแตกต่างกันไปจากเดิมภายหลังการฟอร์แมต เนื่องจากไฟล์ทั้งหมดถูกลบออก

การล๊อคและปลดล๊อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล๊อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ได้ตั้งใจและประหยัดพลังงานแบตเตอรี่

ในขณะที่คุณไม่ได้ใช้งาน LG-P720h ให้กดปุ่มเปิด/ปิดเครื่อง/ล๊อค  เพื่อล๊อคโทรศัพท์ของคุณ

หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าหน้าจอล๊อค โปรแกรมเหล่านั้นอาจยังคงทำงานอยู่ในโหมดล๊อค ขอแนะนำให้อัปเกรดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล๊อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรหา/ออก, การเข้าเว็บไซต์ และการสื่อสารข้อมูล)

ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กดปุ่มเปิด/ปิดเครื่อง/ล๊อค  หน้าจอล๊อคจะปรากฏ และและเลื่อนล๊อคหน้าจอขึ้นเพื่อปลดล๊อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

การรักษาความปลอดภัยการล็อคหน้าจอ

คุณสามารถล็อคหน้าจอเพื่อให้คุณเพียงคนเดียวที่สามารถปลดล็อคเพื่อเข้าถึงโทรศัพท์ของคุณได้

การตั้งค่าแบบการปลดล็อค, PIN หรือรหัสผ่านเป็นครั้งแรก:

- แอปพลิเคชัน > ตั้งค่า > ฝึกและป้องกัน > ตั้งค่าล็อคหน้าจอ > รูปแบบ, PIN หรือรหัสผ่าน

เมื่อตั้งค่าแล้ว

คุณสามารถเปลี่ยนได้ในเมนูเปลี่ยนล็อคหน้าจอ

หมายเหตุ:

ข้อควรระวังเมื่อใช้ล็อคหน้าจอ

สิ่งสำคัญคือต้องจำแบบปลดล็อค Pin และรหัสผ่านที่คุณตั้งไว้ให้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้ หากคุณใช้แบบ Pin และรหัสผ่านไม่ถูกต้อง 5 ครั้ง คุณมีโอกาเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือรหัสผ่าน การปลดล็อคของคุณ:

- **หากคุณลืมรูปแบบ** : หากคุณล็อคอินบัญชี Google ในโทรศัพท์แต่ป้อนรูปแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม **ลืมแบบ** จากนั้น คุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล็อคโทรศัพท์ หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมคุณต้องทำการ Hard Reset
- **หากคุณลืม PIN หรือ รหัสผ่าน**: หากคุณลืม PIN หรือรหัสผ่านคุณต้องทำการ Hard Reset

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนำวิถีโทรศัพท์ของคุณ

แตะ – ในการเลือกเมนู/ตัวเลือก หรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/ตัวเลือกนั้น

แตะค้างไว้ – ในการเปิดเมนูตัวเลือกหรือจับวัตถุที่คุณต้องการย้าย ให้แตะวัตถุที่คุณต้องการย้ายค้างไว้

ลาก – ในการเลื่อนดูรายการหรือเคลื่อนที่ซ้ำๆ ให้ลากผ่านหน้าจอ

ลากนิ้ว – ในการเลื่อนดูรายการหรือเคลื่อนที่อย่างรวดเร็ว

ให้ตัวนิ้วผ่านหน้าจอสัมผัส (ลากอย่างรวดเร็วแล้วปล่อย)

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการระงับยาแตะโดนปุ่มอื่นๆ

หน้าจอหลัก

เพียงเสือนิ้วไปทางซ้ายหรือขวาเพื่อดูพาเนล นอกจากนี้ คุณยังสามารถปรับแต่งพาเนลด้วย Widget, ปุ่มลัดไปยังแอปพลิเคชัน โฟลเดอร์ และภาพพื้นหลังที่ชื่นชอบ




หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ


ในหน้าจอหลัก คุณสามารถปุ่มดาวน์ได้ที่ด้านล่างหน้าจอ ปุ่มดาวน์จะทำให้สามารถเข้าใช้งานฟังก์ชันที่ชื่นชอบได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

 **แตะไอคอน โทรศัพท์** เพื่อแสดงปุ่มหมายเลขแบบสัมผัสสำหรับใช้โทรออก

 **แตะไอคอน รายชื่อ** เพื่อเปิดรายชื่อ

หน้าจอหลักของคุณ


 **แตะไอคอน ขอความ** เพื่อเข้าใช้เมนูขอความ นี่คือที่ซึ่งคุณสามารถสร้างขอความใหม่ได้

 **แตะแท็บ แอปพลิเคชัน** ด้านล่างหน้าจอ คุณสามารถดูแอปพลิเคชันที่ติดตั้งทั้งหมดได้ ในการเปิดแอปพลิเคชัน เพียงแตะไอคอนในรายการแอปพลิเคชัน


การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่ม Widget, ข้อความ, โฟลเดอร์ หรือพื้นหลัง เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่ม Widget ที่ชื่นชอบในหน้าจอหลัก

การเพิ่มรายการในหน้าจอหลัก:


- 1 หน้าจอหลัก > เมนู  > เพิ่ม หรือแตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก
- 2 ในเมนู **โหมดแก้ไข** ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณ จะเห็นรายการที่เพิ่มบนหน้าจอหลัก
- 3 ลากไปยังตำแหน่งที่คุณต้องการ แล้วปล่อยนิ้ว

การลบรายการจากหน้าจอหลัก:

- หน้าจอหลัก > แตะที่ไอคอนที่ต้องการลบค้างไว้ > ลากไปยัง 

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปพลิเคชัน ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

การปรับแต่งการออกแบบแอปพลิเคชันจากหน้าจอหลัก

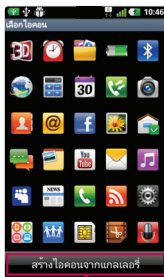

หมายเหตุ:

ให้คุณสร้างและใช้ไอคอนโดยใช้รูปภาพในคลังภาพของคุณ



คุณสามารถแก้ไขไอคอนแอปพลิเคชันบนหน้าจอหลักตามความต้องการของคุณได้

- 1 แตะค้างไว้ที่แอปพลิเคชันที่จะปรับแต่ง จากนั้นไอคอนการแก้ไขจะปรากฏขึ้นที่มุมบนขวาของไอคอน

แอปพลิเคชัน

2. แตะไอคอนการแก้ไขและเลือกการออกแบบไอคอนที่ต้องการ

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

1. แตะปุ่มหน้าหลักค้างไว้  หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
2. แตะไอคอนเพื่อเปิดแอปพลิเคชันหรือแตะปุ่ม **กลับ**  เพื่อกลับไปแอปพลิเคชันปัจจุบันของคุณ

แถบการแจ้งเตือน

แถบการแจ้งเตือนอยู่ด้านบนสุดของหน้าจอ




เสียง/
สั่น/
เงียบ

Wi-Fi

บลูทูธ

GPS

เปิดใช้
ข้อมูล
แล้ว

แตะและเลื่อนแถบการแจ้งเตือนลงด้วยนิ้วมือหรือ ในหน้าจอหลัก กดปุ่ม **เมนู**  แล้วเลือก **การแจ้งเตือน** ในหน้าจอนี้คุณสามารถตรวจสอบเสียง/สั่น/เงียบ,

Wi-Fi, บลูทูธ, เครื่องเล่นเพลง ฯลฯ

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายุแบตเตอรี่, Wi-Fi หรือบลูทูธที่ใช้งาน และการเชื่อมต่อข้อมูล



ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

| ไอคอน | รายละเอียด |
|---|-----------------------------|
|  | ไม่มีซิมการ์ด |
|  | ไม่มีสัญญาณ |
|  | โหมดเครื่องบิน |
|  | เชื่อมต่อกับเครือข่าย Wi-Fi |
|  | ชุดหูฟังแบบใช้สาย |
|  | กำลังใช้สาย |
|  | พักสาย |
|  | ลำโพง |
|  | ปิดโมโครโฟนโทรศัพท์ |
|  | สายไม่ได้รับ |
|  | เปิดบลูทูธ |

หน้าจอหลักของคุณ

| ไอคอน | รายละเอียด |
|--|--|
|  | เชื่อมต่อกับอุปกรณ์บลูทูธ |
|  | ค่าเตือนระบบ |
|  | ตั้งปลุก |
|  | ข้อความเสียงใหม่ |
|  | ปิดเสียงเรียกเข้า |
|  | โหมดสั้น |
|  | ชาร์จแบตเตอรี่เต็มแล้ว |
|  | กำลังชาร์จแบตเตอรี่ |
|  | ข้อมูลเข้าและออก |
|  | โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB |
|  | กำลังดาวน์โหลดข้อมูล |
|  | กำลังอัปโหลดข้อมูล |
|  | กำลังรับสัญญาณ GPS |
|  | กำลังรับข้อมูลตำแหน่งจาก GPS |
|  | เชื่อมต่อ On-Screen Phone |
|  | 3 การแจ้งเตือนไม่ได้ดู |
|  | กำลังซิงค์ข้อมูล |
|  | ดาวน์โหลดเสร็จสิ้น |
|  | Gmail ใหม่ |



| ไอคอน | รายละเอียด |
|---|--|
|  | ข้อความ Google Talk ใหม่ |
|  | ข้อความใหม่ |
|  | กำลังเล่นเพลง |
|  | เหตุการณ์ที่จะเกิดขึ้น |
|  | เปิดวิทยุ FM ในแบ็คกราวด์ |
|  | กำลังใช้งานการปล่อยสัญญาณผ่าน USB |
|  | กำลังใช้งาน Portable Wi-Fi hotspot |
|  | กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot |

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกด และ การป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

  แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณสามารถแตะแท็บนี้ค้างไว้เพื่อดูเมนูตั้งค่าได้

 แตะเพื่อดูหรือแตะค้างเพื่อเปลี่ยนภาษาที่ใช้เขียน

 แตะ หรือสัมผัสค้างไว้ เพื่อแทรกอีโมติคอนขณะเขียนข้อความ

 แตะเพื่อย้อนวรรค

 แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

 แตะเพื่อลบตัวอักษรก่อนหน้า

 แตะเพื่อซ่อนแป้นพิมพ์บนหน้าจอ

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปน เป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á")

ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มซุมเขาจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่ายเพื่อลงชื่อเข้าใช้แอคเคาท์ Google และเลือกรหัสการให้บริการ Google ที่คุณต้องการ

จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การตั้งค่าแอคเคาท์ Google ของคุณ:

- ลงชื่อเข้าใช้แอคเคาท์ Google จากหน้าจอตั้งค่าที่แสดง

หรือ

- แอปพลิเคชัน > เลือกแอปพลิเคชัน Google เช่น **Gmail** > เลือก **สร้าง** เพื่อสร้างแอคเคาท์ใหม่


หากคุณมีแอคเคาท์ Google ให้ป้อนอีเมลแอดเดรสและรหัสผ่านของคุณ จากนั้นแตะ **ลงชื่อเข้าใช้**

เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากใช้นั้นคุณสามารถใช้ Gmail™ และใช้ประโยชน์


เมนู 3D

กดปุ่ม 3D ที่ด้านขวาของโทรศัพท์
ค้างไว้เพื่อเข้าใช้  เมนู 3D ซึ่งจะ
แสดงเนื้อหา 3D เช่น YouTube 3D,
คลังภาพ 3D, กล้อง 3D และ คู่มือ 3D

คู่มือ 3D

คู่มือ 3D มีคำแนะนำที่ช่วยให้ใช้งาน
เนื้อหา 3D ด้วยโทรศัพท์ได้ง่ายขึ้น
ซึ่งจะแนะนำวิธีสร้างภาพ 3D,
เชื่อมต่อกับทีวี 3D ผ่านทาง MHL,
ดูเนื้อหา 3D และการแบ่งปัน


คลังภาพ 3D

- 1 **แตะ  คลังภาพ 3D** ภาพ 3D
จะแสดงเป็นรายการ
- 2 **เลือกภาพที่คุณต้องการดู**

หมายเหตุ

- เนื้อหา 3D เหมาะสำหรับการรับชมด้วยจอภาพ
ที่อยู่ด้านหลังของคุณในระยะ 30~40 ซม.
- จำเป็นต้องตั้งค่าเนื้อหาในรูปแบบ 3D
ที่เหมาะสม เพื่อความเพลิดเพลินกับเอฟเฟกต์
3D หากเนื้อหาไม่แสดงผลเป็น 3D ให้เปลี่ยน
รูปแบบโดยใช้ระบบกำหนดรูปแบบ 3D

3D เกมส์&แอปฯ

- 1 **แตะ  3D เกมส์&แอปฯ**
แล้วเกมส์และแอปพลิเคชัน 3D
ที่คุณดาวน์โหลดมาจาก Market
จะปรากฏขึ้น แอปพลิเคชันสี่รายการ
เช่น Asphalt6, Let's Golf2,

Nova, Gulliver's Travels
จะให้มาเป็นแอปพลิเคชันเริ่มต้น


ตัวแปลงเกมส์ 3D

คุณสามารถสนทนากับเกมส์
2D ที่เป็นที่นิยมในแบบ 3D
ได้ด้วยตัวแปลงเกมส์ 3D ที่ใช้เอ็นจิน
HRZ

เกมส์ที่คุณเพิ่มในรายการตัวแปลง
เกมส์ 3D จะถูกแปลงเป็น 3D แบบ
เรียลไทม์เมื่อคุณกดปุ่มฮอตคีย์ 3D
ทางด้านขวาของโทรศัพท์

- 1 **แตะแท็บ แอปพลิเคชัน แล้วเลือก
ตัวแปลงเกมส์ 3D**
- 2 **แตะ  และเลือกเกมส์ที่
คุณต้องการ**

3 **คุณสามารถเล่นเกมส์ในรายการตัว
แปลงเกมส์ 3D ในแบบ 3D**
ในกรณีที่คุณลงทะเบียนเกมส์แบบ
ปรับแต่งเองได้ คุณสามารถตั้งค่า
**คุณภาพ, ความลึกของภาพ 3D,
ระดับความลึก** ได้ในตั้งค่า 3D


- 1 **แตะ  ในรายการเกมส์**
- 2 **บันทึกค่าหลังจากการตั้งค่า
ประกาศ**

ตัวแปลงเกมส์ 3D ทำงานในเกมส์ 2D
แบบ OpenGL เท่านั้น

หมายเหตุ: การแปลง3D ไม่มีค่าบริการ

เมนู 3D

กล้อง 3D

- 1 แตะ  กล้อง 3D และหน้าจอจะเปลี่ยนไปเป็นโหมดกล้อง 3D ในการสร้างรูปถ่าย 3D และการบันทึก 3D โปรดดูที่รูปภาพและวิดีโอ 3D ในหน้าก่อนหน้า

YouTube 3D

- 1 แตะ YouTube 3D เพื่อเริ่มเมื่อหน้าจอสลับไปเป็นเว็บ YouTube 3D วิดีโอ 3D ต่างๆ จะปรากฏขึ้น
- 2 เลือกวิดีโอที่คุณต้องการดู วิดีโอจะปรากฏในรูปแบบต่อเนื่องในโหมดแนวตั้ง
- 3 หมุนเป็นแนวนอน แล้วโหมด 3D จะเปิดขึ้นโดยอัตโนมัติ

สำรองข้อมูล

เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของสมาร์ตโฟน

ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในการ์ดเก็บข้อมูลเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลสมาร์ตโฟนได้ หากสมาร์ตโฟนของคุณสูญหาย ถูกขโมย หรือเสียหายจากปัญหาที่ไม่คาดคิด แอปพลิเคชันสำรองข้อมูลนี้สนับสนุนระหว่างสมาร์ตโฟน LG, เวอร์ชันซอฟต์แวร์อื่น หรือ OS อื่น นอกจากนั้น เมื่อคุณซื้อสมาร์ตโฟน LG ใหม่ คุณสามารถสำรองข้อมูลสมาร์ตโฟน LG-P720h ปัจจุบันไปยังเครื่องใหม่ของคุณได้


หากคุณมีแอปพลิเคชันสำรองและเรียกคืนโพลีโวลว่งหนาในสมาร์ตโฟนของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลสมาร์ตโฟนของคุณส่วนใหญ่, แอปพลิเคชัน รวมถึงแอปพลิเคชันที่ไม่มีมีการป้องกันและการตั้งค่า, บุคลากร, ปฏิทิน, บันทึกการโทร, รายชื่อ, แอปพลิเคชันที่ติดตั้งไว้ก่อน, หน้าจอหลัก, ข้อความ, แอปพลิเคชันที่ติดตั้งไว้ก่อน และการตั้งค่าระบบ โดยใช้แอปพลิเคชันนี้ได้

- การสำรองข้อมูลสมาร์ตโฟน

ด้วยตัวเอง

- การกำหนดเวลาสำรองข้อมูลสมาร์ตโฟนอัตโนมัติ
- การเรียกคืนข้อมูลสมาร์ตโฟน

สำรองข้อมูลสมาร์ตโฟน

- 1 ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล
- 2 แตะแท็บ **แอปพลิเคชัน**  แล้วเลือก **สำรองข้อมูล** > **สำรองข้อมูล** > **การดักเก็บข้อมูล** หรือ **หน่วยความจำภายใน**
- 3 แตะ **เพิ่มใหม่** เพื่อป้อนชื่อสำหรับไฟล์สำรอง แล้วเลือก **ทำต่อ**
- 4 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการสำรอง แล้วเลือก **ทำต่อ** เพื่อสำรองข้อมูล
- 5 เมื่อสำรองข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ 'เสร็จ' จากนั้นเลือก **ทำต่อ** เพื่อเสร็จสิ้นการสำรองข้อมูล

การกำหนดเวลาสำรองข้อมูลอัตโนมัติ

คุณสามารถเปิดใช้การสำรองข้อมูลในสมาร์ตโฟนโดยอัตโนมัติตามการตั้งค่ากำหนดเวลาได้ ในการดำเนินการนี้ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

- 1 ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล


สำรองข้อมูล

- 2 แตะแท็บ แอปพลิเคชัน  แล้วเลือก สำรองข้อมูล > **นัดหมาย**
- 3 ในหน้าจอ ตำแหน่งสำรองข้อมูล ตามกำหนดเวลา ให้แตะ การ์ดเก็บข้อมูล หรือ หน่วยความจำภายใน
- 4 จากรายการ ให้เลือกความถี่ที่คุณต้องการให้สำรองข้อมูลและการตั้งค่าอุปกรณ์ แล้วเลือก **ทำต่อ**
- 5 เลือกช่องทำเครื่องหมายข้างข้อมูลที่ คุณต้องการสำรอง แล้วเลือก **ทำต่อ** เพื่อเสร็จสิ้นการตั้งค่ากำหนดเวลา

การเรียกคืนข้อมูลสมาร์ตโฟน

ในการเรียกคืนข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์ออนไลน์ ต้องปิดโหมดที่เก็บข้อมูล

หมายเหตุ: ไฟล์ทั้งหมดที่เก็บไว้ในสมาร์ตโฟนจะถูกลบก่อนเรียกคืนไฟล์สำรอง

- 1 ใส่การ์ดหน่วยความจำในช่องเสียบ และตรวจสอบสถานะที่เก็บข้อมูล
- 2 แตะแท็บ แอปพลิเคชัน  แล้วเลือก สำรองข้อมูล > **เรียกคืน** > **การ์ดเก็บข้อมูล** หรือ **หน่วยความจำภายใน**


- 3 ในหน้าจอ **เรียกคืน** ให้เลือกไฟล์สำรองที่มีข้อมูลที่คุณต้องการเรียกคืน
- 4 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการเรียกคืน แล้วเลือก **ทำต่อ** เพื่อเรียกคืนไปยังโทรศัพท์

หมายเหตุ: โปรดทราบว่าข้อมูลโทรศัพท์ของคุณจะถูกบันทึกทับด้วยเนื้อหาจากการสำรองของคุณ

- 5 หากไฟล์สำรองถูกเข้ารหัส ให้พิมพ์รหัสผ่านที่คุณตั้งค่าเพื่อเข้ารหัส
- 6 เมื่อเรียกคืนไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ **'เสร็จ'** จากนั้นเลือก **ใช่** เพื่อรีเซ็ตโทรศัพท์


หมายเหตุ:

- ขณะอยู่ในโหมดที่เก็บข้อมูล แอปพลิเคชันสำรองและเรียกคืนนี้จะไม่สามารถทำงานได้ เลือกตัวเลือกซาร์ทเท่านั้นเมื่อเชื่อมต่อสาย USB
- คุณสามารถตั้งค่าเปิดใช้งานการเข้ารหัสเพื่อเข้ารหัสไฟล์สำรองของคุณเพื่อเพิ่มการป้องกัน

กด **เมนู**  จากหน้าจอ **สำรองข้อมูล** และเลือก **ตั้งค่า** > **ระบบป้องกัน** และเลือกช่องทำเครื่องหมาย

และหลังจากการเปิดใช้การเข้ารหัส
ในการเรียกคืนข้อมูลสมุดบันทึกที่ซิงโคร
ไนซ์ คุณต้องมีรหัสผ่านการเปิดใช้


หมายเหตุ:

คุณสามารถเปิดใช้การลบการสำรองเก็บ
อัตโนมัติและเก็บไว้เฉพาะการสำรองล่าสุด
ได้ กดเมนู  จากหน้าจอสำรองข้อมูล
และเลือก ตั้งค่า > สำรองข้อมูลตาม
กำหนดเวลา > ลบการสำรองเก็บอัตโนมัติ
เพื่อเลือกจำนวนการสำรองตามกำหนด
เวลาที่จะเก็บไว้



การโทร

การโทรออก

- 1 และ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้แตะ 
- 3 และ  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอนวางสาย 

เคล็ดลับ! ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ |0+

การโทรแบบสนทนาทางวิดีโอ

- 1 และ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโทรศัพท์เหมือนเช่นเคย
- 3 และไอคอน **สนทนาทางวิดีโอ**  เพื่อโทรสนทนาทางวิดีโอ
- 4 หากคุณไม่ต้องการใช้ลำโพง ให้แตะ **ลำโพง** และตรวจสอบให้แน่ใจว่าคุณได้เสียบชุดหูฟังแล้ว
- 5 ขณะเชื่อมต่อการสนทนาทางวิดีโอ คุณจะเห็นภาพของตนเอง: หลังจากผู้รับรับสายแล้ว คุณจะเห็นภาพของผู้รับบนหน้าจอ ปรับตำแหน่งกล้องภายในตามต้องการ
- 6 ในการวางสาย ให้แตะ **วางสาย**
ส่วนตัว: คุณสามารถเปลี่ยนภาพอื่นแทนภาพจริงที่กำลังแสดงได้
ปุ่มหมายเลข: ป้อนหมายเลข

พัก: ปิดเสียงไมโครโฟน และหยุดภาพวิดีโอชั่วคราว

ปิดเสียง: ปิดเสียงไมโครโฟน


ลำโพง: เปิดหรือปิดลำโพง

ในเมนูสนทนาทางวิดีโอ

ถ่ายภาพ - คุณสามารถถ่ายภาพอีกฝ่ายหนึ่งหรือตัวคุณเองได้


ใช้กล้องด้านหลัง/ด้านหน้า - สลับกล้องถ่ายรูป

การโทรออกโดยใช้รายชื่อ

- 1 และ  เพื่อเปิดรายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **ค้นหา**
- 3 ในรายชื่อ ให้แตะรายชื่อที่คุณต้องการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อคุณได้รับสายเรียกเข้าในสถานะ **ล็อค** ให้ลาก  ไปทางขวาเพื่อรับสายเรียกเข้า

ลากไอคอน  ไปทางซ้ายเพื่อปฏิเสธสายเรียกเข้า

ลากแถบ **ข้อความขอโทษ** จากด้านล่าง หากต้องการส่ง

เคล็ดลับ! ข้อความขอโทษ

คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการตอบกลับข้อความในระหว่างการประชุม

การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์

การใช้สายที่ส่ง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **ปุ่มหมุนหมายเลข** และหมุนหมายเลข นอกจากนี้คุณสามารถค้นหาได้โดยแตะรายชื่อ และเลือกหมายเลขที่คุณต้องการออก
- 2 แตะ **โทรออก**
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล๊อคและพักสายไว้
- 4 แตะหมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่ **รวมสาย** เพื่อทำการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้แตะ **วางสาย** หรือกดปุ่ม **หน้าหลัก**

และเลื่อนแถบการแจ้งเตือน และเลือก **วางสาย**

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดับบันทึกการโทร

บนหน้าจอหลัก ให้แตะ **บันทึกการโทร** และเลือก **บันทึกการโทร**

ดูรายการสายที่โทรออก ได้รับ ไม่ได้รับ และโทรด้วยเสียงทั้งหมด

เคล็ดลับ!

- แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร
- กดปุ่ม **เมนู** จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ


- 1 บนหน้าจอหลัก ให้แตะ **แอปพลิเคชัน** เพื่อเปิดเมนูแอปพลิเคชัน
- 2 เลื่อนแล้วแตะ **ตั้งค่า**
- 3 แตะ **โทร** และเลือกตัวเลือกที่คุณต้องการปรับ

รายชื่อ



เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

ในหน้าจอหลัก

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ ค้นหา และป้อนชื่อโดยใช้แป้นพิมพ์


การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วกดปุ่ม เมนู แตะแท็บ เพิ่มในรายชื่อ และสร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพเลือกจาก ภาพถ่าย หรือเลือกจากคลังภาพ
- 3 เลือกประเภทรายชื่อโดยแตะ 
- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ
- 5 แตะ บันทึก


รายชื่อเพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท



- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวทางด้านขวาของชื่อ กรอบไอคอนดาวจะกลายเป็นสีขาว

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะที่แท็บ กลุ่ม เลือกรายการโปรด ที่ด้านบนสุดของรายการ แล้วเลือกรายชื่อที่ต้องการดูรายละเอียด
- 3 แตะที่กรอบดาวสีขาวทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายชื่อเพื่อนสนิท

อิมพอร์ตหรือเอ็กซ์พอร์ตรายชื่อ

ในการอิมพอร์ต/เอ็กซ์พอร์ตไฟล์รายชื่อ (ในรูปแบบ vcf) จากหน่วยความจำที่จัดเก็บ (ที่เก็บข้อมูลภายใน/การ์ดหน่วยความจำ) หรือ SIM หรือ USIM การดไปยังอุปกรณ์ของคุณหรือออกจากอุปกรณ์ของคุณ

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 กด เมนู  > อื่นๆ > อิมพอร์ต/เอ็กซ์พอร์ต
- 3 เลือกตัวเลือกที่ต้องการในการ

อีเมลปอร์ต/เอ็กซ์ปอร์ต หากคุณมีมากกว่าหนึ่งแอดเดสเลือกแอดเดสที่ คุณต้องการเพิ่มรายชื่อ

- 4 เลือกไฟล์รายชื่อเพื่ออีเมลปอร์ต/เอ็กซ์ปอร์ต แล้วเลือก **ตกลง** เพื่อยืนยัน

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

เอ็กซ์ปอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync


- 1 ติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" บนคอมพิวเตอร์ เรียกใช้โปรแกรมและเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 จากด้านบนสุดของหน้าจอ เลือก **อุปกรณ์ > อิมพอร์ตข้อมูลส่วนตัว > อิมพอร์ตรายชื่อ**
- 3 จะมีป๊อปอัปสำหรับการเปิดไฟล์รายชื่อปรากฏขึ้น
- 4 เลือกไฟล์รายชื่อและคลิก **เปิด**
- 5 ป๊อปอัปสำหรับการอิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ ไปยังรายชื่อในอุปกรณ์จะปรากฏขึ้น
- 6 หากรายชื่อในอุปกรณ์และรายชื่อใหม่จากคอมพิวเตอร์ไม่เหมือนกัน ให้เลือกรายชื่อที่คุณต้องการ

- 7 อิมพอร์ตจากคอมพิวเตอร์คลิกปุ่ม [ตกลง] เพื่ออิมพอร์ตรายชื่อใหม่จากคอมพิวเตอร์ลงในอุปกรณ์


ข้อความ

โทรศัพท์ LG-P720h ของคุณได้
ผสมผสาน SMS และ MMS ไว้ในเมนู
ที่ใช้งานเพียงเมนูเดียว

การส่งข้อความ

- 1 **แตะไอคอน**  บนหน้าจอหลัก
และแตะ **ข้อความใหม่**
เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของ
รายชื่อในฟิลด์ ถึง ขณะที่คุณป้อน
รายชื่อ รายชื่อที่ตรงกันจะปรากฏขึ้น
คุณสามารถแตะผู้รับที่แนะนำได้ คุณ
สามารถเพิ่มรายชื่อหลายรายการได้

บันทึก: คุณจะต้องเสียค่าใช้จ่าย
สำหรับข้อความตัวอักษรในการส่ง
ข้อความให้กับผู้รับทุกคน

- 3 **แตะฟิลด์ป้อนข้อความ** และเริ่มต้น
เขียนข้อความ
- 4 กดปุ่ม **เมนู**  เพื่อเปิดเมนูตัวเลือก
เลือกจาก **เพิ่มชื่อเรื่อง,**
ยกเลิก, เพิ่ม Cc/Bcc, แนบ,
แทรกสโมลล์ และอื่นๆ
- 5 **แตะที่ ส่ง** เพื่อส่งข้อความ
- 6 หน้าจอจะเปิดขึ้น พร้อมมีชื่อ/หมายเลขผู้รับตามด้วยข้อความ การตอบ
กลับปรากฏบนหน้าจอ ขณะที่คุณดู
และส่งข้อความเพิ่มเติม
เรดข้อความจะถูกสร้างขึ้น

คำเตือน:

การจำกัดตัวอักษรที่ 160 ตัวอักษร
อาจจะแตกต่างกันไปในแต่ละ
ประเทศขึ้นอยู่กับภาษาและวิธีการ
เข้ารหัส SMS

คำเตือน:

หากมีการใส่รูปภาพ, วิดีโอ
หรือไฟล์เสียงลงในข้อความ SMS
ข้อความดังกล่าวจะถูกแปลงเป็น
ข้อความ MMS โดยอัตโนมัติ
ซึ่งคุณจะต้องเสียค่าใช้จ่ายตามนั้น

กล่องเรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับ
บุคคลอื่นสามารถแสดงเรียงตามลำดับ
เวลาเพื่อให้คุณสามารถดูภาพรวมของ
การสนทนาได้อย่างสะดวก



การใช้สโมลล์

ทำให้ข้อความของคุณสนุกสนานมากขึ้น
ด้วยการใช้สโมลล์

เมื่อเขียนข้อความใหม่ ให้กดปุ่ม **เมนู**
 แล้วเลือก **แทรกสโมลล์** ใน **อื่นๆ**

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ LG-P720h จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ

แตะไอคอน **ข้อความ**  บนหน้าจอลหลัก จากนั้นแตะปุ่ม **เมนู**  แล้วแตะ **ตั้งค่า**

อีเมล

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Gmail ได้ แอปพลิเคชัน อีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณ สามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

การเพิ่มแอคเคาท์อีเมลอื่น:

1 แอปพลิเคชัน > อีเมล >
ในหน้าจอแอคเคาท์ **แตะ เมนู > เพิ่มแอคเคาท์**
หลังจากการตั้งค่าครั้งแรก อีเมล จะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

1 แอปพลิเคชัน > อีเมล > ในหน้าจอแอคเคาท์ **แตะ เมนู > ตั้งค่า**

การลบแอคเคาท์อีเมล:


1 แอปพลิเคชัน > อีเมล

> ในหน้าจอแอคเคาท์ **แตะ เมนู > ตั้งค่า > แตะแอคเคาท์ที่คุณต้องการลบ > ลบแอคเคาท์**

2 แตะปุ่ม นำออก ในกล่องโต้ตอบ เพื่อยืนยันว่าคุณต้องการลบแอคเคาท์นั้น

หน้าจอแอคเคาท์อีเมล

คุณสามารถแตะที่แอคเคาท์เพื่อดู แถบเข้า แอคเคาท์ที่คุณใช้สำหรับส่ง อีเมลตามค่าเริ่มต้นจะมีเครื่องหมายถูกเลือกไว้ด้วย

 - แตะเพื่อเปิดแถบเข้ารวม ซึ่งมีข้อความที่ส่งถึงแอคเคาท์ของคุณทั้งหมด ข้อความใน แถบเข้ารวม จะมีรหัสสีแสดงอยู่ทางด้านซ้าย แบ่งตามแอคเคาท์ โดยสีที่ไขว้จะเป็นสีเดียวกับที่ไขว้กับแอคเคาท์ในหน้าจอ แอคเคาท์

 - แตะไอคอนโฟลเดอร์เพื่อเปิด โฟลเดอร์แอคเคาท์


อีเมลล่าสุดในแอคเคาท์เท่านั้นที่จะถูก ดาวน์โหลดลงในโทรศัพท์ของคุณ ในการดาวน์โหลดข้อความอีเมลเพิ่มเติม (ก่อนหน้า) ให้แตะ **โหลดอีเมลเพิ่มเติม** (ไม่สนับสนุนแอคเคาท์ Exchange) ที่ด้านล่างของรายการอีเมล

การทำงานกับไฟล์เดอร์แอดเคาท

แต่ละแอดเคาทประกอบด้วยไฟล์เดอร์
ภาคเข้า, ภาคออก, ส่งแล้ว และ ร่าง
ทั้งนี้คุณอาจมีไฟล์เดอร์อื่นนอกเหนือ
จากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการ
แอดเคาทของคุณสนับสนุน

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ

- 1 ในขณะที่อยู่ในแอปพลิเคชัน อีเมล
ให้แตะที่  เพื่อ **เขียนข้อความ**
- 2 ป้อนแอดเดรสของผู้รับที่ต้องการส่ง
ข้อความ เมื่อคุณป้อนตัวอักษร แอด
เดรสที่ตรงกันจากรายชื่อของคุณจะ
แสดงขึ้น ค้นแอดเดรสแต่ละแอด
เคาทด้วยเครื่องหมายอัฒภาค
- 3 เพิ่ม Cc/Bcc และเพิ่มไฟล์สิ่งที่แนบ
หากต้องการ
- 4 ป้อนตัวอักษรในข้อความ
- 5 แตะปุ่ม **ส่ง** หากคุณไม่ได้เชื่อมต่อกับ
เครือข่าย ตัวอย่างเช่น หากคุณ
กำลังใช้งานในโหมดเครื่องบิน
ข้อความที่คุณต้องการส่งจะถูกเก็บ
ในไฟล์เดอร์ ภาคออก จนกว่าจะ
เชื่อมต่อกับเครือข่ายอีกครั้ง
หากมีข้อความที่กำลังรอส่งอยู่
ภาคออก จะปรากฏบนหน้าจอ
แอดเคาท

เคล็ดลับ!

เมื่อภาคเข้ามีอีเมลใหม่เข้ามา คุณจะ
จะได้รับแจ้งด้วยเสียงพร้อมการสั่น

กล้องถ่ายรูป


ทำความรู้จักกับช่องมองภาพ



หมายเหตุ: ความจของหน่วยความจำอาจแตกต่างกัน โดยขึ้นอยู่กับภาพที่ถ่ายหรือสภาพของการถ่าย

- 1 สลับกล้องถ่ายรูป** - คุณสามารถย้ายไปที่กล้องภายในจากกล้องนอกได้
- 2 ซูม** - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้
- 3 ความสว่าง** - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง “-” เพื่อลดความสว่างของภาพหรือเลื่อนไปทาง “+” เพื่อเพิ่มความสว่าง
- 4 แฟลช** - ให้คุณเปิดแฟลชเมื่อถ่ายภาพในที่มืด
- 5 ตั้งค่า** - แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้งานตั้งค่าขั้นสูง
- 6 การเปลี่ยนระหว่างโหมด 2D - 3D** - แตะเพื่อสลับโหมดถ่ายภาพระหว่าง 2D และ 3D
- 7 การถ่ายภาพ**
- 8 โหมดวิดีโอ** - แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดวิดีโอ
- 9 คลังภาพ** - แตะรูปภาพล่าสุดที่คุณเพิ่งถ่ายเพื่อดู คุณสามารถเข้าดูคลังภาพและดูภาพถ่ายที่บันทึกไว้ภายในโหมดกล้องถ่ายรูป

การถ่ายภาพด่วน





- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 ถู้อโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 แตะไอคอน ถ่ายภาพ  เพื่อบันทึกภาพถ่าย

เมื่อคุณถ่ายภาพแล้ว

แตะ  เพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย


 แตะ **เมนู > แบ่งปัน** เพื่อแบ่งปันภาพถ่ายโดยใช้ **ข้อความ, Social+, บลูทูธ, Picasa, Google+, Gmail, อีเมล** หรือ **SmartShare**


เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันรูปภาพของคุณกับชุมชน SNS ได้

-  แตะ **เมนู > เพิ่มเติม > ตั้งเป็น** เพื่อใช้ภาพถ่ายเป็น **ไอคอนรายชื่อ** หรือ **พื้นหลัง**
-  แตะ **เมนู > เพิ่มเติม > แก้ไข** เพื่อแก้ไขรูปภาพ
-  แตะ **เมนู > ลบ > ยืนยันการลบ** เพื่อลบรูปภาพ
-  แตะเพื่อไปยังหน้าจอช่องมองภาพ

การใช้การตั้งค่าขั้นสูง


ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด


 – เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป

 แตะเมื่อใดก็ตามที่คุณต้องการทราบวาฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อกับคุณ


เปลี่ยนแปลงการตั้งค่ากล้องถ่ายรูปโดยการเลื่อนรายการ หลังจากเลือกตัวเลือกให้แตะปุ่ม **กลับ**

 – โฟกัสเฉพาะจุด


 – เลือกความละเอียดภาพ หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่าคุณสามารถจัดเก็บรูปภาพในหน่วยความจำได้น้อยลง

 – ค้นหาการตั้งค่าสีและแสงสว่างที่เหมาะสมกับสภาพแวดล้อมในปัจจุบัน เลือกจาก **ปกติ, รูปคน, ทิวทัศน์, พระอาทิตย์ตก** และ **กลางคืน**

 – ปรับปรุงคุณภาพสีในสภาพแสงต่าง ๆ

 – เลือกโทนสีสำหรับภาพถ่ายใหม่ เลือกกระหว่าง **ไม่มี, ขาวดำ, สีซีเปีย, เนกาทีฟ**


กล้องถ่ายรูป

 – ถ่ายภาพในเวลาสองสามวินาทีหลังจากคลิกที่ชัตเตอร์ ตัวเลือกนี้เหมาะสมในกรณีที่คุณต้องการถ่ายรูปตนเอง

 – เลือกโหมดชัตเตอร์ที่คุณต้องการ

 – ช่วยให้คุณสามารถตรวจสอบภาพหลังจากการบันทึกภาพได้

 – เลือกเสียงชัตเตอร์เสียงใดเสียงหนึ่งจากสี่เสียง

 – เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการและแก้ไขรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปเดตรูปภาพที่แท้กไปยังบล็อกที่สนับสนุนแท้กตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่

หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งาน GPS เท่านั้น


 – เลือกที่เก็บข้อมูลเพื่อจัดเก็บภาพ

เคล็ดลับ! เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง ตัวตั้งเวลา และโหมดภาพ ตรวจสอบค่าเหล่านี้ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ! เมนูการตั้งค่าซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นดูตัวอย่างของภาพที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

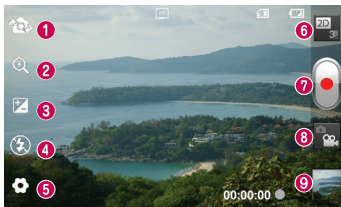




หมายเหตุ: ฟังก์ชันซูมจะใช้ไม่ได้ขณะบันทึกวิดีโอ


- 1 **สลับกล้องถ่ายรูป** - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้
- 2 **ซูม** - ซูมเข้าหรือซูมออก หรือคุณสามารถใช้ปุ่มระดับเสียงด้านข้างได้
- 3 **ความสว่าง** - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าไปในภาพ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของภาพ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง
- 4 **แฟลช** - ให้คุณเปิดแฟลชเมื่อถ่ายภาพในที่มืด
- 5 **ตั้งค่า** - แตะไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่ การใช้งานตั้งค่าขั้นสูง
- 6 **การเปลี่ยนระหว่างโหมด 2D - 3D** - แตะเพื่อสลับโหมดถ่ายภาพระหว่าง 2D และ 3D
- 7 **เริ่มการบันทึก**
- 8 **โหมดกล้องถ่ายรูป** - แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 9 **คลังภาพ** - แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูคลังภาพและดูวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ





กล้องวิดีโอ

การถ่ายวิดีโอต้น

- 1 แตะปุ่มโหมด กล้องถ่ายรูป ลง และไอคอนจะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 กดปุ่มบันทึก  หนึ่งครั้งเพื่อเริ่มการบันทึก
- 5 ไฟสีแดงกะพริบที่ด้านล่างของช่องมองภาพ พร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก



หลังการถ่ายวิดีโอ

วิดีโอที่คุณบันทึกจะปรากฏขึ้นบนแกลเลอรี แตะ  เพื่อดูวิดีโอล่าสุดที่คุณบันทึก


-  แตะเพื่อเล่นวิดีโอ
-  แตะ **เมนู > แบ่งปัน** เพื่อแบ่งปันวิดีโอโดยใช้ **ข้อความ, บลูทูธ, YouTube, Gmail, อีเมล หรือ SmartShare**
-  แตะเพื่อไปยังหน้าจอช่องมองภาพ
-  แตะ **เมนู > ลบ > ยืนยันการลบ** เพื่อลบวิดีโอ


การใช้การตั้งค่าขั้นสูง


ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

-  - เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายวิดีโอ
 -  - แตะเมื่อคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อให้คุณ
- ปรับการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนรายการ หลังจากเลือกตัวเลือกให้แตะปุ่ม **กลับ**

 - แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก

 - ปรับปรุงคุณภาพสีในสภาพแสงต่างๆ

 - เลือกโทนสีสำหรับภาพถ่ายใหม่ เลือกระหว่าง **ไม่มี, ขาวดำ, สีซีเปีย, เนกาทีฟ**

 - ตั้งระยะเวลาจำกัดสำหรับวิดีโอ เลือกระหว่าง **ปกติ** และ **MMS** เพื่อจำกัดขนาดวิดีโอให้สามารถส่งเป็นข้อความ MMS ได้

 - เลือก **ปิดเสียง** เพื่อบันทึกวิดีโอโดยไม่มีเสียง

 - เลือกเพื่อบันทึกวิดีโอได้โดยกล้องไม่สั่น

 - รีวิวอัตโนมัติแสดงวิดีโอที่คุณบันทึกล่าสุดโดยอัตโนมัติ

– เลือกที่เก็บข้อมูลเพื่อบันทึกวิดีโอ

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ไข่มุมปรับระดับเสียงที่ด้านซ้ายมือของหน้าจอ

รูปภาพและวิดีโอ 3D



การถ่ายภาพ 3D



- 1 **สลับกล้องถ่ายรูป** - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้
- 2 **โฟกัส 3D** - คุณสามารถปรับแต่งโฟกัส 3D ด้วยตัวเองได้ โดยการปรับการซ้อนทับด้วยแถบที่ปรากฏอยู่ด้านล่าง ก่อนการเริ่มต้นถ่ายภาพ 3D คุณสามารถไขฟังก์ชันนี้ได้
- 3 **ความสว่าง** - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง “-” เพื่อลดความสว่างของวิดีโอ หรือเลื่อนไปทาง “+” เพื่อเพิ่มความสว่าง
- 4 **แฟลช** - ให้คุณเปิดแฟลชเมื่อถ่ายวิดีโอในที่มืด

- 5 **ตั้งค่า** - และไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่การใช้การตั้งค่าขั้นสูง

โหมดโฟกัส 3D - เลือกตัวเลือกโฟกัส 3D แบบอัตโนมัติจากขอบ, ศูนย์กลาง ขอบ จะใช้พื้นที่ขอบเพื่อการขยายการซ้อนทับ ศูนย์กลาง จะใช้พื้นที่ศูนย์กลาง คุณยังสามารถปรับด้วยตนเองได้โดยไขฟังก์ชันโฟกัส 3D ของช่องมองภาพ

- 1 เปิดแอปฟลิเคชัน กล้องถ่ายรูป
- 2 แตะปุ่ม 3D  เพื่อกลับไปช่องมองภาพ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 4 แตะไอคอน **ถ่ายภาพ** 
- 5 กล้องจะจับโฟกัสที่ภาพ เมื่อภาพอยู่ในโฟกัสแล้ว ตัวบ่งชี้แต่ละมุมจะเปลี่ยนเป็นสีเขียวและกล้องจะถ่ายภาพ

การบันทึกวิดีโอ 3D








- 1 **สลับกล้องถ่ายรูป** - คุณสามารถย้ายไปที่กล้องภายในจากกล้องภายนอกได้
- 2 **โฟกัส 3D** - คุณสามารถปรับแต่งโฟกัส 3D ด้วยตัวเองได้ โดยการปรับการซ้อนทับด้วยแถบที่ปรากฏอยู่ด้านล่าง ก่อนการเริ่มต้นถ่ายวิดีโอ 3D คุณสามารถไขฟังก์ชันนี้ได้ คุณไม่สามารถปรับฟังก์ชันนี้ในขณะที่ทำการบันทึกได้

กล่องวิดีโอ

- 3 ความสว่าง** - ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ เลื่อนตัวบ่งชี้ความสว่างบนแถบ เลื่อนไปทาง "-" เพื่อลดความสว่างของวิดีโอ หรือเลื่อนไปทาง "+" เพื่อเพิ่มความสว่าง
- 4 แพลซ** - ให้คุณเปิดแพลตฟอร์มเมื่อถ่ายวิดีโอในที่มืด
- 5 ตั้งค่า** - และไอคอนนี้เพื่อเปิดเมนูตั้งค่า โปรดดูที่การใช้การตั้งค่าขั้นสูง

โหมดโฟกัส 3D - เลือกตัวเลือกโฟกัส 3D แบบอัตโนมัติจากขอบ, ศูนย์กลาง ขอบจะใช้พื้นที่ขอบเพื่อการขยายการซ้อนทับ ศูนย์กลาง จะใช้พื้นที่ศูนย์กลาง คุณยังสามารถปรับด้วยตนเองได้โดยใช้ฟังก์ชันโฟกัส 3D ของช่องมองภาพ

ภาพสั้นไหว - ตั้งค่าเป็น เปิด เพื่อช่วยในการถ่ายภาพในกรณีที่มีมือไม่ถนัด

- 1 เปิดแอปพลิเคชันกล่องถ่ายรูปและแตะปุ่มโหมดกล่องถ่ายรูป ไอคอน **ถ่ายภาพ**  จะเปลี่ยนเป็น 
- 2 ช่องมองภาพของกล่องวิดีโอจะปรากฏขึ้นบนหน้าจอ: แตะปุ่ม 3D 
- 3 ให้ถือโทรศัพท์ในมุมมองแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 แตะไอคอนเริ่มบันทึกวิดีโอ  ไฟสีแดงกะพริบที่ด้านล่างของช่องมองภาพ พร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 5 แตะไอคอนหยุดบันทึกวิดีโอ  เพื่อหยุดการบันทึก

หมายเหตุ

- โหมดกล่อง 3D ใช้ได้เฉพาะกับมุมมองแนวนอนเท่านั้น
- รักษาระยะระหว่างกล่องและวัตถุให้มากกว่า 0.5 ม.
- เพื่อรับชมเนื้อหา 3D ได้อย่างสมบูรณ์แบบที่ดีที่สุด ให้ถืออุปกรณ์ห่างจากตาของคุณ 30~40 ซม.

มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงใน
การดหน่วยความจำเพื่อเข้าถึงไฟล์รูป
ภาพและวิดีโอได้อย่างง่ายดาย

คลังภาพ


แตะแท็บ แอปพลิเคชัน  แล้วเลือก
คลังภาพ เปิดรายการของแถบแคตตาล็อก
ที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

มุมมองตามลำดับเวลา


คลังภาพ ใน LG-P720h

จะแสดงมุมมอง

ของรูปภาพและวิดีโอตามลำดับเวลา
ในโหมดมุมมองกริด ใหญ่

 ไปทางขวา และวันที่ถ่าย
ภาพจะปรากฏขึ้น โดยเริ่มจากล่าสุด
หากคุณเลือกวันที่ระบุ รูปภาพทั้งหมดที่
คุณถ่ายในวันนั้นจะถูกจัดกลุ่ม

เพลง

โทรศัพท์ LG-P720h มีเครื่องเล่นเพลง
ภายในตัวที่ให้คุณสามารถเล่นเพลง
ที่คุณชื่นชอบทั้งหมดได้ ในการเข้า
ใช้งานเครื่องเล่นเพลง แตะแท็บ
แอปพลิเคชัน  แล้วเลือก เพลง

การเล่นเพลง

- 1 ในหน้าจอหลัก ให้แตะแท็บ
แอปพลิเคชัน  และเลือก เพลง
- 2 แตะ เพลง

3 เลือกเพลงที่คุณต้องการเล่น

| | |
|---|---|
|  | แตะเพื่อหยุดการเล่นไว้ชั่วคราว |
|  | แตะเพื่อเริ่มเล่นต่อ |
|  | แตะเพื่อข้ามไปที่แทร็คถัดไปใน อัลบั้ม รายการเล่นหรือ สับเปลี่ยน |
|  | แตะหนึ่งครั้งเพื่อย้อนไปยังช่วง เริ่มต้นของเพลงนั้น แตะสอง ครั้งเพื่อกลับไปเพลงก่อนหน้า |
|  | แตะเพื่อตั้งค่าโหมดซ้ำ |
|  | แตะเพื่อเล่นรายการเพลง ปัจจุบันในโหมดสับเปลี่ยน |
|  | แตะเพื่อดูรายการเพลงปัจจุบัน |
|  | แตะเพื่อดูเนื้อเพลง ตัวเลือกนี้ใช้ ได้เมื่อเพลงมีเนื้อเพลงมาด้วย เท่านั้น |
|  | แตะเพื่อเปลี่ยนแปลงระดับเสียง |
|  | แตะเพื่อตั้งค่าเอฟเฟกต์เสียง Dolby ขณะเชื่อมต่อกับแจ็ค หูฟัง |

หากต้องการเปลี่ยนระดับเสียงในขณะที่
ฟังเพลง ให้ไขปุ่มปรับระดับเสียงขึ้นและ
ลงที่อยู่ด้านข้างซ้ายของโทรศัพท์
แตะเพลงหนึ่งในรายการเพลงค้างไว้
หน้าจอจะแสดง เล่น, เพิ่มในรายการ
เพลง, ใช้เป็นเสียงเรียกเข้า, ลบ,
แบ่งปัน, ค้นหา และ รายละเอียด

มัลติมีเดีย

ขึ้นมาเป็นตัวเลือก

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลง จะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ

ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับสิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ ให้ตรวจสอบกฎหมายฉบับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

วิทยุ FM

โทรศัพท์ LG-P720h มีคุณสมบัติวิทยุ FM ในตัว ดังนั้น คุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

หมายเหตุ: คุณต้องใช้ชุดหูฟังเพื่อรับฟังวิทยุ เสียบชุดหูฟังเข้าในช่องเสียบหูฟัง

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุได้ โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูก

บันทึกไว้ในหมายเลขช่องสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องค้นหาอีกครั้ง คุณสามารถจัดเก็บได้สูงสุด 48 ช่องสถานีในโทรศัพท์ของคุณ

การปรับตั้งอัตโนมัติ

- 1 บนหน้าจอหลัก แตะแท็บ **แอปพลิเคชัน** แล้วเลือก **วิทยุ FM**
- 2 กดปุ่ม **เมนู** แล้วแตะ **สแกนอัตโนมัติ**
- 3 หากมีช่องสถานีที่ตั้งไว้ล่วงหน้าแล้ว คุณจะเห็นป๊อปอัพ "รีเซ็ตช่องทั้งหมดและเริ่มสแกนอัตโนมัติ?" หากคุณเลือก ตกลง ช่องสถานีที่ตั้งไว้ล่วงหน้าทั้งหมดจะถูกลบและจะเริ่มต้น **สแกนอัตโนมัติ**
- 4 ระหว่างการสแกนอัตโนมัติ แตะ **หยุด** หากคุณต้องการหยุดการสแกน โดยจะบันทึกเฉพาะช่องสถานีที่สแกนพบก่อนหยุดการสแกนเท่านั้น

หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ปุ่มหมุนบนหน้าจอ

เคล็ดลับ! ในการเพิ่มประสิทธิภาพ การรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ หากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิด มาเพื่อใช้รับสัญญาณวิทยุ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้

เว็บไซต์

บราวเซอร์


บราวเซอร์ ช่วยให้คุณสามารถเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ได้ทุกที่และทุกอย่างที่คุณต้องการ

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ใช้บริการเครือข่ายของคุณ

การใช้ตัวเลือก


กดปุ่ม **เมนู** เพื่อดูตัวเลือก

 แตะเพื่อย้อนกลับหนึ่งเพจ

 แตะเพื่อไปยังหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม **ย้อนกลับ** ซึ่งจะไปยังเพจก่อนหน้า

 แตะเพื่อแสดงหน้าต่างที่เปิดอยู่ทั้งหมด

 แตะเพื่อเพิ่มหน้าต่างใหม่

 **อ่านทีหลัง** – เพิ่มเว็บเพจปัจจุบันในอ่านทีหลัง

 **เพิ่ม RSS feed** – เพิ่มเว็บเพจปัจจุบันใน RSS feed

อื่นๆ

- **แบ่งปันเพจ** – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้
- **หาในเพจ** – ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน
- **เลือกข้อความ** – ให้คุณคัดลอกข้อความใดๆ จากเว็บเพจ
- **โฮมเพจ:** ไปยังโฮมเพจ
- **ตั้งเป็นโฮมเพจ:** ตั้งเว็บเพจปัจจุบันเป็นโฮมเพจ
- **เพิ่มปุ่มลัดในหน้าหลัก:** เพิ่มปุ่มลัดของเว็บเพจปัจจุบันในหน้าจอหลัก
- **ข้อมูลเพจ:** แสดงข้อมูลเว็บเพจ
- **ดาวน์โหลด:** แสดงประวัติดาวน์โหลดของคุณ
- **ตั้งค่า:** แสดงการตั้งค่าเบราว์เซอร์

ยูลิลิตี

การตั้งเวลาการปลุก

- 1 แอปพลิเคชัน > ตั้งปลุก/นาฬิกา > การเตือนใหม่
- 2 ตั้งค่า เวลา ซ้ำ, ระยะเวลาเลื่อน, สั้น, เสียงปลุก และ **Puzzle lock** แล้วเพิ่มป้ายกำกับเพื่อตั้งชื่อการปลุก และ **บันทึก**
- 3 หลังจากที่คุณบันทึกการปลุกแล้ว โทรศัพท์ LG-P720h จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก

การใช้เครื่องคิดเลข

- 1 แอปพลิเคชัน > เครื่องคิดเลข
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน กดปุ่มเมนู แตะที่ **พานอลขั้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แอปพลิเคชัน > ปฏิทิน
- 2 ในการตรวจสอบเหตุการณ์ ให้แตะวันที่ แตะปุ่ม **เมนู** หากคุณต้องการเพิ่มเหตุการณ์ใหม่ แตะ **เหตุการณ์ใหม่**
- 3 แตะ **อะไร** แล้วป้อนชื่อเหตุการณ์ ตรวจสอบวันที่และป้อนเวลาที่

เหตุการณ์เริ่มและเสร็จสิ้น

- 4 แตะ **ที่ใด** แล้วป้อนสถานที่
- 5 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย** แล้วป้อนรายละเอียด
- 6 ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **การทำซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น
- 7 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

การเปลี่ยนมุมมองปฏิทิน

- 1 แอปพลิเคชัน > ปฏิทิน
- 2 ที่ด้านบนของหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ เดือน นัดหมาย)

Polaris Office

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ใหญ่ที่สุดเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

การจัดการไฟล์

Polaris Office ให้ผู้ใช้มือถือจัดการไฟล์ รวมถึงการคัดลอก วาง เปลี่ยนชื่อ และลบไฟล์และโฟลเดอร์ได้อย่างสะดวกบนมือถือ

ยูทิลิตี้

การดูไฟล์

ผู้ที่มีมือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือ เมื่อดูเอกสารโดยใช้ Polaris Office ออบเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

แก้ไขวิดีโอ

ใช้แก้ไขวิดีโอเพื่อแก้ไขวิดีโอที่คุณถ่าย

- 1 แอปพลิเคชัน > แก้ไขวิดีโอ
- 2 แตะ สร้าง และเลือก เพิ่ม เพื่อเพิ่มวิดีโอ ภาพ หรือคลิปเสียงที่คุณต้องการแทรก คุณสามารถลากไฟล์ลงไปยังตำแหน่งที่คุณต้องการวางได้

หมายเหตุ:

- คุณสมบัตินี้อาจใช้ไม่ได้หากวิดีโอไม่ได้ถูกสร้างโดยอุปกรณ์นี้
- คุณสมบัตินี้ไม่สนับสนุนวิดีโอที่มีความละเอียด Full HD (1920x1080) และสูงกว่า
- หากเพิ่มวิดีโอ 3D ก่อน จะใช้ได้เฉพาะวิดีโอ 3D ที่มีความละเอียดเดียวกันและภาพ 3D เท่านั้น
- หากเพิ่มวิดีโอ 2D ก่อน จะใช้ได้เฉพาะวิดีโอ 2D ที่มีความละเอียดเดียวกันและภาพ 2D เท่านั้น

วิดีโอโดยการลากแถบ Trim คุณสามารถควบคุมแบบละเอียดได้โดยใช้ **ดูรายละเอียด**

- 4 หากโครงการของคุณเสร็จสิ้นแล้ว ให้แตะ **แก้ไขปอร์ต** บนหน้าจอหลัก เพื่อสร้างไฟล์ที่เสร็จสมบูรณ์ ตรวจสอบให้แน่ใจว่าบันทึกการเปลี่ยนแปลงของคุณแล้วก่อนออกไปยังเมนูหลัก

- 3 แตะ **Trim** เพื่อแก้ไขความยาวของ

LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาที่น่าสนใจ
เด่นมากมาย เช่น เกมส์, แอปพลิเคชัน,
พื้นหลังและเสียงเรียกเข้า ทำให้ผู้ใช้
โทรศัพท์ LG สามารถสัมผัสกับ
ประสบการณ์ "Mobile Life"
ได้มากยิ่งขึ้น

วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ

- 1 แตะไอคอน  เพื่อเข้าถึง LG SmartWorld
- 2 แตะ ลงชื่อเข้าใช้ และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะ รีจิสเตอร์ และสมัครสมาชิกของ LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ

หมายเหตุ: หากไม่มีไอคอน

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ
เข้าใช้ LG SmartWorld
(www.lgsmartworld.com)
และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน
LG SmartWorld
- 3 ใช้งานและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld
โดยการแตะไอคอน 

วิธีการใช้ LG SmartWorld

- เข้าร่วมการส่งเสริมการขาย LG SmartWorld ทุกเดือน
- ค้นหาและดาวน์โหลดเนื้อหา 3D จาก 'โชน 3D'
- ลองใช้ปุ่ม "เมนู" เพื่อค้นหาสิ่งที่คุณต้องการอย่างรวดเร็ว
 - **ประเภท:** ค้นหาเนื้อหาตามประเภท (เช่น การศึกษา, ความบันเทิง, เกมส์, และอื่นๆ)
 - **แอปพลิเคชันของฉัน:** รายการเนื้อหาที่ดาวน์โหลดหรือเนื้อหาที่ต้องอัปเดต
 - **แอปพลิเคชันสำหรับคุณ:** เนื้อหาที่แนะนำอิงตามตัวเลือกก่อนหน้านี้ของคุณ
 - **ค้นหา:** ค้นหาเนื้อหา
 - **ตั้งค่า:** ตั้งค่าโปรไฟล์และหน้าจอ
- และลองใช้ฟังก์ชันอื่นๆ ที่มีประโยชน์ (หน้าจอรายละเอียดเนื้อหา)
 - **รายการสิ่งที่ต้องการ:** บันทึกเนื้อหาที่คุณสนใจ

หมายเหตุ: LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือผู้ให้บริการบางราย

เชื่อมต่อ

บลูทูธ

คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้อง ไม่ใช่จากเมนูลูทูธเหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

เคล็ดลับ! ด้วย LG-P720h คุณสามารถสนทนากับบลูทูธความเร็วสูงได้ หากอุปกรณ์ที่คุณต้องการแบ่งปันไฟล์สนับสนุนบลูทูธความเร็วสูงด้วย ไฟล์จะถูกส่งผ่านเครือข่ายความเร็วสูงโดยอัตโนมัติ ในการส่งข้อมูลด้วยบลูทูธความเร็วสูงก่อนใช้โปรดตรวจสอบว่า Wi-Fi เป็นปิด แล้วในอุปกรณ์ของคุณ การตั้งค่าบลูทูธความเร็วสูงอาจแตกต่างกันขึ้นอยู่กับอุปกรณ์ โปรดตรวจสอบการตั้งค่าของอุปกรณ์กับผู้ให้บริการ

หมายเหตุ:

- LG ไม่มีส่วนรับผิดชอบใดๆ สำหรับการสูญหาย การสับสน หรือการนำข้อมูลที่ส่งหรือรับผ่านคุณสมบัติการสื่อสารไร้สายด้วยบลูทูธไปใช้ในทางที่ผิด
- คุณต้องแน่ใจเสมอว่าได้แบ่งปันและรับข้อมูลจากอุปกรณ์ที่เชื่อถือได้และปลอดภัย ในกรณีที่ไม่มีสิ่งกีดขวางระหว่างอุปกรณ์ ระยะการทำงานอาจลดลง
- อุปกรณ์บางรุ่น โดยเฉพาะรุ่นที่ยังไม่ผ่านการทดสอบหรืออนุญาตโดย Bluetooth SIG อาจไม่สามารถใช้งานร่วมกับอุปกรณ์ของคุณได้

การเปิดบลูทูธและการจับคู่โทรศัพท์ของคุณกับอุปกรณ์บลูทูธ

- 1 แอปพลิเคชัน > ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่าบลูทูธ เพื่อเปิด
- 2 ไปที่ การตั้งค่า > สแกนหาอุปกรณ์
- 3 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยการรายการ

เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น ถ้าอุปกรณ์ที่คุณต้องการจับคู่ไม่อยู่ในรายการ ให้ตรวจสอบว่าอุปกรณ์เป้าหมายได้รับการตั้งค่า

เป็น ค้นหาได้ แล้วสแกนอีกครั้ง
ส่งข้อมูลด้วยคุณสมบัติไร้สายบลูทูธ

- 1 เลือกไฟล์หรือรายการ เช่น รายชื่อ หรือไฟล์มีเดีย จากแอปพลิเคชันที่เหมาะสม หรือ **ไฟล์ของฉัน**
- 2 เลือกตัวเลือกการส่งด้วยบลูทูธ

หมายเหตุ: วิธีการเลือกตัวเลือกอาจแตกต่างกันตามประเภทข้อมูล

- 3 ค้นหาและจับคู่อุปกรณ์ที่เปิดใช้งานบลูทูธ

รับข้อมูลด้วยคุณสมบัติไร้สายบลูทูธ

- 1 ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่าบลูทูธ > ค้นหาได้** อุปกรณ์บลูทูธอื่นๆ จะสามารถค้นหาอุปกรณ์ของคุณได้เป็นเวลา 120 วินาที
- 2 เมื่อเครื่องแสดงข้อความ ให้ป้อน PIN สำหรับคุณสมบัติไร้สายบลูทูธ และเลือก **ตกลง** (หากจำเป็น)
- 3 เลือก **ยอมรับ** เพื่อยืนยันว่าคุณต้องการรับข้อมูลจากอุปกรณ์ ข้อมูลที่ได้รับจะถูกบันทึกไว้ในโฟลเดอร์บลูทูธ

หมายเหตุ: หากคุณได้รับรายชื่อ คุณสามารถบันทึกรายชื่อลงในสมุดโทรศัพท์ได้โดยวิธีต่อไปนี้: **รายชื่อ > กด > อื่นๆ > อิมพอร์ต/เอ็กซ์พอร์ต**

Wi-Fi

เรียนรู้เพื่อใช้คุณสมบัติเครือข่ายไร้สายของโทรศัพท์เพื่อเปิดใช้งานและเชื่อมต่อเครือข่ายไร้สายในท้องถิ่น (WLAN) ที่ใช้ได้กับมาตรฐาน IEEE 802.11 b/g/n คุณสามารถเชื่อมต่ออินเทอร์เน็ตหรืออุปกรณ์เครือข่ายอื่นๆ ได้ทุกที่ที่มีจุดเชื่อมต่อหรือฮอตสปอต

เปิดใช้งานคุณสมบัติ WLAN

ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi > Wi-Fi**

หมายเหตุ: WLAN ที่เปิดใช้งานและทำงานบนพื้นหลังจะชีพลังงานแบตเตอรี่ หากต้องการสำรองพลังงานแบตเตอรี่ ให้เปิดใช้งาน WLAN เฉพาะเมื่อจำเป็น

ค้นหาและเชื่อมต่อกับ WLAN

ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า**

เชื่อมต่อ

Wi-Fi อุปกรณ์จะค้นหา WLAN ที่พร้อมใช้งานโดยอัตโนมัติ

- 1 เลือกเครือข่ายจาก **เครือข่าย Wi-Fi**
- 2 ป้อนรหัสผ่านสำหรับเครือข่าย (หากจำเป็น)
- 3 เลือก **เชื่อมต่อ**

เพิ่ม **WLAN** ด้วยตัวเอง

- 1 ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi > เพิ่มเครือข่าย Wi-Fi**
- 2 ป้อน SSID สำหรับเครือข่าย และเลือกประเภทการรักษาความปลอดภัย
- 3 ตั้งค่าการรักษาความปลอดภัยตามประเภทการรักษาความปลอดภัยที่เลือก
- 4 เลือก **บันทึก**

เชื่อมต่อกับ **WLAN** ด้วย **Wi-Fi Protected Setup (WPS)**

ด้วยการใช้ **WPS** คุณสามารถเชื่อมต่อ กับเครือข่ายที่มีการรักษาความปลอดภัยได้

ในการเชื่อมต่อกับ WLAN ด้วยปุ่ม WPS

- 1 ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi**
- 2 เลือก **คำขอปุ่ม WPS push**

- 3 กดปุ่ม **WPS** บนจุดเชื่อมต่อภายใน 2 นาที

ในการเชื่อมต่อกับ WLAN ด้วยปุ่ม WPS

- 1 ในโหมดการรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi**
- 2 เลือกเครือข่ายที่มีไอคอน WPS ระบุไว้ และเลือก **WPS PIN**
- 3 บนจุดเชื่อมต่อ ป้อน PIN และกดปุ่มเริ่ม

การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่ายไร้สาย

อุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้

การเปิด **SmartShare** และอนุญาตให้แบ่งปันเนื้อหา

- 1 แตะ **แท็บ แอปพลิเคชัน**  และเลือก **SmartShare**
- 2 กดปุ่ม **เมนู** และเลือก **ตั้งค่า**
- 3 แตะ **รับคำขอเสมอ** หากคุณต้องการยอมรับคำขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
- 4 แตะ **รับไฟล์** หากคุณต้องการ

อนุญาตให้อุปกรณ์อื่นอัปเดตไฟล์ไปยังโทรศัพท์ของคุณได้โดยอัตโนมัติ

5 แตะช่องทำเครื่องหมาย ค้นหาได้ เพื่อเปิด

6 ในส่วนแบ่งปันเนื้อหา ให้แตะเพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก **รูปภาพ**, **วิดีโอ** และ **เพลง**

7 SmartShare เปิดใช้งานแล้วและพร้อมแบ่งปันเนื้อหา

การแบ่งปันเนื้อหาจากไลบรารีเนื้อหา ระยะใกล้กับอุปกรณ์อื่น

ให้อุปกรณ์แสดงผลของคุณ (เช่น ทีวี) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหา ระยะใกล้ของคุณ (เช่น คอมพิวเตอร์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA ในอุปกรณ์ของคุณ (เช่น ทีวีและคอมพิวเตอร์) อย่างถูกต้องแล้ว

1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**

2 แตะปุ่มบนขวาหรือเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล

3 แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหา ระยะใกล้

4 คุณสามารถเรียกดูไลบรารีเนื้อหาได้

5 แตะภาพขนาดเล็กของเนื้อหา หรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น** การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่น ทีวี)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

1 ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน **คลังภาพ** ให้แตะค้างไว้เพื่อเลือกหลายไฟล์ จากนั้นคุณจะสามารถเลือกไฟล์หลายไฟล์เพื่อแบ่งปันได้

2 แตะ **แบ่งปัน** บนเมนู และเลือก **SmartShare**

3 SmartShare จะเริ่มทำงานโดยอัตโนมัติด้วยไฟล์ที่เลือก

4 เลือกอุปกรณ์จากรายการอุปกรณ์แสดงผลเพื่อเล่นไฟล์

หมายเหตุ: ทำตามขั้นตอนเดียวกันนี้เพื่อใช้เครื่องเล่นเพลง กล้องถ่ายรูป และเครื่องเล่นวิดีโอเพื่อแบ่งปันเนื้อหา

เชื่อมต่อ

หมายเหตุ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้ อุปกรณ์ DLNA บางประเภท (เช่นทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล

- 1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**
- 2 แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
- 3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4 แตะภาพขนาดเล็กของเนื้อหาแล้วแตะ **ปุ่มเมนูดาวน์โหลด**

หมายเหตุ: ไม่สนับสนุนเนื้อหาบางประเภท

การอัปโหลดเนื้อหาจากโทรศัพท์ของคุณไปยังไลบรารีเนื้อหาระยะไกล


หมายเหตุ: ตรวจสอบว่าใส่การ์ด SD ถัดออก และเลือกปรับไฟล์ในเมนูตั้งค่าแล้ว

- 1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**

- 2 แตะปุ่มบนซ้ายและเลือก **โทรศัพท์ของคุณ**
- 3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4 แตะภาพขนาดเล็กของเนื้อหาค้างไว้แล้วแตะ **ปุ่มเมนูอัปโหลด**
- 5 เลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกลที่จะอัปโหลด

หมายเหตุ: อุปกรณ์ที่ใช้ DLNA บางประเภทไม่สนับสนุนฟังก์ชันอัปโหลด DMS และจะไม่มีการอัปโหลด ไม่สนับสนุนเนื้อหาบางประเภท

การเล่นเนื้อหาจากไลบรารีเนื้อหาระยะไกลในโทรศัพท์ของคุณ

- 1 แตะแท็บ แอปพลิเคชัน  และเลือก **SmartShare**
- 2 แตะปุ่มบนขวาและเลือกโทรศัพท์ของคุณออกจากรายการอุปกรณ์แสดงผล
- 3 แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
- 4 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 5 แตะภาพขนาดเล็กของเนื้อหาหรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**
- 6 แตะปุ่ม **2D** หรือ **3D** เพื่อสลับระหว่างโหมด 2D – 3D

หมายเหตุ: เนื้อหาบางอย่างอาจเสียหายภายใต้โหมด 3D

การแบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่
เรียนรู้วิธีการตั้งค่าอุปกรณ์ของคุณให้เป็นโมเด็มไร้สายหรือจุดเชื่อมต่อไร้สายสำหรับคอมพิวเตอร์หรืออุปกรณ์อื่นๆ และแบ่งปันการเชื่อมต่อเครือข่ายไร้สายของอุปกรณ์ของคุณ

แบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่ของอุปกรณ์ของคุณด้วย WLAN

- 1 ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > Portable hotspot**
- 2 เลือก **Portable Wi-Fi hotspot** เพื่อเปิดใช้งานฮอตสปอต WLAN
- 3 เลือก **Portable Wi-Fi hotspot settings**
- 4 เลือก **Configure Wi-Fi hotspot** เพื่อปรับแต่งฮอตสปอต WLAN:
เครือข่าย SSID - ดูและแก้ไขชื่ออุปกรณ์ที่จะแสดงบนอุปกรณ์ภายนอก
ระบบป้องกัน - เลือกประเภทการรักษาความปลอดภัย

แบ่งปันเครือข่ายโทรศัพท์เคลื่อนที่ของอุปกรณ์ของคุณด้วย USB

- 1 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 รายการโหมดการเชื่อมต่อ **USB**

จะปรากฏขึ้น

- 3 เลือก **การปล่อยสัญญาณผ่าน USB** เพื่อเปิดใช้งานคุณสมบัติการปล่อยสัญญาณผ่าน USB อุปกรณ์ของคุณจะแบ่งปันการเชื่อมต่อเครือข่ายโทรศัพท์มือถือบนคอมพิวเตอร์ของคุณ ในการหยุดการแบ่งปันเครือข่ายโทรศัพท์มือถือ ให้ยกเลิกการเลือกกล่องทำเครื่องหมายที่อยู่ถัดจาก **การปล่อยสัญญาณผ่าน USB** (เลือกตัวเลือก **ขาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์)

หมายเหตุ: วิธีการแบ่งปันสำหรับการเชื่อมต่อเครือข่ายอาจแตกต่างกันในแต่ละระบบปฏิบัติการคอมพิวเตอร์

GPS

อุปกรณ์ของคุณมีตัวรับสัญญาณระบบกำหนดตำแหน่งบนพื้นโลก (GPS) ติดตั้งเอาไว้ เรียนรู้วิธีการเปิดใช้งานบริการตำแหน่ง ในการรับสัญญาณ GPS ให้ดูตียังขึ้น หลีกเลี่ยงการใช้งานโทรศัพท์ของคุณในสถานการณ์ต่อไปนี้:

- ระหว่างอาคาร ในอุโมงค์ หรือทางใต้ดิน หรือภายในอาคารในระหว่างที่สภาพอากาศเลวร้าย ภายในสนามพลังแรงดันไฟฟ้าสูง

เชื่อมต่อ

หรือสนามพลังแม่เหล็กไฟฟ้า

- ห้ามแตะบริเวณเสาอากาศภายในหรือใช้มือหรือวัตถุอื่นปิดบริเวณนี้ไว้ขณะใช้งานฟังก์ชัน GPS
- คุณสมบัตินี้อาจไม่สามารถใช้งานได้โดยขึ้นอยู่กับภูมิภาคหรือผู้ให้บริการของคุณ

เปิดใช้งานบริการตำแหน่ง

คุณต้องเปิดใช้งานบริการตำแหน่งเพื่อรับข้อมูลตำแหน่งและค้นหาแผนที่

- 1 โน้ตโหมดรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > พิกัดและการป้องกัน**
- 2 ปรับการตั้งค่าต่อไปนี้เพื่อเปิดใช้งานบริการตำแหน่ง:
ใช้เครือข่ายไร้สาย - ตั้งค่าเพื่อใช้ WLAN และ/หรือเครือข่ายโทรศัพท์เคลื่อนที่ในการค้นหาตำแหน่งของคุณ
ใช้ดาวเทียม GPS - ตั้งค่าเพื่อใช้ดาวเทียม GPS ในการค้นหาตำแหน่งของคุณ

การเชื่อมต่อคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลคอมพิวเตอร์

เรียนรู้วิธีเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ด้วยสายเคเบิลข้อมูลในโหมดการเชื่อมต่อ USB ด้วยการเชื่อมต่ออุปกรณ์กับคอมพิวเตอร์ คุณจะ

สามารถถ่ายโอนข้อมูลเข้าสู่และออกจากอุปกรณ์ของคุณได้โดยตรง และใช้งานโปรแกรมซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ซิงค์โทรศัพท์ของคุณกับคอมพิวเตอร์

ในการซิงค์โครโนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้งซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite) ในคอมพิวเตอร์ดาวน์โหลดโปรแกรมจากเว็บไซต์ LG (www.lg.com)

- 1 ใช้สายเคเบิลข้อมูล USB เพื่อเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์
- 2 รายการ **โหมดการเชื่อมต่อ USB** จะปรากฏขึ้น และให้เลือก **PC ซอฟต์แวร์**
- 3 เริ่มใช้งานโปรแกรม LG PC Suite จากคอมพิวเตอร์โปรดดูวิธีใช้ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite) สำหรับข้อมูลเพิ่มเติม

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

- จำเป็นต้องใช้ไดรเวอร์ USB ในตัวของ LG ในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติเมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

เชื่อมต่อโดยใช้เป็นอุปกรณ์เก็บข้อมูล

คุณสามารถเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้เป็นดิสก์แบบถอดได้และเข้าถึงไฟล์ได้เร็วกว่า หากคุณใส่การ์ดหน่วยความจำลงในอุปกรณ์ คุณจะสามารถเข้าถึงไฟล์ได้เร็วกว่าของการ์ดหน่วยความจำได้โดยการใส่อุปกรณ์เป็นที่อ่านการ์ดหน่วยความจำ

- 1 แอปพลิเคชัน > **ตั้งค่า > ที่เก็บข้อมูล**
เพื่อตรวจสอบสื่อเก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการ์ดหน่วยความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 รายการ **โหมดการเชื่อมต่อ USB**

จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล

- 4 เปิดโพลเดอร์หน่วยความจำที่ถอดได้บนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์
- 5 คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโพลเดอร์โทรศัพท์
- 6 เลือกตัวเลือก **ซาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

ทำการถ่ายโอนเพลง ภาพถ่าย และใช้โหมดที่เก็บข้อมูล USB

- 1 แอปพลิเคชัน > **ตั้งค่า > ที่เก็บข้อมูล** เพื่อตรวจสอบสื่อเก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการ์ดหน่วยความจำ ให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 รายการ **โหมดการเชื่อมต่อ USB** จะปรากฏขึ้น และเลือกตัวเลือกที่เก็บข้อมูล
- 4 เปิดโพลเดอร์หน่วยความจำที่ถอดได้บนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์

เชื่อมต่อ

- 5 คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโพลเดอร์ไดรฟ์
- 6 เมื่อดำเนินการเสร็จเรียบร้อยแล้ว เลือกตัวเลือก **ซาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

หมายเหตุ: ในการยกเลิกการเชื่อมต่ออุปกรณ์จากคอมพิวเตอร์ ให้คลิกที่ไอคอนอุปกรณ์ USB บนแถบงาน Windows และคลิกที่ตัวเลือกเพื่อถอดอุปกรณ์เก็บข้อมูลอย่างปลอดภัย จากนั้นจึงถึงสายเคเบิลข้อมูลออกจากคอมพิวเตอร์ มิฉะนั้น คุณอาจสูญเสียข้อมูลที่จัดเก็บไว้บนการ์ดหน่วยความจำ หรือทำให้การ์ดหน่วยความจำเสียหายได้

การเชื่อมต่อ VPN

คุณสามารถสร้างเครือข่ายส่วนตัวเสมือน (VPN) และเชื่อมต่อกับเครือข่ายส่วนตัวของคุณได้อย่างปลอดภัยผ่านเครือข่ายสาธารณะ เช่น อินเทอร์เน็ต

หมายเหตุ: อุปกรณ์ของคุณควรมีการกำหนดค่าสำหรับการเข้าถึงอินเทอร์เน็ตเอาไว้แล้ว หากคุณมีปัญหาในการเข้าถึงอินเทอร์เน็ต คุณจะต้องแก้ไขการเชื่อมต่อ หาก你不แน่ใจเกี่ยวกับข้อมูลการเชื่อมต่อที่ควรป้อน ให้สอบถามจากคู่มือบริการของคุณ

ตั้งค่าการเชื่อมต่อ VPN

- 1 ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า VPN > เพิ่ม VPN**
- 2 เลือกประเภท VPN
- 3 ปรับแต่งข้อมูลการเชื่อมต่อ

หมายเหตุ: ตัวเลือกที่พร้อมใช้งานอาจแตกต่างกันตามประเภท VPN

- **ชื่อ VPN** - ป้อนชื่อของเซิร์ฟเวอร์ VPN
- **ตั้งค่าเซิร์ฟเวอร์ VPN** - ป้อน IP แอดเดรสของเซิร์ฟเวอร์ VPN
- **เปิดใช้งานการเข้ารหัส** - ตั้งค่าเพื่อเข้ารหัสเซิร์ฟเวอร์ VPN
- **ตั้งค่าคีย์ใช้ร่วมล่วงหน้า IPsec** - ป้อนคีย์ preshared

- **เปิดใช้งาน L2TP ลับ** - ตั้งค่าเพื่อใช้รหัสผ่านลับ L2TP
 - **ตั้งค่าข้อมูลลับ L2TP** - ป้อนรหัสผ่านลับ L2TP
 - **ตั้งค่าใบรับรองผู้ใช้** - เลือกใบรับรองผู้ใช้ที่เซิร์ฟเวอร์ VPN จะใช้ในการระบุตัวตน คุณสามารถพิมพ์หรือนำเข้าใบรับรองจากเซิร์ฟเวอร์ VPN หรือดาวน์โหลดจากเว็บ
 - **ตั้งค่าใบรับรอง CA** - เลือกใบรับรอง Certificate Authority (CA) ที่เซิร์ฟเวอร์ VPN จะใช้ในการระบุตัวตน คุณสามารถพิมพ์หรือนำเข้าใบรับรองจากเซิร์ฟเวอร์ VPN หรือดาวน์โหลดจากเว็บ
 - **โดเมนการค้นหา DNS** - ป้อนแอดเดรสเซิร์ฟเวอร์ชื่อโดเมน (DNS)
- 4 เมื่อดำเนินการเสร็จเรียบร้อย ให้กด **เมนู**  > **บันทึก**

เชื่อมต่อกับเครือข่ายส่วนตัว

- 1 ในโหมดรอรับสาย เปิดรายการแอปพลิเคชันแล้วเลือก **ตั้งค่า** > **ตั้งค่าการเชื่อมต่อ** > **ตั้งค่า VPN**
- 2 เลือกเครือข่ายส่วนตัวที่จะเชื่อมต่อ
- 3 ป้อนชื่อผู้ใช้และรหัสผ่าน แล้วเลือก **เชื่อมต่อ**

ตั้งค่า

ในหน้าจอหลัก แตะแท็บ แอปพลิเคชัน
แล้วเลื่อนและแตะ **ตั้งค่า**

ตั้งค่าการเชื่อมต่อ

ในหน้าจอthis คุณสามารถจัดการ Wi-Fi และบลูทูธ คุณยังสามารถตั้งค่าเครือข่าย โทรศัพท์เคลื่อนที่ และสลับไปยังโหมดเครื่องบินได้ด้วย

โหมดเครื่องบิน – หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

ตั้งค่า Wi-Fi – ให้คุณสามารถตั้งค่าและจัดการจุดเชื่อมต่อไร้สาย ตั้งค่าการแจ้งเครือข่าย หรือเพิ่มเครือข่าย Wi-Fi หน้าจอตั้งค่า Wi-Fi ขั้นสูงจะเขาใช้จากหน้าจอตั้งค่า Wi-Fi กดปุ่ม **เมนู** และแตะ **ขั้นสูง**

บลูทูธ – เปิดหรือปิดคุณสมบัติไร้สายบลูทูธ

การตั้งค่าบลูทูธ

- **ชื่ออุปกรณ์:** ตั้งชื่อบลูทูธสำหรับอุปกรณ์ของคุณ
- **ค้นหาได้:** ตั้งค่าให้อุปกรณ์บลูทูธอื่นๆ สามารถมองเห็นอุปกรณ์ของคุณได้
- **สแกนหาอุปกรณ์:** ตั้งค่าให้อุปกรณ์ของคุณค้นหาอุปกรณ์บลูทูธอื่นๆ

หมายเหตุ:

กดเมนูเพื่อเปลี่ยนแปลงการตั้งค่าการโอนรายชื่อ

- **ส่งเป็นไฟล์เดียว:** ส่งรายชื่อในรูปแบบ nested vCard การดำเนินการนี้อาจลดเวลาในการโอนรายชื่อได้ แต่อุปกรณ์รุ่นเก่าจะไม่สนับสนุนโหมดนี้ในการรับรายชื่อ
- **ส่งแยกจากกัน:** ส่งแต่ละรายชื่อเป็น vCard เดียว เมื่ออุปกรณ์รุ่นเก่าไม่สามารถรับรายชื่อทั้งหมดได้ ให้เลือกตัวเลือกนี้

Portable hotspot – คุณสามารถกำหนดค่าการตั้งค่าฮอตสปอต Wi-Fi เคลื่อนที่ได้

ตั้งค่า VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

ตั้งค่าโทรศัพท์บนหน้าจอ – เลือกเพื่อเปลี่ยนรหัสผ่าน On-Screen Phone

โทร

< จำกัดการโทร >

เลือก **จำกัดการโทร** เพื่อเปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

< ข้อความเสียง >

บริการข้อความเสียง – ให้คุณเลือกบริการข้อความเสียงของผู้ให้บริการ

ตั้งค่าข้อความเสียง – หากคุณใช้บริการข้อความเสียงของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขโทรศัพท์ที่ใช้ฟังและจัดการข้อความเสียงของคุณ

< ตั้งค่าการโทรอื่นๆ >

ปฏิเสธการรับสาย – ตั้งค่าฟังก์ชัน

ปฏิเสธการรับสาย เลือกจาก **ปิด**,

ปฏิเสธรายการ หรือ **ปฏิเสธทุกสาย**

การส่งต่อสาย – เลือกว่าจะโอน

ทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อ

ไม่รับสาย หรือ โอนเมื่อไม่มีสัญญาณ

เพิ่มการตั้งค่า – ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

- **ข้อมูลผู้โทร:** เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

- **สายเรียกซ้อน:** หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังสนทนากับอีกสายหนึ่งอยู่ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

ป้องกันการโทร – เลือกเมื่อคุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับป้องกันการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

ค่าโทร – ดูค่าใช้จ่ายการโทรของคุณ (บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการบางรายไม่รองรับฟังก์ชันนี้)

เวลาโทร – ดูระยะเวลาการโทรทั้งหมดได้แก่ โทรครั้งล่าสุด ทุกสาย สายที่โทรออก และสายที่ได้รับ

ข้อความขอโทษ – เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะ เป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

ตั้งค่าการโทรวิดีโอ – เปลี่ยนการตั้งค่าการสนทนาทางวิดีโอ

เสียง

< ทัวไป >

โปรไฟล์เสียง – ให้คุณเลือกโหมดเสียงที่คุณต้องการ

ตั้งค่า

ระดับเสียง – ให้คุณตั้งระดับเสียงสำหรับเสียงเรียกเข้า มีเดียและการปลุก คุณสามารถตั้งระดับเสียงสายเรียกเข้า และการแจ้งเตือนแยกกันได้

< เสียงเรียกเข้า >

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

เสียงเรียกเข้าของการแจ้งเตือน – ให้คุณตั้งค่าเสียงเรียกเข้าการแจ้งเตือนของคุณ

เสียงเรียกเข้าพร้อมสั่น - สั่นเมื่อโทรเข้าและมีแจ้งเตือน

< การตอบรับ >

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อไขปุ่มตัวเลขเพื่อหมุนหมายเลข

การเลือกเสียง – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองการสัมผัส

เสียงลือคหน้าจอล – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อลือคและปลดลือคหน้าจอล

การโต้ตอบการสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์สั่นเล็กน้อยเมื่อคุณแตะปุ่มเลือกต่างๆ และเมื่อมีการโต้ตอบบางอย่างบน UI

หน้าจอ

ความสว่าง – ปรับความสว่างของหน้าจอ

หมุนจออัตโนมัติ – ตั้งค่าเพื่อสลับการวางแนวโดยอัตโนมัติเมื่อคุณหมุนโทรศัพท์

แอนิเมชัน – ตั้งค่าเพื่อแสดงแอนิเมชัน

ใหม่เอาต์หน้าจอ – ตั้งค่าเวลาใหม่เอาต์หน้าจอ

แสดงแบบอักษร - เปลี่ยนแบบอักษรที่แสดง

ป๊อปอัปเตือน – ตั้งค่าเพื่อสลับแสดงป๊อปอัปเตือน

ตัวประหยัดพลังงาน

เปิดตัวประหยัดพลังงาน - ให้คุณตั้งค่าเวลาเปิดเมื่อเริ่มต้นโหมดตัวประหยัดพลังงาน

<รายการประหยัดพลังงาน>

ตั้งค่าเพื่อปิดรายการที่ต้องการ:

Wi-Fi, **ซิงค์อัตโนมัติ**, **บลูทูธ**, **GPS**,

เอฟเฟกต์แอนิเมชัน, **ความสว่าง**

การปรับความสว่าง - หากคุณเลือก

ความสว่าง ให้ตั้งค่าเปอร์เซ็นต์

ความสว่าง

<แบตเตอรี่>

อัตราการใช้แบตเตอรี่ – ดูว่าอะไรกำลังใช้แบตเตอรี่

ท่าทางการเคลื่อนไหว

ใช้การเดาท่าทาง – ปรับตั้งค่าท่าทางการเคลื่อนไหวสำหรับสายเรียกเข้าและสำหรับใช้กับการตั้งปลุก

- **ปิดเสียง:** ให้คุณปิดเสียงโดยการคว้าเครื่องเมื่อมีสายเรียกเข้า
- **เลื่อน (หยุด):** ให้คุณเลื่อน (หยุด) การปลุกโดยคว้าเครื่องลง

รีเซ็ตเซนเซอร์ท่าทาง– การปรับเทียบเซนเซอร์การเคลื่อนไหวโดยวางโทรศัพท์บนพื้นผิวราบ

พิกัดและการป้องกัน

< ตำแหน่งของฉัน >

ใช้เครือข่ายไร้สาย – หากคุณเลือกใช้ **ใช้เครือข่ายไร้สาย** โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์เคลื่อนที่เมื่อคุณเลือกตัวเลือกนี้ คุณจะได้รับแจ้งว่าจะยินยอมให้ Google ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้หรือไม่

ใช้ดาวเทียม GPS – หากคุณเลือกใช้ **ใช้ดาวเทียม GPS** โทรศัพท์จะกำหนดตำแหน่งด้วยความแม่นยำระดับถนน

< ปลดล็อคหน้าจอ >

ตั้งค่าล็อคหน้าจอ – ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อค

หน้าจอ คุณสามารถตั้ง **PIN** หรือ **รหัสผ่าน** แทน **รูปแบบ** หรือเว้นไว้เป็น **ไม่มี** ได้

เมื่อคุณเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

< ล็อคซิมการ์ด >

ตั้งค่าล็อคซิมการ์ด – ตั้งค่าล็อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

< รหัสผ่าน >

รหัสผ่านที่มองเห็นได้ – เลือกให้แสดงรหัสผ่านเมื่อคุณพิมพ์ หรือยกเลิกการเลือกให้ซ่อนรหัสผ่านเมื่อคุณพิมพ์

< การจัดการอุปกรณ์ >

เลือกตัวช่วยอุปกรณ์ – เพิ่มหรือลบตัวช่วย

< พื้นที่จัดเก็บรหัสเฉพาะ >

ใช้รหัสเฉพาะรักษาความปลอดภัย – ให้คุณเข้าถึงใบรับรองความปลอดภัย

ติดตั้งจากการ์ด SD – เลือกติดตั้งใบรับรองที่เข้ารหัสจากการ์ด SD

ตั้งค่ารหัสผ่าน – ตั้งค่าหรือเปลี่ยนรหัสผ่านพื้นที่จัดเก็บรหัสเฉพาะ

ลบพื้นที่จัดเก็บ – ลบรหัสเฉพาะของเนื้อหาทั้งหมด และรีเซ็ตรหัสผ่าน

แอปพลิเคชัน

คุณสามารถดูและจัดการแอปพลิเคชัน

ตั้งค่า

แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจากตลาด

คำเตือน:

โทรศัพท์มือถืออาจทำงานผิดปกติและอาจถูกนำไปใช้อย่างผิดกฎหมายในการกำหนดตำแหน่งของคุณและเข้าถึงข้อมูลส่วนตัวผ่านอินเทอร์เน็ต ทั้งนี้ขึ้นอยู่กับแอปพลิเคชันที่คุณติดตั้ง เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Android Market เท่านั้น

จัดการแอปพลิเคชัน – จัดการและลบแอปพลิเคชันที่ติดตั้งแล้ว

บริการที่กำลังรัน – ตรวจสอบบริการที่กำลังรันอยู่ในปัจจุบัน

การใช้ที่เก็บข้อมูล – ดูที่เก็บข้อมูลที่ใช้แอปพลิเคชันใช้

อัตราการใช้แบตเตอรี่ – ดูว่าอะไรกำลังใช้แบตเตอรี่

การพัฒนา – ตั้งค่าตัวเลือกสำหรับการพัฒนาแอปพลิเคชัน

แอคเคาท์และการซิงค์

< **การตั้งค่าการซิงค์ทั่วไป** >

ข้อมูลแบ็คกราวด์ – อนุญาตให้แอป

พลิเคชันซิงโครไนซ์ข้อมูลในแบ็คกราวด์ไม่ว่าคุณกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล **ซิงค์อัตโนมัติ** – อนุญาตให้แอปพลิเคชันซิงโครไนซ์ ส่ง และรับข้อมูลตามกำหนดเวลาของตนเองได้

< **ตั้งค่าอัปเดต Social+** >

ตั้งค่า Social+ – อนุญาตให้ทำการตั้งค่าสภาพแวดล้อมของ Widget เครือข่ายสังคมที่เหมาะสมที่สุด

< **จัดการแอคเคาท์** >

แสดงแอคเคาท์ Google ทั้งหมดและแอคเคาท์อื่นๆ ที่คุณเพิ่มในโทรศัพท์ หากคุณแตะแอคเคาท์ในหน้าจอนี้ หน้าจอการตั้งค่าการซิงค์แอคเคาท์จะเปิด

ความเป็นส่วนตัว

เปลี่ยนการตั้งค่าสำหรับการจัดการการตั้งค่าและข้อมูลของคุณ

- **สำรองข้อมูลของฉัน:** เลือกเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google
- **เรียกคืนอัตโนมัติ:** ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณ เมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ
- **รีเซ็ตข้อมูลจากโรงงาน:** รีเซ็ตการ

ตั้งของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

หมายเหตุ:

- หากคุณเลือก รีเซ็ตข้อมูลจากโรงงาน จะเป็นการลบข้อมูลส่วนตัวทั้งหมดออกจากหน่วยความจำระบบของโทรศัพท์ รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google, แอคเคาท์อื่นๆ, ข้อมูล และการตั้งค่าระบบ/แอปพลิเคชัน ตลอดจนแอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM
- การรีเซ็ตโทรศัพท์จะไม่ใช่การลบการอัปเดตซอฟต์แวร์ระบบที่คุณดาวน์โหลด รวมถึงไฟล์ที่อยู่ในการ์ด microSD ของคุณหรือหน่วยความจำภายใน เช่น เพลงหรือภาพถ่าย ดังนั้น หากคุณต้องการลบข้อมูลทั้งหมดบนหน่วยความจำภายในโดยไม่ต้องรีเซ็ตโทรศัพท์ ให้เลือกกล่องทำเครื่องหมายลบหน่วยความจำภายใน

ที่เก็บข้อมูล

ตรวจสอบข้อมูลหน่วยความจำของการจัดหน่วยความจำและอุปกรณ์ของคุณ และฟอร์แมตหน่วยความจำภายนอกหรือภายใน.

คุณสามารถยกเลิกการเชื่อมต่อการ์ดหน่วยความจำ (การ์ด SD) เพื่อลบหรือฟอร์แมตอย่างปลอดภัย

ภาษาและคีย์บอร์ด

ใช้ ตั้งค่าภาษาและแป้นพิมพ์ เพื่อเลือกภาษาสำหรับข้อความในโทรศัพท์ และสำหรับการกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

Voice input & output

ตั้งค่าจดจำเสียงและใช้ตั้งค่า Text-to-speech เพื่อกำหนดคำตัวสังเคราะห์แปลงข้อความเป็นเสียงพูดของ Android เพื่อให้แอปพลิเคชันสามารถใช้ประโยชน์ได้

< Voice input >

ตั้งค่าจดจำเสียง – ใช้ **ตั้งค่าจดจำเสียง** เพื่อกำหนดค่าคุณสมบัติการป้อนด้วยเสียง Android

- **ภาษา:** เปิดหน้าจอซึ่งคุณสามารถกำหนดภาษาที่ใช้ในการป้อนข้อความด้วยเสียง
- **SafeSearch:** เปิดกล่องโต้ตอบซึ่ง

ตั้งค่า

คุณสามารถกำหนดว่าคุณต้องการให้ฟิลเตอร์ Google SafeSearch บล็อกผลการค้นหาบางชนิดหรือไม่

- **บล็อกคำที่ไม่เหมาะสม:** เมื่อไม่ได้เลือกไว้ ระบบความจำเสียงของ Google จะจดจำและบันทึกคำต่างๆ ที่คนส่วนใหญ่คิดว่าเป็นคำที่ไม่เหมาะสมไว้ เมื่อคุณป้อนข้อความด้วยเสียง แต่ถาเลือกตัวเลือกนี้ไว้ ระบบความจำเสียงของ Google จะแทนที่คำเหล่านั้นในบันทึกด้วยตัวเว้นว่างที่มีเครื่องหมายดาว (*)

< Voice output >

ตั้งค่า Text-to-speech – ใช้

ตั้งค่า Text-to-speech

เพื่อกำหนดค่าตัวสังเคราะห์ Text-to-speech ของ Android สำหรับแอปพลิเคชันที่สามารถใช้งานคุณสมบัตินี้ได้

หมายเหตุ:

หากคุณไม่ได้ติดตั้งข้อมูลตัวสังเคราะห์เสียงพูด จะมีเฉพาะการตั้งค่าติดตั้งข้อมูลเสียง เท่านั้น

- **ฟังตัวอย่าง:** เล่นเสียงตัวอย่างสั้นๆ ของตัวสังเคราะห์เสียงพูดโดยใช้การตั้งค่าในปัจจุบันของคุณ
- **ใช้การตั้งค่าของฉันเสมอ:** เลือกตัวเลือกนี้เพื่อใช้การตั้งค่าบนหน้าจอนี้

แทนการตั้งค่าตัวสังเคราะห์เสียงพูดที่มีอยู่ในแอปพลิเคชันอื่นๆ

- **Default engine:** เปิดกล่องโต้ตอบซึ่งคุณสามารถตั้งค่าแอปพลิเคชัน Text-to-speech ที่ต้องการเลือกใช้กรณีที่มีแอปพลิเคชันติดตั้งไว้มากกว่าหนึ่งแอปพลิเคชัน
- **ติดตั้งข้อมูลเสียง:** หากโทรศัพท์ของคุณไม่มีข้อมูลตัวสังเคราะห์เสียงพูดติดตั้งอยู่ ตัวเลือกนี้จะทำการเชื่อมต่อกับ Android Market และให้คำแนะนำในขั้นตอนการดาวน์โหลดและติดตั้งข้อมูลดังกล่าวแก่คุณ ตัวเลือกนี้จะไม่ทำงาน หากมีข้อมูลติดตั้งไว้อยู่แล้ว
- **อัตราการพูด:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกอัตราความเร็วในการพูดของตัวสังเคราะห์เสียง
- **ภาษา:** เปิดกล่องโต้ตอบซึ่งคุณสามารถเลือกภาษาของข้อความที่ต้องการให้ตัวสังเคราะห์เสียงอ่าน ตัวเลือกนี้มีประโยชน์เป็นอย่างยิ่งเมื่อใช้ควบคู่กับ **ใช้การตั้งค่าของฉันเสมอ** ซึ่งจะช่วยให้แน่ใจได้ว่าข้อความในแอปพลิเคชันต่างๆ ได้รับการอ่านอย่างถูกต้อง
- **Pico TTS:** กำหนดค่าการตั้งค่า Pico TTS

การช่วยสำหรับการเข้าถึง

ใช้การตั้งค่า **การช่วยสำหรับการเข้าถึง** เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติมเพื่อให้สามารถใช้งานได้

เชื่อมต่อ

< โหมดการเชื่อมต่อ USB >

โหมดการเชื่อมต่อเริ่มต้น - คุณสามารถตั้งค่าโหมดที่ต้องการ (ขารทเท่านั้น, ที่เก็บข้อมูล, PC ซอร์ฟแวร์ และ การปล่อยสัญญาณผ่าน USB)

ถามเสมอ - เลือกตัวเลือกนี้เพื่อเลือกโหมดการเชื่อมต่อ USB ทุกครั้งที่คุณเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์

< PC Suite >

การเชื่อมต่อ Wi-Fi - เลือกตัวเลือกนี้เพื่อใช้ **LG PC Suite** กับการเชื่อมต่อ Wi-Fi

โปรดอย่าลืมว่าควรมีการเชื่อมต่อเครือข่าย Wi-Fi สำหรับ LG PC Suite ด้วยการเชื่อมต่อ Wi-Fi ในการตั้งค่าการเชื่อมต่อ

วันที่และเวลา

ใช้การตั้งค่าวันที่และเวลาเพื่อตั้งค่าวิธีการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ได






เกี่ยวกับโทรศัพท์

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

LG On-Screen Phone

On-Screen Phone ให้คุณสามารถหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ คุณยังสามารถควบคุมโทรศัพท์มือถือจากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

ไอคอน On-Screen Phone

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์หรือยกเลิกการเชื่อมต่อ
-  หมุนหน้าจอ On-Screen Phone (ต้องใช้แอปพลิเคชันที่รองรับการหมุนเท่านั้น)
-  เปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

คุณสมบัติ On-Screen Phone

- การถ่ายโอนและการควบคุมแบบเรียลไทม์: แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- การควบคุมเมาส์: ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอมพิวเตอร์
- ป้อนข้อความด้วยแป้นพิมพ์: ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์
- ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์): ส่งไฟล์จากโทรศัพท์ (เช่น ภาพถ่าย วิดีโอ เพลง และไฟล์ Polaris Office)

ไปยังคอมพิวเตอร์ โดยเพียงคลิกขวาที่ไฟล์ที่คุณต้องการส่งไปยังคอมพิวเตอร์ และคลิก "บันทึกในคอมพิวเตอร์"

- ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์): ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง On-Screen Phone ฟิล์ที่ส่งจะถูกจัดเก็บในการ์ด SD ภายใน
- การแจ้งเตือนเหตุการณ์แบบเรียลไทม์: ป้อนข้อความเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความตัวอักษร/ มัลติมีเดียมาถึง

หมายเหตุ: การดูตัวอย่างในกล่องถ่ายรูป วิดีโอ และเนื้อหาจากโหมด 3D (3D เกมส์&แอปฯ, คู่มือ 3D, YouTube 3D, คลังภาพ 3D) ไม่รองรับใน OSP ดังนั้นจึงไม่สามารถใช้ไดบนคอมพิวเตอร์

วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์

- เยี่ยมชมหน้าหลัก LG (www.lg.com) และเลือกประเทศที่คุณต้องการ
- ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P720h) > คลิก **OSP** (On-Screen Phone) เพื่อดาวน์โหลด จากนั้น คุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

วิธีเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

การเชื่อมต่อ USB:

- 1 เปิดวีซาร์ดการเชื่อมต่อ เลือก "การเชื่อมต่อผ่านสายเคเบิล USB" แล้วคลิก "ถัดไป"
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB แล้วคลิก "ถัดไป"
- 3 ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" รหัสผ่านเริ่มต้นคือ "0000" คุณสามารถแก้ไขรหัสผ่านได้ใน **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่าโทรศัพท์บนหน้าจอ**
- 4 คลิก "ตกลง" เพื่อออกจากหน้าต่าง

การเชื่อมต่อไร้สายด้วยบลูทูธ:

- 1 ในโทรศัพท์ ให้ไปที่ **ตั้งค่า > ระบบไร้สายและเครือข่าย > การตั้งค่า** เลือก **เปิดบลูทูธ** แล้วเลือก **ค้นหาได้**
- 2 หากเคยเชื่อมต่อโดยใช้สายเคเบิลมาก่อนหน้านี้ ให้รับวีซาร์ดการเชื่อมต่อใหม่เพื่อสร้างการเชื่อมต่อใหม่
- 3 รับวีซาร์ดการเชื่อมต่อในคอมพิวเตอร์ โดยเลือก "การเชื่อมต่อบลูทูธ" แล้วเลือก "ถัดไป"
- 4 วีซาร์ดจะเริ่มต้นค้นหาโทรศัพท์ที่ใช้บลูทูธ เมื่อโทรศัพท์ที่คุณต้องการเชื่อมต่อปรากฏขึ้น ให้คลิก "หยุด" เพื่อหยุดการค้นหา
- 5 เลือก "LG-P720h" จากรายการอุปกรณ์ แล้วคลิก "ถัดไป" คุณสามารถเปลี่ยนชื่ออุปกรณ์หากต้องการ
- 6 ยอมรับคำขอจับคู่ในโทรศัพท์ของคุณ


และเลือก "ถัดไป" ในคอมพิวเตอร์

- 7 ป้อนรหัสผ่าน On-Screen Phone แล้วคลิก "ถัดไป" (รหัสผ่านเริ่มต้นคือ "0000")
- 8 และ "ตกลง" เพื่อออก

ในการตรวจสอบการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

เมื่อเชื่อมต่ออุปกรณ์แล้ว ให้ลากแถบการแจ้งเตือนบนของหน้าจอหลักลงมาเพื่อตรวจสอบสถานะการเชื่อมต่อ On-Screen Phone

การยกเลิกการเชื่อมต่อโทรศัพท์กับคอมพิวเตอร์

คลิก  ที่ด้านบนซ้ายของหน้าต่าง On-Screen Phone หรืออีกวิธีหนึ่งคือให้ลากแถบการแจ้งเตือนบนของหน้าจอหลักลงมา แล้วเลือก "On-Screen Phone" และ "ใช่" ในหน้าต่างยกเลิกการเชื่อมต่อ

หมายเหตุ: คุณต้องรีสตาร์ทโทรศัพท์หลังจากปิดบริการ On-Screen Phone

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ผ่านการเชื่อมต่อ USB หรือ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาวิดีโอของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาวิดีโอไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคลากร) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาวิดีโอในคอมพิวเตอร์ของคุณจากอุปกรณ์อื่น

เคล็ดลับ! คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาวิธีการใช้งานซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บเพจของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ **การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P720h)**
- 3 คลิก **PC Sync** จาก **ดาวน์โหลด** และคลิก **WINDOW PC Sync ดาวน์โหลด** เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ข้อกำหนดของระบบสำหรับซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต, Windows 7 32 บิต/64 บิต
- CPU: โพรเซสเซอร์ 1GHz หรือสูงกว่า
- หน่วยความจำ: 512MB RAM

หรือสูงกว่า

- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

- จำเป็นต้องใช้ไดรเวอร์ USB ในตัวของ LG ในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

การเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์

ซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" สามารถเชื่อมต่ออุปกรณ์โดยใช้สาย USB หรือ Wi-Fi ได้

วิธีการเชื่อมต่ออุปกรณ์ด้วยสายเคเบิล USB

- 1 คลิก  ที่ด้านบนสุดของหน้าจอ

- 2 ส่วนที่เก็บข้อมูลอุปกรณ์จะถูกสร้างขึ้นในส่วนไลบรารีบริเวณด้านซ้ายของหน้าจอ และอุปกรณ์จะถูกเชื่อมต่อ

หมายเหตุ: เมื่อคุณเลือกโหมดการเชื่อมต่อจากอุปกรณ์ เลือก 'PC ซอร์ฟแวร์' เพื่อเชื่อมต่อ

วิธีการสร้างการเชื่อมต่อไร้สายด้วย Wi-Fi

การเชื่อมต่อ Wi-Fi สำหรับอุปกรณ์ การเชื่อมต่ออีเทอร์เน็ตสำหรับคอมพิวเตอร์ ด้วยเราเตอร์ไร้สายตัวเดียวกัน:

- การกำหนดค่าอุปกรณ์
 - 1 จากอุปกรณ์ของคุณ เลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi** และเปิดใช้งาน Wi-Fi
 - 2 จากรายการเครือข่าย Wi-Fi ที่ค้นหา ให้เลือกเครือข่ายที่จะเชื่อมต่อ
 - 3 คุณอาจต้องป้อนรหัสผ่านหากเครือข่ายมีการรักษาความปลอดภัย
 - 4 จากอุปกรณ์ของคุณ เลือก **ตั้งค่า > เชื่อมต่อ > เปิดใช้งานการเชื่อมต่อ Wi-Fi**
- การกำหนดค่าคอมพิวเตอร์

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

- 1 ไปที่ **การกำหนดค่าเครือข่าย**
- 2 ตรวจสอบให้แน่ใจว่าคอมพิวเตอร์เชื่อมต่อกับเครือข่ายเดียวกันกับที่เชื่อมต่อกับอุปกรณ์

การเชื่อมต่อ Wi-Fi สำหรับทั้งอุปกรณ์และคอมพิวเตอร์ ด้วยเราเตอร์ไร้สายเดียวกัน:

- การกำหนดค่าอุปกรณ์
 - 1 จากอุปกรณ์ของคุณ เลือก **ตั้งค่า > ตั้งค่าการเชื่อมต่อ > ตั้งค่า Wi-Fi** และเปิดใช้งาน Wi-Fi
 - 2 จากรายการเครือข่าย Wi-Fi ที่ค้นหา ให้เลือกเครือข่ายที่จะเชื่อมต่อ
 - 3 คุณอาจต้องป้อนรหัสผ่านหากเครือข่ายมีการรักษาความปลอดภัย
 - 4 จากอุปกรณ์ของคุณ เลือก **ตั้งค่า > เชื่อมต่อ > เปิดใช้งานการเชื่อมต่อ Wi-Fi**

- การกำหนดค่าคอมพิวเตอร์
 - 1 ไปที่ **การกำหนดค่าเครือข่าย**
 - 2 ตรวจสอบให้แน่ใจว่าคอมพิวเตอร์เชื่อมต่อกับเครือข่ายเดียวกันกับที่เชื่อมต่อกับอุปกรณ์

วิธีการเชื่อมต่อกับฮอตสปอต:

- การกำหนดค่าอุปกรณ์
 - 1 เลือก **ตั้งค่า >**

ตั้งค่าการเชื่อมต่อ >

Portable hotspot

เพื่อกำหนดค่าฮอตสปอต Wi-Fi

- 2 จากขั้นตอนที่ 1 ให้เลือก

Portable Wi-Fi hotspot >

Portable Wi-Fi hotspot

settings > Configure Wi-Fi hotspot จดข้อมูล


SSID ของเครือข่ายไว้

- การกำหนดค่าคอมพิวเตอร์

- 1 ไปที่ **การกำหนดค่าเครือข่าย**

- 2 ตรวจสอบให้แน่ใจว่าคอมพิวเตอร์เชื่อมต่อกับ Portable hotspot เดียวกัน

โปรดอ่านด้านบนและปฏิบัติตามขั้นตอนด้านล่าง

- 1 คลิก  ที่ด้านบนของหน้าจอ
- 2 แล้วเลือกการเชื่อมต่อ Wi-Fi
- 3 โปรดปฏิบัติตามคำแนะนำในเวิร์ดการเชื่อมต่อ
- 4 ส่วนที่เก็บข้อมูลอุปกรณ์จะถูกสร้างขึ้นในส่วนไลบรารีบริเวณด้านซ้ายของหน้าจอ และอุปกรณ์จะถูกเชื่อมต่อ

หมายเหตุ:

- หากคุณไม่สามารถค้นหาอุปกรณ์ที่จะเชื่อมต่อได้จากอุปกรณ์ ให้เลือก **ตั้งค่า > เชื่อมต่อ > เปิดใช้การเชื่อมต่อ Wi-Fi** และคลิก **ลองใหม่** ในคอมพิวเตอร์
- คุณอาจพบกับการเชื่อมต่อ Wi-Fi ที่ไม่ดี ทั้งนี้ขึ้นอยู่กับข้อกำหนดค่าเครือข่ายและสถานะของเครือข่าย

- หากคุณเชื่อมต่ออุปกรณ์และคอมพิวเตอร์ด้วยฮอตสปอตและใช้อินเทอร์เน็ตบนคอมพิวเตอร์ คุณอาจเสียค่าใช้จ่ายในการเชื่อมต่อกับฮอตสปอตตามแผนการชำระเงินของคุณ
- แบตเตอรี่อุปกรณ์ของคุณอาจหมดอย่างรวดเร็วหากคุณใช้งาน Wi-Fi

การซิงโครไนซ์อุปกรณ์ของคุณกับคอมพิวเตอร์

ข้อมูลของอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่าย ด้วยซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" เพื่อความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ

และบัตรมาร์คได้ด้วย

ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
- 2 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
- 3 คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
- 4 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

- 1 ติดตั้งซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite" บนคอมพิวเตอร์ เรียกใช้โปรแกรมและเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 จากด้านบนสุดของหน้าจอ เลือก **อุปกรณ์ > อิมพอร์ตข้อมูลส่วนตัว > อิมพอร์ตรายชื่อ**
- 3 จะมีป๊อปอัพสำหรับการเปิดไฟล์รายชื่อปรากฏขึ้น
- 4 เลือกไฟล์รายชื่อและคลิก **เปิด**
- 5 ป๊อปอัพสำหรับการอิมพอร์ตรายชื่อ

ซอฟต์แวร์คอมพิวเตอร์ (LG PC Suite)

ใหม่จากคอมพิวเตอร์ ไปยังรายชื่อ
ในอุปกรณ์จะปรากฏขึ้น

- 6 หากรายชื่อในอุปกรณ์และรายชื่อ
ใหม่จากคอมพิวเตอร์ไม่เหมือนกัน
ให้เลือกรายชื่อที่คุณต้องการ
อิมพอร์ตจากคอมพิวเตอร์
- 7 คลิกปุ่ม [ตกลง] เพื่ออิมพอร์ตรายชื่อ
ใหม่จากคอมพิวเตอร์ลงในอุปกรณ์

การส่งเนื้อหาที่มีเดียจากอุปกรณ์ไป ยังคอมพิวเตอร์

- 1 เชื่อมต่ออุปกรณ์และคอมพิวเตอร์
ด้วยสายเคเบิล USB
- 2 เรียกใช้ซอฟต์แวร์คอมพิวเตอร์
"LG PC Suite"
- 3 หลังจากการเชื่อมต่อ เลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของ
หน้าจอ
- 4 เลือก **มีเดีย**
- 5 เลือกช่องทำเครื่องหมายของเนื้อหาที่จะส่ง
- 6 คลิก **เริ่ม** เพื่อถ่ายโอนเนื้อหาจาก
อุปกรณ์ไปยังคอมพิวเตอร์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง

โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB

หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์ได้ที่: **ตั้งค่า > เกี่ยวกับโทรศัพท์ > ซอฟต์แวร์อัปเดต >**

ตรวจสอบอัปเดตในตอนนี้

คุณสามารถเลือกการอัปเดตเป็นเวลา 1 ชั่วโมง, 4 ชั่วโมง, 8 ชั่วโมง หรือหนึ่งวันได้ ในกรณีนี้ แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาการอัปเดตด้วยตัวคุณเองอีกด้วย

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย พื้นที่ และประเทศของคุณ

เครื่องหมายการค้า

- ลิขสิทธิ์ 2012 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง
- Bluetooth® เป็นเครื่องหมายการค้าจดทะเบียนของ Bluetooth SIG, Inc. ทั่วโลก
- Wi-Fi®, โลโก้ Wi-Fi CERTIFIED และโลโก้ Wi-Fi เป็นเครื่องหมายการค้าจดทะเบียนของ Wi-Fi Alliance
- เครื่องหมายการค้าและลิขสิทธิ์อื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ

DivX Mobile

เกี่ยวกับวิดีโอ DIVX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ DivX Certified® อย่างเป็นทางการซึ่งสามารถเล่นวิดีโอ DivX ใด สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ www.divx.com เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่า

อุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน **DivX Certified®** สำหรับเล่นวิดีโอ DivX® ใดสูงสุด **HD 720p** รวมถึงข้อมูลฟรีเมียม **DivX®, DivX Certified®** และโลโก้ที่เกี่ยวข้องของเป็นเครื่องหมายการค้าของ **Rovi Corporation** หรือบริษัทในเครือ และใช้โดยได้รับอนุญาต และใช้โดยได้รับอนุญาต ได้รับความคุ้มครองตามสิทธิบัตรของสหรัฐอเมริกาดังต่อไปนี้: **7,295,673; 7,460,668; 7,515,710; 7,519,274**

หมายเหตุ:

ซอฟต์แวร์โอเพ่นซอร์ส

ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และใบอนุญาตโอเพ่นซอร์สอื่นๆ โปรดไปที่ <http://opensource.lge.com/>

เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ และประกาศที่อ้างอิงถึงทั้งหมด สามารถดาวน์โหลดได้พร้อมกับซอร์สโค้ด

- Wi-Fi® และ Wi-Fi Protected Access® เป็นเครื่องหมายการค้า

จดทะเบียนของ Wi-Fi Alliance



ผลิตภายใต้การอนุญาตจาก DTS
Licensing Limited DTS และสัญลักษณ์
เป็นเครื่องหมายการค้าจดทะเบียน, &
DTS 2.0 Channel และโลโก้ DTS
เป็นเครื่องหมายการค้าของ DTS, Inc.
ผลิตภัณฑ์รวมถึงซอฟต์แวร์
© DTS, Inc. สงวนลิขสิทธิ์



Manufactured under license from
Dolby Laboratories.
Dolby และสัญลักษณ์ตัวอักษร
D สองตัว เป็นเครื่องหมายการค้าของ
Dolby Laboratories

ข้อมูลทางเทคนิค

อุณหภูมิแวดล้อม

สูงสุด: +50°C (คายประจุ), +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

คำประกาศรับรอง

ดังนั้น **LG Electronics**

ขอประกาศว่าผลิตภัณฑ์

LG-P720h

เป็นไปตามข้อกำหนดที่จำเป็นและ

ข้อกำหนดที่เกี่ยวข้องของอื่นๆ ของ

Directive 1999/5/EC คุณสามารถ

ดูสำเนาของคำประกาศรับรองได้ที่

**[http://www.lg.com/
global/support/cedoc/
RetrieveProductCeDOC.jsp](http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp)**

ศูนย์บริการ LG โดย บริษัท แอลจี อีเลคทรอนิคส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน

แขวงบुकคโล เขตธนบุรี กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

อุปกรณ์เสริม

อุปกรณ์เสริมต่างๆ เหล่านี้มีให้ใช้กับโทรศัพท์ LG-P720h
(รายการต่างๆ ที่อธิบายด้านล่างนี้เป็นตัวเลือก)

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่



แบตเตอรี่



ชุดหูฟัง
สเตอริโอ



สายเคเบิล
ข้อมูล
เชื่อมต่อโทรศัพท์
LG-P720h
ของคุณกับ
คอมพิวเตอร์



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับ
โทรศัพท์
LG-P720h



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามข้อแนะนำนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหามางประเภท แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|---|---|---|
| ข้อผิดพลาดของซิมการ์ด | ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง | ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง |
| ไม่มีการเชื่อมต่อกับเครือข่าย/เครือข่ายขาดหาย | สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการผู้ให้บริการใช้บริการใหม่ | ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย ตรวจสอบว่าซิมการ์ดใช้งานมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สาขาของผู้ให้บริการเครือข่ายที่ใกล้ที่สุด ติดต่อผู้ให้บริการ |
| รหัสไม่ตรงกัน | ในการเปลี่ยนรหัสป้องกันคุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำ รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน | หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ |
| ตั้งค่าแอปพลิเคชันไม่ได้ | ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน | ติดต่อผู้ให้บริการ |

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|---|---|---|
| ไม่สามารถโทรออกได้ | ข้อผิดพลาดในการติดต่อหมายเลข มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบ เติมเงิน | ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการ โทรใหม่โดยใช้รหัส PIN2 |
| เปิดเครื่อง โทรศัพท์ไม่ได้ | กดปุ่มเปิด/ปิดเครื่องแล้ว ปล่อยให้เย็นไป ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก | กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลัง ชาร์จบนหน้าจอ ทำความสะอาดขั้วแบตเตอรี่ |
| ข้อผิดพลาดเกี่ยว กับการชาร์จ | ไม่ได้ชาร์จแบตเตอรี่ อุณหภูมิภายนอกร้อน หรือเย็นเกินไป มีปัญหาที่ขั้วสัมผัส ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูก ตอง แบตเตอรี่ชำรุด | ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟ ที่อุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับ โทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่ |
| หมายเลขโทรศัพท์ ใช้โทรออกไม่ได้ | กำลังใช้งานฟังก์ชัน กำหนดหมายเลข โทรออก | ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว |
| ไม่สามารถรับ/ ส่งข้อความตัวอักษร และรูปภาพได้ | หน่วยความจำเต็ม | ลบข้อความบางข้อความออกจากโทรศัพท์ |

การแก้ปัญหา

| ข้อความ | สาเหตุที่เป็นไปได้ | วิธีการแก้ไขที่เป็นไปได้ |
|------------------------------|-------------------------------|--|
| เปิดไฟล์ไม่ได้ | ไม่สนับสนุนรูปแบบไฟล์ | ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน |
| การ์ด SD ไม่ทำงาน | สนับสนุนระบบไฟล์ FAT16, FAT32 | ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ด หรือฟอรัมการ์ด SD โดยใช้โทรศัพท์ |
| หน้าจอไม่ทำงานเมื่อฉันรับสาย | เซนเซอร์รับสัญญาณมีปัญหา | หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด |
| ไม่มีเสียง | โหมดสั้น | ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสั้นหรือโหมดปิดเสียง |
| โทรศัพท์ค้างหรือไม่ทำงาน | ปัญหาซอฟต์แวร์ชั่วคราว | ถอดแล้วใส่แบตเตอรี่กลับเข้าไปอีกครั้ง เปิดโทรศัพท์ ลองใช้บริการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์ |

LG-P720h User Guide

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Contents

| | |
|---|----|
| Guidelines for safe and efficient use | 5 |
| Getting to know your phone | 12 |
| Before you start using the phone, please read this! ... | 12 |
| Device components | 17 |
| Installing the SIM card and battery | 19 |
| Charging your phone..... | 20 |
| Using the memory card.... | 20 |
| Locking and unlocking the screen | 21 |
| Secure your lock screen... | 22 |
| Your Home screen | 23 |
| Touch screen tips | 23 |
| Home screen..... | 23 |
| Customising the Home screen | 24 |
| Customising the Application design from Home screen | 25 |
| Returning to recently-used applications..... | 25 |
| Notification drawer..... | 25 |
| Onscreen keyboard..... | 27 |
| Entering accented letters.. | 27 |
| Google account set up | 28 |
| 3D Space | 29 |
| 3D Guide..... | 29 |
| 3D Gallery | 29 |
| 3D Games & Apps | 29 |
| 3D Converter | 29 |
| 3D Camera..... | 30 |
| YouTube 3D..... | 30 |
| Backup | 31 |
| About backing up and restoring smart phone data..... | 31 |
| Back up your smart phone data..... | 31 |
| Scheduling automatic backups..... | 31 |
| Restoring smart phone data..... | 32 |
| Calls | 33 |
| Making a call..... | 33 |
| Making a video call..... | 33 |
| In Video call Menu | 33 |
| Calling your contacts..... | 33 |
| Answering and rejecting a call | 33 |
| Adjusting call volume | 34 |
| Making a second call | 34 |
| Viewing your call logs..... | 34 |
| Call settings | 34 |
| Contacts | 35 |
| Searching for a contact | 35 |
| Adding a new contact | 35 |
| Favourite contacts | 35 |
| Import or export contacts | 35 |
| Moving Contacts from your Old Device to your New Device | 36 |
| Messaging | 37 |
| Sending a message | 37 |
| Threaded box | 37 |
| Using Smilies..... | 37 |
| Changing your message settings..... | 38 |
| Email | 39 |
| Managing an email account . | 39 |
| Email account screen..... | 39 |
| Working with account folders | 39 |
| Composing and sending email | 40 |
| Camera | 41 |
| Getting to know the viewfinder | 41 |
| Taking a quick photo | 42 |
| Once you've taken the photo | 42 |

| | | | |
|---|-----------|---|-----------|
| Using the advanced settings..... | 42 | | |
| Video camera..... | 44 | LG SmartWorld | 53 |
| Getting to know the viewfinder | 44 | How to Get to LG SmartWorld from Your Phone | 53 |
| Shooting a quick video | 45 | How to use LG SmartWorld | 53 |
| After shooting a video | 45 | Connectivity | 54 |
| Using the advanced settings..... | 45 | Bluetooth | 54 |
| Adjusting the volume when viewing a video | 46 | Wi-Fi..... | 55 |
| 3D photos and videos | 46 | Using SmartShare..... | 56 |
| Multimedia..... | 48 | Mobile network sharing.... | 58 |
| Gallery | 48 | GPS | 59 |
| Music | 48 | PC connections with a PC data cable..... | 60 |
| FM Radio | 49 | VPN connections | 61 |
| The web..... | 50 | Settings | 63 |
| Browser | 50 | Wireless & networks | 63 |
| Using options | 50 | Call settings | 64 |
| Utilities..... | 51 | Sound | 65 |
| Setting your alarm | 51 | Display..... | 65 |
| Using your calculator..... | 51 | Power Saver..... | 65 |
| Adding an event to your calendar..... | 51 | Gesture..... | 66 |
| Changing your calendar view..... | 51 | Location & security | 66 |
| Polaris Office..... | 51 | Applications | 67 |
| Video editor..... | 52 | Accounts & sync..... | 67 |
| | | Privacy..... | 67 |
| | | Storage..... | 68 |
| | | Language & keyboard | 68 |
| | | Voice input & output..... | 68 |
| | | Accessibility | 69 |
| | | Connectivity..... | 70 |
| | | Date & time..... | 70 |
| | | About phone..... | 70 |
| | | LG On-Screen Phone..... | 71 |
| | | On-Screen Phone icons.... | 71 |
| | | On-Screen Phone features | 71 |
| | | How to install On-Screen Phone on your PC..... | 71 |
| | | How to connect your mobile phone to your PC..... | 72 |
| | | To check the phone-to-PC connection | 72 |
| | | To disconnect your phone from your PC..... | 72 |
| | | PC software(LG PC Suite).. | 73 |
| | | Connecting your Device to your PC..... | 74 |
| | | Synchronising your Device to a Computer | 75 |
| | | Moving Contacts from your Old Device to your New Device | 76 |
| | | Sending Multimedia contents from Device to PC..... | 76 |
| | | Phone software update..... | 77 |

Contents

| | |
|-----------------------------|-----------|
| Trademarks..... | 78 |
| DivX Mobile | 78 |
| DTS | 78 |
| Dolby Mobile | 78 |
| Technical data..... | 79 |
| Accessories | 80 |
| Troubleshooting..... | 81 |

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P720h has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.196 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous, and may cause a touching error.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to do so by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, as it may cause damage to the phone and invalidation of warranty.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
 - Give full attention to driving.
 - Pull off the road and park before making or answering a call if driving conditions so require.
 - RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
 - When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
 - If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.
- Efficient phone operation**
- Electronics devices**
- All mobile phones may get interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
 - Some hearing aids might be disturbed by mobile phones.

Guidelines for safe and efficient use

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It contains small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places as this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Guidelines for safe and efficient use

3D Content Viewing Precautions

1. Viewing Environment

1.1 Viewing Time WARNING

- When watching 3D contents, take 5 - 15 minute breaks every hour. Viewing 3D contents for extended periods of time may cause headache, dizziness, fatigue or eye strain.

1.2 Viewing Distance CAUTION

- Maintain a distance of at least 30 cm when watching 3D contents. If you feel discomfort in viewing 3D contents, hold the screen further away.

2. Viewing Age CAUTION

2.1 Infants/Children

- Prevent children under the age of 5 from watching or operating the 3D television.
- Children under the age of 10 may be more prone to react while watching 3D contents such as touching the screen, or jumping towards the image. Extra monitoring is required for children watching 3D contents. For children, the distance between their eyes is shorter than that of adults, so they have greater binocular disparity of 3D presentations than adults, perceiving

more stereoscopic depth even for the same 3D image.

2.2 Teenagers

- Teenagers under the age of 19 may react with sensitivity due to stimulation from light in 3D contents. Advise them to refrain from watching 3D contents for a long time when they are tired.

2.3 Elderly

- Due to the age, elderly people may perceive less 3D effect than younger people. Do not sit closer to the screen than the recommended distance.

3 Those that had a chronic illness and/or pregnancy WARNING

- Do not watch 3D images if you feel nausea frequently, are pregnancy and/ or have a chronic illness such as epilepsy, cardiac disorder, or blood pressure disease, etc.
- If you suffer from stereo blindness or stereo anomaly, it is not recommended to watch 3D images. You may experience double images or discomfort in viewing.
- If you have squint, amblyopic or astigmatism, you may have difficulty sensing depth and easily feel fatigued

due to double images. It is advised to take a break more often than general adults do.

- If you have different eyesight between your right and left eyes, ensure to use your eye glasses (spectacles) before watching 3D images.

4 Symptoms requiring you to refrain from or stop watching 3D images



- Do not watch 3D images when you feel fatigue due to lack of sleep, overwork or drinking .
- If you experience those symptoms, stop using/watching 3D images and rest until the symptom disappears.
 - Headache, eye strain, dizziness, nausea, palpitation, blurriness, discomfort, double image, visual inconvenience or fatigue If your symptoms persist, please consult your doctor.

5 Photosensitive seizure

- Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular pattern.

Getting to know your phone

Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 **Applications > Settings > Applications > Manage applications.**
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall.**

2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth, turn them off.

- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- **Applications > Settings > About phone > Status.**

The battery status (charging or not charging) and level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- **Applications > Settings > About phone > Battery use**

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Android Market™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

4. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

- 1 Turn the power off.
- 2 Press and hold the **3D key + Volume**

Down key simultaneously and press the Power/Lock key.

- 3 Once LG Logo appears on the screen, release all Keys.
- 4 After some seconds, allow you to select factory reset function in the Android system recovery utility.
- 5 Scroll the list by **Volume keys** and select it by **3D key**.

WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.

5. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

Getting to know your phone

To stop applications:

- 1 **Applications > Settings > Applications > Running services**
- 2 Scroll to the desired application and touch **Stop** to stop it.

TIP! To return to recent application, press and hold the **Home** key. The screen then displays a list of applications you have recently used.

6. Installing PC Software(LG PC Suite)

"LG PC Suite" PC Software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.

- Play multimedia contents of your PC from other device.

TIP! You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support** > Select the Model (LG-P720h).
- 3 Click **PC Sync** from **Downloads**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1GHz or higher processor
- Memory: 512MB or higher RAM
- Graphic card: 1024 x 768 resolution, 32 bit color or higher

- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers.

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software.

7. Synchronising your phone to a Computer

Data of your device and PC can be synchronised easily with "LG PC Suite" PC software for your convenience. Contacts, schedules, and bookmarks can be synchronised.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.
- 4 Select the checkbox of contents to synchronise and click the **Sync** button.

8. Transferring music, photos and videos using USB mass storage devices

1 Applications > Settings > Storage

to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)

- 2 Connect the phone to your PC using the USB cable.
- 3 **USB connection mode** list will appear, and select **Mass storage** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 When you are finished, select **Charge only** option to disconnect the phone.

Getting to know your phone

9. Hold your phone upright

Hold your mobile phone vertically, as you hold a regular phone. The LG-P720h has an internal antenna. Also mention not to scratch or damage the inside of the back cover as this is the antenna.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

10. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on.

OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components

Earpiece

Front camera lens


Proximity sensor

Home key 

Return to the Home screen from any screen.

Menu key 

Check what options are available.

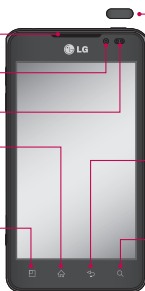

Power/Lock key

- Switch your phone on/off by pressing and holding this key.
- Short press to lock/unlock the screen.

Back key 

Return to the previous screen.

Search key 


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

⚠ WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

Getting to know your phone




Volume keys

- In the Home screen: Control ringer volume.
- During a call: Control your earpiece volume.
- When playing a track: Control volume continuously.

Charger, micro USB cable connector

3D key


- In the Home screen : access 3D Space directly by holding this key down.
- In the Camera mode: take a photo by pressing this key.
- Viewing files in Gallery : Switch between 2D and 3D mode of viewing by short pressing this key.

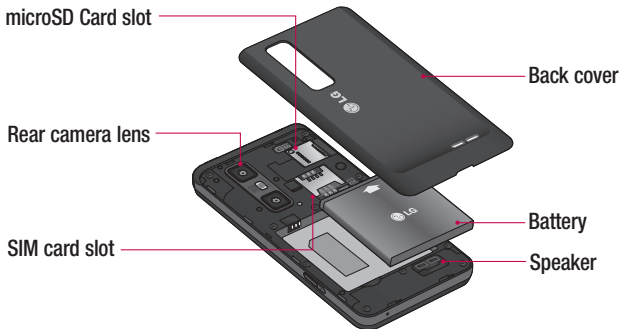


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the back cover, hold the phone firmly in one hand. With your other hand, pull off the back cover with your thumb as shown in figure.

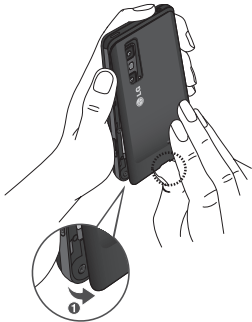

- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

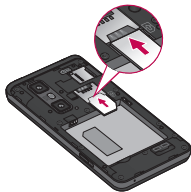

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

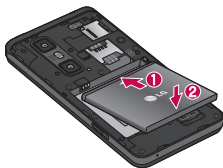

Getting to know your phone

- 4 Align the back cover over the battery compartment (1) and press it down until it clicks into place (2).



Charging your phone

Slide and open the cover of the charger connector on the side. Insert the charger and plug it into an electrical outlet.



NOTE: The battery must be fully charged initially to improve battery lifetime.

Using the memory card


Your phone supports the use of microSD™ or microSDHC™ memory cards of up to 32GB capacity. These memory cards are specifically designed for mobile phones and other ultra-small devices, and are ideal for storing media-rich files such as music, programs, videos, and photographs for use with your phone.

To insert a memory card:


Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

To remove the memory card safely:

Applications > Settings > Storage > Unmount SD card.

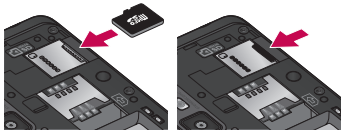


NOTE: Use only compatible memory cards with your phone. Using incompatible memory cards may damage the card and data stored on the card, as well as the phone.

 **WARNING:** Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.


NOTE: All files on your memory card are deleted when it is formatted.

- 1 On the Home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Touch **Unmount SD card**.
- 4 Touch **Format SD card** > **Format SD card** > **Erase everything**
- 5 If you have set a pattern lock, input the pattern lock then select **Erase everything**.


NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P720h, press the Power/Lock key  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the Power/Lock key . The lock screen will appear. Touch and slide the lock screen upwards to unlock your home screen. The last screen you viewed will open.

Getting to know your phone

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- Applications > Settings > Location & security > Set up screen lock > Pattern, PIN or Password

Once it is set, you can change it on the **Change screen lock** menu.

NOTE:

Precautions to take when using Screen lock.

It is very important to remember the unlock Pattern, Pin & Password you set. You will not be able to access your phone if you use an incorrect Pattern, Pin & Password 5 times. You have 5 opportunities to enter your unlock Pattern, PIN or Password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock Pattern, PIN or Password:

- **If you have forgotten Pattern :**
If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern?** button. You are then required to log in with your Google account to unlock your phone.
If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.
- **If you have forgotten PIN or Password:**
If you forgot your PIN or Password, you need to do Hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Flick – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home screen

Simply swipe your finger to the left or right to view the panels. You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.



NOTE: Some screen images may be different depending on your phone provider.


On your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.

Your Home screen


 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Customising the Home screen

You can customise your Home screen by adding widgets, shortcuts, folders or wallpapers. For more convenience using your phone, add your favourite widgets to the Home screen.

To add items on your Home screen:

1 Home screen > Menu  > Add


OR

Touch and hold the empty part of the Home screen.

2 In the **Edit mode** menu, select items you want to add. You will then see added items on the Home screen.

3 Drag it to the location you want and lift your finger.

To remove an item from the Home screen:

• **Home screen >** touch and hold the icon you want to remove > drag it to 

TIP! To add an application icon to the Home screen from the Applications menu, touch and hold the application you want to add.

Customising the Application design from Home screen





NOTE:

Allow you to make and use an icon by pictures in your Gallery.

According to your preference you can further edit application icons on the Home screen.

- 1 Tap and hold an application to customise for a while, then the editing icon appears at the upper right side of the application icon.
- 2 Tap the editing icon and select the desired icon design.

Returning to recently-used applications

- 1 Touch and hold the **Home** key .
The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application.
Or touch the **Back** key  to return to your current application.

Notification drawer

The notification drawer runs across the top of your screen.



Sound/
Vibrate/
Silent


Wi-Fi

Bluetooth

GPS

Data
enabled

Touch and slide the notification drawer down with your finger.

Or, on the Home screen, press the **Menu** key  and select **Notifications**. Here you can check manage Sound/Vibrate/Silent, Wi-Fi, Bluetooth, the music player, etc.

Your Home screen

Viewing the status bar







The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Wi-Fi, Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the status bar.

| Icon | Description |
|------|---------------------------------|
| | No SIM card |
| | No signal |
| | Airplane mode |
| | Connected to a Wi-Fi network |
| | Wired headset |
| | Call in progress |
| | Call hold |
| | Speakerphone |
| | Phone microphone is muted |
| | Missed call |
| | Bluetooth is on |
| | Connected to a Bluetooth device |
| | System warning |
| | Alarm is set |

| Icon | Description |
|------|--|
| | New voicemail |
| | Ringer is silenced |
| | Vibrate mode |
| | Battery fully charged |
| | Battery is charging |
| | Data in and out |
| | Phone is connected to PC via USB cable |
| | Downloading data |
| | Uploading data |
| | GPS is acquiring |
| | Receiving location data from GPS |
| | On-Screen Phone connected |
| | 3 more notifications not displayed |
| | Data is syncing |
| | Download finished |
| | New Gmail |
| | New Google Talk message |
| | New message |



| Icon | Description |
|--|--|
|  | Song is playing |
|  | Upcoming event |
|  | FM radio turned on in the background |
|  | USB tethering is active |
|  | Portable Wi-Fi hotspot is active |
|  | Both USB tethering and portable hotspot are active |


Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double tap for all caps.

  Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to view or touch and hold to change the writing language.

 Tap, or touch and hold to insert an emoticon when writing a message.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and know how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- **Applications** > select a Google application, such as **Gmail** > select **Create** to create a new account.


If you have a Google account, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.


3D Space

Press and hold the 3D key on the right side of the phone to access  3D Space. It will show you 3D content such as YouTube 3D, 3D Gallery, 3D Camera and 3D guide.

3D Guide

The 3D Guide contains instructions that make 3D content easier to use with this phone. It will advise you how to create 3D pictures, connect to 3D TV via MHL, view 3D content and share them.

3D Gallery

- 1 Touch the  3D Gallery. The 3D images will then be listed.
- 2 Choose one you want to see.

NOTE


- 3D content is best viewed with the screen 30~40cm in front of you.
- To enjoy the 3D effect, the content needs to be set in the right 3D format. If the content is not shown in 3D, change the format using the 3D formatter.

3D Games & Apps


- 1 Touch  3D Game & Apps and any 3D Games and Applications you have downloaded from Market will be listed. Four applications, such as Asphalt6, Let's Golf2, Nova, Gulliver's Travels, are provided as default applications.

3D Converter

You can enjoy popular 2D games in 3D by using 3D Converter powered by HRZ engine. The Games you have added to 3D game converter list will be transformed to 3D in real time when you simply press 3D hot key on the right-hand side of the phone.

- 1 Touch the **Applications** tab, then select **3D Converter**.
- 2 Touch  and select games you would like to choose.
- 3 You can play games on 3D converter list, in 3D.

In case you have registered customizable game, you can set **Quality**, **3D depth**, **Depth Scale** in 3D settings.

- 1 Touch  on games list.
- 2 Save the settings after setting up.

Notice

3D converter works on only 2D OpenGL-based games.

3D Space



3D Camera

- 1 Touch the  3D Camera and the screen will switch to 3D camera mode. To create 3D photos and 3D recordings, see the 3D photos and videos on previous pages.



YouTube 3D

- 1 Touch YouTube 3D to launch. As the screen switches to YouTube 3D web, various 3D videos appear.
- 2 Select a video you want to watch. The video will be shown in side by side format in portrait mode.
- 3 Rotate to landscape and 3D mode will turn on automatically.

Backup

About backing up and restoring smart phone data


It recommends that you regularly create and save a backup file on the Storage card, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.

This Backup application support between LG smart phones, other S/W version or OS. And so, when you buy the new LG smart phone, you can back up the current LG-P720h smart phone data on your new one.

If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Applications** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages** and **System settings** using this application.


- To perform a manual backup of your smart phone data.
- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.

Back up your smart phone data

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Application** tab , and then select **Backup > Backup > Storage Card** or **Internal Memory**.
- 3 Touch the **Add new** to enter a name for your backup file, and then select **Continue**.
- 4 Select the check box next to the item you want to back up, and then select **Continue** to back up.
- 5 When all selected files backed up, you will see the message 'Done' and select **Continue** to finish backing up data.

Scheduling automatic backups

You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Application** tab , and then select **Backup > Schedule**.
- 3 On the **Scheduled Backup Location** screen, touch **Storage Card** or **Internal Memory**.
- 4 From the list, select how often you

Backup


want to back up your device data and settings, and select **Continue**.

- 5 Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

Restoring smart phone data

To restore data that is in your on-board device memory, mass storage mode must be turned off.

NOTE: All files that are stored on your smart phone are deleted before the backup file is restored.


- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Application** tab , and then select **Backup > Restore > Storage Card** or **Internal Memory**.
- 3 On the **Restore** screen, select a backup file that contains the data you want to restore.
- 4 Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.

NOTE: Please note that your phone data will be overwritten with the contents of your backup.


- 5 If the backup file is encrypted, type the password that you set to encrypt.
- 6 When all selected files restored, you will see the message 'Done' and select **Yes** to restart the phone.

NOTE:

- While in Mass storage mode, this Back & Restore Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.





Press the **Menu**  from the **Backup** screen, and select **Settings > Security** and select the check box. And after enabling encryption. To restore synchronized organizer data, you must have an activation password.


NOTE:

You can also enable automatic delete old backups and only keep the most recent backup. Press the **Menu**  from the **Backup** screen, and select **Settings > Scheduled backup > Auto delete old backups** to select the number of scheduled backups to keep.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch the  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Making a video call

- 1 Touch  to open the keypad.
- 2 Enter the phone number as before.
- 3 Touch the **Video call** icon  to make a video call.
- 4 If you do not want to use the speaker phone, touch **Speaker** and make sure you have your headset plugged in.
- 5 While the video call is connecting, you will see your own image: after the other party answers, you will see their image on the screen. Adjust the inner camera position if necessary.
- 6 To end a video call, touch **End**.

Private: You can change the image instead of showing the live image .

Dialpad: Type in a number.

Hold: Mute the microphone and pause the

video.

Mute: Mute the microphone.


Speaker: Speaker on or off.

In Video call Menu


Capture - You can capture an image of the other party or your own.


Use back/front camera - Switch cameras.

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When you receive a call in Lock state, drag the  to the right to Answer incoming call.

Drag the  to the left to Decline an incoming call.

Drag the **Excuse msg** bar from the bottom if you want to send one.

Calls





TIP! Excuse messages

You can send a message quickly using this function. This is useful if you need to reply the message during a meeting.

Adjusting call volume


To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Dialpad**  and dial the number. Also, you can search your contacts by touching **Contacts**  and select the number you want to call.
- 2 Touch the  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge calls** to make a conference call.
- 5 To end active call, touch **End** or press **Home** Key and slide the notification bar down and select **End call**.

NOTE: You are charged for each call you make.

Viewing your call logs

On the Home screen, touch  and choose the **Call log** tab.


View a complete list of all dialed, received and missed voice calls.

TIP!

- Touch any call log entry to view the date, time and duration of the call.
- Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 On the Home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** tab and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Capture picture** or **Pick from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.


Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites



- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The outline of star icon turns in white.

Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the **Groups** tab, select **Favorites** at the top of the list and choose a contact to view its details.
- 3 Touch the white outlined star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Import or export contacts

To import/export contact files (in vcf format) from a storage memory (Internal storage/memory card) or SIM or USIM card to your device or vice versa.

- 1 Touch  to open your contacts.
- 2 Press **Menu**  > **More** > **Import/Export**.
- 3 Select a desired option for importing/exporting.
If you have more than one account, select an account to which you want to

Contacts

add the contact.

- 4 Select contact files to import/export and select **OK** to confirm.

Moving Contacts from your Old Device to your New Device


Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" PC software on the PC. Run the program and connect your device to the PC using a USB cable.
- 2 From the top of the screen, select **Device > Import personal information > Import contacts.**
- 3 A pop-up to open a contacts file will appear.
- 4 Select a contacts file and click **Open.**
- 5 A pop-up to import a new contact from PC to the contacts in the device will appear.
- 6 If the contacts in the device and new contacts from PC are different, select a contact you want to import from PC.
- 7 Click the [OK] button to import a new contact from PC to the device.


Messaging

Your LG-P720h combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or contact number in the **To** field.
As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** field and start to compose your message.
- 4 Press the **Menu** key  to open the Options menu. Choose from **Call, Video Call, Add subject, Discard, Attach** and so on.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a

message thread is created.

Warning:

The 160-character limit may vary from country to country depending on the language and how the SMS is coded.


Warning:

If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Using Smilies

Liven up your messages using Smilies. When writing a new message, press the **Menu** key , then choose **Insert smiley** in the **More**.

Messaging

Changing your message settings

Your LG-P720h message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon  on the home screen and touch the **Menu** key , then tap **Settings**.

Email

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **Email** application, a setup wizard opens to help you to set up an email account.

To add another email account:

- 1 **Applications > Email >** in the account screen, touch **Menu > Add account**. After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's setting:

- 1 **Applications > Email >** in the account screen, touch **Menu > Settings**.

To delete an email account:

- 1 **Applications > Email >** in the account screen, touch **Menu > Settings >** touch an account you want to delete > **Remove account**.
- 2 Touch the **OK** button in the dialog box to confirm that you want to delete the

account.

Email account screen

You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.



– Touch to open your Combined Inbox, with messages sent to all of your accounts. Messages in the Combined Inbox are colour coded on the left, by account, using the same colours used for your accounts in the Accounts screen.



– Touch the folder icon to open the account folders.

Only the most recent emails in your account are downloaded to your phone. To download more (earlier) email messages, touch **Load more emails** (Exchange account is not supported) at the bottom of the emails list.

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Email

Composing and sending email

To compose and send a message

- 1 While in the **Email** application, touch  to **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Add Cc/Bcc and add attachment files if required.
- 4 Enter the text of the message.
- 5 Touch the **Send** button.

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again.

If it contains any pending messages, the Outbox is displayed on the Accounts screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration.

Camera

Getting to know the viewfinder




NOTE: The memory capacity may differ depending on the shooting scene or shooting conditions.

- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 Zoom** - Zoom in or out. Alternatively, you can use the side volume keys.
- 3 Brightness** - This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar towards “-” to lower the image brightness or towards “+” to increase it.
- 4 Flash** - Allows you to turn on the flash when taking a photo in a dark place.
- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.
- 6 Transition between 2D - 3D modes** - Touch to switch photo shoot mode between 2D and 3D.
- 7 Taking a photo**
- 8 Video mode** - Touch this icon to switch to video mode.
- 9 Gallery** - Touch the last photo you took to view. This enables you to access your gallery and view saved photos within camera mode.

Camera

Taking a quick photo





- 1 Open the **Camera** application.
- 2 Hold the phone, point the lens towards the subject you want to photograph.
- 3 Touch the **Capture** icon  to take the picture.

Once you've taken the photo


Touch  to view the last photo you captured.



 Touch **Menu** > **Share** to share your photo using **Messaging, Social+, Bluetooth, Picasa, Google+, Gmail, Email** or **SmartShare**.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.







-  Touch **Menu** > **More** > **Set as** to use the image as a **Contact icon** or **Wallpaper**.
-  Touch **Menu** > **More** > **Edit** to edit the picture.
-  Touch **Menu** > **Delete** > **Confirm delete** to delete the picture.
-  Touch to go to the view finder screen.





Using the advanced settings

In the viewfinder, touch  to open all advanced options.

-  – Restore all camera default settings.
-  – Touch whenever you want to know how this function operates. This provides you with a quick guide.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

-  – Focuses on the specific spot.
-  – Select the image resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.
-  – Finds the color and light settings appropriate for the current environment. Choose from **Normal, Portrait, Landscape, Sunset** and **Night**.
-  – Improves colour qualities in different lighting conditions.
-  – Choose a colour tone for your new photo. Choose between **None, Black&white, Sepia, Negative**.
-  – Takes pictures a few seconds after clicking the shutter. This option is ideal if you want to be in the picture.

-  – Select the desired shot mode.
-  – Allows you to review images after taking pictures.
-  – Select one of the four shutter sounds.
-  – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.


-  – Select storage to save images.

TIP! When you exit the camera, some settings return to their defaults, such as white balance, timer and scene mode. Check these before you take your next photo.

TIP! The Settings menu is superimposed over the view finder so, when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.

Video camera

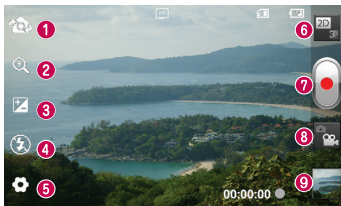


Getting to know the viewfinder



NOTE: The zoom function cannot be available while video recording.





- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 Zoom** - Zoom in or out. Alternatively, you can use the side volume keys.
- 3 Brightness** - This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar towards “-” to lower the image brightness or towards “+” to increase it.
- 4 Flash** - Allows you to turn on the flash when taking a photo in a dark place.
- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.
- 6 Transition between 2D - 3D modes** - Touch to switch photo shoot mode between 2D and 3D.
- 7 Start recording**
- 8 Camera mode** - Touch this icon to switch to camera mode.
- 9 Gallery** - Touch to view the video you recorded last. This enables you to access your gallery and view your saved videos from within the video mode.

Shooting a quick video

- 1 Touch the **Camera** mode button down and the icon changes to .
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 A red light blinks at the bottom of the viewfinder, along with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.



After shooting a video

Your captured video will appear on the Gallery. Touch  to view the last video you captured.


-  Touch to play the video.
-  Touch **Menu > Share** to share Video using **Messaging, Bluetooth, YouTube, Gmail, Email** or **SmartShare**.
-  Touch **Menu > Delete > Confirm delete** to delete the video.
-  Touch to go to the view finder screen.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.


-  – Restore all video camera default settings.
-  – Touch if you want to know how this function operates. This provides you with a quick guide.

Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.


 – Touch to set the size (in pixels) of the video you are recording.

 – Improves colour qualities in different lighting conditions.

 – Choose a colour tone for your new photo. Choose between **None, Black&white, Sepia, Negative**.

 – Set a time limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

 – Choose **Mute** to record a video without sound.

 – Select to take a video without the camera wobbling or shaking.

 – Auto review automatically shows you the video you just recorded.

 – Select storage to save videos.

Video camera

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

3D photos and videos



Taking a 3D Photo



- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 3D focus** - You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D picture, you can use this function.
- 3 Brightness** - This defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar towards “-” to lower the video brightness or “+” to increase it.
- 4 Flash** - Allows you to turn on the flash when capturing a video in dark place.

- 5 Settings** - Touch this icon to open the settings menu. See Using the advanced settings.

3D focus mode - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also find-tune manually with 3D focus function of viewfinder.

- 1 Open the Camera application.
- 2 Touch the 3D button  on the viewfinder.
- 3 Holding the phone, point the lens towards the subject you want to photograph.
- 4 Touch the **Capture** icon .
- 5 The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture.

Recording a 3D Video








- 1 Switch camera** - You can move to the internal camera from the external one.
- 2 3D focus** - You can manually fine-tune 3D focus by adjusting the amount of overlapping with a bar that appears at the bottom. Before starting to take a 3D video, you can use this function. You can't adjust this function while recording.

- Brightness** - This defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar towards “-” to lower the video brightness or “+” to increase it.
- Flash** - Allows you to turn on the flash when capturing a video in dark place.
- Settings** - Touch this icon to open the settings menu. See Using the advanced settings.

3D focus mode - Select the auto 3D focus option from Border, Center. Border uses a border area for optimizing the amount of overlapping. Center uses a center area for it. You can also find-tune manually with 3D focus function of viewfinder.

Stabilization - Set On to compensate unsteady hand.

- Open the Camera application and touch the camera mode button. The **capture** icon  will change to .
- The video camera viewfinder will appear on the screen: touch the 3D button .
- Holding the phone in landscape view, point the lens towards the video subject.
- Touch the start video icon . A red light blinks at the bottom of the viewfinder, along with a timer showing the length of the video.
- Touch the stop video icon  to stop recording.

NOTE

- 3D camera mode is only allowed in landscape view.
- Keep the distance between the camera and the object more than 0.5m.
- For the optimal 3D viewing experience, hold the device 30~40cm away from your eyes.


Multimedia

You can store multimedia files on a memory card for easy access to all your image and video files.


Gallery

Touch the **Applications** tab , then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.


Timeline view

LG-P720h **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

Music

Your LG-P720h has a built-in music player that lets you play all your favourite tracks. To access the music player. Touch the **Applications** tab , then select **Music**.

Playing a song

- 1 In the Home screen, touch the **Applications** tab  and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

| | |
|---|---|
|  | Touch to pause playback. |
|  | Touch to resume playback. |
|  | Touch to skip to the next track in the album, playlist or shuffle. |
|  | Touch once to go back to the beginning of the song. Touch twice to return to the previous song. |
|  | Touch to set repeat mode. |
|  | Touch to play the current playlist in shuffle mode. |
|  | Touch to see the current playlist. |
|  | Touch to see lyrics. This option is on only if the song includes the lyrics. |
|  | Touch to change the volume. |
|  | Touch to set Dolby audio effect when connected with headset jack. |

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. It displays **Play**, **Add to playlist**, **Use as ringtone**, **Delete**, **Share**, **Search** and **Details** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

FM Radio

Your LG-P720h has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

NOTE: You need to use your headset to listen to the radio. Insert them into the headset jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again.

You can store up to 48 channels on your phone.

Tuning in automatically

- 1 In the Home screen, touch the **Applications** tab  and select **FM Radio**.
- 2 Press the **Menu** key, then touch **Auto scan**.
- 3 If there are preset channels, you will see a pop-up asking "All channels will be reset. Continue?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
- 4 During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: You can also manually tune in to a station using the on-screen wheel.

TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna.

If you connect a headset not specifically made for radio reception, radio reception may be poor.

The web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Press the **Menu** key to view options.



Touch to go back a page.



Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.



Touch to show all your open windows.



Touch to add a new window.



Read it later – Add the current web page in Read it later.



Add RSS Feed – Add the current web page to the RSS feed.



More

- **Share page** – Allows you to share the web page with others.
- **Find on page** – Allows you to find letters or words on the current web page.
- **Select text** – Allows you to copy any text from the web page.
- **Home page:** Go to the Home page.
- **Set as homepage:** Set the current web page as your Home page.
- **Add shortcut to home:** Add the shortcut of the current web page to the Home screen.
- **Page info:** Displays the web page information.
- **Downloads:** Displays your download history.
- **Settings:** Displays Browser settings.

Utilities

Setting your alarm

- 1 **Applications > Alarm/Clock > New alarm.**
- 2 Set the **time, Repeat, Snooze duration, Vibration, Alarm tone** and **Puzzle lock** then add a label to name the alarm. Touch **Save**.
- 3 After you save the alarm, the LG-P720h lets you know how much time is left before the alarm will sound.

Using your calculator

- 1 **Applications > Calculator.**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

- 1 **Applications > Calendar.**
- 2 To check the event, touch the date. Touch the **Menu** key if you want to add a new event. Touch **New event**.

- 3 Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.
- 4 Also touch **Where** then enter the location.
- 5 If you want to add a note to your event, touch **Description** and enter the details.
- 6 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 7 Touch **Save** to save the event in the calendar.

Changing your calendar view

- 1 **Applications > Calendar.**
- 2 On the top of the screen, you can find the different view types of the Calendar (Day, Week, Month, Agenda).

Polaris Office

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Utilities

Managing files

Polaris Office provides mobile users with convenient file management features, including copying, pasting, renaming and deleting files and folders right on the device.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

Video editor

Use Video editor to edit the videos you have captured.

- 1 **Applications > Video editor.**
- 2 Touch **New** and select **Add** to add videos, images or audio clips you'd like to insert. You can drag files down to where you want to place.


NOTE:

- This feature may not be available if video was not created by this device.
 - This feature not supported video with Full HD(1920x1080) and more resolution.
 - If 3D video is added first, only 3D videos with same resolution and 3D images are available.
 - If 2D video is added first, only 2D videos with same resolution and 2D images are available.
- 3 Touch **Trim** to edit the length of video dragging the Trim bar. You can control in detail with using **Detail view**.
 - 4 If you are finished with your project, touch **Export** on main screen to make complete file. Make sure save the changes you have made before exit to main menu.

LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer “Mobile Life” experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld .
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgsmartworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
- Find and download exciting 3D content from the ‘3D zone’.
- Try the easy “Menu” buttons to find what you’re looking for fast.
 - **Categories:** Find contents by category (e.g. Education, Entertainment, Games, etc).
 - **My apps:** List of downloaded/to-be-updated contents.
 - **Apps for you:** Recommended content based on your previous choices.
 - **Search:** Search Content.
 - **Settings:** Set Profile and Display.
- Try other useful functions as well. (Content Detail screen)
 - **Wish List:** Save the content you’re interested in.

NOTE: LG SmartWorld may not be available in all carriers or countries.

Connectivity

Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

TIP! With LG-P720h, you can enjoy Bluetooth high speed. If the device you want to share files with also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

NOTE:

- LG is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

- 1 **Applications > Settings > Wireless & networks > Touch Bluetooth** to turn it on.
- 2 Go to **Bluetooth settings > Scan for devices**
- 3 Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the device. If the device you want to pair up with is not on the list, make sure that target device is set to be **Discoverable**, then scan again.

Send data using the Bluetooth wireless feature

- 1 Select a file or item, such as a contact or media file, from an appropriate application or **My files**.
- 2 Select an option for sending data via Bluetooth.

NOTE: The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

Receive data using the Bluetooth wireless feature

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > Bluetooth settings > Discoverable**. Your device is discoverable to other Bluetooth devices for 120 seconds.
- 2 When prompted, enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
- 3 Select **Accept** to confirm that you are willing to receive data from the device. Received data is saved to the bluetooth folder.

NOTE: If you receive a contact, you can save the contacts into the phonebook as following : Touch **Contacts**  > Press  > **More > Import/Export**.

Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

Activate the WLAN feature

In Idle mode, open the application list and select **Settings > Wireless & networks > Wi-Fi settings > Wi-Fi**.

NOTE: An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.

Find and connect to a WLAN

In Idle mode, open the application list and select **Settings > Wireless & networks > Wi-Fi settings**. The device will automatically search for available WLANs.

Connectivity

- 1 Select a network under **Wi-Fi networks**.
- 2 Enter a password for the network (if necessary).
- 3 Select **Connect**.

Add a WLAN manually

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > Wi-Fi settings > Add Wi-Fi network**.
- 2 Enter the SSID for the network and select the security type.
- 3 Set the security settings depending on the selected security type.
- 4 Select **Save**.

Connect to a WLAN using a Wi-Fi Protected Setup (WPS)

Using WPS, you can connect to a secured network.

To connect to a WLAN with a WPS button,

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > Wi-Fi settings**.
- 2 Select **WPS push button request**.
- 3 Press a WPS button on the access point within 2 minutes.

To connect to a WLAN with a WPS button,

- 1 In Idle mode, open the application list and select **Settings > Wireless &**

networks > Wi-Fi settings.


- 2 Select a network indicated by the WPS icon and select **WPS PIN**.
- 3 On the access point, enter the PIN and press the start button.

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network.

Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents


- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Press the **Menu** key and select **Settings**.
- 3 Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
- 4 Touch **Receive files** if you would like to automatically allow upload files to my phone from other devices.
- 5 Touch **Discoverable** checkbox to turn on.

- Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures, Videos** and **Music**.
- SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- Touch **Application** tab  and select **SmartShare**.
- Touch the top right button to or select the device from renderer lists.
- Touch the top left button and select the device of the remote content library.
- You can browse the content library.
- Touch a content thumbnail or press the **Menu** key and select **Play** button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE: Make sure that your renderer device is properly configured.


- While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- Touch **Share** on the menu and select the **SmartShare**.
- SmartShare** is automatically launched with the selected files.
- Select the device from renderer lists to play the files.

NOTE: Follow the similar steps to use the Music player, Camera and Video player to share contents.

Notice: Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.

To download contents from remote content library


Connectivity

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail then touch **Download** menu key.

Notice: A few types of contents are not supported.




To upload contents from my phone to remote content library

NOTE: Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.

- 1 Touch **Applications** tab  and select **SmartShare**.
- 2 Touch the top left button and select **My phone**.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **Upload** menu key.
- 5 Select a device of remote content library to be uploaded.

Notice: Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.

To play contents from remote content library on your phone

- 1 Touch **Application** tab  and select **SmartShare**.
- 2 Touch the top right button and select My phone from renderer lists.
- 3 Touch the top left button and select the device of the remote content library.
- 4 You can browse the content library.
- 5 Touch a content thumbnail or press the **Menu** key and select **Play** button.
- 6 Touch a  or  button to switch between 2D – 3D modes.

Notice: Some contents could be corrupted under 3D mode.

Mobile network sharing

Learn to set your device as a wireless modem or wireless access point for PCs or other devices, and share your device's mobile network connection.

Share your device's mobile network via WLAN

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > Portable hotspot**.
- 2 Select **Portable Wi-Fi hotspot** to activate the WLAN hotspot.
- 3 Select **Portable Wi-Fi hotspot settings**.

- 4 Select **Configure Wi-Fi hotspot** to customise the WLAN hotspot:

Network SSID - View and edit the device name that will be shown to external devices.

Security - Select the security type.

Share your device's mobile network via USB

- 1 Connect the phone to your PC using the USB cable.
- 2 **USB connection mode** list will appear.
- 3 Select **USB tethering** to activate the USB tethering feature. Your device shares the mobile network connection on your PC. To stop sharing the network connection, clear the check box next to **USB tethering**. (Select **Charge only** option to disconnect the phone.)

NOTE: The sharing method for the network connection may differ depending on the PC's operating system.

GPS

Your device is equipped with a global positioning system (GPS) receiver. Learn to activate location services. To receive better GPS signals, avoid using your device in the following conditions:

- Between buildings, in tunnels or underground passages, or inside buildings in poor weather around high voltage or electromagnetic fields.
- Do not touch the internal antenna area or cover this area with your hands or other objects while using the GPS functions.
- This feature may be unavailable depending on your region or service provider.

Activate location services

You must activate location services to receive location information and search the map.

- 1 In Idle mode, open the application list and select **Settings > Location & security**.
- 2 Adjust the following settings to activate location services:
Use wireless networks - Set to use WLAN and/or mobile networks for finding your location.

Connectivity

Use GPS satellites - Set to use the GPS satellite for finding your location.

PC connections with a PC data cable

Learn to connect your device to a PC with a PC data cable in USB connection modes. By connecting the device to a PC, you can transfer data to and from your device directly and use the PC software program(LG PC Suite).

Sync your phone with your computer

To synchronise your phone with your PC using the USB cable, you need to install PC software(LG PC Suite) onto your PC. Download the program from the LG website (www.lg.com).

- 1 Use the USB data cable to connect your phone to the PC.
- 2 **USB connection mode** list will appear, and select **PC software**.
- 3 Run the LG PC Suite program from your PC.
Refer to the PC software(LG PC Suite) help for more information.

NOTE: LG Integrated USB Driver

- LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software.

Connect as a mass storage device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can access the file directory of the memory card by using the device as a memory card reader.

- 1 **Applications > Settings > Storage** to check out the storage media.
(If you want to transfer files from or to a memory card, insert a memory card into the phone.)
- 2 Connect the phone to your PC using the USB cable.
- 3 **USB connection mode** list will appear, and select **Mass storage** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.

- 6 Select **Charge only** option to disconnect the phone.

Transferring music, photos and videos using USB mass storage mode

- 1 **Applications > Settings > Storage** to check out the storage media.
(If you want to transfer files from or to a memory card, insert a memory card into the phone.)
- 2 Connect the phone to your PC using the USB cable.
- 3 **USB connection mode** list will appear, and select **Mass storage** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 When you are finished, select **Charge only** option to disconnect the phone.

NOTE: To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.

VPN connections

You can create virtual private networks (VPN) and connect to your private network securely through a public network, such as the internet.

NOTE: Your device should already be configured with internet access. If you have trouble accessing the internet, you need to edit connections. If you are not sure about the connection information to enter, ask your service provider.

Set up VPN connections

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > VPN settings > Add VPN**.
- 2 Select a VPN type.
- 3 Customise the connection information.

Connectivity

NOTE: Available options may vary depending on the VPN type.


- **VPN name** - Enter a name of the VPN server.
- **Set VPN server** - Enter the IP address of the VPN server.
- **Enable encryption** - Set to encrypt the VPN server.
- **Set IPSec pre-shared key** - Enter a preshared key.
- **Enable L2TP secret** - Set to use the L2TP secret password.
- **Set L2TP secret** - Enter the L2TP secret password.
- **Set user certificate** - Select a user certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download from the web.
- **Set CA certificate** - Select a certificate authority (CA) certificate that the VPN server uses to identify you. You can import certificates from the VPN server or download from the web.
- **DNS search domains** - Enter the domain name server (DNS) address.

- 4 When you are finished, press **Menu**  > **Save**.

Connect to a private network

- 1 In Idle mode, open the application list and select **Settings > Wireless & networks > VPN settings**.
- 2 Select a private network to connect.
- 3 Enter the user name and password and select **Connect**.

Settings

In the Home screen, touch the **Applications** tab  then scroll and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

Airplane mode – After switching to airplane mode, all wireless connections are disabled.

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

Bluetooth – Turn the Bluetooth wireless feature on or off.

Bluetooth settings

- **Device name:** Set a Bluetooth name for your device.
- **Discoverable:** Set your device to be visible to other Bluetooth devices.
- **Scan for devices:** Set your device to search for other bluetooth enabled devices.

NOTE:

Press Menu to change the Contact transfer setting.

- **Send as one file:** Send contacts as a nested vCard. This may reduce transfer time, but old devices may not support this mode on receiving contacts.
- **Send separately:** Send each contact as a single vCard. When old devices can not receive all contacts, choose this.

Portable hotspot – You can configure the portable Wi-Fi hotspot settings.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

On-Screen Phone settings – Select to change the On-Screen Phone password.

Settings

Call settings

< Fixed dialing numbers >

Select **Fixed dialing numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – Allows you to select your carrier's voicemail service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Call reject – Allows you to set the call reject function. Choose from **Off**, **Reject on list** or **Reject all calls**.

Call forwarding – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Additional settings – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call (depending on your network provider).

- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are in another call (depending on your network provider).

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function).

Call duration – View the duration of calls including last call, all calls, dialed calls and received calls.

Excuse messages – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Video call settings – Change your video call settings.

Sound

< General >

Sound profile – Allows you to select sound mode what you want.

Volume – Allows you to set the volume for ringtone, media and alarm. If you uncheck the option "Use ringtone volume for notifications" you can set the volume for incoming calls and notifications separately.

< Ringtones >

Phone ringtone – Allows you to set your default incoming call ringtone.

Notification ringtone – Allows you to set your default notification ringtone.

Ringtone with vibration - Vibration feedback for calls and notifications.

< Feedback >

Audible touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sounds – Allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – Allows you to set your

phone to vibrate briefly when you touch the soft keys and on certain UI interactions.

Display

Brightness – Adjust the screen brightness.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Animation – Set to display an animation.

Screen timeout – Set the time for screen timeout.

Display font – Change the display font.

Warning popup – Set to switch to show warning popup.

Power Saver

Activate Power Saver - Allow you to set an activating time when starting power saver mode.

<Power saving items>

Set to switch to turn off desired items : **Wi-Fi, Auto-sync, Bluetooth, GPS, Animation effect, Brightness.**

Brightness adjustment - If you select **Brightness**, set the brightness percentage.

<Battery>

Battery use – See what has been using the battery.

Settings

Gesture

Use motion gestures – Adjust the gesture settings for the incoming calls and for use with the alarm.

- **Mute** : Allows you to mute the sound by flipping the phone over while the phone is ringing.
- **Snooze(Stop)** : Allows you to snooze(stop) the alarm by flipping the phone over.

Reset gesture sensor– Calibrate the motion sensor with the phone placed on a flat surface.

Location & security

<My location>

Use wireless networks – If you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – If you select **Use GPS satellites**, your phone determines your location to street level accuracy.

<Screen unlock>

Set up screen lock – Set an unlock pattern to secure your phone. Opens a set

of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

<SIM card lock>

Set up SIM card lock – Set up SIM card lock or change the SIM PIN.

<Passwords>

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

<Device administration>

Select device administrators – Add one or more administrators.

<Credential storage>

Use secure credentials – Allows you to access secure certificates.

Install from SD card – Choose to install encrypted certificates from your SD card.

Set password – Set or change the credential storage password.

Clear storage – Clear credentials for all content and reset password.

Applications

You can view and manage the applications.

Unknown sources – Default setting to install non-Market applications.

Warning:

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet. To protect your phone and personal data, only download applications from trusted sources such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Check services that are currently running.

Storage use – View storage used by applications.

Battery use – See what has been using the battery.

Development – Set options for application development.

Accounts & sync

< **General sync settings** >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

Auto-sync – Permits applications to synchronise, send and receive data to their own schedule.

< **Social+ update settings** >

Social+ settings – Permits to set up optimised social network widget environment.

< **Manage accounts** >

List of all Google accounts and other accounts you have added to your phone. If you touch an account in this screen, its account sync settings screen opens.

Privacy

Change the settings for managing your settings and data.

- **Back up my data:** Set to back up your settings and application data to the Google server.
- **Automatic restore:** Set to restore your

Settings

settings and application data when the applications are reinstalled on your device.

- **Factory data reset:** Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

NOTE:

- If you select Factory data reset, it will erase all of your personal data from your phone's system memory, including information about your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM license.
- Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card or internal memory, such as music or photos. And so, if you want to erase all the data on the internal memory while resetting the phone, select the check box of Erase internal memory.

Storage

Check memory information of memory cards and your device and format the external or internal memory.

You can also unmount the memory card(SD card) to safely remove it or format it.

Language & keyboard

Use the Language & keyboard settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

Voice input & output

Set Voice recogniser settings and use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

< Voice input >

Voice recogniser settings – Use the **Voice recogniser settings** to configure the Android voice input feature.

- **Language:** Opens a screen where you can set the language you use speech to enter text.
- **SafeSearch:** Opens a dialog box where you can set whether you want the Google SafeSearch filter to block certain results.

- **Block offensive words:** When deselected, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When selected, Google voice recognition replaces those words in transcriptions with a placeholder comprised of star symbols (*).

< Voice output >

Text-to-speech settings – Use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** Plays a brief sample of the speech synthesiser, using your current settings.
- **Always use my settings:** Check to use the settings on this screen rather than the speech synthesiser settings available in other applications.
- **Default engine:** Opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your phone does

not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.

- **Speech rate:** Opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful when combined with **Always use my settings** to ensure text is spoken correctly across a variety of applications.
- **Pico TTS:** Configure the **Pico TTS settings**.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become available.

Settings

Connectivity

<USB connection mode>

Default connection mode - You can set the desired mode(**Charge only**, **Mass storage**, **PC software** and **USB tethering**).

Always ask - Checkmark this to select the USB connection mode whenever you connect your phone to a PC.

<PC Suite>

Wi-Fi connection - Checkmark this to use **LG PC Suite** with Wi-Fi connection.

Please note that Wi-Fi network should be connected for LG PC Suite via Wi-Fi connection in **Wireless & networks settings**.

Date & time

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.






About phone

View legal information and check phone status and software version.

LG On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available with applications that support rotation).
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC.

Simply right-click on the file which you want to send to PC and click on "Save to PC".

- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

Notice: The Camera preview, videos and contents from 3D mode(3D Game & Apps, 3D Guide, YouTube 3D, 3D Gallery) are not supported in OSP, so they are not available on the PC.

How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support >** Select the Model (LG-P720h) > Click **OSP (On-Screen Phone)** to download. You can install the On-Screen Phone on your PC.

LG On-Screen Phone

How to connect your mobile phone to your PC

USB connection:

- 1 Open Connection Wizard, select "USB Cable connection" and click "Next".
- 2 Connect your mobile phone to the PC using a USB cable and click "Next".
- 3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless & networks > On-Screen Phone settings**.
- 4 Click "OK" to exit the window.

Wireless connection with Bluetooth:


- 1 On your mobile phone, go to **Settings > Wireless & networks > Bluetooth settings**. Select **Turn on Bluetooth** and then select **Discoverable**.
- 2 If you have previously connected using a cable, run the New Connection Wizard to create a new connection.
- 3 Run the Connection Wizard on the computer, select "Bluetooth connection", then "Next".
- 4 The wizard will start searching for Bluetooth-enabled mobile phones. When the mobile phone you want to connect to appears, click "Stop" to stop searching.
- 5 Select "LG-P720h" from the device list and click "Next". You can rename the device if you wish.

- 6 Accept the pairing request in your phone and select "Next" in PC.
- 7 Enter the On-Screen Phone password and click "Next". (The default password is "0000").
- 8 Touch "OK" to exit.

To check the phone-to-PC connection

Once the devices have been connected, drag down the notification bar at the top of the home screen to check the On-Screen Phone connection status.

To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Alternatively, drag down the notification bar at the top of the home screen and select "On-Screen Phone". Touch "Yes" in the Disconnect window.

NOTE: You must restart your phone after shutting down the On-Screen Phone service.

PC software(LG PC Suite)

“LG PC Suite” PC software is a program that helps you connect your device to a PC via a USB, or Wi-Fi connection. Once connected, you can use the functions of your device from your PC.

With your “LG PC Suite” PC software, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.
- Play multimedia contents of your PC from other device.

TIP! You can use the Help menu from the application to find out how to use your “LG PC Suite” PC software.

Installing “LG PC Suite” PC software

“LG PC Suite” PC software can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.

- 2 Go to **Support > Mobile Phone Support >** Select the Model (LG-P720h).
- 3 Click **PC Sync** from **Downloads**, and click **WINDOW PC Sync Download** to download “**LG PC Suite**” PC software.

System Requirements for “LG PC Suite” PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1GHz or higher processor
- Memory: 512MB or higher RAM
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers.

NOTE: LG Integrated USB Driver


- LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install “LG PC Suite” PC software.

PC software(LG PC Suite)

Connecting your Device to your PC

"LG PC Suite" PC software can connect a device with a USB cable or Wi-Fi.

How to connect a device with USB cable

- 1 Click  on the top of the screen.
- 2 Device storage section will be created in the library section on the left side of the screen and the device will be connected.

NOTE: When you select the connection mode from the device, choose 'PC Software' to connect.

How to establish wireless connection with Wi-Fi

Wi-Fi connection for device, Ethernet connection for PC with same wireless router:

- Device configuration
 - 1 From your device, select **Settings > Wireless & networks > Wi-Fi settings** and enable the Wi-Fi.
 - 2 From the list of Wi-Fi network searched, select a network to connect.
 - 3 You may need to enter the password if the network is secured.


- 4 From your device, select **Settings > Connectivity** > enable the Wi-Fi Connection.
- PC configuration
 - 1 Go to **Network Configuration**.
 - 2 Make sure that the PC is connected to the same network to which the device is connected.
- Wi-Fi connection for both device and PC, with same wireless router:

- Device configuration
 - 1 From your device, select **Settings > Wireless & networks > Wi-Fi settings** and enable the Wi-Fi.
 - 2 From the list of Wi-Fi network searched, select a network to connect.
 - 3 You may need to enter the password if the network is secured.
 - 4 From your device, select **Settings > Connectivity** > enable the Wi-Fi Connection.
- PC configuration
 - 1 Go to **Network Configuration**.
 - 2 Make sure that the PC is connected to the same network to which the device is connected.

How to connect with Hotspot:

- Device configuration
 - 1 Select **Settings > Wireless & networks > Portable hotspot** to configure the Wi-Fi Hotspot.
 - 2 From the step 1, select **Portable Wi-Fi hotspot > Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot** remember the SSID information of the network.
- PC configuration
 - 1 Go to **Network Configuration**.
 - 2 Make sure that the PC is connected to the same portable hotspot.

Please read the above and follow the procedures below.

- 1 Click  on the top of the screen.
- 2 Then select Wi-Fi connection.
- 3 Please follow the instruction on Connection Wizard.
- 4 Device storage section will be created in the library section on the left side of the screen and the device will be connected.

NOTE:

- If you cannot find the device to connect, From the device select **Settings > Connectivity > Enable Wi-Fi connection** and click **Retry** in PC .
- You may experience bad Wi-Fi connection depending on network configuration and network status.
- If you connect the device and PC with Hotspot and use the Internet on your PC, you may incur data charges in connection with Hotspot depending on your payment plan.
- The battery of your device may run low quickly if you use Wi-Fi.

Synchronising your Device to a Computer

Data of your device and PC can be synchronised easily with "LG PC Suite" PC software for your convenience. Contacts, schedules, and bookmarks can be synchronised.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)

PC software(LG PC Suite)

- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.
- 4 Select the checkbox of contents to synchronise and click the **Sync** button.

Moving Contacts from your Old Device to your New Device

Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" PC software on the PC. Run the program and connect your device to the PC using a USB cable.
- 2 From the top of the screen, select **Device > Import personal information > Import contacts**.
- 3 A pop-up to open a contacts file will appear.
- 4 Select a contacts file and click **Open**.
- 5 A pop-up to import a new contact from PC to the contacts in the device will appear.
- 6 If the contacts in the device and new contacts from PC are different, select a contact you want to import from PC.
- 7 Click the [OK] button to import a new contact from PC to the device.

Sending Multimedia contents from Device to PC

- 1 Connect the device and PC with a USB cable.
- 2 Run "LG PC Suite" PC software.
- 3 After connection, select the device section from the category on the left side of the screen.
- 4 Select **Multimedia**.
- 5 Select the checkbox of the contents to send.
- 6 Click **Start** to transfer contents from the device to PC.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours, or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: This feature is dependent on your network service provider, region and country.

Trademarks

- Copyright 2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.

DivX Mobile

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

- Wi-Fi® and Wi-Fi Protected Access® are registered trademarks of the Wi-Fi Alliance.



Manufactured under license from DTS Licensing Limited. DTS and the Symbol are registered trademarks, & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Technical data

Ambient Temperatures

Max: +50°C (discharging), +45°C (charging)

Min: -10°C

DECLARATION OF CONFORMITY

Hereby, LG Electronics declares that this **LG-P720h** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.; Bookala, Thonburi,
Bangkok 10600

Working day : Mon - Sat, 08:00 - 18:00

Call center : 0-2878-5757

Accessories

These accessories are available for use with the LG-P720h. **(Items described below may be optional.)**

Travel adaptor



Battery



Stereo headset



Data cable

Connect your LG-P720h and PC.



User Guide

Learn more about your LG-P720h.



NOTE:

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

| Message | Possible causes | Possible corrective measures |
|---------------------------------------|---|---|
| SIM error | There is no SIM card in the phone or it is inserted incorrectly. | Make sure that the SIM card is correctly inserted. |
| No network connection/ Losing network | Signal is weak or you're outside the carrier network. Operator applied new services. | Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider. |
| Codes do not match | To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match. | If you forget the code, contact your service provider. |
| Any application cannot be set | Not supported by service provider or registration required. | Contact your service provider. |

Troubleshooting

| Message | Possible causes | Possible corrective measures |
|--|--|---|
| Calls not available | Dialing error New SIM card inserted. Pre-paid charge limit reached. | New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2. |
| Phone cannot be switched on | On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty. | Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts. |
| Charging error | Battery is not charged. Outside temperature is too hot or cold. Contact problem No voltage Charger defective Wrong charger Battery defective | Charge battery. Make sure phone is charging at a normal temperature. Check the charger and connection to the phone. Check the battery contacts and clean them if necessary. Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery. |
| Number not permitted | The Fixed dialling number function is on. | Check the Settings menu and turn the function off. |
| Impossible to receive / send SMS & picture | Memory full | Delete some messages from the phone. |
| Files not opening | Unsupported file format | Check the file formats that can be supported. |

| Message | Possible causes | Possible corrective measures |
|--|------------------------------------|--|
| SD card not working | FAT16, FAT32 file system supported | Check SD card file system via card reader, or format SD card using the phone. |
| The screen does not turn on when I receive a call. | Proximity sensor problem | If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean. |
| No sound | Vibration mode | Check the settings status of the sound menu to make sure you are not in vibrate or silent mode. |
| Hang up or freeze | Intermittent software problem | Remove and re-insert battery. Turn on the phone. Try to do a software update service via the website. |

