



繁體中文
簡體中文
ENGLISH

使用手冊

LG-T375



CE0168 Ⓢ

P/N : MFL67481616(1.0)

www.lg.com

LG-T375 使用手冊

- 繁體中文

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



內容

安全及有效使用準則.....	3	配件.....	28
安裝SIM卡和手機電池.....	8	技術數據.....	29
手機部件.....	10	疑難排解.....	30
使用觸控螢幕.....	11		
通話功能.....	12		
通訊錄.....	13		
訊息.....	15		
輸入文字.....	16		
設定您的電子郵件.....	17		
相機.....	18		
視像攝錄機.....	19		
音樂.....	21		
管理檔案.....	21		
應用程式.....	22		
PC Suite.....	22		
正在安裝「LG PC Suite IV [®] 」 電腦應用程式.....	23		
在電腦上安裝 On-Screen 手機	23		
網絡功能.....	23		
雙SIM卡設定.....	24		
設定.....	24		
Wi-Fi.....	26		
軟件更新.....	27		

安全及有效使用準則

請讀取以下簡易的使用規則。
違反這些準則可能會發生危險
或觸犯法律。

射頻能量暴露準則


無線電波暴露及比吸收率 (SAR) 資訊

本型號手機 LG-T375 之設計符合適用的無線電波暴露安全要求。此要求包括可確保所有用戶安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。

- 經 DASY4 測試，本手機型號在耳邊使用的最高 SAR 值為 0.718 瓦/千克 (10 克)。

產品保護及維護

 **警告：**請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保固期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新亦可能是返修的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。

安全及有效使用準則

- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 切勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特定限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以濕水的手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用耳機等配件。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。

有效地操作手機

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。

- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

注意：來自耳機的過度噪音和壓力可導致聽力損失。

安全及有效使用準則

爆破地區

請勿在進行爆破時使用手機。
請嚴格遵守相關限制、規定或條例。

潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質附近使用電腦。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經機組人員批准，請勿在飛機上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，重新充電以擴展其用量。

- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

安裝SIM卡和手機電池

安裝SIM卡

申請手機網絡後，您將獲得一張外掛程式SIM卡，當中有申請的詳細資料，如PIN碼、各種可選服務和許多其他內容。


重要資訊!

由於SIM卡及其觸點很容易因刮痕或彎曲而損壞，因此在使用、插入或取出SIM卡時要加倍小心。將所有SIM卡放置在兒童無法觸及的地方。

插圖

取下電池前，必須關掉手機並切斷電源。

- 1 取下電池蓋。
- 2 取下電池。
- 3 插入SIM卡。
- 4 插入電池組。
- 5 取下電池蓋。
- 6 為電池充電。

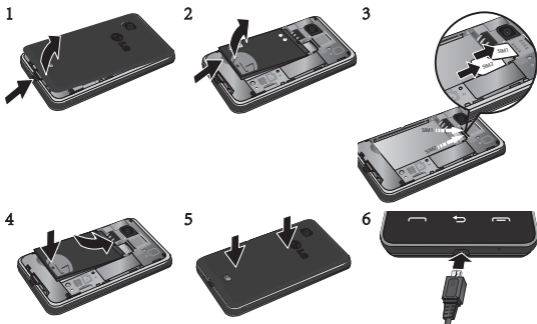


安裝記憶卡

取下記憶卡插槽蓋。輕輕推進記憶卡，以金屬接觸面朝上。若要取出記憶卡，請輕輕的推出。

注意： 記憶卡是選購配件。

手機部件

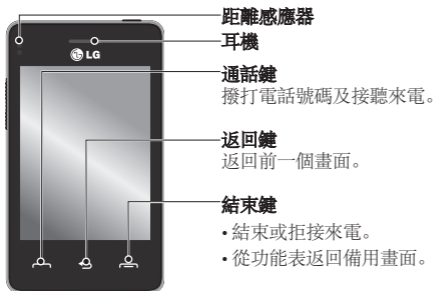

電源/鎖定鍵

- 短按以開/關螢幕。
- 長按以開機/關機。



免提或立體聲耳機接頭

使用觸控螢幕

觸控螢幕提示

- 要選擇某個項目，請觸控圖示中心。
- 點按觸控螢幕時無需太大力。觸控螢幕非常敏感，輕輕按中即可。
- 使用指尖觸控所需的選項。請注意不要碰到其他按鍵。
- 不使用 LG-T375 手機時，系統會返回鎖定螢幕。

控制觸控螢幕

LG-T375 的觸控螢幕可隨您正執行的工作而改變控制方式。

開啟應用程式

要開啟任何應用程式，只需觸控此應用程式的圖示。


捲動

左右拖動即可捲動。在某些螢幕上（例如，記錄清單），您亦可上下捲動。

通話功能

撥打電話


- 1 點按  以開啟鍵盤。
- 2 使用鍵盤輸入號碼。
- 3 點按  以開始通話。


請注意：若要從 SIM2 撥打電話，請點按  圖示上的向前箭號標幟。

提示！ 要在撥打國際電話時輸入「+」，請按住“0”。

按住電源鍵鎖定觸控螢幕，以防不小心進行撥號。

透過通訊錄撥打電話


- 1 從桌面觸控  以開啟通訊錄。
- 2 點按螢幕頂部的搜尋欄位方塊，使用按鍵輸入想要撥打的聯絡人的前幾個字母。

- 3 從列表中，觸控想要撥打的聯絡人旁邊的「通話」圖示。如果該聯絡人存在多個號碼，將使用預設號碼。
- 4 或者，如果該聯絡人存在多個號碼，您也可以觸控聯絡人名稱並選擇要使用的號碼。您還可以點按  啟動與預設號碼的通話。

注意：

自我來電 - 自我來電如同一個真的來電。按撥號盤的「#*#」來撥打自我來電。這並不會造成任何費用。

接聽來電和拒接來電

手機響鈴後，按  鍵接聽來電。

若要靜音鈴聲，點按警告標籤上的靜音標籤。如果在開會時忘記將網絡設定變更為靜音，此功能將十分有用。點按警告介面上的拒接標籤以拒接來電。

變更通話設定

- 1 觸控設定功能表中的通話設定。
- 2 從屏幕點按 SIM1(智能咭 1)/SIM2 (智能咭 2)。
 - **拒接來電列表** - 您可以從通話紀錄/通訊錄/手動輸入/所有無名稱來電者/所有無來電號碼做選擇。
 - **發送我的號碼** - 選擇是否在撥出通話中顯示您的號碼。
 - **自動重撥** - 向左滑動開關為開啟，或向右為關閉。
 - **分鐘提示** - 向左滑動開關開啟此功能，以便在通話時聽到分鐘提示音。
 - **儲存新號碼** - 選擇「開啟」或「關閉」以儲存新號碼。

變更通用設定

- **接聽模式**
 - 按發送鍵**：允許您僅透過按  鍵接聽來電。
 - 按任何鍵**：允許您透過按除  鍵外的任何鍵均可接聽來電。
- **藍芽接聽模式** - 選擇「始終至免提裝置」能夠使用藍芽耳機接聽來電，或選擇「始終至手機」按手機上的任何按鍵接聽來電。

通訊錄

搜尋聯絡人

- 1 點按**通訊錄**。
- 2 您可看到通訊錄列表。在「搜尋」欄位鍵入聯絡人名稱的首位字母，功能表將跳至該字母所在的列表區域。

新增聯絡人

- 1 觸控聯絡人，然後觸控新增。
- 2 選擇是否要儲存聯絡人至您的**內置記憶體**，SIM1 或 SIM2。
- 3 輸入您的姓氏及名字。
- 4 您最多可為每個聯絡人輸入五個不同的號碼。
- 5 新增電郵地址。您最多可為每個聯絡人輸入兩個不同的電郵地址。
- 6 將聯絡人編入一個或多個群組。
- 7 點按**儲存**，儲存通訊錄資料。

變更聯絡人設定

您可調整通訊錄設定，使**通訊錄**符合個人偏好。



點按**選項鍵** ，然後觸控設定**設定**。

- **顯示名稱** - 選擇是先顯示聯絡人的名稱還是姓氏。
- **通訊錄檢視** - 選擇要顯示**名稱**或**名稱和號碼**。
- **複製** - 從 SIM1(智能咭 1) 複製您的聯絡人至您的手機、從 SIM2(智能咭 2) 至您的手機，或反之亦然，SIM1(智能咭 1) 至 SIM2(智能咭 2) 或 SIM2(智能咭 2) 至 SIM1(智能咭 1)。您可以選擇一次複製一個或全部聯絡人。
- **移動** - 此操作與「複製」操作一樣，但聯絡人僅會儲存於新的位置。因此，如果您將一個聯絡人從SIM卡移動至手機，它將從SIM卡記憶體中刪除。
- **透過藍芽發送所有通訊錄** - 透過藍芽將所有通訊錄發送到其他手機。
- **備份聯絡人/還原通訊錄** - 將通訊錄數據儲存或還原到其他儲存體。
- **刪除所有通訊錄** - 刪除您所有的聯絡人。若確定要刪除所有聯絡人，請觸控是。

訊息

LG-T375 將文字訊息和多媒體訊息結合在一個直觀易用的功能表中。

發送訊息

- 1 點按功能表中的**訊息**，然後點按編寫訊息以開始編寫新的訊息。
- 2 點按**插入**以新增圖像、影片、聲音、常用範本等。
- 3 點按屏幕上方的收件者以輸入收件者，然後輸入電話號碼或點按  以選擇聯絡人。您還可新增多個聯絡人。
- 4 完成後，請點按 。

請注意：若要從 SIM2 發送訊息，請點按  圖示上的向前箭號標幟。

警告：如果在文字訊息中新增圖像、影片或聲音，它將自動轉換成多媒體訊息並相應地進行收費。



提示：用戶可從編輯器複製所選取的文字並能將其貼上至另一個編輯器。

例如：前往訊息編輯器，輸入一些文字。透過捲動文字，選取您想複製的文字。然後將游標放在您想要貼上文字的位置。移至選項，然後按一下貼上，所複製的文字將會被貼上。

請注意：垃圾訊息 - 透過特定號碼或文字的設定，您可以封鎖不想看到的訊息。那些訊息將會被儲存至垃圾資料夾。

輸入文字

您可以透過點擊  和輸入方式選擇輸入的方式。

點按  以開啟 T9 模式。僅當選擇 **按鍵** 作為輸入法模式時，才會顯示該圖示。點按  以變更數字、符號和文字輸入。使用 **Shift** 鍵在大小寫輸入之間變更。

變更文字訊息設定

點按 **訊息**，然後點按 **設定**。選擇 **文字訊息**。

文字訊息中心 - 輸入訊息中心的詳細資料。

發送報告 - 向左滑動開關，接收已發送訊息之確認訊息。

有效時期 - 選擇訊息儲存在訊息中心的時間。

訊息類型 - 將文字轉換成文字、語音、傳真、X.400 或電子郵件。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

發送長信息作為 - 選擇將長文字作為 **多個文字訊息** 或 **多媒體訊息** 發送。

變更多媒體訊息設定

點按 **訊息**，然後點按 **設定** 和 **多媒體訊息**。

接收模式 - 選擇 **本地網絡** 或 **漫遊網絡**。如果選擇 **手動**，將僅收到多媒體訊息通知，然後選擇是否進行完整下載。

發送報告 - 選擇要求報告或允許報告。

讀取回覆 - 選擇要求和/或允許回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息儲存在訊息中心的時間。

投影片播放時間 - 選擇投影片在螢幕上的顯示時長。

不受支援的附件 - 選擇限制或不受限制不受支援的附件。

發送時間 - 選擇隔多久發送訊息。

多媒體訊息中心 - 從列表中選擇一個訊息中心或新增訊息中心。

提示：您可以將 SMS 一次發送給多個聯絡人。用戶可以選擇/取消選擇發送訊息給所有聯絡人。只可標記 20 個聯絡人，如果用戶選擇標記所有，則只會標記首 20 個聯絡人。

若要發送 SMS 給特定群組的聯絡人，請選擇群組選項並選擇特定的群組。

請注意：道歉訊息 - 有來電時，預設訊息能透過點擊藉口訊息以 SMS 發送。

請注意：SMS 排序 - 收件匣訊息能透過所提供的排序選項排序，讓您能更輕易存取訊息。（日期、發送人和已讀取/未讀取）

設定您的電子郵件


從屏幕 2 點擊電子郵件。

如果尚未設定電子郵件帳戶，請啟動電子郵件設定精靈並完成設定。

您可檢查并編輯設定，亦可檢查於創立戶口時所自動填寫的新增設定。

相機

快速拍照

- 1 點按**相機**功能表。
- 2 當相機對準拍攝物時，點按  螢幕中心右邊的進行拍照。

提示：要切換到相機模式或影片模式，向上/向下滑動取景器中央的相機或影片圖示。

拍照之後

拍攝的相片將顯示於螢幕上。
可使用以下選項。

點按 。

上載 - 點按以上載相片。

發送方式 - 點按以將相片作為訊息、電子郵件或透過藍芽發送。

設定 - 點按設定為主屏幕牆紙、鎖定畫面牆紙、通訊錄圖像。

編輯 - 觸控以編輯相片。



點按以刪除圖像。




點按以立即拍攝新相片。



點按以檢視已儲存的相片集。

使用進階設定

從取景器中，觸控  以開啟所有進階設定選項。

選擇所需選項後，請觸控**確定** (OK) 按鍵。

大小 - 更改相片的大小以節省記憶體。

白平衡 - 從**自動**、**白熱光**、**陽光**、**日光燈**和**陰天**中選擇。

色彩效果 - 為新相片選擇色調。

連環拍攝 - 在取景器中定位對象，然後於要拍攝標準相片時，按拍攝按鍵。相機將以快速連續的方式拍照。

自拍時計 - 自拍時計讓您設定按拍攝按鍵後的延遲時間。您可選擇**關閉3秒**、**5秒**或**10秒**。此功能最適合自拍時使用。

夜間模式 - 在黑暗環境中非常有用。

選擇儲存 - 選擇將相片儲存至手機記憶體或外置記憶體。

顯示拍攝圖像 - 請選擇開啟以立刻查看拍攝的相片。






快門聲 - 請選擇開啟或關閉快門聲。

重設設定 - 還原所有相機預設設定。

視像攝錄機

快速製作影片

要切換到相機模式或影片模式，向上/向下滑動取景器中央的相機或影片圖示。

- 1 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 2 按住紅點 .
- 3  **Rec** 將會顯示在取景器底部，而底部的計時器則會顯示影片錄製的時間長度。
- 4 若要暫停影片，請點按  並透過選擇  繼續。
- 5 點按介面上的  以停止錄製影片。

製作影片之後



將在螢幕上顯示一張靜態影片圖像。影片名稱於螢幕底部顯示。


可使用以下選項。

 點按以播放影片。

點按  以。


發送方式 - 點按以將影片作為**訊息、電子郵件**或透過**藍芽發送**。

 點按以刪除剛剛錄製的影片，透過點按  予以確定。取景器將再次出現。

 點按立即拍攝另一張影片。當前影片將會被儲存。

 觸控檢視已儲存影片和圖像的圖片集。

使用進階設定

從取景器中，觸控  以開啟所有進階設定選項。您可於選擇選項後更改視像攝錄機的設定，按 **OK** 按鈕。

色彩效果 - 選擇新影片的色彩調。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇自動、白熱光、陽光、日光燈和陰天。

持續時間 - 設定影片的時間限制。您可選擇正常或多媒體訊息限制大小上限，以透過多媒體訊息發送影片。

選擇儲存 - 選擇是將影片儲存至手機記憶體，還是儲存至外置記憶體。

重設設定 - 重設所有視像攝錄機設定。

音樂

要存取音樂播放機，點按**音樂**。您可從此處存取多個資料夾：

最近播放 - 播放最近播放過的歌曲。

全部曲目 - 包含手機上的全部歌曲，預載的預設音樂除外。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含已建立的全部播放列表。

隨機播放曲目 - 按隨機順序播放曲目。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或數據線。

若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啟藍芽，且彼此相互連接。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要在手機上點按**是**予以接收。
- 4 檔案應顯示在**音樂 > 全部曲目**中。

管理檔案

您可以將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片、為文件和其他內容。亦可將檔案儲存至記憶咭中。使用記憶咭以便釋放手機記憶體空間。

透過點按**我的檔案**，您可開啟儲存所有多媒體檔案的資料夾列表。

應用程式

新增事件至日曆

- 1 點按日曆。
- 2 選擇要將事件新增至的日期。
- 3 點按**新增**。

設定鬧鐘

- 1 觸控**鬧鐘**。
- 2 點按**新增**，然後您可以在此功能表中設定並儲存您的鬧鐘。

語音記錄器

使用語音備忘錄錄製語音備忘錄或其他聲音檔。

使用計算機

- 1 點按**計算機**。
- 2 點按數字鍵以輸入數字。

轉換單位

- 1 點按**單位轉換器**。
- 2 選擇是否要轉換匯率、面積、長度、重量、溫度、體積或速度。
- 3 然後，然後選擇單位並輸入要轉換的值。

PC Suite

您可同步電腦和手機，以確保所有重要詳細資料和日期相匹配。您亦可備份檔案，確保自己安心無憂。

警告： 傳輸過程中請勿中斷手機連接。

請注意： On-Screen 手機
- On-Screen 手機讓您透過 USB 或藍芽連接從電腦裡檢視手機螢幕。

正在安裝「LG PC Suite IV™」電腦應用程式

「LG PC Suite IV™」電腦應用程式可從 LG 的網頁下載。

- 1 轉至 www.lg.com，然後選擇所需國家。
- 2 移至支援 > 流動電話支援 > 選擇型號 (LG-T375)。
- 3 按下載中的 PC 同步，然後按 WINDOW PC 同步下載即可下載「LG PC Suite IV™」PC 軟件。

在電腦上安裝 On-Screen 手機

從 www.lg.com，支援 > 手機支援 > 選擇型號 (LG-T375) > OSP 中下載 OSP。

網絡功能

瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

存取網絡

- 1 點按**瀏覽器**。
- 2 要直接跳至瀏覽器主頁，請選擇**主頁**。或者，請選擇**輸入地址**，然後輸入網址，接著**連接首頁**從連線方式 > 瀏覽器設定檔。

注意：連接到這類服務並下載其中的內容將會產生額外收費。請向網絡供應商諮詢收費詳情。

存取 Google 服務

點按 **Google** 以搜尋並啟動 Google 搜尋應用程式。

雙SIM卡設定


當您插入兩張SIM卡時，您可於螢幕左上方看到兩個網絡訊號圖示。

若要選擇或切換SIM卡，請按功能表然後選擇雙咭設定。

設定


變更手機設定

可以隨心隨意地根據個人喜好自訂 LG-T375 手機。

從桌面中，選擇  和點按**設定**，然後捲動至**手機設定**。

手機遺失追蹤 - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。若要啟用 ATMT 功能，您需要將 ATMT 設為開啟，並在 ATMT 設定中設定手機持有人姓名及別組號碼。預設 ATMT 代碼是「0000」。

請注意：手機遺失追蹤 -

( > 設定 > 手機設定 > 安全 > 手機遺失追蹤)，當手機被盜時，手機會發送 SMS 至手機持有人預先定義的電話號碼。ATMT 文字訊息將包含被盜手機的 IMEI、手機持有人姓名和目前使用此手機的人之電話號碼。

SOS 服務設定

• **SOS 服務設定** - 啟動 SOS 模式。在啟動之後，當螢幕被鎖定時，如果您按音量下降鍵 4 次，SOS 訊息會被發送且手機將會變為 SOS 模式。

於緊急情況時，SOS 訊息將會被發送至被指定的接收者，他們打來的電話將會自動接聽。所有的提示聲會被靜音。如要離開 SOS 模式，請在桌面按結束鍵。

變更連接設定

您的連接設定已由網絡商設定，以便您立即使用新手機。若要變更設定，請使用此功能表：點按**網絡設定**。

使用藍芽發送和接收檔案

要發送檔案：

- 1 開啟要發送的檔案，通常為相片、影片或音樂檔案。
- 2 請選擇**發送方式**。選擇**藍芽**。
- 3 如果已配對**藍芽**裝置，LG-T375 手機將不會自動搜尋其他**藍芽**裝置。如果尚未配對，LG-T375 手機將搜尋範圍內其他已啟用**藍芽**的裝置。
- 4 選擇要將檔案發送至的裝置。
- 5 您的檔案將會被送出。

要接收檔案：

- 1 若要接收檔案，藍芽必須開啟並可見。有關詳情，請參閱以下的變更藍芽設定。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按是以接收檔案。
- 3 您將查看到檔案的儲存位置。關於圖像檔案，您可以選擇**檢視**檔案。檔案通常被儲存於**我的檔案**中的對應位置。

提示！

- 1 當您使用藍芽耳機，在播放影片時，並不支援 A2DP 和 AVRCP 設定檔。即表示如果您使用藍芽耳機，則不會聽到影片聲音。
- 2 藍芽檔案傳送功能在部分應用程式運作時會被阻隔。（語音通話、相機、音樂撥放器、UMS/PCSync）

變更您的藍芽設定： 點按藍芽後，選擇選項，然後選擇設定。

同其他藍芽裝置配對

透過配對 LG-T375 和其他裝置，您可設定一個受密碼保護的連接。

- 1 檢查藍芽是否開啟並且可見。您可在**設定**功能表中變更您的可見狀態。
- 2 點按**搜尋**。
- 3 LG-T375 將搜尋裝置。搜尋完成之後，會在螢幕上顯示**重新整理**。
- 4 選擇要配對的裝置並輸入密碼，然後點按**確定**。
- 5 然後，手機將連接到其他裝置，並且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接已準備就緒。

Wi-Fi

無線管理員協助您管理手機 Wi-Fi（無線區域網絡）的互聯網連接，使手機能夠連接區域無線網絡，或以無線方式登入互聯網。與藍芽無線技術相比，Wi-Fi 的速度更快，範圍更廣，令使用電子郵件和瀏覽互聯網時更加快捷。

請注意： LG-T375 支援 WEP 和 WPA/WPA2-PSK 安全體制。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。

您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

軟件更新

手機軟件更新

從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 選擇國家及語言 → 支援。有了這項功能，您無須親臨服務中心，就可透過互聯網將手機韌體更新為最新版本，十分方便。手機韌體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對手機造成嚴重損害。

配件

有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

充電器



電池



立體聲耳機



使用手冊



注意




- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保固可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高: +55° C (放電)
+45° C (充電)

最低: -10° C

Declaration of Conformity		 LG Electronics
Supplier Details		
Name	LG Electronics Inc	
Address	: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T375	
Trade Name	LG	
CE0168 		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-1 V 1.8.1 (2008) / EN 301 489-7 V 1.3.1 (2005) / EN 301 489-17 V 2.1.1 (2009) EN 50360:2001/AC:2006 / EN 62209-1:2006 EN 60950-1:2006+A11:2009 EN 301 511 V9.0.2 EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name Doo Haeng Lee / Director	Issued Date 8 March 2012
LG Electronics Inc. – EU Representative Krijgsman 1, 1186 DM Amstelveen The Netherlands	 Signature of representative	

疑難排解

本章會列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行解決。

訊息	可能起因	合理的修正措施
智能咭錯誤	手機中無智能咭，或智能咭插入方式不正確。	確保已正確地插入智能卡。
無網絡連接/ 失去網絡	GSM 網絡範圍外訊號弱 網絡商套用新服務	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能咭是否舊於 6 至 12 個月。 如果是這種情況，請前往網絡供應商的辦事處更換您的智能咭。
密碼不正確	若要變更安全代碼，您將需要重新輸入新的代碼以再次確認。 您兩次輸入的代碼並不相符。	預設的手機密碼為 [0000]。如您忘記密碼，請聯絡您的服務供應商。
無法設定 無任何應用 程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。

訊息	可能起因	合理的修正措施
無法撥打電話	撥號錯誤 新智能咭已插入 已達預付費用上限	新網絡未獲授權。 請檢查新的限制。 聯絡您的服務供應商，或 使用 PIN 2 重設限額。
手機無法啟動	按下開啟/關閉鍵的 時間不夠長。 電池並無充電 電池接觸面骯髒	按下開啟/關閉鍵至少 兩秒。 替電池充電更長時間。 取出電池並重新插入。
充電錯誤	電池並無充電 外界溫度太高或 太低 接觸不良 無電壓 充電器故障 使用不當充電器 電池故障	替電池充電。 確保於正常溫度下為手 機充電。 檢查充電器是否正常， 以及是否正確地連接電源 至手機。檢查電池接觸 點，如有髒污則需清潔。 插入不同插座內。 如充電器沒有變暖，則需 更換充電器。 請只使用原裝 LG 配件。 更換新電池。

訊息	可能起因	合理的修正措施
不允許撥打號碼	固定撥號號碼功能已開啟。	檢查設定。
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機上的部份訊息
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式
接收來電時，螢幕並無開啟。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件有否掩蓋距離感應器附近的範圍 確保距離感應器附近並無任何障礙物。
掛線或凍結	軟件間歇性問題	取出電池並重新插入。 開啟手機。 透過 WEB 網站嘗試進行軟件更新

LG-T375 用户手册 - 中文

此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同，这并不会另行通知。



目录

关于安全有效使用手机的准则	3	软件更新	27
安装 SIM 卡和手机电池	8	配件	28
手机部件	10	技术参数	29
使用触摸屏	11	故障排除	30
通话	12		
联系人	14		
信息	15		
输入文本	16		
设置电子邮件	17		
相机	17		
摄像机	19		
音乐	20		
管理文件	21		
应用程序	21		
PC 套件	22		
安装 LG PC Suite PC 应用程序	22		
在 PC 上安装屏幕手机	22		
网络	23		
SIM 双卡设置	23		
设置	23		
Wi-Fi	26		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下


无线电波暴露和“特定吸收率”(SAR)信息。

此款 LG-T375 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有用户（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.718 W/kg (10 克)。

产品保养和维护

 **警告：** 仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。

关于安全有效使用手机的准则

- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或燃气灶之类的热源。
- 不要摔跌手机。
- 不要让手机受到机械振动或撞击。
- 在任何有特定条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 作为电子设备，您的手机在正常操作下会发热。空气不流通情况下，长时间与皮肤直接接触可能会导致不适或轻微灼伤。因此，在手机使用中或刚使用完后，请小心接触。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将备注力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

关于安全有效使用手机的准则

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

备注：耳机声音和压力过度可能导致听觉受损。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在飞机上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要置于诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 替换电池类型不当时可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。

安装 SIM 卡和手机电池

安装 SIM 卡

当您预定了手机网络后，您将得到一个插入式 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。


重要!

插入式 SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。

说明

取出电池前，请关闭手机并断开与充电器的连接。

- 1 卸下电池盖。
- 2 取出电池。
- 3 插入 SIM 卡。
- 4 插入电池组。
- 5 盖上后盖。
- 6 充电

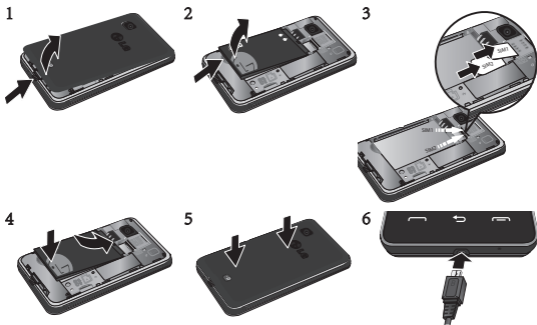


安装存储卡

卸下存储卡插槽盖。推入存储卡，使其金色接触区域面朝下。

要取出储存卡，请轻推卡。

提示：存储卡是可选配件。

手机部件

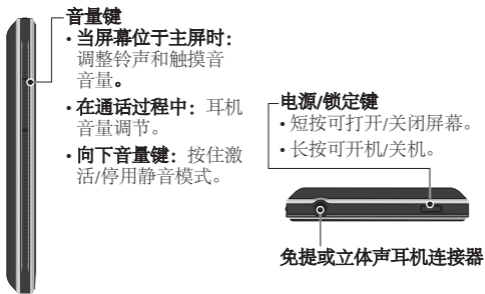

使用触摸屏

触摸屏提示

- 要选择项目，请点触图标中心位置。
- 无需大力按。触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- LG-T375 未使用时将返回锁定屏幕。

控制触摸屏

LG-T375 触摸屏上的控件会动态更改，具体取决于您执行的任务。

打开应用程序

要打开任何应用程序，轻触其图标即可。

滚动

来回拖动即可滚动。在有些屏幕（如“记录列表”屏幕）上，您还可以上下滚动。

通话

拨打电话



- 1 点触  以打开键盘。
- 2 使用键盘键入号码。
- 3 点触  以开始通话。

备注：要通过 SIM2 拨打电话，请点触  图标上的前进箭头标记。

提示！ 要输入 + 以拨打国际电话，请长按“0”。

按电源键锁定触摸屏，避免意外拨出电话。


从电话本拨打电话

- 1 从主屏点触  以打开联系人。
- 2 轻触屏幕顶部的“搜索”字段框，然后使用键盘输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人旁边的通话图标。如果该联系人有多个号码，则拨打默认号码。
- 4 或者，您可以点触联系人姓名，如果该联系人有多个号码可用，请选择您要使用的号码。您也可以点触  以启动对默认号码的呼叫。

备注：

自动呼叫 - 自动呼叫模仿真实来电。按拨号盘上的“#*#”进行自动呼叫。不收取任何费用。

接听和拒接来电

电话铃响起时，请按  键接听电话。

要静音，请点触提示屏幕的“静音”选项卡。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。点触提示屏幕的“拒接”选项卡，拒绝接听来电。

更改常用通话设定

1 在**设置**菜单中点触**通话设置**。

2 从屏幕点触 SIM1/SIM2。

- **拒接来电列表** - 您可以从“记录”/“联系人”/“手动输入”/“所有未知来电者”/“所有未知号码”中选择号码。
- **发送我的号码** - 选择是否要在拨出电话时显示您的号码。

- **自动重拨** - 向左滑动开关为开，向右滑动开关为关。
- **分钟提示** - 向左滑动开关为开，在通话过程中每隔一分钟将听到提示音。
- **保存新号码** - 选择“开”或“关”以保存新号码。

更改常用通话设置

• 接听模式

仅发送键：按  键，您可以仅接听来电。

按任意键：按除  键以外的任意键，您可以接听来电。

- **蓝牙接听模式** - 选择“始终设为免提”可使用蓝牙耳机接听来电，或选择“始终设为手机”可以按任意键接听来电。

联系人

正在搜索联系人

- 1 点触联系人。
- 2 您将看到一个联系人列表。
在“搜索”字段中键入联系人姓名的首字母会使菜单跳转到列表的该字母区域。

添加新联系人

- 1 点触联系人，然后点触新增。
- 2 选择是将联系人保存到**内存**、**SIM1** 还是 **SIM2**。
- 3 输入姓氏和名字。
- 4 对同一个联系人，您最多可以输入 5 个不同的号码。
- 5 添加电子邮件地址。每个联系人最多可输入两个不同的电子邮件地址。
- 6 将联系人分配到一个或多个群组。
- 7 点触**保存**以保存联系人。

更改电话本设置

您可以调整您的电话本设置，使**电话本**符合您的需要。

点触**选项键** ，然后点触**设置**。



- **显示名称** - 选择是先显示联系人的名字还是姓氏。
- **电话本视图** - 选择是显示**名称**还是**姓名 & 号码**。
- **复制** - 将电话本从 SIM1 卡或 SIM2 卡复制到内存，反之亦可；也可从 SIM1 卡复制到 SIM2 卡，反之亦可。您可以逐个复制或一次性全部复制。
- **移动** - 此操作与“复制”相同，但是联系人仅保存在新位置。因此，如果将联系人从 SIM 卡移动到内存，其将从 SIM 存储卡中删除。
- **通过蓝牙发送所有联系人** - 通过蓝牙将所有联系人发送到其它手机。

- **备份电话簿/恢复电话簿** - 将电话本数据保存或恢复到其它存储位置。
- **删除所有联系人** - 删除您的所有联系人。如果确定要清空电话本，请点触是。


信息

LG-T375 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

- 1 点触菜单中的**信息**，然后点触**写信息**开始写新信息。
- 2 点触**插入**添加图像、视频、声音、模板等。
- 3 点触屏幕底部的**收件人**以输入收件人，然后输入号码或点触  选择一个联系人。您甚至可以添加多个联系人。
- 4 就绪后，请点触 。

备注：要通过 SIM2 发送信息，请点触  图标上的前进箭头标记。

 **警告：**如果在短信中添加图像、视频、声音或新幻灯片等，则短信将自动转换为彩信，您需要支付相应费用。


提示：用户可以从任何编辑器复制选定的文本，将其粘贴到另一个编辑器中。

如，转至信息编辑器，键入文本。现在通过在文本上滚动选择需要复制的文本。现在将光标置于要粘贴文本之处。转至“选项”，单击“粘贴”，因此将粘贴复制的文本。


备注：垃圾信息 - 您可以通过提供编号或具体词语阻止不需要的信息。这些信息将存储在“垃圾箱”文件夹中。

输入文本

通过点触  并点触**输入法**，您可以选择输入方法。

点触  可以打开 T9 模式。

只有当您选择**键盘**作为输入方法时，才会显示此图标。点触

 在数字、符号和文本输入间切换。使用 **Shift** 键在大小写输入之间切换。

更改文本信息设置

点触**信息**，然后点触**设置**。选择**文本信息**。

文本信息中心 - 输入信息中心的详细信息。

发送报告 - 向左滑动开关，在对方收到您发送的信息时接收确认。

有效期 - 选择信息在信息中心中的最长保存时间。

信息类型 - 将文本转换为**文本**、**语音**、**传真**、**X.400** 或**电子邮件**。

符号编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

将长信息发送为 - 选择是以**多条短信**还是一条**彩信**发送长信息。

更改多媒体信息设置

点触**信息**，然后点触**设置**和**多媒体信息**。

读取模式 - 选择**本地网络**或**漫游网络**。如果选择**手动**，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

发送报告 - 选择以**要求**和/或**允许**发送报告。

请求已读回执 - 选择以**请求**接收通知和/或**允许**接收通知已读回执。

优先级 - 选择多媒体信息的**优先级**级别。

有效期 - 选择信息在信息中心中的**最常**保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择是否要**限制**不受支持的附件。

发送时间 - 选择信息发送前的等待时间。

网络设定 - 从列表中选择或添加新信息中心。

提示：您可以一次将短信发送给多个联系人。用户可选择/取消选择联系人以发送信息。仅可标记 20 个联系人，如果用户选择“全部选择”，系统将仅标记前 20 个联系人。

要将短信发送给特定联系人群组，请选择“群组选项”，然后选择特定群组。

备注：借口信息 - 在来电提醒期间，只要点击“借口信息”，预设的信息就可以作为短信发出。

备注：SMS 排序 - 可按照指定的排序选项对收件箱的信息进行排序，以更轻松访问信息。（日期、发件人和已读/未读）

设置电子邮件

从屏幕 2 点触**电子邮件**。

如果尚未设置电子邮件帐户，请启动并完成电子邮件设置向导。

您可以查看并编辑设置，还可以查看创建帐户时自动填写的附加设置。

相机

快速拍照

1 点触**相机**菜单。

2 当相机对好焦后，点触屏幕中心右侧的  拍照。

提示：要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

拍照后

拍好的照片将显示在屏幕上。

可以使用以下选项。

点触 。

上传 - 点触可以上传照片。

发送方式 - 点触可以**信息、电子邮件或蓝牙方式发送照片**。

设置为 - 点触可以设置主屏墙纸、锁定屏幕墙纸、联系人图像。

编辑 - 点触可以编辑照片。

 点触可以删除图像。

 点触可以立即拍摄其它照片。

 点触可以查看保存的图像库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。

选择选项后，点触**确定**按钮。

大小 - 更改照片大小以保存在存储空间中。

白平衡 - 从以下选项中选择：**自动、白炽灯、阳光、日光灯和阴天**。

色彩效果 - 选择新照片的色彩效果。

连拍 - 将物体定位在取景器中，请像拍摄普通照片一样按下拍摄按钮。相机将快速连拍多张照片。

自拍器 - 自拍器允许您设置按下拍摄按钮后的延迟。从**关、3秒、5秒或10秒中选择**。如果要为自己拍摄照片，此功能是理想之选。

夜间模式 - 在黑暗环境中非常有用。

选择存储位置 - 选择是将照片保存到手机内存还是外部存储器。

显示已拍照片 - 选择“开”立即查看拍摄的照片。





快门声音 - 选择以打开/关闭快门声音。

恢复初始设置 - 恢复所有相机默认设置。

摄像机

快速录制视频

要切换为相机模式或视频模式，请向上/向下滑动取景器右侧中间的相机或视频图标。

- 1 水平放置相机，将镜头对准要拍摄的物体。
- 2 按红点 。
- 3 ●取景器底部将出现 **Rec**，底部计时器显示视频长度。
- 4 要暂停视频，请点触 ，要恢复录制，请选择 。
- 5 点触屏幕上的  停止视频录制。




拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频的名称显示在屏幕底部。


可以使用以下选项。

-  点触以播放视频。
- 点触  以。

发送方式 - 通过信息、电子邮件或蓝牙发送视频。

-  点触可以删除您刚拍摄的视频，点触 **是** 确认。此时取景器将重新出现。
-  点触立即拍摄其它视频。将保存您的当前视频。
-  点触可以查看保存的视频库和图片库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。选择选项后，您可以点触 **确定** 按钮更改摄像机设置。

色彩效果 - 选择要对新视图使用的色彩效果。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、阳光、日光灯和阴天中选择。

持续时间 - 设置视频的长度限制。从标准和彩信中选择，以限制彩信最大大小。

选择存储位置 - 选择是将视频保存到手机内存还是外部存储器。

恢复初始设置 - 重设所有摄像机设置。

音乐

要访问音乐播放器，请点触**音乐**。您可以在这里访问多个文件夹：

近期播放 - 播放您最近播放的歌曲。

所有曲目 - 包含手机上除预先加载的默认音乐以外的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放列表 - 包含您创建的所有播放列表。

随机播放曲目 - 以随机顺序播放您的曲目。

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或数据线。

使用蓝牙传输音乐：

- 1 请确保双方设备都已打开蓝牙并且连接对方。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须通过点触**是**在您的手机上接受它。
- 4 文件应显示在**音乐 > 所有曲目**中。

管理文件

您可以将任意多媒体文件储存在手机内存中，这样，您可以轻松访问所有图像、声音、视频、文档和其他内容。您也可以将文件保存到存储卡中。使用存储卡，您可以释放手机内存的空间。

通过点触**我的文档**，您可以打开保存所有多媒体文件的文件夹列表。

应用程序

将事件添加到日程表中

- 1 点触**日历**。
- 2 选择您要添加事件的日期。
- 3 点触**新增**。

设置闹钟

- 1 点触**闹钟**。
- 2 点触**新增**，然后，您可以在此菜单中设置并保存闹钟。

语音备忘录

使用录音机录制语音备忘录或其它音频文件。

使用计算器

- 1 点触**计算器**。
- 2 点触数字键输入数字。

换算单位

- 1 点触**单位换算器**。
- 2 选择要换算的内容：币种、面积、长度、重量、温度、体积/容量或速度。
- 3 然后，选择单位并输入要对其进行换算的值。

PC 套件

您可以使用手机同步电脑，以确保所有重要信息和日期匹配，同时做好备份。

警告：传输过程中，不要断开手机连接。

备注：屏幕手机 - 屏幕手机允许您通过 USB 或蓝牙连接从 PC 查看手机屏幕。

安装 LG PC Suite PC 应用程序

可以从 LG 网页下载 LG PC Suite PC 应用程序。

- 1 转到 www.lg.com，选择您所在的国家/地区。
- 2 转到“支持”>“手机支持”>选择型号 (LG-T375)。
- 3 单击“下载中的 PC 同步”，然后单击“WINDOW PC 同步下载”，下载 LG PC Suite IV PC 软件。

在 PC 上安装屏幕手机

从 www.lg.com 下载 OSP > 支持 > 手机支持 > 选择型号 (LG-T375) > OSP。

网络

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

访问网页

- 1 点触**浏览器**。
- 2 要进入浏览器默认主页，请选择**主页**。或者，选择**输入网址**并键入所需的 URL，随后将打开“连接” > 浏览器配置文件中设置的**连接**主页。

备注：连接这些服务以及下载内容会产生额外费用。查看网络提供商要求的数据付费。

访问 Google 服务

点触“**Google 搜索**”启动 Google 搜索应用程序。

SIM 双卡设置

当插入两张 SIM 卡时，您可以在屏幕左上方看到两个网络信号图标。

要选择或切换 SIM 卡，请按“菜单”，选择“SIM 双卡设置”。


设置

更改手机设置

随意根据需要调整 LG-T375 设置。

从主屏选择  并点触**设置**，然后滚动到**装置设置**。

防盗手机追踪器 - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。要激活 ATMT 功能，您将需要将 ATMT 设置为“开”，并使用机主名称和辅助号码来配置防盗追踪设置。默认 ATMT 码为“0000”。

备注：手机防盗跟踪器 -
() > 设置 > 设备设置 > 安全性 > 手机防盗跟踪器) 一旦被盗，手机将发送一条短信至真正的手机主人所配置的预定义号码。ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的所有者姓名和电话号码。

SOS 服务设置

• **SOS 服务** - 此菜单可以启动 SOS 模式。启动后，如果在屏幕锁定时按下音量键 4 次，手机将发出 SOS 信息并停留在 SOS 模式。

在紧急情况下，SOS 信息将发送至指定收件人，来自他们的来电将被自动接听。所有通知提示音保持静音。要退出 SOS 模式，请按主屏中的结束键。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。要更改任意设置，请使用此菜单：点触**连接**。

使用蓝牙发送和接收文件

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送方式**。选择**蓝牙**。
- 3 如果已配对**蓝牙**设备，LG-T375 将不会自动搜索以配对其它**蓝牙**设备。否则，LG-T375 将搜索范围内其它启用了**蓝牙**的设备。
- 4 选择您要向其发送文件的设备。
- 5 您的文件将被发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。

- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触是以接收文件。
- 3 您可以查看文件的保存位置。对于图像文件，您可以选择**查看**文件。文件通常保存在**我的文档**中的相应文件夹。

提示！

- 1 使用蓝牙耳机时，A2DP 和 AVRCP 情境模式在播放视频时不受支持。这意味着您在使用蓝牙耳机时将无法听到视频声音。
- 2 在某些应用程序运行时，蓝牙文件传输功能将被锁定。（语音呼叫、相机、音乐播放器、UMS/PCSync）

更改蓝牙设置：点触**蓝牙**，然后选择**选项**，再选择**设置**。

与其它蓝牙设备配对

将您的 LG-T375 与其它设备配对，您可以设置受通行码保护的连接。

- 1 查看蓝牙是否为**开且可见**。
您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 LG-T375 将搜索设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

Wi-Fi

通过无线管理器，您可以通过手机的 Wi-Fi（无线局域网）管理 Internet 连接。它能允许手机连接本地无线网络，或者无线访问互联网。Wi-Fi 相较于蓝牙无线技术，速度更快、覆盖范围也更广。它允许快速收发电子邮件和浏览互联网。

备注：LG-T375 支持 WEP 和 WPA/WPA2-PSK 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。

您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

软件更新

手机软件更新

从互联网的 LG 手机软件更新有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区和语言 → 支持。此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

充电器



电池



立体声耳机



用户手册



备注




- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度: +55° C (放电)
+45° C (充电)

最低温度: -10° C

Declaration of Conformity		 LG Electronics
Supplier Details		
Name	LG Electronics Inc	
Address	: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T375	
Trade Name	LG	
		CE0168 
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-1 V 1.8.1 (2008) / EN 301 489-7 V 1.3.1 (2005) / EN 301 489-17 V 2.1.1 (2009) EN 50360:2001/AC:2006 / EN 62209-1:2006 EN 60950-1:2006+A11:2009 EN 301 511 V9.0.2 EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name	Issued Date
	Doo Haeng Lee / Director	8 March 2012
LG Electronics Inc. – EU Representative Krijgsman 1, 1186 DM Amstelveen The Netherlands		
	Signature of representative	

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
USIM 卡错误	手机中没有安装 USIM 卡或 USIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/ 网络断开	信号弱，超出 GSM 网络区域 运营商应用了新服务	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。如果是，请到您的网络运营商营业点处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册	请与服务提供商联系。

信息	可能原因	可行解决措施
无法拨打电话	拨号错误。 插入新 SIM 卡 达到预付费限制	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 充电器使用时间过长。 清洁触点 取出电池并重新插入。
充电错误	电池未充电 外部温度太热或太冷 触点问题 无电压 充电器故障 错误充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。检查电池触点，如果需要，请清洁。 插入不同的插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。

故障排除

信息	可能原因	可行解决措施
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查可支持的文件格式
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
挂机或死机	间歇性软件问题	取出电池并插入电池。 打开手机。 尝试通过网站执行软件更新服务。

LG-T375 User Guide

- English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Contents

Guidelines for safe and efficient use	3	Wi-Fi.....	30
Installing the SIM card and the handset battery	10	Software update.....	31
Phone Components	12	Accessories	32
Using your touch screen.....	13	Technical data.....	33
Calls	14	Troubleshooting.....	34
Contacts	16		
Messaging	17		
Entering Text.....	18		
Setting up your email	20		
Camera	21		
Video camera.....	22		
Music	24		
Managing files	25		
Application.....	25		
PC Suite	26		
Installing "LG PC Suite IV" PC application	26		
Installing On-Screen Phone on your PC	26		
The web	27		
Dual SIM setting	27		
Settings.....	27		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-T375 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.

Guidelines for safe and efficient use

- The highest SAR value for this model phone tested by DAS4 for use close to the ear is 0.718 W/kg (10g).

Product care and maintenance



WARNING: Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.

Guidelines for safe and efficient use

- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volume is set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.

- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!


The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

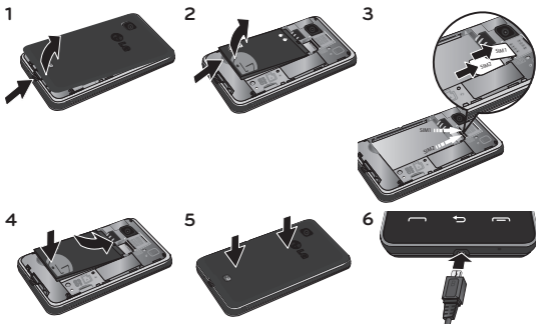




Installing a Memory Card

Remove the back cover of your phone. Push the memory card inside with the gold contact facing downwards.

To remove the memory card, gently pull it outside.

NOTE: A memory card is an optional accessory.

Phone Components

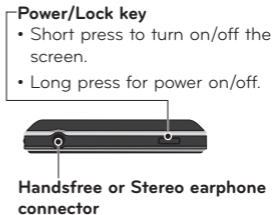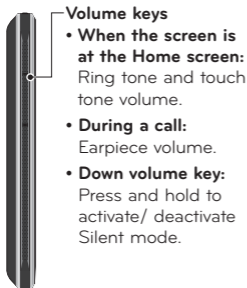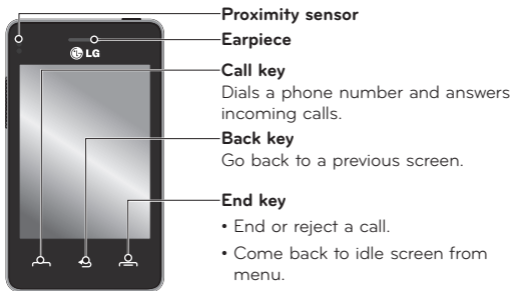

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T375 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the LG-T375 touch screen change dynamically depending on the task you are carrying out.

Opening Applications



To open any application, simply touch its icon.


Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Calls

Making a Call



- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

NOTE: To make a call from SIM2 touch the forward arrow mark on  icon.

TIP! To enter + for making an international call, press and hold "0".

Press the power key to lock the touch screen to prevent calls being made by mistake.


Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one number for that contact.
- 4 Or you can touch the contact name and select the number to use if there is more than one number for that contact. You can also touch  to initiate the call to the default number.

NOTE:

Self call - Self call imitates a real incoming call. Press '#*#' on the Dialpad to make a self call. This doesn't charge any fee.

Answering and rejecting a call

When your phone rings, press  key to answer the call.



To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

Changing the call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 From the screen touch SIM1/SIM2.

- **Call rejection list** - You can select numbers from **Logs**, **Contacts**, **Enter manually**, **All unknown callers** and **All unknown numbers**.
- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **Save new number** - Select ON or OFF to save a new number.

Changing the common call setting

- **Answer mode**
 - Press send key:** Allows you to only answer an incoming call by pressing the  key.
 - Press any key:** Allows you to answer an incoming call by pressing any key, except the  key.

- **BT answer mode** - Select Always to handsfree to be able to answer a call using a Bluetooth headset, or select Always to handset to press a handset key to answer a call.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.


Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory**, **SIM1** or **SIM2**.
- 3 Enter your first and last name.

- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.



- **Display name** - Choose whether to display the first or last name of a contact first.
- **Contacts view** - Choose whether to display **Name** or **Name & number**.


- **Copy** - Copy your contacts from your SIM1 to your internal memory, SIM2 to your internal memory or vice versa, SIM1 to SIM2 or vice versa. You can do this one contact at a time, or all at once.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts / Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch **Yes** if you are sure you want to delete all your contacts.

Messaging

Your LG-T375 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch  when ready.

NOTE: To send a message from SIM2 touch the forward arrow mark on  icon.



WARNING: If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.


TIP: User can Copy a selected text from any editor and can paste the same in any other editor.



Ex: Go to Message Editor, Type some text. Now Select the Text you want to copy by scrolling over the text. Now Place the cursor at a point you want to paste the text. Go to Option and Click on Paste, so that copied text will get Pasted.

NOTE: Spam Message

- You can block the unwanted messages by giving Spam numbers or Spam words. Those messages will get stored in Spam Box Folder.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method. Touch to  change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long message as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/ or allow a receipt.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment -

Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

TIP: You can send SMS to many contacts at a time. User can select/deselect all contacts for sending the message. Only 20 contacts can be marked and if user select Select all only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select Group Option and select particular group.

NOTE: Excuse message

- During Incoming call alert, a preset Message can be send as SMS on clicking Excuse msg.

NOTE: SMS Sorting -


Inbox Messages can be sorted with the given sorting options for an easy access of messages.
(Date, Sender, Read and Unread)

Setting up your email

Touch **E-mail** from screen 2. If the email account is not set up, start the email set up wizard and finish it. You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .


Upload - Touch to upload the photo.

Send Via - Touch to send the photo as a **Message**, **Email** or via **Bluetooth**.

Set as - Touch to set as **Homescreen wallpaper**, **Lockscreen wallpaper**, **Contacts image**.


Edit - Touch to edit the photo.

 Touch to delete the image.

 Touch to take another photo immediately.

 Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory.

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

Colour effect - Choose a color tone for your new photo.

Continuous shot - Choose from **Normal shot, Three, Six** or **Nine** and position the subject in the viewfinder, then press the capture button as if taking a normal photo to take continuous shot.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds,** or **10 seconds.** This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Show captured image - Choose On to check the picture you took right away.




Shutter sound - Select to make Shutter Sound On or Off.

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .

- 5 Touch  on screen to stop video recording.

After making a video


A still image representing your captured video will appear on the screen. The name of the video is displayed at the bottom of the screen.


The following options are available.


 Touch to play the video.

Touch  to


Send Via - To send the video as a **Message, Email** or via **Bluetooth**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent, and Cloudy**.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and other content.

You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

Application

Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your **voice recorder** to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.
- 3 Then select the unit and enter the value you would like to convert from.

PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

WARNING: Do not disconnect your phone during the transfer.

NOTE: On - Screen Phone
- On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection.

Installing "LG PC Suite IV" PC application

"LG PC Suite IV" PC application can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to Support > Mobile Phone Support > Select the Model (LG-T375).
- 3 Click PC Sync from Download, and click WINDOW PC Sync Download to download "LG PC Suite IV" PC software.

Installing On-Screen Phone on your PC

Download OSP from www.lg.com > Support > Mobile Phone Support > Select the Model (LG-T375) >OSP.

The web

Browser gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page touch **Yes**. Once page is loaded tap on settings button in the right top corner for more options.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Service

Touch **Google** and select **Gmail, Blogger** and other Google applications.

Dual SIM setting


You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the **SIM card**, press **Menu** and select **Dual SIM settings**.

Settings


Changing your phone settings

Use the freedom of adapting the LG-T375 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

Anti-theft mobile tracker -

When the handset is stolen, handset sends the SMS to the numbers configured by real Owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with Owner name and Alternate numbers. Default ATMT Code is "0000".

NOTE: Anti Theft Mobile Tracker - ( > Settings > Device settings > Security > Anti-theft Mobile tracker)

When the handset is stolen, handset sends the SMS to the predefined numbers configured by real owner.

ATMT SMS will contain information about the stolen phone **IMEI, Owner name & phone number** of the person who is using that handset.

SOS Service settings

- **SOS Service** - This enables SOS mode. After enabling if you press down volume key 4 times when screen is locked, the SOS message is sent and the phone stays in SOS Mode.

In the emergency situation SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use **Menu > Settings > Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-T375 will not automatically search for other **Bluetooth** devices. If not, your LG-T375 will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Bluetooth settings** for more information.

- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

TIP!

- 1 When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, Music Player, UMS/PCSync)

Changing your Bluetooth settings: Touch **Bluetooth** then select **Options** and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-T375 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your LG-T375 will search for devices. When the search is completed, **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T375 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support. This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Battery



Stereo headset



User Guide



NOTE




- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Declaration of Conformity		 LG Electronics
Supplier Details		
Name	LG Electronics Inc	
Address	: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment	
Model Name	LG-T375	
Trade Name	LG	
CE 0168 		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-1 V 1.8.1 (2008) / EN 301 489-7 V 1.3.1 (2005) / EN 301 489-17 V 2.1.1 (2009) EN 50360:2001/AC:2006 / EN 62209-1:2006 EN 60950-1:2006+A11:2009 EN 301 511 V9.0.2 EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT)		
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives	Name Doo Haeng Lee / Director	Issued Date 8 March 2012
LG Electronics Inc. – EU Representative Krijgsman 1, 1186 DM Amstelveen The Netherlands	 _____ Signature of representative	

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.

Message	Possible Causes	Possible Corrective Measures
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted Prepaid charge limit reached	Check for new restrictions. Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged Battery contacts are dirty	Keep charger attached for a longer time. Clean the Battery contacts and insert again.

Troubleshooting

Message	Possible Causes	Possible Corrective Measures
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective Wrong charger	If the charger does not warm up, replace it.
	Battery defective	Only use original LG accessories. Replace battery.
Number not permitted	The Fixed Dial Number function is on.	Check settings.

Message	Possible Causes	Possible Corrective Measures
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
The screen does not turn on when I receive a call.	Proximity sensor problem	<p>If you use any protection tape or case, check it is covered the area around proximity sensor</p> <p>Make sure that the area around the proximity sensor is clean.</p>
Hang up or freeze	Intermittent software problem	<p>Take out the battery and insert battery.</p> <p>Turn on the phone.</p> <p>Try to do software update service via web site</p>

