LG
Life's Good

OWNER'S MANUAL

WASHING MACHINE

Please read this manual carefully before operating your washing machine and retain it for future reference.

WT-R2075TH

P/No.: MFL67221360

www.lg.com

Product Features

The Turbo Drum DD washing machine does not operate with the lid open.
If the lid is opened during wash, rinse and spin cycles, the machine will stop automatically.

Please close the door gently. Closing the door in an agressive manner can cause damage and or injury.

1 sensors

- The sensor automatically detects the quantity of Detergent put in by a user and the temperature and quality of the water to produce the best algorithm for washing and rinsing, to give the best washing results.

Smart Drum achieved by DD Motor Technology

- Smart Drum with Drum Washing Type is more hygienic and cleaner washer tub that protects the fabric and prevents damages.




FUZZY logic control

- A built-in load sensor automatically detects and measures the laundry load and amicroprocessor optimizes washing conditions such as ideal water consumption and washing time.
- Advanced technology is built into the Electronic Control System which ensures the best washing result.



New DD type washing with fabric care

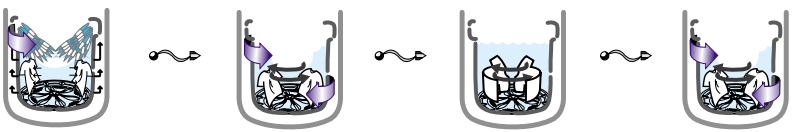

It rotates the tub and creates cannon water flow making the effect of the detergent faster improving the washing effect and preventing fabric damages

The half cycle rotation of the tub to the left/right helps the melting of the detergent for easy washing

The half cycle rotation of the washing rotors to the left/right removes the stains

The half cycle r otation of the tub to the left/right balances the laundry

Low Noise Direct Drive System

- The advanced Brushless DC motor rotates the Tub directly without belt and clutch, thereby reducing the noise of the washer.
- The washing machine adjusts to optimum speed according to the type of clothing in the load.



SMARTDIAGNOSIS™

- It is the technology to transmit the anomalies to the service center when there is a problem with the washer. It provides the service that gives faith and trust to the customers through precise and fast analysis.



Contents

READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your washer properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your washer. You will find many answers to common problems in the Troubleshooting section. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.

Introduction	Safety Information	4
	Identification of Parts	7
	Function Information	8
Before Starting to Wash	Preparation Before Washing	9
	Use of Water, Dispenser Drawer, Detergent, Bleach and Softener	10
	Special Guide for Stain Removal	13
	Function of each Button	14
Washing Programs	FUZZY Wash	16
	WOOL Wash	16
	QUICK WASH	16
	BULKY/BEDDING Wash	16
	SMART CLEANING Wash	16
	STAIN CARE Wash	18
	SANITARY Wash	18
	SPORTS WEAR Wash	18
	TOWELS Wash	18
	SOAK Wash	20
	FAVORITE Wash	21
	ECO COTTON Wash	22
Additional Function Program	TUB CLEAN	23
	AIR DRY	24
	TUB DRY	24
	Option Washing	25
	DELAY START (RESERVATION) Wash	26
	Other Useful Functions	27
Installation	Placing and Leveling	28
	Connecting Water Supply Hose	29
	Connecting Drain Hose	32
Care and Maintenance	Grounding Method	33
	Cleaning and Maintenance	34
	Use of Handle Locker	36
Troubleshooting	Common washing problems	37
	Troubleshooting	38
	SmartDiagnosis™	39
Terms of Warranty	Terms of Warranty	40
Specification	Specification	41

Safety Information

Read carefully and thoroughly through this booklet as it contains important safety information that will protect the user from unexpected dangers and prevent potential damages to the product.

This booklet is divided into 2 parts : Warning and Caution.

: This is a warning sign specifying user's applications which might be dangerous.

: This is a sign specifying 'Strictly Forbidden' applications.

Warning : Failure to comply with the instructions under this sign may result in major physical injuries or death.

Caution : Failure to comply with the instructions under this sign may result in minor physical injuries or damages to the product.

WATER HEATER SAFETY

Warning

- Under certain conditions hydrogen gas may be produced in a water heater that has not been used for two weeks or more. Hydrogen gas can be explosive under these circumstances. If the HOT water has not been used for two weeks or more, prevent the possibility of damage or injury by turning on all Hot water faucets and allowing them to run for several minutes. Do this before using any electrical appliance which is connected to the HOT water system. This simple procedure will allow any built-up hydrogen gas to escape. Since the gas is flammable, do not smoke or use an open flame or appliance during this process.

PROPER INSTALLATION

Caution

- The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
- Install or store where it will not be exposed to temperatures below freezing or exposed to the weather.
  If the product is exposed to such conditions, electric shock, fire, break down or deformation may occur.
- Properly ground washer to conform with all governing codes and ordinances. Follow details in Installation Instructions.
  If not grounded properly, break down and leakage of electricity may occur, which may cause electric shock.
- Must be positioned so that the plug is accessible.
  If the plug is placed between the wall and the machine, it may get damaged, possibly causing fire or electric shock.
- Make sure the plug is completely pushed into the outlet.
  Failure to do so may cause electric shock and fire due to overheating.

Safety Information

YOUR LAUNDRY AREA

⚠ Warning

- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemical, etc.
  Operating with such materials around the machine may trigger explosion or fire.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
  There is potential danger that children might drown in the tub.

Do not touch the power plug with a wet hand.
It will cause electric shock

Do not put your hand, foot or anything under the washing machine while the washing machine is in operation.
There is a rotating mechanism under the machine, so you could be injured.

WHEN USING THE WASHER

⚠ Caution

- Use this appliance only for its intended purpose as described in this Owner's Manual.
- The laundry process can reduce the flame retardancy of fabrics. To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

NOTE : Pressing Circuit button to turn off does NOT disconnect the appliance from the power supply.

- Make sure that drainage is working properly.
  If water is not drained properly, your floor may get flooded. Flooded floors may induce electricity leakage, further resulting in electric shock or fire.
- If, during spinning, opening the lid does not stop the tub within about 15 seconds, immediately discontinue operating the machine.
  Call for repair. A machine that spins with its door open may cause injuries.

Never reach into washer while it is moving.
Wait until the machine has completely stopped before opening the lid.
Even slow rotation can cause injury.

Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
Operating with a damaged plug may cause electric shock.

Do not use water hotter than 50°C.
Use of excessively hot water may cause damage to fabrics or cause leakage of water.

Safety Information

WHEN USING THE WASHER

⚠ Warning

Do not use a plug socket and wiring equipment for more than their rated capacity.
Exceeding the limit may lead to electric shock, fire , break down, and/or deformation of parts.

Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover.
Mixing different chemicals can produce toxic gases which may cause death.

Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, dry-cleaning solvents, kerosene, etc). Do not add these substances to the wash water.
Do not use or place these substances around your washer or dryer during operation.
It may ignite or explode.

WHEN NOT IN USE

⚠ Caution

- Turn off water faucets to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they may need replacement after 5years.
- When the air temperature is high and the water temperature is low, condensation may occur and thus wet the floor.
- Wipe off dirt or dust on the contacts of the power plug.
  Using unclean power plug may cause fire.
- Before discarding a washer, or removing it from service, remove the washer lid to prevent children from hiding inside.
  Children may be trapped and suffocated if the lid is left intact.

Do not attempt to repair or replace any part of this appliance unless specifically recommended in this Owner's Manual, or in published user-repair instructions that you understand and have the skills to carry out.
Operating the machine with improperly replaced parts may be a cause for fire or electric shock.


Do not tamper with controls.
It may lead to electric shock, fire , break down, deformation.

Do not yank the power cord in an attempt to disconnect the power plug. Securely hold the power plug to unplug the machine.
Failure to observe these instructions may cause electric shock or fire due to short-circuit .

When you are cleaning the washing machine, do not apply water directly to any part of the washing machine.
It will cause short circuit and electric shock.

dentification of Parts

Body

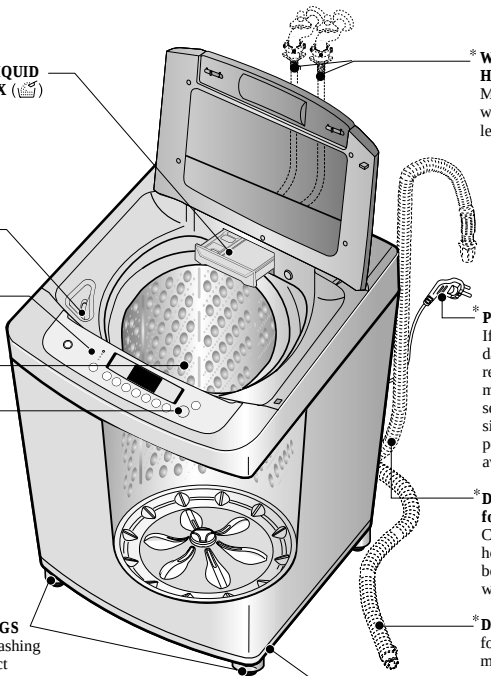

POWDER AND LIQUID DETERGENT BOX (🧺)

BLEACH DISPENSER (🧴)

FUNCTION SELECTOR

TUB

START/PAUSE BUTTON
Use to start or stop the washing machine temporarily.

ADJUSTABLE LEGS
Use to level the washing machine for correct balance & spin operation.

* **WATER SUPPLY HOSE**
Make sure the water does not leak.

* **POWER PLUG**
If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.


* **DRAIN HOSE for pump model**
Check if the drain hose is hung up before operating the washing machine.

* **DRAIN HOSE**
for non pump model

BASE

Accessories

Water supply hoses

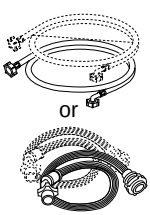

or

1 Each for COLD and HOT water

Drain hose



or



NOTE

" ∗" Part can be different according to the model.

Function Information

Our machine provides various washing methods which suits various conditions and types of laundry.

Different types of laundry washing

FUZZY Wash

Use this Program for everyday washing e.g. sheets, towels, T-shirts. ***(refer to page 16)***

STAIN CARE Wash

Washing is the best temperature (40 degrees) by heating the clean clothes when you want to use. ***(refer to page 18)***
(Proper Water Temp. Hot:60°C / Cold:15 °C)

SANITARY Wash

Sterilization and sanitation course for the laundry is heated to 50 degrees. ***(refer to page 18)***
(Proper Water Temp. Hot:60°C / Cold:15 °C)

BULKY/BEDDING Wash

Use this Program for heavily soiled durable garments e.g. overalls, jeans.
Thick and heavy clothes or those which are excessively dirty like jeans or working uniforms can be washed. ***(refer to page 16)***

SMART CLEANING Wash

Use this program to get better rising performance. ***(refer to page 16)***

SPORTS WEAR Wash

Use this program to wash SPORTS WEAR. ***(refer to page 18)***

TOWELS Wash

Use this program to wash Towels, Shirts, Sheets, mixed loads. ***(refer to page 18)***

WOOL Wash

Wool clothes (lingerie, wool, etc.) which may be easily damaged can be washed. ***(refer to page 16)***
The fibers of machine washable woolens have been specifically modified to prevent felting when they are machine washed.
Most handknitted garments are not made of machine washable wool and we recommend that you hand wash them

- Before washing your woolens check the care label for the washing instructions.
- When washing woolens use a mild Detergent recommended for washing wool.
- Hand washed woolens may be spun in a washing machine to reduce the time they take to dry.
- To dry woolens lay down them flat on a towel and pat into shape. Dry woolens out of direct sunlight.
  (The heat and tumble action of a dryer may cause shrinkage or felting of woolen garments.)

Some wool underlays and sheepskin products can be washed in a washing machine but may cause pump blockages.
(Ensure that the whole article is suitable for machine washing and not just the backing material.)
You may wish to handwash these articles and place them in the machine to spin dry.

FAVORITE Wash

This setting allows you to store your FAVORITE wash conditions in the normal cycle memory. ***(refer to page 21)***

ECO COTTON Wash

Use this program to wash quietly at night. ***(refer to page 22)***

Washing according to the condition of laundry

QUICK WASH

QUICK WASH can be selected to wash lightly soiled clothes of less than 2.0 kg in a short time. ***(refer to page 16)***

SOAK Wash

SOAK Wash can be selected to wash heavily soiled laundry by soaking in water for some time to remove dirt and grime. ***(refer to page 20)***

Other washing method

TUB CLEAN

Use this program to clean the inside of washing machine especially Inner tub & Outer tub . ***(refer to page 23)***

DELAY START Wash

DELAY START Wash is used to delay the finishing time of the operation.
The number of hours to be delayed can be set by the user accordingly. ***(refer to page 26)***

OPTION WASH

When the user needs only SPIN, RINSE/SPIN, RINSE, WASH/RINSE, WASH, WASH/RINSE/SPIN, SOAK/WASH/RINSE/SPIN. ***(refer to page 25)***

Preparation Before Washing

Care Labels

* Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.
  Sort clothes into loads that can be washed with the same wash cycle, Water Temperature and spin speed.



Sorting

To get the best results, different fabrics need to be washed in different ways.

• **SOIL** (Heavy, Normal, Light)	Separate clothes according to the type and amount of soil.
• **COLOR** (Whites, Lights, Darks)	Separate white fabrics from colored fabrics.
• **LINT** (Lint producers, Collectors)	Separate lint producers and lint collectors.
Lint Producers	Terry cloth, Chenille, Towels, Nappies, Diapers
Lint Collectors	Synthetics, Corduroy, Permanent Press, Socks



Check before Loading

- **Check all pockets to make sure that they are empty**. Things such as nails, hairclips, matches, pens, coins, and keys can damage both your washer and your clothes.
- **Mend any torn garments or loose buttons**. Tears or holes may become larger during washing.
- Remove belts, underwires, etc. to prevent damage to the machine or your clothes.
- **Pretreat any dirt and stains**.
- Make sure the clothes are washable in water.
- Check the washing instructions.
- Remove tissue in pockets.



⚠ CAUTION

Do not wash or spin any item labeled or known to be water-proof or water-resistant, even if the product care label on the item permits machine washing. Failure to follow these instructions could result in severe damage to your laundry, your washer and/or property damage as a result of abnormal vibration of the washer.
- Examples of water-proof or water-resistant items include certain mattress pads, mattress covers, rain gear, camping gear, skiing apparel , outdoor gear and similar items.

Pretreatment on stains or heavy soil

- Pretreat shirt collars and cuffs with a pre-wash product or liquid Detergent when placing them in the washer. Before washing treat special stains with bar soaps, liquid Detergent or a paste of water and granular Detergent.
- Use a pretreat soil and stain remover.
  Treat stains AS SOON AS POSSIBLE. The longer they are left the harder they are to remove.

(For more detail refer to page13)

Loading

Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.).

Load Size

The WATER LEVEL should just cover the clothes. Adjust the load size accordingly. Loosely load clothes no higher than the top row of holes in the washer tub. To add items after washer has started, press Start button and submerge additional items. Close the lid and press Start button again to restart.

⚠ WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.
No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Doing so can result in death, explosion, or fire.

Light and Large-sized clothing


Clothes like downs and woollens are light weight, large and float easily. Use a nylon net and wash them in a small amount of water. If the laundry floats during the wash cycle, it may become damaged. Use dissolved Detergent to prevent the Detergent from clumping.



Long laundry items

Use nylon nets for long, DELICATE items. For laundry with long strings or long length, a net will prevent tangling during washing. **Fasten zippers, hook, and strings** to make sure that these items don't snag on other clothes.

※ Nylon net is not supplied by LG.




Use of Water, Dispenser Drawer, Detergent, Bleach and Softener

Using Water

Amount of WATER LEVEL

- This machine detects the quantity of laundry automatically, then sets the WATER LEVEL and proper amount of Detergent.
- When you select a wash program, the WATER LEVEL will be shown on the control panel.
- The following table shows the amount of water.
- When the WATER LEVEL is automatically detected, it may differ depending on the quantity of laundry even though the same WATER LEVEL is indicated on the control panel.

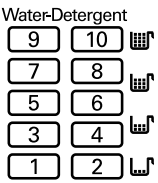

NOTE

[Minimum water amount]
It depends on laundry load and washer model. Or manually you can pour a certain amount water into tub directly to some height. That's because if water level reaches to the some height sensed by washer itself, washer automatically operates. In other words, it is needed to pour water to the point when washer starts operating.

Water Temperature

- The machine sets the appropriate temperature automatically according to the wash program .

- The temperature of the water impacts the effectiveness of all laundry additives and therefore, the cleaning results. We recommend temperatures of:
  - HOT 49~60°C…(120-140˚F) White items, diapers, underclothing and heavily soiled, colorfast items.
  - WARM 29~40°C…(85-105˚F) Most items
  - COLD* 18~24°C…(65-75˚F) Only very bright colors with light soil.
- When washing in COLD water additional steps may be needed:
  - Adjust Detergent amount and pre-dissolve Detergent in WARM water
  - Pretreat spots and stains
  - Soak heavily soiled items
  - Use appropriate bleach

* Temperature below 18°C…(65˚F) will not activate laundry additives and may cause lint, residue, poor cleaning, etc. In addition, Detergent manufactures and care labels define COLD water as 26~29°C…(80-85˚F). If the temperature of the water in the tub is too cold for your hands, the Detergent will not activate and clean effectively.

NOTE

If iron is present in the water the clothes may become an all-over yellow or they may be stained with brown or orange spots or streaks. Iron is not always visible. Installation of water softener or an iron filter may be necessary for severe cases.

Using the Dispenser Drawer

The dispenser drawer contains 2 compartments:
- Liquid Fabric Softener
- Liquid or Powder Low-Sudsing, High-Efficiency Detergent


The dispenser automatically dispenses additives at the proper time in the wash cycle.

1. Slowly open the dispenser drawer by pulling the drawer out until it stops.
2. After adding laundry products, slowly close the dispenser drawer. Closing the drawer too quickly could result in early dispensing of additives.

- Avoid overfilling or splashing when adding laundry products to the dispenser. Doing so could result in early dispensing of laundry products.

At the end of the cycle, you may see water in the compartments. This is part of the normal operation of the washer.

NOTE : Do not use bleach in the dispenser drawer.

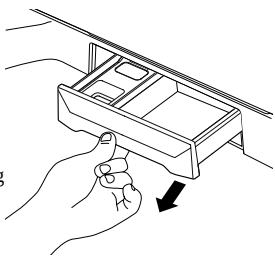

Using Detergent

Detergent

Follow the Detergent package directions. Using too little Detergent is a common cause of laundry problems. Use more Detergent if you have hard water, large loads, greasy or oily soils or lower Water Temperature.

Choosing the right Detergent

We recommend the use of domestic Detergent, (powder, liquid or concentrated). Soap flakes or granulated soap powders should not be used in your washing machine. When washing woolens remember to use Detergent suitable for washing woolens.


Using Detergent

How much Detergent

The correct amount of Detergent will vary depending on the amount of soil in your clothes (Jeans and work cloches may need more Detergent, while bath towels usually need less.).
For liquid and concentrated Detergents, follow the recommendations of the Detergent manufacturer.
Note: To check you are using the correct amount of Detergent, lift the lid of your machine about half-way through the wash. There should be a thin layer of foam over the surface of the water. Lots of foam may look good, but it does not contribute to cleaning your clothes. No foam means not enough Detergent has been used; soil and lint can settle back on the clothes or the washing machine.
If excess Detergent is used, the rinse will not be as clean and efficient. Also, it could cause environmental pollution, so use it accordingly.

Adding Detergent

Add measured detergent to the detergent compartment of the dispenser drawer.

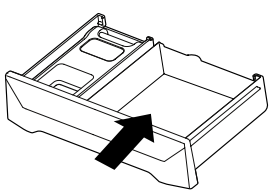

Detergent is flushed through the dispenser at the beginning of the wash phase.

Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. Avoid using too much detergent in your washer, as it can lead to oversudsing and detergent residue being left on the clothes.

Note : Using Liquid detergent
- Dilute Liquid detergent with water and pour into the tub, start the cycle.
- Delay wash course is not available if you use liquid detergent.



Attention


Using liquid detergent without diluting, or leaving laundry for a long time after pouring diluted liquid detergent into the tub might cause damage, bleaching or discoloration of cloth.

Use of Water, Dispenser Drawer, Detergent, Bleach and Softener

Using Liquid Bleach

- Check clothing care label for special instructions and separate the laundry to be bleached
- Dilute liquid chlorine bleach.
- Measure the recommended amount of liquid bleach carefully following instructions on the bottle.
- Before starting the washer, pour measured amount of bleach directly into bleach dispenser. Avoid splashing or overfilling. Powdered bleach should be mixed with water before pouring.

Bleach dispenser (CL)

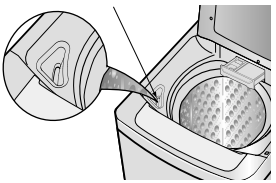

NOTE

- Never pour undiluted liquid bleach directly onto clothes or into the wash basket. This may cause change of color or damage the laundry.
- Do not pour powdered bleach into bleach dispenser.

Using Fabric Softener

If desired, pour the recommended amount of liquid fabric softener into the right-hand compartment.


Use only liquid fabric softener.

Dilute with water to the maximum fill line.

• Do not exceed the maximum fill line.

Overfilling can cause early dispensing of the fabric softener, which could stain clothes.

NOTE : Do not pour fabric softener directly on the wash load. It may stain the clothes.

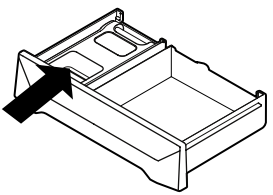

Attention

- Do not mix with Detergent or bleach.
- Never pour fabric softener directly on clothes. It may stain them.
- Do not stop the washer during the first spin for timely dispensing.
- Option washing is not designed to be used with fabric softener dispenser.

Scrud(Waxy Build up)

Scrud is the name given to the waxy build-up that can occur within any washer when the fabric softener comes into contact with Detergent. This build-up is not brought about by a fault in the machine.

If scrud is allowed to build-up in the machine it can result in stains on your clothes or an unpleasant smell in your washer.

If you wish to use fabric softener we recommend

- Using fabric softener sparingly.
- When filling the dispenser, do not splash or overfill.
- Clean dispenser as soon as the cycle is finished.
- Clean your machine regularly. ***(refer to page 23 or 34)***
- Cold water washing increases the chance of this build-up occurring. We recommend a regular WARM or HOT wash e.g. every 5th wash should be at least a warm one.
- Fabric softener of thinner consistency is less likely to leave residue on the dispenser and contribute to a build-up.

Special Guide for Stain Removal

⚠ WARNING

- Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acid or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.
- To reduce the risk of fire or serious injury to persons or property, comply with the basic warnings listed below:
  - Read and comply with all instructions on stain removal products.
  - Keep stain removal products in their original labeled containers and out of children's reach.
  - Thoroughly wash any utensil used.
  - Do not combine stain removal products, especially ammonia and chlorine bleach. Dangerous fumes may result.
  - Never wash items which have been previously cleaned in, washed in, soaked in or spotted with gasoline, dry cleaning solvents or other flammable or explosive substances because they give off vapors that could ignite or explode.
  - Never use highly flammable solvents, such as gasoline, inside the home. Vapors can explode on contact with flames or sparks.

For successful stain removal:

- Remove stains promptly.
- Determine the kind of stain, then follow the recommended treatment in the stain removal chart below.
- To pretreat stains, use a prewash product, liquid Detergent, or a paste made from granular Detergent and water.
- Use COLD water on unknown stains because HOT water can set stains.
- Check care label instructions for treatments to avoid on specific fabrics.
- Check for colorfastness by testing stain remover on an inside seam.
- Rinse and wash items after stain removal.



Follow fabric care label instructions

Stain Removal

STAIN	TREATMENT
Adhesive tape, chewing gum, rubber cement	Apply ice. Scrape off excess. Place stain face down on paper towels. Saturate with prewash stain remover or nonflammable dry cleaning fluid.
Baby formula, dairy products, egg	Use product containing enzymes to pretreat or soak stains.
Beverages (coffee, tea, soda, juice, alcoholic beverages)	Pretreat stain. Wash using COLD water and bleach safe for fabric.
Blood	Rinse with COLD water. Rub with bar soap. Or pretreat or soak with product containing enzymes. Wash using bleach safe for fabric.
Candle wax, crayon	Scrape off surface wax. Place stain face down between paper towels. Press with warm iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with prewash stain remover or nonflammable dry cleaning fluid. Hand wash to remove solvent. Wash using bleach safe for fabric.
Chocolate	Pretreat or soak in WARM water using product containing enzymes. Wash using bleach safe for fabric.
Collar or cuff soil, cosmetics	Pretreat with prewash stain remover or rub with bar soap.
Dye transfer on white fabric	Use packaged color remover. Wash using bleach safe for fabric.
Grass	Pretreat or soak in WARM water using product containing enzymes. Wash using bleach safe for fabric.
Grease, oil, tar (butter, fats, salad dressing, cooking oils, car grease, motor oils)	Scrape residue from fabric. Pretreat. Wash using hottest water safe for fabric. For heavy stains and tar, apply nonflammable dry cleaning fluid to back of stain. Replace towels under stain frequently. Rinse throughly. Wash using hottest water safe for fabric.
Ink	Some inks may be impossible to remove. Washing may set some inks. Use prewash stain remover, denatured alcohol or nonflammable dry cleaning fluid.
Mildew, scorch	Wash with chlorine bleach if safe for fabric. Or, soak in oxygen bleach and HOT water before washing. Badly mildewed fabrics may be permanently damaged.
Mud	Brush off dry mud. Pretreat or soak with product containing enzymes.
Mustard, tomato	Pretreat with prewash stain remover. Wash using bleach safe for fabric.
Nail polish	May be impossible to remove. Place stain face down on paper towels. Apply nail polish remover to back of stain. Repeat, replacing paper towels frequently. Do not use on acetate fabrics.
Paint, varnish	WATER BASED : Rinse fabric in cool water while stain is wet. Wash. Once paint is dry, it cannot be removed, OIL BASED AND VARNISH : Use solvent recommended on can label. Rinse throughly before washing.
Rust, brown or yellow discoloration	For spots, use rust remover safe for fabric. For discoloration of an entire load, use phosphate Detergent and nonchlorine bleach. **Do not use chlorine bleach because it may intensify discoloration.**
Shoe polish	LIQUID : Pretreat with a paste of granular Detergent and water. PASTE : Scrape residue from fabric. Pretreat with prewash stain remover or nonflammable dry cleaning fluid. Rub Detergent into dampened area, Wash using bleach safe for fabric.

Function of each Button

WATER TEMPERATURE BUTTON


- Use to select Water Temperature.
  Pressing the button allows you to select COLD ▶ WARM (HOT&COLD) ▶ HOT ▶ COLD respectively.

WATER LEVEL BUTTON

- Use to select the proper amount of water in relation to the weight and type of laundry.
- Automatically controlled,but can be selected manually by pressing the WATER LEVEL Botton.
- WATER LEVEL is automatically selected for FUZZY program. The following settings are indicated as the button is pushed
  7 ▶ 8 ▶ 9 ▶ 10 ▶ 1 ▶ 2 ▶3 ▶ 4 ▶ 5 ▶6 ▶ 7

AIR DRY

- This function is used to reduce the drying time of the laundry by allowing air to circulate within the bowl in order to reduce moisture levels.It does not dry the clothes completely.
- Air dry selections light up in sequence as follows.
  60 ▶ 90 ▶ 120 ▶ 60 as the button is pushed.
- Press the button for 3 seconds to select and press the Power botton to cancel the operation.
  (refer to page 24)

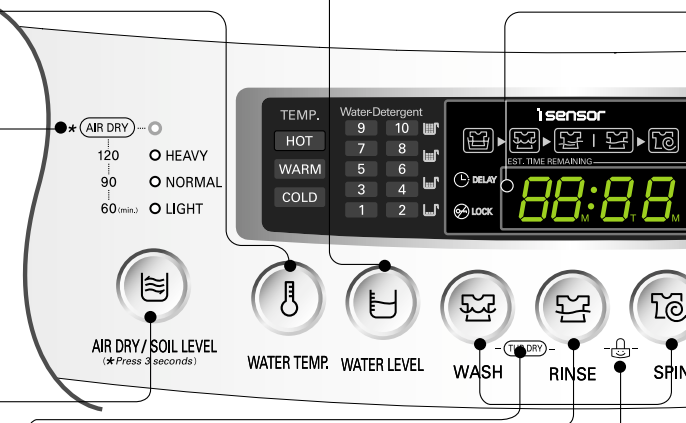

SOIL LEVEL BUTTON

- This button allows you to select the strength of the wash action.
- Power option selections light up in sequence as follows Normal ▶ Heavy ▶ Light ▶ Normal as the button is pushed.
  This can be selected for any program.
- Adjustment can be made while washing.

TUB DRY

- Use this when you want to dry the empty tub after a wash.
- This can be set/canceled by pressing the Wash button and Rinse button simultaneously.
  (refer to page 24)

WASH. RINSE. SPIN BUTTON

- Use when wash, rinse, spin time need to be adjusted.
- The time increases when the button is pressed .
- If adjustments are needed during the wash,press the [start/pause] button before making any changes.
- When the button is pressed during washing,the remaining time is displayed.

CHILD LOCK FUNCTION

- Use to lock or unlock the control buttons to prevent settings from being changed by a child.
  To lock,push the RINSE and SPIN buttons simultaneously and to unlock push them one more time during the washing process.
  (refer to page 27)

NOTE


* For optimizing the washing algorithm, the displaying time may be changed during washing-increased by 8minutes at maximum and decreased by 4 minutes at maximum.
* If the Detergent quantity is put more than the standard, for increasing the rinsing performance, it automatically adds rinsing, and the remaining time may be increased.
* The standard detected by the sensor changing the algorithm is set by the normal standard. It may not be same to the washing habit of a specific user. So, it does not matter that the user uses it according to her/his washing habit.
* The sensor for a Detergent quantity is designed to detect based on a synthetic Detergent powder. If you put a liquid one or a natural one or too much bleaching agent, the detecting ability of the sensor may be decreased.

TIME LEFT, DELAY START (RESERVATION), ALARM INDICATION

- **Time left** - During operation, the remaining time is indicated.
- **DELAY START INDICATION (RESERVATION)** - When DELAY START (RESERVATION) program is selected, it indicates the finishing time. (RES.=DELAY)
- **Alarm indication** - When an error occurs, an error message appears to indicate the abnormality.
  For example, dE indicates that the lid is open.

SMARTDIAGNOSIS™ FUNCTION DISPLAY

- It marks the place to put the phone to receive signal when a problem occurs.

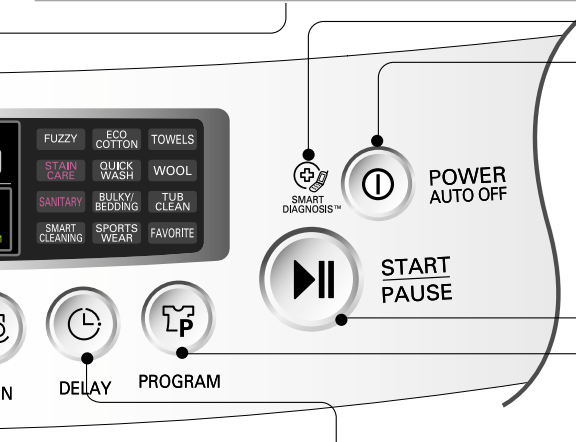

POWER (AUTO OFF) BUTTON

- Use to turn the power on or off.
- Push again and power goes on or off
- The power goes off automatically about 10 seconds after the wash is finished.

START/PAUSE BUTTON

- Use to start or pause the washing process.
- Repeats start and pause by pushing the button.

DELAY START (RESERVATION) BUTTON

- Use to set a delayed finishing time.
- The time increases when the button is pushed.
- The following settings are indicated as the button is pushed 3 ▶4 ▶5 ▶ ... 11 ▶ 12 ▶ 14 ▶ 16 ▶ 18 ▶3 HOUR.
- To cancel delay time, turn the power switch off. ***(refer to page 26)***

PROGRAM BUTTON

- Use for selecting wash program.
- This button allows you to select 12 different programs for different kinds of laundry and dirtiness.
- program selections light up in sequence as FUZZY ▶ STAIN CARE ▶ SANITARY ▶ SMART CLEANING ▶ ECO COTTON ▶ QUICK WASH ▶ BULKY/BEDDING ▶ SPORTS WEAR ▶ TOWELS ▶ WOOL ▶ TUB CLEAN ▶ FAVORITE Select the desired program by pressing the button.

* Because the detecting ability of the sensor may be decreased by using it for a long time, periodically use TUB CLEAN course to clean the tub. ***(refer to page 23)***
* Even if the water level is changed by the user in FUZZY Program, the sensor will still work. The sensor algorithm may differ according to models.
* The control panel may differ according to different models.

Washing Programs

Washing Programs	POWER AUTO OFF	Add the laundry	PROGRAM	Add the Detergent
FUZZY Used for normal loads, this mode automatically selects the most appropriate conditions and completes the sequence in one operation. The built-in sensor detects the size of the load and the ideal wash power and wash, rinse and spin times are set accordingly.	1	2		4 • Add the appropriate quantity of Detergent as indicated by the WATER LEVEL. Or follow the Detergent manufacturer's instructions
WOOL Use this program for washing delicate fabrics such as lingerie and woolens. (wash only "water washable" clothes) Before washing your woolens check the care label for the washing instructions. (wash only water washable clothes)	1	3	2 • Select the **WOOL** program on the Control panel.	5 • Use neutral Detergent appropriate for the laundry. • When washing woolens use a mild Detergent recommend- ed for washing wool.
QUICK WASH Use this mode when washing lightly soiled clothes for a short time. The highly recommended laundry amount is under 2.0kg.	1	3	2 • Select the **QUICK WASH** program on the Control panel.	5 • Add the appropriate quantity of Detergent as indicated by the WATER LEVEL. Or follow the Detergent manufacturer's instructions
BULKY/ BEDDING Use BULKY/BEDDING program when washing BULKY/BEDDING of different sizes	1	3 • Spread the jean evenly in the tub	2 • Select the **BULKY/BEDDING** program on the Control panel.	5
SMART CLEANING Use this program to increase rinsing performance. This would include underwear and baby clothes. If someone has sensitive skin or skin trouble,use this program.	1	3	2 • Select the **SMART CLEANING** program on the Control panel.	5

START PAUSE	Close the lid	Finish	Caution & Note
3	5	6	• If water is already in the tub, or putting wet laundry into the tub before starting will increase the WATER LEVEL. • With lightweight bulky loads, WATER LEVEL can be set low. • Changes to Water Temperature (HOT/COLD) and wash level are possible during operation. ***(refer to page 14)***
• The pulsator rotates for 8 seconds to detect the laundry load. • Then the WATER LEVEL and the amount of Detergent to be used will be shown and water will be supplied.	• Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed.	• When the wash program ends, the buzzer will ring for 10 seconds before the Power goes off automatically.	
4	6	7	• When setting the WATER LEVEL manually, do not set to Medium to prevent damage to laundry. • Washing with HOT water may damage the laundry (Water is set to cold automatically). Ensure that the load is under 2kg. • In order to avoid damage to laundry, the spin cycle may appear slow. This also avoids wrinkles and clothing may still contain some water. This is normal.
4	6	7	• When static pressure of water is more than 2kg/cm^2, the QUICK WASH course will be within 19min.
4	6	7	
4	6	7	

Washing Programs

Washing Programs	POWER AUTO OFF	Add the laundry	PROGRAM	Add the Detergent
STAIN CARE	1	3	2 • Select the **STAIN CARE** program on the Control panel.	6 • Add the appropriate quantity of Detergent As indicated by the WATER LEVEL.Or follow the Detergent Manufacturer's instructions.
SANITARY	1	3	2 • Select the **SANITARY** program on the Control panel.	5 • Add the appropriate quantity of Detergent As indicated by the WATER LEVEL. Or follow the Detergent Manufacturer's instructions.
SPORTS WEAR	1	3	2 • Select the **SPORTS WEAR** program on the Control panel.	5 • Add the appropriate quantity of Detergent As indicated by the WATER LEVEL. Or follow the Detergent Manufacturer's instructions.
TOWELS	1	3	2 • Select the **TOWELS** program on the Control panel.	5 • Add the appropriate quantity of Detergent As indicated by the WATER LEVEL. Or follow the Detergent Manufacturer's instructions.

START PAUSE	Close the lid	Finish	Caution & Note
			Hot and cold water simultaneously. If selected, the appropriate temperature washing Water at the inlet valve to meet the on / off and can be repeated. If only cold water supply, longer heating time will be longer washing time. During heating the washtub and the two slowly rotating in one direction, which is normal behavior. Heating due to humidity changes due to heating of the door and the water droplets may condense on the glass will occur normally. After washing, you will wash the machine. By heating the product appearance may be very hot be careful.
			Hot and cold water simultaneously. If selected, the appropriate temperature washing Water at the inlet valve to meet the on / off and can be repeated. If only cold water supply, longer heating time will be longer washing time. During heating the washtub and the two slowly rotating in one direction, which is normal behavior.Heating due to humidity changes due to heating of the door and the water droplets may condense on the glass will occur normally. After washing, you will wash the machine. By heating the product appearance may be very hot be careful.
			Use this program to wash SPORTS WEAR.
			Use this program to wash Towels, Shirts, Sheets,mixed loads.

SOAK Wash

Use this mode to wash normal clothes or thick and heavy clothes which are excessively dirty. SOAK mode can be used with FUZZY or BULKY/BEDDING or SMART CLEANING or ECO COTTON or FAVORITE program.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 Press the **PROGRAM** button to select the washing program.



3 Press the **WASH** button, to select **SOAK** program.



- Keep pressing the WASH button until the light turns on 'SOAK' and 'WASH' simultaneously as next image.
- SOAK program only works when socking time is 40, 50 or 60 minutes.



4 Add the Detergent.

- Add the appropriate quantity of Detergent as the Detergent manufacture instruction.

5 Add the laundry and press the **START/PAUSE** button.



- The **WATER LEVEL** will be shown and water will be supplied.

6 Close the lid.


- Water will be supplied for 2 minutes after the start of the wash to supplement the absorbed water by the laundry.

Finish

- When the wash program ends, the buzzer will ring for 10seconds before the Power goes off automatically.

NOTE

- Order of Soak-Wash timing



- Select soaking time 40minutes, 50minutes, or 60minutes (including washing time) by pressing the Wash button repeatedly.
- If necessary, select the times of Rinse and the time for Spinning by pressing the Rinse or Spin buttons till you reach the desired times.

FAVORITE Wash

Pressing the FAVORITE button allows you to store your FAVORITE wash conditions in the normal cycle memory and then recall it for use at a later time.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 Select the **FAVORITE** program.



3 Select your **FAVORITE** wash conditions.

- Press the **WATER TEMP.** button to select wash Water Temperature.
- Press the **WATER LEVEL** button to select **WATER LEVEL**.
- Press the **WASH** button, the **RINSE** button & the SPIN button to select wash time, rinse time & spin time respectively you want to store.

4 Press the **START/PAUSE** button to store & start your FAVORITE wash cycle. Power turns off automatically after wash.



NOTE

To recall your FAVORITE cycle.

1. Press POWER on.
2. Select the FAVORITE cycle by pressing the PROGRAM.
3. Press the START/PAUSE button. Then the wash cycle starts.

ECO COTTON Wash

Use this program to wash quietly in ECO COTTON especially during late night and dawn.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 Press the **PROGRAM** button to select **ECO COTTON** program.



3 Add the laundry into the washing tub.

4 Press the **START/PAUSE** button.



5 Add the Detergent and close the lid.

NOTE

- ECO COTTON program takes shorter spin time than FUZZY program.
- Provides optimized washing performance with less energy consumption.

TUB CLEAN

If scrud is allowed to build-up in the machine it can result in stains on your clothes or unpleasant smell in your washer.
Scrud is the way build-up that can occur within any washer when the fabric softener comes into contact with Detergent, and according to particular degree of dirtiness or quality of water to be use, in these case, use this program to clean inner tub and outer tub.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 Press the **PROGRAM** button to select the **TUB CLEAN** program.



3 Press the **START/PAUSE** button.

• Left time is displayed.



4 After 10 minutes of water supplement. Add the oxygenated bleach (about 300 m ℓ).

• Do not use Detergent box.
• Do not place any laundry inside tub.

5 Close the lid.

• When the lid is open the machine will not operate, and an alarm signal will remind you to close the lid.

NOTE

• Before using this program remove lint inside lint filter.
• When using this program, do not place any laundry inside tub.
• After using this program, remove dirt inside filter.
• After finishing this program, open the lid of wash to remove irritant odor.
• Do not pour bleach into the tub directly. It might cause damage the tub.
• Do not leave diluted oxygenated bleach inside tub for long time.
It rusts the tub must drain the remained diluted oxygenated water out.
• Use this program once for every month.
• Do not use this program repeatedly.

AIR DRY

AIR DRY for your laundary.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 When you press the Air dry button for 3 seconds, the Air dry course will be selected.



- When the Air dry is selected, other buttons will be inactive.
- If you want to cancel the Air dry function, press the Power button.

3 Press the **START/PAUSE** button.



4 When the Complete buzzer goes off, the power will automatically be turned off in 10 seconds.

NOTE


■ When you select Air dry foir more than 60 minutes
1) You can reduce the drying time by minimizing the moisture in the laundry.
2) Always keep the laundry amount to 2kg or less and make sure to spread it out evenly.
3)Select 60 minutes for cotton laundry and 120 minutes for synthetic fiber laundry for effective Moisture removal.

TUB DRY

1 Press the **POWER (AUTO OFF)** button.



2 When you press the Wash and Rinse button simultaneously, the Tub Dry course will be set or canceled.



- When you select the Tub Dry, do not put any laundry in the drum.
- When Tub Dry is selected, other buttons will be inactive.

3 Press the **START/PAUSE** button.



4 When the Complete buzzer goes off, the poser will automatically be turned off in 10 seconds.

NOTE

■ When you select Tub Dry
1) Use this function to minimize the growth of mold from the residual moisture within the laundry.
2) When you select the Tub Dry course, do not put any laundry or detergent in the drum.
3) It is good to use this about once a week.

Option Washing

When you only need the Wash, Wash/Rinse or Rinse cycles, these can be set manually.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2

Only Wash	Only Rinse	Only Spin
Press the **WASH** button to select the desired timing. 	Press the **RINSE** button to select the desired times of rinse. 	Press the **SPIN** button to select the desired times of spin. 
Only Wash,Rinse	**Only Rinse,Spin**	**Only Drain**
Press the **WASH** button to select the desired timing.  Press the **RINSE** button to select the desired times of rinse.  You can use this option for preventing wrinkles of laundry	Press the **RINSE** button to select the desired times of rinse.  Press the **SPIN** button to select the desired times of spin. 	When you want to only drain, wait until the water in the washing tub drains completely.

3 Press the **WATER LEVEL** button, to control the water level according to the amount of laundry. If you do not choose anything, it is set the middle water level automatically.



4 Add the laundry into the washing tub.

5 Press the **START/PAUSE** button.



6 Add the detergent and close the lid.

NOTE

- **When a Wash, Wash/Rinse or Rinse only option** is selected, after the wash is completed the water will not be drained off. If you wish to drain the water, press SPIN button and wait until the water in the tub has drained completely. Then press the **START/PAUSE** button.
- **If you do not specify the water level**, then Medium will be automatically selected.
- If only Rinse is selected, the process will start from Water Supply.

DELAY START (RESERVATION) Wash

DELAY START (RESERVATION) Wash is used to delay the finishing time of the operation.
The hours to be delayed can be set by the user accordingly.
The time on the display is the finishing time , not the start time.

1 Press the **POWER (AUTO OFF)** button to turn power on.



2 Press the **PROGRAM** button to select the washing program.




- Select the program for laundry on the Control panel. This program will not work in WOOL and TUB CLEAN Program.

3 Press the **DELAY START** (**RESERVATION**) button.



- The light will 'DELAY' turn on and 'TIME LEFT' 8:00 will be marked.
- Press the button repeatedly to set the desired finishing time. For example, To finish washing in 9 hours from now, by make the number 9:00 pressing the **DELAY START (RESERVATION)** button repeatedly.

(RES.=DELAY) 

4 Add the Detergent.

- Add the appropriate quantity of Detergent as the Detergent manufacture instruction.
- When the lid is open the machine will not operate, and an alarm signal will remind you to close the lid

5 Add the laundry and press the **START/PAUSE** button.



- When you press the START/PAUSE button the light will blink.

6 Close the lid.

- Water will be supplied for 2 minutes after the start of the wash to supplement the water the laundry has absorbed.

Finish

- The washing will be finished according to the delayed time.

NOTE

- Finishing time can be delayed from 3~18 hours. Delaying from3~12 hours can be done in 1 hour time intervals and from 12~18 hours in 2 hour time intervals.
- If the lid is open, the machine will not work, and an alarm signal will alarm to remind you to close the lid.
- To select washing time, rinsing times, spinning time, water level, hot/cold or wash power manually, press the DELAY START (RESERVATION) button and select the desired option. Then press the START/PAUSE button.
- When the laundry cannot be taken out immediately after the wash program ends, it is better to omit the spinning program . (The laundry will be wrinkled if left for a long time after spinning.)

Other Useful Functions

Child Lock Function

If you want to lock all the keys to prevent settings from being changed by a child, you can use the child lock option.

How to Lock

1 Press the **POWER (AUTO OFF)** button.



• Turn Power on.

2 Press the **START/PAUSE** button to start washing.



• After all washing conditions are set according to the manual.

3 Press both the **RINSE** button and the **SPIN** button simultaneously.



• The button lock is set, it will not be released automatically if the cycle is terminated.
• Thus, you should turn power on washing machine and then terminate the function by pushing "Rinse & Spin" button.

How to Unlock

If you want to unlock during wash, press both the **RINSE** and the **SPIN** button simultaneously again.

NOTE

• " CL " & the remaining time are alternatively shown on the display while they are locked.

Seeing Remaining Time


To see the remaining time for each process, press one of the **WASH, RINSE** and **SPIN** buttons.
The remaining time for each process will appear for about 1 second.

Placing and Leveling

Please ensure that transit restraint has been removed before operating your machine.

1 Place the machine on a flat and firm surface which allows proper clearance.

We suggest a minimum clearance of 2 cm to the right side and left sides of the machine for ease of installation.
At the rear, a minimum clearance of 10 cm is suggested.

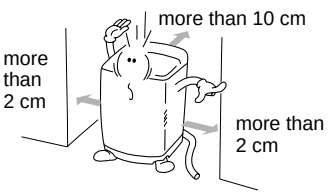


NOTE

If the washer is installed on a uneven,weak or tilted floor causing excessive vibration, spin failure or " UE " error can happen to it.
It must be placed on a firm and level floor to prevent spin failure.

2 Check that the machine is level


Open the lid and look from above to see if it is same as shown.


Top view of the machine

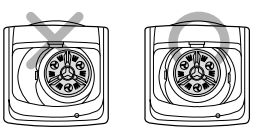

3 Leveling the machine

Lift the front of the washing machine and twist the Adjustable Leg until the surface bubble is placed in the center.

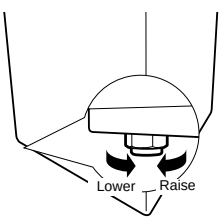



Level indicato

Caution

If the power is supplied from a cord extension set or generator, the cord extension set or electrical portable outlet device should be positioned so that it is not exposed to splashing or ingress of moisture.

Connecting Water Supply Hose


Before connecting the Water Supply Hose to the water tap, check the hose type and then choose the correct instruction here under.
Note that the Water Supply Hose supplied may vary from country to country, Make sure to connect the blue inlet hose to the COLD water tap, and the orange inlet hose to the HOT water tap.

Connecting Water Supply Hose to water tap

Normal Type (Normal tap without thread & screw type inlet hose.)


1 Untighten the screw

Untighten the screw of the connector so that the tap can be placed in the middle.

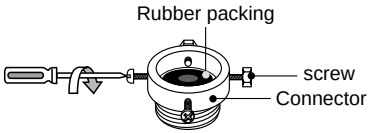


2 Fixing the connector to the tap

Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

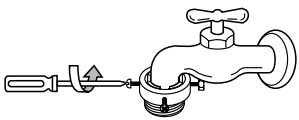


3 Attach the water supply hose securely to the connector

Push the water supply hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap.

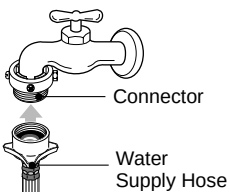


4 Fixing the connector to the water supply hose

Attach the water supply hose to the connector and then tighten it by screwing it to the right.

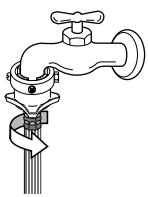

5 Check the connection of water supply hose and the connector

After connecting the hose, open the tap to check for any water leakage.
If the water leaks, close the tap and start again from step 1

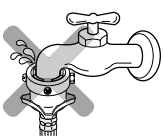

NOTE


The washing machine is to be connected to the water mains using new hose-sets and old hose-sets should not be reused.

Connecting Water Supply Hose

Normal Type (Normal tap without thread & one touch type inlet hose.)


1 Separate Middle connector from Water Supply Hose

Separate Middle connector from the Water Supply Hose by pulling the Pressing Rod and the Pressing Handle that is attached to the Water Supply Hose.

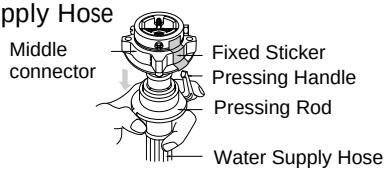

2 Loosen the fixed nuts to connect the connector to the tap


Untighten the screw of the connector so that the tap can be placed in the middle.



NOTE


In case tap is too large.

If the tap diameter is too large or is square, untighten the 4 screws and remove the guide plate. Then follow step1.

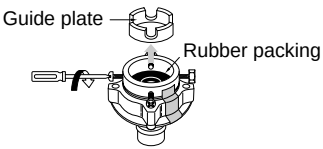


3 Fixing Connectors to the Tap

Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.




4 Fixing Upper Connector and Middle Connector

Remove the fixed sticker in between the Upper and Middle Connectors. Tighten the connectors by holding one connector and twist middle connector to the right.

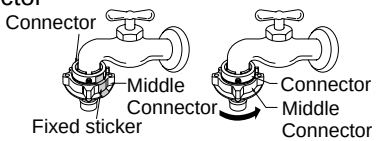

5 Connecting Middle Connector and Water Supply Hose

Press down the pressing rod of the Water Supply Hose which was separated from middle connector (refer to Step1) and then join it to the middle connector.

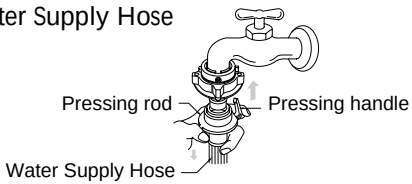

6 Check for water leakage


After connecting the hose, open the tap to check for any water leakage.
If the connection leaks, close the tap and start again from step 1.
If you skip step 1, water leakage may occur.



Screw Type


1 Attach the water supply hose to the tap.

Push the water supply hose up so that the rubber packing within the hose can adhere completely to the tap.

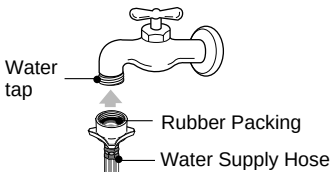


2 Connect the water supply hose to the tap.

Connect the water supply hose to the tap and then tighten it by screwing it to the right.




3 Check water leakage.

After connecting the hose, open the tap to check for any water leakage.

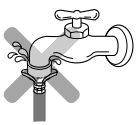


Connecting Water Supply Hose to the machine

- Connect the water supply hose to inlet valve of the washing machine, and then lock it by turning the hose connecting part.

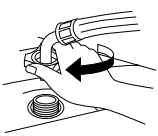

- Check to see if there is a rubber seal inside the connector.

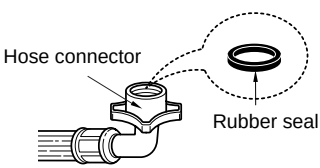


Connecting Drain Hose

Before connecting Drain Hose, check your Drain Hose model and choose the correct instructions.

Pump Model

Firmly insert the free end of the drain hose into the drain opening of your home. Make sure the soft rubber end is completely inside the drain opening.

- If the water valves and drain are built into the wall, fasten the drain hose to one of the water hoses with the cable tie (ribbed side on inside).
- If your drain is a standpipe, fasten the drain hose to the standpipe with the cable tie provided.

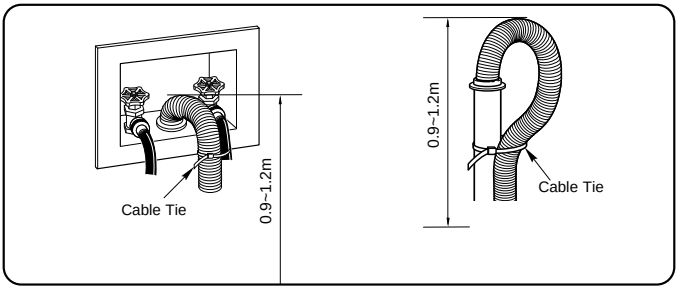


Note

The discharge height should be approximately 0.9~1.2m from the floor.

Non-Pump Model

1 Before connecting

Ensure that the hose clip is set as indicated here.




2 Connect the Elbow Hose

Push the elbow hose toward the body of the washing machine.



3 Place the Drain Hose

To change the direction of the hose, pull out the elbow hose and change the direction.Repeat Step 2.




Grounding Method

Earth wire should be connected.
If the earth wire is not connected, there is possible a danger of electric shock caused by the current leakage .

Grounding Method with Ground insert space Terminal

If the AC current outlet has a ground terminal, then separate grounding is not required. Note that AC power outlet configurations may differ from country to country

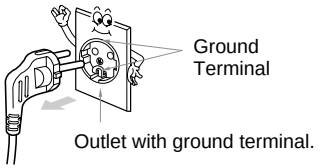

Caution


CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

Other Grounding Method


Burying Copper Plate

Connect the Ground Wire to a Ground Copper Plate and bury it more than 75cm in the ground.

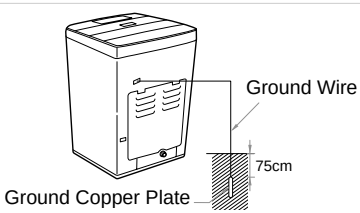


Using Ground Wire

Connect the ground Wire to the socket provided exclusively for Grounding.

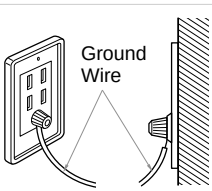

Using a Short Circuit Breaker

If grounding methods described above are not possible, a separate circuit breaker should be employed and installed by a qualified electrician

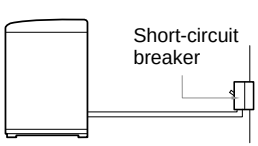

Caution

- To prevent a possible explosion, do not connect ground to a gas pipe
- Do not connect ground to telephone wires or lightning rods. This may be dangerous during electrical storms
- Connecting ground to plastic has no effect
- Ground wires should be connected when an extension cord is used.

Cleaning and Maintenance

Cold water washing

- If you always use COLD water, we recommend that a WARM or HOT wash be used at a regular intervals e.g. every 5th wash should be at least a WARM one.

When you have finished

- Turn off taps to prevent the chance of flooding should a hose burst.
- Always unplug the power cord after use.


When water supply into the tub is not clean or the filter is clogged with particles (such as sand), clean the filter in the inlet valve occasionally.
(The figure of power cord and water tap may vary according to the country)

To Clean the Filter in the Inlet Valve


1 Close the tap before turning off the power. HOT/COLD(WARM) and then press the [START/PAUSE] button to remove water from the machine completely.



2 Turn off the power before pulling out the cord.



3 After removing the water supply hose pull out the filter. Then use a brush to clean the filter.



4 Replace the filter after cleaning it.

NOTE

- Before cleaning the filter, the impurities in the water supply hose should be removed.

Cleaning and Maintenance

When there is a fear of freezing

- Close the water taps and remove the Water Supply Hose.
- Remove the water which remains in the water supply.
- Lower the drain hose and drain the water in the bowl and the drain hose by spinning.

If frozen

- Remove the water supply hose, and immerse it in HOT water at approx.. 40˚C.
- Pour approx.. 2 liters of HOT water at approx.. 40˚C, into the bowl and let it stand for 10 minutes.
- Connect the water supply hose to the water tap and confirm that the washing machine performs the supply and drainage of water.

Wash Inner-tub Leave the lid open after washing to allow moisture to evaporate. If you want to clean the inner-tub use a clean soft cloth dampened with liquid Detergent, then rinse. (Do not use harsh or gritty cleaners.)

Inlet Hoses Hoses connecting washer to faucet should be replaced every 5 years.

Exterior Immediately wipe off any spills. Wipe with damp cloth. Try not to hit surface with sharp objects.

Long Vacations Be sure water supply is shut off at faucets. Drain all water from hoses if weather will be below freezing.

Cleaning the Inside of your Washer

If you use fabric softener or do regular COLD water washing, it is very important that you occasionally clean the inside of your washer.

- Fill your washer with HOT water.
- Add about two cups of a powdered Detergent that contains phosphate.
- Let it operate for several minutes.
- Stop the washer, open the lid and leave it to soak overnight.
- After soaking, drain the washer and run it through a normal cycle.

Or use TUB CLEAN PROGRAM periodically.

We do not recommend that you wash clothes during this procedure.


Products that might damage your washing machine

- Concentrated bleaches and diaper sanitizer will cause damage to the paintwork and components of your washer.
- Hydrocarbon solvents i.e. petrol, paint thinners and lacquer thinners, etc. can dissolve plastic and blister paint (Be careful when washing garments stained with these solvents as they are flammable DO NOT put them in washer or dryer.)
- Some pretreatment sprays or liquids can damage your washer's control panel.
- Use of dyes in your washer may cause staining of the plastic components. The dye will not damage the machine but we suggest you thoroughly clean your washer afterwards. We do not recommend the use of dye strippers in your washer.
- Do not use your washer lid as a work surface.

Use of Handle Locker

You can use handle hold function if you like to use.
Handle hold function is operated by holder under the handle.

- Slide holder to left/right side until you listen to "Click" sound to holding handle.
- Do opposite to loose the Handle holding.

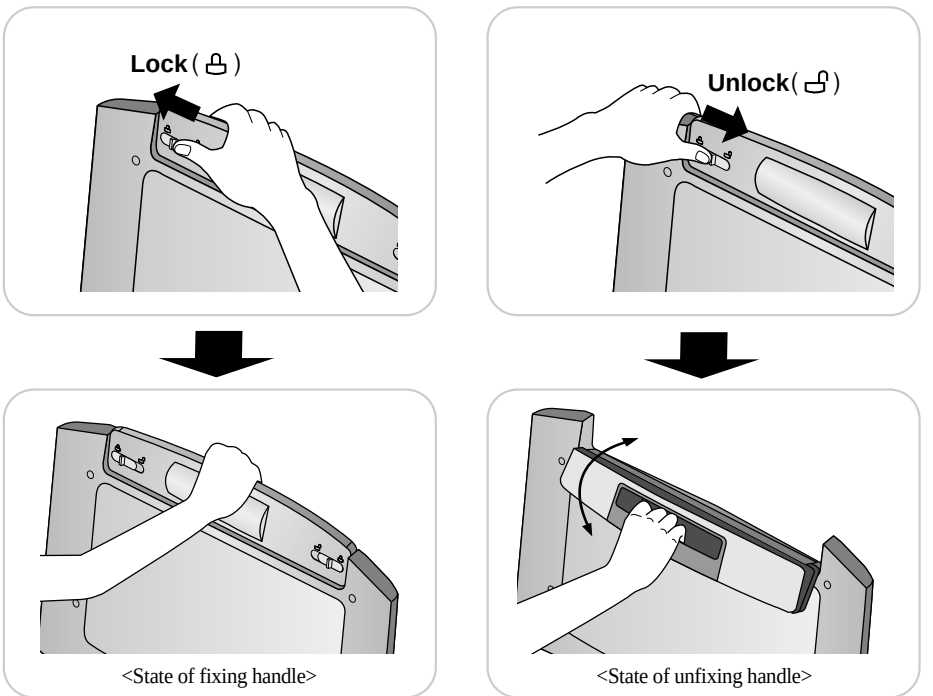


<State of fixing handle>

<State of unfixing handle>

NOTE

If you operate door like the below picture that, you can hurt so use after check locker was fixing or not.

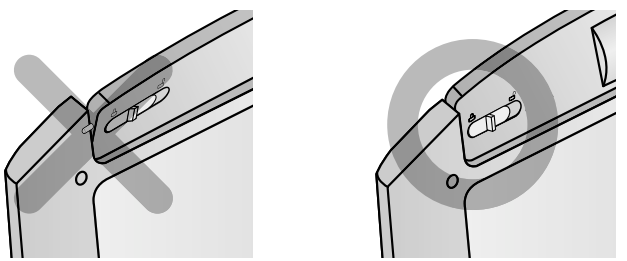

Common washing problems

Many washing problems involve poor soil & stain removal, residues of lint and scum, and fabric damage. For satisfactory washing results, follow these instructions.

WASH PROBLEM

Problems	Possible Causes	Solutions & Preventive Measures
Poor soil removal	• Not enough Detergent • Wash Water Temperature too low. • Overloading the washer • Incorrect wash cycle • Incorrect sorting • Do not pretreat stain	• Use correct amount of Detergent for load size, amount of soil and water Hardness. • Different Water Temperature may be required according to soil type. • Reduce load size. • Wash with BULKY/BEDDING or SOAK & BULKY/BEDDING wash cycle for heavy soiled laundry. • Separate heavily soiled items from lightly soiled ones. • Pretreat stain and heavy soil according to directions shown on page 9.
Blue Stains	• Undiluted fabric softener dispensed directly onto fabric	• Rub the stain with bar soap. Wash. • Do not overfill fabric softener dispenser and do not pour liquid fabric softener directly onto fabric. See page 12 for more instructions.
Black or gray marks on clothes	• A buildup caused by the interaction of fabric softener and Detergent can flake off and mark clothes • Not enough Detergent	• Keep the recommendations against Scrud(waxy buildup). (refer to scrud page12.) • Use correct amount of Detergent for load size, amount of soil and water Hardness.
Yellow or brown rust stains	• Iron or manganese in water supply, water pipes, or water heater	• To restore discolored load of whites, use rust remover safe for fabric. • Install nonprecipitating water softener or an iron filter in your water supply system for an ongoing problem. • Before washing, run water for a few minutes to clear lines.
Lint	• Incorrect sorting • Tissues left in pocket • Overloading the washer	• Wash lint givers eg towels, flannelette sheets, separately from lint collectors eg synthetic fabrics and remove tissues in pockets before wash. See page 9 for sorting and caring before loading. • Do not overload the washer
Residue or Detergent	• Overloading the washer • Undissolved Detergent • Use too much Detergent	• Do not overload the washer. • Some Detergents need to be pre-dissolved, check the Detergent instructions. Try pre-dissolving the Detergent. • Increase Water Temperature using HOT water safe for fabric. • Use proper amount of Detergent.
Holes, tears, or snags	• Incorrect use of chlorine bleach. • Unfastened zippers, hooks, buckles • Ribs, tears and broken threads • Overloading the washer • Degradation of fabric	• Never pour chlorine bleach directly on fabric. See page 11 for adding liquid bleach. • Fasten zippers, hooks, and buckles. • Remove objects in pockets. See page 9 for caring before loading. • Do not overload the washer.

Troubleshooting

Before calling for service, check the problem against the list bellows.

Symptom	Error Message	Check up
Water Supply Failure		• Is the water tap shut off? • Is the water supply cut off ? • Is the tap or water supply hose frozen ? • Is the water pressure low or is the filter of the inlet valve clogged with impurities? • Is the Hot hose connected to cold? • Is the Cold hose connected to hot?
Drainage Failure		• Is the drain hose positioned correctly? • Is the drain hose bent or placed too high? • Is the internal part of the hose or drain pump (only pump model) clogged with impurities? • Check if electric power has gone off.
Spin Failure		• Is the laundry evenly balanced? • Is the washing machine placed on a flat surface?
Door(Lid) Open		• Is the lid closed?
Abnormal water level sensing		• Please call your nearest LG Electronics service center for help.
Overflow failure		
Abnormal motor		
Clutching Error		

SmartDiagnosis™

1 Close the washer door, and press the **POWER (AUTO OFF)** button.




- If you manipulated other button or dial before pressing WATER TEMP. button, turn off the power and start again from the beginning.

2 Place the phone to **SMARTDIAGNOSIS™** display.




- Make sure that the speaking side of the phone to face SMARTDIAGNOSIS™ display

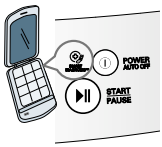


3 Long press **WATER TEMP**. button to activate smart diagnosis.



- Place the phone near the SMARTDIAGNOSIS™ display, and long press WATER TEMP. button until tak tatk tak sounds.

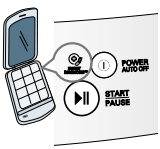

4 Hold the phone while data is transmitted.

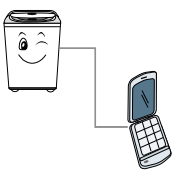

- Keep placing phone to SMARTDIAGNOSIS™ display while data for smart diagnosis is being transmitted. The time remaining for data transmission will be displayed on screen.
- Transmission sound may be irritating. For proper diagnosis, do not take off the phone. You can press power button to stop diagnosis function and the sound.

5 After the data transmission is completed, listen to the diagnosis result from the consultant.



- When data transmission is completed, the power is automatically turned off with "End" display after a few seconds.

NOTE

Smart Diagnosis is a troubleshooting feature designed to assist, not replace, the traditional method of troubleshooting through service calls. The effectiveness of this feature depends upon various factors, including, but not limited to, the reception of the cellular phone being used for transmission, any external noise that may be present during the transmission, and the acoustics of the room where the machine is located. Accordingly, LG does not guarantee that Smart Diagnosis would accurately troubleshoot any given issue.

Terms of Warranty


What Is Not Covered:

- Service trips to your home to teach you how to use the product.
- If the product is connected to any voltage other than that shown on the rating plate.
- If the fault is caused by accident, neglect, misuse or Act of God.
- If the fault is caused by factors other than normal domestic use or use in accordance with the owner's manual.
- Provide instruction on use of product or change the set-up of the product.
- If the fault is caused by pests for example, rats or cockroaches etc..
- Noise or vibration that is considered normal for example water drain sound, spin sound, or warming beeps.
- Correcting the installation for example, levelling the product, adjustment of drain.
- Normal maintenance which recommended by the owner's manual.
- Removal of foreign objects / substances from the machine, including the pump and inlet hose filter for example, grit, nails, bra wires, buttons etc.
- Replace fuses in or correct house wiring or correct house plumbing.
- Correction of unauthorized repairs.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- If this product is used for commercial purpose, it is not warranted.

(Example : Public places such as public bathroom, lodging house, training center, dormitory)

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.

Specification

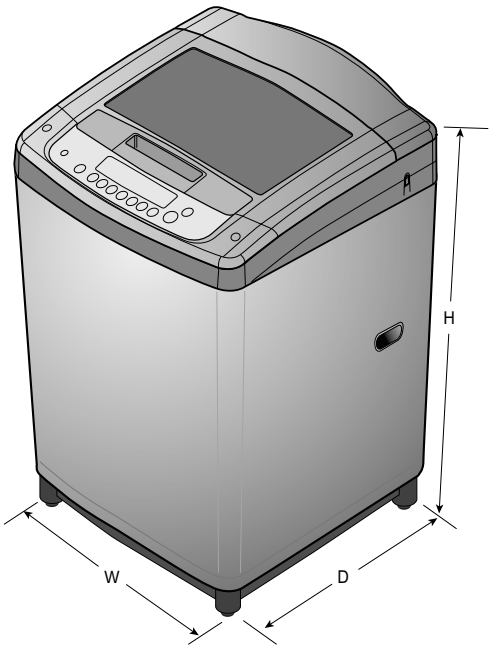

Model	WT-R2075TH
Wash capacity	20.0kg
Power supply	220V~, 50Hz
Rated input	1700W
Water tab pressure	30 - 800 kPa (0.3 - 8.0 kgf/cm²)
Weight	62kg
Size	686(W) × 721(D) × 1020(H)

※ In our continuing effort to improve the quality of our appliances, it may be necessary to make changes to the appliance without revising this manual.

Memo

LG
Life's Good

คู่มือการใช้งาน
เครื่องซักผ้า

กรุณาอ่านคู่มืออย่างละเอียดก่อนการใช้งาน
และเก็บคู่มือการใช้งานเล่มนี้ไว้เพื่อใช้อ้างอิงในอนาคต

WT-R2075TH

P/No.: MFL67221360

www.lg.com/th

⚠ คำเตือน ⚠

เพื่อความปลอดภัยของท่าน ควรอ่านและปฏิบัติตาม
คำแนะนำในคู่มือการใช้งานเล่มนี้ อย่างเคร่งครัดนะครับ



สถานที่ในการติดตั้ง



สถานที่ติดตั้งไม่ควรถูกแดดส่อง
โดยตรง หรือบริเวณที่ฝนสาดได้



ไม่ควรวางใกล้บริเวณที่เปียกชื้นหรือที่น้ำกระเด็น
ถึงเพราะอาจทำให้เกิดไฟดูดและเครื่องเสียหายได้



อย่าวางเครื่องใกล้ความร้อน
เพราะอาจส่งผลให้ชิ้นส่วนเสียหายได้

การต่อปลั๊กสายไฟกับเต้ารับ



อย่าเสียบปลั๊กไฟกับเต้ารับที่ชำรุด
เพราะอาจทำให้เกิดไฟฟ้าลัดวงจร



การเสียบปลั๊กไฟร่วมกันจำนวนมากกับ
เต้ารับชุดเดียว อาจทำให้เกิดเพลิงไหม้ได้



อย่าให้สายไฟถูกทับด้วยของหนัก
เพราะอาจทำให้เกิดไฟฟ้าลัดวงจร

การใช้งานและบำรุงรักษา

Page 21



ห้ามเทโซดาไฟ หรือ สารเคมีที่มีส่วนผสม
ของสารคิดไฟลงไปในเครื่องเด็ดขาด



ห้ามเทน้ำที่มีอุณหภูมิสูงกว่า
70 องศาเซลเซียส ลงในถังซัก



ไม่ควรถอดชิ้นส่วนเองเมื่อเกิดปัหา
โปรดติดต่อช่างผู้ชำนาญ หรือดูวิธี
การแก้ไขเบื้องต้นด้วยตนเอง

สัญลักษณ์

ข้อควรระวัง !
ต้องอ่านและทำความเข้าใจ
ก่อนใช้งาน

รายละเอียด
ดูรายละเอียดเพิ่มเติมได้
ตามหน้าที่แสดงไว้ด้านข้าง

สารบัญ

ภายในคู่มือเล่มนี้ ท่านจะพบวิธีการติดตั้ง การใช้ประโยชน์ของหน้าที่การทำงานต่างๆ ของปุ่มควบคุม และการดูแลเครื่องซักผ้าของท่าน ตลอดจนปัญหาที่อาจพบ และวิธีแก้ไข รวมถึงการรับประกัน หากท่านได้ปฏิบัติตามขั้นตอนคำแนะนำ ท่านจะสามารถใช้เครื่องซักผ้าได้อย่างมีประสิทธิภาพ Page

1. จุดเด่นของเครื่องซักผ้า LG ---------- 1-4

2. การติดตั้งเครื่องซักผ้า: ---------- 5-8
- 2.1 ชิ้นส่วนต่างๆ ของเครื่องซักผ้า ---------- 5
- 2.2 การเลือกสถานที่ และวิธีการติดตั้ง ---------- 6
- 2.3 การติดตั้งท่อจ่ายน้ำเข้า ---------- 7
- 2.4 การติดตั้งท่อระบายน้ำทิ้ง ---------- 8


3. คำแนะนำก่อนการซัก: ---------- 9-10
- 3.1 การเตรียมผ้าก่อนการซัก ---------- 9
- 3.2 ข้อมูลอ้างอิง ระดับน้ำที่เหมาะสม และปริมาณผ้าในการซัก ---------- 10

4. การใช้งานโปรแกรมต่าง ๆ: ---------- 11-19
- 4.1 การแนะนำปุ่มควบคุมการทำงานเบื้องต้น ---------- 11-12
- 4.2 ขั้นตอนการซักด้วยโปรแกรมการซักพิเศษ ---------- 13-14
- 4.3 ขั้นตอนการซักด้วยโปรแกรมการซักผ้าโดยเลือกใช้รูปแบบการซัก ---------- 15
- 4.4 วิธีการตั้งโปรแกรม Delay Start (Reservation) ---------- 16
- 4.5 วิธีการตั้งโปรแกรม Soak & Air Dry ---------- 17
- 4.6 วิธีการตั้งโปรแกรม Favorite ---------- 18
- 4.7 วิธีการตั้งโปรแกรม Tub Clean ---------- 19

5. เมื่อประสบปัญหา: ---------- 20-23
- 5.1 การติดต่อศูนย์บริการข้อมูล (Service Center) ---------- 20
- 5.2 ปัญหาการทำงานของเครื่อง และการแก้ไข ---------- 21

6. การดูแลและบำรุงรักษาเครื่อง ---------- 24-27
- 6.1 วิธีการฝขัตัวล็อคที่จับฝาเครื่อง ---------- 24
- 6.2 การต่อสายดิน ---------- 25
- 6.3 ระบบตรวจสอบปัญหาของเครื่องซักผ้าด้วยตัวเอง(SMART DIAGNOSIS) ---------- 26
- 6.4 การต่อสายดิน ---------- 27

LG Family Comic

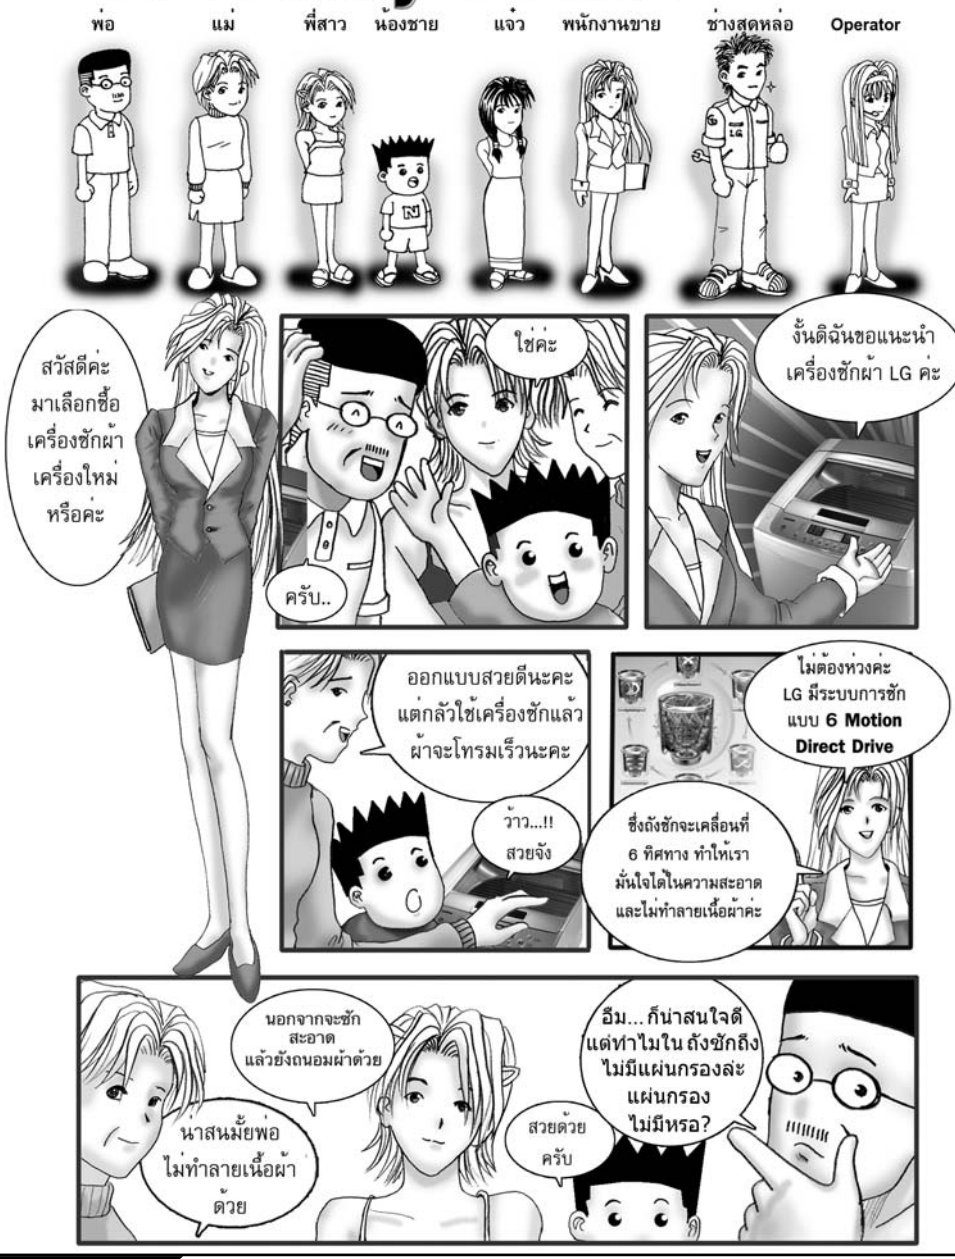


เครื่องซักผ้าของเราเป็นระบบ SMART DRUM ค่ะ แผ่นกรองจะอยู่ด้านล่างของถังซัก ช่วยกระดับงานซักให้มีประสิทธิภาพมากขึ้น


แล้วแผ่นกรองไม่ตัน หรือไม่ต้องทำความสะอาดหรอ?


ทางบริษัทฯ ได้พัฒนาและวิจัยมาแล้ววาแผนกรองไม่มีทางตัน และถูกสุขลักษณะ รวมทั้งยังสะดวกสบาย ไม่ต้องถอดออกมาทำความสะอาดอีกด้วย


การซักแบบ 6 Motion เป็นอย่างไร ฮะ?
ระบบการซักแบบ 6 Motion คือระบบที่ถังซักเคลื่อนที่ได้ 6 ทิศทางซึ่งจะไม่ทำให้ผ้าผันกันเหมือนเครื่องซักผ้าทั่วไปที่เคลื่อนที่ได้แค่แบบเดียวจึงทำให้ถนอมผ้าและเพิ่มประสิทธิภาพการซักด้วย


นอกจากนั้นยังมีระบบ I-Sensor ด้วยนะค่ะ


แล้ว I-Sensor นี่มันคืออะไรครับ


Page 3
I-Sensorเป็น Sensor ที่ใช้ตรวจสอบว่าปริมาณน้ำและผงซักฟอก กับผ้าที่ซัก มีความเหมาะสมกันหรือเปล่า โดยจะทำการเพิ่มหรือลดเวลาการซักหรือล้าง เพื่อให้เกิดประสิทธิภาพที่ดีที่สุด
Hardness
Detergent
Temperature
TurboDrum
1 sensor
LG







สีแดง	หมายถึง สภาวะที่ปริมาณผงซักฟอก,น้ำ, อุณหภูมิน้ำ ที่ทำการซักมีค่า**สูงกว่าเกณฑ์**ที่ตั้งไว้ (เครื่องจะทำการลดเวลาและแรงในการซักลง)
สีเขียว	หมายถึง สภาวะที่ปริมาณผงซักฟอก,น้ำ,อุณหภูมิน้ำ ที่ทำการซักมีค่า**เท่ากับเกณฑ์**ที่ตั้งไว้ (เครื่องจะไม่เปลี่ยนแปลงกระบวนการซัก)
สีส้ม	หมายถึง สภาวะที่ปริมาณผงซักฟอก,น้ำ,อุณหภูมิน้ำ ที่ทำการซักมีค่า**ต่ำกว่าเกณฑ์**ที่ตั้งไว้ (เครื่องจะทำการเพิ่มเวลาและแรงในการซักขึ้น)

I-Sensor จะทำงานเมื่อใช้โปรแกรม Fuzzy เท่านั้น










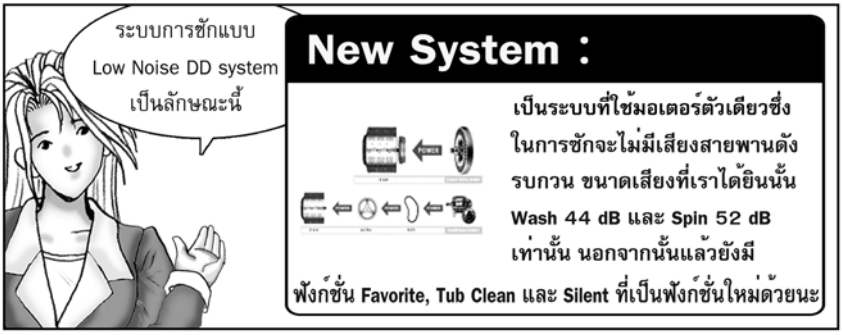


ระบบการซักแบบ
Low Noise DD system
เป็นลักษณะนี้
New System :
เป็นระบบที่ใช้มอเตอร์ตัวเดียวซึ่ง
ในการซักจะไม่มีเสียงสายพานดัง
รบกวน ขนาดเสียงที่เราได้ยินนั้น
Wash 44 dB และ Spin 52 dB
เท่านั้น นอกจากนั้นแล้วยังมี
ฟังก์ชั่น Favorite, Tub Clean และ Silent ที่เป็นฟังก์ชั่นใหม่ด้วยนะ



แล้วโปรแกรม
Favorite
เป็นอย่างไรค่ะ
(ฟังชื่อแล้วดูดีจัง)
คืออะไรครับ


คือโปรแกรมจดจำการซักค่ะ
เราสามารถตั้งรูปแบบการซัก
ที่เราต้องการ เช่น ต้องการใช้
ซักเสื้อผ้าที่พิเศษๆ หรือเสื้อผ้า
ที่ใส่บ่อยๆ โดยตั้งโปรแกรม
ไว้ครั้งแรก แล้วครั้งต่อไป
ก็สามารถกดปุ่มนี้ได้ทันที
Page 18



อืม...เอาไงดีเนี่ย...
ทุกคนว่าไงมั่ง...?


OK...คะแนนเสียงเป็น
เอกฉันท์งั้นตกลงซื้อค่ะ
OK
ok ok ok
ok ok ok


ขอบพระคุณค่ะ
ที่เลือกใช้ LG
หากมีข้อสงสัย
เพิ่มเติมสามารถ
โทรสอบถามได้
ที่ศูนย์บริการ
ข้อมูล LG ค่ะ
Page 20

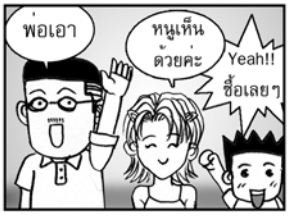

พ่อเอา
หนูเห็น
ด้วยค่ะ
Yeah!!
ซื้อเลยๆ

ชิ้นส่วนต่างๆ ของเครื่องซักผ้า

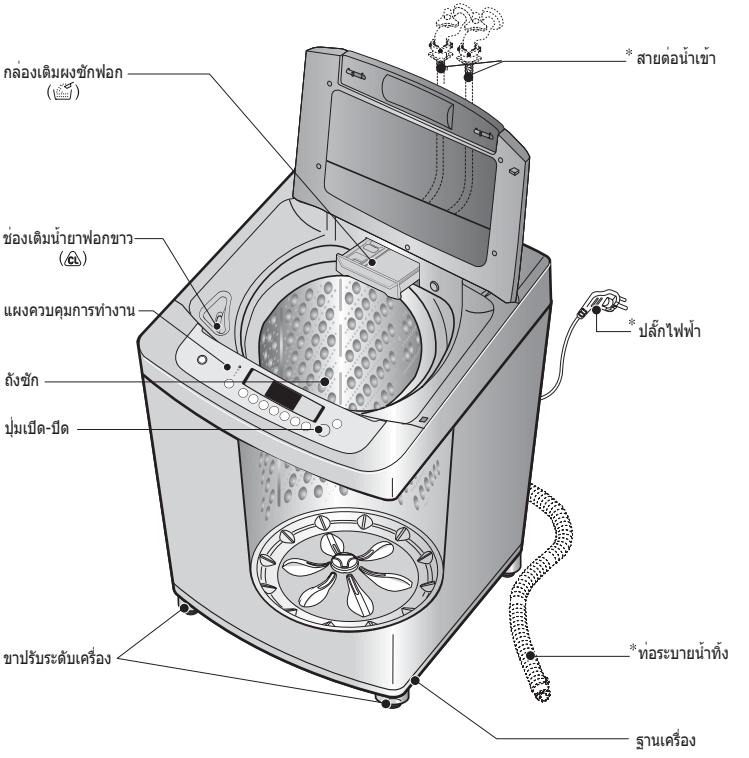


อุปกรณ์ต่างๆ

สายต่อน้ำเข้า




or




สำหรับน้ำร้อน และน้ำเย็น
อย่างละ 1 อัน

ท่อระบายน้ำทิ้ง



or

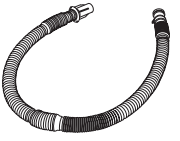


หมายเหตุ

" * ชิ้นส่วนต่างๆ สามารถเปลี่ยนแปลงได้ตามรุ่นของเครื่องซักผ้า



การติดตั้งเครื่องซักผ้า: การเลือกสถานที่ และวิธีการติดตั้ง

การเตรียมการติดตั้ง

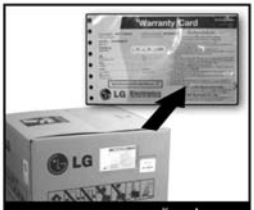

1.เก็บบัตรรับประกันข้างกล่อง



2. นำโฟมออก (ด้านบน & ด้านล่าง)


ระดับ & สถานที่ตั้ง



1.เลือกสถานที่ตั้งที่เหมาะสม



2. ควรมีที่ว่างด้านหลัง และด้านข้าง

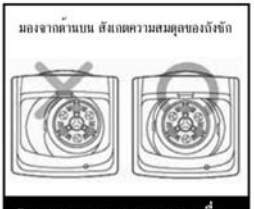

3. ตรวจสอบความสมดุลของเครื่อง

การติดตั้งเครื่องซักผ้า: การติดตั้งท่อจ่ายน้ำเข้า

1 ตรวจดูว่าเป็นก๊อกน้ำแบบใด

ก๊อกน้ำหัวกลมจะเหมาะสมที่สุด
ส่วนก๊อกน้ำที่คอโยกได้ หรือ
หัวสี่เหลี่ยมผืนผ้าไม่เหมาะสม



2 แยกตัวเชื่อมตรงกลางออกเพื่อนำไปต่อกับก๊อกน้ำ


แยกตัวเชื่อมออกโดยการกดและดึงตามภาพ



3 คลายสกรูตัวเชื่อมออก

คลายสกรูออกให้หลวมเพื่อให้มีช่องว่างตรงกลาง


★ หากก๊อกน้ำมีขนาดใหญ่เกินไป ให้คลายสกรู 4 ตัวออกให้หมดก่อน แล้วเอาแผ่นนำออก

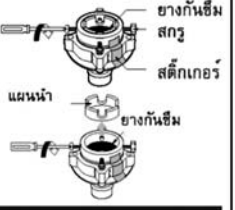

4 ขีดตัวเชื่อมกับก๊อกน้ำให้แน่น และขีดตัวเชื่อมบนและกลาง


ดันตัวเชื่อมให้สุดปลายก๊อกน้ำให้หน้ายางกันซึมสัมผัสกับก๊อกน้ำ จากนั้นขันสกรูทั้ง 4 เข้าไป

ขีดตัวเชื่อมบนและกลางเข้าด้วยกันโดยการหมุนตามเข็มนาฬิกา

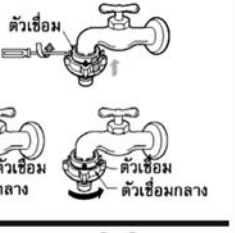

5 ต่อสายเข้ากับตัวเชื่อม

กดเดือยท่อจ่ายน้ำ ที่แยกตัวเชื่อมออกจากตัวเชื่อมตรงกลาง แล้วกดสายเข้า

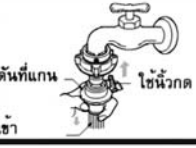

6 ตรวจการรั่วของน้ำ

เปิดก๊อกน้ำเพื่อตรวจการรั่วไหล
หากมีการรั่วไหลให้ เริ่มต้นใหม่จากขั้นตอนที่ 1 ใหม่

★ น้ำอาจมีการรั่วไหลหากท่านข้ามขั้นตอนที่ 1




การติดตั้งเครื่องซักผ้า: การติดตั้งท่อระบายน้ำทิ้ง

การติดตั้งท่อระบายน้ำทิ้ง



ข้อควรระวัง

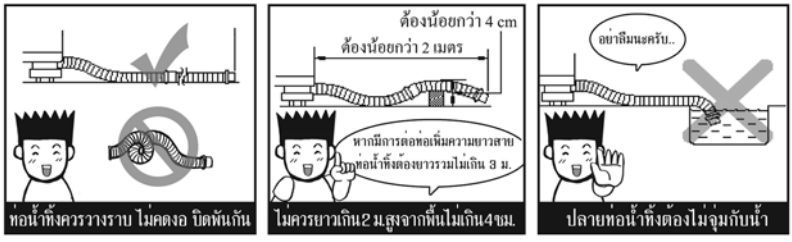








เอาหละ...มาลงมือซักกันเลยดีกว่า
ให้หนูช่วยนะคะ
1 ก่อนอื่น ทำการตรวจหาสิ่งตกค้าง และนำออกให้หมด เช่น เหรียญ กุญแจ ฯลฯ
นี่ไงเต็มไปหมดเลย
2 คัดแยกผ้าก่อนการซักเช่น ผ้าสีผ้าขาว ผ้าห่มผ้านวม ผ้าสกปรกมาก-น้อย
3 หากเป็นผ้าเก่า บอบบาง หรือ ชุดชั้นในผู้หญิง ควรแยกใส่ถุงซัก
4 ผ้าสกปรกมาก ควรทำการลบรอยเปื้อน ก่อนการซัก
น้ำยาซักผ้าขาว
5 อย่าใส่ผ้ามากเกินไป เพื่อประสิทธิภาพสูงสุดในการขยี้ผ้า
Page 10
เติมผงซักฟอกที่ช่องนี้
น้ำ - ผงซักฟอก
กล่องเติมผงซักฟอก
6 ใส่ผงซักฟอกให้เหมาะสมกับปริมาณผ้า เพราะหากใส่มากเกินไป อาจเกิดการตกค้างได้
7 สามารถดูรายละเอียดการใส่ผงซักฟอกได้ที่หน้า 10 ค่ะ
8 ใส่น้ำยาปรับผ้านุ่มตามช่องที่กำหนดแค่ 1-2 ช้อนก็เพียงพอให้ผ้าหอมสดชื่น
ช่องใส่น้ำยาปรับผ้านุ่ม สามารถถอดออกเพื่อเติมน้ำยาปรับผ้านุ่ม
แค่นี้ก็สามารถซักผ้าได้สะอาดแล้ว !
เพียงใส่ใจอ่านคู่มือซักนิด ก็สามารถใช้งานเครื่องซักผ้า LG ได้อย่างมีประสิทธิภาพแล้ว !!!
สมเป็นครอบครัว LG

ระดับน้ำที่เหมาะสม

การเลือกระดับน้ำ ควรเลือกสูงกว่าผ้าประมาณ 3 ~ 5 เซนติเมตร เพื่อประสิทธิภาพสูงสุดในการซัก

ปริมาณผ้า	ปริมาณน้ำ ระดับน้ำ	ปริมาณน้ำ ลิตร	ผงซักฟอก (ปริมาณน้ำ 40 ลิตรละลายซักฟอก 34 กรัม)	น้ำยาซักผ้า (ปริมาณน้ำ 40 ลิตรละน้ำยาซักผ้า 250 มล.)	น้ำยาปรับผ้านุ่ม ชนิดเข้มข้น (ปริมาณน้ำ 40 ลิตรละน้ำยาปรับผ้านุ่ม 25 มล.)	น้ำยาปรับผ้านุ่ม ชนิดธรรมดา (ปริมาณน้ำ 40 ลิตรละน้ำยาปรับผ้านุ่ม 75 มล.)
10.0 กก. ขึ้นไป	10	99 ลิตร	80 กรัม	61 มล.	20 มล.	60 มล.
8.0-9.0 กก.	9	92 ลิตร	72 กรัม	55 มล.	18 มล.	54 มล.
7.0-8.0 กก.	8	87 ลิตร				
6.0-7.0 กก.	7	81 ลิตร	68 กรัม	52 มล.	17 มล.	51 มล.
5.0-6.0 กก.	6	73 ลิตร	61 กรัม	47 มล.	15 มล.	46 มล.
4.0-5.0 กก.	5	65 ลิตร				
3.0-4.0 กก.	4	58 ลิตร	55 กรัม	42 มล.	14 มล.	42 มล.
2.0-3.0 กก.	3	51 ลิตร	44 กรัม	34 มล.	11 มล.	33 มล.
1.0-2.0 กก.	2	45 ลิตร				
1.0 กก. หรือน้อยกว่า	1	40 ลิตร	38 กรัม	29 มล.	10 มล.	29 มล.

หมายเหตุ : ปริมาณผงซักฟอก 1 ช้อน = 40 กรัม

การใส่ผงซักฟอกชนิดน้ำ

- เจือจางผงซักฟอกชนิดน้ำด้วยน้ำสะอาด และเทลงในถังซัก, และเริ่มทำการซัก
- ไม่ควรใช้โปรแกรมตั้งเวลาซักล่วงหน้า ถ้าคุณใช้ผงซักฟอกชนิดน้ำ

ขอควรระวัง

การใช้ผงซักฟอกชนิดน้ำโดยปราศจากการเจือจาง หรือการใส่ผงซักฟอกชนิดน้ำที่เจือจางแล้วลงในถังซักเป็นระยะเวลานาน อาจจะทำให้เกิดความเสียหายกับเสื้อผ้า เช่น สีซีดจาง หรือสึดกได้

ปริมาณผ้าในการซัก

★ ใส่ผ้าจนเกือบเต็มถังซัก หรือน้ำหนักผ้าในการซักเท่ากับความจุที่ระบุไว้ที่ตัวเครื่อง หากใส่ผ้ามากจนเกินไป จะทำให้ประสิทธิภาพในการทำความสะอาดลดลง

★ ผ้าบางชนิดมีขนาดใหญ่แต่น้ำหนักเบา จึงอาจทำให้บางครั้งถังซักเต็มก่อนจะได้น้ำหนักผ้าตามความจุสูงสุด เช่น ผ้าปูที่นอน ผ้าห่ม เสื้อผ้าร่ม

⚠ ข้อควรระวัง

- ห้ามซัก หรือปั่นหนัง เสื้อผ้าหรืออุปกรณ์ที่สามารถกันได้น้ำได้ทุกชนิด ถึงแม้ว่าเสื้อผ้า หรืออุปกรณ์นั้นจะมีสัญลักษณ์ว่าสามารถใช้กับเครื่องซักผ้าได้ก็ตาม ถ้าทำเช่นนั้นอาจจะทำให้เสื้อผ้า หรืออุปกรณ์นั้นเสียหาย และอาจจะทำให้การทำงานของเครื่องซักผ้าผิดปกติ เช่นเกิดการสั่นในขณะซักได้
- ตัวอย่างอุปกรณ์ที่สามารถกันน้ำได้ เช่น ที่นอน, ผ้าปูที่นอนบางชนิด, ชุดกันฝน, ชุดเล่นสกีและอุปกรณ์ หรือเสื้อผ้าอื่นๆ ที่มีคุณสมบัติดังกล่าว

ข้อมูลอ้างอิงสำหรับน้ำหนักผ้าที่ซัก

ผ้าเช็ดหน้า (ผ้าฝ้าย ประมาณ 16 กรัม)	ถุงเท้า (ผ้าทอยสม ประมาณ 50 กรัม)	กางเกงใน (ผ้าฝ้าย ประมาณ 50 กรัม)	ผ้าขนหนู(ผืนเล็ก) (ผ้าฝ้าย ประมาณ 70 กรัม)
กระโปรงชั้นใน (ผ้าทอยสม ประมาณ 150 กรัม)	เสื้อยืดแขนยาว (ผ้าฝ้าย ประมาณ 150 กรัม)	เสื้อเชิ้ต (ผ้าทอยสม ประมาณ 200 กรัม)	เสื้อสตรี (ผ้าทอยสม ประมาณ 200 กรัม)
ผ้าขนหนูอาบน้ำ (ผ้าฝ้าย ประมาณ 300 กรัม)	ชุดนอน (ผ้าฝ้าย ประมาณ 500 กรัม)	กางเกงยีนส์ (ผ้าฝ้าย ประมาณ 600 กรัม)	

ปุ่มควบคุมต่างๆ

ปุ่มระดับการซัก


- ใช้เพื่อปรับความแรงของน้ำในขณะนั้น
- กำลังในการซักที่เลือกจะติดสว่างตามลำดับดังนี้ NORMAL ► HEAVY ► LIGHT ► NORMAL สิ่งนี้สามารถเลือกได้ในทุกโปรแกรม แต่เมื่อเลือกโปรแกรมซักยีนส์ ปุ่มนี้จะเริ่มจาก HEAVY
- การปรับตั้งสามารถทำได้ในระหว่างทำการซักอยู่

ปุ่มอุณหภูมิน้ำ

- ใช้สำหรับเลือกประเภทของน้ำว่าต้องการ น้ำร้อน ►น้ำอุ่น ► น้ำเย็น

ปุ่มระดับน้ำ

- ใช้สำหรับประระดับน้ำตามน้ำหนัก หรือประเภทของผ้าที่ซักตามต้องการ
- ระดับน้ำจะถูกกำหนดได้โดยอัตโนมัติ ตามน้ำหนักของผ้าแต่สามารถที่จะเลือกระดับน้ำที่ต้องการได้
- ระดับน้ำจะถูกประบอัตโนมัติเมื่อท่านใช้โปรแกรม FUZZY

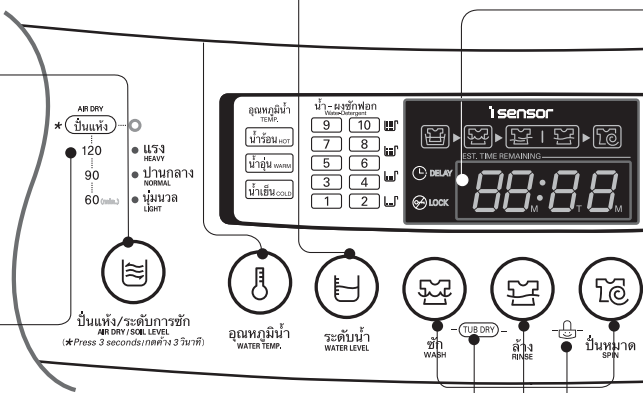

ปั่นแห้ง

- ใช้ปรับเลือกช่วงเวลาในการปั่นแห้งในแต่ละครั้งที่กดปุ่มจะแสดงผล ดังนี้ 60 ▸ 90 ▸ 120 ▸ 60 กดปุ่ม ปั่นแห้งค้าง 3 วินาที เพื่อเลือกโปรแกรมปั่นแห้ง กดปุ่ม เปิด/ปิด เพื่อยกเลิก

ปั่นแห้งถังซัก

- ใช้เมื่อต้องการปั่นแห้งถังซัก สามารถเลือกใช้งานได้โดยกดปุ่ม ซัก และล้าง พร้อมกัน

ปุ่มซัก, ล้าง, ปั่นแห้ง

- ใช้ปุ่มนี้เมื่อต้องการปรับเวลาในการซัก, ล้าง และปั่นแห้ง
- เวลาจะเพิ่มขึ้นเมื่อกดปุ่ม
- ถ้าต้องการปรับขณะที่เครื่องทำงานอยู่ ให้กดปุ่ม เริ่ม/หยุด ก่อน และค่อยกดปุ่ม
- เมื่อกดปุ่ม เวลาที่เหลือจะแสดงขึ้นที่หน้าจอ

ปุ่มล็อคป้องกันเด็ก

- ใช้ล็อค หรือปลดล็อคปุ่มควบคุม เพื่อป้องกันการเปลี่ยนค่าที่ตั้งไว้จากการกดเล่นของเด็ก โดยให้กดปุ่ม ล้าง และปั่นแห้ง พร้อมกัน

หมายเหตุ

* แผงควบคุมอาจจะแตกต่างกันตามรุ่นของตัวสินค้า

เวลาซักทีเหลืออยู่, เวลาซักล่วงหน้า (RESERVATION), สัญญาณเตือน


- เวลาซักทีเหลือ – ระหว่างเครื่องทำงาน จะแสดงเวลาที่เหลือ
- เวลาซักล่วงหน้า (RESERVATION) จะแสดงเวลาที่เครื่องทำงานเสร็จสิ้น
- สัญญาณเตือน – เมื่อมีปัญหาเกิดขึ้นขณะซัก จะแสดงข้อความบนหน้าจอ พร้อมทั้งมีเสียงสัญญาณเตือน เช่น dE

ปุ่ม SMARTDIAGNOSIS

- สำหรับตรวจสอบปัญหาของเครื่องซักผ้า โดยให้วางโทรศัพท์ให้ใกล้กับสัญลักษณ์

ปุ่ม เปิด/ปิด เครื่อง

- ใช้สำหรับเปิด และปิดเครื่องซักผ้า หลังจากเครื่องซักผ้าซักเสร็จประมาณ10 วินาที จะปิดเครื่องอัตโนมัติ

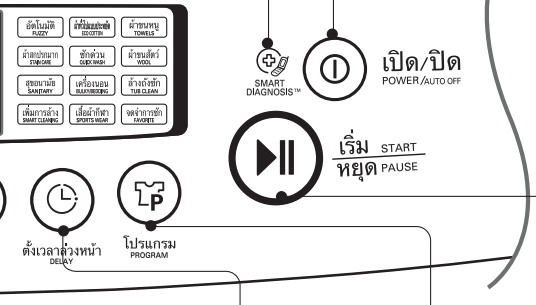

ปุ่มตั้งเวลาซักล่วงหน้า


- ใช้ปรับตั้งเวลาซักล่วงหน้า โดยเวลาที่แสดงบนหน้าจอจะเป็นเวลาที่ซักเสร็จ ตั้งเวลาล่วงหน้าได้สูงสุด 18 ชั่วโมง สามารถยกเลิกได้โดยกดปุ่มเปิด/ปิด เครื่อง

ปุ่มโปรแกรม

- ใช้เลือกโปรแกรมซักต่างๆ ที่ต้องการ ท่านสามารถลือกโปรแกรมซักทั้ง 12 โปรแกรม ได้จากปุ่มนี

ปุ่มเริ่ม/หยุด

- ใช้สำหรับสั่งให้เครื่องทำงาน หรือหยุดทำงาน

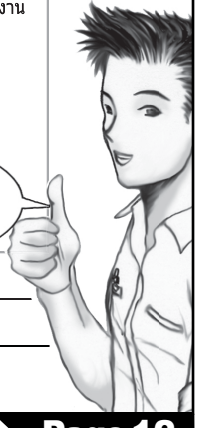


ขั้นตอนการซักด้วยโปรแกรมการซักพิเศษ



1.นำผ้าใส่ถัง




2.กดปุ่ม AUTO OFF

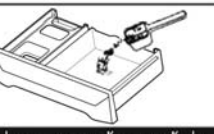

3.ใส่ผงซักฟอก & น้ำยาปรับผ้านุ่ม

FUZZY	ใช้กับเสื้อผ้าชุดทำงานทั่วไป	โปรแกรม PROGRAM	อัตโนมัติ FUZZY — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน FUZZY
WOOL	ใช้กับผ้าขนสัตว์ ชุดชั้นใน	โปรแกรม PROGRAM	ผ้าขนสัตว์ WOOL — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน WOOL
QUICK WASH	ใช้เมื่อต้องการประหยัดเวลาในการซัก	โปรแกรม PROGRAM	ซักด่วน QUICK WASH — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน QUICK WASH
ECO COTTON	โปรแกรมซักนี้จะกำหนดรูปแบบการซัก เพื่อให้เสียงเงียบที่สุด เหมาะสำหรับการซักผ้าในเวลากลางคืน และยังช่วยประหยัดพลังงานด้วย	โปรแกรม PROGRAM	ผ้าฝ้ายแบบประหยัด ECO COTTON — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน ECO COTTON
FAVORITE	ใช้เมื่อต้องการตั้งรูปแบบการซัก โปรแกรมนี้ จะจดจำรูปแบบการซักที่เราตั้งไว้	โปรแกรม PROGRAM	จดจำการซัก FAVORITE — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน FAVORITE
TUB CLEAN	ใช้เมื่อต้องการทำความสะอาดถังซัก	โปรแกรม PROGRAM	ล้างถังซัก TUB CLEAN — กดปุ่มโปรแกรมให้ไฟติดที่ฟังก์ชัน TUB CLEAN

4.กดปุ่ม PROGRAM เพื่อเลือกโปรแกรมที่เหมาะสมกับผ้า

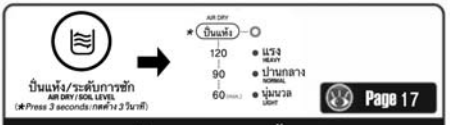

5.เลือก AIR DRY หากต้องการ



6.ปิดฝาแล้วกด START / PAUSE


ขั้นตอนการซักด้วยโปรแกรมการซักพิเศษ



1.นำผ้าใส่ถัง




2.กดปุ่ม AUTO OFF

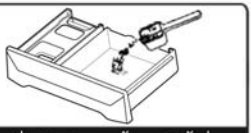

3.ใส่ผงซักฟอก & น้ำยาปรับผ้านุ่ม

BULKY/BEDDING	ใช้เมื่อต้องการซักเครื่องนอนต่างๆ	โปรแกรม PROGRAM	เครื่องนอน BULKY/BEDDING	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน BULKY/BEDDING
SMART CLEANING	ใช้เพื่อเพิ่มประสิทธิภาพในการล้าง สำหรับชุดทำงานทั่วไป	โปรแกรม PROGRAM	เพิ่มการล้าง SMART CLEANING	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน SMART CLEANING
STAIN CARE	ใช้เมื่อต้องการซักเสื้อผ้าที่สกปกมาก	โปรแกรม PROGRAM	ผ้าสกปรกมาก STAIN CARE	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน STAIN CARE
SANITARY	ใช้เมื่อต้องการซักเสื้อผ้าที่ต้องการความสะอาดมากๆ เช่น ชุดชั้นใน	โปรแกรม PROGRAM	สุขอนามัย SANITARY	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน SANITARY
SPORTS WEAR	ใช้สำหรับเสื้อผ้ากีฬา	โปรแกรม PROGRAM	เสื้อผ้ากีฬา SPORTS WEAR	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน SPORTS WEAR
TOWELS	ใช้เมื่อต้องการซักผ้าจำพวกผ้าขนหนู	โปรแกรม PROGRAM	ผ้าขนหนู TOWELS	กดปุ่มโปรแกรมให้ไฟติดที่ ฟังก์ชัน TOWELS

4.กดปุ่ม PROGRAM เพื่อเลือกโปรแกรมที่เหมาะสมกับผ้า

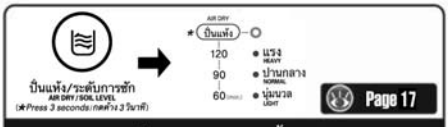

5.เลือก AIR DRY หากต้องการ



6.ปิดฝาแล้วกด START / PAUSE

ขั้นตอนการใช้โปรแกรมซักผ้าโดยเลือกใช้รูปแบบการซัก

1 นำผ้าใส่ในถังซัก



1.นำผ้าใส่ถังซัก

2 กดปุ่ม AUTO OFF เพื่อเปิดเครื่อง



2.กดปุ่ม AUTO OFF เพื่อเปิดเครื่อง

3 กดปุ่ม PROGRAM เลือกรูปแบบการซัก Page 16



อัตโนมัติ FUZZY	ผ้าฝ้ายประหยัด ECO COTTON	ผ้าขนหนู TOWELS
ผ้าสกปรกมาก STAIN CARE	ซักด่วน QUICK WASH	ผ้าขนสัตว์ WOOL
สุขอนามัย SANITARY	เครื่องนอน BULKY/BEDDING	ล้างถังซัก TUB CLEAN
เพิ่มการล้าง SMART CLEANING	เสื้อผ้ากีฬา SPORTS WEAR	จดจำการซัก FAVORITE

3.กดปุ่ม PROGRAM เลือกรูปแบบการซัก

4 เลือก WASH, RINSE, SPIN รูปแบบการซัก และปรับตามต้องการ




เมื่อเปิดเครื่องค่ากำหนดเริ่มต้นของตัวแสดงผลจะแสดง “A”

เมื่อต้องการซักเพียงอย่างเดียว	เมื่อต้องการล้างเพียงอย่างเดียว	เมื่อต้องการปั่นหมาดเพียงอย่างเดียว
กดปุ่ม WASH เพื่อเลือกเวลาการซัก	กดปุ่ม RINSE เพื่อเลือกเวลาการล้าง	กดปุ่ม SPIN เพื่อเลือกเวลาการปั่นหมาด
เมื่อต้องการซักและล้าง	**เมื่อต้องการล้างและปั่นหมาด**	**เมื่อต้องการระบายน้ำอย่างเดียว**
กดปุ่ม WASH เพื่อเลือกเวลาการซัก กดปุ่ม RINSE เพื่อเลือกเวลาการล้าง	กดปุ่ม RINSE เพื่อเลือกเวลาการล้าง กดปุ่ม SPIN เพื่อเลือกเวลาการปั่นหมาด	เมื่อต้องการระบายน้ำอย่างเดียวให้รอจนน้ำในถังซักระบายออกหมด *เมื่อเลือกการซัก ซัก/ล้าง หรือล้างอย่างเดียว เครื่องจะไม่ระบายน้ำเมื่อเสร็จขั้นตอน ให้กดปุ่ม SPIN เพื่อระบายน้ำ

4.กดปุ่มเลือกรูปแบบการซัก และปรับตามต้องการ

5 กดปุ่ม WATER LEVEL เลือกระดับน้ำที่ต้องการ Page 10

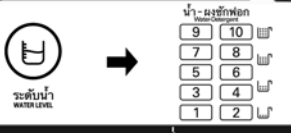

กดปุ่มเลือกระดับน้ำเพื่อควบคุมระดับน้ำให้เหมาะสมกับปริมาณผ้า
หากไม่ได้เลือก เครื่องจะกำหนดระดับน้ำให้เป็นระดับกลาง
โดยอัตโนมัติ


5.กดปุ่ม WATER LEVEL เลือกระดับน้ำ

6 ใส่ผงซักฟอก Page 10



6.ใส่ผงซักฟอก และน้ำยาปรับผ้านุ่ม

7 ปิดฝาแล้วกดปุ่ม START/PAUSE



7.ปิดฝา กดปุ่ม START/PAUSE


แม่จ๊ะ...!!
พรุ่งนี้วันเสาร์
เราไปงานกีฬาสี
ของลูกๆกันนะ
ลูกของแม่ได้เป็น Cheer Leader
เชียวนะคะ
ผมแข่งบอลเป็น
ศูนย์หน้าด้วย
อืม..แต่แม่ยังไม่ได้ซักผ้าเลย
คงจะไปไม่ได้หรอก
ทำไงดี...
แล้วมันก็ไม่อยู่..
ในเมื่อพ่อแม่ไม่สนเราสองคน
หนีออกจากบ้านกันเถอะ
ครับผี่...
สอนน้องดีๆ
หน่อยสิจ๊ะ
!!!
แม่คะ/ครับ จะไม่ไปจริงๆหรอ
พ่อนึกออกแล้วล่ะ..!!
เครื่องซักผ้า LG ของเรา
มีโปรแกรม Delay Start
อยู่นี่นา
จริงด้วย
จริงเหรอ!!
แล้วต้องทำยังไง
ล่ะจ๊ะพ่อ...?
ข้อดีของ Program Delay Start
1. ตั้งเวลาที่ต้องการให้ซักเสร็จล่วงหน้า
ได้ 3-18 ชม.
2. ผ้าไม่มีกลิ่นอับ เมื่อซักเสร็จ
3. หมดปัญหาผ้ายับ กลับมาตากได้เลย
วิธีการตั้งโปรแกรม Delay Start (Reservation)
1 กดปุ่ม AUTO OFF เพื่อเปิดเครื่อง
เปิด/ปิด
POWER/AUTO OFF
2 กดปุ่ม PROGRAM เพื่อเลือกโปรแกรม
การซัก
Page 13-14
โปรแกรม
PROGRAM
3 กดปุ่ม DELAY เพื่อตั้งเวลาซักเสร็จ
3:00
4 กดปุ่ม WASH,RINSE,SPIN เพื่อเลือกรูป
แบบการซัก
Page 15
ซัก
WASH
(SPIN)
ปั่นหมาด
SPIN
5 ใส่ผงซักฟอก ใส่ผ้าและน้ำยาปรับผ้านุ่ม
Page 10
6 ปิดฝาเครื่อง แล้วกดปุ่ม START/PAUSE
เริ่ม START
หยุด PAUSE
เท่านี้...ก็เรียบร้อย
แล้วค่ะ กลับมาถึงบ้าน
ผ้าก็ซักเสร็จพอดี
ขอบคุณ
LG ครับ



วิธีการตั้งโปรแกรม SOAK

❶ กดปุ่ม POWER (AUTO OFF) เพื่อเปิดเครื่อง

เปิด/ปิด POWER/Auto Off

❷ กดปุ่ม PROGRAM เพื่อเลือกโปรแกรมการซัก

โปรแกรม PROGRAM

❸ กดปุ่ม WASH เพื่อเลือกโปรแกรมการแช่ผ้า

กดปุ่ม WASH จนกว่าไฟที่จอแสดงผลจะติดดังรูป

โปรแกรม PROGRAM



❹ ใส่ผ้า ผงซักฟอก และน้ำยาปรับผ้านุ่ม

❺ ปิดฝาเครื่อง และกดปุ่ม START/PAUSE


เริ่ม START หยุด PAUSE

วิธีการตั้งโปรแกรม AIR DRY

❶ กดปุ่ม POWER (AUTO OFF) เพื่อเปิดเครื่อง

เปิด/ปิด POWER/Auto Off

❷ กดปุ่ม AIR DRY 3 วินาที เพื่อเลือกเวลาที่ต้องการ



❸ ปิดฝาเครื่อง กดปุ่ม START/PAUSE

เริ่ม START หยุด PAUSE

* เมื่อใช้ AIR DRY นานกว่า 1 ชั่วโมง
- ใช้โปรแกรมนี้เพื่อลดเวลาการปั่นแห้ง
- ใช้ได้ผลดีกับเสื้อยืดคอกลม
- รวมผ้าไม่เกินครึ่งถัง
- สำหรับผ้าทั่วไป : เลือก 1 ชั่วโมง
- สำหรับผ้าสีเข้ม : เลือก 2 ชั่วโมง

วิธีการตั้งโปรแกรม TUB DRY

❶ กดปุ่ม POWER (AUTO OFF) เพื่อเปิดเครื่อง

เปิด/ปิด POWER/Auto Off

❶ กดปุ่ม WASH และ SPIN เพื่อเลือก TUB DRY



- ใช้โปรแกรมนี้ เพื่อป้องกันการเกิดเชื้อรา เนื่องจากความชื้นที่เหลืออยู่ในถัง
- ไม่ต้องใส่ผ้าลงในถัง
- ใช้โปรแกรมนี้อาทิตย์ละครั้ง











วิธีการตั้งโปรแกรม Favorite

1. กดปุ่ม AUTO OFF เพื่อเปิดเครื่อง
2. กดปุ่ม PROGRAM เพื่อเลือกโปรแกรมการซัก "Favorite" Page 13
3. กดปุ่ม WASH,RINSE,SPIN เลือกรูปแบบการซักและปรับตามความต้องการ Page 15
4. กดปุ่ม WATER LEVEL เลือกระดับน้ำ Page 10
5. ใส่ผงซักฟอก ใส่ผ้าและน้ำยาปรับผ้านุ่ม Page 10
6. ปิดฝาเครื่อง แล้วกดปุ่ม START/PAUSE








วิธีการตั้งโปรแกรม Tub Clean

❶ กดปุ่ม AUTO OFF เพื่อเปิดเครื่อง



❷ กดปุ่ม PROGRAM เพื่อเลือกโปรแกรม
การซัก "Tub Clean"

Page 13



❸ ปิดฝาเครื่อง แล้วกดปุ่ม START/PAUSE



หน้าจอแสดงผล



หมายเหตุ

**โปรแกรมจะเลือก ระดับน้ำอยู่ที่ระดับสูงสุดเสมอไม่สามารถเปลี่ยนแปลงได้

ข้อแนะนำ



ข้อแนะนำการใช้โปรแกรม Tub Clean

ควรใช้งานโปรแกรมล้างถังซัก 1 ครั้งต่อเดือน
เพื่อประสิทธิภาพในการทำความสะอาดของเครื่องซักผ้า



Service Center
ศูนย์บริการข้อมูล
http://www.lg.com/th

ศูนย์บริการข้อมูล	หมายเลขโทรศัพท์
เบอร์สายด่วน*โทรฟรี*	1800-545454
ศูนย์บริการสุขุมวิท	0-2204-8895
ศูนย์บริการบางนา	0-2312-7271-2
ศูนย์บริการตากสิน	0-2878-5757
ศูนย์บริการเชียงใหม่	0-5321-5823
ศูนย์บริการพิษณุโลก	0-5528-0508
ศูนย์บริการอุดรธานี	0-4220-4757
ศูนย์บริการหาดใหญ่	0-7423-1391
ศูนย์บริการนครราชสีมา	0-4424-7304
ศูนย์บริการพัทยา	0-3848-8557













ปัญหาการทำงานของเครื่อง

คุณสามารถแก้ไขปัญหาบางอย่างได้ด้วยตัวเอง โดยวิธีการในตารางด้านล่างนี้

ข้อความแจ้ง & สาเหตุ	การตรวจหาสาเหตุ	การแก้ไขด้วยตนเอง
IE ปัญหาการจ่ายน้ำเข้าเครื่อง 	✪ เปิดก๊อกน้ำแล้วหรือยัง ✪ แหล่งจ่ายน้ำหลุดหรือไม่ ✪ น้ำที่จ่ายเข้ามีแรงดันต่ำหรือไม่ ✪ ที่กรองน้ำเข้ามีสิ่งสกปรกอุดตัน	✪ เปิดน้ำเข้าเครื่อง ✪ ต่อสายท่อน้ำเข้าที่ ✪ หาแหล่งจ่ายน้ำที่แรงขึ้น ✪ ทำความสะอาดที่กรองน้ำ
OE ปัญหาการระบายน้ำทิ้ง 	✪ ท่อระบายน้ำทิ้งคดงอ ✪ ระดับของท่อระบายน้ำทิ้งสูงจากพื้นเกิน 4 เซนติเมตร ✪ ต่อสายท่อน้ำทิ้งเพิ่ม ยาวเกินกว่า 3 เมตร ✪ ปลายท่อน้ำทิ้งจมอยู่ในน้ำ ✪ มีสิ่งสกปรกอุดตันภายในท่อ	✪ จัดวางท่อระบายน้ำใหม่ ✪ วางท่อน้ำทิ้งให้ราบเรียบ ✪ ลดระยะสายท่อน้ำทิ้ง ✪ นำปลายท่อขึ้น ไม่ให้จุ่มน้ำ ✪ ตรวจดูภายใน และนำออก
UE ถังปั่นไม่สมดุล 	✪ เครื่องไม่สมดุล พื้นไม่มั่นคง หรือ เอียง ✪ ผ้าในถังซักไม่สมดุล ✪ ปริมาณผ้ามากเกินไป ✪ นำผ้าที่ต่างชนิดกันมาซักรวมกัน	✪ ตั้งเครื่องให้สมดุล ✪ จัดผ้าในถังซักให้สมดุล ✪ ซักผ้าในปริมาณที่เหมาะสม ✪ แยกผ้าก่อนทำการซัก
dE ฝาเครื่องเปิดอยู่ 	✪ ฝาเครื่องเปิดอยู่หรือไม่	✪ ปิดฝาเครื่อง แล้วรอให้เครื่องทำงาน
PE ตัวตรวจจับระดับน้ำยิดปกติ FE การควบคุมน้ำล้นไม่ทำงาน AE คลัชไม่ทำงาน LE มอเตอร์ทำงานผิดปกติ	✪ ไม่สามารถตรวจหาสาเหตุได้ กรุณาติดต่อช่างผู้ชำนาญเท่านั้น	Page 20 ✪ เรียกศูนย์บริการแอล จี ใกล้บ้าน


แก๊ก...แก๊ก
แก๊ก...แก๊ก
แก๊ก
แก๊ก...
แก๊ก...
แก๊ก...แก๊ก
แก๊ก
แก๊ก...
เกิดอะไรขึ้นเนี่ย...
ทำไมเสียงดังอย่างนี้...
แก๊ก
แก๊ก
แก๊ก
แก๊ก
แก๊ก
แก๊ก
แก๊ก
ต้องโทรแจ้ง
ศูนย์บริการซะแล้ว
0-2878-5757
(ตากสิน)
สวัสดีค่ะ..ศูนย์บริการ LG ใช่มั๊ยคะ
คือเครื่องซักผ้าที่บ้าน
ท่าทางจะ
มีปัญหาค่ะ
ค่ะ...เดี๋ยวทางเราจะจัดส่งช่าง
เข้าไปตรวจสอบให้ค่ะ
ขอทราบชื่อ ที่อยู่ และเบอร์
ติดต่อกลับด้วยค่ะ
LG Customer Information Center
ตอนเย็น
สวัสดีครับ
ผมเป็น
ช่างจาก LG
มีอะไรให้
รับใช้ครับ
หล่อจัง...
โห...มาเร็วจัง!!
เครื่องมีปัญหาเสียงดัง
ใช่มั๊ยครับ งั้นขอผมตรวจ
ดูหน่อยได้มั๊ยครับ
?
งั้นเชิญทางนี้เลยค่ะ
ไหนดูซิ...
อย่างนี้นี่เอง...มีเหล็กดัน
ทรงหล่นลงไปใต้จานซัก
เอาออกก็เรียบร้อยแล้ว
เครื่องไม่ได้เสียครับ
ควรตรวจสอบสิ่งตกค้างจากเสื้อ และ
ชุดชั้นในควรแยกใส่ถุงซัก ก่อนทำการซักทุกครั้ง
จะช่วยป้องกันปัญหาได้ครับ
OK เงียบแล้ว
อายจัง
ขอบคุณค่ะ แต่..
เอ๊ะ..ไม่คิดค่าบริการ
หรือคะ ?
เครื่องยังอยู่ใน
ระยะรับประกัน
บริการฟรีครับ



นอกจากการใช้งานให้ถูกต้องแล้ว การดูแลรักษาเครื่องอยู่เสมอก็จำเป็นนะครับ
แล้วต้องทำอย่างไรบ้างคะ ?
ง่าย นิดเดียวครับ
1
• ไม่ควรเปิดฝาทิ้งไว้นาน เกินไปเพื่อป้องกันสัตว์ หรือสิ่งแปลกปลอมเข้าเครื่อง
ทุกครั้ง: เช็ดถังซัก เปิดฝาระบายกลิ่นอับชื้น
2
1.ถอดปลั๊กไฟ
2. ดึงที่กรองน้ำออกมา
3. ทำความสะอาดด้วยแปรง แล้วใส่กลับคืนตำแหน่งเดิม
ทุก 6 เดือน: ทำความสะอาดตัวกรองน้ำเข้า


ไม่ยากจริงๆด้วยค่ะ หนูจำได้หมดแล้วหละ
ไม่ต้องถึงกับท่องก็ได้ครับ ในคู่มือก็มี
เก่งมากครับ...
งั้นผมขอตัวกลับก่อนนะครับ

วิธีการใช้ตัวล็อกที่จับฝาเครื่อง


ลูกค้าสามารถล็อกที่จับฝาเครื่องได้ โดยใช้ตัวล็อกที่อยู่ใต้ที่จับ

- เลื่อนตัวล็อกซ้ายไปทางด้านซ้าย และเลื่อนตัวล็อกขวาไปทางด้านขวา จนได้ยินเสียง " กิ๊ก " ที่จับจะถูกล็อกไว้ดังรูป
- เลื่อนตัวล็อกกลับตำแหน่งเดิม เพื่อปลดล็อก

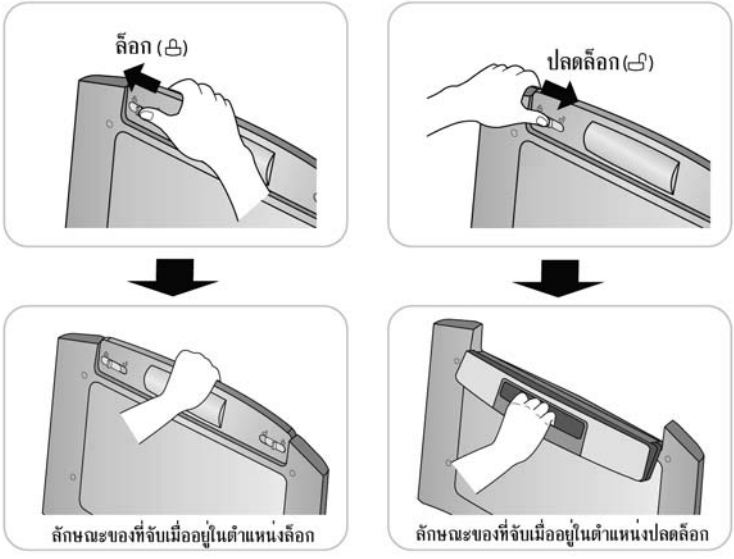

ข้อควรระวัง

ถ้าฝาเครื่องอยู่ในลักษณะดังรูปข้ายมือด้านล่าง เป็นการล็อกที่ผิดวิธี อาจทำให้ตัวล็อกเสียหายได้
การล็อกที่ถูกต้องจะต้องให้ตัวล็อกอยู่ในตำแหน่งดังรูปขวามือด้านล่าง

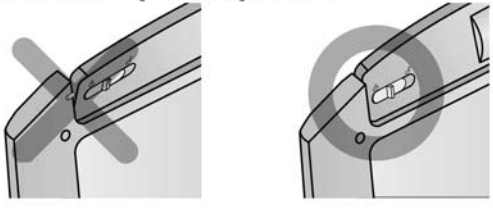

การต่อสายดิน

ควรจะทำการต่อสายดิน หากไม่ได้มีการต่อสายดิน อาจได้รับอันตรายจากไฟฟ้าดูดโดยการรั่วไหลของกระแสไฟฟ้า

การต่อสายดินเข้ากับขั้วต่อสายดิน

หากเต้าจ่ายไฟกระแสสลับ มีขั้วต่อสายดิน ไม่จำเป็นต้องแยกสายดินออก



(เต้าจ่ายไฟกระแสสลับ อาจแตกต่างกันไปในแต่ละประเทศ)

การต่อสายดินแบบต่อกับตัวป้องกันไฟลัดวงจร

หากไม่สามารถต่อสายดินได้ ควรติดตั้งตัวป้องกันไฟลัดวงจรแยกต่างหาก และต้องติดตั้งโดยช่างผู้ชำนาญเท่านั้น



ข้อควรระวัง

1. เพื่อป้องกันการระเบิด ไม่ควรต่อสายดินกับท่อแก๊ส
2. ไม่ควรต่อสายดินกับสายโทรศัพท์หรือสายล่อฟ้า อาจเกิดอันตรายได้ระหว่างที่เกิดฟ้าผ่า
3. ไม่ควรต่อสายดินเข้ากับพลาสติก

ระบบตรวจสอบปัญหาของเครื่องซักผ้าด้วยตัวเอง (SMART DIAGNOSIS)

1 ปิดฝาเครื่องซักผ้า และกดปุ่ม เปิด/ปิด เครื่อง




- ถ้ากดปุ่มอื่นๆ ไปก่อนหน้าที่จะกดปุ่ม อุณหภูมิน้ำ WATER TEMP. ให้ทานกดปุ่ม เปิด/ปิด เครื่องอีกครับ

2 วางโทรศัพท์ที่เข้าโปรแกรมแล้ว บริเวณสัญลักษณ์




- ต้องให้ลำโพงอยู่ใกล้กับสัญลักษณ์ SMART DIAGNOSIS มากที่สุด

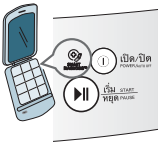


3 กดปุ่ม อุณหภูมิน้ำ WATER TEMP. ค้างไว้จนได้ยินเสียงสัญญาณ



- โทรศัพท์ต้องอยู่ใกล้สัญลักษณ์ SMART DIAGNOSIS และวางโทรศัพทไว้จนเสียงสัญญาณเงียบ

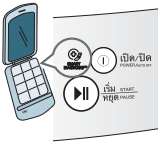

4

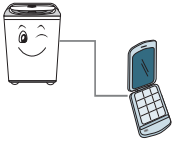


- จะแสดงรายละเอียดปัญหาที่เกิดขึ้น
- ของเครื่องซักผ้า พร้อมทั้งวิธีแก้ปัญหา

5 หมายเหตุ

- ท่านต้องติดตั้งโปรแกรม LG SMART LAUNDRY & DW ที่โทรศัทพ์ของท่านก่อน
- โทรศัพท์ที่จะสามารถใช้ฟังก์ชั่นนี้ได้ต้องเป็น SMART PHONE และสามารถ DOWNLOAD โปรแกรมนี้ได้จากแหล่ง DOWNLOAD ของโทรศัพท์
  → ระบบ Android สามารถ DOWNLOAD ได้จาก android market
- สำหรับโทรศัพท์ประเภทอื่นๆ สามารถตรวจสอบได้จากแหล่ง DOWNLOAD ของท่าน

ข้อควรระวัง

โปรแกรมตรวจสอบปัญหาอัจฉริยะ เป็นฟังก์ชั่นแก้ปัญหาผ่านโทรศัพท์เข้าไปยังศูนย์บริการ ประสิทธิภาพของฟังก์ชั่นนี้จะขึ้นอยู่กับปัจจัยหลายอย่าง เช่น ศักยภาพของโทรศัพท์ที่ใช้ส่งสัญญาณ, เสียงรบกวนต่างๆ ขณะที่ทำการส่งสัญญาณ รวมไปถึงสภาพของสถานที่ติดตั้งเครื่องซักผ้าที่อาจจะมีผลต่อสัญญาณ ที่กล่าวมานี้เป็นเพียงการยกตัวอย่าง อาจจะมีปัจจัยอื่นๆ นอกเหนือจากนี้ ดังนั้นทางฟังก์ชั่น Smart Diagnosis (โปรแกรมตรวจสอบปัญหาอัจฉริยะ) อาจจะไม่สามารถแก้ปัญหาได้อย่างถูกต้องแม่นยำเสมอไป ทั้งนี้ขึ้นอยู่กับปัจจัยหลายๆอย่างข้างต้น

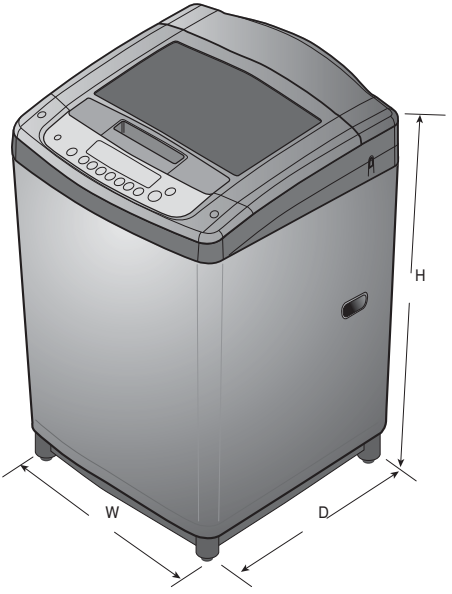

รุ่น	WT-R2075TH
ความจุซัก	20 กิโลกรัม
แรงดัน และความถี่ทางไฟฟ้า	220V~, 50 Hz
กำลังไฟฟ้า	1700W
แรงดันน้ำ	30 - 800 kPa (0.3 - 8.0 kgf/cm^2)
น้ำหนัก	62 กิโลกรัม
ขนาดเครื่อง (มิลลิเมตร)	686(W) × 721(D) × 1020(H)