



ไ ท ย
ENGLISH

คู่มือการใช้
User Guide

LG-P895

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของ ทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้ รับบริการทางด้านการประกันสินค้าอย่างเป็นทางการ

เพื่อให้ แนใจ ว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการ รับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ. ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจาก มาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No.

of your purchased handset will be automatically sent to LG on the date of purchase.

LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free.

One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

คู่มือการใช้ LG-P895

คู่มือนี้จะช่วยให้คุณเริ่มต้นใช้งานโทรศัพท์ของคุณ



- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณ ขึ้นอยู่กับโทรศัพท์ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2012 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้อง เครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Play สโตร์™ เป็นเครื่องหมายการค้าของ Google, Inc.

สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ	5
เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.....	10
ส่วนประกอบอุปกรณ์	16
QuickMemo	18
การใส่การ์ด Micro-USIM	19
การชาร์จโทรศัพท์	19
การล็อคและปลดล็อคหน้าจอ	20
การรักษาความปลอดภัยการล็อคหน้าจอ	20
หน้าจอหลักของคุณ	21
เคล็ดลับสำหรับหน้าจอสัมผัส	21
หน้าหลัก	21
การปรับแต่งหน้าจอหลัก	22
การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด	22
แถบการแจ้งเตือน	22
การดูแถบสถานะ	22
แป้นพิมพ์บนหน้าจอ	24
การป้องกันตัวอักษรที่ใช้สำหรับเน้นเสียง	24
การตั้งค่าแอคเคาท์ Google	25
การเชื่อมต่อกับเครือข่ายและอุปกรณ์.....	26
Wi-Fi	26
การเชื่อมต่อกับเครือข่าย Wi-Fi.....	26
บลูทูธ	26
การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์.....	27
การเปลี่ยนชื่อหรือรักษาความปลอดภัยของ Portable hotspot	27
การใช้ Wi-Fi Cast	28
การใช้งาน Wi-Fi Direct เพื่อแบ่งปันผ่าน SmartShare.....	28
การใช้ SmartShare.....	29
การโทร	31
การโทรออก	31
การโทรออกโดยใช้รายชื่อ	31
การรับสายและการปฏิเสธสายเรียกเข้า	31
การปรับระดับเสียงสายสนทนา.....	31
การใช้สายที่สอง	31
การดูบันทึกการโทร	32
ตั้งค่าการโทร.....	32
รายชื่อ.....	34
การค้นหารายชื่อ	34

การเพิ่มรายชื่อใหม่	34
เพื่อนสนิท	34
การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่	35
ข้อความ.....	36
การส่งข้อความ	36
กล่องเรด	36
การใช้สไมลีย์	36
การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย	36
อีเมล	37
การจัดการแอคเคาท์อีเมล	37
หน้าจอแอคเคาท์อีเมล.....	37
การทำงานกับโฟลเดอร์แอคเคาท์.....	37
การเขียนและส่งอีเมล	38
กล้องถ่ายรูป.....	39
ทำความรู้จักกับช่องมองภาพ.....	39
การถ่ายภาพดวน	40
เมื่อคุณถ่ายภาพแล้ว	40
การใช้การตั้งค่าขั้นสูง.....	40
กล้องวิดีโอ	42
ทำความรู้จักกับช่องมองภาพ.....	42
การถ่ายวิดีโอดวน	43
หลังการถ่ายวิดีโอ.....	43
การใช้การตั้งค่าขั้นสูง.....	43
การปรับระดับเสียงขณะดูวิดีโอ	44
Video Wiz.....	45
มัลติมีเดีย.....	46
เล่นวิดีโอ	46
การเล่นวิดีโอ	46
คลังภาพ.....	46
เครื่องเล่นเพลง	46
การโอนไฟล์เพลงโดยใช้อุปกรณ์จัดเก็บข้อมูล USB	47
การเล่นเพลง	47
LG Tag+	48
Media Home	48
สมุดโน้ต	49
การจดโน้ต.....	49

สารบัญ

ทำความรู้จักกับสมุดโน้ต	49
LG SmartWorld	50
วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ	50
วิธีการใช้ LG SmartWorld	50
ยูทิลิตี้	51
การตั้งเวลาการปลุก	51
การใช้เครื่องคิดเลข	51
การเพิ่มเหตุการณ์ลงในปฏิทิน	51
Tasks (งาน).....	51
Polaris Office	52
FileShare	52
สำรองข้อมูล	52
สำรองข้อมูลสมารท์โฟน	53
การกำหนดเวลาสำรองข้อมูลอัตโนมัติ	53
การเรียกคืนข้อมูลสมารท์โฟน.....	53
เว็บไซต์	55
อินเทอร์เน็ต.....	55
การใช้แถบเครื่องมือเว็บ	55
การใช้ตัวเลือก	55
ตั้งค่า.....	56
ตั้งค่าการเชื่อมต่อ	56
อุปกรณ์	57
ส่วนตัว	59
ระบบ	60
อัปเดตซอฟต์แวร์โทรศัพท์	60
DivX HD	61
DTS	62
Dolby Mobile.....	62
LG On-Screen Phone.....	63
ไอคอน On-Screen Phone	63
คุณสมบัติ On-Screen Phone	63
วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์	63
อุปกรณ์เสริม	64
การแก้ปัญหา.....	65

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate) โทรศัพท์เคลื่อนที่รุ่น LG-P895 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคนโดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate (SAR) การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้วาระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อของร่างกายที่หนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหู คือ 0.284 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.604 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปยึดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

⚠ คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลง หรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรทัศน์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรทัศน์ตก
- ไม่ควรนำเครื่องโทรทัศน์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรทัศน์ในบริเวณที่มีข้อบังคับพิเศษว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรทัศน์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรทัศน์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรทัศน์ชำรุดเสียหายได้
- ห้ามชาร์จโทรทัศน์ใกล้วัตถุไวไฟ เนื่องจากโทรทัศน์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรทัศน์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรทัศน์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรทัศน์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรทัศน์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรทัศน์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้
- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรทัศน์ได้
- วางเครื่องโทรทัศน์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรทัศน์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลานานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพอ อาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรทัศน์ในระหว่างหรือทันทีหลังจากการใช้งาน
- หากโทรทัศน์ของคุณเปียกน้ำ ให้ถอดปลั๊กทันทีเพื่อให้เครื่องแห้งสนิท ห้ามทำให้อุปกรณ์แห้งเร็วขึ้นโดยใช้แหล่งความร้อนภายนอก เช่น เตาอบ เตาไมโครเวฟ หรือเครื่องเป่าผม

- ของเหลวในโทรศัพท์ที่เปียกน้ำจะเปลี่ยนสีของฉลากผลิตภัณฑ์ในโทรศัพท์ ความเสียหายของอุปกรณ์ที่เป็นผลมาจากการสัมผัสกับของเหลวจะไม่ได้รับครอบคลุมภายใต้การรับประกัน

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องอาจได้รับผลจากคลื่นรบกวนได้ ทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อเป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาานาน ดังนั้นเราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่กำลังฟัง

หมายเหตุ: แรงแต้นเสียงที่มากเกินไปจากหูฟัง และชุดหูฟังสามารถทำให้สูญเสียการได้ยินได้

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามขนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่น เนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายรอบครั้งก่อนที่จะต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน

- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

คำประกาศรับรอง

ดังนั้น **LG Electronics** ขอประกาศว่าผลิตภัณฑ์ **LG-P895** เป็นไปตามข้อกำหนดที่จำเป็น และข้อกำหนดที่เกี่ยวข้องอื่นๆ ของ Directive **1999/5/EC** คุณสามารถดูสำเนาของคำประกาศรับรองได้ที่ <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

ข้อกำหนดและความปลอดภัย

ไปที่ "การตั้งค่าระบบ > เกี่ยวกับโทรศัพท์ > ข้อกำหนดและความปลอดภัย" เพื่อดูข้อมูลข้อกำหนดและความปลอดภัย

อุณหภูมิแวดล้อม

สูงสุด: +50°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

หมายเหตุ: ซอฟต์แวร์โอเพ่นซอร์ส

ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และและใบอนุญาตโอเพ่นซอร์สอื่นๆ โปรดไปที่ <http://opensource.lge.com/>

เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบ และประกาศที่อ้างอิงถึงทั้งหมด สามารถดาวน์โหลดพร้อมกันกับซอร์สโค้ด

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


ก่อนเริ่มใช้โทรศัพท์ โปรดอ่านข้อมูลนี้!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์ และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **แอปฯ** จากชนิดอุปกรณ์
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3 แตะ **ถอนการติดตั้ง**


2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้


การยืดอายุแบตเตอรี่ของโทรศัพท์:

- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่

การตรวจสอบระดับกำลังไฟแบตเตอรี่:

- แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **เกี่ยวกับโทรศัพท์** จากระบบ > **แบตเตอรี่** สถานะแบตเตอรี่ (กำลังชาร์จหรือไม่ชาร์จ) และระดับแบตเตอรี่ (เปอร์เซ็นต์ที่ชาร์จ) จะแสดงที่ด้านบนของหน้าจอ

การตรวจสอบและควบคุมการใช้กำลังไฟแบตเตอรี่:

- แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ประหยัดพลังงาน** จากอุปกรณ์ > **การใช้แบตเตอรี่** จากข้อมูลแบตเตอรี่

เวลาใช้งานของแบตเตอรี่จะแสดงอยู่ที่ด้านล่างของหน้าจอ โดยแสดงระยเวลานับจากที่คุณเชื่อมต่อโทรศัพท์กับแหล่งจ่ายไฟครั้งสุดท้าย หรือหากเชื่อมต่ออยู่ในขณะนี้ จะแสดงระยเวลานับจากที่โทรศัพท์ใช้พลังงานจากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะแสดงรายการแอปพลิเคชันหรือบริการที่ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับตามปริมาณที่ใช้จากมากไปน้อย

3. การใช้โฟลเดอร์

คุณสามารถรวมหลายไอคอนแอปพลิเคชันไว้ในหนึ่งโฟลเดอร์ได้ วางไอคอนแอปพลิเคชันหนึ่งบนอีกไอคอนหนึ่งในหน้าจอหลัก และไอคอนทั้งสองจะรวมกัน

4. ก่อนการติดตั้งแอปพลิเคชันและ OS โอเพ่นซอร์ส


⚠ คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือจากของผู้ผลิต อาจทำให้โทรศัพท์ของคุณทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์ของคุณจะไม่ได้ได้รับความคุ้มครองตามการรับประกัน

⚠ คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจากแหล่งที่เชื่อถือได้ เช่น Play สโตร์™ เท่านั้น หากมีการติดตั้งแอปพลิเคชันไม่ถูกต้องในโทรศัพท์ อาจทำงานไม่ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น และข้อมูลและการตั้งค่าที่เกี่ยวข้องทั้งหมดออกจากโทรศัพท์

5. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์ และ  > แท็บ แอปฯ > ตั้งค่า > ล็อคหน้าจอ จาก อุปกรณ์ > เลือกแบบล็อคหน้าจอ > รูปแบบ ซึ่งจะเปิดหน้าจอที่แนะนำคุณสำหรับวิธีการวาดแบบปลดล็อคหน้าจอ คุณต้องสร้างแป้นคีย์ PIN เป็นมาตรการความปลอดภัยหากคุณลืมล็อคแบบ

ข้อควรระวัง: สร้างแอคเคาท์ Google ก่อนทำการตั้งค่าแบบปลดล็อค และจำแป้นคีย์ PIN ที่คุณได้สร้างไว้ขณะกำลังสร้างล็อคแบบ

⚠ คำเตือน

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสมือเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือ รหัสผ่าน การปลดล็อคของคุณ:

< หากคุณลืมแบบ >

หากคุณล็อกอินบัญชี Google ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ ที่ด้านล่างของหน้าจอ จากนั้น คุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณหรือคุณต้องป้อนแป้นคีย์ PIN ที่คุณได้ป้อนไว้ขณะกำลังสร้างล็อคแบบ

หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมแป้นคีย์ PIN คุณต้องทำการ Hard Reset

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

< หากคุณลืม PIN หรือรหัสผ่าน >

หากคุณลืม PIN หรือรหัสผ่าน คุณจำเป็นต้องทำการ Hard Reset

ข้อควรระวัง: หากคุณทำ Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ

หมายเหตุ: หากคุณไม่ได้ล็อกอินบัญชี Google และลืมแบบปลดล็อค คุณต้องป้อนแบคอัพ PIN

6. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน) เพื่อตั้งค่าเริ่มต้นของโทรศัพท์

1 ปิดเครื่อง

2 กด ปุ่มเปิด/ปิด/ล็อค + ปุ่มลดระดับเสียง ค้างไว้

3 เมื่อโลโก้ LG ปรากฏขึ้น ให้ปล่อยปุ่มทั้งหมด

4 หลายวินาทีต่อมา คุณสามารถเลือกฟังก์ชันรีเซ็ตค่าจากโรงงานได้ในเมนูที่ลึกลับที่สุดในระบบ Android

5 เลื่อนรายการโดยใช้ปุ่มระดับเสียงและเลือกโดยใช้ ปุ่มเปิด/ปิด/ล็อค

⚠ คำเตือน

หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset

7. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

การกลับไปดูรายการแอปพลิเคชันที่ใช้ล่าสุด:

เพียงแคกดปุ่ม เพียงแคกด

การหยุดแอปพลิเคชัน:

1 แตะ  > แตะ แอปฯ > ตั้งค่า > แอปฯ > การรัน

2 เลื่อนและแตะแอปพลิเคชันที่ต้องการ และแตะ หยุด เพื่อหยุด

8. การติดตั้ง PC Software (LG PC Suite)

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" คุณสามารถ...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ

- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุ้คมาร์ค) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาที่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์ของคุณ

หมายเหตุ: คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อค้นหาวิธีการใช้งานแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite"

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บเพจของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > โทรศัพท์มือถือ LG > เลือกรุ่น (LG-P895) หรือไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P895)
- 3 คลิก **PC Sync** จาก **คู่มือและดาวน์โหลด** และคลิก **ดาวน์โหลด** เพื่อดาวน์โหลด "LG PC Suite" PC software หรือคลิก **PC Sync** จาก **ดาวน์โหลด** แล้วคลิก **WINDOW PC Sync** **ดาวน์โหลด** เพื่อดาวน์โหลดซอฟต์แวร์คอมพิวเตอร์ "LG PC Suite"

ข้อกำหนดของระบบสำหรับ "LG PC Suite" PC software

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต Windows 7 32 บิต/64 บิต
- CPU: โพรเซสเซอร์ 1 GHz หรือสูงกว่า
- หน่วยความจำ: 512 MB RAM หรือสูงกว่า
- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น ขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG, Windows Media Player 10 หรือใหม่กว่า

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

จำเป็นต้องใช้ไดรเวอร์ USB ในตัวของ LG ในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้ง "LG PC Suite" PC software

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

9. การซิงโครไนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์



ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยแอปพลิเคชัน "LG PC Suite" เพื่อความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ และบุ๊คมาร์คได้ด้วย

ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)
- 2 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้ายของหน้าจอ
- 3 คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
- 4 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

10. การซิงค์โครไนซ์โทรศัพท์กับคอมพิวเตอร์ผ่าน USB

หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้ง **LG PC Suite** ในคอมพิวเตอร์โปรดดูหน้าก่อนหน้าสำหรับการติดตั้ง LG PC Suite

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ที่เก็บข้อมูล** จากอุปกรณ์เพื่อตรวจสอบสื่อที่เก็บข้อมูล
 - 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
 - 3 รายการชนิดเชื่อมต่อการ USB จะปรากฏขึ้นบนหน้าจอโทรศัพท์ และเลือกตัวเลือก **ซิงค์มีเดีย (MTP)**
 - 4 เปิดโฟลเดอร์หน่วยความจำบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์
 - 5 คัดลอกไฟล์จากคอมพิวเตอร์ไปยังโฟลเดอร์โทรศัพท์
 - 6 เลือกตัวเลือก **ซาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์
- การยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์:**
เปิดแถบการแจ้งเตือน และแตะ  > **ซาร์ทเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์อย่างปลอดภัย

11. ถี้อโทรศัพท์ตั้งขึ้น

ถี้อโทรศัพท์มือถือถี้อแนวตั้งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P895 มีเสาอากาศภายใน ะมัดระวังอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่องเนื่องจากอาจส่งผลต่อประสิทธิภาพการทำงาน


ในขณะที่ทำการโทรออก/รับสาย หรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถี้อบริเวณส่วนล่างของโทรศัพท์ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

12. เมื่อน้ำจ่อค้าง

หากน้ำจ่อค้างหรือโทรศัพท์ไม่ตอบสนองเมื่อคุณพยายามใช้งาน:
กดปุ่ม **เปิด/ปิด/ล็อค** ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิด
หากยังไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

ส่วนประกอบอุปกรณ์

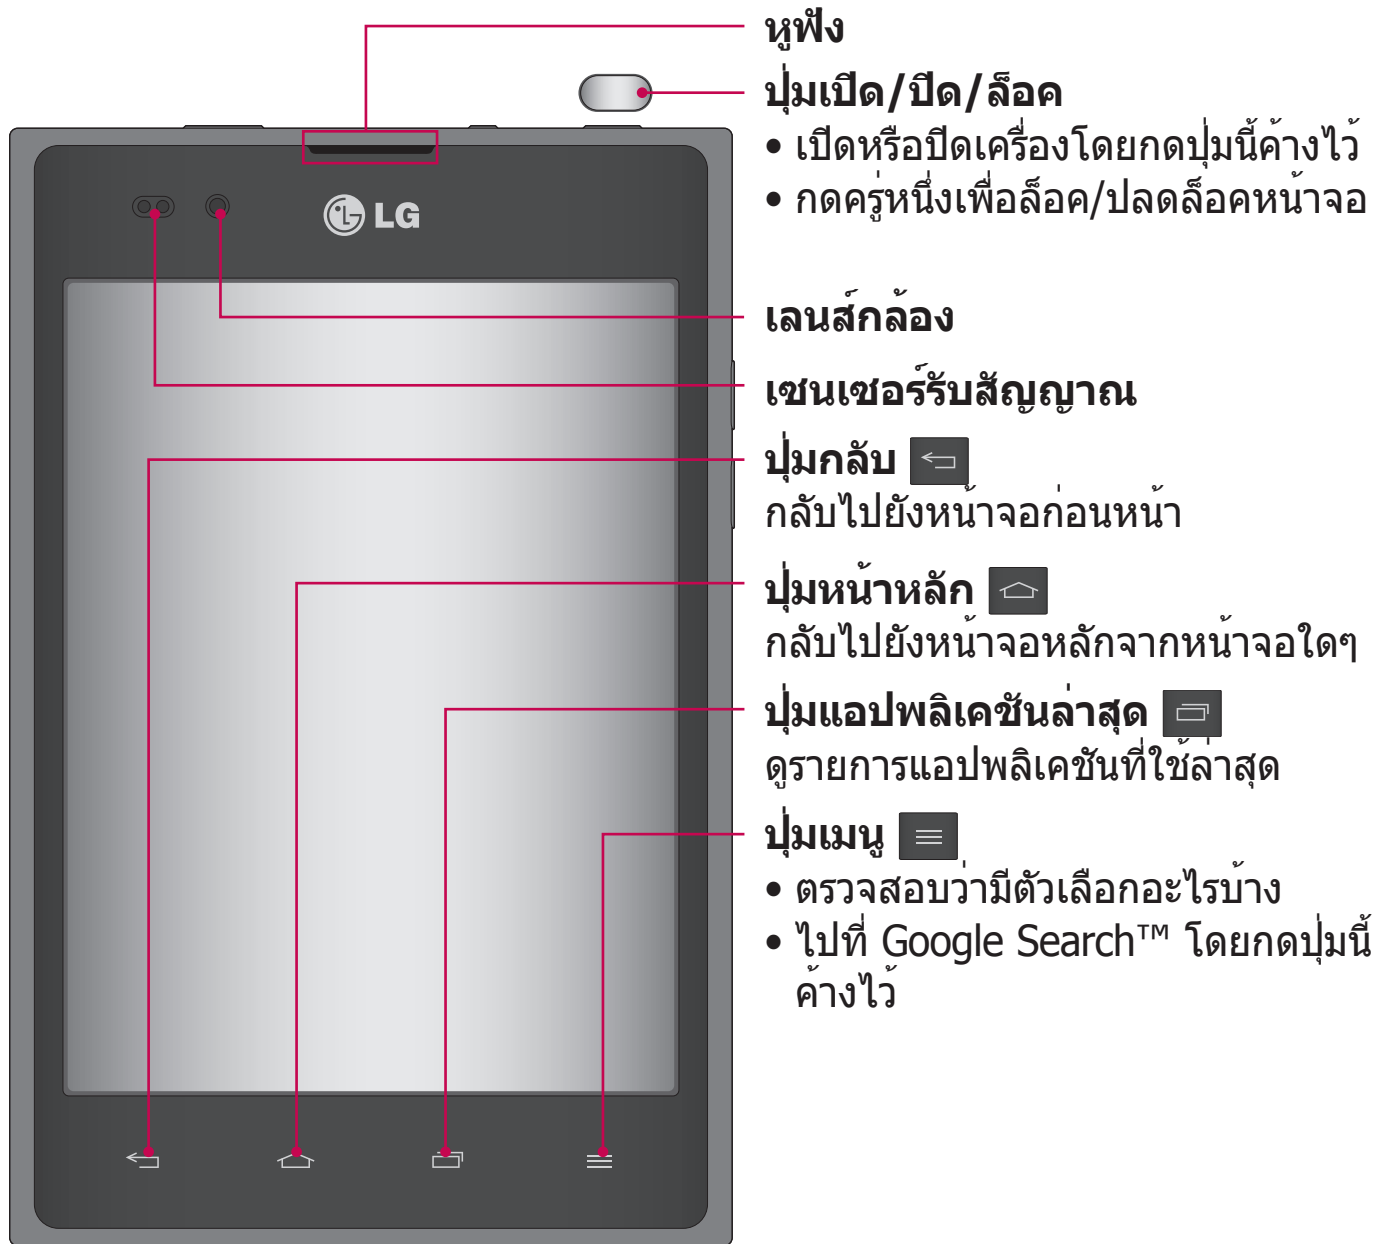


หมายเหตุ: เซนเซอร์รับสัญญาณ

เมื่อรับสายหรือโทรออก เซนเซอร์รับสัญญาณจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัส โดยการรับรู้เมื่อโทรศัพท์อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์

⚠ คำเตือน


การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่าปิด เซนเซอร์รับสัญญาณ LCD ด้วยฟิล์มป้องกัน เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

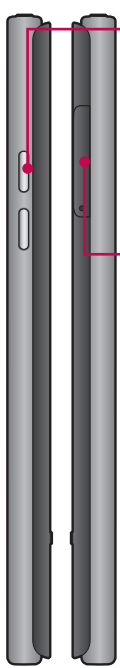

ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง

ช่องเสียบซิมการ์ด

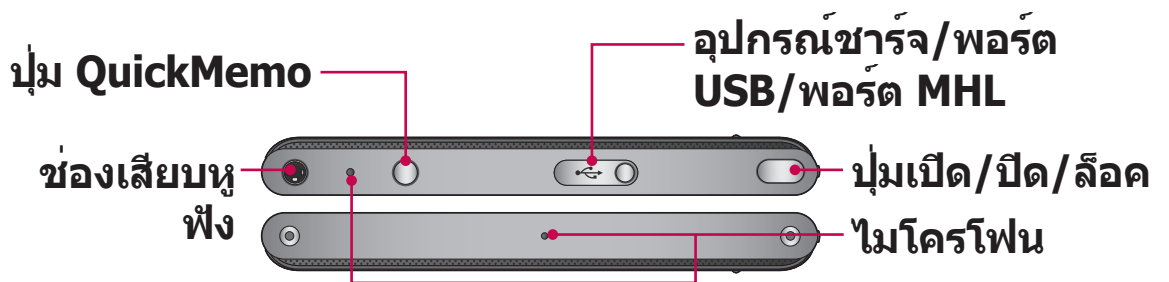

แฟลช

เลนส์กล้อง



ลำโพง


⚠ คำเตือน


ปิดช่องใส่แบตเตอรี่ โปรดอย่าเปิดฝาคกรอบด้านหลัง

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

QuickMemo

ใช้ **QuickMemo** เพื่อสร้างบันทึกได้สะดวกและมีประสิทธิภาพด้วยรูปภาพที่บันทึกไว้หรือบนหน้าจอปัจจุบันของโทรศัพท์

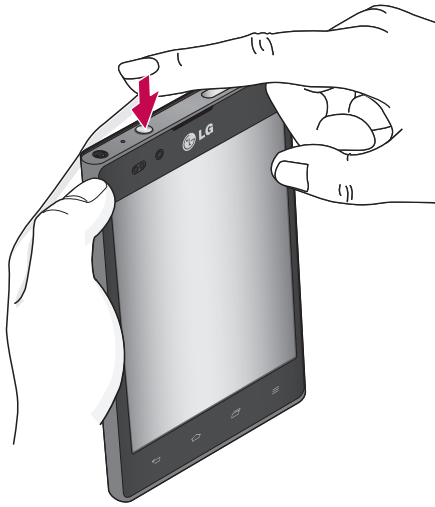







- 1 เข้าสู่หน้าจอ **QuickMemo** โดยกดปุ่ม QuickMemo
- 2 เลือกตัวเลือกเมนูที่ต้องการจาก **ประเภทปากกา, สี, เครื่องลง** และสร้างบันทึก
- 3 แตะ  เพื่อจัดเก็บบันทึกพร้อมกับหน้าจอปัจจุบัน

หมายเหตุ: โปรดใช้ปลายนิ้วขณะใช้ฟังก์ชันบันทึกด่วน อย่าใช้เล็บ

การใช้ตัวเลือก QuickMemo

ขณะใช้ฟังก์ชัน QuickMemo คุณสามารถใช้ตัวเลือก QuickMenu ได้ง่ายๆ


-  - เลือกว่าคุณต้องการใช้หน้าจอแบ็คกราวด์หรือไม่
-  - เลิกทำหรือทำซ้ำ
-  - เลือกประเภทปากกาและสี
-  - ลบบันทึกที่คุณสร้าง
-  - ส่งหรือแบ่งปันบันทึกด่วนปัจจุบันกับคนอื่นๆ
-  - จัดเก็บบันทึกพร้อมกับหน้าจอปัจจุบัน

การดูบันทึกด่วนที่บันทึกไว้

แตะ **คลังภาพ** และเลือกอัลบั้ม QuickMemo

การใส่การ์ด Micro-USIM

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ การใส่การ์ด Micro-USIM:

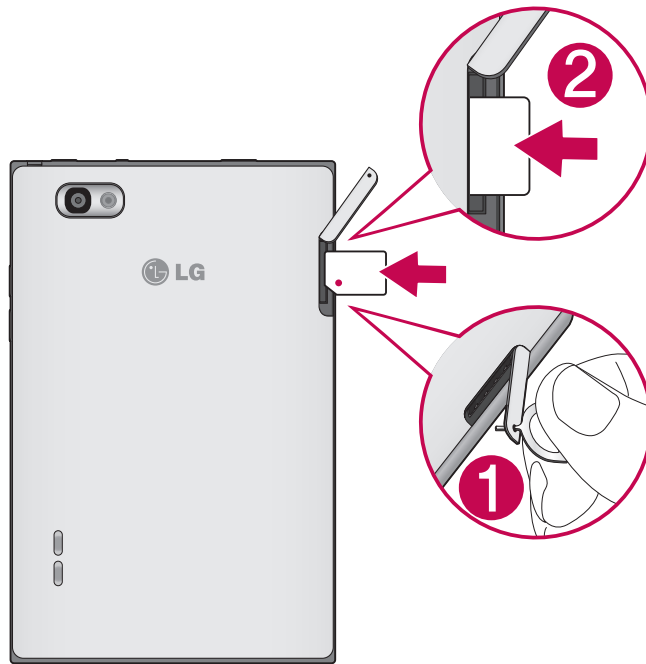

- 1 เปิดฝาปิดช่องใส่การ์ด Micro-USIM ด้วย Pin
- 2 เลื่อนการ์ด Micro-USIM เข้าไปในช่องใส่การ์ด Micro-USIM โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการ์ดคว่ำลง

การชาร์จโทรศัพท์

ช่องเสียบอุปกรณ์ชาร์จอยู่ทางด้านบนของโทรศัพท์ เสียบอุปกรณ์ชาร์จ และเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ



หมายเหตุ: แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่


เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

การล็อคและปลดล็อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงหนึ่ง หน้าจอจะปิดและล็อคโดยอัตโนมัติ ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจและประหยัดพลังงานแบตเตอรี่

ในขณะที่คุณไม่ได้ใช้งาน LG-P895 ให้กด ปุ่มเปิด/ปิด/ล็อค  เพื่อล็อคโทรศัพท์ของคุณ

หากมีโปรแกรมกำลังเปิดใช้งานอยู่ในขณะที่คุณตั้งค่าหน้าจอล็อค โปรแกรมเหล่านั้นอาจยังคงทำงานอยู่ในโหมดล็อค ขอแนะนำให้ปิดโปรแกรมทั้งหมดก่อนจะเริ่มใช้งานโหมดล็อค เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น (เช่น การโทรเข้า/ออก, การเข้าใช้เว็บ และการสื่อสารข้อมูล)

ในการทำให้โทรศัพท์ของคุณใช้งานได้ ให้กด ปุ่มเปิด/ปิด/ล็อค  หน้าจอล็อคจะปรากฏ และและเลื่อนล็อคหน้าจอไปในทิศทางใดๆ เพื่อปลดล็อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

การรักษาความปลอดภัยการล็อคหน้าจอ

คุณสามารถล็อคหน้าจอเพื่อให้คุณเพียงคนเดียวที่สามารถปลดล็อคเพื่อเข้าถึงโทรศัพท์ของคุณได้

การตั้งค่าแบบการปลดล็อค, PIN หรือรหัสผ่านเป็นครั้งแรก:

- แตะ  > แท็บ แอปฯ > ตั้งค่า > ล็อคหน้าจอ > เลือกแบบล็อคหน้าจอ > ไม่มี, ลาก, ปลดล็อคใบหน้า, รูปแบบ, PIN หรือ รหัสผ่าน

หมายเหตุ:

ข้อควรระวังเมื่อใช้ล็อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล็อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสดังกล่าวเพียง 5 ครั้ง ในการป้อนแบบการปลดล็อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมแบบการปลดล็อค:

หากคุณล็อกอินบัญชี Google ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้น คุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล็อคโทรศัพท์

หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืม คุณต้องทำการ Hard Reset

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนาวิเกตโทรศัพท์ของคุณ

แตะ – ในการเลือกเมนู/ตัวเลือก หรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/ตัวเลือกนั้น

แตะค้าง – ในการเปิดเมนูตัวเลือก หรือจับวัตถุที่คุณต้องการย้าย ให้แตะวัตถุที่คุณต้องการย้ายค้างไว้

ลาก – ในการเลื่อนดูรายการหรือเคลื่อนที่ซ้ำๆ ให้ลากผ่านหน้าจอสัมผัส

ตัวัด – ในการเลื่อนดูรายการหรือเคลื่อนที่อย่างรวดเร็ว ให้ตัวัดนิ้วผ่านหน้าจอสัมผัส (ลากอย่างรวดเร็วแล้วปล่อย)

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

หน้าหลัก

เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูพาเนล นอกจากนี้ คุณสามารถปรับแต่งพาเนลด้วยแอปฯ, ดาวนโหลด, Widget และพื้นหลัง

หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

ในหน้าจอหลัก คุณสามารถดูไอคอนเมนูได้ที่ด้านล่างหน้าจอ ไอคอนเมนูจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ใช้บ่อยได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว



แตะไอคอน **โทรศัพท์** เพื่อแสดงปุ่มหมายเลขหน้าจอสัมผัสสำหรับใช้โทรออก



แตะไอคอน **รายชื่อ** เพื่อเปิดรายชื่อ



แตะไอคอน **สมุดโน้ต** เพื่อเปิดฟังก์ชันสมุดโน้ต



แตะไอคอน **ข้อความ** เพื่อเข้าใช้เมนูข้อความ นี่คือที่ซึ่งคุณสามารถสร้างข้อความใหม่ได้



แตะไอคอน **แอปฯ** ที่ด้านล่างของหน้าจอ คุณสามารถดูแอปพลิเคชันที่ติดตั้งทั้งหมดได้ ในการเปิดแอปพลิเคชัน เพียงแตะไอคอนในรายการแอปพลิเคชัน

หน้าจอหลักของคุณ

การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มแอปฯ, ดาว์นโหลด, Widget หรือพื้นหลัง เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่มแอปฯ และ Widget ที่ใช้บ่อยในหน้าจอหลัก

การเพิ่มรายการในหน้าจอหลัก:

- 1 แตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก หรือแตะ **+** ที่ด้านบนขวา
- 2 ในเมนู โหมดเพิ่ม ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณจะได้เห็นรายการที่เพิ่มบนหน้าจอหลัก
- 3 ลากไปยังตำแหน่งที่คุณต้องการ แล้วปล่อยนิ้ว

การลบรายการจากหน้าจอหลัก:

- หน้าจอหลัก > แตะที่ไอคอนที่ต้องการลบค้างไว้ > ลากไปยัง 


เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปฯ ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม

การกลับไปที่แอปพลิเคชันที่เพิ่งใช้ล่าสุด

- 1 แตะปุ่ม **แอปพลิเคชันล่าสุด** หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชัน หรือแตะปุ่ม **กลับ** เพื่อกลับไปยังหน้าจอก่อนหน้านี้

แถบการแจ้ง

แถบการแจ้งอยู่ด้านบนสุดของหน้าจอ

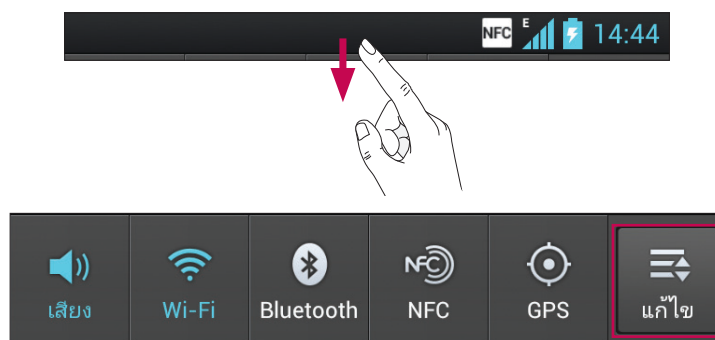

แตะและเลื่อนแถบการแจ้งลงด้วยนิ้วมือ

แตะ  >  เพื่อจัดการการแจ้ง ที่นี่คุณสามารถตรวจสอบและจัดการโปรไฟล์เสียง, Wi-Fi, บลูทูธ, NFC, GPS, แอคเคาท์และการซิงค์, โหมดเครื่องบิน, หมุนจออัตโนมัติ, ความสว่าง, เปิดใช้ข้อมูล, GPS หรือ Portable Wi-Fi hotspot

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อายุแบตเตอรี่, บลูทูธที่ใช้งาน และการเชื่อมต่อข้อมูล

ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด	ไอคอน	รายละเอียด
	ไม่มีการ์ด Micro-USIM		กำลังอัปโหลดข้อมูล
	ไม่มีสัญญาณ		กำลังรับสัญญาณ GPS
	โหมดเครื่องบิน		กำลังรับข้อมูลตำแหน่งจาก GPS
	เชื่อมต่อกับเครือข่าย Wi-Fi		กำลังซิงค์ข้อมูล
	ชุดหูฟังแบบใช้สาย		Gmail ใหม่
	กำลังใช้สาย		ข้อความ Google Talk ใหม่
	พักสาย		ข้อความใหม่
	ลำโพง		กำลังเล่นเพลง
	ปิดไมโครโฟนโทรศัพท์		กำลังใช้งานการปล่อยสัญญาณผ่าน USB
	สายไม่ได้รับ		กำลังใช้งาน Portable Wi-Fi hotspot
	เปิดบลูทูธ		กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot
	คำเตือนระบบ		
	ตั้งปลุก		
	ข้อความเสียงใหม่		
	ปิดเสียงเรียกเข้า		
	เปิด NFC แล้ว		
	โหมดสั่น		
	ชาร์จแบตเตอรี่เต็มแล้ว		
	กำลังชาร์จแบตเตอรี่		
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB		
	กำลังดาวน์โหลดข้อมูล		

หน้าจอหลักของคุณ

แป้นพิมพ์บนหน้าจอ

คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความ ในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะฟิลด์ข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกด และการป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

  แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณสามารถแตะแท็บนี้ค้างไว้เพื่อดูเมนูตั้งค่าได้

 แตะเพื่อเว้นวรรค

 แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

 แตะเพื่อลบตัวอักษรก่อนหน้า

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปนเป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á")

ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มชุมเข้าจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ

แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่าย เพื่อลงชื่อเข้าใช้แอคเคาท์ Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google ของคุณ:

- ลงชื่อเข้าใช้แอคเคาท์ Google จากหน้าจอตั้งค่าที่แสดง
หรือ

- แตะ  > แตะ แอปฯ > เลือกแอปพลิเคชัน Google เช่น **Gmail** > เลือก สร้าง เพื่อสร้างแอคเคาท์ใหม่

หากคุณมีแอคเคาท์ Google ให้แตะ **ที่มีอยู่** ป้อนอีเมลแอดเดรสและรหัสผ่านของคุณ จากนั้นแตะ **ลงชื่อเข้าใช้**

เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ขึ้นอยู่กับการตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากซิงโครไนซ์ คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

Wi-Fi


ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (WAP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "Hotspot" จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันที จุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ ปิด Wi-Fi เมื่อคุณไม่ได้ใช้ เพื่อยืดอายุแบตเตอรี่

หมายเหตุ: ถ้าคุณอยู่นอกพื้นที่ Wi-Fi หรือตั้งค่า Wi-Fi เป็น ปิด อาจมีการคิดค่าใช้จ่ายเพิ่มเติม โดยผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่สำหรับการใช้งานข้อมูลโทรศัพท์เคลื่อนที่

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **Wi-Fi** จาก ตั้งค่าการเชื่อมต่อ
- 2 ตั้งค่า **Wi-Fi** เป็น **เปิด** เพื่อเปิดและเริ่มต้นสแกนหาเครือข่าย Wi-Fi ที่มีอยู่
- 3 แตะเมนู Wi-Fi อีกครั้งเพื่อดูรายการของเครือข่าย Wi-Fi ที่ใช้งานและที่อยู่ในระยะ
 - เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ
- 4 แตะที่เครือข่ายเพื่อเชื่อมต่อ
 - หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้ป้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)
- 5 ภายหลังการเชื่อมต่อกับเครือข่าย Wi-Fi แถบสถานะจะแสดงไอคอนที่ระบุสถานะของ Wi-Fi


บลูทูธ

คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้องเหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

เคล็ดลับ! ด้วย LG-P895 คุณสามารถสนุกสนานกับบลูทูธความเร็วสูงได้ หากอุปกรณ์ที่คุณต้องการแบ่งปันไฟล์สนับสนุนบลูทูธความเร็วสูงด้วย ไฟล์จะถูกส่งผ่านเครือข่ายความเร็วสูงโดยอัตโนมัติ ในการส่งข้อมูลด้วยบลูทูธความเร็วสูง ก่อนใช้โปรดตรวจสอบว่า Wi-Fi เป็น ปิด แล้วในอุปกรณ์ของคุณ การตั้งค่าบลูทูธความเร็วสูงอาจแตกต่างกันขึ้นอยู่กับอุปกรณ์ โปรดตรวจสอบการตั้งค่าของอุปกรณ์กับผู้ให้บริการ

การเปิดบลูทูธและการจับคู่โทรศัพท์ของคุณกับอุปกรณ์บลูทูธ

คุณต้องจับคู่อุปกรณ์ของคุณกับอุปกรณ์อื่นก่อนที่จะเชื่อมต่อกับอุปกรณ์นั้น

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ตั้งค่า บลูทูธ** เป็น **เปิด** จากตั้งค่าการเชื่อมต่อ
- 2 แตะเมนู **บลูทูธ** อีกครั้ง โทรศัพท์ของคุณจะสแกนหาและแสดง ID ของอุปกรณ์บลูทูธที่อยู่ในช่วงสัญญาณทั้งหมด ถ้าอุปกรณ์ที่คุณต้องการจับคู่ไม่อยู่ในรายการ ให้

ตรวจสอบว่าอุปกรณ์เป้าหมายได้รับการตั้งค่าให้สามารถค้นหาได้ แล้วแตะ **Search for devices** อีกครั้ง

- 3 เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น

การส่งรูปภาพโดยใช้บลูทูธ

- 1 เลือก **รูปภาพ** >  > **บลูทูธ**
- 2 ตรวจสอบว่า **บลูทูธ** เป็น **เปิด** แล้วเลือก **Search for devices**
- 3 เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ

การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์

การปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot เป็นคุณสมบัติที่ยอดเยี่ยมในกรณีที่ไม่มีสายเชื่อมต่อไร้สายให้ใช้งาน คุณสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์มากกว่าหนึ่งเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi hotspot ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนในแถบการแจ้งเตือน

สำหรับข้อมูลล่าสุดเกี่ยวกับการแชร์และฮอตสปอตเคลื่อนที่ รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่ <http://www.android.com/tether>

การเปลี่ยนการตั้งค่า Portable Wi-Fi hotspot:

- แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > **ข้อมูล** จากตั้งค่าการเชื่อมต่อ > **Portable Wi-Fi hotspot** > เลือกตัวเลือกที่คุณต้องการปรับ

เคล็ดลับ!

หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ (เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการแชร์ แต่หากกำลังใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่น คุณอาจจำเป็นต้องเตรียมการเครื่องคอมพิวเตอร์ของคุณสำหรับการเชื่อมต่อเครือข่ายด้วย USB สำหรับข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การเปลี่ยนชื่อหรือรักษาความปลอดภัยของ Portable hotspot

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

- 1 บนหน้าจอหลัก ให้แตะ  > แท็บ **แอปฯ** > **ตั้งค่า**
- 2 แตะ **ข้อมูล** จากตั้งค่าการเชื่อมต่อ และเลือก **Portable Wi-Fi hotspot**
- 3 ตรวจสอบให้แน่ใจว่าเลือก **Portable Wi-Fi hotspot** ไว้แล้ว
- 4 แตะ **ตั้งค่า Wi-Fi Hotspot**

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

- กล้องโต้ตอบ **ตั้งค่า Wi-Fi Hotspot** จะเปิดขึ้น
- คุณสามารถเปลี่ยน SSID (ชื่อ) ของเครือข่าย ที่จะปรากฏให้คอมพิวเตอร์หรืออุปกรณ์เครื่องอื่นๆ เห็นเมื่อทำการสแกนหาเครือข่าย Wi-Fi
- นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)
- หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟिलด์รหัสผ่านจะถูกเพิ่มลงในกล่องโต้ตอบ **ตั้งค่า Wi-Fi Hotspot** ถ้าคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวเมื่อทำการเชื่อมต่อ hotspot ของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถตั้งค่า **เปิด** ในเมนู **ระบบป้องกัน** เพื่อลบระบบป้องกันออกจากเครือข่าย Wi-Fi ของคุณ


5 แตะ **บันทึก**

ข้อควรระวัง!

หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็น **เปิด** คุณจะไม่สามารถป้องกันการให้บริการออนไลน์โดยไม่ได้รับอนุญาตของบุคคลอื่นและอาจมีค่าใช้จ่ายเพิ่มเติม คุณควรเปิดใช้งานตัวเลือกระบบป้องกันเสมอ เพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

การใช้ **Wi-Fi Cast**

คุณสามารถแบ่งปันเนื้อหาที่เป็นเพลง รูปภาพ และวิดีโอให้กับผู้ใช้คนอื่นๆ ที่ใช้โทรศัพท์ Android และเชื่อมต่อผ่านเครือข่าย Wi-Fi และ Wi-Fi Direct เดียวกันได้ ตรวจสอบเครือข่าย Wi-Fi และ Wi-Fi Direct ของคุณล่วงหน้า และตรวจสอบว่าผู้ใช้เชื่อมต่อกับเครือข่ายเดียวกัน

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ข้อมูล** จากตั้งค่าการเชื่อมต่อ > **Wi-Fi Direct**
- 2 แตะช่องทำเครื่องหมาย Wi-Fi Direct เพื่อเปิด
- 3 เลือกอุปกรณ์ที่ต้องการเชื่อมต่อจากรายการอุปกรณ์ที่สแกนหา
- 4 แตะ **เชื่อมต่อ**

การใช้งาน **Wi-Fi Direct** เพื่อแบ่งปันผ่าน **SmartShare**

Wi-Fi Direct จะสแกนหาอุปกรณ์ Wi-Fi Direct ที่อยู่ในบริเวณใกล้เคียงโดยอัตโนมัติ และอุปกรณ์ที่ค้นหาพบจะปรากฏอยู่บนหน้าจอโดยเรียงตามลำดับการค้นหา และคุณสามารถเลือกอุปกรณ์ที่ต้องการเพื่อทำการแบ่งปันข้อมูลมัลติมีเดียผ่าน SmartShare ได้ Wi-Fi Direct จะไม่สามารถใช้งานได้ในขณะที่ใช้ฟังก์ชัน Wi-Fi อื่นๆ อยู่

- 1 แตะ  > แตะ **แอปฯ** > **ตั้งค่า** > **ข้อมูล** จากตั้งค่าการเชื่อมต่อ > **Wi-Fi Direct**
- 2 เลือกอุปกรณ์ที่ต้องการเชื่อมต่อจากรายการอุปกรณ์ที่สแกนหา




สร้างกลุ่ม – แตะเพื่อเปิดใช้โหมดเจ้าของกลุ่ม ซึ่งจะทำให้อุปกรณ์ Wi-Fi รุ่นเก่าสามารถเชื่อมต่อได้ด้วยการสแกนหาโทรศัพท์ของคุณ ในกรณีนี้ คุณจะต้องป้อนรหัสผ่านที่ตั้งไว้ใน **รหัสผ่าน**

หมายเหตุ: เมื่อโทรศัพท์ของคุณอยู่ในโหมดเจ้าของกลุ่ม จะใช้พลังงานแบตเตอรี่มากกว่าปกติ การเชื่อมต่อ Wi-Fi Direct ไม่รวมบริการอินเทอร์เน็ต เมื่อเชื่อมต่อและใช้บริการออนไลน์อาจมีค่าใช้จ่ายเพิ่มเติม โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่ายไร้สาย อุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้






การเปิด SmartShare และอนุญาตให้แบ่งปันเนื้อหา

- 1 แตะ  > แตะ **แอปฯ** > **SmartShare** 
- 2 แตะที่ปุ่ม **เมนู**  > **ตั้งค่า**
- 3 แตะ **ค้นหาได้** เพื่อให้อุปกรณ์อื่นๆ สามารถตรวจหาอุปกรณ์ของคุณได้
 - แตะ **รับคำขอเสมอ** หากคุณต้องการยอมรับคำขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
 - แตะ **รับไฟล์** หากคุณต้องการอนุญาตให้อุปกรณ์อื่นอัปโหลดไฟล์มีเดียไปยังโทรศัพท์ของคุณได้
- 4 ในส่วน **เนื้อหาที่แบ่งปันของฉัน** ให้แตะเพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก **รูปภาพ**, **วิดีโอ** และ **เพลง**
- 5 **SmartShare** เปิดใช้งานแล้วและพร้อมแบ่งปันเนื้อหา

ในการควบคุมอุปกรณ์แสดงผล

ให้อุปกรณ์แสดงผลของคุณ (เช่น โทรทัศน์) เล่นเนื้อหาที่มีเดียจากไลบรารีเนื้อหาระยะไกลของคุณ (เช่น คอมพิวเตอร์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA ในอุปกรณ์ของคุณ (เช่น โทรทัศน์และคอมพิวเตอร์) อย่างถูกต้องแล้ว

- 1 แตะ  > แตะ **แอปฯ** > **SmartShare** 
- 2 แตะปุ่ม **To**  และเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
- 3 แตะปุ่ม **From**  และเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
- 4 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 5 แตะภาพขนาดเล็กของเนื้อหาค้างไว้ และเลื่อนไปยังพื้นที่ด้านบนด้วยนิ้วของคุณ หรือแตะปุ่ม **เมนู** >  **เล่น**

การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่น โทรทัศน์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

- 1 ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน คลังภาพ ให้แตะที่  /  /  **บริเวณ** ชื่อ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

 : ต้องเป็นเครือข่ายที่เชื่อมต่อแล้ว

 : เลือกอุปกรณ์บนเครือข่าย

 : ในตอนนี้ เนื้อหาจะถูกแบ่งปันผ่านทาง SmartShare

2 เลือกอุปกรณ์จากรายการอุปกรณ์แสดงผลเพื่อเล่นไฟล์

โปรดทราบ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้

อุปกรณ์ DLNA บางประเภท (เช่น ทีวี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล

อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล

1 แตะ  > แท็บ แอปฯ > SmartShare 

2 แตะปุ่ม **From**  และเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล

3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้

4 แตะค้างที่ภาพขนาดเล็กของเนื้อหา แล้วแตะ **ดาวน์โหลด**

หมายเหตุ: ไม่สนับสนุนเนื้อหาบางประเภท

การอัปโหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล

หมายเหตุ: ตรวจสอบว่าติดตั้งที่เก็บข้อมูลภายในอย่างถูกต้องและเลือกตัวเลือกรับไฟล์ในเมนูตั้งค่าแล้ว

1 แตะ  > แท็บ แอปฯ > SmartShare 

2 แตะปุ่ม **From**  และเลือก โทรศัพท์ของฉัน

3 คุณสามารถเรียกดูไลบรารีเนื้อหาภายในได้





4 แตะค้างที่ภาพขนาดเล็กของเนื้อหา แล้วแตะ **อัปโหลด**

5 เลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกลที่จะอัปโหลด

หมายเหตุ: อุปกรณ์ที่ใช้ DLNA บางประเภทไม่สนับสนุนฟังก์ชันอัปโหลด DMS และจะไม่อัปโหลดไฟล์ ไม่สนับสนุนเนื้อหาบางประเภท


การโทร

การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกด ในการลบตัวเลข ให้แตะ 
- 3 แตะ  เพื่อโทรออก
- 4 ในการวางสาย ให้แตะไอคอน **วางสาย** 

เคล็ดลับ! ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่  0+

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **ค้นหารายชื่อ**
- 3 ในรายชื่อ ให้แตะรายชื่อสองครั้งหรือแตะ  ที่คุณต้องการโทรออก

การรับสายและการปฏิเสธสายเรียกเข้า

เมื่อคุณได้รับสายเรียกเข้าในสถานะล็อค ให้แตะค้างไว้และเลื่อน  เพื่อรับสายเรียกเข้า

แตะค้างไว้และเลื่อน  เพื่อปฏิเสธสายเรียกเข้า

แตะค้างไว้และเลื่อนไอคอน **ข้อความด่วน** จากด้านล่างหากคุณต้องการส่ง






เคล็ดลับ! ข้อความด่วน

คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายพร้อมส่งข้อความ ในระหว่างการประชุม

การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใช้สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์

การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **เมนู > เพิ่มสาย** และหมายเลข นอกจากนี้ คุณสามารถไปที่รายการที่โทรล่าสุดได้โดยแตะ  หรือสามารถค้นหารายชื่อได้โดยแตะ  และเลือกรายชื่อที่คุณต้องการโทร
- 2 แตะ  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อคและพักสายไว้
- 4 แตะหมายเลขที่แสดงเพื่อสลับสาย หรือแตะที่  **รวมสาย** เพื่อทำการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้แตะ **วางสาย** หรือกดปุ่ม **หน้าหลัก** และเลื่อนแถบการแจ้งเตือน และเลือกไอคอน **วางสาย** 

การโทร

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร

บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ **บันทึกการโทร** 
ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ! กดปุ่ม **เมนู** จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

1 บนหน้าจอหลัก ให้แตะ 

2 แตะเมนู

3 แตะ **ตั้งค่าการโทร** และเลือกตัวเลือกที่คุณต้องการปรับ

จำกัดการโทร – เปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้
คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณ เฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

บริการขอความเสียหาย – ให้คุณเลือกบริการขอความเสียหายของผู้ให้บริการ

ตั้งค่าขอความเสียหาย – หากคุณใช้บริการขอความเสียหายของผู้ให้บริการ ตัวเลือกนี้จะให้คุณป้อนหมายเลขขอความเสียหายที่ใช้ฟังและจัดการขอความเสียหายของคุณ

บันทึกหมายเลขที่ไม่รู้จัก – เพิ่มหมายเลขที่ไม่รู้จักลงในรายชื่อหลังจากการโทร

ปฏิเสธการรับสาย – ตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจาก **ปิดใช้งาน**, **ปฏิเสธสายในรายการ** หรือ **ปฏิเสธทุกสาย**

ขอความด่วน – เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

การส่งต่อสาย – เลือกว่าจะโอนทุกสาย, โอนเมื่อสายไม่ว่าง, โอนเมื่อไม่รับสาย หรือ โอนเมื่อไม่มีสัญญาณ

ป้องกันการโทร – เลือกเมื่อคุณต้องการป้องกันการโทรออก ป้อนรหัสผ่านสำหรับจำกัดการโทร โปรดตรวจสอบกับผู้ให้บริการเครือข่ายของคุณเกี่ยวกับบริการนี้

เวลาโทร – ดูระยะเวลาการโทรทั้งหมด ได้แก่ โทรครั้งล่าสุด ทุกสาย สายที่โทรออก และสายที่ได้รับ

ค่าโทร – ดูค่าใช้จ่ายการโทรของคุณ (บริการนี้ขึ้นอยู่กับเครือข่าย ผู้ให้บริการบางรายไม่รองรับฟังก์ชันนี้)

ตั้งค่าเพิ่มเติม – ตัวเลือกนี้จะช่วยให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:
ข้อมูลผู้โทร: เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่
สายเรียกซ้อน: หากเปิดใช้สายเรียกซ้อน คุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังสนทนาอยู่ (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

รายชื่อ



เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

ในหน้าจอหลัก

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะ ค้นหารายชื่อ และป้อนชื่อผู้ติดต่อโดยใช้คีย์บอร์ด


การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วกดปุ่ม เมนู แตะ เพิ่มในรายชื่อ > สร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพ เลือกจาก ถ่ายภาพ หรือ เลือกจากคลังภาพ
- 3 เลือกประเภทรายชื่อโดยแตะ 
- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ
- 5 แตะ บันทึก



เพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเหลือง

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

- 1 แตะ  เพื่อเปิดรายชื่อ
- 2 แตะแท็บ  และเลือกรายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวสีเหลืองทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายชื่อเพื่อนสนิท

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่



เอ็กซ์พอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม **PC Sync**

- 1 ติดต่อ "LG PC Suite" ในคอมพิวเตอร์ก่อน เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 ที่เมนูบนสุด เลือก **Device > Import to device > Import contacts**
- 3 หน้าต่างป๊อปอัปเพื่อเลือกประเภทไฟล์และไฟล์ที่จะอิมพอร์ตจะปรากฏขึ้น
- 4 บนบ๊อปอัป คลิก **Select a file** แล้ว Windows Explorer จะปรากฏขึ้น
- 5 เลือกไฟล์รายชื่อที่จะอิมพอร์ตใน Windows Explorer แล้วคลิก **Open**
- 6 คลิก **OK**
- 7 ป๊อปอัป **Field mapping** เพื่อลิงค์รายชื่อในอุปกรณ์ของคุณและข้อมูลรายชื่อใหม่จะปรากฏขึ้น
- 8 หากมีการขัดแย้งระหว่างข้อมูลในรายชื่อ PC และรายชื่ออุปกรณ์ ให้ทำการเลือกหรือแก้ไขที่จำเป็นใน LG PC Suite
- 9 คลิก **OK**


ขอความช่วยเหลือ

โทรศัพท์ LG-P895 ของคุณได้ผสมผสาน SMS และ MMS ไว้ในเมนูที่ใช้ง่ายเพียงเมนูเดียว

การส่งข้อความ

- 1 แตะ  บนหน้าจอหลักและแตะ  เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิลด์ ถึง ขณะที่คุณป้อนรายชื่อ รายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณสามารถเพิ่มรายชื่อหลายรายการได้

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 แตะฟิลด์ป้อนข้อความ และเริ่มต้นเขียนข้อความ
- 4 กด  เพื่อเปิดเมนูตัวเลือก เลือกจาก **เพิ่มชื่อเรื่อง, ยกเลิก, แทรกสไมลีย์ และทุกข้อความ**

เคล็ดลับ! คุณสามารถแตะไอคอน  เพื่อแนบไฟล์ที่ต้องการแบ่งปันไปกับข้อความของคุณ

- 5 แตะที่ **ส่ง** เพื่อส่งข้อความ
- 6 การตอบกลับปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เธรดข้อความจะถูกสร้างขึ้น

⚠ คำเตือน: การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

⚠ คำเตือน: หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

กล่องเธรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การใช้สไมลีย์

ทำให้ข้อความของคุณสนุกสนานมากขึ้นด้วยการใช้สไมลีย์ เมื่อเขียนข้อความใหม่ ให้กดปุ่ม **เมนู** แล้วเลือก **แทรกสไมลีย์**

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ LG-P895 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้นคุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ

- 1 แตะไอคอน **ข้อความ** บนหน้าจอหลัก จากนั้นแตะปุ่ม **เมนู** และแตะ **ตั้งค่า**

อีเมล

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมล จากบริการอื่นๆ เช่น Gmail ได้ แอปพลิเคชันอีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณสามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้นเพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

การเพิ่มแอคเคาท์อีเมลอื่น:

- แตะ  > แท็บ แอปฯ > อีเมล > ในหน้าจอแอคเคาท์ ให้แตะ  > เพิ่มแอคเคาท์

หลังจากการตั้งค่าครั้งแรก อีเมล จะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

- แตะ  > แท็บ แอปฯ > อีเมล > ในหน้าจอแอคเคาท์ ให้แตะ  > ตั้งค่า


การลบแอคเคาท์อีเมล:

- แตะ  > แท็บ แอปฯ > อีเมล > ในหน้าจอแอคเคาท์ ให้แตะ  > ลบแอคเคาท์ > แตะที่แอคเคาท์ที่คุณต้องการลบ > ลบ > ตกลง

หน้าจอแอคเคาท์อีเมล

คุณสามารถแตะที่แอคเคาท์เพื่อดู แถบเข้า

แอคเคาท์ที่คุณใช้สำหรับส่งอีเมลตามค่าเริ่มต้นจะมีเครื่องหมายถูกเลือกไว้อยู่

 – แตะเพื่อเปิดแถบเข้ารวม ซึ่งมีข้อความที่ส่งถึงแอคเคาท์ของคุณทั้งหมด ข้อความในแถบเข้ารวม จะมีรหัสสีแสดงอยู่ทางด้านซ้าย แบ่งตามแอคเคาท์ โดยสีที่ใช้จะเป็นสีเดียวกับที่ใช้กับแอคเคาท์ในหน้าจอ แอคเคาท์

 – แตะไอคอนโฟลเดอร์เพื่อเปิดโฟลเดอร์แอคเคาท์

เคล็ดลับ!

หากคุณกดที่แอคเคาท์ค้างไว้จากรายการของแอคเคาท์อีเมล คุณสามารถเลือกตัวเลือกที่ต้องการในหน้าต่างป๊อปอัปได้

ตัวอย่างเช่น เลือก เพิ่มในหน้าจอหลัก เพื่อสร้างไอคอนปุ่มลัดของแอคเคาท์บนหน้าจอหลัก




การทำงานกับโฟลเดอร์แอคเคาท์

แต่ละแอคเคาท์ประกอบด้วยโฟลเดอร์ แถบเข้า, แถบออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน

อีเมล

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ


- 1 ในขณะที่อยู่ในแอปพลิเคชัน อีเมล ให้แตะ 
- 2 ป้อนแอดเดรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษร แอดเดรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น ค้นแอดเดรสแต่ละแอดเดรสด้วยเครื่องหมายอัฒภาค
- 3 แตะฟิลด์ Cc/Bcc เพื่อเพิ่ม Cc/Bcc และแตะ  เพิ่มแนบไฟล์ หากต้องการ
- 4 ป้อนตัวอักษรในข้อความ
- 5 แตะ 

หากคุณไม่ได้เชื่อมต่อกับเครือข่าย ตัวอย่างเช่น หากคุณกำลังใช้งานในโหมดเครื่องบิน ข้อความที่คุณต้องการส่งจะถูกเก็บในโฟลเดอร์ ถัดออก จนกว่าจะเชื่อมต่อกับเครือข่ายอีกครั้ง หากมีข้อความที่กำลังรอส่งอยู่ ถัดออก จะปรากฏบนหน้าจอแอดเดรส

เคล็ดลับ! เมื่อถาดเข้ามามีอีเมลใหม่เข้ามา คุณจะได้รับแจ้งด้วยเสียงพร้อมการสั่น แตะที่การแจ้งอีเมลเพื่อหยุดการแจ้ง

กล้องถ่ายรูป


ทำความรู้จักกับช่องมองภาพ

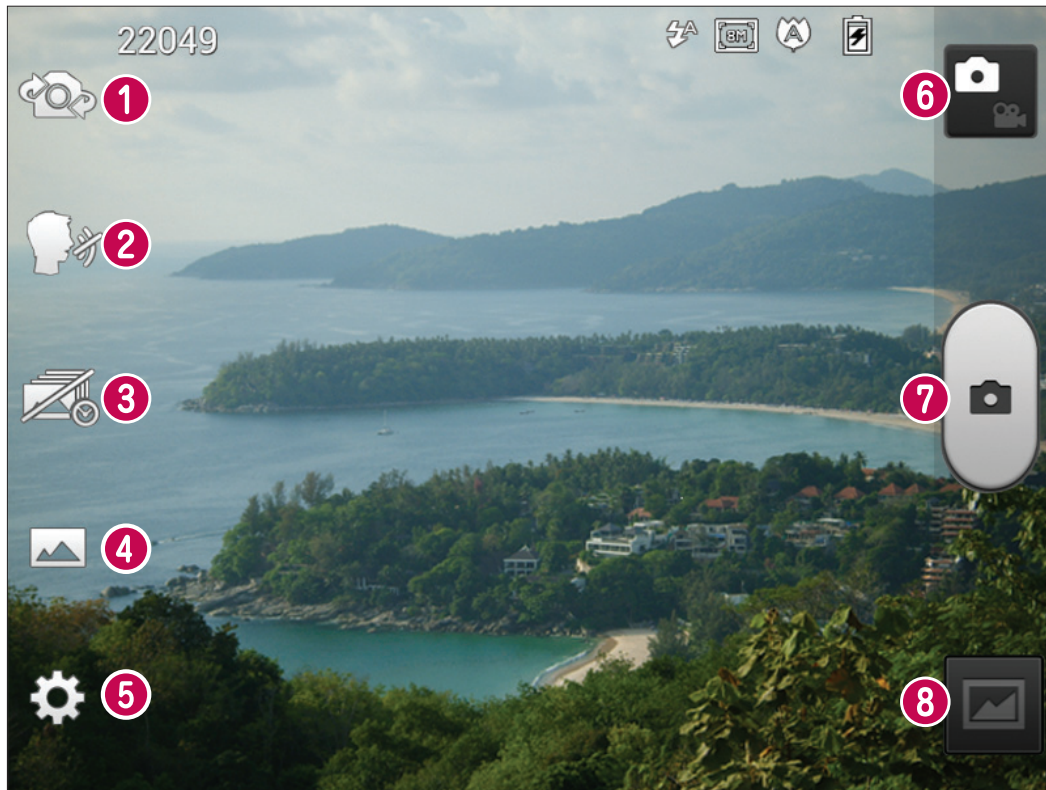

- 1 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ซีลชัตเตอร์ – พูดว่า "ซีล" เมื่อคุณต้องการถ่ายภาพ
- 3 โหมดแคชชอต –แตะที่ไอคอนนี้เพื่อถ่ายภาพช่วงเวลาที่ยาวไปก่อนการกดชัตเตอร์
- 4 โหมดช็อต – เลือกจาก ปกติ, HDR, พาโนรามา หรือ ช็อตต่อเนื่อง
- 5 ตั้งค่า –แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 6 โหมดวิดีโอ –แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดวิดีโอ
- 7 การถ่ายภาพ
- 8 คลังภาพ –แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูคลังภาพและดูภาพถ่ายที่บันทึกไว้ภายในโหมดกล้องถ่ายรูป

กล้องถ่ายรูป

การถ่ายภาพด่วน

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป
- 2 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 แตะหน้าจอและช่องโฟกัสจะปรากฏขึ้นในช่องมองภาพ
- 4 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 5 คลิก  เพื่อถ่ายภาพ

เมื่อคุณถ่ายภาพแล้ว

แตะ  เพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย

 แตะเพื่อแบ่งปันรูปโดยใช้ **บลูทูธ, อีเมล, Gmail, Google+, บันทึกลง, ข้อความ, Picasa และ Social+**

เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันภาพถ่ายของคุณกับชุมชน SNS ได้

 แตะเพื่อลบรูป

แตะ  เพื่อเปิดตัวเลือก

ตั้งค่าภาพเป็น – แตะเพื่อใช้รูปเป็นภาพของรายชื่อติดต่อ ภาพพื้นหลังหน้าจอหลักหรือพื้นหลังล็อคหน้าจอ

ย้าย – แตะเพื่อย้ายรูปไปยังตำแหน่งอื่น

แก้ไข – แตะเพื่อแก้ไขชื่อของภาพที่เลือก

หมุนซ้าย/ขวา – หมุนไปทางซ้ายหรือขวา

ตัดภาพ – ตัดภาพถ่ายของคุณ เลื่อนนิ้วของคุณบนหน้าจอเพื่อเลือกพื้นที่

แก้ไข – ดูและแก้ไขรูปภาพ

เลือกความละเอียดของรูป หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่า你可以สามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง

FX ปรับปรุงคุณภาพสีในสภาพแสงต่างๆ

 ใช้เอฟเฟกต์ศิลปะกับรูปภาพ

 ใช้ตัวเลือกเพิ่มเติมสำหรับรูปภาพ

สไลด์โชว์ – แสดงรูปภาพหลังจากภาพอื่นโดยอัตโนมัติ

รายละเอียด – แสดงข้อมูลรูปภาพ

การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด












 – แตะ หากคุณต้องการเปลี่ยนแปลงเมนูช่องมองภาพ

 – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า





 – พูดว่า Cheese เมื่อคุณต้องการถ่ายภาพ

 – แตะไอคอนนี้เพื่อถ่ายภาพช่วงเวลาที่ยาวไปก่อนการกดชัตเตอร์

 – เลือกจาก ปกติ, HDR, พาโนรามา หรือ ซื้อมาต่อเนื่อง

-  – ให้คุณเปิดแฟลชเมื่อถ่ายภาพในสภาพแวดล้อมที่มืด
-  – ซูมเข้าหรือซูมออก
-  – ตัวเล็กรนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าไปในรูป
-  – โฟกัสเฉพาะจุด
-  – เลือกความละเอียดของรูป หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่า你可以สามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง
-  – ค้นหาการตั้งค่าสีและแสงสว่างที่เหมาะสมกับสภาพแวดล้อมในปัจจุบัน เลือกจาก **ปกติ, รูปคน, ทิวทัศน์, กีฬา หรือ กลางคืน**
-  – ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มืดในขณะที่คุณไม่สามารถใช้แฟลชได้
-  – ปรับปรุงคุณภาพสีในสภาพแสงต่างๆ
-  – ใช้เอฟเฟกต์ศิลปะกับรูปภาพ
-  – ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้
-  – เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการและแท็กรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แท็กไปยังบล็อกที่สนับสนุนแท็กตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่

หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งาน GPS เท่านั้น


-  – เลือกเสียงชัตเตอร์
-  – แสดงรูปภาพที่คุณถ่ายล่าสุดโดยอัตโนมัติ
-  – เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป
-  – แต่ละเมื่อใดก็ตามที่คุณต้องการทราบว่าฟังก์ชันต่างๆ ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อกับคุณ

เคล็ดลับ! เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง, โทนสี, ตัวตั้งเวลาและโหมดถ่ายภาพ ตรวจสอบค่าเหล่านี้ ก่อนที่คุณจะถ่ายภาพครั้งถัดไป

เคล็ดลับ! เมนูการตั้งค่าซ่อนทับอยู่บนช่องมองภาพ ดังนั้นเมื่อคุณเปลี่ยนส่วนประกอบด้านสีหรือคุณภาพของภาพ คุณจะเห็นดูตัวอย่างของรูปที่เปลี่ยนได้ที่ด้านหลังเมนูการตั้งค่า


กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

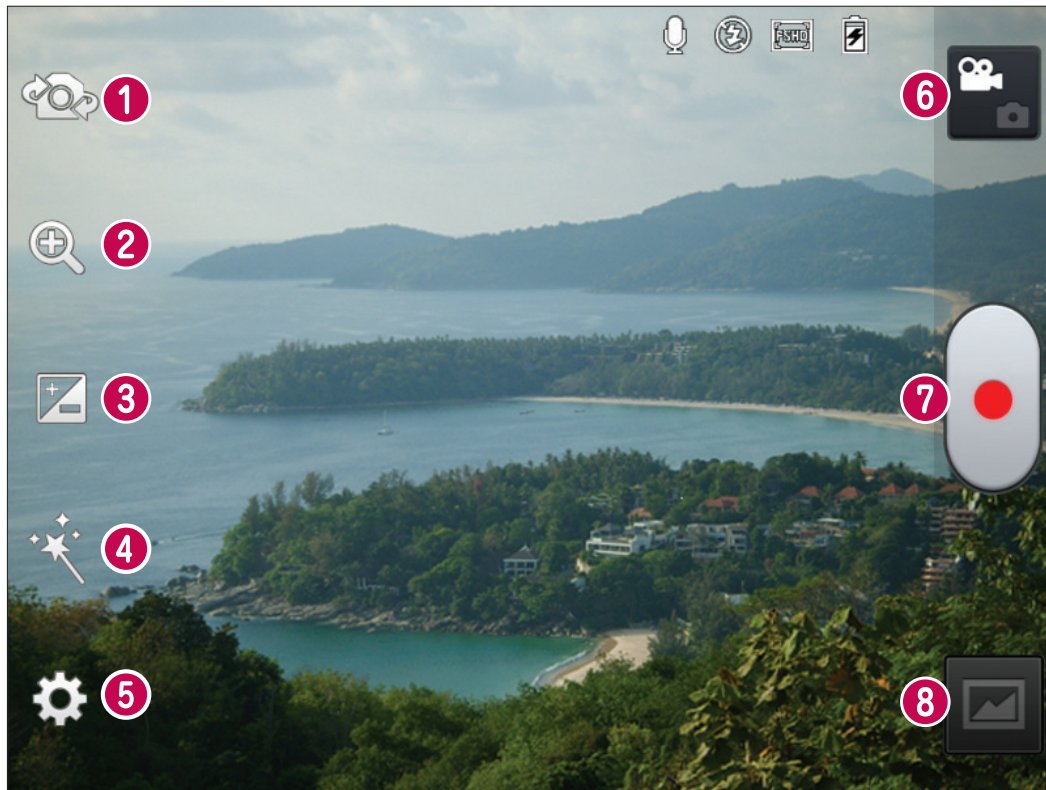

- 1 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ซูม – ซูมเข้าหรือซูมออก
- 3 ความสว่าง – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าในวิดีโอ
- 4 Live effect – Live effect มีเอฟเฟกต์ที่มองเห็นได้เมื่อถ่ายวิดีโอ
- 5 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 6 โหมดกล้องถ่ายรูป – แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 7 เริ่มการบันทึก
- 8 คลังภาพ – แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูคลังภาพและดูวิดีโอของคุณที่บันทึกไว้จากภายในโหมดวิดีโอ

การถ่ายวิดีโอ

- 1 เปิดแอปพลิเคชันกล้องถ่ายรูปและแตะปุ่มโหมดวิดีโอ
- 2 ช่องมองภาพของกล้องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 กดปุ่มบันทึก  หนึ่งครั้งเพื่อเริ่มการบันทึก
- 5 ไฟสีแดงจะปรากฏที่มุมด้านบนของช่องมองภาพ พร้อมทั้งตัวตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ

เคล็ดลับ!

 – แตะเพื่อถ่ายภาพขณะบันทึกวิดีโอ

- 6 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

หลังการถ่ายวิดีโอ

วิดีโอที่ถ่ายจะปรากฏบนคลังภาพ แตะ  เพื่อดูวิดีโอล่าสุดที่คุณบันทึก

 แตะเพื่อเล่นวิดีโอ

 แตะเพื่อแบ่งปันวิดีโอทาง **บลูทูธ, อีเมล, Gmail, Google+, ข้อความ** หรือ **YouTube**

 แตะเพื่อลบวิดีโอที่คุณเพิ่งถ่ายไว้ ยืนยันโดยการแตะ **ตกลง** ช่องมองภาพจะปรากฏขึ้นอีกครั้ง

แตะ  เพื่อเปิดตัวเลือก

ย้าย – แตะเพื่อย้ายวิดีโอไปยังตำแหน่งอื่น

แก้ไขชื่อ – แตะเพื่อแก้ไขชื่อของวิดีโอที่เลือก

รายละเอียด – แตะเพื่อดูข้อมูลรายละเอียด เช่น ชื่อ วันที่ เวลา ขนาด และประเภท

การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

 – แตะ หากคุณต้องการเปลี่ยนแปลงเมนูช่องมองภาพ


 – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า

 – ซুমเข้าหรือซুমออก

 – ตัวเลือกนี้จะกำหนดและควบคุมปริมาณแสงแดดที่เข้าไปในวิดีโอ

 – มีเอฟเฟกต์ที่มองเห็นได้เมื่อบันทึกวิดีโอ

 – ให้คุณเปิดแฟลชเมื่อถ่ายวิดีโอในสภาพแวดล้อมที่มืด

 – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่บันทึก




 – ปรับปรุงคุณภาพสีในสภาพแสงต่างๆ

 – เลือกโทนสีเพื่อใช้กับรูปภาพมุมมองใหม่

 – เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์

 – เลือก **ปิด** เพื่อบันทึกวิดีโอโดยไม่มีเสียง

กล่องวิดีโอ

-  – รีวิวอัตโนมัติแสดงวิดีโอที่คุณบันทึกล่าสุดโดยอัตโนมัติ
-  – เรียกคืนการตั้งค่าเริ่มต้นของกล่องถ่ายวิดีโอ
-  – แต่ละเมื่อคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร วิธีนี้จะให้คำแนะนำอย่างย่อ
กับคุณ

การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ใช้ปุ่มปรับระดับเสียงที่ด้านขวามือของหน้าจอ

Video Wiz

คุณสามารถสร้างภาพยนตร์ของตัวเองได้ โดยใช้ภาพ/วิดีโอ และเพลงของคุณ

1 จากหน้าจอหลัก ให้แตะปุ่ม แอปฯ > Video Wiz

2 เลือกตัวเลือกที่ต้องการเพื่อสร้างภาพยนตร์



- 1 เพิ่มมีเดีย** – แตะไอคอนนี้เพื่อเพิ่มภาพและ/หรือวิดีโอลงในภาพยนตร์
 - แตะ **ภาพ** เพื่อเพิ่มภาพ แล้วแตะภาพที่คุณต้องการเพิ่ม
 - แตะ **วิดีโอ** เพื่อเพิ่มวิดีโอฟุตเทจ แล้วแตะวิดีโอที่คุณต้องการเพิ่ม
 - แตะ **เสร็จ** เพื่อออก หลังจากเพิ่มไฟล์มีเดียทั้งหมดแล้ว
- 2 ลบมีเดีย** – แตะไอคอนนี้เพื่อลบภาพและ/หรือวิดีโอที่เลือกไว้
 - แตะภาพหรือวิดีโอในส่วนเนื้อหาที่มีเดียที่เพิ่ม แตะ **ลบมีเดีย** แล้วแตะ **ลบที่เลือก** (หรือ **ลบทั้งหมด**)
- 3 เพิ่มรูปแบบ** – แตะไอคอนนี้เพื่อเลือกรูปแบบภาพยนตร์ที่ต้องการ
 - แตะลูกศรขึ้นหรือลงเพื่อเลื่อนดูและเลือกรูปแบบที่คุณต้องการ
- 4 ภาพ/วิดีโอที่เพิ่ม** – แสดงภาพและ/หรือวิดีโอที่เลือกทั้งหมดสำหรับภาพยนตร์ของคุณ
- 5 บันทึก** – แตะไอคอนนี้เพื่อบันทึกไฟล์ภาพยนตร์
- 6 แก้ไข** – แตะไอคอนนี้เพื่อแก้ไขไฟล์ภาพยนตร์
 - ลากไปทางซ้ายหรือขวาเพื่อเลือกฟุตเทจที่จะแก้ไข
 - แตะไอคอน **Overlay Text** เพื่อแทรกข้อความ
 - แตะไอคอน **Overlay Image** เพื่อแทรกกราฟฟิก
 - แตะไอคอน **ตัดวิดีโอ** เพื่อตัดส่วนต่างๆ จากฟุตเทจวิดีโอ
 - แตะไอคอน **เสร็จ** เพื่อออก เมื่อคุณแก้ไขเสร็จสิ้น
- 7 เพิ่มเพลง** – แตะปุ่มนี้เพื่อตั้งค่าเพลงแบ็คกราวด์
- 8 ดูตัวอย่าง** – แตะไอคอนนี้เพื่อเล่นภาพยนตร์ของคุณ
- 9 วิธีใช้** – แตะไอคอนนี้เพื่อดูข้อมูลเกี่ยวกับวิธีใช้แอปพลิเคชัน Video Wiz

มัลติมีเดีย











คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในหน่วยความจำภายในเพื่อเข้าถึงไฟล์มัลติมีเดียทั้งหมดได้อย่างง่ายดาย

เล่นวิดีโอ

โทรศัพท์ LG-P895 มีเครื่องเล่นวิดีโอภายในตัวที่ให้คุณสามารถเล่นวิดีโอที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะ  > แท็บ แอปฯ > เล่นวิดีโอ

การเล่นวิดีโอ

- 1 บนหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > เล่นวิดีโอ
- 2 เลือกวิดีโอที่คุณต้องการเล่น

	แตะเพื่อหยุดเล่นวิดีโอชั่วคราว
	แตะเพื่อเล่นวิดีโอต่อ
	แตะเพื่อเดินหน้าไป 10 วินาที
	แตะเพื่อถอยหลังไป 10 วินาที
	แตะเพื่อจัดการระดับเสียงของวิดีโอ
	แตะเพื่อตั้งค่าเอฟเฟกต์เสียง Dolby ขณะเชื่อมต่อกับแจ๊คหูฟัง
	แตะไอคอนระบบควบคุมความเร็วและลากแถบแสดงความคืบหน้าเพื่อควบคุมความเร็วการเล่น
	แตะไอคอนเฟรมพีวีวีและลากที่จับของแถบค้นหาเพื่อดูคอนเทนต์ของจอพีวีวี
	แตะเพื่อล็อกหน้าจอวิดีโอ
	แตะไอคอนซิปไตเติลรายการโดยตรงเพื่อดูรายการวิดีโอ

หากต้องการเปลี่ยนระดับเสียงในขณะที่ดูวิดีโอ ให้กดปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านขวามือของโทรศัพท์

แตะวิดีโอในรายการค้างไว้ จะปรากฏตัวเลือก **ลบ** และ **รายละเอียด**

คลังภาพ

แตะ  > แท็บ แอปฯ > **คลังภาพ** เปิดรายการของแถบแคตตาล็อกที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้

เครื่องเล่นเพลง










โทรศัพท์ LG-P895 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ ในการเข้าใช้งานเครื่องเล่นเพลง ให้แตะ  > แท็บ แอปฯ > เล่นเพลง

การโอนไฟล์เพลงโดยใช้อุปกรณ์จัดเก็บข้อมูล USB

- 1 เชื่อมต่อโทรศัพท์ LG-P895 กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณ คุณต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เลือก **ตั้งค่า > เชื่อมต่อ > ประเภทการเชื่อมต่อ USB** แล้วเลือก **ซิงค์มีเดีย (MTP)**
- 3 คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณ และโอนไฟล์

การเล่นเพลง

- 1 บนหน้าจอหลัก ให้แตะ  > แตะ **แอปฯ > เล่นเพลง**
- 2 แตะ **เพลง**
- 3 เลือกเพลงที่คุณต้องการเล่น

	แตะเพื่อหยุดการเล่นไว้ชั่วคราว
	แตะเพื่อเริ่มเล่นต่อ
	แตะเพื่อข้ามไปที่แทร็คถัดไปในอัลบั้ม รายการเล่น
	แตะเพื่อย้อนไปยังช่วงเริ่มต้นของเพลงนั้น แตะสองครั้งเพื่อกลับไปเพลงก่อนหน้า
	แตะเพื่อจัดการระดับเสียงของเพลง
	แตะเพื่อตั้งค่าโหมดซ้ำ
	แตะเพื่อตั้งค่าโหมดสับเปลี่ยน
	แตะเพื่อดูรายการเพลงปัจจุบัน
	แตะเพื่อดูเนื้อเพลง ตัวเลือกนี้ใช้ได้เมื่อเพลงมีเนื้อเพลงมาด้วยเท่านั้น

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านขวามือของโทรศัพท์

แตะเพลงหนึ่งในรายการเพลงค้างไว้ หน้าจอจะแสดง **เล่น**, **เพิ่มในรายการเพลง**, **ตั้งค่า** เป็นเสียงเรียกเข้า, **ลบ**, **แบ่งปัน**, **ค้นหา** และ **รายละเอียด**

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมาย ลิขสิทธิ์ของแต่ละประเทศ
ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลง
ในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือ
คัดลอกไฟล์ ให้ตรวจสอบกฎหมายฉบับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ


มัลติมีเดีย

LG Tag+

LG Tag+ คืออะไร

LG Tag+ ช่วยให้บันทึกและโหลดแท็ก NFC ได้ง่าย ซึ่งสามารถปรับแต่งให้เหมาะสมกับสภาพแวดล้อมบางอย่างได้

การใช้การเขียน Tag+


- 1 แตะ  > แท็บ แอปฯ > **LG Tag+**
- 2 เลือกโหมดที่ต้องการ (โหมดโทรรถ/ออฟฟิศ/Sleep/ผู้ใช้) และแตะ เขียนในป้าย NFC
- 3 แตะด้านหลังอุปกรณ์ของคุณกับแท็ก แล้วเปิดแอปพลิเคชันและเปลี่ยนแปลงการตั้งค่าได้

การใช้การอ่าน Tag+

เมื่อแตะแท็กที่ตั้งค่า โหมดจะถูกเปิดใช้ทันที

Media Home

การใช้ Media Home

- 1 แตะ  > แท็บ แอปฯ > **Media Home**
- 2 เลือกฟังก์ชันที่ต้องการจากฟังก์ชันวิดีโอ รูปถ่าย เพลง

การตั้งค่า Media Home

- 1 แตะ  > แท็บ แอปฯ > **Media Home** > ตั้งค่า
- 2 คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ

เคล็ดลับ!

เมื่อคุณเชื่อมต่ออุปกรณ์เข้ากับทีวีหรือจอแสดงผลผ่านสาย MHL แอปฯ Media Home จะเริ่มโดยอัตโนมัติ เมื่อเปิดใช้ **Media Home** > ตั้งค่า > เริ่มอัตโนมัติและปิดอัตโนมัติ

สมุดโน้ต

ด้วยแอปพลิเคชันสมุดโน้ต คุณสามารถจัดการและปรับแต่งข้อมูลที่หลากหลายได้


การจดโน้ต

1 แตะ  > แท็บ แอปฯ > สมุดโน้ต

2 แตะ โน้ตใหม่ เพื่อสร้างโน้ตใหม่

3 เลือกโหมดที่ต้องการ(ปก, หัวข้อ, กระดาษ, สีกระดาษ) แล้ว ตกลง

ทำความรู้จักกับสมุดโน้ต

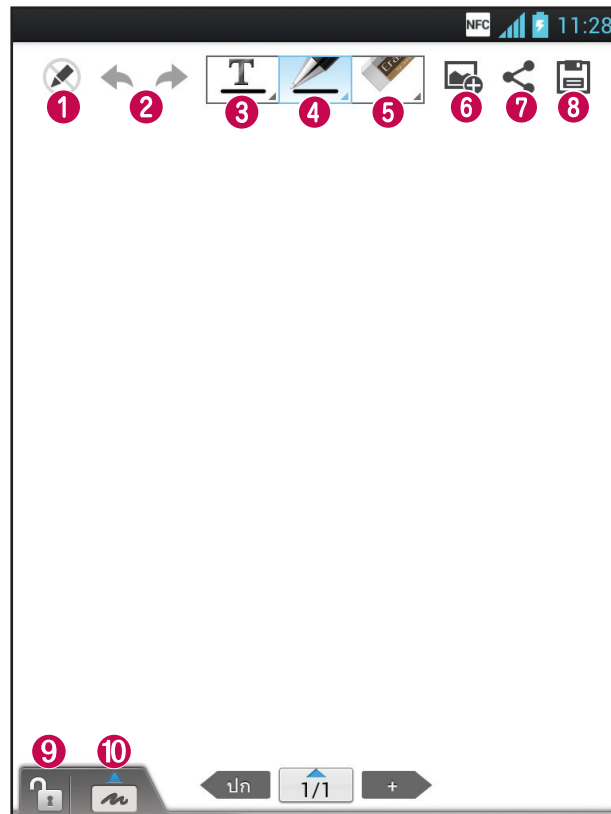


1  - เลือกโหมดอ่านอย่างเดียวหรือโหมดแก้ไข


2  - เลิกทำหรือทำซ้ำ

3  - แตะปุ่มนี้เพื่อเขียน

4  - เลือกประเภทปากกา, ความหนา, ความทึบแสง และสี

5  - ลบบันทึกที่คุณสร้าง

6  - แตะเพื่อแนบไฟล์ด้วย ภาพ, ถ่ายภาพ, วิดีโอ, ถ่ายวิดีโอ, เสียง, บันทึกเสียง, ตำแหน่ง, สติ๊กเกอร์ และ วันที่และเวลา

7  - แบ่งปันโน้ตปัจจุบันผ่านทาง Gmail, อีเมล, Social+, บลูทูธ, ข้อความ, Picasa, Google+, บันทึก

8  - บันทึกโน้ตพร้อมกับหน้าจอบริเวณปัจจุบัน



9  - เลือกเพื่อล็อคหรือปลดล็อคปุ่มด้านหน้า

10  - แตะปุ่มนี้เพื่อเขียนขยายพื้นที่สำหรับป้อนข้อมูล

LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาที่น่าสนใจมากมาย เช่น เกมส์, แอปพลิเคชัน, ฟันหลัง และเสียงเรียกเข้า ทำให้ผู้ใช้โทรศัพท์ LG สามารถสัมผัสกับประสบการณ์ "Mobile Life" ได้มากยิ่งขึ้น




วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ

- 1 แตะ  > แتبแอป > แตะไอคอน  เพื่อเข้าถึง LG SmartWorld
- 2 แตะ ลงชื่อเข้าใช้ และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะ รีจิสเตอร์ และสมัครสมาชิกของ LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ

หมายเหตุ: หากไม่มีไอคอน 

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ เข้าใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 รันและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld โดยการแตะไอคอน 



วิธีการใช้ LG SmartWorld

- เข้าร่วมการส่งเสริมการขาย LG SmartWorld ทุกเดือน
 -  – ค้นหาเนื้อหา
 -  – ค้นหาเนื้อหาตามประเภท (เช่น เกม, การศึกษา, ความบันเทิง และอื่นๆ)
 -  – รายการเนื้อหาที่ดาวน์โหลดหรือเนื้อหาที่ต้องอัปเดต
- ลองใช้ปุ่ม "เมนู" เพื่อค้นหาสิ่งที่คุณต้องการอย่างรวดเร็ว
 - Apps for you** – เนื้อหาที่แนะนำอิงตามตัวเลือกก่อนหน้าของคุณ
 - ตั้งค่า** – ตั้งค่าโปรไฟล์และหน้าจอ
 - ลงชื่อเข้าใช้** – ตั้งค่า ID และรหัสผ่านของคุณ
- และลองใช้ฟังก์ชันอื่นๆ ที่มีประโยชน์ (หน้าจอรายละเอียดเนื้อหา)

หมายเหตุ: LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือผู้ให้บริการบางราย




ยูทิลิตี้

การตั้งเวลาการปลุก



- 1 แตะ  > แท็บ แอปฯ > ตั้งปลุก/นาฬิกา > 
- 2 หลังจากที่กำหนดการปลุกแล้ว โทรศัพท์ LG-P895 จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก
- 3 ตั้งค่า **ซ้ำ**, **ระยะเวลาเลื่อน**, **สั้น**, **เสียงปลุก**, **ลือคปริศนา** และ **บันทึก** แตะ **บันทึก**

หมายเหตุ: ในการเปลี่ยนการตั้งค่าการปลุกในหน้าจอรายการเตือน ให้แตะปุ่ม **เมนู** และเลือก **ตั้งค่า** คุณสามารถปรับตัวเลือกด้านล่าง: การปลุกอยู่ในโหมดเงียบ, ระดับเสียงปลุก, การทำงานของปุ่มด้านข้าง และตัวเลือกลือคปริศนา

การใช้เครื่องคิดเลข

- 1 แตะ  > แท็บ แอปฯ > เครื่องคิดเลข
- 2 แตะปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้แตะที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน แตะ  เลือก **พANEL ขั้้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ
- 5 ในการตรวจสอบประวัติแตะไอคอน 

การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 แตะ  > แท็บ แอปฯ > ปฏิทิน
- 2 บนหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ เดือน นัดหมาย)
- 3 แตะวันที่ที่คุณต้องการเพิ่มเหตุการณ์แล้วแตะ 
- 4 แตะ **ชื่อเหตุการณ์** แล้วป้อนชื่อเหตุการณ์
- 5 แตะ **ตำแหน่ง** และป้อนตำแหน่ง ตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น
- 6 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้แตะ **คำอธิบาย** แล้วป้อนรายละเอียด
- 7 ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้ตั้งค่า **ซ้ำ** และตั้งค่า **เตือนความจำ** ถ้าจำเป็น
- 8 แตะ **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

Tasks (งาน)

งานนี้สามารถสามารถซิงโครไนซ์กับแอคเคาท์ MS Exchange ได้ คุณสามารถสร้าง, แก้ไข และลบงานได้ใน MS Outlook หรือ MS Office Outlook Web Access

ในการซิงโครไนซ์ MS Exchange

- 1 จากหน้าจอหลัก ให้แตะ  > ตั้งค่า
- 2 แตะ **แอคเคาท์และการซิงค์** > **เพิ่มแอคเคาท์**

ยูทิลิตี้

3 แตะ Microsoft Exchange เพื่อสร้างอีเมลแอดเดรสและรหัสผ่าน

4 ตรวจสอบให้แน่ใจว่าคุณได้เลือกงาน Sync

Polaris Office

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้ผู้ใช้ออกเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

แตะ  > แท็บ แอปฯ > **Polaris Office**

การจัดการไฟล์

Polaris Office ให้ผู้ใช้อมือถือจัดการไฟล์ รวมถึงการคัดลอก การย้าย และการวาง และลบไฟล์และโฟลเดอร์ได้อย่างสะดวกบนมือถือ

การดูไฟล์

ผู้ใช้อมือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ใตงายๆ บนมือถือ เมื่อดูเอกสารโดยใช้ Polaris Office ออบเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

FileShare

คุณสมบัตินี้ช่วยให้คุณสามารถแบ่งปันไฟล์จากโทรศัพท์ของคุณได้

1 แตะ  > FileShare

2 เลือกชนิดเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก ภาพ, วิดีโอ, เพลง และเอกสาร

สำรองข้อมูล

เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของสมาร์ทโฟน


ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในที่เก็บข้อมูลภายในเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลสมาร์ทโฟนได้ หากสมาร์ทโฟนของคุณสูญหาย ถูกขโมย หรือเสียหายจากปัญหาที่ไม่คาดคิด

แอปพลิเคชันสำรองข้อมูลนี้สนับสนุนระหว่างสมาร์ทโฟน LG, เวอร์ชันซอฟต์แวร์อื่น หรือ OS อื่น นอกจากนั้น เมื่อคุณซื้อสมาร์ทโฟน LG ใหม่ คุณสามารถสำรองข้อมูลสมาร์ทโฟน LG-P895 ปัจจุบันไปยังเครื่องใหม่ของคุณได้

หากคุณมีแอปพลิเคชันสำรองและเรียกคืนโหลดไว้ล่วงหน้าในสมาร์ทโฟนของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลสมาร์ทโฟนของคุณส่วนใหญ่, แอปพลิเคชัน รวมถึงแอปพลิเคชันที่ไม่มีการป้องกันและการตั้งค่า, แอปพลิเคชัน (ดาวน์โหลด), แอปพลิเคชัน (ติดตั้งล่วงหน้า), บุคมารค, ปฏิทิน, บันทึกการโทร, รายชื่อ, หน้าจอหลัก, ข้อความ, และ การตั้งค่าระบบ โดยใช้แอปพลิเคชันนี้ได้


- การสำรองข้อมูลสมาร์ทโฟนด้วยตัวเอง
- การกำหนดเวลาสำรองข้อมูลสมาร์ทโฟนอัตโนมัติ
- การเรียกคืนข้อมูลสมาร์ทโฟน

สำรองข้อมูลสมาร์ตโฟน

- 1 แตะ  > แتبแอปฯ > แล้วเลือก สำรองข้อมูล > สำรองข้อมูล > ที่เก็บข้อมูลภายใน
- 2 แตะ เพิ่มใหม่ เพื่อป้อนชื่อสำหรับไฟล์สำรอง แล้วเลือก ทำต่อ
- 3 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการสำรอง แล้วเลือก ทำต่อ เพื่อสำรองข้อมูล
- 4 เมื่อสำรองข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ 'เสร็จ' จากนั้นเลือก ทำต่อ เพื่อเสร็จสิ้นการสำรองข้อมูล

การกำหนดเวลาสำรองข้อมูลอัตโนมัติ


คุณสามารถเปิดใช้การสำรองข้อมูลในสมาร์ตโฟนโดยอัตโนมัติตามการตั้งค่ากำหนดเวลาได้ ในการดำเนินการนี้ ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

- 1 แตะ  > แتبแอปฯ > แล้วเลือก สำรองข้อมูล > กำหนดเวลา
- 2 ในหน้าจอ ตำแหน่งสำรองข้อมูลตามกำหนดเวลา ให้แตะ ที่เก็บข้อมูลภายใน
- 3 จากรายการ ให้เลือกความถี่ที่คุณต้องการให้สำรองข้อมูลและการตั้งค่าอุปกรณ์ แล้วเลือก ทำต่อ
- 4 เลือกช่องทำเครื่องหมายข้างข้อมูลที่คุณต้องการสำรอง แล้วเลือก ทำต่อ เพื่อเสร็จสิ้นการตั้งค่ากำหนดเวลา

การเรียกคืนข้อมูลสมาร์ตโฟน

ในการเรียกคืนข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์อ่อนบอร์ด ต้องปิดโหมดที่เก็บข้อมูล

หมายเหตุ: ไฟล์ทั้งหมดที่เก็บไว้ในสมาร์ตโฟนจะถูกลบก่อนเรียกคืนไฟล์สำรอง


- 1 แตะ  > แتبแอปฯ > แล้วเลือก สำรองข้อมูล > เรียกคืน > ที่เก็บข้อมูลภายใน
- 2 ในหน้าจอ เรียกคืน ให้เลือกไฟล์สำรองที่มีข้อมูลที่คุณต้องการเรียกคืน
- 3 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการเรียกคืน แล้วเลือก ทำต่อ เพื่อเรียกคืนไปยังโทรศัพท์

หมายเหตุ: โปรดทราบว่าข้อมูลโทรศัพท์ของคุณจะถูกบันทึกทับด้วยเนื้อหาจากการสำรองของคุณ


- 4 หากไฟล์สำรองถูกเข้ารหัส ให้พิมพ์รหัสผ่านที่คุณตั้งค่าเพื่อเข้ารหัส
- 5 เมื่อเรียกคืนไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ 'เสร็จ' จากนั้นเลือก ไข เพื่อรีเซ็ตโทรศัพท์

หมายเหตุ:

- ขณะอยู่ในโหมดที่เก็บข้อมูล แอปพลิเคชันสำรองข้อมูลจะไม่สามารถทำงานได้ เลือกตัวเลือก ชาร์จเท่านั้นเมื่อเชื่อมต่อสาย USB
- คุณสามารถตั้งค่าเปิดใช้งานการเข้ารหัสเพื่อเข้ารหัสไฟล์สำรองของคุณเพื่อเพิ่มการป้องกัน

กด **เมนู**  จากหน้าจอ **สำรองข้อมูล** และเลือก **ตั้งค่า** > **ระบบป้องกัน** > **เปิดใช้งานการเข้ารหัส** และเลือกช่องทำเครื่องหมาย ในการเรียกคืนข้อมูลสมุดบันทึกที่ซิงโครไนซ์ คุณต้องมีรหัสผ่านการเปิดใช้

หมายเหตุ:

คุณสามารถเปิดใช้การลบการสำรองเก่าอัตโนมัติและเก็บไว้เฉพาะการสำรองล่าสุดได้ กด **เมนู**  จากหน้าจอ **สำรองข้อมูล** และเลือก **ตั้งค่า** > **กำหนดการ** > **ลบแบ็คอัปเก่าทั้งหมดโดยอัตโนมัติ** เพื่อเลือกจำนวนการสำรองตามกำหนดเวลาที่จะเก็บไว้

เว็บไซต์

อินเทอร์เน็ต

บราวเซอร์ ช่วยให้ท่านเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมาย ได้โดยตรงถึงโทรศัพท์ของท่าน ได้ทุกที่และทุกอย่างที่ท่านต้องการ

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้แถบเครื่องมือเว็บ

- ◀ แตะเพื่อย้อนกลับหนึ่งเพลง
- ▶ แตะเพื่อไปข้างหน้าหนึ่งเพลงไปยังเพลงที่ทำการเชื่อมต่อหลังจากเพลงปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม **ย้อนกลับ** ซึ่งจะไปยังเพลงก่อนหน้า
- ⊞/⌂ ขณะกดค้างที่ไอคอน ให้เอียงอุปกรณ์เข้าหาตัวเพื่อซูมเข้าหรือเอียงในทิศทางตรงข้ามเพื่อซูมออก
- ⊕ แตะเพื่อเพิ่มหน้าต่างใหม่
- ★ แตะเพื่อเข้าใช้งานบุคมาร์ค

การใช้ตัวเลือก

กด ☰ เพื่อดูตัวเลือก

รีเฟรช – อัปเดตเว็บเพจปัจจุบัน

บันทึกบุคมาร์ค – เพิ่มเว็บเพจปัจจุบันเป็นบุคมาร์ค

ไปที่โฮมเพจ – ให้คุณไปยังโฮมเพจ

แบ่งปันเพจ – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้ โดยใช้ บลูทูธ, อีเมล, Gmail, Google+, ข้อความ, Social+

ค้นหาบนหน้า – ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน

ขอหน้าเว็บแบบเดสก์ท็อป – ให้คุณดูเว็บเพจเป็นเดสก์ท็อปได้

บันทึกไว้อ่านออฟไลน์ – บันทึกหน้าปัจจุบันเพื่ออ่านขณะออฟไลน์

ความสว่าง – แก้ไขความสว่างในการดูสำหรับการเบราส์เว็บ

ตั้งค่า – แสดงการตั้งค่าบราวเซอร์

ออก – ออกจากบราวเซอร์

ตั้งค่า

ในหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > ตั้งค่า

ตั้งค่าการเชื่อมต่อ


ในหน้าจอนี้ คุณสามารถจัดการ Wi-Fi และบลูทูธ คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ และสลับไปยังโหมดเครื่องบินได้ด้วย

< Wi-Fi >

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

เคล็ดลับ! การดู MAC แอดเดรส

ในการเชื่อมต่อกับเครือข่ายไร้สายบางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของ LG-P895 ลงในเลาท์เตอร์

คุณสามารถค้นหา MAC แอดเดรสได้ในยูสเซอร์อินเตอร์เฟซต่อไปนี้: แตะแท็บ แอปฯ > ตั้งค่า > **Wi-Fi** >  > ขั้นสูง > **MAC แอดเดรส**

< บลูทูธ >

เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

< ข้อมูลที่ใช้ >

แสดงการใช้ข้อมูลและตั้งค่าขีดจำกัดการใช้ข้อมูลโทรศัพท์เคลื่อนที่

< โทร >

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

< ข้อมูล >

โหมดเครื่องบิน – หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Wi-Fi Direct – ทำการเชื่อมต่อโดยตรงกับอุปกรณ์ Wi-Fi โดยไม่ต้องใช้งานจุดเชื่อมต่อ

Portable Wi-Fi hotspot – ช่วยให้คนแบ่งปันเครือข่ายมือถือผ่านทาง Wi-Fi และคุณสามารถกำหนดค่าการตั้งค่าฮอตสปอต Wi-Fi เคลื่อนที่ได้

NFC – LG-P895 ของคุณสามารถใช้ NFC ได้ NFC (Near Field Communication) คือ เทคโนโลยีการเชื่อมต่อไร้สายที่ให้การสื่อสารแบบสองทางระหว่างอุปกรณ์อิเล็กทรอนิกส์ โดยจะทำงานในระยะสองสามเซนติเมตร คุณสามารถแบ่งปันเนื้อหาเกี่ยวกับแท็ก NFC หรืออุปกรณ์อื่นที่สนับสนุน NFC ได้โดยการแตะกับอุปกรณ์ของคุณ หากคุณแตะแท็ก NFC กับอุปกรณ์ของคุณ จะแสดงเนื้อหาของแท็กในอุปกรณ์ของคุณ

การเปิดหรือปิด NFC: จากหน้าจอหลัก ให้แตะและเลื่อนแถบการแจ้งเตือนด้วยนิ้วของคุณ และเลือกไอคอน NFC เพื่อเปิด

หมายเหตุ: ขณะเปิดใช้งานโหมดเครื่องบินจะสามารถใช้งานแอปพลิเคชัน NFC ได้

การใช้ NFC: ในการใช้ NFC ให้ตรวจสอบให้แน่ใจว่าคุณเปิดอุปกรณ์ของคุณและเปิดใช้งาน NFC ในกรณีที่ปิดใช้งานเอาไว้

Android Beam – คุณสามารถบีบเว็บเพจ วิดีโอ หรือเนื้อหาอื่นๆ จากหน้าจอของคุณไปยังอุปกรณ์เครื่องอื่นได้โดยการนำอุปกรณ์มาอยู่ใกล้กัน (โดยทั่วไปคือด้านหลังชนกัน)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าอุปกรณ์ทั้งคู่ถูกปลดล็อค สนับสนุน Near Field Communication (NFC) และเปิดทั้ง NFC และ Android Beam™ แล้ว

VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, ชื่อจุดเชื่อมต่อ (APN) และอื่นๆ

หมายเหตุ: คุณต้องตั้งค่า PIN หรือรหัสผ่านล็อคหน้าจอก่อนที่จะใช้ระบบจัดเก็บข้อมูลรับรองสิทธิ์

อุปกรณ์

< เสียง >

โปรไฟล์เสียง – คุณสามารถเลือกเสียง เฉพาะสั้น หรือเงียบได้

ระดับเสียง – คุณสามารถจัดการระดับเสียงของเสียงเรียกเข้าโทรศัพท์, เสียงการแจ้งเตือน, เสียงสัมผัสและระบบ, เพลง, วิดีโอ, เกมและสื่ออื่น, ตั้งปลุก

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

เสียงการแจ้งเตือน – ให้คุณตั้งค่าเสียงการแจ้งเตือนเริ่มต้นของคุณ

เสียงพร้อมสั้น - สั้นเมื่อโทรเข้าและมีการแจ้งเตือน

เวลาสงบ – ตั้งค่าเวลาเพื่อปิดเสียงทั้งหมดยกเว้นการปลุกและมีเดีย

เสียงปุ่มกดเบอร์โทร – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อใช้ปุ่มตัวเลขเพื่อหมุนหมายเลข

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองต่อการสัมผัส

เสียงล็อคหน้าจอ – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อล็อคและปลดล็อคหน้าจอ

สั้นเมื่อแตะ – ให้คุณตั้งคากการตอบสนองการสั้นสำหรับการสัมผัสหน้าจอโทรศัพท์

< หน้าจอ >

ความสว่าง – ปรับความสว่างของหน้าจอ

หมุนจออัตโนมัติ – ตั้งค่าเพื่อสลับการวางแนวโดยอัตโนมัติเมื่อคุณหมุนโทรศัพท์

ไทม์เอาต์หน้าจอ – ตั้งค่าเวลาไทม์เอาต์หน้าจอ

ชนิดแบบอักษร – เปลี่ยนประเภทของการแสดงแบบอักษร

ขนาดแบบอักษร – เลียนขนาดของแบบอักษรที่แสดง

การแก้ไขอัตราส่วนภาพ – เปลี่ยนแปลงขนาดความละเอียดของแอปพลิเคชันที่ดาวน์โหลดเพื่อให้พอดีกับหน้าจอ

ตั้งค่าไฟปุ่มด้านหน้า – ตั้งค่าระยะเวลาการเปิดไฟปุ่มด้านหน้า

ตั้งค่า

ปรับแต่งเซนเซอร์การเคลื่อนไหว – ให้คุณปรับปรุงความแม่นยำของการเอียงและความเร็วของเซนเซอร์

< หน้าจอหลัก >

ตั้งค่า **ธีม**, **แอนิเมชัน**, **เอฟเฟกต์การเลื่อนหน้าจอ** หรือ **พื้นหลัง** เลือกตัวเลือกเพื่อตั้งค่า **เลือนวอลเปเปอร์**, **เลือนจอเป็นวงกลม** และ **แบกอัพและโอนถ่ายจอโฮมกลับ**

< ล็อคหน้าจอ >

เลือกแบบล็อคหน้าจอ – ตั้งค่าประเภทเลือกแบบล็อคหน้าจอเพื่อป้องกันโทรศัพท์ของคุณ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ คุณสามารถตั้งค่าระหว่าง **ไม่มี**, **ลาก**, **ปลดล็อกใบหนา**, **รูปแบบ**, **PIN**, **รหัสผ่าน**

หากคุณเปิดใช้ประเภทเลือกรูปแบบ เมื่อคุณเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อคเพื่อปลดล็อคหน้าจอ

พื้นหลัง – คุณสามารถเลือกพื้นหลังสำหรับหน้าจอล็อคได้จากพื้นหลังหรือคลังภาพ

นาฬิกาและขีดตัด – ปรับแต่งนาฬิกาและขีดตัดบนหน้าจอล็อค

ข้อมูลเจ้าของ – แสดงข้อมูลเจ้าของบนหน้าจอล็อค

ตัวตั้งเวลาล็อค – ตั้งค่าเวลาล็อคหลังจากไทม์เอาต์หน้าจอ

ล็อคทันทีด้วยปุ่มเปิด/ปิด – ตั้งค่าการล็อคหน้าจอเมื่อกดปุ่มเปิด/ปิด

< Gesture >

ย้ายไอเท็มในจอโฮม – ตะไกวไอเท็มค้างไว้แล้วเอียงอุปกรณ์ เพื่อย้ายไอเท็มในจอโฮมหรือแอปพลิเคชัน

ความไวในการเอียง – ทดสอบและปรับแต่งความไวของเซนเซอร์การเอียงสำหรับจอโฮมและแอปพลิเคชัน

ปิดเสียงสายโทรเข้า – ฟลิกอุปกรณ์เพื่อปิดเสียงโทรเข้า

ปิดชั่วคราวหรือปิดสัญญาณเตือน – ฟลิกอุปกรณ์เพื่อหยุดชั่วคราวหรือหยุดเสียงสัญญาณเตือน

หยุดวิดีโอชั่วคราว – ฟลิกอุปกรณ์เพื่อหยุดเล่นวิดีโอชั่วคราว

ช่วยเหลือ – ช่วยเหลือการใช้ฟังก์ชัน Gesture

< ที่เก็บข้อมูล >

ที่เก็บข้อมูลภายใน – ดูการใช้ที่เก็บข้อมูลภายใน

< ประหยัดพลังงาน >

ที่นี่คุณสามารถจัดการแบตเตอรี่ และตรวจสอบไอเท็มที่ใช้ระบบประหยัดพลังงานได้นอกจากนั้นคุณยังสามารถตรวจสอบการใช้แบตเตอรี่ได้ด้วย

< แอปฯ >

คุณสามารถดูและจัดการแอปพลิเคชันได้

ส่วนตัว

< แอคเคาท์และการซิงค์ >

อนุญาตให้แอปพลิเคชันซิงค์ใครในซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าจะกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

< บริการระบุตำแหน่ง >

บริการระบุตำแหน่งของ Google – หากคุณเลือกบริการระบุตำแหน่งของ Google โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์เคลื่อนที่ เมื่อคุณเลือกตัวเลือกนี้ คุณจะได้รับแจ้งว่าจะยินยอมให้ Google ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้หรือไม่

ดาวเทียม GPS – หากคุณเลือกดาวเทียม GPS โทรศัพท์จะกำหนดตำแหน่งด้วยความแม่นยำระดับถนน

ระบุตำแหน่งและระบบค้นหาของ Google – หากคุณเลือก Google จะใช้ตำแหน่งของคุณเพื่อปรับปรุงผลการค้นหาและบริการอื่นๆ

< ระบบป้องกัน >

ตั้งค่าล็อค SIM card – ตั้งค่าล็อค Micro-USIM card หรือเปลี่ยน PIN ของ Micro-USIM card

ป้อนรหัสผ่านแบบมองเห็น – แสดงอักษรตัวสุดท้ายของรหัสผ่านขณะที่คุณพิมพ์

จัดการอุปกรณ์ – ดูหรือปิดการใช้งานผู้ดูแลอุปกรณ์

แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจากตลาด

การรับรองสิทธิ์ที่ไว้วางใจได้ – แสดงการรับรองสิทธิ์ CA ที่เชื่อถือได้

ติดตั้งจากระบบจัดเก็บข้อมูล – เลือกติดตั้งใบรับรองที่เข้ารหัส

ลบจัดเก็บข้อมูล – ลบใบรับรองทั้งหมด

< ภาษาและการป้อนข้อมูล >

ใช้การตั้งค่าภาษาและการป้อนข้อมูลเพื่อเลือกภาษาสำหรับข้อความในโทรศัพท์ และสำหรับการกำหนดค่าแป้นพิมพ์บนหน้าจอ รวมถึงค่าที่คุณเพิ่มในพจนานุกรม

< แบ็คอัฟและรีเซ็ท >

เปลี่ยนการตั้งค่าสำหรับการจัดการการตั้งค่าและข้อมูลของคุณ

สำรองข้อมูลของฉัน – ตั้งค่าเพื่อสำรองข้อมูลการตั้งค่าและแอปพลิเคชันของคุณลงบนเซิร์ฟเวอร์ของ Google

บัญชีข้อมูลสำรอง – ตั้งค่าเพื่อสำรองข้อมูลแอคเคาท์ของคุณ

เรียกคืนอัตโนมัติ – ตั้งค่าให้ทำการเรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชันของคุณเมื่อมีการติดตั้งแอปพลิเคชันซ้ำบนอุปกรณ์ของคุณ

รีเซ็ตข้อมูลจากโรงงาน – รีเซ็ตการตั้งของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน และลบข้อมูลทั้งหมดของคุณ หากคุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณเริ่มต้น Android ครั้งแรก

ตั้งค่า

ระบบ

< วันที่และเวลา >

ใช้การตั้งค่า วันที่และเวลา เพื่อตั้งค่าการแสดงวันที่ คุณยังสามารถใช้การตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซนเวลาของคุณแทนการรับเวลาปัจจุบันจากเครือข่ายโทรศัพท์เคลื่อนที่ได้

< การช่วยสำหรับการเข้าถึง >

ใช้การตั้งค่า การช่วยสำหรับการเข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วยเหลือสำหรับการเข้าถึงที่คุณติดตั้งในโทรศัพท์

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติมเพื่อให้สามารถเลือกได้

< เชื่อมต่อ >

ชนิดเชื่อมต่อการ USB – คุณสามารถตั้งค่าโหมดที่ต้องการ (ซาร์ทเท่านั้น, ซิงค์มีเดีย (MTP), การปล่อยสัญญาณผ่าน USB, LG ซอร์ฟแวร์ หรือ กล้องถ่ายรูป (PTP))

ถามเมื่อมีการเชื่อมต่อ – ถามโหมดเชื่อมต่อ USB เมื่อโทรศัพท์เชื่อมต่อกับคอมพิวเตอร์
ช่วยเหลือ – ช่วยเหลือการเชื่อมต่อ

On-Screen Phone – สามารถแสดงหน้าจอและควบคุมโทรศัพท์จาก PC ผ่าน USB, บลูทูธหรือการเชื่อมต่อ Wi-Fi ได้

PC Suite – เลือกตัวเลือกนี้เพื่อใช้ LG PC Suite กับการเชื่อมต่อ Wi-Fi

โปรดอย่าลืมว่าควรมีการเชื่อมต่อเครือข่าย Wi-Fi สำหรับ LG PC Suite ด้วยการเชื่อมต่อ Wi-Fi จากตั้งค่าการเชื่อมต่อ

< เกี่ยวกับโทรศัพท์ >

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com>

หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่ได้อย่างสะดวกจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจสอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ LG ผ่าน Over-the-Air (OTA)

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์ได้ที่: **ตั้งค่า > เกี่ยวกับโทรศัพท์ > ซอฟต์แวร์อัปเดต > ตรวจสอบอัปเดตในตอนนี้**

คุณสามารถเลือกการอัปเดตเป็นเวลา 1 ชั่วโมง, 4 ชั่วโมง, 8 ชั่วโมง หรือหนึ่งวันได้ ในกรณีนี้ แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาการอัปเดตด้วยตัวคุณเองอีกด้วย

หมายเหตุ: ข้อมูลส่วนตัวของคุณจากพื้นที่การจัดเก็บภายในโทรศัพท์—รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google ของคุณและแอคเคาท์อื่นๆ, ข้อมูลระบบหรือแอปพลิเคชันและการตั้งค่าของคุณ, แอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM—อาจสูญหายในกระบวนการอัปเดตซอฟต์แวร์ของโทรศัพท์ ดังนั้น LG ขอแนะนำให้คุณสำรองข้อมูลส่วนตัวก่อนการอัปเดตซอฟต์แวร์ของโทรศัพท์ LG ไม่รับผิดชอบต่อการสูญหายของข้อมูลส่วนตัวใดๆ

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย พื้นที่ และประเทศของคุณ

DivX HD

เกี่ยวกับวิดีโอ DIVX: DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ DivX โปรดไปที่ divx.com

เกี่ยวกับ DIVX VIDEO-ON-DEMAND: อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ ในการรับรหัสการลงทะเบียนของคุณ ให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน HD 720P รวมถึงเนื้อหาพรีเมียม

DivX®, DivX Certified® และโลโก้ที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ Rovi Corporation หรือบริษัทในเครือ และใช้โดยได้รับอนุญาต



ผลิตภายใต้การอนุญาตของสิทธิบัตรของสหรัฐอเมริกาหมายเลข: 5,956,674; 5,974,380; 6,487,535 และสิทธิบัตรของสหรัฐอเมริกาและทั่วโลกอื่นๆ ที่จดสิทธิบัตรแล้วและรอดสิทธิบัตร DTS, สัญลักษณ์ และทั้ง DTS และสัญลักษณ์รวมกันเป็นเครื่องหมายการค้าจดทะเบียน และ DTS 2.0+Digital Out เป็นเครื่องหมายการค้าของ DTS, Inc. ผลิตภัณฑ์รวมถึงซอฟต์แวร์ © DTS, Inc. สงวนลิขสิทธิ์








ผลิตภายใต้การอนุญาตของ Dolby Laboratories Dolby และสัญลักษณ์ตัวอักษร D สองตัว เป็นเครื่องหมายการค้าของ Dolby Laboratories

LG On-Screen Phone

On-Screen Phone ให้คุณสามารถดู หน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ คุณยังสามารถควบคุมโทรศัพท์มือถือจาก คอมพิวเตอร์โดยใช้เมาส์หรือแป้น พิมพ์

ไอคอน On-Screen Phone

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์หรือยกเลิกการเชื่อมต่อ
-  เริ่มต้น LG Home Panorama หรือเปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

คุณสมบัติ On-Screen Phone

- การถ่ายโอนและการควบคุมแบบ เรียลไทม์: แสดงและควบคุมหน้าจอ โทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- การควบคุมเมาส์: ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลาก บนหน้าจอคอมพิวเตอร์
- ป้อนข้อความด้วยแป้นพิมพ์: ให้คุณ สร้างข้อความหรือบันทึกโดยใช้แป้น พิมพ์คอมพิวเตอร์
- ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอมพิวเตอร์): ส่งไฟล์จากโทรศัพท์ (เช่น ภาพถ่าย วิดีโอเพลง และไฟล์ Polaris Office) ไปยังคอมพิวเตอร์ โดยเพียงคลิกขวาที่ไฟล์ที่ต้องการส่งไปยังคอมพิวเตอร์ และคลิก "บันทึกในคอมพิวเตอร์"
- ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยัง โทรศัพท์): ส่งไฟล์จากคอมพิวเตอร์ ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ ที่คุณต้องการถ่ายโอน แล้วลากและ วางไฟล์ลงในหน้าต่าง On-Screen Phone ไฟล์ที่ส่งจะถูกจัดเก็บใน การ์ด SD ภายใน
- การแจ้งเตือนเหตุการณ์แบบเรียล ไทม์: ป้อนข้อความเพื่อแจ้งคุณ เมื่อมีสายเรียกเข้า หรือเมื่อมีข้อความ ตัวอักษร/มัลติมีเดียมาถึง


วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์

1. เยี่ยมชมหน้าหลัก LG (www.lg.com) และเลือก ประเทศที่คุณต้องการ
2. ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P895) > คลิก **OSP** (On-Screen Phone) เพื่อดาวน์โหลด จากนั้น คุณสามารถ ติดตั้ง On-Screen Phone ลงใน คอมพิวเตอร์ของคุณ


อุปกรณ์เสริม

อุปกรณ์เสริมเหล่านี้มีให้ใช้กับ LG-P895 (รายการที่อธิบายด้านล่างอาจเป็นตัวเลือกเสริม)

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่

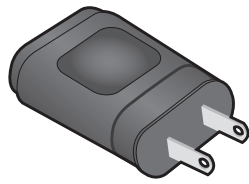


ชุดหูฟังสเตอริโอ

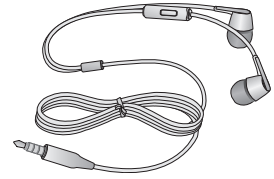

คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
LG-P895



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-P895 ของคุณ
กับคอมพิวเตอร์

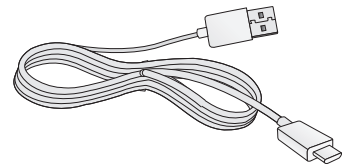

LG Tag+



Pin ช่องใส่
Micro-USIM



ปากกา
Rubberdium™



ประกาศ: คุณสามารถใช้งานได้สะดวกมากขึ้นหากคุณใช้ Rubberdium Pen สำหรับสัมผัสหน้าจอ อย่างไรก็ตาม ปุ่มด้านล่าง (ปุ่มย้อนกลับ/หน้าหลัก/แอปพลิเคชันล่าสุด/เมนู) ไม่ทำงานกับ Rubberdium Pen โปรดใช้นิ้วของคุณโดยตรง

⚠ คำเตือน: ห้ามแตะแรงๆ และถูด้วยวัตถุมีคม

หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด Micro-USIM	ไม่ได้ใส่ Micro-USIM การ์ดในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ Micro-USIM การ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย/ เครือข่ายขาดหาย	สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการ	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย
	ผู้ให้บริการใช้บริการใหม่	ตรวจสอบว่าการ์ด Micro-USIM ใช้งานมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยน Micro-USIM ของคุณที่สาขาผู้ให้บริการเครือข่ายใกล้บ้าน โปรดติดต่อติดต่อผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกันคุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำ	หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
	รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต
	มีการใส่ Micro-USIM การ์ดใหม่	ตรวจสอบข้อกำหนดใหม่
	ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดแล้วปล่อยเร็วเกินไป	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที
	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลังชาร์จบนหน้าจอ
ข้อผิดพลาดเกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือเย็นเกินไป	ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับโทรศัพท์
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	เปลี่ยนอุปกรณ์ชาร์จ
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หมายเลขโทรศัพท์ใช้โทรศัพท์มือถือ	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ/ ส่งข้อความตัวอักษรและรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน
หน้าจอไม่ทำงานเมื่อฉันรับสาย	เซนเซอร์รับสัญญาณมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด
ไม่มีเสียง	โหมดสัน	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมดสันหรือโหมดปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์

ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

72/127 ถ.สมเด็จพระเจ้าตากสิน

แขวงบুদ্ধิโย เขตธนบุรี

กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์ - เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

LG-P895 User Guide

This guide helps you to get started using your phone.



- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.

Contents

Guidelines for safe and efficient use	5
Getting to know your phone	10
Device components	15
QuickMemo	17
Installing the Micro-USIM card	18
Charging your phone	18
Locking and unlocking the screen	19
Secure your lock screen.....	19
Your Home screen	20
Touch screen tips	20
Home	20
Customising the Home screen.....	20
Returning to recently-used applications	21
Notification drawer	21
Viewing the status bar	21
Onscreen keyboard	23
Entering accented letters	23
Google account set up	24
Connecting to Networks and Devices	25
Wi-Fi	25
Connecting to Wi-Fi networks.....	25
Bluetooth	25
Sharing your phone's data connection	26
To rename or secure your portable hotspot	26
Using the Wi-Fi Cast.....	27
Enabling Wi-Fi Direct to share through SmartShare.....	27
Using SmartShare	28
Calls	30
Making a call	30
Calling your contacts	30
Answering and rejecting a call.....	30
Adjusting call volume.....	30
Making a second call.....	30
Viewing your call logs	31
Call settings.....	31
Contacts	32
Searching for a contact.....	32

Adding a new contact	32
Favourite contacts	32
Moving contacts from your Old Device to your New Device.....	33
Messaging	34
Sending a message	34
Threaded box	34
Using Smilies	34
Changing your message settings.....	34
E-mail	35
Managing an email account	35
Email account screen	35
Working with account folders	35
Composing and sending email	36
Camera	37
Getting to know the viewfinder	37
Taking a quick photo	38
Once you've taken the photo.....	38
Using the advanced settings.....	38
Video camera.....	40
Getting to know the viewfinder	40
Shooting a quick video.....	41
After shooting a video	41
Using the advanced settings.....	41
Adjusting the volume when viewing a video.....	42
Video Wiz	43
Multimedia.....	44
Video Player	44
Playing a video	44
Gallery.....	44
Music Player	44
Transferring music files using USB mass storage devices.....	45
Playing a song.....	45
LG Tag+	46
Media Home	46
Notebook	47
Making a note	47

Contents

Getting to know the Notebook	47
LG SmartWorld.....	48
How to Get to LG SmartWorld from Your Phone	48
How to use LG SmartWorld	48
Utilities.....	49
Setting your alarm	49
Using your calculator	49
Adding an event to your calendar	49
Tasks.....	49
Polaris Office.....	50
FileShare	50
Backup	50
Back up your smart phone data.....	51
Scheduling automatic backups.....	51
Restoring smart phone data	51
The web.....	53
Internet.....	53
Using the web toolbar	53
Using options	53
Settings	54
WIRELESS & NETWORKS	54
DEVICE	55
PERSONAL.....	56
SYSTEM.....	57
Phone software update	58
DivX HD	59
DTS.....	59
Dolby Mobile	59
LG On-Screen Phone.....	60
On-Screen Phone icons	60
On-Screen Phone features	60
How to install On-Screen Phone on your PC	60
Accessories	61
Troubleshooting	62

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-P895 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.284 W/kg (10g) and when worn on the body is 0.604 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.

Guidelines for safe and efficient use

- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-P895** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

Regulatory and Safety

Go to "**System settings > About phone > Regulatory and Safety**" to get regulatory and safety information

Ambient temperatures

Max: +50°C (discharging), +45°C (charging)

Min: -10°C

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Getting to know your phone


Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE category.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall** and **OK**.

2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:


- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery**

The battery status (charging or not charging) and battery level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **Power saver** from the DEVICE > **Battery use** from the BATTERY INFORMATION

Battery usage time is displayed at the bottom of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a home screen, and the two icons will be combined.

4. Before installing an open source application and OS


WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

5. Using unlock pattern

Set unlock pattern to secure your phone. Touch  > **Apps** tab > **Settings** > **Lock screen** from **DEVICE** > **Select screen lock** > **Pattern**. This opens a screen that guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure if you forgot pattern lock.

Caution: Create a Google account before setting an unlock pattern and remember Backup PIN you created while creating Pattern lock.

WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

< If you have forgotten pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgot Pattern button on the bottom of the screen. You are then required to log in with your Google Account or you have to enter Backup PIN which you entered while creating Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

Getting to know your phone

< If you have forgotten PIN or Password >

If you forgot your PIN or Password, you need to do hard reset.

Caution: If you perform a hard reset, all user applications and user data are deleted.

Note: If you have not logged in Google Account and forgot Unlock Pattern, you need to enter Backup PIN.

6. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key**.
- 3 Once LG Logo appears on the screen, release all Keys.
- 4 After some seconds, Software allows you to select factory reset function in the Android system recovery utility.
- 5 Scroll the list by Volume keys and select it by **Power/Lock key**.

WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.


7. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To return to view list recently used applications:

Simply press **Recent apps** key

To stop applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** > **Running**
- 2 Scroll and touch the desired application and touch **Stop** to stop it.

8. Installing PC Software (LG PC Suite)

"LG PC Suite" PC Application is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Application, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.

- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.
- Play multimedia contents of your PC from your device.

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC application.

Installing "LG PC Suite" PC Application

"LG PC Suite" PC application can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > LG Mobile Phones** > Select the Model (LG-P895) or Go to **Support > Mobile Phone Support** > Select the Model (LG-P895).
- 3 Click **PC Sync** from **MANUALS & DOWNLOAD**, and click **DOWNLOAD** to download "LG PC Suite" PC software or Click **PC Sync** from **Download**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAM
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software.

9. Synchronising your phone to a Computer

Data from your device and PC can be synchronised easily with "LG PC Suite" PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.


Getting to know your phone

4 Select the checkbox of contents to synchronise and click the **Sync** button.


10. Synchronising your phone to a computer via USB

NOTE: To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC.

Please refer to previous pages to install LG PC Suite.

- 1 Touch  > **Apps** tab > **Settings** > **Storage** from the DEVICE to check out the storage media.
- 2 Connect the phone to your PC using the USB cable.
- 3 USB connection type list will appear in your phone screen, and select **Media sync (MTP)** option.
- 4 Open the memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 Select Charge only option to disconnect the phone.

To disconnect your phone from the computer:

Open the notification drawer and touch  > **Charge only** to disconnect your phone from the computer safely.

11. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P895 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.


12. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components

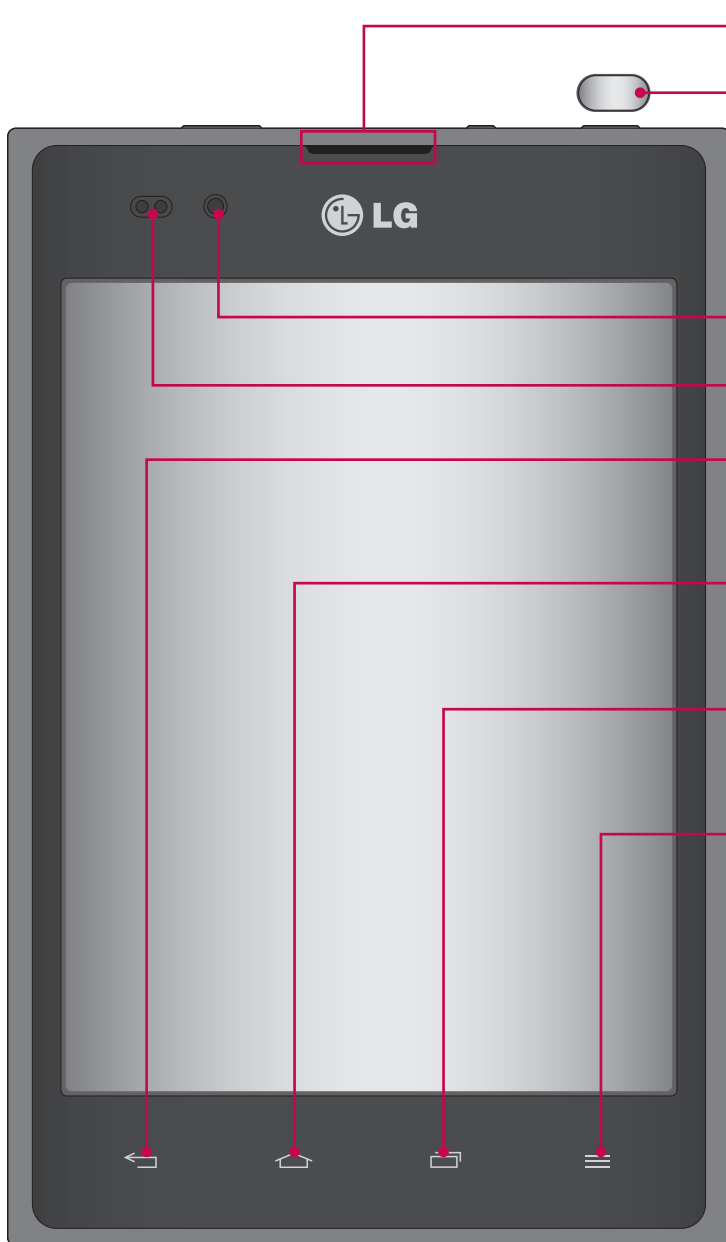

Earpiece

Power/Lock key

- Switch your phone on/off by pressing and holding this key.
- Short press to lock/unlock the screen.

Camera lens

Proximity sensor

Back key

Return to the previous screen.

Home key

Return to the home screen from any screen.

Recent app key

View the recently used application list.

Menu key

- Check what options are available.
- Go to Google Search™ by pressing and holding this key.


NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

⚠ WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.


Getting to know your phone



Volume keys

- **In the home screen:** Control ringer volume.
- **During a call:** Control your earpiece volume.
- **When playing a track:** Control volume continuously.

SIM card slot

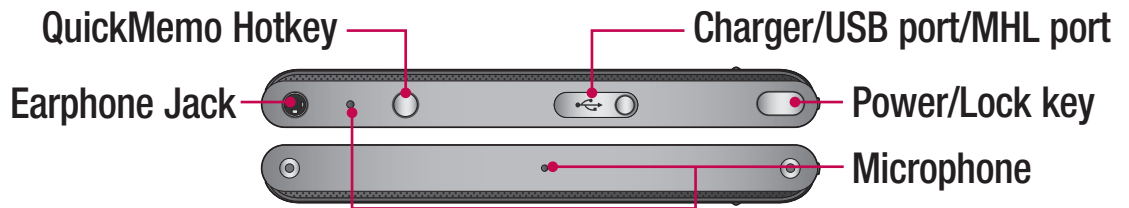

Flash

Camera lens





Speaker


WARNING

Encloses the battery compartment. Please do not open the back cover.

QuickMemo

Use **QuickMemo** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

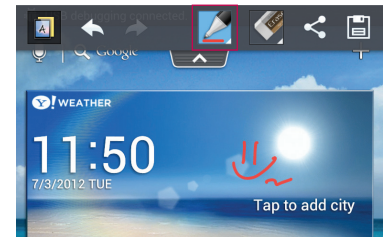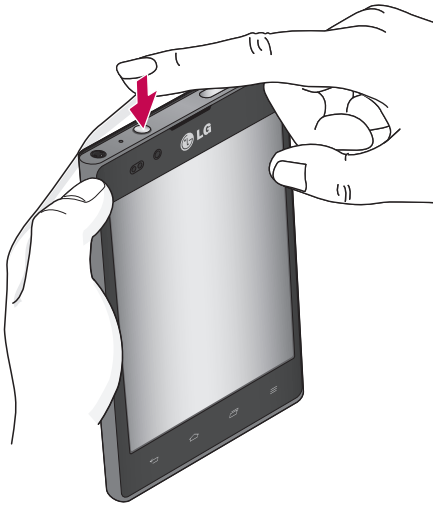







- 1 Enter the **QuickMemo** screen by pressing QuickMemo Hotkey
- 2 Select the desired menu option from **Pen type, Colour, Eraser**, and create a memo.
- 3 Touch  to save the memo with the current screen.

NOTE: Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

Using the QuickMemo options

While using the QuickMemo function, you can easily use the QuickMenu options.

-  – Select if you want to use the background screen or not.
-  – Undo or Redo.
-  – Select the pen type and the colour.
-  – Erase the memo that you created.
-  – Send or share the current QuickMemo to others.
-  – Save the memo with the current screen. Select the Location whether Notebook or gallery


Viewing the saved QuickMemo

Touch **Gallery** and select the QuickMemo album or Touch Notebook and select the QuickMemo note.

Getting to know your phone

Installing the Micro-USIM card

Before you can start exploring your new phone, you'll need to set it up. To insert the Micro-USIM card:

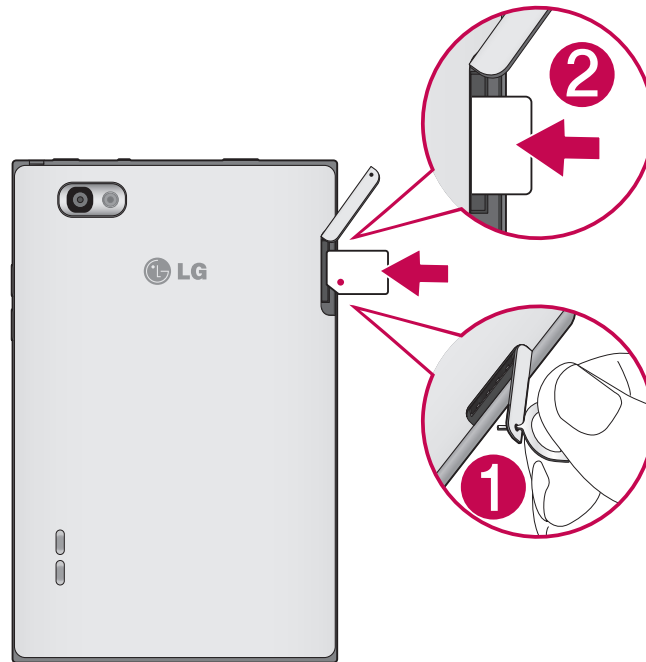

- 1 Open the Micro-USIM card slot Cover by Pin.
- 2 Slide the Micro-USIM card into the Micro-USIM card slot. Make sure the Gold contact area on the card is facing downwards.

Charging your phone

The charger connector is at the top of the phone. Insert the charger and plug it into an electrical outlet.



NOTE: The battery must be fully charged initially to improve battery lifetime.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P895, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The lock screen will appear. Touch and slide the lock screen in any direction to unlock your home screen. The last screen you viewed will open.

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- Touch  > **Apps tab** > **Settings** > **Lock screen** > **Select screen lock** > **None, Swipe, Face Unlock, Pattern, PIN or Password.**

NOTE:

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern** button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Flick – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:






- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with Apps, Downloads, Widgets and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.


On your home screen, you can view menu icons at the bottom of the screen. Menu icons provide easy, one-touch access to the functions you use the most.

-  Touch the **Phone** icon to bring up the touch screen dialpad to make a call.
-  Touch the **Contacts** icon to open your contacts.
-  Touch the **Notebook** icon to open your notebook function.
-  Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.
-  Touch the **Apps** icon at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Customising the Home screen

You can customise your home screen by adding Apps, Downloads, Widgets or Wallpapers. For more convenience using your phone, add your favourite apps and widgets to the home screen.

To add items on your home screen:

- 1 Touch and hold the empty part of the home screen.
Or touch  at the top of the right side.
- 2 In the Add Mode menu, select items you want to add. You will then see added items on the home screen.
- 3 Drag it to the location you want and lift your finger.

To remove an item from the home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 


TIP! To add an application icon to the home screen from the Apps menu, touch and hold the application you want to add.

Returning to recently-used applications



- 1 Touch the **Recent app** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your previous screen.

Notification drawer

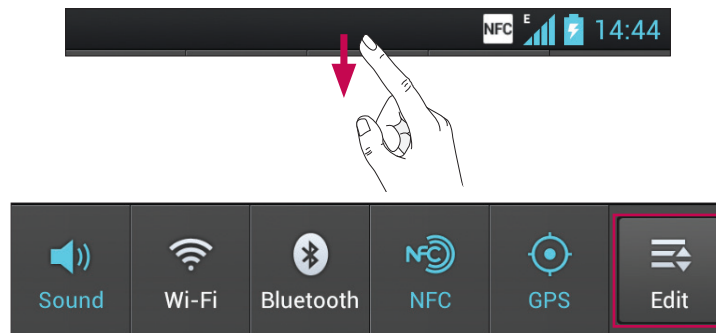The notification drawer runs across the top of your screen.




Touch and slide the notification drawer down with your finger.

Touch  >  to manage the Notifications. Here you can check and manage Sound profile, Wi-Fi, Bluetooth, NFC, GPS, Accounts & sync, Airplane mode, Auto-rotate screen, Brightness, Data enabled or Portable Wi-Fi hotspot.





Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the status bar.

Your Home screen

Icon	Description
	No Micro-USIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	NFC is on
	Vibrate mode
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data


Icon	Description
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail
	New Google Talk message
	New message
	Song is playing
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

  Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point WAP. Enjoy wireless Internet using Wi-Fi, without extra charges.


Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features, you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 After connecting to a Wi-Fi network, the status bar displays icon that indicate Wi-Fi status.


Bluetooth

You can use Bluetooth to send data by running a corresponding application as on most other mobile phones.

TIP! With LG-P895, you can enjoy Bluetooth high speed. If the device you want to share files which also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > Set **Bluetooth** to **ON** from the WIRELESS & NETWORKS
- 2 Tap **Bluetooth** menu again. Your phone will scan for and display the IDs of all available Bluetooth in-range devices. If the device you want to pair which isn't on the list, make sure the target device is set to be discoverable, then tap **Search for devices** again.
- 3 Choose the device you want to pair up with from the list.

Connecting to Networks and Devices

Once the pairing is successful, your device will connect to the device.

Sending pictures using Bluetooth

- 1 Select a **Picture** >  > **Bluetooth**
- 2 Check whether **Bluetooth** is **ON**, then select **Search for devices**.
- 3 Choose the device you want to send data to from the list.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To change Portable Wi-Fi hotspot settings:


- Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Portable Wi-Fi hotspot** > Choose options that you want to adjust

TIP!

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch  > **Apps** tab > **Settings**
- 2 Touch **More** from the WIRELESS & NETWORKS and select **Portable Wi-Fi hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is ticked.
- 4 Touch **Configure Wi-Fi hotspot**.
 - The **Configure Wi-Fi hotspot** dialog box will open.
 - You can change the network SSID (name) that other computers or devices see when scanning for Wi-Fi networks.
 - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).

- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.

5 Touch **Save**.


ATTENTION!

If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

Using the Wi-Fi Cast

You can share your music, picture and video content between users who use Android Phones connected via the same Wi-Fi & Wi-Fi Direct network.

Check your Wi-Fi & Wi-Fi Direct network in advance and make sure the users are connected to the same network.

- 1 Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Wi-Fi Direct**
- 2 Touch the Wi-Fi Direct checkbox to turn on.
- 3 Select a device to connect from the scanned device list.
- 4 Touch **Connect**.

Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and the searched devices are listed as they are found and you can select a specific device to share multimedia data through SmartShare.

Wi-Fi Direct cannot be enabled while using other Wi-Fi functions.

- 1 Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Wi-Fi Direct**
- 2 Select a device to connect from the scanned device list.

CREATE GROUP – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in **Password**.




NOTE: When your phone becomes a group owner, it will consume more battery power than when it is a client. Wi-Fi Direct connection does not provide Internet service. Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

Connecting to Networks and Devices

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.






To turn SmartShare on and allow sharing contents

- 1 Touch  > **Apps** tab > **SmartShare** .
- 2 Touch the **Menu** key  > **Settings**.
- 3 Touch Discoverable to allow your device to be detected by other devices.
 - Touch **Always accept request** if you would like to automatically accept sharing requests from other devices.
 - Touch **Receive files** if you would like to allow the other devices to upload media files to my phone.
- 4 Under the My shared contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

To control your renderer devices

Let your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

- 1 Touch  > **Apps** tab > **SmartShare** .
- 2 Touch the **To** button  and select the device from the renderer device list.
- 3 Touch the **From** button  and select the device of the remote content library.
- 4 You can browse the content library.
- 5 Touch and hold a content thumbnail and flick them to the top area with your finger or touch the **Menu Key**  > **Play**.

To share contents from your phone to your renderer device (e.g. TV)

NOTE: Make sure that your renderer device is properly configured.

- 1 While watching your pictures or videos using the Gallery application, touch tab  /  /  on the Title area.

 : Need to be connected network

 : Select the device on network

 : Currently, the content is being shared through SmartShare.




- 2 Select the device from renderer lists to play the files.

NOTICE: Check that your device is connected with your home network using Wi-Fi connection to use this application.

Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list.

Your device might not be able to play some contents.




To download contents from the remote content library

- 1 Touch  > **Apps** tab > **SmartShare** .
- 2 Touch the **From** button  and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch **Download**.

NOTICE: A few types of contents are not supported.

To upload contents from the remote content library





NOTE: Make sure that the internal storage is correctly mounted and the Receive files option in the Settings menu is checked.


- 1 Touch  > **Apps** tab > **SmartShare** .
- 2 Touch the **From** button  and select **My phone**.
- 3 You can browse the local content library.
- 4 Touch and hold a content thumbnail and then touch **Upload**.
- 5 Select the device of the remote content library to be uploaded.

NOTICE: Some DLNA enabled devices do not support the DMS upload functionality and will not upload files. A few types of contents are not supported.



Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact twice or touch  you want to call.

Answering and rejecting a call

When you receive a call in Lock state, hold and slide the  to Answer incoming call.

Hold and slide the  to Decline an incoming call.

Hold and slide the **Quick msg** icon from the bottom if you want to send a message.






TIP! Quick msg

You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Menu** > **Add call** and dial the number. Also, you can go recent dialled list by touching  or can search contacts by touching  and select the contact you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call.
- 5 To end active calls, touch **End** or press **Home** Key and slide the notification bar down and select **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs

On the home screen, touch  and choose the **Call logs** tab .

View a complete list of all dialled, received and missed calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

1 On the home screen, touch .

2 Touch menu.

3 Tap **Call settings** and choose the options that you want to adjust.

Fixed dialing numbers – To turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Voicemail service – Allows you to select your carrier's voicemail service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the voicemail number to use for listening to and managing your voicemail.

Save unknown numbers – Add unknown numbers to contacts after a call.

Call reject – Allows you to set the call reject function. Choose from **Disabled**, **Reject calls on list** or **Reject all calls**.

Quick messages – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Call forwarding – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call duration – View the duration of calls including Last call, All calls, Dialled calls and received calls.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function)

Additional settings – This lets you change the following settings:

Caller ID: Choose whether to display your number on an outgoing call.


Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are in call (depending on your network provider).

Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to Contacts** > **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.



Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns yellow color.

Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, and choose a contact to view its details.
- 3 Touch the yellow color star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Moving contacts from your Old Device to your New Device



Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 On the top menu, select **Device > Import to device > Import contacts**.
- 3 A popup window to select the file type and a file to import will appear.
- 4 On the popup, click the **Select a file** and Windows Explorer will appear.
- 5 Select the contacts file to import in Windows Explorer and click the **Open**.
- 6 Click **OK**.
- 7 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 8 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 9 Click **OK**.


Messaging


Your LG-P895 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch  on the home screen, and touch  to open a blank message.
- 2 Enter a contact name or contact number in the To field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch Enter message field and start to compose your message.
- 4 Press  to open the Options menu. Choose from **Add subject**, **Discard**, **Insert smiley** and **All messages**.

TIP! You can touch  icon to attach the file you want to share with your message.

- 5 Touch **Send** to send your message.
- 6 Responses appear on the screen. As you view and send additional messages, a message thread is created.

⚠ WARNING: The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

⚠ WARNING: If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the **Menu** key, then choose **Insert smiley**.

Changing your message settings

Your LG-P895 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

- 1 Touch Messaging icon on the home screen, and touch the **Menu** key, then tap **Settings**.

E-mail

You can use the Email application to read emails from services like Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a setup wizard opens to help you to set up an email account.

To add another email account:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Add account**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's setting:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Settings**


To delete an email account:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Delete account** > touch an account you want to delete > **Delete** > **OK**

Email account screen

You can touch an account to view its Inbox.

The account from which you send email by default is indicated with a tick.

 – Touch to open your Combined Inbox, with messages sent to all of your accounts. Messages in the Combined Inbox are colour coded on the left, by account, using the same colours used for your accounts in the Accounts screen.

 – Touch the folder icon to open the account folders.

TIP!

If you long-press an account from the list of email accounts, you can select the desired option in the pop-up window.




For example, select Add to home screen to create a shortcut icon of the account on the home screen.

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message


- 1 While in the **E-mail** application, touch the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Touch Cc/Bcc field to add Cc/Bcc and Touch  to attach files if required.
- 4 Enter the text of the message.
- 5 Touch the .

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

Camera


Getting to know the viewfinder

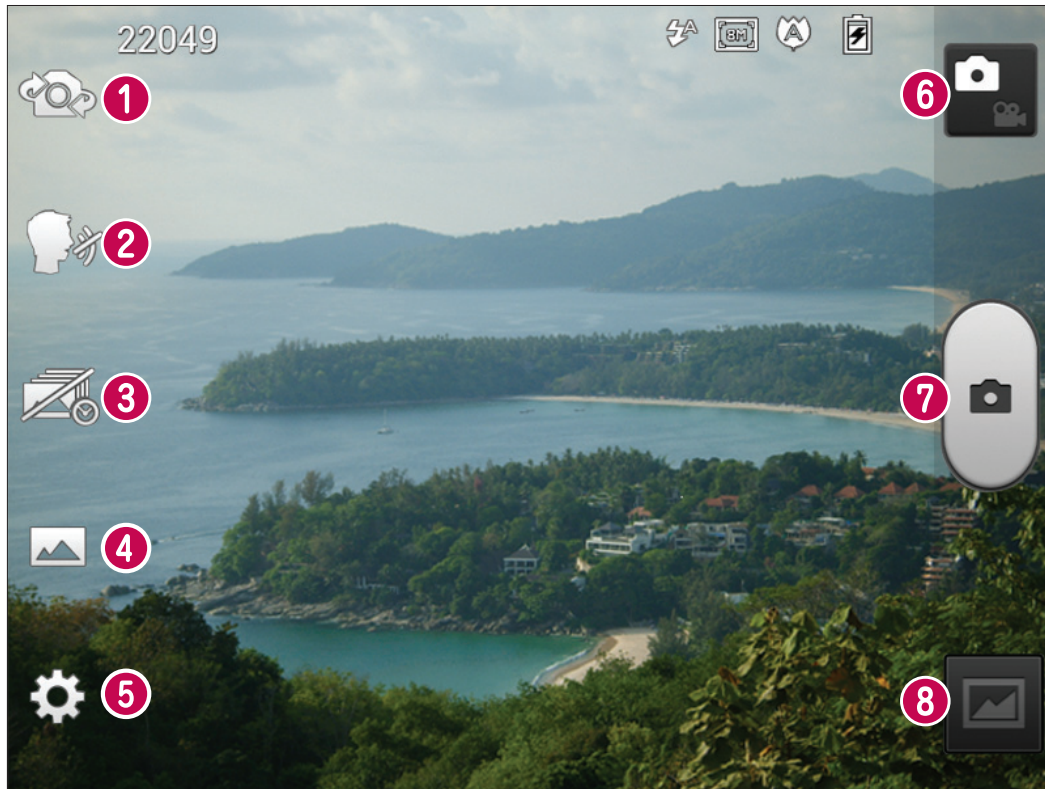

- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Cheese shutter** – Say Cheese when you get ready to take a photo.
- 3 Time catch shot** – Touch this icon to capture the missing moment before pressing the shutter.
- 4 Shot mode** – Choose from **Normal**, **HDR**, **Panorama** or **Continuous shot**.
- 5 Settings** – Touch this icon to open the Settings menu.
- 6 Video mode** – Touch this icon to switch to video mode.
- 7 Taking a photo**
- 8 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.

Camera

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone, point the lens towards the subject you want to photograph.
- 3 Touch the screen and a focus box will appear in the viewfinder screen.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Click on the  to capture the photo.

Once you've taken the photo

Touch  to view the last photo you captured.

 Touch to share your photo via **Bluetooth, E-mail, Gmail, Google+, Memo, Messaging, Picasa** and **Social+**.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

 Touch to delete the photo.

Touch  to open the options.

Set image as – Touch to use the photo as a Contact photo, Home Screen wallpaper or Lock screen Wallpaper.


Move – Touch to move the photo to other place.

Rename – Touch to edit the name of the selected picture.

Rotate left/right – To rotate left or right.

Crop – Crop your photo. Move your finger across the screen to select the area.

Edit – View and edit the picture.

 Select the photo resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.

 Improves colour qualities in different lighting conditions.

 Applies artistic effects to the pictures.

 Applies the additional options for pictures.

Slideshow – Automatically shows you the images one after the other.

Details – Show the picture information.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.






 – Touch if you want to change the viewfinder menu.

 – Switch between the rear-facing camera lens and the front-facing camera lens.





 – Say Cheese when you get ready to take a photo.

 – Touch this icon to capture the missing moment before pressing the shutter.

 – Choose from Normal, HDR, Panorama or Continuous shot.

-  – Allows you to turn on the flash when taking a photo in dark conditions.
-  – Zoom in or out
-  – This defines and controls the amount of sunlight entering the photo.
-  – Focuses on the specific spot.
-  – Select the photo resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.
-  – Finds the color and light settings appropriate for the current environment. Choose from **Normal, Portrait, Landscape, Sports** or **Night**.
-  – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions when you cannot use the flash.
-  – Improves colour qualities in different lighting conditions.
-  – Applies artistic effects to the pictures.
-  – Set a delay after the capture button is pressed. This is ideal if you want to be in the photo.
-  – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.


-  – Select one of shutter sounds.
-  – It automatically shows you the picture you just took.
-  – Restore all camera default settings.
-  – Touch whenever you want to know how some function operates. This provides you with a quick guide.

TIP! When you exit the camera, some settings return to their defaults, such as white balance, colour tone, timer and shot mode. Check these before you take your next photo.

TIP! The Settings menu is superimposed over the viewfinder so, when you change elements of the photo colour or quality, you see a preview of the image change behind the Settings menu.


Video camera

Getting to know the viewfinder

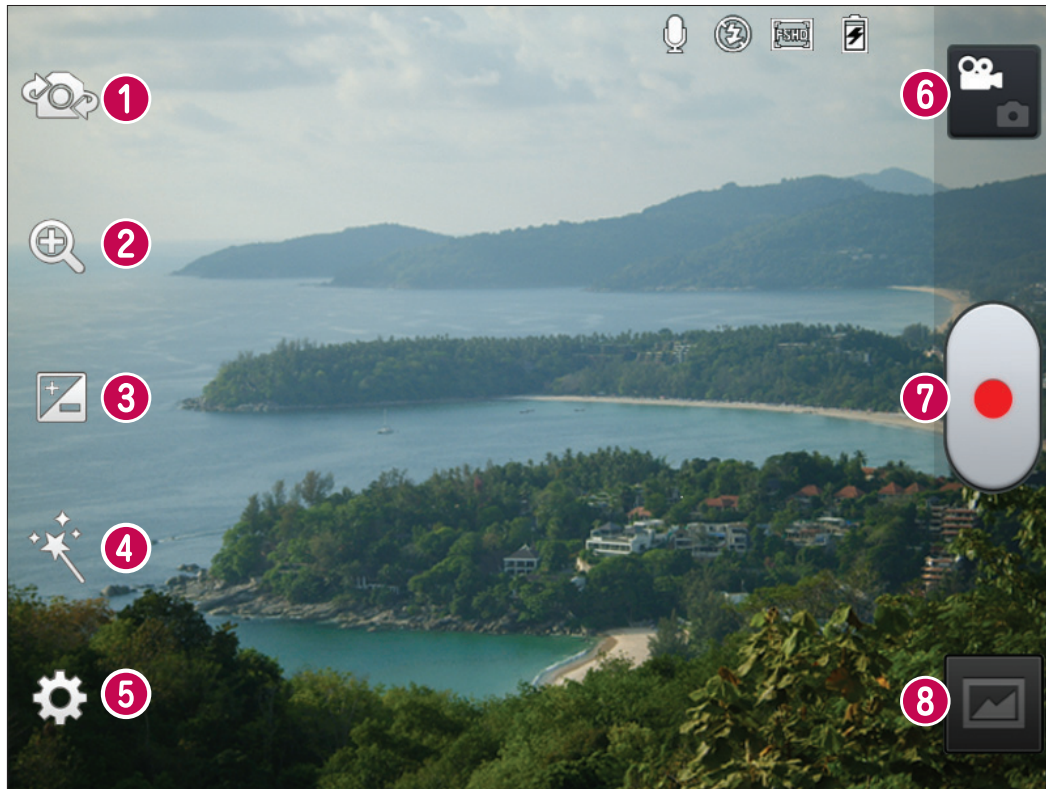

- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or out.
- 3 Brightness** – This defines and controls the amount of sunlight entering the video.
- 4 Live effect** – Live effect provides various visual effects when taking a video.
- 5 Settings** – Touch this icon to open the settings menu.
- 6 Camera mode** – Touch this icon to switch to camera mode.
- 7 Start recording**
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Shooting a quick video

- 1 Open the camera application and touch video mode button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 A red light appears at the top corner of the viewfinder with a timer showing the length of the video.

Tip!



– Touch to capture image during recording a video.

- 6 Touch  on the screen to stop recording.

After shooting a video

Your captured video will appear on the Gallery. Touch  to view the last video you recorded.

 Touch to play the video.

 Touch to share the video via **Bluetooth, E-mail, Gmail, Google+, Messaging or YouTube.**

 Touch to delete the video you just made. Confirm by touching **OK**. The viewfinder reappears.

Touch  to open the options.

Move – Touch to move the video to other place.

Rename – Tap to edit the name of the selected video.

Details – Tap to see a detailed information, such as the name, date, time, size and type.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

 – Touch if you want to change the viewfinder menu.

 – Switch between the rear-facing camera lens and the front-facing camera lens.

 – Zoom in or zoom out.

 – This defines and controls the amount of sunlight entering the video.

 – Provides various visual effects when recording a video.

 – Allows you to turn on the flash when taking a video in dark conditions.

 – Touch to set the size (in pixels) of the video you are recording.

 – Improves colour qualities in different lighting conditions.

 – Choose a colour tone to use for your new view.

 – Activate to use your phone's location-based services.

 – Choose **Off** to record a video without sound.

 – Auto review automatically shows you the video you just recorded.

 – Restore all video camera default settings.

 – Touch if you want to know how this function operates. This provides you with a quick guide.

Video camera


Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the right-hand side of the phone.

Video Wiz

You can make your own movie using your images/video and music.

- 1 From the Home Screen, touch the Apps Key > Video Wiz .
- 2 Select the desired options to create a movie.

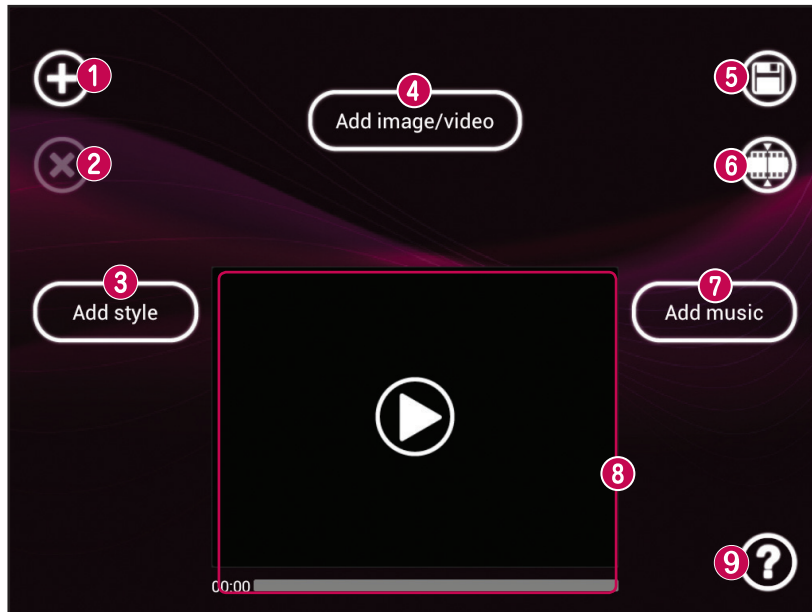


- 1 **Add Media** – Touch this icon add images and/or video to your movie.
 - Touch **Images** to add images, then touch the image(s) you want to add.
 - Touch **Videos** to add video footage, then touch the video(s) you want to add.
 - Touch **Done** to exit after all of the media files have been added.
- 2 **Delete Media** – Touch this icon to remove the selected image(s) and/or video(s).
 - Touch an image or video in the added media contents section, touch **Delete Media** , then touch **Delete selected** (or **Delete all**).
- 3 **Add Style** – Touch this icon to select the desired movie style.
 - Touch the up or down arrow to scroll through and select the style you want.
- 4 **Added image/video** – Displays all of the selected image(s) and/or video(s) for your movie.
- 5 **Save** – Touch this icon to save the movie file.
- 6 **Edit** – Touch this icon to edit the movie file.
 - Swipe left and right to select the footage to edit.
 - Touch the **Overlay Text** icon to insert text.
 - Touch the **Overlay Image** icon to insert selected graphic(s).
 - Touch the **Trim Video** icon to trim segments from your video footage.
 - Touch the **Done** icon to exit when you're finished editing.
- 7 **Add Music** – Touch this button to set the background music.
- 8 **Preview** – Touch this icon to play your movie.
- 9 **Help** – Touch this icon to view information on how to use the Video Wiz application.

Multimedia











You can store multimedia files on a internal memory for easy access to all your multimedia files.

Video Player

Your LG-P895 has a built-in video player that lets you play all your favourite videos. To access the video player, Touch  > **Apps** tab > **Video Player**.

Playing a video

- 1 In the home screen, touch  > **Apps** tab > **Video Player**.
- 2 Select the video you want to play.

	Touch to pause playback a video.
	Touch to resume playback a video.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.
	Touch to set Dolby audio effect when connected with headset jack.
	Touch Speed controller icon and drag the progress bar to control playback speed.
	Touch Preview frame icon and drag the handler of seek bar to explore the content with a preview screen.
	Touch to lock a video screen.
	Touch the direct list icon to see the list of videos.


To change the volume while watching video, press the up and down volume keys on the right hand side of the phone.

Touch and hold any video in the list. It displays **Delete** and **Details** as options.

Gallery

Touch  > **Apps** tab > **Gallery**. Open a list of catalogue bars that store all your multimedia files.

Music Player










Your LG-P895 has a built-in music player that lets you play all your favourite tracks. To access the music player, Touch  > **Apps** tab > **Music Player**.

Transferring music files using USB mass storage devices

- 1 Connect the LG-P895 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings** > **Connectivity** > **USB connection type**, then select **Media sync (MTP)**.
- 3 You can view the mass storage content on your PC and transfer the files.

Playing a song

- 1 In the Home screen, touch  > **Apps** tab > **Music Player**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist.
	Touch to go back to the beginning of the song. Touch twice to return to the previous song.
	Touch to manage the music volume.
	Touch to set repeat mode.
	Touch to set shuffle mode.
	Touch to see the current playlist.
	Touch to see lyrics. This option is on only if the song includes the lyrics.

To change the volume while listening to music, press the up and down volume keys on the right-hand side of the phone.

Touch and hold any song in the list. It displays **Play**, **Add to playlist**, **Set as ringtone**, **Delete**, **Share**, **Search** and **Details**.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material.

Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.


Multimedia

LG Tag+

What is LG Tag+

LG Tag+ allows easy saving and loading to NFC tag, which can be customized to suit certain environments.

Using Tag+ writing

- 1 Touch  > **Apps** tab > **LG Tag+**.
- 2 Select the desired mode (**Car/Office/Sleep/User mode**) and tap **Write on NFC tag**.
- 3 Touch the back of your device to a tag, then launching application and changing settings can be set.

Using Tag+ reading

When touching the set tag, mode will be activated right away.

Media Home

Using media home

- 1 Touch  > **Apps** tab > **Media Home**
- 2 Select the desired function among of videos, photos, music.

Setting media home

- 1 Touch  > **Apps** tab > **Media Home** > **Settings**
- 2 You can change the settings based on your preferences.


Tip!

Once you connect your device to a TV or monitor via a MHL cable, media home apps will be launch automatically when **Media Home** > **Settings** > **Auto-launch and auto-off** option is enabled.


Notebook









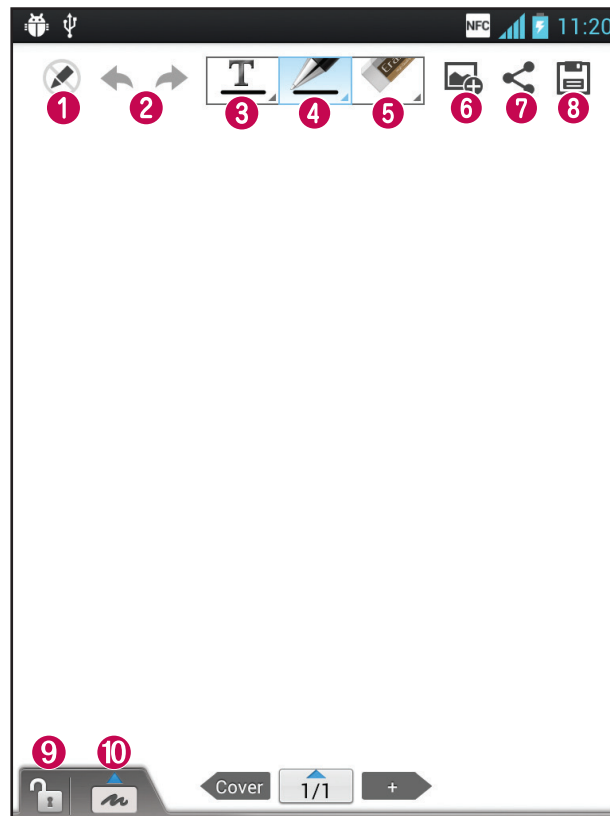

With Notebook application, you can manage and personalize a wide variety of information.

Making a note

- 1 Touch  > **Apps** tab > **Notebook**.
- 2 Touch **New note** to create a new note.
- 3 Select the desired mode(**Cover, Title, Paper, Paper colour**) and **OK**.

Getting to know the Notebook





- 1  – Select the Read only or edit mode.
- 2  – Undo or Redo.
- 3  – Tap this button to write.
- 4  – Select the Pen type, Thickness, Opacity and Colour.
- 5  – Erase the memo that you created.
- 6  – Touch to attach the files using Picture, Capture picture, Video, Capture video, Audio, Record voice, Location, Sticker and Date and time.
- 7  – Share the current note to others via Gmail, E-mail, Social+, Bluetooth, Messaging, Picasa, Google+, Memo.
- 8  – Save the note with the current screen.
- 9  – Select to lock or unlock the Front key.
- 10  – Tap this button to enlarge the input area.


LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.




How to Get to LG SmartWorld from Your Phone

- 1 Touch  > **Apps** tab > Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.



How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
 -  – Search Content.
 -  – Find contents by category(e.g. Games, Education, Entertainment etc).
 -  – List of downloaded/to-be updated contents.
- Try the easy "Menu" buttons to find what you're looking for fast.
 - Apps for you** – Recommended content based on your previous choices.
 - Settings** – Set Profile and Display.
 - Sign in** – Set your ID and Password.
- Try other useful functions as well. (Content Detail screen)

NOTE: LG SmartWorld may not be available in all carriers or countries.




Utilities

Setting your alarm



- 1 Touch  > **Apps** tab > **Alarm/Clock** > .
- 2 After you set the alarm, the LG-P895 lets you know how much time is left before the alarm will invoke.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Puzzle lock** and **Memo**. Touch **Save**.

NOTE: To change alarm settings on alarm list screen, touch the Menu key and select Settings. You can adjust the below options: Alarm in silent mode, Alarm volume, Side button behavior and Puzzle lock option.

Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch , select the **Advanced panel**, then choose sin, cos, tan, log and so on.
- 5 To check history tap the icon 


Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**
- 2 On the screen, you can find the different view types of the Calendar (Day, Week, Month, Agenda).
- 3 Tap on the date you want to add event on and touch .
- 4 Touch **Event name** then enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you want your event to start and finish.
- 6 If you want to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.

Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.

To Synchronize MS Exchange

- 1 From the Home Screen, Touch  > Settings.
- 2 Touch Accounts & sync > ADD ACCOUNT.
- 3 Touch Microsoft Exchange to create Email address and Password.
- 4 Make sure you checkmark Sync task.

Polaris Office

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office**.

Managing files

Polaris Office provides mobile users with convenient file management features, including copying, moving and pasting, and deleting files and folders right on the device.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

FileShare

This feature allows you to share files from your phone.

1 Touch  > FileShare

2 Choose the types of content you would like to share. Choose from Images, Videos, Music and Document.

Backup

About backing up and restoring smart phone data


It recommends that you regularly create and save a backup file on the Internal Storage, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.

This Backup application support between LG smart phones, other S/W version or OS. And so, when you buy the new LG smart phone, you can back up the current LG-P895 smart phone data on your new one.

If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Applications** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages**, and **System settings** using this application.


- To perform a manual backup of your smart phone data.
- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.

Back up your smart phone data

- 1 Touch  > **Apps** tab > and then select **Backup** > **Backup** > **Internal Storage**.
- 2 Touch the **Add new** to enter a name for your backup file, and then select **Continue**.
- 3 Select the check box next to the item you want to back up, and then select **Continue** to back up.
- 4 When all selected files backed up, you will see the message '**Done**' and select **Continue** to finish backing up data.

Scheduling automatic backups


You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:

- 1 Touch  > **Apps** tab > and then select **Backup** > **Schedule**.
- 2 On the **Scheduled Backup Location** screen, touch **Internal Storage**.
- 3 From the list, select how often you want to back up your device data and settings, and select **Continue**.
- 4 Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

Restoring smart phone data

To restore data that is in your on-board device memory, mass storage mode must be turned off.

NOTE: All files that are stored on your smart phone are deleted before the backup file is restored.

- 1 Touch  > **Apps** tab > and then select **Backup** > **Restore** > **Internal Storage**.
- 2 On the **Restore** screen, select a backup file that contains the data you want to restore.
- 3 Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.


NOTE: Please note that your phone data will be overwritten with the contents of your backup.

- 1 If the backup file is encrypted, type the password that you set to encrypt.
- 2 When all selected files restored, you will see the message '**Done**' and select **Yes** to restart the phone.


NOTE:

- While in Mass storage mode, this Backup Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.

Utilities

Press the **Menu**  from the **Backup** screen, and select **Settings > Security > Enable encryption** and select the check box. To restore synchronised organizer data, you must have an activation password.

NOTE:

You can also enable automatic delete old backups and only keep the most recent backup. Press the **Menu**  from the **Backup** screen, and select **Settings > Scheduled backup > Auto delete old backups** to select the number of scheduled backups to keep.






The web

Internet

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the web toolbar

-  Touch to go back a page.
-  Touch to go forward a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.
-  While holding down the icon, tilt the device toward body to zoom in or reverse to zoom out.
-  Touch to add a new window.
-  Touch to access bookmarks.

Using options

Press  to view options.

Refresh – Update the current web page.

Save to bookmarks – Add the current web page as bookmark.

Go to Homepage – Allow you to go to a homepage.

Share page – Allows you to share the web page with others via Bluetooth, E-mail, Gmail, Google+, Messaging, Social+.

Find on page – Allows you to find letters or words on the current web page.

Request desktop site – Allows you to view the web page as desktop.

Save for offline reading – Save current page to read it during offline.

Brightness – Modify viewing brightness for comfortable web browsing.

Settings – Displays Browser settings.

Exit – Exit from the browser.

Settings

In the home screen, touch  > **Apps** tab > **Settings**.

WIRELESS & NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P895 into the router.

You can find the MAC address in the following user interface: Touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced** > **MAC address**.

< **Bluetooth** >

Turns on Bluetooth to connect to Bluetooth devices.

< **Data usage** >

Displays the data usage and set mobile data usage limit.

< **Call** >

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

< **More** >

Airplane mode – After switching to airplane mode, all wireless connections are disabled.

Wi-Fi Direct – Make a connection directly with Wi-Fi devices without any Access Point.

Portable Wi-Fi hotspot – Allows you to share mobile network via Wi-Fi and you can configure the portable Wi-Fi hotspot settings.

NFC – Your LG-P895 is NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your contents with a NFC tag or another NFC support device via simple touch with your device. If you touch a NFC tag with your device, it will display the tag contents on your device.

To switch NFC on or off: From the home screen, touch and slide the notification drawer down with your finger, then select the NFC icon to turn it on.

NOTE: When the Airplane mode is activated, NFC application can be used.

Using NFC: To use NFC, make sure your device is switched on and activate the NFC, if disabled.

Android Beam – You can beam a web page, a video, or other content from your screen to another device by bringing the devices together (typically back to back).

NOTE: Make sure both devices are unlocked, support Near Field Communication (NFC), and have both NFC and Android Beam™ turned on.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

NOTE: You must set a lock screen PIN or password before you can use credential storage.

DEVICE

< Sound >

Sound profile – You can choose the Sound, Vibrate only or Silent.

Volumes – You can manage the volume of Phone Ringtone, Notification sound, Touch feedback & system, Music, video, games and other media, Alarms.

Phone ringtone – Allows you to set your default incoming call ringtone.

Notification sound – Allows you to set your default notification ringtone.

Ringtone with vibration – Vibration feedback for calls and notifications.

Quiet time – Set times to turn off all sounds except alarm and media.

Dial pad touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Touch sounds – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your phone to play a sound when locking and unlocking the screen.

Vibrate on touch – Allows you to set the vibration feedback for phone screen touch.

< Display >

Brightness – Adjust the screen brightness.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Screen timeout – Set the time for screen timeout.

Font type – Change the type of the display font.

Font size – Change the size of the display font.

Aspect ratio correction – Change the resolution size of downloaded applications to fit the screen size.

Front key light – Set the front key light duration.

Motion sensor calibration – Allows you to Improve the accuracy of the tilt and speed of the sensor.

Settings

< Home screen >

Set the **Theme**, **Animation**, **Screen swipe effect** or **Wallpaper**. Select the option to set **Scroll wallpaper**, **Scroll screens circularly** and **Home backup & restore**.

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set among of **None**, **Swipe**, **Face Unlock**, **Pattern**, **PIN**, **Password**.

If you have enabled Pattern lock type then , When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Wallpaper – You can select the wallpaper for lock screen from Wallpapers or Gallery.

Clocks & shortcuts – Customize clocks & shortcuts on lock screen.

Owner info – Show owner info on lock screen.

Lock timer – Set the lock time after screen timeout.

Power button instantly locks – Set the screen lock when press the power button.

< Gesture >

Move home screen items – Press and hold item and tilt device to move item within home screens or applications.

Tilt sensitivity – Test and adjust sensitivity of tilt sensor for home screen and applications.

Silence incoming calls – Flip device to mute incoming call.

Snooze or stop alarm – Flip device to snooze or stop alarm.

Pause video – Flip device to pause playing video.

Help – Help for gesture functions.

< Storage >

INTERNAL STORAGE – View the internal storage usage.

< Power saver >

Here, you can manage the battery and check the power saving items. Also, you can check the battery use.

< Apps >

You can view and manage the applications.

PERSONAL

< Accounts & sync >

Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

< Location services >

Google's location service – If you select Google's location service, your phone determines your

approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

GPS satellites – If you select GPS satellites, your phone determines your location to street level accuracy.

Location & Google search – If you select Google use your location to improve search results and other services.

< Security >

Set up SIM card lock – Set up Micro-USIM card lock or change the Micro-USIM PIN.

Password typing visible – Show last character of the hidden password as you type.

Phone administrators – View or deactivate device administrators.

Unknown sources – Default setting to install non-Market applications.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates.

Clear credentials – Remove all certificates.

< Language & input >

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

< Backup & reset >

Change the settings for managing your settings and data.

Back up my data – Set to back up your settings and application data to the Google server.

Backup account – Set to back up your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

Factory data reset – Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

SYSTEM

< Date & time >

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Settings

< Connectivity >

USB connection type – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software** or **Camera (PTP)**).

Ask on connection – Ask USB connection mode when connecting to a computer.

Help – Help for connectivity.

On-Screen Phone – Displaying screen and controlling phone from PC are available through USB, Bluetooth or Wi-Fi connection.

PC Suite – Check mark this to use LG **PC Suite** with Wi-Fi connection.

Please note that Wi-Fi network should be connected for LG PC Suite via Wi-Fi connection from the WIRELESS & NETWORKS.

< About phone >

View legal information and check phone status and software version.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update**.

You can also delay the update by 1 hour, 4 hours, 8 hours or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature is dependent on your network service provider, region and country.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.








Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

LG On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Maximises the On-Screen Phone window.
-  Minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.


How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **Support** > **Mobile Phone Support** > Select the Model (LG-P895) > Click **OSP** (On-Screen Phone) to download. You can install the On-Screen Phone on your PC.


Accessories

These accessories are available for use with the LG-P895. (Items described below may be optional.)

Travel adaptor

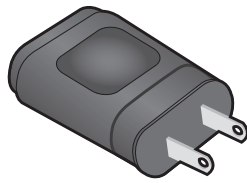

Stereo headset

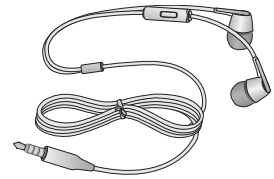


User Guide

Learn more about your LG-P895.



Data cable

Connect your LG-P895 and PC.

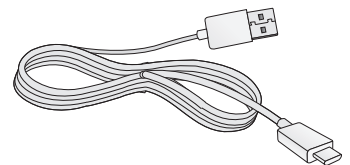

LG Tag+



Micro-USIM Slot Pin



Rubberdium™ Pen



Notice: You can use more convenient if you are use the Rubberdium Pen for home screen touch. However, the bottom button (back/home/recently apps/menu button) is not run to Rubberdium Pen. Please use your finger directly.

⚠ WARNING: Do not touch strongly and rub such as sharp edges

NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
Micro-USIM error	There is no Micro-USIM card in the phone or it is inserted incorrectly.	Make sure that the Micro-USIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network.	Move towards a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the Micro-USIM card is more than 6~12 months old. If so, change your Micro-USIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorised.
	New Micro-USIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key down for at least two seconds.
	Battery is not charged.	Charge battery. Check charging indicator on the display.

Troubleshooting

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace charger.
	Wrong charger	Only use original LG accessories.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Try to perform a software update via the website.

LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.;

Bookala, Thonburi, Bangkok 10600

Working day : Mon - Sat

08:00 - 18:00

Call center : 0-2878-5757

LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี

1-800-545454

กรุงเทพและปริมณฑล

0-2878-5757

เว็บไซต์และอีเมล :

<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อ
กับศูนย์บริการของแอลจีทั่วประเทศ