

עברית  
ENGLISH



**LG**

Life's Good

מדריך למשתמש

**LG-P880**





# LG-P880 מדריך למשתמש

מדריך זה יסייע לכם להתחיל להשתמש בטלפון.



- ייתכן שחלק מהתוכן במדריך זה לא חל על הטלפון שברשותכם. הדבר תלוי בתוכנת הטלפון ובספק השירות שלך.
- מכשיר זה אינו מתאים ללקויי ראייה מפני שלוח המקשים שלו נמצא במסך המגע.
- Copyright ©2012 LG Electronics, Inc. כל הזכויות שמורות. LG והסמל של LG הם סימנים מסחריים רשומים של LG Group ושל החברות הקשורות אליה. כל הסימנים המסחריים האחרים הם רכושם של בעליהם בהתאמה.
- Gmail™, Google Maps™, Google™, YouTube™, Google Talk™ ו-Play Store™ הם סימנים מסחריים של Google, Inc.

הפעלת Wi-Fi Direct לשיתוף	4.....
באמצעות SmartShare	30.....
שימוש ב-SmartShare	30.....
<b>33 שיחות</b>	
ביצוע שיחה	33.....
התקשרות לאנשי הקשר	33.....
מענה לשיחה ודחיית שיחה	33.....
התאמת עוצמת הקול	33.....
ביצוע שיחה נוספת	33.....
צפייה ביומני השיחות	34.....
הגדרות שיחה	34.....
<b>36 אנשי קשר</b>	
חיפוש איש קשר	36.....
הוספת איש קשר חדש	36.....
אנשי קשר מועדפים	36.....
העברת אנשי קשר מהמכשיר	
הקודם למכשיר החדש	37.....
<b>38 הודעות</b>	
שליחת הודעה	38.....
תיבה ברצף	38.....
שימוש בסימני סמיילי	38.....
שינוי הגדרות ההודעה	38.....
<b>39 דוא"ל</b>	
ניהול חשבון דוא"ל	39.....
מסך חשבון דוא"ל	39.....
עבודה עם תיקיות החשבון	39.....
חיבור ושליחה של דוא"ל	40.....
<b>הנחיות לשימוש בטוח ויעיל</b>	4.....
<b>9 היכרות עם הטלפון</b>	
חלקי המכשיר	15.....
QuickMemo	17.....
התקנת כרטיס ה-SIM והסוללה	18.....
טעינת הטלפון	19.....
שימוש בכרטיס הזיכרון	19.....
נעילת המסך וביטול הנעילה	20.....
אבטחת נעילת המסך	21.....
<b>22 המסך הראשי</b>	
עצות בנוגע למסך המגע	22.....
המסך הראשי	22.....
התאמה אישית של המסך הראשי	23.....
חזרה ליישומים שהיו בשימוש	
לאחרונה	23.....
מגירת ההתראות	23.....
הצגת שורת המצב	24.....
מקלדת במסך	25.....
הזנת אותיות עם סימני הטעמה	25.....
<b>26 הגדרת חשבון Google</b>	
<b>27 התחברות לרשתות ולמכשירים</b>	
Wi-Fi	27.....
התחברות לרשתות Wi-Fi	27.....
Bluetooth	27.....
שיתוף החיבור של נתוני הטלפון	28.....
כדי לשנות את שמה של הנקודה	
החמה הניידת או לאבטח אותה	29.....
שימוש ב-Wi-Fi Cast	30.....

- 52 ..... כלי שירות.**  
 52..... הגדרת התראה  
 52..... שימוש במחשבון  
 52..... הוספת אירוע ללוח השנה  
 53..... Polaris Office  
 53..... גיבוי  
 54..... גיבוי נתוני הטלפון החכם  
 54..... תזמון גיבויים אוטומטיים  
 54..... שחזור נתוני הטלפון החכם
- 56 ..... האינטרנט.**  
 56..... דפדפן  
     שימוש בסרגל הכלים של  
 56..... האינטרנט  
 56..... שימוש באפשרויות
- 57 ..... הגדרות.**  
 57..... אלחוטית ורשתות  
 58..... מכשיר  
 60..... אישי  
 61..... מערכת  
 62..... DivX HD
- 64 ..... LG On-Screen Phone**  
 64..... סמלי טלפון במסך המחשב  
 64..... תכונות הטלפון במסך המחשב  
     כיצד להתקין 'טלפון במסך מחשב'  
 64..... במחשב
- 65 ..... אבזרים**
- 66 ..... פתרון בעיות**
- 41 ..... מצלמה**  
 41..... הכרת התצוגה המקדימה  
 42..... צילום מהיר  
 42..... לאחר הצילום  
 43..... שימוש בהגדרות המתקדמות
- 44 ..... מצלמת וידאו**  
 44..... הכרת התצוגה המקדימה  
 45..... צילום סרטון וידאו מהיר  
 45..... לאחר צילום סרטון הווידאו  
 45..... שימוש בהגדרות המתקדמות  
     כוונן העוצמה בעת צפייה בסרטוני  
 46..... וידאו
- 47 ..... מולטימדיה**  
 47..... נגן וידאו  
 47..... הפעלת קובץ וידאו  
 47..... גלריה  
 47..... נגן מוסיקה  
     העברת קבצים באמצעות התקני  
 48..... זיכרון חיצוני מסוג USB  
 48..... השמעת שיר  
 49..... רדיו FM  
 49..... חיפוש תחנות  
 49..... LG Tag+  
 50..... המסך הראשי של מדיה
- 51 ..... LG SmartWorld**  
 51..... גישה ל-LG SmartWorld מהטלפון  
 51..... אופן השימוש ב-LG SmartWorld

- ערך ה-SAR הגבוה ביותר עבור דגם טלפון זה שנמדד על-ידי DASY4 לשימוש באוזן הוא 0.618 ואת/ק"ג (10 גר'), וכאשר נושאים אותו על הגוף, מדובר ב-0.594 ואת/ק"ג (10 גר').
- מכשיר זה עומד בהנחיות החשיפה ל-RF כשמתמשים בו בתנחת השימוש הרגילה ליד האוזן או כשהוא ממוקם לפחות 1.5 ס"מ מהגוף. כאשר נעשה שימוש בנרטיק נשיאה או בתפס או מנשא לחגורה, אסור שתהיה בהם מתכת כלשהי, והמרחק בין המכשיר לגוף צריך להיות לפחות 1.5 ס"מ. כדי לשדר קובצי נתונים או הודעות, מכשיר זה מחייב חיבור איכותי לרשת. במקרים מסוימים עלול שידור קבצי נתונים או הודעות להיות מושהה עד שחיבור כזה יהיה זמין. הקפד על שמירת הוראות המרחק המינימלי המזכורות לעיל עד לסיום השידור.

### טיפול במוצר ותחזוקה

#### אזהרה

השתמש רק בסוללות, במטענים ובאביזרים המאושרים לשימוש עבור דגם ספציפי זה של טלפון. השימוש בסוגים אחרים עשוי לבטל את האישור או האחריות החלים על הטלפון ועלול להיות מסוכן.

הקפד לקרוא הנחיות פשוטות אלה. אי עמידה בהנחיות אלו עלולה להיות מסוכנת או בלתי חוקית.

### חשיפה לאנרגיית תדר רדיו

- מידע על חשיפה לגלי רדיו ושעור ספיגה סגולית (SAR).
- טלפון נייד זה מדגם LG-P880 תוכנן לעמוד בדרישות הבטיחות הרלוונטיות לחשיפה לגלי רדיו. דרישות אלו מבוססות על קווים מנחים מדעיים, ואלה כוללים שולי בטיחות המיועדים להבטיח את בטיחותם של כל בני האדם, בלא קשר לגילם או למצב בריאותם.
- הנחיות החשיפה לגלי רדיו משתמשות ביחידת מידה הנקראת "שעור ספיגה סגולית" (SAR). בדיקות SAR מבוצעות באמצעות שיטות מתוקננות, כאשר הטלפון משדר ברמת העוצמה המרבית המאושרת עבורו בכל תחומי התדרים שבשימוש.
- אף כי עשויים להיות הבדלים בין רמות ה-SAR של דגמי טלפונים שונים של LG, כל הטלפונים מתוכננים לעמוד בהנחיות המתאימות של חשיפה לגלי רדיו.
- מגבלת ה-SAR המומלצת על-ידי הוועדה הבין-לאומית להגנה מפני קרינה בלתי מייננת (ICNIRP) היא ממוצע של 2 ואת/ק"ג על כל 10 גרם של רקמה.

- אין לטעון את הטלפון כאשר הוא נמצא על-גבי מצעים או ריפוד.
- יש לטעון את הטלפון באזור מאורר היטב.
- אין לחשוף טלפון זה לכמות מוגזמת של עשן או אבק.
- אין להחזיק את הטלפון בסמוך לכרטיסי אשראי או כרטיסי נסיעה; הנתונים בפס המגנטי עלולים להיפגם.
- אין להקיש על המסך באמצעות חפצים חדים, שכן הדבר עלול לגרום נזק לטלפון.
- אין לחשוף את הטלפון לנזלים או ללחות.
- יש לנקוט זהירות בשימוש באיזורים, כמו אוניות. אין לגעת באנטנה שלא לצורך.
- אם זכוכית הטלפון שבורה או סדוקה, אל תגע בה או תנסה להסיר אותה ואל תשתמש במכשיר. האחריות אינה מכסה מקים שנגרמו לתצוגת הזכוכית כתוצאה מפגיעה ושימוש לרעה.
- הטלפון שלך הוא מכשיר אלקטרוני המייצר חום במהלך הפעלה רגילה. בהיעדר אוורור הולם, מגע ישיר וממושך מאוד של העור עלול לגרום לאי-נוחות או לכוויות קלות. לפיכך, יש לנקוט זהירות בהחזקת הטלפון במהלך ההפעלה או מיד אחריה.
- אין לפרק טלפון זה. כאשר נדרש תיקון, פנה לטכנאי שירות מוסמך.
- תיקונים במסגרת האחריות, לפי שיקול דעתה של LG, עשויים לכלול חלקים או לוחות חלופיים, חדשים או מחודשים, ובלבד שהם מצדידים בפונקציונליות זהה לזו של החלקים המוחלפים.
- אין לקרב את הטלפון למכשירים חשמליים כגון טלוויזיות, מכשירי רדיו ומחשבים אישיים.
- יש לשמור את הטלפון הרחק ממקורות חום כדוגמת רדיאטורים או תנורי בישול.
- אין להפיל את הטלפון.
- אין לאפשר זעזוע מכני או חבטה.
- יש לכבות את הטלפון בכל מקום שבו נדרש הדבר על-ידי תקנות מיוחדות. לדוגמה, אין להשתמש בטלפון בבתי חולים, שכן הפעלתו עלולה להשפיע על פעולת מכשור רפואי רגיש.
- אין לאחוז בטלפון בידיים רטובות בזמן הטענתו. אחיזה במצב כזה עלולה לגרום להתחשמלות ולהסב נזק כבד לטלפון.
- אין לטעון את הטלפון ליד חומר דליק, מכיוון שזה עלול להתחמם ולהפוך לסכנת שריפה.
- יש להשתמש במטלית יבשה לניקוי חלקו החיצוני של הטלפון (אין להשתמש בחומרים ממסים כגון בנזן, מדלל או אלכוהול).

- אם המכונת מצוידת בכרית אוויר מתנפחת, אין לחסום אותה על-ידי התקנה של ציוד אלחוטי נישא. הדבר עלול לגרום לכשל של הכרית או לפציעה חמורה עקב ביצועים לא נאותים שלה.
- אם אתה מאזין למוסיקה בעת תנועה, ודא שהעוצמה היא ברמה סבירה, כך שתמשיך להיות מודע לסביבתך. הדבר חשוב במיוחד בקרבת כבישים.

### מנע נזק לשמיעתך

- חשיפה לעוצמות קול גבוהות במשך פרקי זמן ארוכים עלולה להזיק לשמיעה. לכן אנו ממליצים שלא תדליק או תכבה את המכשיר סמוך לאוזנך. מומלץ גם להגדיר את עוצמת הקול של המוסיקה והשיחה לרמה סבירה.
- כאשר אתה משתמש באוזניות, הנמך את עוצמת הקול אם אינך מצליח לשמוע את האנשים שמדברים בסביבתך, או אם האדם שלצדך יכול לשמוע את מה שאתה שומע באוזניות.

**הערה:** עוצמת קול מופרזת באוזניות עלולה לפגוע בשמיעה.

### תפעול יעיל של הטלפון

#### מכשירים אלקטרוניים

- כל הטלפונים הניידים עלולים לספוג הפרעות שיפיעו לרעה על ביצועיהם.
- אין להשתמש בטלפון הנייד בסמוך לציוד רפואי ללא קבלת רשות. יש להימנע מהנחת הטלפון מעל לקוצב לב, למשל בכיס החזה.
- טלפונים ניידים עלולים להפריע לעזרי שמיעה מסוימים.
- הפרעה משנית עלולה להשפיע על מכשירי טלוויזיה, רדיו, מחשבים וכו'.

#### בטיחות בדרכים

- בדוק את החוקים והתקנות לגבי שימוש בטלפונים ניידים באזורים שבהם אתה נהג.
- אין להחזיק את הטלפון ביד בזמן נהיגה.
- יש להפנות את מלוא תשומת הלב לנהיגה.
- רד לשול הדרך וחנה לפני ביצוע שיחה או מענה לשיחה, בהתאם לתנאי הדרך.
- אנרגיית תדר רדיו עשויה להשפיע על מערכות אלקטרוניות מסוימות בכלי רכב, כדוגמת מערכות סטריאו וציוד בטיחות.

## חלקי זכוכית

חלקים מסוימים של הטלפון עשויים מזכוכית. זכוכית זו עלולה להישבר אם הטלפון ייפול על משטח קשה או יקבל מכה חזקה. אם הזכוכית נשברת, אל תנסה לגעת בה או להסיר אותה. יש להפסיק להשתמש בהתקן הנייד עד להחלפת הזכוכית על-ידי ספק שירות מורשה.

## סביבה שבה מבוצעות עבודות עם חומרי נפץ

אין להשתמש בטלפון באזורים שבהם מתבצעות פעולות פיצוץ. שים לב להגבלות ועמוד בכל התקנות או הכללים.

## סביבה שבה קיימת סבירות לפיצוץ

- אין להשתמש בטלפון באזורי תדלוק.
- אין להשתמש בו בסמוך לדלק או לכימיקלים.
- אין להוביל או לאחסן גז דליק, נוזלים דליקים או חומרי נפץ בתא הרכב המכיל את הטלפון הנייד או את אבזיריו.

## כלי טיס

- התקנים אלחוטיים עלולים לגרום להפרעה במטוס.
- יש לכבות את הטלפון הנייד לפני העלייה למטוס.

- אין להשתמש בו על הקרקע ללא קבלת רשות מאנשי הצוות.

## ילדים

יש לשמור על הטלפון במקום בטוח, מחוץ להישג ידם של ילדים קטנים. ההתקן כולל חלקים זעירים העלולים להוות סכנת חנק אם ינותקו מהטלפון.

## שיחות חירום

רק רשתות סלולריות מסוימות מאפשרות לבצע שיחות חירום. לפיכך, בשום מקרה אין לסמוך רק על הטלפון לביצוע שיחות חירום. בדוק את הנושא עם חברת הסלולר שלך.

## מידע לגבי הסוללה והטיפול בה

- אין צורך לפרוק את הסוללה במלואה לפני טעינתה מחדש. בניגוד למערכות סוללה אחרות, אין השפעת זיכרון שעלולה לפגום בביצועי הסוללה.
- יש להשתמש אך ורק בסוללות ובמטענים של LG. מטעני LG מיועדים להארכת חיי הסוללה.
- אין לפרק או לקצר את הסוללה.
- יש לשמור על ניקיון מגעי המתכת של הסוללה.
- יש להחליף את הסוללה כאשר היא אינה מפיקה עוד רמת ביצועים סבירה. ניתן לטעון מחדש את מארז הסוללה מאות פעמים לפני

ציפורניים של בעל חיים. מגע כזה עלול לגרום לשריפה.

## הצהרת תאימות

בזאת, **LG Electronics** מצהירה שהמוצר **LG-P880** תואם לדרישות היסודיות ולתנאים הרלוונטיים האחרים של הנחיה **EC/1999/5**. ניתן למצוא עותק של הצהרת התאימות בכתובת

<http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

## טמפרטורות סביבה

**מרבית:** +50°C (פריקה),  
+45°C (טעינה)  
**מזערית:** -10°C

## הודעה: תוכנות קוד פתוח

לקבלת קוד המקור המתאים במסגרת MPL, LGPL, GPS ורישיונות קוד פתוח אחרים, בקר בכתובת <http://opensource.lge.com/> כל תנאי הרישיון, כתבי הוויתור וההודעות הנזכרים זמינים להורדה עם קוד המקור.

שיהיה צורך להחליפו.

- כדי להשיג שמישות סוללה מרבית, יש לטעון אותה מחדש אם לא הייתה בשימוש במשך זמן רב.
- אין לחשוף את מטען הסוללה לאור שמש ישיר או להשתמש בו בתנאי לחות גבוהה, כמו חדר אמבטיה.
- אין להשאיר את הסוללה במקומות חמים או קרים, שכן הדבר עלול לפגום בביצועיה.
- קיימת סכנת התפוצצות אם הסוללה הוחלפה בסוג סוללה שאינו מתאים.
- השלך סוללות משומשות על פי הוראות היצרן. יש למחזר, אם אפשר. אין להשליך אותן כאשפה ביתית.
- אם עליך להחליף סוללה, קח אותה למרכז השירות המורשה הקרוב של ברימאג תקשורת לצורך קבלת סיוע.
- יש לנתק תמיד את המטען מהשקע לאחר שהטלפון נטען במלואו כדי למנוע בזבוז מיותר של חשמל מצד המטען.
- אורך חיי הסוללה בפועל תלוי בתצורת הרשת, בהגדרות המוצר, באופי השימוש, בתנאי הסוללה ובתנאים הסביבתיים.
- הקפד שלא ייווצר מגע בין הסוללה לבין פריטים חדים כגון שיניים או

## נא לקרוא פרק זה לפני תחילת השימוש בטלפון!

• הפחת את בהירות המסך וקבע פרק זמן קצר יותר לכיבוי אוטומטי של המסך.

• בטל את הסנכרון האוטומטי של Gmail, לוח השנה, אנשי הקשר ויישומים אחרים.

• ייתכן שחלק מהיישומים שהורדת מפחיתים את כוח הסוללה.

### כדי לבדוק את רמת הכוח של הסוללה:

• גע ב-  < הכרטיסייה **יישומים** < **הגדרות** < **אודות הטלפון** < מהמערכת < **מצב**

מצב הסוללה (בטעינה או לא בטעינה) ורמת טעינתה (כאחוז מהטעינה המלאה) יוצגו בחלקו העליון של המסך.

### כדי לשלוט ולפקח על השימוש בכוח הסוללה:

• גע בכרטיסייה **יישומים** 

< **הגדרות** < **לחוסך החשמל** < מהאפשרות 'מכשיר' < **שימוש בסוללה** מ'מידע על הסוללה'


בחלקו העליון של המסך מוצג זמן השימוש בסוללה. הזמן המוצג מציינ את משך הזמן שעבר מאז החיבור האחרון למקור מתח, או, אם הטלפון מחובר כעת, כמה זמן פעל הטלפון לאחרונה על כוח סוללה. במסך מוצגים היישומים או השירותים שצורכים כוח סוללה, והרשימה

לפני מסירת הטלפון לתיקון או פנייה לנציג שירות, בדוק אם הבעיות שנתקלת בהן מתוארות בסעיף זה.

## 1. זיכרון הטלפון

כאשר שטח הזיכרון הפנוי קטן מ-10%, הטלפון לא יכול לקבל הודעות חדשות. עליך לבדוק את זיכרון הטלפון ולמחוק חלק מהנתונים, כגון יישומים או הודעות, כדי לפנות נפח זיכרון.

### כדי להסיר התקנה של יישום:

1 גע בכרטיסייה **יישומים**  < **הגדרות** < **יישומים** מהקטגוריה 'מכשיר'.

2 לאחר שיופיעו כל היישומים, גלול ובחר את היישום שאת התקנתו ברצונך להסיר.

3 גע **בהסר התקנה**.

## 2. מיטוב חיי הסוללה

ניתן להאריך את משך חיי הסוללה בין טעינות על-ידי כיבוי תכונות שפעולתן הרציפה ברקע אינה דרושה. תוכל לפקח על המידה שבה יישומים ומשאבי מערכת צורכים כוח סוללה.

### הארכת חיי הסוללה של הטלפון:

• כבה תקשורת רדיו שאינך משתמש בה. אם אינך משתמש ב-Wi-Fi, חיבור Bluetooth או GPS, כבה אותם.

מסודרת לפי רמת הצריכה: מהגבוהה ביותר לנמוכה ביותר.

### 5. שימוש בתבנית ביטול נעילה

הגדר תבנית ביטול נעילה להגנה על הטלפון. פעולה זו פותחת מסך שינחה אותך כיצד לשרטט תבנית ביטול נעילה של המסך. עליך ליצור קוד PIN לגיבוי כאמצעי בטיחות למקרה שתשכח את תבנית הנעילה. **זהירות:** צור חשבון Google לפני שתגדיר תבנית ביטול נעילה, וזכור את קוד ה-PIN לגיבוי שיצרת בזמן יצירת נעילת תבנית.

#### ⚠ אזהרה

##### אמצעי זהירות שיש לנקוט בעת השימוש בנעילת תבנית.

חשוב מאוד לזכור את תבנית ביטול הנעילה שהוגדרה. אם תשתמש בתבנית שגויה 5 פעמים, תאבד את הגישה לטלפון. לרשותך 5 ניסיונות להזין את תבנית ביטול הנעילה, קוד ה-PIN או הסיסמה. אם ניצלת את כל 5 הניסיונות, תוכל לנסות שוב לאחר 30 שניות.

##### אם שכחת את תבנית ביטול הנעילה, קוד ה-PIN או הסיסמה:

<אם שכחת את התבנית>  
אם נכנסת לחשבון Google שלך בטלפון אך שגית 5 פעמים בהזנת התבנית, לחץ על הלחצן 'שכחת את התבנית' בתחתית המסך. לאחר מכן תתבקש להיכנס בעזרת חשבון Google, או שיהיה עליך להזין קוד PIN לגיבוי, שאותו הזנת בעת יצירת נעילת תבנית.

### 3. שימוש בתיקות

ניתן לשלב מספר סמלי יישומים בתיקיה. שחרר סמל יישום אחד מעל אחר במסך ראשי, ושני הסמלים ישולבו.

### 4. לפני התקנת יישום או מערכת הפעלה בקוד פתוח.

#### ⚠ אזהרה

אם אתה מתקין או משתמש במערכת הפעלה שונה מזו שסיפק היצרן, הדבר עלול לגרום לתפקוד לקוי של הטלפון. בנוסף, האחריות על הטלפון תתבטל.

#### ⚠ אזהרה

כדי להגן על הטלפון ועל הנתונים האישיים שלך, הורד יישומים ממקורות מהימנים בלבד, כגון Play Store™. התקנה שגויה של יישומים מסוימים בטלפון עלולה לגרום לטלפון לפעול בצורה לא תקינה או להתרחשות שגיאה חמורה. יש להסיר מהטלפון את היישומים הללו ואת כל ההגדרות והנתונים הקשורים אליהם.

### ⚠️ אזהרה

אם תבצע איפוס קשיח, כל יישומי המשתמש, נתוני המשתמש ורשימות DRM יימחקו. זכור לגבות את כל הנתונים החשובים לפני ביצוע האיפוס הקשיח.

## 7. פתיחת יישומים ומעבר ביניהם

קל לבצע ריבוי-משימות במערכת Android, מכיוון שניתן להפעיל יותר מיישום אחד בו-זמנית. אין צורך לצאת מיישום לפני פתיחת יישום אחר. ניתן להשתמש בכמה יישומים פתוחים ולעבור ביניהם. מערכת Android מנהלת את היישומים, ועוצרת ומפעילה אותם בהתאם לצורך כדי להבטיח שיישומים לא פעילים לא יצרכו משאבים שלא לצורך.

**כדי לחזור להצגת הרשימה של יישומים שהיו בשימוש לאחרונה:** פשוט לחץ לחיצה ארוכה על מקש הבית.

### כדי להפסיק יישומים:

- 1 גע בכרטיסייה **יישומים** < **הגדרות** < **יישומים** < **מופעלים** מה'מכשיר'  
2 גלול וגע ביישום הרצוי וגע באפשרות **הפסק** כדי להפסיק אותו.

אם לא יצרת חשבון Google בטלפון או ששכחת את קוד ה-PIN לגיבוי, עליך לבצע איפוס קשיח.

> אם שכחת קוד PIN או סיסמה <  
אם שכחת את קוד ה-PIN או הסיסמה, עליך לבצע איפוס קשיח.  
**זהירות:** אם תבצע איפוס קשיח, כל יישומי המשתמש ונתוני המשתמש יימחקו.

**הערה:** אם לא ביצעת כניסה באמצעות חשבון Google ושכחת 'תבנית נעילה', עליך להזין קוד PIN לגיבוי.

## 6. שימוש באיפוס קשיח (איפוס להגדרות היצרן)

אם הטלפון אינו משתחזר למצב המקורי, יש להשתמש באיפוס קשיח (איפוס להגדרות היצרן) כדי לאתחל אותו. כבה את המכשיר.

- 1 לחץ לחיצה ארוכה על **מקש הפעלה/נעילה + מקש Volume Down (הנמכת עוצמת הקול)**.
- 2 כאשר הלוגו של LG יופיע במסך, שחרר את כל המקשים.
- 3 לאחר מספר שניות, המכשיר יאפ" שר לך לבחור בפונקציית האיפוס להגדרות היצרן בתוכנית השירות לשיקום המערכת של Android.
- 4 גלול את הרשימה באמצעות מקשי עוצמת הקול ובחר מתוכה באמצעות **מקש הפעלה/נעילה**.

## התקנת יישום המחשב LG PC Suite

ניתן להוריד את יישום המחשב LG PC Suite מדף האינטרנט של LG.

1 עבור אל [www.brimag-telecom.co.il](http://www.brimag-telecom.co.il)

2 עבור אל **מוצרים < בחר את**

**הדגם (LG-P880) < תמיכה.**

3 לחץ על **PC Suite** במקטע **הורדות**, כדי להוריד את תוכנת המחשב **LG PC Suite**.

## דרישות מערכת עבור תוכנת המחשב LG PC Suite

- מערכת הפעלה: 32 Windows XP סיביות (Service pack 2), Windows Vista 32 סיביות/64 סיביות, Windows 7 32 סיביות/64 סיביות
- CPU: מעבדי 1 GHz ומעלה
- זיכרון: רכיבי RAM בנפח 512 MB ומעלה
- כרטיס מסך: רזולוציה של 1024 x 768, צבע 32 סיביות ומעלה
- כונן דיסק קשיח: שטח פנוי של לפחות 100 MB בדיסק הקשיח (ייתכן שיהיה צורך בשטח רב יותר, בהתאם לנפח הנתונים המאוחסנים).
- תוכנה דרושה: מנהלי התקנים משולבים של LG, Windows Media Player 10 ואילך

## 8. התקנת תוכנת מחשב (LG PC Suite)

היישום למחשב LG PC Suite הוא תוכנית שמאפשרת לך לחבר את המכשיר למחשב באמצעות Wi-Fi וכבל USB. לאחר ההתחברות תוכל להשתמש בפונקציות של המכשיר מהמחשב.

## בעזרת יישום המחשב LG PC Suite, ניתן...

- לנהל ולהפעיל את תוכני המדיה (מוסיקה, סרטים, תמונות) מהמחשב.
- לשלוח תוכן מולטימדיה למכשיר.
- לסנכרן נתונים (לוחות זמנים, אנשי קשר, סימניות) במכשיר ובמחשב.
- לגבות את היישומים במכשיר.
- לעדכן את התוכנות במכשיר.
- לגבות ולשחזר את המכשיר.
- להפעיל תוכני מולטימדיה של המחשב ממכשיר אחר.

**הערה:** באפשרותך להשתמש בתפריט העזרה של היישום כדי לגלות כיצד להשתמש ביישום המחשב LG PC Suite.

## 10. סנכרון הטלפון למחשב באמצעות USB

**הערה:** כדי לסנכרן את הטלפון מול המחשב באמצעות כבל USB, יש להתקין במחשב את תוכנת LG PC Suite.

כדי להתקין את LG PC Suite, עיין בדפים הקודמים.

**הערה:** מנהל התקן USB משולב של LG


מנהל התקן USB משולב של LG דרוש כדי לחבר מכשיר של LG למחשב. הוא מותקן באופן אוטומטי בעת התקנת התוכנה LG PC Suite במחשב.

## 9. סנכרון הטלפון עם מחשב

באמצעות תוכנת המחשב LG PC Suite ניתן לסנכרן בקלות ובנוחות נתונים מהמכשיר והמחשב. ניתן לסנכרן אנשי קשר, לוחות זמנים וסימניות.

### התהליך הוא כדלקמן:

- 1 גע בכרטיסייה  < יישומים > **הגדרות** < **אחסון** מה'מכשיר' כדי לבדוק את מדיית האחסון. (אם ברצונך להעביר קבצים מכרטיס זיכרון או אליו, הכנס את כרטיס הזיכרון לטלפון).
- 2 חבר את הטלפון למחשב באמצעות כבל ה-USB.
- 3 כעת תוצג רשימת מצבי חיבור ה-USB; בחר באפשרות **סינכרון מדיה (MTP)**.
- 4 פתח את תיקיית הזיכרון הנשלף במחשב. תוכל להציג את תוכן האחסון בנפח גדול במחשב ולהעביר את הקבצים.
- 5 העתק את הקבצים מהמחשב לתיקיית הכונן.
- 6 בחר באפשרות 'טעינה בלבד' כדי לנתק את הטלפון.

**עצה!** כדי לחזור ולהשתמש בכרטיס microSD בטלפון, יש לפתוח את מגירת ההתראות ולגעת ב- < **טעינה בלבד**.

כדי לנתק את הטלפון מהמחשב:  
פתח את מגירת ההתראות ובחר ב-  
⚙ < **טעינה בלבד** כדי לנתק את  
הטלפון מהמחשב בצורה בטוחה.

### 11. החזקת הטלפון באופן ניצב

החזק את הטלפון הסלולרי במאונך,  
כפי שמחזיקים טלפון רגיל. לדגם  
LG-P880 יש אנטנה פנימית. היזהר  
שלא לשרוט או לגרום נזק לחלק  
האחורי של הטלפון כדי לא לגרום  
לירידה בביצועים.

כאשר אתה יוזם/מקבל שיחות או  
שולח/מקבל נתונים, הימנע מהחזקת  
הטלפון בחלק התחתון, שבו נמצאת  
האנטנה. הדבר עשוי להשפיע על  
איכות השיחה.

### 12. כאשר המסך קופא


אם המסך קופא או שהטלפון אינו  
מגיב כשמנסים להפעיל אותו:  
הוצא את הסוללה, הכנס אותה מחדש  
ולאחר מכן הפעל את הטלפון.

או

לחץ לחיצה ארוכה על מקש **הפעלה/**  
**נעילה** למשך 10 שניות כדי לכבות  
אותו.

אם הוא עדיין לא פועל, פנה למרכז  
השירות.

## חלקי המכשיר

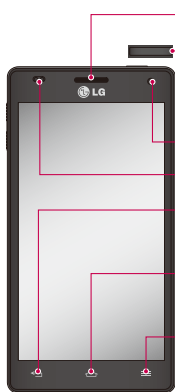

**רמקול אחזיה**

**מקש הפעלה/נעילה**

• הפעלה/כיבוי של הטלפון על-ידי לחיצה ממושכת על מקש זה. לחץ לחיצה קצרה כדי לנעול או לשחרר את המסך.

**עדשת המצלמה**

**חיישן קרבה**

**מקש 'הקודם'**

חזרה למסך הקודם.

**מקש המסך הראשי (בית)**

חזרה למסך הראשי מכל מסך אחר.

**מקש תפריט**

• בדיקת האפשרויות הזמינות.

• עבור אל Google Search™ על-ידי לחיצה ארוכה על מקש זה.

### **⚠ אזהרה**

הנחת עצם כבד על הטלפון או ישיבה עליו עלולות לגרום לפגיעה בפונקציות של מסך המגע ומסך ה-LCD של הטלפון. אין לכסות את חיישן הקרבה של ה-LCD בציפוי מגן. הדבר עלול לגרום לתקלה בחיישן.

### **הערה: חיישן קרבה**

בעת קבלת שיחות וביצוע שיחות, חיישן הקרבה מכבה אוטומטית את התאורה האחורית ונועל את המסך כאשר החיישן מזהה שהטלפון קרוב לאוזן. תכונה זו מאריכה את חיי הסוללה ומונעת את הפעלת מסך המגע שלא בכונה במהלך השיחה.

## לחצני עוצמת קול

- במסך הראשי: שליטה בעוצמת הצלצול.
- במהלך שיחה: שליטה בעוצמת האפרכסת.
- בעת השמעת רצועה: שליטה רציפה בעוצמת השמע.



**עצה!** כאשר אתה לוחץ בו-זמנית על לחצני ההגברה וההפחתה של עוצמת הקול, אתה יכול להשתמש בפונקציה QuickMemo.


מקש הפעלה/נעילה

שקע אחינה

מטען/יציאת USB/יציאת MHL




מיקרופון

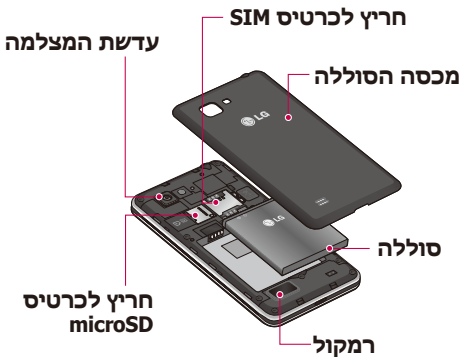

השתמש ב-QuickMemo כדי ליצור מזכרים באופן מעשי ויעיל בזמן שיחה, עם תמונה שנשמרה או במסך הטלפון הנוכחי.

## QuickMemo

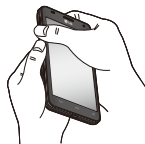

**3** גע ב- מתפריט Edit (עריכה) ובחר ב- כדי לשמור את המזכר עם המסך הנוכחי.

**2** בחר באפשרות התפריט הרצויה מבין **סוג עט**, **צבע** ו-**מחק**, וצור מזכר.

לחלופין, גע והחלק את שורת המצב לכיוון מטה כדי לגעת ב- .

**1** היכנס למסך **QuickMemo** על-ידי לחיצה בו-זמנית על המקשים Volume Up (הגברת עוצמת הקול) ו-Volume Down (החלשת עוצמת הקול) במסך שברצונך לצלם.

**הערה:** השתמש בקצה האצבע בזמן השימוש בפונקציה QuickMemo. אל תשתמש בציפורניך.

### שימוש באפשרויות QuickMemo

בזמן השימוש בפונקציה QuickMemo, תוכל להשתמש בקלות באפשרויות QuickMenu.

- בחר אם ברצונך להשתמש או לא להשתמש במסך הרקע.
- בחר את סוג העט והצבע.
- מחק את המזכר שיצרת.
- הגדר את המיקום שבו ברצונך לשמור את המזכר.
- שמור את המזכר עם המסך הנוכחי.
- שלח או שתף את QuickMemo הנוכחי עם אחרים.


### הצגת ה-QuickMemo שנשמר

גע ב-**גלריה** ולאחר מכן בחר באלבום QuickMemo.


## התקנת כרטיס ה-SIM והסוללה

1 כדי להתחיל להתמצא בטלפון החדש, יהיה עליך להגדירו. כדי להכניס את כרטיס ה-SIM והסוללה:


1 כדי להסיר את מכסה הסוללה, החזק את הטלפון היטב ביד אחת. ביד השנייה משוך והסר את מכסה הסוללה כאשר ציפורן האגודל ניצבת כמוצג באיור.

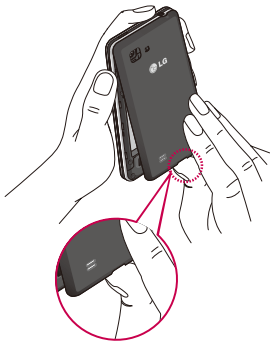

2 הכנס את כרטיס ה-SIM לתוך חריץ כרטיס ה-SIM. ודא שאזור מגעי הזהב של הכרטיס פונה מטה.

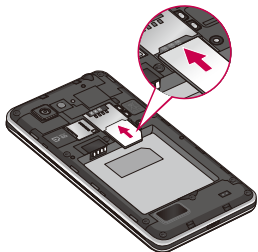

3 הכנס את הסוללה למקומה כש- מגעי הזהב של הסוללה פונים אל מגעי הזהב של הטלפון (1) ולחץ עליה עד שתיכנס למקומה בנקישה (2).

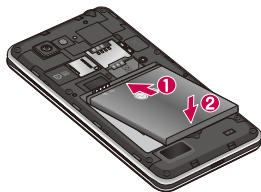

### הערה

- הסוללה חייבת להיות טעונה במלואה מההתחלה כדי לשפר את אורך חייה.
- אין לפתוח את מכסה הסוללה בזמן טעינת הטלפון.

## שימוש בכרטיס הזיכרון

### כדי להכניס כרטיס זיכרון:

הכנס את כרטיס הזיכרון לתוך החרץ. ודא שאזור מגעי הזהב של הכרטיס פונה מטה.

### כדי להוציא כרטיס זיכרון בצורה בטוחה:


גע בכרטיסייה **יישומים** < **הגדרות** < **אחסון מה'מכשיר'** < **ביטול טעינת כרטיס SD** < **אישור**.

**4** הצב את מכסה הסוללה מעל תא הסוללה (1) ולחץ עליו עד שייכנס למקומו בנקישה (2).



## טעינת הטלפון

מחבר המטען נמצא בחלק התחתון של הטלפון. הכנס את המטען, וחבר אותו לשקע חשמל.

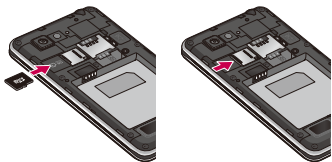

**הערה:** אם יש תוכן בכרטיס הזיכרון, מבנה התיקיות עשוי להשתנות לאחר הפרמוט, מאחר שכל הקבצים יימחקו.

**הערה:** LG-P880 תומך בכרטיסי זיכרון בנפח של עד 64 GB.

## נעילת המסך וביטול הנעילה

לאחר זמן מה שלא השתמשת בטלפון, המסך כבה וננעל באופן אוטומטי. כך נמנעות הקשות בשוגג ונחסך כוח הסוללה.

כאשר אינך משתמש ב-LG-P880, הקש על **מקש הפעלה/נעילה** כדי לנעול את הטלפון.

אם פועלות תוכניות אחרות בעת נעילת המסך, הן עלולות להמשיך לפעול במצב 'נעילה'. מומלץ לצאת מכל התוכניות לפני הכניסה למצב 'נעילה' כדי להימנע מחיובים מיותרים (כגון שיחות טלפון, גישה לאינטרנט ותקשורת נתונים).

כדי להעיר את הטלפון, הקש על **מקש הפעלה/נעילה**. מסך הנעילה יופיע. גע במסך הנעילה והחלק אותו בכל כיוון כדי לבטל את נעילת המסך הראשי. המסך האחרון שהוצג ייפתח.

## ⚠ אזהרה

אל תכניס או תוציא את כרטיס הזיכרון כשהטלפון מופעל. פעולה זו עלולה להזיק לכרטיס הזיכרון ולטלפון, והנתונים המאוחסנים בכרטיס הזיכרון עלולים להיפגם.

## כדי לפרמט את כרטיס הזיכרון:

ייתכן שכרטיס הזיכרון כבר עבר פרמוט. אם לא, עליך לפרמט אותו כדי שניתן יהיה להשתמש בו.

**הערה:** פרמוט של כרטיס זיכרון גורם למחיקת כל הקבצים המאוחסנים בו.

- 1 במסך הראשי, גע בכרטיסייה **יישור מים** כדי לפתוח את התפריט.
- 2 גלול לאפשרות **הגדרות < אחסון** וגע בה.
- 3 גע ב**ביטול טעינת כרטיס SD טיס** וגע ב**אישור** כדי לאשר את הבחירה.
- 4 גע ב**מחק תוכן כרטיס SD < מחק הכל**, ולאחר מכן אשר את הבחירה.
- 5 אם הגדרת נעילת תבנית, הזן אותה ולאחר מכן בחר באפשרות **מחק הכל**.


## אם שכחת את תבנית ביטול הנעילה:

בניסיון להיכנס לחשבון Google דרך הטלפון, אם שגית חמש פעמים בהזנת תבנית ביטול הנעילה, לחץ על הלחצן 'שכחתי את התבנית'. לאחר מכן תידרש להיכנס לחשבון Google שלך כדי לבטל את נעילת הטלפון. אם לא יצרת חשבון Google בטלפון או ששכחת אותו, יהיה עליך לבצע איפוס קשיח.

## אבטחת נעילת המסך

ניתן לנעול את המסך כך שאתה בלבד תוכל לבטל את הנעילה כדי לגשת לטלפון.

**כדי להגדיר תבנית ביטול נעילה, קוד PIN או סיסמה בפעם הראשונה:**

- גע בכרטיסייה **יישומים** <  **הגדרות** < **נעל מסך** < **בחירת נעילת מסך** < **ללא החלקה, פנים נעילת, תבנית, קוד PIN או סיסמה.**

### הערה:

**אמצעי זהירות שיש לנקוט בעת השימוש בנעילת תבנית.**

חשוב מאוד לזכור את תבנית ביטול הנעילה שהוגדרה. אם תשתמש בתבנית שגויה 5 פעמים, תאבד את הגישה לטלפון. לרשותך 5 ניסיונות להזין את תבנית ביטול הנעילה, קוד ה-PIN או הסיסמה. אם ניצלת את כל 5 הניסיונות, תוכל לנסות שוב לאחר 30 שניות.

## המסך הראשי

העבר את האצבע שמאלה או ימינה כדי להציג את החלונות. באפשרותך להתאים לכל חלונות יישומים, הודעות, וידג'טים וטפטים.


**הערה:** חלק מהתמונות במסך עשויות להשתנות בהתאם לספק הטלפון.

במסך הראשי, ניתן להציג סמלי תפריטים בתחתית המסך סמלי תפריטים מאפשרים גישה קלה בלחיצה אחת לפונקציות השימושיות לך ביותר.

 בחר בסמל **טלפון** כדי לפתוח את לוח מקשי המגע לחיוג ולבצע שיחה.

 בחר בסמל **אנשי קשר** כדי לפתוח את אנשי הקשר.

 בחר בסמל **הודעות** כדי לגשת לתפריט שליחת הודעות. כאן תוכל ליצור הודעה חדשה.

 בחר בסמל **יישומים** בחלקו התחתון של המסך. לאחר מכן תוכל להציג את כל היישומים המותקנים. כדי לפתוח יישום כלשהו, גע בסמל ברשימת היישומים.

## עצות בנוגע למסך המגע

להלן מספר עצות הנוגעות לניווט בטלפון.

**נגיעה** – כדי לבחור תפריט או אפשרות או כדי לפתוח יישום, גע בהם.

**לחיצה רצופה** – כדי לפתוח תפריט אפשרויות או לגרור אובייקט שברצונך להזיז, לחץ עליו לחיצה ארוכה.

**גרירה** – כדי לגלול ברשימה או לזוז באיטיות, גרור את האצבע על מסך המגע.

**החלקה** – כדי לגלול ברשימה או לזוז במהירות, החלק במהירות את האצבע על גבי מסך המגע (גרור במהירות ושחרר).

### הערה:

- כדי לבחור בפריט כלשהו, בחר במרכז הסמל.
- אין צורך ללחוץ חזק: מסך המגע רגיש דיו כדי לחוש במגע קל ויציב.
- השתמש בקצה האצבע כדי לגעת באפשרות הרצויה. הקפד שלא לגעת באף מקש אחר.

## חזרה ליישומים שהיו בשימוש לאחרונה

- 1 לחץ לחיצה ארוכה על המקש **בית**. במסך יופיע חלון מוקפץ ובו סמלי היישומים שהופעלו לאחרונה.
- 2 גע בסמל כדי לפתוח את היישום שלו. לחלופין, הקש על מקש **הקור** **דם** כדי לחזור ליישום הנוכחי.

## מגירת ההתראות

מגירת ההתראות ממוקמת בחלקו העליון של המסך.



לחץ על מגירת ההתראות והחלק את האצבע כלפי מטה.

בחר ב- **≡ <** כדי לנהל את ההתראות. כאן תוכל לבדוק ולנהל את QuickMemo, פרופיל 'צלילים', 'Wi-Fi', 'חיבור Bluetooth', NFC, 'חשבונות וסנכרון', 'מצב טיסה', 'סיבוב אוטומטי של המסך', 'בהירות', 'תמיכה בנתונים', GPS או 'נקודה חמה' ניידת של 'Wi-Fi'.


## התאמה אישית של המסך הראשי

באפשרותך להתאים אישית את המסך הראשי על-ידי הוספת יישומים, הורדות, וידג'טים או טפטים. כדי שהשימוש בטלפון יהיה נוח יותר, הוסף את הווידג'טים המועדפים עליך למסך הראשי.

### כדי להוסיף פריטים למסך הראשי:

- 1 לחץ לחיצה ארוכה בנקודה הריקה במסך הראשי. לחלופין, גע בסימן **+** בראש הצד הימני.
- 2 בתפריט 'הוספת מצב', בחר את הפריטים שברצונך להוסיף. הפריטים שנוספו יוצגו במסך הראשי.
- 3 גרור אותם למיקום הרצוי לך והרם את האצבע.

### כדי להסיר פריט מהמסך הראשי:

- **מסך ראשי <** לחץ לחיצה ארוכה על הסמל שברצונך להסיר < גרור אותו אל 

**עצה!** כדי להוסיף סמל יישום במסך הראשי, בתפריט 'יישומים', לחץ לחיצה ארוכה על היישום שברצונך להוסיף.

## הצגת שורת המצב

בשורת המצב מופיעים סמלים שונים להצגת מידע על הטלפון, כגון עוצמת אות, הודעות חדשות, אורך חיי סוללה וחיבורי נתונים ו-Bluetooth פעילים.




להלן טבלה שבה מוסברות משמעויות הסמלים שעשויים להופיע בשורת המצב.

תיאור	סמל
התראת מערכת	
התראה מוגדרת	
הודעה קולית חדשה	
הצלצול מושתק	
NFC פועל	
מצב רטט	
הסוללה טעונה במלואה	
הסוללה נטענת	
הטלפון מחובר למחשב באמצעות כבל USB	
הורדת נתונים	
העלאת נתונים	
GPS מחפש קליטה	
נתוני מיקום מתקבלים מ-GPS	
סינכרון נתונים מתבצע	
הודעת Gmail חדשה	
הודעת Google Talk חדשה	

תיאור	סמל
כרטיס SIM חסר	
אין אות	
מצב טיסה	
מחובר לרשת Wi-Fi	
אוזניות מחוברות	
מתבצעת שיחה	
החזקת שיחה בהמתנה	
רמקול	
מיקרופון הטלפון מושתק	
שיחה שלא נענתה	
Bluetooth מופעל	

הקש כדי להזין רווח. 

הקש כדי ליצור שורה חדשה בשדה ההודעה. 

הקש כדי למחוק את התו הקודם. 

## הזנת אותיות עם סימני הטעמה

כאשר אתה בוחר ב'צרפתית' או 'ספרדית' כשפת הזנת טקסט, באפשרותך להזין תווים מיוחדים הקיימים בצרפתית או בספרדית (למשל "á").

לדוגמה, כדי להזין "á", גע ברציפות במקש "a" עד שמקש ההגדלה יגדל ויציג תווים של שפות שונות. כעת בחר את התו המיוחד הרצוי.



סמל	תיאור
	הודעה חדשה
	שיר מושמע
	רדיו FM מופעל ברקע
	חיבור כמודם סלולרי פעיל
	נקודה חמה ניידת של Wi-Fi פעילה
	הן חיבור כמודם סלולרי והן נקודה חמה ניידת פעילים

## מקלדת במסך

באפשרותך גם להזין טקסט באמצעות המקלדת שבמסך. המקלדת מוצגת במסך באופן אוטומטי כשעליך להזין טקסט. כדי להציג ידנית את המקלדת, גע בשדה טקסט שבו תרצה להזין טקסט.

### שימוש בלוח המקשים והזנת טקסט

הקש פעם אחת כדי להפוך את האות הבאה שתקליד לאות רישית. הקש פעמיים כדי שכל האותיות יהיו רישיות.

הקש כדי לעבור למקלדת של מספרים וסמלים. ניתן גם ללחוץ לחיצה ארוכה על כרטיסייה זו להצגת תפריט ההגדרות.  

## הגדרת חשבון Google

בפעם הראשונה שתפעיל את הטלפון, יש לך הזדמנות להפעיל את הרשת, להיכנס לחשבון Google שלך ולהגדיר כיצד ברצונך להשתמש בחלק משירותי Google.

### כדי להגדיר את חשבון Google שלך:

- היכנס לחשבון Google שלך ממסך הנחיות ההתקנה.

או

- גע בכרטיסייה **יישומים**  < בחר יישום של Google, כגון **Gmail** < בחר באפשרות **חדש** כדי ליצור חשבון חדש.

אם יש לך חשבון Google, גע באפשרות **קיים**, הזן את כתובת הדואר האלקטרוני ואת הסיסמה שלך, ולאחר מכן גע באפשרות **כניסה**. לאחר שהגדרת בטלפון את חשבון Google שלך, יתבצע סנכרון אוטומטי מול חשבון Google שלך באינטרנט. אנשי הקשר, ההודעות ב-Gmail, האירועים בלוח השנה ופרטים נוספים שלך מהיישומים ומהשירותים באינטרנט יסונכרו לטלפון שלך. (בהתאם להגדרות הסנכרון שלך). לאחר הכניסה תוכל להשתמש ב-Gmail™ ובשירותי Google דרך הטלפון.

## Wi-Fi

עם Wi-Fi באפשרותך להשתמש בגישה לאינטרנט מהיר בטווח כיסוי נקודת הגישה (AP) האלחוטית. תוכל ליהנות מאינטרנט אלחוטי באמצעות Wi-Fi, ללא תשלום נוסף.

## התחברות לרשתות Wi-Fi

כדי להשתמש ב-Wi-Fi בטלפון, עליך לגשת לנקודת גישה אלחוטית, או "נקודה חמה". חלק מנקודות הגישה הן פתוחות, ופשוט ניתן להתחבר אליהן. אחרות נסותרות או שחלות בהן תכונות אבטחה אחרות, ולכן תצטרך להגדיר את הטלפון כך שיוכל להתחבר אליהן.

כאשר אינך משתמש ב-Wi-Fi, כבה אפשרות זו כדי להאריך את חיי הסוללה.

**3** הקש על תפריט 'Wi-Fi' שוב כדי להציג רשימה של רשתות Wi-Fi פעילות הנמצאות בטווח.

• הרשתות המאובטחות מסומנות בסמל של מעול.

**4** גע ברשת כדי להתחבר אליה. אם הרשת מאובטחת, תונחה

להזין סיסמה או הרשאות אחרות (פנה אל מנהל המערכת לקבלת פרטים)

**5** לאחר ההתחברות לרשת Wi-Fi, בשורת המצב יוצג סמל המציין מצב Wi-Fi.

## Bluetooth

ניתן לשלוח נתונים באמצעות Bluetooth על-ידי הפעלת יישום מתאים כמו במרבית הטלפונים הניידים.

**צפיה** עם LG-P880, תוכל ליהנות

מ-Bluetooth במהירות גבוהה. אם המכשיר שאיתו ברצונך לשתף קבצים תומך אף הוא ב-Bluetooth במהירות גבוהה, העברת הקבצים תבצע באופן אוטומטי דרך רשת במהירות גבוהה. כדי להשתמש בהעברת נתונים באמצעות Bluetooth ובמהירות גבוהה, ודא תחילה ש-Wi-Fi במכשיר שלך כבוי. ייתכן שההגדרות עבור Bluetooth במהירות גבוהה יהיו שונות בהתאם למכשיר. יש לבדוק את הגדרות המכשיר אצל ספק השירות.

**הערה:** אם אינך בתוך אזור ה-Wi-Fi או שהגדרת את Wi-Fi **ככבוי**, ייתכן שספק השירות יחיל חיובים נוספים עבור שימוש בנתונים סלולריים.

## הפעלת Wi-Fi והתחברות לרשת Wi-Fi

- 1** גע בכרטיסייה **יישומים**  < **הגדרות** < **Wi-Fi** מההגדרה 'אלחוט ורשתות'
- 2** הגדר את **Wi-Fi** **לפועל** כדי להפעיל אותו והתחל בסריקה לאיתור רשתות Wi-Fi זמינות.

## שיתוף החיבור של נתוני הטלפון

חיבור כמודם סלולרי USB ונקודה חמה ניידת של Wi-Fi הן תכונות נהדרות כשאין חיבורים אלחוטיים זמינים.

באפשרותך לשתף את חיבור הנתונים הנייד של הטלפון עם מחשב אחד, דרך כבל USB (חיבור כמודם USB).

תוכל גם לשתף את חיבור הנתונים של הטלפון עם יותר ממכשיר אחד בו-זמנית, על ידי הפיכת הטלפון לנקודה חמה ניידת של Wi-Fi.

כאשר הטלפון משתף את חיבור הנתונים שלך, מופיעים סמל בשורת המצב והתראה מתמשכת במגירת ההתראות.

לקבלת המידע העדכני ביותר על חיבור כמודם ונקודות חמות ניידות, לרבות מערכות הפעלה נתמכות ופרטים נוספים, בקר בכתובת <http://www.android.com/tether>

## כדי לשנות את ההגדרות של נקודה חמה ניידת של Wi-Fi:

- גע בכרטיסייה **יישומים**

< **הגדרות** < **עוד...** מתפריט ההגדרות 'אלחוט ורשתות' <

## נקודה חמה ניידת של Wi-Fi

< בחר את האפשרויות שברצונך לשנות.

## הפעלת Bluetooth ושיוך הטלפון שלך עם מכשיר Bluetooth

עליך לשייך את המכשיר שלך למכשיר אחר לפני שתתחבר אליו.

- גע בכרטיסייה **יישומים**

< **הגדרות** < הגדר את **Bluetooth כפועל** מתפריט ההגדרות 'אלחוט ורשתות'

- הקש על תפריט **Bluetooth** שוב.

הטלפון שלך יסרוק ויציג את כל המזהים של כל מכשירי Bluetooth הזמינים בטווח. אם המכשיר שאתה רוצה לשייך אליו לא מופיע ברשימה, ודא שמכשיר היעד מוגדר כגלוי, ולאחר מכן הקש על **חיפוש התקנים** שוב.

- בחר מהרשימה את המכשיר שאליו ברצונך לשייך את הטלפון.

לאחר שהשיוך הסתיים בהצלחה, הטלפון שלך יהיה מחובר למכשיר.

## שליחת תמונות באמצעות Bluetooth

- בחר בתמונה < **Bluetooth**

בדוק אם **Bluetooth מופעל** ולאחר מכן בחר באפשרות **חיפוש התקנים**.

- בחר מהרשימה את המכשיר שאליו ברצונך לשלוח נתונים.

## עצה!

אם המחשב מפעיל Windows 7 או מהדורה עדכנית של סוגים מסוימים של Linux (לדוגמה, Ubuntu), בדרך כלל אין צורך להכין את המחשב לחיבור כמודם USB. אולם אם המחשב מפעיל גרסה מוקדמת יותר של Windows או מערכת הפעלה אחרת, יתכן שיהיה עליך להכין את המחשב כדי להקים חיבור לרשת דרך USB. לקבלת המידע העדכני ביותר על מערכות ההפעלה שתומכות בחיבור כמודם USB וכיצד להגדירן, בקר בכתובת <http://www.android.com/tether>.

## • פעולה זו תציג את תיבת-הודו שיח **קביעת תצורה של נקודה חמה של Wi-Fi.**

• באפשרותך לשנות את ה-SSID (שם) של הרשת אשר מחשבים אחרים רואים בעת סריקה לאיתור רשתות Wi-Fi.

• גע בתפריט **אבטחה** כדי לקבוע את תצורת הרשת עם אבטחה מסוג Wi-Fi Protected Access 2 (WPA2) המבוססת על מפתח ששותף מראש (PSK).

• אם תיגע באפשרות האבטחה **WPA2 PSK**, יתווסף שדה סיסמה לתיבת-הודו-שיח **קביעת תצורה של נקודה חמה של Wi-Fi.**

אם תזין סיסמה, יהיה עליך להזין סיסמה זו בעת התחברות לנקודה החמה של הטלפון בעזרת מחשב או התקן אחר. לחלופין, באפשרותך להגדיר את **פתוחה** בתפריט **אבטחה** כדי לבטל את האבטחה של רשת ה-Wi-Fi.

**5** גע ב**שמור**.

## שיים לב!

אם תבחר באפשרות האבטחה 'פתוחה', לא תוכל למנוע שימוש בלתי מורשה בשירותים מקוונים על ידי אנשים אחרים וחויבים נוספים העשויים להיצבר. כדי למנוע שימוש בלתי מורשה, מומלץ להפעיל את אפשרות האבטחה.

## כדי לשנות את שמה של הנקודה החמה הניידת או לאבטח אותה

באפשרותך לשנות את השם של רשת ה-Wi-Fi של הטלפון (SSID) ולאבטח את רשת ה-Wi-Fi שלו.

**1** במסך הראשי, גע בכרטיסייה **יישומים** > **הגדרות**

**2** גע באפשרות **עוד...** מתפריט ההגדרות 'אלחוט ורשתות' ובחר באפשרות **נקודה חמה ניידת של Wi-Fi**.

**3** ודא שהאפשרות **נקודה חמה ניידת של Wi-Fi** מסומנת.

**4** גע בקביעת תצורה של נקודה חמה של Wi-Fi.

## שימוש ב-Wi-Fi Cast

- 1 גע בכרטיסייה **יישומים**  < **הגדרות** < **עוד...** מתפריט ההגדרות 'אלחוט ורשתות' < Wi-Fi Direct
  - 2 בחר התקן כדי להתחבר אליו מרשימת ההתקנים שנסרקו.
- צור קבוצה** - גע כדי לבצע אקטיביציה של מצב בעל קבוצה, המאפשר למכשירי ה-Wi-Fi מדור קודם להתחבר על-ידי סריקת הטלפון שלך. במקרה זה עליך להזין את הסיסמה שהוגדרה בתפריט **סיסמה**.

ניתן לשתף תוכן של מוסיקה, תמונות ווידאו בין המשתמשים שברשותם טלפוני Android המחוברים דרך אותה רשת Wi-Fi ו-Wi-Fi Direct. בדוק את רשת Wi-Fi ו-Wi-Fi Direct מראש, וודא שהמשתמשים מחוברים לאותה הרשת.

- 1 גע בכרטיסייה **יישומים**  < **הגדרות** < **עוד...** מתפריט ההגדרות 'אלחוט ורשתות' < **Wi-Fi Direct**
- 2 גע בתיבת הסימון Wi-Fi Direct לצורך הפעלה.
- 3 בחר התקן כדי להתחבר אליו מרשימת ההתקנים שנסרקו.
- 4 הקש על **התחבר**.

## הפעלת Wi-Fi Direct לשיתוף באמצעות SmartShare

- שימוש ב-SmartShare**
- SmartShare מבוסס על טכנולוגיית (Digital Living Network Alliance) DLNA לשיתוף תוכן דיגיטלי דרך רשת Wi-Fi. שני ההתקנים חייבים לשאת אישור DLNA כדי לתמוך בתכונה זו.

Wi-Fi Direct סורק באופן אוטומטי מכשירים סמוכים של Wi-Fi Direct והמכשירים שבוצע עבורם חיפוש מוצגים כפי שהם נמצאו. תוכל לבחור מכשיר ספציפי לשיתוף נתוני מולטימדיה דרך SmartShare. לא ניתן להפעיל את Wi-Fi Direct בזמן השימוש בפונקציות אחרות של Wi-Fi.

### כדי להפעיל את SmartShare ולאפשר שיתוף תוכן

- 1 גע ב-  < הכרטיסייה **יישומים** < **SmartShare**
- 2 הקש על  ובחר **בהגדרות**.

**הערה:** כאשר הטלפון שלך הופך לבעל קבוצה, הוא יצרוך כוח סוללה גדול יותר מאשר זה של לקוח. חיבור Wi-Fi Direct אינו מספק שירות אינטרנט. ההתחברות לשירותים מקוונים והשימוש בהם עשויים להיות כרוכים בחיוב נוסף. בדוק את תעריפי העברת הנתונים אצל ספק הרשת שלך.

**3** גע בתיבת הסימון 'גלוי' כדי לבטל אותה.

- גע באפשרות **תמיד קבל בקשה** אם ברצונך לאשר באופן אוטומטי בקשות שיתוף ממכשירים אחרים.
- גע באפשרות **קבל קבצים** אם ברצונך לאפשר באופן אוטומטי העלאת קבצים ממכשירים אחרים לטלפון שלי.

**4** תחת המקטע 'שיתוף תוכן', הקש כדי לסמן את סוגי התוכן שברצונך לשתף. בחר **תמונות, סרטוני וידאו נגן מוסיקה**.

**5 SmartShare** פועלת כעת ומוכנה לשתף תוכן.

### **כדי לשתף תוכן מספריית תוכן מרוחקת להתקנים אחרים**

מאפשר להתקן המעבד שלך (לדוגמה, טלוויזיה) להפעיל תוכן מולטימדיה מספריית תוכן מרוחקת (לדוגמה, מחשב).

**הערה:** אמת את נכונות ההגדרות של פונקציונליות ה-DLNA במכשירים השונים (לדוגמה, הטלוויזיה והמחשב)

**1** גע בלחצן הימני העליון כדי לבחור את ההתקן מתוך רשימות התקני התצוגה.


**2** לחץ על הלחצן השמאלי העליון ובחר בהתקן של ספריית התוכן המרוחקת.

**3** באפשרותך לעיין בספריית התוכן.

**4** הקש על התמונה הממוזערת של תוכן או על מקש **תפריט** ובחר בלחצן **הפעל**.

### **כדי לשתף מכשיר מעבד (כמו טלוויזיה) בתוכן מהטלפון**

**הערה:** ודא את נכונות ההגדרות של המכשיר המעבד

**1** בעת עיון בתמונות או בסרטוני וידאו באמצעות היישום **גלריה**, גע ב-  כדי לבחור קבצים. לאחר מכן, ניתן יהיה לבחור במספר קבצים לשתוף.

**2** בתפריט, הקש על הפריט 'שתף' ובחר באפשרות **SmartShare**.

**3** טכנולוגיית **SmartShare** תופעל באופן אוטומטי עם הקבצים שנבחרו.

**4** כדי להפעיל את הקבצים, בחרו את המכשיר מרשימת התקני העיבוד.

**הערה:** בצע שלבים דומים כדי להשתמש ב'נגן מוסיקה', במצלמה ובנגן סרטוני וידאו לצורך שיתוף תוכן.

**הערה:** כדי להשתמש ביישום זה ודא שההתקן מחובר לרשת הביתית באמצעות חיבור Wi-Fi. מכשירים מסוימים התומכים ב-DLNA (כמו טלוויזיה), תומכים רק בתכונות ה-DMP של DLNA ולא יופיעו ברשימת המכשירים המעבדים. ייתכן שהמכשיר שברשותך לא יוכל להפעיל פריטי תוכן מסוימים.

העלאת DMS ולא תבצע העלאה שלהם.  
סוגי תוכן מסוימים אינם נתמכים.

## כדי להוריד תוכן מספריית תוכן מרוחקת

1 גע בכרטיסייה **יישומים** <

### SmartShare

2 גע בלחצן השמאלי העליון ובחרו בהתקן של ספריית התוכן המרור חקת.

3 באפשרותכם לעיין בספריית התוכן.

4 לחץ לחיצה ארוכה על תמונה ממוזערת של תוכן, ולאחר מכן גע **במקש התפריט 'הורד'**.

**הודעה:** סוגי תוכן מסוימים אינם נתמכים.

## כדי להעלות תוכן מהטלפון לספריית תוכן מרוחקת

**הערה:** ודא שכרטיס SD מותקן כהלכה ושהאפשרות 'קבל קבצים' בתפריט ההגדרות מסומנת.

1 גע בכרטיסייה **יישומים** <

### SmartShare

2 הקש על הלחצן השמאלי העליון ובחרו באפשרות 'הטלפון שלי'.

3 באפשרותכם לעיין בספריית התוכן.

4 לחץ לחיצה ממושכת על תמונה ממוזערת של תוכן ולאחר מכן

הקש על **מקש התפריט העלה**.

5 בחר מכשיר של ספריית תוכן מרוחקת לביצוע ההעלאה.

**חשוב לדעת:** מכשירים מסוימים התומכים ב-DLNA אינם תומכים בפונקציונליות של

החזק והחלק את הסמל **הודעה מהירה** מהחלק התחתון אם ברצונך לשלוח הודעה כזו.

#### עצה! הודעה מהירה

באמצעות פונקציה זו ניתן לשלוח הודעה במהירות. אפשרות זו שימושית אם עליך להשיב להודעה במהלך פגישה.

## התאמת עוצמת הקול

כדי להתאים את עוצמת הקול במהלך שיחה, השתמשו במקשי הגברת והחלשת עוצמת הקול שבצדו השמאלי של הטלפון.

## ביצוע שיחה נוספת

- 1 במהלך השיחה הראשונה שלך, גע **בתפריט** < **הוסף שיחה** וחייג את המספר. בנוסף, באפשרותך לעבור לרשימת השיחות האחרונות שחייגו על-ידי נגיעה ב-. לחלף פין, באפשרותך לחפש אנשי קשר על-ידי נגיעה ב- ובחירה במספר שברצונך לחייג.
- 2 גע ב- כדי לבצע את השיחה.
- 3 שתי השיחות יוצגו במסך השיחות. השיחה הראשונה שלך תינעל ותועבר למצב המתנה.
- 4 כדי לעבור בין שיחות, גע במספר המוצג. או הקש על הסמל **מזג שיחות** כדי ליצור שיחת ועידה.

## ביצוע שיחה

- 1 גע ב- כדי לפתוח את לוח המקשים.
- 2 הזן את המספר בלוח המקשים. כדי למחוק ספרה, הקש על הסמל .
- 3 גע ב- כדי לבצע שיחה.
- 4 כדי לסיים שיחה, הקש על הסמל **ניתוק** .

**עצה!** כדי להזין "+" לביצוע שיחות בינלאומיות, לחץ לחיצה ממושכת על הסמל .

## התקשרות לאנשי הקשר

- 1 גע ב- כדי לפתוח את אנשי הקשר.
- 2 גלול ברשימת אנשי הקשר או הזן את האותיות הראשונות של שם איש הקשר המבוקש על-ידי נגיעה ב**חפש אנשי קשר**.
- 3 ברשימה, הקש על איש הקשר שאליו ברצונך להתקשר.

## מענה לשיחה ודחיית שיחה

- כאשר אתה מקבל שיחה במצב נעילה, החזק והחלק את כדי מענה לשיחה נכנסת.
- החזק והחלק את כדי סרב שיחה נכנסת.

שאליהם ניתן להתקשר מהטלפון. לצורך כך תזדקק לקוד PIN2 שניתן להשיגו אצל מפעיל השירות שלך. מהטלפון שלך ניתן להתקשר רק למספרים הכלולים ברשימת מספרי החיוג הקבועים.

**שירות תא קולי** – מאפשר לבחור את שירות התא הקולי של הספק שלך.

**הגדרות תא קולי** – אם אתה משתמש בשירות הדואר הקולי של הספק שלך, אפשרות זו מאפשרת להזין את מספר הטלפון שבו יש להשתמש לצורך האזנה להודעות בתא הקולי ולניהולו.

**שמור מספרים ידועים** – הוסף מספרים לא ידועים לאנשי קשר לאחר שיחה.

**דחיית שיחות** – מאפשר להגדיר את פונקציית דחיית שיחה. בחר מבין האפשרויות **מבוטל**, **דחה שיחות** **שברשימה** או **דחה את כל השיחות**.

**הודעה מהירה** – בעת דחיית שיחה, ניתן לשלוח הודעה מהירה באמצעות פונקציה זו. אפשרות זו שימושית כאשר אתה נדרש לדחות שיחה במהלך פגישה.

**העברת שיחה** – בחר אם להפנות את כל השיחות, להפנות אותן כשהקו תפוס, כשאין תשובה או כשאין אות. **חסימת שיחה** – בחר כאשר ברצונך לחסום שיחות. הזינו את סיסמת חסימת השיחות. בדקו עם מפעיל הרשת בנוגע לשירות זה.

**5** כדי לסיים שיחות פעילות, גע **בניתוק** או הקש על מקש 'בית', החלק למטה את שורת ההתראות ובחר ב-**סיים שיחה**.

**הערה:** תחויב עבור כל אחת מהשיחות שתבצע.

## צפייה ביומני השיחות


במסך הראשי, גע ב- ובחר בכרטיסייה **יומני שיחות**. הצג רשימה מלאה של כל השיחות שחיוגו, שהתקבלו ושלא נענו.

**עצה!** גע בכל אחד מהפריטים ביומן השיחות כדי לצפות בתאריך, בשעה ובמשך השיחה.

**עצה!** לחץ על מקש **תפריט**, לאחר מכן הקש על **מחק הכל** כדי למחוק את כל הפריטים השמורים ביומן.

## הגדרות שיחה

באפשרותך לקבוע את התצורה של הגדרות שיחת הטלפון, כגון הפניית שיחה ותכונות מיוחדות אחרות שספק השירות שלך מציע.

- 1** במסך הראשי, גע ב-.
  - 2** גע בתפריט.
  - 3** הקש על **הגדרות שיחה** ובחר את האפשרויות שברצונך לשנות.
- מספרים קבועים מראש** – כדי להפעיל וליצור רשימה של מספרים

**משך שיחה** – להצגת משך השיחות, כולל כל השיחות, שיחות יוצאות, שיחות נכנסות ושיחה אחרונה.

**עלויות שיחה** – הצגת החיובים החלים על השיחות שלך. (שירות זה הוא תלוי-רשת, ומפעילים סלולריים מסוימים אינם תומכים בו)


**הגדרות שיחה נוספות** – דרך פריט זה ניתן לשנות את ההגדרות הבאות:  
**שיחה מזוהה:** בחירה אם להציג את המספר שלך בשיחה יוצאת.

**שיחה ממתינה:** אם שיחה ממתינה מופעלת, הטלפון יודיע על שיחה נכנסת כאשר אתה משוחח בטלפון (בהתאם לספק השירות).

## אנשי קשר מועדפים

באפשרותך לסווג אנשי קשר שאליהם אתה מתקשר לעתים קרובות כמועדפים.

### הוספת איש קשר למועדפים

- 1 גע ב-  כדי לפתוח את אנשי הקשר.
- 2 גע באיש קשר כדי להציג את פרטיו.
- 3 הקש על הכוכב שמימין לשמו של איש הקשר. הכוכב הופך להיות צבעוני.


### הסרת איש קשר מרשימת המועדפים

- 1 גע ב-  כדי לפתוח את אנשי הקשר.
- 2 גע בכרטיסייה , בחר במועדפים **פיים** בראש הרשימה ובחר באיש קשר כדי להציג את פרטיו.
- 3 גע בכוכב הצבעוני שמימין לשמו של איש הקשר. הכוכב ישנה את צבעו לאפור ואיש הקשר יוסר מהמועדפים שלך.



הוסף אנשי קשר לטלפון וסנכרן אותם עם אנשי הקשר בחשבון Google שלך או בחשבונות אחרים שתומכים בסנכרון אנשי קשר.

## חיפוש איש קשר

### במסך הראשי

- 1 גע ב-  כדי לפתוח את אנשי הקשר.
- 2 גע בחפש **אנשי קשר** והזן את שם איש הקשר באמצעות המקלדת.

## הוספת איש קשר חדש

- 1 הקש על , הזן את מספרו של איש הקשר החדש, ולאחר מכן הקש על מקש **התפריט**. גע **בהוסף לאנשי קשר < צור איש קשר חדש**.
- 2 אם ברצונך להוסיף תמונה לאיש הקשר החדש, גע באזור התמונה. בחר מבין האפשרויות **צלם** או **בחר מהגלריה**.
- 3 בחר את סוג איש הקשר על-ידי לחיצה על .
- 4 גע בקטגוריית פרטי איש קשר והזן את פרטיו.
- 5 גע ב**שמור**.

## העברת אנשי קשר מהמכשיר הקודם למכשיר החדש

יצאו את אנשי הקשר מהמכשיר  
הישן כקובץ CSV למחשב  
באמצעות תוכנית לסינכרון עם  
מחשב.

- 1 תחילה התקן את LG PC Suite במחשב. הפעל את התוכנית וחבר את טלפון ה-Android שברשותך למחשב בכבל ה-USB.
- 2 בתפריט העליון, בחר באפשרות **מכשיר < ייבא למכשיר < ייבא אנשי קשר**.
- 3 יופיע חלון מוקפץ לבחירת סוג הקובץ והקובץ לייבוא.
- 4 בחלון המוקפץ, לחץ על **בחר קובץ** וסייר Windows Explorer יופיע.
- 5 בחר בקובץ אנשי הקשר לייבוא בסייר Windows ולחץ על **פתח**.
- 6 לחץ על **אישור**.
- 7 יופיע חלון מוקפץ **מיפוי שדות** לצורך קישור אנשי הקשר במכשיר לנתונים החדשים של אנשי קשר. אם קיים קונפליקט בין הנתונים של אנשי הקשר מהמחשב לבין אנשי הקשר מהמכשיר, בצע את הבחירות או השינויים הדרושים ב-LG PC Suite.
- 9 לחץ על **אישור**.

**⚠ אזהרה:** אם מוסיפים תמונה, סרטון וידאו או קובץ שמע להודעת SMS, ההודעה הופכת באופן אוטומטי להודעת MMS, ואתה תחויב בהתאם.

## תיבה ברצף

ניתן להציג הודעות (SMS, MMS) שהוחלפו עם אחרים בסדר כרונולוגי, כך שתוכל לראות בקלות מעין סקירה כללית של שיחתך.

## שימוש בסימני סמיילי



הכניסו מעט חיים להודעות באמצעות פרצופונים.  
כאשר אתה כותב הודעה חדשה, הקש על המקש **תפריט** ואז בחרו **הוסף סמיילי**.

## שינוי הגדרות ההודעה

הגדרות ההודעות במכשיר LG-P880 נקבעו מראש, כך שבאפשרותך לשלוח הודעות באופן מידי. תוכל לשנות את ההגדרות על-פי העדפותיך.

מכשיר LG-P880 משלב הודעות SMS והודעות MMS בתפריט יחיד, אינטואיטיבי ונוח.

## שליחת הודעה

- 1 גע ב-  במסך הראשי, וגע ב-  כדי לפתוח הודעה ריקה.
- 2 הזינו שם של איש קשר או מספר להתקשרות בשדה **אל**. תוך כדי הזנת שם איש הקשר יופיעו אנשי קשר מתאימים. תוכל להקיש על נמען מוצע. ניתן להוסיף מספר אנשי קשר.

**הערה:** כל אחת מהודעות הטקסט שתשלח לכל אדם כרוכה בתשלום.

- 1 גע בשדה **כתוב הודעה** כדי לחבר את הודעתך.
- 2 הקש על  כדי לפתוח את התפריט 'אפשרויות'. בחר מתוך האפשרויות **הוסף נושא**, **מחק**, **צרף**, **הוסף סמיילי** ו**כל ההודעות**.
- 3 גע ב**שלח** כדי לשלוח את ההודעה.
- 4 מסך ההודעה נפתח ובו שם או מספר הנמען ואחריו ההודעה. התגובות יופיעו במסך. כאשר תציג ותשלח הודעות נוספות, ייווצר רצף הודעות.

**⚠ אזהרה:** מגבלת 160 התווים תלויה במדינה, בשפה ובצורת הקידוד של הודעות SMS.

## מסך חשבון דוא"ל

תוכל להקיש על חשבון כדי להציג את תיבת הדואר הנכנס שלו.

החשבון שממנו אתה שולח דוא"ל כברירת מחדל מסומן בסימן ביקורת.

 - הקש כדי לפתוח את תיבת

הדואר הנכנס המשולבת, הכוללת הודעות שנשלחו לכל החשבונות

שלך. ההודעות בתיבת הדואר

הנכנס המשולבת מופיעות משמאל

בקידוד צבע, לפי חשבון. הצבעים

זהים לצבעים של החשבונות במסך 'חשבונות'.

 - הקש על סמל התיקייה כדי

לפתוח את תיקיות החשבון.

רק הודעות הדוא"ל האחרונות יורדות

לטלפון. כדי להוריד הודעות דוא"ל

נוספות (מוקדמות יותר), הקש על

האפשרות הורד הודעות נוספות בחלק

התחתון של רשימת הודעות הדוא"ל.

## עבודה עם תיקיות החשבון

לכל חשבון ישנן תיקיות דואר נכנס,

דואר יוצא, פריטים שנשלחו וטיטות.

בהתאם לתכונות שבהן תומך ספק

השירות של החשבון, ייתכן שיהיו לכם

תיקיות נוספות.

באפשרותכם להשתמש ביישום

הדוא"ל כדי לקרוא הודעות דוא"ל

משירותים שאינם Gmail. יישום הדוא"ל

תומך בסוגי החשבונות הבאים: POP3,

Exchange ו-IMAP.

ספק השירות או מנהל המערכת

יכולים לספק את הגדרות החשבון

הדרושות.

## ניהול חשבון דוא"ל

בפעם הראשונה שתפתח את יישום

הדוא"ל, ייפתח אשף התקנה שיסייע

לך להגדיר חשבון דוא"ל.

### כדי להוסיף חשבון דוא"ל:

• גע בכרטיסייה **יישומים**  <

**דוא"ל** < במסך החשבונות, גע ב-

 **הוסף חשבון**

לאחר ההגדרה הראשונית, דוא"ל מציג

את התוכן שבתיבת הדואר הנכנס

שלך. אם הוספתם יותר מחשבון אחד,

באפשרותכם לעבור בין החשבונות.

### כדי לשנות את ההגדרות של

#### חשבון דוא"ל:

• גע בכרטיסייה **יישומים**  <

**דוא"ל** < במסך החשבונות, גע ב-

 **הגדרות**

### כדי למחוק חשבון דוא"ל:

• גע בכרטיסייה **יישומים**  <



**דוא"ל** < במסך החשבון, גע ב-

 **הסר חשבון** < גע בחשבון

שברצונך למחוק < **מחק**


## חיבור ושליחה של דוא"ל

## כדי לחבר ולשלוח הודעה

- 1 ביישום דוא"ל, גע ב-.
- 2 הזינו כתובת עבור הנמען המיועד של ההודעה. תוך כדי הזנת הטקסט יוצעו כתובות תואמות מרשימת אנשי הקשר שלך. הפרידו בין הכתובות באמצעות נקודה ופסיק. הוסיפו עותק או עותק מוסתר ואם יש צורך בכך, הוסף קבצים מצורפים.
- 3 הזן את טקסט ההודעה.
- 4 גע ב-.
- 5 אם אינך מחובר לרשת, למשל אם אתה עובד במצב טיסה, ההודעות שאתה שולח מאוחסנות בתיקייה 'דואר יוצא' עד שתתחבר מחדש לרשת. אם תיקיית הדואר היוצא מכילה הודעות בהמתנה, היא תוצג במסך 'חשבונות'.

**עצה!** כשתגיע הודעת דוא"ל חדשה לתיבת הדואר הנכנס, תקבל הודעה על כך בצליל או ברטט. הקש על התראת הדוא"ל כדי להפסיק את הצגת התראות.

## הכרת התצוגה המקדימה

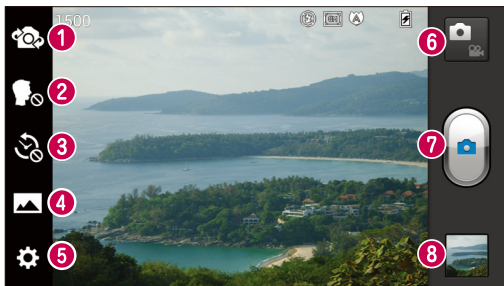

- 1 **החלפת עדשות** – מעבר בין עדשת המצלמה שפונה אחורה לבין עדשת המצלמה שפונה קדימה.
- 2 **צמצם קולי** – אמרו "Cheese" כאשר אתם מוכנים לצלם תמונה.
- 3 **צילום Time Machine** – גע בסמל זה כדי ללכוד את הרגע החסר לפני הלחיצה על הצמצם.
- 4 **מצב צילום** – בחר מבין האפשרויות הבאות: **רגיל**, **HDR**, **פנורמה** או **צילום מתמשך**.
- 5 **הגדרות** – הקש על סמל זה כדי לפתוח את תפריט ההגדרות.
- 6 **מצב וידאו** – גע בסמל זה כדי לעבור למצב וידאו.
- 7 **צילום תמונה**
- 8 **גלריה** – הקש כדי להציג את התמונה האחרונה שצילמת. בדרך זו ניתן להיכנס לגלריה מתוך מצב 'מצלמה' ולהציג תמונות שנשמרו בה.


## צילום מהיר

1 פתח את יישום **מצלמה**.

2 החזק את מכשיר הטלפון וכווננו את העדשה אל מושא הצילום.

3 גע מסך עד שתביט מיקוד תופיע במסך הכוונה.

4 כשתביט המיקוד הופכת לירוקה, זה סימן שהמצלמה התמקדה בנושא הצילום.

5 לחץ על  כדי לצלם את התמונה.

## לאחר הצילום

הקש על הסמל  כדי להציג את התמונה האחרונה שצילמת.

גע כדי לשתף את התמונה באמצעות **Bluetooth**, **דוא"ל**, **Gmail**, **Google+**, **תזכורת**, **הודעות**, **Picasa**, **SmartShare** ו-**חברתית**.

**עצה!** אם יש לכם חשבון SNS והגדרת אותו בטלפון, באפשרותך לשתף בתצלומים את קהילת SNS.

 גע כדי למחוק את התמונה.

גע בסמל  כדי לפתוח את האפשרויות.

**הגדרת תמונה בתור** – גע כדי להשתמש בתמונה כ'תמונת איש

קשר', 'טפט מסך נעילה' או 'טפט'.


**העבר** – גע כדי להעביר את התמונה למקום אחר.

**שנה שם** – גע כדי לערוך את שם התמונה שנבחרה.

**סובב שמאלה/ימינה** – כדי לסובב שמאלה או ימינה.

**חתוך** – חתוך את התמונה. העבר את אצבעך על פני המסך כדי לבחור את האזור.

**ערוך** – הצג וערוך את התמונה.

 בחר את רזולוציית התמונה. אם

תבחר רזולוציה גבוהה, גודל הקובץ יגדל, כלומר תוכל לאחסן פחות

תצלומים בזיכרון.

**FX** משפר את איכויות הצבע בתנאי תאורה שונים.

 מוסיף אפקטים אמנותיים לתמונות.

 מוסיף אפשרויות נוספות לתמונות.

**מצגת שקופיות** – סקירה אוטומטית מציגה באופן אוטומטי את התמונה

שזה עתה הקלטת.


**פרטים** – הצגת פרטי התמונה.


## שימוש בהגדרות המתקדמות

בתצוגה המקדימה, הקש על  כדי לפתוח את כל ההגדרות המתקדמות.


 – מאפשר להפעיל את המבזק בעת צילום תמונה בחושך.


 – אפשרות זו מגדירה וקובעת את כמות אור השמש הנכנסת לתמונה.

 – מתמקד בנקודה מסוימת.


 – בחר את רזולוציית התמונה. אם תבחרו רזולוציה גבוהה, גודל הקובץ יגדל, כלומר תוכלו לאחסן פחות תצלומים בזיכרון.


 – מוצא את הגדרות הצבע והאור המתאימות לסביבה הנוכחית. בחר מבין האפשרויות הבאות: **רגיל**, **דיוקן**, **נוף**, **ספורט** או **לילה**.

 – דירוג ה-ISO קובע את רגישות חיישן האור של המצלמה. ככל שערך ה-ISO גבוה יותר, כך תהיה המצלמה רגישה יותר לאור. הדבר מועיל בתנאי תאורה חשוכים כאשר לא ניתן להשתמש במבזק.

 – משפר את איכויות האור בתנאי תאורה שונים.

 – מוסיף אפקטים אמנותיים לתמונות.


 – מגדיר השהיה לאחר שלחצן הצילום נלחץ. מצב זה אידיאלי למקרה שתצרו להיות בתמונה בעצמך.


 – הפעל כדי להשתמש בשירותים מבוססי-המיקום של הטלפון. צלם תמונות בכל מקום שבו אתה נמצא ותייג אותן עם המיקום המתאים. אם תעלה תמונות מתויגות לבלוג התומך בתיוג גיאוגרפי, תוכל לראות את התמונות מוצגות על גבי מפה.


**הערה:** פונקציה זו זמינה רק כאשר ה-GPS פעיל.

 – בחר צליל צמצם אחד או יותר.

 – מציג באופן אוטומטי את התמונה שצילמת עכשיו.


 – בחר אחסון לשמירת תמונות.

 – שחזר את כל הגדרות ברירת המחדל של המצלמה.

 – גע בכל פעם שברצונך לדעת כיצד פונקציה זו עובדת. פעולה זו תציג הדרכה מהירה.

**עצה!** ביציאה מפונקציית המצלמה, חלק מההגדרות יחזרו לערכי ברירת המחדל. לדוגמה, איזון לבן, אפקט צבע, טיימר ומצב סצנה. בדוק אותם לפני הצילום הבא שלך.

**עצה!** תפריט ההגדרות משולב לתוך התצוגה המקדימה, כך שאם תשנה רכיבים של צבע התמונה או איכותה תוכל לראות את התמונה משתנית לנגד עיניך מאחורי תפריט ההגדרות.

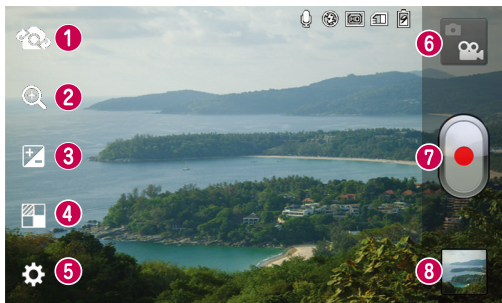

- 1 **החלפת עדשות** – מעבר בין עדשת המצלמה שפונה אחורה לבין עדשת המצלמה שפונה קדימה.
- 2 **זום** – להגדלת התמונה או להקטנתה. לחלופין, תוכל להשתמש בהקטנה או בהגדלה של מרחק מתצוגה על-ידי צביטה פנימה או החוצה.
- 3 **בהירות** – מגדיר וקובע את כמות אור השמש הנכנסת לווידאו.
- 4 **אפקטים** – אפקטים חיים מספקים אפקטים חזותיים שונים בעת צילום סרטון וידאו.
- 5 **הגדרות** – הקש על סמל זה כדי לפתוח את תפריט ההגדרות.
- 6 **מצב מצלמה** – גע בסמל זה כדי לעבור למצב מצלמה.
- 7 **התחל הקלטה**
- 8 **Gallery** – הקש כדי להציג את סרטון הווידאו האחרון שהקלטתם. בדרך זו ניתן להיכנס לגלריה מתוך מצב 'וידאו' ולהציג סרטונים שנשמור בה.

## צילום סרטון וידאו מהיר


- 1 גע בלחצן של מצב **מצלמה**.
- 2 כעת תופיע התצוגה המקדימה של מצלמת הווידאו על המסך.
- 3 החזיקו את הטלפון וכוונו את העדשה אל נושא סרטון הווידאו.
- 4 לחצו על לחצן ההקלטה  כדי להתחיל לצלם.
- 5 נקודה אדומה תופיע בחלק העליון של העינית יחד עם קוצב זמן, שיציג את משך הסרטון.

### עצה!

 - גע כדי לצלם תמונה בעת הקלטת סרטון וידאו.


- 6 גע ב  במסך כדי להפסיק את ההקלטה.

## לאחר צילום סרטון הווידאו

התמונה שצילמת תופיע בגלריה. גע ב-  כדי להציג את הסרטון האחרון שצילמת.

 גע כדי להפעיל את הסרטון.

 גע כדי לשתף את סרטון הווידאו באמצעות חיבור **Bluetooth**, **דוא"ל**, **Gmail**, **Google+**, **הודעות**, **SmartShare** או **YouTube**.

 גע כדי למחוק את סרטון הווידאו שזה עתה צילמת. אשר על ידי נגיעה ב**אישור**. התצוגה המקדימה תופיע שוב.


גע בסמל  כדי לפתוח את האפשרויות.

**העבר** - גע כדי להעביר את הסרטון למקום אחר.


**שנה שם** - גע כדי לערוך את שם הסרטון שנבחר.

**פרטים** - גע כדי להציג מידע מפורט, כגון שם, תאריך, שעה, גודל וסוג.


## שימוש בהגדרות המתקדמות

באמצעות כוונת המצלמה, גע בסמל  כדי לפתוח את כל האפשרויות המתקדמות.

 - מאפשר להפעיל את המבזק בעת הקלטת וידאו בתנאים חשוכים.

 - הקש כדי להגדיר את הגודל (בפיקסלים) של סרטון הווידאו שאתה מצלם.


 - משפר את איכויות האור בתנאי תאורה שונים.

 - בחר גוון לתצוגה החדשה.

 - הפעילו כדי להשתמש

בשירותים מבוססי-המיקום של הטלפון.

 - בחר באפשרות **כבוי** כדי להקליט סרטון ללא קול.

 - סקירה אוטומטית מציגה לכם באופן אוטומטי את סרטון הווידאו שזה עתה הקלטת.

 - בחירת אחסון לשמירת סרטוני וידאו.

 - שחזור כל הגדרות ברירת המחדל של מצלמת הווידאו.


**?** - גע בפריט זה כדי לברר את אופן הפעולה של פונקציה זו. פעולה זו תציג הדרכה מהירה.

### **כוונן העוצמה בעת צפייה בסרטוני וידאו**

לכוונן עוצמת הקול של סרטון וידאו בעת הפעלתו, השתמש במקשי עוצמת הקול בצדו השמאלי של הטלפון.

ניתן לאחסן קובצי מולטימדיה בכרטיס הזיכרון כך שתהיה לך גישה נוחה לכל קובצי המולטימדיה שלך.




## נגן וידאו

LG-P880 כולל נגן וידאו מובנה שמאפשר להציג את כל סרטוני הווידאו המועדפים שלך. כדי לגשת לנגן הווידאו, גע בבכרטיסייה **יישומים** <  **נגן וידאו**.

## הפעלת קובץ וידאו


- 1 במסך הראשי, גע בבכרטיסייה **יישומים** <  **נגן וידאו**.
- 2 בחר בסרטון הווידאו שברצונך להפעיל.

גע כדי לעצור הפעלה של וידאו.	
גע כדי להפעיל מחדש וידאו.	
גע כדי לעבור 10 שניות קדימה.	
גע כדי לעבור 10 שניות אחורה.	
גע כדי לשנות את עוצמת הווידאו.	
גע כדי להגדיר אפקט שמע Dolby בעת החיבור לשקע האוזניים.	
גע בסמל בקר המהירות וגרור את פס ההתקדמות כדי לשלוט במהירות ההפעלה.	

גע בסמל מסגרת התצוגה המקדימה וגרור את המטפל בפס החיפוש כדי לבדוק את התוכן במסך תצוגה מקדימה.	
גע כדי לנעול מסך וידאו.	
גע בסמל הרשימה הישירה כדי להציג את רשימת סרטוני הווידאו.	




כדי לשנות את עוצמת הקול במהלך האזנה למוסיקה, הקש על מקשי הגברת/הנמכת עוצמת הקול שבצדו השמאלי של הטלפון. גע ברציפות בשיר כלשהו ברשימה. יוצגו האפשרויות **SmartShare**, **מחק** ו**פרטים**.

## גלריה

גע ב-  < הכרטיסייה **יישומים** < **גלריה**. פתחו רשימה של שורות קטלוג שבה שמורים כל קובצי המולטימדיה שלך.

## נגן מוסיקה

LG-P880 כולל נגן מוזיקה מובנה שמאפשר להשמיע את כל הרצועות האהובות עליך. כדי לגשת לנגן, גע בבכרטיסייה **יישומים** <  **נגן מוסיקה**.

ג'ע כדי להגדיר מצב השמעה בסדר אקראי.	
ג'ע כדי להציג את רשימת ההשמעה הנוכחית.	
ג'ע כדי להציג את מילות השיר. אפשרות זו פועלת רק אם השיר כולל את המילים.	

כדי לשנות את עוצמת הקול במהלך האזנה למוסיקה, הקש על מקשי הגברת/הנמכת עוצמת הקול שבצדו השמאלי של הטלפון. ג'ע ברציפות בשיר כלשהו ברשימה. פעולה זו תציג את האפשרויות **הפעל, הוסף לרשימת השמעה, הגדר כצלצול, מחק, שתף, חיפוש ופרטים.**

**הערה:** זכויות היוצרים של קובצי מוסיקה עשויות להיות מוגנות על ידי אמנות בינלאומיות וחוקי זכויות יוצרים לאומיים.







לפיכך ייתכן שתצטרך להשיג אישור או רישיון כדי לשכפל או להעתיק מוסיקה. במדינות מסוימות, החוק המקומי אוסר על העתקה פרטית של חומרים המוגנים בזכויות יוצרים. לפני הורדה או העתקה של הקובץ, בדוק את החוקים הלאומיים של המדינה הרלוונטית ביחס לשימוש בחומרים מסוג זה.

## העברת קבצים באמצעות התקני זיכרון חיצוני מסוג USB

- 1 חבר את LG-P880 למחשב באמצעות כבל USB.
- 2 אם לא הותקן במחשב LG Android Platform Driver, תצטרך לשנות את ההגדרות באופן ידני. בחר באפשרות **הגדרות** < **קישוריות** < **סוג חיבור USB** ולאחר מכן בחר באפשרות **סינכרון מדיה (MTP)**.
- 3 תוכל להציג את תוכן האחסון בנפח גדול במחשב ולהעביר את הקבצים.

## השמעת שיר

- 1 במסך הראשי, ג'ע בכרטיסייה **יישומים**  < **נגן מוסיקה**.
- 2 ג'ע **בשירים**.
- 3 בחר בשיר שברצונך להשמיע.

הקש כדי להשהות את ההשמעה.	
הקש שוב כדי להמשיך בהשמעה.	
ג'ע כדי לדלג לרצועה הבאה באלבום או ברשימת ההשמעה.	
ג'ע כדי לחזור לתחילת השיר. ג'ע פעמיים כדי לחזור לשיר הקודם.	
ג'ע כדי לשנות את עוצמת המוזיקה.	
ג'ע כדי להגדיר מצב חזרה.	

## רדיו FM

LG-P880 כולל רדיו FM מובנה המאפשר לך להאזין לתחנות האהובות עליך בתנועה.

**הערה:** כדי להאזין לרדיו יש להשתמש באוזניות. הכס אותה לשקע האוזנייה.

## LG Tag+

### מהו LG Tag+

LG Tag+ מאפשר שמירה וטעינה פשוטה לתגית NFC, הניתנת להתאמה אישית עבור סביבה מסוימת.

### שימוש בכתיבה של Tag+

**1** גע ב-  < הכרטיסייה **יישומים** <

### LG Tag+

**2** בחר במצב הרצוי (Car mode / משרד / שינה/משתמש) והקש על

### כתוב בתג.

**3** גע בגב ההתקן עבור שיתוף תגית או ההתקן; לאחר מכן ניתן יהיה להפעיל את היישום ולשנות הגדרות.

### שימוש בקריאה של Tag+

בעת נגיעה באפשרות ההגדרה של תגית או התקן, המצב יופעל באופן מיידי.

## חיפוש תחנות

ניתן לכוונן תחנות רדיו על-ידי חיפוש באופן ידני או אוטומטי. הן יישמרו במספרי ערוצים ספציפיים כדי שלא תצטרכו לחפש אותן שוב. ניתן לשמור עד 48 ערוצים בטלפון שלך.

### כוונון אוטומטי

**1** במסך הראשי, גע בכרטיסייה

**יישומים**  < **רדיו FM.**

**2** גע ב-  ולאחר מכן בחר באפשרות **סריקה.**

**3** במהלך הסריקה האוטומטית, הקש על האפשרות **עצור** אם ברצונך להפסיק את הסריקה. רק הערוצים שנסרקו לפני הפסקת הסריקה יישמרו.

**הערה:** ניתן לכוונן תחנה גם באופן ידני באמצעות הגלגל המוצג במסך.

**עצה!** כדי לשפר את קליטת הרדיו, פרוס את כבל האוזנייה המשמש גם כאנטנת רדיו. אם תחבר אוזניות שלא תוכננו במיוחד לקליטת רדיו, ייתכן שקליטת הרדיו תהיה משובשת.

## המסך הראשי של מדיה

### שימוש במסך הראשי של מדיה

**1** גע ב-  < הכרטיסייה **יישומים** <

### דף הבית של מדיה

**2** בחר בפונקציה הרצויה מבין סרטוני וידאו, תמונות, מוסיקה.

### הגדרת המסך הראשי של מדיה

**1** גע ב-  < הכרטיסייה **יישומים** <

### דף הבית של מדיה < הגדרות

**2** תוכל לשנות את ההגדרות על-פי העדפותיך.

### **עצה!**

לאחר שתחבר את המכשיר לטלוויזיה או לצג דרך כבל MHL, יישומי המסך הראשי של מדיה יופעלו באופן אוטומטי.

## אופן השימוש ב-LG SmartWorld

- השתתף במבצעים החדשיים של LG SmartWorld.
- נסה את לחצני ה"תפריט" הנוחים כדי למצוא במהירות את הפריט המבוקש.
- **קטגוריות** – חפש תוכן לפי קטגוריה (לדוגמה, חינוך, בידור, משחקים וכן הלאה).
- **חיפוש** – חיפוש תוכן.
- **יישומים עבורך** – פריטי תוכן מומלצים על בסיס הבחירות הקודמות שלך.
- **היישומים שלי** – רשימת פריטי תוכן שהורדת ו/או המיועדים לעדכון.
- **הגדרות** – הגדרת פרופיל ותצוגה.
- **כניסה** – הגדרת שם משתמש וסיסמה.
- נסו פונקציות שימושיות נוספות. (מסך 'פריטי תוכן')

**הערה:** ייתכן ש-LG SmartWorld לא יהיה זמין בכל המדינות ואצל כל המפעילים.

LG SmartWorld מציע מגוון של סוגי תוכן מרתקים - משחקים, יישומים, טפטים וצלולים - ומעניק למשתמשי הטלפונים של LG הזדמנות ליהנות מחוויית טלפון נייד עשירה יותר.

## גישה ל-LG SmartWorld מהטלפון

- 1 הקש על הסמל  כדי לגשת ל-LG SmartWorld.
- 2 הקש על 'כניסה למערכת' והזן שם משתמש וסיסמה ל-LG SmartWorld. אם טרם נרשמת, הקש על 'הירשם' והצטרף ל-LG SmartWorld.
- 3 הורידו את התוכן הרצוי.



### הערה: מה לעשות אם אין סמל ?

- 1 באמצעות דפדפן אינטרנט של מכשיר נייד, גש ל-LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) ובחר את מדינתך.
- 2 הורד את היישום LG SmartWorld.
- 3 הפעל והתקן את הקובץ שהורדת.
- 4 גש אל LG SmartWorld על-ידי הקשה על הסמל .



## הוספת אירוע ללוח השנה

- 1 גע ב-  < הכרטיסייה **יישומים** < **לוח שנה**
- 2 במרכז המסך תוכל למצוא את סוגי התצוגה השונים של לוח השנה (יום, שבוע, סדר יום).
- 3 הקש על התאריך שברצונך להוסיף בו אירוע וגע ב- 
- 4 גע באפשרות **שם אירוע** והזן את שם האירוע.
- 5 גע באפשרות **מיקום** והזן את המיקום. סמנו את התאריך והזן את שעות ההתחלה והסיום של האירוע.
- 6 אם ברצונך להוסיף הערה לאירוע, גע ב**תיאור** והזן את הפרטים.
- 7 אם ברצונך לחזור על ההתראה, הגדר **חזרה** והגדר **תזכורות** במקרה הצורך.
- 8 הקש על **שמור** כדי לשמור את האירוע בלוח השנה.

## הגדרת התראה

- 1 גע ב-  < הכרטיסייה **יישומים** < **התראה/שעון** < 
- 2 אחרי שתגדיר את השעה, LG-P880 יעדכן אותך כמה זמן נותר עד להשמעת ההתראה.
- 3 הגדר את האפשרויות **חזרה, משך זמן נודניק, רטט, צליל התראה, נעילת פאזל** וכן **תזכורת**. גע ב**שמור**.

## שימוש במחשבון

- 1 גע ב-  < הכרטיסייה **יישומים** < **מחשבון**
- 2 הקש על מקשי הספרות כדי להזין מספרים.
- 3 לביצוע חישובים פשוטים, הקש על הפונקציה הרצויה (+, -, x, ÷ או =), ואחריה על =.
- 4 עבור חישובים מסובכים יותר, גע ב-  , בחר את האפשרות **לוח מתקדם** ולאחר מכן בחר בפריטים  $\sin$ ,  $\cos$ ,  $\tan$ ,  $\log$  וכן הלאה.

## Polaris Office

Polaris Office הוא פתרון מקצועי למשרד הנייד, שמאפשר למשתמש להציג בנוחות סוגים שונים של מסמכים משרדיים, כולל קובצי Word, Excel ו-PowerPoint, בכל מקום ובכל זמן, באמצעות המכשירים הניידים שלהם.

גע ב-  < הכרטיסייה **יישומים** <  
**Polaris Office**.

### ניהול קבצים

Polaris Office מספק למשתמשי טלפונים ניידים תכונות נוחות לניהול קבצים, לרבות העתקה, העברה והדבקה, כמו גם מחיקה של קבצים ותיקיות ישירות במכשיר.

### הצגת קבצים

כעת יכולים משתמשי ניידים להציג מגוון רחב של סוגי קבצים, לרבות מסמכי Microsoft Office ו-Adobe PDF, ישירות במכשיר הנייד. בעת ההצגה של מסמכים בעזרת Polaris Office האובייקטים והפריסה נותרים כפי שהיו במסמכים המקוריים.

## גיבוי

### אודות גיבוי ושחזור של נתונים בטלפונים חכמים

מומלץ ליצור ולשמור בקביעות קובץ גיבוי בכרטיס האחסון, בייחוד לפני ביצוע עדכון של כל תוכנה שהיא.

שמירת קובץ גיבוי נוכחי בזיכרון האחסון עשויה לאפשר לך לשחזר את נתוני הטלפון החכם במקרה שהטלפון החכם שלך אובד, נגנב או ניזוק עקב בעיה לא צפויה.

יישום גיבוי זה תומך בטלפונים חכמים של LG, גרסת תוכנה אחרת או מערכת הפעלה אחרת. לפיכך, כשתרכוש את הטלפון החכם החדש של LG, תוכל לגבות את נתוני הטלפון החכם הנוכחי מדגם LG-P880 למכשיר החדש.

אם טענת מראש את היישום 'גיבוי ושחזור' בטלפון החכם שלך, תוכל לגבות ולשחזר את מרבית נתוני הטלפון החכם, **יישומים** לרבות יישומים לא מוגנים, את ההגדרות שלהם, **יישומים (שהורדו)**, **יישומים (מותקנת מראש)**, **סימניות**, **לוח שנה**, **יומן שיחות**, **אנשי קשר**, **מסך הבית**, **הודעות טקסט** וכן **הגדרות המערכת** באמצעות יישום זה.

• לבצע גיבוי ידני של נתוני הטלפון החכם.

- לתזמן גיבויים אוטומטיים של נתוני הטלפון החכם.
- לשחזר את נתוני הטלפון החכם.

## גיבוי נתוני הטלפון החכם

- 1 הכנס את כרטיס הזיכרון לחרץ ובדוק את מצב שטח האחסון.
- 2 גע בכרטיסייה **יישומים** ולאחר מכן בחר באפשרות **Backup** < **לוח זמנים**.
- 3 במסך **מיקום גיבוי מתוזמן**, גע **בכרטיס זיכרון** או **ביזכרון פנימי**.
- 4 בחר מהרשימה באיזו תכיפות ברצונך לגבות את הנתונים והגדרות של המכשיר, ובחר **המשך**.
- 5 בחר את תיבת הסימון שליד הנתונים שאותם ברצונך לגבות, ולאחר מכן בחר **המשך** כדי להשלים את הגדרת התזמון.

- 1 הכנס את כרטיס הזיכרון לחרץ ובדוק את מצב שטח האחסון.
- 2 גע בכרטיסייה **יישומים** ולאחר מכן בחר באפשרות **Backup** < **גיבוי כרטיס זיכרון או זיכרון פנימי**.
- 3 גע באפשרות **הוסף חדש** כדי להזין שם לקובץ הגיבוי, ולאחר מכן בחר **המשך**.
- 4 בחר את תיבת הסימון שליד הפריט שאותו ברצונך לגבות, ולאחר מכן בחר **המשך** כדי לבצע את הגיבוי.
- 5 לאחר גיבוי כל הקבצים שנבחרו, יופיע הכיתוב **'סיום'** ויהיה עליך לבחור באפשרות **המשך** כדי לסיים את גיבוי הנתונים.

## שחזור נתוני הטלפון החכם

כדי לשחזר נתונים המאוחסנים בזיכרון הפנימי של המכשיר, יש לכבות את מצב אחסון בנפח גדול.

**הערה:** כל הקבצים המאוחסנים בטלפון החכם נמחקים לפני שחזור קובץ הגיבוי.

- 1 הכנס את כרטיס הזיכרון לחרץ ובדוק את מצב שטח האחסון.
- 2 גע בכרטיסייה **יישומים** ולאחר מכן בחר באפשרות **Backup** < **שחזור כרטיס זיכרון או זיכרון פנימי**.
- 3 במסך **שחזור**, בחר קובץ גיבוי שמכיל את הנתונים שברצונך לשחזר.
- 4 סמן את תיבת הסימון שליד הפריט

## תזמון גיבויים אוטומטיים

בנוסף, באפשרותך לאפשר גיבויים אוטומטיים של הנתונים בטלפון החכם שלך, לפי הגדרת התזמון שקבעת. לשם כך, בצע את הפעולות הבאות:

### הערה:

תוכל גם לאפשר מחיקה אוטומטית של גיבויים ישנים ולשמור רק את הגיבוי האחרון. לחץ על **תפריט** מהמסך **Backup** ובחר באפשרות **הגדרות < גיבוי מתוזמן < מחק גיבויים ישנים באופן אוטומטי** כדי לבחור במספר הגיבויים המתוזמנים שיש לשמור.

שאותו ברצונך לשחזר, ולאחר מכן בחר **המשך** כדי לבצע את השחזור לטלפון.

**הערה:** לידיעתך, נתוני הטלפון יוחלפו בתוכן של הגיבוי.

- 1 אם קובץ הגיבוי מוצפן, הקלד את הסיסמה שהגדרת להצפנה.
- 2 לאחר שחזור כל הקבצים שנבחרו, יופיע הכיתוב 'סיום' ויהיה עליך לבחור באפשרות **כן** כדי להפעיל את הטלפון מחדש.

### הערה:

- במצב אחסון בנפח גדול, לא ניתן להשתמש ביישום גיבוי זה. בחר באפשרות 'טעינה בלבד' כאשר כבל ה-USB מחובר.
- באפשרותך להגדיר את האפשרות 'אפשר הצפנה' כדי להצפין את קובצי הגיבוי לשיפור ההגנה.

לחץ על **תפריט** במסך **Backup** ובחר באפשרות **הגדרות < אבטחה** ולאחר מכן בחר בתיבת הסימון. לאחר הפעלת ההצפנה, כדי לשחזר נתונים מסונכרנים של עזרי ניהול, עליך לדעת את סיסמת ההפעלה.

## דפדפן

הדפדפן מעניק לך עולם מהיר וצבעוני של משחקים, מוסיקה, חדשות, ספורט, בידור והרבה יותר, היישר לתוך הטלפון הנייד שלך. בכל מקום שבו אתה נמצא ובכל נושא שבו אתה מתעניין.

**הערה:** יחולו חייבים נוספים בעת התחברות לשירותים אלה והורדת תוכן. בדקו את תעריפי העברת הנתונים אצל ספק הרשת שלך.

## שימוש באפשרויות

לחץ על  כדי להציג את האפשרויות.

**רענון** – עדכון דף האינטרנט הנוכחי.

**שמור את הסימניות** – הוסף את דף האינטרנט הנוכחי כסימנייה.

**עבור לדף הבית** – מאפשר לך לעבור לדף בית.

**שתיף דף** – מאפשר שיתוף של דף האינטרנט עם אנשים אחרים.

**מצא בדף** – מאפשר לחפש אותיות או מילים בדף האינטרנט הנוכחי.

**בקש אתר לשולחן העבודה** – מאפשר להציג דף אינטרנט כשולחן העבודה.

**שמור לקריאה במצב לא מקוון** – שמור את הדף הנוכחי כדי לקרוא אותו במצב לא מקוון.

**בהירות המסך** – שנה את בהירות התצוגה עבור דפדוף נוח באינטרנט.

**הגדרות** – הצגת הגדרות הדפדפן.

**יציאה** – צא מרשימת התפריטים.

## השימוש בסרגל הכלים של האינטרנט

הקש כדי לחזור דף אחד אחורה. 

הקש כדי להתקדם דף אחד קדימה, לדף שאליו התחברת 

אחרי הדף הנוכחי. זוהי הפעולה

ההפוכה מלחיצה על המקש

**הקודם**, שמחזירה אותך לדף

הקודם.

 בזמן הלחיצה הארוכה על הסמל,

הטה את המכשיר לכיוון הגוף

כדי להקטין את המרחק מתצוגה,

או לכיוון ההפוך כדי להגדיל את

המרחק מתצוגה.

 הקש כדי להוסיף חלון חדש.

 גע כדי לגשת לסימניות.

## < הגדרות שיחה >

באפשרותך לקבוע את התצורה של הגדרות שיחת הטלפון, כגון הפניית שיחה ותכונות מיוחדות אחרות שספק השירות שלך מציע.

## < עוד ... >

**מצב טיסה** – לאחר המעבר למצב טיסה, כל החיבורים האלחוטיים מושבתים.

**Wi-Fi Direct** – הפעלה או כיבוי.

**נקודה חמה ניידת של Wi-Fi** – תוכל לקבוע את התצורה של הנקודה החמה הניידת של Wi-Fi.

**NFC** – דגם LG-P880 תומך בתקן NFC לטלפונים ניידים. NFC (תקשורת שדה קרוב) היא טכנולוגיה לתקשורת אלחוטית המאפשרת תקשורת דו-כיוונית בין מכשירים אלקטרוניים.

טכנולוגיה זו פועלת במרחק של סנטימטרים ספורים. תוכלו לשתף פריטי תוכן עם תגית NFC או עם מכשיר אחר באמצעות מגע פשוט עם המכשיר שברשותכם. מגע בתגית NFC במכשיר יגרום להצגת תוכן התגית במכשיר שלך.

**הערה:** היזהר שלא לשרוט או לפגוע בצד הפנימי של מכסה הסוללה, שהוא אנטנת ה-NFC.

**כדי להפעיל או לכבות את NFC:** מתוך המסך הראשי, גע במגירת ההתראות והחלק את האצבע מטה,

במסך הראשי, גע בכרטיסייה **יישומים** < **הגדרות**.

## אלחוטית ורשתות

מכאן ניתן לנהל את קישורי Wi-Fi ו-Bluetooth. כמו כן, ניתן להגדיר רשתות ניידות ולעבור למצב טיסה.

## < Wi-Fi >

**Wi-Fi** - מפעילה את Wi-Fi כדי להתחבר לרשתות Wi-Fi זמינות.

## עצה! כיצד להשיג את כתובת MAC ה-

להגדרת התחברות במספר רשתות אלחוטיות בעלות מסנני MAC, ייתכן שיהיה עליך להזין את כתובת ה-MAC של ה-LG-P880 שברשותך בנתב. ניתן למצוא את כתובת ה-MAC בממשק המשתמש הבא: גע בכרטיסייה **יישומים** < **הגדרות** < **Wi-Fi** < **מתקדם** < **כתובת MAC**.

## < Bluetooth >

הפעלת Bluetooth והתחברות להתקני Bluetooth.

## < שימוש בנתונים >

הצגת השימוש בנתונים והגדרת מגבלה לנתונים סלולריים.

**מכשיר**

## &lt; צליל &gt;

**Sound profiles** – ניתן לבחור בין האפשרויות 'צליל', 'רטט בלבד' או 'שקט'.

**כרכים** – תוכל לנהל את עוצמת הקול של 'רינגטון טלפון', 'צליל התראה', 'נגיעה במשוב ובמערכת', 'מוסיקה', וידאו משחקים ומדיה אחרת, 'התראות'.

**רינגטון טלפון** – האפשרות מאפשרת לך להגדיר את רינגטון ברירת המחדל המשמש עבור שיחה נכנסת.

**הודעה על קול** – הגדרת צלצול ברירת המחדל להתראות.

**צלצול עם רטט** – משוב רטט לשיחות ולהתראות.

**זמן שקט** – הגדר זמנים לכיבוי כל הצלילים למעט התראה ומדיה.  
**משטח מגע צלילים DevDial** – הגדרת הטלפון להשמעת צלילים בעת שימוש בלוח המקשים לצורך חיוג למספרים.

**מגע נשמע** – הגדרת הטלפון כך שישמיע צליל בעת נגיעה בלחצנים, סמלים ופריטים אחרים במסך שמגיבים למגע שלך.

**צליל נעילת מסך** – הגדרת הטלפון להשמעת צליל בעת נעילה וביטול נעילה של המסך.

**לרטוט על קשר** – מאפשר לך להגדיר את משוב הרטט עבור נגיעה במסך הטלפון.

ולאחר מכן בחר בסמל NFC כדי להפעיל אותו.

**הערה:** כאשר מצב טיסה מופעל, ניתן להשתמש ביישום NFC.

**שימוש ב-NFC:** כדי להשתמש ב-NFC, ודא שהמכשיר פועל והפעל את הגדרת ה-NFC אם היא אינה פועלת.

**Android Beam** – ניתן לשגר דף אינטרנט, סרטון או תוכן אחר מהמסך למכשיר אחר על ידי הצמדתם זה לזה (בדרך כלל גב אל גב).

**הערה:** ודא ששני המכשירים אינם נעולים, תומכים ב-Near Field Communication (NFC) והן Android Beam™ מופעלים בהם.

**הגדרות VPN** – הצגת רשימה של הרשתות הווירטואליות הפרטיות (VPN) שאת תצורתן קבעתם בעבר. האפשרות מאפשרת לך להוסיף סוגים שונים של רשתות VPN.

**רשתות ניידות** – הגדר אפשרויות לנדידת נתונים, מצב רשת ומפעילים, שמות נקודות גישה (APN) וכדומה.

**הערה:** עליך להגדיר קוד PIN לנעילת המסך כדי שתוכל להשתמש באחסון ההרשאות.

## > תצוגה <

**בהירות המסך** – כוונן את בהירות המסך.

**סיבוב מסך אוטומטי** – הגדר כדי לשנות את הכיוון אוטומטית בעת סיבוב הטלפון.

**כיבוי אוטומטי של המסך** – הגדר את משך הזמן הקצוב עד לכיבוי המסך.

**סוג הגופן** – שנה את סוג התצוגה.

**גודל גופן** – שינוי גודל הגופן בתצוגה.

**תאורת והודעה של מקשי קדמי** – הגדרת משך זמן ההארה של המקשים הקדמיים.

**כיול חיישן תנועה** – שפר את הדיוק של ההטיה והמהירות של החיישן.

## > מסך ראשי <

הגדר את הערכת נושא, הגדרת אנימציות, מסך אפקט או טפט. בחר את האפשרות להגדרת גלול טפט, מסכי גלילה מעגלית גיבוי ושחזור בית.

## > נעל מסך <

**בחירת נעילת מסך** – הגדר סוג נעילת מסך כדי לאבטח את הטלפון. האפשרות פותחת סדרה של מסכים שמדריכה אותך בשרטוט תבנית ביטול נעילה של המסך. תוכל להגדיר מבין האפשרויות ללא, החלקה, פנים נעילת, תבנית, קוד PIN, סיסמה. כאשר תפעיל את הטלפון או תעיר את

המסך, תתבקש לשרטט את תבנית ביטול הנעילה כדי לבטל את נעילת המסך.

**טפט** – ניתן לבחור נעילת טפט מתוך 'טפטים' או 'גלריה'.

**פרטי בעלים** – הצגת פרטי הבעלים במסך הנעילה.

## > חיישן תנועה <

**הזת פריטים במסך הבית** – לחץ

לחיצה ממושכת על פריט והטה

את המכשיר כדי להזיז פריט בתוך המסכים הראשיים והיישומים.

**רגישות Tilt** – בדוק והתאם את הרגישות של חיישן ההטיה עבור המסך הראשי והיישומים.

**שיחת נכנסת ממתנית** – הפוך את המכשיר כדי להשתיק שיחה נכנסת.

**השהיה או הפסקה של אזעקה** –

הפוך את המכשיר עבור נודניק או הפסקת התראה.

**השהה וידאו** – הפוך את המכשיר כדי לעצור את הווידאו הפועל.

**עזרה** – עזרה עבור פונקציות מחוות.

## > אחסון <

**אחסון פנימי** – הצגת השימוש באחסון הפנימי.

**כרטיס SD** – בדיקת השטח הפנוי בכרטיס ה-SD. גע בבטל את הטעינה של כרטיס ה-SD להסרה בטוחה של הכרטיס. מחק כרטיס SD אם ברצונך למחוק את כל הנתונים מכרטיס ה-SD.

< **אבטחה** >

**הגדר נעילת כרטיס SIM** – הגדר את נעילת כרטיס SIM או שנו את קוד PIN שלו.

**להפוך את הסיסמאות גלוי** – הצגת הסיסמה בעת הקלדתה.

**מנהלי התקנים** – הצגה או כיבוי של מנהלי מערכת של המכשיר.

**מקורות לא מוכרים** – הגדרת ברירת המחדל להתקנת יישומים שמקורם אינו ב-Market.

**אישורים מהימנים** – הצגת אישורי CA מהימנים.

**התקן אחסון מ** – בחר כדי להתקין תעודות מוצפנות מכרטיס ה-SD שלך.

**נקה אישורים** – הסרת כל האישורים.

< **שפה וקלט** >

השתמש בהגדרות שפה וקלט כדי לבחור את השפה לטקסט שיוצג בטלפון ולקביעת תצורת המקלדת במסך, לרבות מילים שהוספת למילון.

< **גבוי לאפס** >

שנו את ההגדרות לניהול ההגדרות והנתונים שלך.

**גבה את הנתונים שלי** – הגדר

כדי לגבות את ההגדרות ואת נתוני היישומים שלך לשרת Google.

**חשבון גיבוי** – הגדר כדי לגבות את החשבון.

**שחזור אוטומטי** – הגדר כדי לשחזר את ההגדרות ואת נתוני היישומים כאשר היישומים מותקנים מחדש במכשיר שלך.

< **לחוסך החשמל** >

כאן תוכל לנהל את הסוללה ולסמן את הפריטים הרצויים לחיסכון בחשמל. בנוסף, תוכל לבדוק את השימוש בסוללה.

< **יישומים** >

באפשרותכם להציג ולשנות את היישומים.

**אישי**< **חשבונות וסנכרון** >

מתירה ליישומים לסנכרן נתונים ברקע, בין אם אתה עובד איתם באופן פעיל ובין אם לא. ביטול הסימון של הגדרה זו יכול לחסוך בצריכת חשמל מהסוללה ולהפחית (אבל לא לבטל) את השימוש בנתונים.

< **שירות המיקום** >

**מיקום השירות של גוגל** – אם בחרת את שירותי המיקום של Google, הטלפון יקבע את מיקומך המשוער באמצעות רשתות Wi-Fi ורשתות סלולריות. כאשר תבחר אפשרות זו, תישאלו אם אתה מסכים לאפשר ל-Google להשתמש במיקומכם בעת אספקת שירותים אלה.

**לוויינים GPS** – אם תבחר בלווייני

GPS, הטלפון יקבע את מיקומך המדויק ברמת הרחוב.

**מיקום & החיפוש של Google** –

בחר להשתמש ב-Google כדי לשפר את תוצאות החיפוש ושירותים אחרים.

**הגדרות On-Screen Phone** – הצגת המסך ושליטה בטלפון ממחשב זמינות דרך USB, חיבור Bluetooth או חיבור Wi-Fi.

**חיבור Wi-Fi של PC Suite** – סמן אפשרות זו כדי להשתמש ב-LG PC Suite עם חיבור Wi-Fi.

שים לב כי יש לחבר רשת Wi-Fi עבור LG PC Suite דרך חיבור Wi-Fi בהגדרות 'אלחוט ורשתות'.

### < אודות הטלפון >

הצג מידע משפטי ובדוק את מצב הטלפון ואת גרסת התוכנה שלו.

**שחזור נתוני היצרן** – איפוס ההגדרות לערכי ברירות המחדל שהגדיר היצרן ומחיקת כל הנתונים. אם תאפסו את הטלפון בצורה כזאת, תתבקשו להזין מחדש את אותו מידע, בדומה לפעם הראשונה שהפעלתם את Android.

## מערכת

### < תאריך ושעה >

השתמשו בהגדרות **תאריך ושעה** כדי להגדיר את אופן הצגת התאריכים. כמו כן, באפשרותך להשתמש בהגדרות אלה כדי להגדיר את השעה ואת אזור הזמן שלך, במקום לקבל את השעה הנוכחית מהרשת הניידת.

### < נגישות >

השתמש בהגדרות **הנגישות** כדי לקבוע את התצורה של כל יישומי ה-plug-in לנגישות שהתקנת בטלפון.

**הערה:** דורש יישומי plug-in נוספים.

### < קישוריות >

**סוג חיבור USB** – ניתן להגדיר את המצב הרצוי (**טעינה בלבד, סינכרון מדיה (MTP), USB שיתוף באמצעות USB, תוכנת LG או מצלמה (PTP)**).  
**אישור בעת חיבור** – בקש מצב חיבור USB בעת חיבור למחשב.  
**עזרה** – עזרה עבור קישוריות.

ניתן גם לעכב את העדכון למשך שעה אחת, 4 שעות, 8 שעות, או יום אחד. במקרה זה, היישום יודיע שיש להתעדכן כשיגיע הזמן. ניתן גם להגדיר עדכון באופן ידני.

**הערה:** אתה עלול לאבד את הנתונים האישיים שלך משטח האחסון בטלפון - לרבות המידע אודות חשבון Google וכל חשבון אחר, נתונים והגדרות של המערכת/היישומים, כל יישום שהורדת ורישיון ה-DRM שלך - בתהליך עדכון התוכנה של הטלפון. לפיכך, חברת LG ממליצה לך לגבות את הנתונים האישיים שלך לפני עדכון תוכנת הטלפון. LG לא תישא באחריות לאובדן נתונים אישיים כלשהם.

**הערה:** תכונה זו תלויה בספק שירותי האינטרנט, באזור ובמדינה.

**DivX HD**

**אודות סרטוני DivX:** DivX® הוא פורמט וידאו דיגיטלי שיצרה, LLC, חברה-בת של Rovi Corporation. זהו מכשיר הנושא אישור רשמי מסוג DivX Certified®. להפעלת סרטוני DivX. לקבלת מידע נוסף וכלי תוכנה להמרת קבצים לתבנית וידאו DivX, בקר בכתובת [www.divx.com](http://www.divx.com).

**אודות וידאו לפי דרישה (VOD) בתבנית DivX:** כדי להפעיל סרטי וידאו לפי דרישה (VOD) בהתקן זה הנושא את אישור DivX Certified®, יש לבצע רישום של ההתקן. לקבלת

תכונה זו מאפשרת לעדכן בצורה נוחה את הקושחה של הטלפון לגרסה האחרונה מהאינטרנט ללא צורך לבקר במרכז שירות. תכונה זו תהייה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהייה זמינה למכשיר שלך.

מאחר שעדכון הקושחה מחייב את תשומת לבו המלאה של המשתמש במשך כל תהליך העדכון, אנא הקפד לקרוא את כל ההוראות וההערות שיופיעו בכל שלב ושלב לפני שתתקדמו הלאה. חשוב לזכור שהסרת כבל הנתונים מסוג USB או הסוללה במהלך השדרוג עלולה לגרום לנזק חמור לטלפון הנייד.

**הערה:** LG שומרת על זכותה, על פי שיקול דעתה הבלעדי, להעמיד את עדכוני הקושחה לרשות דגמים נבחרים בלבד ואינה ערבה לזמינות הגרסה החדשה של הקושחה לכל דגמי הטלפון.

## עדכון תוכנת הטלפון הנייד של LG באופן אלחוטי (OTA)

תכונה זו מאפשרת לכם לעדכן את תוכנת הטלפון לגרסה חדשה בנוחות דרך OTA, מבלי להתחבר באמצעות כבל נתונים USB. תכונה זו תהייה זמינה רק אם LG תייצר גרסת קושחה חדשה שתהייה זמינה למכשיר שלך. בררו תחילה את פרטי גרסת התוכנה הנוכחית בטלפון הנייד: **הגדרות** < **אודות הטלפון** < **עדכון תוכנה** < **חפש עדכונים כעת**.

קוד הרישום, אתר את המקטע  
DivX VOD בתפריט ההגדרות של  
ההתקן. לקבלת מידע נוסף על אופן  
הרישום: vod.divx.com.

**DivX Certified**® להפעלת סרטוני  
וידאו **DivX**® עד **HD 720P**, כולל  
תוכן מעולה

**DivX**®, **DivX Certified**® וסמלי  
הלוגו הקשורים הם סימני מסחר  
של **Rovi Corporation** והשימוש  
בהם מתבצע ברישיון.

- העברת קבצים (מטלפון נייד למחשב): שליחת קבצים מהטלפון הנייד (לדוגמה, תמונות, סרטוני וידאו, מוסיקה וקובצי Polaris Office) למחשב. לחץ באמצעות לחצן העכבר הימני על הקובץ שברצונך לשלוח למחשב ולחץ על 'שמור במחשב'.






- העברת קבצים (מחשב אל טלפון נייד): שליחת קבצים מהמחשב אל הטלפון הנייד. בחר את הקבצים שברצונך להעביר כדי לגרור אותם אל חלון 'טלפון במסך המחשב' ולשחררם שם. הקבצים שנשלחו מאוחסנים בכרטיס SD פנימי.
- התראות אירועים בזמן אמת: מופיע חלון מוקפץ הכולל הודעה על שיחות נכנסות או על הודעות טקסט/מולטימדיה.

## כיצד להתקין 'טלפון במסך מחשב' במחשב

- 1 בקר באתר - [www.brimag-telecom.co.il](http://www.brimag-telecom.co.il)
- 2 עבור אל, **מוצרים < בחר את הדגם (LG-P880) > תמיכה ולחץ** על **OSP** (טלפון במסך המחשב) להורדה. ניתן להתקין את יישום 'טלפון במסך המחשב' (On-Screen Phone) במחשב האישי.

טלפון במסך המחשב מאפשר לך להציג את מסך הטלפון הנייד שלך ממחשב דרך חיבור USB או חיבור Bluetooth. ניתן לשלוט בטלפון הנייד גם מהמחשב, באמצעות עכבר או מקלדת.

## סמלי טלפון במסך המחשב

-  לחיבור הטלפון הנייד למחשב וניתוקו.
-  שנה את העדפות הטלפון במסך המחשב.
-  ליציאה מתוכנית 'טלפון במסך המחשב'.
-  הגדלה מרבית של חלון הטלפון במסך המחשב.
-  מזעור של חלון הטלפון במסך המחשב.

## תכונות הטלפון במסך המחשב


- העברה ושליטה בזמן אמת: הצגה של מסך הטלפון הנייד ושליטה עליו בעת החיבור למחשב.
- שליטה בעכבר: אפשרות לשלוט בטלפון הנייד על ידי לחיצה וגרירה באמצעות העכבר על מסך המחשב.
- הזנת טקסט באמצעות מקלדת: אפשרות לחבר הודעת טקסט או הערה באמצעות מקלדת המחשב.

אביזרים אלה זמינים לשימוש עם LG-P880. (הפריטים המתוארים להלן עשויים להיות אופציונליים.)



**סוללה**

**מתאם נסיעות**



**כבל נתונים**  
חבר בין מכשיר  
LG-P880  
למחשב.

**אוזניות סטריאו**



**LG Tag+**

**מדריך  
למשתמש**  
מידע נוסף על  
LG-P880



**הערה:**

- השתמש תמיד באביזרים מקוריים של LG.
- שימוש באביזרים שאינם מקוריים עלול לבטל את האחריות.
- סוג האביזרים עשוי להשתנות מאזור לאזור.

## פתרון בעיות

בפרק זה מוצגות מספר בעיות שאתה עלול להיתקל בהן במהלך השימוש בטלפון. בעיות מסוימות יצריכו פנייה לספק השירות, אך את רובן תוכל לפתור בקלות בעצמך.

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה
שגיאת SIM	אין כרטיס SIM בטלפון או שהוא הוכנס בצורה לא נכונה.	ודא שכרטיס ה-SIM הוכנס כהלכה.
אין חיבור לרשת/ החיבור רעוע	האות חלש או שאתה נמצאים מחוץ לטווח הרשת של ספק השירות.	עברו לעמוד ליד חלון או באזור פתוח. בדוק את מפת הכיסוי של מפעיל הרשת הסלולרית.
	המפעיל החיל שירותים חדשים.	בדוק אם גילו של כרטיס ה-SIM עולה על 6~12 חודשים. אם זהו המקרה, החליפו את כרטיס ה-SIM בסניף הקרוב ביותר של ספק הרשת שלך. פנו אל ספק השירות.
הקודים אינם תואמים	כדי לשנות קוד אבטחה, יש להזין את הקוד החדש שוב כדי לאשרו.	אם שכחת את הקוד, פנה אל ספק השירות.
	שני הקודים שהוזנו אינם זהים זה לזה.	
לא ניתן להגדיר אף יישום	הוא לא נתמך על-ידי ספק השירות או שנדרש רישום עבורו.	פנה אל ספק השירות.
לא ניתן לבצע שיחות	טעות בחיוג	רשת חדשה לא מאושרת.
	הוכנס כרטיס SIM חדש.	בדוק אם קיימות מגבלות חדשות.
	הגעת למגבלת החיוב ששולם מראש.	צור קשר עם חברת הסלולר או אפס את המגבלה בעזרת PIN2.

הודעה	גורמים אפשריים	אפשרויות לתיקון הבעיה	
לא ניתן להפעיל את הטלפון	מקש הדלקה/כיבוי נלחץ מהר מדי.	לחץ על מקש הפעלה/כיבוי למשך שתי שניות לפחות.	
	הסוללה לא נטענה.	טען את הסוללה. בדוק את מד הטעינה בתצוגה.	
	מגעי הסוללה מלוכלכים.	נקה את מגעי הסוללה.	
שגיאת טעינה	הסוללה לא נטענה.	טען את הסוללה.	
	הטמפרטורה החיצונית גבוהה או נמוכה מדי.	ודא שהטלפון נטען בטמפרטורה הרגילה.	
	בעיית מגעים	בדוק את המטען ואת החיבור שלו לטלפון. בדוק את מגעי הסוללה ונקה אותם במידת הצורך.	
	אין מתח	חבר את המטען לשקע אחר.	
	המטען פגום	החלף את המטען.	
	מטען לא מתאים	השתמש תמיד באביזרים מקוריים של LG.	
	הסוללה פגומה	החלף את הסוללה.	
	אין אפשרות לחייג את המספר	פונקציית מספר קבוע מראש פועלת.	בדוק את התפריט 'הגדרות' ונטרל את הפונקציה.
		הזיכרון מלא	מחק חלק מההודעות השמורות בטלפון.
הקבצים לא נפתחים	אין תמיכה בתבנית הקובץ	בדוק אילו תבניות קובץ נתמכות.	

אפשרויות לתיקון הבעיה	גורמים אפשריים	הודעה
<p>בדוק את מערכת הקבצים בכרטיס ה-SD באמצעות קורא כרטיסים או אתחלו את כרטיס ה-SD באמצעות הטלפון.</p>	<p>קיימת תמיכה במערכות FAT16 ו-FAT32 הקבצים</p>	<p>כרטיס SD לא פועל</p>
<p>אם אתה משתמש בסרט או במארז להגנה, בדוק אם הם מכסים את האזור שבקרבת חיישן הקרבה. ודא שהאזור שמסביב לחיישן הקרבה נקי.</p>	<p>בעיה בחיישן הקרבה</p>	<p>המסך אינו נדלק כאשר מתקבלת שיחה.</p>
<p>בדוק את מצב ההגדרות של תפריט הצלילים כדי לוודא שאינך במצב רטט או שקט.</p>	<p>מצב רטט</p>	<p>אין צליל</p>
<p>הסר את הסוללה, הכנס אותה שוב והפעל את הטלפון.</p>	<p>בעיה של נתק בתוכנה</p>	<p>ניתוק או קפיאה</p>



ENGLISH

# LG-P880 User Guide

This guide helps you to get started using your phone.

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.



# Contents

<b>Guidelines for safe and efficient use</b> .....	<b>4</b>	Using SmartShare .....	33
<b>Getting to know your phone</b> .....	<b>10</b>	<b>Calls</b> .....	<b>35</b>
Device components .....	17	Making a call .....	35
QuickMemo .....	19	Calling your contacts .....	35
Installing the SIM card and battery .....	20	Answering and rejecting a call .....	35
Charging your phone .....	21	Adjusting call volume .....	35
Using the memory card .....	21	Making a second call .....	35
Locking and unlocking the screen .....	22	Viewing your call logs .....	36
Secure your lock screen .....	23	Call settings .....	36
<b>Your Home screen</b> .....	<b>24</b>	<b>Contacts</b> .....	<b>38</b>
Touch screen tips .....	24	Searching for a contact .....	38
Home .....	24	Adding a new contact .....	38
Customising the Home screen .....	25	Favourite contacts .....	38
Returning to recently-used applications .....	25	Moving contacts from your Old Device to your New Device .....	39
Notification drawer .....	25	<b>Messaging</b> .....	<b>40</b>
Viewing the status bar .....	26	Sending a message .....	40
Onscreen keyboard .....	27	Threaded box .....	40
Entering accented letters .....	27	Using Smilies .....	40
<b>Google account set up</b> .....	<b>28</b>	Changing your message settings .....	40
<b>Connecting to Networks and Devices</b> .....	<b>29</b>	<b>Email</b> .....	<b>41</b>
Wi-Fi .....	29	Managing an email account .....	41
Connecting to Wi-Fi networks .....	29	Email account screen .....	41
Bluetooth .....	29	Working with account folders .....	42
Sharing your phone's data connection .....	30	Composing and sending email .....	42
To rename or secure your portable hotspot .....	31	<b>Camera</b> .....	<b>43</b>
Using the Wi-Fi Cast .....	32	Getting to know the viewfinder .....	43
Enabling Wi-Fi Direct to share through SmartShare .....	32	Taking a quick photo .....	44
		Once you've taken the photo .....	44

Using the advanced settings .....	45	Backup .....	55
<b>Video camera.....</b>	<b>46</b>	Back up your smart phone data .....	56
Getting to know the viewfinder .....	46	Scheduling automatic backups .....	56
Shooting a quick video .....	47	Restoring smart phone data.....	56
After shooting a video .....	47	<b>The web.....</b>	<b>58</b>
Using the advanced settings .....	47	Internet .....	58
Adjusting the volume when viewing a video.....	48	Using the web toolbar .....	58
<b>Multimedia.....</b>	<b>49</b>	Using options.....	58
Video Player .....	49	<b>Settings .....</b>	<b>59</b>
Playing a video .....	49	WIRELESS & NETWORKS.....	59
Gallery .....	49	DEVICE.....	60
Music Player.....	49	PERSONAL .....	62
Transferring music files using USB mass storage devices .....	49	SYSTEM .....	63
Playing a song .....	50	DivX HD.....	65
FM Radio.....	50	<b>LG On-Screen Phone.....</b>	<b>66</b>
Searching for stations .....	51	On-Screen Phone icons.....	66
LG Tag+ .....	51	On-Screen Phone features .....	66
Media Home.....	52	How to install On-Screen Phone on your PC .....	66
<b>LG SmartWorld.....</b>	<b>53</b>	<b>Accessories .....</b>	<b>67</b>
How to Get to LG SmartWorld from Your Phone .....	53	<b>Troubleshooting .....</b>	<b>68</b>
How to use LG SmartWorld.....	53		
<b>Utilities.....</b>	<b>54</b>		
Setting your alarm.....	54		
Using your calculator.....	54		
Adding an event to your calendar .....	54		
Polaris Office .....	55		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

### Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-P880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.618 W/kg (10g) and when worn on the body is 0.594 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

## Guidelines for safe and efficient use

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## Efficient phone operation

### Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones can cause hearing loss.

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

## Guidelines for safe and efficient use

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

- If you need to replace the battery, take it to the nearest authorised Brimag telecom service point.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

### **DECLARATION OF CONFORMITY**

Hereby, **LG Electronics** declares that this **LG-P880** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at **<http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>**

### **Ambient temperatures**

**Max:** +50°C (discharging),  
+45°C (charging)

**Min:** -10°C

### **Notice: Open Source Software**

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>  
All referred licence terms, disclaimers and notices are available for download with the source code.

## Getting to know your phone


### Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone for service or calling a service representative.

#### 1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

##### To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE category.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.


#### 2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to have running constantly in the background. You can monitor how applications and system resources consume battery power.

##### Extending your phone's battery life:

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

##### To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Status**

The battery status (charging or not charging) and battery level (percentage charged) is displayed at the top of the screen.

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings**
  - > **Power saver** from the DEVICE
  - > **Battery use** from the BATTERY INFORMATION

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

### 3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a home screen, and the two icons will be combined.

## 4. Before installing an open source application and OS

### **WARNING**

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

### **WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

## Getting to know your phone

### 5. Using unlock pattern

Set unlock pattern to secure your phone. This opens a screen that guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure if you forgot pattern lock.

**Caution:** Create a Google account before setting an unlock pattern and remember Backup PIN you created while creating Pattern lock.



#### **WARNING**

##### **Precautions to take when using pattern lock.**

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

### **When you can't recall your unlock Pattern, PIN, or Password:**

<If you have forgotten pattern>

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tab the Forgot Pattern button on the bottom of the screen. You are then required to log in with your Google Account or you have to enter Backup PIN which you entered while creating Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

<If you have forgotten PIN or Password>

If you forgot your PIN or Password, you need to do hard reset.

**Caution:** If you perform a hard reset, all user applications and user data are deleted.

**Note:** If you have not logged in Google Account and forgot Unlock Pattern, you need to enter Backup PIN.

## 6. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key**.
- 3 Once LG Logo appears on the screen, release all Keys.
- 4 After some seconds, allow you to select factory reset function in the Android system recovery utility.
- 5 Scroll the list by Volume keys and select it by **Power/Lock key**.

### **WARNING**

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.

## 7. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

### To return to view list recently used applications:

Simply press and hold the **Home** key.

### To stop applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** > **Running** from the DEVICE
- 2 Scroll and touch the desired application and touch **Stop** to stop it.

## Getting to know your phone

### 8. Installing PC Software (LG PC Suite)

"LG PC Suite" PC Application is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

#### With your "LG PC Suite" PC Application, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.
- Play multimedia contents of your PC from other device.

**NOTE:** You can use the Help menu from the application to find out how to use your "LG PC Suite" PC application.

#### Installing "LG PC Suite" PC Application

"LG PC Suite" PC application can be downloaded from the webpage of LG.

- 1 Go to [www.brimag-telecom.co.il](http://www.brimag-telecom.co.il) and
- 2 Go to **Products > Support >** Select the Model (LG-P880).
- 3 Click **PC Sync** from **Download**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

#### System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

**NOTE: LG Integrated USB Driver**

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software.

## 9. Synchronising your phone to a Computer

Data from your device and PC can be synchronised easily with "LG PC Suite" PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.


**The procedure is as follows:**

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.
- 4 Select the checkbox of contents to synchronise and click the **Sync** button.


## 10. Synchronising your phone to a computer via USB

**NOTE:** To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC.


Please refer to previous pages to install LG PC Suite.

- 1 Touch  > **Apps** tab > **Settings** > **Storage** from the DEVICE to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)
- 2 Connect the phone to your PC using the USB cable.
- 3 USB connection mode list will appear, and select **Media sync (MTP)** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 Select **Charge only** option to disconnect the phone.

## Getting to know your phone

**TIP!** To use the microSD card on your phone again, you need to open the notification drawer and touch  > **Charge only**.

### To disconnect your phone from the computer:

Open the notification drawer and touch  > **Charge only** to disconnect your phone from the computer safely.

### 11. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P880 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

### 12. When the screen freezes

**If the screen freezes or the phone does not respond when you try to operate it:**


Remove the battery, reinsert it, then turn the phone on.

#### OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

## Device components

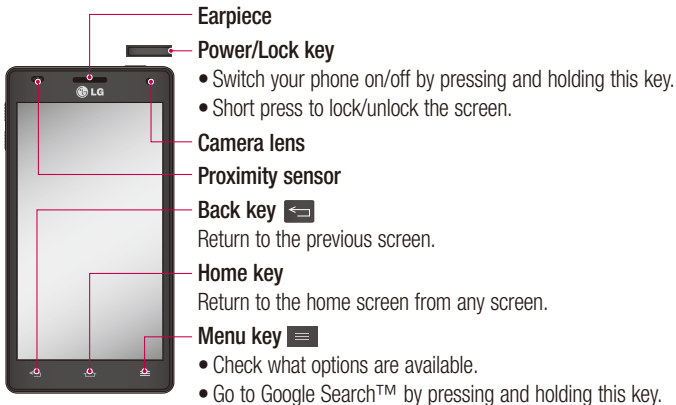

### **NOTE: Proximity sensor**

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

### **WARNING**

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.


## Getting to know your phone



### Volume keys


- **In the home screen:** Control ringer volume.
- **During a call:** Control your earpiece volume.
- **When playing a track:** Control volume continuously.

**Tip!** Once press the volume up and down keys simultaneously, you can use QuickMemo function.

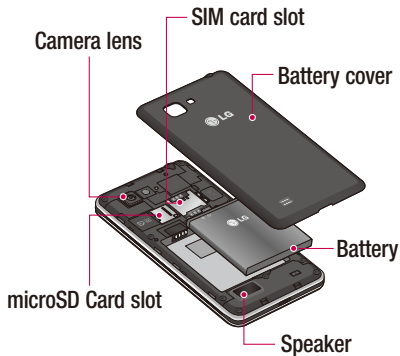

## QuickMemo

Use **QuickMemo** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

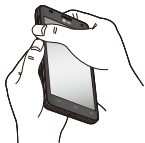


- 1 Enter the **QuickMemo** screen by pressing both the Volume Up and Volume Down Keys for one second on the screen you want to capture.





- Or touch and slide the Status Bar downwards and touch .



- 2 Select the desired menu option from **Pen type, Color, Eraser**, and create a memo.









- 3 Touch  from the Edit menu and select  to save the memo with the current screen.

**NOTE:** Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

## Using the QuickMemo options

While using the QuickMemo function, you can easily use the QuickMenu options.

-  – Select if you want to use the background screen or not.
-  – Select the pen type and the colour.
-  – Erase the memo that you created.
-  – Set the location where you want to save the memo.
-  – Save the memo with the current screen.
-  – Send or share the current QuickMemo to others.

## Viewing the saved QuickMemo


Touch **Gallery** and select the QuickMemo album.

## Getting to know your phone


### Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the battery cover, hold the phone firmly in one hand. With your other hand, lift off the battery cover with your thumbnail as shown in figure.

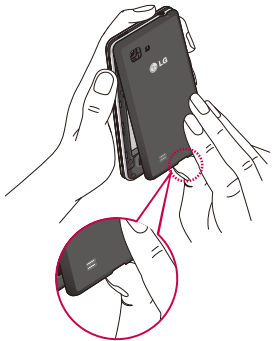

- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

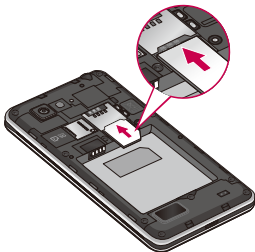

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

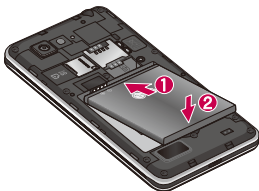


- 4 Align the battery cover over the battery compartment (1) and press it down until it clicks into place (2).



## Charging your phone

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.

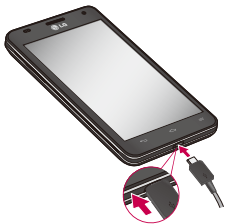

## NOTE

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the battery cover during the charging your phone.


## Using the memory card

### To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

### To remove the memory card safely:

Touch  > **Apps** tab > **Settings** > **Storage** from the **DEVICE** > **Unmount SD card** > **OK**.

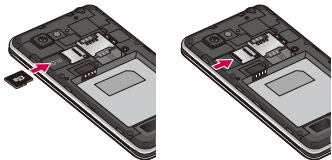

## Getting to know your phone

**NOTE:** The LG-P880 supports memory cards up to 64 GB.


### **WARNING**

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

### To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.


**NOTE:** All files on your memory card are deleted when it is formatted.

- 1 On the home screen, touch  > **Apps** tab to open the menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Touch **Unmount SD card** and touch **OK** to confirm it.
- 4 Touch **Erase SD card** > **Erase SD card** > **Erase everything**, then confirm your choice.
- 5 If you have set a pattern lock, input the pattern lock then select **Erase everything**.


**NOTE:** If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

## Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P880, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The lock screen will appear. Touch and slide the lock screen in any direction to unlock your home screen. The last screen you viewed will open.

## Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

### To set an Unlock Pattern, PIN or Password for the first time:

- Touch  > **Apps** tab > **Settings** > **Lock screen** > **Select screen lock** > **None, Swipe, Face Unlock, Pattern, PIN** or **Password**.

#### **NOTE:**

#### **Precautions to take when using pattern lock.**

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

### When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern** button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

## Your Home screen

### Touch screen tips

Here are some tips on how to navigate around your phone.

**Touch** – To choose a menu/option or open an application, touch it.

**Touch and hold** – To open an options menu or grab an object you want to move, touch and hold it.

**Drag** – To scroll through a list or move slowly, drag across the touch screen.

**Flick** – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

#### NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

### Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with Apps, Downloads, Widgets and wallpapers.

**NOTE:** Some screen images may be different depending on your phone provider.

On your home screen, you can view menu icons at the bottom of the screen. Menu icons provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.


 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

 Touch the **Apps** icon at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

## Customising the Home screen

You can customise your home screen by adding Apps, Downloads, Widgets or Wallpapers. For more convenience using your phone, add your favourite apps and widgets to the home screen.

### To add items on your home screen:

- 1 Touch and hold the empty part of the home screen.  
Or touch  at the top of the right side.
- 2 In the Add Mode menu, select items you want to add. You will then see added items on the home screen.
- 3 Drag it to the location you want and lift your finger.

### To remove an item from the home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 


**TIP!** To add an application icon to the home screen from the Apps menu, touch and hold the application you want to add.

## Returning to recently-used applications



- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your current application.

## Notification drawer

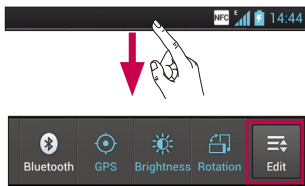The notification drawer runs across the top of your screen.




Touch and slide the notification drawer down with your finger.

Touch  >  to manage the Notifications. Here you can check and manage QuickMemo, Sound profile, Wi-Fi, Bluetooth, NFC, Accounts & sync, Airplane mode, Auto-rotate screen, Brightness, Data enabled, GPS or Portable Wi-fi hotspot.

## Your Home screen

### Viewing the status bar


The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	NFC is on
	Vibrate mode
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail



Icon	Description
	New Google Talk message
	New message
	Song is playing
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

## Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

  Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

## Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

## Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

### To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

**OR**

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

## Connecting to Networks and Devices

### Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

### Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features, you must configure your phone to be able to connect to them. Turn off Wi-Fi when you're not using it to extend the life of your battery.

**NOTE:** If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

### Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.

- 3 Tap Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
  - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
  - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 After connecting to a Wi-Fi network, the status bar displays icon that indicate Wi-Fi status.

### Bluetooth


You can use Bluetooth to send data by running a corresponding application as on most other mobile phones.

**TIP!** With LG-P880, you can enjoy Bluetooth high speed. If the device you want to share files which also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

## Connecting to Networks and Devices

### Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > Set **Bluetooth** to **ON** from the WIRELESS & NETWORKS
- 2 Tap **Bluetooth** menu again. Your phone will scan for and display the IDs of all available Bluetooth in-range devices. If the device you want to pair which isn't on the list, make sure the target device is set to be discoverable, then tap **Search for devices** again.
- 3 Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the device.

### Sending pictures using Bluetooth

- 1 Select a **Picture** >  > **Bluetooth**
- 2 Check whether **Bluetooth** is **ON**, then select **Search for devices**.
- 3 Choose the device you want to send data to from the list.

### Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

### To change Portable Wi-Fi hotspot settings:

- Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Portable Wi-Fi hotspot** > Choose options that you want to adjust

## TIP!

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

## To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch  > **Apps** tab > **Settings**
- 2 Touch **More** from the WIRELESS & NETWORKS and select **Portable Wi-Fi hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is ticked.
- 4 Touch **Configure Wi-Fi hotspot**.

- The **Configure Wi-Fi hotspot** dialog box will open.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.

### 5 Touch **Save**.

## ATTENTION!

If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

## Connecting to Networks and Devices

### Using the Wi-Fi Cast

You can share your music, picture and video content between users who use Android Phones connected via the same Wi-Fi & Wi-Fi Direct network.

Check your Wi-Fi & Wi-Fi Direct network in advance and make sure the users are connected to the same network.

- 1 Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Wi-Fi Direct**
- 2 Touch the Wi-Fi Direct checkbox to turn on.
- 3 Select a device to connect from the scanned device list.
- 4 Touch **Connect**.

### Enabling Wi-Fi Direct to share through SmartShare

Wi-Fi Direct automatically scans nearby Wi-Fi Direct devices and the searched devices are listed as they are found and you can select a specific device to share multimedia data through SmartShare.

Wi-Fi Direct cannot be enabled while using other Wi-Fi functions.

- 1 Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Wi-Fi Direct**
- 2 Select a device to connect from the scanned device list.



**CREATE GROUP** – Touch to activate group owner mode, which enables the legacy Wi-Fi devices to connect by scanning your phone. In this case you must enter the password that is set in **Password**.

**NOTE:** When your phone becomes a group owner, it will consume more battery power than when it is a client. Wi-Fi Direct connection does not provide Internet service. Additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

## Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a Wi-Fi network. Both devices must be DLNA certified to support this feature.

### To turn SmartShare on and allow sharing contents

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Press  and select **Settings**.
- 3 Touch Discoverable checkbox to turn off.
  - Touch **Always accept request** to turn on if you would like to automatically accept sharing requests from other devices.
  - Touch **Receive files** to turn on if you would like to automatically allow upload files to my phone from other devices.
- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

### To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

**NOTE:** Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch the top right button to or select the device from renderer lists.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail or press the **Menu** key and select **Play** button.

### To share contents from your phone to your renderer device(e.g. TV)

**NOTE:** Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch  to select files. Then you will be able to select multiple files to be shared.


## Connecting to Networks and Devices

- 2 Touch **Share** on the menu and select the **SmartShare**.
- 3 **SmartShare** is automatically launched with the selected files.
- 4 Select the device from renderer lists to play the files.

**NOTE:** Follow the similar steps to use the Music Player, Camera and Video player to share contents.

**Notice:** Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.


### To download contents from remote content library

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail then touch **Download menu key**.

**Notice:** A few types of contents are not supported.

### To upload contents from my phone to remote content library





**NOTE:** Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.


- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select My phone.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **Upload menu key**.
- 5 Select a device of remote content library to be uploaded.

**Notice:** Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.


# Calls

## Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

**TIP!** To enter "+" to make international calls, touch and hold .

## Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact you want to call.

## Answering and rejecting a call

When you receive a call in Lock state, hold and slide the  to answer incoming call.

Hold and slide the  to Decline an incoming call.

Hold and slide the **Quick msg** icon from the bottom if you want to send one.





### **TIP!** Quick msg

You can send a message quickly using this function. This is useful if you need to reply the message during a meeting.


## Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

## Making a second call

- 1 During your first call, touch **Menu** > **Add call** and dial the number. Also, you can go recent dialled list by touching  or can search contacts by touching  and select the number you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call.

## Calls

- 5 To end active calls, touch **End** or press **Home Key** and slide the notification bar down and select **End call** icon .

**NOTE:** You are charged for each call you make.

### Viewing your call logs

On the home screen, touch  and choose the **Call logs** tab .

View a complete list of all dialled, received and missed calls.

**TIP!** Touch any call log entry to view the date, time and duration of the call.

**TIP!** Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

### Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

- 1 On the home screen, touch .

- 2 Touch **Menu**.

- 3 Tap **Call settings** and choose the options that you want to adjust.

**Fixed dialing numbers** – To turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

**Voicemail service** – Allows you to select your carrier's voicemail service.

**Voicemail settings** – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

**Save unknown numbers** – Add unknown numbers to contacts after a call.

**Call reject** – Allows you to set the call reject function. Choose from **Disabled**, **Reject calls on list** or **Reject all calls**.

**Quick messages** – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

**Call forwarding** – Choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

**Call barring** – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

**Call duration** – View the duration of calls including all calls, dialled calls, received calls and last call.

**Call costs** – View the charges applied to your calls. (This service is network dependent; some operators do not support this function)

**Additional settings** – This lets you change the following settings:

**Caller ID:** Choose whether to display your number on an outgoing call.


**Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

## Contacts



Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

### Searching for a contact

#### In the home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


### Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to Contacts** > **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.



### Favourite contacts

You can classify frequently called contacts as favourites.

#### Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns colorful.

#### Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, select **Favourites** at the top of the list and choose a contact to view its details.
- 3 Touch the colorful star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

## Moving contacts from your Old Device to your New Device



Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 On the top menu, select **Device > Import to device > Import contacts**.
- 3 A popup window to select the file type and a file to import will appear.
- 4 On the popup, click the **Select a file** and Windows Explorer will appear.
- 5 Select the contacts file to import in Windows Explorer and click the **Open**.
- 6 Click **OK**.
- 7 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 8 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 9 Click **OK**.


## Messaging


Your LG-P880 combines SMS and MMS into one intuitive, easy-to-use menu.


### Sending a message

- 1 Touch  on the home screen, and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE:** You will be charged for a text message for every person you send the message to.

- 1 Touch **Enter message** field and start to compose your message.
- 2 Press  to open the Options menu. Choose from **Add subject**, **Discard**, **Attach**, **Insert smiley** and **All messages**.
- 3 Touch **Send** to send your message.
- 4 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

### Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

### Using Smilies

Liven up your messages using Smilies. When writing a new message, press the **Menu** key, then choose **Insert smiley**.

### Changing your message settings

Your LG-P880 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

## Email

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide the account settings you need.

### Managing an email account


The first time you open the **Email** application, a setup wizard opens to help you to set up an email account.

#### To add another email account:

- Touch  > **Apps** tab > **Email** > in the account screen, touch  > **Add account**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

#### To change an email account's setting:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Settings**


#### To delete an email account:

- Touch  > **Apps** tab > **Email** > in the account screen, touch  > **Remove account** > touch an account you want to delete > **Delete**

### Email account screen

You can touch an account to view its Inbox.

The account from which you send email by default is indicated with a tick.

 – Touch to open your Combined Inbox, with messages sent to all of your accounts. Messages in the Combined Inbox are colour coded on the left, by account, using the same colours used for your accounts in the Accounts screen.

 – Touch the folder icon to open the account folders.



Only the most recent emails in your account are downloaded to your phone. To download more (earlier) email messages, touch Load more emails at the bottom of the emails list.

### Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.


### Composing and sending email

#### To compose and send a message

- 1 While in the **Email** application, touch the .
  - 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
  - 3 Add Cc/Bcc and add attachment files if required.
  - 4 Enter the text of the message.
  - 5 Touch the .
- If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.


**TIP!** When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

## Getting to know the viewfinder

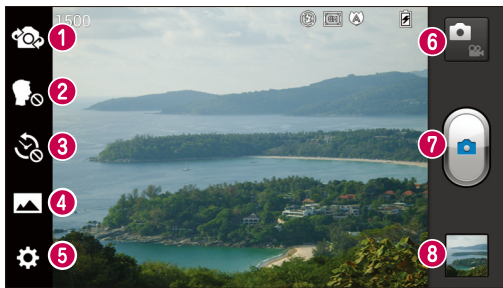

- 1 **Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 **Cheese shutter** – Say Cheese when you get ready to take a photo.
- 3 **Time machine shot** – Touch this icon to capture the missing moment before pressing the shutter.
- 4 **Shot mode** – Choose from **Normal**, **HDR**, **Panorama** or **Continuous shot**.
- 5 **Settings** – Touch this icon to open the Settings menu.
- 6 **Video mode** – Touch this icon to switch to video mode.
- 7 **Taking a photo**
- 8 **Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.

### Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone, point the lens towards the subject you want to photograph.
- 3 Touch the screen and a focus box will appear in the viewfinder screen.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Click on the  to capture the photo.

### Once you've taken the photo

Touch  to view the last photo you captured.

 Touch to share your photo using **Bluetooth, Email, Gmail, Google+, Memo, Messaging, Picasa, SmartShare** and **Social+**.

**TIP!** If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

 Touch to delete the photo.

Touch  to open the options.

**Set image as** – Touch to use the photo as a **Contact photo, Lockscreen Wallpaper** or **Wallpaper**.


**Move** – Touch to move the photo to other place.

**Rename** – Touch to edit the name of the selected picture.

**Rotate left/right** – To rotate left or right.

**Crop** – Crop your photo. Move your finger across the screen to select the area.

**Edit** – View and edit the picture.

 Select the photo resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.

 Improves colour qualities in different lighting conditions.


 Applies artistic effects to the pictures.

 Applies the additional options for pictures.

**Slideshow** – Auto review automatically shows you the picture you just recorded.


**Details** – Show the picture information.


## Using the advanced settings


In the viewfinder, touch  to open all advanced options.


 – Allows you to turn on the flash when taking a photo in dark conditions.


 – This defines and controls the amount of sunlight entering the photo.


 – Focuses on the specific spot.


 – Select the photo resolution. If you choose the high resolution, the file size will increase, which means you will be able to store fewer photos in the memory.


 – Finds the color and light settings appropriate for the current environment. Choose from **Normal**, **Portrait**, **Landscape**, **Sports** or **Night**.

 – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions when you cannot use the flash.

 – Improves colour qualities in different lighting conditions.

 – Applies artistic effects to the pictures.

 – Set a delay after the capture button is pressed. This is ideal if you want to be in the photo.

 – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.


**NOTE:** This function is only available when GPS is active.

 – Select one of some shutter sounds.

 – It automatically shows you the picture you just took.

 – Select storage to save photos.

 – Restore all camera default settings.


 – Touch whenever you want to know how this function operates. This provides you with a quick guide.

**TIP!** When you exit the camera, some settings return to their defaults, such as white balance, colour tone, timer and scene mode. Check these before you take your next photo.

**TIP!** The Settings menu is superimposed over the viewfinder so, when you change elements of the photo colour or quality, you see a preview of the image change behind the Settings menu.


# Video camera

## Getting to know the viewfinder

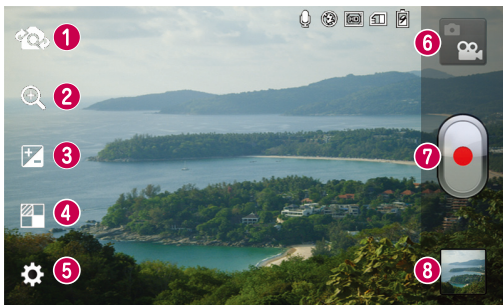



- 1 Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Zoom** – Zoom in or zoom out. Alternatively you can use the zoom in or out by pinching in or out.
- 3 Brightness** – This defines and controls the amount of sunlight entering the video.
- 4 Effects** – Live effect provides various visual effects when taking a video.
- 5 Settings** – Touch this icon to open the settings menu.
- 6 Camera mode** – Touch this icon to switch to camera mode.
- 7 Start recording**
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

## Shooting a quick video


- 1 Touch the **Camera** mode button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 A red light appears at the top corner of the viewfinder with a timer showing the length of the video.




### Tip!

 – Touch to capture image during recording a video.

- 6 Touch  on the screen to stop recording.

## After shooting a video

Your captured video will appear on the Gallery. Touch  to view the last video you recorded.

-  Touch to play the video.
-  Touch to share the video **Bluetooth**, **Email**, **Gmail**, **Google+**, **Messaging**, **SmartShare** or **YouTube**.
-  Touch to delete the video you just made. Confirm by touching **OK**. The viewfinder reappears.

Touch  to open the options.

**Move** – Touch to move the video to other place.

**Rename** – Tap to edit the name of the selected video.

**Details** – Tap to see a detailed information, such as the name, date, time, size and type.


## Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

 – Allows you to turn on the flash when recording a video in dark conditions.

 – Touch to set the size (in pixels) of the video you are recording.

 – Improves colour qualities in different lighting conditions.


 – Choose a colour tone to use for your new view.

 – Activate to use your phone's location-based services.


 – Choose **Off** to record a video without sound.

 – Auto review automatically shows you the video you just recorded.

 – Select storage to save videos.

 – Restore all video camera default settings.

## Video camera

 – Touch if you want to know how this function operates. This provides you with a quick guide.

### **Adjusting the volume when viewing a video**

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.


## Multimedia









You can store multimedia files on a memory card for easy access to all your multimedia files.



### Video Player

Your LG-P880 has a built-in video player that lets you play all your favourite videos. To access the video player, Touch  > **Apps** tab > **Video Player**.

### Playing a video

- 1 In the home screen, touch  > **Apps** tab > **Video Player**.
- 2 Select the video you want to play.

	Touch to pause playback a video.
	Touch to resume playback a video.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.
	Touch to set Dolby audio effect when connected with headset jack.
	Touch Speed controller icon and drag the progress bar to control playback speed.
	Touch Preview frame icon and drag the handler of seek bar to explore the content with a preview screen.

	Touch to lock a video screen.
	Touch the direct list icon to see the list of videos.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone. Touch and hold any song in the list. It displays **SmartShare**, **Delete** and **Details** as options.

### Gallery

Touch  > **Apps** tab > **Gallery**. Open a list of catalogue bars that store all your multimedia files.

### Music Player

Your LG-P880 has a built-in music player that lets you play all your favourite tracks. To access the music player, Touch  > **Apps** tab > **Music Player**.

### Transferring music files using USB mass storage devices


- 1 Connect the LG-P880 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings** > **Connectivity** >










## Multimedia

**USB connection type**, then select **Media sync (MTP)**.

- 3 You can view the mass storage content on your PC and transfer the files.

### Playing a song

- 1 In the Home screen, touch  > **Apps** tab > **Music Player**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist.
	Touch to go back to the beginning of the song. Touch twice to return to the previous song.
	Touch to manage the music volume.
	Touch to set repeat mode.
	Touch to set shuffle mode.
	Touch to see the current playlist.
	Touch to see lyrics. This option is on only if the song includes the lyrics.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone. Touch and hold any song in the list. It displays **Play**, **Add to playlist**, **Set as ringtone**, **Delete**, **Share**, **Search** and **Details**.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

### FM Radio

Your LG-P880 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

**NOTE:** You need to use your headphones to listen to the radio. Insert it into the headphone jack.

## Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again.

You can store up to 48 channels on your phone.

### Tuning in automatically

- 1 In the home screen, touch  > **Apps** tab > **FM Radio**.
- 2 Touch , then select **Scan**.
- 3 During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

**NOTE:** You can also manually tune in to a station using the on-screen wheel.


**TIP!** To improve radio reception, extend the headset cord as this also functions as the radio antenna. If you connect a headset not specifically made for radio reception, radio reception may be poor.

## LG Tag+

### What is LG Tag+

LG Tag+ allows easy saving and loading to NFC tag, which can be customized to suit certain environments.

### Using Tag+ writing

- 1 Touch  > **Apps** tab > **LG Tag+**.
- 2 Select the desired mode (**Car mode/Office mode/Sleep mode/User mode**) and tap **Write on tag**.
- 3 Touch the back of your device to a tag or a device to share, then launching application and changing settings can be set.

### Using Tag+ reading

When touching the set tag or a device, mode will be activated right away.

### Media Home

#### Using media home

- 1 Touch  > **Apps** tab > **Media Home**
- 2 Select the desired function among of videos, photos, music.

#### Setting media home

- 1 Touch  > **Apps** tab > **Media Home** > **Settings**
- 2 You can change the settings based on your preferences.


#### Tip!

Once you connect your device to a TV or monitor via a MHL cable, media home apps will be launch automatically.


## LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

### How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access **LG SmartWorld**.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

#### **NOTE: What if there is no icon?**

- 1 Using a mobile Web browser, access LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the .

### How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
- Try the easy "Menu" buttons to find what you're looking for fast.

**Categories** – Find contents by category (e.g. Education, Entertainment, Games, etc).

**Search** – Search Content.

**Apps for you** – Recommended content based on your previous choices.

**My apps** – List of downloaded/to-be updated contents.

**Settings** – Set Profile and Display.

**Sign in** – Set your ID and Password.

- Try other useful functions as well. (Content Detail screen)



**NOTE:** LG SmartWorld may not be available in all carriers or countries.

## Utilities

### Setting your alarm

- 1 Touch  > **Apps** tab > **Alarm/Clock** > 
- 2 After you set the time, the LG-P880 lets you know how much time is left before the alarm will sound.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Puzzle lock** and **Memo**. Touch **Save**.

### Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch , select the **Advanced panel**, then choose sin, cos, tan, log and so on.

### Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**
- 2 On the middle of the screen, you can find the different view types of the Calendar (Day, Week, Agenda).
- 3 Tap on the date you want to add event on and touch 
- 4 Touch **Event name** then enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you want your event to start and finish.
- 6 If you want to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.

## Polaris Office

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office**.

### Managing files

Polaris Office provides mobile users with convenient file management features, including copying, moving and pasting, and deleting files and folders right on the device.

### Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

## Backup

### About backing up and restoring smart phone data

It recommends that you regularly create and save a backup file on the Storage card, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.

This Backup application support between LG smart phones, other S/W version or OS. And so, when you buy the new LG smart phone, you can back up the current LG-P880 smart phone data on your new one.


If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Apps** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages**, and **System settings** using this application.

- To perform a manual backup of your smart phone data.

## Utilities


- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.

### Back up your smart phone data

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Backup > SD Card** or **Internal Storage**.
- 3 Touch the **Add new** to enter a name for your backup file, and then select **Continue**.
- 4 Select the check box next to the item you want to back up, and then select **Continue** to back up.
- 5 When all selected files backed up, you will see the message 'Done' and select **Continue** to finish backing up data.

### Scheduling automatic backups


You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Schedule**.
- 3 On the **Scheduled Backup Location** screen, touch **SD Card** or **Internal Storage**.
- 4 From the list, select how often you want to back up your device data and settings, and select **Continue**.
- 5 Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

### Restoring smart phone data

To restore data that is in your on-board device memory, mass storage mode must be turned off.

**NOTE:** All files that are stored on your smart phone are deleted before the backup file is restored.

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Restore > SD Card** or **Internal Storage**.
- 3 On the **Restore** screen, select a backup file that contains the data you want to restore.


- 4 Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.

**NOTE:** Please note that your phone data will be overwritten with the contents of your backup.


- 1 If the backup file is encrypted, type the password that you set to encrypt.
- 2 When all selected files restored, you will see the message 'Done' and select **Yes** to restart the phone.

**NOTE:**

- While in Mass storage mode, this Backup Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.

Press the **Menu**  from the **Backup** screen, and select **Settings > Security** and select the check box. And after enabling encryption, To restore synchronised organizer data, you must have an activation password.

**NOTE:**

You can also enable automatic delete old backups and only keep the most recent backup. Press the **Menu**  from the **Backup** screen, and select **Settings > Scheduled backup > Auto delete old backups** to select the number of scheduled backups to keep.






## The web

### Internet

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

### Using the web toolbar

-  Touch to go back a page.
-  Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.
-  While holding down the icon, tilt the device toward body to zoom in or reverse to zoom out.
-  Touch to add a new window.
-  Touch to access bookmarks.

### Using options

Press  to view options.

**Refresh** – Update the current web page.

**Save to bookmarks** – Add the current web page as bookmark.

**Go to Homepage** – Allow you to go to a homepage.

**Share page** – Allows you to share the web page with others.

**Find on page** – Allows you to find letters or words on the current web page.

**Request desktop site** – Allows you to view the web page as desktop.

**Save for offline reading** – Save current page to read it during offline.

**Brightness** – Modify viewing brightness for comfortable web browsing.

**Settings** – Displays Browser settings.

**Exit** – Exit from the menu list.

## Settings

In the home screen, touch  > **Apps** tab > **Settings**.

### WIRELESS & NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

#### < **Wi-Fi** >

**Wi-Fi** – Turns on Wi-Fi to connect to available Wi-Fi networks.

#### **TIP!** How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P880 into the router.

You can find the MAC address in the following user interface: Touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced** > **MAC address**.

#### < **Bluetooth** >

Turns on Bluetooth to connect to Bluetooth devices.

#### < **Data usage** >

Displays the data usage and set mobile data limit.

#### < **Call** >

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

#### < **More** >

**Airplane mode** – After switching to airplane mode, all wireless connections are disabled.

**Wi-Fi Direct** – You can turn on or off.

**Portable Wi-Fi hotspot** – You can configure the portable Wi-Fi hotspot settings.

**NFC** – Your LG-P880 is NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your contents with a NFC tag or another device via simple touch with your device. If you touch a NFC tag with your device, it will display the tag contents on your device.

**NOTE:** Be careful not to scratch or damage the inside of the battery cover as this is the NFC antenna.

**To switch NFC on or off:** From the home screen, touch and slide the

## Settings

notification drawer down with your finger, then select the NFC icon to turn it on.

**NOTE:** When the Airplane mode is activated, NFC application can be used.

**Using NFC:** To use NFC, make sure your device is switched on and activate the NFC setting, if disabled.

**Android Beam** – You can beam a web page, a video, or other content from your screen to another device by bringing the devices together (typically back to back).

**NOTE:** Make sure both devices are unlocked, support Near Field Communication (NFC), and have both NFC and Android Beam™ turned on.

**VPN settings** – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

**Mobile networks** – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

**NOTE:** You must set a lock screen PIN or password before you can use credential storage.

## DEVICE

< Sound >

**Sound profile** – You can choose the Sound, Vibrate only or Silent.

**Volumes** – You can manage the volume of Phone Ringtone, Notification sound, Touch feedback & system, Music, video, games and other media, Alarms.

**Phone ringtone** – Allows you to set your default incoming call ringtone.

**Notification sound** – Allows you to set your default notification ringtone.

**Ringtone with vibration** – Vibration feedback for calls and notifications.

**Quiet time** – Set times to turn off all sounds except alarm and media.

**Dial pad touch tones** – Allows you to set the phone to play tones when using the dialpad to dial numbers.

**Touch sounds** – Allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

**Screen lock sound** – Allows you to set your phone to play a sound when locking and unlocking the screen.

**Vibrate on touch** – Allows you to set the vibration feedback for phone screen touch.

## < Display >

**Brightness** – Adjust the screen brightness.

**Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.

**Screen timeout** – Set the time for screen timeout.

**Font type** – Change the type of the display.

**Font size** – Change the size of the display font.

**Front key light** – Set the front key LED time.

**Motion sensor calibration** – Improve the accuracy of the tilt and speed of the sensor.

## < Home screen >

Set the **Theme**, **Animation**, **Screen swipe effect** or **Wallpaper**. Select the option to set **Scroll wallpaper**, **Scroll screens circularly** and **Home backup & restore**.

## < Lock screen >

**Select screen lock** – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set among of **None**, **Swipe**, **Face Unlock**, **Pattern**, **PIN**, **Password**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

**Wallpaper** – You can select the wallpaper lock from **Wallpapers** or **Gallery**.

**Owner info** – Show owner info on lock screen.

## < Gesture >

**Move home screen items** – Press and hold item and tilt device to move item within home screens or applications.

**Tilt sensitivity** – Test and adjust sensitivity of tilt sensor for home screen and applications.

**Pending incoming calls** – Flip device to mute incoming call.

**Snooze or stop alarm** – Flip device to snooze or stop alarm.

**Pause video** – Flip device to pause playing video.

**Help** – Help for gesture functions.

## < Storage >

**INTERNAL STORAGE** – View the internal storage usage.

**SD CARD** – Check total available SD card space. Touch **Unmount SD card** for safe removal. Erase SD card if you want to delete all data from the SD card.

## Settings

### < Power saver >

Here, you can manage the battery and check the power saving items. Also, you can check the battery use.

### < Apps >

You can view and manage the applications.

## PERSONAL

### < Accounts & sync >

Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

### < Location services >

**Google's location service** – If you select Google's location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

**GPS satellites** – If you select GPS satellites, your phone determines your location to street level accuracy.

**Location & Google search** – If you select google use your location to improve search results and other services.

### < Security >

**Set up SIM card lock** – Set up SIM card lock or change the SIM PIN.

**Make passwords visible** – Show password as you type.

**Device administrators** – View or deactivate device administrators.

**Unknown sources** – Default setting to install non-Market applications.

**Trusted credentials** – Display trusted CA certificates.

**Install from storage** – Choose to install encrypted certificates from your SD card.

**Clear credentials** – Remove all certificates.

### < Language & input >

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

### < Backup & reset >

Change the settings for managing your settings and data.

**Back up my data** – Set to back up your settings and application data to the Google server.

**Backup account** – Set to back up your account.

**Automatic restore** – Set to restore your settings and application data when the applications are reinstalled on your device.

**Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

## SYSTEM

### < Date & time >

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

### < Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

**NOTE:** Requires additional plug-ins.

### < Connectivity >

**USB connection type** – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software or Camera (PTP)**).

**Ask on connection** – Ask USB connection mode when connecting to a computer.

**Help** – Help for connectivity.

**On-Screen Phone settings** – Displaying screen and controlling phone from PC are available through USB, Bluetooth or Wi-Fi connection.

**PC Suite Wi-Fi connection** – Check mark this to use **LG PC Suite** with Wi-Fi connection.

Please note that Wi-Fi network should be connected for LG PC Suite via Wi-Fi connection from the **WIRELESS & NETWORKS**.

### < About phone >

View legal information and check phone status and software version.

## Settings

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

**NOTE:** LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

### LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will

only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

**NOTE:** Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

**NOTE:** This feature is dependent on your network service provider, region and country.

## DivX HD **DIVX**<sub>HD</sub>

**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.






**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

**DivX Certified® to play DivX® video up to HD 720p, including premium content DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.**

## LG On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

### On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Maximises the On-Screen Phone window.
-  Minimizes the On-Screen Phone window.

### On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.

- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

### How to install On-Screen Phone on your PC

- 1 Visit LG Home ([www.brimag-telecom.co.il](http://www.brimag-telecom.co.il)) and select a country of your choice.
- 2 Go to **Products > Support >** Select the Model (LG-P880) > Click **OSP** ( On-Screen Phone ) to download. You can install the On-Screen Phone on your PC.

## Accessories

These accessories are available for use with the LG-P880. (Items described below may be optional.)

### Travel adaptor



### Battery



### Stereo headset



### Data cable

Connect your LG-P880 and PC.



### User Guide

Learn more about your LG-P880.



### LG Tag+



#### NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

## Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network.	Move towards a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key down for at least two seconds.
	Battery is not charged.	Charge battery. Check charging indicator on the display.
	Battery contacts are dirty.	Clean the battery contacts.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace charger.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.

## Troubleshooting

Message	Possible causes	Possible corrective measures
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone.
		Try to perform a software update via the website.





CE 0168 Ⓢ