

Owner's Manual

REFRIGERATOR- FREEZER

**Please read carefully the manual instruction and safety caution
before operating your refrigerator and retain it for future reference**

CONTENTS

IMPORTANT SAFETY INFORMATION 3

INSTALLATION 10

INNER PARTS 11

OPERATIONS 12

 Starting

 Before Setting The Temperature

 Door Alarm

 Self Test

 Lamp Auto Off Feature

 Controls For Refrigerator Compartment

 Controls For Freezer Compartment

 Ice Making

 Defrosting

 Vegetable Drawer

 Deodorizer (Optional)

SUGGESTIONS ON FOOD STORAGE 15

CLEANING 16


GENERAL INFORMATION 17

LAMP REPLACEMENT 17

IMPORTANT WARNINGS 18

BEFORE CALLING FOR SERVICE 19

EARTH/ GROUNDING CONSTRUCTION
(OPTIONAL) 20

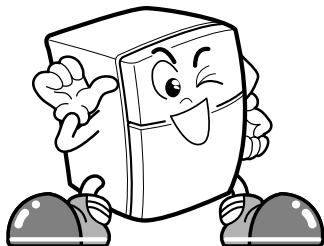

IMPORTANT SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

 This is the safety alert symbol. It alerts you to safety messages that inform you of hazard that can hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word WARNING, or CAUTION. These words mean:

 **WARNING** You will be hurt or seriously injured if you don't follow instructions.

 **CAUTION** indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING


To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

1. When connecting the power

Do not use many power outlets.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.

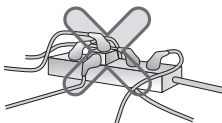


Prevent the power cord from being squeezed or imprinted if the refrigerator is pushed in after the power plug is extracted during the installation.

It becomes the cause of fire or electric shock.

Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.

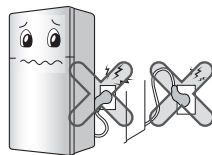

Do not allow the power cord bent or pressed by the heavy object to be damaged.

It may damage the power cord to cause fire or electric shock.



IMPORTANT SAFETY INFORMATION

1. When connecting the power

Do not extend or modify the length of the power plug.

It causes electric shock or fire by the electric damage of the power cord or others.



Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

- It may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.




Pull out the power plug not by grasping the cord but the plug of its end.

It may cause electric shock or short circuit to fire.




Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may fire or electric shock.



Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

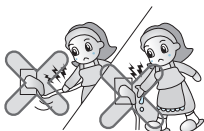


Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.




Make sure of grounding.

The incorrect grounding may cause breakdown and electric shock.

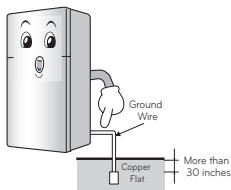

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit to make fire.

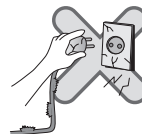

Be sure to use grounded exclusive proper voltage consent for the power plug.
Be sure to use grounded extension consents when extension consents are used.
may cause breakdown
It becomes the cause of fire.

IMPORTANT SAFETY INFORMATION

2. When using the refrigerator

Do not place the heavy object or the dangerous object

(container with liquid) on the refrigerator.

It may be dropped to cause injury, fire or electric shock when opening or closing the door.




Do not cling to the door or the shelves of the door or the Family Homebar or the cool chamber.

It may make the refrigerator fallen down or damage the hands. Especially, do not allow the children to do the above.




Prevent children from entering the product.

It may endanger the life of a child if the child enters the refrigerator.

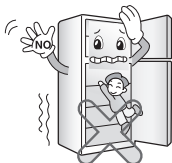

Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.


It may cause fire, electric shock or injury by dropping down.

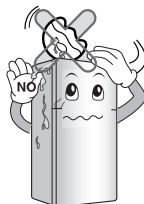

Opening and closing the door of the refrigerator vigorously may cause the stored food in the refrigerator basket to fall by shock and hurt the foot, so take precautions.

Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

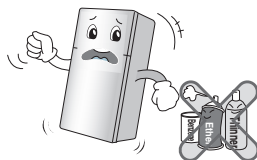


Do not install the refrigerator in the wet place or the place which water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Do not store the medicine or the academic materials at the refrigerator.

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

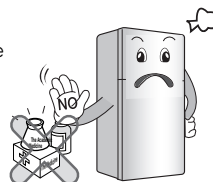


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not use drier to dry the inside, nor light a candle to remove odor.

It may cause explosion or fire.

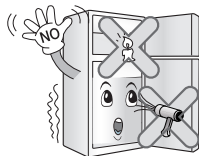


Install in places away from the fire such as the place where flammable gas is leaked.

It may cause fire.

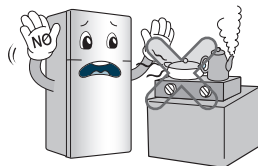


Do not use the combustible spray near the refrigerator.

It may cause fire.

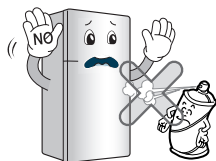


Do not use the submerged refrigerator directly, kindly checked by the technician.

It may cause electric shock or fire.

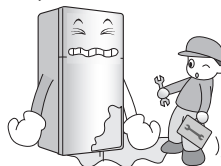


In case of thunder and lightning, or not in use for a long period of time, detach the power plug.

There is a danger of electric shock or fire.

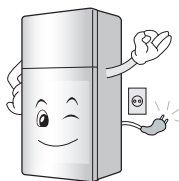

Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.

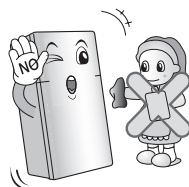


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

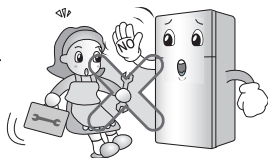

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

It may cause fire.

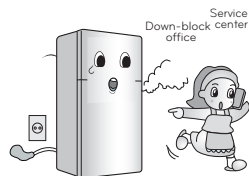


When disposing the refrigerator, remove the packing materials from the door.

It may cause to lock out the child.



Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

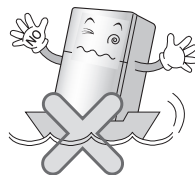


Install the refrigerator on the solid and level floor.

Installing it on the unstable place may cause death by falling down the refrigerator when opening or closing the door.




What to do with your old refrigerator,


Your refrigerator contain liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process. Refrigerator Contact local authority.



Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the refrigerator, the heatproof grill (exhaust hole) at the backside. It may cause electric shock or injury.

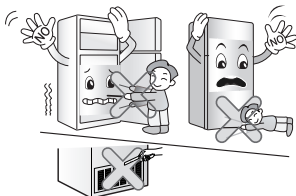


Completely empty inside before taking out the container from the door.

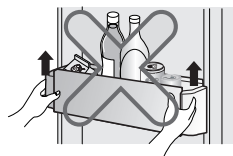


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator

Do not remove the cover on the back.

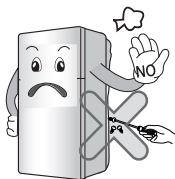


Place all the components in the right places before connecting the power.

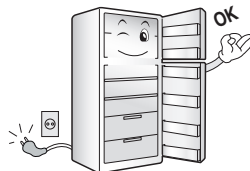

Do not use an Adapter on the back.



Never leave lit candles or incense on the fridge, at risk of causing fire or product damage.

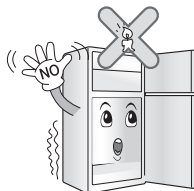

⚠ CAUTION

Violating this direction may cause injury or damage house or furniture. Always be careful, please.

Do not touch food or containers at the freezer with wet hands.

It may cause frostbite



Do not place the food in disorder inside the refrigerator.

The food may fall during opening and closing the door of the refrigerator and hurt people.

Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.



Do not insert the hands into the bottom of the refrigerator.


The iron plate of the bottom may cause injury.



Carry the refrigerator with the handle bar at the bottom of the front and the top of the rear.


Otherwise, your hands may be slipped to cause injury.

Because the product is heavy, carrying it alone may hurt people or accidents may occur.

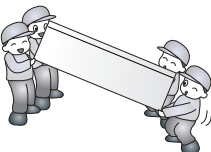

Because opening or closing the door of the refrigerator may cause injury to the person around it, be careful, please.


Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.

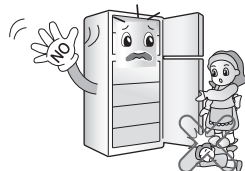


IMPORTANT SAFETY INFORMATION

Do not put any living animal in the refrigerator.

It may cause the animal died.

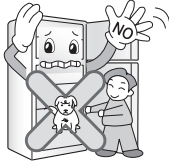


Do not use products such as grinding sponge, brush, iron, or even special products to clean stainless steel, soap products such as alcohol, kerosene, gasoline, wax, or solvent, or strong chemicals such as chlorine, detergent, or vinegar, for the purpose of gloss. These products may damage the protective lacquer, and they may cause risk or stain on the surface of the refrigerator.

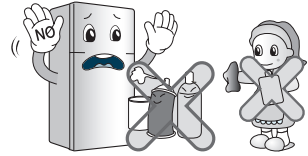


Avoid the contact of oil or fat on the plastic parts. They may cause damage.


When the power cord is damaged, let a technician to replace it to remove the danger of an accident.

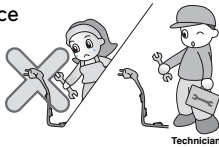

Do not apply oil in the door connection part in any circumstances. It may cause damage to the plastic parts.

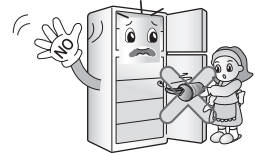

Do not lean on the doors, Hinges may deregulate
Themselves, harming
seal cooler and
compromising
performance.

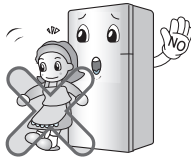

Do not store explosive substances
such as aerosol cans with a flammable
propellant in this appliance

WARNING

Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOOME USEFUL HINTS.


INSTALLATION

1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge - freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear to aid in door closing.
Leveling screws can be turned easily by tipping the cabinet slightly.
Turn the leveling screws clockwise() to raise the unit, counterclockwise() to lower it.
5. Don't install this appliance below 5°C. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.
Check the flow of cold air in the freezer compartment to ensure proper cooling.
Your refrigerator is now ready for use.

INNER PARTS

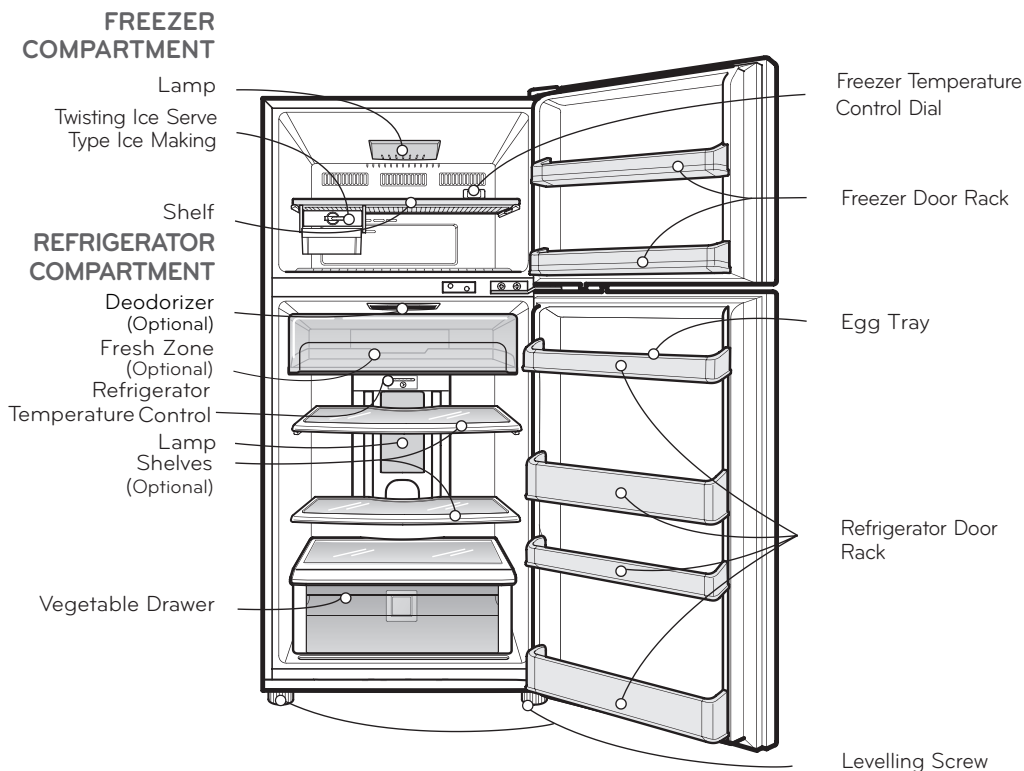

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in. Enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

OPERATIONS

STARTING

When your refrigerator is first installed, allow it 2-3 hours to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.

If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control button for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control button for the refrigerator compartment is '3°C'.
- The default setting of the temperature control dial for the freezer compartment is '4'.
- This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

DOOR ALARM

When the door of the refrigerator or the freezer is open for 1 minute, an alarm will sound three times. If the door remains open, the alarm will repeat every 30 seconds.


SELF TEST

- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

LAMP AUTO OFF FEATURE

When the door is open for 7 minutes or longer, the lamp inside goes off automatically to save energy and prevent overheating. However, the alarm sound continues until the door is closed.

CONTROLS FOR REFRIGERATOR COMPARTMENT

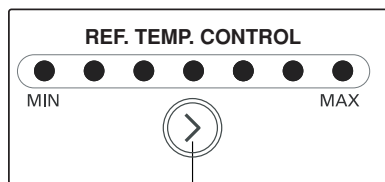

Ref. Temp Control Button

The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.



To control the refrigerator temperature, press the **REF. TEMP CONTROL** button.

Whenever pressing the button, LED emitting the light.

The temperature is set in 7 steps, from **MIN** to **MAX** cooling. (**MIN** = warmest, **MAX** = coldest temperature)

OPERATIONS

CONTROLS FOR FREEZER COMPARTMENT

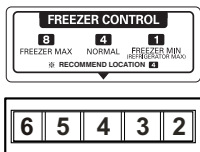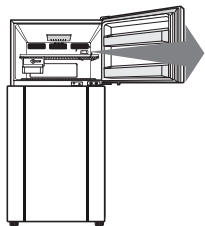


- The higher number the control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment set to be colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High(5~8).

- Setting the Freezer Knob at will satisfy 4 STAR. Setting the Freezer Knob at NORMAL will have sufficient freezing effect, so it is recommended to set the Knob at NORMAL.

ICE MAKING

Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop in to the ice cube box.

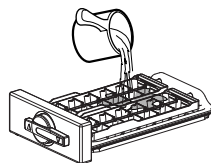

NOTE

You can disassemble the Ice Maker to secure space in the freezer.



- **Twisting Ice Serve Type:** Remove 1 and 2
 1. Ice Tray
 2. Ice Cube Box.



WARNING

- Do not use anything other than water.
- Fill the water up to the marked line..

Ice Trays
Ice Cube Box

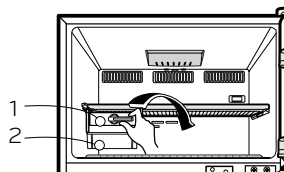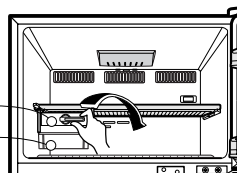

<Twisting Ice Serve Type>

DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which located in the lower back side of the refrigerator and is evaporated automatically.

OPERATIONS


VEGETABLE DRAWER

Vegetable Partitioner

- Fix the partitioner by inserting it at the rear side of vegetable box as shown in the figure.

How to use



- Vegetable drawer can be used through the control of knob.
- Check the position of knob prior to store the food.
- Do not locate the knob on the middle point.

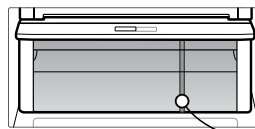

Partitioner

DEODORIZER (OPTIONAL)

- Unpleasant odor of food in fresh food compartment is deodorized with no harm to you and the food.

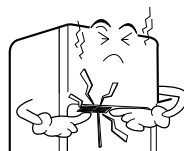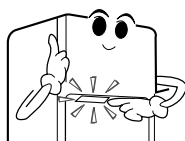


How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may be damaged.
- When storing food with a strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.

Re-Using of Deodorizer

- Used some length and the odor is strong, Deodorizer can be revived and re-used.
- Separate Deodorizer in ceiling of refrigerator compartment, using hair drier to remove moisture or malodor and oxidize under sunlight to decomposing malodor by ultraviolet.

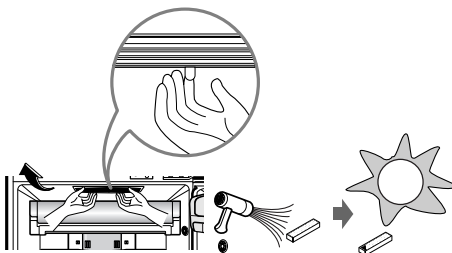


SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- It is recommended to load food at least 15mm against back of freezer wall, it will keep good air circulation in the freezer compartment.
- Loading for Freezing - It is recommended to load newly introduced foods on the following position for freezing:

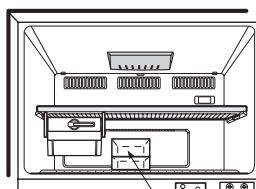


Newly Introduced Food

- Freezer Door Basket, marked (※※) is -12°C compartment, that is suitable for short term storage of frozen food (optional).

REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze upon direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by the cool circulating in the refrigerator.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a up-right position, which keeps them fresh longer.

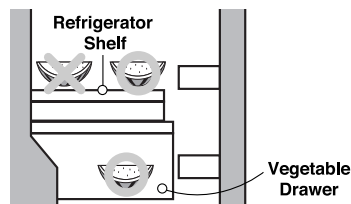

CLEANING

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, however, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

For products with a stainless steel exterior, use a clean sponge or soft cloth and a mild Detergent in warm water. Do not use abrasive or harsh cleaners. Dry thoroughly with a Soft cloth. Do not use appliance wax, bleach, or other products containing chlorine on stainless steel.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean damp cloth and then dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.). Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning Not in use : Surface active agent, Car wax, Anticorrosive, All sorts of oil, Gasoline, Acids, Wax.
- Usable Detergent Vegetable dish washable solution, Soapy water.
- When careless using, it can occur a color change.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses and by clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Catering and similar non-retail applications.


IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator. To avoid damaging the leveling screw(s), turn them all the way into the base.

ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation. Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation Pipe

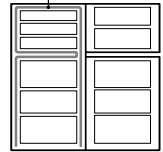

Caution

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE : Moving the control to the OFF position does not remove power to the light circuit.

LAMP REPLACEMENT

NOTE

- This product use LED lamp which not intend to be replaced by user, please contact authorized service center for lamp replacement.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection when accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH.

It will cause electric shock or fire.



VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store inflammable materials, explosives or chemicals in the refrigerator.

WARNING

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

DISPOSAL OF THE OLD APPLIANCE

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.


All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	• Has a house fuse blown or circuit breaker tripped? • Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	• Temperature control not set on proper position. • Appliance is placed close to wall or heat source. • Warm weather-frequent door openings. • Door left open for a long time. • Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	• Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. • Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	• Foods with strong odors should be tightly covered or wrapped. • Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	• Not unusual during periods of high humidity. • Door may have been left ajar.

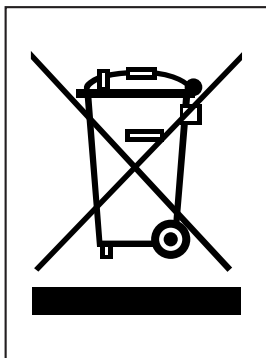

DISPOSAL OF YOUR OLD APPLIANCE

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

- Information of fluorinated greenhouse gases used as refrigerant of this refrigerator.


Chemical Name	Composition of Gases	Total GWP (kg CO ₂ -eq)
R-134a	100% HFC-134a	1300

EARTH/GROUNDING CONSTRUCTION (OPTIONAL)

It is recommended to install the earth to prevent electric shock in case of electricity leakage.

How to connect the earth wire:

- Connect the earth wire's metal ring end to the earth screw on the back of the refrigerator.
- Peel off the cable sheath/insulation at the other end of the earth wire. Attach the peeled wire to a metal screw/nail and then drive it through the wall or ground.

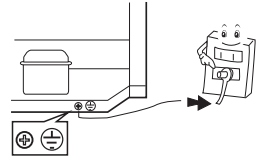

Do not connect the earth wire to the following locations.

- **Gas pipe**
It could produce sparks which lead to fire and explosion.
- **Telephone earth wire and lightning rod**
It is dangerous during lightning.
- **Water pipe and water tap**
The earth wire connection will not work when the middle of the water pipe is made of plastic.
If it is connected to a metal water pipe, it could cause someone to be electrocuted.

When installing the product in a humid or wet location, you must install the earth wire.

- Ex) • Unfloored or dirt floored room (Room with dirt and no floor), concrete floor
- Location where it can get wet such as near the sink
 - Location where water can leak or is humid such as basement
 - Other wet or humid location

Especially, for locations where it always get wet such as near the restaurant sink, you are obligated by the law to install a circuit breaker in addition to the earth wire.

After consulting with your retailer or electric construction company, you must do the earth wire construction (Type 3 earth construction). Please note that earth construction could incur extra fees.

คู่มือการใช้งาน ตู้เย็น

กรุณาอ่านคู่มือนี้อย่างละเอียดก่อนทำการใช้งาน
และเก็บคู่มือเล่มนี้ไว้เพื่ออ้างอิงในภายหลัง

สารบัญ

ข้อมูลด้านความปลอดภัย.....	23
การติดตั้ง.....	30
ตำแหน่งอุปกรณ์.....	31
วิธีการใช้งาน.....	32

เริ่มต้นใช้งาน

การควบคุมอุณหภูมิ

เสียงเตือนประดู่

โปรแกรมตรวจสอบการทำงาน

แผงควบคุมการทำงาน

การปรับอุณหภูมิช่องแช่แข็ง


การทำน้ำแข็ง

ลิ้นชักแช่ผัก

การละลายน้ำแข็ง

ระบบกำจัดกลิ่น (เฉพาะรุ่น)

คำแนะนำในการเก็บอาหาร.....	35
การทำความสะอาด.....	36
ข้อมูลทั่วไป.....	37
การเปลี่ยนหลอดไฟ.....	37
คำเตือนที่สำคัญ.....	38
ก่อนติดต่อศูนย์บริการ.....	39

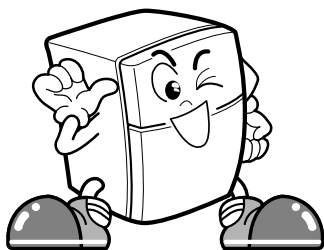

ข้อมูลด้านความปลอดภัย

ขอควรระวังเบื้องต้นด้านความปลอดภัย

ส่วนนี้จะประกอบด้วยข้อความเกี่ยวกับความปลอดภัยที่สำคัญ โปรดอ่านและปฏิบัติตามข้อความดังกล่าวให้ครบถ้วน



เครื่องหมายความปลอดภัยนี้ เพื่อเตือนให้ท่านทราบถึงข้อความด้านความปลอดภัยซึ่งอันตรายที่ท่านหรือคนอื่นได้รับบาดเจ็บหรือสร้างความเสียหายแก่ผลิตภัณฑ์ ข้อความที่เกี่ยวกับความปลอดภัยทั้งหมดจะมีเครื่องหมายความปลอดภัยและคำที่แสดงถึงอันตรายน่าหนาเสมอ เช่น “คำเตือน” หรือ “ระวัง” ซึ่งมีความหมาย ดังนี้ :



คำเตือน

ท่านอาจได้รับอันตรายหรือบาดเจ็บสาหัสหากไม่ปฏิบัติตามคำแนะนำ



ระวัง

ท่านอาจตกอยู่ในสถานการณ์อันตรายซึ่งก่อให้เกิดการบาดเจ็บเล็กน้อยถึงปานกลางและผลิตภัณฑ์เสียหายได้ หากไม่หลีกเลี่ยง

ข้อความด้านความปลอดภัยทั้งหมดจะแสดงถึงอันตราย, การลดโอกาสที่อาจทำให้ท่านได้รับบาดเจ็บและสิ่งทีอาจเกิดขึ้นหากท่านไม่ปฏิบัติตามคำแนะนำ




คำเตือน

เพื่อลดความเสี่ยงที่จะเกิดเพลิงไหม้, ไฟดูดหรือการบาดเจ็บเมื่อใช้ผลิตภัณฑ์ ท่านควรปฏิบัติตามคำแนะนำด้านความปลอดภัยเบื้องต้น ดังนี้
อ่านคำแนะนำก่อนใช้ผลิตภัณฑ์

1. เมื่อต่อปลั๊กไฟ


ห้ามเสียบปลั๊กตู้เย็นรวมกันในเต้าเสียบหลายๆตัว ควรใช้เต้าเสียบแยก

ท่านควรใช้เต้ารับสำหรับเสียบปลั๊กไฟแยกต่างหาก การเสียบปลั๊กไฟหลายๆอันในเต้ารับเดียวอาจทำให้เกิดเพลิงไหม้

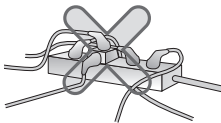

อย่าเสียบปลั๊กไฟหลายชิ้นด้านบนหรือถูกเบียดอัดอยู่ด้านหลังตู้เย็น

หากปลั๊กไฟโดนน้ำหรือเสียหายอาจก่อให้เกิดเพลิงไหม้หรือไฟดูด

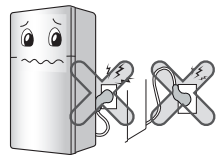

ควรระมัดระวังอย่าให้สายไฟถูกเบียดอัดหรือกดทับเมื่อเคลื่อนย้ายตู้เป็นระยะทางการติดตั้ง

การกระทำดังกล่าวอาจก่อให้เกิดเพลิงไหม้หรือไฟดูด

อย่าให้สายไฟขดงอหรือถูกทับด้วยของหนักเพราะสายไฟอาจชำรุด เสียหายและเป็นสาเหตุให้เกิดเพลิงไหม้หรือไฟดูด



ข้อมูลด้านความปลอดภัย

1. เมื่อเสียบปลั๊กไฟ


อย่าเปลี่ยนหรือเพิ่มความยาวของสายไฟ เพราะอาจทำให้สายไฟเสียหายและเกิดเพลิงไหม้หรือไฟดูด
หากสายไฟชำรุดหรือเสียหาย ให้



ติดต่อศูนย์บริการหรือช่างที่มีความชำนาญในการเปลี่ยนสายไฟเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นได้

ถอดปลั๊กไฟออกเมื่อต้องการทำความสะอาดหรือเปลี่ยนหลอดไฟภายในตู้เย็น


- เนื่องจากท่านอาจถูกไฟดูดหรือ บาดเจ็บได้
- เมื่อเปลี่ยนหลอดไฟในตู้เย็น ตรวจสอบให้แน่ใจว่าแหวนยางสำหรับป้องกันการเกิดประกายไฟยังอยู่ในตำแหน่งหลอดไฟ

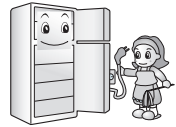

ห้ามดึงสายไฟเพื่อถอดปลั๊กไฟ ให้จับที่หัวปลั๊กแล้วดึงออก
หากถอดปลั๊กไฟโดยการดึงที่สายไฟอาจถูกไฟดูดหรือไฟฟ้าลัดวงจรและเกิดเพลิงไหม้




เช็ดน้ำหรือฝุ่นออกจากหัวปลั๊กและเสียบเขาไปในระดับครึ่ง
ฝุ่น น้ำหรือการเสียบเข้าปลั๊กหลวมอาจทำให้เกิดเพลิงไหม้หรือไฟดูด



อย่าจับสายไฟหรือปลั๊กไฟขณะที่มือเปียก

- ท่านอาจถูกไฟดูดหรือ บาดเจ็บได้

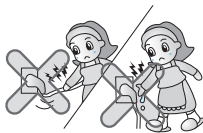


หลังจากถอดปลั๊กไฟ ควรรออย่างน้อย 5 นาทีจึงเสียบปลั๊กไฟอีกครั้ง
หากไม่ปฏิบัติตามอาจทำให้การทำงานของช่องแช่แข็งล้มเหลว




ควรต่อสายดินให้กับตู้เย็น

การต่อสายดินไม่ถูกต้องอาจทำให้เครื่องหยุดทำงานหรือไฟดูด

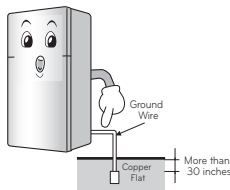

ห้ามเสียบปลั๊กไฟหากสายไฟหรือหัวปลั๊กชำรุดหรือรูปร่างหลวม

อาจทำให้เกิดไฟดูดหรือไฟฟ้าลัดวงจรและเกิดเพลิงไหม้ได้

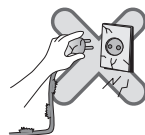

ข้อมูลด้านความปลอดภัย

2. เมื่อใช้ตู้เย็น


ห้ามวางของหนักหรืออันตรายบนตู้เย็น

วัตถุอาจตกลงมาทำให้ได้รับบาดเจ็บ ไฟไหม้หรือไฟดูด เมื่อเปิดประตูตู้เย็น



ห้ามมิให้เด็กเข้าไปในตู้เย็น

หากเด็กเข้าไปในตู้เย็นอาจทำให้เกิดอันตรายถึงชีวิต

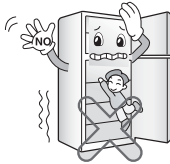

ควรระมัดระวังไม่ใช้ความรุนแรงในการเปิดหรือปิดตู้เย็นเพราะอาจทำให้สิ่งของที่อยู่ในตู้เย็นตกและอาจได้รับบาดเจ็บที่เท้า

การเสื่อมสภาพของฉนวนป้องกันอุปกรณ์

ไฟฟ้าอาจก่อให้เกิดไฟฟ้าลัดวงจรหรือไฟดูด



ห้ามห้อยโหนประตู ชั้นวางของที่ประตู ลิ้นชักหรือชั้นวางของในตู้เย็น

โดยเฉพาะอย่างยิ่ง ไม่ควรให้เด็กๆ กระทำ

การดึงกล้าวเพราะอาจทำให้ตู้เย็นล้มหรือได้รับบาดเจ็บที่มือ




ห้ามวางแฉก แก้วน้ำ เครื่องสำอางค์ ยา หรือภาชนะบรรจุของเหลวอื่นๆ บนตู้เย็น

หากสิ่งของเหล่านี้อาจทำให้เกิดเพลิงไหม้ไฟดูดหรือบาดเจ็บได้




ห้ามนำสารไวไฟ เช่น อีเธอร์ เบนซิน แอลกอฮอล์ แก๊สหุงต้ม สเปรย์หรือเครื่องสำอางค์ไวไฟใกล้ๆ หรือในตู้เย็น

อาจทำให้เกิดการระเบิดหรือเพลิงไหม้

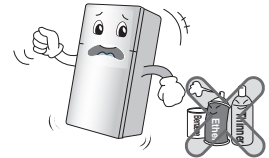

ห้ามเก็บเวชภัณฑ์หรือวัสดุทางวิทยาศาสตร์ไว้ในตู้เย็น

การเก็บวัสดุดังกล่าวไว้ในสถานที่ที่มีอุณหภูมิจำกัดอาจทำให้เกิดการเสื่อมสภาพของวัสดุนั้นๆ หรืออาจเกิดปฏิกิริยาที่ทำให้เกิดอันตราย

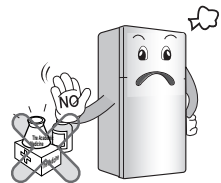


ข้อมูลด้านความปลอดภัย

2. เมื่อใช้ตู้เย็น


ห้ามใช้เครื่องเป่าเพื่อทำให้ข้างในตู้เย็นแห้งหรือจุดเทียนเพื่อขจัดกลิ่น

อาจเป็นสาเหตุให้เกิดการระเบิดหรือเพลิงไหม้

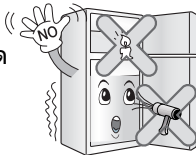


ห้ามใช้สเปรย์ที่ติดไฟได้ง่ายขณะอยู่ใกล้ตู้เย็น

เพื่อป้องกันการเกิดเพลิงไหม้

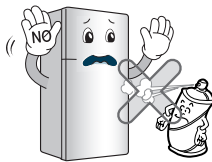


ควรถอดปลั๊กไฟทุกครั้งเมื่อไม่ได้ใช้เครื่องเป็นเวลานาน หรือเมื่อเกิดฟ้าแลบ ฟ้าผ่า

เพราะอาจเกิดอันตรายจากการถูกไฟดูดหรือเกิดเพลิงไหม้ได้

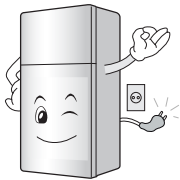


ห้ามติดตั้งตู้เย็นไวใกล้แหล่งให้ความร้อน

เพราะอาจทำให้เกิดเพลิงไหม้ได้

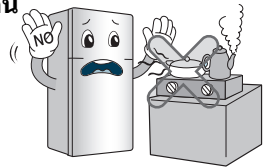


ห้ามใช้งานตู้เย็นขณะที่ตู้เย็นเปียกน้ำ ควรให้ข้างที่ขานาญตรวจเช็คก่อน

เพื่อป้องกันมิให้ถูกไฟดูดหรือเกิดเพลิงไหม้

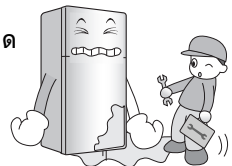

ห้ามฉีดน้ำใส่ตู้เย็น ไม่ว่าจะเป็ด้านในหรือด้านนอก และห้ามใช้สารเคมีในการทำควมสะอาด

การเสือมสภาพของฉนวนป้องกันอุปกรณ์ไฟฟ้าอันเนื่องมาจากการใช้สารเคมีทำควมสะอาด อาจก่อให้เกิดเพลิงไหม้หรือถูกไฟดูดได้

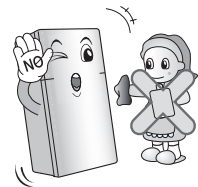


ข้อมูลด้านความปลอดภัย

2. เมื่อใช้ตู้เย็น

การถอดอะไหล่ ซ่อมแซม
หรือดัดแปลงตู้เย็น

ควรได้รับการ
ดูแลโดยช่างผู้
ชำนาญเท่านั้น

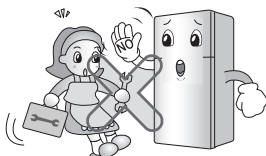

ควรถอดปลั๊กไฟและตัดต่อ
ศูนย์บริการทันทีเมื่อได้กลิ่นผิดปกติ
หรือมีควันออกมาจากตู้เย็น

เพราะอาจเกิด
เพลิงไหม้ได้




หากท่านต้องการทิ้ง
ตู้เย็น ให้ถอดขอบ
ยางออกจากประตู
และวางขึ้นวางของไว้
ตรงตำแหน่งเดิม
เพื่อป้องกันมิให้เด็กติด
อยู่ภายใน



ผลิตภัณฑ์นี้ไม่ได้มีไว้ใช้ในเชิง
พาณิชย์ (การเก็บเวชภัณฑ์หรือ
ทดสอบวัตถุ, การนำไปใช้บนเรือ ฯลฯ)

หากไม่ปฏิบัติตาม อาจ
นำไปสู่เหตุการณ์ที่ไม่
คาดคิด เช่น ไฟไหม้, ไฟดูด
, การเสื่อมสภาพของสิ่งของ
ในตู้เย็นหรือเกิดปฏิกิริยา
ทางเคมี

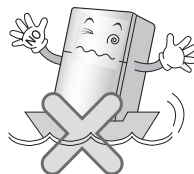


ติดตั้งตู้เย็นบนพื้นที่มีระดับเรียบ
เสมอกัน

ควรติดตั้ง
เครื่องใช้ไฟฟ้าบนพื้น
เรียบเพื่อป้องกันมิให้
เครื่องล้มลงและเกิด
การบาดเจ็บ



อย่ายื่นมือหรือ
สิ่งของเข้าไปใน
ช่องระบายอากาศ,
ข้างใต้ฝา

ครอบหรือร
บาย
ด้านหลังเครื่อง
ท่านอาจได้รับ
อันตรายจากการ
ถูกไฟดูดหรือ
บาดเจ็บ

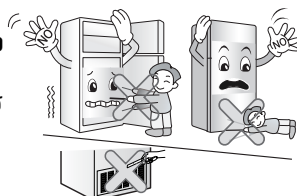


ควรทำอย่างไรกับตู้เย็นเก่า

ตู้เย็นของท่าน
ประกอบด้วยของเหลว
(สารทำความเย็น) ซึ่งทำ
จากวัสดุที่สามารถนำ
กลับมาใช้ใหม่ได้ สาร
เหล่านี้จะถูกส่งไปยัง
สถานที่สำหรับทิ้งขยะรี
ไซเคิลเพื่อนำไปผ่าน
กระบวนการรีไซเคิล




ควรย้ายสิ่งของออกให้หมดก่อน
ถอดช่องใส่ของข้างประตูออก

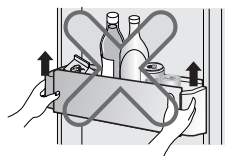


ข้อมูลด้านความปลอดภัย

2. เมื่อใช้ตู้เย็น


ห้ามถอดปลั๊กหรือ
ด้านหลังเครื่อง
ออก

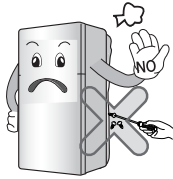

ใส่อุปกรณ์ให้
ถูกต้องก่อน เสียบ
ปลั๊กไฟ

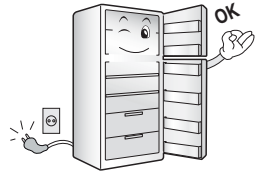

ห้ามใช้หม้อแปลง
ไฟฟ้า (Adapter) ที่
ด้านหลังเครื่อง

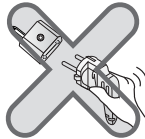

ห้ามจุดเทียนหรือเครื่องหอมไว้นบน
ตู้เย็น เพื่อลดความเสี่ยง

ของการเกิด
เพลิงไหม้หรือ
ลัดวงจรเสียหาย



⚠ ระวัง

การผ่าฝืนคำแนะนำนี้อาจทำให้เกิดการบาดเจ็บ หรือเกิดความเสียหายต่อบ้านและ
ทรัพย์สินของท่าน โปรดปฏิบัติตามด้วยความระมัดระวัง

อย่าจับอาหารหรือภาชนะใน
ช่องแช่แข็งขณะมือเปียก

เพื่อป้องกันมิให้
ผิวหนังถูกทำลาย
ด้วยความเย็นจัด
(น้ำแข็งกัด)



อย่าแช่ขวดแก้วภายใน
ช่องแช่แข็ง

ความเย็นจัดอาจทำให้
ขวดแตกและเกิดการ
บาดเจ็บได้



วางอาหารในตู้เย็นให้เป็นระเบียบ
อาหารอาจตกใส่และทำให้ผู้อื่นได้รับบาดเจ็บ
ขณะเปิด-ปิดตู้เย็น


ห้ามสอดมือเข้าข้าง
ใต้ตู้เย็น

ท่านอาจได้รับบาดเจ็บ
จากแผ่นโลหะที่อยู่
ด้านล่าง




ขนย้ายตู้เย็นโดยการจับตรงที่
จับซึ่งอยู่ด้านหน้าของส่วนล่าง
และด้านหลังของส่วนบนของ
ตู้เย็น

มิฉะนั้น มือของท่าน
อาจจะลื่นและได้รับ
บาดเจ็บ
เนื่องจากสินค้ามี
น้ำหนักมาก การยก
เพียงอย่างเดียวอาจ
ทำให้ อื่นได้รับ บาด
เจ็บและเกิด
อุบัติเหตุได้

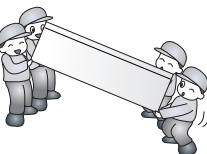


โปรดเปิด-ปิดประตูตู้เย็นด้วยความ
ระมัดระวัง เพื่อป้องกันมิให้ผู้อื่น
ได้รับบาดเจ็บ

มือหรือเท้าอาจได้รับ
อันตรายจากการสะดุด
ประตู และเด็กเล็กอาจ
ได้รับบาดเจ็บจากมุม
ประตูขณะเปิด-ปิด
ประตูตู้เย็น

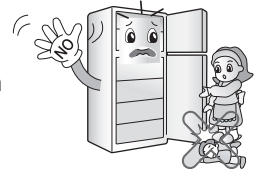


ข้อมูลด้านความปลอดภัย

ไม่นำสัตว์ไว้
ภายในตู้เย็น
เพราะอาจทำให้
สัตว์ตายได้

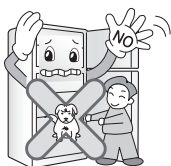


หลีกเลี่ยงการสัมผัสสารบ่มน้ำมัน
หรือไขมันบนส่วนที่เป็นพลาสติก
เพื่อป้องกันความเสียหายที่อาจ
เกิดขึ้นได้

หากสายไฟ
ชำรุดเสียหาย
ควรให้
เจ้าหน้าที่หรือ
ช่างผู้ชำนาญ
เป็นผู้เปลี่ยน
สายไฟเพื่อ
ป้องกันมิให้
เกิดอุบัติเหตุ

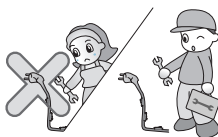


เจ้าหน้าที่/ช่างผู้
ชำนาญ

ห้ามยืนพิง
ประตูเพราะ
อาจทำให้บาน
พับประตู หรือ
ตัวควบคุมการ
ทำความเย็นใน
ตู้เย็นเสียหาย

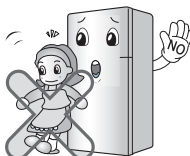


ห้ามใช้ฟองน้ำ แปรง เหล็กหรือ
ผลิตภัณฑ์พิเศษอื่นๆ เช่น แอลกอฮอล์
น้ำมันกัด ชีฟี่ง สารละลายหรือสารเคมี
จำพวกคลอรีน น้ำยาทำความสะอาด
หรือน้ำส้มสายชูในการทำความสะอาด
หรือขัดเงาตรงส่วนที่เป็นเหล็กของตู้เย็น
ผลิตภัณฑ์เหล่านี้อาจทำให้สารเคลือบ
เงาเสียหายและเสี่ยงต่อการเกิดคราบ

สนิมบน
พื้นผิวของ
ตู้เย็น เกิด
คราบสนิม
บนพื้นผิว
ของตู้เย็น

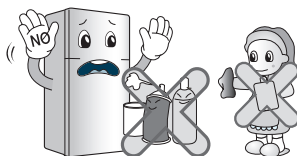

ห้ามหยอดน้ำมันลงบนส่วนเชื่อมต่อ
ประตูตู้เย็นไม่ว่ากรณีใดก็ตาม
เนื่องจากน้ำมันอาจทำให้ส่วนที่เป็น
พลาสติกเสียหาย

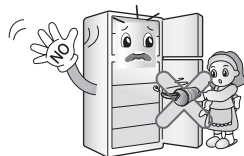

ห้ามเก็บวัสดุ หรือสารที่สามารถ
ระเบิดได้ เมื่อได้รับความร้อน
ภายในเครื่องใช้ไฟฟ้าชนิดนี้

! คำเตือน

ห้ามนำลิ้นชักเก็บของชั้นล่างเข้าเครื่องล้างจาน ความร้อนจากเครื่องล้างจาน
อาจทำให้ชิ้นส่วนเสียหายและไม่สามารถนำกลับมาใช้ได้อีกครั้ง

ตู้เย็นนี้ผลิตภายใต้ความใส่ใจในคุณภาพและด้วยเทคโนโลยีล่าสุด
เรามั่นใจว่าท่านจะได้รับความสะดวกในคุณภาพและประสิทธิภาพของตู้เย็นนี้
ก่อนที่จะทำการใช้งาน กรุณาอ่านคู่มือการใช้งานอย่างละเอียดซึ่งภายในคู่มือการใช้งาน
เล่มนี้จะประกอบด้วยคำแนะนำในการติดตั้ง, วิธีการใช้งานและการบำรุงรักษา
และยังให้ข้อควรรู้ที่เป็นประโยชน์อีกด้วย

การติดตั้ง

1. เลือกสถานที่ที่เหมาะสม

วางตู้เย็นของท่านไว้ในสถานที่ที่ใช้งานได้สะดวก

2. หลีกเลี่ยงที่จะวางตู้เย็นใกล้แหล่งความร้อน, โทนแสงแดดโดยตรงหรือใกล้ความชื้น

3. ควรเว้นให้มีพื้นที่ว่างรอบๆ ตู้เย็นเพื่อประสิทธิภาพในการทำงานที่ดีที่สุดของตู้เย็น

ถ้าท่านวางตู้เย็นในช่องก้ำแพง ท่านควรเว้นพื้นที่ว่างเล็กน้อยสำหรับด้านข้างทั้งสองด้านและด้านบนเว้นพื้นที่ว่างจากก้ำแพงอย่างน้อย 2 นิ้ว (5 ซม.)

4. เพื่อหลีกเลี่ยงการสิ้นเปลือง ควรวางตู้เย็นบนพื้นที่ที่ราบเรียบ ถ้าต้องการท่านสามารถปรับระดับความสูงของตู้เย็นได้โดยหมุนสกรูปรับระดับของตู้เย็นเมื่ออยู่ในพื้นที่ที่ไม่ราบเรียบได้

ด้านหน้าของตู้เย็นควรสูงกว่าด้านหลังของตู้เย็นเล็กน้อยเพื่อปิดประตูตู้เย็นได้สะดวก

ท่านสามารถหมุนสกรูปรับระดับความสูงของตู้เย็นได้อย่างง่ายดายโดยเอียงตู้เย็นขึ้นเล็กน้อย

หมุนสกรูปรับระดับของตู้เย็นตามเข็มนาฬิกา (↻)

เพื่อปรับตู้เย็นให้สูงขึ้นและหมุนทวนเข็มนาฬิกา (↺)

เพื่อปรับตู้เย็นให้ต่ำลง

5. ไม่ควรวางตู้เย็นไว้ในสถานที่ที่มีอุณหภูมิต่ำกว่า 5 °C เพราะจะทำให้ประสิทธิภาพของตู้เย็นลดลง

ขั้นตอนต่อไป

1. เช็ดฝุ่นที่เกิดขึ้นระหว่างขนส่งออกจากตู้เย็นและทำความสะอาดตู้เย็นทั้งตัวเครื่องอย่างละเอียด

2. ติดตั้งอุปกรณ์อื่นๆ เช่น กล้องบรรจุน้ำแข็งไว้ในตำแหน่งที่ถูกต้อง อุปกรณ์อื่นๆ จะถูกบรรจุรวมกัน เพื่อป้องกันอุปกรณ์ชำรุดระหว่างขนส่ง

3. เสียบสายไฟฟ้า (หรือปลั๊กไฟ) กับเต้ารับ ไม่ควรเสียบปลั๊กไฟของอุปกรณ์อื่นบนเต้ารับเดียวกัน

4. ก่อนใช้งานในครั้งแรก ท่านควรเสียบปลั๊กไฟของตู้เย็นทิ้งไว้ประมาณ 2-3 ชั่วโมง

ตรวจสอบความเย็นในช่องแช่แข็งว่าได้ความเย็นที่เหมาะสมแล้ว ขณะนี้ท่านสามารถใช้งานตู้เย็นได้แล้ว

ตำแหน่งอุปกรณ์

❑ แพ่งควบคุมภายใน

ช่องแช่แข็ง

หลอดไฟ

ช่องบิดง่าย

น้ำแข็ง

คาดทำน้ำแข็ง

ទំព័រ ១១១

ช่องแช่เย็น

โชนสด

ตัวกำจัดกลิ่น

การควบคุมอุณหภูมิตู้เย็น

หลอดไฟ

ชั้นวางของ

ลื่นชักเก็บผัก

ปัมควบคุมอุณหภูมิ

ห้องแช่แข็ง

ช่องว่างของข้าง

– ประตูละ
จำนวน ๑๐๐๐๐๐

· ถาดวางไข่

ช่องว่างของข้าง

ประตูลูกแก้ว

สกรปรับระดับ

หมายเหตุ

- คู่มือเล่มนี้สามารถนำไปใช้กับสินค้ารุ่นอื่นๆได้ ดูเย็บที่ท่านซื้ออาจมีอุปกรณ์บางชิ้นหรือทุกชิ้นตามรูปด้านบน
- การวางอุปกรณ์ภายในตู้เย็น เช่น ช่องวางของ ล้นชักและชั้นวางตามตำแหน่งที่ผู้ผลิตกำหนดจะช่วยให้ประหยัด พลังงานได้อย่างเต็มที่

คำแนะนำเพื่อการประหยัดพลังงาน

- อย่าเปิดประตูเย็นทิ้งไว้เป็นเวลานาน
- ไม่ควรแช่อาหารไว้ในตู้เย็นมากเกินไปจนความจำเป็น ควรปล่อยให้ช่องว่างเพื่อให้ความเย็นกระจายได้ทั่วถึง
- อย่าตั้งอุณหภูมิภายในตู้เย็นต่ำเกินไปและอย่าวางอาหารไว้ใกล้ตัวจับอุณหภูมิ (Temperature Sensor)
- การนำอาหารร้อนเข้าตู้เย็นทันทีจะทำให้อาหารอื่นๆ เน่าเสียและค่าไฟฟ้าเพิ่มขึ้นได้ ควรรอให้อาหารเย็นลงก่อนจะนำเข้าไว้ในตู้เย็น
- ห้ามวางอาหารกีดขวางช่องระบายอากาศภายในตู้เย็น หากความเย็นถูกปล่อยออกมาโดยไม่มีสิ่งกีดขวางจะทำให้อุณหภูมิภายในตู้เย็น สูงขึ้น
- การเปิดประตูตู้เย็นบ่อยเกินไปจะทำให้อากาศร้อนจากข้างนอกเข้าไปในตู้เย็นและทำให้อุณหภูมิสูงขึ้น

วิธีการใช้งาน

เริ่มการใช้

ควรปล่อยให้ตู้เย็นทำงานประมาณ 2-3 ชั่วโมงหลังจากติดตั้งในครั้งแรก เพื่อให้อุณหภูมิภายในเครื่องคงที่ก่อนนำอาหารเข้าไว้ในตู้เย็น

หากตู้เย็นหยุดทำงานหรือทำงานผิดปกติ ให้รอ 5 นาทีแล้วจึงเปิดเครื่องอีกครั้ง

ก่อนตั้งอุณหภูมิ

- อุณหภูมิภายในตู้เย็นจะคงที่หรือเปลี่ยนแปลงขึ้นอยู่กับอุณหภูมิห้อง เมื่อตั้งอุณหภูมิแล้ว (ทั้งช่องแช่เย็นและช่องแช่แข็ง) ไม่ควรปรับ อุณหภูมิอีกโดยไม่จำเป็น
- ตู้เย็นเครื่องนี้มีปุ่มควบคุมอุณหภูมิ 1 ปุ่มสำหรับช่องแช่เย็น และอีก 1 ปุ่มสำหรับช่องแช่แข็ง
- โดยปกติ อุณหภูมิของช่องแช่เย็นจะถูกตั้งอยู่ที่ 3 องศาเซลเซียส
- โดยปกติ อุณหภูมิของช่องแช่แข็งจะถูกตั้งอยู่ที่ '4'
- ตู้เย็นนี้มีตัวจับอุณหภูมิ (Temperature Sensor) อยู่ในช่องแช่เย็นซึ่งจะเป็นตัวส่งให้คอมพิวเตอร์ทำงานและหยุดอัตโนมัติตามความ จำเป็น

เสียงเตือนประตู


เมื่อท่านเปิดประตูช่องแช่เย็นหรือช่องแช่แข็งทิ้งไว้เกิน 1 นาที จะมีเสียงเตือนดังขึ้น 3 ครั้ง หากประตูยังเปิดอยู่ เสียงเตือนจะดังขึ้นทุกๆ 30 นาที

โปรแกรมตรวจสอบการทำงาน

- ตู้เย็นนี้มีการบรรจุโปรแกรมตรวจสอบการทำงานเพื่อหาสาเหตุของอาการเสียอยู่กับตัวเครื่อง หากมีการทำงานที่ผิดปกติเกิดขึ้น หน้าจอแสดงผลจะปรากฏรหัสของอาการเสีย เพื่อช่วยให้ช่างซ่อมบำรุงทราบก่อนลงมือซ่อมเครื่อง ขณะที่รหัสของอาการเสียแสดงอยู่หน้าจอแสดงผลและแผงควบคุมจะหยุดทำงานทันที
- หากรหัสของอาการเสียปรากฏอยู่บนหน้าจอแสดงผล ให้ติดต่อศูนย์บริการทันทีและห้ามถอดปลั๊กไฟออกจากเต้ารับ

แผงควบคุมการทำงานสำหรับช่องแช่เย็น

□ แผงควบคุมภายใน

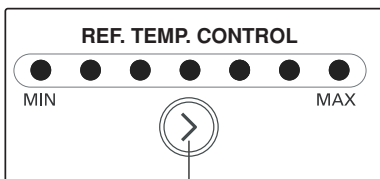

ปุ่มปรับอุณหภูมิ

โดยปกติ ปุ่มอุณหภูมิของช่องแช่เย็นจะถูกตั้งไว้ที่ **NORMAL**



หากท่านต้องการปรับอุณหภูมิของตู้เย็น ให้กดที่ **ปุ่มปรับอุณหภูมิ**

เมื่อใดก็ตามที่ท่านกดปุ่ม ไฟ LED จะสว่างขึ้น ท่านสามารถปรับอุณหภูมิในตู้เย็นได้ถึง 7 ระดับ จาก **MIN** ถึง **MAX**

(**MIN** = อุณหภูมิต่ำสุด และ **MAX** = อุณหภูมิสูงสุด)

วิธีการใช้งาน

การปรับเปลี่ยนอุณหภูมิของแช่แข็ง

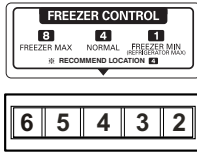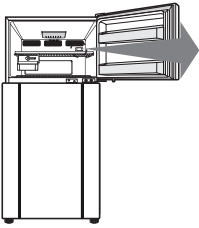

- การปรับดวงไฟที่หมายเลขสูง อุณหภูมิของแช่แข็งจะต่ำ
- โดยที่อุณหภูมิของแช่แข็งและช่องแช่แข็งจะเป็นการควบคุมกำหนดปริมาณอากาศเย็น, ช่องแช่แข็งจะเย็นน้อยกว่าหากช่องแช่แข็งมีความเย็นสูง
- เมื่อช่องแช่แข็งมีความเย็นไม่เพียงพอในฤดูหนาว, ปรับปุ่มควบคุมช่องแช่แข็งไว้ที่ High(5-8).

- การตั้งค่าความเย็นอยู่ที่ระดับปกติ (NORMAL) จะช่วยลดผลกระทบต่างๆ ในช่องแช่แข็ง ดังนั้นจึงแนะนำให้ตั้งค่าความเย็นไปที่ระดับปกติ (NORMAL)
- อุณหภูมิในช่องแช่แข็งปกติ (ช่องตู้เย็น) จะอุ่นกว่าช่องแช่แข็ง

การทำน้ำแข็ง

การตักน้ำแข็งแบบหมุน

- สามารถทำน้ำแข็งก้อนได้ โดยเติมน้ำลงในถาดทำน้ำแข็ง
- การแกะน้ำแข็งออก ให้หมุนที่แกนหมุน น้ำแข็งจะตกลงใน ถาดเก็บน้ำแข็ง



ท่านสามารถถอดที่ทำน้ำแข็งออกได้ เพื่อเพิ่มพื้นที่ภายในช่องแช่แข็ง

- ถาดทำน้ำแข็งแบบหมุน: ถอดหมายเลข


1 และ 2 ตามภาพ

1. ถาดทำน้ำแข็ง
2. ถาดเก็บน้ำแข็ง

- ใช้ใส่น้ำทำน้ำแข็งเท่านั้น
- เติมน้ำให้อยู่ในระดับในถาดทำน้ำแข็ง

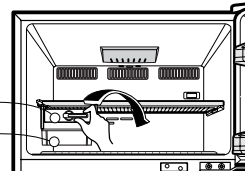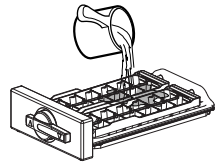

ถาดทำน้ำแข็ง
องเก็บน้ำแข็ง

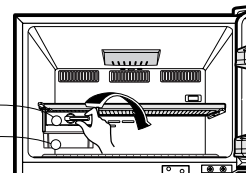

ถาดทำน้ำแข็งแบบหมุน


ลิ้นชักแช่ผัก

จากกันสำหรับพื้นที่แช่ผัก

- ใช้สำหรับจำกัดพื้นที่ในลิ้นชัก โดยการใส่เข้าไปข้างของลิ้นชัก โดยจะมีรูปภาพแสดงอยู่

วิธีการใช้งาน

- ลิ้นชักแช่ผักสามารถควบคุมความชื้นโดยตรงได้โดยที่ตัวควบคุมด้านบนลิ้นชัก
- ตรวจสอบตำแหน่งของตัวควบคุม ให้เหมาะสมกับอาหารที่จะแช่
- อย่าเลื่อนตัวควบคุมอยู่ตรงกึ่งกลาง

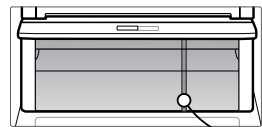

จากกัน

วิธีการใช้งาน

การละลายน้ำแข็ง



- ระบบละลายน้ำแข็งจะทำงานอัตโนมัติ
- น้ำแข็งที่ละลายออกมาจะไหลลงในถาดรองน้ำที่อยุ่ด้านล่างหลังตู้เย็นและน้ำจะระเหยกลายเป็นไอน้ำอัตโนมัติ

การละลายน้ำแข็ง

- ระบบละลายน้ำแข็งจะทำงานอัตโนมัติ
- น้ำแข็งที่ละลายออกมาจะไหลลงในถาดรองน้ำที่อยุ่ด้านล่างหลังตู้เย็นและน้ำจะระเหยกลายเป็นไอน้ำอัตโนมัติ

ระบบกำจัดกลิ่น (เฉพาะรุ่น)

- จะช่วยกำจัดกลิ่นที่ไม่พึงประสงค์ภายในตู้เย็น และจะไม่ขึ้น ฟิล์มกับตู้หรืออาหารที่แช่

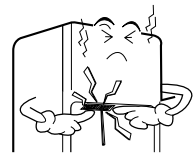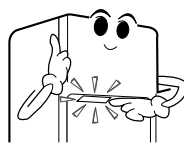


วิธีการใช้งาน

- ระบบกำจัดกลิ่นจะถูกติดตั้งอยู่ภายในระบบกระจายลมเย็น โดยอาศัยการหมุนเวียนของอากาศภายในตู้เย็น และจะไม่ขึ้น ฟิล์มกับตู้หรืออาหารที่แช่
- ห้ามนำของแหลมคมเหย หรือแทงเข้าไปในระบบกระจายลมเย็น เพราะอาจจะทำความเสียหายกับระบบกำจัดกลิ่นได้
- เมื่อต้องการเก็บอาหารที่มีกลิ่นแรง ควรจะห่อหุ้มอาหารให้มิดชิด เพราะกลิ่นของอาหารนั้นอาจจะกระจายเข้าไปในอาหาร ชนิดอื่นในตู้เย็นได้

การนำระบบกำจัดกลิ่นมาใช้ใหม่

- เมื่อมีกลิ่นไม่พึงประสงค์ภายในตู้เย็น ท่านสามารถที่จะทำให้ ระบบกำจัดกลิ่น กลับมามีประสิทธิภาพได้อีกครั้ง
- ถอดระบบกำจัดกลิ่นที่อยู่ด้านบนของผนังช่องแช่เย็นออก และใช้ไม้เป่าลมเป่า เพื่อกำจัดความชื้น หรือกลิ่น จากนั้นนำไปตากแดดเพื่อฆ่าเชื้อโรค

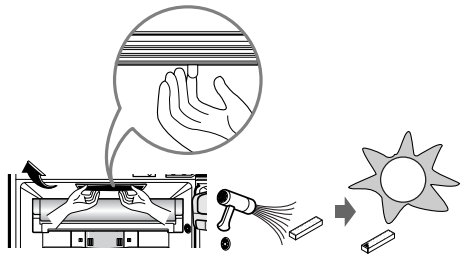


คำแนะนำในการเก็บอาหาร

การเก็บอาหาร

- เก็บอาหารสดไว้ในช่องแช่เย็น อาหารที่แช่แข็งและละลายจะมีผลต่อความสดและรสชาติของอาหาร
- ไม่ควรเก็บอาหารที่เสียบ่ายในตู้ที่มีอุณหภูมิต่ำ เช่น กุ้ง, สัปะรดและแตงโม
- ควรเก็บอาหารที่เย็นแล้ว การใส่อาหารที่ยังร้อนอยู่ในตู้เย็นอาจทำให้อาหารอื่นเสียและท่านต้องจ่ายค่าไฟฟ้าเพิ่มขึ้นอีกด้วย
- เมื่อเก็บอาหาร ห่ออาหารด้วยพลาสติกสำหรับห่ออาหารหรือเก็บอาหารไว้ในภาชนะที่มีฝาปิดเพื่อป้องกันความชื้นระเหยออกไปและยังช่วยเก็บรสชาติและคุณค่าของอาหารอีกด้วย
- ไม่ควรวางอาหารปิดช่องจ่ายอากาศเพื่อทำให้อุณหภูมิภายในตู้เย็นเย็นได้ทั่วถึง
- ไม่ควรเปิดประตูตู้เย็นบ่อยๆ เมื่อเปิดประตูตู้เย็น อากาศภายนอกจะเข้ามาภายในตู้เย็นซึ่งทำให้อุณหภูมิภายในตู้เย็นสูงขึ้น

ช่องแช่แข็ง

- ไม่ควรเก็บขวดน้ำไว้ในช่องแช่แข็ง - เพราะขวดน้ำอาจแตกได้เมื่อน้ำกลายเป็นน้ำแข็ง
- ไม่ควรเก็บอาหารที่ละลายน้ำแข็งออกแล้วมาใส่ในช่องแช่แข็งอีกครั้งเพราะจะทำให้รสชาติของอาหารเปลี่ยนไปและคุณค่าของอาหารจะลดลง
- เมื่อเก็บอาหาร เช่น ไอศกรีมไว้ในช่องแช่แข็งเป็นเวลานาน ควรเก็บไว้บนชั้นวางของ ไม่ควรเก็บไว้บนชั้นวางของบนฝาประตู
- การแช่อาหารให้เหลือช่องว่างอย่างน้อย 15 มิลลิเมตรให้ห่างจากผนังช่องแช่แข็ง เพื่อให้การหมุนเวียนของอากาศในช่องแช่แข็งมีประสิทธิภาพมากที่สุด
- การใส่อาหารช่องแช่แข็ง - แนะนำช่องเก็บอาหารรุ่นใหม่มัสดำรงตำแหน่งที่แสดงในช่องแช่แข็ง

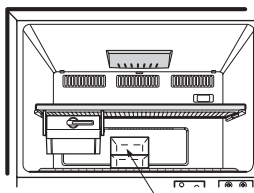


ที่เก็บรุ่นใหม่

- ชั้นวางตรงประตูช่องแช่แข็ง, จะมีอุณหภูมิประมาณ (✕✕) -12 °C อุณหภูมินี้จะเหมาะสมสำหรับเก็บอาหารที่เน่าเสียได้ง่าย (ฟิงก์ชีสเสริม)

ช่องแช่เย็น

- หลีกเลี่ยงที่จะวางอาหารเปียกไว้ด้านบนชั้นวางเพราะอาหารอาจจะเป็นน้ำแข็งได้เนื่องจากถูกอากาศเย็นโดยตรง ควรนำอาหารเก็บไว้ในภาชนะที่มีฝาปิด
- หากต้องการเก็บอาหารที่มีความชื้น (โดยเฉพาะผักและผลไม้) ในช่องเก็บผัก หากจำเป็นต้องเก็บไว้บนชั้นวางช่องแช่เย็น ควรวางไว้ใกล้ประตูให้ห่างจากผนังด้านในของตู้เย็น เพื่อหลีกเลี่ยงการเป็นน้ำแข็งจากความชื้นของตู้เย็น
- ควรทำความสะอาดของที่จะนำเข้าสู่ตู้เย็น ผักและผลไม้ควรล้างและเช็ดให้แห้งและภาชนะที่บรรจุอาหารควรเช็ดให้สะอาดเพื่อป้องกันอาหารเสีย
- เมื่อเก็บไข่ไว้บนชั้นวางไข่ ควรตรวจสอบว่าไข่นั้นสดและควรวางไข่โดยตั้งไข่ขึ้นซึ่งจะทำให้คงความสดของไข่ได้เป็นเวลานาน

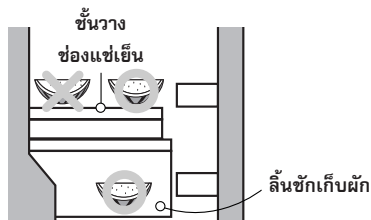

การทำความสะอาด

การทำความสะอาดเป็นสิ่งที่สำคัญมากสำหรับ
ดูเย็นของท่าน การทำ
ความสะอาดดูเย็นจะช่วยลดกลิ่นอับ ถ้าอาหาร
หกในดูเย็น ต้องเช็ด
ทำความสะอาดทันที เพื่อป้องกันคราบติดแน่น
ในดูเย็น
ห้ามใช้แปรงที่ทำจากโลหะ ในการขัดดูเย็น
เพราะจะทำให้พื้นผิว
ภายในดูเย็นเป็นรอยเสียหายได้
ผิวภายในช่องแช่แข็งมีความเย็นมาก ห้าม
สัมผัสกับพื้นผิวที่เย็นจัด
โดยเด็ดขาด ในขณะที่มือท่านเปียกชื้น

ด้านนอก – ใช้น้ำสบู่ หรือน้ำยาล้างจานเช็ด
ทำความสะอาด เพื่อให้
ผิวเคลือบด้านนอกคงทน และเช็ดให้แห้งด้วย
ผ้าที่สะอาด

ด้านใน – ใช้น้ำสบู่ หรือน้ำยาล้างจานเช็ดทำ
ความสะอาด เพื่อให้
ผิวเคลือบคงทน และเช็ดให้แห้งด้วยผ้าที่
สะอาด

ชั้นส่วนด้านใน – ล้างชั้นวาง, ชั้นวางด้าน
ประตู, ถาดเก็บอาหาร
และแม่เหล็กประตู อื่นๆ ด้วยน้ำสบู่ หรือน้ำยา
ล้างจานเช็ดทำ
ความสะอาด เพื่อให้ผิวเคลือบคงทน และเช็ด
ให้แห้งด้วยผ้าที่สะอาด

ผิวด้านนอกเป็นสแตนเลส ดังนั้นควรใช้ฟองน้ำ
หรือผ้านุ่มๆ และผสมผงซักฟอกกับน้ำอุ่น
เช็ดทำความสะอาด ห้ามใช้สารที่มีฤทธิ์
กัดกร่อนทำความสะอาด จากนั้นใช้ผ้านุ่มๆ
เช็ดให้แห้ง ไม่ควรใช้น้ำยาเคลือบเงา
หรือสารต่างๆ ที่สามารถทำปฏิกิริยากับสแตนเลส
ได้

คำเตือน

ต้องถอดปลั๊กทุกครั้ง และถ้า
ต้องการทำความสะอาดบริเวณใกล้
อุปกรณ์ไฟฟ้า เช่น หลอดไฟ,
สวิตช์, แผงควบคุม อื่นๆ ให้เช็ด
ด้วยผ้า หรือฟองน้ำแห้ง เพื่อ
ป้องกันให้ความชื้น หรือหยดน้ำเข้าไป
ในอุปกรณ์ไฟฟ้า

ห้ามใช้สารไวไฟ หรือของเหลวทำ
ความสะอาดที่มีฤทธิ์เป็น
กรดในการทำทำความสะอาด

- ห้ามใช้น้ำยาเคลือบผิวรถยนต์
หรือ น้ำยาอื่นๆ ที่มีส่วนผสม ของ
น้ำมัน, โซ ลีน, กรด ในการทำ
ความสะอาด
- ใช้น้ำยาล้างจาน หรือน้ำสบู่ในการ
ทำ ความสะอาด
- ไม่ต้องกังวลว่าสัปดาห์จะเปลี่ยน
ถ้าทำ ความสะอาดตาม วิธีที่ได้
กำหนดมา

ข้อมูลทั่วไป

เมื่อไปพักผ่อน

ในระหว่างที่ไปพักผ่อนเป็นเวลาหลายวัน ท่านควรเก็บของที่เป็นน้ำแข็งไว้ในช่องแช่แข็งซึ่งจะทำให้ท่านสามารถเก็บอาหารไว้ได้เป็นเวลานาน เมื่อท่านคิดว่าท่านจะไม่อยู่บ้านเป็นเวลานาน ท่านควรนำอาหารออกทั้งหมด, ถอดปลั๊กไฟ, ทำความสะอาดภายในตู้เย็นให้สะอาดและเปิดประตูทิ้งไว้เพื่อป้องกันการเกิดกลิ่น

ไฟฟ้าดับ

ส่วนมากไฟฟ้าจะกลับคืนมาเป็นปกติภายใน 1 หรือ 2 ชั่วโมงและจะไม่มีผลต่ออุณหภูมิภายในตู้เย็นแต่ท่านก็ไม่ควรเปิดประตูตู้เย็นบ่อยๆ ในระหว่างที่ไฟฟ้าดับเป็นเวลานาน ให้วางก้อนน้ำแข็งแห้งไว้ในช่องแช่แข็ง

หากทำการเคลื่อนย้ายตู้เย็น

นำชิ้นส่วนภายในตู้เย็นออกให้หมดหรือมัดชิ้นส่วนแต่ละชิ้นให้แน่นเพื่อป้องกันสกรูปรับระดับความสูงของตู้เย็นเสียหายให้หมุนสกรูจนสุด


เครื่องใช้ไฟฟ้านี้ สำหรับใช้ภายในครัวเรือน เช่น

- บริเวณห้องครัวในร้านค้า, ออฟฟิศ เป็นต้น
- ตามโรงแรมต่างๆ
- ห้องนอน

ท่อป้องกันไอน้ำจับตัว

บางครั้งผนังด้านนอกตู้เย็นอาจจะร้อนขึ้นโดยเฉพาะอย่างยิ่งเมื่อท่านติดตั้งตู้เย็นในครั้งแรก สิ่งนี้เกิดจากการทำงานของท่อป้องกันไอน้ำจับตัว ซึ่งจะส่งอากาศร้อนเพื่อป้องกัน “ไอน้ำจับตัว” ที่ผนังตู้เย็น

ท่อป้องกันไอน้ำจับตัว

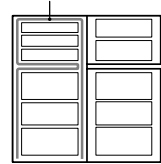

คำเตือน

ไฟฟ้าดูด

ก่อนทำการเปลี่ยนหลอดไฟ สิ่งแรกต้องถอดปลั๊กไฟออกหรือปิดสะพานไฟหรือกล่องฟิวส์

หมายเหตุ : เปลี่ยนตัวควบคุมไปที่ตำแหน่ง OFF จะไม่เป็นการตัดกระแสไฟฟ้า

การเปลี่ยนหลอดไฟ

หมายเหตุ

- ตู้เย็นนี้ใช้หลอดไฟ LED ซึ่งผู้ใช้งานไม่สามารถที่จะเปลี่ยนเองได้ กรุณาติดต่อศูนย์บริการแอลจี หรือ ตัวแทนจำหน่าย

คำเตือนที่สำคัญ

ไม่ควรต่อสายไฟเพิ่ม

ต่อสายไฟของตู้เย็นกับเต้ารับโดยไม่ต่อสายไฟของอุปกรณ์อื่นกับเต้ารับเดียวกันเพื่อป้องกันการใช้ไฟมากเกินไปซึ่งเป็นสาเหตุที่ทำให้ไฟดับ

วางตู้เย็นให้ถอดปลั๊กไฟได้ง่าย

ควรวางตู้เย็นไว้ในสถานที่ที่สามารถถอดปลั๊กไฟได้อย่างรวดเร็วเมื่อเกิดอุบัติเหตุ

การเปลี่ยนสายไฟ

หากสายไฟชำรุด ท่านต้องเปลี่ยนสายไฟหรือซ่อมแซมสายไฟโดยศูนย์บริการหรือช่างผู้ชำนาญเท่านั้นเพื่อป้องกันอันตรายที่อาจเกิดขึ้นได้

ระวังอันตราย


ตู้เย็นที่ไม่ได้บรรจุอาหารไว้อาจเป็นอันตรายต่อเด็กๆ ได้ ถอดยางขอบประตู, สลักประตูหรือถอดทั้งประตูออกเมื่อท่านไม่ใช้งานตู้เย็นเพื่อป้องกันอันตราย ที่อาจเกิดขึ้นได้

เกี่ยวกับสายดิน

ในกรณีที่เกิดไฟฟ้าลัดวงจร สายดินที่ต่อจะช่วยลดกระแสไฟฟ้าโดยส่งกระแสไฟฟ้าปัจจุบันไปยังสายไฟอีกสายหนึ่งเพื่อป้องกันไฟฟ้าช็อต ควรติดตั้งสายดินกับตู้เย็น

การใช้ปลั๊กสายดินไม่ถูกต้องจะทำให้เกิดไฟฟ้าช็อตได้ ควรปรึกษาช่างไฟฟ้าหรือช่างซ่อมถ้าท่านไม่เข้าใจเกี่ยวกับการติดตั้งสายดินหรือถ้าท่านมีปัญหาเกี่ยวกับการติดตั้งสายดินกับตู้เย็นอย่าทำการแก้ไขหรือเพิ่มความยาวสายไฟฟ้า

จะทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้ได้

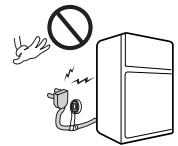

อุปกรณ์นี้ควรติดตั้งสายดิน

ไม่ควรรื้อ ควรติดตั้งเดี๋ยวนี

ไม่ควรเก็บวัตถุที่ติดไฟได้, ระเบิดหรือสารเคมีไว้ในตู้เย็น

คำเตือน

ตู้เย็นนี้ไม่ได้ถูกออกแบบมาเพื่อใช้งานโดยบุคคลทุพพลภาพ, ขาดความรู้ และประสบการณ์ในการใช้งาน (ซึ่งรวมถึงเด็ก) นอกจากได้รับการแนะนำ หรือ การดูแลจากบุคคลที่รับผิดชอบด้านความปลอดภัยของบุคคลนั้นๆ ควรดูแลเด็ก ให้แน่ใจว่า เด็กจะไม่ไปเล่นกับตู้เย็น

การทิ้งตู้เย็นเก่า

ตู้เย็นนี้จะประกอบด้วยของเหลว (สารทำความเย็น, น้ำมันหล่อเย็น) และชิ้นส่วนวัตถุที่ที่สามารถนำกลับมาใช้ใหม่ได้ ส่วนประกอบสำคัญๆ ควรทำการส่งยังศูนย์คัดแยกและนำกลับมาใช้ใหม่หลังจากผ่านกระบวนการรีไซเคิล สำหรับการจัดส่งโปรดติดต่อตัวแทนจำหน่ายในท้องถิ่นของท่าน

ก่อนเรียกศูนย์บริการ

ควรหลีกเลี่ยงที่จะเรียกศูนย์บริการบ่อยๆ
 ถ้าท่านพบว่าตู้เย็นของท่านทำงานไม่ถูกต้อง ท่านควรตรวจสอบสาเหตุที่ทำให้ตู้เย็นทำงานผิดปกติก่อน

ปัญหา	สาเหตุ
ตู้เย็นไม่ทำงาน	● ฟิวส์ของไฟฟ้าบ้านขาดหรือวงจรไฟฟ้าไม่ถูกต้อง ● ไม่ได้เสียบปลั๊กไฟเข้ากับเต้ารับหรือปลั๊กไฟที่เสียบหลวม
อุณหภูมิในช่องแช่เย็นหรือในช่องแช่แข็งเย็นไม่พอ	● ท่านตั้งปุ่มควบคุมอุณหภูมิไว้ในตำแหน่งที่ไม่ถูกต้อง ● ท่านวางตู้เย็นใกล้แหล่งความร้อนหรือใกล้กำแพง ● ท่านเปิดประตูตู้เย็นบ่อย ● ท่านเปิดประตูตู้เย็นทิ้งไว้เป็นเวลานาน ● มีอาหารในช่องแช่เย็นมากเกินไป
มีเสียงรบกวนผิดปกติ	● ตั้งตู้เย็นไว้ในพื้นที่ที่เอียงหรือไม่แข็งแรงหรือปรับระดับความสูงของตู้เย็นไม่ถูกต้อง ● มีช่องว่างไว้ที่ด้านหลังของตู้เย็น
มีกลิ่นเหม็นภายในตู้เย็น	● อาหารที่มีกลิ่นแรงควรห่อให้แน่นหนาหรือเก็บไว้ในภาชนะที่มีฝาปิด ● ตู้เย็นสกปรก ควรทำความสะอาดภายในตู้เย็น
มีหยดน้ำเกาะบนฝาประตูตู้เย็น	● ไม่ปิดประตู ถ้าท่านใช้ตู้เย็นในขณะที่มีความชื้นสูง ● ท่านปิดประตูไม่สนิท



• ข้อมูลเกี่ยวกับสารทำความเย็นของตู้เย็นชนิดนี้

การกำจัดอุปกรณ์เก่าของท่าน

- เมื่อปรากฏเครื่องหมายกากบาทบนถังขยะแบบมีล้อบนผลิตภัณฑ์แสดงถึงผลิตภัณฑ์นั้นอยู่ภายใต้ข้อกำหนด 2002/96/EC ของทวีปยุโรป
- ผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์ควรกำจัดแยกจากขยะที่จัดเก็บโดยเทศบาล โดยผ่านทางตัวแทนของรัฐหรือตัวแทนในท้องถิ่น
- การกำจัดผลิตภัณฑ์เก่าที่ถูกต้องจะช่วยป้องกันผลกระทบต่อสิ่งแวดล้อมและสุขภาพของมนุษย์
- รายละเอียดเพิ่มเติมเกี่ยวกับการกำจัดผลิตภัณฑ์เก่าของท่าน โปรดติดต่อบริษัทในท้องถิ่น ผู้ให้บริการกำจัดขยะหรือร้านตัวแทนจำหน่ายที่ท่านซื้อผลิตภัณฑ์

ก๊าซองค์ประกอบ	ส่วนประกอบของก๊าซ	Total GWP (kg CO ₂ -eq)
R-134a	100% HFC-134a	1300


ยึด (ติดตั้ง) สายดินให้แน่นหนา

เมื่อต่อสายดินไม่แน่นหนา สามารถทำให้เกิดปัญหาหรือไฟฟ้าดูดได้ในกรณีเกิดไฟฟ้ารั่วไหล

เมื่อทำการติดตั้งและใช้ผลิตภัณฑ์ในตำแหน่งดังต่อไปนี้ ท่านต้องต่อสายดินโดยร้องขอจากตัวแทนจำหน่ายของท่าน (มีค่าใช้จ่ายในการต่อสายดิน)

- พื้นที่ที่ไม่ได้มีการปูหรือพื้นมีความชื้น (ห้องที่มีความชื้นและไม่ได้ปูพื้น) เช่นพื้นคอนกรีต เป็นต้น และสถานที่ตั้งที่สามารถมีการรั่วไหลและน้ำหยดสามารถเกิดขึ้นได้ รวมทั้งสถานที่น้ำสามารถหยดใส่ใกล้อ่างล้างจาน, ห้องใต้ดิน เป็นต้น

ต่อสายดินเข้ากับสกรูสายดินที่ด้านหลังของตู้เย็น

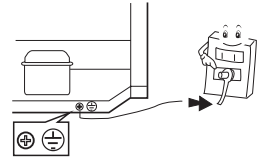

อย่าต่อสายดินในสถานที่ต่อไปนี้

- ท่อน้ำและท่อแก๊สที่อาจเกิดอันตรายได้จากการระเบิดและเพลิงไหม้
- สายดินโทรศัพท์และสายล่อฟ้าซึ่งอันตรายจากกระแสไฟฟ้าแรงสูงในกรณีที่เกิดฟ้าผ่า


เมื่อติดตั้งใกล้กับสถานที่เปียก ท่านจำเป็นต้องติดตั้งเซอร์กิตเบรกเกอร์เพิ่มเติมกับสายดิน ปรีกษาตัวแทนจำหน่ายของท่าน

การต่อสายดิน

แนะนำให้ท่านติดตั้งสายดินเพื่อป้องกันไฟฟ้าดูดในกรณีที่เกิดกระแสไฟฟ้ารั่วไหล

เกี่ยวกับกับเชื่อมต่อ

- ต่อสายดินกับสกรูยึดสายดินที่ด้านหลังตู้เย็น

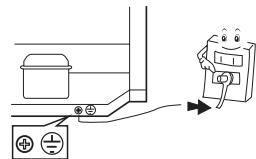

อย่าต่อสายดินกับสถานที่ต่อไปนี้

- ท่อแก๊ส**
สามารถเกิดระเบิดและเพลิงลุกไหม้ได้
- สายดินโทรศัพท์และสายล่อฟ้า**
เกิดอันตรายได้ในขณะเกิดฟ้าผ่า
- ท่อน้ำและก๊อกน้ำ**

สายดินจะไม่ทำงานเมื่อระหว่างท่อน้ำทำด้วยพลาสติก

เมื่อติดตั้งผลิตภัณฑ์ที่มีความชื้นหรือเปียก ท่านต้องติดตั้งสายดิน

- ห้องที่ไม่ได้ปูพื้นหรือชื้น (ห้องที่มีความชื้นและไม่ได้ปูพื้น) พื้นคอนกรีต
 - สถานที่ที่สามารถเปียกได้เช่นใกล้ อ่างล้างจาน
 - สถานที่ที่น้ำสามารถรั่วไหลหรือมีความชื้นเช่น ห้องใต้ดิน
 - สถานที่เปียกหรือมีความชื้น

เฉพาะอย่างยิ่ง สถานที่เปียกตลอดเวลาเช่นใกล้กับอ่างล้างจานในครัวอาคาร ท่านจำเป็นต้องติดตั้งเซอร์กิตเบรกเกอร์เพิ่มเติมกับสายดิน

หลังจากปรึกษากับตัวแทนจำหน่ายหรือบริษัทไฟฟ้า ท่านจำเป็นต้องติดตั้งสายดิน (ชนิด 3) มีค่าใช้จ่ายในการติดตั้งสายดิน