



LG

Life's Good

ไทย
ENGLISH

คู่มือการใช้
User Guide

LG-P880

MFL67864825 (1.0)

www.lg.com

โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการะคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาด ลักลอบนำเข้าสินคารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านการประกัน สินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์ แท้จากทาง LG, หนึ่งขอความพอรอมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้ สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรี เพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุม เฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่นๆ ทั้งนี้ที่โทรศัพท์ของคุณ ได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์ จากบริษัท LG" โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่าจะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบกพร่องจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์



LG-P880 คู่มือการใช้

คู่มือนี้จะช่วยให้คุณเริ่มต้นใช้งานโทรศัพท์ของคุณ

- ข้อมูลบางอย่างในคู่มือเล่มนี้อาจไม่สามารถใช้ได้กับโทรศัพท์ของคุณขึ้นอยู่กับโทรศัพท์ ซอฟต์แวร์ของโทรศัพท์ หรือผู้ให้บริการของคุณ
- โทรศัพท์รุ่นนี้ไม่เหมาะสำหรับผู้พิการทางสายตาเนื่องจากมีแป้นพิมพ์บนหน้าจอสัมผัส
- ลิขสิทธิ์ ©2013 LG Electronics, Inc. สงวนลิขสิทธิ์ LG และโลโก้ LG เป็นเครื่องหมายการค้าจดทะเบียนของ LG Group และหน่วยงานที่เกี่ยวข้องของเครื่องหมายการค้าอื่นๆ ทั้งหมดเป็นสมบัติของเจ้าของนั้นๆ
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ และ Play Store™ เป็นเครื่องหมายการค้าของ Google, Inc.



สารบัญ

คำแนะนำเพื่อความปลอดภัยและการใช้
ใช้งานอย่างมีประสิทธิภาพ.....4

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ.. 10

ส่วนประกอบอุปกรณ์17

ฟังก์ชัน QuickMemo19

การใส่ซิมการ์ดและแบตเตอรี่21

การชาร์จโทรศัพท์22

การใช้การ์ดหน่วยความจำ22

การล็อคและปลดล็อคหน้าจอ.....23

การรักษาความปลอดภัยการล็อคหน้าจอ..24

หน้าจอหลักของคุณ25

เคล็ดลับสำหรับหน้าจอสัมผัส.....25

หน้าหลัก25

การปรับแต่งหน้าจอหลัก26

การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด.26

แถบการแจ้งเตือน.....26

การดูแถบสถานะ.....27

แป้นพิมพ์บนหน้าจอ.....28

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง .28

การตั้งค่าแอคเคาท์ Google29

การเชื่อมต่อกับเครือข่ายและอุปกรณ์.30

Wi-Fi.....30

การเชื่อมต่อกับเครือข่าย Wi-Fi30

บลูทูธ.....30

การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์.....31

การเปลี่ยนชื่อหรือรักษาความปลอดภัย

ของ Portable hotspot.....32

การใช้ SmartShare.....33

การโทร36

การโทรออก.....36

การโทรออกโดยใช้รายชื่อ.....36

การรับสายและการปฏิเสธสายเรียกเข้า. 36

การปรับระดับเสียงสายสนทนา36

การใช้สายที่สอง36

การดูบันทึกการโทร37

ตั้งค่าการโทร37

รายชื่อ.....38

การค้นหารายชื่อ38

การเพิ่มรายชื่อใหม่38

เพื่อนสนิท38

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่39

ข้อความ.....40

การส่งข้อความ40

กล่องเรด40

การเปลี่ยนการตั้งค่าข้อความมัลติมีเดีย .40

อีเมล41

การจัดการแอคเคาท์อีเมล41

การทำงานกับโฟลเดอร์แอคเคาท์41

การเขียนและส่งอีเมล.....41

กล้องถ่ายรูป.....43

ทำความรู้จักกับช่องมองภาพ43

การใช้การตั้งค่าขั้นสูง.....44

การถ่ายภาพตอน45

เมื่อคุณถ่ายภาพแล้ว45

การดูรูปภาพที่บันทึกไว้46

กล้องวิดีโอ	47	การกำหนดเวลาสำรองข้อมูลอัตโนมัติ..	56
ทำความเข้าใจกับช่องมองภาพ	47	การเรียกคืนข้อมูลสมาร์ตโฟน	57
การใช้การตั้งค่าขั้นสูง.....	48	Google+.....	58
การบันทึกวิดีโออย่างรวดเร็ว	48	คนหาด้วยเสียง	58
หลังการบันทึกวิดีโอ.....	48	ดาวน์โหลด.....	58
การดูวิดีโอที่บันทึกไว้.....	49	เว็บไซต์	59
การปรับระดับเสียงขณะดูวิดีโอ	49	อินเทอร์เน็ต	59
มัลติมีเดีย	50	การใช้แถบเครื่องมือเว็บ.....	59
เล่นวิดีโอ.....	50	การใช้ตัวเลือก.....	59
การเล่นวิดีโอ.....	50	Chrome.....	60
คลังภาพ	50	ตั้งค่า	61
เครื่องเล่นเพลง.....	50	ตั้งค่าการเชื่อมต่อ.....	61
ถ่ายโอนเพลงโดยใช้ซิงค์มีเดีย (MTP). ..	51	อุปกรณ์.....	63
การเล่นเพลง	51	ส่วนตัว.....	65
วิทยุ FM.....	52	ระบบ	66
การค้นหาสถานี.....	52	อัปเดตซอฟต์แวร์โทรศัพท์	67
LG SmartWorld	53	DivX HD	68
วิธีการเข้าสู่ LG SmartWorld		LG On-Screen Phone	69
จากโทรศัพท์ของคุณ	53	ไอคอน On-Screen Phone	69
วิธีการใช้ LG SmartWorld	53	คุณสมบัติ On-Screen Phone.....	69
ยูทิลิตี้	54	วิธีติดตั้ง On-Screen Phone	
การตั้งเวลาการปลุก	54	ในคอมพิวเตอร์	69
การใช้เครื่องคิดเลข	54	อุปกรณ์เสริม	70
การเพิ่มเหตุการณ์ลงในปฏิทิน.....	54	การแก้ปัญหา	71
บันทึกเสียง	54		
จัดการแอปฯ	55		
Polaris Office 4	55		
Backup.....	55		
สำรองข้อมูลสมาร์ตโฟน	56		

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์เคลื่อนที่รุ่น LG-P880 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ได้มาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ใช้อยู่
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่น จะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ

- ข้อจำกัด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อของร่างกายที่หนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบ ขณะถือแนบกับหูคือ 0.618 วัตต์/กก. (10 กรัม) และเมื่อพกพาไว้กับตัวคือ 0.594 วัตต์/กก. (10 กรัม)
- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปปิดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้น จนกว่าจะส่งข้อมูลเสร็จสิ้น

การดูแลและการบำรุงรักษา เครื่องโทรศัพท์

คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ
- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพโดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตก
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสัมผัสเข็มนาฬิกาหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับพิเศษห้ามใช้ ตัวอย่าง เช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูดและอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟไหม้ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- อย่าเคาะหน้าจอลดด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟังด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแฉกที่แตก มีรอยแตกหรือร้าว ความเสียหายของหน้าจอกว้างเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาตหรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวหนังโดยตรงเป็นระยะเวลาสั้นโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องอาจได้รับผลจากคลื่นรบกวนใด ทำให้มีผลต่อการทำงาน

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อเป็นต้น
- โทรศัพท์เคลื่อนที่บางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์น วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว

- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย
- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สาย ซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรง เนื่องจากการทำงานผิดพลาดของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจดูว่าระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

หลีกเลี่ยงการทำลายความสามารถในการได้ยิน



เพื่อป้องกันการทำลายความสามารถในการได้ยินที่อาจเกิดขึ้นได้ ห้ามฟังเสียงที่ดังมากเป็นเวลานาน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลานาน ดังนั้น เราขอแนะนำว่า คุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ใน

ระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

หมายเหตุ: แรงดันเสียงที่มากเกินไปจากหูฟัง และชุดหูฟังสามารถทำให้สูญเสียการได้ยินได้

ส่วนที่เป็นแก้ว

บางส่วนของโทรศัพท์ของคุณทำมาจากวัสดุแก้ว ซึ่งส่วนที่เป็นแก้วนี้สามารถแตกได้หากโทรศัพท์ตกลงบนพื้นแข็ง หรือถูกกระแทก หากส่วนที่เป็นแก้วนี้แตก อย่าสัมผัส หรือพยายามดึงออก ให้หยุดใช้โทรศัพท์ จนกว่าส่วนที่เป็นแก้วนี้จะได้รับการเปลี่ยนโดยผู้ให้บริการที่ได้รับการแต่งตั้ง

บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ โปรดปฏิบัติตามข้อห้ามอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง

คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี
- ห้ามชนถ้ำหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่าย หรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ

บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์เมื่อเครื่องบินจอดที่พื้นก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บชิ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำใส่ปาก

การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด
- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันทีเมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายรอบครั้งก่อนที่จะต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรง หรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็น เนื่องจากประ

- สิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้
- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ใช้แล้วโปรดรีไซเคิลเมื่อเป็นไปได้อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนดค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ตะปู สัมผัสกับแบตเตอรี่ซึ่งอาจก่อให้เกิดไฟไหม้ได้

คำประกาศรับรอง

ดังนั้น **LG Electronics** ขอประกาศว่าผลิตภัณฑ์ **LG-P880** เป็นไปตามข้อกำหนดที่จำเป็น และข้อกำหนดที่เกี่ยวข้องอื่นๆ ของ Directive **1999/5/EC** คุณสามารถดูสำเนาของคำประกาศรับรองได้ที่ <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

อุณหภูมิแวดล้อม

สูงสุด: +50°C (คายประจุ)
+45°C (ขณะชาร์จ)
ต่ำสุด: -10°C

หมายเหตุ: ซอฟต์แวร์โอเพ่นซอร์ส

ในการขอรับซอร์สโค้ดที่เกี่ยวข้องตาม GPL, LGPL, MPL และและใบอนุญาตโอเพ่นซอร์สอื่นๆ โปรดไปที่ <http://opensource.lge.com/> เงื่อนไขใบอนุญาต การปฏิเสธการรับผิดชอบและประกาศที่อ้างอิงถึงทั้งหมด สามารถดาวน์โหลดพร้อมกันกับซอร์สโค้ด

ติดต่อสำนักงานสำหรับการปฏิบัติตามข้อกำหนดของผลิตภัณฑ์นี้:

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ


ก่อนเริ่มใช้โทรศัพท์ โปรดอ่านข้อมูลนี้!

โปรดตรวจสอบเพื่อดูว่าปัญหาที่คุณพบในโทรศัพท์ของคุณมีการอธิบายไว้ในส่วนนี้หรือไม่ ก่อนที่จะโทรศัพท์ไปขอรับการบริการหรือติดต่อตัวแทนฝ่ายบริการ

1. หน่วยความจำโทรศัพท์

เมื่อพื้นที่ว่างในหน่วยความจำโทรศัพท์น้อยกว่า 10% โทรศัพท์จะไม่สามารถรับข้อความใหม่ได้ คุณต้องตรวจสอบหน่วยความจำโทรศัพท์และลบข้อมูลบางอย่าง เช่น แอปพลิเคชันหรือข้อความเพื่อเพิ่มพื้นที่ว่างในหน่วยความจำ

การถอนการติดตั้งแอปพลิเคชัน:

- 1 แตะ  > แตะ แอปฯ > ตั้งค่า > แอปฯ จากชนิดอุปกรณ์
- 2 เมื่อแอปพลิเคชันทั้งหมดปรากฏขึ้น ให้เลื่อนและเลือกแอปพลิเคชันที่คุณต้องการยกเลิกการติดตั้ง
- 3 แตะ ถอนการติดตั้ง


2. การยืดอายุแบตเตอรี่

ยืดอายุแบตเตอรี่ระหว่างการชาร์จแต่ละครั้งได้โดยการปิดคุณสมบัติที่คุณไม่ต้องการให้ทำงานอย่างต่อเนื่องในแบ็คกราวด์ คุณสามารถตรวจสอบวิธีการใช้ไฟแบตเตอรี่ของแอปพลิเคชันและทรัพยากรระบบได้

การยืดอายุแบตเตอรี่ของโทรศัพท์:


- ปิดการสื่อสารทางสัญญาณวิทยุที่คุณไม่ใช้ ปิด Wi-Fi, บลูทูธ หรือ GPS หากคุณไม่ได้ใช้งาน
- ลดความสว่างหน้าจอและตั้งค่าเวลาปิดหน้าจอให้สั้นลง
- ปิดการซิงค์อัตโนมัติของ Gmail, ปฏิทิน, รายชื่อ และแอปพลิเคชันอื่นๆ
- แอปพลิเคชันที่คุณดาวน์โหลดบางแอปพลิเคชันอาจลดกำลังไฟแบตเตอรี่

การตรวจสอบระดับกำลังไฟแบตเตอรี่:

- แตะ  > แตะ แอปฯ > ตั้งค่า > เกี่ยวกับโทรศัพท์ จากระบบ > แบตเตอรี่

สถานะแบตเตอรี่
(กำลังชาร์จหรือไม่ชาร์จ)
และระดับแบตเตอรี่
(เปอร์เซ็นต์ที่ชาร์จ)

จะแสดงที่ด้านบนของหน้าจอ
**การตรวจสอบและควบคุมการใช้
กำลังไฟแบตเตอรี่:**

• แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** >
เกี่ยวกับโทรศัพท์ จากระบบ >
แบตเตอรี่ > **การใช้แบตเตอรี่**

เวลาใช้งานของแบตเตอรี่จะแสดงอยู่
ที่ด้านบนของหน้าจอ โดยแสดงระยะ
เวลานับจากที่คุณเชื่อมต่อโทรศัพท์
กับแหล่งจ่ายไฟครั้งสุดท้าย หรือหาก
เชื่อมต่ออยู่ในขณะนี้ จะแสดงระยะ
เวลานับจากที่โทรศัพท์ใช้พลังงาน
จากแบตเตอรี่ครั้งสุดท้าย หน้าจอจะ
แสดงรายการแอปพลิเคชันหรือบริการ
ที่ใช้กำลังไฟแบตเตอรี่ โดยเรียงลำดับ
ตามปริมาณที่ใช้จากมากไปน้อย

3. การใช้โฟลเดอร์

คุณสามารถรวมหลายไอคอนแอป
พลิเคชันไว้ในหนึ่งโฟลเดอร์ได้
วางไอคอนแอปพลิเคชันหนึ่ง
บนอีกไอคอนหนึ่งในหน้าจอหลัก
และไอคอนทั้งสองจะรวมกัน

4. ก่อนการติดตั้งแอปพลิเคชัน และ OS ไอเฟนเซอร์ส

⚠ คำเตือน

หากคุณติดตั้งและใช้ OS อื่นนอกเหนือ
จากของผู้ผลิต อาจทำให้โทรศัพท์ของคุณ
ทำงานผิดปกติได้ นอกจากนี้ โทรศัพท์
ของคุณจะไม่สามารถรับการอัปเดต
ตามการรับประกัน

⚠ คำเตือน

เพื่อปกป้องโทรศัพท์และข้อมูลส่วนตัว
ให้ดาวน์โหลดแอปพลิเคชันเฉพาะจาก
แหล่งที่เชื่อถือได้ เช่น Play Store™
เท่านั้น หากมีการติดตั้งแอปพลิเคชัน
ไม่ถูกต้องในโทรศัพท์ อาจทำงานไม่
ปกติหรือเกิดข้อผิดพลาดร้ายแรง คุณ
ต้องถอนการติดตั้งแอปพลิเคชันเหล่านั้น
และข้อมูลและการตั้งค่าที่เกี่ยวข้อง
ทั้งหมดออกจากโทรศัพท์

5. การใช้แบบปลดล็อค

ตั้งค่าแบบปลดล็อคเพื่อป้องกันโทรศัพท์
 ซึ่งจะเปิดหน้าจอที่แนะนำคุณ
สำหรับวิธีการวาดแบบปลดล็อคหน้า
จอ คุณต้องสร้างแป้นคีย์ PIN เป็น
มาตรการความปลอดภัยหากคุณลืม
ล๊อคแบบ

ข้อควรระวัง: สร้างแอคเคาท์ Google
ก่อนทำการตั้งค่าแบบปลดล็อค และ
จำแป้นคีย์ PIN ที่คุณได้สร้างไว้ขณะกำลัง
สร้างล๊อคแบบ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

คำเตือน

ขอควรระวังเมื่อใช้ล๊อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล๊อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสเพียง 5 ครั้ง ในการป้อนแบบการปลดล๊อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืม รูปแบบ, PIN หรือ รหัสผ่าน การปลดล๊อคของคุณ:

<หากคุณลืมแบบ>

หากคุณล๊อคอินบัญชี Google ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ ที่ด้านล่างของหน้าจอ จากนั้นคุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณหรือคุณต้องป้อนแม่คีย์พิน ที่คุณได้ป้อนไว้ขณะกำลังสร้างล๊อคแบบ

หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมแม่คีย์พิน คุณต้องทำการ Hard Reset

<หากคุณลืม PIN หรือรหัสผ่าน>

หากคุณลืม PIN หรือรหัสผ่าน คุณจำเป็นต้องทำการ Hard Reset **ขอควรระวัง:** หากคุณทำ Hard Reset ข้อมูลแอปพลิเคชันผู้ใช้ และข้อมูลผู้ใช้ทั้งหมดจะถูกลบ

หมายเหตุ: หากคุณไม่ได้ล๊อคอินบัญชี Google และลืมแบบปลดล๊อค คุณต้องป้อนแม่คีย์พิน

6. การใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

หากโทรศัพท์ของคุณไม่สามารถแก้ไขสู่สภาพเดิมได้ให้ใช้ Hard Reset (รีเซ็ตค่าจากโรงงาน)

เพื่อดังค่าเริ่มต้นของโทรศัพท์

- 1 ปิดเครื่อง
- 2 กด **ปุ่มเปิด/ปิด/ล๊อค + ปุ่มลดระดับเสียง** ค้างไว้
- 3 เมื่อโลโก้ LG ปรากฏขึ้น ให้ปล่อยปุ่มทั้งหมด
- 4 หลายวินาทีต่อมา คุณสามารถเลือกฟังก์ชันรีเซ็ตค่าจากโรงงานได้ในเมนูที่ลิตีก็คินระบบ Android
- 5 เลื่อนรายการโดยใช้ปุ่มระดับเสียง และเลือกโดยใช้ **ปุ่มเปิด/ปิด/ล๊อค**

คำเตือน

หากคุณดำเนินการ Hard Reset แอปพลิเคชันของผู้ใช้, ข้อมูลผู้ใช้ และใบอนุญาต DRM ทั้งหมดจะถูกลบ โปรดอย่าลืมสำรองข้อมูลสำคัญไว้ก่อนทำ Hard Reset


7. การเปิดและการสลับแอปพลิเคชัน

มัลติทาสกิ้งเป็นเรื่องง่ายใน Android เนื่องจากคุณสามารถใช้งานมากกว่าหนึ่งแอปพลิเคชันพร้อมกัน โดยไม่จำเป็นต้องปิดแอปพลิเคชันก่อนเปิดแอปพลิเคชันอื่น การใช้และสลับระหว่างแอปพลิเคชันต่างๆ ที่เปิดอยู่ Android จะจัดการแต่ละแอปพลิเคชัน การหยุดและเริ่มต้นตามที่ต้องการ เพื่อให้แอปพลิเคชันที่ไม่ได้ทำงานไม่ใช้ทรัพยากรโดยไม่จำเป็น

การกลับไปดูรายการแอปพลิเคชันที่ใช้ล่าสุด:

เพียงแคกดปุ่ม หน้าหลัก ค้างไว้

การหยุดแอปพลิเคชัน:

- 1 แตะ  > แตะ แอปฯ > ตั้งค่า > แอปฯ > การรัน จากอุปกรณ์
- 2 เลื่อนและแตะแอปพลิเคชันที่ต้องการ และแตะ หยุด เพื่อหยุด

8. การติดตั้ง PC Software (LG PC Suite)

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" เป็นโปรแกรมที่จะช่วยเชื่อมต่ออุปกรณ์ของคุณกับคอมพิวเตอร์ผ่านสายเคเบิลการสื่อสารข้อมูล USB และ Wi-Fi เมื่อเชื่อมต่อแล้ว คุณสามารถใช้ฟังก์ชันของอุปกรณ์ของคุณบนคอมพิวเตอร์ได้

ด้วยแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" คุณจะสามาร...

- จัดการและเล่นเนื้อหาที่มีเดียของคุณ (เพลง ภาพยนตร์ รูปภาพ) บนคอมพิวเตอร์ของคุณ
- ส่งเนื้อหาที่มีเดียไปยังอุปกรณ์ของคุณ
- ซิงโครไนซ์ข้อมูล (กำหนดการ รายชื่อ บุคมารค) ในอุปกรณ์และคอมพิวเตอร์ของคุณ
- สำรองข้อมูลแอปพลิเคชันต่างๆ ในอุปกรณ์ของคุณ
- อัปเดตซอฟต์แวร์ในอุปกรณ์ของคุณ
- สำรองข้อมูลและเรียกคืนอุปกรณ์ของคุณ
- เล่นเนื้อหาที่มีเดียในคอมพิวเตอร์ของคุณจากอุปกรณ์อื่น

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

หมายเหตุ: คุณสามารถใช้เมนู วิธีใช้ จากแอปพลิเคชันเพื่อคนหาวิธีการใช้งานแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" ของคุณได้

การติดตั้งแอปพลิเคชันคอมพิวเตอร์ "LG PC Suite"

แอปพลิเคชันคอมพิวเตอร์ "LG PC Suite" สามารถดาวน์โหลดได้จากเว็บไซต์ของ LG

- 1 ไปที่ www.lg.com และเลือกประเทศที่คุณต้องการ
- 2 ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P880)
- 3 คลิก **PC Sync** จาก ดาวน์โหลด และคลิก **WINDOW PC Sync** ดาวน์โหลด เพื่อดาวน์โหลด "LG PC Suite" PC software

ข้อกำหนดของระบบสำหรับ "LG PC Suite" PC software

- ระบบปฏิบัติการ: Windows XP 32 บิต(Service pack 2), Windows Vista 32 บิต/64 บิต Windows 7 32 บิต/64 บิต
- CPU: โพรเซสเซอร์ 1 GHz หรือสูงกว่า
- หน่วยความจำ: 512 MB RAM หรือสูงกว่า

- กราฟิกการ์ด: ความละเอียดหน้าจอ 1024 x 768 สี 32 บิต หรือสูงกว่า
- HDD: พื้นที่ว่าง 100 MB หรือมากกว่า (อาจต้องใช้พื้นที่ว่างบนฮาร์ดดิสก์มากขึ้น โดยขึ้นอยู่กับปริมาณข้อมูลที่จัดเก็บ)
- ซอฟต์แวร์ที่ต้องการ: ไดรเวอร์ในตัวของ LG, Windows Media Player 10 หรือใหม่กว่า

หมายเหตุ: ไดรเวอร์ USB ในตัวของ LG

จำเป็นต้องใช้ไดรเวอร์ USB ในตัวของ LG ในการเชื่อมต่ออุปกรณ์ LG และคอมพิวเตอร์ และไดรเวอร์จะถูกติดตั้งโดยอัตโนมัติ เมื่อคุณติดตั้ง "LG PC Suite" PC software

9. การซิงโครไนซ์โทรศัพท์ของคุณกับคอมพิวเตอร์

ข้อมูลจากอุปกรณ์และคอมพิวเตอร์สามารถซิงโครไนซ์ได้ง่ายๆ ด้วยแอปพลิเคชัน "LG PC Suite" เพื่อความสะดวกของคุณ สามารถซิงโครไนซ์รายชื่อ กำหนดการ และบุคมาร์คได้ด้วย


ขั้นตอนจะมีดังต่อไปนี้:

- 1 เชื่อมต่อเครื่องของคุณเข้ากับเครื่องคอมพิวเตอร์ของคุณ (ใช้สายเคเบิล USB หรือการเชื่อมต่อ Wi-Fi)


- 2 หลังจากการเชื่อมต่อ ให้เรียกใช้โปรแกรมและเลือกส่วนอุปกรณ์จากประเภททางด้านซ้าย
- 3 คลิก [ข้อมูลส่วนตัว] เพื่อเลือก
- 4 ทำเครื่องหมายที่ช่องเนื้อหาเพื่อซิงโครไนซ์ และคลิกที่ปุ่ม **ซิงค์**

10. การซิงค์โครไนซ์โทรศัพท์กับคอมพิวเตอร์ผ่าน USB


หมายเหตุ: ในการซิงโครไนซ์โทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB คุณต้องติดตั้ง LG PC Suite ในคอมพิวเตอร์โปรดดูหน้าก่อนหน้าสำหรับการติดตั้ง LG PC Suite

- 1 แตะ  > แท็บ แอปฯ > **ตั้งค่า > ที่เก็บข้อมูล** จากอุปกรณ์เพื่อตรวจสอบสื่อที่เก็บข้อมูล (หากคุณต้องการถ่ายโอนไฟล์เข้าสู่หรือออกจากการดาวน์โหลดความจำให้ใส่การ์ดหน่วยความจำลงในโทรศัพท์)
- 2 เชื่อมต่อโทรศัพท์กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 3 รายการโหมดการเชื่อมต่อ USB จะปรากฏขึ้น และเลือกตัวเลือก **ซิงค์มีเดีย (MTP)**
- 4 เปิดไฟล์หน่วยความจำที่ถอดไดบนคอมพิวเตอร์ คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์

- 5 เดอร์ของคุณ และโอนไฟล์
- 5 คัดลอกไฟล์จากคอมพิวเตอร์ไปยังไฟล์เดิร์ฟ
- 6 เลือกตัวเลือก ชาร์จเท่านั้น เพื่อยกเลิกการเชื่อมต่อโทรศัพท์

เคล็ดลับ! ในการใช้การ์ด microSD ในโทรศัพท์อีกครั้ง คุณต้องเปิดแถบการแจ้ง และแตะ  > **ชาร์จเท่านั้น**

การยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์:

เปิดแถบการแจ้ง และแตะ  > **ชาร์จเท่านั้น** เพื่อยกเลิกการเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์อย่างปลอดภัย

11. ถือกโทรศัพท์ตั้งขึ้น

ถือกโทรศัพท์มือถือตั้งเหมือนกับโทรศัพท์ทั่วไป โทรศัพท์ LG-P880 มีเสาอากาศภายใน ระเบิดระงับอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่บริเวณด้านหลังเครื่อง เนื่องจากอาจส่งผลต่อประสิทธิภาพการทำงาน ในขณะที่ทำการโทรออก/รับสายหรือทำการส่ง/รับข้อมูล ให้หลีกเลี่ยงการถือบริเวณส่วนกลางของโทรศัพท์ ซึ่งเป็นตำแหน่งที่มีการติดตั้งเสาอากาศไว้ การทำดังกล่าวส่งผลกับคุณภาพการโทร

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

12. เมื่อนำจอค้าง

หากหน้าจอค้างหรือโทรศัพท์ไม่
ตอบสนองเมื่อคุณพยายามใช้งาน:

ถอดแบตเตอรี่ ใส่กลับเข้าไป
แล้วเปิดโทรศัพท์

หรือ


กดปุ่ม **เปิด/ปิด/ล็อค**

ค้างไว้เป็นเวลา 10 วินาทีเพื่อปิด

หากยังไม่สามารถแก้ไขปัญหาได้

โปรดติดต่อศูนย์บริการ

ส่วนประกอบอุปกรณ์

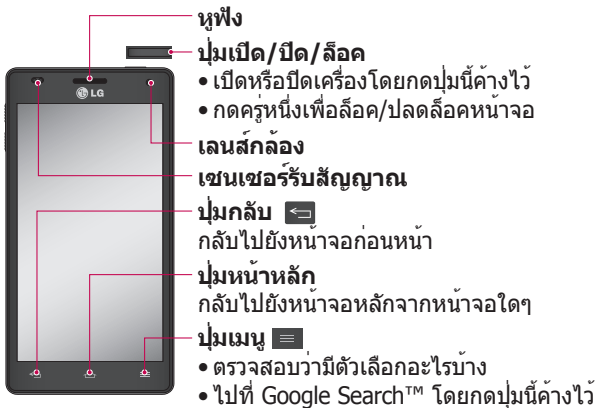

หมายเหตุ: เซนเซอร์รับสัญญาณ

เมื่อรับสายหรือโทรออก เซนเซอร์รับสัญญาณจะปิดไฟหน้าจอโดยอัตโนมัติ และล็อคหน้าจอสัมผัสโดยการรับรู้เมื่อโทรศัพท์ที่อยู่ใกล้หู วิธีนี้จะช่วยยืดอายุการใช้งานแบตเตอรี่ และป้องกันไม่ให้คุณเปิดใช้หน้าจอสัมผัสโดยไม่ได้ตั้งใจขณะโทรศัพท์

⚠ คำเตือน

การวางวัตถุที่มีน้ำหนักมากบนโทรศัพท์หรือการนั่งทับอาจทำให้จอ LCD และการทำงานของหน้าจอสัมผัสเสียหายได้ อย่าปิด เซนเซอร์รับสัญญาณ LCD ด้วยฟิล์มป้องกัน เนื่องจากอาจทำให้เซนเซอร์ทำงานผิดปกติได้

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ปุ่มปรับระดับเสียง

- ในหน้าจอหลัก: ควบคุมระดับเสียงกริ่ง
- ระหว่างการใช้สาย: ควบคุมระดับเสียงหูฟัง
- ขณะเล่นแท็บเล็ต: ควบคุมระดับเสียงต่อเนื่อง

เคล็ดลับ! เมื่อกดปุ่มเพิ่มและลดระดับเสียงพร้อมกัน คุณสามารถใช้ฟังก์ชันคลิกขวาได้

ปุ่มเปิด/ปิด/ล็อค

ช่องเสียบหูฟัง

อุปกรณ์ชาร์จ/พอร์ต USB/พอร์ต MHL



ไมโครโฟน

เลนส์กล้อง

ช่องเสียบซิมการ์ด

ฝาปิดแบตเตอรี่

ช่องใส่การ์ด
microSD


แบตเตอรี่

ลำโพง




ฟังก์ชัน QuickMemo

ใช้ **QuickMemo** เพื่อสร้างบันทึกได้สะดวกและมีประสิทธิภาพด้วยรูปภาพที่บันทึกไว้อหรือบนหน้าจอปัจจุบันของโทรศัพท์

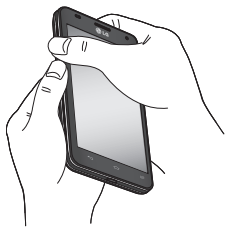

หรือ

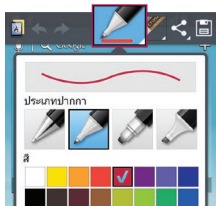

- 1 เข้าสู่หน้าจอฟังก์ชัน QuickMemo โดยการกดปุ่มระดับเสียงขึ้นและลงค้างไว้นิ่งวินาที บนหน้าจอที่คุณต้องการถ่ายภาพ


หรือ

แตะและเลื่อนแถบสถานะลง และแตะ 

- 2 เลือกตัวเลือกเมนูที่ต้องการจากประเภทปากกา, สี, เครื่องลบ และสร้างบันทึก

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ









3แตะ  ในเมนูแก้ไข และเลือกเพื่อจัดเก็บบันทึกพร้อมกับหน้าจอบริเวณ

หมายเหตุ: โปรดใช้ปลายนิ้วขณะใช้ฟังก์ชัน QuickMemo อย่าใช้เล็บ

การใช้ตัวเลือก QuickMemo

คุณสามารถใช้ตัวเลือก QuickMenu ได้อย่างง่ายดายในขณะที่ใช้ฟังก์ชัน QuickMemo

	เลือกที่จะใช้หน้าจภาพพื้นหลังหรือไม่
	เลิกทำหรือทำซ้ำ
	เลือกประเภทปากกาและสี
	ลบบันทึกที่คุณสร้าง
	แตะเพื่อส่งบันทึกให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	จัดเก็บบันทึกพร้อมกับหน้าจอบริเวณใน คลังภาพ

การดู QuickMemo ที่บันทึกไว้

แตะ **คลังภาพ** และเลือกอัลบั้ม QuickMemo


การใส่ซิมการ์ดและแบตเตอรี่

ก่อนที่จะเริ่มสำรวจโทรศัพท์เครื่องใหม่ของคุณ คุณจะต้องตั้งค่าโทรศัพท์ การใส่ซิมการ์ดและแบตเตอรี่:


- 1 ในการถอดฝาปิดแบตเตอรี่ ให้จับโทรศัพท์ไว้อย่างมั่นคงด้วยมือข้างเดียว ใช้มือข้างหนึ่งของคุณ ดึงฝาปิดแบตเตอรี่ออกด้วยนิ้วหัวแม่มือของคุณตามที่แสดงไว้ในภาพ



- 2 เลื่อนซิมการ์ดเข้าไปในช่องเสียบซิมการ์ด โปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองของการดคว่ำลง

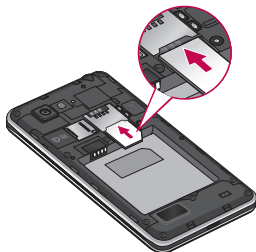

- 3 ใส่แบตเตอรี่ให้เข้าที่โดยวางหน้าสัมผัสสีทองบนโทรศัพท์ให้เป็นแนวเดียวกับแบตเตอรี่ (1) และค่อยๆ กดลงจนกว่าจะแน่นเข้าที่ (2)

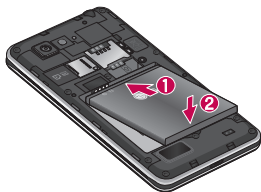

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

- 4 วางฝาปิดแบตเตอรี่บนช่องใส่แบตเตอรี่ (1) และกดลงจนกระทั่งแน่นเข้าที่ (2)



การชาร์จโทรศัพท์

ช่องเสียบอุปกรณ์ชาร์จอยู่ทางด้านล่างของโทรศัพท์ เสียบอุปกรณ์ชาร์จและเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟ




หมายเหตุ


- แบตเตอรี่ต้องชาร์จจนเต็มเมื่อเริ่มต้นใช้งานเพื่อยืดอายุการใช้งานของแบตเตอรี่
- ห้ามเปิดฝาปิดแบตเตอรี่ระหว่างการชาร์จโทรศัพท์

การใช้การ์ดหน่วยความจำ

ในการใส่การ์ดหน่วยความจำ: ใส่การ์ดหน่วยความจำลงในช่องเสียบโปรดตรวจสอบให้แน่ใจว่าหน้าสัมผัสสีทองคว่ำลง

การถอดการ์ดหน่วยความจำอย่างปลอดภัย:

แตะ  > แท็บ แอปฯ > ตั้งค่า > ที่เก็บข้อมูล จากอุปกรณ์ > ยกเลิกการต่อเชื่อมการ์ด SD > ตกลง

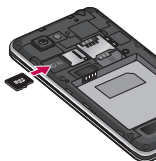


หมายเหตุ: โทรศัพท์ LG-P880
สนับสนุนการดาวน์โหลดความจำสูงสุด
ไม่เกิน 64 GB

คำเตือน

อย่าใส่หรือถอดการ์ดหน่วยความจำ
เมื่อโทรศัพท์ของคุณเปิดอยู่ การทำดัง
กล่าวอาจทำให้การ์ดหน่วยความจำและ
โทรศัพท์ของคุณเสียหายได้ และ
ข้อมูลที่จัดเก็บในการ์ดหน่วยความจำ
อาจเสียหาย

การฟอร์แมตการ์ดหน่วยความจำ:
การดาวน์โหลดความจำของคุณอาจฟอร์
แมตแล้ว หากยังไม่ได้อฟอร์แมต
คุณต้องฟอร์แมตการ์ดหน่วยความจำ
ก่อนจึงจะสามารถใช้งานการดาวน์โหลดได้



หมายเหตุ: ไฟล์ทั้งหมดในการ์ดหน่วย
ความจำจะถูกลบออกเมื่อฟอร์แมต

- 1 บนหน้าจอหลัก ให้แตะ  >
แตะ แอปฯ เพื่อเปิดเมนู
- 2 เลื่อนและแตะ **ตั้งค่า** >
ที่เก็บข้อมูล
- 3 แตะ **ยกเลิกการต่อเชื่อมการ
SD** แล้วแตะ **ตกลง** เพื่อยืนยัน
- 4 แตะ **ลบการ์ด SD** >
ลบการ์ด SD > **ลบทุกสิ่ง**
แล้วยืนยันการเลือกของคุณ

5 หากคุณตั้งค่าล๊อคแบบ ให้ป้อน ขอมูลล๊อคแบบ แล้วเลือก ลบทุกสิ่ง

หมายเหตุ: หากมีข้อมูลอยู่ในการ์ด
หน่วยความจำของคุณ โครงสร้าง
ไฟล์เดสก์ทอปจะแตกต่างไปจากเดิม
ภายหลังการฟอร์แมต เนื่องจากไฟล์
ทั้งหมดถูกลบออก

การล๊อคและปลดล๊อคหน้าจอ

หากคุณไม่ได้ใช้โทรศัพท์ช่วงระยะเวลาหนึ่ง
หน้าจอจะปิดและล๊อคโดยอัตโนมัติ
ซึ่งจะช่วยป้องกันการแตะโดยไม่ตั้งใจ
และประหยัดพลังงานแบตเตอรี่
ในขณะที่คุณไม่ได้ใช้งาน LG-P880
ให้กด **ปุ่มเปิด/ปิด/ล๊อค** 
เพื่อล๊อคโทรศัพท์ของคุณ หากมี
โปรแกรมกำลังเปิดใช้งานอยู่ในขณะ
ที่คุณตั้งค่าหน้าจอล๊อค โปรแกรม
เหล่านั้นอาจจะยังคงทำงานอยู่ใน
โหมดล๊อค ขอแนะนำให้ปิดโปรแกรม
ทั้งหมดก่อนจะเริ่มใช้งานโหมดล๊อค
เพื่อป้องกันการเกิดค่าใช้จ่ายที่ไม่จำเป็น
(เช่น การโทรเข้า/ออก, การเข้า
ใช้เว็บ และการสื่อสารข้อมูล)
ในการทำให้โทรศัพท์ของคุณใช้
งานได้ ให้กด **ปุ่มเปิด/ปิด/ล๊อค**
 หน้าจอล๊อคจะปรากฏ และ


เริ่มทำความรู้จักกับโทรศัพท์ของคุณ

และเลื่อนล๊อคหน้าจอไปในทิศทางใดๆ เพื่อปลดล๊อคหน้าจอหลักของคุณ หน้าจอสุดท้ายที่คุณดูจะเปิดขึ้น

การรักษาความปลอดภัยการล๊อคหน้าจอ

คุณสามารถล๊อคหน้าจอเพื่อให้คุณเพียงคนเดียวที่สามารถปลดล๊อคเพื่อเข้าถึงโทรศัพท์ของคุณได้

การตั้งค่าแบบการปลดล๊อค, PIN หรือรหัสผ่านเป็นครั้งแรก:

- แตะ  > แท็บ แอปฯ > ตั้งค่า > ล็อกหน้าจอ > เลือกแบบล๊อคหน้าจอ > ไม่มี, ลาก, ปลดล๊อคใบหน้า, รูปแบบ, PIN หรือ รหัสผ่าน

หมายเหตุ:

ข้อควรระวังเมื่อใช้ล๊อคแบบ

สิ่งสำคัญคือต้องจำแบบปลดล๊อคที่คุณตั้งไว้ได้ คุณจะไม่สามารถเข้าใช้โทรศัพท์ของคุณได้หากคุณใช้แบบไม่ถูกต้อง 5 ครั้ง คุณมีโอกาสเพียง 5 ครั้ง ในการป้อนแบบการปลดล๊อค PIN หรือรหัสผ่านของคุณ หากคุณทำการป้อนทั้งหมด 5 ครั้งแล้ว คุณสามารถลองใหม่ได้อีกครั้งหลังจากผ่านไป 30 วินาที

ในกรณีที่คุณลืมแบบการปลดล๊อค:

หากคุณลืกกุณินบัญชี Google ในโทรศัพท์แต่ป้อนแบบไม่ถูกต้อง 5 ครั้ง ให้แตะปุ่ม ลืมแบบ จากนั้นคุณจะต้องลงชื่อเข้าใช้ด้วยแอคเคาท์ Google ของคุณเพื่อปลดล๊อคโทรศัพท์หากคุณไม่ได้สร้างแอคเคาท์ Google บนโทรศัพท์ หรือคุณลืมคุณต้องทำการ Hard Reset

หน้าจอหลักของคุณ

เคล็ดลับสำหรับหน้าจอสัมผัส

เคล็ดลับต่อไปนี้เป็นเคล็ดลับเกี่ยวกับวิธีนำเวกิตโทรศัพทของคุณ

แตะ – ในการเลือกเมนู/ตัวเลือกหรือเปิดแอปพลิเคชัน ให้แตะที่เมนู/ตัวเลือกนั้น

แตะค้างไว้ – ในการเปิดเมนูตัวเลือกหรือจับวัตถุที่คุณต้องการย้าย ให้แตะวัตถุที่คุณต้องการย้ายค้างไว้

ลาก – ในการเลื่อนดูรายการหรือเคลื่อนที่ซ้ำๆ ให้ลากผ่านหน้าจอ

ลากนิ้ว – ในการเลื่อนดูรายการหรือเคลื่อนที่อย่างรวดเร็ว ให้รวัดนิ้วผ่านหน้าจอสัมผัส

(ลากอย่างรวดเร็วแล้วปล่อย)

หมายเหตุ:

- ในการเลือกรายการ ให้แตะที่กลางไอคอน
- ไม่ต้องออกแรงกดมาก หน้าจอสัมผัสไวต่อการสัมผัสที่เบาและแน่นอน
- ใช้ปลายนิ้วในการสัมผัสที่ตัวเลือกที่ต้องการ ระวังอย่าแตะโดนปุ่มอื่นๆ

หน้าหลัก


เพียงเลื่อนนิ้วไปทางซ้ายหรือขวาเพื่อดูพาเนล นอกจากนี้ คุณสามารถปรับแต่งพาเนลด้วยแอปฯ, ดาวน์โหลด, Widget และพื้นหลัง


หมายเหตุ: ภาพหน้าจอบางภาพอาจแตกต่างกันตามผู้ให้บริการ

ในหน้าจอหลัก คุณสามารถดูไอคอนเมนูใดก็ตามที่ด้านกลางหน้าจอ ไอคอนเมนูจะทำให้สามารถเข้าใช้งานฟังก์ชันที่ซับซ้อนได้อย่างง่ายดายด้วยการกดเพียงปุ่มเดียว

 **แตะไอคอน โทรศัพท์** เพื่อแสดงปุ่มหมายเลขแบบสัมผัสสำหรับใช้โทรออก

 **แตะไอคอน รายชื่อ** เพื่อเปิดรายชื่อ

 **แตะไอคอน ข้อความ** เพื่อเข้าใช้เมนูข้อความ นี่คือที่ซึ่งคุณสามารถสร้างข้อความใหม่ได้


 **แตะไอคอน แอปฯ** ที่ด้านล่างของหน้าจอ คุณสามารถดูแอปพลิเคชันที่ติดตั้งทั้งหมดได้ในการเปิดแอปพลิเคชัน เพียงแตะไอคอนในรายการแอปพลิเคชัน

หน้าจอหลักของคุณ


การปรับแต่งหน้าจอหลัก

คุณสามารถปรับแต่งหน้าจอหลักของคุณโดยเพิ่มแอปฯ, ดาวน์โหลด, Widget หรือพื้นหลัง เพื่อให้ใช้โทรศัพท์ได้สะดวกยิ่งขึ้น ให้เพิ่มแอปฯ และ Widget ที่ใช้อยู่ในหน้าจอหลัก

การเพิ่มรายการในหน้าจอหลัก:

- 1 แตะค้างไว้บนส่วนที่ว่างของหน้าจอหลัก หรือแตะ  ที่ด้านบนขวา
- 2 ในเมนู โหมดเพิ่ม ให้เลือกรายการที่คุณต้องการเพิ่ม จากนั้นคุณจะได้เห็นรายการที่เพิ่มบนหน้าจอหลัก
- 3 ลากไปยังตำแหน่งที่คุณต้องการแล้วปล่อยนิ้ว

การลบรายการจากหน้าจอหลัก:

- หน้าจอหลัก > แตะที่ไอคอนที่ต้องการลบค้างไว้ > ลากไปยัง 

เคล็ดลับ! ในการเพิ่มไอคอนแอปพลิเคชันในหน้าจอหลัก จากเมนูแอปฯ ให้แตะค้างไว้ที่แอปพลิเคชันที่คุณต้องการเพิ่ม



การกลับไปแอปพลิเคชันที่เพิ่งใช้ล่าสุด

- 1 แตะปุ่ม **โฮม** ค้างไว้ หน้าจอจะแสดงป๊อปอัพโดยมีไอคอนของแอปพลิเคชันที่คุณเพิ่งใช้ล่าสุด
- 2 แตะไอคอนเพื่อเปิดแอปพลิเคชันหรือแตะปุ่ม **ย้อนกลับ** เพื่อกลับไปแอปพลิเคชันปัจจุบันของคุณ

แถบการแจ้งเตือน

แถบการแจ้งเตือนอยู่ด้านบนสุดของหน้าจอ



แตะและเลื่อนแถบการแจ้งเตือนด้วยนิ้วมือ แตะ  >  เพื่อจัดการการแจ้งเตือน ที่นี้คุณสามารถตรวจสอบและจัดการโปรไฟล์เสียง, Wi-Fi, บลูทูธ, แอคเคาท์และการซิงค์, โหมดเครื่องบิน, หมุนจออัตโนมัติ, เปิดใช้ข้อมูล, GPS หรือ Portable Wi-fi Hotspot

การดูแถบสถานะ

แถบสถานะใช้ไอคอนต่างๆ เพื่อแสดงข้อมูลโทรศัพท์ เช่น ความแรงของสัญญาณ, ข้อความใหม่, อยุ่แบตเตอรี่, บลูทูธที่ใช้งาน และการเชื่อมต่อข้อมูล



ตารางด้านล่างนี้จะอธิบายถึงความหมายของไอคอนต่างๆ ที่ปรากฏบนแถบสถานะ

ไอคอน	รายละเอียด
	ไม่มีซิมการ์ด
	ไม่มีสัญญาณ
	โหมดเครื่องบิน
	เชื่อมต่อกับเครือข่าย Wi-Fi
	ชุดหูฟังแบบใช้สาย
	กำลังใช้สาย
	พักสาย
	ลำโพง
	ปิดโมโครโฟนโทรศัพท์

ไอคอน	รายละเอียด
	สายไม่ได้รับ
	เปิดบลูทูธ
	ค่าเตือนระบบ
	ดึงปลุก
	ข้อความเสียงใหม่
	ปิดเสียงเรียกเข้า
	เปิด NFC แล้ว
	โหมดคลื่น
	ชาร์จแบตเตอรี่เต็มแล้ว
	กำลังชาร์จแบตเตอรี่
	โทรศัพท์เชื่อมต่อกับคอมพิวเตอร์ผ่านสาย USB
	กำลังดาวน์โหลดข้อมูล
	กำลังอัปโหลดข้อมูล
	กำลังรับสัญญาณ GPS
	กำลังรับข้อมูลตำแหน่งจาก GPS


หน้าจอหลักของคุณ



	รายละเอียด
	กำลังซิงค์ข้อมูล
	Gmail ใหม่
	ข้อความ Google Talk ใหม่
	ข้อความใหม่
	กำลังเล่นเพลง
	เปิดวิทยุ FM ในแบ็คกราวด์
	กำลังใช้งานการปล่อยสัญญาณผ่าน USB
	กำลังใช้งาน Portable Wi-Fi hotspot
	กำลังใช้งานทั้งการปล่อยสัญญาณผ่าน USB และ Portable hotspot

แป้นพิมพ์บนหน้าจอ


คุณสามารถป้อนข้อความด้วยแป้นพิมพ์บนหน้าจอได้ แป้นพิมพ์บนหน้าจอจะปรากฏบนหน้าจอโดยอัตโนมัติเมื่อคุณจำเป็นต้องป้อนข้อความในการทำให้แป้นพิมพ์ปรากฏขึ้นด้วยตนเอง เพียงแตะที่ลัดข้อความที่คุณต้องการป้อนข้อความ

การใช้ปุ่มกด และ การป้อนข้อความ

 แตะหนึ่งครั้งเพื่อเปลี่ยนตัวอักษรถัดไปที่คุณพิมพ์เป็นตัวพิมพ์ใหญ่ แตะสองครั้งเพื่อเปลี่ยนทุกตัวเป็นตัวพิมพ์ใหญ่

 และ  แตะเพื่อสลับเป็นแป้นพิมพ์ตัวเลขและสัญลักษณ์ คุณสามารถแตะที่ปุ่มนี้ค้างไว้เพื่อดูเมนูตั้งค่าได้

 แตะเพื่อเว้นวรรค

 แตะเพื่อขึ้นบรรทัดใหม่ในฟิลด์ข้อความ

 แตะเพื่อลบตัวอักษรก่อนหน้า

การป้อนตัวอักษรที่ใช้สำหรับเน้นเสียง

เมื่อคุณเลือกภาษาฝรั่งเศสหรือสเปนเป็นภาษาที่ใช้ป้อนข้อความ คุณสามารถป้อนตัวอักษรพิเศษของภาษาฝรั่งเศสหรือสเปนได้ (เช่น "á") ตัวอย่างเช่น ในการป้อน "á" ให้แตะปุ่ม "a" ค้างไว้จนกว่าปุ่มซึมเข้าจะขยายใหญ่ขึ้นและแสดงตัวอักษรจากภาษาอื่นๆ แล้วเลือกตัวอักษรพิเศษที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google

เมื่อคุณเปิดโทรศัพท์เป็นครั้งแรก คุณจะมีโอกาสเปิดการใช้เครือข่ายเพื่อลงชื่อเข้าใช้แอคเคาท์ Google และเลือกวิธีการใช้บริการ Google ที่คุณต้องการ

การตั้งค่าแอคเคาท์ Google ของคุณ:

- ลงชื่อเข้าใช้แอคเคาท์ Google จากหน้าจอตั้งค่าที่แสดง

หรือ

- แตะ  > แตะ **แอปฯ** > เลือกแอปพลิเคชัน Google เช่น **Gmail** > เลือก **ใหม่** เพื่อสร้างแอคเคาท์ใหม่

หากคุณมีแอคเคาท์ Google ให้แตะ **ที่มีอยู่** ป้อนอีเมลแอดเดรสและรหัสผ่านของคุณ จากนั้นแตะ

ลงชื่อเข้าใช้

เมื่อคุณตั้งค่าแอคเคาท์ Google บนโทรศัพท์ โทรศัพท์ของคุณจะซิงโครไนซ์กับแอคเคาท์ Google บนเว็บโดยอัตโนมัติ

รายชื่อ, ข้อความ Gmail, เหตุการณ์ในปฏิทินของคุณ และข้อมูลอื่นๆ จากแอปพลิเคชันเหล่านี้และบริการบนเว็บจะซิงโครไนซ์กับโทรศัพท์ของคุณ (ขึ้นอยู่กับ การตั้งค่าการซิงโครไนซ์ของคุณ)

หลังจากใช้นั้น คุณจะสามารถใช้ Gmail™ และใช้ประโยชน์จากบริการต่างๆ ของ Google บนโทรศัพท์ของคุณ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

Wi-Fi


ด้วย Wi-Fi คุณสามารถใช้การเข้าถึงอินเทอร์เน็ตความเร็วสูงภายในพื้นที่ครอบคลุมของจุดเชื่อมต่อไร้สาย (AP) สนุกสนานกับอินเทอร์เน็ตไร้สายโดยใช้ Wi-Fi ที่ไม่มีค่าบริการเพิ่มเติม

การเชื่อมต่อกับเครือข่าย Wi-Fi

ในการใช้ Wi-Fi ในโทรศัพท์ คุณจำเป็นต้องเข้าใช้จุดเชื่อมต่อไร้สาย หรือ "ฮอตสปอต" จุดเชื่อมต่อบางจุดเป็นแบบเปิดและคุณเชื่อมต่อได้ทันทีจุดอื่นๆ เป็นแบบซ่อนหรือใช้คุณสมบัติระบบป้องกัน คุณต้องกำหนดค่าโทรศัพท์เพื่อทำการเชื่อมต่อ Wi-Fi เมื่อคุณไม่ได้ใช้เพื่อยืดอายุแบตเตอรี่

หมายเหตุ: ถ้าคุณอยู่นอกพื้นที่ Wi-Fi หรือตั้งค่า Wi-Fi เป็น ปิด อาจมีการคิดค่าใช้จ่ายเพิ่มเติมโดยผู้ให้บริการเครือข่ายโทรศัพท์เคลื่อนที่สำหรับการใช้งานข้อมูลโทรศัพท์เคลื่อนที่

การเปิด Wi-Fi และการเชื่อมต่อกับเครือข่าย Wi-Fi

- 1 แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > **Wi-Fi** จาก ตั้งค่าการเชื่อมต่อ
- 2 ตั้งค่า **Wi-Fi** เป็น **เปิด** เพื่อเปิดและเริ่มต้นค้นหาเครือข่าย Wi-Fi ที่มีอยู่

- 3 แตะเมนู Wi-Fi อีกครั้งเพื่อดูรายการของเครือข่าย Wi-Fi ที่ใช้งานและที่อยู่ในระยะ

- เครือข่ายที่มีการป้องกันจะระบุด้วยไอคอนแม่กุญแจ

- 4 แตะที่เครือข่ายเพื่อเชื่อมต่อ

- หากเครือข่ายมีการป้องกัน คุณจะได้รับแจ้งให้อนรหัสผ่านหรือรหัสเฉพาะอื่นๆ (ติดต่อผู้ดูแลระบบเครือข่ายสำหรับรายละเอียด)


- 5 ภายหลังจากเชื่อมต่อกับเครือข่าย Wi-Fi แถบสถานะจะแสดงไอคอนที่ระบุสถานะของ Wi-Fi

บลูทูธ


คุณสามารถใช้บลูทูธเพื่อส่งข้อมูลโดยการเรียกใช้แอปพลิเคชันที่เกี่ยวข้องของเหมือนในโทรศัพท์มือถือรุ่นอื่นๆ ส่วนใหญ่

เคล็ดลับ! ด้วย LG-P880 คุณสามารถสนุกสนานกับบลูทูธความเร็วสูงได้ หากอุปกรณ์ที่คุณต้องการแบ่งปันไฟล์สนับสนุนบลูทูธความเร็วสูงด้วย ไฟล์จะถูกส่งผ่านเครือข่ายความเร็วสูงโดยอัตโนมัติ ในการส่งข้อมูลด้วยบลูทูธความเร็วสูง ก่อนใช้โปรดตรวจดูว่า Wi-Fi เป็น ปิด แล้วในอุปกรณ์ของคุณ การตั้งค่าบลูทูธความเร็วสูงอาจแตกต่างกันขึ้นอยู่กับอุปกรณ์ โปรดตรวจสอบการตั้งค่าของอุปกรณ์กับผู้ให้บริการ

การเปิดบลูทูธและการจับคู่โทรศัพท์ของคุณกับอุปกรณ์บลูทูธ
คุณต้องจับคู่อุปกรณ์ของคุณกับอุปกรณ์อื่นก่อนที่จะเชื่อมต่อกับอุปกรณ์นั้น

- 1** แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > **ตั้งค่า บลูทูธ** เป็น **เปิด** จากตั้งค่าการเชื่อมต่อ
 - 2** แตะเมนู **บลูทูธ** อีกครั้ง โทรศัพท์ของคุณจะสแกนหาและแสดง ID ของอุปกรณ์บลูทูธที่อยู่ในช่วงสัญญาณทั้งหมด ถ้าอุปกรณ์ที่คุณต้องการจับคู่ไม่อยู่ในรายการ ให้ตรวจสอบว่าอุปกรณ์เป้าหมายได้รับการตั้งค่าให้สามารถค้นหาได้ แล้วแตะ **ค้นหาอุปกรณ์** อีกครั้ง
 - 3** เลือกอุปกรณ์ที่คุณต้องการจับคู่ด้วยจากรายการ
- เมื่อจับคู่สำเร็จแล้ว อุปกรณ์ของคุณจะเชื่อมต่อกับอุปกรณ์นั้น

การส่งรูปภาพโดยใช้บลูทูธ

- 1** เลือก **รูปภาพ** >  > **บลูทูธ**
- 2** ตรวจสอบว่า **บลูทูธ** เป็น **เปิด** แล้วเลือก **ค้นหาอุปกรณ์**
- 3** เลือกอุปกรณ์ที่คุณต้องการส่งข้อมูลจากรายการ

การแบ่งปันการเชื่อมต่อข้อมูลในโทรศัพท์

การปล่อยสัญญาณผ่าน USB และ Portable Wi-Fi hotspot เป็นคุณสมบัติที่ยอดเยี่ยมในกรณีที่ไม่มี การเชื่อมต่อไร้สายให้ใช้งาน คุณสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับคอมพิวเตอร์เครื่องเดียวผ่านสายเคเบิล USB (การปล่อยสัญญาณผ่าน USB) คุณยังสามารถแบ่งปันการเชื่อมต่อข้อมูลของโทรศัพท์กับอุปกรณ์มากกว่าหนึ่งเครื่องพร้อมกัน ด้วยการเปลี่ยนโทรศัพท์ของคุณเป็น Portable Wi-Fi hotspot ขณะที่โทรศัพท์กำลังแบ่งปันการเชื่อมต่อข้อมูล ไอคอนจะปรากฏขึ้นที่แถบสถานะ และแสดงเป็นการแจ้งเตือนในการแจ้งเตือน

สำหรับข้อมูลล่าสุดเกี่ยวกับการแชร์และซอดสเปดเคลื่อนที่ รวมถึงระบบปฏิบัติการที่รองรับและรายละเอียดอื่น ให้ไปที่ <http://www.android.com/tether>

การเปลี่ยนการตั้งค่า Portable Wi-Fi hotspot:

- แตะ  > แท็บ **แอปฯ** > **ตั้งค่า** > **เพิ่มเติม** จากตั้งค่าการเชื่อมต่อ > **Portable Wi-Fi Hotspot** > เลือกตัวเลือกที่คุณต้องการปรับ

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

เคล็ดลับ!

หากคอมพิวเตอร์ของคุณใช้งาน Windows 7 หรือระบบปฏิบัติการที่อยู่ในกลุ่ม Linux รุ่นใหม่ๆ (เช่น Ubuntu) โดยปกติแล้วคุณจะไม่จำเป็นต้องเตรียมคอมพิวเตอร์ของคุณสำหรับการแชร์ แต่ถ้ายกเว้นการใช้งาน Windows เวอร์ชันก่อนหน้า หรือระบบปฏิบัติการอื่น คุณอาจจำเป็นต้องเตรียมการเครื่องคอมพิวเตอร์ของคุณสำหรับการเชื่อมต่อเครือข่ายด้วย USB สำหรับข้อมูลล่าสุดเกี่ยวกับระบบปฏิบัติการที่สนับสนุนการปล่อยสัญญาณผ่าน USB และวิธีการปรับแต่ง โปรดไปที่ <http://www.android.com/tether>

การเปลี่ยนชื่อหรือรักษาความปลอดภัยของ Portable hotspot

คุณสามารถเปลี่ยนชื่อเครือข่าย Wi-Fi (SSID) ของโทรศัพท์ของคุณ รวมทั้งรักษาความปลอดภัยของเครือข่าย Wi-Fi ได้

- 1 บนหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > ตั้งค่า
- 2 แตะ เพิ่มเติม จากตั้งค่าการเชื่อมต่อ และเลือก **Portable Wi-Fi Hotspot**
- 3 ตรวจสอบให้แน่ใจว่าเลือก **Portable Wi-Fi Hotspot** ไว้แล้ว

4 แตะ ตั้งค่า Wi-Fi Hotspot

- กลองโต้ตอบ **ตั้งค่า Wi-Fi Hotspot** จะเปิดขึ้น
- คุณสามารถเปลี่ยน SSID (ชื่อ) ของเครือข่าย ที่จะปรากฏให้คอมพิวเตอร์เครื่องอื่นๆ เห็นเมื่อทำการสแกนหาเครือข่าย Wi-Fi
- นอกจากนี้ยังสามารถแตะเมนู **ระบบป้องกัน** เพื่อกำหนดค่าเครือข่ายด้วยระบบป้องกัน Wi-Fi Protected Access 2 (WPA2) โดยใช้ Pre-Shared Key (PSK)
- หากคุณแตะที่ตัวเลือกระบบป้องกัน **WPA2 PSK** ฟิลด์รหัสผ่านจะถูกเพิ่มลงในกล่องโต้ตอบ **ตั้งค่า Wi-Fi Hotspot** ถ้าคุณป้อนรหัสผ่านไว้ คุณจะต้องป้อนรหัสผ่านดังกล่าวเมื่อทำการเชื่อมต่อ hotspot ของโทรศัพท์กับคอมพิวเตอร์หรืออุปกรณ์อื่น คุณสามารถตั้งค่า **เปิด** ในเมนู **ระบบป้องกัน** เพื่อลบระบบป้องกันออกจากเครือข่าย Wi-Fi ของคุณ

5 แตะ บันทึก

ข้อควรระวัง!

หากคุณตั้งค่าตัวเลือกระบบป้องกันเป็นเปิด คุณจะไม่สามารถป้องกันการใช้อินเทอร์เน็ตโดยไม่ได้รับอนุญาตของบุคคลอื่นและอาจมีค่าใช้จ่ายเพิ่มเติม คุณควรเปิดใช้งานตัวเลือกระบบป้องกันเสมอ เพื่อหลีกเลี่ยงการใช้โดยไม่ได้รับอนุญาต

การใช้ SmartShare

SmartShare ใช้เทคโนโลยี DLNA (Digital Living Network Alliance) เพื่อแบ่งปันเนื้อหาดิจิทัลผ่านเครือข่าย Wi-Fi

อุปกรณ์ทั้งสองเครื่องต้องผ่านการรับรอง DLNA ในการสนับสนุนคุณสมบัตินี้

การเปิด SmartShare และอนุญาตให้แบ่งปันเนื้อหา

- 1 แตะ  > แท็บ **แอปฯ > SmartShare**
 - 2 กด  และเลือก **ตั้งค่า**
 - 3 แตะช่องทำเครื่องหมาย ค้นหาได้ เพื่อปิด
- แตะ **รับค่าขอเสมอ** เพื่อเปิด หากคุณต้องการยอมรับค่าขอแบ่งปันจากอุปกรณ์โดยอัตโนมัติ
 - แตะ **รับไฟล์** เพื่อเปิด หากคุณต้องการอนุญาตให้อุปกรณ์อื่นอัปโหลด

ไฟล์ไปยังโทรศัพท์ของคุณได้โดยอัตโนมัติ

- 4 ในส่วนแบ่งปันเนื้อหา ให้แตะเพื่อเลือกประเภทของเนื้อหาที่คุณต้องการแบ่งปัน เลือกจาก **รูปภาพ, วิดีโอ และ เพลง**
- 5 **SmartShare** ใช้งานแล้ว และพร้อมแบ่งปันเนื้อหา

การแบ่งปันเนื้อหาจากไลบรารีเนื้อหาระยะไกลกับอุปกรณ์อื่นให้อุปกรณ์แสดงผลของคุณ (เช่นทีวี) เล่นเนื้อหามัลติมีเดียจากไลบรารีเนื้อหาระยะไกลของคุณ (เช่น คอมพิวเตอร์)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าฟังก์ชัน DLNA ในอุปกรณ์ของคุณ (เช่น ทีวีและคอมพิวเตอร์) อย่างถูกต้องแล้ว

- 1 แตะปุ่มบนขวาหรือเลือกอุปกรณ์จากรายการอุปกรณ์แสดงผล
- 2 แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
- 3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4 แตะภาพขนาดเล็กของเนื้อหาหรือกดปุ่ม **เมนู** และเลือกปุ่ม **เล่น**

การเชื่อมต่อกับเครือข่ายและอุปกรณ์

การแบ่งปันเนื้อหาจากโทรศัพท์ของคุณกับอุปกรณ์แสดงผลของคุณ (เช่น โทรี)

หมายเหตุ: ตรวจสอบให้แน่ใจว่าตั้งค่าอุปกรณ์แสดงผลของคุณอย่างถูกต้องแล้ว

- 1 ขณะเรียกดูรูปภาพหรือวิดีโอโดยใช้แอปพลิเคชัน **คลังภาพ** ให้แตะ  ค้างไว้เพื่อเลือกหลายไฟล์ จากนั้นคุณสามารถเลือกไฟล์หลายไฟล์เพื่อแบ่งปันได้
- 2 แตะ **แบ่งปัน บนเมนู และเลือก SmartShare**
- 3 **SmartShare** จะเริ่มทำงานโดยอัตโนมัติด้วยไฟล์ที่เลือก
- 4 เลือกอุปกรณ์จากรายการอุปกรณ์แสดงผลเพื่อเล่นไฟล์

หมายเหตุ: ทำตามขั้นตอนเดียวกันนี้เพื่อใช้เครื่องเล่นเพลง กล้องถ่ายรูป และเครื่องเล่นวิดีโอเพื่อแบ่งปันเนื้อหา

หมายเหตุ: ตรวจสอบว่าอุปกรณ์ของคุณเชื่อมต่อกับเครือข่ายที่บ้านแล้วโดยใช้การเชื่อมต่อ Wi-Fi เพื่อใช้แอปพลิเคชันนี้ อุปกรณ์ DLNA บางประเภท (เช่น โทรี) สนับสนุนคุณสมบัติ DMP ของ DLNA เท่านั้น และจะไม่ปรากฏในรายการอุปกรณ์แสดงผล อุปกรณ์ของคุณอาจไม่สามารถเล่นเนื้อหาบางประเภทได้

การดาวน์โหลดเนื้อหาจากไลบรารีเนื้อหาระยะไกล

- 1 แตะ  > **แท็บ แอปฯ > SmartShare**
- 2 แตะปุ่มบนซ้ายและเลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกล
- 3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4 แตะค้างที่ภาพขนาดเล็กของเนื้อหา แล้วแตะ **ปุ่มเมนูดาวน์โหลด**

หมายเหตุ: ไม่สนับสนุนเนื้อหาบางประเภท

การอัปโหลดเนื้อหาจากโทรศัพท์ของคุณไปยังไลบรารีเนื้อหาระยะไกล





หมายเหตุ: ตรวจสอบว่าใส่การ์ด SD ถูกต้อง และเลือกรับไฟล์ในเมนูตั้งค่าแล้ว

- 1 แตะ  > **แท็บ แอปฯ > SmartShare**
- 2 แตะปุ่มบนซ้ายและเลือกโทรศัพท์ของคุณ
- 3 คุณสามารถเรียกดูไลบรารีเนื้อหาได้
- 4 แตะภาพขนาดเล็กของเนื้อหาค้างไว้ แล้วแตะ **ปุ่มเมนูอัปโหลด**
- 5 เลือกอุปกรณ์ของไลบรารีเนื้อหาระยะไกลที่จะอัปโหลด


หมายเหตุ: อุปกรณ์ที่ใช้ DLNA บางประเภทไม่สนับสนุนฟังก์ชันอัปโหลด DMS และจะไม่มีการอัปโหลด ไม่สนับสนุนเนื้อหาบางประเภท

การโทร


การโทรออก

- 1 แตะ  เพื่อเปิดปุ่มกด
- 2 ป้อนหมายเลขโดยใช้ปุ่มกดในการลบตัวเลข ให้แตะ 
- 3 แตะ  เพื่อโทรออก
- 4 ในตารางสาย ให้แตะไอคอนสิ้นสุด 



เคล็ดลับ!

ในการป้อน "+" เพื่อโทรออกต่างประเทศ ให้แตะค้างไว้ที่ 

การโทรออกโดยใช้รายชื่อ

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 เลื่อนดูรายชื่อหรือป้อนอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรโดยแตะ **คนหารายชื่อ**
- 3 ในรายชื่อ ให้แตะรายชื่อที่คุณต้องการโทรออก

การรับสายและการปฏิเสธสายเรียกเขา

เมื่อคุณได้รับสายเรียกเข้าในสถานะล็อก ให้แตะค้างไว้และเลื่อน  เพื่อรับสายเรียกเรียกเขา แตะค้างไว้และเลื่อน  เพื่อปฏิเสธสายเรียกเขา




แต่ค้างไว้และเลื่อนไอคอน **ขอความช่วยเหลือ** จากด้านล่างหากคุณต้องการส่ง



เคล็ดลับ! ปฏิเสธพร้อมส่งข้อความ คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ ในกรณีที่คุณต้องการปฏิเสธการรับสายพร้อมส่งข้อความ ในระหว่างการประชุม

การปรับระดับเสียงสายสนทนา

หากต้องการปรับระดับเสียงระหว่างการใส่สาย ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงทางด้านซ้ายของโทรศัพท์



การใช้สายที่สอง

- 1 ในระหว่างการโทรสายแรก ให้แตะ **เมนู > เพิ่มสาย** และหมุนหมายเลข นอกจากนี้ คุณสามารถไปที่รายการที่โทรล่าสุดได้โดยแตะ  หรือสามารถคนหารายชื่อได้โดยแตะ  และเลือกหมายเลขที่คุณต้องการโทร
- 2 แตะ  เพื่อโทรออก
- 3 สายสนทนาทั้งสองสายจะแสดงอยู่ในหน้าจอการโทร สายสนทนาแรกจะล็อกและพักสายไว้

- 4 แตะหมายเลขที่แสดงเพื่อสลับสไลด์ หรือแตะที่  **รวมสาย** เพื่อทำการประชุมสาย
- 5 ในการวางสายที่ใช้ ให้แตะ **สิ้นสุด** หรือกดปุ่มหน้าจอหลัก และเลื่อนแถบการแจ้งเตือน และเลือกไอคอน **วางสาย** 

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายในการโทรออกแต่ละสายด้วย

การดูบันทึกการโทร


บนหน้าจอหลัก ให้แตะ  และเลือกแท็บ **บันทึกการโทร** 
ดูรายการสายที่โทรออก, ได้รับ และไม่ได้รับทั้งหมด

เคล็ดลับ! แตะที่รายการบันทึกการโทรใดๆ เพื่อดูวันที่, เวลา และระยะเวลาในการโทร

เคล็ดลับ! กดปุ่ม **เมนู** จากนั้นแตะ **ลบทั้งหมด** เพื่อลบรายการที่บันทึกไว้ทั้งหมด

ตั้งค่าการโทร

คุณสามารถกำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

- 1 บนหน้าจอหลัก ให้แตะ 
- 2 แตะเมนู

รายชื่อ



เพิ่มรายชื่อในโทรศัพท์และซิงโครไนซ์กับรายชื่อในแอคเคาท์ Google หรือแอคเคาท์อื่นที่สนับสนุนการซิงโครไนซ์รายชื่อ

การค้นหารายชื่อ

ในหน้าจอหลัก

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะ ค้นหารายชื่อ และป้อนชื่อผู้ติดต่อโดยใช้คีย์บอร์ด

การเพิ่มรายชื่อใหม่

- 1 แตะ  ป้อนหมายเลขของรายชื่อใหม่ แล้วกดปุ่ม เมนู แตะ เพิ่มในรายชื่อ > สร้างรายชื่อใหม่
- 2 หากคุณต้องการเพิ่มรูปภาพให้กับรายชื่อใหม่ ให้แตะพื้นที่ภาพเลือกจาก ถ่ายภาพ หรือเลือกจากแกลเลอรี
- 3 เลือกประเภทรายชื่อโดยแตะ 
- 4 แตะชนิดของข้อมูลรายชื่อ และป้อนรายละเอียดเกี่ยวกับรายชื่อ
- 5 แตะ บันทึก



เพื่อนสนิท

คุณสามารถแยกผู้ติดต่อที่โทรหาบ่อยๆ ไว้ในกลุ่มรายการโปรด

การเพิ่มรายชื่อเป็นเพื่อนสนิท

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะที่รายชื่อเพื่อดูรายละเอียด
- 3 แตะดาวทางด้านขวาของชื่อดาวจะมีหลายสี

การลบรายชื่อออกจากรายชื่อเพื่อนสนิท

- 1 แตะ  เพื่อเปิด รายชื่อ
- 2 แตะแท็บ  เลือกรายการโปรดที่ด้านบนสุดของรายการ แล้วเลือกรายชื่อที่ต้องการดูรายละเอียด
- 3 แตะที่ดาวหลายสีทางด้านขวาของชื่อ ดาวจะเปลี่ยนเป็นสีเทา และรายชื่อจะถูกลบออกจากรายชื่อเพื่อนสนิท

การย้ายรายชื่อจากอุปกรณ์เก่าไปยังอุปกรณ์ใหม่

เลือกซ์ปอร์ตรายชื่อของคุณเป็นไฟล์ CSV จากอุปกรณ์เก่าไปยังคอมพิวเตอร์โดยใช้โปรแกรม PC Sync

- 1 ติดต่อ "LG PC Suite" ในคอมพิวเตอร์ก่อน เรียกใช้โปรแกรมและเชื่อมต่อโทรศัพท์ของคุณกับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 ที่เมนูบนสุด เลือก **Device > Import to device > Import contacts**
- 3 หน้าต่างป๊อปอัปเพื่อเลือกประเภทไฟล์และไฟล์ที่จะอิมพอร์ตจะปรากฏขึ้น
- 4 บนป๊อปอัป คลิก **Select a file** แล้ว Windows Explorer จะปรากฏขึ้น
- 5 เลือกไฟล์รายชื่อที่จะอิมพอร์ตใน Windows Explorer แล้วคลิก **Open**
- 6 คลิก **OK**
- 7 ป๊อปอัป **Field mapping** เพื่อลิงค์รายชื่อในอุปกรณ์ของคุณและข้อมูลรายชื่อใหม่จะปรากฏขึ้น
- 8 หากมีการขัดแย้งระหว่างข้อมูลในรายชื่อ PC และรายชื่ออุปกรณ์



ให้ทำการเลือกหรือแก้ไขที่จำเป็นใน LG PC Suite

9 คลิก **OK**


ข้อความ

โทรศัพท์ LG-P880 ของคุณ
ได้ผสมผสาน SMS และ MMS
ไว้ในเมนูที่ใช้งานเพียงเมนูเดียว

การส่งข้อความ

- 1 แตะ  บนหน้าจอหลักและแตะ  เพื่อเปิดข้อความเปล่า
- 2 ป้อนรายชื่อหรือหมายเลขของรายชื่อในฟิลด์ ถึง ไป ขณะที่คุณป้อนรายชื่อ รายชื่อที่ตรงกันจะปรากฏขึ้น คุณสามารถแตะผู้รับที่แนะนำได้ คุณสามารถเพิ่มรายชื่อหลายรายการได้

หมายเหตุ: คุณจะต้องเสียค่าใช้จ่ายสำหรับข้อความตัวอักษรในการส่งข้อความให้กับผู้รับทุกคน

- 3 แตะฟิลด์ป้อนข้อความและเริ่มต้นเขียนข้อความ
- 4 แตะ  เพื่อเปิดเมนูตัวเลือก เลือก **เพิ่มชื่อเรื่อง, ข้อความด่วน, แทรกสмайล์ และ ยกเลิก**
- 5 แตะที่ **ส่ง** เพื่อส่งข้อความ
- 6 หน้าจอจะเปิดขึ้น พร้อมมีชื่อ/หมายเลขผู้รับตามด้วยข้อความการตอบกลับปรากฏบนหน้าจอ ขณะที่คุณดูและส่งข้อความเพิ่มเติม เธรดข้อความจะถูกสร้างขึ้น

คำเตือน: การจำกัดตัวอักษรที่ 160 ตัวอักษรอาจจะแตกต่างกันไปในแต่ละประเทศขึ้นอยู่กับภาษาและวิธีการเข้ารหัส SMS

คำเตือน: หากมีการใส่รูปภาพ, วิดีโอ หรือไฟล์เสียงลงในข้อความ SMS ข้อความดังกล่าวจะถูกแปลงเป็นข้อความ MMS โดยอัตโนมัติ ซึ่งคุณจะเสียค่าใช้จ่ายตามนั้น

กล่องเธรด

ข้อความ (SMS, MMS) ที่แลกเปลี่ยนกับบุคคลอื่นสามารถแสดงเรียงตามลำดับเวลาเพื่อให้คุณสามารถดูภาพรวมของการสนทนาได้อย่างสะดวก

การเปลี่ยนการตั้งค่าข้อความ มีลติมีเดีย

การตั้งค่าข้อความของโทรศัพท์ LG-P880 จะได้รับการกำหนดค่าไว้ล่วงหน้าแล้ว ดังนั้น คุณสามารถส่งข้อความได้ทันที คุณสามารถเปลี่ยนการตั้งค่าโดยอิงตามความต้องการของคุณ



อีเมล

คุณสามารถใช้แอปพลิเคชัน อีเมล เพื่ออ่านอีเมลจากบริการอื่นๆ นอกเหนือจาก Gmail ได้ แอปพลิเคชัน อีเมลรองรับประเภทแอคเคาท์ต่อไปนี้: POP3, IMAP และ Exchange ผู้ให้บริการหรือผู้ดูแลระบบของคุณ สามารถให้การตั้งค่าแอคเคาท์ที่คุณต้องการได้

การจัดการแอคเคาท์อีเมล

เมื่อเปิดแอปพลิเคชัน อีเมล เป็นครั้งแรก วิศวกรตั้งค่าจะเปิดขึ้น เพื่อช่วยเหลือคุณในการตั้งค่าแอคเคาท์อีเมล

การเพิ่มแอคเคาท์อีเมลอื่น:



- **แตะ**  > **แท็บ แอปฯ** > **อีเมล** > ในหน้าจอแอคเคาท์ ให้แตะ  > **เพิ่มแอคเคาท์**

หลังจากการตั้งค่าครั้งแรก อีเมล จะแสดงเนื้อหาต่างๆ ในแถบเข้าของคุณ ถ้าคุณเพิ่มแอคเคาท์มากกว่าหนึ่งแอคเคาท์ คุณสามารถสลับไปมาระหว่างแอคเคาท์เหล่านั้นได้

การเปลี่ยนการตั้งค่าของแอคเคาท์อีเมล:

- **แตะ**  > **แท็บ แอปฯ** > **อีเมล** > ในหน้าจอแอคเคาท์ ให้แตะ  > **การตั้งค่าทั้งหมด**

การลบแอคเคาท์อีเมล:



- **แตะ**  > **แท็บ แอปฯ** > **อีเมล** > ในหน้าจอแอคเคาท์ ให้แตะ  > **ลบแอคเคาท์** > **แตะที่แอคเคาท์** ที่คุณต้องการลบ > **ลบ**

การทำงานกับโฟลเดอร์แอคเคาท์

แต่ละแอคเคาท์ประกอบด้วยโฟลเดอร์ ภายเข้า, ภายออก, ส่งแล้ว และ ร่าง ทั้งนี้คุณอาจมีโฟลเดอร์อื่นนอกเหนือจากนี้ ขึ้นอยู่กับคุณสมบัติที่ผู้ให้บริการแอคเคาท์ของคุณสนับสนุน

การเขียนและส่งอีเมล

การเขียนและส่งข้อความ

- 1** ในขณะที่อยู่ในแอปพลิเคชัน อีเมล ให้แตะ 
- 2** ป้อนแอตเตรสของผู้รับที่ต้องการส่งข้อความ เมื่อคุณป้อนตัวอักษรแอตเตรสที่ตรงกันจากรายชื่อของคุณจะแสดงขึ้น คั่นแอตเตรสแต่ละแอคเคาท์ด้วยเครื่องหมายอัฒภาค
- 3** เพิ่ม Cc/Bcc และเพิ่มไฟล์ สิ่งที่แนบ หากต้องการ
- 4** ป้อนตัวอักษรในข้อความ
- 5** **แตะ**  หากคุณไม่ได้เชื่อมต่อกับเครือข่าย ตัวอย่างเช่น หากคุณกำลังใช้งานในโหมดเครื่องบิน ข้อความที่คุณต้องการ

อีเมล

ส่งจะถูกเก็บในโฟลเดอร์ ถาดออก
จนกว่าจะเชื่อมต่อกับเครือข่าย
อีกครั้ง หากมีข้อความที่กำลัง
รอส่งอยู่ ถาดออก จะปรากฏบน
หน้าจอแอดเดสส์

เคล็ดลับ! เมื่อถาดเข้ามีอีเมลใหม่เข้ามา คุณจะได้รับแจ้งด้วยเสียงพร้อมการสั่น และที่การแจ้งอีเมลเพื่อหยุดการแจ้ง

กล้องถ่ายรูป

ในการเปิดแอปพลิเคชันกล้องถ่ายรูป ให้แตะ **กล้องถ่ายรูป**  บนหน้าจอหลัก
ทำความรู้จักกับช่องมองภาพ











- 1 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ซีสซ์เทเตอร์ – ในการถ่ายภาพ ให้พูดหนึ่งในคำต่อไปนี้: ซีส สไมล์ วิสกี กิมจิ หรือแอลจี
- 3 Time catch shot – แตะไอคอนนี้เพื่อถ่ายภาพช่วงเวลาที่ยาวยิ่งขึ้นก่อนการกดชัตเตอร์
- 4 โหมดชัต – เลือกจาก ปกติ, HDR, พาโนรามา หรือ ชัตต่อเนื่อง
- 5 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า โปรดดูที่ การตั้งค่าการตั้งค่าขั้นสูง
- 6 โหมดวิดีโอ – แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดวิดีโอ
- 7 การถ่ายภาพ
- 8 คลังภาพ – แตะเพื่อดูภาพถ่ายล่าสุดที่คุณถ่าย คุณสามารถเข้าดูคลังภาพและภาพถ่ายที่บันทึกไว้ขณะอยู่ในโหมดกล้องถ่ายรูป






หมายเหตุ: โปรดตรวจสอบให้แน่ใจว่าได้ทำความสะอาดเลนส์กล้องถ่ายรูปก่อนถ่ายภาพ

กล้องถ่ายรูป



การใช้การตั้งค่าขั้นสูง

ในช่องมองภาพ ให้แตะ  เพื่อเปิดตัวเลือกขั้นสูง คุณสามารถเปลี่ยนการตั้งค่ากล้องถ่ายรูปได้โดยเลื่อนรายการ หลังจากเลือกตัวเลือก ให้แตะปุ่ม **ย้อนกลับ**

	แตะหากคุณต้องการเปลี่ยนเมนูช่องมองภาพ
	ให้คุณเปิดแฟลชเมื่อถ่ายภาพในสภาพแวดล้อมที่มืด
	ซูมเข้าหรือออก
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าในรูป
	โฟกัสเฉพาะจุด
	เลือกความละเอียดภาพถ่าย หากคุณเลือกความละเอียดสูง ขนาดไฟล์จะเพิ่มขึ้น ซึ่งหมายความว่า你可以สามารถจัดเก็บภาพถ่ายในหน่วยความจำได้น้อยลง
	ค้นหาการตั้งค่าสีและแสงสว่างที่เหมาะสมกับสภาพแวดล้อมในปัจจุบัน

	ISO กำหนดความไวของเซ็นเซอร์แสงในกล้อง ISO ที่มากขึ้น ความไวของกล้องก็มากขึ้นเท่านั้น ซึ่งจะเป็นประโยชน์สำหรับสภาพแวดล้อมที่มืดในขณะที่คุณไม่สามารถใช้แฟลชได้
	ปรับปรุงคุณภาพสีในสภาวะแสงที่แตกต่างกัน
	ใช้เอฟเฟกต์งานศิลปะกับรูปภาพของคุณ
	ตั้งเวลาหลังจากกดปุ่มถ่ายภาพ ซึ่งเป็นวิธีการที่ช่วยให้คุณถ่ายรูปตนเองได้
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์ ถ่ายภาพในที่ที่ต้องการและแท็กรูปภาพด้วยตำแหน่งที่ถ่ายภาพ หากคุณอัปโหลดรูปภาพที่แท็กไปยังบล็อกที่สนับสนุนแท็กตำแหน่ง คุณจะเห็นรูปภาพนั้นแสดงบนแผนที่


หมายเหตุ: ฟังก์ชันนี้จะใช้ได้เมื่อเปิดใช้งานฟังก์ชัน GPS เท่านั้น

	เลือกเสียงชัตเตอร์
	แสดงรูปภาพที่คุณบันทึกล่าสุดโดยอัตโนมัติ
	เลือกที่เก็บข้อมูลเพื่อบันทึกรูป
	เรียกคืนการตั้งค่าเริ่มต้นของกล้องถ่ายรูป
	แตะที่นี่เมื่อคุณต้องการทราบว่าฟังก์ชันทำงานอย่างไร ไอคอนนี้จะให้คำแนะนำกับคุณอย่างรวดเร็ว


เคล็ดลับ!

- เมื่อคุณออกจากกล้อง การตั้งค่าบางส่วนจะกลับสู่ค่าเริ่มต้น เช่น ความสมดุลแสง เอฟเฟกต์สี ตัวตั้งเวลา และโหมดภาพ ตรวจสอบค่าเหล่านี้ก่อนที่คุณจะถ่ายภาพครั้งถัดไป
- เมนูการตั้งค่าจะซ่อนหัวข้อบนของมุมมองภาพ ดังนั้นเมื่อคุณเปลี่ยนสีภาพถ่ายหรือองค์ประกอบของภาพ คุณจะเห็นภาพตัวอย่างของภาพที่เปลี่ยนแปลงอยู่ด้านหลังเมนูตั้งค่า

การถ่ายภาพด่วน

- 1 เปิดแอปฟลิคชัน **กล้องถ่ายรูป**
- 2 ถู้อโทรศัพท์ในแนวนอน แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายภาพ
- 3 ขยับโฟกัสจะปรากฏขึ้นที่กลางหน้าจอของมุมมองภาพ คุณสามารถแตะตำแหน่งใดก็ได้บนหน้าจอเพื่อโฟกัสจุดนั้นนั้น
- 4 เมื่อช่องโฟกัสเป็นสีเขียว แสดงว่ากล้องได้จับโฟกัสที่วัตถุแล้ว
- 5 แตะ  เพื่อถ่ายภาพ

เมื่อคุณถ่ายภาพแล้ว

ภาพที่คุณถ่ายจะปรากฏบนหน้าจอ หากตั้งค่ารีวิวอัตโนมัติเป็นเปิด (โปรดดูที่การใช้การตั้งค่าขั้นสูง) แตะ  เพื่อดูภาพสุดท้ายที่คุณถ่าย

	แตะเพื่อแบ่งปันภาพถ่ายด้วยฟังก์ชัน SmartShare
	แตะเพื่อถ่ายภาพอื่นทันที
	แตะเพื่อส่งภาพถ่ายให้กับผู้อื่น หรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบรูป

กล้องถ่ายรูป

เคล็ดลับ! หากคุณมีแอคเคาท์ SNS และตั้งค่าบนโทรศัพท์ของคุณ คุณสามารถแบ่งปันภาพถ่ายของคุณกับชุมชน SNS ได้

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

แตะปุ่มเมนู  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

ตั้งค่าภาพเป็น – แตะเพื่อใช้ภาพถ่ายเป็น **ภาพของรายชื่อติดต่อ, ภาพหน้าจอหลัก** หรือ **ภาพล็อคหน้าจอ**

ย้าย – แตะเพื่อย้ายรูปไปยังตำแหน่งอื่น

คัดลอก – แตะเพื่อคัดลอกภาพถ่ายที่เลือก และบันทึกลงในอัลบั้มอื่น

แก้ไข – แตะเพื่อแก้ไขชื่อของภาพถ่ายที่เลือก

หมุนซ้าย/ขวา – หมุนไปทางซ้ายหรือขวา


ตัดภาพ – ตัดภาพถ่ายของคุณ เลื่อนนิ้วของคุณบนหน้าจอเพื่อเลือกพื้นที่ที่จะตัดภาพ

แก้ไข – ดูและแก้ไขรูปภาพ

สไลด์โชว์ – แสดงภาพของคุณในโฟลเดอร์ปัจจุบันที่ละภาพ

รายละเอียด – ดูข้อมูลเพิ่มเติมเกี่ยวกับเนื้อหาเหล่านั้น


การดูรูปภาพที่บันทึกไว้

คุณสามารถเข้าดูรูปภาพที่บันทึกไว้เมื่ออยู่ภายในโหมดกล้องถ่ายรูปได้ เพียงแตะ **ไอคอนคลังภาพ**  และคลังภาพของคุณจะปรากฏขึ้น

- ในการดูภาพถ่ายเพิ่มเติม ให้เลื่อนไปทางซ้ายหรือขวา
- ในการซูมเข้าหรือออก ให้แตะหน้าจอสองครั้งหรือวางนิ้วสองนิ้ว และเลื่อนออกจากกัน (เลื่อนนิ้วเข้าหากันเพื่อซูมออก)

กล้องวิดีโอ

ทำความรู้จักกับช่องมองภาพ

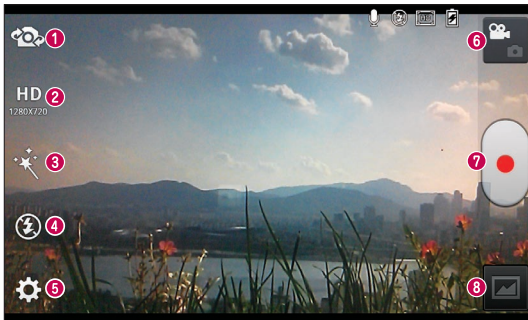

- 1 สลับกล้อง – สลับไปมาระหว่างเลนส์กล้องถ่ายรูปที่ด้านหลังและเลนส์กล้องถ่ายรูปที่ด้านหน้า
- 2 ขนาดวิดีโอ – แตะเพื่อตั้งค่าขนาด (พิกเซล) ของวิดีโอที่คุณจะบันทึก
- 3 Live effect – Live effect มีเอฟเฟกต์ที่มองเห็นได้เมื่อถ่ายวิดีโอ
- 4 แฟลช – ให้คุณเปิดแฟลชเมื่อบันทึกวิดีโอในสภาพแวดล้อมที่มืด
- 5 ตั้งค่า – แตะที่ไอคอนนี้เพื่อเปิดเมนูการตั้งค่า
- 6 โหมดกล้องถ่ายรูป – แตะที่ไอคอนนี้เพื่อสลับไปยังโหมดกล้องถ่ายรูป
- 7 เริ่มการบันทึก
- 8 คลังภาพ – แตะเพื่อดูวิดีโอล่าสุดที่คุณบันทึก คุณสามารถเข้าดูคลังภาพและวิดีโอของคุณที่บันทึกไว้ขณะอยู่ในโหมดวิดีโอ



เคล็ดลับ!

เมื่อบันทึกวิดีโอ ให้วางนิ้วสองนิ้วบนหน้าจอและเลื่อนเข้าหากันเพื่อใช้ฟังก์ชันซูม



กล่องวิดีโอ

การใช้การตั้งค่าขั้นสูง

ใช้ช่องมองภาพ แล้วแตะ  เพื่อเปิดตัวเลือกขั้นสูงทั้งหมด

	แตะหากคุณต้องการเปลี่ยนเมนูช่องมองภาพ
	ซูมเข้าหรือซูมออก
	กำหนดและควบคุมปริมาณแสงแดดที่เข้าสู่วิดีโอ
	ปรับปรุงคุณภาพสีในสถานะแสงที่แตกต่างกัน
	เลือกโทนสีเพื่อใช้กับมุมมองใหม่
	เปิดฟังก์ชันนี้เพื่อใช้บริการตามพื้นที่ของโทรศัพท์
	เลือก ปิด เพื่อบันทึกวิดีโอโดยไม่มีเสียง
	รีวิวดัต โนมัดสิ่งที่คุณบันทึกล่าสุดโดยดัต โนมัด
	เลือกที่เก็บข้อมูลเพื่อบันทึกวิดีโอ
	เรียกคืนการตั้งค่าเริ่มต้นของกล่องถ่ายวิดีโอ
	แตะที่นี่หากคุณต้องการทราบว่าฟังก์ชันนี้ทำงานอย่างไร ไอคอนนี้จะให้คำแนะนำกับคุณอย่างรวดเร็ว

การบันทึกวิดีโออย่างรวดเร็ว

- 1 เปิดแอปพลิเคชัน กล้องถ่ายรูป และแตะปุ่ม โหมดวิดีโอ
- 2 ช่องมองภาพของกล่องวิดีโอจะปรากฏขึ้นบนหน้าจอ
- 3 ถือโทรศัพท์ แล้วหันเลนส์ไปทางวัตถุที่ต้องการถ่ายวิดีโอ
- 4 แตะ  หนึ่งครั้งเพื่อเริ่มบันทึก
- 5 ไฟสีแดงจะปรากฏที่มุมด้านซ้ายบนของช่องมองภาพ พร้อมทั้งดัตตั้งเวลาเพื่อแสดงระยะเวลาของวิดีโอ
- 6 แตะที่  บนหน้าจอเพื่อหยุดการบันทึก

หลังการบันทึกวิดีโอ


ภาพนิ่งที่แสดงวิดีโอของคุณจะปรากฏบนหน้าจอหากดัตการรีวิวดัต โนมัดเป็นเปิด

 เพื่อดูวิดีโอล่าสุดที่คุณบันทึก

	แตะเพื่อแบ่งปันวิดีโอของคุณด้วยฟังก์ชัน SmartShare
	แตะเพื่อบันทึกวิดีโออื่นต่อทันที
	แตะเพื่อส่งวิดีโอให้กับผู้อื่นหรือแบ่งปันผ่านบริการเครือข่ายสังคม
	แตะเพื่อลบรูป

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อดาวน์โหลดข้อความ MMS ขณะโรมมิ่ง

การดูวิดีโอที่บันทึกไว้

- 1 ในช่องมองภาพ ให้แตะ 
- 2 คลังภาพของคุณจะปรากฏบนหน้าจอ
- 3 แตะวิดีโอเพื่อเล่นโดยอัตโนมัติ


การปรับระดับเสียงขณะดูวิดีโอ

ในการปรับระดับเสียงของวิดีโอขณะเล่น ให้ใช้ปุ่มปรับระดับเสียงที่ด้านซ้ายมือ ของหน้าจอ


มัลติมีเดีย

คุณสามารถจัดเก็บไฟล์มัลติมีเดียลงในการดหน่วยความจำเพื่อเข้าถึงไฟล์มัลติมีเดียทั้งหมดได้อย่างง่ายดาย



เล่นวิดีโอ

โทรศัพท์ LG-P880 มีเครื่องเล่นวิดีโอภายในตัวที่ให้คุณสามารถเล่นวิดีโอที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะ  > แท็บ แอปฯ > เล่นวิดีโอ

การเล่นวิดีโอ

- 1 บนหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > เล่นวิดีโอ
- 2 เลือกวิดีโอที่คุณต้องการเล่น

	แตะเพื่อหยุดเล่นวิดีโอชั่วคราว
	แตะเพื่อเล่นวิดีโอต่อ
	แตะเพื่อเดินหน้าไป 10 วินาที
	แตะเพื่อถอยหลังไป 10 วินาที
	แตะเพื่อจัดการระดับเสียงของวิดีโอ
	แตะเพื่อตั้งค่าเอฟเฟกต์เสียง Dolby เมื่อเชื่อมต่อกับช่องเสียบชุดหูฟัง


	แตะไอคอนระบบควบคุมความเร็วและลากแถบแสดงความคืบหน้าเพื่อควบคุมความเร็วการเล่น
	แตะไอคอนเฟรมฟรีวีวและลากที่จับของแถบค้นหาเพื่อดูคอนเทนต์ของจอฟรีวีว
	แตะเพื่อล็อกหน้าจอวิดีโอ
	แตะไอคอนขับไตเติลรายการโดยตรงเพื่อดูรายการวิดีโอ

หากต้องการเปลี่ยนระดับเสียงในขณะที่ดูวิดีโอ ให้ใช้ปุ่มปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์แตะเพลงหนึ่งในรายการเพลงค้างไว้ จะปรากฏตัวเลือก **ลบ** และ **รายละเอียด**

คลังภาพ

แตะ  > แท็บ แอปฯ > **คลังภาพ** เปิดรายการของแถบแคตตาล็อกที่คุณเก็บไฟล์มัลติมีเดียทั้งหมดได้


เครื่องเล่นเพลง





โทรศัพท์ LG-P880 มีเครื่องเล่นเพลงภายในตัวที่ให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้ในการเข้าใช้งานเครื่องเล่นเพลงให้แตะ  > แท็บ แอปฯ > **เล่นเพลง**









ถ่ายโอนเพลงโดยใช้ซิงค์มีเดีย (MTP)

- 1 เชื่อมต่อโทรศัพท์ LG-P880 กับคอมพิวเตอร์โดยใช้สายเคเบิล USB
- 2 หากคุณไม่ได้ทำการติดตั้งไดรเวอร์แพลตฟอร์ม LG Android ในคอมพิวเตอร์ของคุณ คุณต้องเปลี่ยนการตั้งค่าด้วยตัวเอง เลือกลง > การเชื่อมต่อ PC > ชนิดเชื่อมต่อการ USB แล้วเลือก ซิงค์มีเดีย (MTP)
- 3 คุณสามารถดูเนื้อหาในที่เก็บข้อมูลบนคอมพิวเตอร์ของคุณและโอนไฟล์

การเล่นเพลง

- 1 บนหน้าจอหลัก ให้แตะ  > แอปฯ > เล่นเพลง
- 2 แตะ เพลง
- 3 เลือกเพลงที่คุณต้องการเล่น

	แตะเพื่อค้นหาไฟล์ด้วย YouTube
	แตะเพื่อแบ่งปันเพลงของคุณผ่านฟังก์ชัน SmartShare
	แตะเพื่อตั้งค่าโหมดสลับเปลี่ยน
	แตะเพื่อตั้งค่าโหมดซ้ำ

	แตะเพื่อจัดการระดับเสียงของเพลง
	แตะเพื่อหยุดการเล่นชั่วคราว
	แตะเพื่อเล่นต่อ
	แตะเพื่อข้ามไปยังเพลงถัดไปในอัลบั้ม หรือในรายการเพลง
	แตะเพื่อย้อนไปยังช่วงเริ่มต้นของเพลงนั้น และสองครั้งเพื่อกลับไปยังเพลงก่อนหน้า
	แตะเพื่อตั้งเป็นรายการโปรด
	แตะเพื่อดูรายการเพลงปัจจุบัน
	แตะเพื่อตั้งค่าเอฟเฟกต์เสียง Dolby ขณะเชื่อมต่อ กับแจ็คหูฟัง

หากต้องการเปลี่ยนระดับเสียงในขณะที่ฟังเพลง ให้ไข่มุมปรับระดับเสียงขึ้นและลงที่อยู่ด้านข้างซ้ายของโทรศัพท์ แตะเพลงหนึ่งในรายการเพลงค้างไว้ ตัวเลือก เล่น, เพิ่มในรายการเพลง, แบ่งปัน, ตั้งค่าเป็นเสียงเรียกเข้า, ลบ, รายละเอียด และ ค้นหา จะปรากฏขึ้น

มัลติมีเดีย

หมายเหตุ: ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ

ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้สิทธิ์ในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อห้ามในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเองก่อนดาวน์โหลดหรือคัดลอกไฟล์ ให้ตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

วิทยุ FM

โทรศัพท์ LG-P880 มีคุณสมบัติวิทยุ FM ในตัว ดังนั้น คุณสามารถค้นหาสถานีที่คุณชื่นชอบและรับฟังวิทยุได้ตลอดเวลา

หมายเหตุ: คุณต้องใช้หูฟังเพื่อรับฟังวิทยุ เสียบหูฟังเข้าในช่องเสียบหูฟัง

การค้นหาสถานี

คุณสามารถใช้โทรศัพท์ของคุณค้นหาสถานีวิทยุใด โดยการค้นหาด้วยตนเองหรือค้นหาอัตโนมัติ สถานีเหล่านั้นจะถูกบันทึกไว้ในหมายเลขของสถานีที่ระบุไว้ ดังนั้น คุณจึงไม่จำเป็นต้องค้นหาอีกครั้ง

การปรับตั้งอัตโนมัติ

- 1 บนหน้าจอหลัก ให้แตะ  > แท็บ **แอปฯ** > **วิทยุ FM**
- 2 แตะ  จากนั้นเลือก **สแกน**
- 3 ระหว่างการสแกนอัตโนมัติ แตะ **ยกเลิก** หากคุณต้องการหยุดการสแกน โดยจะบันทึกเฉพาะช่องสถานีที่สแกนพบก่อนหยุดการสแกนเท่านั้น

หมายเหตุ: คุณยังสามารถค้นหาสถานีด้วยตนเองได้ด้วยการใช้ปุ่มหมุนบนหน้าจอ

เคล็ดลับ! ในการเพิ่มประสิทธิภาพการรับสัญญาณวิทยุ ให้ยึดสายชุดหูฟังซึ่งทำหน้าที่เป็นเสาอากาศวิทยุ หากคุณเชื่อมต่อชุดหูฟังที่ไม่ได้ผลิดมาเพื่อใช้รับสัญญาณวิทยุ การรับสัญญาณวิทยุอาจถูกคลื่นรบกวนได้

LG SmartWorld

LG SmartWorld นำเสนอเนื้อหาที่น่าสนใจมากมาย เช่น เกมส, แอปพลิเคชัน, ฟันหลังและเสียงเรียกเขา ทำให้ผู้ใช้โทรศัพท์ LG สามารถสัมผัสกับประสบการณ์ "Mobile Life" ได้มากยิ่งขึ้น

วิธีการเข้าสู่ LG SmartWorld จากโทรศัพท์ของคุณ

- 1 แตะไอคอน  เพื่อเข้าถึง LG SmartWorld
- 2 แตะ ลงชื่อเข้าใช้ และป้อนข้อมูล ID/PW สำหรับ LG SmartWorld หากคุณยังไม่ได้สมัครสมาชิก ให้แตะ รีจิสเตอร์ และสมัครสมาชิกของ LG SmartWorld
- 3 ดาวน์โหลดเนื้อหาที่คุณต้องการ

หมายเหตุ: หากไม่มีไอคอน 

- 1 ให้ใช้เว็บเบราว์เซอร์มือถือ เข้าใช้ LG SmartWorld (www.lgworld.com) และเลือกประเทศของคุณ
- 2 ดาวน์โหลดแอปพลิเคชัน LG SmartWorld
- 3 รันและติดตั้งไฟล์ที่ดาวน์โหลด
- 4 เข้าใช้ LG SmartWorld โดยการแตะไอคอน 

วิธีการใช้ LG SmartWorld

- เข้าร่วมการส่งเสริมการขาย LG SmartWorld ทุกเดือน
- ลองใช้ปุ่ม "เมนู" เพื่อค้นหาสิ่งที่คุณต้องการอย่างรวดเร็ว

ชนิด – ค้นหาเนื้อหาตามประเภท (เช่น การศึกษา, ความบันเทิง, เกมส, และอื่นๆ)

ค้นหา – ค้นหาเนื้อหา

Apps for you – เนื้อหาที่แนะนำอิงตามตัวเลือกก่อนหน้านี้ของคุณ

แอปฯ ของฉัน – รายการเนื้อหาที่ดาวน์โหลดหรือเนื้อหาที่ต้องอัปเดต



ตั้งค่า – ตั้งค่าโปรไฟล์และหน้าจอลงชื่อเข้าใช้ – ตั้งค่า ID และรหัสผ่านของคุณ

- และลองใช้ฟังก์ชันอื่นๆ ที่มีประโยชน์ (หน้าจอรายละเอียดเนื้อหา)



หมายเหตุ: LG SmartWorld อาจไม่มีให้บริการในบางประเทศหรือผู้ให้บริการบางราย

ยูลิลิตี



การตั้งเวลาการปลุก

- 1 **แตะ**  > **แท็บ แอปฯ** > **ตั้งปลุก/นาฬิกา** > 
- 2 หลังจากที่กำหนดเวลาแล้ว โทรศัพท์ LG-P880 จะแสดงเวลาที่เหลืออยู่ก่อนการส่งเสียงปลุก
- 3 **ตั้งค่า ซ้ำ, ระยะเวลาเลื่อน, สั่น, เสียงปลุก, ระดับเสียงปลุก, เริ่มใช้แอปฯอัตโนมัติ, ล็อคปริศนา และ บันทึก** **แตะ** **บันทึก**

การใช้เครื่องคิดเลข

- 1 **แตะ**  > **แท็บ แอปฯ** > **เครื่องคิดเลข**
- 2 **แตะ** ปุ่มตัวเลขเพื่อป้อนตัวเลข
- 3 สำหรับการคำนวณอย่างง่าย ให้**แตะ**ที่ฟังก์ชันที่คุณต้องการ (+, -, x หรือ ÷) แล้วตามด้วย =
- 4 สำหรับการคำนวณที่ซับซ้อน **แตะ**  เลือก **พานอลขั้นสูง** แล้วเลือก sin, cos, tan, log และอื่นๆ




การเพิ่มเหตุการณ์ลงในปฏิทิน

- 1 **แตะ**  > **แท็บ แอปฯ** > **ปฏิทิน**
- 2 ที่กลางหน้าจอ คุณจะพบกับประเภทมุมมองต่างๆ ของปฏิทิน (วัน สัปดาห์ นัดหมาย)
- 3 **แตะ**วันที่ที่คุณต้องการเพิ่มเหตุการณ์แล้ว**แตะ** 
- 4 **แตะ** **ชื่อเหตุการณ์** แล้วป้อนชื่อเหตุการณ์
- 5 **แตะ** **ที่ตั้ง** และป้อนตำแหน่งตรวจสอบวันที่และป้อนเวลาที่เหตุการณ์เริ่มและเสร็จสิ้น
- 6 หากคุณต้องการใส่บันทึกลงในเหตุการณ์ของคุณ ให้**แตะ** **คำอธิบาย** แล้วป้อนรายละเอียด
- 7 ถ้าคุณต้องการให้ส่งเสียงเตือนซ้ำ ให้**ตั้งค่า ซ้ำ** และ**ตั้งค่า** **เตือนความจำ** ถ้าจำเป็น
- 8 **แตะ** **บันทึก** เพื่อบันทึกเหตุการณ์ในปฏิทิน

บันทึกเสียง

ใช้บันทึกเสียงเพื่อบันทึกเสียงเตือนความจำหรือไฟล์เสียงอื่นๆ

การบันทึกเสียงหรือเสียงพูด

- 1 **แตะ**  > **แท็บ แอปฯ** และเลือก **บันทึกเสียง**
- 2 **แตะ**  เพื่อเริ่มบันทึก
- 3 **แตะ**  เพื่อจบการบันทึก

4 และ > เพื่อฟังการบันทึก

หมายเหตุ: และ > เพื่อเข้าใช้อัลบั้ม คุณสามารถฟังการบันทึกเสียงที่บันทึกไว้ได้ เวลาการบันทึกที่ใช้อาจแตกต่างจากเวลาการบันทึกจริง

การส่งรายการบันทึกเสียง

- 1 เมื่อคุณบันทึกเสียงเสร็จแล้ว คุณสามารถส่งคลิปเสียงได้ โดยแตะ >
- 2 เลือกจาก **Bluetooth, อีเมล, Gmail, บันทึก** หรือ **ข้อความ** เมื่อคุณเลือก Bluetooth, อีเมล, Gmail, บันทึก หรือข้อความ การบันทึกเสียง จะถูกเพิ่มไปยังข้อความ จากนั้น คุณสามารถเขียนและส่งข้อความได้ตามปกติ

จัดการแอปฯ

คุณสามารถจัดการแอปพลิเคชันได้โดยใช้จัดการแอปฯ คุณสามารถตรวจสอบจำนวนแอปพลิเคชันที่กำลังรันและปิดแอปพลิเคชันที่ต้องการได้ง่ายๆ คุณยังสามารถยกเลิกการติดตั้งแอปพลิเคชันที่คุณติดตั้งในอุปกรณ์ของคุณได้ด้วย

Polaris Office 4

Polaris Office คือโซลูชันสำนักงานบนมือถือระดับมืออาชีพที่ให้คุณดูเอกสารประเภทต่างๆ ของ Office รวมถึงไฟล์ Word, Excel และ PowerPoint ได้อย่างสะดวกทุกที่ทุกเวลาด้วยมือถือของคุณ

และ > แท็บ แอปฯ > **Polaris Office 4**

การดูไฟล์

ผู้ใช้อมือถือสามารถดูไฟล์ประเภทต่างๆ รวมถึงเอกสาร Microsoft Office และ Adobe PDF ได้ง่ายๆ บนมือถือเมื่อดูเอกสารโดยใช้ Polaris Office ออบเจกต์และเลย์เอาต์จะเหมือนกับในเอกสารต้นฉบับ

Backup

เกี่ยวกับการสำรองข้อมูลและเรียกคืนข้อมูลของสมาร์ตโฟน ขอแนะนำให้คุณสร้างและบันทึกไฟล์สำรองไว้ในการ์ดเก็บข้อมูลเป็นระยะ โดยเฉพาะอย่างยิ่งก่อนอัปเดตซอฟต์แวร์ใดๆ การจัดเก็บไฟล์สำรองปัจจุบันไว้ในหน่วยความจำเก็บข้อมูลอาจช่วยให้คุณกู้ข้อมูลสมาร์ตโฟนได้ หากสมาร์ตโฟนของคุณสูญหาย ถูกขโมย หรือเสียหายจากปัญหาที่ไม่คาดคิด

ยูทิลิตี้


แอปพลิเคชันสำรองข้อมูลนี้สนับสนุนระหว่างสมาร์ตโฟน LG, เวอร์ชันซอฟต์แวร์อื่น หรือ OS อื่น นอกจากนี้ เมื่อคุณซื้อสมาร์ตโฟน LG ใหม่ คุณสามารถสำรองข้อมูลสมาร์ตโฟน LG-P880 ปัจจุบันไปยังเครื่องใหม่ของคุณได้

หากคุณมีแอปพลิเคชันสำรองและเรียกคืนโพลดไวลวงหน่าในสมาร์ตโฟนของคุณ คุณสามารถสำรองและเรียกคืนข้อมูลสมาร์ตโฟนของคุณส่วนใหญ่, แอปฯ รวมถึงแอปพลิเคชันที่ไม่มีการป้องกันและการตั้งค่า, แอปพลิเคชัน (ดาวน์โหลด), แอปพลิเคชัน (ติดตั้งล่วงหน้า), การกำหนดค่าระบบ, ข้อความอักษร, ข้อมูลการโทร, บุคมาρκ, ปฏิทิน, รายชื่อ, หน้าจอเริ่มต้น โดยใช้แอปพลิเคชันนี้ได้

- การสำรองข้อมูลสมาร์ตโฟนด้วยตัวเอง
- การกำหนดเวลาสำรองข้อมูลสมาร์ตโฟนอัตโนมัติ
- การเรียกคืนข้อมูลสมาร์ตโฟน

สำรองข้อมูลสมาร์ตโฟน

1 ใส่การ์ดหน่วยความจำในช่องเสียบ และตรวจสอบสถานะที่เก็บข้อมูล

- 2** แตะแท็บ **แอปฯ**  แล้วเลือก **Backup > สำรองข้อมูล > การกำหนดความจำ หรือ หน่วยความจำภายใน**
- 3** แตะ **เพิ่มใหม่** เพื่อป้อนชื่อสำหรับไฟล์สำรอง แล้วเลือก **ดำเนินการต่อ**
- 4** เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการสำรอง แล้วเลือก **ดำเนินการต่อ** เพื่อสำรองข้อมูล
- 5** เมื่อสำรองข้อมูลไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ **'เสร็จ'** จากนั้นเลือก **ดำเนินการต่อ** เพื่อเสร็จสิ้นการสำรองข้อมูล

การกำหนดเวลาสำรองข้อมูลอัตโนมัติ

คุณสามารถเปิดใช้การสำรองข้อมูลในสมาร์ตโฟนโดยอัตโนมัติตามการตั้งค่ากำหนดเวลาได้ ในการดำเนินการนี้ให้ปฏิบัติตามขั้นตอนต่อไปนี้:


- 1** ใส่การ์ดหน่วยความจำในช่องเสียบและตรวจสอบสถานะที่เก็บข้อมูล
- 2** แตะแท็บ **แอปฯ**  แล้วเลือก **Backup > กำหนดการ**
- 3** ในหน้าจอ **ตำแหน่งข้อมูลสำรองตามกำหนดการ** ให้แตะ

- 4 การกำหนดหน่วยความจำ หรือ หน่วยความจำภายใน
- 5 จากรายการ ให้เลือกความถี่ที่คุณต้องการให้สำรองข้อมูลและการตั้งค่าอุปกรณ์ แล้วเลือก **ดำเนินการต่อ**
- 6 เลือกช่องทำเครื่องหมายข้างข้อมูลที่คุณต้องการสำรอง แล้วเลือก **ดำเนินการต่อ** เพื่อเสร็จสิ้นการตั้งค่ากำหนดเวลา

การเรียกคืนข้อมูลสมาร์ตโฟน

ในการเรียกคืนข้อมูลที่อยู่ในหน่วยความจำอุปกรณ์อ่อนขอบอร์ดตองปิดโหมดที่เก็บข้อมูล

หมายเหตุ: ไฟล์ทั้งหมดที่เก็บไว้ในสมาร์ตโฟนจะถูกลบก่อนเรียกคืนไฟล์สำรอง

- 1 ใส่การ์ดหน่วยความจำในช่องเสียบ และตรวจสอบสถานะที่เก็บข้อมูล
- 2 แตะแท็บ **แอปฯ**  แล้วเลือก **Backup > เรียกคืน > การกำหนดหน่วยความจำ หรือ หน่วยความจำภายใน**
- 3 ในหน้าจอ **เรียกคืน** ให้เลือกไฟล์สำรองที่มีข้อมูลที่คุณต้องการเรียกคืน
- 4 เลือกช่องทำเครื่องหมายข้างรายการที่คุณต้องการเรียกคืน


แล้วเลือก **ดำเนินการต่อ** เพื่อเรียกคืนไปยังโทรศัพท์

หมายเหตุ: โปรดทราบว่าข้อมูลโทรศัพท์ของคุณจะถูกบันทึกทับด้วยเนื้อหาจากการสำรองของคุณ

- 5 หากไฟล์สำรองถูกเข้ารหัส ให้พิมพ์รหัสผ่านที่คุณตั้งค่าเพื่อเข้ารหัส
- 6 เมื่อเรียกคืนไฟล์ที่เลือกทั้งหมดแล้ว คุณจะเห็นข้อความ **'เสร็จ'** จากนั้นเลือก **ใช่** เพื่อรีสตาร์ทโทรศัพท์


หมายเหตุ:

- ขณะอยู่ในโหมดที่เก็บข้อมูล แอปพลิเคชันสำรองข้อมูลจะไม่สามารถทำงานได้ เลือกตัวเลือกขารทดเท่านั้นเมื่อเชื่อมต่อสาย USB
- คุณสามารถตั้งค่าเปิดใช้งานการเข้ารหัสเพื่อเข้ารหัสไฟล์สำรองของคุณเพื่อเพิ่มการป้องกัน

กด **เมนู**  จากหน้าจอ **Backup** แล้วเลือก **ค่า > การรักษาความปลอดภัย** และเลือกช่องทำเครื่องหมาย และหลังจากการเปิดใช้การเข้ารหัส ในการเรียกคืนข้อมูลสมดบันทึกที่ซิงโครไนซ์คุณต้องมีรหัสผ่านกาเปิดใช้

ยูทิลิตี้

หมายเหตุ:

คุณสามารถเปิดใช้การลบการสำรอง
เกาต์โน้มนัดและเก็บไว้เฉพาะการ
สำรองล่าสุดได้ กด **เมนู** 
จากหน้าจอ **Backup** และเลือก
ค่า > การสำรองตามกำหนดการ
> ลบแบ็คอัพเก่าทั้งหมดโดยอัตโนมัติ
เพื่อเลือกจำนวนการสำรองตาม
กำหนดเวลาที่จะเก็บไว้

หมายเหตุ: แอปพลิเคชันนี้อาจไม่
พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาค
และผู้ให้บริการเครือข่าย

ดาวน์โหลด

ใช้แอปพลิเคชันนี้เพื่อดูว่ามีไฟล์
อะไรบ้างที่ถูกดาวน์โหลดผ่านแอป
พลิเคชัน

- **แตะ**  **> แท็บ แอปฯ > ดาวน์โหลด**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่
พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาค
และผู้ให้บริการเครือข่าย

Google+


ใช้แอปพลิเคชันนี้เพื่อเชื่อมต่อกับ
บุคคลผ่านบริการเครือข่ายสังคมของ
Google

- **แตะ**  **> แท็บ แอปฯ > Google+**

หมายเหตุ: แอปพลิเคชันนี้อาจไม่
พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาค
และผู้ให้บริการเครือข่าย

ค้นหาด้วยเสียง

ใช้แอปพลิเคชันนี้เพื่อค้นหาเว็บเพจ
ด้วยเสียง

- 1** **แตะ**  **> แท็บ แอปฯ > ค้นหาด้วยเสียง**
- 2** พุดคำหลักหรือวลีเมื่อ **พูดเลย**
ปรากฏบนหน้าจอ เลือกคำหลัก
ที่แนะนำค่าใดค่าหนึ่งที่ปรากฏขึ้น

เว็บไซต์

อินเทอร์เน็ต


บราวเซอร์ ช่วยให้ท่านเข้าถึงโลกของเกมส์ เพลง ข่าว กีฬา ความบันเทิง และอีกมากมายได้โดยตรงถึงโทรศัพท์ของคุณ ได้อย่างทุกที่และทุกเวลาที่ท่านต้องการ

หมายเหตุ: คุณอาจต้องเสียค่าใช้จ่ายเพิ่มเติมเมื่อเชื่อมต่อบริการเหล่านี้และดาวน์โหลดเนื้อหา โปรดสอบถามข้อมูลการคิดค่าใช้จ่ายกับผู้ให้บริการเครือข่ายของคุณ

การใช้แถบเครื่องมือเว็บ

- ◀ แตะเพื่อย้อนกลับหนึ่งเพจ
- ▶ แตะเพื่อไปข้างหน้าหนึ่งเพจไปยังเพจที่ทำการเชื่อมต่อหลังจากเพจปัจจุบัน โดยตรงข้ามกับสิ่งที่เกิดขึ้นเมื่อคุณกดปุ่ม **ย้อนกลับ** ซึ่งจะไปยังเพจก่อนหน้า
- 🏠 แตะเพื่อไปยังโฮมเพจ
- ⊕ แตะเพื่อเพิ่มหน้าต่างใหม่
- ★ แตะเพื่อเข้าใช้งานบุคคมาาร์ค


การใช้ตัวเลือก

- กด  เพื่อดูตัวเลือก
- รีเฟรช** – อัปเดตเว็บเพจปัจจุบัน
- บันทึกบุคคมาาร์ค** – เพิ่มเว็บเพจปัจจุบันเป็นบุคคมาาร์ค
- ไปที่โฮมเพจ** – ให้คุณไปยังโฮมเพจ
- แบ่งปันเพจ** – ให้คุณสามารถแบ่งปันเว็บเพจกับผู้อื่นได้
- ค้นหาบนหน้า** – ให้คุณค้นหาตัวอักษรหรือคำบนเว็บเพจปัจจุบัน
- มุมมองเดสก์ทอป** – ให้คุณดูเว็บเพจเป็นเดสก์ทอปได้
- บันทึกไว้อ่านออฟไลน์** – บันทึกหน้าปัจจุบันเพื่ออ่านขณะออฟไลน์
- ตั้งค่า** – แสดงการตั้งค่าเบราว์เซอร์
- ออก** – ออกจากรายการเมนู

เว็บไซต์

Chrome

ใช้ Chrome ในการค้นหาข้อมูลและเรียกดูเว็บเพจ

1  > แท็บ แอปฯ > Chrome

หมายเหตุ: แอปพลิเคชันนี้อาจไม่พร้อมใช้งาน ทั้งนี้ขึ้นอยู่กับภูมิภาคและผู้บริการ เครือข่ายของคุณ

การดูเว็บเพจ


แตะฟิลด์แอดเดรส จากนั้นป้อนเว็บแอดเดรสหรือเกณฑ์การค้นหา

การเปิดเพจ

ในการไปยังเพจใหม่ ให้แตะ  → + แท็บใหม่

ในการไปยังเว็บเพจอื่น ให้แตะ  เลื่อนขึ้นหรือลง และแตะเพจเพื่อเลือก


การค้นหาเว็บด้วยเสียง


แตะฟิลด์แอดเดรส แตะ  พูดคำหลัก และเลือกหนึ่งในคำหลักที่แนะนำที่ ปรากฏขึ้น

การซิงค์กับอุปกรณ์อื่น

ซิงค์แท็บที่เปิดและบุ๊คมาร์คเพื่อใช้กับ

Chrome ในอุปกรณ์อื่นเมื่อคุณล็อกอินด้วยบัญชี Google เดียวกัน

ในการดูแท็บที่เปิดบนอุปกรณ์อื่น ให้แตะ  → อุปกรณ์อื่นๆ เลือกเว็บเพจเพื่อเปิดในการดูบุ๊คมาร์ค

ให้แตะ 

ตั้งค่า

ในหน้าจอหลัก ให้แตะ  > แท็บ แอปฯ > ตั้งค่า

ตั้งค่าการเชื่อมต่อ

ในหน้าจอนี้ คุณสามารถจัดการ Wi-Fi และบลูทูธ คุณยังสามารถตั้งค่าเครือข่ายโทรศัพท์เคลื่อนที่ และสลับไปยังโหมดเครื่องบินได้ด้วย

< Wi-Fi >

Wi-Fi – เปิด Wi-Fi เพื่อเชื่อมต่อเครือข่าย Wi-Fi ที่มีอยู่

เคล็ดลับ! การดู **MAC แอดเดรส** ในการเชื่อมต่อกับเครือข่ายไร้สาย บางเครือข่ายด้วยฟิลเตอร์ MAC คุณจำเป็นต้องป้อน MAC แอดเดรสของ LG-P880 ลงในเราเตอร์ คุณสามารถค้นหา MAC แอดเดรสได้ในยูสเซอร์อินเตอร์เฟซต่อไปนี้: แตะแท็บ แอปฯ > ตั้งค่า > **Wi-Fi** >  > **ขั้นสูง** > **MAC แอดเดรส**

< บลูทูธ >

เปิดบลูทูธเพื่อเชื่อมต่อกับอุปกรณ์บลูทูธ

< ข้อมูลโมบายล์ >

แสดงการใช้ข้อมูลและตั้งค่าขีดจำกัดข้อมูลโทรศัพท์เคลื่อนที่

< ตั้งการโทร >

กำหนดค่าการตั้งค่าโทรศัพท์ เช่น การส่งต่อสาย และคุณสมบัติพิเศษอื่นๆ จากผู้ให้บริการ

จำกัดการโทร – เปิดและรวบรวมรายการหมายเลขที่สามารถโทรออกจากโทรศัพท์ได้ คุณต้องใช้ PIN2 ซึ่งได้จากผู้ให้บริการของคุณเฉพาะหมายเลขที่อยู่ในรายการหมายเลขโทรออกที่กำหนดเท่านั้นที่สามารถโทรออกจากโทรศัพท์ได้

บันทึกหมายเลขที่ไม่ว่าง – เพิ่มหมายเลขที่ไม่ว่างลงในรายชื่อหลังจากการโทร

ขอความเสี่ยง – ให้คุณเลือกบริการขอความเสี่ยงของผู้ให้บริการ

ปฏิเสธการรับสาย – ตั้งค่าฟังก์ชันปฏิเสธการรับสาย เลือกจากโหมดปฏิเสธสาย หรือรายการปฏิเสธ

ปฏิเสธพร้อมส่งข้อความ

– เมื่อคุณต้องการปฏิเสธสาย คุณสามารถส่งข้อความได้อย่างรวดเร็วโดยใช้ฟังก์ชันนี้ ตัวเลือกนี้จะเป็นประโยชน์ในกรณีที่ คุณต้องการปฏิเสธการรับสายในระหว่างการประชุม

ปุ่มวางสาย – ให้คุณเลือกวางสาย

ตั้งค่า

การโอนสาย – เลือกว่าจะโอนทุกสาย โอนเมื่อสายไม่ว่าง โอนเมื่อไม่รับสาย หรือโอนเมื่อไม่มีสัญญาณ

ป้องกันการโทร – ล็อคสายเรียกเข้าสายโทรออก หรือสายโทรออกต่างประเทศ

เวลาโทร – ระยะเวลาการโทรทั้งหมด ใดแก่ โทรครั้งล่าสุด ทุกสายสายที่โทรออก และสายที่ได้รับ

ตั้งค่าเพิ่มเติม – ให้คุณเปลี่ยนแปลงการตั้งค่าต่อไปนี้:

ข้อมูลผู้โทร: เลือกว่าคุณจะแสดงหมายเลขของคุณในการโทรออกหรือไม่

สายเรียกซ้อน: หากเปิดใช้สายเรียกซ้อนคุณจะได้รับแจ้งสายเรียกเข้าขณะกำลังใช้สาย (ขึ้นอยู่กับผู้ให้บริการเครือข่ายของคุณ)

< เพิ่มเติม >

โหมดเครื่องบิน – หลังจากสลับไปยังโหมดเครื่องบิน การเชื่อมต่อเครือข่ายทั้งหมดจะใช้งานไม่ได้

Portable Wi-Fi Hotspot – คุณสามารถกำหนดค่าการตั้งค่าฮอตสปอต Wi-Fi เคลื่อนที่ได้

NFC – LG-P880 ของคุณสามารถใช้ NFC ได้ NFC (Near Field Communication) คือเทคโนโลยีการเชื่อมต่อไร้สายที่ทำให้การสื่อสารแบบสองทางระหว่างอุปกรณ์อิเล็กทรอนิกส์โดยจะทำงานในระยะสองสามเซนติเมตรคุณสามารถแบ่งปันเนื้อหา กับแท็ก NFC หรืออุปกรณ์อื่นได้โดยการแตะกับอุปกรณ์ของคุณ หากคุณแตะแท็ก NFC กับอุปกรณ์ของคุณ จะแสดงเนื้อหาของแท็กในอุปกรณ์ของคุณ

หมายเหตุ: ระวังอย่าให้เกิดรอยขีดข่วนหรือความเสียหายที่ด้านในฝาแบตเตอรี่เนื่องจากเป็นเสาอากาศ NFC

การเปิดหรือปิด NFC:

จากหน้าจอหลัก ให้แตะและเลื่อนแถบการแจ้งเตือนด้วยนิ้วของคุณ และเลือกไอคอน NFC เพื่อเปิด

หมายเหตุ: ขณะเปิดใช้งานโหมดเครื่องบินจะสามารถใช้งานแอปพลิเคชัน NFC ได้

การใช้ NFC: ในการใช้ NFC ให้ตรวจสอบให้แน่ใจว่าคุณเปิดอุปกรณ์ของคุณและเปิดใช้งานการตั้งค่า NFC ในกรณีที่ปิดใช้งานเอาไว้

Android Beam – เมื่อเปิดใช้คุณสมบัตินี้ คุณสามารถบีบเนื้อหาแอปพลิเคชันไปยังอุปกรณ์ที่สามารถใช้ NFC ได้โดยการถืออุปกรณ์ไว้ใกล้ๆ กันเพียงนำอุปกรณ์เข้าใกล้ๆ กัน (หันด้านหลังเข้าหากัน) แล้วแตะหน้าจอของคุณ แอปพลิเคชันจะกำหนดว่ามีอะไรบางอย่าง

VPN – แสดงรายการ Virtual Private Network (VPN) ที่คุณกำหนดค่าก่อนหน้านี้ ให้คุณเพิ่ม VPN ประเภทต่างๆ ได้

เครือข่ายโทรศัพท์เคลื่อนที่ – ตั้งค่าตัวเลือกสำหรับโรมมิ่งข้อมูล, โหมดเครือข่ายและผู้ให้บริการ, ข้อจุดเชื่อมต่อ (APN) และอื่นๆ

หมายเหตุ: คุณต้องตั้งค่า PIN หรือรหัสผ่านล็อคหน้าจอก่อนที่จะใช้ระบบจัดเก็บข้อมูลรับรองสิทธิ์

อุปกรณ์

< เสียง >

โปรไฟล์เสียง – เลือกเสียงเฉพาะสั้น หรือเจียบได้

ระดับเสียง – จัดการระดับเสียงของเสียงเรียกเข้าโทรศัพท์ เสียงการแจ้งเตือน เสียงสัมผัสและระบบ เพลง วิดีโอ เกม และมีเดียอื่นๆ

เวลาปิดเสียง – ตั้งค่าเวลาเพื่อปิดเสียงทั้งหมดยกเว้นการปลุกและมีเดียเสียงพร้อมสั้น – สั้นเมื่อโทรเข้าและมีการแจ้งเตือน

เสียงเรียกเข้าโทรศัพท์ – ให้คุณตั้งค่าเสียงสายเรียกเข้าเริ่มต้นของคุณ

เสียงการแจ้งเตือน – ให้คุณตั้งค่าเสียงการแจ้งเตือนเริ่มต้นของคุณ

เสียงปุ่มกดเบอร์โทร – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อใช้ปุ่มตัวเลขเพื่อหมุนหมายเลข

เสียงสัมผัส – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อคุณแตะปุ่ม ไอคอน และรายการอื่นๆ บนหน้าจอที่ตอบสนองการสัมผัส

เสียงล็อคหน้าจอ – ให้คุณตั้งค่าให้โทรศัพท์เล่นเสียงเมื่อล็อคและปลดล็อค หน้าจอ

สั้นเมื่อแตะ – ให้คุณตั้งค่าการตอบสนองการสั้นเมื่อหน้าจอโทรศัพท์ถูกสัมผัส

< หน้าจอ >

ความสว่าง – ปรับความสว่างของหน้าจอ

ใหม่เอาต์หน้าจอ – ตั้งค่าเวลาใหม่เอาต์หน้าจอ

ตั้งค่า

หมุนจอยด์โน้มนัด – ตั้งค่าเพื่อสลับการวางแผนโดยจอยด์โน้มนัดเมื่อคุณหมุนโทรศัพท์

ชนิดแบบอักษร – เปลี่ยนประเภทของหน้าจอ

ขนาดแบบอักษร – เปลี่ยนขนาดของแบบอักษรที่แสดง

ตั้งค่าไฟปุ่มด้านหน้า – ตั้งค่าเวลาไฟ LED ปุ่มด้านหน้า

ปรับแต่งเซนเซอร์การเคลื่อนไหว – ปรับปรุงความแม่นยำของการเอียงและความเร็วของเซนเซอร์

< หน้าจอหลัก >

ตั้งค่า **ธีม**, **แอนิเมชัน**, **เอฟเฟกต์หน้าจอ**, **พื้นหลัง** หรือ **มุมมองแนวตั้ง**ที่นั่น เลือกตัวเลือกเพื่อตั้งค่า **เลื่อนจอเป็นวงกลม** และ **แป้นคีย์และริสโตร**

< ล็อคหน้าจอ >

เลือกแบบล็อคหน้าจอ – ตั้งค่าประเภทเลือกแบบล็อคหน้าจอเพื่อป้องกันโทรศัพท์ของคุณ เปิดชุดหน้าจอที่แนะนำคุณในการวาดแบบปลดล็อคหน้าจอ ตั้งค่า **ไม่มี**, **ลาก**, **ปลดล็อคใบหน้า**, **รูปแบบ**, **PIN** หรือ **รหัสผ่าน**

หากคุณเปิดใช้งานการประเภทการล็อกรูปแบบเมื่อเปิดโทรศัพท์หรือเรียกหน้าจอ คุณจะต้องวาดแบบปลดล็อค

เพื่อปลดล็อคหน้าจอ

พื้นหลัง – เลือกพื้นหลังสำหรับหน้าจอล็อคของคุณจากคลังภาพหรือคลังภาพพื้นหลัง

นาฬิกา&ขีดคัท – ปรับแต่งนาฬิกาและขีดคัทในหน้าจอล็อค

ข้อมูลเจ้าของ – แสดงข้อมูลเจ้าของบนหน้าจอล็อค

ตั้งเวลาล็อค – ตั้งค่าเวลาล็อคหลังจากโคมเปิดหน้าจอ

ล็อคปุ่มพาวเวอร์ทันที – ตั้งค่าหน้าจอล็อคเมื่อกดปุ่มปิด/เปิดเครื่อง

สั่นเมื่อแตะ – ให้คุณตั้งค่าการตอบสนองการสั่นสำหรับการสัมผัสหน้าจอโทรศัพท์

< Gesture >

ย้ายไอเท็มในจอยโซม – แตะไอเท็มค้างไว้แล้วเอียงอุปกรณ์ เพื่อย้ายไอเท็มในจอยโซมหรือแอปพลิเคชัน

ความไวในการเอียง – ทดสอบและปรับแต่งความไวของเซนเซอร์การเอียงสำหรับจอยโซมและแอปพลิเคชัน

สายโทรเข้าที่รออยู่ – ฟลิกอุปกรณ์เพื่อปิดเสียงสายเรียกเข้า

ปิดชั่วคราวหรือปิดสัญญาณเตือน – ฟลิกอุปกรณ์เพื่อหยุดชั่วคราวหรือหยุดเสียงสัญญาณเตือน

หยุดวิดีโอชั่วคราว – ฟลิกอุปกรณ์เพื่อหยุดเลนวิดีโอชั่วคราว

ช่วยเหลือ – ช่วยเหลือการใช้ฟังก์ชัน Gesture

< ที่เก็บข้อมูล >

ที่เก็บข้อมูลภายใน – ดูการใช้ที่เก็บข้อมูลภายใน

การ์ด SD – ตรวจสอบพื้นที่การ์ด SD ที่ใช้ได้ทั้งหมด และ ยกเลิกการเชื่อมต่อการ์ด SD เพื่อถอดการ์ดออกอย่างปลอดภัย ลบการ์ด SD หากคุณต้องการลบข้อมูลทั้งหมดจากการ์ด SD

< ประหยัดพลังงาน >

ที่นี่คุณสามารถจัดการแบตเตอรี่ และ ตรวจสอบไอเท็มที่ใช้ระบบประหยัดพลังงานได้ นอกจากนี้คุณยังสามารถตรวจสอบการใช้แบตเตอรี่ได้ด้วย

< แอปฯ >

คุณสามารถดูและจัดการแอปพลิเคชันได้

ส่วนตัว

< แอดแคชและการซิงค์ >

อนุญาตให้แอปพลิเคชันซิงโครไนซ์ข้อมูลในแบ็คกราวด์ ไม่ว่าคุณกำลังใช้งานข้อมูลอยู่หรือไม่ก็ตาม การไม่เลือกการตั้งค่านี้สามารถประหยัดไฟแบตเตอรี่และลด (ไม่ใช่ทั้งหมด) การใช้ข้อมูล

< เข้าถึงข้อมูลระบุตำแหน่ง >

เข้าถึงข้อมูลระบุตำแหน่งของฉัน – หากคุณเลือกบริการระบุตำแหน่งของ Google โทรศัพท์จะกำหนดตำแหน่งโดยประมาณจากการใช้เครือข่าย Wi-Fi และโทรศัพท์มือถือ เมื่อคุณเลือกตัวเลือกนี้ คุณจะได้รับแจ้งว่าจะยินยอมให้ Google ใช้ตำแหน่งของคุณเมื่อให้บริการเหล่านี้หรือไม่

ดาวเทียม GPS – หากคุณเลือกดาวเทียม GPS โทรศัพท์จะกำหนดตำแหน่งด้วยความแม่นยำระดับถนน

ตำแหน่งเครือข่าย Wi-Fi และโมบายล์ – ให้แอปพลิเคชันใช้ข้อมูลจากแหล่งที่มา เช่น Wi-Fi และเครือข่ายโทรศัพท์มือถือเพื่อระบุพิกัดโดยประมาณ

< ระบบป้องกัน >

ตั้งค่าล็อคซิมการ์ด – ตั้งค่าล็อคซิมการ์ดหรือเปลี่ยน PIN ของซิมการ์ด

ป้อนรหัสผ่านแบบมองเห็น – แสดงรหัสผ่านขณะที่คุณพิมพ์

โปรแกรมควบคุมอุปกรณ์ – ดูหรือปิดการใช้งานผู้ดูแลอุปกรณ์

แหล่งที่มาที่ไม่รู้จัก – ตั้งค่าเริ่มต้นเพื่อติดตั้งแอปพลิเคชันที่ไม่ได้มาจากตลาด

การรับรองสิทธิ์ที่ไว้วางใจได้ – แสดง

ตั้งค่า

การรับรองสิทธิ์ CA ที่เชื่อถือได้
ติดตั้งจากระบบจัดเก็บข้อมูล –
เลือกติดตั้งใบรับรองที่เข้ารหัสจาก
การ์ด SD

ลบจัดเก็บข้อมูล – ลบใบรับรอง
ทั้งหมด

< ภาษาและการป้อนข้อมูล >

ใช้การตั้งค่าภาษาและการป้อนข้อมูล
เพื่อเลือกภาษาสำหรับข้อความ
ในโทรศัพท์ และสำหรับการกำหนด
ค่าแป้นพิมพ์บนหน้าจอ รวมถึง
ค่าที่คุณเพิ่มในพจนานุกรม

< แบ็คอัพและรีเซ็ท >

เปลี่ยนการตั้งค่าสำหรับการจัดการการ
ตั้งค่าและข้อมูลของคุณ

สำรองข้อมูลของฉัน – ตั้งค่าเพื่อสำ
รองข้อมูลการตั้งค่าและแอปพลิเคชัน
ของคุณลงบนเซิร์ฟเวอร์ของ Google

บัญชีข้อมูลสำรอง – ตั้งค่าเพื่อ
สำรองข้อมูลแอดเดสส์ของคุณ

เรียกคืนอัตโนมัติ – ตั้งค่าให้ทำการ
เรียกคืนข้อมูลการตั้งค่าและแอปพลิเคชัน
ของคุณ เมื่อมีการติดตั้งแอป
พลิเคชันเข้าบนอุปกรณ์ของคุณ

รีเซ็ตข้อมูลจากโรงงาน – รีเซ็ตการ
ตั้งของคุณกลับสู่ค่าเริ่มต้นจากโรงงาน
และลบข้อมูลทั้งหมดของคุณ หาก
คุณรีเซ็ตโทรศัพท์ด้วยวิธีการนี้ คุณจะ
ต้องป้อนข้อมูลเช่นเดียวกับเมื่อคุณ

เริ่มต้น Android ครั้งแรก

ระบบ

< วันที่และเวลา >

ใช้การตั้งค่า วันที่และเวลา เพื่อตั้งค่า
การแสดงผลวันที่ คุณยังสามารถใช้การ
ตั้งค่าเหล่านี้เพื่อตั้งค่าเวลาและโซน
เวลาของคุณแทนการรับเวลาปัจจุบัน
จากเครือข่ายโทรศัพท์เคลื่อนที่ได

< การช่วยสำหรับการเข้าถึง >

ใช้การตั้งค่า การช่วยสำหรับการ
เข้าถึง เพื่อกำหนดค่าปลั๊กอินช่วย
เหลือสำหรับการเข้าถึงที่คุณติดตั้งใน
โทรศัพท์

หมายเหตุ: ต้องใช้ปลั๊กอินเพิ่มเติม

< การเชื่อมต่อ PC >

ชนิดเชื่อมต่อการ USB – คุณ
สามารถตั้งค่าโหมดที่ต้องการ
(ซาร์ทเท่านั้น, ซิงค์มีเดีย (MTP),
การปล่อยสัญญาณผ่าน USB,
LG ซอर्फแวร์ หรือ กลองถายรูป
(PTP)

ถามเมื่อมีการเชื่อมต่อ – ถามโหมด
เชื่อมต่อ USB เมื่อโทรศัพท์เชื่อมต
กับคอมพิวเตอร์

ช่วยเหลือ – ช่วยเหลือการเชื่อมต่อ

On-Screen Phone – สามารถแสดงหน้าจอและควบคุมโทรศัพท์จาก PC ผ่าน USB, บลูทูธหรือการเชื่อมต่อ Wi-Fi ได้

เชื่อมต่อ PC Suite ผ่าน Wi-Fi – เลือกตัวเลือกนี้เพื่อใช้ **LG PC Suite** กับการเชื่อมต่อ Wi-Fi

< เกี่ยวกับโทรศัพท์ >

ดูข้อมูลทางกฎหมาย และตรวจสอบสถานะโทรศัพท์และเวอร์ชันซอฟต์แวร์

อัปเดตซอฟต์แวร์โทรศัพท์

การอัปเดตซอฟต์แวร์โทรศัพท์มือถือ **LG** จากอินเทอร์เน็ต

สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการใช้ฟังก์ชันนี้ โปรดดูที่ <http://update.lgmobile.com> หรือ <http://www.lg.com/common/index.jsp> → เลือกประเทศและภาษา

คุณสมบัตินี้ให้คุณอัปเดตเฟิร์มแวร์ของโทรศัพท์เป็นเวอร์ชันใหม่โดยอิสระจากอินเทอร์เน็ตโดยไม่ต้องไปที่ศูนย์บริการ คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

เนื่องจากการอัปเดตเฟิร์มแวร์โทรศัพท์มือถือต้องการให้ผู้ใช้ดำเนินการอัปเดตอย่างระมัดระวัง โปรดตรวจ

สอบคำแนะนำและหมายเหตุที่ปรากฏขึ้นในแต่ละขั้นตอนก่อนดำเนินการต่อไป โปรดทราบว่า การถอดสายข้อมูล USB หรือแบตเตอรี่ระหว่างการอัปเดตอาจทำให้โทรศัพท์มือถือชำรุดเสียหายได้

หมายเหตุ: LG ขอสงวนสิทธิ์ในการให้บริการอัปเดตเฟิร์มแวร์สำหรับบางรุ่นเท่านั้นตามดุลยพินิจของบริษัทแต่เพียงผู้เดียว และไม่รับประกันว่าจะมีเฟิร์มแวร์เวอร์ชันใหม่สำหรับเครื่องทุกรุ่น

อัปเดตซอฟต์แวร์โทรศัพท์มือถือ **LG** ผ่าน **Over-the-Air (OTA)**

คุณสมบัตินี้ให้คุณสามารถอัปเดตซอฟต์แวร์ของโทรศัพท์เป็นเวอร์ชันใหม่อย่างสะดวกผ่าน OTA โดยไม่ต้องเชื่อมต่อสายเคเบิลข้อมูล USB คุณสมบัตินี้จะใช้ได้เมื่อ LG มีเฟิร์มแวร์เวอร์ชันใหม่สำหรับอุปกรณ์ของคุณเท่านั้น

ก่อนอื่น คุณสามารถตรวจสอบเวอร์ชันของซอฟต์แวร์ในโทรศัพท์ได้ที่: **ตั้งค่า > เกี่ยวกับโทรศัพท์**

> **อัปเดตซอฟต์แวร์** >

ตรวจสอบอัปเดตในตอนี้

คุณสามารถเลือกการอัปเดตเป็นเวลา 1 ชั่วโมง, 4 ชั่วโมง, 8 ชั่วโมง หรือ

ตั้งค่า

หนึ่งวันได้ ในกรณีนี้ แอปพลิเคชันจะแจ้งคุณให้อัปเดตเมื่อเวลาหมดลงแล้ว คุณยังสามารถจัดกำหนดเวลาการอัปเดตด้วยตัวคุณเองอีกด้วย

หมายเหตุ: ข้อมูลส่วนตัวของคุณจากพื้นที่การจัดเก็บภายในโทรศัพท์รวมถึงข้อมูลเกี่ยวกับแอคเคาท์ Google ของคุณและแอคเคาท์อื่นๆ, ข้อมูลระบบหรือแอปพลิเคชันและการตั้งค่าของคุณ, แอปพลิเคชันที่ดาวน์โหลดและใบอนุญาต DRM—อาจสูญหายในกระบวนการอัปเดตซอฟต์แวร์ของโทรศัพท์ ดังนั้น LG ขอแนะนำให้คุณสำรองข้อมูลส่วนตัวก่อนการอัปเดตซอฟต์แวร์ของโทรศัพท์ LG ไม่รับประกันว่าการสูญหายของข้อมูลส่วนตัวใดๆ

หมายเหตุ: คุณสมบัตินี้ขึ้นอยู่กับผู้ให้บริการเครือข่าย พื้นที่ และประเทศของคุณ

DivX HD

เกี่ยวกับวิดีโอ **DivX:** DivX® เป็นฟอร์แมตวิดีโอดิจิทัลที่สร้างโดย DivX, LLC บริษัทในเครือของ Rovi Corporation อุปกรณ์นี้เป็นอุปกรณ์ที่ได้รับการรับรอง DivX Certified® ว่าสามารถเล่นวิดีโอ DivX ได้ สำหรับข้อมูลเพิ่มเติมและเครื่องมือซอฟต์แวร์อื่นๆ ที่ใช้ในการแปลงไฟล์เป็นวิดีโอ






DivX โปรดไปที่ divx.com เกี่ยวกับ **DivX VIDEO-ON-DEMAND:** อุปกรณ์ DivX Certified® นี้ต้องทำการลงทะเบียนเพื่อที่จะสามารถเล่นภาพยนตร์ DivX Video-on-Demand (VOD) ที่ซื้อได้ในการรับรหัสการลงทะเบียนของคุณให้ไปที่ส่วน DivX VOD ในเมนูตั้งค่าอุปกรณ์ของคุณ ไปที่ vod.divx.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับวิธีการลงทะเบียน

DivX Certified® สำหรับเล่นวิดีโอ DivX® ไม่เกิน HD 720P รวมถึงเนื้อหาพรีเมียม DivX®, DivX Certified® และโลกที่เกี่ยวข้องเป็นเครื่องหมายการค้าของ Rovi Corporation หรือบริษัทในเครือและใช้โดยได้รับอนุญาต

LG On-Screen Phone

On-Screen Phone ให้คุณสามารถดูหน้าจอโทรศัพท์จากคอมพิวเตอร์ผ่าน USB หรือการเชื่อมต่อบลูทูธ คุณยังสามารถควบคุมโทรศัพท์มือถือจากคอมพิวเตอร์โดยใช้เมาส์หรือแป้นพิมพ์

ไอคอน On-Screen Phone

-  เชื่อมต่อโทรศัพท์มือถือกับคอมพิวเตอร์หรือยกเลิกการเชื่อมต่อ
-  เริ่มต้น LG Home Panorama หรือเปลี่ยนแปลงการกำหนดค่า On-Screen Phone
-  ออกจากโปรแกรม On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone
-  ย่อหน้าต่าง On-Screen Phone

คุณสมบัติ On-Screen Phone

- การถ่ายโอนและการควบคุมแบบเรียลไทม์: แสดงและควบคุมหน้าจอโทรศัพท์เมื่อเชื่อมต่อกับคอมพิวเตอร์
- การควบคุมเมาส์: ให้คุณควบคุมโทรศัพท์ด้วยการใช้เมาส์คลิกและลากบนหน้าจอคอมพิวเตอร์
- ป้อนข้อความด้วยแป้นพิมพ์: ให้คุณสร้างข้อความหรือบันทึกโดยใช้แป้นพิมพ์คอมพิวเตอร์
- ถ่ายโอนไฟล์ (โทรศัพท์ไปยังคอม

พิวเตอร์): ส่งไฟล์จากโทรศัพท์ (เช่น ภาพถ่าย วิดีโอเพลง และไฟล์ Polaris Office) ไปยังคอมพิวเตอร์ โดยเพียงคลิกขวาที่ไฟล์ที่คุณต้องการส่งไปยังคอมพิวเตอร์ และคลิก "บันทึกในคอมพิวเตอร์"

- ถ่ายโอนไฟล์ (คอมพิวเตอร์ไปยังโทรศัพท์): ส่งไฟล์จากคอมพิวเตอร์ไปยังโทรศัพท์ เพียงแค่เลือกไฟล์ที่คุณต้องการถ่ายโอน แล้วลากและวางไฟล์ลงในหน้าต่าง On-Screen Phone ไฟล์ที่ส่งจะถูกจัดเก็บในการ์ด SD ภายใน
- การแจ้งเตือนเหตุการณ์แบบเรียลไทม์: ป้อนอัปเดตความเพื่อแจ้งคุณเมื่อมีสายเรียกเข้าหรือเมื่อมีข้อความตัวอักษร/มัลติมีเดียมาถึง

วิธีติดตั้ง On-Screen Phone ในคอมพิวเตอร์

1. เยี่ยมชมหน้าหลัก LG (www.lg.com) และเลือกประเทศที่คุณต้องการ
2. ไปที่ การสนับสนุน > การสนับสนุนโทรศัพท์มือถือ > เลือกรุ่น (LG-P880) > คลิก **OSP** (On-Screen Phone) เพื่อดาวน์โหลด จากนั้น คุณสามารถติดตั้ง On-Screen Phone ลงในคอมพิวเตอร์ของคุณ

อุปกรณ์เสริม

อุปกรณ์เสริมเหล่านี้มีให้ใช้กับ LG-P880 (รายการที่อธิบายด้านล่างอาจเป็นตัวเลือกเสริม)

อะแดปเตอร์
สำหรับชาร์จ
แบตเตอรี่



แบตเตอรี่



ชุดหูฟังสเตอริโอ



สายเคเบิลข้อมูล
เชื่อมต่อโทรศัพท์
LG-P880 ของคุณ
กับคอมพิวเตอร์



คู่มือการใช้
เรียนรู้เพิ่มเติม
เกี่ยวกับโทรศัพท์
LG-P880



LG Tag+



หมายเหตุ:

- ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น
- การไม่ปฏิบัติตามดังกล่าวอาจมีผลให้การรับประกันสิ้นสุดลง
- อุปกรณ์เสริมอาจแตกต่างกันในบางพื้นที่

ศูนย์บริการ LG โดย บริษัท แอลจี อีเลคทรอนิกส์ (ประเทศไทย) จำกัด

ศูนย์ซ่อมสำนักงานใหญ่ตากสิน

เลขที่ 72/127 ถ. สมเด็จพระเจ้าตากสิน แขวงบุดโคล เขตธนบุรี
กรุงเทพฯ 10600

วันและเวลาทำการ : จันทร์-เสาร์, 08:00 - 18:00น.

Call center : 0-2878-5757

การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหามางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาดของซิมการ์ด	ไม่ได้ใส่ซิมการ์ดในโทรศัพท์ หรือใส่ซิมการ์ดไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย/ เครือข่ายขาดหาย	สัญญาณอ่อน หรือคุณอยู่นอกเครือข่ายผู้ให้บริการ	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย
	ผู้ให้บริการใช้บริการใหม่	ตรวจสอบว่าซิมการ์ดใช้งานมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สาขาผู้ให้บริการเครือข่ายใกล้บ้าน โปรดติดต่อติดต่อผู้ให้บริการ
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกันคุณต้องยืนยันรหัสใหม่โดยป้อนรหัสใหม่ซ้ำ	หากคุณลืมรหัส โปรดติดต่อผู้ให้บริการ
	รหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือดองลงทะเลเบียน	ติดต่อผู้ให้บริการ
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการติดต่อหมายเลข	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต
	มีการใส่ซิมการ์ดใหม่	ตรวจสอบข้อกำหนดใหม่
	ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่โดยใช้รหัส PIN2

การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
เปิดเครื่อง โทรศัพท์ ไม่ได้	กดปุ่มเปิด/ปิดแล้วปล่อย เร็วเกินไป	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที
	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่ ตรวจสอบสัญลักษณ์กำลัง ชาร์จบนหน้าจอ
	ขั้วแบตเตอรี่สกปรก	ทำความสะอาดขั้วแบตเตอรี่
ข้อผิดพลาด เกี่ยวกับการ ชาร์จ	ไม่ได้ชาร์จแบตเตอรี่	ชาร์จแบตเตอรี่
	อุณหภูมิภายนอกร้อนหรือ เย็นเกินไป	ตรวจสอบให้แน่ใจว่าโทรศัพท์กำลังชาร์จ ไฟที่อุณหภูมิปกติ
	มีปัญหาที่ขั้วสัมผัส	ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อ กับโทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น
	ไม่มีกระแสไฟฟ้า	เสียบปลั๊กอุปกรณ์ชาร์จในช่องอื่น
	อุปกรณ์ชาร์จชำรุด	เปลี่ยนอุปกรณ์ชาร์จ
	อุปกรณ์ชาร์จไม่ถูกต้อง	ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น
	แบตเตอรี่ชำรุด	เปลี่ยนแบตเตอรี่
หมายเลข โทรศัพท์ใช้ โทรออก ไม่ได้	กำลังใช้งานฟังก์ชันกำหนด หมายเลขโทรออก	ตรวจสอบเมนูตั้งค่า และปิดฟังก์ชันดังกล่าว
ไม่สามารถรับ/ ส่งข้อความตัวอักษร และรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความบางข้อความออกจากโทรศัพท์
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน
การ์ด SD ไม่ทำงาน	สนับสนุนระบบไฟล์ FAT16, FAT32	ตรวจสอบระบบไฟล์ของการ์ด SD ผ่านตัวอ่านการ์ด หรือฟอร์แมตการ์ด SD โดยใช้โทรศัพท์

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หน้าจอไม่ทำงานเมื่อรับสาย	เซนเซอร์รับสัญญาณมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณหรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์รับสัญญาณสะอาด
ไม่มีเสียง	โหมตสัน	ตรวจสอบการตั้งค่าสถานะของเมนูเสียงเพื่อให้แน่ใจว่าคุณไม่ได้อยู่ในโหมตสันหรือโหมตปิดเสียง
โทรศัพท์ค้างหรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ถอดแบตเตอรี่ออก ใส่กลับเข้าไปอีกครั้ง และเปิดโทรศัพท์ ลองใช้งานการอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์





LG-P880 User Guide

This guide helps you to get started using your phone.

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.



Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program.

To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.'

The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

Contents

Guidelines for safe and efficient use	5	Calls	36
Getting to know your phone	11	Making a call	36
Device components	18	Calling your contacts	36
QuickMemo function	20	Answering and rejecting a call	36
Installing the SIM card and battery	22	Adjusting call volume	36
Charging your phone	23	Making a second call	36
Using the memory card	23	Viewing your call logs	37
Locking and unlocking the screen	24	Call settings	37
Secure your lock screen	25	Contacts	38
Your Home screen	26	Searching for a contact	38
Touch screen tips	26	Adding a new contact	38
Home	26	Favourite contacts	38
Customising the Home screen	27	Moving contacts from your Old Device to your New Device	39
Returning to recently-used applications	27	Messaging	40
Notification drawer	27	Sending a message	40
Viewing the status bar	28	Threaded box	40
Onscreen keyboard	29	Changing your message settings	40
Entering accented letters	29	E-mail	41
Google account set up	30	Managing an email account	41
Connecting to Networks and Devices	31	Working with account folders	41
Wi-Fi	31	Composing and sending email	41
Connecting to Wi-Fi networks	31	Camera	43
Bluetooth	31	Getting to know the viewfinder	43
Sharing your phone's data connection	32	Using the advanced settings	44
To rename or secure your portable hotspot	33	Taking a quick photo	45
Using SmartShare	34	Once you've taken a photo	45
		Viewing your saved photos	46

Contents

Video camera	47	Backup	55
Getting to know the viewfinder	47	Back up your smart phone data	56
Using the advanced settings	48	Scheduling automatic backups	56
Recording a quick video	48	Restoring smart phone data.....	57
After recording a video	48	Google+	58
Watching your saved videos	49	Voice Search	58
Adjusting the volume when viewing a video.....	49	Downloads	58
Multimedia	50	The web	59
Video Player	50	Internet	59
Playing a video	50	Using the web toolbar	59
Gallery	50	Using options.....	59
Music.....	50	Chrome.....	59
Transferring music files using Media sync (MTP).....	50	Settings	61
Playing a song	51	WIRELESS & NETWORKS.....	61
FM Radio.....	52	DEVICE.....	63
Searching for stations	52	PERSONAL	65
LG SmartWorld	53	SYSTEM	66
How to Get to LG SmartWorld from Your Phone	53	Phone software update	66
How to use LG SmartWorld.....	53	DivX HD.....	67
Utilities	54	LG On-Screen Phone	69
Setting your alarm.....	54	On-Screen Phone icons.....	69
Using your calculator.....	54	Accessories	70
Adding an event to your calendar	54	Troubleshooting	71
Voice Recorder	54		
Task Manager.....	55		
Polaris Office 4	55		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-P880 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested for use at the ear is 0.618 W/kg (10g) and when worn on the body is 0.594 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone

over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that

Guidelines for safe and efficient use

you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

Guidelines for safe and efficient use

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-P880** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

Ambient temperatures

Max: +50°C (discharging),
+45°C (charging)

Min: -10°C

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>
All referred licence terms, disclaimers and notices are available for download with the source code.

Contact office for compliance of this product :

LG Electronics Inc.
EU Representative, Krijgsman 1,
1186 DM Amstelveen, The Netherlands

Getting to know your phone


Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE category.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.


2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.


To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery**.

The battery status (charging or not charging) and battery level (percentage charged) is displayed at the top of the screen.

Getting to know your phone

To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery** > **Battery use**.

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Using folders

You can combine several app icons in a folder. Drop one app icon over another on a home screen, and the two icons will be combined.

4. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

5. Using unlock pattern

Set unlock pattern to secure your phone. This opens a screen that guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure if you forgot pattern lock.

Caution: Create a Google account before setting an unlock pattern and remember Backup PIN you created while creating Pattern lock.

WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you can't recall your unlock Pattern, PIN, or Password:

<If you have forgotten pattern>

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgot Pattern button on the bottom of the screen. You are then required to log in with your Google Account or you have to enter Backup PIN which you entered while creating Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

<If you have forgotten PIN or Password>

If you forgot your PIN or Password, you need to do hard reset.

Caution: If you perform a hard reset, all user applications and user data are deleted.

Note: If you have not logged in Google Account and forgot Unlock Pattern, you need to enter Backup PIN.

6. Using the hard reset (Factory reset)

If your phone does not restore to the original condition, use a Hard Reset (Factory Reset) to initialise it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key**.
- 3 Once LG Logo appears on the screen, release all Keys.
- 4 After some seconds, allow you to select factory reset function in the Android system recovery utility.
- 5 Scroll the list by Volume keys and select it by **Power/Lock key**.

WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to back up any important data before performing a Hard Reset.

7. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To return to view list recently used applications:

Simply press and hold the **Home** key.

To stop applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** > **Running** from the DEVICE
- 2 Scroll and touch the desired application and touch **Stop** to stop it.

8. Installing PC Software (LG PC Suite)

"LG PC Suite" PC Application is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

With your "LG PC Suite" PC Application, You Can...

- Manage and play your media contents (music, movie, pictures) on your PC.
- Send multimedia contents to your device.
- Synchronises data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device.
- Play multimedia contents of your PC from other device.

NOTE: You can use the Help menu from the application to find out how to use your "LG PC Suite" PC application.

Installing "LG PC Suite" PC Application
"LG PC Suite" PC application can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support >** Select the Model (LG-P880).
- 3 Click **PC Sync** from **Download**, and click **WINDOW PC Sync Download** to download "LG PC Suite" PC software.

System Requirements for "LG PC Suite" PC software

- OS: Windows XP 32 bit(Service pack 2), Windows Vista 32 bit/64 bit, Windows 7 32 bit/64 bit
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 100 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect a LG device and PC and installed automatically when you install "LG PC Suite" PC software.

9. Synchronising your phone to a Computer

Data from your device and PC can be synchronised easily with "LG PC Suite" PC application for your convenience. Contacts, schedules, and bookmarks can be synchronised.


The procedure is as follows:


- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 After connection, run the program and select the device section from the category on the left side of the screen.
- 3 Click [Personal information] to select.
- 4 Select the checkbox of contents to synchronise and click the **Sync** button.

10. Synchronising your phone to a computer via USB


NOTE: To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC.

Please refer to previous pages to install LG PC Suite.

- 1 Touch  > **Apps** tab > **Settings** > **Storage** from the DEVICE to check out the storage media. (If you want to transfer files from or to a memory card, insert a memory card into the phone.)
- 2 Connect the phone to your PC using the USB cable.
- 3 USB connection mode list will appear, and select **Media sync (MTP)** option.
- 4 Open the removable memory folder on your PC. You can view the mass storage content on your PC and transfer the files.
- 5 Copy the files from your PC to the drive folder.
- 6 Select Charge only option to disconnect the phone.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch  > **Charge only**.

To disconnect your phone from the computer:

Open the notification drawer and touch  > **Charge only** to disconnect your phone from the computer safely.

11. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-P880 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

12. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on.


OR

Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Getting to know your phone

Device components

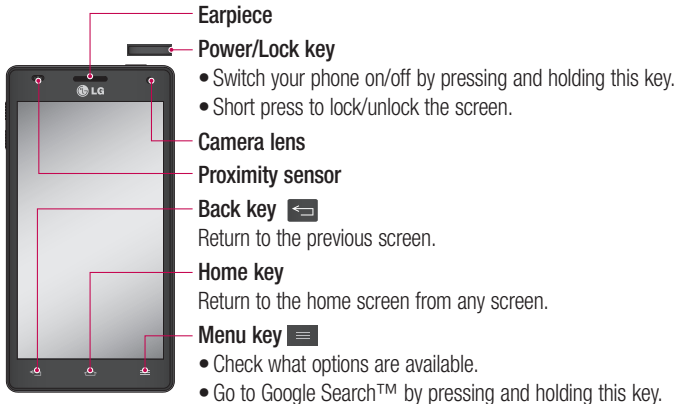

NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.

WARNING


Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.



Volume keys

- **In the home screen:** Control ringer volume.
- **During a call:** Control your earpiece volume.
- **When playing a track:** Control volume continuously.


Tip! Once press the volume up and down keys simultaneously, you can use QuickMemo function.

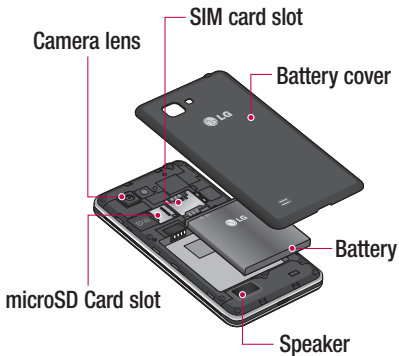

Getting to know your phone

QuickMemo function

Use the **QuickMemo function** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

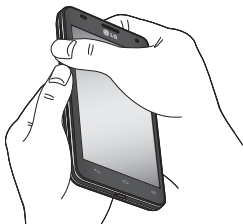


OR



OR

Touch and slide the status bar downward and touch .

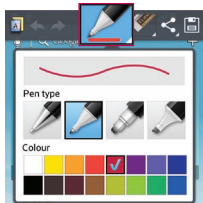

- 2 Select the desired menu option from **Pen type**, **Colour**, **Eraser** and create a memo.









- 3 Touch  in the Edit menu to save the memo with the current screen.

NOTE: Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

Using the QuickMemo options

You can easily use the QuickMenu options when using the QuickMemo function.

	Selects whether to use the background screen or not.
	Undo or Redo.
	Selects the pen type and the colour.
	Erases the memo that you created.
	Touch to send your memo to others or share it via social network services.
	Saves the memo with the current screen in the Gallery .

Viewing the saved QuickMemo


Touch **Gallery** and select the QuickMemo album.

Getting to know your phone


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 To remove the battery cover, hold the phone firmly in one hand. With your other hand, lift off the battery cover with your thumbnail as shown in figure.

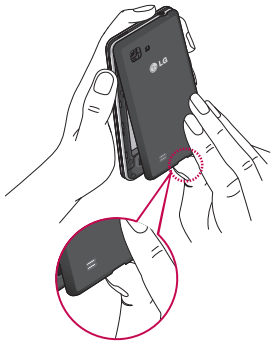

- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

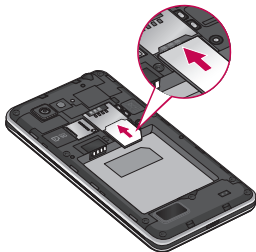

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery (1) and pressing it down until it clicks into place (2).

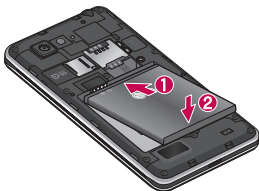

- 4 Align the battery cover over the battery compartment (1) and press it down until it clicks into place (2).



Charging your phone

The charger connector is at the bottom of the phone. Insert the charger and plug it into an electrical outlet.



NOTE

- The battery must be fully charged initially to improve battery lifetime.
- Do not open the battery cover during the charging your phone.


Using the memory card

To insert a memory card:

Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

To remove the memory card safely:

Touch  > **Apps** tab > **Settings** > **Storage** from the **DEVICE** > **Unmount SD card** > **OK**.

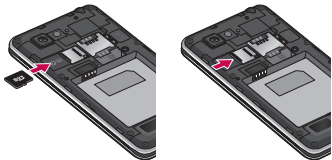

Getting to know your phone

NOTE: The LG-P880 supports memory cards up to 64 GB.


WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may get corrupted.

To format the memory card:

Your memory card may already be formatted. If it isn't, you must format it before you can use it.


NOTE: All files on your memory card are deleted when it is formatted.

- 1 On the home screen, touch  > **Apps** tab to open the menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Touch **Unmount SD card** and touch **OK** to confirm it.
- 4 Touch **Erase SD card** > **Erase SD card** > **Erase everything**, then confirm your choice.
- 5 If you have set a pattern lock, input the pattern lock then select **Erase everything**.


NOTE: If there is content on your memory card, the folder structure may be different after formatting as all the files will be deleted.

Locking and unlocking the screen

If you do not use the phone for a while, the screen is turned off and locked automatically. This helps to prevent accidental touches and saves battery power.

When you are not using the LG-P880, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you set lock screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The lock screen will appear. Touch and slide the lock screen in any direction to unlock your home screen. The last screen you viewed will open.

Secure your lock screen

You can lock your screen so that only you can unlock it to access your phone.

To set an Unlock Pattern, PIN or Password for the first time:

- Touch  > **Apps** tab > **Settings** > **Lock screen** > **Select screen lock** > **None, Swipe, Face Unlock, Pattern, PIN** or **Password**.

NOTE:

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the **Forgot pattern** button. You are then required to log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – To choose a menu/option or open an application, touch it.

Touch and hold – To open an options menu or grab an object you want to move, touch and hold it.

Drag – To scroll through a list or move slowly, drag across the touch screen.

Flick – To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Home

Simply swipe your finger to the left or right to view the panels. You can customise each panel with Apps, Downloads, Widgets and wallpapers.


NOTE: Some screen images may be different depending on your phone provider.

On your home screen, you can view menu icons at the bottom of the screen. Menu icons provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.

 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

 Touch the **Apps** icon at the bottom of the screen. You can then view all your installed applications. To open any application, simply touch the icon in the applications list.

Customising the Home screen

You can customise your home screen by adding Apps, Downloads, Widgets or Wallpapers. For more convenience using your phone, add your favourite apps and widgets to the home screen.

To add items on your home screen:

- 1 Touch and hold the empty part of the home screen.
Or touch **+** at the top of the right side.
- 2 In the Add Mode menu, select items you want to add. You will then see added items on the home screen.
- 3 Drag it to the location you want and lift your finger.

To remove an item from the home screen:

- **Home screen** > touch and hold the icon you want to remove > drag it to 


TIP! To add an application icon to the home screen from the Apps menu, touch and hold the application you want to add.

Returning to recently-used applications



- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to your current application.

Notification drawer

The notification drawer runs across the top of your screen.



Touch and slide the notification drawer down with your finger.

Touch  >  to manage the Notifications. Here you can check and manage QuickMemo, Sound profile, Wi-Fi, Bluetooth, NFC, Accounts & sync, Airplane mode, Auto-rotate screen, Data enabled, GPS or Portable Wi-fi hotspot.

Your Home screen

Viewing the status bar



The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.



Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

Icon	Description
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	NFC is on
	Vibrate mode
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail


Icon	Description
	New Google Talk message
	New message
	Song is playing
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

 Tap to switch to the numbers and symbols keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.

Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features, you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS & NETWORKS
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.

- 3 Tap Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
 - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 After connecting to a Wi-Fi network, the status bar displays icon that indicate Wi-Fi status.

Bluetooth


You can use Bluetooth to send data by running a corresponding application as on most other mobile phones.

TIP! With LG-P880, you can enjoy Bluetooth high speed. If the device you want to share files which also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

Connecting to Networks and Devices

Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > Set **Bluetooth** to **ON** from the WIRELESS & NETWORKS
- 2 Tap **Bluetooth** menu again. Your phone will scan for and display the IDs of all available Bluetooth in-range devices. If the device you want to pair which isn't on the list, make sure the target device is set to be discoverable, then tap **Search for devices** again.
- 3 Choose the device you want to pair up with from the list.

Once the pairing is successful, your device will connect to the device.

Sending pictures using Bluetooth

- 1 Select a **Picture** >  > **Bluetooth**
- 2 Check whether **Bluetooth** is **ON**, then select **Search for devices**.
- 3 Choose the device you want to send data to from the list.

Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than a single device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

To change Portable Wi-Fi hotspot settings:

- Touch  > **Apps** tab > **Settings** > **More** from the WIRELESS & NETWORKS > **Portable Wi-Fi hotspot** > Choose options that you want to adjust

TIP!

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don't usually need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 On the home screen, touch  > **Apps** tab > **Settings**
- 2 Touch **More** from the WIRELESS & NETWORKS and select **Portable Wi-Fi hotspot**.
- 3 Ensure **Portable Wi-Fi hotspot** is ticked.
- 4 Touch **Set up Wi-Fi hotspot**.

- The **Set up Wi-Fi hotspot** dialog box will open.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **set up Wi-Fi hotspot** dialog box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.

5 Touch **Save**.

ATTENTION!



If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

Connecting to Networks and Devices

Using SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a Wi-Fi network. Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Press  and select **Settings**.
- 3 Touch Discoverable checkbox to turn off.
 - Touch **Always accept request** to turn on if you would like to automatically accept sharing requests from other devices.
 - Touch **Receive files** to turn on if you would like to automatically allow upload files to my phone from other devices.
- 4 Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos** and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC).

NOTE: Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC).

- 1 Touch the top right button to or select the device from renderer lists.
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch a content thumbnail or press the **Menu** key and select **Play** button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE: Make sure that your renderer device is properly configured.


- 1 While browsing your pictures or videos using the **Gallery** application, touch  to select files. Then you will be able to select multiple files to be shared.

- 2 Touch **Share** on the menu and select the **SmartShare**.
- 3 **SmartShare** is automatically launched with the selected files.
- 4 Select the device from renderer lists to play the files.

NOTE: Follow the similar steps to use the Music Player, Camera and Video player to share contents.

Notice: Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.


To download contents from remote content library

- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail then touch **Download menu key**.

Notice: A few types of contents are not supported.

To upload contents from my phone to remote content library





NOTE: Make sure that SD card is correctly mounted and the Receive files in settings menu is checked.


- 1 Touch  > **Apps** tab > **SmartShare**
- 2 Touch the top left button and select **My phone**.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then touch the **Upload menu key**.
- 5 Select a device of remote content library to be uploaded.

Notice: Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.


Calls

Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

TIP! To enter "+" to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When you receive a call in Lock state, hold and slide the  to Answer incoming call.

Hold and slide the  to Decline an incoming call.

Hold and slide the **Quick msg** icon from the bottom if you want to send one.





TIP! Decline with message


You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

Adjusting call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

Making a second call

- 1 During your first call, touch **Menu > Add call** and dial the number. Also, you can go recent dialled list by touching  or can search contacts by touching  and select the number you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge call** to make a conference call.

- 5 To end active calls, touch **End** or press Home Key and slide the notification bar down and select **End call** icon .

NOTE: You are charged for each call you make.

Viewing your call logs

On the home screen, touch  and choose the **Call logs** tab .


View a complete list of all dialled, received and missed calls.

TIP! Touch any call log entry to view the date, time and duration of the call.

TIP! Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.


- 1 On the home screen, touch .
- 2 Touch menu.
- 3 Tap **Call settings** and choose the options that you want to adjust.

Contacts

Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to Contacts** > **Create new contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.



Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns colorful.

Removing a contact from your favourites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, select **Favourites** at the top of the list and choose a contact to view its details.
- 3 Touch the colorful star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Moving contacts from your Old Device to your New Device



Export your contacts as a CSV file from your old device to your PC using a PC sync program.

- 1 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 2 On the top menu, select **Device > Import to device > Import contacts**.
- 3 A popup window to select the file type and a file to import will appear.
- 4 On the popup, click the **Select a file** and Windows Explorer will appear.
- 5 Select the contacts file to import in Windows Explorer and click the **Open**.
- 6 Click **OK**.
- 7 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 8 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 9 Click **OK**.


Messaging


Your LG-P880 combines SMS and MMS into one intuitive, easy-to-use menu.


Sending a message

- 1 Touch  on the home screen, and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

- 3 Touch **Enter message** field and start to compose your message.
- 4 Press  to open the Options menu. Choose from **Quick message**, **Insert smiley**, **Schedule sending** and **Add subject**.
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after Recipient Name/Number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Changing your message settings

Your LG-P880 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

E-mail

You can use the Email application to read emails from services other than Gmail. The Email application supports the following account types: POP3, IMAP and Exchange.

Your service provider or system administrator can provide the account settings you need.

Managing an email account

The first time you open the **E-mail** application, a setup wizard opens to help you to set up an email account.

To add another email account:



- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Add account**

After the initial setup, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

To change an email account's setting:

- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Entire Settings**

To delete an email account:



- Touch  > **Apps** tab > **E-mail** > in the account screen, touch  > **Remove account** > touch an account you want to delete > **Delete**

Working with account folders

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

Composing and sending email

To compose and send a message

- 1 While in the **E-mail** application, touch the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with semicolon.
- 3 Add Cc/Bcc and add attachment files if required.
- 4 Enter the text of the message.
- 5 Touch the .

If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder

E-mail


until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

TIP! When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

Camera

To open the Camera application, tap **Camera**  on the Home screen.


Getting to know the viewfinder

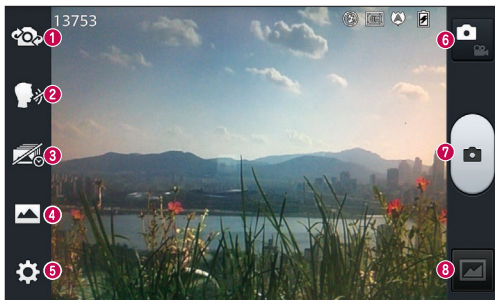













- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Cheese shutter** – To take a photo, say one of the following words: Cheese, Smile, Whisky, Kimchi or LG.
- 3 Time catch shot** – Touch this icon to capture the missing moment before pressing the shutter.
- 4 Shot mode** – Choose from **Normal**, **HDR**, **Panorama** or **Continuous shot**.
- 5 Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.
- 6 Video mode** – Touch this icon to switch to video mode.
- 7 Taking a photo**
- 8 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos while in camera mode.

NOTE: Please ensure the camera lens is clean before taking pictures.






Using the advanced settings

In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap the **Back** key.

	Touch if you want to change the viewfinder menu.
	Allows you to turn on the flash when taking a photo in dark conditions.
	Zoom in or out.
	Defines and controls the amount of sunlight entering the photo.
	Focuses on a specific spot.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	Finds the appropriate color and light settings for the current environment.

	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geo tagging, you can see the pictures displayed on a map.


NOTE: This function is only available when the GPS function is active.

	Selects a shutter sound.
	Automatically shows you the picture you just took.
	Select storage to save photos.
	Restore all camera default settings.
	Touch this whenever you want to know how a function works. This icon will provide you with a quick guide.

TIP!

- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.





Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 A focus box will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Touch  to capture the photo.

Once you've taken a photo


Your captured photo will appear on the screen if Auto review is set to On (refer to Using the advanced settings).

Touch  to view the last photo you took.

	Touch to share your photo using the SmartShare function.
	Touch to take another photo immediately.
	Touch to send your photo to others or share it via social network services.
	Touch to delete the photo.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with your SNS community.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Touch the **Menu key**  to open all advanced options.

Set image as – Touch to use the photo as a **Contact photo**, **Home screen wallpaper** or **Lock screen wallpaper**.

Move – Touch to move the photo to another place.

Copy – Touch to copy the selected photo and save it to another album.

Rename – Touch to edit the name of the selected photo.

Rotate left/right – To rotate left or right.


Crop – Crop your photo. Move your finger across the screen to select the area to be cropped.

Edit – View and edit the photo.

Slideshow – Automatically shows you the images in the current folder one after the other.

Details – Find out more information about the contents.


Viewing your saved photos

You can access your saved photos when in camera mode. Just tap the Gallery icon  and your Gallery will be displayed.

- To view more photos, scroll left or right.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

Video camera

Getting to know the viewfinder

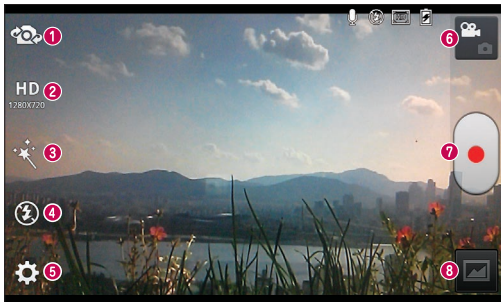

- 1 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 Video size** – Touch to set the size (in pixels) of the video you are recording.
- 3 Live effect** – Live effect provides various visual effects when taking a video.
- 4 Flash** – Allows you to turn on the flash when taking a video in dark conditions.
- 5 Settings** – Touch this icon to open the settings menu.
- 6 Camera mode** – Touch this icon to switch to camera mode.
- 7 Start recording**
- 8 Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.











TIP!

When recording a video, place two fingers on the screen and pinch to use the Zoom function.

Video camera

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Touch if you want to change the viewfinder menu.
	Zoom in or zoom out.
	Defines and controls the amount of sunlight entering the video.
	Improves color quality in various lighting conditions.
	Choose a colour tone to use for your new view.
	Activate this to use your phone's location-based services.
	Choose Off to record a video without sound.
	Auto review automatically shows you the video you just recorded.
	Select storage to save videos.
	Restore all video camera default settings.



Touch this if you want to know how this function works. This icon will provide you with a quick guide.

Recording a quick video

- 1 Open the **Camera** application and touch the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.
- 4 Touch  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After recording a video

A still image representing your video will appear on the screen if Auto review is set to On.

Touch  to view the last video you recorded.



Touch to share your video using the **SmartShare** function.




Touch to record another video immediately.



Touch to send your video to others or share it via social network services.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Watching your saved videos

- 1 In the viewfinder, tap .
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.


Multimedia










You can store multimedia files on a memory card for easy access to all your multimedia files.

Video Player

Your LG-P880 has a built-in video player that lets you play all your favourite videos. To access the video player, Touch  > **Apps** tab > **Video Player**.

Playing a video

- 1 In the home screen, touch  > **Apps** tab > **Video Player**.
- 2 Select the video you want to play.

	Touch to pause playback a video.
	Touch to resume playback a video.
	Touch to go 10 seconds forward.
	Touch to go 10 seconds backward.
	Touch to manage the video volume.
	Touch to set Dolby audio effect when connected with headset jack.
	Touch Speed controller icon and drag the progress bar to control playback speed.
	Touch Preview frame icon and drag the handler of seek bar to explore the content with a preview screen.
	Touch to lock a video screen.




Touch the direct list icon to see the list of videos.

To change the volume while watching a video, press the up and down volume keys on the left-hand side of the phone. Touch and hold any video in the list. It displays **Delete** and **Details** as options.

Gallery

Touch  > **Apps** tab > **Gallery**. Open a list of catalogue bars that store all your multimedia files.

Music


Your LG-P880 has a built-in music player that lets you play all your favourite tracks. To access the music player, Touch  > **Apps** tab > **Music**.







Transferring music files using Media sync (MTP)



- 1 Connect the LG-P880 to a PC using a USB cable.
- 2 If you haven't installed LG Android Platform Driver on your PC, you need to change the settings manually. Choose **Settings** > **PC connection** > **USB connection type**, then select **Media sync (MTP)**.

- 3 You can view the mass storage content on your PC and transfer the files.

Playing a song

- 1 In the Home screen, touch  > **Apps** tab > **Music Player**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

	Touch to find the files with YouTube
	Touch to share your music via SmartShare function.
	Touch to set shuffle mode
	Touch to set repeat mode
	Touch to manage the music volume
	Touch to pause playback
	Touch to resume playback
	Touch to skip to the next track on the album or in the playlist
	Touch to go back to the beginning of the song. Touch twice to return to the previous song
	Touch to set the favourites

	Touch to see the current playlist
	Touch to set Dolby audio effect when connected with a headset jack

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone. Touch and hold any song in the list. It displays **Play, Add to playlist, Share, Set as ringtone, Delete, Details** and **Search**.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

FM Radio

Your LG-P880 has a built-in FM Radio so you can tune in to your favourite stations and listen on the go.

NOTE: You need to use your headphones to listen to the radio. Insert it into the headphone jack.

TIP! To improve radio reception, extend the headset cord as this also functions as the radio antenna. If you connect a headset not specifically made for radio reception, radio reception may be poor.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers.

Tuning in automatically


- 1 In the home screen, touch  > **Apps** tab > **FM Radio**.
- 2 Touch , then select **Scan**.
- 3 During auto scanning, touch **Cancel** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: You can also manually tune in to a station using the on-screen wheel.


LG SmartWorld

LG SmartWorld offers an assortment of exciting content - games, applications, wallpaper and ringtones - giving LG phone users the chance to enjoy richer "Mobile Life" experiences.

How to Get to LG SmartWorld from Your Phone

- 1 Tap the  icon to access LG SmartWorld.
- 2 Tap Sign in and enter ID/PW for LG SmartWorld. If you have not yet signed up, tap Register and get a LG SmartWorld membership.
- 3 Download the content you want.

NOTE: What if there is no icon?

- 1 Using a mobile Web browser, access LG SmartWorld (www.lgworld.com) and select your country.
- 2 Download LG SmartWorld App.
- 3 Execute and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

How to use LG SmartWorld

- Participate in monthly LG SmartWorld promotions.
- Try the easy "Menu" buttons to find what you're looking for fast.

Categories – Find contents by category (e.g. Education, Entertainment, Games, etc).

Search – Search Content.

Apps for you – Recommended content based on your previous choices.

My apps – List of downloaded/to-be updated contents.

Settings – Set Profile and Display.



Sign in – Set your ID and Password.

- Try other useful functions as well. (Content Detail screen)



NOTE: LG SmartWorld may not be available in all carriers or countries.

Utilities

Setting your alarm

- 1 Touch  > **Apps** tab > **Alarm/Clock** > 
- 2 After you set the time, the LG-P880 lets you know how much time is left before the alarm will sound.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto app starter**, **Puzzle lock** and **Memo**. Touch **Save**.

Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, -, x or ÷) followed by =.
- 4 For more complex calculations, touch , select the **Advanced panel**, then choose sin, cos, tan, log and so on.



Adding an event to your calendar



- 1 Touch  > **Apps** tab > **Calendar**
- 2 On the middle of the screen, you can find the different view types of the Calendar (Day, Week, Agenda).
- 3 Tap on the date you want to add event on and touch 
- 4 Touch **Event name** then enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you want your event to start and finish.
- 6 If you want to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **REPEAT**, and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.


Voice Recorder

Use the voice recorder to record voice memos or other audio files.


Recording a sound or voice

- 1 Touch  > the **Apps** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.

- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: Touch  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching .
- 2 Choose from **Bluetooth, E-mail, Gmail, Memo** or **Messaging**. When you select Bluetooth, E-mail, Gmail, Memo or Messaging, the voice recording is added to the message. You may then write and send the message as you usually would.

Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications. You can also uninstall the applications you have installed on your device.

Polaris Office 4

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office 4**.

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in their original documents.

Backup

About backing up and restoring smart phone data

It recommends that you regularly create and save a backup file on the Storage card, especially before you update any software. Maintaining a current backup file on Storage memory might allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.


This Backup application support between LG smart phones, other S/W version or

OS. And so, when you buy the new LG smart phone, you can back up the current LG-P880 smart phone data on your new one.

If you have preloaded application Backup & Restore on your smart phone, you can back up and restore most of your smart phone data, **Apps** including unprotected applications, their settings, **Applications (Downloaded)**, **Applications (Pre-installed)**, **Bookmarks**, **Calendar**, **Call log**, **Contacts**, **Home screen**, **Messages**, and **System settings** using this application.

- To perform a manual backup of your smart phone data.
- To schedule automatic backups of your smart phone data.
- To restore your smart phone data.


Back up your smart phone data

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Backup > SD Card** or **Internal Storage**.
- 3 Touch the **Add new** to enter a name for your backup file, and then select **Continue**.

- 4 Select the check box next to the item you want to back up, and then select **Continue** to back up.
- 5 When all selected files backed up, you will see the message '**Done**' and select **Continue** to finish backing up data.

Scheduling automatic backups


You can also enable automatic backups of the data on your smart phone according to your schedule setting. To do this, complete the following steps:

- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Schedule**.
- 3 On the **Scheduled Backup Location** screen, touch **SD Card** or **Internal Storage**.
- 4 From the list, select how often you want to back up your device data and settings, and select **Continue**.
- 5 Select the check box next to the data you want to back up, and then select **Continue** to finish the schedule set.

Restoring smart phone data

To restore data that is in your on-board device memory, mass storage mode must be turned off.

NOTE: All files that are stored on your smart phone are deleted before the backup file is restored.


- 1 Insert to the memory card into the slot and check out the storage status.
- 2 Touch the **Apps** tab , and then select **Backup > Restore > SD Card** or **Internal Storage**.
- 3 On the **Restore** screen, select a backup file that contains the data you want to restore.
- 4 Select the check box next to the item you want to restore, and then select **Continue** to restore to phone.

NOTE: Please note that your phone data will be overwritten with the contents of your backup.


- 5 If the backup file is encrypted, type the password that you set to encrypt.
- 6 When all selected files restored, you will see the message '**Done**' and select **Yes** to restart the phone.

NOTE:

- While in Mass storage mode, this Backup Application cannot be functioned. Select Charge only option when the USB cable is connected.
- You can set Enable encryption to encrypt your backup files for extra protection.

Press the **Menu**  from the **Backup** screen, and select **Settings > Security** and select the check box. And after enabling encryption, To restore synchronised organizer data, you must have an activation password.

NOTE:

You can also enable automatic delete old backups and only keep the most recent backup. Press the **Menu**  from the **Backup** screen, and select **Settings > Scheduled backup > Auto delete old backups** to select the number of scheduled backups to keep.

Google+


Use this application to stay connected with people via Google's social network service.

- Touch  > **Apps** tab > **Google +**.

NOTE: This application may not be available depending on the region or service provider.

Voice Search

Use this application to search webpages using voice.

- 1 Touch  > **Apps** tab > **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

NOTE: This application may not be available depending on the region or service provider.

Downloads

Use this application to see what files have been downloaded through the applications.

- Touch  > **Apps** tab > **Downloads**.

NOTE: This application may not be available depending on the region or service provider.






The web

Internet

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the web toolbar

-  Touch to go back a page.
-  Touch to go forwards a page, to the page you connected to after the current one. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.
-  Touch to go to the Home page.
-  Touch to add a new window.
-  Touch to access bookmarks.

Using options

Press  to view options.

Refresh – Update the current web page.

Save to bookmarks – Add the current web page as bookmark.

Go to Homepage – Allow you to go to a homepage.

Share page – Allows you to share the web page with others.

Find on page – Allows you to find letters or words on the current web page.

Desktop view – Allows you to view the web page as desktop.

Save for offline reading – Save current page to read it during offline.

Settings – Displays Browser settings.

Exit – Exit from the menu list.

Chrome

Use Chrome to search for information and browse webpages.

1 Touch  > **Apps** tab > **Chrome**.

NOTE: This application may not be available, depending on your region and service provider.

Viewing webpages

Tap the Address field, and then enter a web address or search criteria.


The web

Opening a page

To go to a new page, tap  → + **New tab**.

To go to another webpage, tap , scroll up or down and tap the page to select it.

Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

Syncing with other devices


Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap **Menu**  → **Other devices**.

Select a webpage to open.

To view bookmarks, tap .

Settings

In the home screen, touch  > **Apps** tab > **Settings**.

WIRELESS & NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

< **Wi-Fi** >

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

TIP! How to obtain the **MAC address**

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P880 into the router.

You can find the MAC address in the following user interface: Touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced** > **MAC address**.

< **Bluetooth** >

Turns on Bluetooth to connect to Bluetooth devices.

< **Mobile data** >

Displays the data usage and set mobile data limit.

< **Call** >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

Fixed dialing numbers – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Save unknown numbers – Add unknown numbers to contacts after a call.

Voicemail – Allows you to select your carrier's voicemail service.

Call reject – Allows you to set the call reject function. Choose from **Call reject mode** or **Rejection list**.

Decline with message – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Power button ends call – Allows you to select your end call.

Call forwarding – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

Settings

Call barring – Lock incoming, outgoing or international calls.

Call duration – View the duration of calls including Last call, All calls, Dialed calls and Received calls.

Additional settings – Allows you to change the following settings:

Caller ID: Choose whether to display your number in an outgoing call.

Call waiting: If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

< More >

Airplane mode – After switching to airplane mode, all wireless connections are disabled.

Portable Wi-Fi hotspot – You can configure the portable Wi-Fi hotspot settings.

NFC – Your LG-P880 is NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your contents with a NFC tag or another device via simple touch with your device. If you

touch a NFC tag with your device, it will display the tag contents on your device.

NOTE: Be careful not to scratch or damage the inside of the battery cover as this is the NFC antenna.

To switch NFC on or off: From the home screen, touch and slide the notification drawer down with your finger, then select the NFC icon to turn it on.

NOTE: When the Airplane mode is activated, NFC application can be used.

Using NFC: To use NFC, make sure your device is switched on and activate the NFC setting, if disabled.

Android Beam – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then touch your screen. The app determines what gets beamed.

VPN – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

NOTE: You must set a lock screen PIN or password before you can use credential storage.

DEVICE

< Sound >

Sound profile – Choose the Sound, either Vibrate only or Silent.

Volumes – Manage the volume of Phone ringtone, Notification sound, Touch feedback & system, Music, video, games and other media.

Quiet time – Set times to turn off all sounds except alarm and media.

Ringtone with vibration – Vibration feedback for calls and notifications.

Phone ringtone – Allows you to set your default incoming call ringtone.

Notification sound – Allows you to set your default notification ringtone.

Dial pad touch tones – Allows you to set the phone to play tones when using the dialpad to dial numbers.

Touch sounds – Allows you to set your phone to play a sound when you touch

buttons, icons and other onscreen items that react to your touch.

Screen lock sound – Allows you to set your phone to play a sound when locking and unlocking the screen.

Vibrate on touch – Allows you to set the vibration feedback when the phone screen is touched.

< Display >

Brightness – Adjust the screen brightness.

Screen timeout – Set the time for screen timeout.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Font type – Change the type of the display.

Font size – Change the size of the display font.

Front key light – Set the front key LED time.

Motion sensor calibration – Improve the accuracy of the tilt and speed of the sensor.

< Home screen >

Set the **Theme**, **Animation**, **Screen swipe effect**, **Wallpaper** or **Portrait**

Settings

view only. Select the option to set **Scroll screens circularly** and **Home backup & restore**.

< Lock screen >

Select screen lock – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Face Unlock, Pattern, PIN** or **Password**. If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

Wallpaper – Select the wallpaper for your lock screen from Gallery or Wallpaper gallery.

Clocks & shortcuts – Customize clocks & shortcuts on the lock screen.

Owner info – Show owner info on the lock screen.

Lock timer – Set the lock time after screen timeout.

Power button instantly locks – Set the screen lock when the power button is pressed.

Vibrate on touch – Allows you to set the vibration feedback for phone screen touch.

< Gesture >

Move home screen items – Press and hold item and tilt device to move item within home screens or applications.

Tilt sensitivity – Test and adjust sensitivity of tilt sensor for home screen and applications.

Silence incoming calls – Flip phone to silence incoming calls.

Snooze or stop alarm – Flip device to snooze or stop alarm.

Pause video – Flip device to pause playing video.

Help – Help for gesture functions.

< Storage >

INTERNAL STORAGE – View the internal storage usage.

SD CARD – Check total available SD card space. Touch Unmount SD card for safe removal. Erase SD card if you want to delete all data from the SD card.

< Power saver >

Here, you can manage the battery and check the power saving items. Also, you can check the battery use.

< Apps >

You can view and manage the applications.

PERSONAL

< Accounts & sync >

Permits applications to synchronise data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lowers (but does not eliminate) data usage.

< Location access >

Access to my location – If you select Google's location service, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

GPS satellites – If you select GPS satellites, your phone determines your location to street-level accuracy.

Wi-Fi & mobile network location – Lets apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.

< Security >

Set up SIM card lock – Set up SIM card lock or change the SIM PIN.

Password typing visible – Show password as you type.

Phone administrators – View or deactivate device administrators.

Unknown sources – Default setting to install non-Market applications.

Trusted credentials – Display trusted CA certificates.

Install from storage – Choose to install encrypted certificates from your SD card.

Clear credentials – Remove all certificates.

< Language & input >

Use the Language & input settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words you've added to its dictionary.

< Backup & reset >

Change the settings for managing your settings and data.

Back up my data – Set to back up your settings and application data to the Google server.

Backup account – Set to back up your account.

Automatic restore – Set to restore your settings and application data when the applications are reinstalled on your device.

Factory data reset – Reset your settings to the factory default values and delete

Settings

all your data. If you reset the phone in this way, you are prompted to reenter the same information as when you first started Android.

SYSTEM

< Date & time >

Use **Date & time** settings to set how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< Accessibility >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins.

< PC connection >

USB connection type – You can set the desired mode (**Charge only**, **Media sync (MTP)**, **USB tethering**, **LG software** or **Camera (PTP)**).

Ask on connection – Ask USB connection mode when connecting to a computer.

Help – Help for connectivity.

On-Screen Phone – Displaying screen and controlling phone from PC are

available through USB, Bluetooth or Wi-Fi connection.

PC Suite Wi-Fi connection – Check mark this to use **LG PC Suite** with Wi-Fi connection.

< About phone >

View legal information and check phone status and software version.

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature will only be available if and when LG makes a newer firmware version available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before

proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update your phone's software to a newer version conveniently via OTA, without connecting with a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device.

First, you can check the software version on your mobile phone: **Settings > About phone > Software update > Check now for update.**

You can also delay the update by 1 hour, 4 hours, 8 hours or One day. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

NOTE: This feature is dependent on your network service provider, region and country.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-

Settings






on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

LG On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Changes the On-Screen Phone preferences.
-  Exits the On-Screen Phone programme.
-  Maximises the On-Screen Phone window.
-  Minimize the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.

- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and Polaris Office files) to your PC. Simply right-click on the file which you want to send to PC and click on "Save to PC".
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Just select the files you wish to transfer and drag and drop them into the On-Screen Phone window. The files sent are stored in internal SD card.
- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages.

How to install On-Screen Phone on your PC

- 1 Visit LG Home (www.lg.com) and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support > Select the Model (LG-P880) > Click OSP (On-Screen Phone)** to download. You can install the On-Screen Phone on your PC.

Accessories

These accessories are available for use with the LG-P880. (Items described below may be optional.)

Travel adaptor



Battery



Stereo headset



Data cable

Connect your LG-P880 and PC.



User Guide

Learn more about your LG-P880.



LG Tag+



LG Service Center by LG Electronics (Thailand) Co.Ltd.

72/127 Somdetprachaw Taksin Rd.; Bookala, Thonburi,
Bangkok 10600

Working day : Mon - Sat , 08:00 - 18:00

Call center : 0-2878-5757

NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network.	Move towards a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorised.
	New SIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key down for at least two seconds.
	Battery is not charged.	Charge battery. Check charging indicator on the display.
	Battery contacts are dirty.	Clean the battery contacts.

Troubleshooting

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace charger.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.

Message	Possible causes	Possible corrective measures
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.



LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี

1-800-545454

กรุงเทพและปริมณฑล

0-2878-5757

เว็บไซต์และอีเมล :

<http://www.lg.com/th> และ support.lgeth@lge.com

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง
เพื่อความสะดวกในการติดต่อกับ
ศูนย์บริการของแอลจีทั่วประเทศ



CE0168Ⓢ