

OWNER'S MANUAL

KOMPRESSOR ***FOLLOW^{'''}ME[™]*** **VACUUM CLEANER**

This information contains important instructions for the safe use and maintenance of the vacuum cleaner. Especially, please read all of the information on page 3, 4, 5 for your safety. Please keep this manual in an easily accessible place and refer to it anytime.

VB-7720HBK



MFL67608305

www.lg.com

Table of contents

Important safety instructions	3~5
How to use	6~16
Assembling vacuum cleaner	6
Operating vacuum cleaner	8
Using carpet and floor nozzle/Furniture protection nozzle	9
Using 2 in 1 nozzle	10
Using the accessory nozzles	11
FOLLOW ME function.....	12
Emptying dust tank	13
Cleaning dust tank	14
Cleaning air filter and motor safety filter	15
Cleaning exhaust filter	16
What to do if your vacuum cleaner does not work	17
What to do if FOLLOW ME function does not work	17
What to do when the suction performance decreases	17

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your vacuum cleaner to prevent the risk of fire, electric shock, personal injury, or damage when using the vacuum cleaner. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand. This appliance complies with the following EC Directives :-2006/95/EC Low Voltage Directive -2004/108/EC EMC Directive.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION."

These words mean:



WARNING

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.



CAUTION

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.




WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by LG Electronics Service Agent in order to avoid a hazard
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- **Do not plug in if control knob is not in OFF position.**
Personal injury or product damage could result.
- **Keep children away and beware of obstructions when rewinding the cord to prevent personal injury**
The cord moves rapidly when rewinding.
- **Disconnect electrical supply before servicing or cleaning the unit or when cleaner is not in use.**
Failure to do so could result in electrical shock or personal injury.
- **Do not use vacuum cleaner to pick up anything that is burning or smoking such as cigarettes, or hot ashes.**
Doing so could result in death, fire or electrical shock.
- **Do not vacuum flammable or explosive substances such as gasoline, benzene, thinners, propane (liquids or gases).**
The fumes from these substances can create a fire hazard or explosion. Doing so could result in death or personal injury.
- **Do not handle plug or vacuum cleaner with wet hands.**
Doing so could result in death or electrical shock.
- **Do not unplug by pulling on cord.**
Doing so could result in product damage or electrical shock. To unplug, grasp the plug, not the cord.
- **Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.**
Failure to do so could result in electrical shock or personal injury.
- **Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.**
Failure to do so could result in electrical shock or personal injury or fire or product damage.
- **The hose contains electrical wires. Do not use it if it is damaged, cut punctured.**
Failure to do so could result in death, or electrical shock.
- **Do not allow to be used as toy. Close attention is necessary when used by or near children.**
Personal injury or product damage could result.
- **Do not use the vacuum cleaner if the power cord or plug is damaged or faulty.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use vacuum cleaner if it has been under water.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not continue to vacuum if any parts appear missing or damaged.**
Personal injury or product damage could result. In these cases, contact LG Electronics Service Agent to avoid hazard.
- **Do not use an extension cord with this vacuum cleaner.**
Fire hazard or product damage could result.
- **Using proper voltage.**
Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the bottom of vacuum cleaner.
- **Turn off all controls before unplugging.**
Failure to do so could result in electrical shock or personal injury.
- **Do not change the plug in any way.**
Failure to do so could result in electrical shock or personal injury or product damage. Doing so result in death. If plug does not fit, contact a qualified electrician to install the proper outlet.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Repairs to electrical appliances may only be performed by qualified service engineers.**
Improper repairs may lead to serious hazards for the user.
- **Do not put fingers near the gear.**
Failure to do so could result in personal injury.

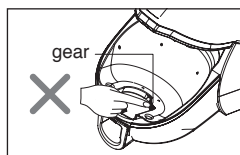

IMPORTANT SAFETY INSTRUCTIONS

CAUTION


- **Do not put any objects into openings.**
Failure to do so could result in product damage.
- **Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.**
Failure to do so could result in product damage.
- **Do not use vacuum cleaner without the dust tank and/or filters in place.**
Failure to do so could result in product damage.
- **Always clean the dust bin after vacuuming carpet cleaners or fresheners, powders and fine dust.**
These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.
- **Do not use vacuum cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc.**
They may damage the cleaner or dust bin.
- **Store the vacuum cleaner indoors.**
Put the vacuum cleaner away after use to prevent tripping over it.
- **The vacuum cleaner is not intended to use by young children or infirm people without supervision.**
Failure to do so could result in personal injury or product damage.
- **Only use parts produced or recommended by LG Electronics Service Agents.**
Failure to do so could result in product damage.
- **Use only as described in this manual. Use only with LG recommended or approved attachments and accessories.**
Failure to do so could result in personal injury or product damage.
- **To avoid personal injury and to prevent the machine from falling when cleaning stairs, always place it at the bottom of stairs.**
Failure to do so could result in personal injury or product damage.
- **Use accessory nozzles in sofa mode.**
Failure to do so could result in product damage.
- **Do not grasp the tank handle when you are moving the vacuum cleaner.**
The vacuum cleaner's body may fall when separating tank and body. Personal injury or product damage could result. You should grasp the carrier handle when you are moving the vacuum cleaner. (Page 13)
- **Make sure the filters (motor safety filter and air filter) are completely dry before replacing in the machine.**
Failure to do so could result in product damage.
- **Do not dry the filter in an oven or microwave.**
Failure to do so could result in fire hazard.
- **Do not dry the filter in a clothes dryer.**
Failure to do so could result in fire hazard.
- **Do not dry near an open flame.**
Failure to do so could result in fire hazard.
- **Do not use filters that is not dried.**
- **If the power cord is damaged, it must be replaced by an approved LG Electronics Service Agent to avoid a hazard.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
Children should be supervised to ensure that they do not play with the appliance.
- **Do not approach to vacuum cleaner suddenly, when FOLLOW ME function activated.**
Failure to do so could result in personal injury or product damage.

Thermal protector :

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. If the vacuum cleaner suddenly shuts off, turn off the switch and unplug the vacuum cleaner. Check the vacuum cleaner for possible source of overheating such as a full dust tank, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum cleaner. After the 30 minute period, plug the vacuum cleaner back in and turn on the switch. If the vacuum cleaner still does not run, contact a qualified electrician.

How to use

Assembling vacuum cleaner

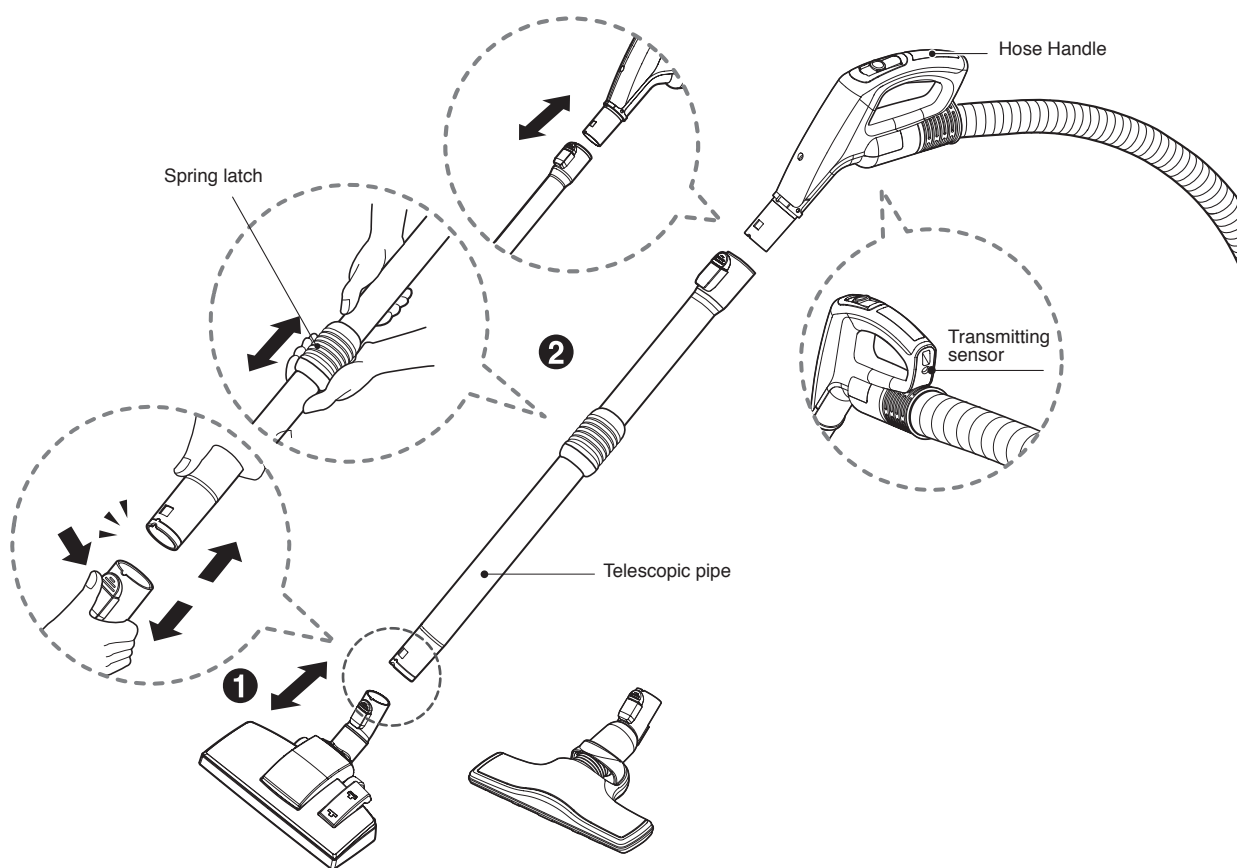


① Carpet and floor nozzle

Push the nozzle into the telescopic pipe.

② Telescopic pipe


- Push telescopic pipe firmly into hose handle.
- Grasp the spring latch to expand.
- Pull out the pipe to desired length.

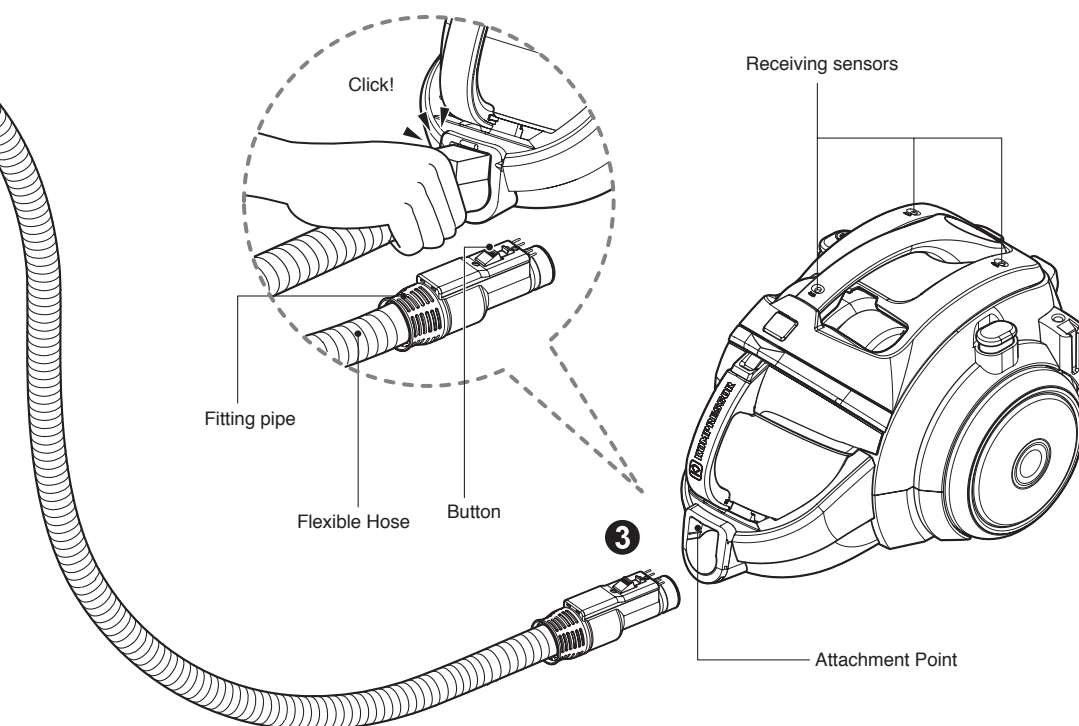

3 Connecting the hose to the vacuum cleaner

Push the fitting pipe on the flexible hose into the attachment point on the vacuum cleaner. To remove the flexible hose from the vacuum cleaner, press the button situated on the fitting pipe, then pull the fitting pipe out of the vacuum cleaner.

How to use Operating vacuum cleaner

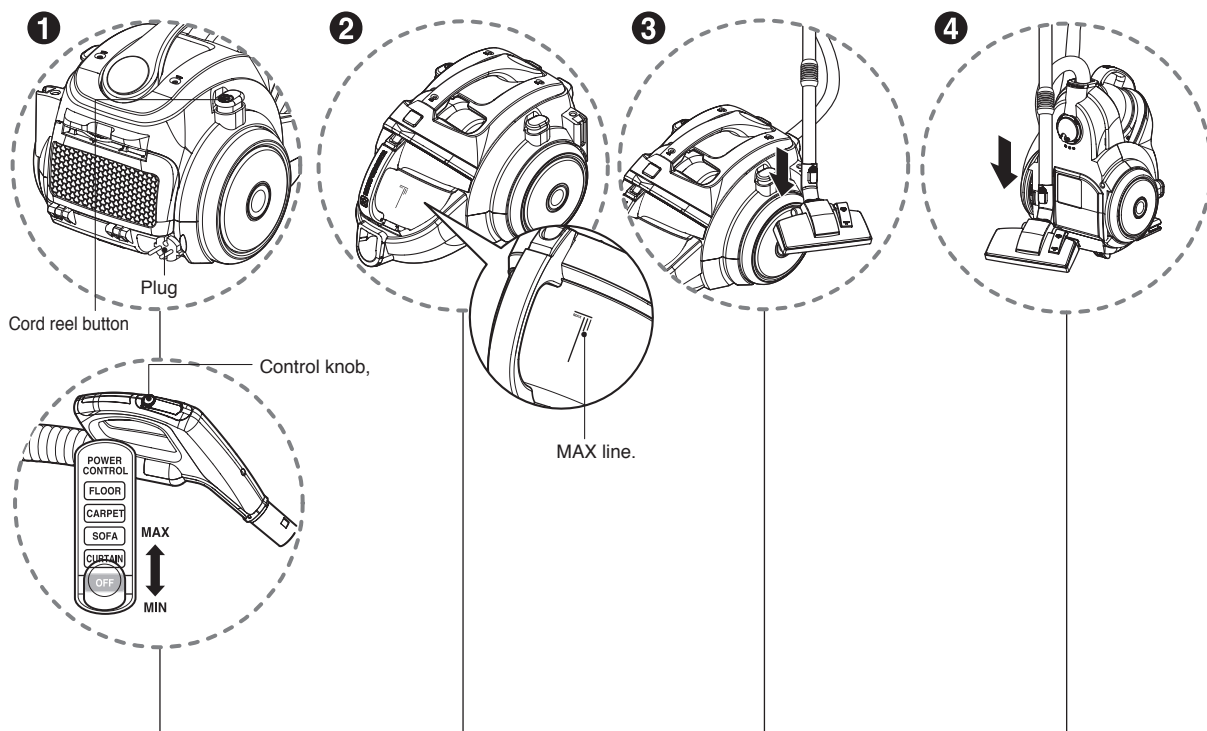

1 How to operate

- Pull out the power cord to the desired length and plug into the socket.
- Slide the control knob of the hose handle to operate vacuum cleaner.
- To turn off, slide the control knob to off position.
- Press the cord reel button to rewind the power cord after use.

2 Emptying the dust tank

- Always empty the dust tank when the dust tank level reaches the MAX line.

3 Park mode

- Slide the control knob to off position before park.
- To store during vacuuming, for example to move a small piece of furniture or a rug, use park mode to support the flexible hose and nozzle.
- Slide the hook on the nozzle into the slot on the side of vacuum cleaner.

4 Storage



- When you have switched off and unplugged the vacuum cleaner, press the cord reel button to automatically rewind the cord.
- You can store your vacuum cleaner in a vertical position by sliding the hook on the nozzle into the slot on the underside of the vacuum cleaner.



WARNING

No liquid suction.
Liquid suction can cause defects.

How to use Using carpet and floor nozzle/Furniture protection nozzle

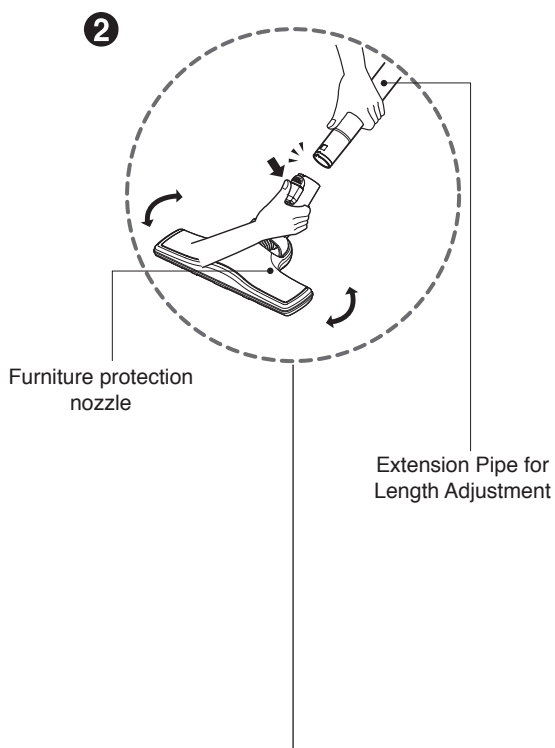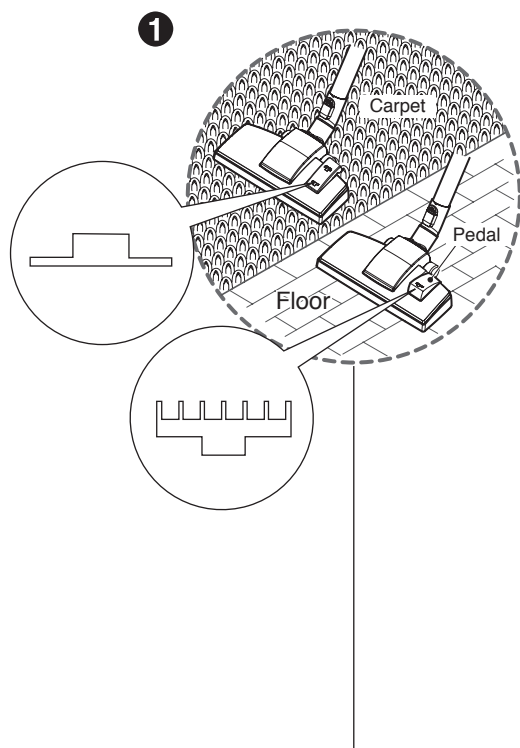


① Carpet and floor nozzle

- **The 2 position nozzle**
This is equipped with a pedal which allows you to alter its position according to the type of floor to be cleaned.
- **Carpet or rug position**
Press the pedal () to lower brush.
- **Hard floor position** (tiles, parquets floor)
Press the pedal () to lift the brush up.

② Furniture protection nozzle



- Cleaning wooden floors, corners and gaps is much easier with the rotating (swivel) nozzle.

• Cleaning carpet and floor nozzle

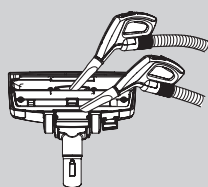

- Clean the hole and brush of nozzle.

How to use Using 2 in 1 nozzle

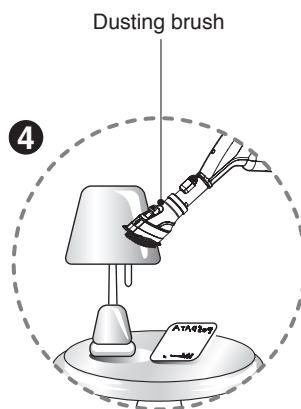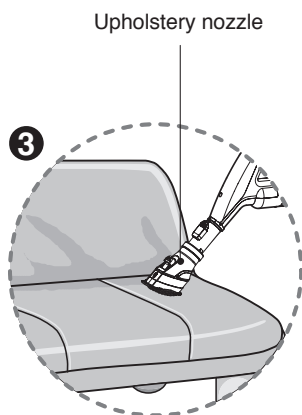


③ Upholstery nozzle(depend on model)

Upholstery nozzle is for vacuuming upholstery, mattresses etc.



④ Dusting brush(depend on model)

Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.

Push the button

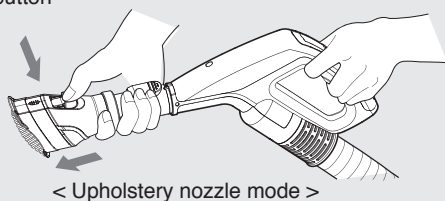


Pull the cover

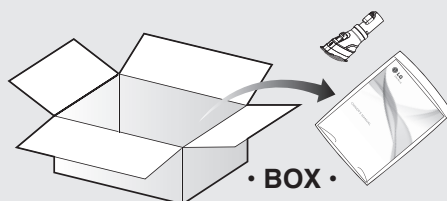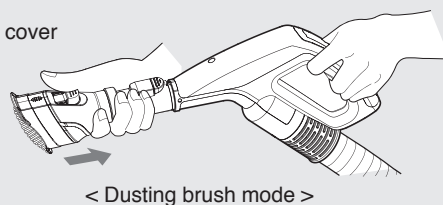


• 2 in 1 nozzle included in the "BOX" with owner's manual(depend on model)

How to use Using the accessory nozzles

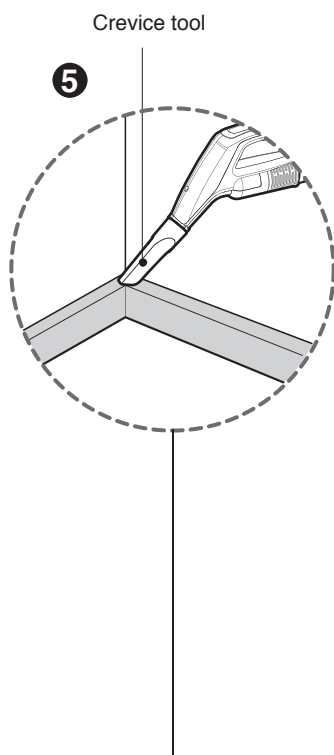

5 Crevice tool(depend on model)

Crevice tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs or between the cushions of a sofa.

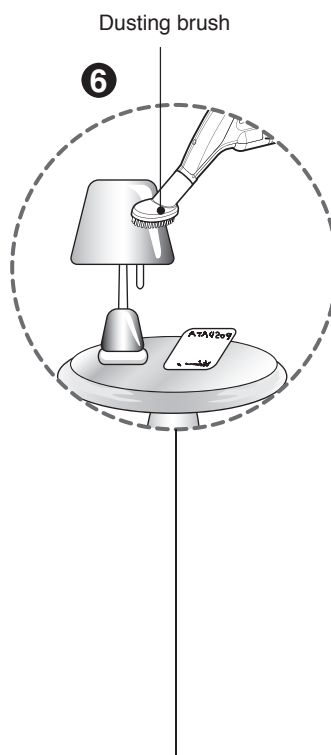


6 Dusting brush(depend on model)

Dusting brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.


NOTICE

Use accessory in the sofa mode

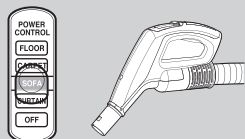

NOTICE

Be cautious to use the product on TV, LCD, Monitor or furniture, it can cause small scratch.

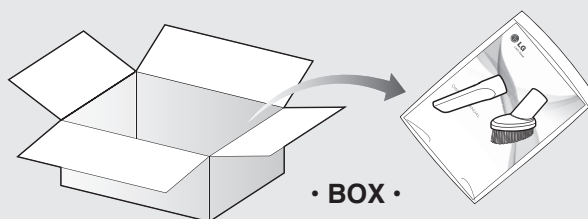


• Accessory nozzles are included in the "PE BAG" with owner's manual.

How to use FOLLOW ME function


FOLLOW ME function can measure distance between the user and vacuum cleaner.

After the measurement, vacuum cleaner will move automatically to keep a constant distance (about 1.0m) between the user and the vacuum cleaner.

When distance between transmitting sensor in the grip handle and receiving sensors on the vacuum cleaner becomes more than 1m, Vacuum cleaner will move automatically toward the user.

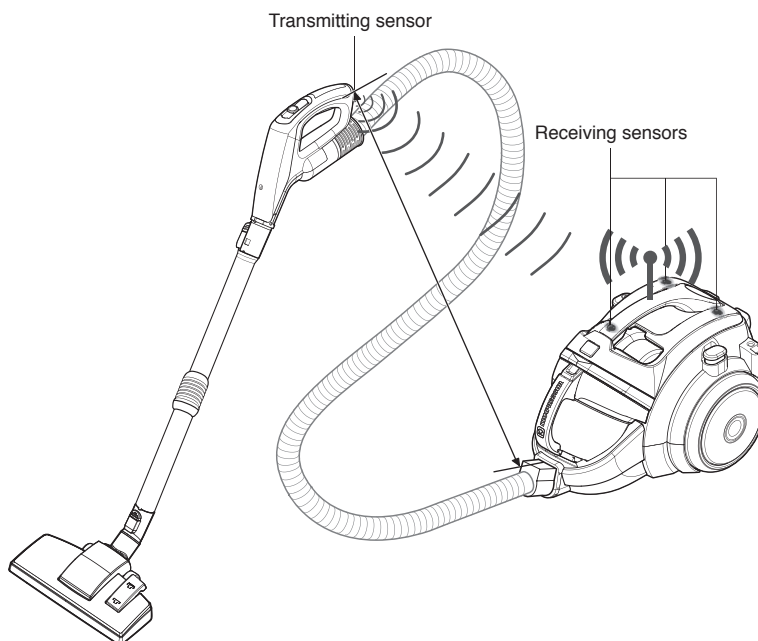


- When using vacuum cleaner, be careful not to block the transmitting sensor by wall or body. If transmitting sensor was blocked, FOLLOW ME function cannot work properly.

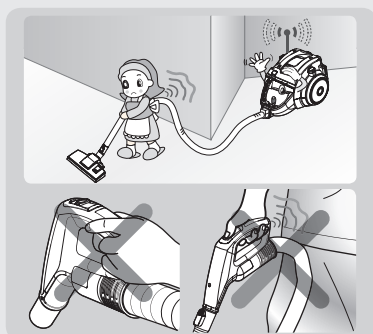

NOTICE

For your safety, if abnormal electrical noise occurred, the speed of the wheel could be changed instantaneously.


- Keep the direction of grip handle to receiving sensors for sending the signal. If the hose points the wrong direction, FOLLOW ME function cannot work properly.

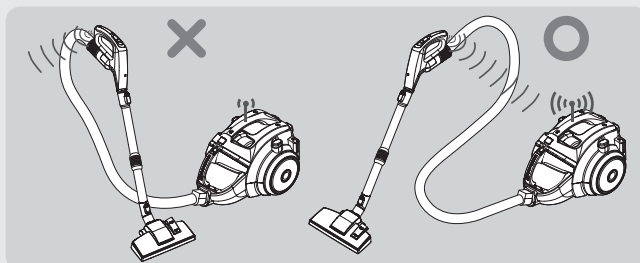

NOTICE

Do not put liquid such as water and drink in transmitting sensor and receiving sensors.
FOLLOW ME function cannot work properly.

How to use Emptying dust tank

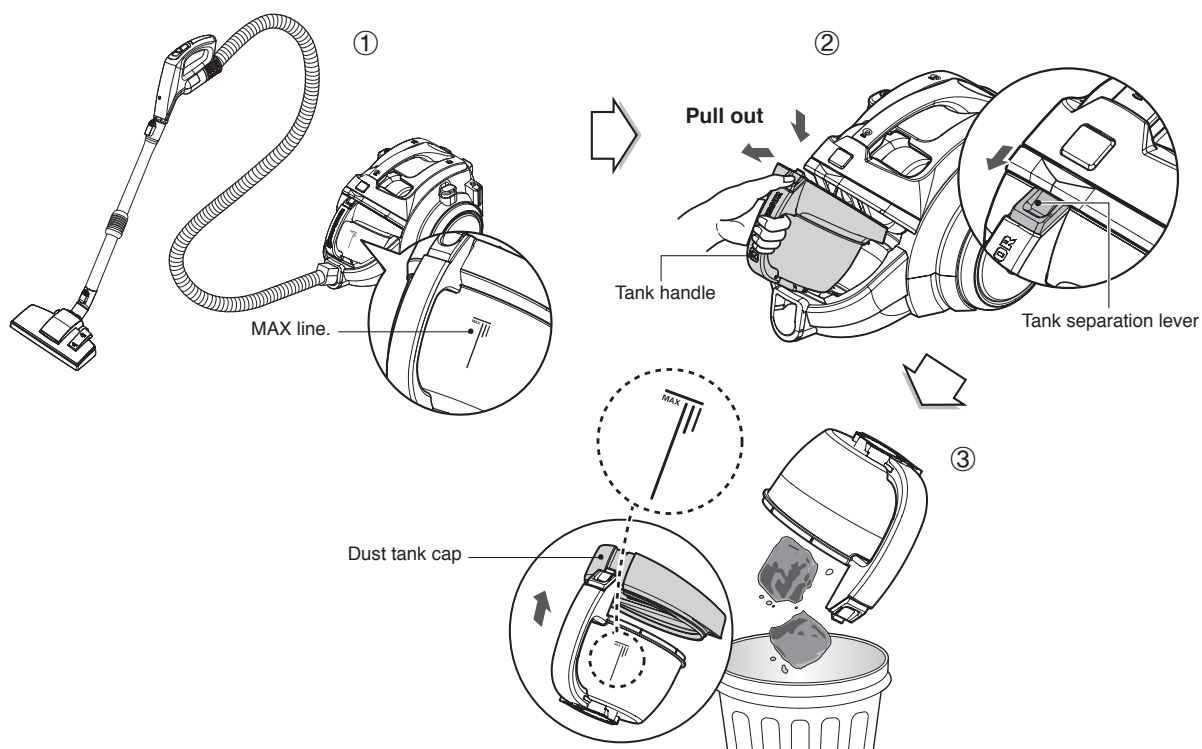

The dust tank needs emptying when the dust tank level reaches the MAX line.

- Turn off the vacuum cleaner and unplug it.
- Grasp the handle of the tank and then press the tank separation lever.
- Pull out the dust tank.
- Empty the tank and then assemble the dust tank as below.


Moving the vacuum cleaner

- Don't grasp the tank handle when you are moving the vacuum cleaner.


The vacuum cleaner's body may fall when separating tank and body.

You should grasp the carrier handle when you are moving the vacuum cleaner.

Assembling dust tank

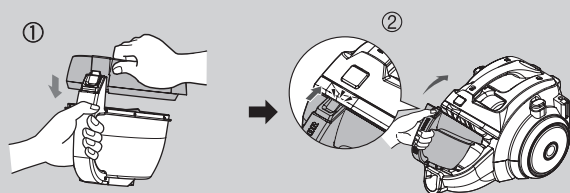

How to use Cleaning dust tank

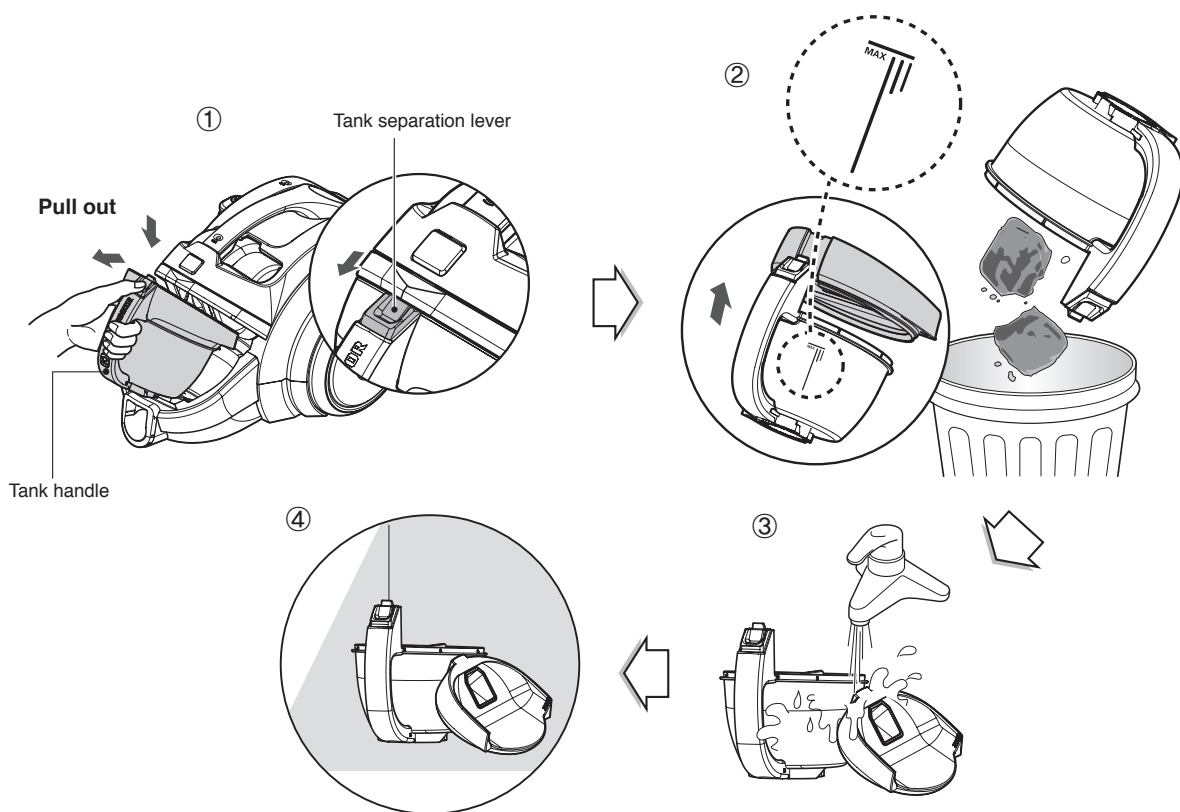


- Press tank separation lever and pull out dust tank.
- Raise dust tank cap
- Dry fully in shade so that moisture is entirely removed.

NOTICE

If suction power decreases after cleaning the dust tank, clean the air filter and the motor safety filter.

➔ Next page

How to use Cleaning air filter and motor safety filter

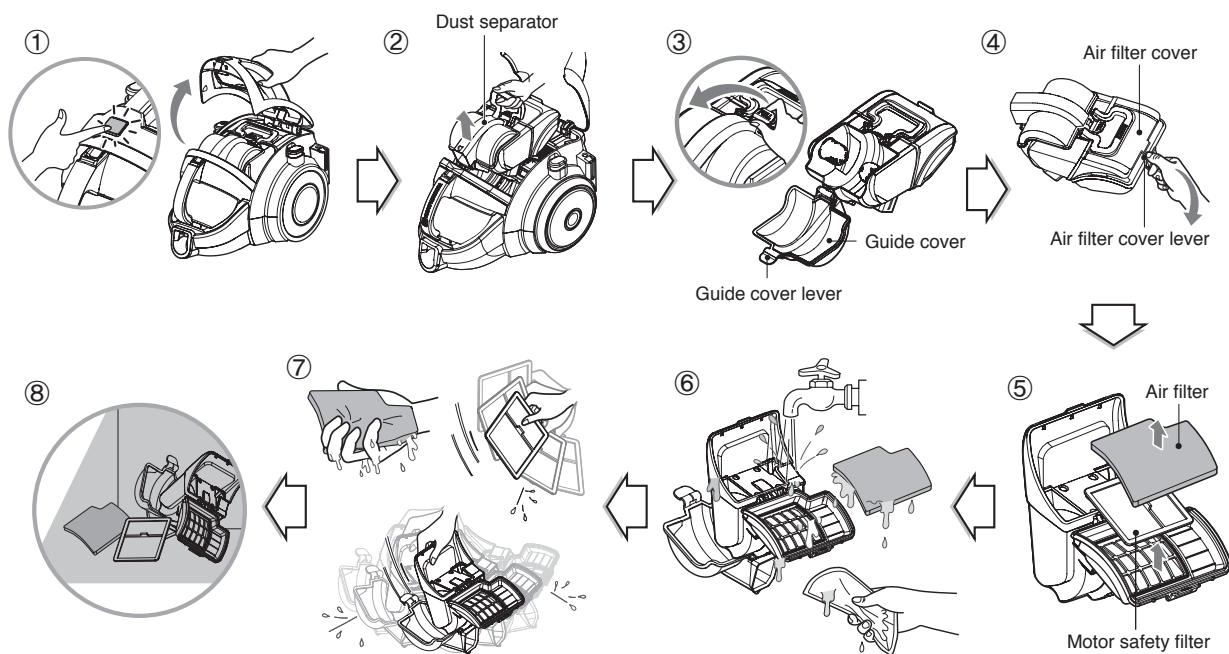

The air filter and the motor safety filter are located on the top of the vacuum cleaner as above the figure.

- Push the body cover button, open the body cover.
- Hold dust separator handle and pull it upward.
- Open the guide cover by pulling the guide cover lever and remove the dust.
- Open prefilter cover.
- Pull out the air filter and motor safety filter.
- Clean air filter and motor safety filter with running water.
- Do not wash filters with hot water.
- Eliminate water thoroughly
- Dry it under well-ventilated shade for a day.
- The air filter and the motor safety filter should be cleaned as above the figure.


WARNING

Dry fully for more than 24 hours in shade.

NOTICE

If filters are damaged, do not use them.
In this cases, contact LG Electronics Service Agent.
Wash filters at least once a month.

How to use Cleaning exhaust filter

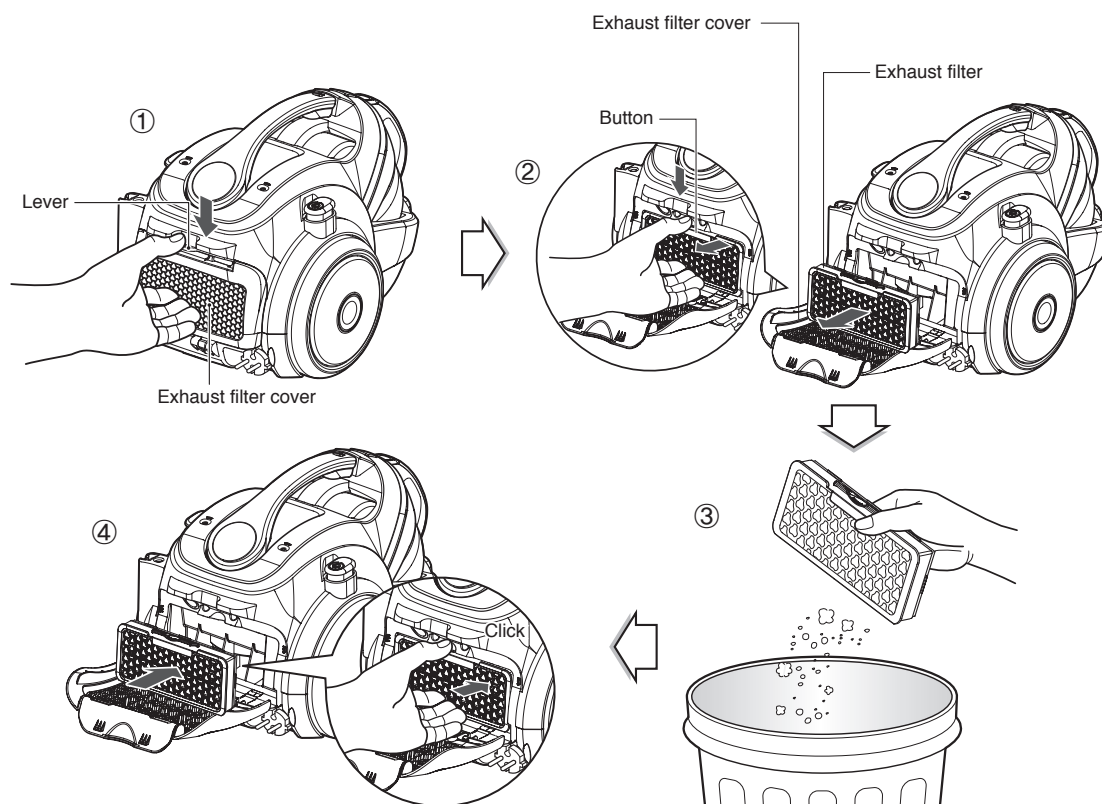

- The exhaust filter is reusable.
- To clean the exhaust filter, remove the exhaust filter cover on the body by pulling it out.
- Separate the exhaust filter.
- Dust off filter. (Do not wash filter with water.)
- The exhaust filter should be cleaned at least a year.

Exhaust filter cover assembling


- Fit exhaust filter cover lugs to the grooves of vacuum cleaner body.
- Join it the body.

What to do if your vacuum cleaner does not work

Check that the vacuum cleaner is plugged in correctly and that the electrical socket is working.

What to do if FOLLOW ME function does not work.

- Check the transmitting sensor and receiving sensors
- Please make sure that is blocked by obstacles (wall, clothes, etc.).
If the sensors were blocked, FOLLOW ME function cannot work properly.
- If transmitting sensor and receiving sensors were blocked by dust, clean the sensors using a cotton swab.
Clean the sensor holes using a cotton swab periodically

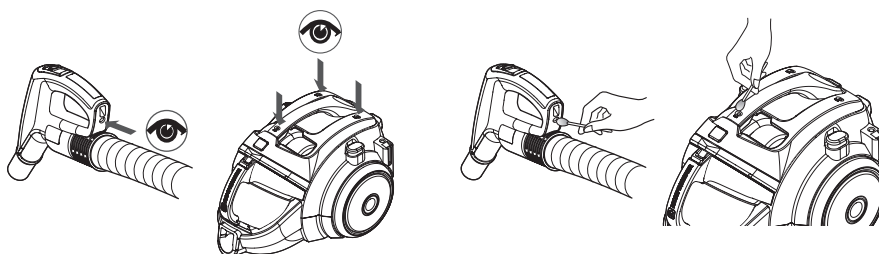

What to do when the suction performance decreases

- Turn off the vacuum cleaner and unplug it.
- Check the telescopic pipe, flexible hose and cleaning tool for blockages or obstructions.
- Check that the dust tank is not full. Empty if necessary.
- Check that dust separator is not clogged with obstruction. Eliminate it.
- Check that the exhaust filter is not clogged. Clean the exhaust filter if necessary.
- Check that the air filter of dust separator is not clogged. Clean the air filter if necessary.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Note



دفترچه راهنمای

KOMPRESSOR *FOLLOW* ME™

جاروبرقی سایکلون جدید

هشدار: پیش از استفاده از دستگاه این دفترچه راهنما را به دقت مطالعه کنید.
لطفاً تمامی اطلاعات مندرج در صفحات ۳، ۴، ۵ را با دقت مطالعه کنید.
این اطلاعات حاوی دستورالعمل‌های مهم ایمنی و نگهداری دستگاه است.
لطفاً این دفترچه راهنما را در دسترس نگهدارید تا در آینده بتوانید به آن مراجعه کنید.

VB-7720HBK



دستورالعمل های مهم ایمنی	۳-۵
نحوه ی استفاده	۶-۱۶
سرهم کردن جاروبرقی	۶
استفاده از جاروبرقی	۸
استفاده از نازل فرش و کف زمین/ نازل محافظ وسایل	۹
روش استفاده از سری تمیز کننده دو کاره	۱۰
استفاده از نازل های جانبی	۱۱
عملکرد FOLLOW ME	۱۲
تخلیه مخزن	۱۳
تمیز کردن مخزن	۱۴
تمیز کردن فیلتر هوا و فیلتر ایمنی موتور	۱۵
تمیز کردن فیلتر خروجی هوا	۱۶
اگر جاروبرقی کار نکرد، چه باید کرد	۱۷
اگر عملکرد FOLLOW ME کار نکرد، چه باید کرد	۱۷
وقتی مکش ضعیف شد چه باید کرد	۱۷

دستورالعمل های مهم ایمنی

پیش از استفاده از جاروبرقی جهت پیشگیری از خطر آتش سوزی، برق گرفتگی، آسیب جانی یا خرابی دستگاه در هنگام استفاده از آن، لطفاً تمامی دستورالعمل های زیر را مطالعه کرده و اجرا کنید. این راهنما تمامی شرایط احتمالی را پوشش نمی دهد. برای مشکلاتی که آنها را درک نمی کنید با مرکز خدمات مجاز تماس بگیرید. این دستگاه مطابق با قوانین /2004/108- EC Low Voltage Directive-2006/95/EC است.

این علامت هشدار ایمنی است.

این علامت بیانگر خطرات بالقوه ای است که ممکن است باعث مرگ یا آسیب شما و دیگران شود.

تمامی پیام های ایمنی همراه علامت هشدار ایمنی و در ادامه کلمات "خطر" یا "هشدار" است.

این دو عبارت به معنای :



این علامت به شما می گوید که احتمال خطر و موارد غیر ایمنی وجود دارد که می تواند باعث آسیب شدید جانی یا مرگ شود.

هشدار !

این علامت بیانگر خطرات و شرایط غیرایمنی است که می تواند باعث آسیب جانی یا خسارت مالی شود.

خطر !

هشدار !

۱. این وسیله نباید توسط افرادی (شامل کودکان) استفاده شود که توانایی جسمی، ذهنی یا حسی کافی نداشته و یا فاقد تجربه و دانش می باشند، مگر اینکه تحت نظر یا راهنمایی افرادی که مسئول حفظ ایمنی آنها هستند از این وسیله استفاده کنند.

۲. کودکان باید تحت نظر و مراقبت باشند تا با این وسیله بازی نکنند.


۳. اگر سیم برق آسیب دید، باید توسط سرویسکار مجاز خدمات گلیران تعویض شود تا باعث بروز خطر نشود.

۴. این وسیله باید توسط کودکان ۸ سال به بالا استفاده شود و افرادی که توانایی جسمی، ذهنی یا حسی کافی نداشته یا فاقد تجربه و دانش کافی هستند، در صورتی که در مورد استفاده از دستگاه به صورت ایمن و همراه با درک خطرات، تحت نظر یا راهنمایی باشند می توانند از دستگاه استفاده کنند. کودکان نباید با این وسیله بازی کنند. کودکان نباید بدون نظارت این دستگاه را تمیز کرده و یا تعمیر کنند.

دستورالعمل های مهم ایمنی

! هشدار

- اگر زبانه کنترل بر روی **OFF** نیست، دوشاخه را به برق نزنید. منجر به آسیب جانی یا خرابی دستگاه می شود.
- کودکان را دور نگه داشته و هنگام جمع کردن سیم مراقب موانع باشید.
- سیم هنگام جمع شدن سرعت زیادی دارد.
- هنگام تمیز کردن جاروبرقی یا زمانی که از آن استفاده نمی کنید دوشاخه ی آن را از پریز بیرون بکشید.
- در غیر این صورت منجر به برق گرفتگی یا آسیب جانی می شود.
- از جاروبرقی برای برداشتن موارد شعله ور یا دودزا نظیر سیگار یا خاکستر داغ استفاده نکنید.
- این عمل منجر به مرگ، برق گرفتگی یا آتش سوزی می شود.
- از جاروبرقی برای کشیدن مواد قابل انفجار یا قابل اشتعال نظیر گازوئیل، بنزین، تینر و غیره استفاده نکنید.
- گاز ناشی از این مواد می تواند منجر به انفجار یا خطر آتش سوزی شود. در نتیجه احتمال مرگ یا آسیب جانی وجود دارد.
- هرگز با دستان مرطوب جاروبرقی یا دوشاخه آن را لمس نکنید.
- این عمل منجر به مرگ یا برق گرفتگی می شود.
- برای کشیدن دو شاخه از پریز هرگز از سیم نکشید.
- این عمل منجر به خرابی دستگاه یا برق گرفتگی می شود.
- برای جدا کردن از پریز همواره از دو شاخه بگیرید.
- همواره مو، خرده پارچه، انگشتان و سایر قسمت های بدن را از روزنه های دستگاه و قطعات متحرک دور نگه دارید.
- این عمل منجر به برق گرفتگی یا آسیب دستگاه می گردد.
- هرگز برای حمل از سیم جاروبرقی استفاده نکنید و یا سیم آن را حول لبه های تیز نپیچید. جاروبرقی را بر روی سیم آن قرار ندهید.
- سیم را از سطوح گرم دور نگه دارید.
- در غیر این صورت منجر به برق گرفتگی و آسیب جانی و یا آتش سوزی یا خرابی دستگاه می شود.
- شلنگ جاروبرقی دارای سیم است. در صورت خرابی، بریدگی و له شدگی از آن استفاده نکنید.
- در غیر این صورت منجر به مرگ یا شوک الکتریکی می گردد.
- هرگز اجازه ندهید از جاروبرقی به عنوان وسیله اسباب بازی استفاده شود. همواره توجه خاصی به جاروبرقی که در نزدیکی کودکان است، داشته باشید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- در صورت آسیب دیدن سیم برق یا دوشاخه از آن استفاده نکنید. چرا که منجر به آسیب جانی و مالی می شود. در چنین مواقعی با مرکز خدمات مجاز تماس بگیرید.
- در صورت خیس شدن جاروبرقی از آن استفاده نکنید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- برای پیشگیری از خطر با سرویسکار مجاز خدمات گلдіران تماس بگیرید.
- در صورت مفقود شدن یا معیوب شدن قطعات جاروبرقی از آن استفاده نکنید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- برای پیشگیری از خطر با سرویسکار مجاز خدمات گلдіران تماس بگیرید.
- هرگز از سیم سیار استفاده نکنید.
- این عمل منجر به آتش سوزی یا خرابی دستگاه می شود.
- از ولتاژ صحیح استفاده کنید.
- استفاده از ولتاژ نامناسب منجر به خرابی موتور دستگاه یا آسیب فردی کاربر می شود. ولتاژ مناسب دستگاه در زیر جاروبرقی ذکر شده است.
- پیش از کشیدن دو شاخه جاروبرقی از پریز تمامی کلیدها را خاموش کنید.
- در غیر این صورت منجر به برق گرفتگی یا آسیب جانی می شود.
- از تعویض دوشاخه خودداری نمایید.
- این عمل منجر به برق گرفتگی یا آسیب جانی و خرابی دستگاه می شود. اگر دو شاخه با پریز مطابقت ندارد برای نصب پریز مناسب با یک برق کار تماس بگیرید.
- در صورت خرابی سیم برق، تعویض آن باید توسط مرکز خدمات یا افراد مجرب انجام شود.
- تعمیر وسایل برقی فقط باید توسط افراد مرکز خدمات مجاز انجام شود.
- تعمیرات غیرمجاز منجر به خطرات شدید جانی می گردد.
- انگشتان تان را در نزدیکی چرخ دنده دستگاه قرار ندهید.
- در غیر این صورت منجر به آسیب جانی می شود.

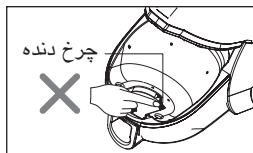

دستورالعمل های مهم ایمنی


⚠️ اخطار

- از قرار دادن اشیاء در داخل روزنه ها خودداری کنید.
این عمل منجر به خرابی دستگاه می شود.
- از مسدود کردن روزنه ها خودداری کنید : روزنه ها را عاری از گرد و غبار، کرک، مو و هرچیزی که باعث کاهش فشار هوا می شود کنید.
- در غیر این صورت منجر به خرابی دستگاه می شود.
- از استفاده جاروبرقی بدون مخزن یا فیلترها خودداری کنید.
این عمل منجر به خرابی دستگاه می شود.
- پس از استفاده از جاروبرقی برای مواردی نظیر نرم کننده فرش شوینده فرش و غیره محفظه دستگاه را تمیز کنید.
- این مواد باعث انسداد فیلترها، کاهش فشار هوا شده و به دستگاه آسیب می رسانند. سهل انگاری در این مورد موجب خرابی می شود.
- از جاروبرقی برای برداشتن اشیاء تیز، اسباب بازی های کوچک، سوزن، سنجاق و غیره استفاده نکنید.
- این عمل منجر به خرابی دستگاه و مخزن می شود.
- جاروبرقی را در محیط داخل منزل نگهداری کنید.
- جاروبرقی را پس از هربار استفاده به کناری قرار دهید تا در معرض ضربه نباشد.
- استفاده از این دستگاه برای افرادی (نظیر کودکان) که از توانایی فیزیکی محدودی برخوردارند، یا ناتوان هستند یا از تجربه کمی برخوردارند مجاز نیست مگر تحت نظارت افراد بالغ.
- نادیده گرفتن مورد فوق منجر به آسیب جانی یا مالی می گردد.
- فقط از قطعات توصیه شده یا تولید شده توسط مرکز خدمات مجاز ال جی استفاده کنید.
- در غیر این صورت منجر به خرابی دستگاه می شود.
- فقط به روش توصیه شده در این دفترچه از دستگاه استفاده کنید.
فقط از متعلقات توصیه شده یا تایید شده توسط ال جی استفاده کنید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- جهت پیشگیری از آسیب جانی افراد یا پیشگیری از افتادن جاروبرقی در هنگام تمیز کردن پله ها، همواره دستگاه را در پایین پلکان قرار دهید.
- در غیر این صورت منجر به آسیب جانی یا خرابی دستگاه می شود.
- در حالت کانپه از نازل های جانبی استفاده کنید.
در غیر این صورت منجر به خرابی دستگاه می شود.
- هنگام حمل جاروبرقی دستگیره مخزن را نگیرید.
احتمال جدا شدن مخزن از بدنه و سقوط آن وجود دارد. احتمال آسیب جانی و مالی وجود دارد. هنگام حمل باید دستگیره مخصوص حمل را بگیرید. (صفحه ۱۳)
- پیش از قرار دادن فیلترها در دستگاه (فیلتر هوا و فیلتر ایمنی موتور) از خشک شدن کامل آنها اطمینان حاصل نمایید.
در غیر این صورت منجر به خرابی دستگاه می شود.
- از قرار دادن فیلتر در داخل اجاق یا مایکروویو خودداری کنید.
این عمل منجر به آتش سوزی می گردد.
- از خشک کردن فیلتر در داخل خشک کن لباس خودداری کنید.
این عمل ممکن است منجر به آتش سوزی شود.
- از خشک کردن فیلتر در نزدیکی آتش خودداری کنید.
این عمل ممکن است منجر به آتش سوزی شود.
- استفاده از فیلتر خیس مجاز نیست.
- در صورت خرابی سیم برق تعویض آن باید توسط مرکز خدمات مجاز صورت گیرد.
- استفاده از این دستگاه برای افرادی (نظیر کودکان) که از توانایی فیزیکی محدودی برخوردارند، یا ناتوان هستند یا از تجربه کمی برخوردارند مجاز نیست مگر تحت نظارت افراد بالغ.
- مراقب کودکان باشیم تا از جاروبرقی به عنوان وسیله بازی استفاده نکنند.
- وقتی عملکرد **FOLLOW ME** فعال است از نزدیک شدن ناگهانی به دستگاه خودداری کنید.
- در غیر این صورت احتمال خرابی دستگاه و آسیب جانی فرد وجود دارد.

محافظ حرارتی :

این جاروبرقی دارای یک ترموستات ویژه ای است که مانع از بیش از حد گرم شدن جاروبرقی می شود. چنانچه جاروبرقی به طور ناگهانی خاموش شود، کلید را خاموش کرده و دو شاخه را از پریز بیرون بکشید. مواردی را که ممکن است باعث افزایش دما شود بررسی کنید از قبیل پر شدن مخزن، گرفتگی شلنگ یا انسداد فیلتر. در صورت صحیح بودن موارد فوق، آنها را در محل خود قرار داده و پیش از روشن کردن دوباره حداقل مدت ۳۰ دقیقه صبر کنید. پس از ۳۰ دقیقه دو شاخه را به پریز متصل کرده و کلید را روشن کنید. اگر جاروبرقی باز هم کار نکرد با مرکز خدمات مجاز تماس بگیرید.

نحوه ی استفاده سرهم کردن جاروبرقی

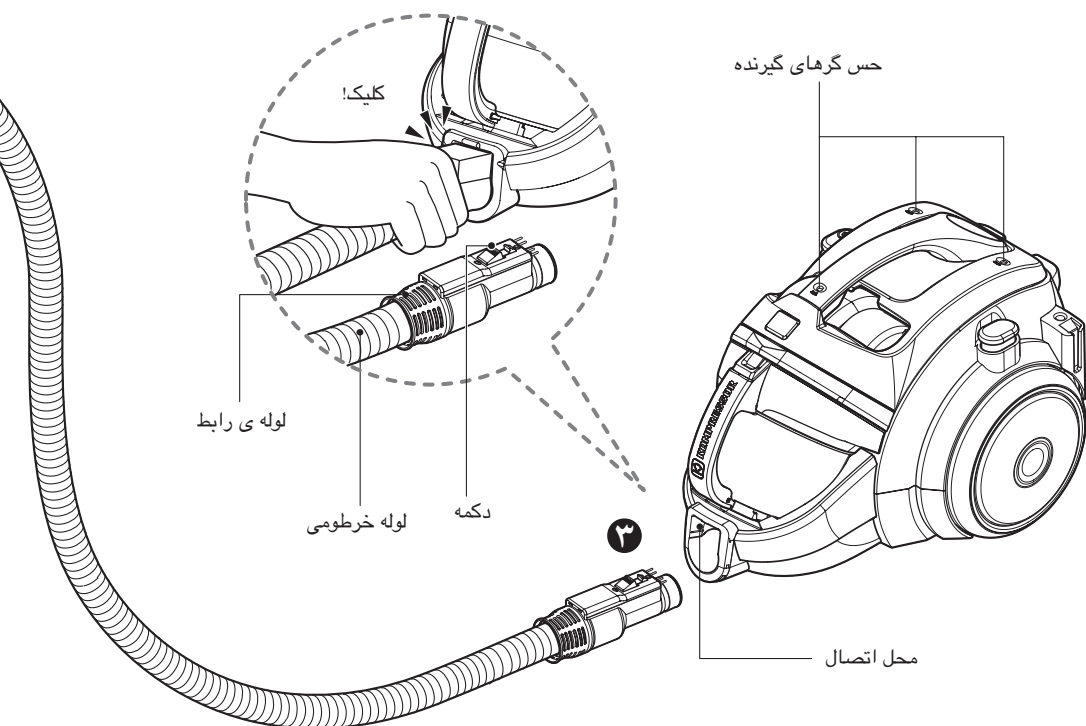


۱ نازل فرش و کف زمین

نازل را به داخل لوله تلسکوپی فشار دهید.

۲ لوله تلسکوپی


- لوله تلسکوپی را محکم به داخل دستگیره شلنگ فشار دهید.
- زبانه فنری را برای باز شدن لوله فشار دهید.
- لوله را به میزان دلخواه بیرون بکشید.

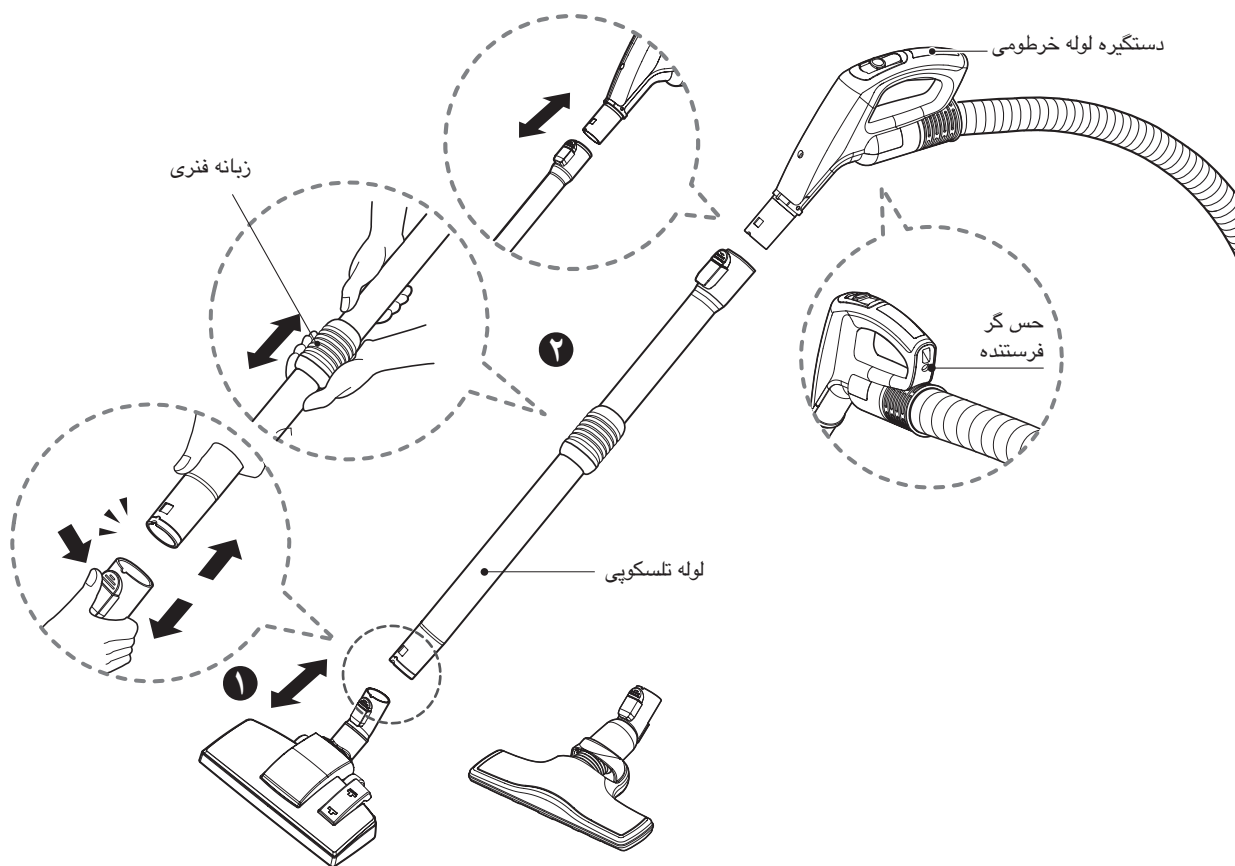

۳ اتصال شلنگ به جاروبرقی

رابط لوله بر روی شلنگ را به محل اتصال جاروبرقی فشار دهید.
برای درآوردن شلنگ از جاروبرقی، دکمه ی تعبیه شده بر روی
لوله ی رابط را فشار دهید و سپس رابط لوله را از جاروبرقی
بیرون بکشید.

نحوه ی استفاده سرمه کردن جاروبرقی

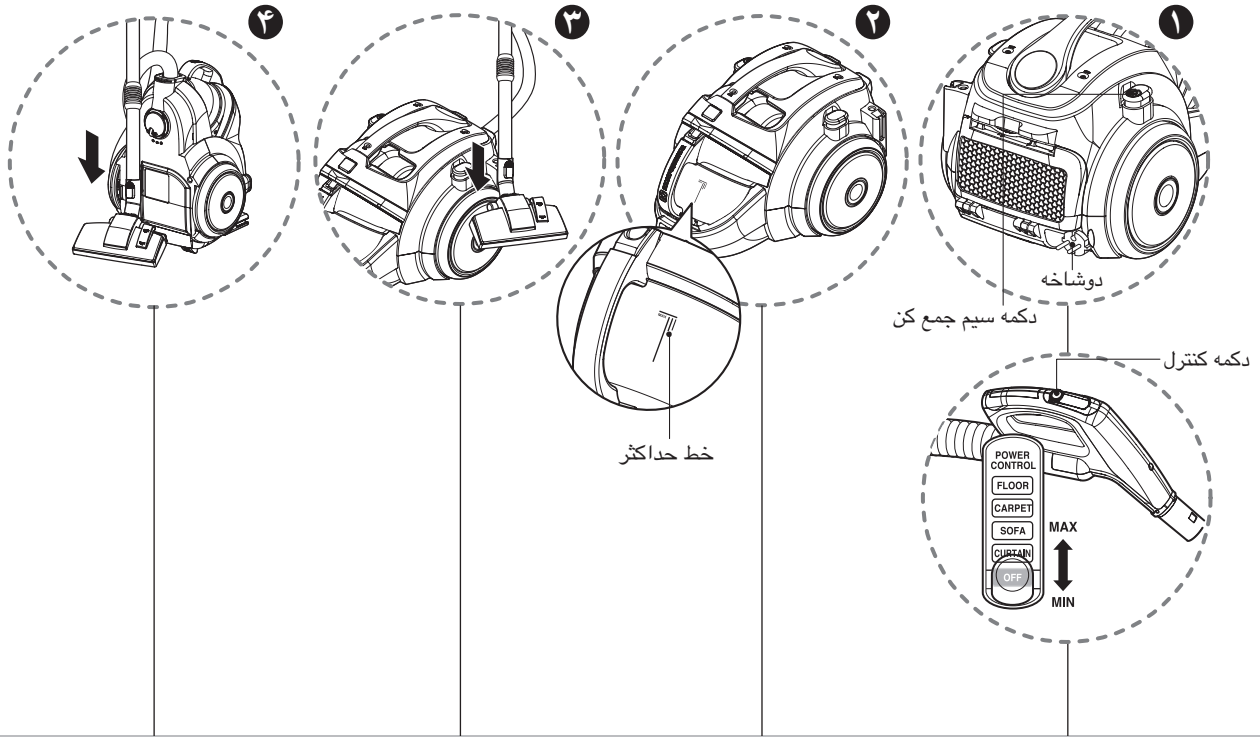

۴ نگهداری

۳ خالی کردن مخزن گرد و خاک حالت پارک

۱ نحوه ی استفاده

- وقتی دستگاه را خاموش و دو شاخه را از پریز بیرون می کشید دکمه سیم جمع کن را فشار دهید تا سیم به طور خودکار جمع شود.
- شما می توانید جاروبرقی را در حالت عمودی نگهدارید، برای این کار قلاب روی نازل را به داخل شیار زیر جاروبرقی بکشید.
- برای توقف موقت در حین استفاده از جارو برقی، به طور مثال جابجا کردن اشیاء کوچک یا فرش برای نگهداشتن شلنگ و نازل از حالت پارک استفاده کنید.
- - قلاب روی نازل را به شیار واقع در کنار جاروبرقی بکشید.


- همواره مخزن گرد و خاک را پس از رسیدن سطح مخزن گرد و خاک به خط MAX خالی کنید.

- سیم را به میزان دلخواه بیرون کشیده و سپس دوشاخه را به پریز متصل کنید.
- دکمه کنترل کشویی بر روی دسته لوله خرطومی برای عمل کردن جاروبرقی است.
- برای خاموش کردن دستگاه، دکمه کنترل کشویی را در حالت OFF قرار دهید.
- برای جمع کردن سیم پس از پایان کار، دکمه ی سیم جمع کن را فشار دهید.

⚠ هشدار

عدم مکش مایعات.
مکش مایعات می تواند باعث خرابی شود.

نحوه ی استفاده از نازل فرش و کف زمین / نازل محافظ وسایل

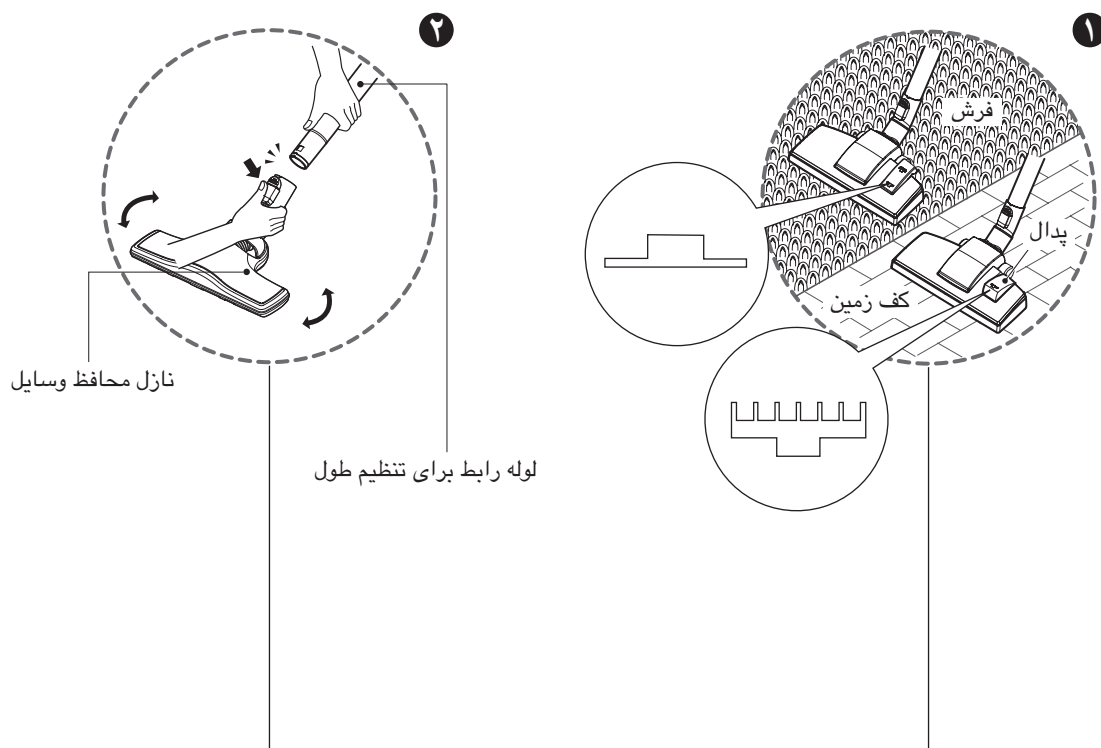

۲ نازل محافظ وسایل


۱ نازل فرش و کفپوش

- برای تمیز کردن سطوح چوبی، کنج ها و درزها که با چرخیدن نازل به راحتی انجام می شود.


- نازل دو حالتی
- این نازل مجهز به پدالی است که به شما امکان می دهد بر حسب نوع کف محل، وضعیت را تغییر دهید.
- وضعیت فرش یا قالیچه
- پدال () را فشار دهید تا برس پایین برود.
- وضعیت سطح سخت (کاشی، پارکت)
- برای بالا رفتن برس، پدال () را فشار دهید.

• تمیز کردن نازل فرش و کف

- روزانه و برس نازل را تمیز کنید.

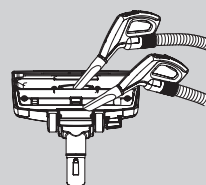


نحوه ی استفاده روش استفاده از سری تمیز کننده دو کاره

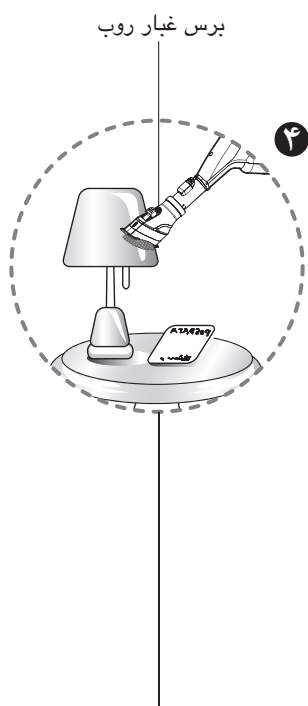

برس غبار روب

۴

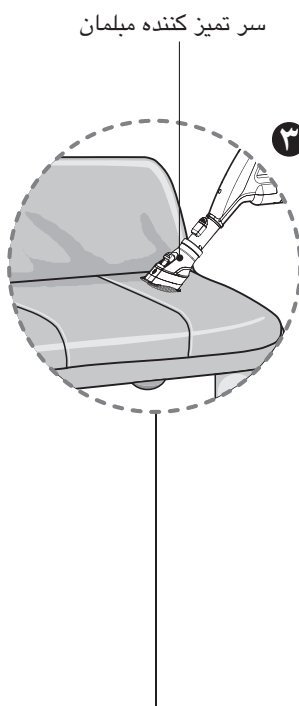

سر تمیز کننده مبلمان

۳


۴ برس غبار روب (به مدل بستگی دارد)

۳ سر تمیز کننده مبلمان (به مدل بستگی دارد)

کاربرد برس غبار روب در تمیز کاری قاب های عکس، چهار چوب اثاثیه، کتاب ها و دیگر سطوح غیر هموار می باشد.


کاربرد سر تمیز کننده مبلمان جهت تمیزکاری مبلمان، لحاف و غیره می باشد.

درپوش را بکشید

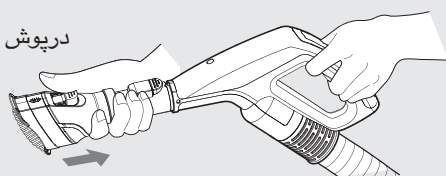


حالت برس غبار روب

دکمه را فشار دهید

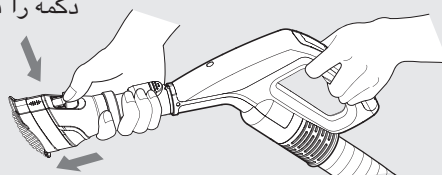


حالت سر تمیز کننده مبلمان

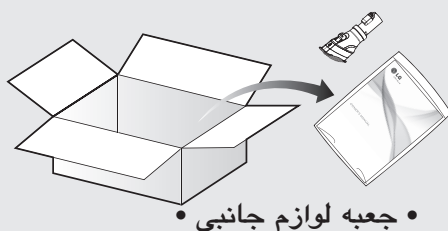

• جعبه لوازم جانبی •


• سری تمیز کننده دو کاره در "جعبه لوازم جانبی" و به همراه دفترچه راهنمای مصرف کنندگان تدارک میگردد. (بستگی به مدل دارد)

نحوه ی استفاده از نازل های جانبی

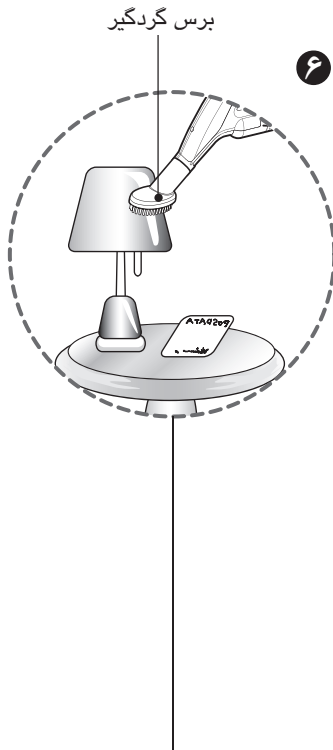


۶ برس گردگیر (به مدل بستگی دارد)

برس گردگیر برای تمیز کردن قاب عکس، چهارچوب مبلمان، کتاب ها و سایر سطوح غیر هموار است.

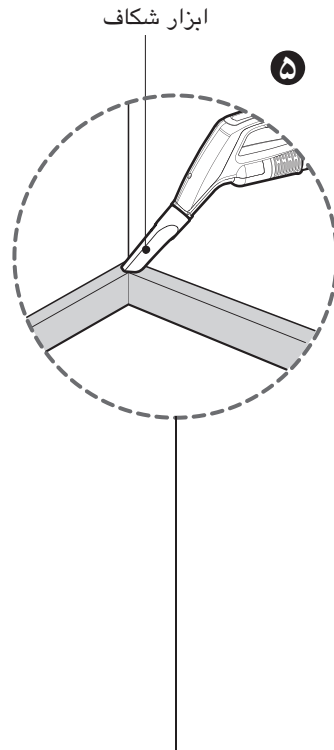

۵ ابزار شکاف (به مدل بستگی دارد)

ابزار شکاف برای تمیز کردن محل های دور از دسترس نظیر کنج سقف و لابلای کاناپه مناسب است.

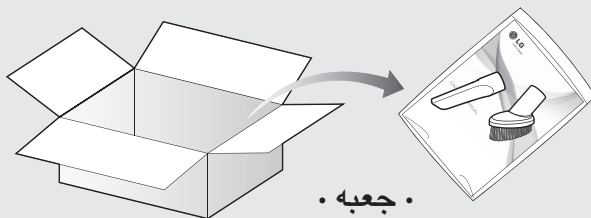

• نازل های جانبی به همراه دفترچه راهنما در کیسه PE-Bag قرار دارند.

توجه

در حالت کاناپه از لوازم جانبی استفاده کنید




توجه


مراقب اشیایی چون تلویزیون، ال سی دی، نمایشگر یا اثاثیه باشید. امکان مخدوش شدن وجود دارد.

نحوه ی استفاده از عملکرد FOLLOW ME

عملکرد FOLLOW ME فاصله کاربر تا جاروبرقی را می سنجد. پس از ارزیابی فاصله، دستگاه به طور خودکار حرکت کرده و فاصله مشخصی (حدود ۱ متر) را بین خود و کاربر حفظ خواهد کرد. وقتی فاصله بین حس گر فرستنده بر روی دستگیره لوله خرطومی و حس گر های گیرنده بر روی دستگاه بیش از ۱ متر شود دستگاه به طور خودکار به طرف کاربر حرکت خواهد کرد.

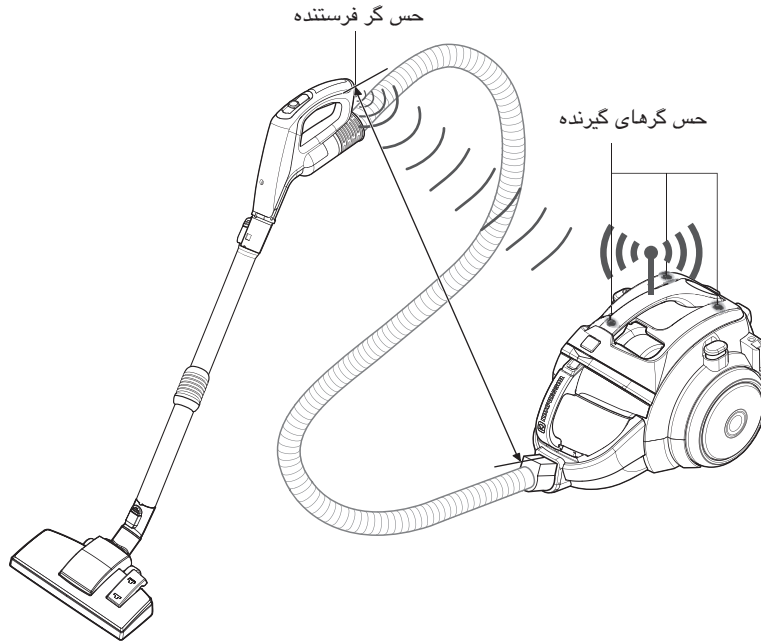


- برای ارسال سیگنال، جهت دستگیره را به طرف حس گرهای گیرنده بگیرید. اگر شلنگ به طرف دیگری (به غیر از دستگاه) باشد، عملکرد FOLLOW ME درست عمل نخواهد کرد.

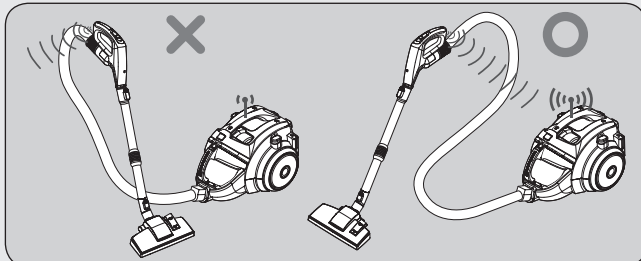

توجه

از ریختن مایعات نظیر آب در داخل حس گرهای گیرنده و فرستنده خودداری کنید.
عملکرد FOLLOW ME مختل خواهد شد.


- هنگام استفاده از جاروبرقی، مراقب باشید حس گر فرستنده توسط دیوار یا تنه خودتان مسدود نشود. در صورت مسدود شدن حس گر فرستنده، عملکرد FOLLOW ME به درستی عمل نخواهد کرد.

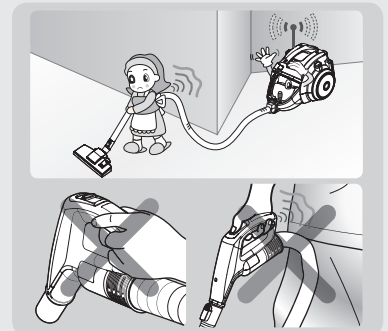

توجه

برای ایمنی شما، اگر نویز الکتریکی غیرعادی رخ داد، سرعت چرخ فوراً تغییر پیدا می کند.

نحوه ی استفاده تخلیه مخزن گرد و خاک

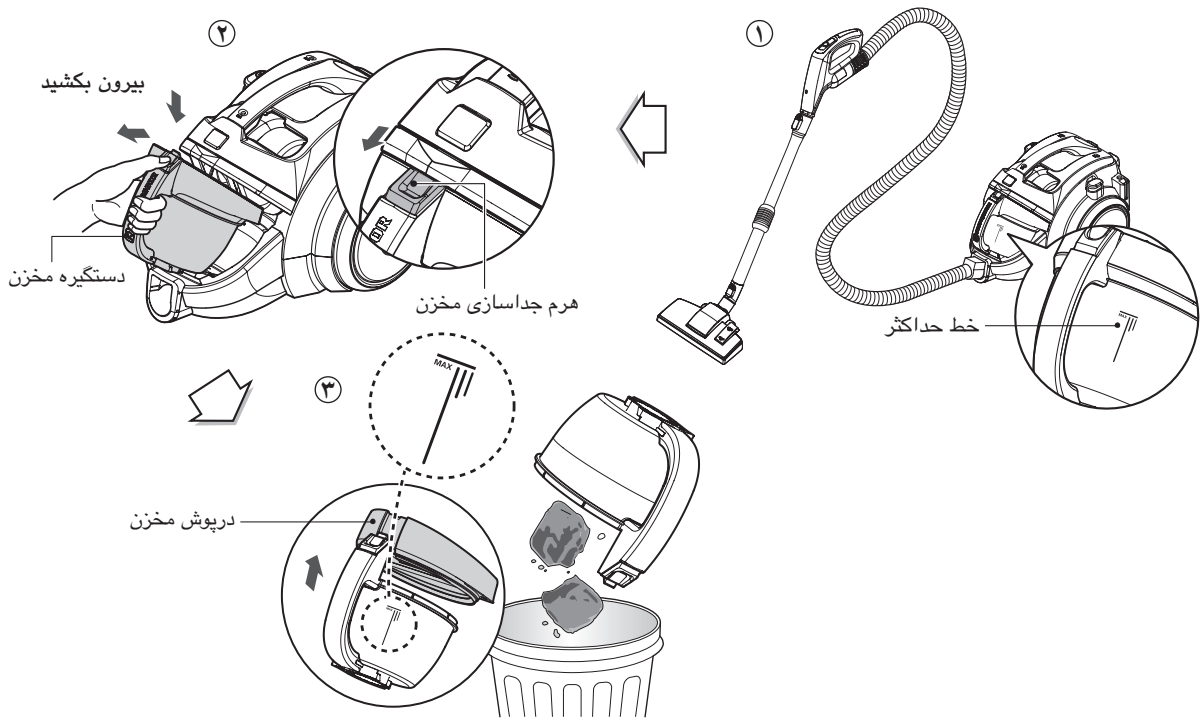


روش حمل و نقل دستگاه جاروبرقی

- هنگام حمل جاروبرقی دستگیره مخزن را نگیرید.
- با جدا شدن مخزن از بدنه، بدنه بر روی زمین خواهد افتاد شما باید هنگام حمل جاروبرقی، دستگیره مخصوص حمل را بگیرید.


مخزن گرد و خاک پس از رسیدن سطح مخزن گرد و خاک به خط MAX باید خالی شود.

- دستگاه را خاموش و دوشاخه را از پریز بیرون بکشید.
- دستگیره مخزن را گرفته و سپس دکمه جداسازی مخزن را فشار دهید.
- مخزن را بیرون بکشید.
- مخزن را تخلیه و سپس مطابق شکل سرهم بندی کنید.

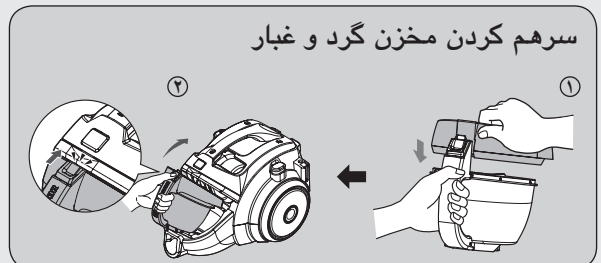

سرهم کردن مخزن گرد و غبار

نحوه ی استفاده تمیز کردن مخزن گرد و خاک

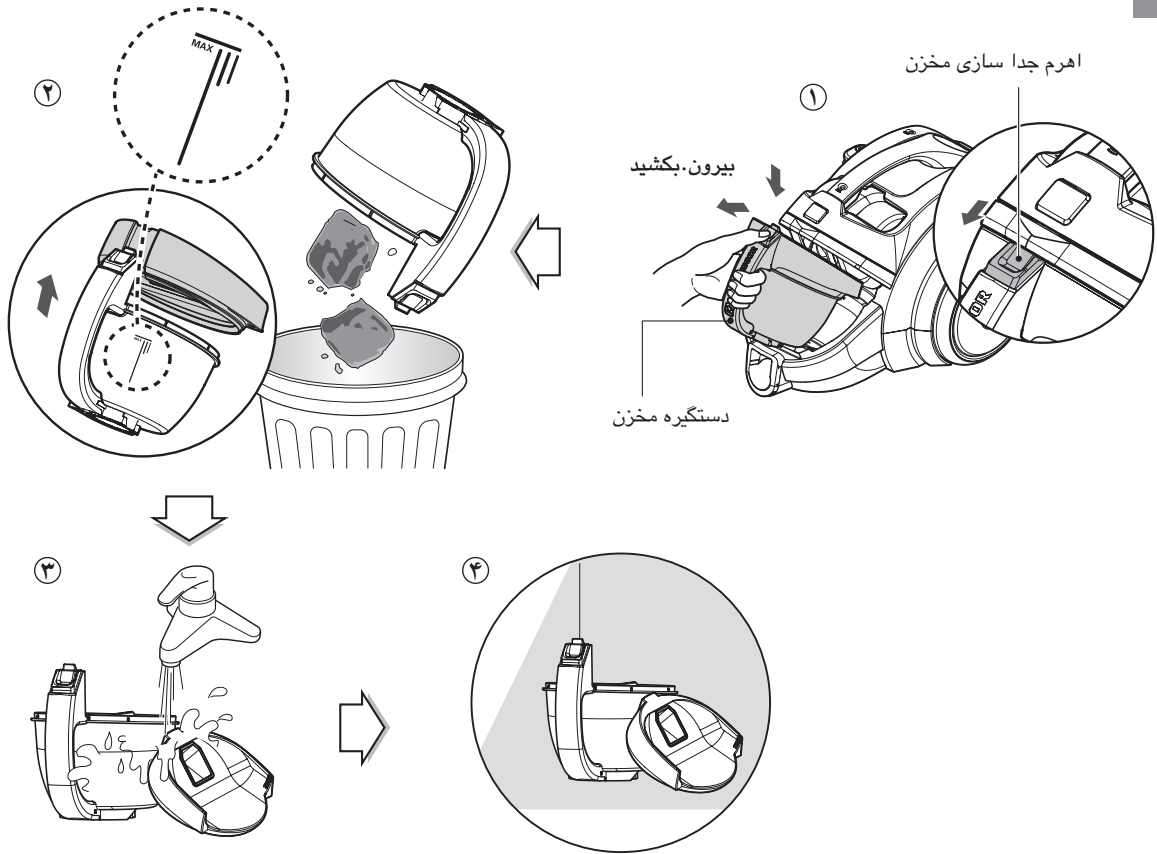


توجه

در صورت گم شدن قدرت مکش پس از تمیز کردن مخزن گرد و خاک، فیلتر هوا و فیلتر ایمنی موتور را تمیز کنید.
◀ صفحه بعد

- دکمه جداسازی مخزن را فشار داده و مخزن را بیرون بکشید.
- در مخزن را بلند کنید.
- در سایه آن را به طور کامل خشک کنید تا هیچگونه رطوبتی نداشته باشد.

نحوه ی استفاده تمیز کردن فیلتر هوا و فیلتر ایمنی موتور

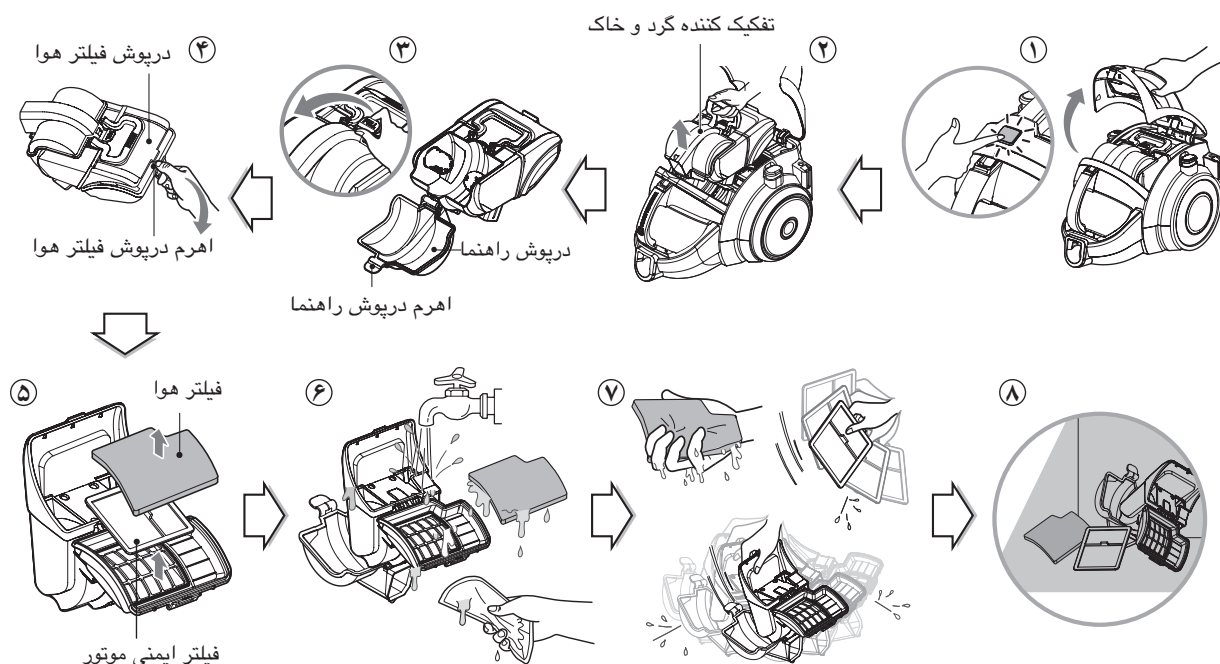

⚠ هشدار

بیش از ۲۴ ساعت در سایه به طور کامل خشک کنید.


توجه

در صورت خراب شدن فیلترها از آنها استفاده نکنید.
در چنین مواقعی، با مرکز خدمات مجاز گلدیران تماس بگیرید.
فیلترها را حداقل هر ماه یکبار بشویید.

در شکل بالا محل قرار گرفتن فیلتر هوا و فیلتر ایمنی موتور در قسمت بالای دستگاه چارو برقی نشان داده شده است.

- دکمه درپوش دستگاه را فشار دهید، درپوش بدنه را باز کنید.
- دستگیره جدا کننده گرد و غبار را گرفته و به طرف بالا بکشید.
- اهرم درپوش راهنما را کشیده و درپوش راهنما را باز کنید و گرد و خاک را پاک کنید.
- درپوش فیلتر اولیه را باز کنید.
- فیلتر هوا و فیلتر ایمنی موتور را درآورید.
- فیلتر هوا و فیلتر ایمنی موتور را با آب بشویید.
- فیلترها را با آب گرم نشویید.
- آب آنها را به طور کامل بگیرید.
- آنها را در سایه خشک کنید تا رطوبت به طور کامل از بین برود.
- فیلتر هوا و فیلتر ایمنی موتور فقط در شرایط بالا باید شسته شوند.

نحوه ی استفاده تمیز کردن فیلتر خروجی هوا

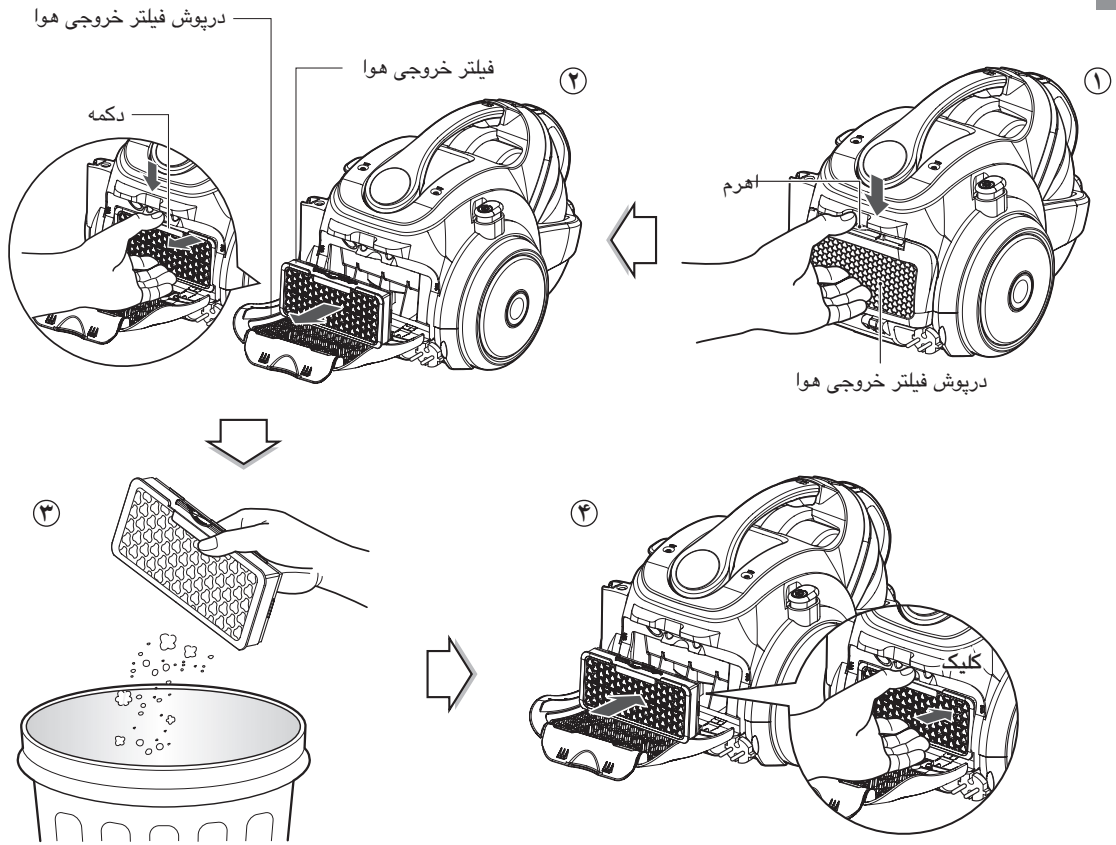

- فیلتر خروجی هوا عبارت است از یک فیلتر قابل استفاده ی مجدد.
- برای تمیز کردن فیلتر خروجی هوا، قاب فیلتر روی بدنه را بیرون کشیده و فیلتر را درآورید.
- فیلتر خروجی هوا را جدا کنید.
- گرد و غبار آن را بزدایید. (فیلتر را با آب نشویید)
- فیلتر خروجی هوا حداقل باید یک بار در سال تمیز شود.

سرهم کردن درپوش فیلتر خروجی هوا


- زائده های درپوش فیلتر خروجی هوا را در شیارهای بدنه جاروبرقی قرار دهید.
- آن را به بدنه وصل کنید.

اگر جاروبرقی کار نکرد چکار کنیم

ببینید آیا دوشاخه به درستی در پریز قرار گرفته است، آیا پریز برق کار می کند.

اگر عملکرد FOLLOW ME کار نکرد چه کنیم.

- حس گر فرستنده و حس گرهای گیرنده را بررسی کنید.
- ببینید آیا مانعی بر سر راه قرار دارد. (دیوار، لباس، غیره)
- در صورت مسدود شدن حس گرها، عملکرد FOLLOW ME به درستی عمل نخواهد کرد.
- در صورتی که حس گر فرستنده و حس گرهای گیرنده توسط گرد و خاک مسدود شوند آنها را با یک پارچه پنبه ای پاک کنید.
- هر چند وقت یک بار روزنه های مربوط به حس گرها را با یک پارچه پنبه ای تمیز کنید.

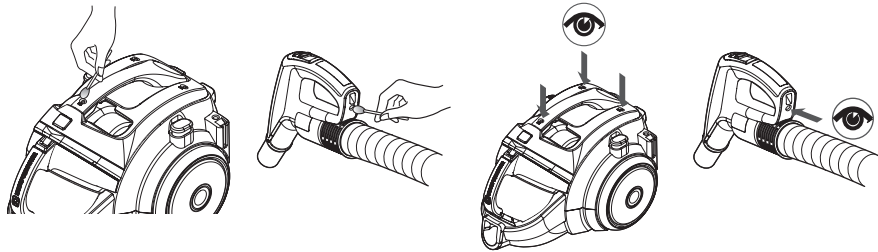

هنگام کم شدن قدرت مکش چه کار کنیم

- جاروبرقی را خاموش کرده و دوشاخه را از پریز بیرون بکشید.
- لوله تلسکوپی، شلنگ جاروبرقی، ابزار تمیز کننده را بررسی کرده و در صورت گرفتگی یا وجود اشیاء آنها را رفع کنید.
- از پر نشدن مخزن اطمینان حاصل کنید. در صورت نیاز آن را تخلیه کنید.
- ببینید آیا چیزی قسمت جدا کننده گرد و خاک را گرفته است. آن را درآورید.
- از عدم انسداد فیلتر خروجی هوا اطمینان حاصل کنید. در صورت نیاز فیلتر خروجی هوا را تمیز کنید.
- ببینید فیلتر هوای جدا کننده گرد و غبار مسدود نشده است. در صورت لزوم فیلتر هوا را تمیز کنید.

معدوم نمودن وسایل قدیمی

۱. وقتی که علامت ضربه بر روی سطل زباله چرخدار باشد بدان معناست که آن محصول تحت پوشش قوانین European Directive 2002/96/EC است.

۲. تمامی محصولات برقی و الکترونیکی باید جدا از زباله های عادی معدوم شوند. این محصولات توسط دولت یا شهرداری ها باید جمع آوری شوند.

۳. معدوم نمودن صحیح وسایل قدیمی به پیشگیری از آلودگی محیط زیست و سلامتی انسان کمک می کند.

۴. برای جزئیات بیشتر پیرامون معدوم نمودن وسایل قدیمی لطفا با شهرداری منطقه، سازمان بازیافت یا فروشگاه که محصول را از آنجا خریداری نموده اید تماس بگیرید.



فهرست نمایندگان لوازم خانگی شرکت خدمات گلдіران

کد نماینده	شهر	تلفن	کد نماینده	شهر	تلفن
۲۰۸۰۲	مراغه	۲۲۲۰۰۶۶-۲۲۲۸۵۲۷	۲۰۱۳۳	اشتهارد	۷۷۲۳۴۹۰
۲۰۸۰۳	میانه	۲۲۲۲۰۲۲-۲۲۳۳۶۷۹	۲۰۱۳۴	کرج	۶۶۴۷۷۵۱
۲۰۸۰۴	تبریز	۲۳۰۴۷۸۹	۵۰۱۸۶	کرج	۴۲۰۰۹۱۲
۲۰۸۰۶	عجبشیر	۶۲۲۳۸۱۵-۶۲۲۹۹۴۹	۶۰۱۸۹	کرج	۴۲۰۰۹۱۲
۲۰۸۰۷	آذرشهر	۴۲۲۳۸۸۲	۸۰۱۶۹	کرج	۴۲۰۰۹۱۲-۴۲۰۰۹۰۵-۶
۲۰۸۰۸	هادی شهر	۳۰۴۲۵۹۶	۲۲۴۰۱	ایلام	۲۳۵۳۸۴۳
۲۰۸۰۹	ملکان	۸۲۳۳۶۶۵	۲۲۴۰۲	ایلام	۲۳۶۴۷۳۰
۲۰۸۱۲	مراغه	۲۲۳۹۲۴۱	۲۲۴۰۳	آبدانان	۶۲۳۶۲۱۱-۶۲۳۰۱۱۰
۲۰۸۱۷	بناب	۷۲۳۰۲۴۰	۲۲۴۰۴	دره شهر	۵۲۲۷۶۹۲
۲۰۸۱۸	شسبستر	۲۲۲۰۲۰۲	۲۵۱۹۹	دهلران	۷۲۲۹۶۶۸
۲۰۹۰۱	ارومیه	۲۲۴۰۹۲۰-۲۲۲۰۲۵۰	۲۱۲۰۴	بندر دیر	۸۲۲۲۶۰۶
۲۰۹۰۳	مهاباد	۲۲۲۵۱۴۵	۲۱۲۰۹	برازجان	۴۲۳۳۷۹۸
۲۰۹۰۵	سلماس	۵۲۴۳۷۵۸	۲۱۲۱۱	ولایت جم	۷۶۳۴۳۱۸
۲۰۹۰۷	میاندوآب	۲۲۳۳۶۲۱	۲۱۲۱۲	بوشهر	۲۵۴۳۵۹۹-۲۵۴۳۵۹۸
۲۰۹۰۸	ماکو	۲۲۴۵۹۰۰	۲۰۱۰۲	کرج	۲۲۴۰۴۰۲-۲۲۴۰۴۰۱-۲۲۰۸۱۵۵
۲۰۹۰۹	ارومیه	۲۸۴۲۱۷۰-۲۸۴۲۴۹۳	۲۰۱۰۳	ورامین	۲۲۵۲۲۵۲
۲۰۹۱۰	شاهین دژ	۴۲۲۲۱۲۳	۲۰۱۰۵	اسلامشهر	۲۳۵۱۱۲۳
۲۰۹۱۱	نقده	۶۲۶۰۶۳۴	۲۰۱۰۹	تهران	۷۷۳۵۹۱۶۲-۷۷۷۸۰۴۰۰
۲۰۸۱۳	تبریز	۵۴۰۲۳۳۶-۵۴۰۶۲۸۴-۵۴۲۲۵۲۲	۲۰۱۱۰	تهران	۳-۶۶۵۷۴۱۰۰-۶۶۵۷۴۱۱۰۵
۲۰۸۱۴	مرند	۲۲۲۱۲۲۳-۲۲۶۳۰۱۳	۲۰۱۱۱	تهران	۲۲۵۰۴۴۵۰-۲۲۳۰۱۷۱۹-۲۲۳۱۳۹۶۵
۲۰۸۱۵	اهر	۲۲۳۳۴۴۴	۲۰۱۱۲	تهران	۶۶۰۰۴۷۸۴
۲۰۸۱۶	سراب	۲۲۳۳۶۷۰	۲۰۱۱۸	تهران	۵-۶۶۳۸۹۸۸۴
۲۰۸۱۹	خسروشهر	۲۶۶۳۷۵۰	۲۰۱۲۰	تهران	۴۴۴۳۷۶۶۵
۲۰۹۰۴	بوکان	۶۲۳۳۸۵۲-۶۲۳۳۸۵۳-۶۲۲۴۶۲۰	۲۰۱۲۱	پاکدشت	۳۰۳۷۸۹۳-۳۰۴۰۸۴۳
۲۰۹۱۳	پیرانشهر	۴۲۲۹۹۱۸	۲۰۱۲۲	دماوند	۵۲۳۴۶۶۴-۵۲۳۴۴۵۴
۲۰۹۱۴	خوی	۲۴۴۴۵۰۸	۲۰۱۲۳	تهران	۸۱۷۲۲۰۰۷-۸۹۳۰۵۱۰۱-۳
۲۰۹۱۵	قره ضیاءالدین	۲۷۲۶۶۸۶	۲۰۱۲۴	کرج	۲۵۲۳۱۹۹-۲۵۲۳۱۲۳۳-۲۵۲۷۵۳۰
۲۰۹۱۶	نقده	۶۲۳۱۳۳۲	۲۰۱۲۵	تهران	۵-۳۳۰۵۷۳۳۴
۲۰۹۱۷	تکاب	۵۲۲۴۳۱۰	۲۰۱۲۶	شهریار	۳۲۵۵۸۰۹-۳۲۵۵۸۲۴-۳۲۵۵۸۲۰
۲۰۹۱۸	ارومیه	۳۴۴۰۱۲۳	۲۰۱۲۷	تهران	۶۶۳۸۹۸۹۹-۶۶۳۸۵۷۵۸
۲۲۲۰۱	اردبیل	۶۶۱۷۸۱۴-۶۶۱۸۰۰۱	۲۰۱۲۸	تهران	۵۵۹۵۵۰۰۰-۵۵۹۰۳۹۰۰
۲۲۲۰۲	پارس آباد مغان	۷۲۳۰۰۰۱	۲۰۱۳۰	تهران	۸۸۷۰۳۶۰۸-۸۹۳۰۵۳۰۵
۲۲۲۰۳	خلخال	۴۲۳۱۴۲۰	۲۰۱۳۲	شهرقدس	۴۶۸۸۱۹۹۶
۲۲۲۰۴	مشکین شهر	۵۲۳۹۱۱۸-۵۲۴۰۸۸۸	۲۵۱۹۶	رباط کریم	۴۳۲۹۳۸۹
۲۰۳۰۱	اصفهان	۶۲۳۳۶۶۲-۶۲۸۰۲۵۶-۶۲۳۳۶۶۲	۶۰۱۶۰	تهران	۵۶۵۴۶۹۷۸
۲۰۳۰۵	خمینی شهر	۳۶۵۲۸۴۴	۶۰۱۸۱	تهران	۸۸۵۵۵۶۴۲
۲۰۳۰۶	مبارکه	۵۲۳۵۰۰۰	۸۰۱۶۱	تهران	۴-۸۸۶۸۶۰۵۳
۲۰۳۰۷	گلپایگان	۳۲۲۸۹۸۹	۲۲۷۰۱	شهرکرد	۲۲۲۴۴۸۱
۲۰۳۰۸	داران	۴۲۲۲۲۳۲	۲۲۷۰۳	بروجن	۴۳۳۸۹۲۴
۲۰۳۰۹	کاشان	۴۲۴۳۰۰۰-۴۴۶۷۵۰۰	۲۲۷۰۴	فارسان	۷۲۳۹۴۰۰
۲۰۳۱۰	شهرضا	۲۲۲۲۱۲۰	۲۰۲۲۸	فردوس	۲۲۲۱۱۰۱
۲۰۳۱۲	شاهین شهر	۵۲۴۹۹۹۳	۲۵۲۴۸	بیرجند	۲۲۳۱۱۹۰-۲۲۳۴۵۷۷
۲۰۳۱۳	نطنز	۴۲۴۳۳۷۸	۲۰۳۰۱	مشهد	۸۴۲۰۲۲۷
۲۰۳۱۴	گلپایگان	۳۲۴۳۳۰۹	۲۰۳۰۴	نیشابور	۲۳۳۰۴۰۰-۲۳۳۰۳۰۰
۲۰۳۱۵	کاشان	۴۴۷۱۱۹۰	۲۰۳۰۵	سبزوار	۲۲۲۵۸۵۵
۲۰۳۱۶	نجف آباد	۲۶۲۷۸۳۲	۲۰۳۰۸	خلیل آباد	۷۷۲۳۲۵۲
۲۰۳۱۷	اصفهان	۲۲۵۸۷۵۱-۲۲۶۳۳۷۹	۲۰۳۱۱	قوچان	۲۲۴۳۵۱۵
۲۰۳۱۸	نائین	۲۲۵۱۳۳۷	۲۰۳۱۲	ترتت حیدریه	۲۲۲۳۴۷۷-۲۳۱۳۴۷۷
۲۰۱۲۹	هشتگرد	۱۶۹۵۸۶۰۰	۲۰۳۱۴	مشهد	۸۹۱۱۳۳۳
۲۰۱۳۱	کرج	۴۴۳۵۶۶۷	۲۰۳۱۵	کاشمر	۸۲۳۳۸۵۵

فهرست نمایندگان لوازم خانگی شرکت خدمات گلдіران

کد نماینده	شهر	تلفن	کد نماینده	شهر	تلفن
۲۰۲۱۷	تربت حیدریه	۲۲۳۰۰۰۱	۲۲۶۰۵	زابل	۲۲۲۵۹۱۹
۲۰۲۲۰	چناران	۶۲۲۶۴۴۶-۶۲۲۹۱۹۲	۲۲۶۰۶	ایرانشهر	۲۲۳۰۱۳۷
۲۰۲۲۲	سبزوار	۲۲۲۹۵۶۰-۲۲۳۸۳۴۸	۲۰۴۰۲	آباده	۲۲۳۸۵۹۹-۲۲۴۴۴۸۸
۲۰۲۲۳	خواف	۴۲۲۶۸۹۳	۲۰۴۰۳	داراب	۶۲۴۴۵۶۲
۲۰۲۲۴	سرخس	۵۲۳۹۵۱۶-۵۲۲۱۲۱۱	۲۰۴۰۴	فسا	۲۲۲۶۰۱۰-۲۲۳۶۰۱۰
۲۰۲۲۵	گناباد	۷۲۵۱۶۶۱	۲۰۴۰۷	خنج	۴۲۵۴۴۹۴-۴۵۲۴۴۹۵
۲۰۲۲۶	مشهد	۸۵۹۷۷۷۶	۲۰۴۰۹	مرودشت	۲۲۳۲۷۵۴
۲۰۲۲۷	مشهد	۷۲۵۷۸۸۹	۲۰۴۱۰	نیریز	۵۲۳۹۱۴۲-۵۲۳۱۵۸۸
۲۰۲۲۹	تایباد	۴۲۳۰۵۶۹	۲۰۴۱۲	نورآباد ممسنی	۴۲۲۳۷۸۷
۲۰۲۳۰	فریمان	۶۲۲۲۶۷۹	۲۰۴۱۴	کازرون	۲۲۲۵۲۶۳
۲۰۲۳۱	تربت جام	۲۲۲۴۲۱۱	۲۰۴۱۵	ارسنجان	۷۶۲۵۷۷۵
۲۰۲۰۳	بجنورد	۲۲۲۹۶۴۱-۲۲۵۰۷۰۵	۲۰۴۱۷	شیراز	۱-۸۲۰۹۲۷۲
۲۰۲۰۹	شیروان	۶۲۲۷۸۵۴	۲۰۴۱۸	چهرم	۴۴۴۵۷۴۷
۲۰۲۱۸	اسفراین	۷۲۲۲۶۶۹	۲۰۴۱۹	نورآباد ممسنی	۴۲۲۴۲۳۹
۲۰۲۱۹	اشخانه	۴۲۲۵۶۵۵	۲۰۴۲۰	شیراز	۷۲۷۳۴۶۷-۷۲۷۷۰۵۹
۲۰۲۲۱	گره	۳۲۵۳۳۹۹۰	۲۰۴۲۱	لارستان	۲۲۲۶۰۲۲
۲۵۰۰۷	بجنورد	۲۲۳۳۹۵۲-۲۲۳۸۰۴۵	۲۰۴۲۲	خرم بید	۳۵۲۱۳۰۸
۲۰۵۰۳	آبادان	۴۴۳۳۲۱۲-۴۴۳۱۲۸۸	۲۰۴۲۳	لامرد	۵۲۲۴۰۵۴-۵۲۲۲۹۸۵
۲۰۵۰۷	دزفول	۲۲۲۲۸۲۳-۲۲۲۹۴۰۰-۲۲۴۲۲۲۰	۲۰۴۲۴	فیروزآباد	۶۲۳۶۶۵۵
۲۰۵۰۹	دزفول	۲۲۲۷۳۹۹	۲۰۴۲۵	اقلید فارس	۴۲۲۲۹۵۳
۲۰۵۱۰	خرمشهر	۴۲۲۳۸۱۲-۴۲۲۳۰۶۰	۲۰۴۲۶	شیراز	۶۲۵۱۱۷۳
۲۰۵۱۱	ماهشهر	۲۳۲۶۵۹۷-۲۳۳۱۸۳۲	۲۱۴۰۱	قزوین	۲۲۲۳۱۸۳
۲۰۵۱۳	شوش دانیال	۵۲۲۷۱۲۱	۲۱۴۰۳	قزوین	۲۵۶۳۱۱۸-۲۵۶۸۸۱۸
۲۰۵۱۴	شوشتر	۶۲۴۲۸۰۰	۲۱۴۰۴	تاکستان	۵۲۲۸۲۳۹
۲۰۵۱۷	شادگان	۳۲۲۰۰۶۸	۲۱۴۰۵	قزوین	۳۳۲۲۸۴۶
۲۰۵۲۱	خرمشهر	۴۲۲۶۳۲۲-۴۲۲۸۲۲۲	۲۱۴۰۶	بوئین زهرا	۴۲۲۵۲۳۵
۲۰۵۲۴	ایذه	۵۲۳۱۲۱۱	۲۵۰۴۱	قزوین	۳۳۳۵۶۴۶-۳۳۲۱۱۴۲-۳
۲۰۵۲۵	رامهرمز	۲۲۲۰۴۱۵	۲۱۵۰۱	قم	۶۶۰۱۴۸۰
۲۰۵۲۷	بندر امام	۲۲۳۰۰۲۳	۲۵۰۳۳	قم	۷۶۰۳۴۳۴
۲۰۵۳۰	اندیمشک	۴۲۲۵۵۷۲	۲۲۳۰۱	سنندج	۳۲۸۸۳۶۹-۳۲۴۷۵۴۵
۲۰۵۳۲	اهواز	۱-۲۹۲۴۱۰۰	۲۲۳۰۲	بیجار	۴۲۲۵۶۲۲-۴۲۲۲۲۵۸
۲۰۵۳۳	آبادان	۴۴۴۴۰۰۰-۴۴۲۶۸۵۳	۲۲۳۰۳	سقز	۳۲۳۸۸۸۲-۳۲۳۸۸۸۱
۲۰۵۳۴	بهبهان	۴۲۲۵۲۲۷	۲۲۳۰۵	سنندج	۳۲۳۷۷۰۶
۲۰۵۳۵	امیدیه	۳۲۳۱۹۸۹	۲۱۷۰۴	کهنوج	۵۲۲۶۵۱۱
۲۵۲۱۴	اندیمشک	۴۲۲۰۸۱۴	۲۱۷۰۵	رفسنجان	۵۲۲۸۴۶۹
۲۵۳۰۵	باغملک	۴۲۲۱۴۱۴	۲۱۷۰۷	سیرجان	۳۲۲۱۹۶۸
۶۰۱۸۲	اهواز	۶۱۱۳۳۷۹۷۸۷	۲۱۷۰۸	عنبرآباد	۴۶۳۳۳۱۱
۲۲۰۰۱	زنجان	۷۲۷۵۹۲۲	۲۱۷۰۹	رفسنجان	۵۲۲۰۹۵۹
۲۲۰۰۲	ابه‌ر	۵۲۷۷۷۱۱	۲۱۷۱۱	کرمان	۲۴۴۹۴۲۰
۲۲۰۰۳	خدایبده (قیدار)	۴۲۲۰۹۰۷	۲۱۷۱۲	بافت	۴۲۲۴۴۴۰
۲۲۰۰۴	خرم دره	۵۵۲۳۷۳۵	۲۱۷۱۳	انار	۳۲۲۲۱۱۶
۲۰۷۰۸	محمود آباد	۷۷۴۶۰۸۳	۲۱۷۱۴	بم	۲۲۱۴۷۸۴
۲۰۷۲۳	فریدونکنار	۵۶۵۱۴۵۰-۵۶۵۱۴۵۱	۲۱۷۱۵	جیرفت	۲۳۱۶۶۳۱-۲۴۱۴۱۹۵
۲۲۵۰۱	سمنان	۳۳۳۳۱۰۴-۳۳۳۶۸۷۷	۲۱۶۰۲	کرمانشاه	۷۲۲۵۶۲۷
۲۲۵۰۲	دامغان	۵۲۴۲۶۱۵	۲۱۶۰۳	کرمانشاه	۸۲۴۴۳۴۳-۸۲۳۴۵۰۰
۲۲۵۰۳	گرمسار	۴۲۲۵۷۶۷	۲۱۶۰۴	سرپل ذهاب	۲۲۲۱۴۰۶
۲۲۵۰۴	شاهرود	۳۳۴۴۷۱۷	۲۱۶۰۵	اسلام آباد غرب	۵۲۲۳۱۸۲-۵۲۲۷۸۶۷
۲۲۵۰۵	شاهرود	۲۲۲۱۹۶۵	۲۱۶۰۶	کرمانشاه	۷۲۲۷۱۰۳
۲۲۶۰۳	زاهدان	۳۲۶۳۷۲۹-۳۲۶۳۷۳۹-۳۲۶۳۷	۲۱۶۰۷	صحنه	۳۲۲۷۰۳۲
۲۲۶۰۴	چابهار	۴۲۸۳۵۱۸	۲۱۶۰۸	جوانرود	۶۲۲۲۵۱۲

فهرست نمایندگان لوازم خانگی شرکت خدمات گلдіران

کد نماینده	شهر	تلفن
۲۱۶۰۹	کنگاور	۹۱۸۸۳۷۶۰۸۱
۲۲۸۰۱	دوگنبدان	۹۱۷۶۶۰۱۰۷۰-۹۳۵۶۰۴۹۸۰۲
۲۲۳۰۷	مریوان	۹۱۸۹۸۵۰۶۹۴-۰۹۳۷۴۸۲۴۲۳۸
۲۱۷۱۶	کرمان	۹۱۳۳۹۹۶۸۵۰
۲۵۱۸۱	زرنند	۹۱۳۲۹۷۲۳۳۱
۲۲۸۰۳	یاسوج	۹۱۷۷۴۱۷۲۶۹
۲۱۰۰۲	گنبدکاووس	۹۱۱۱۷۲۱۷۱۴
۲۱۰۰۳	کردکوی	۹۱۱۳۷۵۷۹۱۱
۲۱۰۰۴	علی آباد کتول	۹۱۱۳۷۳۰۰۰۳
۲۱۰۰۵	گرگان	۹۱۱۳۷۷۱۳۰۰-۹۱۱۷۰۴۰۱۹
۲۱۰۰۶	آق قلا	۹۱۱۷۵۲۰۹۸
۲۱۰۰۷	کلالة	۹۱۱۹۷۶۴۰۲۶
۲۱۰۰۹	مینودشت	۹۱۱۳۷۴۰۶۱۶-۹۱۱۷۷۶۰۹۹
۲۱۰۱۰	گرگان	۹۱۱۱۷۵۶۹۷۲
۲۱۰۰۸	گنبدکاووس	۹۱۱۳۷۲۲۳۱۴
۲۰۶۰۱	رشت	۹۱۱۳۳۱۳۳۵۱
۲۰۶۰۳	بندر انزلی	۹۱۱۱۸۳۹۱۱۰
۲۰۶۰۵	لاهیجان	۹۱۱۱۴۱۳۴۷۱
۲۰۶۰۶	لنگرود	۹۱۱۱۴۵۴۷۸۴
۲۰۶۰۷	رودسر	۹۱۱۱۴۲۱۲۰۱
۲۰۶۰۸	تالش	۹۱۱۱۸۱۹۳۲۲
۲۰۶۰۹	تالش	۹۱۱۳۸۲۳۰۱۲
۲۰۶۱۱	آستانه اشرفیه	۹۱۱۱۴۲۴۶۳۱
۲۰۶۱۲	رضوان شهر	۹۱۱۱۴۸۰۴۸۹
۲۰۶۱۳	خمام	۹۱۱۳۳۹۷۷۴۷
۲۰۶۱۴	رودبار	۹۱۱۱۳۶۹۷۸۱
۲۰۶۱۵	صومعه سرا	۹۱۱۱۳۲۲۱۰۷
۲۰۶۱۶	لوشان	۹۱۱۱۳۸۵۹۶۵
۲۰۶۱۸	رشت	۹۱۱۱۳۲۰۷۸۳
۲۰۶۱۹	بندر انزلی	۹۱۱۱۸۱۱۱۹۸
۲۰۶۲۰	لشت نشاء	۹۱۱۳۳۵۳۳۵۶
۲۰۶۲۱	کلاچای	۹۱۱۳۴۲۵۰۱۳
۲۰۶۲۲	املش	۹۱۱۱۴۲۱۴۳۶
۲۰۶۲۴	لاهیجان	۹۱۱۱۴۱۳۴۴۵
۲۰۶۲۵	صومعه سرا	۹۱۱۳۸۲۱۰۴۱
۲۰۶۲۶	رشت	۹۱۱۱۳۱۴۹۷۶
۲۰۶۲۷	فومن	۰۹۱۱۱۳۸۶۰۹۷-۹۳۵۱۳۸۶۰۹۷
۲۰۶۲۸	آستارا	۹۱۱۱۸۵۴۹۸۱
۲۰۶۲۹	سیاهکل	۹۱۱۷۴۸۸۸۵۸
۲۰۶۳۰	رستم آباد رودبار	۹۱۱۳۳۷۱۸۵۹
۲۰۶۳۱	رشت	۹۱۱۳۳۵۲۰۵۱
۲۰۶۳۲	ماسال	۹۱۱۹۸۳۹۵۸۰
۲۰۶۳۳	آستارا	۹۱۱۱۸۵۵۱۵۳
۲۰۷۱۸	بهشهر	۹۱۱۱۵۶۶۵۰۳-۹۱۱۸۶۳۵۸۴۴
۲۰۷۳۳	تنکابن	۹۱۱۱۹۲۶۷۵۵
۲۲۱۰۱	خرم آباد	۹۱۶۱۶۱۲۳۰۳
۲۲۱۰۴	بروجرد	۹۱۶۱۶۲۳۴۰۱
۲۲۱۰۵	الیگودرز	۹۱۶۶۶۴۲۰۴۹
۲۲۱۰۶	خرم آباد	۹۱۶۶۶۳۲۴۶۳
۲۲۱۰۷	پلدختر	۹۱۶۶۶۱۴۴۲۳
کد نماینده	شهر	تلفن
۲۲۱۰۸	کوهدشت	۶۲۳۸۳۱۰
۲۲۱۰۹	بروجرد	۲۶۱۷۹۸۸-۴۴۶۰۹۲۲
۲۲۱۱۰	دورود	۴۲۹۹۸۳۱
۲۰۶۲۳	رامسر	۵۲۵۹۹۶۸
۲۰۷۰۳	بابل	۳۷۲۹۴۹-۳۷۱۹۴۸
۲۰۷۰۴	بابلسر	۵۲۳۲۱۳۳-۵۲۵۴۷۳۲
۲۰۷۱۰	نور	۶۲۳۲۶۱۰
۲۰۷۱۲	تنکابن	۴۲۲۵۳۸۲
۲۰۷۱۳	خرر شهر	۵۲۲۵۶۹۳
۲۰۷۱۴	محمودآباد	۷۷۴۵۴۴۶
۲۰۷۱۵	جویبار	۳۲۲۸۴۴۸
۲۰۷۱۶	نکاء	۵۶۲۵۷۲۲
۲۰۷۱۷	گلوگاه	۶۲۲۲۷۹۳
۲۰۷۲۰	تنکابن	۴۲۸۲۱۹۹
۲۰۷۱۲	چالوس	۲۲۴۶۷۸۲
۲۰۷۲۲	قائم شهر	۲۲۲۰۶۹۵
۲۰۷۲۵	فریدون کنار	۵۶۵۴۳۰۹
۲۰۷۲۷	ساری	۳۲۱۳۰۴۸
۲۰۷۲۸	ساری	۲۲۶۳۵۳۵
۲۰۷۳۰	آمل	۳۲۶۹۱۶۲
۲۰۷۳۱	عباس آباد تنکابن	۴۶۲۶۶۱۵
۲۰۷۳۲	نوشهر	۳۲۴۶۲۲۱
۲۰۷۳۴	قائم شهر	۳۲۴۷۷۲۹
۲۰۷۳۵	نوشهر	۳۲۳۹۷۶۰-۳۲۳۴۸۰۴-۱۹۳۹۰۹۷
۲۰۷۳۶	بابل	۳۲۹۶۲۲۶-۳۲۹۶۲۵۹
۲۰۷۳۷	کلاردشت	۲۶۲۰۰۵۵
۲۰۷۳۸	آمل	۲۲۸۲۲۲۸
۲۰۷۳۹	چالوس	۲۲۱۶۷۱۴
۲۰۷۴۰	سوادکوه	۵۲۲۶۲۷۸-۵۲۲۱۶۰۰
۲۰۷۴۱	رویان	۶۲۴۵۱۹۵-۶۲۴۷۷۴۸
۲۰۷۴۲	چمستان	۵۲۲۹۲۲۳
۲۰۷۴۳	ساری	۳۱۱۹۴۶۵-۳۲۵۵۴۶۵
۲۱۹۰۱	اراک	۲۲۴۹۲۱۰
۲۱۹۰۲	خمین	۲۲۲۴۴۱۰
۲۱۹۰۳	ساوه	۲۲۲۴۶۵۴-۲۲۲۰۹۰۰-۴۲۳۷۴۷۰-۱
۲۱۹۰۵	دلیجان	۴۲۳۸۱۹۰
۲۱۹۰۶	اراک	۳۶۶۷۲۹۲-۳۶۸۸۴۴۰-۲
۲۱۹۰۷	مامونیه	۵۲۳۸۹۱۸
۲۱۹۰۸	محلات	۳۲۲۲۶۶۲
۲۱۱۰۴	بندرلنگه	۲۲۴۲۶۴۱
۲۱۱۰۶	میناب	۲۲۸۳۰۷۴
۲۱۱۱۱	بندرعباس	۳۳۵۴۰۰۲-۳۳۴۰۷۳۹
۲۱۱۱۲	جزیره کیش	۴۴۶۲۶۷۴-۴۴۲۱۵۶۰
۲۱۱۱۳	رودان	۴۲۳۷۰۵۲
۲۱۸۰۱	همدان	۲۵۱۳۲۳۴-۲۵۲۶۷۶-۶۲۴۶۷۴۵
۲۱۸۰۳	ملایر	۳۲۲۸۹۰۰
۲۱۸۰۴	اسدآباد	۳۲۲۵۱۸۴
۲۱۸۰۵	همدان	۲۵۴۵۵۹۳
۲۱۸۰۶	کیودر آهنگ	۵۲۲۶۹۹۶-۵۲۲۲۸۰۵
۲۱۳۰۲	یزد	۸۲۸۹۰۷۵

فهرست نمایندگان لوازم خانگی شرکت خدمات گلдіران

کد نماینده	شهر	تلفن
۲۱۳۰۳	یزد	۷۲۶۵۱۲۱-۷۲۴۹۹۱۴
۲۱۳۰۴	اردکان	۷۲۴۱۶۱۷
۲۱۳۰۵	هرات	۵۷۲۲۲۸۲-۵۷۲۲۰۰۹
۲۱۳۰۶	طیس	۴۲۳۴۰۴۶
۲۱۳۰۷	مهریز	۵۲۲۲۵۳۸-۵۲۲۹۳۹۹
۲۰۲۰۲	بیرجند	۴۴۳۳۰۹-۴۴۳۲۵۱۵
۲۲۳۰۶	قروه	۵۲۲۸۴۵۱
۵۰۱۸۵	تهران	۸۴۷۳۱۱۵۹-۸۴۷۳۱۱۰۱
۶۰۱۸۰	تهران	۵۶۵۴۶۴۸۹-۵۶۵۴۰۱۹۷
۶۰۱۸۳	اصفهان	۲۶۷۰۹۰۰
۶۰۱۸۴	تبریز	۳۳۶۷۹۴۹
۶۰۱۸۵	تهران	۸۴۷۳۱۱۱۱
۶۰۱۸۶	شیراز	۲۳۲۰۸۲۰
۶۰۱۸۷	مشهد	۸۴۵۳۲۴۰
۶۰۱۸۸	اهواز	۳۹۲۴۵۷۳

مرکز اطلاع رسانی و خدمات مشتریان گلдіران ۰۹۶۸۵

