



LG Customer Information Center

สอบถามข้อมูลผลิตภัณฑ์และศูนย์บริการใกล้บ้าน

โทรฟรี  
**1-800-545454**  
กรุงเทพและปริมณฑล  
**0-2878-5757**

เว็บไซต์และอีเมล :  
<http://www.lg.com/th> และ [support.lgeth@lge.com](mailto:support.lgeth@lge.com)

โปรดอ่านคู่มือการใช้งานและเงื่อนไขการรับประกัน  
จากบัตรรับประกันสินค้าเพื่อความเข้าใจในการใช้งาน  
บันทึกชื่อรุ่นและหมายเลขประจำเครื่อง  
เพื่อความสะดวกในการติดต่อ  
กับศูนย์บริการของแอลจีทั่วประเทศ



**LG**

Life's Good

ไ ท ย  
ENGLISH

คู่มือการใช้  
User Guide

**LG-A270**

MFL67478236 (1.0)

[www.lg.com](http://www.lg.com)

### โปรแกรมรับรองผลิตภัณฑ์ LG

เรียน ท่านผู้มีอุปการคุณ

ขณะนี้ บริษัท LG ได้ดำเนินงานตรวจสอบสินค้าและผลิตภัณฑ์ของทาง LG เพื่อคุ้มครองผู้บริโภค จากการจำหน่ายผลิตภัณฑ์ลอกเลียนแบบจากตลาดลักลอบนำเข้าสินค้ารวมถึงเพื่อให้แน่ใจว่าลูกค้าได้รับบริการทางด้านบริการประกันสินค้าอย่างเป็นทางการ เพื่อให้แน่ใจว่าโทรศัพท์ของท่าน เป็นผลิตภัณฑ์แท้จากทาง LG, หนึ่งในข้อความพร้อมด้วย IMEI เครื่อง จะถูกส่งมายัง บริษัท LG โดยอัตโนมัติ นับตั้งแต่วันที่ซื้อผลิตภัณฑ์และเริ่มใช้บริการ ทั้งนี้ LG จะเป็นผู้ชำระค่าบริการ SMS สำหรับโปรแกรมตรวจสอบผลิตภัณฑ์นี้

สำหรับสิทธิพิเศษ ท่านจะได้รับสิทธิในการต่อระยะเวลาการรับประกันฟรีเพิ่มขึ้นหนึ่งเดือน โดยสิทธิพิเศษนี้ครอบคลุมเฉพาะการรับประกันตัวเครื่อง ไม่รวมแบตเตอรี่ และ อุปกรณ์เสริมอื่น ๆ ทั้งนี้ที่โทรศัพท์ของคุณได้รับการตรวจสอบและรับรอง คุณจะได้รับข้อความรับรอง "โทรศัพท์เครื่องนี้ คือผลิตภัณฑ์จากบริษัท LG"

โดยทุกหมายเลข IMEI ที่ส่งถึงบริษัท LG สามารถการันตีได้ว่า จะได้รับสิทธิการรับประกันสินค้า อันเนื่อง จากขอบปรองจากมาตรฐานในขั้นตอนการผลิต โดยไม่จำเป็นต้องแสดงหลักฐานในการซื้อหรือ บัตรรับประกันสินค้า นับตั้งแต่วันที่ท่านซื้อผลิตภัณฑ์

### Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. LG will bear the cost of one SMS for the product authentication program.

For promotion, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories.

Once your phone is authenticated, you will receive the message 'Your handset is a genuine LG product.' The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

# LG-A270 คู่มือการใช้ - ไทย

คู่มือนี้จะช่วยให้คุณทำความรู้จักโทรศัพท์มือถือใหม่ของคุณ ซึ่งจะให้คำอธิบายที่เป็นประโยชน์ของคุณสมบัติต่างๆ ในโทรศัพท์ของคุณ

ข้อมูลบางอย่างในคู่มือเล่มนี้อาจแตกต่างจากโทรศัพท์ของคุณ ขึ้นอยู่กับซอฟต์แวร์ของโทรศัพท์หรือผู้ให้บริการของคุณ



# สารบัญ

เริ่มทำความรู้จักกับโทรศัพท์ของคุณ .....	3	มีเดีย.....	16
การใส่ซิมการ์ดและการชาร์จแบตเตอรี่.....	5	เครื่องมือ .....	19
ข้อมูลบนหน้าจอ.....	7	สมุดบันทึก .....	20
เมนูและตัวเลือก .....	8	ตั้งค่า .....	21
การป้อนข้อความ .....	9	คำแนะนำเพื่อความปลอดภัยและการใช้งาน อย่างมีประสิทธิภาพ .....	24
การอ้างอิงคุณสมบัติอย่างย่อ.....	12	อุปกรณ์เสริม.....	32
ข้อความ .....	12	การแก้ปัญหา .....	33
รายชื่อ.....	13		
ข้อมูลการโทร .....	15		
เกมส์ .....	15		
แฟ้มข้อมูล .....	16		

# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



# เริ่มทำความรู้จักกับโทรศัพท์ของคุณ



ช่องเสียบเครื่องชาร์จ  
ใหญ่คุณชาร์จไฟเท่านั้น



ไฟด้านนอก

# การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

## การใส่ซิมการ์ด

เมื่อคุณสมัครใช้บริการเครือข่ายโทรศัพท์มือถือ คุณจะได้รับซิมการ์ดพร้อมกับรายละเอียดการสมัครขอรับบริการ เช่น PIN ของคุณ บริการเสริมที่มีให้เลือกใช้ได้ และอื่นๆ


### ข้อสำคัญ!

- > ซิมการ์ดพลาสติกและตัวสัมผัสอาจชำรุดเสียหายได้ง่ายหากถูกขูดขีดหรือหักงอ ดังนั้น จึงควรใช้งานใส่หรือถอดซิมการ์ดด้วยความระมัดระวัง เก็บซิมการ์ดทั้งหมดให้พนมือเด็กเล็ก
- > รองรับเฉพาะซิม 2G เท่านั้น

# การใส่ซิมการ์ดและการชาร์จแบตเตอรี่

## ภาพประกอบ

- 1 เปิดฝาครอบแบตเตอรี่
- 2 ถอดแบตเตอรี่ออก
- 3 ใส่ซิมการ์ด
- 4 ใส่แบตเตอรี่
- 5 ปิดฝาครอบแบตเตอรี่
- 6 ชาร์จแบตเตอรี่

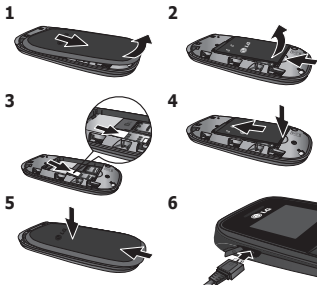

# ข้อมูลบนหน้าจอ




# ไอคอนบนหน้าจอ

	แสดงความแรงของสัญญาณเครือข่าย
	แสดงระดับประจุไฟของแบตเตอรี่
	แสดงข้อความตัวอักษรใหม่
	แสดงข้อความเสียงใหม่

	แสดงว่ามีการตั้งนาฬิกาปลุก
	แสดงว่าโทรศัพท์ของคุณใช้รูปแบบเสียงทั่วไป
	แสดงว่าโทรศัพท์ของคุณใช้รูปแบบเสียงเงียบ
	แสดงว่าโทรศัพท์ของคุณใช้รูปแบบเสียงนอกอาคาร
	แสดงว่าโทรศัพท์ของคุณใช้รูปแบบเสียงชุดหูฟัง
	แสดงว่าสายเรียกเข้าทั้งหมดจะถูกโอนไปยังอีกหมายเลขอื่น
	แสดงว่าโทรศัพท์ของคุณอยู่ในโหมด Flight
	แสดงนัดหมายใหม่

# เมนูและตัวเลือก

โทรศัพท์ของคุณมีชุดฟังก์ชันที่ช่วยให้คุณปรับแต่งได้ โดยฟังก์ชันดังกล่าวนี้มีอยู่ในเมนูและเมนูย่อยต่างๆ ซึ่งคุณสามารถเข้าใช้ได้โดยผ่านทางปุ่มเลือกซ้ายและขวา ขอความที่ด้านล่างของหน้าจอซึ่งอยู่ด้านบนบนของปุ่มเลือกจะแสดงฟังก์ชันปัจจุบัน

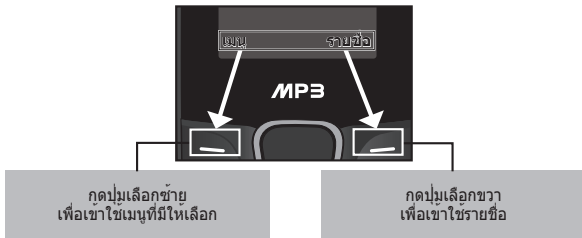

# การป้อนข้อความ

คุณสามารถป้อนตัวเลขและตัวอักษรได้โดยใช้ปุ่มกดของโทรศัพท์ ตัวอย่างเช่น การบันทึกชื่อในรายชื่อ การเขียนข้อความ และการทำตารางนัดหมายในปฏิทินล้วนแต่ต้องใช้การป้อนข้อความทั้งสิ้น ในการเปลี่ยนโหมด ให้กดปุ่ม **#\***

สัญลักษณ์	ฟังก์ชัน (โหมด English Smart)
<b>123</b>	ตัวเลข
<b>abc</b>	มัลติแท็บ Abc
<b>abc</b>	มัลติแท็บ abc
<b>ABC</b>	มัลติแท็บ ABC

## โหมด T9



ในโปรแกรมแก้ไข กดตัวเลือก เลือก "ตั้งค่า T9" เลือกเปิด โหมดนี้ให้คุณป้อนคำได้โดยการกดเพียงครั้งเดียวต่อหนึ่งตัวอักษร แต่ละปุ่มบนแผงปุ่มกดจะมีตัวอักษรมากกว่าหนึ่งตัวอักษร โหมด T9 จะเปรียบเทียบการกดปุ่มของคุณกับพจนานุกรมทางภาษาภายในเครื่องโดยอัตโนมัติ เพื่อพิจารณาหาคำที่ถูกต้อง ดังนั้น คุณจึงกดปุ่มน้อยกว่าการป้อนคำโดยใช้โหมด ABC ตามปกติ

## การเปิด/ปิดเครื่อง

คุณสามารถเปิดและปิดเครื่องได้โดยการกดปุ่มเปิด/ปิดเครื่อง ค้างไว้

# การป้อนข้อความ


## การโทรออก

- 1 กดหมายเลขโดยใช้ปุ่มกด
- 2 กด  เพื่อเริ่มการโทร
- 3 หากต้องการวางสาย ให้กด 



**เคล็ดลับ!** ในการป้อน + เมื่อโทรออกต่างประเทศ ให้กดปุ่ม **0** ค้างไว้

## การโทรออกโดยใช้รายชื่อ

- 1 กด **เมนู** เลือก **รายชื่อ** และเลือก **ค้นหา**
- 2 ป้อนตัวอักษรสองสามตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด

- 3 หากต้องการเลื่อนดูรายชื่อ ให้ใช้ปุ่มขึ้นและลง และหากต้องการเลื่อนดูหมายเลขอื่นๆ ให้ใช้ปุ่มซ้ายและขวา
- 4 กด  เพื่อเริ่มการโทร

## การรับสายและการปฏิเสธสายเรียกเขา

เมื่อโทรศัพท์ดังขึ้น ให้กด **ยอมรับ** หรือกด  เพื่อรับสาย ขณะที่โทรศัพท์ของคุณดังขึ้น ให้เลือก **เจียบ** เพื่อปิดเสียงเรียกเขา วิธีนี้เป็นวิธีที่ดี หากคุณเลื่อมเปลี่ยนรูปแบบเป็น **เจียบ** เมื่ออยู่ในห้องประชุม กด  หรือ **ปฏิเสธ** เพื่อปฏิเสธสายเรียกเขา

**เคล็ดลับ!** คุณสามารถเปลี่ยนการตั้งค่าใน  
โทรศัพท์เพื่อรับสายด้วยวิธีอื่นๆ ได้ กด **เมนู**  
**เลือก ตั้งค่า** และเลือก **การโทร** เลือก **โหมด**  
**ตอบรับ** และเลือก **ปุ่มใดๆ** หรือ **เฉพาะปุ่ม**  
**รับสาย**

- **ปุ่มใดๆ** - คุณสามารถรับสายโดยกดปุ่มใดก็ได้
- **เฉพาะปุ่มรับสาย** - คุณสามารถรับสายได้โดยกดปุ่มรับสายเท่านั้น

## **การเปลี่ยนการตั้งค่าการโทร**

คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้  
กด **เมนู** เลือก **ตั้งค่า** และเลือก **การโทร**

- **การโอนสาย** - เลือกวิธีการโอนสาย
- **สายเรียกซ้อน** - เลือกใช้งานหรือยกเลิกสายเรียกซ้อน

# การอ้างอิงคุณสมบัติอย่างย่อ

## ข้อความ

### การส่งข้อความ

- 1 กด **เมนู** เลือก **ข้อความ** และเลือก **ข้อความใหม่**
- 2 เติเตอร์ข้อความใหม่จะเปิดขึ้น โหมดเริ่มต้นของ เติเตอร์ข้อความ คือโหมด SMS
- 3 ป้อนข้อความของคุณโดยใช้ระบบช่วยสะกดคำ T9 หรือโหมดการป้อนตัวอักษรด้วยตนเองหรือ โหมด 123 คุณสามารถสลับโหมดการป้อนข้อความได้โดยกด **#\***
- 4 กด **ตัวเลือก** และเลือก **แทรก** เพื่อเพิ่ม **สัญลักษณ์**, **รูปแบบอัตโนมัติ**, **รายชื่อ**, **นามบัตร**

5 กด **ส่งไป**ที่

6 ป้อนหมายเลขโทรศัพท์หรือกด **ตัวเลือก** และเลือก **รายชื่อ** หรือ **รายการล่าสุด** เพื่อเปิดรายชื่อของคุณ


7 กด **ตัวเลือก** และเลือก **ส่ง**

- **กดเข้า** - คุณจะได้รับแจ้งเมื่อคุณได้รับข้อความ ซึ่งจะบันทึกไว้ที่นี่
- **ร่าง** - เมนูนี้แสดงข้อความที่คุณบันทึกไว้
- **กดออก** - เมนูนี้ช่วยให้คุณดูข้อความที่จะส่งหรือส่งไม่สำเร็จ

- **ส่งแล้ว** - เมนูนี้ช่วยให้คุณดูข้อความที่ส่งแล้ว รวมถึงเวลาและเนื้อหาได้
- **ข้อความเสียง** - เมนูนี้ช่วยให้คุณเข้าใช้ระบบฝากข้อความเสียงของคุณได้สะดวกรวดเร็ว
- **บริการข้อมูล** - ข้อความบริการข้อมูลคือข้อความตัวอักษรที่เครือข่ายส่งไปที่โทรศัพท์ของคุณ
- **ข้อความอัตโนมัติ** - มีข้อความที่กำหนดไว้ล่วงหน้าในรายการ คุณสามารถดูและแก้ไขข้อความอัตโนมัติหรือสร้างข้อความอัตโนมัติใหม่
- **ตั้งค่า** - เมนูนี้ช่วยคุณตั้งค่าคุณสมบัติผู้ให้บริการเครือข่ายของคุณ

## รายชื่อ

คุณสามารถค้นหารายชื่อที่จัดเก็บในเมนูรายชื่อของคุณได้

- 1 กด **เมนู** และเลือก **รายชื่อ** เลือก **ค้นหา** หรือกด  (ปุ่มเลือกขวา) จากหน้าจอแสดงรายชื่อ
- 2 ป้อนตัวอักษรตัวแรกของรายชื่อที่คุณต้องการโทรออกโดยใช้ปุ่มกด
- 3 หากต้องการเลื่อนดูรายชื่อ ให้ใช้ปุ่มขึ้นและลง หากต้องการเลื่อนดูหมายเลขอื่นๆ ให้ใช้ปุ่มซ้ายและขวา

- **รายชื่อใหม่** - คุณสามารถเพิ่มรายชื่อลงในสมุดโทรศัพท์ด้วยการใช้เมนูนี้
- **โทรด่วน** - กำหนดรายชื่อให้กับปุ่มระหว่าง 3 ถึง 8 โทรด่วน 2 ถูกกำหนดเป็นเช็คเงินในซิม และ 9 ถูกกำหนดเป็นโหมด SOS คุณไม่สามารถเปลี่ยนปุ่มเหล่านี้ได้
  - > **ไม่มีเงินใน SIM** - คุณสามารถตั้งค่าเช็คเงินใน SIM ด่วนผ่านวิธีการตั้งค่าหรือเมนูโทรด่วนได้ ซึ่งเป็นวิธีการที่สะดวกในการตรวจสอบเงินในซิมโดยกดปุ่ม 2 ค้างไว้ในหน้าจอไม่ได้ใช้งาน
- **คัดลอกทั้งหมด** - คุณสามารถคัดลอกรายการสมุดโทรศัพท์ทั้งหมดจากหน่วยความจำซิมการ์ดไปยังหน่วยความจำโทรศัพท์ และจากหน่วยความจำโทรศัพท์ไปยังหน่วยความจำซิมการ์ดได้
- **ลบทั้งหมด** - คุณสามารถลบรายการสมุดโทรศัพท์ทั้งหมดออกจากหน่วยความจำซิมการ์ดหรือหน่วยความจำโทรศัพท์ได้
- **สถานะความจำ** - คุณสามารถตรวจสอบสถานะหน่วยความจำของซิมและโทรศัพท์ได้
- **ข้อมูล**
  - > **เบอร์บริการ** - เข้าใช้รายการหมายเลขบริการที่กำหนดให้โดยผู้ให้บริการได้อย่างปลอดภัย
  - > **เบอร์ส่วนตัว** - คุณสามารถบันทึกและตรวจสอบหมายเลขของคุณในซิมการ์ดได้
  - > **นามบัตร** - คุณสามารถบันทึกและตรวจสอบนามบัตรที่มีข้อมูลชื่อของคุณ หมายเลขโทรศัพท์มือถือ โทรศัพท์บ้าน โทรศัพท์ที่ทำงาน และอีเมล และส่งเป็นข้อความได้

## ข้อมูลการโทร

คุณสามารถตรวจสอบบันทึกสายทั้งหมด, สายที่ไม่ได้รับ, สายที่โทรออก, สายที่รับ และระยะเวลาการโทรได้ ชื่อและหมายเลข (หากมีอยู่) จะปรากฏขึ้นพร้อมกับวันที่และเวลาที่มีการโทรนั้น และคุณยังสามารถดูระยะเวลาที่คุณโทรได้ด้วย

- **ทุกสาย** - แสดงรายการของทั้งสามประเภท (สายที่ได้รับ/สายที่โทรออก/สายที่ไม่ได้รับ) ตามเวลา
- **สายไม่ได้รับ** - ตัวเลือกนี้ช่วยให้คุณดูหมายเลขที่ไม่ได้รับสาย 20 รายการล่าสุดได้
- **สายที่โทรออก** - ตัวเลือกนี้ช่วยให้คุณดูสายที่โทรออก (ที่โทรออกหรือพยายามโทรออก) 20 สายล่าสุดได้

- **สายที่ได้รับ** - ตัวเลือกนี้ช่วยให้คุณดูหมายเลขเรียกเข้า 20 รายการล่าสุดได้
- **เวลาโทร** - ให้คุณดูระยะเวลาของโทรครั้งล่าสุดทุกสาย สายโทรออก และสายที่ได้รับได้

## เกมส์

โทรศัพท์ LG-A270 มาพร้อมกับเกมส์เพื่อช่วยให้คุณเพลิดเพลินในยามว่าง กด **เมนู** และเลือก **เกมส์**

## แฟ้มข้อมูล

- **เสียง** - โฟลเดอร์เสียงประกอบด้วยเสียงเริ่มต้นและเสียงความจำการด จากขั้นตอนนี้ คุณสามารถเล่นหรือตั้งค่าเป็นเสียงเรียกเข้าได้

หมายเหตุ: ในการเล่นไฟล์ในเครื่องเล่น MP3 ไฟล์ Mp3 ควรจัดเก็บใน **แฟ้มข้อมูล > ความจำการด > โฟลเดอร์ เสียง**

- **อื่นๆ** - ในโฟลเดอร์อื่นๆ คุณสามารถดูไฟล์ที่ไม่ได้จัดเก็บในเสียงได้
- **ความจำการด** - หากคุณใส่การ์ดหน่วยความจำ จะแสดงเป็นโฟลเดอร์ในแฟ้มข้อมูล

## มีเดีย

โทรศัพท์ LG-A270 มีเครื่องเล่นเพลงภายในตัวที่ทำให้คุณสามารถเล่นเพลงที่คุณชื่นชอบทั้งหมดได้

## เครื่องเล่น MP3

### การเล่นเพลง

- 1 กด **เมนู** และเลือก **มีเดีย** และเลือก **เครื่องเล่น MP3**
- 2 เลือก **ทุกเพลง** แล้วเลือกเพลงที่คุณต้องการเล่นไปที่ **ตัวเลือก** แล้วกด **เล่น**
- 3 ขณะเล่นเพลง ไปที่ **ตัวเลือก** → **พัก** เพื่อหยุดเล่นเพลงชั่วคราว

- กดปุ่มนาฬิกาเพื่อข้ามไปยังเพลงถัดไป
- กดปุ่มนาฬิกาซ้ายเพื่อข้ามไปยังเพลงก่อนหน้า
- ขณะเล่นเพลง กดปุ่ม "กลับ" เพื่อหยุดเพลง และกลับไปเมนูก่อนหน้า

**หมายเหตุ:** ลิขสิทธิ์ของไฟล์เพลงจะได้รับความคุ้มครองตามสนธิสัญญานานาชาติและกฎหมายลิขสิทธิ์ของแต่ละประเทศ ดังนั้น อาจจำเป็นต้องได้รับอนุญาตหรือได้รับอนุญาตในการทำซ้ำหรือคัดลอกเพลง ในกฎหมายของบางประเทศมีข้อยกเว้นในการคัดลอกสื่อที่มีลิขสิทธิ์ด้วยตนเอง ก่อนดาวน์โหลดหรือคัดลอกไฟล์ให้ตรวจสอบกฎข้อบังคับของประเทศนั้นๆ เกี่ยวกับการใช้สื่อต่างๆ

#### หมายเหตุ

- ในการใช้เครื่องเล่น MP3 โปรดซื้อการ์ด microSD แยกต่างหาก (ความจุสูงสุด 2GB)
- ในการใช้ microSD ให้ใส่ในโทรศัพท์ โฟลเดอร์ 'เสียง' จะถูกสร้างโดยอัตโนมัติ
- ในการใช้เครื่องเล่น MP3 โปรดดาวน์โหลดไฟล์ MP3 ลงในโฟลเดอร์ 'เสียง' ในการใช้ microSD

### หมายเหตุ

- คุณสามารถค้นหาเพลงได้สูงสุด 100 เพลง ในเมนูเครื่องเล่น MP3 ตามลำดับวันที่ บันทึกล่าสุด
- เพลงที่เกิน 100 ควรไปอยู่ในโฟลเดอร์อื่น สร้างอีกโฟลเดอร์หนึ่งภายใต้โฟลเดอร์ 'เสียง' และบันทึกไฟล์ในโฟลเดอร์นั้น คุณสามารถค้นหาและเล่นเพลงได้โดยผ่าน แฟ้มข้อมูล > เสียง > ความจำการ์ด นอกจากนี้ คุณสามารถเรียงเพลงตามวันที่ ประเภท และชื่อได้ด้วย

## วิทยุ FM

ด้วยเสาอากาศ FM ในตัว คุณสามารถรับวิทยุ FM ได้โดยไม่ต้องมีหูฟังภายนอก คุณสามารถฟังสถานีวิทยุที่คุณชอบได้ตลอดเวลา

### การฟังวิทยุ

- 1 กด **เมนู** และเลือก **มีเดีย** แล้วเลือก **วิทยุ FM**
- 2 เลือก **ตัวเลือก** > **สแกนอัตโนมัติ** แล้วยืนยัน **"สแกนทันที?"** เพื่อสแกนสถานี FM หรือ **ไม่** เพื่อยกเลิก
- 3 เมื่อโทรศัพท์ค้นพบสถานี จะแสดงป๊อปอัป บันทึกทุกสถานี ยืนยันการบันทึกโดยเลือก **ใช่** หรือขบวนการบันทึกโดยเลือก **ไม่**

**หมายเหตุ:** โทรศัพท์ของคุณสามารถจัดเก็บได้สูงสุด 12 สถานที่ อุปกรณ์จะหยุดการสแกนเมื่อบันทึกทั้งหมด 12 สถานที่แล้ว หรือไม่สามารถค้นพบสถานี FM เพิ่มเติม

#### 4 เลือกสถานีโดยกดหมายเลขสถานีที่เหมาะสมบนปุ่มกด หรือโดยไขปุ่ม ชาย หรือ ขวา

**หมายเหตุ:** ปุ่ม ขึ้น และ ลง จะเพิ่มหรือลดระดับเสียงตามลำดับ

#### 5 เลือกหมายเลขช่องของสถานีที่คุณต้องการฟัง

**หมายเหตุ:** ในบริเวณที่มีสัญญาณวิทยุ FM อ่อน ความไวในการรับสัญญาณอาจลดลงเมื่อใช้โหมดเสาอากาศไร้สาย ดังนั้นควรต่อหูฟังเพื่อคุณภาพ FM ที่ดีขึ้น

### เครื่องมือ

- **ไฟฉาย** - เปิด/ปิดไฟฉายหรือเปิด/ปิดไฟฉายโดยตรงโดยกดปุ่มขึ้นในหน้าจอไม่ได้ใช้งาน
- **การโทรเข้าตัวเอง** - ฟังก์ชันนี้มีประโยชน์ในการหลีกเลี่ยงสถานการณ์ที่น่าอึดอัดได้อย่างสุภาพ คุณสามารถโทรเข้าตัวเองได้โดยตั้งค่าเวลาในเมนูการโทรเข้าตัวเอง

**หมายเหตุ:** สามารถเปิดใช้หรือเลิกใช้การโทร  
เขาตัวเองได้จากหน้าจอไม่ได้ใช้งานโดยใช้รหัส  
ป้อน #\*#




- **เครื่องคิดเลข** - ประกอบด้วยฟังก์ชันมาตรฐาน  
เช่น บวก ลบ คูณ และหาร
- **จับเวลา** - ตัวเลือกนี้ช่วยให้คุณใช้ฟังก์ชันนาฬิกา  
จับเวลาได้
- **แปลงหน่วย** - แปลงหน่วยวัดต่างๆ ให้เป็นหน่วย  
ที่คุณต้องการ
- **เวลาโลก** - ให้คุณตรวจสอบเวลาปัจจุบันใน  
โซนเวลาหรือประเทศอื่นได้


## สมุดบันทึก

- **ตั้งปลุก** - คุณสามารถตั้งนาฬิกาปลุกได้ 3  
เวลาตามเวลาที่กำหนดได้
- **ปฏิทิน** - เมื่อคุณเข้าสู่เมนูนี้ ปฏิทินจะปรากฏขึ้น  
เคอร์เซอร์รูปสี่เหลี่ยมจะอยู่ที่วันที่ปัจจุบัน  
คุณสามารถเลื่อนเคอร์เซอร์ไปยังวันที่อื่นๆ  
โดยใช้ปุ่มนาฬิกา และยังสามารถตั้งค่าตัวกำหนด  
นัดหมายสำหรับวันที่และเวลาที่ต้องการ
- **บันทึก** - คุณสามารถลงทะเบียนบันทึกของคุณ  
ได้ที่นี่

# ตั้งค่า

## • โปรไฟล์

- > **ทั่วไป** - หลังจากตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสแตนด์บาย
- > **เงียบ** - ปิดใช้งานเสียงเรียกเข้าและเปิดใช้สั่น เมื่อคุณตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสแตนด์บาย
- > **นอกรถ** - นี้คือรูปแบบเสียงเริ่มต้น เปิดระดับเสียงเรียกเข้าและเสียงปุ่มกดดังที่สุด เมื่อคุณตั้งค่ารูปแบบเสียงนี้ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสแตนด์บาย

- > **โหมด Flight** - เลือกรูปแบบเสียงนี้เพื่อปิดใช้งานบริการเครือข่ายโทรศัพท์เคลื่อนที่ทั้งหมด คุณจะไม่สามารถโทรออกหรือรับสายหรือส่งหรือรับข้อความใดเมื่อ **โหมด Flight** เปิดอยู่
- > **ชุดหูฟัง** - เมื่อเชื่อมต่อชุดหูฟังกับโทรศัพท์ สัญลักษณ์  จะปรากฏขึ้นบนหน้าจอสแตนด์บาย คุณสามารถกำหนดแบบเตือนสายเสียงเรียกเข้า ระดับเสียงเรียกเข้า แบบเตือนข้อความ เสียงข้อความ ระดับเสียงข้อความ เสียงปุ่มกด ระดับเสียงปุ่มกด ระดับเสียงเอฟเฟกต์ และระดับเสียงเปิด/ปิด
- **วันที่ & เวลา** - คุณสามารถตั้งค่าฟังก์ชันเกี่ยวกับวันที่และเวลาได้

- **ภาษา** - คุณสามารถเปลี่ยนภาษาที่แสดงข้อความบนโทรศัพท์ของคุณ การตั้งค่าเปลี่ยนแปลงนี้มีผลต่อโหมดป้อนภาษาด้วย
- **หน้าจอ** - คุณสามารถปรับการตั้งค่าหน้าจอของโทรศัพท์ได้
- **โทร** - คุณสามารถตั้งค่าเมนูที่เกี่ยวข้องกับการโทรได้
- **ล็อคปุ่มอัตโนมัติ** - ล็อคปุ่มกดอัตโนมัติในหน้าจอสแตนด์บาย
- **ระบบป้องกัน** - เมนูนี้ช่วยให้คุณตั้งค่าโทรศัพท์ได้อย่างปลอดภัย
  - > **ขอรหัส PIN** - เปิดใช้/ปิดใช้งานขอรหัส PIN ของซิมเมื่อเปิดโทรศัพท์ของคุณ
  - > **การล็อคเครื่อง** - ล็อคโทรศัพท์ของคุณด้วยรหัสป้องกัน **เมื่อเปิดเครื่อง, เมื่อเปลี่ยนซิม หรือ ทันที** (รหัสป้องกันเริ่มต้นคือ "0000")

- > **ป้องกันการโทร** - เลือกรหัสผ่านป้องกันสำหรับสายโทรออกทั้งหมด โทรออกต่างประเทศ โทรออกเฉพาะตปท. สายเรียกเข้าทั้งหมด หรือสายเข้าเมื่ออยู่ตปท.
- > **กำหนดเบอร์โทรออก** - เลือกรหัส PIN2 เพื่อใช้กำหนดเบอร์โทรออกให้คุณจำกัดการโทรเฉพาะหมายเลขในรายการกำหนดเบอร์โทรออกเท่านั้น
- > **การแจ้งเครื่องหาย (ATMT)** - การแจ้งเครื่องหาย (ATMT) ให้คุณสามารถติดตามโทรศัพท์ที่สูญหายได้ เมื่อมีผู้อื่นเปลี่ยนซิมในโทรศัพท์ของคุณโดยไม่ได้รับอนุญาต บริการการติดตามจะเปิดใช้งาน คุณจะได้รับแจ้งด้วยความถี่ที่ส่งไปยังหมายเลขโทรศัพท์เริ่มต้นที่คุณตั้งไว้โดยที่ผู้ใช้ที่ไม่ได้รับอนุญาตไม่รู้ คุณสามารถเปิดใช้ ATMT และกำหนดการตั้งค่าของคุณได้ในเมนูนี้ (รหัส ATMT ที่เป็นค่าเริ่มต้นคือ "0000")

- › **Change codes** - ในการเปลี่ยน รหัสป้องกัน, รหัส PIN, รหัส PIN2 หรือ รหัส ATMT ให้ป้อนรหัสเดิมตามด้วยรหัสใหม่
- **ประหยัดพลังงาน** - หากคุณตั้งค่า **เปิดเสมอ** คุณสามารถประหยัดพลังงานแบตเตอรี่ได้เมื่อไม่ได้ใช้โทรศัพท์ เลือกเพื่อสลับระหว่างการตั้งค่าประหยัดพลังงาน **เปิดเสมอ**, **เฉพาะกลางคืน** หรือ **ปิด**
- **เลือกเครือข่าย** - คุณสามารถเลือกเครือข่ายที่จะลงทะเบียนได้โดยอัตโนมัติหรือด้วยตนเอง
- **บริการ SOS** - เมื่อเปิดบริการ SOS จะสามารถส่ง SMSฉุกเฉินได้โดยกดปุ่ม '9' บนปุ่มกดค้างไว้ในหน้าจอไม่ได้ใช้งาน โหมด SOS จะเปิดขอความช่วยเหลือ SOS จะส่งไปยังหมายเลขโทรศัพท์ที่แสดงในรายชื่อผู้รับ ขณะใช้งานโหมด SOS จะรับสายเรียกเขาจากผู้รับดังกล่าวโดยอัตโนมัติในการออกจาก SOS ในหน้าจอไม่ได้ใช้งาน ให้กดปุ่มวางสายและเลือกใช้
- **รีเซ็ตการตั้งค่า** - เลือกรีเซ็ตการตั้งค่าเพื่อเรียกคืนการตั้งค่าจากโรงงาน คุณต้องใช้รหัสป้องกันเพื่อใช้งานฟังก์ชันนี้ รหัสที่กำหนดมาใหม่คือ "0000"
- **สถานะความจำ** - คุณสามารถตรวจสอบพื้นที่ว่างและการใช้หน่วยความจำของพื้นที่จัดเก็บแต่ละส่วนได้

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

โปรดอ่านคำแนะนำเบื้องต้นต่อไปนี้ การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายหรือผิดกฎหมาย

## การรับพลังงานคลื่นความถี่วิทยุ

ข้อมูลเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุและค่า SAR (Specific Absorption Rate)

โทรศัพท์มือถือรุ่น LG-A270 นี้ ได้รับการออกแบบตรงตามข้อกำหนดเรื่องความปลอดภัยในการใช้งานอันเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุ ข้อกำหนดนี้ใช้หลักเกณฑ์ทางวิทยาศาสตร์ที่รวมถึงการกำหนดค่าเพื่อไว้ทั้งนี้เพื่อความปลอดภัยของทุกคน โดยไม่ขึ้นกับอายุและสุขภาพ

- ข้อกำหนดเกี่ยวกับการรับพลังงานคลื่นความถี่วิทยุใช้หน่วยวัดที่เรียกว่า Specific Absorption Rate หรือ SAR การทดสอบ SAR ได้กระทำด้วยการใช้วิธีการที่ใดมาตรฐาน โดยให้เครื่องโทรศัพท์ส่งสัญญาณที่แรงที่สุดและมีการรับรองขนาดสัญญาณแล้ว โดยการส่งสัญญาณดังกล่าวได้กระทำในทุกย่านความถี่ที่โทรศัพท์ทใช้
- แม้ว่าระดับ SAR ของโทรศัพท์ LG แต่ละรุ่นจะแตกต่างกันบ้าง แต่ทุกรุ่นจะได้รับการออกแบบให้อยู่ภายในข้อกำหนดการรับพลังงานคลื่นความถี่วิทยุ
- ข้อกำหนด SAR ที่แนะนำโดย International Commission on Non-Ionizing Radiation Protection (ICNIRP) คือ 2 วัตต์/กก. โดยเฉลี่ยตามเนื้อเยื่อหนัก 10 กรัม
- ค่า SAR สูงสุดสำหรับโทรศัพท์รุ่นนี้ ซึ่งทำการทดสอบโดย DASY4 ขณะถือแนบกับหูคือ 1.490 วัตต์/กก. (10 กรัม)

- โทรศัพท์นี้ตรงตามมาตรฐานการดูดกลืนสัญญาณคลื่นความถี่วิทยุ (RF) เมื่อใช้งานตามปกติโดยถือแนบกับหู หรือขณะวางห่างจากร่างกายอย่างน้อย 1.5 ซม. เมื่อใช้กล่องโทรศัพท์สำหรับพกพา คลิปปียัดเข็มขัดหรือที่ใส่โทรศัพท์ เพื่อการใช้งานแบบพกติดตัว อุปกรณ์เหล่านั้นไม่ควรเป็นโลหะและควรให้โทรศัพท์อยู่ห่างจากร่างกายอย่างน้อย 1.5 ซม. โทรศัพท์เครื่องนี้ต้องมีการเชื่อมต่อเครือข่ายที่มีคุณภาพสำหรับการส่งไฟล์ข้อมูลหรือข้อความ ในบางครั้งการส่งไฟล์ข้อมูลหรือการส่งข้อความอาจล่าช้าจนกว่าจะเชื่อมต่อเครือข่ายได้ ตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามคำแนะนำเกี่ยวกับระยะห่างดังกล่าวข้างต้นจนกว่าจะส่งข้อมูลเสร็จสิ้น

## การดูแลและการบำรุงรักษาเครื่องโทรศัพท์

### คำเตือน

ใช้แบตเตอรี่ อุปกรณ์ชาร์จ และอุปกรณ์เสริมที่ผ่านการรับรองให้ใช้กับโทรศัพท์รุ่นนี้เท่านั้น การใช้อุปกรณ์ประเภทอื่นๆ อาจทำให้การรับรองหรือการรับประกันของเครื่องสิ้นสุดลงหรือก่อให้เกิดอันตรายได้

- อย่าถอดแยกชิ้นส่วนของเครื่องโทรศัพท์ ควรนำไปให้ช่างเทคนิคผู้มีความรู้เมื่อจำเป็นต้องมีการตรวจสอบ

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

- การซ่อมแซมภายใต้การรับประกันเป็นการตัดสินใจของ LG ซึ่งอาจรวมถึงการเปลี่ยนชิ้นส่วนหรือแผงวงจรที่เป็นของใหม่หรือของที่ปรับสภาพ โดยมีประสิทธิภาพในการทำงานเทียบเท่าชิ้นส่วนที่ถูกเปลี่ยน
- ควรวางให้ห่างจากอุปกรณ์เครื่องใช้ไฟฟ้า เช่น โทรทัศน์ วิทยุ และเครื่องคอมพิวเตอร์
- ควรตั้งโทรศัพท์ไว้ห่างจากแหล่งความร้อน เช่น เครื่องระบายความร้อน หรือเตาประกอบอาหาร
- ไม่ควรทำโทรศัพท์ตกหล่น
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีการสั่นสะเทือนหรือการกระแทก
- ปิดเครื่องโทรศัพท์ในบริเวณที่มีข้อบังคับว่าห้ามใช้ ตัวอย่างเช่น ห้ามใช้โทรศัพท์ในโรงพยาบาล เนื่องจากอาจมีผลต่อการทำงานของอุปกรณ์ทางการแพทย์ที่ไวต่อสัญญาณรบกวน
- ห้ามสัมผัสโทรศัพท์ด้วยมือเปียก ขณะกำลังชาร์จแบตเตอรี่ เพราะอาจถูกไฟฟ้าดูด และอาจทำให้โทรศัพท์ชำรุดเสียหายได้
- ห้ามชาร์จโทรศัพท์ใกล้วัตถุไวไฟ เนื่องจากโทรศัพท์อาจร้อนและทำให้เกิดไฟ ซึ่งอาจทำให้เกิดเพลิงไหม้
- ใช้ผ้าแห้งเช็ดทำความสะอาดภายนอกเครื่องโทรศัพท์ (อย่าใช้สารละลาย เช่น เบนซิน ทินเนอร์ หรือแอลกอฮอล์)
- อย่าชาร์จโทรศัพท์โดยวางไว้บนพื้นผิวอ่อนนุ่ม
- ควรชาร์จโทรศัพท์ในบริเวณที่มีการถ่ายเทอากาศดี
- ไม่ควรนำเครื่องโทรศัพท์ไว้ในที่ที่มีฝุ่นหรือควันมากเกินไป
- อย่าวางโทรศัพท์ใกล้บัตรเครดิตหรือบัตรโดยสารที่มีแถบแม่เหล็ก เพราะอาจทำความเสียหายต่อข้อมูลในแถบแม่เหล็กได้

- อย่าเคาะหน้าจอด้วยวัตถุมีคม เพราะอาจทำความเสียหายแก่โทรศัพท์ได้
- วางเครื่องโทรศัพท์ให้ห่างจากของเหลวหรือความชื้น
- ใช้อุปกรณ์เสริม เช่น หูฟัง ด้วยความระมัดระวัง อย่าแตะต้องเสาอากาศโดยไม่จำเป็น
- ห้ามใช้ สัมผัส หรือพยายามถอดหรือซ่อมแซมแก้วที่แตก มีรอยแตก หรือร้าว ความเสียหายของหน้าจอแก้วเกิดขึ้นจากการใช้งานโดยไม่ได้รับอนุญาต หรือไม่ถูกต้องจะไม่ครอบคลุมภายใต้การรับประกัน
- โทรศัพท์ของคุณเป็นอุปกรณ์อิเล็กทรอนิกส์ที่มีความร้อนในระหว่างการทำงานปกติ การสัมผัสกับผิวโดยตรงเป็นระยะเวลานานโดยไม่มีการระบายอากาศหรือมีไม่เพียงพออาจทำให้รู้สึกไม่สบายหรือเกิดแผลไหม้เล็กน้อยได้ ดังนั้น ผู้ใช้ต้องระมัดระวังเมื่อถือโทรศัพท์ในระหว่างหรือทันทีหลังจากการใช้งาน

## การทำงาน อย่างมีประสิทธิภาพของโทรศัพท์

### อุปกรณ์อิเล็กทรอนิกส์

โทรศัพท์เคลื่อนที่ทุกเครื่องสามารถส่งคลื่นรบกวนได้ ทำให้มีผลต่อการทำงานของอุปกรณ์ต่างๆ

- ห้ามใช้โทรศัพท์เคลื่อนที่ใกล้อุปกรณ์ทางการแพทย์โดยไม่ได้รับอนุญาตเสียก่อน หลีกเลี่ยงการวางโทรศัพท์เหนือเครื่องควบคุมจังหวะการเต้นของหัวใจ เช่น ใส่ในกระเป๋าเสื้อ เป็นต้น
- โทรศัพท์มือถือบางเครื่องอาจก่อให้เกิดสัญญาณคลื่นรบกวนกับเครื่องช่วยฟังได้
- ดังนั้น โทรศัพท์ วิทยุ เครื่องคอมพิวเตอร์ ฯลฯ อาจได้รับการรบกวนบ้างเล็กน้อย

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## ความปลอดภัยบนท้องถนน

ตรวจสอบกฎหมายและระเบียบข้อบังคับว่าด้วยเรื่องการใช้โทรศัพท์เคลื่อนที่ในพื้นที่ที่คุณขับขี่ยานพาหนะ

- ห้ามใช้โทรศัพท์มือถือถือในขณะที่ขับรถ
- มีสมาธิในการขับขี่ด้วยความระมัดระวังอย่างเต็มที่
- ขับเข้าข้างทาง แล้วจอดรถก่อนโทรออกหรือรับสาย หากสภาพการขับขี่ทำให้จำเป็นต้องดำเนินการดังกล่าว
- พลังงานคลื่นความถี่วิทยุอาจมีผลกระทบต่อระบบอิเล็กทรอนิกส์บางชนิดในรถของคุณ เช่น วิทยุติดรถยนต์ อุปกรณ์เพื่อความปลอดภัย เป็นต้น

- หากรถของคุณติดตั้งถุงลมนิรภัย ห้ามติดตั้งอุปกรณ์พกพาแบบไร้สายซึ่งขัดขวางการทำงานของถุงลม ซึ่งอาจทำให้ถุงลมไม่ทำงาน หรืออาจทำให้คุณได้รับบาดเจ็บรุนแรงเนื่องจากการทำงานผิดปกติของถุงลมนิรภัยได้
- หากคุณกำลังฟังเพลงในขณะที่อยู่ข้างนอก โปรดตรวจสอบระดับเสียงอยู่ที่ระดับที่เหมาะสม เพื่อให้คุณยังสามารถได้ยินเสียงจากรอบข้างได้ โดยเฉพาะอย่างยิ่งเมื่ออยู่ข้างถนน

## หลีกเลี่ยงการทำลายความสามารถในการได้ยิน

ความสามารถในการได้ยินอาจถูกทำลายได้หากคุณฟังเสียงดังเป็นระยะเวลาานาน ดังนั้น เราขอแนะนำว่าคุณไม่ควรเปิดหรือปิดหูฟังใกล้กับหูของคุณ นอกจากนี้ คุณควรตั้งระดับเสียงเพลงและระดับเสียงสายสนทนาไว้ในระดับที่เหมาะสม

- เมื่อใช้หูฟัง ให้ลดระดับเสียงลงหากคุณไม่ได้ยินเสียงพูดของคนข้างๆ หรือคนข้างๆ คุณได้ยินสิ่งที่คุณกำลังฟัง

**หมายเหตุ:** แร่งดันเสียงที่มากเกินไปจากหูฟังสามารถทำให้สูญเสียการได้ยินได้

## บริเวณที่ทำให้เกิดระเบิดได้

ห้ามใช้โทรศัพท์ในพื้นที่ที่อยู่ระหว่างมีการระเบิดต่างๆ ให้ปฏิบัติตามขอหามาอย่างเคร่งครัด และทำตามข้อกำหนดหรือกฎเกณฑ์ต่างๆ

## บริเวณที่อาจเกิดการระเบิดได้

- ห้ามใช้โทรศัพท์ใกล้จุดเติมน้ำมันเชื้อเพลิง
- ห้ามใช้โทรศัพท์ใกล้น้ำมันเชื้อเพลิงหรือสารเคมี

- ห้ามชนถ่ายหรือเก็บก๊าซหรือของเหลวที่ติดไฟง่ายหรือระเบิดได้ในห้องโดยสารของรถ ซึ่งคุณใช้เก็บโทรศัพท์หรืออุปกรณ์เสริมต่างๆ ของคุณ

## บนเครื่องบิน

อุปกรณ์ไร้สายสามารถก่อให้เกิดคลื่นรบกวนต่อเครื่องบินได้

- ให้ปิดโทรศัพท์เคลื่อนที่ของคุณก่อนขึ้นเครื่องบิน
- อย่าใช้โทรศัพท์บนเครื่องบินก่อนได้รับการอนุญาตจากพนักงานประจำเครื่อง

## เด็ก

เก็บโทรศัพท์ในที่ปลอดภัยและห่างจากมือเด็ก รวมทั้งเก็บขึ้นส่วนขนาดเล็กซึ่งอาจทำอันตรายหากเด็กนำไปใส่ปาก

# คำแนะนำเพื่อความปลอดภัยและการใช้งานอย่างมีประสิทธิภาพ

## การโทรฉุกเฉิน

การโทรฉุกเฉินอาจไม่สามารถใช้กับเครือข่ายมือถือบางเครือข่ายได้ จึงไม่ควรใช้โทรศัพท์นี้เพียงอย่างเดียวในกรณีโทรฉุกเฉิน ให้ตรวจสอบกับผู้ให้บริการในพื้นที่ของคุณ

## ข้อมูลเกี่ยวกับแบตเตอรี่และการดูแลรักษา

- คุณไม่จำเป็นต้องคายประจุแบตเตอรี่ออกจนหมดก่อนเริ่มการชาร์จ แบตเตอรี่นี้ต่างจากแบตเตอรี่อื่นเนื่องจากไม่มี Memory Effect ประสิทธิภาพของแบตเตอรี่จึงไม่ด้อยลง
- ใช้เฉพาะแบตเตอรี่และเครื่องชาร์จของ LG เท่านั้น เครื่องชาร์จของ LG ได้รับการออกแบบมาเพื่อยืดอายุการใช้งานของแบตเตอรี่ให้นานที่สุด

- อย่าถอดชิ้นส่วนหรือทำให้แบตเตอรี่ลัดวงจร
- รักษาความสะอาดของหน้าสัมผัสแบตเตอรี่
- เปลี่ยนแบตเตอรี่ก่อนใหม่ทันที เมื่อประสิทธิภาพการใช้งานลดต่ำลงจนถึงระดับที่ไม่อาจใช้งานได้ แบตเตอรี่นี้สามารถชาร์จใหม่ได้หลายร้อยครั้งจนกว่าจะจำเป็นต้องเปลี่ยนก่อนใหม่
- ชาร์จแบตเตอรี่ใหม่อีกครั้ง หากไม่ได้ใช้เป็นเวลานานเพื่อเพิ่มเวลาการใช้งาน
- อย่าให้เครื่องชาร์จแบตเตอรี่โดนแสงแดดโดยตรงหรือใช้ในสภาพที่มีความชื้นสูง เช่น ในห้องน้ำ
- อย่าวางแบตเตอรี่ทิ้งไว้ในสภาพอากาศที่ร้อนหรือเย็นเพราะประสิทธิภาพของแบตเตอรี่อาจด้อยลง
- หากมีการใส่แบตเตอรี่ชนิดที่ไม่ถูกต้อง อาจทำให้เกิดการระเบิดได้

- ควรปฏิบัติตามคำแนะนำของผู้ผลิตในการทิ้งแบตเตอรี่ที่ชาร์จแล้ว โปรดรีไซเคิลเมื่อเป็นไปได้ อย่าทิ้งเป็นขยะในครัวเรือน
- หากคุณต้องการเปลี่ยนแบตเตอรี่ โปรดนำไปที่จุดบริการหรือตัวแทนจำหน่ายที่ได้รับการแต่งตั้งจาก LG Electronics ที่ใกล้ที่สุดเพื่อขอความช่วยเหลือ
- ถอดปลั๊กอุปกรณ์ชาร์จออกจากเต้าเสียบทุกครั้งหลังจากแบตเตอรี่โทรศัพท์เต็มแล้วเพื่อลดการใช้พลังงานสิ้นเปลืองของอุปกรณ์ชาร์จ
- อายุการใช้งานแบตเตอรี่จะขึ้นอยู่กับข้อกำหนด ค่าเครือข่าย, การตั้งค่าผลิตภัณฑ์, รูปแบบการใช้, แบตเตอรี่ และสภาพแวดล้อม
- ตรวจสอบให้แน่ใจว่าไม่มีวัตถุที่มีขอบแหลมคม เช่น ฟันหรือเล็บสัตว์ ตะปู สัมผัสกับแบตเตอรี่ ซึ่งอาจก่อให้เกิดไฟไหม้ได้

#### อุณหภูมิแวดล้อม

สูงสุด: +50°C (คายประจุ) +45°C (ขณะชาร์จ)

ต่ำสุด: -10°C

# อุปกรณ์เสริม

คุณสามารถใช้อุปกรณ์เสริมต่างๆ กับโทรศัพท์ของคุณได้ เลือกใช้อุปกรณ์เหล่านี้ตามลักษณะการสื่อสารส่วนตัวของคุณ

**แบตเตอรี่มาตรฐาน**



**อะแดปเตอร์สำหรับ  
ชาร์จแบตเตอรี่**



## หมายเหตุ

- > ใช้แต่อุปกรณ์เสริมของแท้ของ LG เท่านั้น การไม่ปฏิบัติตามขออนุญาตนี้อาจมีผลให้การรับประกันของเครื่องโทรศัพท์สิ้นสุดลง
- > อุปกรณ์เสริมอาจแตกต่างกันในแต่ละพื้นที่ โปรดตรวจสอบกับบริษัทหรือตัวแทนผู้ให้บริการในแต่ละพื้นที่ของเราในกรณีที่มีข้อสงสัยเพิ่มเติม

# การแก้ปัญหา

เนื้อหาในบทนี้จะแสดงถึงปัญหาต่างๆ ที่คุณอาจพบในขณะที่ใช้โทรศัพท์ คุณอาจต้องสอบถามผู้ให้บริการเพื่อแก้ไขปัญหบางประการ แต่ปัญหาส่วนใหญ่คุณสามารถแก้ไขได้เองอย่างง่ายดาย

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด USIM	ไม่ได้ใส่การ์ด USIM ในโทรศัพท์ หรือใส่ไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าใส่ซิมการ์ดอย่างถูกต้อง
ไม่มีการเชื่อมต่อกับเครือข่าย/ เครือข่ายขาด หาย	ระดับสัญญาณอ่อนภายนอก พื้นที่เครือข่าย GSM ผู้ให้บริการใช้บริการใหม่	ไปที่บริเวณใกล้กับหน้าต่างหรือในที่เปิดโล่ง ตรวจสอบพื้นที่ให้บริการกับผู้ให้บริการเครือข่าย ตรวจสอบว่าซิมการ์ดมีอายุมากกว่า 6~12 เดือนหรือไม่ หากเป็นเช่นนั้น ให้เปลี่ยนซิมของคุณที่สำนักงาน ของผู้ให้บริการเครือข่าย

# การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
รหัสไม่ตรงกัน	ในการเปลี่ยนรหัสป้องกัน คุณต้องยืนยันรหัสใหม่โดยป้อนรหัสที่คุณป้อนทั้งสองครั้งไม่ตรงกัน	รหัสเริ่มต้นคือ [0000] หากคุณลืมรหัสโปรดติดต่อผู้ให้บริการ
ตั้งค่าแอปพลิเคชันไม่ได้	ผู้ให้บริการไม่สนับสนุนหรือต้องลงทะเบียน	ติดต่อผู้ให้บริการ

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ไม่สามารถโทรออกได้	ข้อผิดพลาดในการโทรออก มีการใส่ซิมการ์ดใหม่ ถึงขีดจำกัดค่าโทรแบบเติมเงิน	ระบบเครือข่ายใหม่ยังไม่ได้รับอนุญาต ตรวจสอบข้อกำหนดใหม่ ติดต่อผู้ให้บริการ หรือตั้งค่าการจำกัดการโทรใหม่ โดยใช้รหัส PIN 2
เปิดเครื่องโทรศัพท์ไม่ได้	กดปุ่มเปิด/ปิดไม่นานพอ ไม่ได้ชาร์จแบตเตอรี่ ขั้วแบตเตอรี่สกปรก	กดปุ่มเปิด/ปิดค้างไว้อย่างน้อยสองวินาที เสียบอุปกรณ์ชาร์จให้นานขึ้น ทำความสะอาดขั้วสัมผัสแบตเตอรี่ ถอดแบตเตอรี่แล้วใส่ใหม่อีกครั้ง

# การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
ข้อผิดพลาด เกี่ยวกับการชาร์จ	ไม่ได้ชาร์จแบตเตอรี่ อุณหภูมิภายนอกร้อนหรือ เย็นเกินไป มีปัญหาที่ขั้วสัมผัส ไม่มีกระแสไฟฟ้า อุปกรณ์ชาร์จชำรุด อุปกรณ์ชาร์จไม่ถูกต้อง แบตเตอรี่ชำรุด	ชาร์จแบตเตอรี่ ตรวจสอบให้แน่ใจว่าขั้วชาร์จโทรศัพท์ภายใต้อุณหภูมิปกติ ตรวจสอบอุปกรณ์ชาร์จและการเชื่อมต่อกับ โทรศัพท์ ตรวจสอบขั้วสัมผัสแบตเตอรี่ และทำความสะอาดหากจำเป็น เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟอื่น หากอุปกรณ์ชาร์จไม่ทำงาน ให้เปลี่ยนอุปกรณ์ชาร์จใหม่ ใช้อุปกรณ์เสริมของแท้ของ LG เท่านั้น เปลี่ยนแบตเตอรี่

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หมายเลขโทรศัพท์ใช้โทรศัพท์ออกไม่ได้	กำลังใช้งานฟังก์ชันกำหนดหมายเลขโทรศัพท์ออก	ตรวจสอบการตั้งค่า
ไม่สามารถรับ/ส่งข้อความตัวอักษรและรูปภาพได้	หน่วยความจำเต็ม	ลบข้อความในโทรศัพท์บางส่วนออก
เปิดไฟล์ไม่ได้	ไม่สนับสนุนรูปแบบไฟล์	ตรวจสอบรูปแบบไฟล์ที่ได้รับการสนับสนุน

# การแก้ปัญหา

ข้อความ	สาเหตุที่เป็นไปได้	วิธีการแก้ไขที่เป็นไปได้
หน้าจอไม่ทำงาน เมื่อฉันรับสาย	เซนเซอร์หน้าจรมีปัญหา	หากคุณใช้เทปหรือกล่องป้องกัน ตรวจสอบว่าอุปกรณ์ ดังกล่าวปิดคลุมพื้นที่รอบเซนเซอร์รับสัญญาณ หรือไม่ ตรวจสอบให้แน่ใจว่าพื้นที่รอบเซนเซอร์ หน้าจอสะอาด
โทรศัพท์ค้าง หรือไม่ทำงาน	ปัญหาซอฟต์แวร์ชั่วคราว	ถอดแบตเตอรี่แล้วใส่แบตเตอรี่เปิดโทรศัพท์ ลองอัปเดตซอฟต์แวร์ผ่านทางเว็บไซต์

**ศูนย์บริการ LG โดย บริษัท แอลจีอีเลคทรอนิกส์ (ประเทศไทย) จำกัด**  
ศูนย์ซ่อมสำนักงานใหญ่ตากสิน 72/127 ถ.สมเด็จพระเจ้าตากสิน  
แขวงมคคโล เขตธนบุรี กรุงเทพฯ 10600  
วันและเวลาทำการ : จันทร์ - เสาร์, 08:00 - 18:00น.  
**Call center : 0-2878-5757**

---

---

---

---

---

---

---

# LG-A270 User Guide - English

This guide will help you to understand your new mobile phone. It will provide you with useful explanations of the features on your phone.


Some of the contents of this manual may differ from your phone depending on the phone software or your service provider.



# Contents

Getting to know your phone .....	3	My stuff .....	16
Installing the SIM Card and Charging the Battery .....	5	Media .....	16
Display Information .....	7	Tools .....	19
Menu and Options .....	8	Organiser .....	20
Entering Text .....	9	Settings .....	21
Quick feature reference .....	12	Guidelines for safe and efficient use .....	24
Messaging .....	12	Accessories .....	33
Contacts .....	13	Troubleshooting .....	34
Call history .....	15		
Games .....	15		

# Getting to know your phone

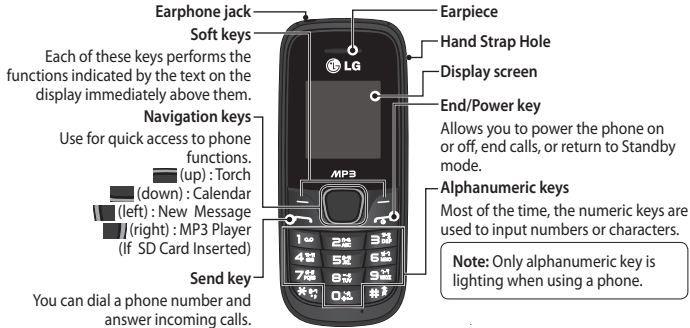

# Getting to know your phone



**Charger port**

Allow you to power charger only.



**Torch**

# Installing the SIM Card and Charging the Battery

## Installing the SIM Card

When you subscribe to a mobile phone network, you are provided with a plug-in SIM card which is loaded with your subscription details, such as your PIN, any optional services available and many others.


### **Important!**

- › The plug-in SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the SIM card. Keep all SIM cards out of the reach of small children.
- › only 2G SIM supported


# Installing the SIM Card and Charging the Battery

## Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM card
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

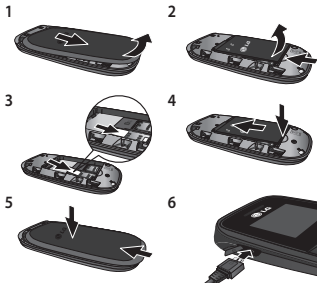

# Display Information

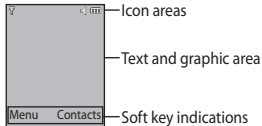


## On-Screen Icons

	Tells you the strength of the network signal.
	Indicates the battery charge level.
	Indicates new text message(s).

	Indicates new voice message(s).
	Indicates that the alarm clock is set.
	Indicates that your phone is using the general profile.
	Indicates that your phone is using the silent profile.
	Indicates that your phone is using the outdoor profile.
	Indicates that your phone is using the headset profile.
	Indicates that all calls are being diverted to another number.
	Indicates that your phone is in Flight mode.
	Indicates new schedule(s).

# Menu and Options

Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, which are accessed via the left and right soft keys. The label at the bottom of the display screen immediately above the soft keys indicates their current function.

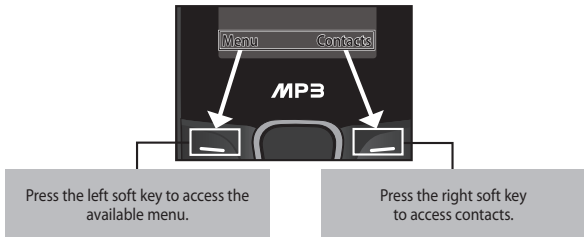

# Entering Text

You can enter alphanumeric characters via the phone's keypad. For example, storing names in Contacts, writing a message and scheduling events in the calendar all require entering text. To change modes, press the **#\*** key.

Indicator	Function (English Smart mode)
<b>123</b>	Numeric
<b>Abc</b>	Multitap Abc
<b>abc</b>	Multitap abc
<b>ABC</b>	Multitap ABC

## T9 Mode



In Editor, Press Options Choose "Set T9" Select On. This mode allows you to enter words with only one keystroke per letter. Each key on the keypad is associated with more than one letter. T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

## Turning Your Phone On/off

You can power the phone on and off by pressing and holding the **power key**.

# Entering Text


## Making a Call

- 1 Press the number on the keypad.
- 2 Press  to initiate the call.
- 3 To end the call, press .



**TIP!** To enter + when making an international call, press and hold 0.

## Making a call from your contacts

- 1 Press **Menu**, select **Contacts** and choose **Search**.
- 2 On the keypad, enter the first few letters of the contact you want to call.

- 3 To scroll through your contacts, use the up and down navigation keys. And to scroll through their different numbers, use the left and right navigation keys.
- 4 Press  to initiate the call.

## Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting. Press  or **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose **Any key** or **Send key only**.

- **Any key** - You can answer a call by pressing any key.
- **Send key only** - You can answer a call only by pressing the Send key.

## Changing your call settings


You can set the menu depending on the call. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** - Select methods for diverting calls.
- **Call waiting** - Select Active or cancel call waiting.

# Quick feature reference

## Messaging


### Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 A new message editor will open. The default setting of the message editor is SMS mode.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode or 123 mode. You can switch text input modes by pressing .
- 4 Press **Options** and choose **Insert** to add an **Symbol, Template, Contact, Business card**.
- 5 Press **Send to**.
- 6 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list.
- 7 Press **Options** and choose **Send**.
  - **Inbox** - You will be alerted when you have received a message. It will also be saved here.
  - **Drafts** - This menu shows the message you have saved.
  - **Outbox** - This menu allows you to view the message which is about to be send or that have failed to send.

- **Sent** - This menu allows you to view the messages which have already been sent, including time and content.
- **Listen voicemail** - This menu provides you with a quick way to access your voice mailbox.
- **Info messages** - Info service messages are text messages that are delivered by the network to your handset.
- **Templates** - There are pre-defined messages in the list. You can view and edit the template messages or create new templates.
- **Settings** - This menu allows you to set the features of your network service provider.

## Contacts

You can search for a contact stored in your Contacts menu.

- 1 Press **Menu** and choose **Contacts**, select **Search** or press  (right soft key) from the standby screen.
- 2 On the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts, use the up and down navigation keys. To scroll through their different numbers use the left and right navigation keys.

- **New contact** - You can add phonebook entries by using this menu.
- **Speed dials** - Assign contacts to any keys between 3 and 8. Speed dial 2 is set to SIM Budget and 9 is set to SOS mode, so you can not change these keys.
  - › **SIM budget empty** - You can set Speed SIM budget through Startup Wizard and Speed dial menu. It is easy way for checking SIM budget by pressing and holding the 2 key in Idle Screen.
- **Copy all** - You can copy all phone book entries from the SIM card memory to the Phone memory or from the Phone memory to the SIM card memory.
- **Delete all** - You can delete all phone book entries from the SIM card memory or Phone memory.
- **Memory status** - You can check the memory status for your SIM and phone.
- **Information**
  - › **Service dial numbers** - Access the list of service numbers assigned by your service provider securely.
  - › **Own number** - You can save and check your own numbers on the SIM card.
  - › **Business card** - You can save and check your business card containing information including your name, mobile number, home, office and email, and send it in a message.

## Call history

You can check the record of all, missed, dialled, received calls and call durations. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- **All calls** - Displays the lists of all three types (Received/Dialled/Missed calls) by time.
- **Missed calls** - This option lets you view the last 20 unanswered calls.
- **Dialled calls** - This option lets you view the last 20 outgoing calls (called or attempted).

- **Received calls** - This option lets you view the last 20 incoming calls.
- **Call duration** - Allows you to view the duration of your last call, all calls, dialled calls and received calls.

## Games

Your LG-A270 comes with preloaded games to keep you amused when you have time to spare. Press **Menu** and select **Games**.

## My stuff

- **My sounds** - The My sounds folder contains default sounds and External memory sounds. From here you can play or set them as ringtone.

**Note:** To Play the files in MP3 Player, Mp3 files should be stored in **My stuff > External Memory > Sounds** folder.

- **Others** - In the Others folder, you can see the files that are not stored in the My sounds.
- **External memory** - If you have inserted a memory card, it will be displayed as a folder in My stuff.

## Media

Your LG-A270 has a built-in music player, so you can play all your favourite music.

### MP3 player

#### Playing a song

- 1 Press **Menu**, and select **Media** and choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play, go to Options and then Press **Play**.
- 3 While music is playing, go to Options→**Pause** to pause the song.

- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the previous menu.

**Note:** Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

**Note**

- To use MP3 player, please purchase microSD card separately.(Max 2G capacity).
- To use microSD, please insert it in the phone. Then 'Sound' folder will be created automatically.
- To use MP3 player, please download MP3 files into 'Sound' folder in the microSD card.

### Note

- You can find maximum 100 songs in MP3 player menu in the order of recently saved date.
- Any songs over 100 should go into another folder. Make another folder under 'Sounds' folder and save the files in that folder. You can find and play the songs through My stuff > My sounds > External Memory. Also you can sort the songs by date, type and name.

## FM radio

With embedded FM antenna, you can receive FM radio without an external earphone. You can listen to your favourite radio station anytime.

### Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Options** > **Auto scan** then confirm "**Auto-scan now?**" to scan for FM channels or **No** to cancel.
- 3 When your phone detects a channel, it will display a pop-up asking to save the channel. Confirm save by selecting **YES** or skip save by selecting **No**.

**Note:** Your phone can only store a maximum of 12 channels. Device will stop auto scanning when all 12 channels have been saved or when it cannot detect any more FM channels.

- 4 Select the channel by pressing the appropriate channel number on the keypad or by using the **left** or **right** navigation keys.

**Note:** **Up** and **down** navigation keys will increase or decrease sound volume respectively.

- 5 Select the channel number of the station you would like to listen to.

**Note:** In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

## Tools

- **Torch** - Turn on/off the torch or turn on/off the torch directly by pressing the up navigation key in idle screen.

- **Self call** - This is a useful function for avoiding awkward situation politely. You can call yourself by setting the time in self call menu.

**Note:** Self call can be activated or deactivated from idle screen using shortcut code ##\*#.

- **Calculator** - This contains the standard functions such as Addition, Subtraction, Multiplication and Division.
- **Stopwatch** - This option allows you to use the function of a stopwatch.
- **Unit converter** - This converts many measurement into a unit you want.




- **World clock** - Allows you to determine the current time in another time zone or country.


## Organiser

- **Alarms** - You can set up to 3 alarm clocks to go on at a specified time.
- **Calendar** - When you enter this menu, a calendar appears. A square cursor is placed on the current date. You can move the cursor to another date using the navigation keys, also you can set scheduler for desired date and time.
- **Memo** - You can register your own memos here.

# Settings

## • Profiles

- › **General** - After setting up this profile, the indicator  will be displayed on the standby screen.
- › **Silent** - Ring tone is disabled and Vibrate is activated. When you set up this profile, the indicator  will be displayed on the standby screen.
- › **Outdoor** - This is the default profile. Ring tone and key tone volume are set to maximum. When you set up this profile, the indicator  will be displayed on the standby screen.

- › **Flight mode** - Select this profile to disable all mobile network services. You will not be able to make or receive messages or calls when **Flight mode** is switched on.
  - › **Headset** - When the headset is connected to the phone, the indicator  will be displayed on the standby screen. You can personalise your call alert type, ring tones, ring volume, message alert type, message tones, message volume, keypad tones, keypad volume, effect sound volume and power on/off volume.
- **Date & Time** - You can set functions relating to the date and time.

- **Language** - You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
- **Display** - You can adjust settings for the phone display.
- **Call** - You can set the menu depending on the call.
- **Auto key lock** - Lock the keypad automatically in standby screen.
- **Security** - This menu allows you to set the phone securely.
  - › **PIN code request** - Enable/Disable SIM PIN code request when your phone is powered on.
  - › **Phone lock** - Lock your phone with a security code **When power on, When SIM changed, or Immediately**. (Default security code is "0000".)
- › **Call barring** - Choose a barring password for all outgoing calls, outgoing international, outgoing international except to home country, all incoming calls, or incoming when abroad.
- › **Fixed dial number** - Choosing a PIN2 code to enable fixed dial number lets you restrict calls only to numbers in the Fixed dial number list.
- › **Anti-theft mobile tracker (ATMT)** - Anti-theft mobile tracker (ATMT) allows you to track your stolen phone. When someone changes the SIM in your phone without your permission, the tracking service will be activated. You will be notified by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can activate the ATMT and configure your settings in this menu. (The default ATMT code is "0000".)

- › **Change codes** - To change your **Security code**, **PIN code**, **PIN2 code** or **ATMT code**, enter the old code followed by the new one.
- **Power save** - If you set **Always on**, you can save the battery power when you are not using the phone. Choose to switch between power save settings **Always on**, **Night only** or **Off**.
- **Network selection** - You can select a network that will be registered either automatically or manually.
- **SOS service** - When SOS service is turned on, send the emergency SMS by press and holding the '9' key on your keypad in idle screen, SOS mode will now be turned on. The SOS messages will be sent to the phone number(s) listed in Recipient list. While SOS mode is active, incoming calls by them will be automatically accepted. To exit SOS mode, on the idle screen push the end key and select Yes.
- **Reset settings** - Select Reset settings to restore the factory settings. You need the security code to activate this function. The default number is "0000".
- **Memory status** - You can check the free space and memory usage of each repository.

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-A270 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.490 W/Kg (10g).

- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance

### **WARNING**

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.

## Guidelines for safe and efficient use

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop the phone.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by specific regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

## **Efficient phone operation**

### **Electronics devices**

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**Note:** Excessive sound pressure from earphones can cause hearing loss.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference with aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without permission from the cabin crew.

# Guidelines for safe and efficient use

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available on all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

## Guidelines for safe and efficient use

### Ambient Temperatures

Max : +50°C (discharging) +45°C (charging)

Min : -10°C

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

## Standard Battery



## Travel Adapter



### Note

- › Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- › Accessories may be different in different regions. Please check with our regional service company or agent for further enquires.

# Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

---

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.

---

---

Message	Possible Causes	Possible Corrective Measures
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

---

# Troubleshooting

---

Message	Possible Causes	Possible Corrective Measures
Calls not available	Dialing error New SIM card inserted Prepaid charge limit reached	New network not authorised. Check for new restrictions.  Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough Battery is not charged Battery contacts are dirty	Press the On/Off key down for at least two seconds. Keep charger attached for a longer time Clean the contacts. Take out the battery and insert again.

---

Message	Possible Causes	Possible Corrective Measures
Charging error	<ul style="list-style-type: none"> <li>Battery is not charged</li> <li>Outside temperature is too hot or cold</li> <li>Contact problem</li> <li>No voltage</li> <li>Charger defective</li> <li>Wrong charger</li> <li>Battery defective</li> </ul>	<ul style="list-style-type: none"> <li>Charge battery.</li> <li>Make sure phone is charging under normal temperatures.</li> <li>Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.</li> <li>Plug into a different socket.</li> <li>If the charger does not warm up, replace it.</li> <li>Only use original LG accessories.</li> <li>Replace battery.</li> </ul>

# Troubleshooting

---

Message	Possible Causes	Possible Corrective Measures
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.

---

Message	Possible Causes	Possible Corrective Measures
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

---

**LG Service Center by LG Electronics (Thailand) Co. Ltd.**

72/127 Somdetprachaw Taksin Rd., Bookalo, Thonburi, Bangkok 10600

Working day : Mon-Sat 08:00 - 18:00

**Call center : 0-2878-5757**