



ENGLISH

TURKISH

OWNER'S MANUAL REFRIGERATOR

Please read this manual carefully before operating
your set and retain it for future reference




MFL68488903

P/NO : MFL68488903

www.lg.com

CONTENTS

IMPORTANT SAFETY INFORMATION	3
INSTALLATION	10
INNER PARTS	11
OPERATIONS	14
Starting	
Before Setting The Temperature	
Door Alarm	
Self Test	
Controls For Freezer Compartment	
Controls For Refrigerator Compartment	
Express Freeze	
Child Lock(Optional)	
Green Ion Door Cooling(Optional)	
Ice Making(Optional)	
Convertible Corner/Fresh Zone(Optional)	
Vegetable Drawer	
Water Dispenser(Optional)	
Smart Diagnosis(Optional)	
Hygiene Fresh(Optional)	
Defrosting	
Deodorizer(Optional)	
Dairy Corner(Optional)	
SUGGESTIONS ON FOOD STORAGE.....	23
CLEANING	24
GENERAL INFORMATION	26
IMPORTANT WARNINGS	27
BEFORE CALLING FOR SERVICE.....	28

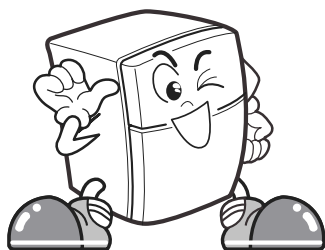

IMPORTANT SAFETY INFORMATION



WARNING

-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.



This is a safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injured or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



DANGER

You will be hurt or seriously injured if you don't follow instructions.



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.



CAUTION

Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



If gas used is R600a

This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never startup an appliance showing any signs of damage. If in doubt, consult your dealer.

DISPOSAL OF YOUR OLD APPLIANCE



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consensus for the environment and human health.
3. For more detailed information about the disposal of your old appliances, please contact your city office, waste disposal service or the shop where you purchased the product.
(*NOTE - 1,2,3 are applicable for Jordan Regulations and other countries as per applicability)
4. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

WARNING


To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

IMPORTANT SAFETY INFORMATION

1. When connecting the power


Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

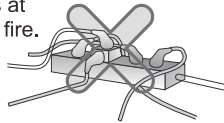


Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Plug may get damaged, which causes fire or electric shock.

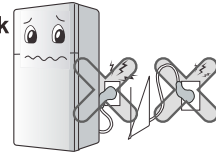


Do not allow the power cord to bend or pressed by heavy object.

It may damage the power cord and cause fire or electric shock.

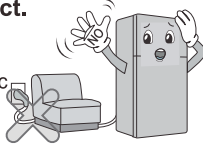

Do not extend or modify the length of the power plug.

It damages the power cord and cause electric shock or fire.

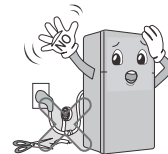


Unplug the power plug while cleaning, handling or replacing the interior LED lamp of the refrigerator.

- It may cause electric shock or injury.



Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

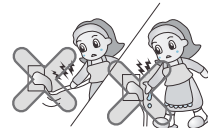


IMPORTANT SAFETY INFORMATION

1. When connecting the power


Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may cause fire or electric shock.




Make sure of grounding.

Incorrect grounding may cause breakdown and electric shock.

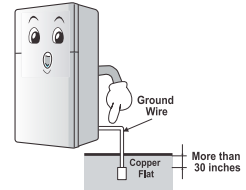

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit.

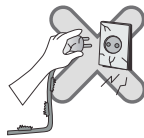

The tempered glass on door can be broken by impact, do not touch the broken parts you may injured.



2. When using the refrigerator

Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.

It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.

It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.




Do not install the refrigerator in wet place or place where water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.



Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

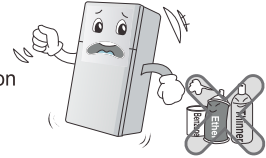


Do not use drier to dry the inside, nor light a candle to remove odor

It may cause explosion or fire.



Do not store medicine or academic materials in the refrigerator.

When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

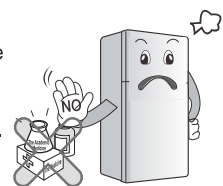


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not use the combustible spray near the refrigerator.

It may cause fire.

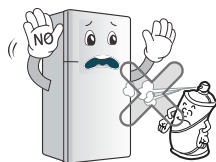


Install in places away from the fire such as the place where flammable gas is leaked.

It may cause fire.

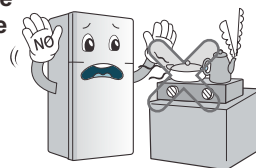


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

It may cause fire, electric shock or injury by dropping down.

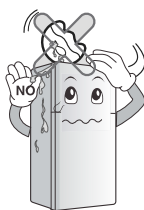

Use the submerged refrigerator only after checking it.


It may cause electric shock or fire.

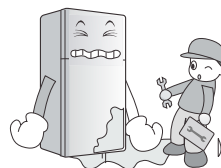

When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.


During the handling / delivering, installation if used gas is (1) Tetrafluoroethane (R134a) - in spite of being Environment friendly & Non flammable, it may cause irritation to skin, eyes with small amount of vapor, hence proper ventilation across the Refrigerator area is must.

(2) Natural Gas (isobutene, R600a) - is an environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked due to severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

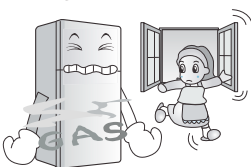


Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.

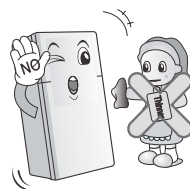

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

It may cause fire.

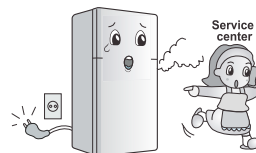


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

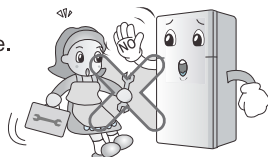

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

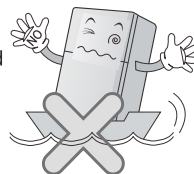


When disposing the refrigerator, remove the packing materials like gasket from the door

It may cause to lock out the child.




Install the refrigerator on a solid and level floor.

Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.

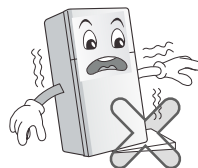

Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.

It may cause electric shock or injury.

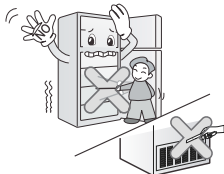

What to do with your old refrigerator,

Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process.



In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.

There is a danger of electric shock or fire.




Place all the components in the right places before connecting the power.



Do not remove the back cover.



Never leave lit candles on the fridge, high risk of causing fire or product damage.

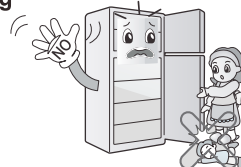


IMPORTANT SAFETY INFORMATION

⚠ CAUTION

Violating these directions may cause injury or damage to health, house or furniture. Always be careful, please.


Do not touch food or containers at the freezer with wet hands.

It may cause frostbite.

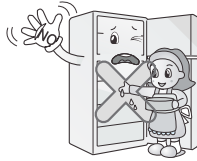

Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.

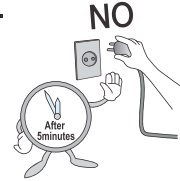

Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.




Pull out the power plug not by grasping the cord. But by the plug of its end.

It may cause electric shock or short circuit to fire.



Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.

Otherwise, your hands may be slipped to cause injury.

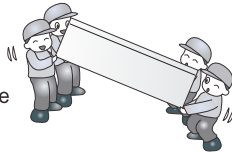


Do not insert hand into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.




Completely empty inside before taking out the container from the door.

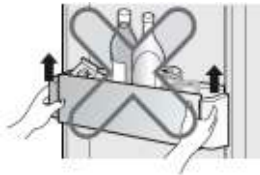

Opening or closing the door of the refrigerator may cause injury to the person around it, please be careful.

Opening or closing the door may cause feet or hands to be caught in the chink in door or child hand get hurt by the corner.

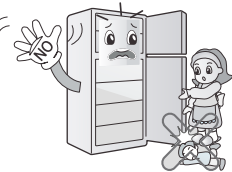


IMPORTANT SAFETY INFORMATION

Do not put any living animal in the refrigerator.



Do not use carbonated water. Gas pressure may cause leakage.

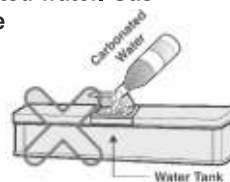

Do not lean on the doors, Hinges may deregulate themselves, causing air leak and performance deterioration




Clean the water tank according to the instructions.



Movable parts like shelf, basket, etc should be handled with care.

May get damaged or break if dropped.

Use only water. If any other liquid is used, the operation of the system may be deteriorated. If a problem occurs by using any liquid other than water, the manufacturer will not be responsible.

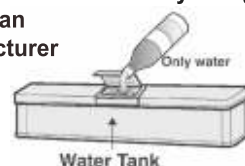

WARNING

Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION


1. Select a good location.
Place your refrigerator where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge -freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.
4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear to aid in door closing.
Leveling screws can be turned easily by tipping the cabinet slightly.
Turn the leveling screws clockwise() to raise the unit, counterclockwise() to lower it.
5. Don't install this appliance below 5 °. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.
2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.
Check the flow of cold air in the freezer compartment to ensure proper cooling.
Your refrigerator is now ready for use.

INNER PARTS

Water Dispenser Model

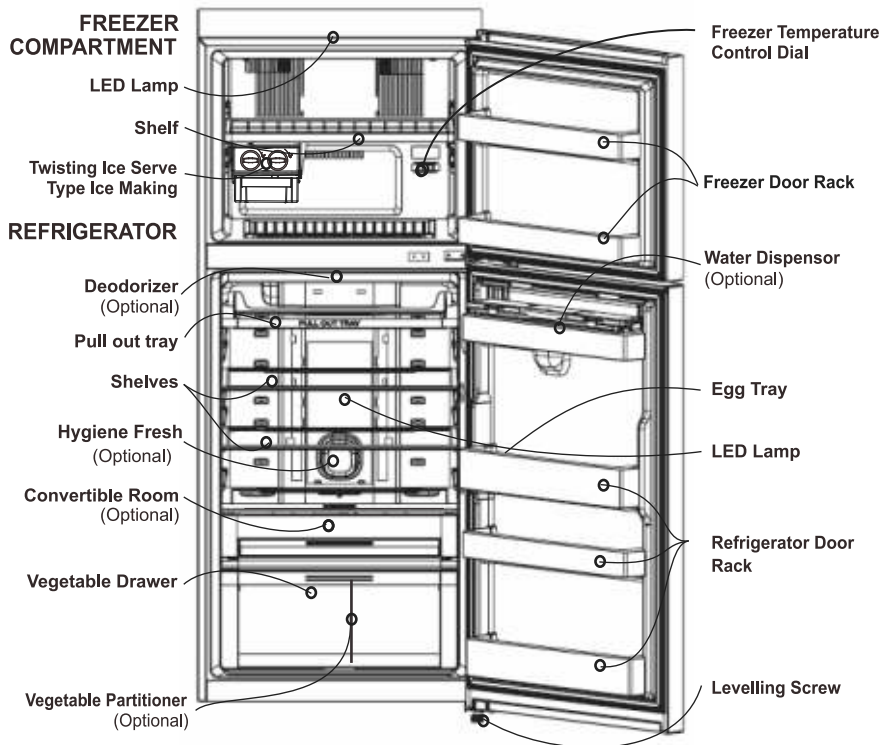

NOTE


- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

INNER PARTS

Non Water Dispenser Model

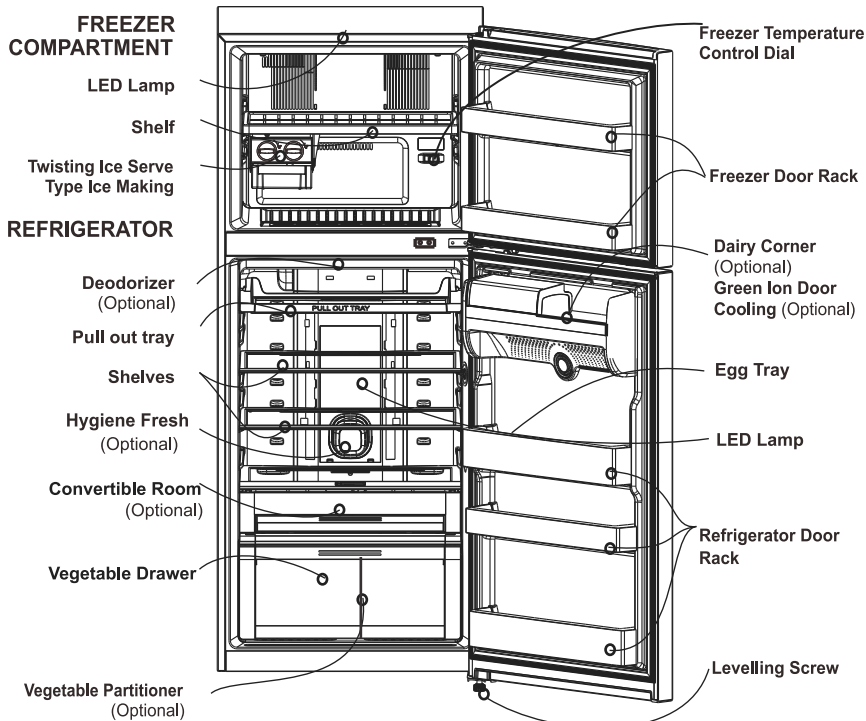

NOTE


- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING


- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

INNER PARTS (Factory Recommended Location)

GL-*562/
GL-*612

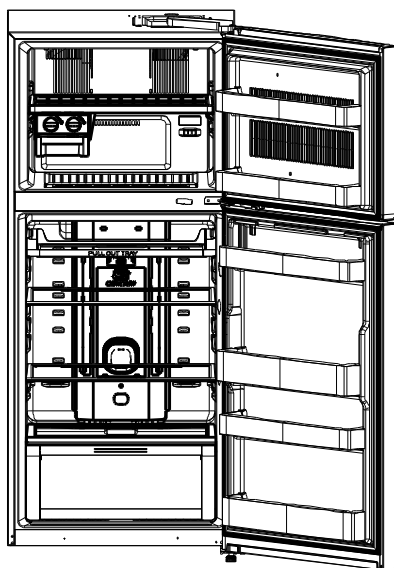

GL-*492

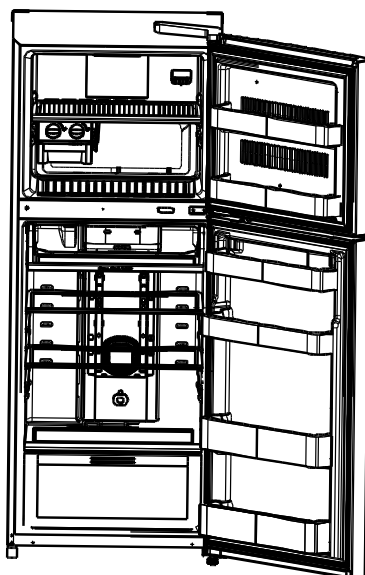

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.
- Due to continuously development, model specification subjected to change.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

OPERATIONS

STARTING

When your refrigerator is first installed, allow it (7-8 hours) to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.

If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control button for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control button for the refrigerator compartment is '3°C'.
- The default setting of the temperature control dial for the freezer compartment is '3'.
- This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

DOOR ALARM


When the door of the refrigerator or the freezer is open for 1 minute, an alarm will sound three times. If the door remains open, the alarm will repeat every 30 seconds.

SELF TEST

- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

CONTROLS FOR FREEZER COMPARTMENT

- The higher number the control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High (4~7/8).

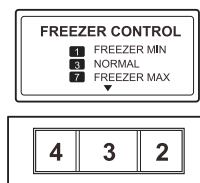


*Refer Freezer control label inside freezer compartment

OPERATIONS

CONTROLS FOR REFRIGERATOR COMPARTMENT

☐ FOR INTERNAL CONTROLLER MODEL

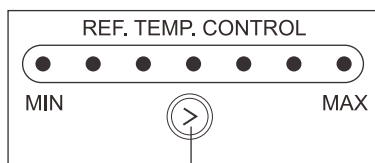

Ref. Temp Control Button

The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.

To control the refrigerator temperature, press the **REF. TEMP CONTROL** button.

Whenever pressing the button, LED emitting the light. The temperature is set in 7 steps, from **MIN** to **MAX** cooling. (**MIN** = warmest, **MAX** = coldest temperature)

☐ FOR EXTERNAL CONTROLLER MODEL

Display graphic can be different, depend on the type of your refrigerator.

• Display 'A'



• Display 'B'



- Press 'FRIDGE' button to control refrigerator temperature.
- Whenever pressing the button, the LED emits light.
- Press 'Hygiene Fresh' button to operate hygiene fresh motor (optional).
- The number showing up on the LED luminesce indicate the temperature of refrigerator compartment.
- You can select the desired setting point seven steps, from '0°C' to '6°C'.

• Display 'A'

- Press (b) button, refrigerator temperature will be down by 1°C.
- Press (a) button, 1) Hygiene fresh motor will be on. 2) Power mode ON 3) OFF.

• Display 'B'

- Press (c) button, refrigerator temperature will be down by 1°C.
- Press (d) button, refrigerator temperature will be up by 1°C.

OPERATIONS

EXPRESS FREEZE

- When the refrigerator is first turned ON the EXPRESS FREEZE feature can be turn ON. The compressor and circulating fan operate at maximum cooling capacity to quickly lower the refrigerator temperature. It shuts off automatically.



Display 'A'



Display 'B'

- If warm food is placed into the refrigerator, EXPRESS FREEZE can be started with the button on the control panel. EXPRESS FREEZE will shut off when the temperature reaches the proper level or it can be shut off manually by pressing the EXPRESS FREEZE button.

CHILD LOCK (OPTIONAL)

• CHILD LOCK

Press and hold the child lock button for 3 seconds to lock the child lock. When it is locked, the Lock LED will be on and the other button will not operate. To unlock, press and hold the CHILD LOCK button for 3 seconds again.

Note: This feature will be unlocked by itself, if the refrigerator is switched off.




Display 'A'



Display 'B'

GREEN ION DOOR COOLING (OPTIONAL)

- The anion coating in the duct cover purifies the air and helps stored foods remain fresh longer.
- If water or foreign substances enter the cool air vent while cleaning, efficiency will be lowered. In addition, if gasket is damaged, efficiency may be lowered owing to the escape of cool air.


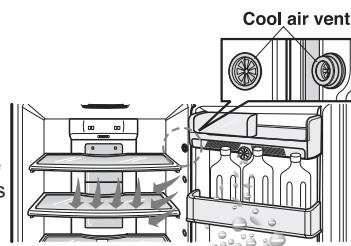


ICE MAKING (OPTIONAL)

Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.
- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop in to the ice cube box.

Ice Trays
Ice Cube Box

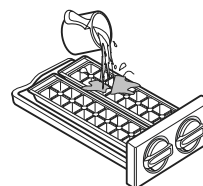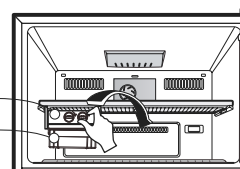

WARNING

- Do not use anything other than water.
- Fill the water up to the marked line.


OPERATIONS

CONVERTIBLE CORNER (OPTIONAL)

- When the door is opened, the warmer air can't influence in the fresh zone. So you can store food more fresh in it.
- Inserted convertible room must be placed at its position. If door is opened, it can't fill the role of it.

How to use


- Vegetable Corner or Fresh Corner can be used through the control of knob.
- Check the position of knob prior to store the food.
- Do not locate the knob on the middle point.

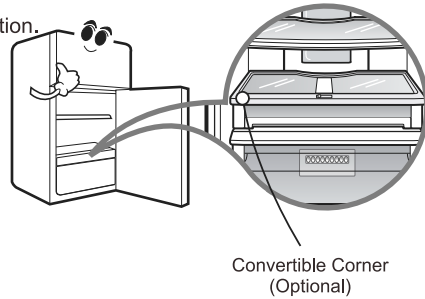

VEGETABLE DRAWER


Magic Crispers(Optional)

- Magic Crispers provide fresher-tasting fruit and vegetables by letting you easily keep humidity inside the drawer.
- A lattice on the underside of the cover to efficiently hold or release moisture.
- Sealing structure keep the humidity.

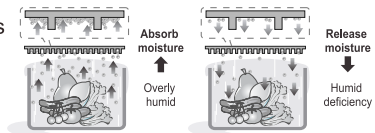

Vegetable Partitioner(Optional)

- Fix the partitioner by inserting it at the rear side of vegetable box as shown in the figure.



Partitioner
(Optional)

OPERATIONS


WATER DISPENSER (OPTIONAL)

NOTE


- Pour water after the water tank is in position.
- Necessarily separate the water tank to clean it or when not in use
- When the water tank is not in position after filling it with water, water can leak out by the valve.

• Pouring water in the water tank

1. Open the cover cap and pour water into the water tank.

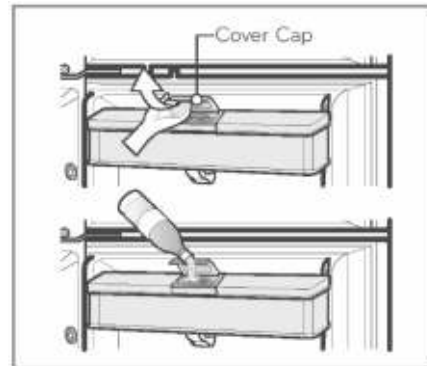


2. Close the cover cap.

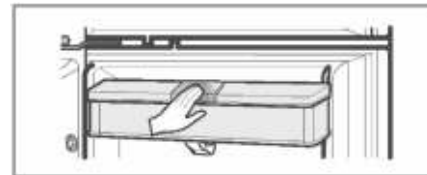

3. The water tank is optional removable part which can be applied to enlarge the storage capacity. You can use the upper basket after removing the water tank and closing up the hole with a plug.

The plug is enclosed with the egg tray.

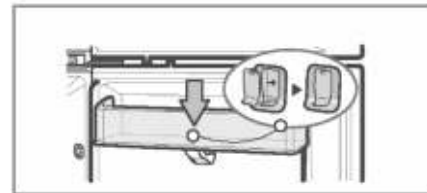

! Caution

Do not use anything other than water, even hot water needs to be cooled before being poured in to the water tank.
Do not fill more than the indicated level .

• Drinking Water

1. Press the dispenser pad with cup.
2. The water is released when the dispenser pad is pressed. The pad returns to its original position when the cup is removed and the water stops its flow.



SMART DIAGNOSIS (Only for Selected External Micom Models)

Smart diagnosis function is...




Use the function to contact the service center and receive precise diagnosis when the refrigerator malfunctions or fails. Use it only to connect to the consultant and do not use it in normal times.

How to use the function


1. Close all refrigerator doors, and press and hold display lock button to make it locked state.

If the display is already in locked state, press and hold lock button to reset the lock and press and hold the lock button again to make it locked state.

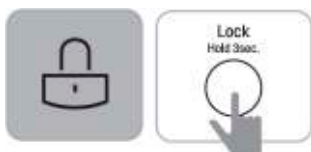

3. Open all refrigerator compartment and freezer compartment doors, and place the telephone near the speaker hole at the top right side.

Check if the speaking side(microphone) of the telephone is toward the speaker hole.

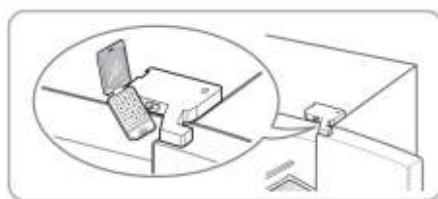


! CAUTION

If it passes 5 minutes in locked state, smart diagnosis function will not be activated, so be careful.

2. Press and hold fridge temperature button for 3 seconds or longer. (All display screens will be turned off, and in a while, 3 will be displayed on the fridge temperature display part.)



< Model with Hygiene Fresh Filter >

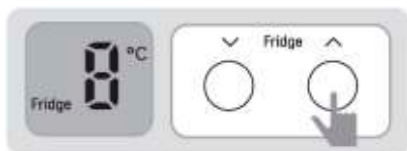

< Model without Hygiene Fresh Filter >

4. Do not take away the telephone while data is being transmitted.

During the data transmission for smart diagnosis, wait with the telephone placed near the speaker hole at the top right side. The remaining time for data transmission is displayed on the display screen.

! CAUTION

The transmission sound may be irritating. Do not take away the telephone until the sound stops for good diagnosis.

5. After the completion of the data transmission, listen to the explanation of the consultant about the result of the smart diagnosis.

When the data transmission is completed, along with the display of the data transmission completion, the refrigerator will be automatically turned off and on a few seconds later. Listen to the explanation of the consultant about the result of the analyzed diagnosis and follow the instructions.

Be aware!

- Difference of the regional call qualities may have influence on the function.
- If you use home phone, better communication performance will enable much better service.
- Smart diagnosis data transmission may not be fluent due to call quality problem, and in such case, smart diagnosis service may be difficult.

SMART DIAGNOSIS (Only for Selected Internal Micom Models)

Smart diagnosis function is...




Use the function to contact the service center and receive precise diagnosis when the refrigerator malfunctions or fails. Use it only to connect to the consultant and do not use it in normal times.

How to use the function

1. Open all the doors of the refrigerator. If the display is already in locked state.

2. Press the refrigerator door open detection switch 5 times as in the figure to make the light inside the chamber blink. (The locations of the door open detection switches of each model may be different, so refer to the following figure to check the location.)

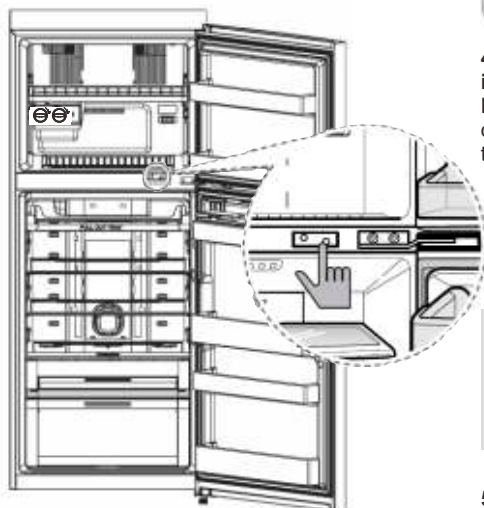

3. Place the phone near the speaker hole at the top right side.

Check if the speaking side (microphone) of the telephone is toward the speaker hole.



4. Do not take away the telephone while data is being transmitted.

During the data transmission for smart diagnosis, wait with the telephone placed near the speaker hole at the top right side.



CAUTION

The transmission sound may be irritating. Do not take away the telephone until the sound stops for good diagnosis.

5. After the completion of the data transmission, listen to the explanation of the consultant about the result of the smart diagnosis.

When the data transmission is completed, along with the display of the data transmission completion, the refrigerator will be automatically turned off and on a few seconds later. Listen to the explanation of the consultant about the result of the analyzed diagnosis and follow the instructions.

Be aware!

- Difference of the regional call qualities may have influence on the function.
- If you use home phone, better communication performance will enable much better service.
- Smart diagnosis data transmission may not be fluent due to call quality problem, and in such case, smart diagnosis service may be difficult.

OPERATIONS

HYGIENE FRESH (OPTIONAL)

CAUTION

Before installing or using the product, make sure to read the owner's manual carefully to use the product accurately as intended. This HYGIENE FRESH filter has the antibacterial function of removing the virus or bacteria inside the refrigerator and the deodorizer function to remove the scent.


The function has tested and has been certificated by authorized institutions **Intertek**

Switch over to use mode

Switch over to use mode.

- To use the HYGIENE FRESH filter, press the  button on the display panel on the front side of the door and switch over to the AUTO or POWER mode.

(Whenever you press the button, the HYGIENE FRESH filter will be switched to OFF → AUTO → POWER → OFF.)

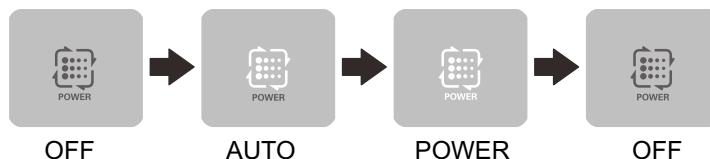

! CAUTION

When the user switches to AUTO or POWER mode, the LED around the filter is also turned on. Open the door to check whether the LED around the filter is also turned on. Do not put in your finger or alien particles inside the fan. It can be caused of an injury or malfunction.

! CAUTION

- Do not wash the HYGIENE FRESH filter by using water because It can be caused of malfunction.
- This filter may not be effective for all types of bacteria and virus.
- This is effective to remove the bacteria which is not on the food in the refrigerator.

You can purchase the HYGIENE FRESH filter at the nearest distributor or the service center.


OPERATIONS

DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER (OPTIONAL)

- Unpleasant odor of food in fresh food compartment is deodorized with no harm to the user and the food.

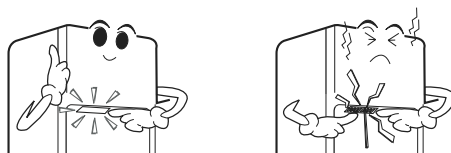


How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may get damaged.
- When storing food with strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.


Re-Using of Deodorizer

- Deodorizer can be revived and re-used.
- Separate the Deodorizer from the refrigerator
- Use hair drier to remove moisture or malodor and oxidize under sunlight to decompose malodor by ultraviolet.

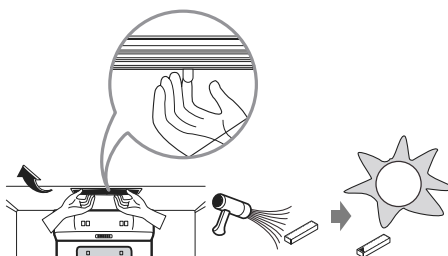


DAIRY CORNER (OPTIONAL)

- Dairy corner cover can be moved right and left with the help of protruded handle.

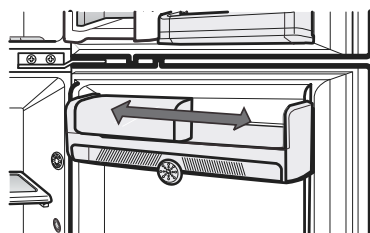

How to remove the cover for cleaning

- Slide the cover to the center of basket and align the hole with both sides of the basket.
- After aligning, turn basket from back to front and pull out with both hands.

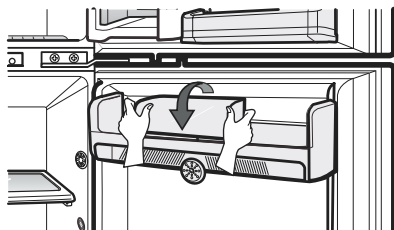


SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!
- When storing the food, cover it with vinyl wrap or store in a container with lid. This prevents moisture from evaporating and helps food to keep its taste and nutrients. This will also prevent transfer of taste and smell from one food to other.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.

FREEZER COMPARTMENT


- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Loading for Freezing - It is recommended to load newly introduced foods on the following position for freezing:

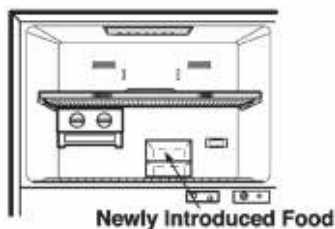

- Freezer Door Basket, marked (✱✱) is -12°C compartment, that is suitable for short term storage of frozen food (optional).

REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze by direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a up-right position, which keeps them fresh for longer time.

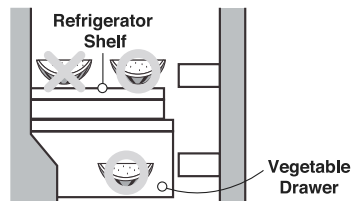

CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR -Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning - Not to use : Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used
- Careless usage can lead to colour change.

Caution

1. Use lukewarm water when cleaning.
2. Water Tank: Do not use anything other than water. If any other liquid is used, please rinse the tank three to four times with water.

CLEANING

WATER DISPENSER

Grille -

Wipe with a clean, damp cloth and then dry using dry cloth.





Water Tank -

1. Water Filling

It is not necessary to remove the water tank in order to fill it (it can be filled by opening the water tank cap).

NOTE

- Before closing door, close the cap and clamp tightly.
- Do not use liquids containing sugar or carbonated drinks.

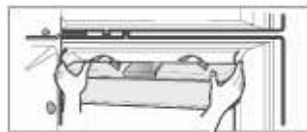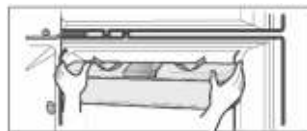

2. Disassembly

Lift the water tank, gripping a side and bottom of water tank.


NOTE

Before disassembly of water tank, drain all water from the dispenser




3. Assembly

If by some cause the water tank is dislocated, place it again at its original position. Verify that the valve is assembled correctly in the hole of the door. Once assembled push down and check the tank position with line.

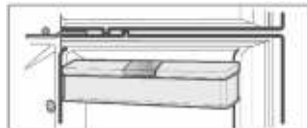

Water Tank -


1. Remove the tank cover.

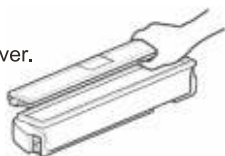

- #### 3. Clean the inside and outside of the cover and cap with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.



- #### 2. Clean th inside and outside of the water tank with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.

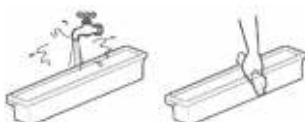

- #### 4. Assemble the cover with tank and clamp it with the help of snaps provided, further assemble it n refrigerator door

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw(s), turn them all the way into the base.


ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.

This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation
Pipe

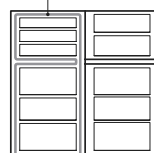

Caution

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE : Moving the control to OFF position does not remove power from the light circuit.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should in such a position that the supply plug is accessible for quick disconnection when accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)


In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH.

It will cause electric shock or fire.

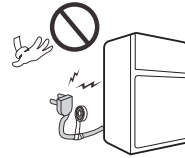

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store inflammable materials, explosives or chemicals in the refrigerator.

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	• Has a house fuse blown or circuit breaker tripped? • Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	• Temperature control not set on proper position. • Appliance is placed close to wall or heat source. • Warm weather-frequent door openings. • Door left open for a long time. • Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	• Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. • Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	• Foods with strong odors should be tightly covered or wrapped. • Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	• Not unusual during periods of high humidity. • Door may have been left ajar.

Features

Model			GL-B492G***	GL-M492G***
Product Category			LG Electronics Refrigerator- Freezer	
Capacity(l)	ISO Gross	Total	422	422
		Freezer	131	131
		Two Star Section	0	0
		Refrigerator	291	291
	ISO Storage	Total	393	388
		Freezer	108	108
		Two Star Section	0	0
		Refrigerator	285	280
Weight (Kg)	Net / Packing		76/81	76/81
	Width x Height x Depth	Product	680 x 1725 x 725	
		Packing	744 x 1825 x 739	
Free Standing / Built-In			Free Standing	
Defrost System			Frost Free	
Sound Power (dB)			38	
Energy Class			A+	
Energy Consumption (KWh/year)			275	
Temperature rise time (hr)			13.4	
Freezing Capacity (Kg/24hr)			4.8	
Refrigerant			R600a	
Star Rating				
Climate Class			N-T	

* **Climate Class:** N - T (Device is meant to be used in ambient between 16°C to 43°C)



KULLANIM KILAVUZU

SOĞUTUCU

Lütfen cihaz ın z ı al ş t ırılmadan önce bu k ılavuzu dikkatle okuyun ve ileride başvurmak üzere saklayın




MFL68488903

İÇİNDEKİLER

ÖNEMLİ GÜVENLİK BİLGİLERİ.....	3
KURULUM	10
İÇAKSAM	11
ÇALIŞTIRMA	14

Başlatma	
Is y ı Ayarlamadan Önce	
Kapak Alarmı	
Kendi Kendini Test	
Dondurucu Bölmesi İçin Kumandalar	
Soğutucu Bölmesi İçin Kumandalar	
Ekspres Dondurma	
Çocuk Kilidi (İsteğe Bağlı)	
Yeşil İyon Kapı Soğutma (İsteğe Bağlı)	
Buz Yapma (İsteğe Bağlı)	
Dönüştürülebilir Köşe/Taze Bölge (İsteğe Bağlı)	
Sebze Çekmecesi	
Su Sebili (İsteğe Bağlı)	
Ak ı Tan ı (İsteğe Bağlı)	
Hygiene Fresh (İsteğe Bağlı)	
Buz Çözme	
Koku Giderici (İsteğe Bağlı)	
Süt Ürünleri Köşesi (İsteğe Bağlı)	

GIDA DEPOLAMA İÇİN TAVSİYELER	23
TEMİZLEME	24
GENEL BİLGİ	26
ÖNEMLİ UYARILAR	27
SERVİS ÇAĞIRMADAN ÖNCE	28

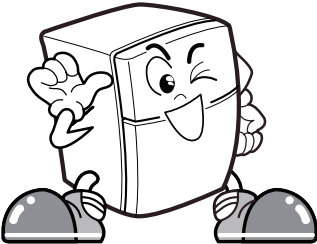

ÖNEMLİ GÜVENLİK BİLGİLERİ



UYARI



Cihaz ın gövdesinde veya iç yap ı ındaki havaland ırma deliklerinin engellenmemesini sağlayın.



Buz çözme işlemini hızlandırmak için üretici tarafından önerilen cihazlar dışında mekanik cihaz veya başka alet kullanmayın.



Soğutucu gaz devresine hasar vermeyin.



Üretici taraf ından tavsiye edilmedikçe, yiyecek depolama bölümünde elektrikli cihazlar kullanmay ın.



Cihazda kullan ılan soğutkan ve yal ıt ım üfleme gaz ı özel bertaraf yöntemleri gerektirir. Bertaraf ederken lütfen servis eleman ı veya benzer niteliklere sahip bir kişiye dan ış ın.

TEMEL GÜVENLİK ÖNLEMLERİ

Bu k ılavuz pek çok önemli güvenlik mesaj ı içermektedir. Daima tüm güvenlik mesajlar ın okuyun ve uyun.



Bu bir güvenlik uyar ı simgesidir. Sizi zarar verebilecek ya da ciddi yaralanmaya yol açabilecek veya üründe hasara yol açabilecek tehlikeler konusunda bilgilendiren güvenlik mesajlar ı konusunda uyar ır. Tüm güvenlik mesajlar ın önünde güvenlik uyar ı simgesi TEHLİKE, UYARI veya DİKKAT gibi tehlike sinyal kelimesi yer alacaktır. Bu kelimelerin anlamı:



TEHLİKE

Talimata uymazsan ız can ın ız yanabilir veya ciddi biçimde yaralanabilirsiniz.



UYARI

Ürününüzü kullan ırken yang ın, elektrik çarpması veya ki şisel yaralanma riskini azaltmak için aşağıdakiler de dahil olmak üzere temel güvenlik önlemlerine uyulmalıdır. Cihaz ı kullanmadan önce tüm talimat ı okuyun.



DİKKAT

Önlenmemesi durumunda küçük veya orta derece yaralanmalar veya ürünün zarar görmesi ile sonuçlanabilecek tehlikeli bir durumu gösterir.

Tüm güvenlik mesajlar ı tehlikeyi tanımlayarak, yaralanma tehlikesinden nasıl kaç ınacağı n ız ı belirtecek ve talimata uyulmazsa neler olabileceğini açıklayacaktır.



Kullan ılan gaz R600a ise

Bu cihaz çevreye son derece uyumlu, fakat aynı zamanda yan ıcı ıdo al bir gaz olan az miktarda izobütan soğutkan (R600a) içerir. Cihazı naklederken veya kurarken soğutma devresinin hiçbir parças ın hasar görmemesi için gerekli dikkat gösterilmelidir. Borulardan f ı şkı ran soğutkan tutuşabilir veya gözünüzün yaralanması na neden olabilir. Bir s ızınt ı saptan ırsa ç ıplak alevi veya olas ı tutuşma kaynaklar ın uzaklaşt ır ın ve cihaz ın bulunduğu oday ı birkaç dakika havaland ır ın.

Soğutma devresinde bir sızınt ı meydana gelmesi durumunda yanıcı gaz hava karışımının oluşmasını önlemek için cihaz ın bulunduğu odanın ebad ı kullan ılan soğutkana bağı lı olarak ayarlanabilir. Oda, cihaz ın içerisindeki her 8 graml ık R600a soğutkan için 1m ebatlarda olmalıdır. Size özel cihazdaki soğutkan miktarı cihazın içerisindeki tanıtıcı levhada gösterilmektedir.

ESKİ CİHAZINIZIN BERTARAF EDİLMESİ



1. Tüm elektrikli ve elektronik ürünler, normal atıklardan ayrı olarak hükümet veya yerel idareler tarafından belirlenmiş olan yerlere bırakılmalıdır.

2. Bu tip eski cihazların doğru olarak bertaraf edilmesi hem çevreye, hem de insan sağlığına verilebilecek zararları önleyecektir.

3. Eski cihazların bertaraf edilmesiyle ilgili olarak, bulunduğunuz yerdeki belediyeye, atık bertaraf hizmeti veren kuruluşlara veya ürünü satın aldığınız yerlere başvurulabilirsiniz.

*(NOT - 1, 2 ve 3 Ürün Düzenlemeleri ve uygulanabilir olmaları ölçüsünde diğer ülkeler için geçerlidir.)

4. Üstünde çarpı işareti bulunan bu tekerlekli çöp bidonu simgesinin ürünün üstünde olması, ürünün Avrupa Birliği Yönergesi 2002/96/EC kapsamında olduğunu belirtir.




Ürününüzü kullanırken yangın, elektrik çarpması veya kişisel yaralanma riskini azaltmak için aşağıdakiler de dahil olmak üzere temel güvenlik önlemlerine uyulmalıdır. Cihazı kullanmadan önce tüm talimatı okuyun.

ÖNEMLİ GÜVENLİK BİLGİLERİ

1. Güç bağlanırken


Özel priz kullanılmamalıdır.

- Bir prize birden çok cihaz bağlamak yangına neden olabilir.

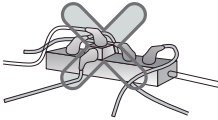


Güç kablosunun kırılması ya da ağırlı bir cisim altında ezilmesine izin vermemin.

Güç kablosuna hasar verebilir, yangına veya elektrik çarpmasına neden olabilir.

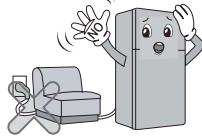


Soğutucunun dahili LED lambasını temizler, eller veya değiştirirken güç kablosunu prizden çekmemin.

- Aksi davranış elektrik çarpmasına veya yangına neden olabilir.

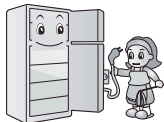


Elektrik fişinin yukarıya dönük olmasına veya soğutucunun arkasına kışması izin vermemin.

Aksi halde fiş hasar görerek yangına ya da elektrik çarpmasına neden olabilir.

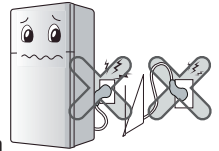


Güç kablosunun boyunu değiştirmeyin, uzatmayın.

Aksi halde güç kablosu hasar görerek yangına ya da elektrik çarpmasına neden olabilir.

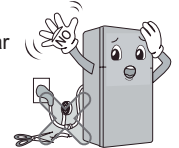

Islak elle güç kablosunu çekmeyin, dokunmayın.

- Aksi davranış elektrik çarpmasına veya yangına neden olabilir.

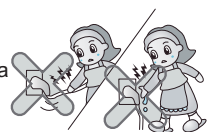


ÖNEMLİ GÜVENLİK BİLGİLERİ

1. Güç bağlanırken


Güç fişi üzerindeki toz ve rutubeti silin ve uçları doğru şekilde yerleşmesine dikkat ederek takın.

Toz, su ve gevşek bağlantı yangına veya elektrik çarpmasına neden olabilir.




Güç kablosu ya da güç fişi hasarlı ya da pris delikleri gevşekse, kullanmayın.

Aksi halde elektrik çarpmasına ya da kısa devreye neden olabilir.

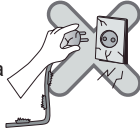

Topraklamaya dikkat edin.

Yanlış topraklama arıza ve elektrik çarpmasına neden olabilir.

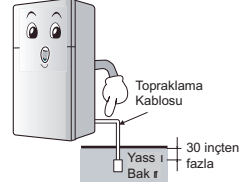

Kapı üzerindeki tavlama şerh cam darbeye kırılabilir; kırık bölümlere dokunmayın, yaralanabilirsiniz.



2. Soğutucuyu kullanırken

Üzerine ağır veya tehlikeli (içerisi dolu kap) cisim yerleştirmeyin.

Kapıyı açılıp kapanması sırasında düşebilir, yaralanmaya, elektrik çarpmasına ya da yangına neden olabilir.




Soğutucuyu ıslak bir yere ya da su veya yağmurun sıçrayabileceği bir yere yerleştirmeyin.

Elektrik aksamı ıslanmış hasar görmesi elektrik şoklarına neden olabilir.



Soğutucunun içini kurutmak için saç kurutma makinesi, kokuları gidermek için de mum kullanmayın.

Aksi halde patlama veya yangın tehlikesi doğabilir.

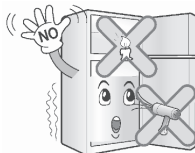


Kapı ya, dondurucunun ya da soğuk bölmenin kapısına ya da raflarına asmayın.

Soğutucunun devrilmesine ya da ellere zarar vermesine neden olabilir. Özellikle, çocukların yukarıda belirtilenleri yapmalarına izin vermeyin.




Soğutucunun yakınında ya da içinde eter, benzen, alkol, ilaç, sıvı lastik, petrol gazı, spreys veya kozmetikler gibi tutuşabilir maddeler bulundurmayın.

Aksi halde patlama veya yangın tehlikesi doğabilir.

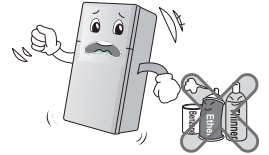

Soğutucunun içinde ilaç ya da akademik materyaller depolamayın.

Sık sık kontrollü gerektiren materyaller depolanmaları halinde bozulabilir ya da risk oluşturabilecek, beklenmedik tepkiler doğurabilir.

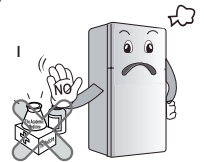


ÖNEMLİ GÜVENLİK BİLGİLERİ

2. Soğutucuyu kullanırken


Soğutucunun yakınında yanıcı spreylere kullanmayın.

Yangın neden olabilir.

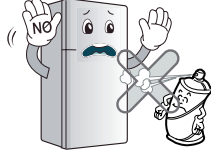

Tutuşabilir gazların sızdığı, alevden uzak yerlere yerleştirin.

Yangın neden olabilir.

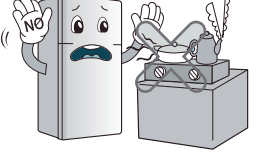


Soğutucunun üzerine çiçek vazosu, fincan, kozmetik, ilaç veya su dolu herhangi bir kap yerleştirmeyin.

Düşerek yangına, elektrik çarpmasına veya yaralanmaya neden olabilir.




Su altında kalmış soğutucuyu ancak kontrol ettikten sonra kullanın.

Elektrik çarpmasına veya yangın neden olabilir.

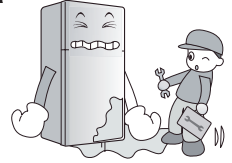


Gazsız durumda soğutucuyu ya da prize dokunmayın ve derhal odayı havalandırın.

Kullanılan gaz (1) tetro-flüoro-etan (R 134a)- ise, çevre dostu ve tutuşmaz olmasına rağmen elleçleme/nakliye, kurulum sırasında az miktarda buhar ı ciltte ve gözlerde tahrişe neden olabileceğinden, soğutucu alanının mutlaka gerektiği gibi havalandırılması lazımdır. (2) Doğal Gaz (izobütan, R600a)- çevre dostu bir soğutkandır ve küçük bir miktar ı (80-90g) bile yangındır. Nakliye, kurulum veya kullanma sırasında ciddi hasar nedeniyle gazsız durumda, herhangi bir şekilde yangın veya yangı neden olabilir.

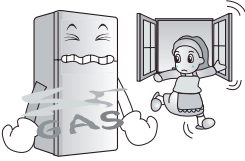


Soğutucunun içine veya dışına su püskürtmeyin ve benzen ya da tinerle temizlemeyin.

Elektrik aksamı yalıtımına hasar görmesi elektrik çarpmasına veya yangın neden olabilir.

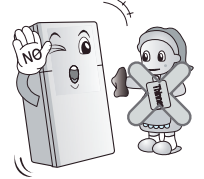

Soğutucudan gelen herhangi bir yabancı koku veya dumanı algıladığınız durumda derhal fişi çıkarın ve servis merkeziyle iletişime geçin.

Yangın neden olabilir.

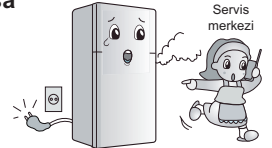


ÖNEMLİ GÜVENLİK BİLGİLERİ

2. Soğutucuyu kullanırken

Kalifiye mühendis d ş nda hiç kimsenin soğutucuya sökmesine, onarmasına ya da üzerinde değişiklik yapmasına izin vermeyin.

Aksi davran ş elektrik çarpmas na veya yang nı neden olabilir.

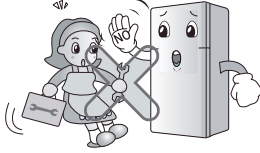


Soğutucu bertaraf edilirken, kapıdaki contalar gibi s zd rma z k parçalar n ı ç kar n.

Aksi davran ş çocuklar n içeriye hapsolmas na neden olabilir.




Soğuk hava kapağına, soğutucunun alt na, ya da arka taraftaki s ı koruma zgaras na (egzos deliğı) elinizi ya da metal bir çubuk sokmay n.

Aksi davran ş elektrik çarpmas na veya yang nı neden olabilir.

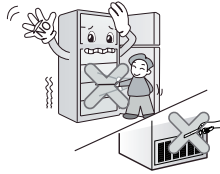


Gök gürültüsü ve şimşek durumunda ya da uzun süre kullan lmayacaksa, güç fişini prizden çıkarın.

Elektrik çarpmas ı ya da yang n tehlikesi olabilir.

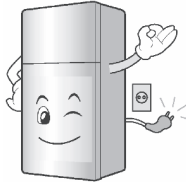


Arka kapağı çıkarmayın.

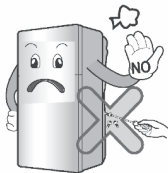


Soğutucuyu ev dış ı amaçlarda (ilaç veya test malzemesi depolamak, gemide kullanmak, vs.) kullanmay n.

Aksi davran ş elektrik çarpmas ı saklanan malzemenin bozulmas ı veya kimyasal reaksiyon gibi beklenmedik bir tehlikeye neden olabilir.

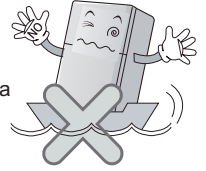


Soğutucuyu dü z ve sağlam bir zemin üzerine yerleştirin.

Sağlam olmayan bir zemin üzerine yerleştirmek, kap n n aç ılıp kapanmas ı s ras nda soğutucunun devrilmesi sonucu yaralanmaya neden olabilir.

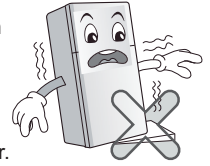


Eski soğutucunuzla ne yapacaksınız,


Soğutucunuz dönüştürülebilir maddelerden üretilmiş sıvılar (soğutkan, yağ) içerir. Belirli bir geri kazanma süreci sonrasında yeniden kullan ılabileceğı için, tüm bu maddelerin bir at ık dönüştürme tesisine gönderilmesi gerekir



Güç bağlantısını yapmadan önce bütün parçalar ı doğru yerlerine yerleştirin.

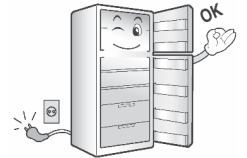

Soğutucu içinde asla yanar mum b rakmay n; yüksek yang n veya ürün hasar ı tehlikesi doğurabilir.

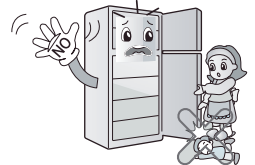


ÖNEMLİ GÜVENLİK BİLGİLERİ

⚠ DİKKAT

Bu talimatlara aykırı hareket etmek yaralanmaya, sağlığa, eve ve eşyaya zarara neden olabilir. Lütfen her zaman dikkatli olun.

Islak elle dondurucudaki gıdalara veya kaplara dokunmayın.

Aksi davranış uzuv donmasına neden olabilir.

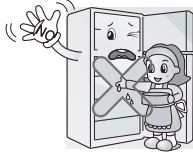

Fişi yeniden takmadan önce 5 dakika veya daha uzun süre bekleyin.

Fişi yeniden takmadan önce 5 dakika veya daha uzun süre bekleyin.



Dondurucuya şişe yerleştirmeyin.

Aksi davranış içeriği donan şişenin kırılması ve yaralanmaya neden olmasına sonucunu doğurabilir.




Güç kablosunu asarak çarpmayın. Uçtaki fişten tutarak çekin.

Aksi davranış elektrik çarpmasına, kısa devreye ve yangına neden olabilir.



Soğutucuyu, cihazın ön dibinde ve arka tepesindeki çubuklardan kaldırarak taşımayın.

Aksi halde, elleriniz kayıp yaralanabilir.

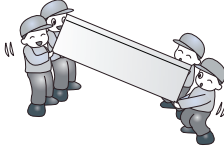


Elinizi soğutucunun altına sokmayın.

Altındaki demir plaka yaralanmaya neden olabilir.




Kapıdaki bölmeyi çekmeden önce içini tümüyle boşaltın.

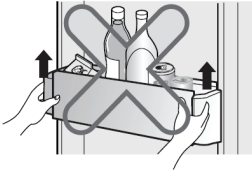


Soğutucunun kapısını açmak ve kapamak çevredeki insanları yaralayabileceği için lütfen dikkatli davranın.

Kapıları açılıp kapanması kapıya sıkışan ellerin veya ayakların yaralanmasına, çocuk ellerinin köşeden zarar görmesine neden olabilir.

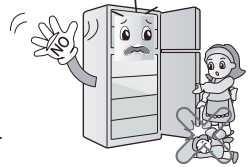


ÖNEMLİ GÜVENLİK BİLGİLERİ


Soğutucunun içine canlı hayvan koymayın.

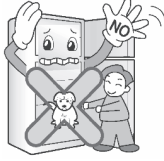


Gazlı (karbonatlı) su kullanmayın. Gaz basıncı sızıntıya neden olabilir.

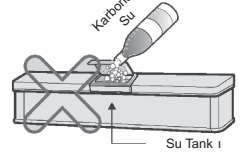

Kapılara yaslanmayın. Mentşelerin ayarını bozularak hava sızmasını ve performans düşüklüğüne neden olabilir.

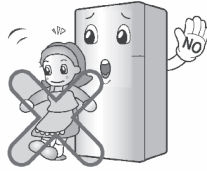


Su tankını talimata göre temizleyin.

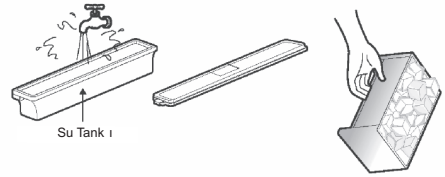

Raf, sepet vb. gibi hareketli parçalara dikkat etmek gerekir.

Düşürülürse, hasar görebilir ya da kırılabilir.

Sadece su kullanın. Farklı bir sıvı kullanılırsa sistemin çalışması etkilenebilir. Su dışında bir sıvı kullanılması nedeniyle yaşanan sorundan imalatçı sorumlu tutulamaz. Su Tankı / Yalnız su

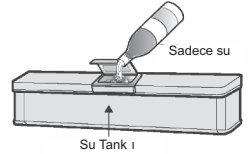

⚠ UYARI

Lütfen alt çekmeceleri temizlemek için bulaşık makinesi kullanmayın; Yüksek ısı sepetlere zarar verebilir, kullanılmayacak hale getirebilir.

BU SOĞUTUCU BÜYÜK BİR DİKKATLE ÜRETİLMİŞ OLUP, EN SON TEKNOLOJİYİ KULLANMAKTADIR.

PERFORMANS VE GÜVENİLİRLİĞİNDEN TÜMÜYLE TATMİN OLACAĞINIZA OLAN GÜVENİMİZ TAMDIR.

SOĞUTUCUNU KULLANMAYA BAŞLAMADAN ÖNCE, LÜTFEN BU BROŞÜRÜ DİKKATLE OKUYUN.

BU BROŞÜR, KURULUM, KULLANIM VE BAKIM İÇİN KESİN BİLGİLER SAĞLAMANIN YANI SIRA, YARARLI İPUÇLARI DA VERİR.

KURULUM


1. İyi bir yer seçin
Cihaz ın z ı kolay kullanabileceğiniz bir yere koyun.
2. Üniteyi s ı kaynaklar ın n yan na, doğrudan güneş ışığı alan veya nemli yerlere koymaktan kaç ın.
3. Dondurucu çevresinde doğru hava akımı sağlamak için, lütfen her iki tarafta, üstte ve altta, arka duvardan en az 2 inç (5 cm) olacak şekilde yeterli boşluk bırakın.
4. Titreşimleri önlemek için, cihazın düz bir yüzeyde durması gerekir. Gerekirse denge ayaklar ın ı döşemedeki eşit olmayan yerleri dengeleyecek şekilde ayarlay ın. Kap ın ın kapanması yarar mc ı olmak için ön k s ın arka taraftan biraz daha yüksek olmalıdır.
Denge ayaklar ın ı dolab ın hafifçe eğilmesiyle kolayca çevrilebilir.
Cihaz ı yükseltmek için denge ayaklar ın ı saat yönünde (), alçaltmak için saat yönünün tersine () çevirin.
5. Bu cihaz ı 5° alt na kurmay ın. Aksi davran ş soğutucunun ayar ın ın bozulması na neden olabilir.

İLERİ

1. Soğutucunuzu iyice temizleyin ve nakliye sırasında birikmiş olabilecek tozu silerek giderin.
2. Buz küpü kutusu vb. gibi aksam ı yerlerine yerleştirin. Bu parçalar nakliye sırasında hasar görmemesi için bir arada paketlenmiştir.
3. Güç beslemesi kablosunu (veya fişi) priz ç k ş na bağlay ın. Aynı ç k ş na bağlı diğer cihazlarla birleştirmeyin.
4. Yiyecek koymadan önce, soğutucunuzu 2 ya da 3 saat çalış t ır ın. Uygun şekilde soğutma yaptığınan emin olmak için dondurucu bölmesindeki soğuk hava ak ş ın ı kontrol edin. Soğutucunuz art k kullanmaya hazır d ır.

İÇ AKSAM

Su Sebilli Model-

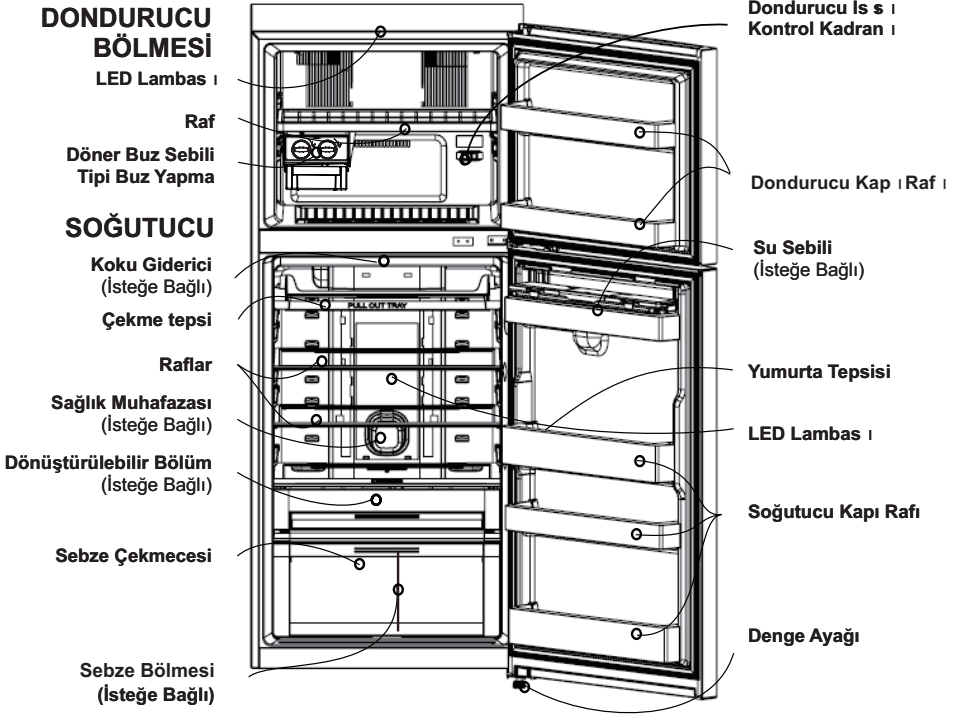

NOT


- Bu kılavuz birçok farklı model için kapsar. Satın aldığınız soğutucu yukarıda gösterilen özelliklerden tümüne ya da bazılarına sahip olabilir.
- Enerji tasarrufu için en uygun kullanım sepet, çekmece ve raflar gibi iç aksamın üretici tarafından belirtilen yerlere yerleştirilmesidir.
- Sürekli gelişim nedeniyle, model özellikleri değişiklik gösterebilir.

ENERJİ TASARRUFU ÖNERİLERİ

- Lütfen kapı uzun süre açık bırakmayınız, kapıyi en kısa sürede kapatınız.
- Fazla yiyecek konulması tavsiye edilmez; soğuk havanın serbestçe dolaşabilmesi için yeterli alan bırakılmalıdır.
- Yerleştirmeden önce, sıcak yiyeceklerin soğumasına izin verin. Sıcak yiyeceklerin soğutucuya-dondurucuya konulması diğer yiyecekleri etkileyebilir ve daha yüksek enerji tüketimine neden olabilir.
- Hava çukşını yiyeceklerle kapamayınız. Soğuk hava dolaşımı soğutucu-dondurucu için sabit tutar.
- Kapıyı sık sık açmayınız. Kapıyı açmak sıcak havanın soğutucu-dondurucuya girmesine yol açarak enerji artmasına neden olur.

İÇ AKSAM

Sigara Su Sebili Modeli

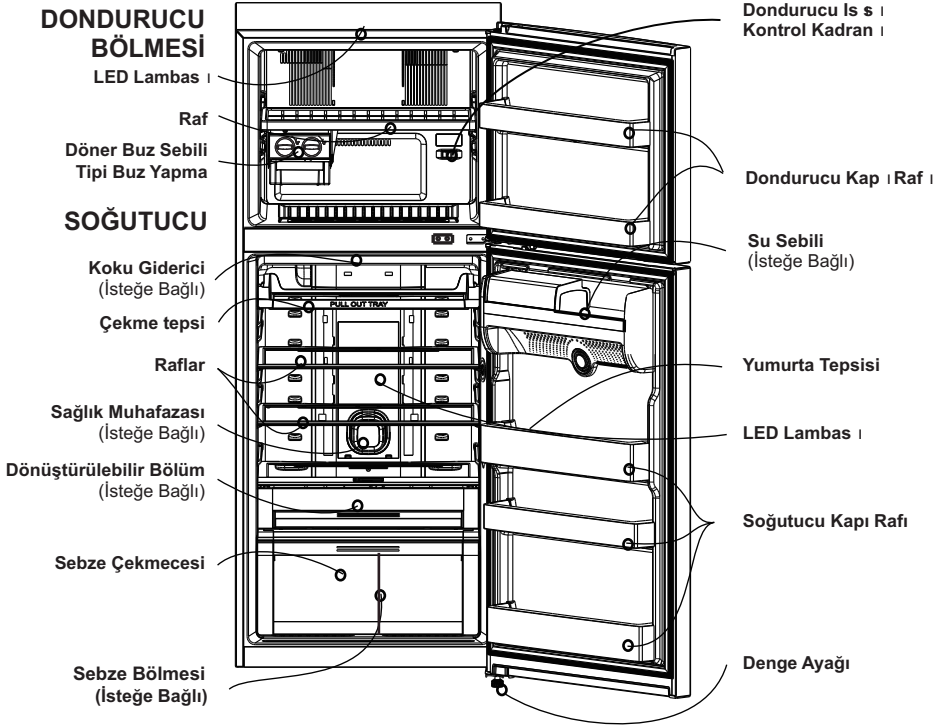

NOT


- Bu kılavuz birçok farklı model kapsar. Satın aldığınız soğutucu yukarıda gösterilen özelliklerden tümüne ya da bazılarına sahip olabilir.
- Enerji tasarrufu için en uygun kullanım sepet, çekmece ve raflar gibi iç aksamın üretici tarafından belirtilen yerlere yerleştirilmesidir.
- Sürekli gelişim nedeniyle, model özellikleri değişiklik gösterebilir.

ENERJİ TASARRUFU ÖNERİLERİ


- Lütfen kapı uzun süre açık bırakmayınız, kapıyi en kısa sürede kapatınız.
- Fazla yiyecek konulması tavsiye edilmez; soğuk havanın serbestçe dolaşabilmesi için yeterli alan bırakılmalıdır.
- Yerleştirmeden önce, sıcak yiyeceklerin soğumasına izin verin. Sıcak yiyeceklerin soğutucuya-dondurucuya konulması diğer yiyecekleri etkileyebilir ve daha yüksek enerji tüketimine neden olabilir.
- Hava çökşünü yiyeceklerle kapamayınız. Soğuk hava dolaşımı soğutucu-dondurucu sisteminin sabit tutar.
- Kapıyı sık sık açmayınız. Kapıyı açmak sıcak havanın soğutucu-dondurucuya girmesine yol açarak sistemin artmasına neden olur.

İÇ PARÇA (Fabrika Önerilen yerler)

GL-*562/
GL-*612

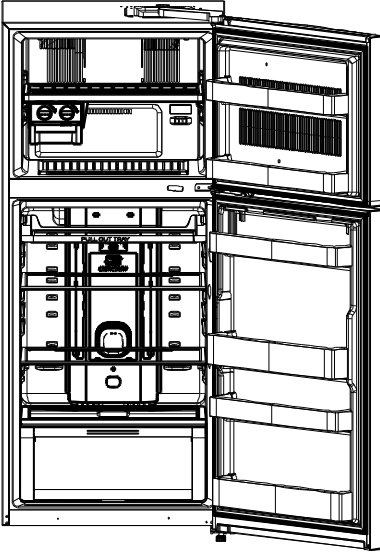

GL-*492

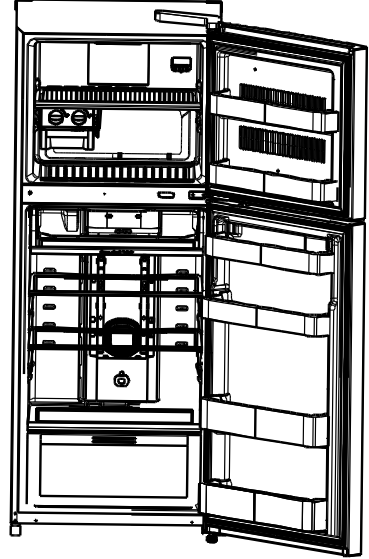

NOT

- Bu k lavuz birçok farklı modeli kapsar. Sat ın ald ı ın z soğutucu yukarı da gösterilen özelliklerden tümüne ya da bazı lar na sahip olabilir.
- Enerji tasarrufu için en uygun kullan ım sepet, çekmece ve raflar gibi iç aksam ın üretici taraf ından belirtilen yerlere yerleştirilmesidir.
- Sürekli gelişim nedeniyle, model özellikleri değişiklik gösterebilir.

ENERJİ TASARRUFU ÖNERİLERİ

- Lütfen kap y ı uzun süre aç k b ırakmay ın, kap y ı ı en k ı sa sürede kapat ın.
- Fazla yiyecek konulmas ı tavsiye edilmez; soğuk havan ın serbestçe dolaşabilmesi için yeterli alan b ırak ılmalıdır.
- Yerleştirmeden önce, sıcak yiyeceklerin soğumasına izin verin. Sıcak yiyeceklerin soğutucuya-dondurucuya konulmas ı diğer yiyecekleri etkileyebilir ve daha yüksek enerji tüketimine neden olabilir.
- Hava ç ık ışı n ı yiyeceklerle kapamay ın. Soğuk hava dolaş ım ı soğutucu-dondurucu ş ı ş ın ı sabit tutar.
- Kap y ı ı s k s k açmay ın. Kap y ı ı açmak s ıcak havan ın soğutucu-dondurucuya girmesine yol açarak ş ı n ın artmas ına neden olur.

ÇALIŞTIRMA

BAŞLATMA

Soğutucunuz ilk olarak kurulunca, taze ya da dondurulmuş yiyeceklerle doldurmadan önce normal çalışmaya başlaması için (7-8 saat) dengelenmesine izin verin.

Çalışmaya kesilirse, yeniden çalıştırmadan önce 5 dakika bekleyin.

ISIYI AYARLAMADAN ÖNCE

- Soğutucunun ısısı, oda ısısındaki değişikliklerden bağımsız olarak sabit tutulur. Bir kez belirlendikten sonra, çok gerekli olmadıkça ayarlar (soğutucu ve dondurucu bölmeleri kumandaları) değiştirilmemesi tavsiye edilir.
- Bu soğutucuda soğutucu bölümü ve dondurucu bölümü için birer ısı kontrol düğmesi bulunmaktadır.
- Soğutucu bölümü için ısı kumanda düğmesinin fabrika ayarı '3' 'dir.
- Dondurucu bölümü için ısı kumanda kadranı fabrika ayarı '1' '3' dir.
- Soğutucuda, soğutma bölümünün içinde bir ısı sensörü bulunur. Kompresörü gereğine göre çalıştırır ya da durdurur.

KAPAK ALARMI



Soğutucu ya da dondurucunun kapısı 1 dakika boyunca açık kalırsa, üç kez bir alarm çalar. Kapı açık kalırsa, alarm 30 saniyede bir tekrarlar.

KENDİ KENDİNE TEST

- Soğutucunun entegre bir tanı özelliği içerir. Bazı alanlarda bir arıza olduğunda, onarım teknisyenine yardımcı olacak bir hata kodu sergiler. Hata kodu görüntülenirken diğer kumanda ve görüntü özellikleri çalışmaz.
- Bir hata kodu görüntülendiği zaman servis merkezini arayın. Güç kablosunu prizden çekmeyin.

DONDURUCU BÖLMESİ İÇİN KUMANDALAR

- Kumanda ayarı ne denli yüksek olursa, dondurucu bölmenin soğukluğunda düşüş olacaktır.
- Soğutucu ve dondurucu bölmelerinin ısısı sabit miktarda soğuk havayla kontrol edildiği için, dondurucu bölümü soğudukça soğutucu bölümü ısınacaktır.
- Dondurucu bölümü birkaç ayarında yeterince soğuk değilse, dondurucu ayarını "High" (Yüksek) konumuna (4~7/8) getirin.

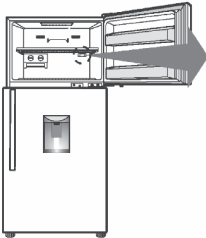

* Dondurucu bölümü içinde Dondurucu kumanda etiketine bakın

ÇALIŞTIRMA

SOĞUTUCU BÖLMESİ İÇİN KUMANDALAR

□ DAHİLİ KUMANDA MODELİ İÇİN



Başvuru Isısı Kumanda Butonu

Soğutucu bölümü ısı kumanda butonu için varsayılan ayar **NORMAL**.


Soğutucu ısını denetlemek için, lütfen **REF. TEMP CONTROL** butonuna basın.

Butona her bastığınızda, LED ışık verecektir. Isı **MIN** ile **MAX** soğutma arasında 7 adımda ayarlanır. (**MIN**= en yüksek, **MAX**= en düşük ısı)


□ HARİCİ KUMANDA MODELİ İÇİN

Soğutucunuzun modeline bağlı olarak, grafik ekran değişiklik gösterebilir.

• Ekran 'A'

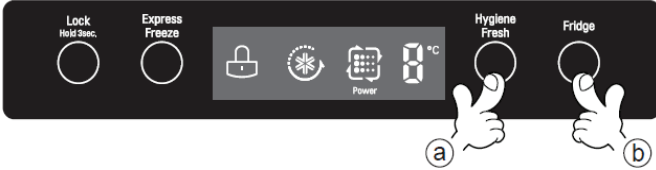

• Ekran 'B'

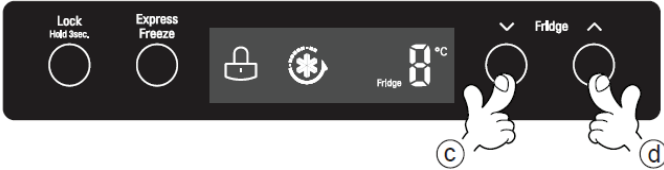

- Soğutucu ısını kontrol etmek için 'FRIDGE' butonuna basın.
- Butona her bastığınızda, LED ışık verecektir.
- Hijyen motorunu çalıştırmak için "Hijyen Taze" butonuna basın (İsteğe Bağlı).
- LED ışıkta görüntülenen rakam, soğutucu bölümünün ısını belirtir.
- İstenen ayar noktasını '0°C' ile '6°C' arasında, yedi aşamada belirleyebilirsiniz.

• Ekran 'A'

- (b) Butonuna basarsanız, soğutucu ısı 1°C düşer.
- (a) Butonuna basarsanız, 1) Hygiene fresh motoru çalışır.

• Ekran 'B'

- (c) Butonuna basarsanız, soğutucu ısı 1°C düşer.
- (d) Butonuna basarsanız, soğutucu ısı 1°C yükselir.


ÇALIŞTIRMA

EKSPRES DONDURMA

- Soğutucu ilk kez AÇIK konuma getirildiği zaman, EKSPRES DONDURUCU özelliği AÇIK konuma getirilebilir. Soğutucu ısısını hızla düşürmek için, kompresör ve dolaşım fanı azami soğutma kapasitesinde çalışır. Otomatik olarak durur.



Ekran 'A'



Ekran 'B'

- Soğutucu içine sıcak yiyecek yerleştirilirse, EKSPRES DONDURMA kumanda panosu üzerindeki butonla devreye al nabilir. EKSPRES DONDURMA ı belirlenmiş bir düzeye düştüğü zaman otomatik olarak kapanacağı gibi, EKSPRES DONDURMA butonuna basarak, elle de durdurulabilir.

ÇOCUK KİLİDİ (İSTEĞE BAĞLI)

• ÇOCUK KİLİDİ

Çocuk kilidini etkinleştirmek için lütfen kilit butonuna bas p 3 saniye tutun. Kilitlendiğinde Kilit LED'i yanar ve diğer butonlar çalışmaz. Kilidi açmak için ÇOCUK KİLİDİ butonuna yine üç saniye bas ı ı tutun.

Not: Soğutucu devre dışı bırakıldığında, bu özelliğin kilidi kendiliğinden açılır.




Ekran 'A'



Ekran 'B'

YEŞİL İYON KAPI SOĞUTMA (İSTEĞE BAĞLI)



- Kanal kapağındaki anyon kaplama havayı arındırır ve soğutucudaki yiyeceklerin daha uzun zaman taze kalmalarını sağlar.
- Temizlik sı ras ında soğuk hava kanalları na su veya yabancı maddelerin girmesi, cihaz ın etkinliğini düşürür. Dahası, contanın hasar görmesi durumunda, soğuk hava kaçağı nedeniyle cihazın etkinliği düşer.

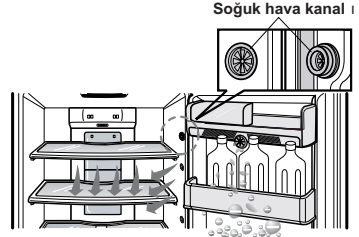

BUZLUK (İsteğe bağlı)

- Buz küplerini haz ırlamak için buz tepsisini suyla doldurup yerine yerleştirin.
- Buz küplerini ç ıkarmak için, tepsinin kolunu tutun ve çekerek usulca döndürün.

Buz Tepsileri
Buz Küpü Kutusu

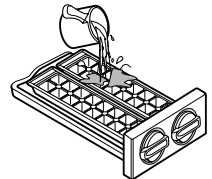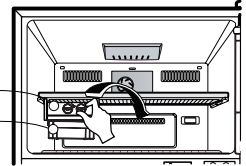


⚠ UYARI

- Sudan başka bir şey kullanmayın.
- Çizgiye kadar su doldurun.

ÇALIŞTIRMA

DÖNÜŞTÜRÜLEBİLİR KÖŞE (İSTEĞE BAĞLI)

- Kapı açıldığında zaman, daha sıcak hava taze bölmeyi etkileyemez. Böylelikle bu bölgede daha taze yiyecekler saklayabilirsiniz.
- Eklenmiş dönüştürülebilir bölmenin yerine oturtulması gerekir. Kapı açıldığında rolünü yerine getiremez.

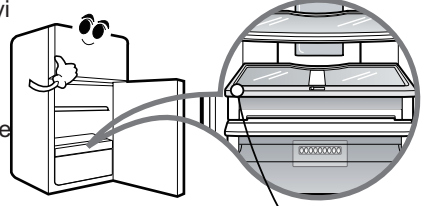

Dönüştürülebilir Köşe
(İsteğe Bağlı)


Kullanım

- Sebze Köşesi veya Taze Köşe bir düğme kontrolüyle kullanılabilir.
- Yiyecekleri yerleştirmeden önce düğmenin konumunu denetleyin.
- Düğmeyi orta noktaya getirmeyin.

SEBZE ÇEKMECESİ


Sihirli Sebzelikler (İsteğe Bağlı)

- Sihirli Sebzelikler çekmece içini nemli tutmanıza izin vererek daha taze tatlı meyve ve sebze sağlar.
- Nemi etkin şekilde muhafaza ya da tahliye etmek için çekmecenin alt tarafında bir kafes bulunur.
- Nemi korumak için sızdırmaz yapar.

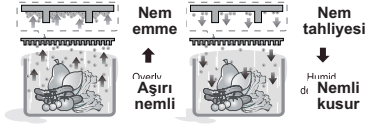

Sebze Bölmesi (İsteğe Bağlı)

- Şekilde gösterildiği gibi sebze kutusunun arka bölümüne takarak bölmeyi tespit edin.



Bölme
(İsteğe Bağlı)

ÇALIŞTIRMA


SU SEBİLİ (İSTEĞE BAĞLI)

NOT


- Su tank ıyerine yerleştirildikten sonra içine su dökün.
- Kullan ımad ıya da gerektiđi zaman temizlemek için su tank ın ıç ıkard ın.
- Su tank ıdoldurulduktan sonra yerine yerleştirilmezse, vanadan su s zabilir.

• Su tank na su dökmek

1. Kapatma kapađını açın ve tanka su dökün.

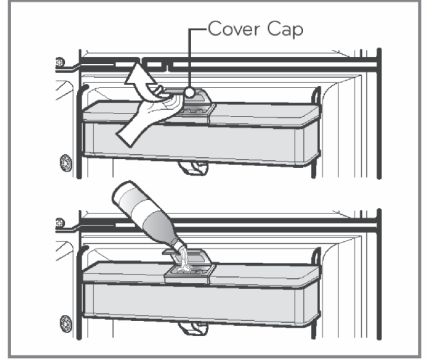


2. Kapatma kapađını kapatın.

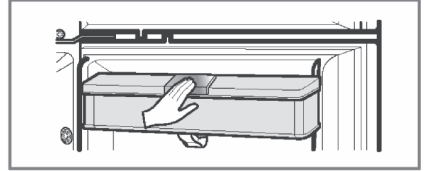

3. Su tank ı saklama kapasitesini arttırmak için istendiđinde çıkarılabilecek bir parçadır. Su tank ın ıç ıkard ıktan ve deliđi bir t ıpayla kapad ıktan sonra üst sepeti kullanabilirsiniz.

T ıpaya yumurta tepsisiyle birlikte teslim edilir.

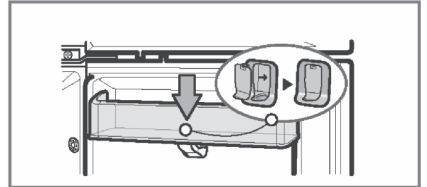

Dikkat

Sudan başka hiçbir şey kullanmayın; sıcak suyun bile su tank na dökülmeden önce soğutulması gerekir. Belirtilen seviyenin üzerinde doldurmayın.

• İçme Suyu

1. Fincanla sebil koluna bast ırın.
2. Sebil kolu bast ırıldıđında su akar. Fincan çekildiđinde kol başlangıçtaki konumuna döner ve su akışı kesilir



AKILLI TANI

(Sadece Seçili Dış Micom modeller için)



Akıllı Tanı Özelliği

Soğutucu arızalı çalıştığında ya da bozulduğunda servis merkeziyle temas kurmak için bu özelliği kullanın. Normal zamanlarda değil, sadece danışmanla temasa geçmek için kullanın.


İşlevin Kullanılması

1. Soğutucunun tüm kapaklarını kapatın, sağlam kilitlenmesi için görüntü kilit düğmesine basıp tutun. Görüntü zaten kilitli konumdaysa, kilidi yeniden etkinleştirmek için kilit düğmesine basıp tutun ve kilitli konuma gelmesi için kilit düğmesini basıp tutun.



3. Tüm soğutucu ve dondurucu bölüm kapaklarını açın ve telefonu sağ üst tarafın yakınındaki hoparlör deliğine yaklaştırın.

Telefonun konuşma tarafının (mikrofon) hoparlör deliğine dönük olmasını sağlayın.

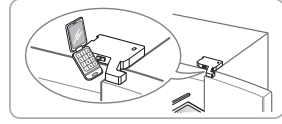


4. Veri aktarım sırasında telefonu uzaklaştırmayın.

Akıllı Tanı amaçlı veri aktarım sırasında, telefonu sağ üst taraftaki hoparlör deliğine yakın tutup bekleyin. Veri aktarım için kalan süre görüntü ekranında gösterilecektir.


⚠ DİKKAT

Aktarım sesi rahatsız edici olabilir. Tanı güvenilirliği için, ses durana kadar telefonu uzaklaştırmayın.

2. Soğutucu ısı düğmesine basın 3 saniye veya daha uzun basılı tutun. (Tüm görüntü ekranları kapanacak ve bir süre sonra soğutucu ısı göstergesi bölümünde 3 görüntülenecektir.)



<Hijyen Taze Filtreli Model>



<Hijyen Taze Filtresiz Model>

5. Veri aktarım tamamlandıktan sonra, danışmanın Akıllı Tanı ile ilgili yapacağı açıklamayı dinleyin.

Veri aktarımı ve tamamlanıp, veri aktarımın tamamlandığını belirtir görüntü belirince soğutucu otomatik olarak devre dışı kalacak, birkaç saniye sonra yeniden çalışacaktır.

Danışmanın tanı incelemesiyle ilgili açıklamaları dinleyin ve talimata uyun.

Unutmayın!

- Bölgesel çağrı kalitelerindeki farklar akıllı tanı özelliğini etkileyebilir.
- Ev telefonunuzu kullanıyorsanız, daha iyi iletişim performansını çok daha iyi hizmete yol açar.
- Çağrı kalitesinde sorunlar nedeniyle akıllı tanı veri aktarımı akıcı olmayabilir; böylesi durumlarda akıllı tanı hizmetinde güçlük görülebilir.

AKILLI TEŞHİS

(Sadece Seçilen İç Micom modeller için)


Akıllı teşhis özelliği:



Soğutucu arızalı çalıştığında ya da bozulduğunda servis merkeziyle temas kurmak için bu özelliği kullanın. Normal zamanlarda değil, sadece danışmanla temasa geçmek için kullanın.


İşlevin Kullanılması

1. Soğutucunun tüm kapılarını açın
2. Soğutucu kapısı açık detektör düğmesine şekildeki gibi 5 kez basın; bölme içindeki **ş k yan p** sönmeye başlayacaktır.

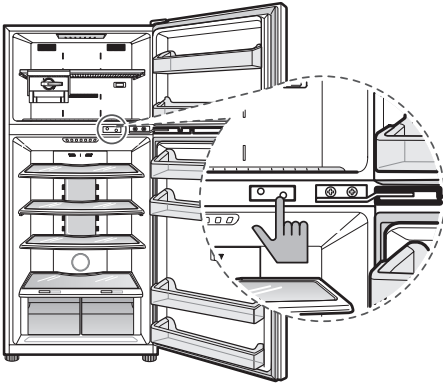

3. Telefonu sağ üst köşedeki hoparlör deliğine yaklaştırın.

Telefonun konuşma tarafının (mikrofon) hoparlör deliğine dönük olmasını sağlayın.

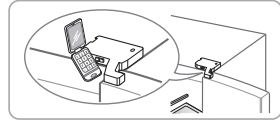

4. Veri aktarım sırasında telefonu uzaklaştırmayın.

Akılın tanıma amaçlı veri aktarım sırasında, telefonu sağ üst taraftaki hoparlör deliğine yakın tutup bekleyin.

⚠ DİKKAT

Aktarım sesi rahatsız edici olabilir. Tanımın güvenilirliği için, ses durana kadar telefonu uzaklaştırmayın.

5. Veri aktarım tamamlandıktan sonra, danışmanınız akılınızı tanıyla ilgili yapacağı açıklamayı dinleyin.

Veri aktarımı ve tamamlanıp, veri aktarımın tamamlandığını belirten görüntü belirsiz soğutucu otomatik olarak devre dışı kalacak, birkaç saniye sonra yeniden çalışacaktır.

Danışmanın tanımı incelemesiyle ilgili açıklamaları dinleyin ve talimata uyun.

Unutmayın!

- Bölgesel çağrı kalitelerindeki farklar akıllı tanı özelliğini etkileyebilir.
- Ev telefonunuzu kullanıyorsanız, daha iyi iletişim performansı çok daha iyi hizmete yol açar.
- Çağrı kalitesinde sorunlar nedeniyle akıllı teşhis veri aktarımı akıcı olmayabilir; böylesi durumlarda akıllı teşhis hizmetinde güçlük görülebilir.

İŞLEMLER

HYGIENE FRESH


⚠ İKAZ

Ürünü kurmadan veya kullanmadan önce, ürünü kesinlikle amacına uygun olarak kullanmak için kullanım kılavuzunu dikkatlice okuyun. Bu HYGIENE FRESH filtresi buzdolabının içindeki virüs veya bakterilerin giderilmesine yönelik anti-bakteriyel işleve ve kokuyu gidermek için deodorant işlevine sahiptir. İşlev yetkili kurumlar tarafından (**Intertek**) test edilmiş ve onaylanmıştır.

• Kullanım moduna geçiş

Kullanım moduna geçiş.

- HYGIENE FRESH filtresini kullanmak için, kapının ön tarafında bulunan gösterge panelinde tuşuna basın ve AUTO veya POWER moduna geçirin.
(Tuşa bastığınızda, HYGIENE FRESH filtresi OFF → AUTO → POWER → OFF döngüsünü izleyecektir.)

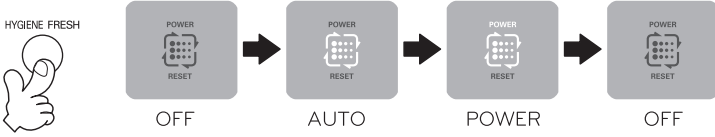

⚠ İKAZ

Kullanıcı AUTO veya POWER moduna geçerse, filtrenin etrafındaki LED de açılır. Filtrenin etrafındaki LED'in de açılıp açılmadığını kontrol etmek için kapıyı açın. Fanın içine parmağınızı veya yabancı maddeler sokmayın. Yaralanmaya veya arızaya neden olabilir.

⚠ İKAZ

- Hijyen Taze filtresini suyla yıkamayın; suyla yıkamak arızaya neden olabilir.
- Bu filtre bütün bakteri ve virüslere karşı etkili olmayabilir.
- Bu filtre soğutucu içindeki yiyeceklerde bulunmayan bakterileri uzaklaştırmakta etkilidir.


Çalıştırma

BUZ ÇÖZME

- Buz çözme otomatik olarak gerçekleşir.
- Çözülen buzun suyu soğutucunun arka tarafındaki buharlaştırma tepsisine akar ve burada otomatik olarak buharlaşır.

KOKU GİDERİCİ (İSTEĞE BAĞLI)

- Taze yiyecek bölümündeki rahatsız edici gıda kokuları kullanıcılara veya yiyeceklerle zarar vermeden uzaklaştırılır.

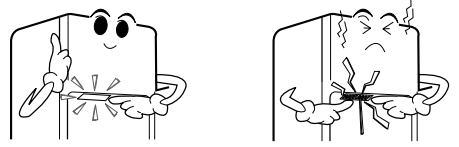


Kullanım

- Koku Giderici yiyecek bölümünün devridaim havası için soğutma havası girişiinde yer aldığını için, hiçbir müdahale gerekmez.
- Koku Giderici zarar görebileceği için, soğutma havası girişini keskin sivri uçlu bir cisimle açmaya çalışmayınız.
- Koku başka yiyeceklerle sirayet edebileceği için, kokulu bir yiyeceği saklamadan önce sarıya da kapaklı bir kaba yerleştirin


Koku Gidericinin Yeniden Kullanılması

- Koku Giderici canlandırılabilir ve yeniden kullanılabilir.
- Koku Gidericiyi soğutucudan ayırın.
- Nem veya kötü kokuları gidermek için bir saç kurutma makinesi kullanın ve kötü kokuları morötesi ışınlarla ayrıştırmak için güneş ışığı altında oksitlendirin.

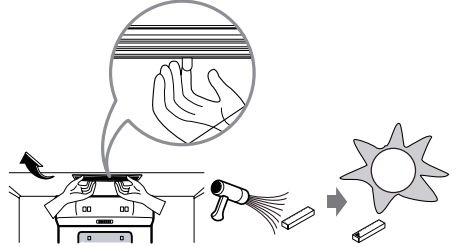


SÜT ÜRÜNLERİ KÖŞESİ (İSTEĞE BAĞLI)

- Çıkartılabilir kolu sayesinde Süt Ürünleri köşeyi sağa ya da sola hareket ettirebilirsiniz.

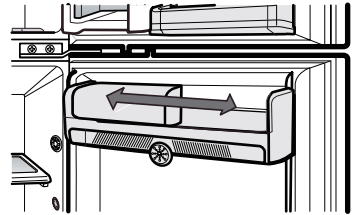

Kapağın temizlik için çıkarılması

- Kapağı sepetin merkezine doğru kaydırın ve deliği sepetin iki yanıyla hizalayın.
- Hizalamadan sonra sepeti arkadan öne çekin ve her iki elle dışarı çıkarın.

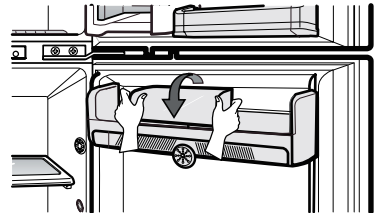

GIDA DEPOLAMA İÇİN TAVSİYELER

YIYECEKLERİN SAKLANMASI

- Taze yiyecekleri soğutucu bölümünde saklayın. Tazeliğin ve lezzetin korunmasında yiyeceklerin nasıl dondurulduğu ve çözülmesi önemli bir etkidir.
- Muz, ananas ve kavun gibi, düşük ısıda kolayca bozulacak yiyecekleri saklamayın.
- Saklamadan önce sıcak yiyeceklerin soğumasına izin verin. Sıcak yiyeceklerin soğutucuya yerleştirilmesi diğer yiyecekleri bozabilir ve daha yüksek enerji tüketimine yol açabilir!
- Yiyecekleri saklarken, vinil bezle sarı ya da kapaklı bir kap içine yerleştirin. Böylelikle nemin buharlaşmasını önler ve yiyeceğin tadını ve besin değerini korumasına yardım edersiniz. Bu yöntem bir yiyecekteki diğerine tat ve koku geçmesini de önleyecektir.
- Hava çalkışını yiyeceklerle kapamayın. Soğutulmuş havanın düzgünce dolaşmasını soğutucunun sıcaklıklarını sabit tutar.
- Kapıyı sık sık açmayın. Kapıyı açmanın sıcak havanın soğutucuya girmesine ve sıcaklığın yükselmesine sebep olur.

DONDURUCU BÖLMESİ

- Şişeleri dondurucu bölümünde tutmayın - donduklarında kırılabilir.
- Çözülen yiyecekleri yeniden dondurmayın. Yeniden dondurmak, tat ve besin kaybına neden olur.
- Dondurma gibi dondurulmuş ürünleri uzun süre saklarken, kapı rafına değil, dondurucu rafına yerleştirin.
- Dondurmak üzere yiyecek yerleştirmek: Yeni giren yiyeceklerin dondurulmak üzere aşağıdaki konuma yerleştirilmesi tavsiye edilir:




Yeni Giren Yiyecekler

- Dondurucu Kapı Sepeti (**) -12°C'de, dondurulmuş gıdaların kısa süre saklanması için uygun bir bölmedir (isteğe bağlı)

SOĞUTUCU BÖLMESİ

- Nemli yiyecekleri soğutucunun iç raflarının dibine yerleştirmekten kaçının; bu yiyecekler soğuk havayla doğrudan temas sonucu donabilir. Bu durumdan kaçınmak için yiyecekleri kapaklı bir kapta saklamak daha uygun olur.
- Özellikle sebze ve meyve gibi nemli yiyeceklerin yiyecek saklama bölümünde saklanması tavsiye edilir. Soğutucunun bir rafını yerleştirmek gerekirse, soğutulmuş havayla temas sonucu donmasını önlemek için soğutucunun arka duvarından uzağa, kapıya yakın bir yere yerleştirin.
- Soğutmadan önce yiyecekleri daima temizleyin. Sebzeler ve meyveler yıkanmalı ve silinmelidir ve paketlenmiş yiyecekler silinerek yandaki yiyeceğin bozulması önlenmelidir.
- Yumurtaları saklama rafına yerleştirirken, taze olduklarından emin olun, daha uzun süre taze kalmaları için dik olarak koyun.

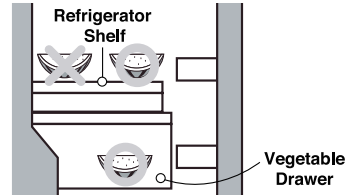

TEMİZLEME

İstenmeyen kokuları önlemek için soğutucunuzun temiz tutulması önemlidir. Asidite oluşturacağından ve plastik yüzeyleri kirleteceğinden sıçrayan yiyecekler derhal silinmelidir.

Hiçbir yüzeyde metal bulaşık ovma süngeri, sert ve aşındırıcı temizleyiciler ya da güçlü alkali eriyikler kullanmay ın.

Temizlemeden önce, nemli cisimlerin çok soğuk yüzeylere yapışacağını unutmayın. Islak ya da nemli ellerle donmuş yüzeylere donunmay ın.

DIŞ KISIM - Soğutucunuzun dayanıklı dış kısm ın ı temizlemek için hafif sabunlu ılık sulu eriyikler kullan ın. Temiz bir nemli bez ile temizleyin ve ardından kurutun.

İÇ KISIM - Soğutucunun içinin ve iç aksam ın ı düzenli olarak temizlenmesi tavsiye edilir. Soğutucunuzun dayanıklı dış kısm ın ı temizlemek için hafif sabunlu ılık sulu eriyikler kullan ın. Temiz bir nemli bez ile temizleyin ve ardından kurutun.

İÇ AKSAM - Soğutucunuzun dayanıklı iç aksam ın ı temizlemek bölüm raflar ın ı saklama tepsilerini sabun ve bulaşık eriyiğiyle temizleyin. Temiz bir nemli bez ile temizleyin ve ardından kurutun.

UYARI

Temizlikten önce mutlaka güç kablosunu duvar prizinden çıkar ın.

Suyun ya da sıvılar ın elektrikli parçalara girmesini ve elektrik çarpmas ına neden olmas ın ı önlemek için bir sünger ya da bez kullanarak aşırı nemi silin.

Tutuşabilir ya da zehirli temizlik sıvıları kullanmay ın.


- Temizlikte dikkat edilecek - Kullan ılmayacak maddeler: Yüzey temizleme maddeleri, otomobil cılas ı pas önleyici, her türlü yağ, benzin, asit ve cila.
- Yumuşak deterjanlar, bulaşık yıkama eriyikleri ve sabunlu su kullan ılabilir.
- Özensiz kullan ım renk kayb ına yol açabilir.

TEMİZLEME

SU SEBİLİ

Izgara-

Temiz, nemli bir bezle silin, daha sonra kuru bir bezle kurulayın.




Su Tank ı

1. Su Doldurmak

Doldurmak için su tank ının çıkarılması gerekmez (doldurmak için su tank ının kapağı açmak yeterlidir.)

NOT

- Kapıyı kapamadan önce, kapağı kapatıp sıkıca kenetleyin.
- Şeker veya karbonat içeren sıvılar kullanmayın.




2. Söküm

Bir kenardan ve dibinden tutarak su tank ını kaldırın.


NOT

Su tank ını sökmeden önce, içindeki tüm suyu sebilden tahliye edin.




3. Montaj

Su tank ını herhangi bir nedenle yerinden çekmişse, tekrar orijinal yerine takın. Vananın kapıdaki deliğe gerektiği gibi takılıp takılmadığını kontrol edin. Yerleştirildikten sonra aşağıya bastırın ve tank ın hizada olup olmadığını kontrol edin.




Su Tank ı


1. Tank kapağını çıkarın.

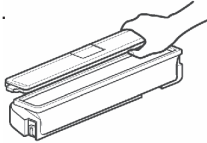

2. Kapağın içini ve dışını bulaşık deterjanıyla temizleyin ve musluk suyuyla gerektiği gibi çalkalayın. Bir bezle kurutun.



3. Tank ın içini ve dışını bulaşık deterjanıyla temizleyin ve musluk suyuyla gerektiği gibi çalkalayın. Bir bezle kurutun.

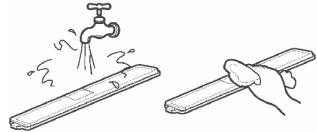

4. Kapağı tanka takın ve mevcut kenetlerle sıkıca kenetleyin, daha sonra soğutucu kapısına takın.

GENEL BİLGİ

TATİL ZAMANI

Ortalama uzunlukta tatillerde, muhtemelen soğutucuyu çalışır durumda bırakmayı tercih edeceksiniz.

Uzun ömür için dondurulabilir ürünleri dondurucuya yerleştirin.

Daha uzun bir süre için gitmeyi planlıyorsanız, tüm yiyecekleri çıkarın, güç kablosunu prizden çıkarın, soğutucunun içini gerektiği gibi temizleyin ve koku oluşmasını önlemek için tüm kapıları AÇIK bırakın.

ELEKTRİK KESİNTİSİ

Genellikle bir veya iki saat içinde düzelen elektrik kesintileri soğutucunuzdaki ısıyı etkilemez.

Ne var ki, elektrik kesikken kapı açması kışın en azı indirmelisiniz.

Daha uzun süreli elektrik kesintileri sırasında, donmuş paketlerinizin üzerine bir kuru buz bloku yerleştirin.

TAŞINMA HALİNDE


Soğutucu içindeki tüm serbest parçaları çıkarın ya da sağlam bir şekilde tespit edin. Yükseklik ayarlamada vidaları hasar vermemek için (ler), hepsini tabana girecek şekilde döndürün.

YOĞUNLAŞMA ÖNLEYİCİ BORU

Soğutucu kabininin dış duvarı özellikle montaj sonrası zaman zaman ıslanabilir. Endişelenmeyin.

Bu durum, dış kabin duvarındaki "terlemeyi" önlemek için sık sık soğutucu pompalayan yoğunlaşma önleyici borudan kaynaklanır.

Yoğuşma Önleyici Boru

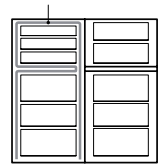

Dikkat

Elektrik Çarpma Tehlikesi

Yanlış bir ampulü değiştirmeden önce, ya soğutucuyu prizden çıkarın ya da cırcıyan iletken sigortadan veya devre kesiciden kesin.

NOT: Kumanda yalıtımlı KAPALI konumuna getirmek için devresindeki kumanda kesmez.

ÖNEMLİ UYARILAR

UZATMA KABLOSU KULLANMAYIN

Mümkünse ve diğer cihazların veya hane aydınlatması için aşırı yükünden ve cereyan kesilmesinden korumak için soğutucuyu kendine özel bir prize takın.

BESLEME PRİZİNE ERİŞİM

Soğutucu-dondurucu, bir kaza anında hızla çıkarılabilmesi için besleme prizine yakın bir yere yerleştirilmelidir.

BESLEME KABLOSUNU DEĞİŞTİRME

Besleme kablosu hasar görmüşse, olası bir tehlikeyi önlemek için üretici servis elemanı veya benzer niteliklere sahip bir kişi tarafından değiştirilmelidir.

TOPRAKLAMA HAKKINDA


Bir elektrik kaza devresi halinde, topraklama elektrik akımına bir kaç saniye sağlayarak elektrik şoku tehlikesini azaltır.

Bu cihaz, olası elektrik çarpması durumlarını önlemek için topraklanmalıdır.

Topraklı prizden yanlış kullanılması elektrik çarpmasına neden olabilir. Nitelikli bir elektrik teknikeri ya da servis mühendisi ile görüşerek topraklama talimatlarını tam olarak anlaşıldığından ve cihazın doğru topraklanmış olduğundan emin olun.

GÜÇ KABLOSUNUN UZUNLUĞUNU DEĞİŞTİRMİYİN

Elektrik çarpmasına veya yangına neden olabilir.

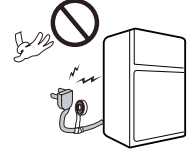

ÇOK TEHLİKELİ BİR ÇEKİCİLİK

Boş bir soğutucu çocuklar için tehlikeli bir çekicilik sunabilir. Zararsız olmasının sağlanması için ya kullanmadığınız cihazın kontrolleri mandalları kapakları ya da bütün kapakların sökünü veya başka önlemler alın.

**Bu cihazın topraklanması gerekmektedir.
BEKLEMİYİN! ŞİMDİ YAPIN!**

**Soğutucunun içine tutuşabilir maddeler,
patlayıcılar veya kimyasallar
yerleştirmeyin.**

Eski cihazınızın atılması

Bu cihaz sıvı (soğutucu, yağ) içermekte olup, yeniden kullanılabılır ve/veya geri dönüştürülebilir parçalardan ve malzemelerden yapılmıştır.

Tüm önemli malzemenin toplama merkezlerine gönderilmesi ve işlemeyen (dönüştürmeden) sonra yeniden kullanılması gerekir. Malzemenin teslim alınması için, lütfen yerel kurumlarla temasa geçin.

"Bu cihaz, güvenliklerinden sorumlu kişi tarafından kullanım ile ilgili bilgi verilmemesi veya gözetim sağlanmaması durumunda (çocuklar dahil), fiziksel, duygusal ya da zihinsel yetenekleri kısıtlı kişiler

Cihazla oynamamaları sağlama amacıyla, küçük çocukların gözetim altında tutulmaları gerekir."

SERVİS ÇAĞIRMADAN ÖNCE

SERVİS ÇAĞRILARI ÇOĞU ZAMAN GEREKSİZ OLABİLİR!

SOĞUTUCUNUZUN DÜZGÜN ÇALIŞMADIĞINI DÜŞÜNÜYORSANIZ, ÖNCE OLASI NEDENLERİ KONTROL EDİN:

SORUN	OLASI NEDENLER
SOĞUTUCU ÇALIŞMIYOR	Evde bir sigorta ya da bir devre kesici atmış olabilir mi? Güç fişi gevşemiş ya da duvardaki prizden çıkmış mı?
SOĞUTUCU VEYA DONDURUCU BÖLMESİ ISISI ÇOK YÜKSEK	Isı doğru değere göre ayarlanmamış. Cihaz duvara ya da güneşli kaynağına fazla yakın yerleştirilmiş. Sadece sıcak hava - kapılarının sık açılması. Kapı uzun zaman açık bırakılmış. Soğutucuda yüksek miktarda yiyecek bulunuyor.
ANORMAL GÜRÜLTÜ(LER)	Soğutucu zayıf ya da dengesiz bir yüzeye yerleştirilmiş ya da ayar vidalarının ayarlanması gerekiyor. Soğutucunun arka tarafına gereksiz cisimler yerleştirilmiş olabilir.
SOĞUTUCUDA KOKU VAR	Güçlü kokulara sahip yiyeceklerin sıkıca kapatılması ya da sarmalanması gerekir. Soğutucu içinin temizlenmesi gerekiyor.
KABİN YÜZEYİNDE NEM OLUŞUYOR	Rutubetin yüksek olduğu dönemlerde olağandışı değil. Kapı aralıktır bırakılmış olabilir.

ÖZELLİKLER

Model			GL-B492G***	GL-M492G***
Üretici Kategori			LG Electronics Buzdolab ıDondurucu	
Kapasite (l)	ISO Brüt	Toplam	422	422
		Dondurucu	131	131
		İki yıldızlı bölüm	0	0
		Buzdolab ı	291	291
	ISO Kapasitesi	Toplam	393	388
		Dondurucu	108	108
		İki yıldızlı bölüm	0	0
		Buzdolab ı	285	280
Ağırlık (kg)	Net / Ambalaj		76/81	76/81
	Genişlik X Yükseklik	Ürün	680 x 1725 x 725	
	X Derinlik	Ambalaj	744 x 1825 x 739	
Serbest duruş / Yerleşik			Serbest duruş	
Buz çözme sistemi			Donmaz	
Ses Gücü (dB)			38	
Enerji Sınıfı			A+	
Enerji Tüketimi (kW saat/yıl)			275	
Sıcaklık artışı zamanı (saat)			13.4	
Dondurma Kapasitesi (kg/24 saat)			4.8	
Soğutucu			R600a	
Yıldız Değeri			* ** *	
İklim Sınıfı			N-T	

? İklim Sınıfı : N - T (Bu cihaz 16°C ile 43°C arasındaki ortam sıcaklığında kullanılmak üzere tasarlanmıştır.)



MFL68488903