

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number :
Serial number :
You can find them on a label on the side of each unit.

Dealer's name :
Date of purchase :

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

WARNING

It can result in serious injury or death when the directions are ignored

CAUTION

It can result in minor injury or product damage when the directions are ignored

WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- Installation MUST conform with local building codes or, in the absence of local codes, Appliance shall be installed in accordance with national wiring regulations.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment mal-function, property damage, personal injury and/or death.

Installation

- Use a standard circuit breaker and fuse conforming with the rating of the air conditioner. Failure to do so may result in electric shock or product failure.
- Contact an authorized service center when you install or relocate the air conditioner. Failure to do so may result in serious injury or product failure.
- Always use a power plug and socket with a ground terminal.Failure to do so may result in electric shock or product failure
- Install the panel and the cover of the control box safely. Failure to do so may result in explosion or fire.
- Install a dedicated electric outlet and circuit breaker before you use the air conditioner. Failure to do so may result in electric shock or product failure.
- Use a standard circuit breaker and fuse conforming with the rating of the air conditioner. Failure to do so may result in electric shock or product failure.
- Do not modify or extend the power cable. If the power cable or cord has scratches or skin peeled off or deteriorated then it must be replaced. It may result in fire or electric shock.
- Be cautious when you unpack or install the air conditioner. Failure to do so may result in serious injury or product failure.
- Contact an authorized service center when you install or relocate the air conditioner. Failure to do so may result in serious injury or product failure.
- Do not install the air conditioner on an unstable surface or where there may be a danger of it falling. It may result in death, serious injury, or product failure.
- Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with appliance.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.

Operation

- Do not let the air conditioner run for a long time when the humidity is very high or when a door or window has been left open. Failure to do so may result in product failure.
- Make sure that the power cord is not pulled or damaged while the air conditioner is operating. Failure to do so may result in fire, electric shock, or product failure.
- Do not place any objects on the power cord. It may result in electric shock or product failure.
- Do not turn on or off the air conditioner by plugging in or unplugging the power plug. It may result in fire or electric shock.
- Do not touch, operate or repair the air conditioner with wet hands. It may result in electric shock or product failure.
- Do not place a heater or other heating appliances near the power cable. It may result in fire, electric shock, or product failure.
- Do not allow water to run into the air conditioner. It may result in explosion or fire.
- Do not leave flammable substances such as gasoline, benzene and thinner near the air conditioner. It may result in explosion or fire.
- Do not use the air conditioner for an extended period of time in a small place without ventilation. Ventilate the place regularly. Failure to do so may result in explosion or fire.
- When there is a gas leak, ventilate sufficiently before using the air conditioner again. Failure to do so may result in explosion or fire.
- Unplug the power plug if there is a noise, smell or smoke coming from the air conditioner. Failure to do so may result in explosion or fire.
- Stop operating and close the window in storm or hurricane.If possible remove the product from the window before hurricane arrives
- Do not touch the electrostatic filter after opening the front grille. Failure to do so may result in electric shock or product failure.
- Contact an authorized service center when the air conditioner is submerged under water due to flooding. Failure to do so may result in explosion or fire.
- Be cautious water could not enter the product
- Make sure to ventilate sufficiently when this air conditioner and a heating appliance such as a heater are used simultaneously. Failure to do so may result in fire, serious injury, or product failure.
- Turn the main power off and unplug the power plug when you clean or repair the air conditioner. Failure to do so may result in death, serious injury, or product failure.
- Unplug the power plug when the air conditioner is not used for an extended period of time. Failure to do so may result in product failure.
- Do not place any objects on the air conditioner. It may result in product failure.

- For inner cleaning, contact an Authorized Service Center or a dealer.
- Do not use harsh detergent that causes corrosion or damage on the unit.
- Harsh detergent may also cause failure of product, fire, or electronic shock.

CAUTION

- Make sure to check if there is a refrigerant leak after you install or repair the air conditioner. Failure to do so may result in product failure.
- Install the drain hose properly for smooth drainage of condensed water. Failure to do so may result in product failure.
- Keep level even when installing the product.
- Install the air conditioner where the noise from the outdoor unit or the exhaust gas will not inconvenience the neighbors. Failure to do so may result in conflict between neighbors.
- When transporting the equipment, there should be at least 2 or more people, or a forklift. It may result in serious injury.
- Do not install the air conditioner where it will be exposed to sea wind (salt spray) directly. It may result in product failure.


Operation

- Do not expose people, animals or plants to the cold or hot wind from the air conditioner. It may result in serious injury.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system. It may result in death, fire or electric shock.
- Do not block the inlet or outlet of air flow. It may result in explosion or product failure.
- Do not use strong cleaning agents or solvents when you clean the air conditioner, or spray water. Use a smooth cloth. It may result in serious injury or product failure.
- Never touch the metal parts of the air conditioner when you remove the air filter. It may result in serious injury or product failure.
- Do not place any objects on the air conditioner. It may result in product failure.
- Always insert the filter securely after cleaning. Clean the filter every two weeks or more often if necessary.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating. It may result in electric shock.
- Do not drink the water drained from the air conditioner. It may result in serious health complications.
- Use a sturdy stool or ladder when you clean, maintain or repair the air conditioner at a height. Failure to do so may result in serious injury or product failure.
- Do not mix the batteries for the remote control with other types of batteries or mix new batteries with used batteries. Failure to do so may result in product failure.
- Do not recharge or disassemble the batteries. Failure to do so may result in explosion, fire or serious injury.
- Stop using the remote control if there is a battery fluid leak. If your cloth or skin is exposed to the battery fluid from a leak, wash it off with clean water. Failure to do so may result in serious injury.
- If you swallow the battery fluid from a leak, wash out the inside of your mouth thoroughly and then consult a doctor. Failure to do so may result in serious health complications.

BEFORE USE

Components

Indoor unit

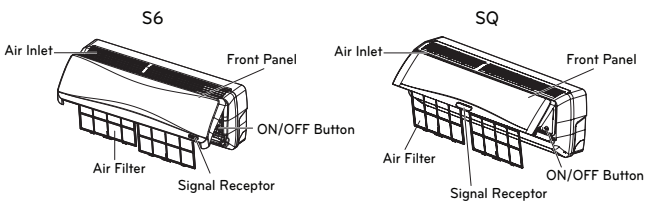


* The feature can be changed according a type of model.

NOTE

The number of operation lamps and their locations may vary, depending on the model of the air conditioner.

Outdoor unit

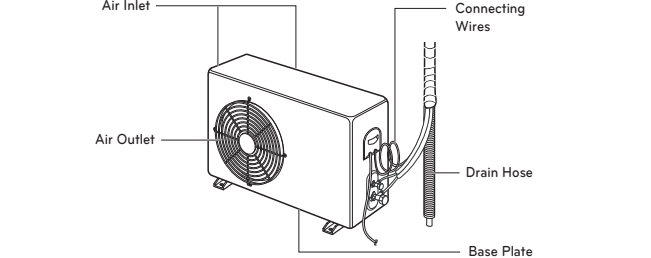


* The feature can be changed according a type of model.

Using the remote control

You can operate the air conditioner more conveniently with the remote control.


Wireless remote control

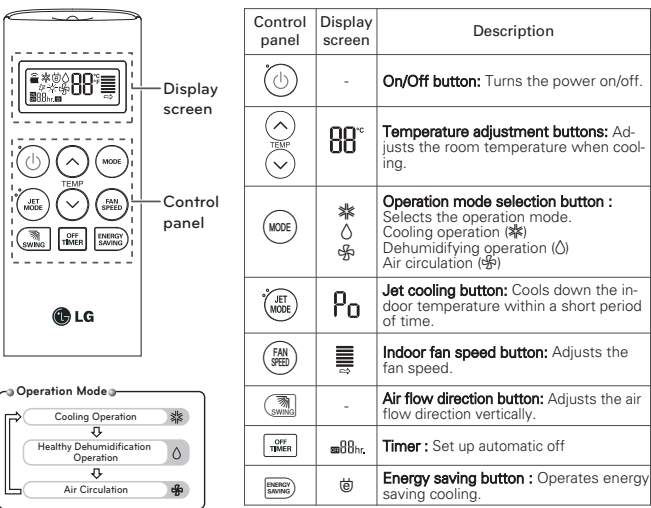


* Some functions may not be supported, depending on the model.

Inserting batteries

Insert batteries before using the remote control. The battery type used is AAA (1.5 V).
1 Remove the battery cover.



2 Insert the new batteries and make sure that the + and - terminals of the batteries are installed correctly.

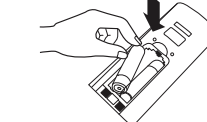

3 Reattach the battery cover.

NOTE


If the display screen of the remote control starts to fade, replace the batteries.

Installing the remote control holder


Install the holder where there is no direct sunlight to protect the remote control.

- 1 Choose a safe and easily-accessible place.

2 Fix the holder by fastening the 2 screws firmly with a screwdriver.

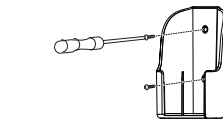


3 Slide the remote control into the holder.

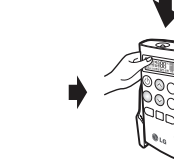

Operating method

Point the remote control towards the signal receiver at the bottom of the air conditioner to operate it.

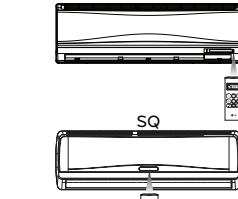

NOTE

- The remote control may operate other electronic devices if pointed towards them. Make sure to point the remote control towards the signal receiver of the air conditioner.
- For proper operation, use a soft cloth to clean the signal transmitter and receiver.

BASIC FUNCTIONS

Cooling your room (Cooling operation)

- 1 Press [On/Off] to turn on the power.
- 2 Press [Temp] repeatedly to select the cooling operation.
* is displayed on the display screen.



- 3 Press [Fan] or [Wind] to set the desired temperature.
- The temperature range is 18°C - 30°C.

Removing humidity (Dehumidifying operation)

This mode removes excess moisture from an environment with high humidity or in the rainy season, in order to prevent mold from setting in. This mode adjusts the room temperature and the fan speed automatically to maintain the optimal level of humidity.

- 1 Press [On/Off] to turn on the power.
- 2 Press [Dehumidify] repeatedly to select the dehumidifying operation.
* is displayed on the display screen.



NOTE

- In this mode you cannot adjust the room temperature, as it is adjusted automatically. Also, the room temperature is not displayed on the display screen.

Airing your room (Air Circulation operation)

This mode only circulates the indoor air without changing the room temperature. The cooling lamp lights up in air circulation mode.

- 1 Press [On/Off] to turn on the power.
- 2 Press [Air Circulation] repeatedly to select air circulation operation.
* is displayed on the display screen.



3 Press [Fan] to adjust the fan speed.

Adjusting the fan speed

- 1 Press [Fan] repeatedly to adjust the fan speed.
- Select [Auto] if you want natural air. The fan speed adjusts automatically.

Remark	Speed
	High
	Medium
	Low
	Natural Wind

Adjusting the air flow direction

- 1 To adjust the direction of the air flow vertically, [V] press change the air flow direction automatically.


NOTE

- Adjusting the air deflector arbitrarily may cause product failure.
- If you restart the air conditioner, it starts to operate with the previously set direction of air flow, so the air deflector may not match the icon displayed on the remote control. When this occurs, press [V] to adjust the direction of the air flow again.

Turning off the air conditioner automatically at a set time

Use the off timer mode to turn off the air conditioner automatically.


- 1 Press [On/Off] to turn on the power.
- 2 Press [Timer] repeatedly to select the hour you want to turn air conditioner off. (up to 24 hours)
(The hour increases automatically with long press.)
* is displayed on the display screen in this mode.



MAINTENANCE

Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

* This may not be provided, depending on the model.

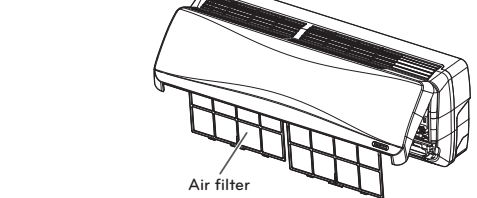

* The feature can be changed according a type of model.

Item	Cleaning interval	Cleaning method
Air filter	2 weeks	See "Cleaning air filter."
Indoor unit surface	Regularly	Use a soft, dry cloth. Do not use bleach or abrasives.
Outdoor unit	Regularly	Use steam to clean the heat exchanger coils and the panel vents (consult with technician).

CAUTION

- Turn off the power and unplug the power cord before you perform any maintenance; otherwise it may cause electric shock.
- Never use water that is hotter than 40°C when you clean the filters. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filters. They may damage the surface of the product.

NOTE

- The location and shape of the filters may differ, depending on the model.
- Make sure to clean the heat exchanger coils of the outdoor unit regularly, as dirt collected in the coils may decrease the operational efficiency or increase energy costs.

Cleaning the air filter

Clean the air filter once every 2 weeks or more if necessary.

- 1 Turn off the power and unplug the power cord.
- 2 Open the front grille.
- Lift up both sides of the cover slightly.



* The feature can be changed according a type of model.



* The feature can be changed according a type of model.

- 3 Hold the knob of the air filter, lift it up slightly and remove it from the unit.

- 4 Clean the filter with a vacuum cleaner or with warm water.
- If dirt is difficult to remove, wash the filter in lukewarm water with detergent.
- 5 Dry the filter in the shade.

NOTE

- For inner cleaning, contact an Authorized Service center or a dealer. Do not use harsh detergent that causes corrosion or damage on the unit. Harsh detergent may also cause failure of product, fire, or electronic shock.

TROUBLESHOOTING

Self-diagnosis function

This product has a built-in self-diagnosis function. If an error occurs, the lamp of the indoor unit will blink in 2 second intervals. If this occurs, contact your local dealer or service center.

Before requesting service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

Problem	Possible causes	Corrective action
There is a burning smell and a strange sound coming from the unit.		
Water leaks from the indoor unit even when the humidity level is low.		Turn off the air conditioner, unplug the power cord and contact the service center.
The power cord is damaged or generating excessive heat.		
A switch, a circuit breaker (safety, ground) or a fuse is not operated properly.		
The air conditioner is unplugged.		Check whether the power cord is plugged into the outlet.
A fuse is blown or the power supply is blocked.		Replace the fuse or check if the circuit breaker has tripped.
A power failure has occurred.		Turn off the air conditioner when a power failure occurs. When the power is restored, wait 3 minutes, and then turn on the air conditioner.
The voltage is too high or too low.		Check if the circuit breaker has tripped.
The air conditioner turned off automatically at a preset time.		Press the power button again.

Problem	Possible causes	Corrective action
	Air is not circulating properly.	Make sure that there are no curtains, blinds or furniture blocking the front of the air conditioner.
	The air filter is dirty.	Clean the air filter once every 2 weeks. See "Cleaning Air Filter" for more information.
	The room temperature is too high.	In summer, it may take some time to cool indoor air. Switch the jet cool operation to cool indoor air quickly.
The air conditioner does not generate cool air.	Cold air is escaping from the room.	Make sure that no cold air is escaping through ventilation points in the room.
	The desired temperature is higher than the set temperature.	Set the desired temperature to a level lower than the current temperature.
	There is a heating source nearby.	Avoid using a heat generator such as an electric oven or a gas burner while the air conditioner is in operation.
	Air circulation operation is selected.	In the air circulation operation, air blows from the air conditioner without cooling or heating the indoor air. Switch the operation mode to the cooling operation.
It is not possible to adjust the fan speed.	The auto operation, jet operation or dehumidifying operation is selected.	In some operation modes, such as the jet or dehumidifying operation modes, you cannot adjust the fan speed. Select an operation mode in which you can adjust the fan speed.
It is not possible to adjust the temperature.	The air circulation operation or jet operation is selected.	In some operation modes, such as the air circulation or jet operation mode, you cannot adjust the temperature. Select an operation mode in which you can adjust the temperature.

ADVANCED FUNCTIONS

The air conditioner offers some additional advanced functions.

Changing room temperature quickly (Jet Cool)

This mode allows you to cool indoor air quickly in summer.

- 1 Press [On/Off] to turn on the power.
- 2 Press [Jet Cool].



- In jet cooling mode, strong air blows out at a temperature of 18°C for 30 minutes.



NOTE

This function may not be supported, depending on the model. In Energy Saving Cooling Mode, temperature on the display of the remote controller and air conditioner can be different.

TANDA PENDAFTARAN
NOMOR: P15.LG3.02603.1213

KIAT MENGHEMAT ENERGI

Berikut adalah beberapa kiat yang akan membantu Anda meminimalkan konsumsi daya ketika Anda menggunakan AC. Anda dapat menggunakan AC secara lebih efisien dengan mengikuti petunjuk berikut:

- Jangan mendinginkan dalam ruangan secara berlebihan. Suhu dingin berlebihan dapat membahayakan kesehatan Anda dan mengonsumsi listrik lebih banyak.
- Halangi sinar matahari dengan tirai atau gordn saat Anda mengoperasikan AC.
- Tutup rapat pintu udara jendela saat Anda mengoperasikan AC.
- Sesuaikan arah aliran udara secara vertikal atau horizontal untuk mengalirkan udara dalam ruangan.
- Percepat kipas untuk mendinginkan atau menghancurkan udara dalam ruangan dengan cepat, dalam waktu singkat.
- Buka jendela secara teratur untuk ventilasi karena kualitas udara dalam ruangan dapat membuk jika AC digunakan selama berjam-jam.
- Bersihkan saringan udara setiap 2 minggu sekali. Debu dan kotoran yang menumpuk dalam saringan udara dapat menghalangi aliran udara atau melemahkan fungsi mendinginkan / menurunkan kadar kelembapan

Untuk catatan Anda

Jepit tanda terima di halaman ini jika Anda memerlukan untuk bukti tanggal pembelian atau untuk tujuan garansi. Tuliskan nomor model dan nomor seri di sini:

Nomor model:

Nomor seri:

Anda dapat menemukannya pada label di sisi setiap unit

Nama dealer:

Tanggal pembelian :

PANDUAN KESELAMATAN PENTING

BACA SEMUA PETUNJUK SEBELUM MENGGUNAKAN ALAT INI.

Selalu patuhi tindakan pencegahan berikut untuk menghindari keadaan berbahaya dan memastikan performa terbaik produk Anda.

PERINGATAN
Dapat berakibat cedera serius atau bahkan kematian bila petunjuk diabaikan.

PERHATIAN
Dapat berakibat cedera kecil atau kerusakan produk bila petunjuk diabaikan.

- PERINGATAN**
- Pemasangan atau perbaikan yang dilakukan oleh seseorang yang tidak memenuhi kualifikasi dapat membahayakan Anda dan orang lain.
 - Pemasangan HARUS sesuai dengan kode bangunan lokal atau, jika tidak ada kode lokal, Alat dipasang menurut regulasi kabel nasional.
 - Informasi yang terdapat dalam panduan ini dimaksudkan untuk digunakan oleh teknisi servis berkualifikasi serta memahami dengan baik prosedur keselamatan serta dilengkapi dengan alat dan instrumen uji yang memadai.
 - Kesalahan dalam membaca dan mengikuti semua petunjuk dalam panduan ini dengan baik dapat mengakibatkan kerusakan peralatan, kerusakan properti, cedera tubuh dan/atau kematian.

- Pemasangan**
- Gunakan pemutus sirkuit standar dan sekring yang sesuai dengan rating AC tersebut. Kesalahan melakukannya dapat menyebabkan sengatan listrik atau kegagalan produk.
 - Hubungi pusat servis resmi ketika Anda memasang atau memindahkan AC. Kesalahan melakukannya dapat menyebabkan cedera serius atau kegagalan produk.
 - Selalu gunakan steker listrik dan soket dengan terminal arde. Kesalahan melakukannya dapat menyebabkan sengatan listrik atau kegagalan produk.
 - Pasang panel dan penutup kotak kontrol dengan benar. Kesalahan melakukannya dapat mengakibatkan ledakan atau kebakaran.
 - Pasang colokan listrik dan pemutus sirkuit yang dikhususkan untuk tujuan pemasangan ini sebelum Anda menggunakan pendingin udara. Kesalahan melakukannya dapat menyebabkan sengatan listrik atau kegagalan produk.
 - Gunakan pemutus sirkuit standar dan sekring yang sesuai dengan rating AC tersebut. Kesalahan melakukannya dapat menyebabkan sengatan listrik atau kegagalan produk.
 - Jangan mengubah atau memperpanjang kabel listrik. Ganti kabel listrik jika mengalami goresan atau kulit terkelupas atau jika kualitasnya buruk. Kondisi kabel yang buruk dapat mengakibatkan kebakaran atau sengatan listrik.
 - Berhati-hatilah saat Anda membongkar atau memasang AC. Kesalahan melakukannya dapat menyebabkan cedera serius atau kegagalan produk.
 - Hubungi pusat servis resmi ketika Anda memasang atau memindahkan AC. Kesalahan melakukannya dapat menyebabkan cedera serius atau kegagalan produk.
 - Jangan memasang AC di permukaan yang tidak stabil atau di tempat yang terdapat kemungkinan bahaya AC tersebut terjatuh. Kondisi tersebut dapat menyebabkan kematian, cedera serius, atau kegagalan produk.
 - Alat ini tidak digunakan oleh anak atau orang yang memiliki kekurangan fisik, kemampuan mental atau panca indera, atau kurang pengalaman dan pengetahuan, kecuali mereka diberikan pengawasan atau petunjuk.
 - Anak – anak perlu diawasi untuk tidak bermain dengan alat ini.
 - Jika kabel power diganti , pekerjaan pengantiannya dilakukan hanya oleh orang yang ahli, hanya diganti dengan yang asli.

Menyesuaikan arah aliran udara

- 1 Untuk menyesuaikan arah aliran udara secara vertikal, tekan untuk mengubah arah aliran udara otomatis.

CATATAN

- Menyesuaikan deflektor udara secara sembarang dapat menyebabkan kegagalan produk.
- Jika Anda me-restart AC, berarti akan mulai beroperasi dengan arah aliran udara yang telah diatur sebelumnya, sehingga deflektor udara mungkin tidak sesuai dengan ikon yang ditampilkan pada remote control. Ketika ini terjadi, tekan untuk menyesuaikan arah aliran udara lagi.

Matikan pendingin udara otomatis dengan pengatur waktu

Gunakan mode timer off untuk mematikan AC secara otomatis.

- 1 Tekan untuk menyalakan daya.
- 2 Tekan berulang kali untuk memilih jam mematikan AC (hingga 24 jam) (Jam akan bertambah secara otomatis dengan menekan tombol lama.)
- ditampilkan pada layar tampilan dalam mode ini



FUNGSI LANJUTAN

Pada AC ini terdapat beberapa fungsi-fungsi lanjutan tambahan.

Mengubah suhu ruang dengan cepat (Jet Cool)

Mode ini memungkinkan Anda mendinginkan udara dalam ruangan dengan cepat di musim panas.

- 1 Tekan untuk menyalakan daya.
- 2 Tekan .



- Dalam mode jet cooling, udara yang kuat berhembus pada suhu 18°C selama 30 menit.




CATATAN

Fungsi ini mungkin tidak didukung, bergantung pada model. Dalam Mode Pendinginan Hemat Energi, suhu pada tampilan pengontrol jarak jauh dan AC bisa berbeda.


Membersihkan saringan udara

Bersihkan saringan udara setiap 2 minggu sekali atau lebih jika diperlukan.

- 1 Matikan daya dan cabut kabel daya.
- 2 Buka kisi depan.
- Angkat sedikit kedua sisi penutup.

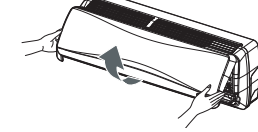

* Fitur dapat diubah sesuai jenis model.

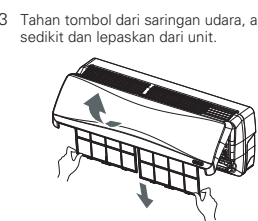

* Fitur dapat diubah sesuai jenis model.

- 4 Bersihkan saringan dengan vacuum cleaner atau dengan air hangat.
- Jika kotoran sulit dibuang, cucilah saringan dalam air hangat dengan deterjen.
- 5 Keringkan saringan di tempat teduh.

CATATAN

- Untuk membersihkan bagian dalam, hubungi pusat Servis Resmi atau dealer. Jangan gunakan deterjen keras yang menyebabkan korosi atau kerusakan pada unit. Deterjen keras juga dapat menyebabkan kegagalan produk, kebakaran, atau sengatan listrik.

PERHATIAN Pemasangan

- Pastikan untuk memeriksa apakah ada kebocoran pendingin setelah Anda memasang atau memperbaiki AC. Kesalahan melakukannya dapat mengakibatkan kegagalan produk.
- Pasang selang pembuangan dengan benar untuk kelancaran pembuangan air. Kesalahan melakukannya dapat mengakibatkan kegagalan produk.
- Atur ketinggian ketika memasang produk.
- Pasang AC di tempat terbaik, sehingga kebisingan atau gas buang unit luar ruangan tidak mengganggu kenyamanan tetangga sekitar. Kesalahan melakukannya dapat mengakibatkan konflik dengan tetangga.
- Ketika mengangkut peralatan, harus ada minimal 2 orang atau lebih untuk melakukannya, atau gunakanlah forklift. Kesalahan melakukannya dapat mengakibatkan cedera serius.
- Jangan memasang AC di tempat yang memungkinkan perangkat terkena angin laut (sebaran garam) secara langsung. Tindakan tersebut dapat menyebabkan kegagalan produk.


Operasional

- Hindari orang, hewan atau tanaman terpapar angin dingin atau panas dari AC. Kesalahan melakukannya dapat mengakibatkan cedera serius.
- Jangan menggunakan produk untuk tujuan khusus, seperti mengawetkan makanan, karya seni, dsb. Produk ini adalah AC untuk konsumen, bukan sistem pendingin presisi. Tindakan tersebut dapat mengakibatkan kematian, kebakaran atau sengatan listrik.
- Jangan mengalirkan aliran udara masuk atau keluar. Tindakan tersebut dapat menyebabkan ledakan atau kegagalan produk.
- Jangan gunakan bahan pembersih atau pelarut yang kuat ketika Anda membersihkan AC, atau menyemprotkan air. Gunkan kain yang halus. Tindakan tersebut dapat menyebabkan cedera serius, atau kegagalan produk.
- Jangan meletakkan benda apa pun di atas AC. Tindakan tersebut dapat menyebabkan kegagalan produk.
- Masukkan saringan dengan benar setelah dibersihkan. Bersihkan saringan setiap dua minggu atau lebih sering jika diperlukan.
- Jangan memasukkan tangan atau benda lain melalui saluran udara masuk atau keluar saat AC beroperasi. Tindakan tersebut dapat menyebabkan sengatan listrik.
- Jangan minum air yang mengalir dari AC. Tindakan tersebut dapat mengakibatkan komplikasi kesehatan yang serius.
- Gunakan bangku atau tangga yang kokoh ketika membersihkan, memelihara atau memperbaiki AC di ketinggian. Kesalahan melakukannya dapat menyebabkan cedera serius atau kegagalan produk.
- Jangan mencampur baterai untuk remote control dengan jenis baterai lain atau mencampur baterai baru dengan baterai bekas. Kesalahan melakukannya dapat mengakibatkan kegagalan produk.
- Jangan mengisi ulang atau membongkar baterai. Kesalahan melakukannya dapat mengakibatkan ledakan, kebakaran atau cedera serius.
- Hentikan penggunaan remote control jika ada kebocoran cairan baterai. Jika pakaian atau kulit terkena cairan kebocoran baterai, cuci dengan air bersih. Kesalahan melakukannya dapat mengakibatkan cedera serius.
- Jika Anda menelan cairan baterai dari kebocoran, kumur berkali-kali, lalu segera hubungi dokter. Kesalahan melakukannya dapat mengakibatkan komplikasi kesehatan yang serius.

SEBELUM MENGGUNAKAN

Komponen

Unit dalam ruangan

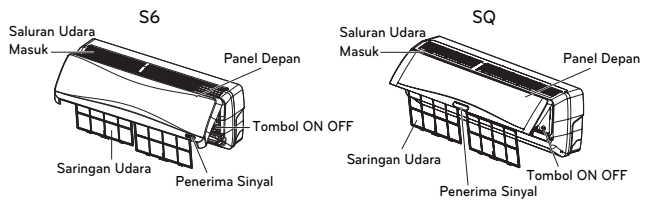


* Fitur dapat diubah sesuai jenis model.

CATATAN

Jumlah lokasi operasi dan lokasinya mungkin berbeda, bergantung pada model AC.

Unit luar ruangan

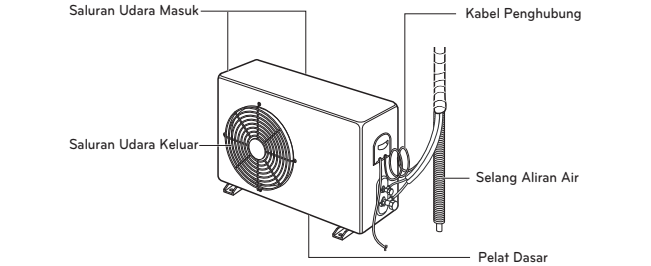

* Fitur dapat diubah sesuai jenis model.

Menggunakan remote control

Anda dapat mengoperasikan AC secara lebih nyaman dengan remote control.

Remote control nirkabel

Layar tampilan

Panel kontrol

Panel Kontrol	Layar Tampilan	Deskripsi
	-	Tombol On/Off: Mematikan/ menyalakan daya.
	88°	Tombol penyesuaian suhu : Menyesuaikan suhu ruangan saat pendinginan.
		Tombol pilihan mode operasi : Memilih mode operasi. Operasi pendinginan Penurunan kadar kelembapan Sirkulasi udara
		Tombol jet cooling: Pendinginan suhu dalam ruang dalam waktu singkat
		Tombol kecepatan kipas dalam ruang : Menyesuaikan kecepatan kipas.
	-	Tombol arah aliran udara : Menyesuaikan arah aliran udara secara vertikal
		Timer: Mengatur mati secara otomatis
		Tombol hemat energi: Mengoperasikan pendinginan hemat energi.

* Beberapa fungsi mungkin tidak didukung, bergantung pada model.

Memasukkan baterai

- Masukkan baterai sebelum menggunakan remote control. Jenis baterai yang digunakan adalah AAA (1,5 V).
- 1 Lepaskan penutup baterai.



3 Pasang kembali penutup baterai.


CATATAN

Jika layar tampilan remote control mulai memudar, gantilah baterai.

Memasang dudukan remote control


Pasang dudukan tersebut di tempat yang tidak terkena sinar matahari secara langsung untuk melindungi remote control.

1 Pilih tempat yang aman dan mudah diakses.

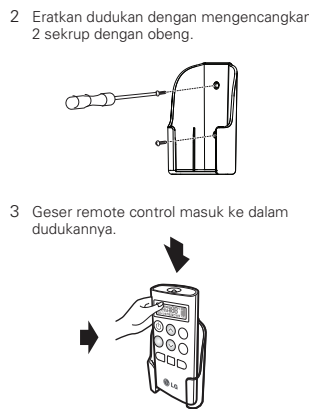

Metode Operasi

Arahkan remote control ke arah penerima sinyal di bagian bawah AC untuk mengoperasikannya.

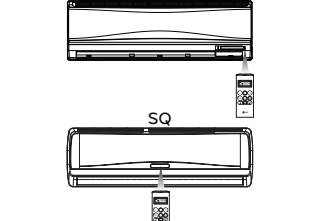


CATATAN

- Remote control dapat mengoperasikan alat elektronik lainnya jika menunjuk ke arahnya. Pastikan untuk mengarahkan remote control ke unit penerima sinyal AC.
- Untuk pengoperasian yang benar, gunakan kain lembut untuk membersihkan pemancar dan penerima sinyal.

FUNGSI DASAR

Mendinginkan ruangan Anda (Operasi pendinginan)

- 1 Tekan untuk menyalakan daya.
- 2 Tekan berulang kali untuk memilih operasi pendinginan.
- ditampilkan pada layar tampilan.




- 3 Tekan atau untuk mengatur suhu yang diinginkan.
- Rentang suhu adalah 18°C - 30°C.

Menghilangkan kelembapan (Operasi penurunan kadar kelembapan)

Mode ini menghilangkan kelebihan kelembapan dari lingkungan yang memiliki kelembapan tinggi atau pada musim hujan, untuk mencegah masuknya jamur. Mode ini menyesuaikan suhu kamar dan kecepatan kipas secara otomatis untuk mempertahankan tingkat kelembapan yang optimal.

- 1 Tekan untuk menyalakan daya.
- 2 Tekan berulang kali untuk memilih operasi pendinginan.
- ditampilkan pada layar tampilan.



- CATATAN**
- Pada mode ini, Anda tidak bisa menyesuaikan suhu kamar, karena diatur secara otomatis. Selain itu, suhu ruangan tidak ditampilkan pada layar tampilan.


Mengalirkan udara di ruang Anda (Operasi Sirkulasi Udara)

Mode ini hanya mengalirkan udara dalam ruangan tanpa mengubah suhu kamar. Lampu pendingin menyala di mode sirkulasi udara.

1 Tekan untuk menyalakan daya.

2 Tekan berulang kali untuk memilih operasi sirkulasi udara.

- ditampilkan pada layar tampilan.



- 3 Tekan untuk menyesuaikan kecepatan kipas.

Menyesuaikan kecepatan kipas

- 1 Tekan berulang kali untuk menyesuaikan kecepatan kipas.
- Pilih jika Anda menginginkan udara alami. Kecepatan kipas akan menyesuaikan secara otomatis.

Keterangan	Kecepatan
	Tinggi
	Sedang
	Rendah
	Angin Alami

PEMECAHAN MASALAH

Fungsi self-diagnosis

Produk ini memiliki fungsi self-diagnosis bawaan. Jika terjadi kesalahan, lampu unit dalam ruangan akan berkedip dalam interval 2 detik. Jika ini terjadi, hubungi dealer atau pusat servis setempat.

Sebelum meminta layanan

Periksa hal berikut sebelum Anda menghubungi pusat servis. Jika masalah berlanjut, hubungi pusat servis setempat.

Masalah	Kemungkinan penyebab	Tindakan perbaikan
Tercium bau terbakar dan suara aneh dari unit.	-	-
Air menyembes dari unit dalam ruangan bahkan ketika tingkat kelembapan rendah.	-	Matikan AC, cabut kabel daya dan hubungi pusat servis.
Kabel listrik yang rusak atau menghasilkan panas yang berlebihan.	-	-
Sakelar, pemutus sirkuit (keamanan, arde) atau sekring tidak beroperasi dengan benar.	-	-
AC tidak berfungsi.	Kabel AC dicabut.	Periksa apakah kabel daya telah dicolokkan ke stop kontak.
	Sekering terbakar atau catu daya terhambat.	Ganti sekering atau periksa apakah sakelar utama terputus.
	Terjadi gangguan daya.	Matikan AC ketika terjadi gangguan daya. Ketika listrik dipulihkan, tunggu 3 menit, lalu hidupkan AC.
	Tegangan terlalu tinggi atau terlalu rendah.	Periksa apakah sakelar utama terputus.
	AC dimatikan secara otomatis pada waktu yang telah ditetapkan.	Tekan tombol daya lagi.

Masalah	Kemungkinan penyebab	Tindakan perbaikan
AC tidak menghasilkan udara dingin.	Udara tidak bersirkulasi dengan baik.	Pastikan bahwa tidak ada tirai, penutup atau perabot yang menghalangi bagian depan AC.
	Saringan udara kotor.	Bersihkan saringan udara setiap 2 minggu sekali. Lihat "Membersihkan Saringan Udara" untuk informasi lebih lanjut.
	Suhu ruangan terlalu tinggi.	Di musim panas, mungkin diperlukan beberapa saat untuk mendinginkan udara dalam ruangan. Jika demikian, pilih operasi jet cool untuk mendinginkan udara dalam ruangan dengan cepat.
	Udara dingin keluar dari ruangan.	Pastikan tidak ada udara dingin yang keluar melalui titik ventilasi di ruang.
	Suhu yang diinginkan lebih tinggi daripada suhu yang telah ditetapkan.	Atur suhu yang diinginkan ke tingkat yang lebih rendah dari suhu saat ini.
	Ada sumber pemanas di dekat AC.	Hindari penggunaan perangkat penghasil panas seperti oven listrik atau kompor gas ketika AC beroperasi.
	Operasi sirkulasi udara yang dipilih.	Dalam operasi sirkulasi udara, udara berhembus dari AC tanpa mendinginkan atau memanaskan udara dalam ruangan. Ubah mode operasi ke operasi pendinginan
Anda tidak bisa mengatur kecepatan kipas.	Operasi otomatis, operasi jet atau penurunan kadar kelembapan dipilih.	Dalam beberapa mode operasi, seperti mode operasi jet atau mode operasi penurunan kadar kelembapan, Anda tidak dapat mengatur kecepatan kipas. Pilih mode operasi yang memungkinkan Anda untuk menyesuaikan kecepatan kipas.
Anda tidak bisa menyesuaikan suhu.	Operasi sirkulasi udara atau operasi jet dipilih.	Dalam beberapa mode operasi, seperti mode operasi sirkulasi udara atau mode operasi jet, Anda tidak bisa menyesuaikan suhu. Pilih mode operasi yang memungkinkan Anda menyesuaikan suhu.