



LG

Life's Good

ENGLISH

HINDI

OWNER'S MANUAL REFRIGERATOR

Please read this manual carefully before operating your set and retain it for future reference.

REFRIGERATOR MODEL

GL-472/522/542

GL-479/529/549


GL-478/528/548

P/NO : MFL67477503

www.lg.com

CONTENTS

IMPORTANT SAFETY INFORMATION	2
INSTALLATION	9
INNER PARTS	10
OPERATIONS	12
GL-549/529/479/548/528/478/542/522/472	
Starting	
Before Setting The Temperature	
Door Alarm	
Self Test	
Controls For Freezer Compartment	
Controls For Refrigerator Compartment	
Super Cool	
Child Lock (Optional)	
Green Ion Door Cooling (Optional)	
Ice Making (Optional)	
Convertible Corner/Fresh Zone	
Vegetable Drawer	
Defrosting	
Deodorizer (Optional)	
Dairy Corner(Optional)	
Water Dispenser (Optional)	
SUGGESTIONS ON FOOD STORAGE	18
CLEANING	19
GENERAL INFORMATION	21
IMPORTANT WARNINGS	22
BEFORE CALLING FOR SERVICE	23

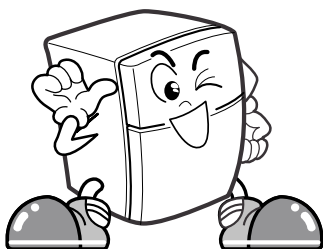

IMPORTANT SAFETY INFORMATION

WARNING

-  Keep the air vents clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartment, unless they are recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance requires special disposal procedures. When disposal, please consult with services agent or a similarly qualified person.

BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

-  This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can hurt or seriously injured or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

	DANGER	You will be hurt or seriously injured if you don't follow instructions.
	WARNING	To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.
	CAUTION	Indicates an imminently hazardous situation which, if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

If gas used is R600a

This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m² in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

Disposal of your old appliance (as per e-waste Rules)



1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by the e-waste Management and Handling Rules, 2011 and are meant to be recycled, dismantled, refurbished or disposed off.
2. Do's
 - a. The product is required to be handed over only to the authorized recycler for disposal.
 - b. Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.

Don't

- a. The product should not be opened by the user himself/herself, but only by authorized service personnel.
 - b. The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwala.
 - c. The product is not meant for mixing into household waste stream.
 - d. Do not keep any replaced spare part(s) from the product in exposed area.
3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986.
 4. Hazards of improper handling or accidental breakage :
 - a. The refrigerant (R134a) used, if overexposed, might cause dizziness and loss of concentration. Liquid contact can cause irritation and frostbite. The refrigerant (R600a), squirting out of the pipes could ignite or cause eye injury.
 - b. The blowing agent cyclopentane is highly flammable liquid and vapor, harmful to aquatic life. Contact with liquid may cause cold burns/frost bites. Repeated exposure cause skin dryness.
 5. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. 1800-180-9999 for details. All collection centre and pick up facilities are done by third parties with LG electronics India Pvt. Ltd. merely as a facilitator. For more detailed information, please visit : <http://www.lge.com/in>



WARNING


To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

IMPORTANT SAFETY INFORMATION

1. When connecting the power


Dedicated outlet should be used.

- Using several devices at one outlet may cause fire.

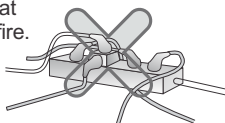


Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Plug may get damaged, which causes fire or electric shock.

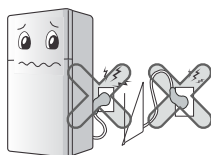

Do not allow the power cord to bend or pressed by heavy object.

It may damage the power cord and cause fire or electric shock.

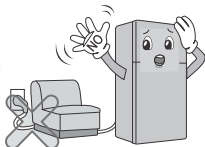

Do not extend or modify the length of the power plug.

It damages the power cord and cause electric shock or fire.




Unplug the power plug while cleaning, handling or replacing the interior lamp of the refrigerator.

- It may cause electric shock or injury.



Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.

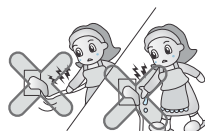


IMPORTANT SAFETY INFORMATION

1. When connecting the power


Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may cause fire or electric shock.




Make sure of grounding.

Incorrect grounding may cause breakdown and electric shock.

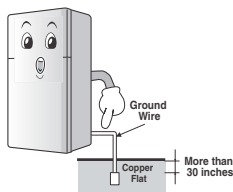

When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit.

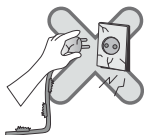

2. When using the refrigerator

Do not place heavy object or the dangerous object (container with liquid) on the refrigerator.

It may fall and cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or home bar of the freezer or the cool chamber.

It may make the refrigerator fall over or damage the hands. Especially, do not allow the children to do the above.




Do not install the refrigerator in wet place or place where water or rain splashes.

Deterioration of insulation of electric parts may cause electric leakage.




Do not use or store inflammable materials like ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

It may cause explosion or fire.

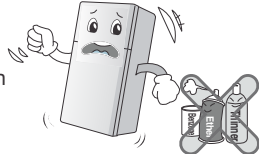


Do not use drier to dry the inside, nor light a candle to remove odor

It may cause explosion or fire.

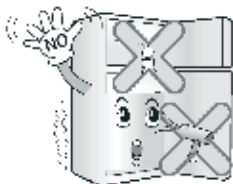

Do not store medicine or academic materials in the refrigerator.

When the material with strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.

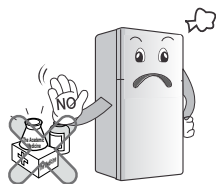


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not use the combustible spray near the refrigerator.

It may cause fire.

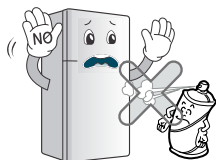


Avoid heating devices.

It may cause fire.

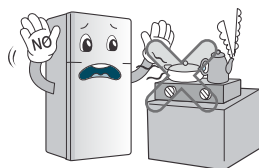


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

It may cause fire, electric shock or injury by dropping down.

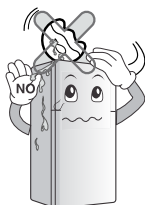

Use the submerged refrigerator only after checking it.


It may cause electric shock or fire.

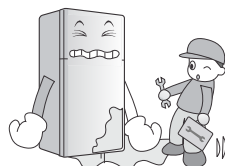

When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.


During the handling / delivering, installation if used gas is (1) Tetrafluoroethane (R134a) - in spite of being Environment friendly & Non flammable, it may cause irritation to skin, eyes with small amount of vapor, hence proper ventilation across the Refrigerator area is must.

(2) Natural Gas (isobutene, R600a) - is an environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked due to severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

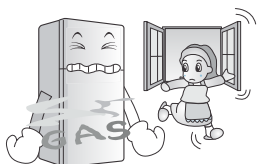


Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.

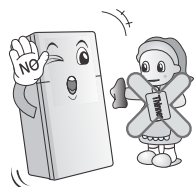

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.

It may cause fire.

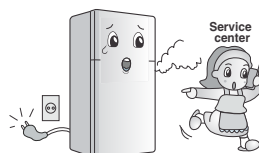


IMPORTANT SAFETY INFORMATION

2. When using the refrigerator


Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

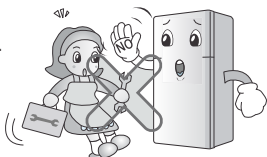

Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

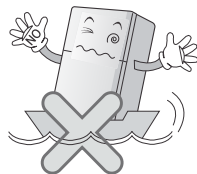

When disposing the refrigerator, remove the packing materials from the door.

It may cause to lock out the child.




Install the refrigerator on a solid and level floor.

Installing it on an unstable place may cause injury by falling down the refrigerator when opening or closing the door.



Do not insert hand or metal stick into the exit of cool air, cover, bottom of the refrigerator, heat proof grill (exhaust hole) at backside.

It may cause electric shock or injury.

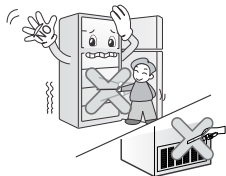

What to do with your old refrigerator,

Your refrigerator contains liquid (refrigerant, lubricant) made of recyclable materials. All these materials must be sent to a recycling waste disposal site as they can be reused after a specific recycling process.




In case of thunder and lightning, or if not in use for a long period of time, detach the power plug.

There is a danger of electric shock or fire.




Place all the components in the right places before connecting the power.

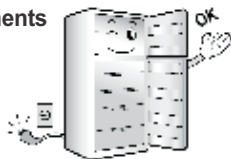

Do not remove the back cover.



Never leave lit candles on the fridge, high risk of causing fire or product damage.

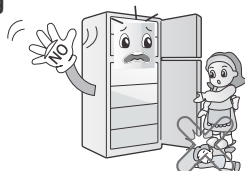


IMPORTANT SAFETY INFORMATION

CAUTION

Violating these directions may cause injury or damage to health, house or furniture. Always be careful, please.

Do not touch food or containers at the freezer with wet hands.

It may cause frostbite.

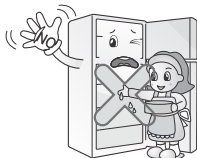

Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.



Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.




Pull out the power plug not by grasping the cord. But by the plug of its end.

It may cause electric shock or short circuit to fire.



Carry the refrigerator with the handle bar provided at the bottom-front and top-rear of the refrigerator.

Otherwise, your hands may be slipped to cause injury.

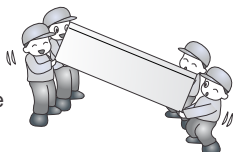


Do not insert hand into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Opening or closing the door of the refrigerator may cause injury to the person around it, please be careful.

Opening or closing the door may cause feet or hands to be caught in the chink in door or child hand get hurt by the corner.

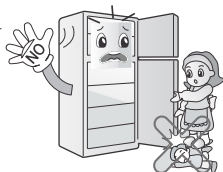


IMPORTANT SAFETY INFORMATION


Do not put any living animal in the refrigerator.




Do not use the carbonated water. The gas pressure may cause leakage.

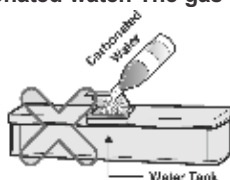

Do not lean on the doors, Hinges may deregulate themselves, causing air leak and performance deterioration

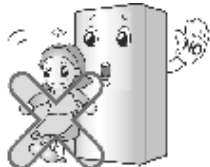

Clean the water tank according to the instruction.

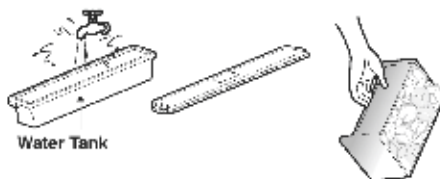


Movable parts like shelf, basket, Spice-box etc should be handled with care.

May get damaged or break if dropped.



Use only water. If any other liquid is used, the operation of the system may be deteriorated. If a problem occurs by using any liquid other than water, the manufacturer will not be responsible.

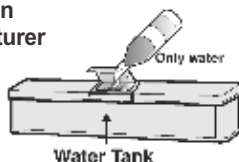

WARNING

Please do not use a dishwasher to clean the lower drawers; the high temperature may cause damage to the baskets which make them unusable.

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE, AND UTILIZES THE LATEST IN TECHNOLOGY.

WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY.

BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

1. Select a good location.

Place your refrigerator where it is easy to use.

2. Avoid placing the unit near heat sources, direct sunlight or moisture.

3. To ensure proper air circulation around the fridge -freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5 cm) from the rear wall.

4. To avoid vibrations, the unit must be level.
If required, adjust the leveling screws to compensate for unevenness of the floor. The front should be slightly higher than the rear to aid in door closing.

Leveling screws can be turned easily by tipping the cabinet slightly.

Turn the leveling screws clockwise() to raise the unit, counterclockwise() to lower it.

5. Don't install this appliance below 5 °C. It may cause the debasement of the refrigerator.

NEXT

1. Clean your refrigerator thoroughly and wipe off all dust accumulated during shipping.

2. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.


3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

4. Prior to storing food, leave your refrigerator on for 2 or 3 hours.

Check the flow of cold air in the freezer compartment to ensure proper cooling. Your refrigerator is now ready for use.

INNER PARTS

WATER DISPENSER MODEL

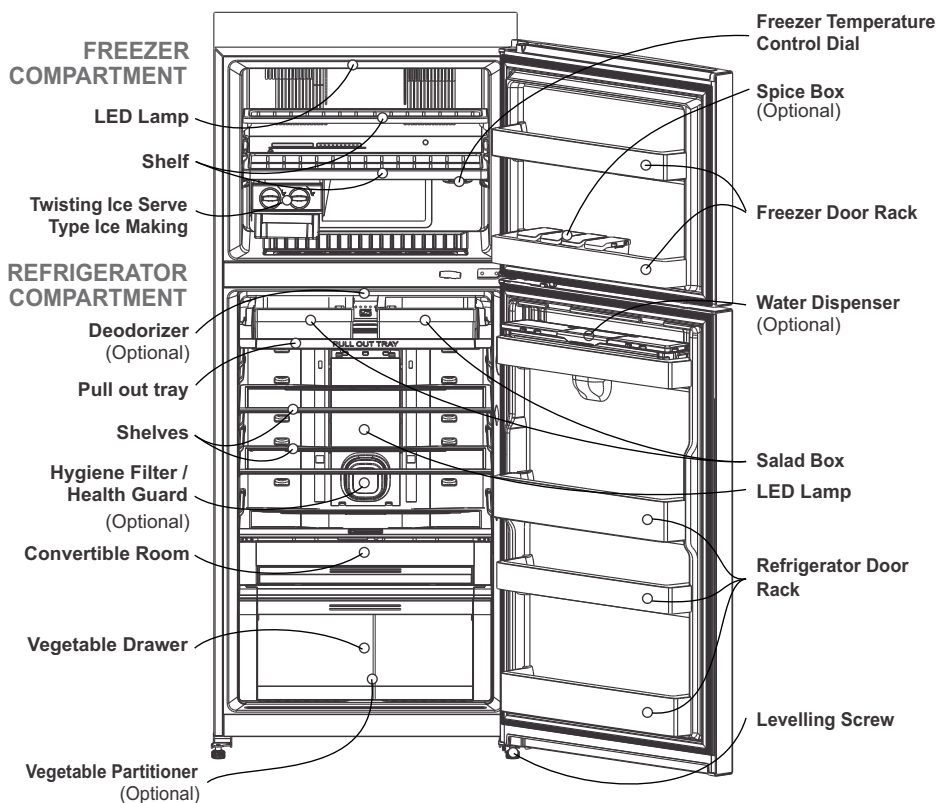

NOTE


- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in Enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

INNER PARTS

NON WATER DISPENSER MODEL

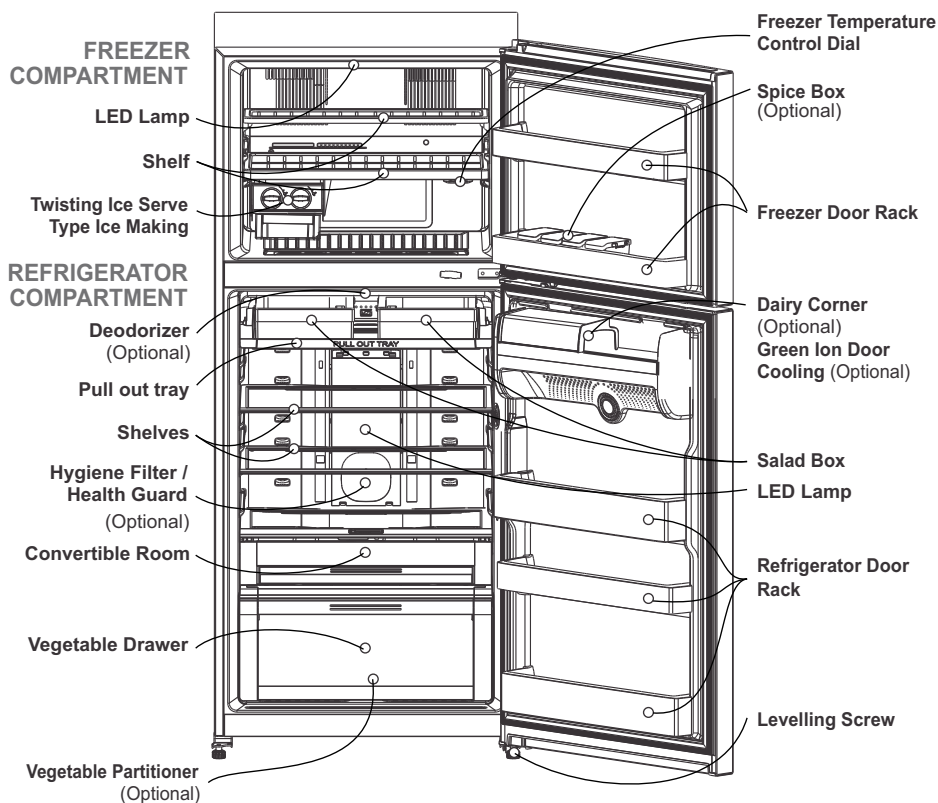

NOTE

- This guide covers several different models. The refrigerator you have purchased may have some or all of the features shown above.
- To keep a position of inner parts like as baskets, drawers and shelves supplied by manufacturer is the most efficient usage for energy saving.

SUGGESTION FOR ENERGY SAVING

- Please do not keep the door open for a long time, close door in the shortest time.
- Too much food are not advised to be put in Enough space should be kept for cool air circulating freely.
- Do not set the temperature of refrigerator lower than needed. Do not put the food near the temperature sensor.
- Allow hot food to cool prior to storing. Placing hot food in the fridge-freezer could spoil other food, and lead to higher electric bills.
- Do not block air vents with food. Smooth circulation of cold air keeps fridge-freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the fridge-freezer, and cause temperature to rise.

OPERATIONS

STARTING

When your refrigerator is first installed, allow it (7-8 hours) to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.

If operation is interrupted, wait 5 minutes before restarting.

BEFORE SETTING THE TEMPERATURE

- The temperature of the refrigerator is kept constant regardless of changes in room temperature. It is recommended that, once set, the temperature settings (the controls for the refrigerator and freezer compartments) not be changed unless necessary.
- This refrigerator has one temperature control button for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control button for the refrigerator compartment is '3°C'.
- * • The default setting of the temperature control dial for the freezer compartment is '3"/5'.
- This refrigerator has a temperature sensor in the refrigerator compartment. It will start and stop the compressor automatically as needed.

DOOR ALARM




When the door of the refrigerator or the freezer is open for 1 minute, an alarm will sound three times. If the door remains open, the alarm will repeat every 30 seconds.

SELF TEST



- Your refrigerator contains a built in diagnostic capability. If it develops a malfunction in certain areas, it will display an error code to assist the repair technician. While an error code is displayed, other control and display functions will not operate.
- If an error code is displayed, contact a service center. Do not disconnect the power cord from the outlet.

CONTROLS FOR FREEZER COMPARTMENT

- The higher number the control setting is, the lower the temperature of the freezer compartment becomes.
- Since the temperature of the refrigerator and freezer compartments is controlled with a fixed amount of cooled air, the refrigerator compartment will be warmer if the freezer compartment becomes colder.
- When the freezer compartment is not cold enough in winter, adjust the control for the freezer to High (4~7).

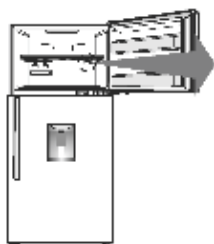

GL-529**/GL-549**
GL-528**/GL-548**
GL-542**/GL-522**



GL-478**/GL-479**
GL-472**


- Setting the Freezer Knob at  will satisfy 4/5 STAR. Setting the Freezer Knob at NORMAL will have sufficient freezing effect, so it is recommended to set the Knob at NORMAL.

* Applicable as per model variant.

OPERATIONS

CONTROLS FOR FREEZER COMPARTMENT

FOR INTERNAL CONTROLLER MODEL

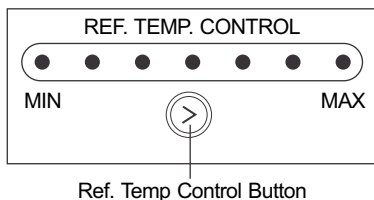

The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.

To control the refrigerator temperature, press the **REF. TEMP CONTROL** button.

Whenever pressing the button, LED emitting the light. The temperature is set in 7 steps, from **MIN** to **MAX** cooling. (**MIN** = warmest, **MAX** = coldest temperature)

FOR EXTERNAL CONTROLLER MODEL

Display graphic can be different, depend on the type of your refrigerator.

• Display a



• Display b



- Press 'REFRIGERATOR' button to control refrigerator temperature.
- Whenever pressing the button, the LED emits light.
- Press 'HEALTH GUARD/HYGIENE FRESH' button to operate hygiene fresh motor (optional).
- The number showing up on the LED luminescence indicate the temperature of refrigerator compartment.
- You can select the desired setting point seven steps, from '0°C' to '6°C'.

• Display a

- Press (b) button, refrigerator temperature will be down each by 1°C.
- Press (a) button, 1) Hygiene fresh motor will be on. 2) power mode on. 3) off.


• Display b

- Press (c) button, refrigerator temperature will be down each by 1°C.
- Press (d) button, refrigerator temperature will be up each by 1°C.

OPERATIONS

FAST FREEZING

- The FAST FREEZING feature operates when the refrigerator first turn on. The compressor and circulating fan operate at maximum cooling capacity to quickly lower the refrigerator temperature. It shuts off automatically.

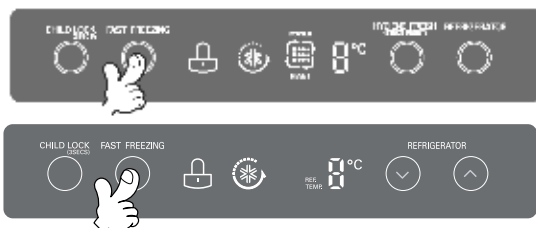


- If warm food is placed into the refrigerator, FAST FREEZING can be started with the button on the control panel. FAST FREEZING will shut off when the temperature reaches the proper level or it can be shut off manually by pressing the FAST FREEZING button.

CHILD LOCK (OPTIONAL)


CHILD LOCK

Press and hold the child lock button for 3 seconds to lock the child lock. When it is locked, the Lock LED will be on and the other button will not operate. To unlock, press and hold the CHILD LOCK button for 3 seconds again.

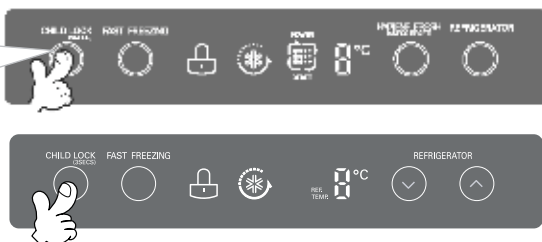


GREEN ION DOOR COOLING (OPTIONAL)

- The Tourmaline Pouch in the duct cover purifies the air and helps stored foods remain fresh longer.
- If water of foreign substances enter the cool air vent while cleaning, efficiency will be lowered. In addition, if gasket is damaged, efficiency may be lowered owing to the escape of cool air.

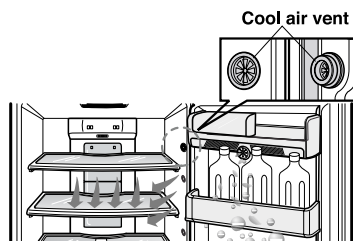


Twisting Ice Serve Type

- To make ice cubes, fill the ice tray with water and insert in its position.

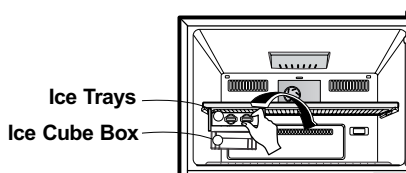

- To remove ice cubes, hold the lever of the tray and pull turn gently. Then, ice cubes drop in to the ice cube box.

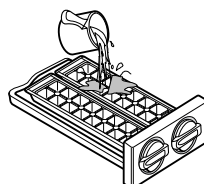


WARNING

- Do not use anything other than water.
- Fill the water up to the marked line.

OPERATIONS

CONVERTIBLE CORNER

- When the door is opened, the warmer air can't influence in the fresh zone. So you can store food more fresh in it.
- Inserted convertible room must be placed at its position. If door is opened, it can't fill the role of it.

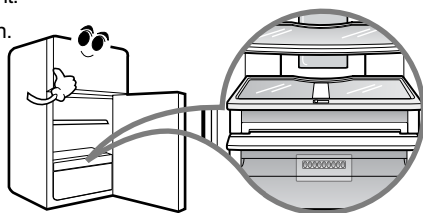


How to use

- Vegetable Corner or Fresh Corner can be used through the control of knob.
- Check the position of knob prior to store the food.
- Do not locate the knob on the middle point.

VEGETABLE DRAWER


Magic Crispers

- Magic Crispers provide fresher-tasting fruit and vegetables by letting you easily keep humidity inside the drawer.
- A lattice on the underside of the cover to efficiently hold or release moisture.
- Sealing structure keep the humidity.

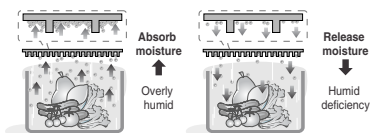

Vegetable Partitioner(Optional)

- Fix the partitioner by inserting it at the rear side of vegetable box as shown in the figure.



**Partitioner
(Optional)**

OPERATIONS


WATER DISPENSER (OPTIONAL)

NOTE


- Pour water after the water tank is in position.
- Necessarily separate the water tank to clean it or when not in use
- When the water tank is not in position after filling it with water, water can leak out by the valve.

• Pouring water in the water tank

1. Open the cover cap and pour water into the water tank.

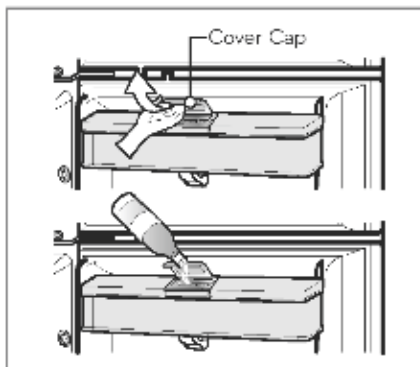


2. Close the cover cap.

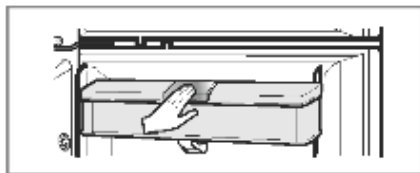

3. The water tank is optional removable part which can be applied to enlarge the storage capacity. You can use the upper basket after removing the water tank and closing up the hole with a plug.

The plug is enclosed with the egg tray.

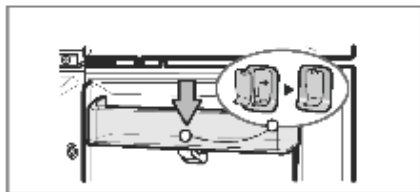


Caution

Do not use anything other than water, even hot water needs to be cooled before being poured in to the water tank.
Do not fill more than the indicated level.

• Drinking Water

1. Press the dispenser pad with cup.
2. The water is released when the dispenser pad is pressed. The pad returns to its original position when the cup is removed and the water stops its flow.

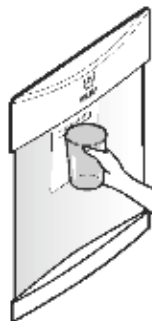


OPERATIONS

DEFROSTING

- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER (OPTIONAL)

- Unpleasant odor of food in fresh food compartment is deodorized with no harm to you and the food.

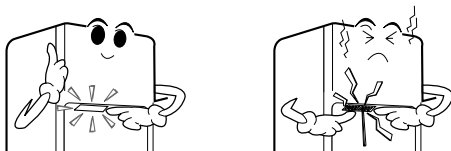


How to use

- As Deodorizer is located in cooling air inlet for circulating air in fresh food compartment, there is no need for any handling.
- Do not prick the cooling air inlet with a sharp tip because Deodorizer may be damaged.
- When storing food with a strong odor, wrap it or store it in a container with a lid because odor may be passed on to other foods.


Re-Using of Deodorizer

- Used some length and the odor is strong, Deodorizer can be revived and re-used.
- Separate Deodorizer in ceiling of refrigerator compartment, using hair drier to remove moisture or malodor and oxidize under sunlight to decomposing malodor by ultraviolet.

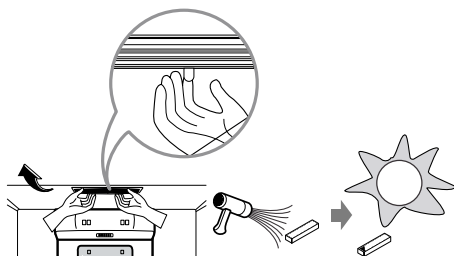


DAIRY CORNER (OPTIONAL)

- Use the moving by pushing right the left with protruded handle.

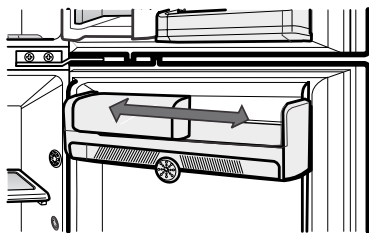

How to remove the cover for cleaning

- Slide the cover to the center of basket and align the hole with both sides of the basket.
- After aligning, turn basket from back to front and pull out with both hands.

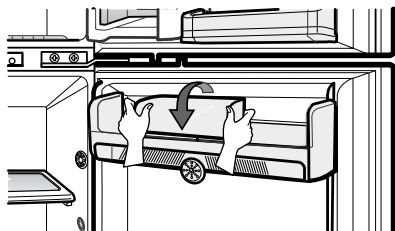

SUGGESTIONS ON FOOD STORAGE

STORING FOOD


- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food, and lead to higher electric bills!

When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents

- moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.


FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Loading for Freezing - It is recommended to load newly introduced foods on the following position for freezing:

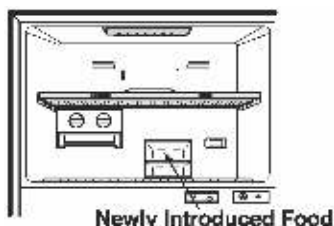

REFRIGERATOR COMPARTMENT

- Avoid placing moist food on deep interior refrigerator shelves, it could freeze upon direct contact with chilled air. To avoid this it is better to store food in the covered container.
- It is desirable to store moist food (especially vegetable and fruit) in the vegetable storage compartment. If it is necessary to store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by the cool circulating in the refrigerator.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh, and always store them in a up-right position, which keeps them fresh longer.

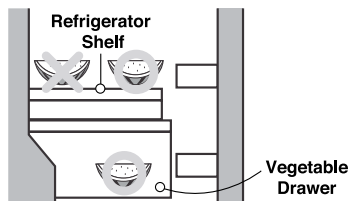

CLEANING

It is important that your refrigerator is kept clean to prevent undesirable odors. Spilled food should be wiped immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR -Regular cleaning of the interior and interior parts is recommended. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays and magnetic door seals etc. Use a lukewarm solution of mild soap or dish washable solution to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning. Wipe excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing electric shock. Do not use flammable or toxic cleaning liquids.

- Caution for Cleaning - Not to use : Surface active agent, Car wax, Anti-corrosive, All sorts of oil, Gasoline, Acids, Wax.
- Mild detergents, dish washable solutions and soapy water can be used
- Careless usage can lead to colour change.

Caution


1. Use lukewarm water when cleaning.
2. Water Tank: Do not use anything other than water. If any other liquid is used, please rinse the tank three to four times with water.

CLEANING

WATER DISPENSER (OPTIONAL)

Grille -

Wipe with a clean, damp cloth and then dry using dry cloth.




Water Tank -

1. Water Filling

It is not necessary to remove the water tank in order to fill it (it can be filled by opening the water tank cap).

NOTE

- Before closing door, close the cap and clamp tightly.
- Do not use liquids containing sugar or carbonated drinks.

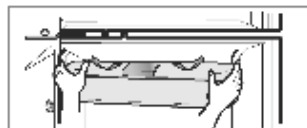

2. Disassembly

Lift the water tank, gripping a side and bottom of water tank.


NOTE

Before disassembly of water tank, drain all water from the dispenser




3. Assembly

If by some cause the water tank is dislocated, place it again at its original position. Verify that the valve is assembled correctly in the hole of the door. Once assembled push down and check the tank position with line.

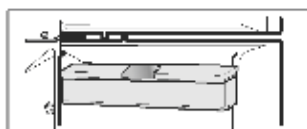


Water Tank -


1. Remove the tank cover.

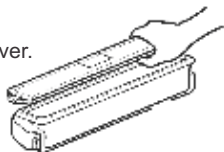

2. Clean the inside and outside of the water tank with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.



3. Clean the inside and outside of the cover and cap with dishwashing detergent and rinse thoroughly under running water. Dry the water with a cloth.

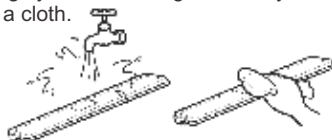

4. Assemble the cover with tank and clamp it with the help of snaps provided, further assemble it in refrigerator door

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

IF YOU MOVE

Remove or securely fasten down all loose items inside the refrigerator.

To avoid damaging the leveling screw(s), turn them all the way into the base.


ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.

This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent "sweating" on the outer cabinet wall.

Anti-Condensation Pipe

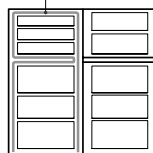

Caution

Electrical Shock Hazard

Before replacing a burned-out light bulb, either unplug the refrigerator or turn off power at the circuit breaker or fuse box.

NOTE: Moving the control to the OFF position does not remove power to the light circuit.

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

ACCESSIBILITY OF SUPPLY PLUG

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection when accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT GROUNDING (EARTHING)


In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

DO NOT MODIFY OR EXTEND THE POWER CORD LENGTH.

It will cause electric shock or fire.

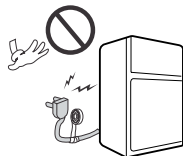

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids or the entire door from your unused appliance, or take some other action to make it harmless.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store inflammable materials, explosives or chemicals in the refrigerator.

Disposal of the old appliance

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable.

All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

"This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance."

BEFORE CALLING FOR SERVICE

SERVICE CALLS CAN OFTEN BE AVOIDED!

IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	• Has a house fuse blown or circuit breaker tripped? • Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	• Temperature control not set on proper position. • Appliance is placed close to wall or heat source. • Warm weather-frequent door openings. • Door left open for a long time. • Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	• Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. • Unnecessary objects placed in the back side of the refrigerator.
REFRIGERATOR HAS ODOR	• Foods with strong odors should be tightly covered or wrapped. • Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	• Not unusual during periods of high humidity. • Door may have been left ajar.


विषय-वस्तु

सुरक्षा संबंधी महत्वपूर्ण जानकारी	2
संस्थापन	9
आंतरिक भाग	10
प्रचालन	12

GL-549/529/479/548/528/478/542/522/472

आरंभ करना
तापमान नियत करने से पहले
दरवाजे का अलार्म
स्वयं जांच करना
फ्रीजर वाले कंपार्टमेंट के लिए कंट्रोल
रेफ्रिजरेटर वाले कंपार्टमेंट के लिए कंट्रोल
सुपर कूल
बच्चों के लिए लॉक (वैकल्पिक)
ग्रीन आयन डोर कूलिंग (वैकल्पिक)
बर्फ जमाना (वैकल्पिक)
परिवर्तनशील कोना / फ्रैश ज़ोन
सब्जियों वाली दराज
डिफ्रॉस्ट करना
दुर्गंधमुक्त करना (वैकल्पिक)
दुग्ध उत्पादों वाला कोना (वैकल्पिक)
वॉटर डिस्पेंसर (वैकल्पिक)

खाद्य-पदार्थों के भंडारण के लिए सुझाव	18
साफ करना	19
सामान्य जानकारी	21
महत्वपूर्ण चेतावनी	22
सेवा के लिए कॉल करने से पहले	23

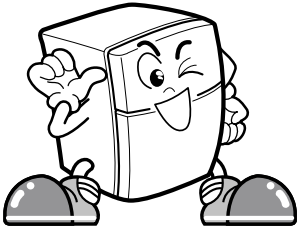

सुरक्षा संबंधी महत्वपूर्ण जानकारी

चेतावनी

-  उपकरण के अंदर वायुसंचार द्वार खुला रखें।
-  निर्माता के द्वारा सुझावित उपकरण के अलावा किसी भी बाहरी यांत्रिक उपकरण का प्रयोग डिफ्रॉस्टिंग प्रक्रिया की तेजी लाने के लिए ना करें।
-  शीतलक संचार परिपथ को क्षतिग्रस्त ना करें।
-  उपकरण के खाद्य भंडारण खण्ड के अंदर किसी भी विद्युतीय उपकरण को प्रयोग ना करें। जब तक कि वह निर्माता द्वारा सुझावित किया गया है।
-  उपकरण मे प्रयोग किया गए शीतलक एवम् तापावरोधन रसाव गैस को विशेष निपटान प्रक्रिया की जरूरत होती हैं, निघटान के दौरान कृपया प्रतिनिधि अथवा समतुल्य योग्य व्यक्ति से परामर्श लें।

सुरक्षा संबंधी बुनियादी सावधानियां

इस निर्देशिका में सुरक्षा संबंधी अनेक महत्वपूर्ण संदेश दिए गए हैं। हमेशा सुरक्षा संबंधी सभी संदेश पढ़ें और उनका पालन करें।

 यह सुरक्षा संबंधी सतर्कता को दर्शाने वाला चिन्ह है। यह आपको सुरक्षा संदेशों के प्रति सतर्क करता है जिनसे आपको उन खतरों की जानकारी मिलती है जिनसे आपकी या दूसरों की मृत्यु हो सकती है अथवा चोट लग सकती है या उत्पाद को क्षति पहुंच सकती है। सभी सुरक्षा संदेशों के पहले सुरक्षा संबंधी सतर्कता को दर्शाने वाला चिन्ह बना होगा और खतरे का संकेत देने वाले शब्द खतरा, चेतावनी या सावधानी लिखे होंगे। इन शब्दों के अर्थ इस प्रकार हैं :

	खतरा	यदि आप निर्देशों का पालन न करें तो आपकी मृत्यु हो सकती है या आपको गंभीर चोट लग सकती है।
	चेतावनी	यदि आप निर्देशों का पालन न करें तो आपकी मृत्यु हो सकती है या आपको गंभीर चोट लग सकती है।
	सावधानी	किसी आसन्न तौर पर होने वाली खतरनाक स्थिति को दर्शाता है जिनके परिणामस्वरूप, यदि बचाव नहीं किया गया, छोटी-मोटी या औसत चोट लग सकती है, या सिर्फ उत्पाद को क्षति पहुंच सकती है।

सुरक्षा संबंधी सभी संदेश खतरों को चिन्हित करेंगे, जो आपको बताते हैं कि आप चोट लगने की आशंका को कैसे कम कर सकते हैं, और आपको बताते हैं कि यदि निर्देशों का पालन नहीं किया गया तो क्या हो सकता है।



* R600a गैस का प्रयोग किये गए रेफ्रिजरेटर के लिए सुरक्षा संबंधी महत्वपूर्ण जानकारी -

इस उपकरण में (आइसोब्यूटेन R600a) का प्रयोग किया गया है। यह प्राकृतिक गैस उच्च पर्यावरण अनुकूलित है, परंतु ये दहेनशील भी है। परिवहन और स्थापना करते समय सुनिश्चित करें, की रेफ्रिजरेट सर्किट का कोई भी हिस्सा क्षतिग्रस्त ना हो, यह होने से रेफ्रिजरेट लिक हो सकता है जिसे आग लगने की संभावना या आँखें क्षतिग्रस्त हो सकती है। यदि किसी भी प्रकार के रिसाव का पता चलें तो आग और कोई भी इन्निशन स्रोत को दूर रखें और रेफ्रिजरेटर की पासवाली जगह को खुली रखें।

यदी रेफ्रिजरेटर लिक होता है, तो गैस और हवा के मिश्रण को रोखने के लिए कमरे का एरिया $1\text{m}^3/8\text{gms}$ (R600a) होनी चाहिए। रेफ्रिजरेटर की मात्रा पहचान प्लेटपर दर्शायी गई है। किसी भी प्रकार के नुकसान होने के लक्षण पर उपकरण को शुरु ना करें और समस्या होने पर डिलर से सम्पर्क करें।

सुरक्षा संबंधी महत्वपूर्ण जानकारी

अपने पुराने उपकरण का निपटारा (उत्पाद ई-अपशिष्ट के अनुसार)



1. जब यह काटे गये पहिये वाले बिन का चिह्न किसी उत्पाद के साथ संलग्न होता है तो इसका अर्थ है उत्पाद ई-अपशिष्ट (प्रबंधन और हथालन) नियम 2011 के अंतर्गत सम्मिलित किया गया है। इस नियम के अनुसार उत्पाद को पुनः नवीनीकरण तथा द्रुत या निपटारा चाहिए।

2. करें -

क. उपकरण को सिर्फ अधिकृत पुनः नवीनीकरणकर्ता को ही निपटारने हेतु ही हस्तान्तरित करें।

ख. उपकरण कार्यात्मक ना रहे तो, उपकरण को पृथक क्षेत्र में ही रखें, जिससे कि उपकरण आकस्मिक दुर्घटना से बचे रहें।

ना करें -

क. उपकरण को स्वयं नहीं खोलना चाहिए, केवल अधिकृत कर्मचारी द्वारा ही खोला जाना चाहिए।

ख. उपकरण को अनाधिकृत एजेंसी/कबाड़ीवाले को नहीं देना चाहिए।

ग. उपकरण को दूसरे घरेलू अपशिष्ट के साथ नहीं रखा जाना चाहिए।

घ. उपकरण के बदले हुए या अतिरिक्त पूर्णों को खुले क्षेत्र में ना रखें।

3. उत्पाद का किसी भी अनाधिकृत एजेंसी द्वारा निपटारण, पर्यावरण (प्रोटेक्शन) अधिनियम 1986 के अधीन आता है।

4. दुर्घटनाग्रस्त टूट फूट तथा अव्यवस्थित रख-रखाव से बचाव।

क. रेफ्रिजरेटर (R134a) यदि सम्पर्क में अधिक आता है तों, चक्कर आना व एकाग्रता में बाधा उत्पन्न हो सकती है, तरल पदार्थ का सीधा सम्पर्क, शीतदंश व जलन का कारण हो सकता है। इसी प्रकार रेफ्रिजरेटर (R 600a) का पाईपों से रिसाव होने से आग लग सकती है तथा आँखें भी खराब हो सकती है।

ख. साइक्लोपेन्टेन अत्यन्त ज्वलनशील तरल व बाष्पीय होने के कारण उद्दित जीवन के लिए काफी नुक्सान देह हो सकता है। तरल पदार्थ के सम्पर्क में आने पर ठण्डी जलन तत्ता बार बार सम्पर्क में आने से त्वचा शुष्क हो सकती है।

5. उपरोक्त उत्पाद के निपटारण के लिए कृपया अपने नजदीकी केन्द्र की जानकारी के लिए टोल फ्री नम्बर 1800-180-9999 पर सम्पर्क करें। सभी संग्रह केन्द्र व पिक-अप सुविधाएं बाहरी एजेंसी द्वारा चलायी जाती हैं। LG Electronics India Pvt. Ltd. सिर्फ एक सुविधाएं प्रदान करने का माध्यम हैं।

अधिक जानकारी के लिए देखें वेबसाइट : <http://www.lge.com/in>


चेतावनी

अपने उत्पाद का प्रयोग करते हुए आग लगने, बिजली का झटका खाने, या लोगों के चोटग्रस्त होने के खतरों को कम करने के लिए सावधानियों का पालन किया जाना चाहिए, जिसमें निम्नलिखित शामिल हैं। इस उपकरण का प्रयोग करने से पहले सभी दिशा-निर्देशों को पढ़ें।

1. पॉवर से जोड़ते समय

खासकर इसी उत्पाद के लिए बनाए गए आउटलेट का प्रयोग किया जाना चाहिए।

- एक ही आउटलेट पर कई उपकरणों का प्रयोग करने पर आग लग सकती है।
- विद्युतीय रिसाव का अवरोधक खाद्य-पदार्थों को नुक्सान पहुंचा सकता है और डिस्पेंसर से रिसाव हो सकता है।




पॉवर पहुंचाने वाले तार को मुड़ी स्थिति में न रहने दें या किसी भारी वस्तु के दबाव से नुक्सान न पहुंचने दें।

इससे पॉवर पहुंचाने वाले तार को नुक्सान पहुंच सकता है जिससे आग या बिजली का झटका लग सकता है।



पॉवर प्लग को उल्टी दिशा में न लगाएं या इसे रेफ्रिजरेटर के पीछे एकदम दबा न दें।

प्लग के भीतर पानी बहकर जा सकता है या प्लग को क्षति पहुंच सकती है, जिससे आग या बिजली का झटका लग सकता है।

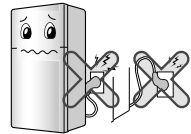

पॉवर प्लग के साथ लगे तार की लंबाई को काट-छाँटकर लंबा या छोटा न करें।

पॉवर पहुंचाने वाले तार या अन्य चीजों को विद्युतीय क्षति से बिजली का झटका या आग लग सकती है।




रेफ्रिजरेटर के अंदरूनी लैंप को साफ करने, संभालने या बदलने के समय पॉवर प्लग को निकाल लें।

- इससे बिजली का झटका या चोट लग सकती है।
- रेफ्रिजरेटर के अंदरूनी लैंप को बदलते समय यह सुनिश्चित कर लें कि विद्युतीय स्फूर्लिंग को रोकने के लिए साँकेट के अंदर लगे खबर के छल्ले को उसकी जगह से नहीं निकाला गया है।



मीले हाथों से तार को न खींचें या पॉवर प्लग को न छुएं।

- इससे बिजली का झटका या चोट लग सकती है।



सुरक्षा संबंधी महत्वपूर्ण जानकारी

1. पॉवर से जोड़ते समय


पॉवर प्लग से पानी और धूल साफ करें और इसके पिनों के सिरों को अच्छी तरह घुसाकर इसे डालें।

धूल, पानी या ढीले कनेक्शन के कारण आग या बिजली का झटका लग सकता है।




ग्राउंडिंग होना सुनिश्चित करें।

गलत ढंग से हुई ग्राउंडिंग के कारण ब्रेकडाउन हो सकता है और बिजली का झटका लग सकता है।

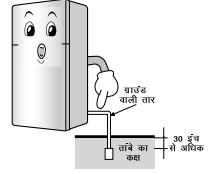

पॉवर पहुंचाने वाली तार या पॉवर प्लग के क्षतिग्रस्त होने पर या आउटलेट के छेद ढीले होने पर, उनका प्रयोग न करें।

इससे बिजली का झटका लग सकता है या शॉर्ट सर्किट होने से आग लग सकती है।

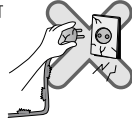

2. रेफ्रिजरेटर का प्रयोग करते समय

रेफ्रिजरेटर पर कोई भारी वस्तु या खतरनाक वस्तु (द्रव से भरा कोई पात्र) न रखें।

दरवाजे को खोलते या बंद करते समय यह गिर सकता है जिससे चोट, आग या बिजली का झटका लग सकता है।



दरवाजे या दरवाजे के शेल्फों या फ्रीजर के होम बार या कूल चेंबर से लटककर न झूलें।

इससे रेफ्रिजरेटर गिर सकता है या हाथों को नुकसान पहुंच सकता है। खासकर, बच्चों को उपरोक्त चीजें न करने दें।




रेफ्रिजरेटर को किसी गीले या ऐसे स्थान पर संस्थापित न करें जहां पानी या बरसात के छींटे आते हों।

बिजली के पुर्जों के इंसुलेशन का क्षरण होने के कारण बिजली का रिसाव हो सकता है।



रेफ्रिजरेटर के पास या अंदर ज्वलनशील पदार्थ ईथर, बेंजीन, अल्कोहल, दवा, एलपी गैस, स्प्रे या कॉस्मेटिक्स का प्रयोग या भंडारण न करें।

इससे विस्फोट हो सकता है या आग लग सकती है।

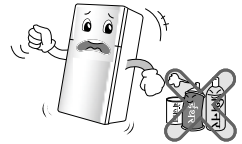

दुर्गंध दूर करने के लिए रेफ्रिजरेटर के अंदर जलती हुई मोमबत्ती न रखें।

इससे विस्फोट हो सकता है या आग लग सकती है।



रेफ्रिजरेटर में दवा या अकादमिक पदार्थों का भंडारण न करें।

जब पूर्वनिर्धारित नियंत्रित तापमान पर रखे जाने वाले पदार्थ को भंडारित किया जाता है, तो यह क्षति हो सकता है या यह कोई ऐसी अप्रत्याशित प्रतिक्रिया कर सकता है जिससे खतरा हो।




सुरक्षा संबंधी महत्वपूर्ण जानकारी

2. रेफ्रिजरेटर का प्रयोग करते समय


रेफ्रिजरेटर के पास कोई दहनशील
छिड़काव न करें

इससे आग लग सकती है।

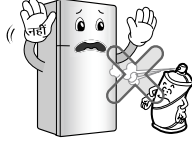

गर्म करने वाले उपकरणों को इसके पास
रखने से बचें।

इससे आग लग सकती है।

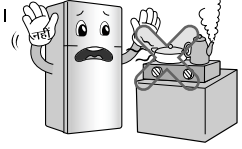


रेफ्रिजरेटर के ऊपर फूलों का गमला,
कप, कॉस्मेटिक्स, दवा या पानी से
भरा कोई पात्र न रखें।

इससे आग या बिजली का झटका लग
सकता है या इसके गिरने से चोट
लग सकती है।



द्रवों से भीगे रेफ्रिजरेटर का प्रयोग करने
से पहले इसकी जांच कर लें।

इससे बिजली का झटका या
आग लग सकती है।

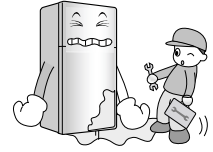

जब गैस का रिसाव हो, तो रेफ्रिजरेटर या आउटलेट को न
छुएं और कमरे में तुरंत हवा आने-जाने दें।


1) गैस (R134a) – इस्तेमाल करते समय / डिलीवरी / इन्स्टॉलेशन
यदी इस्तेमाल की टेड्राफ्ल्यूरोथीन (R134a) गैस थोड़ी मात्रा में लिक हो
रही हैं। तो वो गैस पर्यावरण को घातक नहीं है और ज्वलनशील नहीं है।
मगर यह आपके त्वचा को घातक है और आँख को क्षति पहुंचाती है।
इसलिए रेफ्रिजरेटर की पासवाली जगह को खुली रखें।

2) गैस (R600a) – चूंकि इस रेफ्रिजरेटर में पर्यावरण को नुकसान न
पहुंचाने वाले रेफ्रिजरेटर के रूप में
प्राकृतिक गैस (आइसोब्यूटेन

R600a) का प्रयोग किया जाता
है, इसलिए थोड़ी मात्रा (80~90
ग्रा.) भी ज्वलनशील होती है।


जब रेफ्रिजरेटर की डिलीवरी
करने, संस्थापित करने या उसका

इस्तेमाल करने के दौरान गंभीर क्षति के कारण गैस का रिसाव होता है, तो
किसी भी चिंगारी से आग लग सकती है या आप जल सकते हैं।

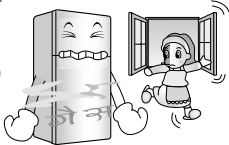


रेफ्रिजरेटर के बाहर या भीतर पानी स्प्रे न
करें या उसे बेंजीन या थिनर से साफ
न करें।

बिजली के पुर्जों के इंसुलेशन के
खराब होने से बिजली का झटका
या आग लग सकती है।

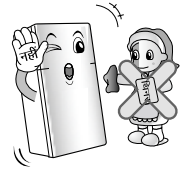

जब रेफ्रिजरेटर से किसी अजीब गंध या
धुआं निकलने का पता चले, तो पॉवर प्लग
को तुरंत अलग कर दें और
सर्विस सेंटर से संपर्क करें।

इससे आग लग सकती है।

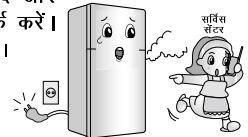


सुरक्षा संबंधी महत्वपूर्ण जानकारी

2. रेफ्रिजरेटर का प्रयोग करते समय

प्रशिक्षित इंजीनियर के अलावा किसी अन्य व्यक्ति को रेफ्रिजरेटर के हिस्से अलग करने, मरम्मत करने या उसमें फेर-बदल करने की अनुमति न दें।

इससे चोट, बिजली का झटका या आग लग सकती है।

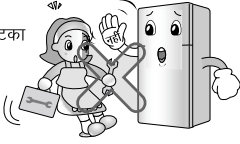


रेफ्रिजरेटर का निस्तारण करते समय, दरवाजे से पैकिंग मैटीरियल को निकाल दें।

इसके कारण कोई बच्चा भीतर बंद हो सकता है।



हाथों या धातु की छड़ी को ठंडी हवा के निकास, कवर, रेफ्रिजरेटर की तली, या पीछे की ओर ऊष्मारोधी ग्रिल (एक्जॉस्ट होल) के भीतर न डालें।

इससे बिजली का झटका या चोट लग सकती है।

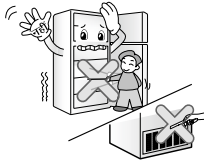

गड़गड़ाहट एवम् आकाशीय विद्युत चालन या लम्बे समय के दौरान उपयोग ना आने पर पाव प्लग को अलग करें।




पिछले भाग के आवरण को अलग ना करें।




रेफ्रिजरेटर का इस्तेमाल गैर-घरेलू उद्देश्य (दवाएं या परीक्षण सामग्री का भंडारण, जहाज में इस्तेमाल आदि) न करें।

इससे आग, बिजली का झटका, भंडारित सामग्री के खराब होने या रासायनिक अभिक्रिया जैसा कोई अप्रत्याशित जोखिम हो सकता है।

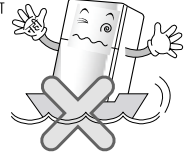

रेफ्रिजरेटर को ठोस और बराबर सतह वाले फर्श पर स्थापित करें।

इसे अस्थिर स्थान पर स्थापित करने से दरवाजा खोलने या बंद करते समय रेफ्रिजरेटर गिर जाने से मौत भी हो सकती है।

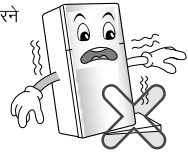


आपके पुराने प्रशीतक यंत्र का निघटान


आपके शीतलक में मौजूद द्रव पुनरावृत्ति पदार्थ से बना है। ऐसे सभी पदार्थ अनिवार्य रूप से पुनरावृत्ति अपशिष्ट निघटान स्थान भेजे, वे पदार्थ पुनरावृत्ति प्रक्रिया के पश्चात पुनः उपयोग में लाए जा सकते हैं।



पावर कनेक्ट करने से पहले सारा सामान सही जगह पें रखें।

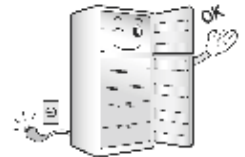

किसी प्रकार के भाग सुत्र को Fridge उपर ना रखें।

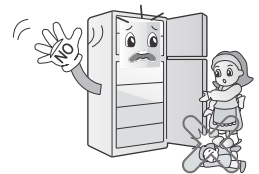

सुरक्षा संबंधी महत्वपूर्ण जानकारी

सावधानी

इस निर्देश का उल्लंघन करने से चोट लग सकती है या घर अथवा फर्नीचर को नुकसान पहुंच सकता है। कृपया, हमेशा सावधानी बरतें।

फ्रीजर में खाद्य-पदार्थ या पात्रों को गीले हाथों से न छुएं।

इससे आपके हाथों को जम जाने के कारण नुकसान पहुंच सकता है।



प्लग दुबारा लगाते समय 5 मिनट या इससे अधिक इंतजार करें।

इससे फ्रीजर का प्रचालन नाकाम हो सकता है।



बोतल को फ्रीजर में न रखें।

इससे भीतर की सामग्री जम जाने से बोतल टूट सकती है और आपको चोट लग सकती है।




पॉवर प्लग को तार से पकड़कर नहीं, बल्कि प्लग के सिरे को पकड़कर बाहर खींचें।

इससे बिजली का झटका लग सकता है या शॉर्ट सर्किट के कारण आग लग सकती है।



रेफ्रिजरेटर को इस तरह उठाकर ले जाएं कि हैंडल बार सामने नीचे की ओर हो और ऊपरी भाग पीछे हो।

अन्यथा, आपके हाथ फिसलने से चोट लग सकती है।

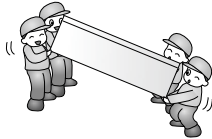


रेफ्रिजरेटर की तली में अपने हाथ न डालें।

तली की लोहे की प्लेट से चोट लग सकती है।



रेफ्रिजरेटर के दरवाजे को खोलने या बंद करने से आस-पास के व्यक्ति को चोट लग सकती है, इसलिए कृपया सावधानी बरतें।

दरवाजे को खोलने या बंद करने से हाथ या पैर दरवाजे की दरार में फंस सकते हैं या बच्चे को कोने से चोट लग सकती है।

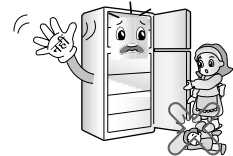

सुरक्षा संबंधी महत्वपूर्ण जानकारी


किसी जीवित पशु को प्रशीतक के अन्दर ना छोड़ें ।




दरवाजे का सहारा ना लें, कब्जे स्वतः नियंत्रण से बाहर हो सकते हैं, इससे हवा का रिसाव होगा जो कि उपकरण के प्रदर्शन को क्षय करता हैं ।



कार्बोनेटेड जल का प्रयोग ना करें । वायु दबाव से रिसाव हो सकता हैं ।

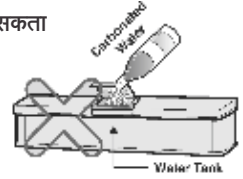

पानी टंकी को अनुदेश के अनुसार साफ करें ।

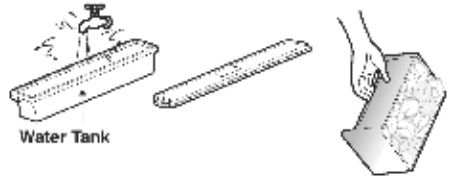


मसाला बाक्स और अन्य movable चीजों को नीकालते समय ध्यान रखें ।

गीरने से टूटने की सम्भावना हैं ।



केवल जल का प्रयोग करें । किसी अन्य द्रव के उपयोग से उपकरण का संचालन क्षय हो सकता है । यदि जल के अलावा किसी अन्य द्रव के उपयोग से किसी तरह की परेशानी होती है, तो निर्माता इस परेशानी के लिए उत्तरदायी नहीं होगा ।

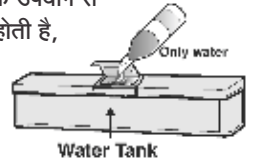

⚠ चेतावनी

कृपया निचले दराज को साफ करने के लिए डिशवाशर का प्रयोग ना करें, उच्च तापमान दराज को क्षति पहुंचा सकता हैं जिससे दराज व्यर्थ हो जाएगा ।

इस रेफ्रिजरेटर को अत्यंत सावधानी से बनाया गया है, और इसमें नवीनतम प्रौद्योगिकी का प्रयोग किया गया है।

हमें विश्वास है कि आप इसके प्रदर्शन और विश्वसनीयता से पूर्ण संतुष्ट होंगे।

अपना रेफ्रिजरेटर चालू करने से पहले, कृपया इस पुस्तिका को सावधानी से पढ़ें।

इसमें संस्थापन, प्रचालन और रख-रखाव के लिए सटीक निर्देश दिए गए हैं, और कुछ उपयोगी सुझाव भी शामिल हैं।

संस्थापन

1. एक अच्छा स्थान चुनें।

अपने रेफ्रिजरेटर को ऐसे स्थान पर रखें जहां उसका प्रयोग करना आसान हो।

2. यूनिट को गर्मी के स्रोतों, सीधी धूप या नमी के निकट रखने से बचें।

3. फ्रिज के फ्रीजर के इर्द-गिर्द हवा का उचित प्रवाह सुनिश्चित करने के लिए कृपया अगल-बगल और ऊपर पर्याप्त स्थान रखें और पीछे की दीवार से कम से कम 2 इंच (5 सेमी) की दूरी रखें।

4. कंपनों से बचने के लिए यूनिट समतल होनी चाहिए। यदि आवश्यक हो, तो फर्श की असमानता की भरपाई के लिए तल बराबर करने वाले पैचों को छोटा-बड़ा करें। अगला भाग पिछले से हल्का-सा ऊंचा होना चाहिए ताकि दरवाजा आसानी से बंद हो। कैबिनेट को हल्का-सा झुकाकर तल बराबर करने वाले पैचों को आसानी से घुमाया जा सकता है। यूनिट को उठाने के लिए पैचों को बाएं से दाएं (→) घुमाएं, उसे नीचा करने के लिए दाएं से बाएं (←) घुमाएं।

5. इस उपकरण को 5 °C से कम पर संस्थापित न करें। इससे रेफ्रिजरेटर का डिबेसमेंट हो सकता है।


अगला

1. अपने रेफ्रिजरेटर को अच्छी तरह साफ करें और परिवहन के दौरान इकट्ठा हुई सारी धूल पोंछ दें।

2. आइस क्यूब बॉक्स आदि जैसी एक्सेसरीज़ को उनके उचित स्थानों पर लगा दें। उन्हें परिवहन के दौरान संभावित क्षति से बचने के लिए एक साथ पैक किया जाता है।

3. पॉवर सप्लाय वाले तार (या प्लग) को आउटलेट में कनेक्ट करें। उसी आउटलेट पर कोई अन्य उपकरण न लगाएं।

4. खाद्य-पदार्थ भंडारित करने से पहले, अपने रेफ्रिजरेटर को चालू करके 2 या 3 घंटे के लिए छोड़ दें। उचित कूलिंग सुनिश्चित करने के लिए फ्रीजर कंपार्टमेंट में ठंडी हवा के प्रवाह की जांच करें। आपका रेफ्रिजरेटर अब प्रयोग के लिए तैयार है।

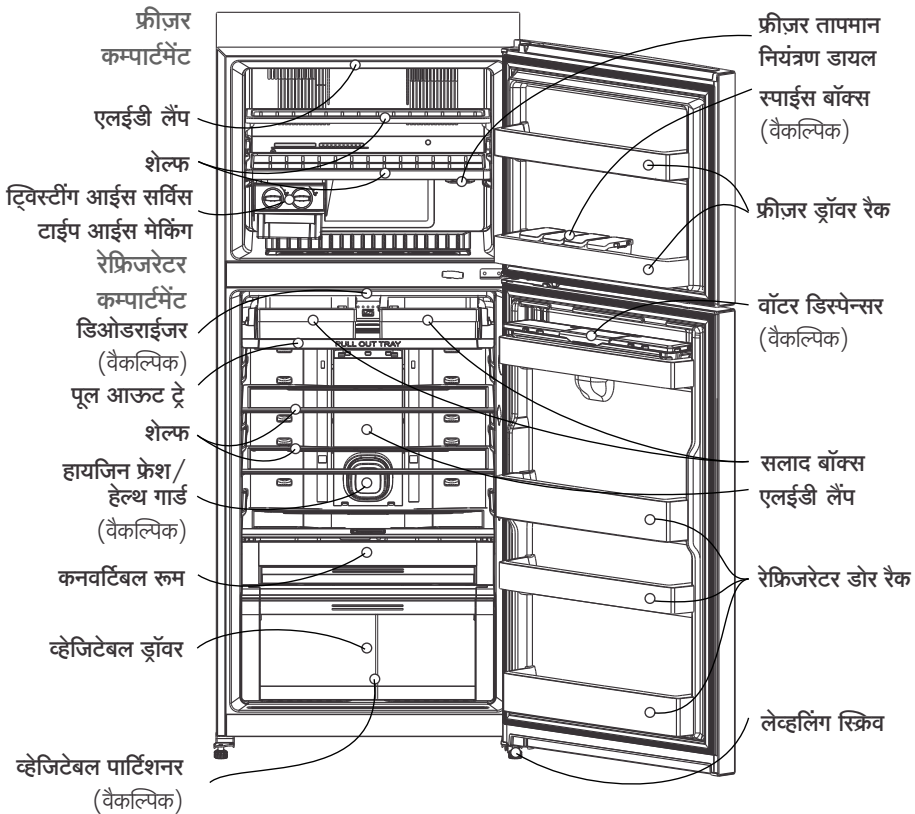


नोट

- यह निर्देशिका कई अलग-अलग मॉडलों के लिए है। आपने जो रेफ्रिजरेटर खरीदा है उसमें ऊपर दी गई कुछ या सभी विशेषताएं हो सकती हैं।

ऊर्जा बचत हेतु सुझाव

- कृपया लम्बे समय के लिए दरवाजे को खुला ना छोड़ें, दरवाजे को कम से कम समय में बंद करें।
- बहुत अधिक खाद्य न रखने की सलाह दी जाती है। ठंडी हवा के स्वतंत्र परिसंचरण के लिए पर्याप्त स्थान रखें।
- प्रशीतक को जरूरत से कम तापमान में नियत ना करें। खाद्य पदार्थ को तापमान ज्ञानेंद्री के करीब ना रखें।
- खाद्य पदार्थ को संग्रहण से पूर्व ठंडा होने दें। गर्म खाद्य को फ्रीजर में रखने से यह अन्य खाद्य को खराब कर सकता है की अधिक विद्युत बिल के लिए उत्तरदायी होगा।
- खाद्य पदार्थ से वायु छिद्र को अवरोध ना करें। निर्विदन ठंडी हवा का परिसंचरण फ्रीजर के तापमान को समान रखता है।
- दरवाजे को बारंबार ना खोलें। दरवाजे के खुलने से गर्म हवा फ्रीजर के अंदर प्रवाहित होकर तापमान को बढ़ाती हैं।

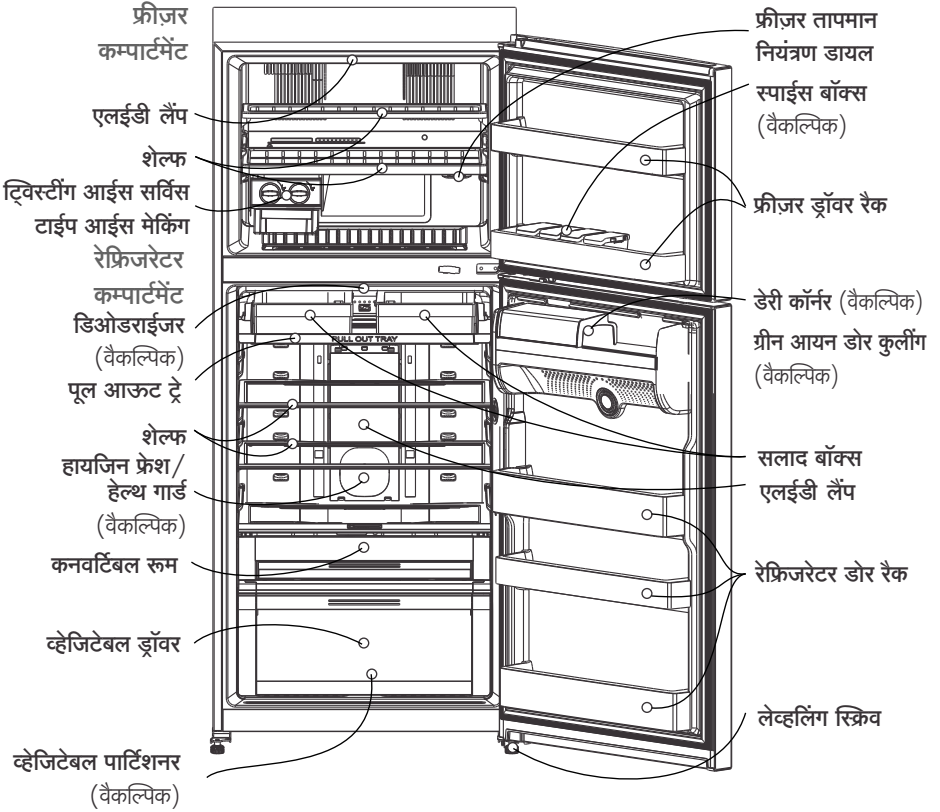

नोट

- यह निर्देशिका कई अलग-अलग मॉडलों के लिए है। आपने जो रेफ्रिजरेटर खरीदा है उसमें ऊपर दी गई कुछ या सभी विशेषताएं हो सकती हैं।

ऊर्जा बचत हेतु सुझाव

- कृपया लम्बे समय के लिए दरवाजे को खुला ना छोड़ें, दरवाजे को कम से कम समय में बंद करें।
- बहुत अधिक खाद्य न रखने की सलाह दी जाती है। ठंडी हवा के स्वतंत्र परिसंचरण के लिए पर्याप्त स्थान रखें।
- प्रशीतक को जरूरत से कम तापमान में नियत ना करें। खाद्य पदार्थ को तापमान ज्ञानेंद्री के करीब ना रखें।
- खाद्य पदार्थ को संग्रहण से पूर्व ठंडा होने दें। गर्म खाद्य को फ्रीजर में रखने से यह अन्य खाद्य को खराब कर सकता है की अधिक विद्युत बिल के लिए उत्तरदायी होगा।
- खाद्य पदार्थ से वायु छिद्र को अवरोध ना करें। निर्विघ्न ठंडी हवा का परिसंचरण फ्रीजर के तापमान को समान रखता है।
- दरवाजे को बारंबार ना खोलें। दरवाजे के खुलने से गर्म हवा फ्रीजर के अंदर प्रवाहित होकर तापमान को बढ़ाती हैं।

चालू करना

जब आपका रेफ्रिजरेटर पहली बार संस्थापित किया जाता है, तो उसमें ताजे या फ्रोज़न खाद्य-पदार्थ भरने से पहले उसे सामान्य प्रचालन तापमान पर 7-8 घंटे तक स्थिर होने दें।

यदि प्रचालन बाधित होता है, तो दुबारा चालू करने से पहले 5 मिनट इंतजार करें।

तापमान निर्धारित करने से पहले

- कमरे के तापमान में चाहे जो भी बदलाव हों, रेफ्रिजरेटर के तापमान को स्थिर रखा जाता है। यह संस्तुति की जाती है, कि एक बार निर्धारित करने के बाद, तापमान की सेटिंग (रेफ्रिजरेटर और फ्रीजर कंपार्टमेंट के कंट्रोल) तब तक न बदली जाए जब तक ऐसा करना आवश्यक न हो।
- इस रेफ्रिजरेटर में रेफ्रिजरेटर कंपार्टमेंट के लिए एक तापमान नियंत्रण बटन और फ्रीजर कंपार्टमेंट के लिए एक तापमान नियंत्रण डायल है।
- रेफ्रिजरेटर कंपार्टमेंट के लिए तापमान नियंत्रण बटन की डिफॉल्ट सेटिंग '3°C' है।
- * फ्रीजर कंपार्टमेंट के लिए तापमान नियंत्रण डायल की डिफॉल्ट सेटिंग '3/1/5' है।
- इस रेफ्रिजरेटर के रेफ्रिजरेटर कंपार्टमेंट में एक तापमान सेंसर है। यह आवश्यकतानुसार स्वचालित ढंग से कंप्रेसर को आरंभ करेगा और रोक देगा।

डोर अलार्म




जब रेफ्रिजरेटर या फ्रीजर का दरवाजा 1 मिनट या इससे अधिक समय तक खुला रह जाए, तो तीन बार अलार्म बजेगा। यदि दरवाजा खुला रहता है, तो हर 30 सेकंड बाद अलार्म दुबारा बजेगा।

खुद जांचें



- आपके रेफ्रिजरेटर में गड़बड़ियों का पता लगाने की क्षमता निहित है। यदि कुछ खास क्षेत्रों में इसमें कोई गड़बड़ी आती है, तो यह मरम्मत करने वाले टेक्नीशियन की सहायता के लिए एक त्रुटि कोड दर्शाएगा। जब तक त्रुटि कोड प्रदर्शित होता रहेगा, अन्य कंट्रोल एवं डिस्प्ले फंक्शन काम नहीं करेंगे।
- यदि कोई त्रुटि कोड प्रदर्शित होता है, तो किसी सर्विस सेंटर से संपर्क करें। पॉवर कॉर्ड को आउटलेट से अलग न करें।

फ्रीजर कंपार्टमेंट के लिए कंट्रोल

- कंट्रोल सेटिंग की संख्या जितनी ऊंची होगी, फ्रीजर कंपार्टमेंट का तापमान उतना ही कम हो जाएगा।
- चूंकि रेफ्रिजरेटर और फ्रीजर कंपार्टमेंट्स का तापमान ठंडी हवा की एक निश्चित मात्रा से नियंत्रित होता है, इसलिए यदि फ्रीजर कंपार्टमेंट अधिक ठंडा होगा तो रेफ्रिजरेटर कंपार्टमेंट थोड़ा गर्म हो जाएगा।
- जब फ्रीजर कंपार्टमेंट सर्दियों के मौसम में पर्याप्त ठंडा नहीं हो, तो फ्रीजर के कंट्रोल को हाई (4-7) पर कर दें।

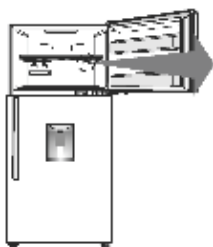

GL-529**/GL-549**
GL-528**/GL-548**
GL-542**/GL-522**




GL-478**/GL-479**
GL-472**

- फ्रीजर नॉब को  पर सेट करने से 4/5 STAR की सेटिंग पूरी हो जाएगी। फ्रीजर नॉब को NORMAL पर सेट करने से पर्याप्त फ्रीजिंग प्रभाव पैदा होगा, इसलिए नॉब को NORMAL पर सेट करने की संस्तुति की जाती है।

* मॉडेल के प्रकार अनुसार लागू

रेफ्रिजरेटर टेम्परेचर को नियंत्रण

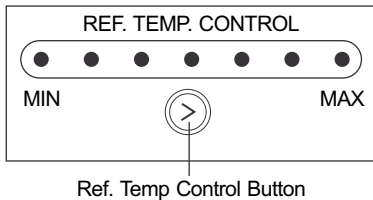

रेफ्रिजरेटरका टेम्परेचर फॅक्टरीमे प्रस्थापित किया है और बटन रेफ्रिजरेटर के कंपार्टमेंटमें NORMAL स्थितीमें है ।

रेफ्रिजरेटर टेम्परेचर को नियंत्रित करनेके लिए REF TEM CONTROL बटन को दबाईए ।

बटन दबानेपर LEDs प्रस्थापित होगा ।

टेम्परेचर को सात स्तर मे प्रस्थापित कर सकते हो - MIN से MAX तक ।

❑ रेफ्रिजरेटर कंपार्टमेंट के लिए कंट्रोल

डिस्प्ले ग्राफिक आपके रेफ्रिजरेटर के प्रकार के अनुसार अलग-अलग हो सकता है ।

• Display a



• Display b



- रेफ्रिजरेटर का तापमान नियंत्रित करने के लिए 'REFRIGERATOR' बटन दबाएं ।
- जब कभी बटन दबता है, तो LED से रोशनी निकलती है ।
- Health Guard/Hygiene Fresh चलाने के लिए Health Guard/Hygiene Fresh बटन दबाएं ।
- LED की रोशनी से जो संख्या प्रदर्शित होती है वह रेफ्रिजरेटर कंपार्टमेंट के तापमान को दर्शाती है ।
- आप '0 °C' से '6 °C' तक सात चरणों में वांछित निर्धारण बिंदु चुन सकते हैं ।

Display a


- बटन (b) दबाईए, प्रशीतक तापमान 1°C से कम हो जाएगा ।
- बटन (a) दबाईए, Health Guard/Hygiene Fresh Motor शुरू होगा ।

Display b

- बटन (c) दबाईए, प्रशीतक तापमान 1°C से कम हो जाएगा ।
- बटन (d) दबाईए, प्रशीतक तापमान 1°C से बढ़ जाएगा ।

फास्ट फ्रिजिंग


- जब रेफ्रिजरेटर को पहली बार चालू किया जाता है तो फास्ट फ्रिजिंग विशेषता काम करती है। कंप्रेसर और सर्कुलेटिंग फैन रेफ्रिजरेटर के तापमान को तेजी से कम करने के लिए अधिकतम कूलिंग क्षमता पर काम करते हैं। यह अपने आप बंद हो जाती है।

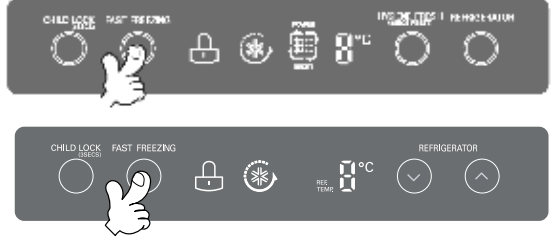

- यदि रेफ्रिजरेटर में गर्म खाना रखा जाता है, तो कंट्रोल पैनल पर बटन से फास्ट फ्रिजिंग को शुरू किया जाता सकता है। तापमान उचित स्तर पर पहुंचने पर फास्ट फ्रिजिंग बंद हो जाएगा या इसे फास्ट फ्रिजिंग बटन दबाकर बंद किया जा सकता है।


चाइल्ड लॉक (वैकल्पिक)

चाइल्ड लॉक को लॉक करने के लिए **CHILD LOCK** बटन को 3 सेकेंड तक दबाकर रखें। जब यह लॉक होगा, तो लॉक **LED** ऑन रहेगी तथा अन्य बटन काम नहीं करेंगे। अनलॉक करने के लिए, **CHILD LOCK** बटन को दुबारा 3 सेकेंड तक दबाकर रखें।

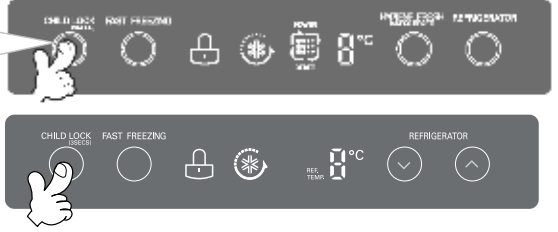

ग्रीन आयन डोर कूलिंग (वैकल्पिक)


- डक्ट कवर में टर्मलाइन पाउच हवा को शुद्ध करती है और रखे गए खाद्य-पदार्थों को अधिक समय तक ताजा रखने में मदद करती है।
- यदि इस्तेमाल करते वक़्त बाहरी वस्तुओं का जल कूल एअर वेंट में घुस जाए, तो कार्यकुशलता कम हो जाती है। इसके अतिरिक्त, यदि गैस्केट क्षतिग्रस्त हो जाए, तो ठंडी हवा के बाहर निकलने की वजह से कार्यकुशलता कम हो जाएगी।

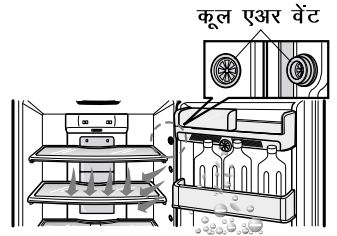


दिवस्टिंग आइस सर्व टाइप

- आइस क्यूब बनाने के लिए आइस ट्रे में पानी भरें और उसकी स्थिति में भीतर डाल दें।

आइस ट्रे
आइस क्यूब बॉक्स

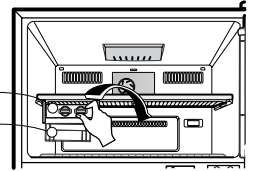

- आइस क्यूब निकालने के लिए ट्रे के लीवर को अपनी ओर धीरे से घुमाएं। आइस क्यूब नीचे आइस बॉक्स में गिर जाते हैं।

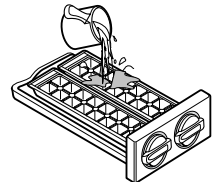


चेतावनी

- पानी के अलावा किसी अन्य द्रव का प्रयोग न करें।
- चिह्नित लाईन तक पानी भरें।

कनवर्टिबल कॉर्नर

- जब दरवाजा खोला जाता है, तब गर्म हवा फ्रेश जोन को प्रभावित नहीं कर सकती। इसलिए आप उसमें खाद्य-पदार्थ को अधिक ताजा रख सकते हैं।
- भीतर डाले गए कनवर्टिबल रूम को उसकी स्थिति में रखा जाना चाहिए। यदि दरवाजा खुला होगा तो वह अपना काम नहीं कर सकेगा।

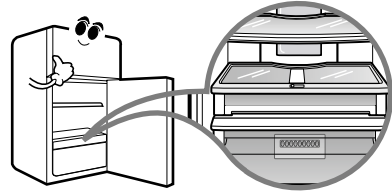


कैसे प्रयोग करें

- वेजिटेबल कॉर्नर या फ्रेश कॉर्नर का प्रयोग नॉब के कंट्रोल द्वारा किया जा सकता है।
- खाद्य-पदार्थ रखने से पहले नॉब की स्थिति जांच लें।
- नॉब को मध्य बिंदु पर न रखें।

सब्जियों वाली दराज


मैजिक क्रिस्पर्स

- मैजिक क्रिस्पर्स ड्रॉअर के भीतर आसानी से नमी बरकरार रखकर अधिक फलों और सब्जियों का स्वाद अधिक ताजा रखते हैं।
- कवर के नीचे बनी जाली नमी को कुशलता से रोकती या छोड़ती है।
- सीलिंग ढांचा नमी को बरकरार रखता है।

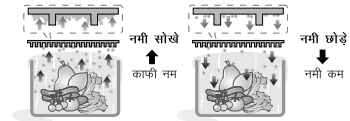

वेजिटेबल पार्टीशनर (वैकल्पिक)

- पार्टीशनर को चित्र में दिखाए गए ढंग से वेजिटेबल बॉक्स के पीछे की ओर डालकर फिक्स करें।

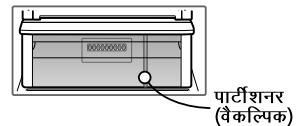


वॉटर डिस्पेन्सर (वैकल्पिक)

नोट


- पानी टंकी के नियत स्थान में लगाने के पश्चात पानी डाले । आवश्यक रूप से पानी टंकी को साफ करने या उपयोग ना करने हेतु अलग करें ।
- जब पानी टंकी पानी भरने के पश्चात नियत स्थान पर न हो तो पानी का रिसाव हो सकता है ।

पानी टंकी में पानी भरना


1) उपरी ढक्कन खोले एवम् पानी को पानी टंकी में भरे ।

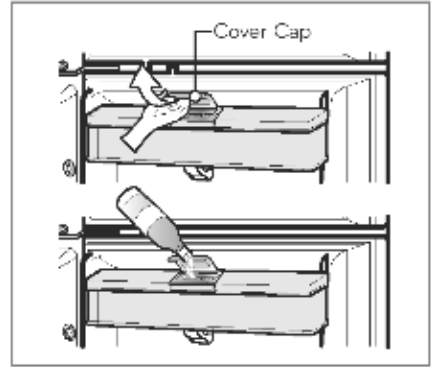

2) उपरी ढक्कन बंद करें ।

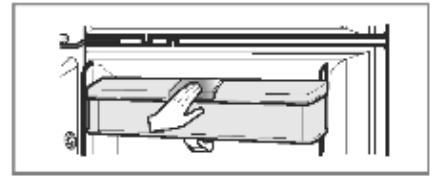

3) पानी टंकी वैकल्पिक हटाने योग्य हिस्सा है, जो कि संग्रहण क्षमता बढ़ाने हेतु प्रयुक्त किया जा सकता है । आप पानी टंकी हटाने के बाद एवम् गड्डे को प्लग द्वारा बंद करने के पश्चात उपरी दराज उपयोग कर सकते है ।

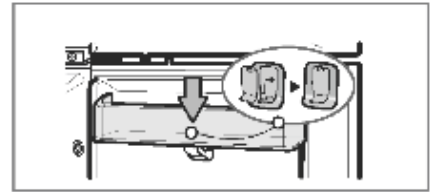


प्लग को अंडे की ट्रे के साथ संलग्न किया गया है ।

सावधानी

पानी के अलावा किसी अन्य द्रव का प्रयोग ना करें ।
गर्म जल को पानी टंकी में डालने से पहले ठंडा करना आवश्यक है ।

पानी पीना

1. डिस्पेन्सर पैड को कप के साथ दबाईए ।
2. जब डिस्पेन्सर पैड दबेगा पानी बाहर आएगा । कप निकालने के पश्चात डिस्पेन्सर पैड स्वतः अपनी नियत स्थिति में चला जाएगा एवम् पानी का बहाव बंद हो जाएगा ।

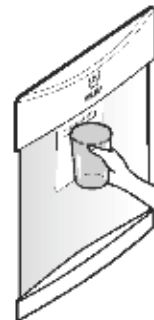


डिफ्रॉस्टिंग

- डिफ्रॉस्टिंग अपने आप होती है।
- डिफ्रॉस्ट हुआ पानी वाष्पीकरण ट्रे की तरफ बहकर जाता है जो रेफ्रिजरेटर के पीछे निचले भाग में होती है और स्वतः वाष्पीकृत हो जाती है।

डिओडोराइज़र (वैकल्पिक)

- फ्रेश फूड कंपार्टमेंट में आने वाली बदबू दूर हो जाती है और आपको तथा खाद्य-पदार्थों को कोई नुकसान नहीं पहुंचता।

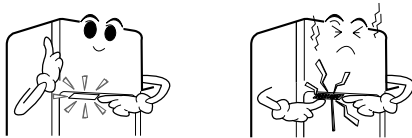


प्रयोग कैसे करें

- चूंकि डिओडोराइज़र फ्रेश फूड कंपार्टमेंट में हवा प्रवाहित करने वाले कूलिंग एअर इनलेट में स्थित होता है, इसलिए आपको कुछ भी करने की आवश्यकता नहीं।
- कूलिंग एअर इनलेट में धारदार नोक वाली वस्तु न डालें क्योंकि डिओडोराइज़र क्षतिग्रस्त हो सकता है।
- तेज गंध वाले खाद्य-पदार्थों को रखते समय उसे लपेट दें या ढक्कन वाले पात्र में रखें क्योंकि दूसरे खाद्य-पदार्थों में उसकी गंध आ सकती है।


डिओडोराइज़र का दुबारा प्रयोग करना

- कुछ समय तक प्रयोग कर लेने और दुर्गंध के ज्यादा तेज होने पर, डिओडोराइज़र को फिर से बहाल किया जा सकता है और इसका दुबारा प्रयोग किया जा सकता है।
- रेफ्रिजरेटर कंपार्टमेंट की छत पर लगे डिओडोराइज़र को हटा लें, नमी या दुर्गंध को दूर करने के लिए हेयर ड्रायर का प्रयोग करें और अल्ट्रावॉयलेट किरणों द्वारा दुर्गंध को विघटित करने के लिए सूर्य की रोशनी में ऑक्सीकरण करें।

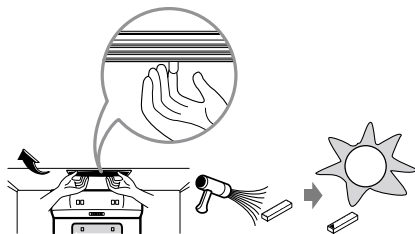


डोरी कॉर्नर (वैकल्पिक)

- बाहर निकले हुए हैंडिल से सचल ढक्कन को दाहिने से बाएं सरकाकर प्रयोग करें।

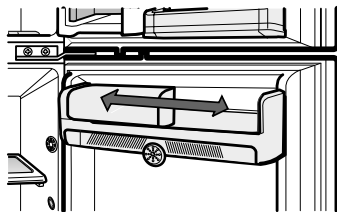

साफ करते समय ढक्कन को कैसे हटाएं

- ढक्कन को सरकाकर बास्केट के बीच में लाएं
- ढक्कन को बास्केट के बीच में लाकर छेद को बास्केट के दोनों सिरों की सीध में लाएं
- सीध में लाने के बाद बास्केट को पीछे से आगे की ओर घुमाएं और दोनों हाथों से खींचकर निकालें

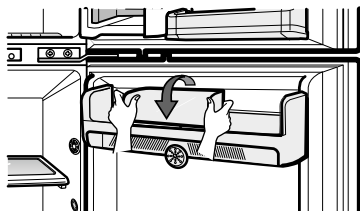


खाद्य-पदार्थों के भंडारण संबंधी सुझाव

खाद्य-पदार्थों का भंडारण

- ताजे खाद्य-पदार्थों को रेफ्रिजरेटर कंपार्टमेंट में रखें। खाद्य-पदार्थ किस तरह जमाए और पिघलाए जाते हैं यह उनकी ताजगी और गंध बनाए रखने में एक महत्वपूर्ण कारक है।
- कम तापमान पर आसानी से खराब होने वाले खाद्य-पदार्थ जैसे केले, अनानास, और तरबूज न रखें।
- गर्म खाद्य-पदार्थों को रखने से पहले ठंडा होने दें। रेफ्रिजरेटर में गर्म खाद्य-पदार्थ रखने से अन्य खाद्य-पदार्थ खराब हो सकते हैं और बिजली का बिल अधिक आ सकता है।
- खाद्य-पदार्थ रखते समय उसे वाइनिल बैग से ढकें या ढक्कन वाले पात्र में रखें। इससे नमी का वाष्पीकरण नहीं होता, और खाद्य-पदार्थों के स्वाद और पौष्टिक तत्व बने रहते हैं।
- हवा की निकासी के स्थानों को खाद्य-पदार्थों से बंद न करें। ठंडी हवा का निर्बाध प्रवाह रेफ्रिजरेटर के तापमान को एकसमान रखता है।
- बार-बार दरवाजा न खोलें। दरवाजा खोलने से गर्म हवा रेफ्रिजरेटर में प्रवेश करती है, जिससे तापमान बढ़ जाता है।

फ्रीजर कंपार्टमेंट


- बोटलों को फ्रीजर कंपार्टमेंट में न रखें — जम जाने पर वे टूट सकती हैं।
- पिघल चुके खाद्य-पदार्थों को दुबारा न जमाएं। इससे स्वाद और पौष्टिक तत्वों की क्षति होती है।
- आईसक्रीम जैसे फ्रोजन खाद्य-पदार्थों को लंबे समय तक रखते समय, उन्हें डोर रैक में नहीं, बल्कि फ्रीजर शेल्फ में रखें।
- फ्रीजिंग के लिए लोड करना — नए रखे गए खाद्य-पदार्थों को फ्रीजिंग के लिए निम्नलिखित स्थिति में रखने की संस्तुति की जाती है :

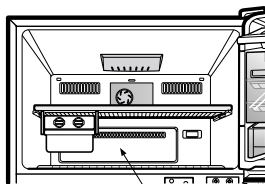

नए रखे गए खाद्य-पदार्थ

रेफ्रिजरेटर कंपार्टमेंट

- गीले खाद्य-पदार्थों को रेफ्रिजरेटर के शेल्फों के बहुत अंदरूनी हिस्से पर रखने से बचें, क्योंकि बहुत ज्यादा ठंडी हवा के संपर्क में आने के कारण यह जम सकती हैं। इससे बचने के लिए खाद्य-पदार्थों को ढक्कन वाले पात्रों में रखना बेहतर होता है।
- गीले खाद्य-पदार्थों (खासकर फलों और सब्जियों) को वेजिटेबल स्टोरेज कंपार्टमेंट में रखना वांछनीय है। यदि रेफ्रिजरेटर के शेल्फ पर रखना जरूरी हो, तो इसे रेफ्रिजरेटर में प्रवाहित ठंडी हवा के कारण जमने से बचाने के लिए रेफ्रिजरेटर की पिछली दीवार से दूर दरवाजे के निकट रखें।
- खाद्य-पदार्थों को रेफ्रिजरेटर में रखने से पहले हमेशा साफ कर लें। सब्जियों और फलों को धोकर पोंछ लेना चाहिए, तथा पैक किए हुए खाद्य-पदार्थों को पोंछकर साफ कर लेना चाहिए, ताकि पास रखे अन्य खाद्य-पदार्थ खराब न हों।
- अंडों को उनके स्टोरेज रैक में रखते समय, सुनिश्चित कर लें कि वे ताजे हैं, और उन्हें हमेशा खड़ी स्थिति में रखें, जिससे वे अधिक समय तक ताजे रहते हैं।

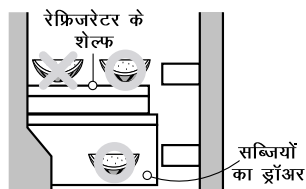

यह महत्वपूर्ण है कि अवांछित दुर्गंधों से बचने के लिए आपका रेफ्रिजरेटर साफ रहे। छलककर गिर गए खाद्य-पदार्थों को तुरंत पोंछकर साफ कर देना चाहिए, क्योंकि इसका अम्लीकरण हो सकता है और यदि इसे पड़ा रहने दिया गया तो यह प्लास्टिक की सतहों पर दाग लगा सकता है।

किसी भी सतह पर धातु के रगड़ने वाले पैड, ब्रश, मोटे दानों वाले क्लीनर या तेज क्षारीय घोलों का प्रयोग न करें।

लेकिन, सफाई करने से पहले, याद रखें कि अत्यंत ठंडी सतहों पर नम वस्तुएं चिपक सकती हैं। जमी हुई सतहों को गीले या नम हाथों से न छुएं।

बाहरी भाग — अपने रेफ्रिजरेटर की ड्यूरैबल फिनिश को साफ करने के लिए हल्के साबुन के गुनगुने घोल या बर्तन धोने वाले घोल का प्रयोग करें। साफ, नम कपड़े से पोंछें और फिर सुखाएं।

भीतरी भाग — भीतरी भाग और भीतर के हिस्सों की नियमित सफाई की जानी चाहिए। अपने रेफ्रिजरेटर की ड्यूरैबल फिनिश को साफ करने के लिए हल्के साबुन के गुनगुने घोल या बर्तन धोने वाले घोल का प्रयोग करें। साफ, नम कपड़े से पोंछें और फिर सुखाएं।

भीतरी हिस्से — कंपार्टमेंट शेल्स, डोर रैक्स, स्टोरेज ट्रेज़ और मैग्नेटिक डोर सील्स आदि को धोकर साफ करें। अपने रेफ्रिजरेटर की ड्यूरैबल फिनिश को साफ करने के लिए हल्के साबुन के गुनगुने घोल या बर्तन धोने वाले घोल का प्रयोग करें। साफ, नम कपड़े से पोंछें और फिर सुखाएं।

चेतावनी

बिजली के पुर्जों (लैंपों, स्विचों, कंट्रोल, आदि) के आस-पास सफाई करने से पहले दीवार के आउटलेट से पॉवर कॉर्ड को हमेशा ही निकाल दें। पानी या द्रव को किसी बिजली के पुर्जे में प्रवेश करने और बिजली का झटका लगने से बचने के लिए अतिरिक्त नमी को स्पंज या कपड़े से पोंछ दें। ज्वलनशील या विषैले क्लीनिंग द्रवों का प्रयोग न करें।

- सफाई के लिए इन पदार्थों का प्रयोग न करें : सतह पर क्रियाशील अभिकारक, कार वैक्स, एंटीकोरोसिव, हर किरम के तेल, पेट्रोल, एसिड, वैक्स।
- इनका प्रयोग किया जा सकता है : डिटर्जेंट वनस्पति बर्तन धोने के घोल, साबुन का पानी।
- लापरवाही से प्रयोग करने पर इनके कारण रंग बदल सकता है।


सावधानी

1. साफ करते समय गुनगुने पानी का प्रयोग करें।
2. पानी के अलावा अन्य किसी चीज का प्रयोग न करें। यदि इसे सॉफ्ट ड्रिक्स के लिए प्रयोग किया जाता हो, तो वॉटर टैंक में पानी डालें और तुरंत ही 3-4 कप पानी निकाल दें।

वॉटर डिस्पेन्सर (वैकल्पिक)

ग्रिल

पहले गीले कपड़े से साफ करें, उसके बाद सुखे कपड़े का प्रयोग करके साफ करें।




वॉटर टैंक

१. पानी भरने के लिए

पानी भरने के लिए वॉटर टैंक निकालना जरूरी नहीं है। (चित्र क्र. १ में दिए गए तरीके से टैंक गेट के खिंचीए और पानी भरीए।)

नोट

- दरवाजा बंद करने से पहले कॅप और क्लैम्प को बंद करना ना भुलिए।
- कार्बोनेटेड द्रव्य जैसे सोडा का इस्तेमाल न करें।

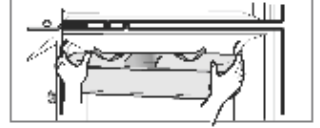


२. डिसअसेंबली (खोलने के लिए)

वॉटर टैंक को दाईं या बाईं तरफ से पकड़े और नीचे से ऊपर खिंचिए।


नोट

वॉटर टैंक को खोलने के बाद डिस्पेन्सर के पानी का फरी तरह इस्तेमाल कीजिए।

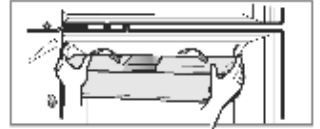


३. असेंबली (बंद करने के लिए)

किसी कारणवश वॉटर टैंक ठीक से नहीं बैठे, तो उसे अपनी सही जगह पर बिठाएँ, जाँचिए की वाल्व असेंबली दरवाजे के छेद में सही तरह से बैठी हो (चित्र क्र.) उसके बाद टैंक को नीचे ढकले और दरवाजे पर सही तरीके से बैठ (स्थिर हा) जाएँ।

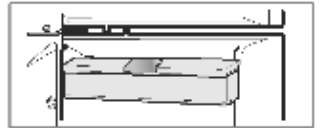



वॉटर टैंक

१. पहले टैंक कव्हर (ढक्कन) निकालिए।

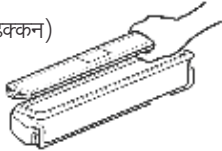

२. वॉटर टैंक को अंदर से और बाहर से डिसवॉशिंग पावडर से साफ करें और बहते नल के पानी से धोईए। उसके बाद सुखे कपड़े का इस्तेमाल करके साफ करें।

३. कॅप को भी अंदर से और बाहर से डिसवॉशिंग पावडर से साफ करें और बहते नल के पानी से धोईए। उसके बाद सुखे कपड़े का इस्तेमाल करके साफ करें।

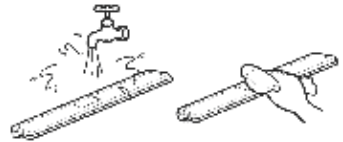

छुट्टियों के समय

सामान्य अवधि के अवकाशों के दौरान, रेफ्रिजरेटर को चालू रखना ही संभवतः आपको सबसे बढ़िया विकल्प मालूम होगा। जम सकने वाली चीजों को ज्यादा समय तक रखने के लिए फ्रीजर में रखें। जब आप ज्यादा लंबे समय के लिए कहीं बाहर जाने की योजना बनाएं, तो सभी खाद्य-पदार्थ बाहर निकाल लें, पॉवर कॉर्ड को डिस्कनेक्ट कर दें, अंदरूनी भाग को अच्छी तरह साफ कर दें, और दुर्गंध पैदा होने से बचने के लिए प्रत्येक दरवाजे को खुला छोड़ दें।

पॉवर फेल हो जाने पर

अधिकांशतः पॉवर फेल होने की गड़बड़ी को एक या दो घंटे में ठीक कर दिया जाता है और इससे आपके रेफ्रिजरेटर के तापमानों पर कोई प्रभाव नहीं पड़ेगा। फिर भी, पॉवर बंद रहने की स्थिति में आपको कम से कम बार दरवाजा खोलना चाहिए। अधिक लंबे समय के लिए पॉवर फेल हो जाने की स्थिति में, अपने फ्रोजन पैकेजों के ऊपर ड्राई आइस का टुकड़ा रखें।

यदि आप घर बदलें

सभी ढीले-ढाली वस्तुओं को बाहर निकाल दें या रेफ्रिजरेटर के अंदर अच्छी तरह बांध दें। सतह बराबर करने वाले पैचों को नुकसान से बचाने के लिए, उन्हें एकदम आधार के बराबर पर कर लें।

एंटी-कंडेनसेशन पाइप

रेफ्रिजरेटर कैबिनेट की बाहरी दीवार कभी-कभी, खासकर संस्थापन के ठीक बाद, गर्म हो सकती है। परेशान न हों। यह एंटी-कंडेनसेशन पाइप के कारण होता है, जो गर्म रेफ्रिजरेटर के कारण कैबिनेट की बाहरी दीवार पर "संघनन" होने से बचाता है।



सावधानी

बिजली का झटका लगने का खतरा

फुंक चुके लाइट बल्ब को बदलने से पहले, या तो रेफ्रिजरेटर का प्लग निकाल लें या फिर सर्किट ब्रेकर अथवा पयूज़ बॉक्स से पॉवर बंद कर दें।

नोट : कंट्रोल को ऑफ स्थिति में रखने पर बिजली के सर्किट से पॉवर नहीं हटती।

एक्सटेंशन कॉर्ड का प्रयोग न करें

यदि संभव हो, तो रेफ्रिजरेटर को इसके लिए बनाए गए अलग बिजली के आउटलेट से कनेक्ट करें ताकि इसके या अन्य उपकरणों अथवा घरेलू लाइटों के कारण ओवरलोड होने से बिजली कट न जाए।

सप्लाई प्लग तक पहुंच

रेफ्रिजरेटर-फ्रीजर इस स्थिति में रखा रहना चाहिए ताकि दुर्घटना होने पर सप्लाई प्लग को तुरंत डिस्कनेक्ट करने के लिए उस तक आसानी से पहुंचा जा सके।

सप्लाई कॉर्ड को बदलना

यदि सप्लाई कॉर्ड क्षतिग्रस्त हो, तो उसे निर्माता या उसके सर्विस एजेंट द्वारा या इसी प्रकार के योग्य व्यक्ति द्वारा बदला जाना चाहिए ताकि कोई खतरा न रहे।

बेहद खतरनाक आकर्षण

खाली रेफ्रिजरेटर बच्चों के लिए एक खतरनाक आकर्षण हो सकता है। अपने अप्रयुक्त उपकरण से गैस्केट, लेच, ढक्कन या पूरा दरवाजा ही निकाल दें, या उसे हानिरहित बनाने के लिए और कोई कार्रवाई करें।


ग्राउंडिंग (अर्थिंग) के बारे में

बिजली का शॉर्ट सर्किट होने पर, ग्राउंडिंग (अर्थिंग) विद्युत-धारा के निकलने के लिए तार प्रदान करके बिजली का झटका लगने के खतरे को कम करता है। बिजली का झटका लगने से बचने के लिए, इस उपकरण की ग्राउंडिंग की जानी चाहिए। ग्राउंडिंग प्लग के अनुचित प्रयोग से बिजली का झटका लग सकता है। यदि ग्राउंडिंग के लिए निर्देश पूरी तरह समझ न आए, या आपको इस बारे में संदेह हो कि उपकरण की उचित ग्राउंडिंग हुई है या नहीं तो किसी योग्य इलेक्ट्रीशियन या सर्विस करने वाले व्यक्ति से सलाह लें।

पॉवर कॉर्ड की लंबाई को

छोटा-बड़ा न करें।

इससे बिजली का झटका या आग लग सकती है।

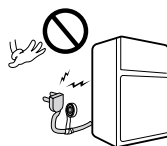

इस उपकरण की ग्राउंडिंग (अर्थिंग) की जानी चाहिए।

इंतजार न करें! इसे अभी करें!

ज्वलनशील पदार्थों, विस्फोटकों या रासायनों को रेफ्रिजरेटर में न रखें।

पुराने उपकरण का निस्तारण

इस उपकरण में तरल पदार्थ (रेफ्रिजेंट, ल्यूब्रिकेंट) है और यह ऐसे पुर्जों तथा सामग्रियों से बना है जिनका दुबारा प्रयोग हो सकता है और/या रिसाइकिलिंग की जा सकती है।

सभी महत्वपूर्ण सामग्रियों को कचरा संग्रह केंद्र में भेजा जाना चाहिए और रिवर्क (रिसाइकिलिंग) के बाद दुबारा प्रयोग में लाया जा सकता है। वापस लिए जाने के लिए, कृपया स्थानीय एजेंसी से संपर्क करें।

सर्विस के लिए बुलाने से पहले

सर्विस कॉल्स से प्रायः बचा जा सकता है!

यदि आपको लगता है कि आपका रेफ्रिजरेटर ठीक से काम नहीं कर रहा है, तो पहले इन संभावित कारणों को जांच लें :

समस्या	संभावित कारण
रेफ्रिजरेटर काम नहीं कर रहा	• क्या घर का फ्यूज उड़ गया है या सर्किट ब्रेकर ट्रिप हो गया है? • क्या दीवार में लगे बिजली के आउटलेट से पॉवर कॉर्ड का प्लग निकल गया है या ढीला हो गया है?
रेफ्रिजरेटर या फ्रीजर कंपार्टमेंट का तापमान अधिक गर्म है	• तापमान कंट्रोल उचित स्थिति में सेट नहीं किए गए हैं। • उपकरण दीवार या गर्मी के स्रोत के निकट रखा गया है। • गर्म मौसम — बार-बार दरवाजा खुलना। • दरवाजा लंबे समय तक खुला छोड़ देना। • रेफ्रिजरेटर में काफी अधिक खाद्य-पदार्थ रखे रहना।
असामान्य शोर	• रेफ्रिजरेटर कमजोर या ऊंचे-नीचे स्थान पर संस्थापित है, या तल बराबर करने वाले पैच को छोटा-बड़ा करने की जरूरत है। • रेफ्रिजरेटर के पीछे की ओर गैर-जरूरी चीजें रखी हुई हैं।
रेफ्रिजरेटर में गंध है	• तेज गंध वाले खाद्य-पदार्थों को कसकर बंद या लपेटकर रखना चाहिए। • भीतरी भाग की सफाई की जरूरत है।
कैबिनेट की सतह पर ओस जम जाती है	• अधिक नमी के समय कोई असामान्य बात नहीं है। • दरवाजा हल्का खुला छूटा हो सकता है।



MFL67477503

LG 24 x 7 CALL CENTER



1800-180-9999
(Toll Free)



5757554
(Send SMS)



www.lg.com
serviceindia@lge.com



www.facebook.com/lghomeappliances
www.twitter.com/LGIndiaTweets

To know more about LG, visit www.lg.com
For Corporate/Institutional enquiries,
please write to enquiries@lgindia.com

Regd. Office: LG Electronics India Pvt. Ltd., A-27, Mohan Cooperative Industrial Estate, Mathura Road, New Delhi-110044.