



**LG**

Life's Good

繁體中文  
簡體中文  
ENGLISH

使用手冊  
用戶手冊

User Guide

**LG-E975**

MFL68784301(1.0)


[www.lg.com](http://www.lg.com)





# 使用手冊

- 手冊的畫面顯示及插圖可能與實際手機上顯示的有所不同。
- 此手冊中的部份內容可能會因手機程式有更新和改良或不同網絡商提供的服務而令實際情況有所不同。此文件中所有資訊如有更改，恕不另行通知。
- 由於使用觸控螢幕鍵盤，此手機不適合視障人士使用。
- Copyright ©2013 LG Electronics, Inc. 保留所有權利。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 及 Play Store™ 均為 Google, Inc. 的商標。

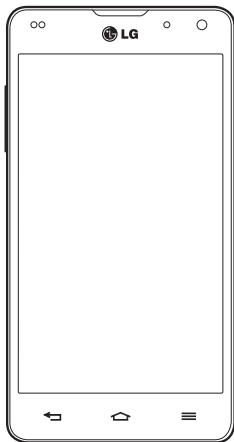

# 目錄

安全及有效使用準則 .....	5	通話功能.....	35
重要通知.....	12	撥打電話 .....	35
了解您的手機.....	17	從通訊錄中撥打電話 .....	35
手機概覽 .....	17	接聽來電和拒接來電 .....	35
安裝 Micro-SIM 卡 .....	19	調節通話音量 .....	35
為手機充電 .....	20	通話期間撥打第二個電話.....	36
將螢幕鎖定及解鎖 .....	20	檢視通話記錄.....	36
您的桌面.....	21	通話設定 .....	36
觸控螢幕提示.....	21	通訊錄.....	37
桌面.....	22	搜尋聯絡人.....	37
擴展桌面 .....	22	新增聯絡人.....	37
自訂桌面 .....	22	常用的聯絡人.....	37
返回最近使用的應用程式.....	23	建立群組 .....	38
通知.....	24	訊息.....	39
開啟通知面板.....	25	發送訊息 .....	39
狀態欄上的指示圖示.....	25	訊息串連方塊 .....	40
螢幕鍵盤 .....	27	更改訊息設定 .....	40
輸入重音字母.....	27	電子郵件.....	41
Google 帳戶設定.....	28	管理電子郵件帳號 .....	41
連接到網絡及裝置.....	29	處理帳號資料夾.....	41
Wi-Fi.....	29	編寫及發送電子郵件 .....	42
連接至 Wi-Fi 網絡 .....	29	相機.....	43
開啟 Wi-Fi 並連接至 Wi-Fi 網絡..	29	了解取景器 .....	43
藍牙.....	29	使用進階設定.....	44
共享手機的數據連接 .....	31	快速拍照 .....	45
Wi-Fi Direct.....	32	當拍攝相片後.....	45
使用 USB 纜線進行 PC 連接 .....	32	檢視已儲存的相片 .....	46

視像攝錄機.....	47	刪除圖像.....	60
了解取景器.....	47	設定為牆紙.....	60
使用進階設定.....	48	影片.....	60
錄製短片.....	48	播放影片.....	60
錄製影片後.....	49	影片編輯器.....	61
觀看已儲存的影片.....	49	影片魔法師.....	64
觀看影片時調整音量.....	50	音樂.....	64
即時縮放功能.....	50	新增音樂檔案至手機.....	65
LG 獨有功能.....	51	使用媒體同步 (MTP) 傳輸音樂.....	65
QuickMemo 功能.....	51	播放歌曲.....	65
使用 QuickMemo 選項.....	52	實用程式.....	67
檢視已儲存的 QuickMemo.....	52	設定鬧鐘.....	67
筆記本功能.....	53	使用計算機.....	67
製作筆記.....	53	新增事件至日曆.....	67
了解筆記本.....	53	語音備忘錄.....	68
書架.....	53	錄製聲音或語音.....	68
Pages-property panels (頁面-屬性面 板).....	54	發送錄音.....	68
檢視已儲存的筆記本.....	54	工作管理員.....	68
QuickTranslator.....	55	工作.....	69
QSlide 功能.....	56	Polaris Office 4.....	69
雙播放功能.....	57	LG Backup.....	70
鏡像.....	57	有關備份以及復原智能手機的 資料.....	70
雙播放.....	57	備份.....	70
LG SmartWorld.....	58	行程表備份.....	71
如何從手機進入 LG SmartWorld..	58	檔案還原和管理.....	71
多媒體.....	59	Google+.....	71
媒體匣.....	59	語音搜尋.....	71
檢視圖片.....	59	下載.....	72
播放影片.....	59	網絡功能.....	73

# 目錄

互聯網.....	73	配件.....	90
使用網絡工具列.....	73	疑難排解.....	91
檢視網頁.....	73	常見問題解答.....	94
開啟頁面.....	74		
以語音搜尋網站.....	74		
書籤.....	74		
歷史記錄.....	74		
使用彈出瀏覽器.....	74		
Chrome.....	75		
檢視網頁.....	75		
開啟頁面.....	75		
以語音搜尋網站.....	75		
與其他裝置同步.....	75		
設定.....	76		
存取設定功能表.....	76		
無線網絡.....	76		
裝置.....	79		
個人.....	81		
系統.....	82		
PC 軟件 (LG PC Suite).....	84		
手機軟件更新.....	87		
手機軟件更新.....	87		
有關本使用者指南.....	88		
有關本使用者指南.....	88		
Trademarks.....	88		
DivX HD.....	89		
Dolby Mobile.....	89		

## 安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

如果發生故障，您裝置中內置的軟件工具會建立一份故障日誌。

此工具只會收集與故障相關的數據，例如訊號強度、通話時突然斷線的 cell ID position (cell ID 位置) 和載入的應用程式。此日誌只用作協助確定發生故障的原因。這些日誌會被加密，如您需要退回裝置進行維修，只有已授權的 LG 維修中心才可存取其內容。

## 無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。

此手機型號 LG-E975 的設計符合有關暴露於無線電波所適用的安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率 (SAR)。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 本型號手機在耳邊使用的最高 SAR 值為 0.426 W/kg (10 克)，佩戴於身上時則為 0.398 W/kg (10 克)。
- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延

## 安全及有效使用準則

遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，直到傳輸完成為止。

## 產品保護及維護

### 警告：

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。

- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。
- 如果手機受潮，請立即拔下手機電源線並立即擦乾。請勿嘗試用烤爐、微波爐或風筒等外部加熱裝置加快變乾的過程。
- 手機如果潮溼，液體會改變手機內產品標籤的顏色。因電腦暴露於液體而造成的損壞並不受保養條款覆蓋。

## 有效地操作手機

### 電子裝置

所有手機均可能受訊號干擾，這可能會影響手機效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。
- 如可能，請在介乎 0°C 與 40°C 的溫度中使用手機。將手機曝露在極低或極高的溫度下可能會導致手機損壞、故障或甚至爆炸。

## 道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

## 安全及有效使用準則

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在路邊時特別重要。

## 避免損害您的聽覺



避免聽力受損，請不要長時間在高音量下收聽。

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

**注意：**耳機的過大聲音壓力可能導致聽覺受損

## 玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部

件。

## 爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

## 潛在爆炸氣壓

- 請勿在加油站使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿在放置了手機及配件的汽車車廂運送或擺放易燃氣體、液體或爆炸物。

## 在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在機艙內使用手機。

## 兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

## 緊急通話

某些流動網絡可能無法使用緊急通話。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。


### 電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可降低電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池或造成電池短路。
- 當電池不再提供可接受的效能，請更換電池。電池組在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。
- 請勿讓如動物牙齒、指甲等尖銳物與電池發生接觸。這可能會引起火災。

### 確認聲明

在此，LG Electronics 宣佈此 LG-E975 產品符合指令1999/5/EC 中的基本要求及其他相關規定。 確認聲明副本請見：<http://www.lg.com/global/declaration>

### 法律資訊

跳至**功能表鍵**  > 「**系統設定 > 關於手機 > 法律資訊**」以獲取權利協議的資訊。

### 聯絡本公司以取得產品的符合性：

LG Electronics Inc.  
EU Representative, Krijgsman 1,  
1186 DM Amstelveen, The Netherlands

## 重要通知


### 使用手機前請閱讀此重要通知！

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

#### 1. 手機記憶體

當手機記憶體的可用空間少於 10%，手機便無法接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要解除安裝應用程式：

- 1 觸控  > 應用程式標籤 > 設定 > 裝置中的應用程式。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按解除安裝。


#### 2. 充分利用電池壽命

關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您可監控應用程式及系統資源的電池電量消耗。

##### 延長手機電池壽命


- 關閉不使用的無線電通訊。不使用 Wi-Fi、藍牙或 GPS 時，請關閉這些應用程式。
- 降低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的部分應用程式可能會減少電池壽命。

### 要檢查電池充電量：

- 觸控  > 應用程式標籤 > 設定 > 系統下的關於手機 > 電池。

電池狀態（充電、未充電）及電池存量（已充電的百分比）會在螢幕頂部顯示。

### 要監控與控制使用的電池電力：

- 觸控  > 應用程式標籤 > 設定 > 系統中的關於手機 > 電池 > 電池使用狀況。

螢幕將會顯示電池使用時間。會告知您的手機自上次連接到電源的時間，或如果目前已連接到電源，便會告知手機最後使用電池電力運作的時間。畫面會顯示使用電池電力的應用程式或服務，按照用量高至低排序。

## 3. 在安裝開放原始碼的應用程式及操作系統前



#### 警告：

如果您安裝及使用並非由製造商提供的作業系統，可能會造成您的手機故障。此外，您的手機不再受保養。




#### 警告：

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store™。如不正確安裝應用程式，手機可能無法正常運作，或出現嚴重錯誤。您必須從手機解除安裝該等應用程式及其所有相關數據和設定。

## 重要通知

### 4. 使用解鎖圖形

設定解鎖圖形以保護您的手機。觸控  > 應用程式標籤 > 設定 > 裝置下的 **鎖定螢幕** > **選擇螢幕鎖定** > **圖形**。此會開啟畫面，引導您如何繪畫螢幕解鎖圖形。您必須新增一個備份 PIN 碼作為安全措施，以防您忘記您的解鎖圖形。

**警告：**請於設定解鎖圖形前建立 Google 帳號，並謹記您於新增圖形鎖時所設定的備份 PIN 碼。



**警告：**

**使用圖形鎖定的注意事項。**

請記住您所設定的解鎖圖形，這是非常重要的。如果錯誤輸入圖形的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖形、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

**在無法重新開啟您的解鎖圖形、PIN 或密碼時：**

**< 如果您忘記了您的圖形 >**

如果您已用手機登入至您的 Google 帳號但 5 次輸入錯誤的圖形，請按位於螢幕底部的 **忘記解鎖圖形？** 按鈕。您將需要使用您的 Google 帳號登入，或輸入您於新增圖形鎖時設定的備份 PIN 碼。

如果您尚未在手機上建立 Google 帳號或忘記備份 PIN，您需要進行硬性重新設定。

**< 如您忘記了您的 PIN 碼或密碼 >**

如您忘記您的 PIN 或密碼，您需要進行硬性重新設定。

**警告：**如您進行硬性重新設定，所有使用者應用程式及資料將被刪除。

**注意：**如您並未登入至您的 Google 帳號，及忘記了您的解鎖圖形，您需要輸入您的備份 PIN 碼。

## 5. 使用硬性重新設定（原廠設定）

如您的手機並無還原至其原始狀態，請使用強制重新設定（原廠設定）以初始化手機。

- 1 關閉電源。
- 2 按住手機上的**電源/鎖定鍵 + 音量降低鍵**。
- 3 幾秒后，手機將顯示FACTORY HARD RESET畫面，此時鬆開所有按鍵。
- 4 按三次**電源/鎖定鍵**，您的電話將恢復為原廠設定。要取消，按任何其它鍵。



### 警告：


若進行硬性重新設定，所有用戶應用程式及 DRM 授權將被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

重設為原廠設定 - 清除手機上的所有數據，但下列情況除外。如裝置故障或出錯，於發生錯誤事件時，您的裝置可能將裝置的狀態記錄於錯誤日誌資訊中。記錄於錯誤日誌的資訊可能包括關於應用程式名稱及用量的資訊、手機位置及號碼、GPS 狀態、記憶體用量及其他非個人裝置狀態資訊。此資訊會儲存於您的手機，如手機已交給 LG 作維修及服務，資訊僅可由 LG 存取。錯誤日誌資訊只可由 LG 使用，以用作檢查、維修及改善 LG 的產品及服務。


## 6. 開啟及切換應用程式

有了 Android，多任務處理變得容易，因為可以同時執行多個應用程式。開啟新的應用程式時，您無需退出原來的應用程式。使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。


### 要停止應用程式：

- 1 按住主頁鍵 。將會顯示最近使用的應用程式列表。

## 重要通知

- 2 點按要存取的應用程式。此舉不會停止之前的應用程式於手機背景上執行。使用後，請確保點按返回鍵  以結束應用程式。
  - 若要停止應用程式，請在最近使用的應用程式列表點擊工作管理員，然後點擊停止或停止全部。
  - 若要從最近使用的應用程式列表移除應用程式，請向左或向右滑動應用程式預覽。若要清除所有應用程式，請點擊全部清除。

## 7. 使用媒體同步 (MTP) 傳輸音樂、相片及影片

- 1 點按  > 應用程式標籤 > 設定 > 儲存裝置以查看儲存媒體。
- 2 使用 USB 線將手機連接到電腦。
- 3 選取 USB 連接方法會顯示於手機螢幕上，選擇**媒體同步 (MTP)**的選項。
- 4 開啟電腦上的憶體資料夾。您可以於電腦上檢視大容量儲存內容，並可將檔案從電腦傳輸至裝置的記憶體資料夾，相反亦然。

## 8. 將手機直立

如使用其他電話一樣，垂直握住您的手機。手機備有內置天線。小心不要刮花或損壞手機背部，這可能會影響效能。

撥打/接聽電話或傳送/接收資料時，避免握住手機的較低部分（因備有天線）。這樣做可能影響通話品質。

## 9. 螢幕凍結時

如果螢幕凍結或當您嘗試操作手機時沒有回應：

按住**電源/鎖定**鍵 10 秒，以重啟您的手機。

如果仍然無法運作，請聯絡服務中心。

# 了解您的手機

## 手機概覽



### 注意：距離感應器

當接收及撥出通話時，距離感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控螢幕。這將延長電池壽命並且防止通話時不小心啟動觸控畫面。

### 警告：

若將較重物體置於手機上，或坐在手機上會損壞 LCD 和觸控畫面功能。請勿將保護貼遮蓋 LCD 的距離感應器。這可能會導致感應器出現故障。

## 了解您的手機



### 警告：

- 此部分包含電池盒。請勿開啟背蓋。
- 請勿破壞手機上的 NFC 觸控點，它是 NFC 天線的一部分。


## 安裝 Micro-SIM 卡

開始使用新手機前，您可以選擇插入 Micro-SIM 卡。

彈出按鍵為位於卡槽蓋上方的細小圓孔。要安裝新 Micro-SIM 卡：

- 1 將隨附的 Micro-SIM 彈出工具（或幼針）插入彈出按鍵孔，輕力地推入直至卡槽彈出。
- 2 將卡槽移出，將 Micro-SIM 卡放置在內，將接觸面朝下而斜角向左。除此方式外並無可能將 SIM 卡緊貼置於卡槽上。
- 3 小心重新調整卡槽以將其滑進並推回到手機中。


**注意：**請確保卡上的金屬接觸面向下。

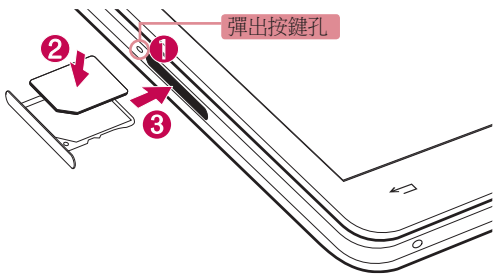

## 了解您的手機

### 為手機充電

充電器插孔位於手機底部。將充電線的一端插入手機，而將另一端插入電源插座。

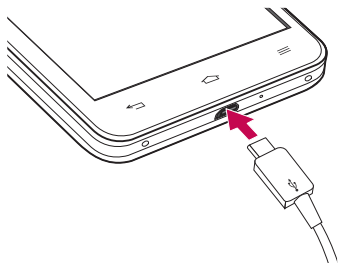

**注意：**第一次充電時必須將電池完全充電，以提高電池壽命。

### 將螢幕鎖定及解鎖

如果您暫時不使用手機，螢幕會自動關閉及鎖定。這有助防止意外按鍵，並可節省電池電力。

當您並非正使用手機，按**電源/鎖定鍵**以鎖定您的手機。

如鎖定手機時正在執行程式，其於鎖定模式時可能仍在執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如：通話、存取網絡及數據通訊）。

要喚醒手機，按**電源/鎖定鍵**。會顯示鎖定畫面。觸控並向任何方向滑動鎖定畫面，以解除鎖定桌面。您最後檢視的畫面將會開啟。

# 您的桌面

## 觸控螢幕提示

以下為如何於手機上瀏覽的一些提示。

**點按或觸控** - 用手指單次點按以選擇項目、連結、捷徑及螢幕鍵盤上的字母。

**觸摸並按住** - 觸控並不抬起手指，直至動作發生，以觸摸並按住螢幕上的項目。例如，要開啟聯絡人的可用選項，觸摸並按住通訊錄列表上的聯絡人，直至開啟內容功能表。

**拖拉** - 觸摸並按住項目片刻，然後於螢幕上移動手指但不抬起，直至到達目標位置。您可在桌面拖放項目改變其放置。

**掃動或滑動** - 要掃動或滑動，快速移動您的手指以橫跨螢幕表面，並於首次接觸螢幕時不停止動作（否則會變成拖拉項目）。例如，您可向上或向下滑動螢幕以捲動列表，或向左或向右掃動以瀏覽不同桌面（反之亦然）。

**雙點按** - 雙點按以放大網頁或地圖。例如，快速雙點網頁的一部分以調整至適合螢幕的闊度。您亦可在瀏覽圖片及使用地圖時，點按兩下進行縮放。

**捏動縮放** - 使用瀏覽器或地圖，或瀏覽圖片時，捏緊或散開食指及拇指以放大或縮小。


**旋轉螢幕** - 於許多應用程式及功能表，螢幕的方向會根據裝置本身的方向而作出調整。


### 注意：

- 要選擇一個項目，請點按圖示的正中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。
- 使用指尖點按您需要的選項。請注意不要碰到其他按鍵。

# 您的桌面

## 桌面

主桌面是眾多應用程式與功能的起點，讓您可新增如應用程式捷徑、Google小工具等項目，讓您可即時存取資訊及應用程式。此為預設桌布，點按  即可從任何功能表中存取。

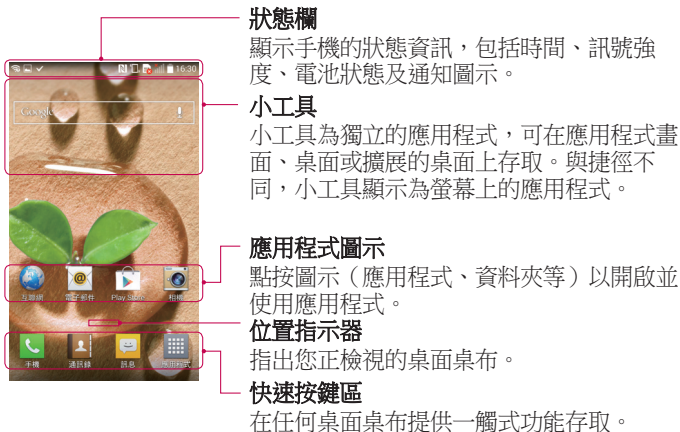

## 擴展桌面

作業系統提供多個桌面桌布，讓您有更多空間新增圖示、小工具等。在桌面上向左或右滑動手指。

## 自訂桌面

您可以新增應用程式、小工具或牆紙，以自訂您的桌面。要更輕鬆使用手機，將您最喜愛的應用程式及小工具新增至桌面。

## 要將項目新增至桌面：

- 1 點按並按住桌面的空白部分。
- 2 於新增模式功能表中，選擇您想新增的項目。您將於桌面上看見已新增的項目。
- 3 將其拖拉至理想的位置，然後放開手指。

## 要從桌面移除項目：


- **桌面** > 點按並按住您想移除的圖示 > 將圖示拖曳至 

**提示！** 要將應用程式圖示從應用程式功能表新增至桌面，觸摸並按住您想新增的應用程式。

### 提示！ 使用資料夾

您可將應用程式圖標合併至一個資料夾內。於桌面將一個應用程式圖示放置於另一個上，兩個圖示會合併。

## 要在桌面上自訂應用程式圖示

- 1 觸摸並按住應用程式圖示，直至它從目前位置解除鎖定。然後將其放於畫面上。觸摸並按住應用程式圖示，編輯圖示  將會顯示於應用程式的右上角。
- 2 再次點按應用程式圖示，並選擇所需的圖示設計。
- 3 點按**確定**以儲存變更。

## 返回最近使用的應用程式

- 1 點按並按住**主頁鍵**。畫面會顯示包含您最近使用的應用程式圖示的彈出式視窗。
- 2 點按圖示以開啟應用程式，或者點按**返回鍵**以返回上一個畫面。

# 您的桌面


## 通知

通知提醒您收到新訊息、日曆事件、鬧鐘、以及進行中事項（如正在通話）等。

於通知面板，您可以檢視手機的目前狀態及等待通知。


收到通知時，其圖示會顯示於畫面頂部。等待通知的圖示會顯示於左方，而顯示 Wi-Fi 或電力等的系統圖示則於右方。

**注意：**可用選項視乎不同地區或服務供應商而可能有所不同。

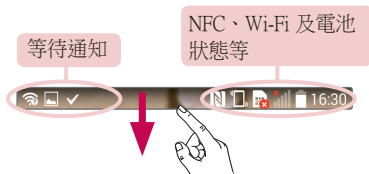

## 開啟通知面板

從狀態欄向下掃動以開啟通知面板

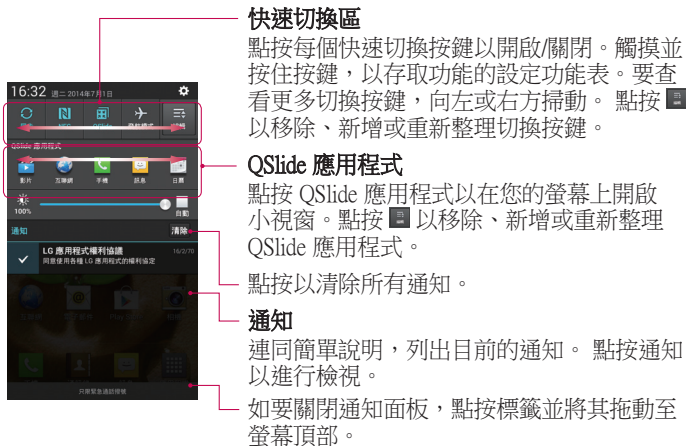

## 狀態欄上的指示圖示

於畫面頂部的狀態欄上顯示的指示圖示，報告未接來電、新訊息、日曆事件、裝置狀態等。



顯示於畫面頂部的圖示提供有關裝置狀態的資訊。以下圖表所列出的為最常用的圖示。

## 您的桌面

圖示	說明
	沒有 Micro-SIM 卡
	無訊號
	飛航模式
	已連接至 Wi-Fi 網絡
	有線耳機
	正在通話
	未接來電
	藍牙開啟
	系統警告
	鬧鐘已設定
	新留言訊息
	鈴聲靜音
	手機經 USB 傳輸線連接至 PC 或 USB 網絡連線已啟動
	NFC 已開啟


圖示	說明
	振動模式
	電池已完全充電
	電池充電中
	數據下載
	數據上傳
	正在取得 GPS
	從 GPS 接收位置數據
	正在同步數據
	新 Gmail
	新 Hangouts 訊息
	新訊息
	正在播放歌曲
	可攜式 Wi-Fi 熱點已啟動


**注意：**狀態欄上的圖示位置根據功能或服務可能有所不同。

## 螢幕鍵盤

您可以使用螢幕鍵盤輸入文字。螢幕鍵盤在您需要輸入文字時會自動在螢幕上顯示。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

### 使用鍵盤與輸入文字

 點按一次以將您要輸入的下一個字母大寫。點按兩下即可大寫所有字母。

 輕觸以切換數字和輸入語言鍵盤。

 點按以輸入一個空格。

 點按以在訊息欄新建一行。

 點按以刪除前一字母。

### 輸入重音字母

當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：「á」）。

例如，要輸入「á」，點按並按住「a」鍵直至放大鍵放大並顯示其他語言的字元。然後選擇所需的特殊字元。


# Google 帳戶設定

第一次開啟您的手機時，您可以啟動網絡，以登入至您的 Google 帳號，並選擇您想如何使用某些 Google 服務。

## 要設定 Google 帳號：

- 於系統提示的設定畫面登入 Google 帳號。

或者

- 點按  > **應用程式** 標籤 > 選擇一個 Google 應用程式，如 **Gmail** > 選擇**新增**以建立新帳號。

如果您擁有 Google 帳號，觸控**現有帳戶**，輸入您的電郵地址及密碼，然後按 。

於手機上設定了您的 Google 帳號後，您的手機會自動於網上與您的 Google 帳號進行同步。

您的通訊錄、Gmail 訊息、日曆事件及其他資訊會從網上的應用程式及服務同步至您的手機。（這視乎您的同步設定）。

登入後，您可使用 Gmail™ 並在手機上使用 Google 服務。

# 連接到網絡及裝置

## Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速瀏覽互聯網。使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。


### 連接至 Wi-Fi 網絡

要於手機上使用 Wi-Fi，您需要存取無線存取點或「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或使用保安功能；在連接它們前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

**注意：**如您並非處於 Wi-Fi 地區或已將 Wi-Fi 設定為**關閉**，您可能需支付由流動營運商收取的流動數據使用額外收費。

### 開啟 Wi-Fi 並連接至 Wi-Fi 網絡

- 1 觸控  > 應用程式標籤 > 設定 > 無線網路標籤下的 Wi-Fi。
- 2 將 Wi-Fi 設定為 **開啟** 以開啟并搜尋可用的 Wi-Fi 網絡。
- 3 再次點擊 Wi-Fi 功能表以查看已啟用或附近可用的 Wi-Fi 網絡。
  - 已加密的網絡旁邊會有一個鎖形圖示。
- 4 點按一個網絡以開始連接。
  - 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情）。
- 5 狀態欄上的圖示會顯示 Wi-Fi 狀態。

## 藍牙


在大部分手機上，您可以透過執行相應應用程式，而非從藍牙功能表，使用藍牙傳送資料。

### 注意：

- LG 並不會對經藍牙無線功能傳送或接收資料而造成的資料遺失、攔截或誤用負責。
- 隨時確保透過信任且安全的裝置分享與接收您的資料。若是裝置之間有障礙物，可能需要縮短可運行的距離。
- 有些裝置（特別是未經由藍牙 SIG 測試許可的裝置）可能會與您的手機不相容。

## 開啟藍牙並與藍牙裝置配對您的手機

您必需先將裝置跟另一部機器配對，才可將兩者連接。

- 1 觸控  > 應用程式標籤 > 設定 > 將無線網絡標籤下的藍牙設定為開啟。
  - 2 再次點擊藍牙功能表。您會看見顯示您手機的選項及即時搜尋裝置的選項。點擊搜尋裝置以檢視藍牙範圍內的可用裝置。
  - 3 從列表中選擇您想配對的裝置。
- 配對成功後，您的裝置就會連接到該裝置。

**備註：**部分裝置，特別是耳機或免提車內套件，可能設有固定的藍牙 PIN 碼，例如 0000。如其他裝置設定 PIN 碼，系統將提示您輸入。

## 經由藍牙無線功能發送資料

- 1 從適當的應用程式或下載中選擇檔案或項目，如通訊錄、日曆事件或媒體檔案。
- 2 選擇經藍牙傳送資料的選項。


**備註：**選擇選項的方式會因資料類型而有所差異。

- 3 搜尋和配對啟動藍牙的裝置。

## 連接到網絡及裝置

### 透過藍牙無線功能接收資料

1 觸控  > 應用程式標籤 > 設定 > 將藍牙設定為開啟。

**注意：**要選擇您裝置顯示的時間長短，觸控  > 可見性逾時。

2 再次點按藍牙功能表，並勾選螢幕頂部的核取方塊，以在其他裝置顯示您的手機。


## 共享手機的數據連接

USB 共享網絡及可攜式 Wi-Fi 熱點在沒有可用的無線網絡連線可用時是個非常好的功能。您可以透過 USB 線（USB 網絡連線）與單一電腦共享手機的流動數據連接。您亦可同時與多於一部裝置分享您手機的數據連接。將您的手機作為一個可攜式 Wi-Fi 熱點。

當手機正共享數據連接，狀態欄會顯示圖示，而通知欄內也會顯示進行中的通知。

有關共享網絡及可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com/tether>。

### 更改可攜式 Wi-Fi 熱點設定：

1 觸控  > 應用程式標籤 > 設定 > 無線網路標籤下的網絡共享和網絡 > Wi-Fi 熱點 > 選擇您想調整的選項。

**提示！** 如您的電腦運行的為 Windows 7 或最近發行的 Linux 版本（如 Ubuntu），您將無需為共享網絡而預備您的電腦。不過，如您正使用較舊的 Windows 版本或其他作業系統，您可能需要預備您的電腦以經 USB 建立網絡連線。有關支援 USB 共享網絡的操作系統及其設定方式的最新資訊，請瀏覽 <http://www.android.com/tether>。

### 要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

1 於桌面，觸控  > 應用程式標籤 > 設定

- 2 於**無線網路**標籤下觸控**網絡共享和網絡**，然後選擇 **Wi-Fi 熱點**。
- 3 確保已開啟**Wi-Fi 熱點**。
- 4 觸控**設定Wi-Fi熱點**。
  - 會開啟設定Wi-Fi熱點的對話方塊。
  - 您可以更改其他電腦於掃描 Wi-Fi 網絡時看見的**Wi-Fi名稱 (SSID)**。
  - 您也可以點按**安全功能表**，使用預先共用的密碼 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。
  - 如果您觸控 **WPA2 PSK** 安全選項，密碼欄會新增至**設定Wi-Fi熱點**的對話方塊上。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要輸入該密碼。您可點按**安全功能表內的開啟**，從 Wi-Fi 網絡移除安全性。
- 5 點按**儲存**。

**注意！** 如果您將安全選項設定為開啟，您不能阻止他人於未經授權下使用網上服務，並可能造成額外收費。要避免未經授權的使用，我們建議您啟用安全選項。

## Wi-Fi Direct

Wi-Fi Direct 支援連接 Wi-Fi 功能裝置而無需接入點。由於 Wi-Fi Direct 需要使用電量較高，建議您使用 Wi-Fi Direct 功能時，將手機插入電源插座。事先檢查 Wi-Fi 和 Wi-Fi Direct 網絡連接，確保使用者已連接至相同網絡。

## 使用 USB 纜線進行 PC 連接

了解如何於 USB 連接模式中以 USB 纜線將您的裝置連接到 PC。連接您的裝置至電腦即可從您的裝置傳送與接收資料，以及直接使用電腦

## 連接到網絡及裝置

軟件 (LG PC Suite)。


### 將手機與您的電腦同步

要以 USB 數據線將手機與電腦同步，您需要在電腦上安裝電腦軟件 (LG PC Suite)。於 LG 網站 ([www.lg.com](http://www.lg.com)) 下載程式。

- 1 使用 USB 數據線連接手機至電腦。將會顯示選取USB連接方法清單；選擇 LG 軟體。
- 2 在您的電腦上執行 LG PC suite 程式。參閱電腦軟件 (LG PC Suite) 說明以獲得更多資訊。

**備註：**將 LG 裝置連接至電腦時，需要 LG 內置 USB 驅動程式。當您安裝「LG PC Suite」電腦軟件，驅動程式將會自動安裝。

### 使用 USB 大容量儲存模式傳音樂、相片及影片

- 1 使用 USB 數據線將手機連接到 PC。
- 2 如您並未於 PC 上安裝LG Android 平台驅動程式，您將需手動更改設定。選擇**功能表鍵**  > **系統設定** > **PC 連接** > **選取USB 連接方法**，然後選擇**媒體同步 (MTP)**。
- 3 現在您可於 PC 上檢視大容量儲存內容及傳輸檔案。

### 與 Windows Media Player 同步

確保電腦已安裝 Windows Media Player。





- 1 使用 USB 數據線將手機連接至已安裝 Windows Media Player 的 PC。
- 2 選擇**媒體同步 (MTP)** 選項。連接完成後，電腦會出現彈出式視窗。
- 3 開啟 Windows Media Player 以同步音樂檔案。
- 4 在彈出式視窗編輯或輸入您的裝置名稱（如有需要）。
- 5 選擇並拖放要同步列表的音樂檔案。
- 6 開啟同步。
  - 必須符合以下要求以完成與 Windows Media Player 的同步。


項目	要求
OS	Microsoft Windows XP SP2、Vista 或更高版本
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如 Windows Media Player 版本為低於 10，請安裝版本 10 或更高版本。



# 通話功能

## 撥打電話



- 1 點按  開啟按鈕。
- 2 使用鍵盤輸入號碼。要刪除數字，點按 。
- 3 點按  撥打電話。
- 4 要結束通話，點按 **結束** 圖示 。

**提示！** 要在撥打國際電話時輸入「+」，點按並按住 。

## 從通訊錄中撥打電話

- 1 點按  可開啟通訊錄。
- 2 捲動聯絡人清單，或點按 **搜尋通訊錄** 以輸入您想致電的聯絡人名稱。
- 3 於列表中，點按通訊錄兩次或點按您想進行通話的 。

## 接聽來電和拒接來電

於鎖定狀態接收到來電時，向任何方向撥動  以接聽來電。  
向任何方向撥動  以拒絕接聽來電。  
如您想發送訊息，從底部按住並滑動 **用訊息拒絕** 圖示。






### **提示！ 使用訊息拒絕**

透過此項功能，您可以迅速傳送訊息。如果您需要在會議中拒接來電，此功能就十分有用。

## 調節通話音量



要在通話時調整通話音量，使用手機左側的向上及向下音量鍵。

## 通話期間撥打第二個電話


- 1 撥打第一個電話時，點按**功能表鍵** > **新增通話**，然後撥打號碼。您亦可跳至最近撥出號碼列表以點按  或以點按  搜尋通訊錄並選擇您想進行通話的聯絡人。
- 2 點按  撥打電話。
- 3 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 4 點按顯示的號碼，在通話之間切換。或點按  **合併通話**以開始電話會議。
- 5 要結束進行中的通話，點按**結束**，或按**主頁鍵**，並向下滑動通知列，然後選擇**結束通話**圖示 。

**注意：** 您撥打的每一個通話均需收費。

## 檢視通話記錄



在桌面點按  然後選擇 **通話記錄** 標籤 。  
檢視所有已撥、已接和未接來電的完整清單。

**提示！** 點按任何通話記錄項目，檢視通話的日期、時間和持續時間。

**提示！** 點按**功能表鍵** ，然後點按**刪除全部**以刪除所有記錄項目。

## 通話設定

您可設定由供應商所提供如來電轉接及其他特別功能等的手機通話設定。


- 1 在桌面點按 。
- 2 點按 。
- 3 點按**通話設定**並選擇您想進行調整的選項。

# 通訊錄




新增聯絡人至您的手機並與您的 Google 帳號或其他支援通訊錄同步的帳號同步。

## 搜尋聯絡人

### 從桌面

- 1 點按  可開啟通訊錄。
- 2 點按**搜尋通訊錄**，使用鍵盤輸入該聯絡人姓名。


## 新增聯絡人

- 1 點按 ，輸入新聯絡人的號碼，然後點按**功能表鍵**  > 點按**新增至通訊錄** > **新增通訊錄**。
- 2 若要為新聯絡人新增圖片，點按新增圖片。選擇**拍照**或**從媒體匣中選取**。
- 3 點按  選擇通訊錄類型。
- 4 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。
- 5 點按**儲存**。



## 常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

### 新增聯絡人至您的最愛



- 1 點按  可開啟通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右面的星號。星號將會變為黃色。

### 從最愛清單移除聯絡人

- 1 點按  可開啟通訊錄。
- 2 點按  標籤，然後選擇聯絡人以檢視詳細資料。

- 3 點按聯絡人名稱右面的黃色星號。星號會變為灰色及聯絡人將從我的最愛移除。

## 建立群組



- 1 點按  可開啟通訊錄。
- 2 點按**群組**並點按**功能表鍵**  > 選擇**新群組**。
- 3 為新群組輸入新名稱。您亦可為新建立的群組設定鈴聲。
- 4 點按**儲存**以保存群組。

**注意：**若要刪除某群組，指定給該群組的聯絡人將不會遺失。他們仍將保留在您的聯絡人中。


# 訊息


手機將文字訊息和多媒體訊息結合在一個易用的功能表中。

## 發送訊息


- 1 點按桌面上的  並點按  以開啟空白訊息。
- 2 在**收件者**一欄中輸入聯絡人名稱或聯絡人號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可點按一個建議的收件者。您可新增多於一個聯絡人。


**備註：**向每個聯絡人所發送的訊息將被個別收取費用。

- 3 點按「**輸入訊息**」欄並開始撰寫訊息。
- 4 點按  以開啟選項功能表。從**快捷訊息**、**插入表情符號**、**排程傳送**、**新增主旨**及**捨棄**進行選擇。

**提示！** 您可點按  圖示以將您想分享的檔案附加至訊息。

- 5 點按**發送**以發送訊息。
- 6 螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息串連。

 **警告：**160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及語言而有所不同。

 **警告：**如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

## 訊息串連方塊

與另一方交換的訊息（文字訊息、多媒體訊息）可按時間順序顯示，讓您方便地查看對話總覽。

## 更改訊息設定

您手機的訊息設置是您可立即發送訊息。您可因應您的喜好更改設定。

- 點按於桌面上的**訊息**圖示，點按  然後點按**設定**。

# 電子郵件

您可使用電子郵件應用程式以從例如 Gmail 服務等讀取電子郵件。電子郵件應用程式支援以下帳號類型：POP3、IMAP 及 Exchange。您的服務供應商或管理員系統可提供您所需的帳號設定。

## 管理電子郵件帳號

於首次開啟**電子郵件**應用程式時，設置精靈將開啟以助您設置電子郵件帳號。

於初始設置後，電子郵件會顯示您收件匣的內容。如果您已新增多於一個帳戶，您可在帳戶間切換。



**要新增其他電郵帳號：**

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 設定 > 新增帳號。

**要更改電子郵件設定：**

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 設定 > 一般設定。

**要刪除電子郵件：**

- 點按  > 應用程式標籤 > 電子郵件 > 點按  > 設定 > 點按  > 移除帳號 > 點按您想刪除的帳號 > 移除 > 選擇是。




## 處理帳號資料夾

點按  > 應用程式標籤 > 電子郵件，點按  並選擇資料夾。

每個帳戶設有收件匣、寄件匣、已發送及草稿資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的功能而定。

## 編寫及發送電子郵件

### 要編寫及發送訊息

- 1 在**電子郵件**應用程式，點按。
- 2 輸入將會收到訊息的收件者的地址。於輸入文字時，會從您的通訊錄建議符合地址。以分號分隔多個地址。
- 3 點按**副本/密件副本**以新增副本/密件副本，如有需要，點按以附加檔案。
- 4 輸入訊息的文字。
- 5 點按。  
如您並無連接至網絡，例如正處於飛行模式，您發送的訊息會儲存在寄件匣資料夾直至您再次連接至網絡。如載有任何有待處理的訊息，寄件匣會顯示於**帳號**畫面。

**提示！** 當新電子郵件到達您的收件匣時，會以聲音或震動進行通知。點按電子郵件通知停止接收通知。

# 相機

要開啟相機應用程式，點按於桌面上的**相機** 。


## 了解取景器
















- 1 **閃光燈** - 選擇關閉、開啟、自動。
- 2 **切換鏡頭** - 在後置鏡頭和前置鏡頭之間切換。
- 3 **拍攝模式** - 選擇**標準**、**動態調和 (HDR)**、**超廣角**或**連環拍攝**等。
- 4 **設定** - 點按此圖示開啟設定功能表。請參閱**使用進階設定**。
- 5 **影片模式** - 輕觸此圖示可切換到影片模式。
- 6 **拍攝按鍵**
- 7 **媒體匣** - 點按可觀賞您最後拍攝的相片。此讓您可於相機模式時進入媒體匣並檢視已儲存相片。

**注意：**於拍攝相片前請確保相機鏡頭清潔。

## 使用進階設定

在取景器，點按  以開啟進階選項。於拍攝相片前請確保相機鏡頭清潔。選擇選項後，請點按**返回鍵**。


	要拍攝相片，請說出以下字詞：Cheese、Smile、Whisky、Kimchi 或 LG。
	決定並控制進入影片的亮度。
	點按以選擇對焦模式。
	選擇相片解像度。若您選擇高解像度，檔案大小將增加，表示您可在記憶體儲存較少的相片。
	ISO 等級決定相機的光線感應器的感光度。ISO 等級越高，相機對光線越敏感。當您在光線較暗環境下拍照且無法使用補光燈時，此功能非常有用。
	設定白平衡。
	設定色彩效果。
	設定於按下拍攝鍵後延遲快門。此功能最適合自拍時使用。
	啟動此功能以使用手機的地理標籤。 <b>注意：</b> 此功能只可於 GPS 功能啟用或連結網絡時提供。
	選擇快門聲音。
	設定音量鍵以用作擷取或縮放。
	打開說明指南，了解功能的運作方式。
	還原所有相機的預設設定。

# 相機

## 提示！

- 當您退出相機後，某些設定將返回預設，例如白平衡、色彩效果、計時器及場景模式。拍攝下一張相片前，請先檢查這些設定。
- 設定功能表疊於取景器上，因此當您更改相片顏色或品質的設定，您會在設定功能表背後看見預覽圖像的更改。

## 快速拍照

- 1 開啟**相機**應用程式。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 對焦方框將出現於取景器中心。您亦可點按螢幕中任何地方以進行對焦。
- 4 當對焦方塊變綠，則表示相機對焦完成。
- 5 點按  以拍攝相片。

## 當拍攝相片後

如自動檢視被設定為開啟（根據進階設定使用），您拍攝的相片會出現於螢幕上。



點按以使用 SmartShare 功能分享您的相片。



點按以立即拍攝新相片。



點按以將相片發送至其他人或通過社交網絡服務分享相片。



點按以刪除相片。

**提示！** 如您擁有於手機上建立的 SNS 帳號，您可與 SNS 社群分享相片。

**點按功能表鍵**  以開啟全部進階選項。

**將影像設定為** - 點按即可使用相片為主頁螢幕牆紙、通訊錄相片、鎖定畫面牆紙或Wallpaper。

**移動** - 點按以將相片移動至其他位置。

**複製** - 點按以將已選取相片複製並保存至其他相簿。

**複製至剪輯工作列** - 點按以複製相片並將其儲存於剪輯工作列。

**重新命名** - 點按以編輯已選取相片的名稱。

**向左/右旋轉** - 向左或向右旋轉。

**修剪** - 裁剪您的相片。移動手指橫跨畫面以選擇裁剪區域。


**編輯** - 檢視及編輯相片。

**幻燈片** - 自動逐一顯示目前文件夾中的圖像。

**新增位置** - 相機設定已設為關閉，地理標籤遺失，即相片位置資訊，可新增位置資訊。

**詳細資訊** - 了解有關內容的更多資訊。


## 檢視已儲存的相片

當於相機模式時您可存取已保存相片。只需點按媒體匣圖示  然後媒體匣隨即顯示。

- 若要檢視更多相片，請左右捲動。
- 要放大或縮小，請在畫面上點按兩下，或放上兩隻手指，然後分開（將手指靠攏即可縮小）。

# 視像攝錄機

## 了解取景器

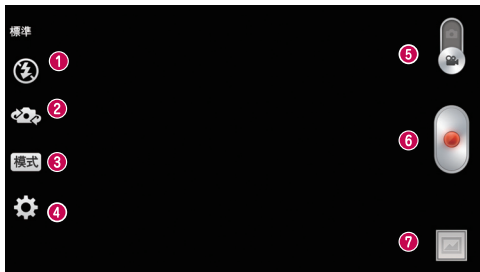

- 1 閃光燈 - 選擇關閉、開啟。
- 2 切換鏡頭 - 在前置和後置相機鏡頭之間切換。
- 3 錄製模式 - 選擇標準或Live effect。
- 4 設定 - 輕觸此圖示可開啟設定功能表。
- 5 相機模式 - 輕觸並向上滑動此圖示可切換成相機模式。
- 6 開始錄製
- 7 媒體匣 - 輕觸可檢視上一次錄製的影片。此選項可讓您存取媒體匣，並在拍攝模式中檢視儲存的影片。









### 提示！

於錄製影片時，將兩隻手指置於螢幕上並收窄以使用縮放功能。



# 視像攝錄機

## 使用進階設定

從取景器中點按  以開啟所有進階選項。

	點按以設定正錄製影片的大小（像素）。
	決定及控制進入鏡頭的亮度。您可滑動亮度指標：向「-」滑動使影片較暗，或向「+」滑動使影片較亮。
	設定白平衡。
	設定色彩效果。
	啟動此功能以使用手機的地理標籤。 注意：此功能只可於 GPS 功能啟用或連結網絡時提供。
	設定音量鍵以用作錄製或縮放。
	於想了解功能如何運作時可隨時點按此圖示。此圖示會向您提供快速指南。
	還原全部視像攝錄機的預設設定。

## 錄製短片



- 1 開啟**相機**應用程式並點按**影片模式**按鈕。
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 握住手機，將鏡頭對準拍攝影片的對象。
- 4 按一下  以開始錄製。
- 5 紅光將於取景器左上角出現，而計時器會顯示影片錄製的長度。
- 6 點按螢幕上的  以停止攝錄。

## 錄製影片後

如自動檢視被設置為開啟時代表您影片的靜態圖像將會出現於螢幕上。

	點按以使用 SmartShare 功能分享您的影片。
	點按以立即拍攝另一段影片。
	點按以將影片發送至其他人或通過社交網絡服務分享影片。
	點按以刪除影片。

## 觀看已儲存的影片

- 1 在取景器中，點按 。
- 2 您的媒體匣會顯示於螢幕上。
- 3 點按  以自動播放影片。


## 觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機左側的音量鍵。

### 即時縮放功能

即時縮放讓您於正在播放的影片上按比例放大或縮小，以令所需的掃描變得更大或更小。

1 觀看影片時，運用食指及拇指捏緊或散開以放大或縮小。

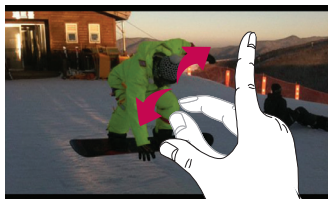

#### 注意：


- 在影片播放模式時，向上或向下滑動畫面可調整畫面亮度（左方）、音量（右方）。
- 於影片播放模式時，將畫面向左或向右撥動，將快進或快退。

**注意：**請勿過份用力按壓；只需輕力但準確地點按，觸控螢幕已能感應。


# LG 獨有功能

## QuickMemo 功能

使用 **QuickMemo 功能** 在通話期間實際有效地建立備忘錄，還可附上已儲存圖片或目前手機畫面。

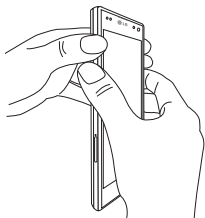


或者

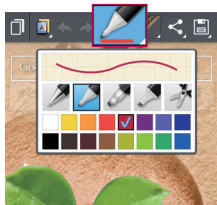



- 1 在您想擷取的螢幕上，同時按向上及向下音量鍵，即可進入 QuickMemo 功能螢幕。

或者

點按並向下滑動狀態列，然後點按 。

- 2 從**筆型、顏色、橡皮擦**選擇所需功能表選項，然後建立備忘錄。

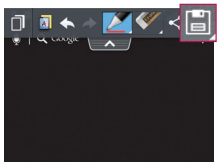








- 3 點按並選擇編輯功能表的  以連同目前畫面儲存備忘錄。

**注意：**使用 QuickMemo 功能期間，請使用指尖。請勿使用指甲。

## 使用 QuickMemo 選項

你可於使用 QuickMenu 功能時簡易使用 QuickMemo 選項。

	點按以於螢幕上保留目前備忘錄，並同時使用手機。
	選擇是否使用背景螢幕。
	復原或重新執行。
	選擇筆型及顏色。
	擦除已輸入的內容。
	點按以將備忘錄發送至其他人或通過社交網絡服務分享備忘錄。
	將備忘錄與目前畫面一同保存至 <b>筆記本/媒體匣</b> 。

## 檢視已儲存的 QuickMemo


點按**媒體匣/筆記本**並選擇 QuickMemo 相簿。

# LG 獨有功能

## 筆記本功能

使用筆記本應用程式，您可管理和個人化一系列不同資訊。筆記本允許您建立擁有繪圖、圖像、地圖及貼紙的個人獨有筆記。

### 製作筆記


- 1 點按  > 應用程式標籤 > 筆記本。
- 2 點按**新備忘錄**即可製作新的筆記。
- 3 選擇喜愛的模式（**標題、筆型、顏色**）。
- 4 於空白頁面建立簡單筆記。

### 了解筆記本

書架



Pages-property panels (頁面-屬性面板)

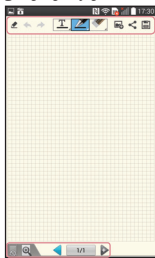

### 書架



搜尋不同筆記頁面。



以筆記本檔、PDF 檔或圖片檔方式通過電子郵件/Gmail 分享。



從記錄刪除已保存筆記本。

## Pages-property panels (頁面-屬性面板)



選擇唯讀或編輯模式。



復原或重新執行。



點按此按鈕以進行編寫。



選擇筆型、厚度、不透明及顏色。



擦除已輸入的內容。



點按以附加檔案至筆記。



點按以將筆記發送至其他人或通過社交網絡服務分享。



連同目前螢幕儲存筆記。



選擇以鎖定或解鎖正面按鍵。



點選此按鈕即可放大輸入區域。

## 檢視已儲存的筆記本


- 已儲存的筆記本備忘錄於書架上。
- 如您從 QuickMemo 儲存備忘錄，QuickMemo 備忘錄筆記會被建立並自動儲存於書架上。

**備註：**更多有關來自筆記本的指南，請參閱[筆記本 > 筆記本指南](#)。


## QuickTranslator

只需將智能手機相機對準想進行了解的外語句子。您便可隨時隨地取得實時翻譯。

您可從 Google Play Store 購買用作離線翻譯的附加字典。

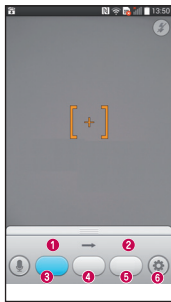

- 1 主頁語言。
- 2 目標語言
- 3 單字翻譯。
- 4 段落翻譯。
- 5 句子翻譯。
- 6 設定。


- 1 點按  > 應用程式標籤 > QuickTranslator。
- 2 點按單字、線路或段落。
- 3 點按並選擇喜好語言。
- 4 手持手機對準您想進行翻譯的主題數秒。

**注意：**只提供一本免費字典。額外字典需進行購買。請從以下列表選擇您想安裝作為免費贈送的字典。

**注意：**於辨別需翻譯的字母時所需速度可能因其大小、字型、顏色、亮度、角度而有所不同。

## QSlide 功能

QSlide 功能可於您的手機上覆蓋，以輕鬆實現多視窗功能。

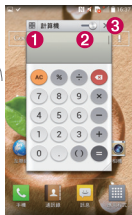

1		點按以離開 QSlide 功能並返回至完整全螢幕。
2		點按以調整透明度。
3		點按以結束 QSlide 功能。
4		輕觸以調整大小。

- 1 點按並將狀態欄向下撥動 > 點按 QSlide 應用程式或於使用 QSlide 功能支援的功能時 > 點按 。功能將持續以小視窗顯示於螢幕上。
- 2 您可以撥打電話、瀏覽網站或選擇其他電話選項。當透明度欄並未全滿時 ，您亦可使用及點按小視窗下方螢幕。

**備註：**QSlide 功能可同時支援最多兩個視窗。


### 提示！


您可點按並向下滑動通告面板。  
點按 以於通知面板管理「QSlide」。

# LG 獨有功能

## 雙播放功能

您可於兩個以無線方式或數據線連接的顯示上顯示不同畫面。

1 於外部顯示上播放內容時點按主頁  鍵以進行雙播放。




2 您可使用通知面板停止於外部顯示上播放內容。

### 重要資訊

- 將智能手機以無線方式 (Miracast) 或以數據線 (MHL 纜線) 連接到顯示。
- 您可將支援 MHL 或 Miracast 的電視或顯示器連接至智能手機。
- 某些影片檔案可能不被雙播放功能支援。
- 建議使用屏蔽 LG MHL 纜線。

### 鏡像

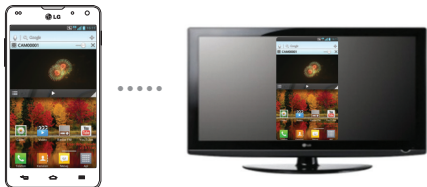

### 雙播放







### 注意：

- 雙播放所需的最低電視解像度為 720p (1280x720)


## LG SmartWorld

LG SmartWorld 提供各式各樣的豐富內容 - 字型、主題、遊戲、應用程式。

### 如何從手機進入 LG SmartWorld

- 1 點按  >  > 應用程式標籤 > 點按  圖示以存取 LG SmartWorld。
  - 2 點按  登入並輸入 LG SmartWorld 的帳號及密碼 並點按登入。如您尚未註冊，點按註冊以接收您的 LG SmartWorld 會籍。
  - 3 下載想要的內容。
- \* 若您使用手機網絡，數據費用會按照您與營運商訂立的數據計劃收取。
  - \* LG SmartWorld 或未能在所有營運商或國家/地區中提供。

### 備註：如果沒有 圖示該怎麼辦？


- 1 使用手機網絡瀏覽器，存取 LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) 並選擇您的國家/地區。
- 2 下載 LG SmartWorld 應用程式。
- 3 執行並安裝已下載的檔案。
- 4 點按  圖示以存取 LG SmartWorld。

### LG SmartWorld 獨家優惠

- 1 在您的智能手機點綴您自己的風格，使用 LG SmartWorld 提供的主頁主題及鍵盤主題和字型。（然而，此服務只限於個別裝置。請登入 LG SmartWorld 網站以檢查是否可用）
- 2 加入持續推出的推廣，以享受 LG SmartWorld 的特別服務。

## 媒體匣

您可在內置記憶體中儲存多媒體檔案，以便存取您所有的多媒體檔案。使用此應用程式以檢視如圖片或影片等多媒體檔案。

- 1 點按  > 應用程式標籤 > 媒體匣。  
開啟儲存多媒體檔案的類別欄列表。

### 注意：

- 視乎手機的軟件而定，可能不支援部分檔案格式。
- 視乎檔案編碼而定，某些檔案或不能正常播放。

## 檢視圖片

啟動媒體匣將顯示可提供的文件夾。當其他如電子郵件等應用程式保存圖片時，下載文件夾會自動建立以剩載該圖片。同樣地，當擷取螢幕截圖時螢幕截圖並會建立。選擇文件夾以進行開啟。



圖片會以建立日期顯示於文件夾中。選擇圖片以全螢幕檢視。向左或右捲動以檢視下一個或上一個圖像。

## 放大及縮小

使用以下方法以放大圖像：

- 於任何位置點按兩次以放大。
- 於任何位置將手指分開以放大。捏緊以縮小或點按兩次以重新放大。

## 播放影片

影片檔案的  圖示將顯示於預覽中。選擇影片進行觀看並點按 。影片應用程式將隨即啟動。



## 編輯相片/影片

於查看相片/影片時，點按**功能表鍵**  並使用進階編輯選項。

- 幻燈片：以目前文件夾中的圖像開始幻燈片。

### 刪除圖像

使用以下方法：

- 於文件夾中，點按  並以勾選方式選擇相片/影片，然後點按刪除。
- 於查看相片/影片時，點按 。


### 設定為牆紙

於檢視相片時，點按**功能表鍵**  > **將影像設定為**以將圖像設定為主頁螢幕牆紙、通訊錄相片、鎖定書面牆紙或Wallpaper。


#### 注意：

- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。

## 影片

手機配備內置影片播放器，可讓您播放所有最愛的影片。要存取影片播放器，點按  > **應用程式標籤** > **影片**。

### 播放影片

- 1 點按  > **應用程式標籤** > **影片**。
- 2 選擇要播放的影片。



- |   |  |                              |
|---|--|------------------------------|
| 1 |  | 輕觸此選項可繼續播放影片。                |
| 2 |  | 輕觸可快轉 10 秒。                  |
| 3 |  | 輕觸可倒轉 10 秒。                  |
| 4 |  | 輕觸可管理影片音量。                   |
| 5 |  | 輕觸此選項可變更影片螢幕比例。              |
| 6 |  | 輕觸此圖示可擷取影片畫面。                |
| 7 |  | 輕觸此圖示可進入進入 QSlide 模式。        |
| 8 |  | 輕觸此選項即可經由 SmartShare 功能共享影片。 |
| 9 |  | 輕觸可鎖定影片畫面。                   |


若要在觀看影片時調節音量，請按手機左側的向上及向下音量鍵。點按並按住列表上的任何影片 **分享**、**裁剪**、**刪除**及**詳細資訊**選項將隨即顯示。

## 影片編輯器

您可編輯儲存於手機上的相片或影片。

**注意：**影片編輯功能只支援使用本手機拍攝或錄製的相片或影片。

## < 項目列表畫面 >

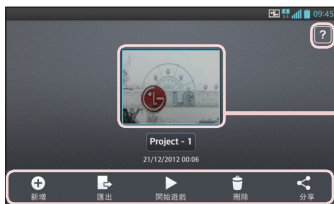

說明

項目列表  
區域

按鍵區域



建立項目



如影片等項目應匯出至應用程式進行播放



播放項目




刪除項目



於例如 YouTube 等應用程式中分享項目

## < 項目編輯畫面 >

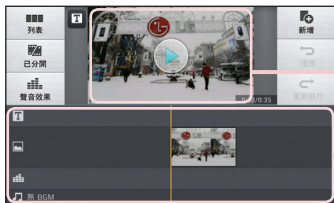







檢視器區域

時間軸區域



移至項目列表畫面目前已編輯的項目會被自動保存










	於播放指示器處將影片檔分開為兩部份
	新增音效
	新增影片、圖像或音效檔
	取消操作
	重新執行
	新增文字至影片或影像檔

## 影片魔法師

您可以使用自己的圖片/影片和音樂製作自己的電影。

- 1 點按  > 應用程式標籤 > 影片魔法師。
- 2 看到對需根據步驟的簡介後，點按**確定**。



- 3 點按  以新增圖像或影片至您的電影。
- 4 點按喜愛的圖像或影片，然後點按 。
  - 要移除圖像或影片，點按  並選擇要刪除的檔案 > .
  - 要重新排列，點按並按住圖像/影片，然後拖曳並放置到理想位置。
- 5 點按**選擇樣式**以選擇喜愛的電影風格。
  - 捲動並選擇您喜愛的風格。當您於捲動同時，風格的預覽將會顯示。
- 6 點按**選取音樂**以設定背景音樂。
- 7 點按  以播放您的電影。
- 8 點按  以使用文字、標籤或 Magic Spot 編輯影片。
  - 編輯影片後，點按 .
- 9 點按  以保存影片。  
點按  檢視對於使用此功能的說明資訊。

## 音樂

手機配備內置音樂播放器，可讓您播放所有最愛的曲目。要存取音樂

播放器，點按  > 應用程式標籤 > 音樂。

## 新增音樂檔案至手機


開始傳輸音樂檔至手機：

- 使用媒體同步 (MTP) 傳輸音樂。
- 從無線網絡下載。
- 將手機同步至電腦
- 通過接收檔案。

## 使用媒體同步 (MTP) 傳輸音樂

- 1 使用 USB 線將手機連接到電腦。
- 2 選擇**媒體同步 (MTP)** 選項。您的手機會顯示為電腦上的其他硬碟。點擊該硬碟以檢視。複製電腦的檔案至磁碟資料夾。
- 3 完成傳輸檔案後，向下滑動狀態列並點按 **選取USB連接方法 > 手機充電**。您現在可以安全地移除您的裝置。

## 播放歌曲

- 1 點按  > 應用程式標籤 > 音樂。
- 2 點按**歌曲**。
- 3 選擇要播放的歌曲。



點選此圖示即可暫停播放。



點選此圖示即可繼續播放。



點選此圖示即可跳至下一首曲目。輕觸並按住此圖示則可快轉。



點選此圖示即可重新啟動目前的曲目，或按兩下可跳至前一首曲目。輕觸並按住此圖示則可倒轉。

	點選此圖示即可顯示音量滑動軸，然後調整滑動軸上的播放音量。
	點選此圖示即可設定音效。
	點選此圖示即可使用 YouTube 尋找檔案。
	點選此圖示即可開啟目前的播放列表。
	點選此圖示即可將歌曲加到我的最愛。
	點選此圖示即可以隨機播放模式播放目前的播放列表 (依隨機順序播放曲目)。
	點選此圖示即可切換重複模式，讓您重複所有歌曲、重複目前歌曲，或關閉重複功能。
	點選此圖示即可透過 SmartShare 功能共享音樂。

要在聆聽音樂時調節音量，按手機左方的向上及向下音量鍵。點按並按住清單上的任何歌曲，播放、新增至播放列表、分享、設為鈴聲、刪除、詳細資料及搜尋選項將隨即顯示。

**注意：**



- 視乎裝置軟件而定，某些檔案格式並不支援。
- 如果檔案大小超過可用的記憶體，則在開啟檔案時會發生錯誤。


**注意：**音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您或需要取得授權或許可，才可以複寫或複製音樂。在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。




# 實用程式

## 設定鬧鐘



- 1 點按  > 應用程式標籤 > 鬧鐘/時鐘 > 。
- 2 設定鬧鐘後，手機會讓您知道距離鬧鐘響起還剩下多少時間。
- 3 設定**重複**、**暫停時間**、**震動**、**鬧鐘提示音**、**鬧鐘音量**、**自動應用程式啟動器**、**拼圖鎖及備忘錄**。點按**儲存**。

**備註：**如要在鬧鐘列表畫面上改變鬧鐘設定，點按**功能表鍵**  並選擇**設定**。

## 使用計算機

- 1 點按  > 應用程式標籤 > 計算機。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，請點按所需的功能（+、-、×、÷），然後按「=」。
- 4 如要進行更複雜的計選，點按 ，選擇**科學計算機**，然後選擇 sin、cos、tan、log 等。
- 5 要檢查記錄請點按**功能表鍵**  選擇**計算記錄**。





## 新增事件至日曆


- 1 點按  > 應用程式標籤 > 日曆。
- 2 您可在螢幕中找到不同的日曆檢視類型（日、星期、月、年份、議事日程）。
- 3 點按您想新增事件的日期並點按 。
- 4 點按**事件名稱**然後輸入事件名稱。
- 5 點按**位置**以進入地點。檢查日期，並輸入事件開始及完結的時間。
- 6 若要新增備註至您的事件，點按**連結備忘錄**然後輸入詳細資料。
- 7 若要重複鬧鐘，請設定**重複**，如有需要亦可設定**提醒類型**。
- 8 點按**儲存**，將事件儲存至日曆。

## 語音備忘錄


使用語音備忘錄錄製語音備忘錄或其他聲音檔案。

### 錄製聲音或語音

- 1 點按  > 應用程式標籤並選擇語音備忘錄。
- 2 點按  開始錄音。
- 3 選擇  結束錄音。
- 4 點按  以聆聽錄音。

**備註：**點按  以查看已錄製檔案。您可聆聽已儲存的錄音。可供錄音時間可能與實際錄音有所不同。

### 發送錄音

- 1 完成錄製後，可透過點按  分享聲音。
- 2 從**訊息、備忘錄、電子郵件、藍牙、Gmail**或**SmartShare Beam**進行選擇。當您選擇訊息時，錄音將被新增至訊息。您可正常撰寫並發送訊息。


## 工作管理員

您可使用工作管理員管理應用程式。您可簡易查看目前正運行的應用程式數目並關閉某些應用程式。您也可以解除安裝裝置上已安裝的應用程式。

## 工作

此工作可使用 MS Exchange 帳戶同步處理。您可在 MS Outlook 或 MS Office Web Access 中建立工作、重新編輯和刪除工作。

### 同步處理 MS Exchange

- 1 點按  > 應用程式標籤 > 設定。
- 2 點按 帳號及同步處理 > 新增帳號。
- 3 點按 Microsoft Exchange 以建立電郵地址和密碼。
- 4 請確認您已勾選自動同步處理數據。

## Polaris Office 4

Polaris Office 是專業的流動辦公室解決方案，讓使用者隨時隨地使用流動裝置輕鬆檢視不同類型的辦公室文件，包括 Word、Excel 和 PowerPoint 檔案。

點按  > 應用程式標籤 > Polaris Office 4。

### 檢視檔案

手機用戶現在可以直接在流動裝置上輕易檢視各式各樣的檔案類型，包括 Microsoft Office 文件和 Adobe PDF。使用 Polaris Office 檢視器檢視文件時，物件和版面會保持與原始文件相同。

## LG Backup

### 有關備份以及復原智能手機的資料

建議定期於內置儲存記憶體中建立與儲存備份檔案，尤其是更新任何軟件之前。在儲存記憶體保存目前的備份檔案，能讓您在遺失智能手機、手機被盜或突發問題令手機損壞的情況下，修復智能手機資料。此備份應用程式可於 LG 智能手機、其他軟件版權或操作系統間支援。因此，當您購買新的 LG 智能手機時，您可將目前的手機數據備份至新手機。

如果您已在智能手機上預載應用程式**備份**，您就可以使用此應用程式，備份和還原LG主頁螢幕、個人數據、媒體資料、LG apps、設定和下載的應用程序。

- 為智能手機進行手動備份。
- 為智能手機資料安排自動備份。
- 復原智能手機的資料。

#### 警告：

要防止因電源不足而導致於備份或還原過程中突發關機，您應時常保持電源充足。

### 備份

- 1 點按  > 應用程式標籤 > LG Backup > 備份。
- 2 選擇要備份項目旁的核取方塊，然後點按下一頁以進行備份。
- 3 點按內存空間 > 開始。


## 實用程式

4 當所有已選檔案已備份，您可點按完成以完成備份。

### 行程表備份

您亦可根據安排日程表設定自動備份智能手機的資料。

請按照下列步驟完成此工作：

點按  > 應用程式標籤 > LG Backup > 行程表備份。

### 檔案還原和管理

您可設定備份檔案，還原至所需狀態。

如要還原內建裝置記憶體資料，大容量儲存模式需先關閉。

點按  > 應用程式標籤 > LG Backup > 檔案還原和管理。

### Google+


使用此功能以通過 Google 的社交網絡服務與人們保存聯繫。

- 點按  > 應用程式標籤 > Google +。

**注意：**此功能可能因應地區或服務供應商而未能提供。

### 語音搜尋

使用此功能以語音搜尋網頁。

- 1 點按  > 應用程式標籤 > 語音搜尋。
- 2 當請說話出現於畫面時說出關鍵字或字詞。從出現的建議關鍵字中進行選擇。

**注意：**此功能可能因應地區或服務供應商而未能提供。

## 下載

使用此功能以查看已通過應用程式下載的檔案。

- 點按  > 應用程式標籤 > 下載。

**注意：**此功能可能因應地區或服務供應商而未能提供。

# 網絡功能

## 互聯網






使用此功能以瀏覽互聯網。無論您身在何處，有何需求，瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接在手機上載入更多內容。

**注意：** 連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

1 點按  > 應用程式標籤 > 互聯網。

## 使用網絡工具列

點按並按住網絡工具列並以手指向上撥動以開啟。



	點按以返回前一頁。
	點按以前往您在目前頁面後連接的一頁。此等同當您按 <b>返回</b> 鍵返回上一頁的相反操作方式。
	點按以前往主頁。
	點按以新增新視窗。
	點按即可存取書籤。


## 檢視網頁

點按地址欄，輸入網址並點按**跳至**。


## 網絡功能

### 開啟頁面

要前往新頁面，點按  → 

要前往其他網頁，點按 ，向上或向下捲動並點按頁面以進行選擇。

### 以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。



**注意：**此功能可能因應地區或服務供應商而未能提供。

### 書籤

要將目前網頁新增為書籤，點按  > 新增至書籤 > 確定。

要開啟已新增書籤的網頁，點按  並進行選擇。

### 歷史記錄

點按  > 記錄以從近期瀏覽的網頁列表中開啟網頁。要清除記錄，點按功能表  → 清除所有記錄。

### 使用彈出瀏覽器

使用此功能以於無需關閉目前應用程式的情況下存取互聯網。

於檢視內容時，例如包括網址的聯絡人或筆記，選擇網址然後點按彈出瀏覽器以開啟彈出瀏覽器。點按並拖曳瀏覽器以將其移動至其他地點。

要以全螢幕檢視瀏覽器，點按 

要關閉瀏覽器，點按 

## Chrome

使用 Chrome 以搜尋資訊及瀏覽網頁。


1 點按  > 應用程式標籤 > Chrome。


**注意：**此功能可能因應地區或服務供應商而未能提供。

### 檢視網頁


點按地址欄然後輸入網址或搜尋範圍。

### 開啟頁面

要前往新頁面，點按  → + New tab。


要前往其他網頁，點按 ，向上或向下捲動並點按頁面以進行選擇。

### 以語音搜尋網站

點按地址欄，點按 ，說出關鍵字，然後從所出現的建議關鍵字進行選擇。

### 與其他裝置同步

於登入相同 Google 帳號時同步與 Chrome 於其他裝置一同使用的開啟標籤及書籤。

要檢視於其他裝置上的開啟標籤，點按**功能表**  → Other devices。

選擇要開啟的網頁。

要檢視書籤，點按**功能表**  → 。

# 設定

## 存取設定功能表

- 1 在桌面點按  > 應用程式標籤 > 設定。  
或在桌面點按  > 系統設定。
- 2 選擇設定類別並選擇選項。

## 無線網絡

您可在這裡管理 Wi-Fi 和藍牙。您亦可設定流動網絡和切換至飛航模式。


### < Wi-Fi >

Wi-Fi - 開啟 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

#### 提示！ 如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連線，您需要把手機的 MAC 位址輸入到路由器。

您可於以下用戶介面找到 MAC 地址：點按 **應用程式標籤 > 設定 > Wi-Fi >**

 > **進階的Wi-Fi > MAC 位址。**

### <藍牙>

開啟或關閉藍牙無線功能以使用藍牙。

### <流動數據>

顯示數據使用並設定流動數據限制。

### <通話>

您可設置手機的通話設定，例如來電轉接及服務供應商提供的特別功能。

**語音留言** - 讓您選擇您服務供應商的語音信箱服務。

**固定撥號** - 開啟並編譯可從您的手機撥出的號碼列表。需要使用 PIN2 碼，您可以向網絡商索取此 PIN2 碼。僅可從手機撥出固定撥號列表包含的號碼。

**來電快顯視窗** - 在使用應用程式時，顯示來電快顯視窗。

**拒接來電** - 讓您設定拒接來電功能。從**來電拒接模式**或**拒絕通話**選擇。

**用訊息拒絕** - 當您想拒接來電時，使用此功能可以快速發送訊息。如果您需要在會議中拒接來電，此功能將十分有用。

**隱私保護工具** - 隱藏來電的致電人名稱及號碼。

**來電轉接** - 選擇當忙碌時、無人接聽或無法接通時轉駁所有通話。

**自動接聽** - 選擇自動接聽。

**連接震動** - 於另一方接聽來電時手機震動。

**儲存未知號碼** - 通話後將未知號碼新增至通訊錄。

**電源鍵結束通話** - 允許您結束通話。

**通話限制** - 鎖定來電、撥出通話或國際電話。

**通話時間** - 檢視最後通話、撥出通話、來電及所有通話的通話時間。

**其他通話設定** - 您可更改以下設定：

**本機號碼**：選擇是否在撥出的電話中顯示您的電話號碼。

**來電待接**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您（視乎您的網絡供應商而定）。

## <共用與連線>

**NFC** - 您的手機為可使用 NFC 的手機。NFC（近距離無線通訊）為一種無線連接技術，使得電子裝置之間具有雙向溝通能力。NFC 可於數公分的距離上運作。您可輕鬆以您的裝置觸碰 NFC 標籤或其他 NFC 支援裝置以分享内容。如果您使用裝置接觸一個 NFC 標籤，您的裝置就可以顯示其內容。

**開啟或關閉 NFC**：在桌面用手指點選並向下滑動通告欄，然後選擇 NFC 圖示以開啟。

**備註**：當飛航模式啟動時，可以使用 NFC 應用程式。

## 設定

**使用 NFC：**要使用 NFC，請先確認您的手機已經開啟並已啟用 NFC 設定。

**Android Beam** - 當此功能開啟時，您可以將裝置貼近另一支援近距離通訊 (NFC) 裝置的方式傳送應用程式內容。

只需將兩部裝置貼近（通常為背對背）然後點按螢幕。應用程式將決定傳送的項目。

**SmartShare Beam** - 可從 LG 手機接收檔案。

**媒體伺服器** - 透過DLAN與附近裝置共享媒體內容。

**Miracast** - 在電視上顯示手機螢幕和聲音。

### <網絡共享和網絡>

**Wi-Fi 熱點** - 您亦可使用手機，提供流動寬頻連線。建立熱點並分享連接。如需更多資訊，請「[分享您手機的數據連接](#)」。

**藍牙數據連線** - 不論是否於分享互聯網連線的情況下均可設定手機。

**說明** - 點選以檢視關於 Wi-Fi 熱點及藍牙數據連線功能的說明資訊。

**飛航模式** - 切換至飛航模式後，所有無線通訊會被停用。

**流動網絡** - 設定數據漫遊、網絡模式和運營商及存取點名稱 (APN) 等的選擇。

**預設訊息應用程式** - 設定訊息或Hangouts。

**VPN** - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不同類型的 VPN。

**備註：**使用 VPN 前，必須設定螢幕鎖定 PIN 或密碼。

## 裝置

### < 聲音 >

**聲音設定檔** - 您可以選擇聲音、僅震動或靜音。

**音量** - 您可以管理鈴聲、通知、觸控回饋與系統、音樂，影片，遊戲和其他媒體。

**靜音時間** - 設定關閉所有音效（除提示和媒體以外）的時間。

**電話鈴聲** - 允許您設定預設的來電鈴聲。

**智慧鈴聲** - 於高噪音環境下自動將手機鈴聲音量調高。

**鈴聲並震動** - 勾選以設定手機收到來電時有鈴聲及震動。

**通知聲音** - 設定通知音。

**觸控回饋與系統** - 設定撥號鍵盤按鍵音、觸控聲音、螢幕鎖定聲音或觸控時振動。

### < 顯示 >

**亮度** - 調校螢幕亮度。

**螢幕逾時** - 設定螢幕逾時的時間。

**自動旋轉螢幕** - 設定當您旋轉手機時自動切換方向。

**休眠模式** - 點按切換以切換為開啟或關閉。開啟讓手機在插在機座時及/或充電時的休眠期間顯示已設定的螢幕保護。選擇 Google 相簿。

**字體類型** - 變更顯示字型的類型。

**字體大小** - 更改顯示字體的大小。

**智慧螢幕** - 當手機檢測到您的面部時，將螢幕保持開啟狀態。

**面板按鍵燈** - 設定前鍵盤燈光亮起的時間長度。

**通知閃爍** - 通知 LED 位於前置相機的左方。於手機處於充電狀態或如 LCD 螢幕關閉並收到通知時您便會看到小 LED 燈開啟。您可將**使用LED燈進行通知**為開啟/關閉。您可從通知閃爍項目列表設定不同選項。

# 設定

## <桌面>

設定**主題、牆紙、螢幕效果**或**僅為縱向檢視**。選擇設定允許主頁螢幕循環及主頁備份與還原的選項。

## <鎖定螢幕>

**選擇螢幕鎖定** - 設定螢幕鎖定類型以保護手機安全。開啟一系列畫面，以指導您繪畫螢幕解鎖圖案。設定**無、揮動、臉部解除鎖定、圖形、PIN 碼或密碼**。

如果您已啟用圖形鎖類型，當您於開啟手機或螢幕時，系統就會要求您畫出解鎖圖形以解鎖螢幕。

**螢幕效果** - 設定螢幕效果選項。

**牆紙** - 您可以從媒體匣或牆紙圖庫選擇鎖定畫面的牆紙。

**小工具** - 在鎖定螢幕上顯示小工具。

**捷徑** - 讓您更改**滑動鎖定螢幕的捷徑**。

**擁有者資訊** - 於鎖定螢幕上顯示所有者信息。

**鎖定時計** - 設定鎖定時間計時。

**電源按鈕立即鎖定** - 設定按電源按鈕時的螢幕鎖定。

## <手勢>

**靜音來電** - 翻轉裝置即可將來電靜音。

**延後或停止鬧鐘** - 翻轉裝置即可延後或停止鬧鐘。

**暫停影片** - 翻轉裝置即可暫停播放影片。

**說明** - 動作功能的說明。

**運動感應器校正** - 測試並調整桌面和應用程式的傾斜感應器敏感度。

## <儲存裝置>

**內存空間** - 檢視內部儲存佔用。

## <電池>

管理電量及檢查省電模式項目。您亦可檢視已用電量。

## <應用程式>

檢視及管理應用程式。

## < 點選支付 >

開啟 NFC 時，您可使用點選支付功能以支付項目。  
只需將手機觸碰收銀處的讀取器。若您的裝置沒有預設應用程式，您可瀏覽 Google Play，下載其他付款應用程式。

## 個人

### <帳號及同步處理>

允許應用程式在背景中同步資料，而不論您是否啟動它們。取消勾選此設定會幫助節省電量，同時亦會降低（但不會消除）數據用量。

### <雲端>

新增雲端帳號以在 LG 應用程式上快速輕鬆使用雲端服務。

### <位置>

**模式** - 設定位置模式為**高精度(GPS和網路)**、**省電(僅網路)**及**僅裝置感應器(只限 GPS)**。

**最近定位請求** - 顯示最近要求位置資訊的應用程式。

**定位服務** - 允許您查看您的Google位置設置。

### <安全>

**加密手機** - 讓您可加密手機上的資料，以保安全。每次開機時，您需要輸入 PIN 碼或密碼以解鎖手機。

**設定 SIM 卡鎖定** - 設定 Micro-SIM 卡鎖或變更 Micro-SIM 卡 PIN 碼。

**密碼輸入為可見** - 輸入密碼時，顯示上一個輸入的字元。

**裝置管理員** - 查看或撤銷裝置管理員

**未知的來源** - 預設為安裝非Play Store應用程式。

**確認應用程式** - 在安裝可能會造成危害的應用程式之前禁止或警告。

**通知存取** - 應用程式可以讀取通知。

**儲存裝置類型** - 僅限軟件。

**可信認證** - 顯示受信任的 CA 憑證。

# 設定

**從儲存裝置中安裝** - 選擇安裝加密憑證。

**清除憑證** - 移除所有憑證。

## <語言與輸入裝置>

使用語言及鍵盤設定以選擇您手機文字的語言，包括您新增至字典的字詞，並設定您的螢幕鍵盤。

## <備份與重設>

更改設定以管理設定和數據。

**備份我的數據** - 設定在 Google 伺服器上備份您的設定及應用程式數據。

**備份帳號** - 設定以備份您的帳號。

**自動還原功能** - 設定當應用程式重新安裝在裝置時，還原您的設定及應用程式數據。

**LG Backup 服務** - 為裝置上的所有資料備份，以便於數據遺失或取代時可進行還原。

**重設為原廠設定** - 將設定重設為原廠預設值並刪除您的所有數據。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

# 系統

## <日期及時間>

使用**日期及時間**設定以設定顯示日期的方式。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

## <協助工具>

設定在 Google 伺服器上備份您的設定及應用程式數據。

## <PC連接>

**選取 USB 連接方法** - 您可設定想要的模式：手機充電、媒體同步（MTP）、網絡共享、LG 軟體或傳送圖片（PTP）。

**連接時詢問** - 連接至電腦時詢問 USB 連接模式。

**說明** - USB 連接說明。

**PC Suite** - 從PC Suite中接收Wi-Fi連接請求。

**說明** - LG PC Suite 說明。

### <正在列印>

允許您使用連接至與 Android 裝置相同 Wi-Fi 網絡的印表機，列印某些畫面的內容（如 Chrome 顯示的網頁）。

### <關於手機>

檢視法律資訊及檢查手機狀態和軟件版本。

## PC 軟件 (LG PC Suite)

「LG PC Suite」電腦軟件助您透過 USB 纜線及 Wi-Fi 將裝置連接至電腦。連接後，您可以在電腦使用手機的功能。

**使用「LG PC Suite」電腦軟件，您可以...**

- 在電腦管理並播放媒體內容（音樂、電影、圖片）。
- 向裝置發送多媒體內容。
- 在裝置及電腦上同步數據（日曆、通訊錄及書籤）。
- 備份裝置的應用程式。
- 更新裝置的軟件。
- 備份並還原裝置數據。
- 從裝置播放電腦的多媒體內容。
- 於裝置上備份及建立並編輯備忘錄

**注意：**您可使用應用程式的說明功能表，瞭解如何使用「LG PC Suite」電腦應用程式。

**安裝「LG PC Suite」電腦軟件**

「LG PC Suite」電腦軟件可從 LG 的網頁下載。

- 1 移至 [www.lg.com](http://www.lg.com)，然後選擇所需國家/地區。
- 2 前往首頁 > **流動裝置** > **手機** > **產品支援** > **支援** > **輸入型號或名稱** > **點擊搜尋**。
- 3 按一下搜索到的型號名 > **用戶手冊和下載** 中的 **電腦同步** > **LG PC Suite**，然後按一下**下載**。

**「LG PC Suite」PC 軟件的系統需求**

- 作業系統：Windows XP (Service pack 3) 32 位元、Windows Vista、Windows 7、Windows 8
- CPU：1GHz 或以上處理器
- 記憶體：512MB 或以上 RAM
- 顯示卡：1024 x 768 解像度、32 位元色彩或以上
- HDD：500 MB 或以上可用磁碟空間（視乎儲存的數據量，可能需

要更多可用磁碟空間。)

- 軟體需求：LG 內置驅動程式、Windows Media Player 10 以上版本

### 備註：LG 內置 USB 驅動程式

安裝「LG PC Suite」軟件時，需要 LG 內置 USB 驅動程式，以連接 LG 裝置和電腦並自動安裝。

## 將裝置同步至電腦

裝置及電腦的資料可透過「LG PC Suite」電腦軟件輕鬆同步，簡易便利。通訊錄、日程表及書籤均可作同步處理。

程序如下：

- 1 將裝置連接到電腦。（使用 USB 線或 Wi-Fi 連接。）
- 2 將會顯示**選取 USB 連接方法**，然後選擇**LG 軟體**。
- 3 連接後，執行程式，然後從畫面左方的類別選擇裝置部分。
- 4 按**同步個人數據**進行選擇。
- 5 選擇要同步內容的取方塊，然後按**同步**按鈕。

**注意：**要與電腦同步您的手機，您需要於電腦上安裝 LG PC Suite。請參閱之前頁數以安裝 LG PC Suite。

## 將通訊錄從舊裝置移至新裝置

- 1 使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊裝置匯出至電腦。
- 2 先在電腦上安裝「LG PC Suite」。執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。
- 3 於頂部功能表選擇**手機 > 匯入/匯出聯絡人 > 匯出至您的手機**。
- 4 會顯示可選擇檔案類型和要匯出檔案的彈出式視窗。
- 5 在彈出式視窗中，點擊**選取**，Windows Explorer 就會顯示。
- 6 選擇要在 Windows Explorer 中匯出的聯絡人檔案，然後點擊打開。
- 7 點擊**匯出**。
- 8 可讓您在裝置和新聯絡人資料中連結聯絡人的**欄位映射**彈出式視窗

就會顯示。

**9** 如果在電腦聯絡人和裝置聯絡人之間出現衝突，請在 LG PC Suite 中做出必要的選擇或修改。

**10** 點擊確定。

# 手機軟件更新

## 手機軟件更新

### 從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 <http://www.lg.com/common/index.jsp> → 以選擇國家及語言。

此功能允許您無須親臨服務中心，即可輕鬆透過互聯網將手機軟體更新為較新版本。LG 為您的手機推出較新版本的軟體時，此功能才可使用。

手機軟體更新要求用戶加倍留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 數據線，有可能對您的手機造成嚴重損害。

**注意：**LG 保留權利，可酌情決定只為選定型號提供軟體更新，並不保證所有手機型號均有軟體的較新版本。

### 透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，亦能輕鬆透過 OTA 將手機軟件更新為較新版本。LG 為您的手機推出較新版本的軟體時，此功能才可使用。

您應先檢查於手機上軟件版本：**設定 > 關於手機 > 更新中心 > 軟體更新 > 現在檢查更新。**

**備註：**內部手機儲存體的個人資料—包括 Google 帳戶及任何其他帳戶的資訊、系統 / 應用程式數據及設定、任何已下載的應用程式及 DRM 授權—在更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不責任。

**備註：**此功能視網路服務供應商、地區或國家而定。

# 有關本使用者指南

## 有關本使用者指南

- 使用裝置前，請細心閱讀本手冊。此可確保您安全及正確運用手機。
- 本指南中某些圖像及螢幕截圖可能與出現於您手機上的有所不同。
- 您的內容可能與最終產品、或來自服務網絡或供應商的軟件有所不同，此內容可能隨時作出更改而不另行通知。如要獲取本手冊的最新版本，請前往 [www.lg.com](http://www.lg.com) 瀏覽 LG 網站。
- 手機應用程式及功能可能因應國家、地區或硬件規格而有所不同。因使用由非 LG 開發的應用程式而導致任何效能問題，LG 概不負責。
- 因編輯出廠設定或修改操作系統軟件而導致的效能或不兼容問題，LG 概不負責。於任何情況下嘗試對操作系統作出自行改動可導致裝置或應用程式無法運作。
- 於裝置中的軟件、音效、牆紙、圖像及其他媒體乃被授權作為有限度使用。如您抽取及使用這些項目作為商業用途，則可能已侵犯版權法。作為用戶，您對於已非法形式使用媒體附上全部責任。
- 於使用數據服務例如訊息、上載及下載、自動同步或使用位置服務時可能被收取額外費用。要避免產生額外收費，請選擇符合您所需的數據計劃。聯絡您的服務供應商以獲取更額外詳細資料。

## Trademarks

- LG 及 LG 標誌乃 LG Electronics 的註冊商標。
- 所有其他商標與版權均屬於其擁有者。

## 有關本使用者指南

### DivX HD

**關於 DivX 影片：**DivX® 是 Rovi Corporation 的子公司 DivX, LLC 建立的數位影片格式。這是通過嚴格測試可播放 DivX 影片的 DivX Certified® 官方認證裝置。如需進一步資訊以及可用來轉檔成 DivX 影片的軟體工具，請造訪 [divx.com](http://divx.com)。

**關於 DivX 隨選影片：**此 DivX Certified® 裝置必須註冊，才能播放所購買的 DivX 隨選 (VOD) 影片。若要取得註冊碼，請在裝置設定選單中尋找 DivX VOD 區段。有關如何完成註冊的進一步資訊，請移至 [vod.divx.com](http://vod.divx.com)。

DivX Certified® 可播放畫質高達 720p 的 DivX® 影片，包括付費內容。DivX®、DivX Certified® 和相關標誌是 Rovi Corporation 或其子公司的商標，經授權許可使用。

### Dolby Mobile DOLBY DIGITAL PLUS

Dolby Laboratories 授權製造。Dolby 及 double-D 符號乃 Dolby Laboratories 的商標。

#### 注意：公開原始碼軟件


若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽 <http://opensource.lge.com/>

所有授權條款、免責聲明及通知均可連同原始碼一同下載。

## 配件

這些配件可搭配 LG-E975 使用。(下述為可選購的配件。)

旅行充電器



立體聲耳機



快速入門指南



數據線



Micro-SIM 彈出  
工具



### 注意：

- 只可使用原裝 LG 配件。若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

## 疑難排解

本章節列出一些使用手機時可能遇上問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
Micro-SIM 錯誤	手機中無 Micro-SIM 卡，或卡片插入方式不正確。	確保已正確地插入 Micro-SIM 卡。
無網絡連接/ 失去網絡	訊號較弱或您位於運營商網絡服務範圍外。	移近窗邊或移至空曠範圍。檢查網絡供應商的覆蓋範圍。
	網絡商套用新服務。	請聯絡您的網絡供應商。
密碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。	如您忘記密碼，請聯絡您的服務供應商。
	您所輸入的兩個密碼並不相符。	
並無可設定應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。

訊息	可能起因	可用解決方法
無法撥打電話	撥號錯誤	未授權新網絡。
	已插入新 Micro-SIM 卡。	請檢查新的限制。
	已達預付費用上限。	聯絡您的服務供應商，或使用 PIN2 重設限額。
手機無法啟動	按開/關鍵時間太短。	按住開啟/關閉鍵至少兩秒。
	電池並無充電。	為電池充電。檢查螢幕上的充電指示器。
充電錯誤	電池並無充電。	為電池充電。
	外界溫度太高或太低。	確保於正常溫度下為手機充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接至手機。
	無電壓	將充電器插入不同的插座。
	充電器故障	更換充電器。
	使用不當充電器	請只使用原裝 LG 配件。
號碼不允許	固定撥號功能已開啟。	檢查設定功能表並關閉功能。

## 疑難排解



訊息	可能起因	可用解決方法
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式。
接收來電時，螢幕並無開啟。	距離感應器問題	如您使用保護邊或保護殼，請確保其並無遮蓋距離感應器四周位置。確保距離感應器附近並無任何障礙物。
沒有聲音	震動模式	檢查聲音功能表的設定狀態以確保您並非使用震動或靜音模式。
死機或停止運作。	軟件間歇性問題	透過網站嘗試進行軟件更新。


## 常見問題解答

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。



類別 子類別	問題	解答
藍牙 藍牙 裝置	透過藍牙可以使用哪些功能？	您可以連接藍牙聲音裝置，例如立體聲/單聲道耳機及汽車套件，並透過媒體匣/通訊錄功能表分享圖片、影片和聯絡人等。另外，當 FTP 伺服器連接到兼容裝置時您可分享儲存在儲存媒體中的內容。
藍牙 藍牙 耳機	如果已連接藍牙耳機，我可否透過 3.5mm 有線耳筒聆聽音樂？	連接藍牙耳機後，所有系統聲音會在耳機播放。因此，您將無法透過有線耳筒聆聽音樂。
資料 通訊錄 備份	我如何備份通訊錄？	通訊錄資料可以在您的手機與 Gmail™ 之間同步。
資料 同步	可否設定使用 Gmail 進行單向同步？	僅可以進行雙向同步。
資料 同步	可否同步全部電子郵件資料夾？	收件匣會自動同步。您可點按 <b>功能表鍵</b>  以檢視其他資料夾，然後點按 <b>資料夾</b> 進行選擇。
Google™ 服務 Gmail 登入	每當我想存取 Gmail，是否也需要登入 Gmail？	當您已登入 Gmail 後，並無需再次登入到 Gmail。

## 常見問題解答

類別 子類別	問題	解答
Google™ 服務 Google 帳戶	可否篩選電郵？	不可以，手機不支援電郵篩選。
手機功能 電郵	編寫電郵時，如果我執行其他應用程式會發生什麼？	您的電郵會自動被儲存為草稿。
手機功能 鈴聲	我所使用的檔案是否有檔案大小限制？可否使用 MP3 檔作為鈴聲？	沒有檔案大小限制。
手機功能 訊息時間	手機沒有顯示訊息在 24 小時之前的接收時間，可如何變更此設定？	您只能夠看見同一天接收的訊息時間。
手機功能 導航	可否在手機上安裝其他導航應用程式？	可以安裝和使用所有 Android Market™ 上找到的應用程式以及與硬體相容的應用程式。
手機功能 同步	可否從我全部的電郵帳戶同步通訊錄？	僅可同步 Gmail 和 MS Exchange 伺服器（公司電郵伺服器）中的通訊錄。
手機功能 等候與暫停	能否使用號碼中的等候與暫停來儲存聯絡人？	如果您傳輸的聯絡人在號碼中存有 W & P 功能，則無法使用該等功能。您需要重新儲存每個號碼。 如何使用等候與暫停儲存： 1. 從桌面按 <b>手機圖示</b>  。 2. 撥號後按 <b>功能表鍵</b>  。 3. 點按 <b>新增2秒暫停功能</b> 或 <b>新增等待功能</b> 。

類別 子類別	問題	解答
手機功能 安全	手機有什麼安全性功能？	<p>您可設定手機於被存取或使用前要求輸入解鎖圖形。</p>
手機功能 解鎖 圖形	我如何建立解鎖圖形？	<ol style="list-style-type: none"> <li>1. 從桌面按<b>功能表鍵</b> 。</li> <li>2. 點按 <b>系統設定 &gt; 鎖定螢幕</b>。</li> <li>3. 點按 <b>選擇螢幕鎖定 &gt; 圖形</b>。首次進行此步驟時，將會出現關於建立解鎖圖形的簡短教程。</li> <li>4. 繪畫圖形一次以設定，然後再繪畫一次以確認。</li> </ol> <p><b>使用圖案鎖定需注意事項。</b></p> <p>請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。（或如您預設備份 PIN 碼，您可使用備份 PIN 碼以解鎖圖形）</p>

# 常見問題解答

類別 子類別	問題	解答
手機功能 解鎖 圖形	如果我忘記了解鎖圖形而且沒有在手機上建立 Google 帳戶，我應該怎麼辦？	<p><b>如果您忘記了您的圖形：</b></p> <p>如果您已用手機登入至您的 Google 帳號但 5 次輸入錯誤的圖形，點按位於螢幕底部的忘記解鎖圖形。然後，您需要登入您的 Google 帳戶以解鎖您的手機。如您並無於手機上建立 Google 帳號或您已忘記該帳號，您需進行強制重新設定。</p> <p><b>注意：</b>若執行出廠設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行原廠重設。</p>
手機功能 記憶體	記憶體已滿時我會被告知嗎？	是，您將會收到通知。
手機功能 語言支援	我可否更改手機語言？	<p>手機具有多語言功能。</p> <p>若要變更語言：</p> <ol style="list-style-type: none"><li>1. 從桌面按<b>功能表鍵</b> ，然後點按<b>系統設定</b>。</li><li>2. 點按<b>語言與輸入裝置 &gt; 語言</b>。</li><li>3. 點按所需的語言。</li></ol>
手機功能 VPN	我如何設定 VPN？	<p>VPN 存取設定根據公司而有所不同。</p> <p>若要從手機設定 VPN 存取，您必須從供應商的網絡管理員取得詳細資料。</p>
手機功能 螢幕逾時	我的螢幕在 15 秒後關閉了。我如何變更背景燈關閉的時間？	<ol style="list-style-type: none"><li>1. 從桌面按<b>功能表鍵</b> 。</li><li>2. 點按<b>系統設定 &gt; 顯示</b>。</li><li>3. 在顯示設定下點按<b>螢幕逾時</b>。</li><li>4. 點按所需的螢幕背景燈逾時時間。</li></ol>

類別 子類別	問題	解答
手機功能 Wi-Fi 及 3G	當 Wi-Fi 及 3G 均為可用時，手機將會使用哪一項服務？	使用數據時，您的手機將預設為 Wi-Fi 連接（如果手機的 Wi-Fi 連接設定為開啟）。不過，手機切換服務時您將不會收到通知。 若要知道正在使用哪一個數據連線服務，檢視螢幕上方的 3G 或 Wi-Fi 圖示。
手機功能 桌面	可否從桌面移除應用程式？	可以。只需點按並按住圖示，直至畫面上方中央出現垃圾桶圖示。然後，不要放開手指，將圖示拖放至垃圾桶。
手機功能 應用程式	我下載了一個應用程式，它導致大量錯誤發生。我如何移除它？	<ol style="list-style-type: none"> <li>1. 從桌面按<b>功能表鍵</b> .</li> <li>2. 點按<b>系統設定</b> &gt; <b>應用程式</b> &gt; <b>已下載</b>。</li> <li>3. 點按該應用程式，然後點按<b>解除安裝</b>。</li> </ol>
手機功能 充電器	可否在沒有安裝所需 USB 驅動程式的情況下透過 USB 數據線為手機充電？	可以，不論有否安裝所需驅動程式，手機亦能透過 USB 數據線充電。
手機功能 鬧鐘	可否在鬧鐘使用音樂檔案？	可以。將音樂檔案儲存為鈴聲後，您可將其用作鬧鐘。
手機功能 鬧鐘	如果我關閉了手機，鬧鐘仍會響鬧嗎？	不會，不支援此功能。

## 常見問題解答

類別 子類別	問題	解答
手機功能 鬧鐘	如果鈴聲音量設定為關閉或震動，我仍會聽到鬧鐘響鬧嗎？	即使在此情況，您的鬧鐘仍被設定為響鬧。
恢復的方法 硬性重新設定（出廠設定）	如果無法存取手機的設定功能表，應如何執行出廠設定？	如您的手機並無還原至其原始狀態，請使用強制重新設定（原廠設定）以初始化手機。






简体中文

# 用户手册

- 屏幕显示和说明可能与手机实物上看到的不同。
- 本手册中的部分内容可能不适用于您的手机，具体视软件或服务提供商而定。本手册的所有信息如有更改，恕不另行通知。
- 此手机采用触摸屏键盘，不适合视障人士使用。
- 版权所有 ©2013 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Hangouts™ 和 Play Store™ 是 Google, Inc. 的商标。

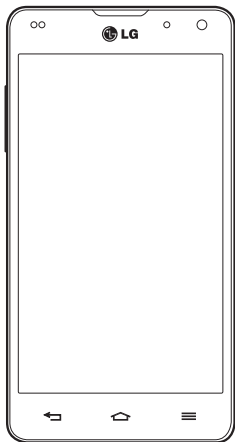

# 目录

关于安全有效使用手机的准则.....	5	使用 USB 数据线的 PC 连接.....	33
重要注意事项.....	12	通话.....	35
开始了解您的手机.....	17	拨打电话.....	35
电话概述.....	17	呼叫联系人.....	35
安装 Micro-SIM 卡.....	19	接听和拒绝电话.....	35
为手机充电.....	20	调节通话音量.....	36
屏幕锁定和解锁.....	20	拨打第二个电话.....	36
查看通话记录.....	36	通话设置.....	37
主屏.....	21	联系人.....	38
触摸屏提示.....	21	搜索联系人.....	38
主屏.....	22	添加新联系人.....	38
扩展主屏.....	22	常用电话本.....	38
自定义主屏.....	22	创建群组.....	39
在主屏上自定义应用程序图标.....	23	信息.....	40
返回到最近使用的应用程序.....	23	发送信息.....	40
通知.....	24	线程框.....	41
打开通知面板.....	24	更改信息设置.....	41
状态栏上的指示器图标.....	25	电子邮件.....	42
屏上键盘.....	27	管理电子邮件帐户.....	42
输入带注音的字母.....	27	使用帐户文件夹.....	42
撰写和发送电子邮件.....	43		
Google 帐户设置.....	28	照相机.....	44
设置您的 Google 帐户.....	28	了解取景器.....	44
使用帐户文件夹.....	42	使用高级设置.....	45
撰写和发送电子邮件.....	43	快速拍照.....	46
拍照后.....	47	查看保存的照片.....	48
查看保存的照片.....	48		
连接到网络和设备.....	29		
WLAN.....	29		
连接 WLAN 网络.....	29		
打开 WLAN 并连接 WLAN 网络.....	29		
蓝牙.....	30		
共享手机的数据连接.....	31		
WLAN 直连.....	33		

摄像机.....	49	删除图像.....	63
了解取景器.....	49	设置为墙纸.....	63
使用高级设置.....	50	视频.....	63
快速录制视频.....	50	播放视频.....	63
录制视频后.....	51	视频编辑器.....	64
观看保存的视频.....	51	视频魔法师.....	66
观看视频时调节音量.....	51	音乐.....	67
实时缩放功能.....	51	将音乐文件添加至手机.....	67
LG 独特功能.....	53	使用媒体同步 (MTP) 传输音乐.....	68
快捷备忘录功能.....	53	播放歌曲.....	68
使用 QuickMemo 选项.....	54	实用工具.....	70
查看保存的 QuickMemo.....	54	设置闹钟.....	70
笔记本功能.....	55	使用计算器.....	70
记录笔记.....	55	将事件添加到日程表中.....	70
了解笔记本.....	55	语音备忘录.....	71
书架.....	55	录制声音或语音.....	71
页面属性面板.....	56	发送录音.....	71
查看保存的笔记本.....	56	任务管理器.....	71
QuickTranslator.....	57	任务.....	72
Quick多任务.....	58	Polaris Office 4.....	72
双播放功能.....	59	LG Backup.....	73
镜像.....	59	关于备份和恢复智能手机数据..	73
双播放功能.....	59	备份.....	74
LG SmartWorld.....	60	计划备份.....	74
如何从手机访问 LG SmartWorld60		文件恢复和管理.....	74
多媒体.....	62	Google+.....	74
图片库.....	62	语音搜索.....	74
查看图片.....	62	下载内容.....	75
播放视频.....	62		
编辑照片/视频.....	62		

# 目录

网络.....	76	Dolby Mobile.....	92
<b>互联网</b> .....	76	配件.....	93
使用 Web 工具栏.....	76	故障排除.....	94
查看网页.....	76	FAQ.....	97
打开页面.....	76		
按语音搜索网络.....	77		
书签.....	77		
历史记录.....	77		
使用弹出浏览器.....	77		
<b>Chrome</b> .....	78		
查看网页.....	78		
打开页面.....	78		
按语音搜索网络.....	78		
与其它设备同步.....	78		
<b>设置</b> .....	79		
访问“设置”菜单.....	79		
无线网络.....	79		
设备.....	81		
个人.....	84		
系统.....	85		
<b>PC 软件 (LG PC Suite)</b> .....	87		
<b>手机软件更新</b> .....	90		
手机软件更新.....	90		
<b>关于本用户指南</b> .....	91		
关于本用户指南.....	91		
商标.....	91		
DivX HD.....	92		

## 关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。如果发生故障，您装置中内置的软件工具会建立一份故障日志。此工具只会收集与故障相关的数据，例如讯号强度、通话时突然断线的 cell ID position (cell ID 位置) 和载入的应用程式。此日志只用作协助确定发生故障的原因。这些日志会被加密，如您需要退回装置进行维修，只有已授权的 LG 维修中心才可存取其内容。

### 暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 LG-E975 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”(SAR) 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 本型号手机在耳边使用的最高 SAR 值为 0.426W/kg (10 克)，佩戴于身上时则为 0.398 W/kg (10 克)。
- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

# 关于安全有效使用手机的准则

## 产品保养和维护

### 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其他类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。

- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。
- 如果手机变湿，请立即拔下其电源插头，并让它完全晾干。切勿试图使用烤炉、微波炉或电吹风等外部热源加快干燥处理。
- 潮湿手机内的液体会改变手机内产品标签的颜色。由于接触液体而对设备造成的损坏不在保修范围内。

## 有效的手机操作

### 电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 如果可能，请在介于 0°C 与 40°C 温度之间使用手机。将手机放置在过低或过高的温度的环境下可能会导致损坏、故障、甚至爆炸。

## 行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

## 关于安全有效使用手机的准则

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在靠近马路时，尤其要注意这一点。

## 防止损伤您的听力



为防止听力可能受损，请勿长时间高音量倾听

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

**备注：**耳机声音压力过大可能导致听力受损。

## 玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

## 爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

## 易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

## 在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在机舱内使用手机。

## 儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

## 紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

# 关于安全有效使用手机的准则


## 电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池或将其短路。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要像处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这可能引发火灾。

## 确认声明

LG Electronics 特此宣布此 LG-E975 产品符合指令 1999/5/EC 的核心要求和其它相关规定。有关《确认声明》的副本，请访问 <http://www.lg.com/global/declaration>

## 规章和安全

转到**功能表键**  > “**系统设置** > **关于手机** > **法律信息**” 来获取规章与安全信息

## 本产品合规联系办公室：

LG Electronics Inc.

EU Representative, Krijgsman 1,  
1186 DM Amstelveen, The Netherlands

## 重要注意事项


### 开始使用手机之前，请阅读此内容！

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

## 1. 手机内存

当手机内存可用空间小于 10% 时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

### 卸载应用程序：

- 1 点触  > 应用程序选项卡 > 设置 > “设备”中的应用程序。
- 2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。
- 3 点触**卸载**。


## 2. 优化电池使用寿命

可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您可以监视应用程序和系统资源如何消耗电池电量。

### 延长手机电池的使用寿命：


- 关闭未使用的无线电通信。如果不使用 WLAN、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会消耗电池电量。

### 检查电池电量水平：

- 点触  > 应用程序选项卡 > 设置 > “系统”中的关于手机 > 电量使用情况。

电池状态（正在充电或正在放电）和电池级别（电量百分比）。

### 监视并控制电池电量的使用情况：

- 点触  > 应用程序选项卡 > 设置 > “系统”上的关于手机 > 电量使用情况 > 电量使用情况。

电池使用时间显示在屏幕顶部。它告诉您自上次将手机连接到电源以来的时间，或者手机连接到电源后在电池电源上运行的时间。屏幕显示了正在使用电池电源的应用程序或服务，按最大量到最小量的顺序列出。

## 3. 安装开源应用程序和操作系统之前



### 警告

如果安装并使用非制造商提供的操作系统，可能导致手机无法正常工作。此外，您的手机也不再享受保修。




### 警告

为保护您的手机和个人数据，请只从信任的来源（如 Play Store™）下载应用程序。如果手机上存在未正确安装的应用程序，您的手机可能无法正常工作，甚至可能发生严重错误。您必须从手机中卸载及删除那些应用程序及其所有关联的数据和设置。

## 重要注意事项

### 4. 使用解锁图案

设置解锁图案以确保您的手机安全。点触  > **应用程序**选项卡 > **设置** > “设备”中的**锁定屏幕** > **选择屏幕锁定** > **图案**。此时将打开一个屏幕，指导您如何绘制屏幕解锁图案。您必须创建一个备份 PIN 以作为安全措施，以免忘记了解锁图案。

**注意：**设置解锁图案之前，请先创建一个 Google 帐户，并记住创建图案锁定时设置的备份 PIN。



#### 警告

##### 使用图案锁定时预防措施。

请务必记住您设置的解锁图案。如果有 5 次使用不正确的图案，您将无法访问您的手机。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

#### 在无法调用解锁图案、PIN 码或密码时：

##### <如果您忘记图案>

如果您在手机上登录 Google 帐户并尝试输入正确图案 5 次均失败，请轻触屏幕底部的“**忘记了图案？**”按钮。随后，您需要使用 Google 帐户登录或输入创建图案锁定时设置的备份 PIN。

如果未在手机上创建 Google 帐户或者忘记了备份 PIN，则需要执行硬重置。

##### <如果您忘记 PIN 或密码>

如果您忘记了您的 PIN 或密码，则需要执行硬重置。

**注意：**如果执行硬重置，所有用户应用程序和用户数据都将被删除。

**备注：**如果您尚未登录 Google 帐户或忘记了您的解锁图案，则需要输入备份 PIN。

## 5. 使用硬重置（恢复出厂设置）

如果手机需要恢复到它的原始条件，请使用硬重置来重新启动手机。

- 1 关机。
- 2 按住**电源/锁定键** + **音量调低键**。
- 3 几秒后，手机将允许您在 Android 系统恢复实用程序中选择出厂重置功能，此时释放所有键。
- 4 按三次**电源/锁定键**，您的电话将恢复为其出厂设置。要取消，按任何其它键。



### 警告

如果执行硬重置，则将删除所有用户应用程序、用户数据和 DRM 许可。在执行硬重置之前，请记得备份任何重要数据。



**重置为出厂数据** - 清除手机上的所有数据，但以下除外。在出现设备故障或错误时，您的设备可能将设备错误事件发生时的设备状态记录在一个错误日志信息中。记录在错误日志中的信息可能包括有关应用程序名称和使用情况的数据、手机位置和号码、GPS 状态、内存使用情况和其他非个人的设备状态信息。此信息储存在您的手机上，且仅能由 LG 在实物手机被退回至 LG 进行修理和维护时进行访问。错误日志信息只能由 LG 用于诊断、修理和改进 LG 的产品和服务。

## 6. 打开和切换应用程序


多任务可在 Android 中轻松实现，因为您可同时运行多个应用程序。打开其他应用程序之前，无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

## 重要注意事项

### 停止应用程序:

- 1 按住主屏键 。屏幕将显示最近使用的应用程序列表。
- 2 轻触要访问的应用程序。这不会停止在手机后台运行的上一个应用程序。确保在使用应用程序后轻触返回键  以退出该应用程序。
  - 要停止应用程序，从最近的应用程序列表中轻触任务管理器，然后轻触停止或全部停止。
  - 要从最近的应用程序列表中删除应用程序，向左或向右滑动应用程序预览。要清除所有应用程序，轻触全部清除。

## 7. 使用媒体同步 (MTP) 传输音乐、照片和视频

- 1 点触  > 应用程序选项卡 > 设置 > 存储以查看存储媒体。
- 2 使用 USB 数据线将手机连接到 PC。
- 3 选择 USB 连接方法将在手机屏幕上显示，选择媒体同步 (MTP) 选项。
- 4 打开 PC 上的存储文件夹。您可查看 PC 上的大容量存储内容，并能在 PC 和设备存储文件夹之间相互传输文件。

## 8. 向上持握手机

如同普通电话一样垂直持握手机。您的手机具有内置天线。请注意不要刮伤或损坏手机背面，这可能影响性能。  
拨打/接听电话或发送/接收数据时，避免持握天线所处的手机部位。这样做可能会影响通话质量。


## 9. 屏幕冻结时

**如果屏幕冻结或您尝试操作时手机无响应:**

按住**电源/锁定键** 10 秒以重启手机。  
如果这仍不起作用，请联系服务中心。

# 开始了解您的手机

## 电话概述

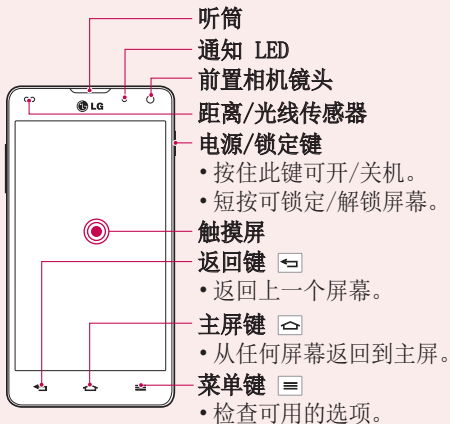

### 备注：距离传感器

在接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此距离传感器将自动关闭背景灯并锁定触摸屏。这样有助于延长电池寿命，并避免在通话期间无意中激活触摸屏。



### 警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 距离传感器上使用保护膜。这可能会影响传感器的感应度。

## 开始了解您的手机



### 警告

- 请勿打开后盖。
- 注意不要损坏手机上的 NFC 触控点，这是 NFC 天线的一部分。


## 安装 Micro-SIM 卡

开始浏览新手机之前，您可以选择插入 Micro-SIM 卡。  
弹出按钮是托盘门上方的小圆孔。

安装新 Micro-SIM 卡：

- 1 将手机随附的 Micro-SIM 弹出工具（或细针）插入弹出按钮孔，捏紧并轻轻用力推进，直至托盘弹出。
- 2 取下托盘，放入 Micro-SIM 卡，触点朝下，缺角朝左。只有采用这种方式才能完全吻合地把 SIM 卡放入托盘。
- 3 小心地将托盘重新放入插槽，轻轻推入手机。


**备注：**确保卡的金色接触区域面朝下。

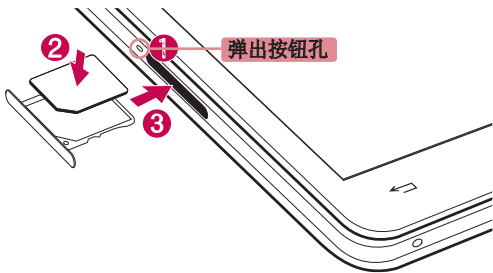

## 开始了解您的手机

### 为手机充电

充电器接口位于手机底部。将充电线的一端插入手机，并将另一端插入电源插座。

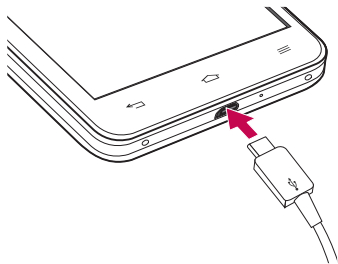


电池首次充电时必须完全充满，以便延长电池使用寿命。

### 屏幕锁定和解锁

如果您在一段时间内不使用手机，屏幕将自动关闭并锁定。这有助于防止意外点触，节省电池电量。

不使用手机时，按**电源/锁定键**  可锁定手机。

如果在锁定屏幕时有程序在运行，则它们仍可在锁定模式下继续运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、网络访问和数据通信）。

要唤醒手机，请按**电源/锁定键** 。将出现锁定屏幕。点触并向任意方向滑动锁定屏幕即可解锁主屏。您最后查看的屏幕将会打开。

## 触摸屏提示

以下是关于如何浏览手机的一些提示。

**轻触或点触** - 手指轻触一下，选择项目、链接、屏上键盘的快捷方式和字母。

**点触并按住** - 点触并按住项目，方法是点触并按住屏幕上的某个项目，不要抬起手指，直到动作发生。例如，要打开一个联系人的可用选项，在联系人列表中点触并按住联系人，直至打开选项。

**拖动** - 点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

**滑动** - 滑动的方法是手指点触屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。例如，将屏幕向上或向下滑动可滚动浏览列表，或从左向右滑动浏览不同的主屏（反之亦然）。

**轻触两次** - 轻触两次可缩放网页或地图。例如，快速轻触两次网页的局部，以调整局部适应屏幕的宽度。在浏览图片和使用地图时，也可轻触两次以放大和缩小。


**双指缩放** - 使用浏览器或地图时，或者在浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。


**旋转屏幕** - 可通过多个应用程序和菜单将屏幕的方向调整为设备的实际方向。

### 备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。

# 主屏

主屏是许多应用程序和功能的起点，使您可以添加应用程序快捷方式、Google 小工具等项目，从而直接访问信息和应用程序。这是默认的画布，可从任何菜单中轻触  访问画布。

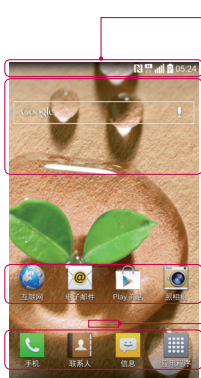

## 状态栏

显示手机的状态信息，包括时间、信号强度、电池状态以及通知图标。

## 窗口小部件

窗口小部件是独立应用程序，可以通过应用程序屏幕或在主屏或扩展主屏上访问。与快捷方式不同，窗口小部件显示为屏幕应用程序。

## 应用程序图标

轻触图标（应用程序、文件夹等）以打开并使用。

## 位置指示灯

指示您正在查看的主屏画布。

## 快速键区

可让您一键访问任何主屏画布上的功能。

## 扩展主屏

操作系统提供多个主屏画布，为添加图标、小工具等提供更大的空间。

## 自定义主屏

您可以通过添加应用程序、窗口小部件和壁纸来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的应用程序和小工具。

**在主屏上添加项目：**

- 1 点触并按住主屏的空白部分。
- 2 在“添加模式”菜单中，选择要添加的项目。然后，您将在主屏上看到此已添加的项。
- 3 将其拖至所需位置并抬起手指。

### 从主屏中移除项目：

- **主屏** > 点触并按住您要移除的图标 > 将其拖到 。

**提示！** 要将应用程序图标添加到主屏，请在应用程序菜单上点触并按住要添加到主屏的应用程序。

### 提示！ 使用文件夹

您可以将几个应用程序图标组合到一个文件夹中。在主屏上将一个应用程序图标放在另一个应用程序图标上，两个图标将组合在一起。

## 在主屏上自定义应用程序图标

点触并按住应用程序图标直至将其从当前位置解锁。 然后将其拖放到屏幕上。

点触并按住应用程序图标，将在应用程序的右上角显示编辑图标 

再次轻触应用程序图标并选择所需的图标设计和大小。

轻触确定以保存更改。

## 返回到最近使用的应用程序

- 1 点触并按住**主页键**。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回键**以返回上一个屏幕。


## 通知

通知将提示收到新信息、日历事件和闹钟，以及视频下载等正在进行的事件。

从通知面板，您可以查看手机的当前状态和待发通知。

当新通知到达时，屏幕的顶部将出现其图标。待发通知的图标显示在左侧，显示 WLAN 或电池电量等内容的系统图标在右侧显示。


**备注：** 可用选项可能有所不同，具体取决于地区或服务提供商。

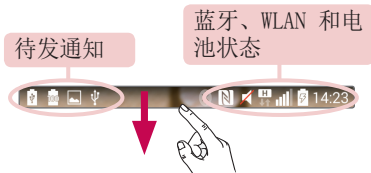

## 打开通知面板


从状态栏向下滑动可打开通知面板

## 快速切换区域

轻触每个快速切换键以将其打开/关闭。点触并按住此键以访问其功能设置菜单。要查看更多切换键，请向左或向右滑动。轻触  以删除、添加或重新设定切换键。



## Quick多任务应用程序

轻触Quick多任务应用程序以将其打开，在屏幕上显示为小窗口。轻触  以删除、添加或重新设定Quick多任务应用程序。

轻触以清除所有通知。

## 通知

列出了当前通知，每个通知都带有简短的说明。轻触通知以查看。

要关闭通知面板，请点触此标签并将其向屏幕顶部方向拖动。

## 状态栏上的指示器图标

指示器图标显示在屏幕顶部的状态栏上，可报告未接来电、新信息、日历事件、设备状态等。



# 主屏

屏幕顶部的图标提供设备状态的相关信息。下表列出了部分常见图标。

图标	说明
	无 Micro-SIM 卡
	无信号
	飞行模式
	已连接到 WLAN 网络
	有线耳机
	正在通话
	未接来电
	蓝牙开启
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	手机通过 USB 数据线连接至 PC, 或者 USB 绑定已激活

图标	说明
	振动模式
	电池已充满电
	电池正在充电
	正在下载数据
	正在上载数据
	GPS 正在采集
	正在从 GPS 接收位置数据
	数据正在同步
	新 Gmail
	新环聊信息
	新信息
	正在播放歌曲
	便携式 WLAN 热点已激活




NFC 开启



**备注：** 状态栏中的图标位置可能根据功能或服务而有所不同。

## 屏上键盘


您可以使用屏上键盘输入文本。在您需要输入文本时，屏上键盘会自动显示在屏幕上。要手动显示键盘，只需点触要输入文本的文本字段。

### 使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

  轻触以切换数字和输入语言键盘。

 轻触以输入空格。

 轻触以在信息字段新建一行。

 轻触以删除上一字符。

### 输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“á”）。

例如，要输入“á”，请点触并按住“a”键，直到放大键变大并显示其他语言的字符。

然后，选择所需特殊字符。


## Google 帐户设置

首次打开手机时，您有机会激活网络，登录到 Google 帐户，并选择如何使用某些 Google 服务。

### 设置您的 Google 帐户：

- 从提示的设置屏幕登录到 Google 帐户。

**或者**

- 点触  > **应用程序**选项卡 > 选择某个 Google 应用程序（如 Gmail）> 选择**新建**以创建新帐户。

如果您有 Google 帐户，请点触**现有**，输入您的电子邮件地址和密码，然后点触 .

一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。

您的联系人、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其它信息将与您的手机同步（具体取决于您的同步设置）。

登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。

# 连接到网络和设备

## WLAN

使用 WLAN，您可在无线接入点（AP）覆盖区内高速访问互联网。使用 WLAN 尽情享受无线互联网，而且无需额外付费。


### 连接 WLAN 网络

要在手机上使用 WLAN，您需要访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 WLAN，以延长电池使用寿命。

**备注：**如果您在 WLAN 区域之外，或者将 WLAN 设为关，则您的移动运营商可能为移动数据使用收取额外的费用。

### 打开 WLAN 并连接 WLAN 网络

- 1 点触  > 应用程序选项卡 > 设置 > “无线网络”选项卡中的 WLAN。
- 2 将 WLAN 设置为开，以将其打开，开始扫描可用的 WLAN 网络。
- 3 再次轻触 WLAN 菜单，查看范围内的有效 WLAN 网络列表。
  - 锁图标表示受到安全保护的网路。
- 4 点触某个网络进行连接。
  - 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据（请咨询网络管理员获取详细信息）。
- 5 连接到 WLAN 网络后，状态栏会显示用来指示 WLAN 状态的图标。

## 蓝牙


与大多数其他手机不同，您可以通过运行对应的应用程序来使用蓝牙发送数据。

### 备注：

- LG 对经蓝牙无线功能发送或接收的数据的丢失、拦截或误用不承担任何责任。
- 随时确保您与之共享和接收数据的设备可靠且安全。如果设备间存在障碍物，则需要缩短操作距离。
- 某些未经 Bluetooth SIG 测试或认可的设备可能与您的设备不兼容。

### 打开蓝牙，将手机与蓝牙设备配对

您必须将您的设备与另一设备配对方可与其连接。

- 1 点触  > **应用程序**选项卡 > **设置** > 将“**无线网络**”选项卡中的**蓝牙**设为开。
- 2 再次轻触**蓝牙**菜单。在看到使手机可见的选项和搜索设备选项后，轻触**搜索设备**，查看“**蓝牙范围**”中的设备。
- 3 从列表中选择您要配对的设备。  
一旦配对成功，您的设备将连接到该设备。

**备注：**有些耳机或免提式车载套件设备可能有固定的蓝牙 PIN码，如 0000。  
。如果其它设备具有 PIN，将要求您输入。

## 连接到网络和设备


### 使用蓝牙无线功能发送数据


- 1 从相应的应用程序或**下载内容**中选择文件或项目，如联系人、日历事件或媒体文件。
- 2 选择选项以通过蓝牙发送数据。

**备注：**选择选项的方法可能会因数据类型不同而有所变化。

- 3 搜索并配对已启用蓝牙的设备。

### 使用蓝牙无线功能接收数据

- 1 点触  > **应用程序**选项卡 > **设置** > 将**蓝牙**设为“开”。

**备注：**选择您设备可见的时间长度，然后点触  > **可见超时**。

- 2 选择**接受**以确认您愿意接收来自该设备的数据。


## 共享手机的数据连接

在没有无线连接可用时，USB 绑定和便携式 WLAN 热点功能非常有用。您可以通过 USB 数据线（USB 绑定）将您手机的移动数据连接与一台电脑共享。通过将手机变为便携式 WLAN 热点，您可以一次与多个设备共享手机的数据连接。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

有关绑定和便携式热点的信息，包括支持的操作系统及其他详细信息，请访问 <http://www.android.com/tether>。


更改便携式 WLAN 热点设置：

- 1 点触  > **应用程序**选项卡 > **设置** > “**无线网络**”选项卡中的**绑定 & 网络** > **WLAN 热点** > 选择要调整的选项。

**提示!** 如果您的电脑运行 Windows 7 或部分 Linux 风格的最新分发 (例如 Ubuntu), 通常无需准备电脑进行绑定。但是如果运行的是较早版本的 Windows 或其他操作系统, 则可能要先准备您的电脑, 才能通过 USB 建立网络连接。如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息, 请访问 <http://www.android.com/tether>。

## 重命名或确保您的便携式热点安全

您可以更改手机 WLAN 网络名称 (SSID) 的名称并确保其 WLAN 网络的安全。

- 1 在主屏上点触  > **应用程序选项卡** > **设置**。
- 2 点触“**无线网络**”选项卡中的**绑定 & 网络**, 然后选择 **WLAN 热点**。
- 3 确保已开启 **WLAN 热点**。
- 4 点触**设置 WLAN 热点**。
  - **设置 WLAN 热点**对话框将打开。
  - 您可以更改**WLAN 名称 (SSID)**, 这将是其他电脑在扫描 WLAN 网络时看到的名称。
  - 您也可以点触**安全性**菜单来为网络配置 WLAN 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。
  - 如果点触 **WPA2 PSK 安全性**选项, 则密码字段将会添加到**设置 WLAN 热点**对话框中。如果输入密码, 您将需要在将手机的热点与电脑或其他设备连接时输入密码。您可以在**安全性**菜单中点触**开放**, 以从 WLAN 网络中删除安全性。
- 5 点触**保存**。

**注意!** 如果将安全性选项设为开放, 则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未授权使用, 最好保持激活安全性选项。

# 连接到网络和设备

## WLAN直连

WLAN直连支持启用了WLAN的设备之间无需借助接入点而直接连接。因为 WLAN 直连十分耗电，所以建议您在使用 WLAN 直连功能时将手机连接至电源插座。提前检查您的 WLAN & WLAN直连网络，确保用户已连接到相同的网络。

## 使用 USB 数据线的 PC 连接

了解在 USB 连接模式下，如何使用 USB 数据线将您的设备与 PC 相连。通过将手机与 PC 连接，您可直接向设备传输数据或直接从设备中传输数据，并使用 PC 软件 (LG PC Suite)。

### 同步手机与电脑

若要使用 USB 数据线将手机与 PC 同步，需要在 PC 上安装 PC 软件 (LG PC Suite)。从 LG 网站 ([www.lg.com](http://www.lg.com)) 下载程序。

- 1 使用 USB 数据线将手机连接到 PC。此时将出现 USB 连接类型列表；选择 LG 软件。
- 2 在您的 PC 上运行 LG PC Suite 程序。关于详细信息，请参阅 PC 软件 (LG PC Suite) 帮助。

**备注：**需要使用 LG 集成的 USB 驱动程序才能连接 LG 设备与 PC。它将在安装 LG PC Suite 软件时自动安装。

### 使用 MTP 存储模式传输音乐、照片和视频

- 1 使用 USB 数据线将手机连接到 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择**功能表键**  > **系统设置** > **PC 连接** > **选择USB连接方法**，然后选择**媒体同步 (MTP)**。
- 3 您现在可以在 PC 中查看大容量存储内容，然后传输文件。

### 与 Windows Media Player 同步

确保 Windows Media Player 已安装在您的 PC 上。





- 1 使用 USB 数据线将手机连接到安装了 Windows Media Player 的 PC 上。
  - 2 选择**媒体同步 (MTP)** 选项。连接后, PC 上显示弹出窗口。
  - 3 打开 Windows Media Player 以同步音乐文件。
  - 4 在弹出窗口中编辑或输入设备的名称 (如有必要)。
  - 5 选中并拖动所需音乐文件至同步列表。
  - 6 开始同步。
- 要与 Windows Media Player 同步, 必须满足以下要求。


项目	要求
操作系统	Microsoft Windows XP SP2、Vista 或更高
Window Media Player 版本	Windows Media Player 10 或更高版本

- 如果 Windows Media Player 版本低于 10, 请安装第 10 版或更高版本。



# 通话

## 拨打电话



- 1 点触  以打开键盘。
- 2 使用键盘输入号码。要删除一个数字，请点触 。
- 3 点触  以拨打电话。
- 4 要结束通话，请点触**结束**图标 。

**提示！** 要输入“+”以拨打国际电话，请点触并按住 。

## 呼叫联系人

- 1 点触  可以打开电话本。
- 2 滚动浏览联系人列表，或点触**搜索联系人**输入您要呼叫的联系人的前几个字母。
- 3 在列表中，点触要呼叫的联系人两次或点触 。

## 接听和拒绝电话

在锁定状态收到来电时，按任何方向滑动  以接听来电。  
按任何方向滑动  以拒绝来电。  
要发送消息，按住并滑动底部的**用消息拒绝**图标。

### **提示！ 用消息拒绝**






您可以使用此功能快速发送信息。此选项可用于在会议时拒接来电并发送信息。

# 通话

## 调节通话音量



要在通话期间调节通话音量，请使用手机左侧的音量调高和调低键。

## 拨打第二个电话


- 1 在初始呼叫中，点触**功能表键** > **添加通话**，然后拨号。您也可以点触  转到最近的“通话记录”列表，或点触  搜索联系人，然后选择您要拨打的号码。
- 2 点触  拨打电话。
- 3 此时呼叫屏幕上显示两个呼叫。初始呼叫被保持，通话方进入通话状态。
- 4 点触显示的号码可在不同的通话间切换。或点触  **合并通话**进行多方通话。
- 5 要结束当前通话，请点触**结束**，或者点触**主屏键**并向下滑动通知栏，然后选择**挂断通话**图标 。

**备注：**您需要对每通电话付费。

## 查看通话记录


在主屏上，点触  并选择**通话记录**选项卡 。  
查看所有拨电、已接来电和未接来电的完整列表。

**提示！** 点触任意通话记录条目，以查看通话日期、时间和时长。

**提示！** 点触**菜单键** ，然后点触**全部删除**以删除所有记录条目。

## 通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

1 在主屏上点触 .

2 点触 .


3 轻触**通话设置**，然后选择要调整的选项。

# 联系人




在手机上添加联系人，并将其与 Google 帐户或其他支持联系人同步的帐户中的联系人同步。

## 搜索联系人

在主屏中

- 1 点触  可以打开电话本。
- 2 点触**搜索联系人**，使用键盘输入联系人姓名。


## 添加新联系人

- 1 点触 ，输入新联系人的号码，然后点触**菜单键** 。点触**添加至“联系人” > 新建联系人**。
- 2 如果要为新联系人添加图片，请点触图像区域。从**拍照**或**从图片库中进行选择**中选择。
- 3 点触  以选择联系人类型。
- 4 点触联系人信息类别，并输入有关联系人的详细信息。
- 5 点触**保存**。

## 常用电话本

您可以按收藏夹归类经常呼叫的联系人。

**将联系人添加到收藏夹**



- 1 点触  可以打开电话本。
- 2 点触联系人以查看其详细信息。
- 3 点触联系人姓名右侧的星号。星号变为黄色。

**从收藏夹列表中删除联系人**

- 1 点触  可以打开电话本。
- 2 点触  选项卡，选择一个联系人以查看其详细信息。

- 3 点触联系人姓名右侧的黄色星号。星号变为灰色，联系人已从收藏夹中删除。

## 创建群组



- 1 点触  可以打开电话本。
- 2 点触 **群组**，然后点触 **菜单键** 。选择 **新群组**。
- 3 输入新群组的名称。此外，您还能为新建群组设置铃声。
- 4 点触 **保存** 以保存群组。

**备注：**如果您删除一个群组，分配至该群组的联系人不会被删除。他们将保留在您的电话本中。


# 信息

您的手机将短信和彩信结合到一个直观易用的菜单中。

## 发送信息


- 1 点触主屏上的  图标，然后点触  打开空白信息。
- 2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以点触建议的收件人。您可以添加多个联系人。


**备注：**您将按每个收件人每条文本信息付费。

- 3 点触“**输入内容**”字段并开始编写信息。
- 4 点触  以打开“选项”菜单。从以下选项中选择：**快速信息、插入表情符号、计划发送、添加主题**和**取消**。

**提示！** 您可以点触  图标以附加想要在信息中共享的文件。

- 5 点触**发送**发送信息。
- 6 当您查看并发送附加信息时，将创建信息会话。

 **警告：**160 个字符的限制在不同国家/地区有所不同，具体取决于语言和短信编码方式。


 **警告：**如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

## 线程框

与另一方交换的信息（短信、彩信）将以时间顺序显示，以便您方便查看对话概述。

## 更改信息设置

手机已预定义信息设置，因此，您可以立即发送信息。您可以根据喜好更改设置。

- 点触主屏上的**信息**图标，点触 ，然后轻触**设置**。

# 电子邮件

您可以使用电子邮件应用程序读取其它服务的电子邮件。电子邮件应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。  
您的服务提供商或系统管理员可提供您需要的帐户设置。

## 管理电子邮件帐户



首次打开**电子邮件**应用程序时，将打开一个设置向导，帮助您设置电子邮件帐户。

初始设置后，电子邮件将显示您的收件箱中的内容。如果添加了多个帐户，您可以在帐户之间切换。

**添加另一个电子邮件帐户：**

• 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **设置** > **添加帐户**。



**更改电子邮件帐户设置：**

• 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **设置** > **常规设置**。

**删除电子邮件帐户：**




• 点触  > **应用程序**选项卡 > **电子邮件** > 点触  > **设置** > **删除帐户** > 点触要删除的帐户 > **删除** > 选择是。

## 使用帐户文件夹

点触  > **应用程序**选项卡 > **电子邮件**，点触  并选择**文件夹**。  
每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

## 撰写和发送电子邮件

### 要撰写和发送邮件

- 1 在**电子邮件**应用程序中，点触 .
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。
- 3 点触“密送/抄送”字段以添加抄送/密件抄送，如果需要，请点触  以附加文件。
- 4 输入邮件的正文。
- 5 点触 .

如果未连接到网络，例如，如果您以飞行模式工作，您发送的邮件将存储到您的“发件箱”文件夹中，直到重新连接到网络。如果发件箱包括任何未发送的邮件，发件箱就会显示在**帐户**屏幕上。




**提示！** 收件箱收到新电子邮件时，您将收到声音或振动通知。轻触电子邮件通知可停止接收通知。

# 照相机

要打开相机应用程序，轻触主屏上的**照相机** .


## 了解取景器














- 1 闪光灯** - 从关闭 、打开 、自动  中选择。
- 2 切换镜头** - 在后置相机镜头与前置相机镜头之间切换。
- 3 拍摄模式** - 从正常、动态色调 (HDR)、全景、连环拍摄、人面优化、时间捕捉拍摄、运动或夜间中选择。
- 4 设置** - 轻触此图标可以打开设定菜单。
- 5 视频模式** - 轻触并向下滑动此图标以切换到视频模式。
- 6 拍照**
- 7 图片库** - 轻触以查看最近拍摄的照片。您可以访问图片库并查看相机模式下保存的照片。

**备注：**拍照前，请确保相机镜头清洁干净。

## 使用高级设置

从取景器中轻触  以打开高级选项。滚动列表，您可以更改相机设置。选择选项后，轻触**返回键**。

	要拍照，说出以下词语之一：Cheese、Smile、Whisky、Kimchi 或 LG。
	定义并控制进入照片的光量。
	轻触以选择对焦模式。
	选择照片分辨率。如果您选择高分辨率，文件大小会增大，这意味着内存中可存放的照片数量会减少。
	ISO 评级决定相机的光传感器的感光性。ISO 越高，相机感光性能越好。在您无法使用闪光灯而光线较差的条件下，此功能很有用。
	提高不同光照条件下的颜色质量。
	对图片应用艺术效果。
	设置按下拍摄按钮后的延迟。如果要为自己拍摄照片，此功能是理想之选。
	激活以使用手机基于位置的服务。 <b>备注：</b> 此功能仅在激活 GPS 或连接网络后可用。
	选择快门声音。
	将音量键设为是否用于拍摄或缩放。
	打开帮助指南以了解某功能的操作方式。



恢复所有相机默认设置。

## 提示！

- 退出相机时，部分设置将返回默认值，如白平衡、色彩效果、计时器和场景模式。拍摄下一张照片之前，请先查看。
- 设置菜单层叠在取景器之上，因此，当您更改照片颜色或质量时，您将在“设置”菜单下预览到图像更改效果。

## 快速拍照

- 1 打开**照相机**应用程序。
- 2 拿稳手机，将镜头对准您要拍摄的物体。
- 3 点触屏幕，取景器屏幕上会出现一个对焦框。此外，您还可以轻触屏幕上的任何位置以在该点上对焦。
- 4 对焦框变绿时，表示相机已对好焦。
- 5 点触 以拍摄照片。

## 拍照后

如果自动查看设为“开”，拍摄的照片将显示在屏幕上（参阅“使用高级设置”）。

	轻触以使用 SmartShare 功能分享您的照片。
	轻触以立即拍摄新照片。
	轻触即可发送照片给他人或通过社交网络服务共享照片。
	轻触以删除相片。

**提示！** 如果有 SNS 帐户并在手机上设置了该帐户，您可以向 SNS 社区共享您的照片。

**点触菜单键**  以打开所有高级选项。

**将图像设置为** - 点触以将照片用作**壁纸、联系人照片、锁定屏幕墙纸或主屏墙纸**。

**移动** - 点触以将照片移至其他位置。

**复制** - 点触以复制选定照片并将其保存至其它相册。

**复制至剪切任务栏** - 点触以复制至剪切任务栏。

**重命名** - 点触以编辑选定照片的名称。

**向左或向右旋转** - 向左旋转或向右旋转。

**剪切** - 裁切照片。使用手指移过屏幕以选定要裁切的区域。


**编辑** - 查看和编辑照片。

**幻灯片** - 自动逐张显示当前文件夹中的图像。

**添加位置** - 添加位置信息。

**详细信息** - 查找有关此内容的更多信息。


## 查看保存的照片

您可以在相机模式下访问保存的照片。只需轻触“图片库”图标  然后将显示图片库。

- 要查看更多照片，请向左或向右滚动。
- 要放大或缩小，请轻触两次屏幕或将两个手指放在屏幕上，然后分开（使两根手指靠近可将其缩小）。

# 摄像机

## 了解取景器

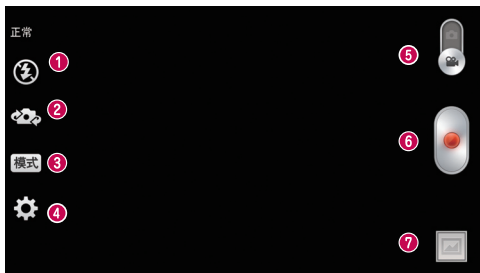

- 1 闪光灯 - 从关闭 、打开 中选择。
- 2 切换镜头 - 在后置相机镜头与前置相机镜头之间切换。
- 3 录制模式 - 从正常或实时效果中选择。
- 4 设置 - 轻触此图标可以打开设置菜单。
- 5 相机模式 - 轻触并向上滑动此图标以切换到相机模式。
- 6 开始录制
- 7 图片库 - 轻触以查看最近录制的视频。您可以访问“图片库”并查看视频模式下保存的视频。









### 提示！

录制视频时，将手指放在屏幕上并缩放手指，即可使用缩放功能。



# 摄像机

## 使用高级设置


从取景器中点触  以打开所有高级选项。

	轻触以设置正在录制的视频的大小（以像素为单位）。
	定义并控制进入镜头的光量。沿滚动条滑动亮度指示器，滑向“-”将调低视频亮度，滑向“+”将调高视频亮度。
	提高不同光照条件下的颜色质量。
	选择要对新视频使用的色调。
	激活以使用手机基于位置的服务。 <b>备注：</b> 此功能仅在激活 GPS 或连接网络后可用。
	将音量键设为是否用于录制或缩放。
	打开帮助指南以了解某功能的操作方式。
	恢复所有摄像机默认设置。

## 快速录制视频


- 1 打开**照相机**应用程序并点触**视频模式**按钮。
- 2 屏幕上将显示摄像机的取景器。
- 3 拿稳手机，将镜头对准您要摄像的物体。
- 4 点触  一次，开始录制。
- 5 取景器的左上角红灯闪烁，计时器显示视频长度。
- 6 点触屏幕上的  停止录制。

## 录制视频后

拍摄的视频将显示在“图片库”中。点触  以查看最近拍摄的视频。

	点触以使用 <b>SmartShare</b> 功能共享视频。
	点触可进行拍照或录制视频。
	点触可以通过Gmail等方式分享视频。
	点触可删除拍摄的视频

## 观看保存的视频

- 1 在取景器中，轻触 .
- 2 屏幕上将显示您的图片库。
- 3 轻触视频，可自动播放。


## 观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

## 实时缩放功能

实时缩放可以放大或缩小正在播放的视频的某一部分，以使所需的区域变大或变小。

1 观看视频时，将食指和拇指并拢或张开，即可放大或缩小。

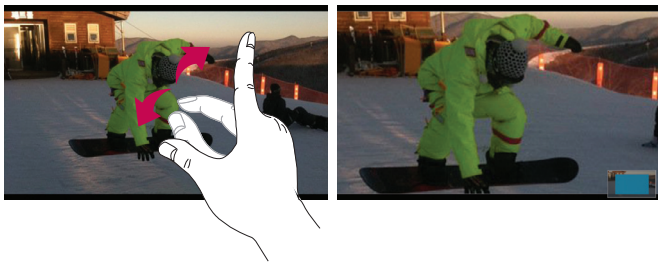

### 备注：


- 处于视频播放模式时，向上或向下滑动屏幕，将调整屏幕亮度（左侧）或音量（右侧）。
- 处于视频播放模式中时，如果您按住屏幕左右滑动，快进或快退。

**备注：**无需大力按，触摸屏非常敏感，仅需点触即可。


# LG 独特功能

## 快捷备忘录功能

在通话过程中使用**快捷备忘录功能**可通过当前手机屏幕上保存的图片切实有效地创建备忘录。

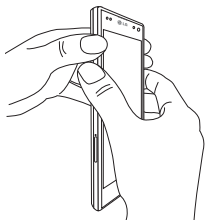


或者

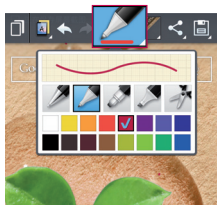



- 1 通过在要捕捉的屏幕上按住音量调高和调低键一秒钟，进入快捷备忘录功能屏幕。

或者

点触并向下滑动状态栏，然后点触 。

- 2 从**笔型、颜色、橡皮擦**中选择所需菜单选项，然后创建备忘录。

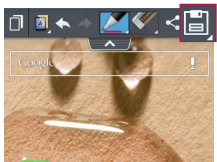








- 3 在“编辑”菜单点触  将其选定，以使用当前屏幕保存备忘录。

**备注：**使用 QuickMemo 功能时请使用指尖。不要使用指甲。

## 使用 QuickMemo 选项

使用 QuickMemo 功能时，您可以轻松使用 QuickMenu 选项。

	点触以在屏幕上保留当前备忘录，并同时使用手机。
	选择是否使用背景屏幕。
	撤销或重做。
	选择笔型和颜色。
	清除创建的备忘录。
	点触以将您的备忘录发送给他人或通过社交网络服务进行共享。
	使用当前屏幕将备忘录保存在 <b>图片库/笔记本</b> 中。


## 查看保存的 QuickMemo

点触**图片库/笔记本**，选择 QuickMemo 相册。

## 笔记本功能

通过笔记本应用程序，您可以管理和个性化各种信息。笔记本使您可以创建带有绘画、图像、地图和贴纸的您自己的特殊笔记。

### 记录笔记


- 1 点触  > 应用程序选项卡 > 笔记本。
- 2 点触**新建笔记本**可创建新笔记。
- 3 选择所需模式（**标题、墙纸、信纸颜色**）。
- 4 在空白页面上创建简单笔记。

### 了解笔记本

书架



页面属性面板

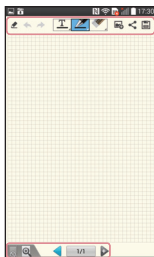

### 书架



搜索笔记页面。













通过电子邮件/Gmail 作为笔记本文件、PDF 文件或图像文件共享。



从书架删除保存的笔记本。

## 页面属性面板

	选择“只读”或“编辑模式”。
	撤销或重做。
	轻触此按钮可撰写。
	选择“笔型”、“厚度”、“不透明度”和“颜色”。
	清除创建的备忘录。
	点触以将文件附加至笔记。
	点触以将您的笔记发送给他人或通过社交网络服务进行共享。
	使用当前屏幕保存笔记。
	选择以锁定或解锁面板按钮。
	轻触此按钮可放大输入区域。

## 查看保存的笔记本


- 保存的笔记本备忘录位于书架上。
- 如果您从 QuickMemo 保存备忘录，将创建 QuickMemo 笔记并将其自动保存至书架。

**备注：**有关笔记本指南的更多信息，请参阅[笔记本](#) > [笔记本指南](#)。


### QuickTranslator

只需将智能手机的相机对准您要理解的外语句子。您可以随时随地获得实时翻译。

您可以从 Google Play Store 购买更多字典以用于脱机翻译。

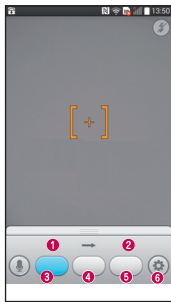

- 1 原语言。
- 2 目标语言。
- 3 单字翻译。
- 4 段落翻译。
- 5 句子翻译。
- 6 设置。

- 1 点触  > 应用程序选项卡 > QuickTranslator。
- 2 点触**单词、线条或段落**。
- 3 点触并选择所需语言。
- 4 朝您要翻译的对象按住手机几秒。

**备注：**仅免费提供一个字典。必须购买附加字典。请从下列列表中选择要作为免费字典安装的字典。

**备注：**识别率可能有所差别，具体取决于需要翻译的字幕的大小、字体、颜色、亮度和角度。

## Quick多任务

**Quick多任务**通过在手机显示屏上执行叠加操作，轻松实现多窗口浏览。



1		点触以退出Quick多任务并返回全屏模式。
2		轻触以调整透明度。
3		轻触以结束Quick多任务功能。
4		轻触以调整大小。

- 1 点触并向下滑动状态栏 > 点触Quick多任务或使用Quick多任务功能支持的功能时 > 点触 。该功能将在屏幕上持续显示为小窗口。
- 2 您可以拨打电话、浏览网络或选择其他手机选项。当透明度栏未满 时，也可以使用和轻触小窗口的下方屏幕。

**备注：**Quick多任务功能可同时支持两个窗口。

### 提示！


请使用手指点触并滑动通知面板。

点触 以管理通知面板中的“快速设置”或“Quick多任务”。

# LG 独特功能

## 双播放功能

您可以在无线连接或通过数据线连接的两个显示屏上显示不同屏幕。

- 1 在外部显示屏上播放内容时，可通过轻触主屏  键执行双播放模式。



- 2 您可以使用通知面板停止播放外部显示屏上的内容。

### 重要

- 通过无线方式（Miracast）或数据线（MHL 数据线）将智能手机连接至显示屏。
- 您可以将 MHL 或 Miracast 电视或显示器连接至智能手机。
- 某些视频文件可能不受双播放功能的支持。
- 建议使用屏蔽的 LG MHL 数据线。

### 镜像



### 双播放







**备注:**

- 双播放的最小电视分辨率为 720p (1280x720)。


## LG SmartWorld

LG SmartWorld 提供各类精彩内容 - 字体、主题、游戏、应用程序。

### 如何从手机访问 LG SmartWorld

- 1 轻触  >  > **应用程序**选项卡 > 轻触  图标以访问 **LG SmartWorld**。
- 2 轻触  “登录”，然后输入您在 LG SmartWorld 的 ID/密码。如果您还未注册，轻触“注册”以接收您的 LG SmartWorld 会员资格。
- 3 下载所需的内容。
  - \* 当您使用手机网络时，可能按您与运营商签订的数据计划收取数据费用。
  - \* 并非所有运营商或所有国家/地区都提供 LG SmartWorld。

**备注: 如果没有  图标怎么办?**

- 1 使用手机网络浏览器访问 LG SmartWorld ([www.lgworld.com](http://www.lgworld.com))，并选择您所在的国家/语言。
- 2 下载 LG SmartWorld 应用程序。
- 3 运行和安装下载的文件。
- 4 轻触  图标以访问 LG SmartWorld。

## LG 独特功能


### 特别优惠仅限 LG SmartWorld

- 1 在您的智能手机上装点出您自己的风格，使用 LG SmartWorld 上提供的主页主题、键盘主题和字体。（但是，该项服务仅适用于特定设备。请查看 LG SmartWorld 网站，了解是否可行）。
- 2 通过加入始终提供的促销，享受 LG SmartWorld 的特别服务。

# 多媒体

## 图片库

您可以将多媒体文件保存在内存中，以便轻松访问所有多媒体文件。使用此应用程序可以查看图片和视频等多媒体文件。

1 点触  > 应用程序选项卡 > 图片库。

打开存储多媒体文件的目录栏列表。

### 备注：

- 某些文件格式不受支持，具体取决于在设备上安装的软件。
- 某些文件可能无法正确播放，具体取决于其编码方式。

## 查看图片

启动图片库将显示您的可用文件夹。其它应用程序（例如电子邮件）保存图片时，将自动创建下载文件夹以包含此图片。同样，捕捉截屏图将自动创建截屏文件夹。选择文件夹以将其打开。



文件夹中的图片按创建日期显示。选择一张图片以全屏查看。向左或向右滚动以查看下一张或上一张图像。

## 放大和缩小

使用以下方法之一可以放大图像：

- 在任何位置轻触两次可以放大。
- 在任何位置展开两根手指可放大。双指并拢可以缩小，轻触两次可以还原。

## 播放视频

视频文件在预览中显示  图标。选择要观看的视频并轻触 。视频应用程序将启动。

## 编辑照片/视频



查看照片/视频，轻触菜单键 ，然后使用高级编辑选项。

- 幻灯片：开始以幻灯片的形式放映当前文件夹中的图像。


# 多媒体

## 删除图像

使用以下方法之一：

- 在文件夹中，轻触  并通过勾选选择照片/视频，然后轻触**删除**。
- 查看照片/视频时，轻触 .


## 设置为墙纸

查看照片时，点触**菜单键**  > **将图像设置为**可将图像设为墙纸或将其分配至联系人。


### 备注：

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。










## 视频

手机拥有内置的视频播放器，可让您播放所有喜爱的视频。要访问视频播放器，点触  > **应用程序选项卡** > **视频**。

## 播放视频

- 1 点触  > **应用程序选项卡** > **视频**。
- 2 选择您要播放的视频。



1		点触可继续播放视频。
2		点触可以前进 10 秒。
3		点触可以后退 10 秒。
4		点触可以管理视频音量。
5		点触可更改视频屏幕的比例。
6		点触此图标可截取影片画面。
7		点触此图标可进入 Quick 多任务模式。
8		点触以使用 SmartShare 功能共享视频。
9		点触可以锁定视频屏幕。

要在观看视频时更改音量，请按手机左侧的上下音量键。


点触并按住列表中的视频。将显示**分享、移动、复制、重命名、删除**和**详细信息**选项。

## 视频编辑器

您可以编辑存储在手机上的照片或视频。

**备注：** 视频编辑功能仅适用于通过此手机录制的照片或视频。

### <项目列表屏幕>

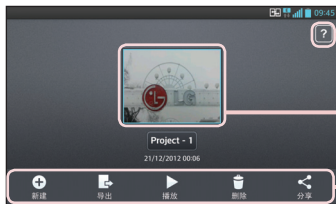

帮助

项目列表  
区域

按钮区域



创建项目



导出项目，可在视频等应用程序中播放



播放项目




删除项目



与 YouTube 等应用程序共享项目

〈项目编辑屏幕〉

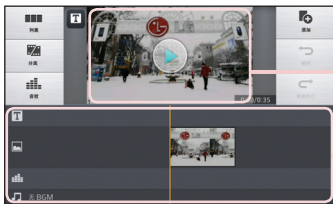


查看器区域

时间线区域

	移至项目列表屏幕。 当前编辑的项目将自动保存
	将视频剪辑分割成播放头上的两部分
	添加音效
	添加视频、图像或音频剪辑
	撤消操作
	重做操作
	将文本添加至视频或图像剪辑

## 视频魔法师

您可以使用图像/视频和音乐制作自己的电影。

- 1 点触  > 应用程序选项卡 > 视频魔法师。
- 2 查看要执行的步骤的简短说明后，轻触**确定**。



- 轻触 以将图像或视频添加至电影。
- 轻触所需图像或视频，然后轻触 。
  - 要删除图像或视频，轻触 并选择所需文件 > 。
  - 要重新设定，点触并按住图像/视频，然后将其拖放至所需位置。
- 轻触**选择样式**以选择所需的电影样式。
  - 滚动查看并选择所需样式。滚动查看样式时，将显示预览。
- 轻触**选择音乐**以选择背景音乐。
- 轻触 以播放电影。
- 轻触 以使用文本、标签或魔法区编辑视频剪辑。
  - 编辑视频后，轻触 。
- 轻触 以保存视频。轻触 以还原为默认状态。
  - 轻触 以查看有关如何使用此功能的帮助信息。

## 音乐

手机拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，点触 > **应用程序**选项卡 > **音乐**。

### 将音乐文件添加至手机

开始时将音乐文件传输至手机：


- 使用媒体同步（MTP）传输音乐。

- 从无线 Web 下载。
- 将手机与计算机同步。
- 通过蓝牙接收文件。






## 使用媒体同步 (MTP) 传输音乐

- 1 使用 USB 数据线将手机连接到 PC。
- 2 选择**媒体同步 (MTP)** 选项。您的手机将在电脑上显示为另一个硬盘驱动器。单击该驱动器进行查看。将 PC 中的文件复制到驱动器文件夹。
- 3 完成文件传输后，将状态栏向下滑动并点触 **选择USB连接方法 > 为手机充电**。现在，您可以安全地拔下设备。

## 播放歌曲

- 1 点触  > **应用程序**选项卡 > **音乐**。
- 2 点触**歌曲**。
- 3 选择您要播放的歌曲。

	轻触可暂停播放。
	轻触可继续播放。
	轻触以播放下一首曲目。轻触并按住可快进。
	轻触可重新开始播放当前曲目或跳至上一曲目。轻触并按住可后退。
	轻触以显示音量滑动条，然后通过滑动条调整播放音量。
	轻触可设置音效。
	轻触以使用 YouTube 分享。

	轻触可打开当前播放列表。
	轻触可将歌曲添加至收藏夹。
	轻触以采用随机播放模式（按随机顺序播放曲目）播放当前的播放列表。
	轻触以切换至重复播放模式，以重复播放所有歌曲、重复播放当前歌曲或关闭重复。
	轻触以通过 SmartShare 功能分享音乐。

要在聆听音乐时更改音量，请按手机左侧的上下音量键。

点触并按住列表中的任何歌曲。将显示**播放**、**添加到播放列表**、**分享**、**设置为铃声**、**删除**、**详细信息**和**搜索**选项。

**备注：**

- 某些文件格式不受支持，具体取决于设备的软件。
- 如果文件大小超过可用内存，打开文件时可能会发生错误。



**备注：** 音乐文件的版权可能受国际条约和国家版权法保护。


因此，可能需要获得许可或许可证才能复制音乐。

在某些国家/地区，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。




# 实用工具

## 设置闹钟



- 1 点触  > 应用程序选项卡 > 闹钟/时钟 > 。
- 2 在设置闹钟后，手机会让您得知闹钟响铃之前的剩余时间。
- 3 设置**重复、再响间隔、振动、铃声、闹钟音量、自动应用程序启动器、拼图锁和备忘录**。点触**保存**。

**备注：**要更改闹钟列表屏幕上的闹钟设置，点触**菜单键** ，然后选择“设置”。

## 使用计算器

- 1 点触  > 应用程序选项卡 > 计算器。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触要执行的功能（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，点触 ，选择**科学计算器**，然后选择 sin、cos、tan、log 等。
- 5 要检查历史记录，请轻触图标 ，选择**计算历史记录**。

## 将事件添加到日程表中





- 1 点触  > 应用程序选项卡 > 日历。
- 2 在屏幕上，您会发现不同视图类型（日、周、月、年、日程）的日历。
- 3 轻触要为其添加事件的日期并点触 。
- 4 点触**活动名称**，然后输入事件名称。
- 5 点触**位置**，然后输入位置。查看日期并输入活动开始和结束的时间。


- 6 如果您要为事件添加备注，请点触**说明**，然后输入详细信息。
- 7 如果要重复闹钟，请设置**重复**，必要时设置**提醒**。
- 8 点触**保存**以在日历中保存事件。

## 语音备忘录


使用录音机录制录音或其他音频文件。

### 录制声音或语音

- 1 点触  > **应用程序**选项卡并选择**录音机**。
- 2 点触  开始录音。
- 3 选择  结束录音。
- 4 点触  收听录音。

**备注：**点触  可访问已录制的文件。您可以收听保存的录音。可用的录制时间可能与实际录制时间不同。

### 发送录音

- 1 录音完成后，您可以点触  以发送音频剪辑。
- 2 选择选项：**蓝牙、电子邮件、Gmail、备忘录或信息**。选择信息时，录音将被添加至信息。然后，您可以像平常一样编写和发送信息。

## 任务管理器

您可以使用任务管理器管理应用程序。您可以轻松检查当前运行的应用程序数量和关闭特定应用程序。您也可以卸载在设备上安装的应用程序。

### 任务

此任务可与 MS Exchange 帐户同步。您可以在 MS Outlook 或 MS Office Outlook Web Access 中创建任务、修订和删除任务。

#### 同步 MS Exchange

- 1 点触应用程序 > **设置**。
- 2 点触**帐户与同步** > **添加帐户**。
- 3 点触 **Microsoft Exchange** 以创建电子邮件地址和密码。
- 4 确保勾选自动同步数据。

### Polaris Office 4

Polaris Office 是专业的移动办公解决方案，让用户可使用移动设备随时随地方便地查看各种类型的办公文档，如 Word、Excel 和 PowerPoint 文件。

点触  > **应用程序**选项卡 > **Polaris Office 4**。

#### 查看文件

现在，移动用户可在移动设备上轻松查看各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。使用 Polaris Office 查看文档时，对象和布局与原始文档相同。

## LG Backup

### 关于备份和恢复智能手机数据

建议您定期在内部存储器上创建和保存备份文件，尤其是在更新任何软件之前。在智能手机丢失、被盗或因无法预料的问题损坏时，在存储卡上保留的最新备份文件可能让您恢复智能手机数据。

此“备份”应用程序在 LG 智能手机、其他软件版本或操作系统间受支持。因此，购买新 LG 智能手机时，您可以将当前手机数据备份到新手机中。

如果您已在智能手机上预加载**备份**应用程序，那么，您可以使用此应用程序，备份和恢复LG主屏、个人数据、媒体数据、LG应用程序、设置和下载的应用程序。

您可以：

- 手动备份智能手机数据。
- 计划自动备份智能手机数据。
- 恢复智能手机数据。




#### 警告

要预防在备份或恢复操作中出现因电池电量不足引起的意外关机，您应始终为电池充满电。


## 实用工具

### 备份

- 1 点触  > 应用程序选项卡 > LG Backup > 备份。
- 2 选择要备份的项目旁边的复选框，然后轻触“下一步”备份。
- 3 点触内部存储器 > 启动。
- 4 备份所有选定文件后，您可以点触完成以完成备份。

### 计划备份

您也可以根据您的计划设置，计划智能手机数据的自动备份。要执行此操作，请完成下列步骤：

点触  > 应用程序选项卡 > LG Backup > 计划备份。

### 文件还原和管理

您可以设置为“将文件恢复备份为所需状态”。  
要恢复位于机载设备内存中的数据，必须关闭大容量存储模式。

点触  > 应用程序选项卡 > LG Backup > 文件还原和管理。

## Google+

使用此应用程序可以通过 Google 的社交网络服务与他人保持联系。

- 点触  > 应用程序选项卡 > Google +。

**备注：**此应用程序可能不可用，具体取决于地区或服务提供商。

## 语音搜索

使用此应用程序可以使用语音搜索网页。

- 1 点触  > 应用程序选项卡 > 语音搜索。

- 2 屏幕上出现**请开始说话**时，说出一个关键字或短语。选择显示的建议关键字之一。

**备注：**此应用程序可能不可用，具体取决于地区或服务提供商。

## 下载内容

使用此应用程序可以查看通过应用程序下载的文件。

- 点触  > **应用程序**选项卡 > **下载内容**。

**备注：**此应用程序可能不可用，具体取决于地区或服务提供商。

## 互联网






浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。随时随地、不受限制。

**备注：**连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

1 点触  > 应用程序选项卡 > 互联网。

### 使用 Web 工具栏



轻触并按住 Web 工具栏，然后用手指将其向上滑动以打开。


	点触可返回到上一页。
	点触可前进到当前页之后的下一页。这正好与按 <b>返回</b> 键的效果相反，按“返回”键将转到上一页。
	点触以转至主页。
	点触可添加新窗口。
	点触可访问书签。

### 查看网页

轻触地址字段，输入网址并轻触**开始**。


### 打开页面

转至新页面，轻触  → 。

要转至其它网页，轻触 ，向上或向下滚动，然后轻触页面以将其选定。

# 网络

## 按语音搜索网络

轻触地址字段，轻触 ，说一个关键字，然后选择显示的建议关键字之一。



**备注：**此功能可能不可用，具体取决于地区或服务提供商。

## 书签

要将当前网页添加至书签，点触  > 添加至书签 > 确定。

要打开添加至书签的网页，轻触  并选择一项。

## 历史记录


轻触  > **历史记录**，以从最近访问的网页列表中打开网页。要清除历史记录，轻触菜单  → **清除所有历史记录**。

## 使用弹出浏览器

使用此功能可以在不关闭当前应用程序的情况下访问互联网。

查看联系人或包含网址的笔记等内容时，选择网址，然后轻触“弹出浏览器”以打开弹出浏览器。轻触并拖动浏览器，将其移至其它位置。

要全屏查看浏览器，轻触 。

要关闭浏览器，轻触 。

## Chrome

使用 Chrome 可以搜索信息并浏览网页。

1 点触  > **应用程序**选项卡 > **Chrome**。


**备注：**此应用程序可能不可用，具体取决于地区和服务提供商。

### 查看网页


轻触“搜索或输入网址”字段，然后输入网址或搜索条件。

### 打开页面

要转至新页面，轻触 ，打开新的标签页。


要转至其它页面，轻触 ，向上或向下滚动，然后轻触页面以将其选定。

### 按语音搜索网络

轻触地址栏，轻触 ，说一个关键字，然后选择一个显示的建议关键字。

### 与其它设备同步

您使用相同 Google 帐户登录时，同步要用于其它设备上的 Chrome 的打开选项卡和书签。

要查看其它设备上的打开选项卡，轻触**菜单键**  → **其他设备**。

选择要打开的网页。

要添加书签，轻触**菜单键**  → 。

# 设置

## 访问“设置”菜单

- 1 在主屏上，点触  > 应用程序选项卡 > 设置。  
或者在主屏上点触  > 系统设置。
- 2 选择设置类别和选项。

## 无线网络


在这里，您可以管理 WLAN 和蓝牙。您也可以设置移动网络以及切换为飞行模式。

### <WLAN>

WLAN - 打开 WLAN 以连接到可用的 WLAN 网络。

#### 提示！ 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入手机的 MAC 地址。

您可以在以下用户界面找到 MAC 地址：点触应用程序选项卡 > 设置 > WLAN >  > 高级 WLAN > MAC 地址。

### <蓝牙>

打开蓝牙以连接蓝牙设备。

### <移动数据>

显示数据使用情况并设置移动数据使用范围。

### <通话>

配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

**语音邮件中心** - 可让您选择运营商的语音信箱服务。

**固定拨号** - 打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要提供 PIN2 码，此密码由运营商提供。仅可以使用手机拨打此号码列表中的号码。

**来电弹出窗口** - 正在使用应用程序时，显示来电弹出窗口。

**拒接来电** - 允许您设置拒接来电功能。选择**来电拒接模式**或**拒接呼叫**。

**用消息拒绝** - 想拒绝通话时，可使用此功能快速发送一条消息。此选项可用于在会议时拒接来电。

**来电隐藏** - 隐藏主叫方姓名和来电号码。

**来电转接** - 您可以选择所有来电转接、忙碌、无人接听时转接、无网络或关机时转接等。

**自动应答** - 使用耳机启用自动应答。从“停用”、“1 秒”、“3 秒”和“5 秒”中进行选择。

**连接振动** - 其他方接听电话时振动您的手机。

**保存未知号码** - 通话后将未知号码添加至联系人。

**电源键结束呼叫** - 选择按电源按钮结束通话。

**呼叫限制** - 可以选择所有拨出电话、所有来电、国际漫游时来电等。

**通话时间** - 查看“最后通话”、“所有通话”、“已拨电话”和“已接来电”的通话时间。

**其他GSM通话设置** - 允许您更改以下设置：

**本机号码：**选择是否要在拨出电话时显示您的号码。

**来电等待：**如果激活了来电等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

## <共享与连接>

**NFC** - 您的手机支持NFC。NFC (Near Field Communication, 近场通讯) 是一项无线连接技术，它可使电子设备之间实现双向通信。它能在几厘米的距离内工作。只需通过设备轻触，即可与 NFC 标签或其他 NFC 支持设备共享内容。如果您通过设备轻触 NFC 标签，则将在设备上显示标签内容。

**要开启或关闭 NFC：**在主屏上，用手指点触并向下滑动通知面板，然后选择 NFC 图标将其开启。

**备注：**激活飞行模式时，可以使用 NFC 应用程序。

## 设置

**使用 NFC:** 要使用 NFC, 请确保您的设备已开启, 并激活 NFC。

**Android Beam** - 启用此功能时, 您可以通过与其他设备贴近, 将应用程序内容传送至其他具有NFC功能的设备。

只需将设备放在一起(一般采用背靠背的方式), 然后轻触屏幕即可。此应用程序将确定无线发送的内容。

**SmartShare Beam** - 可接收来自 LG 手机的文件。

**媒体服务器** - 通过DLNA与附近设备共享媒体内容。

**Miracast** - 以无线方式将手机屏幕和声音镜像到 Miracast 适配器或电视上。

### <绑定 & 网络>

**WLAN 热点** - 打开移动热点并通过WLAN将其他设备连接至手机。

**蓝牙绑定** - 可让您设置手机, 无论您是否在共享互联网连接。

**帮助** - 轻触以查看有关 WLAN 热点和蓝牙绑定功能的帮助信息。

**飞行模式** - 切换为飞行模式之后, 将禁用所有无线连接。

**移动网络** - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等设置选项。

**默认消息应用程序** - 设置信息或环聊。

**VPN** - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

**备注:** 您必须设置锁定屏幕 PIN 或密码才能使用VPN。

## 设备

### <声音>

**声音模式** - 选择“声音”、“仅振动”或“静音”。

**音量** - 调整铃声、通知触摸反馈和媒体的音量。

**静音时间** - 设置静音时间关闭除闹钟和媒体外所有声音。

**手机铃声** - 允许您设置默认来电铃声。

**智能铃声** - 当环境噪音级别较高时自动提升手机铃声音量。

**响铃并振动** - 在接到电话和通知时发出振动反馈

**通知声音** - 允许您设置默认通知铃声。

**触摸反馈与系统** - 拨号盘触摸音调、触摸声、屏幕锁定声等。

### <显示屏>

**亮度** - 调整屏幕亮度。

**屏幕超时** - 设置屏幕超时之前的时间。

**自动旋转屏幕** - 设置为在旋转手机时自动切换方向。

**互动屏保** - 轻触互动屏保开关以打开或关闭此功能。如果打开，设备屏幕保护程序将在手机处于睡眠模式（插接和/或充电）时显示。

**字体类型** - 更改显示字体类型。

**字体大小** - 更改显示字体的大小。

**智能屏幕** - 当手机检测到您的脸时，屏幕将保持在开启状态。

**前键灯** - 设置正面按键持续亮灯时间。

**通知闪烁** - 通知 LED 位于前置相机的左侧。如果手机充电或您在 LCD 屏幕关闭时收到通知，您将看到小 LED 亮起。您可以将**使用LED灯进行通知**打开/关闭。您可以从通知闪光灯项目中设置各种选项。

### <主屏>

**设置主题、壁纸、屏幕点击效果、允许主屏幕循环、仅为纵向视图、或主页备份与还原。**

### <锁定屏幕>

**选择屏幕锁定** - 设置屏幕锁定类型以保护手机。打开一组屏幕，它们可指导您绘制屏幕解锁图案。设置**无、滑动、人脸解锁、图案、PIN或密码**。

如果启用了图案锁定类型，当您打开手机或唤醒屏幕时，系统将提示您画出解锁图案，才能将屏幕解锁。

**屏幕点击效果** - 设置屏幕点击效果。

# 设置

**壁纸** - 从“图片库”或“壁纸图库”中选择锁定屏幕壁纸。

**窗口小部件** - 在锁定屏幕上显示小组件。

**快捷方式** - 允许您更改**滑动**锁定屏幕上的快捷方式。

**拥有者信息** - 在锁定屏幕上显示机主信息。

**锁定计时器** - 设置屏幕超时后的锁定时间。

**电源按钮立即锁定** - 将屏幕设为在按下电源按钮时锁定。

## <手势>

**等待接听的来电** - 翻转设备使来电静音。

**暂停或停止闹铃** - 翻转设备使闹钟暂停或停止。

**暂停视频** - 翻转设备暂停视频播放。

**帮助** - 手势功能的帮助。

**运动传感器校准** - 改善倾斜精确度和感应器速度。

## <存储>

**内部存储器** - 查看内部存储器使用情况。

## <电量使用情况>

### 电池信息

电池图上将显示电池电量信息，此外还将显示剩余电量百分比及电池状态。

点触电池电量图标显示电池使用情况屏幕，以查看电池使用量和电池使用详情。并将显示使用电池电量最多的组件和应用程序。轻触某个条目以查看更多详情。

**状态栏上的电量百分比** - 勾选以在电池图标旁边的状态栏上显示电池使用量百分比。

### 省电

轻触省电开关以打开或关闭此功能。

### Eco 模式

优化CPU控件以延长电池寿命。

## 帮助

查看帮助信息。

## <应用程序>

查看和管理应用程序。

## <点击支付>

开启 NFC 时，您可使用点击支付功能以支付项目。

## 个人

### <帐户与同步>

允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消选择此设置可节省电池电量并减少（而非消除）数据使用。

### <云>

添加云帐户以快速而轻松地在 LG 应用程序上使用云服务。

### <位置>

打开位置服务，您的手机将使用 GPS、WLAN 和移动网络确定您的大概位置。

**模式** - 从**高精度(GPS和网络)**、**省电(仅网络)**和**仅设备传感器(仅限GPS)**中设置位置模式。

**最近定位请求** - 显示最近要求位置信息的应用程序。

**定位服务** - 允许您查看您的Google位置设置。

**Google 位置报告** - 选择开启或关闭 **Google 位置报告**选项。

### <安全性>

**加密手机** - 允许加密手机数据以保护安全性。您需要在每次开机时输入 PIN 或密码才能解密手机。

**设置 SIM 卡锁定** - 设置SIM卡锁定或更改SIM PIN。

**密码键入为可见** - 在您键入时显示隐藏的密码的最后一个字符。

**设备管理器** - 查看或停用手机管理器。

# 设置

**未知源** - 将设置默认为非 Market 应用程序的安装。

**验证应用程序** - 安装可能引起危害的应用程序之前进行禁用或警告。

**通知访问** - 应用程序可以读取通知。

**存储器类型** - 仅限软件。

**可信凭据** - 显示可信 CA 证书。

**从存储器上安装** - 选择并安装已加密的证书。

**清除存储** - 移除所有证书。

## <语言和输入设备>

使用“语言和输入设备”设置为手机上的文本选择语言并配置屏上键盘（包括已添加到词典中的文字）。

## <备份与重置>

更改设置以管理您的设置和数据。

**备份我的数据** - 设为将您的设置和应用程序数据备份至 Google 服务器。

**备份帐户** - 设为备份您的帐户。

**自动还原** - 设为在应用程序重新安装在您的设备上时恢复您的设置和应用程序数据。

**LG 备份服务** - 备份设备上的所有信息并在出现数据丢失或更换时进行恢复。

**重设出厂数据** - 将您的设置恢复为出厂默认值，然后删除所有数据。如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

# 系统

## <日期和时间>

使用**日期和时间**设置可设置日期的显示方式。您还可使用这些设置来

设置自己的时间和时区，而非从移动网络获取当前时间。

### <辅助工具>

使用**辅助工具**可配置您在手机上安装的辅助功能插件。

**备注：**需要额外的插件才能变成可选。

### <PC 连接>

**选择USB 连接方法** - 设置所需模式：**为手机充电、媒体同步 (MTP)、绑定、LG 软件或发送图像 (PTP)**。

**连接时询问** - 手机连接到电脑时在 USB 连接模式中询问。

**帮助** - USB 连接的帮助。

**PC Suite** - 勾选此项以在具有 WLAN 连接时使用 LG PC Suite。

请注意，应通过无线和网络中的 WLAN 连接来连接 LG PC Suite 的 WLAN 网络。

**帮助** - LG 软件的帮助。

### <正在打印>

允许您使用链接至与Android装置相同的WLAN网络的打印机，打印某些画面的内容(如 Chrome 显示的网页)。

### <关于手机>

查看法律信息，检查手机状态和软件版本。

## PC 软件 (LG PC Suite)

“LG PC Suite” PC 软件是一种可帮助您使用 USB 数据线和 WLAN 将设备连接到 PC 的程序。连接后，您可以在 PC 上使用设备的功能。

### 借助“LG PC Suite” PC 软件，您可以...

- 在 PC 上管理和播放媒体内容（音乐、电影、图片）。
- 将多媒体内容发送到设备。
- 同步设备和 PC 间的数据（日程表、联系人、书签）。
- 备份设备中的应用程序。
- 更新设备中的软件。
- 备份和恢复设备数据。
- 在您的设备上播放 PC 中的多媒体内容。
- 在设备中备份、创建和编辑备忘录。

**备注：** 您可使用应用程序中的“帮助”菜单，查找如何使用“LG PC Suite” PC 软件。

### 安装“LG PC Suite” PC 软件

可以从 LG 网页下载“LG PC Suite” PC 软件。

- 1 转到 [www.lg.com](http://www.lg.com)，选择您所在的国家/地区。
- 2 转至**移动设备 > 手机 > 产品服务 > 服务与支持** > 输入型号名称或数字，选择**搜索**。
- 3 选择型号，单击“下载”中的**电脑同步软件**，下载“LG PC Suite” PC 软件。

### “LG PC Suite” PC 软件的系统要求

- 操作系统：Windows XP (Service pack 3) 32 位、Windows Vista、Windows 7、Windows 8
- CPU：1 GHz 或更高处理器
- 内存：512 MB 或更高 RAM
- 图形卡：1024 x 768 分辨率，32 位色彩或更高
- 硬盘：500 MB 或更多的可用硬盘空间（根据要存储数据的容量，可

## PC 软件 (LG PC Suite)

能需要更多的可用硬盘空间。)

- 所需软件: LG 集成的驱动程序、Windows Media Player 10 或更高版本

### 备注: LG 集成的 USB 驱动程序

需要使用 LG 集成的 USB 驱动程序连接 LG 设备和 PC, 并且该驱动程序将在安装“LG PC Suite”PC 软件时自动安装。

## 将设备与 PC 同步

为便于您的使用, 可以根据轻松将设备与 PC 中的数据与“LG PC Suite”PC 软件同步。您可同步日程表、联系人和书签。

步骤如下:

- 1 将设备连接到 PC。(使用 USB 数据线或 WLAN 连接。)
- 2 此时出现**选择USB 连接方法**, 选择**媒体设备(MTP)**。
- 3 连接后, 运行程序, 然后从屏幕左侧的类别中选择设备部分。
- 4 单击**同步个人数据**进行选择。
- 5 选择要同步内容的复选框, 然后单击**同步**按钮。

**备注:** 要将手机与 PC 同步, 需要在 PC 上安装 LG PC Suite。请参阅先前页面以安装 LG PC Suite。

## 将旧设备上的联系人移至新设备

- 1 使用 PC 同步程序将联系人作为 CSV 文件从旧设备导出到 PC。
- 2 首先在 PC 上安装“LG PC Suite”。运行程序, 并使用 USB 数据线将您的 Android 手机连接到 PC。
- 3 在顶部菜单上, 选择**手机 > 导入/导出联系人 > 导出至您的手机**。
- 4 此时会出现一个弹出窗口, 可供选择文件类型和要导出的文件。
- 5 在弹出窗口中, 单击**选择**, 此时会出现 Windows Explorer。

- 6 在 Windows Explorer 中选择要导出的联系人文件，然后单击“打开”。
- 7 单击**导出**。
- 8 此时会出现一个**字段映射**弹出窗口，可链接至设备中的联系人和新联系人数据。
- 9 如果 PC 联系人和设备联系人中的数据出现冲突，请在 LG PC Suite 中做出必要选择或修改。
- 10 单击确定。

# 手机软件更新

## 手机软件更新

### 从互联网的 LG 手机软件更新

有关使用此功能的更多信息，请访问 <http://www.lg.com/common/index.jsp> → 选择您的国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中断开 USB 数据线将严重损坏您的手机。

**备注：**LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

### 通过空中下载 (OTA) 的 LG 手机软件更新

此功能可让您通过 OTA 方便地将手机的软件更新为较新的版本。只有当 LG 为您的设备提供了更新的固件版本时，此功能才可用。

首先，您应在手机上检查软件版本：**设置** > **关于手机** > **更新中心** > **软件更新** > **现在检查更新**。

**备注：**手机内存中的您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

**备注：**此功能取决于网络服务提供商、所在区域或国家/地区。

# 关于本用户指南

## 关于本用户指南

- 使用设备之前，请仔细阅读本手册。这将确保您安全而正确地使用手机。
- 本指南中的部分图像和截屏图可能与您的手机有所不同。
- 您的内容可能与最终产品或者服务提供商或运营商提供的软件有所不同。内容如有更改，如不另行通知。如需本手册的最新版本，请访问 LG 网站：[www.lg.com](http://www.lg.com)。
- 您手机的应用程序及其功能可能因国家/地区、区域或硬件规格而有所不同。对于因使用 LG 以外的提供商开发的应用程序出现的任何性能问题，LG 概不负责。
- 对于因编辑已编辑的注册表设置或修改操作系统软件而导致的性能或不兼容问题，LG 概不负责。任何针对操作系统的自定义尝试都可能导致设备或其应用程序无法按预期工作。
- 与您的设备一同提供的软件、音频、墙纸、图像及其它媒体均经过许可，可有限使用。如果您提取和使用这些材料以实现商业或其它目的，可能侵犯版权法。作为用户，您应对非法使用媒体负全部责任。
- 使用信息、上传和下载、自动同步或使用位置服务等数据服务可能需要支付附加费用。要避免附加费用，选择适合您的需要的数据计划。联系您的服务提供商以获得更多详情。

## 商标

- LG 和 LG 徽标是 LG Electronics 的注册商标。
- 所有其他商标和版权是其各自所有者的财产。

## 关于本用户指南



**关于 DIVX 视频：**DivX® 是由 Rovi Corporation 的子公司 DivX, LLC 创建的数字视频格式。这是一个官方的 DivX Certified® 设备，已通过严格的测试确认可播放 DivX 视频。请访问 [divx.com](http://divx.com) 网站获取更多信息以及用于将文件转换为 DivX 视频的软件工具。

**关于 DIVX 视频点播：**本 DivX Certified® 认证设备注册后 才能播放所购买的 DivX 视频点播 (VOD) 电影。要获得注册代码，请在设备设置菜单中找到 DivX VOD 区域。请访问 [vod.divx.com](http://vod.divx.com) 网站，详细了解如何完成注册。

**通过 DivX Certified® 认证可播放 DivX® 视频，最高可达 HD 720p，包括付费内容。**

DivX®、DivX Certified® 和相关徽标是 Rovi Corporation 或其子公司的商标，均为授权使用。



由 Dolby Laboratories 许可生产。Dolby 和 double-D 符号是 Dolby Laboratories 的商标。

### 注意：打开源软件


要获取 GPL、LGPL、MPL 及其他开源证书下的相应源代码，请访问 <http://opensource.lge.com/>

可使用源代码下载所有相关许可条款、声明和通知。

# 配件

以下配件可与手机一起使用。（以下配件为可选配件。）

旅行适配器



立体声耳机



快速入门指南



数据线



Micro-SIM 弹出  
工具



## 备注:

- 务必使用正品 LG 配件。否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

## 故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。


信息	可能原因	可行解决措施
Micro-SIM 卡错误	手机中没有安装 Micro-SIM 卡或 Micro-SIM 卡插入不正确。	请确保正确插入 Micro-SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。
	运营商应用了新服务。	请与服务提供商联系。
密码不匹配	要更改安全码，您需要在此输入以确认新密码。	如果忘记密码，请联系您的服务提供商。
	两次输入的密码不匹配。	
不可设置应用程序	服务提供商不支持或需要注册。	请与服务提供商联系。

信息	可能原因	可行解决措施
无法拨打电话	拨号错误	新网络未获得授权。
	已插入新 Micro-SIM 卡。	查看新的限制。
	达到预付费上限。	与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短。	请按开/关键至少两秒钟。
	电池未充电。	为电池充电。 检查显示屏上的充电指示灯。
充电错误	电池未充电。	为电池充电。
	外部温度太热或太冷。	确保手机在正常温度下充电。
	触点问题	检查充电器及其到手机的连接。
	无电压	将充电器插入其它插座。
	充电器故障	更换充电器。
	错误充电器	请仅使用原装 LG 配件。
号码不受支持	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。

## 故障排除

信息	可能原因	可行解决措施
无法接收/发送短信和照片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查支持的文件类型。
我收到来电时，屏幕未打开。	距离传感器问题	如果您使用保护带或保护套，确保其未盖住近程传感器周围的区域。确保距离传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	尝试通过网站执行软件更新。

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

类别 子类别	问	答
BT 蓝牙 设备	通过蓝牙提供哪些功能？	您可以连接立体声/单声道耳机或车载套件等蓝牙音频设备，通过“图片库”/“联系人”菜单共享图片、视频、联系人等。另外，FTP 服务器连接至兼容设备时，您可以共享存储在存储媒体中的内容。
BT 蓝牙 耳机	如果我的蓝牙耳机已连接，我是否可以通过 3.5 mm 有线耳机听音乐？	当已连接蓝牙耳机时，所有系统声音均在此耳机上播放。因此，您将无法通过有线耳机听音乐。
数据 联系人 备份	如何备份联系人？	联系人数据可以在您的耳机与 Gmail™ 之间同步。
数据 同步	是否可以设置与 Gmail 的单向同步？	只提供双向同步。
数据 同步	是否可以同步所有电子邮件文件夹？	收件箱会自动同步。您可通过点触 <b>菜单键</b>  并选择 <b>文件夹</b> 以选择文件夹，查看其它文件夹。
Google™ 服务 Gmail 登录	我是否需要每次访问 Gmail 时均需要登录 Gmail？	一旦登录 Gmail，您无需再次登录 Gmail。


类别 子类别	问	答
Google™ 服务 Google 帐户	是否可以过滤电子邮件？	否，不支持通过手机过滤电子邮件。
手机功能 电子邮件	在编写电子邮件时如果执行另一应用程序会发生什么情况？	您的电子邮件将自动保存为草稿。
手机功能 铃声	使用 .MP3 文件作为铃声时是否有文件大小限制？	没有文件大小限制。
手机功能 信息时间	我的手机不显示超过 24 小时的信息的接收时间。如何更改？	您只能查看当天收到信息的时间。
手机功能 导航	是否可以在我的手机上安装其他导航应用程序？	在 Android Market™ 上可用并且与硬件兼容的任何应用程序均可安装和使用。
手机功能 同步	是否可以从我的所有电子邮件帐户同步我的联系人？	仅可同步 Gmail 和 MS Exchange 服务器（公司电子邮件服务器）联系人。
手机功能 等待和暂停	是否可以在保存联系人时对号码中使用等待和暂停功能？	如果您传输的联系人的号码使用了等待和暂停功能，则您无法使用这些功能。您需要重新保存每个号码。 如何使用等待和暂停功能进行保存？ 1. 在主屏上点触 <b>手机</b> 图标  。 2. 输入号码，然后点触 <b>菜单键</b>  。 3. 点触 <b>限时暂停或强制暂停</b> 。
手机功能 安全性	手机有什么安全功能？	您可以将手机设为在访问或使用手机前需要输入解锁图案。

类别 子类别	问	答
-----------	---	---

**手机功能**

解锁  
图案

如何创建解锁图案？

1. 在主屏中点触**菜单键** .
2. 点触**系统设置 > 锁定屏幕**。
3. 点触**选择屏幕锁定 > 图案**。第一次这样做时，将显示有关创建解锁图案的简短指南。
4. 通过画出图案一次，然后再画一次确认进行设置。

**使用图案锁定时的预防措施。**

请务必记住您设置的解锁图案。如果有 5 次使用不正确的图案，您将无法访问您的手机。您有 5 次机会输入解锁图案、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。（或者，如果预设了备份 PIN，您可使用备份 PIN 码解锁图案

**手机功能**

解锁  
图案


在忘记解锁图案并且未在手机上创建 Google 帐户时该怎么办？

**如果您忘记图案：**

若要在手机上登录 Google 帐户，但连续 5 次输错图案，请点触“忘记图案”按钮。随后，您需要使用 Google 帐户登录才能将手机解锁。如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行硬重置。

**警告：如果执行恢复出厂设置，将删除所有用户应用程序和用户数据。在执行恢复出厂设置之前，请记得备份任何重要数据。**

类别 子类别	问	答
手机功能 内存	内存已满时我是否会知道?	是, 您将收到通知。
手机功能 语言支持	是否可以更改我的手机的语言?	手机具有多语言功能。 更改语言: 1. 在主屏中点触 <b>菜单键</b>  , 然后点触 <b>系统设置</b> 。 2. 点触 <b>语言和输入设备 &gt; 语言</b> 。 3. 点触所需语言。
手机功能 VPN	如何设置 VPN?	每家公司的 VPN 访问配置有所不同。要从手机配置 VPN 访问, 您必须从公司的网络管理员获得详细信息。
手机功能 屏幕超时	我的屏幕仅 15 秒后便关闭。如何更改关闭背景灯的时间量?	1. 在主屏中按 <b>菜单键</b>  。 2. 点触 <b>系统设置 &gt; 显示屏</b> 。 3. 在显示设置下, 点触 <b>屏幕超时</b> 。 4. 点触 <b>首选屏幕背景灯超时时间</b> 。
手机功能 WLAN 和 3G	在 WLAN 和 3G 均可用时, 我的手机将使用哪个服务?	在使用数据时, 您的手机可默认为 WLAN 连接 (如果手机上的 WLAN 连接设置为“开”)。但是, 在手机从一个服务切换到另一服务时将不发出通知。要知道正在使用哪个数据连接, 请查看屏幕顶部的 3G 或 WLAN 图标。
手机功能 主屏	是否可以删除主屏应用程序?	是。只需点触并按住此图标, 直到屏幕顶部中心出现垃圾桶图标。然后, 在不抬起手指的情况下, 将图标拖到垃圾桶。


类别 子类别	问	答
手机功能 应用程序	我下载了一个应用程序，并且它导致了许多错误。如何删除它？	<ol style="list-style-type: none"> <li>1. 在主屏中按<b>菜单键</b> 。</li> <li>2. 点触<b>系统设置&gt;应用程序 &gt; 已下载</b>。</li> <li>3. 点触应用程序，然后点触<b>卸载</b>。</li> </ol>
手机功能 充电器	是否可以在未安装所需 USB 驱动程序的情况下通过 USB 数据线为手机充电？	可以，无论是否安装了必要的驱动程序，此手机均可以通过 USB 数据线充电。
手机功能 闹钟	我是否可以将音乐文件用作闹钟铃声？	是。在将音乐文件保存为铃声后，您即可将其用作闹钟铃声。
手机功能 闹钟	如果手机关闭，我是否还可听见我的闹钟或者它也将关闭？	否，不支持此功能。
手机功能 闹钟	如果将铃声音量设为“关”或“振动”，是否可以听到闹钟铃声？	闹钟设定为即使在这些情况下也可听到。
<b>恢复解决方案</b> 硬重置（恢复出厂设置）	如果无法访问手机的设置菜单，如何执行恢复出厂设置？	如果手机未恢复到原始条件，请使用硬重置（恢复出厂设置）初始化手机。



ENGLISH

# User Guide

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2013 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Hangouts™ and Play Store™ are trademarks of Google, Inc.

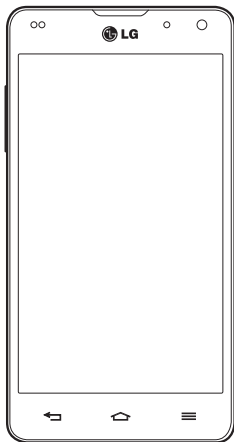

# Table of contents

<b>Guidelines for safe and efficient use</b> .....	<b>5</b>	<b>Calls</b> .....	<b>36</b>
<b>Important notice</b> .....	<b>12</b>	Making a call .....	36
<b>Getting to know your phone</b> .....	<b>18</b>	Calling your contacts .....	36
Phone overview .....	18	Answering and rejecting a call .....	36
Installing the Micro-USIM card .....	20	Adjusting the in-call volume.....	37
Charging the phone .....	21	Making a second call.....	37
Locking and unlocking the screen.....	21	Viewing your call logs .....	37
<b>Your Home screen</b> .....	<b>22</b>	Call settings.....	38
Touch Screen tips .....	22	<b>Contacts</b> .....	<b>39</b>
Home screen .....	23	Searching for a contact.....	39
Customizing the Home screen .....	24	Adding a new contact .....	39
Returning to recently-used applications .....	25	Favorite contacts .....	39
Notifications .....	25	Creating a group.....	40
Opening the notifications panel.....	26	<b>Messaging</b> .....	<b>41</b>
Indicator icons on the Status Bar .....	26	Sending a message .....	41
On-screen keyboard .....	28	Threaded box .....	42
<b>Google account setup</b> .....	<b>29</b>	Changing your message settings .....	42
<b>Connecting to Networks and Devices</b> ....	<b>30</b>	<b>Email</b> .....	<b>43</b>
Wi-Fi .....	30	Managing an email account.....	43
Connecting to Wi-Fi networks .....	30	Working with account folders.....	43
Turning Wi-Fi on and connecting to a Wi-Fi network.....	30	Composing and sending email .....	44
Bluetooth.....	31	<b>Camera</b> .....	<b>45</b>
Sharing your phone's data connection ...	32	Getting to know the viewfinder .....	45
Wi-Fi Direct .....	34	Using the advanced settings .....	46
PC connections with a USB cable.....	34	Taking a quick photo .....	47
		Once you've taken a photo.....	48
		Viewing your saved photos .....	49

<b>Video camera</b> .....	<b>50</b>	Playing videos .....	64
Getting to know the viewfinder .....	50	Editing photos/videos .....	64
Using the advanced settings .....	51	Deleting images .....	64
Recording a quick video .....	51	Setting as wallpaper .....	64
After recording a video .....	52	<b>Videos</b> .....	<b>64</b>
Watching your saved videos .....	52	Playing a video .....	65
Adjusting the volume when viewing a video .....	52	<b>Video Editor</b> .....	<b>66</b>
Live Zooming function .....	53	<b>Video Wiz</b> .....	<b>68</b>
<b>LG Unique Function</b> .....	<b>54</b>	<b>Music</b> .....	<b>69</b>
QuickMemo .....	54	Playing a song .....	69
Using the QuickMemo options .....	55	<b>Utilities</b> .....	<b>72</b>
Viewing the saved QuickMemo .....	55	Setting your alarm .....	72
<b>Notebook</b> .....	<b>56</b>	Using your calculator .....	72
Making a note .....	56	Adding an event to your calendar .....	72
Getting to know the Notebook .....	56	<b>Voice Recorder</b> .....	<b>73</b>
Bookshelf .....	56	Recording a sound or voice .....	73
Pages-Property panels .....	57	Sending the voice recording .....	73
Viewing the saved notebook .....	57	<b>Task Manager</b> .....	<b>74</b>
<b>QuickTranslator</b> .....	<b>58</b>	<b>Tasks</b> .....	<b>74</b>
<b>QSlide apps</b> .....	<b>59</b>	<b>Polaris Office 4</b> .....	<b>74</b>
<b>Dual Play function</b> .....	<b>60</b>	<b>LG Backup</b> .....	<b>75</b>
Mirroring .....	60	About backing up and restoring smart phone data .....	75
Dual Play .....	61	Backup .....	76
<b>LG SmartWorld</b> .....	<b>61</b>	Scheduling backup .....	76
How to Get to LG SmartWorld from Your Phone .....	61	File restore & management .....	76
<b>Multimedia</b> .....	<b>63</b>	<b>Google+</b> .....	<b>77</b>
Gallery .....	63	<b>Voice Search</b> .....	<b>77</b>
Viewing pictures .....	63	<b>Downloads</b> .....	<b>77</b>
		<b>The Web</b> .....	<b>78</b>

# Table of contents

<b>Internet</b> .....	78	<b>Accessories</b> .....	97
Using the Web toolbar .....	78	<b>Troubleshooting</b> .....	98
Viewing webpages .....	78	<b>FAQ</b> .....	102
Opening a page .....	79		
Searching the web by voice .....	79		
Bookmarks .....	79		
History .....	79		
Using Popup Browser .....	79		
<b>Chrome</b> .....	80		
Viewing webpages .....	80		
Opening a page .....	80		
Searching the web by voice .....	80		
Syncing with other devices .....	80		
<b>Settings</b> .....	81		
WIRELESS NETWORKS.....	81		
DEVICE .....	84		
PERSONAL.....	87		
SYSTEM.....	88		
<b>PC software (LG PC Suite)</b> .....	90		
<b>Phone software update</b> .....	93		
Phone software update .....	93		
<b>About this user guide</b> .....	95		
About this user guide.....	95		
Trademarks .....	95		
DivX HD .....	96		
Dolby Mobile.....	96		

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

## Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-E975 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.426 W/kg (10g) and when worn on the body is 0.398 W/Kg (10g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not

## Guidelines for safe and efficient use

contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

## Product care and maintenance



### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot

and create a fire hazard.

- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

## Efficient phone operation

### Electronics devices

All mobile phones may receive interference, which could affect performance.

## Guidelines for safe and efficient use

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0 °C and 40 °C, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

## Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

**NOTE:** Excessive sound pressure from earphones and headphones can cause hearing loss

## Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use your phone at a refueling point.

## Guidelines for safe and efficient use

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

### Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

### Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

### Battery information and care


- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

#### **DECLARATION OF CONFORMITY**

Hereby, **LG Electronics** declares that this **LG-E975** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/support/cedoc/RetrieveProductCeDOC.jsp>

#### **Regulatory and Safety**

Go to **Menu key**  **>"System settings > About phone > Regulatory and Safety"** to get regulatory and safety information

## Important notice


### Please read this before you start using your phone!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

## 1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

### To uninstall applications:

- 1 Touch  > **Apps** tab > **Settings** > **Apps** from the DEVICE.
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.


## 2. Optimizing battery life

Extend your battery's life between charges by turning off features that you don't need to having running constantly in the background. You can monitor how applications and system resources consume battery power.

### Extending your phone's battery life:


- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

### To check the battery power level:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery**.

The battery status (charging or discharging) and battery level (percentage charged) is displayed at the top of the screen.

### To monitor and control how battery power is being used:

- Touch  > **Apps** tab > **Settings** > **About phone** from the SYSTEM > **Battery** > **Battery use**.

Battery usage time is displayed on the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

## 3. Before installing an open source application and OS

### **WARNING**


If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

### **WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Play Store™. If there are improperly installed applications on your phone, the phone may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

## Important notice

### 4. Using an unlock pattern

Set an unlock pattern to secure your phone. Touch  > **Apps** tab > **Settings** > **Lock screen** from DEVICE > **Select screen lock** > **Pattern**. This opens a screen that will guide you through how to draw a screen unlock pattern. You have to create a Backup PIN as a safety measure in case you forget your unlock pattern.

**Caution:** Create a Google account before setting an unlock pattern and remember the Backup PIN you created when creating your pattern lock.



#### WARNING

##### Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

#### When you can't recall your unlock Pattern, PIN, or Password:

##### < If you have forgotten your pattern >

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, press the **Forgot pattern?** button at the bottom of the screen. You are then required to log in with your Google Account or you have to enter the Backup PIN which you entered when creating your Pattern Lock.

If you have not created a Google account on the phone or you forgot Backup PIN, you have to perform a hard reset.

##### < If you have forgotten your PIN or Password >

If you forget your PIN or Password, you will need to perform a hard reset.

**Caution:** If you perform a hard reset, all user applications and user data will be deleted.

**NOTE:** If you have not logged into your Google Account and have forgotten your Unlock Pattern, you will need to enter your Backup PIN.

## 5. Using the hard reset (Factory reset)

If your phone does not restore to its original condition, use a Hard Reset (Factory Reset) to initialize it.

- 1 Turn the power off.
- 2 Press and hold the **Power/Lock key + Volume Down key** on the phone.
- 3 After a few seconds, the phone will show reset to factory setting screen, release all buttons at this time
- 4 Press the **Power/Lock key** three times, your phone will reset to factory Settings. Press any other key to cancel.



### WARNING

If you perform a Hard Reset, all user applications, user data and DRM licenses will be deleted. Please remember to backup any important data before performing a Hard Reset.

**Factory data reset** - Erases all data on the phone, except as follows. In the event of device failure or error, your device may record in an error log information about the device's status at the time of the error event. The information recorded in the error log may include data about application names and usage, cell phone location and number, GPS status, memory usage and other non-personal device status information. This information is stored on your phone, and can only be accessed by LG if the phone is physically returned to LG for repair and service. The error log information is used by LG only to diagnose, repair, and improve LG's products and services.



## 6. Opening and switching applications

Multi-tasking is easy with Android because you can keep more than one application running at the same time. There is no need to quit an application before opening another one. Use and switch between several open applications.


## Important notice

Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

### To stop applications:

- 1 Press and hold the **Home Key** . A list of recently used applications will be displayed.
  - 1 Tap the application you want to access. This does not stop the previous app running in the background on the phone. Make sure to tap **Back Key**  to exit an app after using it.
- To stop applications, tap Task Manager from the recent apps list, then tap Stop or Stop all.
  - To remove an app from the recent apps list, swipe the app preview to the left or right.
  - To clear all apps, tap Clear all.

## 7. Transferring music, photos and videos using Media sync (MTP)

- 1 Touch  > **Apps** tab > **Settings** > **Storage** to check out the storage media.
- 2 Connect the phone to your PC using the USB cable.
- 3 **Select USB connection method** will appear on your phone screen, select the **Media sync (MTP)** option.
- 4 Open the memory folder on your PC. You can view the mass storage content on your PC and transfer the files from PC to Device memory folder or vice versa.

## 8. Hold your phone upright

Hold your cell phone vertically, as you would a regular phone. Your phone has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

When making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

## 9. When the screen freezes


**If the screen freezes or the phone does not respond when you try to operate it:**

Press and hold the **Power/Lock** key for 10 seconds to restart your phone.

If it still does not work, please contact the service center.

# Getting to know your phone

## Phone overview

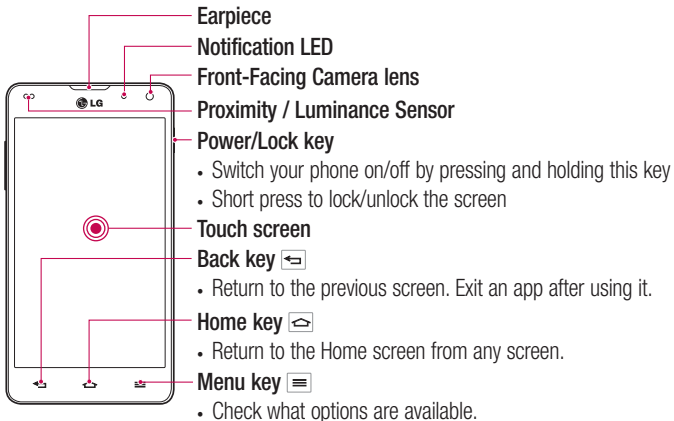

### NOTE: Proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch screen by sensing when the phone is near your ear. This extends battery life and prevents you from unintentionally activating the touch screen during calls.



### WARNING

Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the LCD proximity sensor with protective film. This could cause the sensor to malfunction.

# Getting to know your phone

## Volume keys


- **On the Home screen:** Controls ringer volume
- **During a call:** Controls your earpiece volume
- **When playing a track:** Controls volume continuously

## TIP! QuickMemo function

Press and hold the Volume Up and Volume Down Keys for one second to use the QuickMemo function.

## Power/Lock key

## SIM card tray



## Earphone Jack

## Microphone


## Camera lens Flash

## NFC touch point

## Speaker

## Charger/USB/MHL port

## Microphone

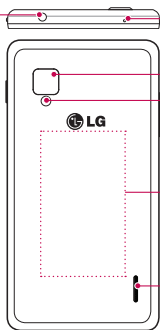

## WARNING

- This part encloses the battery compartment. Please do not open the back cover.
- Be careful not to damage the NFC touch point on the phone, which is part of the NFC antenna.


## Installing the Micro-USIM card

Before you start exploring your new phone, you may choose to insert the Micro-USIM card.

The eject button is a small round aperture just above the tray door. To install a new Micro-USIM card:

- 1 Insert the Micro-USIM ejection tool that comes with the phone (or a thin pin) into the eject button aperture, and push gently but firmly until the tray pops out.
- 2 Remove the tray and place the Micro-USIM card inside it, with the contacts out and the angled corner to the right. There is only one possible way to fit the card snugly into the tray.
- 3 Carefully reposition the tray in the slot and push it gently back into the phone.


**NOTE:** Make sure the gold contact area on the card is facing downwards.

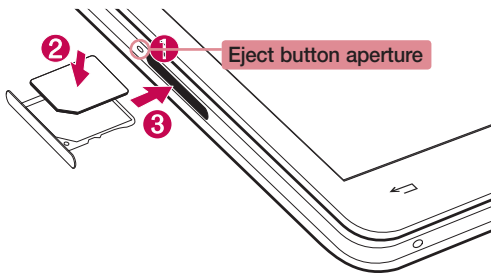

## Getting to know your phone

### Charging the phone

The charger connector is at the bottom of the phone. Insert one end of the charging cable into the phone and plug the other end into an electrical outlet.

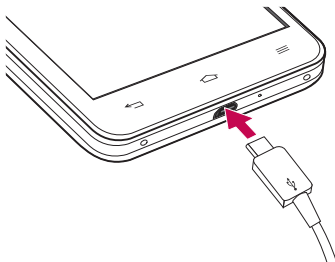


**NOTE:** The battery must be fully charged initially to improve battery lifetime.

### Locking and unlocking the screen

If you do not use the phone for a while, the screen will be automatically turned off and locked. This helps to prevent accidental touches and saves battery power.

When you are not using the your phone, press the **Power/Lock key**  to lock your phone.

If there are any programs running when you lock your screen, they may be still running in Lock mode. It is recommended that you exit all programs before entering Lock mode to avoid unnecessary charges (e.g. phone calls, web access and data communications).

To wake up your phone, press the **Power/Lock key** . The Lock screen will appear. Touch and slide the Lock screen in any direction to unlock your Home screen. The last screen you viewed will open.

# Your Home screen

## Touch Screen tips

Here are some tips on how to navigate on your phone.

**Tap or touch** – A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

**Touch and hold** – Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

**Drag** – Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

**Swipe or slide** – To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

**Double-tap** – Double-tap to zoom on a webpage or a map. For example, quickly double-tap a section of a webpage to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when taking a picture (using the Camera), and when using Maps.

**Pinch-to-Zoom** – Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the browser or Maps, or when browsing pictures.


**Rotate the screen** – From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.


### NOTE:

- To select an item, touch the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

# Your Home screen

## Home screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default canvas and accessible from any menu by tapping  .

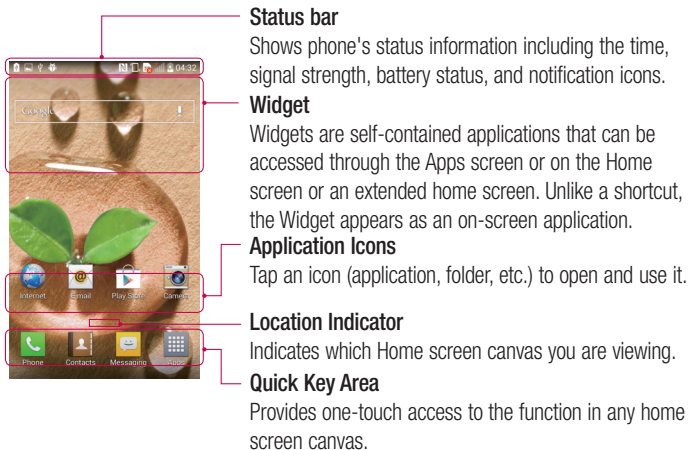

## Extended home screen

The operating system provides multiple Home screen canvases to provide more space for adding icons, widgets, and more.

Slide your finger left or right across the Home screen.

## Customizing the Home screen

You can customize your Home screen by adding apps, widgets or changing wallpapers.

### To add items on your Home screen:

- 1 Touch and hold the empty part of the Home screen.
- 2 In the Add Mode menu, select the item you wish to add. You will then see this added item on the Home screen.
- 3 Drag it to the desired location and lift your finger.

**TIP!** To add an application icon to the Home screen from the Apps menu, touch and hold the application you want to add.


### To remove an item from the Home screen:

- Home screen > touch and hold the icon you want to remove > drag it to .

### **TIP!** Using folders

You can combine several app icons in a folder. Drop one app icon over another one on a Home screen, and the two icons will be combined.

### To customize apps icons on the Home screen

- 1 Touch and hold an application icon until it is unlocked from its current position. Then drop it on the screen.
- 2 The editing icon  will appear in the upper right corner of the application.
- 3 Tap the application icon again and select the desired icon design and size.
- 4 Tap **OK** to save the change.

# Your Home screen

## Returning to recently-used applications

- 1 Touch and hold the **Home key**. The screen displays a pop-up containing the icons of applications you used recently.
- 1 Touch an icon to open the application. Or touch the **Back key** to return to your previous screen.


## Notifications

Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as to ongoing events, such as when you are on a call.

From the notifications panel, you can view your phone's current status and pending notifications.


When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like Wi-Fi or battery strength on the right.

**NOTE:** The available options may vary depending on the region or service provider.

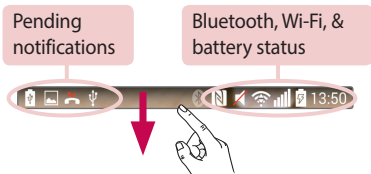


## Opening the notifications panel


Swipe down from the status bar to open the notifications panel.

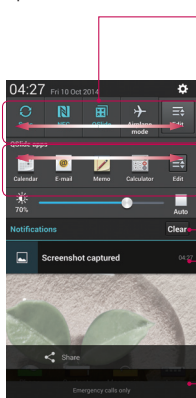

### Quick Toggle Area

Tap each quick toggle key to turn it on/off. Touch and hold the key to access the settings menu of the function. To see more toggle keys, swipe left or right. Tap  to remove, add, or rearrange toggle keys.

### QSlide Apps

Tap a QSlide app to open as a small window on your screen. Tap  to remove, add, or rearrange QSlide apps.

Tap to clear all the notifications.

### Notifications

The current notifications are listed, each with a brief description. Tap a notification to view it.

To close the notifications panel, touch and drag the tab toward the top of the screen.















## Indicator icons on the Status Bar













Indicator icons appear on the status bar at the top of the screen to report missed calls, new messages, calendar events, device status and more.



The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are some of the most common ones.

# Your Home screen

Icon	Description
	No Micro-USIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Missed call
	Bluetooth is on
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Phone is connected to PC via USB cable or USB tethering is active
	NFC is on

Icon	Description
	Vibrate mode
	Battery fully charged
	Battery is charging
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	Data is syncing
	New Gmail
	New Hangouts message
	New message
	Song is playing
	Portable Wi-Fi hotspot is active

**NOTE:** The icons location in the status bar may differ according to the function or service.

## On-screen keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text

 Tap once to capitalize the next letter you type. Double-tap for all caps.

 Tap to switch to the numbers and input language keyboard.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

### Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").

For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays characters from different languages.

Then select the special character you want.


## Google account setup


When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and select how you want to use certain Google services.

### To set up your Google account:

- Sign into a Google Account from the prompted set-up screen.

**OR**

- Touch  > **Apps** tab > select a Google application, such as **Gmail** > select **New** to create a new account.

If you have a Google account, touch **Existing**, enter your email address and password, then touch .

Once you have set up your Google account on your phone, your phone automatically synchronizes with your Google account on the Web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronized with your phone. (This will depend on your synchronization settings.)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

# Connecting to Networks and Devices

## Wi-Fi


With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

### Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or ‘hotspot’. Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them. Turn off Wi-Fi when you’re not using it to extend the life of your battery.

**NOTE:** If you are out of the Wi-Fi zone or have set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

### Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 Touch  > **Apps** tab > **Settings** > **Wi-Fi** from the WIRELESS NETWORKS tab.
- 2 Set **Wi-Fi** to **ON** to turn it on and start scanning for available Wi-Fi networks.
- 3 Tap the Wi-Fi menu again to see a list of active and in-range Wi-Fi networks.
  - Secured networks are indicated by a lock icon.
- 4 Touch a network to connect to it.
  - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 5 The status bar displays icons that indicate Wi-Fi status.

# Connecting to Networks and Devices

## Bluetooth


You can use Bluetooth to send data by running a corresponding application, but not from the Bluetooth menu as on most other mobile phones.

### NOTE:

- LG is not responsible for the loss, interception or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

### Turning on Bluetooth and pairing up your phone with a Bluetooth device

You must pair your device with another device before you connect to it.

- 1 Touch  > **Apps** tab > **Settings** > set **Bluetooth** to **ON** from the WIRELESS & NETWORKS tab.
- 2 Tap the **Bluetooth** menu again. You will see the option to make your phone visible and option to search devices Now tap **Search for devices** to view the devices in the bluetooth Range.
- 3 Choose the device you want to pair with from the list.

Once the pairing is successful, your device will connect to the device.

**NOTE:** Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you will be asked to enter it.

## Send data using the Bluetooth wireless feature


- 1 Select a file or item, such as a contact, calendar event, or media file, from an appropriate application or from **Downloads**.
- 2 Select the option for sending data via Bluetooth.

**NOTE:** The method for selecting an option may vary by data type.

- 3 Search for and pair with a Bluetooth-enabled device.

## Receive data using the Bluetooth wireless feature

- 1 Touch  > **Apps** tab > **Settings** > set **Bluetooth** to ON .
- 2 Tap the **Bluetooth** menu again and mark the checkbox at the top of the screen to make your phone visible to other devices..

**NOTE:** To select the length of time that your device will be visible, touch  > **Visibility timeout**.

- 3 Select **Pair** to confirm that you are willing to receive data from the device.

## Sharing your phone's data connection

USB tethering and portable Wi-Fi hotspot are great features when there are no wireless connections available. You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with more than one device at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

### To change Portable Wi-Fi hotspot settings:

- 1 Touch  > **Apps** tab > **Settings** > **Tethering & networks** > **Wi-Fi hotspot**


# Connecting to Networks and Devices

switch to activate.

**TIP!** If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you will not usually need to prepare your computer for tethering. But, if you are running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

## To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1 Touch  > **Apps** tab > **Settings** > **Tethering & networks** > **Wi-Fi hotspot**.
- 2 Touch **Set up Wi-Fi hotspot**.
  - The **Set up Wi-Fi hotspot** dialogue box will open.
  - You can change the **Wi-Fi name(SSID)** that other computers see when scanning for Wi-Fi networks.
  - You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security using a pre-shared key (PSK).
  - If you touch the **WPA2 PSK** security option, a password field is added to the **Set up Wi-Fi hotspot** dialogue box. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. You can set **Open** in the **Security** menu to remove security from your Wi-Fi network.
- 3 Touch **Save**.

**ATTENTION!** If you set the security option as Open, you cannot prevent unauthorised usage of online services by other people and additional charges may be incurred. To avoid unauthorized usage, you are advised to keep the security option active.


## Wi-Fi Direct

Wi-Fi Direct supports a direct connection between Wi-Fi enabled devices without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature. Check your Wi-Fi & Wi-Fi Directed network in advance and make sure the users are connected to the same network.

## PC connections with a USB cable

Learn to connect your device to a PC with a USB cable in USB connection modes.

### Transferring music, photos and videos using the USB mass storage mode

- 1 Connect your phone to a PC using a USB cable.
- 2 If you haven't installed the LG Android Platform Driver on your PC, you will need to manually change the settings. Choose **Menu key**  > **System settings** > **PC connection** > **Select USB connection method**, then select **Media sync (MTP)**.
- 3 You can now view the mass storage content on your PC and transfer the files.

# Connecting to Networks and Devices

## Synchronize with Windows Media Player

Ensure that Windows Media Player is installed on your PC.





- 1 Use the USB cable to connect the phone to a PC on which Windows Media Player has been installed.
  - 2 Select the **Media sync (MTP)** option. When connected, a pop-up window will appear on the PC.
  - 3 Open Windows Media Player to synchronize music files.
  - 4 Edit or enter your device's name in the pop-up window (if necessary).
  - 5 Select and drag the music files you want to the sync list.
  - 6 Start synchronization.
- The following requirements must be satisfied to synchronize with Windows Media Player.


Items	Requirement
OS	Microsoft Windows XP SP2, Vista or higher
Window Media Player version	Windows Media Player 10 or higher

- If the Windows Media Player version is lower than 10, install version 10 or higher.



# Calls

## Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the .
- 3 Touch  to make a call.
- 4 To end a call, touch the **End** icon .

**TIP!** To enter "+" to make international calls, touch and hold .

## Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first few letters of the contact you want to call by touching **Search contacts**.
- 3 In the list, touch the contact twice or touch the  you want to call.

## Answering and rejecting a call

When you receive a call in Lock state, swipe the  in any direction to Answer the incoming call.

Swipe the  in any direction to Decline an incoming call.

Hold and slide the **Decline with message** icon from the bottom if you want to send a message.






### **TIP! Decline with message**

You can send a message quickly using this function. This is useful if you need to reject a call with message during a meeting.

## Adjusting the in-call volume

To adjust the in-call volume during a call, use the Volume up and down keys on the left-hand side of the phone.

## Making a second call

- 1 During your first call, touch **Menu key** > **Add call** and dial the number. You can also go to the recently dialed numbers list by touching  or can search contacts by touching  and selecting the contact you want to call.
- 2 Touch  to make the call.
- 3 Both calls are displayed on the call screen. Your initial call is locked and put on hold.
- 4 Touch the displayed number to toggle between calls. Or touch  **Merge calls** to start a conference call.
- 5 To end active calls, touch **End** or touch the **Home key** and slide the notification bar down and select the **End call** icon .


**NOTE:** You are charged for each call you make.

## Viewing your call logs

On the Home screen, touch  and choose the **Call logs** tab .



View a complete list of all dialed, received and missed calls.

**TIP!** Touch any call log entry to view the date, time and duration of the call.

**TIP!** Touch the **Menu key** , then touch **Delete all** to delete all the recorded items.

## Call settings

You can configure phone call settings such as call forwarding, as well as other special features offered by your carrier.

- 1 On the Home screen, touch .
- 2 Touch .
- 3 Tap **Call settings** and choose the options that you wish to adjust.

# Contacts




Add contacts to your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

## Searching for a contact

### On the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search contacts** and enter the contact name using the keyboard.


## Adding a new contact

- 1 Touch , enter the new contact's number, then touch the **Menu key** . Touch **Add to Contacts > New contact**.
- 2 If you want to add a picture to the new contact, touch the image area. Choose from **Take photo** or **Select from Gallery**.
- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.

## Favorite contacts



You can classify frequently called contacts as favorites.

### Adding a contact to your favorites



- 1 Touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star will turn yellow color.

# Contacts

## Removing a contact from your favorites list

- 1 Touch  to open your contacts.
- 2 Touch the  tab, and choose a contact to view its details.
- 3 Touch the yellow color star to the right of the contact's name. The star turns grey and the contact is removed from your favorites.

## Creating a group



- 1 Touch  to open your contacts.
- 2 Touch **Groups** and touch the **Menu key** . Select **New group**.
- 3 Enter a name for the new group. You can also set a ringtone for the newly created group.
- 4 Touch **Save** to save the group.

**NOTE:** If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.


# Messaging


Your phone combines SMS and MMS into one intuitive, easy-to-use menu.

## Sending a message


- 1 Touch  on the Home screen and touch  to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts will appear. You can touch a suggested recipient. You can add more than one contact.


**NOTE:** You will be charged for a text message for every person to whom you send the message.

- 3 Touch the '**Enter message**' field and begin composing your message.
- 4 Touch  to open the Options menu. Choose from **Quick messages**, **Insert smiley**, **Schedule sending**, **Add subject**, and **Discard**.

**TIP!** You can touch the  icon to attach the file you want to share to your message.

- 5 Touch **Send** to send your message.
- 6 Responses will appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country, depending on the language and how the SMS is coded.


 **WARNING:** If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

## Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

## Changing your message settings

Your phone message settings are pre-defined, so you can send messages immediately. You can change the settings according to your preferences.

- Touch the **Messaging** icon on the Home screen, touch  and then tap **Settings**.

# Email

You can use the Email application to read emails from services like Gmail. The Email application supports the following account types: POP3, IMAP and Exchange. Your service provider or system administrator can provide you with the account settings you need.

## Managing an email account

The first time you open the **Email** application, a set-up wizard opens to help you to set up an email account.

After the initial set-up, Email displays the contents of your inbox. If you have added more than one account, you can switch among accounts.

### To add another email account:

- Touch  > **Apps** tab > **Email** > touch  > **Settings** > **Add account**.


### To change an email account's settings:

- Touch  > **Apps** tab > **Email** > touch  > **Settings** > **General settings**.

### To delete an email account:

- Touch  > **Apps** tab > **Email** > touch  > **Settings** > touch  > **Remove account** > touch an account you want to delete > **Remove** > select **Yes**.




## Working with account folders

Touch  > **Apps** tab > **Email**, touch  and select **Folders**.

Each account has an Inbox, Outbox, Sent and Drafts folder. Depending on the features supported by your account's service provider, you may have additional folders.

## Composing and sending email

### To compose and send a message

- 1 While in the **Email** application, touch the .
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be proposed from your Contacts. Separate multiple addresses using semicolons.
- 3 Touch the Cc/Bcc field to add a Cc/Bcc and Touch  to attach files, if required.
- 4 Enter the text of the message.
- 5 Touch .


If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send will be stored in your Outbox folder until you connect to a network again. If it contains any pending messages, the Outbox will be displayed on the **Accounts** screen.

**TIP!** When a new email arrives in your Inbox, you will be notified by a sound or vibration. Tap the email notification to stop receiving notifications.

# Camera

To open the Camera application, tap **Camera**  on the Home screen.

## Getting to know the viewfinder

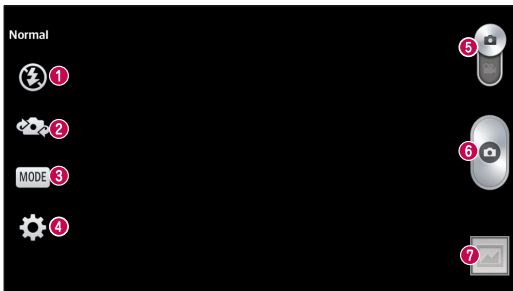












- 1 Flash** – Allows you to turn on the flash when taking a photo in dark conditions.
- 2 Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 Shot mode** – Choose from **Normal**, **Panorama**, **Continuous shot**, **Dynamic tone(HDR)**, **Beauty shot**, **Sports** or **Night**.
- 4 Settings** – Touch this icon to open the settings menu.
- 5 Video mode** – Touch and slide down this icon to switch to video mode.
- 6 Taking a photo**
- 7 Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos while in camera mode.

**NOTE:** Please ensure the camera lens is clean before taking pictures.

## Using the advanced settings

In the viewfinder, tap  to open the advanced options. You can change the camera settings by scrolling through the list. After selecting the option, tap the **Back** key.

	To take a photo, say one of the following words: Cheese, Smile, Whiskey, Kimchi or LG.
	Defines and controls the amount of sunlight entering the photo.
	Tap to select the focus mode.
	Selects photo resolution. If you choose high resolution, file size will increase, which means you will be able to store fewer photos in the memory.
	The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera. This is useful in darker conditions when you cannot use the flash.
	Improves color quality in various lighting conditions.
	Applies artistic effects to your pictures.
	Sets a delay after the capture button is pressed. This is ideal if you want to be in the photo.
	Activate this to use your phone's location-based services. <b>NOTE:</b> This function is available when the GPS function is active or connected network.
	Selects a shutter sound.
	Set the Volume Key whether to use for the capture or zoom.

# Camera



Opens the help guide to know how a function operates.



Restores all camera default settings.

## TIP!





- When you exit the camera, some settings return to their defaults, such as white balance, color effect, timer and scene mode. Check these before you take your next photo.
- The setting menu is superimposed over the viewfinder, so when you change photo color or quality elements, you will see a preview of the changed image behind the Settings menu.

## Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 A focus box will appear in the center of the viewfinder screen. You can also tap anywhere on the screen to focus on that spot.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Touch to capture the photo.

## Once you've taken a photo

Tap the image thumbnail at the bottom of the Camera screen to view the last photo you took.

	Touch to share your photo using the <b>SmartShare</b> function.
	Touch to take another photo immediately.
	Touch to send your photo to others or share it via social network services.
	Touch to delete the photo.

**TIP!** If you have an SNS account and set it up on your phone, you can share your photo with your SNS community.

Touch the **Menu key**  to open all advanced options.

**Set image as** – Touch to use the photo as a **Contact photo**, **Home screen wallpaper**, **Lock screen wallpaper** or **Wallpaper**.

**Move** – Touch to move the photo to another place.

**Copy** – Touch to copy the selected photo and save it to another album.

**Copy to Clip Tray** – Tap to copy the photo and store in the Clip Tray.

**Rename** – Touch to edit the name of the selected photo.

**Rotate left/right** – To rotate left or right.

**Crop** – Crop your photo. Move your finger across the screen to select the area to be cropped.

**Edit** – View and edit the photo.


**Slideshow** – Automatically shows you the images in the current folder one after the other.

# Camera

**Add location** – To add the location information.

**Details** – Find out more information about the contents.


## Viewing your saved photos

You can access your saved photos when in camera mode. Just tap the Gallery icon  and your Gallery will be displayed.

- To view more photos, scroll left or right.
- To zoom in or out, double-tap the screen or place two fingers and spread them apart (move your fingers closer together to zoom out).

# Video camera

## Getting to know the viewfinder

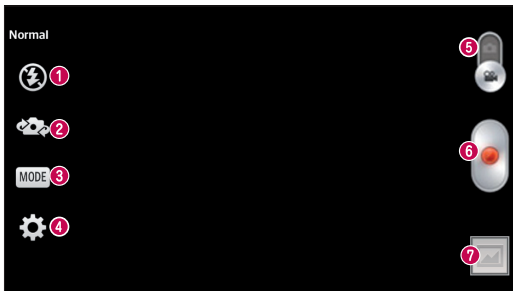

- 1 **Flash** – Tap to turn the flash **On, Off** or **Auto**.
- 2 **Swap camera** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 3 **Recording mode** – Choose from Normal or Live effect.
- 4 **Settings** – Tap this icon to open the settings menu.
- 5 **Camera mode** – Touch and slide up this icon to switch to camera mode.
- 6 **Start recording**
- 7 **Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos while in video mode.









### TIP!

When recording a video, place two fingers on the screen and pinch to use the Zoom function.

# Video camera



## Using the advanced settings

Using the viewfinder, touch  to open all the advanced options.

	Tap to set the size (in pixels) of the video you are recording.
	Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar towards “-” for a lower brightness video or towards “+” for a higher brightness video.
	Improves color quality in various lighting conditions.
	Choose a colour tone to use for your new view.
	Activate this to use your phone's location-based services. <b>NOTE:</b> This function is available when the GPS function is active or connected network.
	Set the Volume Key whether to use for the record or zoom.
	Opens the help guide to know how a function operates.
	Restores all camera default settings.





## Recording a quick video

- 1 Open the **Camera** application and touch the **Video mode** button.
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone, point the lens towards the subject you wish to capture in your video.


- 4 Touch  once to start recording.
- 5 A red light will appear at the top left corner of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

## After recording a video

A still image representing your video will appear on the screen if Auto review is set to On.

	Tap to share video using the SmartShare function.
	Tap to record another video immediately.
	Tap to send your video to others or share it via social network services.
	Tap to delete the video.

## Watching your saved videos

- 1 In the viewfinder, tap .
- 2 Your Gallery will appear on the screen.
- 3 Tap a video to play it automatically.

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.

## Live Zooming function

Live Zooming allows you to zoom in or zoom out on a portion of a video that is being played to make the desired scan appear larger or smaller.

- 1 When viewing the video, use your index finger and thumb in a pinching or spreading motion to zoom in or out.



### NOTE:


- When in video playback mode, slide the screen up or down, the screen brightness (Left side), the Volume (Right side) will be adjusted.
- When in video playback mode, when you slide the screen left or right, the volume will be adjusted.

**NOTE:** Do not press too hard; the touch screen is sensitive enough to pick up a light, but firm touch.


# LG Unique Function

## QuickMemo

Use the **QuickMemo** to practically and efficiently create memos during a call, with a saved picture or on the current phone screen.

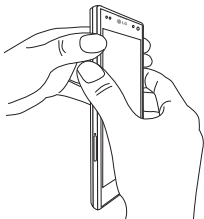


OR



OR


Touch and slide the status bar downward and touch .

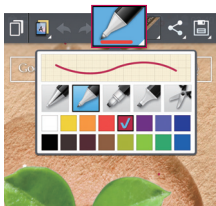

- 1 Enter the QuickMemo function screen by pressing both the Volume up and down keys for one second on the screen you want to capture.

- 2 Select the desired menu option from **Pen type**, **Color**, **Eraser**, and create a memo.










- 3 Touch  in the Edit menu and select it to save the memo with the current screen.

**NOTE:** Please use a fingertip while using the QuickMemo function. Do not use your fingernail.

## Using the QuickMemo options

You can easily use the QuickMenu options when using the QuickMemo function.

	Touch to keep the current memo on the screen and use the phone simultaneously.
	Selects whether to use the background screen or not.
	Undo or Redo.
	Selects the pen type and the colour.
	Erases the memo that you created.
	Touch to send your memo to others or share it via social network services.
	Saves the memo with the current screen in the <b>Gallery/Notebook</b> .

## Viewing the saved QuickMemo


Touch **Gallery/Notebook** and select the QuickMemo album.

# LG Unique Function

## Notebook

With the Notebook application, you can manage and personalize a wide variety of information. Notebook allows you to create your own special notes with drawings, images, maps and stickers.

### Making a note

- 1 Touch  > **Apps** tab > **Notebook**.
- 2 Touch **New note** to create a new note.
- 3 Select the desired mode (**Title**, **Paper**, **Paper color**).
- 4 Create a simple note on an empty page.

### Getting to know the Notebook

Bookshelf



Pages-property panels



### Bookshelf



Search for pages of notes.













Share as Notebook file, a PDF file or Image file via Email/Gmail.



Delete the saved notebook from the Bookshelf.

## Pages-Property panels

	Select the Read-only or edit mode.
	Undo or Redo.
	Tap this button to write.
	Select the Pen type, Thickness, Opacity and Color.
	Erase the memo that you created.
	Touch to attach files to the note.
	Touch to send your note to others or share it via social network services.
	Save the note with the current screen.
	Select to lock or unlock the Front key.
	Tap this button to enlarge the input area.

## Viewing the saved notebook

- Saved Notebook memos are on the Bookshelf.
- If you save memos from QuickMemo, a QuickMemo note will be created and saved on the Bookshelf automatically.


**NOTE:** For more information of the Notebook guide, please see **Notebook > Notebook guide**.

# LG Unique Function


## QuickTranslator

Simply aim the camera of your smart phone at the foreign sentence you want to understand. You can get the real-time translation anywhere and anytime.

You can buy additional dictionaries for offline translation from the Google Play Store.

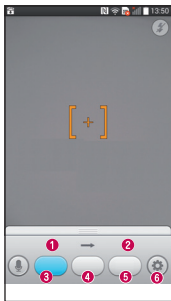

- 1 Home language.
- 2 Destination language
- 3 Translation of word.
- 4 Translation of sentence.
- 5 Translation of block.
- 6 Settings.


- 1 Touch  > **Apps** tab > **QuickTranslator**.
- 2 Touch **Word**, **Line** or **Block**.
- 3 Touch and select the desired language.
- 4 Hold the phone toward the subject you want to translate for a few seconds.

**NOTE:** Only one dictionary is provided free of charge. Additional dictionaries must be purchased. Please select from the list below the dictionary you would like to install as your complimentary dictionary.

**NOTE:** There may be a difference in the rate of recognition depending on the size, font, color, brightness and angle of the letters that need to be translated.

## QSlide apps

The **QSlide apps** enables an overlay on your phone's display for easy multi-window viewing.

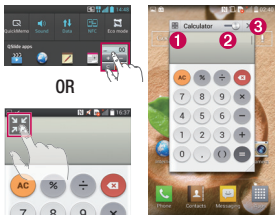

1		Touch to exit the QSlide function and return to full window.
2		Tap to adjust transparency.
3		Tap to end the QSlide function.
4		Tap to adjust the size.

- 1 Touch and slide the status bar downward > touch QSlide apps or when using a function supported by the QSlide function > touch . The function will be continuously displayed as a small window on your screen.
- 2 You can make a call, browse the Web, or choose other phone options. You can also use and tap the screen of the small windows when the transparency bar is not full



**NOTE:** The QSlide function can support up to two windows at the same time.

### TIP!

Touch and slide the notification panel down with your finger.


Touch to manage the "Quick settings" or "QSlide" in the notification panel.

# LG Unique Function

## Dual Play function

You can display different screens on the two displays connected wirelessly or by cable.

- 1 Dual play mode is executed by tapping the Home  key when playing content on the external display.




- 2 You can stop playing the content on the external display using the notification panel.

### IMPORTANT

- Connect your smart phone to a display wirelessly (Miracast) or by cable (MHL cable).
- You can connect an MHL- or Miracast-enabled TV or monitor to your smart phone.
- Some video files may not be supported by the dual play function.
- The Shielded LG MHL cable is recommended.

## Mirroring

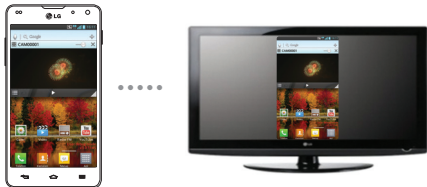

## Dual Play






### NOTE:

- The minimum TV resolution required for dual play is 720p (1280x720)

## LG SmartWorld


LG SmartWorld offers an assortment of exciting content - fonts, themes, games and applications.

### How to Get to LG SmartWorld from Your Phone

- 1 Touch  > **Apps** tab > tap the  icon to access **LG SmartWorld**.
  - 2 Tap  Sign in and enter ID/PW for LG SmartWorld. If you have not signed up yet, tap Register to receive your LG SmartWorld membership.
  - 3 Download the content you want.
- When you use Cellular network, data fee could be charged by data plan that you signed- up with carrier.
  - LG Smartworld may not be available from all carriers or in all countries.

## LG Unique Function

### **NOTE: What if there is no icon?**

- 1 Using a mobile Web browser, access LG SmartWorld ([www.lgworld.com](http://www.lgworld.com)) and select your country.
- 2 Download the LG SmartWorld App.
- 3 Run and install the downloaded file.
- 4 Access LG SmartWorld by tapping the  icon.

### **Special benefit only LG SmartWorld**

- 1 Decorate your own style on your Smartphone, Use Home Theme & keyboard Theme & Font that provided on LG SmartWorld (However this service is available to specific device. please check in LG SmartWorld website whether it is feasible or not whether it is feasible or not).
- 2 Enjoy LG SmartWorld's special service by joining promotion that consistently provided.

# Multimedia

## Gallery

You can store multimedia files in internal memory for easy access to all your multimedia files. Use this application to view multimedia files like pictures and videos.

1 Touch  > **Apps** tab > **Gallery**.

You can manage and share all your image and video files with Gallery.

### NOTE:

- Some file formats are not supported, depending on the software installed on the device.
- Some files may not play properly, depending on how they are encoded.

## Viewing pictures

Launching Gallery displays your available folders. When another application, such as Email, saves a picture, the download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates the Screenshots folder. Select a folder to open it.

Pictures are displayed by creation date in a folder. Select a picture to view it full screen. Scroll left or right to view the next or previous image.

## Zooming in and out

Use one of the following methods to zoom in on an image:

- Double-tap anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

# Multimedia

## Playing videos

Video files show the  icon in the preview. Select a video to watch it and tap . The **Videos** application will launch.

## Editing photos/videos

When viewing a photo/video, tap the **Menu** key  and use the advanced editing options.

- Slideshow: start a slideshow with the images in the current folder.

## Deleting images

Use one of the following methods:

- In a folder, tap  and select photos/videos by ticking, and then tap on **Delete**.
- When viewing a photo/Video, tap .

## Setting as wallpaper

When viewing a photo, touch the **Menu** key  > **Set image as** to set the image as wallpaper or to assign it to a contact.

### NOTE:


- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.







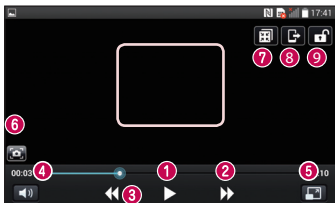


## Videos

Your phone has a built-in video player that lets you play all of your favorite videos. To access the video player, touch  > **Apps** tab > **Videos**.

## Playing a video

- 1 Touch  > **Apps** tab > **Videos**.
- 2 Select the video you want to play.



- |   |  |
|---|--|
|    | 1 Touch to pause/resume video playback.          |
|    | 2 Touch to go 10 seconds forward.                |
|    | 3 Touch to go 10 seconds backward.               |
|    | 4 Touch to manage the video volume.              |
|    | 5 Touch to change the ratio of the video screen. |
|    | 6 Tap to capture image during playing a video.   |
|    | 7 Touch to use QSlide.                           |
|   | 8 Touch to Smart Share.                          |
|  | 9 Touch to lock/unlock a video screen.           |

To change the volume while watching a video, press the up and down volume keys on the left-hand side of the phone.

Touch and hold a video in the list. The **Share**, **Trim**, **Delete** and **Details** options will be displayed.


## Multimedia

### Video Editor

You can edit the photos or videos stored on the phone.

**NOTE:** Video Editing function is supported only for photos or videos which recorded with this phone.

## < Project list screen >

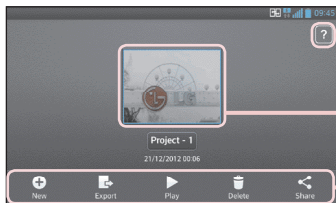

Help

Project list area

Buttons area



Creat project



Projects should be exported to play in applications such as videos



Play project




Delete project



Share project with application such as YouTube

## < Project edit screen >

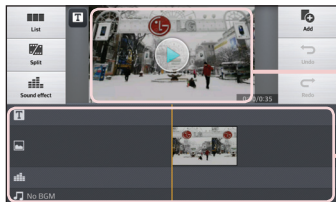







Viewer area

Timeline area



Move to project list screen. Currently edited project is save automatically


# Multimedia



	Split video clip into two portions over the playhead
	Add sound effect
	Add video, image or audio clip
	Undo an action
	Redo an action
	Add text to video or image clip



## Video Wiz

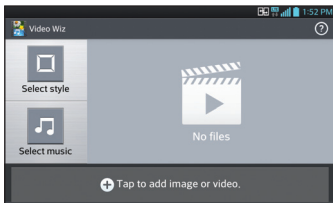




You can make your own movie using your images/video and music.

- 1 Touch  > **Apps** tab > **Video Wiz**.
- 2 After seeing the brief introduction on the steps to follow, tap **OK**.



- 3 Tap  to add images or video to your movie.
- 4 Tap the desired images or videos, then tap .


  - To remove images or videos, tap  and select the desired files > .
  - To rearrange them, touch and hold an image/video, and drag and drop it to the desired position.






- 5 Tap **Select style** to select the desired movie style.
  - Scroll through and select the style you want. As you scroll through the styles, a preview will be displayed.
- 6 Tap **Select music** to set the background music.
- 7 Tap  to play your movie.
- 8 Tap  to edit the video clip using Text, Sticker or Magic Spot.
  - After editing the video, tap .
- 9 Tap  to save the video.
  - Tap  to view the help information on using this feature.

## Music








Your phone has a built-in music player that lets you play all your favorite tracks. To access the music player, touch  > **Apps** tab > **Music**.

### Playing a song

- 1 Touch  > **Apps** tab > **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.

	Tap to pause playback.
	Tap to resume playback.
	Tap to skip to the next track in the album, playlist, or shuffle. Touch and hold to fast forward.
	Tap to restart the current track or skip to the previous track in the album, playlist, or shuffle. Touch and hold to rewind.
	Tap to display the Volume slider bar, then adjust the playback volume on the slider bar.

# Multimedia

	Touch to set Sound Effects.
	Tap to find the files with YouTube.
	Tap to open the current playlist.
	Tap to add the song to your favourites.
	Tap to play the current playlist in shuffle mode (tracks are played in random order).
	Tap to toggle through the repeat modes to repeat all songs, repeat current song, or repeat off.
	SmartShare.

To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.

Touch and hold any song in the list. The **Play**, **Add to playlist**, **Share**, **Set as ringtone**, **Delete**, **Details** and **Search** options will be displayed.

## Add music files to your phone

Start by transferring music files to your phone:

- Transfer music using Media sync (MTP).
- Download from the wireless Web.
- Synchronize your phone to a computer.
- Receive files via Bluetooth.

## Transfer music using Media sync (MTP)

- 1 Connect the phone to your PC using the USB cable.
- 2 Select the Media sync (MTP) option. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the

- 3 When you're finished transferring files, swipe down on the Status Bar and touch USB connected > Charge phone. You may now safely unplug your device.

**NOTE:**

- Some file formats are not supported, depending on the device software.
- If the file size exceeds the available memory, an error can occur when you open files.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws.


Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.




## Utilities

### Setting your alarm



- 1 Touch  > **Apps** tab > **Alarm/Clock** > .
- 2 After you set the alarm, your phone lets you know how much time is left before the alarm will go off.
- 3 Set **Repeat**, **Snooze duration**, **Vibration**, **Alarm sound**, **Alarm volume**, **Auto App Starter**, **Puzzle lock** and **Memo**. Touch **Save**.

**NOTE:** To change alarm settings in the alarm list screen, touch the **Menu** key  and select **Settings**.

### Using your calculator

- 1 Touch  > **Apps** tab > **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want to perform (+, -, x or ÷) followed by =.
- 4 For more complex calculations, tap the **Menu** key  and select **Scientific calculator**, then choose the desired functions.
- 5 To check the history, touch , select **Calculation history**.

### Adding an event to your calendar

- 1 Touch  > **Apps** tab > **Calendar**.
- 2 On the screen, you can find the different view types for the Calendar (Day, Week, Month, Year, Agenda).
- 3 Tap on the date for which you wish to add an event and touch .
- 4 Touch **Event name** and enter the event name.
- 5 Touch **Location** and enter the location. Check the date and enter the time you wish your event to start and finish.





## Utilities


- 6 If you wish to add a note to your event, touch **Description** and enter the details.
- 7 If you wish to repeat the alarm, set **REPEAT** and set **REMINDERS**, if necessary.
- 8 Touch **Save** to save the event in the calendar.

## Voice Recorder


Use the voice recorder to record voice memos or other audio files.

### Recording a sound or voice

- 1 Touch  > the **Apps** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

**NOTE:** Touch  to access your album. You can listen to the saved recording. The available recording time may differ from actual recording time.

### Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching .
- 2 Choose from **Bluetooth, Email, Gmail, Memo or Messaging**. When you select **Messaging**, the voice recording is added to the message. You may then write and send the message as you usually would.

## Task Manager

You can manage your applications using Task Manager. You can easily check the number of applications that are currently running and shut down certain applications. You can also uninstall the applications you have installed on your device.

## Tasks

This task can be synchronized with MS Exchange account. You can create task, revise it and delete it in MS outlook or MS Office Outlook Web Access.

### To Synchronize MS Exchange

- 1 From the Home Screen, Touch  > **Settings**.
- 2 Touch **Accounts & sync** > **Add account**.
- 3 Touch **Microsoft Exchange** to create Email address and Password.
- 4 Make sure if you checkmark Auto-sync data.

## Polaris Office 4

Polaris Office is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere or anytime, using their mobile devices.

Touch  > **Apps** tab > **Polaris Office 4**.

### Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Office, the objects and layout remain the same as in the original documents.

### LG Backup

#### About backing up and restoring smart phone data

It is recommended that you regularly create and save a backup file on the internal storage, especially before updating any software. Maintaining a current backup file in storage memory may allow you to recover smart phone data if your smart phone is lost, stolen, or corrupted by an unforeseen issue.

This Backup application is supported between LG smart phones, other S/W versions or OSs. As a result so, when you buy the new LG smart phone, you can backup the current Your phone data to your new phone.

If you have preloaded **Backup** application on your smart phone, you can backup and restore most of your smart phone data, **Applications** including unprotected applications, their settings, **LG Home screen, Personal data, Media data, LG apps, Settings and Downloaded apps.** using this application You may:


- Perform a manual backup of your smart phone data.
- Schedule automatic backups of your smart phone data.
- Restore your smart phone data.

**NOTE:** Please note that the Backup function does not support the backup of User data & Media data (Picture/Video/Music). Please backup those files using the Media sync (MTP). Connect your phone to your computer using a USB cable and touch Media sync (MTP).

#### **WARNING**

To protect against unexpected shutoff during backup or restore operations, due to insufficient battery power, you should always keep your battery fully charged.

## Backup

- 1 Touch  > **Apps** tab > **LG Backup** > **Backup**.
- 2 Select the check box next to the item you want to backup and tap Next to backup.
- 3 Touch Internal Storage > Start.
- 4 When all selected files have been backed up, you can touch Done to finish the backup.

## Scheduling backup

You can also program automatic backups for the data on your smart phone according to your schedule setting. To do this, complete the following steps:

Touch  > **Apps** tab > **LG Backup** > **Schedule backup**.

## File restore & management

You can set to Backup file restore to desired status.

To restore data that is in your on-board device memory, mass storage mode must be turned off.

Touch  > **Apps** tab > **LG Backup** > **File restore & management** > **Internal Storage**.

### NOTE:

- All files that are stored on your smart phone are deleted before the backup file is restored.
- Please note that your phone data will be overwritten with the content of your backup.
- You can set Enable encryption to encrypt your backup files for extra protection.

## Utilities

### Google+


Use this application to stay connected with people via Google's social network service.

- Touch  > **Apps** tab > **Google +**.

**NOTE:** This application may not be available depending on the region or service provider.

### Voice Search

Use this application to search webpages using voice.

- 1 Touch  > **Apps** tab > **Voice Search**.
- 2 Say a keyword or phrase when **Speak now** appears on the screen. Select one of the suggested keywords that appear.

**NOTE:** This application may not be available depending on the region or service provider.

### Downloads

Use this application to see what files have been downloaded through the applications.

- Touch  > **Apps** tab > **Downloads**.

**NOTE:** This application may not be available depending on the region or service provider.

# The Web

## Internet

Use this application to browse the Internet. Browser gives you a fast, full-color world of games, music, news, sports, entertainment and much more, right on your mobile phone wherever you are and whatever you enjoy.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

1 Touch  > **Apps** tab > **Internet**.

## Using the Web toolbar

Touch and hold the Web toolbar and slide it upwards with your finger to open.



Touch to go back one page.



Touch to go forward one page, to the page you connected to after the current one. This is the opposite of what happens when you touch the **Back** key, which takes you to the previous page.



Touch to go to the Home page.



Touch to add a new window.




Touch to access bookmarks.

## Viewing webpages

Tap the address field, enter the web address and tap **Go**.

## Opening a page

To go to new page, tap  → 

To go to another webpage, tap , scroll up or down, and tap the page to select it.

## Searching the web by voice

Tap the address field, tap , speak a keyword, and then select one of the suggested keywords that appear.

**NOTE:** This feature may not be available depending on the region or service provider.

## Bookmarks

To bookmark the current webpage, touch  > Add to bookmarks > OK.

To open a bookmarked webpage, tap  and select one.

## History

Tap  > **History** to open a webpage from the list of recently-visited webpages. To clear the history, tap Menu  → **Clear all history**.

## Using Popup Browser

Use this feature to access the Internet without closing the current application.

While viewing content, such as contacts or notes that include web addresses, select a web address, and then tap Popup Browser to open the pop-up browser. Tap and drag the browser to move it to another location.

To view the browser in full screen, tap .

To close the browser, tap .

# The Web

## Chrome

Use Chrome to search for information and browse webpages.

1 Touch  > **Apps** tab > **Chrome**.


**NOTE:** This application may not be available, depending on your region and service provider.

## Viewing webpages


Tap the Address field, and then enter a web address or search criteria.

## Opening a page

To go to a new page, tap  → + **New tab**.


To go to another webpage, tap , scroll up or down and tap the page to select it.

## Searching the web by voice

Tap the address field, tap , speak a keyword and select one of the suggested keywords that appear.

## Syncing with other devices

Sync open tabs and bookmarks to use with Chrome on another device when you are logged in with the same Google account.

To view open tabs on other devices, tap **Menu**  → **Other devices**.


Select a webpage to open.

To view bookmarks, tap **Menu**  → .

# Settings

This section provides an overview of items you can change using your phone's System settings menus.

## To access the Settings menu:

- 1 On the Home screen, touch  > **Apps** tab > **Settings**.  
or  
On the Home screen, touch  > **System settings**.
- 2 Select a setting category and select an option.

## WIRELESS NETWORKS


Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

### < Wi-Fi >

**Wi-Fi** – Turns on Wi-Fi to connect to available Wi-Fi networks.

#### **TIP! How to obtain the MAC address**

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your phone in the router.

You can find the MAC address in the following user interface: touch **Apps** tab > **Settings** > **Wi-Fi** >  > **Advanced Wi-Fi** > **MAC address**.

### < Bluetooth >

Turn the Bluetooth wireless feature on or off to use Bluetooth.

### < Mobile data >

Displays the data usage and set mobile data usage limit.

### < Call >

Configure phone call settings such as call forwarding and other special features offered by your carrier.

**Voice mail** – Allows you to select your carrier's voicemail service.

## Settings

**Fixed dialing numbers** – Turn on and compile a list of numbers that can be called from your phone. You'll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

**Incoming voice call pop-up** – Display incoming voice call pop-up when an app is in use.

**Call reject** – Allows you to set the call reject function. Choose from **Call reject mode** or **Rejection calls from**.

**Decline with message** – When you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

**Privacy keeper** – Hides the caller name and number for an incoming call.

**Call forwarding** – Choose whether to divert all calls when the line is busy, when there is no answer or when you have no signal.

**Auto answer** – Set the time before a connected hands-free device automatically answers an incoming call. Choose from Disable, 1 second, 3 seconds, and 5 seconds.

**Connection vibration** – Vibrates your phone when the other party answers the call.

**Save unknown numbers** – Add unknown numbers to contacts after a call.

**Power key ends call** – Allows you to select your end call.

**Call barring** – Lock incoming, outgoing or international calls.

**Call duration** – View the duration of calls including Last call, All calls, Dialed calls and Received calls.

**Additional call settings** – Allows you to change the following settings:

**Caller ID:** Choose whether to display your number in an outgoing call.

**Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on a call (depending on your network provider).

### <Share & Connect>

**NFC** – Your phone is an NFC-enabled mobile phone. NFC (Near Field Communication) is a wireless connectivity technology that enables two-way communication between electronic devices. It operates over a distance of a few centimeters. You can share your

content with an NFC tag or another NFC support device by simply touching it with your device. If you touch an NFC tag with your device, it will display the tag content on your device.

**To switch NFC on or off:** From the Home screen, touch and slide the notification panel down with your finger, then select the NFC icon to turn it on.

**NOTE:** When airplane mode is activated, the NFC application can be used.

**Using NFC:** To use NFC, make sure your device is switched on, and activate NFC if disabled.

**Android Beam** – When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

Just bring the device together (typically back to back) and then touch your screen. The app determines what gets beamed.

**SmartShare Beam** – Enable to receive files from LG phones.

**Media server** – Share media content on your phone with nearby device via DLNA.

**Miracast** – With Miracast, you can wirelessly mirror your phone screen and sound onto a Miracast dongle or TV.

### < Tethering & networks >

**Wi-Fi hotspot** – You can also use your phone to provide a mobile broadband connection. Create a hotspot and share your connection. Please read "Sharing your phone's data connection" for more information.

**Bluetooth tethering** – Allows you to set your phone whether you are sharing the Internet connection or not.

**Help** – Tap to view help information on the Wi-Fi hotspot and Bluetooth tethering functions.

**Airplane mode** – After switching to Airplane mode, all wireless connections are disabled.

**Mobile networks** – Set options for data roaming, network mode & operators, access

## Settings

point names (APNs) etc.

**Default message app** – Allows you to set the default SMS app.

**VPN** – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

## DEVICE

### < Sound >

**Sound profile** – Choose the Sound, either Vibrate only or Silent.

**Volumes** – Manage the volume of Phone ringtone, Notification sound, Touch feedback & system, Music, video, games and other media.

**Quiet time** – Set times to turn off all sounds except alarm and media.

**Phone ringtone** – Allows you to set your default incoming call ringtone.

**Smart ringtone** – Allows you to set increase phone ringtone volume automatically in noisy environments.

**Ringtone with vibration** – Vibration feedback for calls and notifications.

**Notification sound** – Allows you to set your default notification ringtone.

**Touch feedback & system** – Allows you to set the feedback (tones and/or vibration) while using your device.

### < Display >

**Brightness** – Adjust the screen brightness.

**Screen timeout** – Set the time for screen timeout.

**Auto-rotate screen** – Set to switch orientation automatically when you rotate the phone.

**Daydream** – Tap the Daydream switch to toggle it On or Off. On allows the set 92 screensaver to be displayed when the phone is sleeping while docked and/or charging.

**Font type** – Change the type of display font.

**Font size** – Change the size of the display font.

**Smart screen** – Checkmark to allow the screen to stay on when phone detects your face.

**Front key light** – Set the front key light duration.

**Notification flash** – The Notification LED is located to the left of the front camera. You can see the small LED light on when the phone is charging or when you receive a notification if LCD screen turns off. You can configure the **Notification flash** to turn on/off. You can set the various options from the list of notification flash items.

< **Home screen** >

Set the **Theme, Wallpaper, Screen swipe effect** or **Protrait view only**. Select the option to set **Home backup & restore**.

< **Lock screen** >

**Select screen lock** – Set a screen lock type to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. Set **None, Swipe, Face Unlock, Pattern, PIN** or **Password**.

If you have enabled a Pattern lock type when you turn on your phone or wake up the screen, you will be asked to draw your unlock pattern to unlock the screen.

< **Gestures** >

**Silence incoming calls** – Flip the device to mute incoming calls.

**Snooze or stop alarm** – Flip the device to snooze or stop alarm.

**Pause video** – Flip the device to pause playing video.

**Help** – Help for gesture functions.

**Motion sensor calibration** – Allows you to improve the accuracy of the tilt and speed of the sensor.

< **Storage** >

**INTERNAL STORAGE** – View the internal storage usage.

# Settings

## < Battery >

### **BATTERY INFORMATION**

The Battery charge information is displayed on a battery graphic along with the percentage of the remaining charge and its status.

Touch the Battery charge icon to display the Battery use screen to see battery usage level and battery use details. It displays which components and applications are using the most battery power. Tap one of the entries to see more detailed information.

**Battery percentage on status bar** – Checkmark to display the battery level percentage on the Status Bar next to the battery icon.

### **BATTERY SAVER**

Tap the Battery saver switch to toggle it On or Off. Tap Battery saver to access the following settings:

**Battery saver** – Sets the battery charge percent level that will automatically turn on Battery saver.

**Eco mode** – Set the Eco mode to extend battery life by dynamically optimizing the CPU control policy.

**Help** – Tap to view help information on the battery saver tips.

## < Apps >

View and manage your applications.

## <Tap & pay>

When NFC is turned on, you can use the tap & pay feature to pay for items just by touching your phone to a reader at a register. If your device doesn't have a default app, you can browse Google Play for other payment apps.

## PERSONAL

### < Accounts & sync >

Permits applications to synchronize data in the background, whether or not you are actively working in them. Deselecting this setting can save battery power and lower (but not eliminate) data usage.

### < Cloud >

Add a cloud account to quickly and easily use cloud service on LG apps.

### < Location >

Turn on location service, your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

**Mode** – Set the location mode from High accuracy, Battery saving and Device sensors only.

### < Security >

**Encrypt phone** – Allows you to encrypt data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

**Set up SIM card lock** – Set up Micro-USIM card lock or change the Micro-USIM card PIN.

**Password typing visible** – Show the last character of the hidden password as you type.

**Phone administrators** – View or deactivate phone administrators.

**Unknown sources** – Default setting to install non-market applications.

**Verify apps** – Disallow or warn before installation of apps that may cause harm.

**Notification access** – Display the notifications.

**Storage type** – Display the storage type.

**Trusted credentials** – Display trusted CA certificates.

## Settings

**Install from storage** – Choose to install encrypted certificates.

**Clear credentials** – Remove all certificates.

< **Language & input** >

Use the Language & input settings to select the language for the text on your phone and to configure the on-screen keyboard, including words you've added to its dictionary.

< **Backup & reset** >

Change the settings for managing your settings and data.

**Back up my data** – Set to backup your settings and application data to the Google server.

**Backup account** – Set to backup your account.

**Automatic restore** – Set to restore your settings and application data when the applications are reinstalled on your device.

**LG Backup service** – Backs up all information on the device and restores it in the event of data loss or replacement.

**Factory data reset** – Reset your settings to the factory default values and delete all your data. If you reset the phone this way, you are prompted to re-enter the same information as when you first started Android.

## SYSTEM

< **Date & time** >

Use **Date & time** settings to set how dates will be displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

< **Accessibility** >

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

**NOTE:** Requires additional plug-ins to become selectable.

## < PC connection >

**Select USB connection method** – Set the desired mode: **Charge only**, **Media sync (MTP)**, **Tethering**, **LG software** or **Send images (PTP)**.

**Ask on connection** – Ask in USB connection mode when connecting to a computer.

**Help** – Help for USB connection.

**PC Suite** – Checkmark this to use LG PC Suite with your Wi-Fi connection.

Please note that Wi-Fi network should be connected to LG PC Suite via a Wi-Fi connection through WIRELESS & NETWORKS.

**Help** – Help for LG software.

## <Printing>

Allows you to print the content of certain screens (such as web pages displayed in Chrome) to a printer connected to the same Wi-Fi network as your Android device.

## < About phone >

View legal information and check your phone status and software version.

## PC software (LG PC Suite)

"LG PC Suite" PC software is a program that helps you connect your device to a PC via a USB cable and Wi-Fi. Once connected, you can use the functions of your device from your PC.

### With your "LG PC Suite" PC Software, You Can...

- Manage and play your media contents (music, movie, picture) on your PC.
- Send multimedia contents to your device.
- Synchronizes data (schedules, contacts, bookmarks) in your device and PC.
- Backup the applications in your device.
- Update the softwares in your device.
- Backup and restore the device data.
- Play multimedia contents of your PC from your device.
- Backup and create and edit the memos in your device

**NOTE:** You can use the Help menu from the application to find out how to use your "LG PC Suite" PC software.

### Installing "LG PC Suite" PC Software

"LG PC Suite" PC software can be downloaded from the webpage of LG.

- 1 Go to [www.lg.com](http://www.lg.com) and select a country of your choice.
- 2 Go to **Support > MOBILE SUPPORT > Mobile Phones > Select the Model** or Go to **Support > Mobile > Select the Model**.
- 3 Click **PC SYNC** from **DOWNLOAD** and click **DOWNLOAD** to download "LG PC Suite" PC software.

## System Requirements for "LG PC Suite" PC software

- OS: Windows XP (Service pack 3) 32bit, Windows Vista, Windows 7, Windows 8
- CPU: 1 GHz or higher processors
- Memory: 512 MB or higher RAMs
- Graphic card: 1024 x 768 resolution, 32 bit color or higher
- HDD: 500 MB or more free hard disk space (More free hard disk space may be needed depending on the volume of data stored.)
- Required software: LG integrated drivers, Windows Media Player 10 or later

### NOTE: LG Integrated USB Driver

LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install "LG PC Suite" PC software application.

## Synchronizing your Device to a PC

Data from your device and PC can be synchronized easily with "LG PC Suite" PC software for your convenience. Contacts, schedules and bookmarks can be synchronized.

The procedure is as follows:

- 1 Connect your device to PC. (Use a USB cable or Wi-Fi connection.)
- 2 The **Select USB connection method** will appear, then select **LG software**.
- 3 After connection, run the program and select the device section from the category on the left side of the screen.
- 4 Click **Synchronize personal data** to select.
- 5 Select the checkbox of contents to synchronize and click the **Sync** button.

**NOTE:** To synchronize your phone with your PC, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

## Moving contacts from your Old Device to your New Device

- 1 Export your contacts as a CSV file from your old device to your PC using a PC sync program.
- 2 Install "LG PC Suite" on the PC first. Run the program and connect your Android mobile phone to the PC using a USB cable.
- 3 On the top menu, select **phone > Import/Export contacts > Export to your phone**.
- 4 A popup window to select the file type and a file to export will appear.
- 5 On the popup, click the **Select** a file and Windows Explorer will appear.
- 6 Select the contacts file to export in Windows Explorer and click the Open.
- 7 Click **Export**.
- 8 A **Field mapping** popup to link the contacts in your device and new contacts data will appear.
- 9 If there is a conflict between the data in your PC contacts and device contacts, make the necessary selections or modifications in LG PC Suite.
- 10 Click **OK**.

# Phone software update

## Phone software update

### LG Mobile phone software update from the Internet

For more information about using this function, please visit <http://www.lg.com/common/index.jsp> → select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device. Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable during the upgrade may seriously damage your mobile phone.

**NOTE:** LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

### LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting using a USB data cable. This feature will only be available if and when LG makes a newer firmware version available for your device. You should first check the software version on your mobile phone: **Settings > About phone > Update Center > Software Update > Check now for update.**

**NOTE:** Your personal data from internal phone storage—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

**NOTE:** This feature depends on your network service provider, region and country.

# About this user guide

## About this user guide

- Before using your device, please carefully read this manual. This will ensure that you use your phone safely and correctly.
- Some of the images and screenshots provided in this guide may appear differently on your phone.
- Your content may differ from the final product, or from software supplied by service providers or carriers, This content may be subject to change without prior notice. For the latest version of this manual, please visit the LG website at [www.lg.com](http://www.lg.com).
- Your phone's applications and their functions may vary by country, region, or hardware specifications. LG cannot be held liable for any performance issues resulting from the use of applications developed by providers other than LG.
- LG cannot be held liable for performance or incompatibility issues resulting from edited registry settings being edited or operating system software being modified. Any attempt to customize your operating system may cause the device or its applications to not work as they should.
- Software, audio, wallpaper, images, and other media supplied with your device are licensed for limited use. If you extract and use these materials for commercial or other purposes is, you may be infringing copyright laws. As a user, you are fully are entirely responsible for the illegal use of media.
- Additional charges may be applied for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select a data plan to is suitable for your needs. Contact your service provider to obtain additional details.

## Trademarks

- LG and the LG logo are registered trademarks of LG Electronics.
- All other trademarks and copyrights are the property of their respective owners.



**ABOUT DIVX VIDEO:** DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

**DivX Certified® to play DivX® video up to HD 720p, including premium content.** DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



**Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.**


#### **Notice: Open Source Software**

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>  
All referred licence terms, disclaimers and notices are available for download with the source code.

## Accessories

These accessories are available for use with the your phone. (Items described below may be optional.)

Travel adaptor




Stereo headset



Quick Start Guide



Data cable



Micro-USIM  
ejection tool



### NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

# Troubleshooting

This chapter lists some problems you might encounter when using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
Micro-USIM error	There is no Micro-USIM card in the phone or it is inserted incorrectly.	Make sure that the Micro-USIM card is correctly inserted.
No network connection/ Dropped network	Signal is weak or you are outside the carrier network.	Move toward a window or into an open area. Check the network operator coverage map.
	Operator applied new services.	Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it.	If you forget the code, contact your service provider.
	The two codes you have entered do not match.	

## Troubleshooting

Message	Possible causes	Possible corrective measures
No applications can be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error	New network not authorized.
	New Micro-USIM card inserted.	Check for new restrictions.
	Pre-paid charge limit reached.	Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly.	Press the On/Off key for at least two seconds.
	Battery is not charged.	Charge battery. Check the charging indicator on the display.

Message	Possible causes	Possible corrective measures
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold.	Make sure phone is charging at a normal temperature.
	Contact problem	Check the charger and its connection to the phone.
	No voltage	Plug the charger into a different socket.
	Charger defective	Replace the charger.
	Wrong charger	Use only original LG accessories.
Number not allowed	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & photos	Memory full	Delete some messages from your phone.
Files do not open	Unsupported file format	Check the supported file formats.


## Troubleshooting



Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use a protection tape or case, make sure it has not covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status in the sound menu to make sure you are not in vibration or silent mode.
Hangs up or freezes	Intermittent software problem	Try to perform a software update via the website.


## FAQ


Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.


Category Sub- Category	Question	Answer
<b>BT</b> Bluetooth Devices	What are the functions available via Bluetooth?	You can connect a Bluetooth audio device such as a Stereo/Mono headset or Car Kit to share pictures, videos, contacts, etc. via Gallery/Contacts menu. Also, when the FTP server is connected to a compatible device, you can share content stored on the storage media.
<b>BT</b> Bluetooth Headset	If my Bluetooth headset is connected, can I listen to my music through my 3.5 mm wired headphones?	When a Bluetooth headset is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
<b>Data</b> Contacts Backup	How can I backup Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
<b>Data</b> Synchronization	Is it possible to set up one-way sync with Gmail?	Only two-way synchronization is available.


Category Sub- Category	Question	Answer
<b>Data</b> Synchronization	Is it possible to synchronize all email folders?	The Inbox is automatically synchronized. You can view other folders by Touching the <b>Menu Key</b>  and select <b>Folders</b> to choose a folder.
<b>Google™ Service</b> Gmail Log-In	Do I have to log into Gmail whenever I want to access Gmail?	Once you have logged into Gmail, you will not need to log into Gmail again.
<b>Google™ Service</b> Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
<b>Phone Function</b> Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
<b>Phone Function</b> Ringtone	Is there a file size limitation for when I want to use an MP3 file as a ring tone?	There is no file size limitation.
<b>Phone Function</b> Message Time	My phone does not display the time of receipt for messages older than 24 hrs. How can I change this?	You will only be able to see the times for messages received the same day.

Category Sub- Category	Question	Answer
<b>Phone Function</b> Navigation	Is it possible to install another navigation application on my phone?	Any application that is available at Android Market™ and is compatible with the hardware can be installed and used.
<b>Phone Function</b> Synchronisation	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (company email server) contacts can be synchronized.
<b>Phone Function</b> Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	<p>If you transferred a contact with the W &amp; P functions saved into the number, you will not be able to use those features. You will need to re-save each number.</p> <p>How to save with Wait and Pause:</p> <ol style="list-style-type: none"> <li>1. From the Home screen, touch the <b>Phone icon</b> .</li> <li>2. Dial the number, then touch the <b>Menu Key</b> .</li> <li>3. Touch <b>Add 2-sec pause</b> or <b>Add wait</b>.</li> </ol>
<b>Phone Function</b> Security	What are the phone's security functions?	You are able to set the phone to require that an Unlock Pattern be entered before the phone can be accessed or used.

Category Sub- Category	Question	Answer
Phone Function Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> <li>1. From the Home screen, touch the <b>Menu Key</b> .</li> <li>2. Touch <b>System settings &gt; Lock screen</b>.</li> <li>3. Touch <b>Select screen lock &gt; Pattern</b>. The first time you do this, a short tutorial about creating an Unlock Pattern will appear.</li> <li>4. Set up by drawing your pattern once, and once again for confirmation.</li> </ol> <p>Precautions to take when using the pattern lock.</p> <p>It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern five times. You have five chances to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds. (Or, if you preset the backup PIN, you can use the backup PIN code to unlock the pattern.)</p>

Category Sub- Category	Question	Answer
<b>Phone Function</b> Unlock Pattern	What should I do if I forget the unlock pattern and I didn't create my Google account on the phone?	If you have forgotten your pattern: If you logged into your Google account on the phone but failed to enter the correct pattern 5 times, touch the forgot pattern button. You are then required to log in with your Google account to unlock your phone. If you have not created a Google account on the phone or you have forgotten it, you will have to perform a hard reset. Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a factory reset.
<b>Phone Function</b> Memory	Will I know when my memory is full?	Yes, you will receive a notification.
<b>Phone Function</b> Language Support	Is it possible to change my phone's language?	The phone has multilingual capabilities. To change the language: 1. From the Home screen, touch the <b>Menu Key</b>  and touch <b>System settings</b> . 2. Touch <b>Language &amp; input &gt; Language</b> . 3. Touch the desired language.

Category Sub- Category	Question	Answer
Phone Function VPN	How do I set up a VPN?	VPN access configuration is different for each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> <li>1. From the Home screen, press the <b>Menu Key</b> .</li> <li>2. Touch <b>System settings &gt; Display</b>.</li> <li>3. Under Display settings, touch <b>Screen timeout</b>.</li> <li>4. Touch the preferred screen backlight timeout time.</li> </ol>
Phone Function Wi-Fi & 3G	When Wi-Fi and 3G are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, view the 3G or Wi-Fi icon at the top of your screen.</p>
Phone Function Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the dustbin icon appears at the top and center of the screen. Then, without lifting your finger, drag the icon to the trash can.

Category Sub- Category	Question	Answer
Phone Function Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> <li>1. From the Home screen, press the <b>Menu Key</b> .</li> <li>2. Touch <b>System Settings &gt; Apps &gt; DOWNLOADED</b>.</li> <li>3. Touch the application, then touch <b>Uninstall</b>.</li> </ol>
Phone Function Charger	Is it possible to charge my phone using a USB data cable without installing the necessary USB driver?	Yes, the phone will be charged by the USB cable regardless of whether the necessary drivers are installed or not.
Phone Function Alarm	Can I use music files for my alarm?	Yes. After saving a music file as a ringtone, you can use it as your alarm.
Phone Function Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function Alarm	If my ringer volume is set to Off or Vibrate, will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Recovery Solution Hard Reset (Factory Reset)	How can I perform a factory reset if I can't access the phone's setting menu?	If your phone does not restore to its original condition, use a hard reset (factory reset) to initialize it.





CE0168ⓘ